



## **System Message Guide for Cisco IOS XE Dublin 17.13.x**

[System Message Guide for Cisco IOS XE Dublin 17.13.x](#) 2

[Cisco System Messages Overview](#) 2

[How To Read System Error Messages](#) 2

[Error Message Traceback Reports](#) 4

[System and Error Messages in Cisco IOS XE Dublin 17.13.x](#) 4

[Additional References](#) **5133**

[Full Cisco Trademarks with Software License](#) ?

Revised: May 12, 2024,

# System Message Guide for Cisco IOS XE Dublin 17.13.x

## Cisco System Messages Overview

This document describes system messages for Cisco software releases. During operation, the system software sends these messages to the console (and, optionally, to a logging server on another system) during operation. Not all system messages indicate problems with your system. Some are purely informational, and others may help diagnose problems with communications lines, internal hardware, or the system software.

## How To Read System Error Messages

System error messages begin with a percent sign (%) and are structured as follows: %FACILITY-SUBFACILITY-SEVERITY-MNEMONIC: Message-text

- FACILITY is a code consisting of two or more uppercase letters that indicate the facility to which the message refers. A facility can be a hardware device, a protocol, or a module of the system software.
- SEVERITY is a single-digit code from 0 to 7 that reflects the severity of the condition. The lower the number, the more serious the situation. [Error Message Severity Levels](#) lists the severity levels.
- MNEMONIC is a code that uniquely identifies the error message.
- Message-text is a text string describing the condition. This portion of the message sometimes contains detailed information about the event, including terminal port numbers, network addresses, or addresses that correspond to locations in the system memory address space. Because the information in these variable fields changes from message to message, it is represented here by short strings enclosed in square brackets ([ ]). A decimal number, for example, is represented as [dec]. [Representation of Variable Fields in Error Messages](#) lists the representations of variable fields and the type of information in them.

The following is a sample system error message:

```
%LINK-2-BADVCALL: Interface [chars], undefined entry point
```

Some error messages also indicate the card and slot reporting the error. These error messages begin with a percent sign (%) and are structured as follows:

```
%CARD-SEVERITY-MSG: SLOT %FACILITY-SEVERITY-MNEMONIC: Message-text
```

- CARD is a code that describes the type of card reporting the error. VIP and FEIP are possible card types.
- MSG is a mnemonic that indicates that this is a message. It is always shown as MSG.
- SLOT indicates the slot number of the card reporting the error. It is shown as SLOT followed by a number (for example, SLOT5).

The prepended portion of the error message (%CARD-SEVERITY-MSG: SLOT) is not shown in the error message listings in this document.

## Error Message Severity Levels

Error message severity levels correspond to the keywords assigned by the **logging** global configuration commands that define where and at what level these messages appear. The default is to log messages to the console at the debugging level (7). For more information, see the system configuration chapter and descriptions of the **logging** command in the configuration guide and command reference.

Level	Description
0 - emergency	System unusable
1 - alert	Immediate action needed
2 - critical	Critical condition
3 - error	Error condition
4 - warning	Warning condition
5 - notification	Normal, but significant, condition
6 - informational	Informational message only
7 - debugging	Appears during debugging only

## Representation of Variable Fields in Error Messages

Representation	Type of Information
[atalk_address]	AppleTalk address
[atalk_net]	AppleTalk network, either 600 or 600-601
[char]	Single character
[chars]	Character string
[dec]	Decimal number
[enet]	Ethernet address (for example, 0000.FEED.00C0)
[hex]	Hexadecimal number
[inet]	Internet address (for example, 10.0.2.16)
[int]	Integer number
[node]	Address or node name
[sci_notation]	Scientific notation
[t-line]	Terminal line number in octal (or decimal if the decimal-TTY service is enabled)
[v-name]	VINES name; or number (hex or decimal)

## Error Message Traceback Reports

Some messages describe internal errors and contain traceback information. This information is very important and should be included when you report a problem to your technical support representative.

The following sample message includes traceback information:

```
-Process= "Exec", level= 0, pid= 17 -Traceback= 1A82 1AB4 6378 A072 1054 1860
```

## System and Error Messages in Cisco IOS XE Dublin 17.13.x

The following tables list system and error messages and recommended actions. Scroll right to see the **Recommendation Action**. Alternatively, you can download the system and error messages in the excel format here: [System Message Guide for Cisco IOS XE 17.13.x](#)

### A to E

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>AAA</del> CENULREH00RC	3-Error	Cache Tree pointer is of null value	The cache tree pointer is of null value.	aaa	"Copy the error message exactly as it appears and report it to your "technical support representative."
<del>AAA</del> CENULREH00RC	3-Error	Cache Tree pointer is of null value	The cache tree pointer is of null value.	aaa	"Copy the error message exactly as it appears and report it to your "technical support representative."
AAA2AAAMJILNKERRC	2-Critical	[chars][node]X: Acct db for Id [node]X absent	AAA internal error	aaa	LOG_STD_ACTION
AAA2AAAMJILNKERRC	2-Critical	[chars][node]X: Acct db for Id [node]X absent	AAA internal error	aaa	LOG_STD_ACTION
AAA2AAAMJILNKERRC	2-Critical	[chars][node]X: Acct db for Id [node]X absent	AAA internal error	aaa	LOG_STD_ACTION
AAA2AAAMJILNKERRC	2-Critical	[chars][node]X: Acct db for Id [node]X absent	AAA internal error	aaa	LOG_STD_ACTION



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AAA-2-FORKFAIL	2-Critical	Cannot fork process [chars]	Attempted to fork a process and failed. The reason could be either hardware or software.	aaa	LOG_STD_ACTION
AAA-2-FORKFAIL	2-Critical	Cannot fork process [chars]	Attempted to fork a process and failed. The reason could be either hardware or software.	aaa	LOG_STD_ACTION
AAA-2-FORKFAIL	2-Critical	Cannot fork process [chars]	Attempted to fork a process and failed. The reason could be either hardware or software.	aaa	LOG_STD_ACTION
AAA-2-FORKFAIL	2-Critical	Cannot fork process [chars]	Attempted to fork a process and failed. The reason could be either hardware or software.	aaa	LOG_STD_ACTION
AAA3ACCT_IOMEM_LOW	3-Error	AAA ACCT process suspended : low I/O memory	AAA ACCT process has been suspended due to insufficient IO memory.	aaa	LOG_STD_ACTION
AAA3ACCT_IOMEM_LOW	3-Error	AAA ACCT process suspended : low I/O memory	AAA ACCT process has been suspended due to insufficient IO memory.	aaa	LOG_STD_ACTION
AAA3ACCT_IOMEM_LOW	3-Error	AAA ACCT process suspended : low I/O memory	AAA ACCT process has been suspended due to insufficient IO memory.	aaa	LOG_STD_ACTION
AAA3ACCT_IOMEM_LOW	3-Error	AAA ACCT process suspended : low I/O memory	AAA ACCT process has been suspended due to insufficient IO memory.	aaa	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>AAA</del> <u>AAA</u> <del>CTIOWMEMIRSH</del>	3-Error	AAA unable to handle accounting requests due to insufficient I/O memory and could be trashing the queued accounting records	Dropping the accounting request as there is no enough I/O memory. Hence all queued accounting requests shall be trashed	aaa	LOG_STD_ACTION
<del>AAA</del> <u>AAA</u> <del>CTIOWMEMIRSH</del>	3-Error	AAA unable to handle accounting requests due to insufficient I/O memory and could be trashing the queued accounting records	Dropping the accounting request as there is no enough I/O memory. Hence all queued accounting requests shall be trashed	aaa	LOG_STD_ACTION
<del>AAA</del> <u>AAA</u> <del>CTIOWMEMIRSH</del>	3-Error	AAA unable to handle accounting requests due to insufficient I/O memory and could be trashing the queued accounting records	Dropping the accounting request as there is no enough I/O memory. Hence all queued accounting requests shall be trashed	aaa	LOG_STD_ACTION
<del>AAA</del> <u>AAA</u> <del>CTIOWMEMIRSH</del>	3-Error	AAA unable to handle accounting requests due to insufficient I/O memory and could be trashing the queued accounting records	Dropping the accounting request as there is no enough I/O memory. Hence all queued accounting requests shall be trashed	aaa	LOG_STD_ACTION
<del>AAA</del> <u>AAA</u> <del>CTIOWMEMUDAL</del>	3-Error	AAA unable to create UID for incoming calls due to insufficient processor memory	Stop creating the AAA UID due to LOW processor memory	aaa	LOG_STD_ACTION
<del>AAA</del> <u>AAA</u> <del>CTIOWMEMUDAL</del>	3-Error	AAA unable to create UID for incoming calls due to insufficient processor memory	Stop creating the AAA UID due to LOW processor memory	aaa	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>AAA</del> CLOWMEMUDFL	3-Error	AAA unable to create UID for incoming calls due to insufficient processor memory	Stop creating the AAA UID due to LOW processor memory	aaa	LOG_STD_ACTION
<del>AAA</del> CLOWMEMUDFL	3-Error	AAA unable to create UID for incoming calls due to insufficient processor memory	Stop creating the AAA UID due to LOW processor memory	aaa	LOG_STD_ACTION
<del>AAA</del> CLOWRCMEMRSH	3-Error	AAA unable to handle accounting requests due to insufficient processor memory and could be trashing the queued accounting records	Dropping the accounting request as there is no enough processor memory. Hence all queued accounting requests shall be trashed	aaa	LOG_STD_ACTION
<del>AAA</del> CLOWRCMEMRSH	3-Error	AAA unable to handle accounting requests due to insufficient processor memory and could be trashing the queued accounting records	Dropping the accounting request as there is no enough processor memory. Hence all queued accounting requests shall be trashed	aaa	LOG_STD_ACTION
<del>AAA</del> CLOWRCMEMRSH	3-Error	AAA unable to handle accounting requests due to insufficient processor memory and could be trashing the queued accounting records	Dropping the accounting request as there is no enough processor memory. Hence all queued accounting requests shall be trashed	aaa	LOG_STD_ACTION
<del>AAA</del> CLOWRCMEMRSH	3-Error	AAA unable to handle accounting requests due to insufficient processor memory and could be trashing the queued accounting records	Dropping the accounting request as there is no enough processor memory. Hence all queued accounting requests shall be trashed	aaa	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>AAA</del> UNKNOWNERRSH	3-Error	AAA unable to handle accounting requests reason unknown and could be trashing the queued accounting records	Dropping the accounting request reason unknown. Hence all queued accounting requests shall be trashed	aaa	LOG_STD_ACTION
<del>AAA</del> UNKNOWNERRSH	3-Error	AAA unable to handle accounting requests reason unknown and could be trashing the queued accounting records	Dropping the accounting request reason unknown. Hence all queued accounting requests shall be trashed	aaa	LOG_STD_ACTION
<del>AAA</del> UNKNOWNERRSH	3-Error	AAA unable to handle accounting requests reason unknown and could be trashing the queued accounting records	Dropping the accounting request reason unknown. Hence all queued accounting requests shall be trashed	aaa	LOG_STD_ACTION
<del>AAA</del> UNKNOWNERRSH	3-Error	AAA unable to handle accounting requests reason unknown and could be trashing the queued accounting records	Dropping the accounting request reason unknown. Hence all queued accounting requests shall be trashed	aaa	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AAA-3-ATTRFORMATERR	3-Error	Attribute with unknown format [dec]	An attribute was found with an invalid format.	aaa	"Attribute with unknown format in definition. Enable AAA " "debug and try to replicate the steps to get the message. " "If the message appears again Check bug toolkit " "on Cisco website for the issue. If you didn't find one " "Enter <CmdBold>Show <del>tech-support</del> <NoCmdBold> command " "Collect all the information and error message and report " "it to your technical support representative."
AAA-3-ATTRFORMATERR	3-Error	Attribute with unknown format [dec]	An attribute was found with an invalid format.	aaa	"Attribute with unknown format in definition. Enable AAA " "debug and try to replicate the steps to get the message. " "If the message appears again Check bug toolkit " "on Cisco website for the issue. If you didn't find one " "Enter <CmdBold>Show <del>tech-support</del> <NoCmdBold> command " "Collect all the information and error message and report " "it to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AAA3-ATTRFORMATERR	3-Error	Attribute with unknown format [dec]	An attribute was found with an invalid format.	aaa	"Attribute with unknown format in definition. Enable AAA " "debug and try to replicate the steps to get the message. " "If the message appears again Check bug toolkit " "on Cisco website for the issue. If you didn't find one " "Enter <CmdBold>Show tech-support<NoCmdBold> command " "Collect all the information and error message and report " "it to your technical support representative."
AAA3-ATTRFORMATERR	3-Error	Attribute with unknown format [dec]	An attribute was found with an invalid format.	aaa	"Attribute with unknown format in definition. Enable AAA " "debug and try to replicate the steps to get the message. " "If the message appears again Check bug toolkit " "on Cisco website for the issue. If you didn't find one " "Enter <CmdBold>Show tech-support<NoCmdBold> command " "Collect all the information and error message and report " "it to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AAA3AUTHLOWIDMEM	3-Error	RADIUS process is unable to handle the requests due to insufficient I/O memory	RADIUS process unable to handle request due to insufficient IO memory. Hence returning failure.	aaa	LOG_STD_ACTION
AAA3AUTHLOWIDMEM	3-Error	RADIUS process is unable to handle the requests due to insufficient I/O memory	RADIUS process unable to handle request due to insufficient IO memory. Hence returning failure.	aaa	LOG_STD_ACTION
AAA3AUTHLOWIDMEM	3-Error	RADIUS process is unable to handle the requests due to insufficient I/O memory	RADIUS process unable to handle request due to insufficient IO memory. Hence returning failure.	aaa	LOG_STD_ACTION
AAA3AUTHLOWIDMEM	3-Error	RADIUS process is unable to handle the requests due to insufficient I/O memory	RADIUS process unable to handle request due to insufficient IO memory. Hence returning failure.	aaa	LOG_STD_ACTION
AAA3AUTHORMSIUNDEF	3-Error	Authorization method list '[chars]' is not defined. Please define it.	A given method list was listed in a command without defining it first. The method list should be defined before use.	aaa	"Define the method list before using it."
AAA3AUTHORMSIUNDEF	3-Error	Authorization method list '[chars]' is not defined. Please define it.	A given method list was listed in a command without defining it first. The method list should be defined before use.	aaa	"Define the method list before using it."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AAA3-AUTHFORMSUNDEF	3-Error	Authorization method list '[chars]' is not defined. Please define it.	A given method list was listed in a command without defining it first. The method list should be defined before use.	aaa	"Define the method list before using it."
AAA3-AUTHFORMSUNDEF	3-Error	Authorization method list '[chars]' is not defined. Please define it.	A given method list was listed in a command without defining it first. The method list should be defined before use.	aaa	"Define the method list before using it."
AAA-3-BADCURSORS	3-Error	invalid cursor index [dec] max [dec] service [chars] protocol [chars]	A AAA client has provided an invalid attribute cursor to AAA.	aaa	LOG_STD_ACTION
AAA-3-BADCURSORS	3-Error	invalid cursor index [dec] max [dec] service [chars] protocol [chars]	A AAA client has provided an invalid attribute cursor to AAA.	aaa	LOG_STD_ACTION
AAA-3-BADCURSORS	3-Error	invalid cursor index [dec] max [dec] service [chars] protocol [chars]	A AAA client has provided an invalid attribute cursor to AAA.	aaa	LOG_STD_ACTION
AAA-3-BADCURSORS	3-Error	invalid cursor index [dec] max [dec] service [chars] protocol [chars]	A AAA client has provided an invalid attribute cursor to AAA.	aaa	LOG_STD_ACTION
AAA-3-BADLIST	3-Error	invalid list AAA ID %u	A AAA client has provided an invalid attribute list to AAA.	aaa	LOG_STD_ACTION
AAA-3-BADLIST	3-Error	invalid list AAA ID %u	A AAA client has provided an invalid attribute list to AAA.	aaa	LOG_STD_ACTION
AAA-3-BADLIST	3-Error	invalid list AAA ID %u	A AAA client has provided an invalid attribute list to AAA.	aaa	LOG_STD_ACTION
AAA-3-BADLIST	3-Error	invalid list AAA ID %u	A AAA client has provided an invalid attribute list to AAA.	aaa	LOG_STD_ACTION



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AAA-3-BADMAGIC	3-Error	Data structure failed magic number sanity check	A corrupted data structure has been found which was stored internally.	aaa	LOG_STD_ACTION
AAA-3-BADMAGIC	3-Error	Data structure failed magic number sanity check	A corrupted data structure has been found which was stored internally.	aaa	LOG_STD_ACTION
AAA-3-BADMAGIC	3-Error	Data structure failed magic number sanity check	A corrupted data structure has been found which was stored internally.	aaa	LOG_STD_ACTION
AAA-3-BADMAGIC	3-Error	Data structure failed magic number sanity check	A corrupted data structure has been found which was stored internally.	aaa	LOG_STD_ACTION
AAA-3-BADMETHOD	3-Error	Cannot process [chars] method %u	A method list function encountered a method list that was unknown or could not be handled.	aaa	LOG_STD_ACTION
AAA-3-BADMETHOD	3-Error	Cannot process [chars] method %u	A method list function encountered a method list that was unknown or could not be handled.	aaa	LOG_STD_ACTION
AAA-3-BADMETHOD	3-Error	Cannot process [chars] method %u	A method list function encountered a method list that was unknown or could not be handled.	aaa	LOG_STD_ACTION
AAA-3-BADMETHOD	3-Error	Cannot process [chars] method %u	A method list function encountered a method list that was unknown or could not be handled.	aaa	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AAA3BADMEIHCDERRCR	3-Error	Cannot process [chars] method [chars]	A method list function encountered a method type that was unknown or could not be handled.	aaa	LOG_STD_ACTION
AAA3BADMEIHCDERRCR	3-Error	Cannot process [chars] method [chars]	A method list function encountered a method type that was unknown or could not be handled.	aaa	LOG_STD_ACTION
AAA3BADMEIHCDERRCR	3-Error	Cannot process [chars] method [chars]	A method list function encountered a method type that was unknown or could not be handled.	aaa	LOG_STD_ACTION
AAA3BADMEIHCDERRCR	3-Error	Cannot process [chars] method [chars]	A method list function encountered a method type that was unknown or could not be handled.	aaa	LOG_STD_ACTION
AAA3BADMEIHCDERRCR	3-Error	Cannot process [chars] server type [chars]	A method list function encountered a server type that was unknown or could not be handled. This may be due to a server misconfiguration.	aaa	"Research the cause of the misconfiguration and " "attempt to correct it otherwise take the following " "action. "LOG_STD_ACTION
AAA3BADMEIHCDERRCR	3-Error	Cannot process [chars] server type [chars]	A method list function encountered a server type that was unknown or could not be handled. This may be due to a server misconfiguration.	aaa	"Research the cause of the misconfiguration and " "attempt to correct it otherwise take the following " "action. "LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AAA-BAD-SERVER-TYPE-ERROR	3-Error	Cannot process [chars] server type [chars]	A method list function encountered a server type that was unknown or could not be handled. This may be due to a server misconfiguration.	aaa	"Research the cause of the misconfiguration and " "attempt to correct it otherwise take the following " "action. "LOG_STD_ACTION
AAA-BAD-SERVER-TYPE-ERROR	3-Error	Cannot process [chars] server type [chars]	A method list function encountered a server type that was unknown or could not be handled. This may be due to a server misconfiguration.	aaa	"Research the cause of the misconfiguration and " "attempt to correct it otherwise take the following " "action. "LOG_STD_ACTION
AAA-BUFFER-OVERFLOW	3-Error	Radius I/O buffer has overflowed	An unusually large number of RADIUS attributes has caused AAA to overflow its RADIUS I/O buffer.	aaa	"This is an internal software error. Check bug toolkit " "on Cisco website for the issue. If you didn't find one " "Enter <CmdBold>Show tech-support<NoCmdBold> command " "Collect all the information and error message and report " "it to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AAA3BUHRR_OVERFLOW	3-Error	Radius I/O buffer has overflowed	An unusually large number of RADIUS attributes has caused AAA to overflow its RADIUS I/O buffer.	aaa	"This is an internal software error. Check bug toolkit " "on Cisco website for the issue. If you didn't find one " "Enter <CmdBold>Show tech-support<NoCmdBold> command " "Collect all the information and error message and report " "it to your technical support representative."
AAA3BUHRR_OVERFLOW	3-Error	Radius I/O buffer has overflowed	An unusually large number of RADIUS attributes has caused AAA to overflow its RADIUS I/O buffer.	aaa	"This is an internal software error. Check bug toolkit " "on Cisco website for the issue. If you didn't find one " "Enter <CmdBold>Show tech-support<NoCmdBold> command " "Collect all the information and error message and report " "it to your technical support representative."
AAA3BUHRR_OVERFLOW	3-Error	Radius I/O buffer has overflowed	An unusually large number of RADIUS attributes has caused AAA to overflow its RADIUS I/O buffer.	aaa	"This is an internal software error. Check bug toolkit " "on Cisco website for the issue. If you didn't find one " "Enter <CmdBold>Show tech-support<NoCmdBold> command " "Collect all the information and error message and report " "it to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AAA-3-DROPACCTFAIL	3-Error	Accounting record dropped send to server failed: [chars]	An attempt to send an accounting record to a server failed. This happens when device exhaust all its retries and retransmission. The cause for this be the servers may not be operational or the NAS is not configured properly.	aaa	"Check the server whether they are " "operational or not. Next check whether " "the device is configured properly. Refer to" "the server configuration section of the " "cisco IOS documentation. Finally check " "that the NAS can communicate with the server. " "If the problem persist Enter <CmdBold>show running-" "config<NoCmdBold> command contact your cisco technical " "support representative and provide all the information " "gathered to the representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AAA-3-DROPACCTFAIL	3-Error	Accounting record dropped send to server failed: [chars]	An attempt to send an accounting record to a server failed. This happens when device exhaust all its retries and retransmission. The cause for this be the servers may not be operational or the NAS is not configured properly.	aaa	"Check the server whether they are " "operational or not. Next check whether " "the device is configured properly. Refer to" "the server configuration section of the " "cisco IOS documentation. Finally check " "that the NAS can communicate with the server. " "If the problem persist Enter <CmdBold>show running-" "config<NoCmdBold> command contact your cisco technical " "support representative and provide all the information " "gathered to the representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AAA-3-DROPACCTFAIL	3-Error	Accounting record dropped send to server failed: [chars]	An attempt to send an accounting record to a server failed. This happens when device exhaust all its retries and retransmission. The cause for this be the servers may not be operational or the NAS is not configured properly.	aaa	"Check the server whether they are " "operational or not. Next check whether " "the device is configured properly. Refer to" "the server configuration section of the " "cisco IOS documentation. Finally check " "that the NAS can communicate with the server. " "If the problem persist Enter <CmdBold>show running-" "config<NoCmdBold> command contact your cisco technical " "support representative and provide all the information " "gathered to the representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AAA-3-DROPACCTFAIL	3-Error	Accounting record dropped send to server failed: [chars]	An attempt to send an accounting record to a server failed. This happens when device exhaust all its retries and retransmission. The cause for this be the servers may not be operational or the NAS is not configured properly.	aaa	"Check the server whether they are " "operational or not. Next check whether " "the device is configured properly. Refer to" "the server configuration section of the " "cisco IOS documentation. Finally check " "that the NAS can communicate with the server. " "If the problem persist Enter <CmdBold>show running-" "config<NoCmdBold> command contact your cisco technical " "support representative and provide all the information " "gathered to the representative."
AAA3HA_INT_FAILURE	3-Error	High availability initialization failure: [chars]	The AAA subsystem was unable to perform necessary high-availability related initialization. In the event of switchover to a standby device sessions depending on high availability capabilities in the AAA subsystem will be forced to renegotiate.	aaa	LOG_STD_ACTION



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AAA3HA_INIT_FAILURE	3-Error	High availability initialization failure: [chars]	The AAA subsystem was unable to perform necessary high-availability related initialization. In the event of switchover to a standby device sessions depending on high availability capabilities in the AAA subsystem will be forced to renegotiate.	aaa	LOG_STD_ACTION
AAA3HA_INIT_FAILURE	3-Error	High availability initialization failure: [chars]	The AAA subsystem was unable to perform necessary high-availability related initialization. In the event of switchover to a standby device sessions depending on high availability capabilities in the AAA subsystem will be forced to renegotiate.	aaa	LOG_STD_ACTION
AAA3HA_INIT_FAILURE	3-Error	High availability initialization failure: [chars]	The AAA subsystem was unable to perform necessary high-availability related initialization. In the event of switchover to a standby device sessions depending on high availability capabilities in the AAA subsystem will be forced to renegotiate.	aaa	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AAA3HAIINTERNAL_ERRCR	3-Error	High availability internal error for unique id 0x[node]: [chars]	The AAA subsystem was suffered an internal error. In the event of switchover to a standby device sessions depending on high availability capabilities in the AAA subsystem may be forced to renegotiate.	aaa	LOG_STD_ACTION
AAA3HAIINTERNAL_ERRCR	3-Error	High availability internal error for unique id 0x[node]: [chars]	The AAA subsystem was suffered an internal error. In the event of switchover to a standby device sessions depending on high availability capabilities in the AAA subsystem may be forced to renegotiate.	aaa	LOG_STD_ACTION
AAA3HAIINTERNAL_ERRCR	3-Error	High availability internal error for unique id 0x[node]: [chars]	The AAA subsystem was suffered an internal error. In the event of switchover to a standby device sessions depending on high availability capabilities in the AAA subsystem may be forced to renegotiate.	aaa	LOG_STD_ACTION
AAA3HAIINTERNAL_ERRCR	3-Error	High availability internal error for unique id 0x[node]: [chars]	The AAA subsystem was suffered an internal error. In the event of switchover to a standby device sessions depending on high availability capabilities in the AAA subsystem may be forced to renegotiate.	aaa	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AAA3-INVALIDATTRLIST	3-Error	aaa attribute list CLI is not valid when configuring in sub-mode.	An internal error has occurred	aaa	LOG_STD_ACTION
AAA3-INVALIDATTRLIST	3-Error	aaa attribute list CLI is not valid when configuring in sub-mode.	An internal error has occurred	aaa	LOG_STD_ACTION
AAA3-INVALIDATTRLIST	3-Error	aaa attribute list CLI is not valid when configuring in sub-mode.	An internal error has occurred	aaa	LOG_STD_ACTION
AAA3-INVALIDATTRLIST	3-Error	aaa attribute list CLI is not valid when configuring in sub-mode.	An internal error has occurred	aaa	LOG_STD_ACTION
AAA-3-INVALIDPARAM	3-Error	invalid parameter was used when accessing AAA function	A AAA client tried to use a AAA function with an invalid parameter.	aaa	LOG_STD_ACTION
AAA-3-INVALIDPARAM	3-Error	invalid parameter was used when accessing AAA function	A AAA client tried to use a AAA function with an invalid parameter.	aaa	LOG_STD_ACTION
AAA-3-INVALIDPARAM	3-Error	invalid parameter was used when accessing AAA function	A AAA client tried to use a AAA function with an invalid parameter.	aaa	LOG_STD_ACTION
AAA-3-INVALIDPARAM	3-Error	invalid parameter was used when accessing AAA function	A AAA client tried to use a AAA function with an invalid parameter.	aaa	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AAA-3-PILLEGALMSG	3-Error	Invalid use of ip_pid%u	This error means a process sent an illegal message.	-	"If this message recurs. Check bug toolkit " "on Cisco website for the issue. If you didn't find one " "Enter <CmdBold>Show tech-support<NoCmdBold> command " "Collect all the information and error message and report " "it to your technical support representative."
AAA-3-PILLEGALMSG	3-Error	Invalid use of ip_pid%u	This error means a process sent an illegal message.	-	"If this message recurs. Check bug toolkit " "on Cisco website for the issue. If you didn't find one " "Enter <CmdBold>Show tech-support<NoCmdBold> command " "Collect all the information and error message and report " "it to your technical support representative."
AAA-3-PILLEGALMSG	3-Error	Invalid use of ip_pid%u	This error means a process sent an illegal message.	-	"If this message recurs. Check bug toolkit " "on Cisco website for the issue. If you didn't find one " "Enter <CmdBold>Show tech-support<NoCmdBold> command " "Collect all the information and error message and report " "it to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AAA-3-IPILLEGALMSG	3-Error	Invalid use of ip_pid%u	This error means a process sent an illegal message.	-	"If this message recurs. Check bug toolkit " "on Cisco website for the issue. If you didn't find one " "Enter <CmdBold>Show tech-support</CmdBold> command " "Collect all the information and error message and report " "it to your technical support representative."
AAA-3-ISDNINTF	3-Error	[chars] [chars]: Can not apply configuration to ISDN channel:\n \[chars]\	Configuration can not be applied to individual ISDN channels.	aaa	"You need virtual-profiles and virtual-access " "interfaces to apply configuration to ISDN. " "Refer to the section on \"Configuring virtual " "profile by AAA Configuration\" in the Cisco IOS " "Dial Technologies Configuration Guide."
AAA-3-ISDNINTF	3-Error	[chars] [chars]: Can not apply configuration to ISDN channel:\n \[chars]\	Configuration can not be applied to individual ISDN channels.	aaa	"You need virtual-profiles and virtual-access " "interfaces to apply configuration to ISDN. " "Refer to the section on \"Configuring virtual " "profile by AAA Configuration\" in the Cisco IOS " "Dial Technologies Configuration Guide."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AAA-3-ISDNINTF	3-Error	[chars] [chars]: Can not apply configuration to ISDN channel:\n \[chars]\	Configuration can not be applied to individual ISDN channels.	aaa	"You need virtual-profiles and virtual-access " "interfaces to apply configuration to ISDN. " "Refer to the section on \"Configuring virtual " "profile by AAA Configuration\" in the Cisco IOS " "Dial Technologies Configuration Guide."
AAA-3-ISDNINTF	3-Error	[chars] [chars]: Can not apply configuration to ISDN channel:\n \[chars]\	Configuration can not be applied to individual ISDN channels.	aaa	"You need virtual-profiles and virtual-access " "interfaces to apply configuration to ISDN. " "Refer to the section on \"Configuring virtual " "profile by AAA Configuration\" in the Cisco IOS " "Dial Technologies Configuration Guide."
AAA-3-LOW_MEM	3-Error	[chars] process is unable to handle the incoming packet due to low memory	Please check the processor memory or IO memory. Most likely one is them has less available memory or worst case both may have insufficient memory.	aaa	LOG_STD_ACTION
AAA-3-LOW_MEM	3-Error	[chars] process is unable to handle the incoming packet due to low memory	Please check the processor memory or IO memory. Most likely one is them has less available memory or worst case both may have insufficient memory.	aaa	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AAA-3-LOW_MEM	3-Error	[chars] process is unable to handle the incoming packet due to low memory	Please check the processor memory or IO memory. Most likely one is them has less available memory or worst case both may have insufficient memory.	aaa	LOG_STD_ACTION
AAA-3-LOW_MEM	3-Error	[chars] process is unable to handle the incoming packet due to low memory	Please check the processor memory or IO memory. Most likely one is them has less available memory or worst case both may have insufficient memory.	aaa	LOG_STD_ACTION
<del>AAA-3-INTERNAL_ERR</del>	3-Error	method list '[chars]': [chars]	This is an internal software error.	aaa	LOG_STD_ACTION
<del>AAA-3-INTERNAL_ERR</del>	3-Error	method list '[chars]': [chars]	This is an internal software error.	aaa	LOG_STD_ACTION
<del>AAA-3-INTERNAL_ERR</del>	3-Error	method list '[chars]': [chars]	This is an internal software error.	aaa	LOG_STD_ACTION
<del>AAA-3-INTERNAL_ERR</del>	3-Error	method list '[chars]': [chars]	This is an internal software error.	aaa	LOG_STD_ACTION
<del>AAA-3-INTERNAL_ERR</del>	3-Error	method list '[chars]'	This is an internal software error. An AAA client attempted to add too many methods to a method list.	aaa	"This is an internal software error. Check bug tool-kit " "on Cisco web-site for the issue. If you didn't find one " "Collect the error message and report it to your " "technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>AAA-3-NOTABLE</del>	3-Error	method list '[chars]'	This is an internal software error. An AAA client attempted to add too many methods to a method list.	aaa	"This is an internal software error. Check bug tool-kit " "on Cisco web-site for the issue. If you didn't find one " "Collect the error message and report it to your " "technical support representative."
<del>AAA-3-NOTABLE</del>	3-Error	method list '[chars]'	This is an internal software error. An AAA client attempted to add too many methods to a method list.	aaa	"This is an internal software error. Check bug tool-kit " "on Cisco web-site for the issue. If you didn't find one " "Collect the error message and report it to your " "technical support representative."
<del>AAA-3-NOTABLE</del>	3-Error	method list '[chars]'	This is an internal software error. An AAA client attempted to add too many methods to a method list.	aaa	"This is an internal software error. Check bug tool-kit " "on Cisco web-site for the issue. If you didn't find one " "Collect the error message and report it to your " "technical support representative."
AAA-3-NOTABLE	3-Error	AAA ID %u	Resource failure.	aaa	LOG_STD_ACTION
AAA-3-NOTABLE	3-Error	AAA ID %u	Resource failure.	aaa	LOG_STD_ACTION
AAA-3-NOTABLE	3-Error	AAA ID %u	Resource failure.	aaa	LOG_STD_ACTION
AAA-3-NOTABLE	3-Error	AAA ID %u	Resource failure.	aaa	LOG_STD_ACTION
AAA-3-NULLCURSOR	3-Error	Null cursor	A AAA client has provided a nonexistent attribute cursor to AAA.	aaa	LOG_STD_ACTION



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AAA-3-NULLCURSOR	3-Error	Null cursor	A AAA client has provided a nonexistent attribute cursor to AAA.	aaa	LOG_STD_ACTION
AAA-3-NULLCURSOR	3-Error	Null cursor	A AAA client has provided a nonexistent attribute cursor to AAA.	aaa	LOG_STD_ACTION
AAA-3-NULLCURSOR	3-Error	Null cursor	A AAA client has provided a nonexistent attribute cursor to AAA.	aaa	LOG_STD_ACTION
AAA-3-NULLVRF	3-Error	Null vrf entry	A NULL VRF entry found while comparing the AAA VRF attributes.	aaa	LOG_STD_ACTION
AAA-3-NULLVRF	3-Error	Null vrf entry	A NULL VRF entry found while comparing the AAA VRF attributes.	aaa	LOG_STD_ACTION
AAA-3-NULLVRF	3-Error	Null vrf entry	A NULL VRF entry found while comparing the AAA VRF attributes.	aaa	LOG_STD_ACTION
AAA-3-NULLVRF	3-Error	Null vrf entry	A NULL VRF entry found while comparing the AAA VRF attributes.	aaa	LOG_STD_ACTION
AAA-3-PARSEERR	3-Error	Error[dec] parser is unable to parse [chars] per-user command	All attempts to parse this per_user unconfigure command failed. The unconfigure command is called when an error occurs while configuring per-user commands to revert back. The unconfiguration may fail due to parser or AAA error.	parserandaaa	"The given unconfigure command was not executed. " "Switch on the debug peruser command and repeat " "the steps that caused the error. If you get the error " "Report it to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AAA-3-PARSEERR	3-Error	Error[dec] parser is unable to parse [chars] per-user command	All attempts to parse this per_user unconfigure command failed. The unconfigure command is called when an error occurs while configuring per-user commands to revert back. The unconfiguration may fail due to parser or AAA error.	parserandaaa	"The given unconfigure command was not executed. " "Switch on the debug peruser command and repeat " "the steps that caused the error. If you get the error " "Report it to your technical support representative."
AAA-3-PARSEERR	3-Error	Error[dec] parser is unable to parse [chars] per-user command	All attempts to parse this per_user unconfigure command failed. The unconfigure command is called when an error occurs while configuring per-user commands to revert back. The unconfiguration may fail due to parser or AAA error.	parserandaaa	"The given unconfigure command was not executed. " "Switch on the debug peruser command and repeat " "the steps that caused the error. If you get the error " "Report it to your technical support representative."
AAA-3-PARSEERR	3-Error	Error[dec] parser is unable to parse [chars] per-user command	All attempts to parse this per_user unconfigure command failed. The unconfigure command is called when an error occurs while configuring per-user commands to revert back. The unconfiguration may fail due to parser or AAA error.	parserandaaa	"The given unconfigure command was not executed. " "Switch on the debug peruser command and repeat " "the steps that caused the error. If you get the error " "Report it to your technical support representative."
AAA-PASSWDRESICERR	3-Error	AAA password restriction failed.- [chars]\n	The password/secret/key entered is not meeting the password restrictions configured	aaa	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AAA:PASSWDRESIRCIERR	3-Error	AAA password restriction failed.- [chars]\n	The password/secret/key entered is not meeting the password restrictions configured	aaa	LOG_STD_ACTION
AAA:PASSWDRESIRCIERR	3-Error	AAA password restriction failed.- [chars]\n	The password/secret/key entered is not meeting the password restrictions configured	aaa	LOG_STD_ACTION
AAA:PASSWDRESIRCIERR	3-Error	AAA password restriction failed.- [chars]\n	The password/secret/key entered is not meeting the password restrictions configured	aaa	LOG_STD_ACTION
AAA:INTERNAL_ERROR	3-Error	Server '[chars]': [chars]	This is an internal software error in the AAA server group subsystem.	aaa	"This is an internal software error. Check bug toolkit " "on Cisco website for the issue. If you didn't find one " "Enter <CmdBold>Show tech-support</CmdBold> command " "Collect all the information and error message and report " "it to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AAA-INTERNAL-ERR	3-Error	Server '[chars]': [chars]	This is an internal software error in the AAA server group subsystem.	aaa	"This is an internal software error. Check bug toolkit " "on Cisco website for the issue. If you didn't find one " "Enter <CmdBold>Show tech-support<NoCmdBold> command " "Collect all the information and error message and report " "it to your technical support representative."
AAA-INTERNAL-ERR	3-Error	Server '[chars]': [chars]	This is an internal software error in the AAA server group subsystem.	aaa	"This is an internal software error. Check bug toolkit " "on Cisco website for the issue. If you didn't find one " "Enter <CmdBold>Show tech-support<NoCmdBold> command " "Collect all the information and error message and report " "it to your technical support representative."
AAA-INTERNAL-ERR	3-Error	Server '[chars]': [chars]	This is an internal software error in the AAA server group subsystem.	aaa	"This is an internal software error. Check bug toolkit " "on Cisco website for the issue. If you didn't find one " "Enter <CmdBold>Show tech-support<NoCmdBold> command " "Collect all the information and error message and report " "it to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AAASGDEADIMEICRKAAL	3-Error	Failed to fork process for [chars].	Quite likely we ran out of memory. Other explanations are possible.	aaa	"If this message recurs. Check bug toolkit " "on Cisco website for the issue. If you didn't find " "one Enter <CmdBold>Show tech-support<NoCmdBold> " "command collect all the information and error " "message and report it to your technical support " "representative."
AAASGDEADIMEICRKAAL	3-Error	Failed to fork process for [chars].	Quite likely we ran out of memory. Other explanations are possible.	aaa	"If this message recurs. Check bug toolkit " "on Cisco website for the issue. If you didn't find " "one Enter <CmdBold>Show tech-support<NoCmdBold> " "command collect all the information and error " "message and report it to your technical support " "representative."
AAASGDEADIMEICRKAAL	3-Error	Failed to fork process for [chars].	Quite likely we ran out of memory. Other explanations are possible.	aaa	"If this message recurs. Check bug toolkit " "on Cisco website for the issue. If you didn't find " "one Enter <CmdBold>Show tech-support<NoCmdBold> " "command collect all the information and error " "message and report it to your technical support " "representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AAA_SG_DEADTIME_CRITICAL	3-Error	Failed to fork process for [chars].	Quite likely we ran out of memory. Other explanations are possible.	aaa	"If this message recurs. Check bug toolkit " "on Cisco website for the issue. If you didn't find " "one Enter <CmdBold>Show tech-support<NoCmdBold> " "command collect all the information and error " "message and report it to your technical support " "representative."
AAA_SG_INTERNAL_ERROR	3-Error	server group '[chars]': [chars]	This is an internal software error in the AAA server group subsystem.	aaa	"This is an internal software error. Check bug " "toolkit on Cisco website for the issue. If you " "didn't find one Enter <CmdBold>Show tech-support" "<NoCmdBold> command collect all the information " "and error message report it to your technical " "support representative."
AAA_SG_INTERNAL_ERROR	3-Error	server group '[chars]': [chars]	This is an internal software error in the AAA server group subsystem.	aaa	"This is an internal software error. Check bug " "toolkit on Cisco website for the issue. If you " "didn't find one Enter <CmdBold>Show tech-support" "<NoCmdBold> command collect all the information " "and error message report it to your technical " "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AAA3SGNINTERNAL_ERROR	3-Error	server group '[chars]': [chars]	This is an internal software error in the AAA server group subsystem.	aaa	"This is an internal software error. Check bug " "toolkit on Cisco website for the issue. If you " "didn't find one Enter <CmdBold>Show tech-support" "<NoCmdBold> command collect all the information " "and error message report it to your technical " "support representative."
AAA3SGNINTERNAL_ERROR	3-Error	server group '[chars]': [chars]	This is an internal software error in the AAA server group subsystem.	aaa	"This is an internal software error. Check bug " "toolkit on Cisco website for the issue. If you " "didn't find one Enter <CmdBold>Show tech-support" "<NoCmdBold> command collect all the information " "and error message report it to your technical " "support representative."
AAA3SGNINTERNAL_ERROR	3-Error	Failed to fork process for [chars].	Quite likely we ran out of memory. Other explanations are possible.	aaa	"If this message recurs. Check bug toolkit " "on Cisco website for the issue. If you didn't find one " "Enter <CmdBold>Show tech-support<NoCmdBold> command " "Collect all the information and error message and report " "it to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AAA&G_TESIPROC_FATAL	3-Error	Failed to fork process for [chars].	Quite likely we ran out of memory. Other explanations are possible.	aaa	"If this message recurs. Check bug toolkit " "on Cisco website for the issue. If you didn't find one " "Enter <CmdBold>Show tech-support<NoCmdBold> command " "Collect all the information and error message and report " "it to your technical support representative."
AAA&G_TESIPROC_FATAL	3-Error	Failed to fork process for [chars].	Quite likely we ran out of memory. Other explanations are possible.	aaa	"If this message recurs. Check bug toolkit " "on Cisco website for the issue. If you didn't find one " "Enter <CmdBold>Show tech-support<NoCmdBold> command " "Collect all the information and error message and report " "it to your technical support representative."
AAA&G_TESIPROC_FATAL	3-Error	Failed to fork process for [chars].	Quite likely we ran out of memory. Other explanations are possible.	aaa	"If this message recurs. Check bug toolkit " "on Cisco website for the issue. If you didn't find one " "Enter <CmdBold>Show tech-support<NoCmdBold> command " "Collect all the information and error message and report " "it to your technical support representative."



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AAA-3-SORTFAIL	3-Error	[chars] :Peruser Could not sort the [chars] attributes	Sorting of the attributes received from AAA server failed.	aaa	LOG_STD_ACTION
AAA-3-SORTFAIL	3-Error	[chars] :Peruser Could not sort the [chars] attributes	Sorting of the attributes received from AAA server failed.	aaa	LOG_STD_ACTION
AAA-3-SORTFAIL	3-Error	[chars] :Peruser Could not sort the [chars] attributes	Sorting of the attributes received from AAA server failed.	aaa	LOG_STD_ACTION
AAA-3-SORTFAIL	3-Error	[chars] :Peruser Could not sort the [chars] attributes	Sorting of the attributes received from AAA server failed.	aaa	LOG_STD_ACTION
<del>AAA5CA_USER_LOCKED</del>	5-Notice	User [chars] blocked for login till [chars]	User blocked since the number of authentication failures in the watch time exceeded the configured threshold.	aaa	LOG_STD_ACTION
<del>AAA5CA_USER_LOCKED</del>	5-Notice	User [chars] blocked for login till [chars]	User blocked since the number of authentication failures in the watch time exceeded the configured threshold.	aaa	LOG_STD_ACTION
AAA-5USER_LOCKED	5-Notice	User [chars] locked out on authentication failure	User locked out since the number of authentication failures exceeded the configured threshold.	aaa	LOG_STD_ACTION
AAA-5USER_LOCKED	5-Notice	User [chars] locked out on authentication failure	User locked out since the number of authentication failures exceeded the configured threshold.	aaa	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AAA-5-USER_LOCKED	5-Notice	User [chars] locked out on authentication failure	User locked out since the number of authentication failures exceeded the configured threshold.	aaa	LOG_STD_ACTION
AAA-5-USER_LOCKED	5-Notice	User [chars] locked out on authentication failure	User locked out since the number of authentication failures exceeded the configured threshold.	aaa	LOG_STD_ACTION
AAA-5-USER_RESET	5-Notice	User [chars] failed attempts reset by [chars]	User's number of failed authentication attempts so far has been reset to zero	aaa	LOG_STD_ACTION
AAA-5-USER_RESET	5-Notice	User [chars] failed attempts reset by [chars]	User's number of failed authentication attempts so far has been reset to zero	aaa	LOG_STD_ACTION
AAA-5-USER_RESET	5-Notice	User [chars] failed attempts reset by [chars]	User's number of failed authentication attempts so far has been reset to zero	aaa	LOG_STD_ACTION
AAA-5-USER_RESET	5-Notice	User [chars] failed attempts reset by [chars]	User's number of failed authentication attempts so far has been reset to zero	aaa	LOG_STD_ACTION
AAA-5-USER_RESET	5-Notice	User [chars] failed attempts reset by [chars]	User's number of failed authentication attempts so far has been reset to zero	aaa	LOG_STD_ACTION
AAA-5-USER_UNLOCKED	5-Notice	User [chars] unlocked by [chars]	User unlocked by the system administrator. User is enabled to login to the system.	aaa	LOG_STD_ACTION
AAA-5-USER_UNLOCKED	5-Notice	User [chars] unlocked by [chars]	User unlocked by the system administrator. User is enabled to login to the system.	aaa	LOG_STD_ACTION
AAA-5-USER_UNLOCKED	5-Notice	User [chars] unlocked by [chars]	User unlocked by the system administrator. User is enabled to login to the system.	aaa	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AAAUSER_UNLOCKED	5-Notice	User [chars] unlocked by [chars]	User unlocked by the system administrator. User is enabled to login to the system.	aaa	LOG_STD_ACTION
AAA6ACCISESSDWRAP	6-Information	Accounting-Session-ID [dec] exceeded max value allowed	Accounting-Session-ID value exceeded max value allowed. Now it is wrapping.	aaa	"This is informational only not an error."
AAA6ACCISESSDWRAP	6-Information	Accounting-Session-ID [dec] exceeded max value allowed	Accounting-Session-ID value exceeded max value allowed. Now it is wrapping.	aaa	"This is informational only not an error."
AAA6ACCISESSDWRAP	6-Information	Accounting-Session-ID [dec] exceeded max value allowed	Accounting-Session-ID value exceeded max value allowed. Now it is wrapping.	aaa	"This is informational only not an error."
AAA6ACCISESSDWRAP	6-Information	Accounting-Session-ID [dec] exceeded max value allowed	Accounting-Session-ID value exceeded max value allowed. Now it is wrapping.	aaa	"This is informational only not an error."
AAA-6-BADHDL	6-Information	invalid hdl AAA ID [node]hdl [hec] [chars]	A AAA client has provided an invalid attribute list handle to AAA.	aaa	LOG_STD_ACTION
AAA-6-BADHDL	6-Information	invalid hdl AAA ID [node]hdl [hec] [chars]	A AAA client has provided an invalid attribute list handle to AAA.	aaa	LOG_STD_ACTION
AAA-6-BADHDL	6-Information	invalid hdl AAA ID [node]hdl [hec] [chars]	A AAA client has provided an invalid attribute list handle to AAA.	aaa	LOG_STD_ACTION
AAA-6-BADHDL	6-Information	invalid hdl AAA ID [node]hdl [hec] [chars]	A AAA client has provided an invalid attribute list handle to AAA.	aaa	LOG_STD_ACTION
AAA6INVALIDROUTE	6-Information	Syntax error in route statement: [chars]	Currently downloading route contains syntax error.	aaa	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AAA-6-INVALIDROUTE	6-Information	Syntax error in route statement: [chars]	Currently downloading route contains syntax error.	aaa	LOG_STD_ACTION
AAA-6-INVALIDROUTE	6-Information	Syntax error in route statement: [chars]	Currently downloading route contains syntax error.	aaa	LOG_STD_ACTION
AAA-6-INVALIDROUTE	6-Information	Syntax error in route statement: [chars]	Currently downloading route contains syntax error.	aaa	LOG_STD_ACTION
AAA-6-METHOD_LIST_STATE	6-Information	authen mlist [chars] of [chars] service is marked for notifying state and its current state is : [chars]	\nMethod list state change	aaa	LOG_STD_ACTION
AAA-6-METHOD_LIST_STATE	6-Information	authen mlist [chars] of [chars] service is marked for notifying state and its current state is : [chars]	\nMethod list state change	aaa	LOG_STD_ACTION
AAA-6-METHOD_LIST_STATE	6-Information	Notifying state of authentication method list [chars] of [chars] service as [chars]	\nMethod list state change notified to AAA CLIENT	aaa	LOG_STD_ACTION
AAA-6-METHOD_LIST_STATE	6-Information	Notifying state of authentication method list [chars] of [chars] service as [chars]	\nMethod list state change notified to AAA CLIENT	aaa	LOG_STD_ACTION
AAA-6-KPM_HOLD_ATTRIBUTE	6-Information	Warning: Hardware idb is NULL. No Modem. MoH attribute can not be applied and it is Skipped for authorization.	\nTo handle Modem-on-Hold attribute we need connectivity with modems supporting V.92 modem standards. If there is no modem there wouldn't be any tty without which we cannot use MOH attributes.	aaa	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AAA6SKPMCH_ATTRIBUTES	6-Information	Warning: Hardware idb is NULL. No Modem. MoH attribute can not be applied and it is Skipped for authorization.	\nTo handle Modem-on-Hold attribute we need connectivity with modems supporting V.92 modem standards. If there is no modem there wouldn't be any tty without which we cannot use MOH attributes.	aaa	LOG_STD_ACTION
AAA6SKPMCH_ATTRIBUTES	6-Information	Warning: Hardware idb is NULL. No Modem. MoH attribute can not be applied and it is Skipped for authorization.	\nTo handle Modem-on-Hold attribute we need connectivity with modems supporting V.92 modem standards. If there is no modem there wouldn't be any tty without which we cannot use MOH attributes.	aaa	LOG_STD_ACTION
AAA6SKPMCH_ATTRIBUTES	6-Information	Warning: Hardware idb is NULL. No Modem. MoH attribute can not be applied and it is Skipped for authorization.	\nTo handle Modem-on-Hold attribute we need connectivity with modems supporting V.92 modem standards. If there is no modem there wouldn't be any tty without which we cannot use MOH attributes.	aaa	LOG_STD_ACTION
AAA6USER_BLOCKED	6-Information	Enable view requires to be authenticated by non-none methods Please use the appropriate method with the login authentication	\nNone method authentication is not allowed in CLI	aaa	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AAA6USER_BLOCKED	6-Information	Enable view requires to be authenticated by non-none methods Please use the appropriate method with the login authentication	\nNone method authentication is not allowed in CLI	aaa	LOG_STD_ACTION
AAA6USER_BLOCKED	6-Information	Enable view requires to be authenticated by non-none methods Please use the appropriate method with the login authentication	\nNone method authentication is not allowed in CLI	aaa	LOG_STD_ACTION
AAA6USER_BLOCKED	6-Information	Enable view requires to be authenticated by non-none methods Please use the appropriate method with the login authentication	\nNone method authentication is not allowed in CLI	aaa	LOG_STD_ACTION
AAA6SERIAL_VEW_AAA	6-Information	User [chars] failed to enter view '[chars]'.	You have provided wrong User ID or Password for the requested view	aaa	"This message is for information only. No action" " is required."
AAA6SERIAL_VEW_AAA	6-Information	User [chars] failed to enter view '[chars]'.	You have provided wrong User ID or Password for the requested view	aaa	"This message is for information only. No action" " is required."
AAA6SERIAL_VEW_AAA	6-Information	User [chars] failed to enter view '[chars]'.	You have provided wrong User ID or Password for the requested view	aaa	"This message is for information only. No action" " is required."
AAA6SERIAL_VEW_AAA	6-Information	User [chars] failed to enter view '[chars]'.	You have provided wrong User ID or Password for the requested view	aaa	"This message is for information only. No action" " is required."
AAAA3-AAAFORKEFAIL	3-Error	Failed to start AAA process. AAA requests may not be processed.	Failed to create the AAA process.	aaa	"Free up some memory."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AAAA-3-AAAFORKFAIL	3-Error	Failed to start AAA process. AAA requests may not be processed.	Failed to create the AAA process.	aaa	"Free up some memory."
AAAA-3-AAAFORKFAIL	3-Error	Failed to start AAA process. AAA requests may not be processed.	Failed to create the AAA process.	aaa	"Free up some memory."
AAAA-3-AAAFORKFAIL	3-Error	Failed to start AAA process. AAA requests may not be processed.	Failed to create the AAA process.	aaa	"Free up some memory."
AAAA-3-ACCTATTR	3-Error	last accounting attribute:	The data buffer overflowed while building the accounting packet. The accounting attribute that was being written to the buffer while the buffer overflow occurred was logged.	AAA	LOG_SID_ACTION'Collect the logs with these debugs by" " using commands #debug aaa api#debug aaa attr#debug aaa accounting"
AAAA-3-ACCTATTR	3-Error	last accounting attribute:	The data buffer overflowed while building the accounting packet. The accounting attribute that was being written to the buffer while the buffer overflow occurred was logged.	AAA	LOG_SID_ACTION'Collect the logs with these debugs by" " using commands #debug aaa api#debug aaa attr#debug aaa accounting"
AAAA-3-ACCTATTR	3-Error	last accounting attribute:	The data buffer overflowed while building the accounting packet. The accounting attribute that was being written to the buffer while the buffer overflow occurred was logged.	AAA	LOG_SID_ACTION'Collect the logs with these debugs by" " using commands #debug aaa api#debug aaa attr#debug aaa accounting"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AAAA-3-ACCTATTR	3-Error	last accounting attribute:	The data buffer overflowed while building the accounting packet. The accounting attribute that was being written to the buffer while the buffer overflow occurred was logged.	AAA	LOG_SID_ACTION'cat the logs with these debugs by" " using commands #debug aaa api#debug aaa attr#debug aaa accounting"
AAAA-3-ACCTDUMP	3-Error	dump of accounting data:	The data buffer overflowed while building the accounting packet as the total length of the attributes exceed the buffer size. Last 128 bytes of buffer data is dumped.	AAA	LOG_SID_ACTION'cat the logs with these debugs by" " using commands #debug aaa api#debug aaa attr#debug aaa accounting"
AAAA-3-ACCTDUMP	3-Error	dump of accounting data:	The data buffer overflowed while building the accounting packet as the total length of the attributes exceed the buffer size. Last 128 bytes of buffer data is dumped.	AAA	LOG_SID_ACTION'cat the logs with these debugs by" " using commands #debug aaa api#debug aaa attr#debug aaa accounting"
AAAA-3-ACCTDUMP	3-Error	dump of accounting data:	The data buffer overflowed while building the accounting packet as the total length of the attributes exceed the buffer size. Last 128 bytes of buffer data is dumped.	AAA	LOG_SID_ACTION'cat the logs with these debugs by" " using commands #debug aaa api#debug aaa attr#debug aaa accounting"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AAAA-3-ACCTDUMP	3-Error	dump of accounting data:	The data buffer overflowed while building the accounting packet as the total length of the attributes exceed the buffer size. Last 128 bytes of buffer data is dumped.	AAA	LOG_STD_ACTION Collect the logs with these debugs by " " using commands #debug aaa api#debug aaa attr#debug aaa accounting"
AAAA-3-ACCFORKFAIL	3-Error	Failed to start accounting process. Accounting records may not be sent.	Failed to create the accounting process.	aaa	"Free up some memory."
AAAA-3-ACCFORKFAIL	3-Error	Failed to start accounting process. Accounting records may not be sent.	Failed to create the accounting process.	aaa	"Free up some memory."
AAAA-3-ACCFORKFAIL	3-Error	Failed to start accounting process. Accounting records may not be sent.	Failed to create the accounting process.	aaa	"Free up some memory."
AAAA-3-ACCFORKFAIL	3-Error	Failed to start accounting process. Accounting records may not be sent.	Failed to create the accounting process.	aaa	"Free up some memory."
AAAA-3-BADARG	3-Error	[node]AAA: bad argument [node]4x	We tried to NVGEN a non-existent AAA command.	aaa	LOG_STD_ACTION
AAAA-3-BADARG	3-Error	[node]AAA: bad argument [node]4x	We tried to NVGEN a non-existent AAA command.	aaa	LOG_STD_ACTION
AAAA-3-BADARG	3-Error	[node]AAA: bad argument [node]4x	We tried to NVGEN a non-existent AAA command.	aaa	LOG_STD_ACTION
AAAA-3-BADARG	3-Error	[node]AAA: bad argument [node]4x	We tried to NVGEN a non-existent AAA command.	aaa	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AAAA3BADAUTHENSIR	3-Error	Bad authentication data: [chars]	The data buffer overflowed while building the authentication packet as the total length of the attributes exceeded the buffer size.	AAA	LOG_STD_ACTION Collect the logs with these debugs" " by using the commands #debug aaa api#debug aaa attr#debug aaa" " authentication"
AAAA3BADAUTHENSIR	3-Error	Bad authentication data: [chars]	The data buffer overflowed while building the authentication packet as the total length of the attributes exceeded the buffer size.	AAA	LOG_STD_ACTION Collect the logs with these debugs" " by using the commands #debug aaa api#debug aaa attr#debug aaa" " authentication"
AAAA3BADAUTHENSIR	3-Error	Bad authentication data: [chars]	The data buffer overflowed while building the authentication packet as the total length of the attributes exceeded the buffer size.	AAA	LOG_STD_ACTION Collect the logs with these debugs" " by using the commands #debug aaa api#debug aaa attr#debug aaa" " authentication"
AAAA3BADAUTHENSIR	3-Error	Bad authentication data: [chars]	The data buffer overflowed while building the authentication packet as the total length of the attributes exceeded the buffer size.	AAA	LOG_STD_ACTION Collect the logs with these debugs" " by using the commands #debug aaa api#debug aaa attr#debug aaa" " authentication"
AAAA-3-BADCOMM	3-Error	Trying config command but should not be.	An internal error has occurred	aaa	LOG_STD_ACTION
AAAA-3-BADCOMM	3-Error	Trying config command but should not be.	An internal error has occurred	aaa	LOG_STD_ACTION
AAAA-3-BADCOMM	3-Error	Trying config command but should not be.	An internal error has occurred	aaa	LOG_STD_ACTION
AAAA-3-BADCOMM	3-Error	Trying config command but should not be.	An internal error has occurred	aaa	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AAAA-3-BADLIST	3-Error	[node]AAA: bad [chars] list [chars]	One of the AAA methods does not seem to have a list associated with it.	aaa	LOG_STD_ACTION
AAAA-3-BADLIST	3-Error	[node]AAA: bad [chars] list [chars]	One of the AAA methods does not seem to have a list associated with it.	aaa	LOG_STD_ACTION
AAAA-3-BADLIST	3-Error	[node]AAA: bad [chars] list [chars]	One of the AAA methods does not seem to have a list associated with it.	aaa	LOG_STD_ACTION
AAAA-3-BADLIST	3-Error	[node]AAA: bad [chars] list [chars]	One of the AAA methods does not seem to have a list associated with it.	aaa	LOG_STD_ACTION
AAAA-3-BADREG	3-Error	Illegal registry call.	An internal software error has occurred	aaa	LOG_STD_ACTION
AAAA-3-BADREG	3-Error	Illegal registry call.	An internal software error has occurred	aaa	LOG_STD_ACTION
AAAA-3-BADREG	3-Error	Illegal registry call.	An internal software error has occurred	aaa	LOG_STD_ACTION
AAAA-3-BADREG	3-Error	Illegal registry call.	An internal software error has occurred	aaa	LOG_STD_ACTION
AAAA-3-BADSTATE	3-Error	\n[node]AAA: Bad state for [chars] list name [dec]	A AAA method list is neither default nor named. This is bad.	aaa	LOG_STD_ACTION
AAAA-3-BADSTATE	3-Error	\n[node]AAA: Bad state for [chars] list name [dec]	A AAA method list is neither default nor named. This is bad.	aaa	LOG_STD_ACTION
AAAA-3-BADSTATE	3-Error	\n[node]AAA: Bad state for [chars] list name [dec]	A AAA method list is neither default nor named. This is bad.	aaa	LOG_STD_ACTION
AAAA-3-BADSTATE	3-Error	\n[node]AAA: Bad state for [chars] list name [dec]	A AAA method list is neither default nor named. This is bad.	aaa	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AAAA-3-BADSTR	3-Error	Bad accounting data: [chars]	During AAA accounting operations the internal database of accounting information for a user was found to be corrupt. In all cases this indicates an internal software error and that accounting information for a particular user session has been lost.	aaa	"Copy the error message exactly as it appears and report it to your " "technical support representative."
AAAA-3-BADSTR	3-Error	Bad accounting data: [chars]	During AAA accounting operations the internal database of accounting information for a user was found to be corrupt. In all cases this indicates an internal software error and that accounting information for a particular user session has been lost.	aaa	"Copy the error message exactly as it appears and report it to your " "technical support representative."
AAAA-3-BADSTR	3-Error	Bad accounting data: [chars]	During AAA accounting operations the internal database of accounting information for a user was found to be corrupt. In all cases this indicates an internal software error and that accounting information for a particular user session has been lost.	aaa	"Copy the error message exactly as it appears and report it to your " "technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AAAA-3-BADSTR	3-Error	Bad accounting data: [chars]	During AAA accounting operations the internal database of accounting information for a user was found to be corrupt. In all cases this indicates an internal software error and that accounting information for a particular user session has been lost.	aaa	"Copy the error message exactly as it appears and report it to your " "technical support representative."
AAAA-3-DLRFORKFAIL	3-Error	Failed to fork process for [chars].	Quite likely we ran out of memory. Other explanations are possible.	aaa	LOG_STD_ACTION
AAAA-3-DLRFORKFAIL	3-Error	Failed to fork process for [chars].	Quite likely we ran out of memory. Other explanations are possible.	aaa	LOG_STD_ACTION
AAAA-3-DLRFORKFAIL	3-Error	Failed to fork process for [chars].	Quite likely we ran out of memory. Other explanations are possible.	aaa	LOG_STD_ACTION
AAAA-3-DLRFORKFAIL	3-Error	Failed to fork process for [chars].	Quite likely we ran out of memory. Other explanations are possible.	aaa	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AAA3DRCPACCI <del>FULL</del> Q	3-Error	Accounting record dropped due to a full aaa accounting queue: [chars]-[chars] [chars] [chars]	An accounting record was dropped because there are too many accounting packets enqueued.	aaa	"Disable periodic accounting if it is on. The accounting queue may " "have grown to be large which is usually due to a non-responsive " "AAA server. Use 'show radius statistics' or 'show tacacs' to see " "if the number of timeouts is increasing or if the response delay is " "unusually high."
AAA3DRCPACCI <del>FULL</del> Q	3-Error	Accounting record dropped due to a full aaa accounting queue: [chars]-[chars] [chars] [chars]	An accounting record was dropped because there are too many accounting packets enqueued.	aaa	"Disable periodic accounting if it is on. The accounting queue may " "have grown to be large which is usually due to a non-responsive " "AAA server. Use 'show radius statistics' or 'show tacacs' to see " "if the number of timeouts is increasing or if the response delay is " "unusually high."
AAA3DRCPACCI <del>FULL</del> Q	3-Error	Accounting record dropped due to a full aaa accounting queue: [chars]-[chars] [chars] [chars]	An accounting record was dropped because there are too many accounting packets enqueued.	aaa	"Disable periodic accounting if it is on. The accounting queue may " "have grown to be large which is usually due to a non-responsive " "AAA server. Use 'show radius statistics' or 'show tacacs' to see " "if the number of timeouts is increasing or if the response delay is " "unusually high."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>AAA3DROACCIFULLQ</del>	3-Error	Accounting record dropped due to a full aaa accounting queue: [chars]-[chars] [chars] [chars]	An accounting record was dropped because there are too many accounting packets enqueued.	aaa	"Disable periodic accounting if it is on. The accounting queue may " "have grown to be large which is usually due to a non-responsive " "AAA server. Use 'show radius statistics' or 'show tacacs' to see " "if the number of timeouts is increasing or if the response delay is " "unusually high."
<del>AAA3DROACCLOWMEM</del>	3-Error	Accounting record dropped due to low memory: [chars]-[chars] [chars] [chars]	An accounting record dropped due to low memory.	aaa	"Disable periodic accounting if it is on. Try to reduce the load " "on the router."
<del>AAA3DROACCLOWMEM</del>	3-Error	Accounting record dropped due to low memory: [chars]-[chars] [chars] [chars]	An accounting record dropped due to low memory.	aaa	"Disable periodic accounting if it is on. Try to reduce the load " "on the router."
<del>AAA3DROACCLOWMEM</del>	3-Error	Accounting record dropped due to low memory: [chars]-[chars] [chars] [chars]	An accounting record dropped due to low memory.	aaa	"Disable periodic accounting if it is on. Try to reduce the load " "on the router."
<del>AAA3DROACCLOWMEM</del>	3-Error	Accounting record dropped due to low memory: [chars]-[chars] [chars] [chars]	An accounting record dropped due to low memory.	aaa	"Disable periodic accounting if it is on. Try to reduce the load " "on the router."
<del>AAA3DROACCLOWMEM</del>	3-Error	Accounting record dropped due to low memory: [chars]-[chars] [chars] [chars]	An accounting record dropped due to low memory.	aaa	"Disable periodic accounting if it is on. Try to reduce the load " "on the router."
<del>AAA3DROACCQUEXCEED</del>	3-Error	accounting record dropped output record queue full: [chars]-[chars] [chars] [chars]\n	An accounting record was dropped. The record could not be enqueued because the number of records in the output queue has exceeded the system limit.	aaa	"Disable periodic accounting if it is on. " " <b>[no]</b> aaa accounting update newinfo " "periodic <b>[interval]</b> "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>AAAADROPQUEUEFULL</del>	3-Error	accounting record dropped output record queue full: [chars]-[chars] [chars] [chars]\n	An accounting record was dropped. The record could not be enqueued because the number of records in the output queue has exceeded the system limit.	aaa	"Disable periodic accounting if it is on. " "<CmdBold>[no] aaa accounting update newinfo " "periodic <interval><NoCmdBold>"
<del>AAAADROPQUEUEFULL</del>	3-Error	accounting record dropped output record queue full: [chars]-[chars] [chars] [chars]\n	An accounting record was dropped. The record could not be enqueued because the number of records in the output queue has exceeded the system limit.	aaa	"Disable periodic accounting if it is on. " "<CmdBold>[no] aaa accounting update newinfo " "periodic <interval><NoCmdBold>"
<del>AAAADROPQUEUEFULL</del>	3-Error	accounting record dropped output record queue full: [chars]-[chars] [chars] [chars]\n	An accounting record was dropped. The record could not be enqueued because the number of records in the output queue has exceeded the system limit.	aaa	"Disable periodic accounting if it is on. " "<CmdBold>[no] aaa accounting update newinfo " "periodic <interval><NoCmdBold>"
<del>AAAADROPACCISNDAL</del>	3-Error	Accounting record dropped send to server failed: [chars]-[chars] [chars] [chars]	An attempt to send an accounting record to a server failed.	aaa	"Check that the server TACACS+ or RADIUS is operational. Next "
<del>AAAADROPACCISNDAL</del>	3-Error	Accounting record dropped send to server failed: [chars]-[chars] [chars] [chars]	An attempt to send an accounting record to a server failed.	aaa	"Check that the server TACACS+ or RADIUS is operational. Next "
<del>AAAADROPACCISNDAL</del>	3-Error	Accounting record dropped send to server failed: [chars]-[chars] [chars] [chars]	An attempt to send an accounting record to a server failed.	aaa	"Check that the server TACACS+ or RADIUS is operational. Next "
<del>AAAADROPACCISNDAL</del>	3-Error	Accounting record dropped send to server failed: [chars]-[chars] [chars] [chars]	An attempt to send an accounting record to a server failed.	aaa	"Check that the server TACACS+ or RADIUS is operational. Next "



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AAAA-3-ILLEGALNAME	3-Error	Illegal [chars] [chars] name \[chars]\ rejected	A method-list name should not be the same as a method name. Please choose a different name for the method list.	aaa	"Pick a different method-list name that is not also a method-name."
AAAA-3-ILLEGALNAME	3-Error	Illegal [chars] [chars] name \[chars]\ rejected	A method-list name should not be the same as a method name. Please choose a different name for the method list.	aaa	"Pick a different method-list name that is not also a method-name."
AAAA-3-ILLEGALNAME	3-Error	Illegal [chars] [chars] name \[chars]\ rejected	A method-list name should not be the same as a method name. Please choose a different name for the method list.	aaa	"Pick a different method-list name that is not also a method-name."
AAAA-3-ILLEGALNAME	3-Error	Illegal [chars] [chars] name \[chars]\ rejected	A method-list name should not be the same as a method name. Please choose a different name for the method list.	aaa	"Pick a different method-list name that is not also a method-name."
AAAA-3-ILLSGNAME	3-Error	Illegal server-group name [chars] type [chars].	The given server-group name is a name that could conflict with internally chosen lists.	aaa	"Please pick a different server-group name."
AAAA-3-ILLSGNAME	3-Error	Illegal server-group name [chars] type [chars].	The given server-group name is a name that could conflict with internally chosen lists.	aaa	"Please pick a different server-group name."
AAAA-3-ILLSGNAME	3-Error	Illegal server-group name [chars] type [chars].	The given server-group name is a name that could conflict with internally chosen lists.	aaa	"Please pick a different server-group name."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AAAA-3-ILLSGNAME	3-Error	Illegal server-group name [chars] type [chars].	The given server-group name is a name that could conflict with internally chosen lists.	aaa	"Please pick a different server-group name."
AAAA3INTERNAL_ERRCR	3-Error	[chars]	This is an internal software error.	aaa	LOG_STD_ACTION
AAAA3INTERNAL_ERRCR	3-Error	[chars]	This is an internal software error.	aaa	LOG_STD_ACTION
AAAA3INTERNAL_ERRCR	3-Error	[chars]	This is an internal software error.	aaa	LOG_STD_ACTION
AAAA3INTERNAL_ERRCR	3-Error	[chars]	This is an internal software error.	aaa	LOG_STD_ACTION
AAAA3INVALIDATTRIST	3-Error	aaa attribute list CLI is not valid when configuring in sub-mode.	An internal error has occurred	aaa	LOG_STD_ACTION
AAAA3INVALIDATTRIST	3-Error	aaa attribute list CLI is not valid when configuring in sub-mode.	An internal error has occurred	aaa	LOG_STD_ACTION
AAAA3INVALIDATTRIST	3-Error	aaa attribute list CLI is not valid when configuring in sub-mode.	An internal error has occurred	aaa	LOG_STD_ACTION
AAAA3INVALIDATTRIST	3-Error	aaa attribute list CLI is not valid when configuring in sub-mode.	An internal error has occurred	aaa	LOG_STD_ACTION
AAAA-3-INVALIDLIST	3-Error	[node]AAA: invalid [chars] list [dec].	One of the AAA methods lists has inconsistent settings	aaa	LOG_STD_ACTION
AAAA-3-INVALIDLIST	3-Error	[node]AAA: invalid [chars] list [dec].	One of the AAA methods lists has inconsistent settings	aaa	LOG_STD_ACTION
AAAA-3-INVALIDLIST	3-Error	[node]AAA: invalid [chars] list [dec].	One of the AAA methods lists has inconsistent settings	aaa	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AAAA-3-INVALIDLIST	3-Error	[node]AAA: invalid [chars] list [dec].	One of the AAA methods lists has inconsistent settings	aaa	LOG_STD_ACTION
AAAA-3-INVSTATE	3-Error	[chars] AUTHOR/[chars]: Internal state is invalid: astruct 0x[hec] ustruct 0x[hec]	One of the two mentioned data-structures is not set but is needed here. This is an internal software error.	aaa	LOG_STD_ACTION
AAAA-3-INVSTATE	3-Error	[chars] AUTHOR/[chars]: Internal state is invalid: astruct 0x[hec] ustruct 0x[hec]	One of the two mentioned data-structures is not set but is needed here. This is an internal software error.	aaa	LOG_STD_ACTION
AAAA-3-INVSTATE	3-Error	[chars] AUTHOR/[chars]: Internal state is invalid: astruct 0x[hec] ustruct 0x[hec]	One of the two mentioned data-structures is not set but is needed here. This is an internal software error.	aaa	LOG_STD_ACTION
AAAA-3-INVSTATE	3-Error	[chars] AUTHOR/[chars]: Internal state is invalid: astruct 0x[hec] ustruct 0x[hec]	One of the two mentioned data-structures is not set but is needed here. This is an internal software error.	aaa	LOG_STD_ACTION
AAAA-3-LISTCREATE	3-Error	The list [dec] for [chars] is NULL. This should never be.	One of the method-lists created at startup wasn't created. This may cause a reload	aaa	LOG_STD_ACTION
AAAA-3-LISTCREATE	3-Error	The list [dec] for [chars] is NULL. This should never be.	One of the method-lists created at startup wasn't created. This may cause a reload	aaa	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AAAA-3-LISTCREATE	3-Error	The list [dec] for [chars] is NULL. This should never be.	One of the method-lists created at startup wasn't created. This may cause a reload	aaa	LOG_STD_ACTION
AAAA-3-LISTCREATE	3-Error	The list [dec] for [chars] is NULL. This should never be.	One of the method-lists created at startup wasn't created. This may cause a reload	aaa	LOG_STD_ACTION
AAAA-3-MKTIMERFAIL	3-Error	Failed to create periodic accounting timer for user [chars]. This user may not generate periodic accounting records.	Failed to malloc a timer struct for periodic accounting.	aaa	"Free up some memory and have user re-authenticate."
AAAA-3-MKTIMERFAIL	3-Error	Failed to create periodic accounting timer for user [chars]. This user may not generate periodic accounting records.	Failed to malloc a timer struct for periodic accounting.	aaa	"Free up some memory and have user re-authenticate."
AAAA-3-MKTIMERFAIL	3-Error	Failed to create periodic accounting timer for user [chars]. This user may not generate periodic accounting records.	Failed to malloc a timer struct for periodic accounting.	aaa	"Free up some memory and have user re-authenticate."
AAAA-3-MKTIMERFAIL	3-Error	Failed to create periodic accounting timer for user [chars]. This user may not generate periodic accounting records.	Failed to malloc a timer struct for periodic accounting.	aaa	"Free up some memory and have user re-authenticate."
AAAA-3-MKTIMERFAIL	3-Error	Failed to create periodic accounting timer for user [chars]. This user may not generate periodic accounting records.	Failed to malloc a timer struct for periodic accounting.	aaa	"Free up some memory and have user re-authenticate."
AAAA-3-MKTIMERNAID	3-Error	Invalid request to create periodic accounting timer for user [chars]. Timer already exists.	Invalid client usage of timer struct for periodic accounting.	aaa	"Copy the error message exactly as it appears and report it to your " "technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AAAA3MKIMBRNVALD	3-Error	Invalid request to create periodic accounting timer for user [chars]. Timer already exists.	Invalid client usage of timer struct for periodic accounting.	aaa	"Copy the error message exactly as it appears and report it to your " "technical support representative."
AAAA3MKIMBRNVALD	3-Error	Invalid request to create periodic accounting timer for user [chars]. Timer already exists.	Invalid client usage of timer struct for periodic accounting.	aaa	"Copy the error message exactly as it appears and report it to your " "technical support representative."
AAAA3MKIMBRNVALD	3-Error	Invalid request to create periodic accounting timer for user [chars]. Timer already exists.	Invalid client usage of timer struct for periodic accounting.	aaa	"Copy the error message exactly as it appears and report it to your " "technical support representative."
AAAA3NOADMINPROC	3-Error	[chars]	Administrative process has been enabled but somehow could not run	-	-
AAAA3NOADMINPROC	3-Error	[chars]	Administrative process has been enabled but somehow could not run	-	-
AAAA3NOADMINPROC	3-Error	[chars]	Administrative process has been enabled but somehow could not run	-	-
AAAA3NOADMINPROC	3-Error	[chars]	Administrative process has been enabled but somehow could not run	-	-
AAAA-3NOFREELISTS	3-Error	[node]AAA: No free [chars] lists for \[chars]\	You have reached the maximum number of possible authentication lists for this method.	aaa	LOG_SID_RECUR_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AAAA-3-NOFREELISTS	3-Error	[node]AAA: No free [chars] lists for \[chars]\	You have reached the maximum number of possible authentication lists for this method.	aaa	LOG_SID_RECUR_ACTION
AAAA-3-NOFREELISTS	3-Error	[node]AAA: No free [chars] lists for \[chars]\	You have reached the maximum number of possible authentication lists for this method.	aaa	LOG_SID_RECUR_ACTION
AAAA-3-NOFREELISTS	3-Error	[node]AAA: No free [chars] lists for \[chars]\	You have reached the maximum number of possible authentication lists for this method.	aaa	LOG_SID_RECUR_ACTION
AAAA-3-NOLIST	3-Error	[chars]: no method list-name.	An internal software error.	aaa	LOG_STD_ACTION
AAAA-3-NOLIST	3-Error	[chars]: no method list-name.	An internal software error.	aaa	LOG_STD_ACTION
AAAA-3-NOLIST	3-Error	[chars]: no method list-name.	An internal software error.	aaa	LOG_STD_ACTION
AAAA-3-NOLIST	3-Error	[chars]: no method list-name.	An internal software error.	aaa	LOG_STD_ACTION
AAAA-3-NOREG	3-Error	[chars] method [dec] has no registry!	An internal error has occurred	aaa	LOG_STD_ACTION
AAAA-3-NOREG	3-Error	[chars] method [dec] has no registry!	An internal error has occurred	aaa	LOG_STD_ACTION
AAAA-3-NOREG	3-Error	[chars] method [dec] has no registry!	An internal error has occurred	aaa	LOG_STD_ACTION
AAAA-3-NOREG	3-Error	[chars] method [dec] has no registry!	An internal error has occurred	aaa	LOG_STD_ACTION
AAAA-3-NOSERV	3-Error	No name for servergroup in method [chars]	An internal error has occurred	aaa	LOG_STD_ACTION
AAAA-3-NOSERV	3-Error	No name for servergroup in method [chars]	An internal error has occurred	aaa	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AAAA-3-NOSERV	3-Error	No name for servergroup in method [chars]	An internal error has occurred	aaa	LOG_STD_ACTION
AAAA-3-NOSERV	3-Error	No name for servergroup in method [chars]	An internal error has occurred	aaa	LOG_STD_ACTION
AAAA-3-NOSG	3-Error	No server-group passed through parser.	An internal error has occurred	aaa	LOG_STD_ACTION
AAAA-3-NOSG	3-Error	No server-group passed through parser.	An internal error has occurred	aaa	LOG_STD_ACTION
AAAA-3-NOSG	3-Error	No server-group passed through parser.	An internal error has occurred	aaa	LOG_STD_ACTION
AAAA-3-NOSG	3-Error	No server-group passed through parser.	An internal error has occurred	aaa	LOG_STD_ACTION
AAAA-3-NULPORT	3-Error	Could not establish port information	This message indicates an internal software error. AAA could not determine a valid port string based on the information provided to it via a client.	aaa	"Copy the error message exactly as it appears and report it to your " "technical support representative."
AAAA-3-NULPORT	3-Error	Could not establish port information	This message indicates an internal software error. AAA could not determine a valid port string based on the information provided to it via a client.	aaa	"Copy the error message exactly as it appears and report it to your " "technical support representative."
AAAA-3-NULPORT	3-Error	Could not establish port information	This message indicates an internal software error. AAA could not determine a valid port string based on the information provided to it via a client.	aaa	"Copy the error message exactly as it appears and report it to your " "technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AAAA-3-NULPORT	3-Error	Could not establish port information	This message indicates an internal software error. AAA could not determine a valid port string based on the information provided to it via a client.	aaa	"Copy the error message exactly as it appears and report it to your " "technical support representative."
AAAA-3-NULUSR	3-Error	accounting for null user	This message indicates an internal software error. During shutdown of a line or interface the system tried to send accounting information via AAA but could not find the user to which the accounting information belonged. The most likely reason for this error is trying to do accounting twice for the same event. This error message can occur without any loss of accounting information.	aaa	"Copy the error message exactly as it appears and report it to your " "technical support representative."



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AAAA-3-NULUSR	3-Error	accounting for null user	This message indicates an internal software error. During shutdown of a line or interface the system tried to send accounting information via AAA but could not find the user to which the accounting information belonged. The most likely reason for this error is trying to do accounting twice for the same event. This error message can occur without any loss of accounting information.	aaa	"Copy the error message exactly as it appears and report it to your " "technical support representative."
AAAA-3-NULUSR	3-Error	accounting for null user	This message indicates an internal software error. During shutdown of a line or interface the system tried to send accounting information via AAA but could not find the user to which the accounting information belonged. The most likely reason for this error is trying to do accounting twice for the same event. This error message can occur without any loss of accounting information.	aaa	"Copy the error message exactly as it appears and report it to your " "technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AAAA-3-NULUSR	3-Error	accounting for null user	This message indicates an internal software error. During shutdown of a line or interface the system tried to send accounting information via AAA but could not find the user to which the accounting information belonged. The most likely reason for this error is trying to do accounting twice for the same event. This error message can occur without any loss of accounting information.	aaa	"Copy the error message exactly as it appears and report it to your " "technical support representative."
AAAA-3-OVERWRITE	3-Error	Overwrote internal buffer space [chars]	An internal software error.	aaa	"Report to tac@cisco.com."
AAAA-3-OVERWRITE	3-Error	Overwrote internal buffer space [chars]	An internal software error.	aaa	"Report to tac@cisco.com."
AAAA-3-OVERWRITE	3-Error	Overwrote internal buffer space [chars]	An internal software error.	aaa	"Report to tac@cisco.com."
AAAA-3-OVERWRITE	3-Error	Overwrote internal buffer space [chars]	An internal software error.	aaa	"Report to tac@cisco.com."
AAAA-3-FORKFAL	3-Error	Failed to start periodic accounting process. Periodic accounting records may not be sent.	Failed to create the periodic accounting process.	aaa	"Free up some memory."
AAAA-3-FORKFAL	3-Error	Failed to start periodic accounting process. Periodic accounting records may not be sent.	Failed to create the periodic accounting process.	aaa	"Free up some memory."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AAA3PERIODICFORKAL	3-Error	Failed to start periodic accounting process. Periodic accounting records may not be sent.	Failed to create the periodic accounting process.	aaa	"Free up some memory."
AAA3PERIODICFORKAL	3-Error	Failed to start periodic accounting process. Periodic accounting records may not be sent.	Failed to create the periodic accounting process.	aaa	"Free up some memory."
AAA-3PERNOTIMER	3-Error	AAA/ACCT/TIMER: Periodic update but no timer.	We are trying to free a timer and the method is PERIODIC but no timer seems to exist.	aaa	LOG_STD_ACTION
AAA-3PERNOTIMER	3-Error	AAA/ACCT/TIMER: Periodic update but no timer.	We are trying to free a timer and the method is PERIODIC but no timer seems to exist.	aaa	LOG_STD_ACTION
AAA-3PERNOTIMER	3-Error	AAA/ACCT/TIMER: Periodic update but no timer.	We are trying to free a timer and the method is PERIODIC but no timer seems to exist.	aaa	LOG_STD_ACTION
AAA-3PERNOTIMER	3-Error	AAA/ACCT/TIMER: Periodic update but no timer.	We are trying to free a timer and the method is PERIODIC but no timer seems to exist.	aaa	LOG_STD_ACTION
AAA-3RELOGIN	3-Error	sanity check in re-login [chars] to [chars]	A software or hardware error occurred.	aaa	"Copy the error message exactly as it appears and report it to your " "technical support representative."
AAA-3RELOGIN	3-Error	sanity check in re-login [chars] to [chars]	A software or hardware error occurred.	aaa	"Copy the error message exactly as it appears and report it to your " "technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AAAA-3-RELOGIN	3-Error	sanity check in re-login [chars] to [chars]	A software or hardware error occurred.	aaa	"Copy the error message exactly as it appears and report it to your " "technical support representative."
AAAA-3-RELOGIN	3-Error	sanity check in re-login [chars] to [chars]	A software or hardware error occurred.	aaa	"Copy the error message exactly as it appears and report it to your " "technical support representative."
AAAA-3-SGDUPFREE	3-Error	Duplicate free of server group 0x[hec]	This is an internal software error.	aaa	LOG_STD_ACTION
AAAA-3-SGDUPFREE	3-Error	Duplicate free of server group 0x[hec]	This is an internal software error.	aaa	LOG_STD_ACTION
AAAA-3-SGDUPFREE	3-Error	Duplicate free of server group 0x[hec]	This is an internal software error.	aaa	LOG_STD_ACTION
AAAA-3-SGDUPFREE	3-Error	Duplicate free of server group 0x[hec]	This is an internal software error.	aaa	LOG_STD_ACTION
AAAA-3-STRCREATE	3-Error	str_create overwrote its internal buffer.	An internal buffer used to assemble a string was exceeded thus possibly corrupting other memory.	aaa	LOG_STD_ACTION
AAAA-3-STRCREATE	3-Error	str_create overwrote its internal buffer.	An internal buffer used to assemble a string was exceeded thus possibly corrupting other memory.	aaa	LOG_STD_ACTION
AAAA-3-STRCREATE	3-Error	str_create overwrote its internal buffer.	An internal buffer used to assemble a string was exceeded thus possibly corrupting other memory.	aaa	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AAAA-3-STRCREATE	3-Error	str_create overwrote its internal buffer.	An internal buffer used to assemble a string was exceeded thus possibly corrupting other memory.	aaa	LOG_STD_ACTION
AAAA-3-SUBTYPE	3-Error	Bad Subtype [dec] for \[chars]\ [dec]	An internal software error.	aaa	"Report to tac@cisco.com."
AAAA-3-SUBTYPE	3-Error	Bad Subtype [dec] for \[chars]\ [dec]	An internal software error.	aaa	"Report to tac@cisco.com."
AAAA-3-SUBTYPE	3-Error	Bad Subtype [dec] for \[chars]\ [dec]	An internal software error.	aaa	"Report to tac@cisco.com."
AAAA-3-SUBTYPE	3-Error	Bad Subtype [dec] for \[chars]\ [dec]	An internal software error.	aaa	"Report to tac@cisco.com."
AAAA-3-TIMERNOPER	3-Error	AAA/ACCT/TIMER: No periodic update but timer set.	We are trying to free a timer but the update method is not PERIODIC and so no timer should exist.	aaa	LOG_STD_ACTION
AAAA-3-TIMERNOPER	3-Error	AAA/ACCT/TIMER: No periodic update but timer set.	We are trying to free a timer but the update method is not PERIODIC and so no timer should exist.	aaa	LOG_STD_ACTION
AAAA-3-TIMERNOPER	3-Error	AAA/ACCT/TIMER: No periodic update but timer set.	We are trying to free a timer but the update method is not PERIODIC and so no timer should exist.	aaa	LOG_STD_ACTION
AAAA-3-TIMERNOPER	3-Error	AAA/ACCT/TIMER: No periodic update but timer set.	We are trying to free a timer but the update method is not PERIODIC and so no timer should exist.	aaa	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AAAA4BADMEIFNAME	4-Warning	Bad [chars] method-list name \[chars]\ please choose another name	A method-list name should not be the same as a method name. Please choose a different name for the method list.	aaa	"Pick a different method-list name that is not also a method-name."
AAAA4BADMEIFNAME	4-Warning	Bad [chars] method-list name \[chars]\ this is only a warning	A method-list name should not be the same as a method name. Please choose a different name for the method list.	aaa	"Pick a different method-list name that is not also a method-name."
AAAA4BADMEIFNAME	4-Warning	Bad [chars] method-list name \[chars]\ this is only a warning	A method-list name should not be the same as a method name. Please choose a different name for the method list.	aaa	"Pick a different method-list name that is not also a method-name."
AAAA4BADMEIFNAME	4-Warning	Bad [chars] method-list name \[chars]\ this is only a warning	A method-list name should not be the same as a method name. Please choose a different name for the method list.	aaa	"Pick a different method-list name that is not also a method-name."
AAAA4BADSGNAME	4-Warning	Bad server-group name [chars] type [chars].	The given server-group name either doesn't exist or the given type does not match the defined server-group.	aaa	"Verify that the group exists and has the same " "type."
AAAA4BADSGNAME	4-Warning	Bad server-group name [chars] type [chars].	The given server-group name either doesn't exist or the given type does not match the defined server-group.	aaa	"Verify that the group exists and has the same " "type."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AAAA-4BADSGNAME	4-Warning	Bad server-group name [chars] type [chars].	The given server-group name either doesn't exist or the given type does not match the defined server-group.	aaa	"Verify that the group exists and has the same " "type."
AAAA-4BADSGNAME	4-Warning	Bad server-group name [chars] type [chars].	The given server-group name either doesn't exist or the given type does not match the defined server-group.	aaa	"Verify that the group exists and has the same " "type."
AAAA-4BADSGTYPE	4-Warning	Server-group [chars] is not of type [chars].	The given server-group name does not match the specified type	aaa	"Verify that the group exists and has " "the same type."
AAAA-4BADSGTYPE	4-Warning	Server-group [chars] is not of type [chars].	The given server-group name does not match the specified type	aaa	"Verify that the group exists and has " "the same type."
AAAA-4BADSGTYPE	4-Warning	Server-group [chars] is not of type [chars].	The given server-group name does not match the specified type	aaa	"Verify that the group exists and has " "the same type."
AAAA-4BADSGTYPE	4-Warning	Server-group [chars] is not of type [chars].	The given server-group name does not match the specified type	aaa	"Verify that the group exists and has " "the same type."
AAAA-4CLI_DEPRECATED	4-Warning	[chars]	CLI deprecated. New CLI to be used	aaa	LOG_STD_ACTION
AAAA-4CLI_DEPRECATED	4-Warning	[chars]	CLI deprecated. New CLI to be used	aaa	LOG_STD_ACTION
AAAA-4CLI_DEPRECATED	4-Warning	[chars]	CLI deprecated. New CLI to be used	aaa	LOG_STD_ACTION
AAAA-4CLI_DEPRECATED	4-Warning	[chars]	CLI deprecated. New CLI to be used	aaa	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AAAA4DNISGPUNDEF	4-Warning	Warning: DNIS group [chars] is not defined.	The DNIS group was used without defining it first. It should be defined before use.	aaa	"Define the DNIS group before using it."
AAAA4DNISGPUNDEF	4-Warning	Warning: DNIS group [chars] is not defined.	The DNIS group was used without defining it first. It should be defined before use.	aaa	"Define the DNIS group before using it."
AAAA4DNISGPUNDEF	4-Warning	Warning: DNIS group [chars] is not defined.	The DNIS group was used without defining it first. It should be defined before use.	aaa	"Define the DNIS group before using it."
AAAA4DNISGPUNDEF	4-Warning	Warning: DNIS group [chars] is not defined.	The DNIS group was used without defining it first. It should be defined before use.	aaa	"Define the DNIS group before using it."
AAAA4NOCACHEPROC	4-Warning	The aaa cache process is not created. Please configure aaa cache profile first	Cache was listed in a method-list without defining it first. Cache profile should be defined before use.	aaa	"Define the cache profile before using it."
AAAA4NOCACHEPROC	4-Warning	The aaa cache process is not created. Please configure aaa cache profile first	Cache was listed in a method-list without defining it first. Cache profile should be defined before use.	aaa	"Define the cache profile before using it."
AAAA4NOCACHEPROC	4-Warning	The aaa cache process is not created. Please configure aaa cache profile first	Cache was listed in a method-list without defining it first. Cache profile should be defined before use.	aaa	"Define the cache profile before using it."
AAAA4NOCACHEPROC	4-Warning	The aaa cache process is not created. Please configure aaa cache profile first	Cache was listed in a method-list without defining it first. Cache profile should be defined before use.	aaa	"Define the cache profile before using it."



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AAAA-4-NOSERVER	4-Warning	Warning: Server [chars] is not defined.	The given server is not on the master-list and should be defined or unexpected things might happen.	aaa	"Please define the server on the appropriate " "master-list as soon as possible."
AAAA-4-NOSERVER	4-Warning	Warning: Server [chars] is not defined.	The given server is not on the master-list and should be defined or unexpected things might happen.	aaa	"Please define the server on the appropriate " "master-list as soon as possible."
AAAA-4-NOSERVER	4-Warning	Warning: Server [chars] is not defined.	The given server is not on the master-list and should be defined or unexpected things might happen.	aaa	"Please define the server on the appropriate " "master-list as soon as possible."
AAAA-4-NOSERVER	4-Warning	Warning: Server [chars] is not defined.	The given server is not on the master-list and should be defined or unexpected things might happen.	aaa	"Please define the server on the appropriate " "master-list as soon as possible."
AAAA-4-SERVNOGRP	4-Warning	Warning: Server [node][dec][dec] is not part of server group [chars].	The server does not belong to the specified server group	aaa	"Please check that the specified server belongs " "to the server group"
AAAA-4-SERVNOGRP	4-Warning	Warning: Server [node][dec][dec] is not part of server group [chars].	The server does not belong to the specified server group	aaa	"Please check that the specified server belongs " "to the server group"
AAAA-4-SERVNOGRP	4-Warning	Warning: Server [node][dec][dec] is not part of server group [chars].	The server does not belong to the specified server group	aaa	"Please check that the specified server belongs " "to the server group"
AAAA-4-SERVNOGRP	4-Warning	Warning: Server [node][dec][dec] is not part of server group [chars].	The server does not belong to the specified server group	aaa	"Please check that the specified server belongs " "to the server group"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AAAA4SERVNOIRADIUS	4-Warning	The server-group \[chars] is not a radius server group. Please define \[chars] as a radius server group.	The protocol used by the server-group doesn't support the configured aaa action.	aaa	"Use a radius server-group."
AAAA4SERVNOIRADIUS	4-Warning	The server-group \[chars] is not a radius server group. Please define \[chars] as a radius server group.	The protocol used by the server-group doesn't support the configured aaa action.	aaa	"Use a radius server-group."
AAAA4SERVNOIRADIUS	4-Warning	The server-group \[chars] is not a radius server group. Please define \[chars] as a radius server group.	The protocol used by the server-group doesn't support the configured aaa action.	aaa	"Use a radius server-group."
AAAA4SERVNOIRADIUS	4-Warning	The server-group \[chars] is not a radius server group. Please define \[chars] as a radius server group.	The protocol used by the server-group doesn't support the configured aaa action.	aaa	"Use a radius server-group."
AAAA4SERVNOITACPLUS	4-Warning	The server-group \[chars] is not a tacacs+ server group. Please define \[chars] as a tacacs+ server group.	The protocol used by the server-group doesn't support the configured aaa action.	aaa	"Use a tacacs+ server-group."
AAAA4SERVNOITACPLUS	4-Warning	The server-group \[chars] is not a tacacs+ server group. Please define \[chars] as a tacacs+ server group.	The protocol used by the server-group doesn't support the configured aaa action.	aaa	"Use a tacacs+ server-group."
AAAA4SERVNOITACPLUS	4-Warning	The server-group \[chars] is not a tacacs+ server group. Please define \[chars] as a tacacs+ server group.	The protocol used by the server-group doesn't support the configured aaa action.	aaa	"Use a tacacs+ server-group."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AAAA4SERVNOTACCLUS	4-Warning	The server-group \[chars]\ is not a tacacs+ server group. Please define \[chars]\ as a tacacs+ server group.	The protocol used by the server-group doesn't support the configured aaa action.	aaa	"Use a tacacs+ server-group."
AAAA4-SERVUNDEF	4-Warning	The server-group \[chars]\ is not defined. Please define it.	A given server-group was listed in a method-list without defining it first. Server-groups should be defined before use.	aaa	"Define the server-group before using it."
AAAA4-SERVUNDEF	4-Warning	The server-group \[chars]\ is not defined. Please define it.	A given server-group was listed in a method-list without defining it first. Server-groups should be defined before use.	aaa	"Define the server-group before using it."
AAAA4-SERVUNDEF	4-Warning	The server-group \[chars]\ is not defined. Please define it.	A given server-group was listed in a method-list without defining it first. Server-groups should be defined before use.	aaa	"Define the server-group before using it."
AAAA4-SERVUNDEF	4-Warning	The server-group \[chars]\ is not defined. Please define it.	A given server-group was listed in a method-list without defining it first. Server-groups should be defined before use.	aaa	"Define the server-group before using it."
AAAA4-SERVUNDEF	4-Warning	The server-group \[chars]\ is not defined. Please define it.	A given server-group was listed in a method-list without defining it first. Server-groups should be defined before use.	aaa	"Define the server-group before using it."
AAAA4UNSUPWAITSTART	4-Warning	[node]AAA: Unsupported option wait-start mapped to start-stop.	wait-start accounting is not supported. It is being mapped to start-stop	aaa	"wait-start accounting is not supported. It is being mapped to start-stop"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AAAA4-UNSLPWAIISTART	4-Warning	[node]AAA: Unsupported option wait-start mapped to start-stop.	wait-start accounting is not supported. It is being mapped to start-stop	aaa	"wait-start accounting is not supported. It is being mapped to start-stop"
AAAA4-UNSLPWAIISTART	4-Warning	[node]AAA: Unsupported option wait-start mapped to start-stop.	wait-start accounting is not supported. It is being mapped to start-stop	aaa	"wait-start accounting is not supported. It is being mapped to start-stop"
AAAA4-UNSLPWAIISTART	4-Warning	[node]AAA: Unsupported option wait-start mapped to start-stop.	wait-start accounting is not supported. It is being mapped to start-stop	aaa	"wait-start accounting is not supported. It is being mapped to start-stop"
AAAA6-ACCTLOCAL	6-Information	Username: [chars] Privilege level: [dec] Command: [chars]	AAA local accounting log message	aaa	"This information is to store buffered logs" "locally and send to SYSLOG server"
AAAA6-ACCTLOCAL	6-Information	Username: [chars] Privilege level: [dec] Command: [chars]	AAA local accounting log message	aaa	"This information is to store buffered logs" "locally and send to SYSLOG server"
AAAA6-ACCTSTART	6-Information	[chars]	A AAA accounting start message.	aaa	"This information is for information only."
AAAA6-ACCTSTART	6-Information	[chars]	A AAA accounting start message.	aaa	"This information is for information only."
AAAA6-ACCTSTART	6-Information	[chars]	A AAA accounting start message.	aaa	"This information is for information only."
AAAA6-ACCTSTART	6-Information	[chars]	A AAA accounting start message.	aaa	"This information is for information only."
AAAA6-ACCTSTOP	6-Information	[chars]	A AAA accounting stop message.	aaa	"This information is for information only."
AAAA6-ACCTSTOP	6-Information	[chars]	A AAA accounting stop message.	aaa	"This information is for information only."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AAAA-6-ACCTSTOP	6-Information	[chars]	A AAA accounting stop message.	aaa	"This information is for information only."
AAAA-6-ACCTSTOP	6-Information	[chars]	A AAA accounting stop message.	aaa	"This information is for information only."
AAAA-6-ACCTWATCH	6-Information	[chars]	A AAA accounting watchdog/update message.	aaa	"This information is for information only."
AAAA-6-ACCTWATCH	6-Information	[chars]	A AAA accounting watchdog/update message.	aaa	"This information is for information only."
AAAA-6-ACCTWATCH	6-Information	[chars]	A AAA accounting watchdog/update message.	aaa	"This information is for information only."
AAAA-6-ACCTWATCH	6-Information	[chars]	A AAA accounting watchdog/update message.	aaa	"This information is for information only."
AAAA-6-ADMINMSG	6-Information	[chars] [chars]: [chars]	This administrative message was passed to the NAS from the AAA server	aaa	"No action need be taken but the message may " "contain usefull information regarding some event " "on the server"
AAAA-6-ADMINMSG	6-Information	[chars] [chars]: [chars]	This administrative message was passed to the NAS from the AAA server	aaa	"No action need be taken but the message may " "contain usefull information regarding some event " "on the server"
AAAA-6-ADMINMSG	6-Information	[chars] [chars]: [chars]	This administrative message was passed to the NAS from the AAA server	aaa	"No action need be taken but the message may " "contain usefull information regarding some event " "on the server"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AAAA-6-ADMINMSG	6-Information	[chars] [chars]: [chars]	This administrative message was passed to the NAS from the AAA server	aaa	"No action need be taken but the message may " "contain usefull information regarding some event " "on the server"
AAAA-6-SERVERMSG	6-Information	[chars] [chars]: [chars]	This message was passed to the NAS from the AAA server	aaa	"No action need be taken but the message may " "contain usefull information regarding some event " "on the server"
AAAA-6-SERVERMSG	6-Information	[chars] [chars]: [chars]	This message was passed to the NAS from the AAA server	aaa	"No action need be taken but the message may " "contain usefull information regarding some event " "on the server"
AAAA-6-SERVERMSG	6-Information	[chars] [chars]: [chars]	This message was passed to the NAS from the AAA server	aaa	"No action need be taken but the message may " "contain usefull information regarding some event " "on the server"
AAAA-6-SERVERMSG	6-Information	[chars] [chars]: [chars]	This message was passed to the NAS from the AAA server	aaa	"No action need be taken but the message may " "contain usefull information regarding some event " "on the server"
AC-3-AC_SANITY	3-Error	[chars]	A unexpected sanity check failed during Attachment Circuit processing.	ac	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AC-3-AC_SANITY	3-Error	[chars]	A unexpected sanity check failed during Attachment Circuit processing.	ac	LOG_STD_ACTION
AC3AC_WS_REGISTER	3-Error	L2VPN WS registration failed for [chars]	An error was encountered when attempting to register the specified Attachment Circuit type with the Layer 2 Virtual Private Network Wire Service facility.	ac	LOG_STD_ACTION
AC3AC_WS_REGISTER	3-Error	L2VPN WS registration failed for [chars]	An error was encountered when attempting to register the specified Attachment Circuit type with the Layer 2 Virtual Private Network Wire Service facility.	ac	LOG_STD_ACTION
AC3ACMGR_NAID_HDL	3-Error	Received invalid [chars] handle	Attachment Circuit Manager receives invalid handle.	ac	LOG_STD_ACTION
AC3ACMGR_NAID_HDL	3-Error	Received invalid [chars] handle	Attachment Circuit Manager receives invalid handle.	ac	LOG_STD_ACTION
AC3ACMGR_NAID_MSG	3-Error	Received [chars]	Attachment Circuit Manager receives invalid message.	ac	LOG_STD_ACTION
AC3ACMGR_NAID_MSG	3-Error	Received [chars]	Attachment Circuit Manager receives invalid message.	ac	LOG_STD_ACTION
AC3ACMGR_MISD_CIRCUIT	3-Error	Circuit info missing in [chars] message.	AC Manager received message with missing circuit info	ac	LOG_STD_ACTION
AC3ACMGR_MISD_CIRCUIT	3-Error	Circuit info missing in [chars] message.	AC Manager received message with missing circuit info	ac	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AC3ACMGR_XDM_CREATE	3-Error	Failed to create XDM - rc %u	Attachment Circuit Manager was unable to create a Dispatch Manager instance for event handling.	ac	LOG_STD_ACTION
AC3ACMGR_XDM_CREATE	3-Error	Failed to create XDM - rc %u	Attachment Circuit Manager was unable to create a Dispatch Manager instance for event handling.	ac	LOG_STD_ACTION
AC3L2SS_BAD_HANDLE	3-Error	Corrupted L2SS handle [[hec]].	An internal L2SS Manager occurred.	ac	LOG_STD_ACTION
AC3L2SS_BAD_HANDLE	3-Error	Corrupted L2SS handle [[hec]].	An internal L2SS Manager occurred.	ac	LOG_STD_ACTION
AC3L2SS_NULL_CONTEXT	3-Error	Encountered a NULL context in [chars]	Encountered a NULL context in L2SS Manager.	ac	LOG_STD_ACTION
AC3L2SS_NULL_CONTEXT	3-Error	Encountered a NULL context in [chars]	Encountered a NULL context in L2SS Manager.	ac	LOG_STD_ACTION
AC3L2SS_UNEXPECTED	3-Error	Received unexpected [chars] message	L2SS received unexpected message.	ac	LOG_STD_ACTION
AC3L2SS_UNEXPECTED	3-Error	Received unexpected [chars] message	L2SS received unexpected message.	ac	LOG_STD_ACTION
AC3L2SS_WRONG_KEYS	3-Error	Wrong set of keys in [chars] message	SIP sends a wrong set of keys to L2SS Manager.	ac	LOG_STD_ACTION
AC3L2SS_WRONG_KEYS	3-Error	Wrong set of keys in [chars] message	SIP sends a wrong set of keys to L2SS Manager.	ac	LOG_STD_ACTION
AC3SIP_INVALID_HANDLE	3-Error	Caller passed in invalid handle - traceback to follow.	An invalid handle was encountered in the Access IE library.	-	LOG_STD_ACTION



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>ACCESSDNR</del> CERCFIA	3-Error	polaris-smd	"Access session trace initialization failed with code: %d."	"Failed to initialize access-session trace."	"Review smd logs taking note of the timestamp information to select specific information to review. Copy the message and other related information exactly as it appears on the console or in the system log."
<del>ACCESSDNR</del> CERCFIA	3-Error	polaris-smd	"Access session trace initialization failed with code: %d."	"Failed to initialize access-session trace."	"Review smd logs taking note of the timestamp information to select specific information to review. Copy the message and other related information exactly as it appears on the console or in the system log."
<del>ACCESSDNR</del> CERCFIA	3-Error	polaris-smd	"Component[chars] registration failed. Error code: %d"	"Component failed to register with access-session trace"	"Review smd logs taking note of the timestamp information to select specific information to review. Copy the message and other related information exactly as it appears on the console or in the system log."
<del>ACCESSDNR</del> CERCFIA	3-Error	polaris-smd	"Component[chars] registration failed. Error code: %d"	"Component failed to register with access-session trace"	"Review smd logs taking note of the timestamp information to select specific information to review. Copy the message and other related information exactly as it appears on the console or in the system log."
<del>ACCESSDNR</del> CERCFIA	3-Error	Initialization failed with code: [dec]	Failed to initialize access-session trace.	dot1x-ios	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ACCESS_SESSION_INITIAL</del>	3-Error	Initialization failed with code: [dec]	Failed to initialize access-session trace.	dot1x-ios	LOG_SID_NO_ACTION
<del>ACCESS_SESSION_INITIAL</del>	3-Error	Initialization failed with code: [dec]	Failed to initialize access-session trace.	dot1x-ios	LOG_SID_NO_ACTION
<del>ACCESS_SESSION_REGISTER</del>	3-Error	Component [chars] registration failed. Error code: [dec]	Component failed to register with access-session trace	dot1x-ios	LOG_SID_NO_ACTION
<del>ACCESS_SESSION_REGISTER</del>	3-Error	Component [chars] registration failed. Error code: [dec]	Component failed to register with access-session trace	dot1x-ios	LOG_SID_NO_ACTION
<del>ACCESS_SESSION_REGISTER</del>	3-Error	Component [chars] registration failed. Error code: [dec]	Component failed to register with access-session trace	dot1x-ios	LOG_SID_NO_ACTION
<del>ACCESS_TUNNEL_ISSU_BUFFER</del>	3-Error	ACCESS_TUNNEL ISSU client failed to get buffer for message error [dec]	ACCESS_TUNNEL ISSU client failed to get buffer for building a negotiation message. Hence it can not send the negotiation message to the standby unit. When there is a problem in the negotiation the standby unit can not be brought up.	accsw-p-securefab	"show logging and show checkpoint client"
<del>ACCESS_TUNNEL_ISSU_CAPABILITY</del>	3-Error	ACCESS_TUNNEL ISSU client capability list is empty.	The ACCESS_TUNNEL ISSU client capability exchange list size is invalid.	accsw-p-securefab	"show issu capability entries <Client_ID>"
<del>ACCESS_TUNNEL_ISSU_CAPABILITY</del>	3-Error	ACCESS_TUNNEL ISSU client capability exchange result incompatible.	The ACCESS_TUNNEL ISSU client capability exchange has negotiated as incompatible with the peer.	accsw-p-securefab	"show issu negotiated capability <Session_ID>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ACCESS_TUNNEL_ISSU_CAPBITY	3-Error	ACCESS_TUNNEL ISSU client [chars]	ACCESS_TUNNEL ISSU client observed an error during capability\n\n negotiation. When this error happens there is a mismatch\n\n between the client capability between the active and\n\n standby unit.	accsw-p-securefab	"show issu capability entries <client_id> and \n\n show issu session <client_id> and \n\n show issu negotiated capability <session_id>"
ACCESS_TUNNEL_ISSU_INIT	3-Error	ACCESS_TUNNEL ISSU client initialization failed at [chars] error [chars]	ACCESS_TUNNEL ISSU client could not be initialilzed this will\n\n cause catastrophic failure when ISSU upgrade or downgrade\n\n is performed.	accsw-p-securefab	LOGS_IDS_HTECH_ACTION
ACCESS_TUNNEL_ISSU_MSG_CHK	3-Error	ACCESS_TUNNEL ISSU client message [dec] is not compatible	ACCESS_TUNNEL ISSU client received an incompatible message\n\n from the peer unit. Since the message is not compatible\n\n it can not be processed by this unit	accsw-p-securefab	"show issu message group <client_id> and\n\n show issu session <client_id> and \n\n show issu negotiated version <session_id>"
ACCESS_TUNNEL_ISSU_MSG_SIZE	3-Error	ACCESS_TUNNEL ISSU client failed to get the message size for message [dec]	ACCESS_TUNNEL ISSU client failed to calculate message size\n\n for the message specified. The ACCESS_TUNNEL ISSU client will not\n\n be able to send message to the standby unit.	accsw-p-securefab	"show issu message group <client_id> and\n\n show issu session <client_id> and \n\n show issu negotiated version <session_id>"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>ACCESS_TUNNEL_ISSU_POLICY</del>	3-Error	ACCESS_TUNNEL ISSU client message type [dec] is [chars]	ACCESS_TUNNEL ISSU client received an message type which it\n\ does not support. The policy is applied to make the session\n\ compatible.	accsw-p-securefab	"show issu session <client_id>"
<del>ACCESS_TUNNEL_ISSU_FAILED</del>	3-Error	ACCESS_TUNNEL ISSU client failed to send a negotiation message error [dec]	ACCESS_TUNNEL ISSU client could not send a session negotiation\n\ message to the peer. When there is a problem in the \n\ negotiation the standby unit can not be brought up.	accsw-p-securefab	"show logging and show checkpoint client"
<del>ACCESS_TUNNEL_ISSU_SESSION</del>	3-Error	ACCESS_TUNNEL ISSU client [chars]	ACCESS_TUNNEL ISSU client observed an error during a session\n\ negotiation with the peer unit. When there is a problem\n\ with the session the standby unit can not be brought up.	accsw-p-securefab	"show issu capability entries <client_id> and \n\ show issu session <client_id> and \n\ show issu negotiated capability <session_id>"
<del>ACCESS_TUNNEL_ISSU_UNREG</del>	3-Error	ACCESS_TUNNEL ISSU client failed to unregister session information. Error: [dec] [chars]	The ACCESS_TUNNEL ISSU client failed to unregister session information.	accsw-p-securefab	"show issu session <client_id> and " "show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ACCESS_TUNNEL_TRANSFORM	3-Error	ACCESS_TUNNEL ISSU client [chars] transform failed error [chars]	ACCESS_TUNNEL ISSU client could not transform the message.\n\n If the transmit transformation failed it means that the\n\n checkpoint message can not be sent to the standby unit.\n\n If the receive transformation failed it means that the\n\n checkpoint message can not be applied on the standby\n\n unit. In both cases the ACCESS_TUNNEL state will not\n\n be identical with the active unit.	accsw-p-securefab	"show issu session <client_id> and \n\ show issu negotiated version <session_id>"
ACE2-CRYPTOENGERR	2-Critical	Crypto engine error: [chars] [dec]	A crypto engine operation did not complete. This error condition can indicate that the crypto engine cannot bind or unbind an interface to a crypto engine. It can also indicate that the crypto engine cannot query an interface ID.	-	"Remove the cryptomap set from the interface by issuing " "<CmdBold>no crypto map<noCmdBold> command. Then reattach the cryptomap " "set to the interface using <CmdBold>crypto map<noCmdBold> command. " "Although removing and reattaching the crypto map might fix the " "cryptographic engine operation failure report the failure to your " "technical support representative along with the sequence of commands " "that lead to the failure".

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ACE-2-INTTABOPERR	2-Critical	Internal [chars] table error: [chars]	Internal table operation fails. This means the state of the module is mostly like inconsistent.	iosxe-ipsec	"Contact your technical support representative"
ACE-3-BOOTMSGERR	3-Error	[chars]: boot error: [chars]	The ACE completed booting but with an error status code. ACE will not operate and it will not register with the crypto subsystem.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
ACE3CEAL_REGISTRATION	3-Error	ACE [chars] failed to register.	The ACE failed to register with CEAL	iosxe-ipsec	"Reset the hw module"
ACE3CRASHDUMPERR	3-Error	[chars]: crashdump retrieval error: [chars] [chars]	An error occurred during crashdump file retrieval from ACE.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
ACE3CRASHDUMPSTART	3-Error	[chars]: crashdump retrieval initiated to file [chars]	The ACE crashed and was rebooted. Upon reboot a crashdump file was detected and uploaded to the sup-bootflash filesystem.	-	"Report the crash and transfer the crashdump file to your technical" "support representative."
ACE-3-HAPITRUNC	3-Error	[chars]: Received truncated HAPI message tlen=[dec] actual=[dec]	An IPsec packet was unexpectedly forwarded to the RP	iosxe-ipsec	"If this message was seen in the context of the router booting " "enabling the hardware crypto accelerator then this message is normal " "and can be safely ignored. " "Otherwise please copy the error message exactly as it appears " "and report it to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ACE-3-INITFAIL	3-Error	[chars]: initialization failed [chars]	An error occurred in the indicated control transaction.	iosxe-ipsec	"Copy the error message exactly as it appears and report it to your " "technical support representative."
ACE-3-INVTTID	3-Error	[chars]: [chars] of invalid [chars] trans id [dec]	An invalid transaction ID of for the indicated transaction\n\n type was encountered	iosxe-ipsec	"Copy the error message exactly as it appears and report it to your " "technical support representative."
ACE-3-NOENGINESLOT	3-Error	Interface [chars] has no crypto engine slot	An IKE SA was requested for a given interface but no crypto engine slot was assigned to that interface	iosxe-ipsec	"Configure the interface in question with the" " `crypto engine [sub]slot' command"
ACE-3-NOMORETID	3-Error	[chars]: out of [chars] transactions	Transaction pool for the indicated transaction type was\n\n exhausted.	iosxe-ipsec	"Copy the error message exactly as it appears and report it to your " "technical support representative."
ACE-3-OUTOFID_RL	3-Error	Too many [chars] IDs in the system. Cannot allocate a new one	All the IDs of the specified type are in use	iosxe-ipsec	"Reduce the traffic load number of IPSec tunnels and/or frequency of re-key." "If this message was seen under light loading conditions then" "copy the error message exactly as it appears and report it to your " "technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ACE-3-OUTOFRES	3-Error	Too many [chars] in the system. Cannot allocate a new one	All VPN-accelerator resources of a particular are in used and thus this allocation request fails.	iosxe-ipsec	"Remove the cryptomap set from the interface. " "Reduce the number of that resource in the " "system. For ACL reduce the number of ACL " "permit ACE in the system. For cryptomap reduce the" "number of cryptomaps in the system. For SPD and " "SPD map reduce the number of interface with " "cryptomap set attached."
ACE-4-VIDMGR-DSIROY	4-Warning	ACE failed to destroy [chars] ID manager. Leaking memory.	The ACE failed to destroy memory space for ID management.	iosxe-ipsec	"Copy the error message exactly as it appears and report it to your " "technical support representative."
ACE-6-BOOTMSG-INFO	6-Information	[chars]: boot info: [chars]	The ACE completed booting but with a non-zero informational status code. This does not indicate an error and ACE will run normally.	-	"No action is necessary."
ACE-6-CRASHDUMP-END	6-Information	[chars]: crashdump retrieval complete	The ACE crashed and was rebooted. Upon reboot a crashdump file was detected and uploaded to the sup-bootflash filesystem.	-	"Report the crash and transfer the crashdump file to your technical" "support representative."
ACE-6-INFO	6-Information	[chars]: [chars]	This is informational message from ACE	iosxe-ipsec	"This is informational message from ACE. This occurs " "in normal operation."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ACE-6-SWITCHOVER	6-Information	VPN-SM switchover: [dec]/[dec] has been [chars] [dec]/[dec]	An negative acknowledge occurred in the indicated control transaction.	iosxe-ipsec	"Copy the error message exactly as it appears and report it to your " "technical support representative."
<del>ACL3UNEXPECTED_PKT</del>	3-Error	type [dec] int [dec] [chars]put	ACL logging has encountered unexpected pkt type.	cpp-ucode	LOG_STD_ACTION
<del>ACL3UNEXPECTED_STATE</del>	3-Error	type [dec] int [chars] [chars]put w0: 0x[node]w1: 0x[hec]	An error has occurred in the setup of ACL hardware.	cpp-ucode	LOG_STD_ACTION
ACL-5-LDP	5-Notice	ERRMSG_NOFLAGS	-	-	-
ACL-5-LDP	5-Notice	ERRMSG_NOFLAGS	-	-	-
ACL1-5-LDP	5-Notice	<del>ERRMSG_LIMIT_SLOW</del>	-	-	-
ACL1-5-LDP	5-Notice	<del>ERRMSG_LIMIT_SLOW</del>	-	-	-
<del>ACLMERGE3CUDDError</del>	3-Error	A CUDD Library error was detected in [chars]	An error was detected by the CUDD Library the ACL-Merge for this invocation has failed. This could result in more traffic being switched by software. The effect of this could be lower performance for the interface for which the merge failed.	aclmerge	"Copy and save this message. Report this to Engineering along with the ACL configuration of this device. Use Topic to search for a similar DDTs. If none found write a DDTs for this problem"
<del>ACLMERGE3CUDDWARN</del>	3-Error	A CUDD Library warning message for interest in this event in [chars]	Debug message only. No action required	aclmerge	"Copy and save this message. Report this to Engineering along with the ACL configuration of the device. This is just a debug message of interest to engineering to investigate the case why this happened"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ACR-MISC-ACL-ERR	3-Error	iosxe-binos-utils	Error in[chars]	ewlc ACL flex push error message.	LOG_STD_ACTION
ACR-HSSU-NOMEMORY	1-Alert	msgtxt_nomemory	The requested operation could not be accomplished because of a low\n\n memory condition.	ACR-DDIS-COMPONENT	"Reduce other system activity to ease memory demands. If conditions\n\n warrant upgrade to a larger memory configuration."
ACR-3-ACRIFADD	3-Error	[chars] interface add failed for ACR group [dec].	Addition of interface to ACR group failed	ACR-DDIS-COMPONENT	"Get the output of \"show acr all \" immediately after this error." "Copy the message exactly as it appears and report it to your technical " "support representative."
ACR-3-ACRIFDEL	3-Error	[chars] interface del failed for ACR group [dec].	Delete of interface from ACR group failed	ACR-DDIS-COMPONENT	"Get the output of \"show acr all \" immediately after this error." "Copy the message exactly as it appears and report it to your technical " "support representative."
ACR3ACRPVCDISABLE	3-Error	PVC Disable failed for VCD= [dec] on [chars] interface of ACR interface [chars].	PVC disable failed on ACR physical interface.	ACR-DDIS-COMPONENT	"Get the output of \"show acr group \" and \"show acr group <> detail\" " "Copy the message exactly as it appears and report it to your technical " "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ACR-3-ACRVPDISABLE	3-Error	VP Disable failed for VPI= [dec] on [chars] interface of ACR interface [chars].	VP disable failed on ACR physical interface.	ACR_DDIS_COMPONENT	"Get the output of \"show acr group \" and \"show acr group < detail\" \" \"Copy the message exactly as it appears and report it to your technical \" \"support representative."
ACR-3-ACRVPENABLE	3-Error	VP Enable failed for VPI= [dec] on [chars] interface of ACR interface [chars].	VP enable failed on ACR physical interface.	ACR_DDIS_COMPONENT	"Get the output of \"show acr group \" and \"show acr group < detail\" \" \"Copy the message exactly as it appears and report it to your technical \" \"support representative."
ACR-3-ISSU_SENDFAILED	3-Error	\nACR ISSU: send message failed rc = [dec]\n	The sending of a message has failed.	ACR_DDIS_COMPONENT	LOG_SID_SH_TECH_ACTION
ACR-4-ISSU_INCOMPATIBLE	4-Warning	\nacr-issu-compat: returned FALSE	The compatibility checking has failed	ACR_DDIS_COMPONENT	LOG_SID_SH_TECH_ACTION
ACR-4-ISSU_XFORM	4-Warning	\n[chars]: failed rc=[chars]	The transform has failed.	ACR_DDIS_COMPONENT	LOG_SID_SH_TECH_ACTION
ACR-6-ACRPVCADD	6-Information	PVC creation failed for VCD= [dec] on [chars] interface of ACR interface [chars].	PVC creation attempt failed on ACR physical interface.	ACR_DDIS_COMPONENT	"If message is seen continuously get the output of \"show acr group \" \n\" and \"show acr group < detail\" \" \"Copy the message exactly as it appears and report it to your technical \" \"support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ACR-6-ACRPVCDEL	6-Information	PVC deletion failed for VCD= [dec] on [chars] interface of ACR group [chars].	PVC deletion attempt failed on ACR physical interface.	ACR_DDIS_COMPONENT	"If message is seen continuously get the output of \"show acr group \n\n and \"show acr group < detail\n\n \"Copy the message exactly as it appears and report it to your technical \"support representative."
ACR-6-ACRPVCENABLE	6-Information	PVC Enable failed for VCD= [dec] on [chars] interface of ACR interface [chars].	PVC enable attempt failed on ACR physical interface.	ACR_DDIS_COMPONENT	"If message is seen continuously get the output of \"show acr group \n\n and \"show acr group < detail\n\n \"Copy the message exactly as it appears and report it to your technical \"support representative."
ACR-6-ACRVPADD	6-Information	VP creation failed for VPI= [dec] on [chars] interface of ACR group [chars].	VP creation attempt failed on ACR physical interface.	ACR_DDIS_COMPONENT	"If message is seen continuously get the output of \"show acr group \n\n and \"show acr group < detail\n\n \"Copy the message exactly as it appears and report it to your technical \"support representative."
ACR-6-ACRVPDEL	6-Information	PVC deletion failed for VPI= [dec] on [chars] interface of ACR group [chars].	VP deletion attempt failed on ACR physical interface.	ACR_DDIS_COMPONENT	"If message is seen continuously get the output of \"show acr group \n\n and \"show acr group < detail\n\n \"Copy the message exactly as it appears and report it to your technical \"support representative."
ADDR_PROC-4LCON	4-Warning	ERRMSG_NOFLAGS	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ADDR_PROC-4-LCON	4-Warning	ERRMSG_NOFLAGS	-	-	-
ADDRQ-4-LCON	4-Warning	ERRMSG_NOFLAGS	-	-	-
ADDRQ-4-LCON	4-Warning	ERRMSG_NOFLAGS	-	-	-
ADJ_WALK_ERR2MHS_TE	2-Critical	ERRMSG_HAG_TRACEBACK	-	-	-
ADJ_WALK_ERR2MHS_TE	2-Critical	ERRMSG_HAG_TRACEBACK	-	-	-
ADJ-3-ADJ_XKEYS	3-Error	Adj extended keys error [chars]: [chars]	An initialization error occurred for extended keys.	-	LOG_STD_ACTION
ADJ-3-ADJ_XKEYS	3-Error	Adj extended keys error [chars]: [chars]	An initialization error occurred for extended keys.	-	LOG_STD_ACTION
ADBADGENALLOCAIHAL	3-Error	Failed to allocate memory [chars]	An internal software error occurred. This is probably because not enough memory was available.	-	LOG_STD_ACTION
ADBADGENALLOCAIHAL	3-Error	Failed to allocate memory [chars]	An internal software error occurred. This is probably because not enough memory was available.	-	LOG_STD_ACTION
ADBADGENDEALLOCAIHAL	3-Error	Failed to deallocate memory [chars]	An internal software error occurred.	-	LOG_STD_ACTION
ADBADGENDEALLOCAIHAL	3-Error	Failed to deallocate memory [chars]	An internal software error occurred.	-	LOG_STD_ACTION
ADBADMGRALLOCAIHAL	3-Error	Failed to allocate an adjacency summary event block	An internal software error occurred. This is probably because not enough memory was available.	-	LOG_STD_ACTION
ADBADMGRALLOCAIHAL	3-Error	Failed to allocate an adjacency summary event block	An internal software error occurred. This is probably because not enough memory was available.	-	LOG_STD_ACTION
ADBADMGRDSPACHAL	3-Error	Failed to enqueue an adjacency summary event block	An internal software error occurred.	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ADBADMGRDISPATCHFAIL	3-Error	Failed to enqueue an adjacency summary event block	An internal software error occurred.	-	LOG_STD_ACTION
ADBADMGRREFRESHFAIL	3-Error	Failed to dispatch a refresh adjacency summary event	An internal software error occurred.	-	LOG_STD_ACTION
ADBADMGRREFRESHFAIL	3-Error	Failed to dispatch a refresh adjacency summary event	An internal software error occurred.	-	LOG_STD_ACTION
ADJ-3-ADJSTACK2	3-Error	Adj stack2 error [chars]: [chars]	An internal software error occurred.	-	LOG_STD_ACTION
ADJ-3-ADJSTACK2	3-Error	Adj stack2 error [chars]: [chars]	An internal software error occurred.	-	LOG_STD_ACTION
ADI3-ALLOCATEFAIL	3-Error	Failed to allocate an adjacency	An internal software error occurred. This is probably because not enough memory was available.	-	LOG_STD_ACTION
ADI3-ALLOCATEFAIL	3-Error	Failed to allocate an adjacency	An internal software error occurred. This is probably because not enough memory was available.	-	LOG_STD_ACTION
ADIBALLOCAIENDOWN	3-Error	Allocating adj when adj subsystem down	An internal software error occurred.	-	LOG_STD_ACTION
ADIBALLOCAIENDOWN	3-Error	Allocating adj when adj subsystem down	An internal software error occurred.	-	LOG_STD_ACTION
ADI3-BADADDRLEN	3-Error	Zero address length detected distributing adj [chars]	An internal software error occurred. An attempt to reference an adjacency with an unsupported address type has been made.	-	LOG_STD_ACTION
ADI3-BADADDRLEN	3-Error	Zero address length detected distributing adj [chars]	An internal software error occurred. An attempt to reference an adjacency with an unsupported address type has been made.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ADI-3-BADADDRTYPE	3-Error	Using an unsupported address type [dec] when trying to add/delete/modify/find an adjacency	An internal software error occurred. An attempt to reference an adjacency with an unsupported address type has been made.	-	LOG_STD_ACTION
ADI-3-BADADDRTYPE	3-Error	Using an unsupported address type [dec] when trying to add/delete/modify/find an adjacency	An internal software error occurred. An attempt to reference an adjacency with an unsupported address type has been made.	-	LOG_STD_ACTION
ADI-3-BADLINKTYPE	3-Error	Using an unsupported linktype [chars] when trying to add/delete/modify/find an adjacency	An internal software error occurred. An attempt to reference an adjacency with an unsupported address type has been made.	-	LOG_STD_ACTION
ADI-3-BADLINKTYPE	3-Error	Using an unsupported linktype [chars] when trying to add/delete/modify/find an adjacency	An internal software error occurred. An attempt to reference an adjacency with an unsupported address type has been made.	-	LOG_STD_ACTION
ADI-3-BADMACALIGN	3-Error	adjacency mac string end [hec] not [chars] aligned	An internal software error occurred.	-	LOG_STD_ACTION
ADI-3-BADMACALIGN	3-Error	adjacency mac string end [hec] not [chars] aligned	An internal software error occurred.	-	LOG_STD_ACTION
ADI-3-BADMACALIGN2	3-Error	Adjacency mac string for [chars] not byte aligned offset [hec] length [hec]	An internal software error occurred.	-	LOG_STD_ACTION
ADI-3-BADMACALIGN2	3-Error	Adjacency mac string for [chars] not byte aligned offset [hec] length [hec]	An internal software error occurred.	-	LOG_STD_ACTION
ADJ-3-BADMAGIC	3-Error	adjacency [chars] is followed by bad magic	An internal software error occurred.	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ADJ-3-BADMAGIC	3-Error	adjacency [chars] is followed by bad magic	An internal software error occurred.	-	LOG_STD_ACTION
ADJ-3-BOARDENCAP	3-Error	Generation of encapsulation string for [chars] failed	An internal software error occurred.	-	LOG_STD_ACTION
ADJ-3-BOARDENCAP	3-Error	Generation of encapsulation string for [chars] failed	An internal software error occurred.	-	LOG_STD_ACTION
ADJ-3-BROKERINITFAIL	3-Error	Failed to initialise adjacency RP broker facility	An internal software error occurred.	-	LOG_STD_ACTION
ADJ-3-BROKERINITFAIL	3-Error	Failed to initialise adjacency RP broker facility	An internal software error occurred.	-	LOG_STD_ACTION
ADJ-3-BUNDLES	3-Error	Adj bundles: [chars]	An internal software error occurred.	-	LOG_STD_ACTION
ADJ-3-BUNDLES	3-Error	Adj bundles: [chars]	An internal software error occurred.	-	LOG_STD_ACTION
<del>ADJ-3-CONNID_INVALID</del>	3-Error	Connection id [node]could not be transformed: [chars]	A connection id could not be transformed from a lower revision.	-	LOG_STD_ACTION
<del>ADJ-3-CONNID_INVALID</del>	3-Error	Connection id [node]could not be transformed: [chars]	A connection id could not be transformed from a lower revision.	-	LOG_STD_ACTION
ADJ-3-CONNID_INVALID	3-Error	Connection id [node]not recognized [chars]	A supplied connection id did not exist in the managed id database.	-	LOG_STD_ACTION
ADJ-3-CONNID_INVALID	3-Error	Connection id [node]not recognized [chars]	A supplied connection id did not exist in the managed id database.	-	LOG_STD_ACTION



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>ADBCOND_NAID_KEY</del>	3-Error	Unexpected connection-id parameter: Expecting [chars] when encoding [chars]	An application has provided an invalid key for computing a connection-id.	-	LOG_STD_ACTION
<del>ADBCOND_NAID_KEY</del>	3-Error	Unexpected connection-id parameter: Expecting [chars] when encoding [chars]	An application has provided an invalid key for computing a connection-id.	-	LOG_STD_ACTION
<del>ADBCOND_ROLE_EXHAUSTED</del>	3-Error	Pool of connection ids is fully utilized. It may not be possible to encode new sets of extended keys.	Either there are too many unique sets of extended keys in the system or ids have been leaking.	-	LOG_STD_ACTION
<del>ADBCOND_ROLE_EXHAUSTED</del>	3-Error	Pool of connection ids is fully utilized. It may not be possible to encode new sets of extended keys.	Either there are too many unique sets of extended keys in the system or ids have been leaking.	-	LOG_STD_ACTION
<del>ADBCOND_TREEMISMATCH</del>	3-Error	Supplied connid [node]and extended keys [chars] do not match	An adjacency has a connection id and extended keys mapping that doesn't match what's in the managed connection id database. This will likely result in a rejected adjacency update or sync.	-	LOG_STD_ACTION
<del>ADBCOND_TREEMISMATCH</del>	3-Error	Supplied connid [node]and extended keys [chars] do not match	An adjacency has a connection id and extended keys mapping that doesn't match what's in the managed connection id database. This will likely result in a rejected adjacency update or sync.	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>AD</del> COND_TRE_CP_FAIL	3-Error	Tree [chars] failed for [chars] for id [node]connid %u	A tree operation failed for the connection-id manager. An inability to correctly construct a tree will have negative consequences for the system.	-	LOG_STD_ACTION
<del>AD</del> COND_TRE_CP_FAIL	3-Error	Tree [chars] failed for [chars] for id [node]connid %u	A tree operation failed for the connection-id manager. An inability to correctly construct a tree will have negative consequences for the system.	-	LOG_STD_ACTION
<del>AD</del> DECHIERALOCATE_FAIL	3-Error	Failed to allocate an adjacency debug filter block	An internal software error occurred. This is probably because not enough memory was available.	-	LOG_STD_ACTION
<del>AD</del> DECHIERALOCATE_FAIL	3-Error	Failed to allocate an adjacency debug filter block	An internal software error occurred. This is probably because not enough memory was available.	-	LOG_STD_ACTION
<del>AD</del> I3ILALLOCATE_FAIL	3-Error	Failed to allocate an adjacency interest list subblock	An internal software error occurred. This is probably because not enough memory was available.	-	LOG_STD_ACTION
<del>AD</del> I3ILALLOCATE_FAIL	3-Error	Failed to allocate an adjacency interest list subblock	An internal software error occurred. This is probably because not enough memory was available.	-	LOG_STD_ACTION
<del>AD</del> I3ILDEALLOCATE_FAIL	3-Error	Failed to deallocate an adjacency interest list subblock	An internal software error occurred. This is probably because not enough memory was available.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ADJ3-ILDEALLOCATEFAIL	3-Error	Failed to deallocate an adjacency interest list subblock	An internal software error occurred. This is probably because not enough memory was available.	-	LOG_STD_ACTION
ADJ-3-ILINITFAIL	3-Error	Failed to initialise adjacency interest list facility	An internal software error occurred.	-	LOG_STD_ACTION
ADJ-3-ILINITFAIL	3-Error	Failed to initialise adjacency interest list facility	An internal software error occurred.	-	LOG_STD_ACTION
ADJ-3-ILLEGALARGS	3-Error	Illegal arguments - [chars]	An internal software error occurred.	-	LOG_STD_ACTION
ADJ-3-ILLEGALARGS	3-Error	Illegal arguments - [chars]	An internal software error occurred.	-	LOG_STD_ACTION
ADJ-3-ISSU_REG	3-Error	ISSU client [chars] [dec] entity [dec] failed ISSU registration: [chars]	ISSU negotiation failed for this XDR client.	-	"This error indicates a coding problem. It is an error that will occur" "every time this image is run and requires a code change to fix it."
ADJ-3-ISSU_REG	3-Error	ISSU client [chars] [dec] entity [dec] failed ISSU registration: [chars]	ISSU negotiation failed for this XDR client.	-	"This error indicates a coding problem. It is an error that will occur" "every time this image is run and requires a code change to fix it."
ADJ-3-LCXDRCLIENT	3-Error	Adjacency distribution client: [chars]	An internal software error occurred.	-	LOG_STD_ACTION
ADJ-3-LCXDRCLIENT	3-Error	Adjacency distribution client: [chars]	An internal software error occurred.	-	LOG_STD_ACTION
ADJ-3-MACOVERFLOW	3-Error	Adjacency mac address for [chars] overflowed by [dec] bytes	An internal software error occurred.	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ADJ3-MACOVERFLOW	3-Error	Adjacency mac address for [chars] overflowed by [dec] bytes	An internal software error occurred.	-	LOG_STD_ACTION
ADJ3-SIRNGIDERRCR	3-Error	Platform request for header type [chars] from adjacency [chars] [chars][chars]	An internal software error occurred.	-	LOG_STD_ACTION
ADJ3-SIRNGIDERRCR	3-Error	Platform request for header type [chars] from adjacency [chars] [chars][chars]	An internal software error occurred.	-	LOG_STD_ACTION
ADJ-3-NOFIBIDB	3-Error	CEF Interface not found - [chars]	An internal software error occurred.	-	LOG_STD_ACTION
ADJ-3-NOFIBIDB	3-Error	CEF Interface not found - [chars]	An internal software error occurred.	-	LOG_STD_ACTION
ADJ3-RPXDRCLIENT	3-Error	Adjacency distribution client: [chars]	An internal software error occurred.	-	LOG_STD_ACTION
ADJ3-RPXDRCLIENT	3-Error	Adjacency distribution client: [chars]	An internal software error occurred.	-	LOG_STD_ACTION
ADJ-3-SBINITFAIL	3-Error	Failed to initialise adjacency subblock facility	An internal software error occurred.	-	LOG_STD_ACTION
ADJ-3-SBINITFAIL	3-Error	Failed to initialise adjacency subblock facility	An internal software error occurred.	-	LOG_STD_ACTION
ADJ3-STATEIRANSITION	3-Error	Unexpected state transition from [chars] to [chars]	An internal software error occurred.	-	LOG_STD_ACTION
ADJ3-STATEIRANSITION	3-Error	Unexpected state transition from [chars] to [chars]	An internal software error occurred.	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ADJ3-XKEYS_XDR_LEN	3-Error	Expected [node]bytes of extended adjacency keys: decoded [node]bytes	The XDR message was incorrectly formatted and may contain bad xkey data.	-	LOG_STD_ACTION
ADJ3-XKEYS_XDR_LEN	3-Error	Expected [node]bytes of extended adjacency keys: decoded [node]bytes	The XDR message was incorrectly formatted and may contain bad xkey data.	-	LOG_STD_ACTION
<del>ADJ5-ADJUNCOMPABLE</del>	5-Notice	All or part of adjacency message for [chars] not sent to incompatible CEF instance for [chars]	The adjacency is not distributed in whole to the remote CEF instance. This may impact traffic forwarding on remote CEF instance	-	LOG_SID_NO_ACTION
<del>ADJ5-ADJUNCOMPABLE</del>	5-Notice	All or part of adjacency message for [chars] not sent to incompatible CEF instance for [chars]	The adjacency is not distributed in whole to the remote CEF instance. This may impact traffic forwarding on remote CEF instance	-	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ADJ-5-PARENT	5-Notice	Midchain parent maintenance for [chars] - [chars]	A midchain adjacency failed to stack onto output chain because a loop was detected. Traffic through the adjacency will be dropped until the adj is restacked. This condition is typically transient and is rectified by the control plane driving stacking. E.g. if an ip tunnel destination resolves through the tunnel transiently this message would appear. The situation would be rectified either by learning the tunnel destination through an interface other than the tunnel itself or by bringing the tunnel down. Monitor 'show adjacency internal' to determine if the problem has been resolved.	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ADJ-5-PARENT	5-Notice	Midchain parent maintenance for [chars] - [chars]	A midchain adjacency failed to stack onto output chain because a loop was detected. Traffic through the adjacency will be dropped until the adj is restacked. This condition is typically transient and is rectified by the control plane driving stacking. E.g. if an ip tunnel destination resolves through the tunnel transiently this message would appear. The situation would be rectified either by learning the tunnel destination through an interface other than the tunnel itself or by bringing the tunnel down. Monitor 'show adjacency internal' to determine if the problem has been resolved.	-	LOG_STD_NO_ACTION
ADJ5RESOLVE_REQ_FAIL	5-Notice	Adj resolve request failed for [chars] on [chars]	The source e.g. ARP or ND could not resolve the address.	-	LOG_STD_ACTION
ADJ5RESOLVE_REQ_FAIL	5-Notice	Adj resolve request failed for [chars] on [chars]	The source e.g. ARP or ND could not resolve the address.	-	LOG_STD_ACTION
ADV-4-LDP	4-Warning	ERRMSG_NOFLAGS	-	-	-
ADV-4-LDP	4-Warning	ERRMSG_NOFLAGS	-	-	-
<del>AFCHEALTHCHECK_FAIL</del>	1-Alert	afc	AFC Healthcheck failed with HTTP status code %u.	AFC Healthcheck failed due to HTTP error	LOG_STD_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>AFCHEALTHCHECK</del>	1-Alert	afc	AFC Healthcheck failed with HTTP connection error:[chars].	AFC Healthcheck failed due to HTTPCON error	LOG_SID_NO_ACTION
<del>AFCHEALTHCHECK</del>	1-Alert	afc	AFC Healthcheck failed :[chars].	AFC Healthcheck failed due to provider error	LOG_SID_NO_ACTION
<del>AFCHEALTHCHECK</del>	3-Error	afc	AFC Healthcheck failed	-	-
<del>AFCWNCDCONDS</del>	1-Alert	afc	No format	Some conditions are preventing the AP from using AFC	LOG_SID_NO_ACTION
<del>AFCWNCDCONDS</del>	4-Warning	afc	Current location uncertainty for AP[chars] is high (%d meters).	Geolocation uncertainty for the AP is above 400m	LOG_SID_NO_ACTION
<del>AFCWNCDCONDS</del>	6-Information	ewlc-spwifi	Info Level -[chars]	General AFC WNCDC Lib info message	LOG_STD_ACTION
AGGMGR-0-NO_SPACE	0-Emergency	No space left for creator \[chars] to add data item to agg list items [dec] max [dec] remaining [dec]	An attempt was made to add an item to an aggregation list that had just been successfully created but for some reason the add failed. This situation should never occur. If it does occur then it is the result of a program error which would be found during development and considered an internal error. There is no work around.	cosmos	LOG_STD_ACTION
AIP-3-AIPFAILSETUPVC	3-Error	[chars] Failed to setup vc [dec] Cause: [chars]	-	-	-



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AP3AIFALSEIUPVCAIG	3-Error	Interface [chars] Failed to setup vc [dec] Cause: [chars] Expected range [[dec] .. [dec]]Kbps for AIP Average Rate Metering. Average Rate=Peak Rate= [dec] Kbps turns Average Rate Metering OFF	A software or hardware error occurred.	-	LOG_STD_ACTION
<del>AAIIFSECFAMFURCH</del>	3-Error	[chars]	Failed to create the chunk-pool for the persistent alarm info	asr900-lotr-im	LOG_STD_ACTION
<del>AAIIFSECFAMFURQUL</del>	3-Error	[chars]	Failed to create the chunk-pool for the persistent alarm queue	asr900-lotr-im	LOG_STD_ACTION
<del>AAIIFSECFAMFURDCH</del>	3-Error	Failed to destroy [chars] chunk pool	Failed to destroy a chunk pool	asr900-lotr-im	LOG_STD_ACTION
<del>AAIIFSECFAMFURDAR</del>	3-Error	Failed to create [chars]/[chars] file error:[chars]	Failed to create persistent_alarm_log file	asr900-lotr-im	LOG_STD_ACTION
<del>AAIIFSECFAMFURDOR</del>	3-Error	Failed to open [chars]/[chars] file error:[chars]	Failed to open persistent_alarm_log file	asr900-lotr-im	LOG_STD_ACTION
<del>AAIIFSECFAMFURDWR</del>	3-Error	Failed to write to [chars]/[chars] file actual:[dec] written:[dec] error:[chars]	Failed to open persistent_alarm_log file	asr900-lotr-im	LOG_STD_ACTION
<del>AAIIFSECFAMFURDNL</del>	3-Error	Persistent alarm queue alarm info is NULL	alarm_info of the persistence queue is NULL	asr900-lotr-im	LOG_STD_ACTION
<del>AAIIFSECFAMFURDRA</del>	3-Error	Failed to create <del>mpp spa persistence logger</del> process	Failed to create <del>mpp spa persistence logger</del> process	asr900-lotr-im	LOG_STD_ACTION
<del>AAIIFSECFAMFURDENL</del>	3-Error	[chars]	Alarm profile is enabled with a wrong profile name	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>AAI03E01A01Q0000</del>	3-Error	Persistent alarm queue info is NULL	alarm_info of the persistence queue is NULL	asr900-lotr-im	LOG_STD_ACTION
<del>AAI03E01A01R0000</del>	3-Error	[chars] is NULL	Data-structure is NULL	asr900-lotr-im	LOG_STD_ACTION
<del>AAI03E01A01U0000</del>	6-Information	[chars]	Created the chunk-pool for the persistenct alarm info	-	LOG_SID_NO_ACTION
<del>AAI03E01A01V0000</del>	6-Information	[chars]	Created the chunk-pool for the persistent alarm queue	-	LOG_SID_NO_ACTION
<del>AAI03E01A01W0000</del>	6-Information	Successfully created [chars]/[chars] file	Successfully created alarm_persistency file	-	LOG_SID_NO_ACTION
<del>AAI03E01A01X0000</del>	6-Information	Switching to [chars] file \nafter writing [dec] records to [chars] file	Switched to other file after reaching a specified limit	-	LOG_SID_NO_ACTION
<del>AAI03E01A01Y0000</del>	6-Information	created mpp_spa_persistence_logger process:[dec]	Created mpp_spa_persistence_logger process	-	LOG_SID_NO_ACTION
<del>AAI03E01A01Z0000</del>	6-Information	Persistent alarm info queue is full with [dec] elements	persistent alarm_records in the persistence queue are full	-	LOG_SID_NO_ACTION
ALARM-3-CLEAR	3-Error	[chars] [chars] [chars] [chars] [chars]	-	-	-
ALARM-3-CLEAR	3-Error	[chars] [chars] [chars] [chars] [chars]	-	-	-
ALARM-3-NOMEM	3-Error	OUT of Memory: [chars]	-	-	-
ALARM-3-NOMEM	3-Error	OUT of Memory: [chars]	-	-	-
<del>AAI03E01A010000</del>	6-Information	[chars]	Telcordia profile enable or disable information	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ALARM6ENTITY_INFO	6-Information	[chars] [chars] [chars] [chars] [chars]	Entity alarm assertion or deassertion information.	-	LOG_STD_NO_ACTION
ALARM6ENTITY_INFO	6-Information	[chars] [chars] [chars] [chars] [chars]	Entity alarm assertion or deassertion information.	-	LOG_STD_NO_ACTION
<del>AGC</del> <del>ACCD</del> <del>ERR</del> <del>CH</del> <del>AL</del>	3-Error	[chars]	-	-	-
<del>AGC</del> <del>ALG</del> <del>REG</del> <del>STR</del> <del>AL</del>	3-Error	[dec]	ALG registration failed.	cpp-ucode	LOG_STD_ACTION
<del>AGC</del> <del>CHK</del> <del>UNK</del> <del>CRE</del> <del>AL</del>	3-Error	[chars]	A request to create a chunk failed	cpp-ucode	LOG_STD_ACTION
<del>AGC</del> <del>CHK</del> <del>UNK</del> <del>EXT</del> <del>ND</del> <del>AL</del>	3-Error	[chars]	A request to create a chunk failed	cpp-ucode	LOG_STD_ACTION
<del>AGC</del> <del>CM</del> <del>B</del> <del>FC</del> <del>NT</del> <del>AL</del> <del>ED</del>	3-Error	[dec]	IPC handler initialization failed.	cpp-ucode	LOG_STD_ACTION
<del>AG</del> <del>PRO</del> <del>X</del> <del>Y</del> <del>PRO</del> <del>X</del> <del>Y</del> <del>IC</del> <del>AL</del>	3-Error	rc= [dec]	The ALG proxy has experienced a failure when trying to send an IPC	cpp-ucode	LOG_STD_ACTION
<del>AG</del> <del>PRO</del> <del>X</del> <del>MEM</del> <del>EX</del> <del>HA</del> <del>UST</del> <del>ED</del>	3-Error	ALG IPC subtype: [dec]	Extending memory failed.	cpp-ucode	LOG_STD_ACTION
<del>AG</del> <del>PRO</del> <del>MEM</del> <del>EX</del> <del>HA</del> <del>UST</del> <del>ED</del>	3-Error	ALG IPC subtype: [dec]	Requesting more memory failed.	cpp-ucode	LOG_STD_ACTION
<del>AG</del> <del>PRO</del> <del>MEM</del> <del>EX</del> <del>HA</del> <del>UST</del> <del>ED</del> <del>MG</del>	4-Warning	[dec]	Invalid IPC message subtype.	cpp-ucode	LOG_STD_ACTION
<del>AG</del> <del>PRO</del> <del>MEM</del> <del>EX</del> <del>HA</del> <del>UST</del> <del>ED</del> <del>MG</del> <del>LEN</del>	4-Warning	[dec]:[dec] len [dec] flags 0x[hec] source [dec]	Invalid IPC message length.	cpp-ucode	LOG_STD_ACTION
ALG3ALG_REGISTRY_RC	3-Error	An ALG registry call failed with rc[chars]	The return code from an ALG registry call indicates an\n\n error.	alg	LOG_STD_ACTION
ALG-3-API_FAILED	3-Error	NULL	A call to the API of another component has indicated an\n\n error.	alg	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ALG-3-BAD_MAGIC	3-Error	Invalid magic number[node]0x	An internal data structure is corrupt.	alg	LOG_STD_ACTION
ALG-3-EEXIST	3-Error	NULL	An item unexpectedly exists already.	alg	LOG_STD_ACTION
ALG-3-EINVAL	3-Error	NULL	An unexpected input value to a function was incorrect	alg	LOG_STD_ACTION
ALG-3-ENOENT	3-Error	NULL	A lookup failed unexpectedly.	alg	LOG_STD_ACTION
ALG-3-ENOMEM	3-Error	Memory allocation failed	An attempt to allocae memory has failed.	alg	LOG_STD_ACTION
ALG-3-INIT_FAILED	3-Error	An initialization failed rc[chars]	-	-	-
ALG3RUNAWAY_LOOP	3-Error	NULL	A loop has exceeded the expected number of iterations.	alg	LOG_STD_ACTION
ALG-3-UNINITIALIZED	3-Error	ALG feature is not properly initialized	A function call was made when the system was not properly\n\n initialized.	alg	LOG_STD_ACTION
ALIGN-3-CORRECT	3-Error	Alignment correction made at [chars] [chars]ing 0x[hec]	A software component within the router needs memory optimization.	-	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
ALIGN-3-CORRECT	3-Error	Alignment correction made at [chars] [chars]ing 0x[hec]	A software component within the router needs memory optimization.	-	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
ALIGN-3-CORRECT	3-Error	Alignment correction made at 0x[hec] [chars]ing 0x[hec]	A software component within the router needs memory optimization.	-	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ALIGN-3-CORRECT	3-Error	Alignment correction made at 0x[hec] [chars]ing 0x[hec]	A software component within the router needs memory optimization.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
ALIGN3-CORRECT_SO	3-Error	Alignment correction made at [chars] [chars]ing [chars]	A software component within the router needs memory optimization.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
ALIGN3-CORRECT_SO	3-Error	Alignment correction made at [chars] [chars]ing [chars]	A software component within the router needs memory optimization.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
ALIGN-3-FULL	3-Error	Alignment log is full - no new entries will be recorded	The router identified more software components in need of memory\n\ optimization than it can record.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
ALIGN-3-FULL	3-Error	Alignment log is full - no new entries will be recorded	The router identified more software components in need of memory\n\ optimization than it can record.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
ALIGN-3-FULL	3-Error	Alignment log is full - no new entries will be recorded	The router identified more software components in need of memory\n\ optimization than it can record.	cpu	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
ALIGN-3-FULL	3-Error	Alignment log is full - no new entries will be recorded	The router identified more software components in need of memory\n\ optimization than it can record.	cpu	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ALIGN3READEXCEPTION	3-Error	Warning : read access failed at [chars] still continuing \n	In ls1010 read access failures do not make the box reload. They can \n\ be caused by either a bad register value in the asp ver 3.3 or earlier\n\ or a real problem in the hardware	-	"If the ASP version is 3.3 or more report it to your\n\ technical support representative."
ALIGN3READEXCEPTION	3-Error	Warning : read access failed at [chars] still continuing \n	In ls1010 read access failures do not make the box reload. They can \n\ be caused by either a bad register value in the asp ver 3.3 or earlier\n\ or a real problem in the hardware	-	"If the ASP version is 3.3 or more report it to your\n\ technical support representative."
ALIGN-3-RO_WRITE	3-Error	Spurious memory access made at [chars] writing to 0x[hec]	An attempted but illegal access to a low memory address within a software component in the router has been temporarily blocked.	cpu	"Copy the error message exactly as it appears on the console or in the " "system log. Issue the <CmdBold>show alignment<noCmdBold> command to " "gather data that may help identify the nature of the error. If you " "cannot determine the nature of the error from the error message text " "or from the <CmdBold>show alignment<noCmdBold> output call your " "Cisco technical support representative and provide the representative " "with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ALIGN-3-RO_WRITE	3-Error	Spurious memory access made at [chars] writing to 0x[hec]	An attempted but illegal access to a low memory address within a software component in the router has been temporarily blocked.	cpu	"Copy the error message exactly as it appears on the console or in the " "system log. Issue the <CmdBold>show alignment<noCmdBold> command to " "gather data that may help identify the nature of the error. If you " "cannot determine the nature of the error from the error message text " "or from the <CmdBold>show alignment<noCmdBold> output call your " "Cisco technical support representative and provide the representative " "with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ALIGN-3-SPURIOUS	3-Error	Spurious memory access made at [chars] reading 0x[hec]	An attempted but illegal access to a low memory address within a software component in the router has been temporarily blocked.	-	<p>"Copy the error message exactly as it appears on the console or in the " "system log. Issue the</p> <p>&lt;CmdBold&gt;show alignment&lt;noCmdBold&gt; command to " "gather data that may help identify the nature of the error. If you " "cannot determine the nature of the error from the error message text " "or from the</p> <p>&lt;CmdBold&gt;show alignment&lt;noCmdBold&gt; output call your " "Cisco technical support representative and provide the representative " "with the gathered information."</p>



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ALIGN-3-SPURIOUS	3-Error	Spurious memory access made at [chars] reading 0x[hec]	An attempted but illegal access to a low memory address within a software component in the router has been temporarily blocked.	-	"Copy the error message exactly as it appears on the console or in the " "system log. Issue the <CmdBold>show alignment<noCmdBold> command to " "gather data that may help identify the nature of the error. If you " "cannot determine the nature of the error from the error message text " "or from the <CmdBold>show alignment<noCmdBold> output call your " "Cisco technical support representative and provide the representative " "with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ALIGN-3-SPURIOUS	3-Error	Spurious memory access made at [chars] reading 0x[hec]	An attempted but illegal access to a low memory address within a software component in the router has been temporarily blocked.	-	"Copy the error message exactly as it appears on the console or in the " "system log. Issue the <CmdBold>show alignment<noCmdBold> command to " "gather data that may help identify the nature of the error. If you " "cannot determine the nature of the error from the error message text " "or from the <CmdBold>show alignment<noCmdBold> output call your " "Cisco technical support representative and provide the representative " "with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ALIGN-3-SPURIOUS	3-Error	Spurious memory access made at [chars] reading 0x[hec]	An attempted but illegal access to a low memory address within a software component in the router has been temporarily blocked.	cpu	"Copy the error message exactly as it appears on the console or in the " "system log. Issue the <CmdBold>show alignment<noCmdBold> command to " "gather data that may help identify the nature of the error. If you " "cannot determine the nature of the error from the error message text " "or from the <CmdBold>show alignment<noCmdBold> output call your " "Cisco technical support representative and provide the representative " "with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ALIGN-3-SPURIOUS	3-Error	Spurious memory access made at [chars] reading 0x[hec]	An attempted but illegal access to a low memory address within a software component in the router has been temporarily blocked.	cpu	"Copy the error message exactly as it appears on the console or in the " "system log. Issue the <CmdBold>show alignment<noCmdBold> command to " "gather data that may help identify the nature of the error. If you " "cannot determine the nature of the error from the error message text " "or from the <CmdBold>show alignment<noCmdBold> output call your " "Cisco technical support representative and provide the representative " "with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ALIGN-3-SPURIOUS	3-Error	Spurious memory access made at 0x[hec] reading 0x[hec]	An attempted but illegal access to a low memory address within a software component in the router has been temporarily blocked.	-	"Copy the error message exactly as it appears on the console or in the " "system log. Issue the <CmdBold>show alignment<noCmdBold> command to " "gather data that may help identify the nature of the error. If you " "cannot determine the nature of the error from the error message text " "or from the <CmdBold>show alignment<noCmdBold> output call your " "Cisco technical support representative and provide the representative " "with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ALIGN-3-SPURIOUS	3-Error	Spurious memory access made at 0x[hec] reading 0x[hec]	An attempted but illegal access to a low memory address within a software component in the router has been temporarily blocked.	-	"Copy the error message exactly as it appears on the console or in the " "system log. Issue the <CmdBold>show alignment<noCmdBold> command to " "gather data that may help identify the nature of the error. If you " "cannot determine the nature of the error from the error message text " "or from the <CmdBold>show alignment<noCmdBold> output call your " "Cisco technical support representative and provide the representative " "with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ALIGN3-SPURIOUS_SO	3-Error	Spurious memory access made at [chars] reading [chars]	An attempted but illegal access to a low memory address within a software component in the router has been temporarily blocked.	-	"Copy the error message exactly as it appears on the console or in the " "system log. Issue the <CmdBold>show alignment<noCmdBold> command to " "gather data that may help identify the nature of the error. If you " "cannot determine the nature of the error from the error message text " "or from the <CmdBold>show alignment<noCmdBold> output call your " "Cisco technical support representative and provide the representative " "with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ALIGN-3-SPURIOUS_SO	3-Error	Spurious memory access made at [chars] reading [chars]	An attempted but illegal access to a low memory address within a software component in the router has been temporarily blocked.	-	"Copy the error message exactly as it appears on the console or in the " "system log. Issue the <CmdBold>show alignment<noCmdBold> command to " "gather data that may help identify the nature of the error. If you " "cannot determine the nature of the error from the error message text " "or from the <CmdBold>show alignment<noCmdBold> output call your " "Cisco technical support representative and provide the representative " "with the gathered information."
ALIGN-3-TRACE	3-Error	-Traceback= [chars]	A trace that shows where the previous ALIGN error occurred.	-	"Copy the error message exactly as it appears and report it to your\n technical support representative."
ALIGN-3-TRACE	3-Error	-Traceback= [chars]	A trace that shows where the previous ALIGN error occurred.	-	"Copy the error message exactly as it appears and report it to your\n technical support representative."
ALIGN-3-TRACE	3-Error	-Traceback= [chars]	A trace that shows where the previous ALIGN error occurred.	-	"Copy the error message exactly as it appears and report it to your\n technical support representative."



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ALIGN-3-TRACE	3-Error	-Traceback= [chars]	A trace that shows where the previous ALIGN error occurred.	cpu	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
ALIGN-3-TRACE	3-Error	-Traceback= [chars]	A trace that shows where the previous ALIGN error occurred.	cpu	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
ALIGN-3-TRACE	3-Error	-Traceback= [node]x [node]x [node]x [node]x [node]x [node]x [node]x [node]x	A trace that shows where the previous ALIGN error occurred.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
ALIGN-3-TRACE	3-Error	-Traceback= [node]x [node]x [node]x [node]x [node]x [node]x [node]x [node]x	A trace that shows where the previous ALIGN error occurred.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
ALIGN-3-TRACE_SO	3-Error	-Traceback= [chars]	A trace that shows where the previous ALIGN error occurred.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
ALIGN-3-TRACE_SO	3-Error	-Traceback= [chars]	A trace that shows where the previous ALIGN error occurred.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
ALIGN-3-TRACEX	3-Error	[chars]	A trace that shows where the previous ALIGN error occurred.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ALIGN-3-TRACEX	3-Error	[chars]	A trace that shows where the previous ALIGN error occurred.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
ALIGN-3-TRACEX	3-Error	[chars]	A trace that shows where the previous ALIGN error occurred.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
ALIGN-3-TRACEX	3-Error	[chars]	A trace that shows where the previous ALIGN error occurred.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
ALLOC-3-ICPM	3-Error	ERRMSG_NOFLAGS	-	-	-
ALLOC-3-ICPM	3-Error	ERRMSG_NOFLAGS	-	-	-
ALLOC-3-LCON	3-Error	ERRMSG_NOFLAGS	-	-	-
ALLOC-3-LCON	3-Error	ERRMSG_NOFLAGS	-	-	-
ALPS-3-ALPSFAIL	3-Error	ALPS: Assertion failed: [chars]	An internal software error has occurred.	-	LOG_STD_ACTION
ALPS3-ASCU_FSM_ERR	3-Error	ASCU [node]x on interface [chars] has an internal FSM error.	Internal error.	-	"Turn debug flags on capture traces & contact Cisco technical support"
ALPS3-ASCU_IF_STUCK	3-Error	Polling for ASCU [node]x on interface [chars] is stalled.	The polling mechanism for an ALPS interface has become stuck.	-	LOG_SID_NO_ACTION
ALPS3-ASCU_IF_DISABLED	5-Notice	ASCU [node]x on interface [chars] has been disabled since 4 consecutive messages were received from same SID.	An ALPS ASCU has been automatically disabled.	-	LOG_SID_NO_ACTION

<del>Facility-Severity-Mnemonic</del>	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ALPS-5-ASCU_DOWN	5-Notice	ASCU [node]x on interface [chars] is down.	An ALPS ASCU has transitioned from up to down.	-	LOG_SID_NO_ACTION
ALPS-5-ASCU_UP	5-Notice	ASCU [node]x on interface [chars] is up.	An ALPS ASCU has transitioned from down to up.	-	LOG_SID_NO_ACTION
ALPS5CIRCUIT_CLOSED	5-Notice	Circuit [chars] changed state to closed rsn = [chars].	An ALPS circuit has transitioned from open to closed	-	LOG_SID_NO_ACTION
ALPS-5-CIRCUIT_OPEN	5-Notice	Circuit [chars] changed state to open.	An ALPS circuit has transitioned from closed to open.	-	LOG_SID_NO_ACTION
ALPS-5-PEER_CLOSED	5-Notice	Peer [node][chars] changed state to closed.	An ALPS peer connection is now closed.	-	LOG_SID_NO_ACTION
<del>ALPS-5-PEER_CLOSED</del>	5-Notice	Peer [node][chars] closed due to inactivity.	An ALPS peer connection is now closed due to inactivity.	-	LOG_SID_NO_ACTION
<del>ALPS-5-PEER_CLOSED</del>	5-Notice	Peer [node][chars] ID modified to [node][chars].	An ALPS peer connection identifier has changed.	-	LOG_SID_NO_ACTION
ALPS-5-PEER_OPEN	5-Notice	Peer [node][chars] changed state to open.	An ALPS peer connection is now open.	-	LOG_SID_NO_ACTION
<del>ALPS-5-PEER_OPEN</del>	6-Information	Circuit [chars] received a Circuit Open Confirm with a list of rejected ascus	An ALPS circuit sent a Circuit Open Request message and\n\ received a Circuit Open Confirm with a list of rejected ascus.	-	LOG_SID_NO_ACTION
<del>ALPS-5-PEER_OPEN</del>	6-Information	Circuit [chars] has entered a congested state.	An ALPS circuit is experiencing congestion.	-	LOG_SID_NO_ACTION
<del>ALPS-5-PEER_OPEN</del>	6-Information	Circuit [chars] received a Circuit Open Failed message rsn = [chars].	An ALPS circuit sent a Circuit Open Request message and\n\ received a Circuit Open Failed message as a reply.	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ALPS6CIRCUIT_UPDATE_FAILED	6-Information	Circuit [chars] received a Circuit Open Failed message rsn = [chars].	An ALPS circuit sent a Circuit Update message and\n\n received a Circuit Open Failed message as a reply.	-	LOG_SID_NO_ACTION
ALPS6CIRCUIT_X25_VC_SLUCK	6-Information	Host unresponsive on X.25 VC for circuit [chars]	The X.25 or EMTOX host is not advancing the transmit window\n\n for extended periods of time. This may be indicative of a\n\n temporary problem with the host application. An X.25 Reset \n\n is sent to reset the transmit and receive windows to\n\n allow communication to proceed.	-	"None"
ALPS6PEER_BUSY_END	6-Information	Peer [node][chars] has exited a congested state.	An ALPS peer connection is no longer experiencing congestion.	-	LOG_SID_NO_ACTION
ALPS6PEER_BUSY_START	6-Information	Peer [node][chars] has entered a congested state.	An ALPS peer connection is experiencing congestion.	-	LOG_SID_NO_ACTION
ALPS6PEER_OPEN_FAIL	6-Information	Peer [node][chars] open failed rsn = [chars]	An ALPS peer connection attempted to open but failed to open.	-	LOG_SID_NO_ACTION
ALPS7CIRCUIT_BUSY_END	7-Debug	Circuit [chars] has exited a congested state.	An ALPS circuit is no longer experiencing congestion.	-	LOG_SID_NO_ACTION
ALPS7CIRCUIT_DROP_KILLED	7-Debug	Threshold exceeded for circuit disabled drops for circuit [chars]	The number of ALPS circuit drops due to circuit disabled \n\n exceeds the ALPS circuit threshold value.	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ALPS</del> CIRCUIT_DROP_INVALID_ASCU	7-Debug	Threshold exceeded for invalid ASCU drops for circuit [chars]	The number of ALPS circuit drops due to invalid ASCU identifier \n\ exceeds the ALPS circuit threshold value.	-	LOG_SID_NO_ACTION
<del>ALPS</del> CIRCUIT_DROP_LIFETIME_EXPIRATION	7-Debug	Threshold exceeded for lifetime timer expiration drops for circuit [chars]	The number of ALPS circuit drops due to lifetime timer \n\ expiration exceeds the ALPS circuit threshold value.	-	LOG_SID_NO_ACTION
<del>ALPS</del> CIRCUIT_DROP_QUEUE_OVERFLOW	7-Debug	Threshold exceeded for queue overflow drops for circuit [chars]	The number of ALPS circuit drops due to queue overflow \n\ exceeds the ALPS circuit threshold value.	-	LOG_SID_NO_ACTION
<del>ALPS</del> CIRCUIT_DROP_X25_VC_RESET	7-Debug	Threshold exceeded for X.25 VC Reset drops for circuit [chars]	The number of ALPS circuit drops due to X.25 VC Reset \n\ exceeds the ALPS circuit threshold value.	-	LOG_SID_NO_ACTION
<del>ALPS</del> CIRCUIT_DROP_MAX_SIZE_EXCEEDED	7-Debug	Threshold exceeded for maximum size exceeded drops for peer [node][chars].	-	-	-
<del>ALPS</del> CIRCUIT_DROP_PEER_UNREACHABLE	7-Debug	Threshold exceeded for peer unreachable peer drops for peer [node][chars].	-	-	-
<del>ALPS</del> CIRCUIT_DROP_TCP_QUEUE_OVERFLOW	7-Debug	Threshold exceeded for TCP Queue overflow peer drops for peer [node][chars].	-	-	-
<del>ALPS</del> CIRCUIT_DROP_VERSION_MISMATCH	7-Debug	Threshold exceeded for version mismatch peer drops for peer [node][chars].	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AMD79C971-FAILED_SUSPEND	5-Notice	Failed to suspend the amd79c971 chip	Failed to suspend the amd79c971 chip	Mid-Ethernet	LOG_STD_ACTION
AMDP2_FE-1-DISCOVER	1-Alert	Only found [dec] interfaces on bay [dec] shutting down bay	The software could not identify the interface card.	pas-ethernet	"Power down reseal the interface card " "and reboot. If the message recurs call your " "technical support representative for assistance."
AMDP2_FE-1-INITFAIL	1-Alert	[chars] CSR[dec]=0x[node]x	The software failed to initialize/restart an Ethernet/Fast Ethernet interface.	pas-ethernet	"Try resetting the interface by doing a <CmdBold>shutdown <NoCmdBold> followed by " "a <CmdBold>no shutdown<NoCmdBold>. If the message recurs try reseating the Port " "Adaptor. If reseating also does not work call your technical " "support representative for assistance."
AMDP2_FE-1-MEMERR	1-Alert	[chars] CSR[dec]=0x[node]x	The interface could not access system resources for a long time. This problem may occur under very heavy loads.	pas-ethernet	"The system should recover. No action is required. If the message " "recurs call your technical support representative for assistance."
AMDP2_FE-1-NOMII	1-Alert	[chars] MII transceiver not connected	The MII transceiver was disconnected while the MII port was selected.	pas-ethernet	"Connect the transceiver and enter the <bold> " "shut <no bold> and <bold> no shut <no bold> commands for the " "interface in the configuration menu."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AMDP2_FE1NOISURCRHD	1-Alert	2FE PA not supported on NPE100 shutting down bay	2FE PA is not supported on a 7200 with NPE100.	pas-ethernet	"NPE150 or better is needed for 2FE PA."
AMDP2_FE2-NOISL	2-Critical	[chars] hardware does not support ISL	The interface cannot be configured as an ISL trunk.	pas-ethernet	"Check the configuration."
AMDP2_FE3NOTAMDP2	3-Error	Slot [dec] device ID seen as [hex] expected [hex]	The software could not recognize the interface chips.	pas-ethernet	"Power down reseal the interface card and "reboot. If the message recurs call your "technical support representative for assistance."
AMDP2_FE3-OWNERR	3-Error	[chars] packet buffer pak=0x[hec]	The software detected an error in descriptor ownership.	pas-ethernet	"Try a later version of the software. If the message "recurs call your technical support representative "for assistance."
AMDP2_FE3SPURIDON	3-Error	[chars] spurious chip init CSR[dec]=0x[node]x	An illegal condition indicating initialization done has occurred.	pas-ethernet	"Clear the interface. "If this message recurs call your technical support "representative for assistance."
AMDP2_FE3COMANPART	3-Error	Bad packet with [dec] particles pak=0x[hec]	The software detected an invalid packet.	pas-ethernet	"Try a later version of the software. If the message "recurs call your technical support representative "for assistance."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AMDP2_FE3UNDERFLO	3-Error	[chars] transmit error	While transmitting a frame the controller chip's local buffer received insufficient data because data could not be transferred to the chip fast enough to keep pace with its output rate. Normally such a problem is temporary depending on transient peak loads within the system.	pas-ethernet	"The system should recover. No action is required."
AMDP2_FE4BABBLE	4-Warning	[chars] transmit problem CSR0=[hex]	The transmitter has been on the channel longer than the time taken to transmit the largest frame	pas-ethernet	"The system should recover. No action is required."
AMDP2_FE5LATECOLL	5-Notice	[chars] transmit error	Late collisions occurred on the Ethernet/Fast Ethernet interface. When a collision occurs after the preamble has been transmitted then such a collision is called a LATE collision. The packet will be retransmitted but this condition could also indicate that another device is failing to detect when the network is in use.	pas-ethernet	"If the interface is Fast Ethernet verify that both " "peers are in the same duplex mode. For regular " "Ethernet the system should recover. No action is " "required."
AMDP2_FE5LOSTICARR	5-Notice	[chars] cable/transceiver problem?	The cable and/or transceiver is not connected.	pas-ethernet	"Connect the cable and/or transceiver."



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AMDP2-EXCESSCOLL	6-Information	[chars] TDR=[dec] TRC=[dec]	Ethernet/Fast Ethernet is seeing multiple collisions. This may occur under heavy loads.	pas-ethernet	"The system should recover. No action is " "required."
AMT-2-ADD_GATEWAY	2-Critical	Error adding new Gateway	Can't get memory for a new Gateway [chars] port [dec]	-	LOG_SID_NO_ACTION
AMT-2-ADD_GATEWAY	2-Critical	Error adding new Gateway	Can't get memory for a new Gateway [chars] port [dec]	-	LOG_SID_NO_ACTION
AMT-2-GATEWAY_INIT	2-Critical	Error initializing AMT Gateway	Insufficient memory is available to initialize Gateway	-	LOG_SID_SH_TECH_ACTION
AMT-2-GATEWAY_INIT	2-Critical	Error initializing AMT Gateway	Insufficient memory is available to initialize Gateway	-	LOG_SID_SH_TECH_ACTION
AMT-2-MSGTYPE_ERR	2-Critical	[chars] AMT message with invalid type [dec]	AMT type is not 1-7	-	LOG_SID_NO_ACTION
AMT-2-MSGTYPE_ERR	2-Critical	[chars] AMT message with invalid type [dec]	AMT type is not 1-7	-	LOG_SID_NO_ACTION
AMT-2-PROCESS_ERR	2-Critical	Error initializing AMT process	Can't start the AMT process	-	LOG_SID_NO_ACTION
AMT-2-PROCESS_ERR	2-Critical	Error initializing AMT process	Can't start the AMT process	-	LOG_SID_NO_ACTION
AMT-2-RELAY_INIT	2-Critical	Error initializing AMT Relay	Insufficient memory is available to initialize Relay	-	LOG_SID_SH_TECH_ACTION
AMT-2-RELAY_INIT	2-Critical	Error initializing AMT Relay	Insufficient memory is available to initialize Relay	-	LOG_SID_SH_TECH_ACTION
AMT-2-RPT_WAVLINIT	2-Critical	Error initializing IGMP Unsolicited Report handler	Insufficient memory is available to initialize the IGMP \n\ Unsolicited Report handler.	-	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AMT-2-RPT_WAVLINT	2-Critical	Error initializing IGMP Unsolicited Report handler	Insufficient memory is available to initialize the IGMP \n\n Unsolicited Report handler.	-	LOG_SID_SH_TECH_ACTION
ANACPCHNLNBR_AID	3-Error	Failed to create ACP [chars] from Device Addr [chars]	Autonomic Network Control Plane Channel has not been created to the neighbor	AN	LOG_SID_NO_ACTION
ANACPCHNLNBR_AID	3-Error	Failed to create ACP [chars] from Device Addr [chars]	Autonomic Network Control Plane Channel has not been created to the neighbor	AN	LOG_SID_NO_ACTION
ANACPIKTONR_AID	3-Error	Failed to create DIKE on ACP [chars] from Device Addr [chars]	Autonomic Network Control plane - Failed to create DIKE tunnel to neighbor	AN	LOG_SID_NO_ACTION
ANACPIKTONR_AID	3-Error	Failed to create DIKE on ACP [chars] from Device Addr [chars]	Autonomic Network Control plane - Failed to create DIKE tunnel to neighbor	AN	LOG_SID_NO_ACTION
ANACPISECIONR_AID	3-Error	Failed to create IPSEC on ACP from device Addr [chars]	Autonomic Network Control plane - Failed to create IPSEC tunnel to neighbor	AN	LOG_SID_NO_ACTION
ANACPISECIONR_AID	3-Error	Failed to create IPSEC on ACP from device Addr [chars]	Autonomic Network Control plane - Failed to create IPSEC tunnel to neighbor	AN	LOG_SID_NO_ACTION
ANACPVRFIDNBR_AID	3-Error	Device UDI [chars] failed to create	Autonomic network VRF has not been created globally	AN	LOG_SID_NO_ACTION
ANACPVRFIDNBR_AID	3-Error	Device UDI [chars] failed to create	Autonomic network VRF has not been created globally	AN	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ANCPVRFNFACECREAFL</del>	3-Error	Device UDI [chars] failed to create Autonomic VRF	Autonomic network VRF has not been created on the interface	AN	LOG_SID_NO_ACTION
<del>ANCPVRFNFACECREAFL</del>	3-Error	Device UDI [chars] failed to create Autonomic VRF	Autonomic network VRF has not been created on the interface	AN	LOG_SID_NO_ACTION
<del>ANARWHITELISTHEEROR</del>	3-Error	Autonomic Registrar with Addr [chars] encountered error in	The autonomic registration authority encountered file error when reading from whitelist file check the file name and its contents	AN	LOG_SID_NO_ACTION
<del>ANARWHITELISTHEEROR</del>	3-Error	Autonomic Registrar with Addr [chars] encountered error in	The autonomic registration authority encountered file error when reading from whitelist file check the file name and its contents	AN	LOG_SID_NO_ACTION
<del>ANEDOMANKEYGENIAL</del>	3-Error	The bootstrapping device with key label [chars]	The key pair generation failed at the device for triggering BS request message to Autonomic registrar. Can be due to failure in RSA key pair generation in the crypto library	AN	LOG_SID_NO_ACTION
<del>ANEDOMANKEYGENIAL</del>	3-Error	The bootstrapping device with key label [chars]	The key pair generation failed at the device for triggering BS request message to Autonomic registrar. Can be due to failure in RSA key pair generation in the crypto library	AN	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ANBDPNIENHLEHRCR	3-Error	Device Addr [chars] encountered error [chars] when reading from	The Intent Distribution Protocol Module encountered file error when reading from intent file check the file name and its contents	AN	LOG_SID_NO_ACTION
ANBDPNIENHLEHRCR	3-Error	Device Addr [chars] encountered error [chars] when reading from	The Intent Distribution Protocol Module encountered file error when reading from intent file check the file name and its contents	AN	LOG_SID_NO_ACTION
ANBMGNALDHEADER	3-Error	Invalid message header type [dec] received	The message packet header got corrupted and invalid header received	AN	LOG_SID_NO_ACTION
ANBMGNALDHEADER	3-Error	Invalid message header type [dec] received	The message packet header got corrupted and invalid header received	AN	LOG_SID_NO_ACTION
ANBRDMANCREXRD	3-Error	Domain certificate of Neighbor with Addr [chars] connected on interface [chars] has expired	The domain certificate of the neighbor device has expired	AN	LOG_SID_NO_ACTION
ANBRDMANCREXRD	3-Error	Domain certificate of Neighbor with Addr [chars] connected on interface [chars] has expired	The domain certificate of the neighbor device has expired	AN	LOG_SID_NO_ACTION
ANBRDMANCRINAD	3-Error	Domain certificate of Neighbor with Addr [chars] connected on interface [chars] is invalid	The domain certificate of the neighbor device is invalid	AN	LOG_SID_NO_ACTION
ANBRDMANCRINAD	3-Error	Domain certificate of Neighbor with Addr [chars] connected on interface [chars] is invalid	The domain certificate of the neighbor device is invalid	AN	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ANRDOMAINCERTREVOKED	3-Error	Domain certificate of Neighbor with Addr [chars] connected on interface [chars] is revoked	The domain certificate of the neighbor device has been revoked	AN	LOG_SID_NO_ACTION
ANRDOMAINCERTREVOKED	3-Error	Domain certificate of Neighbor with Addr [chars] connected on interface [chars] is revoked	The domain certificate of the neighbor device has been revoked	AN	LOG_SID_NO_ACTION
ANTLVPARSEALIGNERRCR	3-Error	TLV parsed Len [dec] Next TLV could be misaligned	Parsed TLV message is not a multiple of 4 and the next TLV message can be misaligned	AN	LOG_SID_NO_ACTION
ANTLVPARSEALIGNERRCR	3-Error	TLV parsed Len [dec] Next TLV could be misaligned	Parsed TLV message is not a multiple of 4 and the next TLV message can be misaligned	AN	LOG_SID_NO_ACTION
ANTLVPARSELENINCORRECT	3-Error	TLV parsed len [dec] > original message length [dec]	Parsed TLV message length is greater than original message length	AN	LOG_SID_NO_ACTION
ANTLVPARSELENINCORRECT	3-Error	TLV parsed len [dec] > original message length [dec]	Parsed TLV message length is greater than original message length	AN	LOG_SID_NO_ACTION
AN4ANRSGNVERIFYFAIL	4-Warning	Device UDI [chars] signature verification of Autonomic registrar	The new device joining the network verified the signature of autonomic registrar as a part of mutual authentication and the verification failed	AN	LOG_SID_NO_ACTION

<del>Facility-Severity-Mnemonic</del>	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ANANR_SGN_VRFY_FAIL</del>	4-Warning	Device UDI [chars] signature verification of Autonomic registrar	The new device joining the network verified the signature of autonomic registrar as a part of mutual authentication and the verification failed	AN	LOG_SID_NO_ACTION
<del>ANNEABDRKSHLBYAR</del>	4-Warning	Device with UDI [chars] connected to Proxy Addr [chars] on interface [chars] is already registered by	The autonomic network registration authority will not allow this device to join as it already registered with a different public key	AN	LOG_SID_NO_ACTION
<del>ANNEABDRKSHLBYAR</del>	4-Warning	Device with UDI [chars] connected to Proxy Addr [chars] on interface [chars] is already registered by	The autonomic network registration authority will not allow this device to join as it already registered with a different public key	AN	LOG_SID_NO_ACTION
<del>ANEMENOTNWHILIST</del>	4-Warning	Device with UDI [chars]	The autonomic network registration authority will not allow this device to join as it is not in whitelist	AN	LOG_SID_NO_ACTION
<del>ANEMENOTNWHILIST</del>	4-Warning	Device with UDI [chars]	The autonomic network registration authority will not allow this device to join as it is not in whitelist	AN	LOG_SID_NO_ACTION
<del>ANMASA_AUDIT_LOG_FAIL</del>	4-Warning	Device with udi [chars] is not in the audit log of MASA	The manufacturer authorised signing authority audit log doesnt contain this device in its database	AN	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AN4MASA_AUDITLOG_FAIL	4-Warning	Device with udi [chars] is not in the audit log of MASA	The manufacturer authorised signing authority audit log doesnt contain this device in its database	AN	LOG_SID_NO_ACTION
AN4MASA_AUTH_FAIL	4-Warning	Device with udi [chars] is not authorized by MASA	The MASA - manufacturer authorised signing authority has not authorised this device in its network	AN	LOG_SID_NO_ACTION
AN4MASA_AUTH_FAIL	4-Warning	Device with udi [chars] is not authorized by MASA	The MASA - manufacturer authorised signing authority has not authorised this device in its network	AN	LOG_SID_NO_ACTION
<del>AN4MASA_AUTH_FAIL</del>	4-Warning	Error while parsing authentication token from MASA server for device udi-[chars]	Encountered error while parsing the authentication token response string from MASA server	AN	LOG_SID_NO_ACTION
<del>AN4MASA_AUTH_FAIL</del>	4-Warning	Error while parsing authentication token from MASA server for device udi-[chars]	Encountered error while parsing the authentication token response string from MASA server	AN	LOG_SID_NO_ACTION
AN-5-ANR_DOWN	5-Notice	Disabled autonomic registrar with Addr [chars]	The autonomic network registration authority functionality is disabled	AN	LOG_SID_NO_ACTION
AN-5-ANR_DOWN	5-Notice	Disabled autonomic registrar with Addr [chars]	The autonomic network registration authority functionality is disabled	AN	LOG_SID_NO_ACTION
AN-5-ANR_UP	5-Notice	A New Autonomic Registrar has been configured in domain [chars] and it has been assigned IP Addr [chars]	The autonomic network registration authority has been configiured and is locally up	AN	LOG_SID_NO_ACTION

<del>Facility</del> Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AN-5-ANR_UP	5-Notice	A New Autonomic Registrar has been configured in domain [chars] and it has been assigned IP Addr [chars]	The autonomic network registration authority has been configured and is locally up	AN	LOG_SID_NO_ACTION
<del>AN5CD_STATE_CHANGED</del>	5-Notice	[chars] Channel [dec] [chars] - Our Intf [chars]	CD L2 or Reuse Channel Created/Removed/Expired	AN	LOG_SID_NO_ACTION
<del>AN5CD_STATE_CHANGED</del>	5-Notice	[chars] Channel [dec] [chars] - Our Intf [chars]	CD L2 or Reuse Channel Created/Removed/Expired	AN	LOG_SID_NO_ACTION
<del>AN5CD_STATE_CHANGED</del>	5-Notice	Device with UDI [chars] and Addr [chars] has been bootstrapped by autonomic registrar in autonomic domain [chars]	The autonomic network registration authority has bootstrapped this device	AN	LOG_SID_NO_ACTION
<del>AN5CD_STATE_CHANGED</del>	5-Notice	Device with UDI [chars] and Addr [chars] has been bootstrapped by autonomic registrar in autonomic domain [chars]	The autonomic network registration authority has bootstrapped this device	AN	LOG_SID_NO_ACTION
<del>AN5CD_STATE_CHANGED</del>	5-Notice	Device Addr [chars] discarded the older intent version [dec]	The device received an old intent file by Intent Distribution Protocol and is discarding it	AN	LOG_SID_NO_ACTION
<del>AN5CD_STATE_CHANGED</del>	5-Notice	Device Addr [chars] discarded the older intent version [dec]	The device received an old intent file by Intent Distribution Protocol and is discarding it	AN	LOG_SID_NO_ACTION
<del>AN5CD_STATE_CHANGED</del>	5-Notice	Device Addr [chars] updated to a new Intent version [dec]	The device received a new intent file by Intent Distribution Protocol	AN	LOG_SID_NO_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AN-5-INTENT_UPDATED	5-Notice	Device Addr [chars] updated to a new Intent version [dec]	The device received a new intent file by Intent Distribution Protocol	AN	LOG_SID_NO_ACTION
AN-5-NBR_ADDED	5-Notice	Device with UDI [chars] is added as a Neighbor to Device with Addr [chars] on the interface [chars]	A hello message is received and the device is added in the neighbor table	AN	LOG_SID_NO_ACTION
AN-5-NBR_ADDED	5-Notice	Device with UDI [chars] is added as a Neighbor to Device with Addr [chars] on the interface [chars]	A hello message is received and the device is added in the neighbor table	AN	LOG_SID_NO_ACTION
AN-5-NBR_IN_DOMAIN	5-Notice	Neighbor with Addr [chars] connected via interface [chars] to device Addr [chars] is brought inside my domain [chars]	The device has been admitted into the autonomic domain	AN	LOG_SID_NO_ACTION
AN-5-NBR_IN_DOMAIN	5-Notice	Neighbor with Addr [chars] connected via interface [chars] to device Addr [chars] is brought inside my domain [chars]	The device has been admitted into the autonomic domain	AN	LOG_SID_NO_ACTION
AN-5-NBR_LOST	5-Notice	Device with ACP Addr [chars] lost connectivity to its Neighbor Addr [chars] on interface [chars]	Lost connectivity to the neighboring device & it is no longer part of autonomic domain	AN	LOG_SID_NO_ACTION
AN-5-NBR_LOST	5-Notice	Device with ACP Addr [chars] lost connectivity to its Neighbor Addr [chars] on interface [chars]	Lost connectivity to the neighboring device & it is no longer part of autonomic domain	AN	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AN5-NBR_OUT_DOMAIN	5-Notice	Neighbor with Addr [chars] connected via interface [chars]	The device is removed from the autonomic domain it can happen if the domain certificate is NULL or if the domain certificate is invalid	AN	LOG_SID_NO_ACTION
AN5-NBR_OUT_DOMAIN	5-Notice	Neighbor with Addr [chars] connected via interface [chars]	The device is removed from the autonomic domain it can happen if the domain certificate is NULL or if the domain certificate is invalid	AN	LOG_SID_NO_ACTION
AN5-SERVICE_LEARNED	5-Notice	Device with Addr [chars] learnt Autonomic service with Service Type [dec] Service IP Addr [chars]	-	-	-
AN5-SERVICE_LEARNED	5-Notice	Device with Addr [chars] learnt Autonomic service with Service Type [dec] Service IP Addr [chars]	-	-	-
AN6-CHANNEL_CREATED	6-Information	Established ACP [chars] from Device Addr [chars] to	Autonomic Network Control plane Channel has been created to the neighbor	AN	LOG_SID_NO_ACTION
AN6-CHANNEL_CREATED	6-Information	Established ACP [chars] from Device Addr [chars] to	Autonomic Network Control plane Channel has been created to the neighbor	AN	LOG_SID_NO_ACTION
AN6-CHANNEL_REMOVED	6-Information	Removed ACP [chars] from Device Addr [chars] to	Autonomic Network Control Plane Channel to neighbor is removed	AN	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ANCPINLNCR</del> <del>READ</del>	6-Information	Removed ACP [chars] from Device Addr [chars] to	Autonomic Network Control Plane Channel to neighbor is removed	AN	LOG_SID_NO_ACTION
<del>ANCPDIKONCR</del> <del>READ</del>	6-Information	Established DIKE on ACP [chars] from Device Addr [chars]	Autonomic Network Control plane - DIKE tunnel established to neighbor	AN	LOG_SID_NO_ACTION
<del>ANCPDIKONCR</del> <del>READ</del>	6-Information	Established DIKE on ACP [chars] from Device Addr [chars]	Autonomic Network Control plane - DIKE tunnel established to neighbor	AN	LOG_SID_NO_ACTION
<del>ANCPDIKONCR</del> <del>READ</del>	6-Information	Removed DIKE on ACP [chars] from Device Addr [chars]	Autonomic Network Control plane - DIKE tunnel to neighbor is removed	AN	LOG_SID_NO_ACTION
<del>ANCPDIKONCR</del> <del>READ</del>	6-Information	Removed DIKE on ACP [chars] from Device Addr [chars]	Autonomic Network Control plane - DIKE tunnel to neighbor is removed	AN	LOG_SID_NO_ACTION
<del>ANCPISCONCR</del> <del>READ</del>	6-Information	Established IPSEC on ACP from Device Addr [chars]	Autonomic Network Control plane - IPSEC tunnel established to neighbor	AN	LOG_SID_NO_ACTION
<del>ANCPISCONCR</del> <del>READ</del>	6-Information	Established IPSEC on ACP from Device Addr [chars]	Autonomic Network Control plane - IPSEC tunnel established to neighbor	AN	LOG_SID_NO_ACTION
<del>ANCPISCONCR</del> <del>READ</del>	6-Information	Removed IPSEC on ACP from Device Addr [chars] to	Autonomic Network Control plane - IPSEC tunnel to neighbor is removed	AN	LOG_SID_NO_ACTION
<del>ANCPISCONCR</del> <del>READ</del>	6-Information	Removed IPSEC on ACP from Device Addr [chars] to	Autonomic Network Control plane - IPSEC tunnel to neighbor is removed	AN	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>A@CRONCJOBUBBE</del>	6-Information	Removed OSPFv3 routing globally pid [dec]	OSPF routing has been disabled globally	AN	LOG_SID_NO_ACTION
<del>A@CRONCJOBUBBE</del>	6-Information	Removed OSPFv3 routing globally pid [dec]	OSPF routing has been disabled globally	AN	LOG_SID_NO_ACTION
<del>A@CRONCJOBUEBD</del>	6-Information	Enabled global OSPFv3 pid [dec]rid [node]rea [dec]	OSPF routing has been enabled globally	AN	LOG_SID_NO_ACTION
<del>A@CRONCJOBUEBD</del>	6-Information	Enabled global OSPFv3 pid [dec]rid [node]rea [dec]	OSPF routing has been enabled globally	AN	LOG_SID_NO_ACTION
<del>A@CRONCJHAEABD</del>	6-Information	OSPF routing enabled on interface: [chars] pid [dec]rid [node]area [dec]	OSPF routing has been enabled on all physical interface	AN	LOG_SID_NO_ACTION
<del>A@CRONCJHAEABD</del>	6-Information	OSPF routing enabled on interface: [chars] pid [dec]rid [node]area [dec]	OSPF routing has been enabled on all physical interface	AN	LOG_SID_NO_ACTION
<del>A@CRONCJGAEFCS</del>	6-Information	Device UDI [chars] Autonomic VRF	Autonomic network VRF has been created globally	AN	LOG_SID_NO_ACTION
<del>A@CRONCJGAEFCS</del>	6-Information	Device UDI [chars] Autonomic VRF	Autonomic network VRF has been created globally	AN	LOG_SID_NO_ACTION
<del>A@CRONCJGAEFCS</del>	6-Information	Device UDI [chars] Autonomic VRF	Autonomic network VRF has been removed globally	AN	LOG_SID_NO_ACTION
<del>A@CRONCJGAEFCS</del>	6-Information	Device UDI [chars] Autonomic VRF	Autonomic network VRF has been removed globally	AN	LOG_SID_NO_ACTION
<del>A@CRONCJHAEFCS</del>	6-Information	Device UDI [chars]	Autonomic network VRF has been created on the interface	AN	LOG_SID_NO_ACTION
<del>A@CRONCJHAEFCS</del>	6-Information	Device UDI [chars]	Autonomic network VRF has been created on the interface	AN	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>AN_ADRB_CONSOLE</del>	6-Information	Autonomic disabled due to User intervention on console. configure 'autonomic' to enable it.	User entered into configuration mode So AN is disabled An process is stopped	AN	LOG_SID_NO_ACTION
<del>AN_ADRB_CONSOLE</del>	6-Information	Autonomic disabled due to User intervention on console. configure 'autonomic' to enable it.	User entered into configuration mode So AN is disabled An process is stopped	AN	LOG_SID_NO_ACTION
<del>AN_ADRB_NA_CONFIG</del>	6-Information	Autonomic disabled due to detection of new configuration.	Some other process configures something. So AN is disabled An process is stopped	AN	LOG_SID_NO_ACTION
<del>AN_ADRB_NA_CONFIG</del>	6-Information	Autonomic disabled due to detection of new configuration.	Some other process configures something. So AN is disabled An process is stopped	AN	LOG_SID_NO_ACTION
<del>AN_ADRB_NO_AUTOM</del>	6-Information	Autonomic disabled due to 'no autonomic' command.	'No autonomic' command is entered So AN is disabled An process is stopped	AN	LOG_SID_NO_ACTION
<del>AN_ADRB_NO_AUTOM</del>	6-Information	Autonomic disabled due to 'no autonomic' command.	'No autonomic' command is entered So AN is disabled An process is stopped	AN	LOG_SID_NO_ACTION
AN_AR_WHITELIST_CFG	6-Information	Autonomic registrar with Addr [chars] Domain id [chars] has whitelist- will allow only these devices in autonomic network	The autonomic registration authority has been configured with white list and will allow only these devices to enter its network	AN	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>AN</del> ANR_WHLIST_CONG	6-Information	Autonomic registrar with Addr [chars] Domain id [chars] has whitelist- will allow only these devices in autonomic network	The autonomic registration authority has been configured with white list and will allow only these devices to enter its network	AN	LOG_SID_NO_ACTION
<del>AN</del> ANR_WHLIST_NO_CONG	6-Information	Autonomic registrar with Addr [chars] has no whitelist- will allow all devices	The autonomic registration authority has not been configured with white list and will allow all devices to enter its network	AN	LOG_SID_NO_ACTION
<del>AN</del> ANR_WHLIST_NO_CONG	6-Information	Autonomic registrar with Addr [chars] has no whitelist- will allow all devices	The autonomic registration authority has not been configured with white list and will allow all devices to enter its network	AN	LOG_SID_NO_ACTION
<del>AN</del> ANCONG_DOWNLOAD_FAILED	6-Information	Config download on the Device Addr [chars] has FAILED	Failed to download the config file to the Running config	AN	LOG_SID_NO_ACTION
<del>AN</del> ANCONG_DOWNLOAD_FAILED	6-Information	Config download on the Device Addr [chars] has FAILED	Failed to download the config file to the Running config	AN	LOG_SID_NO_ACTION
<del>AN</del> ANCONG_DOWNLOAD_STARTED	6-Information	Config download started on the Device Addr [chars]	Config download is triggered	AN	LOG_SID_NO_ACTION
<del>AN</del> ANCONG_DOWNLOAD_STARTED	6-Information	Config download started on the Device Addr [chars]	Config download is triggered	AN	LOG_SID_NO_ACTION
<del>AN</del> ANCONG_DOWNLOAD_SUCCESS	6-Information	Config download at the Device Addr [chars]	Download of the config file to the Running config is Successful	AN	LOG_SID_NO_ACTION
<del>AN</del> ANCONG_DOWNLOAD_SUCCESS	6-Information	Config download at the Device Addr [chars]	Download of the config file to the Running config is Successful	AN	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AN-6-CONFIG_SAVE	6-Information	Issuing 'write memory' to save config	Saving configurations to startup-config by AN process	AN	LOG_SID_NO_ACTION
AN-6-CONFIG_SAVE	6-Information	Issuing 'write memory' to save config	Saving configurations to startup-config by AN process	AN	LOG_SID_NO_ACTION
AN-6-DEVICE_ALLOWED_BY_AN	6-Information	Device with udi [chars] is allowed by autonomic registrar in its Domain ID [chars] with addr [chars] and Device ID [chars]	The autonomic network registration authority has authorised this device to enter its network	AN	LOG_SID_NO_ACTION
AN-6-DEVICE_ALLOWED_BY_AN	6-Information	Device with udi [chars] is allowed by autonomic registrar in its Domain ID [chars] with addr [chars] and Device ID [chars]	The autonomic network registration authority has authorised this device to enter its network	AN	LOG_SID_NO_ACTION
AN-6-DEVICE_ENROLLED	6-Information	Device with UDI [chars] connected to Proxy Addr [chars] on the interface [chars] is allowed by Autonomic registrar Addr [chars]	The autonomic network registration authority has enrolled this device	AN	LOG_SID_NO_ACTION
AN-6-DEVICE_ENROLLED	6-Information	Device with UDI [chars] connected to Proxy Addr [chars] on the interface [chars] is allowed by Autonomic registrar Addr [chars]	The autonomic network registration authority has enrolled this device	AN	LOG_SID_NO_ACTION
AN-6-MASA_NOT_CONFIG	6-Information	Autonomic registrar with udi [chars] has no reachability to MASA -not configured Cant verify device udi [chars]	The manufacturer authorised signing authority has not been configured cannot do the verification of device	AN	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AN6MASA_NOT_CONFIG	6-Information	Autonomic registrar with udi [chars] has no reachability to MASA -not configured Cant verify device udi [chars]	The manufacturer authorised signing authority has not been configured cannot do the verification of device	AN	LOG_SID_NO_ACTION
AN6DOMAINCERTEXPIRED	6-Information	Domain certificate of this device Addr [chars] has expired	The domain certificate of this device has expired	AN	LOG_SID_NO_ACTION
AN6DOMAINCERTEXPIRED	6-Information	Domain certificate of this device Addr [chars] has expired	The domain certificate of this device has expired	AN	LOG_SID_NO_ACTION
AN6DOMAINCERTRENEWED	6-Information	Domain certificate of device Addr [chars] has been renewed	The domain certificate of this device is renewed	AN	LOG_SID_NO_ACTION
AN6DOMAINCERTRENEWED	6-Information	Domain certificate of device Addr [chars] has been renewed	The domain certificate of this device is renewed	AN	LOG_SID_NO_ACTION
AN6NEIGHBORCERTVALID	6-Information	Domain certificate of Neighbor with Addr [chars]	The domain certificate of the neighbor device is validated successfully	AN	LOG_SID_NO_ACTION
AN6NEIGHBORCERTVALID	6-Information	Domain certificate of Neighbor with Addr [chars]	The domain certificate of the neighbor device is validated successfully	AN	LOG_SID_NO_ACTION
AN6SUDI_AVAILABLE	6-Information	secure UDI - [chars]	Secure unique device identification number is available on the device	AN	LOG_SID_NO_ACTION
AN6SUDI_AVAILABLE	6-Information	secure UDI - [chars]	Secure unique device identification number is available on the device	AN	LOG_SID_NO_ACTION
AN6UDI_AVAILABLE	6-Information	UDI - [chars]	Unique device identification number is available on the device	AN	LOG_SID_NO_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AN-6-UDI_AVAILABLE	6-Information	UDI - [chars]	Unique device identification number is available on the device	AN	LOG_STD_NO_ACTION
<del>POWER_ERROR</del>	3-Error	ewlc-ap	Error in[chars]	General Wireless LAN Controller Error Message.	LOG_STD_ACTION
API_BAD_ARGUMENTS-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
API_BAD_ARGUMENTS-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
API_BAD_RESPONSE-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
API_BAD_RESPONSE-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
API_FAILED-3-L2VPN	3-Error	ERRMSG_NOFLAGS	-	-	-
API_FAILED-3-L2VPN	3-Error	ERRMSG_NOFLAGS	-	-	-
API_FAILED-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
API_FAILED-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
API_MSG-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
API_MSG-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
APM-3-CACHE_SIZE	3-Error	Configured cache size is too large. Value has been limited to [dec]100 x platform default.	configured cache size is too big	media-mon	LOG_STD_ACTION
APM-3-CACHE_SIZE	3-Error	Configured cache size is too large. Value has been limited to [dec]100 x platform default.	configured cache size is too big	media-mon	LOG_STD_ACTION
APM-3-INIT	3-Error	[chars]	Easy Perf Mon Initialization failed	media-mon	LOG_STD_ACTION
APM-3-INIT	3-Error	[chars]	Easy Perf Mon Initialization failed	media-mon	LOG_STD_ACTION
APM-3-LIST	3-Error	[chars] [chars]	List operation error occurred.	media-mon	LOG_STD_ACTION
APM-3-LIST	3-Error	[chars] [chars]	List operation error occurred.	media-mon	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
APM-3-MEM	3-Error	Memory [chars] failed - [chars]	Memory operation failed	media-mon	LOG_STD_ACTION
APM-3-MEM	3-Error	Memory [chars] failed - [chars]	Memory operation failed	media-mon	LOG_STD_ACTION
<del>APM-3-MEM</del>	3-Error	ewlc-client	User ID:[chars] - Unable to update broadcast keys to AP	Unable to update broadcast keys to AP	LOG_STD_ACTION
<del>APM-3-MEM</del>	6-Information	ewlc-ap	AP[chars] User ID[chars][chars][chars][chars]	TV_AP_CALDIP_LOAD parameters	LOG_STD_ACTION
<del>APM-3-MEM</del>	6-Information	ewlc-awips	AWIPS alarm:%s (%d)	AWIPS alarm detected	LOG_SID_NO_ACTION
<del>APM-3-MEM</del>	2-Critical	ewlc-ap	BSSID cleanup timeout	-	-
<del>APM-3-MEM</del>	2-Critical	ewlc-ap	WLAN Error :[chars]	Critical issue seen with WLAN config. Make a note of any recent changes made to the network or the device configuration which may have triggered this and proceed to the suggested action.	Copy the error message exactly as it appears on the console or in the system log. Open a case with the Technical Assistance Center via the Internet <a href="http://www.cisco.com">http://www.cisco.com</a>
<del>APM-3-MEM</del>	2-Critical	ewlc-ap	CRITICAL	-	-
<del>APM-3-MEM</del>	2-Critical	ewlc-ap	CRITICAL	-	-
<del>APM-3-MEM</del>	3-Error	ewlc-ap	AP[chars] MAC[chars]	-	-
<del>APM-3-MEM</del>	3-Error	ewlc-ap	Info : -[chars]	General Wireless LAN Controller info message	LOG_STD_ACTION
<del>APM-3-MEM</del>	3-Error	ewlc-rrm	Antenna set error:[chars]	Antenna id enable/disable operation has resulted in error. please follow error message for details	"Please follow error message string and take corrective action"
<del>APM-3-MEM</del>	3-Error	ewlc-rrm	Error: Cannot set country code[chars] for AP MAC:%s	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>AGREMSKCNENR</del>	3-Error	ewlc-rrm	Regulatory domain error while setting country code for AP MAC:%s	-	-
<del>AGREMSKCNENR</del>	3-Error	ewlc-ap	Error in[chars]	General Wireless LAN Controller Error Message.	LOG_STD_ACTION
<del>AGREMSKCNENR</del>	3-Error	ewlc-rrm	event change:[chars]	General Wireless LAN Controller RRM error message	LOG_STD_ACTION
<del>AGREMSKCNENR</del>	3-Error	ewlc-rrm	Error in[chars]	Trying to query information related to AP with invalid slot ID.	Please report the error to technical support representative.
<del>AGREMSKCNENR</del>	3-Error	ewlc-ap	Info : -[chars]	General Wireless LAN Controller info message	LOG_STD_ACTION
<del>AGREMSKCNENR</del>	3-Error	ewlc-ap	Info : -[chars]	General Wireless LAN Controller info message	LOG_STD_ACTION
<del>AGREMSKCNENR</del>	3-Error	ewlc-ap	Info : -[chars]	General Wireless LAN Controller info message	LOG_STD_ACTION
<del>AGREMSKCNENR</del>	3-Error	ewlc-ap	Executed exec-cli is not applicable for AP:[chars]	-	-
<del>AGREMSKCNENR</del>	3-Error	ewlc-ap	Executed exec-cli is not applicable for AP:[chars] because AP does not support dual 5ghz radio.	The executed EXEC CLI is not applicable for this AP	-
<del>AGREMSKCNENR</del>	3-Error	ewlc-ap	Executed exec-cli is applicable for only master radio for AP :[chars]	The executed EXEC CLI is applicable only for master radio	LOG_STD_ACTION
<del>AGREMSKCNENR</del>	3-Error	ewlc-rrm	Tx Power Config Notification: Radio Role is AUTO. So	-	-
<del>AGREMSKCNENR</del>	3-Error	ewlc-ap	Error in[chars]	AP Audit Report Error Message.	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>AGREMSKADNHR</del>	3-Error	ewlc-ap	error received from AP[chars]	Error on AP while applying configuration updates from controller.	LOG_STD_ACTION
<del>AGREMSKADNHR</del>	3-Error	ewlc-rrm	The DCA Channel list is empty for 24ghz rf profile[chars]	DCA Channel list for 24ghz radio is empty	-
<del>AGREMSKADNHR</del>	3-Error	ewlc-rrm	The DCA Channel list is empty for 5ghz rf profile[chars]	DCA Channel list for 5ghz radio is empty	-
<del>AGREMSKADNHR</del>	3-Error	ewlc-rrm	The DCA Channel list is empty for 6ghz rf profile[chars]	DCA Channel list for 6ghz radio is empty	-
<del>AGREMSKADNHR</del>	3-Error	ewlc-ap	AP Join/Disjoin Error:[chars]	AP Join/Disjoin Wireless LAN Controller Error Message.	LOG_STD_ACTION
<del>AGREMSKADNHR</del>	3-Error	ewlc-ap	Info : -[chars]	General Wireless LAN Controller info message	LOG_STD_ACTION
<del>AGREMSKADNHR</del>	3-Error	ewlc-ap	Error in[chars]	AP packet capture Error Message.	LOG_STD_ACTION
<del>AGREMSKADNHR</del>	3-Error	ewlc-ap	%% Error:[chars]	Improper arguments or config	Arguments to be changed
<del>AGREMSKADNHR</del>	3-Error	ewlc-ap	Error in[chars]	General Wireless LAN Controller Error Message.	LOG_STD_ACTION
<del>AGREMSKADNHR</del>	3-Error	ewlc-ap	Error mDNS AP :[chars]	Error Message related to mDNS AP	LOG_STD_ACTION
<del>AGREMSKADNHR</del>	3-Error	ewlc-ap	Unsupported AP mode.[chars]	vWLC ultra-low WLCs do not support Local Mode APs. This error will be logged whenever an AP tries to join in Local Mode on a vWLC ultra-low WLC.	Fix the configuration to allow AP to join in Flexconnect Mode.

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>AWRRCMSCHP/AM</del>	4-Warning	ewlc-ap	AP[chars]	-	-
<del>AWRRCMSCHD/AM</del>	4-Warning	ewlc-afc-rrm	AP[chars]	-	-
<del>AWRRCMSCHM/AM</del>	4-Warning	ewlc-ap	AP[chars]	-	-
<del>AWRRCMSCHN/AM</del>	4-Warning	ewlc-ap	AP[chars]	-	-
<del>AWRRCMSCHP/AM</del>	4-Warning	ewlc-spwifi	Unsupported AP mode for Easy-PSK WLAN %d on AP[chars]	-	-
<del>AWRRCMSCHQ/AM</del>	4-Warning	ewlc-ap	Warning	-	-
<del>AWRRCMSCHR/AM</del>	4-Warning	ewlc-ap	config check: [chars]	Warning message related to config checker	LOG_STD_ACTION
<del>AWRRCMSCHS/AM</del>	4-Warning	ewlc-ap	Warning mDNS AP:[chars]	Warning message related to mDNS AP	LOG_STD_ACTION
<del>AWRRCMSCHT/AM</del>	5-Notice	ewlc-afc-rrm	AP[chars]	-	-
<del>AWRRCMSCHU/AM</del>	5-Notice	ewlc-afc-rrm	AP[chars]	-	-
<del>AWRRCMSCHV/AM</del>	5-Notice	ewlc-ap	event change:[chars]	General Wireless LAN Controller Notice message	LOG_STD_ACTION
<del>AWRRCMSCHW/AM</del>	5-Notice	ewlc-ap	Unsupported AP mode.[chars]	Public cloud WLCs do not support Local Mode in AP. This error will be logged whenever an AP tries to join in Local Mode in a Public Cloud WLC.	Fix the configuration to allow AP to join in Flexconnect Mode.
<del>AWRRCMSCHX/AM</del>	6-Information	ewlc-ap	AP[chars]	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>APRCMSENRDCE</del>	6-Information	ewlc-ap	AP:[chars] reported channel 0 on slot %d	AP has reported Channel 0 on one of the radio slots. This generally happens when the configurations on the AP are set to factory default. WLC recovers this by rebooting the AP. Unless the message repeatedly appears	-
<del>APRCMSENRDCE</del>	6-Information	ewlc-ap	Client debug bundle[chars]	General Wireless LAN Controller Client debug bundle info message	LOG_STD_ACTION
<del>APRCMSENRDCE</del>	6-Information	ewcap-image	AP Event:[chars] Please upgrade AP to 8.10 or 16.12 or higher before joining a EWC network	Please upgrade 11AX AP to 8.10 or 16.12 so it can join EWC network	LOG_SID_NO_ACTION
<del>APRCMSENRDCE</del>	6-Information	ewcap-image	CCO polling for software version completed successfully	The action of polling CCO for LATEST and SUGGESTED software version has completed successfully	LOG_SID_NO_ACTION
<del>APRCMSENRDCE</del>	6-Information	ewlc-ap	AP Join Info :[chars]	AP Join/Disjoin Wireless LAN Controller Error Message.	LOG_STD_ACTION
<del>APRCMSENRDCE</del>	6-Information	ewlc-ap	Info :-[chars]	General Wireless LAN Controller info message	LOG_STD_ACTION
<del>APPFWCERR</del>	3-Error	Application Firewall configuration error -- [chars]	An error has occurred during Application Firewall configuration.	appfw	"This message indicates an error during firewall configuration " "and may be a potential security problem."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
APPFW4-HTTP_MAXREQ_EXCD	3-Error	Maximum of [dec] unanswered HTTP requests exceeded from [node][dec] to [node][dec]	The HTTP message has been detected to violate the \n\ transfer encoding application firewall inspection rule.	appfw	"This message is for informational purposed only but may indicate \n\ a security problem."
APPFW4-HTTP_CONTENT_LENGTH	4-Warning	content-length	The HTTP message has been detected to violate the content-length \n\ application firewall inspection rule.	appfw	"This message is for informational purposed only but may indicate \n\ a security problem."
APPFW4-HTTP_CONTENT_MISMATCH	4-Warning	Sig:[dec] Content type not found - [chars] [chars] from [node][dec] to [node][dec]	The HTTP message has been detected to violate the \n\ content-type-verification application firewall inspection rule.	appfw	"This message is for informational purposed only but may indicate \n\ a security problem."
APPFW4-HTTP_CONTENT_MESSAGE	4-Warning	Sig:[dec] Content size [node] out of range - [chars] [chars] from [node][dec] to [node][dec]	The HTTP message has been detected to violate the \n\ content-type-verification application firewall inspection rule.	appfw	"This message is for informational purposed only but may indicate \n\ a security problem."
APPFW4-HTTP_CONTENT_MISMATCH	4-Warning	Sig:[dec] Content type does not match the specified type - [chars] [chars] from [node][dec] to [node][dec]	The HTTP message has been detected to violate the \n\ content-type-verification application firewall inspection rule.	appfw	"This message is for informational purposed only but may indicate \n\ a security problem."
APPFW4-HTTP_DEOBFUSCATE	4-Warning	Sig:[dec] Deobfuscation signature detected - [chars] [chars] from [node][dec] to [node][dec]	The HTTP message has been detected to violate the \n\ deobfuscate application firewall inspection rule.	appfw	"This message is for informational purposed only but may indicate \n\ a security problem."
APPFW4-HTTP_ACCEPT_HEADERS	4-Warning	Sig:[dec] Content type: [chars] does not match the Accept-Type from [node][dec] to [node][dec]	The HTTP message has been detected to violate the \n\ content-type-verification application firewall inspection rule.	appfw	"This message is for informational purposed only but may indicate \n\ a security problem."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<u>APPFW4-HTTP-MAX-HDR-LEN</u>	4-Warning	Sig:[dec] HTTP Header length exceeded. Received [node] byte of header - [chars] [chars] from [node][dec] to [node][dec]	The HTTP message has been detected to violate the \n\ max-hdr-len application firewall inspection rule.	appfw	"This message is for informational purposed only but may indicate \n\ a security problem."
<u>APPFW4-HTTP-MAX-URI-LEN</u>	4-Warning	Sig:[dec] HTTP URI length exceeded. Received [node] byte of URL - [chars] [chars] from [node][dec] to [node][dec]	The HTTP message has been detected to violate the \n\ max-uri-len application firewall inspection rule.	appfw	"This message is for informational purposed only but may indicate \n\ a security problem."
<u>APPFW4-HTTP-PORT-MISUSEM</u>	4-Warning	Sig:[dec] HTTP Instant Messenger detected - [chars] [chars] from [node][dec] to [node][dec]	The HTTP message has been detected to violate the \n\ port misuse application firewall inspection rule.	appfw	"This message is for informational purposed only but may indicate \n\ a security problem."
<u>APPFW4-HTTP-PORT-MISUSEP</u>	4-Warning	Sig:[dec] HTTP Peer-to-Peer detected - [chars] [chars] from [node][dec] to [node][dec]	The HTTP message has been detected to violate the \n\ port misuse application firewall inspection rule.	appfw	"This message is for informational purposed only but may indicate \n\ a security problem."
<u>APPFW4-HTTP-PORT-MISUSEUNL</u>	4-Warning	Sig:[dec] HTTP Tunnel detected - [chars] [chars] from [node][dec] to [node][dec]	The HTTP message has been detected to violate the \n\ port misuse application firewall inspection rule.	appfw	"This message is for informational purposed only but may indicate \n\ a security problem."
<u>APPFW4-HTTP-REQ-METHOD</u>	4-Warning	Sig:[dec] HTTP Extension method illegal - [chars] '[chars]' from [node][dec] to [node][dec]	The HTTP message has been detected to violate the \n\ request-method application firewall inspection rule.	appfw	"This message is for informational purposed only but may indicate \n\ a security problem."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
APPFW4TIPRCMETHDRIC	4-Warning	Sig:[dec] HTTP RFC method illegal - [chars] '[chars]' from [node][dec] to [node][dec]	The HTTP message has been detected to violate the \n\ request-method application firewall inspection rule.	appfw	"This message is for informational purposed only but may indicate \n\ a security problem."
APPFW4TIPSHCROOCL	4-Warning	Sig:[dec] HTTP protocol violation detected - [chars] [chars] from [node][dec] to [node][dec]	The HTTP message has been detected to violate the strict-http \n\ application firewall inspection rule.	appfw	"This message is for informational purposed only but may indicate \n\ a security problem."
APPFW4TIPRANSERCODE	4-Warning	Sig:[dec] HTTP Transfer encoding violation detected - [chars] [chars] from [node][dec] to [node][dec]	The HTTP message has been detected to violate the \n\ transfer encoding application firewall inspection rule.	appfw	"This message is for informational purposed only but may indicate \n\ a security problem."
APPFW4TIPSSNADLRA	6-Information	HTTP session initiator [node][dec] sends [dec] bytes - responder [node][dec] sends [dec] bytes	The HTTP message has been detected to violate the \n\ transfer encoding application firewall inspection rule.	appfw	"This message is for informational purposed only but may indicate \n\ a security problem."
APPFW6M_ACL_CLIENT_VERN	6-Information	im-aol [node][dec] attempting to establish connection with aol server [node][dec] using an unsupported version of the client	The AOL client version is not supported	appfw	"This message is for informational purposed only."
APPFW6M_ACL_SESSION	6-Information	im-aol [chars] service session initiator [node][dec] [chars] [dec] bytes [chars] responder [node][dec]	The AIM well known service message has been detected.	appfw	"This message is for informational purposed only."
APPFW6M_MSN_CLIENT_VERN	6-Information	im-msn [node][dec] attempting to establish connection with msn server [node][dec] using an unsupported version of the client	The MSN client version is not supported	appfw	"This message is for informational purposed only."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
APPFW6IM_MSN_SESSION	6-Information	im-msn [chars] service session initiator [node][dec] [chars] [dec] bytes [chars] responder [node][dec]	The MSNMSGR well known service message has been detected.	appfw	"This message is for informational purposed only."
APPFW6IM_YAHOO_CLIENT_VERSION	6-Information	im-yahoo [node][dec] attempting to establish connection with yahoo server [node][dec] using an unsupported version of the client	The YAHOO client version is not supported	appfw	"This message is for informational purposed only."
APPFW6IM_YAHOO_CHAT	6-Information	im-yahoo text-chat service session: [node][dec] establishing a direct chat with [dec].[dec].[dec].[dec]	A specific service yyy has been detected to establish a direct connection with another peer in a Yahoo! Instant Messenger application and the application firewall inspection policy has been configured to send an alarm for this event. Typical services are text-chat voice-chat file-transfer etc.	appfw	"This message is for informational purposed only."
APPFW6IM_YAHO_SESSION	6-Information	im-yahoo [chars] service session initiator [node][dec] [chars] [dec] bytes [chars] responder [node][dec]	The YMSG well known service message has been detected.	appfw	"This message is for informational purposed only."
APPNA3CINETCINITIALD	3-Error	AppNav failed initialize flow table - [node]	Flow table is a critical component of AppNav. The failure is likely due to lack of memory DRAM on the ESP. The	service-controller	LOG_SIDREDUCE_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>APPNAVCONTROLLER</del>	2-Critical	APPNAVCONTROLLER: Alarm #10000 Severity: Major \nAppnav controller group IP address changed! All relevant service contexts will be disabled	Appnav controller group IP address changed! All relevant service contexts will be disabled	service-controller	"Change AppNav Controller's IP "
<del>APPNAVCONTROLLER</del>	2-Critical	APPNAVCONTROLLER: Alarm #10000 Severity: Major \nAppnav controller group IP address changed! All relevant service contexts will be disabled	Appnav controller group IP address changed! All relevant service contexts will be disabled	service-controller	"Change AppNav Controller's IP "
<del>APPNAVCONTROLLER</del>	2-Critical	APPNAVCONTROLLER: Alarm #29001 Severity: Major	CMM is not coming out of convergence state	service-controller	"Check connectivity between SN's and AC's"
<del>APPNAVCONTROLLER</del>	2-Critical	APPNAVCONTROLLER: Alarm #29001 Severity: Major	CMM is not coming out of convergence state	service-controller	"Check connectivity between SN's and AC's"
<del>APPNAVCONTROLLER</del>	2-Critical	APPNAVCONTROLLER: Alarm #29002 Severity: Critical. AC: [chars] is Degraded	Mismatch of stable AC views between AC's	service-controller	"Check connectivity between AC's"
<del>APPNAVCONTROLLER</del>	2-Critical	APPNAVCONTROLLER: Alarm #29002 Severity: Critical. AC: [chars] is Degraded	Mismatch of stable AC views between AC's	service-controller	"Check connectivity between AC's"
<del>APPNAVCONTROLLER</del>	2-Critical	APPNAVCONTROLLER: Alarm #29006 Severity: Major. AC: [chars] unreachable	Connectivity with AC's under ACG is lost	service-controller	"Make sure AC's configured under ACG are up" " and reachable"
<del>APPNAVCONTROLLER</del>	2-Critical	APPNAVCONTROLLER: Alarm #29006 Severity: Major. AC: [chars] unreachable	Connectivity with AC's under ACG is lost	service-controller	"Make sure AC's configured under ACG are up" " and reachable"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>APPACNROLIBS_EXCLUD</del>	2-Critical	APPNAV-CONTROLLER: Alarm #29008 Severity: Major. SN: [chars] excluded	Stable SN views across AC's are different. Those SN's that are not reachable by other AC's are excluded	service-controller	"Make sure excluded SN's are reachable from " "all AC's"
<del>APPACNROLIBS_EXCLUD</del>	2-Critical	APPNAV-CONTROLLER: Alarm #29008 Severity: Major. SN: [chars] excluded	Stable SN views across AC's are different. Those SN's that are not reachable by other AC's are excluded	service-controller	"Make sure excluded SN's are reachable from " "all AC's"
<del>APPACNROLIBS_SUNACAE</del>	2-Critical	APPNAV-CONTROLLER: Alarm #29007 Severity: Major. SN: [chars] is unreachable	Service context has entered Operational state and there is at least one configured node that is not part of the SN view.	service-controller	"Check status of configured SNs."
<del>APPACNROLIBS_SUNACAE</del>	2-Critical	APPNAV-CONTROLLER: Alarm #29007 Severity: Major. SN: [chars] is unreachable	Service context has entered Operational state and there is at least one configured node that is not part of the SN view.	service-controller	"Check status of configured SNs."
<del>APPACNROLIBS_GUMMAE</del>	2-Critical	APPNAV-CONTROLLER: Alarm #30000Severity: Major. In SNG: [chars] AO: [dec] is unavailable	No node in service node group is available for optimization and traffic is getting optimized by a secondary SNG.	service-controller	"Check status of configured SNs."
<del>APPACNROLIBS_GUMMAE</del>	2-Critical	APPNAV-CONTROLLER: Alarm #30000Severity: Major. In SNG: [chars] AO: [dec] is unavailable	No node in service node group is available for optimization and traffic is getting optimized by a secondary SNG.	service-controller	"Check status of configured SNs."
<del>APPACNROLIBS_GUMMAE</del>	2-Critical	APPNAV-CONTROLLER: Alarm #30001 Severity: Major. SNG: [chars] unavailable	No SN in appnav node group is available for optimization.	service-controller	"Check status of configured nodes."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>APPNAVCONTROLLER</del>	2-Critical	APPNAVCONTROLLER: Alarm #30001 Severity: Major. SNG: [chars] unavailable	No SN in appnav node group is available for optimization.	service-controller	"Check status of configured nodes."
<del>APPNAVCONTROLLER</del>	3-Error	AppNav registration with Central Manager failed for the following reason: [chars]	Received a registration failure message from the AppNav Central Manager. AppNav has not registered with the Central Manager	service-controller	"Issue the " "<CmdBold>debug waas management errors<NoCmdBold> " "command and the " "<CmdBold>debug waas management events<NoCmdBold> " "Contact your Cisco technical support representative" " and provide the representative with the gathered information."
<del>APPNAVCONTROLLER</del>	3-Error	AppNav registration with Central Manager failed for the following reason: [chars]	Received a registration failure message from the AppNav Central Manager. AppNav has not registered with the Central Manager	service-controller	"Issue the " "<CmdBold>debug waas management errors<NoCmdBold> " "command and the " "<CmdBold>debug waas management events<NoCmdBold> " "Contact your Cisco technical support representative" " and provide the representative with the gathered information."
<del>APPNAVCONTROLLER</del>	4-Warning	APPNAVCONTROLLER: Alarm #29002 cleared. AC: [chars] is Stable	Mismatch of stable AC views between AC's	service-controller	"None. All is well"
<del>APPNAVCONTROLLER</del>	4-Warning	APPNAVCONTROLLER: Alarm #29002 cleared. AC: [chars] is Stable	Mismatch of stable AC views between AC's	service-controller	"None. All is well"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>APPNAVCONTROLLERCS</del>	4-Warning	APPNAVCONTROLLER: Alarm #29001 cleared	CMM convergence completed	service-controller	"None. All is well"
<del>APPNAVCONTROLLERCS</del>	4-Warning	APPNAVCONTROLLER: Alarm #29001 cleared	CMM convergence completed	service-controller	"None. All is well"
<del>APPNAVCONTROLLERCE</del>	4-Warning	APPNAVCONTROLLER: Alarm #29006 cleared. AC: [chars] reachable	Connectivity with AC's under ACG is regained	service-controller	"None. All is well"
<del>APPNAVCONTROLLERCE</del>	4-Warning	APPNAVCONTROLLER: Alarm #29006 cleared. AC: [chars] reachable	Connectivity with AC's under ACG is regained	service-controller	"None. All is well"
<del>APPNAVCONTROLLERSNUDD</del>	4-Warning	APPNAVCONTROLLER: Alarm #29008 cleared. SN: [chars] included	SN is reachable again	service-controller	"None. All is well"
<del>APPNAVCONTROLLERSNUDD</del>	4-Warning	APPNAVCONTROLLER: Alarm #29008 cleared. SN: [chars] included	SN is reachable again	service-controller	"None. All is well"
<del>APPNAVCONTROLLERSE</del>	4-Warning	APPNAVCONTROLLER: Alarm #29007 cleared. SN: [chars] is reachable	Service Node is available	service-controller	"None. All is well"
<del>APPNAVCONTROLLERSE</del>	4-Warning	APPNAVCONTROLLER: Alarm #29007 cleared. SN: [chars] is reachable	Service Node is available	service-controller	"None. All is well"
<del>SERVICECONTROLLER</del>	4-Warning	SERVICECONTROLLER: Alarm 10001 Severity: Major \n Disabling service context [chars]	Disabling service context	-	-
<del>SERVICECONTROLLER</del>	4-Warning	SERVICECONTROLLER: Alarm 10001 Severity: Major \n Disabling service context [chars]	Disabling service context	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>APPNAVCONTROLLER</del>	4-Warning	APPNAVCONTROLLER: Alarm #30000 cleared. In SNG: [chars] AO: [dec] is available	Service node group is available for optimization	service-controller	"None. All is well"
<del>APPNAVCONTROLLER</del>	4-Warning	APPNAVCONTROLLER: Alarm #30000 cleared. In SNG: [chars] AO: [dec] is available	Service node group is available for optimization	service-controller	"None. All is well"
<del>APPNAVCONTROLLER</del>	4-Warning	APPNAVCONTROLLER: Alarm #30001 Cleared SNG: [chars] available	SN's in appnav node group is available for optimization.	service-controller	"None. All is well"
<del>APPNAVCONTROLLER</del>	4-Warning	APPNAVCONTROLLER: Alarm #30001 Cleared SNG: [chars] available	SN's in appnav node group is available for optimization.	service-controller	"None. All is well"
<del>APPNAVCONTROLLER</del>	5-Notice	APPNAVCONTROLLER: Alarm #29003 Severity: Minor	When an appnav controller detects upon that there are other appnav-controllers/SNs in the cluster with different ICIMP/DMP minor version number.	service-controller	"Check versions of SNs in network."
<del>APPNAVCONTROLLER</del>	5-Notice	APPNAVCONTROLLER: Alarm #29003 Severity: Minor	When an appnav controller detects upon that there are other appnav-controllers/SNs in the cluster with different ICIMP/DMP minor version number.	service-controller	"Check versions of SNs in network."
<del>APPNAVCONTROLLER</del>	5-Notice	APPNAVCONTROLLER: Alarm #29003 cleared	There are no appnav-controllers/SNs with different ICIMP/DMP minor version number	service-controller	"None. All is well"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>APPNAVCONTROLLER</del>	5-Notice	APPNAV-CONTROLLER: Alarm #29003 cleared	There are no appnav-controllers/SNs with different ICIMP/DMP minor version number	service-controller	"None. All is well"
<del>APPNAVREGISTER</del>	6-Information	AppNav registered with Central Manager successfully	Received a registration success message from the Central Manager	service-controller	"None. All is well"
<del>APPNAVREGISTER</del>	6-Information	AppNav registered with Central Manager successfully	Received a registration success message from the Central Manager	service-controller	"None. All is well"
APS-1-NO_ACTIVE	1-Alert	No Active Port In Group [chars]	After an active interface failure the system\n\ switches over to the standby interface if APS has\n\ been enabled. This message is posted if after a\n\ switchover the system finds no active interface\n\ i.e. both working and protection interfaces are\n\ found to be nonoperational.	-	"Isolate the cause of failure on both working\n\ and protection interfaces."
APS-2-CHNLCFGMM	2-Critical	Group [chars]: Channel Config Mismatch	Working and Protection interfaces do not point to the\n\ same path on local and remote network elements	-	"Configure working and protection interfaces\n\ to point to the same path on local and remote\n\ network elements"
APS2CHNL MISMATCH	2-Critical	Group [chars]: Channel Mismatch - [chars]	-	-	"Check for any failures on the APS communication\n\ channel. If APS communication channel is\n\ operational contact Cisco TAC."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
APS-2-FEPF	2-Critical	Group [chars]: Far End Prot Failure - [chars]	-	-	"Isolate the cause of failure on the protection\n\n channel on the remote network element."
APS-2-INITSYS	2-Critical	[chars]	A software error occurred during initialization of\n\n the APS subsystem	-	"Check for sufficient processor memory." LOG_STD_ACTION
APS-2-INTRNLERR	2-Critical	[chars] [dec]	APS software detected an internal error	-	LOG_STD_ACTION
APS2MODEMISMATCH	2-Critical	Group [chars]: Mode Mismatch - [chars]	-	-	"Configure the remote APS group for\n\n bidirectional operation."
APS-2-NOSOCKET	2-Critical	Failed To Open Socket	This message is posted when the APS subsystem fails\n\n to create a UDP socket for exchanging APS channel\n\n protocol messages over APS message channel configured\n\n for IP. This usually is due to a low memory condition\n\n in the system	-	LOG_SIDREDUCE_ACTION
APS-2-PSBF	2-Critical	Group [chars]: Prot Switch Byte Failure - [chars]	-	-	"Check for failures on the APS communication\n\n channel. Isolate the cause for such failures\n\n and restore the communication channel to\n\n working condition"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
APS-3-PORT_FAIL	3-Error	[chars] Port Fail On [chars]	This message is posted when APS subsystem receives a port fail indication from the driver subsystem. This message indicates that the specified interface has detected a failure condition e.g. Loss Of Light.	-	"Isolate the cause of the failure and restore the interface to normal operational condition."
APS-6-ADJUSTMODE	6-Information	Group [chars]: Mode Mismatch - [chars]	This message is posted by the local network element if the local APS group has been configured for bidirectional operation but the associated remote APS group has been configured for unidirectional operation. This message is posted after the local network element detects the mismatch and changes the operation to unidirectional.	-	"Configure the remote APS group for bidirectional operation."
APS-6-AUTOFOVER	6-Information	Auto-Failover - Group [chars]	This message is posted if APS hardware successfully switched over to the standby interface after the failure of the active interface. This is informational only.	-	"Isolate the cause of failure of the previous active interface and restore it to a working condition."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
APS-6-BIDIRSWCH	6-Information	Group [chars]: Remote Request - [chars]	This message is posted by the local network element\n after an APS switchover that is triggered by an APS\n request from the remote network element. This is\n informational only.	-	LOG_SID_NO_ACTION
APS-6-CHNLACTIVE	6-Information	Group [chars] - [chars] channel is now ACTIVE	This message is posted when a previously standby\n channel becomes the active channel. This is\n informational only.	-	LOG_SID_NO_ACTION
APS-6-DISAUTOFOV	6-Information	Disable Auto-Failover On [chars]	APS has disabled auto-failover for the indicated\n group	-	show aps group <name>
APS-6-ENAUTOFOVR	6-Information	Enable Auto-Failover On [chars]	This message is posted when APS software enables\n hardware to perform APS actions for failures\n detected by the hardware. This is informational\n only.	-	LOG_SID_NO_ACTION
ARAP-0-DEFAULT	0-Emergency	TTY [dec]	An internal software error occurred.	-	LOG_SID_SH_TECH_ACTION
ARAP-0-NULLRESEND	0-Emergency	TTY [dec]	An internal software error occurred.	-	LOG_SID_SH_TECH_ACTION
ARAP-0-NULLRESEND	0-Emergency	TTY [dec]	An internal software error occurred.	-	"Report this error to you technical support representative."
ARAP-0-VSERROR	0-Emergency	TTY [dec]: VS queued error	An internal software error occurred.	-	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ARAP-0-WAITBADMSG	0-Emergency	TTY [dec]: arg msg bad [hec]	The router received an invalid packet during ARAP MNP4 connection\ setup phase.	-	"Check for excessive line noise.\ Check the ARAP client software configuration for\ possible problems."
ARAP-2-NOLOG	2-Critical	TTY [dec]: Could not malloc log	Memory not available for internal MNP4 logging.	-	LOG_STD_ACTION
ARAP-3-ABORTED	3-Error	TTY [dec]: arap callback aborted	An unexpected message was received during the Microcom Networking\ Protocol version 4 MNP4 link setup.	-	LOG_STD_ACTION
ARAP-3-BADCONFIG	3-Error	TTY [dec]: unhandled configuration command	A configuration command was not recognized.	-	"Check the configuration file on the server for any invalid\ configuration commands."
ARAP-3-BADPAK	3-Error	TTY [dec]: Bad packet type in arap_send_msg	Internal data structures are corrupted.	-	"Check for abnormally high CPU usage."
ARAP-3-REMOTEERROR	3-Error	TTY [dec]: arap input error	ARAP connection was terminated without a known cause.	-	LOG_STD_ACTION
ARAP-3-TIMEOUT	3-Error	TTY [dec]: arap expected message timeout	The SCP process has been terminated.	-	"If this message recurs copy the error message exactly as it appears\ and report it to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ARAP-4-CONFAILED	4-Warning	TTY [dec]: ARAP connection failed: [chars]	The ARA protocol client was denied access probably due to a\n\ configuration problem on the server. The error message should indicate\n\ the problem. This message does not indicate access denials due to bad\n\ passwords.	-	"Investigate the problem reported in the error message."
ARAP-4-NOEXTTACACS	4-Warning	TTY [dec]: arap TACACS is configured but extended TACACS is not.	-	-	"Configure extended TACACS."
ARAP-5-INITCONFUSED	5-Notice	TTY [dec]: ARAP unexpected initialization packet [chars]	The startup negotiation between a client and the ARA protocol server\n\ fell out of order. If this message is received sporadically it\n\ indicates line noise.	-	"If this message recurs reinstall the ARA client software."
ARAP-5-PAKINVALID	5-Notice	TTY [dec]: ARAP invalid packet received	This message appears only when ARA protocol logging is configured. The\n\ message notes that an ARA protocol user has logged out.	-	LOG_SID_NO_ACTION
ARAP-6-BADEXIT	6-Information	TTY [dec]: exited user [chars]: [chars]	A user was disconnected from ARA protocol at an unexpected time. The\n\ disconnection may be due to modems dropping server error client\n\ problems or any number of other difficulties.	-	"To determine the cause of the disconnection correlate the receipt of\n\ this message with the user problem reports."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ARAP-6-LRPHASERROR	6-Information	TTY [dec]: Received LT in CONNECTION PHASE	The router received an invalid packet during ARA connection setup\ phase.	-	"Check for excessive line noise.\ Check the ARAP client software configuration for\ possible problems."
ARAP-6-MAXRESEENDS	6-Information	TTY [dec]	The router resent MNP4 packets maximum number of times without\ receiving an acknowledgement.	-	"To determine the cause of the disconnection correlate the receipt of\n\ this message with the user problem reports."
ARAP-6-MNP4RCVDISC	6-Information	TTY [dec]: MNP4 input disconnect	This indicates that the router received disconnect request\ from the remote Macintosh client.	-	LOG_SID_NO_ACTION
ARAP-6-MNP4T401	6-Information	TTY [dec]: T401 [dec] baud rate [dec]	This message indicates that the router received MNP4 connection\ request. MNP4 acknowledgement timer value is also indicated.	-	LOG_SID_NO_ACTION
ARAP-6-RCVGIANT	6-Information	TTY [dec]: Rcv giant. dropping frame	The router received an oversized MNP4 frame.	-	"Check for excessive line noise.\ Check the ARAP client software configuration for\ possible problems."
ARAP-6-RCVNOPAK	6-Information	TTY [dec]: Receive getbuffer failure. dropping frame	No buffer exists for an incoming packet.	-	"Examine buffer usage statistics. Possibly more memory is\ required."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ARAP-6-RESEND SLOW	6-Information	TTY [dec]	The router repeated resending of MNP4 packets as the Macintosh client failed to acknowledge previously resent packets.	-	"If this error message persists for several ARAP connections\ report it to your technical support representative."
ARAP-6-TIMER ERROR	6-Information	TTY [dec]: MNP4 timeout error	The router is dropping the connection after doing maximum resends.	-	"To determine the cause of the disconnection correlate the receipt of\n this message with the user problem reports."
ARAP-6-XTICKLE	6-Information	TTY [dec]: exited user [chars]: Other side stopped answering ARAP tickles\ mnp4 pak resent [dec] mnp4 pak sent [dec] last [dec] now [dec]	The router disconnected as the remote Macintosh client stopped\ sending ARAP tickle or data packets.	-	"To determine the cause of the disconnection correlate the receipt of\n this message with the user problem reports."
<del>ARCHIVE HEAD</del>	4-Warning	Delete of a previously saved archive of the router configuration could not be completed.	The router could not delete a file that was previously written. The file that was being deleted file contains an archive of the router configuration. This could occur for example if the file was manually deleted.	-	"None"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>ARCHCONF</del> <del>DEF</del>	4-Warning	Delete of a previously saved archive of the router configuration could not be completed.	The router could not delete a file that was previously written. The file that was being deleted file contains an archive of the router configuration. This could occur for example if the file was manually deleted.	-	"None"
<del>ARCHCONF</del> <del>ARCH</del> <del>SKIP</del>	4-Warning	Archive of router configuration was skipped due to a previous initiation.	Only one archive can be created at a time. Two or more simultaneous archives in progress is not allowed. This could occur for example if two users attempt to create an archive simultaneously.	-	"Retry the archive creation later when the previous archive has finished being written."
<del>ARCHCONF</del> <del>ARCH</del> <del>SKIP</del>	4-Warning	Archive of router configuration was skipped due to a previous initiation.	Only one archive can be created at a time. Two or more simultaneous archives in progress is not allowed. This could occur for example if two users attempt to create an archive simultaneously.	-	"Retry the archive creation later when the previous archive has finished being written."
<del>ARCHCONF</del> <del>ARCH</del> <del>STBY</del>	6-Information	Could not create an archive of the router configuration on the standby RP.	The router could not create an archive file on the standby RP. The file that was being created contains an archive of the router configuration. This could occur for example if the active RP cannot communicate with the standby RP.	-	"None"



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>ARPKOBSRTHHEENDY</del>	6-Information	Could not create an archive of the router configuration on the standby RP.	The router could not create an archive file on the standby RP. The file that was being created contains an archive of the router configuration. This could occur for example if the active RP cannot communicate with the standby RP.	-	"None"
<del>ARPKOBSRTHHEENDY</del>	6-Information	Delete of a previously saved archive of the router configuration could not be completed on the standby RP.	The router could not delete a file that was previously written on the standby RP. The file that was being deleted file contains an archive of the router configuration. This could occur for example if the file was manually deleted. Alternatively the file could not be deleted when the active RP cannot communicate with the standby RP.	-	"None"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>ARCH</del> <del>CONF</del> <del>FILE</del> <del>STANDBY</del>	6-Information	Delete of a previously saved archive of the router configuration could not be completed on the standby RP.	The router could not delete a file that was previously written on the standby RP. The file that was being deleted file contains an archive of the router configuration. This could occur for example if the file was manually deleted. Alternatively the file could not be deleted when the active RP cannot communicate with the standby RP.	-	"None"
<del>ARCH</del> <del>CONF</del> <del>FILE</del> <del>STANDBY</del>	3-Error	Failed to register the special case [chars] command:\[chars]\ during initialization. Config Diff and Rollback cannot be used as a result of this error.	An internal software error occurred during initialization - Config Diff and Rollback cannot be used as a result of this error.	-	"Copy the error message exactly as it appears. Copy down the system's "configuration along with any other relevant information. Contact your "technical support representative for assistance."
<del>ARCH</del> <del>CONF</del> <del>FILE</del> <del>STANDBY</del>	3-Error	Failed to register the special case [chars] command:\[chars]\ during initialization. Config Diff and Rollback cannot be used as a result of this error.	An internal software error occurred during initialization - Config Diff and Rollback cannot be used as a result of this error.	-	"Copy the error message exactly as it appears. Copy down the system's "configuration along with any other relevant information. Contact your "technical support representative for assistance."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>ARCHMEDH3FCMDN1AED</del>	3-Error	Failed to register the special case [chars] command:\[chars]\ during initialization. Config Diff and Rollback cannot be used as a result of this error.	An internal software error occurred during initialization - Config Diff and Rollback cannot be used as a result of this error.	-	"Copy the error message exactly as it appears. Copy down the system's "configuration along with any other relevant information. Contact your "technical support representative for assistance."
<del>ARCHMEDH3FCMDN1AED</del>	3-Error	Failed to register the special case [chars] command:\[chars]\ during initialization. Config Diff and Rollback cannot be used as a result of this error.	An internal software error occurred during initialization - Config Diff and Rollback cannot be used as a result of this error.	-	"Copy the error message exactly as it appears. Copy down the system's "configuration along with any other relevant information. Contact your "technical support representative for assistance."
<del>ARCHMEDH3FCN1AED</del>	3-Error	Could not initialize the Config Diff and Rollback subsystem	An internal software error occurred during initialization. Config Diff and Rollback cannot be used as a result of this error.	-	"Copy the error message exactly as it appears. Copy down the system's "configuration along with any other relevant information. Contact your "technical support representative for assistance."
<del>ARCHMEDH3FCN1AED</del>	3-Error	Could not initialize the Config Diff and Rollback subsystem	An internal software error occurred during initialization. Config Diff and Rollback cannot be used as a result of this error.	-	"Copy the error message exactly as it appears. Copy down the system's "configuration along with any other relevant information. Contact your "technical support representative for assistance."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>ARCHMED3CONFNTAID</del>	3-Error	Could not initialize the Config Diff and Rollback subsystem	An internal software error occurred during initialization. Config Diff and Rollback cannot be used as a result of this error.	-	"Copy the error message exactly as it appears. Copy down the system's " "configuration along with any other relevant information. Contact your " "technical support representative for assistance."
<del>ARCHMED3CONFNTAID</del>	3-Error	Could not initialize the Config Diff and Rollback subsystem	An internal software error occurred during initialization. Config Diff and Rollback cannot be used as a result of this error.	-	"Copy the error message exactly as it appears. Copy down the system's " "configuration along with any other relevant information. Contact your " "technical support representative for assistance."
<del>ARCHMED3CONFNTAID</del>	5-Notice	Backing up current running config to [chars]	The current running config is saved so that when the timer expires if no confirmation has been received from user to confirm what they've configured the system will rollback to the saved config.	-	"This message DOES NOT denote any error condition. It is a part of the " "normal operation of the rollback confirmed change."
<del>ARCHMED3CONFNTAID</del>	5-Notice	Backing up current running config to [chars]	The current running config is saved so that when the timer expires if no confirmation has been received from user to confirm what they've configured the system will rollback to the saved config.	-	"This message DOES NOT denote any error condition. It is a part of the " "normal operation of the rollback confirmed change."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ARUNRUBCNMDECBUP</del>	5-Notice	Backing up current running config to [chars]	The current running config is saved so that when the timer expires if no confirmation has been received from user to confirm what they've configured the system will rollback to the saved config.	-	"This message DOES NOT denote any error condition. It is a part of the "normal operation of the rollback confirmed change."
<del>ARUNRUBCNMDECBUP</del>	5-Notice	Backing up current running config to [chars]	The current running config is saved so that when the timer expires if no confirmation has been received from user to confirm what they've configured the system will rollback to the saved config.	-	"This message DOES NOT denote any error condition. It is a part of the "normal operation of the rollback confirmed change."
<del>ARUNRUBCNMDECBUP</del>	5-Notice	User: [chars]Priv: [dec] View: [dec]: Rollback Confirmed Change is cancelled due to [chars] failure	Rollback Confirmed Change is normally configured along with other configuration operations such as \config term\ or \config replace\. If those operation failed Rollback Confirmed Change should not be activated.	-	"Remove the error condition and try again later."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>ARWLRUEBKCNMDFCCANE</del>	5-Notice	User: [chars]Priv: [dec] View: [dec]: Rollback Confirmed Change is cancelled due to [chars] failure	Rollback Confirmed Change is normally configured along with other configuration operations such as \config term\ or \config replace\ . If those operation failed Rollback Confirmed Change should not be activated.	-	"Remove the error condition and try again later."
<del>ARWLRUEBKCNMDFCCANE</del>	5-Notice	User: [chars]Priv: [dec] View: [dec]: Rollback Confirmed Change is cancelled due to [chars] failure	Rollback Confirmed Change is normally configured along with other configuration operations such as \config term\ or \config replace\ . If those operation failed Rollback Confirmed Change should not be activated.	-	"Remove the error condition and try again later."
<del>ARWLRUEBKCNMDFCCANE</del>	5-Notice	User: [chars]Priv: [dec] View: [dec]: Rollback Confirmed Change is cancelled due to [chars] failure	Rollback Confirmed Change is normally configured along with other configuration operations such as \config term\ or \config replace\ . If those operation failed Rollback Confirmed Change should not be activated.	-	"Remove the error condition and try again later."
<del>ARWLRUEBKCNMDFCCOM</del>	5-Notice	User: [chars]: Confirm the configuration change	The configuration change is confirmed. The timer for rolling to the previously saved config is cancelled	-	"This message DOES NOT denote any error condition. It is a part of the " "normal operation of the rollback confirmed change."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>ARFWRUBCNMDFCOM</del>	5-Notice	User: [chars]: Confirm the configuration change	The configuration change is confirmed. The timer for rolling to the previously saved config is cancelled	-	"This message DOES NOT denote any error condition. It is a part of the " "normal operation of the rollback confirmed change."
<del>ARFWRUBCNMDFCOM</del>	5-Notice	User: [chars]: Confirm the configuration change	The configuration change is confirmed. The timer for rolling to the previously saved config is cancelled	-	"This message DOES NOT denote any error condition. It is a part of the " "normal operation of the rollback confirmed change."
<del>ARFWRUBCNMDFCOM</del>	5-Notice	User: [chars]: Confirm the configuration change	The configuration change is confirmed. The timer for rolling to the previously saved config is cancelled	-	"This message DOES NOT denote any error condition. It is a part of the " "normal operation of the rollback confirmed change."
<del>ARFWRUBCNMDFGASMR</del>	5-Notice	User: [chars]: Reset Rollback Confirmed Change timerabsolute to [node] minute	Reset Rollback Confirmed Change timerabsolute to a new value	-	"This message DOES NOT denote any error condition. It is a part of the " "normal operation of the rollback confirmed change."
<del>ARFWRUBCNMDFGASMR</del>	5-Notice	User: [chars]: Reset Rollback Confirmed Change timerabsolute to [node] minute	Reset Rollback Confirmed Change timerabsolute to a new value	-	"This message DOES NOT denote any error condition. It is a part of the " "normal operation of the rollback confirmed change."
<del>ARFWRUBCNMDFGASMR</del>	5-Notice	User: [chars]: Reset Rollback Confirmed Change timerabsolute to [node] minute	Reset Rollback Confirmed Change timerabsolute to a new value	-	"This message DOES NOT denote any error condition. It is a part of the " "normal operation of the rollback confirmed change."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>AKVFRUBCNMOCRSIEMR</del>	5-Notice	User: [chars]: Reset Rollback Confirmed Change timerabsolute to [node] minute	Reset Rollback Confirmed Change timerabsolute to a new value	-	"This message DOES NOT denote any error condition. It is a part of the "normal operation of the rollback confirmed change."
<del>AKVFRUBCNMOCRSIEMR</del>	5-Notice	User: [chars] Reset Rollback Confirmed Change timeridle to [node] minute	Reset Rollback Confirmed Change timeridle to a new value	-	"This message DOES NOT denote any error condition. It is a part of the "normal operation of the rollback confirmed change."
<del>AKVFRUBCNMOCRSIEMR</del>	5-Notice	User: [chars] Reset Rollback Confirmed Change timeridle to [node] minute	Reset Rollback Confirmed Change timeridle to a new value	-	"This message DOES NOT denote any error condition. It is a part of the "normal operation of the rollback confirmed change."
<del>AKVFRUBCNMOCRSIEMR</del>	5-Notice	User: [chars] Reset Rollback Confirmed Change timeridle to [node] minute	Reset Rollback Confirmed Change timeridle to a new value	-	"This message DOES NOT denote any error condition. It is a part of the "normal operation of the rollback confirmed change."
<del>AKVFRUBCNMOCRSIEMR</del>	5-Notice	User: [chars] Reset Rollback Confirmed Change timeridle to [node] minute	Reset Rollback Confirmed Change timeridle to a new value	-	"This message DOES NOT denote any error condition. It is a part of the "normal operation of the rollback confirmed change."
<del>AKVFRUBCNMOCRSIEMR</del>	5-Notice	User: [chars]: Rollback immediately.	Rollback immediately and cancel the timer	-	"This message DOES NOT denote any error condition. It is a part of the "normal operation of the rollback confirmed change."



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>ARWHDUBCNMQURERFRV</del>	5-Notice	User: [chars]: Rollback immediately.	Rollback immediately and cancel the timer	-	"This message DOES NOT denote any error condition. It is a part of the " "normal operation of the rollback confirmed change."
<del>ARWHDUBCNMQURERFRV</del>	5-Notice	User: [chars]: Rollback immediately.	Rollback immediately and cancel the timer	-	"This message DOES NOT denote any error condition. It is a part of the " "normal operation of the rollback confirmed change."
<del>ARWHDUBCNMQURERFRV</del>	5-Notice	User: [chars]: Rollback immediately.	Rollback immediately and cancel the timer	-	"This message DOES NOT denote any error condition. It is a part of the " "normal operation of the rollback confirmed change."
<del>ARWHDUBCNMQURERFRV</del>	5-Notice	Failed to acquire configuration lock. Rollback did not start. Schedule to retry in 5 minutes	Failed to acquire configuration lock. Rollback did not start. In this case retry will be scheduled.	-	"This message DOES NOT denote any error condition. It is a part of the " "normal operation of the rollback confirmed change."
<del>ARWHDUBCNMQURERFRV</del>	5-Notice	Failed to acquire configuration lock. Rollback did not start. Schedule to retry in 5 minutes	Failed to acquire configuration lock. Rollback did not start. In this case retry will be scheduled.	-	"This message DOES NOT denote any error condition. It is a part of the " "normal operation of the rollback confirmed change."
<del>ARWHDUBCNMQURERFRV</del>	5-Notice	Failed to acquire configuration lock. Rollback did not start. Schedule to retry in 5 minutes	Failed to acquire configuration lock. Rollback did not start. In this case retry will be scheduled.	-	"This message DOES NOT denote any error condition. It is a part of the " "normal operation of the rollback confirmed change."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ARFVHUBCNMGRUEASR</del>	5-Notice	Failed to acquire configuration lock. Rollback did not start. Schedule to retry in 5 minutes	Failed to acquire configuration lock. Rollback did not start. In this case retry will be scheduled.	-	"This message DOES NOT denote any error condition. It is a part of the "normal operation of the rollback confirmed change."
<del>ARFVHUBCNMGRUEASR</del>	5-Notice	Start rolling to: [chars]	The timer for Rollback Confirmed Change has expired. System will rollback to the previously saved config.	-	"This message DOES NOT denote any error condition. It is a part of the "normal operation of the rollback confirmed change."
<del>ARFVHUBCNMGRUEASR</del>	5-Notice	Start rolling to: [chars]	The timer for Rollback Confirmed Change has expired. System will rollback to the previously saved config.	-	"This message DOES NOT denote any error condition. It is a part of the "normal operation of the rollback confirmed change."
<del>ARFVHUBCNMGRUEASR</del>	5-Notice	Start rolling to: [chars]	The timer for Rollback Confirmed Change has expired. System will rollback to the previously saved config.	-	"This message DOES NOT denote any error condition. It is a part of the "normal operation of the rollback confirmed change."
<del>ARFVHUBCNMGRUEASR</del>	5-Notice	Start rolling to: [chars]	The timer for Rollback Confirmed Change has expired. System will rollback to the previously saved config.	-	"This message DOES NOT denote any error condition. It is a part of the "normal operation of the rollback confirmed change."
<del>ARFVHUBCNMGRUEASR</del>	5-Notice	User: [chars]Priv: [dec] View: [dec]: Scheduled to rollback to config [chars] in [node] minutes	The system will wait for the user to confirm that they wish to keep what they've configured until the timer expires. If the confirmation is not received in time the router will rollback.	-	"This message DOES NOT denote any error condition. It is a part of the "normal operation of the rollback confirmed change."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ARTRUBCNMOCSPASMR</del>	5-Notice	User: [chars]Priv: [dec] View: [dec]: Scheduled to rollback to config [chars] in [node] minutes	The system will wait for the user to confirm that they wish to keep what they've configured until the timer expires. If the confirmation is not received in time the router will rollback.	-	"This message DOES NOT denote any error condition. It is a part of the "normal operation of the rollback confirmed change."
<del>ARTRUBCNMOCSPASMR</del>	5-Notice	User: [chars]Priv: [dec] View: [dec]: Scheduled to rollback to config [chars] in [node] minutes	The system will wait for the user to confirm that they wish to keep what they've configured until the timer expires. If the confirmation is not received in time the router will rollback.	-	"This message DOES NOT denote any error condition. It is a part of the "normal operation of the rollback confirmed change."
<del>ARTRUBCNMOCSPASMR</del>	5-Notice	User: [chars]Priv: [dec] View: [dec]: Scheduled to rollback to config [chars] in [node] minutes	The system will wait for the user to confirm that they wish to keep what they've configured until the timer expires. If the confirmation is not received in time the router will rollback.	-	"This message DOES NOT denote any error condition. It is a part of the "normal operation of the rollback confirmed change."
<del>ARTRUBCNMOCSPASMR</del>	5-Notice	User: [chars]Priv: [dec] View: [dec]: Scheduled to rollback to config [chars] if session has been idle for [node] minutes	The system will wait for the user to confirm that they wish to keep what they've configured until the timer expires. If the confirmation is not received in time the router will rollback.	-	"This message DOES NOT denote any error condition. It is a part of the "normal operation of the rollback confirmed change."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ACTIVITY</del> <del>RUBCN</del> <del>MOFUS</del> <del>SHDIR</del>	5-Notice	User: [chars]Priv: [dec] View: [dec]: Scheduled to rollback to config [chars] if session has been idle for [node] minutes	The system will wait for the user to confirm that they wish to keep what they've configured until the timer expires. If the confirmation is not received in time the router will rollback.	-	"This message DOES NOT denote any error condition. It is a part of the "normal operation of the rollback confirmed change."
<del>ACTIVITY</del> <del>RUBCN</del> <del>MOFUS</del> <del>SHDIR</del>	5-Notice	User: [chars]Priv: [dec] View: [dec]: Scheduled to rollback to config [chars] if session has been idle for [node] minutes	The system will wait for the user to confirm that they wish to keep what they've configured until the timer expires. If the confirmation is not received in time the router will rollback.	-	"This message DOES NOT denote any error condition. It is a part of the "normal operation of the rollback confirmed change."
<del>ACTIVITY</del> <del>RUBCN</del> <del>MOFUS</del> <del>SHDIR</del>	5-Notice	User: [chars]Priv: [dec] View: [dec]: Scheduled to rollback to config [chars] if session has been idle for [node] minutes	The system will wait for the user to confirm that they wish to keep what they've configured until the timer expires. If the confirmation is not received in time the router will rollback.	-	"This message DOES NOT denote any error condition. It is a part of the "normal operation of the rollback confirmed change."
<del>ACTIVITY</del> <del>RUBCN</del> <del>MOFUS</del> <del>SHDIR</del>	5-Notice	System will rollback to config [chars] in one minute. Enter \configure confirm\ if you wish to keep what you've configured	Rollback will start in one minute. User could enter \configure confirm\ if they wish to keep what they've configured.	-	"This message DOES NOT denote any error condition. It is a part of the "normal operation of the rollback confirmed change."
<del>ACTIVITY</del> <del>RUBCN</del> <del>MOFUS</del> <del>SHDIR</del>	5-Notice	System will rollback to config [chars] in one minute. Enter \configure confirm\ if you wish to keep what you've configured	Rollback will start in one minute. User could enter \configure confirm\ if they wish to keep what they've configured.	-	"This message DOES NOT denote any error condition. It is a part of the "normal operation of the rollback confirmed change."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ACFWHDEBCNMQTYMRCASDR</del>	5-Notice	System will rollback to config [chars] in one minute. Enter \configure confirm\ if you wish to keep what you've configured	Rollback will start in one minute. User could enter \configure confirm\ if they wish to keep what they've configured.	-	"This message DOES NOT denote any error condition. It is a part of the "normal operation of the rollback confirmed change."
<del>ACFWHDEBCNMQTYMRCASDR</del>	5-Notice	System will rollback to config [chars] in one minute. Enter \configure confirm\ if you wish to keep what you've configured	Rollback will start in one minute. User could enter \configure confirm\ if they wish to keep what they've configured.	-	"This message DOES NOT denote any error condition. It is a part of the "normal operation of the rollback confirmed change."
<del>ACFWHDEBCNMQTYMRCASDR</del>	5-Notice	User [chars] on tty [dec] has been idle for [node] minutes. System will rollback to config [chars] in oneminute if it continues to be idle. Enter \configure confirm\ if you wish to keep what you've configured	Rollback will start in one minute. User could enter \configure confirm\ if they wish to keep what they've configured.	-	"This message DOES NOT denote any error condition. It is a part of the "normal operation of the rollback confirmed change."
<del>ACFWHDEBCNMQTYMRCASDR</del>	5-Notice	User [chars] on tty [dec] has been idle for [node] minutes. System will rollback to config [chars] in oneminute if it continues to be idle. Enter \configure confirm\ if you wish to keep what you've configured	Rollback will start in one minute. User could enter \configure confirm\ if they wish to keep what they've configured.	-	"This message DOES NOT denote any error condition. It is a part of the "normal operation of the rollback confirmed change."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ARCHIVEISSU</del>	5-Notice	User [chars] on tty [dec] has been idle for [node] minutes. System will rollback to config [chars] in oneminute if it continues to be idle. Enter \configure confirm\ if you wish to keep what you've configured	Rollback will start in one minute. User could enter \configure confirm\ if they wish to keep what they've configured.	-	"This message DOES NOT denote any error condition. It is a part of the "normal operation of the rollback confirmed change."
<del>ARCHIVEISSU</del>	5-Notice	User [chars] on tty [dec] has been idle for [node] minutes. System will rollback to config [chars] in oneminute if it continues to be idle. Enter \configure confirm\ if you wish to keep what you've configured	Rollback will start in one minute. User could enter \configure confirm\ if they wish to keep what they've configured.	-	"This message DOES NOT denote any error condition. It is a part of the "normal operation of the rollback confirmed change."
ARCHIVEISSU	2-Critical	Archive ISSU client failed to get buffer for message. Error: [dec] [chars]	The Archive ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	parser	"show logging and show checkpoint client"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ARCH_ISSU_GET_BUFFER	2-Critical	Archive ISSU client failed to get buffer for message. Error: [dec] [chars]	The Archive ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	parser	"show logging and show checkpoint client"
ARCHIVE_ISSU-2-INIT	2-Critical	Archive ISSU client initialization failed to [chars]. Error: [dec] [chars]	The Archive ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	parser	LOG_STD_ACTION
ARCHIVE_ISSU-2-INIT	2-Critical	Archive ISSU client initialization failed to [chars]. Error: [dec] [chars]	The Archive ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	parser	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>ARCHISSENDNCOAID</del>	2-Critical	Archive ISSU client failed to send negotiation message. Error: [dec] [chars]	The Archive ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	parser	"show logging and show checkpoint client"
<del>ARCHISSENDNCOAID</del>	2-Critical	Archive ISSU client failed to send negotiation message. Error: [dec] [chars]	The Archive ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	parser	"show logging and show checkpoint client"
<del>ARCHISSONNEGASAT</del>	2-Critical	Failed to start Archive ISSU session negotiation. Error: [dec] [chars]	The Archive ISSU client failed to start session negotiation. If a problem occurs with the ISSU session start the standby device cannot be brought up properly.	parser	"show issu session <client_id>"
<del>ARCHISSONNEGASAT</del>	2-Critical	Failed to start Archive ISSU session negotiation. Error: [dec] [chars]	The Archive ISSU client failed to start session negotiation. If a problem occurs with the ISSU session start the standby device cannot be brought up properly.	parser	"show issu session <client_id>"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ARCH_ISSU_SESSION_SRV</del>	2-Critical	Archive ISSU client failed to register session information. Error: [dec] [chars]	The Archive ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	parser	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>ARCH_ISSU_SESSION_SRV</del>	2-Critical	Archive ISSU client failed to register session information. Error: [dec] [chars]	The Archive ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	parser	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>ARCH_ISSU_VALID_SESSION</del>	3-Error	Archive ISSU client does not have a valid registered session.	The Archive ISSU client does not have a valid registered session.	parser	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>ARCH_ISSU_VALID_SESSION</del>	3-Error	Archive ISSU client does not have a valid registered session.	The Archive ISSU client does not have a valid registered session.	parser	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>ARCH_ISSU_MSG_NOT_K</del>	3-Error	Archive ISSU client 'Message Type [dec]' is not compatible	The Archive ISSU client received an incompatible message from the peer device. The message cannot be processed.	parser	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ARCHIVE_ISSU_MSG_NOTCK	3-Error	Archive ISSU client 'Message Type [dec]' is not compatible	The Archive ISSU client received an incompatible message from the peer device. The message cannot be processed.	parser	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
ARCHIVE_ISSU_MSG_SIZE	3-Error	Archive ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The Archive ISSU client failed to calculate the MTU for the specified message. The Archive ISSU client is not able to send the message to the standby device.	parser	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
ARCHIVE_ISSU_MSG_SIZE	3-Error	Archive ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The Archive ISSU client failed to calculate the MTU for the specified message. The Archive ISSU client is not able to send the message to the standby device.	parser	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
ARCHIVE_ISSU_SESSION_UNREG	3-Error	Archive ISSU client failed to unregister session information. Error: [dec] [chars]	The Archive ISSU client failed to unregister session information.	parser	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
ARCHIVE_ISSU_SESSION_UNREG	3-Error	Archive ISSU client failed to unregister session information. Error: [dec] [chars]	The Archive ISSU client failed to unregister session information.	parser	"show issu session <client_id> and " "show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ARCHISSU TRANSFORMAL	3-Error	Archive ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The Archive ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the Archive state between the active device and the standby device is not identical.	parser	"show issu session <client_id> and " "show issu negotiated version <session_id>"
ARCHISSU TRANSFORMAL	3-Error	Archive ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The Archive ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the Archive state between the active device and the standby device is not identical.	parser	"show issu session <client_id> and " "show issu negotiated version <session_id>"
ARP3-ARPHAMSGFMT	3-Error	Malformed ARP HA checkpointing message size = [node] entry count = [node]n	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ARP-3-ARPINIT	3-Error	Internal software error during ARP subsystem initialization\n	An internal software error has occurred during ARP subsystem initialization.	ip	LOG_SID_RECUR_ACTION
ARP-3-ARPINT	3-Error	ARP table accessed at interrupt level [dec]\n	ARP table is accessed at interrupt level which is forbidden.	ip	LOG_SID_RECUR_ACTION
ARP-3-ARPAUDENIRY	3-Error	ARP system internal error. Returns NULL arp entry on node [node]\n	An internal software error has occurred in ARP subsystem an NULL arp entry is got.	ip	LOG_SID_RECUR_ACTION
ARP-3-NULL_IF_INPUT	3-Error	ARP packet with NULL if_input	ARP received a packet with NULL input interface	ip	"If this message recurs call your technical support " "representative for assistance."
ARP-3-STICKYARPOVR	3-Error	Attempt to overwrite Sticky ARP entry: [node]hw: [enet] by hw: [enet]\n	Multiple stations configured with same IP in Private VLAN. Possible case of IP address stealing.	-	"Change the IP address of one of the two systems."
ARP-3-TABLEERR	3-Error	Internal software error during ARP table operation for ARP entry\n	An internal software error has occurred during an ARP table operation.	ip	LOG_SID_RECUR_ACTION
ARP-4-ARPADJ	4-Warning	Received CEF Adjacency updation request on different interfaces: [node]on [chars]\n	A request to update CEF adjacency came on two different interfaces.	ip	LOG_SID_RECUR_ACTION
ARP-4-ARPLEARNIHRES	4-Warning	Learned ARP entries have reached to threshold level [node]	This message indicates that the number of dynamically learned ARP entries has reached a preconfigured max. limit in ARP Table.	-	"First inspect the ARP entries on the interface. If they are " "valid entries either increase the configured max limit or " "reconfigure the network to reduce ARP peers."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ARP4-NULL_SRC_MAC	4-Warning	NULL MAC address from [node] on [chars]	Application or peer tried to insert entry with NULL SRC MAC	ip	"If this message recurs call your technical support " "representative for assistance."
ARP6-ARL-EARN-RESUME	6-Information	Resuming Learn ARP entries to install in ARP table.	This message indicates that the number of dynamically learned ARP entries is in range of permit threshold value. System is allowing new Learned ARP entries to install in ARP table.	-	LOG_SID_NO_ACTION
ASPP-3-NOTTY	3-Error	[chars]: Unable to set Rx/Tx tty async service hooks.	This message occurs only when ASP is configured. It\n\ indicates the serial interface using ASP is configured\n\ incorrectly or does not support asynchronous mode.	-	"Verify the correct hardware interface type is being used."
ASR1000-PTP-FPGA-VER-ERR	3-Error	Please consider upgrading the FPGA for PTP to function properly. [chars] 0x[hec]	Router is currently running on FPGA version which is lesser than what is required by PTP to work properly	asr1000-ptp	LOG_STD_ACTION
ASR1000-PTP-MSG-DSPACH	3-Error	Unable to dispatch received TDL message from PTP daemon [chars] - [chars]	An unexpected condition has occurred while IOS was trying to dispatch a TDL message received from PTP daemon.	asr1000-ptp	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>ASR1000-PTP3MSGNIFAL</del>	3-Error	Failed to initialize required PTP resource: [chars]	During the initialization of the resources required by PTP a failure occurred. This has prevented PTP from being activated.	asr1000-ptp	LOG_STD_ACTION
<del>ASR1000-PTP3MSGNIFAL</del>	3-Error	Failed to allocate a data plane identifier for interface [chars] for VCD [dec]	The SPA driver is not able to allocate the datapath identifier for the VCD under the interface specified in the message. This indicates a software error.	ask1k-atm	LOG_SID_NO_ACTION
<del>ASR1000-PTP3MSGNIFAL</del>	3-Error	Failed to get a data plane identifier for interface [chars] for VCD [dec]	The SPA driver is not able to obtain the datapath identifier for the VCD under the interface specified in the message. This indicates a software error.	ask1k-atm	LOG_SID_NO_ACTION
<del>ASR1000-PTP3MSGNIFAL</del>	3-Error	Failed to get a flow control identifier for interface [chars] for index [dec]	The SPA driver is not able to obtain the datapath flow control identifier for the data path identifier under the interface specified in the message. This indicates a software error.	ask1k-atm	LOG_SID_NO_ACTION
<del>ASR1000-PTP3MSGNIFAL</del>	3-Error	Flow control identifiers for interface [chars] chan lo [hec] chan hi [hec]	The flow control identifier received for the interface is out of range. This indicates SPA driver is responding with out of range flow control identifier	asr1k-atm	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ASDPM1BMA1CIRAEH</del>	3-Error	total active atm vc per ATM SPA reached limitation of [dec]	total number of active atm vc per ATM SPA has reached max limit	-	LOG_STD_ACTION
<del>ASDPM1BMA1AUCAL</del>	3-Error	[chars]: atm autovc discovery configuration failed reason: [chars]	A command to configure the atm autovc discovery on an atm interface has failed	-	LOG_STD_ACTION
<del>ASDPM1BMA1CIRAEH</del>	3-Error	total active atm vc reached system limitation of [dec]	total number of active atm vc has reached max limit allowed on the system	-	LOG_STD_ACTION
<del>ASDPM1BMA1KCNCHA</del>	3-Error	Failed to get a valid tx_chan id for interface [chars] for VCD [dec]	The SPA driver is not able to obtain the datapath tx channel identifier for the VCD under the interface specified in the message. This indicates a SPA occur error.	ask1k-atm	LOG_SID_NO_ACTION
<del>ASDPM1BMA1KCFEHA</del>	3-Error	Error in sending message to SPA on interface [chars] when [chars] for VCD [dec] ebf_c_id [dec]	The SPA give a error response for ATM setup or response timeout in atm vc setup message. This indicates a SPA occur error.	ask1k-atm	LOG_SID_NO_ACTION
<del>ASDPM1BMA1CCNCHA</del>	3-Error	Failed set ATM con for interface [chars] [dec]/[dec] VCD [dec]	Could not get VC encapsulation information when get SPA VCOPEN or VCMODIFY response This indicates ATM occur error.	ask1k-atm	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ASDPAMVAVMCCDCCHA</del>	3-Error	Failed to get a ATM VC core info for interface [chars] VCD [dec]	Could not get VC core information when get SPA VCOPEN or VCMODIRY response. This indicates a ATM information error.	ask1k-atm	LOG_SID_NO_ACTION
<del>ASDPAMVAVMCCDCCHA</del>	3-Error	Failed to get ATM dpidx for interface [chars] VCD [dec]	Could not get VC dpidx information when get SPA VCOPEN or VCMODIFY response This indicates ATM occur error.	ask1k-atm	LOG_SID_NO_ACTION
<del>ASDPAMVAVMCCSDPHA</del>	3-Error	Failed to update ATM egress id for interface [chars] VCD [dec] egress_id [dec]	Could not update VC egress id when get SPA VCOPEN or VCMODIFY response This indicates ATM occur error.	ask1k-atm	LOG_SID_NO_ACTION
<del>ASDPAMVAVMCCDCCHA</del>	3-Error	Failed to get ATM encapsulation for interface [chars] [dec]/[dec] VCD [dec]	Could not get VC encapsulation information when get SPA VCOPEN or VCMODIFY response This indicates ATM occur error.	ask1k-atm	LOG_SID_NO_ACTION
<del>ASDPAMVAVMCCDCCHA</del>	3-Error	Get ATM ERROR encapsulation for interface [chars] [dec]/[dec] VCD [dec]	Get a ERROR VC encapsulation information when get SPA VCOPEN or VCMODIFY response This indicates ATM occur error.	ask1k-atm	LOG_SID_NO_ACTION



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>ASDPA1KVCSDI00A</del>	3-Error	Failed to allocate VC ingress identifier on interface [chars] for VCD [dec] ebfc_id [dec] when [chars]	The ATM SHIM is not able to allocate the ingress identifier for the VCD under the interface specified in the message. This indicates a software error.	ask1k-atm	LOG_SID_NO_ACTION
<del>ASDPA1KVCSPA00A</del>	3-Error	SPA Error response on interface [chars] when [chars] for VCD [dec] ebfc_id [dec] ret_val [dec]	The SPA give a error response for ATM setup or response timeout in atm vc setup message. This indicates a SPA occur error.	ask1k-atm	LOG_SID_NO_ACTION
<del>ASDPA1KSPAPROCS0A</del>	3-Error	process creation failed for [chars]	The Periodic one second process creation failed. This indicates a software error.	asr1k-atm	LOG_STD_ACTION
<del>ASDPA1KVCBYW00G</del>	4-Warning	total active atm vc approaching [node]percent of system limitation of [dec]	total number of active atm vc is approaching the high water mark of sysyem limitation	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ASR100R-ATM-SPA-SETUPC	4-Warning	Interface [chars] VC [dec] setup failed reason = [dec]	A command to setup a VC has failed on RP.	asr1k-spa-atm	<p>"The SPA ATM driver has detected a problem creating the internal OAM" "VC. Reload the indicated SPA card to reconfigure the internal OAM VC."</p> <p>"If the error messages persists copy the error message exactly as " "it appears. Next research and attempt to resolve the issue using " "the SPA hardware troubleshooting documentation as well as the tools " "and utilities provided at " "<a href="http://www.cisco.com/113376.html">http://www.cisco.com/113376.html</a></p> <p>If you still " "require assistance open a case with the Technical Assistance Center " "via the Internet at " "<a href="http://www.cisco.com/113376.html">http://www.cisco.com/113376.html</a> or contact " "your Cisco technical support representative. Be sure to provide the " "the information you have gathered and a 'show tech-support' to " "your support representative or attach it to your case in non-zipped " "plain text format .txt."</p>



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ASR1000-PA/SPA/PC/BEUP	5-Notice	Interface [chars] has a VC/VP [dec] configured already VC/VP [dec] cannot	The SPA ATM driver supports configuring only one VC/VP under a point to multi point sub-interface. The sub-interface specified in the message already has VP/VC configured.	-	LOG_SID_NO_ACTION
ASR1000-PCIE-SPA-CCFAL	3-Error	Communication with the CC has failed for Interface [dec]/[dec]	Communication with Card-Carrier down.	mcp-io	"Either try to configure the Sharded Port Adapter at a later time or " "reload the Card Carrier."
ASR1000-PCIE-SPA-CHRR	3-Error	Internal IPC error [chars]	Internal IPC error.	mcp-io	"Either try to configure the Sharded Port Adapter at a later time or " "reload the SPA and/or Card Carrier."
ASR1000-PCIE-SPA-UNLHR	3-Error	NULL	An internal error as resulted from an unsupported or unexpected message.	mcp-io	"Copy the error message exactly as it appears and report it to your " "technical support representative."
ASR1000-PCSSA-ALOCFAL	4-Warning	Interface [dec]/[dec] allocation failed: [chars]	required resources unavailable.	mcp-io	"Either upgrade system memory or reconfigure memory usage."
ASR1000-PCSSA-ARCFIAL	4-Warning	Interface [chars]	failed to get aps state from cc	asr1k-spa-pos	"Copy the error message exactly as it appears on the console\n\ or in the system log. Call your Cisco technical support\n\ representative and provide the representative\n\ with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ASR1000-SP-POS-THOLD	4-Warning	Interface [chars]	failed to update CC about BER_SF_SD thresholds	asr1k-spa-pos	"Copy the error message exactly as it appears on the console\n\ or in the system log. Call your Cisco technical support\n\ representative and provide the representative\n\ with the gathered information."
ASR1000-SP-SD-LARGER	3-Error	Interface [dec]/[dec]/[dec]: Bad parameter in message from RP: [chars]	Bad parameter in message from RP.	mcp-io	"Either try to configure the Sharded Port Adapter at a later time or " "reload the Card Carrier."
ASR1000-SP-SD-NULLERR	3-Error	NULL	An internal error as resulted from an unsupported or unexpected message.	mcp-io	"Copy the error message exactly as it appears and report it to your " "technical support representative."
ASR1000-SP-POS-SPA3-APS	3-Error	APS[dec] [chars]	RP deadman timer expired on CC CC is sending LAIS to far end	mcp-io	"Copy the error message exactly as it appears on the console \n\ or in the system log. Call your Cisco technical support \n\ representative and provide the representative \n\ with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ASR100-SPRCS-SPA-ALOCAL</del>	4-Warning	SPA resource allocation failed for subslot [dec]/[dec] while [chars]	The SPA driver in the subslot specified in the message is\n\n not able to allocate a system resource. The required system resource is\n\n specified in the message.	mcp-io	"Copy the error message exactly as it appears on the console \n\n or in the system log. Call your Cisco technical support \n\n representative and provide the representative \n\n with the gathered information."
<del>ASR100-FE-DM-PLIM-QOS</del>	3-Error	Interface [chars] failed to apply PLIM QOS [chars] value = 0x[node]	Attempt to apply the configured input classification for the specified interface failed	asr1k-io-internal	"This indicates an internal software failure"
<del>ASR100-FE-DM-SP-EXR</del>	3-Error	Transceiver type [chars] is not allowed on spa [chars] port [dec]	This transceiver is not allowed on the SPA	asr1k-io-internal	"Consult the documentation and ensure supported " "transceivers and plugged into the SPA"
<del>ASR100-FE-DM-SP-NM-CH</del>	3-Error	The hardware and software copies of NP client do not match. This indicates reconciliation failure.	During reconciliation phase of Minimal Disruptive Restart it is found that the software and hardware copies of a register in phy do not match. This indicates an error and the SPA will be reset as normal and impact traffic.	asr1k-ether-lc	"Open a case with Cisco Technical Assistance Center for further " "assistance"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ASR1K-ERR-3-SPRDA</del>	3-Error	The hardware and software copies of a register in the phy for port [dec] do not match. This indicates reconciliation failure.	During reconciliation phase of Minimal Disruptive Restart it is found that the software and hardware copies of a register in phy do not match. This indicates an error and the SPA will be reset as normal and impact traffic.	asr1k-ether-lc	"Open a case with Cisco Technical Assistance Center for further " "assistance"
<del>ASR1K-ERR-3-SPRDA</del>	3-Error	Failed to add in HSRPDA region for interface [chars]	The TCAM HSRPDA table on the SPA is full The specified HSRPDA identifier will not be added to the TCAM table.	mcp-io	"Try to remove some of the Virtual MAC addresses for the interface by " "command."
<del>ASR1K-ERR-3-SPRDA</del>	3-Error	Failed to [chars] VLAN outer [dec] inner [dec]-[dec] to/from interface [chars] status = [dec]	A failure occurred when sending a command to the SPA indicated in the error message.	mcp-io	<b>SPA_CEMA_FAIL_ACTION</b>
<del>ASR1K-ERR-3-SPRDA</del>	3-Error	Failed to add VLAN outer [dec] inner [dec]-[dec] to interface [chars]	The TCAM VLAN filtering table on the SPA is full. The error message indicates the SPA subslot and the affected interface and the VLAN entry that failed. The specified VLAN identifier will not be added to the TCAM table.	mcp-io	"Try to remove some of the registered VLANs for the interface by " "changing the interface configuration. To verify the VLAN IDs currently " "in use by an interface enter the <CmdBold>show vlans<NoCmdBold> " "command."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ASR900-IFTCAM-ERR</del>	3-Error	Failed to [chars] VLAN [dec] to/from interface [chars] status = [dec]	The access to update the TCAM VLAN filtering table on the SPA failed. The error message indicates the SPA subslot and the affected interface and the VLAN entry that failed.	mcp-io	LOG_STD_ACTION
<del>ASR900-IFTCAM-ERR</del>	3-Error	Failed to add VLAN [dec] to interface [chars]	The TCAM VLAN filtering table on the SPA is full. The error message indicates the SPA subslot and the affected interface and the VLAN entry that failed. The specified VLAN identifier will not be added to the TCAM table.	mcp-io	"Try to remove some of the registered VLANs for the interface by " "changing the interface configuration. To verify the VLAN IDs currently " "in use by an interface enter the <CmdBold>show vlans<NoCmdBold> " "command."
<del>ASR900-IFRMPATH-ERR</del>	3-Error	Failed to Authenticate the backplane quack device. This device may not be a quacked properly or not CISCO manufactured.	During the router boot-up we check if this router is cisco manufactured or not. If this device is not quacked properly or not CISCO manufactured this error is expected.	asr900-csl	LOG_STD_ACTION
<del>ASR900-IFRMPATH-ERR</del>	3-Error	Failed to create chasfs property [chars] rc=[dec]	Failure occurred while creating chasfs property	asr900-system-rsp3	LOG_STD_ACTION
<del>ASR900-IFRMPATH-ERR</del>	3-Error	Failed to set chasfs property [chars] with [chars] rc=[dec]	Failure occurred while updating chasfs property	asr900-system-rsp3	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ASR900_PIP3MCSIDMGAL</del>	3-Error	Failed to send the protection-physical [chars] TDL msg for protection interface [chars] and member [chars]	Whenever there is any error while sending the TDL msg for binding/unbinding a physical controller with UPSR/ACR controller	asr900-protection	LOG_STD_ACTION
<del>ASR900_PIP3MCSIDSPACH</del>	3-Error	Unable to dispatch received TDL message from PTP daemon	An unexpected condition has occurred while IOS was trying to dispatch a TDL message received from PTP daemon.	asr900-ptp	LOG_STD_ACTION
<del>ASR900_PIP3MCSINITIAL</del>	3-Error	Failed to initialize required PTP resource: [chars]	During the initialization of the resources required by PTP a failure occurred. This has prevented PTP from being activated.	asr900-ptp	LOG_STD_ACTION
<del>ASR900_PIP3MCSLIMIT</del>	3-Error	total active atm vc per ATM SPA reached limitation of [dec]	total number of active atm vc per ATM SPA has reached max limit	-	LOG_STD_ACTION
<del>ASR900_PIP3MCSIMSERIED</del>	3-Error	[chars] - [chars] in bay [dec]	A different IM type has been inserted in the bay which previously had another IM type. If the interfaces were set to default before swap the IM will boot up fine. If not IM will goto Out-of-service state. Kindly insert the previous IM type use hw-module subslot 0/x default and then proceed with the IM swap. If not might need to reload the box for recovery	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ASR001</del> IMBNCOMPATIBLE	3-Error	[chars]-[dec]	P1D and onwards Cu IM.... is not backward compatible with P1A/P1B/P1C Cu IM use the same build of Cu IM or reload the router to use the new build.	-	-
<del>ASR001</del> IMINVALIDCOMBINATION	3-Error	[chars] is not allowed in bay [dec] can be supported only in bays [chars]	The inserted IM is not supported in the specified subslot given the combination of existing IMs in the chassis.	-	-
<del>ASR001</del> IMINVALID_MODE	3-Error	[chars] with mode [chars] is not allowed in bay [dec] can be supported only in bays [chars]	The inserted IM is not supported in the specified subslot given the combination of existing IMs in the chassis.	-	-
<del>ASR001</del> IMBUNSUPPORTED	3-Error	This Interface Module is not supported in subslot [dec]	The inserted IM is not supported in the specified subslot. Kindly check the supported slots for the IM type.	-	-
<del>ASR001</del> IMBUNSUPPORTED_GSP	3-Error	Command rejected Cannot co-exist with [chars] present in subslot [dec]. Please retry after removing IM and rebooting.	The inserted IM cannot co-exist in the specified subslot after enabling dying gasp internal port. Kindly check the supported slots for the IM type.	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ASR00MUNSUBRDIISC</del>	3-Error	[chars] will not be operational in subslot [dec] after reboot due to payload encryption support with IPsec license	The inserted IM will not be supported in the specified subslot after reboot due to payload encryption support with IPsec license. Kindly check the supported slots for the IM type.	-	-
<del>ASR00MUNSUBRDIACRM</del>	3-Error	This Interface Module is not supported in [chars] platform	The inserted IM is not supported in the specified platform	-	-
<del>ASR00NIEUNSUBRDIID</del>	3-Error	Interface [chars] is not supported in subslot [dec] by the [chars] module	The Interface specified in the error message is not supported in the specified Subslot by the version of the operating system currently running on the system.	-	-
<del>ASR00NKEAMRACCSB</del>	3-Error	Failed to allocate a csb	Can't allocate a csb when generating punt err log	asr903-cfc	LOG_STD_ACTION
<del>ASR00NKEAMRACCTTY</del>	3-Error	Failed to allocate a tty	Can't allocate a TTY when generating punt err log	asr903-cfc	LOG_STD_ACTION
<del>ASR00NKEAMRACFNE</del>	3-Error	Failed to open file: [chars]	Failed to open file when generating punt err log	asr903-cfc	LOG_STD_ACTION
<del>ASR00NKEAMRACWFILE</del>	3-Error	Write to file Id [dec] failed [dec] bytes expected [dec] bytes	Write to file failed when generating punt err log	asr903-cfc	LOG_STD_ACTION
<del>ASR00NKEAMRACFCSH</del>	4-Warning	Failed to close file with descriptor: [dec]	Closing of file failed when generating punt err log	asr903-cfc	LOG_STD_ACTION
<del>ASR00NKEAMRACFNAME</del>	4-Warning	Failed to get file name	Could not form a file name when generating punt err log	asr903-cfc	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>ASR903-ERR-MED</del>	4-Warning	Invalid file descriptor: [dec]	Invalid file descriptor was found when generating punt err log	asr903-cfc	LOG_STD_ACTION
<del>ASR903-ERR-PRM</del>	4-Warning	Invalid parameter: [chars]	Invalid parameter was passed when generating punt err log	asr903-cfc	LOG_STD_ACTION
ASYNC_FODR_READ_FAIL	0-Emergency	Failed to read DSR state..	Failed to read DSR Data Set Ready state.	esr6k3-async	LOG_ERR
ASYNC_FODIR_SET_FAIL	0-Emergency	Failed to set DTR state..	Failed to set DTR Data Terminal Ready state.	esr6k3-async	LOG_ERR
AT-1-NOMEM	1-Alert	Could not allocate memory for [chars] at line [dec] in [chars]	An internal software error occurred.	atalk	LOG_SIDSHTTECH_ACTION
AT-2-ASSERTFAILED	2-Critical	AppleTalk assertion failed: [chars]	The software detected an inconsistency. Although this error is serious the router attempts to continue. AppleTalk processing might be impaired.	atalk	"Copy the message exactly as it appears note any AppleTalk problems " "you experience and call your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AT-3-DOMLOOP	3-Error	Loop detected on domain [dec] [[chars]]	The domain router detected a routing loop. Routing loops are not allowed. The domain router runs a background loop detection process. The domain router starts this process when it receives a new zone list from a domain that is identical to the list in the main routing table and whose network range length matches that in this list. The loop detection process sends several AppleTalk NBP loopback packets. When one of these packets is received on an interface that does not belong to the original domain the domain router first shuts off all the domains involved in the loop and then shuts off all the interfaces in these domains. The loop detection does not catch all types of loops. It is your responsibility to make sure that no loop exists.	atalk	"Disable the cause of the routing loop. Then use the clear appletalk " "command to restart the interfaces involved."
AT-3-DOMOVERFLOW	3-Error	Remap range overflow for [chars] domain [dec]	The remap range overflowed. If a network range cannot fit inside the	atalk	"Use the appletalk domain remap-range command to increase the remapping " "range. Then restart the interfaces."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AT-3-INVNBPCMD	3-Error	Invalid NBPtest command [chars]	An unrecognized command was specified in the Name Binding Protocol NBP test facility.	atalk	"Enter a valid command."
AT-3-NOBESTPATH	3-Error	Could not compute best path for network [node]	A path to the specified network could not be found.	atalk	"Use the show appletalk route command to verify that a path to the " "specified network exists. If it does copy the error message exactly " "as it appears and report it along with the output of the show " "appletalk route command to your technical support representative."
AT-3-NOROUTE	3-Error	No route to destination [atalk_address]	You attempted to remove a route from the routing table by issuing the clear appletalk route command. The command failed because the route was on a directly connected interface that is it was created when you configured the router.	atalk	"Remove the route by reconfiguring the directly connected interface " "with which it is associated."
AT-3-NOSOCKET	3-Error	[chars]: client tried to open socket but failed	-	-	-
AT-3-NOSUCHNBR	3-Error	No such neighbor [node]	You specified a nonexistent neighbor address in a show appletalk neighbor or clear appletalk neighbor.	atalk	"Specify a valid neighbor address that is one that appears in the " "output of the show appletalk neighbor command."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AT-3-NOTRUNNING	3-Error	AppleTalk not running	An AppleTalk interface that was previously shut down was restarted.	atalk	LOG_STD_NO_ACTION
AT-3-NOVIRTUAL	3-Error	[chars]: client tried to connect but no virtual network is declared	A hardware or software error occurred.	atalk	"Copy the error message exactly as it appears and report it to your " "technical support representative."
AT-3-OUTOFSYNC	3-Error	[chars]: AURP connection out of sync...terminating	The router detected a conflicting cable range. A router is configured with a cable range that overlaps with an existing range but does not match the entry exactly.	aurp	"Use the show appletalk command to identify the overlapped cable range " "and then reconfigure the misconfigured router."
AT-3-SUBROUTINE_ERROR	3-Error	AppleTalk error: [chars]	An internal error occurred. Specifically a programming assertion in the AppleTalk networking code was violated.	atalk	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AT-4-MACIPBADCONF	4-Warning	[chars]: MacIP inoperable configuration %i	If the appletalk event-logging command is configured this message appears on the console when a MacIP server cannot begin or recover operations because of an invalid IP address configuration. This condition only occurs when the configured MacIP server's IP address is not valid on the same cable of any operable IP interface. The AppleTalk zone served by the MacIP server replaces the zone specified in the appletalk zone command. The IP address configured on the MacIP server replaces the IP address configured by the ip address command. When this error occurs the MacIP configuration is considered invalid and is deleted.	atalk	LOG_SID_NO_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AT-4-MACIPNOCABLE	4-Warning	[chars]: MacIP inoperable IP interface %i	If the appletalk event-logging command is configured this message appears on the console when a MacIP server can no longer operate due to a change in the condition of the IP interface it serves. This condition can occur if IP routing is shut down on the interface or the IP address of the interface is changed so that the MacIP server's IP address is no longer valid on the same cable. The AppleTalk zone served by the MacIP server replaces the zone specified in the appletalk zone command. The IP address configured on the MacIP server replaces the IP address configured by the ip address command.	atalk	LOG_STD_NO_ACTION
AT-5-COMPATERR1	5-Notice	[chars]: AppleTalk internet compatibility mode required by [node]	Although this router has neighbors that require your internetwork to observe compatibility rules AppleTalk has learned of a route that has a cable range greater than 1. This condition can cause node inconsistencies on your AppleTalk network.	atalk	"Upgrade the routers that support only the original AppleTalk "specification. In the meantime observe the compatibility rules " "for AppleTalk Phase 1 and Phase 2 routers."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AT-5-FDDICOMPAT	5-Notice	AppleTalk FDDI neighbor [node] using obsolete FDDI addressing	An attempt was made to configure an interface to have the same or a conflicting AppleTalk address or cable range as another interface on the same router.	atalk	"Verify that you are not specifying an AppleTalk address or cable range " "used previously on this router and reconfigure the interface."
AT-5-NOSUCHROUTE	5-Notice	No such route [dec]	You specified a nonexistent route in a show appletalk route or clear appletalk route command.	atalk	"Specify a valid route that is one that appears in the output of the " "show appletalk route command."
AT-5-PATHCHANGE	5-Notice	Route to [node] is now using path of type [chars] on [chars] via [node]	The path to a network changed because either the old path went down or the new path was better.	atalk	LOG_SID_NO_ACTION
AT-5-RTMPSTATE	5-Notice	[chars]: RTMP path to [node] via [node] now in [chars] state metric [dec] [dec] hops	A new AppleTalk path has been learned. The message indicates the source of the path its distance in hops its metric and the type of path.	atalk	LOG_SID_NO_ACTION
AT-6-BADROUTE	6-Information	Route to [node] has gone bad	The system did not detect a route within the required timeout period. Therefore the route is marked as bad. A network might have become unreachable for some reason perhaps because of a broken connection. This message does not necessarily indicate an error condition.	atalk	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AT-6-MACIPDOWN	6-Information	[chars]: MacIP server shutting down %i	If the appletalk event-logging command is configured this message appears on the console when a MacIP server is no longer operational for any reason. MacIP servers shut down in response to MacIP configuration changes or errors or a change in the condition or configuration of an AppleTalk or IP interface for which the MacIP server is providing service. The AppleTalk zone served by the MacIP server replaces the zone specified in the appletalk zone command. The IP address configured on the MacIP server replaces the IP address configured by the ip address command.	atalk	LOG_STD_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AT-6-MACIPUP	6-Information	[chars]: MacIP server operational %i	If the appletalk event-logging command is configured this message appears on the console when a MacIP server is fully initialized and is ready to accept client requests. The AppleTalk zone served by the MacIP server replaces the zone specified in the appletalk zone command. The IP address configured on the MacIP server replaces the IP address configured by the ip address command.	atalk	LOG_SID_NO_ACTION
AT-6-NBRDELETED	6-Information	Neighbor entry for [node] deleted	The clear appletalk neighbor command displays this command when it completes successfully.	atalk	LOG_SID_NO_ACTION
AT-6-PATHDEL	6-Information	[chars]: AppleTalk [chars] path to [node] via [node] has been deleted	An AppleTalk node sent a GetNet Info request to this router specifying an invalid network number for the source of the GetNet Info request. This situation occurs when an AppleTalk end node is moved to another network and is therefore misconfigured for the current network.	atalk	LOG_SID_NO_ACTION
AT-6-REGPENDING	6-Information	NBP registration of [chars] at [[chars]] pending	A name registration call is being performed.	atalk	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AT-7-BUGREPORT	7-Debug	AppleTalk bug: [chars]	The software detected an unexpected condition. The router takes corrective action and continues.	atalk	"Copy the message exactly as it appears note any AppleTalk problems " "you experience and call your technical support representative."
AT-7-DEBUGMSG	7-Debug	AppleTalk debug: [chars]	This message is generated by a debug command and provides additional information about an AppleTalk condition.	atalk	"Copy the message exactly as it appears note any AppleTalk problems " "you experience and call your technical support representative."
<del>ATA3</del> ATA_STATUS_ERROR	3-Error	Error occurred while querying the status of ATA device. Return: [dec] stat_reg: 0x[hec]	An error occurred while querying the status of ATA device. Device not responding	ata-filesystem	"Replace the new ATA device and retry the operation. " "If the problem persists " "1 Run 'show tech' command."
<del>ATA6</del> ATA_STATUS_TIMEOUT	6-Information	Timeout occurred while querying the status of ATA device. Status returned :0x[hec] event: [dec]	A timeout occurred while querying the status of ATA device.	-	"Replace the new ATA device and retry the operation. " "If the problem persists " "1 Run 'show tech' command."
ATMHSU_NOMEMORY	1-Alert	mstxt_nomemory	The requested operation could not be accomplished because of a low\n\n memory condition.	atmcommon	"Reduce other system activity to ease memory demands. If conditions\n\n warrant upgrade to a larger memory configuration."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ATM-ISSU_NOMEMORY	1-Alert	msgtxt_nomemory	The requested operation could not be accomplished because of a low\n\n memory condition.	atmcommon	"Reduce other system activity to ease memory demands. If conditions\n\n warrant upgrade to a larger memory configuration."
ATM-1-NOPUSRAM	1-Alert	Unit [dec] not enough interface memory	The specified ATM interface hardware has run out of interface memory.	-	LOG_SIDSHTTECH_ACTION
ATM-1-NOPUSRAM	1-Alert	Unit [dec] not enough interface memory	The specified ATM interface hardware has run out of interface memory.	-	LOG_SIDSHTTECH_ACTION
ATM-2-FAILATMSWDB	2-Critical	Fail malloc atm_swdb at [chars]	System memory exhaustion caused an internal software error in the ATM subsystem.	-	"If the system exhibits any unexpected behavior as a result of " "this memory exhaustion it may need to be reset to clear the error." LOG_SIDREDUCE_ACTION
ATM-2-FAILATMSWDB	2-Critical	Fail malloc atm_swdb at [chars]	System memory exhaustion caused an internal software error in the ATM subsystem.	-	"If the system exhibits any unexpected behavior as a result of " "this memory exhaustion it may need to be reset to clear the error." LOG_SIDREDUCE_ACTION
ATM-3-FAILATMSWDB	3-Error	ATMNode1 [chars] VCD [dec] [dec]/[dec] Node2 [chars] VCD [dec] [dec]/[dec]	A software error occurred.	-	LOG_SIDSHTTECH_ACTION
ATM-3-FAILATMSWDB	3-Error	ATMNode1 [chars] VCD [dec] [dec]/[dec] Node2 [chars] VCD [dec] [dec]/[dec]	A software error occurred.	-	LOG_SIDSHTTECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ATM3-FAILCREATEVC	3-Error	ATM failed to create VCVCD=[dec] VPI=[dec] VCI=[dec] on Interface [chars] Cause of the failure: [chars]	-	-	-
ATM3-FAILCREATEVC	3-Error	ATM failed to create VCVCD=[dec] VPI=[dec] VCI=[dec] on Interface [chars] Cause of the failure: [chars]	-	-	-
<del>ATM3-FAILCREATEVC</del>	3-Error	ATM failed to remove service policy on VCVCD=[dec] VPI=[dec] VCI=[dec] on Interface [chars] Cause of the failure: [chars]	The DSL line rate has been changed for the PVC to support the guaranteed bandwidth configured for the virtual circuits.	atmcommon	LOG_STD_ACTION
<del>ATM3-FAILCREATEVC</del>	3-Error	ATM failed to remove service policy on VCVCD=[dec] VPI=[dec] VCI=[dec] on Interface [chars] Cause of the failure: [chars]	The DSL line rate has been changed for the PVC to support the guaranteed bandwidth configured for the virtual circuits.	atmcommon	LOG_STD_ACTION
ATM3-FAILREMOVEVC	3-Error	ATM failed to remove VCVCD=[dec] VPI=[dec] VCI=[dec] on Interface [chars] Cause of the failure: [chars]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ATM3FAILREMOVEVC	3-Error	ATM failed to remove VCVCD=[dec] VPI=[dec] VCI=[dec] on Interface [chars] Cause of the failure: [chars]	-	-	-
ATM3ILMINIERNALERR	3-Error	[chars] [chars]:[dec]	Internal Error see message occurs during ILMI Primary to Secondary Sync	as	LOG_SIDSHTTECH_ACTION
ATM3ILMINIERNALERR	3-Error	[chars] [chars]:[dec]	Internal Error see message occurs during ILMI Primary to Secondary Sync	as	LOG_SIDSHTTECH_ACTION
ATM3ILMSYNCIERNERR	3-Error	[chars] [chars]:[dec]	Internal Error see message occurs during ILMI Primary to Secondary Sync	as	LOG_SIDSHTTECH_ACTION
ATM3ILMSYNCIERNERR	3-Error	[chars] [chars]:[dec]	Internal Error see message occurs during ILMI Primary to Secondary Sync	as	LOG_SIDSHTTECH_ACTION
ATM3ILMSYNCIERNERR	3-Error	[chars] [[node]X=[chars]] [chars]:[dec]	Internal Error see message occurs during ILMI Primary to Secondary Sync	as	LOG_SIDSHTTECH_ACTION
ATM3ILMSYNCIERNERR	3-Error	[chars] [[node]X=[chars]] [chars]:[dec]	Internal Error see message occurs during ILMI Primary to Secondary Sync	as	LOG_SIDSHTTECH_ACTION
ATM3ISSU_SENDFAILED	3-Error	\nATM ISSU: send message failed rc = [dec]\n	The sending of a message has failed.	atmcommon	LOG_SIDSHTTECH_ACTION
ATM3ISSU_SENDFAILED	3-Error	\nATM ISSU: send message failed rc = [dec]\n	The sending of a message has failed.	atmcommon	LOG_SIDSHTTECH_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ATM-3-MLPDEQUEUE	3-Error	MLPPP failed CosQ=[hec] MLP=[hec] OQDQ=[hec] [hec] Cause of the failure: [chars]	-	-	-
ATM-3-MLPDEQUEUE	3-Error	MLPPP failed CosQ=[hec] MLP=[hec] OQDQ=[hec] [hec] Cause of the failure: [chars]	-	-	-
ATM-3-MLPoATM_ERROR	3-Error	MLPoATM not configured properly on \n\ Link [chars] Bundle [chars] :[chars]	The configuration of MLPPP-over-ATM MLPoATM on the ATM PVC is either incorrect or incomplete.	atmcommon	"Ensure that the service policy has been attached to " "the Virtual Template and that the queueing strategy on the ATM interface " "is per VC queueing and queueing algorithm is FIFO. To verify the " "configuration use the <CmdBold>show inteface atm <noCmdBold> and " "<CmdBold>show running-config vltmplte<noCmdBol d> commands."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AIM3MLPOATM_ERROR	3-Error	MLPoATM not configured properly on \n\ Link [chars] Bundle [chars] :[chars]	The configuration of MLPPP-over-ATM MLPoATM on the ATM PVC is either incorrect or incomplete.	atmcommon	"Ensure that the service policy has been attached to "the Virtual Template and that the queueing strategy on the ATM interface " "is per VC queueing and queueing algorithm is FIFO. To verify the " "configuration use the <CmdBold>show interface atm <noCmdBold> and " <CmdBold>show running-config virtual-template <noCmdBold> commands."
AIM3-OUT_OF_VCDS	3-Error	ATM failed to create VC on Interface [chars]	The ATM subsystem ran out of internal resources necessary to create a new virtual circuit. This may indicate a software error.	-	LOG_STD_ACTION
AIM3-OUT_OF_VCDS	3-Error	ATM failed to create VC on Interface [chars]	The ATM subsystem ran out of internal resources necessary to create a new virtual circuit. This may indicate a software error.	-	LOG_STD_ACTION
AIM3OVERSUBSCRIBED	3-Error	Interface [chars]: Total [chars] allocation [node]chars exceeded maximum [chars] of [node]chars].	A software or hardware error occurred.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AIMEOVERSUBSCRIBED	3-Error	Interface [chars]: Total [chars] allocation [node]chars exceeded maximum [chars] of [node]chars.	A software or hardware error occurred.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ATM3PPPOEA_VCHLAG	3-Error	ATM: [chars] PVC [dec]/[dec] : Error in PPPoE flag	The ATM PVC PPPoE flag is still set while it should not be set. ATM uses a flag to indicate whether or not it should process PPPoE frames. In some rare conditions the flag can still be set for ATM to process PPPoE frames while it should not be. This condition can cause PPPoE frames to be processed when they should be dropped.	atmcommon	<p>"In most cases no action is required as the system will set the flag " "so that ATM will not process PPPoE frames and the system " "will continue to operate normally. However If the ATM PVC " "specified in the error message is repeatedly experiencing problems " "involving PPPoE unconfigure all commands under the PVC " "and remove and then reconfigure the PVC. Enter the "</p> <pre>&lt;CmdBold&gt;interface atm&lt;NoCmdBold&gt; interface-number</pre> <p>" "command in global configuration mode to enter atm interface " "configuration mode. Then specify the PVC you would like to " "unconfigure and enter the &lt;CmdBold&gt;no encapsulation&lt;NoCmdBold&gt; " "command. Specify the PVC you just unconfigured then reconfigure " "the PVC using the &lt;CmdBold&gt;no encapsulation&lt;NoCmdBold&gt; command."</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ATM-PPPoE-ERR-VCHLAG	3-Error	ATM: [chars] PVC [dec]/[dec] : Error in PPPoE flag	The ATM PVC PPPoE flag is still set while it should not be set. ATM uses a flag to indicate whether or not it should process PPPoE frames. In some rare conditions the flag can still be set for ATM to process PPPoE frames while it should not be. This condition can cause PPPoE frames to be processed when they should be dropped.	atmcommon	"In most cases no action is required as the system will set the flag " "so that ATM will not process PPPoE frames and the system " "will continue to operate normally. However If the ATM PVC " "specified in the error message is repeatedly experiencing problems " "involving PPPoE unconfigure all commands under the PVC " "and remove and then reconfigure the PVC. Enter the " "<CmdBold>interface atm<NoCmdBold> interface-number " "command in global configuration mode to enter atm interface " "configuration mode. Then specify the PVC you would like to " "unconfigure and enter the <CmdBold>no encapsulation<NoCmdBold> " "command. Specify the PVC you just unconfigured then reconfigure " "the PVC using the <CmdBold>no encapsulation<NoCmdBold> command."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ATM-3-REJECTVC	3-Error	ATM failed to create VCVCD=[dec] VPI=[dec] VCI=[dec] on Interface [chars] Cause of the failure: [chars]	-	-	-
ATM-3-REJECTVC	3-Error	ATM failed to create VCVCD=[dec] VPI=[dec] VCI=[dec] on Interface [chars] Cause of the failure: [chars]	-	-	-
<del>ATM-3-REJECTVC</del>	3-Error	ATM failed to create VC on Interface [chars]	Either the configuration contains invalid traffic shaping parameters or the software ran out of rate queues.	-	"Check the configuration for errors."
<del>ATM-3-REJECTVC</del>	3-Error	ATM failed to create VC on Interface [chars]	Either the configuration contains invalid traffic shaping parameters or the software ran out of rate queues.	-	"Check the configuration for errors."
ATM-4-ILMICONNCHANGE	4-Warning	ILMI[chars]: Restarting ATM signalling and ILMI. Peer Configuration change detected.	Configuration of adjacent peer device has been changed.	-	"Wait for the interface to restart itself."
ATM-4-ILMICONNCHANGE	4-Warning	ILMI[chars]: Restarting ATM signalling and ILMI. Peer Configuration change detected.	Configuration of adjacent peer device has been changed.	-	"Wait for the interface to restart itself."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ATM4ILMIKEEPALIVEFAIL	4-Warning	ILMI[chars]: Restarting ATM signalling and ILMI. Keepalive failure detected.	Adjacent peer device is not responding to ILMI Keepalive polling.	-	"Check the connection of the ATM interface and the status of the " "adjacent peer device. Correct them if necessary. Wait and check " "if ILMI Keepalive comes up again. If the problem persists " "copy this warning message exactly as it appears and report it to " "your technical support representative."
ATM4ILMIKEEPALIVEFAIL	4-Warning	ILMI[chars]: Restarting ATM signalling and ILMI. Keepalive failure detected.	Adjacent peer device is not responding to ILMI Keepalive polling.	-	"Check the connection of the ATM interface and the status of the " "adjacent peer device. Correct them if necessary. Wait and check " "if ILMI Keepalive comes up again. If the problem persists " "copy this warning message exactly as it appears and report it to " "your technical support representative."
ATM4ILMSYNCRNIFWARN	4-Warning	[chars] [[node]X=[chars]] [chars]:[dec]	Recoverable Internal Error see message occurs during ILMI Primary to Secondary Sync	as	LOG_SID_SH_TECH_ACTION
ATM4ILMSYNCRNIFWARN	4-Warning	[chars] [[node]X=[chars]] [chars]:[dec]	Recoverable Internal Error see message occurs during ILMI Primary to Secondary Sync	as	LOG_SID_SH_TECH_ACTION
ATM4ISSU_NCOMPATIBLE	4-Warning	\natm-issu-compat: returned FALSE	The compatibility checking has failed	atmcommon	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ATM4ISSU_INCOMPATIBLE	4-Warning	\natm-issu-compat: returned FALSE	The compatibility checking has failed	atmcommon	LOG_SIDSHTTECH_ACTION
ATM4-ISSU_XFORM	4-Warning	\n[chars]: failed rc=[chars]	The transform has failed.	atmcommon	LOG_SIDSHTTECH_ACTION
ATM4-ISSU_XFORM	4-Warning	\n[chars]: failed rc=[chars]	The transform has failed.	atmcommon	LOG_SIDSHTTECH_ACTION
ATM4MTCALIMSMATCH	4-Warning	Call from: \n ATM NSAP - [chars]\n has mismatched PDU size - forward size is [dec]\n - backward size is [dec]\n int [chars] PDU size [chars] [chars]	The calling or called party has a maximum transmission unit MTU size	-	"Either change the configured MTU size on the current interface to that " "of the caller's or called party's interface or change the caller's or " "called party's interface to match the current interface."
ATM4MTCALIMSMATCH	4-Warning	Call from: \n ATM NSAP - [chars]\n has mismatched PDU size - forward size is [dec]\n - backward size is [dec]\n int [chars] PDU size [chars] [chars]	The calling or called party has a maximum transmission unit MTU size	-	"Either change the configured MTU size on the current interface to that " "of the caller's or called party's interface or change the caller's or " "called party's interface to match the current interface."
ATM4-STUCK_VCD	4-Warning	clearing stuck VCD [dec] from map on [chars]	A SVC map entry has a stuck VCD attached to it which has been previously cleared in the driver.	-	"No action required as the stuck VCD condition is detected " "and cleared."
ATM4-STUCK_VCD	4-Warning	clearing stuck VCD [dec] from map on [chars]	A SVC map entry has a stuck VCD attached to it which has been previously cleared in the driver.	-	"No action required as the stuck VCD condition is detected " "and cleared."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ATM4-NMACH-NMERRSON	4-Warning	[dec]/[dec]/[dec]:[dec]: [chars]. Please verify peer UNI version	The ATM peer equipment appears to be running an old version of ATM UNI. Communication with it is not possible.	-	"The peer equipment needs to be upgraded in " "order to communicate with this system."
ATM4-NMACH-NMERRSON	4-Warning	[dec]/[dec]/[dec]:[dec]: [chars]. Please verify peer UNI version	The ATM peer equipment appears to be running an old version of ATM UNI. Communication with it is not possible.	-	"The peer equipment needs to be upgraded in " "order to communicate with this system."
ATM4-VPIVCIRANGE	4-Warning	VPI/VCI range parameters are dis-joint on [chars]	MinSvccVci > MaxVci after negotiation with the peer through ILMI.	-	"Disable auto-cinfiguration on both sides and change the " "port configuration appropriately so that SVCCs can be setup."
ATM4-VPIVCIRANGE	4-Warning	VPI/VCI range parameters are dis-joint on [chars]	MinSvccVci > MaxVci after negotiation with the peer through ILMI.	-	"Disable auto-cinfiguration on both sides and change the " "port configuration appropriately so that SVCCs can be setup."
ATM5-ATMSOFTSTART	5-Notice	Restarting ATM signalling and ILMI on [chars].	The command just entered causes ATM Soft Restart.	-	"Stand by and let ATM Signalling and ILMI to restart."
ATM5-ATMSOFTSTART	5-Notice	Restarting ATM signalling and ILMI on [chars].	The command just entered causes ATM Soft Restart.	-	"Stand by and let ATM Signalling and ILMI to restart."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ATM-5-ILMIACCFILTER	5-Notice	New access filter setting will be applied to registration of new addresses on [chars].	The command just entered sets up new ilmi access filter for address registration. It only affects new addresses to be registered. The addresses already registered will not be affected.	-	"Enter the shutdown and no shutdown commands on this interface to " "restart address registration if need to remove addresses already " "registered but not permitted by the new access filter."
ATM-5-ILMIACCFILTER	5-Notice	New access filter setting will be applied to registration of new addresses on [chars].	The command just entered sets up new ilmi access filter for address registration. It only affects new addresses to be registered. The addresses already registered will not be affected.	-	"Enter the shutdown and no shutdown commands on this interface to " "restart address registration if need to remove addresses already " "registered but not permitted by the new access filter."
ATM-5-ILMIADDRESSREG	5-Notice	Address registration on [chars] is enabled.	The command just entered enables atm address registration.	-	"No action required."
ATM-5-ILMIADDRESSREG	5-Notice	Address registration on [chars] is enabled.	The command just entered enables atm address registration.	-	"No action required."
ATM-5-ILMIDFACCFILTER	5-Notice	New global default access filter setting will be applied to registration of new addresses on interfaces using global default access filter.	The command just entered sets up new global default access filter for address registration. It only affects new addresses to be registered on interfaces using the global default. The addresses already registered will not be affected.	-	"Enter the shutdown and no shutdown commands on desired " "interfaces to restart address registration if need to remove addresses " "already registered but not permitted by the new global " "default access filter."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AIMSILMIDEFACFILTER	5-Notice	New global default access filter setting will be applied to registration of new addresses on interfaces using global default access filter.	The command just entered sets up new global default access filter for address registration. It only affects new addresses to be registered on interfaces using the global default. The addresses already registered will not be affected.	-	"Enter the shutdown and no shutdown commands on desired " "interfaces to restart address registration if need to remove addresses " "already registered but not permitted by the new global " "default access filter."
AIMSILMNIREDUNDENCY	5-Notice	ILMI[chars]: [chars]	Informational Message for ILMI Redundency Support	as	LOGSIDSHTECHACION
AIMSILMNIREDUNDENCY	5-Notice	ILMI[chars]: [chars]	Informational Message for ILMI Redundency Support	as	LOGSIDSHTECHACION
AIMSILMIREDUNDENCY	5-Notice	[chars]	Informational Message for ILMI Redundency Support	as	LOGSIDSHTECHACION
AIMSILMIREDUNDENCY	5-Notice	[chars]	Informational Message for ILMI Redundency Support	as	LOGSIDSHTECHACION
ATM-5-UPDOWN	5-Notice	Interface [chars] Changing autovc [dec]/[dec] to [chars]	The ATM Auto VC is either created removed activated \n\ or deactivated.	-	"No action required if status change is intended\n\ otherwise the cause for status change may deserve to be noticed.\n\ The shut and no shut CLI command deactivates/activates VC."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ATM-5-UPDOWN	5-Notice	Interface [chars] Changing autovc [dec]/[dec] to [chars]	The ATM Auto VC is either created removed activated \n\ or deactivated.	-	"No action required if status change is intended\n\ otherwise the cause for status change may deserve to be noticed.\n\ The shut and no shut CLI command deactivates/activates VC."
ATM-6-AUTOPPP	6-Information	ATM[chars]: VCVCD=[dec] VPI=[dec] VCI=[dec] Auto Detected Encap Type is [chars].	ATM VC AutoPPP Encapsulation Type has been changed automatically`.	atmcommon	"don't do anything."
ATM-6-AUTOPPP	6-Information	ATM[chars]: VCVCD=[dec] VPI=[dec] VCI=[dec] Auto Detected Encap Type is [chars].	ATM VC AutoPPP Encapsulation Type has been changed automatically`.	atmcommon	"don't do anything."
<del>ATM-AUTOCONFIGREADY</del>	6-Information	ILMI[chars]: Auto-configuration already enabled.	Atm auto-configuration has been enabled already. 'atm auto-configuration' command just entered is ignored.	-	"No action required."
<del>ATM-AUTOCONFIGREADY</del>	6-Information	ILMI[chars]: Auto-configuration already enabled.	Atm auto-configuration has been enabled already. 'atm auto-configuration' command just entered is ignored.	-	"No action required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>AIM6LMNOAUTOCEABERR</del>	6-Information	ILMI[chars]: Auto-configuration cannot be enabled.	Auto-configuration cannot be enabled if there are some conflicting configuration on an interface. Like if there are VCs with vpi > 255 auto-configuration cannot be done till these VCs are removed as with auto-configuration enabled vpi > 255 cannot be supported.	-	"Undo the conflicting configuration on the interface for " "this command to succeed."
<del>AIM6LMNOAUTOCEABERR</del>	6-Information	ILMI[chars]: Auto-configuration cannot be enabled.	Auto-configuration cannot be enabled if there are some conflicting configuration on an interface. Like if there are VCs with vpi > 255 auto-configuration cannot be done till these VCs are removed as with auto-configuration enabled vpi > 255 cannot be supported.	-	"Undo the conflicting configuration on the interface for " "this command to succeed."
AIM6LMNOAUTOCEFG	6-Information	ILMI[chars]: Auto-configuration is disabled current	The command just entered causes auto-configuration to be disabled the most recently entered interface parameters will be used at next interface restart.	-	"Be aware of what parameteres have been configured."
AIM6LMNOAUTOCEFG	6-Information	ILMI[chars]: Auto-configuration is disabled current	The command just entered causes auto-configuration to be disabled the most recently entered interface parameters will be used at next interface restart.	-	"Be aware of what parameteres have been configured."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ATMNOAUTOCONFIG</del>	6-Information	ILMI[chars]: Auto configuration already disabled.	Atm auto-configuration has been enabled already. 'no atm auto-configuration' command just entered is ignored.	-	"No action required."
<del>ATMNOAUTOCONFIG</del>	6-Information	ILMI[chars]: Auto configuration already disabled.	Atm auto-configuration has been enabled already. 'no atm auto-configuration' command just entered is ignored.	-	"No action required."
<del>ATMINTERMNAINTPORT</del>	6-Information	ILMI[chars]: This command does not apply to internal terminating port.	Internal terminating does not need to be configured with this command. The command just entered is ignored.	-	"No action required."
<del>ATMINTERMNAINTPORT</del>	6-Information	ILMI[chars]: This command does not apply to internal terminating port.	Internal terminating does not need to be configured with this command. The command just entered is ignored.	-	"No action required."
<del>ATMPVCSTATECHANGE</del>	6-Information	ATM[chars]: PVCVCD=[dec] VPI=[dec] VCI=[dec] state changed to [chars].	ATM PVC status has changed.	-	LOG_NO_ACTION
<del>ATMPVCSTATECHANGE</del>	6-Information	ATM[chars]: PVCVCD=[dec] VPI=[dec] VCI=[dec] state changed to [chars].	ATM PVC status has changed.	-	LOG_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>AMC0ERLN</del> INTERNAL_CRITICAL	2-Critical	[chars]	The ATM core redundancy subsystem encountered an internal software error. The error message contains text which can be used to help identify the nature of the problem.	-	LOGS_IDSHTTECH_ACTION
<del>AMC0ERLN</del> INTERNAL_ERROR	3-Error	[chars]	The ATM core redundancy subsystem encountered an internal software error. The error message contains text which can be used to help identify the nature of the problem.	-	LOGS_IDSHTTECH_ACTION
<del>AMC0ERLN</del> INTERNAL_WARNING	4-Warning	[chars]	The ATM core redundancy subsystem encountered an internal software error. The error message contains text which can be used to help identify the nature of the problem.	-	LOGS_IDSHTTECH_ACTION
<del>AMC0ERLN</del> INTERNAL_CRITICAL	2-Critical	[chars]	The ATM core subsystem encountered an internal software error. The error message contains text which can be used to help identify the nature of the problem.	-	LOGS_IDSHTTECH_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>AIMCORE</del> INTERNAL_ERROR	3-Error	[chars]	The ATM core subsystem encountered an internal software error. The error message contains text which can be used to help identify the nature of the problem.	-	LOG_SIDSH_TECH_ACTION
<del>AIMCORE</del> AIMSYS_ERROR	4-Warning	[chars]	The ATM core subsystem encountered an internal software error. The error message contains text which can be used to help identify the nature of the problem.	-	LOG_SIDSH_TECH_ACTION
<del>AIMCORE</del> CONFIG_ERROR	4-Warning	Configuration Error: [chars]	This message indicates a configuration error. The message will display more specific information about the problem location.	-	"Change the configuration to correct the error."
<del>AIMCORE</del> INTERNAL_WARNING	4-Warning	[chars]	This warning is generated by the ATM core subsystem to the user. This could arise because the user request may not be granted due to some existing configuration on the device. This message serves as an alert to the user. This message contains text which can be used to help identify the nature of the problem.	-	LOG_SIDSH_TECH_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>AM3AM3CGDIEEAD</del>	3-Error	ATMSIG[chars]	A software error occurred during removal of a member from a\n\n closed user group. Other error messages appearing\n\n immediately prior to this one may be related.	-	LOGSIDSHTECHACION
<del>AM3AM3CGNSRIAD</del>	3-Error	ATMSIG[chars]	A software error occurred during addition of a member to a\n\n closed user group. Other error messages appearing\n\n immediately prior to this one may be related.	-	LOGSIDSHTECHACION
<del>AM3AM3ISENADUP</del>	3-Error	Duplicate LISTEN by [chars] for existing NSAP [chars] owned by [chars]	An application attempted to either LISTEN on an NSAP owned by \n\n another application or to LISTEN for the same NSAP twice	-	LOGSIDSHTECHACION
<del>AM3AM3GRYDIEEAD</del>	3-Error	ATMSIG[chars] [dec][dec] - [node]d/[node]d avl prty del failed:svc 0x[hec] party 0x[hec]	A software error occurred during removal of a party from a\n\n point-to-multipoint call. Other error messages appearing \n\n immediately prior to this one may be related.	-	LOGSIDSHTECHACION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ATMSIG3-GRYNSRIALD	3-Error	ATMSIG[chars] [dec][dec] - [node]d/[node]d avl prty ins failed:svc 0x[hec] party 0x[hec]	A software error occurred during addition of a party to a\n\ point-to-multipoint call. Other error messages appearing\n\ immediately prior to this one may be related.	-	LOG_SIDSH_TECH_ACTION
ATMSIG3-SCDLEHFD	3-Error	ATMSIG[chars] [dec][dec] - [node]d/[node]d SVC wavl del failed:svc 0x[hec]	A software error occurred during closure of an SVC. Other error\n\ messages appearing immediately prior to this one may be related.	-	LOG_SIDSH_TECH_ACTION
ATMSIG3-NSRIALD	3-Error	ATMSIG[chars] [dec][dec] - [node]d/[node]d SVC wavl ins failed:svc 0x[hec]	A software error occurred during creation of an SVC. Other error\n\ messages appearing immediately prior to this one may be related.	-	LOG_SIDSH_TECH_ACTION
ATMSIG-3-DBINITFAIL	3-Error	Signalling control block initialization failure [chars]	An internal software or resource error occurred	-	LOG_SIDSH_TECH_ACTION
ATMSIG-3-ENQFAIL	3-Error	process_enqueue failed [chars]	An internal software error occurred while handling a user request.	-	LOG_SIDSH_TECH_ACTION
ATMSIG3-FALSIHALLEG	3-Error	1st halfLeg failed [chars]	An internal software error occurred.	-	LOG_SIDSH_TECH_ACTION
ATMSIG3-FALNCHALLEG	3-Error	2nd halfLeg failed [chars]	An internal software error occurred.	-	LOG_SIDSH_TECH_ACTION
ATMSIG-3-FAILASSERT	3-Error	Assertion failed: [chars]	An internal software error occurred.	-	LOG_SIDSH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ATMSIG3-FALHLEGREM	3-Error	halfLeg removal failed [chars]	An internal software error occurred. This message should only be displayed when verbose debugging is enabled for an SVC.	-	LOG_SID_SH_TECH_ACTION
ATMSIG3-FAILXCONN	3-Error	Xconnect failed [chars]	An internal software error occurred during installation of an SVC cross-connect.	-	LOG_SID_SH_TECH_ACTION
ATMSIG3-INVPNMSG	3-Error	Invalid msg from routing/pnni : [chars]	This message indicates an error in the PNNI routing subsystem. It could be caused by an internal software error or by bad control information received from peer equipment. The message will contain additional information that can help locate the cause. Any message with 'NULL' probably indicates a problem with this system others probably point at the peer equipment.	-	"Check this system and the peer equipment for any obvious errors." LOG_SID_RECUR_ACTION
ATMSIG3-NOCALLREF	3-Error	Cannot find a Callref value to allocate: [chars]	This indicates an internal software error probably including memory exhaustion.	-	LOG_SID_SH_TECH_ACTION
ATMSIG-3-NOSVC	3-Error	no SVC [chars]	An internal software error occurred.	-	LOG_SID_SH_TECH_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ATM#PNNI_TRACE_INTERNAL	3-Error	[chars]	An internal software error or unexpected condition occurred during\n\n PNNI Connection/Path Trace related processing	-	-
ATM#S4CONFIG_ERROR	4-Warning	Configuration Error: [chars] [chars]	This message indicates a configuration error in the ATM Signaling\n\n subsystem. The message will display more specific information\n\n about the problem location.	-	"Change the configuration to correct the error."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ATMSPA-2-INITFAIL	2-Critical	[chars] - Init Failed return code: %u	The SPA failed to complete hardware initialization. One of the devices in the SPA failed to initialize successfully. Information about the failed device is specified in the message text on the console or in the system log.	-	"Please power down and reseal the indicated SPA card. If the condition " "persists copy the error message exactly as it appears. Next research " "and attempt to resolve the issue using the SPA hardware troubleshooting " "documentation as well as the tools and utilities provided at " " <a href="http://www.cisco.com/Support/ToolsAndResources">http://www.cisco.com/Support/ToolsAndResources</a> " If you still " "require assistance open a case with the Technical Assistance Center " "via the Internet at " " <a href="http://www.cisco.com/Support/ToolsAndResources">http://www.cisco.com/Support/ToolsAndResources</a> " or contact " "your Cisco technical support representative. Be sure to provide the " "the information you have gathered and a 'show tech-support' to " "your support representative or attach it to your case in non-zipped " "plain text format .txt."
<del>ATMSPA-3-AUTOCONF</del>	3-Error	[chars]: atm autovc discovery configuration failed reason: [chars]	A command to configure the atm autovc discovery on an atm interface has failed	spa-atm-all	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AIMSPA3DATA_ERROR	3-Error	[chars] Error 0x[hec] [chars]	A datapath protocol violation or sequence error has been detected.	-	"The message text on the console or in the " "system log provides more information " "on the specific nature of the error. " LOG_SIDSHTTEHACION
AIMSPA3FATAL_ERROR	3-Error	occurred on [chars]. Resetting SPA	The SPA has been reset due to a critical error in one of its devices. The error could either be a single occurrence of an event or multiple occurrences within a period of time. The message text on the console or in the system log provides more information on the specific nature of the error.	spa-atm-all	"If the SPA is reset more than once copy the error " "message exactly as it appears. Next research and attempt to resolve the " "issue using the SPA hardware troubleshooting documentation as well " "as the tools and utilities provided at " <a href="http://www.cisco.com/800/81">http://www.cisco.com/800/81</a> If you still " "require assistance open a case with the Technical Assistance Center " "via the Internet at " <a href="http://www.cisco.com/800/81">http://www.cisco.com/800/81</a> or contact " "your Cisco technical support representative. Be sure to provide the " "the information you have gathered and a 'show tech-support' to " "your support representative or attach it to your case in non-zipped " "plain text format .txt."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ATMSPD-3-DEPENDENCY	3-Error	Cannot perform the requested FPD update operation because [chars] in subslot [node][node] has incompatible HW version [node][node] with FPD image version [dec].[dec] for FPD ID [dec]. Only image version greater than [node][node] can be used in the update operation of [chars] with HW version greater than [node][node]	The version of the FPD image from the FPD image bundle or package is not compatible with the HW version of the target card	spa-atm-all	LOG_STD_ACTION
ATMSPA-3-GEN_ERROR	3-Error	[chars] Error 0x[hec] [chars]	The specified error has been detected.	-	LOG_SIDSH_TECH_ACTION
ATMSPA-3-HW_ERROR	3-Error	[chars] Error 0x[hec] [chars]	The specified hardware error has been detected.	-	"The message text on the console or in the " "system log provides more information " "on the specific nature of the error. " LOG_SIDSH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ATMSPAKEEPALIMEFAILURE	3-Error	occurred on [chars]. Resetting SPA	One of the devices of the SPA failed to respond to keepalives due to which SPA has been reset. The message text on the console or in the system log provides more information on which device failed to respond.	spa-atm-all	<p>"If the SPA is reset more than once copy the error " "message exactly as it appears. Next research and attempt to resolve the " "issue using the SPA hardware troubleshooting documentation as well " "as the tools and utilities provided at " BUG_TOOLKIT</p> <p>"If you still "</p> <p>"require assistance open a case with the Technical Assistance Center " "via the Internet at "</p> <p>TAC_CASE_OPEN</p> <p>" or contact your Cisco technical "</p> <p>"support representative. Be sure to provide the information you have " "gathered and</p> <p>&lt;cmdBold&gt;show tech-support&lt;/cmdBold&gt;</p> <p>to your support "</p> <p>"representative or attach it to your case"</p>



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ATMSPA3QS_ALOCF_AHD	3-Error	[chars] [chars] [chars]: [dec]	Traffic shaping parameters could not be configured because the number of unique shaping parameters that are configured on the PVCs or PVPs in this specified ATM SPA is over the maximum limit. The maximum number of unique shaping parameters that can be configured on the PVCs or PVPs is 4096.	spa-atm-all	"Ensure that the total number of unique shaping parameters " "that are configured on both PVCs and PVPs does not exceed " "the maximum limit of 4096."
ATMSPA-3-SW_ERROR	3-Error	[chars] Error 0x[hec] [chars]	The specified software error has been detected.	-	LOGS_IDS_H_TECH_ACIION
ATMSPA-3-VCQ_ERROR	3-Error	[chars]: VC queue configuration failed due to un-initialized queue table global identifier [dec]	Software configuration of a VC queue failed due to un-initialized queue table.	-	"Attempt to perform a soft OIR operation by entering the command " "that is described in the shared port adapter software configuration " "guide. If the condition persists copy the error message exactly as it " "appears and report it to your technical support representative. " "Also supply a 'show tech-support' at that time."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ATMSPA-4-SETUPVC	4-Warning	Interface [chars] VC [dec] setup failed reason = [dec]	A command to setup a VC has failed on RP.	spa-atm-all	<p>"The SPA ATM driver has detected a problem creating the internal OAM" "VC. Reload the indicated SPA card to reconfigure the internal OAM VC."</p> <p>"If the error messages persists copy the error message exactly as " "it appears. Next research and attempt to resolve the issue using " "the SPA hardware troubleshooting documentation as well as the tools " "and utilities provided at " "<a href="http://www.cisco.com/113376.html">http://www.cisco.com/113376.html</a></p> <p>If you still " "require assistance open a case with the Technical Assistance Center " "via the Internet at " "<a href="http://www.cisco.com/113376.html">http://www.cisco.com/113376.html</a> or contact " "your Cisco technical support representative. Be sure to provide the " "the information you have gathered and a 'show tech-support' to " "your support representative or attach it to your case in non-zipped " "plain text format .txt."</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AIMSPA4TEARDOWNVC	4-Warning	Interface [chars] VC [dec] teardown failed reason = [dec]	A command to remove a VC config has failed on RP.	spa-atm-all	"The SPA ATM driver has detected a problem tearing down the internal " "OAM VC. Reload the indicated SPA card to do a clean tear down of the " "internal OAM VC. If the error messages persists copy the error " "message exactly as it appears. Next research and attempt to resolve " "the issue using the SPA hardware troubleshooting documentation as well" " as the tools and utilities provided at " " <a href="http://www.cisco.com/Support/ToolsAndResources/SPATroubleshooting.html">http://www.cisco.com/Support/ToolsAndResources/SPATroubleshooting.html</a> If you still " "require assistance open a case with the Technical Assistance Center " "via the Internet at " " <a href="http://www.cisco.com/Support/ToolsAndResources/CaseOpen.html">http://www.cisco.com/Support/ToolsAndResources/CaseOpen.html</a> or contact " "your Cisco technical support representative. Be sure to provide the " "the information you have gathered and a 'show tech-support' to " "your support representative or attach it to your case in non-zipped " "plain text format .txt."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ATMSPA-4-VCSETUP	4-Warning	[chars]: VC setup command received on the LC for an existing VC VCD [dec]	A command to set up a VC has been received for a VC that has already been set up. The VC has already been configured by a previous setup VC command from the RP. A duplicate setup command may indicate that the RP did not receive a response from the LC for the previous setup command.	-	LOG_SID_NO_ACTION
ATMSPA-4-VCLEARDOWN	4-Warning	[chars]: VC tear down command received on the LC for a non-existing VC VCD [dec]	The VC does not exist on the LC. Most likely it has been torn down by a previous teardown command from RP. A duplicate teardown command may indicate that the RP did not receive a response from the LC for the previous teardown command.	-	LOG_SID_NO_ACTION
ATMSPA-4-VPSETUP	4-Warning	[chars]: VP setup command received on the LC for an existing VP VPI [dec]	A command to set up a VP has been received for a VP that has already been set up. The VP has already been configured by a previous setup VP command from the RP. A duplicate setup command may indicate that the RP did not receive a response from the LC for the previous setup command.	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ATMSPA4VPIEARDOWN	4-Warning	[chars]: VP tear down command received on the LC for a non-existing VP VPI [dec]	The VP does not exist on the LC. Most likely it has been torn down by a previous teardown command from RP. A duplicate teardown command may indicate that the RP did not receive a response from the LC for the previous teardown command.	-	LOG_SID_NO_ACTION
ATMSSCOP3SSCOPERR	3-Error	INIT SSCOP -nIntf : [chars] Event : [chars] State : [chars].	A software error occurred in the ATM SSCOP subsystem.	-	LOG_SID_SHCMD_ACTION
<del>ATMSSCOP4MACHMERR</del>	4-Warning	[chars]: [chars]. Please verify peer UNI version	The ATM peer equipment appears to be running an old version of ATM UNI. Communication with it is not possible.	-	"The ATM peer equipment may need attention. \Please verify its UNI version is at least 3.1 and upgrade if necessary."
ATMSSCOP5SSCOPINIT	5-Notice	- Intf : [chars] Event : [chars] State : [chars].	This message indicates a routine step of the ATM SSCOP initialization sequence.	-	LOG_SID_NO_ACTION
ATOM_HA3RECOVERY	3-Error	[chars]	AToM Manager High Availability recovery failed.	xconnect	LOG_STD_ACTION
ATOM_HA3RECOVERY	3-Error	[chars]	AToM Manager High Availability recovery failed.	xconnect	LOG_STD_ACTION
ATOM_HA3UPDATE	3-Error	[chars]	AToM Manager High Availability update failed.	xconnect	LOG_STD_ACTION
ATOM_HA3UPDATE	3-Error	[chars]	AToM Manager High Availability update failed.	xconnect	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ATOM_NP_CLIENT3INFO	3-Error	[chars]	ATOM NP Client failed to initialize properly which will result in improper operation of Any Transport Over MPLS feature	vsp-mid	"Try to reload the IOS image on the affected card or platform. If the error persists record the output from the following commands: <ul style="list-style-type: none"> <li>&lt;del&gt;Bul&lt;/del&gt;&lt;del&gt;et&lt;/del&gt;&lt;del&gt; &lt;/del&gt;&lt;del&gt;pa&lt;/del&gt;&lt;del&gt; &lt;/del&gt;&lt;del&gt;Bo&lt;/del&gt;&lt;del&gt;ld&lt;/del&gt;&lt;del&gt; &lt;/del&gt;show tech &lt;del&gt;No&lt;/del&gt;&lt;del&gt;Bo&lt;/del&gt;&lt;del&gt;ld&lt;/del&gt;&lt;del&gt;&gt;&lt;/del&gt;\n</li> <li>&lt;del&gt;Bul&lt;/del&gt;&lt;del&gt;et&lt;/del&gt;&lt;del&gt; &lt;/del&gt;&lt;del&gt;pa&lt;/del&gt;&lt;del&gt; &lt;/del&gt;&lt;del&gt;Bo&lt;/del&gt;&lt;del&gt;ld&lt;/del&gt;&lt;del&gt; &lt;/del&gt;show log &lt;del&gt;No&lt;/del&gt;&lt;del&gt;Bo&lt;/del&gt;&lt;del&gt;ld&lt;/del&gt;&lt;del&gt;&gt;&lt;/del&gt;\n</li> </ul> <del>Bo</del><del>dy</del><del></del><del>pa</del><del>></del>Provide this information to your technical support representative."
ATOM_NP_CLIENT3NOMEM	3-Error	[chars]	ATOM NP Client failed to initialize properly which will result in improper operation of Any Transport Over MPLS feature	vsp-mid	"This error may indicate that more memory must be installed on the affected card or platform in order to service all the features and related entities enabled via the configuration. Try to reload the IOS image on the affected card or platform. If the error persists record the output from the following commands: <ul style="list-style-type: none"> <li>&lt;del&gt;Bul&lt;/del&gt;&lt;del&gt;et&lt;/del&gt;&lt;del&gt; &lt;/del&gt;&lt;del&gt;pa&lt;/del&gt;&lt;del&gt; &lt;/del&gt;&lt;del&gt;Bo&lt;/del&gt;&lt;del&gt;ld&lt;/del&gt;&lt;del&gt; &lt;/del&gt;show tech &lt;del&gt;No&lt;/del&gt;&lt;del&gt;Bo&lt;/del&gt;&lt;del&gt;ld&lt;/del&gt;&lt;del&gt;&gt;&lt;/del&gt;\n</li> <li>&lt;del&gt;Bul&lt;/del&gt;&lt;del&gt;et&lt;/del&gt;&lt;del&gt; &lt;/del&gt;&lt;del&gt;pa&lt;/del&gt;&lt;del&gt; &lt;/del&gt;&lt;del&gt;Bo&lt;/del&gt;&lt;del&gt;ld&lt;/del&gt;&lt;del&gt; &lt;/del&gt;show log &lt;del&gt;No&lt;/del&gt;&lt;del&gt;Bo&lt;/del&gt;&lt;del&gt;ld&lt;/del&gt;&lt;del&gt;&gt;&lt;/del&gt;\n</li> </ul> <del>Bo</del><del>dy</del><del></del><del>pa</del><del>></del>Provide this information to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AICM_NP_CLENT4WARN	4-Warning	[chars] [dec] [chars]	AToM Entry could not be added because:\n 1. Entry passed is invalid.	vsp-mid	"Try to reload the IOS image on the affected card or platform. If the\n error persists record the output from the following commands:\n\n<Bullet><par><Bold>show tech <NoBold>\n\n<Bullet><par><Bold>show log <NoBold>\n\n<Body><par>Provide this information to your technical support\n\n representative."
AICM_SEG3CHUNKFREE	3-Error	Error freeing [chars]	ATOM Segment Handler error	mpls-mfi	LOG_STD_ACTION
AICM_SEG3CHUNKFREE	3-Error	Error freeing [chars]	ATOM Segment Handler error	mpls-mfi	LOG_STD_ACTION
AICM_SEG3ILLEGALUPD	3-Error	Illegal label [dec] update [chars]	AToM Segment Handler error	mpls-mfi	LOG_STD_ACTION
AICM_SEG3ILLEGALUPD	3-Error	Illegal label [dec] update [chars]	AToM Segment Handler error	mpls-mfi	LOG_STD_ACTION
ATOM_SEG3NOTSUPP	3-Error	Unsupported update [chars]	AToM Segment Handler error	mpls-mfi	LOG_STD_ACTION
ATOM_SEG3NOTSUPP	3-Error	Unsupported update [chars]	AToM Segment Handler error	mpls-mfi	LOG_STD_ACTION
ATOM_SEG3UNSUPPORTEDADDR	3-Error	Unsupported address type [dec]	AToM Segment Handler error	mpls-mfi	LOG_STD_ACTION
ATOM_SEG3UNSUPPORTEDADDR	3-Error	Unsupported address type [dec]	AToM Segment Handler error	mpls-mfi	LOG_STD_ACTION
AICM_TRANSCONSISNCY	3-Error	[chars]	An action attempted by the layer 2 transport over MPLS implementation encountered an unexpected condition	xconnect	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ATOM_TRANS3CONSIENCY	3-Error	[chars]	An action attempted by the layer 2 transport over MPLS implementation encountered an unexpected condition	xconnect	LOG_STD_ACTION
ATOM_TRANS3INIT_FAIL	3-Error	Failed to start AToM Manager	Failed to start and initialize AToM Manager.	xconnect	LOG_STD_ACTION
ATOM_TRANS3INIT_FAIL	3-Error	Failed to start AToM Manager	Failed to start and initialize AToM Manager.	xconnect	LOG_STD_ACTION
ATOM_TRANS3LAB_LOCAL	3-Error	Failed to allocate local label for peer:[node]vcid:%u	Failed to allocate local label for specified AToM VC.	xconnect	LOG_STD_ACTION
ATOM_TRANS3LAB_LOCAL	3-Error	Failed to allocate local label for peer:[node]vcid:%u	Failed to allocate local label for specified AToM VC.	xconnect	LOG_STD_ACTION
ATOM_TRANS3XDM_CREATE	3-Error	Failed to create XDM - rc %u	ATOM Manager was unable to create a Dispatch Manager instance for event handling.	xconnect	LOG_STD_ACTION
ATOM_TRANS3XDM_CREATE	3-Error	Failed to create XDM - rc %u	ATOM Manager was unable to create a Dispatch Manager instance for event handling.	xconnect	LOG_STD_ACTION
ATOM_TRANS4CONFIG	4-Warning	[chars]	AToM pseudowire uses undesirable configuration.	xconnect	LOG_STD_ACTION
ATOM_TRANS4CONFIG	4-Warning	[chars]	AToM pseudowire uses undesirable configuration.	xconnect	LOG_STD_ACTION
ATOM_TRANS4PW_MAXREACH	4-Warning	[chars]	Pseudowire maximum limit reached for the L2 subscriber author group	xconnect	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ADMRSWMAXREACH</del>	4-Warning	[chars]	Pseudowire maximum limit reached for the L2 subscriber author group	xconnect	LOG_STD_ACTION
<del>ADMRSWSDENABED</del>	5-Notice	[chars]	Disposition disabled for specified AToM VC.	xconnect	LOG_SID_NO_ACTION
<del>ADMRSWSDENABED</del>	5-Notice	[chars]	Disposition disabled for specified AToM VC.	xconnect	LOG_SID_NO_ACTION
<del>ADMRSWSDENABED</del>	5-Notice	[chars]	Disposition enabled for specified AToM VC.	xconnect	LOG_SID_NO_ACTION
<del>ADMRSWSDENABED</del>	5-Notice	[chars]	Disposition enabled for specified AToM VC.	xconnect	LOG_SID_NO_ACTION
<del>ADMRSWSDENABED</del>	5-Notice	[chars]	Imposition disabled specified AToM VC.	xconnect	LOG_SID_NO_ACTION
<del>ADMRSWSDENABED</del>	5-Notice	[chars]	Imposition disabled specified AToM VC.	xconnect	LOG_SID_NO_ACTION
<del>ADMRSWSDENABED</del>	5-Notice	[chars]	Imposition enabled for specified AToM VC.	xconnect	LOG_SID_NO_ACTION
<del>ADMRSWSDENABED</del>	5-Notice	[chars]	Imposition enabled for specified AToM VC.	xconnect	LOG_SID_NO_ACTION
<del>ADMRSWWMARKIM</del>	5-Notice	[chars]	Pseudowire max watermark limit reached for the L2 subscriber author group	xconnect	LOG_STD_ACTION
<del>ADMRSWWMARKIM</del>	5-Notice	[chars]	Pseudowire max watermark limit reached for the L2 subscriber author group	xconnect	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ATMRASCOMNOUID</del>	6-Information	[chars]	No router ID is available for AToM to use and this will impact pseudowire VCCV. Please enable \l2 router-id <address>\ or enable an LDP router ID if you wish VCCV to be operational.	xconnect	LOG_STD_ACTION
<del>ATMRASCOMNOUID</del>	6-Information	[chars]	No router ID is available for AToM to use and this will impact pseudowire VCCV. Please enable \l2 router-id <address>\ or enable an LDP router ID if you wish VCCV to be operational.	xconnect	LOG_STD_ACTION
<del>ATIN2MBOX_REG_FAIL</del>	2-Critical	return code [dec]	Registration of handler function for mailbox event failed mailbox event failed.	cpp-ucode	LOG_STD_ACTION
<del>ATINPROXYINITLCRG</del>	2-Critical	return code [dec]	Initialization of attention proxy failed due to error registering IPC handler function.	cpp-ucode	LOG_STD_ACTION
<del>ATINPROXYCALC_FAIL</del>	3-Error	[chars]	Allocation of an IPC packet buffer by the attention proxy failed.	cpp-ucode	LOG_STD_ACTION
<del>ATINPROXYCSNDFAIL</del>	3-Error	[chars]	Transmission of an IPC message by the attention proxy failed.	cpp-ucode	LOG_STD_ACTION
<del>ATINPROXYUNFNDMSG</del>	3-Error	subtype [dec]	Attention proxy received a message with an unknown subtype.	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ATTN3-SYNC_TIMEOUT	3-Error	msecs since last timeout [node]u missing packets [dec]	Attention sync command timed out.	cpp-ucode	LOG_STD_ACTION
AUDIT4-FILE_ROLLOVER	1-Alert	Audit File Roll-over: [dec]	Audit Circular File Rolled Over.	-	"Increase Audit filesize."
AUDIT3-FILE_RESIZE_ERR	3-Error	Cannot resize Audit file.	File system error while resizing the audit file.	-	"Check DISK filesystems on the router."
AUDIT3-FILE_WRITE_ERR	3-Error	Cannot write to Audit file.	File system error while writing to the audit file.	-	"Check DISK filesystems on the router."
AUDIT-3-NOFILE	3-Error	Cannot create Audit file.	File system error while creating the audit file.	-	"Check DISK filesystems on the router."
AUDIT-3-NOPROC	3-Error	Cannot create Audit process.	Insufficient internal resource available to create process.	-	"Check available memory on router."
AUDIT5-AUDIT_DISABLED	5-Notice	Auditing disabled	Audit was disabled on the router.	-	"Check if Audit was disabled by someone authorized to do so"
AUDIT5-AUDIT_ENABLED	5-Notice	Auditing enabled	Audit was enabled on the router.	-	"Audit logs can be verified if changes are valid"
AUDIT-5-FILESYSTEM	5-Notice	Filesystem changed. Hash: [chars]	FLASH/DISK Filesystems on the router changed.	-	"Check if it is a valid change."
AUDIT5-HARDWARE_CONFIG	5-Notice	Hardware changed. Hash: [chars]	Hardware on the router changed.	-	"Check if it is a valid change."
AUDIT-5-RUN_CONFIG	5-Notice	Running Configuration changed. Hash: [chars]	Running Config on the router changed.	-	"Check if it is a valid change in config."
AUDIT-5-RUN_VERSION	5-Notice	Running Version changed. Hash: [chars]	Running Version on the router changed.	-	"Check if it is a valid change."
AUDIT5-STARTUP_CONFIG	5-Notice	Startup Configuration changed. Hash: [chars]	Startup config on the router changed.	-	"Check if it is a valid change."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AUTHMGRCONGCRUPT	0-Emergency	Checksummed interface configuration corruption detected.	Interface configuration field was modified unexpectedly.	dot1x-ios	LOG_SID_NO_ACTION
AUTHMGRCONGCRUPT	0-Emergency	Checksummed interface configuration corruption detected.	Interface configuration field was modified unexpectedly.	dot1x-ios	LOG_SID_NO_ACTION
AUTHMGRUNREGID	4-Warning	Component ID [dec] not registered.	Attempt to log a message with unregistered ID.	dot1x-ios	LOG_SID_NO_ACTION
AUTHMGRUNREGID	4-Warning	Component ID [dec] not registered.	Attempt to log a message with unregistered ID.	dot1x-ios	LOG_SID_NO_ACTION
AUTHMGRUNAUTHMOVE	4-Warning	[chars] MAC address [enet] from [chars] to [chars]	Move while not authenticated on old IDB	dot1x-ios	LOG_SID_NO_ACTION
AUTHMGRUNAUTHMOVE	4-Warning	[chars] MAC address [enet] from [chars] to [chars]	Move while not authenticated on old IDB	dot1x-ios	LOG_SID_NO_ACTION
AUTHMGR-5-FAIL	5-Notice	Authorization failed or unapplied for client [enet] on Interface [chars]	Authorization was unsuccessful.	dot1x-ios	LOG_SID_NO_ACTION
AUTHMGR-5-FAIL	5-Notice	Authorization failed or unapplied for client [enet] on Interface [chars]	Authorization was unsuccessful.	dot1x-ios	LOG_SID_NO_ACTION
AUTHMGR5MACMOVE	5-Notice	MAC address [enet] moved from Interface [chars] to Interface [chars]	Client has moved to a new interface without logging off on the previous one.	dot1x-ios	LOG_SID_NO_ACTION
AUTHMGR5MACMOVE	5-Notice	MAC address [enet] moved from Interface [chars] to Interface [chars]	Client has moved to a new interface without logging off on the previous one.	dot1x-ios	LOG_SID_NO_ACTION
AUTHMGR5MACREPLACE	5-Notice	MAC address [enet] on Interface [chars] is replaced by MAC [enet]	A new client has triggered a violation causing an existing client to be replaced	dot1x-ios	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AUTHMGR-5-MACREPLACE	5-Notice	MAC address [enet] on Interface [chars] is replaced by MAC [enet]	A new client has triggered a violation causing an existing client to be replaced	dot1x-ios	LOG_SID_NO_ACTION
AUTHMGR-5-SECURITY_VIOLATION	5-Notice	Security violation on the interface [chars] new MAC address [enet] is seen.	A host on the specified interface is attempting to gain access into the network or is trying to authenticate in a host mode that does not support the number of hosts attached. This is treated as a security violation and the port has been error-disabled.	dot1x-ios	"Ensure that the port is configured to support the " "number of hosts attached. Enter the " " <del>cmdshutdn</del> command followed by " " <del>cmdbold</del> no shutdown<no<del>cmdbold> command to restart " "the port."
AUTHMGR-5-SECURITY_VIOLATION	5-Notice	Security violation on the interface [chars] new MAC address [enet] is seen.	A host on the specified interface is attempting to gain access into the network or is trying to authenticate in a host mode that does not support the number of hosts attached. This is treated as a security violation and the port has been error-disabled.	dot1x-ios	"Ensure that the port is configured to support the " "number of hosts attached. Enter the " " <del>cmdshutdn</del> command followed by " " <del>cmdbold</del> no shutdown<no<del>cmdbold> command to restart " "the port."
AUTHMGR-5-START	5-Notice	Starting '[chars]' for client [enet] on Interface [chars] AuditSessionID [chars]	Starting an authentication method	dot1x-ios	LOG_SID_NO_ACTION
AUTHMGR-5-START	5-Notice	Starting '[chars]' for client [enet] on Interface [chars] AuditSessionID [chars]	Starting an authentication method	dot1x-ios	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
AUTHMGR-5-SUCCESS	5-Notice	Authorization succeeded for client [enet] on Interface [chars]	Authorization was successful.	dot1x-ios	LOG_SID_NO_ACTION
AUTHMGR-5-SUCCESS	5-Notice	Authorization succeeded for client [enet] on Interface [chars]	Authorization was successful.	dot1x-ios	LOG_SID_NO_ACTION
AUTHMGR-5-VLANASSIGN	5-Notice	VLAN [dec] assigned to Interface [chars] AuditSessionID [chars]	VLAN assignment	dot1x-ios	LOG_SID_NO_ACTION
AUTHMGR-5-VLANASSIGN	5-Notice	VLAN [dec] assigned to Interface [chars] AuditSessionID [chars]	VLAN assignment	dot1x-ios	LOG_SID_NO_ACTION
AUTHMGR-7-FAILOVER	7-Debug	Failing over from '[chars]' for client [chars] on Interface [chars]	Failing over from the current authentication method	dot1x-ios	LOG_SID_NO_ACTION
AUTHMGR-7-FAILOVER	7-Debug	Failing over from '[chars]' for client [chars] on Interface [chars]	Failing over from the current authentication method	dot1x-ios	LOG_SID_NO_ACTION
AUTHMGR-7-NOMETHODS	7-Debug	Exhausted all authentication methods for client [chars] on Interface [chars]	All available authentication methods have been tried	dot1x-ios	LOG_SID_NO_ACTION
AUTHMGR-7-NOMETHODS	7-Debug	Exhausted all authentication methods for client [chars] on Interface [chars]	All available authentication methods have been tried	dot1x-ios	LOG_SID_NO_ACTION
AUTHMGR-7-STOPPING	7-Debug	Stopping '[chars]' for client [enet] on Interface [chars] AuditSessionID [chars]	Stopping the current authentication method	dot1x-ios	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AUTHMGR-7STOPPING	7-Debug	Stopping '[chars]' for client [enet] on Interface [chars] AuditSessionID [chars]	Stopping the current authentication method	dot1x-ios	LOG_STD_NO_ACTION
AUTOIPUPGRADER	3-Error	iosxe-binos-utils	Error reason:%s	"Some error occurred during auto upgrade"	"Retry upgrade"
AUTOIPUPGRADER	3-Error	iosxe-binos-utils	%s in slot[chars] failed to program. error:[chars]	"The hw-programmable was upgraded failed"	"Retry upgrade"
AUTOIPUPGRADER	5-Notice	iosxe-binos-utils	%s in slot[chars] are upgrading	-	-
AUTOIPUPGRADER	5-Notice	iosxe-binos-utils	%s in slot[chars] are successfully programmed.	"The hw-programmable was upgraded successfully"	"No action is required. This is informational message"
AUTOIPADDRESSPOOL	5-Notice	Free IP addresses are not available in the Auto-IP Server pool. Configure additional pools to get IP addresses for the requesting	The Auto-IP server is configured with pools of Auto-IP addresses. The IP addresses are assigned to the requesting ring ports. The Auto-IP address pool is exhausted and there are no more free addresses.	auto_ip_ring	"Configure additional address pools in the " " Auto-IP server by using the configuration command " " 'auto-ip-ring server' and the sub command " " 'ipv4-address-pool <auto-ip-base-address> <num of nodes in ring>"
AUTOIPADDRESSPOOL	5-Notice	IP address[node]31 is assigned to the ring port[chars] and	IP address is assigned to the ring port and the device is added to the ring successfully	auto_ip_ring	"Use the 'show auto-ip-ring' or 'show run' command" " on the device to view the configured IP address on the ring port."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>ATRINGUPADDRS</del>	5-Notice	IP addresses[node]31 [node]31 are assigned to the ring ports[chars] [chars]	IP addresses are assigned to the ring ports and the device is inserted into the ring successfully	auto_ip_ring	"Use the 'show auto-ip-ring' or 'show run' command" " on the device to view the configured IP addresses on the ring ports."
<del>ATRINGUPADDRS</del>	5-Notice	IP address[node]is assigned to the ring port[chars] successfully	IP address is assigned to the ring port successfully.	auto_ip_ring	"Use the 'sh ip interface' or 'show run' command" " to view the IP address of the ring port."
<del>ATRINGUPADDRS</del>	5-Notice	Neighbor device advertised the same configured Auto-IP address%i	Auto-IP Ring feature requires each device to configure a unique auto-ip address different from those on other devices. The local device is configured with an Auto-IP address. However the local device has also received the same Auto-IP address from a neighbor device. This may indicate that two devices are configured with the same Auto-IP address.	auto_ip_ring	"Use the 'show auto-ip-ring' or 'show run' command" " on both devices to view the configured Auto-IP address. If two edge" " devices show the same configured Auto-IP address then the duplicate" " configured Auto-IP address needs to be removed."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ATCPNGQALCPHRY</del>	5-Notice	Port[chars]: Received the same priority[dec] as the peer device	Auto-IP Ring feature requires two neighbor devices to exchange different Auto-IP priority for IP auto-negotiation to happen. If they advertise the same Auto-IP priority then the IP auto-negotiation will not happen. This may indicate that the ring ports of the two devices are either wrongly wired or there is a missing seed configuration.	auto_ip_ring	"Use the 'show auto-ip-ring' or 'show run' command" " on both devices to view the IP addresses of the ring ports and the" " advertised/received Auto-IP priorities. If the Auto-IP priority is both 2" " or both 0 it represents a faulty wire connection that can be fixed by" " switching the two ring ports on one of the devices as necessary." " If the Auto-IP priority is both 1 there are two possibilities based on" " the mode. In pre-config mode manually configure an IP address on one" " device to start the Auto-IP negotiation. In auto-config mode if the" " Auto-IP server is reachable then configure 'auto-ip-ring <ring-d> seed'" " on one ring port of the device."
<del>ATCPNCPHCPHPC</del>	5-Notice	port [chars]: lldp not enabled for interface please enable lldp on	Auto-ip depends on lldp to communicate with it's peer. So configure lldp before auto-ip configuration	auto_ip_ring	"Configure 'lldp run' in global config mode and" " check 'sh lldp neighbors'"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>ACED/CD/KO/S/SC/D</del>	3-Error	iosxe-p-smu	Failed to sync SMUs to standby. Make sure that SMU files are present on active and there is space enough to copy SMUs on standby.	"SMU sync failed. Most probable cause are the smu files may have been removed from the active switch using IOS/linux commands. Another reason is there is no space enough to copy the files to the standby"	"If the files are removed from the active bring it back to same location. Make sure there is enough space to copy the files on the standby"
<del>ACED/CD/KO/S/SC/D</del>	3-Error	iosxe-p-smu	Failed to correct the SMU mismatch between the running version on active and standby. Pls abort the smu installation using 'install abort'	"The system tried to recover from the mismatch	-
<del>ACED/CD/KO/S/SC/D</del>	5-Notice	iosxe-binos-utils	Active and standby are running different versions	-	-
<del>ACED/CD/KO/S/SC/D</del>	5-Notice	iosxe-binos-utils	Missmatch between running version of SMUs. Trying to recover. Standby will reload	"There is a mismatch on the running version. This will happen when the standby reloads after activate/deactivate and before commit. The machine will try to correct it. One reload is required for correcting the changes."	"No action required."
<del>ACED/CD/KO/S/SC/D</del>	5-Notice	iosxe-binos-utils	Installing SMUs on standby. Standby will reload	"No explanation required."	"No action required."
<del>ACED/CD/KO/S/SC/D</del>	5-Notice	iosxe-binos-utils	Initiating SMU autoupgrade for[chars] %d/R%d	"No explanation required."	"Boot the member with same software."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IOSXE-BINOS-UTILS</del>	3-Error	iosxe-binos-utils	Switch %d running incompatible bundled software has been added to the stack. Switch %d must be running compatible bundled software in order to join the stack.	"No explanation required."	"Boot the member with compatible software."
<del>IOSXE-BINOS-UTILS</del>	3-Error	iosxe-binos-utils	Failed to determine platform hardware type of switch %d	"Somehow the platform type could not determined."	"Add an action"
<del>IOSXE-BINOS-UTILS</del>	3-Error	iosxe-binos-utils	Switch %d has been added to the stack. Failed to initiate auto advise for switch %d because switch %d is not running installed or bundled software	"No explanation required."	"Boot the member with compatible software."
<del>IOSXE-BINOS-UTILS</del>	3-Error	iosxe-binos-utils	Auto upgrade is enabled by config. Please disable auto upgrade configuration to execute auto upgrade manually using exec CLI.	"TODO: add an explanation."	"TODO: add an action"
<del>IOSXE-BINOS-UTILS</del>	3-Error	iosxe-binos-utils	Failed to copy upgrade packages from[chars] %d to[chars] %d/R%d.	"TODO: add an explanation."	"TODO: add an action"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>ACPRBKOPRDEEMK</del>	3-Error	iosxe-binos-utils	%s %d/%d doesn't have enough free disk space to perform auto upgrade. A minimum of %d KB of free disk space is required Initiating the auto-delete of the old images on joining member/FRU. (Default is oldest image in configuration mode)	"There might be older files because of which there is not enough memory."	"Clean up disk space in the remote switch."
<del>ACPRBKOPRDEEN</del>	3-Error	iosxe-binos-utils	Failed to install the running software on switch %d	"TODO: add an explanation."	"No action required."
<del>ACPRBKOPRDEEM</del>	3-Error	iosxe-binos-utils	%s %d doesn't have enough free memory to perform auto upgrade. A minimum of %d KB of free memory is required	"There might be older files because of which there is not enough memory."	"Clean up disk space in the remote switch."
<del>ACPRBKOPRDEEM</del>	3-Error	iosxe-binos-utils	Failed to determine platform hardware type of[chars] %d/R%d	"Somehow the platform type could not determined."	"Add an action"
<del>ACPRBKOPRDEESE</del>	3-Error	iosxe-binos-utils	A previous provisioning action is pending reboot. Please reboot the[chars] %d.	"The user has run an operation that requires a reboot to take action."	"Reload the switch"
<del>ACPRBKOPRDEEMR</del>	3-Error	iosxe-binos-utils	Local chassis/RP number did not publish yet	"Somehow the chassis/FRU number is missing."	"Try to do it again."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>AUTOUPGRADE_KNO</del>	3-Error	iosxe-binos-utils	Switch %d has been added to the stack. Failed to initiate auto upgrade for switch %d because switch %d is not running installed or bundled software	"No explanation required."	"Boot the member with compatible software."
<del>AUTOUPGRADE_DNGR</del>	3-Error	iosxe-binos-utils	Skip auto-upgrade on chassis %d. The Active chassis's software version[chars] is lower than this chassis's minimum software version requirement[chars].	"Skip auto-downgrade scenario when the active switch does not fulfill the minimum software release version requirement. The active switch is running an image lower than the remote chassis's minimum software version."	" Upgrade the stack to a higher release version or remove the switch from the stack."
<del>AUTOUPGRADE_SPH</del>	3-Error	iosxe-binos-utils	The system is not running installed software. Auto upgrade for[chars] %d/R%d cannot be initiated	"A system with incompatible software has been detected in the stack. The auto upgrade functionality cannot be initiated because the stack/HA system is not running installed software. The user must manually upgrade the incompatible switch/FRU."	"Perform the one shot cli to convert system is install mode. Boot the system from the boot directory (bootflash/harddisk) using 'boot bootflash:packages.conf'"
<del>AUTOUPGRADE_CIN</del>	3-Error	iosxe-binos-utils	Couldn't find enough old install images on incompatible standby/member for deletion. Please manually free up %d MB space on incompatible standby/member and try again using 'install autoupgrade'.	"If there is no old images are found on joining standby/member's boot directory"	"User will have to manually delete old files using IOS delete command"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>ACURAE</del> <del>OSN</del> <del>CH</del>	3-Error	iosxe-binos-utils	No incompatible standby/member is found	-	-
<del>ACURAE</del> <del>OSN</del> <del>CH</del>	3-Error	iosxe-binos-utils	No software was found to upgrade[chars] %d/R%d	"Happens because of incompatible switches. For example	-
<del>ACURAE</del> <del>OSN</del> <del>CH</del>	3-Error	iosxe-binos-utils	Unable to confirm boot config on[chars] %d/R%d	-	-
<del>ACURAE</del> <del>OSN</del> <del>CH</del>	3-Error	iosxe-p-smu	SMU upgrade failed on switch %d. Auto upgrade of image will pass with out syncing SMUs on this switch. SMUs will be synced at boot time of the switch %d	"SMU sync failed because of some reason."	"No action required
<del>ACURAE</del> <del>OSN</del> <del>CH</del>	3-Error	iosxe-p-smu	Switch %d doesn't have enough free disk space to sync SMU. A minimum of %d KB of free disk space is required. Auto upgrade will pass with out syncing SMUs on this switch	"There might be older files because of which there is not enough memory."	"Clean up disk space in the remote switch."
<del>ACURAE</del> <del>OSN</del> <del>CH</del>	5-Notice	iosxe-binos-utils	switch %d running installed software has been added to the stack. Switch %d must be running bundled software in order to join the stack.	"No explanation required."	"Boot the member with compatible software."

<del>Facility-Severity-Mnemonic</del>	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ATUPRUCODESVCN</del>	5-Notice	iosxe-binos-utils	%s %d running bundled software has been added to the stack that is running installed software. The 'install autoupgrade' command can be used to convert[chars] %d to the installed running mode by installing its running software.	"No explanation required."	"No specific action required."
<del>ATUPRUCODESVCND</del>	5-Notice	iosxe-binos-utils	Found donor switch %d to auto upgrade switch %d.	"Just an init message."	"No action is required."
<del>ATUPRUCODESVCNH</del>	5-Notice	iosxe-binos-utils	Auto advise initiated for[chars] %d.	"A system with incompatible software has been detected in the stack. The stack will now determine whether or not software is available to be copied to the incompatible system"	-
<del>ATUPRUCODESVMG</del>	5-Notice	iosxe-binos-utils	%s %d/R%d with incompatible software has been added to the system/stack. all system/stack members were scanned and it has been determined that the 'install autoupgrade' command can be used to install compatible software on[chars] %d/R%d.	"TODO: add an explanation."	"TODO: add an action"
<del>ATUPRUCODESVCRH</del>	5-Notice	iosxe-binos-utils	Searching stack for software to upgrade[chars] %d/R%d.	"Just an init message."	"No action is required."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>ATUPRODCURDSASH</del>	5-Notice	iosxe-binos-utils	Upgrading[chars] %d with software from[chars] %d.	"Just an init message."	"No action is required."
<del>ATUPRODCURDCOV</del>	5-Notice	iosxe-binos-utils	Converting[chars] %d to installed mode by installing its running software.	"This needs to be converted as part of the auto upgrade."	"No action is required."
<del>ATUPRODCURDINH</del>	5-Notice	iosxe-binos-utils	Finished installing software on[chars] %d/R%d.	"TODO: add an explanation."	"TODO: add an action"
<del>ATUPRODCURDOND</del>	5-Notice	iosxe-binos-utils	Found donor[chars] %d to auto upgrade[chars] %d/R%d.	"Just an init message."	"No action is required."
<del>ATUPRODCURDNED</del>	5-Notice	iosxe-binos-utils	Auto upgrade initiated for[chars] %d/R%d.	"A system with incompatible software has been detected in the stack. The stack will first attempt to download software from a previously-configured location"	-
<del>ATUPRODCURDSHD</del>	5-Notice	iosxe-binos-utils	Finished installing the running software on[chars] %d.	"TODO: add an explanation."	"TODO: add an action"
<del>ATUPRODCURDRCD</del>	5-Notice	iosxe-binos-utils	Reloading[chars] %d to complete the auto upgrade.	"Part of autoupgrade"	"Just wait until the reload completes."
<del>ATUPRODCURDCNHD</del>	5-Notice	iosxe-binos-utils	Reloading[chars] %d to boot in installed mode.	"TODO: add an explanation."	"TODO: add an action"
<del>ATUPRODCURDSRKH</del>	5-Notice	iosxe-binos-utils	Searching stack for software to upgrade[chars] %d/R%d.	"Just an init message."	"No action is required."
<del>ATUPRODCURDSAT</del>	5-Notice	iosxe-binos-utils	Upgrading[chars] %d/R%d with software from[chars] %d.	"Just an init message."	"No action is required."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>AUTOUPGRADE</del>	5-Notice	iosxe-binos-utils	Auto upgrade start checking for incompatible switches.	"Part of autoupgrade"	"NO action is required."
<del>AUTOROLLSYNC</del>	5-Notice	iosxe-p-smu	SMU rollback sync failed on[chars]. Rollback operations may be affected	"SMU rollback sync failed on some reason. Most probable causes are SMUs are not present on the media or the media is full."	"Bring back the SMUs deleted and check whether there is enough space in remote member/SMUs"
AUTOCFG-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
AUTOCFG-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>AUTOQOSSET</del>	2-Critical	AutoQoS ISSU client failed to get buffer for message. Error: [dec] [chars]	The AutoQoS ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	autoqos	"show logging and show checkpoint client"
AUTOQOS_ISSU2-INIT	2-Critical	AutoQoS ISSU client initialization failed to [chars]. Error: [dec] [chars]	The AutoQoS ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	autoqos	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AUTOQoS_ISSU_NGO_AID	2-Critical	AutoQoS ISSU client failed to send negotiation message. Error: [dec] [chars]	The AutoQoS ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	autoqos	"show logging and show checkpoint client"
AUTOQoS_ISSU_NCO	2-Critical	AutoQoS ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The AutoQoS ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	autoqos	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
AUTOQoS_ISSU_NRSIV	2-Critical	AutoQoS ISSU client failed to register session information. Error: [dec] [chars]	The AutoQoS ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	autoqos	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
AUTOQoS_ISSU_NAIDSEN	3-Error	AutoQoS ISSU client does not have a valid registered session.	The AutoQoS ISSU client does not have a valid registered session.	autoqos	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>AUTOQoS_ISSU_MSG_NOTCK</del>	3-Error	AutoQoS ISSU client 'Message Type [dec]' is not compatible	The AutoQoS ISSU client received an incompatible message from the peer device. The message cannot be processed.	autoqos	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>AUTOQoS_ISSU_MSG_SIZE</del>	3-Error	AutoQoS ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The AutoQoS ISSU client failed to calculate the MTU for the specified message. The AutoQoS ISSU client is not able to send the message to the standby device.	autoqos	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>AUTOQoS_ISSU_UNREGFR</del>	3-Error	AutoQoS ISSU client failed to unregister session information. Error: [dec] [chars]	The AutoQoS ISSU client failed to unregister session information.	autoqos	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>AUTOQoS_ISSU_TRANSFORMAL</del>	3-Error	AutoQoS ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The AutoQoS ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the AutoQoS state between the active device and the standby device is not identical.	autoqos	"show issu session <client_id> and " "show issu negotiated version <session_id>"
AUTORP-2-RADIXINIT	2-Critical	Error initializing the Auto-RP radix tree	An internal software error occurred.	-	LOGSIDSH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AUTORP-2-RADIXINT	2-Critical	Error initializing the Auto-RP radix tree	An internal software error occurred.	-	LOG_SIDSH_TECH_ACTION
AUTORP-4-OVERLAP	4-Warning	AutoRP [chars] packet group [node]with mask [node]removed because of multicast boundary for [node]with mask %i	The multicast boundary has a longer network mask than the AutoRP encoded group.	-	"Use positive permit clauses in the AutoRP Access " "Control List"
AUTORP-4-OVERLAP	4-Warning	AutoRP [chars] packet group [node]with mask [node]removed because of multicast boundary for [node]with mask %i	The multicast boundary has a longer network mask than the AutoRP encoded group.	-	"Use positive permit clauses in the AutoRP Access " "Control List"
AUTORP-4-PAK_ERR	4-Warning	AutoRP [chars] packet is received on interface [chars] with Source address=[node] Destination address=[node]TTL=[node]IP length=[node]Datagram size/UDP length=%u	The AutoRP packet was received with wrong packet length. The packet has been dropped as it may be a malformed packet.	-	LOG_SID_NO_ACTION
AUTORP-4-PAK_ERR	4-Warning	AutoRP [chars] packet is received on interface [chars] with Source address=[node] Destination address=[node]TTL=[node]IP length=[node]Datagram size/UDP length=%u	The AutoRP packet was received with wrong packet length. The packet has been dropped as it may be a malformed packet.	-	LOG_SID_NO_ACTION
AUTORP-4-PRM_DEL	4-Warning	Error expiring semi-static RP-mapping entry [node][dec] RP:%i	An internal software error occurred.	-	LOG_SIDSH_TECH_ACTION
AUTORP-4-PRM_DEL	4-Warning	Error expiring semi-static RP-mapping entry [node][dec] RP:%i	An internal software error occurred.	-	LOG_SIDSH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AUTORP4RADIXINSERT	4-Warning	Error inserting a new entry into the RP-mapping radix tree	An internal software error occurred.	-	LOG_SID_SH_TECH_ACTION
AUTORP4RADIXINSERT	4-Warning	Error inserting a new entry into the RP-mapping radix tree	An internal software error occurred.	-	LOG_SID_SH_TECH_ACTION
AUTORP5CRP_REMOVED	5-Notice	C-RP [node]on interface [chars] has been removed	This is performed either because PIM is disabled on the interface or \n the interface card has been removed	-	LOG_SID_NO_ACTION
AUTORP5CRP_REMOVED	5-Notice	C-RP [node]on interface [chars] has been removed	This is performed either because PIM is disabled on the interface or \n the interface card has been removed	-	LOG_SID_NO_ACTION
AUTORP5-MAPPING	5-Notice	RP for [node][dec] is now %i	A new RP has been elected for the subject group prefix	-	LOG_SID_NO_ACTION
AUTORP5-MAPPING	5-Notice	RP for [node][dec] is now %i	A new RP has been elected for the subject group prefix	-	LOG_SID_NO_ACTION
<del>AUTORP5-MAPPING</del> IDB_DEL	6-Information	AutoRP RP-MAPPING IDB [chars] is deleted	The configured rp-mapping idb has been deleted.	-	LOG_SID_NO_ACTION
<del>AUTORP5-MAPPING</del> IDB_DEL	6-Information	AutoRP RP-MAPPING IDB [chars] is deleted	The configured rp-mapping idb has been deleted.	-	LOG_SID_NO_ACTION
AUTOSEC3CONSAVE_FAIL	3-Error	Applying AutoSecure config to running-conf failed with error [dec]	Configuration of the AutoSecure session could not be applied to the running configuration	securitykeyword:autosec	LOG_STD_ACTION
AUTOSEC5-ENABLED	5-Notice	AutoSecure is configured on the device	Security configuration of the device is done using AutoSecure.	none	"Notification message only. No action required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ACMPLVDEESACMBI</del>	5-Notice	RRMVGHLAGTRACBACK	-	-	-
<del>ACMPLVDEESACMBI</del>	5-Notice	RRMVGHLAGTRACBACK	-	-	-
<del>AUCURADEANAE</del>	3-Error	Embedded signature verification failed.	The downloaded image is corrupted. This could be because of an invalid image name or a communication error.	os	"Make sure that the image name specified refers to" " a valid IOS image and retry \"upgrade automatic\"." " If the problem" " persists please check Bug Toolkit on the" " Cisco web-site for previously filed bugs and" " upgrade code if necessary. If you do not find" " a previously-filed bug collect the outputs of" " \"show logging\" \"show version\" and" " \"show running-config\" and open a TAC case with" " the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>AUCURADEB</del> <del>DN</del> <del>NA</del> <del>RE</del>	3-Error	Embedded signature verification failed.	The downloaded image is corrupted. This could be because of an invalid image name or a communication error.	os	"Make sure that the image name specified refers to" " a valid IOS image and retry \"upgrade automatic\"." " If the problem" " persists please check Bug Toolkit on the" " Cisco web-site for previously filed bugs and" " upgrade code if necessary. If you do not find" " a previously-filed bug collect the outputs of" " \"show logging\" \"show version\" and" " \"show running-config\" and open a TAC case with" " the gathered information."
<del>AUCURADEB</del> <del>DN</del> <del>NA</del> <del>RE</del> <del>HA</del> <del>L</del>	3-Error	Auto Upgrade Manager failed to delete the previous image [chars]	Auto Upgrade Manager attempted to delete the previous image to make enough free space for the new image in the filesystem. However an error occurred while deleting the previous image	os	"Please check Bug Toolkit on the Cisco web-site" " for previously filed bugs and upgrade code if" " necessary. If you do not find a previously-filed" " bug collect the console output as well as outputs" " of \"show version\""" " \"show logging\" and \"show running-config\" and" " open a TAC case for informaion on the supported" " images"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AUTOCRADEDEIHAL	3-Error	Auto Upgrade Manager failed to delete the previous image [chars]	Auto Upgrade Manager attempted to delete the previous image to make enough free space for the new image in the filesystem. However an error occurred while deleting the previous image	os	"Please check Bug Toolkit on the Cisco web-site" " for previously filed bugs and upgrade code if" " necessary. If you do not find a previously-filed" " bug collect the console output as well as outputs" " of \"show version\" \" \" \"show logging\" and \"show running-config\" and" " open a TAC case for informaion on the supported" " images"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AUTOUPGRADE_DOWNLOAD	3-Error	Auto Upgrade Manager is unable to download new image from [chars]	Possible reasons of this failure include: 1. temporary communication problem 2. server unavailable 3. incorrect username/password 4. the image may not exist in the location 5. there is not enough space in filesystem	os	"Please ensure that there is enough free space in " " a filesystem and image path username password" " information are correct. Then retry the download" " using \"upgrade automatic getversion\"." " If the new image still fails to download" " please check Bug Toolkit on the Cisco web-site" " for previously filed bugs and upgrade code if" " necessary. If you do not find a previously-filed" " bug collect the console output as well as outputs" " of \"show version\""" " \"show logging\" and \"show running-config\" and" " open a TAC case for informaion on the supported" " images"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AUTOUPGRADE	3-Error	Auto Upgrade Manager is unable to download new image from [chars]	Possible reasons of this failure include: 1. temporary communication problem 2. server unavailable 3. incorrect username/password 4. the image may not exist in the location 5. there is not enough space in filesystem	os	"Please ensure that there is enough free space in " " a filesystem and image path username password" " information are correct. Then retry the download" " using \"upgrade automatic getversion\"." " If the new image still fails to download" " please check Bug Toolkit on the Cisco web-site" " for previously filed bugs and upgrade code if" " necessary. If you do not find a previously-filed" " bug collect the console output as well as outputs" " of \"show version\""" " \"show logging\" and \"show running-config\" and" " open a TAC case for informaion on the supported" " images"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ATDRP</del> DOWNLOAD	3-Error	Download hash verification fail	The image downloaded from cisco.com is corrupted. This usually points to a communication error.	os	"Retry \"upgrade automatic\". If the problem" " persists please check Bug Toolkit on the" " Cisco web-site for previously filed bugs and" " upgrade code if necessary. If you do not find" " a previously-filed bug collect the outputs of" " \"show logging\" \"show version\" and" " \"show running-config\" and open a TAC case with" " the gathered information."
<del>ATDRP</del> DOWNLOAD	3-Error	Download hash verification fail	The image downloaded from cisco.com is corrupted. This usually points to a communication error.	os	"Retry \"upgrade automatic\". If the problem" " persists please check Bug Toolkit on the" " Cisco web-site for previously filed bugs and" " upgrade code if necessary. If you do not find" " a previously-filed bug collect the outputs of" " \"show logging\" \"show version\" and" " \"show running-config\" and open a TAC case with" " the gathered information."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>AUTOUPGRADE</del> EXCEPTION	3-Error	Exception occurred: [chars]. Error retrieving image info from cisco.com.	Auto upgrade manager could not obtain information about the new image from cisco.com.	os	"Please check Bug Toolkit on the Cisco web-site" " for previously filed bugs and upgrade code if" " necessary. If you do not find a previously-filed" " bug collect the console output as well as outputs" " of \show version\ "" " \show logging\ and \show running-config\ and" " open a TAC case for informaion on the supported" " images"
<del>AUTOUPGRADE</del> EXCEPTION	3-Error	Exception occurred: [chars]. Error retrieving image info from cisco.com.	Auto upgrade manager could not obtain information about the new image from cisco.com.	os	"Please check Bug Toolkit on the Cisco web-site" " for previously filed bugs and upgrade code if" " necessary. If you do not find a previously-filed" " bug collect the console output as well as outputs" " of \show version\ "" " \show logging\ and \show running-config\ and" " open a TAC case for informaion on the supported" " images"
<del>AUTOUPGRADE</del> WARNING	3-Error	Upgraded image does not recognize [dec] lines of startup configuration	Either the saved startup configuration has invalid lines or the upgraded image is incompatible with the previous image	os	"Change/Delete the invalid lines from startup" " configuration or revert back to the previous" " image"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>AUCURADENADONG</del>	3-Error	Upgraded image does not recognize [dec] lines of startup configuration	Either the saved startup configuration has invalid lines or the upgraded image is incompatible with the previous image	os	"Change/Delete the invalid lines from startup" " configuration or revert back to the previous" " image"
<del>AUCURADENODSPACE</del>	3-Error	Not enough free space in any filesystem. need [dec] bytes.	Auto Upgrade Manager won't be able to download the specified image because there is not enough free space in any filesystem.	os	"Use Auto Upgrade Manager disk cleanup utility" " to cleanup a filesystem. Use \"disk-management\" \" confirm\" or \"disk-management auto\" options with \" \"upgrade automatic getversion\" to use the\" \" disk cleanup utility. Otherwise you may cleanup\" \" a filesystem manually."
<del>AUCURADENODSPACE</del>	3-Error	Not enough free space in any filesystem. need [dec] bytes.	Auto Upgrade Manager won't be able to download the specified image because there is not enough free space in any filesystem.	os	"Use Auto Upgrade Manager disk cleanup utility" " to cleanup a filesystem. Use \"disk-management\" \" confirm\" or \"disk-management auto\" options with \" \"upgrade automatic getversion\" to use the\" \" disk cleanup utility. Otherwise you may cleanup\" \" a filesystem manually."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>AUTOUPGRADE</del> AUCRABDOWNOAS	3-Error	Auto Upgrade Manager cannot download new image in the filesystem where current image is running	Not enough free space in any filesystem for the new image	os	"Use Auto Upgrade Manager disk cleanup utility" " to cleanup a filesystem. Use \"disk-management\" \" confirm\" or \"disk-management auto\" options with \" \"upgrade automatic getversion\" to use the\" \" disk cleanup utility. Otherwise you may cleanup\" \" a filesystem manually."
<del>AUTOUPGRADE</del> AUCRABDOWNOAS	3-Error	Auto Upgrade Manager cannot download new image in the filesystem where current image is running	Not enough free space in any filesystem for the new image	os	"Use Auto Upgrade Manager disk cleanup utility" " to cleanup a filesystem. Use \"disk-management\" \" confirm\" or \"disk-management auto\" options with \" \"upgrade automatic getversion\" to use the\" \" disk cleanup utility. Otherwise you may cleanup\" \" a filesystem manually."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AUIOUFGRADE3NULLQ	3-Error	NULL queue pointer	A software error has occurred.	os	"Please check Bug Toolkit on the Cisco web-site" " for previously filed bugs and upgrade code if" " necessary. If you do not find a previously-filed" " bug collect the console output as well as outputs" " of \"show version\""" " \"show logging\" and \"show running-config\" and" " open a TAC case for informaion on the supported" " images"
AUIOUFGRADE3NULLQ	3-Error	NULL queue pointer	A software error has occurred.	os	"Please check Bug Toolkit on the Cisco web-site" " for previously filed bugs and upgrade code if" " necessary. If you do not find a previously-filed" " bug collect the console output as well as outputs" " of \"show version\""" " \"show logging\" and \"show running-config\" and" " open a TAC case for informaion on the supported" " images"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>AUI</del> CRADENSAHAL	3-Error	Failed to save in nvram	Auto upgrade manager encountered a problem while attempting to save information to NVRAM.	os	"Please check Bug Toolkit on the Cisco web-site" " for previously filed bugs and upgrade code if" " necessary. If you do not find a previously-filed" " bug collect the outputs of \"show version\" \" \" \"show logging\" and \"show running-config\" and" " open a TAC case for informaion on the supported" " images"
<del>AUI</del> CRADENSAHAL	3-Error	Failed to save in nvram	Auto upgrade manager encountered a problem while attempting to save information to NVRAM.	os	"Please check Bug Toolkit on the Cisco web-site" " for previously filed bugs and upgrade code if" " necessary. If you do not find a previously-filed" " bug collect the outputs of \"show version\" \" \" \"show logging\" and \"show running-config\" and" " open a TAC case for informaion on the supported" " images"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>AUTOUPGRADE</del> AUCRADEHLOWAIED	3-Error	Failed to reload the device with the new image.	Auto upgrade manager could not reload the device with the new image. A common reason is insufficient RAM space.	os	"Please check Bug Toolkit on the Cisco web-site" " for previously filed bugs and upgrade code if" " necessary. If you do not find a previously-filed" " bug collect the console output as well as outputs" " of \"show version\""" " \"show logging\" and \"show running-config\" and" " open a TAC case for informaion on the supported" " images"
<del>AUTOUPGRADE</del> AUCRADEHLOWAIED	3-Error	Failed to reload the device with the new image.	Auto upgrade manager could not reload the device with the new image. A common reason is insufficient RAM space.	os	"Please check Bug Toolkit on the Cisco web-site" " for previously filed bugs and upgrade code if" " necessary. If you do not find a previously-filed" " bug collect the console output as well as outputs" " of \"show version\""" " \"show logging\" and \"show running-config\" and" " open a TAC case for informaion on the supported" " images"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
AUTOUPGRADE/3/ERR	3-Error	Auto Upgrade Manager failed to squeeze the filesystem [chars]	A software error has occurred	os	"Please check Bug Toolkit on the Cisco web-site" " for previously filed bugs and upgrade code if" " necessary. If you do not find a previously-filed" " bug collect the console output as well as outputs" " of \"show version\""" " \"show logging\" and \"show running-config\" and" " open a TAC case for informaion on the supported" " images"
AUTOUPGRADE/3/ERR	3-Error	Auto Upgrade Manager failed to squeeze the filesystem [chars]	A software error has occurred	os	"Please check Bug Toolkit on the Cisco web-site" " for previously filed bugs and upgrade code if" " necessary. If you do not find a previously-filed" " bug collect the console output as well as outputs" " of \"show version\""" " \"show logging\" and \"show running-config\" and" " open a TAC case for informaion on the supported" " images"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>AUI</del> URADESARUFGAL	3-Error	Failed to create the auto upgrade startup process.	A software error has occurred.	os	"Please check Bug Toolkit on the Cisco web-site" " for previously filed bugs and upgrade code if" " necessary. If you do not find a previously-filed" " bug collect the console output as well as outputs" " of \"show version\""" " \"show logging\" and \"show running-config\" and" " open a TAC case for informaion on the supported" " images"
<del>AUI</del> URADESARUFGAL	3-Error	Failed to create the auto upgrade startup process.	A software error has occurred.	os	"Please check Bug Toolkit on the Cisco web-site" " for previously filed bugs and upgrade code if" " necessary. If you do not find a previously-filed" " bug collect the console output as well as outputs" " of \"show version\""" " \"show logging\" and \"show running-config\" and" " open a TAC case for informaion on the supported" " images"
<del>AUI</del> URADESARUFGAL	6-Information	Auto Upgrade of the device completed. From: [chars] To: [chars].	The device has been upgraded with a new IOS image by IOS Auto Upgrade Manager	os	"This is an informational message only." " These messages may be disabled by changing the" " logging level."

<del>Facility-Severity-Mnemonic</del>	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>AUTOUPGRADECOMPLETE</del>	6-Information	Auto Upgrade of the device completed. From: [chars] To: [chars].	The device has been upgraded with a new IOS image by IOS Auto Upgrade Manager	os	"This is an informational message only." " These messages may be disabled by changing the" " logging level."
<del>AUTOUPGRADEDELETED</del>	6-Information	Auto Upgrade Manager deleted the previous image [chars]	The previous image has been deleted so that there is enough free space to download the new image.	os	"This is an informational message only." " These messages may be disabled by changing the" " logging level."
<del>AUTOUPGRADEDELETED</del>	6-Information	Auto Upgrade Manager deleted the previous image [chars]	The previous image has been deleted so that there is enough free space to download the new image.	os	"This is an informational message only." " These messages may be disabled by changing the" " logging level."
<del>AUTOUPGRADEDOWNLOADED</del>	6-Information	Successfully reloaded the new image: \[chars].	The device has successfully been reloaded with the image downloaded previously by IOS Auto Upgrade Manager.	os	"This is an informational message only." " These messages may be disabled by changing the" " logging level."
<del>AUTOUPGRADEDOWNLOADED</del>	6-Information	Successfully reloaded the new image: \[chars].	The device has successfully been reloaded with the image downloaded previously by IOS Auto Upgrade Manager.	os	"This is an informational message only." " These messages may be disabled by changing the" " logging level."
<del>ACMSEBVCACINCLER</del>	3-Error	iosxe-binos-utils	CLI validation error:[chars]	General AVC FNF CLI validation error	LOG_STD_ACTION
<del>BACKUPINTERFACEPREMPT</del>	5-Notice	Preempting interface [chars] in backup pair [chars] [chars] preemption mode is [chars]	Preempting the current forwarding interface in the backup interface pair.	backup_int	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BCKINBAVENONTRK	5-Notice	Warning: Flexlink VLB is not allowed on non-trunk ports. Please configure [chars] to be a trunk port.	Flexlink VLB detects a non-trunk port.	backup_int	LOG_SID_NO_ACTION
BCKMCOMNDPENS	2-Critical	UEA OCE backwalk aborted - too many dependents	Too many dependent objects > 200k were encountered during backwalk from an OCE chain object	rsp3-layer3	"Please reduce the number of IGP routes below " "200k."
BAP-4-NOSTATE	4-Warning	[chars] [chars] [chars] in illegal state [dec]	An internal software error occurred.	-	"Call your technical support representative and report the error\n\n message the system version and the router configuration. Use the\n\n <bold> show version <nobold> command to obtain the software version."
BAP-4-NOSTATE	4-Warning	[chars] [chars] [chars] in illegal state [dec]	An internal software error occurred.	-	"Call your technical support representative and report the error\n\n message the system version and the router configuration. Use the\n\n <bold> show version <nobold> command to obtain the software version."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BAP-4-WAVL	4-Warning	Failed to initialize AVL tree BAP not started	BAP will not be operational and will not be negotiated.	-	"Call your technical support representative and report the error\n\n message the system version and the router configuration. Use the\n\n <bold> show version <nobold> command to obtain the software version."
BAP-4-WAVL	4-Warning	Failed to initialize AVL tree BAP not started	BAP will not be operational and will not be negotiated.	-	"Call your technical support representative and report the error\n\n message the system version and the router configuration. Use the\n\n <bold> show version <nobold> command to obtain the software version."
<del>BCHERRMSGSEXTWDC</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>BCHERRMSGSEXTWDC</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>RMBEBCMBDCRAEAL</del>	3-Error	BFD endpoint create failed for Id [dec] on asic [dec]	BCM BFD endpoint create failed	rsp3-bfd	"Please collect nile mgr and uea mgr pman logs" "from shell"
<del>RMBEBCMBDCRAEAL</del>	3-Error	BFD endpoint create failed for Id [dec] on asic [dec]	BCM BFD endpoint create failed	rsp3-bfd	"Please collect nile mgr and uea mgr pman logs" "from shell"
<del>RMBEBCMBDCHEEAL</del>	3-Error	BFD endpoint create failed for Id [dec] on asic [dec]	BCM BFD endpoint delete failed	rsp3-bfd	"Please collect nile mgr and uea mgr pman logs" "from shell"
<del>RMBEBCMBDCHEEAL</del>	3-Error	BFD endpoint create failed for Id [dec] on asic [dec]	BCM BFD endpoint delete failed	rsp3-bfd	"Please collect nile mgr and uea mgr pman logs" "from shell"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>BCM</del> <del>BCM</del> <del>KBP</del> <del>INIT</del> <del>AP</del> <del>AL</del>	3-Error	KBP Application INIT Failure on asic [dec]	KBP appl initialization failed during the BCM init	dominica-infra	"Please collect uea mgr pman logs from shell"
<del>BCM</del> <del>BCM</del> <del>KBP</del> <del>INIT</del> <del>AP</del> <del>AL</del>	3-Error	KBP Application INIT Failure on asic [dec]	KBP appl initialization failed during the BCM init	rsp3-infra	"Please collect nile mgr and uea mgr pman logs" "from shell"
<del>BCM</del> <del>BCM</del> <del>KBP</del> <del>INIT</del> <del>IK</del> <del>NAL</del>	3-Error	KBP ILKN INIT Failure on asic [dec]	KBP ilkn initialization failed during the BCM init	dominica-infra	"Please collect uea mgr pman logs from shell"
<del>BCM</del> <del>BCM</del> <del>KBP</del> <del>INIT</del> <del>IK</del> <del>NAL</del>	3-Error	KBP ILKN INIT Failure on asic [dec]	KBP ilkn initialization failed during the BCM init	rsp3-infra	"Please collect nile mgr and uea mgr pman logs" "from shell"
<del>BCM</del> <del>RSP</del> <del>BCM</del> <del>SNOOP</del> <del>CREATE</del> <del>FAIL</del>	2-Critical	Snoop command create failed for cpuq [dec]	BCM Snoop command create failed	rsp3-traps	"Please collect nile mgr and uea mgr pman logs" "from shell"
<del>BCM</del> <del>RSP</del> <del>BCM</del> <del>SNOOP</del> <del>CREATE</del> <del>FAIL</del>	2-Critical	Snoop command create failed for cpuq [dec]	BCM Snoop command create failed	rsp3-traps	"Please collect nile mgr and uea mgr pman logs" "from shell"
BCM4COR_ECC_HIGH	4-Warning	High correctable ECC error rate detected\n L2 cache data errors = [dec]\n L2 cache tag errors = [dec]\n Memory data errors = [dec]\n	A high rate of soft-parity errors from the memory has been detected. Normal system operation may be affected.	-	"If there is a regular or sustained occurrence " "of this message reseal the memory or replace " "the memory with memory that is known to " "be operational. <u>LOG_SID_RECUR_ACTION</u>
BCM4COR_ECC_HIGH	4-Warning	High correctable ECC error rate detected\n L2 cache data errors = [dec]\n L2 cache tag errors = [dec]\n Memory data errors = [dec]\n	A high rate of soft-parity errors from the memory has been detected. Normal system operation may be affected.	-	"If there is a regular or sustained occurrence " "of this message reseal the memory or replace " "the memory with memory that is known to " "be operational. <u>LOG_SID_RECUR_ACTION</u>



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
BCM4ECC_L2CACHE	4-Warning	Corrected ECC from L2 cache	A soft-parity error from the Layer 2 cache has been detected and corrected. Normal system operation should continue.	-	"If there is a regular or sustained occurrence of this message copy" "the error message exactly as it appears and report it to" "technical support representative."
BCM4ECC_L2CACHE	4-Warning	Corrected ECC from L2 cache	A soft-parity error from the Layer 2 cache has been detected and corrected. Normal system operation should continue.	-	"If there is a regular or sustained occurrence of this message copy" "the error message exactly as it appears and report it to" "technical support representative."
BCM4ECC_MEMORY	4-Warning	Corrected ECC from memory	A soft-parity error from the memory has been detected and corrected. Normal system operation should continue.	-	"If there is a regular or sustained occurrence of this message copy" "the error message exactly as it appears and report it to" "technical support representative."
BCM4ECC_MEMORY	4-Warning	Corrected ECC from memory	A soft-parity error from the memory has been detected and corrected. Normal system operation should continue.	-	"If there is a regular or sustained occurrence of this message copy" "the error message exactly as it appears and report it to" "technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BCM3142-AEMAP_FLUSH_INT	3-Error	Mg[node]Rcvr [node]lch [node] LATE_MAP_FLUSH interrupt received from BCM3142 reg_mask_lo [hec] reg_mask_hi [hec] reg_count [node]resend_mask_lo [hec] resend_mask_hi [hec] resend_count %u	A receiver LATE_MAP_FLUSH interrupt was received from the BCM3142.	cmts-infra	"Shut and not shut the upstream"
BCM3220-1-INITFAIL	1-Alert	msgtxt_initfail	The hardware failed to initialize correctly.	-	"Repair or replace the controller."
BCM3220-3-BADUNIT	3-Error	msgtxt_badunit	An internal software error occurred.	-	"If either message recurs call your technical support representative\n\ for assistance."
BCM3220-3-OWNERR	3-Error	msgtxt_ownerror	An Ethernet interface is malfunctioning or an internal software error\n\ occurred.	-	"Repair or replace the controller."
BCM3220-3-TXERR	3-Error	CM trasmission error occurred.	-	-	-
BCM5396-BAD_MODEL_ID	3-Error	Unexpected model id: 0x[hex]	The model ID of the part was not correct	ubr10k-sw	"Investigate possible error with Raven or GigE switch."
BCM5396-MDIO_TIMEOUT	3-Error	MDIO Timeout [chars]	No response was received from the GigE switch MDIO interface	ubr10k-sw	"Investigate possible Raven MDIO interface"
BCM5396-MODEL_ID	3-Error	Failed to read model id	Failed to read a register via MDIO.	ubr10k-sw	"Investigate possible error with Raven or GigE switch."
BCM5396-READ_TIMEOUT	3-Error	Timeout waiting for read pg [dec] addr [dec] len [dec]	Failed to read a page register via MDIO.	ubr10k-sw	"Investigate possible error with Raven or GigE switch."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>BCMB36</del> BCMB36WRITE_TIMEOUT	3-Error	Timeout waiting for write pg [dec] addr [dec] len [dec]	Failed to read a page register via MDIO.	ubr10k-sw	"Investigate possible error with Raven or GigE switch."
<del>BRDPATCH</del> BRDPATCHACTIVATE_FAIL	3-Error	iosxe-binos-utils	Failed to activate patch. The patch name is[chars] and the reason is:[chars]	During system reload	-
<del>BRRCGRHRENESUBBD</del> BRRCGRHRENESUBBD	3-Error	iosxe-binos-utils	Stubbed[chars] is referenced	Stubbed function/variable is referenced.	File a DDTS and attach the backtrace
<del>BCRPGC3</del> BCRPGC3USWAP_ERROR	3-Error	iosxe-binos-utils	uswap error - no space on[chars]	Path for USWAP files.	If this error is seen
<del>BD_VF5</del> BD_VF5CREATE_DELETE	5-Notice	Interface [chars] is [chars]	BD-VIF interface create/delete events.	l2-bdomain	LOG_SID_NO_ACTION
<del>BD_VF5</del> BD_VF5CREATE_DELETE	5-Notice	Interface [chars] is [chars]	BD-VIF interface create/delete events.	l2-bdomain	LOG_SID_NO_ACTION
<del>BDI_IF5</del> BDI_IF5CREATE_DELETE	5-Notice	Interface [chars] is [chars]	BDI interface create/delete events.	l2-bdomain	LOG_SID_NO_ACTION
<del>BDI_IF5</del> BDI_IF5CREATE_DELETE	5-Notice	Interface [chars] is [chars]	BDI interface create/delete events.	l2-bdomain	LOG_SID_NO_ACTION
<del>BDMANSWENCAP</del> BDMANSWENCAPCSUPP	3-Error	BDI Encap is not supported in IOL use EFP to pop vlan tags	-	-	-
<del>BDMANSWENCAP</del> BDMANSWENCAPCSUPP	3-Error	BDI Encap is not supported in IOL use EFP to pop vlan tags	-	-	-
<del>BDMANSWENFR</del> BDMANSWENFRERR	3-Error	[chars]	The bridge-domain receives wrong info from L2FIB	l2fib	"If the error persists the router may need to " "be reloaded"
<del>BDMANSWENFR</del> BDMANSWENFRERR	3-Error	[chars]	The bridge-domain receives wrong info from L2FIB	l2fib	"If the error persists the router may need to " "be reloaded"
<del>BDMANSWENFR</del> BDMANSWENFRERR	3-Error	Null SW Handle from L2FIB [chars]	The bridge-domain receives a null handle from L2FIB	l2fib	"If the error persists the router may need to " "be reloaded"
<del>BDMANSWENFR</del> BDMANSWENFRERR	3-Error	Null SW Handle from L2FIB [chars]	The bridge-domain receives a null handle from L2FIB	l2fib	"If the error persists the router may need to " "be reloaded"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>BD</del> <del>INFRA</del> <del>MAC</del> <del>REMOVED</del>	3-Error	The port [chars] is being removed while MAC entries still exist	The specified port is being removed before all learned MAC entries have been removed.	ether-infra	"If other error messages related to removing MAC " "entries have been reported then copy those down " "exactly. Contact your Cisco technical support " "representative and provide the gathered " "information."
<del>BD</del> <del>INFRA</del> <del>MAC</del> <del>REMOVED</del>	3-Error	The port [chars] is being removed while MAC entries still exist	The specified port is being removed before all learned MAC entries have been removed.	ether-infra	"If other error messages related to removing MAC " "entries have been reported then copy those down " "exactly. Contact your Cisco technical support " "representative and provide the gathered " "information."
<del>BD</del> <del>INFRA</del> <del>MAC</del> <del>REMOVED</del>	3-Error	Unable to remove MAC entry [enet] in bridge-domain [dec]	The bridge-domain was unable to remove the learned MAC address entry from it's database.	ether-infra	"If the error persists the router may need to " "be reloaded"
<del>BD</del> <del>INFRA</del> <del>MAC</del> <del>REMOVED</del>	3-Error	Unable to remove MAC entry [enet] in bridge-domain [dec]	The bridge-domain was unable to remove the learned MAC address entry from it's database.	ether-infra	"If the error persists the router may need to " "be reloaded"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>BD/INF/MA/CE/MS</del>	4-Warning	The port [chars] has reached the maximum number of learned MAC entries [dec]	The specified port has reached the maximum number of learned MAC entries. It will not learn more until some of the entries are removed. This may happen when the entries age out. If this error persists it may indicate that there are too many nodes on the specified port or that the age out timer is too long.	ether-infra	"MAC entries should be removed by the system as "they age out. No action is required."
<del>BD/INF/MA/CE/MS</del>	4-Warning	The port [chars] has reached the maximum number of learned MAC entries [dec]	The specified port has reached the maximum number of learned MAC entries. It will not learn more until some of the entries are removed. This may happen when the entries age out. If this error persists it may indicate that there are too many nodes on the specified port or that the age out timer is too long.	ether-infra	"MAC entries should be removed by the system as "they age out. No action is required."
<del>BD/INF/MA/CE/MS</del>	3-Error	Bridge-domain MAC Security back-end subsystem did not initialize correctly Reason: [chars].	An internal software error occurred.	ether-infra	LOG_STD_ACTION
<del>BD/INF/MA/CE/MS</del>	3-Error	Bridge-domain MAC Security back-end subsystem did not initialize correctly Reason: [chars].	An internal software error occurred.	ether-infra	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BDMANMATEDL_FAL	3-Error	Bridge-domain back-end subsystem failed to delete BD [node]MAC Table entry [chars] Reason: [chars].	An internal software error occurred.	ether-infra	LOG_STD_ACTION
BDMANMATEDL_FAL	3-Error	Bridge-domain back-end subsystem failed to delete BD [node]MAC Table entry [chars] Reason: [chars].	An internal software error occurred.	ether-infra	LOG_STD_ACTION
BDMANMATE_NTFAL	3-Error	Bridge-domain MAC Table back-end subsystem did not initialize correctly Reason: [chars].	An internal software error occurred.	ether-infra	LOG_STD_ACTION
BDMANMATE_NTFAL	3-Error	Bridge-domain MAC Table back-end subsystem did not initialize correctly Reason: [chars].	An internal software error occurred.	ether-infra	LOG_STD_ACTION
BDMANBPVHCIG_FAL	3-Error	Unable to add this neighbor to the target bridge-domain Reason: [chars].	An internal software error occurred.	ether-infra	LOG_STD_ACTION
BDMANBPVHCIG_FAL	3-Error	Unable to add this neighbor to the target bridge-domain Reason: [chars].	An internal software error occurred.	ether-infra	LOG_STD_ACTION
BDMANBMAC_NTFAL	3-Error	Bridge-domain Static MAC back-end subsystem did not initialize correctly Reason: [chars].	An internal software error occurred.	ether-infra	LOG_STD_ACTION
BDMANBMAC_NTFAL	3-Error	Bridge-domain Static MAC back-end subsystem did not initialize correctly Reason: [chars].	An internal software error occurred.	ether-infra	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>BD</del> / <del>SM</del> / <del>CS</del> / <del>SM</del> / <del>CH</del>	3-Error	Standby-SP cannot configure Static MAC to back-end subsystem after reaching SSO mode Reason: [chars].	An internal software error occurred.	ether-infra	LOG_STD_ACTION
<del>BD</del> / <del>SM</del> / <del>CS</del> / <del>SM</del> / <del>CH</del>	3-Error	Standby-SP cannot configure Static MAC to back-end subsystem after reaching SSO mode Reason: [chars].	An internal software error occurred.	ether-infra	LOG_STD_ACTION
<del>BD</del> / <del>SM</del> / <del>IM</del> / <del>DB</del> / <del>IM</del>	4-Warning	Attempt to learn a new MAC on [chars] caused configured bridge-domain limit [node]to be exceeded.	The bridge-domain specified in the system message is not allowed to learn addresses beyond the limit specified in the system message. A service instance belonging to this bridge-domain received a frame with unknown source MAC address and if this address is learnt it would cause the bridge-domain limit to be exceeded. The address has not been learnt.	ether-infra	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<b>BDM/CM/NOBDM</b>	4-Warning	Attempt to learn a new MAC on [chars] caused configured bridge-domain limit [node]to be exceeded.	The bridge-domain specified in the system message is not allowed to learn addresses beyond the limit specified in the system message. A service instance belonging to this bridge-domain received a frame with unknown source MAC address and if this address is learnt it would cause the bridge-domain limit to be exceeded. The address has not been learnt.	ether-infra	-
<b>BDM/CM/NOISIM</b>	4-Warning	Attempt to learn a new MAC on [chars] caused configured service instance limit [node]to be exceeded.	The ethernet service instance specified in the system message is not allowed to learn addresses beyond the limit specified in the system message. This service instance received a frame with unknown source MAC address and if this address is learnt it would cause the limit to be exceeded. The address has not been learnt.	ether-infra	-



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>BDMA</del> <u>MAC</u> <del>VO</del> <u>SSIM</u>	4-Warning	Attempt to learn a new MAC on [chars] caused configured service instance limit [node]to be exceeded.	The ethernet service instance specified in the system message is not allowed to learn addresses beyond the limit specified in the system message. This service instance received a frame with unknown source MAC address and if this address is learnt it would cause the limit to be exceeded. The address has not been learnt.	ether-infra	-
<del>BDMA</del> <u>MAC</u> <del>VO</del> <u>SSIM</u>	4-Warning	Attempt to learn a new MAC on [chars] caused system limit [node]to be exceeded.	It is not allowed to learn addresses beyond the system limit. A service instance received a frame with unknown source MAC address and if this address is learnt it would cause the system limit to be exceeded. The address has not been learnt.	ether-infra	-
<del>BDMA</del> <u>MAC</u> <del>VO</del> <u>SSIM</u>	4-Warning	Attempt to learn a new MAC on [chars] caused system limit [node]to be exceeded.	It is not allowed to learn addresses beyond the system limit. A service instance received a frame with unknown source MAC address and if this address is learnt it would cause the system limit to be exceeded. The address has not been learnt.	ether-infra	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
BEEP-3-SESSION_ERR	3-Error	[chars] at [chars]:[dec]	The BEEP subsystem had an error and may stop running.	beep	LOG_STD_ACTION
BEEP-3-SESSION_ERR	3-Error	[chars] at [chars]:[dec]	The BEEP subsystem had an error and may stop running.	beep	LOG_STD_ACTION
BEEP-3-SESSION_ERR	3-Error	[chars] at [chars]:[dec]	The BEEP subsystem had an error and may stop running.	beep	LOG_STD_ACTION
BEEP-3-SLOG_LINE	3-Error	[chars] [chars]	This is an internal BEEP library error message.	beep	LOG_STD_ACTION
BEEP-3-SLOG_LINE	3-Error	[chars] [chars]	This is an internal BEEP library error message.	beep	LOG_STD_ACTION
BEEP-3-SLOG_LINE	3-Error	[chars] [chars]	This is an internal BEEP library error message.	beep	LOG_STD_ACTION
BEEP-3-SLOG_LINE_TB	3-Error	[chars] [chars]	This is an internal BEEP library error message.	beep	LOG_STD_ACTION
BEEP-3-SLOG_LINE_TB	3-Error	[chars] [chars]	This is an internal BEEP library error message.	beep	LOG_STD_ACTION
BEEP-3-SLOG_LINE_TB	3-Error	[chars] [chars]	This is an internal BEEP library error message.	beep	LOG_STD_ACTION
<del>BERT</del> BERT_ALREADY_TEST	3-Error	A BERT is already running	-	-	""
<del>BERT</del> BERT_BAD_INTERFACE	3-Error	Interface [dec] is down BERT cannot be executed on this interface	-	-	""
<del>BERT</del> BERT_INVPROFILE	3-Error	The Profile [dec] is not Valid	-	-	""

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BERT3-BERT_NO_MODIFY	3-Error	Profile [dec] currently under test cannot modify	-	-	""
BERT3-BERT_NO_CONTROLLER	3-Error	Controller [dec] does not exist	-	-	""
BERT6-BERT_FINISHED_TIMESLOTS	6-Information	Finished Generation of Data for timeslots [dec] to [dec] on interface [dec] using profile [dec]	-	-	""
BERT6-BERT_RESULTS	6-Information	[chars]	-	-	""
BERT6-BERT_START	6-Information	Starting BERT on Interface [dec] with Profile [chars]	-	-	""
BERT6-BERT_TIMESLOTS	6-Information	No Results will be generated for this Test	-	-	""
BFD_CFG3-MALLOC	3-Error	Malloc failure [chars]	malloc failure	bfd	LOG_STD_ACTION
BFD_CFG3-MALLOC	3-Error	Malloc failure [chars]	malloc failure	bfd	LOG_STD_ACTION
BFD_CFG3-MALLOC_CFG	3-Error	Malloc failure [chars] [chars]	malloc failure	bfd	LOG_STD_ACTION
BFD_CFG3-MALLOC_CFG	3-Error	Malloc failure [chars] [chars]	malloc failure	bfd	LOG_STD_ACTION
BFD_CFG3-WAVL_DELETE	3-Error	Wavl delete failed for %p	wavl delete failed.	bfd	LOG_STD_ACTION
BFD_CFG3-WAVL_DELETE	3-Error	Wavl delete failed for %p	wavl delete failed.	bfd	LOG_STD_ACTION
BFD_CFG3-WAVL_INIT_FAIL	3-Error	Failed initializing wavl tree	wavl_init failed.	bfd	LOG_STD_ACTION
BFD_CFG3-WAVL_INIT_FAIL	3-Error	Failed initializing wavl tree	wavl_init failed.	bfd	LOG_STD_ACTION
BFD_CFG3-WAVL_INSERT_FAIL	3-Error	Wavl insert failed [chars] [chars]	wavl insert failed.	bfd	LOG_STD_ACTION
BFD_CFG3-WAVL_INSERT_FAIL	3-Error	Wavl insert failed [chars] [chars]	wavl insert failed.	bfd	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
BFD_DAMP5ZRCDELAY	5-Notice	Dampening reuse timer is updated with 0 delay time	Inconsistency of dampening reuse timer wheel	bfd	LOG_SID_NO_ACTION
BFD_DAMP5ZRCDELAY	5-Notice	Dampening reuse timer is updated with 0 delay time	Inconsistency of dampening reuse timer wheel	bfd	LOG_SID_NO_ACTION
BFD_HA-2-CF	2-Critical	[chars][dec]	CF related error	bfd	LOG_STD_ACTION
BFD_HA-2-CF	2-Critical	[chars][dec]	CF related error	bfd	LOG_STD_ACTION
BFD_HA-2-ET	2-Critical	[chars][dec]	Enhanced-timer error	bfd	LOG_STD_ACTION
BFD_HA-2-ET	2-Critical	[chars][dec]	Enhanced-timer error	bfd	LOG_STD_ACTION
BFD_HA-2-RESOURCE	2-Critical	[chars]	System resource error occurred	bfd	LOG_STD_ACTION
BFD_HA-2-RESOURCE	2-Critical	[chars]	System resource error occurred	bfd	LOG_STD_ACTION
BFD_ISSU2GET_BUFFER	2-Critical	BFD ISSU client failed to get buffer for message. Error: [dec] [chars]	The BFD ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	bfd	"show logging and show checkpoint client"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
BFD_ISSU-2-GET_BUFFER	2-Critical	BFD ISSU client failed to get buffer for message. Error: [dec] [chars]	The BFD ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	bfd	"show logging and show checkpoint client"
BFD_ISSU-2-INIT	2-Critical	BFD ISSU client initialization failed to [chars]. Error: [dec] [chars]	The BFD ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	bfd	LOG_STD_ACTION
BFD_ISSU-2-INIT	2-Critical	BFD ISSU client initialization failed to [chars]. Error: [dec] [chars]	The BFD ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	bfd	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>BFD_ISSU_SESSION_NEGO_FAILED</del>	2-Critical	BFD ISSU client failed to send negotiation message. Error: [dec] [chars]	The BFD ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	bfd	"show logging and show checkpoint client"
<del>BFD_ISSU_SESSION_NEGO_FAILED</del>	2-Critical	BFD ISSU client failed to send negotiation message. Error: [dec] [chars]	The BFD ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	bfd	"show logging and show checkpoint client"
<del>BFD_ISSU_SESSION_NEGO</del>	2-Critical	BFD ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The BFD ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	bfd	"show issu session <client_id> and "show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>BFD_ISSU_SESSION_NEGO</del>	2-Critical	BFD ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The BFD ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	bfd	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>BFD_ISSU_SESSION_REGISTR</del>	2-Critical	BFD ISSU client failed to register session information. Error: [dec] [chars]	The BFD ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	bfd	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>BFD_ISSU_SESSION_REGISTR</del>	2-Critical	BFD ISSU client failed to register session information. Error: [dec] [chars]	The BFD ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	bfd	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>BFD_ISSU_INVALID_SESSION</del>	3-Error	BFD ISSU client does not have a valid registered session.	The BFD ISSU client does not have a valid registered session.	bfd	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>BFD_ISSU</del> 3- <del>ISSU</del> NAID_SESSION	3-Error	BFD ISSU client does not have a valid registered session.	The BFD ISSU client does not have a valid registered session.	bfd	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
BFD_ISSU3-MSG_SIZE	3-Error	BFD ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The BFD ISSU client failed to calculate the MTU for the specified message. The BFD ISSU client is not able to send the message to the standby device.	bfd	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
BFD_ISSU3-MSG_SIZE	3-Error	BFD ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The BFD ISSU client failed to calculate the MTU for the specified message. The BFD ISSU client is not able to send the message to the standby device.	bfd	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>BFD_ISSU</del> 3- <del>ISSU</del> UNREGISTER	3-Error	BFD ISSU client failed to unregister session information. Error: [dec] [chars]	The BFD ISSU client failed to unregister session information.	bfd	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>BFD_ISSU</del> 3- <del>ISSU</del> UNREGISTER	3-Error	BFD ISSU client failed to unregister session information. Error: [dec] [chars]	The BFD ISSU client failed to unregister session information.	bfd	"show issu session <client_id> and " "show issu negotiated capability <session_id>"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BFD_ISSU_3-TRANSFORM_FAIL	3-Error	bfd ISSU client [chars] transform failed for message [dec]'. Error: [dec] [chars]	The BFD ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the BFD state between the active device and the standby device is not identical.	bfd	"show issu session <client_id> and " "show issu negotiated version <session_id>"
BFD_ISSU_3-TRANSFORM_FAIL	3-Error	bfd ISSU client [chars] transform failed for message [dec]'. Error: [dec] [chars]	The BFD ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the BFD state between the active device and the standby device is not identical.	bfd	"show issu session <client_id> and " "show issu negotiated version <session_id>"
BFD_MAP_3-MALLOC	3-Error	Malloc failure [chars]	malloc failure	bfd	LOG_STD_ACTION
BFD_MAP_3-MALLOC	3-Error	Malloc failure [chars]	malloc failure	bfd	LOG_STD_ACTION
BFD_MAP_3-MALLOC_MAP	3-Error	Malloc failure [chars] [chars]	malloc failure	bfd	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BFD_MAP3MALLOC_MAP	3-Error	Malloc failure [chars] [chars]	malloc failure	bfd	LOG_STD_ACTION
BFD_MAP3WAVL_DELETE	3-Error	Wavl delete failed for %p	wavl delete failed.	bfd	LOG_STD_ACTION
BFD_MAP3WAVL_DELETE	3-Error	Wavl delete failed for %p	wavl delete failed.	bfd	LOG_STD_ACTION
BFD_MAP3WAVL_INIT_FAIL	3-Error	Failed initializing wavl tree	wavl_init failed.	bfd	LOG_STD_ACTION
BFD_MAP3WAVL_INIT_FAIL	3-Error	Failed initializing wavl tree	wavl_init failed.	bfd	LOG_STD_ACTION
BFD_MAP3WAVL_INSERT_FAIL	3-Error	Wavl insert failed [chars] [chars]	wavl insert failed.	bfd	LOG_STD_ACTION
BFD_MAP3WAVL_INSERT_FAIL	3-Error	Wavl insert failed [chars] [chars]	wavl insert failed.	bfd	LOG_STD_ACTION
BFD_MPLS3CFC_REG_FAIL	3-Error	CFC registration failed rc [dec]	CFC registration failed.	bfd	LOG_STD_ACTION
BFD_MPLS3CFC_REG_FAIL	3-Error	CFC registration failed rc [dec]	CFC registration failed.	bfd	LOG_STD_ACTION
BFD_MPLS3CFC_UNREG_FAIL	3-Error	CFC unregistration failed rc [dec]	CFC unregistration failed.	bfd	LOG_STD_ACTION
BFD_MPLS3CFC_UNREG_FAIL	3-Error	CFC unregistration failed rc [dec]	CFC unregistration failed.	bfd	LOG_STD_ACTION
BFD_MPLS-3-TP_LSP	3-Error	Session not created for intf [chars]/lsp [dec]. In-label [node]in use for intf [chars]/lsp [dec]	BFD session mismatch.	bfd	LOG_STD_ACTION
BFD_MPLS-3-TP_LSP	3-Error	Session not created for intf [chars]/lsp [dec]. In-label [node]in use for intf [chars]/lsp [dec]	BFD session mismatch.	bfd	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BDOHLOC3BALOC3AIED	3-Error	Allocation of [chars] memory failed for BFD Offload feature in QFP	Allocation of memory by the QFP BFD Offload feature microcode failed. The name of the memory chunk is specified in the message. This indicates a software failure	asr1k-bfd	LOG_STD_ACTION
BDOHLOC3ABIKSNCA	3-Error	rg [dec]	There was a failure such that BFD Offload domain bulk sync did not occur	cpp-ucode	LOG_STD_ACTION
BDOHLOC3ANADSAE	3-Error	state [dec]	An invalid HA state was received from the HA infrastructure.	cpp-ucode	LOG_STD_ACTION
BDOHLOC3BNIFAIED	3-Error	Initialization of the BFD Offload feature in QFP failed	Initialization of the BFD Offload feature in the QFP failed. This indicates a software failure.	asr1k-bfd	LOG_STD_ACTION
BDOHLOC3KIRRCANAIED	3-Error	Failed to register with generic packet replication for BFD Offload feature in QFP	BFD Offload initialization of packet replication registration failed.	asr1k-bfd	LOG_STD_ACTION
BDOHLOC3PROXYICAIED	2-Critical	QFP BFD Proxy IPC interface initialization failure result: [dec].	Cisco internal software error. QFP BFD Proxy initialization detected that the IPC interface initialization failed. QFP BFD proxy will not be functional while this condition exists.	asr1k-bfdkeyword:bfd	LOG_STD_ACTION
BDOHLOC3MEMEXAIED	3-Error	BFD IPC subtype: [dec]	Extending memory failed.	asr1k-bfdkeyword:bfd	LOG_STD_ACTION
BDOHLOC3MEMREQAIED	3-Error	BFD IPC subtype: [dec]	Requesting more memory failed.	asr1k-bfdkeyword:bfd	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HD</del> <del>PROXY</del> <del>PROXY</del> <del>BAD</del> <del>MSG</del>	3-Error	QFP BFD Proxy received bad length message type [dec]	Cisco internal software error. QFP BFD Proxy received a corrupted message from control plane. This message will be ignored.	asr1k-bfdkeyword:bfd	LOG_STD_ACTION
<del>HD</del> <del>PROXY</del> <del>PROXY</del> <del>CALC</del> <del>Q</del> <del>ALD</del>	3-Error	QFP BFD Proxy [chars] message lost due to message buffer allocation failure.	Cisco internal software error. QFP BFD Proxy message processing detected a message buffer allocation failure. The message is lost as the result of this condition.	asr1k-bfdkeyword:bfd	LOG_STD_ACTION
<del>HD</del> <del>PROXY</del> <del>PROXY</del> <del>SEND</del> <del>ALD</del>	3-Error	QFP BFD Proxy [chars] message lost due to message sent failure result: [dec].	Cisco internal software error. QFP BFD Proxy message processing detected a message sent failure. The message is lost as the result of this condition.	asr1k-bfdkeyword:bfd	LOG_STD_ACTION
<del>HD</del> <del>PROXY</del> <del>PROXY</del> <del>NAD</del> <del>MSG</del>	4-Warning	QFP BFD Proxy received invalid message type [dec]	Cisco internal software error. QFP BFD Proxy received an invalid message from control plane. This message will be ignored.	asr1k-bfdkeyword:bfd	LOG_STD_ACTION
<del>HD</del> <del>PROXY</del> <del>PROXY</del> <del>INVALID</del> <del>MSG</del> <del>LEN</del>	4-Warning	QFP BFD Proxy IPC invalid length [dec]:[dec] len [dec] flags 0x[hec] source [dec]	Cisco internal software error. QFP BFD Proxy received invalid IPC message length from control plane. This message will be ignored.	asr1k-bfdkeyword:bfd	LOG_STD_ACTION
<del>HD</del> <del>TEST</del> <del>3</del> <del>BAD</del> <del>ADDR</del> <del>TYPE</del>	3-Error	Invalid address type [dec]	invalid address type	bfd	LOG_STD_ACTION
<del>HD</del> <del>TEST</del> <del>3</del> <del>BAD</del> <del>ADDR</del> <del>TYPE</del>	3-Error	Invalid address type [dec]	invalid address type	bfd	LOG_STD_ACTION
<del>BFD</del> <del>_TEST</del> <del>3</del> <del>BAD</del> <del>_TYPE</del>	3-Error	Invalid session type [dec]	invalid session type	bfd	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
BFD_TEST3BAD_TYPE	3-Error	Invalid session type [dec]	invalid session type	bfd	LOG_STD_ACTION
BFD_TEST3RESOURCE	3-Error	Cannot add BFD TEST as RF client. Return code [dec]	RF client id failed.	bfd	LOG_STD_ACTION
BFD_TEST3RESOURCE	3-Error	Cannot add BFD TEST as RF client. Return code [dec]	RF client id failed.	bfd	LOG_STD_ACTION
BFD_TEST3RF_INIT_FAIL	3-Error	Failed initializing Redundnacy Facility for BFD stub client.	stub RF init failed.	bfd	LOG_STD_ACTION
BFD_TEST3RF_INIT_FAIL	3-Error	Failed initializing Redundnacy Facility for BFD stub client.	stub RF init failed.	bfd	LOG_STD_ACTION
BFD_TEST3WAVL_INIT_FAIL	3-Error	Failed initializing wavl tree.	wavl_init failed.	bfd	LOG_STD_ACTION
BFD_TEST3WAVL_INIT_FAIL	3-Error	Failed initializing wavl tree.	wavl_init failed.	bfd	LOG_STD_ACTION
BFD_TEST3WAVL_NRT_INSERT_IPV4	3-Error	Failed inserting neighbor address [node]i to wavl tree thread [dec]	wavl insert failed for ipv4.	bfd	LOG_STD_ACTION
BFD_TEST3WAVL_NRT_INSERT_IPV4	3-Error	Failed inserting neighbor address [node]i to wavl tree thread [dec]	wavl insert failed for ipv4.	bfd	LOG_STD_ACTION
BFD_TEST3WAVL_NRT_INSERT_IPV6	3-Error	Failed inserting neighbor address [node]P to wavl tree thread [dec]	wavl insert failed for ipv6.	bfd	LOG_STD_ACTION
BFD_TEST3WAVL_NRT_INSERT_IPV6	3-Error	Failed inserting neighbor address [node]P to wavl tree thread [dec]	wavl insert failed for ipv6.	bfd	LOG_STD_ACTION
BFD_TEST3WAVL_NRT_INSERT_PW	3-Error	Failed inserting neighbor address [node]i and vcid [node] to wavl tree thread [dec]	wavl insert failed for pw.	bfd	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BFD3WAL_INSERT_PW	3-Error	Failed inserting neighbor address [node]i and vcid [node] to wavl tree thread [dec]	wavl insert failed for pw.	bfd	LOG_STD_ACTION
BFD_TEST3WAVL_TREE	3-Error	Failed to malloc space for wavl tree.	wavl tree malloc failed.	bfd	LOG_STD_ACTION
BFD_TEST3WAVL_TREE	3-Error	Failed to malloc space for wavl tree.	wavl tree malloc failed.	bfd	LOG_STD_ACTION
BFD_TEST3WAVL_WALK_FAIL	3-Error	wavl_walk failed while walking wavl tree thread [dec] interface [dec]	wavl walk of a thread failed.	bfd	LOG_STD_ACTION
BFD_TEST3WAVL_WALK_FAIL	3-Error	wavl_walk failed while walking wavl tree thread [dec] interface [dec]	wavl walk of a thread failed.	bfd	LOG_STD_ACTION
BFD-3-BUFPOOL	3-Error	Creation of BFD Private Buffer Pool failed	could not create private buffer pool	bfd	LOG_STD_ACTION
BFD-3-BUFPOOL	3-Error	Creation of BFD Private Buffer Pool failed	could not create private buffer pool	bfd	LOG_STD_ACTION
BFD-3-CHUNK	3-Error	Chunk malloc failure - [chars] - 0x[hex]	chunk malloc failure	bfd	LOG_STD_ACTION
BFD-3-CHUNK	3-Error	Chunk malloc failure - [chars] - 0x[hex]	chunk malloc failure	bfd	LOG_STD_ACTION
BFD3CHUNK_DESTROY	3-Error	Unable to destroy [chars] [chars]	chunk destroy failure	bfd	LOG_STD_ACTION
BFD3CHUNK_DESTROY	3-Error	Unable to destroy [chars] [chars]	chunk destroy failure	bfd	LOG_STD_ACTION
BFD-3-IF_IN_USE	3-Error	Interface [chars][dec] already in use	interface number is already in use	bfd	LOG_STD_ACTION
BFD-3-IF_IN_USE	3-Error	Interface [chars][dec] already in use	interface number is already in use	bfd	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BFD-3-ILL_IF	3-Error	Illegal interface [dec][chars]	interface number is out of range for platform	bfd	LOG_STD_ACTION
BFD-3-ILL_IF	3-Error	Illegal interface [dec][chars]	interface number is out of range for platform	bfd	LOG_STD_ACTION
BFD-3-INVQLEM	3-Error	Invalid queue element - [chars]	invalid queue element	bfd	LOG_STD_ACTION
BFD-3-INVQLEM	3-Error	Invalid queue element - [chars]	invalid queue element	bfd	LOG_STD_ACTION
BFD-3-INVVER	3-Error	Invalid version type	invalid version type	bfd	LOG_STD_ACTION
BFD-3-INVVER	3-Error	Invalid version type	invalid version type	bfd	LOG_STD_ACTION
BFD-3-NO_TYPE	3-Error	Neighbor address type not specified as ADDR_IP[dec][dec]	-	-	-
BFD-3-NO_TYPE	3-Error	Neighbor address type not specified as ADDR_IP[dec][dec]	-	-	-
BFD-3-NOBOOLEAN	3-Error	Failed to create watched boolean	could not create watched boolean	bfd	LOG_STD_ACTION
BFD-3-NOBOOLEAN	3-Error	Failed to create watched boolean	could not create watched boolean	bfd	LOG_STD_ACTION
BFD-3-NOCLIENT	3-Error	Client not found	client does not exist in client list	bfd	LOG_STD_ACTION
BFD-3-NOCLIENT	3-Error	Client not found	client does not exist in client list	bfd	LOG_STD_ACTION
BFD-3-NOIOUPROC	3-Error	Failed to create BFD IOU Process	IOU process failed to start	bfd	LOG_STD_ACTION
BFD-3-NOIOUPROC	3-Error	Failed to create BFD IOU Process	IOU process failed to start	bfd	LOG_STD_ACTION
BFD-3-NOKADIS	3-Error	Failed to start Kadis. Status [dec]	kadis failed to start	bfd	LOG_STD_ACTION
BFD-3-NOKADIS	3-Error	Failed to start Kadis. Status [dec]	kadis failed to start	bfd	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
BFD-3-NOKADIS_TICK	3-Error	Failed to get kadis timer tick to start kadis timer.	kadis failed to get timer tick	bfd	LOG_STD_ACTION
BFD-3-NOKADIS_TICK	3-Error	Failed to get kadis timer tick to start kadis timer.	kadis failed to get timer tick	bfd	LOG_STD_ACTION
BFD-3-NOPPPROC	3-Error	Failed to create BFD PP Process	pseudo-preemptive process failed to start	bfd	LOG_STD_ACTION
BFD-3-NOPPPROC	3-Error	Failed to create BFD PP Process	pseudo-preemptive process failed to start	bfd	LOG_STD_ACTION
BFD-3-PACKET	3-Error	bfd_pak_coalesce - [chars] failed	could not obtain or coalesce packet buffer	bfd	LOG_STD_ACTION
BFD-3-PACKET	3-Error	bfd_pak_coalesce - [chars] failed	could not obtain or coalesce packet buffer	bfd	LOG_STD_ACTION
<del>BFD-3-WAVL_TREE_DELETE_NODE</del>	3-Error	Failed deleting node for neighbor [node]to wavl tree thread [dec] [chars]	-	-	-
<del>BFD-3-WAVL_TREE_DELETE_NODE</del>	3-Error	Failed deleting node for neighbor [node]to wavl tree thread [dec] [chars]	-	-	-
<del>BFD-3-WAVL_TREE_DELETE_NODE_P</del>	3-Error	Failed deleting node for neighbor [node]P to wavl tree thread [dec] [chars]	-	-	-
<del>BFD-3-WAVL_TREE_DELETE_NODE_P</del>	3-Error	Failed deleting node for neighbor [node]P to wavl tree thread [dec] [chars]	-	-	-
<del>BFD-3-WAVL_TREE_DELETE_NODE_P</del>	3-Error	Failed deleting node for neighbor [node]: vcid [dec] to wavl tree thread [dec] [chars]	-	-	-



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>BFD3-WAVL_DELETION_MISPLW</del>	3-Error	Failed deleting node for neighbor [node]: vcid [dec] to wavl tree thread [dec] [chars]	-	-	-
<del>BFD3-WAVL_DELETION_MISPLS</del>	3-Error	Failed deleting node for LSP [chars] [node]to wavl tree thread [dec] [chars]	-	-	-
<del>BFD3-WAVL_DELETION_MISPLS</del>	3-Error	Failed deleting node for LSP [chars] [node]to wavl tree thread [dec] [chars]	-	-	-
<del>BFD3-WAVL_DELETION_MISPLS</del>	3-Error	Failed deleting node for LSP [chars] [node]to wavl tree thread [dec] [chars]	-	-	-
<del>BFD3-WAVL_DELETION_MISPLS</del>	3-Error	Failed deleting node for LSP [chars] [node]to wavl tree thread [dec] [chars]	-	-	-
<del>BFD3-WAVL_DELETION_MISPLS</del>	3-Error	Failed deleting node for LSP [chars] [chars] to wavl tree thread [dec] [chars]	-	-	-
<del>BFD3-WAVL_DELETION_MISPLS</del>	3-Error	Failed deleting node for LSP [chars] [chars] to wavl tree thread [dec] [chars]	-	-	-
<del>BFD3-WAVL_DELETION_RCHPM</del>	3-Error	Failed deleting node for neighbor [node]to wavl tree thread [dec] [chars]	-	-	-
<del>BFD3-WAVL_DELETION_RCHPM</del>	3-Error	Failed deleting node for neighbor [node]to wavl tree thread [dec] [chars]	-	-	-
BFD3-WAVL_INIT_FAIL	3-Error	Failed initializing wavl tree.	wavl_init failed.	bfd	LOG_STD_ACTION
BFD3-WAVL_INIT_FAIL	3-Error	Failed initializing wavl tree.	wavl_init failed.	bfd	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>HDWAL_NSRTIAL_P4</del>	3-Error	Failed inserting node for neighbor [node]to wavl tree thread [dec] [chars]	-	-	-
<del>HDWAL_NSRTIAL_P4</del>	3-Error	Failed inserting node for neighbor [node]to wavl tree thread [dec] [chars]	-	-	-
<del>HDWAL_NSRTIAL_P6</del>	3-Error	Failed inserting node for neighbor [node]P to wavl tree thread [dec] [chars]	-	-	-
<del>HDWAL_NSRTIAL_P6</del>	3-Error	Failed inserting node for neighbor [node]P to wavl tree thread [dec] [chars]	-	-	-
<del>HDWAL_NSRTIAL_MSPW</del>	3-Error	Failed inserting node for neighbor [node]: vcid [dec] to wavl tree thread [dec] [chars]	-	-	-
<del>HDWAL_NSRTIAL_MSPW</del>	3-Error	Failed inserting node for neighbor [node]: vcid [dec] to wavl tree thread [dec] [chars]	-	-	-
<del>HDWAL_NSRTIAL_MSECUP</del>	3-Error	Failed inserting node for LSP [chars] [node]to wavl tree thread [dec] [chars]	-	-	-
<del>HDWAL_NSRTIAL_MSECUP</del>	3-Error	Failed inserting node for LSP [chars] [node]to wavl tree thread [dec] [chars]	-	-	-
<del>HDWAL_NSRTIAL_MSESRP</del>	3-Error	Failed inserting node for LSP [chars] [node]to wavl tree thread [dec] [chars]	-	-	-
<del>HDWAL_NSRTIAL_MSESRP</del>	3-Error	Failed inserting node for LSP [chars] [node]to wavl tree thread [dec] [chars]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BFD6WALNSRIA_MSPSP	3-Error	Failed inserting node for LSP [chars] [chars] to wavl tree thread [dec] [chars]	-	-	-
BFD6WALNSRIA_MSPSP	3-Error	Failed inserting node for LSP [chars] [chars] to wavl tree thread [dec] [chars]	-	-	-
BFD6WALNSRIA_RCHP4	3-Error	Failed inserting node for neighbor [node]to wavl tree thread [dec] [chars]	-	-	-
BFD6WALNSRIA_RCHP4	3-Error	Failed inserting node for neighbor [node]to wavl tree thread [dec] [chars]	-	-	-
BFD63-WAVL_TREE	3-Error	Failed to malloc space for wavl tree.	wavl tree malloc failed.	bfd	LOG_STD_ACTION
BFD63-WAVL_TREE	3-Error	Failed to malloc space for wavl tree.	wavl tree malloc failed.	bfd	LOG_STD_ACTION
BFD6BFD_F_CONFIGURE	6-Information	BFD-SYSLOG: bfd config apply idb:[chars]	bfd config change	bfd	LOG_SID_NO_ACTION
BFD6BFD_F_CONFIGURE	6-Information	BFD-SYSLOG: bfd config apply idb:[chars]	bfd config change	bfd	LOG_SID_NO_ACTION
BFD6BFD_SESS_CREATED	6-Information	BFD-SYSLOG: bfd_session_created neigh [chars] proc:[chars] idb:[chars] handle:[node][chars]	bfd session created	bfd	LOG_SID_NO_ACTION
BFD6BFD_SESS_CREATED	6-Information	BFD-SYSLOG: bfd_session_created neigh [chars] proc:[chars] idb:[chars] handle:[node][chars]	bfd session created	bfd	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>BFD</del> BFD_SSS_DESIROMD	6-Information	BFD-SYSLOG: bfd_session_destroyed [chars] neigh proc:[chars] [chars]handle:[node][chars]	bfd session destroyed	bfd	LOG_SID_NO_ACTION
<del>BFD</del> BFD_SSS_DESIROMD	6-Information	BFD-SYSLOG: bfd_session_destroyed [chars] neigh proc:[chars] [chars]handle:[node][chars]	bfd session destroyed	bfd	LOG_SID_NO_ACTION
BFD6BFD_SESS_GET_LD	6-Information	BFD-SYSLOG: bfd session get local discriminator [chars] neigh proc:[chars] handle:[node]node: [chars]	Get bfd session local discriminator	bfd	LOG_SID_NO_ACTION
BFD6BFD_SESS_GET_LD	6-Information	BFD-SYSLOG: bfd session get local discriminator [chars] neigh proc:[chars] handle:[node]node: [chars]	Get bfd session local discriminator	bfd	LOG_SID_NO_ACTION
<del>BFD</del> BFD_VRRP3_SSS_NAD	6-Information	BFD-SYSLOG: ABORT: BFD session for VRRPv3 client on interface: [chars] NOT supported in software handle:[node]adjacency: [chars] node: [chars]	bfd vrrpv3 software session offloading NOT supported	bfd	LOG_SID_NO_ACTION
<del>BFD</del> BFD_VRRP3_SSS_NAD	6-Information	BFD-SYSLOG: ABORT: BFD session for VRRPv3 client on interface: [chars] NOT supported in software handle:[node]adjacency: [chars] node: [chars]	bfd vrrpv3 software session offloading NOT supported	bfd	LOG_SID_NO_ACTION
BFD-6-MAX_DESCR	6-Information	BFD discriminators exhausted. No more sessions can be created.	Max. discriminators assigned	bfd	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BFD-6-MAX_DESCR	6-Information	BFD discriminators exhausted. No more sessions can be created.	Max. discriminators assigned	bfd	LOG_STD_ACTION
BFD-6-MAX_SESSION	6-Information	Maximum session creation limit [dec] for [chars] sessions reached.	Max. sessions created	bfd	LOG_STD_ACTION
BFD-6-MAX_SESSION	6-Information	Maximum session creation limit [dec] for [chars] sessions reached.	Max. sessions created	bfd	LOG_STD_ACTION
BFD6TIMER_NOT_SUPP	6-Information	BFD timer value on interface [chars] is below the supported value of [dec] ms	Fast timers not supported on slow interface	bfd	LOG_STD_ACTION
BFD6TIMER_NOT_SUPP	6-Information	BFD timer value on interface [chars] is below the supported value of [dec] ms	Fast timers not supported on slow interface	bfd	LOG_STD_ACTION
BFD6TIMERSNOTSUPPORTED	6-Information	BFD timer value Tx: [dec] and Rx: [dec] are not supported for software sessions	Timers not supported for software sessions	bfd	LOG_STD_ACTION
BFD6TIMERSNOTSUPPORTED	6-Information	BFD timer value Tx: [dec] and Rx: [dec] are not supported for software sessions	Timers not supported for software sessions	bfd	LOG_STD_ACTION
BFD6TX_ON_STANDBY	6-Information	BFD transmit detected on standby	BFD packet transmission on standby	bfd	LOG_STD_ACTION
BFD6TX_ON_STANDBY	6-Information	BFD transmit detected on standby	BFD packet transmission on standby	bfd	LOG_STD_ACTION
BFD6FSM-3-INVEVENT	3-Error	Invalid event_id 0x[hex]	state machine invalid event	bfd	LOG_STD_ACTION
BFD6FSM-3-INVEVENT	3-Error	Invalid event_id 0x[hex]	state machine invalid event	bfd	LOG_STD_ACTION
BFD6FSM-3-INVSTATE	3-Error	Invalid current state 0x[hex]	state machine invalid state	bfd	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BDFFSM-3-INVSTATE	3-Error	Invalid current state 0x[hex]	state machine invalid state	bfd	LOG_STD_ACTION
BDFFSM-3-INVTRANS	3-Error	obj: [0x[node]X] event_id: [0x[node]X] er_p: [0x[node]X] arg: [0x[node]X] session state [chars] -> [chars]	state machine invalid transition	bfd	LOG_STD_ACTION
BDFFSM-3-INVTRANS	3-Error	obj: [0x[node]X] event_id: [0x[node]X] er_p: [0x[node]X] arg: [0x[node]X] session state [chars] -> [chars]	state machine invalid transition	bfd	LOG_STD_ACTION
BDFFSM-3-NOEVENT	3-Error	Unable to apply event 0x[node]X	state machine transition failure	bfd	LOG_STD_ACTION
BDFFSM-3-NOEVENT	3-Error	Unable to apply event 0x[node]X	state machine transition failure	bfd	LOG_STD_ACTION
BDFFSM-3-NULLMACH	3-Error	Invalid machine pointer 0x[hex]	state machine invalid pointer	bfd	LOG_STD_ACTION
BDFFSM-3-NULLMACH	3-Error	Invalid machine pointer 0x[hex]	state machine invalid pointer	bfd	LOG_STD_ACTION
BDFSM-6-BFD_SESS_DOWN	6-Information	BFD-SYSLOG: BFD session [chars] is going Down Reason: [chars]	bfd session down	bfd	LOG_SID_NO_ACTION
BDFSM-6-BFD_SESS_DOWN	6-Information	BFD-SYSLOG: BFD session [chars] is going Down Reason: [chars]	bfd session down	bfd	LOG_SID_NO_ACTION
BDFSM-6-BFD_SESS_UP	6-Information	BFD-SYSLOG: BFD session [chars] is going UP	bfd session Up	bfd	LOG_SID_NO_ACTION
BDFSM-6-BFD_SESS_UP	6-Information	BFD-SYSLOG: BFD session [chars] is going UP	bfd session Up	bfd	LOG_SID_NO_ACTION
BDFSM-6-BFD_SESS_UP	6-Information	-	-	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
BGP_LMM-3-ASSERT	3-Error	Assert failed at [chars]:[dec]	An internal software error has occurred	mpls-vpn	LOG_STD_ACTION
BGP_LMM-3-ASSERT	3-Error	Assert failed at [chars]:[dec]	An internal software error has occurred	mpls-vpn	LOG_STD_ACTION
BGP_LMM3-AUTOGEN	3-Error	[chars] Neighbor: [chars] Interface: [chars]	There was an error while auto-generating the mpls bgp forwarding command on an interface	mpls-vpn	"Manually configure the mpls bgp forwarding command" " on the interface referenced in the error message." "If the problem persists copy the message exactly as" "it appears and report it to your customer service" "representative"
BGP_LMM3-AUTOGEN	3-Error	[chars] Neighbor: [chars] Interface: [chars]	There was an error while auto-generating the mpls bgp forwarding command on an interface	mpls-vpn	"Manually configure the mpls bgp forwarding command" " on the interface referenced in the error message." "If the problem persists copy the message exactly as" "it appears and report it to your customer service" "representative"
BGP_LMM-3-CFC1	3-Error	[chars] [chars]	Error in BGP LMM and CFC interaction	mpls-vpn	LOG_STD_ACTION
BGP_LMM-3-CFC1	3-Error	[chars] [chars]	Error in BGP LMM and CFC interaction	mpls-vpn	LOG_STD_ACTION
BGP_LMM-3-CFC2	3-Error	[chars] [chars] [chars]	Interaction error between BGP LMM and CFC	mpls-vpn	LOG_STD_ACTION
BGP_LMM-3-CFC2	3-Error	[chars] [chars] [chars]	Interaction error between BGP LMM and CFC	mpls-vpn	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BGP_LMM-3-IPRMCONNECT	3-Error	[chars] Address-family [chars]	BGP LMM AF registration/de-registration with IPRM failed	mpls-vpn	LOG_STD_ACTION
BGP_LMM-3-IPRMCONNECT	3-Error	[chars] Address-family [chars]	BGP LMM AF registration/de-registration with IPRM failed	mpls-vpn	LOG_STD_ACTION
BGP_LMM-3-LSD1	3-Error	[chars] [chars]	Error in BGP LMM and LSD interaction	mpls-vpn	LOG_STD_ACTION
BGP_LMM-3-LSD1	3-Error	[chars] [chars]	Error in BGP LMM and LSD interaction	mpls-vpn	LOG_STD_ACTION
BGP_LMM-3-LSD2	3-Error	[chars] [chars] [chars]	Interaction error between BGP LMM and LSD	mpls-vpn	LOG_STD_ACTION
BGP_LMM-3-LSD2	3-Error	[chars] [chars] [chars]	Interaction error between BGP LMM and LSD	mpls-vpn	LOG_STD_ACTION
BGP_LMM-3-MEM	3-Error	[chars]	Error in memory management	mpls-vpn	LOG_STD_ACTION
BGP_LMM-3-MEM	3-Error	[chars]	Error in memory management	mpls-vpn	LOG_STD_ACTION
BGP_LMM-3-NBRROUTE	3-Error	[chars] Neighbor: [chars] Interface: [chars]	A host route to an MPLS enabled BGP neighbor was not present in the routing table the problem was corrected by installing the route	mpls-vpn	LOG_STD_ACTION
BGP_LMM-3-NBRROUTE	3-Error	[chars] Neighbor: [chars] Interface: [chars]	A host route to an MPLS enabled BGP neighbor was not present in the routing table the problem was corrected by installing the route	mpls-vpn	LOG_STD_ACTION
BGP_LMM-3-PATH	3-Error	[chars] label: [dec] next hop: [dec]	Invalid information in a BGP path	mpls-vpn	LOG_STD_ACTION
BGP_LMM-3-PATH	3-Error	[chars] label: [dec] next hop: [dec]	Invalid information in a BGP path	mpls-vpn	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BGP_LMM3-REENTRY	3-Error	[chars]	A non re-entrant routine has been re-entered	mpls-vpn	LOG_STD_ACTION
BGP_LMM3-REENTRY	3-Error	[chars]	A non re-entrant routine has been re-entered	mpls-vpn	LOG_STD_ACTION
BGP_LMM3-SIZEMISMATCH	3-Error	Label table size [dec] mismatch checkpoint key creation failed	MPLS Label Table ID size mismatch.	mpls-vpn	LOG_STD_ACTION
BGP_LMM3-SIZEMISMATCH	3-Error	Label table size [dec] mismatch checkpoint key creation failed	MPLS Label Table ID size mismatch.	mpls-vpn	LOG_STD_ACTION
BGP_LMM3-VRFAGGR	3-Error	[chars] [dec]	Error during per VRF aggregate label processing	mpls-vpn	LOG_STD_ACTION
BGP_LMM3-VRFAGGR	3-Error	[chars] [dec]	Error during per VRF aggregate label processing	mpls-vpn	LOG_STD_ACTION
BGP_LMM4-LABEL	4-Warning	[chars] [chars]	Error during allocation/freeing of a label	mpls-vpn	LOG_STD_ACTION
BGP_LMM4-LABEL	4-Warning	[chars] [chars]	Error during allocation/freeing of a label	mpls-vpn	LOG_STD_ACTION
BGP_LMM6-AUTOGENI	6-Information	[chars] interface: [chars]	The mpls bgp forwarding command has been automatically configured on an interface	-	"This is an informational message no action is " "required by the operator"
BGP_LMM6-AUTOGENI	6-Information	[chars] interface: [chars]	The mpls bgp forwarding command has been automatically configured on an interface	-	"This is an informational message no action is " "required by the operator"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BGP_LMM6MPLS_INT	6-Information	MPLS has been [chars] for the BGP address-family [chars]	MPLS has been enabled/disabled for a given BGP address-family	-	"This is an informational message no action is " "required by the operator"
BGP_LMM6MPLS_INT	6-Information	MPLS has been [chars] for the BGP address-family [chars]	MPLS has been enabled/disabled for a given BGP address-family	-	"This is an informational message no action is " "required by the operator"
BGP_LMM6PERCE1	6-Information	Per CE label global keyid wrap trigger label reallocation	Per CE label global keyid wrap trigger label reallocation	mpls-vpn	LOG_STD_ACTION
BGP_LMM6PERCE1	6-Information	Per CE label global keyid wrap trigger label reallocation	Per CE label global keyid wrap trigger label reallocation	mpls-vpn	LOG_STD_ACTION
BGP_MLS3GEN_ERROR	3-Error	[chars]	BGP MPLS related general runtime errors message contents will show the error	mpls-vpn	LOG_STD_ACTION
BGP_MLS3GEN_ERROR	3-Error	[chars]	BGP MPLS related general runtime errors message contents will show the error	mpls-vpn	LOG_STD_ACTION
BGP_MLS3IPRMCONNECT	3-Error	[chars]	BGP VPNv4 failed to register to IPRM component.	mpls-vpn	LOG_STD_ACTION
BGP_MLS3IPRMCONNECT	3-Error	[chars]	BGP VPNv4 failed to register to IPRM component.	mpls-vpn	LOG_STD_ACTION
BGP_MLS3V4AGGRIABL	3-Error	global aggr label: [chars]	This is related to a common AGGREGATE LABEL for all aggregate prefixes in global routing table.	mpls-vpn	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BGP_MPLS_V4_AGGRI_ABL	3-Error	global aggr label: [chars]	This is related to a common AGGREGATE LABEL for all aggregate prefixes in global routing table.	mpls-vpn	LOG_STD_ACTION
BGP_MPLS_LABEL_ALLOC	3-Error	[chars]	An MPLS label could not be allocated for a prefix due to an internal error	mpls-vpn	LOG_STD_ACTION
BGP_MPLS_LABEL_ALLOC	3-Error	[chars]	An MPLS label could not be allocated for a prefix due to an internal error	mpls-vpn	LOG_STD_ACTION
BGP_MPLS_SLS_CONNECT	3-Error	[chars]	BGP VPNv4 failed to register to MPLS Forwarding component.	mpls-vpn	LOG_STD_ACTION
BGP_MPLS_SLS_CONNECT	3-Error	[chars]	BGP VPNv4 failed to register to MPLS Forwarding component.	mpls-vpn	LOG_STD_ACTION
BGP_MPLS_3_NBR_ROUTE	3-Error	[chars]	Problems with manipulating the bgp neighbor route needed for MPLS operations	mpls-vpn	LOG_STD_ACTION
BGP_MPLS_3_NBR_ROUTE	3-Error	[chars]	Problems with manipulating the bgp neighbor route needed for MPLS operations	mpls-vpn	LOG_STD_ACTION
BGP_MPLS_PER_VRF_AGGRI	3-Error	pervrfaggr label: [chars]	This is related to PER VRF AGGREGATE LABEL feature	mpls-vpn	LOG_STD_ACTION
BGP_MPLS_PER_VRF_AGGRI	3-Error	pervrfaggr label: [chars]	This is related to PER VRF AGGREGATE LABEL feature	mpls-vpn	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BGP_MPLS_SIZE_MISMATCH	3-Error	Label table size [dec] mismatch checkpt key creation failed	BGP MPLS Label Table size mismatch.	mpls-vpn	LOG_STD_ACTION
BGP_MPLS_SIZE_MISMATCH	3-Error	Label table size [dec] mismatch checkpt key creation failed	BGP MPLS Label Table size mismatch.	mpls-vpn	LOG_STD_ACTION
BGP_MPLS_VPN_REWRITE	3-Error	[chars]	Problems with installing updating or removing a VPN rewrite entry in the MPLS forwarding table	mpls-vpn	LOG_STD_ACTION
BGP_MPLS_VPN_REWRITE	3-Error	[chars]	Problems with installing updating or removing a VPN rewrite entry in the MPLS forwarding table	mpls-vpn	LOG_STD_ACTION
BGP_MPLS_VPN_LABEL_ALLOC	7-Debug	Failed to create rewrite prefix [chars] result [chars]	BGP MPLS VPN rewrite creation failed.	mpls-vpn	LOG_STD_ACTION
BGP_MPLS_VPN_LABEL_ALLOC	7-Debug	Failed to create rewrite prefix [chars] result [chars]	BGP MPLS VPN rewrite creation failed.	mpls-vpn	LOG_STD_ACTION
BGP_MPLS_VPN_LABEL_ALLOC	7-Debug	Failed to allocate label for IPv4 prefix [node][dec]	BGP MPLS IPv4 label allocation failed.	mpls-vpn	LOG_STD_ACTION
BGP_MPLS_VPN_LABEL_ALLOC	7-Debug	Failed to allocate label for IPv4 prefix [node][dec]	BGP MPLS IPv4 label allocation failed.	mpls-vpn	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BGP_SESSIONS_ADCHANGE	5-Notice	neighbor [chars] [chars][chars][chars] topology [chars] removed from session [chars]	A BGP neighbor topology was removed from a session. The message describes the change for it. This message appears only if the <del>neighbor [chars] topology [chars] removed from session [chars]</del> command is configured for the BGP process.	-	"This informational message normally appears as routers and BGP neighbors go up or down. However unexpected neighbor loss might indicate high error rates or high packet loss in the network and should be investigated."
BGP_SESSIONS_ADCHANGE	5-Notice	neighbor [chars] [chars][chars][chars] topology [chars] removed from session [chars]	A BGP neighbor topology was removed from a session. The message describes the change for it. This message appears only if the <del>neighbor [chars] topology [chars] removed from session [chars]</del> command is configured for the BGP process.	-	"This informational message normally appears as routers and BGP neighbors go up or down. However unexpected neighbor loss might indicate high error rates or high packet loss in the network and should be investigated."
BGP-2-INSUFMEM	2-Critical	Insufficient memory for [chars] entry	The requested operation could not be accomplished because of a low memory condition.	-	"Reduce other system activity to ease memory demands. If conditions warrant upgrade to a larger memory configuration."
BGP-2-INSUFMEM	2-Critical	Insufficient memory for [chars] entry	The requested operation could not be accomplished because of a low memory condition.	-	"Reduce other system activity to ease memory demands. If conditions warrant upgrade to a larger memory configuration."
BGP-3-ADDBLOCK	3-Error	Unable to add blocked dynamic peer [chars]	Not able to save the specified data due to an error	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
BGP-3-ADDBLOCK	3-Error	Unable to add blocked dynamic peer [chars]	Not able to save the specified data due to an error	-	LOG_STD_ACTION
BGP-3-ADDCID	3-Error	Unable to add Cluster ID [chars].	A addition to a cluster ID structure could not be completed because\n\ of an error.	-	LOG_STD_ACTION
BGP-3-ADDCID	3-Error	Unable to add Cluster ID [chars].	A addition to a cluster ID structure could not be completed because\n\ of an error.	-	LOG_STD_ACTION
BGP-3-ADDNETWORK	3-Error	Unable to add network for [chars] to radix trie	An addition to the radix trie could not be completed because\n\ of an error.	-	LOG_STD_ACTION
BGP-3-ADDNETWORK	3-Error	Unable to add network for [chars] to radix trie	An addition to the radix trie could not be completed because\n\ of an error.	-	LOG_STD_ACTION
BGP-3-ADDRROUTE	3-Error	Unable to add route for [chars] to radix trie	An addition to the radix trie could not be completed because\n\ of an error.	-	LOG_STD_ACTION
BGP-3-ADDRROUTE	3-Error	Unable to add route for [chars] to radix trie	An addition to the radix trie could not be completed because\n\ of an error.	-	LOG_STD_ACTION
BGP-3-BADMASK	3-Error	Attempt to install route for [node] without valid mask in [chars]	A route can not be installed without a valid mask.	-	LOG_STD_ACTION
BGP-3-BADMASK	3-Error	Attempt to install route for [node] without valid mask in [chars]	A route can not be installed without a valid mask.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BGP3-BADROUITEMAP	3-Error	Bad parameters in the route-map [chars] applied for [chars]	This means the route-map should be changed	bgp	"Correct the route-map"
BGP3-BADROUITEMAP	3-Error	Bad parameters in the route-map [chars] applied for [chars]	This means the route-map should be changed	bgp	"Correct the route-map"
BGP3BGP_INCONSISTENT	3-Error	[chars] Inconsistent [chars]	Inconsistency in the data structures	bgp	"This is a rare situation and is a result of internal problem."
BGP3BGP_INCONSISTENT	3-Error	[chars] Inconsistent [chars]	Inconsistency in the data structures	bgp	"This is a rare situation and is a result of internal problem."
BGP3BGP_INTERNAL_ERR	3-Error	[chars]	BGP Internal Error	bgp	LOG_STD_ACTION
BGP3BGP_INTERNAL_ERR	3-Error	[chars]	BGP Internal Error	bgp	LOG_STD_ACTION
BGP3BGP_NOTIFY_READ	3-Error	[chars] connection timed out - has not accepted a message from us for [node]s hold time [node]messages pending transmission.	BGP failed to send UPDATE message to the neighbor for \n\n more than the hold timer. A Hold timer expiry NOTIFICATION \n\n is being sent and the session will be reset \n\n This message appears only if the <del>Hold timer is not</del> \n\n command is configured for the BGP process.	bgp	"BGP failed to send UPDATE message to the neighbor for \n\n more than the hold timer. A Hold timer expiry NOTIFICATION \n\n is being sent and the session will be reset."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BGPBPNOREAD	3-Error	[chars] connection timed out - has not accepted a message from us for [node]s hold time [node]messages pending transmission.	BGP failed to send UPDATE message to the neighbor for \n\ more than the hold timer. A Hold timer expiry NOTIFICATION \n\ is being sent and the session will be reset \n\ This message appears only if the <del>hold-timers-and</del> \n\ command is configured for the BGP process.	bgp	"BGP failed to send UPDATE message to the neighbor for \n\ more than the hold timer. A Hold timer expiry NOTIFICATION \n\ is being sent and the session will be reset."
BGPBPSRIFCURE	3-Error	BGP SR policy failed [chars] - Restarting BGP may be required	This is a rare situation and the system likely is running out of memory.	-	"Reduce other system activity to ease memory demands. If conditions \n\ warrant upgrade to a larger memory configuration. If this message is \n\ after a configuration change the configuration should be reverted. \n\ BGP may need to be unconfigured and reconfigured to fully recover."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BGP3BGP_SR_POLICY_FAILURE	3-Error	BGP SR policy failed [chars] - Restarting BGP may be required	This is a rare situation and the system likely is running out of memory.	-	"Reduce other system activity to ease memory demands. If conditions\n\ warrant upgrade to a larger memory configuration. If this message is\n\ after a configuration change the configuration should be reverted.\n\ BGP may need to be unconfigured and reconfigured to fully recover."
BGP3BGP_SRTE_FAILURE	3-Error	BGP SRTE failed [chars] - Restarting BGP may be required	This is a rare situation and the system likely is running out of memory.	-	"Reduce other system activity to ease memory demands. If conditions\n\ warrant upgrade to a larger memory configuration. If this message is\n\ after a configuration change the configuration should be reverted.\n\ BGP may need to be unconfigured and reconfigured to fully recover."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BGP3-BGP_SRTE_FAILURE	3-Error	BGP SRTE failed [chars] - Restarting BGP may be required	This is a rare situation and the system likely is running out of memory.	-	"Reduce other system activity to ease memory demands. If conditions warrant upgrade to a larger memory configuration. If this message is after a configuration change the configuration should be reverted. BGP may need to be unconfigured and reconfigured to fully recover."
BGP3-BGP_SUBSYSTEM_FAILED	3-Error	BGP subsystem initialization failed: [chars]	The BGP subsystem could not be initialized properly	bgp	LOG_STD_ACTION
BGP3-BGP_SUBSYSTEM_FAILED	3-Error	BGP subsystem initialization failed: [chars]	The BGP subsystem could not be initialized properly	bgp	LOG_STD_ACTION
BGP3-BMP_MEMORY	3-Error	BMP Memory Utilization currently at [node] exceeds threshold [node]	BMP memory utilization tracked by BMP message alloc exceeds maximum memory allocation configured for BMP client	-	"Perform BMP deactivation on excessively churning BGP neighbors receiving large number of routes and reactivate after convergence"
BGP3-BMP_MEMORY	3-Error	BMP Memory Utilization currently at [node] exceeds threshold [node]	BMP memory utilization tracked by BMP message alloc exceeds maximum memory allocation configured for BMP client	-	"Perform BMP deactivation on excessively churning BGP neighbors receiving large number of routes and reactivate after convergence"
BGP-3-DELBLOCK	3-Error	Unable to remove blocked dynamic peer [chars]	Not able to remove the specified data due to an error	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
BGP-3-DELBLOCK	3-Error	Unable to remove blocked dynamic peer [chars]	Not able to remove the specified data due to an error	-	LOG_STD_ACTION
BGP-3-DELCID	3-Error	Unable to remove Cluster ID [chars].	A deletion of a cluster-id could not be completed because\n\ of an error.	-	LOG_STD_ACTION
BGP-3-DELCID	3-Error	Unable to remove Cluster ID [chars].	A deletion of a cluster-id could not be completed because\n\ of an error.	-	LOG_STD_ACTION
BGP-3-DELNETWORK	3-Error	Unable to remove network for [chars] from radix trie	A deletion from the radix trie could not be completed because\n\ of an error.	-	LOG_STD_ACTION
BGP-3-DELNETWORK	3-Error	Unable to remove network for [chars] from radix trie	A deletion from the radix trie could not be completed because\n\ of an error.	-	LOG_STD_ACTION
BGP-3-DELPATH	3-Error	Attempted to delete path from an empty net for [chars]	A BGP path could not be deleted because of an error.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
BGP-3-DELPATH	3-Error	Attempted to delete path from an empty net for [chars]	A BGP path could not be deleted because of an error.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
BGP-3-DELROUTE	3-Error	Unable to remove route for [chars] from radix trie	A deletion from the radix trie could not be completed because\n\ of an error.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BGP-3-DELROUTE	3-Error	Unable to remove route for [chars] from radix trie	A deletion from the radix trie could not be completed because\n\ of an error.	-	LOG_STD_ACTION
<del>BGP-3-DELROUTE</del>	3-Error	Net [chars] from bgp neighbor [chars][chars][chars] [chars] is stale after [chars] rate-limited	-	-	-
<del>BGP-3-DELROUTE</del>	3-Error	Net [chars] from bgp neighbor [chars][chars][chars] [chars] is stale after [chars] rate-limited	-	-	-
<del>BGP-3-EXTCOMMLIST</del>	3-Error	Extcommlist refcount [chars] wrapping	-	bgp	-
<del>BGP-3-EXTCOMMLIST</del>	3-Error	Extcommlist refcount [chars] wrapping	-	bgp	-
BGP-3-INSUFCHUNKS	3-Error	Insufficient chunk pools for [chars] requested size [dec]	The static chunk pools size are not correct.	bgp	"Collect chunk and bgp summary. This is an internal software issue"
BGP-3-INSUFCHUNKS	3-Error	Insufficient chunk pools for [chars] requested size [dec]	The static chunk pools size are not correct.	bgp	"Collect chunk and bgp summary. This is an internal software issue"
BGP-3-MARTIAN_IP	3-Error	[chars] Martian prefix [chars] in [chars]	Invalid MPLS label found in the BGP message	bgp	"This indicates that there is some problem on the remote router"
BGP-3-MARTIAN_IP	3-Error	[chars] Martian prefix [chars] in [chars]	Invalid MPLS label found in the BGP message	bgp	"This indicates that there is some problem on the remote router"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BGP3-MAXPREFIXEXCEED	3-Error	Number of prefixes received from [chars][chars][chars] [dec]/[dec] afi/safi: [dec] exceeds limit [dec]	Number of prefixes received from a neighbor exceeds configured limit	bgp	"Check the number of prefixes received from the neighbor and verify if\n the limit should be increased."
BGP3-MAXPREFIXEXCEED	3-Error	Number of prefixes received from [chars][chars][chars] [dec]/[dec] afi/safi: [dec] exceeds limit [dec]	Number of prefixes received from a neighbor exceeds configured limit	bgp	"Check the number of prefixes received from the neighbor and verify if\n the limit should be increased."
BGP-3-MUTEX	3-Error	Waiting for turn to execute after [dec] seconds.	-	-	LOG_STD_ACTION
BGP-3-MUTEX	3-Error	Waiting for turn to execute after [dec] seconds.	-	-	LOG_STD_ACTION
BGP-3-NEGCOUNTER	3-Error	Prefix-accepted counter negative for peer [chars] prefix [chars]	The counter value for accepted prefixes is wrong and less than zero	bgp	"This is a rare situation and is a result of internal problem.\n\n Reset the session to correct it."
BGP-3-NEGCOUNTER	3-Error	Prefix-accepted counter negative for peer [chars] prefix [chars]	The counter value for accepted prefixes is wrong and less than zero	bgp	"This is a rare situation and is a result of internal problem.\n\n Reset the session to correct it."
BGP-3-NEXTHOPINCONSISTENCY	3-Error	Net [chars] has Nexthop-Label inconsistency	Bgp peers are not consistent with each other.	-	"Track the net copy the error message exactly as it appears and \n report it to your technical support representative."
BGP-3-NEXTHOPINCONSISTENCY	3-Error	Net [chars] has Nexthop-Label inconsistency	Bgp peers are not consistent with each other.	-	"Track the net copy the error message exactly as it appears and \n report it to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BGP-3-NOTIFICATION	3-Error	[chars]	An error condition has been detected in the BGP session. A\n\n NOTIFICATION is being sent/received and the session will be reset.\n\n This message appears only if the <del>&lt;BGP-neighbor&gt;</del> \n\n command is configured for the BGP process.	bgp	"This message represents an error in the session and its origin \n\n should be investigated. If the error is reported periodically copy\n\n it exactly as it appears and report it to your technical support \n\n representative."
BGP-3-NOTIFICATION	3-Error	[chars]	An error condition has been detected in the BGP session. A\n\n NOTIFICATION is being sent/received and the session will be reset.\n\n This message appears only if the <del>&lt;BGP-neighbor&gt;</del> \n\n command is configured for the BGP process.	bgp	"This message represents an error in the session and its origin \n\n should be investigated. If the error is reported periodically copy\n\n it exactly as it appears and report it to your technical support \n\n representative."
<del>BGP-NOTIFICATION_MANY</del>	3-Error	[chars]	Notification sent to all the neighbors of the speaker.\n\n This message appears typically after doing 'clear ip bgp *'.	bgp	"If the error is unexpected report it to your technical support \n\n representative."
<del>BGP-NOTIFICATION_MANY</del>	3-Error	[chars]	Notification sent to all the neighbors of the speaker.\n\n This message appears typically after doing 'clear ip bgp *'.	bgp	"If the error is unexpected report it to your technical support \n\n representative."
BGP-ORF_EXTCOMMUNIT	3-Error	Received misformatted extcommunity list ORF from [chars]	The received prefixlist ORF is misformatted.	bgp	"Check the prefixlist ORF implementation on the neighboring router."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>BGP3</del> ORF_EXICOMMLIST	3-Error	Received misformatted extcommunity list ORF from [chars]	The received prefixlist ORF is misformatted.	bgp	"Check the prefixlist ORF implementation on the neighboring router."
BGP-3-ORF_PFXLIST	3-Error	Received misformatted prefixlist ORF from [chars]	-	-	-
BGP-3-ORF_PFXLIST	3-Error	Received misformatted prefixlist ORF from [chars]	-	-	-
BGP-3-RADIXINIT	3-Error	Radix trie initialization failed	Initialization of the radix tree could not be accomplished because of\n a low memory condition.	-	"Reduce other system activity to ease memory demands. If conditions\n warrant upgrade to a larger memory configuration."
BGP-3-RADIXINIT	3-Error	Radix trie initialization failed	Initialization of the radix tree could not be accomplished because of\n a low memory condition.	-	"Reduce other system activity to ease memory demands. If conditions\n warrant upgrade to a larger memory configuration."
<del>BGP3</del> RS_ISA_PATH_CON	3-Error	[dec] stale-path[chars] deleted from bgp neighbor [chars][chars][chars] [chars] after [chars]	BGP peers are not consistent with each other.	-	"BGP peers are not consistent with each other report it to your\n technical support representative.."
<del>BGP3</del> RS_ISA_PATH_CON	3-Error	[dec] stale-path[chars] deleted from bgp neighbor [chars][chars][chars] [chars] after [chars]	BGP peers are not consistent with each other.	-	"BGP peers are not consistent with each other report it to your\n technical support representative.."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BGP-3-OUTCONSISTENCY	3-Error	Net [chars] in [chars][chars][chars] has rib-out inconsistency for update-group [dec] [chars]- outbound policy [chars] rib-out [chars] [chars][chars]	Bgp peers are not consistent with each other.	-	"Track the net copy the error message exactly as it appears and \n\ report it to your technical support representative."
BGP-3-OUTCONSISTENCY	3-Error	Net [chars] in [chars][chars][chars] has rib-out inconsistency for update-group [dec] [chars]- outbound policy [chars] rib-out [chars] [chars][chars]	Bgp peers are not consistent with each other.	-	"Track the net copy the error message exactly as it appears and \n\ report it to your technical support representative."
BGP-4-AFIMPORT	4-Warning	[chars] prefixes imported to [chars] vrf reached the limit [dec]	Number of prefixes imported from other address-family to a vrf reached configured limit	bgp	"Check the number of imported prefixes from the address-family and "verify if the limit should be increased or the ip vrf import "route-map is configured correctly."
BGP-4-AFIMPORT	4-Warning	[chars] prefixes imported to [chars] vrf reached the limit [dec]	Number of prefixes imported from other address-family to a vrf reached configured limit	bgp	"Check the number of imported prefixes from the address-family and "verify if the limit should be increased or the ip vrf import "route-map is configured correctly."
BGP-4-AO_KEYCHAIN	4-Warning	[chars]	You have configured BGP AO to use a keychain which BGP can not use.	bgp	"Correct the key chain configuration."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BGP4-AO_KEYCHAIN	4-Warning	[chars]	You have configured BGP AO to use a keychain which BGP can not use.	bgp	"Correct the key chain configuration."
BGP-4-ATTRNULL	4-Warning	A NULL attribute has been assigned to a path	The path should have been assigned a valid attribute but was incorrectly assigned a value of NULL	bgp	LOG_STD_ACTION
BGP-4-ATTRNULL	4-Warning	A NULL attribute has been assigned to a path	The path should have been assigned a valid attribute but was incorrectly assigned a value of NULL	bgp	LOG_STD_ACTION
BGP4-BFD_NOT_ONEHOP	4-Warning	BFD is supported for single hop neighbors. [chars] is not single hop neighbor	BFD is supported for single hop neighbors. The configured neighbor is not a single hop hence BFD is not enabled	bgp	"Deconfigure BFD from BGP as multihop " "neighbors are not supported in BFD"
BGP4-BFD_NOT_ONEHOP	4-Warning	BFD is supported for single hop neighbors. [chars] is not single hop neighbor	BFD is supported for single hop neighbors. The configured neighbor is not a single hop hence BFD is not enabled	bgp	"Deconfigure BFD from BGP as multihop " "neighbors are not supported in BFD"
BGP4-RPKI_BAD_RPKI_MESSAGE	4-Warning	BGP received an invalid RPKI message from rpki server [chars] [chars] [chars] hex dump: [chars]	BGP is configured to connect to an RPKI server. That server is sending malformed or incorrectly formatted messages to the router	bgp	"Check the configuration of our RPKI server " "and make sure that the server is updated to the " "latest version "
BGP4-RPKI_BAD_RPKI_MESSAGE	4-Warning	BGP received an invalid RPKI message from rpki server [chars] [chars] [chars] hex dump: [chars]	BGP is configured to connect to an RPKI server. That server is sending malformed or incorrectly formatted messages to the router	bgp	"Check the configuration of our RPKI server " "and make sure that the server is updated to the " "latest version "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>RRRRRCOUSHHOLME</del>	4-Warning	GR reload unsafe configured holdtime[dec] the default safe	You have configured an unsafe holdtime the default safe holdtime value is used instead.	bgp	"Configure the bgp holdtime value which is " " greater than the default safe holdtime" " value"
<del>RRRRRCOUSHHOLME</del>	4-Warning	GR reload unsafe configured holdtime[dec] the default safe	You have configured an unsafe holdtime the default safe holdtime value is used instead.	bgp	"Configure the bgp holdtime value which is " " greater than the default safe holdtime" " value"
<del>RRRRRCOUSHHOLME</del>	4-Warning	GR reload unsafe configured session restart time[dec]	You have configured an unsafe session restart time the default safe session restart time is used instead.	bgp	"Configure the bgp session restart time value " "which is greater than the default safe session" " restart time value"
<del>RRRRRCOUSHHOLME</del>	4-Warning	GR reload unsafe configured session restart time[dec]	You have configured an unsafe session restart time the default safe session restart time is used instead.	bgp	"Configure the bgp session restart time value " "which is greater than the default safe session" " restart time value"
<del>RRRRRCOUSHHOLME</del>	4-Warning	GR reload unsafe configured nsf stalepath time[dec]	You have configured an unsafe nsf stalepath time the default safe stalepath time is used instead.	bgp	"Configure the bgp nsf stalepath time value " "which is greater than the default safe stalepath" "time value."
<del>RRRRRCOUSHHOLME</del>	4-Warning	GR reload unsafe configured nsf stalepath time[dec]	You have configured an unsafe nsf stalepath time the default safe stalepath time is used instead.	bgp	"Configure the bgp nsf stalepath time value " "which is greater than the default safe stalepath" "time value."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BGP4BGP_INH_POLICY	4-Warning	Failed to inherit [chars] policy config '[chars]': [chars]->[chars] [chars] [chars]	BGP neighbor failed to inherit some policy configuration from a policy-template or peer-group because of some configuration incompatibilities. The set of policy configurations that were compatible were still inherited.	bgp	LOG_STD_ACTION
BGP4BGP_INH_POLICY	4-Warning	Failed to inherit [chars] policy config '[chars]': [chars]->[chars] [chars] [chars]	BGP neighbor failed to inherit some policy configuration from a policy-template or peer-group because of some configuration incompatibilities. The set of policy configurations that were compatible were still inherited.	bgp	LOG_STD_ACTION
BGP4BGP_INH_SESSION	4-Warning	Failed to inherit [chars] session config '[chars]': [chars]->[chars] [chars]	BGP neighbor failed to inherit some session configuration from a session-template or peer-group because of some configuration incompatibilities. The set of session configurations that were compatible were still inherited.	bgp	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
BGP4BGP_INH_SESSION	4-Warning	Failed to inherit [chars] session config '[chars]': [chars]->[chars] [chars]	BGP neighbor failed to inherit some session configuration from a session-template or peer-group because of some configuration incompatibilities. The set of session configurations that were compatible were still inherited.	bgp	LOG_STD_ACTION
<del>BGP4BGP_INH_SESSION</del>	4-Warning	BGP neighbor [chars] does not support sending labels	You are attempting to configure send-label either directly or via a template for a neighbor which is connected over IPv6. Doing so is not supported	bgp	"Do not configure send-label for IPv6 peers"
<del>BGP4BGP_INH_SESSION</del>	4-Warning	BGP neighbor [chars] does not support sending labels	You are attempting to configure send-label either directly or via a template for a neighbor which is connected over IPv6. Doing so is not supported	bgp	"Do not configure send-label for IPv6 peers"
BGP4BGP_OUT_OF_MEMORY	4-Warning	BGP resetting because of memory exhaustion.	BGP tried to perform an operation that required additional memory and was not able to allocate it.	bgp	"Reduce other system activity to ease memory " "demands or troubleshoot the system for memory " "fragmentation. If conditions warrant upgrade " "to a larger memory configuration."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BGP4BGP_OUT_OF_MEMORY	4-Warning	BGP resetting because of memory exhaustion.	BGP tried to perform an operation that required additional memory and was not able to allocate it.	bgp	"Reduce other system activity to ease memory " "demands or troubleshoot the system for memory " "fragmentation. If conditions warrant upgrade " "to a larger memory configuration."
BGP4BGP_RF_REG_FAILED	4-Warning	BGP failed to register with the redundancy facility.	BGP failed to register with the redundancy facility. If this happens stateful switchover for BGP will not work because BGP will not be able to sync any data from the active RP to the standby RP.	bgp	LOG_STD_ACTION
BGP4BGP_RF_REG_FAILED	4-Warning	BGP failed to register with the redundancy facility.	BGP failed to register with the redundancy facility. If this happens stateful switchover for BGP will not work because BGP will not be able to sync any data from the active RP to the standby RP.	bgp	LOG_STD_ACTION
BGP4BGP_RPKI_RCR_MISACE	4-Warning	BGP received an RPKI Error Report PDU from rpki server [chars] [chars] [chars] hex dump [chars]	The RPKI server that BGP is connected to is reporting. that the router sent it a malformed or incorrect PDU	bgp	"Check the configuration of the router and RPKI " "server and make sure that the server is updated " "to the latest version "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BGP-RPKI-ERROR-MESSAGE	4-Warning	BGP received an RPKI Error Report PDU from rpki server [chars] [chars] [chars] hex dump [chars]	The RPKI server that BGP is connected to is reporting. that the router sent it a malformed or incorrect PDU	bgp	"Check the configuration of the router and RPKI " "server and make sure that the server is updated " "to the latest version "
BGP4-BGP-SESSION-PARSE	4-Warning	Failed to parse [chars] neighbor config for neighbor [chars] [chars] [chars]	BGP neighbor failed to parse neighbor configuration.	bgp	LOG_STD_ACTION
BGP4-BGP-SESSION-PARSE	4-Warning	Failed to parse [chars] neighbor config for neighbor [chars] [chars] [chars]	BGP neighbor failed to parse neighbor configuration.	bgp	LOG_STD_ACTION
BGP-4-INVALID-SIZE	4-Warning	invalid size for as_array has been entered	-	-	LOG_SID_NO_ACTION
BGP-4-INVALID-SIZE	4-Warning	invalid size for as_array has been entered	-	-	LOG_SID_NO_ACTION
BGP-MAX-EXT-COMM-EXCHD	4-Warning	Exceeded limit of [dec] extended communities per advertised prefix	An attempt was made to advertise a prefix with an extended\n\n community attribute containing more extended communities\n\n than the allowed limit.	bgp	"Reduce the configured number of Route Targets or other extended\n\n communities that will be added to prefix advertisements so that\n\n the limit is not exceeded"
BGP-MAX-EXT-COMM-EXCHD	4-Warning	Exceeded limit of [dec] extended communities per advertised prefix	An attempt was made to advertise a prefix with an extended\n\n community attribute containing more extended communities\n\n than the allowed limit.	bgp	"Reduce the configured number of Route Targets or other extended\n\n communities that will be added to prefix advertisements so that\n\n the limit is not exceeded"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BGP-4-MAXDYNBR	4-Warning	BGP:DN: Cannot create new neighbor [chars] for\nrange [chars]: maximum number of [dec] dynamic neighbors limit reached	Number of dynamically created subnet range neighbors reaches warning limit	bgp	"Check the number of listen range limit configured " "for dynamic subnet neighbors\n and verify if the " "limit should be increased."
BGP-4-MAXDYNBR	4-Warning	BGP:DN: Cannot create new neighbor [chars] for\nrange [chars]: maximum number of [dec] dynamic neighbors limit reached	Number of dynamically created subnet range neighbors reaches warning limit	bgp	"Check the number of listen range limit configured " "for dynamic subnet neighbors\n and verify if the " "limit should be increased."
BGP-4-MAXPFX	4-Warning	Number of prefixes received from [chars][chars][chars] [dec]/[dec] afi/safi reaches [dec] max [dec]	Number of prefixes received from a neighbor reaches warning limit	bgp	"Check the number of prefixes received from the neighbor and verify if\n the limit should be increased."
BGP-4-MAXPFX	4-Warning	Number of prefixes received from [chars][chars][chars] [dec]/[dec] afi/safi reaches [dec] max [dec]	Number of prefixes received from a neighbor reaches warning limit	bgp	"Check the number of prefixes received from the neighbor and verify if\n the limit should be increased."
BGP4MAXPFXDISCARD	4-Warning	[chars][chars][chars] [dec]/[dec] afi/safi: At least one prefix has been discarded	Notification that the neighbor has discarded its first prefix	bgp	"Check the number of prefixes received from the neighbor and verify if\n the limit should be increased."
BGP4MAXPFXDISCARD	4-Warning	[chars][chars][chars] [dec]/[dec] afi/safi: At least one prefix has been discarded	Notification that the neighbor has discarded its first prefix	bgp	"Check the number of prefixes received from the neighbor and verify if\n the limit should be increased."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BGP-4-MSGDUMP	4-Warning	unsupported or mal-formatted message received from [chars]: \n[chars]	The remote BGP peer sent in a unsupported or mal-formatted message \n\ which caused the notification sent	-	LOG_SID_NO_ACTION
BGP-4-MSGDUMP	4-Warning	unsupported or mal-formatted message received from [chars]: \n[chars]	The remote BGP peer sent in a unsupported or mal-formatted message \n\ which caused the notification sent	-	LOG_SID_NO_ACTION
BGP4MULTIPATH_LOOP	4-Warning	This may cause traffic loop if not used properly command accepted.	Should be configured only at one of the edge routers that have ibgp \n\ peering among themselves.	bgp	LOG_STD_ACTION
BGP4MULTIPATH_LOOP	4-Warning	This may cause traffic loop if not used properly command accepted.	Should be configured only at one of the edge routers that have ibgp \n\ peering among themselves.	bgp	LOG_STD_ACTION
BGP-4-NBRTRACK	4-Warning	Route Tracking failed on memory. Neighbor tracking for route-fall-over will stop	Route tracking system failed to allocate memory. Neighbor route fall-over will stop tracking neighbor routes.	bgp	"Route tracking system failed to allocate memory. Neighbor " "route fall-over will stop tracking neighbor routes so that " "it can give away some memory. If you think system is stable " "then reconfigure neighbor route fall-over. If you get this " "message neighbor route-falover has been deconfigured."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BGP-4-NBRTRACK	4-Warning	Route Tracking failed on memory. Neighbor tracking for route-fall-over will stop	Route tracking system failed to allocate memory. Neighbor route fall-over will stop tracking neighbor routes.	bgp	"Route tracking system failed to allocate memory. Neighbor " "route fall-over will stop tracking neighbor routes so that " "it can give away some memory. If you think system is stable " "then reconfigure neighbor route fall-over. If you get this " "message neighbor route-fallover has been deconfigured."
BGP-4-NORTRID	4-Warning	BGP could not pick a router-id. Please configure manually.	BGP router-id has not been manually configured and BGP is unable to allocate a router ID from the IPv4 address of one of its interfaces.	bgp	"Make sure that there is at least one interface that is up and has a " "valid IPv4 address or configure the router-id manually."
BGP-4-NORTRID	4-Warning	BGP could not pick a router-id. Please configure manually.	BGP router-id has not been manually configured and BGP is unable to allocate a router ID from the IPv4 address of one of its interfaces.	bgp	"Make sure that there is at least one interface that is up and has a " "valid IPv4 address or configure the router-id manually."
BGP-4-RIDSYN	4-Warning	BGP routes are redistributed to OSPF. For synchronization to work you must manually configure the BGP router-id to be the same as the OSPF router-id.	For synchronization to work BGP router-id must be the same as the OSPF router-id at all times that the router is up.	bgp	"If synchronization is turned on between one instance of OSPF\n" "and BGP make sure to manually configure a BGP router-id which\n" "is identical to the one of that particular OSPF instance."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
BGP-4-RIDSYNC	4-Warning	BGP routes are redistributed to OSPF. For synchronization to work you must manually configure the BGP router-id to be the same as the OSPF router-id.	For synchronization to work BGP router-id must be the same as the OSPF router-id at all times that the router is up.	bgp	"If synchronization is turned on between one instance of OSPF\n" "and BGP make sure to manually configure a BGP router-id which\n" "is identical to the one of that particular OSPF instance."
BGP-4-VPN_NH_IF	4-Warning	Nexthop [chars] may not be reachable from neighbor [chars] - not a loopback	We are sending a vpn route to this IBGP neighbor and the nexthop is one\n\ of our directly connected physical interfaces.\n\ The label for the next hop address may be removed in the MPLS cloud\n\ one hop soon. Since the P routers don't have VPN information\n\ they don't know where to forward packets with the BGP label.\n\ This could break connectivity between VPN sites.	bgp	"Use loopback interfaces as the nexthops for vpn IBGP neighbors."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BGP-4-VPN_NH_IF	4-Warning	Nexthop [chars] may not be reachable from neighbor [chars] - not a loopback	We are sending a vpn route to this IBGP neighbor and the nexthop is one of our directly connected physical interfaces. The label for the next hop address may be removed in the MPLS cloud one hop soon. Since the P routers don't have VPN information they don't know where to forward packets with the BGP label. This could break connectivity between VPN sites.	bgp	"Use loopback interfaces as the nexthops for vpn IBGP neighbors."
BGP4-VPNv4NH_MASK	4-Warning	Nexthop [node] may not be reachable from neighbor [chars] - not /32 mask	We are sending a vpnv4 route to this IBGP neighbor the nexthop address is our loopback which does not have /32 mask we are using OSPF on this loopback and the OSPF network type of this interface is LOOPBACK. OSPF advertizes this address as a host route with mask /32 regardless what mask is configured on the interface. Configure the loopback used as the next hop with ip host mask	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BGP4-VPN4-NH_MASK	4-Warning	Nexthop [node] may not be reachable from neighbor [chars] - not /32 mask	We are sending a vpnv4 route to this IBGP neighbor the nexthop\n address is our loopback which does not have /32 mask we are\n using OSPF on this loopback and the OSPF network type of this\n interface is LOOPBACK. OSPF advertizes this address\n as a host route with mask /32 regardless what mask is <del>configured from the</del> Configure the loopback used as the next hop with ip host mask	-	-
BGP-5-ADJCHANGE	5-Notice	neighbor [chars][chars][chars][chars] [chars]	A BGP neighbor has either come up or gone down. The message\n describes the change for it. This message appears only if the \n <del>&lt;HighErrorRate&gt;</del> command is configured for\n the BGP process.	-	"This informational message normally appears as routers and\n BGP neighbors go up or down. However unexpected neighbor loss\n might indicate high error rates or high packet loss in the\n network and should be investigated."
BGP-5-ADJCHANGE	5-Notice	neighbor [chars][chars][chars][chars] [chars]	A BGP neighbor has either come up or gone down. The message\n describes the change for it. This message appears only if the \n <del>&lt;HighErrorRate&gt;</del> command is configured for\n the BGP process.	-	"This informational message normally appears as routers and\n BGP neighbors go up or down. However unexpected neighbor loss\n might indicate high error rates or high packet loss in the\n network and should be investigated."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>BGP</del> AGRESSES_SCAN_TIME	5-Notice	bgp scan-time configuration less than [dec] seconds can cause high cpu usage by BGP Scanner.	bgp scan-time configuration less than 15 seconds can cause high cpu usage by BGP Scanner.	-	"bgp scan-time configuration less than 15 seconds can cause high cpu " "usage by BGP Scanner. It is recommended to monitor the cpu usage of " "BGP Scanner."
<del>BGP</del> AGRESSES_SCAN_TIME	5-Notice	bgp scan-time configuration less than [dec] seconds can cause high cpu usage by BGP Scanner.	bgp scan-time configuration less than 15 seconds can cause high cpu usage by BGP Scanner.	-	"bgp scan-time configuration less than 15 seconds can cause high cpu " "usage by BGP Scanner. It is recommended to monitor the cpu usage of " "BGP Scanner."
<del>BGP</del> BCP_MAX_MSG_LIMIT	5-Notice	BGP failed to send update message because the message size reached bgp maximum message size 4096.	BGP failed to send update message because the message size reached bgp maximum message size 4096. If this happens check the bgp paths that are learned if any of the paths have got many as-paths or ext-communities	-	LOG_STD_ACTION
<del>BGP</del> BCP_MAX_MSG_LIMIT	5-Notice	BGP failed to send update message because the message size reached bgp maximum message size 4096.	BGP failed to send update message because the message size reached bgp maximum message size 4096. If this happens check the bgp paths that are learned if any of the paths have got many as-paths or ext-communities	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BGP_MAXNSR_MGMT	5-Notice	BGP failed to send update message because the IPC to support NSR is having size less than the requested size.	BGP failed to send update message because the message size is bigger than the IPC of NSR. And the neighbor may not support route refresh capability. If this happens manually hard clear the neighbor session.	bgp	LOG_STD_ACTION
BGP_MAXNSR_MGMT	5-Notice	BGP failed to send update message because the IPC to support NSR is having size less than the requested size.	BGP failed to send update message because the message size is bigger than the IPC of NSR. And the neighbor may not support route refresh capability. If this happens manually hard clear the neighbor session.	bgp	LOG_STD_ACTION
BGP_UPDATE_LENGTH	5-Notice	BGP failed to send update message because the message buffer size is calculated to be zero	BGP failed to send update message because the message buffer size is calculated to be zero. If this happens check the bgp buffer size being calculated while sending the update for both 4byte/2byte speakers.	bgp	LOG_STD_ACTION
BGP_UPDATE_LENGTH	5-Notice	BGP failed to send update message because the message buffer size is calculated to be zero	BGP failed to send update message because the message buffer size is calculated to be zero. If this happens check the bgp buffer size being calculated while sending the update for both 4byte/2byte speakers.	bgp	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BGP5BMP_ADICHANGE	5-Notice	BMP Server [node]- [chars]/[node]connection [chars]	A BMP server TCP connection has either come up or gone down	-	"This informational message normally appears as\n\ BMP servers come up or go down. If the BMP server keeps flapping\n\ its connection continuously for whatever reason flapping delay\n\ timer kicks in to regulate reconnection attempts"
BGP5BMP_ADICHANGE	5-Notice	BMP Server [node]- [chars]/[node]connection [chars]	A BMP server TCP connection has either come up or gone down	-	"This informational message normally appears as\n\ BMP servers come up or go down. If the BMP server keeps flapping\n\ its connection continuously for whatever reason flapping delay\n\ timer kicks in to regulate reconnection attempts"
BGP5BMP_REFRESH_CAP_CVD	5-Notice	Refresh cap not received from BGP nbr session [chars] BMP monitoring not possible	BMP monitoring of neighbor session is not possible in\n\ route-refresh scheme for session if refresh cap is not negotiated	-	"This informational message indicates BMP" " monitoring of BGP session is not possible without upgrading BGP peer" " to a software version that supports route-refresh cap"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BGP_REFRESH_CAP_CD	5-Notice	Refresh cap not received from BGP nbr session [chars] BMP monitoring not possible	BMP monitoring of neighbor session is not possible in\n\n route-refresh scheme for session if refresh cap is not negotiated	-	"This informational message indicates BMP" " monitoring of BGP session is not possible without upgrading BGP peer" " to a software version that supports route-refresh cap"
BGP_DAMPENING_DECAY_TIME	5-Notice	Decay time from maximum penalty to suppress penalty is [dec] secs. Maximum penalty: [dec] suppress penalty: [dec]	Configured dampening parameters may not be feasible. Time window between maximum penalty and suppress penalty may be low.	bgp	"If you think decay time from maximum penalty to suppress penalty " "is too low increase half-life time or maximum penalty values."
BGP_DAMPENING_DECAY_TIME	5-Notice	Decay time from maximum penalty to suppress penalty is [dec] secs. Maximum penalty: [dec] suppress penalty: [dec]	Configured dampening parameters may not be feasible. Time window between maximum penalty and suppress penalty may be low.	bgp	"If you think decay time from maximum penalty to suppress penalty " "is too low increase half-life time or maximum penalty values."
BGP_DAMPENING_MAX_PENALTY	5-Notice	Maximum penalty [dec] is more than allowed maximum [dec].	Configured dampening parameters may not be feasible. Maximum penalty is more than allowed maximum. Dampening will be OFF.	bgp	"Depending on the value of maximum penalty adjust maximum suppress " "time. Since maximum penalty is more than allowed maximum reduce " "maximum suppress time. Maximum penalty should be greater than " "suppress penalty but less than maximum allowable penalty."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>RDAMPENLOWMAXPENALTY</del>	5-Notice	Maximum penalty [dec] is more than allowed maximum [dec].	Configured dampening parameters may not be feasible. Maximum penalty is more than allowed maximum. Dampening will be OFF.	bgp	"Depending on the value of maximum penalty adjust maximum suppress " "time. Since maximum penalty is more than allowed maximum reduce " "maximum suppress time. Maximum penalty should be greater than " "suppress penalty but less than maximum allowable penalty."
<del>RDAMPENLOWMAXPENALTY</del>	5-Notice	Maximum penalty [dec] is less than suppress penalty [dec]	Configured dampening parameters may not be feasible. Maximum penalty is less than configured suppress penalty. Dampening will be OFF	bgp	"Depending on the value of maximum penalty adjust maximum suppress " "time. Since maximum penalty is less than suppress penalty increase " "maximum suppress time. Maximum penalty should be greater than " "suppress penalty but less than maximum allowable penalty."
<del>RDAMPENLOWMAXPENALTY</del>	5-Notice	Maximum penalty [dec] is less than suppress penalty [dec]	Configured dampening parameters may not be feasible. Maximum penalty is less than configured suppress penalty. Dampening will be OFF	bgp	"Depending on the value of maximum penalty adjust maximum suppress " "time. Since maximum penalty is less than suppress penalty increase " "maximum suppress time. Maximum penalty should be greater than " "suppress penalty but less than maximum allowable penalty."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BGP-5-NBR_RESET	5-Notice	Neighbor [chars] reset [chars]	A BGP neighbor has been marked for reset. After all of resources assigned \n\ for the neighbor are freed the adjacency will be cleared down.\n\ This message appears only if the <del>&lt;BGP neighbors&gt;</del> \n\ command is configured for the BGP process.	bgp	"This message represents an error in the session was not reset \n\ because of administrative action of other valid event like an interface \n\ flap. If no valid event is detected report it to your technical support\n\ representative."
BGP-5-NBR_RESET	5-Notice	Neighbor [chars] reset [chars]	A BGP neighbor has been marked for reset. After all of resources assigned \n\ for the neighbor are freed the adjacency will be cleared down.\n\ This message appears only if the <del>&lt;BGP neighbors&gt;</del> \n\ command is configured for the BGP process.	bgp	"This message represents an error in the session was not reset \n\ because of administrative action of other valid event like an interface \n\ flap. If no valid event is detected report it to your technical support\n\ representative."
BGP-SLOWPEER_DETECT	5-Notice	Neighbor [chars][chars][chars] [chars] has been detected as a slow peer.	The BGP neighbor has been detected as a slow peer.	-	"The reason that the neighbor can not consume BGP update messages at the " required rate should be investigated. Possible causes could be network " congestion or high load on the peer."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BGP-5-SLOWPEER_DETECT	5-Notice	Neighbor [chars][chars][chars] [chars] has been detected as a slow peer.	The BGP neighbor has been detected as a slow peer.	-	"The reason that the neighbor can not consume BGP update messages at the " "required rate should be investigated. Possible causes could be network " "congestion or high load on the peer."
BGP-5-SLOWPEER_RECOVER	5-Notice	Slow peer [chars][chars][chars] [chars] has recovered.	The slow BGP peer has recovered.	-	"This message is informational. The slow-peer has recovered."
BGP-5-SLOWPEER_RECOVER	5-Notice	Slow peer [chars][chars][chars] [chars] has recovered.	The slow BGP peer has recovered.	-	"This message is informational. The slow-peer has recovered."
BGP-5-VERSION_WRAP	5-Notice	bgp version wrapped of [chars]	The BGP table version has reached its maximum value and\n\ wrapped around. The message describes this event.	-	"This message is informational. However frequent occurrences\n\ of such event might indicate high error rates or high packet\n\ loss in the network and should be investigated."
BGP-5-VERSION_WRAP	5-Notice	bgp version wrapped of [chars]	The BGP table version has reached its maximum value and\n\ wrapped around. The message describes this event.	-	"This message is informational. However frequent occurrences\n\ of such event might indicate high error rates or high packet\n\ loss in the network and should be investigated."
BGP-6-ASPATH	6-Information	[chars] AS path [chars] received from [chars]: [chars]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BGP-6-ASPATH	6-Information	[chars] AS path [chars] received from [chars]: [chars]	-	-	-
BGP-6-ATTR_DUP	6-Information	BGP update error: [chars] Duplicate [chars] attribute dropped by error handling	-	-	-
BGP-6-ATTR_DUP	6-Information	BGP update error: [chars] Duplicate [chars] attribute dropped by error handling	-	-	-
BGP-6-ATTR_FLAG	6-Information	BGP update error: [chars] Wrong flag 0x[hec] received for [chars] attribute fixed by error handling	-	-	-
BGP-6-ATTR_FLAG	6-Information	BGP update error: [chars] Wrong flag 0x[hec] received for [chars] attribute fixed by error handling	-	-	-
BGP-6-ATTR_MISSING	6-Information	BGP update error: [chars] Missing mandatory attribute treat-as-withdraw by error handling	-	-	-
BGP-6-ATTR_MISSING	6-Information	BGP update error: [chars] Missing mandatory attribute treat-as-withdraw by error handling	-	-	-
BGP-6-ATTR_WRONG_LEN	6-Information	BGP update error: [chars] Wrong length [dec] for [chars] dropped by error handling	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BGP6-ATTR_WRONG_LEN	6-Information	BGP update error: [chars] Wrong length [dec] for [chars] dropped by error handling	-	-	-
BGP-6-BIGCHUNK	6-Information	Big chunk pool request [dec] for [chars]. Replenishing with malloc	-	-	-
BGP-6-BIGCHUNK	6-Information	Big chunk pool request [dec] for [chars]. Replenishing with malloc	-	-	-
BGP6-MALFORMED_ATTRSET	6-Information	Malformed attribute attr-set received from [chars]	-	-	-
BGP6-MALFORMED_ATTRSET	6-Information	Malformed attribute attr-set received from [chars]	-	-	-
BGP6-MALFORMED_ATTR	6-Information	Malformed attribute in [chars]	-	-	-
BGP6-MALFORMED_ATTR	6-Information	Malformed attribute in [chars]	-	-	-
BGP6-MSGDUMP_LIMIT	6-Information	unsupported or mal-formatted message received from [chars]: \n[chars]	-	-	-
BGP6-MSGDUMP_LIMIT	6-Information	unsupported or mal-formatted message received from [chars]: \n[chars]	-	-	-
BGP-6-NEXTHOP	6-Information	Invalid next hop [node]received from [chars]: [chars]	The remote BGP peer sent in a route with an illegal next hop.The given\n\n route was ignored.	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BGP-6-NEXTHOP	6-Information	Invalid next hop [node]received from [chars]: [chars]	The remote BGP peer sent in a route with an illegal next hop.The given\n\ route was ignored.	-	LOG_SID_NO_ACTION
<del>BGP-6-NEXTHOP</del>	6-Information	V6 nexthop not supported for afi/safi [dec]/[dec]	The remote BGP peer sent in a route with an invalid optional transitive attribute.	-	"This information message appears as router detects malformed\n\ optional attributes in BGP updates. However frequent occurrences\n\ of such event should be investigated."
<del>BGP-6-NEXTHOP</del>	6-Information	V6 nexthop not supported for afi/safi [dec]/[dec]	The remote BGP peer sent in a route with an invalid optional transitive attribute.	-	"This information message appears as router detects malformed\n\ optional attributes in BGP updates. However frequent occurrences\n\ of such event should be investigated."
<del>BGP-6-ROUEROBACKIMR</del>	6-Information	BGP Router timed out waiting on dependant events	BGP Router timed out waiting on dependant events and will continue with its initializations.	bgp	LOG_SID_NO_ACTION
<del>BGP-6-ROUEROBACKIMR</del>	6-Information	BGP Router timed out waiting on dependant events	BGP Router timed out waiting on dependant events and will continue with its initializations.	bgp	LOG_SID_NO_ACTION
<del>INDIALMSEEXTWGD</del>	2-Critical	ERRMSG_NOFLAGS	-	-	-
<del>INDIALMSEEXTWGD</del>	2-Critical	ERRMSG_NOFLAGS	-	-	-
<del>INDIABL</del> <del>INDIABL</del> <del>ERR</del>	3-Error	Bind label error [chars]	An error happen when create/lookup bind label.	<del>INDIABL_COMPONENT</del>	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>BNOS_LOGIN3AUTHERR</del>	3-Error	iosxe-binos-utils	The authentication process failed	-	-
<del>BNOS_LOGIN3NOICR00T</del>	3-Error	iosxe-binos-utils	login attempted to run without proper credentials.	"login can not be run without proper credentials."	LOG_SID_NO_ACTION
<del>BNOS_LOGIN3NOTTY</del>	3-Error	iosxe-binos-utils	login attempted but stdin is not a tty	"login can not be run without stdin set to tty"	LOG_SID_NO_ACTION
<del>BNOS_LOGIN3PAMERR</del>	3-Error	iosxe-binos-utils	PAM error[chars] encountered.	"The system encountered a PAM error."	LOG_SID_NO_ACTION
<del>BNOS_LOGIN3PWNCENT</del>	3-Error	iosxe-binos-utils	No entry for user[chars] in passwd file	"The username/password authenticated correctly	-
<del>BNOS_LOGIN3PAMAUHDENY</del>	6-Information	iosxe-binos-utils	User was not authenticated	"User was not authenticated"	LOG_SID_NO_ACTION
<del>BNOS_LOGIN3PAMMAXIRES</del>	6-Information	iosxe-binos-utils	Maximum number of retries exceeded.	"The user tried and failed too many times to login."	LOG_SID_NO_ACTION
<del>BIP3BIP_PERFORMANCE</del>	3-Error	iosxe-binos-utils	buffer size request %u failed	"An internal buffer allocation has failed."	"No action is required. If the problem persists
<del>BIP3SESSION_INVALID</del>	3-Error	Invalid Session Slot=[dec] Session=0x[node]x	An internal software error has occurred. The IPC session was incorrectly not deleted when the slot went down.	DDTS_COMPONENT	LOG_STD_ACTION
<del>BIP6SESSION_DOWN</del>	6-Information	IPCCL Session to [chars][dec] is DOWN	An internal software debug info to notify IPCCL session to specific slot went down.	DDTS_COMPONENT	"No action is required."
<del>BIP6-SESSION_UP</del>	6-Information	IPCCL Session to [chars][dec] is UP	An internal software debug info to notify IPCCL session to specific slot went up.	DDTS_COMPONENT	"No action is required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IOSXE_MADDERCOM_MASA</del>	3-Error	iosxe-binos-utils	TDL epoch error on marshal %d unexpected:[chars]	The bipe manager has attempt to marshal a message to be sent. The tdl library has generated an error on marshal that is unexpected. The message was not sent.	This is unexpected. Report this to Cisco TAC
BIT-4-OUTOFRANGE	4-Warning	bit [dec] is not in the expected range of [dec] to [dec]	An invalid request was detected by the bitlist subsystem.	cosmos	LOG_SID_SH_TECH_ACTION
BIT-4-OUTOFRANGE	4-Warning	bit [dec] is not in the expected range of [dec] to [dec]	An invalid request was detected by the bitlist subsystem.	cosmos	LOG_SID_SH_TECH_ACTION
<del>BACKROLE_BBNDEFICED</del>	5-Notice	cbr-platform-infra	%s non-maskable interrupt detected	"NMI	-
<del>BOOSTER_MNOCER_MOD</del>	2-Critical	Boost capability removed. Throughput will be defaulted on next reload. Reason: [chars]	Device no longer support boost throughput level	isr-smart-lic	-
<del>BOOT_HOST_DHCPABRNG</del>	3-Error	[chars]	-	-	-
<del>BOOT_HOST_DHCP4WARNG</del>	4-Warning	[chars]	Configure a Device via DHCP feature has experienced an unexpected condition which did not cause a failure but suggests things did not go correctly.	-	LOG_SID_NO_ACTION
<del>BOOT_HOST_DHCP6INFO</del>	6-Information	[chars]	This is an informational message generated while configuring a device via the dhcp feature.	-	LOG_SID_NO_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BOOTAPP_STARTFAILCRIT	0-Emergency	iosxe-binos-utils	Failed to launch a critical process[chars]	"A process important to the chassis has failed."	"Note the time of the message and investigate the error message logs to learn more about the problem. If the problem persists or cannot be resolved
BOOTBOOT_BADDIMM	0-Emergency	iosxe-binos-utils	WARNING: This memory configuration:[chars] is not supported on this platform!	"This memory configuration isn't supported on this platform."	"Change memory configuration to a supported one."
BOOTBOOT_CMHEIFAIL	0-Emergency	iosxe-binos-utils	Critical boot tasks failed:[chars]	"The system has encountered a critical failure preventing successful boot."	"Note the time of the error message and system logs for additional information on the problem. If you are unable to resolve this problem
BOOTBOOT_NOSPACE	0-Emergency	iosxe-binos-utils	WARNING: No space on bootflash[chars] for packages	-	-
BOOTBOOT_VERIFYCORRUPT	0-Emergency	iosxe-binos-utils	Verity device[chars] is corrupted. Reloading FRU.	"The integrity check of the verity mapped device has failed."	"Check image integrity."
BOOT0-DRV_INITFAIL	0-Emergency	iosxe-binos-utils	%s driver failed to initialize properly	"A kernel driver that is critical to the functioning of the system failed to initialize properly."	"Note the time of the error message and check the kernel error logs for additional information on the problem. If you are unable to resolve this problem

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BOOT0DRV_LOADFAIL	0-Emergency	iosxe-binos-utils	Failed to load driver[chars] ([chars] )	"A kernel driver that was critical to the functioning of the system failed to load."	"Note the time of the error message and check the kernel error logs for additional information on the problem. If you are unable to resolve this problem
BOOT3APP_STARTFAIL	3-Error	iosxe-binos-utils	Failed to launch process[chars]	"A process that does not affect the forwarding of network traffic failed to start."	"If the failed process is not something that needs to be corrected
<del>BOOTMCHNFRMCKEASD</del>	3-Error	iosxe-binos-utils	No format	Failed to get remote switch information for compatibility check. This could be for multiple underlying failures such as reachability of peer member lost or remote member not responding	If standby is stuck retry with reloading standby. If standby does not comes up even after reloading attempts
<del>BOOTMCMESDCE</del>	3-Error	iosxe-binos-utils	Incompatible software detected. Details:[chars]	Incompatible software is detected on target fru/chassis.	Upgrade manually or check auto-upgrade configuration.
<del>BOOTMCHRESUPCD</del>	3-Error	iosxe-binos-utils	Mismatch detected. Details:[chars]	Incompatible stacked setup detected on target fru/chassis.	Switch with mismatch require to be reloaded
<del>BOOTMSUMCDCE</del>	3-Error	iosxe-p-smu	SMU file[chars] missing and system impact will be unknown	SMU file not found during bootup.	System will be running without the fix from the SMU
<del>BOOTMSURCREDAE</del>	3-Error	iosxe-p-smu	Failed to correct the SMU mismatch between the running version on active and[chars]. Pls abort the smu installation using 'install abort'	"The system tried to recover from the mismatch	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BOOTSMU_SYNC_FAIL	3-Error	iosxe-p-smu	Failed to copy the SMUs to switch[chars]. Reload cancelled and switch will be declared incompatible	SMU sync failed on newly joined switch.	Switch with mismatch will be declared incompatible. Check the space on the remote switch. Check whether the file is present on active.
COMP_SW_TREE_FAIL	3-Error	iosxe-binos-utils	COMP_SW_TREE directory is being generated	"If chasfs/issu directory is missing on active	-
DUAL_BOOT_MEMORY	3-Error	iosxe-binos-utils	Dual IOS boot indicated in ROMMON (%s)	-	-
EXT_ISSU_CHK_FAIL	3-Error	iosxe-binos-utils	Detected booting up of standby RP with image beyond the ISSU domain of active RP by the[chars] process. The standby RP is forced to reset.	"If standby RP is booted up with an image which is beyond the ISSU software domain of the active RP's image	-
FLASH_READ_FAIL	3-Error	iosxe-binos-utils	failed to get[chars] from flash	"Property not populated."	"No user action is necessary. This is informative message."
3-FSCK_FAILED	3-Error	iosxe-binos-utils	filesystem on[chars] contains errors fsck couldn't resolve.	"A device's file system consistency check failed & fsck utility was unable to repair it."	"If this occurs frequently
MODE_CHANGE_FAIL	3-Error	[chars]. Requested by [chars]	This log indicates that device-mode operation failure While device-mode change and there are errors seen and requested by specified client	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BOOT3OPMODE_ERR	3-Error	iosxe-binos-utils	Device-mode error :[chars]	"The system has encountered a device-mode failure during boot."	"The device-mode booting err information captured with console logging For information
<del>BOOT4CORECLEANUP_ERR</del>	3-Error	iosxe-binos-utils	Partial core clean up failed for[chars]:[chars]	"During RP boot	-
BOOT3SYSD_STARTIFAIL	3-Error	iosxe-binos-utils	Failed to launch boot task[chars] ([chars] )	"A boot task failed to start."	"If the failed boot task is not something that needs to be corrected
BOOT4BOOT_CORRUPT	4-Warning	iosxe-binos-utils	Boot Partition corrupted.	"Boot Parition on the router is corrupted. Router booting from bootflash."	"Contact Cisco technical support."
<del>BOOT3RBSYNC_FAIL</del>	5-Notice	iosxe-p-smu	Failed to sync the SMUs to switch[chars]. Install rollback operation may get affected.	Rollback point sync failed on newly joined switch.	Switch will not have the rollback points. Check the space on the remote switch.
<del>BOOT3SMUMISMATCH</del>	5-Notice	iosxe-p-smu	SMU mismatch from active detected. SMUs will be copied and switch[chars] will be reloaded	SMU mismatch found on newly joined switch.	Switch with mismatch will be reloaded
<del>BOOT3SMURUNTIME</del>	5-Notice	iosxe-p-smu	Running SMU mismatch from active detected. System will try to correct it	-	-
<del>BOOT3SMUINCOMPLETE</del>	5-Notice	iosxe-p-smu	SMU file[chars] active temporary... SMU commit is pending	SMU file is active temporary and 'install commit' needs to be run to make it permanent. Else reload without commit will deactivate this SMU.	Execute 'install commit' before reload to make activate permanent.

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IOSXEP-SMU-DEACT</del>	5-Notice	iosxe-p-smu	SMU file[chars] deactive temporary... SMU commit is pending	SMU file is deactive temporary and 'install commit' needs to be run to make it permanent. Else reload without commit will active this SMU again.	Execute 'install commit' before reload to make deactivate permanent.
BOOT-5-OPMODE_LOG	5-Notice	iosxe-binos-utils	Device-mode logging :[chars]	"The device-mode booting information.:"	"The device-mode booting information captured with console logging For information
BOOT-6-APP_START	6-Information	iosxe-binos-utils	The process[chars] has started	"The process has successful launched and begun executing."	"No user action is necessary. This message indicates the system is functioning normally and is provided for informational purposes only."
BOOT-6-DRV_LOAD	6-Information	iosxe-binos-utils	Loaded driver[chars]	"A kernel driver that was critical to the functioning of the system was successfully loaded."	"No user action is necessary. This message indicates the system is functioning normally and is provided for informational purposes only."
BOOT-6-MODECHANGE	6-Information	[chars]	This log indicates that device-mode operation is successful While mode change and there are no errors seen	-	LOG_SID_NO_ACTION
<del>IOSXEP-CORERMV</del>	6-Information	iosxe-binos-utils	Removed incomplete core file:[chars]	"On boot of the RP	-
BP-CRIMSON-3-INITFAIL	3-Error	Initialization of the IOS BP Crimson facility failed [chars].	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BPCRMONREMOBLOCKED	3-Error	Remote access to the IOS BP Crimson facility was blocked [chars].	An unexpected condition has occurred which resulted in the IOS BP Crimson facility failing to access the remote database. This is a potentially serious problem and may mean that the IOS BP Crimson facility may not be able to report on or act on remote configuration or operational state.	bp-crimson	LOG_STD_ACTION
BPE3INVALID_IDB_TYPE	3-Error	Invalid IDB type passed [[dec] - [chars]]	Idb type passed is not supported by this function	-	LOG_STD_ACTION
BPE-3-INVALID_MAC	3-Error	Invalid MAC for slot [[dec]/[dec]/[dec]]	Could not get proper MAC address for a given slot/subcard/port	-	LOG_STD_ACTION
BPE-3-INVALID_PORT	3-Error	Port number[[dec]] is not valid	Port number is invalid	-	LOG_STD_ACTION
BPE-3-INVALID_SLOT	3-Error	Slot number[[dec]] is not valid	Slot number is invalid	-	LOG_STD_ACTION
BPE3MALLOC_FAILURE	3-Error	Malloc Failed [[chars]]	Could not allocate memory	-	LOG_STD_ACTION
BPE3NOT_REGISTERED	3-Error	Interface[[chars]] MAC is not registered	Interface registration with BPE driver is missing	-	LOG_STD_ACTION
BPE-3-NULL_IDB	3-Error	Null idb pointer [[chars]:[hec]]	Interface pointer is not initialized	-	LOG_STD_ACTION
BRELAY3LOCATE_FRU	3-Error	iosxe-binos-utils	Command could not be executed. Target FRU could not be resolved	The brelay process is responsible for determining the target of a command	-
BRI-1-INITFAIL	1-Alert	msgtxt_initfail	The hardware failed to initialize correctly.	-	"Repair or replace the controller."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BRI-1-NOMEMORY	1-Alert	msgtxt_nomemory	The requested operation could not be accomplished because of a low\n\n memory condition.	-	"Reduce other system activity to ease memory demands. If conditions\n\n warrant upgrade to a larger memory configuration."
BRI-4-NOSWITCH	4-Warning	msgtxt_initfail	ISDN leased line requires an ISDN switch type configure.	-	-
BR4OVERSIZE_B1_MIU	4-Warning	Failed to set MTU of [dec] on [chars]. Can't support MTU over [dec].	User config IP MTU size not supported by BRI hardware.	-	"Reconfigure IP MTU base on the suggested range."
BR4OVERSIZE_B2_MIU	4-Warning	Failed to set MTU of [dec] on [chars]. Can't support MTU over [dec].	User config IP MTU size not supported by BRI hardware.	-	"Reconfigure IP MTU base on the suggested range."
BR4OVERSIZE_D_MIU	4-Warning	Failed to set MTU of [dec] on [chars]. Can't support MTU over [dec].	User config IP MTU size not supported by BRI hardware.	-	"Reconfigure IP MTU base on the suggested range."
BRIMUX-1-BADCODE	1-Alert	Software error: [chars]	An internal software error occurred.	as	LOG_STD_ACTION
BRIMUX-3-BADBRIMUX	3-Error	Slot [dec] [chars]	A BRIMUX firmware problem may be present.	as	LOG_STD_ACTION
BRIMUX-3-BADDLACK	3-Error	Slot [dec] BRIC failed to acknowledge download data block [dec]	A BRIMUX firmware problem may be present.	as	LOG_STD_ACTION
BRIMUX-3-BADDPM	3-Error	Slot [dec] DPM test failed at offset 0x[hec] expect 0x[hec] read 0x[hec]	A BRIMUX board hardware problem may be present.	as	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BRIMUX-3-BADULADDR	3-Error	Slot [dec] BRIC wrong upload address received 0x[hec] requested 0x[hec]	A BRIMUX firmware problem may be present.	as	LOG_STD_ACTION
BRIMUX-3-BADULBLK	3-Error	Slot [dec] BRIC wrong block [dec] for data upload expect [dec]	A BRIMUX firmware problem may be present.	as	LOG_STD_ACTION
BRIMUX-3-BADULLEN	3-Error	Slot [dec] BRIC upload data length read [dec] truncate to [dec] bytes	A BRIMUX firmware problem may be present.	as	LOG_STD_ACTION
BRIMUX-3-BADULREQ	3-Error	Slot [dec] BRIC failed to send upload data block [dec]	A BRIMUX firmware problem may be present.	as	LOG_STD_ACTION
BRIMUX-4-HEARIBEAT	4-Warning	Slot [dec] BRIC lost heartbeat for [dec] seconds	A BRIMUX board hardware or firmware problem may be present.	as	LOG_SID_RECUR_ACTION
BRIMUX-5-CHANUPDOWN	5-Notice	B[dec] of BRI[dec] on slot [dec] BRIC changed state to [chars]	A B-channel on the BRIMUX board changed state.	as	LOG_SID_NO_ACTION
BRIMUX-5-SPORIUPDOWN	5-Notice	BRI[dec] on slot [dec] BRIC changed state to [chars]	A port on the BRIMUX board changed state.	as	LOG_SID_NO_ACTION
BRIMUX-5-UPDOWN	5-Notice	Slot [dec] BRIC changed state to [chars]	A BRIMUX board changed state.	as	LOG_SID_NO_ACTION
BSC-2-NOMEM	2-Critical	No buffers available on interface [chars].	This message indicates that memory in the router was exhausted.	-	"Perform diagnostics on the router to locate the subsystem or interface\n responsible for consuming memory. The only method that will clear this\n situation is to reload the router."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BSC-3-BADLINESTATE	3-Error	Line state Tx when receiving [chars] on line [chars]	An unexpected receive occurred during a transmission.	-	"Verify that the line has been consistently defined in regards to the\n\ carrier. If a message report was sent hard-on stop and start the\n\ bisynchronous interface in question."
BSC-3-BADPEERTYPE	3-Error	Peer [chars] is incorrect type	This message occurs only when BSC local-ack is configured. It\n\ indicates the serial interfaces that are using the BSTUN tunnel are\n\ configured incorrectly that is both have been configured as a\n\ secondary.	-	"Reconfigure the serial interfaces correctly to be a primary and\n\ secondary pair."
BSR-4-RP_NOT_CONFIGURED	4-Warning	Bootstrap message received from [node]on [chars] SDWAN running SPT-only mode but Candidate-RP not configured locally.	In SDWAN spt-only networks it is expected that the cEdge is the candidate RP and elected RP if PIM BSR is running.	-	LOG_STD_ACTION
BSR-4-RP_NOT_CONFIGURED	4-Warning	Bootstrap message received from [node]on [chars] SDWAN running SPT-only mode but Candidate-RP not configured locally.	In SDWAN spt-only networks it is expected that the cEdge is the candidate RP and elected RP if PIM BSR is running.	-	LOG_STD_ACTION
BSR-5-CBSR_REMOVED	5-Notice	Candidate-BSR on interface [chars] has been removed	This is performed because the interface card has been removed	-	LOG_SID_NO_ACTION
BSR-5-CBSR_REMOVED	5-Notice	Candidate-BSR on interface [chars] has been removed	This is performed because the interface card has been removed	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BSR-5-CRP_REMOVED	5-Notice	Candidate-RP on interface [chars] has been removed	This is performed because the interface card has been removed	-	LOG_SID_NO_ACTION
BSR-5-CRP_REMOVED	5-Notice	Candidate-RP on interface [chars] has been removed	This is performed because the interface card has been removed	-	LOG_SID_NO_ACTION
BSR-6-NO_FORWARD_BSR	6-Information	Dropping No-Forward Bootstrap message from [chars] on [chars]	This is performed because RFC 5059 No-Forward BSM is not supported.	-	LOG_SID_NO_ACTION
BSR-6-NO_FORWARD_BSR	6-Information	Dropping No-Forward Bootstrap message from [chars] on [chars]	This is performed because RFC 5059 No-Forward BSM is not supported.	-	LOG_SID_NO_ACTION
BSTUN-2-NOBUF	2-Critical	Interface [chars] no buffer available to [chars]	A memory shortage existed at the time that the configuration command\n\ was issued. This condition is rare and under normal conditions\n\ temporary.	-	"Reconfigure the BSTUN group. If memory shortages persist call your\n\ technical support representative for assistance."
BSTUN-3-BADCONN	3-Error	CONN: bad connection [dec] peer: [chars]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
BSTUN-3-BADLENOP	3-Error	[chars]: bad len or unknown op op [dec] len [dec]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
BSTUN-3-BADMAGIC	3-Error	[chars]: wrong magic mine [hec] theirs [hec] [dec]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
BSTUN-3-BADMAGICTCP	3-Error	[chars]: peer [chars] wrong magic mine [hec] theirs [hec]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BSTUN-3-BADPASSMEOPEN	3-Error	passive open from [node]dec] -> [dec] failed	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
BSTUN-3-CONNILLSTATE	3-Error	CONN: Peer [chars] illegal state [dec]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
BSTUN-3-IFNOISETUP	3-Error	Could not setup interface for protocol [chars]	BSTUN was unable to start the interface for handling the specified protocol traffic.	-	"If this message appears while you are configuring BSTUN check for\n\ other system errors such as no available memory in the router or the interface\n\ shutting down. If no obvious problem can be detected record all the displayed\n\ values and any other BSTUN error messages and contact your technical support\n\ representative."
BSTUN-3-NOGRPDEF	3-Error	No bstun group defined on interface [chars]	An action was taken that requires the previous definition of a BSTUN\n\ group number.	-	"Make sure "encapsulation bstun" and the "bstun group" have been\n\ defined for the interface."
BSTUN-3-NOPEER	3-Error	No peer configured to route frame with destination address [chars] bstun group [dec]	A BSTUN route has not been configured for the frame with a destination address.	-	"If this message appears while you are debugging bstun it indicates that no\n\ specific bstun route has been configured for the frames being received with\n\ the device address listed in the packet debug trace. You may choose to configure\n\ a bstun route or ignore this message."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BSTUN-3-SENDPUNT	3-Error	[chars]: sent [chars] to [chars]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
BSTUN-3-UNKPROTOEV	3-Error	Unknown protocol event [dec] on interface [chars]	An event passed to the BSTUN layer for processing could not be decoded.	-	"Perform a hard restart on the indicated interface."
BSTUN-4-DUPROUTE	4-Warning	Cannot define duplicate route on the same group	This route command is defined on another interface belonging to the same group. Cannot define duplicate route on the same group	-	"Consider defining a new group and moving this interface onto that group"
BSTUN-4-PEERSTATE	4-Warning	Peer [chars] wrong state [dec] [dec]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
BSTUN-4-SENDPUNTICP	4-Warning	[chars]: sent [chars] to [[node]%i	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
BSTUN-6-CONNOPENFAIL	6-Information	CONN: peer [chars] open failed [chars] [[node]	An attempt to connect to a remote TCP BSTUN peer failed.	-	"Verify that the remote peer is accessible from this router that it is running software capable of supporting BSTUN and that it is configured correctly."
BSTUN-6-ERR	6-Information	[chars]: [chars]: [chars] op [hec] len [dec]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
BSTUN-6-OPENED	6-Information	[chars]: peer [chars] opened [previous state [chars]]	-	-	LOG_SID_NO_ACTION
BSTUN-6-OPENING	6-Information	CONN: opening peer [chars] [dec]	-	-	LOG_SID_NO_ACTION
BSTUN-6-PASSIVEOPEN	6-Information	passive open [node]dec -> [dec]	-	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>BSTUN-6-PEERSHUTDOWN</del> BSTUN-6-PEERSHUTDOWN	6-Information	shutting down peer [chars] on [chars]	A connection to a remote peer is being shut down. This is typically\n\n the result of user intervention in BSTUN reconfiguration or disabling.\n\n This is good expected behavior.	-	LOG_STD_NO_ACTION
BSTUN-6-PROCEXIT	6-Information	Process terminating. Due to signal [dec]. Subcode [dec]. Address [hec].	The BSTUN background process is terminating.	-	"If this message appears while you are unconfiguring BSTUN no action\n\n is required. Otherwise record all the displayed values and any other\n\n BSTUN error messages and contact your technical support\n\n representative."
BSTUN-6-RECONNECT	6-Information	PHDR: reconnect from peer [chars]	A remote peer reestablished a connection to this router.	-	LOG_STD_NO_ACTION
BSTUN-6-TCPFINI	6-Information	peer [chars] closed [previous state [chars]]	A remote peer closed a BSTUN connection with this router.	-	"Examine the other router to see why it closed this connection with\n\n this peer. This can be caused by normal events such as\n\n reconfiguration."
<del>BSTUN-6-TCPPEERSHUT</del> BSTUN-6-TCPPEERSHUT	6-Information	[chars] [chars] [node]dec]	This route closed a BSTUN connection with a remote peer.	-	"Examine this router to see why it closed this connection with this\n\n peer. This can be caused by normal events such as reconfiguration."
<del>BTRACE-3-ROTATE_ERR</del> BTRACE-3-ROTATE_ERR	3-Error	iosxe-binos-utils	Btrace Rotate Error:[chars]	Btrace Rotate error message.	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>BTRACE_MGR_ERR_CFG</del>	4-Warning	polaris-trace	Btrace Manager UTF Filter Applied from conf file: [chars]	Btrace Filter Manager	-
<del>BTRACE_MGR_DBG_CFG</del>	7-Debug	polaris-trace	Btrace Manager UTF Filter Applied from conf file: [chars]	Btrace Filter Manager	-
<del>BTRACE_ISS_ERR_CFG</del>	3-Error	iosxe-binos-utils	BTRACE sample ERR errmsg	Btrace error message.	This is a sample message.
<del>BTRACE_ISS_WARN_CFG</del>	4-Warning	iosxe-binos-utils	BTRACE sample WARNING errmsg	Btrace warning message.	This is a sample message.
<del>BTRACE_ISS_NOTICE_CFG</del>	5-Notice	iosxe-binos-utils	BTRACE sample NOTICE errmsg	Btrace notice message.	This is a sample message.
<del>BTRACE_ISS_INFO_CFG</del>	6-Information	iosxe-binos-utils	BTRACE sample info errmsg	Btrace info message.	This is a sample message.
<del>BTRACE_ISS_DBG_CFG</del>	7-Debug	iosxe-binos-utils	BTRACE sample DEBUG errmsg	Btrace debug message.	This is a sample message.
BUCAP2ACTIME_CAPONT	3-Error	Invalid operation was attempted on an active capture point [chars].	Invalid operation was attempted on an active \n\ capture point.	os	"Search for resolved software issues using the Bug Toolkit " "at <del>http://www.cisco.com/cgi-bin/bugtools/bugtools.pl</del> " "If you still require assistance copy the error message exactly as " "it appears on the console or in the system log enter the " "<CmdBold>show monitor capture point all<NoCmdBold> and " "<CmdBold>show tech<NoCmdBold> commands and contact your " "Cisco technical support representative providing the " "representative with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BUFCAP3ACIME_CAPTURE	3-Error	Invalid operation was attempted on an active capture point [chars].	Invalid operation was attempted on an active \n\ capture point.	os	"Search for resolved software issues using the Bug Toolkit " "at <a href="http://www.cisco.com/bugtools">http://www.cisco.com/bugtools</a> " "If you still require assistance copy the error message exactly as " "it appears on the console or in the system log enter the " "<CmdBold>show monitor capture point all<NoCmdBold> and " "<CmdBold>show tech<NoCmdBold> commands and contact your " "Cisco technical support representative providing the " "representative with the gathered information."
BUFCAP3EXPORT_BUFFER	3-Error	Error exporting buffer [chars] to location [chars]	The Buffer Capture Infrastructure is not able to export the buffer to the specified location	os	"Please check if a valid destination was specified. " "Or if a file by the same name already exists rename the dump file or " "remove the existing file from the destination location. " "If those actions do not resolve the problem " LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BUFCAP3-EXPORT_BUFFER	3-Error	Error exporting buffer [chars] to location [chars]	The Buffer Capture Infrastructure is not able to export the buffer to the specified location	os	"Please check if a valid destination was specified. " "Or if a file by the same name already exists rename the dump file or " "remove the existing file from the destination location. " "If those actions do not resolve the problem " LOG_STD_ACTION
BUFCAP3-INVALID_CAPTURE	3-Error	Invalid capture point.	Some operation was attempted on a invalid capture point.	os	LOG_STD_ACTION
BUFCAP3-INVALID_CAPTURE	3-Error	Invalid capture point.	Some operation was attempted on a invalid capture point.	os	LOG_STD_ACTION
BUFCAP3-INVALID_PARAM	3-Error	Invalid parameters	Invalid parameters were passed in to a buffer capture infrastructure function.	os	LOG_STD_ACTION
BUFCAP3-INVALID_PARAM	3-Error	Invalid parameters	Invalid parameters were passed in to a buffer capture infrastructure function.	os	LOG_STD_ACTION
BUFCAP-3-NO_MEM	3-Error	Not enough memory available for Buffer Capture Infrastructure	The buffer capture infrastructure could not get the memory it requested.	os	LOG_STD_ACTION
BUFCAP-3-NO_MEM	3-Error	Not enough memory available for Buffer Capture Infrastructure	The buffer capture infrastructure could not get the memory it requested.	os	LOG_STD_ACTION
BUFCAP3-NO_SUCH_CAPTURE	3-Error	Error finding capture point.	No such capture point exists	os	LOG_STD_ACTION
BUFCAP3-NO_SUCH_CAPTURE	3-Error	Error finding capture point.	No such capture point exists	os	LOG_STD_ACTION



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>BUFCAP5</del> BUFCAP5_BUFFER_FULL	5-Notice	Linear Buffer associated with capture buffer [chars] is full.	The linear buffer is full. Further capture would be halted.	os	LOG_SID_NO_ACTION
<del>BUFCAP5</del> BUFCAP5_BUFFER_FULL	5-Notice	Linear Buffer associated with capture buffer [chars] is full.	The linear buffer is full. Further capture would be halted.	os	LOG_SID_NO_ACTION
<del>BUFCAP5</del> BUFCAP5_MAX_ELEMS	5-Notice	Capture point [chars] disabled. The number of elements in associated capture buffer's [chars]	The buffer contains the maximum configured number of packets. The associated capture point will be disabled.	os	LOG_SID_NO_ACTION
<del>BUFCAP5</del> BUFCAP5_MAX_ELEMS	5-Notice	Capture point [chars] disabled. The number of elements in associated capture buffer's [chars]	The buffer contains the maximum configured number of packets. The associated capture point will be disabled.	os	LOG_SID_NO_ACTION
<del>BUFCAP5</del> BUFCAP5_TIME_EXCEEDED	5-Notice	Capture Point [chars] disabled. The associated capture buffer's [chars]	The linear buffer does not have enough space left. Hence the packet was trimmed. This is the final element in the buffer.	os	LOG_SID_NO_ACTION
<del>BUFCAP5</del> BUFCAP5_TIME_EXCEEDED	5-Notice	Capture Point [chars] disabled. The associated capture buffer's [chars]	The linear buffer does not have enough space left. Hence the packet was trimmed. This is the final element in the buffer.	os	LOG_SID_NO_ACTION
<del>BUFCAP6</del> BUFCAP6_CAPCNT_EXISTS	6-Information	Capture Point [chars] already exists.	A Capture point by the specified name already exists.	os	LOG_SID_NO_ACTION
<del>BUFCAP6</del> BUFCAP6_CAPCNT_EXISTS	6-Information	Capture Point [chars] already exists.	A Capture point by the specified name already exists.	os	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
BUFCAP-6-CREATE	6-Information	Capture Point [chars] created.	Specified capture point has been created.	os	LOG_SID_NO_ACTION
BUFCAP-6-CREATE	6-Information	Capture Point [chars] created.	Specified capture point has been created.	os	LOG_SID_NO_ACTION
BUFCAP-6-DELETE	6-Information	Capture Point [chars] deleted.	Specified capture point has been deleted.	os	LOG_SID_NO_ACTION
BUFCAP-6-DELETE	6-Information	Capture Point [chars] deleted.	Specified capture point has been deleted.	os	LOG_SID_NO_ACTION
BUFCAP-6-DISABLE	6-Information	Capture Point [chars] disabled.	Specified capture point has been disabled.	os	LOG_SID_NO_ACTION
BUFCAP-6-DISABLE	6-Information	Capture Point [chars] disabled.	Specified capture point has been disabled.	os	LOG_SID_NO_ACTION
BUFCAP-6-DISABLE_ASYNC	6-Information	Capture Point [chars] disabled. Reason : [chars]	Specified capture point has been disabled due to asynchronous event.	os	LOG_SID_NO_ACTION
BUFCAP-6-DISABLE_ASYNC	6-Information	Capture Point [chars] disabled. Reason : [chars]	Specified capture point has been disabled due to asynchronous event.	os	LOG_SID_NO_ACTION
BUFCAP-6-ENABLE	6-Information	Capture Point [chars] enabled.	Specified capture point has been enabled.	os	LOG_SID_NO_ACTION
BUFCAP-6-ENABLE	6-Information	Capture Point [chars] enabled.	Specified capture point has been enabled.	os	LOG_SID_NO_ACTION
BUFCAP-6-RATE_LIMIT	6-Information	[dec] packets from capture point [chars] dropped due to rate limiting.	Rate limiting has been enabled and the number of packets exceed the allowed configured value.	os	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
BUFCAP-6-RATE_LIMIT	6-Information	[dec] packets from capture point [chars] dropped due to rate limiting.	Rate limiting has been enabled and the number of packets exceed the allowed configured value.	os	-
BUFCAP-6-TOO_BIG	6-Information	The packet to be dumped is bigger than the buffer size of capture buffer [chars]. Packet of size [dec] dropped.	The packet is bigger than the configured/default buffer size.	os	"Change the parameters of the capture buffer. " "You can try to increase the size of the buffer " "or limit the number of bytes copied."
BUFCAP-6-TOO_BIG	6-Information	The packet to be dumped is bigger than the buffer size of capture buffer [chars]. Packet of size [dec] dropped.	The packet is bigger than the configured/default buffer size.	os	"Change the parameters of the capture buffer. " "You can try to increase the size of the buffer " "or limit the number of bytes copied."
BUNDLE_NSER2_MLS_TIE	2-Critical	ERRMSG_HAG_TRACEBACK	-	-	-
BUNDLE_NSER2_MLS_TIE	2-Critical	ERRMSG_HAG_TRACEBACK	-	-	-
BUNDLES3-ALLOCATION	3-Error	Bundle allocation error: [chars]	An internal software error occurred. It is likely that this error is caused by a low memory condition	OCE_DDIS_COMPONENT	LOG_STD_ACTION
BUNDLES3-ALLOCATION	3-Error	Bundle allocation error: [chars]	An internal software error occurred. It is likely that this error is caused by a low memory condition	OCE_DDIS_COMPONENT	LOG_STD_ACTION
BUNDLES3-PLATFORM_SPACE	3-Error	Platform attempted to access unreserved space	An internal software error occurred.	OCE_DDIS_COMPONENT	LOG_STD_ACTION
BUNDLES3-PLATFORM_SPACE	3-Error	Platform attempted to access unreserved space	An internal software error occurred.	OCE_DDIS_COMPONENT	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>BNDLSTYPENOTSUARE</del>	3-Error	Bundle type [chars] must be ISSU aware to send to slots [chars]	-	-	-
<del>BNDLSTYPENOTSUARE</del>	3-Error	Bundle type [chars] must be ISSU aware to send to slots [chars]	-	-	-
<del>BWDSFRGCPTRXLINE</del>	4-Warning	Average throughput rate approached the licensed bandwidth of [chars] during [dec] sampling periods in the last 24 hours sampling period is [dec] seconds	-	-	-
<del>BWDSFRGCPTRXLINE</del>	5-Notice	Average throughput rate exceeded [dec] percent of licensed bandwidth of [chars] during [dec] sampling periods in the last 24 hours sampling period is [dec] seconds	-	-	-
<del>CDLERRCDUNKOVRM</del>	3-Error	Unknown trap type:[dec] received in emt_call function.	Unknow trap type. Some feature requires this trap type to be handled	-	-
C3PL_TARGET4NOREG	4-Warning	No [chars] callback registered for [chars]. Using default function.	A support function for a specific kind of QoS attachment point is not available. A default behavior was applied instead.	c3pl	-
C3PL_TARGET4NOREG	4-Warning	No [chars] callback registered for [chars]. Using default function.	A support function for a specific kind of QoS attachment point is not available. A default behavior was applied instead.	c3pl	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CSRSP-3-C5_BADIPC	3-Error	bad message received from the NMP	An unsolicited in band IPC message was received by the router from the NMP.	-	LOG_SID_NO_ACTION
CSRSP3C5_MACADRFAIL	3-Error	can't get C5 Line Card Mac Addr	An attempt by the RSP to query the C5IP for Vlan 0 IP address failed.	-	"Try these actions to remedy the problem: Reset the router from the NMP's console. If problems persist please RMA the router and or Catalyst 5000"
CSRSP3C5_NMPMACADRFAIL	3-Error	can't get NMP Mac Addr	An attempt by the RSP to query the C5IP for Vlan 0 MAC address failed.	-	"Try these actions to remedy the problem: Reset the router from the NMP's console. If problems persist please contact Cisco for replacement"
CSRSP-3-C5_SAGE0FAIL	3-Error	Length error occurred on dma channel 0	A hardware error has occurred on dma channel 0	-	"Report this error to your technical support representative."
CSRSP-3-C5_SAGE1FAIL	3-Error	Length error occurred on dma channel 1	A hardware error has occurred on dma channel 1	-	"Report this error to your technical support representative."
CSRSP-3-C5IP_SLOTFAIL	3-Error	can't get Catalyst 5000 Slot number of router	An attempt by the RSP to query the C5IP for the slot it is plugged into has failed.	-	"Try these actions to remedy the problem: Reset the router from the NMP's console. If problem persists please contact Cisco for replacement."
CSRSP3CANT_CREATE_VLAN	3-Error	vlan [dec] can not be created. media not supported	An attempt to create a vlan of a media that is not supported has failed	-	"Try these actions to remedy the problem: Configure the vlan with a different media type."
CSRSP3INVALID_IOCTLLETTER	3-Error	Invalid ioctl letter type [dec] sent by c5ip\n	IOS is receiving bogus messages from the C5IP.	-	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRSP</del> MAXLAN_EXCEED	3-Error	can't configure more than 256 VLANS	The Vlan Router product can configure a maximum of 256 vlans.	-	"Try these actions to remedy the problem: Delete unused vlans before configure new ones."
<del>CRSP</del> NMP_DELETE_VLAN	3-Error	having problems deleting vlan [dec] on the NMP	In band IPC message to the NMP from the router to delete a vlan has failed.	-	"Try these actions to remedy the problem: Check the state of Vlan 0. Check the state of the C5IP via the front panel LED. Check the state of the NMP. Reset the router"
<del>CRSP</del> 3NMP_INIT_FAIL	3-Error	can't talk to NMP during initialization	In band IPC router initialization message to the NMP has failed	-	"Try these actions to remedy the problem: Check the state of Vlan 0. Check the state of the C5IP via the front panel LED. Check the state of the NMP. Reset the router"
<del>CRSP</del> 3NMP_PROG_FAIL	3-Error	NMP won't allow vlan [dec] configuration	In band IPC message to the NMP from the router to create a vlan has failed.	-	"Try these actions to remedy the problem: Check the state of Vlan 0. Check the state of the C5IP via the front panel LED. Check the state of the NMP. Reset the router"
<del>CRSP</del> RSM_NMP_BRCENAD	3-Error	NMP returned invalid bridge id [dec] for [dec]\n	NMP returned invalid bridge id to the RSM	-	"Make sure that the tr-brf vlan on the RSM is configured on the NMP"
<del>CRSP</del> RSM_NMP_CONC_MACH	3-Error	RSM NMP mismatch in config for [dec] RSM [dec] NMP [dec]\n	There is mismatch in config for this vlan on NMP and RSM	-	"Make sure that the params for this vlan are the same on NMP and on the RSM"
<del>CRSP</del> UNKNOWN_NMP_PROG	3-Error	unknown timer for NMP programming	An unknown timer event has expired.	-	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
C5RSP-6-BRIDGE_AFU	6-Information	vlan [dec] could/could not be configured for bridging	A Vlan could not be reset with the proper bridging information.	-	"Try these actions to remedy the problem: Configure the vlan with or with bridging."
C5RSP-6-NOSWIDB	6-Information	vlan [dec] missing IDB	Internal data structure of the Vlan is missing.	-	LOG_STD_ACTION
C5RSP-6-VLAN_NOMMSG	6-Information	vlan [dec] info errant. something very wrong	Internal information about the Vlan is missing.	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CBECD3ONGMACH	3-Error	Card type mismatch. config: [chars] is not consistent with the working mode in slot [dec]		cmts-platform-infra	LOG_STD_ACTION



Fault-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
			<p>There are several scenarios that the error message will be reported. Some cases can be recovered by CLC auto reloading. Eg. Kobal-R can work as 10GE or 100GE ifmod for DPIC-G2. If system reload with card pre-configured as DPIC-G2-10GE 'card &lt;slot_num&gt;/0 CBR-CCAP-LC-G2-R r-phy DPIC-G2-10GE' while .board.conf was saved as DPIC-G2 100GE mode and Kobal boot up before card precfg parsing. Some cases need to shut down the lc first then change the configuration or change the pic card Eg. if the card is pre-configured as RPHY with the command 'card &lt;slot_num&gt;/0 cBR-CCAP-LC-40G r-phy' but a rf-pic card was inserted to the same slot. Or the card is pre-configured as ICMTS with the command 'card &lt;slot_num&gt;/0 cBR-CCAP-LC-40G' but a dpic card was inserted to the same slot. Or DPIC type is pre-configured as DPIC-G2 with the command 'card</p>		

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
			<slot_num>/0 CBR-CCAP-LC-G2-R r-phy DPIC-G2-10GE' but a DPIC-G1 card was inserted to the same slot. Or DPIC type is pre-configured as DPIC-G1 with the command 'card <slot_num>/0 CBR-CCAP-LC-G2-R r-phy' but a DPIC-G2 card was inserted to the same slot.		
<del>CABE_CG_NURR_EDDA</del>	3-Error	Data conversion error [chars] 0x[hex]	An internal software error has occurred when converting the data specified in the message from one representation to another.	DDTS_COMPONENT	LOG_SID_SH_TECH_ACTION
<del>CABE_CG_CLOG_PSEERR</del>	4-Warning	Error parsing logger message: [chars] from subslot [node]%u	The carrier card passed down a logger message that could not be parsed.	cmts-platform-infra	LOG_STD_ACTION
<del>CABE_CG_CLOG_TOO LONG</del>	4-Warning	Message too long from slot [node][node] [node]bytes	The carrier card passed down a logger message that is too long for\n\ the RP to handle.	cmts-platform-infra	LOG_STD_ACTION
<del>CABE_CG_CG_RM_TOO LG</del>	4-Warning	Logger message length [node]bytes exceeds the maximum allowed size	The carrier card attempted to send a large message to the Route Processor	cmts-platform-infra	LOG_STD_ACTION
<del>CABE_CG_CG_RI_RM_OED</del>	5-Notice	Carrier Card [dec] removed	The carrier card was removed	cmts-platform-infra	LOG_SID_NO_ACTION
<del>CABE_RCLLIB4EAGAN</del>	4-Warning	cbr-platform-infra	ipcl port[chars] throttling on	-	-
<del>CABE_RCLLIB5CEAGAN</del>	4-Warning	cbr-platform-infra	ipcl svc_id[chars] throttling on	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CABRCLIBLOWWATERMARK</del>	5-Notice	cbr-platform-infra	ipecl port[chars] hit low watermark	-	-
<del>CABRCLIBLOWWATERMARK</del>	5-Notice	cbr-platform-infra	ipecl svc_id[chars] hit low watermark	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CABLEUICDNCKEHR	4-Warning	Dynamic Command [chars] invoke failure		DDTS_COMPONENT	"change the pre-config to another mode" "or replace the pic card"

Fault-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
			<p>There are several scenarios that the error message will be reported. One case is line card boot up mode for different PIC type does not match to pre-configured PIC type. There two modes of the line card :</p> <p>ICMTS&amp;RPHY and Kobal-R can work with DPIC-G1 or DPIC-G2 with different FW. Eg. if the card is pre-configured as RPHY with the command 'card &lt;slot_num&gt;/0 cBR-CCAP-LC-40G r-phy' but a rf-pic card was inserted to the same slot. Or the card is pre-configured as ICMTS with the command 'card &lt;slot_num&gt;/0 cBR-CCAP-LC-40G' but a dpic card was inserted to the same slot. Or DPIC type is pre-configured as DPIC-G2 with the command 'card &lt;slot_num&gt;/0 CBR-CCAP-LC-G2-R r-phy DPIC-G2-&lt;ifmod&gt;' but a DPIC-G1 card was inserted to the same slot. Or DPIC type is pre-configured as DPIC-G1 with the command 'card</p>		

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
			<slot_num>/0 CBR-CCAP-LC-G2-R r-phy' but a DPIC-G2 card was inserted to the same slot. Another case is Kobal-R working ifmod mismatch to precfg. Eg. if system reload with card pre-configured as DPIC-G2-10GE 'card <slot_num>/0 CBR-CCAP-LC-G2-R r-phy DPIC-G2-10GE' while .board.conf was saved as DPIC-G2 100GE mode and Kobal boot up before card precfg parsing then this error message will be reported however it can be recovered by CLC auto reloading.		
<del>CAC3-MODIFY_FAIL</del>	5-Notice	iosxe-binos-utils	Call admission control :[chars]	General ewlc Error Message.	LOG_STD_ACTION
CAC3-MODIFY_FAIL	3-Error	CAC is enabled and per-flow rate modification results in CAC inconsistency. Remove and reapply CAC action in the class.	This is an issue in CAC. Probable cause: CAC state update fails. Check internal data bases.	qos	LOG_STD_ACTION
CAC3-MODIFY_FAIL	3-Error	CAC is enabled and per-flow rate modification results in CAC inconsistency. Remove and reapply CAC action in the class.	This is an issue in CAC. Probable cause: CAC state update fails. Check internal data bases.	qos	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CAC3QOS_MODIFY_FAIL	3-Error	CAC is already functioning and configuration modification results in CAC inconsistency. Remove and reapply CAC action in the class.	This is an issue in CAC. Probable cause: CAC state update fails. Check internal data bases.	qos	LOG_STD_ACTION
CAC3QOS_MODIFY_FAIL	3-Error	CAC is already functioning and configuration modification results in CAC inconsistency. Remove and reapply CAC action in the class.	This is an issue in CAC. Probable cause: CAC state update fails. Check internal data bases.	qos	LOG_STD_ACTION
CAC-6-MODIFY	6-Information	CAC is already functioning and configuration of per flow [node]kbps will restart CAC invalidating CAC status for all flows.	This is a user modification. Active CAC flows will all unadmitted till renegotiation. After renegotiation flow admit/un-admit status may vary.	qos	LOG_STD_ACTION
CAC-6-MODIFY	6-Information	CAC is already functioning and configuration of per flow [node]kbps will restart CAC invalidating CAC status for all flows.	This is a user modification. Active CAC flows will all unadmitted till renegotiation. After renegotiation flow admit/un-admit status may vary.	qos	LOG_STD_ACTION
CAC-6-QOS_MODIFY	6-Information	CAC is already functioning and a configuration modification will restart CAC invalidating current status for all flows.	This is a user modification. Active CAC flows will all unadmitted till renegotiation. After renegotiation flow admit/un-admit status may vary.	qos	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CAC-6-QOS_MODIFY	6-Information	CAC is already functioning and a configuration modification will restart CAC invalidating current status for all flows.	This is a user modification. Active CAC flows will all unadmitted till renegotiation. After renegotiation flow admit/un-admit status may vary.	qos	LOG_STD_ACTION
CAF_CHECKSCAF_STATUS	5-Notice	iosxe-binos-utils	CAF process is dead. Restarting it... .	"This is a test to test CAF Explanation part. "	"This is a test to test CAF action part."
<del>CAL_CNTRL_CAF_DBERR</del>	3-Error	ccapi database error	Internal CCAPI conference or call record database error. This message represents an internal software fault and may manifest itself as dropped or hung calls.	voice-callcontrol	"Contact your technical support representative include the full text of\n\ the error message."
<del>CAL_CNTRL_CAF_DBERR</del>	3-Error	ccapi database error	Internal CCAPI conference or call record database error. This message represents an internal software fault and may manifest itself as dropped or hung calls.	voice-callcontrol	"Contact your technical support representative include the full text of\n\ the error message."
<del>CAL_CNTRL_INVALID_PARAM</del>	3-Error	An invalid parameter is passed to the function	This is due to coding error.	voice-callcontrol	"No action is required for the users"
<del>CAL_CNTRL_INVALID_PARAM</del>	3-Error	An invalid parameter is passed to the function	This is due to coding error.	voice-callcontrol	"No action is required for the users"
<del>CAL_CNTRL_NO_RAWMSG</del>	3-Error	no free raw msg structure available from [chars] for signaling message	There were no rawmsg structures remaining in the system pools to alert the\n\ router of a voice or signaling event.	voice-callcontrol	"Check that the voice port for which the event was reported is\n\ still operational. If not clear the voice port."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CALCONF64NRAWMSG</del>	3-Error	no free raw msg structure available from [chars] for signaling message	There were no rawmsg structures remaining in the system pools to alert the\n\ router of a voice or signaling event.	voice-callcontrol	"Check that the voice port for which the event was reported is\n\ still operational. If not clear the voice port."
<del>CALCONF64MBCRUE</del>	3-Error	Memory corruption detected in memory=[hec] allocated for RTCP statistic	This is due to coding error	voice-callcontrol	"No action is required for the users"
<del>CALCONF64MBCRUE</del>	3-Error	Memory corruption detected in memory=[hec] allocated for RTCP statistic	This is due to coding error	voice-callcontrol	"No action is required for the users"
<del>CALCONF64APNOEST</del>	6-Information	The requested application does not exist any more. The event for the callid [dec] is being discarded.\n	The event points to a session application which does not exist any more. The event is being discarded.	voice-callcontrol	"No action is required for the users"
<del>CALCONF64APNOEST</del>	6-Information	The requested application does not exist any more. The event for the callid [dec] is being discarded.\n	The event points to a session application which does not exist any more. The event is being discarded.	voice-callcontrol	"No action is required for the users"
<del>CALCONF64APNOICND</del>	6-Information	Application [chars] in dial-peer [dec] not found. Handing callid [dec] to the alternate app [chars].\n	The inbound dial-peer points to an unavailable application. The call is being handed to the alternate application or is rejected.	voice-callcontrol	"Reconfigure the dial-peer to have a valid application name or verify " "the application is accesible at its location."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CAL_CNTRLCAL_PNTION</del>	6-Information	Application [chars] in dial-peer [dec] not found. Handing callid [dec] to the alternate app [chars].\n	The inbound dial-peer points to an unavailable application. The call is being handed to the alternate application or is rejected.	voice-callcontrol	"Reconfigure the dial-peer to have a valid application name or verify " "the application is accesible at its location."
<del>CAL_CNTRLCAL_IOP</del>	6-Information	The incoming call has a global identifier already present in the list of currently handled calls. It is being refused.\n	The incoming call has a global identifier already present in the list of currently handled calls. It means that the voice gateway has detected a loop in the call route.	voice-callcontrol	"Please check your configuration."
<del>CAL_CNTRLCAL_IOP</del>	6-Information	The incoming call has a global identifier already present in the list of currently handled calls. It is being refused.\n	The incoming call has a global identifier already present in the list of currently handled calls. It means that the voice gateway has detected a loop in the call route.	voice-callcontrol	"Please check your configuration."
<del>CAL_CNTRLCAL_CNCS</del>	6-Information	Maximum number of connections reached for dial-peer [dec]\n	The dial-peer in question has reached its maximum connections configurations. No more calls will be taken on this dial-peer.	voice-callcontrol	"No action is required however to increase the number of connections " "allowed to this dial peer see 'maximum connections' configuration under " "the dial-peer configuration mode."
<del>CAL_CNTRLCAL_CNCS</del>	6-Information	Maximum number of connections reached for dial-peer [dec]\n	The dial-peer in question has reached its maximum connections configurations. No more calls will be taken on this dial-peer.	voice-callcontrol	"No action is required however to increase the number of connections " "allowed to this dial peer see 'maximum connections' configuration under " "the dial-peer configuration mode."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CALCNRUMRBCNPOACH</del>	6-Information	The called number numbering type did not match The event for the callid [dec] is being discarded.\n	The event points to a session application which does not exist any more. The event is being discarded.	voice-callcontrol	"No action is required for the users"
<del>CALCNRUMRBCNPOACH</del>	6-Information	The called number numbering type did not match The event for the callid [dec] is being discarded.\n	The event points to a session application which does not exist any more. The event is being discarded.	voice-callcontrol	"No action is required for the users"
<del>CALCNRUMRBCNPOACH</del>	6-Information	Request to reset an unknown external agent ID [dec] attempted.	A request to reset an external agent eg H323 Gatekeeper or MGCP CA etc	voice-callcontrol	LOG_STD_ACTION
<del>CALCNRUMRBCNPOACH</del>	6-Information	Request to reset an unknown external agent ID [dec] attempted.	A request to reset an external agent eg H323 Gatekeeper or MGCP CA etc	voice-callcontrol	LOG_STD_ACTION
<del>CALOMRUMRBCNPOACH</del>	3-Error	Failed to enable call-home from Smart Agent for Licensing: [chars]	Failed to enable call-home from Smart Agent for Licensing. Call-home and Smart Licensing could not work properly.	call-home	"Please enable call-home manually according to the error string."
<del>CALOMRUMRBCNPOACH</del>	3-Error	Failed to enable call-home from Smart Agent for Licensing: [chars]	Failed to enable call-home from Smart Agent for Licensing. Call-home and Smart Licensing could not work properly.	call-home	"Please enable call-home manually according to the error string."
<del>CALHOMRUMRBCNPOACH</del>	3-Error	No VTY connection available to run CLI command for event notification message ERR [dec] [chars]	-	-	-
<del>CALHOMRUMRBCNPOACH</del>	3-Error	No VTY connection available to run CLI command for event notification message ERR [dec] [chars]	-	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CALLHOME</del> <del>ERR</del> <del>MEMN</del> <del>IED</del>	3-Error	Failed to create [chars] event for profile [chars]	The call-home event creation failed.	call-home	"Unsubscribe and then subscribe again to that alert group for " "the specified profile."
<del>CALLHOME</del> <del>ERR</del> <del>MEMN</del> <del>IED</del>	3-Error	Failed to create [chars] event for profile [chars]	The call-home event creation failed.	call-home	"Unsubscribe and then subscribe again to that alert group for " "the specified profile."
<del>CALLHOME</del> <del>ERR</del> <del>SIG</del> <del>CREA</del> <del>FEA</del>	3-Error	Failed to create diagnostic-signature directory [chars] fail reason: [chars].	The diagnostic-signature directory creation failed.	call-home	"Please check the disk/flash status first and then create the " "diagnostic-signature directory by yourself."
<del>CALLHOME</del> <del>ERR</del> <del>SIG</del> <del>CREA</del> <del>FEA</del>	3-Error	Failed to create diagnostic-signature directory [chars] fail reason: [chars].	The diagnostic-signature directory creation failed.	call-home	"Please check the disk/flash status first and then create the " "diagnostic-signature directory by yourself."
<del>CALLHOME</del> <del>ERR</del> <del>SIG</del> <del>UPD</del> <del>AE</del> <del>FEA</del>	3-Error	The call-home diagnostic-signature failed to update.	The call-home diagnostic-signature failed to update.	call-home	"Please check the \"show call-home diagnostic-signature failure\" \" \"command for details."
<del>CALLHOME</del> <del>ERR</del> <del>SIG</del> <del>UPD</del> <del>AE</del> <del>FEA</del>	3-Error	The call-home diagnostic-signature failed to update.	The call-home diagnostic-signature failed to update.	call-home	"Please check the \"show call-home diagnostic-signature failure\" \" \"command for details."
<del>CALLHOME</del> <del>ERR</del> <del>SIG</del> <del>RES</del> <del>PTS</del>	3-Error	Fail to retrieve device registration result. Please check SCH registration status with \call-home request registration-info\ under EXEC mode.	Fail to retrieve device registration result. Call-home will abort polling progress.	call-home	"Please check SCH registration status with \"call-home request \" \"registration-info\" under EXEC mode."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CALLHOME</del> CHHVFSTFAS	3-Error	Fail to retrieve device registration result. Please check SCH registration status with \call-home request registration-info\ under EXEC mode.	Fail to retrieve device registration result. Call-home will abort polling progress.	call-home	"Please check SCH registration status with \"call-home request \"registration-info\" under EXEC mode."
<del>CALLHOME</del> HTREQSFAE	3-Error	Failure to send HTTP request to: [chars] ERR [dec] : [chars]	-	-	-
<del>CALLHOME</del> HTREQSFAE	3-Error	Failure to send HTTP request to: [chars] ERR [dec] : [chars]	-	-	-
<del>CALLHOME</del> MSGCFORM	3-Error	XML message size over limit failed to send call-home message. configured message size limit [dec] is less than current message	Unable to create message because configured message size limit is smaller than current message minimum length required.	call-home	"Please re-config the destination message-size-limit."
<del>CALLHOME</del> MSGCFORM	3-Error	XML message size over limit failed to send call-home message. configured message size limit [dec] is less than current message	Unable to create message because configured message size limit is smaller than current message minimum length required.	call-home	"Please re-config the destination message-size-limit."
<del>CALLHOME</del> ONMSCHAE	3-Error	The call-home on-demand message failed to send for [chars][chars]s	The call-home on-demand message failed.	call-home	"Reconfigure call-home to send call-home on-demand messages."
<del>CALLHOME</del> ONMSCHAE	3-Error	The call-home on-demand message failed to send for [chars][chars]s	The call-home on-demand message failed.	call-home	"Reconfigure call-home to send call-home on-demand messages."
<del>CALLHOME</del> REQSINSCHAE	3-Error	call-home request message failed to send ERR [dec] [chars]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CALLHOME</del> REQSMSCHAD	3-Error	call-home request message failed to send ERR [dec] [chars]	-	-	-
<del>CALLHOME</del> SMTPSENDAD	3-Error	Unable to send notification using all SMTP servers ERR [dec] [chars]	-	-	-
<del>CALLHOME</del> SMTPSENDAD	3-Error	Unable to send notification using all SMTP servers ERR [dec] [chars]	-	-	-
<del>CALLHOME</del> HTTPSDCSIPAD	4-Warning	Http will be or has been disabled on Smart Call Home Server please change the address [chars] to https address for profile [chars]. Otherwise call-home will fail to send messages	Http will be or has benn disabled on Smart Call Home Server call-home will fail to send message to the http destination	call-home	"Please change the http address to https address."
<del>CALLHOME</del> HTTPSDCSIPAD	4-Warning	Http will be or has been disabled on Smart Call Home Server please change the address [chars] to https address for profile [chars]. Otherwise call-home will fail to send messages	Http will be or has benn disabled on Smart Call Home Server call-home will fail to send message to the http destination	call-home	"Please change the http address to https address."
<del>CALLHOME</del> MSCSRFCAD	4-Warning	message size over limit call-home message is truncated. configured message size limit [dec] is less than current message	call-home message is truncated because configured message size limit is smaller than current message total length required.	call-home	"Please re-config the destination message-size-limit."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CALHOME</del> <del>MSG</del> <del>TRUNC</del> <del>ED</del>	4-Warning	message size over limit call-home message is truncated. configured message size limit [dec] is less than current message	call-home message is truncated because configured message size limit is smaller than current message total length required.	call-home	"Please re-config the destination message-size-limit."
<del>CALHOME</del> <del>ES</del> <del>ACI</del> <del>ON</del> <del>MSG</del>	5-Notice	Notification message from diagnostic-signature file [chars]: [chars]	Notification message from call-home diagnostic-signature because the message action defined in it was performed.	call-home	"No action is required."
<del>CALHOME</del> <del>ES</del> <del>ACI</del> <del>ON</del> <del>MSG</del>	5-Notice	Notification message from diagnostic-signature file [chars]: [chars]	Notification message from call-home diagnostic-signature because the message action defined in it was performed.	call-home	"No action is required."
<del>CALHOME</del> <del>HT</del> <del>TP</del> <del>NOT</del> <del>S</del> <del>UP</del> <del>ORT</del>	5-Notice	This image version does not support HTTPS	This image does not support secure HTTP although user configures https url	call-home	"Please upgrade your system image to a crypto image which supports" "secure http."
<del>CALHOME</del> <del>HT</del> <del>TP</del> <del>NOT</del> <del>S</del> <del>UP</del> <del>ORT</del>	5-Notice	This image version does not support HTTPS	This image does not support secure HTTP although user configures https url	call-home	"Please upgrade your system image to a crypto image which supports" "secure http."
<del>CALHOME</del> <del>S</del> <del>MSG</del> <del>CE</del> <del>AI</del> <del>D</del>	5-Notice	Fail to send out Smart Licensing message to: [chars] ERR [dec] : [chars]	-	-	-
<del>CALHOME</del> <del>S</del> <del>MSG</del> <del>CE</del> <del>AI</del> <del>D</del>	5-Notice	Fail to send out Smart Licensing message to: [chars] ERR [dec] : [chars]	-	-	-
<del>CALHOME</del> <del>CALL</del> <del>HOM</del> <del>E</del> <del>EN</del> <del>AB</del> <del>LE</del>	6-Information	Call-home is enabled by Smart Agent for Licensing.	Call-home is enabled by Smart Agent for Licensing.	call-home	"No action is required."
<del>CALHOME</del> <del>CALL</del> <del>HOM</del> <del>E</del> <del>EN</del> <del>AB</del> <del>LE</del>	6-Information	Call-home is enabled by Smart Agent for Licensing.	Call-home is enabled by Smart Agent for Licensing.	call-home	"No action is required."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CALLHOME</del> <del>SRC</del> <del>HTTP</del> <del>CISE</del>	6-Information	The Email transport method is currently selected for the Smart Call Home service. To download the Diagnostic Signature from the Smart Call Home Server the HTTP transport method must be enabled and a destination HTTP URL must be configured in the [chars] profile.	The call-home diagnostic-signature update will not start because the HTTP transport method is disabled or the URL destination is not configured in the diagnostic-signature profile.	call-home	"This message is informational only."
<del>CALLHOME</del> <del>SRC</del> <del>HTTP</del> <del>CISE</del>	6-Information	The Email transport method is currently selected for the Smart Call Home service. To download the Diagnostic Signature from the Smart Call Home Server the HTTP transport method must be enabled and a destination HTTP URL must be configured in the [chars] profile.	The call-home diagnostic-signature update will not start because the HTTP transport method is disabled or the URL destination is not configured in the diagnostic-signature profile.	call-home	"This message is informational only."
<del>CALLHOME</del> <del>SRC</del> <del>REMEDIATION</del> <del>CDN</del>	6-Information	The call-home diagnostic-signature [chars] action was performed. Device status such as configuration or line card status may be affected.	The call-home diagnostic-signature remediation actions were performed	call-home	"No action is required."





<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CALLHOME_SCH_CHEE</del>	6-Information	call-home request message succeeded	call-home request message was sent successfully.	call-home	"No action is needed. This is informational message."
<del>CALLHOME_SCH_CHEE</del>	6-Information	call-home request message succeeded	call-home request message was sent successfully.	call-home	"No action is needed. This is informational message."
<del>CALLHOME_SCH_CHEE</del>	6-Information	Device registration with Smart Call HomeSCH is in progress.	SCH device registration is in progress after a Smart licensing registration message was received. Call-home will poll SCH server for the registration result.	call-home	"No action is required."
<del>CALLHOME_SCH_CHEE</del>	6-Information	Device registration with Smart Call HomeSCH is in progress.	SCH device registration is in progress after a Smart licensing registration message was received. Call-home will poll SCH server for the registration result.	call-home	"No action is required."
<del>CALLHOME_SCH_CHEE</del>	6-Information	Device SCH registration result: [chars]. The result has no impact on Smart Licensing registration. You can check Smart Licensing registration status by executing command \show license summary\.	Call-home retrieved and printed out the registration result from SCH server.	call-home	"No action is required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CALL_MGMT-HSRD-SYS	6-Information	Device SCH registration result: [chars]. The result has no impact on Smart Licensing registration. You can check Smart Licensing registration status by executing command \show license summary\.	Call-home retrieved and printed out the registration result from SCH server.	call-home	"No action is required."
CALL_MGMT-CALL_LIST	1-Alert	[chars]	The specific message text is supplied by the Call Management\n software. This indicates that internal data was corrupted\n due to a software error	-	LOG_SID_SH_TECH_ACTION
CALL_MGMT-CM-QPOOL	1-Alert	[chars]	The specific message text is supplied by the Call Management\n software. This indicates a memory exhaustion condition.	-	LOG_SID_REDUCE_ACTION
CALL_MGMT-INIT-SYS	1-Alert	[chars]	The specific message text is supplied by the Call Management\n software. This indicates an initialization failure. When this\n occurs the Call Management subsystem is not operational.	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CALL_MGMT4CALL_DSC	4-Warning	[chars]	The specific message text is supplied by the Call Management\n\n software. This indicates that a call record is missing from\n\n active call list	-	LOG_STD_ACTION
CALLPROG3-API_INT	3-Error	api front init failed for [chars]	Failed to get free element from front end queue.	CallProgressNotification	"Platform requires additional free elements to properly function.\n\n Stop using Call Progress Notification applications.\n\n Call TAC to report the problem"
<del>CAIRCDM4MISCALFRC</del>	3-Error	[chars]	Terse Mcom Call Failed Record	modem-management	LOG_SID_NO_ACTION
<del>CAIRCDM4MISCALRC</del>	3-Error	[chars]	Terse Mcom Call Record	modem-management	LOG_SID_NO_ACTION
<del>CAIRCDM4MISCALFRC</del>	3-Error	[chars]	Terse Mica Call Failed Record	modem-management	LOG_SID_NO_ACTION
<del>CAIRCDM4MISCALRC</del>	3-Error	[chars]	Terse Mica Call Record	modem-management	LOG_SID_NO_ACTION
<del>CAIRCDM4MISCALFRC</del>	3-Error	[chars]	Record Generated Exceeded Syslog Capability	modem-management	LOG_SID_NO_ACTION
<del>CAIRCDM4MISCALFRC</del>	3-Error	[chars]	Record Generated Exceeded Syslog Capability	modem-management	LOG_SID_NO_ACTION
<del>CAIRCDM4MISCALFRC</del>	6-Information	[chars]	Terse Mica Call Failed Record	modem-management	LOG_SID_NO_ACTION
<del>CAIRCDM4MISCALRC</del>	6-Information	[chars]	Terse Mica Call Record	modem-management	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CALLTREATCPU	3-Error	System experiencing high cpu utilization.\n	System does not have enough CPU resources available to allocate \n\ a new resource.	call-treatment	"Ensure that the call setup rate is within the supported capacity of\n\ this gateway. Enter the <CmdBold>show proc cpu<NoCmdBold>\n\ command to see which processes are consuming the most CPU\n\ capacity and if appropriate reduce other system activity to \n\ ease CPU demands. By default the system will reject calls \n\ if the five-second CPU utilization on the gateway exceeds 89[node]\n\ The default value can be overridden by enabling call treatment \n\ and entering the <CmdBold>call threshold global cpu-5sec<NoCmdBold> \n\ command."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CIRANSMBIPSEIOD	3-Error	System experiencing high cpu utilization.\n	System does not have enough CPU resources available to allocate \n\ a new resource.	call-treatment	"Ensure that the call setup rate is within the supported capacity of\n\ this gateway. Enter the <CmdBold>show proc cpu<NoCmdBold>\n\ command to see which processes are consuming the most CPU\n\ capacity and if appropriate reduce other system activity to \n\ ease CPU demands. By default the system will reject calls \n\ if the five-second CPU utilization on the gateway exceeds 89[node]\n\ The default value can be overridden by enabling call treatment \n\ and entering the <CmdBold>call threshold global cpu-5sec<NoCmdBold>\n\ command."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CALLTREATCPUHIGH	3-Error	System experiencing high average cpu utilization.\n	Based on the average CPU utilization over a 60-second interval or an\n\n interval configured through the <CmdBold>call threshold\n\n poll-interval<NoCmdBold> command the system does not have \n\n enough CPU resources available to accept a new call.	call-treatment	"Ensure that the call setup rate is within the supported capacity of\n\n this gateway. Check to see if the current call setup\n\n rate is supported on this gateway. Enter the <CmdBold>show proc\n\n cpu<NoCmdBold> command to see which processes are consuming the \n\n most CPU capacity and if appropriate reduce other system\n\n activity to ease CPU demands. By default the system will reject \n\n calls if the five-second CPU utilization on the gateway exceeds 98[node]\n\n The default value can be overridden by enabling call treatment and\n\n entering the <CmdBold>call threshold global cpu-avg<NoCmdBold>\n\n command."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CALLTREATCPU	3-Error	System experiencing high average cpu utilization.\n	Based on the average CPU utilization over a 60-second interval or an\n\n interval configured through the <CmdBold>call threshold\n\n poll-interval<NoCmdBold> command the system does not have \n\n enough CPU resources available to accept a new call.	call-treatment	"Ensure that the call setup rate is within the supported capacity of\n\n this gateway. Check to see if the current call setup\n\n rate is supported on this gateway. Enter the <CmdBold>show proc\n\n cpu<NoCmdBold> command to see which processes are consuming the \n\n most CPU capacity and if appropriate reduce other system\n\n activity to ease CPU demands. By default the system will reject \n\n calls if the five-second CPU utilization on the gateway exceeds 98[node]\n\n The default value can be overridden by enabling call treatment and\n\n entering the <CmdBold>call threshold global cpu-avg<NoCmdBold>\n\n command."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CALLSETUP</del>	3-Error	System experiencing high cpu utilization over one minute interval.\n	Based on the average CPU utilization over a 60 second interval \n\ the system does not have enough CPU resources available.	call-treatment	"Ensure that the call setup rate is within the supported capacity of\n\ this gateway. Enter the <CmdBold>show proc cpu<NoCmdBold>\n\ command to see which processes are consuming\n\ the most CPU capacity and if appropriate reduce other system\n\ activity to ease CPU demands. By default the system will reject \n\ resource allocation if the five-second CPU utilization on the gateway exceeds 98[node]"
<del>CALLSETUP</del>	3-Error	System experiencing high cpu utilization over one minute interval.\n	Based on the average CPU utilization over a 60 second interval \n\ the system does not have enough CPU resources available.	call-treatment	"Ensure that the call setup rate is within the supported capacity of\n\ this gateway. Enter the <CmdBold>show proc cpu<NoCmdBold>\n\ command to see which processes are consuming\n\ the most CPU capacity and if appropriate reduce other system\n\ activity to ease CPU demands. By default the system will reject \n\ resource allocation if the five-second CPU utilization on the gateway exceeds 98[node]"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CATRNSMPIO/M/SE	3-Error	System running low on I/O memory.\n	The system does not have enough free I/O memory.	call-treatment	<p>"Ensure that the gateway has the recommended amount of I/O memory\n\ for this Cisco IOS feature set and version. Enter the \n\ &lt;CmdBold&gt;show mem&lt;NoCmdBold&gt; and &lt;CmdBold&gt;show proc mem&lt;NoCmdBold&gt; \n\ commands to see which processes are consuming the\n\ most memory. Check to see if the memory usage is appropriate for these\n\ processes and if so reduce other system activity to ease CPU demands.\n\ The high and low thresholds for I/O memory utilization can be\n\ configured by enabling call treatment and entering the\n\ &lt;CmdBold&gt;call threshold global io-mem&lt;NoCmdBold&gt; command."</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CIRTCMERRIOMLSE	3-Error	System running low on I/O memory.\n	The system does not have enough free I/O memory.	call-treatment	<p>"Ensure that the gateway has the recommended amount of I/O memory\n\n for this Cisco IOS feature set and version. Enter the \n\n &lt;CmdBold&gt;show mem&lt;NoCmdBold&gt; and &lt;CmdBold&gt;show proc mem&lt;NoCmdBold&gt; \n\n commands to see which processes are consuming the\n\n most memory. Check to see if the memory usage is appropriate for these\n\n processes and if so reduce other system activity to ease CPU demands.\n\n The high and low thresholds for I/O memory utilization can be\n\n configured by enabling call treatment and entering the\n\n &lt;CmdBold&gt;call threshold global io-mem&lt;NoCmdBold&gt; command."</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CIRCSMEMBOISE	3-Error	System running low on memory.	The system does not have enough free memory to allocated new resource.	call-treatment	<p>"Ensure that the gateway has the recommended amount of memory for this Cisco IOS feature set and version. Enter the</p> <pre>&lt;CmdBold&gt;show mem&lt;NoCmdBold&gt; and &lt;CmdBold&gt;show proc mem&lt;NoCmdBold&gt;</pre> <p>commands to see which processes are consuming the most memory. Check to see if the memory usage is appropriate for these processes and if so reduce other system activity to ease CPU demands. By default the system will reject calls if there is less than 2[node]ree processor memory on the gateway. This value can be overridden by enabling call treatment and entering the <pre>&lt;CmdBold&gt;call threshold global total-mem&lt;NoCmdBold&gt;</pre> <p>command."</p> </p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CALL-LOW-MEM-OR-USE	3-Error	System running low on memory.	The system does not have enough free memory to allocated new resource.	call-treatment	"Ensure that the gateway has the recommended amount of memory for\n\n this Cisco IOS feature set and version. Enter the \n\n <CmdBold>show mem<NoCmdBold> and <CmdBold>show proc mem<NoCmdBold> \n\n commands to see which processes are consuming the\n\n most memory. Check to see if the memory usage is appropriate for these\n\n processes and if so reduce other system activity to ease CPU demands.\n\n By default the system will reject calls if there is less than 2[node]ree\n\n processor memory on the gateway. This value can be overridden by \n\n enabling call treatment and entering the\n\n <CmdBold>call threshold global total-mem<NoCmdBold> command."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<p><del>CALL</del>  <del>MEM</del>  <del>PRO</del>  <del>MISC</del></p>	3-Error	System running low on processor memory.\n	The system does not have enough free processor memory.	call-treatment	<p>"Ensure that the gateway has the recommended amount of processor memory\n\ for this Cisco IOS feature set and version. Enter the \n\ &lt;CmdBold&gt;show mem&lt;NoCmdBold&gt; and &lt;CmdBold&gt;show proc mem&lt;NoCmdBold&gt;\n\ commands to see which processes are consuming the\n\ most memory. Check to see if the memory usage is appropriate for these\n\ processes and if so reduce other system activity to ease CPU demands.\n\ The high and low thresholds for processor memory utilization can be\n\ configured by enabling call treatment and entering the\n\ &lt;CmdBold&gt;call threshold global proc mem&lt;NoCmdBold&gt; command."</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CALLTHRESHOLDGLOBALPROC-MEM	3-Error	System running low on processor memory.\n	The system does not have enough free processor memory.	call-treatment	<p>"Ensure that the gateway has the recommended amount of processor memory\n\n for this Cisco IOS feature set and version. Enter the \n\n</p> <pre>&lt;CmdBold&gt;show mem&lt;NoCmdBold&gt; and &lt;CmdBold&gt;show proc mem&lt;NoCmdBold&gt;\n\ commands to see which processes are consuming the\n\ most memory. Check to see if the memory usage is appropriate for these\n\ processes and if so reduce other system activity to ease CPU demands.\n\ The high and low thresholds for processor memory utilization can be\n\ configured by enabling call treatment and entering the\n\ &lt;CmdBold&gt;call threshold global proc-mem&lt;NoCmdBold&gt; command."</pre>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CALL-3-ERR-CAIS	3-Error	High call volume.\n	The system is experiencing a high call volume.	call-treatment	"Disable call threshold modify the call threshold global\n\ high and low values or investigate the cause of the high resource\n\ utilization. The high and low thresholds for total number of calls\n\ can be configured by enabling call treatment and entering the\n\ <CmdBold>call threshold global proc-mem<NoCmdBold> command."
CALL-3-ERR-CAIS	3-Error	High call volume.\n	The system is experiencing a high call volume.	call-treatment	"Disable call threshold modify the call threshold global\n\ high and low values or investigate the cause of the high resource\n\ utilization. The high and low thresholds for total number of calls\n\ can be configured by enabling call treatment and entering the\n\ <CmdBold>call threshold global proc-mem<NoCmdBold> command."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CALLTREATCPU_SCIOD	3-Error	System experiencing high cpu utilization. Processing for callID[dec] is rejected.\n	System does not have enough CPU resources available to accept\n a new call. The specified call was rejected.	call-treatment	"Ensure that the call setup rate is within the supported capacity of\n this gateway. Enter the <CmdBold>show proc cpu<NoCmdBold>\n command to see which processes are consuming the most CPU\n capacity and if appropriate reduce other system activity to \n ease CPU demands. By default the system will reject calls \n if the five-second CPU utilization on the gateway exceeds 89[node]\n The default value can be overridden by enabling call treatment \n and entering the <CmdBold>call threshold global cpu-5sec<NoCmdBold> \n command."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CALLTRAPCPU_SCIOD	3-Error	System experiencing high cpu utilization. Processing for callID[dec] is rejected.\n	System does not have enough CPU resources available to accept\n\n a new call. The specified call was rejected.	call-treatment	"Ensure that the call setup rate is within the supported capacity of\n\n this gateway. Enter the <CmdBold>show proc cpu<NoCmdBold>\n\n command to see which processes are consuming the most CPU\n\n capacity and if appropriate reduce other system activity to \n\n ease CPU demands. By default the system will reject calls \n\n if the five-second CPU utilization on the gateway exceeds 89[node]\n\n The default value can be overridden by enabling call treatment \n\n and entering the <CmdBold>call threshold global cpu-5sec<NoCmdBold>\n\n command."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CALLTREATCPUAVGTHOLD	3-Error	System experiencing high average cpu utilization. Processing for callID[dec] is rejected.\n	Based on the average CPU utilization over a 60-second interval or an\n\n interval configured through the <CmdBold>call threshold\n\n poll-interval<NoCmdBold> command the system does not have \n\n enough CPU resources available to accept a new call. The specified \n\n call was rejected.	call-treatment	"Ensure that the call setup rate is within the supported capacity of\n\n this gateway. Check to see if the current call setup\n\n rate is supported on this gateway. Enter the <CmdBold>show proc\n\n cpu<NoCmdBold> command to see which processes are consuming the \n\n most CPU capacity and if appropriate reduce other system\n\n activity to ease CPU demands. By default the system will reject \n\n calls if the five-second CPU utilization on the gateway exceeds 98[node]\n\n The default value can be overridden by enabling call treatment and\n\n entering the <CmdBold>call threshold global cpu-avg<NoCmdBold>\n\n command."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CALLTREATCPU_AVRCHOD	3-Error	System experiencing high average cpu utilization. Processing for callID[dec] is rejected.\n	Based on the average CPU utilization over a 60-second interval or an\n\n interval configured through the <CmdBold>call threshold\n\n poll-interval<NoCmdBold> command the system does not have \n\n enough CPU resources available to accept a new call. The specified \n\n call was rejected.	call-treatment	"Ensure that the call setup rate is within the supported capacity of\n\n this gateway. Check to see if the current call setup\n\n rate is supported on this gateway. Enter the <CmdBold>show proc\n\n cpu<NoCmdBold> command to see which processes are consuming the \n\n most CPU capacity and if appropriate reduce other system\n\n activity to ease CPU demands. By default the system will reject \n\n calls if the five-second CPU utilization on the gateway exceeds 98[node]\n\n The default value can be overridden by enabling call treatment and\n\n entering the <CmdBold>call threshold global cpu-avg<NoCmdBold>\n\n command."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CALLTREATMENT	3-Error	System experiencing high cpu utilization over one minute interval. Processing for callID[dec] is rejected.\n	Based on the average CPU utilization over a 60 second interval \n\n the system does not have enough CPU resources available to accept\n\n a new call. The specified call was rejected.	call-treatment	"Ensure that the call setup rate is within the supported capacity of\n\n this gateway. Enter the <CmdBold>show proc cpu<NoCmdBold>\n\n command to see which processes are consuming\n\n the most CPU capacity and if appropriate reduce other system\n\n activity to ease CPU demands. By default the system will reject \n\n calls if the five-second CPU utilization on the gateway exceeds 98[node]"
CALLTREATMENT	3-Error	System experiencing high cpu utilization over one minute interval. Processing for callID[dec] is rejected.\n	Based on the average CPU utilization over a 60 second interval \n\n the system does not have enough CPU resources available to accept\n\n a new call. The specified call was rejected.	call-treatment	"Ensure that the call setup rate is within the supported capacity of\n\n this gateway. Enter the <CmdBold>show proc cpu<NoCmdBold>\n\n command to see which processes are consuming\n\n the most CPU capacity and if appropriate reduce other system\n\n activity to ease CPU demands. By default the system will reject \n\n calls if the five-second CPU utilization on the gateway exceeds 98[node]"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CDRTRABCHMEM_SCE	3-Error	System running low on I/O memory. Processing for callID[dec] is rejected.\n	The system does not have enough free I/O memory to accept a new call.\n\n The specified call was rejected.	call-treatment	"Ensure that the gateway has the recommended amount of I/O memory\n\n for this Cisco IOS feature set and version. Enter the \n\n <CmdBold>show mem<NoCmdBold> and <CmdBold>show proc mem<NoCmdBold> \n\n commands to see which processes are consuming the\n\n most memory. Check to see if the memory usage is appropriate for these\n\n processes and if so reduce other system activity to ease CPU demands.\n\n The high and low thresholds for I/O memory utilization can be\n\n configured by enabling call treatment and entering the\n\n <CmdBold>call threshold global io-mem<NoCmdBold> command."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CALLREACH_HDMEM_USAGE	3-Error	System running low on I/O memory. Processing for callID[dec] is rejected.\n	The system does not have enough free I/O memory to accept a new call.\n\ The specified call was rejected.	call-treatment	"Ensure that the gateway has the recommended amount of I/O memory\n\n for this Cisco IOS feature set and version. Enter the \n\n <CmdBold>show mem<NoCmdBold> and <CmdBold>show proc mem<NoCmdBold> \n\n commands to see which processes are consuming the\n\n most memory. Check to see if the memory usage is appropriate for these\n\n processes and if so reduce other system activity to ease CPU demands.\n\n The high and low thresholds for I/O memory utilization can be\n\n configured by enabling call treatment and entering the\n\n <CmdBold>call threshold global io-mem<NoCmdBold> command."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CALLTHRESHMEMORUSE	3-Error	System running low on memory. Processing for callID[dec] is rejected.\n	The system does not have enough free memory to accept a new call. \n\ The specified call was rejected.	call-treatment	"Ensure that the gateway has the recommended amount of memory for\n\n this Cisco IOS feature set and version. Enter the \n\ <CmdBold>show mem<NoCmdBold> and <CmdBold>show proc mem<NoCmdBold> \n\ commands to see which processes are consuming the\n\ most memory. Check to see if the memory usage is appropriate for these\n\ processes and if so reduce other system activity to ease CPU demands.\n\ By default the system will reject calls if there is less than 2[node]ree\n\ processor memory on the gateway. This value can be overridden by \n\ enabling call treatment and entering the\n\ <CmdBold>call threshold global total-mem<NoCmdBold> command."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CALL-3-LOWMEM	3-Error	System running low on memory. Processing for callID[dec] is rejected.\n	The system does not have enough free memory to accept a new call. \n\ The specified call was rejected.	call-treatment	"Ensure that the gateway has the recommended amount of memory for\n\ this Cisco IOS feature set and version. Enter the \n\ <CmdBold>show mem<NoCmdBold> and <CmdBold>show proc mem<NoCmdBold> \n\ commands to see which processes are consuming the\n\ most memory. Check to see if the memory usage is appropriate for these\n\ processes and if so reduce other system activity to ease CPU demands.\n\ By default the system will reject calls if there is less than 2[node]ree\n\ processor memory on the gateway. This value can be overridden by \n\ enabling call treatment and entering the\n\ <CmdBold>call threshold global total-mem<NoCmdBold> command."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CDRABOHPROMM_SCE	3-Error	System running low on processor memory. Processing for callID[dec] is rejected.\n	The system does not have enough free processor memory to accept a new\n\ call. The specified call was rejected.	call-treatment	"Ensure that the gateway has the recommended amount of processor memory\n\ for this Cisco IOS feature set and version. Enter the \n\ <CmdBold>show mem<NoCmdBold> and <CmdBold>show proc mem<NoCmdBold>\n\ commands to see which processes are consuming the\n\ most memory. Check to see if the memory usage is appropriate for these\n\ processes and if so reduce other system activity to ease CPU demands.\n\ The high and low thresholds for processor memory utilization can be\n\ configured by enabling call treatment and entering the\n\ <CmdBold>call threshold global proc mem<NoCmdBold> command."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CALLRABG-RCMMSCE	3-Error	System running low on processor memory. Processing for callID[dec] is rejected.\n	The system does not have enough free processor memory to accept a new\n\n call. The specified call was rejected.	call-treatment	"Ensure that the gateway has the recommended amount of processor memory\n\n for this Cisco IOS feature set and version. Enter the \n\n <CmdBold>show mem<NoCmdBold> and <CmdBold>show proc mem<NoCmdBold>\n\n commands to see which processes are consuming the\n\n most memory. Check to see if the memory usage is appropriate for these\n\n processes and if so reduce other system activity to ease CPU demands.\n\n The high and low thresholds for processor memory utilization can be\n\n configured by enabling call treatment and entering the\n\n <CmdBold>call threshold global proc-mem<NoCmdBold> command."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CALLREACHION_CALS	3-Error	High call volume. Processing for callID[dec] is rejected.\n	The system is experiencing a high call volume. There are not\n\ enough resources to accept a new call. The specified call was \n\ rejected.	call-treatment	"Disable call threshold modify the call threshold global\n\ high and low values or investigate the cause of the high resource\n\ utilization. The high and low thresholds for total number of calls\n\ can be configured by enabling call treatment and entering the\n\ <CmdBold>call threshold global proc-mem<NoCmdBold> command."
CALLREACHION_CALS	3-Error	High call volume. Processing for callID[dec] is rejected.\n	The system is experiencing a high call volume. There are not\n\ enough resources to accept a new call. The specified call was \n\ rejected.	call-treatment	"Disable call threshold modify the call threshold global\n\ high and low values or investigate the cause of the high resource\n\ utilization. The high and low thresholds for total number of calls\n\ can be configured by enabling call treatment and entering the\n\ <CmdBold>call threshold global proc-mem<NoCmdBold> command."
CALLRRCAL_RCHRCR	3-Error	[chars]	Record Generated Exceeded Syslog Capability	CallTracker	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CALLTRKR-3-NO_MEM	3-Error	Memory allocation failed for CT [chars] [dec] bytes	Calltracker couldn't allocate new record due to no free memory.	CallTracker	"Disable calltracker [no calltracker enable]. Run show memory to\n\n find out where is the memory been allocated."
CALLTRKR-3-PRINT_BUFFER	3-Error	calltrkr cli print buffer [chars]	calltrkr cli internal print buffer overflow.	Calltracker	"Stop to using calltrkr show commands call TAC to report the problem"
CALLTRKR-3-PROC	3-Error	can't spawn [chars]	Couldn't spawn calltracker process.	CallTracker	"Disable calltracker first [no calltracker enable] enable it again."
CALLTRKR-6-CALL_RECORD	6-Information	[chars]	Terse CallTracker Call Record	CallTracker	LOG_SID_NO_ACTION
CALLTRKR-6-MODEM_CALL_REC	6-Information	[chars]	Modem Verbose CallTracker Call Record	CallTracker	LOG_SID_NO_ACTION
CALLTRKR-6-MODEM_INFO_CALL_REC	6-Information	[chars]	Modem Information Verbose CallTracker Call Record	CallTracker	LOG_SID_NO_ACTION
CALLTRKR-6-MODEM_LINE_CALL_REC	6-Information	[chars]	Modem Line Verbose CallTracker Call Record	CallTracker	LOG_SID_NO_ACTION
CALLTRKR-6-MODEM_NEGO_CALL_REC	6-Information	[chars]	Modem Negotiation Verbose CallTracker Call Record	CallTracker	LOG_SID_NO_ACTION
CARCHANGED-DYNAMIC-LDP	4-Warning	ERRMSG_NOFLAGS	-	-	-
CARCHANGED-DYNAMIC-LDP	4-Warning	ERRMSG_NOFLAGS	-	-	-
CAPCHANGE-4-LDP	4-Warning	ERRMSG_NOFLAGS	-	-	-
CAPCHANGE-4-LDP	4-Warning	ERRMSG_NOFLAGS	-	-	-
CAPWAP_FRAGMENTATION_ENABLED	2-Critical	[chars] feature not enabled at interface [chars] packet cannot be processed	Capwap Fragmentation feature as indicated not enabled by the control plane. This is a critical problem.	qfp	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CAPWAP_FRAG</del> CAPWAP_FRAG_DBG	3-Error	Capwap Fragmentation encountered an error: [chars] [chars] [node] [chars] [node]	Capwap Fragmentation encountered a runtime error as indicated in the message with parameter data for debug	qfp	LOG_STD_ACTION
<del>CAPWAP_FRAG</del> CAPWAP_FRAG_ERR	3-Error	Capwap Fragmentation encountered an error: [chars]	Capwap Fragmentation encountered a runtime error as indicated	qfp	LOG_STD_ACTION
CAPWAP_FRAG_INIT_FAILED	3-Error	Initialization of the CAPWAP_FRAG feature in QFP failed	Initialization of the CAPWAP_FRAG feature in the QFP failed. This indicates a software failure.	qfp	LOG_STD_ACTION
CAPWAP_FRAG_INVALID_QFPNO	3-Error	Invalid qfp device no.: [chars]	Invalid qfp device no.	qfp	LOG_STD_ACTION
<del>CAPWAP_FRAG</del> CAPWAP_FRAG_INIT_FAILED	3-Error	ewcap-image	Unable to determine name of AP running active controller. Please ensure internal AP has joined and try again	Installer needs to check that the configured preferred master matches the current active controller AP name before reloading. However it was unable to determine the active controller AP name	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRITICAL</del>	3-Error	ewcap-image	The configured preferred master AP name does not match the current active controller AP name. Please configure the preferred master AP name with 'wireless ewc-ap preferred-master' to match the active controller AP name as shown by 'show wireless ewc-ap redundancy summary' and try again	Installer requires that the configured preferred master matches the current active controller AP name before reloading. Please ensure that the preferred master is configured correctly and then try again	LOG_SID_NO_ACTION
<del>CRITICAL</del>	3-Error	ewcap-image	Configured image download profile failed to download version.info; check network and server configuration	Configured image download profile may not be able to download the correct AP images	LOG_SID_NO_ACTION
<del>CRITICAL</del>	3-Error	ewcap-image	Failed to start downloading AP image version with error[chars]	Configured image download profile may not be able to download the correct AP images	LOG_SID_NO_ACTION
<del>CRITICAL</del>	3-Error	ewcap-image	External download for internal AP cannot start	-	-
<del>CRITICAL</del>	3-Error	ewcap-image	Controller performs another external transfer	-	-
<del>CRITICAL</del>	3-Error	iosxe-binos-utils	%% Error:[chars]	Network not ready for this install command	Try again later

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>IOSXE-3-ERR</del>	3-Error	iosxe-binos-utils	No sufficient space on bootflash for upgrade. Please do 'dir bootflash:' to list and delete unwanted files. Please do 'install remove profile default'.	No sufficient space on flash to hold the image	-
<del>EWCAP-3-ERR</del>	3-Error	ewcap-image	Please do poll-cco once before starting EWC-AP software predownload via CCO	EWC-AP software prodownload via CCO requires polling CCO first to get suggested/latest software version	LOG_SID_NO_ACTION
<del>EWCAP-3-ERR</del>	3-Error	ewcap-image	Internal AP has not joined the controller. Once internal AP is up	-	-
<del>IOSXE-3-ERR</del>	3-Error	iosxe-binos-utils	%% Error:[chars]	Improper arguments or config	Arguments to be changed
<del>EWCAP-4-WRN</del>	4-Warning	ewcap-image	Configured image download profile downloads AP image version[chars]; requires AP image version[chars] to join this controller	Configured image download profile does not work for AP join	LOG_SID_NO_ACTION
<del>EWCAP-4-WRN</del>	4-Warning	ewcap-image	Image predownload is still in progress	-	-
<del>EWCAP-5-NOT</del>	5-Notice	ewcap-image	List Event:[chars]	EWC-AP Master/Invalid Master AP list insertion/deletion/relection Events	LOG_SID_NO_ACTION
<del>EWCAP-6-INFO</del>	6-Information	ewcap-image	AP Event: Downloaded AP image[chars] was deleted	Downloaded AP image deleted	LOG_SID_NO_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>AWDNRNRRDNRNRRNRRD</del>	6-Information	ewcap-image	AP Event: Downloaded AP image[chars] without image node was deleted	Downloaded AP image deleted from RAM disk	LOG_SID_NO_ACTION
<del>AWDNRNRRDNRNRRNRRD</del>	6-Information	ewcap-image	Configured image download profile downloads AP image version[chars]	-	-
<del>AWDNRNRRDNRNRRNRRD</del>	6-Information	ewcap-image	AP Event: External Download complete and deleted for AP image[chars] without image node	Downloaded AP image deleted from RAM disk	LOG_SID_NO_ACTION
<del>AWDNRNRRDNRNRRNRRD</del>	6-Information	iosxe-binos-utils	corefiles and/or tracelogs have been deleted	-	-
<del>AWDNRNRRDNRNRRNRRD</del>	6-Information	ewcap-image	EWC-AP Event: EWC-AP Controller image[chars] mmaped ... Timer started to unmap	EWC-AP Image MMaped in Memory	LOG_SID_NO_ACTION
<del>AWDNRNRRDNRNRRNRRD</del>	6-Information	ewcap-image	EWC-AP Event: EWC-AP Controller image[chars] already mmaped in memory ... Timer to unmap reset	EWC-AP Image MMaped in Memory	LOG_SID_NO_ACTION
<del>AWDNRNRRDNRNRRNRRD</del>	6-Information	ewcap-image	EWC-AP Event: EWC-AP Controller image[chars] unmapped from memory ... Timer to unmap Stopped	Controller image unmapped from memory	LOG_SID_NO_ACTION
<del>AWDNRNRRDNRNRRNRRD</del>	6-Information	ewcap-image	AP Event: Predownload Total AP count %u	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CAPWAP_REASS_FAILED</del>	6-Information	ewcap-image	Sending master-going-down message to other APs so that they backoff for 5 minutes for existing active controller to be active after reload	To prevent EWC-AP-capable AP's from becoming EWC-AP controller when current controllr goes through reload	-
<del>CAPWAP_REASS_FAILED</del>	6-Information	ewcap-image	Network upgrade is not in correct state. Please do 'install remove profile default'	-	-
<del>CAPWAP_REASS_FAILED</del>	6-Information	ewcap-image	Btrace log export test event: Testing Log Export Feature	GUI Triggered Flow to test Log Export Feature	LOG_SID_NO_ACTION
<del>CAPWAP_REASS_FAILED</del>	3-Error	[dec]	IPC handler initialization failed.	cpp-ucode	LOG_STD_ACTION
<del>CAPWAP_REASS_FAILED</del>	3-Error	-	Increasing of Capwap Reassembly memory pool failed.	cpp-ucode	LOG_STD_ACTION
<del>CAPWAP_REASS_FAILED</del>	3-Error	-	Initialization of Capwap Reassembly memory pool failed.	cpp-ucode	LOG_STD_ACTION
<del>CAPWAP_REASS_FAILED</del>	4-Warning	[hec]	Received an invalid IPC messages subtype.	cpp-ucode	LOG_STD_ACTION
CAPWAP_REASS_UNENABED	2-Critical	[chars] feature not enabled at interface [chars] packet cannot be processed	Capwap Reassembly feature as indicated not enabled by the control plane. This is a critical problem.	qfp	LOG_STD_ACTION
CAPWAP_REASS_ALLOC_FAILD	3-Error	Allocation of [chars] memory failed for CAPWAP_REASS feature in QFP	Allocation of memory by the QFP CAPWAP_REASS feature microcode failed. The name of the memory chunk is specified in the message. This indicates a software failure	qfp	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CAPWAP_REASSMSG</del>	3-Error	Capwap Reassembly encountered an error: [chars] [chars] [node] [chars] [node]	Capwap Reassembly encountered a runtime error as indicated in the message with parameter data for debug	qfp	LOG_STD_ACTION
<del>CAPWAP_REASSERR</del>	3-Error	Capwap Reassembly encountered an error: [chars]	Capwap Reassembly encountered a runtime error as indicated	qfp	LOG_STD_ACTION
<del>CAPWAP_REASSNT_FAILED</del>	3-Error	Initialization of the CAPWAP_REASS feature in QFP failed	Initialization of the CAPWAP_REASS feature in the QFP failed. This indicates a software failure.	qfp	LOG_STD_ACTION
<del>CAPWAP_REASSNOQFPNO</del>	3-Error	Invalid qfp device no.: [chars]	Invalid qfp device no.	qfp	LOG_STD_ACTION
<del>CAPWAP_REASSMNT_FAILED</del>	3-Error	-	Failure occurred initializing capwap reass memory pool.	qfp	LOG_STD_ACTION
<del>CAPWAP_REASSMNTQFP_FAILED</del>	3-Error	-	IPC Failure occurred when attempting to request more capwap reass pool memory.	qfp	LOG_STD_ACTION
<del>EWLC_ERRMSGERR</del>	3-Error	ewlc-ap	Error in[chars]	General ewlc Error Message.	LOG_STD_ACTION
<del>EWLC_ERRMSGCHRD</del>	4-Warning	ewlc-ap	Warning :[chars]	Number of messages in capwap queue crossed the threshold(exceeded or recovered)	LOG_SID_NO_ACTION
<del>EWLC_ERRMSGCHRD</del>	5-Notice	ewlc-ap	AP Event:[chars]	AP Join/Disjoin Event	LOG_SID_NO_ACTION
<del>EWLC_ERRMSGINFO</del>	6-Information	ewlc-ap	Info : -[chars]	General Wireless LAN Controller info message	LOG_STD_ACTION
<del>EWLC_ERRMSG90P</del>	2-Critical	ewlc-ap	90%% (%d) of Maximum Supported AP Join Limit: %d exceeded	Exceeded 90% of maximum supported AP join limit	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>AMCRMS/CRITICAL</del>	2-Critical	ewlc-ap	Maximum supported AP join limit: %d exceeded	Maximum supported AP join limit exceeded	LOG_STD_ACTION
<del>AMCRMS/ERROR</del>	3-Error	ewlc-ap	Ap[chars] will be disconnected. Maximum AP Join Limit: %d Reached	Maximum AP join limit reached error	LOG_STD_ACTION
<del>AMCRMS/ERROR</del>	3-Error	ewlc-ap	Ap[chars] is not allowed to join. Please start reporting licensing to Cisco to get the ACK for resumption of normal operation.	Device is not registered	-
<del>AMCRMS/WARNING</del>	4-Warning	ewcap-image	Attempt by AP[chars] with MAC[chars] to join this controller was rejected due to PnP image download in progress	External AP is not allowed to join when internal AP image upgrade is going on as part of PnP image download	LOG_STD_ACTION
<del>AMCRMS/WARNING</del>	4-Warning	ewcap-image	Attempt by AP[chars] with MAC[chars] to join this controller was rejected due to network upgrade	New AP is not allowed to join during network upgrade	LOG_STD_ACTION
<del>AMCRMS/WARNING</del>	4-Warning	ewlc-app-infra	Attempt by AP with MAC[chars] to join this controller was rejected as WNCDs config init still in progress	External AP is not allowed to join as WNCD processes are still being initialized with wlan/policy/site configs	LOG_STD_ACTION
<del>AMCRMS/WARNING</del>	4-Warning	ewcap-image	Attempt by Internal AP[chars] with MAC[chars] to join this controller was rejected due to PnP Image Dwonload is in progress and PnP Provision is not Done	Internal AP is not allowed to join in PnP image upgrade flow till the PnP Provision is done	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CARDPROTECTIONBOHACTIVE	3-Error	For Card protection group: [dec] both primary and backup are active	In card protection group both primary and backup IM's are active	-	"Check configuration - abnormal situation"
CARDPROTECTIONACTIVE	4-Warning	Card protection group: [dec] is [chars] ACTIVE [chars]	whether card protection group is ACTIVE	-	"None - normal situation"
CARDPROTECTIONONGAD	4-Warning	[chars] [dec]/[dec] Member added to Card protection group [dec]	New Member added to Card protection group	-	"None - normal situation"
CARDPROTECTIONONGROUP	4-Warning	CARDPROTECTIONGroup [node]is configured	Card Protection group is configured	-	"None - normal situation"
CARDPROTECTIONONGVIRTUAL	4-Warning	Virtual IM [node][node]is created	Virtual IM is created for Card protection group	-	"None - normal situation"
CARDPROTECTIONPROTECTION	4-Warning	Card protection group: [dec] [chars] [dec]/[dec] is [chars] [chars]	Protection Switchover between members of group	-	"None - normal situation"
CARDSTATECARDUNSUPPORT	3-Error	Card in slot [node]with type [chars] is not supported in version [node][node]	The linecard inserted does not supported in currently running software.	cbr-platform-infra	"Replace the unsupported card or upgrade to right " "software."
CARDSTATEMEMEMISMATCH	3-Error	Mismatched card type [chars] in slot [dec]. Expected type [chars].	The linecard inserted does not match the currently provisioned card type.	cbr-platform-infra	"Replace wrong board type with currently provisioned " "board type or type 'no card' to allow new card " "type to be discovered."
CARDSTATEUNEXPECTED	3-Error	Unexpected error on slot [dec]: [chars]	An unexpected error has occurred while performing a linecard OIR action	cbr-platform-infra	LOG_STD_ACTION
CARDSTATEFORCERESET	4-Warning	Reset slot [node]for reason: [chars]	The SUP forced a linecard to reload for the reason.	cmts-platform-infra	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CARDS1AE4INCONSISTANT	4-Warning	Gemini version inconsistent: slot [dec] daughter board [dec] version [chars] slot [dec] daughter board [dec] version [chars]	Different Gemini in chassis CBR only supports the same hardware version US modules.	cmts-platform-infra	"Replace the Gemini to let the version " "of the Gemini in two slots be the same."
CARDS1LEOBENMISMATCH	4-Warning	Leoben version mismatch: slot [dec] version [chars] slot [dec] version [chars]	Different Leoben in chassis CBR only supports the same hardware version US modules.	cbr-platform-infra	"Replace the Leoben to let the version " "of the Leoben in two slots be the same."
CARRIER2CT3_E1_MIX	2-Critical	Cannot mix E1 PRI and CT3 DFC in chassis\ do not power up invalid card in slot [dec]\n	The user has put E1 PRI and CT3 DFC cards in the same chassis.	-	"Remove the extra E1 PRI or CT3 DFC card."
CARRIER2T1_E1_MIX	2-Critical	Cannot mix T1 and E1 8PRI DFC cards in chassis\ do not power up invalid card in slot [dec]\n	The user has put T1 and E1 8PRI DFC cards in the same chassis.	-	"Remove the extra T1 or E1 8PRI DFC card."
CARRIER2NP108S_COURSET	2-Critical	3 NP108s were not found on Tetryl card [dec] detected.	Tetryl requires 3 NP108s to be present	tetryl	LOG_STD_ACTION
CARRIER2TOOMANY_8PRI	2-Critical	Too many 8PRI DFC cards do not power up invalid card in slot [dec]\n	The user has put too many 8PRI DFC cards in the chassis.	-	"Remove the extra 8PRI DFC card."
CARRIER2TOOMANY_CB	2-Critical	Too many CT3 DFC cards do not power up invalid card in slot [dec]\n	The user has put too many CT3 DFC cards in the chassis.	-	"Remove the extra CT3 DFC card or 8PRI DFC card causing problem"
CARRIER2TOOMANY_TRUNK	2-Critical	Too many trunk DFC cards do not power up invalid card in slot [dec]\n	The user has put too many trunk DFC cards in the chassis.	-	"Remove the extra trunk DFC card."
CARRIER2DFC_ALREADY	3-Error	DFC is already initialized - DFC [dec]	DFC is already initialized no need to initialize again	as	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CARRIER3DFC_INIT_FAIL	3-Error	DFC initialization is failed - DFC [dec]	DFC initialization is failed because of several reasons	as	LOG_STD_ACTION
CARRIER3DFC_POWER_INIT	3-Error	DFC Power Changed - DFC [dec]	DFC Power is fluctuating	as	LOG_STD_ACTION
CARRIER3INVALID_DFC	3-Error	Invalid DFC - DFC [dec] type [dec]	DFC has invalid board id/type	as	LOG_STD_ACTION
CARRIER3PLATFORM_DFC	3-Error	DFC Carrier Platform Init Failed - Slot [dec]	DFC Carrier Platform Init Failed	as	LOG_STD_ACTION
CARRIER3POWER_DFC	3-Error	DFC Power-On Failed - DFC [dec]	DFC Power-On Failed	as	LOG_STD_ACTION
CARRIER3RESET_DFC	3-Error	DFC Reset Failed - DFC [dec]	During OIR Removal process DFC reset failed.	as	LOG_STD_ACTION
CASA-2-NOMEM	2-Critical	Out of memory: [chars]\n	CASA failed to allocate memory.	casa	LOG_STD_ACTION
CASA-3-BADVER	3-Error	Incoming packet is CASA v[dec] this router is v[dec]	A packet was received for the wrong version of CASA	casa	"Verify that all CASA devices are running the same version \n\nof the protocol"
CASA-4-BADMSG	4-Warning	Message parsing error: [chars]	Failed to parse an incoming packet	casa	"If this message is occurring repeatedly enable 'debug ip casa error'\n\nand record the output call your Cisco technical support representative\n\nand provide the gathered information."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CASA-4PORTCHANGE	4-Warning	Wildcard overlap: [chars]	A CASA wildcard received on one port has been overwritten \n\nby a service manager sending to another port. This message may appear \n\nonce if you are migrating your service to a new forwarding-agent port\n\nif it recurs it could indicate a configuration problem.	casa	LOG_SID_RECUR_ACTION
CASA-4SECURITY_FAIL	4-Warning	[chars] security information in CASA packet.	Security check failed.	casa	"Make sure all CASA systems are configured with the same password."
CASA-4UNEXPECTED	4-Warning	Unexpected error: [chars]	An unexpected error occurred while performing CASA operation	casa	LOG_SID_RECUR_ACTION
CASA-4-WARNING	4-Warning	Unexpected condition: [chars]	An unexpected condition was detected while performing CASA operation	casa	LOG_SID_RECUR_ACTION
CBAC_C3PL-3-INIT	3-Error	Firewall data plane updates are disabled	The firewall notification of objects to the data plane has failed to\n\nstartup and as such data plane updates are disabled.	inspect	show registry brief



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CBAC_CPL4OBJ_CREATE	4-Warning	Firewall [chars] object [chars] creation failed in the data plane error [dec]	The notification of the creation of a firewall object e.g. a parameter\n\n map has failed to update the data plane and as such the application\n\n of the parameters contained within the object will not be applied to\n\n the data plane. It is also possible that the common classification\n\n may fail to locate and bind to the object rendering the configuration\n\n incomplete in terms of application.	inspect	show memory
CBAC_CPL4OBJ_DELETE	4-Warning	Firewall [chars] object [chars] deletion failed in the data plane error [dec]	The notification of the deletion of a firewall object e.g. a parameter\n\n map has failed to update the data plane and as such the application\n\n of the parameters contained within the object may continue to be\n\n applied to the data plane.	inspect	show memory
CBAC_CPL4OBJ_MODIFY	4-Warning	Firewall [chars] object [chars] modification failed in the data plane error [dec]	The notification of the modification of a firewall object e.g. a\n\n parameter map has failed to update the data plane and as such the\n\n application of the parameters contained within the object will not be\n\n applied to the data plane.	inspect	show memory
ERRMSG_NOFLAGS	3-Error	ERRMSG_NOFLAGS	-	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>ERRMSG_NOEXTFWDG</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>CRIC3APPLY_DS_FAILED</del>	3-Error	Applying downstream license failed	Unable to apply the downstream license	cmts-application	"Please copy traceback information and report to TAC"
<del>CRIC3APPLY_CHA_FAILED</del>	3-Error	Enforcement failed	Unable to enforce	cmts-application	"Please copy traceback information and report to TAC"
<del>CRIC3APPLY_US_FAILED</del>	3-Error	Applying upstream license failed	Unable to apply the upstream license	cmts-application	"Please copy traceback information and report to TAC"
<del>CRIC3APPLY_UAN_FAILED</del>	3-Error	Applying upstream license failed	Unable to apply the upstream license	cmts-application	"Please copy traceback information and report to TAC"
<del>CRIC3CB_OPEN_FAILED</del>	3-Error	Failed to open CPB data file for reading and/or writing	Unable to open CPB data file	cmts-application	"Please report to TAC"
<del>CRIC3CB_READ_FAILED</del>	3-Error	Reading CPB data file failed	Unable to read CPB data from file	cmts-application	"Please report to TAC"
<del>CRIC3CB_SEEK_FAILED</del>	3-Error	Setting file position failed	Unable to set file position for reading and/or writing	cmts-application	"Please report to TAC"
<del>CRIC3CB_WRITE_FAILED</del>	3-Error	Writing CPB data file failed	Unable to write CPB data to file	cmts-application	"Please report to TAC"
CBR_LIC-3-CSB_FAIL	3-Error	[chars] Failed for [chars]	An attempt to parse a license related CLI failed	cmts-application	"Check the linecard license details and call TAC"
<del>CRIC3CSAMMALLOC_FAILED</del>	3-Error	[chars]	Platform malloc for Smart License Agent failed	cmts-application	"Check the mem usage and report to TAC"
<del>CRIC3CSANULLUNPR</del>	3-Error	[chars]	Platform getting a null function pointer from Smart License Agent	cmts-application	"Report to TAC"
<del>CRIC3CSARCISER_FAILED</del>	3-Error	[chars]	Smart License Agent registr failed	cmts-application	"Check call-home pki vrf config and the IdToken"
<del>CRIC3LICENSEENTITLEMENT</del>	3-Error	License entitlement DB is NULL!	The DS license DB is NULL	cmts-application	"Please copy traceback information and report to TAC"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CRIC@NULLICENSENO</del>	3-Error	License DB is NULL!	The license DB is NULL	cmts-application	"Please copy traceback information and report to TAC"
<del>CRIC@CPBLESRECORD</del>	4-Warning	In [chars] [node]UTC CPB samples loss is more than [node]u hours	CPB samples are less than expected.	cmts-application	"If it is not the first month apply CPB feature " "or maintenance window is no more than 5 hours. Please report to TAC"
<del>CRIC@CPBSNMSMACH</del>	4-Warning	CPB data will be removed since they are from Chassis: [chars]. Local Chassis is: [chars].	CPB records were saved in other Chassis.	cmts-application	"This is informational message."
<del>CRIC@SCBEVENTLOG</del>	5-Notice	CPB event: [chars]	Important event for CPB feature.	cmts-application	"This is informational message."
<del>CRIC@FCMEVENTLOG</del>	5-Notice	FCM event: [chars]	Important event for FCM feature.	cmts-application	"This is informational message."
<del>CRIC@CHANNELSHUTAL</del>	6-Information	[chars] channel [node]no shut is not allowed due to insufficient licenses	Unable to no shut the channel due to insufficient licenses	cmts-application	"Procure more licenses report to TAC"
<del>CRIC@CHANNELSHUTDOWN</del>	6-Information	[chars]:[node]has been restored to no shut	Restored previously shutdown channels to no shut state	cmts-application	"None"
<del>CRIC@CHANNELSHUTDOWN</del>	6-Information	[chars]:[node]has been shutdown due to deactivated enforcement	Channel shut due to enforcement	cmts-application	"Buy additional licenses. Please report to TAC"
<del>CRIC@DSICENFORCED</del>	6-Information	enforce_en:[node][chars] is %u	License contract violation! Enforced	cmts-application	"Buy consumed additional licenses and report to TAC"
<del>CRIC@DSICRESTRICTED</del>	6-Information	[chars] [chars]:[node][chars]	License contract violation! License Restricted/Enforced	cmts-application	"Buy additional licenses and report to TAC"
<del>CRIC@CHANNELSHUTDOWN</del>	6-Information	[chars] has been restored to no shut	Restored previously shutdown channels to no shut state	cmts-application	"None"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CRITICALCHANNELSHUTDOWN</del>	6-Information	[chars]	Channel shut due to enforcement	cmts-application	"Buy additional licenses. Please report to TAC"
<del>CRITICALLICENSEENFORCED</del>	6-Information	enforce_en:[node][chars] is %u	License contract violation! Enforced	cmts-application	"Buy consumed additional licenses and report to TAC"
<del>CRITICALLICENSERESTRICTED</del>	6-Information	[chars] [chars]	License contract violation! License Restricted/Enforced	cmts-application	"Buy additional licenses and report to TAC"
<del>CRITICALLICENSECAPPED</del>	6-Information	[chars]	Capped count cannot be set! Consumed count is higher	cmts-application	"Capped count cannot be set! " "Consumed count is higher"
<del>CRITICALLICENSEDURATIONEXPIRED</del>	6-Information	Capped Enforcement duration expired. Deactivated Enforced	Capped Enforcement duration expired after an Eval or Grace expired	cmts-application	"Restore communication with cisco and add " "entitlements if required"
<del>CRITICALLICENSEDURATIONEXPIRES</del>	6-Information	License [chars] period has expired. Capped enforcement is active. The router will be deactivated in 90 days	Eval or Grace Period has expired. Capped enforced - Will be deactivated in 90 days	cmts-application	"Restore communication with cisco and add " "entitlements if out of compliance"
<del>CRITICALCONFIGLOCKED</del>	6-Information	[chars]	Configuration lock in effect! Please register the cBR and try	cmts-application	"Configuration lock in effect! " "Register the cBR and try"
<del>CRITICALLICENSELIMITSNOTSUPPORTED</del>	6-Information	[chars]	Don't support Capped Enforcement for this license tag	cmts-application	"License limits cannot be changed for this feature"
<del>CRITICALLICENSELIMITSNOTREADY</del>	6-Information	[chars]	To change license limits disable license limits first	cmts-application	"License limits cannot be changed " " without disabling license limits first"
<del>CRITICALLICENSEOUTOFCOMPLIANCE</del>	6-Information	OOB duration expired - Capped Enforced	OOB duration has expired and hence capped enforced	cmts-application	"Add entitlements to stay in compliance"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CR_LIC_OOC_DURATION</del>	6-Information	License OOC timer has started. All entitlements will be Capped Enforced in 270 days. Please add necessary entitlements	OOO duration timer has started. All entitlements will be Capped Enforced in 270 days.	cmts-application	"Add necessary entitlements to stay in compliance"
<del>CR_LIC_CONTRACT_DISABLED</del>	6-Information	[chars]	License contract is violated. The device is disabled	cmts-application	"Report to TAC and add sufficient licenses"
<del>CR_LIC_EVAL_EXPIRED</del>	6-Information	[chars]	Eval Period has expired. License agent moving to eval-expired state	cmts-application	"Restore communication with cisco and register " " the device"
<del>CR_LIC_GLOBAL_NOTIFICATION</del>	6-Information	[chars]	A global notification about an event change in the Smart License Agent was received	cmts-application	"None"
<del>CR_LIC_GRACE_EXPIRED</del>	6-Information	[chars]	Grace Period has expired. License agent moving to garce-expired state	cmts-application	"Restore communication with cisco"
<del>CR_LIC_INCOMPLIANCE</del>	6-Information	[chars]	Smart License Agent enforcement mode changed to Incompliance	cmts-application	"None"
<del>CR_LIC_OUT_OF_COMPLIANCE</del>	6-Information	[chars]	Smart License Agent enforcement mode changed to out of compliance	cmts-application	"Report to TAC and add sufficient licenses"
<del>CR_LIC_OVERAGE</del>	6-Information	[chars]	Smart License Agent enforcement mode changed to overage	cmts-application	"Report to TAC and add sufficient licenses"
<del>CR_LIC_LICENSE_ENFORCE</del>	6-Information	Enforcement mode set to [chars]	License Information has been applied	cmts-application	"No action required"
<del>CR_LIC_OUT_OF_RANGE</del>	6-Information	[chars] is out of range:%u	License counters have reached boundary condition	cmts-application	"Please copy traceback information and report to TAC"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CRIC</del> <del>SUB</del> <del>SIC</del> <del>EN</del> <del>CR</del> <del>CD</del>	6-Information	License enforced. All CM dropped.	License contract violation! License restricted/enforced and all CMs have been dropped offline.	cmts-application	"Buy additional licenses and report to TAC"
<del>CRIC</del> <del>SUB</del> <del>SIC</del> <del>RS</del> <del>IC</del> <del>CD</del>	6-Information	License enforced. CM [enet] denied access	License contract violation! License restricted/enforced and a CM has been denied network access.	cmts-application	"Buy additional licenses and report to TAC"
<del>CRIC</del> <del>CHAN</del> <del>NO</del> <del>SH</del> <del>UT</del> <del>DN</del>	6-Information	[chars] has been restored to no shut	Restored previously shutdown channels to no shut state	cmts-application	"None"
<del>CRIC</del> <del>CHAN</del> <del>LS</del> <del>SH</del> <del>UT</del> <del>DN</del>	6-Information	[chars] has been shutdown due to deactivated enforcement	Channel shut due to enforcement	cmts-application	"Buy additional licenses. Please report to TAC"
<del>CRIC</del> <del>SUB</del> <del>SIC</del> <del>EN</del> <del>CR</del> <del>CD</del>	6-Information	enforce_en:[node][chars] is %u	License contract violation! Enforced	cmts-application	"Buy consumed additional licenses and report to TAC"
<del>CRIC</del> <del>SUB</del> <del>SIC</del> <del>RS</del> <del>IC</del> <del>CD</del>	6-Information	[chars] [chars] [chars]	License contract violation! License Restricted/Enforced	cmts-application	"Buy additional licenses and report to TAC"
<del>CRIC</del> <del>CHAN</del> <del>NO</del> <del>SH</del> <del>UT</del> <del>DN</del>	6-Information	[chars] has been restored to no shut	Restored previously shutdown channels to no shut state	cmts-application	"None"
<del>CRIC</del> <del>CHAN</del> <del>LS</del> <del>SH</del> <del>UT</del> <del>DN</del>	6-Information	[chars] has been shutdown due to deactivated enforcement	Channel shut due to enforcement	cmts-application	"Buy additional licenses. Please report to TAC"
<del>CRIC</del> <del>WAN</del> <del>SIC</del> <del>EN</del> <del>CR</del> <del>CD</del>	6-Information	enforce_en:[node][chars] is %u	License contract violation! Enforced	cmts-application	"Buy consumed additional licenses and report to TAC"
<del>CRIC</del> <del>WAN</del> <del>SIC</del> <del>RS</del> <del>IC</del> <del>CD</del>	6-Information	[chars] [chars] [chars]	License contract violation! License Restricted/Enforced	cmts-application	"Buy additional licenses and report to TAC"
<del>CR</del> <del>MC</del> <del>AS</del> <del>ES</del> <del>F</del> <del>R</del> <del>E</del> <del>C</del> <del>O</del> <del>V</del> <del>E</del> <del>R</del>	3-Error	Sfid [dec] Recover failed on [chars].	An internal software error occurred.	cbr-cmts-apps	<del>LOG</del> <del>SID</del> <del>SH</del> <del>T</del> <del>E</del> <del>C</del> <del>H</del> <del>A</del> <del>C</del> <del>I</del> <del>O</del> <del>N</del>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CBR_PLM_HA3-CPADDIENT	3-Error	Check Point Client [dec] Add Failed - [dec]	Failed to add checkpoint client	ubr-sw	LOG_STD_ACTION
CBR_PLM_HA3-CPDAPIR	3-Error	[chars]: checkpoint get data pointer error	Checkpoint infra get message data pointer failed	ubr-sw	LOG_STD_ACTION
CBR_PLM_HA3-REPL	3-Error	Failed to setup [chars] chasfs reason: [chars]	Failed to create replication manager related chasfs entry which is used to trigger database sync	ubr-sw	LOG_STD_ACTION
CBR_PLM_HA3-SIAISYNC	3-Error	Redundancy state synchronization failure [dec]/[dec] - [chars]	A failure occurred in trying to synchronize CBR platform information	ubr-sw	LOG_STD_ACTION
CBR_PLM_HA3-SBY_IPHR	3-Error	Standby FP failed to reach sso-ready within tolerated wait time	Standby FP failed to reach sso-ready within tolerated wait time	ubr-sw	LOG_STD_ACTION
CBR_PLM_HA3-SBY_PLNLOCK	3-Error	Standby PLL failed to lock active within tolerated wait time	Standby PLL failed to lock active within tolerated wait time	ubr-sw	LOG_STD_ACTION
CBR_PLM_HA3-SIAE_CC	6-Information	Lincard [dec] will be reloaded - [chars]	Lincard is not ready for sup-ha	ubr-sw	LOG_SID_NO_ACTION
CBR_PTP-3-DISPATCH	3-Error	Unable to dispatch received TDL message from PTP daemon	This is an Event from RPD	cbr-ntp	LOG_SID_NO_ACTION
CBR_PTP-3-INITFAIL	3-Error	Failed to initialize required PTP resource: [chars]	During the initialization of the resources required by PTP a failure occurred. This has prevented PTP from being activated.	cbr-ntp	LOG_STD_ACTION
CBR_PTP-3-NITFAIL	3-Error	Failed to initialize required PTP resource: [chars]	During the initialization of the resources required by PTP a failure occurred. This has prevented PTP from being activated.	cbr-ntp	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CBR_PTP-5-TOD_CHG	5-Notice	The TOD source changed: [chars]	The source of time of day changed: 1. from GPS of SUP-PIC 0/1 2. from DTI of SUP-PIC 0/1 3. free run mode	cbr-ptp	LOG_SID_SH_TECH_ACTION
CBR_SPA-0-DPIC_EMERG	0-Emergency	[chars]-[chars]	Receive some EMERG message from DPIC	-	LOG_SID_SH_TECH_ACTION
CBR_SPA-1-DPIC_ALERT	1-Alert	[chars]-[chars]	Receive some ALERT message from DPIC	-	LOG_SID_SH_TECH_ACTION
CBR_SPA-2-DPIC_CRIT	2-Critical	[chars]-[chars]	Receive some CRITICAL message from DPIC	-	LOG_SID_SH_TECH_ACTION
<del>CBR_SPA-3-DPIC_ERR</del>	3-Error	[chars] Cortina PHY device attach error port [dec]/[dec]/[dec]	Unable to attach Cortina PHY device object	-	LOG_SID_SH_TECH_ACTION
<del>CBR_SPA-3-DPIC_ERR</del>	3-Error	[chars] Cortina PHY device create error port [dec]/[dec]/[dec]	Unable to create Cortina PHY device object	-	LOG_SID_SH_TECH_ACTION
<del>CBR_SPA-3-DPIC_ERR</del>	3-Error	[chars] Cortina PHY device init error port [dec]/[dec]/[dec]	Unable to download firmware to Cortina PHY device	-	LOG_SID_SH_TECH_ACTION
CBR_SPA-3-DPIC_BOOT_REASON	3-Error	DPIC [dec]/[dec]: [chars]	DPIC Boot Error Reason	-	LOG_SID_SH_TECH_ACTION
CBR_SPA-3-DPIC_ERR	3-Error	[chars]-[chars]	Receive some ERR message from DPIC	-	LOG_SID_SH_TECH_ACTION
CBR_SPA-3-DPIC_NGIO_ERR	3-Error	NGIO connection between IOMd and DPIC [dec]/[dec] is down!	NGIO is down between IOMd and DPIC	-	LOG_SID_SH_TECH_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CRSPADICNCKEHPM	3-Error	NGIO keepalive between IOMd and DPIC [dec]/[dec] timeout! \[node] NGIO rx [node] ping successes [node] ping failures	NGIO keepalive is timeout.	-	LOG_SID_SH_TECH_ACTION
CRSPADICNINDROR	3-Error	[chars] DTI Client error	Unable to download DTI client firmware	-	LOG_SID_SH_TECH_ACTION
CRSPASCKNOIRDYER	3-Error	[chars] Falcon ESI Clocks reg:0x[node]x	Falcon-ESI clocks are NOT Ready	-	LOG_SID_SH_TECH_ACTION
CRSPASCKNRHADROR	3-Error	[chars] Raptor ESI Clocks reg:0x[node]x	Raptor-ESI clocks are NOT Ready	-	LOG_SID_SH_TECH_ACTION
CRSPASINOTRADEROR	3-Error	[chars] Raptor ESI Global Ready reg:0x[node]x	Raptor-ESI NOT Ready	-	LOG_SID_SH_TECH_ACTION
CRSPASIPWRNICODROR	3-Error	[chars] Falcon SUP PIC Power not good	Falcon-ESI PLL not locked	-	LOG_SID_SH_TECH_ACTION
CRSPASIPWRNICODROR	3-Error	[chars] Raptor SUP PIC Power not good	Raptor-ESI PLL not locked	-	LOG_SID_SH_TECH_ACTION
CRSPASISUSICRADER	3-Error	[chars] unable to read from Falcon ESI PIC STATUS REG err [dec]	Unable to communicate with Falcon Device driver	-	LOG_SID_SH_TECH_ACTION
CRSPASISUSICRADROR	3-Error	[chars] unable to read from Raptor ESI PIC STATUS REG err [dec]	Unable to communicate with Raptor Device driver	-	LOG_SID_SH_TECH_ACTION
CRSPASISILCFLOCKER	3-Error	[chars] unable to lock Falcon ESI PLL	Falcon-ESI PLL not locked	-	LOG_SID_SH_TECH_ACTION
CRSPASISILCFLOCKEROR	3-Error	[chars] unable to lock Raptor ESI PLL	Raptor-ESI PLL not locked	-	LOG_SID_SH_TECH_ACTION
CRSPASISILCFRCHADER	3-Error	[chars] unable to read from Falcon ESI PLL CONTROL REG err [dec]	Unable to communicate with Falcon Device driver	-	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRSAPL_CRRCHERRR</del>	3-Error	[chars] unable to read from Raptor ESI PLL CONTROL REG err [dec]	Unable to communicate with Raptor Device driver	-	LOG_SIDSH_TIECH_ACTION
<del>CRSAPL_CRRGWRER</del>	3-Error	[chars] unable to write to Falcon ESI PLL CONTROL REG err [dec]	Unable to communicate with Falcon Device driver	-	LOG_SIDSH_TIECH_ACTION
<del>CRSAPL_CRRWHERR</del>	3-Error	[chars] unable to write to Raptor ESI PLL CONTROL REG err [dec]	Unable to communicate with Raptor Device driver	-	LOG_SIDSH_TIECH_ACTION
<del>CRSAPR_DYRGRFADIR</del>	3-Error	[chars] unable to read Falcon ESI READY REG err [dec]	Unable to communicate with Falcon Device driver	-	LOG_SIDSH_TIECH_ACTION
<del>CRSAPR_DYRCHACHRR</del>	3-Error	[chars] unable to read Raptor ESI READY REG err [dec]	Unable to communicate with Raptor Device driver	-	LOG_SIDSH_TIECH_ACTION
<del>CRSAPR_CASRCHWRER</del>	3-Error	[chars] unable to write to Falcon ESI CHASSIS SLOT ID REG err [dec]	Unable to communicate with Falcon Device driver	-	LOG_SIDSH_TIECH_ACTION
<del>CRSAPR_CASRCHWHERR</del>	3-Error	[chars] unable to write to Raptor ESI CHASSIS SLOT ID REG err [dec]	Unable to communicate with Raptor Device driver	-	LOG_SIDSH_TIECH_ACTION
<del>CRSAPR_CRRGWRER</del>	3-Error	[chars] unable to write to Falcon ESI CONTROL REG err [dec]	Unable to communicate with Falcon Device driver	-	LOG_SIDSH_TIECH_ACTION
<del>CRSAPR_CRRWHERR</del>	3-Error	[chars] unable to write to Raptor ESI CONTROL REG err [dec]	Unable to communicate with Raptor Device driver	-	LOG_SIDSH_TIECH_ACTION
<del>CRSAPR_CRRCHERRR</del>	3-Error	[chars] [chars]	High Priority Interrupt received from EGRESS LOCAL BUF\n\ Module in Falcon FPGA	-	LOG_SIDSH_TIECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRFALCONCRBUFCHNRRPT</del>	3-Error	[chars] [chars]	High Priority Interrupt received from EGRESS REMOTE BUF\n\n Module in Falcon FPGA	-	LOGSIDSHTECHACION
<del>CRFALCONCRDISPCHNRRPT</del>	3-Error	[chars] [chars]	High Priority Interrupt received from EGRESS DISPATCH\n\n Module in Falcon FPGA	-	LOGSIDSHTECHACION
<del>CRFALCONCLKCHNRRPT</del>	3-Error	[chars] [chars]	High Priority Interrupt received from CLOCK\n\n Module in Falcon-ESI FPGA	-	LOGSIDSHTECHACION
<del>CRFALCONPCIECHNRRPT</del>	3-Error	[chars] [chars]	High Priority Interrupt received from PCIE Wrapper\n\n Module in Falcon-ESI FPGA	-	LOGSIDSHTECHACION
<del>CRFALCONFPCHNRRPT</del>	3-Error	[chars] [chars]	High Priority Interrupt received from FP\n\n EGRESS SCHEDULER TOP Module in Falcon FPGA	-	LOGSIDSHTECHACION
<del>CRFALCONFPCHNRRPT</del>	3-Error	[chars] [chars]	High Priority Interrupt received from FP\n\n INGRESS PARSER TOP Module in Falcon FPGA	-	LOGSIDSHTECHACION
<del>CRFALCONLOCALCHNRRPT</del>	3-Error	[chars] [chars]	High Priority Interrupt received from INGRESS LOCAL BUF\n\n Module in Falcon FPGA	-	LOGSIDSHTECHACION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CR_FALCON_REMOTE_INTERRUPT</del>	3-Error	[chars] [chars]	High Priority Interrupt received from INGRESS REMOTE BUF\n\ Module in Falcon FPGA	-	LOG_SID_SH_TECH_ACTION
<del>CR_FALCON_PARSER_INTERRUPT</del>	3-Error	[chars] [chars]	High Priority Interrupt received from INGRESS PARSER\n\ Module in Falcon FPGA	-	LOG_SID_SH_TECH_ACTION
<del>CR_FALCON_SCHEDULER_INTERRUPT</del>	3-Error	[chars] [chars]	High Priority Interrupt received from INGRESS SCHEDULER\n\ Module in Falcon FPGA	-	LOG_SID_SH_TECH_ACTION
<del>CR_FALCON_INIT_ERROR</del>	3-Error	[chars] Falcon err [dec]	Falcon driver initialization error	-	LOG_SID_SH_TECH_ACTION
<del>CR_FALCON_MAC_FILTER_FULL</del>	3-Error	[chars] Falcon [chars] mac-filter entry full drop addr [hex] [hex] [hex] [hex] [hex] [hex]	Falcon mac filter entry full	-	LOG_SID_SH_TECH_ACTION
<del>CR_FALCON_LCOAL_INTERRUPT</del>	3-Error	[chars] [chars]	High Priority Interrupt received from LCOAL MAC\n\ Module in Falcon FPGA	-	LOG_SID_SH_TECH_ACTION
<del>CR_FALCON_PEER_INTERRUPT</del>	3-Error	[chars] [chars]	High Priority Interrupt received from PEER MAC\n\ Module in Falcon FPGA	-	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CR_SUP250MDEXTXERR</del>	3-Error	SUP-PIC [dec]/1 port [dec] interface mode mismatched: QSFP type is [chars] interface mode is [chars]	SUP250 backhaul interface support two kinds of transceiver: QSFP28 and QSFP+. If the backhaul mode is configured as 100GE mode with command 'cable sup250-ifmod 100GE' but insert a QSFP+ transceiver. Or the backhaul mode is configured as 10GE mode with command 'cable sup250-ifmod 10GE' but insert a QSFP28 transceiver. This error message will be reported.	-	"Change configuration to another backhaul mode or replace other type of transceiver."
<del>CR_FALCONPARSIERR</del>	3-Error	[chars] [chars]	High Priority Interrupt received from PAR_RST\n\nModule in Falcon-ESI FPGA	-	LOG_SID_SH_TECH_ACTION
CR_SUP250FALCONPLLLOS	3-Error	[chars]	Falcon PLL LOS	-	LOG_SID_SH_TECH_ACTION
<del>CR_FALCONPMBISTERR</del>	3-Error	[chars] [chars]	High Priority Interrupt received from PM_BIST\n\nModule in Falcon FPGA	-	LOG_SID_SH_TECH_ACTION
<del>CR_FALCONSEMERR</del>	3-Error	[chars] [chars] err_report_reg 0x[hec] stat_reg 0x[hec]	HIGH Priority Interrupt received from SEM\n\nModule in Falcon FPGA	-	LOG_SID_SH_TECH_ACTION
<del>CR_FALCONCROWERR</del>	3-Error	[chars] unable to write to Raptor MAC RX/TX CFG REG err [dec]	Unable to communicate with Raptor Device driver	-	LOG_SID_SH_TECH_ACTION
<del>CR_FALCONCLKNDRERR</del>	3-Error	[chars] Falcon MAC Clocks reg:0x[node]x	Falcon-MAC clocks are NOT Ready	-	LOG_SID_SH_TECH_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CBSA/CIC/ON/CH/DM/ERR</del>	3-Error	[chars] Raptor MAC Clocks reg:0x[node]x	Raptor-MAC clocks are NOT Ready	-	LOG_SIDSH_TECH_ACTION
<del>CBSA/MAC/NOT/RY/ERR</del>	3-Error	[chars] Falcon MAC Global reg:0x[node]x	Falcon-MAC Contrpl Plane NOT Ready	-	LOG_SIDSH_TECH_ACTION
<del>CBSA/MAC/READY/ERR</del>	3-Error	[chars] Raptor MAC Global reg:0x[node]x	Raptor-MAC Contrpl Plane NOT Ready	-	LOG_SIDSH_TECH_ACTION
<del>CBSA/MAC/CPLD/CH/DM/ERR</del>	3-Error	[chars] Falcon MAC PIC CPLD error	Falcon-MAC PIC CPLD NOT Ready	-	LOG_SIDSH_TECH_ACTION
<del>CBSA/MAC/CPLD/CH/DM/ERR</del>	3-Error	[chars] Raptor MAC PIC CPLD error	Raptor-MAC PIC CPLD NOT Ready	-	LOG_SIDSH_TECH_ACTION
<del>CBSA/MAC/CR/REG/W/ERR</del>	3-Error	[chars] unable to write to Falcon MAC PIC CONTROL REG err [dec]	Unable to communicate with Falcon Device driver	-	LOG_SIDSH_TECH_ACTION
<del>CBSA/MAC/CR/REG/W/ERR</del>	3-Error	[chars] unable to write to Raptor MAC PIC CONTROL REG err [dec]	Unable to communicate with Raptor Device driver	-	LOG_SIDSH_TECH_ACTION
<del>CBSA/MAC/READY/CH/DM/ERR</del>	3-Error	[chars] unable to read Falcon MAC READY REG err [dec]	Unable to communicate with Falcon Device driver	-	LOG_SIDSH_TECH_ACTION
<del>CBSA/MAC/READY/CH/DM/ERR</del>	3-Error	[chars] unable to read Raptor MAC READY REG err [dec]	Unable to communicate with Raptor Device driver	-	LOG_SIDSH_TECH_ACTION
CER_SPA3NULL_SPA_PIR	3-Error	-	Pointer to a SPA object is NULL.	-	LOG_SIDSH_TECH_ACTION
<del>CBSA/INT/ST/OK/N/ERR/F</del>	3-Error	[chars] [chars]	High Priority Interrupt received from Clock\n\nModule in Raptor-ESI FPGA	-	LOG_SIDSH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CR_RPTD_INGRESS_INTRPT</del>	3-Error	[chars] [chars]	High Priority Interrupt received from Ingress Scheduler\n\n Module in Raptor-ESI FPGA	-	LOG_SID_SH_TECH_ACTION
<del>CR_RPTD_PCIE_INTRPT</del>	3-Error	[chars] [chars]	High Priority Interrupt received from PCIE Wrapper\n\n Module in Raptor-ESI FPGA	-	LOG_SID_SH_TECH_ACTION
<del>CR_RPTD_PROCBS_MASTER_INTRPT</del>	3-Error	[chars] [chars]	HIGH Priority Interrupt received from ProcBus Master\n\n Module in Raptor-ESI FPGA	-	LOG_SID_SH_TECH_ACTION
<del>CR_RPTD_RESET_INTRPT</del>	3-Error	[chars] [chars]	High Priority Interrupt received Partial reset\n\n Module in Raptor-ESI FPGA	-	LOG_SID_SH_TECH_ACTION
<del>CR_RPTD_SERDES_INTRPT</del>	3-Error	[chars] [chars]	High Priority Interrupt received from Serdes PktBus\n\n Module in Raptor-ESI FPGA	-	LOG_SID_SH_TECH_ACTION
CR_SAPICRN_ERR	3-Error	[chars] Raptor err [dec]	Raptor driver initialization error	-	LOG_SID_SH_TECH_ACTION
CR_SAPICLED_ERR	3-Error	SUP-PIC [dec]/[dec] LED err	SUP-PIC LED initialization error	-	LOG_SID_SH_TECH_ACTION
<del>CR_RPTD_CLOCK_INTRPT</del>	3-Error	[chars] [chars]	High Priority Interrupt received from Clock\n\n Module in Raptor-MAC FPGA	-	LOG_SID_SH_TECH_ACTION
<del>CR_RPTD_MAC_FW_DL_ERR</del>	3-Error	[chars] Raptor-MAC error	Unable to download Raptor-MAC firmware	-	LOG_SID_SH_TECH_ACTION
<del>CR_RPTD_MAC_FILTER_FULL</del>	3-Error	[chars] Raptor [chars] mac-filter entry full drop addr [redacted]	Raptor mac filter entry full	-	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CBSPIC0MCFCHNBRUF</del>	3-Error	[chars] [chars]	HIGH Priority Interrupt received from FIFO Control\n\n Module in Raptor-MAC FPGA	-	LOG_SIDSH_TECH_ACTION
<del>CBSPIC0MMDI0NBRUF</del>	3-Error	[chars] [chars]	High Priority Interrupt received from MDIO\n\n Module in Raptor-MAC FPGA	-	LOG_SIDSH_TECH_ACTION
<del>CBSPIC0MPCBSLAVBRUF</del>	3-Error	[chars] [chars]	High Priority Interrupt received from ProcBus Slave\n\n Module in Raptor-MAC FPGA	-	LOG_SIDSH_TECH_ACTION
<del>CBSPIC0MPCRSNBRUF</del>	3-Error	[chars] [chars]	High Priority Interrupt received Partial reset\n\n Module in Raptor-MAC FPGA	-	LOG_SIDSH_TECH_ACTION
<del>CBSPIC0MRLDRAMBRUF</del>	3-Error	[chars] [chars]	HIGH Priority Interrupt received from RLDRAM\n\n Module in Raptor-MAC FPGA	-	LOG_SIDSH_TECH_ACTION
<del>CBSPIC0MSRDPKTBUSBRUF</del>	3-Error	[chars] [chars]	HIGH Priority Interrupt received from Serdes PktBus\n\n Module in Raptor-MAC FPGA	-	LOG_SIDSH_TECH_ACTION
<del>CBSPIC0MXFINBRUF</del>	3-Error	[chars] [chars]	High Priority Interrupt received from XFI\n\n Module in Raptor-MAC FPGA	-	LOG_SIDSH_TECH_ACTION
CBR_SAPRAPHIC_HLL_LOS	3-Error	[chars]	Raptor PLL LOS	-	LOG_SIDSH_TECH_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRSUP160SHCRC</del>	3-Error	Detected continual CRC errors on SUP-PIC [dec]/1 port [dec] or port [dec]!	SUP160 backhaul interface's recover service was blocked because there are continual CRC errors on corresponding interface.	-	"Check related link including fiber line SFP module etc..."
<del>CRSPARSEMINT</del>	3-Error	[chars] [chars] err_report_reg 0x[hec] stat_reg 0x[hec]	HIGH Priority Interrupt received from SEM\n	-	LOG_SID_SH_TECH_ACTION
<del>CRSMEMPHYATTCHERR</del>	3-Error	[chars] Retimer PHY device attach error quad [dec]/[dec]/[dec]	Unable to attach Retimer PHY device object	-	LOG_SID_SH_TECH_ACTION
<del>CRSMEMPHYDCREERR</del>	3-Error	[chars] Retimer PHY device create error quad [dec]/[dec]/[dec]	Unable to create Retimer PHY device object	-	LOG_SID_SH_TECH_ACTION
<del>CRSMEMPHYDINITERR</del>	3-Error	[chars] Retimer PHY device init error quad [dec]/[dec]/[dec]	Unable to init Retimer PHY device	-	LOG_SID_SH_TECH_ACTION
<del>CRSPASUBSBLOCKERR</del>	3-Error	[chars] SFP Subblock create error	Unable to create SFP sub-block	-	LOG_SID_SH_TECH_ACTION
<del>CRSPALCURDNOSPACE</del>	3-Error	no enough space in harddisk to store digital pic image \[dec]MB free [dec]MB needed\n	DIGI PIC firmware can not be upgraded\n\ due to harddisk is full\n	-	"Free up some space in harddisk to \store digital pic image."
<del>CRSPAICONNABORTERR</del>	3-Error	[chars] SPA Plugin Init Abort error	Unknown SPA Init phase	-	LOG_SID_SH_TECH_ACTION
<del>CRSPARSWICFAILURE</del>	3-Error	I2C failure on [dec]/[dec] I2C status:[chars]	An I2C failure error received from RFSW PIC\n	-	LOG_SID_SH_TECH_ACTION
<del>CRSPARSWPOWERERR</del>	3-Error	Power circuit error on [dec]/[dec] voltages:[chars]	A power circuit error received from RFSW PIC\n	-	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CER_SPARSW_RELAY_FAIL	3-Error	Relay failure on [dec]/[dec] relay status:[chars]	A Relay failure error received from RFSW PIC\n	-	LOG_SIDSHTTECH_ACTION
CER_SPARSW_TEMP_ERR	3-Error	Temperature Error on [dec]/[dec] temperature:[chars]	A Temperature error received from RFSW PIC\n	-	LOG_SIDSHTTECH_ACTION
CER_SPARSW_FW_UNSUPPORTED	3-Error	unsupported firmware upgrade on [dec]/[dec] firmware version :[hec]\n	RFSW PIC firmware can not be upgraded\n	-	LOG_SIDSHTTECH_ACTION
CER_SPASPA_UNKN_INIT_ERR	3-Error	[chars] Unknown SPA Init phase error	Unknown SPA Init phase	-	LOG_SIDSHTTECH_ACTION
CER_SPACRMING_WD_ERR	3-Error	[chars] XCVR Missing interface object port [dec]/[dec]/[dec]	Unable to download firmware to Cortina PHY device	-	LOG_SIDSHTTECH_ACTION
CER_SPACRMING_WD_ERR	3-Error	[chars] XCVR Unable to poulate default parameters port [dec]/[dec]/[dec]	Unable to poulate default XCVR SM parameters	-	LOG_SIDSHTTECH_ACTION
CER_SPACRMING_WD_ERR	3-Error	[chars] XCVR Unable to launch SM port [dec]/[dec]/[dec]	Unable to launch XCVR SM	-	LOG_SIDSHTTECH_ACTION
CER_SPADPIC_WARNING	4-Warning	[chars]-[chars]	Receive some WARNING message from DPIC	-	LOG_SIDSHTTECH_ACTION
CER_SPAFALCON_PLL_MS	4-Warning	[chars]	Falcon PLL clock soure not come from active RP\n	-	LOG_SIDSHTTECH_ACTION
CER_SPARAPTOR_PLL_MS	4-Warning	[chars]	Raptor PLL clock soure not come from active RP\n	-	LOG_SIDSHTTECH_ACTION
CER_SPARSW_WD_TIMEOUT	4-Warning	Watch Dog Timeout on [dec]/[dec]	A Watch Dog Timeout error received from RFSW PIC\n	-	LOG_SIDSHTTECH_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CBR_SPA-5DPIC_NOTICE	5-Notice	[chars]-[chars]	Receive some NOTICE message from DPIC	-	LOG_SID_NO_ACTION
CBR_SPA-5DPIC_RESET	5-Notice	DPIC [dec]/[dec] will be recovered from unexpected state	DPIC can not be online in 5 min	-	LOG_SID_NO_ACTION
CBR_SPA-5SUP_PIC_RESET	5-Notice	SUP PIC [dec]/[dec] will be recovered from unexpected state	SUP PIC can not be online in 5 min	-	LOG_SID_NO_ACTION
CBR_SPA-5SUPVE_PIC_RESET	5-Notice	SUPVE PIC [dec]/[dec] will be recovered from unexpected state	SUPVE PIC can not be online in 5 min	-	LOG_SID_NO_ACTION
CBR_SPA-6DPIC_INFO	6-Information	[chars]-[chars]	Receive some INFO message from DPIC	-	LOG_SID_NO_ACTION
<del>CBR_SPA-6DIGI_PIC_UPGRADE</del>	6-Information	unsupported firmware upgrade on [dec]/[dec]\n	DIGI PIC firmware can not be upgraded\n	-	LOG_SID_SH_TECH_ACTION
CBR_SPA-7DPIC_DEBUG	7-Debug	[chars]-[chars]	Receive some DEBUG message from DPIC	-	LOG_SID_DBG_ACTION
<del>CBR_SPA-7FALCON_EGRESS_LOCAL_BUF_INTERRUPT</del>	7-Debug	[chars] [chars]	Low Priority Interrupt received from EGRESS LOCAL BUF\n\nModule in Falcon FPGA	-	LOG_SID_SH_TECH_ACTION
<del>CBR_SPA-7FALCON_EGRESS_REMOTE_BUF_INTERRUPT</del>	7-Debug	[chars] [chars]	Low Priority Interrupt received from EGRESS REMOTE BUF\n\nModule in Falcon FPGA	-	LOG_SID_SH_TECH_ACTION
<del>CBR_SPA-7FALCON_EGRESS_DISPATCHER_INTERRUPT</del>	7-Debug	[chars] [chars]	Low Priority Interrupt received from EGRESS DISPATCHER\n\nModule in Falcon FPGA	-	LOG_SID_SH_TECH_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<b>CRSFALCONESIFCNBRUF</b>	7-Debug	[chars] [chars]	Low Priority Interrupt received from ESI FC\n\nModule in Falcon-ESI FPGA	-	LOG_SIDSHTTECH_ACTION
<b>CRSFALCONESIFHCNBRUF</b>	7-Debug	[chars] [chars]	Low Priority Interrupt received from PCIE Wrapper\n\nModule in Falcon-ESI FPGA	-	LOG_SIDSHTTECH_ACTION
<b>CRSFALCONESIFLNCNBRUF</b>	7-Debug	[chars] [chars]	Low Priority Interrupt received from PCIE Wrapper\n\nModule in Falcon-ESI FPGA	-	LOG_SIDSHTTECH_ACTION
<b>CRSFALCONESIFPCNBRUF</b>	7-Debug	[chars] [chars]	Low Priority Interrupt received from FP 10G\n\nModule in Falcon-ESI FPGA	-	LOG_SIDSHTTECH_ACTION
<b>CRSFALCONESIFSCNBRUF</b>	7-Debug	[chars] [chars]	Low Priority Interrupt received from FP EGRESS SCHEDULER\n\nModule in Falcon FPGA	-	LOG_SIDSHTTECH_ACTION
<b>CRSFALCONESIFTCNBRUF</b>	7-Debug	[chars] [chars]	Low Priority Interrupt received from FP INGRESS PARSER TOP\n\nModule in Falcon FPGA	-	LOG_SIDSHTTECH_ACTION
<b>CRSFALCONESIFVHCNBRUF</b>	7-Debug	[chars] [chars]	High Priority Interrupt received from GB MDIO\n\nModule in Falcon FPGA	-	LOG_SIDSHTTECH_ACTION
<b>CRSFALCONESIFWLCNBRUF</b>	7-Debug	[chars] [chars]	Low Priority Interrupt received from INGRESS LOCAL BUF\n\nModule in Falcon FPGA	-	LOG_SIDSHTTECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRFALCONGRPHICNTRUF</del>	7-Debug	[chars] [chars]	Low Priority Interrupt received from INGRESS REMOTE BUF\n\n Module in Falcon FPGA	-	LOG_SID_SH_TECH_ACTION
<del>CRFALCONPARSECNTRUF</del>	7-Debug	[chars] [chars]	Low Priority Interrupt received from INGRESS PARSER\n\n Module in Falcon FPGA	-	LOG_SID_SH_TECH_ACTION
<del>CRFALCONGRSCHNTRUF</del>	7-Debug	[chars] [chars]	Low Priority Interrupt received from INGRESS SCHEDULER\n\n Module in Falcon FPGA	-	LOG_SID_SH_TECH_ACTION
<del>CRFALCONNTRUFLEMBE</del>	7-Debug	Interrupt throttled for: [chars] [chars]	Interrupt throttled\n	-	LOG_SID_DBG_ACTION
<del>CRFALCONNTRUFLEMBE</del>	7-Debug	Interrupt enabled for: [chars] [chars]	Interrupt unthrottled\n	-	LOG_SID_DBG_ACTION
<del>CRFALCONMACOICNTRUF</del>	7-Debug	[chars] [chars]	Low Priority Interrupt received from LOCAL MAC\n\n Module in Falcon FPGA	-	LOG_SID_SH_TECH_ACTION
<del>CRFALCONMACHEICNTRUF</del>	7-Debug	[chars] [chars]	Low Priority Interrupt received from REMOTE MAC\n\n Module in Falcon FPGA	-	LOG_SID_SH_TECH_ACTION
<del>CRFALCONPARSICNTRUF</del>	7-Debug	[chars] [chars]	Low Priority Interrupt received from PAR RST\n\n Module in Falcon-ESI FPGA	-	LOG_SID_SH_TECH_ACTION
<del>CRFALCONPWMICNTRUF</del>	7-Debug	[chars] [chars]	Low Priority Interrupt received from PWM DIST\n\n Module in Falcon-ESI FPGA	-	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CBSP4TCN5MONRUF</del>	7-Debug	[chars] [chars] err_report_reg 0x[hec] stat_reg 0x[hec]	Low Priority Interrupt received from SEM\n	-	LOG_SID_SH_TECH_ACTION
<del>CBSP4TCN5SHCNRUF</del>	7-Debug	[chars] [chars]	Low Priority Interrupt received from Egress\n\ Header Module in Raptor-ESI FPGA	-	LOG_SID_DBG_ACTION
<del>CBSP4TCN5SFCNRUF</del>	7-Debug	[chars] [chars]	Low Priority Interrupt received from Egress\n\ Scheduler Module in Raptor-ESI FPGA	-	LOG_SID_DBG_ACTION
<del>CBSP4TCN5FCNRUF</del>	7-Debug	[chars] [chars]	Low Priority Interrupt received from Flow\n\ Control Module in Raptor-ESI FPGA	-	LOG_SID_DBG_ACTION
<del>CBSP4TCN5SFCNRUF</del>	7-Debug	[chars] [chars]	Low Priority Interrupt received from Ingress\n\ Scheduler Module in Raptor-ESI FPGA	-	LOG_SID_DBG_ACTION
<del>CBSP4TCN5FCNRUF</del>	7-Debug	[chars] [chars]	Low Priority Interrupt received from PCIE Wrapper\n\ Module in Raptor-ESI FPGA	-	LOG_SID_DBG_ACTION
<del>CBSP4TCN5SFCNRUF</del>	7-Debug	[chars] [chars]	Low Priority Interrupt received from ProcBus Master\n\ Module in Raptor-ESI FPGA	-	LOG_SID_DBG_ACTION
<del>CBSP4TCN5SFCNRUF</del>	7-Debug	[chars] [chars]	Low Priority Interrupt received Partial reset\n\ Module in Raptor-ESI FPGA	-	LOG_SID_DBG_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRPACTNERRPILNBE</del>	7-Debug	[chars] [chars]	Low Priority Interrupt received from Serdes PacketBus\n\nModule in Raptor-ESI FPGA	-	LOG_SID_DBG_ACTION
<del>CRPACTNERRPILNBE</del>	7-Debug	Interrupt throttled for: [chars] [chars]	Interrupt throttled\n	-	LOG_SID_DBG_ACTION
<del>CRPACTNERRPILNBE</del>	7-Debug	Interrupt enabled for: [chars] [chars]	Interrupt unthrottled\n	-	LOG_SID_DBG_ACTION
<del>CRPACTNERRPILNBE</del>	7-Debug	[chars] [chars]	Low Priority Interrupt received from 10GE MAC\n\nModule in Raptor-MAC FPGA	-	LOG_SID_DBG_ACTION
<del>CRPACTNERRPILNBE</del>	7-Debug	[chars] [chars]	Low Priority Interrupt received from FIFO Control\n\nModule in Raptor-MAC FPGA	-	LOG_SID_DBG_ACTION
<del>CRPACTNERRPILNBE</del>	7-Debug	[chars] [chars]	Low Priority Interrupt received from FIFO Control MUX\n\nModule in Raptor-MAC FPGA	-	LOG_SID_DBG_ACTION
<del>CRPACTNERRPILNBE</del>	7-Debug	[chars] [chars]	Low Priority Interrupt received from Ingress QoS\n\nModule in Raptor-MAC FPGA	-	LOG_SID_DBG_ACTION
<del>CRPACTNERRPILNBE</del>	7-Debug	[chars] [chars]	Low Priority Interrupt received from MAC Scheduler\n\nModule in Raptor-MAC FPGA	-	LOG_SID_DBG_ACTION
<del>CRPACTNERRPILNBE</del>	7-Debug	[chars] [chars]	Low Priority Interrupt received from Proc Bus\n\nModule in Raptor-MAC FPGA	-	LOG_SID_DBG_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CBRPTCMCSICKNRRF</del>	7-Debug	[chars] [chars]	Low Priority Interrupt received Partial reset\n\n Module in Raptor-MAC FPGA	-	LOG_SID_DBG_ACTION
<del>CBRPTCLDRMKNRRF</del>	7-Debug	[chars] [chars]	Low Priority Interrupt received from RLDRAM Interface\n\n Module in Raptor-MAC FPGA	-	LOG_SID_DBG_ACTION
<del>CBRPTASRPFSKNRRF</del>	7-Debug	[chars] [chars]	Low Priority Interrupt received from Serdes Packet Bus\n\n Module in Raptor-MAC FPGA	-	LOG_SID_DBG_ACTION
<del>CBSPARCSEMKNRRF</del>	7-Debug	[chars] [chars] err_report_reg 0x[hec] stat_reg 0x[hec]	Low Priority Interrupt received from SEM\n	-	LOG_SID_DBG_ACTION
CRMDCHEDNORSURE	3-Error	LED Subsystem Init Failed	Logical Edge Device subsystem init failed	video-cp	"Verify system memory and check is the image correct."
CRMDCACQALDEME	6-Information	LED [dec] [chars].	Logical Edge Device Process terminated/restarted	video-cp	"LOG_SID_NO_ACTION"
CBRCCEBRDPCRADIR	3-Error	Failed to add cfr for CM [enet] cfr id [node]sfref [node]sfid [node]rc %u	Mostly caused by cfr chunk exhausted or cm_qos not found	cbrcece-sw	LOG_SID_SH_TIECH_ACTION
CBRCCEBRDPDNOCSR	3-Error	Failed to commit dynamic qos for CM [enet] sfid [node]rc %u	Mostly caused by dynamic qos bind failure	cbrcece-sw	LOG_SID_SH_TIECH_ACTION
CBRCCEBRDPHOVADIR	3-Error	Failed to add flow for CM [enet] sfid [node]rc %u	Mostly caused by flow or cm_qos chunk exhausted	cbrcece-sw	LOG_SID_SH_TIECH_ACTION
CBRCCEBRDPHWNFSIR	3-Error	Failed to set forwarding interface for CM [enet] sfid [node]rc %u	Mostly caused by invalid service flow ID	cbrcece-sw	LOG_SID_SH_TIECH_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CBRC</del> CBRDPHSTIMERR	3-Error	Failed to configure DS latency histogram because limit is reached slot [dec] md [dec] sfid [dec] total [dec] limit [dec]	Limit for histogram flows has reached	cbrcece-sw	"Increase the limit via configure command cable ds-lat-hist limit or "
<del>CBRC</del> CBRDPHSSACHERR	3-Error	Failed to find obj in histogram database for slot [dec] md [dec] sfid [dec]	Flow is invalid or in-active	cbrcece-sw	"Check flow is an active downstream flow"
<del>CBRC</del> CBRDPBHRSERR	3-Error	Failed to set JIB header for CM [enet] sfid [node]rc %u	Mostly caused by invalid service flow ID	cbrcece-sw	LOGSIDSHTECHACION
<del>CBRC</del> CBRDPLOCKERR	3-Error	Failed to lock semaphore pid [dec]	Mostly caused by a process hogging CPU	cbrcece-sw	LOGSIDSHTECHACION
<del>CBRC</del> CBRDPQPARAMSERR	3-Error	Failed to set qos parameters for CM [chars] sfid [node]rc %u	Mostly caused by invalid service flow ID	cbrcece-sw	LOGSIDSHTECHACION
<del>CBRC</del> CBRDPQAQERR	3-Error	Failed to commit static qos for CM [enet] rc %u	Mostly caused by qos bind failure	cbrcece-sw	LOGSIDSHTECHACION
<del>CBRC</del> CBRDPIMPLERR	3-Error	Failed to remove template from template_list for CM [enet]	Mostly caused by template remove failure	cbrcece-sw	LOGSIDSHTECHACION
<del>CBRC</del> CBRDPPARAMCONLT	4-Warning	Classifier's parameters conflict: [chars]	Mostly caused by unsupported classifier's parameters combination	cbrcece-sw	"Please do not configure unsupported classifier's " "parameters or unsupported classifier's parameters combination " "as the error message indicated."
CBRDTI-5-DTISLOT	5-Notice	DTI slot [dec]/[dec]: card role changed to [chars]\n	Change in role of DTI slot	dti	"Check DTI link/cable"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CBRDII6CHG_CLK_REF	6-Information	Clock reference source set to [chars]	The reasons for the change in clock reference. 1Manual mode configuration command for DTI mode	dti	"Check reference source of DTI"
CBUS-3-ADDRFILTR	3-Error	Interface [chars] address filter [chars] command failed code [node]4x	The specified address filter command sent to the specified\n\ interface failed with the displayed error code.	cbus	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
CBUS-3-AIPINVPLIM	3-Error	Interface [chars] Invalid PLIM detected. Interface downed	A software error occurred.	-	LOGSIDSHTTECHACION
CBUS3BADRXEOFVEC	3-Error	[chars] ustatus: [chars] [node]x [node]x [node]x [node]x	Debugging information when an IP panics.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
CBUS3BADIXEOFVEC	3-Error	[chars] ustatus: [chars] [node]x [node]x [node]x [node]x	Debugging information when an IP panics.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
CBUS-3-BADIXSTATE	3-Error	[chars] ustatus: [chars] [node]x [node]x [node]x [node]x	Debugging information when an IP panics.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
CBUS-3-BADVC	3-Error	[chars] [dec]/[dec] got bad VC packet \n[node]x [node]x [node]x [node]x [node]x [node]x	An interface received a packet with bad VC encapsulation. \n\ This indicates either a software or hardware problem.	-	LOGSIDSHTTECHACION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CBUS-3-BUFFER	3-Error	Controller [dec] Error [node]4x Buffersize = [dec] Bufferpool = [dec] number [dec]	An internal software error occurred.	-	LOGSIDSHTTECHACI0N
CBUS-3-CATMCFG	3-Error	Interface [chars] Cannot config interface CBus ATM MEM 0x[hec] status [dec]	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
CBUS-3-CATMRSET	3-Error	Interface [chars] Error [node]4x [chars] - aip_reset	A software error occurred.	-	LOGSIDSHTTECHACI0N
CBUS-3-CATMRSETU	3-Error	Unit [dec] Error [node]4x [chars] - cbus_atm_reset	A software error occurred.	-	LOGSIDSHTTECHACI0N
CBUS-3-CBUSBCE	3-Error	Failed to select a BCE response 0x[node]x - cbus_bce_update_ifa	A hardware or software error occurred.	-	LOGSIDSHTTECHACI0N
CBUS-3-CBUSBCEPERM	3-Error	Failed to select a BCE response 0x[node]x - cbus_bce_permissions_update	A hardware or software error occurred.	-	LOGSIDSHTTECHACI0N
CBUS-3-CCBCMDFAIL0	3-Error	Controller [dec] cmd [dec] failed 0x[node]4x	A command sent from the system to an interface processor failed to\n\ complete successfully.	-	"The system recovered by generating an error code to the requester."
CBUS-3-CCBCMDFAIL1	3-Error	Controller [dec] cmd [dec] 0x[node]8x failed 0x[node]4x	A command sent from the system to an interface processor failed to\n\ complete successfully.	-	"The system recovered by generating an error code to the requester."
CBUS-3-CCBCMDFAIL3	3-Error	Controller [dec] cmd [dec] 0x[node]4x 0x[node]4x 0x[node]4x failed 0x[node]4x	A command sent from the system to an interface processor failed to\n\ complete successfully.	-	"The system recovered by generating an error code to the requester."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CBUS-3-CCBPTIMEOUT	3-Error	CCB handover timed out CCB 0x[hec] slot [dec]	A hardware or software error occurred.	cwpa	"Please gather the logs and tracebacks " "and contact the TAC"
CBUS-3-CCBSEMINFO	3-Error	CCB semaphore acquired traceback:[chars]\n CCB semaphore released traceback:[chars]	More information on the CCB semaphore. The tracebacks indicate the program counters and stack that point to the code that was the last to acquire this semaphore and the last to release this semaphore respectively	-	LOGS_IDSHTTECH_ACTION
CBUS-3-CE3DSX3ERR	3-Error	[chars]Illegal E3 value - unit is [dec]	-	-	-
CBUS3CFGCMDROPPED	3-Error	Config queue is full command was dropped slot [dec]	Sending a config command was retried. The receiving\n queues were still full after retries therefore the command was dropped.	-	"Copy the error message exactly as it appears and report it to your\n technical support representative."
CBUS-3-CMD	3-Error	Cmd failed: [chars] response [node]4x [chars]	A software or hardware error occurred.	-	"Copy the error message exactly as it appears and report it to your\n technical support representative."
CBUS-3-CMDDROPPED	3-Error	Cmd dropped CCB 0x[hec] slot [dec] cmd code [dec]	A software or hardware error occurred.	-	LOGS_IDSHTTECH_ACTION
CBUS-3-CMDTIMEOUT	3-Error	Cmd timed out CCB 0x[hec] slot [dec] cmd code [dec]	A software or hardware error occurred.	-	LOGS_IDSHTTECH_ACTION
CBUS-3-CORRUPT	3-Error	Controller [dec] wrote 0x[node]4x read 0x[node]4x loc 0x[node]4x - dci_memtest	A hardware component failed an internal diagnostic test.	-	"Replace the malfunctioning device."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CBUS-3-CT3DSX3ERR	3-Error	[chars]Illegal dsx3 value - unit is [dec]	-	-	-
CBUS-3-CT3STAT	3-Error	Out of buffers--losing status information for CT3 on VIP card	A status information message from the VIP was received.\n\nA memory buffer is required to process the status information \n\n message but the memory allocation routine due to insufficient\n\n system buffer memory. Therefore the status information message\n\n was not processed. This condition may be caused either by a heavy \n\n memory utilization at the time of the memory buffer request or by\n\n insufficient memory in the system.	-	"Reduce other system activity to ease memory demands. If conditions\n\n warrant upgrade to a larger memory configuration. If this \n\n message recurs or appears regularly contact your Cisco technical \n\n representative to upgrade the memory of the system."
CBUS-3-CTRACHECK	3-Error	Interface [chars] Adapter Check Error [node]x [node]x [node]x [node]x	The Token Ring monitor firmware detected a fatal error on the\n\n interface card.	high-token	"Issue a <Bold>clear interface<NoBold> command. " LOG_SID_RECUR_ACTION
CBUS-3-CTRBADLOVEI	3-Error	Interface [chars] SRB_COMPLETE lovenote received with unknown command 0x[node]x	The system received a message from the Token Ring interface\n\n but does not recognize the message.	high-token	LOG_SID_SH_TECH_ACTION
CBUS-3-CTRBADLOVEI_DUMP	3-Error	Dump of MEMB follows\n-SRB_ADDR: [node]x [node]x [node]x [node]x [node]x [node]x	The system is printing codes related to a previous lovenote error\n\n message.	high-token	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CBUS3CTRCMDFAILED	3-Error	Interface [chars] CTR Command [chars] Failed [chars] [node]4x	A command sent from the system to the Token Ring interface failed to\n\n complete successfully.	high-token	LOG_SID_SH_TECH_ACTION
CBUS3CTRCMDFAILED2	3-Error	Interface [chars] CTR Command [chars] Failed Code [node]4x	A command sent from the system to the Token Ring interface failed to\n\n complete successfully.	high-token	LOG_SID_SH_TECH_ACTION
CBUS-3-CTRINIT	3-Error	Interface [chars] CTR Initialization Failed - [chars]	The Token Ring interface failed one of its internal self-tests.	-	"Issue a <Bold>clear interface<NoBold> command. " LOG_SID_RECUR_ACTION
CBUS3CTRLRCMDFAIL0	3-Error	Controller [dec] cmd [dec] failed 0x[node]4x count [dec]	A command sent from the system to an interface processor failed to\n\n complete successfully.	-	"The system recovered by generating an error code to the requester."
CBUS3CTRLRCMDFAIL1	3-Error	Controller [dec] cmd [dec] 0x[node]8x failed 0x[node]4x count [dec]	A command sent from the system to an interface processor failed to\n\n complete successfully.	-	"The system recovered by generating an error code to the requester."
CBUS-3-CTRRAMTEST	3-Error	Interface [chars] RAM Addressing Test Failed - [chars]	The Token Ring interface failed its memory diagnostic tests.	-	"Issue a <Bold>clear interface<NoBold> command. " LOG_SID_RECUR_ACTION
CBUS-3-CTRRSET	3-Error	Interface [chars] failed to initialize	The Token Ring interface failed to insert into the Token Ring.\n\n The interface is placed into reset state and will not \n\n automatically try to re-insert itself.	high-token	"Issue a <Bold>clear interface<NoBold> command. " LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CBUS-3-CTRUCHECK	3-Error	Interface [chars] Microcode Check Error	The Token Ring interface microcode detected an unrecoverable error.	high-token	"Issue a <Bold>clear interface<NoBold> command. " LOG_SID_RECUR_ACTION
CBUS-3-DAUGHTER	3-Error	Unit [dec] daughter controller [dec] failed [chars] test - interface disabled	-	-	"First check that the daughter controller card is properly seated in\n\n its Multibus and ciscoBus connectors. Next swap daughter cards and\n\n check whether the error follows the daughter card or the slot. If the\n\n message recurs call your technical support representative for\n\n assistance."
CBUS3DAUGHTER_NORSP	3-Error	Unit [dec] daughter [dec] not responding 0x[node]x - disabled	-	-	"First make sure that the daughter card is properly seated in its\n\n Multibus and ciscoBus connectors. If this message recurs copy the \n\n error message exactly as it appears on the console or in the system\n\n log contact your Cisco technical support representative and provide\n\n the representative with the gathered information"
CBUS-3-FCICMDFAIL0	3-Error	Controller [dec] cmd [dec] failed 0x[node]4x count [dec]	A command sent from the system to an interface processor failed to\n\n complete successfully.	-	"The system recovered by generating an error code to the requester."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CBUS-3-FCICMDFAIL1	3-Error	Controller [dec] cmd [dec] 0x[node]8x failed 0x[node]4x count [dec]	A command sent from the system to an interface processor failed to\n\ complete successfully.	-	"The system recovered by generating an error code to the requester."
CBUS-3-FDDIRSET	3-Error	Interface [chars] Error [node]4x [chars] - fddi_reset	A hardware device did not respond appropriately to a request.	-	"Make sure the device is functioning and is configured correctly."
CBUS-3-FDDIRSETU	3-Error	Unit [dec] Error [node]4x [chars] - fddi_reset	A hardware device did not respond appropriately to a request.	-	"Make sure the device is functioning and is configured correctly."
CBUS-3-FSIPRSET	3-Error	Interface [chars] Error [node]4x [chars] - fsip_reset	-	-	"Check FSIP electrical connections cable and ciscoBus connections. An\n\ FSIP microcode reload will be required. If the check of electrical\n\ connections reveals no problems and the message recurs call your\n\ technical support representative for assistance."
CBUS-3-HALSDHERR	3-Error	[chars]Illegal sdh value - unit is [dec]	-	-	-
CBUS-3-HALSTAT	3-Error	Out of buffers--losing status information for ChSTM-1 on VIP card	An internal software resource has been exhausted.	-	LOG_SIDSH_TECH_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CBUS-3-HSSIRSET	3-Error	Interface [chars] Error [node]4x [chars] - hssi_reset	A command to reset an HSSI interface was issued by the RSP\n\ but the interface did not respond to the command within the\n\ expected time delay. The delay is given for the processor to\n\ return the buffers that it has allocated and to perform any\n\ necessary cleanup. This condition may be caused by a large number\n\ of buffers that have been allocated by the interface due to either\n\ heavy traffic or a hardware problem with the interface.	-	"Verify that the card is properly seated. If this error recurs \n\ then issue the <CmdBold>show tech-support<NoCmdBold> and\n\ <CmdBold>show logging<NoCmdBold> commands contact your Cisco \n\ technical support representative and provide the representative\n\ with the gathered information."
CBUS-3-INITERR	3-Error	Interface [dec] Error [node]4x idb [node]x [dec] [chars] - cbus_init	The switch processor or ciscoBus controller signaled an error while\n\ processing a packet or selecting an interface. This indicates a\n\ software problem.	-	LOG_SID_SH_TECH_ACTION
CBUS-3-INTR	3-Error	Interface [dec] idb [node]x [dec] [chars] - cbus_interrupt	The switch processor or ciscoBus controller returned a nonsensical\n\ value.	-	LOG_SID_SH_TECH_ACTION
CBUS-3-MODULE	3-Error	Missing [chars] for [chars]	A hardware or software error occurred.	-	LOG_SID_SH_TECH_ACTION
CBUS-3-NOBUF	3-Error	Buffer allocation failure: [chars]	A hardware or software error occurred.	-	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CBUS-3-OUTHUNG	3-Error	[chars]: tx[chars] output hung [node]4x - [chars] [chars]	A transmission attempt on an interface failed. The interface might not be attached to a cable or there might be a software problem.	-	"Check that the interfaces are all connected to the proper cables. If that is not the problem call your technical support representative."
CBUS-3-POLLFAIL	3-Error	Interface [chars] failed to respond debug info follows	A Token Ring interface card failed to respond to periodic polling. This can indicate a software or hardware problem. See CBUS-3-POLLFAILDAT for the syntax of this message.	-	LOG_SID_SH_TECH_ACTION
CBUS-3-POLLFAILDAT	3-Error	Int [dec]: [node]X [node]X [node]X [node]X [node]X [node]X	This is the debugging information for the CBUS-3-POLLFAIL error.	-	LOG_SID_DBG_ACTION
CBUS-3-PORTTYPE	3-Error	Unexpected interface type for [chars][node]port [node]type %u	A hardware or software error occurred.	-	LOG_SID_SH_TECH_ACTION
CBUS-3-POTSTAT	3-Error	Out of buffers--losing status information for POTENT on VIP card	An internal software resource has been exhausted.	-	LOG_SID_SH_TECH_ACTION
CBUS-3-RESETNXI	3-Error	Reset of removed interface [hec] [chars]	An interface reset was attempted on an interface that was removed from the router. This message appears if you use the shutdown command to bring down a removed interface.	-	LOG_SID_NO_ACTION
CBUS3SELECTBADVC	3-Error	Select invalid vc number [dec].	An invalid channel number is selected	-	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CBUS3SENDIPCMDFAIL	3-Error	Send Ip Cmd Failed. Command dropped after [dec] retries CCB 0x[hec] slot [dec] cmd code [dec]\n	Sending an ip command was retried. The receiving queues were still\n\n full after retries therefore the command was dropped.	-	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
CBUS-3-SERRSET	3-Error	Interface [chars] Error [node]4x [chars] - serial_reset	A software error occurred.	-	LOGSIDSHTECHACION
CBUS-3-SRPRSET	3-Error	Interface [chars] Error [node]4x [chars] - srp_reset	A command to reset an SRP interface was issued by the RSP\n\n but the interface did not respond to the command within the\n\n expected time delay. The delay is given for the processor to\n\n return the buffers that it has allocated and to perform any\n\n necessary cleanup. This condition may be caused by a large number\n\n of buffers that have been allocated by the interface due to either\n\n heavy traffic or a hardware problem with the interface.	-	"Verify that the card is properly seated. If this error recurs \n\n then issue the <CmdBold>show tech-support<NoCmdBold> and\n\n <CmdBold>show logging<NoCmdBold> commands contact your Cisco \n\n technical support representative and provide the representative\n\n with the gathered information."
CBUS-3-TESTFAIL	3-Error	Unit [dec] failed [chars] test - interface disabled	A hardware component failed an internal diagnostic test.	-	"Check switch settings on the interface cards. Check for proper unit\n\n numbers. Reset the cards. Replace the malfunctioning device."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CBUS-3-TXALLOC	3-Error	Error [node]4x tx_allocate - cbus_init	A hardware device did not respond appropriately to a request.	-	"Make sure the device is functioning and is configured correctly."
CBUS3XSARIENDACIME	3-Error	[chars] ustatus: [chars] [node]x [node]x [node]x [node]x [node]x	Debugging information when an IP panics.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
CBUS3IXVCENCFAIL	3-Error	Detected bad tx vc encap on [chars] vc [dec]. Board encap failed [hex] [hex] [hex]	Board encap failed on a transmit packet on a channelized serial \n\ interface which does not have the vc number encapsulation	-	LOG_SID_SH_TECH_ACTION
CBUS-3-UNKENC	3-Error	Interface [chars] unknown encaps type [hec]	A packet was received from the CIP with an unknown encapsulation type.\n\ The packet will be dropped.	-	LOG_SID_SH_TECH_ACTION
CBUS-3-UNKNOWN	3-Error	[chars] ustatus: [chars] [node]x [node]x [node]x [node]x [node]x	Debugging information when an IP panics.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
CBUS4CIRBADLOVE2	4-Warning	Interface [chars] Unexpected SRB_COMPLETE lovenote command=0x[node]x result=0x[node]x	The system received an unsolicited message from the Token Ring interface.\n\ The system ignored the message and continued normal processing.	high-token	LOG_SID_RECUR_ACTION
CBUS4FIXBADTXVC	4-Warning	Detected and fixed bad tx vc encap on [chars] bad vc [dec] fixed vc [dec]	A transmit packet on a channelized serial interface does not\n\ have the vc number encapsulation	-	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CBUS-4-NOCOOKIE	4-Warning	[chars]-[dec] controller missing configuration data - disabled	The controller type was derived from a hardware probe. The controller\n\n number indicates the ciscoBus relative slot number. This is a hardware\n\n error	-	LOG_SID_SH_TECH_ACTION
CBUS-4-RSETFAIL	4-Warning	Interface [chars] failed to reset properly in [chars] code [hex]	An interface reset command failed. This may be a software or hardware\n\n problem.	-	LOG_SID_SH_TECH_ACTION
CBUS-5CBADVCSETUP	5-Notice	Interface [chars] setup vc failed with vci exceeding vc-per-vp - 3	The TI1570 chip reserves 3 RX DMA channels for OAM cells. As a result the last 3 VCIs of the last VPI block cannot be used for regular traffic.	-	"Avoid try different vci/vpi combinations."
CBUS-5-FDDICMD	5-Notice	'[chars]' is not supported on [chars]	This command is not supported on this FDDI interface.	-	LOG_SID_NO_ACTION
CBUS-5-INPUTERR	5-Notice	Interface [chars] excessive input error rate	Interface disabled because too many input errors occurred.	-	"Inspect condition of attached network hardware"
CBUSSENDRCMDRECOV	5-Notice	Send Ip Cmd Succeeded after [dec] retries CCB 0x[hec] slot [dec] cmd code [dec]\n	Sending an ip command was retried due to receiving queues being full.\n\n But after some retries command was send successfully.	-	LOG_SID_NO_ACTION
CCE_H_PD3CLASS_NAME	3-Error	Map name [chars] id [node]X unable to [chars] string [hec]	-	-	-
CCE_H_PD3CLASS_NAME	3-Error	Map name [chars] id [node]X unable to [chars] string [hec]	-	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CCE_PI_PD3FILTER_LIST	3-Error	Failed to create class [chars] id [node]X filter list	An operation to create the filter list for a particular class has failed due to a resource issue. This may imply that the resultant notification via the API was deferred or dropped.	cce	"show class-map [type" " <class type>] <name>"
CCE_PI_PD3FILTER_LIST	3-Error	Failed to create class [chars] id [node]X filter list	An operation to create the filter list for a particular class has failed due to a resource issue. This may imply that the resultant notification via the API was deferred or dropped.	cce	"show class-map [type" " <class type>] <name>"
CCE_PI_PD3CLASSGROUPDB	4-Warning	Failed to [chars] class group id [node]X class id [node]X class group [node]X [chars] database	An operation to manipulate the record of the class groups and classes supplied via the PI/PD API has failed to perform the required action on a class group attached to a class successfully. This may imply that the resultant notification via the API was deferred or dropped.	cce	"show cce cpdp associations " "class-group <id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CCE_PD_CLASS_GRP_DB	4-Warning	Failed to [chars] class group id [node]X class id [node]X class group [node]X [chars] database	An operation to manipulate the record of the class groups and classes supplied via the PI/PD API has failed to perform the required action on a class group attached to a class successfully. This may imply that the resultant notification via the API was deferred or dropped.	cce	"show cce cpdp associations " "class-group <id>"
CCE_PI_PD4CLASS_DB	4-Warning	Failed to [chars] class group id [node]X class id [node]X [chars] database	An operation to manipulate the record of the class groups and classes supplied via the PI/PD API has failed to perform the required action on a class successfully. This may imply that the resultant notification via the API was deferred or dropped.	cce	"show cce cpdp associations " "class group <id>"
CCE_PI_PD4CLASS_DB	4-Warning	Failed to [chars] class group id [node]X class id [node]X [chars] database	An operation to manipulate the record of the class groups and classes supplied via the PI/PD API has failed to perform the required action on a class successfully. This may imply that the resultant notification via the API was deferred or dropped.	cce	"show cce cpdp associations " "class group <id>"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<u>CCE</u> <u>HD</u> <u>CLASS</u> <u>GRP</u> <u>PDB</u>	4-Warning	Failed to [chars] id [node]X [chars] database	An operation to manipulate the record of the class groups and classes supplied via the PI/PD API has failed to perform the required action on a class group successfully. This may imply that the resultant notification via the API was deferred or dropped.	cce	"show cce cpdp associations " "class-group <id>"
<u>CCE</u> <u>HD</u> <u>CLASS</u> <u>GRP</u> <u>PDB</u>	4-Warning	Failed to [chars] id [node]X [chars] database	An operation to manipulate the record of the class groups and classes supplied via the PI/PD API has failed to perform the required action on a class group successfully. This may imply that the resultant notification via the API was deferred or dropped.	cce	"show cce cpdp associations " "class-group <id>"
<u>CCE</u> <u>HD</u> <u>FEATURE</u> <u>BN</u> <u>PDB</u>	4-Warning	Failed to [chars] target id [node]X class group [node]X class id [node]X feature [chars] binding [chars] database	An operation to manipulate the record of the binding of a action within a policy map class to a particular target supplied via the PI/PD API has failed to perform the required action successfully. This may imply that the resultant notification via the API was deferred or dropped.	cce	"show cce cpdp bindings " "target <id>"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CCEHDFEAUREBNDDB</del>	4-Warning	Failed to [chars] target id [node]X class group [node]X class id [node]X feature [chars] binding [chars] database	An operation to manipulate the record of the binding of a action within a policy map class to a particular target supplied via the PI/PD API has failed to perform the required action successfully. This may imply that the resultant notification via the API was deferred or dropped.	cce	"show cce cpdp bindings " "target <id>"
<del>CCEHDFECLASGROUPB</del>	4-Warning	Failed to [chars] id [node]X [chars] database	An operation to manipulate the record of the target class groups supplied via the PI/PD API has failed to perform the required action on a target class group successfully. This may imply that the resultant notification via the API was deferred or dropped.	cce	"show cce cpdp bindings " "target <id>"
<del>CCEHDFECLASGROUPB</del>	4-Warning	Failed to [chars] id [node]X [chars] database	An operation to manipulate the record of the target class groups supplied via the PI/PD API has failed to perform the required action on a target class group successfully. This may imply that the resultant notification via the API was deferred or dropped.	cce	"show cce cpdp bindings " "target <id>"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CCE</del> <u>CPD</u> <del>CLASS</del> <u>CLASSES</u> <del>ID</del>	6-Information	Class group [node]X class [node]X [chars] contains a class group	The class is reporting the presence of a class group upon its removal. This is informational.	cce	"show cce cpdp associations " "class-group <id>"
<del>CCE</del> <u>CPD</u> <del>CLASS</del> <u>CLASSES</u> <del>ID</del>	6-Information	Class group [node]X class [node]X [chars] contains a class group	The class is reporting the presence of a class group upon its removal. This is informational.	cce	"show cce cpdp associations " "class-group <id>"
<del>CCE</del> <u>CPD</u> <del>CLASS</del> <u>HLIER</u>	6-Information	Class [chars] id [node]X type [chars] filter list is unbalanced	During the addition of a class an internal error was encountered during the construction of the match terms comprising that class.	cce	"show class-map" " [type <type>] <name>"
<del>CCE</del> <u>CPD</u> <del>CLASS</del> <u>HLIER</u>	6-Information	Class [chars] id [node]X type [chars] filter list is unbalanced	During the addition of a class an internal error was encountered during the construction of the match terms comprising that class.	cce	"show class-map" " [type <type>] <name>"
<del>CCE</del> <u>CPD</u> <del>CLASS</del> <u>ROF</u> <del>CLASS</del> <u>SB</u>	6-Information	Class group [node]X contains classes	The class group is reporting the presence of classes upon its removal. This is informational.	cce	"show cce cpdp associations " "class-group <id>"
<del>CCE</del> <u>CPD</u> <del>CLASS</del> <u>ROF</u> <del>CLASS</del> <u>SB</u>	6-Information	Class group [node]X contains classes	The class group is reporting the presence of classes upon its removal. This is informational.	cce	"show cce cpdp associations " "class-group <id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CCEDP/ARCE/IND/CSDB</del>	6-Information	[chars] [chars] [chars] target class group [node]X contains feature bindings	The target class group is reporting the presence of feature bindings upon its removal. This is informational.	cce	"show cce cpdp bindings " "target <id>"
<del>CCEDP/ARCE/IND/CSDB</del>	6-Information	[chars] [chars] [chars] target class group [node]X contains feature bindings	The target class group is reporting the presence of feature bindings upon its removal. This is informational.	cce	"show cce cpdp bindings " "target <id>"
<del>CCEN/CM/RC/ASY/A</del>	3-Error	Dataplane IPV6 compression classification error for interface [chars]	Cisco internal software error. The dataplane was unable to complete processing of an IPV6 prefix classification request due to a miss on a TCAM lookup. This is likely due to a data initialization error	cpp-ucodekeyword:cce	LOG_STD_ACTION
<del>CCEN/CM/RC/ASY/A</del>	3-Error	Dataplane classification error for interface [chars]	Cisco internal software error. The dataplane was unable to complete processing of a classification request because an invalid form of classification was selected. This is likely due to a data initialization error	cpp-ucodekeyword:cce	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CEF</del> WCEFAMCONG	3-Error	Control Plane classification config error: TCAM device not specified: MPLS or Layer2 [chars] [chars]	Cisco internal software error. The dataplane was unable to complete processing of a classification request because the TCAM device was not specified. This is likely due to a data initialization error	qfp-infra-internalkywordcce	LOG_STD_ACTION
<del>CEF</del> WCEFAMCONG4	3-Error	Control Plane classification config error: TCAM device not specified: [chars] [chars] Ipv4 src [char]i dst [char]i	Cisco internal software error. The dataplane was unable to complete processing of a classification request because the TCAM device was not specified. This is likely due to a data initialization error	qfp-infra-internalkywordcce	LOG_STD_ACTION
<del>CEF</del> WCEFAMCONG6	3-Error	Control Plane classification config error: TCAM device not specified: [chars] [chars] IPv6 src [char]I dst [char]I	Cisco internal software error. The dataplane was unable to complete processing of a classification request because the TCAM device was not specified. This is likely due to a data initialization error	qfp-infra-internalkywordcce	LOG_STD_ACTION
<del>CEF</del> WCEFAMCONG6R	3-Error	Control Plane classification config error: TCAM device not specified: [chars] [chars] IPv6 compression src [char]I dst [char]I	Cisco internal software error. The dataplane was unable to complete processing of a classification request because the TCAM device was not specified. This is likely due to a data initialization error	qfp-infra-internalkywordcce	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CCFWCECAMONTEXT</del>	3-Error	Control Plane classification config error: TCAM device not specified: [chars] [chars] IPv6_ext src [char]I dst [char]I	Cisco internal software error. The dataplane was unable to complete processing of a classification request because the TCAM device was not specified. This is likely due to a data initialization error	qfp-infra-internalkeywordcce	LOG_STD_ACTION
<del>CCFWTCAMCONTROLLER</del>	3-Error	Datapath classification program flow error: invalid TCAM controller 0x[node]	Cisco internal software error. The dataplane detected a classification request providing an invalid TCAM controller value. The program flow Traceback	qfp-infra-internalkeywordcce	LOG_STD_ACTION
<del>CEH1E164FNSUPRD</del>	2-Critical	[chars]: E164 address length [dec] is not supported	Received E164 address with the length that is not supported.	ios-voice	"Report this immediately to the technical support representative."
<del>CEH1E164FNSUPRD</del>	2-Critical	[chars]: E164 address length [dec] is not supported	Received E164 address with the length that is not supported.	ios-voice	"Report this immediately to the technical support representative."
<del>CEH23GIKPUNREGSIR</del>	2-Critical	Gatekeeper [chars] requested unregister from Gateway [chars]	Gatekeeper requested unregister from Gateway	ios-voice	"Verify whether this is user intended or otherwise report this to the\n\ technical support representative."
<del>CEH23GIKPUNREGSIR</del>	2-Critical	Gatekeeper [chars] requested unregister from Gateway [chars]	Gatekeeper requested unregister from Gateway	ios-voice	"Verify whether this is user intended or otherwise report this to the\n\ technical support representative."
<del>CEH23GWYFCSIR/ALD</del>	2-Critical	Gateway [chars] failed to register with Gatekeeper [chars] even after [dec] retries	Gateway failed to register with Gatekeeper	ios-voice	"Report this immediately to the technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CCHE22</del> GWY_RCSIR_AID	2-Critical	Gateway [chars] failed to register with Gatekeeper [chars] even after [dec] retries	Gateway failed to register with Gatekeeper	ios-voice	"Report this immediately to the technical support representative."
<del>CCHE22</del> GWY_RCSIR_AICK	2-Critical	Gateway [chars] failed attempt to register with Alternate Gatekeeper [chars]	Gateway failed attempt to register with Alternate Gatekeeper	ios-voice	"Report this immediately to the technical support representative."
<del>CCHE22</del> GWY_RCSIR_AICK	2-Critical	Gateway [chars] failed attempt to register with Alternate Gatekeeper [chars]	Gateway failed attempt to register with Alternate Gatekeeper	ios-voice	"Report this immediately to the technical support representative."
<del>CCHE22</del> GWY_UNRECSIR	2-Critical	Gateway [chars] unregistered from Gatekeeper [chars]	Gateway unregistered from the Gatekeeper	ios-voice	"Verify whether this is user intended or otherwise report this to the\n\ technical support representative."
<del>CCHE22</del> GWY_UNRECSIR	2-Critical	Gateway [chars] unregistered from Gatekeeper [chars]	Gateway unregistered from the Gatekeeper	ios-voice	"Verify whether this is user intended or otherwise report this to the\n\ technical support representative."
CCHE23BAD_P_ADDRESS	3-Error	[chars]: illegal destination [chars]	The IP address passed from CCAPI in the call setup request is invalid	ios-voice	"Check the dial-peer configuration for the dial-peer that matches the\n\ called party number. Make sure that the session target field contains\n\ valid IP address. or DNS name"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CCH323</del> BAD_P_ADDRESS	3-Error	[chars]: illegal destination [chars]	The IP address passed from CCAP1 in the call setup request is invalid	ios-voice	"Check the dial-peer configuration for the dial-peer that matches the\n\ called party number. Make sure that the session target field contains\n\ valid IP address. or DNS name"
<del>CCH323</del> CALL_SETUP_FAILED	3-Error	[chars]: call setup failed	The call setup request failed	ios-voice	"Verify that the remote destination identified by the IP address is reachable"
<del>CCH323</del> CALL_SETUP_FAILED	3-Error	[chars]: call setup failed	The call setup request failed	ios-voice	"Verify that the remote destination identified by the IP address is reachable"
<del>CCH323</del> CANNOT_ALLOCATE_CALL_INFO	3-Error	[chars]: cannot allocate call info data structure	Allocation of the CCH323 call info structure failed. This is possibly due\n\ to the fact that system memory pool is exhausted.	ios-voice	"This call will be terminated due to lack of resource"
<del>CCH323</del> CANNOT_ALLOCATE_CALL_INFO	3-Error	[chars]: cannot allocate call info data structure	Allocation of the CCH323 call info structure failed. This is possibly due\n\ to the fact that system memory pool is exhausted.	ios-voice	"This call will be terminated due to lack of resource"
<del>CCH323</del> CANNOT_ALLOCATE_CALL_CB	3-Error	[chars]: cannot allocate call control block	Allocation of the CCH323 call control block failed. This is possibly due\n\ to the fact that system memory pool is exhausted.	ios-voice	"This can be a catastrophic error"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CCH323</del> CANNOTALLOCATECB	3-Error	[chars]: cannot allocate call control block	Allocation of the CCH323 call control block failed. This is possibly due to the fact that system memory pool is exhausted.	ios-voice	"This can be a catastrophic error"
<del>CCH323</del> CANNOTALLOCGW	3-Error	[chars]: cannot allocate gateway structure	Allocation of the CCH323 gateway instance failed. This is possibly due to the fact that system memory pool is exhausted.	voice-h323	"This can be a catastrophic error"
<del>CCH323</del> CANNOTALLOCGW	3-Error	[chars]: cannot allocate gateway structure	Allocation of the CCH323 gateway instance failed. This is possibly due to the fact that system memory pool is exhausted.	voice-h323	"This can be a catastrophic error"
<del>CCH323</del> CANNOTCREATECB	3-Error	[chars]: cannot create the H.323 ccb Tree	Creation of the H.323 CCB Tree failed. This is possibly due to the fact that system memory pool is exhausted.	voice-h323	"This can be a catastrophic error"
<del>CCH323</del> CANNOTCREATECB	3-Error	[chars]: cannot create the H.323 ccb Tree	Creation of the H.323 CCB Tree failed. This is possibly due to the fact that system memory pool is exhausted.	voice-h323	"This can be a catastrophic error"
<del>CCH323</del> CANNOTCREATEH	3-Error	[chars]: cannot create the H.323 crv hash table	Creation of the H.323 CRV Hash Table failed. This is possibly due to the fact that system memory pool is exhausted.	voice-h323	"This can be a catastrophic error"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CCH323</del> CCH323_CANNOT_CREATE_HASH_TBL	3-Error	[chars]: cannot create the H.323 crv hash table	Creation of the H.323 CRV Hash Table failed. This is possibly due to \n\n the fact that system memory pool is exhausted.	voice-h323	"This can be a catastrophic error"
<del>CCH323</del> CCH323_CANNOT_FIND_CCB	3-Error	[chars]: cannot find CCH323 call control block based on callID [dec]	Cannot find a CCH323 call control block based on the specified callID	ios-voice	"No action is required. This is an indication that some events happen\n\n out of sequence"
<del>CCH323</del> CCH323_CANNOT_FIND_CCB	3-Error	[chars]: cannot find CCH323 call control block based on callID [dec]	Cannot find a CCH323 call control block based on the specified callID	ios-voice	"No action is required. This is an indication that some events happen\n\n out of sequence"
<del>CCH323</del> CCH323_CANNOT_INSERT_CCB	3-Error	[chars]: cannot insert control block 0x[hec] to tree	Insertion of this CCH323 call control block to the RBTree failed. This\n\n can be related to a corrupted RBTree	ios-voice	"This can be a catastrophic error"
<del>CCH323</del> CCH323_CANNOT_INSERT_CCB	3-Error	[chars]: cannot insert control block 0x[hec] to tree	Insertion of this CCH323 call control block to the RBTree failed. This\n\n can be related to a corrupted RBTree	ios-voice	"This can be a catastrophic error"
<del>CCH323</del> CCH323_CANNOT_CONNECT	3-Error	[chars]: cc_api_call_disconnected returns [dec]	An error is returned when CCH323 attempts to call cc_api_call_connected	ios-voice	"None"
<del>CCH323</del> CCH323_CANNOT_CONNECT	3-Error	[chars]: cc_api_call_disconnected returns [dec]	An error is returned when CCH323 attempts to call cc_api_call_connected	ios-voice	"None"
<del>CCH323</del> CCH323_CANNOT_CONNECT	3-Error	[chars]: cc_api_call_disconnected returns [dec]	An error is returned when CCH323 attempts to call cc_api_call_disconnected	ios-voice	"None"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CCH323_KONNECTERR</del>	3-Error	[chars]: cc_api_call_disconnected returns [dec]	An error is returned when CCH323 attempts to call cc_api_call_disconnected	ios-voice	"None"
<del>CCH323_SENDMIAED</del>	3-Error	[chars]: create send internal event [chars] to H.225 state machine failed	create and send event to H.225 state machine failed. This is possibly due\n\ to the missing call control block or not enough memory for event buffers	ios-voice	"This can be a catastrophic error"
<del>CCH323_SENDMIAED</del>	3-Error	[chars]: create send internal event [chars] to H.225 state machine failed	create and send event to H.225 state machine failed. This is possibly due\n\ to the missing call control block or not enough memory for event buffers	ios-voice	"This can be a catastrophic error"
<del>CCH323_SENDMIAED</del>	3-Error	[chars]: create and send event [chars] to H.245 state machine failed	create and send event to H.245 state machine failed. This is possibly due\n\ to the missing call control block or not enough memory for event buffers	ios-voice	"This can be a catastrophic error"
<del>CCH323_SENDMIAED</del>	3-Error	[chars]: create and send event [chars] to H.245 state machine failed	create and send event to H.245 state machine failed. This is possibly due\n\ to the missing call control block or not enough memory for event buffers	ios-voice	"This can be a catastrophic error"
<del>CCH323_MIAOAIAD</del>	3-Error	[chars]: cannot allocate message buffer	Allocation of the CCH323 message buffer failed. This is possibly due\n\ to the fact that system memory pool is exhausted.	ios-voice	"This can be a catastrophic error"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CCH323</del> CCH323_MallocFailed	3-Error	[chars]: cannot allocate message buffer	Allocation of the CCH323 message buffer failed. This is possibly due\n\ to the fact that system memory pool is exhausted.	ios-voice	"This can be a catastrophic error"
<del>CCH323</del> CCH323_SendEventFailed	3-Error	[chars]: create and send event [chars] to RAS state machine failed	create and send event to RAS state machine failed. This is possibly due\n\ to the missing call control block or not enough memory for event buffers	ios-voice	"This can be a catastrophic error"
<del>CCH323</del> CCH323_SendEventFailed	3-Error	[chars]: create and send event [chars] to RAS state machine failed	create and send event to RAS state machine failed. This is possibly due\n\ to the missing call control block or not enough memory for event buffers	ios-voice	"This can be a catastrophic error"
<del>CCH323</del> CCH323_MonitorSetupFailed	3-Error	[chars][dec]	A failure was encountered in setting up the monitoring of\n\ H323 resources.	ios-voice	"Try power cycling the system. " LOG_SID_RECUR_ACTION
<del>CCH323</del> CCH323_MonitorSetupFailed	3-Error	[chars][dec]	A failure was encountered in setting up the monitoring of\n\ H323 resources.	ios-voice	"Try power cycling the system. " LOG_SID_RECUR_ACTION
<del>CCH323</del> CCH323_UnknownEvent	3-Error	unknown event [hec]	Unknown CCH323 Event	ios-voice	"No action is required"
<del>CCH323</del> CCH323_UnknownEvent	3-Error	unknown event [hec]	Unknown CCH323 Event	ios-voice	"No action is required"
<del>CCH323</del> CCH323_H225LibraryInitFailed	3-Error	[chars]: H.225.0 library initialization failed	H.225.0 library initialization failed	ios-voice	"This can be catastrophic"
<del>CCH323</del> CCH323_H225LibraryInitFailed	3-Error	[chars]: H.225.0 library initialization failed	H.225.0 library initialization failed	ios-voice	"This can be catastrophic"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CCH33</del> GENERAL_EVENT	3-Error	[chars]: Exceeding limit on servicing internal event for the same call	The maximum limit on servicing internal event queue has exceeded\n the limit. The condition may be caused by internal loops on\n sending events between state machines.	ios-voice	"This can be a severe error"
<del>CCH33</del> GENERAL_EVENT	3-Error	[chars]: Exceeding limit on servicing internal event for the same call	The maximum limit on servicing internal event queue has exceeded\n the limit. The condition may be caused by internal loops on\n sending events between state machines.	ios-voice	"This can be a severe error"
CCH33SIRCALLHIFAIL	3-Error	\nch323_store_call_history: [chars]	Insert an active H323 call record into call history list failed	ios-voice	"No action is required"
CCH33SIRCALLHIFAIL	3-Error	\nch323_store_call_history: [chars]	Insert an active H323 call record into call history list failed	ios-voice	"No action is required"
CCH36CALL_PRESRMD	6-Information	[chars]: H.323 call preserved due to socket closure or error Call Id = [node]fd = [dec]	An H.225.0 or H.245 socket was closed due to a TCP FIN received from the remote endpoint or a socket error. Calls using these sockets for which call preservation was configured will be preserved. This is not an error but call preservation can occasionally cause hung calls.	voice-h323	"Use \"show h323 calls preserved\" command to get a \"list of all active preserved calls. Long duration preserved calls can \"then be cleared using \"clear call voice\" command."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CCH323-CALL_PRESERVED</del>	6-Information	[chars]: H.323 call preserved due to socket closure or error Call Id = [node]fd = [dec]	An H.225.0 or H.245 socket was closed due to a TCP FIN received from the remote endpoint or a socket error. Calls using these sockets for which call preservation was configured will be preserved. This is not an error but call preservation can occasionally cause hung calls.	voice-h323	"Use \"show h323 calls preserved\" command to get a \"list of all active preserved calls. Long duration preserved calls can \"then be cleared using \"clear call voice\" command."
<del>CCH323-LOG_DURATION_DETECTED</del>	6-Information	Long Duration Call is detected [chars]\n	The call is active for configured duration of long call	ios-voice	LOG_STD_ACTION
<del>CCH323-LOG_DURATION_DETECTED</del>	6-Information	Long Duration Call is detected [chars]\n	The call is active for configured duration of long call	ios-voice	LOG_STD_ACTION
CCH323-6-REGSTR	6-Information	Gateway [chars] registered with Gatekeeper [chars]	Gateway registered with the Gatekeeper	none	"no action is required"
CCH323-6-REGSTR	6-Information	Gateway [chars] registered with Gatekeeper [chars]	Gateway registered with the Gatekeeper	none	"no action is required"
<del>CCK_QAT3-INVALID_HW_PART_NUM</del>	3-Error	asr1k-cck-qat	Invalid HW Part number(%d) and HW Revision(%d)	"HW Part number and revision read from the IDPROM are not showing up expected values which means the IDPROM is either corrupted or incorrectly programmed."	"Possible Hardware issue. Change the hardware."
CCK_QAT3-INIT_FAIL	3-Error	[chars]: initialization failed [chars]	CCK QAT initialization sequence failed.	iosxe-ipsec	"Copy the error message exactly as it appears and report it to your \n\ technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CCM3-CCMINVALEVT	3-Error	Client[[dec]] received an invalid event[[dec]]	Cluster Control Manager High Availability feature on standby detected an invalid event received from active	ccm	LOG_STD_ACTION
CCM3-CCMINVALEVT	3-Error	Client[[dec]] received an invalid event[[dec]]	Cluster Control Manager High Availability feature on standby detected an invalid event received from active	ccm	LOG_STD_ACTION
CCM3-CCMNOCLIENT	3-Error	Client [chars][[dec]] not present	Cluster Control Manager High Availability features for this client will not work.	ccm	"Refer to the documentation on configuring High Availability features"
CCM3-CCMNOCLIENT	3-Error	Client [chars][[dec]] not present	Cluster Control Manager High Availability features for this client will not work.	ccm	"Refer to the documentation on configuring High Availability features"
CCM3-CCMREGFAIL	3-Error	High Availability Registration failed	Cluster Control Manager High Availability features will not work.	ccm	LOG_STD_ACTION
CCM3-CCMREGFAIL	3-Error	High Availability Registration failed	Cluster Control Manager High Availability features will not work.	ccm	LOG_STD_ACTION
<del>CCPX3-NOCONCTABLE</del>	3-Error	\ Unable to allocate memory for [dec] connection table entries in [chars].\n	-	-	-
<del>CCPX3-NOCONCTABLE</del>	3-Error	\ Unable to allocate memory for [dec] connection table entries in [chars].\n	-	-	-
<del>CCPX3-NORASREQTABLE</del>	3-Error	\ Unable to allocate memory for [dec] RAS request table entries in [chars].\n	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CCROXY</del> <del>3</del> <del>NO</del> <del>R</del> <del>_</del> <del>REQ</del> <del>_</del> <del>TABLE</del>	3-Error	\ Unable to allocate memory for [dec] RAS request table entries in [chars].\n	-	-	-
<del>CCROXY</del> <del>3</del> <del>NO</del> <del>CB</del> <del>_</del> <del>EVENT</del>	3-Error	\ During initialization of proxy [chars]: cannot allocate event block\n	-	-	-
<del>CCROXY</del> <del>3</del> <del>NO</del> <del>CB</del> <del>_</del> <del>EVENT</del>	3-Error	\ During initialization of proxy [chars]: cannot allocate event block\n	-	-	-
<del>CCROXY</del> <del>3</del> <del>NO</del> <del>CALL</del> <del>_</del> <del>CH</del> <del>ASIC</del>	3-Error	\ No proxy CCAPI interface found: H.323 proxy bringup failed in [chars].\n	-	-	-
<del>CCROXY</del> <del>3</del> <del>NO</del> <del>CALL</del> <del>_</del> <del>CH</del> <del>ASIC</del>	3-Error	\ No proxy CCAPI interface found: H.323 proxy bringup failed in [chars].\n	-	-	-
<del>CCROXY</del> <del>3</del> <del>NO</del> <del>CCAPI</del> <del>_</del> <del>INTERFACE</del>	3-Error	\ CCAPI new interface is not created in [chars]\n	-	-	-
<del>CCROXY</del> <del>3</del> <del>NO</del> <del>CCAPI</del> <del>_</del> <del>INTERFACE</del>	3-Error	\ CCAPI new interface is not created in [chars]\n	-	-	-
<del>CCROXY</del> <del>3</del> <del>NO</del> <del>CC</del> <del>_</del> <del>FROM</del> <del>_</del> <del>CALL</del> <del>_</del> <del>ID</del>	3-Error	\ No call-control-block is found in [chars] for [hec].\n	-	-	-
<del>CCROXY</del> <del>3</del> <del>NO</del> <del>CC</del> <del>_</del> <del>FROM</del> <del>_</del> <del>CALL</del> <del>_</del> <del>ID</del>	3-Error	\ No call-control-block is found in [chars] for [hec].\n	-	-	-
<del>CCROXY</del> <del>3</del> <del>NO</del> <del>INIT</del> <del>_</del> <del>OS</del> <del>_</del> <del>h25</del>	3-Error	\ [chars]: initializing h225 socket failed through ASN.1 library: error=[dec]\n	-	-	-





Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>C</del> <del>C</del> <del>R</del> <del>O</del> <del>X</del> <del>A</del> <del>N</del> <del>R</del> <del>C</del> <del>S</del> <del>H</del> <del>E</del> <del>D</del> <del>B</del> <del>Y</del> <del>K</del>	3-Error	\ H.323 Proxy registration is being removed by Gatekeeper [chars]\n Check \show proxy h323 status\ for details.	-	-	-
<del>C</del> <del>C</del> <del>R</del> <del>O</del> <del>X</del> <del>A</del> <del>N</del> <del>R</del> <del>C</del> <del>S</del> <del>H</del> <del>E</del> <del>D</del> <del>B</del> <del>Y</del> <del>K</del>	3-Error	\ H.323 Proxy registration is being removed by Gatekeeper [chars]\n Check \show proxy h323 status\ for details.	-	-	-
<del>C</del> <del>I</del> <del>P</del> <del>S</del> <del>C</del> <del>R</del> <del>O</del> <del>X</del> <del>A</del> <del>N</del> <del>R</del> <del>C</del> <del>S</del> <del>H</del> <del>E</del> <del>D</del> <del>B</del> <del>Y</del> <del>K</del>	2-Critical	FFP Crypto device Proxy Agent initialization failure result: [dec].	Cisco internal software error. FFP Crypto device Procy Agent initialization detected critical failure. FFP Crypto device software library will not be functional while this condition exists.	ffp-ipsekeyword:datapath	LOG_STD_ACTION
<del>C</del> <del>I</del> <del>P</del> <del>S</del> <del>C</del> <del>R</del> <del>O</del> <del>X</del> <del>A</del> <del>N</del> <del>R</del> <del>C</del> <del>S</del> <del>H</del> <del>E</del> <del>D</del> <del>B</del> <del>Y</del> <del>K</del>	2-Critical	FFP Crypto device Procy Agent Proxy IPC interface initialization failure result: [dec].	Cisco internal software error. FFP Crypto device Procy Agent Proxy initialization detected that the IPC interface initialization failed. FFP Crypto device Procy Agent proxy will not be functional while this condition exists.	ffp-ipsekeyword:datapath	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CCHCPOXNSKCKAISIAD</del>	3-Error	Cryptographic Known-Answer Test failure result: [chars]	Cisco internal software error. Cryptographic Known-Answer Tests. Error due to one of the Cryptographic Power-on Self-tests Known-Answer Tests not returning the expected value.	esg-ipseckeyword:datapath	LOG_STD_ACTION
<del>CCHCPOXNSKCKAISIAD</del>	3-Error	FFP Crypto device Procy Agent Proxy IPSec SA create failure result: [dec].	Cisco internal software error. FFP Crypto device Procy Agent Proxy message processing detected IPSec SA create failure. The request is rejected as the result of this condition.	ffp-ipseckeyword:datapath	LOG_STD_ACTION
<del>CSWFCSMKAISIAD</del>	2-Critical	QFP Crypto device software library kat test failure result: [dec].	Cisco internal software error. QFP Crypto device software library detected critical failure. QFP Crypto device software library will not be functional while this condition exists.	ultra-ipseckeyword:datapath	LOG_STD_ACTION
<del>CSWFCSMKAISIAD</del>	2-Critical	QFP Crypto device software library initialization failure result: [dec].	Cisco internal software error. QFP Crypto device software library initialization detected critical failure. QFP Crypto device software library will not be functional while this condition exists.	ultra-ipseckeyword:datapath	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CS</del> <del>SEC</del> <del>SH</del> <del>IP</del> <del>SEC</del> <del>ERR</del>	2-Critical	QFP Crypto device software library Proxy IPC interface initialization failure result: [dec].	Cisco internal software error. QFP Crypto device software library Proxy initialization detected that the IPC interface initialization failed. QFP Crypto device software library proxy will not be functional while this condition exists.	ultra-ipseckeyword:datapath	LOG_STD_ACTION
<del>CS</del> <del>SEC</del> <del>SH</del> <del>IP</del> <del>SEC</del> <del>ERR</del>	3-Error	QFP Crypto device software library Proxy IPsec SA create failure result: [dec].	Cisco internal software error. QFP Crypto device software library Proxy message processing detected IPsec SA create failure. The request is rejected as the result of this condition.	ultra-ipseckeyword:datapath	LOG_STD_ACTION
<del>CS</del> <del>SSL</del> <del>SH</del> <del>ERR</del> <del>ERR</del>	2-Critical	QFP Crypto device software library initialization failure result: [dec].	Cisco internal software error. QFP Crypto device software library initialization detected critical failure. QFP Crypto device software library will not be functional while this condition exists.	ultra-sslkeyword:datapath	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CVS/SSL/PROXY/ERR</del>	2-Critical	QFP Crypto device software library Proxy IPC interface initialization failure result: [dec].	Cisco internal software error. QFP Crypto device software library Proxy initialization detected that the IPC interface initialization failed. QFP Crypto device software library proxy will not be functional while this condition exists.	ultra-sslkeyword:datapath	LOG_STD_ACTION
<del>CVS/SSL/PROXY/ERR</del>	3-Error	QFP Crypto device software library Proxy IPsec CTX create failure result: [dec].	Cisco internal software error. QFP Crypto device software library Proxy message processing detected IPsec CTX create failure. The request is rejected as the result of this condition.	ultra-sslkeyword:datapath	LOG_STD_ACTION
CDP_PD2POWER_LOW	2-Critical	[chars] - [chars] [chars] [enet] on port [chars]	System is not supplied with its maximum power	-	"Reconfigure or replace the source of inline power to get maximum power."
CDP_PD4POWER_OK	4-Warning	[chars] - [chars] inline power source on port [chars]	System is supplied with sufficient power.	-	"No recommended action."
CDP-3-CHUNK	3-Error	Chunk_malloc Failure	chunk malloc failure	cdp	LOG_STD_ACTION
CDP-3-CHUNK	3-Error	Chunk_malloc Failure	chunk malloc failure	cdp	LOG_STD_ACTION
CDP4DUPLEX_MISMATCH	4-Warning	duplex mismatch discovered on [chars] [chars] with [chars] [chars] [chars].	CDP discovered a mismatch of duplex configuration	-	"Configure the interfaces to the same duplex full or half."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CDP4DUPLX_MSMACH	4-Warning	duplex mismatch discovered on [chars] [chars] with [chars] [chars] [chars].	CDP discovered a mismatch of duplex configuration	-	"Configure the interfaces to the same duplex full or half."
CDP4NATIVE_VLAN_MSMACH	4-Warning	Native VLAN mismatch discovered on [chars] [dec] with [chars] [chars] [dec].	CDP discovered a mismatch of native-VLAN configuration	-	"Configure the interfaces to the same native VLAN."
CDP4NATIVE_VLAN_MSMACH	4-Warning	Native VLAN mismatch discovered on [chars] [dec] with [chars] [chars] [dec].	CDP discovered a mismatch of native-VLAN configuration	-	"Configure the interfaces to the same native VLAN."
CDP6TLV_LIST_GLOBALLY	6-Information	Tlv-list [chars] [chars] globally on all interfaces.	CDP Tlv-list configuration Globally.	-	"No action required. The message is informatory in nature."
CDP6TLV_LIST_GLOBALLY	6-Information	Tlv-list [chars] [chars] globally on all interfaces.	CDP Tlv-list configuration Globally.	-	"No action required. The message is informatory in nature."
CDP6TLV_LIST_INTERFACE	6-Information	Tlv-list [chars] [chars] interface [chars]	CDP Tlv-list configuration on an interface.	-	"No action required. The message is informatory in nature."
CDP6TLV_LIST_INTERFACE	6-Information	Tlv-list [chars] [chars] interface [chars]	The get_fd function reported an error trying to allocate a Event Detector context control block.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>CDP6RXPROX_CAD_FAIL</del>	3-Error	-	Getting Hash Address failed.	cpp-ucode	LOG_STD_ACTION
<del>CDP6RXPROX_CAD_FAIL</del>	3-Error	[hec]	Failed to get adjacency index from IPC packet.	cpp-ucode	LOG_STD_ACTION
<del>CDP6RXPROX_ICN_FAIL</del>	3-Error	[dec]	IPC handler initialization failed.	cpp-ucode	LOG_STD_ACTION
<del>CDP6RXPROX_OCE_FAIL</del>	3-Error	[hec]	Null OCE Chain pointer.	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CFXIPXPAKCODE</del>	3-Error	[hec]	Failed to allocate packet buffer for IPC	cpp-ucode	LOG_STD_ACTION
<del>CFXIPXPAKSEND</del>	3-Error	[hec]	Failed to send IPC packet.	cpp-ucode	LOG_STD_ACTION
<del>CFXIPXRNALMG</del>	4-Warning	[hec]	Received an invalid IPC messages subtype.	cpp-ucode	LOG_STD_ACTION
CF_SHM_FB3FBIOPO	3-Error	Error for topology [dec]: [chars]	<del>CF_SHMIBNERR</del>	<del>CF_SMDISCOMPONENT</del>	LOG_STD_ACTION
<del>CFVOCCEMAXRECHD</del>	3-Error	Number of VRF instances already exceeded allowed limit [dec]	Number of vrf instances exceeded supported platform scale	firmware	"Please reduce the number of vrf instances" "to scale to platform supported scale"
<del>CFBIRKIPMSIMEXCHD</del>	3-Error	Number of ip mpls Prefixes exceeded allowed limit [dec] on asic [dec]	Number of ip mpls Prefixes exceeded supported scale	dominica-infra	"Please reduce the number of ip mpls Prefixes" "to scale to platform supported scale"
<del>CFBIRKIPMSIMEXCHD</del>	3-Error	Number of ip mpls Prefixes exceeded allowed limit [dec] on asic [dec]	Number of ip mpls Prefixes exceeded supported scale	rsp3-infra	"Please reduce the number of ip mpls Prefixes" "to scale to platform supported scale"
<del>CFBIRKIPV6IMEXCHD</del>	3-Error	Number of ipv6 Prefixes exceeded allowed limit [dec] on asic [dec]	Number of ipv6 Prefixes exceeded supported scale	dominica-infra	"Please reduce the number of ipv6 Prefixes" "to scale to platform supported scale"
<del>CFBIRKIPV6IMEXCHD</del>	3-Error	Number of ipv6 Prefixes exceeded allowed limit [dec] on asic [dec]	Number of ipv6 Prefixes exceeded supported scale	rsp3-infra	"Please reduce the number of ipv6 Prefixes" "to scale to platform supported scale"
<del>CFVOCCEMAXRECHD</del>	3-Error	Number of VRF instances exceeded allowed limit [dec]	Number of vrf instances exceeded supported platform scale	firmware	"Please reduce the number of vrf instances" "to scale to platform supported scale"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CHNECFMXXVREXCEED</del>	3-Error	Number of VRF instances exceeded allowed limit [dec]	Number of vrf instances exceeded supported platform scale	firmware	"Please reduce the number of vrf instances" "to scale to platform supported scale"
CHLWAN#COLINIT_FAIL	1-Alert	cellular pool init failed for subslot [dec]/[dec] \ pool name [chars]	The NIM cellular pool init failed for this module.	esg-lte	"show cellular x/x/x all<noCmdBold> command " "and <CmdBold>show tech-support"
<del>CHIMAN#BRCQSDNOF</del>	2-Critical	Instance id=[dec] [chars] bearer bearer_id=[node]QC=[node]n [chars] is NOT congested now	Traffic congestion has cleared in the dedicated bearer	-	"No action is needed"
<del>CHIMAN#BRCQSDNOF</del>	2-Critical	Instance id=[dec] [chars] bearer bearer_id=[node]QC=[node]n [chars] is congested	Traffic congestion present in the dedicated bearer. If it does not clear make sure the host QOS configuration matches the dedicated bearer configuration	-	"Check the MBR of the dedicated bearer by doing show " "cellular and configure the host QOS configuration " "to match MBR of the dedicated bearer."
<del>CHIMAN#BRCQSDNOF</del>	2-Critical	[chars] bearer bearer_id=[node]n [chars] is now deleted.	default/dedicated bearer has been deleted.	-	"Host QOS configuration may need to be deleted" " to match the modem configuration"
CHLWAN#BEARER_DOWN	2-Critical	Instance id=[dec] [chars] bearer bearer_id=[node]QC=[node]n [chars] is now down.	default/dedicated bearer has been deleted.	-	"Host QOS configuration may need to be modified" " to match the modem configuration"
CHLWAN#BEARER_MODIFIED	2-Critical	Instance id=[dec] [chars] bearer bearer_id=[node]QC=[dec] configuration in [chars] is modified	default/dedicated bearer configuration has been modified.	-	"Check the TFT rules of the dedicated bearer by doing" " show cellular and configure the host QOS" " configuration to match the TFT rules"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CELLWAN2BEARERS_SEND	2-Critical	Instance id=[dec] [chars] bearer bearer_id=[node]QCF=[dec] in [chars]	default/dedicated bearer has been suspended.	-	"Host QOS configuration may need to be suspended" " to match the modem configuration"
CELLWAN2BEARER_UP	2-Critical	Instance id=[dec] [chars] bearer bearer_id=[node]QCF=[dec] in [chars] is now UP	default/dedicated bearer has been added.	-	"Check the TFT rules of the dedicated bearer by doing show cellular" " and configure the host QOS configuration to match the TFT rules"
CELLWAN2CALL_SETUP_FAIL	2-Critical	[chars] data call setup failed due to [chars].	Data call setup failed because the IP address configured under cellular interface does not match the IP address assigned by the network	esg-lte	"Please check the IP address configuration under cellular" "interface"
CELLWAN2CRASH_DUMP_SUCCESS	2-Critical	[chars]:Crashdump successfully logged in /bootflash/	Cellular Modem Crashdump files successfully logged to local flash.	esg-lte	""
CELLWAN2DEDICATED_BEARER_UNKNOWN	2-Critical	Instance id=[dec] [chars] bearer bearer_id=[node]QCF=[dec] in [chars] is	Dedicated bearer configuration status is unknown.	-	"Check the TFT rules of the dedicated bearer by doing" " show cellular and report the TFT rules to the " "carrier."
CELLWAN2DM_LOG_FILTER_ERROR	2-Critical	[chars] failed to open [chars] to read DM log filter.	Failed to open filter file from the location configured with 'gsm cdma lte modem dm-log filter' under cellular controller	esg-lte	"Please check that the path configured under cellular " "controller is reachable"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CHVNDMLOGPFILEERR</del>	2-Critical	[chars] failed to open [chars] to archive DM log files.	Saving DM packets to file system failed. Output file URL configured with 'gsm cdma lte modem dm-log output path' under cellular controller can not be opened	esg-lte	"Please check that the path configured under cellular " "controller is reachable"
<del>CHVNDMLOGPFILEL</del>	2-Critical	[chars] DM log file storage is full!	Saving DM packets to file system failed because there is no more space left on the URL configured with 'gsm cdma lte modem dm-log output path' under cellular controller	esg-lte	"Please delete existing log files from the specified URL " "'gsm cdma lte modem dm-log output path' or upload them " "to the server then re-enable logging."
<del>CHVNDMLOGPFILEERR</del>	2-Critical	[chars] failed to write [chars] DM packets to configured file system	Saving DM packets to file system failed because of write error to the URL configured with 'gsm cdma lte modem dm-log output path' under cellular controller	esg-lte	"Please check that the URL configured under cellular " "controller with 'gsm cdma lte modem dm-log output path' " "is reachable and has enough storage space"
<del>CHVNDMLOGPFILEERR</del>	2-Critical	Dying Gasp Feature is not supported in Cellular slot [node]%u	This NIM is not supporting Dying Gasp Feature.	esg-lte	"Please contact TAC for Dying Gasp Feature Supported NIM"
<del>CHVNDMLOGPFILEERR</del>	2-Critical	Dying Gasp SMS will not be sent out by Modem in slot [dec]/[dec] due to standby power failure. Please contact TAC.	Modem doesn't have enough power to send Dying Gasp SMS	esg-lte	"Please contact TAC"
<del>CHVNDMLOGPFILEERR</del>	2-Critical	Modem in slot [dec]/[dec] has sufficient power to send Dying Gasp SMS	Modem has sufficient power to send Dying Gasp SMS	esg-lte	"No action is needed"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CHLWNSM_PROFILE_ND</del>	2-Critical	[[chars]]: Default profile [dec][chars] does not exist. Please execute 'cellular <unit> gsm profile create <profile #>' to create the profile.	Default profile is undefined. the profile does not exist because it is not defined or is deleted.	esg-lte	"show cellular x/x/x all<noCmdBold> command " "and <CmdBold>show tech-support"
<del>CHLWNSM_HRTBATT_MOUT</del>	2-Critical	No heart beat signal from [chars]	The cellular modem is not responding.	esg-lte	"show cellular x/x/x all<noCmdBold> command " "and <CmdBold>show tech-support"
<del>CHLWNSM_IFACE_DOWN</del>	2-Critical	[chars] is being shutdown temporarily due to authentication failure for [dec] secs.	The interface is being shutdown because the call could not be connected due to PPP authentication failures. The interface will be brought up after the specified time. This is to prevent frequent calls being attempted if authentication problems are not fixed.	esg-lte	"show cellular x/x/x all<noCmdBold> command " "and <CmdBold>show tech-support"
<del>CHLWNSM_LINK_RECOVERY</del>	2-Critical	[chars]: Cellular Modem has been power cycled : [chars]	Link Recovery Process has detected an inconsistent state of the modem	-	""
<del>CHLWNSM_IPM_LINK_FAILURE</del>	2-Critical	[chars] direct IP synchronization process fails after [dec] attempts	Direct IP synchronization fails to come up after maximum number of attempts.	esg-lte	"Contact customer service if the problem persists."
<del>CHLWNSM_MODM_DOWNLOAD</del>	2-Critical	\nModem returned following error to Download End Request:[chars]	Modem Firmware Download End Request Failed	esg-lte	"show flash:<noCmdBold> command " "and <CmdBold>show controller cellular x/x/x all"

<del>Facility</del> Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CH1WAN</del> MODNSRIAL	2-Critical	\nModem returned following error to Download Start Request:[chars]	Modem Firmware Download Start Request Failed. It generally means that firmware binary file is wrong.	esg-lte	"show flash:<noCmdBold>command " "and <CmdBold>show controller cellular x/x/x all"
<del>CH1WAN</del> MOFLASH	2-Critical	\nModem returned following error to Flash Program Request:[chars]	Modem failed to launch the new firmware.	esg-lte	"show flash:<noCmdBold>command " "and <CmdBold>show controller cellular x/x/x all"
<del>CH1WAN</del> MOFWINDFL	2-Critical	\nModem returned following error to Download Request:[chars]	Modem Firmware Download Continue Request Failed. It generally means that firmware binary file is corrupt.	esg-lte	"show flash:<noCmdBold>command " "and <CmdBold>show controller cellular x/x/x all"
<del>CH1WAN</del> MODEMDOWN	2-Critical	Modem in slot [dec]/[dec] is DOWN	The cellular modem is not operational.	esg-lte	"show cellular x/x/x all<noCmdBold>command " "and <CmdBold>show tech-support"
<del>CH1WAN</del> MODEMIMOUT	2-Critical	Cellular modem initialization timeout for [chars]	Modem failed to initialize.	esg-lte	LOGSIDSHTTECHACION
<del>CH1WAN</del> MODEMNOTACT	2-Critical	[chars] modem has not been activated	The cellular modem has not been activated by the cellular provider.	esg-lte	"Please check the user documentation on how to activate the modem. " "The cellular modem needs to be activated before it can be used on " "a cellular network."
<del>CH1WAN</del> MODEMRADO	2-Critical	[chars] Modem radio has been turned [chars]	Modem radio has been turned on/off.	esg-lte	"show cellular x/x/x radio command " "and <CmdBold>show tech-support"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CELLWAN2MODEM_TIMEOUT	2-Critical	Modem in [chars] not responding	The cellular modem is not responding.	esg-lte	"show cellular x/x/x all<noCmdBold> command " "and <CmdBold>show tech-support"
CELLWAN2MODEM_COOLDOWN	2-Critical	[chars] modem will be [chars]	Modem radio temperature has reached critical point. The call will be disconnected and the modem could be shutdown.	esg-lte	"Check if the router fans are working properly."
CELLWAN2MODEM_UP	2-Critical	Modem in slot [dec]/[dec] is now UP	The cellular modem is now UP.	esg-lte	"show cellular x/x/x all<noCmdBold> command " "and <CmdBold>show tech-support"
CELLWAN2NC_EVENT1	2-Critical	[chars]: Network change event - fallback from ENDC to LTE.	Modem fallback from ENDC to LTE	esg-lte	"No action"
CELLWAN2NC_EVENT2	2-Critical	[chars]: Network change event - activated 4G Carrier Aggregation.	Modem activated 4G Carrier Aggregation	esg-lte	"No action"
CELLWAN2NC_EVENT3	2-Critical	[chars]: Network change event - activated 5G ENDC.	Modem activated 5G ENDC	esg-lte	"No action"
CELLWAN2NO_PROCESS	2-Critical	Could not start process [chars]	Could not start one of the processes.	esg-lte	"Add more memory."
CELLWAN2OMADM_ACTIVE	2-Critical	[[chars]]: OMA DM [chars] session is active	OMA DM session state is received by modem	esg-lte	"show cellular x/x/x all<noCmdBold> command " "and <CmdBold>show tech-support"
CELLWAN2OMADM_ERROR	2-Critical	[[chars]]: OMA DM [chars] Failed - Error:0x[hec][chars]	OMA DM session state is received by modem	esg-lte	"show cellular x/x/x all<noCmdBold> command " "and <CmdBold>show tech-support"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CHIWAN</del> OMA_DM_HANG	2-Critical	[[chars]]: OMA DM [chars] waiting for retry in [node]seconds	OMA DM session state is received by modem	esg-lte	"show cellular x/x/x all<noCmdBold> command " "and <CmdBold>show tech-support"
<del>CHIWAN</del> OMA_DM_NI_ALERT	2-Critical	[[chars]]: OMA DM NI Alert is received for [chars] \nPlease execute 'cellular <unit> cdma activate oma-dm ni-alert [allow   deny]'	OMA DM Network-Initiated alert is received by modem	esg-lte	"show cellular x/x/x all<noCmdBold> command " "and <CmdBold>show tech-support"
<del>CHIWAN</del> OMA_DM_NOCP	2-Critical	[[chars]]: OMA DM [chars] could not be completed. \nPlease try again later. If the problem persists you may need to contact Customer Service.	OMA DM session state is received by modem	esg-lte	"show cellular x/x/x all<noCmdBold> command " "and <CmdBold>show tech-support"
<del>CHIWAN</del> OMA_DM_NO_PRL	2-Critical	[[chars]]: OMA DM - No PRL update available	OMA DM session state is received by modem	esg-lte	"show cellular x/x/x all<noCmdBold> command " "and <CmdBold>show tech-support"
<del>CHIWAN</del> OMA_DM_SUCCESS	2-Critical	[[chars]]: OMA DM [chars] completed successfully	OMA DM session state is received by modem	esg-lte	"show cellular x/x/x all<noCmdBold> command " "and <CmdBold>show tech-support"
<del>CHIWAN</del> POWER_SAVE_MODE	2-Critical	[[chars]]: is in Power save mode. Command ignored.	radio is currently OFF on this NIM	esg-lte	LOG_STD_ACTION
<del>CHIWAN</del> QoS_ENABLED	2-Critical	QoS Feature in [chars] is now activated	QoS Feature is now enabled and activated in the modem.	-	"QoS Feature is now enabled and activated in the modem."
<del>CHIWAN</del> QoS_NETWORK_STATUS	2-Critical	Network status for QoS feature is [chars] in [chars].	Network status for QoS feature is either enabled or disabled by the carrier.	-	"check with carrier if you expect QoS feature but it is disabled"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CHV1QOSRENTSAUS</del>	2-Critical	QoS Event Status = [dec] for default bearer in [chars] in [chars].	QoS Event Status for default bearer for the cellular interface.	-	"check with carrier to see if the default bearer" " config is changed"
<del>CHV1RSPD_TIMEOUT</del>	2-Critical	[chars] not responding	The cellular modem is not responding.	esg-lte	"show cellular x/x/x all<noCmdBold> command " "and <CmdBold>show tech-support"
<del>CHV1SIM_BLOCKED</del>	2-Critical	[[chars]]: SIM is blocked. PUK is required to unblock the SIM [chars]	SIM is blocked and no data call can be made until it is unblocked using PUK.	esg-lte	"show cellular x/x/x all<noCmdBold> command " "and <CmdBold>show tech-support"
<del>CHV1SIM_VERIFY_FAILED</del>	2-Critical	[[chars]]: CHV1 verification failed [chars] : Incorrect PIN configured. Erased the CHV1 code from router running configuration to avoid SIM blocking during modem reset/powercycle. \n!!!WARNING: If the incorrect PIN is saved in router start-up configuration please remove it manually to avoid SIM blocking during router reload	SIM CHV1 verification failed. Incorrect PIN configured.	esg-lte	"show cellular x/x/x all<noCmdBold> command " "and <CmdBold>show tech-support"
<del>CELLWAN2SIM_FAILURE</del>	2-Critical	[[chars]]: SIM read failed [chars]	If the SIM is not present insert SIM in the SIM socket. If error still persists SIM needs to be replaced.	esg-lte	"show cellular x/x/x all<noCmdBold> command " "and <CmdBold>show tech-support"
<del>CELLWAN2SIM_LOCKED</del>	2-Critical	[[chars]]: SIM is locked [chars]	SIM is locked and no data call can be made till it is unlocked.	esg-lte	"show cellular x/x/x all<noCmdBold> command " "and <CmdBold>show tech-support"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CHIWANESIM_PLOCKED	2-Critical	[[chars]]: Invalid SIM or device locked to carrier [chars]	Invalid SIM or device locked to carrier	esg-lte	"show cellular x/x/x all<noCmdBold> command " "and <CmdBold>show tech-support"
CHIWANESIM_NOT_PRESENT	2-Critical	[[chars]]: SIM is not present in Slot [dec]	SIM has not been detected in the NIM SIM socket	esg-lte	"Insert a valid sim in the NIM SIM socket."
CHIWANESIM_NOT_READY	2-Critical	[chars] Modem is not ready. SIM status may be not current.	SIM access cannot be granted or may return an error when : 1 The modem is not up or during a reset.	esg-lte	"1 Wait till MODEM UP message is seen from the console before accessing SIM."
CHIWANESIM_REJECTED	2-Critical	[[chars]]: SIM rejected by the network [chars]	The SIM is not valid to be used in the network. A new valid SIM needs to be inserted in the SIM socket.	esg-lte	"show cellular x/x/x all<noCmdBold> command " "and <CmdBold>show tech-support"
CHIWANESIM_SECURITY_SHUTDOWN	2-Critical	[[chars]]: CHV1 PIN is configured while SIM is unlocked [chars]. Shutting down all PDP interfaces	CHV1 is configured while SIM is unlocked The SIM is not valid to be used in the network. A new valid locked SIM needs to be inserted in the SIM socket.	esg-lte	"show cellular x/x/x all<noCmdBold> command " "and <CmdBold>show tech-support"
CHIWANESIM_SWITCH_FAILURE	2-Critical	[[chars]]: Failed to switch to SIM slot [dec] !!	Failed to switch to the requested NIM SIM slot	esg-lte	"Examine SIM in the indicated slot"
CHIWANESIM_SMS_ARCHIVE_FAILED	2-Critical	[chars] failed to archive SMS because 'gsm cdma lte sms archive path' under cellular controller is not configured.	'gsm cdma lte sms archive path' under cellular controller must be configured first before background incoming text message archive can function properly	esg-lte	"Configure 'gsm cdma lte sms archive path' under cellular controller"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CHSMS_NEXACT_ERROR</del>	2-Critical	[chars] failed to open [chars] to archive incoming SMS.	Incoming text messages archive to FTP server failed because the FTP URL configured with 'gsm cdma lte sms archive path' under cellular controller can not be opened	esg-lte	"Please check that the FTP server configured under cellular " "controller is reachable and that the directory exists"
<del>CHSMS_NEXACT_ERROR</del>	2-Critical	[chars] failed to write [chars] to archive incoming SMS.	Incoming text messages archive to FTP server failed because of write error to the FTP URL configured with 'gsm cdma lte sms archive path' under cellular controller	esg-lte	"Please check that the FTP server configured under cellular " "controller with 'gsm cdma lte sms archive path' is reachable and " "has enough storage space"
<del>CHSMS_OUTACT_ERROR</del>	2-Critical	[chars] failed to open [chars] to archive an outgoing SMS.	Outgoing text message archive to FTP server failed because the FTP URL configured with 'gsm cdma lte sms archive path' under cellular controller can not be opened	esg-lte	"Please check that the FTP server configured under cellular " "controller is reachable and that the directory exists"
<del>CHSMS_OUTACT_ERROR</del>	2-Critical	[chars] failed to write [chars] to archive an outgoing SMS.	Outgoing text message archive to FTP server failed because of write error to the FTP URL configured with 'gsm cdma lte sms archive path' under cellular controller	esg-lte	"Please check that the FTP server configured under cellular " "controller with 'gsm cdma lte sms archive path' is reachable and " "has enough storage space"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CHMASFCOPIEERR</del>	2-Critical	[chars] failed to open [chars] to archive SVB log files.	Saving SVB packets to file system failed. Output file URL configured with 'gsm cdma lte modem dm-log output path' under cellular controller can not be opened	esg-lte	"Please check that the path configured under cellular " "controller is reachable"
<del>CHMASFCOPIEERR</del>	2-Critical	[chars] SVB log file storage is full!	Saving SVB packets to file system failed because there is no more space left on the URL configured with 'gsm cdma lte modem dm-log output path' under cellular controller	esg-lte	"Please delete existing log files from the specified URL " "'gsm cdma lte modem dm-log output path' or upload them " "to the server then re-enable logging."
<del>CHMASFCOPIEERR</del>	2-Critical	[chars] failed to write [chars] SVB packets to configured file system	Saving SVB packets to file system failed because of write error to the URL configured with 'gsm cdma lte modem dm-log output path' under cellular controller	esg-lte	"Please check that the URL configured under cellular " "controller with 'gsm cdma lte modem dm-log output path' " "is reachable and has enough storage space"
<del>CHMASFCOPIEERR</del>	2-Critical	Unsupported Cellular NIM inserted in slot [node]%u	This NIM is not supported for the current software release	esg-lte	"Please contact TAC for supported software release for this NIM"
<del>CHMASFCOPIEERR</del>	2-Critical	[[chars]]: wcdma-all band not supported	wcdma-all band is not supported by modem or not defined	esg-lte	"show cellular x/x/x all<noCmdBold> command " "and <CmdBold>show tech-support"
<del>CHMASFCOPIEERR</del>	3-Error	memset error when - [chars]	Failed to memset during cellular operation.	esg-lte	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CHWANGSALNDSSN</del>	3-Error	[[chars]] GPS failed to end location fix session - [chars] [0x[hec]] please try again	Modem failed to disable GPS mode due to error indicated. Fix that error and try again.	esg-lte	"Fix error indicated and try disabling GPS again."
<del>CHWANGSALSTRACK</del>	3-Error	[[chars]] GPS failed to start tracking - [chars] [0x[hec]] please try again	Modem failed to enable GPS mode due to error indicated. Fix that error and try again.	esg-lte	"Fix error indicated and try enabling GPS again."
<del>CHWANGSIPICRENFUE</del>	3-Error	[[chars]] GSM profile creation fails - [chars] [0x[hec]] please try again	Modem failed to create the GSM profile due to error indicated. Fix that error and try again.	esg-lte	"Fix error indicated and try creating GSM profile again."
<del>CHWANGHLLRWUSIPED</del>	4-Warning	[chars]: Unsupported or older modem firmware [chars] detected please upgrade modem to supported firmware of at least [chars]	The current firmware on specified cellular interface is not supported. Any actions and errors that occur will not be supported until the fw is upgraded to at least the version requested	esg-lte	"Please upgrade to the latest FW from online using" "'microcode reload'"
<del>CHWANGHLLRWUSIPED</del>	4-Warning	[chars]: Mismatch detected between installed modem [chars][SKU ID [chars]] on SKU type [chars]. Expected modem for this SKU is [chars][SKU ID [chars]]	Incorrect modem type has been installed on this SKU. Any actions and issues caused by it will not be supported	esg-lte	"Please contact the cisco customer service" "to replace the card"
<del>CHWANGDFKICNFAD</del>	4-Warning	Dying Gasp Detach Configuration Failed. [chars]	Dying Gasp Detach Configuration Failed.	-	"Please try Dying Gasp Detach Configuration later"
<del>CHWANGDMSKONCFAD</del>	4-Warning	Dying Gasp SMS Configuration Failed. [chars]	Dying Gasp SMS Configuration Failed.	-	"Please try Dying Gasp SMS Configuration later"

<del>Facility-Severity-Mnemonic</del>	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CHMANNAIPMSICMHE</del>	4-Warning	Manual/Force PLMN Selection Failed. [chars]	Manual/Force PLMN Selection Failed	-	"Please use Different PLMN or check number of MNC Bits " "in PLMN Selection"
<del>CHIVANMODMCOMMFL</del>	4-Warning	Communication between Modem and IOS failed: [chars]	Communication between Modem and IOS Failed	-	" Modem Reset will recover "
<del>CHIVANMODMREPRIND</del>	4-Warning	[chars] Modem restart [chars]	Modem Restart Indication	-	"No action is needed"
<del>CHIVANUCGCSMSBRRC</del>	4-Warning	[chars] failed to send an outgoing SMS.	Outgoing text message failed to send from cellular interface	esg-lte	"Please do 'show cellular <unit> sms' to see " "error code"
<del>CHIVANUCGCSMSBRUAL</del>	4-Warning	[chars] can't send an SMS because SMS service is not available.	Text message service is not available on specified cellular interface	esg-lte	"Check modem is powered up radio is not in power " "saving mode and SIM is inserted"
<del>CHIVANUCGCSMSBRUAE</del>	5-Notice	[chars]: DM logging autostop timer canceled	DM logging autostop timer is canceled	esg-lte	LOG_SID_NO_ACTION
<del>CHIVANUCGCSMSBRUEX</del>	5-Notice	[chars]: DM logging stopped	DM logging is stopped due to autostop trigger timer expiry	esg-lte	LOG_SID_NO_ACTION
<del>CHIVANUCGCSMSBRUGR</del>	5-Notice	[chars]: DM logging will be stopped in [dec] [chars] autostop trigger event [chars] set	DM log autostop trigger event configured DM logging will be stopped after the timer expiry	esg-lte	LOG_SID_NO_ACTION
<del>CHIVANUCGCSMSBRUECR</del>	5-Notice	[chars]: OIR Detected. DM logging stopped	DM logging is stopped due to OIR	esg-lte	LOG_SID_NO_ACTION
<del>CHIVANUCGCSMSBRUEXN</del>	5-Notice	DM log output path = bootflash:/core/modules	DM log output path set to bootflash:/core/modules	esg-lte	""
<del>CHIVANUCGCSMSBRUEXRE</del>	5-Notice	DM log output path = bootflash:	DM log output path set to bootflash:/	esg-lte	""

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CHLWANSFWRESWICH	5-Notice	Firmware switchover initiated for modem in slot [dec]/[dec]	Firmware switchover caused by user request.	esg-lte	LOG_SID_NO_ACTION
CHLWANSINCMNGSMS	5-Notice	[chars] has just received new incoming SMS.	New incoming text messages arrived at cellular interface	esg-lte	"Please do 'cellular <unit> gsm cdma sms view' to read SMS"
CHLWANSMNO_SWICH	5-Notice	MNO switchover initiated for modem in slot [dec]/[dec]	MNO switchover caused by user request.	esg-lte	LOG_SID_NO_ACTION
CHLWANSMDMBOREADY	5-Notice	Modem in slot [dec]/[dec] is in Boot Ready Mode.. Please perform FW upgrade	The cellular modem is not operational.	esg-lte	"show cellular x/x/x all<noCmdBold> command " "and <CmdBold>show tech-support"
CHLWANSNULL_BEARER	5-Notice	NULL Bearer Timer [chars]:Current NULL Bearer count:[dec]:Total NULL Bearer count:[dec]:Profile id:[dec]:PDN ID:[dec]	NULL Bearer notification from modem. No action is required	esg-lte	LOG_SID_NO_ACTION
CHLWANSOUTGOING_SMS_SENT	5-Notice	[chars] has just sent an outgoing SMS successfully.	Outgoing text message was sent successfully from cellular interface	esg-lte	LOG_SID_NO_ACTION
CHLWANSSIM_ACQ_TIMOUT	5-Notice	[[chars]]: SIM slot [dec] Acquisition Timer timeout !!	Timeout on the SIM slot acquisition timer initiate sim switching request to the alter SIM slot	esg-lte	LOG_SID_NO_ACTION
CHLWANSSIM_ACTIVATION	5-Notice	[[chars]]: SIM slot [dec] is being activated !!	The request to activate the indicated SIM slot has been sent to the modem	esg-lte	LOG_SID_NO_ACTION
CHLWANSSIM_ACTIVATION_TIMOUT	5-Notice	[[chars]]: SIM slot [dec] activation request timeout !!	Timeout on the request sent to the modem to activate the indicated SIM slot	esg-lte	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CELLWAN5SIM_ACTIVE	5-Notice	[[chars]]: SIM slot [dec] is Active !!	The indicated SIM slot is active.	esg-lte	LOG_SID_NO_ACTION
CELLWAN5SIM_DETECT_COMPLETE	5-Notice	[[chars]]: SIM presence detection has completed !!	SIM presence detection has completed	esg-lte	LOG_SID_NO_ACTION
CELLWAN5SIM_DETECT_START	5-Notice	[[chars]]: SIM presence detection starts !!	SIM presence detection has started	esg-lte	LOG_SID_NO_ACTION
CELLWAN5SIM_FAILOVER_TIMEOUT	5-Notice	[[chars]]: SIM slot [dec] Failover Timer timeout !!	Timeout on the SIM slot failover timer initiate sim switching request to the alter SIM slot	esg-lte	LOG_SID_NO_ACTION
CELLWAN5SMS_IN_ARCHIVE	5-Notice	[chars] has just archived all incoming SMS to FTP server successfully.	Incoming text messages were archived to FTP server successfully from cellular interface	esg-lte	LOG_SID_NO_ACTION
CELLWAN5SMS_IN_ARCHIVE	5-Notice	[chars] has just archived an incoming SMS to FTP server successfully.	An incoming text message was archived to FTP server successfully from cellular interface	esg-lte	LOG_SID_NO_ACTION
CELLWAN5SMS_OUT_ARCHIVE	5-Notice	[chars] has just archived an outgoing SMS to FTP server successfully.	An outgoing text message was archived to FTP server successfully from cellular interface	esg-lte	LOG_SID_NO_ACTION
CELLWAN5SMS_SERVICE_AVAILABLE	5-Notice	[chars] SMS service is now available.	You can send and receive text messages on this cellular interface	esg-lte	LOG_SID_NO_ACTION
CELLWAN5SMS_SERVICE_UNAVAILABLE	5-Notice	[chars] SMS service is now unavailable.	You can not send and receive text messages on this cellular interface	esg-lte	LOG_SID_NO_ACTION
CELLWAN5SVB_LOGGING_AUTOSTOP_TIMER_CANCELED	5-Notice	[chars]: SVB logging autostop timer canceled	SVB logging autostop timer is canceled	esg-lte	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CHMANHLOGAUTSTOPERR</del>	5-Notice	[chars]: SVB logging stopped	SVB logging is stopped due to autostop trigger timer expiry	esg-lte	LOG_SID_NO_ACTION
<del>CHMANHLOGAUTSTOPHGR</del>	5-Notice	[chars]: SVB logging will be stopped in [dec] minutes autostop trigger event [chars] set	SVB log autostop trigger event configured SVB logging will be stopped after the timer expiry	esg-lte	LOG_SID_NO_ACTION
<del>CHMANHCELLARBACKOFFERR</del>	6-Information	[chars]: Cellular back-off has started on PDN [dec]	Back off has started because of certain error codes from network side	-	""
<del>CHMANHCELLARBACKOFFHGR</del>	6-Information	[chars]: Cellular back-off has stopped on PDN [dec]	Back off has stopped	-	""
<del>CHMANHCELLARBACKOFFERR</del>	6-Information	[chars]: Cellular network attachment failure. Reject Cause [dec] [chars].	Network attachment failure	-	"Check 3GPP Table 10.5.95/3GPP TS 24.008 for information"
<del>CHMANHCELLARBACKOFFERR</del>	6-Information	[[chars]]: Firmware has been downloaded for modem in cellular slot [dec]/[dec]	FOTA Cellular modem firmware download started.	esg-lte	""
<del>CHMANHCELLARBACKOFFERR</del>	6-Information	[[chars]]: Firmware download started in cellular slot [dec]/[dec]	FOTA Cellular modem firmware download started.	esg-lte	""
<del>CHMANHCELLARBACKOFFERR</del>	6-Information	[[chars]]: Firmware upgrade started in cellular slot [dec]/[dec]. Modem will reset and come up with new firmware.	FOTA Cellular modem firmware upgraded started.	esg-lte	""
<del>CHMANHCELLARBACKOFFERR</del>	6-Information	[[chars]]: Firmware upgrade successful in cellular slot [dec]/[dec]	FOTA Cellular modem firmware upgraded successfully.	esg-lte	""

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CELWAN6CUPROEMOT	6-Information	[[chars]]: Firmware upgrade timed out in cellular slot [dec]/[dec]	FOTA Cellular modem firmware upgrade timed out.	esg-lte	""
CELWAN6SIMINSERIED	6-Information	[[chars]]: SIM in slot [dec] has been \n\n inserted	SIM is inserted to the slot.	esg-lte	"No action"
CELWAN6SIMPRESENT	6-Information	[[chars]]: SIM is present in Slot [dec]	SIM has been detected in the SIM socket	esg-lte	"No action"
CELWAN6SIMREMOVED	6-Information	[[chars]]: WARNING: SIM in slot [dec] has \n\n been removed	SIM is removed from the slot.	esg-lte	"No action"
CEMASMDEFWUPD	6-Information	[[chars]]: Update SNMP modem firmware version from [chars] to [chars] !	Update modem firmware version on the SNMP modem physical entity	esg-lte	LOG_SID_NO_ACTION
CEM4ISSU_NOMEMORY	1-Alert	msgtxt_nomemory	The requested operation could not be accomplished because of a low\n\n memory condition.	cemcommon	"Reduce other system activity to ease memory demands. If conditions\n\n warrant upgrade to a larger memory configuration."
CEM3ISSU_SENDFAILED	3-Error	\nCEM ISSU: send message failed rc = [dec]\n	The sending of a message has failed.	cemcommon	LOG_SID_SH_TECH_ACTION
CEM4IIRC_SUNSUPRIED	4-Warning	Interface [chars]: [dec] With CAS enabled in LOTR-IM\n	With CAS enabled in LOTR-IM Configured De-jitter will be ignored and Calculated De-jitter based on the configured payload is used	cemcommon	"This is an informational message only. No action is required"
CEM4ISSU_INCOMPABLE	4-Warning	\ncem-issu-compat: returned FALSE	The compatibility checking has failed	cemcommon	LOG_SID_SH_TECH_ACTION
CEM4ISSU_XFORM	4-Warning	\n[chars]: failed rc=[chars]	The transform has failed.	cemcommon	LOG_SID_SH_TECH_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CEM-4-UNDERRUN	4-Warning	[chars] [dec] with 64kbps speed configured under SERIAL controller Underrun will be seen with no traffic impact. User can change Dejitter to 9 to avoid Underrun.	With CEM under SERIAL controller and clock rate 64kbps\n Underrun will be observed without any traffic impact.\n User need to change the Dejitter value to 9 to avoid Underrun	asr900-im-serial	"User action is required to modify the Dejitter value to 9. Please refer the Cisco guide"
CEMA3AIMVC_CONFIG_FAIL	3-Error	[chars]: connection configuration failed for VC [node][node][chars]	A failure occurred when sending a VC configuration command.	-	CEMA_CMD_FAIL_ACTION
CEMA3AIMVP_CONFIG_FAIL	3-Error	[chars]: connection configuration failed for VP [node][chars]	A failure occurred when sending a VP configuration command.	-	CEMA_CMD_FAIL_ACTION
CEMA3CARDTYPE_CONFIG_FAIL	3-Error	[chars]: card type configuration failed [chars]	A failure occurred when sending a card type configuration command.	-	CEMA_CMD_FAIL_ACTION
CEMA3CEMA_ADD_FAIL	3-Error	[chars]: CEMA SB addition failed for interface [chars]	A failure occurred when adding cema_sb to the interface shown in the error message.	-	SPA_CEMA_FAIL_ACTION
CEMA3CLEAR_CNCDNS_FAIL	3-Error	[chars]: clear connection stats failed [chars]	A failure occurred when sending a clear connection stats command.	-	CEMA_CMD_FAIL_ACTION
CEMA3CLEAR_INTERFACE_STATS_FAIL	3-Error	[chars]: clear interface stats failed [chars]	A failure occurred when sending a clear interface stats command.	-	CEMA_CMD_FAIL_ACTION
CEMA3CONNCD_DELETE_FAIL	3-Error	[chars]: connection delete failed [chars]	A failure occurred when sending a connection delete command.	-	CEMA_CMD_FAIL_ACTION
CEMA3INTERFACE_CONFIG_FAIL	3-Error	[chars]: interface configuration failed [chars]	A failure occurred when sending an interface delete command.	-	CEMA_CMD_FAIL_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CEMINTERFACEDELETE	3-Error	[chars]: interface delete failed [chars]	A failure occurred when sending an interface delete command.	-	CEM_CMD_FAIL_ACTION
CEMOUDP_NP_CLIENT_ERROR	3-Error	[chars]	CEMOUDP NP Client failed to initialize properly which will result in improper operation of cemoudp feature	vsp-mid	"Try to reload the IOS image on the affected card or platform. If the error persists record the output from the following commands: <del>&lt;Bulleted list&gt;</del> show tech show log Provide this information to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CEMOUDPCLIENTNOEM	3-Error	[chars]	CEMOUDP NP Client failed to initialize properly which will result in improper operation of cemoudp feature	vsp-mid	"This error may indicate that more memory must be installed on the affected card or platform in order to service all the features and related entities enabled via the configuration. Try to reload the IOS image on the affected card or platform. If the error persists record the output from the following commands: <ul style="list-style-type: none"> <li>&lt;Bulleted&gt; show tech</li> <li>&lt;Bulleted&gt; show log</li> </ul> Provide this information to your technical support representative."
CEMOUDPCLIENTWARN	4-Warning	[chars] [dec] [chars]	CEMOUDP Entry could not be added because: 1. Entry passed is invalid.	vsp-mid	"Try to reload the IOS image on the affected card or platform. If the error persists record the output from the following commands: <ul style="list-style-type: none"> <li>&lt;Bulleted&gt; show tech</li> <li>&lt;Bulleted&gt; show log</li> </ul> Provide this information to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CENT-2-IPC_INIT	2-Critical	IPC message handler registration failure rc %u	Registering an IPC message handler for the CENT feature failed. This will cause the feature to not function.	qfp-cent	"This is normally a software issue. " "The consequences are that the CENT feature will not function. " LOG_STD_ACTION
CENT-3-FO_OVERWRITTEN	3-Error	FO overwritten detected: magic [hec] table_id [hec] next_hop [hec]	Cisco internal software error. The dataplane was unable to complete enqueueing a packet. This is likely due to a data initialization error	cpp-ucodekeyword:cent	LOG_STD_ACTION
CENT-3-IPC_NORES	3-Error	No space for the IPC reply size %u	For a request from upper CENT software stack layers it was not possible to allocate space for a reply for the specified size. The consequence of this could be a stuck monitor that cannot be established etc. In rare cases this could also affect other operations such as feature activation.	qfp-cent	"This is normally a software issue. " LOG_SID_RECUR_ACTION
CENT-3-IPC_OPEN_REPLY	3-Error	IPC Open Reply failed request %u	For a request from upper CENT software stack layers it was not possible to open the reply buffer. The consequence of this could be a stuck monitor that cannot be established etc. In rare cases this could also affect other operations such as feature activation.	qfp-cent	"This is normally a software issue. " LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CERF-2-ABORT	2-Critical	[chars]	This message is emitted when a cache error has occurred but an attempt to recover has been aborted	-	"Copy the error message exactly as it appears and report it to your technical support representative."
CERF-3-RECOVER	3-Error	[chars]	This message is emitted when there has been a full recovery after a cache error	-	"Copy the error message exactly as it appears and report it to your technical support representative."
CERM4DP_RX_BW_LIMIT	4-Warning	Maximum Rx Bandwidth limit of [dec] Kbps reached for Crypto functionality with securityk9 technology package license.	Maximum Rx Bandwidth limit reached for Crypto functionality with securityk9 technology package license.	esg-ipsec	"Obtain 'hseck9' feature license and install it."
CERM4DP_TX_BW_LIMIT	4-Warning	Maximum Tx Bandwidth limit of [dec] Kbps reached for Crypto functionality with securityk9 technology package license.	Maximum Tx Bandwidth limit reached for Crypto functionality with securityk9 technology package license.	esg-ipsec	"Obtain 'hseck9' feature license and install it."
CERM4SM_DP_RX_BW_LIMIT	4-Warning	Maximum TLS Rx Bandwidth limit of [dec] Kbps reached.	Maximum TLS Rx Bandwidth limit reached for Crypto functionality.	qfp-sslvpn	""
CERM4SM_DP_TX_BW_LIMIT	4-Warning	Maximum TLS Tx Bandwidth limit of [dec] Kbps reached.	Maximum TLS Tx Bandwidth limit reached for Crypto functionality.	qfp-sslvpn	""
CERM4RX_BW_LIMIT	4-Warning	Maximum Rx Bandwidth limit of [dec] Kbps reached for Crypto functionality with securityk9 technology package license.	Maximum Rx Bandwidth limit reached for Crypto functionality with securityk9 technology package license.	c2900	"Obtain 'hseck9' feature license and install it."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CERM4TLS_SESSION_LIMIT	4-Warning	Maximum TLS session limit of [dec] reached for Crypto functionality with \ securityk9 technology package license.	Maximum TLS session limit reached for Crypto functionality with \ securityk9 technology package license.	c2900	"Obtain 'hseck9' feature license and install it."
CERM4TUNNEL_LIMIT	4-Warning	Maximum tunnel limit of [dec] reached for Crypto functionality with \ securityk9 technology package license.	Maximum tunnel limit reached for Crypto functionality with securityk9 \ technology package license.	c2900	"Obtain 'hseck9' feature license and install it."
CERM4TX_BW_LIMIT	4-Warning	Maximum Tx Bandwidth limit of [dec] Kbps reached for Crypto functionality \ with securityk9 technology package license.	Maximum Tx Bandwidth limit reached for Crypto functionality with \ securityk9 technology package license.	c2900	"Obtain 'hseck9' feature license and install it."
<del>CERM4CERTGENERR</del>	3-Error	ewlc-ap	General error:[chars]	General cert mgr lib error message	LOG_STD_ACTION
<del>CERM4CERTVALERR</del>	3-Error	ewlc-ap	Certificate Validation Error	-	-
<del>CERM4CAUNGENERR</del>	3-Error	ewlc-ap	LSC CA certificate not generated with CA flag true	LSC CA certificate not generated with CA flag true	LOG_STD_ACTION
<del>CERM4CERTSVALERR</del>	3-Error	ewlc-ap	FIPS Compliance:[chars]	General cert mgr lib error message	LOG_STD_ACTION
<del>CERM4CERTSVALERR</del>	3-Error	ewlc-ap	IPC Respone Error	-	-
<del>CERM4SVACUPERR</del>	3-Error	ewlc-ap	Failed to send WLAN CC (Commit Criteria) update to PKI IOSd due to database error	General Wireless LAN Controller Error Message.	LOG_STD_ACTION
<del>CERM4CERTMVRNG</del>	4-Warning	ewlc-ap	Warning	-	-
<del>CERM4CERTSVALERR</del>	6-Information	ewlc-ap	FIPS Compliance:[chars]	General cert mgr lib error message	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CES2INTERNAL_CRITICAL	2-Critical	[chars]	The CES subsystem encountered an internal software error. The error message contains text which can be used to help identify the nature of the problem.	-	LOG_SIDSH_TECH_ACTION
CES3INTERNAL_ERROR	3-Error	[chars]	The CES subsystem encountered an internal software error. The error message contains text which can be used to help identify the nature of the problem.	-	LOG_SIDSH_TECH_ACTION
CES4INTERNAL_WARNING	4-Warning	[chars]	The CES subsystem encountered an internal software error. The error message contains text which can be used to help identify the nature of the problem.	-	LOG_SIDSH_TECH_ACTION
<del>CFC3INTERNAL_WARNING</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>CFC3INTERNAL_WARNING</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
CFC_LISP-3-ADJ	3-Error	Request to [chars] adjacency [chars][chars]	An internal software error occurred.	CFC_LISP_MGDDISCOMP	LOG_STD_ACTION
CFC_LISP-3-ADJ	3-Error	Request to [chars] adjacency [chars][chars]	An internal software error occurred.	CFC_LISP_MGDDISCOMP	LOG_STD_ACTION
CFC_LISP-3-ADJ_SEQ	3-Error	Adjacency [chars] is still complete after interface shutdown	An internal software error occurred.	CFC_LISP_MGDDISCOMP	LOG_STD_ACTION
CFC_LISP-3-ADJ_SEQ	3-Error	Adjacency [chars] is still complete after interface shutdown	An internal software error occurred.	CFC_LISP_MGDDISCOMP	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CFC_LISP3-ALLOCATEFAIL	3-Error	Failed to allocate memory for [chars]	An internal software error occurred. This is probably because not enough memory was available.	CFC_LISP3-MGDDISCOMP	LOG_STD_ACTION
CFC_LISP3-ALLOCATEFAIL	3-Error	Failed to allocate memory for [chars]	An internal software error occurred. This is probably because not enough memory was available.	CFC_LISP3-MGDDISCOMP	LOG_STD_ACTION
CFC_LISP3-BG_PROCESS	3-Error	Background process failed to [chars]	An internal software error occurred.	CFC_LISP3-MGDDISCOMP	LOG_STD_ACTION
CFC_LISP3-BG_PROCESS	3-Error	Background process failed to [chars]	An internal software error occurred.	CFC_LISP3-MGDDISCOMP	LOG_STD_ACTION
CFC_LISP3-DECAP_OCE	3-Error	Failed to [chars] LISP decapsulation OCE: [chars][chars]	An operation dealing with a LISP decapsulation OCE encountered an error. The error message will indicate which operation failed and the address-family context.	CFC_LISP3-MGDDISCOMP	LOG_STD_ACTION
CFC_LISP3-DECAP_OCE	3-Error	Failed to [chars] LISP decapsulation OCE: [chars][chars]	An operation dealing with a LISP decapsulation OCE encountered an error. The error message will indicate which operation failed and the address-family context.	CFC_LISP3-MGDDISCOMP	LOG_STD_ACTION
CFC_LISP3-DEP_ELEM	3-Error	Request to [chars] dependency [chars]	An internal software error occurred.	CFC_LISP3-MGDDISCOMP	LOG_STD_ACTION
CFC_LISP3-DEP_ELEM	3-Error	Request to [chars] dependency [chars]	An internal software error occurred.	CFC_LISP3-MGDDISCOMP	LOG_STD_ACTION
CFC_LISP3-DEPRECATED_API	3-Error	Use of a deprecated API [chars][chars]	-	CFC_LISP3-MGDDISCOMP	"Increase the MTU of the path to the remote RLOC"
CFC_LISP3-DEPRECATED_API	3-Error	Use of a deprecated API [chars][chars]	-	CFC_LISP3-MGDDISCOMP	"Increase the MTU of the path to the remote RLOC"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CCIPDNEPADRCONIC	3-Error	Ignore dynamic EID detection due to IP Address conflict [chars]:[chars] on [chars]	A dynamic EID Host attempted to register with an IP address conflicting with the XTR gateway. Refer to error message log for more details.	CCIPM8GDDISCOMP	LOG_STD_ACTION
CCIPDNEPADRCONIC	3-Error	Ignore dynamic EID detection due to IP Address conflict [chars]:[chars] on [chars]	A dynamic EID Host attempted to register with an IP address conflicting with the XTR gateway. Refer to error message log for more details.	CCIPM8GDDISCOMP	LOG_STD_ACTION
CFC_LISP-3-ELIG_OCE	3-Error	Failed to [chars] LISP eligibility oce [chars][chars]	An internal software error occurred.	CCIPM8GDDISCOMP	LOG_STD_ACTION
CFC_LISP-3-ELIG_OCE	3-Error	Failed to [chars] LISP eligibility oce [chars][chars]	An internal software error occurred.	CCIPM8GDDISCOMP	LOG_STD_ACTION
CCIP3IRE_WIH_DHS	3-Error	Request to remove dependency sb on [chars] with dependents	An internal software error occurred.	CCIPM8GDDISCOMP	LOG_STD_ACTION
CCIP3IRE_WIH_DHS	3-Error	Request to remove dependency sb on [chars] with dependents	An internal software error occurred.	CCIPM8GDDISCOMP	LOG_STD_ACTION
CFC_LISP-3-GSMR	3-Error	Failed to [chars] generalised SMR attribute for [chars]/%u	An internal software error occurred.	CCIPM8GDDISCOMP	LOG_STD_ACTION
CFC_LISP-3-GSMR	3-Error	Failed to [chars] generalised SMR attribute for [chars]/%u	An internal software error occurred.	CCIPM8GDDISCOMP	LOG_STD_ACTION
CCIP3INVALID_INPU	3-Error	Invalid input [chars] to [chars]	An internal software error occurred.	CCIPM8GDDISCOMP	LOG_STD_ACTION
CCIP3INVALID_INPU	3-Error	Invalid input [chars] to [chars]	An internal software error occurred.	CCIPM8GDDISCOMP	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CFC_LISP-3-IPL_SRC	3-Error	Failed to [chars] IPL source [chars] [chars]/[node]chars]	An internal software error occurred.	CFC_LISP_MGDDISCOMP	LOG_STD_ACTION
CFC_LISP-3-IPL_SRC	3-Error	Failed to [chars] IPL source [chars] [chars]/[node]chars]	An internal software error occurred.	CFC_LISP_MGDDISCOMP	LOG_STD_ACTION
CFC_LISP-3-ISSU_NEGO_ERR	3-Error	Failed to negotiate [chars] for XDR client [chars] error [chars]	An internal software error occurred.	CFC_LISP_MGDDISCOMP	LOG_STD_ACTION
CFC_LISP-3-ISSU_NEGO_ERR	3-Error	Failed to negotiate [chars] for XDR client [chars] error [chars]	An internal software error occurred.	CFC_LISP_MGDDISCOMP	LOG_STD_ACTION
CFC_LISP-3-ISSU_REG_ERR	3-Error	Failed to register [chars] for ISSU client [chars] [node]entity [node]error [chars]	-	-	-
CFC_LISP-3-ISSU_REG_ERR	3-Error	Failed to register [chars] for ISSU client [chars] [node]entity [node]error [chars]	-	-	-
CFC_LISP-3-ISSU_XFORM_ERR	3-Error	Failed to ISSU transform XDR message [chars] error [chars]	An internal software error occurred.	CFC_LISP_MGDDISCOMP	LOG_STD_ACTION
CFC_LISP-3-ISSU_XFORM_ERR	3-Error	Failed to ISSU transform XDR message [chars] error [chars]	An internal software error occurred.	CFC_LISP_MGDDISCOMP	LOG_STD_ACTION
CFC_LISP-3-LOCAL_EID	3-Error	Failed to [chars] local EID prefix [chars]/%u	An internal software error occurred.	CFC_LISP_MGDDISCOMP	LOG_STD_ACTION
CFC_LISP-3-LOCAL_EID	3-Error	Failed to [chars] local EID prefix [chars]/%u	An internal software error occurred.	CFC_LISP_MGDDISCOMP	LOG_STD_ACTION
CFC_LISP-3-NO_ADJ	3-Error	Failed to find adjacency for [chars] [chars] [chars] %u	An internal software error occurred.	CFC_LISP_MGDDISCOMP	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CFC_LISP-3-NO_ADJ	3-Error	Failed to find adjacency for [chars] [chars] [chars] %u	An internal software error occurred.	CFC_LISP_MGDDISCOMP	LOG_STD_ACTION
CFC_LISP-3-NO_FIBIDB	3-Error	Failed to find fibidb for [chars] [chars]	An internal software error occurred.	CFC_LISP_MGDDISCOMP	LOG_STD_ACTION
CFC_LISP-3-NO_FIBIDB	3-Error	Failed to find fibidb for [chars] [chars]	An internal software error occurred.	CFC_LISP_MGDDISCOMP	LOG_STD_ACTION
CFC_LISP-3-NO_PATH	3-Error	Failed to resolve path type for [chars]:[chars]	An internal software error occurred.	CFC_LISP_MGDDISCOMP	LOG_STD_ACTION
CFC_LISP-3-NO_PATH	3-Error	Failed to resolve path type for [chars]:[chars]	An internal software error occurred.	CFC_LISP_MGDDISCOMP	LOG_STD_ACTION
CFC_LISP-3-NO_SB	3-Error	Failed to find subblock for [chars]	An internal software error occurred.	CFC_LISP_MGDDISCOMP	LOG_STD_ACTION
CFC_LISP-3-NO_SB	3-Error	Failed to find subblock for [chars]	An internal software error occurred.	CFC_LISP_MGDDISCOMP	LOG_STD_ACTION
CFC_LISP-3-NO_TABLE	3-Error	Failed to find table for [chars]	An internal software error occurred.	CFC_LISP_MGDDISCOMP	LOG_STD_ACTION
CFC_LISP-3-NO_TABLE	3-Error	Failed to find table for [chars]	An internal software error occurred.	CFC_LISP_MGDDISCOMP	LOG_STD_ACTION
CFC_LISP-3-NO_VIF	3-Error	Unable to find [chars]virtual interface [chars]	An internal software error occurred.	CFC_LISP_MGDDISCOMP	LOG_STD_ACTION
CFC_LISP-3-NO_VIF	3-Error	Unable to find [chars]virtual interface [chars]	An internal software error occurred.	CFC_LISP_MGDDISCOMP	LOG_STD_ACTION
CFC_LISP-3-PUSH_CNIR	3-Error	Failed to [chars] push counter for [chars][chars]	An internal software error occurred.	CFC_LISP_MGDDISCOMP	LOG_STD_ACTION
CFC_LISP-3-PUSH_CNIR	3-Error	Failed to [chars] push counter for [chars][chars]	An internal software error occurred.	CFC_LISP_MGDDISCOMP	LOG_STD_ACTION
CFC_LISP-3-REMOTE_EID	3-Error	Failed to [chars] remote EID prefix [chars]/[node]chars]	An internal software error occurred.	CFC_LISP_MGDDISCOMP	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CFC_LISP3REMOTE_EID	3-Error	Failed to [chars] remote EID prefix [chars]/[node]chars]	An internal software error occurred.	FCISPMSGDDISCOMP	LOG_STD_ACTION
CFC_LISP3REMOTE_EID_RPK	3-Error	Failed to [chars] remote EID prefix [chars][chars]	An internal software error occurred.	FCISPMSGDDISCOMP	LOG_STD_ACTION
CFC_LISP3REMOTE_EID_RPK	3-Error	Failed to [chars] remote EID prefix [chars][chars]	An internal software error occurred.	FCISPMSGDDISCOMP	LOG_STD_ACTION
CFC_LISP3RLOC_VRF_NUSE	3-Error	RLOC vrfid [node]already in use by user [chars] top-id [node]cannot assign to top-id %u	An internal software error occurred.	FCISPMSGDDISCOMP	LOG_STD_ACTION
CFC_LISP3RLOC_VRF_NUSE	3-Error	RLOC vrfid [node]already in use by user [chars] top-id [node]cannot assign to top-id %u	An internal software error occurred.	FCISPMSGDDISCOMP	LOG_STD_ACTION
CFC_LISP3SUBBLOCK_FAILD	3-Error	Failed to [chars] subblock on [chars]	An internal software error occurred.	FCISPMSGDDISCOMP	LOG_STD_ACTION
CFC_LISP3SUBBLOCK_FAILD	3-Error	Failed to [chars] subblock on [chars]	An internal software error occurred.	FCISPMSGDDISCOMP	LOG_STD_ACTION
CFC_LISP-3-SBINIT	3-Error	Error initializing [chars] subblock data structure. [chars]	Initialization of the specified subblock data structure could not be accomplished.	FCISPMSGDDISCOMP	LOG_STD_ACTION
CFC_LISP-3-SBINIT	3-Error	Error initializing [chars] subblock data structure. [chars]	Initialization of the specified subblock data structure could not be accomplished.	FCISPMSGDDISCOMP	LOG_STD_ACTION
CFC_LISP3SIGNAL_OCE	3-Error	Failed to [chars] LISP signal OCE [chars][chars]	An internal software error occurred.	FCISPMSGDDISCOMP	LOG_STD_ACTION
CFC_LISP3SIGNAL_OCE	3-Error	Failed to [chars] LISP signal OCE [chars][chars]	An internal software error occurred.	FCISPMSGDDISCOMP	LOG_STD_ACTION
CFC_LISP3SRC_RLOC_IDX	3-Error	[chars] source RLOC index database[chars]	An internal software error occurred.	FCISPMSGDDISCOMP	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CFC_LISP3SRC_RLOC_IDX	3-Error	[chars] source RLOC index database[chars]	An internal software error occurred.	CFC_LISP_MGDDISCOMP	LOG_STD_ACTION
CFC_LISP3TABLE_BIND	3-Error	Error setting [chars] table [chars] for top-id [node]iid [node][chars][chars]	An internal software error occurred.	CFC_LISP_MGDDISCOMP	LOG_STD_ACTION
CFC_LISP3TABLE_BIND	3-Error	Error setting [chars] table [chars] for top-id [node]iid [node][chars][chars]	An internal software error occurred.	CFC_LISP_MGDDISCOMP	LOG_STD_ACTION
CFC_LISP3TABLE_CONFLICT	3-Error	Conflicting LISP config for top-id [node]iid [node][chars]	An internal software error occurred.	CFC_LISP_MGDDISCOMP	LOG_STD_ACTION
CFC_LISP3TABLE_CONFLICT	3-Error	Conflicting LISP config for top-id [node]iid [node][chars]	An internal software error occurred.	CFC_LISP_MGDDISCOMP	LOG_STD_ACTION
CFC_LISP3TABLE_STATE	3-Error	Error setting state for table [chars] to top-id [node]iid [node]role [chars] [chars][chars]	An internal software error occurred.	CFC_LISP_MGDDISCOMP	LOG_STD_ACTION
CFC_LISP3TABLE_STATE	3-Error	Error setting state for table [chars] to top-id [node]iid [node]role [chars] [chars][chars]	An internal software error occurred.	CFC_LISP_MGDDISCOMP	LOG_STD_ACTION
CFC_LISP3TERM_ADJ	3-Error	Terminal adjacency [chars][chars][chars]	An internal software error occurred.	CFC_LISP_MGDDISCOMP	LOG_STD_ACTION
CFC_LISP3TERM_ADJ	3-Error	Terminal adjacency [chars][chars][chars]	An internal software error occurred.	CFC_LISP_MGDDISCOMP	LOG_STD_ACTION
CFC_LISP3MSIA_PCR_LKT	3-Error	Failed to timestamp LISP control packet	An internal software error occurred.	CFC_LISP_MGDDISCOMP	LOG_STD_ACTION
CFC_LISP3MSIA_PCR_LKT	3-Error	Failed to timestamp LISP control packet	An internal software error occurred.	CFC_LISP_MGDDISCOMP	LOG_STD_ACTION
CFC_LISP3RCHD_HA_HB	3-Error	Tree [chars] failed for [chars] [chars]	An internal software error occurred.	CFC_LISP_MGDDISCOMP	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FCIS3IRECPALDIBB	3-Error	Tree [chars] failed for [chars] [chars]	An internal software error occurred.	FCISPMGDDISCOMP	LOG_STD_ACTION
FCIS3IRECPALD	3-Error	Tree [chars] failed for iid [node] under top_id %u	An internal software error occurred.	FCISPMGDDISCOMP	LOG_STD_ACTION
FCIS3IRECPALD	3-Error	Tree [chars] failed for iid [node] under top_id %u	An internal software error occurred.	FCISPMGDDISCOMP	LOG_STD_ACTION
FCIS3IRECPAL2DMAN	3-Error	Tree [chars] failed for L2 Domain ID %u	An internal software error occurred.	FCISPMGDDISCOMP	LOG_STD_ACTION
FCIS3IRECPAL2DMAN	3-Error	Tree [chars] failed for L2 Domain ID %u	An internal software error occurred.	FCISPMGDDISCOMP	LOG_STD_ACTION
FCIS3IRECPALTCP	3-Error	Tree [chars] failed for top_id %u	An internal software error occurred.	FCISPMGDDISCOMP	LOG_STD_ACTION
FCIS3IRECPALTCP	3-Error	Tree [chars] failed for top_id %u	An internal software error occurred.	FCISPMGDDISCOMP	LOG_STD_ACTION
FCIS3NBECDNFYABE	3-Error	Unable to identify table for packet from [chars]	An internal software error occurred.	FCISPMGDDISCOMP	LOG_STD_ACTION
FCIS3NBECDNFYABE	3-Error	Unable to identify table for packet from [chars]	An internal software error occurred.	FCISPMGDDISCOMP	LOG_STD_ACTION
FCIS3UNEXHCIEDPAH	3-Error	Unexpected path type [chars]/%u	An internal software error occurred.	FCISPMGDDISCOMP	LOG_STD_ACTION
FCIS3UNEXHCIEDPAH	3-Error	Unexpected path type [chars]/%u	An internal software error occurred.	FCISPMGDDISCOMP	LOG_STD_ACTION
FCIS3UNEXHCIEDPKT	3-Error	[chars]: 0x[node]x	A packet with an unexpected protocol was given to the LISP datapath.	FCISPMGDDISCOMP	LOG_STD_ACTION
FCIS3UNEXHCIEDPKT	3-Error	[chars]: 0x[node]x	A packet with an unexpected protocol was given to the LISP datapath.	FCISPMGDDISCOMP	LOG_STD_ACTION
FCIS3UNKNSIANCE	3-Error	Unknown instance unable to find/create virtual interface	An internal software error occurred.	FCISPMGDDISCOMP	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CFC_LISP3-UNKNOWN_INSTANCE	3-Error	Unknown instance unable to find/create virtual interface	An internal software error occurred.	CFC_LISP3-MGDDISCOMP	LOG_STD_ACTION
CFC_LISP3-UNKNOWN_PAYLOAD	3-Error	Dropping LISP encapsulated packet unknown payload 0x[node]x	An internal software error occurred.	CFC_LISP3-MGDDISCOMP	LOG_STD_ACTION
CFC_LISP3-UNKNOWN_PAYLOAD	3-Error	Dropping LISP encapsulated packet unknown payload 0x[node]x	An internal software error occurred.	CFC_LISP3-MGDDISCOMP	LOG_STD_ACTION
CFC_LISP-3-VIF	3-Error	Unable to [chars] virtual interface [chars]	An internal software error occurred.	CFC_LISP3-MGDDISCOMP	LOG_STD_ACTION
CFC_LISP-3-VIF	3-Error	Unable to [chars] virtual interface [chars]	An internal software error occurred.	CFC_LISP3-MGDDISCOMP	LOG_STD_ACTION
CFC_LISP3-WALK_DEP	3-Error	Walking dependents [chars][chars][chars]	An internal software error occurred.	CFC_LISP3-MGDDISCOMP	LOG_STD_ACTION
CFC_LISP3-WALK_DEP	3-Error	Walking dependents [chars][chars][chars]	An internal software error occurred.	CFC_LISP3-MGDDISCOMP	LOG_STD_ACTION
CFC_LISP3-XDR_LEN_ERR	3-Error	Failed to [chars] XDR message [chars] len [node]> max %u	An internal software error occurred.	CFC_LISP3-MGDDISCOMP	LOG_STD_ACTION
CFC_LISP3-XDR_LEN_ERR	3-Error	Failed to [chars] XDR message [chars] len [node]> max %u	An internal software error occurred.	CFC_LISP3-MGDDISCOMP	LOG_STD_ACTION
CFC_LISP3-XDR_REG_ERR	3-Error	Failed to register XDR client [chars] [node]error [chars]	-	-	-
CFC_LISP3-XDR_REG_ERR	3-Error	Failed to register XDR client [chars] [node]error [chars]	-	-	-
CFC_LISP-5-ADJ_STACK	5-Notice	Stacking adjacency [chars] [chars][chars][chars]	An internal software error occurred.	CFC_LISP3-MGDDISCOMP	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CFC_LISP5-ADJ_STACK	5-Notice	Stacking adjacency [chars] [chars][chars][chars]	An internal software error occurred.	CFC_LISP_MGDDISCOMP	LOG_STD_ACTION
CFC_LISP5-SHOW_MN_MIU	5-Notice	Cannot set [chars] MTU for RLOC [chars] to [node][chars] MTU for [chars] [chars] is [node] below minimum MTU [node][node]required for LISP encap	Unable to set the EID payload MTU for a remote RLOC below the minimal MTU this will cause the encapsulated packet to be bigger than the MTU of the path to the remote RLOC and may cause packet loss.	CFC_LISP_MGDDISCOMP	"Increase the MTU of the path to the remote RLOC"
CFC_LISP5-SHOW_MN_MIU	5-Notice	Cannot set [chars] MTU for RLOC [chars] to [node][chars] MTU for [chars] [chars] is [node] below minimum MTU [node][node]required for LISP encap	Unable to set the EID payload MTU for a remote RLOC below the minimal MTU this will cause the encapsulated packet to be bigger than the MTU of the path to the remote RLOC and may cause packet loss.	CFC_LISP_MGDDISCOMP	"Increase the MTU of the path to the remote RLOC"
CFC_LISP5-IGNORECMPIU	5-Notice	Ignoring received ICMP Type 3 Code 4 [chars]->[chars] next hop mtu [node] due to pmtu min or max setting	An ICMP Type 3 Code 4 fragmentation needed and DF set packet	CFC_LISP_MGDDISCOMP	"If you want the ICMP packet to be accepted and used " "use the <CmdBold> ip lisp pmtu min NUMBER max NUMBER <NoCmdBold> " "command to decrease the minimum MTU allowed and/or increase the " "maximum MTU that is allowed."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CCFCLIPMGNRHCMPMIU	5-Notice	Ignoring received ICMP Type 3 Code 4 [chars]->[chars] next hop mtu [node] due to pmtu min or max setting	An ICMP Type 3 Code 4 fragmentation needed and DF set packet	CCFCLIPMGNRHCMPMIU	"If you want the ICMP packet to be accepted and used " "use the <CmdBold> ip lisp pmtu min NUMBER max NUMBER <NoCmdBold> " "command to decrease the minimum MTU allowed and/or increase the " "maximum MTU that is allowed."
CCFCLIPMGNRHCMPV6MIU	5-Notice	Ignoring received ICMPv6 Type 2 [chars]->[chars] next hop mtu [node] due to pmtu min or max setting	An ICMPv6 Type 2 Packet Too Big packet	CCFCLIPMGNRHCMPV6MIU	"If you want the ICMP packet to be accepted and used " "use the <CmdBold> ipv6 lisp pmtu min NUMBER max NUMBER <NoCmdBold> " "command to decrease the minimum MTU allowed and/or increase the " "maximum MTU that is allowed."
CCFCLIPMGNRHCMPV6MIU	5-Notice	Ignoring received ICMPv6 Type 2 [chars]->[chars] next hop mtu [node] due to pmtu min or max setting	An ICMPv6 Type 2 Packet Too Big packet	CCFCLIPMGNRHCMPV6MIU	"If you want the ICMP packet to be accepted and used " "use the <CmdBold> ipv6 lisp pmtu min NUMBER max NUMBER <NoCmdBold> " "command to decrease the minimum MTU allowed and/or increase the " "maximum MTU that is allowed."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CFCLSP</del> CFCLSP_VRF_CONG	6-Information	Ignore VRF config on inactive [chars] interface	LISP Interfaces are programmatically activated and mapped to a VRF based on instance eid-table assignment in router lisp config mode. Ignore VRF configuration on inactive LISP interfaces via manual user config / config-replace operations.	<del>CFCLSP</del> CFCLSP_MGDDISCOMP	LOG_SID_NO_ACTION
<del>CFCLSP</del> CFCLSP_VRF_CONG	6-Information	Ignore VRF config on inactive [chars] interface	LISP Interfaces are programmatically activated and mapped to a VRF based on instance eid-table assignment in router lisp config mode. Ignore VRF configuration on inactive LISP interfaces via manual user config / config-replace operations.	<del>CFCLSP</del> CFCLSP_MGDDISCOMP	LOG_SID_NO_ACTION
<del>CFMISCP</del> CFMISCP_APP_CLIENT_ERR	3-Error	MPLS CP APP Unsupported Client [dec]	Unsupported client trying to use cfc apis	mpls-mfi	LOG_STD_ACTION
<del>CFMISCP</del> CFMISCP_APP_CLIENT_ERR	3-Error	MPLS CP APP Unsupported Client [dec]	Unsupported client trying to use cfc apis	mpls-mfi	LOG_STD_ACTION
<del>CFMISCP</del> CFMISCP_BATCH_ERR	3-Error	MPLS CP ION Batch Error [dec] for [chars]	Error in batching ion messages between cfc and mpls clients	mpls-mfi	LOG_STD_ACTION
<del>CFMISCP</del> CFMISCP_BATCH_ERR	3-Error	MPLS CP ION Batch Error [dec] for [chars]	Error in batching ion messages between cfc and mpls clients	mpls-mfi	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CFC_SIA3BAD_SIAI3END	3-Error	[chars]: [chars] 0x[node]X/[node]expected 0x[node]X/[node]	Internal error. May result in unpredictable behaviour.	-	"Copy the message exactly as it appears and report it to your technical " "support representative."
CFC_SIA3BAD_SIAI3END	3-Error	[chars]: [chars] 0x[node]X/[node]expected 0x[node]X/[node]	Internal error. May result in unpredictable behaviour.	-	"Copy the message exactly as it appears and report it to your technical " "support representative."
CFC_SIA3BAD_SIAI3FUL	3-Error	[chars]: [chars]	Internal error. May result in unpredictable behaviour.	-	"Copy the message exactly as it appears and report it to your technical " "support representative."
CFC_SIA3BAD_SIAI3FUL	3-Error	[chars]: [chars]	Internal error. May result in unpredictable behaviour.	-	"Copy the message exactly as it appears and report it to your technical " "support representative."
CFC_SIA33SIAI3NOMEM	3-Error	CFC Stats failed to allocate memory during [chars] creation.	Allocation of memory by the XDR subsystem failed. This may result in an unpredictable behavior of XDR	-	"Make sure that there is enough memory for the operations being performed " "by your machine. " "Copy the message exactly as it appears and report it to your technical " "support representative."
CFC_SIA33SIAI3NOMEM	3-Error	CFC Stats failed to allocate memory during [chars] creation.	Allocation of memory by the XDR subsystem failed. This may result in an unpredictable behavior of XDR	-	"Make sure that there is enough memory for the operations being performed " "by your machine. " "Copy the message exactly as it appears and report it to your technical " "support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CCSASISSAKIENIKODE</del>	3-Error	XDR test stats [chars] saw error [chars].	-	-	-
<del>CCSASISSAKIENIKODE</del>	3-Error	XDR test stats [chars] saw error [chars].	-	-	-
<del>CCSASISSAKIENIKODE</del>	3-Error	Selftest failure: unexpected event [hec] [hec] during	The XDR statistics infrastructure has experienced a self test failure. This should only occur when a self test is running and a failure is detected. It does not directly imply a problem with normal operation.	-	"Copy the message exactly as it appears and report it to your technical " "support representative."
<del>CCSASISSAKIENIKODE</del>	3-Error	Selftest failure: unexpected event [hec] [hec] during	The XDR statistics infrastructure has experienced a self test failure. This should only occur when a self test is running and a failure is detected. It does not directly imply a problem with normal operation.	-	"Copy the message exactly as it appears and report it to your technical " "support representative."
<del>CCSASISSAKIENIKODE</del>	4-Warning	context [node]length [node]from [chars]	The XDR statistics infrastructure received a message it could not decode from a peer. This has no harmful effects but might be a evidence of a more serious problem.	XDR_DDIS_COMPONENT	"Copy the message exactly as it appears and report it to your technical " "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CC_SASBDSARCINRCRME</del>	4-Warning	context [node]length [node]from [chars]	The XDR statistics infrastructure received a message it could not decode from a peer. This has no harmful effects but might be a evidence of a more serious problem.	XDR_DDIS_COMPONENT	"Copy the message exactly as it appears and report it to your technical " "support representative."
<del>CC_SASBDSARCINRCRAN</del>	4-Warning	Unable to register XDR client [chars] client due to [chars]	The XDR statistics infrastructure has seen an internal error. This may prevent counters to fail to be reported to the RP.	-	"Copy the message exactly as it appears and report it to your technical " "support representative."
<del>CC_SASBDSARCINRCRAN</del>	4-Warning	Unable to register XDR client [chars] client due to [chars]	The XDR statistics infrastructure has seen an internal error. This may prevent counters to fail to be reported to the RP.	-	"Copy the message exactly as it appears and report it to your technical " "support representative."
<del>CC_SASBDSARCINRCRAN</del>	4-Warning	Stats client [chars] failed to add linecards [chars]	The XDR statistics infrastructure has seen an internal error. This may prevent counters to fail to be reported to the RP.	-	"Copy the message exactly as it appears and report it to your technical " "support representative."
<del>CC_SASBDSARCINRCRAN</del>	4-Warning	Stats client [chars] failed to add linecards [chars]	The XDR statistics infrastructure has seen an internal error. This may prevent counters to fail to be reported to the RP.	-	"Copy the message exactly as it appears and report it to your technical " "support representative."
<del>CC_SASBDSARCINRCRAN</del>	4-Warning	[chars]	The XDR statistics infrastructure has seen an internal error. This may prevent counters to fail to be reported to the RP.	-	"Copy the message exactly as it appears and report it to your technical " "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CCSA</del> <del>SA</del> <del>UN</del> <del>CH</del> <del>IB</del> <del>ENT</del>	4-Warning	[chars]	The XDR statistics infrastructure has seen an internal error. This may prevent counters to fail to be reported to the RP.	-	"Copy the message exactly as it appears and report it to your technical " "support representative."
<del>CCSA</del> <del>SA</del> <del>UN</del> <del>CH</del> <del>IB</del> <del>ENT</del>	4-Warning	Add req for [chars] but already sending stats to [chars]	The XDR statistics infrastructure has seen an internal error. This may prevent counters to fail to be reported to the RP.	-	"Copy the message exactly as it appears and report it to your technical " "support representative."
<del>CCSA</del> <del>SA</del> <del>UN</del> <del>CH</del> <del>IB</del> <del>ENT</del>	4-Warning	Add req for [chars] but already sending stats to [chars]	The XDR statistics infrastructure has seen an internal error. This may prevent counters to fail to be reported to the RP.	-	"Copy the message exactly as it appears and report it to your technical " "support representative."
CFG_MGR4BCOILoader	4-Warning	[chars] for Switch [dec]	Switch needs to be upgraded to latest Rommon version	-	"This is a notification message" " To upgrade the switch to latest rommon using CLI " " upgrade rom-monitor capsule primary switch [number] R0" " Please Do not Power cycle your switch during upgrade"
CFGD_IBL_REGION4CON	4-Warning	ERRMSG_NOFLAGS	-	-	-
CFGD_IBL_REGION4CON	4-Warning	ERRMSG_NOFLAGS	-	-	-
<del>CMR</del> <del>CON</del> <del>FACE</del> <del>FILE</del>	4-Warning	ewlc-rrm	%s: 'ap country <country-code>' is deprecated	-	-
<del>CMR</del> <del>CON</del> <del>FACE</del> <del>FILE</del>	4-Warning	ewlc-ap	Unsupported AP DTLS ciphersuite:[chars]	Unsupported ciphersuite for AP DTLS in a given security mode	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CMRCLFLOWNOCKOMG</del>	7-Debug	ewlc-rrm	%s: 'ap country <country-code>' is deprecated	-	-
<del>CFATERRMCMEMORY</del>	3-Error	[chars] [chars] [dec]	The maximum number of concurrent flows allowed has been exceeded. Some flows might not received the provisioned level of service.	common-flow-table	"This is the platform limit. Either lower the network load on this device " "or upgrade to a higher capacity platform." LOGS_IDS_H_TECH_ACTION
<del>CFATERRMCMEMORY</del>	3-Error	[chars] [chars] [dec]	The maximum number of concurrent flows allowed has been exceeded. Some flows might not received the provisioned level of service.	common-flow-table	"This is the platform limit. Either lower the network load on this device " "or upgrade to a higher capacity platform." LOGS_IDS_H_TECH_ACTION
<del>CFATERRMCMEMORY</del>	3-Error	[chars] [chars] [dec]	The system was unable to supply the requested memory for flow processing to continue.	common-flow-table	-
<del>CFATERRMCMEMORY</del>	3-Error	[chars] [chars] [dec]	The system was unable to supply the requested memory for flow processing to continue.	common-flow-table	-
<del>CFATERRMCMEMORY</del>	3-Error	[chars] [chars] [dec]	The error message type does not match the possible enumerated definitions.	common-flow-table	"This is an internal software error. Please report it to your technical " "support representative." LOGS_IDS_H_TECH_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CFI</del> <del>ERR</del> <del>UNKNOWN</del>	3-Error	[chars] [chars] [dec]	The error message type does not match the possible enumerated definitions.	common-flow-table	"This is an internal software error. Please report it to your technical " "support representative." LOG_SIDSH_TECH_ACTION
<del>CFI</del> <del>WRN</del> <del>PREPARED</del>	4-Warning	[chars] [chars] [dec]	Flow creation was prevented by a flow table client. This may be due to an explicit policy that is enabled.	common-flow-table	"Check your policies to ensure this what you intend." LOG_SIDSH_TECH_ACTION
<del>CFI</del> <del>WRN</del> <del>PREPARED</del>	4-Warning	[chars] [chars] [dec]	Flow creation was prevented by a flow table client. This may be due to an explicit policy that is enabled.	common-flow-table	"Check your policies to ensure this what you intend." LOG_SIDSH_TECH_ACTION
<del>CFI</del> <del>WRN</del> <del>REMOVED</del>	4-Warning	[chars] [chars] [dec]	Flow creation was denied by a the system. A possible denial of service attack may have been detected.	common-flow-table	"Modify your denial of service policy if this is in error." LOG_SIDSH_TECH_ACTION
<del>CFI</del> <del>WRN</del> <del>REMOVED</del>	4-Warning	[chars] [chars] [dec]	Flow creation was denied by a the system. A possible denial of service attack may have been detected.	common-flow-table	"Modify your denial of service policy if this is in error." LOG_SIDSH_TECH_ACTION
<del>CFI</del> <del>NOT</del> <del>INFORM</del>	5-Notice	[chars] [chars] [dec]	The flow table was unable to process a TCP fragmented packet. Service for these packets may be unavailable.	common-flow-table	"Enable the virtual fragment reassembly VFR functionality."
<del>CFI</del> <del>NOT</del> <del>INFORM</del>	5-Notice	[chars] [chars] [dec]	The flow table was unable to process a TCP fragmented packet. Service for these packets may be unavailable.	common-flow-table	"Enable the virtual fragment reassembly VFR functionality."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CFTERRMSGERRICD</del>	5-Notice	[chars] [chars] [dec]	An unsupported layer 3 protocol was identified.	common-flow-table	"Flow based inspection does not support this protocol at this time." LOG_SIDSH_TECH_ACTION
<del>CFTERRMSGERRICD</del>	5-Notice	[chars] [chars] [dec]	An unsupported layer 3 protocol was identified.	common-flow-table	"Flow based inspection does not support this protocol at this time." LOG_SIDSH_TECH_ACTION
<del>CFTERRMSGERRICD</del>	7-Debug	[chars] [chars] [dec]	A CFT client may have a incorrectly accessed an API.	common-flow-table	"This is an internal software error. Please report it to your technical " "support representative." LOG_SIDSH_TECH_ACTION
<del>CFTERRMSGERRICD</del>	7-Debug	[chars] [chars] [dec]	A CFT client may have a incorrectly accessed an API.	common-flow-table	"This is an internal software error. Please report it to your technical " "support representative." LOG_SIDSH_TECH_ACTION
<del>CFTERRMSGERRICD</del>	4-Warning	CFT memory utilization has declined below its threshold memory is available for [chars].	After CFT was in memory shortage memory utilization has declined below its threshold New traffic flows will be opened properly	qfp-cft	LOG_STD_ACTION
<del>CFTERRMSGERRICD</del>	4-Warning	CFT reached maximum configured memory utilization. Can't allocate more memory for [chars].	Because of CFT memory shortage new flows may not be opened properly	qfp-cft	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CFTEN/A/X/CST/C/ERR</del>	4-Warning	CFT number of [chars] has declined below its threshold flow contexts are available for [chars].	After CFT was in flow contexts shortage the number of flow contexts has declined below its threshold. New traffic flows will be opened properly	qfp-cft	LOG_SID_NO_ACTION
<del>CFTEN/A/X/CST/C/WAR</del>	4-Warning	CFT number of [chars] threshold is reached can't allocate more memory for [chars].	Because of non-availability of flow contexts new traffic flows may not be opened	qfp-cft	LOG_SID_NO_ACTION
<del>MEMEN/D/W/R/ERR</del>	4-Warning	System free memory has increased above its lower watermark memory is available for [chars].	After system memory was in shortage free memory has increased above its lower watermark New traffic flows will be opened properly	qfp-cft	LOG_STD_ACTION
<del>MEMEN/D/W/R/WAR</del>	4-Warning	System free memory has reached its lower watermark. Can't allocate more memory for [chars].	Because of system memory shortage new flows may not be opened properly	qfp-cft	LOG_STD_ACTION
<del>CPUEN/S/P/H/ERR</del>	4-Warning	CPU Threshold has been changed to [node]%.	CPU threshold has been changed.	cpp-ucode	LOG_STD_ACTION
<del>CPUEN/S/P/B/ERR</del>	4-Warning	Maximum back-off timeout has been changed to [node]	Maximum back-off timeout has been changed.	cpp-ucode	LOG_STD_ACTION
<del>CPUEN/S/P/C/ERR</del>	4-Warning	CPU Utilization:[node][node] CPU usage regulation state is now: Gradual bring-up.	CFT Congestion state changed to Gradual bring-up	cpp-ucode	LOG_STD_ACTION
<del>CPUEN/S/P/C/WAR</del>	4-Warning	CPU Utilization is high:[node][node]PU usage regulation state is now: Self-regulated.	CFT Congestion state changed to Self-regulated.	cpp-ucode	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CFH-ANALMG_VRF_HASH	3-Error	[chars]: rg: [node]x r_vrf_hash: 0x[node]x	Standby received an unrecognized VRF name hash	cpp-ucode	LOG_STD_ACTION
CFH-ANALDRGRCD	3-Error	invalid [chars] opcode [chars] [dec] - rg [dec]:[dec]	Standby received an invalid Redundancy group	cpp-ucode	LOG_STD_ACTION
CFT-3-IPC_NORES	3-Error	No space for the IPC reply size %u	For a request from upper CFT software stack layers it was not possible to allocate space for a reply for the specified size. The consequence of this could be a stuck monitor that cannot be established etc. In rare cases this could also affect other operations such as feature activation.	qfp-cft	"This is normally a software issue. " LOG_SID_RECUR_ACTION
CFT-3-IPC_OPEN_REPLY	3-Error	IPC Open Reply failed request %u	For a request from upper CFT software stack layers it was not possible to open the reply buffer. The consequence of this could be a stuck monitor that cannot be established etc. In rare cases this could also affect other operations such as feature activation.	qfp-cft	"This is normally a software issue. " LOG_SID_RECUR_ACTION
CGC-0-CGC_EMERG	0-Emergency	[chars]	CGC_INTERNAL_ERROR	CGC_DDIS_COMPONENT	LOG_STD_ACTION
CGC-0-CGC_EMERG	0-Emergency	[chars]	CGC_INTERNAL_ERROR	CGC_DDIS_COMPONENT	LOG_STD_ACTION
CGC-0-CGC_EMERG	0-Emergency	[chars]	CGC_INTERNAL_ERROR	CGC_DDIS_COMPONENT	LOG_STD_ACTION
CGC-1-CGC_ALERT	1-Alert	[chars]	CGC_INTERNAL_ERROR	CGC_DDIS_COMPONENT	LOG_STD_ACTION
CGC-1-CGC_ALERT	1-Alert	[chars]	CGC_INTERNAL_ERROR	CGC_DDIS_COMPONENT	LOG_STD_ACTION
CGC-1-CGC_ALERT	1-Alert	[chars]	CGC_INTERNAL_ERROR	CGC_DDIS_COMPONENT	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CGC-2-CGC_CRIT	2-Critical	[chars]	CGC_INTERNAL_ERROR	CGC_DDIS_COMPONENT	LOG_STD_ACTION
CGC-2-CGC_CRIT	2-Critical	[chars]	CGC_INTERNAL_ERROR	CGC_DDIS_COMPONENT	LOG_STD_ACTION
CGC-2-CGC_CRIT	2-Critical	[chars]	CGC_INTERNAL_ERROR	CGC_DDIS_COMPONENT	LOG_STD_ACTION
CGC-3-CGC_ERR	3-Error	[chars]	CGC_INTERNAL_ERROR	CGC_DDIS_COMPONENT	LOG_STD_ACTION
CGC-3-CGC_ERR	3-Error	[chars]	CGC_INTERNAL_ERROR	CGC_DDIS_COMPONENT	LOG_STD_ACTION
CGC-3-CGC_ERR	3-Error	[chars]	CGC_INTERNAL_ERROR	CGC_DDIS_COMPONENT	LOG_STD_ACTION
CGC-4-CGC_WARNING	4-Warning	[chars]	CGC_INTERNAL_ERROR	CGC_DDIS_COMPONENT	LOG_STD_ACTION
CGC-4-CGC_WARNING	4-Warning	[chars]	CGC_INTERNAL_ERROR	CGC_DDIS_COMPONENT	LOG_STD_ACTION
CGC-4-CGC_WARNING	4-Warning	[chars]	CGC_INTERNAL_ERROR	CGC_DDIS_COMPONENT	LOG_STD_ACTION
CGC-5-CGC_NOTICE	5-Notice	[chars]	Normal but significant conditions	CGC_DDIS_COMPONENT	LOG_STD_ACTION
CGC-5-CGC_NOTICE	5-Notice	[chars]	Normal but significant conditions	CGC_DDIS_COMPONENT	LOG_STD_ACTION
CGC-5-CGC_NOTICE	5-Notice	[chars]	Normal but significant conditions	CGC_DDIS_COMPONENT	LOG_STD_ACTION
CGC-6-CGC_INFO	6-Information	[chars]	Informational messages	CGC_DDIS_COMPONENT	LOG_STD_NO_ACTION
CGC-6-CGC_INFO	6-Information	[chars]	Informational messages	CGC_DDIS_COMPONENT	LOG_STD_NO_ACTION
CGC-6-CGC_INFO	6-Information	[chars]	Informational messages	CGC_DDIS_COMPONENT	LOG_STD_NO_ACTION
CGC-7-CGC_ASSERT	7-Debug	Assertion Failure [chars] @[chars]:[dec] : [chars]	CGC_INTERNAL_ERROR	CGC_DDIS_COMPONENT	LOG_STD_ACTION
CGC-7-CGC_ASSERT	7-Debug	Assertion Failure [chars] @[chars]:[dec] : [chars]	CGC_INTERNAL_ERROR	CGC_DDIS_COMPONENT	LOG_STD_ACTION
CGC-7-CGC_ASSERT	7-Debug	Assertion Failure [chars] @[chars]:[dec] : [chars]	CGC_INTERNAL_ERROR	CGC_DDIS_COMPONENT	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CGM_NGWC3NOMEM	3-Error	INVALID	No Enough Shared Memory in CGM\n	The configuration is too large.	Check the existing ACL configuration.\n
CGMCGMHSPASSTEST	3-Error	NIST bypass test failed for CGM object [chars].	Class-Group Manager Security Client database detected a discrepancy in a security sensitive object. This could be due to a hardware or software resource limitation or a software defect.	qfp-class-internal	"Check the logs for information on the relevant " "object download states. Remove the object or a " "parent object in question. If the problem persists " "reboot the forwarding processor ESP."
CGMCGMSPADMERR	3-Error	CGM shared memory allocation failed: [chars]	-	-	-
CHASFS3NOCHASDIR	3-Error	iosxe-chassismgr	The directory[chars] does not exist.	"No explanation."	LOG_SID_NO_ACTION
CHASFS3NOINOTIFY	3-Error	iosxe-chassismgr	The inotify device could not be opened. Error %d.	"This error occurs when there is an error in the system that prevents the notification facility from being accessed."	LOG_SID_NO_ACTION
CHASFS3NOENPROBRY	3-Error	iosxe-chassismgr	Error opening chassis file system object[chars]:[chars]	"An application was not able to open a an object in its local chassis file system."	LOG_SID_RECUR_ACTION
CHASFS3NOLOCALOBJ	3-Error	iosxe-chassismgr	Error resolving local FRU object:[chars]	"An application was not able to create a reference to an object in its local chassis file system."	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CHASSIS3-EJECT_BUTTON	3-Error	[chars] and try again.	There are two eject buttons on PRE5 front panel. When both eject buttons are pulled out or a CLI plugin-card-protect enable/disable So the software modules protected by this may fail such as write/erase based on bootflash chip	cr10k5	"Please tighten the screws of the eject button."
CHASSIS3-PROCESSERR	3-Error	Couldn't start temperature environment monitoring process	The temperature monitoring process could not be started during initialization.	cr10k5	LOG_STD_ACTION
CHASSIS3-READ_ALERTERR	4-Warning	MAX1668 [dec] read alert response address error	MAX1668 read alert response address failed.	cr10k5	LOG_STD_ACTION
CHASSIS3-EJECT_BUTTON	6-Information	[chars] eject button is being screwed on/off.	There are two eject buttons on PRE5 front panel. When any eject button is being screwed on/off the error message will be printed to screen to remind the user.	cr10k5	LOG_STD_ACTION
CHAT-3-CANTRUN	3-Error	[node]in use can't run startup script	When the startup script attempted to run it found another process had\n\n Already been started on the line	chat	"Remove startup script from line configuration if it's inappropriate.\n\n Report to cisco."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CHKPTCHKPTMSGNULL	3-Error	The chkpt message has an empty data buffer	This is a severe error as far as checkpointing is concerned. The chkpt message's data buffer is NULL indicating that there were no memory resources to assign while getting a buffer.	checkpoint	"Check whether this error goes away when the " "memory is increased else " LOGSIDSHTTECHACTION
CHKPTCHKPTMSGNULL	3-Error	The chkpt message has an empty data buffer	This is a severe error as far as checkpointing is concerned. The chkpt message's data buffer is NULL indicating that there were no memory resources to assign while getting a buffer.	checkpoint	"Check whether this error goes away when the " "memory is increased else " LOGSIDSHTTECHACTION
CHKPT-3-ILLEGAL	3-Error	ILLEGAL call to CF API by client [dec] on the [chars] system	An illegal API call was made by a CF client	checkpoint	"Find out the offending client using " LOGSIDSHTTECHACTION
CHKPT-3-ILLEGAL	3-Error	ILLEGAL call to CF API by client [dec] on the [chars] system	An illegal API call was made by a CF client	checkpoint	"Find out the offending client using " LOGSIDSHTTECHACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CHKP_INVALID_CALLBACK_ARG	3-Error	Attempt to add a checkpointing client with an invalid [chars] argument	Checkpointing messages are used to carry encoded information for transfer between various High-Availability clients. For example to synchronize state information between redundant route processor units. An invalid argument was supplied to an internal API. The failure most likely occurred because of a software error. The message output identifies the type of error that occurred. The system state between one or more checkpointing clients might not be properly synchronized.	checkpoint	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CHKPT</del> <u>ADCBK</u> <u>AG</u>	3-Error	Attempt to add a checkpointing client with an invalid [chars] argument	Checkpointing messages are used to carry encoded information for transfer between various High-Availabilty clients. For example to synchronize state information between redundant route processor units. An invalid argument was supplied to an internal API. The failure most likely occurred because of a software error. The message output identifies the type of error that occurred. The system state between one or more checkpointing clients might not be properly synchronized.	checkpoint	LOG_STD_ACTION
<del>CHKPT</del> <u>ADENIT</u> <u>MGD</u>	3-Error	Invalid message event received [dec]	-	-	-
<del>CHKPT</del> <u>ADENIT</u> <u>MGD</u>	3-Error	Invalid message event received [dec]	-	-	-
CHKPT-3-IPCPORT	3-Error	Unable to create IPC port on [chars]	A severe checkpoint error occurred because the system was unable to allocate the resources needed to create a communications port for the Interprocess Communications IPC channel needed to	checkpoint	"Increase the memory. If the error persists" LOG_SIDSH <del>TECH</del> <u>ACTION</u>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CHKPT-3-IPCPORT	3-Error	Unable to create IPC port on [chars]	A severe checkpoint error occurred because the system was unable to allocate the resources needed to create a communications port for the Interprocess Communications IPC channel needed to	checkpoint	"Increase the memory. If the error persists" LOGSIDSHTECHACI0N
CHKPT-3-PCREGISTER	3-Error	Unable to register IPC port on [chars]	Checkpoint Facility was unable to register an IPC port. This can happen when registering a port that hasn't yet been created.	checkpoint	LOGSIDSHTECHACI0N
CHKPT-3-PCREGISTER	3-Error	Unable to register IPC port on [chars]	Checkpoint Facility was unable to register an IPC port. This can happen when registering a port that hasn't yet been created.	checkpoint	LOGSIDSHTECHACI0N
CHKPT-3-IPCSESSION	3-Error	Unable to open an IPC session with [chars]	A severe checkpointing error occurred as the system was unable to establish an interprocess communications session between the Active and the Standby peers.	checkpoint	"As this failure hinders any communication from taking place " "between the Active and the Standby peers reset the Standby. " "If the error persists" LOGSIDSHTECHACI0N
CHKPT-3-IPCSESSION	3-Error	Unable to open an IPC session with [chars]	A severe checkpointing error occurred as the system was unable to establish an interprocess communications session between the Active and the Standby peers.	checkpoint	"As this failure hinders any communication from taking place " "between the Active and the Standby peers reset the Standby. " "If the error persists" LOGSIDSHTECHACI0N

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CHKPT_MSG_NOT_COMPATIBLE	3-Error	Checkpointing message type not compatible	Checkpointing messages are used to carry encoded information for transfer between various High-Availability clients. For example to synchronize state information between redundant route processor units. An error was detected when verifying the checkpointing message type compatibility between checkpointing client peers. The failure most likely occurred because of a software error. The system state between one or more checkpointing clients might not be properly synchronized.	checkpoint	"show checkpoint client"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CHKPMSGNOCOMP</del>	3-Error	Checkpointing message type not compatible	Checkpointing messages are used to carry encoded information for transfer between various High-Availability clients. For example to synchronize state information between redundant route processor units. An error was detected when verifying the checkpointing message type compatibility between checkpointing client peers. The failure most likely occurred because of a software error. The system state between one or more checkpointing clients might not be properly synchronized.	checkpoint	"show checkpoint client"
CHKPESSUNCOFAILED	3-Error	Checkpointing Facility failed to start ISSU negotiation with the peer [chars]	Checkpointing Facility was unable to start the ISSU negotiation successfully. ISSU negotiation is done during system initialization or if the Standby system is signing in with the Active system. The failure to start negotiation is a fatal error condition and most likely occurred because of a software error.	checkpoint	"show tech"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CHKP3SSU</del> _NEGO_FAILED	3-Error	Checkpointing Facility failed to start ISSU negotiation with the peer [chars]	Checkpointing Facility was unable to start the ISSU negotiation successfully. ISSU negotiation is done during system initialization or if the Standby system is signing in with the Active system. The failure to start negotiation is a fatal error condition and most likely occurred because of a software error.	checkpoint	"show tech"
<del>CHKP3RV</del> _RANSOM_FAILED	3-Error	Checkpointing receive message header transformaton failed [chars]	-	-	-
<del>CHKP3RV</del> _RANSOM_FAILED	3-Error	Checkpointing receive message header transformaton failed [chars]	-	-	-
<del>CHKP3M</del> _TRANSOM_FAILED	3-Error	Checkpointing transmit message header transformaton failed [chars]	-	-	-
<del>CHKP3M</del> _TRANSOM_FAILED	3-Error	Checkpointing transmit message header transformaton failed [chars]	-	-	-

Fault-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CHKPT3NO_RESOURCES	3-Error	[chars]	A run-time module could not obtain the resources that are required to complete a task. The failure most likely occurred because of a software error or a lack of system memory. Additional details on the nature of the error are specified in the message text on the console or in the system log. The system state between the active and standby units might not be properly synchronized.	checkpoint	"If you determine that this condition was caused by a lack of system " "memory reduce system activity to ease memory demands or if conditions " "warrant upgrade to a larger memory configuration. Otherwise " LOGS_IDSHTTECH ACTION
CHKPT3NO_RESOURCES	3-Error	[chars]	A run-time module could not obtain the resources that are required to complete a task. The failure most likely occurred because of a software error or a lack of system memory. Additional details on the nature of the error are specified in the message text on the console or in the system log. The system state between the active and standby units might not be properly synchronized.	checkpoint	"If you determine that this condition was caused by a lack of system " "memory reduce system activity to ease memory demands or if conditions " "warrant upgrade to a larger memory configuration. Otherwise " LOGS_IDSHTTECH ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CHKPT-3-NOMEM	3-Error	Unable to allocate resources for CF on [chars].	This error occurs when there are no memory resources available. This is a severe error as far as check pointing is concerned	checkpoint	"Reduce other system activity to ease memory demands. Add more memory. " "If enough memory is available try to see whether the problem goes away " "by reloading the router. If not then" LOG_SIDSHTTECH_ACTION
CHKPT-3-NOMEM	3-Error	Unable to allocate resources for CF on [chars].	This error occurs when there are no memory resources available. This is a severe error as far as check pointing is concerned	checkpoint	"Reduce other system activity to ease memory demands. Add more memory. " "If enough memory is available try to see whether the problem goes away " "by reloading the router. If not then" LOG_SIDSHTTECH_ACTION
CHKPT-3-INTERNAL_FAILED	3-Error	Failed to register with [chars] rc = [dec]	An internal failure associated with client registration occurred in the run-time module specified in the message output. The return code that is specified in the message output identifies the type of failure that was detected. The failure most likely occurred because of a software error. The system state between the active and standby units might not be properly synchronized.	checkpoint	LOG_SIDSHTTECH_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CHKPT3RMI_CALLBACK_FAILED	3-Error	Failed to register with [chars] rc = [dec]	An internal failure associated with client registration occurred in the run-time module specified in the message output. The return code that is specified in the message output identifies the type of failure that was detected. The failure most likely occurred because of a software error. The system state between the active and standby units might not be properly synchronized.	checkpoint	LOGS_IDSHTECH_ACTION
CHKPT-3-RFREG	3-Error	Unable to register checkpoint as client of RF.	This is a severe error as far as checkpointing is concerned	checkpoint	LOGS_IDSHTECH_ACTION
CHKPT-3-RFREG	3-Error	Unable to register checkpoint as client of RF.	This is a severe error as far as checkpointing is concerned	checkpoint	LOGS_IDSHTECH_ACTION
CHKPT3RMI_CALLBACK	3-Error	Checkpointing Facility encountered an error while processing a callback from the Resource Manager RMI [chars]	Checkpointing Facility registers with the Resource Manager RMI to	checkpoint	"show tech"
CHKPT3RMI_CALLBACK	3-Error	Checkpointing Facility encountered an error while processing a callback from the Resource Manager RMI [chars]	Checkpointing Facility registers with the Resource Manager RMI to	checkpoint	"show tech"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CHKPT-3-RMI_FAILED	3-Error	Checkpointing Facility failed to register with the Resource Manager RMI [chars]	Checkpointing Facility registers with the Resource Manager RMI to	checkpoint	"show tech"
CHKPT-3-RMI_FAILED	3-Error	Checkpointing Facility failed to register with the Resource Manager RMI [chars]	Checkpointing Facility registers with the Resource Manager RMI to	checkpoint	"show tech"
CHKPT-3-SYSMGR_LOOKUP	3-Error	Failed to get process Job ID from SysMgr	Failed to get the Job ID for this ION process from SysMgr. The	checkpoint	"show tech"
CHKPT-3-SYSMGR_LOOKUP	3-Error	Failed to get process Job ID from SysMgr	Failed to get the Job ID for this ION process from SysMgr. The	checkpoint	"show tech"
CHKPT-3-TIMER	3-Error	[chars]	Checkpoint Facility was unable to retrieve the correct context for a previously saved message descriptor. This is most likely a software error caused by possible memory corruption.	checkpoint	LOG_STD_ACTION
CHKPT-3-TIMER	3-Error	[chars]	Checkpoint Facility was unable to retrieve the correct context for a previously saved message descriptor. This is most likely a software error caused by possible memory corruption.	checkpoint	LOG_STD_ACTION
CHKPT-3-TRANSMIT_FAILED	3-Error	Checkpointing message transmission failure [chars]	-	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CHKPT3-TRANSMIT_FAILED	3-Error	Checkpointing message transmission failure [chars]	-	-	-
CHKPT3-UNKNOWNMSG	3-Error	Unknown message received from peer on the standby for client [dec].	This is a severe error as far as checkpointing is concerned. This will be caused when one of the peers can some checkpoint message types that the other side does not understand. This is caused due to a software error as the set of messages being exchanged by either side must be the same.	checkpoint	LOG_SIDSH_TECH_ACTION
CHKPT3-UNKNOWNMSG	3-Error	Unknown message received from peer on the standby for client [dec].	This is a severe error as far as checkpointing is concerned. This will be caused when one of the peers can some checkpoint message types that the other side does not understand. This is caused due to a software error as the set of messages being exchanged by either side must be the same.	checkpoint	LOG_SIDSH_TECH_ACTION
CHKPT4-DISABLED	4-Warning	Check Pointing is disabled. Client [chars] should not be calling any CF API	This is mainly a warning and might be due to timing issue	checkpoint	LOG_SIDSH_TECH_ACTION
CHKPT4-DISABLED	4-Warning	Check Pointing is disabled. Client [chars] should not be calling any CF API	This is mainly a warning and might be due to timing issue	checkpoint	LOG_SIDSH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CHKPT-4-DUPID	4-Warning	Duplicate checkpoint client ID [dec].	A checkpoint client is using a client ID which is already assigned to another client. This could be due to a synchronization delay which will typically resolve itself. This would happen when an already registered Checkpointing Facility client again tries to add itself.	checkpoint	LOG_SIDSH_TCH_ACTION
CHKPT-4-DUPID	4-Warning	Duplicate checkpoint client ID [dec].	A checkpoint client is using a client ID which is already assigned to another client. This could be due to a synchronization delay which will typically resolve itself. This would happen when an already registered Checkpointing Facility client again tries to add itself.	checkpoint	LOG_SIDSH_TCH_ACTION
CHKPT4FREE_BUFFER	4-Warning	Checkpointing [dec] failed to free buffer	Checkpointing failed to free a buffer. This may cause leak in memory resources.	checkpoint	LOG_SIDSH_TCH_ACTION
CHKPT4FREE_BUFFER	4-Warning	Checkpointing [dec] failed to free buffer	Checkpointing failed to free a buffer. This may cause leak in memory resources.	checkpoint	LOG_SIDSH_TCH_ACTION
CHKPT4GET_BUFFER	4-Warning	Checkpointing ISSU failed to get buffer. Dest seat id 0x[hec]	Checkpointing ISSU failed to get a buffer. This is due to the dearth of memory resources.	checkpoint	"Upgrade the memory. If the error " "persists " LOG_SIDSH_TCH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CHKPT4-GET_BUFFER	4-Warning	Checkpointing ISSU failed to get buffer. Dest seat id 0x[hec]	Checkpointing ISSU failed to get a buffer. This is due to the dearth of memory resources.	checkpoint	"Upgrade the memory. If the error " "persists " LOG_STD_ACTION
CHKPT-4-INIT	4-Warning	Checkpoint [chars] initialization failed in RF state [chars]	Checkpointing initialization has failed This is software error caused by an out of memory condition as there aren't enough resources available to set up the initialization data structures	checkpoint	"Upgrade the memory. If the error " "persists " LOG_STD_ACTION
CHKPT-4-INIT	4-Warning	Checkpoint [chars] initialization failed in RF state [chars]	Checkpointing initialization has failed This is software error caused by an out of memory condition as there aren't enough resources available to set up the initialization data structures	checkpoint	"Upgrade the memory. If the error " "persists " LOG_STD_ACTION
CHKPT4INVALID_CLIENT	4-Warning	Invalid checkpoint client ID [dec].	The client id is invalid. This error has occurred since the corresponding client is not present.	checkpoint	LOG_STD_ACTION
CHKPT4INVALID_CLIENT	4-Warning	Invalid checkpoint client ID [dec].	The client id is invalid. This error has occurred since the corresponding client is not present.	checkpoint	LOG_STD_ACTION
CHKPT4INVALID_ENTITY	4-Warning	Invalid checkpoint entity ID [dec].	The entity id is invalid. This error has occurred since the corresponding entity is not present.	checkpoint	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CHKPT4INVALID_ENTIITY	4-Warning	Invalid checkpoint entity ID [dec].	The entity id is invalid. This error has occurred since the corresponding entity is not present.	checkpoint	LOG_SIDSH_TECH_ACTION
CHKPT4-MSG_SEND	4-Warning	Checkpointing ISSU failed to send message. Dest seat id 0x[hec]	Checkpointing ISSU failed to send nego message to peer. This will be due to an out of memory condition communication with the peer being severed	checkpoint	LOG_SIDSH_TECH_ACTION
CHKPT4-MSG_SEND	4-Warning	Checkpointing ISSU failed to send message. Dest seat id 0x[hec]	Checkpointing ISSU failed to send nego message to peer. This will be due to an out of memory condition communication with the peer being severed	checkpoint	LOG_SIDSH_TECH_ACTION
CHKPT4-NOCLIENT	4-Warning	CF client is NULL [chars]	Checkpoint Facility cannot send the message as the client is NULL.	checkpoint	LOG_SIDSH_TECH_ACTION
CHKPT4-NOCLIENT	4-Warning	CF client is NULL [chars]	Checkpoint Facility cannot send the message as the client is NULL.	checkpoint	LOG_SIDSH_TECH_ACTION
CHKPT4-NOIPCPORT	4-Warning	IPC port is NULL [chars]	Checkpoint Facility cannot send the message as the IPC port information is NULL. This message appears since since the communication session between the Checkpointing Facility peers has not yet been established.	checkpoint	LOG_SIDSH_TECH_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CHKPT-4-NOIPCPORT	4-Warning	IPC port is NULL [chars]	Checkpoint Facility cannot send the message as the IPC port information is NULL. This message appears since since the communication session between the Checkpointing Facility peers has not yet been established.	checkpoint	LOG_SIDSH_TECH_ACTION
CHKPT-4-NOMESSAGE	4-Warning	Message is NULL [chars]	Checkpoint Facility cannot send the message as the message is NULL.	checkpoint	LOG_SIDSH_TECH_ACTION
CHKPT-4-NOMESSAGE	4-Warning	Message is NULL [chars]	Checkpoint Facility cannot send the message as the message is NULL.	checkpoint	LOG_SIDSH_TECH_ACTION
CHKPT-4-PAK_MGR_CONN	4-Warning	Failed to connect to the Packet Manager	During Checkpoint initialization unable to create a connection to the Packet Manager. This could result in the CF infra unable to access shared memory in the client context using a virtual address.	checkpoint	LOG_STD_ACTION
CHKPT-4-PAK_MGR_CONN	4-Warning	Failed to connect to the Packet Manager	During Checkpoint initialization unable to create a connection to the Packet Manager. This could result in the CF infra unable to access shared memory in the client context using a virtual address.	checkpoint	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CHKPT4PAK_RECLAIM	4-Warning	Failed to reclaim packet from Packet Manager client [chars]	After the message send failed the CF client was unable to reclaim the packet to be able to free the message.	checkpoint	LOG_STD_ACTION
CHKPT4PAK_RECLAIM	4-Warning	Failed to reclaim packet from Packet Manager client [chars]	After the message send failed the CF client was unable to reclaim the packet to be able to free the message.	checkpoint	LOG_STD_ACTION
CHKPT5HIGHBUFFER	5-Notice	Checkpoint client using Large No. of Buffers in domain [dec] are [chars]	Several IPC messages are pending to be processed by or delevered to	checkpoint	"show checkpoint statistics buffer-usage"
CHKPT5HIGHBUFFER	5-Notice	Checkpoint client using Large No. of Buffers in domain [dec] are [chars]	Several IPC messages are pending to be processed by or delevered to	checkpoint	"show checkpoint statistics buffer-usage"
CHUNKCHUNKBADREFCNT	3-Error	refcnt=[dec] data=0x[hec]	The memory chunk manager detected a bad reference count	cpp-ucode	LOG_STD_ACTION
CHUNKINVALIDHEMISE	3-Error	requested %u	Memory corruption was detected by the memory chunk manager	cpp-ucode	LOG_STD_ACTION
CHUNK3SIBLING_ERR	3-Error	Tried to destroy sibling memory chunk 0x[hec]	An invalid sibling condition was hit in the Memory Chunk Manager	cpp-ucode	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CI-1-BLOWSHUT	1-Alert	Blower failure shutdown in [dec] seconds	One of the six blowers in a five-slot chassis has failed. Because each blower cools a separate region of the cards in the chassis all blowers are needed for router operation. If a blower failure persists for 2 minutes the router will shut itself down and will need to be power cycled.	-	LOG_STD_ACTION
CI-2-ENVCRIT	2-Critical	[chars] measured at [chars]	One of the measured environmental test points exceeds an extreme threshold.	-	"Correct the specified condition or the router may shut itself down or fail to operate properly."
CI-2-INT	2-Critical	Unexpected interrupt - status [node]x	An unexpected interrupt occurred. This is a serious software error which will be followed by a core dump.	-	LOG_STD_ACTION
CI-3-BLOWER	3-Error	[chars] fan failure	One of the router's cooling fans failed.	-	"Replace the fan as soon as possible or the router may shut itself down or fail to operate properly."
CI-3-CTRLRTYPE	3-Error	Wrong controller type [node]x	The CI was manufactured incorrectly.	-	"Copy the error message exactly as it appears and report it to your technical support representative."
CI-3-NOACK	3-Error	[chars] acknowledge failure cmd [node]x addr [node]x data [node]x	The CI software failed to communicate with the CI hardware.	-	"Copy the error message exactly as it appears and report it to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CI-3-PSFAIL	3-Error	Power supply [node]failure	One of the router's power supplies failed.	-	"Replace the failed power supply as soon as possible."
CI-3-SLOTCOMP	3-Error	Inconsistent [chars] slot [node]x	The CI software detected a possible inconsistency in the CI hardware.	-	"Confirm that the CI card is correctly and fully installed in the backplane. If error recurs call your technical support representative for assistance."
CI-4-COND	4-Warning	Restarting with [node]recent soft power shutdowns\n\tor system just powered-on	A soft shutdown occurs when the router powers itself down due to a detected over temperature condition. When the temperature goes up past the board shutdown trip point the cards are shutdown but the power supplies fans and CI continue to run. <body><par>When the system cools past the restart trip point the system will restart. The system counts the number of times this happens to keep the up/down cycle from repeating indefinitely. If the above counter reaches zero the system undergoes a hard shutdown which requires a power cycle to recover. The soft shutdown counter is reset to its maximum value after the system has been up for six hours.	-	"Copy the error message exactly as it appears and report it to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CI-4-ENVWARN	4-Warning	[chars] measured at [chars]	One of the measured environmental test points exceeds the warning threshold.	-	"Closely monitor the condition and correct if possible. If the situation worsens call your technical support representative for assistance."
CI-4-MAXOUTPUT	4-Warning	Power supply [node][dec]V is at or near rated output	This indicates that the power supply is delivering its maximum rated current. This condition is not a problem unless the current continues to increase beyond the rated limit of the power supply which can cause hardware damage.	-	LOG_STD_ACTION
CI-4-NOTFOUND	4-Warning	Chassis Interface not found	The system software could not detect the presence of a CI card.	-	"Verify that the CI card is correctly and fully installed in the backplane. If the error recurs call your technical support representative for assistance."
CI-4-SYSLOAD	4-Warning	System [dec]V load exceeds single power supply [node]capacity	This warning message indicates that the system's electrical current usage exceeds the capacity of a single power supply. During this condition power supplies must not be removed from the system.	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CI-4-UNBALANCE	4-Warning	Unbalanced [dec]V output from dual power supplies	The difference in electrical current output between the two power supplies is out of tolerance for the system design. One of the power supplies may be failing or about to fail.	-	LOG_STD_ACTION
CI-6-BPLANE	6-Information	CI type [node]differs from NVRAM type %u	The chassis type as reported by the CI is different from that programmed into NVRAM.	-	"Copy the error message exactly as it appears and report it to your technical support representative."
CI-6-PSCHANGE	6-Information	Power supply [node]changed from [chars] to [chars]	The CI reported that a power supply was either installed removed or changed.	-	"If the situation does not correspond with a physical change in the system's power supplies call your technical support representative for assistance."
CI-6-PSNORMAL	6-Information	Power supply [node]normal	One of the router's failed power supplies are working normal now.	-	"If the situation does not correspond with a normal operation of the system's power supplies call your technical support representative for assistance."
<del>CI-0-CPA_INITIALIZ</del>	0-Emergency	iosxe-chassismgr	cpa_init failed	-	-
<del>CI-3-CIP_CORE_DUMP</del>	3-Error	CIP core dump error slot [dec]: [chars]	An error occurred during a CIP core dump	-	"None."
<del>CI-6-CIP_CORE_DUMP</del>	6-Information	Dump of slot [dec] core [chars].	Progress messages for CIP core dump.	-	"None."
CIRRUS-1-NOMEMORY	1-Alert	msgtxt_nomemory	An operation could not be accomplished because of a low memory\n\ condition.	-	LOG_SID_REDUCE_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CIRRUS-3-BADENCAP	3-Error	msgtxt_badencap	-	-	""
CIRRUS-3-BADHDXFSM	3-Error	Interface serial [dec] Unexpected HDX state [dec] event [dec]	An internal software error occurred.	-	LOG_SID_SH_TECH_ACTION
CIRRUS-3-BADMODE	3-Error	Interface serial [dec] Bad mode encountered in init	An internal software error occurred.	-	LOG_SID_SH_TECH_ACTION
CIRRUS-3-BADRXISR	3-Error	Interface serial [dec] Unexpected situation in receive ISR	An internal software error occurred while receiving data.	-	LOG_SID_SH_TECH_ACTION
CIRRUS-3-BADTXISR	3-Error	Interface serial [dec] Unexpected situation in transmit ISR	An internal software error occurred while transmitting data.	-	LOG_SID_SH_TECH_ACTION
CIRRUS-3-CD2430NORESPONSE	3-Error	The CD2430 Controller is not responding power cycle the router	The CD2430 controller has failed to respond to your request.\n\n This is due to unsupported clocking or the use\n\n of a non-standard cable.	-	"Check the clocking and cable. Use cisco cables only. " LOG_SID_RECUR_ACTION
CIRRUS-3-RESETEERR	3-Error	CD2430 serial controller [dec] Reset timeout error	The async controller failed to respond to a reset command.\n\n This may indicate a hardware failure.	-	"Reset the interface or controller.\n\n Cycle the power if necessary. " LOG_SID_RECUR_ACTION
CIRRUS-3-SETCHAN	3-Error	Serial[dec]: setchan called in CD2430 interrupt context	An internal software error occurred.	-	LOG_SID_SH_TECH_ACTION
CIRRUS-4-DOWNREV_NM	4-Warning	Network Module card in slot [dec] is incompatible with the system.	The network module in this slot is an old revision which is not \n\n compatible with this system. Please upgrade that network module.	-	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CIRRUS-5-LINEFLAP	5-Notice	Unit [dec] excessive modem control changes	The specified async interface was determined to have too many\n\n automatic control changes in too short a span of time.\n\n This may indicate a hardware or software error in the interface.	-	"Reset the interface." LOG_SID_RECUR_ACTION
<del>CCOSUNINTERNALERR</del>	3-Error	Unable to process STUN message received on IP address [chars] and port [dec] failed with value [dec]	Unable to process the received STUN packet. Could be due to no ICE instance present to handle this packet or the STUN message has a wrong method or stray packet	ipipgw	LOG_SID_RECUR_ACTION
<del>CCOSUNINTERNALERR</del>	3-Error	Unable to process STUN message received on IP address [chars] and port [dec] failed with value [dec]	Unable to process the received STUN packet. Could be due to no ICE instance present to handle this packet or the STUN message has a wrong method or stray packet	ipipgw	LOG_SID_RECUR_ACTION
<del>CCOSUNNORESOURCE</del>	3-Error	No resources for [chars]	An error was encountered while trying to obtain memory resources for an internal queue or table. If malloc errors were also seen then that is most likely the root of the problem. If no memory allocation errors have occurred then this may be an internal problem.	ipipgw	"If there were memory allocation errors at the" "same time as this error then this error can be ignored. Otherwise:" LOG_SID_SHIT_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRCSUN</del> NORESOURCE	3-Error	No resources for [chars]	An error was encountered while trying to obtain memory resources for an internal queue or table. If malloc errors were also seen then that is most likely the root of the problem. If no memory allocation errors have occurred then this may be an internal problem.	ipipgw	"If there were memory allocation errors at the" "same time as this error then this error can be ignored. Otherwise: " LOG_SID_SH_TECH_ACTION
<del>CRCSUN</del> PARSE_ERROR	3-Error	Parsing of STUN message received on IP address [chars] and port [dec] failed with value [dec]	Parsing of one of STUN attribute failed due to invalid value or not present or received STUN message has invalid header	ipipgw	LOG_SID_RECUR_ACTION
<del>CRCSUN</del> PARSE_ERROR	3-Error	Parsing of STUN message received on IP address [chars] and port [dec] failed with value [dec]	Parsing of one of STUN attribute failed due to invalid value or not present or received STUN message has invalid header	ipipgw	LOG_SID_RECUR_ACTION
<del>CRCSUN</del> QUEUE_ERROR	3-Error	Unable to enqueue event [chars] [dec] to a process watched queue. Current size: [dec] max size: [dec]	-	-	-
<del>CRCSUN</del> QUEUE_ERROR	3-Error	Unable to enqueue event [chars] [dec] to a process watched queue. Current size: [dec] max size: [dec]	-	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CR</del> <u>OS</u> <del>UN</del> <u>ER</u> <del>OE</del> <u>CON</u> <del>ICT</del>	4-Warning	Ice Role Conflict detected in the received STUN message on UDP IP address [chars] port [dec]	A STUN messages received has a role-conflict determined as per procedures of RFC 5245. CUBE has responded with a ERROR-CODE attribute of with a value of 487 Role Conflict but retains its role.	ipipgw	LOG_SID_NO_ACTION
<del>CR</del> <u>OS</u> <del>UN</del> <u>ER</u> <del>OE</del> <u>CON</u> <del>ICT</del>	4-Warning	Ice Role Conflict detected in the received STUN message on UDP IP address [chars] port [dec]	A STUN messages received has a role-conflict determined as per procedures of RFC 5245. CUBE has responded with a ERROR-CODE attribute of with a value of 487 Role Conflict but retains its role.	ipipgw	LOG_SID_NO_ACTION
<del>CR</del> <u>OS</u> <del>UN</del> <u>ER</u> <del>OE</del> <u>CON</u> <del>ICT</del>	4-Warning	Invalid Message-Integrity attribute in the received STUN message on UDP IP address [chars] port [dec]	A STUN messages received has a wrong Message-Integrity. This could mean the sending device has not computed the integrity of the STUN payload before it sends out Or it has changed the payload after it has computed the integrity and hence the integrity is wrong. CUBE has not honoured this STUN message and has responded with STUN error response with a error code 400 as per RFC 5389	ipipgw	LOG_SID_NO_ACTION



<del>Facility-Severity-Mnemonic</del>	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CCSUNNADMSCHNRY</del>	4-Warning	Invalid Message-Integrity attribute in the received STUN message on UDP IP address [chars] port [dec]	A STUN messages received has a wrong Message-Integrity. This could mean the sending device has not computed the integrity of the STUN payload before it sends out Or it has changed the payload after it has computed the integrity and hence the integrity is wrong. CUBE has not honoured this STUN message and has responded with STUN error response with a error code 400 as per RFC 5389	ipipgw	LOG_SID_NO_ACTION
<del>CCSUNNADUSERNAME</del>	4-Warning	Invalid USERNAME attribute in the received STUN message on UDP IP address [chars] port [dec]	A STUN messages received has a wrong USERNAME attribute and does not comply with RFC 5245. CUBE has not honoured this STUN message and has responded with a STUN error response have ERROR-ATTRIBUTE value 400	ipipgw	LOG_SID_NO_ACTION
<del>CCSUNNADUSERNAME</del>	4-Warning	Invalid USERNAME attribute in the received STUN message on UDP IP address [chars] port [dec]	A STUN messages received has a wrong USERNAME attribute and does not comply with RFC 5245. CUBE has not honoured this STUN message and has responded with a STUN error response have ERROR-ATTRIBUTE value 400	ipipgw	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CLB4CLB_SLAVE_DEAD	4-Warning	[chars]	Secondary connection is dead and is being closed. Primary no longer receives updates from this Secondary.	-	""
CLB4CLB_SLAVE_DEAD	4-Warning	[chars]	Secondary connection is dead and is being closed. Primary no longer receives updates from this Secondary.	-	""
CLBCLBVERSION_MISMATCH	4-Warning	[chars]	Version mismatch for Cluster load-balancer feature. Primary could ignore some load attributes while calculating load of a Secondary.	-	"Upgrade to an IOS image with " "latest version of Cluster " "load-balancer feature"
CLBCLBVERSION_MISMATCH	4-Warning	[chars]	Version mismatch for Cluster load-balancer feature. Primary could ignore some load attributes while calculating load of a Secondary.	-	"Upgrade to an IOS image with " "latest version of Cluster " "load-balancer feature"
CLBCLBSLAERECONCIED	6-Information	[chars]	Received new Secondary connection. Primary now receives update from this Secondary.	-	""
CLBCLBSLAERECONCIED	6-Information	[chars]	Received new Secondary connection. Primary now receives update from this Secondary.	-	""
CLEAR_CHKPT-5LDP	5-Notice	ERRMSG_NOFLAGS	-	-	-
CLEAR_CHKPT-5LDP	5-Notice	ERRMSG_NOFLAGS	-	-	-
CLEAR_COUNTERS-5STEM	5-Notice	ERRMSG_NOFLAGS	-	-	-
CLEAR_COUNTERS-5STEM	5-Notice	ERRMSG_NOFLAGS	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CLEAR_NBRS-5-LDP	5-Notice	ERRMSG_NOFLAGS	-	-	-
CLEAR_NBRS-5-LDP	5-Notice	ERRMSG_NOFLAGS	-	-	-
CLEAR-5-COUNTERS	5-Notice	Clear counter on [chars] [chars] by [chars]	The counters have been cleared on the interfaces	-	LOG_SID_NO_ACTION
CLEAR-5-EXT_COUNT	5-Notice	Clear extended [chars] counters on [chars] by [chars]	The extended counters have been cleared on the interfaces	-	LOG_SID_NO_ACTION
CLAD_FAILURES_IHA	3-Error	ERRMSG_NOFLAGS	-	-	-
CLAD_FAILURES_IHA	3-Error	ERRMSG_NOFLAGS	-	-	-
CLI_AGENT#NVGEN_ERR	1-Alert	Error while processing NVGEN command: [chars]	An error occurred during an NVGEN command	polaris-mgbl-infra	LOG_STD_ACTION
CLI_AGENT#NVGEN_TRACEBACK	1-Alert	Traceback: [chars]	Traceback from NVGEN command	polaris-mgbl-infra	LOG_STD_ACTION
CLI_AGENT#BIPC_BUFFER	3-Error	Error [dec] Unable to acquire a BIPC buffer for [chars] messages.	A message was to be sent by IOS but no BIPC buffer was available. The message to be sent has been discarded and the associated operation failed.	polaris-mgbl-infra	LOG_STD_ACTION
CLI_AGENT#BIPC_CONN	3-Error	BIPC connection is down unable to send command: [chars]	IOS cli-agent client could not connect to cli-agent using BIPC	polaris-mgbl-infra	LOG_STD_ACTION
CLI_AGENT#BIPC_QUEUE	3-Error	Error [dec] queueing TDL message '[chars]' to send to the Shell Manager	An unexpected condition has occurred when IOS attempted to queue a TDL message to send to the Shell Manager	polaris-mgbl-infra	LOG_STD_ACTION
CLI_AGENT#BIPC_INIT	3-Error	Unable initialize BIPC connection to cli-agent	BIPC initialization failed BIPC infra is not available	polaris-mgbl-infra	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CLI_AGENT3BPC_REMOVE	3-Error	BIPC connection is down while waiting for cli-agent to reply: [chars]	Connection to cli-agent is not available IOS	polaris-mgbl-infra	LOG_STD_ACTION
CLI_AGENT3BUILD_MSG	3-Error	Error [dec] building TDL message '[chars]' to send to the cli-agent: [chars]	An unexpected condition has occurred while IOS is building a TDL message to send to the cli-agent	polaris-mgbl-infra	LOG_STD_ACTION
CLI_AGENT3ECI_CTX	3-Error	Unable to get [chars] for [chars]	Unable to get message from the queue message received from cli-agent. There might be memory issue in IOSD.	polaris-mgbl-infra	LOG_STD_ACTION
CLI_AGENT3ECI_DECODER	3-Error	Decoder error: [chars].	Error in decoder ring string which is generated by ECI metadata file. ECI metadata files are generated from sdl file using sdl compiler in WCM.	polaris-mgbl-infra	LOG_STD_ACTION
CLI_AGENT3ECI_ENQUEUE	3-Error	Unable to enqueue received message for processing [[chars]] : [chars]	Enqueue failed due multiple reason no context found TDL get error or run out of memory	polaris-mgbl-infra	LOG_STD_ACTION
CLI_AGENT3ECI_INVALID_CTX	3-Error	Invalid message cannot be processed ctx: [hex]	IOS recieved a message with invalid context ID. ECI cannot find the coresponding context from the table	polaris-mgbl-infra	LOG_STD_ACTION
CLI_AGENT3ECI_MEM	3-Error	Memory Error: [chars]	Memory related problem	polaris-mgbl-infra	LOG_STD_ACTION
CLI_AGENT3ECI_MODE	3-Error	Submode Error [chars]: [chars]	Unable to enter submode due to mode variable error	polaris-mgbl-infra	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CLI_AGENT3-ECI_TIMEOUT	3-Error	Maximum timeout has been reached while waiting for cli-agent to respond: [dec] seconds	CLI Agent did not reply to IOS within expected timeout	polaris-mgbl-infra	LOG_STD_ACTION
CLI_AGENT3-FILE_OPEN	3-Error	Failed to open [chars]: [chars]	Failed to load external configuration command set	polaris-mgbl-infra	LOG_STD_ACTION
CLI_AGENT3-LOAD_FILE	3-Error	Unable to load file: [chars]	Unable to load data required by external configuration command set	polaris-mgbl-infra	LOG_STD_ACTION
CLI_AGENT3-MARSHAL	3-Error	Error [dec] marshaling TDL message [[chars]] buffer length [dec]: [chars]	An unexpected condition has occurred while IOS is marshaling TDL message to send to the cli-agent	polaris-mgbl-infra	LOG_STD_ACTION
CLI_AGENT3-MSG_DISPATCH	3-Error	IOS cli-agent client message dispatcher error: [chars]	cli-agent RP message dispatcher error	polaris-mgbl-infra	LOG_STD_ACTION
CLI_AGENT3-NOT_EOK	3-Error	Error [dec] in [chars]: [chars]	The error code passed in is not EOK	polaris-mgbl-infra	LOG_STD_ACTION
CLI_AGENT3-NVGEN_CMD_LEN	3-Error	NVGEN error: rendered command too long - truncated '[chars]'	Rendered command is too long and is truncated during NVGEN	polaris-mgbl-infra	LOG_STD_ACTION
CLI_AGENT3-IDL_CREATE	3-Error	Error Creating TDL message '[chars]'	Could not create TDL message structure	polaris-mgbl-infra	LOG_STD_ACTION
CLI_AGENT3-IDL_GET	3-Error	Error [dec] handling TDL GET API from TDL message [[chars]]: [chars]	An unexpected condition has occurred while IOS is processing a TDL message received from the cli-agent	polaris-mgbl-infra	LOG_STD_ACTION
CLI_AGENT3-ECI_IGNORE_MSG	4-Warning	Ignoring [chars] message: [chars]	ECI in pull state and ignores the incoming message from cli_agent	polaris-mgbl-infra	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CLIENT_MG_BLK_IOW	4-Warning	Not enough msg block for requesting message free msg block = [dec]	ECI have runout the message block to ask for more resp msg	polaris-mgbl-infra	LOG_STD_ACTION
CLIENT_UNKNOWN_EVT	4-Warning	ECI recieved unknown event [dec]	ECI got unknown event	polaris-mgbl-infra	LOG_STD_ACTION
CLIENT_ECI_DEBUG	7-Debug	ECI: [chars][dec]	ECI module debug	polaris-mgbl-infra	LOG_STD_ACTION
CLIENT_CS_CREATE_BOOL	3-Error	watched boolean creation failure. bool [chars]	An internal software error occurred.	os	"If this message recurs copy it exactly as it appears and report\n\n it to your technical support representative."
CLIENT_CS_CREATE_BOOL	3-Error	watched boolean creation failure. bool [chars]	An internal software error occurred.	os	"If this message recurs copy it exactly as it appears and report\n\n it to your technical support representative."
CLIENT_CS_CREATE	3-Error	cannot create port [chars] due to [chars]	An internal software error occurred.	os	"If this message recurs copy it exactly as it appears and report\n\n it to your technical support representative."
CLIENT_CS_CREATE	3-Error	cannot create port [chars] due to [chars]	An internal software error occurred.	os	"If this message recurs copy it exactly as it appears and report\n\n it to your technical support representative."
CLIENT_CS_OPEN	3-Error	cannot open port [chars] due to [chars]	An internal software error occurred.	os	"If this message recurs copy it exactly as it appears and report\n\n it to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSNOC</del> OSNOC	3-Error	cannot open port [chars] due to [chars]	An internal software error occurred.	os	"If this message recurs copy it exactly as it appears and report\n\ it to your technical support representative."
<del>OSNOC</del> OSNOC	3-Error	cannot register port [chars] due to [chars]	An internal software error occurred.	os	"If this message recurs copy it exactly as it appears and report\n\ it to your technical support representative."
<del>OSNOC</del> OSNOC	3-Error	cannot register port [chars] due to [chars]	An internal software error occurred.	os	"If this message recurs copy it exactly as it appears and report\n\ it to your technical support representative."
<del>OSNOC</del> OSNOC	3-Error	ewlc-client	Client[chars] association rejected and excluded	-	-
<del>OSNOC</del> OSNOC	5-Notice	ewlc-client	"Client[chars] was added to exclusion list	-	-
<del>OSNOC</del> OSNOC	5-Notice	ewlc-client	"Client[chars] was added to exclusion list associated with AP Name:%s	-	-
<del>OSNOC</del> OSNOC	3-Error	iosxe-binos-utils	Heap recreate failure in module[chars].[chars]	Failure seen during heap recreate	LOG_STD_ACTION
<del>OSNOC</del> OSNOC	3-Error	iosxe-binos-utils	client_ipv6 Error:[chars]	Client IPv6 Error Message.	LOG_STD_ACTION
<del>OSNOC</del> OSNOC	4-Warning	iosxe-binos-utils	client_ipv6 Warning:[chars]	Client IPv6 Warning Message.	LOG_STD_ACTION
<del>OSNOC</del> OSNOC	3-Error	ewlc-client	User ID:[chars] - Unable to update broadcast keys to Client	Unable to update broadcast keys to Client	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>EWLC-CLIENT-DEFLECT</del>	3-Error	ewlc-client	User ID:[chars] - Deflection attack detected from this mobile	Deflection attack detected from this mobile	LOG_SID_RECUR_ACTION
<del>EWLC-CLIENT-KEYLEN</del>	3-Error	ewlc-client	User ID:[chars] - Invalid key data length	Invalid key data length	LOG_SID_RECUR_ACTION
<del>EWLC-CLIENT-KEYTYPE</del>	3-Error	ewlc-client	User ID:[chars] - Invalid key type	Invalid key type	LOG_SID_RECUR_ACTION
<del>EWLC-CLIENT-MIC</del>	3-Error	ewlc-client	User ID:[chars] - Received Invalid MIC in EAPOL Key Message handshake	Received Invalid MIC in EAPOL Key Message handshake	LOG_SID_RECUR_ACTION
<del>EWLC-CLIENT-MIC2</del>	3-Error	ewlc-client	User ID:[chars] - Received Invalid MIC in EAPOL Key Message M2	Received Invalid MIC in EAPOL Key Message M2	LOG_SID_RECUR_ACTION
<del>EWLC-CLIENT-REPLAY</del>	3-Error	ewlc-client	User ID:[chars] - Invalid Replay Window	Invalid Replay Window	LOG_SID_RECUR_ACTION
<del>EWLC-CLIENT-SECURE</del>	3-Error	ewlc-client	User ID:[chars] - Invalid secure bit	Invalid secure bit	LOG_SID_RECUR_ACTION
<del>EWLC-CLIENT-ZERO</del>	3-Error	ewlc-client	User ID:[chars] - Zero MIC received	Zero MIC received	LOG_SID_RECUR_ACTION
<del>EWLC-CLIENT-SESSION</del>	3-Error	ewlc-client	User ID:[chars] - Unable to send Session key to AP	Unable to send Session key to AP	LOG_STD_ACTION
<del>EWLC-CLIENT-ASSOC</del>	3-Error	ewlc-client	User ID:[chars] - Client association denied as it is not in Active Hours slot[chars]	Received association request in non-active hours	LOG_SID_RECUR_ACTION
<del>EWLC-CLIENT-ASSOC</del>	6-Information	ewlc-client	%s[chars]:[chars] Association received from mobile on BSSID[chars] AP[chars]	Association received from mobile on BSSID	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>GENCFGSTANCFEWDHE</del>	3-Error	ewlc-client	Wired Guest client[chars] failed joining on vlan %u physical interface[chars]. Reason:[chars]	Wired Guest client failed joining	If this message occurs
<del>GENCFGSTANCFEWDAC</del>	3-Error	ewlc-client	Refusing creation of wired Guest client with no MAC on vlan %u physical interface %u.	Wired Guest client failed joining	If this message occurs
<del>GENCFGSTANCFEWDCE</del>	5-Notice	ewlc-client	Already existing client[chars] join request on vlan %u and physical interface[chars] was ignored	A request to join the client was ignored because the client is already connected	=-F3568
<del>GENCFGSTANCFEWDDE</del>	7-Debug	ewlc-client	Wired Guest client[chars] failed joining on vlan %u physical interface[chars]. Reason:[chars]	Wired Guest client failed joining	If this message occurs
<del>GENCFGSTANCFEWDKE</del>	3-Error	ewlc-client	Error in[chars]	General Client Error Message.	LOG_STD_ACTION
<del>GENCFGSTANCFEWDME</del>	4-Warning	ewlc-guest	Export anchor required but config is incorrect (e.g.: wlan should be up	-	-
<del>GENCFGSTANCFEWDVAE</del>	4-Warning	ewlc-guest	Export anchor required but unable to get wlan id for: Wlan-Profile:[chars]	-	-
<del>GENCFGSTANCFEWDVAV</del>	4-Warning	ewlc-guest	Export anchor required but wlan not configured as mobility export anchor for: Wlan-Profile:[chars]	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>EWLCGUESTWARNING</del>	4-Warning	ewlc-guest	Export anchor required but local and remote security/profile configuration is not matching for: Wlan-Profile:[chars]	-	-
<del>EWLCWEBAUTHFAILURE</del>	4-Warning	ewlc-guest	Export anchor: webauth on mac failure configuration mismatch between anchor and foreign for: Wlan-Profile:[chars]	-	-
<del>EWLCCLIENTADDED</del>	5-Notice	ewlc-client	Client[chars] with IP:[chars] was added to exclusion list	-	-
<del>EWLCCLIENTEXCLUDED</del>	5-Notice	ewlc-client	Client[chars] with IP:[chars] was added to exclusion list	-	-
<del>EWLCCLIENTDELETED</del>	5-Notice	ewlc-client	Easy-PSK client[chars] : client deleted due because AAA exchange failed reason[chars].	Easy-PSK client was deleted because of AAA Exchange failure.	If this message occurs
<del>EWLCCLIENTROAMINGDENIED</del>	5-Notice	ewlc-client	Client[chars] : Roaming denied	-	-
<del>EWLCCLIENTSTATE</del>	6-Information	ewlc-client	Username entry (%s) joined with ssid (%s) for device with[chars] on channel (%d)	Details for client when it goes to run state	If this message occurs
<del>EWLCCLIENTDEBUG</del>	7-Debug	ewlc-client	Username (%s)	-	-
<del>EWLCCLIENTDEBUG</del>	7-Debug	ewlc-client	Username (%s)	-	-
<del>EWLCCLIENTDEBUG</del>	7-Debug	ewlc-client	Username (%s)	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CLIENT-3-LDP</del>	7-Debug	ewlc-client	Client[chars] on wlan[chars] and policy profile[chars] failed to re-associate and learn a new IP after the VLAN Override and is deleted	The client needs to re-associate within 30s after a vlan override otherwise it is deleted.	-
<del>CLIENT-3-LDP</del>	7-Debug	ewlc-client	Client[chars] on wlan[chars] and policy profile[chars] failed to re-associate and learn a new IP after the VLAN Override and is deleted	The client needs to re-associate within 30s after a vlan override otherwise it is deleted.	-
<del>CLIENT-3-LDP</del>	7-Debug	ewlc-client	Client[chars] on wlan[chars] and policy profile[chars] failed to re-associate and learn a new IP after the VLAN Override and is deleted	The client needs to re-associate within 30s after a vlan override otherwise it is deleted.	-
CLIENT-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
CLIENT-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
CLNS-1-BKUPERR	1-Alert	ISIS: [chars] in [hex] ndb_next [hex] ndb_prev [hex] lsp_next [hex] lsp_prev [hex] metric [hex] route type [chars] index [dec] [chars] [hex]	An internal error occurred in the maintenance of the Intermediate\n\n System-to-Intermediate System ISIS backup route table.	-	LOG_STD_ACTION
CLNS-1-BKUPERR	1-Alert	ISIS: [chars] in [hex] ndb_next [hex] ndb_prev [hex] lsp_next [hex] lsp_prev [hex] metric [hex] route type [chars] index [dec] [chars] [hex]	An internal error occurred in the maintenance of the Intermediate\n\n System-to-Intermediate System ISIS backup route table.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CLNS-1-LINKERR	1-Alert	ISIS: [chars] in [hex] lsp_next [hex] lsp_prev [hex] index [dec] ver [dec] [chars] [hex]	An internal error occurred in the maintenance of Intermediate\n\System-to-Intermediate System ISIS link-state packet LSP linkages.	-	LOG_SIDSH_TECH_ACTION
CLNS-1-LINKERR	1-Alert	ISIS: [chars] in [hex] lsp_next [hex] lsp_prev [hex] index [dec] ver [dec] [chars] [hex]	An internal error occurred in the maintenance of Intermediate\n\System-to-Intermediate System ISIS link-state packet LSP linkages.	-	LOG_SIDSH_TECH_ACTION
CLNS-3-BADIFNUM	3-Error	ISIS[chars]: Bad if number pdb [hex] idb [hex] if [hex]	-	-	LOG_SIDSH_TECH_ACTION
CLNS-3-BADIFNUM	3-Error	ISIS[chars]: Bad if number pdb [hex] idb [hex] if [hex]	-	-	LOG_SIDSH_TECH_ACTION
CLNS-3-BADPACKET	3-Error	[chars][chars]: [chars] [chars][chars] from [chars] [chars]	An invalid packet was received from a neighboring router.	-	LOG_STD_ACTION
CLNS-3-BADPACKET	3-Error	[chars][chars]: [chars] [chars][chars] from [chars] [chars]	An invalid packet was received from a neighboring router.	-	LOG_STD_ACTION
CLNS-3-BFDCLTERR	3-Error	[chars]: ISIS BFD client register fails with error[dec]	-	-	-
CLNS-3-BFDCLTERR	3-Error	[chars]: ISIS BFD client register fails with error[dec]	-	-	-
CLNS-3-CASEERROR	3-Error	Case statement error [node]is out of bound	ISIS encountered an internal programming error	isis	LOG_STD_ACTION
CLNS-3-CASEERROR	3-Error	Case statement error [node]is out of bound	ISIS encountered an internal programming error	isis	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CLNS-3-CKSUMERR	3-Error	[chars][chars]: L[dec] LSP [chars] database checksum error restarting	A hardware or software error occurred.	-	LOG_STD_ACTION
CLNS-3-CKSUMERR	3-Error	[chars][chars]: L[dec] LSP [chars] database checksum error restarting	A hardware or software error occurred.	-	LOG_STD_ACTION
CLNS-3-CRYPTOERR	3-Error	[chars][chars]: Error in filling MD5 digest for [chars] PDU	An internal error occurred in the Intermediate System-to-Intermediate\ System ISIS while filling in the crypto digest for the PDU.	-	LOG_STD_ACTION
CLNS-3-CRYPTOERR	3-Error	[chars][chars]: Error in filling MD5 digest for [chars] PDU	An internal error occurred in the Intermediate System-to-Intermediate\ System ISIS while filling in the crypto digest for the PDU.	-	LOG_STD_ACTION
CNS-3-EVENT_LIST_RESTORE	3-Error	[chars]: Process [chars] unable to restore old event list	Internal error. Scheduler API failed	isis	"ISIS functionality is likely impacted.\n\ Collect show tech-support isis and contact Cisco support.\n\ Restart router in order to recover functionality."
CNS-3-EVENT_LIST_RESTORE	3-Error	[chars]: Process [chars] unable to restore old event list	Internal error. Scheduler API failed	isis	"ISIS functionality is likely impacted.\n\ Collect show tech-support isis and contact Cisco support.\n\ Restart router in order to recover functionality."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CLNS-3-IFLIST	3-Error	ISIS: [chars]: [chars]	An internal error occurred in the Intermediate System-to-Intermediate System ISIS.	-	LOG_STD_ACTION
CLNS-3-IFLIST	3-Error	ISIS: [chars]: [chars]	An internal error occurred in the Intermediate System-to-Intermediate System ISIS.	-	LOG_STD_ACTION
CLNS3-INTERNALERR	3-Error	Internal error - [chars]	An internal software error has occurred	isis	LOG_STD_ACTION
CLNS3-INTERNALERR	3-Error	Internal error - [chars]	An internal software error has occurred	isis	LOG_STD_ACTION
CLNS3-IFMTU_TOO_SMALL	3-Error	Interface [chars] MTU [dec] smaller than lsp-mtu [dec]	Interface MTU is smaller than maximum sized LSP. LSP flooding may be compromised	isis	"Correct configuration so that interface mtu is >= lsp-mtu.\n\n If the interface is unable to support the current setting of lsp-mtu\n\n then either disable IS-IS on this interface or reduce lsp-mtu.\n\n NOTE: lsp-mtu has to be set consistently on all routers in the\n\n network. Be very cautious when making changes to lsp-mtu."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CLNS-3-IFMTU_TOO_SMALL	3-Error	Interface [chars] MTU [dec] smaller than lsp-mtu [dec]	Interface MTU is smaller than maximum sized LSP. LSP flooding may be compromised	isis	"Correct configuration so that interface mtu is >= lsp-mtu.\n\n If the interface is unable to support the current setting of lsp-mtu\n\n then either disable IS-IS on this interface or reduce lsp-mtu.\n\n NOTE: lsp-mtu has to be set consistently on all routers in the\n\n network. Be very cautious when making changes to lsp-mtu."
CLNS-3-IPLIST	3-Error	ISIS: [chars] [hex] [node]%i	An internal error occurred in the Intermediate System-to-Intermediate System ISIS.	-	LOG_STD_ACTION
CLNS-3-IPLIST	3-Error	ISIS: [chars] [hex] [node]%i	An internal error occurred in the Intermediate System-to-Intermediate System ISIS.	-	LOG_STD_ACTION
CLNS-3-LSPCHAIN	3-Error	[chars][chars]: non-null [chars] pointer [hex] on freed LSP index [dec]	An internal error occurred in the Intermediate System-to-Intermediate\n\n System ISIS.	-	LOG_STD_ACTION
CLNS-3-LSPCHAIN	3-Error	[chars][chars]: non-null [chars] pointer [hex] on freed LSP index [dec]	An internal error occurred in the Intermediate System-to-Intermediate\n\n System ISIS.	-	LOG_STD_ACTION
CLNS-3-LSPDB	3-Error	[chars][chars]: Inconsistent LSPIX entry lsp [hex] index [dec] ixentry [hex] ixentry->lsp [hex]	An internal error occurred in the Intermediate System-to-Intermediate\n\n System ISIS.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CLNS-3-LSPDB	3-Error	[chars][chars]: Inconsistent LSPIX entry lsp [hex] index [dec] ixentry [hex] ixentry->lsp [hex]	An internal error occurred in the Intermediate System-to-Intermediate System ISIS.	-	LOG_STD_ACTION
CLNS-3-LSPFULL	3-Error	[chars][chars]: L[dec] LSP filled to capacity [chars]	A hardware or software error occurred.	-	LOG_STD_ACTION
CLNS-3-LSPFULL	3-Error	[chars][chars]: L[dec] LSP filled to capacity [chars]	A hardware or software error occurred.	-	LOG_STD_ACTION
CLNS-3-LSPFULL_OVRLOAD	3-Error	[chars][chars]: Schedule L[dec] LSP to set overload bit	The LSP was filled to capacity and after applying any lsp-full suppress options we still can't recover out of it. So we are going to set overload bit on the LSP	-	LOG_STD_ACTION
CLNS-3-LSPFULL_OVRLOAD	3-Error	[chars][chars]: Schedule L[dec] LSP to set overload bit	The LSP was filled to capacity and after applying any lsp-full suppress options we still can't recover out of it. So we are going to set overload bit on the LSP	-	LOG_STD_ACTION
CLNS-3-LSPGENERROR	3-Error	LSPGEN cache usage is inconsistent with actual LSP space usage. \n\ Cannot add [chars]	ISIS encountered an inconsistency between LSPGEN cache usage and the LSP space.	isis	LOG_STD_ACTION
CLNS-3-LSPGENERROR	3-Error	LSPGEN cache usage is inconsistent with actual LSP space usage. \n\ Cannot add [chars]	ISIS encountered an inconsistency between LSPGEN cache usage and the LSP space.	isis	LOG_STD_ACTION
CLNS-3-LSPGENRCLV	3-Error	LSPGEN cache space is not reserved for router capability TLV.	ISIS encountered the LSPGEN cache space is not reserved for the router capability TLV.	isis	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CLNS-3-LSPGENRCTLV	3-Error	LSPGEN cache space is not reserved for router capability TLV.	ISIS encountered the LSPGEN cache space is not reserved for the router capability TLV.	isis	LOG_STD_ACTION
CLNS-3-LSPGENSPACE	3-Error	LSPGEN reserved space [node]is too small. Needed [node] \n\ Cannot add [node]m	ISIS encountered an inconsistency between LSPGEN cache usage and the LSP space.	isis	LOG_STD_ACTION
CLNS-3-LSPGENSPACE	3-Error	LSPGEN reserved space [node]is too small. Needed [node] \n\ Cannot add [node]m	ISIS encountered an inconsistency between LSPGEN cache usage and the LSP space.	isis	LOG_STD_ACTION
CLNS3-LSPIXARRMATCH	3-Error	[chars][chars]: LSPix entry [dec] mismatch with LSP [hex] LSP [chars] is [dec] entry [dec]	An internal error occurred in the Intermediate System-to-Intermediate System ISIS.	-	LOG_STD_ACTION
CLNS3-LSPIXARRMATCH	3-Error	[chars][chars]: LSPix entry [dec] mismatch with LSP [hex] LSP [chars] is [dec] entry [dec]	An internal error occurred in the Intermediate System-to-Intermediate System ISIS.	-	LOG_STD_ACTION
CLNS-3-LSPIXARRNULL	3-Error	[chars][chars]: LSPix entry [dec] should be null is [hex]	An internal error occurred in the Intermediate System-to-Intermediate System ISIS.	-	LOG_STD_ACTION
CLNS-3-LSPIXARRNULL	3-Error	[chars][chars]: LSPix entry [dec] should be null is [hex]	An internal error occurred in the Intermediate System-to-Intermediate System ISIS.	-	LOG_STD_ACTION
CLNS-3-LSPIXHEAD	3-Error	[chars][chars]: LSPix [chars] [dec] head [hex] doesn't match first prev [hex]	An internal error occurred in the Intermediate System-to-Intermediate System ISIS.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CLNS-3-LSPIXHEAD	3-Error	[chars][chars]: LSPix [chars] [dec] head [hex] doesn't match first prev [hex]	An internal error occurred in the Intermediate System-to-Intermediate System ISIS.	-	LOG_STD_ACTION
CLNS-3-LSPLIST	3-Error	ISIS: [chars] [node]index [dec]	An internal error occurred in the Intermediate System-to-Intermediate System ISIS.	-	LOG_STD_ACTION
CLNS-3-LSPLIST	3-Error	ISIS: [chars] [node]index [dec]	An internal error occurred in the Intermediate System-to-Intermediate System ISIS.	-	LOG_STD_ACTION
CLNS-3-LSPLISTERR	3-Error	ISIS[chars]: LSP list traversal incomplete [chars]	An internal error occurred in the Intermediate System-to-Intermediate System ISIS.	-	LOG_STD_ACTION
CLNS-3-LSPLISTERR	3-Error	ISIS[chars]: LSP list traversal incomplete [chars]	An internal error occurred in the Intermediate System-to-Intermediate System ISIS.	-	LOG_STD_ACTION
CLNS-3-LSPTOOBIG	3-Error	[chars][chars]: L[dec] LSP [chars] size [dec] bigger than interface [chars] MTU [dec] LSP dropped	A software or hardware error occurred.	-	LOG_STD_ACTION
CLNS-3-LSPTOOBIG	3-Error	[chars][chars]: L[dec] LSP [chars] size [dec] bigger than interface [chars] MTU [dec] LSP dropped	A software or hardware error occurred.	-	LOG_STD_ACTION
CLNS-3-MFIBINDERR	3-Error	MFI label bind error reported for [node]m - [chars]	MFI reported an error when ISIS tried to bind a prefix with the label	isis	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CLNS-3-MFIBINDERR	3-Error	MFI label bind error reported for [node]m - [chars]	MFI reported an error when ISIS tried to bind a prefix with the label	isis	LOG_STD_ACTION
CLNS-3-MFIERR	3-Error	ISIS MFI API error: [chars] [chars]	ISIS calling MFI API failed.	isis	LOG_STD_ACTION
CLNS-3-MFIERR	3-Error	ISIS MFI API error: [chars] [chars]	ISIS calling MFI API failed.	isis	LOG_STD_ACTION
CLNS-3-MID_ADV_MSSNG	3-Error	[chars]: MT prefixes received in [chars] without MTID [dec] advertise support	MT prefixes are received without corresponding MTID advertisement	isis	"This is an informational message that appears" "when prefixes from a LSP is not processed due to missing MTID advertisement"
CLNS-3-MID_ADV_MSSNG	3-Error	[chars]: MT prefixes received in [chars] without MTID [dec] advertise support	MT prefixes are received without corresponding MTID advertisement	isis	"This is an informational message that appears" "when prefixes from a LSP is not processed due to missing MTID advertisement"
CLNS-3-NONZEROHT	3-Error	[chars][chars]: Received L[dec] LSP [chars] with [dec] secs Remaining Lifetime that contain POI TLV	ISIS received LSP with non-zero Remaining Lifetime that contain POI TLV	isis	LOG_STD_ACTION
CLNS-3-NONZEROHT	3-Error	[chars][chars]: Received L[dec] LSP [chars] with [dec] secs Remaining Lifetime that contain POI TLV	ISIS received LSP with non-zero Remaining Lifetime that contain POI TLV	isis	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CLNS-3-NOPDB_IPV6	3-Error	PDB Cleanup called for tableid: 0x[hec] [chars] is NULL	Cleanup of IS-IS for a given IPv6 RIB is invoked but there is no context	isis	"This is an informational message that appears" "when an unexpected condition occurs during cleanup."
CLNS-3-NOPDB_IPV6	3-Error	PDB Cleanup called for tableid: 0x[hec] [chars] is NULL	Cleanup of IS-IS for a given IPv6 RIB is invoked but there is no context	isis	"This is an informational message that appears" "when an unexpected condition occurs during cleanup."
CLNS-3-NSAPES	3-Error	Invalid NSAP type in ES table: [hec] for [chars]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
CLNS-3-NSAPES	3-Error	Invalid NSAP type in ES table: [hec] for [chars]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
<del>CLNS-3-NSAPES</del>	3-Error	ISIS[chars]: [chars] circuit id force to [hec] [dec] failed	A circuit ID forced assignment failed. The requested\n\ circuit ID is in use on another interface.	-	"At the current time there is no work around. The problem should\n\ disappear following the next switchover."
<del>CLNS-3-NSAPES</del>	3-Error	ISIS[chars]: [chars] circuit id force to [hec] [dec] failed	A circuit ID forced assignment failed. The requested\n\ circuit ID is in use on another interface.	-	"At the current time there is no work around. The problem should\n\ disappear following the next switchover."
<del>CLNS-3-NSAPES</del>	3-Error	ISIS[chars]: Checkpointed ADJ circuit id mismatch for [chars] [dec]/[dec]	-	-	-
<del>CLNS-3-NSAPES</del>	3-Error	ISIS[chars]: Checkpointed ADJ circuit id mismatch for [chars] [dec]/[dec]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CLNS3-CP-BULK-SYNC-ERR	3-Error	ISIS[chars] bulk sync failed to complete	The bulk sync of ISIS adjacency and LSP data from the active to\n\n the standby RP failed to complete successfully. Any attempt by\n\n ISIS to perform a non-stop forwarding restart may be incomplete.\n\n Note that ISIS should still converge correctly.	-	"At the current time there is no work around. The adjacency and\n\n LSP databases should still sync up between the active and standby RPs\n\n following completion of the bulk sync. If they do not report\n\n the output from 'show isis nsf' 'show clns neighbor' and\n\n 'show isis database' on both RPs and contact the TAC."
CLNS3-CP-BULK-SYNC-ERR	3-Error	ISIS[chars] bulk sync failed to complete	The bulk sync of ISIS adjacency and LSP data from the active to\n\n the standby RP failed to complete successfully. Any attempt by\n\n ISIS to perform a non-stop forwarding restart may be incomplete.\n\n Note that ISIS should still converge correctly.	-	"At the current time there is no work around. The adjacency and\n\n LSP databases should still sync up between the active and standby RPs\n\n following completion of the bulk sync. If they do not report\n\n the output from 'show isis nsf' 'show clns neighbor' and\n\n 'show isis database' on both RPs and contact the TAC."
CLNS-3-NSF_CP_ERR	3-Error	ISIS[chars]: Checkpoint send error [chars]	An unrecoverable error occurred following a request to checkpoint\n\n a new or changed adjacency or LSP.	-	"At the current time there is no work around. If the error message\n\n continues to occur report the problem to the TAC."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CLNS-3-NSF_CP_ERR	3-Error	ISIS[chars]: Checkpoint send error [chars]	An unrecoverable error occurred following a request to checkpoint\n a new or changed adjacency or LSP.	-	"At the current time there is no work around. If the error message\n continues to occur report the problem to the TAC."
<del>CLNS-3-CPBENCDEFAL</del>	3-Error	ISIS[chars]: Interface [chars] cannot be encoded for nsf cisco	Adjacency and LSP information learned from this interface cannot be checkpointed due to an interface encoding error.	-	"Please verify that this interface type is supported for NSF in\n this release. If so report the problem to the TAC."
<del>CLNS-3-CPBENCDEFAL</del>	3-Error	ISIS[chars]: Interface [chars] cannot be encoded for nsf cisco	Adjacency and LSP information learned from this interface cannot be checkpointed due to an interface encoding error.	-	"Please verify that this interface type is supported for NSF in\n this release. If so report the problem to the TAC."
CLNS3-NSF_CP_INIT_ERR	3-Error	Checkpoint initialization error [chars]	An unrecoverable error occurred during initialization of the checkpoint\n client.	-	"At the current time there is no work around. If the error message\n continues to occur report the problem to the TAC."
CLNS3-NSF_CP_INIT_ERR	3-Error	Checkpoint initialization error [chars]	An unrecoverable error occurred during initialization of the checkpoint\n client.	-	"At the current time there is no work around. If the error message\n continues to occur report the problem to the TAC."
CLNS-3-ONLIST	3-Error	ISIS: entry already threaded prev [hex] next [hex] index [dec] ver [dec]	An internal error occurred in the Intermediate System-to-Intermediate System ISIS.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CLNS-3-ONLIST	3-Error	ISIS: entry already threaded prev [hex] next [hex] index [dec] ver [dec]	An internal error occurred in the Intermediate System-to-Intermediate System ISIS.	-	LOG_STD_ACTION
CLNS-3-PATHREG	3-Error	[chars]: Get all for Path registration Failed	Get all for Path registration Failed	isis	"This is an informational message that appears when" "Request for get all for Path Registration from ISIS failed"
CLNS-3-PATHREG	3-Error	[chars]: Get all for Path registration Failed	Get all for Path registration Failed	isis	"This is an informational message that appears when" "Request for get all for Path Registration from ISIS failed"
<del>CLNS-3-ADJENCY</del>	3-Error	[chars][chars]: Adjacency DB should [chars] be [hex] is [hex]	Adjacency database must match process and does not.	isis	LOG_STD_ACTION
<del>CLNS-3-ADJENCY</del>	3-Error	[chars][chars]: Adjacency DB should [chars] be [hex] is [hex]	Adjacency database must match process and does not.	isis	LOG_STD_ACTION
<del>CLNS-3-ADJENCY</del>	3-Error	[chars][chars]: Adjacency DB should be empty before deleting and is not	Adjacency database must be empty before deleting and is not.	isis	show clns neighbors
<del>CLNS-3-ADJENCY</del>	3-Error	[chars][chars]: Adjacency DB should be empty before deleting and is not	Adjacency database must be empty before deleting and is not.	isis	show clns neighbors
<del>CLNS-3-TRANSNAD</del>	3-Error	[chars][chars]: Transition target for pdb mode is invalid: \n\ current [dec] target [dec]	ISIS process received request to transition to invalid state	isis	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CLNS-3-ERRASNAD	3-Error	[chars][chars]: Transition target for pdb mode is invalid: \n\ current [dec] target [dec]	ISIS process received request to transition to invalid state	isis	LOG_STD_ACTION
CLNS-3-SIDERR	3-Error	ISIS SID conflict detected for [node]m	There is more than one node advertising the same prefix.\n\ But the prefix SID is different.	isis	LOG_STD_ACTION
CLNS-3-SIDERR	3-Error	ISIS SID conflict detected for [node]m	There is more than one node advertising the same prefix.\n\ But the prefix SID is different.	isis	LOG_STD_ACTION
CLNS-3-TENT	3-Error	[chars][chars]: [chars]	An internal error occurred in the Intermediate System-to-Intermediate\n\ System ISIS	-	LOG_STD_ACTION
CLNS-3-TENT	3-Error	[chars][chars]: [chars]	An internal error occurred in the Intermediate System-to-Intermediate\n\ System ISIS	-	LOG_STD_ACTION
CLNS-3-TERRRERR	3-Error	[chars] called on standby	An ISIS RRR support routine has been incorrectly called on standby	isis	LOG_STD_ACTION
CLNS-3-TERRRERR	3-Error	[chars] called on standby	An ISIS RRR support routine has been incorrectly called on standby	isis	LOG_STD_ACTION
CLNS-3-TEXT	3-Error	[chars]	Used to display different types of Error messages	isis	"This is an informational message that appears when" "there is an exception"
CLNS-3-TEXT	3-Error	[chars]	Used to display different types of Error messages	isis	"This is an informational message that appears when" "there is an exception"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CLNS3-VLANRANGEERR	3-Error	[chars]: invalid vlan range received begin [node]end [node]step %u	An invalid vlan range has been received in lsp	-	LOG_STD_ACTION
CLNS3-VLANRANGEERR	3-Error	[chars]: invalid vlan range received begin [node]end [node]step %u	An invalid vlan range has been received in lsp	-	LOG_STD_ACTION
CLNS4-ADJSDMISMATCH	4-Warning	ISIS/MFI ADJ SID mismatch: [node][node]on [chars]	Protected adjacency SID got out of sync between ISIS and MFI.\n Problem may be recovered by clear isis	isis	LOG_STD_ACTION
CLNS4-ADJSDMISMATCH	4-Warning	ISIS/MFI ADJ SID mismatch: [node][node]on [chars]	Protected adjacency SID got out of sync between ISIS and MFI.\n Problem may be recovered by clear isis	isis	LOG_STD_ACTION
CLNS-4-AREALOST	4-Warning	[chars][chars]: Too many IS-IS areas--can't route to area [chars]	-	-	"Reconfigure the network so that the area has fewer area addresses or\n split the area into multiple areas."
CLNS-4-AREALOST	4-Warning	[chars][chars]: Too many IS-IS areas--can't route to area [chars]	-	-	"Reconfigure the network so that the area has fewer area addresses or\n split the area into multiple areas."
CLNS-4-AUTH_FAIL	4-Warning	[chars]: [chars][chars] authentication failed	An ISIS packetIIIH CSNP PSNP or LSP was received and did not	-	"If the error persists check the originating router for matching " authentication mode and password."
CLNS-4-AUTH_FAIL	4-Warning	[chars]: [chars][chars] authentication failed	An ISIS packetIIIH CSNP PSNP or LSP was received and did not	-	"If the error persists check the originating router for matching " authentication mode and password."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CLNS4BADNIFCLNSMIU	4-Warning	[chars] Invalid interface clns MTU [dec]	This message occurs if the interface MTU becomes unusable\n\n while ISIS is running on the interface. This condition\n\n maybe temporary and recoverable.	-	LOG_STD_ACTION
CLNS4BADNIFCLNSMIU	4-Warning	[chars] Invalid interface clns MTU [dec]	This message occurs if the interface MTU becomes unusable\n\n while ISIS is running on the interface. This condition\n\n maybe temporary and recoverable.	-	LOG_STD_ACTION
CLNS-4-BADIPMSK	4-Warning	ISIS[chars]: Inconsistent ip prefix and mask[node]#m in ISIS LSP:	The system received a link-state packet LSP which contained a	-	LOG_SIDSHTTECH_ACTION
CLNS-4-BADIPMSK	4-Warning	ISIS[chars]: Inconsistent ip prefix and mask[node]#m in ISIS LSP:	The system received a link-state packet LSP which contained a	-	LOG_SIDSHTTECH_ACTION
CLNS4CORRUPLIFETIME	4-Warning	[chars][chars]: possible corrupted lifetime [dec] secs for L[dec] lsp [chars] from SNPA [chars] detected	ISIS received the remaining lifetime value which is less than ZeroAgeLifetime 60 secs	-	LOG_STD_ACTION
CLNS4CORRUPLIFETIME	4-Warning	[chars][chars]: possible corrupted lifetime [dec] secs for L[dec] lsp [chars] from SNPA [chars] detected	ISIS received the remaining lifetime value which is less than ZeroAgeLifetime 60 secs	-	LOG_STD_ACTION
CLNS4CHECKCOUNTCAE	4-Warning	Attempt to decrease count under zero	This message occurs as result of SW error. This condition\n\n likelly does not have operational impact.	isis	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ISIS-4-CONNCAME</del>	4-Warning	Attempt to decrease count under zero	This message occurs as result of SW error. This condition\n\ likely does not have operational impact.	isis	LOG_STD_ACTION
<del>ISIS-4-DISALLOWD_TLVNPRRE</del>	4-Warning	Received disallowed TLV [node]in Purge LSP	ISIS received a Purge LSP containing a disallowed TLV	isis	"Check ISIS routing protocol for RFC6233 compliant"
<del>ISIS-4-DISALLOWD_TLVNPRRE</del>	4-Warning	Received disallowed TLV [node]in Purge LSP	ISIS received a Purge LSP containing a disallowed TLV	isis	"Check ISIS routing protocol for RFC6233 compliant"
CLNS-4-DUPSNPA	4-Warning	[chars][chars]: Duplicate SNPA [chars] detected	This may be a configuration error.	-	"One of the duplicate SNPA addresses needs to be corrected."
CLNS-4-DUPSNPA	4-Warning	[chars][chars]: Duplicate SNPA [chars] detected	This may be a configuration error.	-	"One of the duplicate SNPA addresses needs to be corrected."
CLNS-4-DUPSYSTEM	4-Warning	[chars][chars]: possible duplicate system ID [chars] detected	This is a configuration error.	-	"One of the duplicate IDs needs to be corrected."
CLNS-4-DUPSYSTEM	4-Warning	[chars][chars]: possible duplicate system ID [chars] detected	This is a configuration error.	-	"One of the duplicate IDs needs to be corrected."
CLNS-4-EDATFAIL	4-Warning	Encapsulation failed dst= [chars]	This message can occur when an interface is down and a static\n\ neighbor entry exists in the system's CLNS routing table. If this is\n\ not the case the message indicates an internal software error.	-	"Check the interface. If the interface is not down and no static\n\ neighbor entry exists for that interface call your technical support\n\ representative for assistance."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CLNS-4-EDATFAIL	4-Warning	Encapsulation failed dst= [chars]	This message can occur when an interface is down and a static\n\n neighbor entry exists in the system's CLNS routing table. If this is\n\n not the case the message indicates an internal software error.	-	"Check the interface. If the interface is not down and no static\n\n neighbor entry exists for that interface call your technical support\n\n representative for assistance."
CLNS-4-GR_FAIL	4-Warning	[chars] failed: Invalid PDB GR Sub-block for ISIS-[chars]	IS-IS Graceful Reload was not completed due to invalid PDB GR Sub-Block.	-	"If the error persists check the IS-IS configuration for that instance"
CLNS-4-GR_FAIL	4-Warning	[chars] failed: Invalid PDB GR Sub-block for ISIS-[chars]	IS-IS Graceful Reload was not completed due to invalid PDB GR Sub-Block.	-	"If the error persists check the IS-IS configuration for that instance"
CLNS-4-GR_INVALID_CLIENT	4-Warning	GR_INFRA failed to assign a valid client ID to IS-IS	IS-IS received invalid client ID from GR_INFRA	-	"If the error persists restart the IS-IS process"
CLNS-4-GR_INVALID_CLIENT	4-Warning	GR_INFRA failed to assign a valid client ID to IS-IS	IS-IS received invalid client ID from GR_INFRA	-	"If the error persists restart the IS-IS process"
CLNS-4-GR_REG_FAIL	4-Warning	Failed to register with GR_INFRA rc=[dec]	IS-IS failed to register with GR_INFRA	-	"If the error persists restart the IS-IS process"
CLNS-4-GR_REG_FAIL	4-Warning	Failed to register with GR_INFRA rc=[dec]	IS-IS failed to register with GR_INFRA	-	"If the error persists restart the IS-IS process"
CLNS-4-INVALID_KEYID	4-Warning	Key ID [node] in key chain [chars] is invalid	They Key ID configured in the key chain is out of range for ISIS. This may happen because the key chain allows Key ID values outside of the range which is acceptable for ISIS.	isis	"Configure a new security association with a Key ID that is in " "the range 1-65535"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CLNS4INVALIDKCKEYID	4-Warning	Key ID [node]in key chain [chars] is invalid	They Key ID configured in the key chain is out of range for ISIS. This may happen because the key chain allows Key ID values outside of the range which is acceptable for ISIS.	isis	"Configure a new security association with a Key ID that is in " "the range 1-65535"
CLNS4INVALIDKCNAME	4-Warning	Key chain name [chars] is invalid	The key-chain name configured under ISIS does not match global key chain configuration.	isis	"Fix configuration"
CLNS4INVALIDKCNAME	4-Warning	Key chain name [chars] is invalid	The key-chain name configured under ISIS does not match global key chain configuration.	isis	"Fix configuration"
CLNS4INVALIDKEY	4-Warning	Key ID [node][chars]on interface [chars]	The ID is not found in the configured key chain	isis	"Configure a new security association with the Key ID"
CLNS4INVALIDKEY	4-Warning	Key ID [node][chars]on interface [chars]	The ID is not found in the configured key chain	isis	"Configure a new security association with the Key ID"
CLNS4LSP_MAXSEQ	4-Warning	[chars][chars]: attempt to exceed LSP maximum sequence number for LSP [chars]	Attempt was made to exceed maximum sequence number for an LSP.	-	"Protocol will shutdown for max-lsp-lifetime + 1 minute.\n\n This is a very unlikely natural occurrence.\n\n Investigate to find the source of any out of order reception\n\n generation or incrementing of this LSP's sequence number."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CLNS4LSP_MAXSEQ	4-Warning	[chars][chars]: attempt to exceed LSP maximum sequence number for LSP [chars]	Attempt was made to exceed maximum sequence number for an LSP.	-	"Protocol will shutdown for max-lsp-lifetime + 1 minute.\n\n This is a very unlikely natural occurrence.\n\n Investigate to find the source of any out of order reception\n\n generation or incrementing of this LSP's sequence number."
CLNS4LSPAUTHCHECK	4-Warning	[chars][chars]: L[dec] has [dec] LSPs which currently fail authentication	Authentication has been fully enabled but there exist some\n\n LSPs in the database which do not pass authentication check.\n\n Forwarding in the network may be compromised.	-	"Check to see if authentication is enabled consistently on\n\n all nodes in the network."
CLNS4LSPAUTHCHECK	4-Warning	[chars][chars]: L[dec] has [dec] LSPs which currently fail authentication	Authentication has been fully enabled but there exist some\n\n LSPs in the database which do not pass authentication check.\n\n Forwarding in the network may be compromised.	-	"Check to see if authentication is enabled consistently on\n\n all nodes in the network."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CLNS-4-LSPCKSUM	4-Warning	[chars][chars]: Bad L[dec] [chars] LSP [chars] checksum [node]x received on [chars] length [dec] should be [node]x bad count [dec]	-	-	"If the error is in a neighboring router's memory the problem will correct itself within 15 minutes. That router will detect its internal error and regenerate the corrupted data. This case is usually indicated by a single LSP ID appearing repeatedly in these messages. The same LSP ID might appear in this message on other routers as well. If data-link corruption has caused the error check the link for errors and deal with them appropriately. This case is usually indicated by a number of different LSP IDs appearing in these messages."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CLNS-4-LSPCKSUM	4-Warning	[chars][chars]: Bad L[dec] [chars] LSP [chars] checksum [node]x received on [chars] length [dec] should be [node]x bad count [dec]	-	-	"If the error is in a neighboring router's memory the problem\n\ will correct itself within 15 minutes. That router will detect\n\ its internal error and regenerate the corrupted data. This\n\ case is usually indicated by a single LSP ID appearing\n\ repeatedly in these messages. The same LSP ID might appear in\n\ this message on other routers as well.\n\n\ If data-link corruption has caused the error check the link\n\ for errors and deal with them appropriately. This case is\n\ usually indicated by a number of different LSP IDs appearing\n\ in these messages."
<del>CLNS-4-TRUNCATED</del>	4-Warning	Multi-part TLVs are disabled neighbor TLV [chars] in level [dec] is advertising partial link-state information	Multi-part TLVs are disabled. Neighbor TLV advertisement is truncated to fit in one TLV	isis	"Please change configuration such that advertisement can fit in only one TLV"
<del>CLNS-4-TRUNCATED</del>	4-Warning	Multi-part TLVs are disabled neighbor TLV [chars] in level [dec] is advertising partial link-state information	Multi-part TLVs are disabled. Neighbor TLV advertisement is truncated to fit in one TLV	isis	"Please change configuration such that advertisement can fit in only one TLV"
CLNS4NOVALIDKEY	4-Warning	No valid authentication key is available	-	isis	"Configure a new key"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CLNS-4-NOVALIDKEY	4-Warning	No valid authentication key is available	-	isis	"Configure a new key"
CLNS-4-NSAPIS	4-Warning	Invalid NSAP type in IS table: [hec] [dec]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
CLNS-4-NSAPIS	4-Warning	Invalid NSAP type in IS table: [hec] [dec]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
<del>CLNS-4-NSAPIS</del>	4-Warning	[chars] Site id [chars] from neighbor [chars] does not match site id [chars] received in site hellos.	A neighbor in the same site is sending a different site ID in its overlay hellos than in its site hellos	-	"Verify site id configuration and/or site connectivity "
<del>CLNS-4-NSAPIS</del>	4-Warning	[chars] Site id [chars] from neighbor [chars] does not match site id [chars] received in site hellos.	A neighbor in the same site is sending a different site ID in its overlay hellos than in its site hellos	-	"Verify site id configuration and/or site connectivity "
CLNS-4-OTV_SITE_FAIL	4-Warning	[chars]: [chars] site info update failed	An ISIS packetIIIH CSNP PSNP was received and failed to	-	"If the error persists check the originating router "
CLNS-4-OTV_SITE_FAIL	4-Warning	[chars]: [chars] site info update failed	An ISIS packetIIIH CSNP PSNP was received and failed to	-	"If the error persists check the originating router "
<del>CLNS-4-OTV_SITE_FAIL</del>	4-Warning	Site id [chars] from neighbor [chars] does not match local site id	OTV Site ID received from a neighbor in the same site has a different site id indicating a misconfiguration error.	-	"Verify site id configuration and/or site connectivity "
<del>CLNS-4-OTV_SITE_FAIL</del>	4-Warning	Site id [chars] from neighbor [chars] does not match local site id	OTV Site ID received from a neighbor in the same site has a different site id indicating a misconfiguration error.	-	"Verify site id configuration and/or site connectivity "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CLNS4PREFIX_TLV_TRUNCATION	4-Warning	Multi-part TLVs are disabled prefix TLV [node]m in level [dec] is advertising partial link-state information	Multi-part TLVs are disabled. Prefix TLV advertisement is truncated to fit in one TLV	isis	"Please change configuration such that advertisement can fit in only one TLV"
CLNS4PREFIX_TLV_TRUNCATION	4-Warning	Multi-part TLVs are disabled prefix TLV [node]m in level [dec] is advertising partial link-state information	Multi-part TLVs are disabled. Prefix TLV advertisement is truncated to fit in one TLV	isis	"Please change configuration such that advertisement can fit in only one TLV"
CLNS-4-REDIRECT	4-Warning	Redirect found for non-route entry dst=[chars] next-hop=[chars]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
CLNS-4-REDIRECT	4-Warning	Redirect found for non-route entry dst=[chars] next-hop=[chars]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
CLNS4REDIST_MAX_PFX	4-Warning	Redistribution prefix limit has been reached \[chars]\ - [dec] prefixes	We have reached the maximum number of redistributed prefixes	isis	"Check if redistribution of large number of prefixes is ""desired and has not been configured by mistake"
CLNS4REDIST_MAX_PFX	4-Warning	Redistribution prefix limit has been reached \[chars]\ - [dec] prefixes	We have reached the maximum number of redistributed prefixes	isis	"Check if redistribution of large number of prefixes is ""desired and has not been configured by mistake"
CLNS4REDIST_MAX_PFX	4-Warning	Redistribution prefix count would become negative \[chars]\	Attempt to decrement the count of the number redistributed prefixes when it is already zero	isis	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CLNS4REDIST_THR_PFX	4-Warning	Redistribution prefix count would become negative \[chars]\	Attempt to decrement the count of the number redistributed prefixes when it is already zero	isis	LOG_STD_ACTION
CLNS4REDIST_THR_PFX	4-Warning	Redistribution prefix threshold has been reached \[chars]\ - [dec] prefixes	We have reached the threshold level of number of redistributed prefixes	isis	"Check if redistribution of large number of prefixes is " "desired and has not been configured by mistake"
CLNS4REDIST_THR_PFX	4-Warning	Redistribution prefix threshold has been reached \[chars]\ - [dec] prefixes	We have reached the threshold level of number of redistributed prefixes	isis	"Check if redistribution of large number of prefixes is " "desired and has not been configured by mistake"
CLNS4RTRCAPTLV_TRUNC	4-Warning	Multi-part TLVs are disabled Router-cap TLV level [dec] is advertising partial link-state information	Multi-part TLVs are disabled. Router-cap TLV advertisement is truncated to fit in one TLV	isis	"Please change configuration such that advertisement can fit in only one TLV"
CLNS4RTRCAPTLV_TRUNC	4-Warning	Multi-part TLVs are disabled Router-cap TLV level [dec] is advertising partial link-state information	Multi-part TLVs are disabled. Router-cap TLV advertisement is truncated to fit in one TLV	isis	"Please change configuration such that advertisement can fit in only one TLV"
CLNS4-SIDRANGE	4-Warning	[chars] [node]for [node]m is out of SRGB range [node]via %i	ISIS tried to bind a label to a prefix that is out of SRGB range	isis	LOG_STD_ACTION
CLNS4-SIDRANGE	4-Warning	[chars] [node]for [node]m is out of SRGB range [node]via %i	ISIS tried to bind a label to a prefix that is out of SRGB range	isis	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CLNS-5-ADJCHANGE	5-Notice	[chars][chars]: Adjacency to [chars] [chars] [chars] [chars]	-	-	"This informational message normally appears as\n\routers and links go up or down. However unexpected adjacency loss might\n\r indicate high error rates or high packet loss in the network and should\n\r be investigated."
CLNS-5-ADJCHANGE	5-Notice	[chars][chars]: Adjacency to [chars] [chars] [chars] [chars]	-	-	"This informational message normally appears as\n\routers and links go up or down. However unexpected adjacency loss might\n\r indicate high error rates or high packet loss in the network and should\n\r be investigated."
CLNS-5-ADJCLEAR	5-Notice	[chars][chars]: All [chars]adjacencies cleared	-	-	"This informational message appears as a normal side effect\n\r of appropriate console or configuration commands."
CLNS-5-ADJCLEAR	5-Notice	[chars][chars]: All [chars]adjacencies cleared	-	-	"This informational message appears as a normal side effect\n\r of appropriate console or configuration commands."
CLNS-5-EXPIREDKEY	5-Notice	Packet [chars] with expired Key ID [node]	The Key ID in use has a lifetime and the system time is not within that lifetime	isis	"Configure a new key"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CLNS-5-EXPIREDKEY	5-Notice	Packet [chars] with expired Key ID [node]	The Key ID in use has a lifetime and the system time is not within that lifetime	isis	"Configure a new key"
CLNS-5-FADICHANGE	5-Notice	[chars][chars]: MPLS TE Forwarding Adjacency to [chars] [chars] [chars]	-	-	"This informational message normally appears as\n routers and links go up or down. However unexpected adjacency loss might\n indicate high error rates or high packet loss in the network and should\n be investigated."
CLNS-5-FADICHANGE	5-Notice	[chars][chars]: MPLS TE Forwarding Adjacency to [chars] [chars] [chars]	-	-	"This informational message normally appears as\n routers and links go up or down. However unexpected adjacency loss might\n indicate high error rates or high packet loss in the network and should\n be investigated."
<del>CLNS-5-FADICHANGE</del>	5-Notice	[chars]: Link anomaly metric fallback [chars]:interface-num [node][chars] level %u	Link anomaly set or reset	isis	"This is an informational message that appears when" "link anomaly is set or reset"
<del>CLNS-5-FADICHANGE</del>	5-Notice	[chars]: Link anomaly metric fallback [chars]:interface-num [node][chars] level %u	Link anomaly set or reset	isis	"This is an informational message that appears when" "link anomaly is set or reset"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CNSLEXALGOBENODFN</del>	5-Notice	[chars]: Flex-Algo [dec] is disabled for Level-[dec] no best definition available	Flex algorithm is disabled because best definition is not available	isis	"This is an informational message that appears when" "flex-algo is disabled because of no best definition"
<del>CNSLEXALGOBENODFN</del>	5-Notice	[chars]: Flex-Algo [dec] is disabled for Level-[dec] no best definition available	Flex algorithm is disabled because best definition is not available	isis	"This is an informational message that appears when" "flex-algo is disabled because of no best definition"
<del>CNSLEXIDENCHANGE</del>	5-Notice	[chars]: Flex-Algo [dec] Level-[dec] definition changed priority [dec] source System-ID [chars]	Flex algorithm definition changed	isis	"This is an informational message that appears when" "flex-algo definition changes"
<del>CNSLEXIDENCHANGE</del>	5-Notice	[chars]: Flex-Algo [dec] Level-[dec] definition changed priority [dec] source System-ID [chars]	Flex algorithm definition changed	isis	"This is an informational message that appears when" "flex-algo definition changes"
<del>CNSLEXIDENABEABE</del>	5-Notice	[chars]: Flex-Algo [dec] is [chars] for Level-[dec]	Flex algorithm enabled or disabled	isis	"This is an informational message that appears when" "flex-algo is enabled or disabled"
<del>CNSLEXIDENABEABE</del>	5-Notice	[chars]: Flex-Algo [dec] is [chars] for Level-[dec]	Flex algorithm enabled or disabled	isis	"This is an informational message that appears when" "flex-algo is enabled or disabled"
CNS5NOCRYPTOALG	5-Notice	Key ID [node]in key chain [chars] does not have a cryptographic algorithm	ISIS has been configured to use cryptographic authentication however an algorithm has not been configured	isis	"Configure a cryptographic-algorithm for the security association"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CLNS5NOCRYPTOALG	5-Notice	Key ID [node]in key chain [chars] does not have a cryptographic algorithm	ISIS has been configured to use cryptographic authentication however an algorithm has not been configured	isis	"Configure a cryptographic-algorithm for the security association"
CLNS-5-NOKEY	5-Notice	Key ID [node]in key chain [chars] does not have a key	ISIS has been configured to use cryptographic authentication however an key password has not been configured	isis	"Configure a key for the security association"
CLNS-5-NOKEY	5-Notice	Key ID [node]in key chain [chars] does not have a key	ISIS has been configured to use cryptographic authentication however an key password has not been configured	isis	"Configure a key for the security association"
<del>CLNSNSF_ISSU_NEGO_FAIL</del>	5-Notice	ISIS NSF cancelled - ISSU negotiation failed for NSF CISCO	ISIS cancelled the NSF restart since ISSU negotiation failed\n in Cisco mode.	-	"Review the output of 'show issu negotiated version' command"
<del>CLNSNSF_ISSU_NEGO_FAIL</del>	5-Notice	ISIS NSF cancelled - ISSU negotiation failed for NSF CISCO	ISIS cancelled the NSF restart since ISSU negotiation failed\n in Cisco mode.	-	"Review the output of 'show issu negotiated version' command"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CLNS-5-NSF_NORP_SIGNAL	5-Notice	ISIS[chars] NSF cancelled - 'nsf interval' expiration pending	ISIS cancelled the NSF restart since either the active\n\ or standby RP had not been up long enough. In Cisco mode\n\ the active RP must signal that it has been up for a minimum\n\ of 'nsf interval' seconds. For IETF mode the standby RP must\n\ be up for a minimum of 'nsf interval' seconds.	-	"Review the setting of the 'nsf interval' command"
CLNS-5-NSF_NORP_SIGNAL	5-Notice	ISIS[chars] NSF cancelled - 'nsf interval' expiration pending	ISIS cancelled the NSF restart since either the active\n\ or standby RP had not been up long enough. In Cisco mode\n\ the active RP must signal that it has been up for a minimum\n\ of 'nsf interval' seconds. For IETF mode the standby RP must\n\ be up for a minimum of 'nsf interval' seconds.	-	"Review the setting of the 'nsf interval' command"
CLNS-5-NSF_RESTART	5-Notice	ISIS[chars] NSF completion	ISIS performed an NSF restart	-	"This informational message appears as a normal side effect\n\ of a restart performed while NSF is enabled"
CLNS-5-NSF_RESTART	5-Notice	ISIS[chars] NSF completion	ISIS performed an NSF restart	-	"This informational message appears as a normal side effect\n\ of a restart performed while NSF is enabled"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CLNS-5-NSF_STATUS	5-Notice	[chars][chars] NSF [chars]	This message used to print NSF status logs	-	"This informational message appears while NSF is enabled"
CLNS-5-NSF_STATUS	5-Notice	[chars][chars] NSF [chars]	This message used to print NSF status logs	-	"This informational message appears while NSF is enabled"
CLNS-6-DFT_OPT	6-Information	Protocol timers for fast convergence are [chars].	Routing-default-optimize state	isis	LOG_STD_ACTION
CLNS-6-DFT_OPT	6-Information	Protocol timers for fast convergence are [chars].	Routing-default-optimize state	isis	LOG_STD_ACTION
<del>CLNS-7-DEBUGMSG</del>	7-Debug	Debug: [chars]	Debug information.	-	"No action required"
<del>CLNS-7-DEBUGMSG</del>	7-Debug	Debug: [chars]	Debug information.	-	"No action required"
CLNS-7-DEBUGMSG	7-Debug	[chars]: [node]x [node]x [node]x [node]x [node]x [node]x	Internal use only	clns	"Should not be seen in the field"
CLNS-7-DEBUGMSG	7-Debug	[chars]: [node]x [node]x [node]x [node]x [node]x [node]x	Internal use only	clns	"Should not be seen in the field"
CLNT_REG-7-LDP	7-Debug	ERRMSG_NOFLAGS	-	-	-
CLNT_REG-7-LDP	7-Debug	ERRMSG_NOFLAGS	-	-	-
<del>CLNT_REG-7-LDP</del>	4-Warning	[chars] on module [dec]/[dec] failed	This message indicates that an active recovered or enhanced clock has failed	-	LOG_SID_NO_ACTION
<del>CLNT_REG-7-LDP</del>	6-Information	[chars] on module [dec]/[dec] is now active	This message indicates that a recovered or enhanced clock has become active	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CLS_ACC2CONGN_VDA	2-Critical	Express setup parameter committed. Default port role will be applied	After express setup parameters are committed switch becomes a configured switch. The default port roles are automatically applied to all ports at this moment. The port role configurations may be manually modified after this point.	firmware	LOG_NO_ACTION
CLS_ACC2MODE_NIBD	2-Critical	Entering consoleless access mode [chars]	Switch enters one of the consoleless access modes	firmware	LOG_NO_ACTION
CLS_ACC2MODE_EXIID	2-Critical	Complete consoleless access from mode [chars]	Switch exits from one of the consoleless access modes	firmware	LOG_NO_ACTION
CLS_ACC2NO_PROCESS	2-Critical	Process creation failure	Failed to create process to execute consoleless access	firmware	LOG_NO_ACTION
CLS_ACC2SETUP_BINRS	2-Critical	[chars]	Pressing the switch setup button will lead an unconfigured switch to go to express setup mode. It will not have any effect on an already configured switch. Pressing the setup button for more than 5 seconds will lead a configured switch to go to direct management mode or lead an unconfigured switch to go to express setup mode	firmware	LOG_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CLS_ACC3CONFIG_ERROR	3-Error	[chars]	Not able to correctly configure the switch for consoleless access Can't go to access mode	firmware	LOG_NO_ACTION
CLS_ACC3NO_ACC_INIF	3-Error	Failed to find a free interface as consoleless access interface or failed to retrieve the access interface information	Not able to find a free interface which is fit to serve as management interface for consoleless access	firmware	LOG_NO_ACTION
CLS_ACC3NOMEMORY	3-Error	[chars]	Memory allocation failure for executing consoleless access switch configuration commands	firmware	LOG_STD_ACTION
CLS_ACC3NOSOCKET	3-Error	Fail to create DNS socket for consoleless access	Socket creation failure switch is not able to go into consoleless access mode. Abort.	firmware	LOG_NO_ACTION
CSAC3MBCRESECONFIG	3-Error	[chars]	The system is unable to reset the configuration	firmware	LOG_STD_ACTION
CLSACC3MANCREAFIAL	3-Error	Failed to allocate a free vlan as consoleless access vlan use default management vlan	Not able to find a free vlan in the range of 2-1000 to server as management vlan for consoleless access	firmware	LOG_NO_ACTION
CLS_ACC4NO_HTTP_PAGE	4-Warning	Failed to locate HTTP page for the consoleless access mode	Not able to locate the HTTP page corresponding to the access mode. Page is not on flash	firmware	LOG_NO_ACTION
CSAC4NEXHCHEMENT	4-Warning	Switch does not support or not ready for consoleless access mode	Switch either does not support or is not ready to enter the requested consoleless access mode	firmware	LOG_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CLS_ACC-5-CLRCFG	5-Notice	User cleared switch configurations under recovery mode	Under consoleless access mode user takes an action to reset switch configuration to factory default.	firmware	LOG_NO_ACTION
CLS_ACC-5-RSTIMG	5-Notice	User reset switch image to factory default image under recovery mode	Under consoleless access mode user takes an action to reset switch image to factory default.	firmware	LOG_NO_ACTION
CLS_ACC-7-ACC_INTF	7-Debug	Selected management interface: [chars] interface number: [dec]	Selected an interface as consoleless access interface	firmware	LOG_NO_ACTION
CLS_ACC-7-ACC_VLAN	7-Debug	Selected vlan [dec] for consoleless access	A new vlan is created to only include the management interface Vlan creation successful	firmware	LOG_NO_ACTION
CLS_ACC-7-CONFIG	7-Debug	Save access intf config: if: [chars] port num: [dec] vlan [dec] admin-down?:[dec]	Save interface configurations these configurations will be restored when consoleless access exits and returns the interface	firmware	LOG_NO_ACTION
CLS_ACC-7-CONFIG_SUCCESS	7-Debug	[chars]	Consoleless access mgmt interface successfully configured or its original configuration successfully restored	firmware	LOG_NO_ACTION
CLS-3-BOGUSOP	3-Error	Unknown CLS verb for [chars] context DlcOpcodeT=[node]x	A bad opcode was generated by the DLC for the STN or CEP.	-	LOG_STD_ACTION
CLS-3-CLSFAIL	3-Error	CLS: Assertion failed: [chars]	A software or hardware error occurred.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CLS-3-CLSMMSG	3-Error	[chars]	A software error detected while manipulating CLSIMsg objects.	-	LOG_STD_ACTION
CLSDR-3-ERRRTN	3-Error	[chars] failed error 0x[hec]	-	-	"Refer to CLSI software documentation for more information about this error. Report this error to your technical support representative."
<del>CLSDR-3-INCORRECTPORT</del>	3-Error	Incorrect port pointer in USapId	-	-	LOG_STD_ACTION
CLSDR-3-MSGERR	3-Error	[chars] couldn't get a message	-	-	LOG_STD_ACTION
CLSDR-3-NOCEP	3-Error	Cannot found cep in free pool	A software or hardware error occurred.	-	LOG_STD_ACTION
<del>CLSDR-3-NOCLSERVER</del>	3-Error	unable to start the Server process	Could not start the CLSDRIVER process possibly due to a resource problem. The subsystem using CLSDRIVER does not work.	-	-
<del>CLSDR-3-NODLUCREATE</del>	3-Error	Cannot create DLU for this type [dec]	-	-	LOG_STD_ACTION
CLSDR-3-NOINIT	3-Error	CLSDRIVER not initialized	A CLSDRIVER initialization failed earlier. Trying to use the driver now results in an error condition.	-	-
<del>CLSDR-3-NOPORICREATE</del>	3-Error	Cannot create PORT structure	The CLSDRIVER cannot enable this port for processing.	-	"Try rebooting the router. " LOG_STD_ACTION
<del>CLSDR-3-NOREMOVECEP</del>	3-Error	RemoveCep : Cep 0x[hec] not on list	-	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CLSDR3NOREMOVEPORT	3-Error	RemovePort: port 0x[hec] not on list	-	-	LOG_STD_ACTION
CLSDR3-WRONGMSG	3-Error	Should never be here cls message type unknown 0x[hec]	The CLS message type is unknown to the destination logical unit\n DLU.	-	LOG_STD_ACTION
CLUE3CHECKSUM_ERROR	3-Error	CLUE record checksum error in record id [dec] record starting address [hex] new checksum [hex] previous checksum [hex]	CLUE record stored in the CLUE memory had a bad checksum. The \n\ CLUE record was modified by a CLUE client but not committed or by \n\ unknown memory corruption. The CLUE record cannot be accessed.	clue	"Internal CLUE Client software may automatically rectify the error. \n\ However if the error persists reload the unit."
CLUE3CLIENT_REGISTER_FULL	3-Error	Maximum of [dec] CLUE clients registered. Cannot register callback [hex]	-	clue	"Copy the error message exactly as it appears attach outputs from the \n\ show clue and show tech commands and report the error to your technical \n\ support representative."
CLUE3COMMIT_FAILED	3-Error	CLUE cannot commit record id [dec]	The given CLUE record was not committed in the CLUE storage memory.\n\ CLUE record was not allocated by the CLUE client before committing or \n\ there was an error in the internal CLUE record index table. The CLUE \n\ record cannot be accessed.	clue	"Internal CLUE software may automatically rectify the error. However \n\ if the error persists copy the error message exactly as it appears and \n\ report it to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CLUE-3-EOR_CORRUPT	3-Error	CLUE record corruption in end of record field record id [dec] record starting address [hex]	CLUE record's end of record delimiter was corrupted in the CLUE \n\ storage memory. The CLUE record was over-written by the\n\ previous CLUE record or by an unknown memory corruption. The \n\ CLUE record cannot be accessed.	clue	"Internal CLUE Client software may automatically rectify the error. \n\ However if the error persists reload the unit."
CLUE-3-INDEX_BUILD_FAIL	3-Error	Failed to build CLUE internal record index due to [chars]	CLUE expected existence of valid CLUE records in CLUE storage when \n\ building internal record index table. CLUE will fail to build the index\n\ table when CLUE storage does not exist or any CLUE record within the\n\ CLUE storage has some data corruption. CLUE service will not be \n\ available and any data in the CLUE storage cannot be accessed.	clue	"Internal CLUE Client software may automatically rectify the error. \n\ However if the error persists reload the unit."
CLUE-3-INIT_ERROR	3-Error	Failed to initialise the reserved memory for new CLUE context due to [chars]	-	clue	"Copy the error message exactly as it appears attach outputs from the \n\ show clue and show tech commands and report the error to your technical \n\ support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CLUE3INTERNAL_SWERRCR	3-Error	[chars]	Internal Compact Local Unit Exchange CLUE software error reported	clue	"Copy the error message exactly as it appears attach outputs from the \n\ show clue and show tech commands and report the error to your technical \n\ support representative."
CLUE3INVALID_AREA	3-Error	Either address [hex] or size [dec] reserved for CLUE storage area is invalid	-	clue	"Copy the error message exactly as it appears attach outputs from the \n\ show clue and show tech commands and report the error to your technical \n\ support representative."
CLUE3INVALID_REC_SIZE	3-Error	CLUE record size [dec] is invalid to allocate CLUE record [dec]	-	clue	"Copy the error message exactly as it appears attach outputs from the \n\ show clue and show tech commands and report the error to your technical \n\ support representative."
CLUE3INVALID_REC_ID	3-Error	Invalid CLUE record id [dec] has been received so CLUE cannot [chars] it	-	clue	"Copy the error message exactly as it appears attach outputs from the \n\ show clue and show tech commands and report the error to your technical \n\ support representative."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CLUE3NO_SIGNATURE	3-Error	CLUE cannot [chars] record id [dec]	The given CLUE record was not serviced. CLUE storage was not \n\n available or the CLUE storage signature was invalid.	clue	"Internal CLUE software may automatically rectify the error. However \n\n if the error persists copy the error message exactly as it appears and \n\n report it to your technical support representative."
CLUE3NOCLUESPACE	3-Error	CLUE storage has not enough space to allocate record id [dec] and data size [dec]	-	clue	"Copy the error message exactly as it appears attach outputs from the \n\n show clue and show tech commands and report the error to your technical \n\n support representative."
CLUE3NOCLUEMEMORY	3-Error	[dec]-bytes of local memory has not enough space left to reserve [dec]-bytes of CLUE storage	Local memory was not big enough to reserve the required Compact Local \n\n Unit Exchange CLUE storage space.	clue	"Add more local memory."
CLUE3SOR_CORRUPT	3-Error	CLUE record corruption in start of record field record id [dec] record starting address [hex]	CLUE record's start of record delimiter was corrupted in the CLUE \n\n storage memory. The CLUE record was over-written by the\n\n previous CLUE record or by an unknown memory corruption. The \n\n CLUE record cannot be accessed.	clue	"Internal CLUE Client software may automatically rectify the error. \n\n However if the error persists reload the unit."
CM_MONITOR&SENS_KILL	5-Notice	Terminating DNS process	A hardware or software error occurred.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CM_MONICR5DNS_RESP	5-Notice	Sending DNS response to [node]request was for %i	-	-	-
CM_MONICR5DNS_START	5-Notice	Starting DNS process	A hardware or software error occurred.	-	LOG_STD_ACTION
<del>CM_REDUCED_BATT_MAC</del>	4-Warning	Attribute masks are not maintained when entering battery mode. CM MAC addr <[enet]>	Attribute masks are not maintained when entering battery mode \n	cbr-application	LOG_SID_NO_ACTION
<del>CM_REDUCED_BATT_MAC</del>	4-Warning	Entering battery mode failed since no available RBG. CM MAC addr <[enet]>	Entering battery mode failed since no available RBG \n	cbr-application	"Please inspect the configuration file and configured "available RBG"
<del>CM_REDUCED_BATT_MAC</del>	4-Warning	Enter into/exit BM mode failed for CM MAC addr <[enet]>	There maybe resource limitation which induce BM operation failure.\n	cbr-application	LOG_SID_NO_ACTION
<del>CM_REDUCED_BATT_MAC</del>	4-Warning	Exiting battery mode failed since original rcc unavailable. CM MAC addr <[enet]>	Exiting battery mode failed since original rcc unavailable \n	cbr-application	LOG_SID_NO_ACTION
<del>CM_REDUCED_BATT_MAC</del>	4-Warning	CM [enet] forcibly offline because the operation failed as DBC rejected the invalid request DBC client [dec]	DBC failed to change CM BG because the operation was rejected as one invalid request. That cause the CM was not permitted to register again to the original BG. Mark CM offline to avoid CM stuck in reduce mode	cbr-application	LOG_SID_NO_ACTION
<del>CM_REDUCED_BATT_MAC</del>	4-Warning	Attribute masks are not maintained when entering EM mode. CM MAC addr <[enet]>	Attribute masks are not maintained when entering EM mode \n	cbr-application	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CM62_CM154NLEBRC	4-Warning	Receive an invalid EM request message from CM MAC addr <[enet]> request power mode [dec].	Receive invalid requested power mode from CM\n	cbr-application	LOG_STD_NO_ACTION
CM62_CM154NLABRG	4-Warning	Entering EM mode failed since no available RBG. CM MAC addr <[enet]>	Entering EM mode failed since no available RBG \n	cbr-application	"Please inspect the configuration file"
CM_SYNC3NO_BUFFER	3-Error	Unable to transmit message type [dec] from [chars]	A transmit error occurred while sending msg to other CPU due to non-availability of buffer	-	LOG_STD_ACTION
CM_SYNC3RANSMTERRR	3-Error	Unable to transmit message type [dec] from [chars]	A transmit error occurred while sending msg to other CPU due to msg translation	-	LOG_STD_ACTION
CM62_CM154AMCLKINT	4-Warning	[dec]/[dec] ATM Clock Internal Set on [dec]/[dec] too	CM155 ATM Clock Internal is enabled for the other channel \ on the same framer too the framer defines one bit for \ both channels.	gsr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
CM62_CM154FRMROP	4-Warning	Error: [dec]/[dec] [chars] value=0x[node]x	Linecard ATM driver framer operation errors.	gsr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
CM62_CM154FWCKSUM	4-Warning	Port [dec]: [chars] SAR firmware selftest failure expected 0x[node]x obtained 0x[node]x	Linecard ATM SAR firmware checksum errors.	gsr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CM622_CM155-4-OP	4-Warning	Error: [dec]/[dec] [chars]	Linecard ATM driver general operation errors.	gsr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
CM622_CM155-4-RPCMD	4-Warning	[dec]/[dec] [chars] command error: [chars]	Linecard ATM driver handles RP command errors.	gsr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
CM622_CM155-4-RXSARND	4-Warning	[dec]/[dec] RX SAR doing [chars] error: [chars] indication=0x[node]x 0x[node]x 0x[node]x	Linecard ATM driver RX SAR indication errors.	gsr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
CM622_CM155-4-SAROP	4-Warning	Port [dec]: [chars] SAR doing [chars] error: [chars]	Linecard ATM driver SAR operation error.	gsr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
CM622_CM155-4-TXSARND	4-Warning	Port [dec]: TX SAR [chars] command error: [chars] indication=0x[node]x	Linecard ATM driver TX SAR indication error.	gsr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
CM622_CM155-4-VCCLOSE	4-Warning	[dec]/[dec] VC:[node]is close pending	The VC is in the TX SAR close pending state.	gsr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
CM622_CM155-4-VCCMD	4-Warning	[dec]/[dec] VC:[node][chars] error cause: [chars]	CM622/CM155 ATM SAR VC operation error.	gsr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CM622_CM1554VCTYPE	4-Warning	[dec]/[dec] VC:[node]unsupported vc encapsulation type=%u	CM622/CM155 ATM SAR VC operation error.	gsr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
<del>CM622_CM1554VCTYPE</del>	3-Error	iosxe-chassismgr	The idprom contains an invalid environmental monitoring field.	"If this error occurs then parsing of the environmental monitoring data is aborted. Environmental monitoring will be either incomplete or absent entirely."	LOG_SID_RECUR_ACTION
<del>CMAN_LED_ON_OFF</del>	6-Information	iosxe-chassismgr	Slot %d Beacon LED turned[chars]	"Beacon LED turned ON/OFF. This is a notification message only.No action is required."	"This is a notification message only. No action is required."
CMAN_NQ_CMANNIPL	1-Alert	iosxe-chassismgr	CMAN:[chars]\n	"CMAN Initialization has failed."	"Find out more about the error by using the show tech-support privileged EXEC command and by copying the error message exactly as it appears on the console or system log and entering it in the Output Interpreter tool. Use the Bug Toolkit to look for similar reported problems."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CMANNOC CMANN FAL	1-Alert	iosxe-chassismgr	CMAN:[chars]\n	"CMAN Initialization has failed."	"Find out more about the error by using the show tech-support privileged EXEC command and by copying the error message exactly as it appears on the console or system log and entering it in the Output Interpreter tool. Use the Bug Toolkit to look for similar reported problems."
CMANS CMANN FAL	1-Alert	iosxe-chassismgr	CMAN:[chars]\n	"CMAN Initialization has failed."	"Find out more about the error by using the show tech-support privileged EXEC command and by copying the error message exactly as it appears on the console or system log and entering it in the Output Interpreter tool. Use the Bug Toolkit to look for similar reported problems."
CMANCC2 CRASHDUMP	2-Critical	Fatal error calling crashdump error: [dec] [chars]	A fatal condition has occurred causing IOS to crashdump. IOS will\n\ be restarted automatically.	iosxe-chassismgr	LOG_STD_ACTION
CMANCC2 CRASHDUMP	2-Critical	Fatal error calling crashdump error: [dec] [chars]	A fatal condition has occurred causing IOS to crashdump. IOS will\n\ be restarted automatically.	iosxe-chassismgr	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMANCC3MSGDISPATCH	3-Error	Unable to dispatch received message from Chassis Manager	An unexpected condition has occurred while IOS was trying to dispatch a message received from the Chassis Manager.	iosxe-chassismgr	"Verify that all local components are in the proper operational state. If any inconsistency is found it may be corrected by offline and restart of the effected component SPA Carrier Card"
CMANCC3MSGDISPATCH	3-Error	Unable to dispatch received message from Chassis Manager	An unexpected condition has occurred while IOS was trying to dispatch a message received from the Chassis Manager.	iosxe-chassismgr	"Verify that all local components are in the proper operational state. If any inconsistency is found it may be corrected by offline and restart of the effected component SPA Carrier Card"
CMANCC3MSGIPCERR	3-Error	Unable to process received IPC messages from Chassis Manager error: [chars]	An unexpected condition has occurred while IOS trying to process a received IPC message from Chassis Manager.	iosxe-chassismgr	LOG_STD_ACTION
CMANCC3MSGIPCERR	3-Error	Unable to process received IPC messages from Chassis Manager error: [chars]	An unexpected condition has occurred while IOS trying to process a received IPC message from Chassis Manager.	iosxe-chassismgr	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMANCPUNEXHEVENT	3-Error	UDI Auth Process received unknown event maj [hec] min [hec].	UDI auth process has registered to be notified when a process \n\ boolean change event occurs in the router. This message indicates \n\ that this process received an event it did not know how to handle.	iosxe-chassismgr	"Copy the error message exactly as it appears and report it\n\ to your technical support representative."
CMANCPUNEXHEVENT	3-Error	UDI Auth Process received unknown event maj [hec] min [hec].	UDI auth process has registered to be notified when a process \n\ boolean change event occurs in the router. This message indicates \n\ that this process received an event it did not know how to handle.	iosxe-chassismgr	"Copy the error message exactly as it appears and report it\n\ to your technical support representative."
CMANRP2CRASHDUMP	2-Critical	Fatal error calling crashdump error: [dec] [chars]	A fatal condition has occurred causing IOS to crashdump.	iosxe-chassismgr	LOG_STD_ACTION
CMANRP3CMREADFAIL	3-Error	Read from cpld_ha fd [dec] failed errno [dec] event cnt [dec]	Read from cpld_ha device returned 0 bytes.	-	LOG_SID_NO_ACTION
CMANRP3CMSWVERINFO	3-Error	Unable to process software version information using file [chars]. Reason: [chars]. Error: [dec]	An unexpected condition has occurred while IOS was trying to process the software version information file. As a result version information may not be available to an SNMP Manager	iosxe-chassismgr	LOG_SID_NO_ACTION



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CMANRP-3-INVERR	3-Error	Unable to process chassis inventory for file [chars] slot [dec] [chars] error [dec]. Some SPA's may not be fully configured	An unexpected condition has occurred while IOS is trying to process the chassis inventory on startup. IOS can not determine the type and number of all Carrier Cards and SPA's present in the system. Some configuration relating to these SPA's may not be applied and leave the system in an inconsistent state.	iosxe-chassismgr	LOG_STD_ACTION
CMANRP-3-INVERRSPA	3-Error	Unable to process chassis inventory for file [chars] SPA subslot [dec]/[dec] [chars] error [dec]. Some SPA's may not be fully configured	An unexpected condition has occurred while IOS is trying to process the chassis inventory on startup. IOS can not determine the type and number of all Carrier Cards and SPA's present in the system. Some configuration relating to these SPA's may not be applied and leave the system in an inconsistent state.	iosxe-chassismgr	LOG_STD_ACTION
CMANRP-3-MSGDISPATCH	3-Error	Unable to dispatch received TDL message '[chars]' from Chassis Manager. LUID: [chars]	An unexpected condition has occurred while IOS is trying to dispatch to the TDL message handler functions for received TDL messages from Chassis Manager.	iosxe-chassismgr	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMANRP3KDSACNUL	3-Error	Received NULL TDL message from IOS	An unexpected condition in which IOS has received a NULL TDL message from Chassis Manager.	iosxe-chassismgr	LOG_STD_ACTION
CMANRP3MSGPCERR	3-Error	Unable to process received IPC messages from Chassis Manager error: [chars]	An unexpected condition has occurred while IOS is trying to process a received IPC message from Chassis Manager.	iosxe-chassismgr	LOG_STD_ACTION
CMANRP3UNCOMTED	3-Error	'install commit' failed [dec] during reload.	There are uncommitted SMU activity in the system reload will remove this SMU activity with user input install commit is tried but failed with the error code mentioned in message.	iosxe-p-smu	LOG_SID_NO_ACTION
CMANRP3UDEVPERMS	3-Error	An invalid permissions value [chars] was found in a udev file	The udev files for a particular filesystem contain a description the file system. If the permissions attribute is not recognized then this file system may run with incorrect permissions.	iosxe-chassismgr	LOG_SID_NO_ACTION
CMANRP3UNCOMTED	4-Warning	There are uncommitted SMU abort reload and 'install commit' if required	There are uncommitted SMU activity in the system reload will remove this SMU activity use 'install commit' to make it persistent.	iosxe-p-smu	LOG_SID_NO_ACTION
CMANRP6CMHASTAUS	6-Information	RP switchover [chars]	RP switchover events received by chassis manager.	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMANRP6CMNOISWICH	6-Information	RP is not doing switchover	Read from cpld_ha device indicate no switchover event.	-	LOG_SID_NO_ACTION
CMANRP6CMSTATUS	6-Information	Chassis Manager Process is [chars]	The current status of Chassis Manager Process.	-	LOG_SID_NO_ACTION
CMANRP6CMSWREAD	6-Information	RP switchover event triggered	RP switchover event triggered by IOS fastpath.	-	LOG_SID_NO_ACTION
CMANRP6SMU_COMMITTED	6-Information	'install commit' is success.	There were uncommitted SMU activity in the system reload will remove this SMU activity with user input install commit is done.	iosxe-p-smu	LOG_SID_NO_ACTION
CMCC_CER4PROC_DOWN	4-Warning	iosxe-chassismgr	Process[chars] is down	"A process on the given FRU went down"	"Check the logs on the FRU for exact cause. If cause is not known please contact TAC"
CMCC_CER4PROC_RESTART	4-Warning	iosxe-chassismgr	Process[chars] restarted. Please undo and redo any config changes made during process restart	"A process on the given FRU was restarted"	"Check the logs on the FRU for exact cause. If cause is not known please contact TAC"
CMCH_CER4BEACON_LED_TURNED	6-Information	iosxe-chassismgr	Slot %d Beacon LED turned[chars]	"Beacon LED turned ON/OFF. This is a notification message only.No action is required."	"This is a notification message only. No action is required."
CMCC_C2W_INITIALIZATION	0-Emergency	iosxe-chassismgr	The SIP C2W has failed initialization because[chars]	"The C2W bus on the SIP is used to read the shared port adapter (SPA) IDPROM. This error indicates that the SIP C2W bus failed to initialize."	"Examine the logs for C2W driver errors. If the problem persists"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMC@CHASSIS@DIR@LAE	0-Emergency	iosxe-chassismgr	Failed to translate a location to a chasfs object because[chars]	"The system failed to translate a data sensor location to the chassis filesystem (CHASFS) module. This error could be caused by a software defect."	"Restart the SIP. If the problem persists
CMC@CHASSIS@DIR@LAE	0-Emergency	iosxe-chassismgr	Failed to create chassis filesystem object[chars] because[chars]	"The system failed to create a chassis filesystem object. This error could be caused by a software defect or a filesystem failure."	"Restart the SIP. If the problem persists
CMC@CHASSIS@DIR@LAE	0-Emergency	iosxe-chassismgr	Expected chassis filesystem object[chars] not present.	"The system was unable to find an expected chassis filesystem object. This error could be caused by a software defect or a filesystem failure."	"Restart the SIP. If the problem persists
CMC@CHASSIS@DIR@LAE	0-Emergency	iosxe-chassismgr	Failed to watch chassis filesystem object[chars] because[chars]	"The system failed to watch a chassis filesystem object. This error could be caused by a software defect or a filesystem failure."	"Restart the SIP. If the problem persists
CMC@CHASSIS@DIR@LAE	0-Emergency	iosxe-chassismgr	Failed to create chassis filesystem object[chars] property[chars] because[chars]	"The system failed to create a chassis filesystem object property. This error could be caused by a software defect or a filesystem failure."	"Restart the SIP. If the problem persists
CMC@CHASSIS@DIR@LAE	0-Emergency	iosxe-chassismgr	Failed to read chassis filesystem object[chars] property[chars] because[chars]	"The system failed to read a chassis filesystem object property. This error could be caused by a software defect or a filesystem failure."	"Restart the SIP. If the problem persists

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMCC0CHASSIS_OBJ_NOT_PRESENT	0-Emergency	iosxe-chassismgr	Expected chassis filesystem object[chars] property[chars] not present.	"The system cannot locate a chassis filesystem object property. This error could be caused by a software defect or a filesystem failure."	"Restart the SIP. If the problem persists
CMCC0CHASSIS_OBJ_WRITE_FAILED	0-Emergency	iosxe-chassismgr	Failed to write chassis filesystem object[chars] property[chars] because[chars]	"The system failed to write a chassis filesystem object property. This error could be caused by a software defect or a filesystem failure."	"Restart the SIP. If the problem persists
CMCC0CHASSIS_TYPE_INVALID	0-Emergency	iosxe-chassismgr	The chassis type[chars] is invalid.	"The system has detected an invalid chassis type. This error could be caused by a hardware defect	-
CMCC0CPLD_INIT_FAILED	0-Emergency	iosxe-chassismgr	The SIP CPLD has failed initialization :%s	"A SIP complex programmable logic device (CPLD) failed to initialize. This error could be caused by a hardware or software driver defect."	"Examine the logs for CPLD driver or hardware errors. Verify that the software and CPLD versions are compatible."
CMCC0CPLD_INTERRUPT_ENABLE_FAILED	0-Emergency	iosxe-chassismgr	The CPLD initialization has failed because[chars]	"The CPLD interrupt enable failed to initialize. This error could be caused by a hardware defect or CPLD driver defect."	"Examine the logs for CPLD driver or hardware errors. If the problem persists
CMCC0CPLD_I_OCTL_FAILED	0-Emergency	iosxe-chassismgr	A CPLD driver I/O control has failed because[chars]	"A complex programmable logic device (CPLD) I/O driver control has failed. This error could be caused by a hardware or software driver defect."	"Examine the logs for CPLD driver and hardware errors. If the problem persists

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMCC0EVENT_LIBRARY	0-Emergency	iosxe-chassismgr	An event facility initialization or maintenance function failed because[chars]	"An event facility initialization or maintenance function failed. This could be due to a software defect or system resource exhaustion."	"In most cases
CMCC0LOW_CNTRL_MEE	0-Emergency	iosxe-chassismgr	Multi-bit ECC error seen	-	-
CMCC0FPGA_INITIALIZATION	0-Emergency	iosxe-chassismgr	The CC has failed initialization because[chars]. Reloading the card	"The FPGA on the carrier card has failed to initialize. This error could be caused by a hardware"	"Examine the driver logs or hardware errors. Decode the core accompanied with this error."
CMCC0HT_INITIALIZATION	0-Emergency	iosxe-chassismgr	The SIP HyperTransport has failed initialization because[chars]	"A SIP HyperTransport (HT) CPU bus failed to initialize. This error could be caused by a hardware defect or HT driver defect."	"Examine the logs for HT driver or hardware errors. If the problem persists
CMCC0-0-HT_IOCTL	0-Emergency	iosxe-chassismgr	A SIP HyperTransport driver I/O control has failed because[chars]	"A physical layer interface module (PLIM) HyperTransport (HT) driver I/O has failed. This error could be caused by a hardware defect or HT driver defect."	"Examine the logs for HT driver or hardware errors. If the problem persists
CMCC0HTDP_ENABLE	0-Emergency	iosxe-chassismgr	The HTDP initialization has failed because[chars]	"The Hypertransport datapath failed to initialize. This error could be caused by a hardware defect or HTDP driver defect."	"Examine the logs for HTDP driver or hardware errors. If the problem persists

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMCC0IPC_CONNECT_FAILED	0-Emergency	iosxe-chassisMgr	IPC connection to the active RP failed because[chars]	"The inter-process communication (IPC) connection to the active route processor (RP) failed. This error could be caused by a software defect or system resources limitation."	"Restart the SIP."
CMCC0IPC_CONN_INVALID	0-Emergency	iosxe-chassisMgr	An IPC connection has invalid state.	"An inter-process communication (IPC) connection has an invalid state. This error could be caused by a software defect or system resource limitation."	"Restart the SIP."
CMCC0IPC_INITIALIZATION	0-Emergency	iosxe-chassisMgr	IPC initialization failed because[chars]	"An inter-process communication (IPC) initialization failed. This error could be caused by a software defect or system resource limitation."	"Restart the SIP."
CMCC0PCI_RESCAN	0-Emergency	iosxe-chassisMgr	The PCIE bus could not be rescanned because[chars]	"The PCIE bus failed to rescan. This error could be caused by a hardware defect"	-
CMCC0PEER_INVALID	0-Emergency	iosxe-chassisMgr	A peer table entry has invalid state.	"An invalid state occurred in a peer table entry. This error could be caused by a software defect or system resource limitation."	"Restart the SIP."
CMCC0PLIM_HALT	0-Emergency	iosxe-chassisMgr	A PLIM driver has critical error[chars]	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMCCPLIM_INITIALIZ	0-Emergency	iosxe-chassismgr	The PLIM has failed initialization because[chars]	"The physical layer interface module (PLIM) failed to initialize. This error could be caused by a hardware defect or a PLIM driver defect."	"Examine the logs for PLIM driver or hardware errors. If the problem persists
CMCC0-PLIM_IOCTL	0-Emergency	iosxe-chassismgr	A PLIM driver I/O control has failed because[chars]	"A physical layer interface module (PLIM) driver I/O has failed. This error could be caused by a hardware defect or a PLIM driver defect."	"Examine the logs for PLIM driver or hardware errors. If the problem persists
CMCCSIP_INITIALIZ	0-Emergency	iosxe-chassismgr	The SIP Serial Bridge ASIC has failed initialization because[chars]	"The SIP serial bridge ASIC failed to initialize. This error could be caused by a hardware defect	-
CMCCSERVICES_INITIALIZ	0-Emergency	iosxe-chassismgr	Failed to initialize general application services because[chars]	"The system failed to initialize certain application services. This error could be caused by a software defect or system resource limitation."	"Restart the SIP."
CMCCUIPEER_CREATE	0-Emergency	iosxe-chassismgr	Failed to create user interface peer.	"The system failed to create a user interface peer. This error could be caused by a software defect or system resource limitation."	"Restart the SIP."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMCC2BAD_ID_HW	2-Critical	cbr-platform-infra	Failed Identification Test in[chars]. The module[chars] on the slot %d may not be a genuine Cisco product. Cisco warranties and support programs only apply to genuine Cisco products. If Cisco determines that your insertion of non-Cisco memory	-	-
CMCC2BAD_ID_HW_SIR	2-Critical	iosxe-chassismgr	Failed Identification Test in[chars]. The module[chars] on the[chars] may not be a genuine Cisco product. Cisco warranties and support programs only apply to genuine Cisco products. If Cisco determines that your insertion of non-Cisco memory	-	-
CMCC2CC_SPA_MOVE_SM	2-Critical	iosxe-chassismgr	***** CMCC SPA SM was strucked for a minute in state: s_kill_wait for slot %d	-	-
CMCC2ASMRD_NCRD	2-Critical	iosxe-chassismgr	***** CMCC did not received PSM READY event %d sec for slot %d.	"CMCC SPA SM was not received PSM READY for 100 sec."	"do remove hard."
CMCC2CC_SPA_STRUCK	2-Critical	iosxe-chassismgr	***** CMCC SPA SM was strucked for %d seconds for slot %d.	"CMCC SPA SM was strucked for a minute in state: s_kill_wait for the line card."	"move the cmcc spa state machine."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CMCFRU_HWRGUG_FAIL</del>	2-Critical	iosxe-chassismgr	Failed to[chars][chars] hardware programmable on[chars] in[chars].	"Upgrade hw-programmable failed to upgrade the CPLD/FPGA firmware on the given FRU"	"Reload the card and retry to program the hw-programmable. If the card fails to come up please contact TAC"
<del>CMCFRU_HWRGUG_SUCCESS</del>	2-Critical	iosxe-chassismgr	Success to[chars][chars] hardware programmable on[chars]. Please execute the POST Upgrade CLI: upgrade hw-programmable cable <r0/r1> daybreak post-upgrade slot <slot> to finish the upgrade process	"Upgrade hw-programmable success to upgrade the CPLD/FPGA firmware on the given FRU"	"No action is required. This is informational message"
<del>CMCFRU_FPGA_FAIL</del>	2-Critical	iosxe-chassismgr	Failed to upgrade field programmable device on[chars] in slot %d.	"Upgrade of field programmable device failed"	"Reload the card and retry to program the field programmable device. If the card fails to come up please contact TAC"
<del>CMCFRU_FPGA_POWER_CYCLE</del>	2-Critical	iosxe-chassismgr	Power cycled the[chars] in slot %d	-	-
<del>CMCFRU_FPGA_SUCCESS</del>	2-Critical	iosxe-chassismgr	Successfully upgraded the field programmable device on[chars] in slot %d. Power-cycling the line card.	"Upgrade field programmable device was successful on the given FRU. Line card needs to be power-cycled or removed and re-inserted for upgrade to take effect."	"Line card needs to be power cycled or removed and re-inserted for the upgrade to take effect."
<del>CMCFRU_LINE_CARD_POWER_RESET</del>	2-Critical	iosxe-chassismgr	***** Detected power reset for the Line card in slot %d. To recover from the error	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMCC-3-C2W_READ	3-Error	iosxe-chassismgr	An C2W read has failed because[chars]	"An attempt to read the C2W bus has failed. This error could be caused by a hardware or software defect."	"Examine the logs for C2W driver errors."
CMCC-3-C2W_WRITE	3-Error	iosxe-chassismgr	An I2C write has failed because[chars]	"An attempt to write to the inter-integrated circuit (I2C) has failed. This error could be caused by a hardware or software defect."	"Examine the logs for I2C driver errors."
CMCC3CARD_MISMATCH	3-Error	iosxe-chassismgr	The CONFIG&PICTYPE in slot %d mismatch : CONFIG :[chars]	-	-
CMCC3CHDISWAP_CIRCUIT	3-Error	iosxe-chassismgr	Hot Swap Circuit has failed for bay %u	"The Hot Swap Circuit for the SPA bay has been tripped. This error could be caused by bad SPA or CC hardware."	"Examine the CMCC and PSM OIR logs. Verify whether the recovery reload could bring up the SPA"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMC3CFGMDROPHD	3-Error	Config queue is full command was dropped slot [dec]	Sending a config command was retried. The receiving queues were still full after retries therefore the command was dropped.	cip	"Issue the<Bold>debug channel events<NoBold> command and " "try each of the following tasks in sequence. If an action " "corrects the problem the remaining tasks do not need to be " "performed.\n" " <del>Bullet</del> <par>Reissue the configuration command. " " <del>Bullet</del> <par>Clear the interface using the <Bold>clear interface<NoBold> " "command. " " <del>Bullet</del> <par>Reload the microcode. " " <del>Bullet</del> <par>Reload the router.\n" "<Body><par>If the error still occurs copy the error message exactly " "as it appears. Record the output from the following commands:\n" " <del>Bullet</del> <par><Bold>show tech <NoBold> " " <del>Bullet</del> <par><Bold>show log <NoBold>\n" "<Body><par>Provide this information to your technical support " "representative."
CMC3DRSNGEHTERRC	3-Error	iosxe-chassismgr	Single-bit DRAM ECC error: mme: %u	-	-
CMC3HOWCONIRLSE	3-Error	iosxe-chassismgr	Single-bit ECC error seen	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMCC-3-FPGA_FAIL	3-Error	iosxe-chassismgr	%s FPGA error detected:[chars]	"A SIP field programmable logic device failure detected. This error could be caused by a hardware or software driver defect."	"Examine the logs for FPGA driver or hardware errors. Verify that the software and firmware versions are compatible."
CMCC-3-HB_TIMEOUT	3-Error	iosxe-chassismgr	Periodic Heartbeat message from RP timed out.	"RP sends periodic heartbeat message to the SIP. The SIP did not receive this heartbeat message for last timeout period."	"Examine the system logs for errors."
CMCC-3-HT_DETACH	3-Error	iosxe-chassismgr	The SIP HyperTransport has failed detachment because[chars]	"A SIP HyperTransport (HT) CPU bus failed to detach from software during SIP MDR. This error could be caused by a hardware defect or HT driver defect."	"Examine the system logs for errors."
CMCC-3-IDPROM_ACCESS	3-Error	iosxe-chassismgr	Failed access or process an IDPROM because[chars]	"The system failed to access an IDPROM or an IDPROM process failed. This error could be caused by a hardware defect"	-
CMCC-3-IDPROM_SENSOR	3-Error	iosxe-chassismgr	One or more sensor fields from the idprom failed to parse properly because[chars].	"One or more IDPROM sensors failed to parse. This error most likely occurred because of a checksum failure in the IDPROM."	"Examine the logs for IDPROM or hardware errors."
CMCC-3-RESNDY_SUPER	3-Error	iosxe-chassismgr	"Standby supervisor in slot %d is not compatible with the Active supervisor; Standby Supervisor will be reloaded."	"Supervisor found in Standby slot may not be fully compatible with the active supervisor and may cause issues."	"Use supervisors with the same specifications to enable High Availablity features."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMCC-3-IPCBUFFAIL	3-Error	Unable to obtain IPC resources	The InterProcess Communication IPC service used by the TN3270	-	"The CMCC will not load properly. Try the reload command again. If "this message recurs call your technical support representative for "assistance."
CMCC-3-IPCDNSFAIL	3-Error	DNS lookup failed - [chars]	The InterProcess Communication IPC service used by the TN3270	-	"Verify that the proper revisions of code are selected."
CMCC-3-IPCINITFAIL	3-Error	Unable to initialize IPC [chars] services	The InterProcess Communication IPC service used by the TN3270	-	"The CMCC will not load properly. The router must be reloaded to clear "the problem."
CMCC-3-IPCINVALID	3-Error	Invalid IPC request [dec] received from [hec]	The InterProcess Communication IPC service used by the TN3270	-	"Verify that the proper revisions of code are selected."
CMCC-3-UPGRADEFAIL	3-Error	iosxe-chassismgr	The FPGA upgrade request for linecard in switch %d slot %d failed.	"Upgrade of FPGA on the linecard failed"	"Reload the card and retry to program the field programmable device. If the card fails to come up please contact TAC"
CMCC-3-POWERCYCLEFAIL	3-Error	iosxe-chassismgr	Power cycle failed for the linecard in switch %d slot %d	-	-
CMCC-3-ASISHPWATCH	3-Error	iosxe-chassismgr	Failed to initialize a watch on the active rp because[chars]	"The cc process has failed to setup a watch on the rp chasfs active-rp property. This error is likely caused by a problem with chasfs as a whole."	"Examine the logs to determine the exact reason for the failure."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMCMESSAG_RESPN	3-Error	iosxe-chassismgr	An invalid message response was received because[chars]	"An invalid message response was received. This could be due to a software defect or system resource exhaustion."	"In most cases
CMCNWOKCCKCAL	3-Error	iosxe-chassismgr	The SIP network clock jitter attenuator calibration fails	"The SIP network clock jitter attenuator calibration can not complete within certain time. This would incur some SPA LOS alarms or other error events for some SPA port types."	"Restart the SIP"
CMCNWOKCCKCASP	3-Error	iosxe-chassismgr	The SIP network clock jitter attenuator is calibrating	"The SIP network clock jitter attenuator is calibrating after device initialization stage."	"Restart the SIP if SPA LOS alarms are seen after this."
CMCNWOKCCKCDH	3-Error	iosxe-chassismgr	The SIP network clock jitter attenuator has entered digital holdover	"A SIP network clock jitter attenuator has entered digital holdover mode and certain SPAs may report LOS alarms."	"Restart the SIP."
CMCNWOKCCKCIS	3-Error	iosxe-chassismgr	The SIP network clock jitter attenuator has lost signal	"A SIP network clock jitter attenuator has lost signal from the WAN PLL and certain SPAs may report LOS alarms."	"Restart the SIP."
CMCC3PLIM_DETACH	3-Error	iosxe-chassismgr	The PLIM has failed detachment from software because[chars]	"The physical layer interface module (PLIM) failed to detach from software. This error could be caused by a hardware defect or a PLIM driver defect."	"Examine the system logs for errors."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CMCC-3-PLIM_RESTART	3-Error	iosxe-chassismgr	The PLIM has failed to restart because[chars]	"The physical layer interface module (PLIM) failed to restart during SIP MDR. This error could be caused by a hardware defect or a PLIM driver defect."	"Examine the system logs for errors."
CMCC-3-PLIM_STATUS	3-Error	iosxe-chassismgr	No format	"A physical layer interface module (PLIM) HyperTransport (HT) driver I/O has failed. This error could be caused by a hardware defect or an HT driver defect."	"Examine the logs for PLIM or hardware errors."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMCC-3-RSETFAIL	3-Error	Interface [chars]: Error [node]4x [chars]	An error occurred sending an interface enable or disable command.	cip	"The interface was reset by the software and the condition " "rectified. If that did not occur then issue the " " <b>debug</b> channel events<NoBold> command and " "try each of the following tasks in sequence. If an action " "corrects the problem the remaining tasks do not need to be " "performed.\n" " <b>&lt;Bullet&gt;&lt;par&gt;</b> Clear the interface using the <b>&lt;Bullet&gt;&lt;par&gt;</b> clear interface<NoBold> " "command. " " <b>&lt;Bullet&gt;&lt;par&gt;</b> Reload the microcode. " " <b>&lt;Bullet&gt;&lt;par&gt;</b> Reload the router.\n" " <b>&lt;Body&gt;&lt;par&gt;</b> If the error still occurs copy the error message exactly " "as it appears. Record the output from the following commands:\n" " <b>&lt;Bullet&gt;&lt;par&gt;&lt;Bold&gt;</b> show tech <NoBold> " " <b>&lt;Bullet&gt;&lt;par&gt;&lt;Bold&gt;</b> show log <NoBold>\n" " <b>&lt;Body&gt;&lt;par&gt;</b> Provide this information to your technical support " "representative."
CMC3800BY1AK1AL	3-Error	iosxe-chassismgr	Failed to bringup the Interlaken interface. Cause:[chars]	"Interlaken Rx or Tx failed for this card. This error could be caused by a hardware or software driver defect."	"Reload the Linecard. If the problem still persists

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMCC3-SIP_MDR_FAIL	3-Error	iosxe-chassismgr	The SIP failed Minimal Disruptive Restart because[chars]	"The SIP failed Minimal Disruptive Restart. Minimal Disruptive Restart process is aborted and an attempt will be made to recover the SIP by resetting the SIP hardware."	"Examine the system logs for errors."
CMCC3-HOSWPCKTAL	3-Error	iosxe-chassismgr	SPA on bay %u has tripped the Hot Swap Circuit during power-up.	"The Hot Swap Circuit for te SPA bay has been tripped. This error could be caused by bad SPA hardware."	"Examine the CMCC and PSM OIR logs. Verify whether the recovery reload could bring up the SPA"
CMCC3-SPA_MDR_FAIL	3-Error	iosxe-chassismgr	The SPA in bay %u failed Minimal Disruptive Restart because[chars]	"The SPA in bay %u failed Minimal Disruptive Restart. Minimal Disruptive Restart process is aborted and an attempt will be made to recover the SPA by resetting the SPA hardware."	"Examine the system logs for errors."
CMCC3-ONLINEQIRMAE	3-Error	iosxe-chassismgr	The online request for SPA in subslot %d/%u was terminated because[chars]	"The online request for SPA in subslot %d/%u was terminated."	"Examine the system logs for errors."
CMCC3-PSEUDO OIR VFT	3-Error	iosxe-chassismgr	The PSEUDO OIR VFT is not implemented for bay %d	"The pseudo OIR vft not implemented for this platform"	"Do nothing"
CMCC3-SPA_SFT_SICPAL	3-Error	iosxe-chassismgr	The SPA in bay %u could not be soft stopped because[chars]	"The SPA in bay %u could not be soft stopped. An attempt will be made to recover the SPA by resetting the SPA hardware."	"Examine the system logs for errors."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMCC-3-SSD_PIDA_OIR	3-Error	iosxe-chassismgr	Hot insertion/removal of SSD module in %d/%d not supported. Please reload the router with SSD module installed in bay 3	"Hot swapping of SSD is not supported"	"Reload the router with SSD module installed in bay 3."
CMCC-3- <del>STANDBY</del> LINKERR	3-Error	iosxe-chassismgr	Standby EOBC link error detected.	"Standby EOBC link error: either link state is down	-
CMCC-3-UNKENCAP	3-Error	Interface [chars]: unknown encapsulated msg[dec] len[dec]	-	-	-
CMCC-3- <del>UNKNOWN</del> 3RDPMODIE	3-Error	iosxe-chassismgr	Unknown 3rd-party module was inserted in subslot %d/%d. please check whether the 3rdparty-mode is configured for this subslot	"Unknown 3rd-party module was inserted in the given subslot."	"Examine the system logs for errors."
CMCC-3- <del>UNKNOWN</del> SPAIC	3-Error	iosxe-chassismgr	Unknown SPA was inserted in slot %d	"Unknown SPA was inserted in the given slot."	"Remove the unsupported SPA line card and upgrade the software as needed."
CMCC-3- <del>UNSUPPORTED</del> LINE	3-Error	iosxe-chassismgr	An unsupported card of type[chars] is inserted in slot %d of the chassis. Remove the card from the chassis or upgrade to an image which supports the card	"Unsupported line card was inserted in the given slot."	"Remove the unsupported SPA line card and upgrade the software as needed."
CMCC-4-CFGFAIL	4-Warning	Interface [chars]: configuration command [chars] [chars] failed	An encapsulated control message had a size smaller than the minimum expected size. The message was dropped.	cip	LOGS_IDS_HTECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMCC4FDNSNOADDR	4-Warning	DNS lookup failed - the DNS server has no entry for hostname [chars]	The InterProcess Communication IPC service used by the TN3270	-	"Verify that the DNS server entries are up to date."
CMCC5-C9400X_LC	5-Notice	iosxe-chassismgr	C9400X-SUP-2 supports 240G per slot with[chars] installed in Slot %d	"Informational message that 480G Linecard is installed in the chassis with Supervisor card that supports only 240G per slot."	"Informational notification. No action is required."
CMCC5EZMAN_HB_MISSED	5-Notice	asr1k-ether-lc	CMCC Missed %u Heartbeats from EZMAN	-	-
CMCC5DNSQUERYTIMEOUT	5-Notice	DNS lookup failed - query to DNS server [chars] timed out	The InterProcess Communication IPC service used by the TN3270	-	"Check the status of the DNS server."
CMCC5DNSSERVERUNREACH	5-Notice	DNS lookup failed - DNS server [node]is unreachable	The InterProcess Communication IPC service used by the TN3270	-	"Check for available routes to DNS servers."
CMCC5SERIALSHOCKEVENT	5-Notice	iosxe-chassismgr	No format	"A serial bridge I/O event has occurred. This event is not serious but is logged for diagnostic purposes."	"No user action is required."
CMCC5SERIALRXALIGNMENT	5-Notice	asr1k-chassismgr	Interlaken Rx Alignment Status[chars]	-	-
CMCC5SPA_MDR_DONE	5-Notice	iosxe-chassismgr	SPA%u completed Minimal Disruptive Restart	"Informational message that the Minimal Disruptive Restart of a particular SPA has completed."	"Informational notification. No action is required."
CMCC5SPA_MDR_INIT	5-Notice	iosxe-chassismgr	SPA%u initiated Minimal Disruptive Restart	"Informational message that the Minimal Disruptive Restart of a particular SPA has begun."	"Informational notification. No action is required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMCC6ADAPTERCHNG	6-Information	Interface [chars]: adapter type changed from [chars] to [chars]	The <Bold> channel-protocol <NoBold> configuration command sent after a reset failed to complete successfully.	cip	"The channel data transfer rate was reset to the default value. Reissue " "the configuration command."
CMC6IOWCNFLOCFHR	6-Information	iosxe-chassismgr	Flow control error seen	-	-
<del>CMC6HWUPADM1266S</del>	6-Information	iosxe-chassismgr	Hardware programmable ADM1266 Configurations on[chars] in slot[chars] were successfully programmed.	"The hw-programmable ADM1266 configuration was upgraded sucesfully"	"No action is required. This is informational message"
<del>CMC6HWUPLMK0332S</del>	6-Information	iosxe-chassismgr	Hardware programmable LMK03328 Configurations on[chars] in slot[chars] were successfully partially programmed	-	-
<del>CMC6HWUPLMK0332S</del>	6-Information	iosxe-chassismgr	Hardware programmable LMK03328 Configurations on[chars] in slot[chars] were successfully programmed.	"The hw-programmable LMK03328 configuration was upgraded sucesfully"	"No action is required. This is informational message"
<del>CMC6HWUPPSOC0332S</del>	6-Information	iosxe-chassismgr	Hardware programmable PSOCs on[chars] in slot[chars] were set in the golden mode. The card will reload to finish the upgrading	"The hw-programmable PSOCs were set in the golden mode for FPD"	"No action is required. This is informational message"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMC@HWPURPSOC@S	6-Information	iosxe-chassismgr	Hardware programmable PSOCs on[chars] in slot[chars] are upgrading	-	-
CMC@HWPURPSOC@S	6-Information	iosxe-chassismgr	Hardware programmable PSOCs on[chars] in slot[chars] were successfully programmed. The card will reload to make new firmware work.	"The hw-programmable PSOC was upgraded succesfully"	"No action is required. This is informational message"
CMC@HWPURPSOC@S	6-Information	iosxe-chassismgr	Hardware programmable TPS40422 Configurations on[chars] in slot[chars] were successfully partially programmed	-	-
CMC@HWPURPSOC@S	6-Information	iosxe-chassismgr	Hardware programmable TPS40422 Configurations on[chars] in slot[chars] were successfully programmed.	"The hw-programmable TPS40422 configuration was upgraded succesfully"	"No action is required. This is informational message"
CMC@HWPURPSOC@S	6-Information	iosxe-chassismgr	Field programmable device on[chars] in slot %d is being upgraded. It will take about 2 mins to finish the upgrade. Please do not reload or power-cycle this card while upgrade is in progress.	"The field programmable device on the FRU is upgrading"	"No action is required. This is informational message"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CMC@RUICURADERRQD</del>	6-Information	iosxe-chassismgr	Found mismatch between the Line card FPGA versions bundled in Software and programmed in Hardware in slot %d. FPGA version bundled in SW:[hex]	-	-
<del>CMC@RUICURADERRQD</del>	6-Information	iosxe-chassismgr	Slot %d needs firmware upgrade. Firmware upgrade is traffic impacting. To perform firmware upgrade use any of the 3 options: Option 1: Perform physical removal and insertion of the line card. Option 2: Run the <CLI> 'hw-module subslot %d/0 oir power-cycle' </CLI>. Option 3: Perform manual upgrade using <CLI> 'upgrade hw-programmable all filename bootflash: all' </CLI>. Use <CLI>'show firmware version all'</CLI> to know the mismatch	"New version bundled in Software & Current Hardware running version is not latest. upgrade is needed. please follow the options provided"	To perform firmware upgrade use any of the 3 options: Option 1: Perform physical removal and insertion of the line card Option 2: Run the <CLI> 'hw-module subslot <slot>/0 oir power-cycle' </CLI> Option 3: Perform manual upgrade using <CLI> 'upgrade hw-programmable all filename bootflash: all' </CLI> Use <CLI>'show firmware version all'</CLI> to know the mismatch
<del>CMC@RUVERMSMACH</del>	6-Information	iosxe-chassismgr	%s: Found mismatch between the versions bundled in Software and programmed in Hardware in slot %d. Version Present in HW:[hex]	-	-
<del>CMC@RAPRDNRQD</del>	6-Information	iosxe-chassismgr	FPGA version on linecard in switch %d slot %d is 0x%x	"Upgrade of FPGA on the linecard is not required."	"No action required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CMC@CPA@FRU@PWCY@HDE</del>	6-Information	iosxe-chassismgr	Power cycled the linecard in switch %d slot %d	-	-
<del>CMC@CPA@FRU@DS@RT</del>	6-Information	iosxe-chassismgr	Linecard fpga device in switch %d slot %d is being upgraded. It will take about 5 mins to complete the upgrade Linecard will power-cycled automatically during this process. Please do not reload or power-cycle the linecard when upgrade is in progress	"The fpga device on the linecard is upgrading"	"No action required."
<del>CMC@CPA@FRU@DS@CS</del>	6-Information	iosxe-chassismgr	Successfully upgraded the field programmable device on linecard in switch %d slot %d. The line card will be power cycled	Upgrade field programmable device was successful on the given FRU. Linecard needs to be power-cycled or removed and re-inserted for upgrade to take effect.	Line card needs to be power cycled or removed and re-inserted for the upgrade to take effect.
<del>CMC@MGM@SP@NSERT</del>	6-Information	iosxe-chassismgr	transceiver module inserted in[chars]	"The online insertion and removal (OIR) facility detected a newly inserted transceiver module for the interface specified in the error message. "	"No action required."
<del>CMC@MGM@SP@RM@ED</del>	6-Information	iosxe-chassismgr	Transceiver module removed from[chars]	"The online insertion and removal (OIR) facility detected the removal of a transceiver module from the interface specified in the error message. "	"No action required."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CME4SENCRNT_FAILED	3-Error	iosxe-binos-utils	Sensor (%s) initialization failed due to[chars].	"This error indicates that environmental monitor software cannot initialize the sensor. The software will not register and monitor this sensor. This could occur when the IDPROM has a bad I2C address for this sensor."	LOG_SID_RECUR_ACTION
CME4OBFL_NT_FAILED	4-Warning	iosxe-binos-utils	OBFL initialization failed.	"This error indicates the OBFL dedicated filesystem is not mounted. OBFL diagnostic information will not be retained for customer troubleshooting."	LOG_SID_RECUR_ACTION
CMEXML3ABORIEEXEC	3-Error	\ CME XML Client Request Aborted request [chars]\n	-	-	-
CMEXML3ABORIEEXEC	3-Error	\ CME XML Client Request Aborted request [chars]\n	-	-	-
CMEXML3-ERREXEC	3-Error	\ CME XML Client Request Failed at [dec] request [chars]\n	-	-	-
CMEXML3-ERREXEC	3-Error	\ CME XML Client Request Failed at [dec] request [chars]\n	-	-	-
CMEXML6SIARIEEXEC	6-Information	\ CME XML Client Request Start request [chars]\n	-	-	-
CMEXML6SIARIEEXEC	6-Information	\ CME XML Client Request Start request [chars]\n	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMCCHASSISPROPERTY_CREATE	0-Emergency	iosxe-chassismgr	Failed to create chassis filesystem object[chars] property[chars] because[chars]	"A chassis filesystem property was not properly created."	"In most cases
CMCCHASSISPROPERTY_SET	0-Emergency	iosxe-chassismgr	Failed to write chassis filesystem object[chars] property[chars] because[chars]	"A chassis filesystem property failed to write."	"In most cases
CMFC3IDPROM_ACCESS	3-Error	iosxe-chassismgr	Failed to access or process IDPROM '%s':[chars]	"Failed access or process an IDPROM. This could be due to a hardware defect	-
CMFCPLD_INITIALIZATION	0-Emergency	iosxe-chassismgr	CPLD initialization has failed because[chars]	"The CPLD has failed to initialize. This could be due to a hardware or software driver defect."	"Examine the hardware and CPLD driver logs and see if the logs provide information about a correctable problem. If the problem is not correctable or the logs are not helpful
CMFP0-CPLD_IOCTL	0-Emergency	iosxe-chassismgr	A CPLD driver I/O control has failed because[chars]	"A complex programmable logic device (CPLD) I/O driver control has failed. This error could be caused by a hardware or software driver defect."	"Examine the logs for CPLD driver and hardware errors. If the problem persists
CMF0EVENT_LIBRARY	0-Emergency	iosxe-chassismgr	An event facility initialization or maintenance function failed because[chars]	"An event facility initialization or maintenance function failed. This could be due to a software defect or system resource exhaustion."	"In most cases

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMFP0SPI4_MUX_HALT	0-Emergency	iosxe-chassismgr	SPI4 MUX driver has detected a critical error[chars]	"A SPI4 MUX driver has failed or detected a critical hardware fault. This could be due to a hardware defect or driver defect."	"The only corrective action is to restart the FP"
CMFP2-BAD_ID_HW	2-Critical	cbr-platform-infra	Failed Identification Test in[chars]. The module[chars] may not be a genuine Cisco product. Cisco warranties and support programs only apply to genuine Cisco products. If Cisco determines that your insertion of non-Cisco memory	-	-
CMFP2-DMA_DOWNLOAD_FAILED	2-Critical	iosxe-chassismgr	Critical Error is detected while downloading the FPGA. After this card will reboot.	"Due to timing issue in DMA sometime FPGA download failure is seen"	"Contact your Cisco technical support representative and provide the system report and crash file."
CMFP2-UADP_EVENT	2-Critical	iosxe-chassismgr	UADP EVENT (ASIC #%d[chars])	Unified Access Datapath ASIC Event	Copy the message exactly as it appears on the console or in the system log.
CMFP3CHD_ECSR_ERROR	3-Error	iosxe-chassismgr	"An error has been detected on the ECSR bus"	"An error has been detected on the ECSR bus. This may cause problems when accessing the forwarding processor"	"Some of these errors are catastrophic and others are not. If the FRU did not restart assume corrective action was taken. Please check the chassis-manager logs for errors."
CMFP3CHD_ERP_ERROR	3-Error	iosxe-chassismgr	"An error has been detected on the ERP bus (cause %d	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMF3DR_NCLEBITRROR	3-Error	iosxe-chassismgr	Single-bit DRAM ECC error: mme: %u	-	-
CMF3DPPVACINK_HROR	3-Error	iosxe-chassismgr	DPP Mac Link failed[chars]	"One or more Mac links of DPP blocks failed. It could be because of a configuration error or hardware failure."	"Note the time of the error message and examine show hardware platform cman fp for detailed Report. "
CMF3DPSERDES_SYNCRROR	3-Error	iosxe-chassismgr	UADP fabric interface synchronisation[chars]	"One of more UADP fabric interface Serdes failed to sync	-
CMF3FPGA_IMG_ABSENT	3-Error	iosxe-chassismgr	FPGA image is absent please contact Cisco technical support representative.	"Due to corruption is file system FPGA images are deleted."	"Contact your Cisco technical support representative and provide the tracelogs."
CMF3HB_TIMEOUT	3-Error	iosxe-chassismgr	Periodic Heartbeat message from RP timed out.	"RP sends periodic heartbeat message to the ESP. The ESP did not receive this heartbeat message for last timeout period."	"Examine the system logs for errors."
CMF3HT_FATAL_ERROR	3-Error	iosxe-chassismgr	Failed to initialize the HyperTransport interface to the QFP	"The HyperTransport interface to the QFP failed to initialize completely. Software will restart the ESP to recover"	"No action is required."
CMF3IDPROM_ACCESS	3-Error	iosxe-chassismgr	Failed access or process an IDPROM because[chars]	"Access to an IDPROM failed due to a hardware or software defect	-
CMF3IDPROM_SENSOR	3-Error	iosxe-chassismgr	One or more sensor fields from the idprom failed to parse properly because[chars].	"Output from the IDPROM sensors failed to parse	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMFP3MASTERSHIP_UPDATE	3-Error	iosxe-chassismgr	An error (%s) has occurred while communicating the mastership role of this FP to the CPP. The FP is currently[chars]	"An error occurred while communicating a change in the state (Active	-
CMFP3MASTERSHIP_WATCH	3-Error	iosxe-chassismgr	Failed to initialize a watch on the active rp because[chars]	"The fp process has failed to setup a watch on the rp chasfs active-rp property. This error is likely caused by a problem with chasfs as a whole."	"Examine the logs to determine the exact reason for the failure."
CMFP3N2_DDR_MBE	3-Error	iosxe-chassismgr	The encryption processor has detected an uncorrectable multi-bit error in memory at address %d	"The encryption processor has detected an uncorrectable multi-bit in memory. This could be due to a hardware defect."	"Examine the logs for encryption processor hardware errors."
CMFP3N2_FATAL_ERROR	3-Error	iosxe-chassismgr	"An error has been detected on encryption processor: type[chars]"	"An error has been detected on encryption processor."	"Please check the chassis-manager logs for errors."
CMFP3N2_INTERRUPT	3-Error	iosxe-chassismgr	"Crypto device overloaded. : type[chars]: 0x%08X"	"An exception has been detected on encryption processor."	"Please lower crypto traffic rate. If the error still happens
CMFP3OCT_DRV_ERROR	3-Error	iosxe-chassismgr	"An error has been detected on encryption processor:[chars]:[chars]"	"An error has been detected on encryption processor."	"Please check the chassis-manager logs for errors."
CMFP3SBUS_FATAL_ERROR	3-Error	iosxe-chassismgr	SBUS Controller not responding	-	-
CMFP3SIF_SERDES_SYNC_ERROR	3-Error	iosxe-chassismgr	Sif Serdes Sync Failed for Supervisor Failure Bitmap 0x%x	"One of more Supervisor ASIC Sif Serdes failed to sync	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMPSPI4_MUX_STATUS	3-Error	iosxe-chassismgr	No format	"A SPI4 MUX driver has failed or detected a information hardware fault. This could be due to a hardware defect or driver defect."	"Examine the logs for SPI4 MUX and hardware errors."
CMSENDYOC_LINK_ERR	3-Error	iosxe-chassismgr	Standby EOBC link error detected.	"Standby EOBC link error: either link state is down	-
CMPCRYPTO_MODULE	6-Information	iosxe-chassismgr	Crypto Hardware Module is[chars]	"The log is to indicate whether Crypto Hardware Module IPSECHW is physically inserted in the chassis."	"No action is required."
CMPCUP_SERDES_SYNC	6-Information	iosxe-chassismgr	UADP fabric interface synchronisation[chars]	"The log is to indicate UADP fabric interface Serdes Sync succeeded during intialization of setup. "	"No action is required."
CMPCN2_DRV_UPDATE	6-Information	iosxe-chassismgr	Hardware crypto device disabled.[chars]:[chars]	"A crypto device driver has failed or detected a hardware fault. This could be due to a hardware defect or driver defect."	"The only corrective action is to restart the ESP"
CMIB2DPROM_INVALID	2-Critical	iosxe-chassismgr	Invalid IDPROM assembly number 0x%04X. IDPROM update required	"IDPROM assembly number is not supported."	"IDPROM update is required"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CMBRCHRTVALERR</del>	3-Error	iosxe-csl	Throughput[chars][chars] - failed to persist throughput of [chars] kbps. Error:[chars]	"Status indicating that a failure was observed during the writing of the throughput to persistent store. The error reason may shed light on the cause. The throughput value may have be used to configure the CPP hardware."	"Examine the ios
<del>CMBRCHRTVALERR</del>	3-Error	iosxe-csl	Throughput[chars][chars]	-	-
CMLIB-4-FW_CHECK	4-Warning	iosxe-chassismgr	slot[chars]:[chars] current firmware version is[chars]	-	-
<del>CMBRCHRTVALERR</del>	6-Information	iosxe-csl	Throughput[chars][chars]	-	-
<del>CMBRCHRTVALERR</del>	3-Error	Current config size is greater than supported size [dec]. Config CLI will not be synced to Centrally Managed Mobility Agents.	The Maximum supported configuration size which can be synced has been reached hence no new configuration will be synced from Mobility Controller to Centrally Managed Mobility Agents.	accsw-ease-of-use	"Save the current configuration on the Mobility " "Controller so that the existing configuration can be synced to " "the Centrally Managed Mobility Agents."
<del>CMBRCHRTVALERR</del>	3-Error	Failure in adding to [chars] registry	Could not add a function to the registry	accsw-ease-of-use	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CMERRMNOENRND</del>	6-Information	This Mobility Agent is no more Centrally Managed.	This Mobility Agent is no more Centrally Managed as the feature has either been disabled on the Controller or the Controller does not support this capability. Check the output of show wireless mobility summary on controller.	accsw-ease-of-use	"show wireless mobility " "summary"
<del>CMKONGNOAIOWD</del>	6-Information	Centrally Managed MA: \[chars]\ cannot be locally configured.	This Mobility Agent is Centrally Managed hence this CLI is not allowed. Configuration needs to be done on the Mobility Controller.	accsw-ease-of-use	"show cmm config"
<del>CMKONGSINCSAEMG</del>	6-Information	Saving config rev#[node]u received from Mobility Controller.	On receiving config from Mobility Controller the config is automatically saved on the Mobility Agent	accsw-ease-of-use	-
<del>CMERRSINCEPREND</del>	6-Information	The Mobility Controller wireless management interface IP Address has been modified. Please reload the Mobility Controller.	The Mobility Controller wireless management interface IP Address has been modified. Please reload the Mobility Controller as this IP Address is used as the Domain ID for Central Management.	accsw-ease-of-use	LOG_SID_NO_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CMPMEMIPADRCONFLICT</del>	4-Warning	Conflict with CMP IP address [node]Reissuing a new CMP IP address to member [dec]	The cluster commander found a conflict with the assigned CMP IP address of the member. A new unique CMP IP address is assigned to the member.	c2900-x1-cluster	"This is a warning message only. The commander already assigned a new unique address to the member. Please clear any open TCP connections on the member using 'clear tcp' command."
CMP-5-ADD	5-Notice	The Device is added to the cluster Cluster Name: [chars] CMDR IP Address %i	The device is added to the cluster	c2900-x1-cluster	LOG_SID_NO_ACTION
<del>CMPMEMBRCONGUDAE</del>	5-Notice	Received member configuration from member [dec]	Received member configuration	c2900-x1-cluster	LOG_SID_NO_ACTION
<del>CMPMGMIVLANCHNG</del>	5-Notice	The management vlan has been changed to [dec]	The management vlan has been changed	c2900-x1-cluster	LOG_SID_NO_ACTION
<del>CMPNRUDSETOOEG</del>	5-Notice	Number of neighbors in neighbor update is [node]maximum number of neighbors allowed in neighbor update is %u	The number of cluster neighbors in the clustering neighbor update packet exceeds the number of neighbors supported by the clustering module design	c2900-x1-cluster	LOG_SID_NO_ACTION
CMP-5-REMOVE	5-Notice	The Device is removed from the cluster Cluster Name: [chars]	The device is removed from the cluster	c2900-x1-cluster	LOG_SID_NO_ACTION
<del>CMPNDRVACTSDOWN</del>	3-Error	iosxe-chassismgr	WARNING: The card on slot %d hit abnormal voltage or current. it has been auto-shutdown by hardware for protection	"The FRU hit abnormal voltage or current and has been auto-shutdown in order to protect the components."	LOG_SID_RECUR_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CNENOCMPFRWACTDOWN</del>	3-Error	iosxe-chassismgr	WARNING: The card on slot %d is overheating. it has been auto-shutdown by hardware for protection	"The FRU is overheating and has been auto-shutdown in order to protect the components."	LOG_SID_RECUR_ACTION
<del>CNENOCMPFRSHUTDOWN</del>	3-Error	iosxe-chassismgr	WARNING:[chars] temperature sensor on[chars] is in a shutdown FRU state. FRU shutdown now.	"The FRU is overheating and will be shut down in order to protect the components."	LOG_SID_RECUR_ACTION
<del>CNENOCMPFRSHUTDOWNING</del>	3-Error	iosxe-chassismgr	WARNING:[chars] temperature sensor on[chars] is in a shutdown FRU state. FRU shutdown will occur in %d minutes.	"The FRU is overheating and will be shut down in order to protect the components."	LOG_SID_RECUR_ACTION
<del>CNENOCMPFRSHUTDOWN</del>	3-Error	iosxe-chassismgr	WARNING:[chars] temperature sensor on[chars] is in a shutdown PSU state. PSU shutdown now.	"The PSU is overheating and will be shut down in order to protect the components."	LOG_SID_RECUR_ACTION
<del>CNENOCMPFRSHUTDOWN</del>	3-Error	iosxe-chassismgr	WARNING:[chars] temperature sensor on[chars] is in a shutdown SYS state. System shutdown now.	"The FRU is overheating and will be shut down in order to protect the components."	LOG_SID_RECUR_ACTION
<del>CNENOCMPFRSHUTDOWNING</del>	3-Error	iosxe-chassismgr	WARNING:[chars] temperature sensor on[chars] is in a shutdown SYS state. System shutdown will occur in %d minutes.	"The FRU is overheating and will be shut down in order to protect the components."	LOG_SID_RECUR_ACTION
<del>CNENOCMPFRSHUTDOWN</del>	3-Error	iosxe-chassismgr	WARNING:[chars] temperature sensor on[chars] is in a critical state reading %d	"The FRU is overheating and will be shut down in order to protect the components."	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CMNCRASHFUSIONNOW</del>	3-Error	iosxe-chassismgr	WARNING: transceiver temperature sensor is in a shutdown SYS state. System shutdown now[hex].	"The Transceiver is overheating and will be shut down in order to protect the components."	LOG_SID_RECUR_ACTION
<del>CMNCRASHFUSIONFHE</del>	6-Information	iosxe-chassismgr	WARNING: System is in a thermal shutdown disabled state. System won't shut down now.	"Thermal shutdown disable is configured to bypass system shutdown."	LOG_SID_RECUR_ACTION
CMRPFUFANPOLICYALRT	1-Alert	iosxe-chassismgr	SYSTEM FAN POLICY Alert :[chars]	"System FAN policy check detect issues"	"Monitor or Replace faulty fan modules may be needed."
CMRPFUFUFANFALED	1-Alert	iosxe-chassismgr	System detected fan tray removal or fan failure	-	-
CMRPFUFUFU_NO_FAN	1-Alert	iosxe-chassismgr	System detected no fan or fan tray available	-	-
CMRPFUSUCLACEMK	2-Critical	iosxe-chassismgr	Mix of 110V and 220V is not supported configuration	-	-
CMRPFUPWRREDUNDY	3-Error	iosxe-chassismgr	dc input[chars] failed for pem: %d	"The DC input failed for pem module."	"the message will be displayed when DC input failed."
CMRPFUFANASSEMBLED	3-Error	iosxe-chassismgr	Fan Assembly is removed. Please insert to avoid system from heating.	"Fan Assembly has been removed from the system. It needs to be inserted back to prevent system from heating. If the system over heats	-
CMRPFU3PEMSTATUS	3-Error	iosxe-chassismgr	WARNING: The power supply module on slot %d hits[chars]	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMRPHU3VOLTERR	3-Error	iosxe-chassismgr	WARNING: Input voltage of power supply module on PS%d is not supported. Please use the supported range of either %d-%d volts for %dW or %d-%d volts for %dW	"The input voltage of the power supply module is out of range"	LOG_SID_RECUR_ACTION
CMRPHU3FANDEAD	3-Error	iosxe-chassismgr	WARNING: Fan %d in the[chars] in slot %d has failed.	"A fan is not functioning properly. "	LOG_SID_RECUR_ACTION
CMRPHU3FANERR	3-Error	iosxe-chassismgr	WARNING: Fan %d in slot %d has the error:[chars]	-	-
CMRPHU3FANSDEAD	3-Error	iosxe-chassismgr	The fans in the[chars] in slot %d have all failed.	"The system is in danger of overheating because none of the fans in one of the PEMs are working properly. "	LOG_SID_RECUR_ACTION
CMRPHU3FANSDOWN	3-Error	iosxe-chassismgr	Shutting down system now because the fans in slot %d have all failed.	"When the fans fail then system does not have sufficient cooling capacity. To prevent damage	-
CMRPHU3IDPROMCRPT	3-Error	iosxe-chassismgr	The PEM/FM idprom could be read	-	-
CMRPHU3IDPROMREADR	3-Error	iosxe-chassismgr	Could not read the PEM/FM idprom in slot P%d. The system will run without environmental monitoring for this component	"The idprom contains information required in order to properly operate the environmental monitoring subsystems. The idprom could not be read	-
CMRPHU3SHUTDOWN	3-Error	iosxe-chassismgr	Shutting down system now because the PEM in slot %d was removed or not seated correctly.	"When either a PEM or a FM are removed	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMPPU#PUSOIVACANT	3-Error	iosxe-chassismgr	The platform does not detect a power supply in slot %d	"There is no power supply in one of the power supply slots."	"Insert a power supply into the empty slot."
CMPPU#PWRMINTALARM	3-Error	iosxe-chassismgr	WARNING: System does not have sufficient input power for minimum reliable operation requiring %d watts. The system needs %d watts of additional power.	"System power does not meet minimum requirements. Insert additional power supplies or provide current power supplies with a greater input voltage source if applicable."	LOG_SID_RECUR_ACTION
CMPPU#PWRMINTSHUTDOWN	3-Error	iosxe-chassismgr	WARNING: Linecard in slot %d with priority %d and a power requirement of %d watts has shutdown.	"A LC was shutdown due to a power loss."	LOG_SID_RECUR_ACTION
CMPPU#PWRMINTSINGLEERR	3-Error	iosxe-chassismgr	ERROR: Remote supervisor has been detected in slot %d. System is configured to SINGLE-SUP power mode. Remove remote supervisor IMMEDIATELY.	"User inserted a second supervisor in a single-sup power mode."	LOG_SID_RECUR_ACTION
CMPPU#PWRMINTNOCDN	3-Error	iosxe-chassismgr	Shutdown the card[chars] due to insufficient power budget.	"The total power is not enough	-
CMPPU#PWRMINTNOVDE	3-Error	iosxe-chassismgr	WARNING: Detected low input voltage (%dV) on the power supply in slot P%d	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMRPHUWRDNLVMSFE	3-Error	iosxe-chassismgr	WARNING: An active power supply has failed and the system has entered alarm state. The system is operating without power redundancy and has %d watts of power remaining	"An active power supplied failed while in redundant power mode."	LOG_SID_RECUR_ACTION
CMRPHUSHUTDOWNALRE	3-Error	iosxe-chassismgr	The system attempted to shut itself down	-	-
CMRPHUFRUSHUTDOWN	3-Error	iosxe-chassismgr	%s temperature sensor on[chars] is in a shutdown FRU state. FRU shutdown will occur in %d minutes.	"The FRU is overheating and will be shut down in order to protect the components. "	LOG_SID_RECUR_ACTION
CMRPHUMSSEBUTDOWN	3-Error	iosxe-chassismgr	%s temperature sensor is in a shutdown system state. System shutdown will occur in %d minutes.	"The system is overheating and will be shut down in order to protect the components. "	LOG_SID_RECUR_ACTION
CMRPHUFUANDWARN	4-Warning	iosxe-chassismgr	WARNING:[chars] of[chars] has an error:[chars]	"A fan is not functioning properly. "	LOG_SID_RECUR_ACTION
CMRPHUFUANNSUCENT	4-Warning	iosxe-chassismgr	WARNING: Insufficient number of fan modules installed. There are only %d fan modules	-	-
CMRPHUFUANRYWARN	4-Warning	iosxe-chassismgr	WARNING: Fan tray in slot %d has the error:[chars].	"A fan tray is not functioning properly. "	LOG_SID_RECUR_ACTION
CMRPHUFUFENWARN	4-Warning	iosxe-chassismgr	WARNING: Fan %d in slot %d has the error:[chars].	"A fan is not functioning properly. "	LOG_SID_RECUR_ACTION
CMRPHUFUANRYWARN	4-Warning	iosxe-chassismgr	WARNING: Fantray in slot[chars] has the error:[chars].	"A fantray is not functioning properly. "	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CMRPFUWMCAPMED</del>	4-Warning	iosxe-chassismgr	System contains power supplies of mixed power capacity. Redundancy operating mode Full protected is not supported with this configuration. System will run in Normal protected state.	"HW does not support Full protected mode with mixed capacity power supplies. This is due to current sharing; specifically dealing with the case in which all active power supplies fail simultaneously. Full protected state is demoted to Normal protected state."	LOG_SID_RECUR_ACTION
<del>CMRPFUWRMCIWARN</del>	4-Warning	iosxe-chassismgr	WARNING: Insufficient number of power supplies (%d) are installed for power redundancy mode[chars]. The system needs %d watts additional power.	"Insufficient number of power supplies are installed. Should insert new power supplies as soon as possible"	LOG_SID_RECUR_ACTION
<del>CMRPFUSDPOWERINUT</del>	5-Notice	iosxe-chassismgr	dc input[chars] recovered for pem: %d	"The DC input recovered for pem module."	"the message will be displayed when DC input recovered."
<del>CMRPFUFANASSYNSRIED</del>	6-Information	iosxe-chassismgr	Fan Assembly is inserted.	"Fan Assembly that was previously removed has been inserted in the system. Preventing the system from over heating is important. So fan assembly should not be removed for extended period of time during normal operation."	"No further action is necessary."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMRPFU6FMNSRID	6-Information	iosxe-chassismgr	PEM in slot %d not operational.	"A PEM seems to be inserted without the power cable connected. This message is a notice that the power supply is not operational	-
CMRPFUBACNEDOF	6-Information	iosxe-chassismgr	[chars] beacon LED for PFU%d is TURNED[chars].	"Power Supply or Fan-tray	-
CMRPFUFANDEICED	6-Information	iosxe-chassismgr	The required number of fan trays or fan modules are detected.	"After previous no fan or insufficient fan modules alarm	-
CMRPFUFANRCMRD	6-Information	iosxe-chassismgr	Fan in slot %d has been recovered from error conditions	-	-
CMRPFUFANRCMRDC	6-Information	iosxe-chassismgr	Successfully restored I2C communication to PSoC %d on fan module in slot %d.	"Fans are just recovered from an I2C communication. "	LOG_SID_RECUR_ACTION
CMRPFU6FHUNSRID	6-Information	iosxe-chassismgr	%s inserted. System shutdown aborted.	"When either a PEM or a FM are removed	-
CMRPFU6FVCMRCD	6-Information	iosxe-chassismgr	All PSUs are now connected to the same input voltage. System has recovered from mix of input voltages. PSU in slot[chars] is connected to[chars]	"Some PSUs were connected to 110V and some were connected to 220V. This was not supported from hardware as it may have caused system failure. The system is now in a stable state with all PSUs connected to the same input voltage"	"All the power supplies should be connected to same input voltage source"
CMRPFU6FVCMRCD	6-Information	iosxe-chassismgr	Linecard in slot %d with priority %d has been recovered from shutdown	"A LC was recovered from a shutdown"	LOG_SID_RECUR_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CMRPHU6PWRMTOREDNDN</del>	6-Information	iosxe-chassisgr	Changing the power redundancy mode to non-redundant	"Changing the power redundancy mode to non-redundant"	LOG_SID_RECUR_ACTION
CMRPHU6PWRMGTCK	6-Information	iosxe-chassisgr	Sufficient number of power supplies (%d) are installed for power redundancy mode[chars] (excess power %d watts).	"Sufficient number of power supplies are installed."	LOG_SID_RECUR_ACTION
<del>CMRPHU6PWRMREDNDN</del>	6-Information	iosxe-chassisgr	Changing the power redundancy mode to redundant.	"Changing the power redundancy mode to redundant"	LOG_SID_RECUR_ACTION
<del>CMRPHU6PWRMTOREDNCE</del>	6-Information	iosxe-chassisgr	NOTICE(%d of %d): System is now running in SINGLE-SUP power budget mode. Insertion of the remote supervisor is not supported in this power mode. System may shutdown if second supervisor is inserted.	"User needs to be notified that single-sup mode is enabled"	LOG_SID_RECUR_ACTION
<del>CMRPHU6PWRMTORED</del>	6-Information	iosxe-chassisgr	The power supply in slot P%d has been recovered from the power protection mode.	"Power supply input are just recovered from an error condition"	-
<del>CMRPHU6PWRMTORED</del>	6-Information	iosxe-chassisgr	System has recovered from the alarm state and has %d watts of power remaining	"User has recovered the system from the alarm state triggered by a power failure"	LOG_SID_RECUR_ACTION
CMRPHU6PWRUPFRU	6-Information	iosxe-chassisgr	Power up the card[chars] due to power budget change.	"The total power become enough"	-
CMRPHU6PWRUPFRU	3-Error	iosxe-chassisgr	Firmware upgrade failed	"Firmware Upgrade error message."	LOG_SID_RECUR_ACTION
CMRPHU6PWRUPFRU	3-Error	iosxe-chassisgr	Firmware upgrade failed	"Firmware Upgrade error message."	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CMRPSOCANFWUPERR</del>	3-Error	iosxe-chassismgr	FAN Firmware Upgrade is not supported on 3RU	"Firmware Upgrade not supported on 3RU."	LOG_SID_RECUR_ACTION
<del>CMRPSOCANFWUPERR</del>	3-Error	iosxe-chassismgr	FAN Firmware Upgrade is not supported on 3RU	"Firmware Upgrade not supported on 3RU."	LOG_SID_RECUR_ACTION
<del>CMRPSOCANFWERRA</del>	3-Error	iosxe-chassismgr	Failed to read firmware version	"Error message for failed to read fan tray psoc firmware version."	LOG_SID_RECUR_ACTION
<del>CMRPSOCANFWERRA</del>	3-Error	iosxe-chassismgr	Failed to read firmware version	"Error message for failed to read fan tray psoc firmware version."	LOG_SID_RECUR_ACTION
<del>CMRPSOCANRYABET</del>	3-Error	iosxe-chassismgr	FAN Tray does not exist in slot %d	"Checks of fan tray exist in given slot."	LOG_SID_RECUR_ACTION
<del>CMRPSOCANRYABET</del>	3-Error	iosxe-chassismgr	FAN Tray does not exist in slot %d	"Checks of fan tray exist in given slot."	LOG_SID_RECUR_ACTION
<del>CMRPSOCANFWEND</del>	6-Information	iosxe-chassismgr	Successfully upgraded Firmware	"Firmware Upgrade end message."	LOG_SID_RECUR_ACTION
<del>CMRPSOCANFWEND</del>	6-Information	iosxe-chassismgr	Successfully upgraded Firmware	"Firmware Upgrade end message."	LOG_SID_RECUR_ACTION
<del>CMRPSOCANFWSPUG</del>	6-Information	iosxe-chassismgr	dev_ver: %02x.%02x	-	-
<del>CMRPSOCANFWSPUG</del>	6-Information	iosxe-chassismgr	dev_ver: %02x.%02x	-	-
<del>CMRPSOCANFWSPAT</del>	6-Information	iosxe-chassismgr	Starting Fan Tray Firmware Upgrade	"Firmware Upgrade start message."	LOG_SID_RECUR_ACTION
<del>CMRPSOCANFWSPAT</del>	6-Information	iosxe-chassismgr	Starting Fan Tray Firmware Upgrade	"Firmware Upgrade start message."	LOG_SID_RECUR_ACTION
<del>CMRPSOCANFWSPNDY</del>	6-Information	iosxe-chassismgr	FAN FW upgrade is not supported on standby	"Firmware Upgrade not supported on standby."	LOG_SID_RECUR_ACTION
<del>CMRPSOCANFWSPNDY</del>	6-Information	iosxe-chassismgr	FAN FW upgrade is not supported on standby	"Firmware Upgrade not supported on standby."	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CMRPSOCANFWVR</del>	6-Information	iosxe-chassismgr	Firmware version is %02x.%02x	"The major and minor fan tray psoc firmware version."	LOG_SID_RECUR_ACTION
<del>CMRPSOCANFWVR</del>	6-Information	iosxe-chassismgr	Firmware version is %02x.%02x	"The major and minor fan tray psoc firmware version."	LOG_SID_RECUR_ACTION
<del>CMRPSOCANFWVRE</del>	6-Information	iosxe-chassismgr	Fan Tray fw	-	-
<del>CMRPSOCANFWVRE</del>	6-Information	iosxe-chassismgr	Fan Tray fw	-	-
<del>CMRPSOCANFWVSR</del>	6-Information	iosxe-chassismgr	Firmware dev version is %02x.%02x	-	-
<del>CMRPSOCANFWVSR</del>	6-Information	iosxe-chassismgr	Firmware dev version is %02x.%02x	-	-
<del>CMRPSOCANFWVSR</del>	6-Information	iosxe-chassismgr	Firmware version is[chars]	"The major and minor fan tray psoc firmware version."	LOG_SID_RECUR_ACTION
<del>CMRPSOCANFWVSR</del>	6-Information	iosxe-chassismgr	Firmware version is[chars]	"The major and minor fan tray psoc firmware version."	LOG_SID_RECUR_ACTION
<del>CMRCHASCDNRSAE</del>	0-Emergency	iosxe-chassismgr	Failed to translate a location to a chasfs object name because[chars]	"The chassis manager failed to translate a location to a chasfs object name."	"In most cases
<del>CMRCHASCHCTRAE</del>	0-Emergency	iosxe-chassismgr	Failed to create chassis filesystem object[chars] because[chars]	"The hardware failed to create a chassis filesystem object."	"In most cases
<del>CMRCHASCHCINRSN</del>	0-Emergency	iosxe-chassismgr	Expected chassis filesystem object[chars] not present.	"A chassis filesystem object expected to be present is not. This could be due to a software defect or filesystem failure."	"In most cases

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMR0CHASSIS_OBJ_WATCH	0-Emergency	iosxe-chassismgr	Failed to watch chassis filesystem object[chars] because[chars]	"A chassis filesystem object was not watched because of the reason stated in the error message."	"In most cases
CMR0CHASSIS_OBJ_CREATE	0-Emergency	iosxe-chassismgr	Failed to create chassis filesystem object[chars] property[chars] because[chars]	"A chassis filesystem property was not properly created."	"In most cases
CMR0CHASSIS_OBJ_READ	0-Emergency	iosxe-chassismgr	Failed to read chassis filesystem object[chars] property[chars] because[chars]	"A chassis filesystem property was not properly read by the system."	"In most cases
CMR0CHASSIS_OBJ_EXPECTED	0-Emergency	iosxe-chassismgr	Expected chassis filesystem object[chars] property[chars] not present.	"A chassis filesystem object property expected to be present is not. This could be due to a software defect or filesystem failure."	"In most cases
CMR0CHASSIS_OBJ_WRITE	0-Emergency	iosxe-chassismgr	Failed to write chassis filesystem object[chars] property[chars] because[chars]	"A chassis filesystem property failed to write."	"In most cases
CMRP0-CHASSIS_ID	0-Emergency	iosxe-chassismgr	Error while updating chassis id	-	-
CMRP0CHASSIS_STATUS	0-Emergency	iosxe-chassismgr	Failed to get chassis hardware status because[chars]	"The system failed to get the chassis hardware status."	"Note the time of the error message and examine the logs for CPLD driver or hardware errors. If the logs provide information about a correctable problem
CMRP0CHASSIS_TYPE	0-Emergency	iosxe-chassismgr	The chassis type[chars] is invalid.	"The chassis type is invalid. This could be due to a hardware defect	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMR0CLOCK_MASTERSHIPSET	0-Emergency	iosxe-chassismgr	Failed to set CLOCK mastership because[chars]	"The router failed to establish CLOCK mastership."	"In most cases
CMR0CPLD_INITIALIZATION	0-Emergency	iosxe-chassismgr	The RP CPLD has failed initialization because[chars]	"The RP CPLD has failed to initialize. This could be due to a hardware or software driver defect."	"Examine the hardware and CPLD driver logs and see if the logs provide information about a correctable problem. If the problem is not correctable or the logs are not helpful
CMR0CPLD_I/OCTL	0-Emergency	iosxe-chassismgr	A CPLD driver I/O control has failed because[chars]	"A CPLD driver I/O control has failed. This could be due to a hardware or software driver defect."	"Examine the hardware and CPLD driver logs and see if the logs provide information about a correctable problem. If the problem is not correctable or the logs are not helpful
CMR0DDR_INITIALIZATION	0-Emergency	iosxe-chassismgr	The RP DDR has failed initialization because[chars]	"The RP DDR has failed to initialize. This could be due to a hardware or software driver defect."	"Note the time of the error message and examine the logs for DDR or hardware errors. If the logs provide information about a correctable problem
CMR0EHSA_INITIALIZATION	0-Emergency	iosxe-chassismgr	EHSA initialization has failed because[chars]	"EHSA has failed initialization. This could be due to a hardware or software defect."	"Note the time of the error message and examine the logs for EHSA and hardware errors. If the logs provide information about a correctable problem
CMR0EHSA_STATE_GET	0-Emergency	iosxe-chassismgr	Failed to get EHSA state because[chars]	"Failed to get EHSA state. This could be due to a hardware or software defect."	"Note the time of the error message and examine the logs for EHSA and hardware errors. If the logs provide information about a correctable problem

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMRPEHSA_STATE_SET	0-Emergency	iosxe-chassismgr	Failed to set EHSA state because[chars]	"Failed to set EHSA state. This could be due to a hardware or software defect."	"Note the time of the error message and examine the logs for EHSA and hardware errors. If the logs provide information about a correctable problem"
CMRPEVENT_LIBRARY	0-Emergency	iosxe-chassismgr	An event facility initialization or maintenance function failed because[chars]	"An event facility initialization or maintenance function failed. This could be due to a software defect or system resource exhaustion."	"In most cases"
CMRPFPMASIRSHIP_SET	0-Emergency	iosxe-chassismgr	Failed to set FP mastership because[chars]	"The router failed to establish ESP mastership."	"In most cases"
CMRPHI_INITIALIZATION	0-Emergency	iosxe-chassismgr	The RP HyperTransport has failed initialization because[chars]	"The RP HyperTransport has failed initialization. This could be due to a hardware defect or HT driver defect."	"Note the time of the error message and examine the logs for HT driver and hardware errors. If the logs provide information about a correctable problem"
CMRP-0-HT_IOCTL	0-Emergency	iosxe-chassismgr	A RP HyperTransport driver I/O control has failed because[chars]	"A RP HyperTransport driver I/O has failed. This could be due to a hardware defect or HT driver defect."	"Note the time of the error message and examine the logs for HT driver and hardware errors. If the logs provide information about a correctable problem"
CMRPC_INITIALIZATION	0-Emergency	iosxe-chassismgr	The RP I2C has failed initialization because[chars]	"The RP I2C has failed to initialize. These components provide low-level communications between the RP and the other cards in the system."	"Note the time of the error message and examine the logs for I2C errors. If the logs provide information about a correctable problem"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CMR</del> INTERNAL_SHUTDOWN	0-Emergency	iosxe-chassismgr	Internal unrecoverable error condition was detected. System is being reset.	"Internal unrecoverable error condition was detected"	-
<del>CMR</del> INTERNAL_INITIALIZATION	0-Emergency	iosxe-chassismgr	Failed to initialize internal state because[chars]	"The system failed to initialize the internal state for the reason mentioned in the error message."	"In most cases
<del>CMR</del> INVALID_ARGUMENT	0-Emergency	iosxe-chassismgr	A system function was given an invalid argument.	"A system function was given an invalid argument. This is due to a software defect."	"In most cases
<del>CMR</del> IPC_CONNECTION_FAILED	0-Emergency	iosxe-chassismgr	IPC connection to the active RP failed because[chars]	"IPC connection to the active RP failed. This could be due to a software defect or system resource exhaustion."	"In most cases
<del>CMR</del> IPC_CONNECTION_FAILED_REMOTE_IOSD	0-Emergency	iosxe-chassismgr	IPC connection to a remote IOSd failed because[chars]	"IPC connection to a remote IOSd failed. This could be due to a software defect or system resource exhaustion."	"In most cases
<del>CMR</del> IPC_CONNECTION_INVALID	0-Emergency	iosxe-chassismgr	An IPC connection has invalid state.	"An IPC connection has an invalid state. This could be due to a software defect or system resource exhaustion."	"In most cases
<del>CMR</del> IPC_INITIALIZATION_FAILED	0-Emergency	iosxe-chassismgr	IPC initialization failed because[chars]	"IPC initialization failed. This could be due to a software defect or system resource exhaustion."	"In most cases
<del>CMR</del> MESSAGE_REGISTER_FAILED	0-Emergency	iosxe-chassismgr	Failed to register with active RP because[chars]	"The active RP failed to register."	"In most cases

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMRPMMESSAGE_RELAY	0-Emergency	iosxe-chassismgr	Failed to relay a message because[chars]	"Failed to relay a message. This could be due to a software defect or system resource exhaustion."	"In most cases
CMRPMMESSAGE_RESPONSE	0-Emergency	iosxe-chassismgr	An invalid message response was received because[chars]	"An invalid message response was received. This could be due to a software defect or system resource exhaustion."	"In most cases
CMRPMMQPC_ADVANCE	0-Emergency	iosxe-chassismgr	Failed to advance MQIPC queue because[chars]	"The MQIPC initialization failed."	"In most cases
CMRPMMQPC_INITIALIZATION	0-Emergency	iosxe-chassismgr	MQIPC initialization failed because[chars]	"MQIPC initialization failed. This could be due to a software defect or system resource exhaustion."	"In most cases
CMRPM0-PEER_TABLE	0-Emergency	iosxe-chassismgr	A peer table initialization or maintenance function failed because[chars]	"A peer table initialization or maintenance function failed. This could be due to a software defect or system resource exhaustion."	"In most cases
CMRPM0-PLATFORM_FAMILY	0-Emergency	iosxe-chassismgr	The platform family type[chars] is invalid.	"The platform family type is invalid. This could be due to a hardware defect	-
CMRPM0-POWER_FAULT_MONITOR_INITIALIZATION	0-Emergency	iosxe-chassismgr	Power fault monitor initialization has failed because[chars]	"The power fault monitor has failed to initialize."	"Note the time of the error message and examine the Chassis Manager logs. If the logs provide information about a correctable problem
CMRPM0-RESOLVE_FRU	0-Emergency	iosxe-chassismgr	Failed to determine[chars] card because[chars]	"The router failed to determine a FRU state."	"In most cases



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMRP-0-RESOURCE	0-Emergency	iosxe-chassismgr	Resource allocation failed in[chars] because[chars]	"The system is unable to allocate the requested resource."	"In most cases
CMRPOE_ADDRESS	0-Emergency	iosxe-chassismgr	Failed to update role-based EOBC IP addresses because[chars].	"The system failed to update a role-based EOBC IP address for the reason stated in the message line."	"In most cases
CMRPOSERDES_INIT	0-Emergency	iosxe-chassismgr	The RP Serial Bridge ASIC has failed initialization because[chars]	"The RP Serial Bridge ASIC has failed to initialize. This could be due to a hardware defect	-
CMRPOSERDES_INT	0-Emergency	iosxe-chassismgr	Serial Bridge interrupt dispatch error:[chars]	"Failed to dispatch an error interrupt from the Serial Bridge. This could be due to a software defect or inconsistent internal state."	"Note the time of the error message and examine the logs for Serial Bridge errors. If the logs provide information about a correctable problem
CMRPOSERDES_IOCTL	0-Emergency	iosxe-chassismgr	A Serial Bridge driver I/O control has failed because[chars]	"A Serial Bridge driver I/O control has failed. This could be due to a hardware or software driver defect."	"Note the time of the error message and examine the logs for Serial Bridge driver or hardware errors. If the logs provide information about a correctable problem
CMRPOSERVICES_INIT	0-Emergency	iosxe-chassismgr	Failed to initialize general application services because[chars]	"The system failed to initialize application services."	"In most cases
CMRPOSERVICES_INIT	0-Emergency	iosxe-chassismgr	Failed to initialize signals because[chars]	"The system failed to initialize signals."	"In most cases

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMRPOSLOT_INVALID	0-Emergency	iosxe-chassismgr	A card absolute slot number cannot be determined for this chassis type	"An absolute slot number is invalid. This could be due to a software defect or incorrect IDPROM content."	"Note the time of the error message and examine the logs for IDPROM or software errors. If the logs provide information about a correctable problem
CMRPOSLOT_INITIALIZATION	0-Emergency	iosxe-chassismgr	No format	"The system failed to initialize the chassis slot information."	"Note the time of the error message and examine the logs for IDPROM or software errors. If the logs provide information about a correctable problem
CMRSPAGEWRITEERR	0-Emergency	iosxe-chassismgr	The syspage chassis-type write has failed because[chars]	"The syspage chassis-type write failed. This could be due to a software defect."	"Note the time of the error message and examine the Chassis Manager logs. If the logs provide information about a correctable problem
CMRPOUIPEER_CREATE	0-Emergency	iosxe-chassismgr	Failed to create user interface peer.	"The system failed to create a user interface peer."	"In most cases
CMRWANPLL_INITIALIZATION	0-Emergency	iosxe-chassismgr	The RP WAN PLL has failed initialization because[chars]	"The RP WAN PLL has failed to initialize. This could be due to a hardware or software driver defect."	"Note the time of the error message and examine the logs for WAN PLL or hardware errors. If the logs provide information about a correctable problem

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CMR2AC2UDDANAD</del>	2-Critical	cbr-platform-infra	No format	"This Router may not have been manufactured by Cisco or with Cisco's authorization. This product may contain software that was copied in violation of Cisco's license terms. If your use of this product is the cause of a support issue	-
CMRP-2-BAD_ID_HW	2-Critical	cbr-platform-infra	Failed Identification Test in[chars]. The module[chars] may not be a genuine Cisco product. Cisco warranties and support programs only apply to genuine Cisco products. If Cisco determines that your insertion of non-Cisco memory	-	-
<del>CMR2AC2UDDANAD</del>	2-Critical	iosxe-chassismgr	ESP%d does not support strong cryptography. Chassis will reload.	"IOS software featuring strong cryptography is invalid for use with any non-strong-cryptography Embedded Service Processor. The router node will reload if this combination is encountered."	"Install a non-strong-cryptography image of the RP IOS package or replace the indicated Embedded Service Processor with one that supports strong-cryptography"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CMRFRUCPLDNOMABE</del>	2-Critical	iosxe-chassismgr	%s in slot[chars] has been held in reset as its CPLD firmware version is incompatible with[chars]	"This FRU requires a newer CPLD firmware to function properly in this chassis"	"Upgrade the CPLD firmware on this FRU using the <b>upgrade hw-programmable CPLD file <pkg_file> slot <fru_slot> </b> command. Please see <a href="http://www.cisco.com/US/docs/ios/1000plhw/upgrad.html">http://www.cisco.com/US/docs/ios/1000plhw/upgrad.html</a> for more details."
<del>CMRFRUFGANOMABE</del>	2-Critical	iosxe-chassismgr	%s in slot[chars] has been held in reset as its FPGA firmware version is incompatible with[chars]	"This FRU requires a newer FPGA firmware to function properly in this chassis"	"Upgrade the FPGA firmware on this FRU using the <b>upgrade hw-programmable FPGA file <pkg_file> slot <fru_slot> </b> command."
<del>CMRFRUHWGUGAID</del>	2-Critical	iosxe-chassismgr	Failed to[chars][chars] hardware programmable on[chars] in[chars].	"Upgrade hw-programmable failed to upgrade the CPLD/FPGA firmware on the given FRU"	"Reload the card and retry to program the hw-programmable. If the card fails to come up please contact TAC"
<del>CMRFRUHWGUCSOPAE</del>	2-Critical	iosxe-chassismgr	Hardware programmable PSOCs on[chars] in slot[chars] were set in the golden mode. Please power-cycle or OIR the card to finish the upgrading	"The hw-programmable PSOCs were set in the golden mode for FPD"	"No action is required. This is informational message"
<del>CMRFRUHWGUCSOPAE</del>	2-Critical	iosxe-chassismgr	Hardware programmable PSOCs on[chars] in slot[chars] are upgrading	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CMRHWPCLESICS</del>	2-Critical	iosxe-chassismgr	Hardware programmable PSOCs on[chars] in slot[chars] were successfully programmed. Please power-cycle or OIR the card to make them work	"The hw-programmable PSOC was upgraded succesfully"	"No action is required. This is informational message"
<del>CMRQADLESIPR</del>	2-Critical	iosxe-chassismgr	Exceeded the maximum failure attempts to enable Quad-Sup SVL. Forcing the supervisor in Switch %d slot %d into reset state. Keeping the supervisor in this state may cause system instability. Please pull out the supervisor and follow the quad sup migration procedure.	"ICS is booted with quad sup incompatible image"	"Boot the supervisor in quad sup compatible image"
<del>CMRQADLESIPR</del>	2-Critical	iosxe-chassismgr	Exceeded the maximum failure attempts to enable Quad-Sup SVL. Forcing the supervisor in Switch %d slot %d into power off state. Keeping the supervisor in this state may cause system instability. Please pull out the supervisor	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMRQUADSPWMACH	2-Critical	iosxe-chassismgr	Supervisor in Switch %d Slot %d is booted with a quad-sup incompatible image. Continuing in this state could lead to undesirable behaviour. To recover from this state	-	-
CMRSTACKWISEVIRT	2-Critical	iosxe-chassismgr	Supervisor in Switch %d Slot %d is booted when stackwise-virtual configured over supervisor ports which is unsupported. Keeping the supervisor in this state may cause system instability. Forcing the supervisor into power off state. Please pull out the supervisor	-	-
CMRCPHDNCOMPABE	2-Critical	iosxe-chassismgr	All other cards in the system have been held in reset as the Active RP[chars] in slot[chars] has CPLD firmware version that is incompatible with[chars]	"Active RP requires a newer CPLD firmware to function properly in this chassis"	"Upgrade the CPLD firmware on this FRU using the <b>upgrade hw-programmable CPLD file <pkg_file> slot <fru_slot> </b> command. Please see <a href="http://www.cisco.com/US/docs/switches/1000pldw/p_upgrade.html">http://www.cisco.com/US/docs/switches/1000pldw/p_upgrade.html</a> for more details."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CMRCPDNCMPBECHR</del>	2-Critical	iosxe-chassismgr	%s in slot[chars] has been held in reset because[chars]	"Active RP requires a newer CPLD firmware to function properly in this chassis. "	"Upgrade the CPLD firmware on this FRU using the <b>upgrade hw-programmable CPLD file <pkg_file> slot <fru_slot> </b> command. Please see <a href="http://www.cisco.com/US/docs/ios/100/cpld_hw_upgrade.html">http://www.cisco.com/US/docs/ios/100/cpld_hw_upgrade.html</a> for more details."
<del>CMR3BIS_NIIALZAI0N</del>	3-Error	iosxe-chassismgr	The RP BITS E1/T1 interface has failed initialization because[chars]	"The RP BITS E1/T1 interface has failed to initialize. This could be due to a hardware defect	-
<del>CMRCHASSISCHIDISFOY</del>	3-Error	iosxe-chassismgr	Failed to destroy chassis filesystem object[chars] because[chars]	"A chassis filesystem object that should have been destroyed was not destroyed."	"In most cases
<del>CMRCHASSISPROPRYDESFOY</del>	3-Error	iosxe-chassismgr	Failed to destroy chassis filesystem proprty[chars]/%s because[chars]	"A chassis filesystem property that should have been destroyed was not destroyed."	"In most cases
<del>CMRCHASSISFRUIGNORED</del>	3-Error	iosxe-chassismgr	<del>CMANIGNOREFRUFAILS</del> is set.[chars]:[chars]	"Debug variable will prevent a FRU from being restarted due to some faults."	"No action is necessary."
<del>CMRCHASSISFRUIGNORESET</del>	3-Error	iosxe-chassismgr	<del>CMANIGNOREFRUFAILS</del> is set. Some FRU faults will be ignored and FRU may not restart due to a fault	"Debug variable will prevent a FRU from being restarted due to some faults."	"No action is necessary."
<del>CMRFRU_CTRBOHRESCHD</del>	3-Error	iosxe-chassismgr	%s has been held in reset because it has failed to successfully boot in %d tries	"The FRU has failed to successfully boot in the maximum allowable attempts and is held in reset."	"Remove the FRU from the chassis if the FRU continuously fails to boot."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CMERRSDOORBOOTFCS</del>	3-Error	iosxe-chassismgr	Reloading[chars] because the FRU boot status is unknown	"The time at which the FRU started booting is not available. This time is used to check the boot status of the FRU."	"Remove the FRU from the chassis if the FRU is continuously reloaded."
<del>CMERRSDOORMEXED</del>	3-Error	iosxe-chassismgr	Reloading[chars] because it has failed to come online	"A FRU has failed to come online within the maximum boot time."	"Remove the FRU from the chassis if the FRU is continuously reloaded."
<del>CMERRSDOORMEXED</del>	3-Error	iosxe-chassismgr	%s exceeded online time but will not be reset because fault ignore is configured	"The FRU failed to come online within the maximum online time. This message applies to all FRUs. A reload will not be performed because fault ignore is configured."	"No action is necessary."
<del>CMERRSDOORMEXED</del>	3-Error	iosxe-chassismgr	Reloading[chars] because it has failed to become ready for packet processing	"The FRU failed to become ready within the maximum ready time. This message applies to FP FRUs. A switchover will be performed if another FP is available."	"Remove the FRU from the chassis if the FRU is continuously reloaded."
<del>CMERRSDOORMEXED</del>	3-Error	iosxe-chassismgr	%s exceeded ready time but will not be reset because fault ignore is configured	"The FRU failed to become ready within the maximum ready time. This message applies to FP FRUs. A switchover and/or reload will not be performed because fault ignore is configured."	"No action is necessary."
<del>CMERRSDOORMEXED</del>	3-Error	iosxe-chassismgr	Single-bit DRAM ECC error: mme: %u	-	-



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMR3DUALSSANDBYBY	3-Error	iosxe-chassismgr	Standby bay cannot be launched due to failure in bringing down existing processes (Attempts: %d)	"During standby bay shutdown	-
CMR3EXTALARMINTRPT	3-Error	iosxe-chassismgr	Alarm[chars]:external alarm contact %d	"There is an external alarm on the line."	"If alarm is asserted
CMR3FANALERTSHUTDOWN	3-Error	iosxe-chassismgr	WARNING: More than one Fan Failure detected and shutdown SYS state. System shutdown now TRUE:%x.	"More than one fan failures are identified this causing overheating the system and will be shut down in order to protect the components."	LOG_SID_RECUR_ACTION
CMR3FANINCOMPATIBLE	3-Error	iosxe-chassismgr	The combination of Power Supply and Fan Tray is incompatible	"The combination of Fan tray and one of the power supply slots is not supported. This could cause unpredictable system behavior."	"This error indicates that the combination of one of the power supplies in P0 or P1 is not supported with the Fan Tray. In order to fix this issue
CMR3FANINITIALIZATION	3-Error	iosxe-chassismgr	The RP has failed to initialize Fan %d module controller because[chars]	"The RP failed to initialize the Fan. This could be due to a software defect."	"Note the time of the error message and examine the logs. If the logs provide information about a correctable problem
CMR3FANREMOVALSHUT	3-Error	iosxe-chassismgr	The Interface Modules (IM's) may shutdown in %d minutes %d seconds.	"Fan tray has been removed and the router will shutdown to protect itself from overheating in the amount of time stated in the error message."	"Reinsert a fan tray into the fan tray slot as soon as possible."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CMRANREMOVEDSHUT</del>	3-Error	iosxe-chassismgr	The system will shut down when CYLON temp reaches 105C	"Fan tray has been removed and the router will shutdown when cylon temperature reaches critical temperature i.e. 105C to protect itself from overheating in the amount of time stated in the error message."	"Reinsert a fan tray into the fan tray slot as soon as possible."
<del>CMRANREMOVEDSHUT</del>	3-Error	asr903-system	System received fan tray removal notification	-	-
<del>CMRANREMOVEDSHUT</del>	3-Error	iosxe-chassismgr	The system will shut down in %d minutes %d seconds	"Fan tray has been removed and the router will shutdown to protect itself from overheating in the amount of time stated in the error message."	"Reinsert a fan tray into the fan tray slot as soon as possible."
<del>CMRANREMOVEDSHUT</del>	3-Error	iosxe-chassismgr	System shutdown will occur in %d minutes.	"The FRU is overheating and will be shut down in order to protect the components."	<u>LOG_SID_RECUR_ACTION</u>
CMRP-3FP_DOWNREV	3-Error	iosxe-chassismgr	%s has been held in reset because it is down-rev to the previous FP (0x%x -> 0x%x) in the chassis. Reboot the router to bring it up.	"The FP inserted is a lower version than the previous Active FP in the router. Downrev of FP is not supported."	"Reboot the router."
CMRP-3FP_LESSIHAN	3-Error	iosxe-chassismgr	%s has been held in reset because it is down-rev to the active and cannot act as a standby.	"The part number read from the FP IDPROM is not compatible with part number of the active FP; therefore	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CMR3FP</del> UNSUP_UPREV	3-Error	iosxe-chassismgr	%s has been held in reset because of an unsupported upgrade of FP (0x%x -> 0x%x) in the chassis. Reboot the router to bring it up.	"The FP inserted is a higher version than the previous Active FP in the router but this upgrade of FP is not supported."	"Reboot the router."
<del>CMR4HW</del> BAD_DMC	3-Error	iosxe-chassismgr	Invalid HW programming device for[chars] in slot[chars].	"The device is not supported in hardware programming."	"No action is required. This is an informational message"
<del>CMR4HW</del> CK_LOAD	3-Error	iosxe-chassismgr	Cannot load a kernel module on[chars] in slot[chars].	"Cannot load a Kernel module when upgrade CPLD or FPGA."	"Reload the card and retry to program the hw-programmable. If you get the same error"
<del>CMR4HW</del> NO_FILE	3-Error	iosxe-chassismgr	Cannot find file or directory on[chars] in slot[chars].	"Cannot find a file or a directory when upgrade CPLD or FPGA."	"No action is required. This is an informational message"
<del>CMR4HW</del> RS_ERROR	3-Error	iosxe-chassismgr	Error[chars] when Chassis Manager restarts[chars] in slot[chars].	"Restart procedure has an error after upgrade."	"Try hw-module command to reload the FRU."
<del>CMR4HW</del> PGM_FAIL	3-Error	iosxe-chassismgr	Power-Supply Module MCU[chars] in slot[chars] program failed	"The hw-programmable power-supply upgrade failed"	"Please check Power-Supply model and PKG file."
<del>CMR4HW</del> PGM_SUCCESS	3-Error	iosxe-chassismgr	Hardware programmable[chars] on[chars] in slot[chars] was successfully programmed. The card will now be power-cycled or reset.	"The hw-programmable CPLD/FPGA was upgraded successfully"	"No action is required. This is informational message"
<del>CMR4HW</del> PGM_UNSUPPORTED	3-Error	iosxe-chassismgr	Upgrade of hardware programmable[chars] on[chars] in slot[chars] is not supported. Card will now be powered down.	"upgrade of hw-programmable CPLD/FPGA not supported."	"No action is required. This is informational message"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMR3-FRU_INCOMPATIBLE	3-Error	iosxe-chassismgr	%s has been held in reset:[chars] is incompatible with[chars]	"The part number read from the FRU IDPROM is invalid for this chassis type."	"Remove the FRU from the chassis."
CMR3-FRU_INVALIDPARNUM	3-Error	iosxe-chassismgr	%s has been held in reset because the part number %08X is invalid.	"The FRU IDPROM contains an invalid part number."	"The FRU IDPROM should be repaired or the board replaced."
CMR3-FRU_NOPARNUM	3-Error	iosxe-chassismgr	Cannot get part number from IDPROM for[chars]:[chars].	"The FRU IDPROM cannot be read or does not contain a valid part number field."	"The FRU IDPROM should be repaired."
CMR3-HWB_INITIALIZATION	3-Error	iosxe-chassismgr	The hardware library has failed to initialize because[chars]	"This could be due to a hardware defect"	-
CMR3-HW_MODULE_FAIL	3-Error	iosxe-chassismgr	hw-module[chars] command for slot[chars] failed (%s)	"The last hw-module command that was entered failed to complete"	"Retry the command. If the retry of the command fails"
CMR3-HW_MODULE_UNSUPPORTED	3-Error	iosxe-chassismgr	upgrade of hardware programmables on[chars] is not supported while in slot[chars]. Card will now be powered down.	"upgrade of hw-programmable CPLD/FPGA not supported in the given slot. Move the card to a different slot and perform the upgrade"	"Move the card to a different slot and perform the upgrade"
CMR3-I2C_READ	3-Error	iosxe-chassismgr	An I2C read has failed because[chars]	"An I2C read has failed. This could be due to a hardware or software defect."	"Note the time of the error message and examine the logs for I2C errors. If the logs provide information about a correctable problem"
CMR3-I2C_WRITE	3-Error	iosxe-chassismgr	An I2C write has failed because[chars]	"An I2C write has failed. This could be due to a hardware or software defect."	"Note the time of the error message and examine the logs for I2C errors. If the logs provide information about a correctable problem"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMR3IDPROM_ACCESS	3-Error	iosxe-chassismgr	Failed to access or process IDPROM '%s':[chars]	"Failed access or process an IDPROM. This could be due to a hardware defect	-
CMR3IDPROM_SENSOR	3-Error	iosxe-chassismgr	One or more sensor fields from the idprom failed to parse properly because[chars].	"One or more sensor fields from the IDPROM failed to parse properly. This problem is often the result of a checksum failure in the IDPROM."	"Note the time of the error message and examine the logs for IDPROM and hardware errors. If the logs provide information about a correctable problem
CMR3INCOMPATIBLE_FRU	3-Error	iosxe-chassismgr	%s in slot[chars] is not compatible with[chars] and so it is disabled	"The Product ID read from the FRU IDPROM is invalid for this hardware configuration."	"Remove the FRU from the chassis. Review the Hardware and Software Compatibility Matrix in IOS XE release notes to determine currently supported configurations."
CMR3INCOMPATIBLE_FRU_SDWAN	3-Error	iosxe-chassismgr	%s in slot[chars] is not supported in controller mode	"Product ID read from FRU IDPROM is not supported in sdwan controller mode."	"Remove the FRU from the chassis"
CMR3INCOMPATIBLE_SUPERVISOR	3-Error	iosxe-chassismgr	"Standby supervisor is not compatible with the Active supervisor. Standby Supervisor will be disabled"	"Supervisor found in Standby slot may not be fully compatible with the active supervisor and may cause issues."	"Use supervisors with the same specifications to enable High Availablilty features."
CMR3INTERNAL_HW_ERROR	3-Error	iosxe-chassismgr	An nternal error condition was detected and resolved.	"An internal error condition was detected	-
CMR3MEMORY_INITIALIZATION	3-Error	iosxe-chassismgr	%s inventory file could not be read. FRU may need a reload to initialize properly	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMRP-3-LICENSE_TIMEOUT	3-Error	iosxe-chassismgr	Throughput license request timed out. Throughput level set to default	Throughput license was never received from lman	Examine logs for error messages
CMRP-3-OOD_OPR	3-Error	iosxe-chassismgr	An OOD operation has failed because[chars]	"An OOD operation has failed. This could be due to a hardware or software defect."	"Note the time of the error message and examine the logs for OOD errors. If the logs provide information about a correctable problem
CMRP-3-OPR_PENDING	3-Error	iosxe-chassismgr	The slot %d is has pending operation	-	-
CMRP-3-PEER_INVALID	3-Error	iosxe-chassismgr	A peer table entry has invalid state.	"A peer table entry has an invalid state. This could be due to a software defect or system resource exhaustion."	"In most cases
CMRP-3-PSM_REMOVE_SHUT	3-Error	iosxe-chassismgr	The system will shut down in %d minutes	"A power supply has been removed and the router will shutdown to protect itself from overheating in the amount of time stated in the error message."	"Reinsert a power supply into the power supply slot as soon as possible. The second power supply is required because the fans in the power supply are essential in monitoring router temperature."
CMRP-3-PFU_FAILURE	3-Error	iosxe-chassismgr	Failed to handle power supply failure for[chars] in slot %d	-	-
CMRP-3-PFU_FAN	3-Error	iosxe-chassismgr	Failed to handle fan failure for[chars] in slot %d	-	-
CMRP-3-PFU_INITIALIZATION	3-Error	iosxe-chassismgr	The RP has failed to initialize a Power Supply/Fan module controller because[chars]	"The RP failed to initialize a Power Supply or Fan module controller. This could be due to a hardware defect or C2W access failure."	"Note the time of the error message and examine the logs for C2W and hardware errors. If the logs provide information about a correctable problem

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMRP-3-PFU_MISSING	3-Error	iosxe-chassismgr	The platform does not detect a power supply in slot %d	"There is no power supply in one of the power supply slots."	"Insert a power supply into the empty slot. The router requires two power supplies because the fans in the power supply are needed to cool the router."
CMRP-3-PFU_OIR	3-Error	iosxe-chassismgr	Failed to handle a[chars] oir event for PEM in slot %d	-	-
CMRP-3-POWERBUDGET	3-Error	cbr-platform-infra	not enough power budget left for :[chars]:%d	"The system do not have enough power budget for the new card."	"the message will be displayed when not enough power budget left for the new card inserted."
CMRP-3-PSU_INCOMPATIBLE	3-Error	iosxe-chassismgr	The combination of Power Supply in P0:[chars] and P1:[chars] is not supported in power[chars] mode	"An incompatible power supplies combination has been identified in P0 and P1 power supply slots. This could cause unpredictable behavior in power management in the router."	"This error indicates that the combination of the two power supplies in P0 and P1 is an unsupported combination. In order to fix this issue
CMRP-3-PWR_FAULT	3-Error	iosxe-chassismgr	Shutting down[chars] because power fault on primary is[chars] and secondary is[chars]	"The FRU has been shutdown as a result of a power issue."	"Check to ensure the router is receiving power. Otherwise
CMRP-3-RP_MASTERSHIPSET	3-Error	iosxe-chassismgr	Failed to set RP mastership[chars] because[chars]	"The router failed to establish RP mastership."	"Reload the router."
CMRP-3-RP_MISMATCH	3-Error	iosxe-chassismgr	%s has been held in reset because the part number differs from that of the active RP	"The part number read from the FRU IDPROM is not compatible with part number of the active RP; therefore	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMRP-3-RP_RESET	3-Error	iosxe-chassismgr	RP is resetting :[chars]	"This RP is resetting due to the reason specified."	"No action is necessary."
CMRP3RP_SB_RELOAD	3-Error	iosxe-chassismgr	Reload of Standby RP failed:[chars]	"A request to reload the standby RP failed."	"Manually reload the standby RP. If that fails
CMRP3RP_SWCHB_NOT_READY	3-Error	iosxe-chassismgr	RP switchover:[chars]	"An RP switchover occurred when the standby RP was not ready. The standby RP reset."	"No user action is necessary. Allow the standby RP to reset."
CMRP3SENSOR_INITIALIZATION	3-Error	iosxe-chassismgr	Failed to initialize sensor monitoring because[chars].	"Sensor monitoring failed to initialize."	"Note the time of the error message and examine the logs for IDPROM and hardware errors. If the logs provide information about a correctable problem
CMRP3SENSOR_TYPE	3-Error	iosxe-chassismgr	The sensor type is %d is invalid.	"A sensor type is invalid. This could be due to a hardware defect	-
CMRP3SERBRIDGE_ESI_LINK_FAIL	3-Error	iosxe-chassismgr	Serial Bridge ESI link[chars] between[chars] and[chars] failed to config	"A Serial Bridge ESI link did not configure. This could be due to a software error."	"Note the time of the error message and examine the logs for Serial Bridge and hardware errors. If the logs provide information about a correctable problem
CMRP3SERBRIDGE_ESI_LINK_FAIL	3-Error	iosxe-chassismgr	Serial Bridge ESI link[chars] between[chars] and[chars] failed to lock	"A Serial Bridge ESI link did not lock. This could be due to a hardware defect or a software configuration error."	"Note the time of the error message and examine the logs for Serial Bridge and hardware errors. If the logs provide information about a correctable problem
CMRP3SERBRIDGE_ESI_LINK_FAIL	3-Error	iosxe-chassismgr	Link down in Slot=%u	-	-



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMRP3-SIP_MDR_FAIL	3-Error	iosxe-chassismgr	The SIP%d failed Minimal Disruptive Restart because[chars]	"The SIP failed Minimal Disruptive Restart. Minimal Disruptive Restart process is aborted and an attempt will be made to recover the SIP by resetting the SIP hardware."	"Examine the system logs for errors."
<del>CMRP3-SFT_ERRCR_LOAD</del>	3-Error	asr903-system	Uncorrected Soft error on[chars]	-	-
<del>CMRP3-SFT_ERRCR_LOAD</del>	3-Error	asr903-system	Uncorrected Soft error on[chars]	-	-
CMRP3-SFT_ERRCR_UPDATE	3-Error	asr903-system	Critical soft error on[chars]	"Update for each soft error on different components"	"If this reoccures frequently"
CMRP3-SFT_ERRCR_WAIT	3-Error	asr903-system	Uncorrected Soft error on[chars]	-	-
CMRP3-SYS_REBOOT	3-Error	iosxe-chassismgr	System going down	-	-
<del>CMRP3-THROUGHPUT_LICENSE_FAILED</del>	3-Error	iosxe-chassismgr	Throughput license look-up failed due to '%s'	"This message is to notify the user that a license look-up did not succeed because license manager process could not be contacted. This is a rare case but is due to either a crashed license daemon(licensed) or it encountered an internal error."	"No user action is necessary. However"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CMRP-3-UDI_AUTH	3-Error	iosxe-chassismgr	Quack Unique Device Identifier authentication failed	"This chassis seems to be compromised or tampered with. UDI burned on to the Quack chip and the one read from chassis EEPROM do not match. It can also be a case of either EEPROM or Quack device failure. More details about which specific field failed to match are logged in license daemon log file (licensed_R0.log)."	"User immediately needs to contact Cisco support. This device appears to be tampered with or is a counterfeit device or had a system failure."
CMRP-3-UNSUPPORTED_FRU	3-Error	iosxe-chassismgr	%s in slot[chars] is not supported with[chars] and so it is disabled	"The Product ID read from the FRU IDPROM is not supported in this router. This is due to either Hardware or Software compatibility limitation indicated in the console log"	"Remove the FRU from the chassis. Review the Hardware and Software Compatibility Matrix in IOS XE release notes to determine currently supported configurations."
CMRP-3-UNSUPPORTED_PEM	3-Error	iosxe-chassismgr	%s in slot[chars] is not supported with[chars] and it needs to be replaced immediately	"The Product ID read from the PEM IDPROM is not supported in this hardware configuration. It will be allowed to continue but immediate replacement is required"	"Remove the PEM from the chassis and replace it with a supported PEM. Review the Hardware and Software Compatibility Matrix in IOS XE release notes to determine currently supported configurations."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMRP3-WANPLL_SETUP	3-Error	iosxe-chassismgr	Failed to setup the[chars] of the RP WAN PLL because[chars]	"Failed to setup the RP WAN PLL appropriately. This could be due to a hardware defect of the device."	"Note the time of the error message and examine the logs for WAN PLL related hardware errors. Check if the issue is transient or repeatable. If the problem is not recoverable collect the output of the error message and the chassis- manager and IOS logs. Provide the gathered information to a Cisco technical support representative."
CMR4ACIMESLOIBYBAS	4-Warning	iosxe-chassismgr	The configured active slot/bay bias %d is invalid.	"The configured active slot/bay bias is not 0 or 1. The default value of 0 is used."	"In most cases
CMRP4-CPP_WARN	4-Warning	cbr-platform-infra	Active cable linecard in slot %d has been physically removed.	"Plug out one LC with heavy traffic	-
CMR4FANTRAYOVCURRN	4-Warning	iosxe-chassismgr	A Fan Tray over-current has been detected. System will be reset.	"Internal error (Fan Tray over-current) condition was detected	-
CMR4MOTHERBOARDOVCURRN	4-Warning	iosxe-chassismgr	Motherboard over-current has been detected. System will be reset.	"Internal error (Motherboard over-current) condition was detected	-
CMR4NIMOVERCURRENT	4-Warning	iosxe-chassismgr	A NIM over-current condition has been detected. System will be reset.	"Internal error (NIM over-current) condition was detected	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMRBRIDGE_SCA_DRIVESET	4-Warning	iosxe-chassismgr	Serial Bridge ESI link[chars] between[chars] and[chars] isn't locked; Card should be reseated	"A Serial Bridge ESI link did not lock during first 10 retries due to improper seating."	"Note the time of the error message and examine the logs for Serial Bridge and hardware errors. If the logs provide information about a correctable problem
CMRPSIEMOVCURRENT	4-Warning	iosxe-chassismgr	Overall system over-current has been detected. System will be reset.	"Internal error (system over-current) condition was detected	-
CMRPSIEMOVCURRENT	5-Notice	iosxe-chassismgr	Card[chars] took %d secs to boot	"This is an informational message about boot time of all cards."	"Action is not necessary."
CMRPSIEMOVCURRENT	5-Notice	iosxe-chassismgr	CPLD ver[chars] in slot[chars] does not match Active CPLD ver[chars]	"This FRU requires a matching CPLD firmware to function properly in this chassis"	"Upgrade the CPLD firmware to have matching versions."
CMRPSIEMOVCURRENT	5-Notice	iosxe-chassismgr	HA message:[chars]	"HA Error Occured. This could be due to a software defect	-
CMRNEBS_ACCESS_DENIED	5-Notice	iosxe-chassismgr	Failed to access NGPIO PID list for[chars] on slot/bay %u/%u in NEBS mode.	"Unable to access NGPIO PID list for slot %d bay %d in NEBS mode"	LOG_SID_RECUR_ACTION
CMRPSIEMOVCURRENT	5-Notice	cbr-platform-infra	Output of PEM %d is %d V	"Value of Output of PEM."	"If PEM Output is 0
CMRPRELEASE_HARDWARE	5-Notice	iosxe-chassismgr	%s is pre-release hardware	"The board does have an official production part number."	"Immediately contact Cisco for a replacement board."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CMR</del> SUDI_KEY_READ_FAILED	5-Notice	iosxe-chassismgr	SUDI(SHA2) key read failed during Initialization.	"SHA key read failed during Initialization."	"Check SUDI Trustpoint creation. Please collect output of show tech-support and provide the gathered information to a Cisco technical support representative."
<del>CMR</del> UNSUPPORTED_MODULE	5-Notice	iosxe-chassismgr	Unsupported Module inserted. The module[chars] on the slot %d may not be a genuine Cisco product. Cisco warranties and support programs only apply to genuine Cisco products. If Cisco determines that your insertion of non-Cisco memory	-	-
<del>CMR</del> SUPPORTED_MODULE_IN_NEBS	5-Notice	iosxe-chassismgr	The module[chars] on slot/subslot %u/%u is not supported in NEBS power mode.	"Hardware in the specified location should be removed in NEBS mode"	LOG_SID_RECUR_ACTION
<del>CMR</del> MODULE_REBOOT_REQUIRED	6-Information	iosxe-chassismgr	Configuration must be saved and the chassis must be rebooted for IOS redundancy changes to take effect	"Chassis manager received notification that IOS software redundancy has been configured. For these changes to take effect	-
<del>CMR</del> MODULES_STARTING	6-Information	iosxe-chassismgr	Software redundant IOS configured; starting standby in %u seconds.	"Chassis manager received notification that IOS software redundancy has been configured. The standby IOS will be started in the time specified."	"No action is necessary."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CMR6DUAL_ISSICHNG</del>	6-Information	iosxe-chassismgr	Bringing down standby IOS	"Chassis manager received notification to stop the standby IOS instance. This may be for a redundancy mode change. Depending on the reason	-
<del>CMR6CURESET_OIHRP</del>	6-Information	iosxe-chassismgr	The other SUP RP %d is still holding the midplane lock to block the supervisor failover	-	-
<del>CMR6PHASBNOIRADY</del>	6-Information	iosxe-chassismgr	FP switchover: F%d[chars]	"The standby ESP is not ready for a switchover."	"No user action is necessary."
CMR6FP_HA_STATUS	6-Information	iosxe-chassismgr	F%d redundancy state is[chars]	"The ESP has transitioned into a new High Availability state."	"No user action is necessary. This is an informational message."
<del>CMR6FPSBRLCADREQ</del>	6-Information	iosxe-chassismgr	Reloading Standby FP:[chars]	"A reload of Standby FP has been requested."	"No action is necessary."
<del>CMR6FRU_FPGA_UPGRQED</del>	6-Information	iosxe-chassismgr	%s in slot[chars] has INCOMPATIBLE FPGA firmware version with[chars]. Upgrade the FPGA firmware	"This FRU requires a newer FPGA firmware to function properly in this chassis"	"Upgrade the FPGA firmware on this FRU using the <b>upgrade hw-programmable FPGA file <pkg_file> slot <fru_slot> </b> command."
<del>CMR6HW_CPLD_UPGRQED</del>	6-Information	iosxe-chassismgr	Hardware CPLD postupgrade on CLC%d was successfully programmed.The LC is reloading to make it take effect.	"The hw-programmable CPLD postupgrade was upgraded successfully"	"No action is required. This is informational message"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CMR_HWR_UPD_FW_SR</del>	6-Information	iosxe-chassismgr	Hardware programmable ADM1266s on[chars] in slot[chars] are upgrading	-	-
<del>CMR_HWR_UPD_FW_CS</del>	6-Information	iosxe-chassismgr	Hardware programmable ADM1266s on[chars] in slot[chars] were successfully programmed. The card is reloading to make them work	"The hw-programmable ADM1266 firmware was upgraded successfully"	"No action is required. This is informational message"
<del>CMR_HWR_UPD_PSS_CS</del>	6-Information	iosxe-chassismgr	Power-Supply Module MCUs in slot[chars] were successfully programmed.	"The hw-programmable power-supply was upgraded successfully"	"No action is required. This is informational message"
<del>CMR_HWR_UPD_PSOCS</del>	6-Information	iosxe-chassismgr	Hardware programmable PSOCs on[chars] in slot[chars] were upgraded successfully	"The hw-programmable PSOC was upgraded successfully"	"No action is required. This is informational message"
<del>CMR_HWR_UPD_GSPRT</del>	6-Information	iosxe-chassismgr	Hardware programmable[chars] on[chars] in slot[chars] is upgrading. please don't reload or power-cycle this card. It will take about 5 mins to finish.	"The hw-programmable was upgrading"	"No action is required. This is informational message"
<del>CMR_HIF_CLOSURE_MODE</del>	6-Information	iosxe-chassismgr	The HTPI driver failed to set it's closure mode properly	"This is not a critical error	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMRP-6-HT_STATUS	6-Information	iosxe-chassismgr	R%d hypertransport configured for F%d active	"The RP HyperTransport driver was properly configured for a newly active FP."	"No user action is necessary. This is as informational message indicating normal system operation."
CMRP6IGNORE_FU_OIR	6-Information	asr903-system	Simulating FAN OIR due to FAN Speed profile change	"FAN tray OIR is simulated through software to select new FAN SPEED profile. this message is to let know the user that this is a simulated FAN oir and not physical FAN oir. User needs to ignore next occurrence messages/alarms associated with FAN tray removal/insertion actions. such as FAN tray missing	-
CMRP6MISINSERT	6-Information	iosxe-chassismgr	transceiver module inserted in[chars]	"The online insertion and removal (OIR) facility detected a newly inserted transceiver module for the interface specified in the error message. "	"No action required."
CMRP6MISREMOVED	6-Information	iosxe-chassismgr	Transceiver module removed from[chars]	"The online insertion and removal (OIR) facility detected the removal of a transceiver module from the interface specified in the error message. "	"No action required."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CM</del> CM0NISEFCMATH	6-Information	iosxe-chassismgr	The module inserted in Switch:%d Slot:%d doesn't support the configured Stackwise Virtual link/Dual Active Detection Link Speed. Line card is Power denied. Please replace the Line card with the configured SVL/DAD link speed or remove the config and reload the system	"The Line Card and SVL/DAD CONFIG in the slot mismatch."	"Change the config and reload the system or remove the Line card."
<del>CM</del> CM1RSPDENRCAS0E	6-Information	iosxe-chassismgr	%s redundant FP in slot[chars] is not supported in inter-chassis redundancy mode	"Because the system is configured in box-to-box or inter-chassis redundancy mode	-
<del>CM</del> CM1RSPDENRCAS0E	6-Information	iosxe-chassismgr	%s redundant RP in slot[chars] is not supported in inter-chassis redundancy mode. Please remove it for inter-chassis redundancy to work properly on system reload.	"Because the system is configured in box-to-box or inter-chassis redundancy mode	-
CMRP-6-RFROLE	6-Information	iosxe-chassismgr	RP switchover	-	-
<del>CM</del> CM1RPSBRL0ADREQ	6-Information	iosxe-chassismgr	Reloading Standby RP:[chars]	"A reload of Standby RP has been requested."	"No action is necessary."
<del>CM</del> CM1RPSWICHBSYNC	6-Information	iosxe-chassismgr	RP switchover:[chars]	"The RP switch synchronization timer expired."	"No user action is necessary."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CMCHSSB0R0MEND</del>	6-Information	iosxe-chassismgr	Configuration must be saved and the chassis should be rebooted for optimal single-IOS execution	"Chassis manager received notification that IOS software redundancy has been unconfigured. For optimal runtime resource allocation	-
<del>CMRSBYHDDKUNAL</del>	6-Information	iosxe-chassismgr	stby-harddisk is offline	"The stby-harddisk is not available."	"No user action is necessary. This is an informational message."
<del>CMSSACONHSEED</del>	6-Information	iosxe-chassismgr	SPA %d/%d oir insert is denied	"test command executed disallowing the spa to be inserted."	"Execute the test command allowing the insertion of the spa for normal operation"
<del>CMSSISACRONNEOS</del>	6-Information	iosxe-chassismgr	SPA %d/%d oir online status is set to[chars]	"test command executed to either allow/deny the spa coming online."	"If the card does not come online
<del>CMR6F0LGRU1INE</del>	6-Information	iosxe-chassismgr	Throughput license[chars]	-	-
<del>CMRRCMMASSIBNL</del>	3-Error	Errormcast_flow_status_tbl is NULL!	mcast_flow_status_tbl not initialized	cbr-cmts-infra	LOGSIDSHTEHACION
<del>CMRRCMCONFADLE</del>	3-Error	DOCSIS SYNC configuration list creation failure current slot [dec]	Failed to create the list of LCHA DOCSIS SYNC configuration	cbr-cmts-infra	LOGSIDSHTEHACION
<del>CMRRCISNCOFBMD</del>	3-Error	DOCSIS SYNC configuration list is invalid current slot [dec] virtual slot [dec]	The list of LCHA DOCSIS SYNC configuration is invalid	cbr-cmts-infra	LOGSIDSHTEHACION
<del>CMRRCACMCMAMH</del>	4-Warning	LCHA CDMAN to LC CM Reconciliation: Mac: [enet] Reason: [chars]	Mis-match between CDMAN and LC CM data	cbr-cmts-infra	LOGSIDSHTEHACION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CMIS_NRA3CDMP_MCH</del>	4-Warning	LCHA CDMAN to LC DMP Reconciliation: HW-Flow: [dec] Reason: [chars]	Mis-match between CDMAN and LC DMP data	cbr-cmts-infra	LOG_SIDSH_TECH_ACTION
<del>CMIS_NRA3UMP_MCH</del>	4-Warning	LCHA CDMAN to LC UMP Reconciliation: Service-Flow: [dec] Reason: [chars]	Mis-match between CDMAN and LC UMP data	cbr-cmts-infra	LOG_SIDSH_TECH_ACTION
<del>CMIS_NRA3RFCH_ERR</del>	3-Error	Controller [dec]/[dec]/[dec] has already configured [dec] rf channels.	Failed to bind controller to profile as there are rf channels under this controller already.	cbr-cmts-infra	-
<del>CMIS_NRA3WB_ERR</del>	3-Error	WB interface resource on [dec]/[dec]/[dec] Exhausted	Unable to allocate additional WB Interface.	cbr-cmts-infra	LOG_SIDSH_TECH_ACTION
CMIS_NRA3FPM_ERR	3-Error	[chars]: CM [enet] profile [dec]	A service flow for the modem has been mapped to a profile that is not configured for the ofdm channel.	cbr-cmts-infra	"Remove or correct the ofdm-flow-to-profile " "configuration for the modem."
<del>CMIS_NRA3CRYPTO_ERR</del>	3-Error	Failed to create process to create entropy	CPU doesn't support RDRAND for crypto entropy.	cbr-cmts-infra	LOG_SIDSH_TECH_ACTION
CMIS_NRA3NCRAND4	3-Error	Failed to read entropy from CPU	Failure to retrieve entropy for random number generator.	cbr-cmts-infra	LOG_SIDSH_TECH_ACTION
CMIS_NRA3NCRAND5	3-Error	Failed to generate random number	Failure to generate random number.	cbr-cmts-infra	LOG_SIDSH_TECH_ACTION
CMIS_INFRA-3NORES	3-Error	[chars] [dec] [dec]	An internal software error occurred.	cbr-cmts-infra	LOG_SIDSH_TECH_ACTION
CMIS_NRA3NORES_EXD	3-Error	[chars] [dec] [dec]	An internal software error occurred.	cbr-cmts-infra	LOG_SIDSH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CMNRCDDSDSRIOR</del>	3-Error	Failed to start OUDP session number [dec]. The calculated max_burst_per_cycle [dec] is greater than the configured bursts_per_cycle [dec].	Failed to start OUDP session because the calculated number of max_bursts_per_cycle supported is greater than the configured number of max_bursts_per_cycle.	cbr-cmts-infra	-
<del>CMNPNMVALDDIG</del>	3-Error	PNM: Capture tests cannot be started on the ifindex [dec] - because BDT table is not active for the dest index [node] verify tftp ip and path configs before starting capture	PNM BDT TFTP IP address and PATH should be configured to run capture	cbr-cmts-infra	"Configure BDT TFTP IP address and PATH to valid" " values and ensure BDT table is in active state " "to start captures."
<del>CMNPNMADRQANG</del>	3-Error	PNM: Capture tests cannot be started on port [dec]/[dec]/[dec] dev [dec] - Current capcfg freq: [dec]Hz span: [dec]Hz. For this user configured center freq [dec]Hz expected span value should not be more than [dec]Hz.	PNM capture configuration has invalid values capture start rejected	cbr-cmts-infra	"Set the capture configuration center frequency " "and/or span to valid range as per suggested recommendations in msg to" " run captures."
<del>CMNPNMADMTRIG</del>	3-Error	PNM: Capture tests cannot be started on ifindex [dec] - Host IP and TFTP IP should be configured same before starting capture	Host IP and TFTP IP address should be configured same to run captures	cbr-cmts-infra	"Configure Host IP and TFTP IP address to valid values" " to run captures."
<del>CMNPNMADPHIG</del>	3-Error	PNM: Capture tests cannot be started on ifindex [dec] - TFTP IP address should be configured before starting capture	PNM TFTP IP address should be configured to run captures	cbr-cmts-infra	"Configure TFTP IP address to valid values" " to run captures."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMIS_PNM_PATH_CFG	3-Error	PNM: Capture tests cannot be started on ifindex [dec] - TFTP PATH is not valid configure valid path before starting capture	PNM TFTP PATH should be configured to run captures	cbr-cmts-infra	"Configure TFTP PATH to valid values" " to run captures."
CMIS_PNM_CFG	3-Error	PNM: Capture tests cannot be started on port [dec]/[dec]/[dec] dev [dec] - both capture config center frequency: [dec]Hz and span: [dec]Hz should be non zero or no meaningful data can be captured by CLC.	PNM Capture center frequency and span cannot be zero to run captures	cbr-cmts-infra	"Set non zero valid values for capture configuration " "center frequency and span paramters to run captures."
CMIS_RAIC_VFLOW	3-Error	Attempt to realloc valid flow: [dec] [enet] md[dec] sid[dec] sfid[dec] dsid[dec]. req: [enet]	An internal software error occurred.	cbr-cmts-infra	LOG_SID_SH_TECH_ACTION
CMIS_INFRA3RELOAD	3-Error	Configuration changed for Gemini 1 ports on card in slot [dec]. Please reload the card for the changes to take effect and save the configuration.	OFDMA channel bandwidth is too small to support the minimum number of mini-slots or no minislots to schedule IR/FR	cbr-cmts-infra	LOG_SID_SH_TECH_ACTION
CMIS_RAEMP_NALDK	5-Notice	Invalid Index: [dec] >= [dec]	An internal software error occurred and an Invalid Index value was used. Such errors typically happen due to timing issues and can be ignored if only seen infrequently. Report the error to Tech Support if seen repeatedly.	cbr-cmts-infra	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CVRPACNOUOENF</del>	6-Information	[chars] channel [dec]/0/[dec]:[dec] configuration is being continuously changed or it's admin state is being continuously toggled causing the system to enter an indeterminate state recommend pacing controller/channel config changes.	Controller/channel config is being continuously changed or it's admin state is being toggled this can put the system in an indeterminate state causing the modems to fall offline online or not come online.	cbr-cmts-infra	"Pace controller/channel configuration changes giving the system enough time to react to these events recommended wait time is 30 seconds between config operations on controllers/channels use the recommendation to toggle channel admin state if modems don't come online or are partially online."
<del>CVRPACNADSTHCE</del>	6-Information	User attempted to perform a no shut on Integrated-Cable [dec]/0/[dec] [dec] seconds after a shut event. This does not allow resources sufficient time to clean up. Calculated wait time was [dec] seconds between shut/no shut config operations on this controller.	Controller is attempting to be no shut too soon after a shut event. This operation was blocked to prevent resources from being reused before they have been cleaned up.	cbr-cmts-infra	-
<del>CVRPACNOCMAH</del>	6-Information	[chars] [node][enet]:[enet]	An internal software error occurred.	cbr-cmts-infra	LOG_SID_SH_TECH_ACTION
<del>CVRPACNODSAD</del>	6-Information	OU DP session has been started with session [dec] and max_bursts_per_cycle [dec].	An OU DP session has been started with the given session number and a given set of session parameters.	cbr-cmts-infra	-
<del>CVRPACNENDALE</del>	3-Error	cable nonblocked ipc send failed msg_type[[dec]] dst_slot[[dec]]	Cable send nonblocked ipc failed	cbr-application	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMIS3-NR_SEND_FAIL	3-Error	[chars]_Tx: nonblocked send failed dst_slot [dec]	Dynamic service failed to send nonblock IPC message	cbr-application	LOG_STD_NO_ACTION
CMIS3-INVALID_BW	3-Error	Invalid bandwidth configuration: cir_pct [dec] cir_sum [dec] eir_sum [dec]	Bandwidth configuration is invalid	cmts	LOG_STD_ACTION
CMIS3-LIST_CREATE	3-Error	list create failed for list [chars]	The Cisco CMTS router is unable to create list due to insufficient system memory	cmts	"Run the show memory command to verify available system memory. " "If memory is full contact your Cisco technical support " "representative and provide the representative with the " "gathered information"
CMIS3-LIST_ENQUEUE	3-Error	list enqueue failed for list [chars]	Unable to enqueue an entry to list	cmts	LOG_STD_ACTION
CMIS3-LIST_INSERT	3-Error	list insert failed for list [chars]	The Cisco CMTS router is unable to insert an entry into list due to insufficient system memory or insert an exist entry	cmts	"Run the show memory command to verify available system memory. " "Then run the show logging command to view all system-logged " "messages. If memory is full contact your Cisco technical " "support representative and provide the representative with " "the gathered information"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CMISMCASISSM MACH	3-Error	Session Request Response Mismatch for transaction ID [dec] session [chars][chars] CM [enet]	Response from the LC does not match the session requested for.	cmts	LOG_STD_ACTION
CMISKCBGAE RCNSAT	3-Error	Pktcbl reconciliation [chars] in progress:	Pktcbl Reconciliation started.	packetcable	LOG_STD_ACTION
CMISKCBGAE DAHICA	4-Warning	failed to get rcc after LCSO Attempting to get rcc[[dec]] cm[[enet]]	Find invalid rcc while cm recover	cmts	LOG_STD_ACTION
CMISDIEBNDG MACH	4-Warning	Error deleting upstream sid clusters CM[[enet]] docsis_prim_sid[[dec]] matches csc_sid[[dec]]	The secondary sid should never match the primary.	cmts	LOG_STD_ACTION
CMISADSRESL FAILURE	4-Warning	[chars]: [chars] failed	DS Resiliency ipc message processing failure.	cBR	."
CMISENQUEUESDURCAE	4-Warning	Error enqueueing sid element Attempting to enqueue sid[[dec]] onto sid_reuse_queue that already exists	A duplicate sid should never exist in the free pool.	cmts	LOG_STD_ACTION
CMISENQUEUESDNVAD	4-Warning	Error enqueueing sid element Attempting to enqueue invalid sid[[dec]] onto sid_reuse_queue	An invalid sid cannot be added to the free pool.	cmts	LOG_STD_ACTION
CMISPKICLDBERRCR	4-Warning	Pktcbl failure op. [node]type: [[node]] gate id: [[node]] sub_id: [[chars]]	PacketCable database encounters an error Details embedded in message ..	packetcable	LOG_SID_NO_ACTION
CMISKCBGAE RCNIDE	4-Warning	Reconciliation [chars] for slot [node]finished:	Reconciliation completed print counters.	packetcable	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CMISRCBLCONM</del> ACHD	4-Warning	Pktcbl reconciliation [chars] gate IE mismatched:	Pktcbl reconciliation gate IE mismatched.	packetcable	LOG_STD_ACTION
<del>CMISRCBLCONM</del> OUT	4-Warning	Pktcbl reconciliation for slot [dec] timeout	Usually the reconciliation will end after all gates' info being synced between SUP and LC. If we didn't get the end normally timer mechanism will take job and clean up left gates' info	packetcable	LOG_STD_ACTION
<del>CMISRCNCLCM</del> FINHIC	4-Warning	Reconciliation [chars] for slot [dec] finished:	Reconciliation finished print counters.	cmts	LOG_STD_ACTION
<del>CMISRCNCLCM</del> FINHUP	4-Warning	Reconciliation [chars] for slot [dec] finished:	Reconciliation finished print counters.	cmts	LOG_STD_ACTION
<del>CMISRCNCLCM</del> MMACH	4-Warning	Modem [enet] on Ca[dec]/0/[dec] mismatch during reconciliation delete reason: [chars]	After the LC switchover modem info will be synced to SUP to compare if there is any info mismatcheg: modem state service flow info etc. the modem will be deleted fully.	cmts	LOG_STD_ACTION
<del>CMISRCNCLCM</del> MIMOUT	4-Warning	Reconciliation for slot [dec] timeout	Usually the reconciliation will end after all modem info being synced between SUP and LC. If we didn't get the end normally timer mechanism will take job and clean up left modem info	cmts	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CMSRCONLSIDCMFINH</del>	4-Warning	Reconciliation reset partial D31 CM for slot [dec] finished: D3.1 Online [dec] D3.1 DS partial [dec] D3.1 US partial [dec] D3.1 both partial [dec]. D3.0 DS partial [dec] D3.0 US partial [dec] D3.0 both partial [dec].	Reconciliation reset partial D31 CM finished print counters.	cmts	LOG_STD_ACTION
<del>CMSUPSTREAMSIDMATCH</del>	4-Warning	Error populating upstream sid clusters CM[[enet]] docsis_prim_sid[[dec]] matches csc_sid[[dec]]	The secondary sid should never match the primary.	cmts	LOG_STD_ACTION
<del>CMSKICEL_GAIERRCR</del>	6-Information	Pktcbl failure op. [node]type: [[node]] gate id: [[node]] sub_id: [[chars]]	PacketCable encounters an error Details embedded in message ..	packetcable	LOG_SID_NO_ACTION
<del>CNSDMPROCESSAID</del>	3-Error	PROCESSING FAILED	The processing of CNS DHCP Option 43 message failed.	-	"Need to verify the CNS DHCP option 43 message is in correct format.\n\n If not correct it and send this message again."
<del>CNSDMPROCESSAID</del>	3-Error	PROCESSING FAILED	The processing of CNS DHCP Option 43 message failed.	-	"Need to verify the CNS DHCP option 43 message is in correct format.\n\n If not correct it and send this message again."
CNS-3-FAULT	3-Error	[chars]	CNS subsystem has detected an internal exception condition	cns-agents	LOG_STD_ACTION
CNS-3-FAULT	3-Error	[chars]	CNS subsystem has detected an internal exception condition	cns-agents	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CNS-3-MEMORY	3-Error	[chars]	CNS subsystem has experienced a problem getting the required memory to complete this operation.	cns_agents	"Check system memory for other memory allocation errors and contact Technical support for problem resolution. In the absence of IOS errors upgrading the memory in the network device may be required."
CNS-3-MEMORY	3-Error	[chars]	CNS subsystem has experienced a problem getting the required memory to complete this operation.	cns_agents	"Check system memory for other memory allocation errors and contact Technical support for problem resolution. In the absence of IOS errors upgrading the memory in the network device may be required."
CNS-3-TRANSPORT	3-Error	[chars]	CNS subsystem has experienced a problem contacting an external application.	cns_agents	"See specific message text for an indication as to what the cause might be. Check the network configuration and cables to make sure the remote application is running and the address is accessible"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CNS-3-TRANSPORT	3-Error	[chars]	CNS subsystem has experienced a problem contacting an external\n\n application.	cns_agents	"See specific message text for an indication as to what the\n\n cause might be. Check the network configuration and cables to make\n\n sure the remote application is running and the address is accessible"
CNS-3-WARNING	3-Error	[chars]	CNS subsystem has experienced an unexpected condition executing\n\n a set of commands which did not cause a failure but suggests things\n\n did not go totally correctly	cns_agents	"Check the error log for additional information. This is an informational\n\n message and does not necessarily indicate an error did happen."
CNS-3-WARNING	3-Error	[chars]	CNS subsystem has experienced an unexpected condition executing\n\n a set of commands which did not cause a failure but suggests things\n\n did not go totally correctly	cns_agents	"Check the error log for additional information. This is an informational\n\n message and does not necessarily indicate an error did happen."
CNS3-XML_SEMANTIC	3-Error	[chars]	CNS subsystem has experienced an error while processing the XML \n\n encapsulation of configuration command.	cns_configagent	"The externally supplied XML has errors in it and cannot be processed.\n\n See specific message text for an indication as to what the\n\n cause might be. This will possible require the command to be\n\n checked and reissued from the server."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CNS3-XML_SEMANTIC	3-Error	[chars]	CNS subsystem has experienced an error while processing the XML \n\ encapsulation of configuration command.	cns_configagent	"The externally supplied XML has errors in it and cannot be processed.\n\ See specific message text for an indication as to what the\n\ cause might be. This will possibly require the command to be\n\ checked and reissued from the server."
<del>CNS5-DHCP_PROCESS_DONE</del>	5-Notice	PROCESSING DONE	The processing of CNS DHCP Option 43 message succeeded.	-	"None."
<del>CNS5-DHCP_PROCESS_DONE</del>	5-Notice	PROCESSING DONE	The processing of CNS DHCP Option 43 message succeeded.	-	"None."
CNS5CONFIG_SUCCESS	5-Notice	SUCCESSFUL_COMPLETION	The configuration download has been applied successfully.	-	"None."
CNS5CONFIG_SUCCESS	5-Notice	SUCCESSFUL_COMPLETION	The configuration download has been applied successfully.	-	"None."
CNS-5-IOS_UP	5-Notice	-	-	-	-
CNS-5-IOS_UP	5-Notice	-	-	-	-
CNS6NO_EVENT_AGENT	6-Information	CNS EVENT AGENT IS NOT CONFIGURED	The cns event agent is not configured. The event that was to be sent to it will be dropped	-	"Configure the cns event agent."
CNS6NO_EVENT_AGENT	6-Information	CNS EVENT AGENT IS NOT CONFIGURED	The cns event agent is not configured. The event that was to be sent to it will be dropped	-	"Configure the cns event agent."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
COBALT-3-COBERR	3-Error	Cobalt [chars].	Cobalt generated an error.	cr10k5	"Copy the error message exactly as it appears and report it to your " "technical support representative."
<del>COFFNRA3COFFMDCOM</del>	3-Error	COFF attempted to punt pending decryption through RX-CR unsupported operation	We tried to do a punt with a pending decryption scheduled	cpp-ucode	"File a bug with the COFF infra team"
<del>COFFNRA3COFFMDCOM</del>	3-Error	COFF attempted to allocate an MD object and failed	MD pool ran dry and alloc failed	cpp-ucode	"Check 'sh plat hard qfp act da inf coff' CLI for MD mempool statistics"
<del>COFFNRA3COFFMDCOM</del>	3-Error	COFF attempted to allocate an SQN Mgmt object and failed	SQN Mgmt pool ran dry and alloc failed	cpp-ucode	"Check 'sh plat hard qfp act da inf coff' CLI for SQN Mgmt mempool statistics"
<del>COFFNRA3COFFMDCOM</del>	3-Error	Attempted to start a walk with incompatible mode and priority mode [chars] priority [chars]	<del>COFFNRA3COFFMDCOM</del>	<del>COFFNRA3COFFMDCOM</del>	LOG_STD_ACTION
<del>COFFNRA3COFFMDCOM</del>	3-Error	Attempted to start a walk with incompatible mode and priority mode [chars] priority [chars]	<del>COFFNRA3COFFMDCOM</del>	<del>COFFNRA3COFFMDCOM</del>	LOG_STD_ACTION
<del>COFFNRA3COFFMDCOM</del>	3-Error	Attempted to start a walk with incompatible mode and process mode [chars] process [chars]	<del>COFFNRA3COFFMDCOM</del>	<del>COFFNRA3COFFMDCOM</del>	LOG_STD_ACTION
<del>COFFNRA3COFFMDCOM</del>	3-Error	Attempted to start a walk with incompatible mode and process mode [chars] process [chars]	<del>COFFNRA3COFFMDCOM</del>	<del>COFFNRA3COFFMDCOM</del>	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>COLLECTION3PROC_INT</del>	3-Error	Initialization of process [chars] failed unable to [chars]	<del>COLLECTION_INTERNAL_ERROR</del>	<del>COLLECTIONDISCONNECT</del>	LOG_STD_ACTION
<del>COLLECTION3PROC_INT</del>	3-Error	Initialization of process [chars] failed unable to [chars]	<del>COLLECTION_INTERNAL_ERROR</del>	<del>COLLECTIONDISCONNECT</del>	LOG_STD_ACTION
<del>COLLECTION3SUB_WALK</del>	3-Error	Subwalk mismatch walk [node]priority [chars] mode [chars]	<del>COLLECTION_INTERNAL_ERROR</del>	<del>COLLECTIONDISCONNECT</del>	LOG_STD_ACTION
<del>COLLECTION3SUB_WALK</del>	3-Error	Subwalk mismatch walk [node]priority [chars] mode [chars]	<del>COLLECTION_INTERNAL_ERROR</del>	<del>COLLECTIONDISCONNECT</del>	LOG_STD_ACTION
<del>COLLECTOR_EXISTING_COLLECTOR</del>	3-Error	Collector [chars] already exists\n	A collector already exists. Only one collector may be configured at a time.	media-mon-collector	"Modify the existing collector or remove it " "and create a new one with the desired name"
<del>COLLECTOR_EXISTING_COLLECTOR</del>	3-Error	Collector [chars] already exists\n	A collector already exists. Only one collector may be configured at a time.	media-mon-collector	"Modify the existing collector or remove it " "and create a new one with the desired name"
<del>COLLECTOR_MODE_INVALID</del>	3-Error	The collector mode is invalid	An error occurred when attempting change the collector mode. The mode has reverted to the previous value	media-mon-collector	LOG_STD_ACTION
<del>COLLECTOR_MODE_INVALID</del>	3-Error	The collector mode is invalid	An error occurred when attempting change the collector mode. The mode has reverted to the previous value	media-mon-collector	LOG_STD_ACTION
<del>COLLECTOR_PORT_INVALID</del>	3-Error	Failed to set the collector port to [dec]	An error occurred when attempting change the collector port. The port has reverted to the previous value	media-mon-collector	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
COLLECTOR_CHANGE_FAIL	3-Error	Failed to set the collector port to [dec]	An error occurred when attempting change the collector port. The port has reverted to the previous value	media-mon-collector	LOG_STD_ACTION
COLLECTOR_START_FAIL	3-Error	Failed to start collector process	An error occurred when attempting to start the collector	media-mon-collector	LOG_STD_ACTION
COLLECTOR_START_FAIL	3-Error	Failed to start collector process	An error occurred when attempting to start the collector	media-mon-collector	LOG_STD_ACTION
COLLECTOR_REMOVE_FAIL	3-Error	The collector name is unrecognized	The Collector name give does not match the collector configured	media-mon-collector	LOG_STD_ACTION
COLLECTOR_REMOVE_FAIL	3-Error	The collector name is unrecognized	The Collector name give does not match the collector configured	media-mon-collector	LOG_STD_ACTION
COLLECTOR_RESET_MODE	3-Error	Failed to reset csb vars	Reset of the csb vars failed due to lack of memory	media-mon-collector	LOG_STD_ACTION
COLLECTOR_RESET_MODE	3-Error	Failed to reset csb vars	Reset of the csb vars failed due to lack of memory	media-mon-collector	LOG_STD_ACTION
COMM_UNKNOWN_RECV	3-Error	ERRMSG_HL_AG_TRACEBACK	-	-	-
COMM_UNKNOWN_RECV	3-Error	ERRMSG_HL_AG_TRACEBACK	-	-	-
COMMON_INTERFACE_ILLEGAL	2-Critical	Attempt to used uninitialized CEF data structure.	COMMON_INTERFACE_ERROR	COMMON_INTERFACE_ERROR	LOG_STD_ACTION
COMMON_INTERFACE_ILLEGAL	2-Critical	Attempt to used uninitialized CEF data structure.	COMMON_INTERFACE_ERROR	COMMON_INTERFACE_ERROR	LOG_STD_ACTION
COMMON_INTERFACE_ILLEGAL	2-Critical	Attempt to create CEF interface for [chars] with illegal index: [dec]	COMMON_INTERFACE_ERROR	COMMON_INTERFACE_ERROR	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>COMMON_INTERFACE</del>	2-Critical	Attempt to create CEF interface for [chars] with illegal index: [dec]	<del>COMMON_INTERFACE</del>	<del>COMMON_INTERFACE</del>	LOG_STD_ACTION
<del>COMMON_INTERFACE</del>	2-Critical	Attempt to create CEF interface for [chars] with illegal if_number: [dec]	<del>COMMON_INTERFACE</del>	<del>COMMON_INTERFACE</del>	LOG_STD_ACTION
<del>COMMON_INTERFACE</del>	2-Critical	Attempt to create CEF interface for [chars] with illegal if_number: [dec]	<del>COMMON_INTERFACE</del>	<del>COMMON_INTERFACE</del>	LOG_STD_ACTION
<del>COMMON_INTERFACE</del>	2-Critical	Attempt to use out of bounds interface index: [dec]	<del>COMMON_INTERFACE</del>	<del>COMMON_INTERFACE</del>	LOG_STD_ACTION
<del>COMMON_INTERFACE</del>	2-Critical	Attempt to use out of bounds interface index: [dec]	<del>COMMON_INTERFACE</del>	<del>COMMON_INTERFACE</del>	LOG_STD_ACTION
<del>COMMON_INTERFACE</del>	3-Error	IPV6_SWSB_CTRL name length error [chars] acl_in [dec] [dec]	IPv6 in/out ACL and IPv6 PBR name lengths for/from an IPC XDR message are invalid. The names will not be used so as to prevent any buffer overrun errors. There is a possibility that either the XDR message or an internal IPv6 FIB structure is corrupted	<del>COMMON_INTERFACE</del>	LOG_STD_ACTION
<del>COMMON_INTERFACE</del>	3-Error	IPV6_SWSB_CTRL name length error [chars] acl_in [dec] [dec]	IPv6 in/out ACL and IPv6 PBR name lengths for/from an IPC XDR message are invalid. The names will not be used so as to prevent any buffer overrun errors. There is a possibility that either the XDR message or an internal IPv6 FIB structure is corrupted	<del>COMMON_INTERFACE</del>	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
COMMON_FIB3-ASSERT	3-Error	Assertion '[chars]' failed in [chars] CEF [0x[node]x]: [chars] [chars][chars].	COMMON_INTERNAL_ERR	COMMON_BDISCOMMON	LOG_STD_ACTION
COMMON_FIB3-ASSERT	3-Error	Assertion '[chars]' failed in [chars] CEF [0x[node]x]: [chars] [chars][chars].	COMMON_INTERNAL_ERR	COMMON_BDISCOMMON	LOG_STD_ACTION
COMMON_FIB3-ASSERT_RL	3-Error	Assertion '[chars]' failed in [chars] CEF [0x[node]x]: [chars] [chars][chars].	-	-	-
COMMON_FIB3-ASSERT_RL	3-Error	Assertion '[chars]' failed in [chars] CEF [0x[node]x]: [chars] [chars][chars].	-	-	-
COMMON_FIB3-BFD	3-Error	[chars]:[chars] failed to [chars] BFD session error [[chars]]	COMMON_INTERNAL_ERR	COMMON_BDISCOMMON	LOG_STD_ACTION
COMMON_FIB3-BFD	3-Error	[chars]:[chars] failed to [chars] BFD session error [[chars]]	COMMON_INTERNAL_ERR	COMMON_BDISCOMMON	LOG_STD_ACTION
COMMON_FIB3-BFD_SESS	3-Error	[chars]:[chars] failed to [chars] BFD session error [[chars]]	COMMON_INTERNAL_ERR	COMMON_BDISCOMMON	LOG_STD_ACTION
COMMON_FIB3-BFD_SESS	3-Error	[chars]:[chars] failed to [chars] BFD session error [[chars]]	COMMON_INTERNAL_ERR	COMMON_BDISCOMMON	LOG_STD_ACTION
COMMON_FIB3-BINDLABEL	3-Error	Binding label [[chars]] [chars]: [chars]	COMMON_INTERNAL_ERR	COMMON_BDISCOMMON	LOG_STD_ACTION
COMMON_FIB3-BINDLABEL	3-Error	Binding label [[chars]] [chars]: [chars]	COMMON_INTERNAL_ERR	COMMON_BDISCOMMON	LOG_STD_ACTION
COMMON_FIB3-REFERENCE	3-Error	[chars] broker failed to encode msg type [dec] for slots [chars]	-	-	-
COMMON_FIB3-REFERENCE	3-Error	[chars] broker failed to encode msg type [dec] for slots [chars]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>COMMON_BKFNBCVAK</del>	3-Error	Bad magic for element [node]0x[node]x != 0x[node]x	-	-	-
<del>COMMON_BKFNBCVAK</del>	3-Error	Bad magic for element [node]0x[node]x != 0x[node]x	-	-	-
<del>COMMON_BDENDCYFN</del>	3-Error	Missing handler for type [dec] dependency	<del>COMMON_BNERRA_HRCR</del>	<del>OCE_DDIS_COMPONENT</del>	<del>LOG_STD_ACTION</del>
<del>COMMON_BDENDCYFN</del>	3-Error	Missing handler for type [dec] dependency	<del>COMMON_BNERRA_HRCR</del>	<del>OCE_DDIS_COMPONENT</del>	<del>LOG_STD_ACTION</del>
<del>COMMON_BDENDCYWAK</del>	3-Error	Walk specification [node]missing handler for type [dec] dependency	<del>COMMON_BNERRA_HRCR</del>	<del>COMMON_BDISCOMPNET</del>	<del>LOG_STD_ACTION</del>
<del>COMMON_BDENDCYWAK</del>	3-Error	Walk specification [node]missing handler for type [dec] dependency	<del>COMMON_BNERRA_HRCR</del>	<del>COMMON_BDISCOMPNET</del>	<del>LOG_STD_ACTION</del>
<del>COMMON_BDQUEACTCLEDN</del>	3-Error	dqueue has an active collection just prior to destruction	<del>COMMON_BNERRA_HRCR</del>	<del>COMMON_BDISCOMPNET</del>	<del>LOG_STD_ACTION</del>
<del>COMMON_BDQUEACTCLEDN</del>	3-Error	dqueue has an active collection just prior to destruction	<del>COMMON_BNERRA_HRCR</del>	<del>COMMON_BDISCOMPNET</del>	<del>LOG_STD_ACTION</del>
<del>COMMON_BDQUEBCHM</del>	3-Error	Unexpected element type %u	<del>COMMON_BNERRA_HRCR</del>	<del>COMMON_BDISCOMPNET</del>	<del>LOG_STD_ACTION</del>
<del>COMMON_BDQUEBCHM</del>	3-Error	Unexpected element type %u	<del>COMMON_BNERRA_HRCR</del>	<del>COMMON_BDISCOMPNET</del>	<del>LOG_STD_ACTION</del>
<del>COMMON_BDQUEBQNT</del>	3-Error	elem [node]type 0x[hec] elem->next [node]elem->next_type 0x[hec] elem->next->prev %p	<del>COMMON_BNERRA_HRCR</del>	<del>COMMON_BDISCOMPNET</del>	<del>LOG_STD_ACTION</del>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
COMMON_QUEUE_NEXT	3-Error	elem [node]type 0x[hec] elem->next [node]elem->next_type 0x[hec] elem->next->prev %p	COMMON_INTERNAL_ERROR	COMMON_BDS_COMPONENT	LOG_STD_ACTION
COMMON_QUEUE_PREV	3-Error	elem [node]type 0x[hec] elem->prev [node]elem->prev_type 0x[hec] elem->prev->next %p	COMMON_INTERNAL_ERROR	COMMON_BDS_COMPONENT	LOG_STD_ACTION
COMMON_QUEUE_PREV	3-Error	elem [node]type 0x[hec] elem->prev [node]elem->prev_type 0x[hec] elem->prev->next %p	COMMON_INTERNAL_ERROR	COMMON_BDS_COMPONENT	LOG_STD_ACTION
COMMON_QUEUE_EMPTY	3-Error	dqueue is not empty just prior to destruction	COMMON_INTERNAL_ERROR	COMMON_BDS_COMPONENT	LOG_STD_ACTION
COMMON_QUEUE_EMPTY	3-Error	dqueue is not empty just prior to destruction	COMMON_INTERNAL_ERROR	COMMON_BDS_COMPONENT	LOG_STD_ACTION
COMMON_FIB3_EPOCH	3-Error	Failed to start [chars] of [chars] entries in table [chars]	COMMON_INTERNAL_ERROR	COMMON_BDS_COMPONENT	LOG_STD_ACTION
COMMON_FIB3_EPOCH	3-Error	Failed to start [chars] of [chars] entries in table [chars]	COMMON_INTERNAL_ERROR	COMMON_BDS_COMPONENT	LOG_STD_ACTION
COMMON_BAD_LINKTYPE	3-Error	OCE chain for [chars] terminates with [chars] linktype is [chars] not [chars]	An OCE chain for a FIB entry terminates with a linktype other than what was expected. This will cause encapsulation problems in the dataplane.	COMMON_BDS_COMPONENT	"Get the full show ip[v6] cef <vrf prefix> internal" " output of the affected FIB entry and determine" " if anything looks wrong. For instance is a label" " or a midchain adjacency missing?"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>COMMON_FIB_BAD_LINKTYPE</del>	3-Error	OCE chain for [chars] terminates with [chars] linktype is [chars] not [chars]	An OCE chain for a FIB entry terminates with a linktype other than what was expected. This will cause encapsulation problems in the dataplane.	<del>COMMON_BDD_COMPONENT</del>	"Get the full show ip[v6] cef <vrf prefix> internal" " output of the affected FIB entry and determine" " if anything looks wrong. For instance is a label" " or a midchain adjacency missing?"
<del>COMMON_FIB_ATTACH_EXPORT</del>	3-Error	Attached export tracking error: [chars]	<del>COMMON_BNTERNAL_ERR</del>	<del>COMMON_BDD_COMPONENT</del>	LOG_STD_ACTION
<del>COMMON_FIB_ATTACH_EXPORT</del>	3-Error	Attached export tracking error: [chars]	<del>COMMON_BNTERNAL_ERR</del>	<del>COMMON_BDD_COMPONENT</del>	LOG_STD_ACTION
<del>COMMON_FIB_FIBSOURCE</del>	3-Error	[chars] for [chars] - [chars]	<del>COMMON_BNTERNAL_ERR</del>	<del>COMMON_BDD_COMPONENT</del>	LOG_STD_ACTION
<del>COMMON_FIB_FIBSOURCE</del>	3-Error	[chars] for [chars] - [chars]	<del>COMMON_BNTERNAL_ERR</del>	<del>COMMON_BDD_COMPONENT</del>	LOG_STD_ACTION
<del>COMMON_FIB_FIBSOURCE_SB</del>	3-Error	[chars] - [chars]:[chars]	<del>COMMON_BNTERNAL_ERR</del>	<del>COMMON_BDD_COMPONENT</del>	LOG_STD_ACTION
<del>COMMON_FIB_FIBSOURCE_SB</del>	3-Error	[chars] - [chars]:[chars]	<del>COMMON_BNTERNAL_ERR</del>	<del>COMMON_BDD_COMPONENT</del>	LOG_STD_ACTION
<del>COMMON_FIB_FIBSOURCE_NULL_B</del>	3-Error	[chars] NULL fibidb in broadcast sb	<del>COMMON_BNTERNAL_ERR</del>	<del>COMMON_BDD_COMPONENT</del>	LOG_STD_ACTION
<del>COMMON_FIB_FIBSOURCE_NULL_B</del>	3-Error	[chars] NULL fibidb in broadcast sb	<del>COMMON_BNTERNAL_ERR</del>	<del>COMMON_BDD_COMPONENT</del>	LOG_STD_ACTION
COMMON_FB3_FB_GSB	3-Error	Generic subblock error: [chars]	<del>COMMON_BNTERNAL_ERR</del>	<del>COMMON_BDD_COMPONENT</del>	LOG_STD_ACTION
COMMON_FB3_FB_GSB	3-Error	Generic subblock error: [chars]	<del>COMMON_BNTERNAL_ERR</del>	<del>COMMON_BDD_COMPONENT</del>	LOG_STD_ACTION
COMMON_FB3_FB_GSB2	3-Error	Generic subblock error: [chars][chars][chars]	<del>COMMON_BNTERNAL_ERR</del>	<del>COMMON_BDD_COMPONENT</del>	LOG_STD_ACTION
COMMON_FB3_FB_GSB2	3-Error	Generic subblock error: [chars][chars][chars]	<del>COMMON_BNTERNAL_ERR</del>	<del>COMMON_BDD_COMPONENT</del>	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
COMMON_HO_DIA_EMP	3-Error	[chars] map [chars]	COMMON_INTERNAL_ERR	COMMON_BDIS_COMPONENT	LOG_STD_ACTION
COMMON_HO_DIA_EMP	3-Error	[chars] map [chars]	COMMON_INTERNAL_ERR	COMMON_BDIS_COMPONENT	LOG_STD_ACTION
COMMON_HO_DIA_EMP	3-Error	No useable choices [node]x bucket count %u	COMMON_INTERNAL_ERR	COMMON_BDIS_COMPONENT	LOG_STD_ACTION
COMMON_HO_DIA_EMP	3-Error	No useable choices [node]x bucket count %u	COMMON_INTERNAL_ERR	COMMON_BDIS_COMPONENT	LOG_STD_ACTION
COMMON_HO_DIA_ELSE	3-Error	Unhandled usage flag 0x[hec]	COMMON_INTERNAL_ERR	COMMON_BDIS_COMPONENT	LOG_STD_ACTION
COMMON_HO_DIA_ELSE	3-Error	Unhandled usage flag 0x[hec]	COMMON_INTERNAL_ERR	COMMON_BDIS_COMPONENT	LOG_STD_ACTION
COMMON_HO_DIA_IP_OCE	3-Error	Unable to find MPLS oce for [chars] IP oce	COMMON_INTERNAL_ERR	COMMON_BDIS_COMPONENT	LOG_STD_ACTION
COMMON_HO_DIA_IP_OCE	3-Error	Unable to find MPLS oce for [chars] IP oce	COMMON_INTERNAL_ERR	COMMON_BDIS_COMPONENT	LOG_STD_ACTION
COMMON_HO_DIA_IP_PATH_LIST	3-Error	[chars] non-ip entry 0x[node]x path list [chars]	COMMON_INTERNAL_ERR	COMMON_BDIS_COMPONENT	LOG_STD_ACTION
COMMON_HO_DIA_IP_PATH_LIST	3-Error	[chars] non-ip entry 0x[node]x path list [chars]	COMMON_INTERNAL_ERR	COMMON_BDIS_COMPONENT	LOG_STD_ACTION
COMMON_HO_DIA_IP_PATH_LIST	3-Error	[chars]	COMMON_INTERNAL_ERR	OCE_DDIS_COMPONENT	LOG_STD_ACTION
COMMON_HO_DIA_IP_PATH_LIST	3-Error	[chars]	COMMON_INTERNAL_ERR	OCE_DDIS_COMPONENT	LOG_STD_ACTION
COMMON_HO_DIA_IP_PATH_LIST	3-Error	[chars] path list [chars]	COMMON_INTERNAL_ERR	COMMON_BDIS_COMPONENT	LOG_STD_ACTION
COMMON_HO_DIA_IP_PATH_LIST	3-Error	[chars] path list [chars]	COMMON_INTERNAL_ERR	COMMON_BDIS_COMPONENT	LOG_STD_ACTION
COMMON_HO_DIA_IP_PATH_LIST	3-Error	FIB XDR buffer overflow while encoding [chars] [[chars]]	COMMON_INTERNAL_ERR	COMMON_BDIS_COMPONENT	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
COMMON_FIB_OVERFLOW	3-Error	FIB XDR buffer overflow while encoding [chars] [[chars]]	COMMON_BNERRA_HRCR	COMMON_EDDISCOMPNET	LOG_STD_ACTION
COMMON_FIB_DUMP	3-Error	[chars] [chars]	COMMON_BNERRA_HRCR	OCE_DDIS_COMPONENT	LOG_STD_ACTION
COMMON_FIB_DUMP	3-Error	[chars] [chars]	COMMON_BNERRA_HRCR	OCE_DDIS_COMPONENT	LOG_STD_ACTION
COMMON_FIB_DUMP	3-Error	[chars]	COMMON_BNERRA_HRCR	OCE_DDIS_COMPONENT	LOG_STD_ACTION
COMMON_FIB_DUMP	3-Error	[chars]	COMMON_BNERRA_HRCR	OCE_DDIS_COMPONENT	LOG_STD_ACTION
COMMON_FIB_WDNAME	3-Error	Missing name for fibhwidb ifindex [dec]	-	-	-
COMMON_FIB_WDNAME	3-Error	Missing name for fibhwidb ifindex [dec]	-	-	-
COMMON_FIB_WDNCOS	3-Error	An internal software error occurred. [chars] linked to wrong hwidb [chars]	COMMON_BNERRA_HRCR	COMMON_EDDISCOMPNET	LOG_STD_ACTION
COMMON_FIB_WDNCOS	3-Error	An internal software error occurred. [chars] linked to wrong hwidb [chars]	COMMON_BNERRA_HRCR	COMMON_EDDISCOMPNET	LOG_STD_ACTION
COMMON_FIB_DBERRA	3-Error	fibidb [chars] if_nb [dec] could not be [chars] db	COMMON_BNERRA_HRCR	COMMON_EDDISCOMPNET	LOG_STD_ACTION
COMMON_FIB_DBERRA	3-Error	fibidb [chars] if_nb [dec] could not be [chars] db	COMMON_BNERRA_HRCR	COMMON_EDDISCOMPNET	LOG_STD_ACTION
COMMON_FIB_DBMEM	3-Error	[chars] chunk pool could not be [chars]. Possible memory leak.	COMMON_BNERRA_HRCR	COMMON_EDDISCOMPNET	LOG_STD_ACTION
COMMON_FIB_DBMEM	3-Error	[chars] chunk pool could not be [chars]. Possible memory leak.	COMMON_BNERRA_HRCR	COMMON_EDDISCOMPNET	LOG_STD_ACTION
COMMON_FIB_NULLIBB	3-Error	API called with NULL fibidb	COMMON_BNERRA_HRCR	COMMON_EDDISCOMPNET	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
COMMON_DBFNULDB	3-Error	API called with NULL fibidb	COMMON_INTERNAL_ERR	COMMON_DBSCMONENT	LOG_STD_ACTION
COMMON_DBERRCAL	3-Error	Attempt to update fibidb prior to completion of idb initialization.	COMMON_INTERNAL_ERR	COMMON_DBSCMONENT	LOG_STD_ACTION
COMMON_DBERRCAL	3-Error	Attempt to update fibidb prior to completion of idb initialization.	COMMON_INTERNAL_ERR	COMMON_DBSCMONENT	LOG_STD_ACTION
COMMON_DBERRCONS	3-Error	An internal software error occurred. [chars] should be first fibidb	COMMON_INTERNAL_ERR	COMMON_DBSCMONENT	LOG_STD_ACTION
COMMON_DBERRCONS	3-Error	An internal software error occurred. [chars] should be first fibidb	COMMON_INTERNAL_ERR	COMMON_DBSCMONENT	LOG_STD_ACTION
COMMON_DBERRCONS	3-Error	An internal software error occurred. [chars] linked to wrong idb [chars]	COMMON_INTERNAL_ERR	COMMON_DBSCMONENT	LOG_STD_ACTION
COMMON_DBERRCONS	3-Error	An internal software error occurred. [chars] linked to wrong idb [chars]	COMMON_INTERNAL_ERR	COMMON_DBSCMONENT	LOG_STD_ACTION
COMMON_DBERRBASE	3-Error	interface [chars] being set with non-base table: [chars]	COMMON_INTERNAL_ERR	COMMON_DBSCMONENT	LOG_STD_ACTION
COMMON_DBERRBASE	3-Error	interface [chars] being set with non-base table: [chars]	COMMON_INTERNAL_ERR	COMMON_DBSCMONENT	LOG_STD_ACTION
COMMON_DBERRMEXILEN	3-Error	[chars] ext attempt to decode beyond XDR buffer cp_cur 0x[hec] cp_end 0x[hec] num_ext [dec] curr_ext_idx [dec]	The path extension decode logic is trying to access memory beyond XDR buffer which can lead to memory corruption.	COMMON_DBSCMONENT	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
COMMON_F3B3MEXLEN	3-Error	[chars] ext attempt to decode beyond XDR buffer cp_cur 0x[hec] cp_end 0x[hec] num_ext [dec] curr_ext_idx [dec]	The path extension decode logic is trying to access memory beyond XDR buffer which can lead to memory corruption.	COMMONEDSCOMPNET	LOG_STD_ACTION
COMMON_F3B3CTINDPDP	3-Error	[chars]	COMMON_BNERRA_LRCR	OCEDDISCOMPONENT	LOG_STD_ACTION
COMMON_F3B3CTINDPDP	3-Error	[chars]	COMMON_BNERRA_LRCR	OCEDDISCOMPONENT	LOG_STD_ACTION
COMMON_F3B3BIDHDUMP	3-Error	[chars]	COMMON_BNERRA_LRCR	OCEDDISCOMPONENT	LOG_STD_ACTION
COMMON_F3B3BIDHDUMP	3-Error	[chars]	COMMON_BNERRA_LRCR	OCEDDISCOMPONENT	LOG_STD_ACTION
COMMON_F3B3RMCRMNQ	3-Error	Error queueing RTMGR notification for [chars]:0x[node][chars]	Queueing an event to the CEF table pending event list failed	COMMONEDSCOMPNET	LOG_STD_ACTION
COMMON_F3B3RMCRMNQ	3-Error	Error queueing RTMGR notification for [chars]:0x[node][chars]	Queueing an event to the CEF table pending event list failed	COMMONEDSCOMPNET	LOG_STD_ACTION
COMMON_F3B3RMCRMNQ	3-Error	Error creating RTMGR notification queue for [chars]	Failed to create a queue for tracking RTMGR topology create/delete events	COMMONEDSCOMPNET	LOG_STD_ACTION
COMMON_F3B3RMCRMNQ	3-Error	Error creating RTMGR notification queue for [chars]	Failed to create a queue for tracking RTMGR topology create/delete events	COMMONEDSCOMPNET	LOG_STD_ACTION
COMMON_F3B3BRCNEXT	3-Error	Subtree context unexpected error: app [chars]: [chars]	COMMON_BNERRA_LRCR	COMMONEDSCOMPNET	LOG_STD_ACTION
COMMON_F3B3BRCNEXT	3-Error	Subtree context unexpected error: app [chars]: [chars]	COMMON_BNERRA_LRCR	COMMONEDSCOMPNET	LOG_STD_ACTION
COMMON_F3B3BBIABLE	3-Error	Error for table [dec]: [chars]	COMMON_BNERRA_LRCR	COMMONEDSCOMPNET	LOG_STD_ACTION
COMMON_F3B3BBIABLE	3-Error	Error for table [dec]: [chars]	COMMON_BNERRA_LRCR	COMMONEDSCOMPNET	LOG_STD_ACTION
COMMON_F3B3BBIORO	3-Error	Error for topology [dec]: [chars]	COMMON_BNERRA_LRCR	COMMONEDSCOMPNET	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
COMMON_FB3FBIOPO	3-Error	Error for topology [dec]: [chars]	COMMON_BNERRA_ERRR	COMMON_BDISCMONNT	LOG_STD_ACTION
COMMON_FB3FBICRSIAI	3-Error	Error pulling topology stats [chars][chars]	COMMON_BNERRA_ERRR	COMMON_BDISCMONNT	LOG_STD_ACTION
COMMON_FB3FBICRSIAI	3-Error	Error pulling topology stats [chars][chars]	COMMON_BNERRA_ERRR	COMMON_BDISCMONNT	LOG_STD_ACTION
COMMON_FB3FBXCIENT	3-Error	FIB XDR Client error detected invalid wkid: %u	COMMON_BNERRA_ERRR	COMMON_BDISCMONNT	LOG_STD_ACTION
COMMON_FB3FBXCIENT	3-Error	FIB XDR Client error detected invalid wkid: %u	COMMON_BNERRA_ERRR	COMMON_BDISCMONNT	LOG_STD_ACTION
COMMON_FB3FBXDRNV	3-Error	Invalid XDR format. [chars]	COMMON_BNERRA_ERRR	COMMON_BDISCMONNT	LOG_STD_ACTION
COMMON_FB3FBXDRNV	3-Error	Invalid XDR format. [chars]	COMMON_BNERRA_ERRR	COMMON_BDISCMONNT	LOG_STD_ACTION
COMMON_FB3FBXDRIEN	3-Error	Invalid XDR length. Type [dec] [chars]. XDR/buffer len [dec]/[dec]	-	-	-
COMMON_FB3FBXDRIEN	3-Error	Invalid XDR length. Type [dec] [chars]. XDR/buffer len [dec]/[dec]	-	-	-
COMMON_FB3FBHW_API	3-Error	HW API failure for [chars] CEF [0x[node]x]: [chars] [chars][chars].	COMMON_BNERRA_ERRR	COMMON_BDISCMONNT	LOG_STD_ACTION
COMMON_FB3FBHW_API	3-Error	HW API failure for [chars] CEF [0x[node]x]: [chars] [chars][chars].	COMMON_BNERRA_ERRR	COMMON_BDISCMONNT	LOG_STD_ACTION
COMMON_FB3FBLIST_OP	3-Error	Manipulating interest list - [chars]	COMMON_BNERRA_ERRR	COMMON_BDISCMONNT	LOG_STD_ACTION
COMMON_FB3FBLIST_OP	3-Error	Manipulating interest list - [chars]	COMMON_BNERRA_ERRR	COMMON_BDISCMONNT	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
COMMON_BUG_MSGTME	3-Error	Cannot find ISSU message type for FIB [chars] [dec] [chars]SB [chars] msg	-	-	-
COMMON_BUG_MSGTME	3-Error	Cannot find ISSU message type for FIB [chars] [dec] [chars]SB [chars] msg	-	-	-
COMMON_BUG_TABID	3-Error	Attempt to create [chars] table with illegal tableid [dec] [chars]:[chars]	-	-	-
COMMON_BUG_TABID	3-Error	Attempt to create [chars] table with illegal tableid [dec] [chars]:[chars]	-	-	-
COMMON_BUG_ARGS	3-Error	Illegal arguments - [chars]	COMMON_BNERRRRCR	COMMONEDDISCOMPNET	LOG_STD_ACTION
COMMON_BUG_ARGS	3-Error	Illegal arguments - [chars]	COMMON_BNERRRRCR	COMMONEDDISCOMPNET	LOG_STD_ACTION
COMMON_BUG_ADDRME	3-Error	Invalid address type [dec][chars]	COMMON_BNERRRRCR	COMMONEDDISCOMPNET	LOG_STD_ACTION
COMMON_BUG_ADDRME	3-Error	Invalid address type [dec][chars]	COMMON_BNERRRRCR	COMMONEDDISCOMPNET	LOG_STD_ACTION
COMMON_BUG_ADDRAF	3-Error	Invalid address family [dec][chars]	COMMON_BNERRRRCR	COMMONEDDISCOMPNET	LOG_STD_ACTION
COMMON_BUG_ADDRAF	3-Error	Invalid address family [dec][chars]	COMMON_BNERRRRCR	COMMONEDDISCOMPNET	LOG_STD_ACTION
COMMON_BUG_IPMGRSNT	3-Error	IPMFI Timing Tool present in image - performance will be degraded	COMMON_BNERRRRCR	COMMONEDDISCOMPNET	LOG_STD_ACTION
COMMON_BUG_IPMGRSNT	3-Error	IPMFI Timing Tool present in image - performance will be degraded	COMMON_BNERRRRCR	COMMONEDDISCOMPNET	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>COMMON_ISSU_ENUMERRC</del>	3-Error	Enum for [chars] is not ISSU-compliant: [chars]	The given enumeration is not ISSU-compliant for the reason given. Unpredictable behaviour will result when interoperating with different IOS versions.	<del>COMMON_BDS_COMPONENT</del>	"This requires a code fix before the image can be shipped or ISSU will be "broken."
<del>COMMON_ISSU_ENUMERRC</del>	3-Error	Enum for [chars] is not ISSU-compliant: [chars]	The given enumeration is not ISSU-compliant for the reason given. Unpredictable behaviour will result when interoperating with different IOS versions.	<del>COMMON_BDS_COMPONENT</del>	"This requires a code fix before the image can be shipped or ISSU will be "broken."
<del>COMMON_FB3ISSU_REG</del>	3-Error	ISSU client [chars] [dec] entity [dec] failed ISSU registration: [chars]	ISSU negotiation failed for this XDR client.	<del>COMMON_BDS_COMPONENT</del>	"This error indicates a coding problem. It is an error that will occur" "every time this image is run and requires a code change to fix it."
<del>COMMON_FB3ISSU_REG</del>	3-Error	ISSU client [chars] [dec] entity [dec] failed ISSU registration: [chars]	ISSU negotiation failed for this XDR client.	<del>COMMON_BDS_COMPONENT</del>	"This error indicates a coding problem. It is an error that will occur" "every time this image is run and requires a code change to fix it."
<del>COMMON_ECDBLANE_COP</del>	3-Error	Detected loop while installing OCE: [chars] [node]to loadinfo: [chars] %p	<del>COMMON_INTERNAL_ERROR</del>	<del>COMMON_BDS_COMPONENT</del>	LOG_STD_ACTION
<del>COMMON_ECDBLANE_COP</del>	3-Error	Detected loop while installing OCE: [chars] [node]to loadinfo: [chars] %p	<del>COMMON_INTERNAL_ERROR</del>	<del>COMMON_BDS_COMPONENT</del>	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>COMMONBACKSLASH</del>	3-Error	Message [chars] [dec] is ISSU aware so cannot use old FIB API.	ALL FIB subblocks must be ISSU aware. The subblock code must be rewritten for ISSU. Otherwise this may lead to unpredictable behaviour when running in SSO mode with two different versions of IOS.	<del>COMMONEDSCOMNET</del>	LOG_STD_ACTION
<del>COMMONBACKSLASH</del>	3-Error	Message [chars] [dec] is ISSU aware so cannot use old FIB API.	ALL FIB subblocks must be ISSU aware. The subblock code must be rewritten for ISSU. Otherwise this may lead to unpredictable behaviour when running in SSO mode with two different versions of IOS.	<del>COMMONEDSCOMNET</del>	LOG_STD_ACTION
<del>COMMONBACKSLASH</del>	3-Error	FIB[chars]IDB name [chars] error lengths [dec] [dec] short [dec] [dec]	-	-	-
<del>COMMONBACKSLASH</del>	3-Error	FIB[chars]IDB name [chars] error lengths [dec] [dec] short [dec] [dec]	-	-	-
<del>COMMONBACKSLASH</del>	3-Error	Attempt to clear the name of [chars] table with tableid [dec] previous name [chars]	<del>COMMONBACKSLASH</del>	<del>COMMONEDSCOMNET</del>	LOG_STD_ACTION
<del>COMMONBACKSLASH</del>	3-Error	Attempt to clear the name of [chars] table with tableid [dec] previous name [chars]	<del>COMMONBACKSLASH</del>	<del>COMMONEDSCOMNET</del>	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
COMMON_BNOVADPAHS	3-Error	No valid paths for prefix [chars] in vrf [chars].	COMMON_BNERRA_HRCR	COMMON_BDISCMONNT	LOG_STD_ACTION
COMMON_BNOVADPAHS	3-Error	No valid paths for prefix [chars] in vrf [chars].	COMMON_BNERRA_HRCR	COMMON_BDISCMONNT	LOG_STD_ACTION
COMMON_BBNCRCKER	3-Error	[chars] distribution broker not found - distributing [chars]	COMMON_BNERRA_HRCR	COMMON_BDISCMONNT	LOG_STD_ACTION
COMMON_BBNCRCKER	3-Error	[chars] distribution broker not found - distributing [chars]	COMMON_BNERRA_HRCR	COMMON_BDISCMONNT	LOG_STD_ACTION
COMMON_BNCHWSBKCE	3-Error	No [chars] subblock control decode function for [chars]	COMMON_BNERRA_HRCR	COMMON_BDISCMONNT	LOG_STD_ACTION
COMMON_BNCHWSBKCE	3-Error	No [chars] subblock control decode function for [chars]	COMMON_BNERRA_HRCR	COMMON_BDISCMONNT	LOG_STD_ACTION
COMMON_BNABINLAHL	3-Error	Unexpected disposition information for [chars]	COMMON_BNERRA_HRCR	COMMON_BDISCMONNT	LOG_STD_ACTION
COMMON_BNABINLAHL	3-Error	Unexpected disposition information for [chars]	COMMON_BNERRA_HRCR	COMMON_BDISCMONNT	LOG_STD_ACTION
COMMON_BBNOMEM	3-Error	Memory allocation failure for [chars] in [chars] CEF [0x[node]x] [chars][chars].	-	-	-
COMMON_BBNOMEM	3-Error	Memory allocation failure for [chars] in [chars] CEF [0x[node]x] [chars][chars].	-	-	-
COMMON_BBNPAHFEBB	3-Error	No fibidb for [chars] ignoring path during path no [dec] update for [chars]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
COMMONBNDPHEBDB	3-Error	No fibidb for [chars] ignoring path during path no [dec] update for [chars]	-	-	-
COMMONBNDPCAPUE	3-Error	Error finding capture point.	COMMONBNDPHEBDB	COMMONBNDPCAPUE	LOG_STD_ACTION
COMMONBNDPCAPUE	3-Error	Error finding capture point.	COMMONBNDPHEBDB	COMMONBNDPCAPUE	LOG_STD_ACTION
COMMONBNDPUBKDE	3-Error	No [chars] subblock control decode function for [chars]	COMMONBNDPHEBDB	COMMONBNDPUBKDE	LOG_STD_ACTION
COMMONBNDPUBKDE	3-Error	No [chars] subblock control decode function for [chars]	COMMONBNDPHEBDB	COMMONBNDPUBKDE	LOG_STD_ACTION
COMMONBNDPEXIDUAE	3-Error	Detected identical [chars] path extension [chars] ext [node]- replacing.	COMMONBNDPHEBDB	COMMONBNDPEXIDUAE	LOG_STD_ACTION
COMMONBNDPEXIDUAE	3-Error	Detected identical [chars] path extension [chars] ext [node]- replacing.	COMMONBNDPHEBDB	COMMONBNDPEXIDUAE	LOG_STD_ACTION
COMMONBNDPEXINDE	3-Error	Failed to encode [chars] path extension [chars]	One or more path extensions could not be encoded for distribution and will not be sent. This indicates an internal code error and may impact CEF operation for prefixes using the affected path extensions.	COMMONBNDPEXINDE	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>COMMON_PREFIX_ENCODE</del>	3-Error	Failed to encode [chars] path extension [chars]	One or more path extensions could not be encoded for distribution and will not be sent. This indicates an internal code error and may impact CEF operation for prefixes using the affected path extensions.	<del>COMMON_BDS_COMPONENT</del>	LOG_STD_ACTION
<del>COMMON_PREFIX_SRDP</del>	3-Error	Dowgrading to a version that doesn't support Segment Routing and LDP on the same path labels [[dec]][dec]].	This indicates there's an issue in ISSU transformation when downgrading to a lower version. Configuration changes might be required to avoid this issue. See recommended action.	<del>COMMON_BDS_COMPONENT</del>	"Find out the prefix which is using the two outgoing " "labels as shown in the message with 'show mpls forwarding-table'. Check " "IGP configuration and disable either LDP or SR on that prefix."
<del>COMMON_PREFIX_SRDP</del>	3-Error	Dowgrading to a version that doesn't support Segment Routing and LDP on the same path labels [[dec]][dec]].	This indicates there's an issue in ISSU transformation when downgrading to a lower version. Configuration changes might be required to avoid this issue. See recommended action.	<del>COMMON_BDS_COMPONENT</del>	"Find out the prefix which is using the two outgoing " "labels as shown in the message with 'show mpls forwarding-table'. Check " "IGP configuration and disable either LDP or SR on that prefix."
<del>COMMON_PREFIX_IDENT</del>	3-Error	Detected identical short path extension following path list change idx [dec] type [node][chars] --> [chars] conv [node] renum [node]total short [node]ext list [node]	<del>COMMON_PREFIX_IDENT</del>	<del>COMMON_BDS_COMPONENT</del>	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>COMMON_BUILTIN_DEF</del>	3-Error	Detected identical short path extension following path list change idx [dec] type [node][[chars] --> [chars]] conv [node] renum [node]total short [node]ext list [node]	<del>COMMON_BUILTIN_DEF</del>	<del>COMMON_BUILTIN_DEF</del>	LOG_STD_ACTION
<del>COMMON_BUILTIN_DEF</del>	3-Error	Primary or repair paths configured by RIB are of invalid type: primary: [chars] repair: [chars]	Either the primary path or the repair path is not of the correct type i.e. an attached nexthop that provides both interface and nexthop	<del>COMMON_BUILTIN_DEF</del>	LOG_STD_ACTION
<del>COMMON_BUILTIN_DEF</del>	3-Error	Primary or repair paths configured by RIB are of invalid type: primary: [chars] repair: [chars]	Either the primary path or the repair path is not of the correct type i.e. an attached nexthop that provides both interface and nexthop	<del>COMMON_BUILTIN_DEF</del>	LOG_STD_ACTION
<del>COMMON_BUILTIN_DEF</del>	3-Error	Subblock [chars] is not ISSU aware and should be!	ALL FIB subblocks must be ISSU aware. The subblock code must be rewritten for ISSU. Otherwise this may lead to unpredictable behaviour when running in SSO mode with two different versions of IOS.	<del>COMMON_BUILTIN_DEF</del>	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
COMMON_FIB_NOT_ISSU_AWE	3-Error	Subblock [chars] is not ISSU aware and should be!	ALL FIB subblocks must be ISSU aware. The subblock code must be rewritten for ISSU. Otherwise this may lead to unpredictable behaviour when running in SSO mode with two different versions of IOS.	COMMON_BDS_COMPONENT	LOG_STD_ACTION
COMMON_FIB_NOT_ISSU_SUP	3-Error	[chars] [chars] subblock doesn't support ISSU and can't be used.	The given SW subblock doesn't support ISSU so may not be processed correctly on the LC. It has not been registered by the CEF component.	COMMON_BDS_COMPONENT	LOG_STD_ACTION
COMMON_FIB_NOT_ISSU_SUP	3-Error	[chars] [chars] subblock doesn't support ISSU and can't be used.	The given SW subblock doesn't support ISSU so may not be processed correctly on the LC. It has not been registered by the CEF component.	COMMON_BDS_COMPONENT	LOG_STD_ACTION
COMMON_FIB3-TABLE	3-Error	[chars]: [chars]	COMMON_BNERR_GENERAL_ERR	COMMON_BDS_COMPONENT	LOG_STD_ACTION
COMMON_FIB3-TABLE	3-Error	[chars]: [chars]	COMMON_BNERR_GENERAL_ERR	COMMON_BDS_COMPONENT	LOG_STD_ACTION
COMMON_FIB3-CURRUPE	3-Error	[chars]: [chars]	COMMON_BNERR_GENERAL_ERR	COMMON_BDS_COMPONENT	LOG_STD_ACTION
COMMON_FIB3-CURRUPE	3-Error	[chars]: [chars]	COMMON_BNERR_GENERAL_ERR	COMMON_BDS_COMPONENT	LOG_STD_ACTION
COMMON_FIB3-UNHANDLED_UNITS	3-Error	No handler for units [chars] - from slot [chars]	-	-	-
COMMON_FIB3-UNHANDLED_UNITS	3-Error	No handler for units [chars] - from slot [chars]	-	-	-
COMMON_FIB3-INVALID_VRFID	3-Error	Error invalid vrfid [chars][chars]	COMMON_BNERR_GENERAL_ERR	COMMON_BDS_COMPONENT	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>COMMON_BMFDNAD</del>	3-Error	Error invalid vrfid [chars][chars]	<del>COMMON_BNFRALHRCR</del>	<del>COMMON_BDDSCMPDET</del>	LOG_STD_ACTION
<del>COMMON_BMFRNAD</del>	3-Error	Error invalid [chars] %u	<del>COMMON_BNFRALHRCR</del>	<del>COMMON_BDDSCMPDET</del>	LOG_STD_ACTION
<del>COMMON_BMFRNAD</del>	3-Error	Error invalid [chars] %u	<del>COMMON_BNFRALHRCR</del>	<del>COMMON_BDDSCMPDET</del>	LOG_STD_ACTION
<del>COMMON_BAUCRPAR</del>	4-Warning	CEF [chars] database auto-repair executed	The CEF consistency checkers have detected an inconsistent prefix in one of the CEF forwarding databases. The auto-repair function has been executed to repair the problem. Details of the prefix can be found using the 'show cef table consistency' command.	<del>COMMON_BDDSCMPDET</del>	"Copy the message exactly as it appears together with the output of " "the 'show cef table consistency' command and report it to your " "technical support representative"
<del>COMMON_BAUCRPAR</del>	4-Warning	CEF [chars] database auto-repair executed	The CEF consistency checkers have detected an inconsistent prefix in one of the CEF forwarding databases. The auto-repair function has been executed to repair the problem. Details of the prefix can be found using the 'show cef table consistency' command.	<del>COMMON_BDDSCMPDET</del>	"Copy the message exactly as it appears together with the output of " "the 'show cef table consistency' command and report it to your " "technical support representative"
<del>COMMON_BDDWSECODE</del>	4-Warning	HW subblock decode [chars] / [dec] - wrong length read expected [dec] decoded [dec]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>COMMON_BCD_HW_BLOCK</del>	4-Warning	HW subblock decode [chars] / [dec] - wrong length read expected [dec] decoded [dec]	-	-	-
<del>COMMON_BCD_SW_BLOCK</del>	4-Warning	SW subblock decode [chars] / [dec] - wrong length read expected [dec] decoded [dec]	-	-	-
<del>COMMON_BCD_SW_BLOCK</del>	4-Warning	SW subblock decode [chars] / [dec] - wrong length read expected [dec] decoded [dec]	-	-	-
<del>COMMON_BROKER_MSG</del>	4-Warning	Invalid message: [chars] type [chars] len [dec]	An invalid message has been received by this broker.	<del>COMMON_BDS_COMPONENT</del>	LOG_STD_ACTION
<del>COMMON_BROKER_MSG</del>	4-Warning	Invalid message: [chars] type [chars] len [dec]	An invalid message has been received by this broker.	<del>COMMON_BDS_COMPONENT</del>	LOG_STD_ACTION
<del>COMMON_INSERT_NODES</del>	4-Warning	Attempting to insert [node]after [node]but it is still pointed at by %p	<del>COMMON_INTERNAL_ERROR</del>	<del>COMMON_BDS_COMPONENT</del>	LOG_STD_ACTION
<del>COMMON_INSERT_NODES</del>	4-Warning	Attempting to insert [node]after [node]but it is still pointed at by %p	<del>COMMON_INTERNAL_ERROR</del>	<del>COMMON_BDS_COMPONENT</del>	LOG_STD_ACTION
<del>COMMON_INSERT_NODES</del>	4-Warning	Attempting to insert [node]after [node]but it has prev set to %p	<del>COMMON_INTERNAL_ERROR</del>	<del>COMMON_BDS_COMPONENT</del>	LOG_STD_ACTION
<del>COMMON_INSERT_NODES</del>	4-Warning	Attempting to insert [node]after [node]but it has prev set to %p	<del>COMMON_INTERNAL_ERROR</del>	<del>COMMON_BDS_COMPONENT</del>	LOG_STD_ACTION
<del>COMMON_REMOVE_NODES</del>	4-Warning	Attempting to remove [node]but prev [node]points at [node]instead	<del>COMMON_INTERNAL_ERROR</del>	<del>COMMON_BDS_COMPONENT</del>	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>COMMON_BERRMOKOS</del>	4-Warning	Attempting to remove [node]but prev [node]points at [node]instead	<del>COMMON_BERRMOKOS</del>	<del>COMMON_BERRMOKOS</del>	LOG_STD_ACTION
<del>COMMON_BERRMOKOS</del>	4-Warning	Attempting to remove [node]but it has no prev next is %p	-	-	-
<del>COMMON_BERRMOKOS</del>	4-Warning	Attempting to remove [node]but it has no prev next is %p	-	-	-
<del>COMMON_BERRMOKOS</del>	4-Warning	Attempting to remove [node]with next [node]thinks its prev is %p	<del>COMMON_BERRMOKOS</del>	<del>COMMON_BERRMOKOS</del>	LOG_STD_ACTION
<del>COMMON_BERRMOKOS</del>	4-Warning	Attempting to remove [node]with next [node]thinks its prev is %p	<del>COMMON_BERRMOKOS</del>	<del>COMMON_BERRMOKOS</del>	LOG_STD_ACTION
COMMON_B4DSABNG	4-Warning	[chars] CEF is being disabled due to a fatal error.	COMMON_B4DSABNG	COMMON_B4DSABNG	LOG_STD_ACTION
COMMON_B4DSABNG	4-Warning	[chars] CEF is being disabled due to a fatal error.	COMMON_B4DSABNG	COMMON_B4DSABNG	LOG_STD_ACTION
<del>COMMON_BCCSRMOKA</del>	4-Warning	Attempted to remove subblock of type '[chars]' [dec] for [chars] failed	-	-	-
<del>COMMON_BCCSRMOKA</del>	4-Warning	Attempted to remove subblock of type '[chars]' [dec] for [chars] failed	-	-	-
<del>COMMON_BBSBADIAL</del>	4-Warning	Attempted add of subblock of type '[chars]' [dec] for [chars] failed[chars]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
COMMON_FIBS_BADFAL	4-Warning	Attempted add of subblock of type '[chars]' [dec] for [chars] failed[chars]	-	-	-
COMMON_FIB4FHWDB	4-Warning	No fibhwidb for [chars] found during [chars]	COMMON_INTERNAL_ERROR	COMMON_DISK_COMPONENT	LOG_STD_ACTION
COMMON_FIB4FHWDB	4-Warning	No fibhwidb for [chars] found during [chars]	COMMON_INTERNAL_ERROR	COMMON_DISK_COMPONENT	LOG_STD_ACTION
COMMON_FHWDB_MACH	4-Warning	Mis-match between hwidb [chars] ifindex [dec] and fibhwidb [chars] ifindex [dec]	COMMON_INTERNAL_ERROR	COMMON_DISK_COMPONENT	LOG_STD_ACTION
COMMON_FHWDB_MACH	4-Warning	Mis-match between hwidb [chars] ifindex [dec] and fibhwidb [chars] ifindex [dec]	COMMON_INTERNAL_ERROR	COMMON_DISK_COMPONENT	LOG_STD_ACTION
COMMON_FIB4FIBIDB	4-Warning	No fibidb found for [chars] during [chars]	COMMON_INTERNAL_ERROR	COMMON_DISK_COMPONENT	LOG_STD_ACTION
COMMON_FIB4FIBIDB	4-Warning	No fibidb found for [chars] during [chars]	COMMON_INTERNAL_ERROR	COMMON_DISK_COMPONENT	LOG_STD_ACTION
COMMON_FIBIDB_MACH	4-Warning	Mis-match between idb [chars] if_number [dec] and fibidb [chars] if_number [dec]	COMMON_INTERNAL_ERROR	COMMON_DISK_COMPONENT	LOG_STD_ACTION
COMMON_FIBIDB_MACH	4-Warning	Mis-match between idb [chars] if_number [dec] and fibidb [chars] if_number [dec]	COMMON_INTERNAL_ERROR	COMMON_DISK_COMPONENT	LOG_STD_ACTION
COMMON_FIBMSCHWB	4-Warning	No fibhwidb while initializing fibidb for [chars] if_number [dec]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>COMMON_FIB4FIBMSG</del>	4-Warning	No fibhwidb while initializing fibidb for [chars] if_number [dec]	-	-	-
COMMON_FIB4FIBMSG	4-Warning	Invalid message received. Type [chars] event/sub-type [dec] length [dec]	<del>COMMON_FIB4FIBMSG</del>	<del>COMMON_FIB4FIBMSG</del>	LOG_STD_ACTION
COMMON_FIB4FIBMSG	4-Warning	Invalid message received. Type [chars] event/sub-type [dec] length [dec]	<del>COMMON_FIB4FIBMSG</del>	<del>COMMON_FIB4FIBMSG</del>	LOG_STD_ACTION
<del>COMMON_FIB4FIBMSG</del>	4-Warning	Missing hwidb for fibhwidb [chars] ifindex [dec]	-	-	-
<del>COMMON_FIB4FIBMSG</del>	4-Warning	Missing hwidb for fibhwidb [chars] ifindex [dec]	-	-	-
<del>COMMON_FIB4FIBMSG</del>	4-Warning	Missing idb for fibidb [chars] if_number [dec].	-	-	-
<del>COMMON_FIB4FIBMSG</del>	4-Warning	Missing idb for fibidb [chars] if_number [dec].	-	-	-
<del>COMMON_FIB4FIBMSG</del>	4-Warning	Unable to register XDR client [chars].	-	-	-
<del>COMMON_FIB4FIBMSG</del>	4-Warning	Unable to register XDR client [chars].	-	-	-
<del>COMMON_FIB4FIBMSG</del>	4-Warning	Hardware on RP missing prefix for [chars]/[dec] in FIB table [chars] present in RP FIB [[chars]]	A passive consistency checker discovered a prefix in the RP FIB table which is not present in the hardware forwarding table on the RP. This may be a transient condition.	<del>COMMON_FIB4FIBMSG</del>	"If the same prefix gives repeated errors check the prefix in CEF and " "routing table. Try disable/enable CEF if the prefix is " "missing."

Family-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>COMMON</del> <del>FWRN</del> <del>NOSE</del>	4-Warning	Hardware on RP missing prefix for [chars]/[dec] in FIB table [chars] present in RP FIB [[chars]]	A passive consistency checker discovered a prefix in the RP FIB table which is not present in the hardware forwarding table on the RP. This may be a transient condition.	<del>COMMON</del> <del>BD</del> <del>SC</del> <del>MON</del> <del>ENT</del>	"If the same prefix gives repeated errors check the prefix in CEF and " "routing table. Try disable/enable CEF if the prefix is " "missing."
<del>COMMON</del> <del>FWRN</del> <del>NOSE</del>	4-Warning	Hardware in slot [chars] missing prefix for [chars]/[dec] in FIB table [chars] present in LC FIB [[chars]]	A passive consistency checker discovered a prefix in the LC FIB table which is not present in the hardware forwarding table on this linecard. This may be a transient condition.	<del>COMMON</del> <del>BD</del> <del>SC</del> <del>MON</del> <del>ENT</del>	"If the same prefix gives repeated errors check the prefix in CEF and " "routing table. Try disable/enable CEF if the prefix is " "missing."
<del>COMMON</del> <del>FWRN</del> <del>NOSE</del>	4-Warning	Hardware in slot [chars] missing prefix for [chars]/[dec] in FIB table [chars] present in LC FIB [[chars]]	A passive consistency checker discovered a prefix in the LC FIB table which is not present in the hardware forwarding table on this linecard. This may be a transient condition.	<del>COMMON</del> <del>BD</del> <del>SC</del> <del>MON</del> <del>ENT</del>	"If the same prefix gives repeated errors check the prefix in CEF and " "routing table. Try disable/enable CEF if the prefix is " "missing."
<del>COMMON</del> <del>FWRN</del> <del>NOSE</del>	4-Warning	RP missing prefix for [chars]/[dec] in FIB table [chars] present in RP hardware [[chars]]	A passive consistency checker discovered a prefix in the hardware table which is not present in the FIB forwarding table on the RP. This may be a transient condition.	<del>COMMON</del> <del>BD</del> <del>SC</del> <del>MON</del> <del>ENT</del>	"If the same prefix gives repeated errors check the prefix in CEF and " "routing table. Try disable/enable CEF if the prefix is " "missing."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>COMMON_B4WRINCSB</del>	4-Warning	RP missing prefix for [chars]/[dec] in FIB table [chars] present in RP hardware [[chars]]	A passive consistency checker discovered a prefix in the hardware table which is not present in the FIB forwarding table on the RP. This may be a transient condition.	<del>COMMON_BDISCOMPNET</del>	"If the same prefix gives repeated errors check the prefix in CEF and " "routing table. Try disable/enable CEF if the prefix is " "missing."
<del>COMMON_B4WRINCSA</del>	4-Warning	Slot [chars] missing prefix for [chars]/[dec] in FIB table [chars] present in LC hardware [[chars]]	A passive consistency checker discovered a prefix in the LC hardware table which is not present in the FIB forwarding table on this linecard. This may be a transient condition.	<del>COMMON_BDISCOMPNET</del>	"If the same prefix gives repeated errors check the prefix in CEF and " "routing table. Try disable/enable CEF if the prefix is " "missing."
<del>COMMON_B4WRINCSA</del>	4-Warning	Slot [chars] missing prefix for [chars]/[dec] in FIB table [chars] present in LC hardware [[chars]]	A passive consistency checker discovered a prefix in the LC hardware table which is not present in the FIB forwarding table on this linecard. This may be a transient condition.	<del>COMMON_BDISCOMPNET</del>	"If the same prefix gives repeated errors check the prefix in CEF and " "routing table. Try disable/enable CEF if the prefix is " "missing."
<del>COMMON_B4WRINCSMG</del>	4-Warning	Message [chars] for slots [chars] is too large [dec] bytes max [dec]	-	-	-
<del>COMMON_B4WRINCSMG</del>	4-Warning	Message [chars] for slots [chars] is too large [dec] bytes max [dec]	-	-	-
<del>COMMON_B4WRINCSMG</del>	4-Warning	Message [chars] for slots [chars] is wrong length [dec] should be [dec]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>COMMON_BCDWFOGEN</del>	4-Warning	Message [chars] for slots [chars] is wrong length [dec] should be [dec]	-	-	-
<del>COMMON_BCDWFOGEN</del>	4-Warning	Slot [chars] missing prefix entry for [chars] in FIB table [chars] when looking up [chars] [[chars]]	A packet arrived on the linecard but the lookup of the destination IP address failed to find this prefix in the forwarding table. However the prefix is present on the RP. This may be a transient condition.	<del>COMMON_BCDWFOGEN</del>	"If the same prefix gives repeated errors check the CEF prefix on the " "RP and linecard. If necessary a clear cef linecard <slot> " "will download a new CEF table to the linecard. You can also " "try a clear adjacency command to reload host prefixes."
<del>COMMON_BCDWFOGEN</del>	4-Warning	Slot [chars] missing prefix entry for [chars] in FIB table [chars] when looking up [chars] [[chars]]	A packet arrived on the linecard but the lookup of the destination IP address failed to find this prefix in the forwarding table. However the prefix is present on the RP. This may be a transient condition.	<del>COMMON_BCDWFOGEN</del>	"If the same prefix gives repeated errors check the CEF prefix on the " "RP and linecard. If necessary a clear cef linecard <slot> " "will download a new CEF table to the linecard. You can also " "try a clear adjacency command to reload host prefixes."
<del>COMMON_BCDWFOGEN</del>	4-Warning	Slot [chars] prefix entry for [chars]/[dec] in FIB table [chars] [[chars]] reason: [chars]	A passive consistency checker discovered a prefix that is present on the RP but is inconsistent in the forwarding table of the linecard. This may be a transient condition.	<del>COMMON_BCDWFOGEN</del>	"If the same prefix gives repeated errors check the CEF prefix on the " "RP and linecard. If necessary a clear cef linecard <slot> " "will download a new CEF table to the linecard. You can also " "try a clear adjacency command to reload host prefixes."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>COMMON_BCPMCONS2</del>	4-Warning	Slot [chars] prefix entry for [chars]/[dec] in FIB table [chars] [[chars]] reason: [chars]	A passive consistency checker discovered a prefix that is present on the RP but is inconsistent in the forwarding table of the linecard. This may be a transient condition.	<del>COMMON_BDCMPNET</del>	"If the same prefix gives repeated errors check the CEF prefix on the "RP and linecard. If necessary a clear cef linecard <slot> "will download a new CEF table to the linecard. You can also "try a clear adjacency command to reload host prefixes."
<del>COMMON_VAPEXLED</del>	4-Warning	Prefix [chars] in vrf [chars] has paths in excess of the maximum. Some may be dropped.	<del>COMMON_BNRYLRCR</del>	<del>COMMON_BDCMPNET</del>	LOG_STD_ACTION
<del>COMMON_VAPEXLED</del>	4-Warning	Prefix [chars] in vrf [chars] has paths in excess of the maximum. Some may be dropped.	<del>COMMON_BNRYLRCR</del>	<del>COMMON_BDCMPNET</del>	LOG_STD_ACTION
<del>COMMON_BRRMCONS1</del>	4-Warning	RP prefix for [chars]/[dec] in FIB table [chars] inconsistent on slot [chars] - [chars] [[chars]]	-	-	-
<del>COMMON_BRRMCONS1</del>	4-Warning	RP prefix for [chars]/[dec] in FIB table [chars] inconsistent on slot [chars] - [chars] [[chars]]	-	-	-
<del>COMMON_BRRMCONS2</del>	4-Warning	RP missing prefix for [node]m in FIB table [chars] present in routing table [[chars]]	A passive consistency checker discovered a prefix in the routing table which is not present in the CEF forwarding table on the RP. This may be a transient condition.	<del>COMMON_BDCMPNET</del>	"If the same prefix gives repeated errors check the prefix in CEF and "routing table. Try disable/enable CEF if the prefix is "missing."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
COMMON_BRIEFLY_WARNING	4-Warning	RP missing prefix for [node]m in FIB table [chars] present in routing table [[chars]]	A passive consistency checker discovered a prefix in the routing table which is not present in the CEF forwarding table on the RP. This may be a transient condition.	COMMON_BRIEFLY_WARNING	"If the same prefix gives repeated errors check the prefix in CEF and " "routing table. Try disable/enable CEF if the prefix is " "missing."
COMMON_BRIEFLY_WARNING	4-Warning	RP has prefix [chars]/[dec] in FIB table [chars] missing in routing table	A passive consistency checker discovered a prefix in the CEF forwarding table which is not present in the routing table. This may be a transient condition.	COMMON_BRIEFLY_WARNING	"If the same prefix gives repeated errors check the prefix in CEF and " "routing table. Try disable/enable CEF if the prefix is " "missing."
COMMON_BRIEFLY_WARNING	4-Warning	RP has prefix [chars]/[dec] in FIB table [chars] missing in routing table	A passive consistency checker discovered a prefix in the CEF forwarding table which is not present in the routing table. This may be a transient condition.	COMMON_BRIEFLY_WARNING	"If the same prefix gives repeated errors check the prefix in CEF and " "routing table. Try disable/enable CEF if the prefix is " "missing."
COMMON_BRIEFLY_WARNING	4-Warning	Encoding of [chars] [chars] stats XDR too big	COMMON_BRIEFLY_WARNING	COMMON_BRIEFLY_WARNING	LOG_STD_ACTION
COMMON_BRIEFLY_WARNING	4-Warning	Encoding of [chars] [chars] stats XDR too big	COMMON_BRIEFLY_WARNING	COMMON_BRIEFLY_WARNING	LOG_STD_ACTION
COMMON_BRIEFLY_WARNING	4-Warning	Id manager error [chars]. Topology statistics accounting may not show the correct result	COMMON_BRIEFLY_WARNING	COMMON_BRIEFLY_WARNING	LOG_STD_ACTION
COMMON_BRIEFLY_WARNING	4-Warning	Id manager error [chars]. Topology statistics accounting may not show the correct result	COMMON_BRIEFLY_WARNING	COMMON_BRIEFLY_WARNING	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>COMMON</del> FB4UNEQUAL	4-Warning	Ratio of unequal path weightings [chars] prevents ooc [chars] from being used.	-	-	-
<del>COMMON</del> FB4UNEQUAL	4-Warning	Ratio of unequal path weightings [chars] prevents ooc [chars] from being used.	-	-	-
<del>COMMON</del> ERRHEADSMD	5-Notice	[chars]	The RRP lost communication with the RP but the platform still wants CEF\n\ to continue operating in headless mode.	-	LOG_STD_ACTION
<del>COMMON</del> ERRHEADSMD	5-Notice	[chars]	The RRP lost communication with the RP but the platform still wants CEF\n\ to continue operating in headless mode.	-	LOG_STD_ACTION
<del>COMMON</del> ERRCBISMG	6-Information	Test subblock error: [chars]	The subblock test command could not be completed successfully	<del>COMMON</del> EDDISCOMPNET	LOG_SID_NO_ACTION
<del>COMMON</del> ERRCBISMG	6-Information	Test subblock error: [chars]	The subblock test command could not be completed successfully	<del>COMMON</del> EDDISCOMPNET	LOG_SID_NO_ACTION
<del>COMMON</del> ERRBRURSON	6-Information	[chars] has too many [node]levels of recursion during [chars]	-	-	-
<del>COMMON</del> ERRBRURSON	6-Information	[chars] has too many [node]levels of recursion during [chars]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
COMMON_MFB3ASSERT	3-Error	Assertion '[chars]' failed in [chars] MFIB [0x[node]x]: [chars] [chars][chars].	COMMON_MFB3ASSERT	COMMON_MFB3ASSERT	LOG_STD_ACTION
COMMON_MFB3ASSERT	3-Error	Assertion '[chars]' failed in [chars] MFIB [0x[node]x]: [chars] [chars][chars].	COMMON_MFB3ASSERT	COMMON_MFB3ASSERT	LOG_STD_ACTION
COMMON_MFB3ERR	3-Error	MFIB master background process failed to populate tables for [chars]	COMMON_MFB3ERR	COMMON_MFB3ERR	LOG_STD_ACTION
COMMON_MFB3ERR	3-Error	MFIB master background process failed to populate tables for [chars]	COMMON_MFB3ERR	COMMON_MFB3ERR	LOG_STD_ACTION
COMMON_MFB3ERR	3-Error	[chars] broker failed to encode msg type [dec] for slots [chars]	-	-	-
COMMON_MFB3ERR	3-Error	[chars] broker failed to encode msg type [dec] for slots [chars]	-	-	-
COMMON_MFB3ERR	3-Error	Failed to initialise [chars] RP broker facility	COMMON_MFB3ERR	COMMON_MFB3ERR	LOG_STD_ACTION
COMMON_MFB3ERR	3-Error	Failed to initialise [chars] RP broker facility	COMMON_MFB3ERR	COMMON_MFB3ERR	LOG_STD_ACTION
COMMON_MFB3ERR	3-Error	Failed to [chars] table [chars][chars]	COMMON_MFB3ERR	COMMON_MFB3ERR	LOG_STD_ACTION
COMMON_MFB3ERR	3-Error	Failed to [chars] table [chars][chars]	COMMON_MFB3ERR	COMMON_MFB3ERR	LOG_STD_ACTION
COMMON_MFB3ERR	3-Error	Attempt to create [chars] table with illegal tableid [dec] [chars]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
COMMONMIBLICALBID	3-Error	Attempt to create [chars] table with illegal tableid [dec] [chars]	-	-	-
COMMONMIBLICALRCS	3-Error	Illegal arguments - [chars]	COMMONMENERALRRCR	COMMONMEDSCOMPNET	LOG_STD_ACTION
COMMONMIBLICALRCS	3-Error	Illegal arguments - [chars]	COMMONMENERALRRCR	COMMONMEDSCOMPNET	LOG_STD_ACTION
COMMONMIBINVALIDAF	3-Error	Invalid address family [dec][chars]	COMMONMENERALRRCR	COMMONMEDSCOMPNET	LOG_STD_ACTION
COMMONMIBINVALIDAF	3-Error	Invalid address family [dec][chars]	COMMONMENERALRRCR	COMMONMEDSCOMPNET	LOG_STD_ACTION
COMMONMIBMIBCSB	3-Error	Generic subblock error: [chars]	COMMONMENERALRRCR	COMMONMEDSCOMPNET	LOG_STD_ACTION
COMMONMIBMIBCSB	3-Error	Generic subblock error: [chars]	COMMONMENERALRRCR	COMMONMEDSCOMPNET	LOG_STD_ACTION
COMMONMIBMIBCRDN	3-Error	Unable to register [chars] ISSU client[node]	-	-	-
COMMONMIBMIBCRDN	3-Error	Unable to register [chars] ISSU client[node]	-	-	-
COMMONMIBMIBCRRCR	3-Error	ISSU client [chars] [dec] entity [dec] failed ISSU registration: [chars]	COMMONMENERALRRCR	COMMONMEDSCOMPNET	LOG_STD_ACTION
COMMONMIBMIBCRRCR	3-Error	ISSU client [chars] [dec] entity [dec] failed ISSU registration: [chars]	COMMONMENERALRRCR	COMMONMEDSCOMPNET	LOG_STD_ACTION
COMMONMIBMIBCRWN	3-Error	Invalid XDR format. [chars]	COMMONMENERALRRCR	COMMONMEDSCOMPNET	LOG_STD_ACTION
COMMONMIBMIBCRWN	3-Error	Invalid XDR format. [chars]	COMMONMENERALRRCR	COMMONMEDSCOMPNET	LOG_STD_ACTION
COMMONMIBMIBCRWN	3-Error	Invalid XDR length. Type [dec] [chars]. XDR/buffer len [dec]/[dec]	COMMONMENERALRRCR	COMMONMEDSCOMPNET	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
COMMON_MFB3XDRLEN	3-Error	Invalid XDR length. Type [dec] [chars]. XDR/buffer len [dec]/[dec]	COMMON_MFB3XDRLEN	COMMON_MFB3XDRLEN	LOG_STD_ACTION
COMMON_MFB3TABLE	3-Error	Attempt to clear the name of [chars] table with tableid [node]previous name [chars]	COMMON_MFB3TABLE	COMMON_MFB3TABLE	LOG_STD_ACTION
COMMON_MFB3TABLE	3-Error	Attempt to clear the name of [chars] table with tableid [node]previous name [chars]	COMMON_MFB3TABLE	COMMON_MFB3TABLE	LOG_STD_ACTION
COMMON_MFB3BROKER	3-Error	[chars] distribution broker not found - distributing [chars]	COMMON_MFB3BROKER	COMMON_MFB3BROKER	LOG_STD_ACTION
COMMON_MFB3BROKER	3-Error	[chars] distribution broker not found - distributing [chars]	COMMON_MFB3BROKER	COMMON_MFB3BROKER	LOG_STD_ACTION
COMMON_MFB3CMEM	3-Error	Memory allocation failure for [chars] in [chars] MFIB [0x[node]x].	An attempt to allocate memory has failed. Depending on the criticality of the data to be stored MFIB operation may be impacted.	COMMON_MFB3CMEM	"Verify that the configuration is supported by the memory present in "the system. Copy the message exactly as it appears and report it " "to your technical support representative."
COMMON_MFB3CMEM	3-Error	Memory allocation failure for [chars] in [chars] MFIB [0x[node]x].	An attempt to allocate memory has failed. Depending on the criticality of the data to be stored MFIB operation may be impacted.	COMMON_MFB3CMEM	"Verify that the configuration is supported by the memory present in "the system. Copy the message exactly as it appears and report it " "to your technical support representative."
COMMON_MFB3TABLE	3-Error	[chars]: [chars]	COMMON_MFB3TABLE	COMMON_MFB3TABLE	LOG_STD_ACTION
COMMON_MFB3TABLE	3-Error	[chars]: [chars]	COMMON_MFB3TABLE	COMMON_MFB3TABLE	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>COMMON_MFIBKRNMG</del>	4-Warning	Invalid message: [chars] type [chars] len [dec]	An invalid message has been received by this broker.	mfib	LOG_STD_ACTION
<del>COMMON_MFIBKRNMG</del>	4-Warning	Invalid message: [chars] type [chars] len [dec]	An invalid message has been received by this broker.	mfib	LOG_STD_ACTION
<del>COMMON_MFIBDSABNG</del>	4-Warning	[chars] MFIB is being disabled due to a fatal error.	<del>COMMON_MFIBERRAURCR</del>	<del>COMMON_MFIBDSCOMPDET</del>	LOG_STD_ACTION
<del>COMMON_MFIBDSABNG</del>	4-Warning	[chars] MFIB is being disabled due to a fatal error.	<del>COMMON_MFIBERRAURCR</del>	<del>COMMON_MFIBDSCOMPDET</del>	LOG_STD_ACTION
<del>COMMON_MFIBMBMSG</del>	4-Warning	Invalid message received. Type [chars] event/sub-type [dec] length [dec]	<del>COMMON_MFIBERRAURCR</del>	<del>COMMON_MFIBDSCOMPDET</del>	LOG_STD_ACTION
<del>COMMON_MFIBMBMSG</del>	4-Warning	Invalid message received. Type [chars] event/sub-type [dec] length [dec]	<del>COMMON_MFIBERRAURCR</del>	<del>COMMON_MFIBDSCOMPDET</del>	LOG_STD_ACTION
<del>COMMON_MFIBMBABAE</del>	4-Warning	Failed to [chars] table [chars] [chars]	An MFIB table was found to be missing when attempting to perform a change to it. This may be a transient condition	<del>COMMON_MFIBDSCOMPDET</del>	"If the same table gives repeated warnings or generates more serious" "errors copy the message exactly as it appears and report it to " "your technical support representative"
<del>COMMON_MFIBMBABAE</del>	4-Warning	Failed to [chars] table [chars] [chars]	An MFIB table was found to be missing when attempting to perform a change to it. This may be a transient condition	<del>COMMON_MFIBDSCOMPDET</del>	"If the same table gives repeated warnings or generates more serious" "errors copy the message exactly as it appears and report it to " "your technical support representative"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
COMMONUCUENENT	3-Error	Event [chars] for [chars] [node]UID:[chars] - [chars]	-	-	-
COMMONUBRYENKON	3-Error	Unexpected key type <[chars]> for [chars] [chars]	COMMONBNERA_HRCR	COMMONEDSCMPNET	LOG_STD_ACTION
COMMONUBRYENKON	3-Error	Unexpected key type <[chars]> for [chars] [chars]	COMMONBNERA_HRCR	COMMONEDSCMPNET	LOG_STD_ACTION
COMMONUCUENMASHA	3-Error	<[chars]> already mapped to [chars] [chars]	COMMONBNERA_HRCR	COMMONEDSCMPNET	LOG_STD_ACTION
COMMONUCUENMASHA	3-Error	<[chars]> already mapped to [chars] [chars]	COMMONBNERA_HRCR	COMMONEDSCMPNET	LOG_STD_ACTION
COMMONUCUENKEY	3-Error	Client key error [chars]: [chars]	COMMONUNNERA_HRCR	COMMONEDSCMPNET	LOG_STD_ACTION
COMMONUCUENKEY	3-Error	Client key error [chars]: [chars]	COMMONUNNERA_HRCR	COMMONEDSCMPNET	LOG_STD_ACTION
COMMONUBDKBREQAL	3-Error	AVL tree [chars] failed for UID [dec] Client Key [chars]	COMMONUNNERA_HRCR	COMMONEDSCMPNET	LOG_STD_ACTION
COMMONUBDKBREQAL	3-Error	AVL tree [chars] failed for UID [dec] Client Key [chars]	COMMONUNNERA_HRCR	COMMONEDSCMPNET	LOG_STD_ACTION
COMMONUBUCUENKEYTB	3-Error	UID [dec] Client key [chars] - [chars]	COMMONBNERA_HRCR	COMMONEDSCMPNET	LOG_STD_ACTION
COMMONUBUCUENKEYTB	3-Error	UID [dec] Client key [chars] - [chars]	COMMONBNERA_HRCR	COMMONEDSCMPNET	LOG_STD_ACTION
COMMONUBDEFAICRAL	3-Error	Failed to delete all client keys for UID [dec] - [chars]	COMMONUNNERA_HRCR	COMMONEDSCMPNET	LOG_STD_ACTION
COMMONUBDEFAICRAL	3-Error	Failed to delete all client keys for UID [dec] - [chars]	COMMONUNNERA_HRCR	COMMONEDSCMPNET	LOG_STD_ACTION
COMMONUBDHSIBOAL	3-Error	Hash table [chars] failed for UID [dec] Hash Tbl 0x[hec]	COMMONUNNERA_HRCR	COMMONEDSCMPNET	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>COMMUNDISHBOA</del>	3-Error	Hash table [chars] failed for UID [dec] Hash Tbl 0x[hec]	<del>COMMUNDISHBOA</del>	<del>COMMUNDISHBOA</del>	LOG_STD_ACTION
<del>COMPALDWRNG</del>	4-Warning	Incorrect External interface field access API invocation	A routine external to the IP Multicast Component accesses an\n\ interface field with invalid interface argument	-	"An inconsistency calling an IP Multicast interface access API occurred." LOG_STD_ACTION
<del>COMPALDWRNG</del>	4-Warning	Incorrect External interface field access API invocation	A routine external to the IP Multicast Component accesses an\n\ interface field with invalid interface argument	-	"An inconsistency calling an IP Multicast interface access API occurred." LOG_STD_ACTION
<del>COMPINRSVLDIEE</del>	3-Error	ISSU Compatibility Matrix was unable to delete a persistent variable from the [chars] system rc = [dec].	The ISSU compatibility matrix was unable to access a persistent variable. There is no way to determine if issu image-version compatibility checking should be enabled or disabled.	ha-issu-infra	"show persistent variable"
<del>COMPINRSVLDIEE</del>	3-Error	ISSU Compatibility Matrix was unable to delete a persistent variable from the [chars] system rc = [dec].	The ISSU compatibility matrix was unable to access a persistent variable. There is no way to determine if issu image-version compatibility checking should be enabled or disabled.	ha-issu-infra	"show persistent variable"
<del>COMPINRSVLDIEE</del>	3-Error	ISSU Compatibility Matrix was unable to delete a persistent variable from the [chars] system rc = [dec].	The ISSU compatibility matrix was unable to access a persistent variable. There is no way to determine if issu image-version compatibility checking should be enabled or disabled.	ha-issu-infra	"show persistent variable"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>COMP</del> COMPATRSI_VL_CET	3-Error	ISSU Compatibility Matrix was unable to read a persistent variable from the local system rc = [dec].	The ISSU compatibility matrix was unable to access a persistent variable. There is no way to determine if issu image-version compatibility checking should be enabled or disabled.	ha-issu-infra	"show persistent variable"
<del>COMP</del> COMPATRSI_VL_CET	3-Error	ISSU Compatibility Matrix was unable to read a persistent variable from the local system rc = [dec].	The ISSU compatibility matrix was unable to access a persistent variable. There is no way to determine if issu image-version compatibility checking should be enabled or disabled.	ha-issu-infra	"show persistent variable"
<del>COMP</del> COMPATRSI_VL_CET	3-Error	ISSU Compatibility Matrix was unable to read a persistent variable from the local system rc = [dec].	The ISSU compatibility matrix was unable to access a persistent variable. There is no way to determine if issu image-version compatibility checking should be enabled or disabled.	ha-issu-infra	"show persistent variable"
<del>COMP</del> COMPATRSI_VL_WRIE	3-Error	ISSU Compatibility Matrix was unable to write to persistent variables on the [chars] system rc = [dec].	The ISSU compatibility matrix was unable to access a persistent variable. There is no way to determine if issu image-version compatibility checking should be enabled or disabled.	ha-issu-infra	"show persistent variable"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
COMP_MATRIX_WRITE	3-Error	ISSU Compatibility Matrix was unable to write to persistent variables on the [chars] system rc = [dec].	The ISSU compatibility matrix was unable to access a persistent variable. There is no way to determine if issu image-version compatibility checking should be enabled or disabled.	ha-issu-infra	"show persistent variable"
COMP_MATRIX_WRITE	3-Error	ISSU Compatibility Matrix was unable to write to persistent variables on the [chars] system rc = [dec].	The ISSU compatibility matrix was unable to access a persistent variable. There is no way to determine if issu image-version compatibility checking should be enabled or disabled.	ha-issu-infra	"show persistent variable"
COMP_MATRIX_DISABLED	4-Warning	Compatibility Matrix has been disabled. No image compatibility checking will be done.	The ISSU compatibility matrix check has been disabled via configuration command <code>&lt;cmdBold&gt;no service image-version compatibility&lt;/noCmdBold&gt;</code> . When the standby comes up no image compatibility checking will be done which results in SSO redundancy mode even if the active and standby are running different images.	ha-issu-infra	"The ISSU compatibility matrix check has been disabled " "using the global configuration command " " <code>&lt;cmdBold&gt;no service image-version compatibility&lt;/noCmdBold&gt;</code> " "Redundancy mode would be SSO. " "Please be sure this is your intention or change configuration " "using <code>&lt;cmdBold&gt;service image-version compatibility&lt;/noCmdBold&gt;</code> "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
COMP_MATRIX4DISABLED	4-Warning	Compatibility Matrix has been disabled. No image compatibility checking will be done.	The ISSU compatibility matrix check has been disabled via configuration command <code>&lt;cmdBold&gt;no service image-version compatibility&lt;/cmdBold&gt;</code> . When the standby comes up no image compatibility checking will be done which results in SSO redundancy mode even if the active and standby are running different images.	ha-issu-infra	"The ISSU compatibility matrix check has been disabled " "using the global configuration command " " <code>&lt;cmdBold&gt;no service image-version compatibility&lt;/cmdBold&gt;</code> " "Redundancy mode would be SSO. " "Please be sure this is your intention or change configuration " "using <code>&lt;cmdBold&gt;service image-version compatibility&lt;/cmdBold&gt;</code> "
COMP_MATRIX4DISABLED	4-Warning	Compatibility Matrix has been disabled. No image compatibility checking will be done.	The ISSU compatibility matrix check has been disabled via configuration command <code>&lt;cmdBold&gt;no service image-version compatibility&lt;/cmdBold&gt;</code> . When the standby comes up no image compatibility checking will be done which results in SSO redundancy mode even if the active and standby are running different images.	ha-issu-infra	"The ISSU compatibility matrix check has been disabled " "using the global configuration command " " <code>&lt;cmdBold&gt;no service image-version compatibility&lt;/cmdBold&gt;</code> " "Redundancy mode would be SSO. " "Please be sure this is your intention or change configuration " "using <code>&lt;cmdBold&gt;service image-version compatibility&lt;/cmdBold&gt;</code> "
COMP-3-BADCOMP	3-Error	Interface [chars] Bad status returned from packet compression operation	An internal software error occurred.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
COMP-3-COMPERR	3-Error	[chars]: COMPRESS: stac error! status: [dec] size in: [dec] size out: [dec]	An internal software error occurred.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
COMP-3-CONFIGBAD	3-Error	Interface [chars] Compression internal configuration error	An internal software error occurred.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
COMP-3-SIZEBAD	3-Error	Interface [chars] Decompression size error	One interface is configured for predictor compression the other is\n\ not.	-	"Configure both interfaces for predictor compression."
COMP3SUBBLOCKERR	3-Error	Interface [chars] compression subblock creation failed.	An internal software error occurred.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
COMP-3-SYNCBAD	3-Error	Interface [chars] Decompression sync error	One interface is configured for predictor compression the other is\n\ not.	-	"Configure both interfaces for predictor compression."
COMP-3-VERSIONBAD	3-Error	Interface [chars] Compression Version mismatch expected [hec] received [hec]	One interface is configured for predictor compression the other is\n\ not.	-	"Configure both interfaces for predictor compression."
COMP-5-NOBUF	5-Notice	Interface [chars] [chars]	Interface serial0 compression getbuffer failed causing Link Access\n\ Procedure Balanced LAPB retransmissions.	-	"Configure additional large and big buffers."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
COMEDACL1STCREATE	2-Critical	[chars]: failed to create row queue for node [node]Turbo ACL has been disabled temporarily	The system encountered an error while initializing a data structure required for the correct operation of Turbo ACL processing. Turbo ACL will be disabled until another recompilation has completed successfully.	c7300-pxf	RECOMMENDED_ACTION
COMEDACL2QUBENT	2-Critical	[chars]: failed to initialize back-pointer list for row [node]in node [node] Turbo ACL has been disabled temporarily	The system encountered an error while initializing a data structure required for the correct operation of Turbo ACL processing. Turbo ACL will be disabled until another recompilation has completed successfully.	c7300-pxf	RECOMMENDED_ACTION
COMEDAC1ERRA1RROR	3-Error	an unexpected internal error occurred: [chars]	An unexpected internal error occurred. This error may result in one or more flows being punted to the RP or in Turbo ACL not functioning.	c7300-pxf	RECOMMENDED_ACTION
COMEDAC1ERRA1RROR	4-Warning	[chars]: the back-pointer list for row [node]in node [node]is marked as overflowed but is not empty	<del>EXPAND_NORMOSIERR</del> <del>EXPLANATION_WARNING</del>	c7300-pxf	RECOMMENDED_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>COMEDACBROWENHRS</del>	4-Warning	[chars]: the back-pointer list for row [node]in node [node]is marked as overflowed but is not empty	<del>EXPLANATION:SECURITY EXPLANATION:ACTUNING</del>	c7300-pxf	RECOMMENDED_ACTION
<del>COMEDACBROWENHWD</del>	4-Warning	[chars]: processing back-pointers in row [node]in node [node]but the list is marked as overflowed	<del>EXPLANATION:SECURITY EXPLANATION:ACTUNING</del>	c7300-pxf	RECOMMENDED_ACTION
<del>COMEDACBROWENWOG</del>	4-Warning	[chars]: entry at row [node]column [node]in node [node]does not reference row [node]in the node's child	<del>EXPLANATION:SECURITY EXPLANATION:ACTUNING</del>	c7300-pxf	RECOMMENDED_ACTION
<del>COMEDACBROWENWRS</del>	4-Warning	[chars]: error while processing references for row [node]in node [node] [chars]	<del>EXPLANATION:SECURITY EXPLANATION:ACTUNING</del>	c7300-pxf	RECOMMENDED_ACTION
<del>COMEDACBROWENWRE</del>	4-Warning	[chars]: cannot free row [node]in node [node] [chars]	<del>EXPLANATION:SECURITY EXPLANATION:ACTUNING</del>	c7300-pxf	RECOMMENDED_ACTION
<del>COMEDACBROWENWRY</del>	4-Warning	[chars]: while [chars] in row [node]in node [node]found deferred entry bitmap is [chars] but count is %u	<del>EXPLANATION:SECURITY EXPLANATION:ACTUNING</del>	c7300-pxf	RECOMMENDED_ACTION
<del>COMEDACBROWENWUNT</del>	4-Warning	[chars]: row entry counters not allocated for node [node]while freeing row %u	<del>EXPLANATION:SECURITY EXPLANATION:ACTUNING</del>	c7300-pxf	RECOMMENDED_ACTION
<del>COMEDACBROWENWUAE</del>	4-Warning	[chars]: cannot process row queue update for row [node]in node [node] [chars]	<del>EXPLANATION:INTERNALERROR EXPLANATION:ACTUNING</del>	c7300-pxf	RECOMMENDED_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
COMDAROWUPD_QUEUE	4-Warning	[chars]: cannot process row queue update for row [node]in node [node] enqueue failed [node]/[node] entries list is [chars]valid entry is [chars]enqueued	-	-	-
COMDACL_SLIST_NO	5-Notice	[chars]: failed to set list information function for node [node]'s row queue ID %u	The system encountered an error while initializing a function vector used for debugging purposes. Turbo ACL will continue to function correctly but the <CmdBold>show list<NoCmdBold> <CmdArg>ID<NoCmdArg> command will not show Turbo ACL-specific information for the specified list ID number.	c7300-pxf	RECOMMENDED_ACTION
COND_DEBUG_HA_CLIENT	2-Critical	COND_DEBUG ISSU client failed to get buffer for message. Error: [dec] [chars]	The COND_DEBUG_HA client failed to get buffer space for building chkpt message. Message cannot be sent to standby device. If a problem occurs the standby device cannot be brought up properly.	cond_debug	"show logging and show checkpoint client"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
COND_DEBUG_HA2INT	2-Critical	COND_DEBUG ISSU client initialization failed to [chars]. Error: [dec] [chars]	The COND_DEBUG ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	cond_debug	LOG_STD_ACTION
<del>COND_DEBUG_ISSU_NEGO</del>	2-Critical	COND_DEBUG ISSU client failed to send negotiation message. Error: [dec] [chars]	The COND_DEBUG ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	cond_debug	"show logging and show checkpoint client"
<del>COND_DEBUG_ISSU_NEGO</del>	2-Critical	COND_DEBUG ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The COND_DEBUG ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	cond_debug	"show issu session <client_id> and " "show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>COND_DEBUG_ISSU_REG_N</del>	2-Critical	COND_DEBUG ISSU client failed to register session information. Error: [dec] [chars]	The COND_DEBUG ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	cond_debug	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>COND_DEBUG_ISSU_N</del>	3-Error	COND_DEBUG ISSU client does not have a valid registered session.	The COND_DEBUG ISSU client does not have a valid registered session.	cond_debug	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>COND_DEBUG_ISSU_MSG_N</del>	3-Error	COND_DEBUG ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The COND_DEBUG ISSU client failed to calculate the MTU for the specified message. The COND_DEBUG ISSU client will not be able to send the message to the standby device.	cond_debug	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>COND_DEBUG_ISSU_UNREG_N</del>	3-Error	COND_DEBUG ISSU client failed to unregister session information. Error: [dec] [chars]	The COND_DEBUG ISSU client failed to unregister session information.	cond_debug	"show issu session <client_id> and " "show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
COND_DEBUG3TRANSFORM	3-Error	COND_DEBUG ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The COND_DEBUG ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the COND_DEBUG state between the active device and the standby device is not identical.	cond_debug	"show issu session <client_id> and " "show issu negotiated version <session_id>"
CONF_SW2-IPC_INIT	2-Critical	IPC message handler registration failure rc %u	Registering an IPC message handler for the CONF SW feature failed. This will cause the feature not to function. The function	cpp-conf-sw	"This is normally a software issue. " "The consequences are that the CONF SW feature will not function. " LOG_STD_ACTION
CONF_SW3HEAT_DOWN	3-Error	Invalid request [chars] while feature down conf id %u	While the feature was not active an invalid request was received from another layer of the CONF_SW software stack for the specified conf ID. Some requests do not have an associated conf ID. For them the displayed conf ID is zero.	cpp-conf-sw	"This is a software issue. The consequences " "could be limited to only one or a few confs. " LOG_SID_RECUR_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CONF_SW-3-FEAT_UP	3-Error	Invalid request [chars] while feature up	While the feature was active an invalid request was received from another layer of the CONF SW software stack.	cpp-conf-sw	"This is a software issue. " "There are no consequences as this can only have been an Init request " "while the feature was already active. " LOG_SID_RECUR_ACTION
CONF_SW-3-IPC_NORES	3-Error	No space for the IPC reply size %u	For a request from upper CONF SW software stack layers it was not possible to allocate space for a reply for the specified size. The consequence of this could be a stuck conf that cannot be established etc. In rare cases this could also affect other operations such as feature activation deactivation modification High-Availability switchover operations.	cpp-conf-sw	"This is normally a software issue. " LOG_SID_RECUR_ACTION
CONF_SW-3-IPC_OPEN_RHY	3-Error	IPC Open Reply failed request %u	For a request from upper CONF SW software stack layers it was not possible to open the reply buffer. The consequence of this could be a stuck conf that cannot be established etc. In rare cases this could also affect other operations such as feature activation deactivation modification High-Availability switchover operations.	cpp-conf-sw	"This is normally a software issue. " LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CONF_SW-3-NO_RES	3-Error	[chars] resource not available for the [chars] request conf id %u	The specified software resource was not available or could not be located for the specified request from upper CONF SW software stack layers for the specified conf ID.	cpp-conf-sw	"This is a software issue. The consequences " "are that the specified request could not be performed. " LOG_SID_RECUR_ACTION
CONGCSRLXC4CLI_FAILURE	2-Critical	CSRLXC configuration cannot occur: [chars]	The system was unable to even attempt to apply LXC configuration for the given reason.	ultra-ui	LOG_SID_SHI_TECH_ACTION
CONGCSRLXC4CLI_FAILURE	3-Error	Configuration not saved to NVRAM. Please inspect [chars] for details.	Out of the generated VM configuration commands the given number of commands were rejected by the IOSd parser. The configuration is only automatically saved to NVRAM if no errors are encountered so in this case it was not saved. The indicated log file will describe exactly which commands were rejected as will any accompanying CSRLXC4CLI_FAILURE messages in this log.	ultra-ui	"Inspect the current running-config of the router " "using the <CmdBold>show running-config</noCmdBold> " "command. If it appears valid you may manually save " "the configuration using <CmdBold>copy running-" "config startup-config</noCmdBold>. If it does not " "appear valid manually correct the configuration " "or use the <CmdBold>config replace nvram:startup-" "config</noCmdBold> command to revert to the " "startup-config."
CONGCSRLXC4CLI_FAILURE	3-Error	Could not [chars] file [chars]: [chars]	The system was unable to perform the indicated operation on the indicated file for the indicated reason	ultra-ui	"Make sure the given disk is correctly formatted " "and has sufficient free space available."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CONF</del> CSRLXCCLIFAILURE	4-Warning	Configuration command failure: '[chars]' was rejected	The indicated IOSd configuration command generated by the CSRLXC subsystem was rejected by the IOSd CLI. Look for a subsequent <del>CSRLXC</del> CONFNOTSMO log message which will contain a reference to a logfile containing more information about this failure.	ultra-ui	"Inspect the log file to determine why the command " "was rejected and how to correct it. If necessary " "manually re-issue the corrected command."
<del>CONF</del> CSRLXCCONFDONE	5-Notice	Configuration was applied and saved to NVRAM. See [chars] for more details.	The generated configuration was successfully applied no commands were rejected by the IOSd CLI and the	ultra-ui	LOG_SID_NO_ACTION
<del>CONF</del> EWLCSWCONFERR	5-Notice	iosxe-binos-utils	Error in[chars]	EWLC wireless config db Error Message.	LOG_STD_ACTION
CONFIG-3-VFI	3-Error	ERRMSG_NOFLAGS	-	-	-
CONFIG-3-VFI	3-Error	ERRMSG_NOFLAGS	-	-	-
CONFIG-3-XCONNECT	3-Error	ERRMSG_HAG_TRACEBACK	-	-	-
CONFIG-3-XCONNECT	3-Error	ERRMSG_HAG_TRACEBACK	-	-	-
CONFIG-4-ATOM_TRANS	4-Warning	ERRMSG_NOFLAGS	-	-	-
CONFIG-4-ATOM_TRANS	4-Warning	ERRMSG_NOFLAGS	-	-	-
<del>CONS</del> ISTENCY-3-ATOM_TRANS	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>CONS</del> ISTENCY-3-ATOM_TRANS	3-Error	ERRMSG_NOFLAGS	-	-	-
CONSISTENCY-3-LCON	3-Error	ERRMSG_HAG_TRACEBACK	-	-	-
CONSISTENCY-3-LCON	3-Error	ERRMSG_HAG_TRACEBACK	-	-	-
CONSISTENCY-3-LDP	3-Error	ERRMSG_HAG_TRACEBACK	-	-	-
CONSISTENCY-3-LDP	3-Error	ERRMSG_HAG_TRACEBACK	-	-	-
<del>CONS</del> ISTENCY-3-MPLS_TE	3-Error	ERRMSG_HAG_TRACEBACK	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CONSIENCY3MPLS_TE	3-Error	RRMVGHLAG_TRACEBACK	-	-	-
CONSIENCY3MPLS_TELM	3-Error	RRMVGHLAG_TRACEBACK	-	-	-
CONSIENCY3MPLS_TELM	3-Error	RRMVGHLAG_TRACEBACK	-	-	-
CONST_ISSU3CONO_DONE	2-Critical	[chars][dec]: ISSU Negotiation not complete	Unable to complete ISSU negotiation.	CONST_ISSU_PLAIFORM	LOG_STD_ACTION
CONST_ISSU3CAP_EXCHANGE	3-Error	[chars][dec]: Capability exchange failed with error [chars]	The capability exchange failed the ISSU client is unable to process the received capability	CONST_ISSU_PLAIFORM	LOG_STD_ACTION
CONST_ISSU3CAP_REG	3-Error	[chars][dec]: failed to register	The capabilities of the ISSU client could not be registered	CONST_ISSU_PLAIFORM	LOG_STD_ACTION
CONST_ISSU3CAPENTRY_REG	3-Error	[chars][dec]: failed to register a capability entry [chars]	The ISSU client failed to register a capability entry	CONST_ISSU_PLAIFORM	LOG_STD_ACTION
CONST_ISSU3CAPGROUP_REG	3-Error	[chars][dec]: failed to register a capability group [chars]	The ISSU client failed to register a capability group	CONST_ISSU_PLAIFORM	LOG_STD_ACTION
CONST_ISSU3CAPTYPE_REG	3-Error	[chars][dec]: failed to	The ISSU client failed to register a capability type	CONST_ISSU_PLAIFORM	LOG_STD_ACTION
CONST_ISSU3CF_SEND	3-Error	[chars][dec]: Client failed to send message [dec]	ISSU client cannot send a negotiation message to a peer	CONST_ISSU_PLAIFORM	LOG_STD_ACTION
CONST_ISSU3CLIENT_REG	3-Error	[chars][dec]: Client failed to register [chars]	The ISSU Client could not be registered	CONST_ISSU_PLAIFORM	LOG_STD_ACTION
CONST_ISSU3CLIENT_REG_AID	3-Error	[chars][dec]: Client is not	The ISSU Client is not yet initialized. The negotiation for this client is not yet done.	CONST_ISSU_PLAIFORM	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CONST_ISSU3MUNCFE0GH	3-Error	[chars][dec]: Requested buffer size [dec] is greater than the max MTU size	Checkpoint buffer size requested is greater than the max MTU size checkpoint supports	cat6000-ha	LOG_STD_ACTION
CONST_ISSU3ENITY_REG	3-Error	[chars][dec]: failed to register	The ISSU entity could not be registered	CONST_ISSU_PLAIFORM	LOG_STD_ACTION
CONST_ISSU3ENITY_UNREG	3-Error	[chars][dec]: failed to unregister	The ISSU entity could not be unregistered	CONST_ISSU_PLAIFORM	LOG_STD_ACTION
CONST_ISSU3ICC_SEND	3-Error	[chars][dec]: Client failed to send message	ISSU client cannot send a negotiation message to a peer	CONST_ISSU_PLAIFORM	LOG_STD_ACTION
CONST_ISSU3MSG_MIU	3-Error	[chars][dec]: Client failed to get mtu for message [dec] [chars]	[chars][dec]: client cannot get the MTU for a message type	CONST_ISSU_PLAIFORM	LOG_STD_ACTION
CONST_ISSU3MSG_NOTCK	3-Error	[chars][dec]: ISSU message type [dec] is not compatible	ISSU received a message not compatible with the running version.	CONST_ISSU_PLAIFORM	"show message type <Client_ID>"
CONST_ISSU3MSG_POLICY	3-Error	[chars][dec]: Client failed to negotiate version for message type [dec] error [chars]	ISSU client cannot negotiate message to a peer	CONST_ISSU_PLAIFORM	LOG_STD_ACTION
CONST_ISSU3MSG_REG	3-Error	[chars][dec]: failed to register its messages [chars]	Messages for the ISSU client could not be registered	CONST_ISSU_PLAIFORM	LOG_STD_ACTION
CONST_ISSU3MSGGRP_REG	3-Error	[chars][dec]: failed to	The ISSU client failed to register a message group	CONST_ISSU_PLAIFORM	LOG_STD_ACTION
CONST_ISSU3MSGTYPE_REG	3-Error	[chars][dec]: failed to register a message type [chars]	The ISSU client failed to register a message type	CONST_ISSU_PLAIFORM	LOG_STD_ACTION
CONST_ISSU3NCO_PROCESS	3-Error	[chars][dec]: Cannot create process: [chars]	The process to negotiate the session for the specified ISSU client cannot be created.	CONST_ISSU_PLAIFORM	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CONST_ISSU_SESSION_REG	3-Error	[chars][dec]: session failed to register [chars]	The client's ISSU session could not be registered	CONST_ISSU_PLAIFORM	LOG_STD_ACTION
CONST_ISSU_SESSION_UNREG	3-Error	[chars][dec]: session [dec]	The client's ISSU session could not be unregistered	CONST_ISSU_PLAIFORM	LOG_STD_ACTION
CONST_ISSU_TRANCO_FAILD	3-Error	[chars][dec]: failed to	The ISSU client cannot start its negotiation	CONST_ISSU_PLAIFORM	LOG_STD_ACTION
CONST_ISSU_TRANFORM_FAILD	3-Error	[chars][dec]: [chars] transformation failed [chars]	The transformation operation for the ISSU message has failed	CONST_ISSU_PLAIFORM	LOG_STD_ACTION
CONTROLLER2_CDB_NULL	2-Critical	cdb is NULL	A NULL pointer is detected	-	LOG_SIDSH_TECH_ACTION
CONTROLLER2_CRASHED	2-Critical	Interface Processor in slot [dec] not responding [hec]: shutting it down	A controller stopped responding to commands over the cBus so it was\n put into shutdown mode.	-	"Re-enable the controllers by issuing the no shut\n configuration command on all controllers on the card or\n hotswap out the bad card and install the new one. You must\n still manually <CmdBold>no shut<noCmdBold> the controllers."
CONTROLLER2_DSX_NULL	2-Critical	dsx pointer is NULL	A NULL pointer is detected	-	LOG_SIDSH_TECH_ACTION
CONTROLLER2_FIRMWARE	2-Critical	Controller [chars] [chars]	A software or hardware error occurred.	-	LOG_SIDSH_TECH_ACTION
CONTROLLER2_NOIFOUND	2-Critical	For controller [chars]	An internal software error occurred.	-	LOG_SIDSH_TECH_ACTION
CONTROLLER2_DS1_CLOCKS	4-Warning	[chars]: [chars] Clock status is [chars] for clock_id [dec] on circuit: [node][chars]	DS1 Recovered clock status change message	-	LOG_STD_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CNROEACRUCRCLKS</del>	4-Warning	[chars]: [chars] Clock status is [chars] for clock_id [dec] on circuit: [node][chars]	DS3 Recovered clock status change message	-	LOG_SID_NO_ACTION
<del>CNROEACRUCRCLSENL</del>	4-Warning	[chars]: [chars] Clock status is [chars] for clock_id [dec] on circuit: [node][node][chars]	DS3:channelized Recovered clock status change message	-	LOG_SID_NO_ACTION
<del>CNROEACRUCRCONCB</del>	4-Warning	[chars]: [chars] Clock status is [chars] for clock_id [dec] on circuit: [node][node][node][chars]	OCN_CT3: Recovered clock status change message	-	LOG_SID_NO_ACTION
<del>CNROEACRUCRCONCB</del>	4-Warning	[chars]: [chars] Clock status is [chars] for clock_id [dec] on circuit: [node][node][chars]	OCN_T3: Recovered clock status change message	-	LOG_SID_NO_ACTION
<del>CNROEACRUCRCONVTI</del>	4-Warning	[chars]: [chars] Clock status is [chars] for clock_id [dec] on circuit: [node][node][node][node][char]	OCN_VT_T1: Recovered clock status change message	-	LOG_SID_NO_ACTION
<del>CNROEACRUCRCSMCB</del>	4-Warning	[chars]: [chars] Clock status is [chars] for clock_id [dec] on circuit: [node][node][node][node][char]	STMN_CT3: Recovered clock status change message	-	LOG_SID_NO_ACTION
<del>CNROEACRUCRCSMEB</del>	4-Warning	[chars]: [chars] Clock status is [chars] for clock_id [dec] on circuit: [node][node][node][chars]	STMN_E3: Recovered clock status change message	-	LOG_SID_NO_ACTION
<del>CNROEACRUCRCSMNB</del>	4-Warning	[chars]: [chars] Clock status is [chars] for clock_id [dec] on circuit: [node][node][node][chars]	STMN_T3: Recovered clock status change message	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CONTROLLER</del> CLOCKSMACK	4-Warning	[chars]: [chars] Clock status is [chars] for clock_id [dec] on circuit: [node][node][node][node][chars]	STMN_VC1x: Recovered clock status change message	-	LOG_SID_NO_ACTION
<del>CONTROLLER</del> SCALDRP	5-Notice	Controller [chars] [chars]	A software or hardware error occurred.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
<del>CONTROLLER</del> CLOCKSTATE	5-Notice	Controller [chars] [chars]	A configurable controller clock changed its state.	-	LOG_SID_NO_ACTION
<del>CONTROLLER</del> DOWNDEAL	5-Notice	Controller [chars] changed state to [chars] due to [chars]	A configurable controller changed its state.	-	LOG_SID_NO_ACTION
<del>CONTROLLER</del> HDLCRESURE	5-Notice	Insufficient HDLC resources to enable channel [dec]	Limited number of HDLC channels can be allocated for this trunk	-	"Please check the number of HDLC resources supported for this trunk\n\ card. Please contact your technical support representative."
<del>CONTROLLER</del> CLOCKSTATUS	5-Notice	Controller [chars] [chars]	A configurable controller loopback status.	-	LOG_SID_NO_ACTION
<del>CONTROLLER</del> REMLOCALOP	5-Notice	Controller [chars] local loop [chars] [chars]	A configurable controller entered local loopback.	-	LOG_SID_NO_ACTION
<del>CONTROLLER</del> REMLOOP	5-Notice	Controller [chars] remote loop [chars] [chars]	A configurable controller entered remote loopback.	-	LOG_SID_NO_ACTION
<del>CONTROLLER</del> SUPDOWN	5-Notice	Controller [chars] changed state to [chars]	A configurable controller changed its state.	-	LOG_SID_NO_ACTION
<del>COMPONENT</del> IPADDED	3-Error	Registering of the interface with ifIndex [dec] to local data structure failed	An attempt to make an entry for the registering interface failed	gsr-netmgmt	""



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CPP_BQS2MPASS_FS_REG	2-Critical	CPP BQS PROXY feature special vector [dec] registration failed result: [dec]	Cisco internal software error. CPP multipass registration of a feature special processing vector for BQS Proxy failed. The BQS proxy will not be fully functional while this condition exists.	cpp-ucode	LOG_STD_ACTION
CPP_BQS_PROXY_INIT_FAILED	2-Critical	CPP BQS Proxy IPC interface initialization failure result: [dec].	Cisco internal software error. CPP BQS initialization detected that the Proxy IPC interface initialization failed. The BQS Proxy will not be functional while this condition exists.	cpp-ucode	LOG_STD_ACTION
CPP_BQS-3-CARVE	3-Error	[chars]: size [node]SW carved out memory region initialization failed.	A BQS proxy failed to initialize the software memory region.	cpp-ucode	LOG_STD_ACTION
CPP_BQS3CMD_ACTIVE	3-Error	CPP BQS Proxy Command correlator %u	A BQS Proxy command was received but the correlator was still in use. Command was not processed.	cpp-ucode	LOG_STD_ACTION
CPP_BQS3INIT_FAILED	3-Error	CPP BQS RM Proxy region [chars]	BQS proxy failed due initialize or resize software managed memory.	cpp-ucode	LOG_STD_ACTION
CPP_BQS3INVALIDSUBTYPE	3-Error	CPP BQS RM Proxy subtype %u	BQS proxy failed because of receiving invalid sub-type or failed to allocate ipc response buffer.	cpp-ucode	LOG_STD_ACTION
CPP_BQS3AXCPMIXEXCEED	3-Error	CPP BQS Proxy Command exceed GPM tx len %u	A BQS Proxy command recycle a packet exceed GPM tx len	cpp-ucode	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CPP_BQS_PROXY_IC_SEND	3-Error	failure: [chars]	BQS Proxy send response failed response was dropped.	cpp-ucode	LOG_STD_ACTION
CPP_BQS-3-RESIZE	3-Error	CPP BQS Proxy Memory Manager region [chars]	BQS proxy failed to resize software managed memory.	cpp-ucode	LOG_STD_ACTION
PROV_PROXY_NULL_EXMEM	4-Warning	Unexpected NULL shared-local EXMEM handle - ref_count [dec]	The error will be corrected and pinhole programming will continue.	asr1k-conf-sw	LOG_STD_NO_ACTION
PROV_PROXY_INIT_FAILURE	3-Error	flowdb proxy init failure rc= [dec]	The flow database proxy has experienced a failure when trying to init	csr1kv-dp-infra	LOG_STD_ACTION
PROV_PROXY_IPC_FAILURE	3-Error	rc= [dec]	The flow database proxy has experience a failure when trying to send an IPC	csr1kv-dp-infra	LOG_STD_ACTION
PROV_PROXY_UNEXPECTED	3-Error	rc= [dec]	The flow database proxy has experienced an unexpected condition	csr1kv-dp-infra	LOG_STD_ACTION
PROV_PROXY_IPC_SUBTYPE	3-Error	subtype is [dec]	The flow database proxy has receive an IPC with an unexpected subtype	csr1kv-dp-infra	LOG_STD_ACTION
CPM_CPM_CENT_WARN	3-Error	[chars]	-	-	-
CPM_CPM_HIBASIS	3-Error	NIST bypass test failed for CPP_FM object [chars].	Classification Feature Manager Security Client database detected a discrepancy in a security sensitive object. This could be due to a hardware or software resource limitation or a software defect.	qfp-class-internal	"Check the logs for information on the relevant " "object download states. Remove the object or a " "parent object in question. If the problem persists " "reboot the forwarding processor ESP."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CPMCPMHWTCAMWRNG</del>	3-Error	HW TCAM limit exceeded: [chars]	-	-	-
<del>CPMCPMREMEMWRNG</del>	3-Error	[chars]	-	-	-
<del>CPMCPMSWTCAMWRNG</del>	3-Error	SW TCAM limit exceeded: [chars]	-	-	-
<del>CPMCPMTCAMCEWRNG</del>	3-Error	[chars]	-	-	-
<del>CPMCPMTCAMWRNG</del>	3-Error	TCAM limit exceeded: [chars]	-	-	-
CPMCPMIHDCNRD	4-Warning	Matching on field type [node][chars] value [node]0x[hec]	User is trying to use a classification criterion not supported by the feature. For example user is trying to apply a with a class matching matched on an IPv6 ACL that contains a match on flow-label. The entire rule e.g. ACE containing the unsupported criterion	cpp-sw	LOG_SID_NO_ACTION
<del>CPMCPMTCAMWRNG</del>	4-Warning	TCAM limit exceeded: [chars]	-	-	-
CPMCPMCRACHCOMAL	2-Critical	QFP BQS Scratch area too small for Frame Relay MFR feature usage size: [dec] need: [dec].	Cisco internal software error. QFP Frame Relay MFR initialization detected that the BQS scratch memory area is insufficient for Frame Relay MFR usage. The Frame Relay MFR Bundle interfaces will not be functional while this condition exists.	cppcodekeywdfmrelay	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CPPR3PROXYICNFALD	2-Critical	Frame Relay Proxy IPC interface initialization failure result: [dec].	Cisco internal software error. FR initialization detected that the Proxy IPC interface initialization failed. The FR interfaces may not function properly while this condition exists.	cppuodkeywodframerdy	LOG_STD_ACTION
CPPR3INVPROXYMSG	3-Error	CPP FR Proxy received invalid IPC message ID [dec]	Cisco internal software error. CPP FR Proxy received an invalid message ID. This message will be ignored.	cppuodkeywodframerdy	LOG_STD_ACTION
CPPR3MFRNADFXDLCI	3-Error	Frame Relay MFR DLCI [dec] received from the peer	Possible error on the peer device with Multilink FR. Received Multilink FR packet contained wronD DLCI number.	cppuodkeywodframerdy	LOG_STD_ACTION
CPPR3PROXYDUPDLCID	3-Error	QFP Frame Relay MFR Proxy [chars] [chars] duplicate DLCI [dec] for interface [chars]	Cisco internal software error. QFP Frame Relay MFR Proxy message DLCI Add could not be processed for the indicated interface due use of a given DLCI on multiple member links within the same Frame Relay MFR Bundle. The associated Frame Relay MFR Bundle interface may not be fully functional as a result of this condition.	cppuodkeywodframerdy	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QFP_PROXY_DUP_LINK_ID	3-Error	QFP Frame Relay MFR Proxy [chars] [chars] duplicate Link ID [dec] for interface [chars]	Cisco internal software error. QFP Frame Relay MFR Proxy message Link Add could not be processed for the indicated interface due use of a given Link ID on multiple member links within the same Frame Relay MFR Bundle. The associated Frame Relay MFR Bundle interface may not be fully functional as a result of this condition.	qfpcodekeywordframe-relay	LOG_STD_ACTION
QFP_PROXY_INVALID_RX_BUFFER_LIMIT	3-Error	QFP Frame Relay MFR Proxy [chars] [chars] indicated an invalid Rx buffer limit	Cisco internal software error. QFP Frame Relay MFR was provided a invalid Rx buffer limit value. The associated Frame Relay MFR Bundle interface may not be fully functional as a result of this condition.	qfpcodekeywordframe-relay	LOG_STD_ACTION
QFP_PROXY_INVALID_BUNDLE_STATE	3-Error	QFP Frame Relay MFR Proxy [chars] [chars] invalid Bundle state [chars] [dec] for	Cisco internal software error. QFP Frame Relay MFR Proxy message could not be processed due to the Frame Relay MFR Bundle being in an incorrect state to accept the message. The associated Frame Relay MFR Bundle interface may not be fully functional as a result of this condition.	qfpcodekeywordframe-relay	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CPFR3PROXY_NVDLNO	3-Error	QFP Frame Relay MFR Proxy [chars] [chars] invalid PVC Info Base: 0x[node]x Num: [dec]	Cisco internal software error. QFP Frame Relay MFR Proxy message contained invalid Frame Relay MFR PVC information. The associated Frame Relay MFR Bundle interface may not be fully functional as a result of this condition.	cpucodekeywordframe-relay	LOG_STD_ACTION
CPFR3PROXY_NLINKID	3-Error	QFP Frame Relay MFR Proxy [chars] [chars] invalid Link ID [dec] for interface [chars]	Cisco internal software error. QFP Frame Relay MFR Proxy message Link Add could not be processed for the indicated interface due to an invalid Link ID. The associated Frame Relay MFR Bundle interface may not be fully functional as a result of this condition.	cpucodekeywordframe-relay	LOG_STD_ACTION
CPFR3PROXY_NLINKSTATE	3-Error	QFP Frame Relay MFR Proxy [chars] [chars] invalid Link state [chars] [dec] for	Cisco internal software error. QFP Frame Relay MFR Proxy message could not be processed due to the Frame Relay MFR Link being in an incorrect state to accept the message. The associated Frame Relay MFR Bundle interface may not be fully functional as a result of this condition.	cpucodekeywordframe-relay	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QFP_PROXY_MFR_PROXY	3-Error	QFP Frame Relay MFR Proxy [chars] [chars] indicated an invalid lost sequence	Cisco internal software error. QFP Frame Relay MFR was provided a invalid lost sequence timeout value. The associated Frame Relay MFR Bundle interface may not be fully functional as a result of this condition.	cpp:keyword:frame-relay	LOG_STD_ACTION
QFP_PROXY_MFR_PROXY	3-Error	QFP Frame Relay MFR Proxy [chars] [chars] invalid Rx/Tx interface value [dec] for	Cisco internal software error. QFP Frame Relay MFR Proxy was unable to complete the requested Frame Relay MFR Bundle state change or configuration update due to an invalid interface Rx/Tx designation in the proxy request. The associated Frame Relay MFR Bundle interface may not be fully functional as a result of this condition.	cpp:keyword:frame-relay	LOG_STD_ACTION
QFP_PROXY_MFR_PROXY	3-Error	QFP Frame Relay MFR Proxy [chars] [chars] invalid Sub-Device ID [dec] for interface [chars]	Cisco internal software error. QFP Frame Relay MFR Proxy message Bundle Add could not be processed for the indicated interface due to an invalid Sub-Device ID. The associated Frame Relay MFR Bundle interface may not be fully functional as a result of this condition.	cpp:mlpppkeyword:none	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QFP_PROXY_TX_LINK_WEIGHT	3-Error	QFP Frame Relay MFR Proxy [chars] [chars] indicated an invalid Tx Link weight	Cisco internal software error. QFP Frame Relay MFR Proxy message contained invalid Tx Link weight information. The associated Frame Relay MFR Member Link and/or Bundle interface may not be fully functional as a result of this condition.	qfpudkeywordframe-relay	LOG_STD_ACTION
CPP_PROXY_CAIOCFAL	3-Error	CPP Frame Relay Proxy response to msg id [node]lost due to buffer allocation failure	Cisco internal software error. CPP Frame Relay Proxy message processing detected a IPC buffer allocation failure during response processing.	cppudkeywordframe-relay	LOG_STD_ACTION
QFP_PROXY_NULL_BUNDLE	3-Error	QFP Frame Relay MFR Proxy [chars] [chars] NULL Bundle sub-block for	Cisco internal software error. QFP Frame Relay MFR Proxy was unable to complete the requested Frame Relay MFR Bundle state change or configuration update due to an invalid or uninitialized Bundle sub-block. The associated Frame Relay MFR Bundle interface may not be fully functional as a result of this condition.	qfpudkeywordframe-relay	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QFP_PROXY_NULL_PVC	3-Error	QFP Frame Relay MFR Proxy [chars] [chars] NULL PVC sub-block for	Cisco internal software error. QFP Frame Relay MFR Proxy was unable to complete the requested Frame Relay MFR Member PVC state change or configuration update due to an invalid or uninitialized PVC sub-block. The associated Frame Relay MFR PVC interface may not be fully functional as a result of this condition.	qfpcodekeywordframe-relay	LOG_STD_ACTION
QFP_PROXY_NULL_LINK	3-Error	QFP Frame Relay MFR Proxy [chars] [chars] NULL Member Link sub-block for	Cisco internal software error. QFP Frame Relay MFR Proxy was unable to complete the requested Frame Relay MFR Member Link state change or configuration update due to an invalid or uninitialized Member Link sub-block. The associated Frame Relay MFR Member Link interface may not be fully functional as a result of this condition.	qfpcodekeywordframe-relay	LOG_STD_ACTION
QFP_PROXY_UPDATE_LOCK	3-Error	QFP Frame Relay MFR Proxy [chars] SID Update Complete w/o Preceding Lock	Cisco internal software error. QFP Frame Relay MFR Proxy message processing detected a Bundle Schedule SID update sequence error. One or more interface schedules could have been affected.	qfpcodekeywordframe-relay	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QFP_PROXY_UPDATE_ERROR	3-Error	QFP Frame Relay Proxy [chars] Multiple SID Update Locks to same interface	Cisco internal software error. QFP Frame Relay MFR Proxy message processing detected a Bundle Schedule SID update sequence error. One or more interface schedules could have been affected.	qfpupdatekeywordframe_relay	LOG_STD_ACTION
QFP_PROXY_ALLOC_FAIL	4-Warning	QFP Frame Relay MFR Proxy [chars] response lost due to buffer allocation	Cisco internal software error. QFP Frame Relay MFR Proxy message processing detected a IPC buffer allocation failure during proxy response processing. The associated Frame Relay MFR functionality may not be fully functional as a result of this condition.	qfpupdatekeywordframe_relay	LOG_STD_ACTION
QFP_PROXY_SYNC	4-Warning	QFP Frame Relay MFR Proxy [chars] [chars] Bundle/Link sync issue with interface [chars]	Cisco internal software error. QFP Frame Relay MFR Proxy message processing detected a Bundle-Link state synchronization abnormality. This condition should be cosmetic. Full context of the message will aid in problem isolation.	qfpupdatekeywordframe_relay	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CPP</del> FRM_BUNDLE_FLOW_OFF	4-Warning	QFP Frame Relay MFR Tx Bundle [chars] flowed off for an abnormal duration due to one or more congested member links	Possible Cisco internal software or hardware error. QFP Frame Relay MFR Tx processing detected that a Frame Relay MFR Bundle interface was flowed off for an extended period of time due to a congested member link queue. The associated Frame Relay MFR Bundle interface may not be fully functional as a result of this condition.	cpp-ucode wordframe-relay	LOG_STD_ACTION
<del>CPP</del> IPHC_PROXY_FAILURE	3-Error	[chars] CPP IPHC Client Proxy failure	IPHC proxy failed because of receiving invalid sub-type or failed to allocate ipc response buffer.	cpp-ucode	LOG_STD_ACTION
<del>CPP</del> LDN_PROXY_IPC_INIT_FAIL	2-Critical	CPP LDN Proxy IPC interface initialization failure result: [dec].	Cisco internal software error. CPP LDN initialization detected that the Proxy IPC interface initialization failed. The LDN Proxy will not be functional while this condition exists.	cpp-ucode	LOG_STD_ACTION
<del>CPP</del> LDN_PROXY_GPM_SUCCESS	3-Error	failure: [chars]	LDN Proxy failed in performing a GPM operation.	cpp-ucode	LOG_STD_ACTION
<del>CPP</del> LDN_PROXY_IPC_INVALID	3-Error	failure: [dec]	LDN Proxy received an invalid IPC msg from the client.	cpp-ucode	LOG_STD_ACTION
<del>CPP</del> LDN_PROXY_IPC_SEND	3-Error	failure: [chars]	LDN Proxy send response failed response was dropped.	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CPP_LDN3PROXY_LSN</del>	3-Error	[chars] failure: [dec]	LDN Proxy received a failure from LSN.	cpp-ucode	LOG_STD_ACTION
<del>CPP_LDN3PROXY_METAENQ</del>	3-Error	subdevice id: [dec] failure: [dec]	LDN Proxy metapacket enqueue failed.	cpp-ucode	LOG_STD_ACTION
<del>CPP_PASSWAD_VECTOR</del>	3-Error	vector [dec]	An invalid multipass vector was received	cpp-ucode	LOG_STD_ACTION
<del>CPP_NAT_PROXY_NAT_SUBTYPE</del>	3-Error	subtype is [dec]	The NAT proxy has receive an IPC with an unexpect subtype	cpp-ucode	LOG_STD_ACTION
<del>CPP_NAT_PROXY_NAT_INITAL</del>	3-Error	nat init failure rc= [dec]	The NAT proxy has experience a failure when trying to init NAT	cpp-ucode	LOG_STD_ACTION
<del>CPP_NAT_PROXY_NAT_SEND_IPC</del>	3-Error	rc= [dec]	The NAT proxy has experience a failure when trying to send an IPC	cpp-ucode	LOG_STD_ACTION
<del>CPP_NAT64_PROXY_NAT64_SUBTYPE</del>	3-Error	subtype is [dec]	The NAT64 proxy has received an IPC with an unexpected subtype	cpp-ucode	LOG_STD_ACTION
<del>CPP_NAT64_PROXY_NAT64_INITAL</del>	3-Error	nat64 init failure rc= [dec]	The NAT64 proxy has experience a failure when trying to init NAT64	cpp-ucode	LOG_STD_ACTION
<del>CPP_NAT64_PROXY_NAT64_INITAL</del>	3-Error	nat64 init failure rc= [dec]	The NAT proxy has experienced a failure when trying to initialize the NAT64 proxy	cpp-ucode	LOG_STD_ACTION
<del>CPP_NAT64_PROXY_NAT64_IPC</del>	3-Error	rc= [dec]	The NAT64 proxy has received an IPC with an unexpected format/data	cpp-ucode	LOG_STD_ACTION
<del>CPP_NAT66_PROXY_NAT66_SUBTYPE</del>	3-Error	subtype is [dec]	The NAT66 proxy has received an IPC with an unexpected subtype	cpp-ucode	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CPPRPROX4RSENDICL</del>	3-Error	rc= [dec]	The PFR proxy has experienced a failure when trying to send an IPC	cpp-ucode	LOG_STD_ACTION
<del>CPKSHBCPKSBAKHA</del>	3-Error	rc=0x[hec]	A packet subblock manage has failed	cpp-ucode	LOG_STD_ACTION
<del>CPBCIPSECNILEXMEM</del>	4-Warning	Unexpected NULL shared-local EXMEM handle - ref_count [dec]	The error will be corrected and pinhole programming will continue.	asr1k-sbc	LOG_SID_NO_ACTION
<del>CPWANPROX4RXCNIAD</del>	3-Error	[dec]	IPC handler initialization failed.	cpp-ucode	LOG_STD_ACTION
<del>CPWANPROX4RACODE</del>	3-Error	[hec]	Failed to allocate packet buffer for IPC	cpp-ucode	LOG_STD_ACTION
<del>CPWANPROX4RSEIAD</del>	3-Error	[hec]	Failed to send IPC packet.	cpp-ucode	LOG_STD_ACTION
<del>CPWANPROX4RPNALMG</del>	4-Warning	[hec]	Received an invalid IPC messages subtype.	cpp-ucode	LOG_STD_ACTION
CPBQS3MULTICOMMIS	3-Error	Multiple outstanding [chars] commit events detected %u	-	-	-
CPPBQS3QMOVEFAIL	3-Error	CPP [dec] schedule [chars] queue move failed [hex] - SEID=[hex] SID=[hex]	A QFP BQS schedule queue move operation failed.	qfp-bqs-internal	LOGSIDSHTECHACTION
CPBQS3QMOVEQSDS	3-Error	QFP [dec] schedule [chars] queue move to [chars] unsupported QoS disabled	QFP BQS schedule move to new output interface on different subdevice is unsupported. QoS for this schedule is disabled	qfp-bqs-internal	"Restore failed link or route so that schedule " "is moved back and QoS is restored. Or force the " "schedule to fail back to a link that is on " "the same subdevice the this schedule was " "originally on."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CPPBQS3QMOVESTUCK	3-Error	QFP [dec] schedule [chars] queue move operation is not progressing as expected - seq %u	A QFP schedule queue move operation is not proceeding as expected and can lead to packet drops. The most likely cause of a queue move operation getting stuck is having a rate based queue that has packets enqueued on it that are not being serviced very frequently or being starved due to higher priority queues causing an oversubscription of the physical output interface.	qfp-bqs-internal	"No action is required if QMVOEDONE message" " is also displayed following QMOVESTUCK." " If a QMOVEDONE or QMOVEPROC message is not" " displayed following QMOVESTUCK then" " collect the data from the following show" " commands:" " show platform" " show platform hardware qfp <active standby> bqs status" " show platform hardware qfp <active standby> bqs qmove info" " show platform hardware qfp <active standby> bqs qmove child" " show platform hardware qfp <active standby> bqs qmove flush" "Report the problem to the Cisco TAC providing" " the data from the above show commands."
CPPBQS-3-QSTUCK	3-Error	Default Queue for the interface [chars] stuck while serving traffic	-	-	-
CPPBQS-3-QRAIDOPTIMZLN	3-Error	QFP BQS detected invalid rate optimization nodes for [chars]	QFP unable to optimize the rates due to missing optimization nodes	qfp-bqs-internal	"Enable 'platform qos optimize-rate-ratio' command" "before applying QOS."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CPQBQ3REPA</del> ENTFAIL	3-Error	QFP [dec] schedule [chars] reparent failed [hex] - SEID=[hex] SID=[hex]	A QFP BQS schedule reparent operation failed.	qfp-bqs-internal	LOG_SID_SH_TECH_ACTION
<del>CPQBQ3SRT</del> ERRRESRTAL	3-Error	QFP [dec] unable to resort to correct parity error at SEID=[hex]	A QFP BQS SRT parity error occurred that was uncorrectable	qfp-bqs-internal	LOG_SID_NO_ACTION
<del>CPQBQ3MAX</del> PROFILMEXCEED	4-Warning	QFP [dec].[dec] Max Rate Profile limit [node]exceeded at [node]	Max number of Max Rate Profiles supported on QFP has been exceeded. Configuration failure is possible causing unpredictable results.	-	"Reduce the number of unique shape rates in the configuration"
<del>CPQBQ3MIN</del> PROFILMEXCEED	4-Warning	QFP [dec].[dec] Min Rate Profile limit [node]exceeded at [node]	Max number of Min Rate Profiles supported on QFP has been exceeded. Configuration failure is possible causing unpredictable results.	-	"Reduce the number of unique bandwidth rates in the configuration"
<del>CPQBQ3Q</del> UOIMEXCEED	4-Warning	QFP [dec].[dec] QoS Queue limit [node]exceeded at [node]	Max number of QoS queues supported on QFP has been exceeded. Configuration failure is possible causing unpredictable results.	-	"Reduce the size of the QoS configuration"
CPQBQ4QMOVEDONE	4-Warning	QFP [dec] schedule [chars] queue move done	A QFP BQS schedule queue move operation was not proceeding in a timely manner and flagged as being stuck but has since completed.	cpp-sw	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CPQBQS4QMOVEPROC	4-Warning	QFP [dec] schedule [chars] queue move in progress seq %u	A QFP BQS schedule queue move operation is not proceeding or is proceeding at a slow rate which can lead to packet drops. The most likely cause of a queue move operation getting stuck is having a rate based queue that has packets enqueued on it that are not being serviced very frequently or being starved due to higher priority queues causing an oversubscription of the physical output interface.	qfp-bqs-internal	"No action is required if QMVOEDONE message" " is also displayed following QMOVEPROC." " If QMOVEDONE message is not displayed or" " you continue to see QMOVEPROC messages" " displayed then collect the data from" " the following show commands:" " show platform" " show platform hardware qfp <active standby> bqs status" " show platform hardware qfp <active standby> bqs qmove info" " show platform hardware qfp <active standby> bqs qmove child" " show platform hardware qfp <active standby> bqs qmove flush" "Report the problem to the Cisco TAC providing" " the data from the above show commands."
CPQBQS4SRIMEMLOW	4-Warning	QFP [dec] HW [chars]:[chars] schedule resources depleted - [dec][node]available	QFP BQS HW schedule resources have dropped below critical threshold.	qfp-bqs-internal	LOG_SID_REDUCE_ACTION
CPQBQS4ODASRIMEMLOW	4-Warning	QFP [dec].[dec] HW [chars]:[chars]:[chars] schedule resources depleted - [dec][node]available	QFP BQS HW schedule resources have dropped below critical threshold.	qfp-bqs-internal	LOG_SID_REDUCE_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CPPBQS-6-QLIMITOK	6-Information	QFP [dec].[dec] QoS Queue limit [node]was exceeded and is now within platform specifications at [node]	Max number of QoS queues supported on QFP was exceeded. It is now within platform specifications	-	-
CPPBQS-6-QMOVEQSENA	6-Information	QFP [dec] schedule [chars] queue move to [chars] QoS enabled	QFP BQS schedule that was disabled due to having been moved to an output interface on different subdevice has now moved back to the original subdevice and QoS is now enabled again.	-	-
CPPBQS-6-QMRIDUMP	6-Information	QFP Queue Manager Real-Time trace dump - [chars]	The QFP Queue Manager Real-Time trace data dumping to disk has either started or completed.	-	-
CPPBQS-6-QMRIRELAY	6-Information	QFP Queue Manager Real-Time event replay [chars] - [chars]	The QFP Queue Manager Real-Time event data replay from disk file status display	-	-
CPFCM3ERRCR_NOIFY	3-Error	QFP [dec] thread [dec] encountered an error -Traceback=[chars] [chars]	A QFP fault has occurred.	cpp-ucode	LOG_SID_NO_ACTION
CPPDRV-2-HALT	2-Critical	[chars][dec] Interrupt : [chars] Seq:[node]d Halt bit set.	A Serious CPP hardware error has occurred.	cpp-sw	LOG_SID_NO_ACTION
CPPDRV-3-ALLOC_NOIF	3-Error	CPP[dec]: Failed to Allocate: [chars]	A function failed to allocate data.	cpp-sw	LOG_SID_NO_ACTION
CPPDRV-3-CLEANUP_NOIF	3-Error	Failed to Cleanup: [chars]	A function failed to cleanup data.	cpp-sw	LOG_SID_NO_ACTION
CPPDRV-3-DESIROY_NOIF	3-Error	Failed to destroy connection :[chars]	A function failed to destroy a connection.	cpp-sw	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CPDRV3FATAL_ACQUIRE_LOCK	3-Error	CPP[dec]: 0x[hec] Failed to acquire memory lock [chars]	SW failed to acquire shared memory lock	cpp-sw	LOG_SID_NO_ACTION
CPDRV3FATAL_ALLOCATE	3-Error	CPP[dec]: 0x[hec] Failed to allocate [chars] - [chars]	Failed to allocate data	cpp-sw	LOG_SID_NO_ACTION
CPDRV3FATAL_ATTACH	3-Error	CPP[dec]: 0x[hec] FAILED: to attach [chars]	Device Failed to attach	cpp-sw	LOG_SID_NO_ACTION
CPDRV3FATAL_ACCESS	3-Error	CPP[dec].[dec]: An access error has been reported. Error count [node]	The system has reported an error while accessing a CPP subdevice	cpp-sw	LOG_SID_NO_ACTION
CPDRV3FATAL_CPU_FAILURE	3-Error	CPP[dec]: CPU lacks feature [chars]. Packet forwarding disabled.	The currently installed CPU lacks a certain feature that is required by the forwarding engine. The QFP is operating with reduced functionality with packet forwarding disabled.	cpp-sw	LOG_SID_NO_ACTION
CPDRV3FATAL_CREATE	3-Error	0x[hec] Failed to create [chars] - [chars]	Failed to create device	cpp-sw	LOG_SID_NO_ACTION
CPDRV3FATAL_CREATE_ID	3-Error	CPP[dec]: 0x[hec] Failed to create [chars] - [chars]	Failed to create device	cpp-sw	LOG_SID_NO_ACTION
CPDRV3FATAL_GET_DETAILS	3-Error	CPP[dec]: 0x[hec] Failed to get [chars] details - [chars]	Failed to get device details	cpp-sw	LOG_SID_NO_ACTION
CPDRV3FATAL_INIT	3-Error	0x[hec] Failed to initialize [chars] - [chars]	Failed to init device	cpp-sw	LOG_SID_NO_ACTION
CPDRV3FATAL_INIT_ID	3-Error	CPP[dec]: 0x[hec] Failed to initialize [chars] - [chars]	Failed to init device	cpp-sw	LOG_SID_NO_ACTION
CPDRV3FATAL_INTERNAL	3-Error	CPP[dec]: 0x[hec] Internal Error [chars]	Internal coding error.	cpp-sw	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CHDR4</del> FAIL_INTERRUPT_CLEAR	3-Error	CPP[dec]: 0x[hec] Failed to clear [chars] interrupt	Failed to clear an interrupt node	cpp-sw	LOG_SID_NO_ACTION
<del>CHDR4</del> FAIL_INTERRUPT_HANDLER	3-Error	CPP[dec]: 0x[hec] Failed to register [chars] interrupt handler - [chars]	Failed to register interrupt handler	cpp-sw	LOG_SID_NO_ACTION
<del>CHDR4</del> FAIL_INTERRUPT_INIT	3-Error	CPP[dec]: 0x[hec] Failed to initialize [chars] interrupt - [chars]	Failed to initialize an interrupt	cpp-sw	LOG_SID_NO_ACTION
<del>CHDR4</del> FAIL_INTERRUPT_OPEN	3-Error	CPP[dec]: 0x[hec] Failed to access [chars] interrupt node - [chars]	Failed to open an interrupt	cpp-sw	LOG_SID_NO_ACTION
<del>CHDR4</del> FAIL_MEM_CLEAR	3-Error	CPP[dec]: 0x[hec] Failed to clear memory [chars]	SW failed to clear memory location	cpp-sw	LOG_SID_NO_ACTION
<del>CHDR4</del> FAIL_MEM_SIZE	3-Error	CPP[dec]: 0x[hec] Failed to acquire memory size [chars]	SW failed to acquire the size of a block of memory	cpp-sw	LOG_SID_NO_ACTION
<del>CHDR4</del> FAIL_MEM_WRITE	3-Error	CPP[dec]: 0x[hec] Failed to write to memory [chars]	SW failed to write to a memory location	cpp-sw	LOG_SID_NO_ACTION
<del>CHDR4</del> FAIL_MIN_CPU	3-Error	CPP[dec]: Insufficient number of CPUs detected = [dec] required = [dec]	The current system lacks a sufficient number of CPUs or cores	cpp-sw	LOG_SID_NO_ACTION
<del>CHDR4</del> FAIL_PLAT_DB	3-Error	CPP[dec]: 0x[hec] Platform failure accessing [chars]	Platform DB query failed	cpp-sw	LOG_SID_NO_ACTION
<del>CHDR4</del> FAIL_RELEASE_LOCK	3-Error	CPP[dec]: 0x[hec] Failed to release memory lock [chars]	SW failed to release shared memory lock	cpp-sw	LOG_SID_NO_ACTION
<del>CHDR4</del> FAIL_UNSUPPORTED	3-Error	CPP[dec]: 0x[hec] - unsupported CPP TYPE. CPP TYPE:[dec]	Unsupported CPP TYPE	cpp-sw	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CPPDRV3-CPU_FEATURE</del>	3-Error	CPP[dec]: Guest CPU lacks feature [chars].	The currently installed Guest CPU lacks a certain feature that is required by the forwarding engine but that feature is supported by the Host CPU. The QFP is operating with normal functionality using the host CPU feature but live migration to a host which lacks this feature will result in a crash.	cpp-sw	LOG_SID_NO_ACTION
CPPDRV-3-HOT	3-Error	[chars][dec] Interrupt : [chars] Seq:[node]d repeating interrupt has been disabled.	A repeating hardware interrupt has been disabled.	cpp-sw	LOG_SID_NO_ACTION
CPPDRV-3-INIT_NOTIF	3-Error	Failed to initialize: [chars]	A function failed to initialize.	cpp-sw	LOG_SID_NO_ACTION
CPPDRV-3-INIT_NOTIF_ID	3-Error	CPP[dec]: Failed to initialize: [chars]	A function failed to initialize.	cpp-sw	LOG_SID_NO_ACTION
CPPDRV-3-LOCKDOWN	3-Error	QFP[node][node]CPP Driver LOCKDOWN encountered due to previous fatal error [chars]: [chars].	A fatal error has caused the driver to LOCKDOWN.	cpp-sw	LOG_SID_NO_ACTION
<del>CPPDRV-3-LOCKDOWN_NOTIFY</del>	3-Error	QFP[node][node]CPP Driver LOCKDOWN being triggered due to fatal error.	A fatal error has caused the process to initiate LOCKDOWN.	cpp-sw	LOG_SID_NO_ACTION
<del>CPPDRV-3-SRT_PERR_FAILURE</del>	3-Error	[chars][dec] Failed to correct BQS SRT Parity error.	Failed to correct a BQS SRT Parity error.	cpp-sw	LOG_SID_NO_ACTION
CPPDRV-3-TCAM_PERR	3-Error	[chars][dec] TCAM Parity error TCAM device #[dec] at offset 0x[node]X.	A Parity error has occurred in a TCAM device.	cpp-sw	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CPPDRV3TCAM_ERR_FAILURE	3-Error	[chars][dec] Failed to correct TCAM Parity error. Parity error detection disabled.	Failed to correct a TCAM Parity error and further detection has been disabled.	cpp-sw	LOG_SID_NO_ACTION
CPPDRV4ADRSFC_LIMIT	4-Warning	Address space limit [node]KB reached mapping block [chars] size [node]dynamically over limit space: [node]KB	The process indicated tried to map more of the Forwarding Engine's address space than was allocated for it. A slower access method will be used instead. This will lower the performance of some operations which require accesses to the Forwarding Engine	cpp-sw	LOG_SID_SH_TECH_ACTION
CPPDRV4CORE_TABLE	4-Warning	CPP[dec] specific core dump table '[chars]' not found using minimal fallback table '[chars]' instead	The QFP configuration found on this board did not match any of the tables which define which data has to be collected if a fatal error is detected. Instead a minimal table is used which covers most of the QFP registers. The QFP is fully operational.	cpp-sw	LOG_SID_SH_TECH_ACTION
CPPDRV4CPU_FEATURE	4-Warning	CPP[dec]: CPU lacks feature [chars]. Performance may be sub-optimal.	The currently installed CPU lacks a certain feature that improve performance of the forwarding engine. The QFP is fully operational but may operate at a reduced capacity.	cpp-sw	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CHDRV4MPOCCURRED	4-Warning	Alignment fixup @ PC=[node]#hits=[dec] fault addr: [node]	A misalignment was handled by a fixup signal handler	cpp-sw	LOG_SID_NO_ACTION
CHDRV4MPOCCURRED	4-Warning	Alignment fixup #hits=[dec] Traceback [chars]	A misalignment was handled by a fixup signal handler	cpp-sw	LOG_SID_NO_ACTION
CHDRV4MPOCCURRED	4-Warning	CPP[dec]: CPU lacks feature [chars] required in a future release.	The currently installed CPU lacks a certain feature that will be required by the forwarding engine in a future release. Caution is advised before upgrading to a newer release to ensure the CPU has the minimum set of CPU features necessary to operate.	cpp-sw	LOG_SID_NO_ACTION
CHDRV4HW_REV_OLD	4-Warning	Found HW revision [chars] using [chars] based on [chars]. No customer deployment.	The specified board or chip showed an incorrect invalid or too old hardware revision. That hardware revision was possibly overridden	cpp-sw	LOG_SID_NO_ACTION
CPPDRV-6-ACCTRC16B	6-Information	Access CPP [dec] address 0x[node]lIX BlkOff[chars]0x[node]lIX [chars] [node] bytes	A CPP access was traced	cpp-sw	LOG_SID_NO_ACTION
CPPDRV-6-ACCTRC8B	6-Information	Access CPP [dec] address 0x[node]lIX BlkOff[chars]0x[node]lIX [chars] [node] bytes	A CPP access was traced	cpp-sw	LOG_SID_NO_ACTION
CPPDRV-6-INTR	6-Information	[chars][dec] Interrupt : [chars]	A CPP hardware interrupt has occurred.	cpp-sw	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CPPEXMEM3-NOMEM	3-Error	QFP: [dec] [chars] memory allocation of [node]bytes by [chars] failed	A request for QFP memory resource allocation has failed due to running out of memory. QFP memory is used by the datapath for packet forwarding.	-	"Display the memory allocation usage" " per feature to determine where most" " of the memory is being used. This can" " help identify where to adjust feature" " scaling. The following CLI will display" " the memory utilization: show platform" " hardware qfp act infrastructure exmem" " statistics user. If the system crashed" " prior to issuing this command you can" " retrieve the information from the binary" " trace log file for the process that " " generated this error message."
CPPEXMEM3-TOPUSER	3-Error	QFP: [dec] Top User: [chars] [chars]: [node]Type: [chars]	A request for QFP memory resource allocation has failed due to running out of memory. The top consumer of exmem is provided with this message to possibly identify the source for running out of memory. QFP memory is used by the datapath for packet forwarding.	-	LOG_SID_NO_ACTION
CPPEXMEM4-LOWMEM	4-Warning	CPP [dec] [chars] memory low - [dec] percent depleted	A CPP memory resource has dropped below a critical level.	-	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CPPEXMEM-5-MEM	5-Notice	CPP [dec] [chars] memory recovered - [dec] percent depleted	A CPP memory resource has recovered above the low threshold level.	-	LOG_SID_NO_ACTION
<del>CPFWZ4POLYATTCHIAL</del>	2-Critical	ZBFW failed to attach policy [node][chars] to zone-pair [node][chars] : [chars]	Error attaching policy to zone-pair. Configuration failed. Security policy not enforced for the zone-pair	iosxe-zbfw	LOG_SID_REDUCE_ACTION
<del>CPFWZ4POLYEDITIAL</del>	2-Critical	ZBFW failed to edit policy [node][chars] for zone-pair [node][chars] : [chars]	Error editing policy. Configuration failed. New security policy not enforced for the zone-pair	iosxe-zbfw	LOG_SID_REDUCE_ACTION
<del>CPFWZ4CHNKCREAIAL</del>	4-Warning	Failed to create chunk pool: [chars] : [chars]	Could not create memory chunk pool. Configuration Failed	iosxe-zbfw	LOG_SID_REDUCE_ACTION
<del>CPFWZ4DIRXONFNINDIAL</del>	4-Warning	Could not bind intf [node][chars] to zone id [node]error [dec]:[chars]	Could not process the deferred zone-interface bind request. Configuration Failed	-	LOG_SID_REDUCE_ACTION
<del>CPFWZ4DIRXONVFNINDIAL</del>	4-Warning	Could not bind vpn [dec] to zone id [node]error [dec]:[chars]	Could not process the deferred zone-vpn bind request. Configuration Failed	-	LOG_SID_REDUCE_ACTION
<del>CPFWZ4DIRXSBAICQIAL</del>	4-Warning	Error [chars] failed to allocate L4 per filter stats tables to data plane: zone pair id: [node][chars] policy id [node][chars] : [chars]	Could not alloc L4 per fltr stats table to data plane. Configuration Failed	iosxe-zbfw	LOG_SID_REDUCE_ACTION
<del>CPFWZ4DIRXAMNEMVICOIAL</del>	4-Warning	Failed to create 17 nbar team entry zone pair: [chars] class [chars] : [chars]	Could not allocate memory for 17 nbar cce team info. Configuration Failed	iosxe-zbfw	LOG_SID_REDUCE_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CPPFW-4-NO.CG	4-Warning	[chars] Could not locate class group [chars] zone_pair id [node][chars] cg id: %u	Could not locate class group policy information. Configuration Failed	iosxe-zbfg	LOG_SID_NO_ACTION
CPPFW4NO.CLASS.CG	4-Warning	[chars]: Could not locate class [chars] zone_pair id [node][chars] policy: [node][chars] class id: %u	Could not Locate class information. Configuration Failed	iosxe-zbfg	LOG_SID_NO_ACTION
CPFW4NO.FM.STAT.MAP.CG	4-Warning	[chars]: Could not locate fm stat map table: [chars]. zone_pair id: [node][chars] cg: [node][chars]	Could not Locate CPP FM_STAT mapping table. Configuration Failed	iosxe-zbfg	LOG_SID_NO_ACTION
CPFW4NO.MEM.POLICY.CG	4-Warning	[chars]: [chars]: Could not allocate [chars] [node]bytes x [node] entries for [node]bytes of memory zone pair: [node][chars] policy: [node][chars]	Could not allocate an array of memory of the given size and entries. Configuration Failed	iosxe-zbfg	"Configuration is too large for platform." " Attempt to reduce " " size of firewall policy stats etc. " " or disable other features"
CPFW4NWRITE.NBAR.TCAM.INFO	4-Warning	Failed to write 17 nbar tcamid [chars] to data plane: zone pair: [chars] class [chars] : [chars]	Could not write 17 nbar cce tcam info to data plane. Configuration Failed	iosxe-zbfg	LOG_SID_REDUCE_ACTION
CPFW4NWRITE.MEM.POLICY.CG	4-Warning	[chars]: [chars]: [chars]: zone_pair id: [node][chars] policy: [node][chars] class: [chars]	Could not write data to data plane. Configuration Failed	iosxe-zbfg	LOG_SID_NO_ACTION
CPFW4ZBFW.CONFIG.FAIL	4-Warning	zbfg : [chars]	Failure in zbfg	iosxe-zbfg	LOG_SID_NO_ACTION
CPFW4ZONE.CREATE.DH.POLICY.FAIL	4-Warning	Could not create defer zone entry for zone [chars] id [node] parameter map id [node]error [dec]:[chars]	Could not allocate memory for for deferred creation of indicated zone. Configuration Failed	iosxe-zbfg	"Configuration is too large for platform." " Attempt to reduce " " size of firewall policy stats etc. " " or disable other features"

<b>Family-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CPFW4ZONE_CREATE_FAIL	4-Warning	Could not create zone [chars] id [node]error [dec]:[chars]	Could not allocate memory for indicated zone. Configuration Failed	iosxe-zbfw	"Configuration is too large for platform." " Attempt to reduce" " size of firewall policy stats etc. " " or disable other features"
CPFW4ZONE_MODIFY_FAIL	4-Warning	Could not create zone [chars] id [node]parameter map id [node]error [dec]:[chars]	Modification of zone failed. Configuration in indeterminate state.	iosxe-zbfw	"Configuration is too large for platform." " Attempt to reduce" " size of firewall policy stats etc. " " or disable other features"
CPPHA-3-BULKSYNC	3-Error	bulk sync processing failed to complete	-	-	-
CPPHA-3-CDMDONE	3-Error	CPP [dec] microcode crashdump creation completed.	The CDM has completed generating microcode crashdump.	-	LOG_SIDSH_TECH_ACTION
CPPHA-3-CHUNKALLOC	3-Error	Chunk allocation failed [dec]	-	-	-
CPPHA-3-CHUNKCREATE	3-Error	Chunk Create failed [dec]	-	-	-
CPPHA-3-CHUNKFREE	3-Error	Chunk free failed [dec]	The CPP bulk synchronization processing failed on the standby.	-	LOG_SIDSH_TECH_ACTION
CPPHA-3-EXMEMALLOC	3-Error	exmem allocation failed	-	-	-
CPPHA-3-EXMEMBIND	3-Error	bind to exmem failed to complete	-	-	-
CPPHA-3-FAILURE	3-Error	CPP [dec] failure [chars] detected	A CPP failure has been detected.	cpp-ucode	LOG_SIDSH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CPPHA-3-FAULT	3-Error	CPP:[dec].[dec] desc:[chars] det:[chars] class:[chars] sev:[chars] id:[dec] cppstate:[chars] res:[chars] flags:0x[hec] cdmflags:0x[hec]	A CPP fault has occurred.	cpp-ucode	LOG_SID_NO_ACTION
CPPHA-3-FAULTCRASH	3-Error	CPP [dec].[dec] unresolved fault detected initiating crash dump.	A unresolved fault detected initiating crash dump.	-	LOG_SID_SH_TECH_ACTION
CPPHA-3-FAULTRATE	3-Error	CPP:[dec].[dec] desc:[chars] det:[chars] class:[chars] sev:[chars] id:[dec] cppstate:[chars] res:[chars] flags:0x[hec] cdmflags:0x[hec]	A CPP fault has occurred.	cpp-ucode	LOG_SID_NO_ACTION
CPPHA-3-FDBQUERY	3-Error	[chars] FDB query failed [dec] [chars]	-	-	-
CPPHA-3-INITFAIL	3-Error	CPP [dec] initialization failed - [chars] [hex]	A CPP initialization failed.	cpp-sw	LOG_SID_SH_TECH_ACTION
CPPHA-3-NOCDM	3-Error	CPP [dec] CDM not running.	The CDM process is not running.	-	LOG_SID_SH_TECH_ACTION
CPPHA-6-SYSINIT	6-Information	CPP HA system [chars].	CPP system initialization state.	-	LOG_SID_NO_ACTION
CPPHA-7-READY	7-Debug	CPP [dec] loading and initialization complete	A CPP has been successfully loaded and initialized\n\ ready to be configured for forwarding packets.	-	LOG_SID_NO_ACTION
CPPHA-7-START	7-Debug	CPP [dec] [chars]	A CPP is being started.	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CPPHA-7-SYSREADY	7-Debug	CPP client process [chars] [dec] of [dec] ready.	A CPP Client process has started and registered with\n\n CPP HA Server.	-	LOG_SID_NO_ACTION
CPOSIB3CLEAN_NOTIFY	3-Error	Failed to cleanup: [chars]	A function failed to cleanup data.	cpp-sw	LOG_SID_NO_ACTION
CPOSIB3ERROR_NOTIFY	3-Error	[chars] encountered an error	Print error message to console	cpp-sw	LOG_SID_NO_ACTION
CPOSIB3GET_NOTIFY	3-Error	Failed to get data: [chars]	A function failed to get data.	cpp-sw	LOG_SID_NO_ACTION
CPOSIB3INI_NOTIFY	3-Error	Failed to initialize: [chars]	A function failed to initialize.	cpp-sw	LOG_SID_NO_ACTION
CPOSIB3REGSIR_NOTIFY	3-Error	Failed to register: [chars]	A function failed to register.	cpp-sw	LOG_SID_NO_ACTION
CPUI3ERROR_NOTIFY	3-Error	[chars]	An UI fault has occurred.	-	LOG_STD_ACTION
CPU_NIQUEUE_STUCK	0-Emergency	The interface between the CPU and the switch has\n become stuck. The switch must now reset to clear this condition\n. Retrieval queue [dec].\n	The CPU can no longer communicate with the network.	-	"Reload the system."
CPU_REDUN2INITSYS	2-Critical	[chars]	A software error occurred during initialization of the CPU redundancy subsystem	-	"Check for sufficient processor memory." LOG_STD_ACTION
CPU_REDUN3MCHTSABLD	3-Error	[chars] [dec]	The 4msec timer interrupt was shut off for an extended period while the hardware watchdog was enabled.	-	LOG_STD_ACTION
CPU_REDUN3IDPROMACES	3-Error	Alarm: [chars] [chars] [chars] [chars]	The alarm appears when the processor can not access its backplane IDPROM.	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CPUREDUN3CAPAB_SIZE	3-Error	Mismatch in [chars]. Active=[dec] Standby=[dec].	Standby CPU is reporting lower Capabilities than the Active CPU. See message text for type of limitation.	-	"Check for sufficient Standby CPU capabilities." LOG_STD_ACTION
CPUREDUN3CAPAB_VERS	3-Error	Mismatch in [chars]. Active=[dec].[dec] Standby=[dec].[dec].	Standby CPU is reporting lower versions than the Active CPU. See message text for type of limitation.	-	"Check Standby CPU version numbers." LOG_STD_ACTION
CPUREDUN3CAPAB_ILIES	3-Error	Alarm: [chars] [chars] [chars] [chars] [chars]	The alarm appears when the capabilities reported by the standby processor are less than the active processor. The processors are conditionally redundant which means that a switchover could result in a partial loss of system control.	-	LOG_STD_ACTION
CPUREDUN3DRVR_MSSNG	3-Error	Missing [chars] driver support on Standby. Active=[dec].[dec]	Standby CPU is missing support for one of the drivers available on the Active CPU. The corresponding linecard will go down in the event of a switchover.	-	"May require a software upgrade on the Standby CPU. " LOG_STD_ACTION
CPUREDUN3DRVR_VRSNS	3-Error	Mismatch in [chars] driver versions. Active=[dec].[dec] Standby=[dec].[dec].	Standby CPU is reporting lower versions than the Active CPU. See message text for type of limitation. May result in a loss of connections.	-	"May require a software upgrade on the Standby CPU. " LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CPUREDN3HFA_SVCS	3-Error	[chars] [chars]	An error occurred that affects CPU Redundancy services. The details about what was attempted and what went wrong will be printed.	-	LOG_STD_ACTION
CPUREDN3GISAUSRG	3-Error	Parity Error on PCI Bus from PCI Device	A Parity error on PCI bus has occurred while validating the GT64120 PCI device hanging off the PCI bus	ons155xx-cpu	"Check whether it is a GT64120 device.\n" LOG_STD_ACTION
CPUREDN3NSEN_SAES	3-Error	Alarm: [chars] [chars] [chars] [chars]	The alarm appears when the processor redundancy state is either not consistent with the peer state or the software state is not consistent with the hardware state.	-	LOG_STD_ACTION
CPUREDN3NTE_ERROR	3-Error	[chars] [dec] [dec]	A subsystem initialization error occurred.	-	LOG_SID_NO_ACTION
CPUREDN3NIRPT_HOG	3-Error	[chars] [dec] sec [chars] = [hec]	The CPU redundancy process didn't run for a long time because an interrupt routine ran too long.	-	LOG_STD_ACTION
CPUREDN3NADCP_SAES	3-Error	Detected invalid redundancy states local = [chars] peer = [chars]	Detected an invalid combination of redundant states	-	LOG_SID_NO_ACTION
CPUREDN3NADIMG	3-Error	Incorrectly formatted message 0x[hec] 0x[hec] received by [chars]	Inconsistent message data was received from the peer CPU possibly due to an incompatible image version.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CPU_REDUN3LOCK_ERR	3-Error	Can't get Global Lock	Peer CPU won't relinquish the arbitration lock.	-	"Check that both the local and peer CPUs " "are fully seated in the backplane. Check " "the health of the Peer CPU." LOG_STD_ACTION
CPU_REDUN3LINCARD_ACCESS	3-Error	Alarm: [chars] [chars] [chars] [chars]	The alarm appears when the processor has failed the linecard access test for multiple linecards.	-	LOG_STD_ACTION
CPU_REDUN3PCISATUS_REG	3-Error	Status error in PCI device [dec]	A PCI Status registry error in PCI device has been detected when validating the PCI device hanging off the PCI bus	ons155xx-cpu	"Check whether it is a valid PCI device Manhattan." "\n" LOG_STD_ACTION
CPU_REDUN3PCI_TEST	3-Error	Alarm: [chars] [chars] [chars] [chars]	The alarm appears when the processor has failed the online diagnostic internal PCI bus test.	-	LOG_STD_ACTION
CPU_REDUN3PCIVENDOR_MISMATCH	3-Error	Error/Mismatch in reading Vendor ID for PCI device [dec]	The PCI Vendor ID error/mismatch has been detected when validating the PCI device hanging off the PCI bus	ons155xx-cpu	"Check the vendor ID of the PCI device attached it should of a macro value like: CLPD6729_VENDOR_ID' "\n" LOG_STD_ACTION
CPU_REDUN3PCMCIA_TEST	3-Error	Alarm: [chars] [chars] [chars] [chars]	The alarm appears when the processor has failed the online diagnostic internal PCMCIA slot test.	-	LOG_STD_ACTION
CPU_REDUN3PEER_COMM	3-Error	Alarm: [chars] [chars] [chars] [chars]	The alarm appears when the peer processor is present but not responding or sending keepalives.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CPU_REDUN3PERR_MSSNG	3-Error	Alarm: [chars] [chars] [chars] [chars] [chars]	The alarm appears when the peer processor is either missing or can not be detected. The active processor currently is not being protected.	-	LOG_STD_ACTION
CPU_REDUN3PERR_SEV_HYBR	3-Error	Invalid peer CPU severity [dec] current peer register=0x[hec]	Peer CPU is reporting an invalid severity value.	-	"Check that both the local and peer CPUs " "are fully seated in the backplane. Check " "the health of the Peer CPU." LOG_STD_ACTION
CPU_REDUN3PERR_SCRGS	3-Error	Alarm: [chars] [chars] [chars] [chars] [chars]	The alarm appears when the active processor is detecting bad parity on the active/standby bits read from the standby processor.	-	LOG_STD_ACTION
CPU_REDUN3PERR_STATE_HYBR	3-Error	Invalid peer CPU state [chars] current peer register=0x[hec]	Peer CPU is reporting an invalid redundancy state.	-	"Check that both the local and peer CPUs " "are fully seated in the backplane. Check " "the health of the Peer CPU." LOG_STD_ACTION
CPU_REDUN3RCSF_FAIL	3-Error	Attempt to sync running config to standby failed	Unable to send Running Config file to Standby CPU	-	LOG_STD_NO_ACTION
CPU_REDUN3READBACK_HYBR	3-Error	Can't change my state. desired state [chars] read-back [chars]	Local CPU can't set its redundancy state to the desired calculated value	-	"Check health of local CPU." LOG_STD_ACTION
CPU_REDUN3IDROM_MISMATCH	3-Error	Alarm: [chars] [chars] [chars] [chars] [chars]	The alarm appears when the slot ID read from the backplane IDPROM does not match the slot ID read from the SRC.	-	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CPU_REDUN3SRC_TEST	3-Error	Alarm: [chars] [chars] [chars] [chars] [chars]	The alarm appears when the processor has failed the online diagnostic internal SRC test.	-	LOG_STD_ACTION
CURDUN3STARTUP_FAIL	3-Error	Attempt to sync [chars] config to standby failed	Unable to send Startup or Private Config file to Standby CPU	-	LOG_SID_NO_ACTION
CURDUN3SUBSYS_COMPAT	3-Error	[chars] [chars] software subsystem. Active=[dec] Standby=[dec].	Standby CPU software subsystem is older or missing. See message text for software subsystem type. May result in feature losses in the event of a switchover.	-	"May require a software upgrade on the Standby CPU. " LOG_STD_ACTION
CURDUN3STATE_MISMATCH	3-Error	Software state [chars] doesn't reflect local hardware [chars]	Software state is not following the underlying hardware redundancy state	-	LOG_STD_ACTION
CURDUN3UART_FAILURE	3-Error	Alarm: [chars] [chars] [chars] [chars] [chars]	This alarm appears when the processor can't transmit characters on the console UART. It indicates a probable equipment failure	-	"If the symptom persists following a reload " "remove and replace the processor module."
CURDUN3UNKNOWN_COMMAND	3-Error	Alarm: [chars] [chars] [chars] [chars] [chars]	If the alarm appears when this is asserted for a standby processor with a different software image it indicates an alarm condition on the peer that the active processor can not decode. If this is asserted for the active processor it indicates a software error condition.	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CP</del> <u>RED</u> <del>UN</del> <u>KNOW</u> <del>MSG</del>	3-Error	Unknown message type 0x[hec] received by [chars]	An unknown message type was received from the peer CPU possibly due to an incompatible image version.	-	LOG_STD_ACTION
<del>CP</del> <u>RED</u> <del>UN</del> <u>KNOW</u> <del>AL</del>	3-Error	Alarm: [chars] [chars] [chars] [chars] [chars]	If the alarm appears when this is asserted for a standby processor with a different software image it indicates an alarm condition on the peer that the active processor can not decode. If this is asserted for the active processor it indicates a software error condition.	-	LOG_STD_ACTION
<del>CP</del> <u>RED</u> <del>WARN</del> <u>ING</u> <del>ACT</del> <u>IVE</u> <del>CPU</del>	4-Warning	Active CPU FPGA has been \nreprogrammed. Please remove and re-insert the CPU in slot [dec] or\npower-cycle the box for the new FPGA to take effect.	Active CPU FPGA has been reprogrammed. This CPU is now running with old FPGA and it needs to be hot-swapped or the system needs to be power-cycled for the new FPGA to take effect.	-	LOG_SID_NO_ACTION
<del>CP</del> <u>RED</u> <del>WARN</del> <u>ING</u> <del>ACT</del> <u>IVE</u> <del>CPU</del>	4-Warning	Non-volatile configuration memory is not present	The startup-config is missing. This may be due to either a manual user erase command or an interrupted write to the startup-config.	-	"Do a copy running-config startup-config to save" "current system configuration. " LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CPUREDUN4UNPROTECTED</del>	4-Warning	[chars] [dec] [chars]	System is running for an extended period in an unprotected mode even though a peer CPU is present	-	"Check the health of the Peer CPU. Configure as "maintenance mode to intentionally suppress error "messages." LOG_STD_ACTION
<del>CPUREDUN5BSCAPBLTY</del>	5-Notice	Peer CPU hardware and software is fully compatible.	Standby CPU H/W drivers and software subsystems have matching versions and capabilities.	-	LOG_SID_NO_ACTION
<del>CPUREDUN5EASCSRSP</del>	5-Notice	Sending [chars] = [dec]	Normal response for CPU EHSA Redundancy services. The details about what was sent will be printed.	-	LOG_SID_NO_ACTION
<del>CPUREDUN5FORCECLOSE</del>	5-Notice	Forcibly closing fd: [dec] name:[chars]	A file activity timeout occurred on the slave.	-	LOG_SID_NO_ACTION
<del>CPUREDUN5RELOADSWTCH</del>	5-Notice	[chars] [dec]	Reloading due to a negotiated switchover.	-	LOG_SID_NO_ACTION
<del>CPUREDUN5HREXIOS</del>	5-Notice	Peer CPU has exited IOS	Peer CPU has exited IOS.	-	LOG_SID_NO_ACTION
<del>CPUREDUN5HRRMOVED</del>	5-Notice	Peer CPU has been removed from the chassis	Peer CPU has been removed from the chassis.	-	LOG_SID_NO_ACTION
<del>CPUREDUN5RCSF_SYNCD</del>	5-Notice	Running config successfully synced to standby	Running Config file was sent to the Standby CPU	-	LOG_SID_NO_ACTION
<del>CPUREDUN5RLODCOMDOWN</del>	5-Notice	[chars]	Reloading standby since Active CPU shows loss of comm.	-	LOG_SID_NO_ACTION
<del>CPUREDUN5RSTUCONF_SYNCED</del>	5-Notice	Startup config successfully synced to standby	Startup Config file was sent to the Standby CPU	-	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CP</del> <u>REDNS</u> <del>EM</del> <u>MT</u> <del>CHOD</del>	5-Notice	[chars]	Reloading due to a hardware software state mismatch.	-	LOG_SID_NO_ACTION
<del>CP</del> <u>REDUN</u> <del>SS</del> <u>IA</u> <del>US</del> <u>CHG</u>	5-Notice	[chars] sev [dec] peer is [chars] sev [dec]	A CPU hardware redundancy status change occurred.	-	LOG_SID_NO_ACTION
<del>CP</del> <u>REDUN</u> <del>SS</del> <u>WIC</u> <del>H</del> <u>MR</u>	5-Notice	Switchover occurred. Reason: [chars]	A CPU switchover took place. The reported reason is listed in the error message text.	-	LOG_SID_NO_ACTION
<del>CP</del> <u>REDUN</u> <del>SS</del> <u>UR</u> <del>ED<u>MG</u></del>	5-Notice	Msgtype [chars] sent by [chars] unsupported by peer.	Peer responded that it didn't recognize a message sent by this CPU possibly due to a different image version.	-	"May require a software upgrade on the Standby CPU. " LOG_STD_ACTION
<del>CP</del> <u>REDUN</u> <del>SS</del> <u>RO</u> <del>ED<u>S</u><del>A</del><u>C</u><del>I</del><u>E</u></del>	6-Information	After returning to ROM by [chars]	Informational message notifying about a system startup with no switchover.	-	LOG_SID_NO_ACTION
<del>CP</del> <u>REDUN</u> <del>SS</del> <u>E</u> <del>S<u>A</u></del> <del>S<u>E</u><del>M<u>E</u><del>N<u>T</u></del></del></del>	6-Information	[chars] [chars]	A significant EHSA Redundancy services event occurred. The details will be printed.	-	LOG_SID_NO_ACTION
<del>CP</del> <u>REDUN</u> <del>SS</del> <u>R</u> <del>UN<u>N</u><u>G</u><del>C<u>O</u><u>N</u><u>F</u><u>I</u><u>G</u></del></del>	6-Information	Running config on this CPU has possibly changed	Informational message to notify of possible changes to the running-config file	-	LOG_SID_NO_ACTION
<del>CP</del> <u>REDUN</u> <del>SS</del> <u>S</u> <u>A</u> <u>R</u> <u>T</u> <u>C</u> <u>O</u> <u>N</u> <u>F</u> <u>I</u> <u>G</u>	6-Information	Startup config on this CPU has possibly changed	Informational message to notify of possible changes to the startup-config file	-	LOG_SID_NO_ACTION
<del>CR</del> <u>K</u> <del>C<u>R</u><u>K</u><del>S<u>R</u><u>I</u><u>A</u><u>L</u><u>E</u><u>D</u></del></del>	3-Error	Assert failed at line [dec] from func [chars] in file [chars]	Detect assert failure in global level	cmts-platform	"Copy the error and send it to TAC."" TAC team can contact cable team to check why this error occurs"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRICNTRKASRTAID</del>	3-Error	Assert failed at line [dec] from func [chars] in file [chars]	Detect assert failure in global level	cmts-platform	"Copy the error and send it to TAC." "TAC team can contact cable team to check why this error occurs"
<del>CRICNTRKASRTAID</del>	3-Error	Assert failed at line [dec] from func [chars] in file [chars] for client [dec]	Detect assert failure in client level	cmts-platform	"Copy the error and send it to TAC." "TAC team can contact cable team to check why this error occurs"
<del>CRICNTRKASRTAID</del>	3-Error	Assert failed at line [dec] from func [chars] in file [chars] for client [dec]	Detect assert failure in client level	cmts-platform	"Copy the error and send it to TAC." "TAC team can contact cable team to check why this error occurs"
CRICNTRKASRTAID	3-Error	IPC send failure: client=[dec] entity=[dec] ses=[dec]/[dec] msg=[dec] err=[chars]	IPC send failure.	cmts-platform	LOG_STD_ACTION
CRICNTRKASRTAID	3-Error	IPC send failure: client=[dec] entity=[dec] ses=[dec]/[dec] msg=[dec] err=[chars]	IPC send failure.	cmts-platform	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CRKCNBMTUUNAVAILABLE	3-Error	cr10k client ses is down err:[dec]	Application code is trying to get negotiated mtu before issu negotiation is finished. err: 1 means issu nego has not finished. err:2 means issu nego has not started.The traceback decode usually can pinpoint which routine is trying toget mtu too early. In most cases it is a msg send routine that triesto get the msg mtu in order to allocate a right size msg buffer. If the msg is not critical or will be resent upon send failure then the fix is to call <u>cr10k_dt_get ses up fr apps</u> before get mtu	cmts-platform	"Copy the error and send it to TAC."TAC team can contact cable team to check why this error occurs"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CR10K_B2B_LINKDOWN</del> CR10K_B2B_LINKDOWN	3-Error	cr10k client ses is down err:[dec]	Application code is trying to get negotiated mtu before issu negotiation is finished. err:1 means issu nego has not finished. err:2 means issu nego has not started.The traceback decode usually can pinpoint which routine is trying to get mtu too early. In most cases it is a msg send routine that tries to get the msg mtu in order to allocate a right size msg buffer. If the msg is not critical or will be resent upon send failure then the fix is to call <del>cr10k_cli_get ses up for apps</del> before get mtu	cmts-platform	"Copy the error and send it to TAC." "TAC team can contact cable team to check why this error occurs"
CR10K_CLNF3-TIMEOUT	3-Error	Timeout waiting for [chars] slot [dec]/[dec]	Timeout while waiting on the specified event.	cmts-platform	"Copy the error and send it to TAC." "TAC team can contact cable team to check why this error occurs"
CR10K_CLNF3-TIMEOUT	3-Error	Timeout waiting for [chars] slot [dec]/[dec]	Timeout while waiting on the specified event.	cmts-platform	"Copy the error and send it to TAC." "TAC team can contact cable team to check why this error occurs"
CR10KBH-1-INITFAIL	1-Alert	[chars] initialization failure	Backhaul Ethernet hardware initialization failed	ubr10k-sw	LOG_STD_ACTION
<del>CR10KBH-1-INITFAIL</del> CR10KBH-1-INITFAIL	3-Error	[chars] B2B port [dec] changed state to down	Link state changed to down for B2B interface	ubr10k-sw	"Check the sfp+ and wire status for B2B interface"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRICKB3B_SFP_MSSNG</del>	3-Error	[chars] B2B port [dec] SFP+ missing	TenGigabit Ethernet SFP+ was removed from the B2B interface	ubr10k-sw	"Insert a TenGigabit ethernet SFP+ into the B2B interface"
<del>CRICKB3B_ADD_VANSANE</del>	3-Error	interface type [chars] slot [dec] subunit [dec] vc [dec] : [chars]	Data required to support the interface is not available.	ubr10k-sw	LOG_SIDSH_TECH_ACTION
<del>CRICKB3B3_MAXADDR</del>	3-Error	[chars] total addresses greater than [chars]	The number of addresses in the address filter is too large	ubr10k-sw	LOG_STD_ACTION
<del>CRICKB3B_VLAN_EXCEED</del>	3-Error	[chars] vlanid [dec] Radian VLAN TCAM table full	Radian has a maximum of 4K vlan team entries	ubr10k-sw	LOG_SIDSH_TECH_ACTION
<del>CRICKB3B_SFP_BAD_HW</del>	3-Error	Interface [chars] TenGigabit Ethernet module SFP+ has bad HW	TenGigabit Ethernet SFP+ could not be read CRC error or tx fault	ubr10k-sw	"Insert a new TenGigabit Ethernet SFP+ into the Backhaul interface"
<del>CRICKB3B_SFP_MSSNG</del>	3-Error	Interface [chars] TenGigabit ethernet module SFP+ missing	TenGigabit Ethernet SFP+ was removed from the Backhaul interface	ubr10k-sw	"Insert a TenGigabit ethernet SFP+ into the Backhaul interface"
<del>CRICKB3B_SFP_NON_TENGE</del>	3-Error	Interface [chars] Inserted module not TenGigabit ethernet module SFP+	Non TenGigabit Ethernet SFP+ was inserted into the Backhaul interface	ubr10k-sw	"Insert a TenGigabit ethernet SFP+ into the Backhaul interface"
<del>CRICKB3B_SFP_SECURITY_FAIL</del>	3-Error	Interface [chars] TenGigabit Ethernet module SFP+ is not CISCO approved	TenGigabit Ethernet SFP+ has failed cisco-EEPROM security check	ubr10k-sw	"Insert a approved vendor SFP+ into the Backhaul interface"
<del>CRICKB3B_SFP_SPURIOUS</del>	3-Error	Interface [chars] TenGigabit Ethernet module SFP+ is a duplicate spurious	TenGigabit Ethernet SFP+ has a vendor & serial number duplicate of another	ubr10k-sw	"Insert a approved vendor SFP+ into the Backhaul interface"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CR10KBH3-WRNG_ERR	3-Error	Wrong wiring detected at [chars] interconnect portportnum: [dec] please	This error message will be printed out when local interconnect port link status mismatches with remote interconnect port link status. We should use cable fiber to connect the corresponding interconnect ports between active and standby. When the error msg is printed out please check: 1 if	ubr10k-sw	LOG_SID_SH_TECH_ACTION
CR10KBH6B2B_LINKUP	6-Information	[chars] B2B port [dec] changed state to up	Link state changed to up for B2B interface	ubr10k-sw	LOG_SID_NO_ACTION
CR10KBH6B2B_SFP_OK	6-Information	[chars] B2B port [dec] SFP+ inserted	TenGigabit Ethernet SFP+ was inserted into the B2B interface	ubr10k-sw	LOG_SID_NO_ACTION
CR10KBH6B2B_MAC_UTIL	6-Information	MAC accounting entries full for Radian in slot [chars]	Radian has a maximum of 256 ingress and 256 egress MAC accounting entries	ubr10k-sw	LOG_SID_SH_TECH_ACTION
CR10KBH6-SFPP_OK	6-Information	Interface [chars] 10GBASE-[chars] TenGigabit ethernet module SFP+ inserted	TenGigabit Ethernet SFP+ was inserted into the Backhaul interface	ubr10k-sw	LOG_SID_NO_ACTION
CRASH_DUMP3-FILE_OP	3-Error	FILE operation [chars] failed CRASH DUMP May not be successfull	The File operation for dumping DSP crash details failed The error message could be a software issue or due to not enough disk space.	-	LOG_SID_NO_ACTION
CRASH_DUMP6-ABORT	6-Information	CRASH DUMP aborted for device [dec]	Crash dump aborted. Crash Dump may not be successfull	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CRASH_DUMP6-TIMEOUT	6-Information	CRASH DUMP may not be successful for the device [dec]	Crash dump process timed out waiting for diagnostic messages	-	LOG_SID_NO_ACTION
CRB_RUNTIME_EXCEPTION	3-Error	CRB Runtime Exception: [chars]	CRB Runtime Exception	-	LOG_STD_ACTION
CRIMON_DATABASE_MEMORY_LEAK	3-Error	Database memory leak detected in [chars] database [chars]/[chars]/[chars] size: [node]u byte callsite: [node]61IX	A memory leak has been detected in the database memory. The leaked object is identified by name	crimson	LOG_STD_ACTION
CRIMON3-INITFAIL	3-Error	Initialization of the IOS operational database facility failed [chars].	-	-	-
CRIMON_INIT_CR_FLUSH	3-Error	Initialization of the IOS operational database flush facility failed.	An unexpected condition has occurred which resulted in the IOS operational database flush facility failing to start. External agents will not be able to access the contents of the IOS operational database.	crimson	LOG_STD_ACTION
CRIMON_INIT_CR_REDO	3-Error	Initialization of the IOS operational database redo facility failed.	An unexpected condition has occurred which resulted in the IOS operational database redo facility failing to start. This is a serious problem and means that the IOS operation database facility will not be functional.	crimson	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRIMCON3BACKUP_FAIL</del>	3-Error	Unable to start the garbage collection process for the IOS config database	The IOS configuration database garbage collection has failed to start. Without a garbage collection process stale objects will not be cleaned up.	crimson	LOG_STD_ACTION
<del>CRIMCON3DBADNA</del>	3-Error	Data validation of the IOS configuration database failed [chars].	-	-	-
CRIMCON3NESIED_LOCK	3-Error	Database already locked by [chars].	An unexpected condition has occurred wherein the already locked IOS operational database was requested to be locked again. This problem means that external entities may not receive updates when operational data changes.	crimson	LOG_STD_ACTION
<del>CRIMCON3BACKUP_FAIL</del>	3-Error	Unable to start the garbage collection process for the NIOS config database	The NIOS configuration database garbage collection has failed to start. Without a garbage collection process stale objects will not be cleaned up.	crimson	LOG_STD_ACTION
CRIMCON3UPDATE_FAIL	3-Error	Processing of a IOS operational database update failed [chars].	-	-	-
CRIMCON3RENCE_SUBBD	0-Emergency	stubbed [chars] is referenced	-	-	""

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>QFPDIPROXIPNAD</del>	2-Critical	QFP Crypto device Proxy IPC interface initialization failure result: [dec].	Cisco internal software error. QFP Crypto device Proxy initialization detected that the IPC interface initialization failed. QFP Crypto device proxy will not be functional while this condition exists.	qfp-ipseckeyword:none	LOG_STD_ACTION
<del>QFPDIPROXIPNAD</del>	2-Critical	QFP Crypto device Proxy SA Create failed Error code: [dec].	Cisco internal software error. QFP Crypto device Proxy message processing failed to create an IPSec SA. QFP Crypto device Proxy will not be functional while this condition exists.	qfp-ipseckeyword:none	LOG_STD_ACTION
<del>QFPDIPROXIPNAD</del>	2-Critical	QFP Crypto device Proxy registered invalid message handlers source: [chars].	Cisco internal software error. QFP Crypto device Proxy registered with invalid message handler. QFP Crypto device Proxy will not be functional while this condition exists.	qfp-ipseckeyword:none	LOG_STD_ACTION
<del>QFPDIPROXIPNAD</del>	3-Error	QFP Crypto device Proxy received bad length message type [dec]	Cisco internal software error. QFP Crypto device Proxy received a corrupted message from control plane. This message will be ignored.	qfp-ipseckeyword:none	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>QFPDMPXPROXYMSG</del>	3-Error	QFP Crypto device Proxy received invalid message type [dec]	Cisco internal software error. QFP Crypto device Proxy received an invalid message from control plane. This message will be ignored.	qfp-ipseckeyword:none	LOG_STD_ACTION
<del>QFPDMPXPROXALCDE</del>	3-Error	QFP Crypto device Proxy [chars] message lost due to message buffer allocation failure.	Cisco internal software error. QFP Crypto device Proxy message processing detected a message buffer allocation failure. The message is lost as the result of this condition.	qfp-ipseckeyword:none	LOG_STD_ACTION
<del>QFPDMPXPROXSEHDE</del>	3-Error	QFP Crypto device Proxy [chars] message lost due to message sent failure result: [dec].	Cisco internal software error. QFP Crypto device Proxy message processing detected a message sent failure. The message is lost as the result of this condition.	qfp-ipseckeyword:none	LOG_STD_ACTION
CRPTOENCRALDIAL	0-Emergency	Encryption audit check found the wrong level of encryption in this image	The audit check verifying encryption entitlement within the IOS image either found encryption in a non-encryption image or the wrong strength within an IOS image containing encryption. Use of the encryption may violate U.S. Export Laws and Regulations.	-	"Contact Cisco to obtain a replacement IOS image."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CRP</del> <del>IO</del> <del>ENG</del> <del>AL</del> <del>DI</del> <del>FA</del>	0-Emergency	Encryption audit check found the wrong level of encryption in this image	The audit check verifying encryption entitlement within the IOS image either found encryption in a non-encryption image or the wrong strength within an IOS image containing encryption. Use of the encryption may violate U.S. Export Laws and Regulations.	-	"Contact Cisco to obtain a replacement IOS image."
<del>CRP</del> <del>EN</del> <del>SEC</del> <del>COM</del> <del>PL</del> <del>EN</del> <del>CE</del>	3-Error	Cisco PSB security compliance violation is detected. Use of [chars] by [chars] is denied	A security compliance violation has been detected. An attempt to use cryptography [chars] that is restricted	-	"Use Cisco PSB approved cryptographic methods" "or remove the compliance profile that is active at your own risk"
<del>CRP</del> <del>EN</del> <del>SEC</del> <del>COM</del> <del>PL</del> <del>EN</del> <del>CE</del>	3-Error	Cisco PSB security compliance violation is detected. Use of [chars] by [chars] is denied	A security compliance violation has been detected. An attempt to use cryptography [chars] that is restricted	-	"Use Cisco PSB approved cryptographic methods" "or remove the compliance profile that is active at your own risk"
<del>CRP</del> <del>EN</del> <del>SEC</del> <del>COM</del> <del>PL</del> <del>EN</del> <del>CE</del> <del>RS</del>	3-Error	Cisco PSB security compliance violation is detected. Use of weak [dec] bit key is denied	A security compliance violation has been detected. An attempt to use RSA cryptography with weak keys that is restricted by Cisco Internal Requirements and defined by the Cisco Product Security Baseline PSB has been denied.	-	"Use Cisco PSB approved cryptographic methods" "or remove the compliance profile that is active at your own risk"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRP</del> <del>EN</del> <del>CS</del> <del>IC</del> <del>IN</del> <del>EA</del> <del>SA</del>	3-Error	Cisco PSB security compliance violation is detected. Use of weak [dec] bit key is denied	A security compliance violation has been detected. An attempt to use RSA cryptography with weak keys that is restricted by Cisco Internal Requirements and defined by the Cisco Product Security Baseline PSB has been denied.	-	"Use Cisco PSB approved cryptographic methods" "or remove the compliance profile that is active at your own risk"
<del>CRP</del> <del>EN</del> <del>CS</del> <del>IC</del> <del>IN</del> <del>EA</del> <del>SA</del>	3-Error	FIPS security compliance violation is detected. Use of [chars] by [chars] is denied	A FIPS security compliance violation has been detected. The cryptography used is considered weak and violates the requirement set by FIPS	-	"Use FIPS approved cryptographic methods" "or disable FIPS mode and reload device"
<del>CRP</del> <del>EN</del> <del>CS</del> <del>IC</del> <del>IN</del> <del>EA</del> <del>SA</del>	3-Error	FIPS security compliance violation is detected. Use of [chars] by [chars] is denied	A FIPS security compliance violation has been detected. The cryptography used is considered weak and violates the requirement set by FIPS	-	"Use FIPS approved cryptographic methods" "or disable FIPS mode and reload device"
<del>CRP</del> <del>IO</del> <del>EN</del> <del>CR</del> <del>EA</del> <del>DI</del> <del>WARN</del>	4-Warning	Encryption audit check could not be performed	The audit check verifying encryption entitlement within the IOS image could not be performed due to incomplete system configuration.	-	"Manually verify that this IOS image is entitled to contain " "encryption."
<del>CRP</del> <del>IO</del> <del>EN</del> <del>CR</del> <del>EA</del> <del>DI</del> <del>WARN</del>	4-Warning	Encryption audit check could not be performed	The audit check verifying encryption entitlement within the IOS image could not be performed due to incomplete system configuration.	-	"Manually verify that this IOS image is entitled to contain " "encryption."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>(R)F(0)S(0)I(0)M(0)E(0)D(0)</del>	4-Warning	Cisco PSB security compliance has been disabled by [chars]	Cisco Internal Requirements and defined by the Cisco Product Security Baseline PSB has been disabled.	-	"Proceed with caution since weak cryptography will be allowed"
<del>(R)F(0)S(0)I(0)M(0)E(0)D(0)</del>	4-Warning	Cisco PSB security compliance has been disabled by [chars]	Cisco Internal Requirements and defined by the Cisco Product Security Baseline PSB has been disabled.	-	"Proceed with caution since weak cryptography will be allowed"
<del>(R)F(0)S(0)I(0)M(0)E(0)W(0)K(0)S(0)</del>	4-Warning	RSA keypair [chars] is in violation of Cisco security compliance guidelines and will be rejected.	An attempt to use RSA cryptography with weak keys has been detected. Cisco recommends RSA key sizes of 2048 or greater for security. Shorter key sizes will be rejected.	-	"Regenerate keys specifying key size to be 2048 or greater" " to avoid service disruption"
<del>(R)F(0)S(0)I(0)M(0)E(0)W(0)K(0)S(0)</del>	4-Warning	RSA keypair [chars] is in violation of Cisco security compliance guidelines and will be rejected.	An attempt to use RSA cryptography with weak keys has been detected. Cisco recommends RSA key sizes of 2048 or greater for security. Shorter key sizes will be rejected.	-	"Regenerate keys specifying key size to be 2048 or greater" " to avoid service disruption"
<del>(R)F(0)S(0)I(0)M(0)E(0)D(0)</del>	5-Notice	Cisco PSB security compliance is being enforced	Cisco Internal Requirements and defined by the Cisco Product Security Baseline PSB are being enforced.	-	"No action is required"
<del>(R)F(0)S(0)I(0)M(0)E(0)D(0)</del>	5-Notice	Cisco PSB security compliance is being enforced	Cisco Internal Requirements and defined by the Cisco Product Security Baseline PSB are being enforced.	-	"No action is required"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CISCO</del> <del>INTERNAL</del> <del>SECURITY</del> <del>BASELINE</del> <del>PSB</del>	5-Notice	Cisco PSB security compliance exception has been added by [chars] for use of [chars]	Cisco Internal Requirements and defined by the Cisco Product Security Baseline PSB are being enforced.	-	"No action is required"
<del>CISCO</del> <del>INTERNAL</del> <del>SECURITY</del> <del>BASELINE</del> <del>PSB</del>	5-Notice	Cisco PSB security compliance exception has been added by [chars] for use of [chars]	Cisco Internal Requirements and defined by the Cisco Product Security Baseline PSB are being enforced.	-	"No action is required"
<del>CISCO</del> <del>INTERNAL</del> <del>SECURITY</del> <del>BASELINE</del> <del>PSB</del>	5-Notice	DH Table Size has reached [dec] percent full mark. Priority changed to High	The audit check verifying encryption entitlement within the IOS image could not be performed due to incomplete system configuration.	-	"none"
<del>CISCO</del> <del>INTERNAL</del> <del>SECURITY</del> <del>BASELINE</del> <del>PSB</del>	5-Notice	DH Table Size has reached [dec] percent full mark. Priority changed to High	The audit check verifying encryption entitlement within the IOS image could not be performed due to incomplete system configuration.	-	"none"
<del>CISCO</del> <del>INTERNAL</del> <del>SECURITY</del> <del>BASELINE</del> <del>PSB</del>	5-Notice	DH Table Size was reached [dec] percent full mark. Priority changed to Low	The audit check verifying encryption entitlement within the IOS image could not be performed due to incomplete system configuration.	-	"none"
<del>CISCO</del> <del>INTERNAL</del> <del>SECURITY</del> <del>BASELINE</del> <del>PSB</del>	5-Notice	DH Table Size was reached [dec] percent full mark. Priority changed to Low	The audit check verifying encryption entitlement within the IOS image could not be performed due to incomplete system configuration.	-	"none"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CRFPOENCNKEYADDD</del>	5-Notice	FIPS 140-2 is being enforced	FIPS 140-2 requirements as defined by NIST are being enforced.	-	"No action is required"
<del>CRFPOENCNKEYADDD</del>	5-Notice	FIPS 140-2 is being enforced	FIPS 140-2 requirements as defined by NIST are being enforced.	-	"No action is required"
<del>CRFPOENCNKEYADDD</del>	5-Notice	FIPS 140-3 is being enforced	FIPS 140-3 requirements as defined by NIST are being enforced.	-	"No action is required"
<del>CRFPOENCNKEYADDD</del>	5-Notice	FIPS 140-3 is being enforced	FIPS 140-3 requirements as defined by NIST are being enforced.	-	"No action is required"
CRFPOENCNKEYADDD	5-Notice	A key named [chars] has been generated or imported by [chars]	An RSA or EC key has been generated or imported. The configuration must be saved to permanently save this key.	-	"No action required. Informational message"
CRFPOENCNKEYADDD	5-Notice	A key named [chars] has been generated or imported by [chars]	An RSA or EC key has been generated or imported. The configuration must be saved to permanently save this key.	-	"No action required. Informational message"
CRFPOENCNKEYDEED	5-Notice	A key named [chars] has been removed from key storage	A key has been marked for removal from storage. The configuration must be saved to permanently remove this key.	-	"No action required. Informational message"
CRFPOENCNKEYDEED	5-Notice	A key named [chars] has been removed from key storage	A key has been marked for removal from storage. The configuration must be saved to permanently remove this key.	-	"No action required. Informational message"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CRYPTOENKEYREPLAC</del>	5-Notice	A key named [chars] has been replaced by [chars] with new key data	An RSA or EC key has been replaced. The configuration must be saved to permanently save this key.	-	"No action required. Informational message"
<del>CRYPTOENKEYREPLAC</del>	5-Notice	A key named [chars] has been replaced by [chars] with new key data	An RSA or EC key has been replaced. The configuration must be saved to permanently save this key.	-	"No action required. Informational message"
<del>CRYPTOIKEACTOERROR</del>	3-Error	Attempt to failover IKE SA [node][node]failed due to [chars]. No	The HA Active device attempted to checkpoint the state of an IKE SA to the Standby but the Standby device was unable to create the Standby IKE SA.	ipsec-ha	"Look for other error messages at log level WARNING or turn on debugs " "to look for the specific reason of the failure."
<del>CRYPTOIKEACTOERROR</del>	3-Error	Attempt to failover IKE SA [node][node]failed due to [chars]. No	The HA Active device attempted to checkpoint the state of an IKE SA to the Standby but the Standby device was unable to create the Standby IKE SA.	ipsec-ha	"Look for other error messages at log level WARNING or turn on debugs " "to look for the specific reason of the failure."
<del>CRYPTOHWNOCSUPPFW</del>	4-Warning	Crypto hardware is enabled and it does not support HA operation '[chars]'	Crypto Hardware is enabled but the hardware does not support HA operations like insert/extract of keys	-	"Replace Crypto hardware with one that support HA operations" " or disable the hardware to use software crypto engine"
<del>CRYPTOHWNOCSUPPFW</del>	4-Warning	Crypto hardware is enabled and it does not support HA operation '[chars]'	Crypto Hardware is enabled but the hardware does not support HA operations like insert/extract of keys	-	"Replace Crypto hardware with one that support HA operations" " or disable the hardware to use software crypto engine"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRPCH-IPSEC-ACM-ERROR</del>	3-Error	Attempt to failover IPsec SA [node][node]failed due to [chars]. No	The HA Active device attempted to checkpoint the state of an IKE SA to the Standby but the Standby device was unable to create the Standby IKE SA.	ipsec-ha	"Look for other error messages at log level WARNING or turn on debugs " "to look for the specific reason of the failure."
<del>CRPCH-IPSEC-ACM-ERROR</del>	3-Error	Attempt to failover IPsec SA [node][node]failed due to [chars]. No	The HA Active device attempted to checkpoint the state of an IKE SA to the Standby but the Standby device was unable to create the Standby IKE SA.	ipsec-ha	"Look for other error messages at log level WARNING or turn on debugs " "to look for the specific reason of the failure."
<del>CRPCH-IPSEC-ACM-ERROR</del>	3-Error	Start of HA IPsec update process failed	Starting of the IPsec HA process failed Updates will not be sent from active to standby	ipsec-ha	"The box may need to be re-booted if this is a part " "of a IPsec HA setup"
<del>CRPCH-IPSEC-ACM-ERROR</del>	3-Error	Start of HA IPsec update process failed	Starting of the IPsec HA process failed Updates will not be sent from active to standby	ipsec-ha	"The box may need to be re-booted if this is a part " "of a IPsec HA setup"
<del>CRPCH-IPSEC-ACM-ERROR</del>	4-Warning	Crypto hardware is enabled and it does not support HA operation '[chars]'	Crypto Hardware is enabled but the hardware does not support HA operations like insert/extract of keys	-	"Replace Crypto hardware with one that support HA operations" " or disable the hardware to use software crypto engine"
<del>CRPCH-IPSEC-ACM-ERROR</del>	4-Warning	Crypto hardware is enabled and it does not support HA operation '[chars]'	Crypto Hardware is enabled but the hardware does not support HA operations like insert/extract of keys	-	"Replace Crypto hardware with one that support HA operations" " or disable the hardware to use software crypto engine"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CRYPTO_RSA_ISSU3ERR	3-Error	Crypto RSA ISSU client failed to get buffer for message.\n\n Error: [dec] [chars]	Crypto RSA ISSU client failed to get buffer for building\n\n a negotiation message. Hence it cannot send the negotiation\n\n message to the standby unit. When there is a problem in\n\n the negotiaiton the standby unit can not be brought up.	crypto_rsa	"show logging and show checkpoint client"
CRYPTO_RSA_ISSU3ERR	3-Error	Crypto RSA ISSU client failed to get buffer for message.\n\n Error: [dec] [chars]	Crypto RSA ISSU client failed to get buffer for building\n\n a negotiation message. Hence it cannot send the negotiation\n\n message to the standby unit. When there is a problem in\n\n the negotiaiton the standby unit can not be brought up.	crypto_rsa	"show logging and show checkpoint client"
CRYPTO_RSA_ISSU3INT	3-Error	Crypto RSA ISSU client initialization failed to [chars]. Error: [dec] [chars]	Crypto RSA ISSU client could not be initialilzed this will\n\n cause catstrophic failure when ISSU upgrade or downgrade\n\n is performed.	crypto_rsa	LOGSIDSHTECHACI0N
CRYPTO_RSA_ISSU3INT	3-Error	Crypto RSA ISSU client initialization failed to [chars]. Error: [dec] [chars]	Crypto RSA ISSU client could not be initialilzed this will\n\n cause catstrophic failure when ISSU upgrade or downgrade\n\n is performed.	crypto_rsa	LOGSIDSHTECHACI0N

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CRPORAISLNAIDISSN</del>	3-Error	Crypto RSA ISSU client does not have a valid registered session.	Crypto RSA ISSU client does not have a valid registered session.\n\n When there is a problem with the session the standby unit cannot\n\n be brought up.	crypto_rsa	"show issu capability entries <client_id> and\n\n show issu session <client_id> and\n\n show issu negotiated capability <session_id>"
<del>CRPORAISLNAIDISSN</del>	3-Error	Crypto RSA ISSU client does not have a valid registered session.	Crypto RSA ISSU client does not have a valid registered session.\n\n When there is a problem with the session the standby unit cannot\n\n be brought up.	crypto_rsa	"show issu capability entries <client_id> and\n\n show issu session <client_id> and\n\n show issu negotiated capability <session_id>"
<del>CRPORAISLNAIDISSN</del>	3-Error	Crypto RSA ISSU client message type [dec] is not compatible	Crypto RSA ISSU client received an incompatible message\n\n from the peer unit. Since the message is not compatible\n\n it cannot be processed by this unit	crypto_rsa	"show issu message group <client_id> and\n\n show issu session <client_id> and\n\n show issu negotiated version <session_id>"
<del>CRPORAISLNAIDISSN</del>	3-Error	Crypto RSA ISSU client message type [dec] is not compatible	Crypto RSA ISSU client received an incompatible message\n\n from the peer unit. Since the message is not compatible\n\n it cannot be processed by this unit	crypto_rsa	"show issu message group <client_id> and\n\n show issu session <client_id> and\n\n show issu negotiated version <session_id>"
<del>CRPORAISLNAIDISSN</del>	3-Error	Crypto RSA ISSU client failed to get the MTU for message type [dec].\n\n Error: [dec] [chars]	Crypto RSA ISSU client failed to calculate MTU\n\n for the message specified. The dot1x ISSU client will not\n\n be able to send message to the standby unit.	crypto_rsa	"show issu message group <client_id> and\n\n show issu session <client_id> and\n\n show issu negotiated version <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRYPTORSAISSU</del> MSGZE	3-Error	Crypto RSA ISSU client failed to get the MTU for message type [dec].\n\n Error: [dec] [chars]	Crypto RSA ISSU client failed to calculate MTU\n\n for the message specified. The dot1x ISSU client will not\n\n be able to send message to the standby unit.	crypto_rsa	"show issu message group <client_id> and\n\n show issu session <client_id> and\n\n show issu negotiated version <session_id>"
<del>CRYPTORSAISSU</del> NEGOT	3-Error	Crypto RSA ISSU client failed to send negotiation message.\n\n Error: [dec] [chars]	Crypto RSA ISSU client failed to send a session negotiation\n\n message to the peer. When there is a problem in the ISSU\n\n negotiation the standby unit can not be brought up.	crypto_rsa	"show logging and show checkpoint client"
<del>CRYPTORSAISSU</del> NEGOT	3-Error	Crypto RSA ISSU client failed to send negotiation message.\n\n Error: [dec] [chars]	Crypto RSA ISSU client failed to send a session negotiation\n\n message to the peer. When there is a problem in the ISSU\n\n negotiation the standby unit can not be brought up.	crypto_rsa	"show logging and show checkpoint client"
<del>CRYPTORSAISSU</del> NEGOT	3-Error	Crypto RSA ISSU client encountered unexpected client nego_done.\n\n Error: [dec] [chars]	Crypto RSA ISSU client encountered an unexpected 'client\n\n negotiation done'.	crypto_rsa	"show issu session <client_id> and\n\n show issu negotiated capability <session_id>"
<del>CRYPTORSAISSU</del> NEGOT	3-Error	Crypto RSA ISSU client encountered unexpected client nego_done.\n\n Error: [dec] [chars]	Crypto RSA ISSU client encountered an unexpected 'client\n\n negotiation done'.	crypto_rsa	"show issu session <client_id> and\n\n show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRPORA</del> ISSU	3-Error	Crypto RSA ISSU client failed to register session information.\n\nError: [dec] [chars]	Crypto RSA ISSU client failed to register session information.\n\nWhen there is a problem with the session the standby unit cannot\n\n be brought up.	crypto_rsa	"show issu capability entries <client_id> and\n\n show issu session <client_id> and\n\n show issu negotiated capability <session_id>"
<del>CRPORA</del> ISSU	3-Error	Crypto RSA ISSU client failed to register session information.\n\nError: [dec] [chars]	Crypto RSA ISSU client failed to register session information.\n\nWhen there is a problem with the session the standby unit cannot\n\n be brought up.	crypto_rsa	"show issu capability entries <client_id> and\n\n show issu session <client_id> and\n\n show issu negotiated capability <session_id>"
<del>CRPORA</del> ISSU	3-Error	Crypto RSA ISSU client failed to unregister session information.\n\nError: [dec] [chars]	Crypto RSA ISSU client failed to unregister session information.	crypto_rsa	"show issu session <client_id> and\n\n show issu negotiated capability <session_id>"
<del>CRPORA</del> ISSU	3-Error	Crypto RSA ISSU client failed to unregister session information.\n\nError: [dec] [chars]	Crypto RSA ISSU client failed to unregister session information.	crypto_rsa	"show issu session <client_id> and\n\n show issu negotiated capability <session_id>"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRYPTO_RSA_ISSU</del>	3-Error	Crypto RSA ISSU client [chars] transform failed for message type [dec].\n Error: [dec] [chars]	Crypto RSA ISSU client could not transform the message.\n If the transmit transformation failed it means that the\n checkpoint message can not be sent to the standby unit.\n If the receive transformation failed it means that the\n checkpoint message can not be applied on the standby\n unit. In both cases the Crypto RSA state will not\n be identical with the active unit.	crypto_rsa	"show issu session <client_id> and\n show issu negotiated version <session_id>"
<del>CRYPTO_RSA_ISSU</del>	3-Error	Crypto RSA ISSU client [chars] transform failed for message type [dec].\n Error: [dec] [chars]	Crypto RSA ISSU client could not transform the message.\n If the transmit transformation failed it means that the\n checkpoint message can not be sent to the standby unit.\n If the receive transformation failed it means that the\n checkpoint message can not be applied on the standby\n unit. In both cases the Crypto RSA state will not\n be identical with the active unit.	crypto_rsa	"show issu session <client_id> and\n show issu negotiated version <session_id>"
<del>CRYPTO_PLATFORM</del>	3-Error	Invalid platform default value token: [chars]	-	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRPC_LHMS_PACRMUE</del>	3-Error	Invalid platform level value token: [chars]	-	-	LOG_STD_ACTION
<del>CRPC_LHMS_MIPCRMUS</del>	3-Error	No valid platform level values specified	-	-	LOG_STD_ACTION
<del>CRPC_LHMS_ROMMWHED</del>	3-Error	Error in updating rommon variable	-	-	LOG_STD_ACTION
<del>CRPC_LHMS_RASHIAD</del>	3-Error	Update of rommon variable failed: retcode=[dec]	Call to update rommon variable failed	-	LOG_STD_ACTION
<del>CRPC_LHMS_ROMMOMUE</del>	6-Information	Invalid throughput option [dec] kbps found updating rommon to [dec] kbps	Invalid throughput option in rommon for crypto throughputResetting the throughput option to the default value	-	"No action required. Informational message."
<del>CRPC_LHMS_ROMMOML</del>	6-Information	Current rommon value: [chars]	-	-	-
<del>CRPC_LHMS_SRBSDIC</del>	6-Information	Tier Based License Support: [dec]	-	-	-
<del>CRPC_LHMS_HIMEHORD</del>	6-Information	Network Essentials is enabled higher throughput blocked	-	-	-
<del>CRPC_LHMS_HIMEIMD</del>	6-Information	HSECK9 is disabled: bandwidth restricted to 250Mbps	-	-	-
<del>CRPC_LHMS_HISEKSHED</del>	6-Information	License registration failed rc=[dec]	License request failed.	-	"Look at other logs/debugs to see reason for failure."
<del>CRPC_LHMS_HISEKQSHD</del>	6-Information	License request failed rc=[dec]	HSECK9 License request failed.	-	"Look at other logs/debugs to see reason for failure."
<del>CRPC_LHMS_HISEKQSHD</del>	6-Information	License request failed rc=[dec] sle_ret_val=[dec]	License request failed. Data plane will use platform default throughput level	-	"Look at other logs/debugs to see reason for failure."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRYPTO-6-THROTTLE</del>	6-Information	Crypto throughput [chars] throttled. New level is [dec]	Maximum throughput level is the same as unthrottled. All other levels are throttled	-	"No action required. Informational message."
<del>CRYPTO-6-THROTTLE</del>	6-Information	Setting crypto bidir throughput to: [chars]	Crypto throughput rommon var updated	-	"No action required. Informational message."
<del>CRYPTO-6-THROTTLE</del>	6-Information	Setting crypto bidir throughput to: [dec] kbps	Crypto throughput rommon var updated	-	"No action required. Informational message."
CRYPTO-0-AUDITFAIL	0-Emergency	Encryption audit check found the wrong level of encryption in this image	The device is starting the Crypto self-tests.\n\ Success or failure status will be reported when the tests complete.	-	"Informational only. No action required."
CRYPTO-0-AUDITFAIL	0-Emergency	Encryption audit check found the wrong level of encryption in this image	The device is starting the Crypto self-tests.\n\ Success or failure status will be reported when the tests complete.	-	"Informational only. No action required."
<del>CRYPTO-0-SELF_TEST_FAILURE</del>	0-Emergency	Crypto self-test [chars] [chars]	One of the crypto integrity/algorithm self-tests has failed. The crypto algorithm engine is not operable in this state.	-	"If the failure persists contact Cisco to "obtain a replacement IOS image."
<del>CRYPTO-0-SELF_TEST_FAILURE</del>	0-Emergency	Crypto self-test [chars] [chars]	One of the crypto integrity/algorithm self-tests has failed. The crypto algorithm engine is not operable in this state.	-	"If the failure persists contact Cisco to "obtain a replacement IOS image."
CRYPTO-3-BADMAGIC	3-Error	Bad [chars] magic number [node]x.	An internal software error.	ipsec	LOG_STD_ACTION
CRYPTO-3-BADMAGIC	3-Error	Bad [chars] magic number [node]x.	An internal software error.	ipsec	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CRYPTOENGINE_BAD_ID</del>	3-Error	Generated ECDSA key failed self test	An automatic test of the newly generated ECDSA keypair [chars] failed. That ECDSA key was automatically deleted.	-	"File a DDTS. As an immediate workaround attempt to create another pair"
<del>CRYPTOENGINE_BAD_ID</del>	3-Error	Generated ECDSA key failed self test	An automatic test of the newly generated ECDSA keypair [chars] failed. That ECDSA key was automatically deleted.	-	"File a DDTS. As an immediate workaround attempt to create another pair"
<del>CRYPTOENGINE_BAD_ID</del>	3-Error	Crypto Engine id [dec] is invalid	The packet has its engine_id set to something other than software crypto or hardware crypto. Unable to determine which crypto engine to use The packet will be default sent to software crypto engine.	ipsec	"No action required"
<del>CRYPTOENGINE_BAD_ID</del>	3-Error	Crypto Engine id [dec] is invalid	The packet has its engine_id set to something other than software crypto or hardware crypto. Unable to determine which crypto engine to use The packet will be default sent to software crypto engine.	ipsec	"No action required"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CNFCMANNHACREZHR</del>	3-Error	EZVPN[chars]: Virtual-access interface creation failed	The virtual-interface feature will not work without a virtual-access interface. The EzVPN configuration is unusable. You can choose to remove virtual-interface configuration from ezvpn as a workaround	ipsec-ezvpn	"If this message occurs contact your technical " "support representative."
<del>CNFCMANNHACREZHR</del>	3-Error	EZVPN[chars]: Virtual-access interface creation failed	The virtual-interface feature will not work without a virtual-access interface. The EzVPN configuration is unusable. You can choose to remove virtual-interface configuration from ezvpn as a workaround	ipsec-ezvpn	"If this message occurs contact your technical " "support representative."
<del>CNFCMANNHACREZHR</del>	3-Error	GETVPN failclose is not supported by the current available crypto hardware.	An attempt was made to configure the GETVPN failclose feature which cannot be supported by the current encryption hardware.	ipsec-mcast	"Please remove the unsupported feature config " "or switch to a capable crypto engine."
<del>CNFCMANNHACREZHR</del>	3-Error	GETVPN failclose is not supported by the current available crypto hardware.	An attempt was made to configure the GETVPN failclose feature which cannot be supported by the current encryption hardware.	ipsec-mcast	"Please remove the unsupported feature config " "or switch to a capable crypto engine."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRYPTO-3-IKEINITE</del>	3-Error	Pak spent too much time in the IKE input queues	An incoming IKE packet spent too much time in the IKE input queues. This can happen when the IKE subsystem is under heavy load due to a lot of peers trying to setup SAs simultaneously and IKE is not able to handle all the incoming packets in a timely manner.	-	"It is important to understand why many peers are simultaneously trying to setup SAs at the same time. If possible try to avoid or minimize such network conditions."
<del>CRYPTO-3-IKEINITE</del>	3-Error	Pak spent too much time in the IKE input queues	An incoming IKE packet spent too much time in the IKE input queues. This can happen when the IKE subsystem is under heavy load due to a lot of peers trying to setup SAs simultaneously and IKE is not able to handle all the incoming packets in a timely manner.	-	"It is important to understand why many peers are simultaneously trying to setup SAs at the same time. If possible try to avoid or minimize such network conditions."
CRYPTO-3-IKEINIT	3-Error	[chars]	An IKE initialization error	ipsec	LOG_STD_ACTION
CRYPTO-3-IKEINIT	3-Error	[chars]	An IKE initialization error	ipsec	LOG_STD_ACTION
<del>CRYPTO-3-IKEINIT</del>	3-Error	IKE failed to create IKE peer tree or leaf node.	IKE failed to allocate memory for the IKE peer tree	-	"More DRAM may be required in order to run the image."
<del>CRYPTO-3-IKEINIT</del>	3-Error	IKE failed to create IKE peer tree or leaf node.	IKE failed to allocate memory for the IKE peer tree	-	"More DRAM may be required in order to run the image."
<del>CRYPTO-3-IKEINIT</del>	3-Error	Querying key pair failed.	Querying public key/private key using subject name failed	-	"Check the subject name in the certificate."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRPICKMP</del> QUERY_KEY	3-Error	Querying key pair failed.	Querying public key/private key using subject name failed	-	"Check the subject name in the certificate."
<del>CRPICONADKMI</del> REQUEST	3-Error	Invalid KMI error: kmi_client: [dec] in processing [chars]	IPSec detected an invalid KMI	ipsec-core	"None"
<del>CRPICONADKMI</del> REQUEST	3-Error	Invalid KMI error: kmi_client: [dec] in processing [chars]	IPSec detected an invalid KMI	ipsec-core	"None"
<del>CRPICONSCIPAL</del> FATAL_ERROR	3-Error	IPsec PAL Fatal Error: [chars]	IPSec SM detected inconsistency and hence crashing the system	ipsec-core	"None"
<del>CRPICONSCIPAL</del> FATAL_ERROR	3-Error	IPsec PAL Fatal Error: [chars]	IPSec SM detected inconsistency and hence crashing the system	ipsec-core	"None"
<del>CRPICONSCIPAL</del> UNSUPPORTED	3-Error	IPv6 IPsec is not supported by the current available crypto hardware.	An attempt was made to configure a feature which will use IPv6 IPsec. IPv6 IPsec cannot be supported by the current encryption hardware. The configuration change was made but will not be functional until the encryption hardware configuration is changed.	ipsec	"Please remove the unsupported feature config " " or switch to a capable crypto engine."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRYPTO</del> IPSEC6UNISUPPORTED	3-Error	IPv6 IPsec is not supported by the current available crypto hardware.	An attempt was made to configure a feature which will use IPv6 IPsec. IPv6 IPsec cannot be supported by the current encryption hardware. The configuration change was made but will not be functional until the encryption hardware configuration is changed.	ipsec	"Please remove the unsupported feature config " "or switch to a capable crypto engine."
<del>CRYPTO</del> MIRECMDHOCK	3-Error	Mtree command [dec] was blocked from the the mtree process queue.	An attempt was made to enqueue a command to the crypto mtree manager process even though IPsec is currently operating in HAPX mode.	ipsec	LOG_STD_ACTION
<del>CRYPTO</del> MIRECMDHOCK	3-Error	Mtree command [dec] was blocked from the the mtree process queue.	An attempt was made to enqueue a command to the crypto mtree manager process even though IPsec is currently operating in HAPX mode.	ipsec	LOG_STD_ACTION
CRYPTO-3-NOSOCKET	3-Error	Unable to open [chars]	Call Admission Control is configured globally or at the IKE level on this device. Consequently an IKE SA request was denied do to the reason described in the error message.	ipsec	"Decrease the number of concurrent connections or " "inspect the crypto engine."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CRYPTO-3-NOSOCKET	3-Error	Unable to open [chars]	Call Admission Control is configured globally or at the IKE level on this device. Consequently an IKE SA request was denied do to the reason described in the error message.	ipsec	"Decrease the number of concurrent connections or "inspect the crypto engine."
<del>CRYPTO-INTERNAL-ERR</del>	3-Error	Internal error: [chars]	IPSec detected a serious internal error	ipsec-core	"None"
<del>CRYPTO-INTERNAL-ERR</del>	3-Error	Internal error: [chars]	IPSec detected a serious internal error	ipsec-core	"None"
<del>CRYPTO-INTERNAL-ERR-ALWAYS</del>	3-Error	Internal error: Cannot do transition for state [chars]: ALWAYS state already defined	IPSec detected a serious internal error	ipsec-core	"None"
<del>CRYPTO-INTERNAL-ERR-ALWAYS</del>	3-Error	Internal error: Cannot do transition for state [chars]: ALWAYS state already defined	IPSec detected a serious internal error	ipsec-core	"None"
<del>CRYPTO-INTERNAL-ERR-UNRECOGNIZED</del>	3-Error	Internal error: unrecognized message [dec]	IPSec detected a serious internal error	ipsec-core	"None"
<del>CRYPTO-INTERNAL-ERR-UNRECOGNIZED</del>	3-Error	Internal error: unrecognized message [dec]	IPSec detected a serious internal error	ipsec-core	"None"
<del>CRYPTO-INTERNAL-ERR-UNRECOGNIZED</del>	3-Error	Internal error: state [chars] has unrecognized transition [dec]	IPSec detected a serious internal error	ipsec-core	"None"
<del>CRYPTO-INTERNAL-ERR-UNRECOGNIZED</del>	3-Error	Internal error: state [chars] has unrecognized transition [dec]	IPSec detected a serious internal error	ipsec-core	"None"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRYPTO_IPSEC_CORE</del>	3-Error	Internal error: Table overflow new_state = [dec] [chars]	IPSec detected a serious internal error	ipsec-core	"None"
<del>CRYPTO_IPSEC_CORE</del>	3-Error	Internal error: Table overflow new_state = [dec] [chars]	IPSec detected a serious internal error	ipsec-core	"None"
<del>CRYPTO_IPSEC_CORE</del>	3-Error	Internal error: Transition [dec] already defined: state = [chars]	IPSec detected a serious internal error	ipsec-core	"None"
<del>CRYPTO_IPSEC_CORE</del>	3-Error	Internal error: Transition [dec] already defined: state = [chars]	IPSec detected a serious internal error	ipsec-core	"None"
<del>CRYPTO_IPSEC_CORE</del>	3-Error	Internal error: Transition table overflow transition = [dec] state = [chars]	IPSec detected a serious internal error	ipsec-core	"None"
<del>CRYPTO_IPSEC_CORE</del>	3-Error	Internal error: Transition table overflow transition = [dec] state = [chars]	IPSec detected a serious internal error	ipsec-core	"None"
<del>CRYPTO_IPSEC_CORE</del>	3-Error	Internal error: [chars] called from outside action routine	IPSec detected a serious internal error	ipsec-core	"None"
<del>CRYPTO_IPSEC_CORE</del>	3-Error	Internal error: [chars] called from outside action routine	IPSec detected a serious internal error	ipsec-core	"None"
<del>CRYPTO_IPSEC_CORE</del>	3-Error	Internal error: state [chars] has pending actions	IPSec detected a serious internal error	ipsec-core	"None"
<del>CRYPTO_IPSEC_CORE</del>	3-Error	Internal error: state [chars] has pending actions	IPSec detected a serious internal error	ipsec-core	"None"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CRYPTO_POLICY_CHECKSUM_ERROR	3-Error	Crypto policy checksum failure.\n\n\tCrypto access list [chars] crypto map [chars] interface [chars]\n	Crypto policy checksum failure has been detected in this router whose traffic is protected by the crypto policy. This event may be caused by memory corruption occurring in crypto policy data or the memory area has been illegally modified. It may also be caused by software defects. As a result of this event the router has been forced to reload.	-	"Contact your Cisco support representatives."
CRYPTO_POLICY_CHECKSUM_ERROR	3-Error	Crypto policy checksum failure.\n\n\tCrypto access list [chars] crypto map [chars] interface [chars]\n	Crypto policy checksum failure has been detected in this router whose traffic is protected by the crypto policy. This event may be caused by memory corruption occurring in crypto policy data or the memory area has been illegally modified. It may also be caused by software defects. As a result of this event the router has been forced to reload.	-	"Contact your Cisco support representatives."
CRYPTO_RSA_SELF_TEST_FAILED	3-Error	Generated RSA key failed self test	An automatic test of the newly generated RSA keypair [chars] failed. That RSA key was automatically deleted.	-	"File a DDTS. As an immediate workaround attempt to create another pair"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRPKCRSAHFTESTFAILED</del>	3-Error	Generated RSA key failed self test	An automatic test of the newly generated RSA keypair [chars] failed. That RSA key was automatically deleted.	-	"File a DDTs. As an immediate workaround attempt to create another pair"
<del>CRPKCKENADMINLOCKEDOUT</del>	3-Error	Cryptographic Token [chars] Administrator PIN Locked due to too many unsuccessful login attempts	The cryptographic token has disabled the Admin PIN due to too many login failures	pki	"If the user PIN is also locked out it will be necessary to reinitialize the card." "The data on the card will be lost"
<del>CRPKCKENADMINLOCKEDOUT</del>	3-Error	Cryptographic Token [chars] Administrator PIN Locked due to too many unsuccessful login attempts	The cryptographic token has disabled the Admin PIN due to too many login failures	pki	"If the user PIN is also locked out it will be necessary to reinitialize the card." "The data on the card will be lost"
<del>CRPKCKENADMINONFAILED</del>	3-Error	Cryptographic Token [chars] ADMIN Login FAILED	The cryptographic token has rejected the administrator PIN offered by the router	pki	"Issue 'crypto pki token admin-pin' command to enter correct PIN"
<del>CRPKCKENADMINONFAILED</del>	3-Error	Cryptographic Token [chars] ADMIN Login FAILED	The cryptographic token has rejected the administrator PIN offered by the router	pki	"Issue 'crypto pki token admin-pin' command to enter correct PIN"
<del>CRPKCKENAPIFAILURE</del>	3-Error	Cryptographic Token [chars] API FAILED error = [dec]	The cryptographic token returned an unexpected error	pki	LOG_STD_ACTION
<del>CRPKCKENAPIFAILURE</del>	3-Error	Cryptographic Token [chars] API FAILED error = [dec]	The cryptographic token returned an unexpected error	pki	LOG_STD_ACTION
<del>CRPKCKENCHANGEPINFAILED</del>	3-Error	Cryptographic Token [chars] Change PIN FAILED	The cryptographic token has rejected the new PIN offered by the router	pki	"Be sure you are logged in to the token as admin. Try a longer PIN."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRPKCHCKCHGNALED</del>	3-Error	Cryptographic Token [chars] Change PIN FAILED	The cryptographic token has rejected the new PIN offered by the router	pki	"Be sure you are logged in to the token as admin. Try a longer PIN."
<del>CRPKCHCKNCKEDOUT</del>	3-Error	Cryptographic Token [chars] PIN Locked due to too many unsuccessful login attempts	The cryptographic token has disabled the user PIN due to too many login failures	pki	"Issue 'crypto pki token admin-pin' command to enter correct ADMINISTRATOR PIN"
<del>CRPKCHCKNCKEDOUT</del>	3-Error	Cryptographic Token [chars] PIN Locked due to too many unsuccessful login attempts	The cryptographic token has disabled the user PIN due to too many login failures	pki	"Issue 'crypto pki token admin-pin' command to enter correct ADMINISTRATOR PIN"
<del>CRPKCHCKNCKGNALED</del>	3-Error	Cryptographic Token [chars] Login FAILED	The cryptographic token has rejected the PIN offered by the router	pki	"Issue 'crypto pki token user-pin' command to enter correct PIN"
<del>CRPKCHCKNCKGNALED</del>	3-Error	Cryptographic Token [chars] Login FAILED	The cryptographic token has rejected the PIN offered by the router	pki	"Issue 'crypto pki token user-pin' command to enter correct PIN"
<del>CRPKCHCKNSCKREMALED</del>	3-Error	Key [chars] store on Cryptographic Token [chars] Failed	An error occurred attempting to write a new keypair out to the cryptographic token	pki	"Try logging in to the token. If the error persists " "try logging in as admin"
<del>CRPKCHCKNSCKREMALED</del>	3-Error	Key [chars] store on Cryptographic Token [chars] Failed	An error occurred attempting to write a new keypair out to the cryptographic token	pki	"Try logging in to the token. If the error persists " "try logging in as admin"
<del>CRPKCHCKNSCKREMALED</del>	4-Warning	advipservices license is required to enable IPsec IPv6 feature. Please install the license and retry.\n	IPsec IPv6 subsystem is bundled with advipservices license. So check if this license is enabled to include IPsec IPv6 subsystem.	ipsec-core	"Enable ADV_IPSERVICES license."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRYPTO4IPSECINFORM</del>	4-Warning	advipservices license is required to enable IPsec IPv6 feature. Please install the license and retry.\n	IPSec IPv6 subsystem is bundled with advipservices license. So check if this license is enabled to include IPSec IPv6 subsystem.	ipseccore	"Enable ADV_IPSERVICES license."
CRYPTO4AUDITWARN	4-Warning	Encryption audit check could not be performed	The audit check verifying encryption entitlement within the IOS image could not be performed due to incomplete system configuration.	-	"Manually verify that this IOS image is entitled to contain " "encryption."
CRYPTO4AUDITWARN	4-Warning	Encryption audit check could not be performed	The audit check verifying encryption entitlement within the IOS image could not be performed due to incomplete system configuration.	-	"Manually verify that this IOS image is entitled to contain " "encryption."
<del>CRYPTO4IPSECINFORM</del>	4-Warning	Invalid encryption method for IKE policy %u	Configured encryption method is not supported	-	"Use any of the valid encryption methods for the ISAKMP policy"
<del>CRYPTO4IPSECINFORM</del>	4-Warning	Invalid encryption method for IKE policy %u	Configured encryption method is not supported	-	"Use any of the valid encryption methods for the ISAKMP policy"
<del>CRYPTO4IPSECINFORM</del>	4-Warning	[chars]	Ezvpn session failed to come up ezvpn is stuck in a state waiting for an event posting a reset message to recover.	-	""

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CRYPTO4EZVPN_AID_CONNECT	4-Warning	[chars]	Ezvpn session failed to come up ezvpn is stuck in a state waiting for an event posting a reset message to recover.	-	""
CRYPTO4EZVPN_SA_LIMIT	4-Warning	[chars]	The limit for maximum no of ezvpn tunnels that can be setup on the platform has reached. Active SAs shall not be terminated but no additional SAs can be established until the number of existing SAs decreases.	-	""
CRYPTO4EZVPN_SA_LIMIT	4-Warning	[chars]	The limit for maximum no of ezvpn tunnels that can be setup on the platform has reached. Active SAs shall not be terminated but no additional SAs can be established until the number of existing SAs decreases.	-	""
CRYPTO4GM_ISAKMP_OFF	4-Warning	Can't start GDOI registration as ISAKMP disabled	Crypto ISAKMP is not enabled	ipsec-mcast	"Enable crypto ISAKMP"
CRYPTO4GM_ISAKMP_OFF	4-Warning	Can't start GDOI registration as ISAKMP disabled	Crypto ISAKMP is not enabled	ipsec-mcast	"Enable crypto ISAKMP"
CRYPTO4GM_LOCAL_ADDRESS	4-Warning	Failed to determine local ip address for group [chars] on interface [chars]	Failed to determine local address for GDOI crypto map	ipsec-mcast	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CRYPTO/MISC/ADDRESS	4-Warning	Failed to determine local ip address for group [chars] on interface [chars]	Failed to determine local address for GDOI crypto map	ipsec-mcast	LOG_STD_ACTION
CRYPTO/MISC/IFDOWN	4-Warning	Can't start GDOI registration as interface [chars] is down	Interface is found down before registration	ipsec-mcast	LOG_STD_ACTION
CRYPTO/MISC/IFDOWN	4-Warning	Can't start GDOI registration as interface [chars] is down	Interface is found down before registration	ipsec-mcast	LOG_STD_ACTION
CRYPTO/MZ/ADDRESS	4-Warning	No ip address found for group [chars] on source interface [chars]	Source IP address for GDOI crypto map is zero	ipsec-mcast	LOG_STD_ACTION
CRYPTO/MZ/ADDRESS	4-Warning	No ip address found for group [chars] on source interface [chars]	Source IP address for GDOI crypto map is zero	ipsec-mcast	LOG_STD_ACTION
CRYPTO/4A/CLEARTEXT	4-Warning	Unencrypted traffic [chars] [node]because crypto optional is configured	Cleartext traffic is passing through an interface that is configured for encryption. This traffic is accepted because the router has the CRYPTO IPSEC OPTIONAL ENABLE setting which allows such traffic.	ipsec	"If you did not intend to configure the crypto " "optional setting you should reconfigure the box " "to turn it off"
CRYPTO/4A/CLEARTEXT	4-Warning	Unencrypted traffic [chars] [node]because crypto optional is configured	Cleartext traffic is passing through an interface that is configured for encryption. This traffic is accepted because the router has the CRYPTO IPSEC OPTIONAL ENABLE setting which allows such traffic.	ipsec	"If you did not intend to configure the crypto " "optional setting you should reconfigure the box " "to turn it off"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CRYPTO4IA_ENABLE	4-Warning	Security warning: crypto ipsec optional is configured	Currently the router has the CRYPTO IPSEC OPTIONAL ENABLE setting which allows data which normally would be encrypted to be sent in the clear.	ipsec	"If you did not intend to configure the crypto " "optional setting you should reconfigure the box to turn " "it off"
CRYPTO4IA_ENABLE	4-Warning	Security warning: crypto ipsec optional is configured	Currently the router has the CRYPTO IPSEC OPTIONAL ENABLE setting which allows data which normally would be encrypted to be sent in the clear.	ipsec	"If you did not intend to configure the crypto " "optional setting you should reconfigure the box to turn " "it off"
<del>CRYPTO4POLICY_MATCHED</del>	4-Warning	IKE default policy was matched and is being used.	The default policy is being used because the local configured policies did not match with the peer's policies.	ipsec-isakmp	"To avoid using the default policy " "reconfigure the local policy to match " "with peer's policy"
<del>CRYPTO4POLICY_MATCHED</del>	4-Warning	IKE default policy was matched and is being used.	The default policy is being used because the local configured policies did not match with the peer's policies.	ipsec-isakmp	"To avoid using the default policy " "reconfigure the local policy to match " "with peer's policy"
<del>CRYPTO4QM00BDC001</del>	4-Warning	encrypted connection attempted with a peer without the\n configured certificate attributes	An encrypting peer attempted to establish an IPSec session with an interface which it was not authorized for. Some might consider this a hostile event.	-	"Check if the peer should be authorized to connect with the" " IPsec connection. If he should be allowed it may be a" " configuration issue. Otherwise you should contact the" " peer's administrator."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CRPKMPBADMSG	4-Warning	encrypted connection attempted with a peer without the\n configured certificate attributes	An encrypting peer attempted to establish an IPSec session with an interface which it was not authorized for. Some might consider this a hostile event.	-	"Check if the peer should be authorized to connect with the" " IPsec connection. If he should be allowed it may be a" " configuration issue. Otherwise you should contact the" " peer's administrator."
CRPKMPBADMSG	4-Warning	IKE message from [chars] failed its sanity check or is malformed	A quick sanity check is done on all received ISAKMP messages to verify that all component payload types are valid and that the sum of their individual lengths equals the total length of the received message. This message failed the sanity check. Persistently bad messages could be a denial of service attack or bad decryption.	-	"Contact the remote peer's administrator."
CRPKMPBADMSG	4-Warning	IKE message from [chars] failed its sanity check or is malformed	A quick sanity check is done on all received ISAKMP messages to verify that all component payload types are valid and that the sum of their individual lengths equals the total length of the received message. This message failed the sanity check. Persistently bad messages could be a denial of service attack or bad decryption.	-	"Contact the remote peer's administrator."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRPCKMPHS_EXCEED</del>	4-Warning	IKE hash size exceeded with peer at [node]	A hash operation required by the IKE protocol exceeded an internal limit. The IKE SA negotiation was rejected. That can happen if an inordinately large number of IKE policies were being proposed by the initiator	-	"Reduce the number of configured IKE policies."
<del>CRPCKMPHS_EXCEED</del>	4-Warning	IKE hash size exceeded with peer at [node]	A hash operation required by the IKE protocol exceeded an internal limit. The IKE SA negotiation was rejected. That can happen if an inordinately large number of IKE policies were being proposed by the initiator	-	"Reduce the number of configured IKE policies."
<del>CRPCKMPNAD_POLICY</del>	4-Warning	ISAKMP policy rsa-encr not supported by crypto HW accelerator [chars]	rsa-encr is not supported by Hifn based crypto HW accelerators	-	"Use ISAKMP policy rsa-sig"
<del>CRPCKMPNAD_POLICY</del>	4-Warning	ISAKMP policy rsa-encr not supported by crypto HW accelerator [chars]	rsa-encr is not supported by Hifn based crypto HW accelerators	-	"Use ISAKMP policy rsa-sig"
<del>CRPCKMPRIM_MAX</del>	4-Warning	INV SPI RECOV LIMIT [dec] maxed [chars] [chars] [chars]	INVALID SPI RECOVERY SAs maximum limit has been reached.	-	"Possibly the local box reloaded."
<del>CRPCKMPRIM_MAX</del>	4-Warning	INV SPI RECOV LIMIT [dec] maxed [chars] [chars] [chars]	INVALID SPI RECOVERY SAs maximum limit has been reached.	-	"Possibly the local box reloaded."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CRYPTO4IKMP_NO_SA	4-Warning	IKE message from [chars] has no SA and is not an initialization offer	IKE maintains state for a communication in the form of security associations. No security association exists for this packet and it is not an initial offer from the peer to establish one. This situation could denote a denial of service attack.	-	"Contact the remote peer and/or his administrator"
CRYPTO4IKMP_NO_SA	4-Warning	IKE message from [chars] has no SA and is not an initialization offer	IKE maintains state for a communication in the form of security associations. No security association exists for this packet and it is not an initial offer from the peer to establish one. This situation could denote a denial of service attack.	-	"Contact the remote peer and/or his administrator"
CRYPTO4IKMP_OVERFLOW	4-Warning	ISAKMP message from [chars] larger [node] than the UDP packet length [node]	-	-	-
CRYPTO4IKMP_OVERFLOW	4-Warning	ISAKMP message from [chars] larger [node] than the UDP packet length [node]	-	-	-
CRYPTO4IPSEC_ACCOUNTING_FAILURE	4-Warning	IPSEC Accounting was unable to send start record	The AAA subsystem was unable to send the accounting start on behalf of IPsec. This could be due to the AAA Server being unreachable.	ipsec	"Ensure that the AAA server is reachable and enabled" "for accounting."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRIPSEC_AASRTAUE</del>	4-Warning	IPSEC Accounting was unable to send start record	The AAA subsystem was unable to send the accounting start on behalf of IPsec. This could be due to the AAA Server being unreachable.	ipsec	"Ensure that the AAA server is reachable and enabled" "for accounting."
<del>CRIPSEC_AASRTAUE</del>	4-Warning	IPSEC Accounting was unable to send stop record	The AAA subsystem was unable to send the accounting stop on behalf of IPsec. This could be due to the AAA Server being unreachable.	ipsec	"Ensure that the AAA server is reachable and enabled" "for accounting."
<del>CRIPSEC_AASRTAUE</del>	4-Warning	IPSEC Accounting was unable to send stop record	The AAA subsystem was unable to send the accounting stop on behalf of IPsec. This could be due to the AAA Server being unreachable.	ipsec	"Ensure that the AAA server is reachable and enabled" "for accounting."
<del>CRIPSEC_MHDCSPRE</del>	4-Warning	Transform [chars] not valid under IPsec transform [chars]	Configured encryption algorithm not supported	-	"Specify a valid encryption algorithm for the ipsec transform"
<del>CRIPSEC_MHDCSPRE</del>	4-Warning	Transform [chars] not valid under IPsec transform [chars]	Configured encryption algorithm not supported	-	"Specify a valid encryption algorithm for the ipsec transform"
<del>CRIPSEC_MHDCSPRE</del>	4-Warning	Transform [chars] will run with reduced performance because of IPsec transform [chars]	Configured encryption algorithm will not run on the hardware encryption card. The transform is still usable but will run with reduced performance.	-	"If you need to use the full performance of the encryption card " "specify another encryption algorithm for the ipsec transform"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRYPTO</del> <del>IPSEC</del> <del>WARNING</del>	4-Warning	Transform [chars] will run with reduced performance because of IPsec transform [chars]	Configured encryption algorithm will not run on the hardware encryption card. The transform is still usable but will run with reduced performance.	-	"If you need to use the full performance of the encryption card " "specify another encryption algorithm for the ipsec transform"
<del>CRYPTO</del> <del>IPSEC</del> <del>WARNING</del>	4-Warning	Transform [chars] not usable with IKE because of IPsec transform [chars]	Configured encryption algorithm not usable with IKE with current hardware configuration	-	"If you need to negotiate this with IKE specify a valid encryption " "algorithm for the ipsec transform"
<del>CRYPTO</del> <del>IPSEC</del> <del>WARNING</del>	4-Warning	Transform [chars] not usable with IKE because of IPsec transform [chars]	Configured encryption algorithm not usable with IKE with current hardware configuration	-	"If you need to negotiate this with IKE specify a valid encryption " "algorithm for the ipsec transform"
<del>CRYPTO</del> <del>PKI</del> <del>WARNING</del>	4-Warning	On-Token RSA keypairs from token [chars] and associated IPSEC sessions being deactivated now	On-Token Router RSA keypairs and associated IPSEC sessions are being deactivated because the token containing them was removed	pki	"Re-insert the crypto token"
<del>CRYPTO</del> <del>PKI</del> <del>WARNING</del>	4-Warning	On-Token RSA keypairs from token [chars] and associated IPSEC sessions being deactivated now	On-Token Router RSA keypairs and associated IPSEC sessions are being deactivated because the token containing them was removed	pki	"Re-insert the crypto token"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRYPTO</del> PKT_RELAY_ERR	4-Warning	[chars]\n \tconnection id=[dec] sequence number=[node]\n	Replay processing failed. This may be a temporary condition due to waiting for new SAs to be established. In the inbound case this may also be due to an actual replay attack. Some might consider this a hostile event.	-	"If the problem appears to be more than a transient one" " contact the peer's administrator."
<del>CRYPTO</del> PKT_RELAY_ERR	4-Warning	[chars]\n \tconnection id=[dec] sequence number=[node]\n	Replay processing failed. This may be a temporary condition due to waiting for new SAs to be established. In the inbound case this may also be due to an actual replay attack. Some might consider this a hostile event.	-	"If the problem appears to be more than a transient one" " contact the peer's administrator."
<del>CRYPTO</del> IPCP_DECOMP_ERR	4-Warning	pcp: [dec] byte packet failed to decompress pcp: dst_addr=[node]src_addr=%i	The received IPPCP packet failed to decompress. This may be due to a decompression buffer error.	-	LOG_STD_ACTION
<del>CRYPTO</del> IPCP_DECOMP_ERR	4-Warning	pcp: [dec] byte packet failed to decompress pcp: dst_addr=[node]src_addr=%i	The received IPPCP packet failed to decompress. This may be due to a decompression buffer error.	-	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>C</del> <del>P</del> <del>C</del> <del>D</del> <del>K</del> <del>I</del> <del>N</del> <del>C</del> <del>T</del> <del>P</del> <del>W</del> <del>R</del> <del>N</del> <del>I</del> <del>N</del> <del>G</del>	4-Warning	Rec'd packet has invalid cTCP wrapper protocol.\n \tencryptoflags = [hec] sa->udp_wrapper_support = [dec] transform = [hec]	Rec'd packet either cTCP encapsulated but is not correct negotiation transform. Or it expected an cTCP encapsulated packet but it received a non-cTCP packet. There may simply be a policy setup error on the peer. Some might consider this a hostile event.	-	"Contact the peer's administrator to compare policy settings."
<del>C</del> <del>P</del> <del>C</del> <del>D</del> <del>K</del> <del>I</del> <del>N</del> <del>C</del> <del>T</del> <del>P</del> <del>W</del> <del>R</del> <del>N</del> <del>I</del> <del>N</del> <del>G</del>	4-Warning	Rec'd packet has invalid cTCP wrapper protocol.\n \tencryptoflags = [hec] sa->udp_wrapper_support = [dec] transform = [hec]	Rec'd packet either cTCP encapsulated but is not correct negotiation transform. Or it expected an cTCP encapsulated packet but it received a non-cTCP packet. There may simply be a policy setup error on the peer. Some might consider this a hostile event.	-	"Contact the peer's administrator to compare policy settings."
<del>C</del> <del>P</del> <del>C</del> <del>D</del> <del>K</del> <del>I</del> <del>N</del> <del>D</del> <del>E</del> <del>N</del> <del>T</del> <del>I</del> <del>T</del> <del>I</del> <del>E</del>	4-Warning	[chars]\n \tip dest_addr= [node]src_addr= [node]prot= [dec]\n	Decapsulated IPSEC packet not matching negotiated identity. The peer is sending other traffic through this SA. It may be due to an SA selection error by the peer. Some might consider this a hostile event.	-	"Contact the peer's administrator to compare policy settings."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CR</del> <del>P</del> <del>R</del> <del>C</del> <del>D</del> <del>K</del> <del>I</del> <del>N</del> <del>D</del> <del>E</del> <del>N</del> <del>I</del> <del>A</del> <del>L</del>	4-Warning	[chars]\n \tip dest_addr= [node]src_addr= [node]prot= [dec]\n	Decapsulated IPSEC packet not matching negotiated identity The peer is sending other traffic through this SA. It may be due to an SA selection error by the peer. Some might consider this a hostile event.	-	"Contact the peer's administrator to compare policy settings."
<del>CR</del> <del>P</del> <del>R</del> <del>C</del> <del>D</del> <del>K</del> <del>I</del> <del>N</del> <del>D</del> <del>E</del> <del>N</del> <del>I</del> <del>A</del> <del>L</del>	4-Warning	ipsec check access: identity not allowed by ACL\n \tip dest_addr= [node]src_addr= [node]prot= [dec]\n	After all is said and done the decaps packet fails the ACL check The peer is sending other traffic through this SA. It may be due to an SA selection error by the peer. Some might consider this a hostile event.	-	"Contact the peer's administrator to compare policy settings."
<del>CR</del> <del>P</del> <del>R</del> <del>C</del> <del>D</del> <del>K</del> <del>I</del> <del>N</del> <del>D</del> <del>E</del> <del>N</del> <del>I</del> <del>A</del> <del>L</del>	4-Warning	ipsec check access: identity not allowed by ACL\n \tip dest_addr= [node]src_addr= [node]prot= [dec]\n	After all is said and done the decaps packet fails the ACL check The peer is sending other traffic through this SA. It may be due to an SA selection error by the peer. Some might consider this a hostile event.	-	"Contact the peer's administrator to compare policy settings."
<del>CR</del> <del>P</del> <del>R</del> <del>C</del> <del>D</del> <del>K</del> <del>I</del> <del>N</del> <del>D</del> <del>E</del> <del>N</del> <del>I</del> <del>A</del> <del>L</del>	4-Warning	decapsulate: packet missing [chars] destadr=[node]actual prot=[dec]	Rec'd IPSEC packet missing an expected AH or ESP header The peer is sending packets that don't match the negotiated security policy. Some might consider this a hostile event.	-	"Contact the peer's administrator."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CR</del> PICRCVDKTNVSI	4-Warning	decapsulate: packet missing [chars] destadr=[node]actual prot=[dec]	Rec'd IPSEC packet missing an expected AH or ESP header The peer is sending packets that don't match the negotiated security policy. Some might consider this a hostile event.	-	"Contact the peer's administrator."
<del>CR</del> PICRCVDKTNVSI	4-Warning	decaps: rec'd IPSEC packet has invalid spi for destaddr=[chars] prot=[dec] <del>spi=0[hex]nodeaddr=[chars]</del>	Rec'd IPSEC packet specifies SPI that doesn't exist in SADB. This may be a temporary condition due to slight differences in aging of SAs between the IPSEC peers or it may be because the local SAs have been cleared. It may also be because of bogus packets sent by the IPSEC peer. Some might consider this a hostile event.	-	"If the local SAs have been cleared the peer may not know" " this. In this case if a new connection is established" " from the local router the two peers may reestablish " " successfully. Otherwise if the problem occurs for more than " " a brief period either attempt to establish a new connection " " or contact the peer's administrator."
<del>CR</del> PICRCVDKTNVSI	4-Warning	decaps: rec'd IPSEC packet has invalid spi for destaddr=[chars] prot=[dec] <del>spi=0[hex]nodeaddr=[chars]</del>	Rec'd IPSEC packet specifies SPI that doesn't exist in SADB. This may be a temporary condition due to slight differences in aging of SAs between the IPSEC peers or it may be because the local SAs have been cleared. It may also be because of bogus packets sent by the IPSEC peer. Some might consider this a hostile event.	-	"If the local SAs have been cleared the peer may not know" " this. In this case if a new connection is established" " from the local router the two peers may reestablish " " successfully. Otherwise if the problem occurs for more than " " a brief period either attempt to establish a new connection " " or contact the peer's administrator."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRPFCRCDKINUDPWRAPR</del>	4-Warning	Rec'd packet has invalid udp wrapper protocol.\n\cryptoflags = [hec] sa->udp_wrapper_support = [dec] transform = [hec]	Rec'd packet either udp encapsulated but is not correct negotiation transform. Or it expected an udp encapsulated packet but it received a non-udp packet. There may simply be a policy setup error on the peer. Some might consider this a hostile event.	-	"Contact the peer's administrator to compare policy settings."
<del>CRPFCRCDKINUDPWRAPR</del>	4-Warning	Rec'd packet has invalid udp wrapper protocol.\n\cryptoflags = [hec] sa->udp_wrapper_support = [dec] transform = [hec]	Rec'd packet either udp encapsulated but is not correct negotiation transform. Or it expected an udp encapsulated packet but it received a non-udp packet. There may simply be a policy setup error on the peer. Some might consider this a hostile event.	-	"Contact the peer's administrator to compare policy settings."
<del>CRPFCRCDKIMACR</del>	4-Warning	decrypt: mac verify failed for connection id=[dec][chars]	MAC verify processing failed. This may be due to the use of the wrong key by either party during the MAC calculations. Some might consider this a hostile event.	-	"Contact the peer's administrator."
<del>CRPFCRCDKIMACR</del>	4-Warning	decrypt: mac verify failed for connection id=[dec][chars]	MAC verify processing failed. This may be due to the use of the wrong key by either party during the MAC calculations. Some might consider this a hostile event.	-	"Contact the peer's administrator."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRIPSEC</del> CDKIMGENR	4-Warning	decapsulate: packet has bad [chars] length destadr=[node]prot=[dec] len=[dec]	Rec'd IPSEC packet is malformed: possibly encapsulation error? The peer is sending malformed packets. It may be due to a decryption error. Some might consider this a hostile event.	-	"Contact the peer's administrator."
<del>CRIPSEC</del> CDKIMGENR	4-Warning	decapsulate: packet has bad [chars] length destadr=[node]prot=[dec] len=[dec]	Rec'd IPSEC packet is malformed: possibly encapsulation error? The peer is sending malformed packets. It may be due to a decryption error. Some might consider this a hostile event.	-	"Contact the peer's administrator."
<del>CRIPSEC</del> CDKINOTISC	4-Warning	Rec'd packet not an IPSEC packet. ip vrf/dest_addr=[chars]/[node]src_addr=[node]prot= [dec]	Rec'd packet matched crypto map ACL but is not IPSEC-encapsulated. IPSEC Peer is sending unencapsulated packets. There may simply be a policy setup error on the peer. Some might consider this a hostile event.	-	"Contact the peer's administrator to compare policy settings."
<del>CRIPSEC</del> CDKINOTISC	4-Warning	Rec'd packet not an IPSEC packet. ip vrf/dest_addr=[chars]/[node]src_addr=[node]prot= [dec]	Rec'd packet matched crypto map ACL but is not IPSEC-encapsulated. IPSEC Peer is sending unencapsulated packets. There may simply be a policy setup error on the peer. Some might consider this a hostile event.	-	"Contact the peer's administrator to compare policy settings."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRPCHCDKINOTISCV6</del>	4-Warning	Rec'd packet not an IPSEC packet. ip vrf/dest_addr= [chars]/[chars] src_addr= [chars] prot= [dec]	-	-	-
<del>CRPCHCDKINOTISCV6</del>	4-Warning	Rec'd packet not an IPSEC packet. ip vrf/dest_addr= [chars]/[chars] src_addr= [chars] prot= [dec]	-	-	-
<del>CRPCHREMCRPIOMAPIS</del>	4-Warning	\nPlease recheck your crypto map [chars].	Transform set entry removed from crypto-map as it is no longer valid with hardware crypto engine enabled.	-	"Create and apply valid transform set to cryptomap"
<del>CRPCHREMCRPIOMAPIS</del>	4-Warning	\nPlease recheck your crypto map [chars].	Transform set entry removed from crypto-map as it is no longer valid with hardware crypto engine enabled.	-	"Create and apply valid transform set to cryptomap"
<del>CRPCHCKENESDEACTMID</del>	4-Warning	RSA keypairs from token [chars] and associated IPSEC sessions being deactivated now	Router RSA keypairs and associated IPSEC sessions are being deactivated because the token containing them was removed	pki	"Re-insert the crypto token"
<del>CRPCHCKENESDEACTMID</del>	4-Warning	RSA keypairs from token [chars] and associated IPSEC sessions being deactivated now	Router RSA keypairs and associated IPSEC sessions are being deactivated because the token containing them was removed	pki	"Re-insert the crypto token"
<del>CRPCHCKENKEYTMOUT</del>	4-Warning	RSA keypairs for token [chars] and associated IPSEC sessions will be deactivated in [dec] seconds	Router RSA keypairs and associated IPSEC sessions will be deactivated when the timeout expires	pki	"Re-insert the crypto token before the timeout expires"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CRYPTO4CKEYTIMEOUT	4-Warning	RSA keypairs for token [chars] and associated IPSEC sessions will be deactivated in [dec] seconds	Router RSA keypairs and associated IPSEC sessions will be deactivated when the timeout expires	pki	"Re-insert the crypto token before the timeout expires"
CRYPTO4RANNOISIPRED	4-Warning	\nTransform [chars] is not supported with the current hardware configuration.\nGlobal transform [chars] will be deleted.	System configuration modified.Some ipsec transforms which were earlier valid with software crypto are no longer valid now after switching hardware crypto.	-	"Create valid transform sets & update cryptomaps"
CRYPTO4RANNOISIPRED	4-Warning	\nTransform [chars] is not supported with the current hardware configuration.\nGlobal transform [chars] will be deleted.	System configuration modified.Some ipsec transforms which were earlier valid with software crypto are no longer valid now after switching hardware crypto.	-	"Create valid transform sets & update cryptomaps"
CRYPTO5MCONNEXTSR	5-Notice	GM is connecting to next key server from the list	Connect to next key server	ipsec-mcast	LOG_STD_ACTION
CRYPTO5MCONNEXTSR	5-Notice	GM is connecting to next key server from the list	Connect to next key server	ipsec-mcast	LOG_STD_ACTION
CRYPTO5GM_REGISTER	5-Notice	Start registration to KS [chars] for group [chars] using address [chars] fvrf [chars] ivrf [chars]	Start registration for one group	ipsec-mcast	LOG_STD_ACTION
CRYPTO5GM_REGISTER	5-Notice	Start registration to KS [chars] for group [chars] using address [chars] fvrf [chars] ivrf [chars]	Start registration for one group	ipsec-mcast	LOG_STD_ACTION
CRYPTO5IKE_SA_HA_STATUS	5-Notice	IKE sa's if any for vip [node]will change from [chars] to [chars]	This is a notification message for crypto ike sa's changing their HA status	ipsec-ha	"No action is required"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CRYP</del> IKE_SA_HA_STAUS	5-Notice	IKE sa's if any for vip [node] will change from [chars] to [chars]	This is a notification message for crypto ike sa's changing their HA status	ipsec-ha	"No action is required"
<del>CRYP</del> IKE_V2_SESSION_STAUS	5-Notice	Crypto tunnel v2 is [chars]. Peer [chars]:[dec] [chars] [chars] [chars] [chars] [chars]	This is a notification message for IPSEC tunnel status	-	"No action is required"
<del>CRYP</del> IKE_V2_SESSION_STAUS	5-Notice	Crypto tunnel v2 is [chars]. Peer [chars]:[dec] [chars] [chars] [chars] [chars] [chars]	This is a notification message for IPSEC tunnel status	-	"No action is required"
<del>CRYP</del> ISAKMP_AGGRESSIVE_MODE_DISABLED	5-Notice	Unable to initiate or respond to Aggressive Mode while disabled	The router is configured not to accept or respond to ISAKMP aggressive mode with any peer	ipsec-isakmp	"If you did not intend to disable aggressive-mode" " then remove the command"
<del>CRYP</del> ISAKMP_AGGRESSIVE_MODE_DISABLED	5-Notice	Unable to initiate or respond to Aggressive Mode while disabled	The router is configured not to accept or respond to ISAKMP aggressive mode with any peer	ipsec-isakmp	"If you did not intend to disable aggressive-mode" " then remove the command"
<del>CRYP</del> ISAKMP_PEER_CERTIFICATE_RECEIVED	5-Notice	Certificate received from [chars] is bad: [chars]	The certificate given by remote peer has either been revoked or expired certificate invalid or the signature check on the	-	"Contact the CA of the remote peer. Possibly bad CA certificate."
<del>CRYP</del> ISAKMP_PEER_CERTIFICATE_RECEIVED	5-Notice	Certificate received from [chars] is bad: [chars]	The certificate given by remote peer has either been revoked or expired certificate invalid or the signature check on the	-	"Contact the CA of the remote peer. Possibly bad CA certificate."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CRYPTOIKEMPSETUP_FAILURE	5-Notice	IKE SETUP FAILED for local:[chars] local_id:[chars] remote:[chars] remote_id:[chars] IKE profile:[chars] fvrf:[chars] fail_reason:[chars] fail_class_cnt:[node]	IKE Negotiation Failed.	-	"LOG_STD_ACTION"
CRYPTOIKEMPSETUP_FAILURE	5-Notice	IKE SETUP FAILED for local:[chars] local_id:[chars] remote:[chars] remote_id:[chars] IKE profile:[chars] fvrf:[chars] fail_reason:[chars] fail_class_cnt:[node]	IKE Negotiation Failed.	-	"LOG_STD_ACTION"
CRYPTOIPSEC_FAILURE	5-Notice	IPsec setup has failed local_ip:[chars] remote_ip:[chars] fail_reason:[chars]	IPSEC Negotiation has failed	-	"LOG_STD_ACTION"
CRYPTOIPSEC_FAILURE	5-Notice	IPsec setup has failed local_ip:[chars] remote_ip:[chars] fail_reason:[chars]	IPSEC Negotiation has failed	-	"LOG_STD_ACTION"
CRYPTOIPSEC_SA_HA_STATUS	5-Notice	IPSec sa's if any for vip [node] will change from [chars] to [chars]	This is a notification message for crypto ipsec sa's changing their HA status	ipsec-ha	"No action is required"
CRYPTOIPSEC_SA_HA_STATUS	5-Notice	IPSec sa's if any for vip [node] will change from [chars] to [chars]	This is a notification message for crypto ipsec sa's changing their HA status	ipsec-ha	"No action is required"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CRYPSEC_SETUP_FAILURE	5-Notice	IPSEC SETUP FAILED for local:[chars] local_id:[chars] remote:[chars] remote_id:[chars] IKE profile:[chars] fvrf:[chars] fail_reason:[chars] fail_class_cnt:[node]	IPSec Negotiation Failed.	-	"LOG_STD_ACTION"
CRYPSEC_SETUP_FAILURE	5-Notice	IPSEC SETUP FAILED for local:[chars] local_id:[chars] remote:[chars] remote_id:[chars] IKE profile:[chars] fvrf:[chars] fail_reason:[chars] fail_class_cnt:[node]	IPSec Negotiation Failed.	-	"LOG_STD_ACTION"
CRYPSEC_UNL_RHICD	5-Notice	[chars] local: [chars] - remote: [chars]: Selected IKE encryption algorithm \ [chars]-[dec] \ is	IPSec SA negotiation rejected due to strong IKE SA enforcement.	-	"LOG_STD_ACTION"
CRYPSEC_UNL_RHICD	5-Notice	[chars] local: [chars] - remote: [chars]: Selected IKE encryption algorithm \ [chars]-[dec] \ is	IPSec SA negotiation rejected due to strong IKE SA enforcement.	-	"LOG_STD_ACTION"
CRYP05SELF_TEST_END	5-Notice	Crypto [chars] self-test completed successfully\n All tests passed.	The device has completed the Crypto algorithms self-tests.\n All of the self-tests have passed.	-	"Informational only. No action required."
CRYP05SELF_TEST_END	5-Notice	Crypto [chars] self-test completed successfully\n All tests passed.	The device has completed the Crypto algorithms self-tests.\n All of the self-tests have passed.	-	"Informational only. No action required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRYPTO</del> SESSION_STATUS	5-Notice	Crypto tunnel is [chars]. Peer [chars]:[dec] [chars] [chars] [chars] [chars] [chars] [chars] [chars] [chars]	-	-	-
<del>CRYPTO</del> SESSION_STATUS	5-Notice	Crypto tunnel is [chars]. Peer [chars]:[dec] [chars] [chars] [chars] [chars] [chars] [chars] [chars] [chars]	-	-	-
CRYPTO-6-AUTOGEN	6-Information	Generated new [dec] bit key pair	Auto-Enroll has generated a new router key pair	-	"No action required. Informational message"
CRYPTO-6-AUTOGEN	6-Information	Generated new [dec] bit key pair	Auto-Enroll has generated a new router key pair	-	"No action required. Informational message"
<del>CRYPTO</del> CET_END_OF_LIF	6-Information	CET connection msg in an IPSEC_ONLY_IMAGE	CET has been End-of-lifed in IOS release 12.21	CSCds60123	""
<del>CRYPTO</del> CET_END_OF_LIF	6-Information	CET connection msg in an IPSEC_ONLY_IMAGE	CET has been End-of-lifed in IOS release 12.21	CSCds60123	""
<del>CRYPTO</del> EVPN_CONN_DOWN	6-Information	[chars]	Ezvpn connection is being closed. The IPsec and IKE security associations will also be brought down along with it.	-	""
<del>CRYPTO</del> EVPN_CONN_DOWN	6-Information	[chars]	Ezvpn connection is being closed. The IPsec and IKE security associations will also be brought down along with it.	-	""

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRYPTOZM_CONNCDNLP</del>	6-Information	[chars]	Ezvpn connection is up for the client mentioned. Both IPsec and IKE security Associations are up now.	-	""
<del>CRYPTOZM_CONNCDNLP</del>	6-Information	[chars]	Ezvpn connection is up for the client mentioned. Both IPsec and IKE security Associations are up now.	-	""
CRYPTO6GDOI_ON_OFF	6-Information	GDOI is [chars]	The ISAKMP/gdoi process has been switched on or off either by CLI or because no GDOI crypto map or Key Server is applied to any interface.	ipsec-getvpn	"No action required."
CRYPTO6GDOI_ON_OFF	6-Information	GDOI is [chars]	The ISAKMP/gdoi process has been switched on or off either by CLI or because no GDOI crypto map or Key Server is applied to any interface.	ipsec-getvpn	"No action required."
<del>CRYPTOKE_TED_BADRPLY</del>	6-Information	Received TED reply that did not correspond to a TED probe	Rec'd TED reply that does not match a TED probe we currently have outstanding. This may be a one time occurrence due to the TED reply being delayed. It may also be because of ill-formed packets sent by the peer. Some might consider this a hostile event.	-	"If the problem occurs more than once contact the peer's" " administrator."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CRYPICKETEDBADREHY	6-Information	Received TED reply that did not correspond to a TED probe	Rec'd TED reply that does not match a TED probe we currently have outstanding. This may be a one time occurrence due to the TED reply being delayed. It may also be because of ill-formed packets sent by the peer. Some might consider this a hostile event.	-	"If the problem occurs more than once contact the peer's " administrator."
CRYPICKMPADKEYIAL	6-Information	Unable to add public key for [chars] [node]i to key ring	Keys are stored in keyrings on the router. An attempt to add another key to the ring failed.	-	"Check local key rings. This is probably due to other failures."
CRYPICKMPADKEYIAL	6-Information	Unable to add public key for [chars] [node]i to key ring	Keys are stored in keyrings on the router. An attempt to add another key to the ring failed.	-	"Check local key rings. This is probably due to other failures."
CRYPICKMPAUTHIAL	6-Information	Authentication method [dec] failed with host [chars]	The IKE process was unable to authenticate its security Association with its remote peer.	-	"Contact the remote peer's administrator."
CRYPICKMPAUTHIAL	6-Information	Authentication method [dec] failed with host [chars]	The IKE process was unable to authenticate its security Association with its remote peer.	-	"Contact the remote peer's administrator."
CRYPICKMPBADCERTUSE	6-Information	Certificate for peer at [chars] prohibits attempted use [chars].	X.509v3 certificates can contain usage restrictions. These can restrict use of the certificate only for signatures or only for key exchange encryption. The peer attempted to	-	"Contact the remote peer and the remote peer's CA"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CRYP</del> <del>KMP</del> <del>BAD</del> <del>CERT</del> <del>USE</del>	6-Information	Certificate for peer at [chars] prohibits attempted use [chars].	X.509v3 certificates can contain usage restrictions. These can restrict use of the certificate only for signatures or only for key exchange encryption. The peer attempted to	-	"Contact the remote peer and the remote peer's CA"
<del>CRYP</del> <del>KMP</del> <del>BAD</del> <del>DOI</del> <del>NOIFY</del>	6-Information	DOI of [dec] in notify message from [chars]	The DOI field in notify messages give the receiver a context in which to understand the message being notified. This DOI value is not understood and the message therefore cannot be understood.	-	"If this situation persists contact the remote peer."
<del>CRYP</del> <del>KMP</del> <del>BAD</del> <del>DOI</del> <del>NOIFY</del>	6-Information	DOI of [dec] in notify message from [chars]	The DOI field in notify messages give the receiver a context in which to understand the message being notified. This DOI value is not understood and the message therefore cannot be understood.	-	"If this situation persists contact the remote peer."
<del>CRYP</del> <del>KMP</del> <del>BAD</del> <del>DOI</del> <del>SA</del>	6-Information	DOI value [dec] from SA offer from [chars] is invalid	The DOI field of an SA offer defines how to parse the fields SAs with an unknown DOI cannot be parsed	-	"If this situation persists contact the remote peer's administrator"
<del>CRYP</del> <del>KMP</del> <del>BAD</del> <del>DOI</del> <del>SA</del>	6-Information	DOI value [dec] from SA offer from [chars] is invalid	The DOI field of an SA offer defines how to parse the fields SAs with an unknown DOI cannot be parsed	-	"If this situation persists contact the remote peer's administrator"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CR</del> PKMPCRYPTFAILURE	6-Information	IKE connection id [dec] unable to [chars] packet	Encryption or decryption on a particular IKE thread failed.	-	"Contact remote peer"
<del>CR</del> PKMPCRYPTFAILURE	6-Information	IKE connection id [dec] unable to [chars] packet	Encryption or decryption on a particular IKE thread failed.	-	"Contact remote peer"
<del>CR</del> PKMPCMODEFAILURE	6-Information	Processing of [chars] mode failed with peer at [chars]	Negotiation with the remote peer failed.	-	"If this situation persists contact the remote peer"
<del>CR</del> PKMPCMODEFAILURE	6-Information	Processing of [chars] mode failed with peer at [chars]	Negotiation with the remote peer failed.	-	"If this situation persists contact the remote peer"
<del>CR</del> PKMPCIDRADMATCH	6-Information	NOT ERROR BUT WARNING ONLYID of [chars] type [dec] and certificate addr with [chars]	ISAKMP entities assume an identity to inform the peer of who or what they are. The claimed identity did not match the information gleaned from the ip address of the peer's certificate.	-	"Contact the remote peer if this situation persists"
<del>CR</del> PKMPCIDRADMATCH	6-Information	NOT ERROR BUT WARNING ONLYID of [chars] type [dec] and certificate addr with [chars]	ISAKMP entities assume an identity to inform the peer of who or what they are. The claimed identity did not match the information gleaned from the ip address of the peer's certificate.	-	"Contact the remote peer if this situation persists"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CR</del> <del>IP</del> <del>ND</del> <del>ERR</del> <del>DN</del> <del>MACH</del>	6-Information	NOT ERROR BUT WARNING ONLYID of [chars] type [dec] and certificate DN with [chars]	ISAKMP entities assume an identity to inform the peer of who or what they are. The claimed identity did not match the information gleaned from the distinguished name of the peer's certificate.	-	"Contact the remote peer if this situation persists"
<del>CR</del> <del>IP</del> <del>ND</del> <del>ERR</del> <del>DN</del> <del>MACH</del>	6-Information	NOT ERROR BUT WARNING ONLYID of [chars] type [dec] and certificate DN with [chars]	ISAKMP entities assume an identity to inform the peer of who or what they are. The claimed identity did not match the information gleaned from the distinguished name of the peer's certificate.	-	"Contact the remote peer if this situation persists"
<del>CR</del> <del>IP</del> <del>ND</del> <del>ERR</del> <del>DN</del> <del>MACH</del>	6-Information	NOT ERROR BUT WARNING ONLYID of [chars] type [dec] and certificate fqdn with [chars]	ISAKMP entities assume an identity to inform the peer of who or what they are. The claimed identity did not match the information gleaned from the fqdn of the peer's certificate.	-	"Contact the remote peer if this situation persists"
<del>CR</del> <del>IP</del> <del>ND</del> <del>ERR</del> <del>DN</del> <del>MACH</del>	6-Information	NOT ERROR BUT WARNING ONLYID of [chars] type [dec] and certificate fqdn with [chars]	ISAKMP entities assume an identity to inform the peer of who or what they are. The claimed identity did not match the information gleaned from the fqdn of the peer's certificate.	-	"Contact the remote peer if this situation persists"





Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CR</del> PKMPOLICYDHAUI	6-Information	Using ISAKMP Default policies	Since the user has not configured any ISAKMP policies and default ISAKMP policies are enabled then use default ISAKMP policies for negotiation	-	""
<del>CR</del> PKMPSANOTAUH	6-Information	Cannot accept Quick Mode exchange from [chars] if SA is not authenticated!	The IKE security association with the remote peer was not authenticated yet the peer attempted to begin a Quick Mode exchange. This exchange must only be done with an authenticated security association	-	"Contact remote peer"
<del>CR</del> PKMPSANOTAUH	6-Information	Cannot accept Quick Mode exchange from [chars] if SA is not authenticated!	The IKE security association with the remote peer was not authenticated yet the peer attempted to begin a Quick Mode exchange. This exchange must only be done with an authenticated security association	-	"Contact remote peer"
<del>CR</del> PKMPSANOTIHRD	6-Information	Remote peer [chars] responded with attribute [chars] not offered or changed	IKE peers negotiate policy by the initiator offering a list of possible alternate protection suites. The responder responded with one that the initiator did not offer	-	"Contact the remote peer"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRPKMPSA</del> NOCHRD	6-Information	Remote peer [chars] responded with attribute [chars] not offered or changed	IKE peers negotiate policy by the initiator offering a list of possible alternate protection suites. The responder responded with one that the initiator did not offer	-	"Contact the remote peer"
<del>CRPKM</del> PUNEXHCE	6-Information	IKE peer at [chars] sent a message with unknown exchange [dec]	IKE preforms actions on messages based on defined exchanges. The message received had an unknown exchange.	-	"Contact the remote peer's administrator"
<del>CRPKM</del> PUNEXHCE	6-Information	IKE peer at [chars] sent a message with unknown exchange [dec]	IKE preforms actions on messages based on defined exchanges. The message received had an unknown exchange.	-	"Contact the remote peer's administrator"
<del>CRPKM</del> ISCSNGDHALT	6-Information	IPSec is using default transforms	No IPSec transform-set defined and default policy is enabled. Therefore default policies are being proposed to the peer	ipsec-core	"To avoid using IPSec default policy" "reconfigure a transform set to be used for " "this crypto session"
<del>CRPKM</del> ISCSNGDHALT	6-Information	IPSec is using default transforms	No IPSec transform-set defined and default policy is enabled. Therefore default policies are being proposed to the peer	ipsec-core	"To avoid using IPSec default policy" "reconfigure a transform set to be used for " "this crypto session"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRYPTO</del> IPSec_MNUA_DEE	6-Information	IKE SA manually deleted. Do 'clear crypto sa peer [chars]' to manually clear IPsec SA's covered by this IKE SA.	The IKE SA was deleted by user command. However keepalives this connection are enabled and IPsec SA's covered by this IKE SA still exist. Since this IKE SA is now deleted these IPsec SA's have no IKE SA covering them. The recommended action is to manually delete this IPsec SA's.	ipsec	"Use parser command "clear crypto sa" to clear "IPsec SA's."
<del>CRYPTO</del> IPSec_MNUA_DEE	6-Information	IKE SA manually deleted. Do 'clear crypto sa peer [chars]' to manually clear IPsec SA's covered by this IKE SA.	The IKE SA was deleted by user command. However keepalives this connection are enabled and IPsec SA's covered by this IKE SA still exist. Since this IKE SA is now deleted these IPsec SA's have no IKE SA covering them. The recommended action is to manually delete this IPsec SA's.	ipsec	"Use parser command "clear crypto sa" to clear "IPsec SA's."
<del>CRYPTO</del> ISAKMP_ON_OFF	6-Information	ISAKMP is [chars]	The ISAKMP process has been switched on or off either by CLI or because no crypto map or EzVPN configuration is applied to any interface.	ipsec-isakmp	"No action required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CRYPTO6ISAKMP_CN_CHE	6-Information	ISAKMP is [chars]	The ISAKMP process has been switched on or off either by CLI or because no crypto map or EzVPN configuration is applied to any interface.	ipsec-isakmp	"No action required."
CRYPTO6IQMRSUBRE	6-Information	Sum of priority class bandwidth exceeds crypto engine's throughput for small packets crypto b/w=[node]kbps allocated b/w=[node]kbps.	The crypto engine may be oversubscribed by priority class traffic. This happens when the user tries to provision more priority class bandwidth than what the crypto engine can handle. If each class is sending at its max rate some priority packets may be dropped	-	"Reduce the priority class bandwidth or reduce" "the number of priority classes in the policy-map"
CRYPTO6IQMRSUBRE	6-Information	Sum of priority class bandwidth exceeds crypto engine's throughput for small packets crypto b/w=[node]kbps allocated b/w=[node]kbps.	The crypto engine may be oversubscribed by priority class traffic. This happens when the user tries to provision more priority class bandwidth than what the crypto engine can handle. If each class is sending at its max rate some priority packets may be dropped	-	"Reduce the priority class bandwidth or reduce" "the number of priority classes in the policy-map"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CRYPTO6PRINTABORT	6-Information	[chars] caused early termination of show output[chars]	While showing a list the list was changed or elements changed. This can happen if SA's are re-negotiated at the time the show-command was paused or if someone reconfigured or cleared SA's amongst other things. This is not an error but a side-effect of a dynamic system.	ipsec	"In general this is merely a warning that the " "output from the show command is most likely incomplete. " "Re-running the show-command should provide the newest " "information. On a busy system with ever-changing SA's " "this may appear frequently."
CRYPTO6PRINTABORT	6-Information	[chars] caused early termination of show output[chars]	While showing a list the list was changed or elements changed. This can happen if SA's are re-negotiated at the time the show-command was paused or if someone reconfigured or cleared SA's amongst other things. This is not an error but a side-effect of a dynamic system.	ipsec	"In general this is merely a warning that the " "output from the show command is most likely incomplete. " "Re-running the show-command should provide the newest " "information. On a busy system with ever-changing SA's " "this may appear frequently."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CRPDRNGSEEDKEYERR</del>	6-Information	Pseudo-random number generator seed and seed key was identical	The X9.17 random number specification requires us to check for the same value appearing as the seed and the seed key. This message indicates that the condition was discovered.	ipsec	"The X9.17 random number will occasionally produce this condition and this is not a problem. However if this message occurs frequently the system should be manually reloaded. If the message is persistent across reloads copy the error message exactly as it appears and report it to your technical support representative."
<del>CRPDRNGSEEDKEYERR</del>	6-Information	Pseudo-random number generator seed and seed key was identical	The X9.17 random number specification requires us to check for the same value appearing as the seed and the seed key. This message indicates that the condition was discovered.	ipsec	"The X9.17 random number will occasionally produce this condition and this is not a problem. However if this message occurs frequently the system should be manually reloaded. If the message is persistent across reloads copy the error message exactly as it appears and report it to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CRYPTO-6-RANDOM	6-Information	A pseudo-random number was generated twice in succession by [chars]	A pseudo-random number generator produced the same number twice\n\n in succession.	ipsec	"Under normal circumstances a pseudo-random number generator will\n\n occasionally produce the same number twice in succession and this\n\n is not a problem. However if this message occurs frequently the \n\n system should be manually reloaded. If the message is persistent \n\n across reloads copy the error message exactly as it appears and \n\n report it to your technical support representative."
CRYPTO-6-RANDOM	6-Information	A pseudo-random number was generated twice in succession by [chars]	A pseudo-random number generator produced the same number twice\n\n in succession.	ipsec	"Under normal circumstances a pseudo-random number generator will\n\n occasionally produce the same number twice in succession and this\n\n is not a problem. However if this message occurs frequently the \n\n system should be manually reloaded. If the message is persistent \n\n across reloads copy the error message exactly as it appears and \n\n report it to your technical support representative."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRYPTO6</del> SELF_TEST_RESULT	6-Information	Self test info: [chars]	This audit prompt the results of Cryptographical selftests	-	"This message is for information only. No action is" " required."
<del>CRYPTO6</del> SELF_TEST_RESULT	6-Information	Self test info: [chars]	This audit prompt the results of Cryptographical selftests	-	"This message is for information only. No action is" " required."
<del>CRYPTO6</del> CICKENADMINCHGN	6-Information	Cryptographic Token [chars] ADMIN PIN change Successful	The cryptographic token has accepted the new administrator PIN offered by the router	-	"Informational message only. No action required."
<del>CRYPTO6</del> CICKENADMINCHGN	6-Information	Cryptographic Token [chars] ADMIN PIN change Successful	The cryptographic token has accepted the new administrator PIN offered by the router	-	"Informational message only. No action required."
<del>CRYPTO6</del> CICKENADMINLOGN	6-Information	Cryptographic Token [chars] ADMIN Login Successful	The cryptographic token has accepted the administrator PIN offered by the router	-	"Informational message only. No action required."
<del>CRYPTO6</del> CICKENADMINLOGN	6-Information	Cryptographic Token [chars] ADMIN Login Successful	The cryptographic token has accepted the administrator PIN offered by the router	-	"Informational message only. No action required."
<del>CRYPTO6</del> CICKENCHANGE	6-Information	Cryptographic Token [chars] PIN change Successful	The cryptographic token has accepted the new PIN offered by the router	-	"Informational message only. No action required."
<del>CRYPTO6</del> CICKENCHANGE	6-Information	Cryptographic Token [chars] PIN change Successful	The cryptographic token has accepted the new PIN offered by the router	-	"Informational message only. No action required."
<del>CRYPTO6</del> CICKENINSERIED	6-Information	Cryptographic token [chars] inserted in [chars]	A cryptographic token has been detected	-	"Informational message only. No action required."
<del>CRYPTO6</del> CICKENINSERIED	6-Information	Cryptographic token [chars] inserted in [chars]	A cryptographic token has been detected	-	"Informational message only. No action required."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CRYPTO6TOKENLOGIN	6-Information	Cryptographic Token [chars] Login Successful	The cryptographic token has accepted the PIN offered by the router	-	"Informational message only. No action required."
CRYPTO6TOKENLOGIN	6-Information	Cryptographic Token [chars] Login Successful	The cryptographic token has accepted the PIN offered by the router	-	"Informational message only. No action required."
CRYPTO6TOKENLOGOUT	6-Information	Cryptographic Token [chars] Logout Successful	The router has logged out from the cryptographic token	-	"Informational message only. No action required."
CRYPTO6TOKENLOGOUT	6-Information	Cryptographic Token [chars] Logout Successful	The router has logged out from the cryptographic token	-	"Informational message only. No action required."
CRYPTO6ICKENREMOVED	6-Information	Cryptographic token [chars] removed from [chars]	A cryptographic token has been detected	-	"Informational message only. No action required."
CRYPTO6ICKENREMOVED	6-Information	Cryptographic token [chars] removed from [chars]	A cryptographic token has been detected	-	"Informational message only. No action required."
CRYPTO6ICKENSICREKEY	6-Information	Key [chars] stored on Cryptographic Token [chars] Successfully	A new keypair has been written out to the cryptographic token	-	"Informational message only. No action required."
CRYPTO6ICKENSICREKEY	6-Information	Key [chars] stored on Cryptographic Token [chars] Successfully	A new keypair has been written out to the cryptographic token	-	"Informational message only. No action required."
CRYPTO6ICKENREMOVED	6-Information	Cryptographic Token [chars] re-inserted. removal timeout cancelled	A cryptographic token containing private key files has been re-inserted in time. Router RSA keypairs and associated IPSEC sessions will be NOT be deactivated	-	"Informational message only. No action required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRPGMNTUNNEL</del>	6-Information	Cryptographic Token [chars] re-inserted. removal timeout cancelled	A cryptographic token containing private key files has been re-inserted in time. Router RSA keypairs and associated IPSEC sessions will be NOT be deactivated	-	"Informational message only. No action required."
<del>CRPGMNTUNNEL</del>	6-Information	[chars]	VPN tunnel status.	-	""
<del>CRPGMNTUNNEL</del>	6-Information	[chars]	VPN tunnel status.	-	""
CSG-3-ERROR	3-Error	Module [dec]: [chars]	An error occurred in a CSG module.	csg	LOG_SID_RECUR_ACTION
CSG3RELOADNOTOK	3-Error	CSG ACCOUNTING [chars] reload on module [dec] failed.	Informational message whenever a CSG configuration\n\n is reloaded as a result of power recycling a CSG card.	csg	LOG_SID_NO_ACTION
CSG-4-WARNING	4-Warning	Module [dec]: [chars]	Some possibly undesired event occurred in a CSG module.	csg	LOG_SID_RECUR_ACTION
CSG-6LIRELOADOK	6-Information	CSG LI reload on module [dec] successful	Informational message whenever a CSG LI configuration\n\n is reloaded as a result of power recycling a CSG card.	csg	LOG_SID_NO_ACTION
CSG-6-RELOADOK	6-Information	CSG ACCOUNTING [chars] reload on module [dec] successful	Informational message whenever a CSG configuration\n\n is reloaded as a result of power recycling a CSG card.	csg	LOG_SID_NO_ACTION
CSM_SLB-3-ERROR	3-Error	Module [dec] error: [chars]	An error occurred in a CSM-SLB module.	laminar	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CSM_SLB3IDB_ERROR	3-Error	Unknown error occurred while configuring IDB for CSM-SLB module: [chars].	Unable to configure data path for CSM-SLB card.	laminar	LOG_SID_RECUR_ACTION
CSM_SLB3OUTOFMEM	3-Error	Module [dec] memory error: [chars]	Out of memory condition while downloading SLB configurations onto CSM card.	laminar	LOG_SID_RECUR_ACTION
CSM_SLB3PORTCHANNEL	3-Error	Portchannel allocation failed for module [dec].	Unable to allocate enough portchannel groups for CSM-SLB card.	laminar	LOG_SID_RECUR_ACTION
CSM_SLB3REUNDANCY	3-Error	Module [dec] FT error: [chars]	An error occurred in CSM-SLB fault tolerance.	laminar	LOG_SID_RECUR_ACTION
CSM_SLB-3-RELOAD	3-Error	Module [dec] configuration reload failed: [chars]	Configuration reload of the CSM-SLB card failed.	laminar	LOG_SID_RECUR_ACTION
CSM_SLB-3-SCRIPT	3-Error	Module [dec] script error: [chars]	An error occurred in a CSM-SLB script.	laminar	LOG_SID_RECUR_ACTION
CSM_SLB3UNEXPECTED	3-Error	Module [dec] unexpected error: [chars]	An unexpected error condition occurred on the CSM-SLB card while performing Server Load Balancing.	laminar	LOG_SID_RECUR_ACTION
CSM_SLB3VERSIONMISMATCH	3-Error	Module [dec] image version mismatch RP = [chars] CSM = [chars]: [chars]	Router image and CSM-SLB image do not correspond.	laminar	LOG_SID_RECUR_ACTION
CSM_SLB4ARPCONFIG	4-Warning	Module [dec] ARP configuration error: [chars]	Error creating or removing a static ARP route.	laminar	LOG_SID_RECUR_ACTION
CSM_SLB4DUPLICATED	4-Warning	Module [dec] duplicate ID: [chars]	Same ID was used to create multiple entities.	laminar	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CSM_SLB4ERRPARSING	4-Warning	Module [dec] configuration warning: [chars]	Syntax error in a URL or COOKIE regular expression in SLB configuration.	laminar	LOG_SID_NO_ACTION
CSM_SLB4INVALIDID	4-Warning	Module [dec] invalid ID: [chars]	The entity identified does not exist.	laminar	LOG_SID_NO_ACTION
CSM_SLB4PROBCONF	4-Warning	Module [dec] probe configuration error: [chars]	Health probe configuration failed.	laminar	LOG_SID_NO_ACTION
CSM_SLB4REDUNDANCY_WARN	4-Warning	Module [dec] FT warning: [chars]	Some possibly undesired event occurred in CSM-SLB fault tolerance.	laminar	LOG_SID_RECUR_ACTION
CSM_SLB4REGEXMEM	4-Warning	Module [dec] regular expression memory error: [chars]	A lookup table does not contain enough space to store the configured URL and COOKIE regular expressions. Use 'show ip slb memory' to determine which virtual servers were unable to be configured because of	laminar	LOG_SID_NO_ACTION
CSM_SLB4SCRIPT_WARN	4-Warning	Module [dec] script warning: [chars]	Some possibly undesired event occurred in CSM-SLB scripting.	laminar	LOG_SID_RECUR_ACTION
CSM_SLB4TOPOLOGY	4-Warning	Module [dec] warning: [chars]	There may be a problem with your network topology or configuration.	laminar	LOG_SID_RECUR_ACTION
CSM_SLB4VERMILDCARD	4-Warning	Received CSM-SLB module version wildcard on slot [dec]. Supervisor has version [dec].	User issued a command from the linecard to bypass the safeguard against module version mismatch. As a result configuration may fail.	laminar	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CSM_SLB4-WARNING	4-Warning	Module [dec] warning: [chars]	Some possibly undesired event occurred in a CSM-SLB module.	laminar	LOG_SID_RECUR_ACTION
CSM_SLB6GATEWAYSTATE	6-Information	Module [dec] gateway state changed: [chars]	A gateway changed states.	laminar	LOG_SID_NO_ACTION
CSM_SLB-6-INFO	6-Information	Module [dec] info: [chars]	Some event occurred in a CSM-SLB module.	laminar	LOG_SID_NO_ACTION
CSM_SLB6REDUNDANCYNO	6-Information	Module [dec] FT info: [chars]	Some event occurred in CSM-SLB fault tolerance.	laminar	LOG_SID_NO_ACTION
CSM_SLB6SERVERSTATE	6-Information	Module [dec] server state changed: [chars]	A real server changed states failed or recovered. Possible causes might be configuration changes arp checks or health probes.	laminar	LOG_SID_NO_ACTION
CSM_SLB6SCRIPT_INFO	6-Information	Module [dec] script info: [chars]	Some event occurred in CSM-SLB scripting.	laminar	LOG_SID_NO_ACTION
CSM_VOICE3ADDNIRREAL	3-Error	The Voice Telephony Service Provider has rejected our\n request to add this voice interface [dec]:[dec]	The voice software was unable to report a new signaling\n interface to the Voice Telephony Service Provider	as	LOG_SID_SH_TIECH_ACTION
CSM_VOICE3ADDNIRREAL	3-Error	The Voice Telephony Service Provider has rejected our\n request to add this voice interface [dec]/[dec]:[dec]	The voice software was unable to report a new signaling\n interface to the Voice Telephony Service Provider	das	LOG_SID_SH_TIECH_ACTION
CSM_VOICE3MALLOC	3-Error	No memory is available to build any internal data \n structure for the voice software.	The voice software was unable allocate memory to build \n any internal data structures. The system may be \n out of memory.	as	LOG_SID_SH_TIECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CSM_VOICE3-MALLOC	3-Error	No memory is available to build any internal data \n\ structure for the voice software.	The voice software was unable allocate memory to build \n\ any internal data structures. The system may be \n\ out of memory.	das	LOG_SID_SH_TECH_ACTION
CSM_VOICE3-NOMEM	3-Error	No memory is available to build the voice interface [dec]:[dec]	The voice software was unable allocate memory to build \n\ a voice interface data structure. The system may be \n\ out of memory.	as	LOG_SID_SH_TECH_ACTION
CSM_VOICE3-NOMEM	3-Error	No memory is available to build the voice interface [dec]:[dec]	The voice software was unable allocate memory to build \n\ a voice interface data structure. The system may be \n\ out of memory.	das	LOG_SID_SH_TECH_ACTION
CSM_VOICE3-NOSDB	3-Error	No signaling data block is available to build the \n\ voice interface[dec]:[dec]	The voice software was unable to obtain a signaling data\n\ block from the Voice Telephony Service Provider. \n\ The system may be out of memory.	as	LOG_SID_SH_TECH_ACTION
CSM_VOICE3-NOSDB	3-Error	No signaling data block is available to build the \n\ voice interface[dec]/[dec]:[dec]	The voice software was unable to obtain a signaling data\n\ block from the Voice Telephony Service Provider. \n\ The system may be out of memory.	das	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CSM_VOIC3NOIDMCHNL	3-Error	CSM failed to get a free dsp tdm channel from the DSP\n\n Resource Manager DSPRM to handle an incoming call	The voice software was unable to obtain the tdm channel \n\n for a free dsp from the DSP Resource Manager. All of \n\n the dsp's have been used to process calls or have\n\n been taken out of service.	as	LOG_SIDSHTTECH_ACTION
CSM_VOIC3IDMHMADDFAL	3-Error	CSM failed to add the CAS TDM hairpinning call	The CSM voice software interface was unable to add\n\n this call as hairpinning because of presence of\n\n another call for the same DS0. Internal software error.	as	LOG_SIDSHTTECH_ACTION
CSM_VOIC3UNDEFHDSX0	3-Error	Undefined dsx0 interface for controller[dec]/[dec]	The dsx0 interface for the specified controller\n\n is not defined but the voice software use it.	das	"Internal software fault. Contact your field service representative \n\n if this message is coincident with dropped calls."
CSM_VOIC3UNDEFHDSX0	3-Error	Undefined dsx0 interface for controller[dec]	The dsx0 interface for the specified controller\n\n is not defined but the voice software use it.	as	"Internal software fault. Contact your field service representative \n\n if this message is coincident with dropped calls."
CSM_VOIC3UNDEFHCFNIF	3-Error	Invalid interface slot:group[dc][dc][dc]	The voice interface defined by slot:controller:group is not\n\n yet defined within the voice software but attempts were\n\n made to use this interface.	das	"Internal software fault. Contact your field service \n\n representative if this message is coincident with \n\n dropped calls."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CSMVCEUNDFACEERR	3-Error	Invalid voice interface controller:group[dec]:[dec]	The voice interface defined by controller:group is not yet defined within the voice software but attempts were made to use this interface.	as	"Internal software fault. Contact your field service representative if this message is coincident with dropped calls."
CSMH-CAS_ALLOC_FAIL	1-Alert	Fail to add new signal channel [dec]/[dec] timeslot [dec]	-	-	""
CSMCSMCALNOMMACH	1-Alert	esm_call_info contains mismatch information call info has [chars]:[dec] framer gives [dec]/[dec]:[dec]	-	-	""
CSMCSMCALNORESOURCE	1-Alert	Failed to allocate resource for call from [dec]/[dec]:[dec]	-	-	""
CSMCSMSTRINGOVRUN	1-Alert	String copy exceeded buffer size	The string written into the allocated buffer exceeded the size of the buffer. This can cause memory corruption.	-	LOG_STD_ACTION
CSMHCHAN_ALLOC_FAIL	1-Alert	For channel [chars]	-	-	""
CSM-1-HWIDB	1-Alert	[chars]: hwidb is NULL	An internal software error occurred.	as	LOG_STD_ACTION
CSMHHWIDB_SUBBLOCK	1-Alert	[chars]: hwidb subblock for b channel [dec] is in use	An internal software error occurred.	as	LOG_STD_ACTION
CSM-1-INITFAIL	1-Alert	[chars]	-	-	""
CSM-1-INITPORTFAIL	1-Alert	Initialization of vdev [dec]/[dec]/[dec] failed	-	-	""

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CSM-1-INITSYS	1-Alert	[chars]	Failed to create a periodic process for CSM or the number of\n\ digit collectors reported to CSM exceeds the maximum number of\n\ digit collectors.	as	LOG_STD_ACTION
CSM#INVALID_CNTR	1-Alert	Initialization failed with invalid digit collector count	-	-	""
CSM-1-MODEM_INFO	1-Alert	[chars]: modem_info is NULL	An internal software error occurred.	-	LOG_STD_ACTION
CSM#NEW_RBS_CHAN	1-Alert	A new RBS channel added	-	-	""
CSM#NO_CSM_CALL_INFO	1-Alert	No call control block	-	-	""
CSM-1-NO_HWIDB	1-Alert	No B channel associated with call	-	-	""
CSM-1-RBS	1-Alert	[chars] at slot [dec] controller [dec] timeslot [dec]	This is an internal software error. An attempt is made to add non\n\ existent CAS signalling interface.	as	LOG_STD_ACTION
CSM-3-NO_VDEV	3-Error	No modems associated with [dec] [dec]	-	-	""
CSM-5-PRI	5-Notice	[chars] at slot [dec] unit [dec] channel [dec] with index [dec]	A PRI signalling channel is added/deleted to CSM's inventory\n\ of signalling channels.	as	"This is a notification message only.\n\ No action is required."
CSM#BAD_RBS_MATCH	3-Error	Region address error: start @ [node]end @ [node]part addr @ %p	CSMPI encountered a bna buffer address possible corruption.	-	LOG_STD_ACTION
CSMPI-3-BAD_INDEX	3-Error	bad particle index [node]max [node]addr %p	CSMPI encountered a bna buffer address possible corruption.	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CSMPI3IF</del> _INT_FAILED	3-Error	CSMPI interface initialization failed.	Essential CSMPI initialization has failed.	-	LOG_STD_ACTION
<del>CSMPIPLATFORM</del> _INIT_FAILED	3-Error	CSMPI platform initialization failed.	Essential CSMPI initialization has failed.	-	LOG_STD_ACTION
<del>CSVERIFY3</del> CSVERIFY_FAIL	3-Error	iosxe-binos-utils	Signature verification: [%s]	During digital signature verification	-
<del>CSVERIFY</del> CSVERIFY_SUCCESS	6-Information	iosxe-binos-utils	Signature verification success for[chars]	Signature verification was successful for the file mentioned.	-
<del>CILROMDHSR3</del> NONI	3-Error	Can't initialize Credentials server	Internal problems with initializing ports for the Credentials server	ios-callmgr	"Make sure the Credentials server port is available on the local machine."
<del>CILROMDHSR3</del> NONI	3-Error	Can't initialize Credentials server	Internal problems with initializing ports for the Credentials server	ios-callmgr	"Make sure the Credentials server port is available on the local machine."
<del>CILROMDHSR3</del> NOEM	3-Error	Can't initialize memory for Credentials server	Insufficient Memory for Credentials server	ios-callmgr	"Increase amount of available memory"
<del>CILROMDHSR3</del> NOEM	3-Error	Can't initialize memory for Credentials server	Insufficient Memory for Credentials server	ios-callmgr	"Increase amount of available memory"
<del>CILROMDHSR3</del> NOCC	3-Error	Could not start Credentials Server	Internal Problem in process creation	ios-callmgr	"None"
<del>CILROMDHSR3</del> NOCC	3-Error	Could not start Credentials Server	Internal Problem in process creation	ios-callmgr	"None"
<del>CILROMDHSR3</del> NOCKES	3-Error	Max Number of Credentials Server sockets exceeded	There are too many Credentials clients requesting service	ios-callmgr	"Reduce number of Credentials requesting service"
<del>CILROMDHSR3</del> NOCKES	3-Error	Max Number of Credentials Server sockets exceeded	There are too many Credentials clients requesting service	ios-callmgr	"Reduce number of Credentials requesting service"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
COKEN3-INITFAIL	3-Error	Initialization of Consent Token facility failed [chars].	An unexpected condition has occurred which resulted in Consent Token facility failing to start. This is a serious problem and means that Consent Token facility will not be functional.	iosxe-ct-lib	LOG_STD_ACTION
COKEN3REQPROCFAIL	3-Error	Consent Token Request Processing facility failed [chars].	An unexpected condition has occurred which resulted in Consent Token facility failing to process a request. This means that some part of Consent Token facility will not be functional.	iosxe-ct-lib	LOG_STD_ACTION
COKEN6AUTH_UPDATE	6-Information	Consent Token Update [chars].	Consent Token authentication state change update	iosxe-ct-lib	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CTRC-3-APPCERROR	3-Error	[chars]	An APPC error occurred. ctrc uses APPC API calls to\n\nSNASW to communicate with the remote database server.	ctrc	"This usually indicates a problem in the SNA network. Try the ctrc\n\n ping command to test connectivity to the remote database server. If\n\n the ctrc ping fails check the status of the SNA link to the\n\n remote database server with the show snasw link command. If the link\n\n is active try stopping and starting the link. If the problem persists\n\n contact your SNA network administrator for help in troubleshooting. " LOG SID RECUR ACTION " If possible also provide the output of the debug ctrc appc\n\n command and an SNA line trace between the router and the remote\n\n database server for the period during which this message appeared."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CTRC-3-APPCVERB	3-Error	Unexpected APPC error: opcode [node]x primary code [node]x secondary code [node]lx	An unexpected APPC error occurred. ctrc uses APPC API calls to\n\nSNASW to communicate with the remote database server. Opcode\n\n identifies the APPC API call that received the error. Primary and\n\n secondary return codes are returned by the APPC API.	ctrc	"This usually indicates a problem in the SNA network. Try the ctrc\n\n ping command to test connectivity to the remote database server. If\n\n the ctrc ping fails check the status of the SNA link to the\n\n remote database server with the show snasw link command. If the link\n\n is active try stopping and starting the link. If the problem persists\n\n contact your SNA network administrator for help in troubleshooting. " LOG_SID_RECUR_ACTION " If possible also provide the output of the debug ctrc appc\n\n command and an SNA line trace between the router and the remote\n\n database server for the period during which this message appeared."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CTRC-3-NOBUFFS	3-Error	No buffers available to [chars]	CTRC attempted to allocate a buffer while performing the \n\ operation described in the message text. A buffer pool does \n\ not contain enough items to satisfy the allocation request.	ctrc	"This problem most commonly occurs whenever a public buffer \n\ pool runs out of elements. Determine the which pool has run\n\ out of buffers using the \"show buffers\" command. Adjust the\n\ pool size using the buffers configuration command."
CTRC3SNASWNOISY	3-Error	SNASW is not started -- unable to connect to remote database.	A client connected to a ctrc server but ctrc was unable to\n\ connect out to the remote database because SNASW is not started.\n\ ctrc uses SNASW to connect to the remote database server. You\n\ must start SNASW before ctrc clients attempt to connect.	ctrc	"Start SNASW and retry the client connection."
CTRC3SNASWSTOPPED	3-Error	SNASW was stopped -- existing connections have been closed.	SNASW was stopped while ctrc connections were open. Stopping\n\ SNASW caused all open SNA connections to the remote database\n\ server to be lost. As a result all client connections were\n\ disconnected. You should not stop SNASW while there are open\n\ ctrc connections.	ctrc	"Restart SNASW. Disconnected clients must reconnect."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CTRC-4-APPCWARN	4-Warning	[chars]	An APPC error occurred. ctrc uses APPC API calls to\n\nSNASW to communicate with the remote database server.	ctrc	"This usually indicates a temporary problem in the SNA network. Try the ctrc\n\n ping command to test connectivity to the remote database server. If\n\n the ctrc ping fails check the status of the SNA link to the\n\n remote database server with the show snasw link command. If the link\n\n is active try stopping and starting the link. If the problem persists\n\n contact your SNA network administrator for help in troubleshooting. " LOG_SID_RECUR_ACTION " If possible also provide the output of the debug ctrc appc\n\n command and an SNA line trace between the router and the remote\n\n database server for the period during which this message appeared."
CIS_PD2IPC_FAILURE	2-Critical	CTS-IPC message [chars] handler failed rc %u	An IPC message handler for the CTS feature failed. This will cause the feature to not function.	asr1k-cts	LOG_STD_ACTION
CIS_DBHEAT_CIX_DOWN	3-Error	CTS-Invalid request [chars] [node]while context is down	While the feature context was not active an invalid request was received from another layer of the CTS software stack.	asr1k-cts	LOG_SID_RECUR_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CIS_PD3FEAT_DOWN	3-Error	CTS-Invalid request [chars] [node]while feature is down	While the feature was not active an invalid request was received from another layer of the CTS software stack.	asr1k-cts	LOG_SID_RECUR_ACTION
CIS_PD3IPC_INT_FAILED	3-Error	CTS-IPC message handler registration failure rc %u	Registering an IPC message handler for the CTS feature failed. This will cause the feature to not function.	asr1k-cts	LOG_STD_ACTION
CIS_PD3IPC_INVALID_MSG	3-Error	CTS-Invalid request %u	We received an invalid message from another layer of the CTS software stack.	asr1k-cts	LOG_SID_RECUR_ACTION
CIS_PD3IPC_INVALID_MSG_LEN	3-Error	CTS-Invalid IPC length [dec]:[dec] len [dec] flags 0x[hec] source [dec]	Invalid IPC message length	asr1k-cts	LOG_STD_ACTION
CIS_PD3IPC_NORES	3-Error	CTS-No space for the IPC reply size [node]request %u	For a request from upper CTS software stack layers it was not possible to allocate space for a reply for the specified size.	asr1k-cts	LOG_SID_RECUR_ACTION
CIS_PD3IPC_OPEN_REPLY	3-Error	CTS-IPC Open Reply failed request %u	For a request from upper CTS software stack layers it was not possible to open the reply buffer.	asr1k-cts	"This is normally a software issue." LOG_SID_RECUR_ACTION
CIS_PD3IPC_SEND_FAILED	3-Error	CTS-IPC [chars] [node]send failed %u	IPC message send failure	asr1k-cts	LOG_STD_ACTION
CIS_AUIHZ_OUT_OF_MEM	0-Emergency	[chars] failed to create [chars] due to insufficient memory	The system is experiencing insufficient memory.	-	LOG_STD_ACTION
CIS_AUIHZ_OUT_OF_MEM	0-Emergency	[chars] failed to create [chars] due to insufficient memory	The system is experiencing insufficient memory.	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CTS-0-CTS_EMERG	0-Emergency	[chars]	CIS_INTERNAL_ERROR	CIS_DDIS_COMPONENT	LOG_STD_ACTION
CTS-0-CTS_EMERG	0-Emergency	[chars]	CIS_INTERNAL_ERROR	CIS_DDIS_COMPONENT	LOG_STD_ACTION
CIS0FC_OUT_OF_MEM	0-Emergency	[chars] failed to create [chars] due to insufficient memory	The system is experiencing insufficient memory.	-	LOG_STD_ACTION
CIS0FC_OUT_OF_MEM	0-Emergency	[chars] failed to create [chars] due to insufficient memory	The system is experiencing insufficient memory.	-	LOG_STD_ACTION
CTS-1-CTS_ALERT	1-Alert	[chars]	CIS_INTERNAL_ERROR	CIS_DDIS_COMPONENT	LOG_STD_ACTION
CTS-1-CTS_ALERT	1-Alert	[chars]	CIS_INTERNAL_ERROR	CIS_DDIS_COMPONENT	LOG_STD_ACTION
CISCREDENTIALS	1-Alert	CTS credentials are missing or inconsistent in the redundant keystore. Please re-configure cts credentials or execute cts change-password.	A redundant keystore was detected as either not containing any CTS credentials or having a different set of credentials as contained in the active keystore. This means that CTS authentication will fail upon switchover unless remedial action is taken before then. Either use the \cts credentials ... \CLI to re-configure the CTS device-id and password or use the \cts change-password ... \CLI to initiate a password change with the AAA server. Either of these actions will cause the device-id and password to be inserted in both the active and redundant keystores.	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CISCSCREDACID_NEEDED	1-Alert	CTS credentials are missing or inconsistent in the redundant keystore.\n Please re-configure cts credentials or execute cts change-password.	A redundant keystore was detected as either not containing any CTS credentials or having a different set of credentials as contained in the active keystore. This means that CTS authentication will fail upon switchover unless remedial action is taken before then. Either use the \cts credentials ... \ CLI to re-configure the CTS device-id and password or use the \cts change-password ... \ CLI to initiate a password change with the AAA server. Either of these actions will cause the device-id and password to be inserted in both the active and redundant keystores.	-	-
CISISXP_BINDING_EXP	1-Alert	Binding [chars]<[chars] [chars]> can't be expanded. Expanded [dec] and maximum allowed is [dec]\n Binding propagated in the network is not consistent.	SXP expansion exceed maximum allowed.\n Binding propagated in the network is not consistent.\n User should remove the subnet binding.	CIS_DDIS_COMPONENT	"Remove this subnet if possible"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CIS4-SXP_BINDING_EXP	1-Alert	Binding [chars]<[chars] [chars]> can't be expanded. Expanded [dec] and maximum allowed is [dec]\n Binding propagated in the network is not consistent.	SXP expansion exceed maximum allowed.\n Binding propagated in the network is not consistent.\n User should remove the subnet binding.	CIS_DDIS_COMPONENT	"Remove this subnet if possible"
<del>CIS4-POLYSGACL_FAIL</del>	2-Critical	Failed to [chars][chars] SGACL '[chars]' for SGT=[chars] due to ACE '[chars]' error. Download will be retried in 60 seconds	An error occurred in the ACE while CTS attempted to acquire SGACL policy from the policy server. Retry will be attempted in 60 seconds	-	LOG_STD_ACTION
<del>CIS4-POLYSGACL_FAIL</del>	2-Critical	Failed to [chars][chars] SGACL '[chars]' for SGT=[chars] due to ACE '[chars]' error. Download will be retried in 60 seconds	An error occurred in the ACE while CTS attempted to acquire SGACL policy from the policy server. Retry will be attempted in 60 seconds	-	LOG_STD_ACTION
<del>CIS4-CACHE_CHUNK_ALLOC_FAIL</del>	2-Critical	Failed to allocate memory for CTS Cache Filename chunks.	Failed to allocate memory for CTS Cache Filename chunks This is an indicator of a critical memory issue.	-	LOG_STD_ACTION
<del>CIS4-CACHE_CHUNK_ALLOC_FAIL</del>	2-Critical	Failed to allocate memory for CTS Cache Filename chunks.	Failed to allocate memory for CTS Cache Filename chunks This is an indicator of a critical memory issue.	-	LOG_STD_ACTION
CTS-2-CTS_CRIT	2-Critical	[chars]	CTS_INTERNAL_ERROR	CIS_DDIS_COMPONENT	LOG_STD_ACTION
CTS-2-CTS_CRIT	2-Critical	[chars]	CTS_INTERNAL_ERROR	CIS_DDIS_COMPONENT	LOG_STD_ACTION
CIS2-HPS_SW_POST_FAIL	2-Critical	Software crypto POST Failure	One or more power-up software crypto algorithmic known answer tests have failed.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CIS2FIPS_SW_POST_FAIL	2-Critical	Software crypto POST Failure	One or more power-up software crypto algorithmic known answer tests have failed.	-	LOG_STD_ACTION
CIS3AAA_NO_CONTEXT	3-Error	Failed to retrieve AAA context to construct AAA attribute for RADIUS request	CTS AAA Request Add : Failed to retrieve AAA context to construct AAA attribute for RADIUS request	-	LOG_STD_ACTION
CIS3AAA_NO_CONTEXT	3-Error	Failed to retrieve AAA context to construct AAA attribute for RADIUS request	CTS AAA Request Add : Failed to retrieve AAA context to construct AAA attribute for RADIUS request	-	LOG_STD_ACTION
CIS3AAA_NO_RADIUS_SERVER	3-Error	No RADIUS servers available for CTS AAA request for [chars]	CTS AAA Request Setup : No RADIUS servers available for CTS AAA	-	LOG_STD_ACTION
CIS3AAA_NO_RADIUS_SERVER	3-Error	No RADIUS servers available for CTS AAA request for [chars]	CTS AAA Request Setup : No RADIUS servers available for CTS AAA	-	LOG_STD_ACTION
CIS3ACL_UNCONFIGURED	3-Error	Access-list [chars] has been dynamically unconfigured from CTS policy because it has been [chars].	An access-list configured as defining CTS L3 traffic or exemption policy has been deleted or modified so that it can no longer be used for defining CTS policy. It has therefore been removed from the CTS layer3 policy configuration.	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CISACL_UNCONFIGURED	3-Error	Access-list [chars] has been dynamically unconfigured from CTS policy because it has been [chars].	An access-list configured as defining CTS L3 traffic or exemption policy has been deleted or modified so that it can no longer be used for defining CTS policy. It has therefore been removed from the CTS layer3 policy configuration.	-	-
CISAUTH_ACL_NOSALE	3-Error	ACL information is not valid.	An error occurred while CTS attempted to access ACL information with invalid handle.	-	LOG_STD_ACTION
CISAUTH_ACL_NOSALE	3-Error	ACL information is not valid.	An error occurred while CTS attempted to access ACL information with invalid handle.	-	LOG_STD_ACTION
CISAUTH_ACL_LIST_SALE	3-Error	ACL named list having ACE information is not valid.	An error occurred while CTS attempted to access ACL list with invalid handle.	-	LOG_STD_ACTION
CISAUTH_ACL_LIST_SALE	3-Error	ACL named list having ACE information is not valid.	An error occurred while CTS attempted to access ACL list with invalid handle.	-	LOG_STD_ACTION
CISAUTH_ADD_DB_FAILED	3-Error	[chars] failed to add [chars] to [chars]	An error occurred while CTS Authz attempted to build its database.	-	LOG_STD_ACTION
CISAUTH_ADD_DB_FAILED	3-Error	[chars] failed to add [chars] to [chars]	An error occurred while CTS Authz attempted to build its database.	-	LOG_STD_ACTION
CISAUTH_CACHE_WRITE_FAILED	3-Error	[chars] failed to write Multicast SGT Table to cache file[chars]	CTS Cache: Failed to write Multicast SGT Table to cache file	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CSUHZACHEMCTWRPFL	3-Error	[chars] failed to write Multicast SGT Table to cache file[chars]	CTS Cache: Failed to write Multicast SGT Table to cache file	-	LOG_STD_ACTION
CSAUHZACHEONFL	3-Error	[chars] failed to open cache file[chars] for read	CTS Cache read: Failed to open cache file for read	-	LOG_STD_ACTION
CSAUHZACHEONFL	3-Error	[chars] failed to open cache file[chars] for read	CTS Cache read: Failed to open cache file for read	-	LOG_STD_ACTION
CSUHZACHEONWRPFL	3-Error	[chars] failed to open cache file[chars] for write	CTS Cache: Failed to open cache file for write	-	LOG_STD_ACTION
CSUHZACHEONWRPFL	3-Error	[chars] failed to open cache file[chars] for write	CTS Cache: Failed to open cache file for write	-	LOG_STD_ACTION
CSUHZACHEPDRPFL	3-Error	Failed to write peer policy to cache	CTS Authz Cache: Failed to write peer policy to cache	-	LOG_STD_ACTION
CSUHZACHEPDRPFL	3-Error	Failed to write peer policy to cache	CTS Authz Cache: Failed to write peer policy to cache	-	LOG_STD_ACTION
CSAUHZACHEREADFL	3-Error	[chars] failed to read from cache file[chars]	CTS Cache: Failed to read from cache file	-	LOG_STD_ACTION
CSAUHZACHEREADFL	3-Error	[chars] failed to read from cache file[chars]	CTS Cache: Failed to read from cache file	-	LOG_STD_ACTION
CSUHZACHESTRPWRPFL	3-Error	Failed to write SGT policy to cache	CTS Authz Cache: Failed to write SGT policy to cache	-	LOG_STD_ACTION
CSUHZACHESTRPWRPFL	3-Error	Failed to write SGT policy to cache	CTS Authz Cache: Failed to write SGT policy to cache	-	LOG_STD_ACTION
CSUHZACHESTRPWRPFL	3-Error	[chars] failed to write SGT SG Name Table to cache file[chars]	CTS Cache: Failed to write SGT SG Name Table to cache file	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CISAUHCACHEWRITEAL	3-Error	[chars] failed to write SGT SG Name Table to cache file[chars]	CTS Cache: Failed to write SGT SG Name Table to cache file	-	LOG_STD_ACTION
CISAUHCACHEWRITEAL	3-Error	[chars] failed to write server list to cache file[chars]	CTS Cache: Failed to write server list to cache file	-	LOG_STD_ACTION
CISAUHCACHEWRITEAL	3-Error	[chars] failed to write server list to cache file[chars]	CTS Cache: Failed to write server list to cache file	-	LOG_STD_ACTION
CISAUHCACHEDATAAL	3-Error	[chars] failed to read cached data	CTS Cache: Failed to read cached data	-	LOG_STD_ACTION
CISAUHCACHEDATAAL	3-Error	[chars] failed to read cached data	CTS Cache: Failed to read cached data	-	LOG_STD_ACTION
CISAUHZDATACREATEAL	3-Error	[chars] failed to create [chars]	An error occurred while CTS Authz attempts to create an internal data structure.	-	LOG_STD_ACTION
CISAUHZDATACREATEAL	3-Error	[chars] failed to create [chars]	An error occurred while CTS Authz attempts to create an internal data structure.	-	LOG_STD_ACTION
CISAUHZDATAEXCESSIMT	3-Error	[chars] encountered [chars][dec] exceeds max[dec]	Data exceeds maximum limits allowed.	-	LOG_STD_ACTION
CISAUHZDATAEXCESSIMT	3-Error	[chars] encountered [chars][dec] exceeds max[dec]	Data exceeds maximum limits allowed.	-	LOG_STD_ACTION
CISAUHZDATAFAILED	3-Error	[chars] failed to obtain [chars]	An error occurred while CTS Authz attempted to get/create a data structure	-	LOG_STD_ACTION
CISAUHZDATAFAILED	3-Error	[chars] failed to obtain [chars]	An error occurred while CTS Authz attempted to get/create a data structure	-	LOG_STD_ACTION



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CIS3AUTHZ_DATA_NULL	3-Error	[chars] encounters NULL [chars]	An unexpected NULL pointer/data is encountered.	-	LOG_STD_ACTION
CIS3AUTHZ_DATA_NULL	3-Error	[chars] encounters NULL [chars]	An unexpected NULL pointer/data is encountered.	-	LOG_STD_ACTION
CIS3AUTHZ_DATA_UNINI	3-Error	[chars] appears uninitialized	CTS Authz unexpectedly encountered an uninitialized data	-	LOG_STD_ACTION
CIS3AUTHZ_DATA_UNINI	3-Error	[chars] appears uninitialized	CTS Authz unexpectedly encountered an uninitialized data	-	LOG_STD_ACTION
CSAUTHZNR_HTTPAED	3-Error	Policy Acquisition failed to transmit HTTP request for peer[chars] sgt[chars]	Duplicate Radius mapping received from crypto. Internal error	cws-xe	"This message is for informational purposed only"
CSAUTHZNR_HTTPAED	3-Error	Policy Acquisition failed to transmit HTTP request for peer[chars] sgt[chars]	Policy acquisition failed to transmit HTTP request	-	LOG_STD_ACTION
CSAUTHZNR_RADIUSAED	3-Error	Policy Acquisition failed to transmit RADIUS request for peer[chars] sgt[chars]	-	-	-
CSAUTHZNR_RADIUSAED	3-Error	Policy Acquisition failed to transmit RADIUS request for peer[chars] sgt[chars]	-	-	-
CSAUTHZAIEDSYNCRCV	3-Error	Standby failed receive sync msg[chars]	An error occurred while the Standby is receiving sync data from the Active.	-	LOG_STD_ACTION
CSAUTHZAIEDSYNCRCV	3-Error	Standby failed receive sync msg[chars]	An error occurred while the Standby is receiving sync data from the Active.	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CISAUTHZCNRCIAURE	3-Error	[chars] [chars]	CTS Authz encountered internal error.	-	LOG_STD_ACTION
CISAUTHZCNRCIAURE	3-Error	[chars] [chars]	CTS Authz encountered internal error.	-	LOG_STD_ACTION
CISAUTHZ_NALDDAIA	3-Error	[chars] encountered invalid [chars]	CTS Authz encountered an unexpected invalid data type.	-	LOG_STD_ACTION
CISAUTHZ_NALDDAIA	3-Error	[chars] encountered invalid [chars]	CTS Authz encountered an unexpected invalid data type.	-	LOG_STD_ACTION
CISAUTHZ_NOT_SUPRIED	3-Error	[chars] encountered [chars] not unsupported	CTS encountered an unsupported data type or feature. This could be due to incompatibility	-	LOG_STD_ACTION
CISAUTHZ_NOT_SUPRIED	3-Error	[chars] encountered [chars] not unsupported	CTS encountered an unsupported data type or feature. This could be due to incompatibility	-	LOG_STD_ACTION
CISAUTHZPOLYACLDLAIID	3-Error	Failed to delete ACL information. Invalid ACL [chars].	An error occurred while CTS attempted to delete ACL info with invalid handle.	-	LOG_STD_ACTION
CISAUTHZPOLYACLDLAIID	3-Error	Failed to delete ACL information. Invalid ACL [chars].	An error occurred while CTS attempted to delete ACL info with invalid handle.	-	LOG_STD_ACTION
CISAUTHZPOLYACLRMOE	3-Error	Failed to remove [chars] policy from the authorization dbase	An error occurred while CTS attempted to remove the specified policy from its database. This could result in an action not being accomplished.	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CSUFZPOLYALCRMOE</del>	3-Error	Failed to remove [chars] policy from the authorization dbase	An error occurred while CTS attempted to remove the specified policy from its database. This could result in an action not being accomplished.	-	LOG_STD_ACTION
<del>CSUFZPOLYNGRSAD</del>	3-Error	Failed to [chars] Ingress policy for [chars]	An error occurred while CTS attempted to acquire or install an Ingress policy from the ACS.	-	LOG_STD_ACTION
<del>CSUFZPOLYNGRSAD</del>	3-Error	Failed to [chars] Ingress policy for [chars]	An error occurred while CTS attempted to acquire or install an Ingress policy from the ACS.	-	LOG_STD_ACTION
<del>CSUFZPOLYNBRALAD</del>	3-Error	Failed to acquire/install policy for [chars] due to internal error	An error occurred while CTS attempted to acquire/install a policy which may be caused by internal software error	-	LOG_STD_ACTION
<del>CSUFZPOLYNBRALAD</del>	3-Error	Failed to acquire/install policy for [chars] due to internal error	An error occurred while CTS attempted to acquire/install a policy which may be caused by internal software error	-	LOG_STD_ACTION
<del>CSUFZPOLYDOWNOHE</del>	3-Error	Failed to download peer policy for [chars]	An error occurred while CTS attempted to acquire peer policy from the policy server	-	LOG_STD_ACTION
<del>CSUFZPOLYDOWNOHE</del>	3-Error	Failed to download peer policy for [chars]	An error occurred while CTS attempted to acquire peer policy from the policy server	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CSUFZPOLYSGACLAD</del>	3-Error	Failed to [chars][chars] SGACL [chars] for SGT=[chars]	An error occurred while CTS attempted to acquire SGACL policy from the policy server.	-	LOG_STD_ACTION
<del>CSUFZPOLYSGACLAD</del>	3-Error	Failed to [chars][chars] SGACL [chars] for SGT=[chars]	An error occurred while CTS attempted to acquire SGACL policy from the policy server.	-	LOG_STD_ACTION
<del>CSUFZPOLWILDCARDAD</del>	3-Error	Failed to download default/unknown policy	An error occurred while CTS attempted to acquire wildcard policy from the ACS.	-	LOG_STD_ACTION
<del>CSUFZPOLWILDCARDAD</del>	3-Error	Failed to download default/unknown policy	An error occurred while CTS attempted to acquire wildcard policy from the ACS.	-	LOG_STD_ACTION
<del>CSUFZSSONS/SRIAD</del>	3-Error	Failed to initialize the environment-data module	Failed to initialize the environment-data module	-	LOG_STD_ACTION
<del>CSUFZSSONS/SRIAD</del>	3-Error	Failed to initialize the environment-data module	Failed to initialize the environment-data module	-	LOG_STD_ACTION
<del>CSUFZSSONSSGACLAD</del>	3-Error	Failed to detach session handle from SGACL list for sgt[chars]	-	-	-
<del>CSUFZSSONSSGACLAD</del>	3-Error	Failed to detach session handle from SGACL list for sgt[chars]	-	-	-
<del>CSUFZSTRICYDLAD</del>	3-Error	Failed to delete sgt policy for sgt [chars].	An error occurred while CTS attempted to delete sgt policy with invalid handle.	-	LOG_STD_ACTION
<del>CSUFZSTRICYDLAD</del>	3-Error	Failed to delete sgt policy for sgt [chars].	An error occurred while CTS attempted to delete sgt policy with invalid handle.	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CISAUTHZSGTPOICYSAE</del>	3-Error	sgt policy for sgt '[chars]' is not valid.	An error occurred while CTS attempted to access sgt policy with invalid handle.	-	LOG_STD_ACTION
<del>CISAUTHZSGTPOICYSAE</del>	3-Error	sgt policy for sgt '[chars]' is not valid.	An error occurred while CTS attempted to access sgt policy with invalid handle.	-	LOG_STD_ACTION
<del>CIS3AUTHZ_SM_FAILED</del>	3-Error	Failed to start the authorization entry state machine to start policy acquisition for peer[chars]	-	-	-
<del>CIS3AUTHZ_SM_FAILED</del>	3-Error	Failed to start the authorization entry state machine to start policy acquisition for peer[chars]	-	-	-
<del>CIS3AUTHZ_SYNC_FAILED</del>	3-Error	Failed to send [chars] sync msg[chars] to Standby	An error occurred while CTS Authz is performing a sync to the Standby.	-	LOG_STD_ACTION
<del>CIS3AUTHZ_SYNC_FAILED</del>	3-Error	Failed to send [chars] sync msg[chars] to Standby	An error occurred while CTS Authz is performing a sync to the Standby.	-	LOG_STD_ACTION
<del>CISUFZREMANSTRMIED</del>	3-Error	Failed to insert the authz entry info into tree map for peer[chars]	-	-	-
<del>CISUFZREMANSTRMIED</del>	3-Error	Failed to insert the authz entry info into tree map for peer[chars]	-	-	-
<del>CBUFUNSSDRMIFED</del>	3-Error	Failed to locate named list to uninstall session	Failed to locate named list to uninstall session	-	LOG_STD_ACTION
<del>CBUFUNSSDRMIFED</del>	3-Error	Failed to locate named list to uninstall session	Failed to locate named list to uninstall session	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CIS3CACHE_OPEN_FAILD	3-Error	Failed to open cache file: [chars] error: [chars]	Cache file could not be opened for read CTS cache functionality will not work as expected.	-	LOG_STD_ACTION
CIS3CACHE_OPEN_FAILD	3-Error	Failed to open cache file: [chars] error: [chars]	Cache file could not be opened for read CTS cache functionality will not work as expected.	-	LOG_STD_ACTION
CIS3CACHE_INVALID_DIRECTORY_PATH	3-Error	Cache Invalid Directory Path: [chars] exceeds maximum allowed length [dec]	Cache invalid directory path. Cache file will not be opened for read/write and CTS cache functionality will not work as expected.	-	_ACTION
CIS3CACHE_INVALID_DIRECTORY_PATH	3-Error	Cache Invalid Directory Path: [chars] exceeds maximum allowed length [dec]	Cache invalid directory path. Cache file will not be opened for read/write and CTS cache functionality will not work as expected.	-	_ACTION
CIS3CACHE_INVALID_IFS	3-Error	Cache Invalid IFS: Error opening [chars] - [chars]	Failure in validating file system. Cache file will not be opened for read/write and CTS cache functionality will not work as expected.	-	LOG_STD_ACTION
CIS3CACHE_INVALID_IFS	3-Error	Cache Invalid IFS: Error opening [chars] - [chars]	Failure in validating file system. Cache file will not be opened for read/write and CTS cache functionality will not work as expected.	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CISCACHEBADFILEMAGIC</del>	3-Error	Cache read failed due to bad file magic.	Cache read failed due to bad file magic. CTS cache functionality will not work as expected.	-	LOG_STD_ACTION
<del>CISCACHEBADFILEMAGIC</del>	3-Error	Cache read failed due to bad file magic.	Cache read failed due to bad file magic. CTS cache functionality will not work as expected.	-	LOG_STD_ACTION
<del>CISCACHEBADCRCERROR</del>	3-Error	Cache read failed due to mismatch in CRC - file CRC[hec] calculated CRC[hec]	-	-	-
<del>CISCACHEBADCRCERROR</del>	3-Error	Cache read failed due to mismatch in CRC - file CRC[hec] calculated CRC[hec]	-	-	-
<del>CISCACHEFILEHEADERERROR</del>	3-Error	Cache read of file [chars] failed due to file header error.	Cache read failed due to file header error. CTS cache functionality will not work as expected.	-	LOG_STD_ACTION
<del>CISCACHEFILEHEADERERROR</del>	3-Error	Cache read of file [chars] failed due to file header error.	Cache read failed due to file header error. CTS cache functionality will not work as expected.	-	LOG_STD_ACTION
CIS3CAP_INVALID_SIZE	3-Error	CTS HA empty tlv size.	Received empty tlv list during capability negotiation.	CIS_DDIS_COMPONENT	LOG_STD_ACTION
CIS3CAP_INVALID_SIZE	3-Error	CTS HA empty tlv size.	Received empty tlv list during capability negotiation.	CIS_DDIS_COMPONENT	LOG_STD_ACTION
CIS3CAP_NOT_COMPATIBLE	3-Error	CTS HA capability not compatible	CTS HA failed during capability negotiation.	CIS_DDIS_COMPONENT	LOG_STD_ACTION
CIS3CAP_NOT_COMPATIBLE	3-Error	CTS HA capability not compatible	CTS HA failed during capability negotiation.	CIS_DDIS_COMPONENT	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CIS3CHKPT_REG_FAIL	3-Error	CTS HA add CTS checkpoint client failure.	CTS HA failed to add checkpoint client. No CTS data will be synced to Standby in this case.	CIS_DDJS_COMPONENT	LOG_STD_ACTION
CIS3CHKPT_REG_FAIL	3-Error	CTS HA add CTS checkpoint client failure.	CTS HA failed to add checkpoint client. No CTS data will be synced to Standby in this case.	CIS_DDJS_COMPONENT	LOG_STD_ACTION
<del>CISCORESSCRANDNALE</del>	3-Error	Failed to create CTS_CORE process	CTS_CORE: Failed to create CTS_CORE process	-	LOG_STD_ACTION
<del>CISCORESSCRANDNALE</del>	3-Error	Failed to create CTS_CORE process	CTS_CORE: Failed to create CTS_CORE process	-	LOG_STD_ACTION
<del>CISCORESSRMAED</del>	3-Error	Process getting killed since queue is not created	CTS_CORE: Process getting killed since queue is not created	-	LOG_STD_ACTION
<del>CISCORESSRMAED</del>	3-Error	Process getting killed since queue is not created	CTS_CORE: Process getting killed since queue is not created	-	LOG_STD_ACTION
<del>CISCSDALLOW12CONG</del>	3-Error	[chars].\nRemoving CTS Layer2 configuration from interface[chars]	-	-	-
<del>CISCSDALLOW12CONG</del>	3-Error	[chars].\nRemoving CTS Layer2 configuration from interface[chars]	-	-	-
<del>CISCSDALLOW13CONG</del>	3-Error	[chars].\nRemoving CTS Layer3 TrustSec Forwarding configuration from interface[chars]	Platform ASIC does not support CTS Layer2 and CTS layer3 TrustSec Forwarding configurations to co-exist on the same ASIC instance	-	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CTS_CTS_ALLOW_L3_CFG</del>	3-Error	[chars].\nRemoving CTS Layer3 TrustSec Forwarding configuration from interface[chars]	Platform ASIC does not support CTS Layer2 and CTS layer3 TrustSec Forwarding configurations to co-exist on the same ASIC instance	-	LOG_STD_ACTION
CTS-3-CTS_ERR	3-Error	[chars]	CTS_INTERNAL_ERROR	CTS_DDIS_COMPONENT	LOG_STD_ACTION
CTS-3-CTS_ERR	3-Error	[chars]	CTS_INTERNAL_ERROR	CTS_DDIS_COMPONENT	LOG_STD_ACTION
<del>CTS_POLICY_SERVER_CREDNS</del>	3-Error	Valid Policy-server credentials have not configured on device	CTS policy-server username is not configured	-	LOG_STD_ACTION
<del>CTS_POLICY_SERVER_CREDNS</del>	3-Error	Valid Policy-server credentials have not configured on device	CTS policy-server username is not configured	-	LOG_STD_ACTION
<del>CTS_POLICY_SERVER_PWD</del>	3-Error	Password conversion failed	CTS policy-server password conversion failed	-	LOG_STD_ACTION
<del>CTS_POLICY_SERVER_PWD</del>	3-Error	Password conversion failed	CTS policy-server password conversion failed	-	LOG_STD_ACTION
<del>CTS_POLICY_SERVER_PTMP</del>	3-Error	Password conversion failed	CTS policy-server password conversion failed	-	LOG_STD_ACTION
<del>CTS_POLICY_SERVER_PTMP</del>	3-Error	Password conversion failed	CTS policy-server password conversion failed	-	LOG_STD_ACTION
<del>CTS_POLICY_SERVER_CREDNS</del>	3-Error	Invalid Policy-server credentials have configured on device OR Server port number is incorrect	CTS policy-server username or password are invalid	-	LOG_STD_ACTION
<del>CTS_POLICY_SERVER_CREDNS</del>	3-Error	Invalid Policy-server credentials have configured on device OR Server port number is incorrect	CTS policy-server username or password are invalid	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CISPOLYMEMGBAIOC</del>	3-Error	Server group table memory allocation failed	CTS HTTP based download will impact	-	LOG_STD_ACTION
<del>CISPOLYMEMGBAIOC</del>	3-Error	Server group table memory allocation failed	CTS HTTP based download will impact	-	LOG_STD_ACTION
<del>CISDOPNACTHLEAD</del>	3-Error	Failed to force dot1x port authorized for int[chars]	An error occurred while CTS attempts to force dot1x port authorized on a CTS link	-	LOG_STD_ACTION
<del>CISDOPNACTHLEAD</del>	3-Error	Failed to force dot1x port authorized for int[chars]	An error occurred while CTS attempts to force dot1x port authorized on a CTS link	-	LOG_STD_ACTION
<del>CISDUNCONFURE</del>	3-Error	Failed to unconfigure dot1x on int[chars]	CTS_CORE: Failed to unconfigure dot1x	-	LOG_STD_ACTION
<del>CISDUNCONFURE</del>	3-Error	Failed to unconfigure dot1x on int[chars]	CTS_CORE: Failed to unconfigure dot1x	-	LOG_STD_ACTION
CISENTRPY_SRC_FAILURE	3-Error	Entropy source failed health test	The periodic health tests done on the CTR-DRBG crypto implementation indicated an error in obtaining entropy. Recommended action is to crash.	-	-
<del>CISENTRPY_SRC_FAILURE</del>	3-Error	Entropy source failed health test	The periodic health tests done on the CTR-DRBG crypto implementation indicated an error in obtaining entropy. Recommended action is to crash.	-	-
CIS3ENV_DATA_ERROR	3-Error	Environment data error in [chars] state	ENV data error	-	LOG_SID_NO_ACTION
<del>CIS3ENV_DATA_ERROR</del>	3-Error	Environment data error in [chars] state	ENV data error	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CISEN_DIA_NT_FAILED	3-Error	Failed to initialize and start the authorization state machine	Failed to initialize and start the authorization state machine	-	LOG_STD_ACTION
CISEN_DIA_NT_FAILED	3-Error	Failed to initialize and start the authorization state machine	Failed to initialize and start the authorization state machine	-	LOG_STD_ACTION
CIS3SWINDP_CRS_FAIL	3-Error	Software crypto POST FAIL SCP message send failed	Power-up crypto software algorithmic tests have failed and the SCP message	-	LOG_STD_ACTION
CIS3SWINDP_CRS_FAIL	3-Error	Software crypto POST FAIL SCP message send failed	Power-up crypto software algorithmic tests have failed and the SCP message	-	LOG_STD_ACTION
CIS3GCM_NO_LICENSE	3-Error	CTS link [chars] is being shut down: please install MACSec Encryption License <a href="http://www.cisco.com/go/license">http://www.cisco.com/go/license</a>	A MACSec Encryption License is required to use gcm-encryption on secure links. All CTS links configured to run gcm-encryption will be held in administratively down state until the gcm-encryption is removed from the interface configuration or until a MACSec Encryption License is installed.	-	"Either install a MACSec Encryption License or configure all CTS " "interfaces with cipher modelists that do not include gcm."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CIS3GCM_NO_LICENSE	3-Error	CTS link [chars] is being shut down: please install MACSec Encryption License <a href="http://www.cisco.com/go/license">http://www.cisco.com/go/license</a>	A MACSec Encryption License is required to use gcm-encryption on secure links. All CTS links configured to run gcm-encryption will be held in administratively down state until the gcm-encryption is removed from the interface configuration or until a MACSec Encryption License is installed.	-	"Either install a MACSec Encryption License or configure all CTS " "interfaces with cipher modelists that do not include gcm."
CIS3GENERIC_FAILURE	3-Error	[chars] [chars]	CTS Core encountered internal error.	-	LOG_STD_ACTION
CIS3GENERIC_FAILURE	3-Error	[chars] [chars]	CTS Core encountered internal error.	-	LOG_STD_ACTION
CTS-3-GET_BUFFER	3-Error	CTS HA ISSU client failed to get buffer for message. Error: [dec] [chars]	The CTS HA ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	CIS_DDIS_COMPONENT	"show logging and show checkpoint client"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CTS-3-GET_BUFFER	3-Error	CTS HA ISSU client failed to get buffer for message. Error: [dec] [chars]	The CTS HA ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	CIS_DDIS_COMPONENT	"show logging and show checkpoint client"
CISGLOBALDOTXDISABLED	3-Error	Global dot1x config is currently disabled - CTS will not run	Global dot1x is not enabled and hence CTS will not run	-	LOG_STD_ACTION
CISGLOBALDOTXDISABLED	3-Error	Global dot1x config is currently disabled - CTS will not run	Global dot1x is not enabled and hence CTS will not run	-	LOG_STD_ACTION
CISICADSUPPLICANT	3-Error	Failed to add supplicant cannot open port[chars]	-	-	-
CISICADSUPPLICANT	3-Error	Failed to add supplicant cannot open port[chars]	-	-	-
CISIFCCACHEBADLEN	3-Error	Cache File [chars] bad length [dec] expecting [dec]	IFC Cache file bad length may be corrupted.	-	LOG_STD_ACTION
CISIFCCACHEBADLEN	3-Error	Cache File [chars] bad length [dec] expecting [dec]	IFC Cache file bad length may be corrupted.	-	LOG_STD_ACTION
CISIFCCACHERESTOREFAIL	3-Error	Cache Restoration Failed	IFC Cache restoration failed owing to errors in NVRAM file open operation. Even though CTS cache is enabled link bring up cannot bypass IFC state machine	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CIS3CCACHE_RSCRE_FAIL	3-Error	Cache Restoration Failed	IFC Cache restoration failed owing to errors in NVRAM file open operation. Even though CTS cache is enabled link bring up cannot bypass IFC state machine	-	LOG_STD_ACTION
CIS3CCACHE_UDAIE_FAIL	3-Error	Cache Update Failed	IFC Cache update failed owing to errors in NVRAM file write operation.	-	LOG_STD_ACTION
CIS3CCACHE_UDAIE_FAIL	3-Error	Cache Update Failed	IFC Cache update failed owing to errors in NVRAM file write operation.	-	LOG_STD_ACTION
CIS3CDATA_ENCDEF_FAIL	3-Error	[chars] failed to encode the data-descriptor for int[chars]	An error occurred while the system attempted to encode the swidb into the data-descriptor	-	LOG_STD_ACTION
CIS3CDATA_ENCDEF_FAIL	3-Error	[chars] failed to encode the data-descriptor for int[chars]	An error occurred while the system attempted to encode the swidb into the data-descriptor	-	LOG_STD_ACTION
CIS3IFC_DATA_NULL	3-Error	[chars] encounters NULL [chars]	An unexpected NULL pointer/data is encountered.	-	LOG_STD_ACTION
CIS3IFC_DATA_NULL	3-Error	[chars] encounters NULL [chars]	An unexpected NULL pointer/data is encountered.	-	LOG_STD_ACTION
CIS3IFC_FAIL_PGMP_SGT	3-Error	Could not program hardware for propagate SGT Port SGT[dec]	IFC could not program hardware for propagate SGT	-	LOG_STD_ACTION
CIS3IFC_FAIL_PGMP_SGT	3-Error	Could not program hardware for propagate SGT Port SGT[dec]	IFC could not program hardware for propagate SGT	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CSCIAIDAFCS_CISNOFY	3-Error	Failed to send authentication success to the core for int[chars]	-	-	-
CSCIAIDAFCS_CISNOFY	3-Error	Failed to send authentication success to the core for int[chars]	-	-	-
CSCIAIDAFI_ZA_NOFY	3-Error	Failed to send authorization failure to the core for int[chars]	-	-	-
CSCIAIDAFI_ZA_NOFY	3-Error	Failed to send authorization failure to the core for int[chars]	-	-	-
CSCIAIDAFI_ZA_NOFY	3-Error	Failed to send authorization success to the core for int[chars]	-	-	-
CSCIAIDAFI_ZA_NOFY	3-Error	Failed to send authorization success to the core for int[chars]	-	-	-
CSCIAIDKONCINOFY	3-Error	Failed to send disconnect notify to the core for int[chars]	-	-	-
CSCIAIDKONCINOFY	3-Error	Failed to send disconnect notify to the core for int[chars]	-	-	-
CSCIAIDENVDA_DND	3-Error	Failed to download environment data for int[chars]	-	-	-
CSCIAIDENVDA_DND	3-Error	Failed to download environment data for int[chars]	-	-	-
CSCIAIDSPIAL_NOFY	3-Error	Failed to send SAP failure to the core for int[chars]	-	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CIS3C_AID_SAP_FAIL_NOIFY</del>	3-Error	Failed to send SAP failure to the core for int[chars]	-	-	-
<del>CIS3C_AID_SAP_SUCCESS_NOIFY</del>	3-Error	Failed to send SAP success to the core for int[chars]	-	-	-
<del>CIS3C_AID_SAP_SUCCESS_NOIFY</del>	3-Error	Failed to send SAP success to the core for int[chars]	-	-	-
CIS3FC_LINK_OBJ_FAILED	3-Error	[chars] failed to get link_obj for int[chars]	An error occurred while CTS IFC attempts to access the link object.	-	LOG_STD_ACTION
CIS3FC_LINK_OBJ_FAILED	3-Error	[chars] failed to get link_obj for int[chars]	An error occurred while CTS IFC attempts to access the link object.	-	LOG_STD_ACTION
<del>CIS3C_AUTH_REAUTH_TIMER_CXT</del>	3-Error	Lost AUTHC reauth timer context	IFC Lost AUTHC reauth timer context	-	LOG_STD_ACTION
<del>CIS3C_AUTH_REAUTH_TIMER_CXT</del>	3-Error	Lost AUTHC reauth timer context	IFC Lost AUTHC reauth timer context	-	LOG_STD_ACTION
<del>CIS3C_DOT1X_PAE_TIMER_CXT</del>	3-Error	Lost DOT1x PAE timer context	IFC Lost DOT1x PAE timer context	-	LOG_STD_ACTION
<del>CIS3C_DOT1X_PAE_TIMER_CXT</del>	3-Error	Lost DOT1x PAE timer context	IFC Lost DOT1x PAE timer context	-	LOG_STD_ACTION
<del>CIS3C_SOCKET_CLEANUP_TIMER_CXT</del>	3-Error	Lost socket cleanup timer context	IFC Lost socket cleanup timer context	-	LOG_STD_ACTION
<del>CIS3C_SOCKET_CLEANUP_TIMER_CXT</del>	3-Error	Lost socket cleanup timer context	IFC Lost socket cleanup timer context	-	LOG_STD_ACTION
CIS3FC_LOST_TIMER_CXT	3-Error	Lost Timer context	IFC Lost Timer context	-	LOG_STD_ACTION
CIS3FC_LOST_TIMER_CXT	3-Error	Lost Timer context	IFC Lost Timer context	-	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CIS3CNOIBNAUHOZESAE	3-Error	Authorization State: IDB could not be retrieved: state[chars] peer[chars]	-	-	-
CIS3CNOIBNAUHOZESAE	3-Error	Authorization State: IDB could not be retrieved: state[chars] peer[chars]	-	-	-
CIS3FCNOIBNSAPSIAE	3-Error	SAP State: IDB could not be retrieved	IFC SAP State: IDB could not be retrieved	-	LOG_STD_ACTION
CIS3FCNOIBNSAPSIAE	3-Error	SAP State: IDB could not be retrieved	IFC SAP State: IDB could not be retrieved	-	LOG_STD_ACTION
CIS3FCNOIBNSWACT	3-Error	Failed to locate IDB in link object	Failed to locate IDB in link object	-	LOG_STD_ACTION
CIS3FCNOIBNSWACT	3-Error	Failed to locate IDB in link object	Failed to locate IDB in link object	-	LOG_STD_ACTION
CIS3CRAUHCSCISSIAL	3-Error	Received AUTHC Success for peer[chars] role[chars] int[chars]	IFC Received AUTHC success but failed to process due to error	-	LOG_STD_ACTION
CIS3CRAUHCSCISSIAL	3-Error	Received AUTHC Success for peer[chars] role[chars] int[chars]	IFC Received AUTHC success but failed to process due to error	-	LOG_STD_ACTION
CIS3FC_SM_INIT_FAIL	3-Error	SM INIT failed	IFC SM INIT failed	-	LOG_STD_ACTION
CIS3FC_SM_INIT_FAIL	3-Error	SM INIT failed	IFC SM INIT failed	-	LOG_STD_ACTION
CIS3FC_SYNC_FAILED	3-Error	Failed to send [chars] sync msg[chars] to Standby	An error occurred while CTS IFC is performing a sync to the Standby.	-	LOG_STD_ACTION
CIS3FC_SYNC_FAILED	3-Error	Failed to send [chars] sync msg[chars] to Standby	An error occurred while CTS IFC is performing a sync to the Standby.	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CIS3IFC_SYNC_FAILED2	3-Error	[chars] Failed to send [chars] sync msg[chars] to Standby	An error occurred while CTS IFC is performing a sync to the Standby.	-	LOG_STD_ACTION
CIS3IFC_SYNC_FAILED2	3-Error	[chars] Failed to send [chars] sync msg[chars] to Standby	An error occurred while CTS IFC is performing a sync to the Standby.	-	LOG_STD_ACTION
CTS-3-INIT	3-Error	CTS HA ISSU client initialization failed to [chars]. Error: [dec] [chars]	CTS HA ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	CIS_DDJS_COMPONENT	LOG_STD_ACTION
CTS-3-INIT	3-Error	CTS HA ISSU client initialization failed to [chars]. Error: [dec] [chars]	CTS HA ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	CIS_DDJS_COMPONENT	LOG_STD_ACTION
CTS-3-INVALID_ACL	3-Error	Access-list [chars] invalid for CTS policy: [chars].	An access-list configured as defining CTS L3 traffic or exemption policy cannot be used because of the specified reason.	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CTS-3-INVALID_ACL	3-Error	Access-list [chars] invalid for CTS policy: [chars].	An access-list configured as defining CTS L3 traffic or exemption policy cannot be used because of the specified reason.	-	-
CIS3INVALID_CTS_OPR_MODE	3-Error	Invalid CTS Mode. Supported modes are Manual and Auto	Invalid CTS Mode. Supported modes are manual and auto	-	LOG_STD_ACTION
CIS3INVALID_CTS_OPR_MODE	3-Error	Invalid CTS Mode. Supported modes are Manual and Auto	Invalid CTS Mode. Supported modes are manual and auto	-	LOG_STD_ACTION
CIS3INVALID_MSGDRCV	3-Error	[chars] received invalid HA/ISSU msgId[dec]	CTS Core encountered an unexpected invalid HA/ISSU message ID.	-	LOG_STD_ACTION
CIS3INVALID_MSGDRCV	3-Error	[chars] received invalid HA/ISSU msgId[dec]	CTS Core encountered an unexpected invalid HA/ISSU message ID.	-	LOG_STD_ACTION
CIS3LSC_CA_STORE_FAIL	3-Error	Failed to install certificate of CA that issued our locally-significant certificate	An error occurred while installing the certificate of our issuing CA. When this error occurs the locally-significant certificate will be discarded and CTS will continue to use its password credentials for authentication.	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CIS3LSC_CA_STORE_FAIL	3-Error	Failed to install certificate of CA that issued our locally-significant certificate	An error occurred while installing the certificate of our issuing CA. When this error occurs the locally-significant certificate will be discarded and CTS will continue to use its password credentials for authentication.	-	-
CIS3LSC_ENROLL_FAIL	3-Error	Failed to set re-enrollment attributes for CTS locally-significant certificate.	An error occurred while setting the re-enrollment attributes for the new CTS certificate. When this error occurs the new certificate will be discarded and CTS will continue to use its password credentials for authentication.	-	-
CIS3LSC_ENROLL_FAIL	3-Error	Failed to set re-enrollment attributes for CTS locally-significant certificate.	An error occurred while setting the re-enrollment attributes for the new CTS certificate. When this error occurs the new certificate will be discarded and CTS will continue to use its password credentials for authentication.	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CIS3LSC_STORE_FAIL	3-Error	Failed to install newly-provisioned locally-significant certificate.	An error occurred while installing our locally significant certificate to be used for CTS. This means that we cannot be authenticated using a certificate. If a CTS password is available we will continue to authenticate using the password.	-	-
CIS3LSC_STORE_FAIL	3-Error	Failed to install newly-provisioned locally-significant certificate.	An error occurred while installing our locally significant certificate to be used for CTS. This means that we cannot be authenticated using a certificate. If a CTS password is available we will continue to authenticate using the password.	-	-
CSMODELIST_CHECKSUM_ERROR	3-Error	CTS SAP mode-list checksum failure on interface [chars].\n	CTS SAP mode-list checksum failure has been detected on this interface which could provide crypto services. This event may be caused by memory corruption occurring in the interface configuration or the memory area has been illegally modified. It may also be caused by software defects. As a result of this event the system has been forced to reload.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CTS</del> MODELISTCSUMERR	3-Error	CTS SAP mode-list checksum failure on interface [chars].\n	CTS SAP mode-list checksum failure has been detected on this interface which could provide crypto services. This event may be caused by memory corruption occurring in the interface configuration or the memory area has been illegally modified. It may also be caused by software defects. As a result of this event the system has been forced to reload.	-	LOG_STD_ACTION
<del>CS</del> DDISCOMPERR	3-Error	Message [dec] in component [dec] is not compatible with the peer.	Message not compatible with the peer.	CIS_DDIS_COMPONENT	LOG_STD_ACTION
<del>CS</del> DDISCOMPERR	3-Error	Message [dec] in component [dec] is not compatible with the peer.	Message not compatible with the peer.	CIS_DDIS_COMPONENT	LOG_STD_ACTION
CTS3PAC_PROVI_FAIL	3-Error	PAC Provisioning failed for %i	PAC Provisioning failed	-	LOG_STD_ACTION
CTS3PAC_PROVI_FAIL	3-Error	PAC Provisioning failed for %i	PAC Provisioning failed	-	LOG_STD_ACTION
<del>CS</del> ICYCOMBACLAID	3-Error	Failed to complete request for update-rbac[chars]-[chars]	An error occurred while CTS attempted to service a Change of Authorization request for the update-rbac command	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CIS</del> POLICY_COA_RBACL_FAILED	3-Error	Failed to complete request for update-rbacl[chars]-[chars]	An error occurred while CTS attempted to service a Change of Authorization request for the update-rbacl command	-	LOG_STD_ACTION
<del>CIS</del> POLICY_COA_SGT_FAILED	3-Error	Failed to complete CoA request for update-sgt[chars]	An error occurred while CTS attempted to service a Change of Authorization request for the update-sgt command	-	LOG_STD_ACTION
<del>CIS</del> POLICY_COA_SGT_FAILED	3-Error	Failed to complete CoA request for update-sgt[chars]	An error occurred while CTS attempted to service a Change of Authorization request for the update-sgt command	-	LOG_STD_ACTION
<del>CIS</del> POLICY_HA_IPCCAL	3-Error	Error starting up HA switchover Policy refresh process.	A failure has occurred in switchover which has prevented the policy refresh process to be lauched. User should manually refresh policies via the \cts refresh policy\ commad	-	"Issue command \"cts refresh policy\" and verify policy timers" " are active If timers do not start "LOG_STD_ACTION
<del>CIS</del> POLICY_HA_IPCCAL	3-Error	Error starting up HA switchover Policy refresh process.	A failure has occurred in switchover which has prevented the policy refresh process to be lauched. User should manually refresh policies via the \cts refresh policy\ commad	-	"Issue command \"cts refresh policy\" and verify policy timers" " are active If timers do not start "LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CIS3POLICY_INSTALL_FAIL	3-Error	An error occurred while trying to program the hardware error code [dec]	An error occurred while trying to program the hardware to implement the configured policy.	-	-
CIS3POLICY_INSTALL_FAIL	3-Error	An error occurred while trying to program the hardware error code [dec]	An error occurred while trying to program the hardware to implement the configured policy.	-	-
CIS3PORT_AUTHORIZED_FAIL	3-Error	Failed to authorize Port for int[chars]	Port failed to be authorized on a CTS link	-	LOG_STD_ACTION
CIS3PORT_AUTHORIZED_FAIL	3-Error	Failed to authorize Port for int[chars]	Port failed to be authorized on a CTS link	-	LOG_STD_ACTION
CTS3RECEIVE_FAILED	3-Error	CTS HA failed to process message recieved from Active device. CTS component Id [dec] message Id [dec] max header size [dec] size [dec] max message size [dec].	CTS HA client on Standby device failed to process checkpoint message. CTS state between the active device and the Standby device is not identical.	CIS_DDDIS_COMPONENT	LOG_STD_ACTION
CTS3RECEIVE_FAILED	3-Error	CTS HA failed to process message recieved from Active device. CTS component Id [dec] message Id [dec] max header size [dec] size [dec] max message size [dec].	CTS HA client on Standby device failed to process checkpoint message. CTS state between the active device and the Standby device is not identical.	CIS_DDDIS_COMPONENT	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CIS3ROOT_CASICREFAL	3-Error	Could not install the CTS trusted-root certificate.	An error occurred while installing the CTS trusted-root certificate. This means that CTS cannot validate AAA servers' certificates received during EAP-FAST exchanges.	-	-
CIS3ROOT_CASICREFAL	3-Error	Could not install the CTS trusted-root certificate.	An error occurred while installing the CTS trusted-root certificate. This means that CTS cannot validate AAA servers' certificates received during EAP-FAST exchanges.	-	-
CIS3SAP_CIPHER_MISMATCH	3-Error	Cipher suite mismatch from peer on int[chars]	SAP cipher list mismatch on the interface configured with CTS SAP. Both ends of the CTS SAP link must have matching Cipher list	-	LOG_STD_ACTION
CIS3SAP_CIPHER_MISMATCH	3-Error	Cipher suite mismatch from peer on int[chars]	SAP cipher list mismatch on the interface configured with CTS SAP. Both ends of the CTS SAP link must have matching Cipher list	-	LOG_STD_ACTION
CIS3PMNAUMISMATCH	3-Error	PMKID Mismatch on int[chars] received: [node]x [node]x [node]x	The PMKID received from peer is different from the expected PMKID	-	LOG_STD_ACTION
CIS3PMNAUMISMATCH	3-Error	PMKID Mismatch on int[chars] received: [node]x [node]x [node]x	The PMKID received from peer is different from the expected PMKID	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CISAPNG_VBRD_MVACH	3-Error	SAP negotiation error for int[chars] - Received message 2 with higher	SAP negotiation error - peer's version higher than local version	-	LOG_SID_NO_ACTION
CISAPNG_VBRD_MVACH	3-Error	SAP negotiation error for int[chars] - Received message 2 with higher	SAP negotiation error - peer's version higher than local version	-	LOG_SID_NO_ACTION
CISAP_NSTRNG_FAILED	3-Error	Failed to obtain random number from CTR-DRBG block for SAP key-counter. Number of consecutive failures[dec]	The system failed to obtain a random number for the SAP key counter which causes SAP session failure	-	LOG_STD_ACTION
CISAP_NSTRNG_FAILED	3-Error	Failed to obtain random number from CTR-DRBG block for SAP key-counter. Number of consecutive failures[dec]	The system failed to obtain a random number for the SAP key counter which causes SAP session failure	-	LOG_STD_ACTION
CTS-3-SEND_FAILED	3-Error	CTS HA failed to send checkpoint message. CTS component Id [dec] message Id [dec] header size [dec] max header size [dec] message size [dec] max size [dec].	The CTS HA client failed to send a checkpoint CTS state between the active device and the standby device is not identical.	CIS_DDJS_COMPONENT	LOG_STD_ACTION
CTS-3-SEND_FAILED	3-Error	CTS HA failed to send checkpoint message. CTS component Id [dec] message Id [dec] header size [dec] max header size [dec] message size [dec] max size [dec].	The CTS HA client failed to send a checkpoint CTS state between the active device and the standby device is not identical.	CIS_DDJS_COMPONENT	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CIS3ENDMSG_CREATED</del>	3-Error	Failed to send msg[dec] to core process	An error occurred while CTS attempts to send a message event to the core process	-	LOG_STD_ACTION
<del>CIS3ENDMSG_CREATED</del>	3-Error	Failed to send msg[dec] to core process	An error occurred while CTS attempts to send a message event to the core process	-	LOG_STD_ACTION
CIS3SEND_NEGO_FAILED	3-Error	CTS HA ISSU client failed to send negotiation message. Error: [dec] [chars]	The CTS HA ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	CIS_DDIS_COMPONENT	"show logging and show checkpoint client"
CIS3SEND_NEGO_FAILED	3-Error	CTS HA ISSU client failed to send negotiation message. Error: [dec] [chars]	The CTS HA ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	CIS_DDIS_COMPONENT	"show logging and show checkpoint client"
CIS3SESSION_REGISTRY	3-Error	CTS HA ISSU client failed to register session information. Error: [dec] [chars]	The CTS HA ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	CIS_DDIS_COMPONENT	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CIS3SESSION_REGISTRY	3-Error	CTS HA ISSU client failed to register session information. Error: [dec] [chars]	The CTS HA ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	CIS_DDIS_COMPONENT	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
CIS3SESSION_UNREGISTRY	3-Error	CTS HA ISSU client failed to unregister session information. Error: [dec] [chars]	The CTS HA ISSU client failed to unregister session information.	CIS_DDIS_COMPONENT	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
CIS3SESSION_UNREGISTRY	3-Error	CTS HA ISSU client failed to unregister session information. Error: [dec] [chars]	The CTS HA ISSU client failed to unregister session information.	CIS_DDIS_COMPONENT	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
CIS3SSO_NO_LICENSE	3-Error	CTS GCM links are being shut down. Please install a MACSec Encryption License on the new active supervisor <a href="http://www.cisco.com/go/license">http://www.cisco.com/go/license</a>	A MACSec Encryption License is required to use gcm-encryption on secure links. If the active supervisor has a license but the standby does not then links may run GCM encryption. However on switchover all links running GCM will be shut down because the new active does not have a License.	-	ICG_SIDDISTACDEALS

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CIS3SSO_NO_LICENSE	3-Error	CTS GCM links are being shut down. Please install a MACSec Encryption License on the new active supervisor <a href="http://www.cisco.com/go/license">http://www.cisco.com/go/license</a>	A MACSec Encryption License is required to use gcm-encryption on secure links. If the active supervisor has a license but the standby does not then links may run GCM encryption. However on switchover all links running GCM will be shut down because the new active does not have a License.	-	LOGSIDDIS_TACDEALS
CIS3SIDBY_NO_LICENSE	3-Error	CTS link [chars] may be shut down on switchover: please install MACSec Encryption License on the standby supervisor <a href="http://www.cisco.com/go/license">http://www.cisco.com/go/license</a>	A MACSec Encryption License is required to use gcm-encryption on secure links. If the active supervisor has a license but the standby does not then links may run GCM encryption. However on switchover all links running GCM will be shut down because the new active does not have a License.	-	"Either install a MACSec Encryption License or configure all CTS " "interfaces with cipher modelists that do not include gcm."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CIS3SIDBY_NO_LICENSE	3-Error	CTS link [chars] may be shut down on switchover: please install MACSec Encryption License on the standby supervisor <a href="http://www.cisco.com/go/license">http://www.cisco.com/go/license</a>	A MACSec Encryption License is required to use gcm-encryption on secure links. If the active supervisor has a license but the standby does not then links may run GCM encryption. However on switchover all links running GCM will be shut down because the new active does not have a License.	-	"Either install a MACSec Encryption License or configure all CTS " "interfaces with cipher modelists that do not include gcm."
CIS3SXP_CONS_AECHGOF	3-Error	Connection [chars]<[node][node]-[dec] state changed from [chars] to Off.	SXP Connection with the specified instance number changed state.	CIS_DDJS_COMPONENT	LOG_SID_NO_ACTION
CIS3SXP_CONS_AECHGOF	3-Error	Connection [chars]<[node][node]-[dec] state changed from [chars] to Off.	SXP Connection with the specified instance number changed state.	CIS_DDJS_COMPONENT	LOG_SID_NO_ACTION
CTS-3-SXP_LISTENER	3-Error	Fail to start global listening socket after TCP process restart.	SXP on this device can not accept SXP connection setup request from the remote devices.	CIS_DDJS_COMPONENT	"Disable and enable SXP feature to see if the global" "listening socket can be restarted."
CTS-3-SXP_LISTENER	3-Error	Fail to start global listening socket after TCP process restart.	SXP on this device can not accept SXP connection setup request from the remote devices.	CIS_DDJS_COMPONENT	"Disable and enable SXP feature to see if the global" "listening socket can be restarted."
CTS3-SXP_MSG_PARSE	3-Error	Connection [chars]<[node][node] [chars]	An error occurred while parsing SXP message.	CIS_DDJS_COMPONENT	LOG_STD_ACTION
CTS3-SXP_MSG_PARSE	3-Error	Connection [chars]<[node][node] [chars]	An error occurred while parsing SXP message.	CIS_DDJS_COMPONENT	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CIS3SXP_NODE_ID_CHG	3-Error	SXP Node ID changed from 0x[node]X to 0x[node]X	SXP Node ID changed.	CIS_DDIS_COMPONENT	"Make sure SXP bindings that use old node ID are removed from the binding database in all SXP nodes before the new node ID is used."
CIS3SXP_NODE_ID_CHG	3-Error	SXP Node ID changed from 0x[node]X to 0x[node]X	SXP Node ID changed.	CIS_DDIS_COMPONENT	"Make sure SXP bindings that use old node ID are removed from the binding database in all SXP nodes before the new node ID is used."
CIS4CREATE_SLIST_FAILED	4-Warning	[chars]: Failed to create server list.	CTS HA failed to create server list while processing server named list sync message.	CIS_DDIS_COMPONENT	LOG_STD_ACTION
CIS4CREATE_SLIST_FAILED	4-Warning	[chars]: Failed to create server list.	CTS HA failed to create server list while processing server named list sync message.	CIS_DDIS_COMPONENT	LOG_STD_ACTION
CTS4CTS_WARNING	4-Warning	[chars]	CTS_INTERNAL_ERROR	CIS_DDIS_COMPONENT	LOG_STD_ACTION
CTS4CTS_WARNING	4-Warning	[chars]	CTS_INTERNAL_ERROR	CIS_DDIS_COMPONENT	LOG_STD_ACTION
CIS4IFC_RX_AUTHC_FAIL	4-Warning	Received AUTHC FAIL for role[chars] int[chars]	IFC Received AUTHC FAIL	-	LOG_STD_ACTION
CIS4IFC_RX_AUTHC_FAIL	4-Warning	Received AUTHC FAIL for role[chars] int[chars]	IFC Received AUTHC FAIL	-	LOG_STD_ACTION
CIS4IFC_RX_AUTHC_LOGOFF	4-Warning	Received AUTHC LOGOFF for peer[chars] role[chars] int[chars] state[chars]	-	-	-
CIS4IFC_RX_AUTHC_LOGOFF	4-Warning	Received AUTHC LOGOFF for peer[chars] role[chars] int[chars] state[chars]	-	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CIS4CRX_AUHC_NO_RESP	4-Warning	Received AUTHC NO RESP for int[chars]	IFC Received AUTHC NO RESP	-	LOG_STD_ACTION
CIS4CRX_AUHC_NO_RESP	4-Warning	Received AUTHC NO RESP for int[chars]	IFC Received AUTHC NO RESP	-	LOG_STD_ACTION
CIS4CRX_AUHC_REJECT	4-Warning	Received AUTHC REJECT for peer[chars] role[chars] int[chars]	-	-	-
CIS4CRX_AUHC_REJECT	4-Warning	Received AUTHC REJECT for peer[chars] role[chars] int[chars]	-	-	-
CTS-4-INT_ERR	4-Warning	[chars]	CTS_INTERNAL_ERROR	CIS_DDIS_COMPONENT	LOG_STD_ACTION
CTS-4-INT_ERR	4-Warning	[chars]	CTS_INTERNAL_ERROR	CIS_DDIS_COMPONENT	LOG_STD_ACTION
CIS4NO_PROV_SECRET	4-Warning	No shared secret available for provisioning PAC from server [node]	We are unable to provision or reprovision a CTS PAC because we do not have a configured RADIUS shared secret for the server and there are no valid unexpired PACs that can be used to secure the re-provisioning exchange.	-	-
CIS4NO_PROV_SECRET	4-Warning	No shared secret available for provisioning PAC from server [node]	We are unable to provision or reprovision a CTS PAC because we do not have a configured RADIUS shared secret for the server and there are no valid unexpired PACs that can be used to secure the re-provisioning exchange.	-	-



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CIS</del> /ADCN/MDIS/FAE	4-Warning	[chars]:tag[chars] - failed to add server[node][node]to named list.	-	-	-
<del>CIS</del> /ADCN/MDIS/FAE	4-Warning	[chars]:tag[chars] - failed to add server[node][node]to named list.	-	-	-
<del>CIS</del> /ADCN/PRD/IS/FAE	4-Warning	[chars]:tag[chars] - failed to add server[node][node]to preferred list.	-	-	-
<del>CIS</del> /ADCN/PRD/IS/FAE	4-Warning	[chars]:tag[chars] - failed to add server[node][node]to preferred list.	-	-	-
CIS/IS/HANDLER/FAE	4-Warning	[chars]:tag[chars] - failed to locate server list handle.	-	-	-
CIS/IS/HANDLER/FAE	4-Warning	[chars]:tag[chars] - failed to locate server list handle.	-	-	-
CIS/IS/NAID/IS/TYE	4-Warning	[chars]:tag[chars] - invalid server list type[dec].	-	-	-
CIS/IS/NAID/IS/TYE	4-Warning	[chars]:tag[chars] - invalid server list type[dec].	-	-	-
CTS4-SXP_INTERNAL	4-Warning	CTS SXP [chars]	The CTS SXP system encountered internal failure.	CIS_DDIS_COMPONENT	LOG_STD_ACTION
CTS4-SXP_INTERNAL	4-Warning	CTS SXP [chars]	The CTS SXP system encountered internal failure.	CIS_DDIS_COMPONENT	LOG_STD_ACTION
CIS/SXP/SENCE/DCG	4-Warning	Interface configuration is changed may cause adverse affect on SXP functionality	Change in interface configuration causing device to hold stale SXP Node ID.	CIS_DDIS_COMPONENT	"Make sure to re-configure SXP Node ID."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CISXSXAENDEDCG	4-Warning	Interface configuration is changed may cause adverse affect on SXP functionality	Change in interface configuration causing device to hold stale SXP Node ID.	CIS_DDIS_COMPONENT	"Make sure to re-configure SXP Node ID."
CISXSXAENDEDCN	4-Warning	Interface configuration is changed may cause adverse affect on SXP functionality	Change in interface configuration causing device to hold stale SXP Node ID.	CIS_DDIS_COMPONENT	"Make sure to disable and then enable SXP global feature."
CISXSXAENDEDCN	4-Warning	Interface configuration is changed may cause adverse affect on SXP functionality	Change in interface configuration causing device to hold stale SXP Node ID.	CIS_DDIS_COMPONENT	"Make sure to disable and then enable SXP global feature."
CTS-5-CTS_NOTICE	5-Notice	[chars]	Normal but significant conditions	CIS_DDIS_COMPONENT	LOG_STD_ACTION
CTS-5-CTS_NOTICE	5-Notice	[chars]	Normal but significant conditions	CIS_DDIS_COMPONENT	LOG_STD_ACTION
CISDOTIX_CNFG_FAILED	5-Notice	Failed to configure dot1x for int[chars]	An error occurred while CTS attempts to configure dot1x for a CTS link	-	LOG_STD_ACTION
CISDOTIX_CNFG_FAILED	5-Notice	Failed to configure dot1x for int[chars]	An error occurred while CTS attempts to configure dot1x for a CTS link	-	LOG_STD_ACTION
CISDOTIX_INIT_FAILED	5-Notice	Failed to initialize dot1x for int[chars]	An error occurred while CTS attempts to initialize dot1x for a CTS link	-	LOG_STD_ACTION
CISDOTIX_INIT_FAILED	5-Notice	Failed to initialize dot1x for int[chars]	An error occurred while CTS attempts to initialize dot1x for a CTS link	-	LOG_STD_ACTION
CISDOTIX_PAE_FAILED	5-Notice	Failed to [chars] dot1x PAE[chars] for int[chars]	An error occurred while CTS attempts to start/stop dot1x PAEs for	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CIS5DOTX_PAE_FAILED</del>	5-Notice	Failed to [chars] dot1x PAE[chars] for int[chars]	An error occurred while CTS attempts to start/stop dot1x PAEs for	-	LOG_STD_ACTION
<del>CISDDAQMNSUCCESS</del>	5-Notice	Environment data download success	Environment data download completed	CIS_DDIS_COMPONENT	LOG_STD_NO_ACTION
<del>CISDDAQMNSUCCESS</del>	5-Notice	Environment data download success	Environment data download completed	CIS_DDIS_COMPONENT	LOG_STD_NO_ACTION
<del>CISDDANSALSUCCESS</del>	5-Notice	Environment data installation success	Environment data installation completed	CIS_DDIS_COMPONENT	LOG_STD_NO_ACTION
<del>CISDDANSALSUCCESS</del>	5-Notice	Environment data installation success	Environment data installation completed	CIS_DDIS_COMPONENT	LOG_STD_NO_ACTION
<del>CISCDAKDKOFAID</del>	5-Notice	[chars] failed to decode the data-descriptor - swidb unknown	An error occurred while the system attempted to decode the data-descriptor in order to obtain the swidb	-	LOG_STD_ACTION
<del>CISCDAKDKOFAID</del>	5-Notice	[chars] failed to decode the data-descriptor - swidb unknown	An error occurred while the system attempted to decode the data-descriptor in order to obtain the swidb	-	LOG_STD_ACTION
<del>CISPASSWORDCHANGEONE</del>	5-Notice	CTS password in the keystore has been renamed \"[chars]\".	An MSCHAPv2 change-password sequence has been successfully executed and the old password is being renamed for fallback use. This is the first of a 2-part operation. Next the new password will be renamed to become the active password.	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CTSPASSWORDCHANGEONE</del>	5-Notice	CTS password in the keystore has been renamed \[chars]\.	An MSCHAPv2 change-password sequence has been successfully executed and the old password is being renamed for fallback use. This is the first of a 2-part operation. Next the new password will be renamed to become the active password.	-	-
<del>CTSPASSWORDCHANGEIWO</del>	5-Notice	A new CTS password has been installed as \[chars]\ in the keystore.	A new CTS password has been installed in the keystore following a successful MSCHAPv2 change-password sequence. The old password has been saved for fallback use.	-	-
<del>CTSPASSWORDCHANGEIWO</del>	5-Notice	A new CTS password has been installed as \[chars]\ in the keystore.	A new CTS password has been installed in the keystore following a successful MSCHAPv2 change-password sequence. The old password has been saved for fallback use.	-	-
<del>CTSPOLYACQUISUCCESS</del>	5-Notice	Policy Acquisition success for peer[chars] sgt[chars]	-	-	-
<del>CTSPOLYACQUISUCCESS</del>	5-Notice	Policy Acquisition success for peer[chars] sgt[chars]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CISROOT_CASIRE_DONE	5-Notice	A trusted-root certificate to be used for CTS has been installed.	A CTS trusted-root certificate was received from a AAA server during an EAP-FAST enrollment. This certificate will be used for validating all AAA servers' certificates received from here on.	-	-
CISROOT_CASIRE_DONE	5-Notice	A trusted-root certificate to be used for CTS has been installed.	A CTS trusted-root certificate was received from a AAA server during an EAP-FAST enrollment. This certificate will be used for validating all AAA servers' certificates received from here on.	-	-
CIS5SXP_BINDING_ADD	5-Notice	Binding [chars]<[chars] [chars]>-<[node]][dec]> added to SXP database.	Binding added to the SXP database.	CIS_DDIS_COMPONENT	LOG_SID_NO_ACTION
CIS5SXP_BINDING_ADD	5-Notice	Binding [chars]<[chars] [chars]>-<[node]][dec]> added to SXP database.	Binding added to the SXP database.	CIS_DDIS_COMPONENT	LOG_SID_NO_ACTION
CIS5SXP_BINDING_CHG	5-Notice	Binding [chars]<[chars] [chars]>-<[node]][dec]> changed: old connection instance number:[dec] old sgt:[chars].	Binding changed in the SXP database.	CIS_DDIS_COMPONENT	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CIS5SXP_BINDING_CHG	5-Notice	Binding [chars]<[chars] [chars]>-<[node][dec]> changed: old connection instance number:[dec] old sgt:[chars].	Binding changed in the SXP database.	CIS_DDJS_COMPONENT	LOG_SID_NO_ACTION
CIS5SXP_BINDING_CONFLICT	5-Notice	Binding [chars]<[chars] [chars]> from peer [node]change to new sgt [chars] from peer %i	SXP received conflicting sgt value from different SXP peer for the same IP prefix.	CIS_DDJS_COMPONENT	LOG_SID_NO_ACTION
CIS5SXP_BINDING_CONFLICT	5-Notice	Binding [chars]<[chars] [chars]> from peer [node]change to new sgt [chars] from peer %i	SXP received conflicting sgt value from different SXP peer for the same IP prefix.	CIS_DDJS_COMPONENT	LOG_SID_NO_ACTION
CIS5SXP_BINDING_DEL	5-Notice	Binding [chars]<[chars] [chars]>-<[node][dec]> deleted in SXP database.	Binding deleted in the SXP database.	CIS_DDJS_COMPONENT	LOG_SID_NO_ACTION
CIS5SXP_BINDING_DEL	5-Notice	Binding [chars]<[chars] [chars]>-<[node][dec]> deleted in SXP database.	Binding deleted in the SXP database.	CIS_DDJS_COMPONENT	LOG_SID_NO_ACTION
CIS5SXP_BINDING_FWD	5-Notice	Binding [chars]<[chars] [chars]>-<[node][dec]> is forwarded to the peer.	SXP forwarded binding to the peer.	CIS_DDJS_COMPONENT	LOG_SID_NO_ACTION
CIS5SXP_BINDING_FWD	5-Notice	Binding [chars]<[chars] [chars]>-<[node][dec]> is forwarded to the peer.	SXP forwarded binding to the peer.	CIS_DDJS_COMPONENT	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CIS5SXP_BINDING_REQ	5-Notice	SXP received binding forwarding request [chars] binding [chars]<[chars] [chars]>.	SXP received a binding forwarding request.	CIS_DDIS_COMPONENT	LOG_SID_NO_ACTION
CIS5SXP_BINDING_REQ	5-Notice	SXP received binding forwarding request [chars] binding [chars]<[chars] [chars]>.	SXP received a binding forwarding request.	CIS_DDIS_COMPONENT	LOG_SID_NO_ACTION
CIS5SXP_BINDING_UPD	5-Notice	Binding [chars]<[chars] [chars]> [chars]. Update binding manager.	SXP updated binding manager with the binding change.	CIS_DDIS_COMPONENT	LOG_SID_NO_ACTION
CIS5SXP_BINDING_UPD	5-Notice	Binding [chars]<[chars] [chars]> [chars]. Update binding manager.	SXP updated binding manager with the binding change.	CIS_DDIS_COMPONENT	LOG_SID_NO_ACTION
<del>CIS5SXP_KEYCHAIN_CHANGE</del>	5-Notice	CTS SXP key-chain changed.	The SXP system key-chain has been changed.	CIS_DDIS_COMPONENT	LOG_SID_NO_ACTION
<del>CIS5SXP_KEYCHAIN_CHANGE</del>	5-Notice	CTS SXP key-chain changed.	The SXP system key-chain has been changed.	CIS_DDIS_COMPONENT	LOG_SID_NO_ACTION
<del>CIS5SXP_PASSWORD_CHANGE</del>	5-Notice	CTS SXP password changed.	The SXP system password has been changed.	CIS_DDIS_COMPONENT	LOG_SID_NO_ACTION
<del>CIS5SXP_PASSWORD_CHANGE</del>	5-Notice	CTS SXP password changed.	The SXP system password has been changed.	CIS_DDIS_COMPONENT	LOG_SID_NO_ACTION
CIS5SXP_DFT_SRCIP_CHG	5-Notice	SXP default source IP is changed [node]-> [node]	SXP default source IP is changed on this device.	CIS_DDIS_COMPONENT	LOG_SID_NO_ACTION
CIS5SXP_DFT_SRCIP_CHG	5-Notice	SXP default source IP is changed [node]-> [node]	SXP default source IP is changed on this device.	CIS_DDIS_COMPONENT	LOG_SID_NO_ACTION





Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CIS5SXP_STATE_CHANGE	5-Notice	CTS SXP [chars]	The SXP feature has changed operational state. SXP feature is functioning only when the feature is enabled.	CIS_DDIS_COMPONENT	LOG_STD_NO_ACTION
CTS-5-SXP_VRF_DEL	5-Notice	SXP Connection <[node][node] configuration in VRF:[chars] is removed.	A VRF is removed the connections configured in this VRF should be removed.	CIS_DDIS_COMPONENT	LOG_STD_NO_ACTION
CTS-5-SXP_VRF_DEL	5-Notice	SXP Connection <[node][node] configuration in VRF:[chars] is removed.	A VRF is removed the connections configured in this VRF should be removed.	CIS_DDIS_COMPONENT	LOG_STD_NO_ACTION
<del>CISUFZCACHE_READ</del>	6-Information	[chars] cache read from file[chars] [chars]	CTS Cache read from cache file done	-	LOG_STD_ACTION
<del>CISUFZCACHE_READ</del>	6-Information	[chars] cache read from file[chars] [chars]	CTS Cache read from cache file done	-	LOG_STD_ACTION
<del>CISUFZCHDDA_EXPIRE</del>	6-Information	[chars] cached data expired	CTS Cache: Cached data expired	-	LOG_STD_ACTION
<del>CISUFZCHDDA_EXPIRE</del>	6-Information	[chars] cached data expired	CTS Cache: Cached data expired	-	LOG_STD_ACTION
<del>CISUFZNR/ACS/PLYS/E</del>	6-Information	Policy Acquisition in ACCESS state for peer[chars] sgt[chars]	-	-	-
<del>CISUFZNR/ACS/PLYS/E</del>	6-Information	Policy Acquisition in ACCESS state for peer[chars] sgt[chars]	-	-	-
<del>CISUFZNR/COMPLETE/E</del>	6-Information	Policy Acquisition in COMPLETE state for peer[chars] sgt[chars]	-	-	-



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CS&amp;UFZPOLYSGLDNE</del>	6-Information	Policy refresh for sgt[chars] indicates no change	-	-	-
<del>CS&amp;UFZPOLYSGLSCS</del>	6-Information	Successfully [chars] SGACL for sgt[chars]	-	-	-
<del>CS&amp;UFZPOLYSGLSCS</del>	6-Information	Successfully [chars] SGACL for sgt[chars]	-	-	-
<del>CS&amp;UFZPOLYSGLDNE</del>	6-Information	SGACL[chars]gen-id[chars] updated to SGACL[chars]gen-id[chars]	-	-	-
<del>CS&amp;UFZPOLYSGLDNE</del>	6-Information	SGACL[chars]gen-id[chars] updated to SGACL[chars]gen-id[chars]	-	-	-
<del>CS&amp;UFZPOLYNSALCSSE</del>	6-Information	Policy Installation in [chars] state for int[chars] peer[chars]	-	-	-
<del>CS&amp;UFZPOLYNSALCSSE</del>	6-Information	Policy Installation in [chars] state for int[chars] peer[chars]	-	-	-
<del>CS&amp;UFZPOLYUDNE</del>	6-Information	Policy update received for old SGT [chars] new SGT[chars]	-	-	-
<del>CS&amp;UFZPOLYUDNE</del>	6-Information	Policy update received for old SGT [chars] new SGT[chars]	-	-	-
<del>CS&amp;UFZPOLYMICRBSSE</del>	6-Information	Policy Installation in [chars] state for int[chars] peer[chars]	-	-	-
<del>CS&amp;UFZPOLYMICRBSSE</del>	6-Information	Policy Installation in [chars] state for int[chars] peer[chars]	-	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CIS6AUHZ_RHRESHXRY	6-Information	Policy refresh timer[node]secs has expired for peer[chars]	-	-	-
CIS6AUHZ_RHRESHXRY	6-Information	Policy refresh timer[node]secs has expired for peer[chars]	-	-	-
CIS6AUHZ_SMDESIROY	6-Information	Policy Installation state machine destroyed in [chars] state for int[chars] peer[chars]	-	-	-
CIS6AUHZ_SMDESIROY	6-Information	Policy Installation state machine destroyed in [chars] state for int[chars] peer[chars]	-	-	-
CTS6AUHZ_SM_INT	6-Information	Policy Installation state machine initializing in [chars] state for int[chars] peer[chars]	-	-	-
CTS6AUHZ_SM_INT	6-Information	Policy Installation state machine initializing in [chars] state for int[chars] peer[chars]	-	-	-
CIS6AUHZ_SM_REINT	6-Information	Policy Installation state machine reinitialization for int[chars] peer[chars]	-	-	-
CIS6AUHZ_SM_REINT	6-Information	Policy Installation state machine reinitialization for int[chars] peer[chars]	-	-	-
CIS6AUHZ_SM_RETRYNSAL	6-Information	Policy Installation retry install for int[chars] peer[chars] flag[hec]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CIS6AUTHZ_SM_RETRY_INSTALL	6-Information	Policy Installation retry install for int[chars] peer[chars] flag[hec]	-	-	-
CIS6AUTHZ_SM_RUN	6-Information	Policy Installation state machine running for int[chars] peer[chars]	-	-	-
CIS6AUTHZ_SM_RUN	6-Information	Policy Installation state machine running for int[chars] peer[chars]	-	-	-
CIS6AUTHZ_SM_STOP	6-Information	Policy Installation state machine stopped for int[chars] peer[chars]	-	-	-
CIS6AUTHZ_SM_STOP	6-Information	Policy Installation state machine stopped for int[chars] peer[chars]	-	-	-
CIS6AUTHZ_WAIT_POLICY_STATE	6-Information	Policy Installation in [chars] state for int[chars] peer[chars]	-	-	-
CIS6AUTHZ_WAIT_POLICY_STATE	6-Information	Policy Installation in [chars] state for int[chars] peer[chars]	-	-	-
CIS6CRICL_AUTH_DISABLE	6-Information	Critical-Authentication disabled on interface[chars]	CTS critical-authentication is disabled on given interface	-	LOG_SID_NO_ACTION
CIS6CRICL_AUTH_DISABLE	6-Information	Critical-Authentication disabled on interface[chars]	CTS critical-authentication is disabled on given interface	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CIS</del> CRICL_AUIHENABLE	6-Information	Critical-Authentication enabled on interface[chars]	CTS critical-authentication is enabled on given interface	-	LOG_SID_NO_ACTION
<del>CIS</del> CRICL_AUIHENABLE	6-Information	Critical-Authentication enabled on interface[chars]	CTS critical-authentication is enabled on given interface	-	LOG_SID_NO_ACTION
<del>CIS</del> CRICL_AUIHREAUTH	6-Information	Critical-Authentication starts re-authentication on interface[chars]	CTS critical-authentication re-authenticates peer on given interface	-	LOG_SID_NO_ACTION
<del>CIS</del> CRICL_AUIHREAUTH	6-Information	Critical-Authentication starts re-authentication on interface[chars]	CTS critical-authentication re-authenticates peer on given interface	-	LOG_SID_NO_ACTION
CTS-6-CTS_INFO	6-Information	[chars]	Informational messages	CIS_DDIS_COMPONENT	LOG_SID_NO_ACTION
CTS-6-CTS_INFO	6-Information	[chars]	Informational messages	CIS_DDIS_COMPONENT	LOG_SID_NO_ACTION
<del>CDN</del> CRPNAUFORCS	6-Information	Successfully forced dot1x port authorized for int[chars]	Port has been put to FORCE AUTHORIZED on a CTS link	-	LOG_STD_ACTION
<del>CDN</del> CRPNAUFORCS	6-Information	Successfully forced dot1x port authorized for int[chars]	Port has been put to FORCE AUTHORIZED on a CTS link	-	LOG_STD_ACTION
<del>CIS</del> DOTIX_PAE_CONFIG	6-Information	[chars] dot1x PAE[chars] for int[chars]	The interface has been configured for dot1x PAEs	-	LOG_STD_ACTION
<del>CIS</del> DOTIX_PAE_CONFIG	6-Information	[chars] dot1x PAE[chars] for int[chars]	The interface has been configured for dot1x PAEs	-	LOG_STD_ACTION
<del>CIS</del> DOTIX_PEER_LOGOFF	6-Information	DOT1X reported peer LOGOFF message on int[chars]	DOT1X reported peer LOGOFF message	-	LOG_SID_NO_ACTION

<del>Facility</del> Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CISDOTX_PEER_LOGOFF</del>	6-Information	DOT1X reported peer LOGOFF message on int[chars]	DOT1X reported peer LOGOFF message	-	LOG_SID_NO_ACTION
<del>CISDOTX_PEER_NO_RESP</del>	6-Information	DOT1X reported peer NO RESPONSE message on int[chars]	DOT1X reported peer NO RESPONSE message	-	LOG_SID_NO_ACTION
<del>CISDOTX_PEER_NO_RESP</del>	6-Information	DOT1X reported peer NO RESPONSE message on int[chars]	DOT1X reported peer NO RESPONSE message	-	LOG_SID_NO_ACTION
<del>CISEND_DATA_ASSESS_FAIL</del>	6-Information	Environment Data Download in assess state	Environment data download in assess state	CIS_DDIS_COMPONENT	LOG_SID_NO_ACTION
<del>CISEND_DATA_ASSESS_FAIL</del>	6-Information	Environment Data Download in assess state	Environment data download in assess state	CIS_DDIS_COMPONENT	LOG_SID_NO_ACTION
<del>CISEND_DATA_CLEAR_SUCCESS</del>	6-Information	Environment data successfully cleared.	Environment data successfully cleared.	CIS_DDIS_COMPONENT	LOG_SID_NO_ACTION
<del>CISEND_DATA_CLEAR_SUCCESS</del>	6-Information	Environment data successfully cleared.	Environment data successfully cleared.	CIS_DDIS_COMPONENT	LOG_SID_NO_ACTION
<del>CISEND_DATA_CARQUEST</del>	6-Information	Command [chars]=[chars]-[chars]	A Change of Authorization request command is received for update-env-data	-	LOG_STD_ACTION
<del>CISEND_DATA_CARQUEST</del>	6-Information	Command [chars]=[chars]-[chars]	A Change of Authorization request command is received for update-env-data	-	LOG_STD_ACTION
<del>CISEND_DATA_REFRESH_TIMER</del>	6-Information	Time to refresh environment data	ENV data refresh timer	-	LOG_SID_NO_ACTION
<del>CISEND_DATA_REFRESH_TIMER</del>	6-Information	Time to refresh environment data	ENV data refresh timer	-	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CIS6</del> ENV_DATA_START_SIAE	6-Information	Environment Data Download in start state	Environment data download in start state	CIS_DDJS_COMPONENT	LOG_SID_NO_ACTION
<del>CIS6</del> ENV_DATA_START_SIAE	6-Information	Environment Data Download in start state	Environment data download in start state	CIS_DDJS_COMPONENT	LOG_SID_NO_ACTION
<del>CIS6</del> ENV_DATA_WAIT_RSP_SIAE	6-Information	Environment Data Download in wait response state	Environment data download in wait response state	CIS_DDJS_COMPONENT	LOG_SID_NO_ACTION
<del>CIS6</del> ENV_DATA_WAIT_RSP_SIAE	6-Information	Environment Data Download in wait response state	Environment data download in wait response state	CIS_DDJS_COMPONENT	LOG_SID_NO_ACTION
CIS6HPS_SW_POST_PASS	6-Information	Software crypto POST PASS	All power-up software crypto algorithmic known answer tests have passed.	-	LOG_SID_NO_ACTION
CIS6HPS_SW_POST_PASS	6-Information	Software crypto POST PASS	All power-up software crypto algorithmic known answer tests have passed.	-	LOG_SID_NO_ACTION
CIS6HA_ENV_DATA_SIAE	6-Information	CTS HA environment-data sync failed. Old environment-data is stale.	The CTS HA environment-data sync to standby failed. CTS environment download could be in progress and old data is stale.	-	LOG_SID_NO_ACTION
CIS6HA_ENV_DATA_SIAE	6-Information	CTS HA environment-data sync failed. Old environment-data is stale.	The CTS HA environment-data sync to standby failed. CTS environment download could be in progress and old data is stale.	-	LOG_SID_NO_ACTION
CIS6FC_AUTHC_SIAE	6-Information	Interface Controller in AUTHENTICATION state for int[chars]	IFC Entering Authentication State	-	LOG_SID_NO_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CIS6IFC_AUTHC_STATE	6-Information	Interface Controller in AUTHENTICATION state for int[chars]	IFC Entering Authentication State	-	LOG_SID_NO_ACTION
CIS6IFC_AUTHORIZ_STATE	6-Information	Interface Controller in AUTHORIZATION state [chars] for int[chars] peer[chars]	IFC Entering Authorization State	-	LOG_SID_NO_ACTION
CIS6IFC_AUTHORIZ_STATE	6-Information	Interface Controller in AUTHORIZATION state [chars] for int[chars] peer[chars]	IFC Entering Authorization State	-	LOG_SID_NO_ACTION
CIS6IFC_CACHE_APPLIED	6-Information	Cache data applied for int[chars]	Inform the user that the CTS link is brought up using cache data	-	LOG_STD_ACTION
CIS6IFC_CACHE_APPLIED	6-Information	Cache data applied for int[chars]	Inform the user that the CTS link is brought up using cache data	-	LOG_STD_ACTION
CIS6IFC_DISCONNECT_STATE	6-Information	Interface Controller in DISCONNECT state for int[chars]	IFC Entering DISCONNECT State	-	LOG_SID_NO_ACTION
CIS6IFC_DISCONNECT_STATE	6-Information	Interface Controller in DISCONNECT state for int[chars]	IFC Entering DISCONNECT State	-	LOG_SID_NO_ACTION
CIS6IFC_HELD_STATE	6-Information	Interface Controller in HELD state for int[chars]	IFC Entering HELD State	-	LOG_SID_NO_ACTION
CIS6IFC_HELD_STATE	6-Information	Interface Controller in HELD state for int[chars]	IFC Entering HELD State	-	LOG_SID_NO_ACTION
CIS6IFC_INIT_STATE	6-Information	Interface Controller in INITIALIZATION state for int[chars]	IFC Entering INIT State	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CTS6-IFC_INIT_STATE	6-Information	Interface Controller in INITIALIZATION state for int[chars]	IFC Entering INIT State	-	LOG_SID_NO_ACTION
<del>CTS6-IFC_LICENSE_ERR_STATE</del>	6-Information	Interface Controller in LICENSE ERR state for int[chars]	IFC Entering LICENSE ERR State	-	LOG_SID_NO_ACTION
<del>CTS6-IFC_LICENSE_ERR_STATE</del>	6-Information	Interface Controller in LICENSE ERR state for int[chars]	IFC Entering LICENSE ERR State	-	LOG_SID_NO_ACTION
CTS6-IFC_OPEN_STATE	6-Information	Interface Controller in OPEN state for int[chars]	IFC Entering OPEN State	-	LOG_SID_NO_ACTION
CTS6-IFC_OPEN_STATE	6-Information	Interface Controller in OPEN state for int[chars]	IFC Entering OPEN State	-	LOG_SID_NO_ACTION
<del>CTS6-CRX_AUTH_SUCCESS</del>	6-Information	Received AUTHC SUCCESS for peer[chars] role[chars] sgt[chars] int[chars]	-	-	-
<del>CTS6-CRX_AUTH_SUCCESS</del>	6-Information	Received AUTHC SUCCESS for peer[chars] role[chars] sgt[chars] int[chars]	-	-	-
CTS6-IFC_SAP_STATE	6-Information	Interface Controller in SAP NEGOTIATION state for int[chars]	IFC Entering SAP State	-	LOG_SID_NO_ACTION
CTS6-IFC_SAP_STATE	6-Information	Interface Controller in SAP NEGOTIATION state for int[chars]	IFC Entering SAP State	-	LOG_SID_NO_ACTION
CTS6-IFC_SM_STATE	6-Information	Interface Controller state machine started for int[chars]	IFC Started	-	LOG_SID_NO_ACTION
CTS6-IFC_SM_STATE	6-Information	Interface Controller state machine started for int[chars]	IFC Started	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CTS-6-INCOMPAT	6-Information	CTS HA ISSU client negotiation results incompatible	The CTS HA ISSU client message version is not compatible on Active and Standby. No CTS data will be synced to Standby in this case	CIS_DDIS_COMPONENT	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
CTS-6-INCOMPAT	6-Information	CTS HA ISSU client negotiation results incompatible	The CTS HA ISSU client message version is not compatible on Active and Standby. No CTS data will be synced to Standby in this case	CIS_DDIS_COMPONENT	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
CIS6PAC_FROM_SUCCESS	6-Information	PAC Provisioning succeeded for [node]A-ID=[chars]	PAC Provisioning succeeded	-	LOG_SID_NO_ACTION
CIS6PAC_FROM_SUCCESS	6-Information	PAC Provisioning succeeded for [node]A-ID=[chars]	PAC Provisioning succeeded	-	LOG_SID_NO_ACTION
CIS6POLICY_COA_DONE	6-Information	Command [chars]=[chars] completed	A Change of Authorization request has been serviced	-	LOG_STD_ACTION
CIS6POLICY_COA_DONE	6-Information	Command [chars]=[chars] completed	A Change of Authorization request has been serviced	-	LOG_STD_ACTION
CIS6POLICY_COA_NO_ACTION	6-Information	Command [chars]=[chars] has no change	A Change of Authorization request has been received but no action was taken due to the system is already in possession of the requested data	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CISPOLY_COANO_ACTION</del>	6-Information	Command [chars]=[chars] has no change	A Change of Authorization request has been received but no action was taken due to the system is already in possession of the requested data	-	LOG_STD_ACTION
<del>CISPOLY_COANO_SESSION</del>	6-Information	Command [chars]=[chars] has no session associated	A Change of Authorization request has been received for information that the system is not in possession of	-	LOG_STD_ACTION
<del>CISPOLY_COANO_SESSION</del>	6-Information	Command [chars]=[chars] has no session associated	A Change of Authorization request has been received for information that the system is not in possession of	-	LOG_STD_ACTION
<del>CISPOLY_COARBC_REQUEST</del>	6-Information	Command [chars]=[chars]-[chars]	A Change of Authorization request command is received for update-rbacl	-	LOG_STD_ACTION
<del>CISPOLY_COARBC_REQUEST</del>	6-Information	Command [chars]=[chars]-[chars]	A Change of Authorization request command is received for update-rbacl	-	LOG_STD_ACTION
<del>CISPOLY_COASGT_REQUEST</del>	6-Information	Command [chars]=[chars]	A Change of Authorization request command is received for update-sgt	-	LOG_STD_ACTION
<del>CISPOLY_COASGT_REQUEST</del>	6-Information	Command [chars]=[chars]	A Change of Authorization request command is received for update-sgt	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CISPOLICYBCMONTRAL</del>	6-Information	Failed to set monitor all for dynamic policies	An error occurred while CTS attempted to set monitor flag for all dynamic installed policies.	-	LOG_STD_ACTION
<del>CISPOLICYBCMONTRAL</del>	6-Information	Failed to set monitor all for dynamic policies	An error occurred while CTS attempted to set monitor flag for all dynamic installed policies.	-	LOG_STD_ACTION
<del>CISPORTAUTHORIZEDSUCCES</del>	6-Information	Port authorized for int[chars]	Port has been authorized on a CTS link	-	LOG_STD_ACTION
<del>CISPORTAUTHORIZEDSUCCES</del>	6-Information	Port authorized for int[chars]	Port has been authorized on a CTS link	-	LOG_STD_ACTION
<del>CISPORTUNAUTHORIZED</del>	6-Information	Port unauthorized for int[chars]	Port has been unauthorized on a CTS link	-	LOG_STD_ACTION
<del>CISPORTUNAUTHORIZED</del>	6-Information	Port unauthorized for int[chars]	Port has been unauthorized on a CTS link	-	LOG_STD_ACTION
<del>CISREAUTHIMREXPRD</del>	6-Information	Timer expired on int[chars]	REAUTH Timer expired	-	LOG_SID_NO_ACTION
<del>CISREAUTHIMREXPRD</del>	6-Information	Timer expired on int[chars]	REAUTH Timer expired	-	LOG_SID_NO_ACTION
<del>CISREAUTHPERIODCHG</del>	6-Information	Reauthentication period is changed to %u	Reauthentication period is changed while applying configuration change to the link object	-	LOG_SID_NO_ACTION
<del>CISREAUTHPERIODCHG</del>	6-Information	Reauthentication period is changed to %u	Reauthentication period is changed while applying configuration change to the link object	-	LOG_SID_NO_ACTION
<del>CISVALIDPKIDMISMATCH</del>	6-Information	PMKID Mismatch on int[chars] received: [node]x [node]x [node]x	The PMKID received from peer is different from the expected PMKID	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CTS</del> PMKID_MISMATCH	6-Information	PMKID Mismatch on int[chars] received: [node]x [node]x [node]x [node]x	The PMKID received from peer is different from the expected PMKID	-	LOG_STD_ACTION
CTS6SAP_NEG_DOWNREV	6-Information	SAP negotiation for int[chars] switching from version[dec] to peer's version[dec]	-	-	-
CTS6SAP_NEG_DOWNREV	6-Information	SAP negotiation for int[chars] switching from version[dec] to peer's version[dec]	-	-	-
<del>CTS</del> SAP_NEG_DOWNREV_HSPAT	6-Information	SAP negotiation for int[chars] - Received message 2 with lower version[dec]	SAP negotiation switching to peer's lower version restarting message 1	-	LOG_SID_NO_ACTION
<del>CTS</del> SAP_NEG_DOWNREV_HSPAT	6-Information	SAP negotiation for int[chars] - Received message 2 with lower version[dec]	SAP negotiation switching to peer's lower version restarting message 1	-	LOG_SID_NO_ACTION
<del>CTS</del> SAP_REKEY_TIMER_ERR	6-Information	SAP Rekey Timer Expired for interface[chars] after [node]	SAP Rekey Timer Expired.	-	LOG_SID_NO_ACTION
<del>CTS</del> SAP_REKEY_TIMER_ERR	6-Information	SAP Rekey Timer Expired for interface[chars] after [node]	SAP Rekey Timer Expired.	-	LOG_SID_NO_ACTION
CTS-6-SAP_SUCCESS	6-Information	SAP Success for int[chars] selected cipher[chars] version[dec]	-	-	-
CTS-6-SAP_SUCCESS	6-Information	SAP Success for int[chars] selected cipher[chars] version[dec]	-	-	-
CTS6SXP_BINDING_ERR	6-Information	Binding [chars]<[chars] [chars]>-<[node][dec]> [chars]	SXP binding update error.	CTS_DDDIS_COMPONENT	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CIS6SXP_BINDING_ERR	6-Information	Binding [chars]<[chars] [chars]><[node][dec]> [chars]	SXP binding update error.	CIS_DDIS_COMPONENT	LOG_STD_ACTION
CTS-6-SXP_CONFIG	6-Information	Connection [chars]<[node]i> [chars]	A SXP configuration error occurred. The connection can not be setup correctly.	CIS_DDIS_COMPONENT	"Ensure that the connection configure on both ends" " have the matched mode IP addresses."
CTS-6-SXP_CONFIG	6-Information	Connection [chars]<[node]i> [chars]	A SXP configuration error occurred. The connection can not be setup correctly.	CIS_DDIS_COMPONENT	"Ensure that the connection configure on both ends" " have the matched mode IP addresses."
CIS6SXP_CONN_STATE_CHG	6-Information	Connection [chars]<[node][node][dec] state changed from [chars] to [chars].	SXP Connection with the specified instance number changed state.	CIS_DDIS_COMPONENT	LOG_SID_NO_ACTION
CIS6SXP_CONN_STATE_CHG	6-Information	Connection [chars]<[node][node][dec] state changed from [chars] to [chars].	SXP Connection with the specified instance number changed state.	CIS_DDIS_COMPONENT	LOG_SID_NO_ACTION
CIS6SXP_FILTER_COUNT_CHG	6-Information	CTS SXP filter rules exceed [[dec][node] threshold. Reached count of [dec] out of [dec]	SXP Filter count on the box changed.	CIS_DDIS_COMPONENT	LOG_SID_NO_ACTION
CIS6SXP_FILTER_COUNT_CHG	6-Information	CTS SXP filter rules exceed [[dec][node] threshold. Reached count of [dec] out of [dec]	SXP Filter count on the box changed.	CIS_DDIS_COMPONENT	LOG_SID_NO_ACTION
CIS6SXP_FILTER_COUNT_CHG	6-Information	SXP filter rules dropped below [[dec][node] threshold. Reached count of [dec] out of [dec]	SXP Filter count on the box dropped below lower threshold.	CIS_DDIS_COMPONENT	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CIS-6-CONICNWRHSD</del>	6-Information	SXP filter rules dropped below [[dec]][node] threshold. Reached count of [dec] out of [dec]	SXP Filter count on the box dropped below lower threshold.	CIS_DDIS_COMPONENT	LOG_SID_NO_ACTION
<del>CIS-6-PIRRUECONICG</del>	6-Information	CTS SXP filter rules exceed [[dec]][node] threshold. Reached count of [dec] out of [dec] in filter [chars].	SXP Filter rule count on the box changed.	CIS_DDIS_COMPONENT	LOG_SID_NO_ACTION
<del>CIS-6-PIRRUECONICG</del>	6-Information	CTS SXP filter rules exceed [[dec]][node] threshold. Reached count of [dec] out of [dec] in filter [chars].	SXP Filter rule count on the box changed.	CIS_DDIS_COMPONENT	LOG_SID_NO_ACTION
<del>CIS-6-CONICNWRHSD</del>	6-Information	SXP filter rules dropped below [[dec]][node] threshold. Reached count of [dec] out of [dec] in filter [chars].	SXP Filter rule count on the box exceeded upper threshold.	CIS_DDIS_COMPONENT	LOG_SID_NO_ACTION
<del>CIS-6-CONICNWRHSD</del>	6-Information	SXP filter rules dropped below [[dec]][node] threshold. Reached count of [dec] out of [dec] in filter [chars].	SXP Filter rule count on the box exceeded upper threshold.	CIS_DDIS_COMPONENT	LOG_SID_NO_ACTION
CTS-6-SXP_PEER_IP	6-Information	Peer IP address [chars] [node] belongs to this device.	-	-	-
CTS-6-SXP_PEER_IP	6-Information	Peer IP address [chars] [node] belongs to this device.	-	-	-
CTS-6-SXP_SRC_IP	6-Information	Source IP address [chars] [node] does not belong to this device.	-	-	-



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CTS-6-SXP_SRC_IP	6-Information	Source IP address [chars] [node] does not belong to this device.	-	-	-
CIS6SXP_TIMER_START	6-Information	Connection [chars]<[node][node] [chars] timer started.	The specified SXP timer started.	CIS_DDIS_COMPONENT	LOG_STD_NO_ACTION
CIS6SXP_TIMER_START	6-Information	Connection [chars]<[node][node] [chars] timer started.	The specified SXP timer started.	CIS_DDIS_COMPONENT	LOG_STD_NO_ACTION
CIS6SXP_TIMER_STOP	6-Information	Connection [chars]<[node][node] [chars] timer stopped.	The specified SXP timer stopped.	CIS_DDIS_COMPONENT	LOG_STD_NO_ACTION
CIS6SXP_TIMER_STOP	6-Information	Connection [chars]<[node][node] [chars] timer stopped.	The specified SXP timer stopped.	CIS_DDIS_COMPONENT	LOG_STD_NO_ACTION
<del>CSUFZNR_HSDN_AID</del>	7-Debug	Error retrieving the authorization entry handle	Error retrieving the authorization entry handle	-	LOG_STD_ACTION
<del>CSUFZNR_HSDN_AID</del>	7-Debug	Error retrieving the authorization entry handle	Error retrieving the authorization entry handle	-	LOG_STD_ACTION
<del>CSUFZNR_HDGRQIS</del>	7-Debug	RADIUS request to acquire policy for peer[chars] sgt[chars] was not	RADIUS request to acquire policy for peer was not sent due to pending request in progress	-	LOG_STD_ACTION
<del>CSUFZNR_HDGRQIS</del>	7-Debug	RADIUS request to acquire policy for peer[chars] sgt[chars] was not	RADIUS request to acquire policy for peer was not sent due to pending request in progress	-	LOG_STD_ACTION
<del>CSUFZNR_WAORACE</del>	7-Debug	Policy Acquisition for peer[chars] sgt[chars] is waiting for the	Policy acquisition for peer is waiting for the ACE download complete	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CIS/AUIHZ/ERR/WAITCRAC	7-Debug	Policy Acquisition for peer[chars] sgt[chars] is waiting for the	Policy acquisition for peer is waiting for the ACE download complete	-	LOG_STD_ACTION
CIS/AUIHZ/ERR/PL_DEL	7-Debug	Deleting peer policy for peer[chars] sgt[chars]	-	-	-
CIS/AUIHZ/ERR/PL_DEL	7-Debug	Deleting peer policy for peer[chars] sgt[chars]	-	-	-
CIS/AUIHZ/ERR/PL_PENDING	7-Debug	Pending peer policy delete for peer[chars] sgt[chars] due to	Pending peer policy delete for peer due to outstanding SGACL install/uninstall	-	LOG_STD_ACTION
CIS/AUIHZ/ERR/PL_PENDING	7-Debug	Pending peer policy delete for peer[chars] sgt[chars] due to	Pending peer policy delete for peer due to outstanding SGACL install/uninstall	-	LOG_STD_ACTION
CTS-7-CTS_ASSERT	7-Debug	Assertion Failure [chars] @[chars]:[dec] : [chars]	CTS_INTERNAL_ERROR	CIS_DDJS_COMPONENT	LOG_STD_ACTION
CTS-7-CTS_ASSERT	7-Debug	Assertion Failure [chars] @[chars]:[dec] : [chars]	CTS_INTERNAL_ERROR	CIS_DDJS_COMPONENT	LOG_STD_ACTION
CUBE-3-LICENSING	3-Error	[chars]	CUBE Licensing Enforcement	ipipgw	LOG_SIDSH_TECH_ACTION
CUBE-3-LICENSING	3-Error	[chars]	CUBE Licensing Enforcement	ipipgw	LOG_SIDSH_TECH_ACTION
CUBE-5-LICENSE_INFO	5-Notice	[chars]	Periodic entitlement status	ipipgw	LOG_STD_ACTION
CUBE-5-LICENSE_INFO	5-Notice	[chars]	Periodic entitlement status	ipipgw	LOG_STD_ACTION
CVAC-2-INIT_FAILED	2-Critical	Virtual appliance configuration cannot occur: [chars]	The system was unable to even attempt to apply virtual appliance configuration for the given reason.	virt-infra	LOG_SIDSH_TECH_ACTION

Family-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CVAC3-CONFIG_ERROR	3-Error	[node]errors while applying configs generated from file [chars].	Out of the generated virtual appliance configuration commands the given number of commands were rejected by the IOSd parser. The indicated log file will describe exactly which commands were rejected as will any accompanying CVAC4-CLI_FAILURE messages in this log.	virt-infra	"Consult the indicated log file for details of the " "errors that were encountered. Also inspect the " "current running-config and startup-config of the " "router using the <CmdBold>show " "running-config</CmdBold> and <CmdBold>show " "startup-config</CmdBold> commands in order to " "confirm that the configuration is valid."
CVAC3-FILE_ERROR	3-Error	Could not [chars] file [chars]: [chars]	The system was unable to perform the indicated operation on the indicated file for the indicated reason	virt-infra	"Make sure the given disk is correctly formatted " "and has sufficient free space available."
CVAC3-XML_ERROR	3-Error	Error while parsing XML from file [chars]: error '[chars]' element '[chars]' attribute '[chars]' explanation '[chars]'. File will be saved to [chars]	The contents of the given file were not correct XML and as a result XML parsing aborted due to the given reason. No new configuration was applied to the router from this file.	virt-infra	"Investigate the contents of the saved file " "to determine the cause of the reported error and " "if possible fix the file contents restore it to " "its original location and reload to re-process it. " LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CVAC4-CLI_FAILURE	4-Warning	Configuration command failure: '[chars]' was rejected	The indicated IOSd configuration command generated by the CVAC subsystem was rejected by the IOSd CLI. Look for a subsequent CVAC3-CONFIG_ERROR log message which will contain a reference to a logfile containing more information about this failure.	virt-infra	"Inspect the log file to determine why the command " " was rejected and how to correct it. If necessary " " manually re-issue the corrected command."
CVAC4-CONFIG_DONE	4-Warning	Configuration generated from file [chars] was applied and saved to NVRAM. See [chars] for more details.	The generated configuration was applied and the resulting system configuration has been saved to the startup-config in NVRAM. The indicated logfile may contain additional information.	virt-infra	LOG_SID_NO_ACTION
CVAC4-FILE_IGNORED	4-Warning	Configuration file [chars] is ignored: [chars]	The indicated configuration file was ignored and not used for configuration for the given reason.	virt-infra	LOG_SID_NO_ACTION
CVAC4-PROPERTY_IGNORED	4-Warning	Property key '[chars]' value '[chars]' ignored: [chars]	The indicated XML configuration property was ignored for the indicated reason	virt-infra	"If the property was not applied due to an invalid " "key or value either change these attributes to "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CVAC-4-WRITE_FAIL	4-Warning	Configuration generated from file [chars] was applied but could not be saved to NVRAM. See [chars] for more details.	The generated configuration was applied but the resulting system configuration was not saved to the startup-config in NVRAM. The indicated logfile may contain additional information.	virt-infra	"Issue the write memory command on the IOS CLI"
CVAC-5-XML_PARSED	5-Notice	[node]lines of configuration generated from file [chars]	The indicated file was successfully parsed to generate IOSd configuration commands. The generated configs have not yet been applied to the system.	virt-infra	LOG_SID_NO_ACTION
<del>CVLA-MEM-DNDR</del>	4-Warning	CVLA memory utilization has declined below its threshold memory is available for [chars].	After CVLA was in memory shortage memory utilization has declined below its threshold New traffic flows will be opened properly	qfp-cvla	LOG_STD_ACTION
<del>CVLA-MEM-DNDR</del>	4-Warning	CVLA reached maximum configured memory utilization. Can't allocate more memory for [chars].	Because of CVLA memory shortage new flows may not be opened properly	qfp-cvla	LOG_STD_ACTION
<del>CVLA-MEM-DNDR</del>	4-Warning	System free memory has increased above its lower watermark memory is available for [chars].	After system memory was in shortage free memory has increased above its lower watermark New traffic flows will be opened properly	qfp-cvla	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CVLA-1-LOW_WATER</del>	4-Warning	System free memory has reached its lower watermark. Can't allocate more memory for [chars].	Because of system memory shortage new flows may not be opened properly	qfp-cvla	LOG_STD_ACTION
CVLA-2-IPC_INIT	2-Critical	IPC message handler registration failure rc %u	Registering an IPC message handler for the CVLA infra failed. This will cause the infra to not function.	qfp-cvla	"This is normally a software issue. " "The consequences are that the CVLA infra will not function. " LOG_STD_ACTION
<del>CVLA-2-FAULT_HANDLE</del>	3-Error	Invalid handle magic 0x[hec] for handle %p	Internal error Feautre handle contains invalid magic	cpp-ucode	LOG_STD_ACTION
CVLA-3-IPC_NORES	3-Error	No space for the IPC reply size %u	For a request from upper CVLA software stack layers it was not possible to allocate space for a reply for the specified size. The consequence of this could be a stuck monitor that cannot be established etc. In rare cases this could also affect other operations such as infra activation.	qfp-cvla	"This is normally a software issue. " LOG_SID_RECUR_ACTION
CVLA-3-IPC_OPEN_REPLY	3-Error	IPC Open Reply failed request %u	For a request from upper CVLA software stack layers it was not possible to open the reply buffer. The consequence of this could be a stuck monitor that cannot be established etc. In rare cases this could also affect other operations such as infra activation.	qfp-cvla	"This is normally a software issue. " LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CWAN_CHOC_DS0_CDBAL	3-Error	Port [dec]/[dec] - fail to create a SONET controller data structure	The software resource can't be allocated for this hardware	osm-choc-ds0	LOG_STD_ACTION
CWAN_CHOC_DS0_CBPARA	3-Error	[chars]: invalid config parameter [chars]	Configuration parameter is invalid	osm-choc-ds0	LOG_STD_ACTION
CWAN_CHOC_DS0_CNCRER	3-Error	config error on port [dec]/[dec][chars] cmd [dec] [chars]	A configuration command sent from the system to a linecard failed	osm-choc-ds0	LOG_STD_ACTION
CWAN_CHOC_DS0_CPRIAL	3-Error	Port [dec]/[dec] - fail to create a port instance data structure	The software resource can't be allocated for this hardware	osm-choc-ds0	LOG_STD_ACTION
CWAN_CHOC_DS0_CCRUNKN	3-Error	Slot [dec] - Unknown linecard type [dec] removed	This hardware can't be recognized by this version of software.	osm-choc-ds0	"Check software version. Make sure the software supports the hardware."
CWAN_CHOC_DS0_CCBERR	3-Error	CCB command error cmd [dec] arg [dec] on T1 [dec]/[dec]/[dec]	A command sent from the system to a linecard failed	osm-choc-ds0	LOG_STD_ACTION
CWAN_CHOC_DS0_CKNMIB	3-Error	Unknown MIB type [node]from slot %u	Draco received unknown communication message from linecard	osm-choc-ds0	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
CWAN_CHOC_DS0_CKNCHR	3-Error	Slot [dec] - Unknown linecard type [dec]	This hardware can't be recognized by this version of software.	osm-choc-ds0	"Check software version. Make sure the software supports the hardware."
CWAN_CHOC_DS0_CCBERR	3-Error	CCB command error cmd [dec] arg [dec] on port [dec]/[dec] channel [dec]	A command sent from the system to a linecard failed	osm-choc-ds0	LOG_STD_ACTION
CWAN_CHOC_DS0_CIALCAL	4-Warning	Interface [dec]/[dec] allocation failed: [chars]	required resources unavailable.	osm-choc-ds0	"Either upgrade system memory or reconfigure memory usage."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CWAN_CHCD_04CORRUPT	4-Warning	[chars] information seems to be corrupted bad value =%u	wrong parameters detected internally	osm-choc-ds0	"This is only a debug warning message. The unexpected value is\n\ discarded."
CWAN_CHCD_04CONFG	4-Warning	[chars] config error [dec] lc delay:[dec] ms: [chars]	RP received configuration error from linecard.	osm-choc-ds0	"Reconfigure or shut/no shut the error channel."
CWAN_CHCD_04CLOCKFL	4-Warning	Interface [chars] failed to acquire semaphore for LC access: [chars]	Other process locked the semaphore for too long.	osm-choc-ds0	LOG_STD_ACTION
CWAN_CHCD_04PROVFL	4-Warning	Interface [chars] provisioning ch[dec] failed: [chars]	provisioning conflict or resource shortage	osm-choc-ds0	"workaround: under 'controller sonet' do 'no channelized' followed\n\ by 'channelized' twice. If problem persists do a\n\ 'show controller sonet <slot>/<port>' and\n\ 'show controller {pos/serial} <slot>/<port>:<chan>' then contact\n\ cisco technical support representative."
CWAN_CHCD_04UNPROVFL	4-Warning	Interface [chars] unprovisioning failed: [chars]	Linecard failed to response unprovisioning command.	osm-choc-ds0	LOG_STD_ACTION
CWAN_CHCD_04UNSUP	4-Warning	Slot [dec]: Unknown [chars] [dec]	This value is not recognized by this version of software.	osm-choc-ds0	"Check linecard version. Normally this is harmless but worth contacting\n\ cisco technical support representative."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSMCHOCDSMWRONGIL	4-Warning	[node]6s received wrong loveletter : type=[node]length=%u	wrong parameters detected internally	osm-choc-ds0	"This is only a debug warning message. The unexpected messages from\n\ linecard is harmlessly discarded."
OSMCHOCDSMCOISALS	5-Notice	[chars] [chars]	A configurable loopback status.	-	LOG_SID_NO_ACTION
OSMCHOCDSMENQUELAL	3-Error	[chars]	cmd enqueue failure	OSMCHOCDSMCOISALS	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
OSMCHOCDSMIDHFWB	3-Error	Invalid Subrate hwidb on T3 [dec]/[dec]	invalid subrate hwidb	OSMCHOCDSMCOISALS	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
OSMCHOCDSMIDRSHRCK	3-Error	The [chars] subblock named [chars] was not removed	A software error has occurred this message is displayed when\n\ IDB subblocks cannot be removed.	OSMCHOCDSMCOISALS	LOG_STD_ACTION
OSMCHOCDSMNULLMIB	3-Error	Null DS3 MIB table snmp_if_index %u	System cannot find the DS3 MIB table pointer	OSMCHOCDSMCOISALS	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
OSMCHOCDSMPROCESSROR	3-Error	process error - [chars]	process encountered fatal error	OSMCHOCDSMCOISALS	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
OSMCHOCDSMPROCESSIAL	3-Error	process creation failed for [chars]	process creation failed for handling cmd	OSMCHOCDSMCOISALS	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CWANCHOLSSNDIBRAY</del>	3-Error	send driver ready msg failed for [dec]	IPC message failure	<del>osm-ct3</del>	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
<del>CWANCHOLSSACUGHR</del>	3-Error	T1 [node][node][node]config command error cmd [node]arg [node]retval %u	A command sent from the system to a linecard failed	osm-ct3	LOG_STD_ACTION
<del>CWANCHOLSSACUGHR</del>	3-Error	T3 [node][node]config command error cmd [node]arg [node]retval %u	A command sent from the system to a linecard failed	osm-ct3	LOG_STD_ACTION
<del>CWANCHOLSSKNOWCHR</del>	3-Error	Slot [dec] - Unknown linecard type [dec]	This hardware can't be recognized by this version of software.	osm-ct3	"Check software version. Make sure the software supports the hardware."
<del>CWANCHOLSSACONCHR</del>	3-Error	[chars] T1 [dec] channel group [dec] of T3 [dec]/[dec] unsuccessful error code [dec]	channel configuration error	<del>osm-ct3</del>	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
<del>CWANCHOLSSACUGHR</del>	3-Error	VC [node][node][node]config command error cmd [node]arg [node]retval %u	A command sent from the system to a linecard failed	<del>osm-ct3</del>	LOG_STD_ACTION
<del>CWANCHOLSSDEFBRAE</del>	5-Notice	[chars] [chars]	Remote subrate configuration changed	<del>osm-ct3</del>	"Inform the network operator that subrate configuration changed by\n\ remote end"
<del>CWANCHOLSSKNOWNET</del>	5-Notice	[chars]	Unexpected event received by the process	<del>osm-ct3</del>	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CWAN_CHOC4ALLOCFAL	4-Warning	Interface [dec]/[dec] allocation failed: [chars]	required resources unavailable.	osm-choc-ds3	"Either upgrade system memory or reconfigure memory usage."
CWAN_CHOC4CORRUPT	4-Warning	[chars] information seems to be corrupted bad value =%u	wrong parameters detected internally	osm-choc-ds3	"This is only a debug warning message. The unexpected value is\n\ discarded."
CWAN_CHOC4IFCONFIG	4-Warning	[chars] config error [dec] lc delay:[dec] ms: [chars]	RP received configuration error from linecard.	osm-choc-ds3	"Reconfigure or shut/no shut the error channel."
CWAN_CHOC4CFG_MACH	4-Warning	LC needs reboot due to config mismatch on [chars] rc=%u	RP detects LC's channel provisioning mismatching start-config	osm-choc-ds3	"reset linecard: hw-module module <slot> reset"
CWAN_CHOC4CLOCK_FAL	4-Warning	Interface [chars] failed to acquire semaphore for LC access: [chars]	Other process locked the semaphore for too long.	osm-choc-ds3	LOG_STD_ACTION
CWAN_CHOC4PROV_FAL	4-Warning	Interface [chars] provisioning ch[dec] failed: [chars]	provisioning conflict or resource shortage	osm-choc-ds3	"workaround: under 'controller sonet' do 'no channelized' followed\n\ by 'channelized' twice. If problem persists do a\n\ 'show controller sonet <slot>/<port>' and\n\ 'show controller {pos/serial} <slot>/<port>:<chan>' then contact\n\ cisco technical support representative."
CWAN_CHOC4UNPROV_FAL	4-Warning	Interface [chars] unprovisioning failed: [chars]	Linecard failed to response unprovisioning command.	osm-choc-ds3	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CWAN_CHOC4UNSUP	4-Warning	Slot [dec]: Unknown [chars] [dec]	This value is not recognized by this version of software.	osm-choc-ds3	"Check linecard version. Normally this is harmless but worth contacting\n\ncisco technical support representative."
CWAN_CHOC4WRONG_IL	4-Warning	[node]6s received wrong loveletter : type=[node]length=%u	wrong parameters detected internally	osm-choc-ds3	"This is only a debug warning message. The unexpected messages from\n\linecard is harmlessly discarded."
CWAN_CHOC6LDRMR	6-Information	OIR failed: slot [node]linecard not responding to initial query	OIR insertion aborted due to failing to contact lc	osm-choc-ds3	LOG_STD_ACTION
CWAN_CHOC6WRONG_GULF	6-Information	[chars] hardware version gulf v[node]does not support OC-12 or OC-48	Early version of hw basic GULF2.0 and below has bugs in\n\rx fifo depth which can not handle oc-12 or oc-48 rate.\n\Either limiting channel provisioning or upgrading hw	osm-choc-ds3	"Limit channel provisioning to DS3 and/or OC3"
CWAN_C7600B_ACCESS_INTERFACE	5-Notice	Associated container interface does not exist for [chars]	The container interface no longer exists for access interface.	c7600-bb	LOG_SID_NO_ACTION
CWAN_C7600B_ACCESS_VRF	5-Notice	VRF of [chars] access does not match with [chars]	VRF of access interface does not match with that of associated container interface. Either container interface is deleted or VRF of container interface is changed	c7600-bb	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CWNHA3CCBNIFRRR	3-Error	Failed to initialize CCB list for slot [dec].	The High Availability component for WAN modules failed to properly initialize state information for the specified slot.	c7600-ha	LOG_STD_ACTION
CWNHA3CCMDUNQUE	3-Error	More than one command registered for unique-key generator for interface configuration command [node]	The High Availability component for WAN modules is unable to properly synchronize state information for the current configuration due to a conflict in command identifiers.	c7600-ha	LOG_STD_ACTION
CWNHA3CCIGNIFRRR	3-Error	Failed to initialize Interface Configuration list for slot [node][node]	The High Availability component for WAN modules failed to properly initialize state information for the specified slot.	c7600-ha	LOG_STD_ACTION
CWNHA3CCIGNUNQUEY	3-Error	No unique-key generator registered for interface configuration command [node]	The High Availability component for WAN modules is unable to properly synchronize state information for the current configuration.	c7600-ha	LOG_STD_ACTION
CWNHA3CCPLABCKERRR	4-Warning	CCB playback failed for slot [dec].	The High Availability component for WAN modules failed to synchronize some new state information for the specified slot.	c7600-ha	"Reload the standby supervisor module to force a fresh bulk " "synchronization. If this error recurs " LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CWAN_HA_CCB_REC_FAILED	4-Warning	CCB record failed for slot [dec].	The High Availability component for WAN modules failed to record some new state information for the specified slot.	c7600-ha	LOG_STD_ACTION
CWAN_HA_CFG_DLTSIBRC	4-Warning	For Interface Configuration command [node]default retval list search resulted 0x[hec] for slot [node]%u	The High Availability component for WAN modules failed to synchronize some new state information for the specified slot.	c7600-ha	show platform redundancy \ if-config default-retvals
CWAN_HA_CFG_PLAYBACK	4-Warning	Interface Configuration command [node]playback failed for slot [node][node]	The High Availability component for WAN modules failed to synchronize some new state information for the specified slot.	c7600-ha	LOG_STD_ACTION
CWAN_HA_CFG_REC_FAILED	4-Warning	Interface Configuration command [node]record failed for slot [node][node]	The High Availability component for WAN modules failed to record some new state information for the specified slot.	c7600-ha	LOG_STD_ACTION
CWAN_HA_EVENT_BULK_SYNC	4-Warning	[chars] ifevent: [dec] error: [dec]	Failed CWAN if-event bulk sync.	c7600-ha	LOG_SID_NO_ACTION
CWAN_HA_EVENT_INCREMENTAL	4-Warning	[chars] for ifevent: [dec] with error: [dec]	Failed CWAN if-event incremental sync.	c7600-ha	LOG_SID_NO_ACTION
CWAN_HA_EVENT_BULK_SYNC	4-Warning	Unexpected value for bulk sync type [dec] received.	Received a unexpected type in bulk sync message.	c7600-ha	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CWAN_HA-4-LTLSYNCFAIL	4-Warning	Failed to sync LTL data during [chars] for [chars] [node] slot=[dec]slotunit=[dec] if_num=[dec] to standby var=[dec]sh=[dec]f=[dec]	Some LTL data did not sync correctly from active to standby RP\n	c7600-ha	LOG_STD_ACTION
CWAN_HA-4-SRPBULKSYNC	4-Warning	Failed to [chars] SRP bulk data slot=[dec] intf=[dec] type=[dec] ret code [dec]\n	Some SRP-related state information failed to sync correctly from the active RP to the standby RP during the HA bulk-synchronization phase.	c7600-ha	LOG_STD_ACTION
CWAN_HA-4-SRPSYNC	4-Warning	Failed to sync SRP packet slot=[dec]intf=[dec] to standby	Some SRP-related state information failed to sync correctly from the active RP to the standby RP when the configuration changed.	c7600-ha	LOG_STD_ACTION
CWAN_HA-4-SRPSYNC	4-Warning	Slot [dec]: [chars]\n	An error occurred while syncing SRP states from active RP to standby RP.	c7600-ha	LOG_STD_ACTION
CWAN_OVERRIDE_MAC_MAD	1-Alert	[chars] has invalid override-mac-address.	The user has issued an override-mac-address that does not match the mac address of the MSFC. This can occur if the config has been moved to new hardware or the mac-address command has been used on another interface. while the system automatically corrects this the config needs to be adjusted.	cwan	"Modify the override-mac-address command in the config."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CWAN_RP3-IFCOM_MANY_VRF	1-Alert	Slot [node]can not support all the VRFs configured!	A non-Enhanced OSM card has been inserted into a router with more than 511 IP VRFs already configured. This router cannot support more than 511 IP VRFs if there is at least one non-Enhanced OSM in the system.	cwan	"Replace the inserted non-Enhanced OSM with " "an Enhanced OSM or decrease the number of " "IP VRFs to 511 or fewer."
CWAN_RP3-BADIFCOMTYPE	3-Error	Bad ifcom message type=%u	A WAN module passed down a message that the RP software\n\ was not prepared to handle.	-	LOG_STD_ACTION
CWAN_RP3-BOOTFAIL	3-Error	The WAN module in slot [node][node]failed to boot	The WAN module in the slot indicated in the error messages \n\ failed to boot and will be reset.	-	LOG_SID_RECUR_ACTION
CWAN_RP3-CHANGE_NEGOTIATION	3-Error	Unable to change negotiation. Failed to send message to\n\ slot [dec] port [dec]!	MSFC2 failed to send message to change negotiation to\n\ OSM-4GE-WAN-GBIC	-	LOG_STD_ACTION
CWAN_RP3-CWAN_IFCOM_RM	3-Error	Cwan ifcom RMI failure - [chars][dec]	The CWAN IFCOM RMI Registration.	c7600-env	LOG_SID_NO_ACTION
CWAN_RP3-ERROR	3-Error	NULL	This message can take many forms. It provides information about a\n\ software error.	-	LOG_STD_ACTION
CWAN_RP3-FAILED_CONFIG	3-Error	Failed to send line card config message [chars] for slot [node]port %u	The RP could not send the specified configuration message to the line card	osm-gigwan	LOG_STD_ACTION
CWAN_RP3-FOREVER	3-Error	cmd [node]to [chars] slot [node][node]took [node]usecs done [hec]	A CCB command from the RP to a WAN module took longer than expected.	-	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CWAN_RP3GBICNSRIED	3-Error	GBIC media type [dec] inserted in [chars]	A GBIC was inserted in the interface.	cwan	LOG_STD_NO_ACTION
CWAN_RP3GBICREMOVED	3-Error	GBIC removed from [chars]	The GBIC was removed from the interface.	cwan	LOG_STD_NO_ACTION
CWAN_RP3HV_ALLOCFAL	3-Error	[chars]: Failed to allocate a VLAN: [chars]	VLAN allocation failed for the stated reason.	-	"First power down any unused linecards. " "Next delete any unused interfaces/subinterfaces and " "any unused L2 VLANs from the VLAN database. " "Then wait for >3 minutes and retry."
CWAN_RP3ICMNCIOWNR	3-Error	Process '[chars]' waiting for interface configuration command 0x[hec] to	A process on the RP sent an configuration command to the slot specified in the error message and a different process waited for the result. This could cause incorrect line card configuration states.	c7600-ha	LOG_STD_ACTION
CWAN_RP3ICFGFOREMR	3-Error	to [chars] slot [node][node]took [node]usecs ret_val [node]	A interface config command from the RP to a WAN module took \n\ longer than expected.	-	LOG_STD_ACTION
CWAN_RP3IFCNHG_ERR	3-Error	Interface config failed on port [dec]/[dec] cmd [dec] retval [dec]	A configuration command sent from the system to a linecard failed	osm-ct3	LOG_STD_ACTION
CWAN_RP3IFCALLOCFAL	3-Error	Failed to allocate IPC buffer [chars]	The RP failed to allocate a buffer for communication with a\n\ WAN module.	-	LOG_STD_ACTION
CWAN_RP3IFCPORTEFAIL	3-Error	Failed to open IPC port '[chars]' [chars] with error [chars]	The RP failed to open a port for communication with a WAN\n\ module.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CWAN_RP3-IPCFSENDFAIL	3-Error	Failed to send IPC message [chars]	The RP failed to send a message to a WAN module.	-	LOG_STD_ACTION
CWAN_RP3-KEEPFAIL	3-Error	The WAN module in slot [node][node]is not responding to keepalives	The WAN module was either reset or has crashed and will be reset.	-	LOG_SIDRECUR_ACTION
CWAN_RP3-ICCRASHINFO	3-Error	[chars] copied onto RP bootflash	The WAN module has crashed and the crashinfo file has been\n\n copied onto the RP bootflash. The crashinfo filename indicates the\n\n module's slot. The file can be viewed using the\n\n <Ctrl+me+Ctrl> command.	-	LOG_STD_ACTION
CWAN_RP3-ICCRASHINFOBLOCKED	3-Error	Duplicate crashinfo upload from slot [node][node]blocked	The WAN module has crashed and the crashinfo was not saved because\n\n the WAN module has already crashed recently.	-	LOG_STD_ACTION
CWAN_RP3-ICCRASHINFOCORRUPT	3-Error	Verification of crashinfo from slot [node][node]failed	The WAN module has crashed and verification of the crashinfo it\n\n sent failed. The crashinfo has not been saved to RP bootflash.	-	LOG_STD_ACTION
CWAN_RP3-ICCRASHINFOERR	3-Error	Unexpected error while receiving crashinfo from slot [node]%u	The WAN module has crashed and an unexpected error occured while\n\n the crashinfo was being copied onto RP bootflash.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CWAN_RP3CRASHNOISR	3-Error	Error [chars] [chars]: [chars] %u	The WAN module has crashed and an error occurred while trying to\n\n access the RP's bootflash to save the crashinfo.	-	LOG_STD_ACTION
CWAN_RP3CRASHNOISPACE	3-Error	Not enough space on RP bootflash for crashinfo from slot [node][node][node] bytes needed [node]available	The WAN module has crashed and there is not enough space on the RP\n\n bootflash to store the crashinfo.	-	"Free up space on the RP's bootflash by using the\n\n <del>Ctrl+D</del> and <del>Ctrl+Z</del> commands."
CWAN_RP3CLOGBASEV	3-Error	Invalid message severity from slot [node][node] %u	The WAN module passed down a logger message with an invalid\n\n severity level that the RP could not handle.	-	LOG_STD_ACTION
CWAN_RP3MODULETYPE	3-Error	cannot find FCI for module type [node] in slot %u	An internal software error occurred while the system was detecting the module type for the module in the specified slot. The operation of the module will be affected.	osm-basecard	LOG_STD_ACTION
CWAN_RP3OIRTWICE	3-Error	Slot [node]OIR insertion/removal not paired up: [chars]	An internal OIR-related error occurred for the specified WAN\n\n module.	cwtlc	LOG_STD_ACTION
CWAN_RP3POWERCYCLE	3-Error	Power cycling WAN module in slot [node][node] [chars]	The WAN module is being power cycled.	-	LOG_SID_NO_ACTION
CWAN_RP3POWERCYCLEMMN	3-Error	The WAN module in slot [node][node]will be power cycled in [dec] seconds.	The WAN module in the slot specified in the error message \n\n will be power cycled in the amount of time specified in the error \n\n message	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CWAN_RP3-PROCMSG	3-Error	Process msg send failed for process[dec]	Process message send failed.	cwan	LOG_STD_ACTION
CWAN_RP3-RESET_FAIL	3-Error	The WAN module in slot [node]failed even after several resets	The WAN module in the slot specified in the error \n\ message did not boot successfully even after multiple \n\ attempts.	-	LOG_SID_RECUR_ACTION
CWAN_RP3-SCPALOCFAIL	3-Error	Failed to allocate SCP packet [chars]	The RP failed to allocate a packet for communication with other\n\ slots in the chassis.	-	LOG_SID_RECUR_ACTION
CWAN_RP3-LOCCHESNAX	3-Error	Error [chars]!	The RP failed to parse the slot configuration string.	-	LOG_STD_ACTION
CWAN_RP3-URGRADE_ERRCR	3-Error	Slot [node] The ROMMON upgrade failed to complete.	An error occurred during the upgrade process.	vpn-sm	"If the module reloads successfully please check " "the file and try again otherwise please contact " "your Cisco technical support representative."
CWAN_RP3-VRMCFG_EXD	3-Error	The number of VPLSEoMPLSBridging QVCs exceeded the maximum%u	Review the configuration guidelines for the features that are being configured and reduce the number of VPLS EoMPLS Bridging to the number that is supported by the platform.	osm-bridge	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CWAN_RP4CNGM_MACH	4-Warning	\n\nIrreconcilable Configuration difference between Active & Standby Supervisors due to OIR/Config Event for [dec]/[dec] -> Reloading Standby Supervisor to synchronize the configuration.\n\n	Unexpected configuration difference between Supervisors.	c7600-ha	"None. This is expected behavior."
CWAN_RP4EMPTY_CWANBAS	4-Warning	FLEXWAN in slot [dec] is empty. Please remove the Flexwan or insert it with atleast one PA	The FLEXWAN in the specified slot does not contain any Port Adapters.	-	"The FLEXWAN should be removed as this is an unsupported configuration"
CWAN_RP4CFG_CMD_TMOUT	4-Warning	Interface configuration command 0x[hec] to slot [node][node]timed out	The RP sent an configuration command to the slot specified in the error message and received no confirmation for the command.	c7600-ha	LOG_STD_ACTION
CWAN_RP4RCR_CFG_SYNC_FAIL	4-Warning	7600 incremental running-config sync for [[dec]/[dec]] failed - [chars][dec]	The specified 7600 incremental running-config sync failed	c7600-ha	"Power cycle the redundant supervisor"
CWAN_RP4INVALID_UNIT	4-Warning	Invalid 7600 Unit: [[dec]/[dec]].	The specified 7600 slot/cpu beyonds the Chassis's limit.	c7600-ha	"Power cycle the redundant supervisor"
CWAN_RP4IPC_FAILED	4-Warning	IPC failed to send RPC message to WAN module	The RP failed to send an RPC message via IPC to a WAN module.	cwan	LOG_SID_NO_ACTION
CWAN_RP4LOG_TOO_LONG	4-Warning	Message too long from slot [node][node] [node]bytes	The WAN module passed down a logger message that is too long for\n\n the RP to handle.	-	LOG_STD_ACTION
CWAN_RP4ILL_UNKNOWN	4-Warning	Unknown linecard message: type [node][chars]	Mismatch version between RP and LC or internal message format mismatch	cwan	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CWAN_MODULE_CFG</del>	4-Warning	configuration not available/not matching in startup-config for slot %u	Some information regarding the configuration of the module in the specified slot is missing. Any configuration in the startup-config for the interfaces will not be applied. If the module in the specified slot is a FlexWAN the missing configuration information is details of the Port Adapters in the FlexWAN module. This information is missing from the <del>Global Configuration Database</del> ROMMON variable.	osm-basecard	-
CWAN_RP4SEMAHOG	4-Warning	Process [dec] [chars] hogging [chars]! calling proc [dec] [chars]	-	-	-
CWAN_RP6ADF_FILE	6-Information	Slot [node] Using VPN-SM Upgrade File: \[chars]\	Booting specified upgrade image for VPN Services Module.	-	LOG_SID_NO_ACTION
CWAN_RP6AUX_FILE	6-Information	Slot [node] Found VPN-SM Firmware in File: \[chars]\	The file specified in the message was found and will be loaded by the VPN Services Module instead of the bundled image.	-	LOG_SID_NO_ACTION
<del>CWAN_RP6ADRCONCLE</del>	6-Information	Module type changed on slot [node][node]from [node]to %u	The WAN module has booted and it has been detected that it is\n\ of a different type to the WAN module that was previously in\n\ this slot.	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CWAN_RP6CARDRELOAD	6-Information	Module reloaded on slot [node]%u	The WAN module has booted.	-	LOG_SID_NO_ACTION
CWAN_RP6COREDUMPENABLED	6-Information	No heartbeat or keepalive resets will occur for slot [node]since coredump has been enabled	The module in the slot has crashed and is configured to generate a coredump file. The module will not be reset due to heartbeat and keepalive failures to ensure the coredump file generation is not prematurely terminated.	c7600-env	LOG_SID_NO_ACTION
CWAN_RP6IMAGEUPGRADE	6-Information	Bootflash image upgrade [chars] for slot [node][node]chars]	The bootflash image on the WAN module has been or is being\n\ automatically upgraded.	-	LOG_SID_NO_ACTION
CWAN_RP6GLC_PRESENT	6-Information	[chars] in slot %u	A WAN module was detected by the hardware.	-	LOG_SID_NO_ACTION
CWAN_RP6GLC_RESET	6-Information	The RP is reloaded resetting slot [dec] is necessary. Please ignore errors if any till the linecard comes up.	If the system is running Catalyst operating system software on the supervisor engine and Cisco IOS software on the MSFC the WAN line cards that power up before the RP powers up will be reset automatically.	cwpa	LOG_SID_NO_ACTION
CWAN_RP6NOPWRISU	6-Information	Spa inserted in [chars] powered down because ISSU is in progress	The Spa insertion detected during ISSU upgrade process. It will be acted upon completion of the ISSU process.	-	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CWAN_RP6OUT_OF_RESOURCE	6-Information	[chars] configuration has exceeded available internal resources.	The resources required for configuration are no longer available. They may have been acquired by another application.	osm-mpb	"If the requested resources have not been allocated " "to another application call your technical support representative " "for further assistance."
CWAN_RP6OVERRIDE	6-Information	Slot [node] ...Overriding Intrinsic VPN-SM Firmware.	Specified image will be used instead of bundled image.	-	LOG_SID_NO_ACTION
CWAN_RP6AVL_DELETE_FAILED	6-Information	Platform AVL delete failed for PPPoE session due to wrong slot id [dec]	Deletion of session related information from the AVL tree failed because the slot number used to index it is wrong	c7600-bb	LOG_SID_NO_ACTION
CWAN_RP6QUIESCE_FAIL	6-Information	Quiesce failed for slot [node]%u	The RP failed to contact the WAN module during failover.\n\ The WAN module will be reset.	-	LOG_SID_NO_ACTION
CWAN_RP6EXCEEDED_MAX_SESSIONS_SUPPORTED	6-Information	Exceeded max number of sessions supported. \nSupported limit 32000/chassis	Total number of subscriber sessions on this chassis exceeded the allowed limits. The supported limit is 32000 sessions per chassis	c7600-bb	"Avoid bringing up more number of sessions " "than the supported limit"
CWAN_RP6EXCEEDED_MAX_SESSIONS_SUPPORTED_ON_ES_PLUS	6-Information	Exceeded max number of sessions supported on ES+ LC in slot [dec]. \nSupported limit 16000/ES+	Total number of subscriber sessions on ES+ line card exceeded the allowed limits. The supported limit is 16000 sessions per ES+	c7600-bb	"Avoid bringing up more number of sessions " "than the supported limit"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CWAN_R6ESLMSIPRCOP	6-Information	Exceeded max number of sessions supported on port-group Gig[dec]/[dec] to Gig[dec]/[dec].\nSupported limit 4000/port-group on ES+ LC	Total number of subscriber sessions on a single port-group in ES+ exceeded the allowed limits. The supported limit is 4000 sessions per port-group	c7600-bb	"Rearrange the subscribers on ES+ in such a way " "maximum number of sessions supported in a port-group is 4000."
CWAN_R6ESLMSIP40	6-Information	Exceeded max number of sessions supported on SIP400 LC in slot [dec].\nSupported limit 8000/SIP400	Total number of subscriber sessions on SIP400 line card exceeded the allowed limits. The supported limits is 8000 sessions per SIP400	c7600-bb	"Avoid bringing up more number of sessions " "than the supported limit"
CWAN_R6ESLMSIENGCR	6-Information	Exceeded max number of sessions supported on port Te[dec]/[dec].\nSupported limit 8000/port on a Ten Gig port on ES+ LC.	Total number of subscriber sessions on a single Ten Gig port in ES+ exceeded the allowed limits. The supported limit is 8000 sessions per Ten Gig port.	c7600-bb	"Rearrange the subscribers on ES+ in such a way that " "maximum number of sessions per Ten Gig port is 8000"
CWAN_R6UNQESCEPAL	6-Information	Unquiesce failed for slot [node][node] Error = [dec]	The RP failed to unquiesce the WAN module. \n\ The WAN module will be reset.	-	show diagbus and show ipc status
CWAN_R6URADCOMHEE	6-Information	Slot [node] ROMMON upgrade complete. Reset the card for the changes to take effect.	The ROMMON upgrade has completed successfully. The card must be reloaded for the changes to take effect	-	LOG_SID_NO_ACTION
CWAN_R6OCACHEADNE	7-Debug	parsed slot [dec] fci_type [dec]	Information parsed from the slot configuration string by the RP.	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CWAN_RP3LOCACHE_PAME	7-Debug	Bay [chars] has type [dec] ports[hec]	Information parsed from the slot configuration string by the RP.	-	LOG_SID_NO_ACTION
CWAN_SPA3CREATION_FAILURE	3-Error	slot=[dec] subslot=[dec] spa_type=0x[hec] lc_type=0x[hec].	Failed to create a SPA object.	FIX-ME	LOG_SID_SH_TECH_ACTION
CWAN_SPA3DIAG_CONFIG	3-Error	[chars] did not complete [dec]/[dec]	An error has occurred during diagnostic test.	c7600-field-diag	LOG_SID_SH_TECH_ACTION
CWAN_SPA-3-FAILURE	3-Error	[chars]: SPA failure - cause: [chars] [hex] recovery action: [chars] [dec]	The SPA failed for the specified reason	FIX-ME	LOG_SID_SH_TECH_ACTION
CWAN_SPA3NIR_THROTTLE	3-Error	Interface [chars] MAC interrupt was throttled.\n\n Reenabling MAC interrupts via one sec spa process	MAC interrupt burst has occurred on one of the interfaces on the link daughtercard. The error message indicates that a throttling mechanism has been applied to this port to avoid any operational damage that could be provoked by this event. The cause for this problem could be bad transceiver highly frequent flapping optical signals or mismatched path signals e.g. receiving 10GBASE-W signal on 10GE LAN interface etc.	c7600-esm-20	"Check the interface configuration and received signal characteristics. " "Also verify the XFP transceiver and receive signal path to determine the " "If this message recurs " LOG_STD_ACTION
CWAN_SPA3ADD_VLAN_FAILURE	3-Error	interface type [chars] slot [dec] port [dec] vc [dec] : [chars]	Data required to support the interface is not available.	FIX-ME	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CWAN_SPA3NULLINDEX	3-Error	index= [dec] cardType=0x[hec] spaType=0x[hec] slot [dec] subSlot [dec] slotunit [dec] vc [dec]	Index for the interface is not valid.	FIX-ME	LOG_SIDSH_TECH_ACTION
CWAN_SPA3NULLINDEX	3-Error	index1= [dec] index2= [dec] maxIndex= [dec]	Invalid index range.	FIX-ME	LOG_SIDSH_TECH_ACTION
CWAN_SPA3MEM_ALLOC_ERR	3-Error	[chars]	Memory allocation error.	FIX-ME	LOG_SIDSH_TECH_ACTION
CWAN_SPA3NULL_ATMDB	3-Error	Unable to create ATM DB for [chars]	Data required to support the interface is not available.	FIX-ME	LOG_SIDSH_TECH_ACTION
CWAN_SPA3NULL_SPA_PIR	3-Error	-	Pointer to a SPA object is NULL.	FIX-ME	LOG_SIDSH_TECH_ACTION
CWAN_SPA3NULL_VFT	3-Error	[chars] virtual function table is not initialized. spaType=0x[hec]	A required function table is not initialized	FIX-ME	LOG_SIDSH_TECH_ACTION
CWAN_SPA3NULL_VFUNC	3-Error	[chars] vector is not initialized. spaType=0x[hec]	A required function vector is not initialized	FIX-ME	LOG_SIDSH_TECH_ACTION
CWAN_SPA3POWER_CYCLE	3-Error	[chars] occurred on Shared Port Adapter [node]%u	An error has occurred which will cause the \n\n Shared Port Adapter to be power cycled	m3c-200-ha	LOG_SIDSH_TECH_ACTION
CWAN_SPA3CREATE_FAILURE	3-Error	slot=[dec] subslot=[dec] PID=[chars] lc_type=0x[hec].	Failed to create a SPA object.	FIX-ME	LOG_SIDSH_TECH_ACTION
CWAN_T33CONFIG_ERR	3-Error	Interface config error on T3 port [dec]/[dec] cmd [dec] retval [dec]	A configuration command sent from the system to a linecard failed	osm-t3e3	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CVANLCAIMBCMDERR	3-Error	[chars]: [chars] IPC command fails cause: 0x[node]x	The ATM RP driver experienced IPC command error.	cwtle	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
CVANLCAIMBFCRROR	3-Error	[chars]: IPC command \[chars]\ failure due to \[chars]\	The SPA ATM RP driver experienced IPC command error.	spa-atm-all	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
CVANLCAIMBNOMSPACE	3-Error	[chars]: out of VP space for VPI [dec]	Out of VPs on the SAR.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
CVANLCAIMBVCLOSFAIL	3-Error	[chars]: Failed to remove VC [dec]/[dec] cause %u	Attempt to remove VC on the linecard failed.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
CVANLCAIMBVPLOSFAIL	3-Error	[chars]: Failed to remove VP [dec] cause %u	Attempt to remove VP on the linecard failed.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
CVANLCAIMBCLOSHPND	4-Warning	[chars]: The TX SAR is currently freeing internal buffers previously allocated for the identical channel id. The execution of the current command is delayed.	The TX SAR has taken longer than expected to free its internal buffers.	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CWANLC-4-MATCHERRP</del>	4-Warning	[chars]: Cannot mix VC encapsulation types in multipoint interfaces	This ATM card only allows VC encapsulations of the same type on the main interface or multipoint subinterfaces	-	"Reconfigure the ATM interface with matching VC encapsulations"
CWANLC-4-SEMHDG	4-Warning	[chars]: Process [dec] [chars] hogging semaphore -- called by process [dec] [chars]	The named process has held the resource semaphore longer than\n\n expected.	-	LOG_SID_NO_ACTION
CWANLC-4-UNSUP	4-Warning	[chars]: unsupported feature: [chars]	This feature is not supported by Draco ATM RP.	cwtlc	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
CWANLC-2-PCIERROR	2-Critical	Fatal PCI Error [chars] seen on PCI Bus [dec]	A Fatal PCI Error was detected on the PCI bus. Most likely it is a hardware problem.	-	"Call your technical support representative for "assistance if this message persists."
<del>CWANLC-3-ERRMISC</del>	3-Error	CWAN receives mismatch Earl version notification. New Earl[node]vs Earl%u	The RP has determined via an SCP find operation that the version of the EARL switching engine on the line card has changed. This message occurs during switchover operation. The version of the EARL switching engine is specified in the message text.	-	LOG_STD_ACTION
CWANLC-3-FATAL	3-Error	[chars]	The Optical Services Module line card has encountered a fatal error.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CWANLC3-FPDNCOMPABLE	3-Error	FPD ID=[node]image in this FPD package is for revision [node]x boards. It is incompatible with current board revision of [node]%u	This FPD package does not contain images that are compatible with the current board revision.	c7600-sip-common	"Perform the FPD upgrade operation with a newer version of FPD " "image package that is compatible with the running Cisco IOS " "software. Consult with the FPD image package section of the " "Cisco IOS software release note to confirm if your board " "revision is supported for a particular release."
CWANLC3-HWREDFAIL	3-Error	Failed to retrieve h/w version from EEPROM	The Linecard failed to read the hardware version from the CPU eeprom.	-	LOG_STD_ACTION
CWANLC3-IPCALLOCFAIL	3-Error	Failed to allocate IPC buffer [chars]	The Linecard failed to allocate a buffer for communication with the Route Processor Draco.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
CWANLC3-IPCPORT	3-Error	Failed to [chars] IPC port '[chars]' error [chars]	The Linecard failed to create a port for communication with the Route Processor Draco.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
CWANLC3-IPCORIFAIL	3-Error	Failed to open IPC port '[chars]' [chars]	The Linecard failed to open a port for communication with the Route Processor Draco.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
CWANLC3-IPCSEDFAIL	3-Error	Failed to send IPC message [chars]	The Linecard failed to send a message to the Route Processor Draco.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CWANLC3-NOHCRMAP	3-Error	Failed to retrieve default port mapping for packet processor %u	The linecard software initialization was not completed correctly	-	LOG_STD_ACTION
CWANLC3-VPN_NOEMEM	3-Error	Failed to start vpn not enough memory	The OSM card could not start VPN due to a memory exhaustion	-	"Reduce other system activity to ease memory demands. " "If conditions warrant upgrade to a larger memory " "configuration. If this message recurs "LOG_STD_ACTION
CWANLC4-LOGMSGTOOEG	4-Warning	Logger message length exceeds max [node]bytes	The Linecard attempted to send a large message to the Route Processor Draco.	-	LOG_STD_ACTION
CWANLC5-IPC_PENDING	5-Notice	Too many messages [dec] in IPC pending queue	The IPC pending queue is growing. Will soon deplete the IPC header cache and the IO buffers	-	LOG_STD_ACTION
CWANLC5-NOSCIPPING	5-Notice	Linecard has not sent SCP PING responses for too long	SCP ping mechanism is used by RP/SP processors to monitor if the linecard executing IOS is in a healthy state. This SCP ping response has not been sent by the line card for long time now - the line card has exported its context information to the RP and may be powercycled. The exported context is available in the output of 'show diag'	cwpa	"Save the 'show diag' output generated and contact your " "technical support representative if the line card is reset"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CWANLC6BUSSTALL	6-Information	Constellation BUS Stall detected	This message indicates that a stall was detected on the Constellation Bus probably due to some OIR activity on the Bus.	-	"No action needed Informational."
CWANLC6BUSSTALLCLEAR	6-Information	Constellation BUS Stall cleared	This message indicates that a stall was cleared on the Constellation Bus.	-	"No action needed Informational."
CWANLC6LONGSTALL	6-Information	Long bus stall [node]ms check for improperly seated cards	This message indicates that a stall was detected but the backplane stall was longer than expected.	-	"Make sure all cards are firmly seated. If the "problem reoccurs it may indicate a hardware failure."
CWMPDOWNLOADCONFIGFILE	5-Notice	CWMP download: config apply operation failed [chars]	The configuration apply operation with CWMP DOWNLOAD RPC\n\method is failed.	-	"No action required."
CWMPDOWNLOADCONFIGFILESUCCESS	5-Notice	CWMP download: config file successfully downloaded and applied [chars]	The configuration apply operation with CWMP DOWNLOAD RPC\n\method is success.	-	"No action required."
CWPA2BAD_HWVERS	2-Critical	Unable to determine board hardware version	The line card software cannot read the line card hardware version. This condition indicates a hardware error.	cwpa	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CWPA-2-PA_VOLFAIL	2-Critical	Port adapter [dec]V failed Reloading flexwan	The line card has encountered an error involving power delivery to the line card. Likely causes for this error are an environmental condition an overtemperature condition or inconsistent voltage to the line card.	cwpa	"Check the input voltage and temperature of the line card. " LOG_SID_RECUR_ACTION
CWPA-2-PAOIR	2-Critical	Port adapter OIR not supported reloading	An OIR operation occurred on the port adapters of the specified line card. OIR operations are not supported on the port adapter. This error has caused the line card to crash and reload.	cwpa	"Do not attempt an OIR operation on the port adapters of the specified " "line card."
CWPA-2-WHICH_INT	2-Critical	Unexpected [chars] interrupt INT status = 0x[hec]	The line card specified in the error message has encountered an unexpected interrupt.	cwpa	LOG_STD_ACTION
CWPA-3-BAD_IFCOMTYPE	3-Error	Bad ifcom message type=%u	-	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
CWPA-3-BADMALUCMD	3-Error	Unsupported MALU command [dec] arg=[hex] pascb=[hex]	-	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
CWPA-3-CMDNOPASCB	3-Error	PASCB Null for command [dec] arg=[hex]	-	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
CWPA-3-DIAGFAIL	3-Error	Failed to handle diag [chars] [dec]	The FlexWAN line card failed to execute diag command. Further details are specified in the text that is displayed on the console or in the system log.	cwpa	"Copy the error message exactly as it appears and report it to your " "technical support representative."
CWPA-3-IPCALLOCFAIL	3-Error	Failed to allocate IPC buffer [chars]	The FlexWAN line card failed to allocate a buffer for communication with the Route Processor Draco.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
CWPA-3-IPCSENDFAIL	3-Error	Failed to send IPC message [chars]	The FlexWAN line card failed to send a message to the\n\n Route Processor Draco.	-	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
CWPA-3-LVLTRIOOBIG	3-Error	Loveletter length exceeds max [node]bytes	The FlexWAN line card attempted to send a large message to the\n\n Route Processor Draco.	-	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
CWPA-3-NODISPATCH	3-Error	Dispatch vector Null cmd=[dec] dintf=[dec]	No command dispatch vector was found for the specified interface.	-	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CWPA3PROCCREATEFAIL	3-Error	Failed to create [chars] process	The Linecard failed to create a process which\n\n which is necessary for proper functioning of the\n\n linecard.	cwpa	"Copy the error message as it appears and\n\n report it to your technical support \n\n representative. If it is the 'stats export\n\n process' then you might not see input/output\n\n rate and bytes getting incremented in 'show\n\n interface' output for flexwan/flexwan2 non-\n\n channelised interfaces. However you can get\n\n the stats from 'show interface acc' or 'show\n\n interface stats'."
CWPA4HEADER_TOO_BIG	4-Warning	Needs [dec] bytes with only [dec] bytes available. Packet size [node] received from [chars] buffer [hex] packet start [hex]:\n\n [node]8x:[node]x [node]x [node]x [node]x [node]x [node]x\n\n [node]8x:[node]x [node]x [node]x [node]x [node]x\n\n	A packet was sent from the PA to either the route processor or the line card. That packet did not have enough available space to append the header. A new particle has been linked to the packet to store the header.	-	LOG_SID_NO_ACTION
CWPAATOM3BADLIL	3-Error	Bad LTL index 0x[hec] for vlan [node]local_vc_label %u	Local Target Logic index value is invalid	7600-mpls	"If your EoMPLS traffic is fine then ignore this \n\n If not then contact your Cisco technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CWRSPA3-HWDB_FAILURE	3-Error	Creation: slot [dec] subSlot [dec] port [dec] vc [dec]	Failed to create an interface hwidb.	cwan	LOG_SID_SH_TECH_ACTION
CWRSPANVALD_CRIT_NUM	3-Error	slot=[dec] port=[dec] hwidbType=0x[hec] max_port_num=[dec] LCtype=0x[hec]	The port number is out of range.	cwan	LOG_SID_SH_TECH_ACTION
CWRPSPA-3-MAX_SPA	3-Error	Power to IPSEC-SPA-2G in [chars] is denied because it has exceeded the number allowed[dec]	The number of IPSEC-SPA-2G in a chassis is limited. This message is displayed when the number of IPSEC-SPA-2G in the chassis has exceeded this limit.	cwan	"Use only the number of supported IPSEC-SPA-2G"
CWRPSPA-NO_HOST_NO	3-Error	slot [dec] subSlot [dec] spaType 0x[hec]	Failed to get information about the host linecard.	cwan	LOG_SID_SH_TECH_ACTION
CWRPSPA-NO_HOST_NO	3-Error	slot [dec] subSlot [dec] PID [chars]	Failed to get information about the host linecard.	cwan	LOG_SID_SH_TECH_ACTION
CWRPSPA-CMD_NO_RSP	4-Warning	[chars]: No response for interface configuration command \[chars]\	A timeout occurred while RP was waiting for a response from line card. This may happen due to line card CPU being too busy to respond to the command.	cwan	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CWS4SPARS_CMD_MACH	4-Warning	[chars]: Expecting response to interface configuration command \[chars]\ but received response to command \[chars]\.	An internal synchronization error occurred while configuring the interface. The configuration may not have succeeded.	cwan	"Check that the running configuration for the " "interface is correct. If this message occurred on the standby try " "reloading the standby to ensure that its configuration is in sync. " "If this message is repeatable please " LOG_SID_SH_TECH_ACTION
CWS5SPACUT_RESOURCES	5-Notice	[chars]: Unable to create [chars] due to SPA resource limitations.	The SPA was unable to create the requested resource due to limited hardware or software resources	-	LOG_SID_NO_ACTION
CWS6SPACARDRELOAD	6-Information	Module [node]reload due to SPA insert in [node][node]	When inserting a SPA on this carrier card the card is reset.	-	LOG_SID_NO_ACTION
CWS2IPC_INIT_FAILED	2-Critical	CWS-IPC message handler registration failure rc %u	Registering an IPC message handler for the CWS feature failed. This will cause the feature to not function.	cws-xe	LOG_STD_ACTION
CWS3IPC_INVALID_MSG	3-Error	CWS-Invalid request %u	Received Invalid message from CWS client proxy	cws-xe	LOG_SID_RECUR_ACTION
CWS-3-IPC_NORES	3-Error	CWS-No space for the IPC reply size [node]request [chars]	For a request from CWS client proxy it was not possible to allocate space for a reply for the specified size.	cws-xe	LOG_SID_RECUR_ACTION
CWS3IPC_OPEN_REPLY	3-Error	CWS-IPC Open Reply failed request [chars]	For a request from CWS client proxy opening the reply buffer failed	cws-xe	"This is normally a software issue. " LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CWS3IPC_SEND_FAILED	3-Error	CWS-IPC [chars] [chars] send failed %u	IPC message send failure	cws-xe	LOG_STD_ACTION
<del>CWS3CWSNVALDREFCNT</del>	5-Notice	Invalid ref count [dec] in chunk [hex]	CTR has seen an invalid ref count in the NSH pool\n	cpp-ucode	LOG_SID_NO_ACTION
CWS3CWSNPAHDEBUG	5-Notice	NSH D-bit set for SIP: [char]A DIP: [char]A Src_node: [dec] Src>If_Id: [dec] Tenant_Id: [dec]	CTR has seen an NSH header with D-bit set\n	-	LOG_SID_NO_ACTION
CXSC2-IPC_FAILURE	2-Critical	CXSC-IPC message [chars] handler failed rc %u	An IPC message handler for the CXSC feature failed. This will cause the feature to not function.	qfp-cxsc	LOG_STD_ACTION
CXSC2-IPC_INIT_FAILED	2-Critical	CXSC-IPC message handler registration failure rc %u	Registering an IPC message handler for the CXSC feature failed. This will cause the feature to not function.	qfp-cxsc	LOG_STD_ACTION
<del>CXSC3CONDDBG_FAIL</del>	3-Error	[chars]	Failure occurred when attempting to Register/Initialize conditional debugging.	qfp-ucode	LOG_STD_ACTION
CXSC3FEATCTX_DOWN	3-Error	CXSC-Invalid request [chars] [node]while context is down	While the feature context was not active an invalid request was received from another layer of the CXSC software stack.	qfp-cxsc	LOG_SID_RECUR_ACTION
CXSC3-3FEAT_DOWN	3-Error	CXSC-Invalid request [chars] [node]while feature is down	While the feature was not active an invalid request was received from another layer of the CXSC software stack.	qfp-cxsc	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CXSC3IPC_INVALID_MSG	3-Error	CXSC-Invalid request %u	We received an invalid message from another layer of the CXSC software stack.	qfp-cxsc	LOG_SID_RECUR_ACTION
CXSC3IPC_INVALID_IPC_LEN	3-Error	CXSC-Invalid IPC length [dec]:[dec] len [dec] flags 0x[hec] source [dec]	Invalid IPC message length	qfp-cxsc	LOG_STD_ACTION
CXSC3IPC_NORES	3-Error	CXSC-No space for the IPC reply size [node]request %u	For a request from upper CXSC software stack layers it was not possible to allocate space for a reply for the specified size.	qfp-cxsc	LOG_SID_RECUR_ACTION
CXSC3IPC_OPEN_REPLY	3-Error	CXSC-IPC Open Reply failed request %u	For a request from upper CXSC software stack layers it was not possible to open the reply buffer.	qfp-cxsc	"This is normally a software issue. " LOG_SID_RECUR_ACTION
CXSC3IPC_SEND_FAILED	3-Error	CXSC-IPC [chars] [node]send failed %u	IPC message send failure	qfp-cxsc	LOG_STD_ACTION
DAPR3FLOWM_EXCEED	4-Warning	curr [dec] max [dec]	DAPR Flows exceeded	dapr	LOG_SID_NO_ACTION
DAPR3RIBM_EXCEED	4-Warning	curr [dec] max [dec]	DAPR RIB prefixes exceeded	dapr	LOG_SID_NO_ACTION
DAPR3RMAPM_EXCEED	4-Warning	curr [dec] max [dec]	DAPR route-map entries exceeded max allowed	dapr	LOG_SID_NO_ACTION
DAPR3EGRESSM_NOTVABLE	5-Notice	[chars] curr-bwkbps [node] min-bwkbps [node]	DAPR egress interface not viable	dapr	LOG_SID_NO_ACTION
DAPR3EGRESSM_UTIL_EXCEED	5-Notice	[chars] curr-util [node]u[node]max-util [node]%%	DAPR egress interface utilization threshold exceeded	dapr	LOG_SID_NO_ACTION
DAPR3EGRESSM_STATUS_DOWN	5-Notice	[chars] [chars]	DAPR egress interface status	dapr	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DAPR#CHS#NF#DOWN	5-Notice	[chars] [chars]	DAPR ingress interface status	dapr	LOG_SID_NO_ACTION
DAPR#NR#R#U#EN#A#D	5-Notice	Neighbor-BR %i	Invalid route to neighbor Border-Router	dapr	LOG_SID_NO_ACTION
DAPR#BR#UN#L#DOWN	5-Notice	Neighbor-BR [node]tunnel [chars]	Status of tunnel to neighbor Border-Router	dapr	LOG_STD_ACTION
DAPR_BR-5-RESET	5-Notice	reason: [chars]	Border-Router reset due to mentioned reason	dapr	LOG_SID_NO_ACTION
DAPR#RM#R#U#EN#A#D	5-Notice	No route or route is via egress	Invalid route from Border-Router to Route-Manager	dapr	LOG_STD_ACTION
DAPR_BR-5-STATUS	5-Notice	[chars]	Border-Router status	dapr	LOG_SID_NO_ACTION
DAPR#APR#C#M#U#F#A#D	3-Error	[chars]	App route compute failed for flow-group	dapr	LOG_SID_NO_ACTION
DAPR#R#M#B#R#R#E#G#E#F#A#D	3-Error	BR [chars] reason: [chars]	BR Registration failed	dapr	LOG_STD_ACTION
DAPR_RM3BR_RESET	3-Error	BR [chars] reason: [chars]	RM reset the BR due to mentioned reason	dapr	LOG_STD_ACTION
DAPR#R#M#O#W#E#X#P#K#T#S#M#I#S#S#D	3-Error	BR [chars] missed-pkts [dec]	Flow export packets missed	dapr	LOG_STD_ACTION
DAPR#R#M#O#W#N#A#D#I#C#H#S#S	3-Error	flow-group [chars]/[chars]/[dec] state [chars] uptime [dec]s last-transition [dec]s ingress-BR [chars] expected-egress [chars]/[dec] reported-egress [chars]/[dec]	Flow discovered from unexpected egress	dapr	LOG_STD_ACTION
DAPR#R#M#A#P#R#O#U#E#F#A#D	4-Warning	[chars]	App route re-compute failed for flow-group	dapr	LOG_SID_NO_ACTION
DAPR#R#M#O#W#N#A#D#I#C#H#S#S#D	4-Warning	BR [chars] reason: [chars]	Flow data records ignored	dapr	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DAPR4FLOWEXPINADICQ	4-Warning	BR [chars] last-seq [dec] curr-seq [dec]	Unexpected seq num in flow export pkt	dapr	LOG_STD_ACTION
DAPR4FLOWNADICRS	4-Warning	flow-group [chars]/[chars]/[dec] state [chars] uptime [dec]s last-transition [dec]s ingress-BR [chars] egress-BR/intf [chars]/[dec] ingress-intf [chars]	Flow discovered from unexpected ingress	dapr	LOG_STD_ACTION
DAPR4FLOWMULTICRS	4-Warning	flow-group [chars]/[chars]/[dec] state [chars] uptime [dec]s num-egress [dec] prev-egress [chars]/[dec] curr-egress [chars]/[dec]	New flow discovered from multiple egresses	dapr	LOG_STD_ACTION
DAPR4NOVABLEPATH	4-Warning	[chars]	No viable path found for flow-group	dapr	LOG_SID_NO_ACTION
DAPR4RIB_MISMATCH	4-Warning	route-count: old [dec] new [dec]	Mismatch of RIB database between BRs and RM	dapr	LOG_STD_ACTION
DAPR5BR_STATUS	5-Notice	BR [chars] [chars]	Border-Router status on RM	dapr	LOG_SID_NO_ACTION
DAPR5RM_STATUS	5-Notice	[chars]	Route-Manager status	dapr	LOG_SID_NO_ACTION
DAPR6APP_RT_DEL	6-Information	[chars] BW:[dec]	App route deleted for flow-group	dapr	LOG_SID_NO_ACTION
DAPR6APP_RT_INSTAL	6-Information	[chars] BW:[dec] [chars]	App route installed for flow-group	dapr	LOG_SID_NO_ACTION
DAPR6BR_EVENT	6-Information	BR [chars] event: [chars]	RM received event from BR	dapr	LOG_STD_ACTION
DAPR6RM_RESET	6-Information	reason: [chars]	RM reset due to the mentioned reason	dapr	LOG_STD_ACTION
DAPR4INTERNAL_ERROR	4-Warning	[chars]	Internal error	dapr	LOG_STD_ACTION
DAPR3LOOKUP_FAILURE	3-Error	Lookup Failure: [node][node]x [node][node]%u	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DADESCRPTRDCODE	3-Error	Lookup Failure: [node][node]%	-	-	-
DADESCRPTRFAILURE	3-Error	Defer failure on [chars] for descriptor [node][node]%	Data descriptors are used to encode an interface index in a compact fashion for transfer between redundant route processor units. An error occurred during the processing of a data descriptor. The failure most likely occurred because of a software error. The numeric error code in the message output identifies the failing data descriptor index. The system state between the Active and Standby units might not be properly synchronized.	ha-idb-sync	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DATA_DESCRIPTOR_FAILURE	3-Error	Defer failure on [chars] for descriptor [node][node][node][node]%/a	Data descriptors are used to encode an interface index in a compact fashion for transfer between redundant route processor units. An error occurred during the processing of a data descriptor. The failure most likely occurred because of a software error. The numeric error code in the message output identifies the failing data descriptor index. The system state between the Active and Standby units might not be properly synchronized.	ha-idb-sync	LOG_STD_ACTION
DATA_DESCRIPTOR_EXPIRED	3-Error	Found expired message entry for descriptor [node][node][node][node]%/a	Data descriptors are used to encode an interface index in a compact fashion for transfer between redundant route processor units. An error occurred during the processing of a data descriptor. The failure most likely occurred because of a software error. The numeric error code in the message output identifies the failing data descriptor index. The system state between the Active and Standby units might not be properly synchronized.	ha-idb-sync	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DATA_DESCRIPTOR_EXPIRED	3-Error	Found expired message entry for descriptor [node][node][node][node]%/u	Data descriptors are used to encode an interface index in a compact fashion for transfer between redundant route processor units. An error occurred during the processing of a data descriptor. The failure most likely occurred because of a software error. The numeric error code in the message output identifies the failing data descriptor index. The system state between the Active and Standby units might not be properly synchronized.	ha-idb-sync	LOG_STD_ACTION
DATA_DESCRIPTOR_CODE	3-Error	Lookup Failure: [node][node][node][node]%/u	-	-	-
DATA_DESCRIPTOR_CODE	3-Error	Lookup Failure: [node][node][node][node]%/u	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>DAIDSRCHNCNDE</del>	3-Error	Encode failure: [chars] descriptor type=[dec]	An internal data descriptor could not be encoded for synchronization for the interface or controller in the run-time module specified in the message output. The failure most likely occurred because of a software error. The descriptor type specified in the message output identifies the type of failure. The system state between the active and standby units might not be properly synchronized.	ha-idb-sync	LOG_STD_ACTION
<del>DAIDSRCHNCNDE</del>	3-Error	Encode failure: [chars] descriptor type=[dec]	An internal data descriptor could not be encoded for synchronization for the interface or controller in the run-time module specified in the message output. The failure most likely occurred because of a software error. The descriptor type specified in the message output identifies the type of failure. The system state between the active and standby units might not be properly synchronized.	ha-idb-sync	LOG_STD_ACTION
<del>DAIDSRCHNCNDE</del>	3-Error	Lookup Failure: <del>[idb][idb][idb][idb]</del> [node][node][node]%u	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DW_KRNCRUAIKOE	3-Error	Lookup Failure: [sub][sub][sub][sub][sub] [node][node][node]%u	-	-	-
DW_ADRHMBDKOE	3-Error	Lookup Failure: [sub][sub][sub][sub][sub] [node][node][node][node]%u	-	-	-
DW_ADRHMBDKOE	3-Error	Lookup Failure: [sub][sub][sub][sub][sub] [node][node][node][node]%u	-	-	-
DW_KRNCRUAIKOE	3-Error	Internal error on data descriptor queue: [chars]	Data descriptors are used to encode an interface index in a compact fashion for transfer between redundant route processor units. An error occurred during the processing of a data descriptor. The failure most likely occurred because of a software error. The numeric error code in the message output identifies the failing data descriptor index. The system state between the Active and Standby units might not be properly synchronized.	ha-idb-sync	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DBLOCK_MGR3CHRFAL	3-Error	Database Lock Manager Operational failure [chars].	An unexpected condition has occurred which resulted in the Database lock manager detecting an operational failure. This means Database lock manager has detected and corrected an unexpected failure condition.	crimson	LOG_STD_ACTION
DB_NIFY_MGR3NIFAL	3-Error	Initialization of the Database Notification Manager facility failed [chars].	An unexpected condition has occurred which resulted in the Database notification manager facility failing to start. This is a serious problem and means that the Database notification manager facility will not be functional.	crimson	LOG_STD_ACTION
DBNIFY_MGR3RQRFAL	3-Error	Database Notification Manager Request Processing facility failed [chars].	An unexpected condition has occurred which resulted in the Database notification manager facility failing to process a request. This means that some part of Database notification manager facility will not be functional.	crimson	LOG_STD_ACTION
DBCHLOADWR3NIFAL	3-Error	Initialization of the Database offload write facility failed [chars].	-	-	-
DBCHLOADWR3CHRFAL	3-Error	Database offload write operational failure [chars].	-	-	-



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DBAL3OFFLOAD_WRITEERR	4-Warning	Database offload write operational error [chars].	-	-	-
DBAL3BIPMSGALOCIAL	3-Error	polaris-infra	"BIPC msg size too big to allocate"	"BIPC msg size beyond limit."	"Report this occurrence to Cisco TAC"
DBAL3MQIPC_ADVANCEERR	3-Error	polaris-infra	"MQIPC advance error [%s] reader [%s]"	"MQIPC fails to advance to the next msg in DBAL"	"Report this occurrence to Cisco TAC"
DBAL3MQIPC_EVENTLOSS	3-Error	polaris-infra	"MQIPC event lost reader [%s]"	"MQIPC event notifying of non-empty queue not delivered to DBAL"	"Report this occurrence to Cisco TAC"
DBAL3MQIPC_PEEKERR	3-Error	polaris-infra	"MQIPC peek error [%s] reader [%s] err_msg [%s]"	"MQIPC fails to peek and fetch a msg in DBAL"	"Report this occurrence to Cisco TAC"
DBAL3MQIPC_READBYMR	3-Error	polaris-infra	"MQIPC reader[chars] initialized by timer not chasfs watcher."	"MQIPC reader initialized by timer not chasfs watcher."	"Report this occurrence to Cisco TAC"
DBAL4LONGEXEC_BATCH	4-Warning	polaris-infra	"Long exec [%u:%u] create:exec:now [%llu:%llu:%llu] e:p [%llu:%u] resumes [%u] peer [%s]"	"DBAL batch execution took an extended period of time. This may or may not be a problem depending on the circumstances"	"Collect log archive and show tech-support and report this occurrence to Cisco TAC"
DBAL6DELAYED_BATCH	6-Information	polaris-infra	"Delayed batch [%u:%u] create:exec:notif:now [%llu:%llu:%llu:%llu] eproc [%u] e:p [%llu:%u] peer [%s]"	"DBAL batch with an extended lifetime. This can occur when large amounts of data and/or operations are being performed."	"If this is causing impact to any service"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DBCONN3-BADLICENSEKEY	3-Error	Bad license key configured for Database Connection.	The license key configured with the dbconn license configuration\n\n command is not valid.	dbconn	"Check that the license key was entered correctly in the dbconn\n\n license configuration command. Refer to the dbconn feature documentation\n\n for information on how to obtain a valid license key."
DBCONN3-BADMODE	3-Error	Unknown mode '[chars]' configured for server [chars]	The mode configured for the dbconn server was rejected by the\n\n remote database server.	dbconn	"Contact your SNA network administrator to determine the correct\n\n name of the mode to use to connect to DB2 on the remote database\n\n server."
DBCONN3-BADRLU	3-Error	Bad remote LU '[chars]' configured for server [chars]	The remote LU configured for the dbconn server is incorrect.	dbconn	"Contact your SNA network administrator to determine the correct\n\n name of the remote LU for DB2 on the remote database server. Be sure to\n\n check that the SNA network name is correct as well as the LU name."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DBCONN3BADTPNAME	3-Error	Bad TP name configured for server [chars]	The tpname configured for the dbconn server is not recognized by the remote database server.	dbconn	"Configure a TP name that is available on the remote database server. Most DB2 systems will accept the DRDA default TP name of \x076DB except for SQL/DS. Contact your SNA network administrator and/or your DB2 administrator to determine the TP name used by your DB2. To use the DRDA default do not explicitly configure a TP name for your dbconn server."
DBCONN3DRDASYNIA	3-Error	DRDA protocol error from server [chars] SYNERRCD x'[node]X'	An unexpected DRDA protocol error occurred between dbconn and the remote database server.	dbconn	LOG_STD_ACTION " If possible also provide the output of the debug dbconn drda command and an SNA line trace between the router and the remote database server for the period during which this message appeared."
DBCONN3LICENSEXERR	3-Error	License is expired for Database and Transaction Connection.	This system is using a temporary key for its Database and Transaction Connection. The license is expired.	dbconn	"Contact StarQuest Software to acquire a permanent key."
DBCONN3LICENSEXWRNG	3-Error	License is about to expire for Database and Transaction Connection.	This system is using a temporary key for its Database and Transaction Connection. The license is about to expire.	dbconn	"Contact StarQuest Software to acquire a permanent key."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DBCONN5SHWRNG	3-Error	Number of connections for TXCONN and DBCONN is at 90[node]license limit.	The number of allowed Database and Transaction Connection client \n\ in this system is reaching the limit.	dbconn	"Contact StarQuest Software to acquire more license."
DBCONN5IDLETIMEOUT	5-Notice	Client [node]connected to server [chars] has timed out after [node].	The client was idle for too long and the idle timeout configured\n\ for the dbconn server expired.	dbconn	"This is an informational message only. " LOG_SID_NO_ACTION
DBCONN5PWDEXPIRED	5-Notice	APPC security failed client [node]using userid '[chars]' for server [chars]	The password passed in by the client was rejected by the remote database \n\ server because it's expired.	dbconn	"This is an informational message only. " LOG_SID_NO_ACTION
DBCONN5PWDINVALID	5-Notice	APPC security failed client [node]using userid '[chars]' for server [chars]	The password passed in by the client was rejected by the remote database \n\ server.	dbconn	"This is an informational message only. " LOG_SID_NO_ACTION
DBCONN5PWDMISSING	5-Notice	APPC security failed client [node]using userid '[chars]' for server [chars]	The remote database server requires a userid and password but the \n\ password was not provided.	dbconn	"This is an informational message only. " LOG_SID_NO_ACTION
DBCONN-5-SECFAIL	5-Notice	APPC security failed client [node]using userid '[chars]' for server [chars]	The userid and/or password passed in by the client were rejected by\n\ the remote database server.	dbconn	"This is an informational message only. " LOG_SID_NO_ACTION
DBCONN5SECUNKNOWN	5-Notice	APPC security failed client [node]using userid '[chars]' for server [chars]	An unspecified security failure has occurred. The database host system may\n\ be able to provide more specific information.	dbconn	"This is an informational message only. " LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DBCONN5UIDINVALID	5-Notice	APPC security failed client [node]using userid '[chars]' for server [chars]	The userid used to connect to the remote database server is not valid.	dbconn	"This is an informational message only. " LOG_SID_NO_ACTION
DBCONN5UIDMISSING	5-Notice	APPC security failed client [node]using userid '[chars]' for server [chars]	The remote database server requires a userid but the \n\ userid was not provided.	dbconn	"This is an informational message only. " LOG_SID_NO_ACTION
DBCONN5UIDREVOKED	5-Notice	APPC security failed client [node]using userid '[chars]' for server [chars]	The userid used to connect to the remote database server has been revoked.	dbconn	"This is an informational message only. " LOG_SID_NO_ACTION
DBCONN5WLMIDOWN	5-Notice	All WLM routes on server [chars] have become unavailable. Recovery is in progress.	A load balanced WLM server has lost connectivity to all destinations in its server list. All client\n\ connections to this server will be rejected until a host in the complex becomes available again.	dbconn	"This is an informational message only. " LOG_SID_NO_ACTION
DBCONN5WLMISMATCH	5-Notice	WLM transport type mismatch on server [chars].	The transport type within a server list received from a Workload Manager \n\ load balanced database does not match the transport type of the corresponding \n\ dbconn server. If the conflicting server list specifies SNA transport type the \n\ default mode #INTER will be used to establish the connection.	dbconn	"This is an informational message only. " LOG_SID_NO_ACTION
DBLIB5INITIALIZATION_FAILED	2-Critical	DBLIB initialization failed for [chars]	Initialization of the database library failed.	cmsts-platform-infr	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DBMS3INITIALIZATION_FAILED	2-Critical	cbr-platform-infra	DBLIB initialization failed for[chars]	Initialization of the database library failed.	Review Cable Device Manager logs taking note of the timestamp information to select specific information to review. Copy the message and other related information exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <a href="http://www.cisco.com/tac">http://www.cisco.com/tac</a> . With some messages
DBMS3-IPC_ERROR	3-Error	DBLIB ipc failure : [chars]	An internal inter-process communication error has occurred.	cmts-platform-infr	LOG_STD_ACTION
DBMS3-IPC_ERROR	3-Error	cbr-platform-infra	DBLIB ipc failure :[chars]	An internal inter-process communication error has occurred.	The ipc failure is reported by the operating system. Check the system resources and state to determine the source of the ipc failure. If the problem persists
DBMS3MALLOC_FAILED	3-Error	DBLIB malloc failed for [chars] size [node]	An internal memory allocation has failed.	cmts-platform-infr	LOG_SIDRECUR_ACTION
DBMS3MALLOC_FAILED	3-Error	cbr-platform-infra	DBLIB malloc failed for[chars] size %u	An internal memory allocation has failed.	Determine the cause of low system memory. Start by examining the system for memory leaks using the command 'show memory debug leaks'. If the problem persists

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DBMS-3-TDL_ERROR	3-Error	DBLIB TDL error : [chars]	A TDL messaging error has been detected.	cmts-platform-infr	LOG_STD_ACTION
DBMS-3-TDL_ERROR	3-Error	cbr-platform-infra	DBLIB TDL error : [chars]	A TDL messaging error has been detected.	Verify the route processors and cable linecard software versions are compatible. If the problem persists
DBMS-CONNECTION_DROP	5-Notice	DBLIB connection from [chars] to [chars] dropped	An internal socket connection has been dropped.	cmts-platform-infr	LOG_SID_RECUR_ACTION
DBMS-CONNECTION_DROP	5-Notice	cbr-platform-infra	DBLIB RPC connection from [chars] to [chars] dropped	An internal socket connection has been dropped.	Determine the cause of the connection drop. Examine the system logs for peer cards or processes that may have failed. If the problem persists
DBUS-2-UNKNOWN	2-Critical	Slot [dec] unknown controller type 0x[hec] ignoring	A processor reported a controller type that is unknown to the system.\n\n The processor will not be used and needs to be repaired.	-	LOG_SID_SH_TECH_ACTION
DBUS-3-BADCTRLTYPE	3-Error	Invalid controller type [dec] in slot [dec]	An interface processor responded with an unknown or illegal controller\n\n type when queried. This should not happen unless the running software\n\n does not support the interface processor in question or the interface\n\n processor fails.	-	LOG_STD_ACTION
DBUS-3-BADEEPROM	3-Error	Invalid EEPROM data found for card in slot [dec] card disabled	The ID EEPROM on the indicated card is not programmed correctly.	-	"Call your Cisco technical support representative for a replacement."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DBUS3-BADHSACONF	3-Error	Down rev RSP EPROM found HSA system upgrade EPROM or remove one RSP	A software or hardware error occurred.	-	LOG_SID_SH_TECH_ACTION
DBUS3-CXBUSERR	3-Error	Slot [dec] CBus Error	-	-	"Reinstall the processor or download the microcode." LOG_SID_RECUR_ACTION
DBUS3-DAUGHIER_STATIS	3-Error	Slot [dec] control 0x[hec] status 0x[hec]	A processor reported an error. This message is sent out in conjunction with other error messages to provide additional information.	-	LOG_SID_SH_TECH_ACTION
DBUS3-DBUSDISABLED	3-Error	Slot [dec] disabled will be restarted.	A processor was disabled due to an error. The processor will be reset and not used until the next OIR event or microcode download when it will be retested.	-	"Reinstall the processor or download the microcode." LOG_SID_RECUR_ACTION
DBUS3-DBUSINTERR	3-Error	Slot [dec] Internal Error	A processor reported an internal error. The processor will be reset and not used until the next OIR event or microcode download when it will be retested.	-	"Reinstall the processor or download the microcode." LOG_SID_RECUR_ACTION
DBUS3-DBUSNIERRSWSET	3-Error	Slot [dec] Internal Error due to VIP crash	A processor reported an error. The processor will be reset and not used until the next OIR event or microcode download when it will be retested.	-	"Reinstall the processor or download the microcode." LOG_SID_RECUR_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DBUS3MSGOVERFLOW	3-Error	Slot [dec] too many DBUS messages	A board in the slot identified in the error message tried to send\n\ too many logger messages.	-	LOGS_IDSHTTECH_ACTION
DBUS3MSGPABADCONF	3-Error	Slot [dec] has an unsuccessfully configured PA in bay [dec]	The PA in the slot is not successfully configured either because the VIP is\n\ incompatible with it or because the IOS has no pertinent drivers.	-	"Please refer to the documentation of the PA to get a list of compatible\n\ VIP's. If the VIP that contains the PA is listed as supported please refer to\n\ the CCO page for IOS versions that support the PA. Otherwise seat the PA in one\n\ of the supported VIP's and verify that the IOS version supports the PA."
DBUS-3-MSGPAUNSUP	3-Error	Slot [dec] has an unsupported PA in bay [dec]	The PA in the slot is not supported either because the VIP is\n\ incompatible with it or because the IOS has no pertinent drivers.	-	"Please refer to the documentation of the PA to get a list of compatible\n\ VIP's. If the VIP that contains the PA is listed as supported please refer to\n\ the CCO page for IOS versions that support the PA. Otherwise seat the PA in one\n\ of the supported VIP's and verify that the IOS version supports the PA."
DBUS-3-NOMAGIC	3-Error	No magic number found in RP1 EEPROM	The structure containing the system MAC address needed by the OIR\n\ facility cannot be found in the RP EEPROM. The RP must be returned for\n\ reprogramming.	-	"Return the RP for reprogramming and call your Cisco technical\n\ support representative for assistance."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DBUS-3-NORESP	3-Error	bad or no response slot %u	A board in the slot identified in the error message failed to\n\nrespond.	-	LOG_SIDSHTTECH_ACTION
DBUS-3-NOSUPPORT	3-Error	No driver support in this image for [chars] in slot [dec] card type [dec] - disabled	The Cisco IOS image does not have driver support code\n\n for the specified interface processor.	-	"Remove the unsupported interface processor card or\n\n reload the router with a Cisco IOS image that has driver\n\n support code for that interface processor card."
DBUS-3-ORFS_NOT_INITIALIZED	3-Error	ORFS is not initialized	When oir-remove-failing-slot is invoked the software attempts to initialize parameters. This initialization failed and the service will not be available.	rsp	"If this message is seen please try entering the service " "oir-remove-failing-slot command again. This message should " "not cause any functional failures. If the message does cause " "an IOS performance issue please check Bug Toolkit on the web " "for existing bugs and if none are found " LOG_SIDSHTTECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DBUS-3-SLOTCOMP	3-Error	Slot [dec] dbus error slot 0x[hec] and complement 0x[hec] do not match	A processor reported a mismatch between the contents of the slot\n\ register and its complement. This condition indicates a hardware\n\ failure in the diagnostic bus controller on that processor or on the\n\ diagnostic bus. The processor will be reset and not used until the next\n\ OIR event or microcode download when it will be retested.	-	LOG_SID_SH_TECH_ACTION
DBUS-3-SW_NOTRDY	3-Error	DBUS software not ready for slot [dec] after [chars] elapsed [node]status 0x[hec]	An interface processor failed to come online after being reset. A software or hardware error occurred.	rspc5rsm	"Please refer to Bug Toolkit on the Cisco web-site to check for "existing bugs. If you do not find one obtain the output of show "tech and show log and open a TAC case."
DBUS-3-WCSCIRLRERR	3-Error	Slot [dec] WCS Controller Instruction Error	-	-	LOG_SID_SH_TECH_ACTION
DBUS-3-WCSERR	3-Error	Slot [dec] WCS controller in error state 0x[hec] resetting	-	-	"Reset the processor and load new microcode. " LOG_SID_RECUR_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DBUS-3-WCSFLOW	3-Error	Slot [dec] flow cntrl error loading WCS last data 0x[hec] pos [dec]	A processor indicated an error condition while downloading microcode.\n\ The status cmd/data and pos numbers shown in the message reflect the\n\ error condition the last byte of microcode loaded and the position in\n\ the file respectively. If this error appears the microcode download\n\ is aborted and the ROM microcode is loaded.	-	LOG_SID_RECUR_ACTION
DBUS-3-WCSLDERR	3-Error	Slot [dec] error loading WCS status 0x[hec] cmd/data 0x[hec] pos [dec]	A processor indicated an error condition while downloading microcode.\n\ The status cmd/data and pos numbers shown in the message reflect the\n\ error condition the last byte of microcode loaded and the position in\n\ the file respectively. If this error appears the microcode download\n\ is aborted and the ROM microcode is loaded.	-	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DBUS-3-WCSPARERR	3-Error	Slot [dec] WCS Controller Parity Error	A processor reported a WCS parity error. The processor will be reset and not used until the next OIR event or microcode download when it will be retested.	-	"Replace the processor or download microcode. If this message recurs call your Cisco technical support representative for assistance."
DBUS-3-XILINX	3-Error	ready wait timeout slot %u	The field-programmable gate arrays on an interface processor failed to load after being reset. This indicates a probable software or hardware problem.	-	LOG_STD_ACTION
<del>IOXMLDCUSERPROFILE</del>	3-Error	ewlc-client	Unable to get file size of dynamic XML file dc_user_profiles.xml	Unable to get file size of dynamic XML file dc_user_profiles.xml	LOG_STD_ACTION
<del>IOXMLDCUSERPROFILE</del>	3-Error	ewlc-client	Unable to load dynamic XML file dc_user_profiles.xml	Unable to load dynamic XML file dc_user_profiles.xml	LOG_STD_ACTION
<del>IOXMLDCUSERPROFILE</del>	3-Error	ewlc-client	Unable to open dynamic XML file dc_user_profiles.xml	Unable to open dynamic XML file dc_user_profiles.xml	LOG_STD_ACTION
<del>IOXMLDCUSERPROFILE</del>	3-Error	ewlc-client	Unable to parse dynamic XML file dc_user_profiles.xml	Unable to parse dynamic XML file dc_user_profiles.xml	LOG_STD_ACTION
DC3BUILTIN_INIT_FAIL	3-Error	[chars]	Initilization of Device classifier Built-in database failed. So the device classifier will be operationally down.	dc	LOG_STD_ACTION
DC3BUILTIN_INIT_FAIL	3-Error	[chars]	Initilization of Device classifier Built-in database failed. So the device classifier will be operationally down.	dc	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DC-3-BUILTIN_INIT_FAIL	3-Error	[chars]	Initilization of Device classifier Built-in database failed. So the device classifier will be operationally down.	dc	LOG_STD_ACTION
DC-3-CHECK_INIT_FAIL	3-Error	[chars]	Loading of the Checks databae in Device classifier failed.	dc	LOG_STD_ACTION
DC-3-CHECK_INIT_FAIL	3-Error	[chars]	Loading of the Checks databae in Device classifier failed.	dc	LOG_STD_ACTION
DC-3-CHECK_INIT_FAIL	3-Error	[chars]	Loading of the Checks databae in Device classifier failed.	dc	LOG_STD_ACTION
DC-3-DB_INIT_FAIL	3-Error	Device Classifier disabled. [chars] initialization failed	Initilization of Device classifier Internal database failed So the device classifier will be operationally down.	dc	LOG_STD_ACTION
DC-3-DB_INIT_FAIL	3-Error	Device Classifier disabled. [chars] initialization failed	Initilization of Device classifier Internal database failed So the device classifier will be operationally down.	dc	LOG_STD_ACTION
DC-3-DB_INIT_FAIL	3-Error	Device Classifier disabled. [chars] initialization failed	Initilization of Device classifier Internal database failed So the device classifier will be operationally down.	dc	LOG_STD_ACTION
DC3DC_ADD_USR_CHK	3-Error	Addition of custom checks failed : [chars].	Internal error returned during addition of custom checks.	dc	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DC3DC_ADD_USR_RULE	3-Error	Addition of custom profiles failed : [chars].	Internal error returned during addition of custom profiles.	dc	-
DC3DC_ADD_USR_RULE	3-Error	Addition of custom rules failed : [chars].	Internal error returned during addition of custom rules.	dc	-
DC-3-DC_DISABLED	3-Error	[chars].	The device classifier is disabled due to an error condition encountered during initialization or parsing the profiles	dc	"The specified error message is logged." "After the error condition is resolved" "re-enable the device classifier"
DC-3-DC_DISABLED	3-Error	[chars].	The device classifier is disabled due to an error condition encountered during initialization or parsing the profiles	dc	"The specified error message is logged." "After the error condition is resolved" "re-enable the device classifier"
DC-3-DC_DISABLED	3-Error	[chars].	The device classifier is disabled due to an error condition encountered during initialization or parsing the profiles	dc	"The specified error message is logged." "After the error condition is resolved" "re-enable the device classifier"
DC-3-DISABLE_FAIL	3-Error	Failed to disable DC.	Internal error occurred trying to disable Device Classifier.	dc	"Please run the command: show macro auto monitor clients and try disabling" "the clients"
DC-3-DISABLE_FAIL	3-Error	Failed to disable DC.	Internal error occurred trying to disable Device Classifier.	dc	"Please run the command: show macro auto monitor clients and try disabling" "the clients"
DC-3-DISABLE_FAIL	3-Error	Failed to disable DC.	Internal error occurred trying to disable Device Classifier.	dc	"Please run the command: show macro auto monitor clients and try disabling" "the clients"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DC-3-ENABLE_FAIL	3-Error	Failed to enable DC.	Internal error occurred trying to enable Device Classifier.	dc	"Please check the previous DC error messages and take the relevant action"
DC-3-ENABLE_FAIL	3-Error	Failed to enable DC.	Internal error occurred trying to enable Device Classifier.	dc	"Please check the previous DC error messages and take the relevant action"
DC-3-ENABLE_FAIL	3-Error	Failed to enable DC.	Internal error occurred trying to enable Device Classifier.	dc	"Please check the previous DC error messages and take the relevant action"
DC-3-FILE_CHECKSUM	3-Error	Checksum [chars] failed for the profile file: [chars]	Checksum computation or verification failed for the profiles file. The profiles in the errored file cannot be loaded into the device classifier.	dc	-
DC-3-FILE_CHECKSUM	3-Error	Checksum [chars] failed for the profile file: [chars]	Checksum computation or verification failed for the profiles file. The profiles in the errored file cannot be loaded into the device classifier.	dc	-
DC-3-FILE_CHECKSUM	3-Error	Checksum [chars] failed for the profile file: [chars]	Checksum computation or verification failed for the profiles file. The profiles in the errored file cannot be loaded into the device classifier.	dc	-
DC-3-FILE_READ_ERROR	3-Error	Error [chars] the profile file: [chars]	There was an error reading the profile file contents. The profiles in the errored file cannot be loaded into the device classifier.	dc	-



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DC3-FILE_READ_ERROR	3-Error	Error [chars] the profile file: [chars]	There was an error reading the profile file contents. The profiles in the errored file cannot be loaded into the device classifier.	dc	-
DC3-FILE_READ_ERROR	3-Error	Error [chars] the profile file: [chars]	There was an error reading the profile file contents. The profiles in the errored file cannot be loaded into the device classifier.	dc	-
DC-3-HRPC_SYNC	3-Error	Error on member switch [dec] error_code = [dec]	Internal error occurred while trying to sync Device Classifier.state	dc	"Please check the state of the stack members"
DC-3-HRPC_SYNC	3-Error	Error on member switch [dec] error_code = [dec]	Internal error occurred while trying to sync Device Classifier.state	dc	"Please check the state of the stack members"
DC-3-HRPC_SYNC	3-Error	Error on member switch [dec] error_code = [dec]	Internal error occurred while trying to sync Device Classifier.state	dc	"Please check the state of the stack members"
<del>DC-MEMBER_VERSION</del>	3-Error	Incompatible version of Profile detected in [chars]. Expected version:[dec] Version found:[dec]	An incompatible profile version is detected. The device classifier feature will be operationally down.	dc	"Reload the expected version of device profiles file to the "system and re-enable the device classifier "
<del>DC-MEMBER_VERSION</del>	3-Error	Incompatible version of Profile detected in [chars]. Expected version:[dec] Version found:[dec]	An incompatible profile version is detected. The device classifier feature will be operationally down.	dc	"Reload the expected version of device profiles file to the "system and re-enable the device classifier "
<del>DC-MEMBER_VERSION</del>	3-Error	Incompatible version of Profile detected in [chars]. Expected version:[dec] Version found:[dec]	An incompatible profile version is detected. The device classifier feature will be operationally down.	dc	"Reload the expected version of device profiles file to the "system and re-enable the device classifier "

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DC3MAX_OUI_EXCEEDED	3-Error	[chars].	The maximum number of OUI codes that can be defined in device profiles exceeded the maximum limit. The device classifier will be operationally down if failure occurred for the Embedded profiles.	dc	"Reduce the number of rules in the device profiles file and" "reload it into the " "system and re-enable the device classifier"
DC3MAX_OUI_EXCEEDED	3-Error	[chars].	The maximum number of OUI codes that can be defined in device profiles exceeded the maximum limit. The device classifier will be operationally down if failure occurred for the Embedded profiles.	dc	"Reduce the number of rules in the device profiles file and" "reload it into the " "system and re-enable the device classifier"
DC3MAX_OUI_EXCEEDED	3-Error	[chars].	The maximum number of OUI codes that can be defined in device profiles exceeded the maximum limit. The device classifier will be operationally down if failure occurred for the Embedded profiles.	dc	"Reduce the number of rules in the device profiles file and" "reload it into the " "system and re-enable the device classifier"
DC3MAX_OUI_EXCEEDED	3-Error	[chars].	The maximum number of profiles that can be defined in device profiles exceeded the maximum limit. The device classifier will be operationally down if failure occurred for the Embedded profiles.	dc	"Reduce the number of rules in the device profiles file and" "reload it into the " "system and re-enable the device classifier"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DCMAXPROFILESXCHDD	3-Error	[chars].	The maximum number of profiles that can be defined in device profiles exceeded the maximum limit. The device classifier will be operationally down if failure occurred for the Embedded profiles.	dc	"Reduce the number of rules in the device profiles file and" "reload it into the " "system and re-enable the device classifier"
DCMAXPROFILESXCHDD	3-Error	total profiles [dec] exceeds the max supported [dec]	The maximum number of profiles that can be defined in device profiles exceeded the maximum limit. The device classifier will be operationally down if failure occurred for the Embedded profiles.	dc	"Reduce the number of rules in the device profiles file and" "reload it into the " "system and re-enable the device classifier"
DCMAXRULESXCHDD	3-Error	[chars].	The maximum number of rules that can be defined in device profiles exceeded the maximum limit. The device classifier will be operationally down if failure occurred for the Embedded profiles.	dc	"Reduce the number of rules in the device profiles file and" "reload it into the " "system and re-enable the device classifier"
DCMAXRULESXCHDD	3-Error	[chars].	The maximum number of rules that can be defined in device profiles exceeded the maximum limit. The device classifier will be operationally down if failure occurred for the Embedded profiles.	dc	"Reduce the number of rules in the device profiles file and" "reload it into the " "system and re-enable the device classifier"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DC-MAXRULESEXCEED	3-Error	[chars].	The maximum number of rules that can be defined in device profiles exceeded the maximum limit. The device classifier will be operationally down if failure occurred for the Embedded profiles.	dc	"Reduce the number of rules in the device profiles file and " "reload it into the " "system and re-enable the device classifier"
DC-3-NO_MEM	3-Error	[chars].	There is no memory left to allocate in the system The device classifier will be operationally down if failure occurred for the Embedded profiles.	dc	"Increase the memory size in the system and " "re-enable the device classifier"
DC-3-NO_MEM	3-Error	[chars].	There is no memory left to allocate in the system The device classifier will be operationally down if failure occurred for the Embedded profiles.	dc	"Increase the memory size in the system and " "re-enable the device classifier"
DC-3-NO_MEM	3-Error	[chars].	There is no memory left to allocate in the system The device classifier will be operationally down if failure occurred for the Embedded profiles.	dc	"Increase the memory size in the system and " "re-enable the device classifier"
DC-3-OUI_INIT_FAIL	3-Error	OUI Table initialization failed for [chars]	Loading of the OUI database in Device classifier failed.	dc	LOG_STD_ACTION
DC-3-OUI_INIT_FAIL	3-Error	OUI Table initialization failed for [chars]	Loading of the OUI database in Device classifier failed.	dc	LOG_STD_ACTION
DC-3-OUI_INIT_FAIL	3-Error	OUI Table initialization failed for [chars]	Loading of the OUI database in Device classifier failed.	dc	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DC-3-PATTERN_NOT_FOUND	3-Error	[chars]	The device profiles file parsing failed. This indicates that the file may be corrupt. The device classifier will be operationally down if failure occurred for the Embedded profiles.	dc	"Reload the Device Profiles file to the flash and re-enable the device classifier"
DC-3-PATTERN_NOT_FOUND	3-Error	[chars]	The device profiles file parsing failed. This indicates that the file may be corrupt. The device classifier will be operationally down if failure occurred for the Embedded profiles.	dc	"Reload the Device Profiles file to the flash and re-enable the device classifier"
DC-3-PATTERN_NOT_FOUND	3-Error	[chars]	The device profiles file parsing failed. This indicates that the file may be corrupt. The device classifier will be operationally down if failure occurred for the Embedded profiles.	dc	"Reload the Device Profiles file to the flash and re-enable the device classifier"
DC-3-SM_API	3-Error	[chars] return [chars].	Internal error returned by Session Manager api.	dc	-
DC-3-SM_API	3-Error	[chars] return [chars].	Internal error returned by Session Manager api.	dc	-
DC-3-SM_API	3-Error	[chars] return [chars].	Internal error returned by Session Manager api.	dc	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DC-3-SM_GET	3-Error	Failed to get [chars].	Internal error occurred during communication with Session Manager. This may cause the show command not to display the device classification results.	dc	-
DC-3-SM_GET	3-Error	Failed to get [chars].	Internal error occurred during communication with Session Manager. This may cause the show command not to display the device classification results.	dc	-
DC-3-SM_GET	3-Error	Failed to get [chars].	Internal error occurred during communication with Session Manager. This may cause the show command not to display the device classification results.	dc	-
DC-3-SM_INIT_FAIL	3-Error	Device Classifier disabled. [chars] initialization failed	Registraton of Device classifier with SM failed. So the device classifier will be operationally down.	dc	LOG_STD_ACTION
DC-3-SM_INIT_FAIL	3-Error	Device Classifier disabled. [chars] initialization failed	Registraton of Device classifier with SM failed. So the device classifier will be operationally down.	dc	LOG_STD_ACTION
DC-3-SM_INIT_FAIL	3-Error	Device Classifier disabled. [chars] initialization failed	Registraton of Device classifier with SM failed. So the device classifier will be operationally down.	dc	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DC-3-SM_UPDATE	3-Error	Failed to update [chars].	Internal error occurred during device classification . This may cause the device to be unknown.	dc	-
DC-3-SM_UPDATE	3-Error	Failed to update [chars].	Internal error occurred during device classification . This may cause the device to be unknown.	dc	-
DC-3-SM_UPDATE	3-Error	Failed to update [chars].	Internal error occurred during device classification . This may cause the device to be unknown.	dc	-
DC4FILE_OPEN_WARNING	4-Warning	Not able to open [chars]	The device classifier did not find the default profile file or it may be corrupted. DC is working using built-in profiles.	dc	" Perform archive download using the tar bundle image to install " " the profile file in the flash. " " Reload the switch with the image to see the warning message is gone. "
DC4FILE_OPEN_WARNING	4-Warning	Not able to open [chars]	The device classifier did not find the default profile file or it may be corrupted. DC is working using built-in profiles.	dc	" Perform archive download using the tar bundle image to install " " the profile file in the flash. " " Reload the switch with the image to see the warning message is gone. "
DC4FILE_OPEN_WARNING	4-Warning	Not able to open [chars]	The device classifier did not find the default profile file or it may be corrupted. DC is working using built-in profiles.	dc	" Perform archive download using the tar bundle image to install " " the profile file in the flash. " " Reload the switch with the image to see the warning message is gone. "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DC6DEFAULT_NT_INFO	6-Information	[chars]	The default profiles are not loaded and those devices will not be classified. Device classifier will continue to work with built-in profiles.	dc	LOG_STD_ACTION
DC6DEFAULT_NT_INFO	6-Information	[chars]	The default profiles are not loaded and those devices will not be classified. Device classifier will continue to work with built-in profiles.	dc	LOG_STD_ACTION
DC6DEFAULT_NT_INFO	6-Information	[chars]	The default profiles are not loaded and those devices will not be classified. Device classifier will continue to work with built-in profiles.	dc	LOG_STD_ACTION
<del>IDNRDCAIPXINITIALD</del>	2-Critical	DCA IPC initialization failure result: [dec].	Cisco internal software error. DCA initialization detected that the Proxy IPC interface initialization failed.	esg-dp-infra	"File a bug with the platform DCA infra team"
<del>IDNRDCAIPXSENDL</del>	2-Critical	DCA IPC response send failure result: [dec].	Cisco internal software error. DCA detected an error when sending a IPC response.	esg-dp-infra	"File a bug with the platform DCA infra team"
<del>IDNRDCAASNCERRSP</del>	3-Error	DCA received an asyn callback with an error response trans_id: [dec] Result: [dec]	DCA received an asyn callback with an error response	esg-dp-infra	"File a bug with the platform DCA infra team"
<del>IDNRDCAASNCERRMTH</del>	3-Error	DCA received an asyn callback with an unexpected sequence number trans_id: [dec]	DCA received an asyn callback with an unexpected sequence number	esg-dp-infra	"File a bug with the platform DCA infra team"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>DCA</del> <del>DP</del> <del>ASYN</del> <del>CALL</del> <del>BACK</del> <del>WHILE</del>	3-Error	DCA received an asyn callback while in an unexpected state trans_id: [dec]	DCA received an asyn callback while in an unexpected state	esg-dp-infra	"File a bug with the platform DCA infra team"
<del>DCA</del> <del>DP</del> <del>PROXY</del> <del>MSG</del>	3-Error	DCA Proxy received invalid Message ID [dec]	Cisco internal software error. DCA Proxy received an invalid Message ID. This message will be ignored.	esg-dp-infra	"File a bug with the platform DCA infra team"
<del>DCA</del> <del>DP</del> <del>PROXY</del> <del>ALICE</del>	3-Error	DCA Proxy [chars] response lost due to buffer allocation failure	Cisco internal software error. DCA Proxy message processing detected a IPC buffer allocation failure during response processing. The associated DCA functionality may not be fully functional as a result of this condition.	esg-dp-infra	"File a bug with the platform DCA infra team"
<del>DCA</del> <del>DP</del> <del>PROXY</del> <del>ALICE</del>	3-Error	-	-	-	-
<del>DCA</del> <del>DP</del> <del>REQUEST</del> <del>WHILE</del>	3-Error	DCA received a new request while previous request in progress	DCA received a new request while previous request in progress	esg-dp-infra	"File a bug with the platform DCA infra team"
<del>DCA</del> <del>DP</del> <del>STATE</del> <del>TRANS</del> <del>ERR</del>	3-Error	DCA encountered an error during state transition processing trans_id: [dec]	DCA encountered an error during state transition processing	esg-dp-infra	"File a bug with the platform DCA infra team"
<del>DCA</del> <del>DP</del> <del>STATE</del> <del>TRANS</del> <del>ERR</del>	3-Error	DCA encountered an state transition error trans_id: [dec] Result: [dec]	DCA encountered an state transition error	esg-dp-infra	"File a bug with the platform DCA infra team"
DEAD-4-SCARLET	4-Warning	* Interface [chars]: I knew without asking she was into the blues	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DEAD-4-SCARLET	4-Warning	* Interface [chars]: I knew without asking she was into the blues	-	-	-
DEAD-4-SCARLET	4-Warning	* Interface [chars]: I knew without asking she was into the blues	-	-	-
DEAD-4-SCARLET	4-Warning	* Interface [chars]: I knew without asking she was into the blues	-	-	-
DEAD-4-SCARLET	4-Warning	* Interface [chars]: I knew without asking she was into the blues	-	-	-
DEAD-4-SCARLET	4-Warning	* Interface [chars]: I knew without asking she was into the blues	-	-	-
DEAD-4-SCARLET	4-Warning	-	-	-	-
DEAD-4-SCARLET	4-Warning	-	-	-	-
DEAD-4-SCARLET	4-Warning	-	-	-	-
DEAD-4-SCARLET	4-Warning	-	-	-	-
DEAD-4-SCARLET	4-Warning	-	-	-	-
DEAD-4-SCARLET	4-Warning	-	-	-	-
DEADADJ-3-LCON	3-Error	ERRMSG_NOFLAGS	-	-	-
DEADADJ-3-LCON	3-Error	ERRMSG_NOFLAGS	-	-	-
DEC21140-1-INITFAIL	1-Alert	mstxt_initfail	The Fast Ethernet port initialization failed. This can be caused by disconnected cabling or a failure to detect the media in use.	-	"Check the cabling. Try initializing the port again. " LOGSIDSHTJCHACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DEC21140-3-RXFIFO	3-Error	Unit [dec] receive FIFO overflow	The Fast Ethernet receiver was unable to hand received data to a\n\ hardware buffer because the input rate exceeded the receiver's\n\ ability to handle the data. This could be caused by excessive\n\ system load.	-	LOG_SID_RECUR_ACTION
DEC21140-3-UNDERFLO	3-Error	Unit [dec] Tx FIFO underflow	The Fast Ethernet transmitter was ready to transmit before a packet\n\ was in the buffer. This could be caused by excessive system load.	-	LOG_SID_RECUR_ACTION
DEC21140-5-COLL	5-Notice	Unit [dec] excessive collisions	A Fast Ethernet packet has been dropped because too many\n\ attempts to transmit it were stopped by collisions. This can\n\ be caused by a Fast Ethernet segment which is full to capacity\n\ or by other equipment on the LAN malfunctioning.	-	LOG_SID_NO_ACTION
DEC21140-5-JABBER	5-Notice	Unit [dec] jabber timeout	The transmitter for the port adapter's Fast Ethernet port has\n\ timed out and caused the transmission of a packet to fail.	-	LOG_SID_RECUR_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DEC21140-5-LATECOLL	5-Notice	Unit [dec] late collision error	Late collisions happen when a collision occurs after transmitting \n\ the preamble. The packet will be retransmitted but this could \n\ indicate that another device is failing to detect when the network \n\ is in use.	-	"If this recurs check for malfunctions in other devices on the \n\ Fast Ethernet."
DEC21140-5-LOSTCARR	5-Notice	Unit [dec] lost carrier	The Fast Ethernet port lost carrier while transmitting\n\ meaning that it is no longer receiving signals from the LAN.\n\ This can be caused by disconnected Fast Ethernet cabling or\n\ a transceiver failure.	-	"If the message recurs check your Fast Ethernet cabling and port\n\ adapter first. If the problem cannot be located follow these\n\ directions. " LOG_SID_RECUR_ACTION
DEC21140-5-NOCARR	5-Notice	Unit [dec] no carrier	The Fast Ethernet port did not find a carrier when preparing to\n\ transmit a packet meaning that it is no longer receiving signals\n\ from the LAN. This can be caused by disconnected Fast Ethernet\n\ cabling or a transceiver failure.	-	"Check your Fast Ethernet cabling and port adapter. " LOG_SID_RECUR_ACTION
DEC21140-5-WATCHDOG	5-Notice	Unit [dec] enormous packet received	A packet received via Fast Ethernet was dropped due to excessive \n\ size.	-	"Adjust the MTU of the interface if necessary. Otherwise\n\ no action is required."
DEC21140-5-WATCHDOG	3-Error	[chars]	The system is unable to reset the configuration	firmware	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>DEASADNARETRFCDF</del>	3-Error	[chars]	The system is unable to reset the configuration	firmware	LOG_STD_ACTION
<del>DEASADNARETRFCDF</del>	3-Error	[chars]	The system is unable to reset the configuration	firmware	LOG_STD_ACTION
<del>DEASADNARETRFCDF</del>	5-Notice	[chars]	The configuration is reset and the system will now reboot	firmware	LOG_STD_ACTION
<del>DEASADNARETRFCDF</del>	5-Notice	[chars]	The configuration is reset and the system will now reboot	firmware	LOG_STD_ACTION
<del>DEASADNARETRFCDF</del>	5-Notice	[chars]	The configuration is reset and the system will now reboot	firmware	LOG_STD_ACTION
DFCONGSHUTDOWNIDP	6-Information	ERRMSG_NOFLAGS	-	-	-
DFCONGSHUTDOWNIDP	6-Information	ERRMSG_NOFLAGS	-	-	-
DFCASEENDINGHEALCN	3-Error	ERRMSG_NOFLAGS	-	-	-
DFCASEENDINGHEALCN	3-Error	ERRMSG_NOFLAGS	-	-	-
DFCFAMISIEEXITWDG	3-Error	ERRMSG_NOFLAGS	-	-	-
DFCFAMISIEEXITWDG	3-Error	ERRMSG_NOFLAGS	-	-	-
DFP4AGENT_NOT_FOUND	4-Warning	[chars] Service has not been registered with DFP.	No such service registered with DFP subsystem.	dfp	LOG_SID_RECUR_ACTION
DFP-4-BAD_LISTEN	4-Warning	Service [chars] - Listen failed	Listen for DFP Manager failed.	dfp	LOG_SID_RECUR_ACTION
DFP-4-BAD_POINTER	4-Warning	[chars] Application did not set pointer	Application passed invalid pointer to DFP subsystem	dfp	LOG_SID_RECUR_ACTION
DFP-4-BAD_SEND	4-Warning	Manager [node][node]- Send failed	Sending a message to DFP Manager failed	dfp	LOG_SID_RECUR_ACTION
DFP-4-BIND_FAIL	4-Warning	Failure binding port [node]to socket for service [chars].	Problem with call to socket bind.	dfp	LOG_SID_RECUR_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DFP-4-ENQUEUE	4-Warning	Process enqueue failed: [chars]	An unexpected error occurred while enqueueing a DFP element	dfp	LOG_SID_RECUR_ACTION
DFP-4-NO_PARSE	4-Warning	Manager [node] Service [chars] - Could not parse message	Could not parse message from DFP Manager	dfp	LOG_SID_RECUR_ACTION
DFP-4-NO_PROCESS_START	4-Warning	Could not start process for service [chars]	Could not start DFP Process for service [chars]	dfp	LOG_SID_RECUR_ACTION
DFP-4-NO_QUEUE_REQUEST	4-Warning	Could not queue request for [chars] for service [chars]	Could not queue request to the DFP process for specific action	dfp	LOG_SID_RECUR_ACTION
DFP-4-NUM_TOO_LARGE	4-Warning	[chars] Application sent too many values	Application sent too many values to DFP subsystem	dfp	LOG_SID_RECUR_ACTION
DFP-4-PACKET_TOO_SMALL	4-Warning	The DFP packet is too small from manager [node]service [chars].	A DFP packet has been received that is too small.	dfp	LOG_SID_RECUR_ACTION
DFP-4-READ_ERR	4-Warning	Manager [node] Service [chars] - Too many read errors	Too many errors reading message header from DFP Manager	dfp	LOG_SID_RECUR_ACTION
DFP-4-REINIT_SERVICE_ERR	4-Warning	Service [chars] is already initialized cannot re-initialize	The application has attempted to re-initialize a service	dfp	LOG_SID_RECUR_ACTION
DFP-4-SECURITY_FAIL	4-Warning	[chars] security information in CASA packet from manager [node]service [chars].	Security check failed.	casa	"Make sure all CASA/DFP systems are configured with the same password."
DFP-4-SOCK_ERR	4-Warning	Manager [node] Service [chars] - Socket_recv error [dec]	Socket_recv error receiving message from DFP Manager	dfp	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DFP4SIRNG_TOO_LONG	4-Warning	The string [chars] exceeds 15 characters - too long for service name.	The user input a service string that exceeds 15 characters	dfp	LOG_SID_RECUR_ACTION
DFP4SUBSYS_NOT_UP	4-Warning	Service [chars] - attempted to register before DFP Subsystem is up.	Problem with order of subsystem initialization.	dfp	LOG_SID_RECUR_ACTION
DFP-4-UKN_CON	4-Warning	Manager [node]Service [chars] - Unknown connection state %u	Unknown connection state processing DFP timer	dfp	LOG_SID_RECUR_ACTION
DFP-4-UNK_TYPE	4-Warning	Manager [node] Service [chars] - Unknown message type %u	Message from DFP Manager has unknown type	dfp	LOG_SID_RECUR_ACTION
<del>DFP4CONC_ABNORMAL</del>	3-Error	Cannot install [chars] ACLs for DHCP Snooping probably no TCAM space	When DHCP Snooping is enabled ACLs need to be installed into the TCAM. This will fail if there is insufficient space in the TCAM.	firmware	"Reduce the number of input and/or output" "PACLs and/or VACLs to make space in the TCAM."
<del>DFP4CONC_GENR_EVENT</del>	3-Error	Process received unknown event major [hec] minor [hec].	-	-	-
<del>DFP4CONC_GET_BUFFER</del>	2-Critical	DHCP Snooping ISSU client failed to get buffer for message. Error: [dec] [chars]	The DHCP Snooping ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	dhcp-snooping	"show logging and show checkpoint client"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DHCP_SNOOPING_ISSU_INIT	2-Critical	DHCP Snooping ISSU client initialization failed to [chars]. Error: [dec] [chars]	The DHCP Snooping ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	dhcp-snooping	LOG_STD_ACTION
DHCP_SNOOPING_ISSU_NEGO_FAIL	2-Critical	DHCP Snooping ISSU client failed to send negotiation message. Error: [dec] [chars]	The DHCP Snooping ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	dhcp-snooping	"show logging and show checkpoint client"
DHCP_SNOOPING_ISSU_NEGO_DONE	2-Critical	DHCP Snooping ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The DHCP Snooping ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	dhcp-snooping	"show issu session <client_id> and "show issu negotiated capability <session_id>"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>DHCPNOISSUNGRV</del>	2-Critical	DHCP Snooping ISSU client failed to register session information. Error: [dec] [chars]	The DHCP Snooping ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	dhcp-snooping	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>DHCPNOISSUNGRV</del>	3-Error	DHCP Snooping ISSU client does not have a valid registered session.	The DHCP Snooping ISSU client does not have a valid registered session.	dhcp-snooping	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>DHCPNOISSUNGRV</del>	3-Error	DHCP Snooping ISSU client 'Message Type [dec]' is not compatible	The DHCP Snooping ISSU client received an incompatible message from the peer device. The message cannot be processed.	dhcp-snooping	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>DHCPNOISSUNGRV</del>	3-Error	DHCP Snooping ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The DHCP Snooping ISSU client failed to calculate the MTU for the specified message. The DHCP Snooping ISSU client is not able to send the message to the standby device.	dhcp-snooping	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>DHCPNOISSUNGRV</del>	3-Error	DHCP Snooping ISSU client failed to unregister session information. Error: [dec] [chars]	The DHCP Snooping ISSU client failed to unregister session information.	dhcp-snooping	"show issu session <client_id> and " "show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>DISNOOPERR</del>	3-Error	DHCP Snooping ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The DHCP Snooping ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the DHCP Snooping state between the active device and the standby device is not identical.	dhcp-snooping	"show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>DISNOOPERR</del>	3-Error	DHCP Snooping internal error [chars]	A software sanity check failed in the DHCP Snooping process.	dhcp-snooping	LOG_SID_SHI_ACTION
<del>DISNOOPWRN</del>	4-Warning	DHCP snooping binding transfer failed. [chars]	This message provides the reason of failure when a database transfer\n\ has failed.	dhcp-snooping	LOG_SID_NO_ACTION
<del>DISNOOPWRN</del>	4-Warning	DHCP snooping binding transfer failed[dec]. [chars]	This message provides the reason of failure when a database transfer\n\ has failed. This log message is rate limited.	dhcp-snooping	LOG_SID_NO_ACTION
<del>DISNOOPWRN</del>	4-Warning	Drop packet on the interface [chars] \n\ Bridge mode VM authentication is pending for the VM	This message indicates that a DHCP Discover packet was dropped\n\ due to bridge mode vm mac not being authenticated.	dhcp-snooping	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>DNORPDSORPZASWANG</del>	4-Warning	Saving DHCP snooping bindings to [chars] can fill up your device causing the writes of bindings to device to fail.	Saving DHCP Snooping bindings to a flash file system such as\n bootflash or slot0 could cause the flash to fill up. Possible\n consequences include the long delay to regain console write\n failures for database config regular squeeze requirements and\n reduced life of flash due to regular squeeze operations etc.	dhcp-snooping	"Alternate destination locations for database agent " "include tftp ftp rcp etc. Please see the help " "at command line for a complete list of options."
<del>DNORPDSORPZASWANG</del>	4-Warning	DHCP Snooping received [dec] DHCP packets on interface [chars]	DHCP Snooping detected a DHCP packet rate limit violation on a particular interface. The interface will be error disabled.	dhcp-snooping	LOG_SID_NO_ACTION
<del>DNORPDSORPZASWANG</del>	4-Warning	DHCP Snooping configuration may not take effect on secondary vlan [dec]. [chars]	If private vlan feature is enabled DHCP Snooping configuration on primary vlan will automatically propagate to all secondary vlans.	dhcp-snooping	LOG_SID_NO_ACTION
<del>DNORPDSORPZASWANG</del>	4-Warning	The interface [chars] is receiving more than the threshold set	This message indicates that a DHCP packets are coming into cpu\n at a much higher rate than the specified threshold.	dhcp-snooping	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>DISCONF/DHCP/DECL</del>	4-Warning	The interface [chars] has received a DHCP Release/Decline packet \n\ with no existing binding entry for it	This message indicates that a DHCP Release/Decline packet was received \n\ with no corresponding binding entry.	dhcp-snooping	LOG_SID_NO_ACTION
<del>DISCONF/DHCP/VLAN</del>	4-Warning	IP source binding is configured on non existing vlan [dec].	IP source binding is configured on a non existing vlan.	dhcp-snooping	"Please make sure that the L2 VLAN is configured before configuring a " "DHCP Snooping Binding. If you see this message even though L2 VLAN is " "configured in the system please contact Cisco Technical Assistance " "Center."
<del>DISCONF/DHCP/VLAN</del>	4-Warning	IP source filter may not take effect on secondary vlan [dec] where IP source binding is configured. [chars]	If private vlan feature is enabled IP source filter on primary vlan will automatically propagate to all secondary vlans.	dhcp-snooping	LOG_SID_NO_ACTION
<del>DISCONF/DHCP/NO</del>	4-Warning	The interface [chars] is not able to insert opt82 into the packet\n\ because of insufficient space in the packet	This message indicates that a DHCP packet was not inserted with\n\ opt82 data due to insufficient space in the packet.	dhcp-snooping	LOG_SID_NO_ACTION
DHCP/NO/QUE/FUL	4-Warning	Fail to enqueue DHCP packet into processing queue: [chars] the queue is most likely full and packet will be dropped.	If the DHCP snooping bindings are loaded by the DHCP snooping database agent and NTP is not sync then the calculated lease duration for the bindings will be incorrect.	firmware	"Synchronize NTP on the switch to provide an accurate " "time and date for the system clock. Then disable and " "re-enable DHCP snooping to clear the bindings database."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>DNOSNOOPACKERR</del>	4-Warning	Error is encountered in processing acknowledgement for DHCP snooping binding sync [chars]. ack message txn id: 0x[hex]	This message indicates that there is an error in handling of the\n\ dhcp snooping binding sync acknowledgement. In most of these cases\n\ the ack message is ignored.	dhcp-snooping	LOG_SID_NO_ACTION
<del>DNOSNOOPACEDHE</del>	4-Warning	DHCP snooping binding transfer failed on the Standby Supervisor. [chars]	This message provides the reason of failure when a database transfer\n\ has failed on the Standby Supervisor.	dhcp-snooping	LOG_SID_NO_ACTION
<del>DNOSNOOPAKINHE</del>	5-Notice	[chars] drop message with mismatched source interface the binding is not updated message type: [chars] MAC sa: [enet]	DHCP Snooping discovers some host is trying to act as another host\n\ on the network and trying to carry out a DOS attack on that host.	dhcp-snooping	LOG_SID_NO_ACTION
<del>DNOSNOOPAKMAE</del>	5-Notice	[chars] drop message because the chaddr doesn't match source mac message type: [chars] chaddr: [enet] MAC sa: [enet]	DHCP Snooping enables match-source-mac validation and the check is\n\ failed. There maybe a malicious host trying to carry out a DOS\n\ attack on the DHCP server.	dhcp-snooping	LOG_SID_NO_ACTION
<del>DNOSNOOPAKMADR</del>	5-Notice	[chars] drop message with non-zero giaddr or option82 value on untrusted port message type: [chars] MAC sa: [enet]	DHCP Snooping discovers DHCP packet with certain option value not\n\ allowed on the untrusted port some host maybe trying to act as a DHCP\n\ relay or server.	dhcp-snooping	LOG_SID_NO_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DHCPNOCONF@CVID	6-Information	Interface not valid. [dec] bindings ignored.	This message indicates that the given number of bindings from the\n\ndatabase file have been ignored when the file is read. The bindings\n\ are ignored because the interface indicated by the ignored binding\n\ either does not exist in the system or it's a router or dhcp \n\ snooping trusted port.	dhcp-snooping	LOG_SID_NO_ACTION
DHCPNOCONF@LEASEXPRD	6-Information	Lease Expired. [dec] bindings ignored.	This message indicates that the given number of bindings from the\n\ndatabase file have been ignored when the file is read. The bindings\n\ are ignored because their lease has expired.	dhcp-snooping	LOG_SID_NO_ACTION
DHCPNOCONF@PARSEFAILURE	6-Information	Parsing failed for [dec] bindings.	This message indicates that the given number of bindings from the\n\ndatabase file have been ignored when the file is read. The bindings\n\ are ignored because of parsing failures.	dhcp-snooping	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DHCP6VLANCSIPED	6-Information	Vlan not supported. [dec] bindings ignored.	This message indicates that the given number of bindings from the database file have been ignored when the file is read. The bindings are ignored because the vlan indicated by the ignored binding no longer exists in the system.	dhcp-snooping	LOG_SID_NO_ACTION
DHCP-3-HA_INIT_FAIL	3-Error	Function [chars] in DHCP client failed to initialize: [chars]	A high availability related function in the DHCP client failed to initialize properly. If you are using a platform with a redundant processor or box-to-box redundancy DHCP client settings may fail to be preserved if the main processor fails forcing use of the standby.	dhcp	"Please contact the TAC for assistance."
DHCP-5-RESTART	5-Notice	Interface [chars] is being restarted by DHCP	DHCP is restarting the interface.	dhcp	LOG_SID_NO_ACTION
DHCP6ADDRESS_ASSIGN	6-Information	Interface [chars] assigned DHCP address [node]mask [node]hostname [chars]	The interface has been allocated an address via DHCP	-	"This is an informational message. No action is required"
DHCP2MALLOC_ERRCR	2-Critical	There is inadequate memory for DHCP services.	DHCP could not allocate mandatory data structures.	-	"Add more memory."
DHCP2NO_PROCESS	2-Critical	DHCP could not start its [chars] process.	DHCP could not start one of its processes.	-	"Add more memory."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DHCP2READ_DEADLOCK	2-Critical	DHCP has detected a deadlock condition excessive read failures.	The DHCP server could not read bindings from any database agent. All\n\ read attempts have failed. To prevent a possible deadlock the server\n\ has made all pool addresses available for assignment.	-	"Verify that all URLs are correct and connectivity exists between the \n\ server and all database agents. Check for corrupt database files. All\n\ files must contain the *time* and *end* keywords. Execute the command \n\ \"show ip dhcp database.\" If there are aborted file transfers increase \n\ the appropriate timeouts. Restart the DHCP server."
DHCP2RCVMSG_ERROR	2-Critical	Recvmsg failed unexpectedly. DHCP services have been terminated.	Reason for failure is unknown.	dhcp-server	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
DHCP2SOCKET_ERROR	2-Critical	DHCP could not open UDP port [node]	DHCP could not open UDP port 67 bootps.	-	"Check if another application is using UDP port 67. If the port is\n\ available add more memory."
DHCP3HA_INIT_FAIL	3-Error	Function [chars] in DHCP server failed to initialize: [chars]\n	A high availability related function in the DHCP server failed to initialize properly. If you are using a platform with a redundant processor or box-to-box redundancy DHCP server data may fail to be preserved if the main processor fails forcing use of the standby.	dhcp	"Please contact the TAC for assistance."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DHCPD3-NO_AAA_CONTEXT	3-Error	AAA configured but no AAA context in [chars]\n	DHCP is attempting to use AAA to grant a DHCP lease but no AAA context is associated with the binding	dhcp	"Please contact the TAC for assistance."
DHCPD3-READ_ERROR	3-Error	DHCP could not read bindings from [chars].	The DHCP server could not read bindings from the specified database \n\ agent.	-	"Verify that the URL is correct and connectivity exists between the \n\ server and database agent. Check for a corrupt database file. The\n\ file must contain the *time* and *end* keywords. Execute the command \n\ \"show ip dhcp database.\" If there are aborted file transfers increase \n\ the database transfer timeout."
DHCPD3-WRITE_ERROR	3-Error	DHCP could not write bindings to [chars].	The DHCP server could not write bindings to the specified database \n\ agent.	-	"Verify that the URL is correct and connectivity exists between the \n\ server and database agent. Execute the command \"show ip dhcp database.\" \n\ If there are aborted file transfers increase the database transfer \n\ timeout."
DHCPD4-DECLINE_CONFLICT	4-Warning	DHCP address conflict: client [chars] declined [node]	The DHCP client has detected an address conflict. Another host is using\n\ the specified IP address. After resolving the conflict execute the\n\ command \clear ip dhcp conflict.\	-	"Resolve the misconfiguration. Clear the conflict from the DHCP \n\ database."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>DHCP</del> 4-CONFIG_MISMATCH	4-Warning	DHCP pool [chars] configuration on Active is not matched on the Standby.	Reason for failure is unknown.	dhcp	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
<del>DHCP</del> 4-PING_CONFLICT	4-Warning	DHCP address conflict: server pinged [node]	The DHCP server has detected an address conflict. Another host is using\n\ the specified IP address. After resolving the conflict execute the\n\ command \clear ip dhcp conflict.\	-	"Resolve the misconfiguration. Clear the conflict from the DHCP \n\ database."
<del>DHCP</del> 4-RELAY_ONLY	4-Warning	DHCP will run as a relay agent only.	DHCP could not start its database process. The server component has \n\ been disabled. Only the relay agent is active.	-	"Add more memory."
<del>DHCP</del> 6-HIGH_UTIL	6-Information	Pool \[chars]\ is in high utilization state [node]addresses used out of [node] Threshold set at [node]%.	The pool's utilization has exceeded the user configured high watermark.	dhcp	"Examine the DHCP pool and determine if the pool needs more IP addresses" " than currently allocated."
<del>DHCP</del> 6-LOW_UTIL	6-Information	Pool \[chars]\ is in low utilization state [node]addresses used out of [node] Threshold set at [node]%.	The pool's utilization has fallen below the user configured high watermark.	dhcp	"Examine the DHCP pool and determine if the pool needs more IP addresses" " than currently allocated."
<del>DHCP</del> 6-MALFORMED_OPTION	6-Information	Invalid option [dec] message type [dec] received from client [chars]\n	DHCP client sent malformed option.	dhcp	"Check if DHCP client can be configured to send valid option."
<del>DHCP</del> V6C3-NOPACKET	3-Error	Cannot setup or duplicate a socket packet	Most likely a resource problem within the system.	dhcp	<u>LOGS</u> <u>REDUCE</u> <u>ACTION</u>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DHCPV6C-3-NOSOCKET	3-Error	Cannot create DHCPv6 client socket	Most likely no IP enabled on any interface or a resource problem within the system.	dhcp	LOG_SID_REDUCE_ACTION
DHCPV6C-4-ZEROXID	4-Warning	Calculated DHCPv6 Lease Query xid is zero. Nothing is wrong just drop the LQv6 msg	After multiple tries the generated LQv6 msg xid is zero by accident. Just drop the LQv6 msg.	dhcp	LOG_SID_REDUCE_ACTION
DHCPV6C-6-ADDRESS_ASSIGN	6-Information	Interface [chars] assigned DHCPv6 address [node][dec]\n	The interface has been allocated an address via DHCPv6	dhcp	LOG_SID_NO_ACTION
DHCPV6C-3-INVALID_LINK_ADDR	3-Error	Invalid user specified link-address [node] idb [chars] in ipv6 dhcp relay CLI.\n Removing user specified invalid address from the CLI.	Invalid link-address has been provisioned in the ipv6 relay destination CLI.	dhcp	LOG_SID_REDUCE_ACTION
DHCPV6C-3-INVALID_SRC_ADDR	3-Error	Invalid user specified source-address [node] idb [chars] in ipv6 dhcp relay CLI.\n Removing user specified invalid address from the CLI and auto-computing source with SAS.	Invalid source-address has been provisioned in the ipv6 relay destination CLI.	dhcp	LOG_SID_REDUCE_ACTION
DHCPV6S-3-DATABASE_NOT_LOADED	3-Error	Binding database not loaded	Fail to load the DHCPv6 binding database.	dhcp	LOG_STD_ACTION
DHCPV6S-3-DBOPEN	3-Error	Opening [chars]: [chars]	Fail to open a DHCPv6 binding database file.	dhcp	LOG_STD_ACTION
DHCPV6S-3-DBREAD	3-Error	Reading file: [chars]	Fail to read a DHCPv6 binding database file.	dhcp	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DHCPV6S3-DBWRITE	3-Error	Writing file: [chars]	Fail to write a DHCPv6 binding database file.	dhcp	LOG_STD_ACTION
DHCPV6S3-NOCKET	3-Error	Cannot setup or duplicate a DHCPv6 server socket packet	Most likely a resource problem within the system.	dhcp	LOG_STD_ACTION
<del>DIAG3-DBWRITE</del>	3-Error	[chars]: The users are not allow to disable monitoring for Test #[dec]	The specified health monitoring test must be run and cannot be disabled.	gold	"Nothing. The specific health monitoring test cannot be disabled by " "design. The system is working properly."
<del>DIAG3-DBWRITE</del>	3-Error	[chars]: The users are not allow to disable monitoring for Test #[dec]	The specified health monitoring test must be run and cannot be disabled.	gold	"Nothing. The specific health monitoring test cannot be disabled by " "design. The system is working properly."
DIAG3-CARD_ABSENT	3-Error	[chars] is not detected	A line card could not be located in a slot where a diagnostic action was requested.	gold	"Ensure the targeted line card is properly seated in the specified slot. " "If the line card is properly seated ensure the correct slot was " "indicated in the command-line interface. If the line card is well-seated " "and the correct slot was specified copy the error message exactly as it " "appears on the screen as well as the output of show tech-support and " "paste the output into a separate file. Contact your technical support " "representative with the gathered information."

<b>Family-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DIAG-3-CARD_ABSENT	3-Error	[chars] is not detected	A line card could not be located in a slot where a diagnostic action was requested.	gold	"Ensure the targeted line card is properly seated in the specified slot. " "If the line card is properly seated ensure the correct slot was " "indicated in the command-line interface. If the line card is well-seated " "and the correct slot was specified copy the error message exactly as it " "appears on the screen as well as the output of show tech-support and " "paste the output into a separate file. Contact your technical support " "representative with the gathered information."
DIAG-3-CREATE_PROCESS_FAIL	3-Error	Create process [chars] failed	An internal software error occurred.	gold	"Copy the error message exactly as it appears on the screen and gather " "the output of show tech-support and any other relevant information. " "Contact your technical support representative with the gathered " "information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DIAG3-CREATE_PROCESS_FAILED	3-Error	Create process [chars] failed	An internal software error occurred.	gold	"Copy the error message exactly as it appears on the screen and gather " "the output of show tech-support and any other relevant information. " "Contact your technical support representative with the gathered " "information."
DIAG3-DIAG_RUNNING	3-Error	[chars]: Diagnostic is currently running	A diagnostic test is currently being run on the specified card and additional tests cannot be run until the previously requested tests have been completed.	gold	"The system is working properly and no user action is required. If you " "want to run the specified diagnostic test either wait for the current " "diagnostic test to finish and then run the test or stop the current " "test and run the new test."
DIAG3-DIAG_RUNNING	3-Error	[chars]: Diagnostic is currently running	A diagnostic test is currently being run on the specified card and additional tests cannot be run until the previously requested tests have been completed.	gold	"The system is working properly and no user action is required. If you " "want to run the specified diagnostic test either wait for the current " "diagnostic test to finish and then run the test or stop the current " "test and run the new test."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DIAG3-ENQUEUE_FAIL	3-Error	[chars]: process_enqueue failed	An internal software error occurred.	gold	"Copy the error message exactly as it appears on the screen and gather " "the output of show tech-support and any other relevant information. " "Contact your technical support representative with the gathered " "information."
DIAG3-ENQUEUE_FAIL	3-Error	[chars]: process_enqueue failed	An internal software error occurred.	gold	"Copy the error message exactly as it appears on the screen and gather " "the output of show tech-support and any other relevant information. " "Contact your technical support representative with the gathered " "information."
DIAG3-HEALTH_MONITOR_INTERVAL_TEST	3-Error	[chars]: The users are not allow to change monitoring interval of Test #[dec]	The specified health monitoring test interval is not user-configurable and therefore cannot be changed.	gold	"Nothing. The specific health monitoring interval is not user-" "configurable by design so nothing can be done to change the interval."
DIAG3-HEALTH_MONITOR_INTERVAL_TEST	3-Error	[chars]: The users are not allow to change monitoring interval of Test #[dec]	The specified health monitoring test interval is not user-configurable and therefore cannot be changed.	gold	"Nothing. The specific health monitoring interval is not user-" "configurable by design so nothing can be done to change the interval."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DIAG3GET_ARGU_FAIL	3-Error	Get argument failed	An internal software error occurred.	gold	"Copy the error message exactly as it appears on the screen and gather " "the output of show tech-support and any other relevant information. " "Contact your technical support representative with the gathered " "information."
DIAG3GET_ARGU_FAIL	3-Error	Get argument failed	An internal software error occurred.	gold	"Copy the error message exactly as it appears on the screen and gather " "the output of show tech-support and any other relevant information. " "Contact your technical support representative with the gathered " "information."
DIAG3INVALID_DEVICE	3-Error	Invalid device number : [chars]	A diagnostic request is being made on a device that does not exist	gold	"Ensure that the specified device number 1-based exists and is valid"
DIAG3INVALID_DEVICE	3-Error	Invalid device number : [chars]	A diagnostic request is being made on a device that does not exist	gold	"Ensure that the specified device number 1-based exists and is valid"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DIAG3-MONITOR-GENERAL	3-Error	[chars]: The [chars][ID=[dec]] monitoring interval must be at least [node]d millisecc	The specified test monitoring interval is too small.	gold	"The system is working properly and no user action is required. If you " "want to specify a smaller testing interval the error message text " "provides the lowest possible configurable interval for the specified " "monitoring interval."
DIAG3-MONITOR-GENERAL	3-Error	[chars]: The [chars][ID=[dec]] monitoring interval must be at least [node]d millisecc	The specified test monitoring interval is too small.	gold	"The system is working properly and no user action is required. If you " "want to specify a smaller testing interval the error message text " "provides the lowest possible configurable interval for the specified " "monitoring interval."
DIAG3-INVALID_PORT	3-Error	Invalid port number : [chars]	A diagnostic request is being made on a port that does not exist.	gold	"Ensure the specified port number exists and that the correct port number " "is being specified."
DIAG3-INVALID_PORT	3-Error	Invalid port number : [chars]	A diagnostic request is being made on a port that does not exist.	gold	"Ensure the specified port number exists and that the correct port number " "is being specified."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DIAG-3-INVALID_TEST	3-Error	Invalid test: [chars]	A test that does not exist was requested.	gold	"Ensure the specified test is supported by the line card. The " "list of available tests and their associated test IDs can be retrieved " "using show diagnostic content."
DIAG-3-INVALID_TEST	3-Error	Invalid test: [chars]	A test that does not exist was requested.	gold	"Ensure the specified test is supported by the line card. The " "list of available tests and their associated test IDs can be retrieved " "using show diagnostic content."
DIAG-3-MAJOR	3-Error	[chars]: [chars] detected a Major Error. Please use 'show diagnostic result <target>' to see test results.	A major error was detected during diagnostic testing.	gold	"Re-seat the card and retry the test. If the same result occurs after " "reseating the card and retrying the test copy the error message " "exactly as it appears on the screen and gather the output of show " "tech-support and any other relevant information. Contact your " "technical support representative with the gathered information."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DIAG-3-MAJOR	3-Error	[chars]: [chars] detected a Major Error. Please use 'show diagnostic result <target>' to see test results.	A major error was detected during diagnostic testing.	gold	"Re-seat the card and retry the test. If the same result occurs after " "reseating the card and retrying the test copy the error message " "exactly as it appears on the screen and gather the output of show " "tech-support and any other relevant information. Contact your " "technical support representative with the gathered information."
DIAG-3-MINOR	3-Error	[chars]: [chars] detected a Minor Error. Please use 'show diagnostic result <target>' to see test results.	A minor error was detected during diagnostic testing.	gold	"Re-seat the card and retry the test. If the same result occurs after " "reseating the card and retrying the test copy the error message " "exactly as it appears on the screen and gather the output of show " "tech-support and any other relevant information. Contact your " "technical support representative with the gathered information."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DIAG-3-MINOR	3-Error	[chars]: [chars] detected a Minor Error. Please use 'show diagnostic result <target>' to see test results.	A minor error was detected during diagnostic testing.	gold	"Re-seat the card and retry the test. If the same result occurs after " "reseating the card and retrying the test copy the error message " "exactly as it appears on the screen and gather the output of show " "tech-support and any other relevant information. Contact your " "technical support representative with the gathered information."
DAG3MONIOR_DSABLE	3-Error	[chars]: Monitoring test:[dec] is disabled since default interval is zero	The specified test is no longer a health monitoring test because health monitoring has been disabled.	gold	"The system is working properly and no user action is required. If you " "want the requested test to be a health monitoring test enable health " "monitoring and ensure your test is enabled as a health monitoring test."
DAG3MONIOR_DSABLE	3-Error	[chars]: Monitoring test:[dec] is disabled since default interval is zero	The specified test is no longer a health monitoring test because health monitoring has been disabled.	gold	"The system is working properly and no user action is required. If you " "want the requested test to be a health monitoring test enable health " "monitoring and ensure your test is enabled as a health monitoring test."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>DAGMONIC</del> HEALTH_ZRO	3-Error	[chars]: Monitoring interval is 0. Cannot enable monitoring for Test #[dec]	Health Monitoring cannot be enabled for the specified test because the interval for the test has been set to 0.	gold	"If you are comfortable not running the specified health monitoring test " "nothing. If you would like to enable the specified test for health " "monitoring reset the interval to a number other than 0."
<del>DAGMONIC</del> HEALTH_ZRO	3-Error	[chars]: Monitoring interval is 0. Cannot enable monitoring for Test #[dec]	Health Monitoring cannot be enabled for the specified test because the interval for the test has been set to 0.	gold	"If you are comfortable not running the specified health monitoring test " "nothing. If you would like to enable the specified test for health " "monitoring reset the interval to a number other than 0."
<del>DAGNO</del> DAGRUNNG	3-Error	[chars]: Diagnostic is not running	An attempt to stop a diagnostic test that was not running was made.	gold	"None. This is an informational message."
<del>DAGNO</del> DAGRUNNG	3-Error	[chars]: Diagnostic is not running	An attempt to stop a diagnostic test that was not running was made.	gold	"None. This is an informational message."
<del>DAGNO</del> MONICNG_TEST	3-Error	[chars]: The test:[dec] cannot be used as health monitoring test	The specified test number cannot be used as a health monitoring test.	gold	"Nothing. The system is working properly and the specified test cannot " "be configured as a health monitoring test."
<del>DAGNO</del> MONICNG_TEST	3-Error	[chars]: The test:[dec] cannot be used as health monitoring test	The specified test number cannot be used as a health monitoring test.	gold	"Nothing. The system is working properly and the specified test cannot " "be configured as a health monitoring test."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DIAG3SET_ARGU_FAIL	3-Error	Set argument failed	An internal software error occurred.	gold	"Copy the error message exactly as it appears on the screen and gather " "the output of show tech-support and any other relevant information. " "Contact your technical support representative with the gathered " "information."
DIAG3SET_ARGU_FAIL	3-Error	Set argument failed	An internal software error occurred.	gold	"Copy the error message exactly as it appears on the screen and gather " "the output of show tech-support and any other relevant information. " "Contact your technical support representative with the gathered " "information."
DIAG-3-TEST_FAIL	3-Error	[chars]: [chars]{ID=[dec]} has failed. Error code = 0x[hec] [chars]	A diagnostic test has found an error on the line card.	gold	"Ensure the line card is firmly in the slot reseat if necessary and " "attempt to run the test again if the line card is not seated properly " "in the slot. If the line card was properly seated in the slot copy the " "error message exactly as it appears on the console gather the output " "of show tech-support and contact your Cisco technical support " "representative with the gathered information."

Family-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DIAG-3-TEST_FAIL	3-Error	[chars]: [chars]{ID=[dec]} has failed. Error code = 0x[hec] [chars]	A diagnostic test has found an error on the line card.	gold	"Ensure the line card is firmly in the slot reset if necessary and " "attempt to run the test again if the line card is not seated properly " "in the slot. If the line card was properly seated in the slot copy the " "error message exactly as it appears on the console gather the output " "of show tech-support and contact your Cisco technical support " "representative with the gathered information."
DIAG-3-TEST_NOT_SUPPORTED	3-Error	[chars]: [chars]{ID=[dec]} is not supported	The diagnostic test is not supported on current chassis configuration.	gold	"Nothing. The test cannot be run but this message does not indicate a " "problem with the system."
DIAG-3-TEST_NOT_SUPPORTED	3-Error	[chars]: [chars]{ID=[dec]} is not supported	The diagnostic test is not supported on current chassis configuration.	gold	"Nothing. The test cannot be run but this message does not indicate a " "problem with the system."
DIAG-3-TEST_SKIPPED	3-Error	[chars]: [chars]{ID=[dec]} is skipped	The specified diagnostic test cannot be run.	gold	"Nothing. Although the test cannot be run this message does not indicate " "a problem."
DIAG-3-TEST_SKIPPED	3-Error	[chars]: [chars]{ID=[dec]} is skipped	The specified diagnostic test cannot be run.	gold	"Nothing. Although the test cannot be run this message does not indicate " "a problem."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DIAGUNKNOWN_OPCODE	3-Error	[chars]: Unknown opcode [node] is received	An internal software error occurred.	gold	"Copy the error message exactly as it appears on the screen and gather " "the output of show tech-support and any other relevant information. " "Contact your technical support representative with the gathered " "information."
DIAGUNKNOWN_OPCODE	3-Error	[chars]: Unknown opcode [node] is received	An internal software error occurred.	gold	"Copy the error message exactly as it appears on the screen and gather " "the output of show tech-support and any other relevant information. " "Contact your technical support representative with the gathered " "information."
DIAG4CONFIG_REAPPLY	4-Warning	Please reapply config command '[chars]' after the card is online.	The specified config command cannot be applied.	gold	"The system is working properly and the specified command cannot" "be applied. Please reapply the config command after the module" "is online."
DIAG4CONFIG_REAPPLY	4-Warning	Please reapply config command '[chars]' after the card is online.	The specified config command cannot be applied.	gold	"The system is working properly and the specified command cannot" "be applied. Please reapply the config command after the module" "is online."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DIAG-6-BYPASS	6-Information	[chars]: Diagnostics is bypassed	This is an informational message stating that diagnostics testing was not performed on the card because diagnostic testing was disabled in the user configuration.	gold	"This behavior is consistent with the user configuration and no action " "needs to be taken. If you want to run bootup diagnostics enable bootup" " diagnostics by using the diagnostic bootup command."
DIAG-6-BYPASS	6-Information	[chars]: Diagnostics is bypassed	This is an informational message stating that diagnostics testing was not performed on the card because diagnostic testing was disabled in the user configuration.	gold	"This behavior is consistent with the user configuration and no action " "needs to be taken. If you want to run bootup diagnostics enable bootup" " diagnostics by using the diagnostic bootup command."
DIAG-6-DIAG_OK	6-Information	[chars]: Passed [chars]	The diagnostic tests did not detect any error on the card.	gold	"Nothing. This is an informational message stating that the line card " "passed the diagnostic tests."
DIAG-6-DIAG_OK	6-Information	[chars]: Passed [chars]	The diagnostic tests did not detect any error on the card.	gold	"Nothing. This is an informational message stating that the line card " "passed the diagnostic tests."
DIAG6DIAG_STOPPED	6-Information	[chars]: Diagnostic is stopped.	Diagnostic test has stopped.	gold	"Nothing. This is an informational message stating that diagnostic " "testing has been stopped. If you want the test to run to completion " "rerun the test."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DIAG-6-DIAG_STOPPED	6-Information	[chars]: Diagnostic is stopped.	Diagnostic test has stopped.	gold	"Nothing. This is an informational message stating that diagnostic " "testing has been stopped. If you want the test to run to completion " "rerun the test."
DIAG-6-NO_TEST	6-Information	[chars]: No test to run	The diagnostic test cannot find tests to run.	gold	"In some cases on some platforms a Field Diagnostic image needs to be " "loaded onto the line card if you want to run the test. If applicable " "download a Field Diagnostic image onto the line card. In other cases " "the test is simply not available. This message is an informational and " "does not require user action."
DIAG-6-NO_TEST	6-Information	[chars]: No test to run	The diagnostic test cannot find tests to run.	gold	"In some cases on some platforms a Field Diagnostic image needs to be " "loaded onto the line card if you want to run the test. If applicable " "download a Field Diagnostic image onto the line card. In other cases " "the test is simply not available. This message is an informational and " "does not require user action."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DIAG6RUN_COMPLETE	6-Information	[chars]: Running Complete Diagnostics...	Complete Diagnostic is running on the card	gold	"Nothing. This is an informational message and the system is working " "properly."
DIAG6RUN_COMPLETE	6-Information	[chars]: Running Complete Diagnostics...	Complete Diagnostic is running on the card	gold	"Nothing. This is an informational message and the system is working " "properly."
DIAG6RUN_MINIMUM	6-Information	[chars]: Running Minimal Diagnostics...	Minimum Diagnostic is running on the card	gold	"Nothing. This is an informational message and the system is working " "properly."
DIAG6RUN_MINIMUM	6-Information	[chars]: Running Minimal Diagnostics...	Minimum Diagnostic is running on the card	gold	"Nothing. This is an informational message and the system is working " "properly."
DIAG6SCHED_COMPLETE	6-Information	[chars]: Scheduled Online Diagnostic is completed	The scheduled Diagnostic test is complete.	gold	"Check the results and proceed accordingly. This is an information " "message only to indicate that Diagnostic testing is complete. The router " "is working properly and no action is needed based on this message."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DIAG6SCHED_COMPLETE	6-Information	[chars]: Scheduled Online Diagnostic is completed	The scheduled Diagnostic test is complete.	gold	"Check the results and proceed accordingly. This is an information " "message only to indicate that Diagnostic testing is complete. The router " "is working properly and no action is needed based on this message."
DIAG6SCHED_RUNNING	6-Information	[chars]: Performing Scheduled Online Diagnostic...	The scheduled diagnostic test is running.	gold	"Nothing. The diagnostic test is being run as configured and the system " "is working properly."
DIAG6SCHED_RUNNING	6-Information	[chars]: Performing Scheduled Online Diagnostic...	The scheduled diagnostic test is running.	gold	"Nothing. The diagnostic test is being run as configured and the system " "is working properly."
DIAG6SCHED_STOPPED	6-Information	[chars]: Scheduled Online Diagnostic is stopped	The scheduled Diagnostic test has been stopped.	gold	"If you do not want the test to run nothing. If you want the test to " "run schedule the test or run the test manually."
DIAG6SCHED_STOPPED	6-Information	[chars]: Scheduled Online Diagnostic is stopped	The scheduled Diagnostic test has been stopped.	gold	"If you do not want the test to run nothing. If you want the test to " "run schedule the test or run the test manually."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>DAGCHDUE</del> REMOVED	6-Information	[chars]: Schedule Diagnostic for [[chars] [chars] [node]d:[node]ld.] is removed	The scheduled online diagnostic tests are no longer configured. This message usually appears after a scheduled test is removed by the user or a card is removed from the chassis.	gold	"If you want the scheduling tests to be removed nothing. If you want " "the scheduled tests to still be run reconfigure the scheduled tests."
<del>DAGCHDUE</del> REMOVED	6-Information	[chars]: Schedule Diagnostic for [[chars] [chars] [node]d:[node]ld.] is removed	The scheduled online diagnostic tests are no longer configured. This message usually appears after a scheduled test is removed by the user or a card is removed from the chassis.	gold	"If you want the scheduling tests to be removed nothing. If you want " "the scheduled tests to still be run reconfigure the scheduled tests."
<del>DAGMLAED</del> TESTRESULT	6-Information	[chars]: [chars] test result is simulated.	The specified test's result is simulated. The failure does not indicate software nor hardware fault	gold	"Nothing. The test failure is simulated as specified by the user."
<del>DAGMLAED</del> TESTRESULT	6-Information	[chars]: [chars] test result is simulated.	The specified test's result is simulated. The failure does not indicate software nor hardware fault	gold	"Nothing. The test failure is simulated as specified by the user."
<del>DAGRDND</del> ACTIVEDEVIS	6-Information	[chars]: [chars] cannot be executed for active device.	The specified test can only be run from the active supervisor to test standby supervisor.	gold	"Nothing. The test cannot be run but the system is working properly."
<del>DAGRDND</del> ACTIVEDEVIS	6-Information	[chars]: [chars] cannot be executed for active device.	The specified test can only be run from the active supervisor to test standby supervisor.	gold	"Nothing. The test cannot be run but the system is working properly."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>DIAG6TEST_RUNNING</del>	6-Information	[chars]: [chars] cannot be executed.	The specified test can only be run on a standby supervisor from the standby supervisor.	gold	"Nothing. The test cannot be run but the system is working properly."
<del>DIAG6TEST_RUNNING</del>	6-Information	[chars]: [chars] cannot be executed.	The specified test can only be run on a standby supervisor from the standby supervisor.	gold	"Nothing. The test cannot be run but the system is working properly."
DIAG-6-TEST_OK	6-Information	[chars]: [chars]{ID=[dec]} has completed successfully	Diagnostic testing was completed and no errors were found on the line card.	gold	"This is an informational message indicating that Field Diagnostic " "testing has completed successfully. The system is working properly and " "no action is required based on this error message."
DIAG-6-TEST_OK	6-Information	[chars]: [chars]{ID=[dec]} has completed successfully	Diagnostic testing was completed and no errors were found on the line card.	gold	"This is an informational message indicating that Field Diagnostic " "testing has completed successfully. The system is working properly and " "no action is required based on this error message."
DIAG6TEST_RUNNING	6-Information	[chars]: Running [chars]{ID=[dec]} ...	Diagnostic testing is running a test on the card	gold	"Nothing. This is an informational message and the system should be " "working properly."
DIAG6TEST_RUNNING	6-Information	[chars]: Running [chars]{ID=[dec]} ...	Diagnostic testing is running a test on the card	gold	"Nothing. This is an informational message and the system should be " "working properly."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DGGSISKIPFROMACME	6-Information	[chars]: [chars] cannot be executed from active supervisor.	The specified test cannot be run from active supervisor.	gold	"Nothing. The test cannot be run but the system is working properly."
DGGSISKIPFROMACME	6-Information	[chars]: [chars] cannot be executed from active supervisor.	The specified test cannot be run from active supervisor.	gold	"Nothing. The test cannot be run but the system is working properly."
DIERRIPXALCPKME	3-Error	alloc pak failed	alloc pak failed.	cpp-ucode	LOG_STD_ACTION
DIERRIPXRCPLAD	3-Error	[chars] failed to send ipc rc: %u	send ipc failed.	cpp-ucode	LOG_STD_ACTION
DIERRIPXRCPLAD	3-Error	[dec]	IPC handler initialization failed.	cpp-ucode	LOG_STD_ACTION
DIERRIPXRCPLAD	3-Error	IPC subtype: [dec]	add more memory failed.	cpp-ucode	LOG_STD_ACTION
DIERRIPXRCPLAD	4-Warning	[hec]	Received an invalid IPC messages subtype.	cpp-ucode	LOG_STD_ACTION
DIERRIPXRCPLAD	4-Warning	[dec]:[dec] len [dec] flags 0x[hec] source [dec]	Invalid IPC message length.	cpp-ucode	LOG_STD_ACTION
DIERRCHUNKCREAL	3-Error	DIALER LIST - failed to create chunk pool	Chunk create failed. Dialer List will not be able to finish initialization.	cpp-ucode	LOG_STD_ACTION
DIERRCHUNKDESTROY	3-Error	DIALER LIST - failed to destroy chunk pool	Chunk destroy failed.	cpp-ucode	LOG_STD_ACTION
DIALER2CIRCUICOUNT	2-Critical	Dialer count 0 on [chars]	An internal software error occurred.	-	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DIALER-2-NOSWIDB	2-Critical	No software interface associated with hw interface [chars]	An internal software error occurred.	-	"Call your technical support representative and report the error\n\n message the system version and the router configuration. Use the\n\n show version command to obtain the software version."
DIALER-2-NULLPTR	2-Critical	Unexpected null pointer in [chars]	An internal software error occurred.	-	LOG_SID_SH_TECH_ACTION
DIALER-3-SBINIT	3-Error	Error initializing [chars] subblock data structure. [chars]	Initialization of the specified subblock data structure could not be accomplished.	-	LOG_STD_ACTION
DIALER4MIU_WARNING	4-Warning	Current MTU setting of [dec] on [chars] is being overwritten by setting of [dec] defined by [chars].	This is a warning message indicating that an interface setting is changed based on a dialer rotary group membership.	-	LOG_SID_NO_ACTION
DIALER-6-BIND	6-Information	Interface [chars] bound to profile [chars]	This is a status message indicating that a dialer interface has\n\n been bound to a dialer profile.	-	LOG_SID_NO_ACTION
DIALER-6-UNBIND	6-Information	Interface [chars] unbound from profile [chars]	This is a status message indicating that a dialer interface has\n\n been unbound to a dialer profile.	-	LOG_SID_NO_ACTION
<del>DIALER-3-DIALPEERS</del>	3-Error	Addition of dial-peers limited by available memory\n	The available memory does not permit the addition of more dial-peers.	ios-voice	"Increase the processor memory in order to be able to add more\n\n dialpeers."
<del>DIALER-3-DIALPEERS</del>	3-Error	Addition of dial-peers limited by available memory\n	The available memory does not permit the addition of more dial-peers.	ios-voice	"Increase the processor memory in order to be able to add more\n\n dialpeers."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>DAIHR_DB</del> DAIHR_PACVIMT	3-Error	Addition of dial-peers limited by platform\n	This platform does not permit the addition of more dial-peers.	ios-voice	"Reduce the number of dial-peers in your numbering plan."
<del>DAIHR_DB</del> DAIHR_PACVIMT	3-Error	Addition of dial-peers limited by platform\n	This platform does not permit the addition of more dial-peers.	ios-voice	"Reduce the number of dial-peers in your numbering plan."
<del>DAIHR_DB</del> DAIHR_ACONING	3-Error	Connections for dial-peer [dec] is negative. Resetting connections to 0.\n	Active Connections for dial-peer is negative.	ios-voice	"Verify if dial-peers were removed with active calls associated to them\n\n and added back while the calls were still connected."
<del>DAIHR_DB</del> DAIHR_ACONING	3-Error	Connections for dial-peer [dec] is negative. Resetting connections to 0.\n	Active Connections for dial-peer is negative.	ios-voice	"Verify if dial-peers were removed with active calls associated to them\n\n and added back while the calls were still connected."
<del>DAIHR_DB</del> DAIHR_PMAICCFAL	3-Error	Could not allocate memory in [chars] for tag [dec]\n	Ran out of memory	voice-dialpeer	"Observe why memory is exhausted"
<del>DAIHR_DB</del> DAIHR_PMAICCFAL	3-Error	Could not allocate memory in [chars] for tag [dec]\n	Ran out of memory	voice-dialpeer	"Observe why memory is exhausted"
<del>DAIHR_DB</del> DAIHR_NCEMAP	3-Error	Could not load e164-pattern-map [dec]\n url=[chars]\n errno=[dec]=[chars]	Could not read in the e164-pattern-map	voice-dialpeer	"Check that map exists on the server and is readable."
<del>DAIHR_DB</del> DAIHR_NCEMAP	3-Error	Could not load e164-pattern-map [dec]\n url=[chars]\n errno=[dec]=[chars]	Could not read in the e164-pattern-map	voice-dialpeer	"Check that map exists on the server and is readable."
<del>DAIHR_DB</del> DAIHR_NCEURL	3-Error	Could not load e164-translation [dec]\n url=[chars]\n error=[chars][dec]	Could not get the voice class e164-translation url data file	voice-dialpeer	"Check that url data file exists on the server and is readable."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>DIALPEER_DB3ERRURL</del>	3-Error	Could not load e164-translation [dec]\n url=[chars]\n error=[chars][dec]	Could not get the voice class e164-translation url data file	voice-dialpeer	"Check that url data file exists on the server and is readable."
DIALPEER_DB3NOMAP	3-Error	Could not load dn timer-map [chars]\n url=[chars]\n errno=[dec]=[chars]	Could not read in the dn timer-map	ios-voice	"Check that map exists on the server and is readable."
DIALPEER_DB3NOMAP	3-Error	Could not load dn timer-map [chars]\n url=[chars]\n errno=[dec]=[chars]	Could not read in the dn timer-map	ios-voice	"Check that map exists on the server and is readable."
<del>DIALPEER_DB3ERRWRNG</del>	6-Information	Addition of too many dial-peers may affect performance\n	The number of dial-peers is high. This will have an effect on the\n\n dial-peer lookup time resulting in longer call setup time.	ios-voice	"Use the minimum number of dial-peers necessary for your numbering plan."
<del>DIALPEER_DB3ERRWRNG</del>	6-Information	Addition of too many dial-peers may affect performance\n	The number of dial-peers is high. This will have an effect on the\n\n dial-peer lookup time resulting in longer call setup time.	ios-voice	"Use the minimum number of dial-peers necessary for your numbering plan."
<del>DIALPEER_DB3ERRNOCIRAD</del>	6-Information	Could not create probe for tag [dec]\n	Fallback cache full	voice-dialpeer	"Increase Fallback cache size"
<del>DIALPEER_DB3ERRNOCIRAD</del>	6-Information	Could not create probe for tag [dec]\n	Fallback cache full	voice-dialpeer	"Increase Fallback cache size"
DIALSHELF2DSCDOWN	2-Critical	DSC in slot [dec] changes state to down.	DSC in dial shelf went down.	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DIALSHELF-2-TIMEOUT	2-Critical	[chars] slot [dec] after [dec] secs in state '[chars]'	The specified dial shelf slot timed out as per the message.\n\n Either a software or a hardware component has failed.	-	"Try removing and reinserting the card. If that does not help\n\n try a different card. If problem persists contact your\n\n technical support representative."
DIALSHELF-2-UNDFCARD	2-Critical	Card type [dec] in slot [dec]	The software does not have a driver for the card in specified\n\n slot.	-	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
DIALSHELF-3-EVENT	3-Error	Unknown event [dec] for slot [dec]	The software generated an unknown event for the specified\n\n slot. This is a software error.	-	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
DIALSHELF-3-INVALIDMSG	3-Error	[chars] [dec]	The router shelf received an invalid message from the DSC in\n\n the dial shelf. This is a software error or compatibility issue.\n\n Check the software versions on the router shelf and the DSC.	-	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
DIALSHELF-3-MSG	3-Error	Unknown message type [dec] from DSC	The router shelf received an unknown message from the DSC in\n\n the dial shelf. This is a software error or compatibility issue.\n\n Check the software versions on the router shelf and the DSC.	-	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DIALSHELF3-SLOISTATUS	3-Error	Invalid change from [chars] [dec] to [chars] [dec] for slot [dec]	The software detected an invalid state change for the specified\n\ slot. This is a software error.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
DIALSHELF4-NRCOMMEND	4-Warning	Number of [chars] may exceed recommended configuration	On NPE200 more than one CT3 or more than two T1/E1 are installed\n\ this exceeds the recommended configuration.	-	"Stay within recommended limit of CT3/T1/E1 or install split\n\ dial-shelf configuration or upgrade router-shelf to NPE300."
DIALSHELF6-RELOAD	6-Information	Reload requested for card in shelf [dec] slot [dec].	The command \hw-module slot <shelf>/<slot> reload\ was entered.\n\ This is a confirmation that the command is being processed.	-	"None"
DIGISIGN2-MISMATCHKEYS	2-Critical	[node]har]RITICAL: System identified a mismatch between the show version output and the key type used in signing. [chars] is a signed [chars] software\n	System identified a mismatch in software type. This might be a modified software.	digi-sign-infra	"Do not use this file. The file might be corrupted or modified." "Open a case with the Technical Assistance Center via the " "Internet at " " <a href="http://www.cisco.com/techassist">http://www.cisco.com/techassist</a> " "and contact your Cisco technical support representative with the " "image and version information you have gathered."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DIGNSIGNMISMATCH_KEYS	2-Critical	[node]har]RITICAL: System identified a mismatch between the show version output and the key type used in signing. [chars] is a signed [chars] software\n	System identified a mismatch in software type. This might be a modified software.	digi-sign-infra	"Do not use this file. The file might be corrupted or modified." "Open a case with the Technical Assistance Center via the " "Internet at " " <a href="http://www.cisco.com">http://www.cisco.com</a> " "and contact your Cisco technical support representative with the " "image and version information you have gathered."
DIGNSIGNMISMATCH_KEYS	2-Critical	[node]har]RITICAL: System identified a mismatch between the show version output and the key type used in signing. [chars] is a signed [chars] software\n	System identified a mismatch in software type. This might be a modified software.	digi-sign-infra	"Do not use this file. The file might be corrupted or modified." "Open a case with the Technical Assistance Center via the " "Internet at " " <a href="http://www.cisco.com">http://www.cisco.com</a> " "and contact your Cisco technical support representative with the " "image and version information you have gathered."
DIGNSIGNMISMATCH_KEYS	3-Error	Cannot verify [chars] as it is signed with special key\n	The software image cannot be verified because it is signed with a special key.	digi-sign-infra	"To allow booting a specially-signed image use the" "software authenticity special command"
DIGNSIGNMISMATCH_KEYS	3-Error	Cannot verify [chars] as it is signed with special key\n	The software image cannot be verified because it is signed with a special key.	digi-sign-infra	"To allow booting a specially-signed image use the" "software authenticity special command"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DIGI-SIGN-INFRA	3-Error	Cannot verify [chars] as it is signed with special key\n	The software image cannot be verified because it is signed with a special key.	digi-sign-infra	"To allow booting a specially-signed image use the "software authenticity special command"
DIGI-SIGN-INFRA	3-Error	[node]net]RROR: Failure in processing signature envelope for system image: [chars]\n	The loaded Cisco IOS software image has an invalid digital signature envelope. A valid digital signature envelope ensures the integrity of the image. The loaded Cisco IOS software image might be corrupted or modified. The failure type is one of the following: 1 Signature envelope version is not supported	digi-sign-infra	"Do not use this file. The file might be corrupted or modified." "Please attempt to copy the file again or download the file again " "from the <a href="http://www.cisco.com">http://www.cisco.com</a> page before copying it." "If you continue to get this error message open a case with" "the Technical Assistance Center via the Internet at " <a href="http://www.cisco.com">http://www.cisco.com</a> and " "contact your Cisco technical support representative with the " "image and version information you have gathered."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DIGI-INVALID-ENVELOPE	3-Error	[node]net]RROR: Failure in processing signature envelope for system image: [chars]\n	The loaded Cisco IOS software image has an invalid digital signature envelope. A valid digital signature envelope ensures the integrity of the image. The loaded Cisco IOS software image might be corrupted or modified. The failure type is one of the following: 1 Signature envelope version is not supported	digi-sign-infra	"Do not use this file. The file might be corrupted or modified." "Please attempt to copy the file again or download the file again " "from the http://www.cisco.com page before copying it." "If you continue to get this error message open a case with" "the Technical Assistance Center via the Internet at " <a href="http://www.cisco.com">http://www.cisco.com</a> and " "contact your Cisco technical support representative with the " "image and version information you have gathered."
DIGI-INVALID-ENVELOPE	3-Error	[node]net]RROR: Failure in processing signature envelope for system image: [chars]\n	The loaded Cisco IOS software image has an invalid digital signature envelope. A valid digital signature envelope ensures the integrity of the image. The loaded Cisco IOS software image might be corrupted or modified. The failure type is one of the following: 1 Signature envelope version is not supported	digi-sign-infra	"Do not use this file. The file might be corrupted or modified." "Please attempt to copy the file again or download the file again " "from the http://www.cisco.com page before copying it." "If you continue to get this error message open a case with" "the Technical Assistance Center via the Internet at " <a href="http://www.cisco.com">http://www.cisco.com</a> and " "contact your Cisco technical support representative with the " "image and version information you have gathered."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DIGI-NVDSGNAURE	3-Error	[node]net]RROR: Digital signature is not valid for file [chars]: [chars]\n	The specified Cisco IOS Software image has an invalid digital signature. A valid digital signature ensures the integrity of the image.	digi-sign-infra	"Do not use this file. The file might be corrupted or " "modified. Please attempt to copy the file again or download " "the file again from the <a href="http://www.cisco.com">http://www.cisco.com</a> page before " "copying it. If you continue to get this error message " "open a case with the Technical Assistance Center via the " "Internet at " <a href="http://www.cisco.com/techcenter">http://www.cisco.com/techcenter</a> " "and contact your Cisco technical support representative with the " "information you have gathered."
DIGI-NVDSGNAURE	3-Error	[node]net]RROR: Digital signature is not valid for file [chars]: [chars]\n	The specified Cisco IOS Software image has an invalid digital signature. A valid digital signature ensures the integrity of the image.	digi-sign-infra	"Do not use this file. The file might be corrupted or " "modified. Please attempt to copy the file again or download " "the file again from the <a href="http://www.cisco.com">http://www.cisco.com</a> page before " "copying it. If you continue to get this error message " "open a case with the Technical Assistance Center via the " "Internet at " <a href="http://www.cisco.com/techcenter">http://www.cisco.com/techcenter</a> " "and contact your Cisco technical support representative with the " "information you have gathered."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DIGNINVALIDSIGNATURE	3-Error	[node]net]RROR: Digital signature is not valid for file [chars]: [chars]\n	The specified Cisco IOS Software image has an invalid digital signature. A valid digital signature ensures the integrity of the image.	digi-sign-infra	"Do not use this file. The file might be corrupted or " "modified. Please attempt to copy the file again or download " "the file again from the http://www.cisco.com page before " "copying it. If you continue to get this error message " "open a case with the Technical Assistance Center via the " "Internet at " "http://www.cisco.com/techassist" " "and contact your Cisco technical support representative with the " "information you have gathered."
DIGNNOKEYFOUND	3-Error	[node]net]RROR: No keys found for verifying the digital signature in file [chars]	No keys found in the device key storage for validating the digital signature. A valid key is needed to validate the digital signature in the image.	digi-sign-infra	"The device does not have a vlaid key to verify the digital" "signature. Open a case with the Technical Assistance Center" "via the internet at " "http://www.cisco.com/techassist" " "and contact your Cisco technical support representative with the " "information you have gathered."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DIGSIG3-KEY_NOT_FOUND	3-Error	[node]net]RROR: No keys found for verifying the digital signature in file [chars]	No keys found in the device key storage for validating the digital signature. A valid key is needed to validate the digital signature in the image.	digi-sign-infra	"The device does not have a vlaid key to verify the digital" "signature. Open a case with the Technical Assistance Center" "via the internet at" <a href="http://www.cisco.com/techcenter">http://www.cisco.com/techcenter</a> " "and contact your Cisco technical support representative with the " "information you have gathered."
DIGSIG3-KEY_NOT_FOUND	3-Error	[node]net]RROR: No keys found for verifying the digital signature in file [chars]	No keys found in the device key storage for validating the digital signature. A valid key is needed to validate the digital signature in the image.	digi-sign-infra	"The device does not have a vlaid key to verify the digital" "signature. Open a case with the Technical Assistance Center" "via the internet at" <a href="http://www.cisco.com/techcenter">http://www.cisco.com/techcenter</a> " "and contact your Cisco technical support representative with the " "information you have gathered."
DIGISIGN-3-NET_BOOT	3-Error	Netbooted software used for key revocation\n	System was netbooted using a software in a remote device. It is recommended to boot the system using a software in the local device for the key revocation process.	digi-sign-infra	"Please copy the software to local device. Reboot " "the system with the copied software and retry the key revocation."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DIGSIGN3-NET_BOOT	3-Error	Netbooted software used for key revocation\n	System was netbooted using a software in a remote device. It is recommended to boot the system using a software in the local device for the key revocation process.	digi-sign-infra	"Please copy the software to local device. Reboot " "the system with the copied software and retry the key revocation."
DIGSIGN3-NET_BOOT	3-Error	Netbooted software used for key revocation\n	System was netbooted using a software in a remote device. It is recommended to boot the system using a software in the local device for the key revocation process.	digi-sign-infra	"Please copy the software to local device. Reboot " "the system with the copied software and retry the key revocation."
DIGSIGN3-OBSOLETE_SW	3-Error	[chars] software signed using obsolete key [chars]\n	System identified that a software was signed using an obsolete key. Key revocation cannot be possible when the system is still using a software signed using an obsolete key.	digi-sign-infra	"Please obtain the latest signed copy of this " "software from cisco.com and upgrade the system module."
DIGSIGN3-OBSOLETE_SW	3-Error	[chars] software signed using obsolete key [chars]\n	System identified that a software was signed using an obsolete key. Key revocation cannot be possible when the system is still using a software signed using an obsolete key.	digi-sign-infra	"Please obtain the latest signed copy of this " "software from cisco.com and upgrade the system module."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DGSGN3OBSOLETE_SW	3-Error	[chars] software signed using obsolete key [chars]\n	System identified that a software was signed using an obsolete key. Key revocation cannot be possible when the system is still using a software signed using an obsolete key.	digi-sign-infra	"Please obtain the latest signed copy of this " "software from cisco.com and upgrade the system module."
DGSGN3ERRCANNOT_VALIDATE	3-Error	[node]net]RROR: Digital signature verification failed for file [chars]: [chars]\n	Validation failure while verifying the digital signature.	digi-sign-infra	"Do not use this file. The file might be corrupted or " "modified. Please attempt to copy the file again or download " "the file again from the <a href="http://www.cisco.com">http://www.cisco.com</a> page before " "copying it. If you continue to get this error message " "open a case with the Technical Assistance Center via the " "Internet at " " <a href="http://www.cisco.com">http://www.cisco.com</a> " "and contact your Cisco technical support representative with the " "information you have gathered."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DIGI-SIGN-FAIL	3-Error	[node]net]RROR: Digital signature verification failed for file [chars]: [chars]\n	Validation failure while verifying the digital signature.	digi-sign-infra	"Do not use this file. The file might be corrupted or " "modified. Please attempt to copy the file again or download " "the file again from the http://www.cisco.com page before " "copying it. If you continue to get this error message " "open a case with the Technical Assistance Center via the " "Internet at " "http://www.cisco.com/ " "and contact your Cisco technical support representative with the " "information you have gathered."
DIGI-SIGN-FAIL	3-Error	[node]net]RROR: Digital signature verification failed for file [chars]: [chars]\n	Validation failure while verifying the digital signature.	digi-sign-infra	"Do not use this file. The file might be corrupted or " "modified. Please attempt to copy the file again or download " "the file again from the http://www.cisco.com page before " "copying it. If you continue to get this error message " "open a case with the Technical Assistance Center via the " "Internet at " "http://www.cisco.com/ " "and contact your Cisco technical support representative with the " "information you have gathered."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DIGISIGN-3-WPG_BOOT	3-Error	Key revocation not allowed while running warm upgraded software\n	System was booted using warm upgrade. Key revocation process is not supported when the system is booted using warm upgrade. It is recommended to cold boot the system using a software in the local device for the key revocation process.	digi-sign-infra	"Please copy the software to local device. Reboot " "the system with the copied software and retry the key revocation."
DIGISIGN-3-WPG_BOOT	3-Error	Key revocation not allowed while running warm upgraded software\n	System was booted using warm upgrade. Key revocation process is not supported when the system is booted using warm upgrade. It is recommended to cold boot the system using a software in the local device for the key revocation process.	digi-sign-infra	"Please copy the software to local device. Reboot " "the system with the copied software and retry the key revocation."
DIGISIGN-3-WPG_BOOT	3-Error	Key revocation not allowed while running warm upgraded software\n	System was booted using warm upgrade. Key revocation process is not supported when the system is booted using warm upgrade. It is recommended to cold boot the system using a software in the local device for the key revocation process.	digi-sign-infra	"Please copy the software to local device. Reboot " "the system with the copied software and retry the key revocation."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DIGSIGN4DEV_IMAGE	4-Warning	[chars] software signed using special key version [chars]\n	System identified that a software was signed using special key. If this is unintentional please obtain the latest signed copy of the production software from cisco.com and upgrade the system module.	digi-sign-infra	"Get the latest signed copy of production image from cisco.com and upgrade " "the respective module"
DIGSIGN4DEV_IMAGE	4-Warning	[chars] software signed using special key version [chars]\n	System identified that a software was signed using special key. If this is unintentional please obtain the latest signed copy of the production software from cisco.com and upgrade the system module.	digi-sign-infra	"Get the latest signed copy of production image from cisco.com and upgrade " "the respective module"
DIGSIGN4DEV_IMAGE	4-Warning	[chars] software signed using special key version [chars]\n	System identified that a software was signed using special key. If this is unintentional please obtain the latest signed copy of the production software from cisco.com and upgrade the system module.	digi-sign-infra	"Get the latest signed copy of production image from cisco.com and upgrade " "the respective module"
DIGSIGN4DEV_IMAGE	4-Warning	-	-	-	-
<del>NOIMAGECFG</del>	4-Warning	[chars] signed with special key will not be booted\n	With this configuration enabled the system will be unable to boot software that is signed with a special key.	digi-sign-infra	"Use the [no] form of this configuration no software authenticity special"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>DIGISIGN4FUR_BOOT</del>	4-Warning	[chars] signed with special key will not be booted\n	With this configuration enabled the system will be unable to boot software that is signed with a special key.	digi-sign-infra	"Use the [no] form of this configuration no software authenticity special"
<del>DIGISIGN4FUR_BOOT</del>	4-Warning	[chars] signed with special key will not be booted\n	With this configuration enabled the system will be unable to boot software that is signed with a special key.	digi-sign-infra	"Use the [no] form of this configuration no software authenticity special"
DIGISIGN4FUR_BOOT	4-Warning	Field upgradable rommon used for key revocation\n	System identified that the field upgradable rommon was used to boot the image. It is recommended that the readonly rommon be used for the key revocation process.	digi-sign-infra	"Recommended action is to boot the image used for key revocation process " "with readonly rommon. This is a warning message." "Command/process will still go through in the current state."
DIGISIGN4FUR_BOOT	4-Warning	Field upgradable rommon used for key revocation\n	System identified that the field upgradable rommon was used to boot the image. It is recommended that the readonly rommon be used for the key revocation process.	digi-sign-infra	"Recommended action is to boot the image used for key revocation process " "with readonly rommon. This is a warning message." "Command/process will still go through in the current state."
DIGISIGN4FUR_BOOT	4-Warning	Field upgradable rommon used for key revocation\n	System identified that the field upgradable rommon was used to boot the image. It is recommended that the readonly rommon be used for the key revocation process.	digi-sign-infra	"Recommended action is to boot the image used for key revocation process " "with readonly rommon. This is a warning message." "Command/process will still go through in the current state."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DIGSIG4INVALID_KEY	4-Warning	[node]ARNING: Digital signature verification failed for file [chars]: [chars]\n	Validation failure due to invalid key while verifying the digital signature.	digi-sign-infra	"Do not use this file. The file might be corrupted or " "modified. Please attempt to copy the file again or download " "the file again from the <a href="http://www.cisco.com">http://www.cisco.com</a> page before " "copying it. If you continue to get this error message " "open a case with the Technical Assistance Center via the " "Internet at " <a href="http://www.cisco.com">http://www.cisco.com</a> " "and contact your Cisco technical support representative with the " "device information you have gathered."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DIGSGN4INVALID_KEY	4-Warning	[node]ARNING: Digital signature verification failed for file [chars]: [chars]\n	Validation failure due to invalid key while verifying the digital signature.	digi-sign-infra	"Do not use this file. The file might be corrupted or " "modified. Please attempt to copy the file again or download " "the file again from the <a href="http://www.cisco.com">http://www.cisco.com</a> page before " "copying it. If you continue to get this error message " "open a case with the Technical Assistance Center via the " "Internet at " <a href="http://www.cisco.com/infocenter">http://www.cisco.com/infocenter</a> " "and contact your Cisco technical support representative with the " "device information you have gathered."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DIGSIG4INVALID_KEY	4-Warning	[node]ARNING: Digital signature verification failed for file [chars]: [chars]\n	Validation failure due to invalid key while verifying the digital signature.	digi-sign-infra	"Do not use this file. The file might be corrupted or " "modified. Please attempt to copy the file again or download " "the file again from the <a href="http://www.cisco.com">http://www.cisco.com</a> page before " "copying it. If you continue to get this error message " "open a case with the Technical Assistance Center via the " "Internet at " <a href="http://www.cisco.com">http://www.cisco.com</a> " "and contact your Cisco technical support representative with the " "device information you have gathered."
DIGSIG4UNSIGNED	4-Warning	[node]ARNING: Digital signature is not found in file [chars]\n	The specified image file does not have a digital signature. Only Cisco IOS Software Images are digitally signed. If you enter <CmBt>of<N<CmBt> <CmBt>op<N<CmBt> or <CmBt>dat<N<CmBt> command and the specified file is not a digitally signed Cisco IOS Software Image the system displays this warning message because the file does not have a signature. A valid digital signature ensures the integrity of the image.	digi-sign-infra	"If the specified file is an unsigned Cisco IOS Software image " "be cautious when deciding " "whether or not to use this file. The system will not boot using " "this image."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>DKG</del> DKG-NAURE- <del>CI</del> CI- <del>RS</del> RS- <del>NT</del> NT	4-Warning	[node]ARNING: Digital signature is not found in file [chars]\n	The specified image file does not have a digital signature. Only Cisco IOS Software Images are digitally signed. If you enter <del>CmBt><del>vfy N<del>CmBt> <del>CmBt><del>py N<del>CmBt> or <del>CmBt><del>dad N<del>CmBt> command and the specified file is not a digitally signed Cisco IOS Software Image the system displays this warning message because the file does not have a signature. A valid digital signature ensures the integrity of the image.	digi-sign-infra	"If the specified file is an unsigned Cisco IOS Software image " "be cautious when deciding " "whether or not to use this file. The system will not boot using " "this image."
<del>DKG</del> DKG-NAURE- <del>CI</del> CI- <del>RS</del> RS- <del>NT</del> NT	4-Warning	[node]ARNING: Digital signature is not found in file [chars]\n	The specified image file does not have a digital signature. Only Cisco IOS Software Images are digitally signed. If you enter <del>CmBt><del>vfy N<del>CmBt> <del>CmBt><del>py N<del>CmBt> or <del>CmBt><del>dad N<del>CmBt> command and the specified file is not a digitally signed Cisco IOS Software Image the system displays this warning message because the file does not have a signature. A valid digital signature ensures the integrity of the image.	digi-sign-infra	"If the specified file is an unsigned Cisco IOS Software image " "be cautious when deciding " "whether or not to use this file. The system will not boot using " "this image."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DIGSGN6KEY_UPGRADE	6-Information	[chars]\n	System identified a key version mismatch between the key which was used to sign the image and the keys stored on the device	digi-sign-infra	"If the image is signed with a key version newer than the device" "keys then follow the procedure for key revocation which is" "which is documented at cisco.com. If the image is signed with a" "key version that is now obsolete please obtain the latest signed" "copy of this image from cisco.com"
DIGSGN6KEY_UPGRADE	6-Information	[chars]\n	System identified a key version mismatch between the key which was used to sign the image and the keys stored on the device	digi-sign-infra	"If the image is signed with a key version newer than the device" "keys then follow the procedure for key revocation which is" "which is documented at cisco.com. If the image is signed with a" "key version that is now obsolete please obtain the latest signed" "copy of this image from cisco.com"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DIGSIGN6KEY_UPGRADE	6-Information	[chars]\n	System identified a key version mismatch between the key which was used to sign the image and the keys stored on the device	digi-sign-infra	"If the image is signed with a key version newer than the device" "keys then follow the procedure for key revocation which is" "which is documented at cisco.com. If the image is signed with a" "key version that is now obsolete please obtain the latest signed" "copy of this image from cisco.com"
DIRECTOR3BADCOMPL	3-Error	plug-in returned orphan status	A software or hardware error occurred.	dist-director	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
DIRECTOR3DRPDOWN	3-Error	DRP [node]was down [node] ago in the last [dec] minute period ! There may be problems related to this DRP agent.	The remote DRP agent has not responded within the time period reported	-	"Make sure the remote DRP agent is running and that it is accessible\n\ from the system reporting the problem."
DIRECTOR3HITOMLOAD	3-Error	Excessive HTTP request overloading: dropping HTTP req from <cli [node].	HTTP requests are overloading the web redirector	dist-director	"Web redirector is automatically discarding HTTP request traffic."
DIRECTOR-3-NOALIAS	3-Error	[chars] can not create ip alias	Most likely a resource problem within the system.	dist-director	"Reboot the system as soon as possible. If the problem continues\n\ to occur report it to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DIRECTOR-3-NOPORT	3-Error	[chars] port in use	The IP address requested has been found to be already in use on\n\n some interface connected to the system or within the system itself.	dist-director	"Either select another IP address for use or locate the system making\n\n use of this address and reconfigure it to use another."
DIRECTOR-3-NOPROC	3-Error	unable to create [chars] process	Most likely a resource problem within the system.	dist-director	"Reboot the system as soon as possible. If the problem continues\n\n to occur report it to your technical support representative."
DIRECTOR-3-NOSOCKET	3-Error	[chars] unable to create socket	A software or hardware error occurred.	dist-director	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
DIRECTOR-3-NOTCONF	3-Error	Metric [chars] referenced but not found	-	dist-director	-
DIRECTOR-3-NOWRITE	3-Error	[chars] unable to write to socket	A software or hardware error occurred.	dist-director	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
DIRECTOR-3-URLSWHERE	3-Error	URL is elsewhere '[chars]' Code [dec] - [chars]	The HTTP return code indicates the page is not actually on this server	dist-director	"Check the URL configured. Check the configured HTTP server."
DIRECTOR-3-URLSVRERR	3-Error	Server error '[chars]' Code [dec] - [chars]	The HTTP return code indicates a server failure error	dist-director	"Check the URL configured. Check the configured HTTP server."
DIRECTOR-5-URLSDOWN	5-Notice	server [node] on port [dec] has gone [chars]	The remote server has gone up or down	dist-director	"None."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DIRECTOR6DNSNORSP	6-Information	answer type [chars] host [chars] cli [node]id# [dec] none	DNS reply logging: no server found.	dist-director	"None."
DIRECTOR6DNSQUERY	6-Information	query type [chars] host [chars] cli [node]id# [dec]	DNS query logging.	dist-director	"None."
DIRECTOR6DNSRESPN	6-Information	answer type [chars] host [chars] cli [node]id# [dec] svr %i	DNS reply logging with server found.	dist-director	"None."
DIRECTOR6SVRNSLECT	6-Information	no answer for host [chars] cli [node]type [chars] id# [dec] [chars]	No server found.	dist-director	"None."
DIRECTOR6SVRSELECT	6-Information	select [node]host [chars] cli [node]type [chars] id# [dec] [chars]	Report server selection process.	dist-director	"None."
<del>DLC1-2-ERRMSG</del>	5-Notice	ERRMSG_NOFLAGS	-	-	-
<del>DLC1-2-ERRMSG</del>	5-Notice	ERRMSG_NOFLAGS	-	-	-
<del>DLC1-2-ERRMSG</del>	5-Notice	ERRMSG_NOFLAGS	-	-	-
<del>DLC1-2-ERRMSG</del>	5-Notice	ERRMSG_NOFLAGS	-	-	-
DLC-2-NOMEMORY	2-Critical	no memory for [chars]	There was not enough free memory to complete the operation.	-	LOG_STD_ACTION
DLC-3-BADPARAM	3-Error	Function [chars]: value [hex] passed in parameter [chars]	An internal software error occurred.	-	LOG_STD_ACTION
DLC-3-INVPCPEP	3-Error	Close Station invalid P_CEP	An internal software error occurred.	-	LOG_STD_ACTION
DLC-3-WPUTERR	3-Error	unknown port type [hec]	An internal software error occurred.	-	LOG_STD_ACTION
DIPMSGCONNECTERR	4-Warning	TCP connect to Radio [node]failed via [chars]. Error code: [chars]	TCP Connect to IP address and port of the Radio failed.	DIPDISCOMPONENT	"Take action based on the error code shown." " Reconfigure correct IP address and port " " if necessary."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>DLEP</del> <del>SEVERITY</del> <del>THRESHOLD</del>	6-Information	new Threshold value configured will have effect for the new sessions only not for the currently running DLEP sessions	If the threshold value should be updated at Router side it must be configured before the Radio launch	dlep	"Once the DLEP session is established and if you" " want to change the threshold value kill the" " Radio and reconfigure the dlep on Router" " interface and make the Radio UP to see" " the updated threshold value "
<del>DLEP</del> <del>SEVERITY</del> <del>ACTIVITY</del>	6-Information	new nbr-activity-timeout value configured will have effect for the new sessions only not for the currently running DLEP sessions	If the nbr-activity-timeout value should be updated at Router side it must be configured before the Radio launch	dlep	"Once the DLEP session is established and if you" " want to change the nbr-activity-timeout value" " kill the Radio and reconfigure the dlep on" " Router interface and make the Radio UP to see" " the updated value "
<del>DLEP</del> <del>SEVERITY</del> <del>DOWN</del> <del>ACK</del>	6-Information	new nbr-down-ack-timeout value configured will have effect for the new sessions only not for the currently running DLEP sessions	If the nbr-down-ack-timeout value should be updated at Router side it must be configured before the Radio launch	dlep	"Once the DLEP session is established and if you want" " to change the nbr-down-ack-timeout value kill the" " Radio and reconfigure the dlep on Router interface" " and make the Radio UP to see the updated Value "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>DLINK-3INFORM</del>	6-Information	new peer-terminate-ack-timeout value configured will have effect for the new sessions only not for the currently running DLEP sessions	If the peer-terminate-ack-timeout value should be updated Router side it must be configured before the Radio launch	dlep	"Once the DLEP session is established and if you want" " to change the peer-terminate-ack-timeout value" " kill the Radio and reconfigure the dlep on Router" " interface and make the Radio UP to see the updated value "
DLINK-3BAD_QELEM	3-Error	Bad queue elem - [node]x: flink [node]x blink [node]x flink->blink [node]x blink->flink [node]x	An internal software error occurred.	<del>DLINK-3DISCOMP</del>	LOG_SID_RECUR_ACTION
DLINK-3NULL_QELEM	3-Error	Null queue elem	An internal software error occurred.	<del>DLINK-3DISCOMP</del>	LOG_SID_RECUR_ACTION
<del>DLR-ALM-2DIRCH</del>	2-Critical	The DLR DHCP server is in FAULT state	The dlr dhcp server goes to FAULT state if cfg table contains error or it fails to form the ref table or ref table sync has some issue.	-	-
<del>DLR-ALM-2IRG</del>	2-Critical	The redundant gateway device is now in FAULT state	The redundant gateway device is in fault state	-	-
<del>DLR-ALM-2IRP</del>	2-Critical	The redundant gateway device is now in PARTIAL FAULT state	The redundant gateway is in partial fault state	-	-
<del>DLR-ALM-2IRN</del>	2-Critical	The DLR ring is now in FAULT state	The DLR ring is in FAULT state. This typically happens if a link or node in the ring goes down.	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>DRLARM2RSIPARTIAL</del>	2-Critical	The supervisor device is now in PARTIAL FAULT state	The supervisor device goes to partial fault state if it detects loss of beacon frames in one direction only.	-	-
<del>DRLARM2RSIRAPID</del>	2-Critical	The supervisor device is now in RAPID FAULT state	The supervisor device is in fault state. This happens if the device transitions from Normal to Fault state more than 5 times in 30 seconds.	-	-
DLR-2-GWFAULT	2-Critical	Ring [dec]: The redundant gateway device is now in FAULT state	The redundant gateway device is in fault state	accsw-layer2	"A redundant gateway device goes to fault state if "all its uplinks are down. Check the status of all uplinks. Restore the connection if possible."
DLR2GWPARTIALFAULT	2-Critical	Ring [dec]: The redundant gateway device is now in PARTIAL FAULT state	The redundant gateway is in partial fault state	accsw-layer2	"A redundant gateway device goes to partial fault "state if it receives messages indicating that a redundant gateway device with lower precedence" "is active. Make sure that there's bidirectional connectivity between all redundant gateway devices" "and then clear the partial fault condition."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DLR-2-MACFAILURE	2-Critical	Ring [dec]: [chars]	Failed to update the supervisor MAC.	accsw-layer2	"Remove and reconfigure the DLR ring. Make sure that a VLAN interface has been created for the VLAN that " "the ring ports belong to. Contact TAC if the problem persists."
DLR-2-NOPROC	2-Critical	Failed to start [chars] process [chars]	Unable to create DLR process. Reloading the device might resolve the issue. Without a reload DLR will not function properly.	accsw-layer2	"Reload the device"
DLR-2-RINGFAULT	2-Critical	Ring [dec]: The DLR ring is now in FAULT state	The DLR ring is in FAULT state. This typically happens if a link or node in the ring goes down.	accsw-layer2	"Determine the location of the fault and restore " "connectivity. The ring should resume functioning automatically"
DLR-2-SUPARTIALFAULT	2-Critical	Ring [dec]: The supervisor device is now in PARTIAL FAULT state	The supervisor device goes to partial fault state if it detects loss of beacon frames in one direction only.	accsw-layer2	"Determine the source of the problem and fix it. The device will resume normal operation automatically."
DLR-2-SUPRAPIDFAULT	2-Critical	Ring [dec]: The supervisor device is now in RAPID FAULT state	The supervisor device is in fault state. This happens if the device transitions from Normal to Fault state more than 5 times in 30 seconds.	accsw-layer2	"Locate the source of the faults and fix the problem before clearing the rapid fault condition"
DLR-3-EVENTFAILURE	3-Error	[chars]	A DLR event could not be handled properly.	accsw-layer2	"It could have been a temporary condition. Remove " "and reconfigure the DLR ring if the problem persists."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DLR-3-GWCFGFAIL	3-Error	Ring [dec]: [chars]	There was an issue with the DLR redundant gateway configuration. The redundant gateway may not function properly.	accsw-layer2	"Remove and reconfigure DLR redundant gateway functionality. Contact TAC if the problem persists."
DLR3GWUPLNKCFGFAIL	3-Error	Ring [dec]: [chars]	There was an issue with the DLR redundant gateway uplink configuration. The redundant gateway may not function properly.	accsw-layer2	"Remove and reconfigure DLR redundant gateway "uplink configuration from the interface. Contact TAC if the problem persists."
DLR-3-RINGCFGFAIL	3-Error	Ring [dec]: [chars]	There was an issue with the DLR ring configuration. The ring may not function properly.	accsw-layer2	"Remove and reconfigure the DLR ring. Contact TAC if the problem persists."
DLR-3-SWSWITCH	3-Error	Ring [dec]: [chars] frames are being software switched	Frames which should be hardware switched are being software switched. It's normal to see this message once or twice during configuration changes but not otherwise. It can make the ring unstable and drive up the CPU utilization.	accsw-layer2	"Remove and reconfigure the DLR ring. Contact TAC if the problem persists."
DLR-6-GWSTATECHG	6-Information	Ring [dec]: The device is now the [chars] redundant gateway	The state of redundant gateway has changed	accsw-layer2	"This is an informational message. The device is functioning as expected."
DLR-6-RINGNORMAL	6-Information	Ring [dec]: The DLR ring is now in NORMAL state	The state of the DLR ring has changed to NORMAL.	accsw-layer2	"This is an informational message. The device is functioning as expected."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DLR-6-SUPSPITPARAM	6-Information	Ring [dec]: Supported beacon parameters received	This backup supervisor received beacons with supported parameters from active supervisor which can be supported by this device.	accsw-layer2	"This backup supervisor device can take the role of active supervisor with current beacon parameters."
DLR-6-SUPSTATECHG	6-Information	Ring [dec]: The device is now the [chars] supervisor	The state of the supervisor device has changed	accsw-layer2	"This is an informational message. The device is functioning as expected."
DLR-6-SUPUNSPITPARAM	6-Information	Ring [dec]: Unsupported beacon parameters received	This backup supervisor received beacons with parameters from active supervisor which cannot be supported by this device.	accsw-layer2	"This backup supervisor device cannot take the " "role of active supervisor with current beacon parameters."
DLSWC-3-BADCLSI	3-Error	[chars] primitive not valid for dls [chars] [chars]	A data-link switching system error occurred.	-	LOG_STD_ACTION
DLSWC-3-BADCLSCNF	3-Error	[chars] Invalid confirm [chars] [chars]	A data-link switching system error occurred.	-	LOG_STD_ACTION
DLSWC-3-BADCLSIIND	3-Error	[chars] Invalid indication [chars] [chars]	A data-link switching system error occurred.	-	LOG_STD_ACTION
DLSWC-3-BADCLSIRET	3-Error	[chars] Invalid ret code 0x[hec] [chars] [chars]	A data-link switching system error occurred.	-	LOG_STD_ACTION
DLSWC-3-BADCLSI SAP	3-Error	[chars] Bad elsi SAP id = [hec] [chars]	A data-link switching system error occurred.	-	LOG_STD_ACTION
DLSWC-3-BADPEEROP	3-Error	bad peer op in peer_to_core [dec]	A data-link switching system error occurred.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DLSWC-3-BADSSPHDR	3-Error	bad ssp hdr in proc ssp - [chars] = 0x[hec]	-	-	"If the remote peer is a nonCisco router confirm that it supports the\n\ DLSw RFC 1795 standard."
DLSWC-3-IDMGR	3-Error	[chars]	A data-link switching system error occurred.	-	LOG_STD_ACTION
DLSWC-3-NODLSW	3-Error	[chars] [dec]	A data-link switching system error occurred.	-	LOG_STD_ACTION
DLSWC-3-NOPEER	3-Error	[chars]	A data-link switching system error occurred.	-	LOG_SID_RECUR_ACTION
DLSWC-3-RECVSSP	3-Error	SSP OP = [dec][chars] [chars] from [chars]	-	-	LOG_SID_NO_ACTION
DLSWC-3-SENDSSP	3-Error	SSP OP = [dec][chars] [chars] to [chars] [chars]	A Silicon Switch Program SSP frame was sent to the remote peer.	-	LOG_SID_NO_ACTION
DLSWmstr-3-DLSWMS	3-Error	[chars]	DLSw Master-Slave Error	-	LOG_SID_NO_ACTION
DLSWmstr-3-DLSWMSM	3-Error	[chars] [chars]	DLSw Master-Slave Error	-	LOG_SID_NO_ACTION
DLSWmstr-3-DLSWMDX	3-Error	[chars] [hec] from [enet]	DLSw Master-Slave Error	-	LOG_SID_NO_ACTION
DLSWmstr-3-DLSWMSM	3-Error	[chars]: [chars] from [enet]	DLSw Master-Slave Error	-	LOG_SID_NO_ACTION
DLSWmstr-3-DLSWMSV	3-Error	[chars] from [enet]	DLSw Master-Slave Error	-	LOG_SID_NO_ACTION
DLSWmstr-3-DLSWMSV	3-Error	[chars]: [chars]	DLSw Master-Slave Error	-	LOG_SID_NO_ACTION
DLSWmstr-3-DLSWMSX	3-Error	[chars]: [chars] to [enet]	DLSw Master-Slave Error	-	LOG_SID_NO_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DLSWP-3-PBADVALUE	3-Error	[chars]: invalid [chars] [dec]	A bad parameter value was passed to function chars1 - invalid\n parameter chars2 with value. This error should not cause any network\n problems unless it happens repeatedly.	-	LOG_STD_ACTION
DLSWP-3-FCAPMISMATCH	3-Error	[chars]: [chars]	The largest frame size configured in the DLSW remote peer definition\n is being changed because the MTU size configured\n on the interface used by DLSW is less than the configured value of\n the largest frame on DLSW remote peer definition. The largest frame size\n is being changed to that configured on the interface.	-	"If you wish to use this largest frame size for DLSW increase the\n MTU on the interface to a value larger than the configured largest\n frame size."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DLSWP3-PEERFAILURE	3-Error	[chars] [chars]	A DLSW peer failed:\n\n - keepalive failure dlsw between cisco peers is sending a peer keepalive\n\n by default every 30 sec. After missing 3 consecutive keepalives the peer\n\n is taken down.\n\n - We are not promiscuous Rej conn from peer a.b.c.d\n\n The local dlsw peer is not configured for promiscuous and we receive\n\n a request to open a dlsw peer for which we have no corresponding dlsw\n\n remote peer statement.\n\n - received tcp fini dlsw peer code has received a tcp fini from the \n\n underlaying tcp subsystem. To obey the tcp fini dlsw wring bring down \n\n the peer connection for which the tcp fini was received.	-	"- keepalive failure\n\n Check end to end connectivity between the DLSW peers\n\n - We are not promiscuous Rej conn from peer a.b.c.d\n\n correct your configuration.\n\n\n\n - received tcp fini\n\n Check the underlaying tcp connection between the two dlsw peers."
DLSWP-3-PGENERAL	3-Error	[chars]	A general error condition was detected as described in the message\n\n text. This error should not cause any network problems unless it\n\n happens repeatedly.	-	LOG_STD_ACTION
DLSWP-3-PNOCOKIE	3-Error	uninitialized peer [chars] from [node]dec] to [node]dec]	DLSw received a packet on an uninitialized peer connection.	-	"Verify configuration and DLSw peer status on both routers".

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DLSWP-3-PNOMEM	3-Error	No memory to [chars]	The router ran out of system memory for operation as described in the\n\n message text. Most likely the router image requires more system memory\n\n RAM than the router contains.	-	"Consult with your Cisco technical support representative\n\n about memory requirements for a specific image."
DLSWP-3-PPASSIVE	3-Error	passive open failed from [node]dec] -> [dec]	-	-	"Consult with your Cisco technical support representative\n\n about memory requirements for a specific image."
DLSWP-5-PEERUPDOWN	5-Notice	[chars] [chars]	A DLSW peer is either connected or disconnected	-	"None informational message only."
DMA-1-DRQ_EMPTY_PAK	1-Alert	Empty packet is being sent to backplane. particle_ptr=[hex]	drq_io receives a packet that has particle count 0. coding error --\n\n hurt performance	high-vip2	"Copy the error message exactly as it appears and report it to your\n\n technical support representative. If possible also provide the\n\n show log on the reporting VIP"
DMA-1-DRQ_STALLED	1-Alert	DRQ stalled. Dumping DRQ.	The path from VIP to backplane has stalled. The DRQ table is \n\n being dumped for debugging	high-vip2	"Copy the error message exactly as it appears and report it to your\n\n technical support representative. If possible also provide the hex\n\n dump following this message"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DMALOWDMA_RMEM	1-Alert	Not enough pci memory left over for DMA	Misconfiguration has resulted in overutilization of PCI memory	high-vip2	"Copy the error message exactly as it appears and report it to your technical support representative. If possible also provide the output of show diag and show controller cbus"
DMALOWDMA_RCMEM	1-Alert	Not enough processor memory left over for DMA	This error message appears only in custom built images when a sanity check fails. A packet that was too large was sent over the backplane by a VIP.	high-vip2	"Copy the error message exactly as it appears and report it to your technical support representative. If possible also provide the output of show tech."
DMALOWDPAK	3-Error	pak not cleaned up by Egress processing appId [dec]	After dtq dispatched a packet to Egress processing packet is not cleaned up by application	high-vip2	"Copy the error message exactly as it appears and report it to your technical support representative. If possible also provide the show log on the reporting VIP"
DMB0-DMB_EMERG	0-Emergency	[chars]	DMB_INTERNAL_ERROR	DMB_DDIS_COMPONENT	LOG_STD_ACTION
DMB0-DMB_EMERG	0-Emergency	[chars]	DMB_INTERNAL_ERROR	DMB_DDIS_COMPONENT	LOG_STD_ACTION
DMB1-DMB_ALERT	1-Alert	[chars]	DMB_INTERNAL_ERROR	DMB_DDIS_COMPONENT	LOG_STD_ACTION
DMB1-DMB_ALERT	1-Alert	[chars]	DMB_INTERNAL_ERROR	DMB_DDIS_COMPONENT	LOG_STD_ACTION
DMB2-DMB_CRIT	2-Critical	[chars]	DMB_INTERNAL_ERROR	DMB_DDIS_COMPONENT	LOG_STD_ACTION
DMB2-DMB_CRIT	2-Critical	[chars]	DMB_INTERNAL_ERROR	DMB_DDIS_COMPONENT	LOG_STD_ACTION
DMB3-DMB_ERR	3-Error	[chars]	DMB_INTERNAL_ERROR	DMB_DDIS_COMPONENT	LOG_STD_ACTION
DMB3-DMB_ERR	3-Error	[chars]	DMB_INTERNAL_ERROR	DMB_DDIS_COMPONENT	LOG_STD_ACTION
DMB4-DMB_WARNING	4-Warning	[chars]	DMB_INTERNAL_ERROR	DMB_DDIS_COMPONENT	LOG_STD_ACTION
DMB4-DMB_WARNING	4-Warning	[chars]	DMB_INTERNAL_ERROR	DMB_DDIS_COMPONENT	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DMB-5-DMB_NOTICE	5-Notice	[chars]	Normal but significant conditions	DMB-DDIS-COMPONENT	LOG_STD_ACTION
DMB-5-DMB_NOTICE	5-Notice	[chars]	Normal but significant conditions	DMB-DDIS-COMPONENT	LOG_STD_ACTION
DMB-6-DMB_INFO	6-Information	[chars]	Informational messages	DMB-DDIS-COMPONENT	LOG_SID_NO_ACTION
DMB-6-DMB_INFO	6-Information	[chars]	Informational messages	DMB-DDIS-COMPONENT	LOG_SID_NO_ACTION
DMB-7-DMB_ASSERT	7-Debug	Assertion Failure [chars] @[chars]:[dec] : [chars]	DMB-INTERNAL-ERROR	DMB-DDIS-COMPONENT	LOG_STD_ACTION
DMB-7-DMB_ASSERT	7-Debug	Assertion Failure [chars] @[chars]:[dec] : [chars]	DMB-INTERNAL-ERROR	DMB-DDIS-COMPONENT	LOG_STD_ACTION
DMB-CDB-MAN-SUB-FAL	2-Critical	ddmi-infra	"Failed to register as mandatory subscriber[chars] (%d):[chars]"	"A Confd error has occurred attempting to mark DMI as a mandatory subscriber"	"Stop and restart netconf-yang."
DMI-2-CHG_VRF_FAIL	2-Critical	ddmi-infra	"The DMI application failed to set the correct virtual routing and forwarding network."	"The DMI application failed to set the correct virtual routing and forwarding network; thus	-
DMC-CHANNEL-CLOSED	2-Critical	ddmi-infra	"CLI engine event channel closed unexpectedly (%d):[chars]."	"The CLI engine event channel to the network element closed unexpectedly."	"DMI will reset. No action necessary."
DMCONF-BRG-DONE-FAL	2-Critical	ddmi-infra	"Failed to complete callback registration[chars] (%d):[chars]."	"A DMI application cannot complete callback registration with Confd."	"Stop and restart netconf-yang."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DMECONFDCB_REG_FAIL	2-Critical	ddmi-infra	"Failed to register callback with Confd[chars] (%d):[chars]."	"A DMI application cannot register a particular callback with Confd."	"Stop and restart netconf-yang."
DMECONFCONNECT_FAIL	2-Critical	ddmi-infra	"Failed to connect to Confd via[chars] socket[chars] (%d):[chars]."	"A DMI application cannot connect to Confd via a particular socket type."	"Stop and restart netconf-yang."
DME2CONFD_INIT_FAIL	2-Critical	ddmi-infra	"Failed to initialize Confd[chars] (%d):[chars]."	"Confid did not initialize properly."	"Back out any recent yang model updates. Stop and restart netconf-yang."
DMECONFSDONE_FAIL	2-Critical	ddmi-infra	"Failed to complete subscription[chars] (%d):[chars]."	"A DMI application cannot complete subscriptions for changes to yang models."	"Back out any recent model updates. Stop and restart netconf-yang."
DME2CONFD_SUB_FAIL	2-Critical	ddmi-infra	"Failed to subscribe[chars] model[chars] (%d):[chars]."	"A DMI application cannot subscribe for changes to a particular yang model."	"Back out any recent model updates. Stop and restart netconf-yang."
DMECONF_SOCKET_ERROR	2-Critical	ddmi-infra	"Confid control socket ready check returned an error[chars] (%d):[chars]."	"The control socket connection to Confd has returned an error."	"DMI will reset. No action necessary."
DMEMAAPICONNECT_FAIL	2-Critical	ddmi-infra	"Could not connect to Confd via DMI MAAPI socket[chars] (%d):[chars]."	"A Confid error has occurred attempting to connect via MAAPI socket."	"Stop and restart netconf-yang."
DME2MAAPI_WAIT_FAIL	2-Critical	ddmi-infra	"Wait for Confd to initialize to phase two failed[chars] (%d):[chars]."	"Confid did not initialize properly."	"Back out any recent yang model updates. Stop and restart netconf-yang."
DME2NES_RESET_FAIL	2-Critical	ddmi-infra	"Failed to reinitialize the DMI network element synchronizer daemon."	"The network element synchronizer daemon cannot reset in order to recover from a critical error."	"Stop and restart netconf-yang."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>DMI-2-NESD_CREATE_FAIL</del>	2-Critical	ddmi-infra	"Failed to create nes daemon."	"Either an out-of-memory condition has been encountered	-
<del>DMI-2-NESD_INIT_FAIL</del>	2-Critical	ddmi-infra	"Failed to initialize the network element synchronizer daemon"	"The nesd daemon failed to initialize."	"Stop and restart netconf-yang."
<del>DMI-2-NESD_HOOK_INIT_FAIL</del>	2-Critical	ddmi-infra	"Failed to initialize component-specific add-ons to the network element synchronizer daemon"	"The nesd daemon failed to initialize its component-specific add-ons."	"Stop and restart netconf-yang."
<del>DMI-2-NETCONF_SSH_CRITICAL</del>	2-Critical	ddmi-infra	"NETCONF/SSH[chars]"	"A critical message from the NETCONF SSH daemon."	"Not applicable"
<del>DMI-2-NOTIFICATION_READ_FAIL</del>	2-Critical	ddmi-infra	"Failed to read notification[chars] (%d):[chars]."	"An attempt to read an event from the Confd notification socket failed."	"DMI will reset. No action necessary."
<del>DMI-2-SD_INIT_FAIL</del>	2-Critical	ddmi-infra	"Failed to initialize the syncfd daemon"	"The syncfd daemon failed to initialize."	"Stop and restart netconf-yang."
<del>DMI-2-SD_RESET_FAIL</del>	2-Critical	ddmi-infra	"Failed to reinitialize the DMI syncfd daemon."	"The syncfd daemon cannot reset in order to recover from a critical error."	"Stop and restart netconf-yang."
<del>DMI-2-VTY_SERVER_RESET_FAIL</del>	2-Critical	ddmi-infra	"Failed to reinitialize VTY server utility instance."	"Failed to reset VTY server utility in order to recover from critical error."	"Stop and restart netconf-yang."
<del>DMI-2-WORKER_SOCKET_CLOSED</del>	2-Critical	ddmi-infra	"Confd worker closed unexpectedly[chars] (%d):[chars]."	"The worker socket connection to Confd has closed unexpectedly."	"DMI will reset. No action necessary."
<del>DMI-2-WORKER_SOCKET_ERROR</del>	2-Critical	ddmi-infra	"Confd worker socket ready check returned an error[chars] (%d):[chars]."	"The worker socket connection to Confd has returned an error."	"DMI will reset. No action necessary."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DMI3-AUTH-TIMED-OUT	3-Error	ddmi-infra	"%s request from[chars]:%s for[chars] over[chars] timed out."	"A AAA request timed out."	"Check connectivity to the configured AAA server."
DMI3-CDB-ABORT-FAIL	3-Error	ddmi-infra	"Failed to abort transaction[chars] (%d):[chars]."	"A Confd error has occurred attempting to abort a transaction."	"Perform a manual sync operation to ensure the DMI data store is in sync with the network element's running configuration."
DMI3-CDB-READ-FAIL	3-Error	ddmi-infra	"Could not read the yang path '%s' from the DMI data store[chars] (%d):[chars]."	"A Confd error has occurred attempting to read a specific model path from the DMI data store."	"Download the model in question from the network element and verify the path exists. Update the model if needed."
DMI3-CDB-SET-NAME-SPACE-FAIL	3-Error	ddmi-infra	"Could not set the model namespace '%s' for accessing the DMI data store[chars] (%d):[chars]."	"A Confd error has occurred attempting to set a specific model namespace for accessing the DMI data store."	"Stop and restart netconf-yang."
DMI3-CDB-START-FAIL	3-Error	ddmi-infra	"Could not start session to read configuration from the DMI data store[chars] (%d):[chars]."	"A Confd error has occurred attempting to open the DMI data store."	"Stop and restart netconf-yang."
DMI3-CDB-SYNC-FAIL	3-Error	ddmi-infra	"Confid subscription socket sync failed[chars] (%d):[chars]."	"A Confd error has occurred attempting to sync the subscription socket."	"Perform a manual sync operation to ensure the DMI data store is in sync with the network element's running configuration."
DMI3-ENGINE-CONNECT-FAIL	3-Error	ddmi-infra	"Failed to connect to network element."	"DMI cannot connect to the network element in order to interact with its CLI parser."	"Check the CLI engine protocol settings."



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DMCIECNCONNECTIONS	3-Error	ddmi-infra	"Detected connection to the network element has been lost. Attempting to reconnect"	"DMI has lost connection to the network element."	"No action necessary."
DMCIECNENGINEEVENTIAL	3-Error	ddmi-infra	"Failed to retrieve CLI engine event (%d):[chars]."	"DMI cannot retrieve its CLI engine event in order to interact with the network element CLI parser."	"Perform a manual sync operation to ensure the DMI data store is in sync with the network element's running configuration."
DMCIECNENGINELOGGINGIAL	3-Error	ddmi-infra	"Failed to set CLI engine logging level (%d):[chars]."	"DMI cannot set its CLI engine logging level."	"Stop and restart DMI."
DMCIECNENGINEPOLLEIAL	3-Error	ddmi-infra	"Failed to read CLI engine results - max polling attempts exceeded (%d)."	"DMI cannot read its CLI engine results in order to interact with the network element CLI parser."	"Perform a manual sync operation to ensure the DMI data store is in sync with the network element's running configuration. If problem continues"
DMCIECNENGINEEVENTIAL	3-Error	ddmi-infra	"Failed to read CLI engine event (%d):[chars]."	"DMI cannot read its CLI engine event in order to interact with the network element CLI parser."	"Perform a manual sync operation to ensure the DMI data store is in sync with the network element's running configuration. If problem continues"
DMCIECNENGINERESULTSIAL	3-Error	ddmi-infra	"Failed to read CLI engine results (%d):[chars]."	"DMI cannot read its CLI engine results in order to interact with the network element CLI parser."	"Perform a manual sync operation to ensure the DMI data store is in sync with the network element's running configuration."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<u>DM</u> <u>CL</u> <u>EN</u> <u>GR</u> <u>CON</u> <u>NC</u> <u>IAL</u>	3-Error	ddmi-infra	"Error reconnecting to the network element (%d):[chars]"	"The CLI engine has lost its connection to the network element and attempted to reconnect with an error occurred."	"Stop and restart netconf-yang."
<u>DM</u> <u>CL</u> <u>EN</u> <u>CL</u> <u>Y</u> <u>CR</u> <u>EA</u> <u>IL</u>	3-Error	ddmi-infra	"The CLI engine failed to create a VTY instance (%d):[chars]"	"The DMI CLI engine cannot create a VTY instance."	"Reduce other system activity to ease memory demands. If conditions warrant"
<u>DM</u> <u>CL</u> <u>EN</u> <u>CL</u> <u>Y</u> <u>OP</u> <u>EN</u> <u>AL</u>	3-Error	ddmi-infra	"The CLI engine failed to open a VTY (%d):[chars]"	"The DMI CLI engine cannot open a VTY."	"Free up available VTY resources by closing unused VTYs. Perform a manual sync operation to ensure the DMI data store is in sync with the network element's running configuration. If problem continues"
<u>DM</u> <u>CL</u> <u>EN</u> <u>CL</u> <u>Y</u> <u>IM</u> <u>CO</u> <u>UL</u>	3-Error	ddmi-infra	"The DMI CLI engine failed to disable the VTY timeout (%d):[chars]"	"DMI disables the VTY timeout for the network element synchronizer's VTY connection to ensure its number cannot be silently claimed by other VTY sessions."	"None required"
<u>DM</u> <u>CL</u> <u>EN</u> <u>CL</u> <u>Y</u> <u>WR</u> <u>IE</u> <u>AL</u>	3-Error	ddmi-infra	"Error writing the CLI:[chars] -[chars]"	"A CLI engine error occurred while send a command line to the network element's CLI parser"	"Enter the command line in question manually via the network element's console or vty. If successful"
DMI-3-CLI_GEN_FAIL	3-Error	ddmi-infra	"Failed to generate CLI change set[chars] (%d):[chars]."	"A Confd error has occurred when requesting the CLI change set for a transaction."	"Perform a manual sync operation to ensure the DMI data store is in sync with the network element's running configuration."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DMI-3-DIFF_FAIL	3-Error	ddmi-infra	"Error saving diff file:[chars]/%s-[chars]"	"An operating system error occurred while performing a diff of two files and redirecting to a third file."	"Check free space on device. Clean up if necessary. Also
DMI-3-DIR_EXISTS	3-Error	ddmi-infra	"Message diagnostics directory '%s' exists	-	-
DMI-3-EDIT_REJECTED	3-Error	ddmi-infra	"The NETCONF running datastore edit request from application[chars]	-	-
DMI-3-INIT_SYNC_FAIL	3-Error	ddmi-infra	"Initial DMI sync failed."	"DMI failed to synchronize the network element's running configuration with the DMI data store upon DMI startup."	"Perform a manual sync operation to ensure the DMI data store is in sync with the network element's running configuration."
DMI-3-INTERNAL_ERROR	3-Error	ddmi-infra	"Internal error -[chars] %d:[chars]"	"An unexpected internal error has occurred."	"Consult man page for impacted area to interpret the error code and string."
DMI-3-INVALID_PATH	3-Error	ddmi-infra	"The NED preserve path specified   %s   does not exist. Please remove from the /n1v/c1s1o1/p1r1s1e1r1v1e1p1a1t1h1 list."	"A non-existent XPath has been specified to be preserved during complete syncs."	"Remove the offending path from the /n1v/c1s1o1/p1r1s1e1r1v1e1p1a1t1h1 list."
DMI-3-INVALID_REG_EXP	3-Error	ddmi-infra	"The regular expression   %s   is invalid. Please remove from the '%s' model or via the CLI '%s[chars]'"	"An invalid regular expression has been specified which will not compile."	"Remove the offending regular expression from the specified model or via \"no CLI\"."
DMI-3-LOAD_SCHEMAS_FAIL	3-Error	ddmi-infra	"Cannot load Confid schemas[chars] (%d):[chars]."	"DMI failed to load Confd schemas for yang model namespaces."	"Back out any recent yang model updates. Stop and restart netconf-yang."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DM3MAAPI_TRANS_FAIL	3-Error	ddmi-infra	"Failed to apply a transaction via DMI MAAPI[chars] (%d):[chars]."	"A ConfD error has occurred attempting to apply a transaction via MAAPI."	"Stop and restart netconf-yang."
DM3MAAPI_DELETE_FAIL	3-Error	ddmi-infra	"Failed to delete model path '%s' via DMI MAAPI[chars] (%d):[chars]."	"A ConfD error has occurred attempting to delete a model path via MAAPI."	"Stop and restart netconf-yang."
DM3MAAPI_FINISH_TRANS_FAIL	3-Error	ddmi-infra	"Failed to finish a transaction via DMI MAAPI[chars] (%d):[chars]."	"A ConfD error has occurred attempting to finish a transaction via MAAPI."	"Stop and restart netconf-yang."
DM3MAAPI_KILL_SESSION_FAIL	3-Error	ddmi-infra	"Could not kill DMI MAAPI user session %d - [chars] (%d):[chars]."	"A parser lock timeout has occurred"	-
DM3MAAPI_LOAD_FAIL	3-Error	ddmi-infra	"Failed to load '%s' commands to model path '%s' via DMI MAAPI[chars] (%d):[chars]."	"A ConfD error has occurred attempting to load commands to a model path via MAAPI."	"Stop and restart netconf-yang."
DM3MAAPI_LOAD_FILE_FAIL	3-Error	ddmi-infra	"Failed to load file '%s' via DMI MAAPI[chars] (%d):[chars]."	"A ConfD error has occurred attempting to load commands from a file via MAAPI."	"Stop and restart netconf-yang."
DM3MAAPI_LOCK_FAIL	3-Error	ddmi-infra	"Failed to lock the DMI data store via DMI MAAPI[chars] (%d):[chars]."	"A ConfD error has occurred attempting to lock the DMI data store via MAAPI."	"Stop and restart netconf-yang."
DM3MAAPI_SAVE_FAIL	3-Error	ddmi-infra	"Could not save model path '%s' to file via DMI MAAPI[chars] (%d):[chars]."	"A ConfD error has occurred attempting to save a model path via MAAPI."	"Stop and restart netconf-yang."
DM3MAAPI_START_TRANS_FAIL	3-Error	ddmi-infra	"Could not start DMI MAAPI transaction[chars] (%d):[chars]."	"A ConfD error has occurred attempting to start a transaction via MAAPI."	"Stop and restart netconf-yang."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>DMI-MAAPI_START_FAIL</del> DMI-MAAPI_START_FAIL	3-Error	ddmi-infra	"Could not start DMI MAAPI user session[chars] (%d):[chars]."	"A Confd error has occurred attempting to start a user session via MAAPI."	"Stop and restart netconf-yang."
<del>DMI-MAAPI_UNLOCK_FAIL</del> DMI-MAAPI_UNLOCK_FAIL	3-Error	ddmi-infra	"Failed to unlock the NETCONF running data store via MAAPI[chars] (%d):[chars]."	"A Confd error has occurred attempting to unlock the DMI data store via MAAPI."	"Stop and restart netconf-yang."
DMI-3-MEM_UNAVAIL	3-Error	ddmi-infra	"Memory was not available to perform the DMI action."	"Insufficient system memory is available to perform the DMI action."	"Reduce other system activity to ease memory demands. If conditions warrant
<del>DMI-MODEL_RESTORE_FAIL</del> DMI-MODEL_RESTORE_FAIL	3-Error	ddmi-infra	"DMI failed to restore the model '%s' from the network element's running configuration to the DMI data store (%d):[chars]."	"DMI failed to restore the model '%s' from the network element's running configuration to the DMI data store."	"Check the netconf-yang section of the network element's running configuration. If populated with non-default values
<del>DMI-NETCONF_KILL_SESSION</del> DMI-NETCONF_KILL_SESSION	3-Error	ddmi-infra	"NETCONF session %d has held a parser configuration lock/NETCONF datastore global lock for the maximum time allowed and has been killed."	"A parser lock timeout has occurred	-
<del>DMI-NETCONF_SSH_ERROR</del> DMI-NETCONF_SSH_ERROR	3-Error	ddmi-infra	"NETCONF/SSH[chars]"	"An error message from the NETCONF SSH daemon."	"Not applicable"
DMI-3-SAVE_FAIL	3-Error	ddmi-infra	"Error saving file:[chars] -[chars]"	"An operating system error occurred while opening or writing to a diagnostic file."	"Check free space on device. Clean up if necessary. Also

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DMISYNCCLIERR_ADD_FAIL	3-Error	ddmi-infra	"Failed to add CLI configuration monitor filter (%d):[chars]."	"DMI cannot add a CLI filter to monitor for external CLI changes."	"Perform a manual sync operation to ensure the DMI data store is in sync with the network element's running configuration."
DMISYNCCLIERR_CREATE_FAIL	3-Error	ddmi-infra	"Failed to create CLI configuration monitor filter for pattern '%s' (%d):[chars]."	"DMI cannot create a CLI filter to monitor for external CLI changes."	"Perform a manual sync operation to ensure the DMI data store is in sync with the network element's running configuration."
DMISYNCCLIERR_MODE_FAIL	3-Error	ddmi-infra	"Failed to set mode for CLI configuration monitor filter (%d):[chars]."	"DMI cannot set the mode for its CLI filter to monitor for external CLI changes."	"Perform a manual sync operation to ensure the DMI data store is in sync with the network element's running configuration."
DMI-3-SYNC_ERR	3-Error	ddmi-infra	"An attempt to synchronize the running configuration to the NETCONF running data store has failed:[chars]"	"An attempt to send the running-config to ConfD to repopulate its data store has failed."	"Identify the offending CLI that makes the sync fail and delete it from the configuration."
DMI-3-SYNC_FAIL	3-Error	ddmi-infra	"An attempt to synchronize the running configuration to the NETCONF running data store has failed."	"An external change (outside of NETCONF or RESTCONF) has been detected. An attempt to send the running-config to ConfD to repopulate its data store has failed."	"Force a full sync via the 'sync-from' RPC."
DMI3SYNC_LOCK_FAIL	3-Error	ddmi-infra	"Failed to lock the NETCONF running data store via MA-API[chars] (%d):[chars]."	"A ConfD error has occurred attempting to lock the DMI data store via MA-API."	"Stop and restart netconf-yang."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>DM</del> DMDCHECKDATA	3-Error	ddmi-infra	"Failed to add module up check (%d):[chars]."	"DMI cannot add a module up check to monitor for module up status."	"Perform a manual sync operation to ensure the DMI data store is in sync with the network element's running configuration."
<del>DM</del> DMNCROIRADDA	3-Error	ddmi-infra	"Failed to add OIR monitor filter (%d):[chars]."	"DMI cannot add an OIR filter to monitor for OIR induced configuration changes."	"Perform a manual sync operation to ensure the DMI data store is in sync with the network element's running configuration."
<del>DM</del> DMNCROIRCREATA	3-Error	ddmi-infra	"Failed to create OIR monitor filter (%d):[chars]."	"DMI cannot create an OIR filter to monitor for OIR induced configuration changes."	"Perform a manual sync operation to ensure the DMI data store is in sync with the network element's running configuration."
<del>DM</del> DMCSSOIRADDA	3-Error	ddmi-infra	"Failed to add syslog monitor filter (%d):[chars]."	"DMI cannot add a syslog filter to monitor for external CLI changes."	"Perform a manual sync operation to ensure the DMI data store is in sync with the network element's running configuration."
<del>DM</del> DMCSSOIRCREATA	3-Error	ddmi-infra	"Failed to create syslog monitor filter for pattern '%s' (%d):[chars]."	"DMI cannot create a syslog filter to monitor for external CLI changes."	"Perform a manual sync operation to ensure the DMI data store is in sync with the network element's running configuration."
<del>DM</del> DMSYNCUNLOCKFAL	3-Error	ddmi-infra	"Failed to unlock the NETCONF running data store via MAAPI[chars] (%d):[chars]."	"A Confd error has occurred attempting to unlock the DMI data store via MAAPI."	"Stop and restart netconf-yang."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DDMI3-VTY_NUM_FAIL	3-Error	ddmi-infra	"DMI failed to retrieve its tty number from the network element"	"DMI must keep track of its tty number it uses to send command lines to the network element's parser in order to avoid triggering its own sync events"	"Check that the 'show users line' command line is working"
DDMI-VTY_SERVER_CREATE_FAIL	3-Error	ddmi-infra	"Failed to create VTY server utility instance."	"Failed to create VTY server utility instance for DMI operational data use."	"Stop and restart netconf-yang."
DDMI-VTY_SERVER_START_FAIL	3-Error	ddmi-infra	"Failed to start VTY server utility instance."	"Failed to start VTY server utility instance for DMI operational data use."	"Stop and restart netconf-yang."
DDMI-MAINTENANCE_MODE	4-Warning	ddmi-infra	"WARNING!!! - CDB MAINTENANCE MODE IS ACTIVE -[chars]. This mode is intended only for Cisco support - it must be disabled for normal NETCONF operation."	"A Cisco-support only NETCONF mode has been enabled as a recovery mechanism for an out-of-sync condition."	"Disable this mode in order to return the device to normal NETCONF operation."
DDMI-CLI_ENGINE_ENABLE_FAIL	4-Warning	ddmi-infra	"The DMI CLI engine failed to enable the network element's CLI parser (enter privileged mode) (%d):[chars]"	"DMI cannot enter privileged mode when communicating with the network element's CLI parser."	"Perform a manual sync operation to ensure the DMI data store is in sync with the network element's running configuration. Check AAA settings for the Netconf/Restconf user account."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DM4CLI_ENGINE_RC_FAIL	4-Warning	ddmi-infra	"The DMI CLI engine failed to get the overall return code from the command '%s' (%d):[chars]"	"DMI cannot read CLI engine return code for the particular command."	"Perform a manual sync operation to ensure the DMI data store is in sync with the network element's running configuration. If problem continues
DM4CLI_ENGINE_STATE_FAIL	4-Warning	ddmi-infra	"Failed to query the CLI engine state (%d):[chars]"	"DMI cannot read its CLI engine state."	"Perform a manual sync operation to ensure the DMI data store is in sync with the network element's running configuration. If problem continues
DMI4CLI_LOCK_FAIL	4-Warning	ddmi-infra	"Failed to obtain exclusive access to the IOS parser:[chars]."	"An IOS parser error has occurred attempting to obtain a configuration parser lock."	"Retry NETCONF operation."
DM4CLI_LOCK_OVERRIDE	4-Warning	ddmi-infra	"Configuration lock cleared and obtained by NETCONF session."	"An IOS parser lock has been cleared to avoid conflict with NETCONF session."	"Retry CLI operation after NETCONF session completes."
DM4CLI_ROLLBACK_WARN	4-Warning	ddmi-infra	"CLI rollback warning: tid (%d):[chars]."	"A Confd induced CLI transaction was aborted and during the rollback CLIs	-
DMI4CLI_UNLOCK_FAIL	4-Warning	ddmi-infra	"Failed to unlock the IOS parser store:[chars]."	"An IOS parser error has occurred attempting to unlock the parser lock."	"Retry NETCONF operation."
DM4CONFD_ROLLBACK_WARN	4-Warning	ddmi-infra	"Error copying Confd rollback file (%d):[chars]"	"An error occurred saving the Confd rollback information."	"Please enable rollback in Confd. Check for free file system space."
DM4CONFD_SOCKET_CLOSED	4-Warning	ddmi-infra	"Confd control socket closed[chars] (%d):[chars]."	"The control socket connection to Confd has closed unexpectedly."	"DMI will reset. No action necessary."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DMI-4-DIAG_WARN	4-Warning	ddmi-infra	"Unable to prepare file system for message diagnostics."	"An error occurred saving DMI message diagnostics."	"Check for free file system space."
DMINECONF_TRACE_WARN	4-Warning	ddmi-infra	"Error copying netconf.trace."	"An error occurred saving the Netconf trace information."	"Please enable netconfTraceLog in Confd. Check for free file system space."
DMI4SUB_READ_FAIL	4-Warning	ddmi-infra	"Conf subscription socket read failed[chars](%d):[chars]."	"A Conf error has occurred attempting to read the subscription socket."	"DMI will reset. No action necessary."
DMI-5-ACTIVE	5-Notice	ddmi-infra	"process is in steady state."	"process is in steady state."	"Informational only. No action required."
DMI-5-AUTH_PASSED	5-Notice	ddmi-infra	"User '%s' authenticated successfully from[chars]:%s for[chars] over[chars]. External groups:[chars]"	"A user authenticated successfully for a service."	"No action is required."
DMIAUTHENICAFI	5-Notice	ddmi-infra	"Authentication failure from[chars]:%s for[chars] over[chars]."	"A user failed to authenticate."	"No action is required."
DMIAUTHORZAFI	5-Notice	ddmi-infra	"User '%s' from[chars]:%s was not authorized for[chars] over[chars]."	"A user was not authorized for the requested service."	"No action is required."
DMI-5-CONFIG_I	5-Notice	ddmi-infra	"Configured from NETCONF/RESTCONF by[chars]"	-	-
DMI-5-INITIALIZED	5-Notice	ddmi-infra	"process has initialized."	"process has initialized."	"Informational only. No action required."
DMI-5-NACM_INIT	5-Notice	ddmi-infra	"NACM configuration has been set to its initial configuration."	"The running-config under the /nacm tree has been set to its initial configuration."	"No action is required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DMSNACM_READRULES	5-Notice	ddmi-infra	"NACM readrules for privilege level %d loaded successfully."	"NACM rules to permit readonly access loaded successfully."	"No action is required."
DMI-5-RESET	5-Notice	ddmi-infra	"process internal state reset."	"process internal state reset."	"Informational only. No action required."
DMI5SYNC_COMPLETE	5-Notice	ddmi-infra	"The running configuration has been synchronized to the NETCONF running data store."	"An external change (outside of NETCONF or RESTCONF) has been detected; thus	-
DMI-5-SYNC_NEEDED	5-Notice	ddmi-infra	"Configuration change requiring running configuration sync detected - '%s'. The running configuration will be synchronized to the NETCONF running data store."	"A configuration change that may trigger additional changes has been detected; thus	-
DMI-5-SYNC_START	5-Notice	ddmi-infra	"Synchronization of the running configuration to the NETCONF running data store has started."	"An external change (outside of NETCONF or RESTCONF) has been detected; thus	-
DM6NETCONF_SSH_INFO	6-Information	ddmi-infra	"NETCONF/SSH[chars]"	"An informational message from the NETCONF SSH daemon."	"Not applicable"
DMI-7-GEN_DEBUG	7-Debug	ddmi-infra	"DMI DEBUG[chars][chars]"	"A debug message for syslog consumption. For troubleshooting without brace"	"Not applicable"
DMTDSL-1-INITFAIL	1-Alert	DMTDSL[dec]/[dec] Init failed [chars]	The ADSL network module hardware may be bad	-	LOG_STD_ACTION
DMIDL-3-BADINITDSL	3-Error	DMIDL[dec][dec] interface not initialized.	The ATM network module hardware may be bad	pm-atm25	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DMIDSL-3DMIHWBAD	3-Error	DMTDSL[dec]/[dec] Hardware failed self test	The DSL chipset failed its self test	-	LOG_STD_ACTION
DMIDSL-3FAILNDAM	3-Error	DMTDSL Could not find ATM interface.	The DSL network module hardware may be bad	pm-atm25	LOG_STD_ACTION
DMTDSL-3-NOMEM	3-Error	DMTDSL[dec]/[dec] Out of memory	The router does not have enough memory installed to run this image	-	LOG_STD_ACTION
DMNEMN-NHRP_ERR	3-Error	[chars]: [chars] [chars] Reason: [chars] [dec] on Tunnel: [chars] NBMA: [chars]	NHRP Error messages	nhrp	LOG_STD_ACTION
DMNEMN-NHRP_ERR	3-Error	[chars]: [chars] [chars] Reason: [chars] [dec] on Tunnel: [chars] NBMA: [chars]	NHRP Error messages	nhrp	LOG_STD_ACTION
DMNEMN-NHRMUCSERR	3-Error	[chars]: [chars] on Tunnel: [chars] NBMA: [chars]	NHRP Multicast Replication Error messages	nhrp	LOG_STD_ACTION
DMNEMN-NHRMUCSERR	3-Error	[chars]: [chars] on Tunnel: [chars] NBMA: [chars]	NHRP Multicast Replication Error messages	nhrp	LOG_STD_ACTION
DMVPN3-NHRP_ERROR	3-Error	[chars]: [chars] failed for [chars] [chars] [dec] for Tunnel: [chars] NBMA: [chars] on Tunnel: [chars] NBMA: [chars]	Unable to send/receive packets.	nhrp	LOG_STD_ACTION
DMVPN3-NHRP_ERROR	3-Error	[chars]: [chars] failed for [chars] [chars] [dec] for Tunnel: [chars] NBMA: [chars] on Tunnel: [chars] NBMA: [chars]	Unable to send/receive packets.	nhrp	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>DMPNHRREGDNROR</del>	3-Error	[chars]: [chars] [chars] Error indication for [chars] - [chars][dec] Src Tunnel: [chars] NBMA: [chars] Dest Tunnel: [chars] NBMA: [chars]	NHRP Registration send/receive Error Indication packets.	nhrp	LOG_STD_ACTION
<del>DMPNHRREGDNROR</del>	3-Error	[chars]: [chars] [chars] Error indication for [chars] - [chars][dec] Src Tunnel: [chars] NBMA: [chars] Dest Tunnel: [chars] NBMA: [chars]	NHRP Registration send/receive Error Indication packets.	nhrp	LOG_STD_ACTION
<del>DMPNHRRESLDNROR</del>	3-Error	[chars]: [chars] [chars] Error indication for [chars] - [chars][dec] Src Tunnel: [chars] NBMA: [chars] Dest Tunnel: [chars] NBMA: [chars]	NHRP Resolution send/receive Error Indication packets.	nhrp	LOG_STD_ACTION
<del>DMPNHRRESLDNROR</del>	3-Error	[chars]: [chars] [chars] Error indication for [chars] - [chars][dec] Src Tunnel: [chars] NBMA: [chars] Dest Tunnel: [chars] NBMA: [chars]	NHRP Resolution send/receive Error Indication packets.	nhrp	LOG_STD_ACTION
DMPN4NHRP_QUOTA	4-Warning	[chars]: Max-send Quota of [node]kts/[node]ec exceeded on Tunnel: [chars] NBMA: [chars]	nhrp quota exceeded	nhrp	LOG_STD_ACTION
DMPN4NHRP_QUOTA	4-Warning	[chars]: Max-send Quota of [node]kts/[node]ec exceeded on Tunnel: [chars] NBMA: [chars]	nhrp quota exceeded	nhrp	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DMVPN-5-CRYPTO_SS	5-Notice	[chars]: local address : [chars] remote address : [chars] socket is [chars]	DMVPN Crypto UP/DOWN Syslog Event	nhrp	LOG_STD_ACTION
DMVPN-5-CRYPTO_SS	5-Notice	[chars]: local address : [chars] remote address : [chars] socket is [chars]	DMVPN Crypto UP/DOWN Syslog Event	nhrp	LOG_STD_ACTION
<del>DMVPN-5-NHRP_TUNNEL_DOWN</del>	5-Notice	[chars]: NETID : [dec] [chars] Tunnel: [chars] NBMA: [chars]	NETID Unconfigured	nhrp	LOG_STD_ACTION
<del>DMVPN-5-NHRP_TUNNEL_DOWN</del>	5-Notice	[chars]: NETID : [dec] [chars] Tunnel: [chars] NBMA: [chars]	NETID Unconfigured	nhrp	LOG_STD_ACTION
<del>DMVPN-5-NHRP_NH_DOWN</del>	5-Notice	[chars]: Next Hop [chars] : Tunnel: [chars] NBMA: [chars] for Tunnel: [chars] NBMA: [chars] is [chars] Reason: [chars]NHRP: [chars]	Next Hop Client changed the state.	nhrp	LOG_STD_ACTION
<del>DMVPN-5-NHRP_NH_DOWN</del>	5-Notice	[chars]: Next Hop [chars] : Tunnel: [chars] NBMA: [chars] for Tunnel: [chars] NBMA: [chars] is [chars] Reason: [chars]NHRP: [chars]	Next Hop Client changed the state.	nhrp	LOG_STD_ACTION
<del>DMVPN-5-NHRP_NH_UP</del>	5-Notice	[chars]: Next Hop [chars] : Tunnel: [chars] NBMA: [chars] for Tunnel: [chars] NBMA: [chars] is [chars]	Next Hop Client changed the state.	nhrp	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DMN5NHRP_NHC_UP	5-Notice	[chars]: Next Hop [chars] : Tunnel: [chars] NBMA: [chars] for Tunnel: [chars] NBMA: [chars] is [chars]	Next Hop Client changed the state.	nhrp	LOG_STD_ACTION
DMN5NHRP_NPDOWN	5-Notice	[chars]: Next Hop [chars] : Tunnel: [chars] NBMA: [chars] for Tunnel: [chars] NBMA: [chars] is [chars] Reason: [chars]NHRP: [chars]	Next Hop Peer changed the state.	nhrp	LOG_STD_ACTION
DMN5NHRP_NPDOWN	5-Notice	[chars]: Next Hop [chars] : Tunnel: [chars] NBMA: [chars] for Tunnel: [chars] NBMA: [chars] is [chars] Reason: [chars]NHRP: [chars]	Next Hop Peer changed the state.	nhrp	LOG_STD_ACTION
DMN5NHRP_NHP_UP	5-Notice	[chars]: Next Hop [chars] : Tunnel: [chars] NBMA: [chars] for Tunnel: [chars] NBMA: [chars] is [chars]	Next Hop Peer changed the state.	nhrp	LOG_STD_ACTION
DMN5NHRP_NHP_UP	5-Notice	[chars]: Next Hop [chars] : Tunnel: [chars] NBMA: [chars] for Tunnel: [chars] NBMA: [chars] is [chars]	Next Hop Peer changed the state.	nhrp	LOG_STD_ACTION
DMN5NHRP_NSDOWN	5-Notice	[chars]: Next Hop [chars] : Tunnel: [chars] NBMA: [chars] for Tunnel: [chars] NBMA: [chars] is [chars] Reason: [chars]NHRP: [chars]	Next Hop Client changed the state.	nhrp	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DMPN5NHRP_NHS_DOWN	5-Notice	[chars]: Next Hop [chars] : Tunnel: [chars] NBMA: [chars] for Tunnel: [chars] NBMA: [chars] is [chars] Reason: [chars]NHRP: [chars]	Next Hop Client changed the state.	nhrp	LOG_STD_ACTION
DMPN5NHRP_NHS_UP	5-Notice	[chars]: Next Hop [chars] : Tunnel: [chars] NBMA: [chars] for Tunnel: [chars] NBMA: [chars] is [chars]	Next Hop Client changed the state.	nhrp	LOG_STD_ACTION
DMPN5NHRP_NHS_UP	5-Notice	[chars]: Next Hop [chars] : Tunnel: [chars] NBMA: [chars] for Tunnel: [chars] NBMA: [chars] is [chars]	Next Hop Client changed the state.	nhrp	LOG_STD_ACTION
DMPN5NHRP_RES_REPLY	5-Notice	[chars]: [chars] [chars] sent via Tunnel: [chars] NBMA: [chars] to Tunnel: [chars] NBMA: [chars]	A NHRP Resolution Reply sent via the NHS Path	nhrp	LOG_STD_ACTION
DMPN5NHRP_RES_REPLY	5-Notice	[chars]: [chars] [chars] sent via Tunnel: [chars] NBMA: [chars] to Tunnel: [chars] NBMA: [chars]	A NHRP Resolution Reply sent via the NHS Path	nhrp	LOG_STD_ACTION
DMPN5NHRP_RES_REPLY	5-Notice	[chars]: resolution reply received on [chars] for dst : [chars] is dropped crypto session failed to come up	A NHRP Resolution Reply received through Hub which is dropped - crypto session failed to come up	nhrp	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>DMN5NHRP_RESOLUTION</del>	5-Notice	[chars]: resolution reply received on [chars] for dst : [chars] is dropped crypto session failed to come up	A NHRP Resolution Reply received through Hub which is dropped - crypto session failed to come up	nhrp	LOG_STD_ACTION
<del>DMN5NHRP_ROUTING</del>	5-Notice	Peer with Tunnel: [chars] NBMA: [chars] on [chars] [chars] with Reason :[chars] .	A short cut switching entry has been created	nhrp	LOG_STD_ACTION
<del>DMN5NHRP_ROUTING</del>	5-Notice	Peer with Tunnel: [chars] NBMA: [chars] on [chars] [chars] with Reason :[chars] .	A short cut switching entry has been created	nhrp	LOG_STD_ACTION
<del>DMN5NHRP_RESOLUTION</del>	6-Information	[chars]: [chars] for Address : [chars] is Timed-out	A NHRP Resolution Request has timed-out	nhrp	LOG_STD_ACTION
<del>DMN5NHRP_RESOLUTION</del>	6-Information	[chars]: [chars] for Address : [chars] is Timed-out	A NHRP Resolution Request has timed-out	nhrp	LOG_STD_ACTION
<del>DMN5NHRP_RESOLUTION</del>	6-Information	[chars]: Host with Tunnel: [chars] NBMA: [chars] [chars] Tunnel: [chars] NBMA: [chars]	A NHRP Resolution Reply has been received	nhrp	LOG_STD_ACTION
<del>DMN5NHRP_RESOLUTION</del>	6-Information	[chars]: Host with Tunnel: [chars] NBMA: [chars] [chars] Tunnel: [chars] NBMA: [chars]	A NHRP Resolution Reply has been received	nhrp	LOG_STD_ACTION
<del>DMN7NHRP_EVENT</del>	7-Debug	[chars]: [chars] [chars] [chars] [chars]	A Registration/Resolution Request/Reply Received/Sent	nhrp	LOG_STD_ACTION
<del>DMN7NHRP_EVENT</del>	7-Debug	[chars]: [chars] [chars] [chars] [chars]	A Registration/Resolution Request/Reply Received/Sent	nhrp	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DMVPN-7-NHRP_RES	7-Debug	[chars]: Host with Tunnel: [chars] NBMA: [chars] [chars] Tunnel: [chars] NBMA: [chars]	A NHRP Resolution Request has been received	nhrp	LOG_STD_ACTION
DMVPN-7-NHRP_RES	7-Debug	[chars]: Host with Tunnel: [chars] NBMA: [chars] [chars] Tunnel: [chars] NBMA: [chars]	A NHRP Resolution Request has been received	nhrp	LOG_STD_ACTION
DNET-3-HEARSELF	3-Error	Hello type [hec] for my address from [dec].[dec] via [chars]	The system is receiving its own DECnet packets. Either a serial line\n is looped back or another host with the same DECnet address is already\n present on the LAN.	-	"Check the serial lines if present and the DECnet configuration."
DNET-3-NOMEMORY	3-Error	Insufficient memory for DECnet accounting entry	The traffic information for a particular pair of DECnet nodes\n cannot be recorded due to a low memory condition.	decnet	LOG_STD_ACTION
DNET-4-DUPENTRY	4-Warning	Duplicate DECnet Accounting List Entry for nodes [dec].[dec] - [dec].[dec]	A synchronization problem has occurred whilst a new transit\n DECnet Accounting List Entry was being added and a duplicate entry\n has been found.	decnet	show decnet accounting
DNET-4-MAPCON	4-Warning	Map entry [dec].[dec] conflicts with adjacency to [dec].[dec]	Your DECnet configuration is incorrect. A host that is specified as\n nonlocal is present on your local network.	-	"Correct the configuration. Call your technical support representative\n if you need assistance."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DNLD-3-ERROR	3-Error	[chars]	Error on DNLD module.	-	LOGS_IDSHTTECHACION
DNLD-3-ERROR	3-Error	[chars]	Error on DNLD module.	-	LOGS_IDSHTTECHACION
<del>DNLDSPARMREGISTERED</del>	6-Information	Failed to register DNLD Application with DSPFARM\n	Failed to register DNLD Application with DSPFARM.	-	LOGS_IDSHTTECHACION
<del>DNLDSPARMREGISTERED</del>	6-Information	Failed to register DNLD Application with DSPFARM\n	Failed to register DNLD Application with DSPFARM.	-	LOGS_IDSHTTECHACION
DNSRVR3BADQUERY	3-Error	Bad DNS query from %i	A client sent a DNS query to the server which has been found to be incorrectly formatted.	-	"Check the DNS server and the network attached to it."
DNSRVR3NOINIT	3-Error	Can't initialize DNS server	Internal problems with initializing ports for the DNS server	-	"Make sure the DNS server port is available on the local machine."
<del>DNSRVR3CNOMETHOD</del>	3-Error	Low available memory: dropping TCP request from <cli [node].	There is not enough free memory to handle DNS queries.	-	"DNS server is automatically discarding DNS request traffic."
DNSRVR3TOOSHORT	3-Error	DNS query from [node]too short	A client sent a short DNS query packet to the server	-	"Check the client and the network attached to it."
<del>DNSRVR3CNOMETHOD</del>	3-Error	Low available memory: dropping <id# [dec]> from <cli [node].	There is not enough free memory to handle DNS queries.	-	"DNS server is automatically discarding DNS request traffic."
DMNIOBASM_FAILURE	2-Critical	[chars]	Failed to decode xml message containing global parameters	ng-pfr	"Check if software versions are compatible"
DMNIOBASM_FAILURE	2-Critical	[chars]	Failed to decode xml message containing global parameters	ng-pfr	"Check if software versions are compatible"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DOMAIN-2-IME	2-Critical	Immitigable event occurred. IME-ID=[node] Details: [chars]\n	Error encountered during TCA processing. The flow could not be placed on alternate path.	ng-pfr	"Troubleshoot the network for performance/bandwidth issues."
DOMAIN-2-IME	2-Critical	Immitigable event occurred. IME-ID=[node] Details: [chars]\n	Error encountered during TCA processing. The flow could not be placed on alternate path.	ng-pfr	"Troubleshoot the network for performance/bandwidth issues."
DOMAIN-2-IME_DETAILS	2-Critical	IME-ID=[node] [chars]\n	Error encountered during TCA processing. The flow could not be placed on alternate path.	ng-pfr	"Troubleshoot the network for performance/bandwidth issues."
DOMAIN-2-IME_DETAILS	2-Critical	IME-ID=[node] [chars]\n	Error encountered during TCA processing. The flow could not be placed on alternate path.	ng-pfr	"Troubleshoot the network for performance/bandwidth issues."
DOMAIN-2-PM_XML_FAILURE	2-Critical	[chars]	Failed to decode xml message containing pmi parameters	ng-pfr	"Check if software versions are compatible"
DOMAIN-2-PM_XML_FAILURE	2-Critical	[chars]	Failed to decode xml message containing pmi parameters	ng-pfr	"Check if software versions are compatible"
DOMAIN-2-POLICY_XML_FAILURE	2-Critical	[chars]	Failed to decode xml message containing policy definition	ng-pfr	"On Hub MC check if invalid characters are used in policy name"
DOMAIN-2-POLICY_XML_FAILURE	2-Critical	[chars]	Failed to decode xml message containing policy definition	ng-pfr	"On Hub MC check if invalid characters are used in policy name"
DOMAIN-3-HUBSIE_DERR	3-Error	[chars]	Hub site-id error notification.	ng-pfr	"Correct the Hub MC ip-address configuration"
DOMAIN-3-HUBSIE_DERR	3-Error	[chars]	Hub site-id error notification.	ng-pfr	"Correct the Hub MC ip-address configuration"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DOMAIN3INVALID_EXIT	3-Error	[chars]	Inavlid Exit notification.	ng-pfr	"Correct the PLR interface configuration"
DOMAIN3INVALID_EXIT	3-Error	[chars]	Inavlid Exit notification.	ng-pfr	"Correct the PLR interface configuration"
DOMAIN3PLR_INT_CFG	3-Error	[chars]	Conflicting Domain configuration exists on the selected WAN interface on border.	ng-pfr	"Correct the domain path configuration on selected WAN interface on border and retry."
DOMAIN3PLR_INT_CFG	3-Error	[chars]	Conflicting Domain configuration exists on the selected WAN interface on border.	ng-pfr	"Correct the domain path configuration on selected WAN interface on border and retry."
DOMAIN4BR_SHUTDOWN	4-Warning	Reason=[chars]	Border Shutdown Warning Message.	ng-pfr	LOG_SID_NO_ACTION
DOMAIN4BR_SHUTDOWN	4-Warning	Reason=[chars]	Border Shutdown Warning Message.	ng-pfr	LOG_SID_NO_ACTION
DOMAIN4DCA_DOMAIN_MAP	4-Warning	[chars]	DCA domain map error notification.	ng-pfr	"Correct the branch MC domain-map configuration."
DOMAIN4DCA_DOMAIN_MAP	4-Warning	[chars]	DCA domain map error notification.	ng-pfr	"Correct the branch MC domain-map configuration."
DOMAIN4MC_SHUTDOWN	4-Warning	Reason=[chars]	Master Controller Shutdown Warning Message.	ng-pfr	LOG_SID_NO_ACTION
DOMAIN4MC_SHUTDOWN	4-Warning	Reason=[chars]	Master Controller Shutdown Warning Message.	ng-pfr	LOG_SID_NO_ACTION
DOMAIN4DP_PREFIX_REACH	4-Warning	[chars]	Prefix not reachable on the channel	ng-pfr	"Verify the reachability of the prefix"
DOMAIN4DP_PREFIX_REACH	4-Warning	[chars]	Prefix not reachable on the channel	ng-pfr	"Verify the reachability of the prefix"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DOMAIN4SITE_PREFIX	4-Warning	[chars]	Improper site prefix configuration detected.	ng-pfr	"Correct your site prefix configuration"
DOMAIN4SITE_PREFIX	4-Warning	[chars]	Improper site prefix configuration detected.	ng-pfr	"Correct your site prefix configuration"
DOMAIN-4-SMP	4-Warning	[chars]	Smart-Probe config is being changed	ng-pfr	LOG_SID_NO_ACTION
DOMAIN-4-SMP	4-Warning	[chars]	Smart-Probe config is being changed	ng-pfr	LOG_SID_NO_ACTION
DOMAIN4TUNSCOMBRAID	4-Warning	[chars]	Tunnel source overlapped notification.	ng-pfr	"Correct the source configuration."
DOMAIN4TUNSCOMBRAID	4-Warning	[chars]	Tunnel source overlapped notification.	ng-pfr	"Correct the source configuration."
DOMAIN4WAN_INTERFACE	4-Warning	Interface \[chars]\ received probes but no \dynamic-path\ configured	-	-	-
DOMAIN4WAN_INTERFACE	4-Warning	Interface \[chars]\ received probes but no \dynamic-path\ configured	-	-	-
DOMAIN4WAN_INTERFACE	4-Warning	Interface \[chars]\ discovered as WAN interface. But DCA already configured.	Branch site border router WAN interface must have dynamic-path configured	ng-pfr	"configure domain <domain name> dynamic-path on WAN interface"
DOMAIN4WAN_INTERFACE	4-Warning	Interface \[chars]\ discovered as WAN interface. But DCA already configured.	Branch site border router WAN interface must have dynamic-path configured	ng-pfr	"configure domain <domain name> dynamic-path on WAN interface"
DOMAIN5BR_STATUS	5-Notice	[chars]	Border Status Notification.	ng-pfr	LOG_SID_NO_ACTION
DOMAIN5BR_STATUS	5-Notice	[chars]	Border Status Notification.	ng-pfr	LOG_SID_NO_ACTION
DOMAIN5MC_STATUS	5-Notice	[chars]	Master Controller Status Notification.	ng-pfr	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DOMAIN-5-MC_STATUS	5-Notice	[chars]	Master Controller Status Notification.	ng-pfr	LOG_SID_NO_ACTION
DOMAIN-5-TC_PATH_CHG	5-Notice	Traffic class Path Changed. Details: [chars]\n	A Path chage is made.	ng-pfr	LOG_SID_NO_ACTION
DOMAIN-5-TC_PATH_CHG	5-Notice	Traffic class Path Changed. Details: [chars]\n	A Path chage is made.	ng-pfr	LOG_SID_NO_ACTION
DOMAIN-5-TCA	5-Notice	[chars] Received. Details: [chars]\n	A threshold crossing alarm is raised.	ng-pfr	LOG_SID_NO_ACTION
DOMAIN-5-TCA	5-Notice	[chars] Received. Details: [chars]\n	A threshold crossing alarm is raised.	ng-pfr	LOG_SID_NO_ACTION
DOMAIN-6-INIT	6-Information	[chars]	Informational Message. Domain master controller initialization completed	ng-pfr	LOG_SID_NO_ACTION
DOMAIN-6-INIT	6-Information	[chars]	Informational Message. Domain master controller initialization completed	ng-pfr	LOG_SID_NO_ACTION
DOMAIN-6-PCPY_DOWNLOAD	6-Information	Master Controller policy downloaded: site_id=[node]domain=[chars] vrf=[chars]	Master Controller policy downloaded.	ng-pfr	LOG_SID_NO_ACTION
DOMAIN-6-PCPY_DOWNLOAD	6-Information	Master Controller policy downloaded: site_id=[node]domain=[chars] vrf=[chars]	Master Controller policy downloaded.	ng-pfr	LOG_SID_NO_ACTION
DOMAIN-6-TCID_RESET	6-Information	Master Controller traffic class id counter got reset: site_id=[node]domain=[chars] vrf=[chars]	Master Controller traffic class id counter got reset.	ng-pfr	LOG_SID_NO_ACTION
DOMAIN-6-TCID_RESET	6-Information	Master Controller traffic class id counter got reset: site_id=[node]domain=[chars] vrf=[chars]	Master Controller traffic class id counter got reset.	ng-pfr	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DOMAIN-6-TC_CTRL	6-Information	Traffic Class Controlled. Details: [chars]\n	A Traffic Class is Controlled.	ng-pfr	LOG_SID_NO_ACTION
DOMAIN-6-TC_CTRL	6-Information	Traffic Class Controlled. Details: [chars]\n	A Traffic Class is Controlled.	ng-pfr	LOG_SID_NO_ACTION
DOMAIN-6-TC_NEW	6-Information	Traffic Class Learned. Details: [chars]\n	A Traffic Class is Learned.	ng-pfr	LOG_SID_NO_ACTION
DOMAIN-6-TC_NEW	6-Information	Traffic Class Learned. Details: [chars]\n	A Traffic Class is Learned.	ng-pfr	LOG_SID_NO_ACTION
DOSFS-3-RESETEERR	3-Error	[chars] [chars]	disk could not be reset while the system is initiated reload. This will cause a transient disk error disk timeout error when the ROMMON initialization code tries to reads the DIB. This is a transient error and the system will be able to access the disk and continue normal operation.	-	LOG_SID_NO_ACTION
DOSFS-4-DFS_FCK_ERR	4-Warning	Error while running fsck on the file [chars].	Fsck is running in a loop while walking through the cluster chain of a file and has aborted.	ata-filesystem	LOG_SIDDISTACTEALS
DOSFS-5-DFS_CLOSE_ERR	5-Notice	Error during close of the file [chars]. [chars]	An error occurred during a file close operation.	-	"Enter the <Cmd> fix <NoCmd> <CmdArg> filesystem prefix:<NoCmdArg> " "command to check and attempt to repair the disk. If this does not " "fix the problem format the disk."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DOSFS-5-DIBERR	5-Notice	[chars] [chars]	The system cannot boot a image from the Flash disk because the Device Information Block is different. The Flash disk can be read by the router but will require formatting by the router before an image can be booted from it.	-	"Follow any instructions provided in the error " "message. Before storing a image in the Flash disk " "and trying to boot from this device enter the " "format command to format the flash disk from the " "router. Then copy the desired image to the Flash " "disk and then boot from this device."
<del>DOT1AD4DOT1Q_TUNNEL_PORT</del>	4-Warning	Port [chars] is a dot1q-tunnel port it conflicts with Dot1ad configuration	Dot1ad configuration cannot co-exist with dot1q-tunnel ports.	dot1ad	"Turn off dot1q-tunnel configuration on the ports before enabling Dot1ad."
<del>DOT1AD4DOT1X_PORT</del>	4-Warning	Port [chars] is configured for DOT1X it conflicts with Dot1ad configuration	Dot1ad configuration cannot co-exist with DOT1X enabled ports.	dot1ad	"Turn off DOT1X configuration on the ports before enabling Dot1ad."
<del>DOT1AD4ETHERNET_MODULE</del>	4-Warning	Port [chars] ethertype cannot be changed to Dot1ad ethertype it conflicts with Dot1ad configuration	The ethertype on the port cannot be changed to Dot1ad ethertype.	dot1ad	"Replace the module with one which can support ethertype change or " "power down the module before enabling Dot1ad."
<del>DOT1AD4L2PT_PORT</del>	4-Warning	Port [chars] is a l2protocol-tunnel port it conflicts with Dot1ad configuration	Dot1ad configuration cannot co-exist with l2protocol-tunnel ports.	dot1ad	"Turn off l2protocol-tunnel configuration on the ports before enabling " "Dot1ad."
<del>DOT1AD4LACP_PORT</del>	4-Warning	Port [chars] is a part of an LACP channel it conflicts with Dot1ad configuration	Dot1ad configuration cannot co-exist with LACP ports.	dot1ad	"Turn off LACP configuration on the ports before enabling Dot1ad."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>DOT1AD4OAM_PORT</del>	4-Warning	Port [chars] is configured for OAM it conflicts with Dot1ad configuration	Dot1ad configuration cannot co-exist with OAM enabled ports.	dot1ad	"Turn off OAM configuration on the ports before enabling Dot1ad."
<del>DOT1AD4RSDRUM_MAE</del>	4-Warning	Platform does not have resouces to support dot1ad configuration	In the 6500 platform hardware match registers are not available for dot1ad use.	dot1ad	"Unconfigure the features using the match registers cfm cgvrrp and "
<del>DOT1AD4STP_CONFLICT</del>	4-Warning	STP mode conflicts with Dot1ad configuration as it is not in MST mode	Current STP mode conflicts with Dot1ad configuration.	dot1ad	"Change the STP mode to MST before enabling Dot1ad."
<del>DOT1QUNNING_MU_WARNG</del>	4-Warning	\nSystem MTU of [dec] might be insufficient for 802.1Q tunnelling.\n802.1Q tunnelling requires system MTU size of [dec] to handle maximum size ethernet frames.\n\n	With 802.1Q tunnelling the system MTU setting needs to take into account the four byte overhead associated with the additional 802.1Q tag.	firmware	"Issue the <CmdBold>system mtu<noCmdBold> "global configuration command to adjust system MTU to take into " "account the additional 802.1Q tag."
<del>DOT1X_MOD3_NULL_PIR</del>	3-Error	Unexpected null pointer in [chars] at [dec]	An internal software error occurred.	-	<del>LOG_SIDSH_TECH_ACTION</del>
<del>DOT1X_SWITCH_PROC_STARTER</del>	4-Warning	Unable to start dot1x switch process.	The system failed to create the Dot1x switch process.	-	"Reload the device"
<del>DOT1X_SECURED_ADDRESSES</del>	5-Notice	Unable to add address [enet] on [chars] AuditSessionID [chars]	The authenticated host's address could not be added. This is likely because either the TCAM is full or the address exists as a secure address on another port.	-	"If the TCAM is full clear some dynamic addresses to make "room for the host's address. If the host's address is " "secured on another port manually remove it from that port."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>DOTSVCHERRMVLAN</del>	5-Notice	Attempt to assign primary VLAN [chars] to 802.1x port [chars] AuditSessionID [chars]	An attempt was made to assign a primary VLAN to an 802.1x port which is not allowed.	-	"Update the configuration to use a different VLAN."
<del>DOTSVCHERRMVLAN</del>	5-Notice	Attempt to assign invalid secondary VLAN [chars] to PVLAN host 802.1x port [chars] AuditSessionID [chars]	An attempt was made to assign a non-secondary VLAN to a PVLAN host 802.1x port.	-	"Change the mode of the port so that it is no longer a PVLAN host " "port or use a valid secondary VLAN."
<del>DOTSVCHERRMVLAN</del>	5-Notice	Attempt to assign VLAN [chars] whose primary VLAN does not exist or is shutdown to 802.1x port [chars] AuditSessionID [chars]	An attempt was made to assign a private VLAN whose primary VLAN does not exist or is shutdown.	-	"Make sure the primary VLAN exists and is not shutdown. Also verify that " "the private VLAN is associated with a primary VLAN."
<del>DOTSVCHERRMVLAN</del>	5-Notice	Attempt to assign secondary VLAN [chars] to non-PVLAN host 802.1x port [chars] AuditSessionID [chars]	An attempt was made to assign a secondary VLAN to a port that is not a PVLAN host port which is not allowed.	-	"Change the mode of the port so that it is configured as a PVLAN host " "port or use a different VLAN that is not configured as a secondary " "VLAN."
<del>DOTSVCHERRMSPAN</del>	5-Notice	Attempt to assign VLAN [chars] to 802.1x port [chars] which is configured as a SPAN destination AuditSessionID [chars]	An attempt was made to assign a VLAN to an 802.1x port which is configured as a SPAN destination port	-	"Change the SPAN configuration so that the port is no longer a " "SPAN destination port or change the configuration so that no " "VLAN is assigned."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>DISVLAN</del> DISVLANDANCE	5-Notice	Multi-Domain Authentication cannot activate because Data and Voice VLANs are the same on port AuditSessionID [chars]	Multi-Domain Authentication host mode cannot activate if the configured Data VLAN on a port is the same as Voice VLAN.	-	"Change either the Voice VLAN or the access VLAN on " "the interface so they are not equal anymore. This will cause " "Multi-Domain authentication to activate."
<del>DISVLAN</del> DISVLANQWLAN	5-Notice	Data VLAN [chars] on port [chars] cannot be equivalent to the Voice VLAN AuditSessionID [chars]	An attempt was made to assign a data VLAN to an 802.1x port that is the same as the voice VLAN.	-	"Change either the Voice VLAN or the access/802.1x assigned VLAN on " "the interface so they are not equal anymore. This will cause the " "authentication to proceed normally on the next retry."
<del>DISVLAN</del> DISVLANINTERNAL	5-Notice	Attempt to assign internal VLAN [chars] to 802.1x port [chars] AuditSessionID [chars]	An attempt was made to assign an invalid VLAN to an 802.1x port. The VLAN specified is used internally and cannot be assigned to this port.	-	"Update the configuration not to use this VLAN."
<del>DISVLAN</del> DISVLANINVALID	5-Notice	Attempt to assign invalid VLAN [chars] to 802.1x port [chars] AuditSessionID [chars]	An attempt was made to assign an invalid VLAN to an 802.1x port. The VLAN specified is out of range and cannot be assigned to this port.	-	"Update the configuration to use a valid VLAN."
<del>DISVLAN</del> DISVLANNOND	5-Notice	Attempt to assign non-existent or shutdown VLAN [chars] to 802.1x port [chars] AuditSessionID [chars]	An attempt was made to assign a VLAN to an 802.1x port but the VLAN was not found in the VTP database.	-	"Make sure the VLAN exists and is not shutdown or use another VLAN."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>DOT1XSWITCHERRVLANRTEPR</del>	5-Notice	Attempt to assign VLAN [chars] to routed 802.1x port [chars] AuditSessionID [chars]	An attempt was made to assign a VLAN to a routed 802.1x port which is not allowed.	-	"Change the mode of the port so that it is no longer a routed port " "or change the configuration so that no VLAN is assigned."
<del>DOT1XSWITCHERRVLANPROMPR</del>	5-Notice	Attempt to assign VLAN [chars] to promiscuous 802.1x port [chars] AuditSessionID [chars]	An attempt was made to assign a VLAN to a promiscuous 802.1x port which is not allowed.	-	"Change the mode of the port so that it is no longer a promiscuous port " "or change the configuration so that no VLAN is assigned."
<del>DOT1XSWITCHERRVLANRESMD</del>	5-Notice	Attempt to assign reserved VLAN [chars] to 802.1x port [chars] AuditSessionID [chars]	An attempt was made to assign an invalid VLAN to an 802.1x port. The VLAN specified is a reserved VLAN and cannot be assigned to this port.	-	"Update the configuration not to use this VLAN."
<del>DOT1XSWITCHERRVLANRSPAN</del>	5-Notice	Attempt to assign RSPAN VLAN [chars] to 802.1x port [chars]. 802.1x is incompatible with RSPAN AuditSessionID [chars]	An attempt was made to assign a Remote SPAN VLAN to an 802.1x port. Remote SPAN should not be enabled on a VLAN in which ports are configured with 802.1x enabled.	-	"Either disable Remote SPAN configuration on the VLAN OR disable " "802.1x on all the ports in this VLAN."
DOT1X3PROC_START_ERR	3-Error	polaris-smd	"Dot1x unable to start."	"The system failed to create the Dot1x process."	"Restart Dot1x process by entering <cmd>dot1x system-auth-control<cmd> command. If this message recurs
DOT1X3PROC_START_ERR	3-Error	polaris-smd	"Dot1x unable to start."	"The system failed to create the Dot1x process."	"Restart Dot1x process by entering <cmd>dot1x system-auth-control<cmd> command. If this message recurs

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DOT1X-3-PROC_START_ERR	3-Error	polaris-smd	"Dot1x unable to start."	"The system failed to create the Dot1x process."	"Restart Dot1x process by entering <cmd>dot1x system-auth-control<cmd> command. If this message recurs
DOT1X-3-PROC_START_ERR	3-Error	polaris-smd	"Dot1x unable to start."	"The system failed to create the Dot1x process."	"Restart Dot1x process by entering <cmd>dot1x system-auth-control<cmd> command. If this message recurs
DOT1X-3-UNKN_ERR	3-Error	polaris-smd	"An unknown operational error occurred."	"The Dot1x process cannot operate due to an internal system error."	"Reload the device/process"
DOT1X-3-UNKN_ERR	3-Error	polaris-smd	"An unknown operational error occurred."	"The Dot1x process cannot operate due to an internal system error."	"Reload the device/process"
DOT1X-3-UNKN_ERR	3-Error	polaris-smd	"An unknown operational error occurred."	"The Dot1x process cannot operate due to an internal system error."	"Reload the device/process"
DOT1X-3-UNKN_ERR	3-Error	polaris-smd	"An unknown operational error occurred."	"The Dot1x process cannot operate due to an internal system error."	"Reload the device/process"
DOT1X-3-UNKN_ERR	3-Error	polaris-smd	"An unknown operational error occurred."	"The Dot1x process cannot operate due to an internal system error."	"Reload the device/process"
DOT1X-4-NO_EAPOL_RESPONSE	4-Warning	polaris-smd	"The interface[chars] has an 802.1x capable client with MAC[chars]"	"An EAPOL ping was sent out on this port to determine 802.1x readiness of the client attached. An EAPOL response has been received by the device such as a PC."	"No action required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DOT1X4MEM_UNAVAIL	4-Warning	polaris-smd	"The interface[chars] has an 802.1x capable client with MAC[chars]"	"An EAPOL ping was sent out on this port to determine 802.1x readiness of the client attached. An EAPOL response has been received by the device such as a PC."	"No action required."
DOT1X4MEM_UNAVAIL	4-Warning	polaris-smd	"The interface[chars] has an 802.1x capable client with MAC[chars]"	"An EAPOL ping was sent out on this port to determine 802.1x readiness of the client attached. An EAPOL response has been received by the device such as a PC."	"No action required."
DOT1X4MEM_UNAVAIL	4-Warning	polaris-smd	"The interface[chars] has an 802.1x capable client with MAC[chars]"	"An EAPOL ping was sent out on this port to determine 802.1x readiness of the client attached. An EAPOL response has been received by the device such as a PC."	"No action required."
DOT1X4MEM_UNAVAIL	4-Warning	Memory was not available to perform the 802.1X action. AuditSessionID [chars]	Insufficient system memory is available to perform the Dot1x Authentication.	-	"Reduce other system activity to ease memory "demands. If conditions warrant upgrade to "a larger memory configuration."
DOT1X4MEM_UNAVAIL	4-Warning	Memory was not available to perform the 802.1X action. AuditSessionID [chars]	Insufficient system memory is available to perform the Dot1x Authentication.	-	"Reduce other system activity to ease memory "demands. If conditions warrant upgrade to "a larger memory configuration."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DOT1X-4MEM_UNAVAIL	4-Warning	polaris-smd	"Memory was not available to perform the 802.1X action. AuditSessionID[chars]"	"Insufficient system memory is available to perform the Dot1x Authentication."	"Reduce other system activity to ease memory demands. If conditions warrant
DOT1X-4MEM_UNAVAIL	4-Warning	polaris-smd	"Memory was not available to perform the 802.1X action. AuditSessionID[chars]"	"Insufficient system memory is available to perform the Dot1x Authentication."	"Reduce other system activity to ease memory demands. If conditions warrant
DOT1X-4MEM_UNAVAIL	4-Warning	polaris-smd	"Memory was not available to perform the 802.1X action. AuditSessionID[chars]"	"Insufficient system memory is available to perform the Dot1x Authentication."	"Reduce other system activity to ease memory demands. If conditions warrant
DOT1X-4MEM_UNAVAIL	4-Warning	polaris-smd	"Memory was not available to perform the 802.1X action. AuditSessionID[chars]"	"Insufficient system memory is available to perform the Dot1x Authentication."	"Reduce other system activity to ease memory demands. If conditions warrant
DOT1X-4PROC_START_ERR	4-Warning	Dot1x unable to start.	The system failed to create the Dot1x process.	-	"Restart Dot1x process by entering <cmd>dot1x " <del>system-auth-control&lt;cmd&gt;</del> command. If this message " "recurs Reload the device."
DOT1X-4PROC_START_ERR	4-Warning	Dot1x unable to start.	The system failed to create the Dot1x process.	-	"Restart Dot1x process by entering <cmd>dot1x " <del>system-auth-control&lt;cmd&gt;</del> command. If this message " "recurs Reload the device."
DOT1X-4UNKN_ERR	4-Warning	An unknown operational error occurred.	The Dot1x process cannot operate due to an internal system error.	-	"Reload the device"
DOT1X-4UNKN_ERR	4-Warning	An unknown operational error occurred.	The Dot1x process cannot operate due to an internal system error.	-	"Reload the device"



<del>Facility</del> Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DOT1X-5-FAIL	5-Notice	Authentication failed for client [chars] on Interface [chars]	Authentication was unsuccessful.	-	LOG_SID_NO_ACTION
DOT1X-5-FAIL	5-Notice	Authentication failed for client [chars] on Interface [chars]	Authentication was unsuccessful.	-	LOG_SID_NO_ACTION
DOT1X-5-FAIL	5-Notice	polaris-smd	"Authentication failed for client (%s) with reason (%s) on Interface[chars] AuditSessionID[chars]"	"Dot1x authentication was unsuccessful."	"No action is required."
DOT1X-5-FAIL	5-Notice	polaris-smd	"Authentication failed for client (%s) on Interface[chars] AuditSessionID[chars]"	"Dot1x authentication was unsuccessful."	"No action is required."
DOT1X-5-FAIL	5-Notice	polaris-smd	"Authentication failed for client (%s) on Interface[chars] AuditSessionID[chars]"	"Dot1x authentication was unsuccessful."	"No action is required."
DOT1X-5-FAIL	5-Notice	polaris-smd	"Authentication failed for client (%s) with reason (%s) on Interface[chars] AuditSessionID[chars]"	"Dot1x authentication was unsuccessful."	"No action is required."
<del>DOT1X-5-FAIL</del>	5-Notice	EAPOL packet size[dec] to be sent is larger than MTU	Targetted EAPOL packet size is larger than mtu size of the port on which client is connected and hence ignoring the packet to be sent out	802.1x	"Configure AAA server to fragement eap-method" " data so that EAPOL size is smaller than interface MTU size"
<del>DOT1X-5-FAIL</del>	5-Notice	EAPOL packet size[dec] to be sent is larger than MTU	Targetted EAPOL packet size is larger than mtu size of the port on which client is connected and hence ignoring the packet to be sent out	802.1x	"Configure AAA server to fragement eap-method" " data so that EAPOL size is smaller than interface MTU size"
<del>DOT1X-5-FAIL</del>	5-Notice	polaris-smd	"EAPOL packet size(%d) to be sent is larger than MTU size(%d) of the interface[chars]"	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>DOT1X-NOE_LACREPOL</del>	5-Notice	polaris-smd	"EAPOL packet size(%d) to be sent is larger than MTU size(%d) of the interface[chars]	-	-
<del>DOT1XRESULT_OVERRIDE</del>	5-Notice	Authentication result overridden for client [chars] on Interface [chars]	Authentication result was overridden	-	LOG_SID_NO_ACTION
<del>DOT1XRESULT_OVERRIDE</del>	5-Notice	Authentication result overridden for client [chars] on Interface [chars]	Authentication result was overridden	-	LOG_SID_NO_ACTION
<del>DOT1XRESULT_OVERRIDE</del>	5-Notice	polaris-smd	"Authentication result overridden for client (%s) on Interface[chars] AuditSessionID[chars]"	"Authentication result was overridden"	"No action is required."
<del>DOT1XRESULT_OVERRIDE</del>	5-Notice	polaris-smd	"Authentication result overridden for client (%s) on Interface[chars] AuditSessionID[chars]"	"Authentication result was overridden"	"No action is required."
<del>DOT1XRESULT_OVERRIDE</del>	5-Notice	polaris-smd	"Authentication result overridden for client (%s) on Interface[chars] AuditSessionID[chars]"	"Authentication result was overridden"	"No action is required."
<del>DOT1XRESULT_OVERRIDE</del>	5-Notice	polaris-smd	"Authentication result overridden for client (%s) on Interface[chars] AuditSessionID[chars]"	"Authentication result was overridden"	"No action is required."
DOT1X-5-SUCCESS	5-Notice	Authentication successful for client [chars] on Interface [chars]	Authentication was successful.	-	LOG_SID_NO_ACTION
DOT1X-5-SUCCESS	5-Notice	Authentication successful for client [chars] on Interface [chars]	Authentication was successful.	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DOT1X-5-SUCCESS	5-Notice	polaris-smd	"Authentication successful for client (%s) on Interface[chars] AuditSessionID[chars]"	"Dot1x authentication was successful."	"No action is required."
DOT1X-5-SUCCESS	5-Notice	polaris-smd	"Authentication successful for client (%s) on Interface[chars] AuditSessionID[chars]"	"Dot1x authentication was successful."	"No action is required."
DOT1X-5-SUCCESS	5-Notice	polaris-smd	"Authentication successful for client (%s) on Interface[chars] AuditSessionID[chars]"	"Dot1x authentication was successful."	"No action is required."
DOT1X-5-SUCCESS	5-Notice	polaris-smd	"Authentication successful for client (%s) on Interface[chars] AuditSessionID[chars]"	"Dot1x authentication was successful."	"No action is required."
<del>DOT1X-6-INFO</del>	6-Information	The interface [chars] has an 802.1x capable client with MAC [enet]	An EAPOL ping was sent out on this port to determine 802.1x readiness of the client attached. An EAPOL response has been received by the device such as a PC.	802.1x	"No action required."
<del>DOT1X-6-INFO</del>	6-Information	The interface [chars] has an 802.1x capable client with MAC [enet]	An EAPOL ping was sent out on this port to determine 802.1x readiness of the client attached. An EAPOL response has been received by the device such as a PC.	802.1x	"No action required."
DPSYSLOGEVENT_ERR	3-Error	Pipeline event - [chars] [chars]	Output to syslog from pipeline	-	""
DPSYSLOGEVENT_WARN	4-Warning	Pipeline event - [chars] [chars]	Output to syslog from pipeline	-	""

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DPSS3LOGEVENT_NO	6-Information	Pipeline event - [chars] [chars]	Output to syslog from pipeline	-	""
DPSS-2-IPC_INIT	2-Critical	IPC message handler registration failure rc %u	The NAT proxy has receive an IPC with an unexpect format/data	cpp-ucode	LOG_STD_ACTION
DPSS3DPSS_INT_FAILED	3-Error	DPSS [chars] Register failed	DPSS Initialization of registration failed.	cpp-ucode	LOG_STD_ACTION
DPSS-3-IPC_NORES	3-Error	No space for the IPC reply size %u	For a request from upper DPSS software stack layers it was not possible to allocate space for a reply for the specified size. The consequence of this could be a stuck monitor that cannot be established etc. In rare cases this could also affect other operations such as feature activation.	qfp-dpss	"This is normally a software issue. " LOG_SID_RECUR_ACTION
DPSS3IPC_OPEN_REPLY	3-Error	IPC Open Reply failed request %u	For a request from upper DPSS software stack layers it was not possible to open the reply buffer. The consequence of this could be a stuck monitor that cannot be established etc. In rare cases this could also affect other operations such as feature activation.	qfp-dpss	"This is normally a software issue. " LOG_SID_RECUR_ACTION
DPSS3MEM_INT_FAILED	3-Error	Allocation of [chars] memory failed for DPSS	DPSS Initialization of channel pool failed.	cpp-ucode	LOG_STD_ACTION
DPSS3RHCANT_FAILED	3-Error	Register to Generic Packet Replication failed for DPSS	DPSS Initialization of packet replication registration failed.	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DRIP-3-DRIPFAIL	3-Error	DRIP: Assertion failed: [chars]	An internal software error has occurred.	-	LOG_STD_ACTION
DRIP-6-DRIP_CONFLICT	6-Information	DRIP conflict with CRF [dec].	A DRIP conflict has occurred. The virtual ring or pseudo ring's\n\ CRF is being re-used in the network.	-	"Make sure that the CRF vlanid of the virtual ring and the \n\ pseudo ring is unique in the network."
DRMI-3-IPC_ERROR	3-Error	[chars][chars] [hec] rc:[chars]	ERM Framework is experiencing errors when communicating to Line Cards using IPC	rmi	"show ipc ports"
DRMI-3-ISSU_ERR	3-Error	[chars] error:[dec]	ERM Framework is experiencing ISSU Errors	rmi	"show ipc ports"
DRMI-3-ISSU_MTU	3-Error	Client id:[dec] MTU failed error:[dec]	ERM Framework is experiencing Errors when performing ISSU GET MTU during a transmit operation	rmi	"show issu nego"
DRMI-3-ISSU_RCV	3-Error	Client id:[dec] receive failed error:[dec]	ERM Framework is experiencing Errors when performing ISSU Transformation during a receive operation	rmi	"show ipc ports"
DRMI-3-ISSU_XMIT	3-Error	Client id:[dec] xmit failed error:[dec]	ERM Framework is experiencing Errors when performing ISSU Transformation during a transmit operation	rmi	"show ipc ports"
DROP-3-DOUBLE_DROP	3-Error	First drop error cause [node]update stat cause [node]trace: [hec] [hec]	The drop infrastructure was called for a packet that was previously dropped.	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DROP-3-RESERVED	3-Error	[chars]	An invalid drop cause was passed to the drop infrastructure.	cpp-unicode	LOG_STD_ACTION
DRP3MULTICOMMAND	3-Error	multiple DRP commands encountered	Multiple DRP commands were found in a single DRP packet.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
DRP-3-NOSOCKET	3-Error	Unable to open socket	The requested operation could not be accomplished because of a low\n\ memory condition.	-	"Reduce other system activity to ease memory demands. If conditions\n\ warrant upgrade to a larger memory configuration."
DRP-3-NOWRITE	3-Error	unable to send response to [node][dec]	A software or hardware error occurred.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
DRP-3-SUBNETTED	3-Error	unable to determine metric for [node][node]subnetted	A software or hardware error occurred.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
DRP-7-NOROUTE	7-Debug	no route for destination %i	A software or hardware error occurred.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
DS_MODEM-3-BADCB	3-Error	Unexpected DSIP data callback for modem	An unexpected software event occurred.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DS_MODEM#FLOW_CNTRL	3-Error	DS-RS flow control has got out of sync connection has too many particles free.\n\ slot:[dec] ttynum:[dec] parts_avail:[dec]	Indicates the flow control accounting on the DS has got out of sync.\n\	-	LOG_STD_ACTION
DS_MODEM#NORXPAK	3-Error	Static receive paktype unavailable	Temporarily unable to allocate particle for sending traffic to\n\ modem module indicates a break down of flow control between RS-DS.	-	LOG_STD_ACTION
DS_PHY2#UPX_SPI_ERR	2-Critical	[chars]	-	-	-
DS_PHY3#RM_IBF_ERROR	3-Error	Remora hw reset failure - [chars]	Cannot hw reset DS PHY	ubr10k-sw	"Copy the error message exactly as it appears and report it to your " "technical support"
DS_PHY3#UPGRADE_ERROR	3-Error	check/upgrade failure - [chars]	upconverter - can't check version or upgrade	ubr10k-sw	"check type of upconverter"
DS_TDM3#ASSERT_FAIL	3-Error	Slot [dec]: Assertion failed: file '[chars]' line [dec]	An internal sanity check failed.	-	""
DS_TDM3#BAD_CONN	3-Error	Slot [dec]: unrecognized TDM connect message received [dec] on	An unrecognized TDM connect message was received.	-	""
DS_TDM3#BAD_DISCONN	3-Error	Slot [dec]: unrecognized TDM disconnect message received [dec] on	An unrecognized TDM disconnect message was received.	-	""
DS_TDM3#BAD_DSIP	3-Error	Slot [dec]: unrecognized DSIP message received [dec] on [chars] feature board	An unrecognized DSIP message was received.	-	""

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DS_TDM3BAD_MAPPING	3-Error	Slot [dec]: Legacy FB [chars] with static port-to-DS0 mapping	A software error lead to dynamic port-to-DS0 mapping info being passed to a statically-mapped FB.	-	""
DS_TDM3BAD_SETUP	3-Error	Slot [dec]: [chars] powered-up with one or more incorrect default settings [chars]	-	-	""
DS_TDM3CONV_CLOSE	3-Error	Slot [dec]: open MT8986 addr: 0x[hec] connection failed - STo[dec] CHo[dec]	An attempt to disable a rate converted connection failed.	-	""
DS_TDM3CONV_OPEN	3-Error	Slot [dec]: open MT8986 addr: 0x[hec] [chars] connection failed -	An attempt to establish a rate converted connection failed.	-	""
DS_TDM3EXCIRNOCON	3-Error	Slot [dec]: got disc msg for non-existent conn: [hex] [hex] [hex] [hex]	The FB was asked to disconnect a connection that it didn't know about.	-	""
DS_TDM3RECOMB_BUSE	3-Error	Slot [dec]: convention broken for Mezz's Recomb. bus t'slots: [hex] [hex] [hex] [hex]	-	-	""
DS_TDM-3-S4_INT	3-Error	Slot [dec]: [chars] generated interrupt [chars]	Raiko-based FB's TDM Mezzanine card has no free Recombination bus DS0s.	-	""
DS_TDM3-IDM_CLOSE	3-Error	Slot [dec]: close MT90820 addr: 0x[hec] connection failed - STo[dec] CHo[dec]	An attempt to disable a digitally-switched connection failed.	-	""



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DS_TDM3-TDM_OPEN	3-Error	Slot [dec]: open MT90820 addr: 0x[hec] connection failed -	An attempt to establish a digitally-switched connection failed.	-	""
DS_TDM3-UNEXPECTED_INT	3-Error	Slot [dec]: got unexpected interrupt from masked-out source '[chars]'	An interrupt was received from the specified source despite it being masked-out.	-	""
DS_TDM3-UNSUPP_MEZZNR	3-Error	Slot [dec]: the detected version [node]of Mezzanine card is not	The software does not support the Mezzanine card currently installed on the Raiko card.	-	""
DS_TDM3-VERIFY_DISCONNECT	3-Error	Slot [dec]: [chars] failed to verify disconnect: sto = [dec] ch_out = [dec]	An attempt to verify a TDM hardware component failed.	-	""
DS_TDM3-VERIFY_HIOWMEM	3-Error	Slot [dec]: [chars] failed to verify himem or lowmem: sto = [dec] ch_out = [dec] sti = [dec] ch_in = [dec]	An attempt to verify a TDM hardware component failed.	-	""
DS_TDM3-VERIFY_IMS	3-Error	Slot [dec]: [chars] failed to verify IMS: 0x[hec]	An attempt to verify a TDM hardware component failed.	-	""
DS0_DUMP3-INIT_FAIL	3-Error	DS0 PCM Tracer is not initialized.	DS0 dump process can't be initialized.	DS_DUMPDISCONNECT	"Make sure there is enough memory in the system and IOS is properly " "installed."
DS_DUMP3-MICROCMEM	3-Error	Process memory allocation failed for PCM capture: size 0x[node]X.	The free process memory in the system is not enough for the PCM capture session.	DS_DUMPDISCONNECT	"Refer to the user guide for the estimation of process memory needed " "for PCM capture. Do 'show memory' to make sure there is enough memory " "before PCM capture starts."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ISDMP</del> MRCECSIPED	3-Error	PCM Trace/ds0 dump is not supported on slot [node]	Can't execute this command on the slot number specified.	<del>D</del> DUMPDISCOMPONENT	"Refer to the user guide for which slot ds0 dump is supported on."
<del>ISDMP</del> MRCECSRIED	3-Error	PCM capture start failed.	Failed to start the ds0 dump in the TDM driver.	<del>D</del> DUMPDISCOMPONENT	"Make sure there is no hardware defect and there is no other "ds0 dump/test tdm dump session going on."
<del>ISDMP</del> MRCECRUNNG	3-Error	A previous session of PCM capture is in progress.	Can't start new PCM capture session since there is one going on now.	<del>D</del> DUMPDISCOMPONENT	"Make sure there is no other PCM capture session going on before "start the new capture."
<del>ISDMP</del> MRCECSHRCR	6-Information	module fail and terminate the pcm capture for [dec]/[dec]/[dec]/[dec]	-	-	-
<del>ISDMP</del> MRCECSPIED	6-Information	module start PCM capture for [dec]/[dec]/[dec]/[dec]	-	-	-
<del>ISDMP</del> MRCECSQED	6-Information	module stop or complete PCM capture for [dec]/[dec]/[dec]/[dec]	-	-	-
<del>ISDMP</del> MRCECSUNKN	6-Information	module send unkonwn pcm capture response [dec] for [dec]/[dec]/[dec]/[dec]	-	-	-
<del>ISDMP</del> MRCECSRIED	6-Information	PCM capture started.	-	-	-
<del>ISDMP</del> MRCECSPIED	6-Information	failed to stop PCM capture	-	-	-
<del>ISDMP</del> MRCECSQING	6-Information	stopping PCM capture	-	-	-
<del>ISDMP</del> MRCECRUNNG	6-Information	no PCM capture is in progress.	-	-	-
<del>ISPRO</del> SPOXCFUNCLARIED	3-Error	-	Chunk clear failed.	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>LSAIPXIPXCHUNKERRAIED</del>	3-Error	-	Chunk creation failed.	cpp-ucode	LOG_STD_ACTION
<del>LSAIPXIPXDBGERRAIED</del>	3-Error	-	DSA Conditional Debugging registration failed.	cpp-ucode	LOG_STD_ACTION
<del>LSAIPXIPXIPCLERRAIED</del>	3-Error	[dec]	IP Cache clear failed.	cpp-ucode	LOG_STD_ACTION
<del>LSAIPXIPXIPCLERRAIED</del>	3-Error	[dec] [dec]	IP Cache clear failed.	cpp-ucode	LOG_STD_ACTION
<del>LSAIPXIPXIPALGERRAIED</del>	3-Error	-	Generating IPC failed.	cpp-ucode	LOG_STD_ACTION
<del>LSAIPXIPXIPINITERRAIED</del>	3-Error	[dec]	IPC handler initialization failed.	cpp-ucode	LOG_STD_ACTION
<del>LSAIPXIPXIPINVALERRAIED</del>	3-Error	-	IPC Invalid parameters.	cpp-ucode	LOG_STD_ACTION
<del>LSAIPXIPXIPSENDERRAIED</del>	3-Error	[dec]	DSA clear ip cache failed.	cpp-ucode	LOG_STD_ACTION
<del>LSAIPXIPXIPSENDERRAIED</del>	3-Error	[dec]	Send initialization IPC failed.	cpp-ucode	LOG_STD_ACTION
<del>LSAIPXIPXIPSENDUNERRAIED</del>	3-Error	[dec]	DSA Send UNINIT IPC failed.	cpp-ucode	LOG_STD_ACTION
<del>LSAIPXIPXIPLOWMEMERRAIED</del>	3-Error	-	Send low mem IPC failed.	cpp-ucode	LOG_STD_ACTION
<del>LSAIPXIPXIPMEMERRAIED</del>	3-Error	-	Extending memory failed.	cpp-ucode	LOG_STD_ACTION
<del>LSAIPXIPXIPNOCHROMEM</del>	3-Error	-	IP Cache pool is not allocated.	cpp-ucode	LOG_STD_ACTION
<del>LSAIPXIPXIPRETURNERRAIED</del>	3-Error	-	return mem IPC failed.	cpp-ucode	LOG_STD_ACTION
<del>LSAIPXIPXIPTABLEERRAIED</del>	3-Error	-	IP Cache table init failed.	cpp-ucode	LOG_STD_ACTION
<del>LSAIPXIPXIPUNINITERRAIED</del>	3-Error	-	UNINIT cleanup failed.	cpp-ucode	LOG_STD_ACTION
<del>LSAIPXIPXIPINVALMSG</del>	4-Warning	-	Invalid IPC message	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>DSIPXIPXRNADMCEN</del>	4-Warning	[dec]:[dec] len [dec] flags 0x[hec] source [dec]	Invalid IPC message length.	cpp-ucode	LOG_STD_ACTION
<del>DCREDUNDANCYBDSICT</del>	3-Error	illegal red. entity history aspect [dec] passed to [chars]	-	-	""
<del>DCREDUNDANCYBDRDRE</del>	3-Error	illegal red. entity role [dec] found in history queue by [chars]	-	-	""
<del>DCREDUNDANCYBDSIAE</del>	3-Error	unexpected [chars] state in [chars]	-	-	""
<del>DCREDUNDANCYBDCINK</del>	3-Error	[chars]	-	-	""
<del>DCREDUNDANCYBDSIPXR</del>	3-Error	reliable IPC msg not tx'd by DSIP on [chars]	-	-	""
<del>DCREDUNDANCYBDSMENT</del>	3-Error	Redundancy event: [chars]	-	-	""
<del>DCREDUNDANCYBDSMRICT</del>	3-Error	Other DSC/router in split mode	There is another router connected to the dial shelf. In this situation\n\n both must be configured in split mode	-	"Configure the other router in split mode"
<del>DCREDUNDANCYBDSQEMPTY</del>	3-Error	expected [dec] elements in queue but found none	-	-	""
<del>DCREDUNDANCYBDSMRICT</del>	3-Error	Slot ownership conflict detected for slot [dec]	There is another router connected to the dial shelf it is claiming\n\n ownership of a slot that this router is also claiming	-	"Fix the ownership conflict by reconfiguring one of the routers\n\n so that it doesn't own the slot"
<del>DCREDUNDANCYBDSMIFINE</del>	3-Error	DSC in slot [dec] [chars]	-	-	""

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>DX</del> DDNDCMPTCONLT	3-Error	Tdm Split conflict detectedmy tdm [dec] other rs [dec]	There is another router connected to the dial shelf it is claiming\n\ ownership of backplane timeslots that this router requires. This is probably due to\n\ OIR activity moving trunk cards from one half of the split to the other.	-	"Fix the ownership conflict by reloading the router whose tdm number\n\ is greater than the trunk capacity for that router. In some cases\n\ it may be necessary to reset both routers."
DSCCLOCK-3-DUP_PRI	3-Error	Duplicate priority [dec] clock sources: slot [dec] port [dec] and slot [dec] port [dec].	-	-	LOG_STD_ACTION
DSCCLOCK-3-FAIL	3-Error	The System Primary Clock is down. Moving to HOLDOVER state and waiting to see if it comes up	This message is generated whenever the current primary clock \n\ goes bad. The TDM clock circuit goes into HOLDOVER mode and \n\ a holdover timer is started to see if the bad clock turns \n\ good within the holdover time.	-	LOG_STD_ACTION
<del>DSCCLOCK-3-NO</del> MEMORY	3-Error	Failed to allocate memory for the DSC clocks	The clock switching software has failed to allocate memory\n\ while adding a clock.	-	LOG_STD_ACTION
<del>DX</del> CLOCK-3-SWICH_ERRCR	3-Error	Failed to select any clock as the system clock. Remaining in HOLDOVER mode	The clock selection algorithm has failed to select any clock as \n\ the TDM primary clock.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DSCCLOCK-3-SWITCH2	3-Error	Clock moving to FREERUN from HOLDOVER	The current primary TDM clock has been deleted and hence the\n\n system primary has switched to the DSC local oscillator which\n\n is the current highest priority good clock. \n\n Phase continuity is maintained during the switchover.	-	LOG_STD_ACTION
DSCCLOCK-3-SWITCHB	3-Error	Clock moving to NORMAL from HOLDOVER selected clock is on slot [dec] port [dec] line [dec]	The current primary TDM clock has been deleted and hence the\n\n system primary has switched to the clock coming in via the\n\n trunk specified by the slot/port which is the current \n\n highest priority good clock. Phase continuity is maintained \n\n during the switchover.	-	LOG_STD_ACTION
DSCCLOCK-3-SWITCH4	3-Error	Switching to the user configured clock on slot [dec] port [dec] line [dec]	-	-	LOG_STD_ACTION
DSCCLOCK-3-SWITCH5	3-Error	Switching to the clock on slot [dec] port [dec] line [dec]	The TDM primary clock is switching to the clock coming in via\n\n the trunk specified most likely after the router-shelf\n\n and hence feature boards reload. The phase of the output TDM \n\n clock is forced to align with the input reference during the \n\n switchover.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DSCCLOCK-3-SWITCH6	3-Error	Switching to the clock on slot [dec] port [dec] line [dec] as the current primary has gone bad	The TDM primary clock has switched to a backup clock coming in \n\ via the specified trunk as the current primary clock has gone\n\ bad.	-	LOG_STD_ACTION
DSCCLOCK-3-SWITCH7	3-Error	Moving to NORMAL mode from HOLDOVER mode clock is slot [dec] port [dec] line [dec]	The TDM primary clock which is in HOLDOVER mode and whose source \n\ was a trunk port has switched to the same trunk port and moved\n\ to NORMAL mode with a phase alignment between input \n\ source clock and output TDM reference clock. Most likely the \n\ router-shelf and hence the feature boards have reloaded.	-	LOG_STD_ACTION
DSCCLOCK-3-SWITCH8	3-Error	Moving to NORMAL mode from HOLDOVER mode without phase correction clock is slot [dec] port [dec] line [dec]	The source trunk port of the TDM primary clock which had gone bad \n\ has turned good again before the holdover timer expiry. Hence the \n\ primary has moved from HOLDOVER to NORMAL state without phase \n\ correction between input trunk reference and the output TDM clock.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DSCCLOCK-3-UP	3-Error	The System Primary Clock is up. Moving to NORMAL state from HOLDOVER	The TDM primary clock which had gone bad has turned good within\n\n the holdover time. Hence the TDM primary clock switches to the \n\n NORMAL mode from the HOLDOVER mode.	-	LOG_STD_ACTION
DSCCLOCK-5-SWITCH1	5-Notice	Clock moving to NORMAL from FREERUN selected clock is on slot [dec] port [dec] line [dec]	The primary TDM clock which has been running off the \n\n local oscillator of DSC in FREERUN mode has switched to the line \n\n clock coming in via the specified trunk.	-	LOG_STD_ACTION
DSCXICLK-3-SWITCHB	3-Error	Clock moving to NORMAL from HOLDOVER selected clock is external clock on DSC	The current primary TDM clock has been deleted and hence the\n\n system primary has switched to the clock coming in via the\n\n external network reference clock on the DSC front panel which \n\n is the current highest priority good clock. Phase \n\n continuity is maintained during the switchover	-	LOG_STD_ACTION
DSCXICLK-3-SWITCH4	3-Error	Switching to the user configured external clock on DSC	-	-	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DSCXICLK3SWICH5	3-Error	Switching to the external clock on DSC	The TDM primary clock is switching to the clock coming in via\n\ the DSC front panel most likely after the router-shelf\n\ and hence feature boards reload. The phase of the output TDM \n\ clock is forced to align with the input reference during the\n\ switchover.	-	LOG_STD_ACTION
DSCXICLK3SWICH6	3-Error	Switching to the external clock on DSC as the current primary has gone bad	The TDM primary clock has switched to a backup clock coming in \n\ via the DSC front panel external clock feed as the current primary \n\ clock has gone bad.	-	LOG_STD_ACTION
DSCXICLK3SWICH7	3-Error	Moving to NORMAL mode from HOLDOVER mode selected external clock on DSC	The TDM primary clock which is in HOLDOVER mode and whose source \n\ was a the DSC front panel clock has switched to the same clock \n\ and moved to the NORMAL mode.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DSCXICLK3SWITCH8	3-Error	Moving to NORMAL mode from HOLDOVER mode without phase correction selected external clock on DSC	The DSC front panel clock which is the source of the current TDM \n\ primary clock and which had gone bad has turned good again before \n\ the holdover timer expiry. Hence the primary has moved from HOLDOVER \n\ to NORMAL state without phase correction between input reference and \n\ the output TDM clock.	-	LOG_STD_ACTION
DSCXICLK5SWITCHI	5-Notice	Clock moving to NORMAL from FREERUN selected clock is external clock on DSC	The primary TDM clock which has been running off the \n\ local oscillator of DSC in FREERUN mode has switched to the \n\ external network reference clock being fed from the DSC front\n\ panel.	-	LOG_STD_ACTION
DSCREDCLK2BACTIFAIL	2-Critical	Clock on other DSC has failed - immediate clock takeover	The backup DSC clock has detected failure on the other DSC clock \ hardware \ and is taking over to become the active clock manager.	-	LOG_STD_ACTION
DSCREDCLK2BACTIGONE	2-Critical	Removal of other DSC detected - immediate clock takeover	The backup DSC clock has detected removal of the other DSC \	-	"Reinstall a DSC in other DSC slot to provide DSC."
DSCREDCLK2BACTICMFAIL	2-Critical	Clock command hardware failed	-	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DSCREDCLK3BACTIOSF	3-Error	Other DSC IOS keepalive failure - clock takeover	The other DSC has failed to respond to keepalives to the current \ DSC and so the current DSC is taking over to become the active \ clock manager.	-	"Recover DSC in other DSC slot to provide backup DSC."
DSCREDCLK3BIAKEDLAY	3-Error	Active DSC requests backup to takeover clock - delaying for sync	The other DSC has requested the current DSC to take over active \ clock management \ but the current DSC is waiting for clock hardware synchronization \ before doing so to avoid call loss.	-	LOG_SID_NO_ACTION
DSCREDCLK3BIAKEOVER	3-Error	Active DSC requests backup to takeover clock - done	The other DSC has requested the current DSC to take over active \ clock management \ and the current DSC has done so.	-	LOG_SID_NO_ACTION
DSCREDCLK5BNORMAL	5-Notice	Backup clock moving to NORMAL to phase lock to active clock	The backup DSC has detected a change to the clock	-	LOG_SID_NO_ACTION
DSCREDCLK5B5SWICHE	5-Notice	Backup clock matched to active clock reference external clock on DSC	The backup DSC has detected a change in the selected clock reference \ on the active DSC and has changed it's own clock hardware to match \ the new selection. \ The selected clock reference is now from the DSC front panel external \ clock feed.	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>DS</del> DCDKSBSMICH	5-Notice	Backup clock matched to active clock reference slot [dec] line [dec]	The backup DSC has detected a change in the selected clock reference \ on the active DSC and has changed it's own clock hardware to match \ the new selection. \ The selected clock reference is now from the specified trunk line.	-	LOG_SID_NO_ACTION
<del>DS</del> DAOCDUICAD	3-Error	DA [enet] to DSID table duplicated when operation [chars] DSID [node]on	DSG DA_TO_DSID table in LC should be unique for DA on a interface.	cmts-application	"Issue the show tech-support command to gather data " "that may help identify the nature of the error.\n" "Then reconfigure DSG in the mac domain to refresh " "all DSG configurations in the interface."
<del>DS</del> DCDUPAEFALE	3-Error	Failed to DCD message on [chars]	DSG DCD update failure	cmts-application	"Check if DSG traffic is blocked on the " "influenced mac domain.\n" "If so contact your Cisco technical support representative for help."
<del>DS</del> DGDLDSDFALE	3-Error	dsg delete dsid failure [[chars]: [chars] [chars] [enet]]	dsg delete dsid failure	cmts-application	LOG_SIDDISTACTEALS
<del>DS</del> DGHRNDGDS	3-Error	different dsid [dec] assign to dsg da2dsid entry [dec]	DSG DSID Allocate Err	cmts-application	LOG_SIDDISTACTEALS
<del>DS</del> DGZRODGDSD	3-Error	zero dsid found in dsg da2dsid entry for [[chars] [chars] [enet]]	Zero DSG DSID Found	cmts-application	LOG_SIDDISTACTEALS

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DSG-5-CFR_CONFLICT	5-Notice	classifier <[chars]> is put into conflict state because of errors	classifier is already applied but we cannot update the classifier with changed destination IP address or source IP address because of errors. So we put the classifier into conflict state.	cmts-application	LOG_SID_NO_ACTION
DSG5CFR_NOT_APPLIED	5-Notice	classifier <[chars]> cannot be applied because of errors	classifier cannot be applied because of errors.	cmts-application	LOG_SID_NO_ACTION
DSG-5-CFR_RMTUNNEL	5-Notice	cfr [dec] becomes unresolved it will be removed from the tunnel it belongs to	cfr becomes unresolved it will be removed from the tunnel it belongs to	cmts-application	LOG_SID_NO_ACTION
<del>DSG-5-NODE_LOOKUP_FAILURE</del>	5-Notice	Failed to find the entry from the DSG Info DB for [chars] [chars] [chars]	DSG Info DB lookup failure	cmts-application	LOG_SID_NO_ACTION
DSG-5-IDENTICAL_CFR	5-Notice	cfr [dec] and [dec] are identical	two cfrs are identical	cmts-application	LOG_SID_NO_ACTION
<del>DSG-5-ILLEGAL_MC_ADDR</del>	5-Notice	IP address <[node] is not a multicast address or is a reserved multicast address	IP address is not an multicast address or is a reserved multicast address	cmts-application	LOG_SID_NO_ACTION
<del>DSG-5-ILLEGAL_SOURCE_ADDR</del>	5-Notice	IP address <[node] is an illegal source address	IP address is an illegal source address	cmts-application	LOG_SID_NO_ACTION
DSG-5-MAC_ADDR	5-Notice	cfr [dec] and cfr [dec] have the same destination IP address [node] but different MAC addresses [enet] and [enet]	two cfrs have the same destination IP address but different MAC addresses	cmts-application	LOG_SID_NO_ACTION
DSG-5-NAME_CHANGED	5-Notice	hostname <[chars]> is changed from <[node] to <[node]	IP address of a hostname is changed.	cmts-application	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DSG5NAME_UNRESOLVED	5-Notice	hostname <[chars]> cannot be resolved	DNS query for a hostname is not successful.	cmts-application	LOG_SID_NO_ACTION
DSG5SEMAPHORE_ERROR	5-Notice	failed to obtain the DSG semaphore	failed to get the semaphore	cmts-application	LOG_SID_NO_ACTION
DSG5-SOURCE_LEN	5-Notice	cfr [dec]: source IP address [node]and source prefix length [dec] don't match	source IP address and source prefix length of the cfr don't match	cmts-application	LOG_SID_NO_ACTION
DSG5SSM_SOURCE_PREFIX	5-Notice	destination IP address is <[node] in SSM range source IP address prefix length must be [dec]	dest-ip is in SSM range src-ip prefix length should match	cmts-application	LOG_SID_NO_ACTION
DSG5SSM_SOURCE_ZERO	5-Notice	destination IP address is <[node] in SSM range source IP address cannot be zero	dest-ip is in SSM range src-ip cannot be zero	cmts-application	LOG_SID_NO_ACTION
DSG5-STATICJOINERR	5-Notice	cfr [dec] cannot be enabled because there already has been a non-DSG static join for S [node]or * [node]in interface [chars]	cfr cannot be enabled because there already exists a non-DSG static join for the multicast group	cmts-application	LOG_SID_NO_ACTION
DSG6-CFR_APPLIED	6-Information	classifier <[chars]> is applied successfully	classifier is applied successfully.	cmts-application	LOG_SID_NO_ACTION
DSG6-CFR_UPDATED	6-Information	classifier <[chars]> is updated	classifier is updated	cmts-application	LOG_SID_NO_ACTION
DSG6-LIST_ERR	6-Information	[chars] [dec]	Infomational only	ubr7200	LOG_SID_NO_ACTION
DSG6NAME_RESOLVED	6-Information	hostname <[chars]> is resolved as <[node]	DNS query for a hostname is successful.	cmts-application	LOG_SID_NO_ACTION
DSG6-NO_TG	6-Information	tg <[dec]> removal will remove all tg \conf on bundle and mac-domain.	remove global tg is successful.	cmts-application	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DSIP3-CLIENT_ADD_FAIL	3-Error	Adding client [dec] after DSIP has started.	-	-	""
DSIP3-CLIENT_VERSION_MISMATCH	3-Error	Some clients on this feature board are running versions which are incompatible with RS. Not initializing any DSIP clients. You can find the incompatible clients by executing the show dsip version command	-	-	""
DSIP3-DBSEMI_FAIL	3-Error	Failed to get memory for the DSIP clicnets version database	\n\	-	""
DSIP3-INTERRUPT_API_FAIL	3-Error	Failed to get interrupt api buffers	\n\	-	""
DSIP3-VERSION_FAIL	3-Error	Failed to get version buffers	\n\	-	""
DSIP-3-GETPAK	3-Error	Failed to get packet buffer	\n\	-	""
DSIP3-INCOMPATIBLE_CLIENT	3-Error	Incompatible client [chars] on DS slot [dec] with major version [dec] and minor version [dec]. Shutting down all the DSIP clients on this slot	-	-	""
DSIP3-INTERRUPT_API_FAIL	3-Error	Failed to get memory for the DSIP interrupt api buffers	\n\	-	""
DSIP-3-IPC_CLIENT	3-Error	IPC subsystem API error[chars] [chars] [dec]	-	-	""

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DSIP-3-IPC_PORT	3-Error	IPC subsystem API error[chars] [chars] [chars]	-	-	""
DSIP-3-IPC_SEAT	3-Error	IPC subsystem API error can not create seat by \n\ the seatid [dec] for the slot [dec]	Nitro Interconnect Protocol reliable stack \n\ has failed to create seat for the specified slot.	-	""
<del>DSIP-3-NO_MACR_VERSION</del>	3-Error	Client addition to DSIP has failed [chars] [dec]	-	-	""
DSIP-3-PRIVPOOL	3-Error	Failed to create DSIP private buffer pool	\n\	-	""
DSIP-3-RANGE	3-Error	DSIP parameter range error [chars] [dec]	-	-	""
DSIP-3-TXCONTEXT	3-Error	[chars] slot [dec] client [dec]	\n\	-	""
<del>DSIP-3-CONTEXT_ACTIVE</del>	3-Error	Waiting for the active transmit contexts to become inactive	\n\	-	""
<del>DSIP-3-VERSION_BUFFERS</del>	3-Error	Failed to get memory for the DSIP version buffers	\n\	-	""
<del>DSIP-3-VERSION_DATABASE</del>	3-Error	Failed to get memory for the DSIP version database	\n\	-	""
<del>DSIP-3-BASE_FUNC_TBL</del>	3-Error	Failed to allocate memory for the base function table	-	-	""



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>DSIP3</del> DSIP_SEND_FAILURE	3-Error	Failed to send DSIP message - number of failures [dec]	This message indicates that Nitro Interconnect Protocol\n\n has encountered an error while sending a message and that the\n\n message has been discarded after three unsuccessful resends.	-	""
DSIPPF-5-DS_HELLO	5-Notice	DSIP Hello from shelf [dec] slot [dec] Succeeded	-	-	""
<del>DSIP5</del> DSIP_KEEPALIVE_LOSS	5-Notice	DSIP Keepalive Loss from shelf [dec] slot [dec]	-	-	""
DSIPPF-5-HELLO_ERROR	5-Notice	DSIP Hello from shelf [dec] slot [dec] failed due to DSIP version mismatch	-	-	""
DSIPPF-5-RS_HELLO	5-Notice	DSIP Hello from router shelf [dec] Succeeded	-	-	""
<del>DSIP5</del> RS_KEEPALIVE_LOSS	5-Notice	DSIP Keepalive Loss from router shelf [dec]	-	-	""

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DSJIB-2-NMI_INTR	2-Critical	cbr-cmts-infra	DS-JIB device init failed in[chars]:%s:Error %d	Initialization of the DS-JIB device failed	Review Cable Device Manager logs taking note of the timestamp information to select specific information to review. Copy the message and other related information exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <a href="http://www.cisco.com/tac">http://www.cisco.com/tac</a>
DSJIB-2-NMI_INTR	2-Critical	cbr-cmts-infra	DS-JIB UNRECOVERABLE [%s] Count [%d]	DS-JIB device generated NMI	Review Cable Device Manager logs taking note of the timestamp information to select specific information to review. Copy the message and other related information exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <a href="http://www.cisco.com/tac">http://www.cisco.com/tac</a>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DSJIB2SEGMENT_INVALID	2-Critical	cbr-cmts-infra	DS-JIB Segment Invalid [%s] Segment %d	DS-JIB segment error	Review Cable Device Manager logs taking note of the timestamp information to select specific information to review. Copy the message and other related information exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <a href="http://www.cisco.com/tac">http://www.cisco.com/tac</a>
DSJIB3CRIT_REC_INTR	3-Error	cbr-cmts-infra	DS-JIB RECOVERABLE [%s]	DS-JIB device generated Recoverable interrupt	Review Cable Device Manager logs taking note of the timestamp information to select specific information to review. Copy the message and other related information exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <a href="http://www.cisco.com/tac">http://www.cisco.com/tac</a>
DSJIB3MALLOC_FAILED	3-Error	cbr-cmts-infra	DS-JIB malloc failed for[chars]:size %u	An internal memory allocation has failed.	Determine the cause of low system memory. Start by examining the system for memory leaks. If the problem persists

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DS-JIB3-NON_CRIT_INTR	3-Error	cbr-cmts-infra	DS-JIB Non-Critical [%s]	DS-JIB device generated Non-critical interrupt	Review Cable Device Manager logs taking note of the timestamp information to select specific information to review. Copy the message and other related information exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <a href="http://www.cisco.com/tac">http://www.cisco.com/tac</a>
DSM-3-DSP_TIMEOUT	3-Error	DSP timeout on channel [chars] event 0x[hec]: DSP ID=0x[hec]: [chars]	Timeout on DSP response.	ios-voice	"The DSP has been automatically reset. If problem persists contact" "your technical support representative"
DSM-3-DSP_TIMEOUT	3-Error	DSP timeout on channel [chars] event 0x[hec]: DSP ID=0x[hec]: [chars]	Timeout on DSP response.	ios-voice	"The DSP has been automatically reset. If problem persists contact" "your technical support representative"
DSM-3-DSPALARM	3-Error	channel [chars] DSP ID 0x[hec]: status=0x[hec] message=0x[hec] text=[chars]	The DSP reported a fatal error. All sessions on the DSP were dropped and a DSP reload was attempted.	ios-voice	"Contact your technical support\n\n representative include the full text of the error message."
DSM-3-DSPALARM	3-Error	channel [chars] DSP ID 0x[hec]: status=0x[hec] message=0x[hec] text=[chars]	The DSP reported a fatal error. All sessions on the DSP were dropped and a DSP reload was attempted.	ios-voice	"Contact your technical support\n\n representative include the full text of the error message."
DSM-3-INTERNAL	3-Error	Internal Error : [chars]	DSM Internal error	ios-voice	"Contact your technical support representative"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DSM-3-INTERNAL	3-Error	Internal Error : [chars]	DSM Internal error	ios-voice	"Contact your technical support representative"
DSM-3-MSGSNDFAIL	3-Error	channel:[chars] DSP ID:0x[hec] Message ID:0x[hec]	A message could not be sent to the DSP. The session continued but may have experienced problems.	ios-voice	"Contact your technical " "support representative include the full text of the error message."
DSM-3-MSGSNDFAIL	3-Error	channel:[chars] DSP ID:0x[hec] Message ID:0x[hec]	A message could not be sent to the DSP. The session continued but may have experienced problems.	ios-voice	"Contact your technical " "support representative include the full text of the error message."
DSM-3-NOEVENT	3-Error	no free event structure available from [chars] for DSM message	There were no event structures remaining in the system pools to alert the router of a voice or signaling event.	ios-voice	"Contact your technical support " "representative include the full text of the error message."
DSM-3-NOEVENT	3-Error	no free event structure available from [chars] for DSM message	There were no event structures remaining in the system pools to alert the router of a voice or signaling event.	ios-voice	"Contact your technical support " "representative include the full text of the error message."
<del>DSM-3-NOEVENT</del> DSM-3-NOEVENT	6-Information	Cannot create DSM session database\n	Failed to create DSM session.	ios-voice	"Check the size of free memory to make sure there is enough memory."
<del>DSM-3-NOEVENT</del> DSM-3-NOEVENT	6-Information	Cannot create DSM session database\n	Failed to create DSM session.	ios-voice	"Check the size of free memory to make sure there is enough memory."
DSMIB3-CLIENT_TYPE	3-Error	Type [node]is invalid for collision [chars]	The specified type of client is an invalid value which indicates that there is no support for the generation of an internal identifier. This is an internal software error.	dsmib	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DSMIB3-CLIENT_TYPE	3-Error	Type [node]is invalid for collision [chars]	The specified type of client is an invalid value which indicates that there is no support for the generation of an internal identifier. This is an internal software error.	dsmib	LOG_STD_ACTION
DSMIB3-CLIENT_TYPE	3-Error	Type [node]is invalid for collision [chars]	The specified type of client is an invalid value which indicates that there is no support for the generation of an internal identifier. This is an internal software error.	dsmib	"LOG_STD_ACTION"
DSMIB3-CLIENT_TYPE	3-Error	Type [node]is invalid for collision [chars]	The specified type of client is an invalid value which indicates that there is no support for the generation of an internal identifier. This is an internal software error.	dsmib	"LOG_STD_ACTION"
DSMIB3-RECV_CONF	3-Error	Error receiving configuration in DSMIB.	The configuration is not received properly from shim. This indicates that the operation to receive the configurations from shim has failed. This condition will result in out-of-sync information in dsmib with respect to shim.	dsmib	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DSMIB-3-RECV_CONF	3-Error	Error receiving configuration in DSMIB.	The configuration is not received properly from shim. This indicates that the operation to receive the configurations from shim has failed. This condition will result in out-of-sync information in dsmib with respect to shim.	dsmib	LOG_STD_ACTION
DSMIB-3-RECV_CONF	3-Error	Error receiving configuration in DSMIB.	The configuration is not received properly from shim. This indicates that the operation to receive the configurations from shim has failed. This condition will result in out-of-sync information in dsmib with respect to shim.	dsmib	"LOG_STD_ACTION"
DSMIB-3-RECV_CONF	3-Error	Error receiving configuration in DSMIB.	The configuration is not received properly from shim. This indicates that the operation to receive the configurations from shim has failed. This condition will result in out-of-sync information in dsmib with respect to shim.	dsmib	"LOG_STD_ACTION"
DSMIB-3-RECV_STAT	3-Error	Error in decoding statistics in DSMIB.	The counters are not received properly from shim. This indicates that the operation to receive the statistics from shim has failed. This condition will result in counters out-of-sync between MQC and dsmib.	dsmib	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DSMIB-3-RECV_STAT	3-Error	Error in decoding statistics in DSMIB.	The counters are not received properly from shim. This indicates that the operation to receive the statistics from shim has failed. This condition will result in counters out-of-sync between MQC and dsmib.	dsmib	LOG_STD_ACTION
DSMIB-3-RECV_STAT	3-Error	Error in decoding statistics in DSMIB.	The counters are not received properly from shim. This indicates that the operation to receive the statistics from shim has failed. This condition will result in counters out-of-sync between MQC and dsmib.	dsmib	"LOG_STD_ACTION"
DSMIB-3-RECV_STAT	3-Error	Error in decoding statistics in DSMIB.	The counters are not received properly from shim. This indicates that the operation to receive the statistics from shim has failed. This condition will result in counters out-of-sync between MQC and dsmib.	dsmib	"LOG_STD_ACTION"
DSMIB-3-TIMER_START	3-Error	[chars]	This indicates that the operation to start/restart a timer has failed. This condition will result in counters out-of-sync between MQC and dsmib.	dsmib	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DSMIB-3-TIMER_START	3-Error	[chars]	This indicates that the operation to start/restart a timer has failed. This condition will result in counters out-of-sync between MQC and dsmib.	dsmib	LOG_STD_ACTION
DSMIB-3-TIMER_START	3-Error	[chars]	This indicates that the operation to start/restart a timer has failed. This condition will result in counters out-of-sync between MQC and dsmib.	dsmib	"LOG_STD_ACTION"
DSMIB-3-TIMER_START	3-Error	[chars]	This indicates that the operation to start/restart a timer has failed. This condition will result in counters out-of-sync between MQC and dsmib.	dsmib	"LOG_STD_ACTION"
DSMIB-3-UID_DELETE	3-Error	[chars] unable to remove index [node]X	The specified entity is unable to removed the specified index. This is an internal software error.	dsmib	LOG_STD_ACTION
DSMIB-3-UID_DELETE	3-Error	[chars] unable to remove index [node]X	The specified entity is unable to removed the specified index. This is an internal software error.	dsmib	LOG_STD_ACTION
DSMIB-3-UID_DELETE	3-Error	[chars] unable to remove index [node]X	The specified entity is unable to removed the specified index. This is an internal software error.	dsmib	"LOG_STD_ACTION"
DSMIB-3-UID_DELETE	3-Error	[chars] unable to remove index [node]X	The specified entity is unable to removed the specified index. This is an internal software error.	dsmib	"LOG_STD_ACTION"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DSMIB-3-UID_EXISTS	3-Error	[chars] attempt to add index [node]X [chars]	The specified entity is unable to add an entry due to the detection of an existing entry with the same index or name. This is an internal software error.	dsmib	"show dsmib db id"
DSMIB-3-UID_EXISTS	3-Error	[chars] attempt to add index [node]X [chars]	The specified entity is unable to add an entry due to the detection of an existing entry with the same index or name. This is an internal software error.	dsmib	"show dsmib db id"
DSMIB-3-UID_EXISTS	3-Error	[chars] attempt to add index [node]X [chars]	The specified entity is unable to add an entry due to the detection of an existing entry with the same index or name. This is an internal software error.	dsmib	<del>LOG_STD_ACTION</del> show dsmib db id"
DSMIB-3-UID_EXISTS	3-Error	[chars] attempt to add index [node]X [chars]	The specified entity is unable to add an entry due to the detection of an existing entry with the same index or name. This is an internal software error.	dsmib	<del>LOG_STD_ACTION</del> show dsmib db id"
DSMIB-3-WRED_PARENT	3-Error	There is a child policy under class [chars] in policy-map [chars] where random-detect is configured which is not supported while diffservmib RFC 2475 is enabled	Random-detect is not supported in parent class of a HQOS policy when diffservmib RFC 2475 is enabled	dsmib	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DSMIB3-WRED_PARENT	3-Error	There is a child policy under class [chars] in policy-map [chars] where random-detect is configured which is not supported while diffservmib RFC 2475 is enabled	Random-detect is not supported in parent class of a HQOS policy when diffservmib RFC 2475 is enabled	dsmib	LOG_STD_ACTION
DSMIB3-WRED_PARENT	3-Error	There is a child policy under class [chars] in policy-map [chars] where random-detect is configured which is not supported while diffservmib RFC 2475 is enabled	Random-detect is not supported in parent class of a HQOS policy when diffservmib RFC 2475 is enabled	dsmib	"LOG_STD_ACTION"
DSMIB3-WRED_PARENT	3-Error	There is a child policy under class [chars] in policy-map [chars] where random-detect is configured which is not supported while diffservmib RFC 2475 is enabled	Random-detect is not supported in parent class of a HQOS policy when diffservmib RFC 2475 is enabled	dsmib	"LOG_STD_ACTION"
DSMIB-3-XMIT_CONF	3-Error	[chars]	The configuration is not transmitted properly from shim. This indicates that the operation to transmit the configurations from shim has failed. This condition will result in out-of-sync information in dsmib with respect to shim.	dsmib	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DSMIB-3-XMIT_CONF	3-Error	[chars]	The configuration is not transmitted properly from shim. This indicates that the operation to transmit the configurations from shim has failed. This condition will result in out-of-sync information in dsmib with respect to shim.	dsmib	LOG_STD_ACTION
DSMIB-3-XMIT_MSG	3-Error	[chars]	The IPC message was not transmitted. This condition will result in counters out-of-sync between MQC and dsmib or some config being out of sync.	dsmib	LOG_STD_ACTION
DSMIB-3-XMIT_MSG	3-Error	[chars]	The IPC message was not transmitted. This condition will result in counters out-of-sync between MQC and dsmib or some config being out of sync.	dsmib	LOG_STD_ACTION
DSMIB-3-XMIT_MSG	3-Error	[chars]	The IPC message was not transmitted. This condition will result in counters out-of-sync between MQC and dsmib or some config being out of sync.	dsmib	"LOG_STD_ACTION"
DSMIB-3-XMIT_MSG	3-Error	[chars]	The IPC message was not transmitted. This condition will result in counters out-of-sync between MQC and dsmib or some config being out of sync.	dsmib	"LOG_STD_ACTION"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DSMIB-3-XMIT_STAT	3-Error	Error in statistics query and encoding in DSMIB.	The counters are not encoded and transmitted properly from shim. This indicates that the operation to encode the statistics from shim has failed. This condition will result in counters out-of-sync between MQC and dsmib.	dsmib	LOG_STD_ACTION
DSMIB-3-XMIT_STAT	3-Error	Error in statistics query and encoding in DSMIB.	The counters are not encoded and transmitted properly from shim. This indicates that the operation to encode the statistics from shim has failed. This condition will result in counters out-of-sync between MQC and dsmib.	dsmib	LOG_STD_ACTION
DSMIB-3-XMIT_STAT	3-Error	Error in statistics query and encoding in DSMIB.	The counters are not encoded and transmitted properly from shim. This indicates that the operation to encode the statistics from shim has failed. This condition will result in counters out-of-sync between MQC and dsmib.	dsmib	"LOG_STD_ACTION"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DSMIB-3-XMIT_STAT	3-Error	Error in statistics query and encoding in DSMIB.	The counters are not encoded and transmitted properly from shim. This indicates that the operation to encode the statistics from shim has failed. This condition will result in counters out-of-sync between MQC and dsmib.	dsmib	"LOG_STD_ACTION"
<del>DSMIB-3-CLASSNOFOUND</del>	3-Error	class: [chars] is not present in db.	This is a configuration error for dsmib. It indicates that dsmib shim does not get the notification when the classmap is configured on the box through MQC. This also potentially means the dsmib db will be out-of-sync with respect to MQC configurations. Capture the log in the console with class name for any possible debugging.	dsmib	LOG_STD_ACTION
<del>DSMIB-3-CLASSNOFOUND</del>	3-Error	class: [chars] is not present in db.	This is a configuration error for dsmib. It indicates that dsmib shim does not get the notification when the classmap is configured on the box through MQC. This also potentially means the dsmib db will be out-of-sync with respect to MQC configurations. Capture the log in the console with class name for any possible debugging.	dsmib	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>DSMIBRO</del> CLASSNOFOUND	3-Error	class: [chars] is not present in db.	This is a configuration error for dsmib.It indicates that dsmib shim does not get the notification when the classmap is configured on the box through MQC. This also potentially means the dsmib db will be out-of-sync with respect to MQC configurations.Capture the log in the console with class name for any possible debugging.	dsmib	"LOG_STD_ACTION"
<del>DSMIBRO</del> CLASSNOFOUND	3-Error	class: [chars] is not present in db.	This is a configuration error for dsmib.It indicates that dsmib shim does not get the notification when the classmap is configured on the box through MQC. This also potentially means the dsmib db will be out-of-sync with respect to MQC configurations.Capture the log in the console with class name for any possible debugging.	dsmib	"LOG_STD_ACTION"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>DSMIB</del> POLICYNOTFOUND	3-Error	policy: [chars] is not present in db.	This is a configuration error for dsmib. It indicates that dsmib shim does not get the notification when the policymap is configured on the box through MQC. This also potentially means the dsmib db will be out-of-sync with respect to MQC configurations. Capture the log in the console with policy name for any possible debugging.	dsmib	LOG_STD_ACTION
<del>DSMIB</del> POLICYNOTFOUND	3-Error	policy: [chars] is not present in db.	This is a configuration error for dsmib. It indicates that dsmib shim does not get the notification when the policymap is configured on the box through MQC. This also potentially means the dsmib db will be out-of-sync with respect to MQC configurations. Capture the log in the console with policy name for any possible debugging.	dsmib	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>DSMBRO4POLNOTFND</del>	3-Error	policy: [chars] is not present in db.	This is a configuration error for dsmib. It indicates that dsmib shim does not get the notification when the policymap is configured on the box through MQC. This also potentially means the dsmib db will be out-of-sync with respect to MQC configurations. Capture the log in the console with policy name for any possible debugging.	dsmib	"LOG_STD_ACTION"
<del>DSMBRO4POLNOTFND</del>	3-Error	policy: [chars] is not present in db.	This is a configuration error for dsmib. It indicates that dsmib shim does not get the notification when the policymap is configured on the box through MQC. This also potentially means the dsmib db will be out-of-sync with respect to MQC configurations. Capture the log in the console with policy name for any possible debugging.	dsmib	"LOG_STD_ACTION"
<del>DSMBRO3XMIT_CONF</del>	3-Error	[chars]	The configuration is not transmitted properly from shim. This indicates that the operation to transmit the configurations from shim has failed. This condition will result in out-of-sync information in dsmib with respect to shim.	dsmib	"LOG_STD_ACTION"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DSMBROV3XMIT_CONF	3-Error	[chars]	The configuration is not transmitted properly from shim. This indicates that the operation to transmit the configurations from shim has failed. This condition will result in out-of-sync information in dsmib with respect to shim.	dsmib	"LOG_STD_ACTION"
DSMBROV6UNSUBCRID	6-Information	[chars]	This is a provisioning error for dsmib. It indicates that dsmib does not support the configuration entered. See the error message printed out on the console for possible supported configurations. Then try with different configurations valid for dsmib.	-	LOG_SID_NO_ACTION
DSMBROV6UNSUBCRID	6-Information	[chars]	This is a provisioning error for dsmib. It indicates that dsmib does not support the configuration entered. See the error message printed out on the console for possible supported configurations. Then try with different configurations valid for dsmib.	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>DSMIB0</del> UNSUBCRIBED	6-Information	[chars]	This is a provisioning error for dsmib. It indicates that dsmib does not support the configuration entered. See the error message printed out on the console for possible supported configurations. Then try with different configurations valid for dsmib.	dsmib	'LOG_SID_NO_ACTION'
<del>DSMIB0</del> UNSUBCRIBED	6-Information	[chars]	This is a provisioning error for dsmib. It indicates that dsmib does not support the configuration entered. See the error message printed out on the console for possible supported configurations. Then try with different configurations valid for dsmib.	dsmib	'LOG_SID_NO_ACTION'
DSMP-3-DSP_TIMEOUT	3-Error	DSP timeout on DSP [chars]: event 0x[hec] [chars]	Timeout on DSP response.	ios-voice	"The DSP has been automatically reset. If problem persists contact" "your technical support representative"
DSMP-3-DSP_TIMEOUT	3-Error	DSP timeout on DSP [chars]: event 0x[hec] [chars]	Timeout on DSP response.	ios-voice	"The DSP has been automatically reset. If problem persists contact" "your technical support representative"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DSMP-3-DSPALARM	3-Error	Alarm on DSP [chars]: status=0x[hec] message=0x[hec] text=[chars]	The DSP reported a fatal error. All sessions on the DSP were dropped and a DSP reload was attempted.	ios-voice	"Contact your technical support\n\n representative include the full text of the error message."
DSMP-3-DSPALARM	3-Error	Alarm on DSP [chars]: status=0x[hec] message=0x[hec] text=[chars]	The DSP reported a fatal error. All sessions on the DSP were dropped and a DSP reload was attempted.	ios-voice	"Contact your technical support\n\n representative include the full text of the error message."
DSMP-3-INTERNAL	3-Error	Internal Error : [chars]	DSMP Internal error	ios-voice	"Contact your technical support representative"
DSMP-3-INTERNAL	3-Error	Internal Error : [chars]	DSMP Internal error	ios-voice	"Contact your technical support representative"
DSMP3INVALID_EVENT	3-Error	Unhandled event: current state:[chars] event:[chars]	The event is not handled in the DSMP gateway state machine specification	ios-voice	"Contact your technical support representative"
DSMP3INVALID_EVENT	3-Error	Unhandled event: current state:[chars] event:[chars]	The event is not handled in the DSMP gateway state machine specification	ios-voice	"Contact your technical support representative"
DSMP-3-MSGSNDFAIL	3-Error	channel:[chars] DSP ID:0x[hec] Message ID:0x[hec]	A message could not be sent to the DSP. The session continued but may have experienced problems.	ios-voice	"Contact your technical support \n\n representative include the full text of the error message."
DSMP-3-MSGSNDFAIL	3-Error	channel:[chars] DSP ID:0x[hec] Message ID:0x[hec]	A message could not be sent to the DSP. The session continued but may have experienced problems.	ios-voice	"Contact your technical support \n\n representative include the full text of the error message."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DSMP-3-NOEVENT	3-Error	no free event structure available from [chars] for DSMP message	There were no event structures remaining in the system pools to alert the router of a voice or signaling event.	ios-voice	"Contact your technical support " "representative include the full text of the error message."
DSMP-3-NOEVENT	3-Error	no free event structure available from [chars] for DSMP message	There were no event structures remaining in the system pools to alert the router of a voice or signaling event.	ios-voice	"Contact your technical support " "representative include the full text of the error message."
DSMP-3-NOLICENSE	3-Error	[chars]:No License available Tivan Recording could not be Triggered	There are no recording license remaining in the license pool	ios-voice	" Check your configuration for smart license availability"
DSMP-3-NOLICENSE	3-Error	[chars]:No License available Tivan Recording could not be Triggered	There are no recording license remaining in the license pool	ios-voice	" Check your configuration for smart license availability"
DSMP-3-PRG_ERROR	3-Error	Programming Error : [chars]	Progaramming error in DSMP subsys	ios-voice	"Contact your technical support representative"
DSMP-3-PRG_ERROR	3-Error	Programming Error : [chars]	Progaramming error in DSMP subsys	ios-voice	"Contact your technical support representative"
<del>DSMP-3-SUBSYS_UNINITIALIZED</del>	3-Error	Internal Error : [chars]	DSMP Subsystem not initialized	ios-voice	"Contact your technical support representative"
<del>DSMP-3-SUBSYS_UNINITIALIZED</del>	3-Error	Internal Error : [chars]	DSMP Subsystem not initialized	ios-voice	"Contact your technical support representative"
DSMP-4-WARNING	4-Warning	Warning : [chars]	Resource temporarily not available	ios-voice	"Contact your technical support representative if condition lasts"
DSMP-4-WARNING	4-Warning	Warning : [chars]	Resource temporarily not available	ios-voice	"Contact your technical support representative if condition lasts"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>DSMP_SESSION_DATABASE_FAIL</del>	6-Information	Cannot create DSMP session database\n	Failed to create DSMP session.	ios-voice	"Check the size of free memory to make sure there is enough memory."
<del>DSMP_SESSION_DATABASE_FAIL</del>	6-Information	Cannot create DSMP session database\n	Failed to create DSMP session.	ios-voice	"Check the size of free memory to make sure there is enough memory."
DSP_SPA-2-INITFAIL	2-Critical	Not Enough Resources:[chars]	The shared port adaptor failed to complete software initialization.	SPA-DSP	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
DSP_SPA-3-BUFF_FAIL	3-Error	Not Enough MEM Buffers [chars]	Not enough memory buffers for shared port adaptor operation.	SPA-DSP	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
DSP_SPA-3-FILE_OP_FAIL	3-Error	Failed to open file [chars] : [chars]	Failed to open file	SPA-DSP	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
DSP_SPA-3-FILE_RD_FAIL	3-Error	Failed to read [node]bytes from file: [chars]	Failed to read data from file	SPA-DSP	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DSP_SPA-3HW_ERROR	3-Error	[chars]: A Hardware device error was detected. Trying to recover the SPA by reload. Error information : [chars]	An internal hardware device error has occurred on the services SPA. The error message indicates the slot subslot the SPA type and the name of the hardware device. The SPA has been deactivated and reactivated to resolve the problem. If the error occurs more than five times within an hour no further attempts to reactivate the SPA will be made. This message is likely due to an unrecoverable hardware failure.	spa-dsp	"Perform OIR of the SPA located in the specified subslot. Before removing " "the SPA enter the <CmdBold>hw-module subslot stop<NoCmdBold> command. " "Remove the SPA wait 5 seconds and reinsert the SPA. If " "the problem persists copy the error message text exactly as it appears " "on the console or in the system log enter the <CmdBold>show diag" "<NoCmdBold> command contact your Cisco technical support representative " "and provide the representative with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DSP_SPA-3-HW_ERROR_NO	3-Error	[chars]: Non fatal hardware device error was detected. Error information : [chars]	An internal hardware device error has occurred on the services SPA. The error message indicates the slot subslot the SPA type and the name of the hardware device. This message is likely due to a recoverable hardware failure.	spa-dsp	"Perform OIR of the SPA located in the specified subslot. Before removing " "the SPA enter the <CmdBold>hw-module subslot stop<NoCmdBold> command. " "Remove the SPA wait 5 seconds and reinsert the SPA. If " "the problem persists copy the error message text exactly as it appears " "on the console or in the system log enter the <CmdBold>show diag" "<NoCmdBold> command contact your Cisco technical support representative " "and provide the representative with the gathered information."
DSP_SPA-3-NULL_FAIL	3-Error	Non-Initialized ptr: [chars]	About to Access non-initialized pointer	SPA-DSP	"Copy the error message exactly as it appears and report it to your\n technical support representative."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DSP-3-DSP_ALARM	3-Error	DSP device [dec] is not responding. Trying to recover DSP device by reloading	A DSP device on DSP-SPA is not responding. The error message indicates the slot subslot the SPA type and the name of the hardware device.	spa-dsp	"Software will try to recover by reloading the failed DSP. " "If the problem persists then perform OIR of the SPA located in the " "specified subslot. Before removing the SPA enter " "the <CmdBold>hw-module subslot stop<NoCmdBold> command. Remove the SPA " "wait 5 seconds and reinsert the SPA. If the problem persists copy " "the error message text exactly as it appears on the console or in the " "system log enter the <CmdBold>show diag <NoCmdBold> command contact " "your Cisco technical support representative and provide the " "representative with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DSP-3-DSP_DNLD	3-Error	DSP device [dec] DNLD process exited. Trying to recover DSP device by rebooting the DSP	A DSP device on DSP-SPA is not responding. The error message indicates the slot subslot the SPA type and the name of the hardware device.	spa-dsp	"Software will try to recover by reloading the failed DSP. " "If the problem persists then perform OIR of the SPA located in the " "specified subslot. Before removing the SPA enter " "the <CmdBold>hw-module subslot stop<NoCmdBold> command. Remove the SPA " "wait 5 seconds and reinsert the SPA. If the problem persists copy " "the error message text exactly as it appears on the console or in the " "system log enter the <CmdBold>show diag <NoCmdBold> command contact " "your Cisco technical support representative and provide the " "representative with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DSP-3-DSP_KEEPALIVE	3-Error	DSP device [dec] is not responding. Trying to recover DSP device by reloading	A DSP device on DSP-SPA is not responding. The error message indicates the slot subslot the SPA type and the name of the hardware device.	spa-dsp	"Software will try to recover by reloading the failed DSP. " "If the problem persists then perform OIR of the SPA located in the " "specified subslot. Before removing the SPA enter " "the <CmdBold>hw-module subslot stop<NoCmdBold> command. Remove the SPA " "wait 5 seconds and reinsert the SPA. If the problem persists copy " "the error message text exactly as it appears on the console or in the " "system log enter the <CmdBold>show diag <NoCmdBold> command contact " "your Cisco technical support representative and provide the " "representative with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DSP3-DSP_WATCHDOG	3-Error	DSP device [dec] is not responding. Trying to recover DSP device by reloading	A DSP device on DSP-SPA is not responding. The error message indicates the slot subslot the SPA type and the name of the hardware device.	spa-dsp	"Software will try to recover by reloading the failed DSP. " "If the problem persists then perform OIR of the SPA located in the " "specified subslot. Before removing the SPA enter " "the <CmdBold>hw-module subslot stop<NoCmdBold> command. Remove the SPA " "wait 5 seconds and reinsert the SPA. If the problem persists copy " "the error message text exactly as it appears on the console or in the " "system log enter the <CmdBold>show diag <NoCmdBold> command contact " "your Cisco technical support representative and provide the " "representative with the gathered information."
DSP3-FIRMWARE_VERSION	3-Error	Downloading streamware... for device [dec]. DSP firmware information in image has different version from	DSP firmware version check	-	LOG_SID_NO_ACTION
DSP-3-TIMER	3-Error	[chars] timer expired for DSP [dec]	DSP timer has expired	-	LOG_SID_NO_ACTION
DSP-5-DNLD	5-Notice	DNLD started for device [dec]	DSP bootloader DNLD starte	-	LOG_SID_NO_ACTION
DSP-5-UPDOWN	5-Notice	DSP [dec] is [chars]	DSP device changed state up/down	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DSPDUMP5DUMPSTART	5-Notice	DSP [dec] 0x[hec] in slot [dec] starting dump	The DSP resource is beginning crash dump collection	-	LOG_SID_NO_ACTION
DSPDUMP5DUMPSTART	5-Notice	DSP [dec] 0x[hec] in slot [dec] starting dump	The DSP resource is beginning crash dump collection	-	LOG_SID_NO_ACTION
<del>DSPDUM5RXCONTROL_DROP</del>	5-Notice	DSP [dec] in slot [dec] Rx Control Message Dropped by DSP	The DSP has reported that a Rx Control Message was dropped	-	LOG_SID_NO_ACTION
<del>DSPDUM5RXCONTROL_DROP</del>	5-Notice	DSP [dec] in slot [dec] Rx Control Message Dropped by DSP	The DSP has reported that a Rx Control Message was dropped	-	LOG_SID_NO_ACTION
<del>DSPDUM5TXCONTROL_DROP</del>	5-Notice	DSP [dec] in slot [dec] Tx Control Message Dropped by DSP	The DSP has reported that a Tx Control Message was dropped	-	LOG_SID_NO_ACTION
<del>DSPDUM5TXCONTROL_DROP</del>	5-Notice	DSP [dec] in slot [dec] Tx Control Message Dropped by DSP	The DSP has reported that a Tx Control Message was dropped	-	LOG_SID_NO_ACTION
DSPFARM-3-ERROR	3-Error	Errors on DSPFARM module [chars]\n	Errors on DSPFARM module	dspfarm	" Check sh dspfarm all"
DSPFARM-3-ERROR	3-Error	Errors on DSPFARM module [chars]\n	Errors on DSPFARM module	dspfarm	" Check sh dspfarm all"
DSPFARM-3-ERROR	3-Error	[chars]	Error on DSPFARM module.	-	LOG_SID_SH_TECH_ACTION
DSPFARM-3-ERROR	3-Error	[chars]	Error on DSPFARM module.	-	LOG_SID_SH_TECH_ACTION
DSPFARM-4-INFO	4-Warning	Info on DSPFARM module [chars]\n	Info on DSPFARM module	dspfarm	" Check sh dspfarm"
DSPFARM-4-INFO	4-Warning	Info on DSPFARM module [chars]\n	Info on DSPFARM module	dspfarm	" Check sh dspfarm"
DSPFARM-4-NOTICE	4-Warning	Failure on DSPFARM module [chars]\n	Failure on DSPFARM module	dspfarm	" Check sh dspfarm"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DSPFARM-4-NOTICE	4-Warning	Failure on DSPFARM module [chars]\n	Failure on DSPFARM module	dspfarm	" Check sh dspfarm"
DSPFARM-4-WARNING	4-Warning	Warning on DSPFARM module [chars]\n	Warning on DSPFARM module	dspfarm	" Check sh dspfarm all"
DSPFARM-4-WARNING	4-Warning	Warning on DSPFARM module [chars]\n	Warning on DSPFARM module	dspfarm	" Check sh dspfarm all"
DSPRM-2-DSPALARM	2-Critical	Received alarm indication from dsp [dec]/[dec]. Resetting the DSP.	Fatal error detected in DSP.	voice-dsp	"contact your technical support representative."
DSPRM-2-DSPALARM	2-Critical	Received alarm indication from dsp [dec]/[dec]. Resetting the DSP.	Fatal error detected in DSP.	voice-dsp	"contact your technical support representative."
DSPRM-2-FORKFAIL	2-Critical	Process creation of [chars] failed.	Failed to create the process.	c3800	LOG_STD_ACTION
DSPRM-2-FORKFAIL	2-Critical	Process creation of [chars] failed.	Failed to create the process.	c3800	LOG_STD_ACTION
DSPRM-3-DSPALARM-INFO	3-Error	[chars]	DSP Alarm Data	-	""
DSPRM-3-DSPALARM-INFO	3-Error	[chars]	DSP Alarm Data	-	""
DSPRM-3-INSUFFICIENT	3-Error	Insufficient DSP resources for timeslot [dec] on port [chars]	The configuration requires more DSP resources than are available.	-	"Change the configuration to specify fewer used timeslots.\n\n Install additional DSP resources to allow more complex\n\n configurations."
DSPRM-3-INSUFFICIENT	3-Error	Insufficient DSP resources for timeslot [dec] on port [chars]	The configuration requires more DSP resources than are available.	-	"Change the configuration to specify fewer used timeslots.\n\n Install additional DSP resources to allow more complex\n\n configurations."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>DSPRM</del> INSUFFICIENT_DSP	3-Error	\nvoice-port : [chars] Not initialized due to insufficient DSP resources	More DSP resources are needed to initialize the analog voice-port	-	"Install additional DSP resources to allow voice-port initialization"
<del>DSPRM</del> INSUFFICIENT_DSP	3-Error	\nvoice-port : [chars] Not initialized due to insufficient DSP resources	More DSP resources are needed to initialize the analog voice-port	-	"Install additional DSP resources to allow voice-port initialization"
<del>DSPRM</del> DSP_VC_CONFIG_NAK	5-Notice	Received VIC config NAK from DSP[dec]/[dec] resetting the DSP.	Received NAK message from DSP. Re-attempt initialization.	-	LOG_SID_NO_ACTION
<del>DSPRM</del> DSP_VC_CONFIG_NAK	5-Notice	Received VIC config NAK from DSP[dec]/[dec] resetting the DSP.	Received NAK message from DSP. Re-attempt initialization.	-	LOG_SID_NO_ACTION
DSPRM-5-DSPFAIL	5-Notice	DSP [dec] in slot [chars] is in the failed state	The DSP entered the FAILED state due to alarm indications.	-	"Replace the DSP resource."
DSPRM-5-DSPFAIL	5-Notice	DSP [dec] in slot [chars] is in the failed state	The DSP entered the FAILED state due to alarm indications.	-	"Replace the DSP resource."
DSPRM-5-DSPMSGFAIL	5-Notice	Failed to get dsprm msg for msg id [chars]	Unable to get dsprm control message	-	LOG_SID_NO_ACTION
DSPRM-5-DSPMSGFAIL	5-Notice	Failed to get dsprm msg for msg id [chars]	Unable to get dsprm control message	-	LOG_SID_NO_ACTION
DSPRM-5-JUKEBOX	5-Notice	Jukebox transmit overlay resp [dec] on slot [chars] failed	The Jukebox received failed response code.	-	""
DSPRM-5-JUKEBOX	5-Notice	Jukebox transmit overlay resp [dec] on slot [chars] failed	The Jukebox received failed response code.	-	""
<del>DSPRM</del> JUKEBOX_UPDOWN	5-Notice	DSP Jukebox[dec] in slot [chars] changed state to [chars]	The DSP JUKEBOX changed state.	-	LOG_SID_NO_ACTION
<del>DSPRM</del> JUKEBOX_UPDOWN	5-Notice	DSP Jukebox[dec] in slot [chars] changed state to [chars]	The DSP JUKEBOX changed state.	-	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DSPRM-5-KEEPALIVE	5-Notice	DSP [dec] in slot [chars] NOT RESPONDING - auto restart[dec] times	The DSP failed the background keep-alive test.	-	LOG_SID_NO_ACTION
DSPRM-5-KEEPALIVE	5-Notice	DSP [dec] in slot [chars] NOT RESPONDING - auto restart[dec] times	The DSP failed the background keep-alive test.	-	LOG_SID_NO_ACTION
<del>DSPRM-5-NULLIDB_CREATE_FAILED</del>	5-Notice	VoIP Null IDB creation failed.	VoIP nullidb creation failed.	-	""
<del>DSPRM-5-NULLIDB_CREATE_FAILED</del>	5-Notice	VoIP Null IDB creation failed.	VoIP nullidb creation failed.	-	""
DSPRM-5-SETCODEC	5-Notice	Configured codec [dec] is not supported with this dsp image.	Codec negotiation failed.	-	""
DSPRM-5-SETCODEC	5-Notice	Configured codec [dec] is not supported with this dsp image.	Codec negotiation failed.	-	""
DSPRM-5-UP_DOWN	5-Notice	DSP [dec] in subslot [chars] changed state to [chars]	The DSP resource changed state.	-	LOG_SID_NO_ACTION
DSPRM-5-UP_DOWN	5-Notice	DSP [dec] in subslot [chars] changed state to [chars]	The DSP resource changed state.	-	LOG_SID_NO_ACTION
DSPRM-5-UPDOWN	5-Notice	DSP [dec] in slot [dec] changed state to [chars]	The DSP resource changed state.	-	LOG_SID_NO_ACTION
DSPRM-5-UPDOWN	5-Notice	DSP [dec] in slot [dec] changed state to [chars]	The DSP resource changed state.	-	LOG_SID_NO_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DSPU-3-ActpuNegResponse	3-Error	ACTPU Neg rsp received from PU [chars]	Remote PU rejected the router's request for an SSCP-PU session.	-	"Verify PU configuration parameters at the router and at the remote PU.\n\nDetermine whether the problem exists at the remote PU and correct it.\n\nIf the problem persists call your Cisco technical support\n\nrepresentative for assistance."
DSPU-3-CLSIbadAdptCor	3-Error	CLSI bad Adaptor correlator header= [chars]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
DSPU-3-CLSIbadIdentifier	3-Error	CLSI bad identifier header= [chars]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
DSPU-3-CLSIbadIdentifierType	3-Error	CLSI bad identifier type header= [chars]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
DSPU-3-CLSIbadLength	3-Error	CLSI bad length header= [chars]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
DSPU-3-CLSIbadPrimitiveCmd	3-Error	CLSI bad primitive command header= [chars]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
DSPU-3-CLSIbadPrimitiveType	3-Error	CLSI bad primitive type header= [chars]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
DSPU-3-CLSIbadReturnCode	3-Error	CLSI bad return code: [dec] header= [chars]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
DSPU-3-CLSIunexpectedActivateSapCnf	3-Error	CLSI unexpected ActivateSapCnf header= [chars]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
DSPU-3-CLSIunexpectedDeactivateSapCnf	3-Error	CLSI unexpected DeactivateSapCnf header= [chars]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
DSPU-3-CLSIunexpectedEnableCnf	3-Error	CLSI unexpected EnableCnf header= [chars]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DSPU3-CLSIUnexpectedIdStnInd	3-Error	CLSI unexpected IdStnInd header=[chars]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
DSPU3-DSPU_BuffCorruptd	3-Error	DSPU could not free buffer - buffer corrupted	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
DSPU3-LSConnInFailed	3-Error	Connect in from remote address [chars] failed.	Connection with the remote station could not be established because of\n\ninsufficient memory in the router.	-	"Correct low memory problem in the router. If the problem persists\n\n call your technical support representative for assistance."
DSPU3-LSConnInHostFailed	3-Error	Connect in from host [chars] with remote address [chars] failed.	Connection with the remote host could not be established.	-	"Verify host configuration parameters at the router and at the host.\n\n Determine whether the router is configured to accept connection from\n\n this host."
DSPU3-LSConnInPUFailed	3-Error	Connect in from pu [chars] with remote address [chars] failed.	Connection with the remote PU could not be established.	-	"Verify PU configuration parameters at the router and at the remote PU.\n\n Determine whether the router is configured to accept connectIn from\n\n this remote PU."
DSPU3-LSConnOutHostFailed	3-Error	Connect out to host [chars] failed.	Connection with the remote host could not be established.	-	"Verify host configuration parameters at the router and at the host.\n\n Determine whether the host is active and responding to connection\n\n requests."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DSFU3LSConnOuttoPUFailed	3-Error	Connect out to pu [chars] failed.	Connection with the remote PU could not be established.	-	"Verify PU configuration parameters at the router and at the remote PU.\n\ Determine whether the remote PU is active and responding to connection\n\ requests."
DSFU3LSInvalidMaxIFrame	3-Error	Connection attempt failed from XID= [chars] Invalid MaxIFrame= [dec]	-	-	"Correct link station configuration at the remote station."
DSFU3LSInvalidWindowSize	3-Error	Connection attempt failed from XID= [chars] Invalid WindowSize= [dec]	-	-	"Correct link station configuration at the remote station."
DSFU3LSNotACTPUCompatible	3-Error	Connection attempt failed from XID= [chars] ACTPU not supported	-	-	-
DSFU3LSXIDNegotiationError	3-Error	XID Negotiation Error bad byte= [dec] bad bit= [dec] sense data= [chars]	-	-	"Determine from the CV 22 byte or bit information which field in the\n\ XID3 is rejected by the remote station and correct the link station\n\ configuration parameters at either the router or the remote station."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DSPU-3-NotifyNegRsp	3-Error	LU [dec] received a Notify Neg Resp from host [chars]	Remote host rejected the router's request to activate/deactivate an\n\ SSCP-LU session.	-	"Verify host configuration parameters at the router and at the remote\n\ host. Determine whether the problem exists at the remote host and\n\ correct it. If the problem persists call your technical support\n\ representative for assistance."
DSPU-3-SnaBadData	3-Error	Bad SNA data received from PU [chars] data= [chars]	Unrecognized SNA data was received from the remote PU.	-	"Correct the problem at the remote PU. If the problem persists call\n\ your Cisco technical support representative for assistance."
DSPU-3-UnknownXid	3-Error	XID Format not supported XID= [chars]	-	-	-
DSS-3-ACK_FAIL	3-Error	Ack failed for dsp_id [dec]\n\ seq_no [dec]	DSP core not responding to host messages	-	LOG_SID_NO_ACTION
DSS-3-DSPID_INVALID	3-Error	Invalid DSPID [dec]	Invalid DSP ID detected in the message	-	LOG_SID_NO_ACTION
DSS-3-TIMER	3-Error	[chars] timer expired for DSPID [dec]	DSS timer has expired	-	LOG_SID_NO_ACTION
DSS-5-UPDOWN	5-Notice	DSP core [dec] is [chars]	DSP core changed state up/down	-	LOG_SID_NO_ACTION
DSX-4-ALARM	4-Warning	[chars] [chars]: [chars]	The specified T1/E1 or T3/E3 Alarm has been asserted or cleared	-	"The recommended action is to isolate and repair the" " source of the asserted alarm"
DSS-5-RBSINBUSYOUT	5-Notice	RBS of slot [dec] controller [dec] timeslot [dec] is dynamic busyout	-	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DSX05-RBSLINEDOWN	5-Notice	RBS of controller [dec] timeslot [dec] is down	-	-	LOG_STD_NO_ACTION
DSX05-RBSLINEBUSYOUT	5-Notice	RBS of slot [dec] controller [dec] timeslot [dec] is static busyout	-	-	LOG_STD_NO_ACTION
DSX05-RBSLINEUNBUSYOUT	5-Notice	RBS of slot [dec] controller [dec] timeslot [dec] is unbusyout	-	-	LOG_STD_NO_ACTION
DSX05-RBSLINEUP	5-Notice	RBS of controller [dec] timeslot [dec] is up	-	-	LOG_STD_NO_ACTION
DSX1FIRMWARE_RESET_FAILED	1-Alert	Trunk Firmware in slot [dec] reset failed	Trunk could not be restarted.	dsx1	LOG_STD_ACTION
DSX1FIRMWARE_RUNNING	1-Alert	T1/E1 Firmware in slot [dec] is running	T1/E1 Firmware is now running after recovering from critical error.	dsx1	LOG_STD_ACTION
DSX1FIRMWARE_STOPPED	1-Alert	T1/E1 Firmware in slot [dec] is not running	Critical error occurred in the T1/E1 Firmware and it stopped running. \n\n Access server needs to be reloaded.	dsx1	LOG_STD_ACTION
DSX1M2EINPUT_CONGEST	1-Alert	Munich 32 channel input queue is congested	Can't allocate receive buffers since input queue is at its maximum this indicates\n\n data is coming faster than the receiver can handle.	dsx1	"Reduce data goes into this channel and or increase the number of input queue."
DSX1FIRMWARE_RESTART	3-Error	T1/E1 Firmware in slot [dec] restarted	T1/E1 Firmware restarted. All the active calls on the T1/E1 lines\n\n will be disconnected and the controllers will come back up within\n\n few seconds	dsx1	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DSX1-3-M2_AR_FAILURE	3-Error	<del>MG_TRACEBACK_MGPROCS</del>	-	-	-
DSX1-3-M2_AR_TIMEOUT	3-Error	<del>MG_TRACEBACK_MGPROCS</del>	-	-	-
DSX1-3-M2_BAD_BITRATE	3-Error	<del>MG_TRACEBACK_MGPROCS</del>	-	-	-
DSX1-3-M2_BAD_INTQ	3-Error	<del>MG_TRACEBACK_MGPROCS</del>	-	-	-
DSX1-3-M2_BAD_STATE	3-Error	<del>MG_TRACEBACK_MGPROCS</del>	-	-	-
DSX1-3-M32_ERR	3-Error	<del>MG_TRACEBACK_MGPROCS</del>	-	-	-
DSX1-3-M2_ILLEGAL_CHANNEL	3-Error	<del>MG_TRACEBACK_MGPROCS</del>	-	-	-
DSX1-3-M2_MEM_ALLOC	3-Error	<del>MG_TRACEBACK_MGPROCS</del>	-	-	-
DSX1-3-M2_NO_TIMESLOT	3-Error	<del>MG_TRACEBACK_MGPROCS</del>	-	-	-
DSX1-3-M2_TIMESLOT_NUSE	3-Error	<del>MG_TRACEBACK_MGPROCS</del>	-	-	-
DSX1-3-NOMEMORY	3-Error	<del>MG_TRACEBACK_MGPROCS</del>	-	-	-
DSX1-6CLOCK_CHANGE	6-Information	[chars] clock is now selected as clock source	-	-	LOG_SID_NO_ACTION
<del>DTLS_MISSETPRACK</del>	6-Information	ewlc-ap	User ID:[chars] - DTLS Replay Attack for connection closed	DTLS Replay Attack for connection closed	LOG_STD_ACTION
<del>DTLS_MISSETPRACKD</del>	6-Information	ewlc-ap	User ID:[chars] - DTLS Replay Attack detected for Source IP[chars] and Dest IP[chars]	DTLS Replay Attack detected for Source IP and Dest IP	LOG_STD_ACTION
<del>DTLS_MISSETPRACKD</del>	6-Information	ewlc-ap	User ID:[chars] - DTLS peer has closed the connection	-	-
<del>DTLS_MISSETPRACKD</del>	6-Information	ewlc-ap	User ID:[chars] - DTLS connection established with peer	-	-
<del>DTLS_MISSETPRACKD</del>	6-Information	ewlc-ap	User ID:[chars] - Failed to complete DTLS handshake with peer	-	-
DISRCMG3MCDISR	3-Error	ewlc-ap	DTLS Error	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DISRCM3-ERR-EMR	3-Error	ewlc-ap	Cert verify Error	-	-
DLSRHLAY_HRROR_DLS	3-Error	DTLS anti-replay error src_addr: [char]i src_port: [dec] dest_addr: [char]i dst_port: [dec] seq_num: [node]x/[node]d	Anti-replay error is encountered for this DTLS session.	qfp-ipsec	LOG_STD_ACTION
DLSRHLAY_HRROR_P6_DLS	3-Error	DTLS anti-replay error ipv6 src_addr: [char]I src_port: [dec] ipv6 dest_addr: [char]I dst_port: [dec] seq_num: [node]x/[node]d	Anti-replay error is encountered for this DTLS session.	qfp-ipsec	LOG_STD_ACTION
DIP-4-MEM_UNAVAIL	4-Warning	Memory was not available to perform the trunk negotiation action	Unable to negotiate trunks because of a lack of memory	-	"Reduce other system activity to ease memory demands. If conditions\n\ warrant upgrade to a larger memory configuration."
DTP-4-TMRERR	4-Warning	An internal timer error occurred when trunking on interface [chars]	There might be some instances in which a timer used by the trunking\n\ protocol expires at a time when it is unexpected. This problem is\n\ corrected internally.	-	"There is likely no long-term ramifications from this problem. However\n\ if further problems with trunking are seen it is recommended that you\n\ reload the device."
DTP-4-UNKN_ERR	4-Warning	An unknown operational error occurred	Unable to negotiate trunks because an internal operation\n\ generated an error which was not expected to ever happen.	-	"Because of the unexpected nature of the problem the only recommended\n\ action is to reload the device"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DTP5-DCMANMISMATCH	5-Notice	Unable to perform trunk negotiation on port [chars] because of VTP domain mismatch.	The two ports involved in trunk negotiation belong to different \n\ VTP domains. Trunking is possible only when the ports involved belong to\n\ the same VTP domain.	ntp	"Ensure that the two ports that are involved in trunk negotiation belong to\n\ the same VTP domain."
DTP-5-ILGLCFG	5-Notice	Illegal configonisl--ondot1q on [chars]	The two ports on the link are set to the ON mode but one is set to\n\ 802.1Q encapsulation while the other is set to ISL encapsulation.\n\ When both ports on a link are set to the ON mode their encapsulation\n\ types must match	-	"Configure both ports on the link to have the same encapsulation."
DTP5-NONTRUNKPORT	5-Notice	Port [chars] has become non-trunk	The specified port has changed from being a trunk port to an access\n\ port.	-	""
DTP5-TRUNKPORTCHG	5-Notice	Port [chars] has changed from [chars] trunk to [chars] trunk	The specified trunk port has changed the encapsulation type is uses.	-	""
DTP5-TRUNKPORTON	5-Notice	Port [chars] has become [chars] trunk	The specified port has changed from being an access port to a trunk\n\ port using the specified encapsulation.	-	""
dtsec-1-BAD_IDB	1-Alert	Invalid Interface Descriptor Block	The driver tried to fetch the interface's IDB and failed	high-gig-ethernet	"Software bug - open a case with Development Engineering." LOG_SIDSH_TECH_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
dtsec-1-BAD_MEDIA	1-Alert	Unknown media-type in subblock	The media-type specified in the driver subblock is invalid	high-gig-ethernet	"Software bug - open a case with Development Engineering." LOG_SIDSH_TECH_ACTION
dtsec-1-BAD_PARTICLE	1-Alert	Problem getting particle size	The driver was unable to get the particle size for this interface	high-gig-ethernet	"Software bug - open a case with Development Engineering." LOG_SIDSH_TECH_ACTION
dtsec-1-BAD_PLUGIN	1-Alert	Plugin function table incomplete or missing	The driver could not access the PA's specific function table	high-gig-ethernet	"Software bug - open a case with Development Engineering." LOG_SIDSH_TECH_ACTION
dtsec-1-BAD_POOL	1-Alert	Could not init buffer pools	The driver failed to get a pool of buffers from IOS	high-gig-ethernet	"Software bug - open a case with Development Engineering." LOG_SIDSH_TECH_ACTION
dtsec-1-BAD_SB_NOMEM	1-Alert	[chars] - Cannot create IDB subblock due to insufficient memory	There was insufficient system memory to create the subblock.	high-gig-ethernet	"The router requires more main memory." LOG_SIDSH_TECH_ACTION
dtsec-1-BAD_STRUCT	1-Alert	Could not initialize structure	The driver failed to initialize a structure	high-gig-ethernet	"Software bug - open a case with Development Engineering." LOG_SIDSH_TECH_ACTION
dtsec-1-BAD_SUBBLOCK	1-Alert	[chars] - Could not install or use IDB subblock	An internal IOS error prevented the IDB subblock from being installed or used.	high-gig-ethernet	"Software bug - open a case with Development Engineering." LOG_SIDSH_TECH_ACTION
dtsec-1-IDBTYPE_UNK	1-Alert	Unknown IDBTYPE while starting driver	The IDBTYPE in the interface's instance structure is undefined for this driver	high-gig-ethernet	"Software bug - open a case with Development Engineering." LOG_SIDSH_TECH_ACTION
dtsec-1-INITFAIL_NOMEM	1-Alert	[chars] initialization failed no buffer memory	The Ethernet port initialization failed due to insufficient memory	high-gig-ethernet	"The router requires more packet memory - consider upgrade." LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
dtsec-1-MODE_INVALID	1-Alert	Unknown or invalid chip mode MII/TBI	The driver subblock contains an invalid or undefined chip operating mode MII or TBI mode	high-gig-ethernet	"Software bug - open a case with Development Engineering." LOG_SID_SH_TECH_ACTION
dtsec-1-RESET	1-Alert	MAC Still in Reset	An attempt was made to access the MAC while it was in reset	high-gig-ethernet	LOG_SID_SH_TECH_ACTION
dtsec-2-NOISL	2-Critical	Interface [chars] does not support ISL	ISL is not supported on the specified interface's hardware.	-	LOG_SID_NO_ACTION
dtsec-3-BAD_GBIC_EEPROM	3-Error	[chars] - GBIC contains a bad EEPROM	Interface contains a GBIC with a bad EEPROM. This causes the link to be down.	high-gig-ethernet	"Please make sure the GBIC type is compatible with the interface. "Verify that the GBIC was obtained from Cisco or a supported vendor"
dtsec-3-DUPLICATE	3-Error	[chars] - duplicate GBIC	The GBIC module for the interface specified in the error message is a duplicate of another GBIC in the system. As a result of the error both modules are disabled.	high-gig-ethernet	"Remove the duplicate module. If the problem persists LOG_STD_ACTION."
dtsec-3-ERRINT	3-Error	[chars] error interrupt mac_status = 0x[node]6llx	The MAC controller has signalled an error condition.	high-gig-ethernet	LOG_STD_ACTION
dtsec-3-MAC_LIMIT_EXCEEDED	3-Error	Unable to add mac address [enet]	Max number of allowed mac entries reached. Cannot add any more.	-	"Try removing some of the own mac addresses for example used by each" "unique hsrp group configuration. standby use-bia could be used to " "limit the usage"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
dscc3-NOT_SUPPORTED	3-Error	[chars] - unsupported GBIC	The GBIC module for the interface specified in the error message is not a Cisco-supported module. As a result of the error the module is disabled.	high-gig-ethernet	"Replace the module with a Cisco-supported GBIC. If the problem " "persists LOG_STD_ACTION."
dtsec-3-TOOBIG	3-Error	[chars] packet too big [dec] from [enet]	The interface detects a packet larger than what is defined by MTU	high-gig-ethernet	"Check the other station's MTU setting" LOG_STD_NO_ACTION
dscc3-UNKNOWN_GBIC	3-Error	[chars] - Unknown GBIC type	Interface contains a GBIC of unknown type. This causes the link to be down.	high-gig-ethernet	"Please make sure the GBIC type is compatible with the interface. " "Verify that the GBIC was obtained from Cisco or a supported vendor"
DUAL3-ANCHORCOUNT	3-Error	Anchor count negative	A software or hardware error occurred.	-	LOG_STD_ACTION
DUAL3-ANCHORCOUNT	3-Error	Anchor count negative	A software or hardware error occurred.	-	LOG_STD_ACTION
DUAL3-ANCHORCOUNT	3-Error	Anchor count negative	A software or hardware error occurred.	-	LOG_STD_ACTION
DUAL3-ANCHORCOUNT	3-Error	Anchor count negative	A software or hardware error occurred.	-	LOG_STD_ACTION
DUAL-3-BADCOUNT	3-Error	Route [chars] [dec] successors [dec] rdbs	A hardware or software error occurred.	-	LOG_STD_ACTION
DUAL-3-BADCOUNT	3-Error	Route [chars] [dec] successors [dec] rdbs	A hardware or software error occurred.	-	LOG_STD_ACTION
DUAL-3-BADCOUNT	3-Error	Route [chars] [dec] successors [dec] rdbs	A hardware or software error occurred.	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DUAL-3-BADCOUNT	3-Error	Route [chars] [dec] successors [dec] rdbs	A hardware or software error occurred.	-	LOG_STD_ACTION
DUAL-3-BADIGRPSAP	3-Error	Cannot send incremental SAP update to peer on [chars]. \tIncreasing output-sap-delay may help	An incremental SAP update could not be sent because this might cause\n the SAP tables between peers to become out of synch.	novell	"Increase the output SAP delay on the listed interface to reduce\n buffer usage. If after changing the delay the message remains\n copy the error message exactly as it appears and report it to your\n technical support representative."
DUAL-3-BADIGRPSAP	3-Error	Cannot send incremental SAP update to peer on [chars]. \tIncreasing output-sap-delay may help	An incremental SAP update could not be sent because this might cause\n the SAP tables between peers to become out of synch.	novell	"Increase the output SAP delay on the listed interface to reduce\n buffer usage. If after changing the delay the message remains\n copy the error message exactly as it appears and report it to your\n technical support representative."
DUAL-3-BADIGRPSAP	3-Error	Cannot send incremental SAP update to peer on [chars]. \tIncreasing output-sap-delay may help	An incremental SAP update could not be sent because this might cause\n the SAP tables between peers to become out of synch.	novell	"Increase the output SAP delay on the listed interface to reduce\n buffer usage. If after changing the delay the message remains\n copy the error message exactly as it appears and report it to your\n technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DUAL-3-BADIGRPSAP	3-Error	Cannot send incremental SAP update to peer on [chars]. Increasing output-sap-delay may help	An incremental SAP update could not be sent because this might cause the SAP tables between peers to become out of synch.	novell	"Increase the output SAP delay on the listed interface to reduce buffer usage. If after changing the delay the message remains copy the error message exactly as it appears and report it to your technical support representative."
DUAL-3-BADIGRPSAPIE	3-Error	Unsupported SAP type for EIGRP being [chars] - type [hec]	-	novell	"Copy the error message exactly as it appears and report it to your technical support representative. If possible also provide the output of the <bold>debug ipx sap activity</bold> and <bold>debug ipx sap event</bold> commands for the period during which this message appeared."
DUAL-3-BADIGRPSAPIE	3-Error	Unsupported SAP type for EIGRP being [chars] - type [hec]	-	novell	"Copy the error message exactly as it appears and report it to your technical support representative. If possible also provide the output of the <bold>debug ipx sap activity</bold> and <bold>debug ipx sap event</bold> commands for the period during which this message appeared."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DUAL-3-BADGRPSAPTYE	3-Error	Unsupported SAP type for EIGRP being [chars] - type [hec]	-	novell	"Copy the error message exactly as it appears and report it to your\n\ technical support representative. If possible also provide the output\n\ of the <bold>debug ipx sap activity<nobold> and <bold>debug ipx sap event<nobold> commands for the\n\ period during which this message appeared."
DUAL-3-BADGRPSAPTYE	3-Error	Unsupported SAP type for EIGRP being [chars] - type [hec]	-	novell	"Copy the error message exactly as it appears and report it to your\n\ technical support representative. If possible also provide the output\n\ of the <bold>debug ipx sap activity<nobold> and <bold>debug ipx sap event<nobold> commands for the\n\ period during which this message appeared."
DUAL-3-INTERNAL	3-Error	[chars] [dec]: Internal Error	A software or hardware error occurred.	-	LOG_STD_ACTION
DUAL-3-INTERNAL	3-Error	[chars] [dec]: Internal Error	A software or hardware error occurred.	-	LOG_STD_ACTION
DUAL-3-INTERNAL	3-Error	[chars] [dec]: Internal Error	A software or hardware error occurred.	-	LOG_STD_ACTION
DUAL-3-INTERNAL	3-Error	[chars] [dec]: Internal Error	A software or hardware error occurred.	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DUAL-3-LINKSEXIST	3-Error	Interface [chars] going down and [dec] links exist	-	-	LOG_STD_ACTION
DUAL-3-LINKSEXIST	3-Error	Interface [chars] going down and [dec] links exist	-	-	LOG_STD_ACTION
DUAL-3-LINKSEXIST	3-Error	Interface [chars] going down and [dec] links exist	-	-	LOG_STD_ACTION
DUAL-3-LINKSEXIST	3-Error	Interface [chars] going down and [dec] links exist	-	-	LOG_STD_ACTION
DUAL-3-LINKSTILLUP	3-Error	Link [dec] [chars] still exists on [chars]	A hardware or software error occurred.	-	LOG_STD_ACTION
DUAL-3-LINKSTILLUP	3-Error	Link [dec] [chars] still exists on [chars]	A hardware or software error occurred.	-	LOG_STD_ACTION
DUAL-3-LINKSTILLUP	3-Error	Link [dec] [chars] still exists on [chars]	A hardware or software error occurred.	-	LOG_STD_ACTION
DUAL-3-LINKSTILLUP	3-Error	Link [dec] [chars] still exists on [chars]	A hardware or software error occurred.	-	LOG_STD_ACTION
DUAL-3-MULTIFLOW	3-Error	Flow control error [chars] on [chars]	A hardware or software error occurred.	-	LOG_STD_ACTION
DUAL-3-MULTIFLOW	3-Error	Flow control error [chars] on [chars]	A hardware or software error occurred.	-	LOG_STD_ACTION
DUAL-3-MULTIFLOW	3-Error	Flow control error [chars] on [chars]	A hardware or software error occurred.	-	LOG_STD_ACTION
DUAL-3-MULTIFLOW	3-Error	Flow control error [chars] on [chars]	A hardware or software error occurred.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DUAL-3-NOBUFFER	3-Error	No buffers available for [node]byte packet	The DUAL software was unable to allocate a packet buffer. The system\n\n may be out of memory.	-	LOG_SIDSH_TFH_ACTION
DUAL-3-NOBUFFER	3-Error	No buffers available for [node]byte packet	The DUAL software was unable to allocate a packet buffer. The system\n\n may be out of memory.	-	LOG_SIDSH_TFH_ACTION
DUAL-3-NOBUFFER	3-Error	No buffers available for [node]byte packet	The DUAL software was unable to allocate a packet buffer. The system\n\n may be out of memory.	-	LOG_SIDSH_TFH_ACTION
DUAL-3-NOBUFFER	3-Error	No buffers available for [node]byte packet	The DUAL software was unable to allocate a packet buffer. The system\n\n may be out of memory.	-	LOG_SIDSH_TFH_ACTION
DUAL-3-NOHANDLE	3-Error	Handle [dec] is not allocated in pool.	A hardware or software error occurred.	-	LOG_STD_ACTION
DUAL-3-NOHANDLE	3-Error	Handle [dec] is not allocated in pool.	A hardware or software error occurred.	-	LOG_STD_ACTION
DUAL-3-NOHANDLE	3-Error	Handle [dec] is not allocated in pool.	A hardware or software error occurred.	-	LOG_STD_ACTION
DUAL-3-NOHANDLE	3-Error	Handle [dec] is not allocated in pool.	A hardware or software error occurred.	-	LOG_STD_ACTION
DUAL-3-NOMATCH	3-Error	Nexthop and infosource don't match. N = [chars] I = [chars]	A hardware or software error occurred.	-	LOG_STD_ACTION



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DUAL-3-NOMATCH	3-Error	Nextthop and infosource don't match. N = [chars] I = [chars]	A hardware or software error occurred.	-	LOG_STD_ACTION
DUAL-3-NOMATCH	3-Error	Nextthop and infosource don't match. N = [chars] I = [chars]	A hardware or software error occurred.	-	LOG_STD_ACTION
DUAL-3-NOMATCH	3-Error	Nextthop and infosource don't match. N = [chars] I = [chars]	A hardware or software error occurred.	-	LOG_STD_ACTION
DUAL-3-NOSOCKET	3-Error	Unable to open socket for AS [dec]	A hardware or software error occurred.	-	LOG_STD_ACTION
DUAL-3-NOSOCKET	3-Error	Unable to open socket for AS [dec]	A hardware or software error occurred.	-	LOG_STD_ACTION
DUAL-3-NOSOCKET	3-Error	Unable to open socket for AS [dec]	A hardware or software error occurred.	-	LOG_STD_ACTION
DUAL-3-NOSOCKET	3-Error	Unable to open socket for AS [dec]	A hardware or software error occurred.	-	LOG_STD_ACTION
DUAL-3-PEERSEXIST	3-Error	[dec] peers exist on IIDB [chars]	A software or hardware error occurred.	-	LOG_STD_ACTION
DUAL-3-PEERSEXIST	3-Error	[dec] peers exist on IIDB [chars]	A software or hardware error occurred.	-	LOG_STD_ACTION
DUAL-3-PEERSEXIST	3-Error	[dec] peers exist on IIDB [chars]	A software or hardware error occurred.	-	LOG_STD_ACTION
DUAL-3-PEERSEXIST	3-Error	[dec] peers exist on IIDB [chars]	A software or hardware error occurred.	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DUAL-3-PFXLIMIT	3-Error	[chars] [dec]: [chars] prefix limit reached[node]	Number of prefixes for eigrp has reached the configured or default limit.	-	"Use \"show ip eigrp accounting\" for details \"on the source of the prefixes and take corrective \" measures."
DUAL-3-PFXLIMIT	3-Error	[chars] [dec]: [chars] prefix limit reached[node]	Number of prefixes for eigrp has reached the configured or default limit.	-	"Use \"show ip eigrp accounting\" for details \"on the source of the prefixes and take corrective \" measures."
DUAL-3-PFXLIMIT	3-Error	[chars] [dec]: [chars] prefix limit reached[node]	Number of prefixes for eigrp has reached the configured or default limit.	-	"Use \"show ip eigrp accounting\" for details \"on the source of the prefixes and take corrective \" measures."
DUAL-3-PFXLIMIT	3-Error	[chars] [dec]: [chars] prefix limit reached[node]	Number of prefixes for eigrp has reached the configured or default limit.	-	"Use \"show ip eigrp accounting\" for details \"on the source of the prefixes and take corrective \" measures."
DUAL-3-RDBLEFT	3-Error	Lingering DRDB deleting IIDB dest [chars] nexthop [chars] [chars] origin [chars]	A software or hardware error occurred.	-	LOG_STD_ACTION
DUAL-3-RDBLEFT	3-Error	Lingering DRDB deleting IIDB dest [chars] nexthop [chars] [chars] origin [chars]	A software or hardware error occurred.	-	LOG_STD_ACTION
DUAL-3-RDBLEFT	3-Error	Lingering DRDB deleting IIDB dest [chars] nexthop [chars] [chars] origin [chars]	A software or hardware error occurred.	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DUAL-3-RDBLEFT	3-Error	Lingering DRDB deleting IIDB dest [chars] nexthop [chars] [chars] origin [chars]	A software or hardware error occurred.	-	LOG_STD_ACTION
DUAL-3-REFCOUNT	3-Error	Negative refcount in pakdesc [hec]	A software or hardware error occurred.	-	LOG_STD_ACTION
DUAL-3-REFCOUNT	3-Error	Negative refcount in pakdesc [hec]	A software or hardware error occurred.	-	LOG_STD_ACTION
DUAL-3-REFCOUNT	3-Error	Negative refcount in pakdesc [hec]	A software or hardware error occurred.	-	LOG_STD_ACTION
DUAL-3-REFCOUNT	3-Error	Negative refcount in pakdesc [hec]	A software or hardware error occurred.	-	LOG_STD_ACTION
DUAL-3-SIA	3-Error	Route [chars] stuck-in-active state in [chars] [dec]. Cleaning up	A hardware or software error occurred.	-	LOG_STD_ACTION
DUAL-3-SIA	3-Error	Route [chars] stuck-in-active state in [chars] [dec]. Cleaning up	A hardware or software error occurred.	-	LOG_STD_ACTION
DUAL-3-SIA	3-Error	Route [chars] stuck-in-active state in [chars] [dec]. Cleaning up	A hardware or software error occurred.	-	LOG_STD_ACTION
DUAL-3-SIA	3-Error	Route [chars] stuck-in-active state in [chars] [dec]. Cleaning up	A hardware or software error occurred.	-	LOG_STD_ACTION
DUAL-3-UNKTIMER	3-Error	Unknown timer type [dec] expiration	A hardware or software error occurred.	-	LOG_STD_ACTION
DUAL-3-UNKTIMER	3-Error	Unknown timer type [dec] expiration	A hardware or software error occurred.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DUAL-3-UNKTIMER	3-Error	Unknown timer type [dec] expiration	A hardware or software error occurred.	-	LOG_STD_ACTION
DUAL-3-UNKTIMER	3-Error	Unknown timer type [dec] expiration	A hardware or software error occurred.	-	LOG_STD_ACTION
DUAL-4-PFXLIMITTHR	4-Warning	[chars] [dec]: [chars] threshold prefix level[node]reached.	Number of prefixes in the topology database has reached the configured or default threshold level.	-	"Take preventive action by identifying the source of " "the prefixes. Use \"show ip eigrp accounting\" \" \"for details."
DUAL-4-PFXLIMITTHR	4-Warning	[chars] [dec]: [chars] threshold prefix level[node]reached.	Number of prefixes in the topology database has reached the configured or default threshold level.	-	"Take preventive action by identifying the source of " "the prefixes. Use \"show ip eigrp accounting\" \" \"for details."
DUAL-4-PFXLIMITTHR	4-Warning	[chars] [dec]: [chars] threshold prefix level[node]reached.	Number of prefixes in the topology database has reached the configured or default threshold level.	-	"Take preventive action by identifying the source of " "the prefixes. Use \"show ip eigrp accounting\" \" \"for details."
DUAL-4-PFXLIMITTHR	4-Warning	[chars] [dec]: [chars] threshold prefix level[node]reached.	Number of prefixes in the topology database has reached the configured or default threshold level.	-	"Take preventive action by identifying the source of " "the prefixes. Use \"show ip eigrp accounting\" \" \"for details."
DUAL-5-NBRCHANGE	5-Notice	[chars] [dec]: Neighbor [chars] [chars] is [chars]: [chars]	A neighbor went up or down.	-	LOG_SID_NO_ACTION
DUAL-5-NBRCHANGE	5-Notice	[chars] [dec]: Neighbor [chars] [chars] is [chars]: [chars]	A neighbor went up or down.	-	LOG_SID_NO_ACTION
DUAL-5-NBRCHANGE	5-Notice	[chars] [dec]: Neighbor [chars] [chars] is [chars]: [chars]	A neighbor went up or down.	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DUAL-5-NBRCHANGE	5-Notice	[chars] [dec]: Neighbor [chars] [chars] is [chars]: [chars]	A neighbor went up or down.	-	LOG_STD_NO_ACTION
DUAL-6-EVENT	6-Information	[chars] [chars]	A hardware or software error occurred.	-	LOG_STD_ACTION
DUAL-6-EVENT	6-Information	[chars] [chars]	A hardware or software error occurred.	-	LOG_STD_ACTION
DUAL-6-EVENT	6-Information	[chars] [chars]	A hardware or software error occurred.	-	LOG_STD_ACTION
DUAL-6-EVENT	6-Information	[chars] [chars]	A hardware or software error occurred.	-	LOG_STD_ACTION
DUAL-6-NBRINFO	6-Information	[chars] [dec]: Neighbor [chars] [chars] is [chars]: [chars]	Information regarding a neighbor.	-	LOG_STD_NO_ACTION
DUAL-6-NBRINFO	6-Information	[chars] [dec]: Neighbor [chars] [chars] is [chars]: [chars]	Information regarding a neighbor.	-	LOG_STD_NO_ACTION
DUAL-6-NBRINFO	6-Information	[chars] [dec]: Neighbor [chars] [chars] is [chars]: [chars]	Information regarding a neighbor.	-	LOG_STD_NO_ACTION
DUAL-6-NBRINFO	6-Information	[chars] [dec]: Neighbor [chars] [chars] is [chars]: [chars]	Information regarding a neighbor.	-	LOG_STD_NO_ACTION
DUP_ADDR_RCVD3CON	3-Error	ERRMSG_NOFLAGS	-	-	-
DUP_ADDR_RCVD3CON	3-Error	ERRMSG_NOFLAGS	-	-	-
DUP_ADDR_MSI_ECAC	2-Critical	ERRMSG_HAG_TRACEBACK	-	-	-
DUP_ADDR_MSI_ECAC	2-Critical	ERRMSG_HAG_TRACEBACK	-	-	-
DUP_ADDR_MSI_ECAC	2-Critical	ERRMSG_HAG_TRACEBACK	-	-	-
DUP_ADDR_MSI_ECAC	2-Critical	ERRMSG_HAG_TRACEBACK	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DWDMBCLEAR_G709_CIR	3-Error	Unable to clear g709 \ counter in slot [dec] rc = [dec]	The SPA driver was unable to clear the G.709 OTN protocol counters for bit errors	spa-eth-10ge	"Please check the configuration of the interfaces and controllers " "and correct the configuration if necessary. If the problem persists " "contact your Cisco technical support representative"
DWDMCONGALARM_RPT	3-Error	Failed to config report\n\ alarm [chars] slot [dec] rc = [dec]	The SPA driver could not configure one of the reporting status of the alarms	spa-eth-10ge	"Please check the configuration of the interfaces and controllers " "and correct the configuration if necessary. If the problem persists " "contact your Cisco technical support representative"
DWDMCONGALARM_THRSHD	3-Error	Failed to config threshold \n\ alarm [chars] slot [dec] rc = [dec]	The SPA driver could not configure one of the threshold alarms for the optical data or transport unit	spa-eth-10ge	"Please check the configuration of the interfaces and controllers " "and correct the configuration if necessary. If the problem persists " "contact your Cisco technical support representative"
DWDMCONGOMRHEAD_ID	3-Error	Failed to config [chars] [chars] slot [dec] rc = [dec]	The LC driver could not configure the tail trace identifier for the optical data or transport unit	-	"Please check the configuration of the interfaces and controllers " "and correct the configuration if necessary. If the problem persists " "contact your Cisco technical support representative"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DWDM3-CONFIG_PM	3-Error	Failed to config [chars] [chars] slot [dec] rc = [dec]	The LC driver could not configure the PM parameters for the optical data or transport unit	-	"Please check the configuration of the interfaces and controllers " "and correct the configuration if necessary. If the problem persists " "contact your Cisco technical support representative"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DWDM(CNFG)IXPOWER	3-Error	Failed to config \ transmit power [dec] on slot [dec] rc = [dec]	The SPA driver detected a error in configuring the Tx power level for the UT2 transponder module	spa-eth-10ge	"Please power down and reseal the indicated SPA card. " "If the condition persists copy the error message exactly as " "it appears. Next research and attempt to resolve the issue using " "the SPA hardware troubleshooting documentation as well as the tools " "and utilities provided at " <a href="http://www.cisco.com/errata">http://www.cisco.com/errata</a> If you still " "require assistance open a case with the Technical Assistance Center " "via the Internet at " <a href="http://www.cisco.com/techsupport">http://www.cisco.com/techsupport</a> or contact " "your Cisco technical support representative. Be sure to provide the " "the information you have gathered and a 'show tech-support' to " "your support representative or attach it to your case in non-zipped " "plain text format .txt."
DWDM(DWDM)CNFGAL	3-Error	Failed to [chars] [chars] in slot [dec] rc = [dec]	The SPA driver detected failure during configuring one of the DWDM parameters	spa-eth-10ge	"Reload the SPA card and if the problem" "persists call the technical assistance centre"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DWDM3DWMCEIN_OAL	3-Error	Failed receiving [chars] \ from slot [dec] rc = [dec]	The SPA driver did not receive the necessary optics information from the slot	spa-eth-10ge	"Please check the configuration of the interfaces and controllers " "and correct the configuration if necessary. If the problem persists " "contact your Cisco technical support representative"
DWDM3DWMNULL_NO	3-Error	DWDM info is NULL in [dec]	The SPA driver detected NULL information for DWDM	spa-eth-10ge	"Reload the SPA and if the problem persists" "contact the technical support representative"
DWDM3IPC_SHIM_INIT	3-Error	DWDM IPC SHIM init failed	The SPA driver detected failure during DWDM IPC SHIM initialization	spa-eth-10ge	"Please power down and reseal the indicated SPA card" "If the problem persists please contact your" "technical support representative"
DWDM3LC_ERR_STATS	3-Error	error sending LC stats to RP	The SPA driver encountered an error while sending the LC stats to the RP	spa-eth-10ge	"Reload the SPA card and if the problem persists" "call the technical support representative"
DWDM3MALLOC_FAIL	3-Error	malloc failure creating \ G.709 port on slot [dec]	The SPA driver detected a memory error on the SPA card	spa-eth-10ge	"Reload the card and if the problem persists " " call TAC"
DWDM3MINSASCRERR_HA	3-Error	stats for interface index [dec] could not be created with status [dec]	-	snmp-otn	"Copy the error message exactly as it appears and report it\n\ to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>DWDM3RPC_CREATED</del>	3-Error	stats for interface index [dec] could not be created with status [dec]	-	snmp-otn	"Copy the error message exactly as it appears and report it\n\ to your technical support representative."
<del>DWDM3RPC_DELETED</del>	3-Error	stats for interface index [dec] could not be deleted with status [dec]	-	spa-eth-10ge	"Copy the error message exactly as it appears and report it\n\ to your technical support representative."
DWDM3RPC_FAILED	3-Error	Application error rc = [dec]:	The system failed to retrieve the information required to \n\ execute the command	g709-dwdm	show version
DWDM3RPC_INIT_FAIL	3-Error	DWDM RPC init failure	The system failed to create the resources required to process user\n\ interface commands for transceivers. The error is not fatal but \n\ some \show\ commands could fail.	g709-dwdm	show version
<del>DWDM3RPC_PROCESSING</del>	3-Error	DWDM RPC error: [chars]	Non Fatal error occurred in processing an RPC message.	g709-dwdm	show version
DWDM3RX_G709_INFO	3-Error	Failed receiving G709 info \ from slot [dec] rc = [dec]	The SPA driver did not receive the necessary G.709 OTN protocol information from the slot	spa-eth-10ge	"Please check the configuration of the interfaces and controllers " "and correct the configuration if necessary. If the problem persists " "contact your Cisco technical support representative"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DWDM-RXLOS_THRESHOLD	3-Error	Failed to config \ rx los threshold = [dec] on slot [dec] rc = [dec]	The SPA driver detected an error in configuring the transponder receive power threshold	spa-eth-10ge	"Reload the SPA card and if the problem persists" "call TAC"
DWDM-3-TIMER_ERR	3-Error	Timer error	The Driver did not obtain an expired timer from the timer tree for the DWDM process	spa-eth-10ge	"The SPA driver has encountered an error event on the SPA card." "If the condition persists copy the error message exactly as " "it appears or contact " "your technical support representative"
DWDM-4-G709-ALARM	4-Warning	[chars]: [chars] [chars]	The specified G709 Alarm has been declared or released	g709-dwdm	"Recommended action is to repair the source of the alarm."
DWDM-LOOPBACK_DETECTED	3-Error	Loop-back detected on [chars].	Loop-back may be caused by accidentally plugging a balun cable into the port or there may be a misconfiguration in the network.	firmware	"Correct the problem causing the loopback " "condition. Then bring the port up by entering the shutdown " "then no shutdown interface configuration commands."
DWDM-GAS-POWER_LOSS	0-Emergency	Shutdown due to power loss	This is a fail over message which is logged if this unit is about to shutdown due to power loss.	-	"Verify that the unit is powered on and power cables are" " connected correctly."
DWDM-GAS-HOST_NOT_SUP	6-Information	[chars] host [node] is not supported for dyinggasp notification due to [chars]\n	This message id logged if dying gasp ignores either SNMP or Syslog host for dying gasp notification.	-	"No action necessary"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DYNCMD3CHANDEFAL	3-Error	Parse chain link add failed for '[chars]'	An error has occurred when a dynamic command is being added to the IOS command set. The commands specified will not be available.	iosxe-shellmgr	LOG_STD_ACTION
DYNCMD3CHANDEFAL	3-Error	Parse chain link delete failed for '[chars]'	An error has occurred when a dynamic command is being removed from the IOS command set. The commands specified will stil not be available.	iosxe-shellmgr	LOG_STD_ACTION
DYNCMD3FLAGSINUSE	3-Error	New feature flags list [node]invalid while feature flags in use %u	IOS received a message to set the feature flags for the CLI. The message received to set the feature flags changed the number of feature flags which is unexpected. The message is ignored.	iosxe-shellmgr	LOG_STD_ACTION
DYNCMD3FLAGSNVALD	3-Error	New feature flag list values [node]different than expected %u	-	-	-
DYNCMD-3-INIT	3-Error	Dynamic command subsystem failed to initialize '[chars]'	Some features depend on portions of the dynamic command infrastructure. Such features will be unavailable.	iosxe-shellmgr	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>DYNCMD</del> LINKNADAT	3-Error	Link alternate node message received for node '[chars]' which cannot have an alternate.	IOS received a message to add a command into the CLI. One of the messages to link nodes instructed IOS to link nodes which would result in an invalid construction.	iosxe-shellmgr	LOG_STD_ACTION
<del>DYNCMD</del> LINKNADTRANS	3-Error	Link transition '[chars]' message received for node '[chars]' which cannot have such a transition.	IOS received a message to add a command into the CLI. One of the messages to link nodes instructed IOS to link nodes which would result in an invalid construction.	iosxe-shellmgr	LOG_STD_ACTION
<del>DYNCMD</del> LINKOUTOFSEQ	3-Error	Create node message received when in mode '[chars]'	IOS received a message to add a command node into the CLI. The message was received out of sequence	iosxe-shellmgr	LOG_STD_ACTION
<del>DYNCMD</del> LINKUNKNOWNACCEPT	3-Error	Link node message received for unknown accept [chars] node '[node]	-	-	-
<del>DYNCMD</del> LINKUNKNOWNALTERNATE	3-Error	Link node message received for unknown alternate node '[node]	IOS received a message to add a command into the CLI. One of the messages to link nodes referenced a node unknown to IOS	iosxe-shellmgr	LOG_STD_ACTION
<del>DYNCMD</del> LINKUNKNOWNODE	3-Error	Link node message received for unknown node '[node]	IOS received a message to add a command into the CLI. One of the messages to link nodes referenced a node unknown to IOS	iosxe-shellmgr	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DYNCD3MSGBUHR	3-Error	Unable to acquire a BIPC buffer for sending messages.	A message was to be sent by IOS but no BIPC buffer was available. The message to be sent has been discarded and the associated operation failed.	iosxe-shellmgr	LOG_STD_ACTION
DYNCD3MSGBCERR	3-Error	Unable to process received BIPC messages for Dynamic Commands error: [chars]	An unexpected condition has occurred while IOS was trying to process a received BIPC message for Dynamic Commands.	iosxe-shellmgr	LOG_STD_ACTION
DYNCD3MSGBUIDRR	3-Error	Error '[dec]' building TDL message '[chars]' to send to the Shell Manager	An unexpected condition has occurred while IOS is building a TDL message to send to the Shell Manager	iosxe-shellmgr	LOG_STD_ACTION
DYNCD3MSGDISPATCH	3-Error	Unable to dispatch received TDL messages for Dynamic Commands	An unexpected condition has occurred while IOS is trying to dispatch to the TDL message handler functions for received TDL messages for Dynamic Commands.	iosxe-shellmgr	LOG_STD_ACTION
DYNCD3MSGNULL	3-Error	Received NULL TDL message	An unexpected condition in which IOS has received a NULL TDL message for Dynamic Commands.	iosxe-shellmgr	LOG_STD_ACTION
DYNCD3MSGQUEURR	3-Error	Error queueing TDL message '[chars]' to send to the Shell Manager	An unexpected condition has occurred when IOS attempted to queue a TDL message to send to the Shell Manager	iosxe-shellmgr	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DYNCMD3MSGERROR	3-Error	Error '[chars]' handling a received TDL message '[chars]' for Dynamic Commands	An unexpected condition has occurred while IOS is processing a received Dynamic Command TDL message	iosxe-shellmgr	LOG_STD_ACTION
DYNCMD3MSGADHLDN	3-Error	Invalid field '[chars]' in TDL message '[chars]' received: value '[node]' for Dynamic Commands	A message with an invalid field value was received for Dynamic Command creation	iosxe-shellmgr	LOG_STD_ACTION
DYNCMD3MSGADHLSR	3-Error	Invalid field '[chars]' value '[chars]' in TDL message '[chars]' received for Dynamic Commands	A message with an invalid field value was received for Dynamic Command creation	iosxe-shellmgr	LOG_STD_ACTION
DYNCMD3MSGASERRR	3-Error	Error '[dec]' marshaling TDL message '[chars]' to send to the Shell Manager	An unexpected condition has occurred while IOS is marshaling TDL message to send to the Shell Manager	iosxe-shellmgr	LOG_STD_ACTION
DYNCMD3MSGMSCHD	3-Error	Missing field '[chars]' in TDL message '[chars]' received from the Shell Manager	A message missing a required field was received from the Shell Manager	iosxe-shellmgr	LOG_STD_ACTION
DYNCMD3MSGNODEUICAE	3-Error	Create node message received for duplicate node '[node]	IOS received a message to add a command into the CLI. One of the command nodes to be created has an identifier of an existing node. The new node is ignored.	iosxe-shellmgr	LOG_STD_ACTION
DYNCMD3MSGNODEUIOSQ	3-Error	Create node message received when in mode '[chars]'	IOS received a message to add a command node into the CLI. The message was received out of sequence	iosxe-shellmgr	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>DYNCMD3</del> DNODEUNKNOWN	3-Error	Create node message received for unknown node type '[dec]' '[chars]'	IOS received a message to add a command into the CLI. One of the command nodes to be created is of a type unknown to IOS	iosxe-shellmgr	LOG_STD_ACTION
<del>DYNCMD3</del> DKCHRLOGFAIL	3-Error	Failed to log errors for package '[chars]'	An error has occurred updating the commandset for a newly installed package. The commands which failed to transfer could not be saved for further analysis.	iosxe-shellmgr	LOG_STD_ACTION
<del>DYNCMD3</del> DKGANDEREMOVE	3-Error	Package '[chars]' failed to remove: [chars] [chars]	-	-	-
<del>DYNCMD3</del> DKGANDEREWRE	3-Error	Package '[chars]' failed to write: [chars] [chars]	-	-	-
DYNCMD3PKGINT_API	3-Error	Package interface failure for package '[chars]': [chars]	Some features' configuration depends on a packaging infrastructure. Packaged configuration for the specified package will be unavailable.	iosxe-shellmgr	LOG_STD_ACTION
DYNCMD3PKGINT_ARG	3-Error	Incorrect argument type for package '[chars]' operation '[chars]': [chars] %u	-	-	-
<del>DYNCMD3</del> DKN/ARGNUMBVAL	3-Error	Invalid argument value for package '[chars]' operation '[chars]': [node]%u	-	-	-
<del>DYNCMD3</del> DKN/ARGQVAL	3-Error	Invalid argument value for package '[chars]' operation '[chars]': [node]%u	-	-	-



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DYNCMD3PKGNT_ARCS	3-Error	Incorrect argument count for package '[chars]' operation '[chars]': [dec] not [dec]	An error has occurred loading the commandset for a newly installed package. The package is not compatible with the running IOS instance.	iosxe-shellmgr	LOG_STD_ACTION
DYNCMD3PKNTR_CREATE	3-Error	Package integration failed to create directory: [chars] [chars]	-	-	-
DYNCMD3PKNTR_MOVE	3-Error	Package integration failed to move directory: [chars] to [chars] [chars]	-	-	-
DYNCMD3PKNTR_OPEN	3-Error	Package integration failed to open directory: [chars] [chars]	-	-	-
DYNCMD3PKNTR_REMOVE	3-Error	Package integration failed to remove directory: [chars] [chars]	-	-	-
DYNCMD3PKNTR_FILE_OPEN	3-Error	Package integration failed to open file: [chars] [chars]	-	-	-
DYNCMD3PKNTR_FILE_REMOVE	3-Error	Package integration failed to remove: [chars] [chars]	-	-	-
DYNCMD3PKNTR_INSTALL	3-Error	Failed to install '[chars]': [chars]	Some features' configuration depends on a packaging infrastructure. Packaged configuration for the specified package will be unavailable.	iosxe-shellmgr	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DYNCD3FKGNT_LOAD	3-Error	Failed to load '[chars]': [chars]	Some features' configuration depends on a packaging infrastructure. Packaged configuration for the specified package will be unavailable.	iosxe-shellmgr	LOG_STD_ACTION
DYNCD3FKGNT_LOCK	3-Error	Failed to acquire package list lock for [chars]: [chars]	An error occurred when a configuration package was being installed or removed. This may indicate a timeout which may be a temporary condition.	iosxe-shellmgr	LOG_STD_ACTION
DYNCD3FKGNT_CHSET	3-Error	Invalid offset argument for package '[chars]' operation '[chars]': [chars] %u	-	-	-
DYNCD3FKGNT_LOCK	3-Error	[chars] failed to acquire package lock for [chars]	An error occurred when locking a configuration package. The package needs to be locked for processing configuration commands or timer-based processing of configuration data.	iosxe-shellmgr	LOG_STD_ACTION
DYNCD3FKGNT_SYMBL	3-Error	Package [chars] incompatible: symbol '[chars]' is of type [chars] expected [chars]	Some features' configuration depends on a packaging infrastructure. Packaged configuration for the specified package will be unavailable.	iosxe-shellmgr	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DYNCMD3-KCNT_UNLOCK	3-Error	Failed to release the package list lock: [chars]	An error occurred when a configuration package was being installed or removed. This should not occur.	iosxe-shellmgr	LOG_STD_ACTION
DYNCMD3-KCNT_VALIDATE	3-Error	Failed to validate '[chars]': [chars]	Some features' configuration depends on a packaging infrastructure. Packaged configuration for the specified package will be unavailable.	iosxe-shellmgr	LOG_STD_ACTION
DYNCMD3-KNODE_ADD_FAIL	3-Error	Parse node add failed for package '[chars]' [chars] %u	-	-	-
DYNCMD3-TREETOP	3-Error	Unable to link top-level keyword '[chars]' into parse tree	IOS received a message to add a command into the CLI. The appropriate location to link in the command could not be found.	iosxe-shellmgr	LOG_STD_ACTION
DYNCMD3-RECON_KEYWORD	3-Error	The top-level parser transition '[chars]' is not a keyword	IOS received a message to add a command into the CLI. The top-level node must be a keyword node.	iosxe-shellmgr	LOG_STD_ACTION
DYNCMD3-SET_LOADED	7-Debug	The Dynamic Command set has been loaded from the Shell Manager	IOS has completed loading the set of commands published and processed by components running in packages other than the IOS package.	iosxe-shellmgr	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>DNMD</del> DNMDSEUNOADD	7-Debug	The Dynamic Command set from the Shell Manager has been unloaded	IOS has completed unloading the Dynamic Command set. This should only occur when a new package has been installed and should shortly be followed by a message indicating that the new Dynamic Command set has been loaded.	iosxe-shellmgr	LOG_SID_NO_ACTION
<del>DNMD</del> DNMDKNUNSAIED	7-Debug	The command package '[chars]' has been succesfully installed	IOS has completed installation of the specified command package. Configuration commands for the package are now available.	iosxe-shellmgr	LOG_SID_NO_ACTION
<del>DNMD</del> DNMDKNUNSAIED	7-Debug	The command package '[chars]' has been succesfully uninstalled	IOS has completed uninstallation of the specified command package. Configuration commands for the package are no longer available.	iosxe-shellmgr	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
E_CFM2NT_ALLOC_FAIL	2-Critical	Failed to allocate memory required for initialization.	CFM failed to allocate a memory required for the feature to operate correctly. This likely indicates a resource limitation or an attempt to use the software on unsupported hardware.	ethernet-cfm	"Confirm that the configured scale does not exceed the permitted limits " "for the hardware and that any other resource issues are resolved. If " "problems are still observed copy the error message exactly as it " "appears on the console or in the system log call your Cisco technical " "support representative and provide the representative with the " "gathered information. "
E_CFM2NT_ALLOC_FAIL	2-Critical	Failed to allocate memory required for initialization.	CFM failed to allocate a memory required for the feature to operate correctly. This likely indicates a resource limitation or an attempt to use the software on unsupported hardware.	ethernet-cfm	"Confirm that the configured scale does not exceed the permitted limits " "for the hardware and that any other resource issues are resolved. If " "problems are still observed copy the error message exactly as it " "appears on the console or in the system log call your Cisco technical " "support representative and provide the representative with the " "gathered information. "

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<u>ECM3CAPABILITY_UPDATE</u>	2-Critical	Platform has indicated an invalid capability update which has been ignored.	Platform code has indicated that its capabilities have changed based on a configuration knob but the updated values were inconsistent.	ethernet-cfm	"This likely indicates a programming error in Platform code but should " "not present a problem unless either of MA Alias and SLM over xconnect " "features are required. See documentation for this platform/release."
<u>ECM3CAPABILITY_UPDATE</u>	2-Critical	Platform has indicated an invalid capability update which has been ignored.	Platform code has indicated that its capabilities have changed based on a configuration knob but the updated values were inconsistent.	ethernet-cfm	"This likely indicates a programming error in Platform code but should " "not present a problem unless either of MA Alias and SLM over xconnect " "features are required. See documentation for this platform/release."
<u>E_CFM3CONFIG_ERROR</u>	3-Error	CFM mis-configuration in the network. Continuity-check message is received from mac-address [enet] with duplicated mpid [dec] as configured locally for service MA name [chars] with [chars] of domain [chars].	The same MPID as a locally configured MEP but different source MAC Address than its own. The maintenance name can be either maintenance domain or maintenance association. This message may be for a particular vlan or evc with the corresponding MA.	ethernet-cfm	"Configure the CFM maintenance end points properly " "by giving unique mpid in a particular maintenance " "domain or association."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
E_CFM3CONFIG_ERROR	3-Error	CFM mis-configuration in the network. Continuity-check message is received from mac-address [enet] with duplicated mpid [dec] as configured locally for service MA name [chars] with [chars] of domain [chars].	The same MPID as a locally configured MEP but different source MAC Address than its own. The maintenance name can be either maintenance domain or maintenance association. This message may be for a particular vlan or evc with the corresponding MA.	ethernet-cfm	"Configure the CFM maintenance end points properly " "by giving unique mpid in a particular maintenance " "domain or association."
E_CFM3CONFIG_LOST	3-Error	Failed to update CFM internal state to reflect configuration change: [chars]	CFM failed to save the CFM configuration in response to the recent change. The reason for this may be due to a memory shortage. The user should resolve any memory problems and then check the CFM configuration and if necessary re-add any config that is missing.	ethernet-cfm	"Collect the output of <CmdBold>show tech-support ethernet-cfm</noCmdBold> " "as soon as possible after the problem is seen. " LOG_STD_ACTION
E_CFM3CONFIG_LOST	3-Error	Failed to update CFM internal state to reflect configuration change: [chars]	CFM failed to save the CFM configuration in response to the recent change. The reason for this may be due to a memory shortage. The user should resolve any memory problems and then check the CFM configuration and if necessary re-add any config that is missing.	ethernet-cfm	"Collect the output of <CmdBold>show tech-support ethernet-cfm</noCmdBold> " "as soon as possible after the problem is seen. " LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CFMFCSCONNCDSEME</del>	3-Error	Continuity Check message is received from remote MEP mpid [dec] with service MA name [chars] [chars] MAC: [enet] for service MA name [chars] of domain [chars] level [node]	The Continuity Check message whose MA name or MA level is different from what is locally configured on the device for the given EVC or VLAN thereby indicating that there is a potential for having a cross-connected service in the network.	ethernet-cfm	"Configure the CFM MA name or MA level properly across " "the network."
<del>CFMFCSCONNCDSEME</del>	3-Error	Continuity Check message is received from remote MEP mpid [dec] with service MA name [chars] [chars] MAC: [enet] for service MA name [chars] of domain [chars] level [node]	The Continuity Check message whose MA name or MA level is different from what is locally configured on the device for the given EVC or VLAN thereby indicating that there is a potential for having a cross-connected service in the network.	ethernet-cfm	"Configure the CFM MA name or MA level properly across " "the network."
<del>CFMFCCHKMPEMSG</del>	3-Error	The device does not receive any CC messages from a remote MEP with mpid [dec] MA name [chars] that it was expecting to be part of the [chars] in the domain [chars].	The configured remote MEP does not come up during the cross-check start timeout interval. This message may be for a particular vlan or evc with the corresponding MA.	ethernet-cfm	"There could be a possible fault in the network. " "Check the CFM cross check configurations are " "proper. "
<del>CFMFCCHKMPEMSG</del>	3-Error	The device does not receive any CC messages from a remote MEP with mpid [dec] MA name [chars] that it was expecting to be part of the [chars] in the domain [chars].	The configured remote MEP does not come up during the cross-check start timeout interval. This message may be for a particular vlan or evc with the corresponding MA.	ethernet-cfm	"There could be a possible fault in the network. " "Check the CFM cross check configurations are " "proper. "



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HCNRCSEKKNUNKNOW</del>	3-Error	The device received a CC message from a remote MEP having mpid [dec] [chars] with MAC: [enet] that it was not expecting to be part of the MA name [chars] in the domain: [chars].	The received remote MEP is not there in the static list configured. This message may be for a particular vlan or evc with the corresponding MA.	ethernet-cfm	"Check whether the CFM crosscheck configurations " "are proper."
<del>HCNRCSEKKNUNKNOW</del>	3-Error	The device received a CC message from a remote MEP having mpid [dec] [chars] with MAC: [enet] that it was not expecting to be part of the MA name [chars] in the domain: [chars].	The received remote MEP is not there in the static list configured. This message may be for a particular vlan or evc with the corresponding MA.	ethernet-cfm	"Check whether the CFM crosscheck configurations " "are proper."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
E_CFM3FAULT_ALARM	3-Error	A fault has occurred in the network for the local MEP having mpid [dec] [chars] for service MA name [chars] with the event code [chars].	This indicates a fault in the network. Event code: RDICCM: Remote MEP has reported RDI in CCM Event code: MACstatus: The last CCM received by this MEP from some remote MEP indicated that the transmitting MEP's associated MAC is reporting an error status via the Port Status TLV or Interface Status TLV. Event code: RemoteCCM: This MEP is not receiving CCMs from some other MEP in its configured list. Event code: ErrorCCM: This MEP is receiving invalid CCMs. Event code: XconCCM: This MEP is receiving CCMs that could be from some other MA.	ethernet-cfm	"There could be a possible fault in the network. " "Check whether the cfm configurations are proper."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
E_CFM3FAULT_ALARM	3-Error	A fault has occurred in the network for the local MEP having mpid [dec] [chars] for service MA name [chars] with the event code [chars].	This indicates a fault in the network. Event code: RDICCM: Remote MEP has reported RDI in CCM Event code: MACstatus: The last CCM received by this MEP from some remote MEP indicated that the transmitting MEP's associated MAC is reporting an error status via the Port Status TLV or Interface Status TLV. Event code: RemoteCCM: This MEP is not receiving CCMs from some other MEP in its configured list. Event code: ErrorCCM: This MEP is receiving invalid CCMs. Event code: XconCCM: This MEP is receiving CCMs that could be from some other MA.	ethernet-cfm	"There could be a possible fault in the network. " "Check whether the cfm configurations are proper."
E_CFM3FORWARDINGLOOP	3-Error	Continuity Check message is received with same source MAC [enet] and mpid [dec] [chars] of its own in the MA name [chars].	The device is receiving its own CC messages for a particular vlan or evc within the same MA.	ethernet-cfm	"Configure the CFM maintenance points properly " "to avoid the forwarding loop."
E_CFM3FORWARDINGLOOP	3-Error	Continuity Check message is received with same source MAC [enet] and mpid [dec] [chars] of its own in the MA name [chars].	The device is receiving its own CC messages for a particular vlan or evc within the same MA.	ethernet-cfm	"Configure the CFM maintenance points properly " "to avoid the forwarding loop."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<u>ECM</u> <del>IR</del> <u>FROM</u> <del>WRONG</del> <u>IP</u>	3-Error	received Loopback Reply with correct Transaction IDentifier but from a Maintenance Point different than Loopback Message's destination	An unknown destination sent a reply to a Loopback messages that was intended to another device.	ethernet-cfm	"Verify if the correct destination mac address was specified in the Command Line Interface" " while sending Loopback Message."
<u>ECM</u> <del>IR</del> <u>FROM</u> <del>WRONG</del> <u>IP</u>	3-Error	received Loopback Reply with correct Transaction IDentifier but from a Maintenance Point different than Loopback Message's destination	An unknown destination sent a reply to a Loopback messages that was intended to another device.	ethernet-cfm	"Verify if the correct destination mac address was specified in the Command Line Interface" " while sending Loopback Message."
<u>ECM</u> <del>IR</del> <u>MAC</u> <del>S</del> <u>US</u> <del>C</del> <u>HANGE</u> <del>AL</del>	3-Error	Failed to set MAC layer operational state for [chars] to [chars].	CFM failed to update the state of the MAC layer for the specified interface in response to a change in the errors detected on the interface. If the MAC layer state is incorrect it is possible that data traffic flow through the interface will be affected either by traffic unexpectedly being allowed to pass through the interface or by traffic unexpectedly being dropped.	ethernet-cfm	"Collect the output of <CmdBold>show tech-support ethernet-cfm</CmdBold> " "as soon as possible after the problem is seen. " LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
E_CFM3MAC_STATE_CHANGE	3-Error	Failed to set MAC layer operational state for [chars] to [chars].	CFM failed to update the state of the MAC layer for the specified interface in response to a change in the errors detected on the interface. If the MAC layer state is incorrect it is possible that data traffic flow through the interface will be affected either by traffic unexpectedly being allowed to pass through the interface or by traffic unexpectedly being dropped.	ethernet-cfm	"Collect the output of <CmdBold>show tech-support ethernet-cfm</noCmdBold> " "as soon as possible after the problem is seen. " LOG_STD_ACTION
E_CFM3OIR_RESTORE	3-Error	Failed to restore CFM configuration on OIR insertion: [chars]	CFM failed to restore the CFM configuration that was previously present on the interface prior to the OIR event. The user may need to be manually reconfigure the interface instead.	ethernet-cfm	"Collect the output of <CmdBold>show tech-support ethernet-cfm</noCmdBold> " "as soon as possible after the problem is seen. " LOG_STD_ACTION
E_CFM3OIR_RESTORE	3-Error	Failed to restore CFM configuration on OIR insertion: [chars]	CFM failed to restore the CFM configuration that was previously present on the interface prior to the OIR event. The user may need to be manually reconfigure the interface instead.	ethernet-cfm	"Collect the output of <CmdBold>show tech-support ethernet-cfm</noCmdBold> " "as soon as possible after the problem is seen. " LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
E_CFM-3-OIR_SAVE	3-Error	Failed to save CFM configuration on OIR removal: [chars]	CFM failed to save the CFM configuration that was previously present on the interface prior to the OIR event. The user may need to be manually reconfigure the interface on reinsertion.	ethernet-cfm	"Collect the output of <CmdBold>show tech-support ethernet-cfm</CmdBold> " "as soon as possible after the problem is seen. " LOG_STD_ACTION
E_CFM-3-OIR_SAVE	3-Error	Failed to save CFM configuration on OIR removal: [chars]	CFM failed to save the CFM configuration that was previously present on the interface prior to the OIR event. The user may need to be manually reconfigure the interface on reinsertion.	ethernet-cfm	"Collect the output of <CmdBold>show tech-support ethernet-cfm</CmdBold> " "as soon as possible after the problem is seen. " LOG_STD_ACTION
E_CFM-3-REMOTE_MP_DOWN	3-Error	Remote MEP mpid [dec] [chars] MA name [chars] in domain [chars] changed state to down with event code [chars].	The entry in CCDB corresponding to this MEP times out or the device receives a CC message with zero hold-time Event code: LastGasp: A valid Continuity Check message with a zero hold-time is received from a remote MEP and the device either has a valid non-expired CCDB	ethernet-cfm	"Check the remote CFM configurations using CFM " " utilities like traceroute and ping."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ECFM</del> REMCIEMPDOWN	3-Error	Remote MEP mpid [dec] [chars] MA name [chars] in domain [chars] changed state to down with event code [chars].	The entry in CCDB corresponding to this MEP times out or the device receives a CC message with zero hold-time Event code: LastGasp: A valid Continuity Check message with a zero hold-time is received from a remote MEP and the device either has a valid non-expired CCDB	ethernet-cfm	"Check the remote CFM configurations using CFM " " utilities like traceroute and ping."
<del>ECFM</del> BIMOUTTOOSMAL	3-Error	Attempted to start a timer with a value less than the minimum permitted [node]s defaulting to [node]s.	-	-	-
<del>ECFM</del> BIMOUTTOOSMAL	3-Error	Attempted to start a timer with a value less than the minimum permitted [node]s defaulting to [node]s.	-	-	-
<del>ECFM</del> FCOSCHKSMCEUP	6-Information	The device received CC messages from all remote MEPs within a given MA name [chars] in the maintenance domain [chars].	The service configured either MA is up as it receives CC messages from all remote statically configured MEPs.	ethernet-cfm	"Information message only."
<del>ECFM</del> FCOSCHKSMCEUP	6-Information	The device received CC messages from all remote MEPs within a given MA name [chars] in the maintenance domain [chars].	The service configured either MA is up as it receives CC messages from all remote statically configured MEPs.	ethernet-cfm	"Information message only."
<del>KEP</del> PLANKOROSKAGE	6-Information	Ethernet Dataplane Latching Loopback state change [chars]	Dataplane Latching Loopback state changed for the specified service	ethernet-cfm	"LOG_SID_NO_ACTION"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>INF-PN-AL-LO-CP-BS-SE</del>	6-Information	Ethernet Dataplane Latching Loopback state change [chars]	Dataplane Latching Loopback state changed for the specified service	ethernet-cfm	"LOG_SID_NO_ACTION"
<del>INF-PN-AL-LO-CP-BS-SE</del>	6-Information	Ethernet Dataplane Latching Loopback timer expired [chars]	Dataplane Latching Loopback timer is expired for the specified service	ethernet-cfm	"LOG_SID_NO_ACTION"
<del>INF-PN-AL-LO-CP-BS-SE</del>	6-Information	Ethernet Dataplane Latching Loopback timer expired [chars]	Dataplane Latching Loopback timer is expired for the specified service	ethernet-cfm	"LOG_SID_NO_ACTION"
<del>INF-PN-AL-LO-CP-BS-SE</del>	6-Information	Ethernet Dataplane Latching Loopback Start on [chars]	Dataplane Latching Loopback is activated for the specified service	ethernet-cfm	"LOG_SID_NO_ACTION"
<del>INF-PN-AL-LO-CP-BS-SE</del>	6-Information	Ethernet Dataplane Latching Loopback Start on [chars]	Dataplane Latching Loopback is activated for the specified service	ethernet-cfm	"LOG_SID_NO_ACTION"
<del>INF-PN-AL-LO-CP-BS-SE</del>	6-Information	Ethernet Dataplane Latching Loopback Stop on [chars]	Dataplane Latching Loopback is de-activated for the specified service	ethernet-cfm	"LOG_SID_NO_ACTION"
<del>INF-PN-AL-LO-CP-BS-SE</del>	6-Information	Ethernet Dataplane Latching Loopback Stop on [chars]	Dataplane Latching Loopback is de-activated for the specified service	ethernet-cfm	"LOG_SID_NO_ACTION"
<del>INF-PN-AL-LO-CP-BS-SE</del>	6-Information	Ethernet Dataplane Latching Loopback timer expired on [chars]	Dataplane Latching Loopback timer is expired for the specified service	ethernet-cfm	"LOG_SID_NO_ACTION"
<del>INF-PN-AL-LO-CP-BS-SE</del>	6-Information	Ethernet Dataplane Latching Loopback timer expired on [chars]	Dataplane Latching Loopback timer is expired for the specified service	ethernet-cfm	"LOG_SID_NO_ACTION"
<del>INF-PN-AL-LO-CP-BS-SE</del>	6-Information	Ethernet Dataplane Latching Loopback timer restarted on [chars]	Dataplane Latching Loopback timer is restarted for the specified service	ethernet-cfm	"LOG_SID_NO_ACTION"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>E_CFM6ENIER_AIS</del>	6-Information	Ethernet Dataplane Latching Loopback timer restarted on [chars]	Dataplane Latching Loopback timer is restarted for the specified service	ethernet-cfm	'LOG_SID_NO_ACTION'
E_CFM6-ENTER_AIS	6-Information	local mep with mpid [dec] level [dec] [chars] dir [chars] Interface [chars] enters AIS defect condition	Ethernet cfm mep has entered AIS defect condition. This is due to receive of ETH-AIS or ETH-LCK frames or CCM errors causing signal fail condition. Id refers to local mep service id.	ethernet-cfm	'LOG_SID_NO_ACTION'
E_CFM6-ENTER_AIS	6-Information	local mep with mpid [dec] level [dec] [chars] dir [chars] Interface [chars] enters AIS defect condition	Ethernet cfm mep has entered AIS defect condition. This is due to receive of ETH-AIS or ETH-LCK frames or CCM errors causing signal fail condition. Id refers to local mep service id.	ethernet-cfm	'LOG_SID_NO_ACTION'
E_CFM6ENIER_AIS_INT	6-Information	Interface [chars] enters AIS defect condition for [chars] direction	Interface has entered AIS defect condition. This is due to traffic effecting indication from lower layer OAM like 802.3ah	ethernet-cfm	'LOG_SID_NO_ACTION'
E_CFM6ENIER_AIS_INT	6-Information	Interface [chars] enters AIS defect condition for [chars] direction	Interface has entered AIS defect condition. This is due to traffic effecting indication from lower layer OAM like 802.3ah	ethernet-cfm	'LOG_SID_NO_ACTION'

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
E_CFM-6-ENTER_LCK	6-Information	local mep with mpid [dec] level [dec] [chars] dir [chars] Interface [chars] enters LCK defect condition	Ethernet cfm mep has entered LCK Maintenance condition. Id refers to local mep service id.	ethernet-cfm	"LOG_SID_NO_ACTION"
E_CFM-6-ENTER_LCK	6-Information	local mep with mpid [dec] level [dec] [chars] dir [chars] Interface [chars] enters LCK defect condition	Ethernet cfm mep has entered LCK Maintenance condition. Id refers to local mep service id.	ethernet-cfm	"LOG_SID_NO_ACTION"
E_CFM-6-ENTER_LCK_INT	6-Information	Interface [chars] enters LCK defect condition for [chars] direction	Interface is put in OOS state through exec cli for input direction	ethernet-cfm	"LOG_SID_NO_ACTION"
E_CFM-6-ENTER_LCK_INT	6-Information	Interface [chars] enters LCK defect condition for [chars] direction	Interface is put in OOS state through exec cli for input direction	ethernet-cfm	"LOG_SID_NO_ACTION"
E_CFM-6-EXIT_AIS	6-Information	local mep with mpid [dec] level [dec] [chars] dir [chars] Interface [chars] exited AIS defect condition	Ethernet cfm mep has exited AIS defect condition. This is due to not receiving ETH-AIS or ETH-LCK frames for expiry threshold or mep up state if LOC error happened before. Id refers to local mep service id.	ethernet-cfm	"LOG_SID_NO_ACTION"
E_CFM-6-EXIT_AIS	6-Information	local mep with mpid [dec] level [dec] [chars] dir [chars] Interface [chars] exited AIS defect condition	Ethernet cfm mep has exited AIS defect condition. This is due to not receiving ETH-AIS or ETH-LCK frames for expiry threshold or mep up state if LOC error happened before. Id refers to local mep service id.	ethernet-cfm	"LOG_SID_NO_ACTION"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
E_CFM6EXIT_AIS_INT	6-Information	Interface [chars] exited AIS defect condition for [chars] direction	LOG_SID_NO_ACTION	ethernet-cfm	"Interface has existed AIS defect condition. This is due to "clearing of traffic effecting condition and 802.3ah entering "in send_any operational state"
E_CFM6EXIT_AIS_INT	6-Information	Interface [chars] exited AIS defect condition for [chars] direction	LOG_SID_NO_ACTION	ethernet-cfm	"Interface has existed AIS defect condition. This is due to "clearing of traffic effecting condition and 802.3ah entering "in send_any operational state"
E_CFM6EXIT_LCK	6-Information	local mep with mpid [dec] level [dec] [chars] dir [chars] Interface [chars] exited LCK defect condition	Ethernet cfm mep has exited LCK Maintenance condition. Id refers to local mep service id.	ethernet-cfm	"LOG_SID_NO_ACTION"
E_CFM6EXIT_LCK	6-Information	local mep with mpid [dec] level [dec] [chars] dir [chars] Interface [chars] exited LCK defect condition	Ethernet cfm mep has exited LCK Maintenance condition. Id refers to local mep service id.	ethernet-cfm	"LOG_SID_NO_ACTION"
E_CFM6EXIT_LCK_INT	6-Information	Interface [chars] exited LCK defect condition for [chars] direction	Interface has exited LCK defect condition.	ethernet-cfm	"LOG_SID_NO_ACTION"
E_CFM6EXIT_LCK_INT	6-Information	Interface [chars] exited LCK defect condition for [chars] direction	Interface has exited LCK defect condition.	ethernet-cfm	"LOG_SID_NO_ACTION"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>ECM</del> <u>MAX</u> <del>ME</del> <u>SE</u> <del>CH</del> <u>DD</u>	6-Information	Maximum MEPs threshold exceeded in [chars] for domain [chars] service [chars] mac [enet] mpid [dec]	The number of remote MEP entries in CC database has exceeded the maximum MEPs configured. The current remote MEP is not saved in the CC database.	ethernet-cfm	"Verify that the correct number for maximum MEPs is specified in the " "configuration. If correct number of maximum MEPs is configured " "verify if any unexpected remote MEP is not part of the service via " "'show ethernet cfm maintenance remote' or 'show ethernet cfm mpdb' " "command"
<del>ECM</del> <u>MAX</u> <del>ME</del> <u>SE</u> <del>CH</del> <u>DD</u>	6-Information	Maximum MEPs threshold exceeded in [chars] for domain [chars] service [chars] mac [enet] mpid [dec]	The number of remote MEP entries in CC database has exceeded the maximum MEPs configured. The current remote MEP is not saved in the CC database.	ethernet-cfm	"Verify that the correct number for maximum MEPs is specified in the " "configuration. If correct number of maximum MEPs is configured " "verify if any unexpected remote MEP is not part of the service via " "'show ethernet cfm maintenance remote' or 'show ethernet cfm mpdb' " "command"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ECM6REM0IEM_PUP	6-Information	Continuity Check message is received from a remote MEP with mpid [dec] [chars] MA name [chars] domain [chars] interface status [chars] event code [chars].	A CC message is received from remote MEP which is up. Event code: New: A remote MEP first comes up that is when we receive a CC message from the remote MEP for the first time. Event code: Returning: The device receives a CC message from a MEP for which it has an expired CCDB entry. Event code: PortState: The device receives a CC message from a remote MEP for which it has a valid CCDB entry and the message indicates a port status change This message may be for a particular vlan or evc with the corresponding MA.	ethernet-cfm	"Information message only."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
E_CFM6_REMOTE_MEP_UP	6-Information	Continuity Check message is received from a remote MEP with mpid [dec] [chars] MA name [chars] domain [chars] interface status [chars] event code [chars].	A CC message is received from remote MEP which is up. Event code: New: A remote MEP first comes up that is when we receive a CC message from the remote MEP for the first time. Event code: Returning: The device receives a CC message from a MEP for which it has an expired CCDB entry. Event code: PortState: The device receives a CC message from a remote MEP for which it has a valid CCDB entry and the message indicates a port status change This message may be for a particular vlan or evc with the corresponding MA.	ethernet-cfm	"Information message only."
911MSGDHAUINUMBR	3-Error	It is mandatory to configure an ELIN under 'voice emergency response settings.'	The administrator has enabled the Enhanced 911 feature without configuring\n\n a default ELIN under 'voice emergency response settings.'	voice-ivr	"The administrator should enter the 'voice emergency response settings' \n\n mode and configure a value for the 'elin' CLI."
911MSGDHAUINUMBR	3-Error	It is mandatory to configure an ELIN under 'voice emergency response settings.'	The administrator has enabled the Enhanced 911 feature without configuring\n\n a default ELIN under 'voice emergency response settings.'	voice-ivr	"The administrator should enter the 'voice emergency response settings' \n\n mode and configure a value for the 'elin' CLI."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>EMCALBACK_UNREACHABLE</del>	4-Warning	Unable to contact the last emergency caller at [chars].	A call has been made to an emergency response number. \n\ This message simply informs system administrators of the call.	voice-ivr	"The administrator determines the policy for\n\ outbound emergency calls. The administrator\n\ may set-up an application to page or email\n\ a technician everytime this message is emitted."
<del>EMCALBACK_UNREACHABLE</del>	4-Warning	Unable to contact the last emergency caller at [chars].	A call has been made to an emergency response number. \n\ This message simply informs system administrators of the call.	voice-ivr	"The administrator determines the policy for\n\ outbound emergency calls. The administrator\n\ may set-up an application to page or email\n\ a technician everytime this message is emitted."
EAP-2-PROCESS_ERR	2-Critical	[chars]	This is critical condition where the router could not perform EAP\n\ process related operation.	eap	"Reload the device."
EAP-2-PROCESS_ERR	2-Critical	[chars]	This is critical condition where the router could not perform EAP\n\ process related operation.	eap	"Reload the device."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EAP-2-PROCESS_ERR	2-Critical	polaris-smd	"EAP critical error[chars]"	"This is critical condition where the router could not perform EAP process related operation."	"Review SM logs taking note of the timestamp information to select specific information to review. Copy the message and other related information exactly as it appears on the console or in the system log. Reload the device/process."
EAP-2-PROCESS_ERR	2-Critical	polaris-smd	"EAP critical error[chars]"	"This is critical condition where the router could not perform EAP process related operation."	"Review SM logs taking note of the timestamp information to select specific information to review. Copy the message and other related information exactly as it appears on the console or in the system log. Reload the device/process."
EAP-3-BADPKT	3-Error	polaris-smd	"IP=%s HOST=%s"	"This messages informs that the router received an invalid or malformed EAP packet from the specified host."	"Check specified host for EAP operation."
EAP-3-BADPKT	3-Error	polaris-smd	"IP=%s HOST=%s"	"This messages informs that the router received an invalid or malformed EAP packet from the specified host."	"Check specified host for EAP operation."
EAP-4-BADPKT	4-Warning	IP=[node] HOST=[chars]	This messages informs that the router received an invalid or malformed EAP packet from the specified host.	eap	"Check specified host for EAP operation."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EAP-4-BADPKT	4-Warning	IP=[node] HOST=[chars]	This messages informs that the router received an invalid or malformed\n\n EAP packet from the specified host.	eap	"Check specified host for EAP operation."
EAP-6-SUPP_METHD	6-Information	polaris-smd	"Method[chars] in eap profile[chars] is not allowed in FIPS mode"	"This message informs that a method is not supported in FIPS mode."	"Use FIPS supported methods - PEAP"
EAP-6-SUPP_METHD	6-Information	polaris-smd	"Method[chars] in eap profile[chars] is not allowed in FIPS mode"	"This message informs that a method is not supported in FIPS mode."	"Use FIPS supported methods - PEAP"
EAP-6-MPPE_KEY	6-Information	IP=[chars] MPPE_KEY_LENGTH=[#]	This messages informs that the router received MPPE KEY for the specified\n\n host.	eap	"No action is required."
EAP-6-MPPE_KEY	6-Information	IP=[chars] MPPE_KEY_LENGTH=[#]	This messages informs that the router received MPPE KEY for the specified\n\n host.	eap	"No action is required."
EAP-6-MPPE_KEY	6-Information	polaris-smd	"IP=%s MPPE_KEY_LENGTH=#"	"This messages informs that the router received MPPE KEY for the specified host."	"No action is required."
EAP-6-MPPE_KEY	6-Information	polaris-smd	"IP=%s MPPE_KEY_LENGTH=#"	"This messages informs that the router received MPPE KEY for the specified host."	"No action is required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EC-3-BWMISMATCH	3-Error	[chars] should be removed from the Port-channel[dec]	The member-link shouldn't have been part of the port-channel bundle because the bandwidth of the member-link doesn't match the bandwidth of the bundle. This configuration shouldn't have been allowed. This error indicates it was allowed due to some software issue.	fec	"Remove the member-link from the port-channel for proper operation."
EC-5-MINLINKS_MET	5-Notice	Port-channel [chars] is up as its bundled ports [dec] meets min-links	The administrative configuration of minimum links is equal or less than the number of bundled ports. Therefore this port channel has been brought up	fec	"None."
EC-5-MINLINKS_NOIMET	5-Notice	Port-channel [chars] is down bundled ports [dec] doesn't meet min-links	The administrative configuration of minimum links is greater than the number of bundled ports. Therefore this port channel has been brought down	fec	"Reduce the min-links configuration for this group or add more ports to this port-channel to have them bundle."
ECC-2-MALLOC	2-Critical	Attempt to malloc [dec] bytes for the ECC error log failed. ECC errors will only be reported and not recorded.	Malloc for the ECC error log failed. A memory upgrade would be advisable or is recommended.	-	LOG_STD_ACTION

Family-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ECC-3-SBE_HARD	3-Error	Single bit *hard* error detected at 0x[node]x	A single-bit uncorrectable error [hard error] was detected on a CPU\n read from DRAM. 'show ecc' will dump the Single-bit errors logged thus\n far and will also indicate detected hard error address locations.	-	"Monitor system through 'show ecc' and replace DRAM if too many\n such errors."
ECC-3-SBE_LIMIT	3-Error	Single bit error detected and corrected\nat 0x[node]x	A single-bit correctable error was detected on a CPU read from DRAM.	-	LOG_STD_ACTION
ECC3SBE_RMW_LIMIT	3-Error	Single bit error detected and corrected at 0x[node]x on a read-modify-write cycle	A single-bit correctable error was detected on during a read-modify-\n write cycle on a CPU read from DRAM for a non 8-byte access.\n 'show ecc' can be used to dump Single-bit errors logged thus far.	-	LOG_STD_ACTION
ECC3SYNDROME_SBE_LIMIT	3-Error	8-bit Syndrome for the detected Single-bit error: 0x[hec]	The 8-bit syndrome for detected single-bit error. This value does not\n indicate the exact positions of the bits in error but can be used to\n approximate their positions.	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ECFM_HA-2-GET_BUFFER	2-Critical	ECFM ISSU client failed to get buffer for message. Error: [dec] [chars]	The ECFM HA client failed to get buffer space for building chkpt message. Message cannot be sent to standby device. If a problem occurs the standby device cannot be brought up properly.	ecfm	"show logging and show checkpoint client"
ECFM_HA-2-GET_BUFFER	2-Critical	ECFM ISSU client failed to get buffer for message. Error: [dec] [chars]	The ECFM HA client failed to get buffer space for building chkpt message. Message cannot be sent to standby device. If a problem occurs the standby device cannot be brought up properly.	ecfm	"show logging and show checkpoint client"
ECFM_HA-2-INIT	2-Critical	ECFM ISSU client initialization failed to [chars]. Error: [dec] [chars]	The ECFM ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	ecfm	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ECFM_HA-2-INIT	2-Critical	ECFM ISSU client initialization failed to [chars]. Error: [dec] [chars]	The ECFM ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	ecfm	LOG_STD_ACTION
<del>ECFM_ISSU_CLIENT_FAILED</del>	2-Critical	ECFM ISSU client failed to send negotiation message. Error: [dec] [chars]	The ECFM ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	ecfm	"show logging and show checkpoint client"
<del>ECFM_ISSU_CLIENT_FAILED</del>	2-Critical	ECFM ISSU client failed to send negotiation message. Error: [dec] [chars]	The ECFM ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	ecfm	"show logging and show checkpoint client"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ECFM_HA2_SESSION_NEGO	2-Critical	ECFM ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The ECFM ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	ecfm	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
ECFM_HA2_SESSION_NEGO	2-Critical	ECFM ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The ECFM ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	ecfm	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
ECFM_HA2_SESSION_REGSTRY	2-Critical	ECFM ISSU client failed to register session information. Error: [dec] [chars]	The ECFM ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	ecfm	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ECFM_HA3-ISSU_REGSTRV	2-Critical	ECFM ISSU client failed to register session information. Error: [dec] [chars]	The ECFM ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	ecfm	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
ECFM_HA3-INVALID_SESSION	3-Error	ECFM ISSU client does not have a valid registered session.	The ECFM ISSU client does not have a valid registered session.	ecfm	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
ECFM_HA3-INVALID_SESSION	3-Error	ECFM ISSU client does not have a valid registered session.	The ECFM ISSU client does not have a valid registered session.	ecfm	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
ECFM_HA-3-ISSU	3-Error	YO	Hi	ecfm	"Hello " LOG_STD_ACTION
ECFM_HA-3-ISSU	3-Error	YO	Hi	ecfm	"Hello " LOG_STD_ACTION
ECFM_HA3MSG_NOT_OK	3-Error	ECFM ISSU client 'Message Type [dec]' is not compatible	The ECFM ISSU client received an incompatible message from the peer device. The message cannot be processed.	ecfm	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
ECFM_HA3MSG_NOT_OK	3-Error	ECFM ISSU client 'Message Type [dec]' is not compatible	The ECFM ISSU client received an incompatible message from the peer device. The message cannot be processed.	ecfm	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ECFM_HA-3-MSG_SIZE	3-Error	ECFM ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The ECFM ISSU client failed to calculate the MTU for the specified message. The ECFM ISSU client will not be able to send the message to the standby device.	ecfm	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
ECFM_HA-3-MSG_SIZE	3-Error	ECFM ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The ECFM ISSU client failed to calculate the MTU for the specified message. The ECFM ISSU client will not be able to send the message to the standby device.	ecfm	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>ECFM_ISSU_UNREG</del>	3-Error	ECFM ISSU client failed to unregister session information. Error: [dec] [chars]	The ECFM ISSU client failed to unregister session information.	ecfm	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>ECFM_ISSU_UNREG</del>	3-Error	ECFM ISSU client failed to unregister session information. Error: [dec] [chars]	The ECFM ISSU client failed to unregister session information.	ecfm	"show issu session <client_id> and " "show issu negotiated capability <session_id>"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ECFM_HA3-TRANSFORM	3-Error	ECFM ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The ECFM ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the ECFM state between the active device and the standby device is not identical.	ecfm	"show issu session <client_id> and " "show issu negotiated version <session_id>"
ECFM_HA3-TRANSFORM	3-Error	ECFM ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The ECFM ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the ECFM state between the active device and the standby device is not identical.	ecfm	"show issu session <client_id> and " "show issu negotiated version <session_id>"
ECFM_HSBY-5-FAIL	5-Notice	Communication lost with remote ODU for link protection group [dec] on [chars]	Communication was lost with the remote outdoor unit ODU due to either a CC message timeout or the interface going down.	uea-eoam	LOG_SID_NO_ACTION

<del>Facility</del> Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ECFM_HSBY5</del> FAILOVER	5-Notice	Failover from [chars] to [chars] in link protection group [dec].	The active outdoor unit ODU in the link protection group either has sent a message to the indoor unit IDU	uea-eoam	LOG_SID_NO_ACTION
<del>ECFM_HSBY5</del> -5-KO	5-Notice	Remote ODU for link protection group [dec] on [chars] has indicated a failure	The remote outdoor unit ODU has raised its Sender KO flag indicating a failure.	uea-eoam	LOG_SID_NO_ACTION
<del>ECFM_HSBY5</del> -5-OK	5-Notice	Remote ODU for link protection group [dec] on [chars] is now ok.	The previously failed remote outdoor unit ODU has recovered.	uea-eoam	LOG_SID_NO_ACTION
<del>ECFM_HSBY5</del> FOR_ACTIVE	5-Notice	[chars] link protection group [dec] now forwarding traffic	The remote outdoor unit ODU connected to this interface is now active. This interface is now forwarding traffic to/from the remote ODU.	uea-eoam	LOG_SID_NO_ACTION
<del>ECFM_HSBY5</del> SUSPEND	5-Notice	Remote ODU for link protection group [dec] on [chars] is now suspended.	The remote outdoor unit ODU has requested monitoring of CC messages be temporarily suspended.	uea-eoam	LOG_SID_NO_ACTION
<del>ECM_PROXY</del> PROXY_INIT_FAIL	2-Critical	QFP ECFM Proxy IPC interface initialization failure result: [dec].	Cisco internal software error. QFP ECFM Proxy initialization detected that the IPC interface initialization failed. QFP ECFM proxy will not be functional while this condition exists.	asr1k-ecfmkeyword:ecfm	LOG_STD_ACTION
<del>ECM_PROXY</del> MEM_EXTEND	3-Error	ECFM IPC subtype: [dec]	Extending memory failed.	asr1k-ecfmkeyword:ecfm	LOG_STD_ACTION
<del>ECM_PROXY</del> MEM_REQ_FAIL	3-Error	ECFM IPC subtype: [dec]	Requesting more memory failed.	asr1k-ecfmkeyword:ecfm	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ECFM_PROXY_BADMSG</del>	3-Error	QFP ECFM Proxy received bad length message type [dec]	Cisco internal software error. QFP ECFM Proxy received a corrupted message from control plane. This message will be ignored.	asr1k-ecfmkeyword:ecfm	LOG_STD_ACTION
<del>ECFM_PROXY_BUF_FAIL</del>	3-Error	QFP ECFM Proxy [chars] message lost due to message buffer allocation failure.	Cisco internal software error. QFP ECFM Proxy message processing detected a message buffer allocation failure. The message is lost as the result of this condition.	asr1k-ecfmkeyword:ecfm	LOG_STD_ACTION
<del>ECFM_PROXY_SENT_FAIL</del>	3-Error	QFP ECFM Proxy [chars] message lost due to message sent failure result: [dec].	Cisco internal software error. QFP ECFM Proxy message processing detected a message sent failure. The message is lost as the result of this condition.	asr1k-ecfmkeyword:ecfm	LOG_STD_ACTION
<del>ECFM_PROXY_INVALIDMSG</del>	4-Warning	QFP ECFM Proxy received invalid message type [dec]	Cisco internal software error. QFP ECFM Proxy received an invalid message from control plane. This message will be ignored.	asr1k-ecfmkeyword:ecfm	LOG_STD_ACTION
<del>ECFM_PROXY_INVALID_IPC</del>	4-Warning	QFP ECFM Proxy IPC invalid length [dec]:[dec] len [dec] flags 0x[hec] source [dec]	Cisco internal software error. QFP ECFM Proxy received invalid IPC message length from control plane. This message will be ignored.	asr1k-ecfmkeyword:ecfm	LOG_STD_ACTION
<del>ECM_DOWNLOAD_PANIC</del>	0-Emergency	[chars]	A Panic Condition.	-	""
<del>ECM_DOWNLOAD_FATAL</del>	1-Alert	msgtxt_initfail	-	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>EDSP4NOCEM</del>	1-Alert	msgtxt_nomemory	-	-	-
<del>EDSP4NOERR</del>	3-Error	[chars]	Errors	-	""
<del>EDSP4NOERR</del>	7-Debug	[chars]: [chars] Assertion Failure - File [chars] Line [dec]	Assertion	-	""
EDSP4CEF_TOOLONG	4-Warning	CEF to SCCP devices may be disabled! See message below.	Given up waiting for CEF initialization to complete.	cme-ephone	"Check the message about CEF and the EDSP0 interface below. If the " " vector is EVENTUALLY set to Null CEF RTP sending for SCCP devices is" " disabled. You may try to recover by restarting \"ip cef\" in IOS" " configuration."
EDSP4CEF_TOOLONG	4-Warning	CEF to SCCP devices may be disabled! See message below.	Given up waiting for CEF initialization to complete.	cme-ephone	"Check the message about CEF and the EDSP0 interface below. If the " " vector is EVENTUALLY set to Null CEF RTP sending for SCCP devices is" " disabled. You may try to recover by restarting \"ip cef\" in IOS" " configuration."
EDSP-6-CEF_WAIT	6-Information	Waiting for CEF initialization to complete first ... [dec]	Initialization of CEF RTP sending relies on system's CEF readiness.	cme-ephone	LOG_SID_NO_ACTION
EDSP-6-CEF_WAIT	6-Information	Waiting for CEF initialization to complete first ... [dec]	Initialization of CEF RTP sending relies on system's CEF readiness.	cme-ephone	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EDSP-6-IPV6_ENABLED	6-Information	IPv6 on interface [chars] added.	IPv6 capability has been enabled for the sub-interface.	cme-ephone	LOG_SID_NO_ACTION
EDSP-6-IPV6_ENABLED	6-Information	IPv6 on interface [chars] added.	IPv6 capability has been enabled for the sub-interface.	cme-ephone	LOG_SID_NO_ACTION
EDSP-6-IPV6_FAILED	6-Information	IPv6 on interface [chars] failed.	IPv6 initialization has failed for the sub-interface.	cme-ephone	"Please check IPv6 and interface related configurations."
EDSP-6-IPV6_FAILED	6-Information	IPv6 on interface [chars] failed.	IPv6 initialization has failed for the sub-interface.	cme-ephone	"Please check IPv6 and interface related configurations."
EDSP-6-VEC_CHANGE	6-Information	EDSP0's LES switching vector set to [chars]	To monitor CEF initialization for the hidden interface.	cme-ephone	LOG_SID_NO_ACTION
EDSP-6-VEC_CHANGE	6-Information	EDSP0's LES switching vector set to [chars]	To monitor CEF initialization for the hidden interface.	cme-ephone	LOG_SID_NO_ACTION
EHSA-2-EHSALOAD	2-Critical	[chars]	Netbooting was attempted on an EHSA Secondary	-	"Copy the error message exactly as it appears and report it to your technical support representative."
EHSA-2-EHSASW	2-Critical	[chars]	Primary has crashed or is unresponsive. Secondary is taking over	-	"Copy the error message exactly as it appears and report it to your technical support representative."
EHSA-3-EHSABADST	3-Error	[chars] [[dec]] [[dec]]	EHSA internal error.	<del>EHSA-3-EHSABADST</del>	"Copy the error message exactly as it appears and report it to your technical support representative."
EHSA-3-EHSAINT	3-Error	'[chars]' at level [dec]	EHSA internal error.	<del>EHSA-3-EHSAINT</del>	"Copy the error message exactly as it appears and report it to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
EHSA-3-IPCERR	3-Error	[chars] [[chars]]	IPC failed for EHSA. EHSA messages cannot be transmitted .	-	"Copy the error message exactly as it appears and report it to your technical support representative."
EHSA-3-KEEPTO	3-Error	No keepalive seen in [[dec]] secs: Failover [chars]	EHSA keepalive failure.	-	"Copy the error message exactly as it appears and report it to your technical support representative."
EHSA-3-NOBUF	3-Error	[chars]	The IPC ran out of memory buffers.	-	"Reduce the number of applications currently running on the IPC. Copy the error message exactly as it appears and report it to your technical support representative."
EHSA-3-STCHNG	3-Error	[chars] [[dec]]	EHSA State change detected	-	"Copy the error message exactly as it appears and report it to your technical support representative."
<del>EIO-3-NOGENR</del>	3-Error	iosxe-pi-cli-agt	Loading CXF file:[chars] at line %d caused command[chars] to not be loaded	A warning has occurred during exec engine operation.	Display the warning message to the screen.
<del>HCLIMITSFILEERR</del>	3-Error	iosxe-pi-cli-agt	Error occurred:[chars]	-	-
<del>HCLIMITSGENRERR</del>	3-Error	iosxe-pi-cli-agt	Error occurred:[chars]	An error occurred during startup of the CLI Agent causing unwanted behavior and early exit.	Please contact TAC.
EIO-3-NOCDB	3-Error	Unable to create controller cdb.	failed to create controller cdb.	-	LOG_STD_ACTION
EIO-3-NOCHUNK	3-Error	Unable to create memory chunk.	failed to create memory chunk.	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
EIO-3-NOMEM	3-Error	out of memory.	failed to malloc memory.	-	LOG_STD_ACTION
EIO-3-NOPROC	3-Error	Unable to create process.	failed to create eio process.	-	LOG_STD_ACTION
EIO-3-NOQUEUE	3-Error	Unable to create queue.	failed to create queue.	-	LOG_STD_ACTION
EIO4EMPTY_CHUNK	4-Warning	Chunk is empty.	failed to malloc chunk entry due to empty chunk.	-	LOG_STD_ACTION
EIO-4-INVALID_CDB	4-Warning	Invalid eio controller cdb.	encountered an invalid controller cdb.	-	LOG_STD_ACTION
EIO-4-INVALID_SLOT	4-Warning	Invalid eio slot instance.	encountered an invalid eio slot instance.	-	LOG_STD_ACTION
ELB_HA2GET_BUFFER	2-Critical	ELB ISSU client failed to get buffer for message. Error: [dec] [chars]	The ELB HA client failed to get buffer space for building chkpt message. Message cannot be sent to standby device. If a problem occurs the standby device cannot be brought up properly.	ethernet-oam	"show logging and show checkpoint client"
ELB_HA2GET_BUFFER	2-Critical	ELB ISSU client failed to get buffer for message. Error: [dec] [chars]	The ELB HA client failed to get buffer space for building chkpt message. Message cannot be sent to standby device. If a problem occurs the standby device cannot be brought up properly.	ethernet-oam	"show logging and show checkpoint client"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ELB_HA-2-INIT	2-Critical	ELB ISSU client initialization failed to [chars]. Error: [dec] [chars]	The ELB ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	ethernet-oam	LOG_STD_ACTION
ELB_HA-2-INIT	2-Critical	ELB ISSU client initialization failed to [chars]. Error: [dec] [chars]	The ELB ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	ethernet-oam	LOG_STD_ACTION
ELB_ISSU_SEND_NEGO_FAILED	2-Critical	ELB ISSU client failed to send negotiation message. Error: [dec] [chars]	The ELB ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	ethernet-oam	"show logging and show checkpoint client"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ELB_HA2SESSION_NEGO_FAILED	2-Critical	ELB ISSU client failed to send negotiation message. Error: [dec] [chars]	The ELB ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	ethernet-oam	"show logging and show checkpoint client"
ELB_HA2SESSION_NEGO	2-Critical	ELB ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The ELB ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	ethernet-oam	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
ELB_HA2SESSION_NEGO	2-Critical	ELB ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The ELB ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	ethernet-oam	"show issu session <client_id> and " "show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ELB_HA-2-SESSION_REG_FAIL	2-Critical	ELB ISSU client failed to register session information. Error: [dec] [chars]	The ELB ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	ethernet-oam	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
ELB_HA-2-SESSION_REG_FAIL	2-Critical	ELB ISSU client failed to register session information. Error: [dec] [chars]	The ELB ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	ethernet-oam	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
ELB_HA-3-INVALID_SESSION	3-Error	ELB ISSU client does not have a valid registered session.	The ELB ISSU client does not have a valid registered session.	ethernet-oam	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
ELB_HA-3-INVALID_SESSION	3-Error	ELB ISSU client does not have a valid registered session.	The ELB ISSU client does not have a valid registered session.	ethernet-oam	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
ELB_HA-3-MSG_SIZE	3-Error	ELB ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The ELB ISSU client failed to calculate the MTU for the specified message. The ELB ISSU client will not be able to send the message to the standby device.	ethernet-oam	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ELB_HA-3-MSG_SIZE	3-Error	ELB ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The ELB ISSU client failed to calculate the MTU for the specified message. The ELB ISSU client will not be able to send the message to the standby device.	ethernet-oam	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>ELB_HA-3-UNREG</del>	3-Error	ELB ISSU client failed to unregister session information. Error: [dec] [chars]	The ELB ISSU client failed to unregister session information.	ethernet-oam	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>ELB_HA-3-UNREG</del>	3-Error	ELB ISSU client failed to unregister session information. Error: [dec] [chars]	The ELB ISSU client failed to unregister session information.	ethernet-oam	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
ELB_HA-3-TRANSFORM	3-Error	ELB ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The ELB ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the ELB state between the active device and the standby device is not identical.	ethernet-oam	"show issu session <client_id> and " "show issu negotiated version <session_id>"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ELB_HA-3-TRANSFORM	3-Error	ELB ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The ELB ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the ELB state between the active device and the standby device is not identical.	ethernet-oam	"show issu session <client_id> and " "show issu negotiated version <session_id>"
ELC_I2_ACL-3-ERRORSW	3-Error	[chars]	The elc I2 acl client detected software error event that is specified in the message	asr1k-ether-lc	LOG_SID_SH_TECH_ACTION
ELC_I2_ACL-3-NOMEM	3-Error	Memory Allocation Failure - [chars] : [chars]0x[hec]	Memory required by I2 acl client to service one or more Network Processors could not be allocated.	asr1k-ether-lc	"This error may indicate that more memory must be installed on the " "affected card or platform in order to service all the features and " "related entities enabled via the configuration. " LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EM_ISSU2GET_BUFFER	2-Critical	Event Manager ISSU client failed to get buffer for message. Error: [dec] [chars]	The Event Manager ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	em	"show logging and show checkpoint client"
EM_ISSU-2-INIT	2-Critical	Event Manager ISSU client initialization failed to [chars]. Error: [dec] [chars]	The Event Manager ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	em	LOG_STD_ACTION
EM_ISSUSENDNEGFAILED	2-Critical	Event Manager ISSU client failed to send negotiation message. Error: [dec] [chars]	The Event Manager ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	em	"show logging and show checkpoint client"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EM_ISSU2SESSION_NEGO	2-Critical	Event Manager ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The Event Manager ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	em	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
EM_ISSU3SESSION_REGISRY	2-Critical	Event Manager ISSU client failed to register session information. Error: [dec] [chars]	The Event Manager ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	em	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
EM_ISSU3INVALID_SESSION	3-Error	Event Manager ISSU client does not have a valid registered session.	The Event Manager ISSU client does not have a valid registered session.	em	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
EM_ISSU3MSG_NOT_OK	3-Error	Event Manager ISSU client 'Message Type [dec]' is not compatible	The Event Manager ISSU client received an incompatible message from the peer device. The message cannot be processed.	em	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
EM_ISSU-3-MSG_SIZE	3-Error	Event Manager ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The Event Manager ISSU client failed to calculate the MTU for the specified message. The Event Manager ISSU client is not able to send the message to the standby device.	em	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
EM_ISSU-3-MSG_INCK	3-Error	Event Manager ISSU client 'Opaque Message Type [dec]' is not compatible	The Event Manager ISSU client received an incompatible message from the peer device. The opaque message cannot be processed.	em	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
EM_ISSU-3-SESSION_UNREG	3-Error	Event Manager ISSU client failed to unregister session information. Error: [dec] [chars]	The Event Manager ISSU client failed to unregister session information.	em	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
EM_ISSU-3-TRANSFORM_FAIL	3-Error	Event Manager ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The Event Manager ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the Event Manager state between the active device and the standby device is not identical.	em	"show issu session <client_id> and " "show issu negotiated version <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EM-3-EXCEED	3-Error	EM exceed maximum open events [dec].	The total number of open events exceeded the maximum number of possible open events. The maximum number that the EM server permits is specified in the error message. EM clients are either opening too many events or not closing events within the permitted time period.	-	show em state   inc <em_type>
EM-3-FAIL	3-Error	The specified EM Function failed [chars].	The specified EM function failed. This condition might be caused by incorrect logic or a memory corruption.	-	"Copy the error message exactly as it appears on the console or " "in the system log. Enter the <CmdBold>show em state<NoCmdBold> " "command or the <CmdBold>show em status<NoCmdBold> command to "gather data that may help Cisco technical support to identify "the nature of the error. Contact your Cisco technical support "representative and provide the representative with the gathered "information."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EM-3-NOMEM	3-Error	The EM failed to allocate memory resources for the specified\nEM \function [chars].	A timeout occurred. This condition is minor and should not affect the functionality of the switch.	-	"This message should not affect switch functionality but can be " "sign of a software bug condition. Please check Bug Toolkit on " "the Cisco web-site for relevant bugs against this message. If " "you do not find any please contact the TAC with the output of " <CmdBold>show em client<NoCmdBold>"
EM-3-NULLPTR	3-Error	The pointer in a specified EM function [chars] is incorrectly NULL.	The pointer in the specified EM function is incorrectly NULL. This condition might be caused by incorrect logic or a memory corruption.	-	"Copy the error message exactly as it appears on the console or " "in the system log. Enter the <CmdBold>show em state<NoCmdBold> " "command or the <CmdBold>show em status<NoCmdBold> command to " "gather data that may help Cisco technical support to identify " "the nature of the error. Contact your Cisco technical support " "representative and provide the representative with the gathered " "information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EM-4-INVALID	4-Warning	The specified EM function [chars] received Invalid operands <[dec]>.	The EM client used invalid API parameters.	-	"Copy the error message exactly as it appears on the console or " "in the system log. Enter the <CmdBold>show em state<NoCmdBold> " "command or the <CmdBold>show em status<NoCmdBold> command to "gather data that may help Cisco technical support to identify "the nature of the error. Contact your Cisco technical support "representative and provide the representative with the gathered "information."
EM-4-LIMIT	4-Warning	EM exceed open events limit [dec].	The EM has exceeded the permitted number of open events. The open event limit is 5000.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EM-4-NOTUP	4-Warning	The EM is not available [chars].	The specified EM function could not find the specified open event. This condition might be caused by a memory corruption.	-	"Copy the error message exactly as it appears on the console or " "in the system log. Enter the <CmdBold>show em state<NoCmdBold> " "command or the <CmdBold>show em status<NoCmdBold> command to "gather data that may help Cisco technical support to identify "the nature of the error. Contact your Cisco technical support "representative and provide the representative with the gathered "information."
EM-4-SENDFAILED	4-Warning	The specified EM client type=[dec] failed to send messages to standby.	Because the specified EM client failed to send messages to the standby supervisor engine the standby supervisor engine is not updated. Do not attempt to failover to standby supervisor engine.	-	show checkpoint clients
EMD0EVENT_LIBRARY	0-Emergency	iosxe-chassismgr	An event facility initialization or maintenance function failed because[chars]	"An event facility initialization or maintenance function failed. This error could be due to a software defect or system resource limitation."	"Restart the card."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
EMD0RESOLVE_FRU	0-Emergency	iosxe-chassismgr	Failed to determine[chars] card because[chars]	"The system was unable to determine a card state. This error could be due to a software defect or system resource limitation."	"Restart the card."
EMD3SERVICES_INITIALIZATION	0-Emergency	iosxe-chassismgr	Failed to initialize general application services because[chars]	"The system failed to initialize the application services. This error could be due to a software defect or system resource limitation."	"Restart the card."
EMD3IDPROM_ACCESS	3-Error	iosxe-chassismgr	Failed access or process an IDPROM because[chars]	"The system failed to access an IDPROM or an IDPROM process failed. This error can occur from a hardware defect	-
EMD3IDPROM_SENSOR	3-Error	iosxe-chassismgr	One or more sensor fields from the idprom failed to parse properly because[chars].	"One or more IDPROM sensor fields failed to parse properly. The most likely reason is a checksum failure in the IDPROM from incorrect IDPROM content."	"Examine the logs for IDPROM and hardware errors."
EMD3FPU_INITIALIZATION	3-Error	iosxe-chassismgr	The RP has failed to initialize a Power Supply/Fan module controller because[chars]	"The route processor (RP) failed to initialize a power supply or a fan module controller. This error could be caused by a hardware defect or a C2W access failure."	"Examine the logs for C2W and hardware errors."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>ENSP1</del> ENSP1-SENSOR_INITIALIZATION	3-Error	iosxe-chassismgr	Failed to initialize sensor monitoring because[chars].	"The system failed to initialize an IDPROM sensor monitoring process. This error can occur from a hardware defect	-
ENSP1-1-NOMEMORY	1-Alert	msgtxt_nomemory	The requested operation could not be accomplished because of a low\n\n memory condition.	-	"Reduce other system activity to ease memory demands. If conditions\n\n warrant upgrade to a larger memory configuration."
ENSP1-1-NOMEMORY	1-Alert	msgtxt_nomemory	The requested operation could not be accomplished because of a low\n\n memory condition.	-	"Reduce other system activity to ease memory demands. If conditions\n\n warrant upgrade to a larger memory configuration."
<del>ENSP1</del> ENSP1-INTERNAL_ERROR	2-Critical	Internal software error	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
<del>ENSP1</del> ENSP1-INTERNAL_ERROR	2-Critical	Internal software error	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
<del>ENSP1</del> ENSP1-AAA_NOAUTH_FAILED	2-Critical	AAA authentication startup failed	AAA authentication startup failed	-	LOG_SID_RECUR_ACTION
<del>ENSP1</del> ENSP1-AAA_NOAUTH_FAILED	2-Critical	AAA authentication startup failed	AAA authentication startup failed	-	LOG_SID_RECUR_ACTION
ENSP2-INTERNAL_ERROR	2-Critical	FAX- Internal software error: [chars]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
ENSP2-INTERNAL_ERROR	2-Critical	FAX- Internal software error: [chars]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
ENSP4-INTERNAL_BADMESSAGE	4-Warning	FAXMAIL- Bad message received	An unexpected message was received.	-	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ENSP4FMAIL_BADMESSAGE	4-Warning	FAXMAIL- Bad message received	An unexpected message was received.	-	LOG_SID_RECUR_ACTION
ENSP4FMAIL_NO_SMIP	4-Warning	FAXMAIL- Can not connect\n\to the SMTP server	No connection was able to be created to any of the specified\n\SMTP servers.	-	LOG_SID_RECUR_ACTION
ENSP4FMAIL_NO_SMIP	4-Warning	FAXMAIL- Can not connect\n\to the SMTP server	No connection was able to be created to any of the specified\n\SMTP servers.	-	LOG_SID_RECUR_ACTION
ENSP4FMAIL_NOSMIPSEND	4-Warning	FAXMAIL- Could not\n\send data to the SMTP server	A connection was made to the SMTP server but no data can be sent.	-	LOG_SID_RECUR_ACTION
ENSP4FMAIL_NOSMIPSEND	4-Warning	FAXMAIL- Could not\n\send data to the SMTP server	A connection was made to the SMTP server but no data can be sent.	-	LOG_SID_RECUR_ACTION
ENSP4SMTPNOCONNCIED	4-Warning	SMTP- failed [chars] [dec]	A connection attempt to a remote mail server was not successful.\n\ This unexpected behavior.	-	LOG_SID_NO_ACTION
ENSP4SMTPNOCONNCIED	4-Warning	SMTP- failed [chars] [dec]	A connection attempt to a remote mail server was not successful.\n\ This unexpected behavior.	-	LOG_SID_NO_ACTION
ENSP-6-SMTP_OPEN	6-Information	SMTP- opening [chars] [dec]	A connection attempt ...	-	LOG_SID_NO_ACTION
ENSP-6-SMTP_OPEN	6-Information	SMTP- opening [chars] [dec]	A connection attempt ...	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ENT_API3-NOCREAT	3-Error	EntityApiProcess not created - Entity MIB will not be \n\ initialised	Attempt to start EntityApiProcess failed when the entity subsystem \n\ was initialised. The Entity MIB will not be populated.	snmp	"The Entity MIB API process was not created possibly due to\n\ lack of memory. If you want to use the Entity MIB API \n\ reconfigure the box so that less memory is used by\n\ other features or add more memory to the system. Reload the box\n\ after reconfiguring."
ENT_API3NO-PARENIDEL	3-Error	Parent physical entity [node]did not exist when trying to delete\n\ child physical entity [node]phyDescr = [chars] phyName = [chars]. RootIdx = [dec]	An attempt to reassign parent's child pointer reference failed during\n\ the node deletion because the node's parent reference is NULL. The node\n\ and all of its sibling nodes and their children will be deleted. This\n\ is an unusual scenario and may happen due to any hardware malfunction\n\ such as device flapping.	snmp	"Copy the error message exactly as it appears on the console\n\ or in the system log call your Cisco technical support\n\ representative and provide the representative with the\n\ gathered information. Using your NMS tool also provide the\n\ content of the Entity MIB table."
ENT_API4MULTIPLEREG	4-Warning	Multiple registration request with same entity name = [chars] \n\ using entity index [node]and phyDescr = [chars].	An attempt to register a physical entity happened and failed \n\ because the same entity name is being used for which a registration \n\ has already been done.	snmp	"Need to raise a DDTs with the component responsible for the \n\ for the registration to use different entity names for registering \n\ different entities."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ENT_API-4-NOALIAS	4-Warning	[chars] entity not found when adding an alias with \n\ physical index = [node]and logical index = [node]to the Entity MIB	An attempt to add an alias entry to the Entity MIB was made.\n\ The logical or physical entity with the specified index does\n\ not exist and so the alias entry creation failed.	snmp	"Copy the error message exactly as it appears on the console\n\ or in the system log call your Cisco technical support\n\ representative and provide the representative with the\n\ gathered information. Using your NMS tool also provide the\n\ content of the Entity MIB table."
ENT_API-4-NOENT	4-Warning	Trying to add or delete an unknown entity to the Entity MIB	An attempt to add/delete an unknown entity to the Entity MIB \n\ was made. The request could not be processed.	snmp	"Copy the error message exactly as it appears on the console\n\ or in the system log call your Cisco technical support\n\ representative and provide the representative with the\n\ gathered information. Using your NMS tool also provide the\n\ content of the Entity MIB table."
ENT_API-4-NOLPMAP	4-Warning	[chars] entity not found when adding an LPMapping entry with \n\ logical index = [node]and physical index = [node]to the Entity MIB	An attempt to add an LPMapping entry to the Entity MIB was made.\n\ The logical or physical entity with the specified index does\n\ not exist and so the LPMapping entry creation failed.	snmp	"Copy the error message exactly as it appears on the console\n\ or in the system log call your Cisco technical support\n\ representative and provide the representative with the\n\ gathered information. Using your NMS tool also provide the\n\ content of the Entity MIB table."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ENT_API4-NOPARENT	4-Warning	Parent physical entity [node]did not exist when trying to add\n\ child physical entity [node]phyDescr = [chars] phyName = [chars].	An attempt to add a physical entity failed because its\n\ parent physical entity did not exist in the entPhysicalTable\n\ of the Entity MIB.	snmp	"Copy the error message exactly as it appears on the console\n\ or in the system log call your Cisco technical support\n\ representative and provide the representative with the\n\ gathered information. Using your NMS tool also provide the\n\ content of the Entity MIB table."
ENT_API4-NOPORT	4-Warning	Physical entity does not have a Port PhysicalClass when \n\ adding an alias with physical index = [node]logical index = [node]\n phyDescr = [chars] phyName = [chars]\n\ phyClass = [node]phyContainedIn = [node]to the Entity MIB	-	snmp	"Copy the error message exactly as it appears on the console\n\ or in the system log call your Cisco technical support\n\ representative and provide the representative with the\n\ gathered information. Using your NMS tool also provide the\n\ content of the Entity MIB table."
ENTITY_ALARM6-INFO	6-Information	[chars] [chars] [chars] [chars] [chars]	Alarm assertion or deassertion information.	-	LOG_SID_NO_ACTION
ENTROPYENTROPY_ERROR	0-Emergency	Unable to collect sufficient entropy	On bootup the device attempts to collect entropy to initialize its random number generator. This device has failed to do so. Because of this most security protocols will not run	-	"This is probably a hardware failure"

<del>Facility</del> Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ENIROP</del> ENIROPY_ERRCR	0-Emergency	Unable to collect sufficient entropy	On bootup the device attempts to collect entropy to initialize its random number generator. This device has failed to do so. Because of this most security protocols will not run	-	"This is probably a hardware failure"
<del>ENIROP</del> ENIROPY_FAURE	0-Emergency	Unable to collect sufficient entropy	On bootup the router attempts to collect entropy to initialize its random number generator. This router has failed to do so. Because of this most security protocols will not run	-	"This is probably a hardware failure"
<del>ENIROP</del> ENIROPY_FAURE	0-Emergency	Unable to collect sufficient entropy	On bootup the router attempts to collect entropy to initialize its random number generator. This router has failed to do so. Because of this most security protocols will not run	-	"This is probably a hardware failure"
<del>ENRMOE</del> ERRMSG_NOFLA	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>ENRMOE</del> ERRMSG_NOFLA	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>ENRMONE</del> FAN_FAULT	2-Critical	System Fault: FAN FAULT is detected.	-	-	-
<del>ENRMONE</del> PS_HI_VOLTAGE	2-Critical	[chars] [chars] [chars] [chars]	Power supply input voltage exceeding threshold	cgs2520	"Please save system configuration and power down system" "to prevent damage causes by over voltage."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ENROMENB1A1LOWVAGE	2-Critical	[chars] [chars] [chars] [chars]	Power supply input voltage is below low threshold	cgs2520	"Please save system configuration and power down system" "to prevent damage causes by low voltage."
ENROMENB1B1HIOVAGE	2-Critical	[chars] [chars] [chars] [chars]	Power supply input voltage exceeding threshold	cgs2520	"Please save system configuration and power down system" "to prevent damage causes by over voltage."
ENROMENB1B1LOWVAGE	2-Critical	[chars] [chars] [chars] [chars]	Power supply input voltage is below low threshold	cgs2520	"Please save system configuration and power down system" "to prevent damage causes by low voltage."
ENROMENBAC1TRGGR	3-Error	[chars] [chars] [chars] [chars]	External Alarm Contact 1 triggered	-	-
ENROMENBAC1TRGGR	3-Error	[chars] [chars] [chars] [chars]	External Alarm Contact 1 triggered	-	-
ENROMENBAC2TRGGR	3-Error	[chars] [chars] [chars] [chars]	External Alarm Contact 2 triggered	-	-
ENROMENBAC2TRGGR	3-Error	[chars] [chars] [chars] [chars]	External Alarm Contact 2 triggered	-	-
ENROMENBAC3TRGGR	3-Error	[chars] [chars] [chars] [chars]	External Alarm Contact 3 triggered	-	-
ENROMENBAC3TRGGR	3-Error	[chars] [chars] [chars] [chars]	External Alarm Contact 3 triggered	-	-
ENROMENBAC4TRGGR	3-Error	[chars] [chars] [chars] [chars]	External Alarm Contact 4 triggered	-	-
ENROMENBAC4TRGGR	3-Error	[chars] [chars] [chars] [chars]	External Alarm Contact 4 triggered	-	-
ENROMENB1C1ECORRUP	3-Error	[chars] [chars] [chars] [chars]	License file is corrupted	-	-
ENROMENB1C1ECORRUP	3-Error	[chars] [chars] [chars] [chars]	License file is corrupted	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ENVIRONMENTALTEMP	3-Error	[chars] [chars] [chars] [chars]	The chassis inside temperature exceeds the max temperature threshold	-	-
ENVIRONMENTALTEMP	3-Error	[chars] [chars] [chars] [chars]	The chassis inside temperature exceeds the max temperature threshold	-	-
ENVIRONMENTALTEMP	3-Error	[chars] [chars] [chars] [chars]	The chassis inside temperature exceeds the max temperature threshold	-	-
ENVIRONMENTALPOWER	3-Error	[chars]	Power supply error.	-	" Make sure that the power supply connected are supported." " If the problem still persists then please contact TAC."
ENVIRONMENTALPOWER	3-Error	[chars]	Power supply error.	-	" Make sure that the power supply connected are supported." " If the problem still persists then please contact TAC."
ENVIRONMENTALPS_FAILED	3-Error	[chars] [chars] [chars] [chars]	Only one power supply was detected for system in dual power mode or power supply is failing	-	-
ENVIRONMENTALPS_FAILED	3-Error	[chars] [chars] [chars] [chars]	Only one power supply was detected for system in dual power mode or\n power supply is failing	-	-
ENVIRONMENTALPS_FAILED	3-Error	[chars] [chars] [chars] [chars]	Only one power supply was detected for system in dual power mode or\n power supply is failing	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ENVIRONMNT3SD_CARD	3-Error	[chars] [chars] [chars] [chars]	SD card is not present	-	-
ENVIRONMNT3SD_CARD	3-Error	[chars] [chars] [chars] [chars]	SD card is not present	-	-
ENVIRONMNT3CARD_FLASH	3-Error	[chars] [chars] [chars] [chars]	SD card is not present. Image booted from on-board flash.	-	-
ENVIRONMNT3CARD_FLASH	3-Error	[chars] [chars] [chars] [chars]	SD card is not present. Image booted from on-board flash.	-	-
ENVIRONMNT3CARD_CORUP	3-Error	[chars] [chars] [chars] [chars]	SD card is corrupted	-	-
ENVIRONMNT3CARD_CORUP	3-Error	[chars] [chars] [chars] [chars]	SD card is corrupted	-	-
ENVIRONMNT3CARD_CORUP_FLASH	3-Error	[chars] [chars] [chars] [chars]	SD card is corrupted. Image booted from on-board flash.	-	-
ENVIRONMNT3CARD_CORUP_FLASH	3-Error	[chars] [chars] [chars] [chars]	SD card is corrupted. Image booted from on-board flash.	-	-
ENVIRONMNT3CARD_FILESCORUP	3-Error	[chars] [chars] [chars] [chars]	Image File on SD card is corrupted	-	-
ENVIRONMNT3CARD_FILESCORUP	3-Error	[chars] [chars] [chars] [chars]	Image File on SD card is corrupted	-	-
ENVIRONMNT3CARD_FILESCORUP_FLASH	3-Error	[chars] [chars] [chars] [chars]	Image File on SD card is corrupted. Image booted from on-board flash.	-	-
ENVIRONMNT3CARD_FILESCORUP_FLASH	3-Error	[chars] [chars] [chars] [chars]	Image File on SD card is corrupted. Image booted from on-board flash.	-	-
ENVIRONMNT3CARD_UNSUPPORTED	3-Error	[chars] [chars] [chars] [chars]	SD card is not supported	-	-
ENVIRONMNT3CARD_UNSUPPORTED	3-Error	[chars] [chars] [chars] [chars]	SD card is not supported	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ENRMFCARDNPFDEES1</del>	3-Error	[chars] [chars] [chars] [chars]	SD card is not supported. Image booted from on-board flash.	-	-
<del>ENRMFCARDNPFDEES1</del>	3-Error	[chars] [chars] [chars] [chars]	SD card is not supported. Image booted from on-board flash.	-	-
ENRCMNEUNDR1EMP	3-Error	[chars] [chars] [chars] [chars]	The chassis inside temperature is below the min temperature threshold	-	-
ENRCMNEUNDR1EMP	3-Error	[chars] [chars] [chars] [chars]	The chassis inside temperature is below the min temperature threshold	-	-
ENRCMNEUNDR1EMP	3-Error	[chars] [chars] [chars] [chars]	The chassis inside temperature is below the min temperature threshold	-	-
ENRCMNEUNDR1EMP	4-Warning	[chars] [chars] [chars] [chars]	The chassis inside temperature exceeds the configured threshold but less or equal to the max inside temperature	-	-
ENRCMNEUNDR1EMP	4-Warning	[chars] [chars] [chars] [chars]	The chassis inside temperature exceeds the configured threshold but less or equal to the max inside temperature	-	-
ENRCMNEUNDR1EMP	4-Warning	[chars] [chars] [chars] [chars]	The chassis inside temperature exceeds the configured threshold but less or equal to the max inside temperature	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ENVIRONMENTALDRUMTEMP</del>	4-Warning	[chars] [chars] [chars] [chars]	The chassis inside temperature is below the configured min temperature \n\ threshold but less or equal to the max inside temperature	-	-
<del>ENVIRONMENTALDRUMTEMP</del>	4-Warning	[chars] [chars] [chars] [chars]	The chassis inside temperature is below the configured min temperature \n\ threshold but less or equal to the max inside temperature	-	-
ENVIRONMENTALALERT	1-Alert	[chars] Location: [chars] State: [chars] Reading: [dec] [chars]	One of the sensors in the system is reading an out of normal\ value.	iosxe-chassismgr	LOG_STD_ACTION
ENVIRONMENTALGENERAL	1-Alert	[chars] Location [chars] State: fail	One of the sensors in the system has detected a failure condition\ from which it can not recover. This sensor is no longer reporting\ readings to the environmental monitoring subsystem.	iosxe-chassismgr	LOG_STD_ACTION
ENVIRONMENTAL3ALERT	3-Error	Critical limit reached for PVT temperature sensor on Asic: [dec] Reading: [dec] Celsius	Informational message for relating to Asic PVT sensor value	asr900-system-rsp3	"No action required"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ENVIRONMENTAL3CHASSISR	3-Error	Sensor [chars] on FRU [chars] has an invalid chasfs device state [chars]	The system does not understand the state that the sensor is \n\ reporting. This is most likely a filesystem corruption or\n\ ISSU problem. You may try rebooting the router to see if the\n\ problem corrects itself.	iosxe-chassismgr	LOG_STD_ACTION
ENVIRONMENTAL3DIRROR	3-Error	Error processing TDL message. [dec]	An unexpected condition in which IOS has received a TDL\n\ message which it can not process.	iosxe-chassismgr	LOG_STD_ACTION
ENVIRONMENTAL5SENORCK	5-Notice	[chars] Location: [chars] State: normal	One of the sensors in the system had been in a failure condition\n\ but is now operating normally.	iosxe-chassismgr	LOG_STD_ACTION
ENVIRONMENTAL6INFO	6-Information	[chars]	Informational message of ambient sensor reading	iosxe-chassismgr	LOG_STD_ACTION
ENVIRONMENTAL6NOICE	6-Information	[chars] Location: [chars] State: [chars] Reading: [dec] [chars]	Informational message on the sensor reading	iosxe-chassismgr	LOG_STD_ACTION
ENVM-0-SHUT	0-Emergency	Environmental Monitor initiated shutdown	The enviromental monitor has initiated a system shutdown.	-	"Look at previous environmental messages to determine cause of \n\ shutdown and correct if possible. " LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ENVM-2-ENVCRT	2-Critical	[chars] measured at [chars]	One of the measured environmental test points exceeds an extreme \n\ threshold.	-	"Correct the specified condition or the system may shut itself down\n\ as a preventive measure.\n\ This condition could cause the system to fail to operate properly. " LOG_SID_RECUR_ACTION
ENVM-3-BLOWER	3-Error	[chars] may have failed	One of the router's cooling fans may be close to failure.	-	"Replace the fan as soon as possible or the system may shut itself\n\ down or fail to operate properly."
ENVM-3-LASTENV	3-Error	[chars]	Non volatile EEPROM storage of environmental statistics failed.\n\ This may be due to an EEPROM hardware failure.	-	LOG_STD_ACTION
ENVM-3-NOACK	3-Error	Access to [chars] failed	One of the temperature sensors was not ready for \n\ the initiation of temperature environmental monitoring.\n\ Software is attempting to restart the sensor.	-	LOG_SID_RECUR_ACTION
ENVM-3-NOFORK	3-Error	Could not create environmental polling process	-	-	""
ENVM-3-NOFORK	3-Error	Could not start environment polling process	The software could not spawn the enviromental monitoring\n\ process possibly because of low memory - no monitoring\n\ will be performed.	-	LOG_SID_REDUCE_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ENVM-4-ENVWARN	4-Warning	[chars] measured at [chars]	One of the measured environmental test points exceeds the warning \n\ threshold.	-	"Closely monitor the condition and correct if possible. " LOG_SID_RECUR_ACTION
ENVM-4-ENGBUSYREAD	4-Warning	C2W Interface busy for long time reading temperature sensor [dec]	-	-	""
ENVM-4-ENGBUSYWRITE	4-Warning	C2W Interface busy for long time writing temperature sensor [dec]	-	-	""
ENVM-4-READERROR	4-Warning	Error reading temperature sensor [dec]	-	-	""
ENVM-4-WRITEERROR	4-Warning	Error writing temperature sensor [dec]	-	-	""
ENVM-6-PSCHANGE	6-Information	[chars] changed from [chars] to [chars]	This message indicates the absence or detection\n\ of a new type of power supply in the system.\n\ This can be expected when hot-swappable power supplies are swapped.\n\ This is an informational message only.	-	LOG_SID_NO_ACTION
ENVM-6-PSLEV	6-Information	[chars] state changed from [chars] to [chars]	One of the power supply test points underwent a state change.	-	"Closely monitor the condition and correct if possible. " LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ENMONCPU_UNDERTEMP	1-Alert	Critical Warning: CPU temperature [dec]C is below [dec]C threshold. Please resolve operating environment temperature to prevent system damage.	System CPU temperature is below the threshold	cgs2520	"Please save system configuration and power down system " "to prevent damage causes by operational environment or faulty components." LOG_STD_ACTION
ENMONCPU_OVERTEMP	1-Alert	Warning: CPU temperature [dec]C exceeds threshold [dec]C. Please resolve system cooling immediately to prevent system damage	System CPU temperature is over the threshold	cgs2520	"Please save system configuration and power down system" "to prevent damage causes by over heating." LOG_STD_ACTION
ENMONCPU_OVERTEMP_HDD	1-Alert	Warning: CPU temperature [dec]C exceeds threshold [dec]C. [chars] hard disk drive may become unusable if continuously operated at this temperature. Please resolve system cooling immediately to prevent system damage	System CPU temperature is over the threshold	cgs2520	"Please save system configuration and power down system" "to prevent damage causes by over heating." LOG_STD_ACTION
ENMONMEM_NO_PROCESS	1-Alert	Failed to create environmental monitor process	Failed to create environmental monitor process.	cgs2520	"The amount of memory available in the router may not be sufficient. " LOG_STD_ACTION
ENMONPOWER_HIGH_VOLTAGE	1-Alert	Critical Warning: PSU[dec] Input Voltage [dec]V exceeds high threshold [dec]V. The system may not continue operation. Immediate operator action is required.	Power supply input voltage exceeding threshold	cgs2520	"Please save system configuration and power down system" "to prevent damage causes by over voltage." LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ENMONPOWERLOWVOLTAGE	1-Alert	Critical Warning: PSU[dec] Input Voltage [dec]V is below low threshold [dec]V. The system may not continue operation. Immediate operator action is required.	Power supply input voltage is below low threshold	cgs2520	"Please save system configuration and power down system" "to prevent damage causes by low voltage." LOG_STD_ACTION
ENMONPOWERWARNING	1-Alert	: [chars]	An error has occurred in the power supply.	cgs2520	"Make sure that the power supply is connected to input source." "Also check if the Power Supply Unit and Redundant Power Supply" "are supported by this router." "If the problem still persists then please contact TAC."
ENMONRPS_ACCESS	1-Alert	[chars]	RPS communication error detected	cgs2520	LOG_STD_ACTION
ENMONRPSFANFAILED	1-Alert	[chars]	RPS fan failure detected	rps	"Disconnect any routers or switches connected " "to the RPS and replace the fan immediately"
ENMONRPSOVCURRENT	1-Alert	[chars]	RPS overcurrent condition detected	rps	"Unplug the routers or switches that are being " "backed off"
ENMONRPSMISMATCH	1-Alert	[chars]	Power supplies inserted in RPS are incompatible	cgs2520	"Remove either one of the power supplies or " "insert compatible power supplies"
ENMONRPSHTRMCRITICAL	1-Alert	RPS temperature has reached critical threshold	The temperature sensor value inside RPS has reached the critical threshold. RPS cannot function normally	rps	"The external temperature is very high." " Reduce the temperature in the room immediately"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ENMMONRPS_WARNING	1-Alert	: [chars]	RPS related event notification.	cgs2520	"Make sure that the correct RPS with supported FRUs is connected" " to the router. Check if RPS FRUs are connected to the power source." "Please refer to technical document or contact TAC for" " further clarification."
ENMMONROMMON	1-Alert	Warning: Router's ROMMON needs to be upgraded to support proper operation of module [chars]. Operation [chars] without upgrading ROMMON may cause the module hard disk driver to become unstable.	This router's ROMMON is down-rev and there is a module with hard disk drives installed in the system. Warn user about upgrading ROMMON.	c3900	"Upgrade ROMMON"
ENMMONHDDA_HH	1-Alert	Warning: system temperature [dec] C is high	Fan speed has reached level3 or above and there is a service module with hard disk drives installed in the system. Warn user about hard disks.	c3900	"Resolve environmental alarm or shutdown the service module."
ENMMONHDDH_HHP	1-Alert	Critical Warning: sensor temperature [dec] C exceeds 40 C.	Ambient temperature exceeds 40 C and there is a service module with hard disk drives installed in the system. Warn user about hard disks.	c3900	"Cool down room temperature or increase air flow to the router."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>ENM02CPUOVRMP</del>	2-Critical	Critical: CPU temperature [dec]C exceeds [dec]C threshold. Please resolve system cooling immediately to prevent system damage.	System CPU temperature is over the threshold	cgs2520	"Please save system configuration and power down system " "to prevent damage causes by over heating." LOG_STD_ACTION
<del>ENM02HDDOVRMP</del>	2-Critical	Critical: CPU temperature [dec]C exceeds [dec]C threshold. [chars] hard disk drive may become unusable if continuously operated at this temperature. Please resolve system cooling immediately to prevent system damage.	System CPU temperature is over the threshold	cgs2520	"Please save system configuration and power down system " "to prevent damage causes by over heating." LOG_STD_ACTION
<del>ENM02FANTRAYMSG</del>	2-Critical	Critical Warning: Fan tray was removed. Please re-insert fan tray to prevent system from overheating.	The environmental monitor can not detect fan tray on system chassis.	cgs2520	"Make sure the fan tray is properly inserted. " "If the problem persists replacement of fan tray is necessary "
<del>ENM02CPUOVRMP</del>	2-Critical	Warning: [chars] Temperature [dec]C Exceeds [dec]C. Please resolve system cooling to prevent system damage.	Temperature sensor exceed overtemp threshold.	cgs2520	"Please resolve system cooling or and power down system" "to prevent damage causes by over heating." LOG_STD_ACTION
<del>ENM02HDDOVRMP</del>	2-Critical	Warning: [chars] Temperature [dec]C Exceeds [dec]C. [chars] hard disk drive may become unusable if continuously operated at this temperature. Please resolve system cooling to prevent system damage.	Temperature sensor exceed overtemp threshold.	cgs2520	"Please resolve system cooling or and power down system" "to prevent damage causes by over heating." LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ENMODIEM</del> ENMODIEM	2-Critical	Warning: [chars] Temperature [dec]C Exceeds [dec]C. Please resolve system heating to prevent system damage.	Temperature measured by sensor exceeds high temperature threshold.	cgs2520	"Please resolve system heating or and power down system" "to prevent damage causes by over heating." LOG_STD_ACTION
<del>ENMODIEM</del> ENMODIEM	2-Critical	Warning: [chars] Temperature [dec]C Exceeds [dec]C. Please resolve system heating to prevent system damage.	Temperature measured by sensor exceeds high temperature threshold.	cgs2520	"Please resolve system heating or and power down system" "to prevent damage causes by over heating." LOG_STD_ACTION
<del>ENMOPWRM</del> ENMOPWRM	2-Critical	Warning: [chars] temperature [dec]C exceeds threshold [dec]C. Please resolve system cooling to prevent system damage	Power supply temperature exceeding threshold	cgs2520	"Please save system configuration and power down system" "to prevent damage causes by over heating." LOG_STD_ACTION
<del>ENMOPWRM</del> ENMOPWRM	2-Critical	Critical Warning: [chars] temperature [dec]C exceeds threshold [dec]C. The power supply will shutdown automatically if the high temperature condition is not resolved.	Power supply temperature exceeding critical temperature threshold	cgs2520	"Please save system configuration and power down system" "to prevent damage causes by over heating." LOG_STD_ACTION
<del>ENMOPWRM</del> ENMOPWRM	2-Critical	RPS temperature has reached warning threshold	The temperature sensor value inside RPS has reached the warning threshold. RPS can function normally until the temperature reaches the critical threshold	rps	"The external temperature is high." " Reduce the temperature in the room"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ENMONSYSFAN_FAILED	2-Critical	Critical Warning: System Fan has failed. Please replace the fan to prevent system overheating.	System fan is not rotating.	cgs2520	"Make sure the fan power cable is properly attached to " "the mainboard fan power connector. If problem persists " "system fan may need to be replace."
ENMONKEABOVRTMP	3-Error	Warning: [chars] Temperature [dec]C Exceeds [dec]C. Please resolve system cooling.	Temperature sensor exceed abnormal temp threshold.	cgs2520	"Please resolve system cooling or and power down system" "to prevent damage causes by over heating." LOG_STD_ACTION
ENMONKEABOVRTHD	3-Error	Warning: [chars] Temperature [dec]C Exceeds [dec]C. [chars] hard disk drive may become unusable if continuously operated at this temperature. Please resolve system cooling.	Temperature sensor exceed abnormal temp threshold.	cgs2520	"Please resolve system cooling or and power down system" "to prevent damage causes by over heating." LOG_STD_ACTION
ENMONPOWERERRCR	3-Error	: [chars]	Power supply error.	cgs2520	" Make sure that the power supply connected are supported." " If the problem still persists then please contact TAC."
ENMONRPSPOST_FAILED	3-Error	[chars]	RPS POST failure detected	rps	"LOG_SID_NO_ACTION"
ENMONMCUENVNIBCR	3-Error	Fails to initialize MCU Environmental Control Unit	Attempt to initialize MCU Environmental Control Unit fails	xformers	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ENMOMLIFANLWRM</del>	4-Warning	Critical Warning: More than two fans are running at low RPM. Rotation speed is now high for all other fans. Please replace fan tray to prevent system from overheating.	Multiple fan failures detected.	cgs2520	"Make sure the fan power cable is properly attached to " "the mainboard fan tray power connector. If problem persists " "Please replace fan tray."
<del>ENMOMLIFANLWRM</del>	4-Warning	Critical Warning: More than two fans are running at low RPM. Rotation speed is now high for all other fans. [chars] hard disk drive may become unusable if continuously operated at this temperature. Please replace fan tray to prevent system from overheating.	Multiple fan failures detected.	cgs2520	"Make sure the fan power cable is properly attached to " "the mainboard fan tray power connector. If problem persists " "Please replace fan tray."
<del>ENMOMLIFANLWRM</del>	4-Warning	Warning: Fan [dec] is running at low RPM. Rotation speed is now high for all other fans. Fan Tray replacement is recommended.	One of the fan is not rotating.	cgs2520	"Make sure the fan power cable is properly attached to " "the mainboard fan power connector. If problem persists " "Pease replace system fan tray."
<del>ENMOMLIFANLWRM</del>	4-Warning	Warning: Fan [dec] is running at low RPM. Rotation speed is now high for all other fans. [chars] hard disk drive may become unusable if continuously operated at this temperature. Fan Tray replacement is recommended.	One of the fan is not rotating.	cgs2520	"Make sure the fan power cable is properly attached to " "the mainboard fan power connector. If problem persists " "Pease replace system fan tray."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ENMON6FAN_LOVRPM	4-Warning	Warning: Two fans are running at low RPM. Rotation speed is now high for all other fans. Fan tray replacement is recommended.	Two fan failures detected.	cgs2520	"Make sure the fan power cable is properly attached to " "the mainboard fan tray power connector. If problem persists " "Please replace fan tray."
ENMON6FAN_HDD	4-Warning	Warning: Two fans are running at low RPM. Rotation speed is now high for all other fans. [chars] hard disk drive may become unusable if continuously operated at this temperature. Fan tray replacement is recommended.	Two fan failures detected.	cgs2520	"Make sure the fan power cable is properly attached to " "the mainboard fan tray power connector. If problem persists " "Please replace fan tray."
ENMON6POWER_NOICE	5-Notice	: [chars]	Power supply notice.	cgs2520	" This is an informational message only. No action is required."
ENMON6CPU_TEMP_OK	6-Information	CPU temperature normal	The CPU is operating at a normal temperature.	cgs2520	"The CPU previously detected an over-temperature condition " "which has now cleared. This is most likely due to high ambient " "temperature where the router is located."
ENVMON6-FAN_OK	6-Information	Fan [dec] is functioning normal now	Previously failed fan is functioning normal now.	cgs2520	"No action is required."
ENMON6FAN_TRAY_OK	6-Information	Fan tray is detected.	Fan tray previously reported as missing but it is now installed	cgs2520	"This is an informational error. No action is required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ENMON6INOUTLET_TEMPCK	6-Information	[chars] temperature normal	The inlet/outlet sensor is operating at a normal temperature.	cgs2520	"The in/outlet sensor previously detected an over-temperature condition " "which has now cleared. This is most likely due to high ambient " "temperature where the router is located."
ENMON6MODULE_TEMPCK	6-Information	[chars] temperature normal	The module card is operating at a normal temperature.	cgs2520	"The module card previously detected an over-temperature" "condition which has now cleared. This is most likely due to" "high ambient temperature where the router is located."
ENMON6RISER_TEMPCK	6-Information	[chars] temperature normal	The riser/ddr2/sfp sensors are operating at a normal temperature.	cgs2520	"The riser/ddr2/sfp sensors previously detected an over-temperature" "condition which has now cleared. This is most likely due to" "high ambient temperature where the router is located."
ENMON6POWER_EXILP	6-Information	: [chars]	External Inline Power supply info.	c1900	" Make sure that the power supply connected is supported." " If the problem still persists then please contact TAC."
ENMON6POWER_TEMPCK	6-Information	[chars] temperature normal	The Power Supply Unit is operating at a normal temperature.	cgs2520	"The Power Supply Unit was in over-temperature level " "It is now at normal level!"

<del>Facility</del> Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ENMON</del> POWERVOLTCHK	6-Information	PSU[dec] input voltage is normal	The Power Supply Unit input voltage is within normal limit.	cgs2520	"The Power Supply Unit input voltage was not within threshold limits " "It is now at normal level"
<del>ENMON</del> SYSTEMFANCK	6-Information	Fan [dec] Functional now	Sytem fan is functioning normal now.	cgs2520	"No action is required."
<del>EPAMCM</del> INTERNAL_PANIC	0-Emergency	[chars]	A Panic Condition.	-	""
<del>EPAMCM</del> M-1-INITFAIL	1-Alert	msgtxt_initfail	-	-	-
<del>EPAMCM</del> H-NOMEMORY	1-Alert	msgtxt_nomemory	-	-	-
<del>EPAMCM</del> INTERNAL_ERRCR	3-Error	[chars]	Errors	-	""
<del>EPAMCM</del> INTERNAL_ASSERT	7-Debug	[chars]: [chars] Assertion Failure - File [chars] Line [dec]	Assertion	-	""
<del>EPBR</del> EPBR_S_IPX_FAILURE	2-Critical	EPBR - Failed to register IPC message handler result code [node]	QFP EPBR feature failed to register an IPC message handler for communication with control plane. This will cause the featue not to function.	EPBR_COMP_NAME	LOG_STD_ACTION
<del>EPBR</del> EPBR_S_IPX_ALLOC_ERR	3-Error	EPBR - Failed to get [node]bytes space for IPC reply message	QFP ET-Analytics feature detected buffer allocation failure while sending reply to a message from another layer of EPBR feature's software stack.	EPBR_COMP_NAME	LOG_STD_ACTION
<del>EPBR</del> EPBR_S_IPX_IPC_ERR	3-Error	-	EPBR Conditional Debugging Registration failed.	EPBR_COMP_NAME	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EPBRXBRMCPXNDLSEN	3-Error	EPBR - Received an invalid length IPC message	QFP EPBR feature received an incorrect length of IPC message from another layer of EPBR feature's software stack m_enum [dec] m_subtype [dec] m_len [dec] m_flags 0x[hec] m_source [dec].	EPBR_COMP_NAME	LOG_STD_ACTION
EPBRXBRMCPXNSEL	3-Error	EPBR - Failed to send IPC message result code [dec]	QFP EPBR feature failed to send IPC message to another layer of EPBR feature's software stack.	EPBR_COMP_NAME	LOG_STD_ACTION
EPBRXBRMCPXNERRA	3-Error	EPBR - Failed to open reply message part of IPC packet	QFP EPBR feature failed to open message part of IPC packet while sending a reply to another layer of EPBR feature's software stack.	EPBR_COMP_NAME	LOG_STD_ACTION
EPBRXBRMCPXNKNOW	3-Error	EPBR - Received an unknown type code [node]IPC message	QFP EPBR feature received an unknown message from another layer of EPBR feature's software stack.	EPBR_COMP_NAME	LOG_SIDRECUR_ACTION
EPBRXBRMCPXNMLSEN	4-Warning	[dec]:[dec] len [dec] flags 0x[hec] source [dec]	Invalid EPBR IPC message length.	cpp-ucode	LOG_STD_ACTION
EPC3MEM_INT_FAILED	3-Error	Allocation of [chars] memory failed for EPC	EPC Initialization of channel pool failed.	cpp-ucode	LOG_STD_ACTION
HCXKTRHCANI_FAILED	3-Error	Register to Generic Packet Replication failed for EPC	EPC Initialization of packet replication registration failed.	cpp-ucode	LOG_STD_ACTION
HFPCORUNINTERNAL_PNC	0-Emergency	[chars]	A Panic Condition.	-	""
EPF_PORT-1-INITFAIL	1-Alert	msgtxt_initfail	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HF_FOREIGNERNA_ALERT</del>	1-Alert	[chars]	A condition that should be corrected immediately.	-	""
<del>HF_FOREIGNERNA_NOMEMORY</del>	1-Alert	msgtxt_nomemory	-	-	-
<del>HF_FOREIGNERNA_CRITICAL</del>	2-Critical	[chars]	Critical Conditions	-	""
<del>HF_FOREIGNERNA_ERROR</del>	3-Error	[chars]	Errors	-	""
<del>HF_FOREIGNERNA_WARNING</del>	4-Warning	Interface [chars] [chars]	Per interface Warning	-	""
<del>HF_FOREIGNERNA_WARNG</del>	4-Warning	[chars]	Warning	-	""
<del>HF_FOREIGNERNA_EVENT</del>	6-Information	[chars]	Informational	-	""
<del>HF_FOREIGNERNA_ASSERT</del>	7-Debug	[chars]: [chars] Assertion Failure - File [chars] Line [dec]	Assertion	-	""
<del>EMPLORSERVANCIOND</del>	5-Notice	ewlc-spwifi	"Attempt to enable url filtering for Hotspot 2.0 client[chars] without having an Hotspot 2.0 urlfilter configured"	"An attempt was made to activate post-auth Hotspot 2.0 url filtering on the client	-
<del>EMPLORSERVANCIOND</del>	5-Notice	ewlc-spwifi	"Attempt to enable url filtering for Hotspot 2.0 client[chars] without having an Hotspot 2.0 urlfilter configured"	"An attempt was made to activate post-auth Hotspot 2.0 url filtering on the client	-
<del>EMPLORSERVANCIOND</del>	5-Notice	polaris-smd	"Attempt to assign non-existent or shutdown VLAN[chars] to 802.1x port[chars] AuditSessionID[chars]"	"An attempt was made to assign a VLAN to an 802.1x port	-
<del>EMPLORSERVANCIOND</del>	5-Notice	polaris-smd	"Attempt to assign non-existent or shutdown VLAN[chars] to 802.1x port[chars] AuditSessionID[chars]"	"An attempt was made to assign a VLAN to an 802.1x port	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HMPLCONFREQMADDN</del>	5-Notice	polaris-smd	"Vlan[chars] not defined on the controller"	-	-
<del>HMPLCONFREQMADDN</del>	5-Notice	polaris-smd	"Vlan[chars] not defined on the controller"	-	-
<del>HMPLCONFREQMADDN</del>	5-Notice	polaris-smd	"Creating ACE %d for ACL[chars]"	"Every 10000th ACE and its ACL name printed to indicate the ACEs being created."	"Please check that the ACE count matches the configured ACE count."
<del>HMPLCONFREQMADDN</del>	5-Notice	polaris-smd	"Creating ACE %d for ACL[chars]"	"Every 10000th ACE and its ACL name printed to indicate the ACEs being created."	"Please check that the ACE count matches the configured ACE count."
<del>HMPLCONFREQMADDN</del>	6-Information	polaris-smd	"Sticky timer of %d seconds started for mac[chars] interface[chars] for template[chars]"	"Log is used to notify the start of the sticky timer"	"Sticky timer has begun. No action needs to be taken."
<del>HMPLCONFREQMADDN</del>	6-Information	polaris-smd	"Sticky timer of %d seconds started for mac[chars] interface[chars] for template[chars]"	"Log is used to notify the start of the sticky timer"	"Sticky timer has begun. No action needs to be taken."
<del>HMPLCONFREQMADDN</del>	3-Error	Process send msg failure for session hdl [hec] [chars]	This message indicates a process send msg failure	edge-epm	"No action required"
<del>HMPLCONFREQMADDN</del>	3-Error	Process send msg failure for session hdl [hec] [chars]	This message indicates a process send msg failure	edge-epm	"No action required"
<del>HMPLCONFREQMADDN</del>	4-Warning	polaris-smd	"ACL NAME '%s'    ACE SEQUENCE %d    RESULT FAILURE    REASON[chars]"	"This message indicates that adding an ACE to the specified ACL was ignored because of wrong configuration"	"Change ACE configuration for the specified ACL"

Family-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HM4ACL_CONFIG_ERROR	4-Warning	polaris-smd	"ACL NAME '%s'    ACE SEQUENCE %d    RESULT FAILURE    REASON[chars]"	"This message indicates that adding an ACE to the specified ACL was ignored because of wrong configuration"	"Change ACE configuration for the specified ACL"
HM4POLICY_APP_FAILURE	4-Warning	Policy Application Failed for Client [[chars]] MAC [[enet]] AuditSessionID [[chars]] for POLICY_TYPE [chars] POLICY_NAME [chars] REASON [chars]	This message indicates that the displayed policy for the client\n\ could not be applied by the EPM	pem	"Policy application failure could happen due to multiple reasons.The \n\ reason for the failure is notified to the client and the client has to\n\ take appropriate action based on it"
HM4POLICY_APP_FAILURE	4-Warning	polaris-smd	"Policy Application Failed for Client [%s] MAC [%s] AuditSessionID [%s] for POLICY_TYPE[chars] POLICY_NAME[chars] REASON[chars]"	"This message indicates that the displayed policy for the client could not be applied by the EPM"	"Policy application failure could happen due to multiple reasons.The reason for the failure is notified to the client and the client has to take appropriate action based on it"
HM4POLICY_APP_FAILURE	4-Warning	polaris-smd	"Policy Application Failed for Client [%s] MAC [%s] AuditSessionID [%s] for POLICY_TYPE[chars] POLICY_NAME[chars] REASON[chars]"	"This message indicates that the displayed policy for the client could not be applied by the EPM"	"Policy application failure could happen due to multiple reasons.The reason for the failure is notified to the client and the client has to take appropriate action based on it"
EPM-6-AAA	6-Information	POLICY [chars] EVENT [chars]	This message indicates a download request has been sent/downloaded\n\ successfully for the specified dACL	pem	"No action required"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EPM-6-AAA	6-Information	polaris-smd	"POLICY[chars]   EVENT[chars]"	"This message indicates a download request has been sent/downloaded successfully for the specified dACL"	"No action required"
EPM-6-AAA	6-Information	polaris-smd	"POLICY[chars]   EVENT[chars]"	"This message indicates a download request has been sent/downloaded successfully for the specified dACL"	"No action required"
HM6ACL_CONFIG_ERROR	6-Information	ACL NAME '[chars]'   ACE SEQUENCE [node]   RESULT FAILURE   REASON '[chars]'	This message indicates that adding an ACE to the specified ACL\n\n was ignored because of wrong configuration	pem	"Change ACE configuration for the specified ACL"
HM6ACL_CONFIG_ERROR	6-Information	ACL NAME '[chars]'   ACE SEQUENCE [node]   RESULT FAILURE   REASON '[chars]'	This message indicates that adding an ACE to the specified ACL\n\n was ignored because of wrong configuration	pem	"Change ACE configuration for the specified ACL"
HM6ACL_CONFIG_ERROR	6-Information	ACL NAME '[chars]'   ACE SEQUENCE [node]   RESULT FAILURE   REASON '[chars]'	This message indicates that adding an ACE to the specified ACL\n\n was ignored because of wrong configuration	pem	"Change ACE configuration for the specified ACL"
EPM-6-AUTH_ACL	6-Information	POLICY [chars]   EVENT [chars]	This message indicates a AUTH_DEF_ACL or AUTH_DEF_ACL_OPEN has been \n\n applied or removed	pem	"No action required"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
EPM-6-AUTH_ACL	6-Information	POLICY [chars] EVENT [chars]	This message indicates a AUTH_DEF_ACL or AUTH_DEF_ACL_OPEN has been \n\ applied or removed	pem	"No action required"
EPM-6-AUTH_ACL	6-Information	POLICY [chars] EVENT [chars]	This message indicates a AUTH_DEF_ACL or AUTH_DEF_ACL_OPEN has been \n\ applied or removed	pem	"No action required"
EPM-6-AUTH_ACL	6-Information	polaris-smd	"POLICY[chars]   EVENT[chars]"	"his message indicates a AUTH_DEF_ACL or AUTH_DEF_ACL_OPEN has been applied or removed"	"No action required"
EPM-6-AUTH_ACL	6-Information	polaris-smd	"POLICY[chars]   EVENT[chars]"	"his message indicates a AUTH_DEF_ACL or AUTH_DEF_ACL_OPEN has been applied or removed"	"No action required"
EPM-6-IPEVENT	6-Information	IP [chars]   MAC [enet] AuditSessionID [chars]   EVENT [chars]	This message indicates the IP event Wait/Release/Assignment that\n\ has occurred with respect to the specified host	pem	"No action required"
EPM-6-IPEVENT	6-Information	polaris-smd	"IP[chars]   MAC[chars]   AuditSessionID[chars]   EVENT[chars]"	"This message indicates the IP event Wait/Release/Assignment that has occurred with respect to the specified host"	"No action required"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EPM-6-IPEVENT	6-Information	polaris-smd	"IP[chars]   MAC[chars]   AuditSessionID[chars]   EVENT[chars]"	"This message indicates the IP event Wait/Release/Assignment that has occurred with respect to the specified host"	"No action required"
EPM-6-POLICY_APSUCCESS	6-Information	Policy Application succeeded for Client [[chars]] MAC [[enet]] AuditSession ID [[chars]] for POLICY_TYPE [[chars]] POLICY_NAME [[chars]]	This message indicates that the displayed policy for the client has been\n\n applied successfully by the EPM	pem	"No action required"
EPM-6-POLICY_APSUCCESS	6-Information	polaris-smd	"Policy Application succeeded for Client [%s] MAC [%s] AuditSession ID [%s] for POLICY_TYPE [%s] POLICY_NAME [%s]"	"This message indicates that the displayed policy for the client has been applied successfully by the EPM"	"No action required"
EPM-6-POLICY_APSUCCESS	6-Information	polaris-smd	"Policy Application succeeded for Client [%s] MAC [%s] AuditSession ID [%s] for POLICY_TYPE [%s] POLICY_NAME [%s]"	"This message indicates that the displayed policy for the client has been applied successfully by the EPM"	"No action required"
EPM-6-POLICY_REQ	6-Information	IP [chars]   MAC [enet]   AuditSessionID [chars]   EVENT [chars]	This message indicates that a policy application/remove request has been\n\n received by the EPM	pem	"No action required"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EPM-6-POLICY_REQ	6-Information	polaris-smd	"IP[chars]   MAC[chars]   AuditSessionID[chars]   EVENT[chars]"	"This message indicates that a policy application/remove request has been received by the EPM"	"No action required"
EPM-6-POLICY_REQ	6-Information	polaris-smd	"IP[chars]   MAC[chars]   AuditSessionID[chars]   EVENT[chars]"	"This message indicates that a policy application/remove request has been received by the EPM"	"No action required"
EOCH-6-EOCH_REJECTED	6-Information	iosxe-shellmgr	Peer[chars] has rejected epoch:[chars]	This error occurs if epoch from shell-manager has been rejected by the peer.	Check the epoch and peer state.
<del>QAM-3-ERR_QAM_NULL</del>	3-Error	Persistent alarm queue alarm info is NULL	-	-	-
<del>QAM-3-ERR_QAM_QUEUE</del>	3-Error	Persistent alarm queue info is NULL	-	-	-
<del>QAM-3-ERR_NULL_SCRIPT</del>	3-Error	[chars] is NULL	-	-	-
RPC-3-CHANNL_NCME	3-Error	No longer receiving R-APS messages for ethernet ring [chars] instance [dec]	A ring node has not received R-APS messages on the APS channel for an extended period of time. A properly functioning ring will have an R-APS message transmitted nominally every 5 seconds. This indicates that the requesting transmitting remote node on the ring such as	ethernet-g8032	"Confirm the remote node is transmitting R-APS " "messages and that there is network connectivity on " "the APS channel between the remote node and this " "node."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HRCPBSCHANNELNOM	3-Error	No longer receiving R-APS messages for ethernet ring [chars] instance [dec]	A ring node has not received R-APS messages on the APS channel for an extended period of time. A properly functioning ring will have an R-APS message transmitted nominally every 5 seconds. This indicates that the requesting transmitting remote node on the ring such as	ethernet-g8032	"Confirm the remote node is transmitting R-APS " "messages and that there is network connectivity on " "the APS channel between the remote node and this " "node."
HRCPNSAERQACKAID	3-Error	Port state negative ACK received for port [chars] state [dec]	A port state change request was sent to the hardware successfully but a negative acknowledgement was received for this request.	ethernet-g8032	"This error message likely indicates an internal IOS " "software issue. Try shutting and then bringing up " "the port. If this continues reboot the device. " "If the previous instructions didn't work use the " "Cisco software defect search tool to " "determine if this issue has been " "fixed in a later software release. If no defect is " "found then please contact your Cisco technical " "support representative and provide the " "representative with the exact error message seen " "as well as the version of IOS being used."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ERRDISAERQACKALD	3-Error	Port state negative ACK received for port [chars] state [dec]	A port state change request was sent to the hardware successfully but a negative acknowledgement was received for this request.	ethernet-g8032	<p>"This error message likely indicates an internal IOS "</p> <p>"software issue. Try shutting and then bringing up " "the port. If this continues reboot the device. "</p> <p>"If the previous instructions didn't work use the "</p> <p>"Cisco software defect search tool to "</p> <p>"determine if this issue has been "</p> <p>"fixed in a later software release. If no defect is " "found then please contact your Cisco technical "</p> <p>"support representative and provide the "</p> <p>"representative with the exact error message seen " "as well as the version of IOS being used."</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>RCPSAHCACKMERR</del>	3-Error	No port state ACK received for ring [chars] instance [dec] port [dec] state [dec]	A port state change request was sent to the hardware successfully but an acknowledgement was never received for this request. This means that there is a problem in the hardware.	ethernet-g8032	"This error message likely indicates an internal IOS " "software issue. Try shutting and then bringing up " "the port. If this continues reboot the device. " "If the previous instructions didn't work use the " "Cisco software defect search tool to " "determine if this issue has been " "fixed in a later software release. If no defect is " "found then please contact your Cisco technical " "support representative and provide the " "representative with the exact error message seen " "as well as the version of IOS being used."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ERR</del> ERR	3-Error	No port state ACK received for ring [chars] instance [dec] port [dec] state [dec]	A port state change request was sent to the hardware successfully but an acknowledgement was never received for this request. This means that there is a problem in the hardware.	ethernet-g8032	"This error message likely indicates an internal IOS " "software issue. Try shutting and then bringing up " "the port. If this continues reboot the device. " "If the previous instructions didn't work use the " "Cisco software defect search tool to " "determine if this issue has been " "fixed in a later software release. If no defect is " "found then please contact your Cisco technical " "support representative and provide the " "representative with the exact error message seen " "as well as the version of IOS being used."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ERRSERVSAERRCMXIM	3-Error	Port state request has been sent many times and the desired state has not been achieved for port [chars]	A port state change request was sent to the hardware successfully and acknowledgement was received but the desired state was not achieved.	ethernet-g8032	<p>"This error message likely indicates an internal IOS "</p> <p>"software issue. Try shutting and then bringing up " "the port. If this continues reboot the device. "</p> <p>"If the previous instructions didn't work use the "</p> <p>"Cisco software defect search tool to "</p> <p>"determine if this issue has been "</p> <p>"fixed in a later software release. If no defect is " "found then please contact your Cisco technical "</p> <p>"support representative and provide the "</p> <p>"representative with the exact error message seen " "as well as the version of IOS being used."</p>



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HRPC32</del> <del>FCM</del> <del>OWR</del> <del>IBL</del>	4-Warning	Node received an R-APS message with Node Id [chars] level [dec] which is lower than configured level [dec] for Ethernet ring [chars] instance [dec]	A ring node detects an R-APS message with a lower level than the configured G.8032 instance level for that APS Channel. This is a Failure of Protocol - Provisioning Mismatch - Level due to a misconfiguration of the APS level of nodes in the ring.	ethernet-g8032	"Identify the other node with Node Id and " "reconfigure it with a matching APS level."
<del>HRPC32</del> <del>FCM</del> <del>OWR</del> <del>OWNR</del>	4-Warning	RPL Owner node received an R-APSNRRB message from another RPL	RPL Owner node detects a No Request R-APS message with the RPL Blocked status flag set and the Node Id differs from its own. This is a Failure of Protocol - Provision Mismatch due to a misconfiguration where there are multiple RPL Owner nodes configured in the ring.	ethernet-g8032	"Identify the other RPL Owner node with Node Id and " "reconfigure it to be a non-RPL Owner node."
<del>HRPC32</del> <del>FCM</del> <del>OWR</del> <del>OWNR</del>	4-Warning	RPL Owner node received an R-APSNRRB message from another RPL	RPL Owner node detects a No Request R-APS message with the RPL Blocked status flag set and the Node Id differs from its own. This is a Failure of Protocol - Provision Mismatch due to a misconfiguration where there are multiple RPL Owner nodes configured in the ring.	ethernet-g8032	"Identify the other RPL Owner node with Node Id and " "reconfigure it to be a non-RPL Owner node."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HP_CLEARED	6-Information	Non-revertive ethernet ring [chars] instance [dec] is ready to be cleared by user	Faults have disappeared from a non-revertive ethernet ring instance so now it is ready to be cleared by the user. A non-revertive ring instance by definition requires user action because it does not revert automatically. The act of clearing the ring will cause the location of the block to move to the RPL link and the state to transition to Idle.	ethernet-g8032	"Once ready to move the block to the RPL link the " "ring instance can be cleared with the "<CmdBold>ethernet ring g8032 clear<noCmdBold> " "command."
HP_CLEARED	6-Information	Non-revertive ethernet ring [chars] instance [dec] is ready to be cleared by user	Faults have disappeared from a non-revertive ethernet ring instance so now it is ready to be cleared by the user. A non-revertive ring instance by definition requires user action because it does not revert automatically. The act of clearing the ring will cause the location of the block to move to the RPL link and the state to transition to Idle.	ethernet-g8032	"Once ready to move the block to the RPL link the " "ring instance can be cleared with the "<CmdBold>ethernet ring g8032 clear<noCmdBold> " "command."
HP_RING_STATE_CHANGED	6-Information	Ethernet ring [chars] instance [dec] changed state to [chars]	Informational message to notify the state transitions for a ring instance	ethernet-g8032	"None. This is an informational message to indicate " "an event may have triggered some ring protection " "action."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HPG8032</del> ETHCHANGED	6-Information	Ethernet ring [chars] instance [dec] changed state to [chars]	Informational message to notify the state transitions for a ring instance	ethernet-g8032	"None. This is an informational message to indicate " "an event may have triggered some ring protection " "action."
ERROR-3-OF_AGENT	3-Error	ERRMSG_NOFLAGS	-	-	-
ERROR-3-OF_AGENT	3-Error	ERRMSG_NOFLAGS	-	-	-
ERROR-3-OVS	3-Error	ERRMSG_NOFLAGS	-	-	-
ERROR-3-OVS	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>ERRMSG_NOFLAGS</del>	Error in FRR processing	c7600-sip-common	"This is a internal software error. If this " "error happened while configuring FRR try " "reconfiguring the interface. If the error " "persists or occurred during normal operation " "decode the traceback and " LOG_STD_ACTION	-	-
<del>ERRMSG_NOFLAGS</del> ERSPANMEMINT_FAILED	3-Error	Allocation of [chars] memory failed for ERSPAN	ERSPAN Initialization of channel pool failed.	cpp-ucode	LOG_STD_ACTION
<del>ERRMSG_NOFLAGS</del> ERSPANKIRHCANT_FAILED	3-Error	Register to Generic Packet Replication failed for ERSPAN	ERSPAN Initialization of packet replication registration failed.	cpp-ucode	LOG_STD_ACTION
<del>ERRMSG_NOFLAGS</del> KMEMMURPHO_FAILED	3-Error	Configuration of memory failed.	An error occurred when memory configuration was attempted.	iosxe-csl	-
<del>ERRMSG_NOFLAGS</del> KWASRCOSDLOGOUT	5-Notice	AP console logged out.	The AP console logged out	aventus-platform	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ESS_FEATURE3ESF_STUB	3-Error	CPP ESS per-session feature [chars] executes stub entry in [chars] direction	Cisco internal software error. CPP ESS per-session feature stub entry got executed. The packet will be dropped.	qfp-bbkeyword:none	LOG_STD_ACTION
ESS_FEATURE4ESF_DROP_POLICY	4-Warning	CPP ESS feature encountered unexpected linktype=[dec]	Cisco internal software error. CPP ESS per-session feature encountered unexpected linktype when executing output drop policy	qfp-bbkeyword:none	LOG_STD_ACTION
ESS_IPSUB3ESS_IPSUB_STUB	3-Error	CPP ESS IPSUB executes stub entry in [chars] direction	Cisco internal software error. CPP ESS IPSUB stub entry got executed. The packet will be dropped.	qfp-bbkeyword:none	LOG_STD_ACTION
ESS_IPSUB4ESS_IPSUB_THROTTLE_ERR	3-Error	Allocation of [chars] memory failed for ESS IP Subscriber	Allocation of memory resource demanded by ESS IPSUB FSOL throttle failed. This is a serious problem at the ESS IPSUB FSOL initialization for throttling.	qfp-bbkeyword:none	LOG_STD_ACTION
ESS_PROXY4ESS_PROXY_THROTTLE_ERR	2-Critical	Allocation of [chars] memory failed for ESS Proxy unsolicited event throttling	Allocation of memory resource demanded by ESS Proxy throttle failed. This is a serious problem at the ESS Proxy IPC initialization for unsolicited event throttling.	qfp-bbkeyword:none	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ISSPROXKACHNLALCQAE</del>	2-Critical	CPP ESS Proxy Session Keepalive channel creation failure.	Cisco internal software error. CPP ESS Proxy Session Keepalive detected that the channel creation failed. CPP ESS proxy session keepalive will not be functional while this condition exists.	qfp-bbkeyword:none	LOG_STD_ACTION
<del>ISSPROXKAKHRLARCAD</del>	2-Critical	CPP ESS Proxy Session Keepalive packet replication registration failure result: [dec].	Cisco internal software error. CPP ESS Proxy Session Keepalive detected that the packet replication registration failed. CPP ESS proxy session keepalive will not be functional while this condition exists.	qfp-bbkeyword:none	LOG_STD_ACTION
<del>ISSPROXKAKMPLRACQAE</del>	2-Critical	CPP ESS Proxy Session Keepalive packet template allocation failure [chars] buffer length: [dec].	Cisco internal software error. CPP ESS Proxy Session Keepalive detected that the packet template buffer allocation failed. CPP ESS proxy session keepalive will not be functional while this condition exists.	qfp-bbkeyword:none	LOG_STD_ACTION
<del>ISSPROXKAKMRNLAE</del>	2-Critical	CPP ESS Proxy Session Keepalive timer initialization failure.	Cisco internal software error. CPP ESS Proxy Session Keepalive detected that the timer initialization failed. CPP ESS proxy session keepalive will not be functional while this condition exists.	qfp-bbkeyword:none	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ESS</del> PROXYINITAID	2-Critical	CPP ESS Proxy IPC interface initialization failure result: [dec].	Cisco internal software error. CPP ESS Proxy initialization detected that the IPC interface initialization failed. CPP ESS proxy will not be functional while this condition exists.	qfp-bbkeyword:none	LOG_STD_ACTION
<del>ESS</del> PROXYBADMSG	3-Error	CPP ESS Proxy received bad length message type [dec]	Cisco internal software error. CPP ESS Proxy received a corrupted message from control plane. This message will be ignored.	qfp-bbkeyword:none	LOG_STD_ACTION
<del>ESS</del> PROXYINVALID	3-Error	CPP ESS Proxy received invalid message type [dec]	Cisco internal software error. CPP ESS Proxy received an invalid message type from control plane. This message will be ignored.	qfp-bbkeyword:none	LOG_STD_ACTION
<del>ESS</del> PROXYCALQIAID	3-Error	CPP ESS Proxy [chars] message lost due to message buffer allocation failure.	Cisco internal software error. CPP ESS Proxy message processing detected a message buffer allocation failure. The message is lost as the result of this condition.	qfp-bbkeyword:none	LOG_STD_ACTION
<del>ESS</del> PROXYUNOHR	3-Error	CPP ESS Proxy received unregistered message type [dec]	Cisco internal software error. CPP ESS Proxy received a message from control plane but there is no registered handler. The message is lost as the result of this condition.	qfp-bbkeyword:none	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ESS_PROXY_ESSENTIAL</del>	3-Error	CPP ESS Proxy [chars] message lost due to message sent failure result: [dec].	Cisco internal software error. CPP ESS Proxy message processing detected a message sent failure. The message is lost as the result of this condition.	qfp-bbkeyword:none	LOG_STD_ACTION
ESS_SWITCH3ESS_SIUB	3-Error	CPP ESS switching [chars] feature executes stub entry in [chars] direction	Cisco internal software error. CPP ESS Switching feature stub entry got executed. The packet will be dropped.	qfp-bbkeyword:none	LOG_STD_ACTION
<del>ESS_SWITCH3ESS_SNAIDPR</del>	3-Error	CPP ESS Switching invalid statistics block for session [chars].	Cisco internal software error. CPP ESS Switching session contains an invalid statistics block. The session statistics is lost.	qfp-bbkeyword:none	LOG_STD_ACTION
<del>HCNULA_UNKNOWNGRP</del>	3-Error	The system does not find port-channel group information	The system is trying to retrieve the port-channel group information for a specific port channel but it cannot find it.	PF_DDIS_COMPONENT	LOG_STD_ACTION
ETC-4-NOMEM	4-Warning	Not enough memory available for [chars]	The PAgP/LACP Shim/EC could not obtain the memory it needed.	fec	LOG_SIDSH_TECH_ACTION
ETC-5-BUNDLE	5-Notice	Interface [chars] joined port-channel [chars]	Interface joined the bundle.	-	-
<del>HCNULAIC0E_AGGGR</del>	5-Notice	Aggregator limit reached cannot allocate aggregator for group [dec]	New aggregator cannot be allocated in the group. Change the port attributes of the ports in the group so that they match and join the same aggregator.	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EIGSCANNOTBUNDLEAP	5-Notice	[chars] is not compatible with aggregators in channel [dec] and cannot attach to them [chars]	The port has different port-attributes that of port-channel or ports within the port-channel. For the port to join the bundle change the ports attributes so that it matches the port.	-	"Match the port-attributes to that of port-channel"
EIGSCANNOTBUNDLEQOS	5-Notice	Removed [chars] from port channel because a QoS policy cannot be supported across multiple DFC cards.	The Port specified in the error message cannot join port channel because the QoS policy attached to the port channel cannot support multiple DFC cards.	fec	"Place the port in another port channel or remove " "the QoS policy from the port channel."
EIGSCANNOTBUNDLEQOS	5-Notice	Removed [chars] from port channel as QoS attributes of port and port-channel are different.	The Port specified in the error message cannot join port channel because the QoS attributes of this port are not consistent with the QoS attributes of the port-channel.	fec	"Match the QoS attributes of the specified port to the QoS " "attributes of other member ports in the port channel. Use the " "<CmdBold>show queueing interface<NoCmdBold> command to display " "the QoS attributes of a port."
EIGSCANNOTBUNDLE	5-Notice	Port-channel [chars] is down port [chars] will remain stand-alone.	The state of the aggregation port is down. The port will remain\n\n stand-alone until the state of the aggregation port is up.	-	"Ensure that the other ports in the bundle have the\n\n same configuration."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ETC5CANNOT_BUNDLE2	5-Notice	[chars] is not compatible with [chars] and will be suspended [chars]	The attributes of the specified port are different from the attributes of the port-channel or the attributes of the ports within the port-channel.	-	"Match the attributes of the specified port to the attributes of the " "port-channel so that the specified port can join the bundle".
ETC-5-COMPATIBLE	5-Notice	[chars] is compatible with port-channel members	The specified port was not operational earlier because its attributes were different from the attributes of the port-channel or the attributes of the ports within the port-channel. The system detects that the attributes of the specified port now match the port-channel attributes.	-	LOG_SID_NO_ACTION
ETC-5-DONTBNL	5-Notice	[chars] suspended: incompatible remote port with [chars]	The configuration of the remote port is different from the configuration of other remote ports in the bundle. A port can only join the bundle when the configuration of the local port and the configuration of the remote port are the same as other ports already in the bundle.	fec	"Ensure that the configuration of the remote ports " "is the same for all ports in the bundle"
ETC-5-ERRPROT	5-Notice	Channel protocol mismatch for interface [chars] in group [dec]: the interface can not be added to the channel group	The interface can not be added to the channel-group with the specified mode	fec	"Change the channel-group or the mode for the " "interface"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ETC-5-ERRPROT2	5-Notice	Command rejected: the interface [chars] is already part of a channel with a different type of protocol enabled	The interface can not be selected for the specified protocol since is already part of a channel with a different type of protocol enabled	fec	"Remove the interface from the channel group"
ETC-5-ERRPROT3	5-Notice	Command rejected: the interface [chars] is already part of a channel	The interface can not be unselected for the specified protocol since is already part of a channel	fec	"Remove the interface from the channel group"
ETC-5-L3DONTIBNDL1	5-Notice	[chars] suspended: PAgP not enabled on the remote port.	PAgP is enabled on an L3 interface but it has been detected that the remote port does not have PAgP enabled. In this mode the port is put in a suspended state.	fec	"Enable PAgP on remote side"
ETC-5-L3DONTIBNDL2	5-Notice	[chars] suspended: LACP currently not enabled on the remote port.	LACP is enabled on an L3 interface but it has been detected that the remote port does not have LACP enabled. In this mode the port is put in a suspended state.	fec	"Enable LACP on the remote side"
ETC-5-MINLINKS_MET	5-Notice	Port-channel [chars] is up as its bundled ports [dec] meets min-links	The administrative configuration of minimum links is equal or less than the number of bundled ports. Therefore this port channel has been brought up	fec	"This is an informational message only. No action is required"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ETC5MINLINKS_NOIMET	5-Notice	Port-channel [chars] is down bundled ports [dec] doesn't meet min-links	The administrative configuration of minimum links is greater than the number of bundled ports. Therefore this port channel has been brought down	fec	"Reduce the min-links configuration for this group or add more ports to this port-channel to create a bundle."
ETC-5-NOLACP	5-Notice	Invalid EC mode LACP not enabled	LACP is not included in the image. Cannot set EC mode to active/passive	fec	"Get an image with LACP included or set mode to On"
ETC-5-NOPAGP	5-Notice	Invalid EC mode PAGP not enabled	PAGP is not included in the image. Cannot set EC mode to desirable/auto	fec	"Get an image with PAGP included or set mode to On"
ETC-5-PORTDOWN	5-Notice	Shutting down [chars] as its port-channel is admin-down	The administrative state of the port is controlled by the administrative state of its aggregate port. If the administrative state of the aggregate port is down the administrative state of the port will also be forced to be down	fec	"Enter the <CmdBold>no shutdown<NoCmdBold> command " "on the aggregate port to activate unshut the "
ETC-5-STAYDOWN	5-Notice	[chars] will remain down as its port-channel [chars] is admin-down	The administrative state of the aggregation port overrides that of the port. If the aggregation port is administratively down all ports in the aggregation port will also be forced to be administratively down.	fec	"Enter the <CmdBold>no shutdown<NoCmdBold> command " "on the aggregation port to activate unshut the "
ETC-5-UNBUNDLE	5-Notice	Interface [chars] left the port-channel [chars]	Interface fell off the bundle	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ETC-5-UNSUITABLE	5-Notice	[chars] will not join any port-channel [chars]	Configuring any of Port-fast VMPS Dest-SPAN are considered unsuitable for etherchannel. Please unconfigure them.	-	-
<del>EFSPA-3-ERR</del> EFSPA-3-ERR	3-Error	CU-SFP is not supported on SPA-2x1GE-V2 / SPA-2x1GE-SYNCE	CU-SFP is not supported on SPA-2x1GE-V2 / SPA-2x1GE-SYNCE	spa-eth-all	"Use PHY based ports for CU Connections "
<del>EFSPA-3-ERR</del> EFSPA-3-ERR	3-Error	Transceiver type GLC-GE-100FX is not supported on SPA-8xGE-V2	Transceiver type GLC-GE-100FX is not supported on SPA-8xGE-V2	spa-eth-all	"Consult the documentation and ensure supported " "transceivers are plugged into the SPA"
<del>EFSPA-3-ERR</del> EFSPA-3-ERR	3-Error	TCAM checkpointed data version [dec] differs from current version [dec].	During Minimal Disruptive Restart version of checkpointed team data is found to be different from the data in the current version. The SPA will be reset as normal and hence will impact traffic.	spa-eth-v2	"Open a case with Cisco Technical Assistance Center for further " "assistance."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HEPAC1RCH1N1C1R1R</del>	3-Error	The element at address [dec] in [chars] tcam is found missing during Minimal Disruptive Restart reconciliation.	During the reconciliation phase of Minimal Disruptive Restart an element was found to be present in the old IOS but not present in the new IOS image. This indicates that the config for this element was not played down from the RP during config-replay. This is an error condition and the SPA will be reset as normal and hence will impact traffic.	spa-eth-v2	"Open a case with Cisco Technical Assistance Center for further "assistance"
<del>HEPAC1RCH1N1C1R1R</del>	3-Error	TCAM checkpointed header values differs from values in current version.	During Minimal Disruptive Restart values of fields in the checkpointed tcam header is found to be differnt from the values in the current version of IOS. The SPA will be reset as normal and hence will impact traffic.	spa-eth-v2	"Open a case with Cisco Technical Assistance Center for further "assistance."
<del>HEPAC1RCH1N1C1R1R</del>	3-Error	TCAM checkpointed header version [dec] differs from current version [dec].	During Minimal Disruptive Restart version of checkpointed tcam header is found to be different from the header in the current version. The SPA will be reset as normal and hence will impact traffic.	spa-eth-v2	"Open a case with Cisco Technical Assistance Center for further "assistance."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>EFPAUCGHSMMATCH</del>	3-Error	The hardware and software copies of the element at address [dec] in team [chars] do not match. This indicates reconciliation failure.	During reconciliation phase of Minimal Disruptive Restart it is found that the software and hardware copies of an element in team do not match. This indicates an error and the SPA will be reset as normal and impact traffic.	spa-eth-v2	"Open a case with Cisco Technical Assistance Center for further " "assistance"
<del>EFPAUCGRCNCFURE</del>	3-Error	Fugu reconfiguration failed for SPA in slot [node]bay [node] during Minimal Disruptive Restart.	During Minimal Disruptive Restart fugu reconfiguration error has occurred. This indicates an error and the SPA will be reset as normal and impact traffic.	spa-eth-v2	"Open a case with Cisco Technical Assistance Center for further " "assistance."
<del>EFPAUCGHSRFAURE</del>	3-Error	Fugu restart failed for SPA in slot [node]bay [node]with error [dec] during Minimal Disruptive Restart.	During Minimal Disruptive Restart fugu restart error has occurred. This indicates an error and the SPA will be reset as normal and impact traffic.	spa-eth-v2	"Open a case with Cisco Technical Assistance Center for further " "assistance."
<del>EFPAUCGSMCRRYR</del>	3-Error	[chars] : [chars] Calender memory Parity error	An internal SPI4 error SPI4 calender memory parity error occurred	spa-eth-all	"If the issue persists it may be a case of bad hardware. Please open " "a case with Cisco technical support personnel for further assistance."
<del>EFPAUCGSMCRRYR</del>	3-Error	[chars] : [chars] Calender memory read back Parity error	An internal SPI4 error SPI4 Calender memory read back parity error	spa-eth-all	"Try reseating the SPA and if the issue persists open a case with the " "Cisco Technical Assistance Center."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>EFSPACIARUCSMDNRYER</del>	3-Error	[chars] : [chars] Memory Parity error	An internal SPI4 error SPI4 Control FIFO Memory Parity error	spa-eth-all	"If the issue persists open a case with Cisco Technical Assistance " "Center for further assistance."
<del>EFSPACIARUCSMDNRYER</del>	3-Error	[chars] : [chars] Memory Parity error	An internal SPI4 error SPI4 DATA FIFO Memory Parity error	spa-eth-all	"If the issue persists open a case with Cisco Technical Assistance " "Center for further assistance."
<del>EFSPACIARUCSMDNRYER</del>	3-Error	[chars] : [chars] Overflow Error	An internal SPI4 error SPI4 Overflow Error occured in the SPA.	spa-eth-all	"Open a case with Cisco Technical Assistance Center for further " "assistance."
<del>EFSPACIARUCSMDNRYER</del>	3-Error	[chars] : [chars] Rdata Out of Frame error	An internal SPI4 error SPI4 Rdata Out of Frame error occured in	spa-eth-all	"If the issue persists open a case with the Cisco Technical Assistance " "Center."
<del>EFSPACIARUCSMDNRYER</del>	3-Error	[chars] : Sync check failed in [chars] SPI4 interafce	Synchronization check failed in the Gila/Fugu SPI4 interafce	spa-eth-all	"Try reseating the SPA. If the issue persists contact Cisco Technical " "Assistance Center."
<del>EFSPACIARUCSMDNRYER</del>	3-Error	Fugu TCAM reconfiguration failed for SPA in slot [node]bay [node]with error [dec] reconfig_needed [dec] during Minimal Disruptive Restart.	During Minimal Disruptive Restart fugu team reconfiguration error has occure. This indicates an error and SPA will be reset as normal and impact traffic.	spa-eth-v2	"Open a case with Cisco Technical Assistance Center for further " "assistance."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EFPAFCMBSHALE	3-Error	TCAM restart failed for SPA in slot [node]bay [node]with error [dec] during Minimal Disruptive Restart.	During Minimal Disruptive Restart fugu tcam restart has failed. This indicates an error and SPA will be reset as normal and impact traffic.	spa-eth-v2	"Open a case with Cisco Technical Assistance Center for further " "assistance."
EFPAFCMNCAMER	3-Error	TCAM programming error at offset [dec]	An error was encountered when programming the VLAN TCAM. Two tcam entries are seen to have the same logical address so traffic drop will be seen on these subinterfaces	spa-eth-all	"Reload the Linecard. If the issue persists please " "open a case with Cisco TAC for further assistance."
EFSPACUUEITNEW	6-Information	The element at address [dec] in [chars] tcam is found to be new during Minimal Disruptive Restart reconciliation.	During the reconciliation phase of Minimal Disruptive Restart an element was found to be present in the new IOS but not present in the old IOS image. This is not an error condition the SPA driver will program this new entry into the hardware.	spa-eth-v2	"Open a case with Cisco Technical Assistance Center for further " "assistance"
EFSPACNIRMAXBUR	3-Error	Bursts of interrupts from [chars] have crossed maximum limit [dec] for port [dec]/[dec]/[dec]	Burst of interrupts that have crossed the maximum limit are detected by the SPA.	spa-eth-all	"Check the interface configuration and receive signal characteristics. " "Also verify the XFP transceiver and receive signal path. " "Re-enable the interface after corrective action."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EHSPA_MCPHYRECONF_FAIL	3-Error	PHY reconfiguration failed for SPA in slot [node]bay [node]with error [dec] during Minimal Disruptive Restart. This indicates an error and the SPA will be reset as normal and impact traffic.	-	spa-eth-v2	"Open a case with Cisco Technical Assistance Center for further " "assistance."
EHSPA_MCPHYRECONF_FAIL	3-Error	PHY restart failed for SPA in slot [node]bay [node]with error [dec] during Minimal Disruptive Restart.	During Minimal Disruptive Restart phy restart error has occurred. This indicates an error and the SPA will be reset as normal and impact traffic.	spa-eth-v2	"Open a case with Cisco Technical Assistance Center for further " "assistance."
EHSPA_MCHCONF_FAIL	3-Error	MAC reconfiguration failed for SPA in slot [node]bay [node] during Minimal Disruptive Restart.	During Minimal Disruptive Restart a mac reconfiguration error has occurred. This indicates an error and the SPA will be reset as normal and impact traffic.	spa-eth-v2	"Open a case with Cisco Technical Assistance Center for further " "assistance."
EHSPA_MCHRECONF_FAIL	3-Error	MAC restart failed for SPA in slot [node]bay [node]with error [dec] during Minimal Disruptive Restart.	During Minimal Disruptive Restart mac restart error has occurred. This indicates an error and the SPA will be reset as normal and impact traffic.	spa-eth-v2	"Open a case with Cisco Technical Assistance Center for further " "assistance."
EIHPA_MAC_SPI4_ERR	3-Error	[chars] : SPI4 Error occurred in the MAC	SPI4 error occurred in the MAC.	spa-eth-all	"SPI error reported in the SPA. Try reseating the SPA if the error " "occurs multiple times. If you further need assistance please open a " "case with Cisco TAC at " " <a href="http://www.cisco.com">http://www.cisco.com</a> "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>EFHSA_MGNSINKNTR</del>	3-Error	[chars] : Marvel spi4.1 sink init failed PL410 global status <lock> not set	An internal SPI4 error occurred in the SPA.	spa-eth-all	"If the issue persists return the SPA using the RMA process."
<del>EFHSA_MGNRECCERR</del>	3-Error	[chars] : An unrecoverable ECC error occurred in the MAC	An unrecoverable ECC error occurred in the MAC.	spa-eth-all	"Try to reload the SPA to recover from the failure. If the problem " "persist contact Cisco Technical Assistance Center for assistance."
<del>EFHSA_MGNIRBURST</del>	6-Information	Interrupts from [chars] have crossed burst limit of [dec] in [dec] msec for port [dec]/[dec]/[dec]	Interrupts that have crossed the burst limit are detected by the SPA.	spa-eth-all	"Check the interface configuration and receive signal characteristics. " "Also verify the XFP transceiver and receive signal path. " "Re-enable the interface after corrective action."
<del>EFHSA_MGNCONFURE</del>	3-Error	Serdes reconfiguration failed for SPA in slot [node]bay [node] during Minimal Disruptive Restart.	During Minimal Disruptive Restart serdes reconfiguration error has occurred. This indicates an error and the SPA will be reset as normal and impact traffic.	spa-eth-v2	"Open a case with Cisco Technical Assistance Center for further " "assistance."
<del>EFHSA_MGNRSRSTURE</del>	3-Error	Serdes restart failed for SPA in slot [node]bay [node] during Minimal Disruptive Restart.	During Minimal Disruptive Restart serdes restart error has occurred. This indicates an error and the SPA will be reset as normal and impact traffic.	spa-eth-v2	"Open a case with Cisco Technical Assistance Center for further " "assistance."
<del>EFHNR_MOSNDIMOUT</del>	2-Critical	Molecule send timeout queue [dec] molecule 0x[hec] 0x[hec]	An attempt to read or write one or more of the hardware settings failed.	firmware	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HCNHWCONFDUPLEXERR</del>	3-Error	Flowcontrol will not take effect until duplex is set to auto.	-	firmware	"Configure duplex auto"
<del>HCNHWCONFDUPLEXERR</del>	3-Error	Half-duplex loopback detected collision threshold exceeded on [chars].	The collisions on a half-duplex port exceeded the threshold with no valid data packets. The port is considered to be in a loopback condition. This may be caused by accidentally plugging a balun cable into the port	firmware	"Correct the problem causing the "loopback condition. Then bring the port up by entering "the shutdown then no shutdown interface configuration "commands. The port will be automatically restarted "after a timeout if errdisable recovery cause loopback "is configured."
<del>HCNHWCONFDUPLEXERR</del>	3-Error	Half-duplex loopback detected collision threshold exceeded on [chars].	The collisions on a half-duplex port exceeded the threshold with no valid data packets. The port is considered to be in a loopback condition. This may be caused by accidentally plugging a balun cable into the port	firmware	"Correct the problem causing the loopback condition. Then "bring the port up by entering the shutdown then no shutdown "interface configuration commands. The port will be "automatically restarted after a timeout if errdisable "recovery cause loopback is configured."
EHCNIR3INTERNALERR	3-Error	Internal Error [chars]	An internal error occurred.	firmware	LOG_SID_RECUR_ACTION
EHCNIR3INVALIDMAP	3-Error	Invalid map [dec] for address [enet]	An attempt to bridge a packet in software obtained an invalid result.	firmware	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>EIHCNIR3MOLSE</del> EHCNIR3MOLSE	3-Error	Keepalive packet loop-back detected on [chars].	Loop-back may be caused by accidentally plugging a balun cable into the port or there may be a misconfiguration in the network.	firmware	"Correct the problem causing the loopback " "condition. Then bring the port up by entering the shutdown " "then no shutdown interface configuration commands. The port " "will be automatically restarted after a timeout if errdisable " "recovery cause loopback is configured."
<del>EIHCNIR3MOLSE</del> EHCNIR3MOLSE	3-Error	Keepalive packet loop-back detected on [chars].	Loop-back may be caused by accidentally plugging a balun cable into the port or there may be a misconfiguration in the network.	firmware	"Correct the problem causing the loopback condition. Then " "bring the port up by entering the shutdown then no shutdown " "interface configuration commands. The port will be " "automatically restarted after a timeout if errdisable " "recovery cause loopback is configured."
EIHCNIR3MOLSE	3-Error	Molecule send from interrupt handler	An interrupt handler is accessing the hardware in a manner that is not permissible in an interrupt handler.	firmware	LOG_STD_ACTION
<del>EIHCNIR3MOLSE</del> EHCNIR3MOLSE	3-Error	RAM Access [chars] [chars] memory allocation failure	A request to read/write RAM failed memory allocation	firmware	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EHCNIRRA_RHY_ERROR	3-Error	Invalid reply to RAM Access [chars] request 0x[node]x from satellite [dec]	A request to read/write RAM on satellite access produced unexpected reply.	firmware	LOG_SID_RECUR_ACTION
EHCNIRRA_RHY_ERROR	3-Error	Request 0x[node]x encountered event [dec] in state [dec]	An unexpected event occurred for a ram access request.	firmware	LOG_SID_RECUR_ACTION
EHCNIRRA_RHY_ERROR	7-Debug	Ethernet Controller: Growing RAM Access [chars] Command	The command buffer for RAM Access is being grown dynamically because the original buffer was not big enough	firmware	LOG_SID_RECUR_ACTION
EHCNIRRA_RHY_ERROR	2-Critical	Ether CFM ISSU client failed to get buffer for message. Error: [dec] [chars]	The Ether CFM HA client failed to get buffer space for building chkpt message. Message cannot be sent to standby device. If a problem occurs the standby device cannot be brought up properly.	ethernet-cfm	"show logging and show checkpoint client"
EHCNIRRA_RHY_ERROR	2-Critical	Ether CFM ISSU client failed to get buffer for message. Error: [dec] [chars]	The Ether CFM HA client failed to get buffer space for building chkpt message. Message cannot be sent to standby device. If a problem occurs the standby device cannot be brought up properly.	ethernet-cfm	"show logging and show checkpoint client"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
EIHER_CFM_HA-2-INT	2-Critical	Ether CFM ISSU client initialization failed to [chars]. Error: [dec] [chars]	The Ether CFM ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	ethernet-cfm	LOG_STD_ACTION
EIHER_CFM_HA-2-INT	2-Critical	Ether CFM ISSU client initialization failed to [chars]. Error: [dec] [chars]	The Ether CFM ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	ethernet-cfm	LOG_STD_ACTION
EIHER_CFM_ISSU-2-INT	2-Critical	Ether CFM ISSU client failed to send negotiation message. Error: [dec] [chars]	The Ether CFM ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	ethernet-cfm	"show logging and show checkpoint client"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>EHRM_ISSU_NCO</del>	2-Critical	Ether CFM ISSU client failed to send negotiation message. Error: [dec] [chars]	The Ether CFM ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	ethernet-cfm	"show logging and show checkpoint client"
<del>EHRM_ISSU_NCO</del>	2-Critical	Ether CFM ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The Ether CFM ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	ethernet-cfm	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>EHRM_ISSU_NCO</del>	2-Critical	Ether CFM ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The Ether CFM ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	ethernet-cfm	"show issu session <client_id> and " "show issu negotiated capability <session_id>"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>ETHERCFM_ISSU_NREG_NRY</del>	2-Critical	Ether CFM ISSU client failed to register session information. Error: [dec] [chars]	The Ether CFM ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	ethernet-cfm	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>ETHERCFM_ISSU_NREG_NRY</del>	2-Critical	Ether CFM ISSU client failed to register session information. Error: [dec] [chars]	The Ether CFM ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	ethernet-cfm	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>ETHERCFM_ISSU_NVAL_NSN</del>	3-Error	Ether CFM ISSU client does not have a valid registered session.	The Ether CFM ISSU client does not have a valid registered session.	ethernet-cfm	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>ETHERCFM_ISSU_NVAL_NSN</del>	3-Error	Ether CFM ISSU client does not have a valid registered session.	The Ether CFM ISSU client does not have a valid registered session.	ethernet-cfm	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>ETHERCFM_ISSU_NMGT_NCK</del>	3-Error	Ether CFM ISSU client 'Message Type [dec]' is not compatible	The Ether CFM ISSU client received an incompatible message from the peer device. The message cannot be processed.	ethernet-cfm	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>EIHR_CFM_ISSU_MG_NCK</del>	3-Error	Ether CFM ISSU client 'Message Type [dec]' is not compatible	The Ether CFM ISSU client received an incompatible message from the peer device. The message cannot be processed.	ethernet-cfm	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>EIHR_CFM_ISSU_MG_SZE</del>	3-Error	Ether CFM ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The Ether CFM ISSU client failed to calculate the MTU for the specified message. The Ether CFM ISSU client will not be able to send the message to the standby device.	ethernet-cfm	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>EIHR_CFM_ISSU_MG_SZE</del>	3-Error	Ether CFM ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The Ether CFM ISSU client failed to calculate the MTU for the specified message. The Ether CFM ISSU client will not be able to send the message to the standby device.	ethernet-cfm	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>EIHR_CFM_ISSU_NREG_N</del>	3-Error	Ether CFM ISSU client failed to unregister session information. Error: [dec] [chars]	The Ether CFM ISSU client failed to unregister session information.	ethernet-cfm	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>EIHR_CFM_ISSU_NREG_N</del>	3-Error	Ether CFM ISSU client failed to unregister session information. Error: [dec] [chars]	The Ether CFM ISSU client failed to unregister session information.	ethernet-cfm	"show issu session <client_id> and " "show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EIHR_CFM_ISSU_TRANSFORM	3-Error	Ether CFM ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The Ether CFM ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the Ether CFM state between the active device and the standby device is not identical.	ethernet-cfm	"show issu session <client_id> and " "show issu negotiated version <session_id>"
EIHR_CFM_ISSU_TRANSFORM	3-Error	Ether CFM ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The Ether CFM ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the Ether CFM state between the active device and the standby device is not identical.	ethernet-cfm	"show issu session <client_id> and " "show issu negotiated version <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EIHR_CFM_CONFIG_ERROR	3-Error	CFM miss-configuration in the network. Same mpid [dec] configured within the same maintenance name [chars] having [chars] for [chars].	The same MPID as a locally configured MEP but different source MAC Address than its own. The maintenance name can be either maintenance domain or maintenance association. This message may be for a particular vlan or evc with the corresponding MAID or CSIID.	ethernet-cfm	"Configure the CFM maintenance end points properly " "by giving unique mpid in a particular maintenance " "domain or association."
EIHR_CFM_CONFIG_ERROR	3-Error	CFM miss-configuration in the network. Same mpid [dec] configured within the same maintenance name [chars] having [chars] for [chars].	The same MPID as a locally configured MEP but different source MAC Address than its own. The maintenance name can be either maintenance domain or maintenance association. This message may be for a particular vlan or evc with the corresponding MAID or CSIID.	ethernet-cfm	"Configure the CFM maintenance end points properly " "by giving unique mpid in a particular maintenance " "domain or association."
EIHR_CFM_CONFIG_ERROR	3-Error	CFM miss-configuration in the network. Same mpid [dec] configured within the same maintenance name [chars] having [chars] for [chars].	The same MPID as a locally configured MEP but different source MAC Address than its own. The maintenance name can be either maintenance domain or maintenance association. This message may be for a particular vlan or evc with the corresponding MAID or CSIID.	ethernet-cfm	"Configure the CFM maintenance end points properly " "by giving unique mpid in a particular maintenance " "domain or association."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>EFHCMPSONCED</del>	3-Error	Service ID of received CC [chars] does not match local Service ID [chars].	For a given service within a domain the Service ID in the CC message should match the locally configured Service ID.	ethernet-cfm	"Verify that the service ID's are configured correctly using 'show ethernet cfm " "domain. "
<del>EFHCMPSONCED</del>	3-Error	Service ID of received CC [chars] does not match local Service ID [chars].	For a given service within a domain the Service ID in the CC message should match the locally configured Service ID.	ethernet-cfm	"Verify that the service ID's are configured correctly using 'show ethernet cfm " "domain. "
<del>EFHCMPSONCED</del>	3-Error	Service ID of received CC [chars] does not match local Service ID [chars].	For a given service within a domain the Service ID in the CC message should match the locally configured Service ID.	ethernet-cfm	"Verify that the service ID's are configured correctly using 'show ethernet cfm " "domain. "
<del>EFHCMPSONCEME</del>	3-Error	Continuity Check message with unmatched [chars] is received from a remote MEP with mpid [dec] [chars] level [node]domain [chars] MAC: [enet].	The Continuity Check message whose CSIID or MAID is different from what is locally configured on the device for the given EVC or VLAN thereby indicating that there is a potential for having a cross-connected service in the network.	ethernet-cfm	"Configure the CFM CSI ID properly across the " "network."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ETHERNET-CFM-CONNECTION-ERR</del>	3-Error	Continuity Check message with unmatched [chars] is received from a remote MEP with mpid [dec] [chars] level [node]domain [chars] MAC: [enet].	The Continuity Check message whose CSIID or MAID is different from what is locally configured on the device for the given EVC or VLAN thereby indicating that there is a potential for having a cross-connected service in the network.	ethernet-cfm	"Configure the CFM CSI ID properly across the " "network."
<del>ETHERNET-CFM-CONNECTION-ERR</del>	3-Error	Continuity Check message with unmatched [chars] is received from a remote MEP with mpid [dec] [chars] level [node]domain [chars] MAC: [enet].	The Continuity Check message whose CSIID or MAID is different from what is locally configured on the device for the given EVC or VLAN thereby indicating that there is a potential for having a cross-connected service in the network.	ethernet-cfm	"Configure the CFM CSI ID properly across the " "network."
<del>ETHERNET-CFM-CHECK-MEMING</del>	3-Error	The device does not receive any CC messages from a remote MEP with mpid [dec] [chars] that it was expecting to be part of the [chars] in the domain [chars] from MAC: [enet].	The configured remote MEP does not come up during the cross-check start timeout interval. This message may be for a particular vlan or evc with the corresponding MAID or CSIID.	ethernet-cfm	"There could be a possible fault in the network. " "Check the CFM cross check configurations are " "proper. "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ETHERNET-CFM-MISSING</del>	3-Error	The device does not receive any CC messages from a remote MEP with mpid [dec] [chars] that it was expecting to be part of the [chars] in the domain [chars] from MAC: [enet].	The configured remote MEP does not come up during the cross-check start timeout interval. This message may be for a particular vlan or evc with the corresponding MAID or CSIID.	ethernet-cfm	"There could be a possible fault in the network. " "Check the CFM cross check configurations are " "proper. "
<del>ETHERNET-CFM-MISSING</del>	3-Error	The device does not receive any CC messages from a remote MEP with mpid [dec] [chars] that it was expecting to be part of the [chars] in the domain [chars] from MAC: [enet].	The configured remote MEP does not come up during the cross-check start timeout interval. This message may be for a particular vlan or evc with the corresponding MAID or CSIID.	ethernet-cfm	"There could be a possible fault in the network. " "Check the CFM cross check configurations are " "proper. "
<del>ETHERNET-CFM-UNKNOWN</del>	3-Error	The device received a CC message from a remote MEP having mpid [dec] [chars] with MAC: [enet] that it was not expecting to be part of the [chars] in the domain: [chars].	The received remote MEP is not there in the static list configured. This message may be for a particular vlan or evc with the corresponding MAID or CSIID.	ethernet-cfm	"Check whether the CFM crosscheck configurations " "are proper."
<del>ETHERNET-CFM-UNKNOWN</del>	3-Error	The device received a CC message from a remote MEP having mpid [dec] [chars] with MAC: [enet] that it was not expecting to be part of the [chars] in the domain: [chars].	The received remote MEP is not there in the static list configured. This message may be for a particular vlan or evc with the corresponding MAID or CSIID.	ethernet-cfm	"Check whether the CFM crosscheck configurations " "are proper."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HEURSEEMKOW</del>	3-Error	The device received a CC message from a remote MEP having mpid [dec] [chars] with MAC: [enet] that it was not expecting to be part of the [chars] in the domain: [chars].	The received remote MEP is not there in the static list configured. This message may be for a particular vlan or evc with the corresponding MAID or CSIID.	ethernet-cfm	"Check whether the CFM crosscheck configurations " "are proper."
EHRCMFAUTALARM	3-Error	A fault has occurred in the network for the local MEP having mpid [dec] vlan [dec] [chars] indicating a fault with the event code [chars].	This indicates a fault in the network. Event code: RDICCM: Remote MEP has reported RDI in CCM Event code: MACstatus: The last CCM received by this MEP from some remote MEP indicated that the transmitting MEPP's associated MAC is reporting an error status via the Port Status TLV or Interface Status TLV. Event code: RemoteCCM: This MEP is not receiving CCMs from some other MEP in its configured list. Event code: ErrorCCM: This MEP is receiving invalid CCMs. Event code: XconCCM: This MEP is receiving CCMs that could be from some other CSI or MA.	ethernet-cfm	"There could be a possible fault in the network. " "Check whether the cfm configurations are proper."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EIHR_CCM_FAULT_ALARM	3-Error	A fault has occurred in the network for the local MEP having mpid [dec] vlan [dec] [chars] indicating a fault with the event code [chars].	This indicates a fault in the network. Event code: RDICCM: Remote MEP has reported RDI in CCM Event code: MACstatus: The last CCM received by this MEP from some remote MEP indicated that the transmitting MEPP's associated MAC is reporting an error status via the Port Status TLV or Interface Status TLV. Event code: RemoteCCM: This MEP is not receiving CCMs from some other MEP in its configured list. Event code: ErrorCCM: This MEP is receiving invalid CCMs. Event code: XconCCM: This MEP is receiving CCMs that could be from some other CSI or MA.	ethernet-cfm	"There could be a possible fault in the network. " "Check whether the cfm configurations are proper."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EIHR_CFM_FAULT_ALARM	3-Error	A fault has occurred in the network for the local MEP having mpid [dec] vlan [dec] [chars] indicating a fault with the event code [chars].	This indicates a fault in the network. Event code: RDICCM: Remote MEP has reported RDI in CCM Event code: MACstatus: The last CCM received by this MEP from some remote MEP indicated that the transmitting MEPP's associated MAC is reporting an error status via the Port Status TLV or Interface Status TLV. Event code: RemoteCCM: This MEP is not receiving CCMs from some other MEP in its configured list. Event code: ErrorCCM: This MEP is receiving invalid CCMs. Event code: XconCCM: This MEP is receiving CCMs that could be from some other CSI or MA.	ethernet-cfm	"There could be a possible fault in the network. " "Check whether the cfm configurations are proper."
EIHR_CFM_FAULT_ALARM	3-Error	-	DCM_CLI_DP Service Disabled	SRVNAME_DCM_CLI_DP	SYSLOGDOC_NO_ACTION
EIHR_CFM_FAULT_ALARM	3-Error	-	DCM_CLI_DP Service nabled	SRVNAME_DCM_CLI_DP	SYSLOGDOC_NO_ACTION
EIHR_CFM_FAULT_ALARM	3-Error	-	DCM_CORE Service Disabled	SRVNAME_DCM_CORE	SYSLOGDOC_NO_ACTION
EIHR_CFM_FAULT_ALARM	3-Error	-	DCM_CORE Service nabled	SRVNAME_DCM_CORE	SYSLOGDOC_NO_ACTION
EIHR_CFM_FAULT_ALARM	3-Error	-	DCM_SNMP_DP Service Disabled	SRVNAME_DCM_SNMP_DP	SYSLOGDOC_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ETHERCM</del> FAULT_ALARM	3-Error	-	DCM_SNMP_DP Service nabled	<del>SRNAME</del> DCM_SNMP_DP	SYSLOGDOC_NO_ACTION
<del>ETHERCM</del> FORWARD_LOOP	3-Error	Continuity Check message is received with same source MAC [enet] and mpid [dec] [chars] of its own in the [chars].	The device is receiving its own CC messages for a particular vlan or evc within the same CSI or MA.	ethernet-cfm	"Configure the CFM maintenance points properly " "to avoid the forwarding loop."
<del>ETHERCM</del> FORWARD_LOOP	3-Error	Continuity Check message is received with same source MAC [enet] and mpid [dec] [chars] of its own in the [chars].	The device is receiving its own CC messages for a particular vlan or evc within the same CSI or MA.	ethernet-cfm	"Configure the CFM maintenance points properly " "to avoid the forwarding loop."
<del>ETHERCM</del> FORWARD_LOOP	3-Error	Continuity Check message is received with same source MAC [enet] and mpid [dec] [chars] of its own in the [chars].	The device is receiving its own CC messages for a particular vlan or evc within the same CSI or MA.	ethernet-cfm	"Configure the CFM maintenance points properly " "to avoid the forwarding loop."
<del>ETHERCM</del> FROM_MROGP	3-Error	received Loopback Reply with correct Transaction IDentifier but from a Maintenance Point different than Loopback Message's destination	An unknown destination sent a reply to a Loopback messages that was intended to another device.	ethernet-cfm	"Verify if the correct destination mac address was specified in the Command Line Interface" " while sending Loopback Message."
<del>ETHERCM</del> FROM_MROGP	3-Error	received Loopback Reply with correct Transaction IDentifier but from a Maintenance Point different than Loopback Message's destination	An unknown destination sent a reply to a Loopback messages that was intended to another device.	ethernet-cfm	"Verify if the correct destination mac address was specified in the Command Line Interface" " while sending Loopback Message."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>EHRM</del> <del>FROM</del> <del>WRONG</del> <del>MP</del>	3-Error	received Loopback Reply with correct Transaction Identifier but from a Maintenance Point different than Loopback Message's destination	An unknown destination sent a reply to a Loopback messages that was intended to another device.	ethernet-cfm	"Verify if the correct destination mac address was specified in the Command Line Interface" " while sending Loopback Message."
<del>EHRM</del> <del>MEP</del> <del>CONF</del> <del>LRD</del>	3-Error	received CC from unconfigured remote MEP.	While performing cross check a CC message was received from a remote MEP which is not configured under the domain submode.	ethernet-cfm	"Verify if the remote MEP should be added to the remote MEP list under the domain" " using 'show ethernet cfm domain."
<del>EHRM</del> <del>MEP</del> <del>CONF</del> <del>LRD</del>	3-Error	received CC from unconfigured remote MEP.	While performing cross check a CC message was received from a remote MEP which is not configured under the domain submode.	ethernet-cfm	"Verify if the remote MEP should be added to the remote MEP list under the domain" " using 'show ethernet cfm domain."
<del>EHRM</del> <del>MEP</del> <del>CONF</del> <del>LRD</del>	3-Error	received CC from unconfigured remote MEP.	While performing cross check a CC message was received from a remote MEP which is not configured under the domain submode.	ethernet-cfm	"Verify if the remote MEP should be added to the remote MEP list under the domain" " using 'show ethernet cfm domain."
<del>EHRM</del> <del>MP</del> <del>LOCAL</del> <del>MPID</del>	3-Error	MPID of CC matches local MPID.	The remote MPID matches a MPID configured locally for the service.	ethernet-cfm	"Either the local MPID or remote MPID should be changed as the MPID " " should be unique for a given service in a network"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>EFHRCFM</del> LOCAL_MD	3-Error	MPID of CC matches local MPID.	The remote MPID matches a MPID configured locally for the service.	ethernet-cfm	"Either the local MPID or remote MPID should be changed as the MPID " " should be unique for a given service in a network"
<del>EFHRCFM</del> LOCAL_MD	3-Error	MPID of CC matches local MPID.	The remote MPID matches a MPID configured locally for the service.	ethernet-cfm	"Either the local MPID or remote MPID should be changed as the MPID " " should be unique for a given service in a network"
<del>EFHRCFM</del> MEP_DOWN	3-Error	Remote MEP mpid [dec] [chars] [chars] in domain [chars] changed state to down with event code [chars].	The entry in CCDB corresponding to this MEP times out or the device receives a CC message with zero hold-time Event code: LastGasp: A valid Continuity Check message with a zero hold-time is received from a remote MEP and the device either has a valid non-expired CCDB	ethernet-cfm	"Check the remote CFM configurations using CFM " " utilities like traceroute and ping."
<del>EFHRCFM</del> MEP_DOWN	3-Error	Remote MEP mpid [dec] [chars] [chars] in domain [chars] changed state to down with event code [chars].	The entry in CCDB corresponding to this MEP times out or the device receives a CC message with zero hold-time Event code: LastGasp: A valid Continuity Check message with a zero hold-time is received from a remote MEP and the device either has a valid non-expired CCDB	ethernet-cfm	"Check the remote CFM configurations using CFM " " utilities like traceroute and ping."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EIHER_CFM6ENRDMAN	5-Notice	Ignored VLAN [node]in '[chars]'	Invalid VLAN was ignored in the configuration.	ethernet-cfm	"LOG_SID_NO_ACTION"
EIHER_CFM6CHKSM MEP	6-Information	The device received CC messages from all remote MEPs within a given [chars] in the maintenance domain [chars].	The service configured either CSI or MA is up as it receives CC messages from all remote statically configured MEPs.	ethernet-cfm	"Information message only."
EIHER_CFM6CHKSM MEP	6-Information	The device received CC messages from all remote MEPs within a given [chars] in the maintenance domain [chars].	The service configured either CSI or MA is up as it receives CC messages from all remote statically configured MEPs.	ethernet-cfm	"Information message only."
EIHER_CFM6CHKSM MEP	6-Information	The device received CC messages from all remote MEPs within a given [chars] in the maintenance domain [chars].	The service configured either CSI or MA is up as it receives CC messages from all remote statically configured MEPs.	ethernet-cfm	"Information message only."
EIHER_CFM6ENR AIS	6-Information	local mep with mpid [dec] level [dec] id [dec] dir [chars] Interface [chars] enters AIS defect condition	Ethernet cfm mep has entered AIS defect condition. This is due to receive of ETH-AIS or ETH-LCK frames or CCM errors causing signal fail condition. Id refers to local mep vlan id or bridge-domain id.	ethernet-cfm	"LOG_SID_NO_ACTION"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EIHER_CFM6ENIER_AIS	6-Information	local mep with mpid [dec] level [dec] id [dec] dir [chars] Interface [chars] enters AIS defect condition	Ethernet cfm mep has entered AIS defect condition. This is due to receive of ETH-AIS or ETH-LCK frames or CCM errors causing signal fail condition. Id refers to local mep vlan id or bridge-domain id.	ethernet-cfm	'LOG_SID_NO_ACTION'
EIHER_CFM6ENIER_AIS	6-Information	local mep with mpid [dec] level [dec] id [dec] dir [chars] Interface [chars] enters AIS defect condition	Ethernet cfm mep has entered AIS defect condition. This is due to receive of ETH-AIS or ETH-LCK frames or CCM errors causing signal fail condition. Id refers to local mep vlan id or bridge-domain id.	ethernet-cfm	'LOG_SID_NO_ACTION'
EIHER_CFM6ENIER_ASNT	6-Information	Interface [chars] enters AIS defect condition for [chars] direction	Interface has entered AIS defect condition. This is due to traffic effecting indication from lower layer OAM like 802.3ah	ethernet-cfm	'LOG_SID_NO_ACTION'
EIHER_CFM6ENIER_ASNT	6-Information	Interface [chars] enters AIS defect condition for [chars] direction	Interface has entered AIS defect condition. This is due to traffic effecting indication from lower layer OAM like 802.3ah	ethernet-cfm	'LOG_SID_NO_ACTION'
EIHER_CFM6ENIER_ASNT	6-Information	Interface [chars] enters AIS defect condition for [chars] direction	Interface has entered AIS defect condition. This is due to traffic effecting indication from lower layer OAM like 802.3ah	ethernet-cfm	'LOG_SID_NO_ACTION'

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EIHER_CFM6ENIER_LCK	6-Information	local mep with mpid [dec] level [dec] id [dec] dir [chars] Interface [chars] enters LCK defect condition	Ethernet cfm mep has entered LCK Maintenance condition. Id refers to local mep vlan id or bridge-domain id.	ethernet-cfm	"LOG_SID_NO_ACTION"
EIHER_CFM6ENIER_LCK	6-Information	local mep with mpid [dec] level [dec] id [dec] dir [chars] Interface [chars] enters LCK defect condition	Ethernet cfm mep has entered LCK Maintenance condition. Id refers to local mep vlan id or bridge-domain id.	ethernet-cfm	"LOG_SID_NO_ACTION"
EIHER_CFM6ENIER_LCK	6-Information	local mep with mpid [dec] level [dec] id [dec] dir [chars] Interface [chars] enters LCK defect condition	Ethernet cfm mep has entered LCK Maintenance condition. Id refers to local mep vlan id or bridge-domain id.	ethernet-cfm	"LOG_SID_NO_ACTION"
EIHER_CFM6ENIER_LCKNT	6-Information	Interface [chars] enters LCK defect condition for [chars] direction	Interface is put in OOS state through exec cli for input direction	ethernet-cfm	"LOG_SID_NO_ACTION"
EIHER_CFM6ENIER_LCKNT	6-Information	Interface [chars] enters LCK defect condition for [chars] direction	Interface is put in OOS state through exec cli for input direction	ethernet-cfm	"LOG_SID_NO_ACTION"
EIHER_CFM6ENIER_LCKNT	6-Information	Interface [chars] enters LCK defect condition for [chars] direction	Interface is put in OOS state through exec cli for input direction	ethernet-cfm	"LOG_SID_NO_ACTION"
EIHER_CFM6EXIT_AIS	6-Information	local mep with mpid [dec] level [dec] id [dec] dir [chars] Interface [chars] exited AIS defect condition	Ethernet cfm mep has exited AIS defect condition. This is due to not receiving ETH-AIS or ETH-LCK frames for expiry threshold or mep up state if LOC error happened before. Id refers to local mep vlan id or bridge-domain id.	ethernet-cfm	"LOG_SID_NO_ACTION"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EIHER_CFM6EXIT_AIS	6-Information	local mep with mpid [dec] level [dec] id [dec] dir [chars] Interface [chars] exited AIS defect condition	Ethernet cfm mep has exited AIS defect condition. This is due to not receiving ETH-AIS or ETH-LCK frames for expiry threshold or mep up state if LOC error happened before. Id refers to local mep vlan id or bridge-domain id.	ethernet-cfm	"LOG_SID_NO_ACTION"
EIHER_CFM6EXIT_AIS	6-Information	local mep with mpid [dec] level [dec] id [dec] dir [chars] Interface [chars] exited AIS defect condition	Ethernet cfm mep has exited AIS defect condition. This is due to not receiving ETH-AIS or ETH-LCK frames for expiry threshold or mep up state if LOC error happened before. Id refers to local mep vlan id or bridge-domain id.	ethernet-cfm	"LOG_SID_NO_ACTION"
EIHER_CFM6EXIT_AIS_INT	6-Information	Interface [chars] exited AIS defect condition for [chars] direction	LOG_SID_NO_ACTION	ethernet-cfm	"Interface has existed AIS defect condition. This is due to "clearing of traffic effecting condition and 802.3ah entering "in send_any operational state"
EIHER_CFM6EXIT_AIS_INT	6-Information	Interface [chars] exited AIS defect condition for [chars] direction	LOG_SID_NO_ACTION	ethernet-cfm	"Interface has existed AIS defect condition. This is due to "clearing of traffic effecting condition and 802.3ah entering "in send_any operational state"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EIHER_CFM6EXIT_AIS_NT	6-Information	Interface [chars] exited AIS defect condition for [chars] direction	LOG_SID_NO_ACTION	ethernet-cfm	"Interface has existed AIS defect condition. This is due to " "clearing of traffic effecting condition and 802.3ah entering " "in send_any operational state"
EIHER_CFM6EXIT_LCK	6-Information	local mep with mpid [dec] level [dec] id [dec] dir [chars] Interface [chars] exited LCK defect condition	Ethernet cfm mep has exited LCK Maintenance condition. Id refers to local mep vlan id or bridge-domain id.	ethernet-cfm	"LOG_SID_NO_ACTION"
EIHER_CFM6EXIT_LCK	6-Information	local mep with mpid [dec] level [dec] id [dec] dir [chars] Interface [chars] exited LCK defect condition	Ethernet cfm mep has exited LCK Maintenance condition. Id refers to local mep vlan id or bridge-domain id.	ethernet-cfm	"LOG_SID_NO_ACTION"
EIHER_CFM6EXIT_LCK	6-Information	local mep with mpid [dec] level [dec] id [dec] dir [chars] Interface [chars] exited LCK defect condition	Ethernet cfm mep has exited LCK Maintenance condition. Id refers to local mep vlan id or bridge-domain id.	ethernet-cfm	"LOG_SID_NO_ACTION"
EIHER_CFM6EXIT_LCK_NT	6-Information	Interface [chars] exited LCK defect condition for [chars] direction	Interface has exited LCK defect condition.	ethernet-cfm	"LOG_SID_NO_ACTION"
EIHER_CFM6EXIT_LCK_NT	6-Information	Interface [chars] exited LCK defect condition for [chars] direction	Interface has exited LCK defect condition.	ethernet-cfm	"LOG_SID_NO_ACTION"
EIHER_CFM6EXIT_LCK_NT	6-Information	Interface [chars] exited LCK defect condition for [chars] direction	Interface has exited LCK defect condition.	ethernet-cfm	"LOG_SID_NO_ACTION"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EIHRM#RMOEMPUP	6-Information	Continuity Check message is received from a remote MEP with mpid [dec] [chars] [chars] domain [chars] event code [chars].	A CC message is received from remote MEP which is up. Event code: New: A remote MEP first comes up that is when we receive a CC message from the remote MEP for the first time. Event code: Returning: The device receives a CC message from a MEP for which it has an expired CCDB entry. Event code: PortState: The device receives a CC message from a remote MEP for which it has a valid CCDB entry and the message indicates a port status change This message may be for a particular vlan or evc with the corresponding MAID or CSIID	ethernet-cfm	"Information message only."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EHRCEM#RMOIEM#PUP	6-Information	Continuity Check message is received from a remote MEP with mpid [dec] [chars] [chars] domain [chars] event code [chars].	A CC message is received from remote MEP which is up. Event code: New: A remote MEP first comes up that is when we receive a CC message from the remote MEP for the first time. Event code: Returning: The device receives a CC message from a MEP for which it has an expired CCDB entry. Event code: PortState: The device receives a CC message from a remote MEP for which it has a valid CCDB entry and the message indicates a port status change This message may be for a particular vlan or evc with the corresponding MAID or CSIID	ethernet-cfm	"Information message only."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EHRCM#REMDEMPUP	6-Information	Continuity Check message is received from a remote MEP with mpid [dec] [chars] [chars] domain [chars] event code [chars].	A CC message is received from remote MEP which is up. Event code: New: A remote MEP first comes up that is when we receive a CC message from the remote MEP for the first time. Event code: Returning: The device receives a CC message from a MEP for which it has an expired CCDB entry. Event code: PortState: The device receives a CC message from a remote MEP for which it has a valid CCDB entry and the message indicates a port status change This message may be for a particular vlan or evc with the corresponding MAID or CSIID	ethernet-cfm	"Information message only."
EHNRNRA#EIBUHR	2-Critical	Ether INFRA ISSU client failed to get buffer for message. Error: [dec] [chars]	The Ether INFRA HA client failed to get buffer space for building chkpt message. Message cannot be sent to standby device. If a problem occurs the standby device cannot be brought up properly.	ether-infra	"show logging and show checkpoint client"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EIHRNRAHA2CETBUHR	2-Critical	Ether INFRA ISSU client failed to get buffer for message. Error: [dec] [chars]	The Ether INFRA HA client failed to get buffer space for building chkpt message. Message cannot be sent to standby device. If a problem occurs the standby device cannot be brought up properly.	ether-infra	"show logging and show checkpoint client"
EIHER_INFRA_HA2INT	2-Critical	Ether INFRA ISSU client initialization failed to [chars]. Error: [dec] [chars]	The Ether INFRA ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	ether-infra	LOG_STD_ACTION
EIHER_INFRA_HA2INT	2-Critical	Ether INFRA ISSU client initialization failed to [chars]. Error: [dec] [chars]	The Ether INFRA ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	ether-infra	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ETHERINFRA_ISSU_NCO_AID	2-Critical	Ether INFRA ISSU client failed to send negotiation message. Error: [dec] [chars]	The Ether INFRA ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	ether-infra	"show logging and show checkpoint client"
ETHERINFRA_ISSU_NCO_AID	2-Critical	Ether INFRA ISSU client failed to send negotiation message. Error: [dec] [chars]	The Ether INFRA ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	ether-infra	"show logging and show checkpoint client"
ETHERINFRA_ISSU_NCO	2-Critical	Ether INFRA ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The Ether INFRA ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	ether-infra	"show issu session <client_id> and " "show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>EHRNRA-ISSU-NCV</del>	2-Critical	Ether INFRA ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The Ether INFRA ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	ether-infra	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>EHRNRA-ISSU-RCV</del>	2-Critical	Ether INFRA ISSU client failed to register session information. Error: [dec] [chars]	The Ether INFRA ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	ether-infra	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>EHRNRA-ISSU-RCV</del>	2-Critical	Ether INFRA ISSU client failed to register session information. Error: [dec] [chars]	The Ether INFRA ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	ether-infra	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>EHRNRA-ISSU-RCV</del>	3-Error	Ether INFRA ISSU client does not have a valid registered session.	The Ether INFRA ISSU client does not have a valid registered session.	ether-infra	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>EHRNRAHAWADSESSION</del>	3-Error	Ether INFRA ISSU client does not have a valid registered session.	The Ether INFRA ISSU client does not have a valid registered session.	ether-infra	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>EHRNRAHAWGNICK</del>	3-Error	Ether INFRA ISSU client 'Message Type [dec]' is not compatible	The Ether INFRA ISSU client received an incompatible message from the peer device. The message cannot be processed.	ether-infra	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>EHRNRAHAWGNICK</del>	3-Error	Ether INFRA ISSU client 'Message Type [dec]' is not compatible	The Ether INFRA ISSU client received an incompatible message from the peer device. The message cannot be processed.	ether-infra	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>EHRNRAHAWGNIZE</del>	3-Error	Ether INFRA ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The Ether INFRA ISSU client failed to calculate the MTU for the specified message. The Ether INFRA ISSU client will not able to send the message to the standby device.	ether-infra	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>EHRNRAHAWGNIZE</del>	3-Error	Ether INFRA ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The Ether INFRA ISSU client failed to calculate the MTU for the specified message. The Ether INFRA ISSU client will not able to send the message to the standby device.	ether-infra	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>EHRNRAHAWGNICN</del>	3-Error	Ether INFRA ISSU client failed to unregister session information. Error: [dec] [chars]	The Ether INFRA ISSU client failed to unregister session information.	ether-infra	"show issu session <client_id> and " "show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ETHERNRA_ISSU_UNREG</del>	3-Error	Ether INFRA ISSU client failed to unregister session information. Error: [dec] [chars]	The Ether INFRA ISSU client failed to unregister session information.	ether-infra	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>ETHERNRA_ISSU_TRANSFORM</del>	3-Error	Ether INFRA ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The Ether INFRA ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the Ether INFRA state between the active device and the standby device is not identical.	ether-infra	"show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>ETHERNRA_ISSU_TRANSFORM</del>	3-Error	Ether INFRA ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The Ether INFRA ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the Ether INFRA state between the active device and the standby device is not identical.	ether-infra	"show issu session <client_id> and " "show issu negotiated version <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EIHR_LMI_HA2GETBUHR	2-Critical	Ether LMI ISSU client failed to get buffer for message. Error: [dec] [chars]	The Ether LMI HA client failed to get buffer space for building chkpt message. Message cannot be sent to standby device. If a problem occurs the standby device cannot be brought up properly.	ethernet-lmi	"show logging and show checkpoint client"
EIHER_LMI_HA2INIT	2-Critical	Ether LMI ISSU client initialization failed to [chars]. Error: [dec] [chars]	The Ether LMI ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	ethernet-lmi	LOG_STD_ACTION
EIHR_LMI_ISSU_NCOAID	2-Critical	Ether LMI ISSU client failed to send negotiation message. Error: [dec] [chars]	The Ether LMI ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	ethernet-lmi	"show logging and show checkpoint client"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>EHRM_IAS</del> EHRM_IAS_NNCO	2-Critical	Ether LMI ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The Ether LMI ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	ethernet-lmi	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>EHRM_IAS</del> EHRM_IAS_NRCRY	2-Critical	Ether LMI ISSU client failed to register session information. Error: [dec] [chars]	The Ether LMI ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	ethernet-lmi	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>EHRM_IAS</del> EHRM_IAS_NADSEN	3-Error	Ether LMI ISSU client does not have a valid registered session.	The Ether LMI ISSU client does not have a valid registered session.	ethernet-lmi	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>EHRM_IAS</del> EHRM_IAS_NMGNOICK	3-Error	Ether LMI ISSU client 'Message Type [dec]' is not compatible	The Ether LMI ISSU client received an incompatible message from the peer device. The message cannot be processed.	ethernet-lmi	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EIHR_LMI_HA3MSG_SIZE	3-Error	Ether LMI ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The Ether LMI ISSU client failed to calculate the MTU for the specified message. The Ether LMI ISSU client will not be able to send the message to the standby device.	ethernet-lmi	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
EIHR_LMI_ISSU_UNREG	3-Error	Ether LMI ISSU client failed to unregister session information. Error: [dec] [chars]	The Ether LMI ISSU client failed to unregister session information.	ethernet-lmi	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
EIHR_LMI_HA3TRANSFORM	3-Error	Ether LMI ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The Ether LMI ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the Ether LMI state between the active device and the standby device is not identical.	ethernet-lmi	"show issu session <client_id> and " "show issu negotiated version <session_id>"
EIHR_MDIBALDAYSNE	3-Error	interface type [chars] slot [dec] port [dec] vc [dec] : [chars]	Data required to support the interface is not available.	asr1k-io-internal	LOGS_IDSHTTECH_ACTION
EIHR_MDIBUSPREDA	3-Error	Data conversion error [chars] 0x[hex]	An internal software error has occurred when converting the data specified in the message from one representation to another.	asr1k-io-internal	LOGS_IDSHTTECH_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>ETHERSWITCH</del>	3-Error	Unable to get bridge-domain [dec] information for EFP [dec]	The software dataplane was unable to get the bridge-domain information for the EFP.	ether-infra	"This error may be transient. If the error " "persists you may need to reload the router."
<del>ETHERSWITCH</del>	3-Error	Unable to get bridge-domain [dec] information for EFP [dec]	The software dataplane was unable to get the bridge-domain information for the EFP.	ether-infra	"This error may be transient. If the error " "persists you may need to reload the router."
<del>ETHERSWITCH</del>	3-Error	Unable to lock memory while learning C-MAC to B-MAC mapping	The Ethernet Software Platform was unable to lock a particular piece of memory while attempting to learn a C-MAC to B-MAC mapping	ether-infra	"This error may be transient. If the error " "persists you may need to reload the router."
<del>ETHERSWITCH</del>	3-Error	Unable to lock memory while learning C-MAC to B-MAC mapping	The Ethernet Software Platform was unable to lock a particular piece of memory while attempting to learn a C-MAC to B-MAC mapping	ether-infra	"This error may be transient. If the error " "persists you may need to reload the router."
<del>ETHERSWITCH</del>	3-Error	Unable to remove 802.1ah mapping entry for B-MAC [enet] C-MAC [enet].	The Ethernet Software Platform was unable to remove an 802.1ah mapping entry from the tree of entries.	ether-infra	"This error may be transient. If the error " "persists you may need to reload the router."
<del>ETHERSWITCH</del>	3-Error	Unable to remove 802.1ah mapping entry for B-MAC [enet] C-MAC [enet].	The Ethernet Software Platform was unable to remove an 802.1ah mapping entry from the tree of entries.	ether-infra	"This error may be transient. If the error " "persists you may need to reload the router."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HEPACM/3/ERR/ENQ</del>	3-Error	Unable to enqueue a request to learn a C-MAC to B-MAC mapping	An error occurred while trying to enqueue a request to learn a C-MAC to B-MAC mapping.	ether-infra	"This error may be transient. If the error " "persists you may need to reload the router."
<del>HEPACM/3/ERR/ENQ</del>	3-Error	Unable to enqueue a request to learn a C-MAC to B-MAC mapping	An error occurred while trying to enqueue a request to learn a C-MAC to B-MAC mapping.	ether-infra	"This error may be transient. If the error " "persists you may need to reload the router."
<del>HEPACM/3/ERR/CLR</del>	3-Error	Unable to clear EFP's encapsulation data	An error occurred while trying to clear the encapsulation data for an EFP.	ether-infra	"Enable debugging with 'debug ethernet service " "instate'. Retry the operation that caused the " "error to see if additional debugging messages " "are provided. If the error persists you may need " "to reload the router."
<del>HEPACM/3/ERR/CLR</del>	3-Error	Unable to clear EFP's encapsulation data	An error occurred while trying to clear the encapsulation data for an EFP.	ether-infra	"Enable debugging with 'debug ethernet service " "instate'. Retry the operation that caused the " "error to see if additional debugging messages " "are provided. If the error persists you may need " "to reload the router."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>EFP_PLATFORM_SWNOEFP</del>	3-Error	Unable to find software platform EFP information for EFP ID [dec]	The software dataplane was unable to get the platform dependent EFP information for the EFP with the given ID.	ether-infra	"This error may indicate a bug in the software " "dataplane implementation. If the error " "occurs after a specific configuration was performed " "then precisely record those configuration steps. " "Contact your Cisco technical support " "representative and provide the gathered " "information."
<del>EFP_PLATFORM_SWNOEFP</del>	3-Error	Unable to find software platform EFP information for EFP ID [dec]	The software dataplane was unable to get the platform dependent EFP information for the EFP with the given ID.	ether-infra	"This error may indicate a bug in the software " "dataplane implementation. If the error " "occurs after a specific configuration was performed " "then precisely record those configuration steps. " "Contact your Cisco technical support " "representative and provide the gathered " "information."
<del>EFP_PACKET_REWRITE</del>	3-Error	Unable to apply rewrite to packet	An error occurred while trying to perform an ingress rewrite operation on a frame.	ether-infra	"This error may be transient. If the error " "persists you may need to reload the router."
<del>EFP_PACKET_REWRITE</del>	3-Error	Unable to apply rewrite to packet	An error occurred while trying to perform an ingress rewrite operation on a frame.	ether-infra	"This error may be transient. If the error " "persists you may need to reload the router."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>ETHERINFRA</del>	3-Error	IPC send response error [chars]	An error was detected in the response for an IPC message that was transmitted to the peer.	ether-infra	"This error could be transient. If this error persists " "copy the error message exactly as it appears " "and report it to your technical support representative."
<del>ETHERINFRA</del>	3-Error	IPC send response error [chars]	An error was detected in the response for an IPC message that was transmitted to the peer.	ether-infra	"This error could be transient. If this error persists " "copy the error message exactly as it appears " "and report it to your technical support representative."
<del>ETHERINFRA</del>	3-Error	IPC message transmission failure [chars]	An error was detected when transmitting an IPC message between Standby RP and SP. The failure most likely occurred because of a software error. The message output identifies the type of error that occurred.	ether-infra	"This could be a transient error. If this error persists " "copy the error message exactly as it appears and report it " "to your technical support representative."
<del>ETHERINFRA</del>	3-Error	IPC message transmission failure [chars]	An error was detected when transmitting an IPC message between Standby RP and SP. The failure most likely occurred because of a software error. The message output identifies the type of error that occurred.	ether-infra	"This could be a transient error. If this error persists " "copy the error message exactly as it appears and report it " "to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>ETHERSVCIPCRICRAE</del>	3-Error	Unable to create IPC port [chars].	Ethernet Service was unable to create an IPC port	ether-infra	"Copy the error message exactly as it appears and " "report it to your technical support representative."
<del>ETHERSVCIPCRICRAE</del>	3-Error	Unable to create IPC port [chars].	Ethernet Service was unable to create an IPC port	ether-infra	"Copy the error message exactly as it appears and " "report it to your technical support representative."
<del>ETHERSVCIPCRICRER</del>	3-Error	Unable to register IPC port [chars].	Ethernet Service was unable to register an IPC port	ether-infra	"Copy the error message exactly as it appears and " "report it to your technical support representative."
<del>ETHERSVCIPCRICRER</del>	3-Error	Unable to register IPC port [chars].	Ethernet Service was unable to register an IPC port	ether-infra	"Copy the error message exactly as it appears and " "report it to your technical support representative."
<del>ETHERSVCIPCRIRMOE</del>	3-Error	Unable to remove IPC port [chars].	Ethernet Service was unable to remove an IPC port	ether-infra	"Copy the error message exactly as it appears and " "report it to your technical support representative."
<del>ETHERSVCIPCRIRMOE</del>	3-Error	Unable to remove IPC port [chars].	Ethernet Service was unable to remove an IPC port	ether-infra	"Copy the error message exactly as it appears and " "report it to your technical support representative."
<del>ETHERSVCIPCRIRPSES</del>	3-Error	Unable to create IPC processes on [chars].	Ethernet Service was unable to create IPC processes	ether-infra	"Copy the error message exactly as it appears and " "report it to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>EHRSMCEIPROCESS</del>	3-Error	Unable to create IPC processes on [chars].	Ethernet Service was unable to create IPC processes	ether-infra	"Copy the error message exactly as it appears and "report it to your technical support representative."
<del>EHRSMCEIPSESSN</del>	3-Error	Unable to open an IPC session for communicating with [chars]. Error: [chars]	This is an internal error	ether-infra	"Copy the error message exactly as it appears and report it to your" " technical support representative."
<del>EHRSMCEIPSESSN</del>	3-Error	Unable to open an IPC session for communicating with [chars]. Error: [chars]	This is an internal error	ether-infra	"Copy the error message exactly as it appears and report it to your" " technical support representative."
<del>EHRSMCEIPNODEC</del>	3-Error	Unable to allocate IPC descriptor for Ethernet Service on [chars].	This is an internal error	ether-infra	"Copy the error message exactly as it appears and report it to your" " technical support representative."
<del>EHRSMCEIPNODEC</del>	3-Error	Unable to allocate IPC descriptor for Ethernet Service on [chars].	This is an internal error	ether-infra	"Copy the error message exactly as it appears and report it to your" " technical support representative."
<del>EHRSMCEIPNOMM</del>	3-Error	Unable to allocate memory for Ethernet Service on [chars].	This is an internal error	ether-infra	"Copy the error message exactly as it appears and report it to your" " technical support representative."
<del>EHRSMCEIPNOMM</del>	3-Error	Unable to allocate memory for Ethernet Service on [chars].	This is an internal error	ether-infra	"Copy the error message exactly as it appears and report it to your" " technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>EIHR_SMCERGM_CUBCK</del>	3-Error	Ethernet Infra encountered an error while processing a callback from the Resource Manager RMI [chars]	Ethernet Infra registers with the Resource Manager RMI to	ether-infra	"show tech"
<del>EIHR_SMCERGM_CUBCK</del>	3-Error	Ethernet Infra encountered an error while processing a callback from the Resource Manager RMI [chars]	Ethernet Infra registers with the Resource Manager RMI to	ether-infra	"show tech"
<del>EIHR_SMCERGM_AID</del>	3-Error	Ethernet Infra failed to register with the Resource Manager RMI [chars]	Ethernet Infra registers with the Resource Manager RMI to	ether-infra	"show tech"
<del>EIHR_SMCERGM_AID</del>	3-Error	Ethernet Infra failed to register with the Resource Manager RMI [chars]	Ethernet Infra registers with the Resource Manager RMI to	ether-infra	"show tech"
<del>EIHR_SMCERGM_NORDAA</del>	4-Warning	IPC Message has no data area [chars]	Cannot find data area in an IPC message. This is a warning message no action is required	ether-infra	"Copy the error message exactly as it appears and " "report it to your technical support representative."
<del>EIHR_SMCERGM_NORDAA</del>	4-Warning	IPC Message has no data area [chars]	Cannot find data area in an IPC message. This is a warning message no action is required	ether-infra	"Copy the error message exactly as it appears and " "report it to your technical support representative."
<del>EIHR_SMCERGM_NORORI</del>	4-Warning	IPC port is NULL [chars]	Ethernet Service cannot send the message as the IPC port information is NULL. This is a warning message no action is required.	ether-infra	"Copy the error message exactly as it appears and " "report it to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>EHRSMCEIPNADME</del>	4-Warning	IPC port is NULL [chars]	Ethernet Service cannot send the message as the IPC port information is NULL. This is a warning message no action is required.	ether-infra	"Copy the error message exactly as it appears and " "report it to your technical support representative."
<del>EHRSMCEIPNADME</del>	4-Warning	Message is NULL [chars]	Cannot send the message as the message is NULL. This is a warning message no action is required	ether-infra	"Copy the error message exactly as it appears and " "report it to your technical support representative."
<del>EHRSMCEIPNADME</del>	4-Warning	Message is NULL [chars]	Cannot send the message as the message is NULL. This is a warning message no action is required	ether-infra	"Copy the error message exactly as it appears and " "report it to your technical support representative."
<del>EHRSMCEIPNADME</del>	3-Error	The Ether Infra Trace and Debug Library Failed to initialize successfully due to error: %u	All trace and debug may not work	ether-infra	"No Action"
<del>EHRSMCEIPNADME</del>	3-Error	The Ether Infra Trace and Debug Library Failed to initialize successfully due to error: %u	All trace and debug may not work	ether-infra	"No Action"
<del>EHRSMCEIPNADME</del>	3-Error	[chars] : [chars] is INVALID	invalid type	ether-infra	"Copy the error and send it to TAC"
<del>EHRSMCEIPNADME</del>	3-Error	[chars] : [chars] is INVALID	invalid type	ether-infra	"Copy the error and send it to TAC"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<b>ETHERSMC3IPNOMEMORY</b>	3-Error	[chars] : memory allocation failed for [chars]	memory allocation failed	ether-infra	"'show proc mem' or 'show buffs' to check if memory \n\or buffer is full. shutdown unused tasks or reset cards usually can recover \n\those memory leak problem. Copy the error and send it to TAC if those actions \n\does not help."
<b>ETHERSMC3IPNOMEMORY</b>	3-Error	[chars] : memory allocation failed for [chars]	memory allocation failed	ether-infra	"'show proc mem' or 'show buffs' to check if memory \n\or buffer is full. shutdown unused tasks or reset cards usually can recover \n\those memory leak problem. Copy the error and send it to TAC if those actions \n\does not help."
<b>ETHERSMC3IPNULLPNER</b>	3-Error	[chars] : [chars] pointer is NULL	NULL pointer	ether-infra	"Copy the error and send it to TAC"
<b>ETHERSMC3IPNULLPNER</b>	3-Error	[chars] : [chars] pointer is NULL	NULL pointer	ether-infra	"Copy the error and send it to TAC"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ETHERINFRA</del>	3-Error	[chars] service policy [chars] has been removed from service instance [dec] of ethernet channel [chars] due to failure to install the policy on member link [chars].	The member link does not support the service policy or installation failed due to resources limitation at the time.	ether-infra	"Check for any error message that indicates incompatibility between " "the policy and the member link. Remove the member link from the " "ethernet channel and reconfigure the policy on the service instance. " "If the problem persists copy the error exactly as it appears and " "report it to your technical support representative."
<del>ETHERINFRA</del>	3-Error	[chars] service policy [chars] has been removed from service instance [dec] of ethernet channel [chars] due to failure to install the policy on member link [chars].	The member link does not support the service policy or installation failed due to resources limitation at the time.	ether-infra	"Check for any error message that indicates incompatibility between " "the policy and the member link. Remove the member link from the " "ethernet channel and reconfigure the policy on the service instance. " "If the problem persists copy the error exactly as it appears and " "report it to your technical support representative."
<del>ETHERINFRA</del>	4-Warning	[node]Not supported since \no ethernet mac-flush notification mirp\ command is configured.	\no ethernet mac-flush notification mirp\ is configured.	ether-infra	"Configure \"ethernet mac-flush notification mirp\" command."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>EIHR_SMCNUPREVE</del>	4-Warning	[node]Not supported since \no ethernet mac-flush notification mirp\ command is configured.	\no ethernet mac-flush notification mirp\ is configured.	ether-infra	"Configure \"ethernet mac-flush notification mirp\" command."
<del>EIHR_SMCERRDABED</del>	6-Information	[chars] - shutdown service instance [dec] at [chars]	Service instance shutdown due to errdisable	ether-infra	"No Action"
<del>EIHR_SMCERRDABED</del>	6-Information	[chars] - shutdown service instance [dec] at [chars]	Service instance shutdown due to errdisable	ether-infra	"No Action"
<del>EIHR_SMCVCSAUCNED</del>	6-Information	status of [chars] changed to [chars]	EVC status has changed	ether-infra	"No Action"
<del>EIHR_SMCVCSAUCNED</del>	6-Information	status of [chars] changed to [chars]	EVC status has changed	ether-infra	"No Action"
<del>EIHR_SMCVLANCONEED</del>	6-Information	VLANs [chars] not configured at [chars] but is in a CEVLAN/EVC map	VLANs part of the CEVLAN/EVC map for an EVC associated to an interface but the interface doesn't have those VLANs configured	ether-infra	"Verify configurations of VLANs on the interface"
<del>EIHR_SMCVLANCONEED</del>	6-Information	VLANs [chars] not configured at [chars] but is in a CEVLAN/EVC map	VLANs part of the CEVLAN/EVC map for an EVC associated to an interface but the interface doesn't have those VLANs configured	ether-infra	"Verify configurations of VLANs on the interface"
<del>EIHR_SMCVSHUTDOWN</del>	6-Information	Service instance [dec] on interface [chars] changed to [chars]	Service instance shutdown due to errdisable	ether-infra	"No Action"
<del>EIHR_SMCVSHUTDOWN</del>	6-Information	Service instance [dec] on interface [chars] changed to [chars]	Service instance shutdown due to errdisable	ether-infra	"No Action"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ETHERCHANNEL3-ERR	3-Error	The load-balance message [dec] has failed to send	The load-balancing feature has detected an error while trying to send an internal message.	ether-channel	"If this message was the result of performing a " "configuration command then try unconfiguring " "and reconfiguring the same command. If the error " "message continues to be displayed then it may " "indicate that the system is low on memory. The " "show memory free command should be used to check " "if the system has sufficient available memory. " "If the system appears to have available memory and " "the error continues to be displayed then please " "contact your Cisco technical support representative " "and provide the representative with the exact error " "message being seen as well as the version of IOS " "being used."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ETHERCHANNEL_SMTA</del>	3-Error	Failed to transmit XDR message of size [dec] to slot [dec]	An error occurred while attempting to send a load-balancing XDR message to the specified slot.	ether-channel	"Because the message failed to send the specified " "slot may now be out of sync with the rest of the " "system. To correct the issue the card in the " "specified slot may be rebooted at which point " "the full configuration will be re-synced with the " "card in that slot. If the specified slot is zero " "then that message was intended for cards in all " "slots and the router should be reloaded to re-sync" "the entire system."
<del>ETHERCHANNEL</del>	2-Critical	QFP Etherchannel Proxy IPC interface initialization failure result: [dec].	Cisco internal software error. QFP Etherchannel initialization detected that the Proxy IPC interface initialization failed. The EC Bundle interfaces will not be functional while this condition exists.	qfp-ethernetkeyword:gec	LOG_STD_ACTION
<del>ETHERCHANNEL_PROXY_MG</del>	3-Error	QFP ETHERCHANNEL Proxy received invalid Message ID [dec]	Cisco internal software error. QFP Etherchannel Proxy received an invalid Message ID. This message will be ignored.	qfp-ethernetkeyword:gec	LOG_STD_ACTION
<del>ETHERCHANNEL_LOCK_ERRR</del>	3-Error	QFP EC Lock Failure: retval:[dec] tries[dec]	Cisco internal software error. QFP EC Lock Failure locking attempt failed	qfp-ethernetkeyword:gec	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ETHERCHANNEL</del> ETHERCHANNEL_FAILURE	3-Error	QFP EC Lock State Failure: retval:[dec]	Cisco internal software error. QFP EC Lock State Failure Illegal lock state	qfp-ethernetkeyword:gec	LOG_STD_ACTION
<del>ETHERCHANNEL</del> ETHERCHANNEL_PROXY_LOST	3-Error	QFP ETHERCHANNEL Proxy [chars] response lost due to buffer allocation	Cisco internal software error. QFP ETHERCHANNEL Proxy message processing detected a IPC buffer allocation failure during response processing. The associated ETHERCHANNEL interface may not be fully functional as a result of this condition.	qfp-ethernetkeyword:gec	LOG_STD_ACTION
<del>ETHERCHANNEL</del> ETHERCHANNEL_PROXY_LOCK	3-Error	QFP EC Proxy [chars] SID Update Complete w/o Preceding Lock	Cisco internal software error. QFP EC Proxy message processing detected a Bundle Schedule SID update sequence error. One or more interface schedules could have been affected.	qfp-ethernetkeyword:gec	LOG_STD_ACTION
<del>ETHERCHANNEL</del> ETHERCHANNEL_PROXY_LOCK	3-Error	QFP EC Proxy [chars] Multiple SID Update Locks to same interface	Cisco internal software error. QFP EC Proxy message processing detected a Bundle Schedule SID update sequence error. One or more interface schedules could have been affected.	qfp-ethernetkeyword:gec	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HHHHHMMWVCFNE	4-Warning	Available microwave bandwidth for link with source MAC [chars] link ID [node] on [chars] has changed due to [chars] current is [dec]Mbps nominal is [dec]Mbps.	The available microwave bandwidth has changed. The message indicates the reason why the bandwidth changed as well as the currently available bandwidth. If the message indicates that the change was due to VSM then an ITU-T Y.1731 Vendor-Specific Message has been received causing the available microwave bandwidth to be updated. If the message indicates that the change was due to periodic timeout then the local system has not received a VSM within the expected time period and so it has reset the bandwidth back to its nominal value. The current bandwidth represents the bandwidth currently available on the link while the nominal bandwidth represents the maximum bandwidth supported by the link when the microwave signal is not degraded.	ethernet-cfm	"If the current bandwidth is unexpectedly less than " "the nominal bandwidth then action may be required " "to restore the microwave bandwidth to its fully " "supported capacity."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ETHERNET-MW-BW-CFM	4-Warning	Available microwave bandwidth for link with source MAC [chars] link ID [node] on [chars] has changed due to [chars] current is [dec]Mbps nominal is [dec]Mbps.	The available microwave bandwidth has changed. The message indicates the reason why the bandwidth changed as well as the currently available bandwidth. If the message indicates that the change was due to VSM then an ITU-T Y.1731 Vendor-Specific Message has been received causing the available microwave bandwidth to be updated. If the message indicates that the change was due to periodic timeout then the local system has not received a VSM within the expected time period and so it has reset the bandwidth back to its nominal value. The current bandwidth represents the bandwidth currently available on the link while the nominal bandwidth represents the maximum bandwidth supported by the link when the microwave signal is not degraded.	ethernet-cfm	"If the current bandwidth is unexpectedly less than " "the nominal bandwidth then action may be required " "to restore the microwave bandwidth to its fully " "supported capacity."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ETHERNET_LACP_ISS_NOMEMORY	1-Alert	msgtxt_nomemory	The requested operation could not be accomplished because of a low memory condition.	lACP	"Reduce other system activity to ease memory demands. If conditions " "warrant upgrade to a larger memory configuration."
ETHERNET_LACP_ISS_SEND	3-Error	\nLACP ISSU: send message failed rc = [dec]\n	The sending of a message has failed. This is an informational message only.	lACP	LOG_SIDSHTTECH_ACTION
ETHERNET_LACP_ISS_COMPAT	4-Warning	\nlACP-issu-compat: returned FALSE	The ISSU compatibility matrix check has failed. This is an informational message only.	lACP	LOG_SIDSHTTECH_ACTION
ETHERNET_LACP_ISS_TRANSFORM	4-Warning	\n[chars]: failed rc=[chars]	The ISSU transform has failed. This is an informational message only.	lACP	LOG_SIDSHTTECH_ACTION
ETHERNET_LACP_ISS_BUNDLE	4-Warning	\nLACP HA: Unable to initiate checkpoint bundle mode.\n	LACP is unable to initialize checkpoint bundle mode. This is an informational message only.	lACP	LOG_SIDSHTTECH_ACTION
ETHERNET_LACP_ISS_CLIENT	4-Warning	\nLACP HA: Unable to initiate RF client.\n	LACP is unable to initialize as a RF client. This is an informational message only.	lACP	LOG_SIDSHTTECH_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ERRMABCPVXKOME</del>	3-Error	Peer ICCP version [dec] is incompatible with local ICCP version [dec].	mLACP peer is running with a different version of ICCP. Incompatible ICCP would prevent mLACP from working properly.	lacp	"Reboot peer with identical IOS version would " "correct the issue. Compatible ICCP version between " "different IOS images can still be achieved by doing " "show lacp multichassis group on the both devices to " "check if ICCP versions are compatible. If ICCP " "versions are incompatible repeat IOS image loading " " and CLI above until a compatible image is loaded."
<del>ERRMABSCDJD</del>	3-Error	Remote mLACP peer has duplicate mLACP node-id [dec]	A remote mLACP peer is configured with the same mLACP node-id as this device.	lacp	"Reconfigure the mLACP node-id to be unique between the two " "devices with the <CmdBold>mlacp node-id<NoCmdBold> configuration " "command. Refer to the mLACP configuration section of the Cisco " "IOS documentation for more information on configuring mLACP."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ERR_MLACP_CNFLD	3-Error	Received invalid mLACP node-id [dec] from peer	A remote mLACP peer is configured with an invalid mLACP node-id.	lACP	"Reconfigure the peer to send a valid mLACP node-id with the " "<CmdBold>mLACP node-id<NoCmdBold> configuration command. Refer " "to the mLACP configuration section of the Cisco IOS documentation " "for more information on configuring mLACP."
ERR_MLACP_CNFLD	4-Warning	mLACP has recovered from a core isolation failure. Attempting to recover [dec] LAGs in redundancy group %u	mLACP has recovered from core isolation and has attempted to recover the LAGs in the redundancy group.	lACP	"This message may not require any action. However the " "<CmdBold>show lACP multi-chassis group<NoCmdBold> and " "<CmdBold>show lACP multi-chassis port-channel<NoCmdBold> commands " "may be used to verify the state of the mLACP port-channels. Reference " "the mLACP section of the IOS documentation for details on core isolation " "failures and related configuration commands."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EHRM-LACP-CORE-ADN	4-Warning	mLACP Core isolation failure: Attempting to failover [dec] LAGs in redundancy group %u	mLACP has detected isolation from the core and has attempted to failover.	lACP	"Use the <CmdBold>show interchassis redundancy</CmdBold> command to determine " "which core facing interface has triggered the isolation failure. Correct the " "failure for the given interface this will clear the mLACP core isolation " "failure. Reference the mLACP section of the IOS documentation for more " "information on core isolation failures and related configuration commands."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ERRM/CM/ERR/BDEN	4-Warning	Received an mLACP TLV with bad length [dec] total message length [dec]	The mLACP TLV length is longer than the total message length.	lACP	<p>"Issue the &lt;CmdBold&gt;show version&lt;NoCmdBold&gt; command on the local and remote " "devices to get the versions of IOS that are running. Reference the mLACP section " "of the IOS documentation to verify that mLACP is compatible between the IOS " "versions on the two devices. If the versions are compatible and the message still " "appears then please contact your Cisco technical support representative. Provide " "the representative with the exact message being seen as well as the output of the " "following commands</p> <pre> &lt;CmdBold&gt;show version&lt;NoCmdBold&gt; &lt;CmdBold&gt;show run&lt;NoCmdBold&gt; " " &lt;CmdBold&gt;show lacp multi-chassis group&lt;NoCmdBold&gt; and &lt;CmdBold&gt;show lacp " "multi-chassis port name&lt;NoCmdBold&gt;." </pre>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HRNMAORDEHYOHRN</del>	4-Warning	Received an mLACP TLV without a type and/or length field [dec]	mLACP received an improperly formatted TLV from the peer. As a result the local and peer devices may have mismatched state data.	lACP	"Issue the <CmdBold>show version<NoCmdBold> command on the local and remote " "devices to get the versions of IOS that are running. Reference the mLACP " "section of the IOS documentation to verify that mLACP is compatible between " "the IOS versions on the two devices. If the versions are compatible and the " "message still appears then please contact your Cisco technical support " "representative and provide the representative with the exact error message " "being seen as well as the versions of IOS from both devices."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EHEM LACP MDCS RCV E	4-Warning	Received rejected mLACP TLV from peer with message ID [dec]	A remote mLACP peer has rejected an mLACP TLV.	lACP	<p>"Issue the &lt;CmdBold&gt;show version&lt;/NoCmdBold&gt; command on the local and remote " "devices to get the versions of IOS that are running. Reference the mLACP " "section of the IOS documentation to verify that mLACP is compatible between " "the IOS versions on the two devices. If the versions are compatible and the " "message still appears then please contact your Cisco technical support " "representative and provide the representative with the exact error message " "being seen as well as the versions of IOS from both devices."</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EHRNETM_LACP_CHANGE	4-Warning	mLACP [chars] status changed to [chars]	A mLACP port-channel state change event has occurred. This might have been caused by a mLACP failure or recovery event on the local or peer POA in the same redundancy group. It is normal to get these messages during provisioning and administrative actions on the mLACP port-channel.	lACP	"User should debug further to analyze root cause of the event. Use " "<CmdBold>show redundancy interchassis<NoCmdBold> " "<CmdBold>show lACP multi-chassis port-channel<NoCmdBold> " "<CmdBold>show lACP multi-chassis group<NoCmdBold> and " "<CmdBold>show lACP internal<NoCmdBold> on both POAs to check " "mLACP port-channel health. If any failure exists appropriate " "actions should be taken to recover port-channel from failure. " "If failure persists then please contact your Cisco technical " "support representative and provide the collected information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ERRM/MA/ERR/CONNECT	4-Warning	An mLACP peer has disconnected from redundancy group [node]attempting to reconnect	mLACP has detected that a peer device from the specified redundancy group has disconnected. mLACP will attempt to reconnect to the device until successful.	lACP	"This message is typically caused by a configuration event on the peer router and " "so no action may be necessary. However if this message is unexpected then issue " "the <CmdBold>show redundancy interchassis</CmdBold> command on both the local and " "peer mLACP devices to determine which peer member IP has lost communication. Use this " "information to further debug the network communication issue and re-enable communication " "with the peer. Reference the mLACP section of the IOS documentation for more information " "on peer down failures."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EHRNETM_LACP_PEER_DOWN	4-Warning	mLACP Peer down failure: Attempting to make [dec] local LAGs active in redundancy group %u	mLACP has detected a peer down failure and has attempted to make the local port-channels become active.	lACP	"The peer down failure should be corrected by re-enabling communication " "with the peer mLACP device. Use the <CmdBold>show redundancy interchassis<NoCmdBold> " "command on both the local and peer mLACP devices to determine which peer member IP " "has lost communication. Use this information to further debug the network communication " "issue and re-enable communication with the peer. Reference the mLACP section of the IOS " "documentation for more information on peer down failures."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>ERRMABRCONC14D</del>	4-Warning	The attempt to reconnect to the peer in redundancy group [node]has failed	After an mLACP peer device disconnected an attempt was made to reconnect however that attempt has failed.	lACP	

Fault-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
					<p>"To reinitialize the connection unconfigure &lt;CmdBold&gt;mlacp interchassis group&lt;NoCmdBold&gt; " "from the port-channel and then reconfigure it. After doing that issue "</p> <p>"&lt;CmdBold&gt;show redundancy interchassis&lt;NoCmdBold&gt; to get the peer member IP "</p> <p>"connection status and the mLACP connection state. If the peer member IP " "connection status is not CONNECTED then there is a more basic communication " "issue that needs to be fixed. Otherwise if the peer member IP is CONNECTED but " "the mLACP state is not CONNECTED then there could be a software issue. In that " "case collect the output of &lt;CmdBold&gt;show redundancy interchassis&lt;NoCmdBold&gt; " "&lt;CmdBold&gt;show lacp multi-chassis group&lt;NoCmdBold&gt; and "</p> <p>"&lt;CmdBold&gt;show lacp multi-chassis port-channel&lt;NoCmdBold&gt;. Then please contact your " "Cisco technical support representative and</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
					provide the collected information."
EIHERNET_MLACP_PEER_UP	4-Warning	mLACP has recovered from a peer down failure in redundancy group %u	mLACP is now in communication with the peer device and has recovered from a previous peer down failure.	lACP	"This message may not require any action. However the " <code>&lt;CmdBold&gt;show lACP multi-chassis group&lt;NoCmdBold&gt;</code> " and " <code>&lt;CmdBold&gt;show lACP multi-chassis port-channel&lt;NoCmdBold&gt;</code> " commands may be used " "to verify the state of the mLACP port-channels. Reference the mLACP section " "of the IOS documentation for details on peer down failures and related " "configuration commands."
EIHERNET_MLACP_PEER_CONNECTED	6-Information	mLACP peer is now connected in redundancy group %u	This message indicates that the local mLACP device is now connected to a peer device in the specified redundancy group.	lACP	"No action is required. To view the peer information the command " <code>&lt;CmdBold&gt;show lACP multi-chassis port-channel&lt;NoCmdBold&gt;</code> " or " <code>&lt;CmdBold&gt;show lACP multi-chassis group&lt;NoCmdBold&gt;</code> " may be issued."
EIHERNET_OAM_CRITICAL	2-Critical	The Ethernet OAM protocol has encountered the critical error: [chars].	The protocol has run into a critical error. The reason should be given in the brackets.	ether-oam	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ETHERNET_OAM4ETB_HHR</del>	2-Critical	ETHERNET OAM ISSU client failed to get buffer for message. Error: [dec] [chars]	The ETHERNET OAM ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	ether-oam	"show logging and show checkpoint client"
ETHERNET_OAM2INIT	2-Critical	ETHERNET OAM ISSU client initialization failed to [chars]. Error: [dec] [chars]	The ETHERNET OAM ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	ether-oam	LOG_STD_ACTION
<del>ETHERNET_OAM2NC_OAD</del>	2-Critical	ETHERNET OAM ISSU client failed to send negotiation message. Error: [dec] [chars]	The ETHERNET OAM ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	ether-oam	"show logging and show checkpoint client"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ETHERNET OAM ISSU_NGO</del>	2-Critical	ETHERNET OAM ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The ETHERNET OAM ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	ether-oam	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>ETHERNET OAM ISSU_NCRV</del>	2-Critical	ETHERNET OAM ISSU client failed to register session information. Error: [dec] [chars]	The ETHERNET OAM ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	ether-oam	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>ETHERNET OAM ISSU_NDSSN</del>	3-Error	ETHERNET OAM ISSU client does not have a valid registered session.	The ETHERNET OAM ISSU client does not have a valid registered session.	ether-oam	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>ETHERNET OAM LOOPBACK_ERR</del>	3-Error	Loopback operation on interface [chars] has encountered an error[chars].	Because of the specified error the loopback operation has ended abnormally.	ether-oam	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ETHERNET_OAM_MSG_SIZE</del>	3-Error	ETHERNET OAM ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The ETHERNET OAM ISSU client failed to calculate the MTU for the specified message. The ETHERNET OAM ISSU client is not able to send the message to the standby device.	ether-oam	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>ETHERNET_OAM_SESSION_REGISTER</del>	3-Error	ETHERNET OAM ISSU client failed to unregister session information. Error: [dec] [chars]	The ETHERNET OAM ISSU client failed to unregister session information.	ether-oam	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>ETHERNET_OAM_TRANSFORM</del>	3-Error	ETHERNET OAM ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The ETHERNET OAM ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the ETHERNET OAM state between the active device and the standby device is not identical.	ether-oam	"show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>ETHERNET_OAM_COMPATIBLE</del>	4-Warning	\nether_oam-issu-compatible returned FALSE	The compatibility checking has failed	ether-oam	LOG_SID_SHI_TECH_ACTION
<del>ETHERNET_OAM_EVENT_IV</del>	5-Notice	[chars] is received from the remote client on interface [chars].	An Event TLV is received from the remote OAM client. It must have detected errors in receiving frames from this local interface.	ether-oam	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>ETHER-OAM</del> <del>LINK-MONITOR</del>	5-Notice	[chars] detected over the last [chars] on interface [chars].	A monitored error has been detected to have crossed the user-specified threshold.	ether-oam	LOG_SID_NO_ACTION
<del>ETHER-OAM</del> <del>CRITICAL-EVENT</del>	6-Information	The client on interface [chars] has received a Critical Event indication from its remote peer action = [chars]	An OAMPDU has been received from the remote client that indicates a Critical Event has occurred. The indicated action will be performed. If the action is error-block the link will go into error-block state where data traffic is blocked but link-oam can still be exchanged. If the action is error-disable the link is brought down.	ether-oam	"Investigate the issue on the remote peer"
<del>ETHER-OAM</del> <del>CRITICAL-EVENT-CLEAR</del>	6-Information	The client on interface [chars] has received a clear of the Critical Event indication from its remote peer action = [chars]	An OAMPDU has been received from the remote client that indicates that the Critical Event condition previously seen has cleared. If the action was error-block traffic on the link will now be re-enabled. Error-disable state can only be cleared by performing a shut/no shut of the interface.	ether-oam	LOG_SID_NO_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>EETHER-OAM-DYING-GASP</del>	6-Information	The client on interface [chars] has received a Dying Gasp indication from its remote peer failure reason = [chars] action = [chars]	An OAMPDU has been received from the remote client that indicates a Dying Gasp which may signal that the remote client is about to go down. The indicated action will be performed. If the action is error-block the link will go into error-block state where data traffic is blocked but link-oam can still be exchanged. If the action is error-disable the link is brought down.	ether-oam	"Investigate the issue on the remote peer"
<del>EETHER-OAM-CLEAR</del>	6-Information	The client on interface [chars] has received a clear of the Dying Gasp indication from its remote peer action = [chars]	An OAMPDU has been received from the remote client that indicates that the Dying Gasp condition previously seen has cleared. If the action was error-block traffic on the link will now be re-enabled. Error-disable state can only be cleared by performing a shut/no shut of the interface.	ether-oam	LOG_SID_NO_ACTION
<del>EETHER-OAM-SESSION</del>	6-Information	The client on interface [chars] has entered the OAM session.	Ethernet OAM client on the specified interface has detected a remote client and has entered the OAM session.	ether-oam	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>EETHERNETOAMSESSION</del>	6-Information	The client on interface [chars] has left the OAM session.	Ethernet OAM client on the specified interface has experienced some state change.	ether-oam	LOG_SID_NO_ACTION
<del>EETHERNETOAMLINKFAULT</del>	6-Information	The client on interface [chars] has received a Link Fault indication from its remote peer action = [chars]	An OAMPDU has been received from the remote client that indicates a Link Fault has been detected. This indicates a fault has occurred in the receive direction of the sending client. The indicated action will be performed. If the action is error-block the link will go into error-block state where data traffic is blocked but link-oam can still be exchanged. If the action is error-disable the link is brought down.	ether-oam	"Check the wiring between the two interfaces."
<del>EETHERNETOAMLINKCLEAR</del>	6-Information	The client on interface [chars] has received a clear of the Link Fault indication from its remote peer action = [chars]	An OAMPDU has been received from the remote client that indicates that the Link Fault condition previously seen has cleared. If the action was error-block traffic on the link will now be re-enabled. Error-disable state can only be cleared by performing a shut/no shut of the interface.	ether-oam	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EETHER-OAM/INFORM/TKTIMEOUT	6-Information	The client on interface [chars] has timed out and exited the OAM session.	The Ethernet OAM client on the specified interface has not received any OAMPDUs in the number of seconds for timeout that were configured by the user. The client has exited the OAM session.	ether-oam	LOG_SID_NO_ACTION
EETHER-OAM/INFORM/TKLOOPBACK	6-Information	Interface [chars] has [chars] the [chars] loopback mode.	The specified interface has entered or exited loopback mode because of protocol control or an external event such as the interface link going down.	ether-oam	LOG_SID_NO_ACTION
EETHER-OAM/ERROR/TKMISMATCH	3-Error	Peer ICCP version [dec] is incompatible with local ICCP version [dec].	P-mLACP peer is running with a different version of ICCP. Incompatible ICCP would prevent P-mLACP from working properly.	lACP	"Reboot peer with identical IOS version would " "correct the issue. Compatible ICCP version between " "different IOS images can still be achieved by doing " "show lACP multichassis load-balance group on the both" " devices to check if ICCP versions are compatible. If ICCP " "versions are incompatible repeat IOS image loading " " and CLI above until a compatible image is loaded."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ERR</del> PMACSCDID	3-Error	Remote P-mLACP peer has duplicate P-mLACP node-id [dec]	A remote P-mLACP peer is configured with the same P-mLACP node-id as this device.	lACP	"Reconfigure the P-mLACP node-id to be unique between the two " "devices with the <CmdBold>mLACP node-id<NoCmdBold> configuration " "command. Refer to the P-mLACP configuration section of the Cisco " "IOS documentation for more information on configuring P-mLACP."
<del>ERR</del> PMACSCNLD	3-Error	Received invalid P-mLACP node-id [dec] from peer	A remote P-mLACP peer is configured with an invalid P-mLACP node-id.	lACP	"Reconfigure the peer to send a valid P-mLACP node-id with the " "<CmdBold>mLACP node-id<NoCmdBold> configuration command. Refer " "to the P-mLACP configuration section of the Cisco IOS documentation " "for more information on configuring P-mLACP."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PFMPLACP-ONCE	4-Warning	P-mLACP has recovered from a core isolation failure. Attempting to recover [dec] ports in redundancy group %u	P-mLACP has recovered from core isolation and has attempted to recover the ports in the redundancy group.	lACP	"This message may not require any action. However the " " <b>show lACP multi-chassis load-balance group</b> " and " " <b>show lACP multi-chassis load-balance port-channel</b> commands" may be used to verify the state of the P-mLACP port-channels. Reference "the P-mLACP section of the IOS documentation for details on core isolation "failures and related configuration commands."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
P-mLACP Core Isolation	4-Warning	P-mLACP Core isolation failure: Attempting to failover [dec] ports in redundancy group %u	P-mLACP has detected isolation from the core and has attempted to failover.	lACP	"Use the <CmdBold>show interchassis redundancy</CmdBold> command to determine " "which core facing interface has triggered the isolation failure. Correct the " "failure for the given interface this will clear the P-mLACP core isolation " "failure. Reference the P-mLACP section of the IOS documentation for more " "information on core isolation failures and related configuration commands."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HRM/CR/INF/CR/EN</del>	4-Warning	Received an P-mLACP TLV without a type and/or length field [dec]	P-mLACP received an improperly formatted TLV from the peer. As a result the local and peer devices may have mismatched state data.	lACP	"Issue the <CmdBold>show version</NoCmdBold> command on the local and remote " "devices to get the versions of IOS that are running. Reference the P-mLACP " "section of the IOS documentation to verify that P-mLACP is compatible between " "the IOS versions on the two devices. If the versions are compatible and the " "message still appears then please contact your Cisco technical support " "representative and provide the representative with the exact error message " "being seen as well as the versions of IOS from both devices."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ERRM/MAJOR/ERRCVB	4-Warning	Received rejected P-mLACP TLV from peer with message ID [dec]	A remote P-mLACP peer has rejected an P-mLACP TLV.	lACP	"Issue the <CmdBold>show version<NoCmdBold> command on the local and remote " "devices to get the versions of IOS that are running. Reference the P-mLACP " "section of the IOS documentation to verify that P-mLACP is compatible between " "the IOS versions on the two devices. If the versions are compatible and the " "message still appears then please contact your Cisco technical support " "representative and provide the representative with the exact error message " "being seen as well as the versions of IOS from both devices."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ERRM/MA/ERR/CONNECT	4-Warning	An P-mLACP peer has disconnected from redundancy group [node]attempting to reconnect	P-mLACP has detected that a peer device from the specified redundancy group has disconnected. P-mLACP will attempt to reconnect to the device until successful.	lACP	"This message is typically caused by a configuration event on the peer router and " "so no action may be necessary. However if this message is unexpected then issue " "the <CmdBold>show redundancy interchassis</NoCmdBold> command on both the local and " "peer P-mLACP devices to determine which peer member IP has lost communication. Use this " "information to further debug the network communication issue and re-enable communication " "with the peer. Reference the P-mLACP section of the IOS documentation for more information " "on peer down failures."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ERR_P_MLACP_PEER_DOWN	4-Warning	P-mLACP Peer down failure: Attempting to make [dec] local ports active in redundancy group %u	P-mLACP has detected a peer down failure and has attempted to make the local port-channels become active.	lACP	"The peer down failure should be corrected by re-enabling communication " "with the peer P-mLACP device. Use the <CmdBold>show redundancy interchassis<NoCmdBold> " "command on both the local and peer P-mLACP devices to determine which peer member IP " "has lost communication. Use this information to further debug the network communication " "issue and re-enable communication with the peer. Reference the P-mLACP section of the IOS " "documentation for more information on peer down failures."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ERRMIAERRONE</del>	4-Warning	The attempt to reconnect to the peer in redundancy group [node]has failed	After an P-mLACP peer device disconnected an attempt was made to reconnect however that attempt has failed.	lacp	

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
					<p>"To reinitialize the connection unconfigure &lt;CmdBold&gt;mlacp interchassis group&lt;NoCmdBold&gt; " "from the port-channel and then reconfigure it. After doing that issue "</p> <p>"&lt;CmdBold&gt;show redundancy interchassis&lt;NoCmdBold&gt; to get the peer member IP "</p> <p>"connection status and the P-mLACP connection state. If the peer member IP " "connection status is not CONNECTED then there is a more basic communication " "issue that needs to be fixed. Otherwise if the peer member IP is CONNECTED but " "the P-mLACP state is not CONNECTED then there could be a software issue. In that " "case collect the output of &lt;CmdBold&gt;show redundancy interchassis&lt;NoCmdBold&gt; " "&lt;CmdBold&gt;show lacp multi-chassis load-balance group&lt;NoCmdBold&gt; and "</p> <p>"&lt;CmdBold&gt;show lacp multi-chassis load-balance port-channel&lt;NoCmdBold&gt;. Then please contact your " "Cisco</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
					technical support representative and provide the collected information."
<del>ETHERNET</del> ETHERUP	4-Warning	P-mLACP has recovered from a peer down failure in redundancy group %u	P-mLACP is now in communication with the peer device and has recovered from a previous peer down failure.	lacp	"This message may not require any action. However the " <CmdBold>show lacp multi-chassis load-balance group<NoCmdBold> and " <CmdBold>show lacp multi-chassis load-balance port-channel<NoCmdBold> commands may be used " "to verify the state of the P-mLACP port-channels. Reference the P-mLACP section " "of the IOS documentation for details on peer down failures and related " "configuration commands."
<del>ETHERNET</del> ETHERCONNECT	6-Information	P-mLACP peer is now connected in redundancy group %u	This message indicates that the local P-mLACP device is now connected to a peer device in the specified redundancy group.	lacp	"No action is required. To view the peer information the command " <CmdBold>show lacp multi-chassis load-balance port-channel<NoCmdBold> or " <CmdBold>show lacp multi-chassis load-balance group<NoCmdBold> may be issued."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ETHERNET_PROXY_INIT</del>	2-Critical	CPP ETHERNET Proxy IPC interface initialization failure result: [dec].	Cisco internal software error. CPP ETHERNET Proxy initialization detected that the IPC interface initialization failed. CPP ETHERNET proxy will not be functional while this condition exists.	qfp-bbkeyword:none	LOG_STD_ACTION
<del>ETHERNET_PROXY_BADMSG</del>	3-Error	CPP ETHERNET Proxy received bad length message type [dec]	Cisco internal software error. CPP ETHERNET Proxy received a corrupted message from control plane. This message will be ignored.	qfp-bbkeyword:none	LOG_STD_ACTION
<del>ETHERNET_PROXY_BADMSG</del>	3-Error	CPP ETHERNET Proxy received invalid message type [dec]	Cisco internal software error. CPP ETHERNET Proxy received an invalid message type from control plane. This message will be ignored.	qfp-bbkeyword:none	LOG_STD_ACTION
<del>ETHERNET_PROXY_ALLOC</del>	3-Error	CPP ETHERNET Proxy [chars] message lost due to message buffer allocation failure.	Cisco internal software error. CPP ETHERNET Proxy message processing detected a message buffer allocation failure. The message is lost as the result of this condition.	qfp-bbkeyword:none	LOG_STD_ACTION
<del>ETHERNET_PROXY_UNCHR</del>	3-Error	CPP ETHERNET Proxy received unregistered message type [dec]	Cisco internal software error. CPP ETHERNET Proxy received a message from control plane but there is no registered handler. The message is lost as the result of this condition.	qfp-bbkeyword:none	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ETHERNET</del> PROXYEXHAUSTED	3-Error	CPP ETHERNET Proxy [chars] message lost due to message sent failure result: [dec].	Cisco internal software error. CPP ETHERNET Proxy message processing detected a message sent failure. The message is lost as the result of this condition.	qfp-bbkeyword:none	LOG_STD_ACTION
ETHERNETNOMEMORY	1-Alert	msgtxt_nomemory	Insufficient memory exists to allocate the necessary memory pools.	-	"If this message recurs call your technical support representative for assistance."
ETHERNET-1-TXERR	1-Alert	[chars]: Fatal transmit error. Restarting...	A fatal transmit error occurred on the Ethernet line causing the line to be restarted.	-	"If this message recurs call your technical support representative for assistance."
<del>ETHERNET</del> ETHERNETINITIAL	3-Error	Dataplane ETHERNET init error for [chars]	Cisco internal software error. This is likely due to a dataplane memory exhaust	cpp-ucodekeyword:ethernet	LOG_STD_ACTION
ETHERNET4UNSUPNIFC	4-Warning	Interface Ethernet[dec] not supported by [chars] image	The specific ethernet interface is not supported by the operating system currently running.	-	"If the hardware configuration is supported by a newer version of the operating system it will be necessary to upgrade the software in order to support this interface."
EVENT_TRACECLOSEFILE	3-Error	Error closing file [chars]	The Event Trace subsystem can not close the specified file	Trace	"No action required. This will not affect "system functionality"
EVENT_TRACECLOSEFILE	3-Error	Error closing file [chars]	The Event Trace subsystem can not close the specified file	Trace	"No action required. This will not affect "system functionality"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EVENT_TRACE3CONTINUOUS	3-Error	Enable trace before setting continuous display	The specified event trace must be enabled before continuous display could occurs.	Trace	"Enable the specified event trace."
EVENT_TRACE3CONTINUOUS	3-Error	Enable trace before setting continuous display	The specified event trace must be enabled before continuous display could occurs.	Trace	"Enable the specified event trace."
EVENT_TRACE3GROUPID	3-Error	Duplicate registration of group-id [dec]	Software subsystem is trying to register a group id for event trace which has already been used by another subsystem.	Trace	LOG_STD_ACTION
EVENT_TRACE3GROUPID	3-Error	Duplicate registration of group-id [dec]	Software subsystem is trying to register a group id for event trace which has already been used by another subsystem.	Trace	LOG_STD_ACTION
EVENT_TRACE3OFILENAME	3-Error	Dump file not specified.	No filename has been specified as output for the event trace.	Trace	"You must specify the trace dump filename. To specify the trace dump " "filename enter the monitor event-trace comp dump-file filename command " "in global configuration mode"
EVENT_TRACE3OFILENAME	3-Error	Dump file not specified.	No filename has been specified as output for the event trace.	Trace	"You must specify the trace dump filename. To specify the trace dump " "filename enter the monitor event-trace comp dump-file filename command " "in global configuration mode"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EVENT_TRACE3NO_MEM	3-Error	Not enough memory for [dec] trace elements.	The system memory is insufficient for the number of trace elements specified.	Trace	"Reduce the size of the event trace"
EVENT_TRACE3NO_MEM	3-Error	Not enough memory for [dec] trace elements.	The system memory is insufficient for the number of trace elements specified.	Trace	"Reduce the size of the event trace"
EVENT_TRACE3NO_TRACE_NAME	3-Error	Invalid trace name [chars]	There is no trace buffer configured by the name entered.	Trace	"Check whether there is an event trace buffer " "configured by the name entered and then enter the correct trace " "buffer name."
EVENT_TRACE3NO_TRACE_NAME	3-Error	Invalid trace name [chars]	There is no trace buffer configured by the name entered.	Trace	"Check whether there is an event trace buffer " "configured by the name entered and then enter the correct trace " "buffer name."
EVENT_TRACE3NUM_HMEM	3-Error	Number of trace element = [dec] is greater than number = [dec] allowed	The number of trace entries exceed the allowed amount	Trace	"Reduce the number of trace entries"
EVENT_TRACE3NUM_HMEM	3-Error	Number of trace element = [dec] is greater than number = [dec] allowed	The number of trace entries exceed the allowed amount	Trace	"Reduce the number of trace entries"
EVENT_TRACE3OPEN	3-Error	[chars]: Trace failed to open	Initialization of the specified event trace has failed.	Trace	LOG_STD_ACTION
EVENT_TRACE3OPEN	3-Error	[chars]: Trace failed to open	Initialization of the specified event trace has failed.	Trace	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EVENT_TRACE3OPENFILE	3-Error	Couldn't open [chars]...	The Event Trace subsystem could not open a file for the specified event trace dump.	Trace	"If a file by the same name already exists rename the dump file or " "remove the existing file from the file system."
EVENT_TRACE3OPENFILE	3-Error	Couldn't open [chars]...	The Event Trace subsystem could not open a file for the specified event trace dump.	Trace	"If a file by the same name already exists rename the dump file or " "remove the existing file from the file system."
EVENT_TRACE3RESIZE	3-Error	Enable trace before resizing	The specified event trace must be enabled before resizing occurs.	Trace	"Enable the specified event trace."
EVENT_TRACE3RESIZE	3-Error	Enable trace before resizing	The specified event trace must be enabled before resizing occurs.	Trace	"Enable the specified event trace."
EVENT_TRACE3SIZE_ELEM	3-Error	Size of trace element = [dec] is greater than size = [dec] allowed	The size of the specified individual trace entry is greater than the allowed size.	Trace	"Reduce the individual trace entry size so as not " "to exceed the max while initializing the event trace"
EVENT_TRACE3SIZE_ELEM	3-Error	Size of trace element = [dec] is greater than size = [dec] allowed	The size of the specified individual trace entry is greater than the allowed size.	Trace	"Reduce the individual trace entry size so as not " "to exceed the max while initializing the event trace"
EVENT_TRACE3SIZE_FILENAME	3-Error	Trace filename size = [dec] greater than size = [dec] allowed	The length of the specified Event Trace filename exceeds the allowed.	Trace	"Shorten the filename."
EVENT_TRACE3SIZE_FILENAME	3-Error	Trace filename size = [dec] greater than size = [dec] allowed	The length of the specified Event Trace filename exceeds the allowed.	Trace	"Shorten the filename."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EVENT_TRACEWRITEFILE	3-Error	Error writing to file [chars]	Event trace is not able to write to the specified filesystem	Trace	"The filesystem might not be available. Try " "changing the destination filesystem and dumping there. " "If none work copy the error message exactly as it and " "call your Cisco technical support representative"
EVENT_TRACEWRITEFILE	3-Error	Error writing to file [chars]	Event trace is not able to write to the specified filesystem	Trace	"The filesystem might not be available. Try " "changing the destination filesystem and dumping there. " "If none work copy the error message exactly as it and " "call your Cisco technical support representative"
EVENT_TRACE6ENABLE	6-Information	Trace already enabled.	Specified event trace has already been enabled	Trace	LOG_SID_DBG_ACTION
EVENT_TRACE6ENABLE	6-Information	Trace already enabled.	Specified event trace has already been enabled	Trace	LOG_SID_DBG_ACTION
EVENT_TRACE6NOFORMATTER	6-Information	[chars]: no formatter provided binary dumping.	No formatter function was provided during the initialization of the specified event trace.	Trace	LOG_SID_NO_ACTION
EVENT_TRACE6NOFORMATTER	6-Information	[chars]: no formatter provided binary dumping.	No formatter function was provided during the initialization of the specified event trace.	Trace	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
EVENT3INSERT_FAILURE	3-Error	Failed to insert [chars]	The event process failed to insert the newly created row in\n\n its linked list data structure	snmp	"Copy the error message exactly as it appears and report it to\n\n your technical support representative."
EVENT3NULL_ELEMENT	3-Error	Null pointer in the watched queue for [chars] test	The process was woken up with an NULL element	snmp	"Copy the error message exactly as it appears and report it to\n\n your technical support representative."
EVENT3NULL_STRUCT	3-Error	Null pointer to the [chars] structure	The process was woken up with an element which had a null pointer to\n\n the test structure	snmp	"Copy the error message exactly as it appears and report it to\n\n your technical support representative."
EVENTLIB3CPUHOG	3-Error	[chars]: [node]s Traceback=[chars]	This error occurs when a particular event consumes an unfair share of the CPU that may degrade overall system response time.	asr1k-xe-infra	show platform software process event
EVENTLIB3EMVDREAD	3-Error	Event notification read failed with err [chars]	This occurs when we fail to read a thread notify event	polaris-infra	LOGSIDDISTACTEALS
EVENTLIB3HISTELEM	3-Error	elem[[node] event: [chars] [chars] set: [node]ums unset: [node]ums hog check: [dec] caller: [node]app-info: [chars]	This event element is part of a CPUHOG or TIMEHOG error providing diagnostic details useful to engineering. Save all element messages along with the HOG error.	mcp-infra	LOGSIDDISTACTEALS

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
EVENTLIB3-HISTELEM	3-Error	iosxe-binos-utils	elem[%u] event:[chars][chars] set: %llums unset: %llums hog check: %d caller: %p app-info:[chars]	"Eventlib historical element for detected hog."	"This event element is part of a CPUHOG or TIMEHOG error
EVENTLIB3-HISISUMM	3-Error	dispatch start: [node]ums elapsed time: [node]ums detected hog: [node]set count: [node]	This event summary is part of a CPUHOG or TIMEHOG error providing diagnostic details useful to engineering. Save this summary message along with the HOG error.	mcp-infra	<u>LOGS</u> <u>DDIS</u> <u>TAC</u> <u>DEALS</u>
EVENTLIB3-HISISUMM	3-Error	iosxe-binos-utils	dispatch start: %llums elapsed time: %llums detected hog: %u set count: %u	"Eventlib historical summary for detected hog."	"This event summary is part of a CPUHOG or TIMEHOG error
EVENTLIB3-RUNHOG	3-Error	[chars]: [node]s Traceback=[chars]	This error occurs when a particular event consumes an overall unfair share of the CPU that may degrade overall system response time.	asr1k-xe-infra	show platform software process event
EVENTLIB3-TIMEHOG	3-Error	[chars]: [node]ums Traceback=[chars]	This error occurs when a particular event takes an unusually long time to complete. This may affect overall system response time.	asr1k-xe-infra	show platform software process event
EVENTQ-3-LCON	3-Error	ERRMSG_NOFLAGS	-	-	-
EVENTQ-3-LCON	3-Error	ERRMSG_NOFLAGS	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>EVPCHEADISDBD</del>	3-Error	Disabling Ethernet Segment [chars] due to core isolation	EVPN is disabling the Ethernet Segment due to core isolation failure detected.	evpn-mgr	"Diagnose and recover from core isolation failure then EVPN will " "re-enable the Ethernet Segment automatically."
<del>EVPCHEADISDBD</del>	3-Error	Disabling Ethernet Segment [chars] due to core isolation	EVPN is disabling the Ethernet Segment due to core isolation failure detected.	evpn-mgr	"Diagnose and recover from core isolation failure then EVPN will " "re-enable the Ethernet Segment automatically."
<del>EVPCHEADNREACHOW</del>	3-Error	Bringing down multi-homing access interface [chars]	EVPN is bringing down the multi-homing access interface due to core isolation failure detected.	evpn-mgr	"Diagnose and recover from core isolation failure then EVPN will bring " "the multi-homing access interface up automatically."
<del>EVPCHEADNREACHOW</del>	3-Error	Bringing down multi-homing access interface [chars]	EVPN is bringing down the multi-homing access interface due to core isolation failure detected.	evpn-mgr	"Diagnose and recover from core isolation failure then EVPN will bring " "the multi-homing access interface up automatically."
EVVPN-3-DUP_IP	3-Error	Duplicate IP address [chars] EVI [node][chars] [node]detected on [chars] and [chars]	EVPN has detected a duplicate IP address in the network. This occurs when the same IP address is learned from multiple different MAC addresses more than N times within M seconds where N is the configured IP duplication limit which defaults to 5 and M is the configured IP	evpn-mgr	"Locate and remove the duplicate IP address then use the command " "'clear l2vpn evpn ip duplicate <bridge domain ID> <IP address>' to " "resume IP learning for that address."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EVPN-3-DUP_IP	3-Error	Duplicate IP address [chars] EVI [node][chars] [node]detected on [chars] and [chars]	EVPN has detected a duplicate IP address in the network. This occurs when the same IP address is learned from multiple different MAC addresses more than N times within M seconds where N is the configured IP duplication limit which defaults to 5 and M is the configured IP	evpn-mgr	"Locate and remove the duplicate IP address then use the command " "clear l2vpn evpn ip duplicate <bridge domain ID> <IP address>' to " "resume IP learning for that address."
EVPN-3-DUP_MAC	3-Error	Duplicate [chars]MAC address [enet] EVI [node][chars] [node]detected on [chars] and [chars]	EVPN has detected a duplicate MAC address in the network. This occurs when the same MAC address is learned from both a local port and a remote device more than N times within M seconds where N is the configured MAC duplication limit which defaults to 5 and M is the configured MAC	evpn-mgr	"Locate and remove the duplicate MAC address then use the command " "clear l2vpn evpn mac duplicate <bridge domain ID> <MAC address>' to " "resume MAC learning for that address."
EVPN-3-DUP_MAC	3-Error	Duplicate [chars]MAC address [enet] EVI [node][chars] [node]detected on [chars] and [chars]	EVPN has detected a duplicate MAC address in the network. This occurs when the same MAC address is learned from both a local port and a remote device more than N times within M seconds where N is the configured MAC duplication limit which defaults to 5 and M is the configured MAC	evpn-mgr	"Locate and remove the duplicate MAC address then use the command " "clear l2vpn evpn mac duplicate <bridge domain ID> <MAC address>' to " "resume MAC learning for that address."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EVN3EENCAPMISMATCH	3-Error	ES route with encapsulation mismatch received from [chars]/[chars]	Local and remote EVPN instances must have the same encapsulation type.	evpn-mgr	"Correct the configuration by changing the encapsulation type of local " "or remote EVPN instance"
EVN3EENCAPMISMATCH	3-Error	ES route with encapsulation mismatch received from [chars]/[chars]	Local and remote EVPN instances must have the same encapsulation type.	evpn-mgr	"Correct the configuration by changing the encapsulation type of local " "or remote EVPN instance"
EVN3EM_RD_CONFLICT	3-Error	The new RD for EVPN instance [node]is already in use by EVPN instance [node]	EVPN has detected that the new set EVPN instance RD is already used by another EVPN instance. There will not be conflict if all EVPN instances use the default auto generated RD unless manually configured RD is used which cause the conflict.	evpn-mgr	"Manually configure another RD which is not conflict or change the " "existing manually configured EVPN instance RD value."
EVN3EM_RD_CONFLICT	3-Error	The new RD for EVPN instance [node]is already in use by EVPN instance [node]	EVPN has detected that the new set EVPN instance RD is already used by another EVPN instance. There will not be conflict if all EVPN instances use the default auto generated RD unless manually configured RD is used which cause the conflict.	evpn-mgr	"Manually configure another RD which is not conflict or change the " "existing manually configured EVPN instance RD value."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>EVN3-3-ERR</del> EVPN-3-ERR-MCASTGRP	3-Error	Incompatible multicast group configuration for L2 VNI %u	A Layer 2 VNI used for EVPN must have not an associated multicast group for Broadcast Unknown Unicast and Multicast traffic when ingress replication is configured.	evpn-mgr	"Correct the configuration by removing the " "mcast-group keyword from the 'member vni' command " "in the NVE interface sub-mode."
<del>EVN3-3-ERR</del> EVPN-3-ERR-MCASTGRP	3-Error	Incompatible multicast group configuration for L2 VNI %u	A Layer 2 VNI used for EVPN must have not an associated multicast group for Broadcast Unknown Unicast and Multicast traffic when ingress replication is configured.	evpn-mgr	"Correct the configuration by removing the " "mcast-group keyword from the 'member vni' command " "in the NVE interface sub-mode."
<del>EVN3-3-ERR</del> EVPN-3-ERR-REPLICATION	3-Error	Incompatible replication configuration for EVI [node][chars] %u	An EVPN instance with MPLS encapsulation must not be configured if the replication type is static.	evpn-mgr	"Correct the configuration by changing the " "replication type configuration to ingress."
<del>EVN3-3-ERR</del> EVPN-3-ERR-REPLICATION	3-Error	Incompatible replication configuration for EVI [node][chars] %u	An EVPN instance with MPLS encapsulation must not be configured if the replication type is static.	evpn-mgr	"Correct the configuration by changing the " "replication type configuration to ingress."
EVPN-3-INTERNAL	3-Error	Internal error: [chars]	An internal software error has occurred.	evpn-mgr	LOG_STD_ACTION
EVPN-3-INTERNAL	3-Error	Internal error: [chars]	An internal software error has occurred.	evpn-mgr	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EVN:MAX:ERR:EXCH:DD	3-Error	Maximum number of peers [dec] exceeded for Ethernet Segment [chars] in	EVPN has received a peer nexthop update from BGP which would push the number of peers in the Ethernet Segment past the supported limit for single-active redundancy mode. The newly discovered peer will not be added to the peer list so as not to impact current peering and designated forwarder election results.	evpn-mgr	"Take one of the PE's out of the Ethernet Segment by modifying or " "removing its ESI configuration. If it's a PE already peering need to " "toggle the access interface or reconfigure ESI on the newly discovered " "peer to ensure it is re-advertised."
EVN:MAX:ERR:EXCH:DD	3-Error	Maximum number of peers [dec] exceeded for Ethernet Segment [chars] in	EVPN has received a peer nexthop update from BGP which would push the number of peers in the Ethernet Segment past the supported limit for single-active redundancy mode. The newly discovered peer will not be added to the peer list so as not to impact current peering and designated forwarder election results.	evpn-mgr	"Take one of the PE's out of the Ethernet Segment by modifying or " "removing its ESI configuration. If it's a PE already peering need to " "toggle the access interface or reconfigure ESI on the newly discovered " "peer to ensure it is re-advertised."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>EVN</del> <del>ERR</del> <del>EXCEED</del> <del>ERR</del>	3-Error	Maximum number of peers [dec] exceeded for Ethernet Segment [chars] in	EVPN has received a peer nexthop update from BGP which would push the number of peers in the Ethernet Segment past the supported limit for single-active redundancy mode. The Ethernet Segment will be disabled.	evpn-mgr	"Take one of the PE's out of the Ethernet Segment by modifying or " "removing its ESI configuration. If it's a PE already peering need to " "toggle the access interface or reconfigure ESI on the newly discovered " "peer to ensure it is re-advertised."
<del>EVN</del> <del>ERR</del> <del>EXCEED</del> <del>ERR</del>	3-Error	Maximum number of peers [dec] exceeded for Ethernet Segment [chars] in	EVPN has received a peer nexthop update from BGP which would push the number of peers in the Ethernet Segment past the supported limit for single-active redundancy mode. The Ethernet Segment will be disabled.	evpn-mgr	"Take one of the PE's out of the Ethernet Segment by modifying or " "removing its ESI configuration. If it's a PE already peering need to " "toggle the access interface or reconfigure ESI on the newly discovered " "peer to ensure it is re-advertised."
<del>EVN</del> <del>ERR</del> <del>MISSING</del> <del>CAST</del> <del>GROUP</del>	3-Error	Missing multicast group configuration for L2 VNI %u	A Layer 2 VNI used for EVPN must have an associated multicast group for Broadcast Unknown Unicast and Multicast traffic when static replication is configured.	evpn-mgr	"Correct the configuration by adding the " "mcast-group keyword to the 'member vni' command " "in the NVE interface sub-mode."
<del>EVN</del> <del>ERR</del> <del>MISSING</del> <del>CAST</del> <del>GROUP</del>	3-Error	Missing multicast group configuration for L2 VNI %u	A Layer 2 VNI used for EVPN must have an associated multicast group for Broadcast Unknown Unicast and Multicast traffic when static replication is configured.	evpn-mgr	"Correct the configuration by adding the " "mcast-group keyword to the 'member vni' command " "in the NVE interface sub-mode."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>EVN</del> <del>NS</del> <del>UP</del> <del>RED</del> <del>M</del> <del>K</del> <del>EN</del> <del>CA</del>	3-Error	EVI with different encapsulation types are not supported in the same Ethernet Segment[[chars]]	All EVPN instances associated with an Ethernet Segment must have the same encapsulation type.	evpn-mgr	"Correct the configuration by changing the encapsulation type of the " "EVPN instances associated with the Ethernet Segment to be the same."
<del>EVN</del> <del>NS</del> <del>UP</del> <del>RED</del> <del>M</del> <del>K</del> <del>EN</del> <del>CA</del>	3-Error	EVI with different encapsulation types are not supported in the same Ethernet Segment[[chars]]	All EVPN instances associated with an Ethernet Segment must have the same encapsulation type.	evpn-mgr	"Correct the configuration by changing the encapsulation type of the " "EVPN instances associated with the Ethernet Segment to be the same."
<del>EVN</del> <del>NS</del> <del>UP</del> <del>RED</del> <del>M</del> <del>K</del> <del>EN</del> <del>CA</del>	5-Notice	Traffic may drop on the CE side depending on the CE behavior	On the CE side traffic may drop depending on the CE behavior traffic could be hashed to a specific link in the MC-LAG group.	evpn-mgr	LOG_SID_NO_ACTION
<del>EVN</del> <del>NS</del> <del>UP</del> <del>RED</del> <del>M</del> <del>K</del> <del>EN</del> <del>CA</del>	5-Notice	Traffic may drop on the CE side depending on the CE behavior	On the CE side traffic may drop depending on the CE behavior traffic could be hashed to a specific link in the MC-LAG group.	evpn-mgr	LOG_SID_NO_ACTION
<del>EVN</del> <del>NS</del> <del>UP</del> <del>RED</del> <del>M</del> <del>K</del> <del>EN</del> <del>CA</del>	5-Notice	ARP alias IP address [chars] conflicts with an existing MAC/IP binding [[chars]/[chars]] learned from [chars]	EVPN has detected an IP address learned from an ARP alias entry conflicts with an existing MAC/IP binding learned locally or remotely. It is likely the same IP address is configured on other BD-VIF interfaces or the same ARP alias entry is configured remotely	-	"Locate and correct the misconfigured IP address then shut and no-shut " "the BD-VIF interface associated with the ARP alias entry to relearn " "its MAC/IP binding into EVPN"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>EVN5ARP_ALIAS_CONFLICT</del>	5-Notice	ARP alias IP address [chars] conflicts with an existing MAC/IP binding [[chars]/[chars]] learned from [chars]	EVPN has detected an IP address learned from an ARP alias entry conflicts with an existing MAC/IP binding learned locally or remotely. It is likely the same IP address is configured on other BD-VIF interfaces or the same ARP alias entry is configured remotely	-	"Locate and correct the misconfigured IP address then shut and no-shut " "the BD-VIF interface associated with the ARP alias entry to relearn " "its MAC/IP binding into EVPN"
<del>EVN5CORE_ISOLATION_ENABLED</del>	5-Notice	Enabling Ethernet Segment [chars] after exiting core isolation	EVPN has recovered from a core isolation failure and is enabling the Ethernet Segment.	evpn-mgr	LOG_SID_NO_ACTION
<del>EVN5CORE_ISOLATION_ENABLED</del>	5-Notice	Enabling Ethernet Segment [chars] after exiting core isolation	EVPN has recovered from a core isolation failure and is enabling the Ethernet Segment.	evpn-mgr	LOG_SID_NO_ACTION
<del>EVN5CORE_ISOLATION_INTERFACE_UP</del>	5-Notice	Bringing up multi-homing access interface [chars]	EVPN has recovered from a core isolation failure and is bringing up the multi-homing access interface.	evpn-mgr	LOG_SID_NO_ACTION
<del>EVN5CORE_ISOLATION_INTERFACE_UP</del>	5-Notice	Bringing up multi-homing access interface [chars]	EVPN has recovered from a core isolation failure and is bringing up the multi-homing access interface.	evpn-mgr	LOG_SID_NO_ACTION
EVPN5DUP_CLEAR_IP	5-Notice	Cleared duplicate IP address [chars] EVI [node][chars] %u	EVPN has cleared the duplicate condition on a IP address that was previously detected as a duplicate.	evpn-mgr	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EVN5-DUP_CLEAR_IP	5-Notice	Cleared duplicate IP address [chars] EVI [node][chars] %u	EVPN has cleared the duplicate condition on a IP address that was previously detected as a duplicate.	evpn-mgr	LOG_SID_NO_ACTION
EVN5-DUP_CLEAR_MAC	5-Notice	Cleared duplicate MAC address [enet] EVI [node][chars] %u	EVPN has cleared the duplicate condition on a MAC address that was previously detected as a duplicate.	evpn-mgr	LOG_SID_NO_ACTION
EVN5-DUP_CLEAR_MAC	5-Notice	Cleared duplicate MAC address [enet] EVI [node][chars] %u	EVPN has cleared the duplicate condition on a MAC address that was previously detected as a duplicate.	evpn-mgr	LOG_SID_NO_ACTION
<del>EVN5-DUP_CLEAR_MAC</del>	5-Notice	Local redundancy mode change is not allowed for Ethernet Segment [chars] because it has two or more forwarders.	Local redundancy mode change is not allowed for Ethernet Segments with two or more forwarders. Configuration is updated while local redundancy mode is kept unchanged. Local redundancy mode will be updated when the number of forwarders drops to less than two.	evpn-mgr	"Reduce the number of forwarders to less than two to allow local " "redundancy mode change."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>EVPCARDENOTICE</del>	5-Notice	Local redundancy mode change is not allowed for Ethernet Segment [chars] because it has two or more forwarders.	Local redundancy mode change is not allowed for Ethernet Segments with two or more forwarders. Configuration is updated while local redundancy mode is kept unchanged. Local redundancy mode will be updated when the number of forwarders drops to less than two.	evpn-mgr	"Reduce the number of forwarders to less than two to allow local " "redundancy mode change."
<del>EVPCAREMCHANGE</del>	5-Notice	Local redundancy mode has been changed to [chars] for Ethernet Segment [chars].	An event has occurred that has caused local redundancy mode to change.	evpn-mgr	LOG_SID_NO_ACTION
<del>EVPCAREMCHANGE</del>	5-Notice	Local redundancy mode has been changed to [chars] for Ethernet Segment [chars].	An event has occurred that has caused local redundancy mode to change.	evpn-mgr	LOG_SID_NO_ACTION
<del>EVPNINTERFACECONFLICT</del>	5-Notice	[chars] IP address [chars] conflicts with an existing IP with MAC [chars] learned from [chars]	EVPN has detected an IP address configured on an BD-VIF interface conflicts with an existing IP address learned locally or remotely. It is likely same IP address are used on other BD-VIF interfaces or hosts	-	"Locate and correct the misconfigured IP address then shut and no-shut " "this BD-VIF interface to relearn its MAC/IP binding into EVPN"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>EVPN</del> INTERFACEPCONFLICT	5-Notice	[chars] IP address [chars] conflicts with an existing IP with MAC [chars] learned from [chars]	EVPN has detected an IP address configured on an BD-VIF interface conflicts with an existing IP address learned locally or remotely. It is likely same IP address are used on other BD-VIF interfaces or hosts	-	"Locate and correct the misconfigured IP address then shut and no-shut " "this BD-VIF interface to relearn its MAC/IP binding into EVPN"
<del>EVPN</del> INTERFACEMACCONFLICT	5-Notice	[chars] MAC address [chars] conflicts with an existing MAC learned from [chars]	EVPN has detected an MAC address configured on an BD-VIF interface conflicts with an existing MAC learned locally or remotely. It is likely same MAC address are used on other BD-VIF interfaces or hosts	-	"Locate and correct the misconfigured MAC address then shut and no-shut " "this BD-VIF interface to relearn its MAC/IP binding into EVPN"
<del>EVPN</del> INTERFACEMACCONFLICT	5-Notice	[chars] MAC address [chars] conflicts with an existing MAC learned from [chars]	EVPN has detected an MAC address configured on an BD-VIF interface conflicts with an existing MAC learned locally or remotely. It is likely same MAC address are used on other BD-VIF interfaces or hosts	-	"Locate and correct the misconfigured MAC address then shut and no-shut " "this BD-VIF interface to relearn its MAC/IP binding into EVPN"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EVPN-5L3RIB_CONFLICT	5-Notice	Detected a static route already installed for VRF ID destination IP [[node]][chars] with full prefix length. EVPN will install a static route which may be overridden in RIB by the other static route.	EVPN installs a static route for learned local and proxy MAC/IPs with the IP as the destination prefix and full prefix length. A static route matching this has already been installed either by the configuration CLI or another application owner. The EVPN one is installed with lower administrative distance and may be overridden by routes with the same prefix length.	evpn-mgr	"If an IPv4 or IPv6 static route for this VRF prefix and full prefix " "length has been configured intentionally this message can be ignored. " "If not intentionally remove the configuration so that the EVPN RIB " "entries can be activated."
EVPN-5L3RIB_CONFLICT	5-Notice	Detected a static route already installed for VRF ID destination IP [[node]][chars] with full prefix length. EVPN will install a static route which may be overridden in RIB by the other static route.	EVPN installs a static route for learned local and proxy MAC/IPs with the IP as the destination prefix and full prefix length. A static route matching this has already been installed either by the configuration CLI or another application owner. The EVPN one is installed with lower administrative distance and may be overridden by routes with the same prefix length.	evpn-mgr	"If an IPv4 or IPv6 static route for this VRF prefix and full prefix " "length has been configured intentionally this message can be ignored. " "If not intentionally remove the configuration so that the EVPN RIB " "entries can be activated."
EVPN-5PEER_STATUS	5-Notice	Peer [chars] [chars] is [chars]	An event has occurred that has caused the peer to change status	evpn-mgr	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EVPN-5-PEER_STATUS	5-Notice	Peer [chars] [chars] is [chars]	An event has occurred that has caused the peer to change status	evpn-mgr	LOG_STD_NO_ACTION
EVPN-5-VC_STATUS	5-Notice	EVPN[[node][node][node]: VC state [chars]	An event has occurred that has caused the vc to change status	evpn-mgr	LOG_STD_NO_ACTION
EVPN-5-VC_STATUS	5-Notice	EVPN[[node][node][node]: VC state [chars]	An event has occurred that has caused the vc to change status	evpn-mgr	LOG_STD_NO_ACTION
<del>EVTMON-3-EXPIRED</del>	3-Error	[dec]	IPC handler initialization failed.	qfp-evtmon	LOG_STD_ACTION
<del>EVTMON-4-FAILED</del>	4-Warning	feature user failed to [chars] because of [chars]	Event monitor feature user failed to attach or detach.	qfp-evtmon	LOG_STD_ACTION
<del>EVTMON-4-UPDATE</del>	4-Warning	event record update failed	Event monitor failed to attach or detach event record.	qfp-evtmon	LOG_STD_ACTION
<del>EVTMON-4-INVALID</del>	4-Warning	[hec]	Received an invalid IPC messages subtype.	qfp-evtmon	LOG_STD_ACTION
EVUTIL-3-PERMISSION	3-Error	iosxe-binos-utils	Operation not permitted for pid %d tid %d	"Eventlib has detected that a process has attempted to invoke an API that is listed as having a level of permission."	"Review the process logs taking note of the timestamp information to select specific information to review. Copy the message and other related information exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <a href="http://www.cisco.com/tac">http://www.cisco.com/tac</a> . With some messages

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EVUTIL3PREREQUISITE	3-Error	iosxe-binos-utils	A preferred library has failed to initialize:[chars]	"Eventlib has detected that a preferred library which provides infrastructure services has failed to fully initialize."	"Review the process logs taking note of the timestamp information to select specific information to review. Copy the message and other related information exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <a href="http://www.cisco.com/tac">http://www.cisco.com/tac</a> . With some messages
EVUTIL6PREREQUISITE	6-Information	iosxe-binos-utils	Preferred library is absent	"Eventlib has detected that a preferred library is missing from the process."	"This is an informational message."
EWCAPWAPINDEXZERO	3-Error	[chars] : ifindex is zero for interface [chars]. Unit : [node]Slot : %u	IFINDEX of a capwap idb is zero.	-	"show idb"
EWLCABMSBULKSYNCERR	3-Error	ewlc-ha	Error: Bulk sync status :[chars]	Bulk sync status Error message. TERMINATED - Bulk-sync terminated	LOG_SID_NO_ACTION
EWLCABMSWIRELESSCFG	3-Error	ewlc-ha	Error: Wireless config sync not complete. Reloading the WLC!	Switchover happens before wireless config sync is complete!	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>EWLC</del> <del>INFO</del> <del>EWLC</del> <del>INFO</del>	6-Information	ewlc-ha	INFO: Bulk sync status :[chars]	Bulk sync status INFO message. COLD - Bulk-sync ongoing. CONFIG_DONE - critical DB sync complete. WARM - Most of the DB's synced. HOT - Bulk-sync completed	LOG_STD_NO_ACTION
<del>EWLC</del> <del>ERR</del> <del>EWLC</del> <del>ERR</del>	3-Error	ewlc-app-infra	Event name:[chars]	System has detected an excessive number of sub-events. Normal WLC functionality may be impacted.	LOG_STD_ACTION
<del>EWLC</del> <del>ERR</del> <del>EWLC</del> <del>ERR</del>	3-Error	iosxe-binos-utils	Error in[chars]	General ewlc Error Message.	LOG_STD_ACTION
<del>EWLC</del> <del>WRN</del> <del>EWLC</del> <del>WRN</del>	4-Warning	ewlc-ap	CPU Utilization[chars]	CPU utilisation for the process has breached the monitored level	-
<del>EWLC</del> <del>INFO</del> <del>EWLC</del> <del>INFO</del>	6-Information	ewlc-ap	CPU Utilization[chars]	CPU Utilisation for the process has recovered below the monitored level	LOG_STD_NO_ACTION
EWLC_L2_ISSU3BUFFER	3-Error	EWLC L2 ISSU client failed to get buffer for message error [dec]	EWLC L2 ISSU client failed to get buffer for building\n a negotiation message. Hence it can send the negotiation\n message to the standby unit. When there is a problem in\n the negotiaiton the standby unit can not be brought up.	platform-ha	"show logging and show checkpoint client"
<del>EWLC</del> <del>ERR</del> <del>EWLC</del> <del>ERR</del>	3-Error	EWLC L2 ISSU client capability list is empty.	The EWLC L2 ISSU client capability exchange list size\n is invalid.	platform-ha	"show issu capability entries <Client_ID>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EWLC_L2_ISSU_COMPATIBLE	3-Error	EWLC L2 ISSU client capability exchange result incompatible.	The EWLC L2 ISSU client capability exchange has negotiated\n\n as incompatible with the peer.	platform-ha	"show issu negotiated capability <Session_ID>"
EWLC_L2_ISSU_CAPABILITY	3-Error	EWLC L2 ISSU client [chars]	EWLC L2 ISSU client observed an error during capability\n\n negotiation. When this error happens there is a mismatch\n\n between the client capability between the active and\n\n standby unit.	platform-ha	"show issu capability entries <client_id> and\n\n show issu session <client_id> and\n\n show issu negotiated capability <session_id>"
EWLC_L2_ISSU-3-INIT	3-Error	EWLC L2 ISSU client initialization failed at [chars] error [chars]	EWLC L2 ISSU client could not be initialized this will\n\n cause catastrophic failure when ISSU upgrade or downgrade\n\n is performed.	platform-ha	LOG_SID_SH_TECH_ACTION
EWLC_L2_ISSU_MSG_NOTICK	3-Error	EWLC L2 ISSU client message [dec] is not compatible	EWLC L2 ISSU client received an incompatible message\n\n from the peer unit. Since the message is not compatible\n\n it can be processed by this unit	platform-ha	"show issu message group <client_id> and\n\n show issu session <client_id> and\n\n show issu negotiated version <session_id>"
EWLC_L2_ISSU_MSG_SIZE	3-Error	EWLC L2 ISSU client failed to get the message size for message [dec]	EWLC L2 ISSU client failed to calculate message size\n\n for the message specified. The EWLC L2 ISSU client will not\n\n be able to send message to the standby unit.	platform-ha	"show issu message group <client_id> and\n\n show issu session <client_id> and\n\n show issu negotiated version <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EWLC_L2_ISSU3POLICY	3-Error	EWLC L2 ISSU client message type [dec] is [chars]	EWLC L2 ISSU client received an message type which it\n\ does not support. The policy is applied to make the session\n\ compatible.	platform-ha	"show issu session <client_id>"
EWLC_L2_ISSU3SENDFAILED	3-Error	EWLC L2 ISSU client failed to send a negotiation message error [dec]	EWLC L2 ISSU client could not send a session negotiation\n\ message to the peer. When there is a problem in the\n\ negotiation the standby unit can not be brought up.	platform-ha	"show logging and show checkpoint client"
EWLC_L2_ISSU3SESSION	3-Error	EWLC L2 ISSU client [chars]	EWLC L2 ISSU client observed an error during a session\n\ negotiation with the peer unit. When there is a problem\n\ with the session the standby unit can not be brought up.	platform-ha	"show issu capability entries <client_id> and\n\ show issu session <client_id> and\n\ show issu negotiated capability <session_id>"
EWLC_L2_ISSU3UNREGISTER	3-Error	EWLC L2 ISSU client failed to unregister session information. Error: [dec] [chars]	The EWLC L2 ISSU client failed to unregister session information.	platform-ha	"show issu session <client_id> and " "show issu negotiated capability <session_id>"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
EWLC_L2_ISSU_TRANSFORM	3-Error	EWLC L2 ISSU client [chars] transform failed error [chars]	EWLC L2 ISSU client could not transform the message.\n If the transmit transformation failed it means that the\n checkpoint message can not be sent to the standby unit.\n If the receive transformation failed it means that the\n checkpoint message can not be applied on the standby\n unit. In both cases the EWLC L2 state will not\n be identical with the active unit.	platform-ha	"show issu session <client_id> and\n show issu negotiated version <session_id>"
EWLC_L23BULK_SYNC	3-Error	[chars]	Bulk sync failure the reason for the failure will be provided in the string	platform-ha	"Copy the error message exactly as it appears. Copy down the system's\n configuration along with any other relevant information. Contact your\n technical support representative for assistance."
EWLC_L23TECH_FAILURE	3-Error	File [chars] open failed	File Open failed	platform-ha	LOG_SID_SH_TECH_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EWLC23NADMGRCHMD	3-Error	Invalid [chars] message received	A message that is used for state synchronization was not received correctly. An internal data structure for a message could not be retrieved. The failure most likely occurred because of a software error. The system state between the active and standby units might not be properly synchronized.	platform-ha	LOG_SID_SH_TECH_ACTION
EWLC123MAC_FAILURE	3-Error	Mac Failure	NULL MAC	platform-ha	LOG_SID_SH_TECH_ACTION
EWLC123MALLOC_FAILURE	3-Error	[chars]	Failed to allocated memory for a structure or event	platform-ha	LOG_SID_SH_TECH_ACTION
EWLC123OR_FAILURE	3-Error	Message:[chars]Error:[dec]	EWLC L2 failures due to various reasons	platform-ha	LOG_SID_SH_TECH_ACTION
EWLC123REG_FAILURE	3-Error	Message:[chars]Error:[dec]	Registration Failure	platform-ha	LOG_SID_SH_TECH_ACTION
EWCPACMPFOSRFAIL	3-Error	System resource check failed.	System resource check failed. System could be running on unsupported hardware resources	-	LOG_SID_NO_ACTION
EWCPACMPFOSRFAIL	4-Warning	Creating fips objstore key failed [chars]	FIPS objstore key create failed	-	LOG_SID_NO_ACTION
EWCPACMPFOSRFAIL	4-Warning	Deleting fips objstore key failed [chars]	FIPS objstore key delete failed	-	LOG_SID_NO_ACTION
EWCPACMPFOSRFAIL	4-Warning	Opening fips objstore key failed [chars]	FIPS Objstore key could not be opened.	-	LOG_SID_NO_ACTION
EWCPACMPFOSRFAIL	4-Warning	Reading fips objstore key failed [chars]	FIPS objstore key could not be read	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>FWCPACRMFBKRCLEN</del>	4-Warning	Reading of objstore key failed due to incorrect length [dec] [dec]	FIPS objstore key read failed	-	LOG_SID_NO_ACTION
<del>FWCPACRMFBKRCWRE</del>	4-Warning	Writing fips objstore key failed [chars]	FIPS objstore key write failed	-	LOG_SID_NO_ACTION
<del>FWCHLAFORMRECFCPU</del>	4-Warning	System is running with CPUs lower than recommended. Current no of CPUs: [dec] Recommended no of CPUs: [dec]	System is running with CPUs lower than recommended. Please refer to release notes.	-	LOG_SID_NO_ACTION
<del>FWCHLAFORMRECFCBK</del>	4-Warning	System is running on a disk lower than recommended. Current Disk Size: [dec]GB Recommended Disk Size: [dec]GB	System is running on a disk lower than recommended. Please refer to release notes.	-	LOG_SID_NO_ACTION
<del>FWCHLAFORMRECFCMEM</del>	4-Warning	System is running with memory lower than recommended. Current Memory: [dec]GB Recommended Memory: [dec]GB	System is running with memory lower than recommended. Please refer to release notes.	-	LOG_SID_NO_ACTION
<del>FWCPACRMKNOWNEVT</del>	4-Warning	Unknown event [dec] [dec]	Unknown event occurred.	-	LOG_SID_NO_ACTION
<del>FWCPACRMCMEDIACONEN</del>	5-Notice	Conversion of internal AP to bridge mode in progress: [chars]	The AP mode change steps will be executed once the AP completes day-0 initialization.	-	LOG_SID_NO_ACTION
<del>FWUADMIBKVFPRFDE</del>	3-Error	iosxe-binos-utils	User ID:[chars] - Failed to compute PRF mode (%u)	-	-
<del>FWUADMIBKVFPRFDE</del>	3-Error	iosxe-binos-utils	User ID:[chars] - Failed to compute PRF mode (%u)	-	-
<del>FWUADMIBKVFPRFSA</del>	3-Error	iosxe-binos-utils	User ID:[chars] - Failed to compute PRF mode (%u)	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EXFREE2EXMEMFREE	2-Critical	Free a non allocated ptr [hec] size [dec].	Trying to free a memory which not all of it marked as allocated.	mem	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
EXFREE2EXMEMFREE	2-Critical	Free a non allocated ptr [hec] size [dec].	Trying to free a memory which not all of it marked as allocated.	mem	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
EXFREE2EXMEMINIT	2-Critical	EXMEM [dec]: [chars]	The requested external memory allocator failed to be initialized.\n\ Reasons are not clear.	mem	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
EXFREE2EXMEMINIT	2-Critical	EXMEM [dec]: [chars]	The requested external memory allocator failed to be initialized.\n\ Reasons are not clear.	mem	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
EXFREE2EXMEMLOCK	2-Critical	[chars] detected error ptr [hec] size [dec].	Attempting to lock or unlock a memory location which was\n\ either already locked or unlocked.	mem	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
EXFREE2EXMEMLOCK	2-Critical	[chars] detected error ptr [hec] size [dec].	Attempting to lock or unlock a memory location which was\n\ either already locked or unlocked.	mem	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
EXFREE2EXMEMPARAM	2-Critical	Bad parameter [dec] when calling to the allocator utility	Illegal parameter is used when called to allocator. may represent \n\ data some corruption.	mem	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
EXFREE2EXMEMPARAM	2-Critical	Bad parameter [dec] when calling to the allocator utility	Illegal parameter is used when called to allocator. may represent \n\ data some corruption.	mem	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
EXFREE2EXMEMRESET	2-Critical	EXMEM [dec]: [chars]	The requested external memory allocator failed to be reset.\n\ Reasons are not clear.	mem	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
EXFREE2EXMEMRESET	2-Critical	EXMEM [dec]: [chars]	The requested external memory allocator failed to be reset.\n\ Reasons are not clear.	mem	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
EXFREE4EXMALLOCFAL	4-Warning	External memory allocation of [node]bytes failed from EXMEM [dec]	The requested memory allocation is not available from the specified\n\ memory pool. The current system configuration network environment or\n\ possibly a software error might have exhausted or fragmented the\n\ router's memory.	mem	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
EXFREE4EXMALLOCFAL	4-Warning	External memory allocation of [node]bytes failed from EXMEM [dec]	The requested memory allocation is not available from the specified\n\ memory pool. The current system configuration network environment or\n\ possibly a software error might have exhausted or fragmented the\n\ router's memory.	mem	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>EXPRESSETIMEOUT</del>	3-Error	[chars]	The system is unable to reset the configuration	firmware	LOG_STD_ACTION
<del>EXPRESSETIMEOUT</del>	5-Notice	[chars]	The configuration is reset and the system will now reboot	firmware	LOG_STD_ACTION
<del>EXPRESSTIMEOUT</del>	6-Information	[chars]	mode button pressed for more than 10Sec and startup config is present hence not reloading	firmware	LOG_NO_ACTION
<del>EXPRESSETIMEOUT</del>	6-Information	-	Express setup mode is now active	firmware	LOG_NO_ACTION
<del>EXPRESSETIMEOUT</del>	6-Information	-	Express setup mode is no longer active	firmware	LOG_NO_ACTION
EXPRESSION3BADTYPE	3-Error	Found data type [hec] in expression should be [chars] type	While evaluating an expression an operand was found with an unexpected\n\ datatype. Evaluation of this expression has been aborted.	snmp	"Copy the error message exactly as it appears and report it to\n\ your technical support representative."
EXPRESSION3FAILASSERT	3-Error	Assertion failed: [chars]	An operation within the Expression MIB subsystem encountered\n\ a data value that is out of range or of an unexpected value\n\ indicative of a logic error within the subsystem.	snmp	"Copy the error message exactly as it appears and report it to\n\ your technical support representative."
EXIASSIGNER3ERRSYNC	3-Error	\ Failed to sync tag[dec] to standby CME\n	-	-	-
EXIASSIGNER3ERRSYNC	3-Error	\ Failed to sync tag[dec] to standby CME\n	-	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
EXTASSIGNER3ERRSYNC2	3-Error	\ Failed to sync re-assign tag [dec] for [dec] to standby CME\n	-	-	-
EXTASSIGNER3ERRSYNC2	3-Error	\ Failed to sync re-assign tag [dec] for [dec] to standby CME\n	-	-	-
EXTASSIGNER3ERRTAG	3-Error	\ Invalid tag[dec]\n	-	-	-
EXTASSIGNER3ERRTAG	3-Error	\ Invalid tag[dec]\n	-	-	-
EXTASSIGNER3NOACIHDNE	3-Error	\ Failed to find the calling phone\n	-	-	-
EXTASSIGNER3NOACIHDNE	3-Error	\ Failed to find the calling phone\n	-	-	-
EXTASSIGNER3NOCB	3-Error	\ Failed to find the skinnyCB\n	-	-	-
EXTASSIGNER3NOCB	3-Error	\ Failed to find the skinnyCB\n	-	-	-
EXTASSIGNER3NOMEM	3-Error	\ Failed to malloc\n	-	-	-
EXTASSIGNER3NOMEM	3-Error	\ Failed to malloc\n	-	-	-
EXTASSIGNER3NULLPIR	3-Error	\ Null pointer [chars]:[dec]\n	-	-	-
EXTASSIGNER3NULLPIR	3-Error	\ Null pointer [chars]:[dec]\n	-	-	-
EXTASSIGNER6ASSIGNED	6-Information	\ Extension assignment successful for phone:SEP[chars]. New pool[dec]. \	Successfully assigned the pool	-	LOG_SID_NO_ACTION
EXTASSIGNER6ASSIGNED	6-Information	\ Extension assignment successful for phone:SEP[chars]. New pool[dec]. \	Successfully assigned the pool	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EXASCNRRUNASSCND	6-Information	\ Extension unassignment successful for phone:SEP[chars]. \ Unassigned pool[dec].\n	Successfully unassigned the pool	-	LOG_SID_NO_ACTION
EXASCNRRUNASSCND	6-Information	\ Extension unassignment successful for phone:SEP[chars]. \ Unassigned pool[dec].\n	Successfully unassigned the pool	-	LOG_SID_NO_ACTION
EZMNCIECDBEHOR	2-Critical	asr1k-ether-lc	Double bit ECC errors observed. NP (CC card) is going to be reloaded to recover	"ECC error observed on the NP device.Reset the NP Device."	"This error is usually self-correcting. If the problem persists
EZMNCIECDBEHOR	3-Error	asr1k-ether-lc	Single bit ECC error	"ECC error observed on the NP device.Reset the NP Device."	"This error is usually self-correcting. If the problem persists
EZMNCIECDBEHOR	3-Error	asr1k-ether-lc	Failed to bringup[chars]. Failure reason is[chars]	"Bringup of object(NP/Bay/Interface) has failed in EZMAN. This can be due to any hardware/software failures and can be a serious error"	"Restart the Linecard."
EZMNCIECDBEHOR	3-Error	asr1k-ether-lc	NP Counter Read Failed for Vlan %d %d	"NP VLAN statistics error."	"Continous MSG of these Events
EZMNCIECDBEHOR	5-Notice	asr1k-ether-lc	TCAM Full VLAN is not Able to add	"Rx Sync Failed for Interlaken	-
EZMNCIECDBEHOR	3-Error	asr1k-ether-lc	Invalid HW Part number(%d) and HW Revision(%d)	"HW Part number and revision read from the IDPROM are not showing up expected values which means the IDPROM is either corrupted or incorrectly programmed."	"Possible Hardware issue. Change the hardware."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>EZMAN_RMV2SEU_ERR</del>	2-Critical	asr1k-ether-lc	CASTOR FPGA[%d] version does not meet minimum required version. Read version : 0x%x	-	-
EZMAN_RMV2SEM_ERR	2-Critical	asr1k-ether-lc	CASTOR FPGA[%d] - SEU event has occurred. Event code: %d	-	-
<del>EZMAN_RMV2HOCKEVENT</del>	3-Error	asr1k-ether-lc	L2 Block Event Node:%s (0x%08X - Tree %d Instance %d)	"NP of L2 is generating Events."	"Continous MSG of these Events

## F to J

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>FALLBACK3</del> <del>APS</del> <del>command</del> <del>failed</del>	APS command sending failed	c7600-sip-200	"This is a internal software error. If this " "error happened while configuring APS try " "reconfiguring the interface. If the error " "persists or occurred during normal operation " "decode the traceback and " LOG_STD_ACTION	-	-
FALLBACK3CACHE_FULL	3-Error	Function name [chars]: Cache is full	Fallback cache has overflowed and unable to dump entries	-	"Increase the fallback cache size."
FALLBACK3CACHE_FULL	3-Error	Function name [chars]: Cache is full	Fallback cache has overflowed and unable to dump entries	-	"Increase the fallback cache size."
FALLBACK3INTERNAL_ERRR	3-Error	[chars]: Internal error.	An internal error occured.	-	LOG_STD_NO_ACTION
FALLBACK3INTERNAL_ERRR	3-Error	[chars]: Internal error.	An internal error occured.	-	LOG_STD_NO_ACTION



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
FALLBACK3MALLOC_FAIL	3-Error	[chars]: Memory allocation failed.	Allocation of memory failed. This is possibly due to the fact that system memory pool is exhausted.	-	LOG_SID_NO_ACTION
FALLBACK3MALLOC_FAIL	3-Error	[chars]: Memory allocation failed.	Allocation of memory failed. This is possibly due to the fact that system memory pool is exhausted.	-	LOG_SID_NO_ACTION
FALLBACK3NO_RIP_PORT	3-Error	Function name [chars]: No available RTP ports.	No available voice RTP ports were found.	-	LOG_SID_NO_ACTION
FALLBACK3NO_RIP_PORT	3-Error	Function name [chars]: No available RTP ports.	No available voice RTP ports were found.	-	LOG_SID_NO_ACTION
FALLBACK3-NO_STATS	3-Error	[chars]: No stats were returned.\n	No statistic information was returned with probe	-	LOG_SID_NO_ACTION
FALLBACK3-NO_STATS	3-Error	[chars]: No stats were returned.\n	No statistic information was returned with probe	-	LOG_SID_NO_ACTION
FALLBACK3PROBE_FAILURE	3-Error	A probe error to [node]occured - [chars]	A probe error occured. Possibly responder on remote router is not enabled or no machine is on specified IP	-	"Check the destination router."
FALLBACK3PROBE_FAILURE	3-Error	A probe error to [node]occured - [chars]	A probe error occured. Possibly responder on remote router is not enabled or no machine is on specified IP	-	"Check the destination router."
FALLBACK3RTR_CREATION_FAIL	3-Error	[chars]: Creation of probe failed. Return code [dec]	An RTR probe could no be created. This can cause inaccurate ICPIF values and cause VoIP calls to be hairpined when they should not	-	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
FAILBACK3RIR_CREATE_FAIL	3-Error	[chars]: Creation of probe failed. Return code [dec]	An RTR probe could no be created. This can cause inaccurate ICPIF values and cause VoIP calls to be hairpined when they should not	-	LOG_SID_NO_ACTION
FAILBACK3RIR_START_FAIL	3-Error	[chars]: probe could not be started. Return code [dec]	An RTR probe could no be started. This can cause inaccurate delay/loss/jitter and icpif values and cause VoIP calls to be hairpined when they should not	-	LOG_SID_NO_ACTION
FAILBACK3RIR_START_FAIL	3-Error	[chars]: probe could not be started. Return code [dec]	An RTR probe could no be started. This can cause inaccurate delay/loss/jitter and icpif values and cause VoIP calls to be hairpined when they should not	-	LOG_SID_NO_ACTION
FAILBACK3RIR_STATS_FAIL	3-Error	[chars]: Could not retrieve statistics from the probe. Return code [dec] \n	Could not retrieve RTR statistics from the probe. This can cause inaccurate ICPIF values and cause VoIP calls to be hairpined when they should not	-	LOG_SID_NO_ACTION
FAILBACK3RIR_STATS_FAIL	3-Error	[chars]: Could not retrieve statistics from the probe. Return code [dec] \n	Could not retrieve RTR statistics from the probe. This can cause inaccurate ICPIF values and cause VoIP calls to be hairpined when they should not	-	LOG_SID_NO_ACTION
FAILBACK3CACHE_OVERFLOW	4-Warning	Function name [chars]: Cache has overflowed.	Fallback cache has overflowed and dumped 1/4 of the entries.	-	"Increase the fallback cache size."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>FALLBACK</del> CACHE_OVERFLOW	4-Warning	Function name [chars]: Cache has overflowed.	Fallback cache has overflowed and dumped 1/4 of the entries.	-	"Increase the fallback cache size."
<del>FALLBACK</del> SABO_PROBE	5-Notice	A probe to [node] is [chars] - codec [chars] icpif [dec] loss [dec] delay [dec]	AVBO rtr probe status change.	-	"use the grace_period option to avoid transit error"
<del>FALLBACK</del> SABO_PROBE	5-Notice	A probe to [node] is [chars] - codec [chars] icpif [dec] loss [dec] delay [dec]	AVBO rtr probe status change.	-	"use the grace_period option to avoid transit error"
<del>ALICE</del> SIP_ALICE_RUNNING	5-Notice	A test probe is already running.	Only one test probe may run at a time.	-	"Wait until the first test probe is finished."
<del>ALICE</del> SIP_ALICE_RUNNING	5-Notice	A test probe is already running.	Only one test probe may run at a time.	-	"Wait until the first test probe is finished."
<del>FARM</del> SRM4NCS0WARN	4-Warning	dsp service dspfarm can not be configured for this card type.	There is C549 NM-HDV card configured for dspfarm service.\n\n Only one dspfarm card type is allowed.	-	"If C5510 card type dspfarm is desired then remove C549 NM-HDV dspfarm \n\n service and reconfigure dspfarm service for this card. "
<del>FARM</del> SRM4NCS0WARN	4-Warning	dsp service dspfarm can not be configured for this card type.	There is C549 NM-HDV card configured for dspfarm service.\n\n Only one dspfarm card type is allowed.	-	"If C5510 card type dspfarm is desired then remove C549 NM-HDV dspfarm \n\n service and reconfigure dspfarm service for this card. "
<del>FARM</del> SRM4NCS0WARN	4-Warning	dsp service dspfarm can not be configured for this card type.	There is C549 NM-HDV card configured for dspfarm service.\n\n Only one dspfarm card type is allowed.	-	"If C5510 card type dspfarm is desired then remove C549 NM-HDV dspfarm \n\n service and reconfigure dspfarm service for this card. "

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>FARM_DSPM_CARD_INSERT</del>	6-Information	dspfarm active calls on this card dsp [dec] channel [dec] will be dropped.	The card has been removed. Dspfarm active calls on this card\n\n will be dropped.	-	"No action is required."
<del>FARM_DSPM_CARD_INSERT</del>	6-Information	dspfarm active calls on this card dsp [dec] channel [dec] will be dropped.	The card has been removed. Dspfarm active calls on this card\n\n will be dropped.	-	"No action is required."
<del>FARM_DSPM_CARD_INSERT</del>	6-Information	dspfarm active calls on this card dsp [dec] channel [dec] will be dropped.	The card has been removed. Dspfarm active calls on this card\n\n will be dropped.	-	"No action is required."
<del>FARM_DSPM_CARD_INSERT</del>	6-Information	dspfarm card slot [dec] is inserted.	dspfarm card type is inserted into the slot.	-	"No action is required."
<del>FARM_DSPM_CARD_INSERT</del>	6-Information	dspfarm card slot [dec] is inserted.	dspfarm card type is inserted into the slot.	-	"No action is required."
<del>FARM_DSPM_CARD_INSERT</del>	6-Information	dspfarm card slot [dec] is inserted.	dspfarm card type is inserted into the slot.	-	"No action is required."
<del>FARM_DSPM_CARD_REMOVE</del>	6-Information	dspfarm card slot [dec] is removed.	dspfarm card type is removed from the slot.	-	"No action is required."
<del>FARM_DSPM_CARD_REMOVE</del>	6-Information	dspfarm card slot [dec] is removed.	dspfarm card type is removed from the slot.	-	"No action is required."
<del>FARM_DSPM_CARD_REMOVE</del>	6-Information	dspfarm card slot [dec] is removed.	dspfarm card type is removed from the slot.	-	"No action is required."
FASIBLK4CREATE_ERR	4-Warning	Fastblk pool creation error: [chars]	An unexpected error occurred while performing a fastblk memory\n\npool creation operation	slb	LOG_SID_RECUR_ACTION
FASIBLK4DEALLOC_ERR	4-Warning	Fastblk deallocation error: [chars]	An unexpected error occurred while performing a fastblk memory\n\ndeallocation operation	slb	LOG_SID_RECUR_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
FASTBLK-4GROW_ERR	4-Warning	Fastblk pool growth error: [chars]	An unexpected error occurred while performing a fastblk memory\n\npool growth operation	slb	LOG_SID_RECUR_ACTION
FASTBLK-4QUEUE_ERR	4-Warning	Fastblk queue error: [chars]	An unexpected error occurred while performing a fastblk memory\n\nqueue operation	slb	LOG_SID_RECUR_ACTION
FASTBLK-4SHRINK_ERR	4-Warning	Fastblk pool shrink error: [chars]	An unexpected error occurred while performing a fastblk memory\n\npool shrink operation	slb	LOG_SID_RECUR_ACTION
FASTBLK-4WARNING	4-Warning	Unexpected condition: [chars]	An unexpected condition was detected while performing a fastblk memory\n\noperation	slb	LOG_SID_RECUR_ACTION
FASTHELLO-2FH_DOWN	2-Critical	Fast-Hello interface [chars] lost dual-active detection capability\n	FASTHELLO STATUS CHANGED to DOWN with more detail status	cat4k-vss	LOG_SID_NO_ACTION
<del>FASTHELLO-3MNGD_CHUNK_ERR</del>	3-Error	Unable to create managed chunk\[chars]\	Unable to create the specified watched boolean due to unknown reasons	cat4k-vss	LOG_SID_NO_ACTION
<del>FASTHELLO-3MNGD_QUEUE_ERR</del>	3-Error	Unable to create watched queue \[chars]\	Unable to create the specified watched queue because of unknown reasons	cat4k-vss	LOG_SID_NO_ACTION
<del>FASTHELLO-3MNGD_REGISTRY_ADDER</del>	3-Error	Failure in adding to [chars] registry	Could not add a function to the registry	cat4k-vss	LOG_SID_NO_ACTION
<del>FASTHELLO-5FH_DUAL_ACTIVE_CAP</del>	5-Notice	Fast-Hello interface [chars] became dual-active detection capable\n	FASTHELLO STATUS became dual-active detection capable with more detail status	cat4k-vss	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FASTHELLO-5-FH_UP	5-Notice	Fast-Hello interface [chars] status changed to link up\n	FASTHELLO STATUS CHANGED to UP with more detail status	cat4k-vss	LOG_SID_NO_ACTION
FASTHELLO-6-HBADCONG	6-Information	Fast-hello PDU received on unconfigured interface. Peer_slot: [dec]Peer_port: [dec]	Informational messages regarding the configuration of the dual-active fast-hello interface	cat4k-vss	"Investigate and correct this misconfiguration"
FASTHELLO-6-HDFDOMAN	6-Information	Fast-hello PDU received from different domain. Peer_slot: [dec]Peer_port: [dec]	Informational messages regarding the configuration of the dual-active fast-hello interface	cat4k-vss	"Investigate and correct this misconfiguration"
FASTHELLO-6-HSAMESWICH	6-Information	Fast-hello PDU received from interface configured on same switch. Slot: [dec]Port: [dec]	Informational messages regarding the configuration of the dual-active fast-hello interface	cat4k-vss	"Investigate and correct this misconfiguration"
FASTHELLO-6-MISNMATCH	6-Information	Local switch protocol version :[dec] Peer switch protocol version : [dec]	Informational messages regarding the software versions running on the switch	cat4k-vss	LOG_STD_ACTION
IBCCREDUM-3-NOMEMORY	3-Error	No Memory or buffer for [chars] to be send to [dec]	Sufficient memory was unavailble for Router Shelf to send any command or \n\ acknowledgment to the feature boards.	-	LOG_STD_ACTION
FDDI-1-NOMEMORY	1-Alert	msgtxt_nomemory	-	mid-fddi	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
FDDI-3-BADSLOT	3-Error	Unit [dec] Slot [dec] does not exist.	The main processor detects an invalid slot location for one of the\n\ network interface cards. This should never happen.	mid-fddi	"Call your technical support representative about obtaining a\n\ replacement card."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
FDDI-3-BADUNIT	3-Error	msgtxt_badunit	This error message is displayed when the system cannot find the chipset registers where it expects them to be. This is most likely a hardware error.	mid-fddi	LOGS_IDSHTTECH_ACTION
FDDI-3-FDDIFAIL	3-Error	Interface [chars] [chars] [chars] = [hex]	The FDDI interface failed.	mid-fddi	"Save the output of the error message and call your technical support representative for assistance."
FDDI-3-FDDIFAIL2	3-Error	Interface [chars] [chars] [chars] = [hex] [chars] = [hex]	The FDDI interface failed. This is the second line of the preceding FDDIFAIL message. This line contains debug information.	mid-fddi	"Save the output of the error message and call your technical support representative for assistance."
FDDI-3-NOCAM	3-Error	Unit [dec] No CAM exists for this interface.	A hardware or software error occurred.	mid-fddi	"Copy the error message exactly as it appears and report it to your technical support representative."
FEC_ISSU-3-BUFFER	3-Error	FEC ISSU client failed to get buffer for message error [dec]	FEC ISSU client failed to get buffer for building a negotiation message. Hence it can send the negotiation message to the standby unit. When there is a problem in the negotiaiton the standby unit can not be brought up.	L2	"show logging and show checkpoint client"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
FEC_ISSU-3-CAPABILITY	3-Error	FEC ISSU client [chars]	FEC SWITCH ISSU client observed an error during capability negotiaiton. When this error happens there is a mismatch between the client capability between the active and standby unit.	L2	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
FEC_ISSU-3-INIT	3-Error	FEC ISSU client initialization failed at [chars] error [chars]	FEC ISSU client could not be initialzied this will cause catstrophic failure when ISSU upgrade or downgrade is performed.	L2	LOGSIDSHTTECHACTION
FEC_ISSU-3-MSG_NOT_OK	3-Error	FEC ISSU client message [dec] is not compatible	FEC ISSU client received an incompatible message from the peer unit. Since the message is not compatible it can be processed by this unit	L2	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
FEC_ISSU-3-MSG_SIZE	3-Error	FEC ISSU client failed to get the message size for message [dec]	FEC ISSU client failed to calculate message size for the message specified. The OIR ISSU client will not be able to send message to the standby unit.	L2	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
FEC_ISSU-3-POLICY	3-Error	FEC ISSU client message type [dec] is [chars]	FEC ISSU client received an message type which it does not support. The policy is applied to make the session compatible.	L2	"show issu session <client_id>"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FEC_ISSU3SEND_FAILED	3-Error	FEC ISSU client failed to send a negotiation message error [dec]	FEC ISSU client could not send a session negotiation message to the peer. When there is a problem in the negotiation the standby unit can not be brought up.	L2	"show logging and show checkpoint client"
FEC_ISSU3-SESSION	3-Error	FEC ISSU client [chars]	FEC ISSU client observed an error during a session negotiation with the peer unit. When there is a problem with the session the standby unit can not be brought up.	L2	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
FEC_ISSU3SESSION_UNREGISTER	3-Error	FEC ISSU client failed to unregister session information. Error: [dec] [chars]	The FEC ISSU client failed to unregister session information.	L2	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
FEC_ISSU3TRANSFORM	3-Error	FEC ISSU client [chars] transform failed error [chars]	FEC ISSU client could not transform the message. If the transmit transformation failed it means that the checkpoint message can not be sent to the standby unit. If the receive transformation failed it means that the checkpoint message can not be applied on the standby unit. In both cases the FEC state will not be identical with the active unit.	L2	"show issu session <client_id> and " "show issu negotiated version <session_id>"
HPF_WRC3ONLINE_INTERRUPT	3-Error	[node] errors in the last [node] seconds	Accumulation of Cavium hardware-generated error	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>FWK3-0-NOOP</del>	3-Error	-	Aborting due to too many Cavium hardware-generated errors	cpp-ucode	LOG_STD_ACTION
FGPT3-NCNSSIENT_FGPT	3-Error	[container fingerprint: [chars]] [nvram fingerprint: [chars]] [chars]	Fingerprint inconsistency is detected between the license file in this VM and nvram configuration	virt-infra	LOG_SID_NO_ACTION
FGPT-6-EVENT	6-Information	[container fingerprint: [chars]] [nvram fingerprint: [chars]] [chars]	Normal container fingerprint event in system initialization	virt-infra	LOG_SID_NO_ACTION
FHRP-3-ERROR	3-Error	Internal error [chars]	An internal software error occurred.	fhrp	LOG_STD_ACTION
FHRP-3-ERROR	3-Error	Internal error [chars]	An internal software error occurred.	fhrp	LOG_STD_ACTION
FHRP-4-WARN	4-Warning	Internal warning [chars]	An internal software warning occurred.	fhrp	LOG_STD_ACTION
FHRP-4-WARN	4-Warning	Internal warning [chars]	An internal software warning occurred.	fhrp	LOG_STD_ACTION
FHRP-6-INFO	6-Information	Internal info [chars]	An internal software information message occurred.	fhrp	LOG_STD_ACTION
FHRP-6-INFO	6-Information	Internal info [chars]	An internal software information message occurred.	fhrp	LOG_STD_ACTION
H3H3H3-CLASSIFY_FAIL	3-Error	Dataplane FHS classification error for interface [chars]	Cisco internal software error. The dataplane was unable to complete processing of FHS Snoop due to a classification failure. This is likely due to a data initialization error	cpp-ucodekeyword:fhs	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FHS-3-FHS_FILTER_FAIL	3-Error	Dataplane FHS filter error for interface [chars]	Cisco internal software error. The FHS pktsb shouldn't be set in use before. This is likely due to a data initialization error	cpp-ucodekeyword: fhs	LOG_STD_ACTION
FHS-3-FHS_INIT_FAIL	3-Error	Dataplane FHS init error for [chars]	Cisco internal software error. This is likely due to a dataplane memory exhaust	cpp-ucodekeyword: fhs	LOG_STD_ACTION
FHS-3-FHS_MISS_ACTION_FAIL	3-Error	Dataplane FHS miss action error for interface [chars]	Cisco internal software error. The dataplane was unable to complete processing of FHS Snoop due to a invalid miss action. This is likely due to a data initialization error	cpp-ucodekeyword: fhs	LOG_STD_ACTION
FIB-2-DFIBSWITCH	2-Critical	Error trying to turn on Distributed CEF without CEF on	INTERNAL_ERROR	DFIBDISCOMPONENT	LOG_STD_ACTION
FIB-2-DFIBSWITCH	2-Critical	Error trying to turn on Distributed CEF without CEF on	INTERNAL_ERROR	DFIBDISCOMPONENT	LOG_STD_ACTION
FIB-2-OVERLENGTH_XDR	2-Critical	Overlength CEF XDR message - len [dec] > [dec] from [chars]	An internal software error occurred preventing the sending of an CEF XDR message.	DFIBDISCOMPONENT	LOG_STD_ACTION
FIB-2-OVERLENGTH_XDR	2-Critical	Overlength CEF XDR message - len [dec] > [dec] from [chars]	An internal software error occurred preventing the sending of an CEF XDR message.	DFIBDISCOMPONENT	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FIB-2-FIBDISABLE	2-Critical	Fatal error slot [chars]: [chars]	An internal software error has occurred because of an IPC problem between the LC and the RP. CEF switching has been disabled on the specified slot.	<del>P4</del> <b>FIBDISCOMPONENT</b>	"Enter the <bold>clear cef linecard [slot no]<nobold> command " "then check the status of the line card by entering the " "<bold>show cef linecard<nobold> command. If the status shows " "that the line card is still disabled disable and re-enable DCEF " "and check the status of the line card again. " LOG_SID_RECUR_ACTION
FIB-2-FIBDISABLE	2-Critical	Fatal error slot [chars]: [chars]	An internal software error has occurred because of an IPC problem between the LC and the RP. CEF switching has been disabled on the specified slot.	<del>P4</del> <b>FIBDISCOMPONENT</b>	"Enter the <bold>clear cef linecard [slot no]<nobold> command " "then check the status of the line card by entering the " "<bold>show cef linecard<nobold> command. If the status shows " "that the line card is still disabled disable and re-enable DCEF " "and check the status of the line card again. " LOG_SID_RECUR_ACTION
FIB-2-FIBDOWN	2-Critical	CEF has been disabled due to a low memory condition. It can be re-enabled by configuring \ip cef [distributed]\	CEF was disabled because of a low memory condition.	<del>P4</del> <b>FIBDISCOMPONENT</b>	"Reduce other system activity to ease memory demands. If conditions " "warrant upgrade the RP so that it has more DRAM."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
FIB-2-FIBDOWN	2-Critical	CEF has been disabled due to a low memory condition. It can be re-enabled by configuring \ip cef [distributed]\	CEF was disabled because of a low memory condition.	F4BDDISCOMPONENT	"Reduce other system activity to ease memory demands. If conditions " "warrant upgrade the RP so that it has more DRAM."
FIB-2-FIBFEATSESINIT	2-Critical	Error initializing CEF repop feature session queue	Initialization of a CEF feature session queue could not be accomplished because of a low memory condition.	F4BDDISCOMPONENT	"Reduce other system activity to ease memory demands. If conditions " "warrant upgrade to a larger memory configuration."
FIB-2-FIBFEATSESINIT	2-Critical	Error initializing CEF repop feature session queue	Initialization of a CEF feature session queue could not be accomplished because of a low memory condition.	F4BDDISCOMPONENT	"Reduce other system activity to ease memory demands. If conditions " "warrant upgrade to a larger memory configuration."
FIB-2-IDBQINIT	2-Critical	Error initializing CEF IDB queue	Initialization of the CEF IDB queue could not be accomplished because of a low memory condition.	F4BDDISCOMPONENT	"Reduce other system activity to ease memory demands. If conditions " "warrant upgrade to a larger memory configuration."
FIB-2-IDBQINIT	2-Critical	Error initializing CEF IDB queue	Initialization of the CEF IDB queue could not be accomplished because of a low memory condition.	F4BDDISCOMPONENT	"Reduce other system activity to ease memory demands. If conditions " "warrant upgrade to a larger memory configuration."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FIB-2-LINECARDINIT	2-Critical	Error initializing CEF Linecard queue	Initialization of the CEF linecard queue could not be accomplished because of a low memory condition.	P4/B/D/DIS/COMPONENT	"Reduce other system activity to ease memory demands. If conditions " "warrant upgrade to a larger memory configuration."
FIB-2-LINECARDINIT	2-Critical	Error initializing CEF Linecard queue	Initialization of the CEF linecard queue could not be accomplished because of a low memory condition.	P4/B/D/DIS/COMPONENT	"Reduce other system activity to ease memory demands. If conditions " "warrant upgrade to a larger memory configuration."
FIB-2-XDRINIT	2-Critical	Error initializing CEF xdr chunks	Initialization of the CEF xdr chunks could not be accomplished because of a low memory condition.	P4/B/D/DIS/COMPONENT	"Reduce other system activity to ease memory demands. If conditions " "warrant upgrade to a larger memory configuration."
FIB-2-XDRINIT	2-Critical	Error initializing CEF xdr chunks	Initialization of the CEF xdr chunks could not be accomplished because of a low memory condition.	P4/B/D/DIS/COMPONENT	"Reduce other system activity to ease memory demands. If conditions " "warrant upgrade to a larger memory configuration."
FIB-3-FIBBADXDRSLOT	3-Error	Invalid XDR slot. Type/len/slot [dec]/[dec]/[chars]. XDR at 0x[node]x	P4/B/N/INTERNAL_ERROR	P4/B/D/DIS/COMPONENT	LOG_STD_ACTION
FIB-3-FIBBADXDRSLOT	3-Error	Invalid XDR slot. Type/len/slot [dec]/[dec]/[chars]. XDR at 0x[node]x	P4/B/N/INTERNAL_ERROR	P4/B/D/DIS/COMPONENT	LOG_STD_ACTION
FIB-3-FIBPENDINGLIST	3-Error	Error queueing interface [chars] to CEF pending event list.	Queueing an interface to the CEF pending up event list failed	P4/B/D/DIS/COMPONENT	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FIB-3-FIBPENDINGLIST	3-Error	Error queuing interface [chars] to CEF pending event list.	Queueing an interface to the CEF pending up event list failed	F4BDDISCOMPONENT	LOG_STD_ACTION
FIB-3-FIBSBINIT	3-Error	Error initializing [chars] subblock data structure. [chars]	Initialization of the specified CEF subblock data structure could not be accomplished.	F4BDDISCOMPONENT	LOG_STD_ACTION
FIB-3-FIBSBINIT	3-Error	Error initializing [chars] subblock data structure. [chars]	Initialization of the specified CEF subblock data structure could not be accomplished.	F4BDDISCOMPONENT	LOG_STD_ACTION
FIB-3-FIBSBNOFN	3-Error	Missing [chars] subblock [chars] function for [chars]	Functions for distributing this subblock are missing from the image.	F4BDDISCOMPONENT	LOG_STD_ACTION
FIB-3-FIBSBNOFN	3-Error	Missing [chars] subblock [chars] function for [chars]	Functions for distributing this subblock are missing from the image.	F4BDDISCOMPONENT	LOG_STD_ACTION
FIB-3-FIBXDRLN	3-Error	Invalid XDR length. Type [dec][chars]. XDR/buffer len [dec]/[dec]	F4BINTERNALERRCR	F4BDDISCOMPONENT	LOG_STD_ACTION
FIB-3-FIBXDRLN	3-Error	Invalid XDR length. Type [dec][chars]. XDR/buffer len [dec]/[dec]	F4BINTERNALERRCR	F4BDDISCOMPONENT	LOG_STD_ACTION
FIB-3-INVALIDSTATE	3-Error	Slot [chars] in invalid transition from [chars] to [chars]	An internal software error occurred. Linecard is in incorrect state	F4BDDISCOMPONENT	LOG_STD_ACTION
FIB-3-INVALIDSTATE	3-Error	Slot [chars] in invalid transition from [chars] to [chars]	An internal software error occurred. Linecard is in incorrect state	F4BDDISCOMPONENT	LOG_STD_ACTION
FIB-3-MAC_ACCT	3-Error	[chars]: [chars]	F4BINTERNALERRCR	F4BDDISCOMPONENT	LOG_STD_ACTION
FIB-3-MAC_ACCT	3-Error	[chars]: [chars]	F4BINTERNALERRCR	F4BDDISCOMPONENT	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
FIB-3-PREC_ACCT	3-Error	[chars]: [chars]	<b>P4FB_NIERNAL_ERROR</b>	<b>P4FB_IDDISCOMPONENT</b>	LOG_STD_ACTION
FIB-3-PREC_ACCT	3-Error	[chars]: [chars]	<b>P4FB_NIERNAL_ERROR</b>	<b>P4FB_IDDISCOMPONENT</b>	LOG_STD_ACTION
FIB-4-FIBCBLK	4-Warning	Missing cef table for tableid [dec] during [chars] event	<b>P4FB_NIERNAL_ERROR</b>	<b>P4FB_IDDISCOMPONENT</b>	LOG_STD_ACTION
FIB-4-FIBCBLK	4-Warning	Missing cef table for tableid [dec] during [chars] event	<b>P4FB_NIERNAL_ERROR</b>	<b>P4FB_IDDISCOMPONENT</b>	LOG_STD_ACTION
FIB-4-FIBEVENT	4-Warning	Invalid event. Type [chars] event [dec]	<b>P4FB_NIERNAL_ERROR</b>	<b>P4FB_IDDISCOMPONENT</b>	LOG_STD_ACTION
FIB-4-FIBEVENT	4-Warning	Invalid event. Type [chars] event [dec]	<b>P4FB_NIERNAL_ERROR</b>	<b>P4FB_IDDISCOMPONENT</b>	LOG_STD_ACTION
FIB-4-FIBLCTUNSEQ	4-Warning	[chars] Error Initializing/Updating Linecard Tunnel Configuration	Configuration of a Tunnel on this linecard may not have been successful because of an internal software error.	<b>P4FB_IDDISCOMPONENT</b>	"Reconfigure the Tunnel concerned. If problem persists copy the message " "exactly as it appears and report it to your technical support " "representative."
FIB-4-FIBLCTUNSEQ	4-Warning	[chars] Error Initializing/Updating Linecard Tunnel Configuration	Configuration of a Tunnel on this linecard may not have been successful because of an internal software error.	<b>P4FB_IDDISCOMPONENT</b>	"Reconfigure the Tunnel concerned. If problem persists copy the message " "exactly as it appears and report it to your technical support " "representative."
FIB-4-FIBSPECIALPREFIX	4-Warning	Invalid Special Prefix Type. Type [dec]	<b>P4FB_NIERNAL_ERROR</b>	<b>P4FB_IDDISCOMPONENT</b>	LOG_STD_ACTION
FIB-4-FIBSPECIALPREFIX	4-Warning	Invalid Special Prefix Type. Type [dec]	<b>P4FB_NIERNAL_ERROR</b>	<b>P4FB_IDDISCOMPONENT</b>	LOG_STD_ACTION
FIB-4-FIBXDRINV	4-Warning	Invalid format. [chars] [chars] [dec]	<b>P4FB_NIERNAL_ERROR</b>	<b>P4FB_IDDISCOMPONENT</b>	LOG_STD_ACTION
FIB-4-FIBXDRINV	4-Warning	Invalid format. [chars] [chars] [dec]	<b>P4FB_NIERNAL_ERROR</b>	<b>P4FB_IDDISCOMPONENT</b>	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FB6FIBLCTUNDELSEQ	6-Information	Update received on a linecard for a deleted tunnel[chars] -	An update was received on a linecard for a tunnel that has already been deleted and the update was ignored.	F4FBDDISCOMPONENT	LOG_SID_NO_ACTION
FB6FIBLCTUNDELSEQ	6-Information	Update received on a linecard for a deleted tunnel[chars] -	An update was received on a linecard for a tunnel that has already been deleted and the update was ignored.	F4FBDDISCOMPONENT	LOG_SID_NO_ACTION
FILESYS_RFS-3-IPC	3-Error	[chars] [chars]: msg_type [[dec]] sub_type [[dec]]: IPC error [[chars]]	RFS operation failed due to an IPC error.	-	-
FILESYS_RFS-3-REQ_TMOU	4-Warning	Timeout has occurred while executing the RFS request on file [chars] [[dec]].	A RFS request is sent to server from the client. While executing the request on the server side timeout has occurred at the client side.	-	LOG_SID_NO_ACTION
FILESYS-3-FLASH	3-Error	[chars] [chars] error [dec]	A file system error has occurred.	-	LOG_SID_SH_TECH_ACTION
FILESYS-3-IPC	3-Error	[chars] [chars]: IPC error [[chars]]	RFS operation failed due to an IPC error.	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
FILESYS-4-CLPDINT	4-Warning	Management interrupts are [chars] for pcmcia device in socket [dec]. [chars]	A faulty PCMCIA flash device might be generating spurious insert or remove interrupts continuously. The pcmcia controller will be set temporarily to disable interrupt generation and will be reenabled after a few seconds. This is to avoid storming CPU with spurious interrupts. If the alternate pcmcia device is	-	"Replace the pcmcia flash device with an alternate one"
FILESYS-4-RCSF	4-Warning	[chars] [dec] <[chars]>	A Running config sync file error has occurred.	-	LOG_SID_SHI_TECH_ACTION
FILESYS-5-CFLASH	5-Notice	Compact flash card [chars] [chars]	A file system's status has changed. Follow any instructions provided with the message.	-	-
FILESYS-5-DEV	5-Notice	PCMCIA flash card [chars] [chars]	A file system's status has changed. Follow any instructions provided with the message.	-	LOG_SID_NO_ACTION
FILESYS-5-IFLASH	5-Notice	Internal Flash [chars] [chars]	A file system's status has changed. Follow any instructions provided with the message.	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FILESYS-5-MISMATCH	5-Notice	[chars] device programming algorithm mismatch detected reformat is recommended	The flash device programming algorithm written to the device when the flash was formatted is different from what the current running software detected. A reformat of the flash device will solve the problem.	-	LOG_STD_NO_ACTION
FILESYS-5-UNKNDEV	5-Notice	Unknown device [chars] [chars]	A file system's status has changed. Follow any instructions provided with the message.	-	LOG_STD_NO_ACTION
<del>HEMNCADMRCOMED</del>	5-Notice	iosxe-binos-utils	Merged logs generation completed.	"Notification to user that merged logs are generated"	"Go to bootflash and view the merged logs"
<del>HEMNCADMRCRAHR</del>	3-Error	iosxe-binos-utils	Error in[chars]	APFilter regular expression error	Recreate regular expression correctly
FILTER3EWLC_GEN_ERR	3-Error	iosxe-binos-utils	Error in[chars]	General Wireless LAN Controller Error Message.	LOG_STD_ACTION
<del>HEMNCADMRCUPDMN</del>	4-Warning	iosxe-binos-utils	Warning:[chars]	APfilter priorities are overridden	-
FLASHCHECKDISKQUOTA	3-Error	iosxe-binos-utils	Flash disk quota exceeded [free space is %d kB] - Please clean up files on[chars].	"The remaining free space on the flash disk is below the recommended threshold of at least 30 percent of the installed RP memory. This limits the system from core files necessary to root cause critical system faults."	"Please remove unneeded files from flash device. Any core files under the core directory should be reported and then deleted."
FLASHCHECKFLASHISLE	3-Error	iosxe-binos-utils	Detected Flash issues. Please issue the[chars] command at your earliest convenience.***	"eUSB failure is detected	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>FLASH-3-USBERR</del>	3-Error	iosxe-binos-utils	Detected Flash issues. Proceeding with[chars] soft-error recovery. ***	"eUSB failure is detected	-
FLASH-3-CISERR	3-Error	Error reading cis of Device [dec] : [dec] bytes read instead of [dec] bytes	Error was detected in reading the cis of device.	high-flash	"Report this error to your technical support representative."
FLASH-3-DEVERR	3-Error	Error accessing the device : Device number = [dec] Error number = [dec]	Error was detected in accessing the device.	high-flash	"Report this error to your technical support representative."
FLASH-4-CLPDINT	4-Warning	Management interrupts are [chars] for pcmcia device in socket [dec]. [chars]	A faulty PCMCIA flash device might be generating spurious insert or remove interrupts continuously. The pcmcia controller will be set temporarily to disable interrupt generation and will be reenabled after a few seconds. This is to avoid storming CPU with spurious interrupts. If the alternate pcmcia device is	-	"Replace the pcmcia flash device with an alternate one"
FLASH-4-SIMM	4-Warning	System Flash Simms unequal. Simm1: [dec]M Simm2: [dec]M	The System has detected an unsupported flash configuration.	-	"Replace Flash Simms with equal sizes or remove Simm from System " "Flash Slot two."
<del>HEXDNDNCRICLDPD</del>	1-Alert	AIM VOICE at slot [dec] receives data from incorrect DSP-ID [dec].	The DSP ID provided by FPGA for download is not valid.	-	" Call your technical support representative for assistance."
<del>HEXDNDNCRICLDPD</del>	1-Alert	AIM VOICE at slot [dec] receives data from incorrect DSP-ID [dec].	The DSP ID provided by FPGA for download is not valid.	-	" Call your technical support representative for assistance."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HEX_DNLD_RING_DESCRIPTOR</del>	1-Alert	No more ring descriptors available on slot [dec] dsp [dec].	The dspfw dnld driver cannot queue messages upto the egress queue for FPGA to transmit.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative. Reset the DSP's on this port \n\ module."
<del>HEX_DNLD_RING_DESCRIPTOR</del>	1-Alert	No more ring descriptors available on slot [dec] dsp [dec].	The dspfw dnld driver cannot queue messages upto the egress queue for FPGA to transmit.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative. Reset the DSP's on this port \n\ module."
<del>HEX_DNLD_PCI_MEMORY</del>	1-Alert	VPM [dec]/[dec] PCI memory unavailable.	The router or access server could not allocate memory for the\n\ descriptors.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
<del>HEX_DNLD_PCI_MEMORY</del>	1-Alert	VPM [dec]/[dec] PCI memory unavailable.	The router or access server could not allocate memory for the\n\ descriptors.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
FLEX_DNLD-1-TOOBIG	1-Alert	[chars] packetsize [dec] too big.	A packet greater than the 264 bytes received on this interface.	-	"The system should recover. No action is required.\n\ \n\ If the problem reoccurs it indicates an error that might be\n\ related to data traffic patterns. Copy the error message exactly as it\n\ appears and report it to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FLEX_DNLD-I-TOOBIG	1-Alert	[chars] packetsize [dec] too big.	A packet greater than the 264 bytes received on this interface.	-	"The system should recover. No action is required.\n\n If the problem reoccurs it indicates an error that might be\n\n related to data traffic patterns. Copy the error message exactly as it\n\n appears and report it to your technical support representative."
<del>HEX_DNLD-I-ERR_ANALYZE</del>	3-Error	Error analyzing the device in slot [dec].	The Port module in this slot could not be recognized.	-	"Power down reinsert Port Module and reboot.\n\n If message recurs call your technical support representative for\n\n assistance."
<del>HEX_DNLD-I-ERR_ANALYZE</del>	3-Error	Error analyzing the device in slot [dec].	The Port module in this slot could not be recognized.	-	"Power down reinsert Port Module and reboot.\n\n If message recurs call your technical support representative for\n\n assistance."
<del>HEX_DNLD-I-ERR_FW_DNLD</del>	3-Error	DSP firmware download fails for slot [dec] dsp_id [dec]	Error initializing the DSP with the application firmware.	-	" Power down reinsert Port Module and reboot.\n\n If message recurs call your technical support representative for\n\n assistance."
<del>HEX_DNLD-I-ERR_FW_DNLD</del>	3-Error	DSP firmware download fails for slot [dec] dsp_id [dec]	Error initializing the DSP with the application firmware.	-	" Power down reinsert Port Module and reboot.\n\n If message recurs call your technical support representative for\n\n assistance."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HEXDNDNOIRFWAEND</del>	3-Error	No DSP firmware download invoked for slot [dec] no DSPs on the card	No DSP on the card.	-	"Plug in DSP on the Network Module"
<del>HEXDNDNOIRFWAEND</del>	3-Error	No DSP firmware download invoked for slot [dec] no DSPs on the card	No DSP on the card.	-	"Plug in DSP on the Network Module"
<del>HEXDRMBIDMCONNECT</del>	3-Error	failed to connect voice-port [dec]/[dec]/[dec] to dsp_channel[dec]/[dec]/[dec]	TDM connection between Analog/VWIC and the DSP has failed	c2800orc3800	LOG_STD_ACTION
<del>HEXDRMBIDMCONNECT</del>	3-Error	failed to connect voice-port [dec]/[dec]/[dec] to dsp_channel[dec]/[dec]/[dec]	TDM connection between Analog/VWIC and the DSP has failed	c2800orc3800	LOG_STD_ACTION
<del>HEXDRVNSIPRECODEC</del>	3-Error	codec [chars] is not supported on dsp [dec]/[dec]	Call failed due to the dsp does not support the codec.	PVDM3	"Check dsp capability and make the call on supported dsp"
<del>HEXDRVNSIPRECODEC</del>	3-Error	codec [chars] is not supported on dsp [dec]/[dec]	Call failed due to the dsp does not support the codec.	PVDM3	"Check dsp capability and make the call on supported dsp"
<del>HEXDRMVCBUPDOWN</del>	5-Notice	Channel Bank [chars] state is [chars]	Channel Bank status has been changed	guido	"See if the voice ports in the channel bank are UP"
<del>HEXDRMVCBUPDOWN</del>	5-Notice	Channel Bank [chars] state is [chars]	Channel Bank status has been changed	guido	"See if the voice ports in the channel bank are UP"
<del>HEXDRMOUTCHRESOURCES</del>	5-Notice	[chars]	Flex DSPRM temporarily fail to allocate a DSP for this call. A oversubscription has happened and the current free DSP MIPS/Credits are not sufficient to admit a new call.	hdv2orpvdm3	"Check availability of router DSP resource" " and DSP sharing configurations"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HEXDSRM4DIORESURCS</del>	5-Notice	[chars]	Flex DSPRM temporarily fail to allocate a DSP for this call. A oversubscription has happened and the current free DSP MIPS/Credits are not sufficient to admit a new call.	hdv2orpvdm3	"Check availability of router DSP resource" " and DSP sharing configurations"
<del>HEXDSRM5IDM_SLOT</del>	5-Notice	voice channel is being shared from slot [dec]. Configure network-clock-participate slot [dec]	Configure network-clock-participate slot for sharing DSPs	c2800orc3800	LOG_STD_ACTION
<del>HEXDSRM5IDM_SLOT</del>	5-Notice	voice channel is being shared from slot [dec]. Configure network-clock-participate slot [dec]	Configure network-clock-participate slot for sharing DSPs	c2800orc3800	LOG_STD_ACTION
<del>HEXDSRM6DSP_USAGE</del>	6-Information	DSP [chars] usage has reached [dec]%%	Usage of DSP resources has reached a certain percentage.	pvdm3	"Examine whether or not enough " "DSP resources are reserved."
<del>HEXDSRM6DSP_USAGE</del>	6-Information	DSP [chars] usage has reached [dec]%%	Usage of DSP resources has reached a certain percentage.	pvdm3	"Examine whether or not enough " "DSP resources are reserved."
<del>HEXMPXN4EJCONCT</del>	4-Warning	[chars]	FlexVPN session failed to come up FlexVPN is stuck in a state waiting for an event posting a disconnect message to recover.	-	""
<del>HEXMPXN4EJCONCT</del>	4-Warning	[chars]	FlexVPN session failed to come up FlexVPN is stuck in a state waiting for an event posting a disconnect message to recover.	-	""



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HEXP</del> EXPNCONCDOWN	6-Information	[chars]	FlexVPN connection is being closed. The IPsec and IKE security associations will also be brought down along with it.	-	""
<del>HEXP</del> EXPNCONCDOWN	6-Information	[chars]	FlexVPN connection is being closed. The IPsec and IKE security associations will also be brought down along with it.	-	""
<del>HEXP</del> EXPNCONCDUP	6-Information	[chars]	FlexVPN connection is up for the client mentioned. Both IPsec and IKE security Associations are up now.	-	""
<del>HEXP</del> EXPNCONCDUP	6-Information	[chars]	FlexVPN connection is up for the client mentioned. Both IPsec and IKE security Associations are up now.	-	""
HOWMONALERT_CRCLR	1-Alert	[[chars]]: SRC_P <del>nt</del> SRC_POR <del>int</del> DST_P <del>nt</del> DST_POR <del>int</del> [chars][chars] [chars] [chars]	Generated when the Flow monitoring threshold has gone below the configured limit and the condition is being cleared	flomon	"NA"
HOWMONALERT_CRSET	1-Alert	[[chars]]: SRC_P <del>nt</del> SRC_POR <del>int</del> DST_P <del>nt</del> DST_POR <del>int</del> [chars][chars] [chars] [chars]	Generated when the Flow monitoring threshold has crossed the configured limit and the condition is being set	flomon	"NA"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HOWMON#AHR#RCLER</del>	2-Critical	[[chars]]: SRC_P[nd]SRC_POR[nd] DST_P[nd]DST_POR[nd] [chars][chars] [chars] [chars]	Generated when the Flow monitoring threshold has gone below the configured limit and the condition is being cleared	flomon	"NA"
<del>HOWMON#AHR#RCSRSET</del>	2-Critical	[[chars]]: SRC_P[nd]SRC_POR[nd] DST_P[nd]DST_POR[nd] [chars][chars] [chars] [chars]	Generated when the Flow monitoring threshold has crossed the configured limit and the condition is being set	flomon	"NA"
<del>HOWMON#FLOW#ALERT</del>	2-Critical	Performance_Traf_ALERT[chars] [[chars]]	Generated when the Flow monitoring alert are detected	flomon	"NA"
<del>HOWMON#OVER#EXCEED</del>	2-Critical	Performance_Traf_TCA[chars] Exceeded configured [node]current %u	Generated when the Flow monitoring threshold has crossed the configured limit	flomon	"NA"
<del>HOWMON#OVER#RANGE</del>	2-Critical	Performance_Traf_TCA[chars] Exceeded configured range[node][node]current %u	Generated when the Flow monitoring threshold has crossed into the configured range limit	flomon	"NA"
<del>HOWMON#AHR#NOFYCLER</del>	3-Error	[[chars]]: SRC_P[nd]SRC_POR[nd] DST_P[nd]DST_POR[nd] [chars][chars] [chars] [chars]	Generated when the Flow monitoring threshold has gone below the configured limit and the condition is being cleared	flomon	"NA"
<del>HOWMON#AHR#NOFYSET</del>	3-Error	[[chars]]: SRC_P[nd]SRC_POR[nd] DST_P[nd]DST_POR[nd] [chars][chars] [chars] [chars]	Generated when the Flow monitoring threshold has crossed the configured limit and the condition is being set	flomon	"NA"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HOWMON</del> ALERT_AIR_CLEAR	4-Warning	[[chars]]: SRC_P[nd]SRC_FORI[nd] DST_P[nd]DST_FORI[nd] [chars][chars] [chars] [chars]	Generated when the Flow monitoring threshold has gone below the configured limit and the condition is being cleared	fomon	"NA"
<del>HOWMON</del> ALERT_AIR_SET	4-Warning	[[chars]]: SRC_P[nd]SRC_FORI[nd] DST_P[nd]DST_FORI[nd] [chars][chars] [chars] [chars]	Generated when the Flow monitoring threshold has crossed the configured limit and the condition is being set	fomon	"NA"
<del>HOWMON</del> EMERG_CLEAR	4-Warning	[[chars]]: SRC_P[nd]SRC_FORI[nd] DST_P[nd]DST_FORI[nd] [chars][chars] [chars] [chars]	Generated when the Flow monitoring threshold has gone below the configured limit and the condition is being cleared	fomon	"NA"
<del>HOWMON</del> EMERG_SET	4-Warning	[[chars]]: SRC_P[nd]SRC_FORI[nd] DST_P[nd]DST_FORI[nd] [chars][chars] [chars] [chars]	Generated when the Flow monitoring threshold has crossed the configured limit and the condition is being set	fomon	"NA"
<del>HOWMON</del> ALERT_NM_CLEAR	4-Warning	[[chars]]: SRC_P[nd]SRC_FORI[nd] DST_P[nd]DST_FORI[nd] [chars][chars] [chars] [chars]	Generated when the Flow monitoring threshold has gone below the configured limit and the condition is being cleared	fomon	"NA"
<del>HOWMON</del> ALERT_NM_SET	4-Warning	[[chars]]: SRC_P[nd]SRC_FORI[nd] DST_P[nd]DST_FORI[nd] [chars][chars] [chars] [chars]	Generated when the Flow monitoring threshold has crossed the configured limit and the condition is being set	fomon	"NA"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HOWMON#ALERT#SCALE#LIMIT	4-Warning	Flow scale limit reached on LC. New Flows can get learnt when existing flows timeout	Generated when the Flow scale limit is reached on LC and new flow tries to learn	flomon	"NA"
HOWMON#ALERT#WRCLEAR	4-Warning	[[chars]]: SRC_Prio SRC_POR[[prio]] DST_Prio DST_POR[[prio]] [chars][chars] [chars] [chars]	Generated when the Flow monitoring threshold has gone below the configured limit and the condition is being cleared	flomon	"NA"
HOWMON#ALERT#WARSET	4-Warning	[[chars]]: SRC_Prio SRC_POR[[prio]] DST_Prio DST_POR[[prio]] [chars][chars] [chars] [chars]	Generated when the Flow monitoring threshold has crossed the configured limit and the condition is being set	flomon	"NA"
FM-1-INIT	1-Alert	Feature Manager subsystem initialization failure	The Feature Manager subsystem failed to initialize. Most likely cause is insufficient memory at init time. Probably either the hardware has failed or this image is being run on a platform it was not intended for.	firmware	"Replace failing hardware or obtain the correct " "IOS image for this platform whichever is " "appropriate."
FM-2-NOMAP	2-Critical	Cannot create Feature Manager data structures for VLAN Map [chars]	The Feature Manager could not allocate the data structures needed to describe a VLAN Map in a form that can be loaded into hardware. Probably caused by lack of free memory.	firmware	LOG_SID#REDUCE#ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FM-2-NOSB	2-Critical	Cannot create subblock for interface [chars]	The Feature Manager was unable to save per-interface information needed for its correct operation. Some per-interface features such as access groups or VLAN maps will not be configured correctly.	firmware	"Use a less complicated configuration that "requires less memory."
FM-2-NOVLB	2-Critical	Cannot create memory block for VLAN [dec]	The Feature Manager was unable to save per-VLAN information needed for its correct operation. Some per-interface features such as access groups or VLAN maps will not be configured correctly.	firmware	"Use a less complicated configuration that "requires less memory."
FM-2-NOVMR	2-Critical	Cannot create VMR data structures for access list [chars]	The Feature Manager could not allocate the data structures needed to describe an ACL in a form that can be loaded into hardware. Probably caused by lack of available memory.	firmware	"Use a less complicated configuration that "requires less memory."
FM-3-AUGMENTFAIL	3-Error	Augmenting of access-map [chars] on [chars] label [dec] failed	The system ran out of CPU memory when attempting to merge internally required elements with the configured access maps.	firmware	<u>LOGS</u> <u>SID</u> <u>REDUCE</u> <u>ACTION</u>
FM-3-CONFLICT	3-Error	[chars] [chars] conflicts with [chars]	Port access lists PACLS may not be applied when input router access lists or VLAN maps have been applied and vice versa	firmware	"Remove the conflicting feature or features"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FM-3-GOTLABEL	3-Error	Got label for [chars]	The Feature Manager has now been able to allocate a hardware label for the interface. The interface had needed a label before but none was available.	-	LOG_SID_NO_ACTION
FM-3-GOTVLABEL	3-Error	Got label for VLAN #[dec]	The Feature Manager has now been able to allocate a hardware label for the VLAN. The VLAN had needed a label before but none was available.	-	LOG_SID_NO_ACTION
FM-3-ILLEGALCOPY	3-Error	Illegal copy of [chars] access group [chars] from [chars] label [dec] to [dec]	An internal software error has occurred	firmware	"show running-config"
FM-3-INITLABEL	3-Error	Special initialization of label [dec] failed	Initialization of the access list hardware failed. Prioritization of routing protocol packets above other kinds of packets may not occur on some VLANs or routed ports.	firmware	LOG_STD_ACTION
FM-3-INSERTFAIL	3-Error	Insert of access-map [chars] #[dec] into [chars] label [dec] failed	The system ran out of CPU memory when trying to merge sections of an access map.	firmware	"Reduce other system activity to ease the memory demands. For example " "remove any ACLs that have been defined but are not now used. Use " "simpler ACLs with fewer access control entries ACEs. Use fewer "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FM-3-INTTABLE	3-Error	Not in truth table: VLMAP [dec] RACL [dec] Rtprot [dec] Redir [dec] Mcb [dec] Feat [dec]	An unrecoverable software error occurred while trying to merge the configured input features.	firmware	"show running-config"
FM-3-LABELERROR	3-Error	Incorrect label to [chars] vlan label attribute copy callback srclabel [dec] dstlabel [dec]	The Feature Manager attribute copy callback was called with an incorrect source or destination label.	firmware	"show running-config"
FM3-MAXRECURSION	3-Error	Too many [dec] levels of recursion while merging [chars] code [dec].	The configuration is too complicated for the platform specific ACL merge code to support. Most likely cause is including too many separate access lists in a single VLAN map or policy map.	-	"Reduce the number IP or MAC access lists" " considered separately in any one VLAN or policy"
FM-3-MERGEFAIL	3-Error	[chars] ACL merge error [dec] [chars] on [chars] label [dec]	The Feature Manager was unable to complete the merge of the configured features into a form suitable for loading into the hardware. Packets potentially affected by this feature will be sent to the CPU for processing instead. The most likely cause is specifying an ACL that is too large or too complex for the system to handle.	firmware	"Try specifying a smaller and less complicated " configuration."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
FM-3-NOLABEL	3-Error	Cannot allocate [chars] label for interface [chars]	The Feature Manager was unable to allocate a label for the features on this interface. This means that the hardware cannot be programmed to implement the features and packets for this interface will be filtered in software. There is a limit of 256 labels per direction.	firmware	"Allocate more space to the relevant section " "of the TCAM and reboot or else use a simpler " "configuration. Use the same ACLs on multiple " "interfaces if possible."
FM-3-NOLABELVL	3-Error	Cannot allocate [chars] label for VLAN [dec]	The Feature Manager was unable to allocate a label for the features on this VLAN. This means that the hardware cannot be programmed to implement the features and packets on this VLAN will be filtered in software. There is a limit of 256 labels per direction.	firmware	"Allocate more space to the relevant section " "of the TCAM and reboot or else use a simpler " "configuration. Use the same VLAN Maps on multiple " "VLANs if possible."
FM-3-NOTEMPTY	3-Error	Illegal copy of attribute to non empty [chars] vlan label [dec]	The Feature Manager attribute copy callback was called with a destination label already being used by a VLAN or routed port.	firmware	"show running-config"
FM-3-NOTOBJECT	3-Error	Invalid object VLAN [dec] IDB [hec] used in Feature Manager operation	An internal software error has occurred	firmware	"show running-config"



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
FM-3-OUTTABLE	3-Error	Not in truth table: RACL [dec] VLMAP [dec]	An unrecoverable software error occurred while trying to merge the configured output features.	firmware	"show running-config"
FM-3-QOSTTABLE	3-Error	Not in truth table: ACL [dec] in map action [dec]	A software error occurred while trying to merge a QoS Policy Map	firmware	"show running-config"
FM-3-RELOADED	3-Error	Reloading [chars] label [dec] feature in [chars]	The Feature Manager was able to fit more of the configured features on this label into the hardware. One or more features had previously been unloaded because of lack of space.	-	LOG_SID_NO_ACTION
FM-3-TOSCOST	3-Error	Minimize monetary cost TOS bit unsupported in hardware ignored	This hardware platform supports filtering based on DSCP rather than TOS and precedence. The DSCP field does not include the minimize monetary cost bit from the TOS field so hardware will ignore this bit when checking for a match to an ACE. This can lead to unintended filtering actions.	firmware	"Design filters that do not test for minimum " "monetary cost TOS."
FMBUNKNOWNACTION	3-Error	Unknown VMR access group action 0x[hex]	An internal software error has occurred.	firmware	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
FM-3-UNLOADING	3-Error	Unloading [chars] label [dec] feature from [chars]	The Feature Manager was unable to fit the complete configuration into the hardware so some features will have to be applied in software. This prevents some or all of the packets from being forwarded in hardware and requires them to be forwarded by the CPU. Multicast packets may be dropped entirely instead of being forwarded.	firmware	"Allocate more space to the relevant section " "of the TCAM and reboot or else use a simpler " "configuration. Use the same ACLs on multiple " "interfaces if possible."
FM-3-WRONGLABEL	3-Error	Inconsistent records of label for [chars]: FM has [dec] LM has [dec]	An internal software error has occurred.	firmware	"show running-config"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FM4EXCESSSECONDARY	4-Warning	More than [dec] secondary IP addresses configured on interface [chars]	When secondary IP addresses are configured on an interface the hardware is usually programmed so that the ICMP redirect functionality on the CPU is not notified of packets sent between two subnets configured on the same interface. If many secondary IP addresses are configured on the same interface it becomes impractical to program the hardware in this manner this message is logged and the CPU will be notified of every packet sent between two subnets on this interface. No ICMP redirects will be sent in error but the CPU usage may increase because of the additional notifications. The user may wish to configure \no ip redirects\ on the interface to reduce the CPU load on the system.	firmware	"configure the \"no ip redirects\" command on \"this interface"
FM-7-TRANSDEF	7-Debug	No augmentation function found for VMR	An Internal Error occurred. An Access Control List was not interpreted correctly. The Value-Mask Result is incorrect.	firmware	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IOSXECSLTHROU</del>	3-Error	iosxe-csl	Average crypto throughput rate approached the licensed crypto bandwidth of %llu bps during %d sampling periods in the last 24 hours	-	-
<del>IOSXECSLTHROU</del>	3-Error	iosxe-csl	Average crypto throughput rate exceeded %d percent of licensed crypto bandwidth of %llu bps during %d sampling periods in the last 24 hours	-	-
<del>IOSXESLTHROU</del>	3-Error	iosxe-csl	Invalid throughput %ukbps	"The throughput value is invalid. The forwarding engine will not operate at the throughput value."	<del>IOSXESLTHROU</del>
<del>IOSXESLTHROU</del>	3-Error	INVALID	Reflexive group[chars](%d) ACE index(%d) exceeded limitation of %d. Reflexive functionality is not supported for this ACE	-	-
<del>IOSXESLTHROU</del>	3-Error	INVALID	Reflexive group[chars](%d) ACL index(%d) exceeded limitation of %d. Reflexive functionality is not supported for this ACL	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IMNBRGRNRMEXED</del>	3-Error	INVALID	Reflexive group[chars](%d) exceeded limitation of %d entries. Reflexive functionality is not supported for this ACE	-	-
<del>IMNBRGRNRMEXED</del>	3-Error	INVALID	Number of reflexive group exceeded limitation of %d. Reflexive functionality is not supported for this ACE	-	-
<del>IMNBRHDCMCRSET</del>	6-Information	INVALID	Hardware crypto-device is not present. Request aborted	"Hardware crypto-device is not present on the system. User request doesn't apply or be executed. This may not be an error."	LOG_SID_NO_ACTION
<del>IMNBRHDCMCRSET</del>	6-Information	INVALID	Crypto-device is ready to process packets	"Crypto-device is load with new core based on user request. Now it is ready to process packets"	LOG_SID_NO_ACTION
<del>IMNBRHDCMCRSET</del>	6-Information	INVALID	access-list logging datapath rate-limited or missed %u packet%s	"Some packet matching logs were missed because the access list log messages were rate-limited or no access list log buffers were available."	LOG_SID_NO_ACTION
<del>IMNBRHDCMCRSET</del>	6-Information	INVALID	<del>list[chars](%u/%u)</del>	-	-
<del>IMNBRHDCMCRSET</del>	6-Information	INVALID	<del>list[chars][chars] %u[chars]s[chars]&gt;[chars]</del>	-	-
<del>IMNBRHDCMCRSET</del>	6-Information	INVALID	<del>list[chars] (%u/%u)</del>	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FWANR6ACCESSLOGCP	6-Information	INVALID	ingress_interface=%s' sgacl_name=%s' action=%s' protocol=%s' src-ip=%s' dest-ip=%s' type=%u' code=%u' sgt=%u' dgt=%u' logging_interval_hits=%u'	"A packet matching the log criteria for the given access list was detected."	LOG_SID_NO_ACTION
FWANR6ACCESSLOGCP	6-Information	INVALID	ingress_interface=%s' sgacl_name=%s' action=%s' protocol=%u' src-ip=%s' dest-ip=%s' sgt=%u' dgt=%u' logging_interval_hits=%u'	"A packet matching the log criteria for the given access list was detected."	LOG_SID_NO_ACTION
FWANR6ACCESSLOGCP	6-Information	INVALID	ingress_interface=%s' sgacl_name=%s' action=%s' protocol=%s' src-ip=%s' src-port=%u' dest-ip=%s' dest-port=%u' sgt=%u' dgt=%u' logging_interval_hits=%u'	"A packet matching the log criteria for the given access list was detected."	LOG_SID_NO_ACTION
FWANR6ACCESSLOGCP	6-Information	iosxe-acl	list[chars]/[chars] [chars] [chars] (%u/%u)	-	-
FWANR6ACCESSLOGCP	6-Information	iosxe-acl	list[chars][chars] %u[chars]/[chars]>[chars]	-	-
FWANR6ACCESSLOGCP	6-Information	iosxe-acl	list[chars]/[chars] [chars] (%u/%u)	-	-
FWANR6ACCESSLOGCP	6-Information	INVALID	ingress_interface=%s' sgacl_name=%s' action=%s' protocol=%s' src-ip=%s' dest-ip=%s' type=%u' code=%u' sgt=%u' dgt=%u' logging_interval_hits=%u'	"A packet matching the log criteria for the given access list was detected."	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FMANRP_IPV6ACCESSLOGCP	6-Information	INVALID	ingress_interface=%s' sgacl_name=%s' action=%s' protocol=%u' src-ip=%s' dest-ip=%s' sgt=%u' dgt=%u' logging_interval_hits=%u'	"A packet matching the log criteria for the given access list was detected."	LOG_SID_NO_ACTION
FMANRP_IPV6ACCESSLOGCP	6-Information	INVALID	ingress_interface=%s' sgacl_name=%s' action=%s' protocol=%s' src-ip=%s' src-port=%u' dest-ip=%s' dest-port=%u' sgt=%u' dgt=%u' logging_interval_hits=%u'	"A packet matching the log criteria for the given access list was detected."	LOG_SID_NO_ACTION
FMANRP_ACLLIMITER	3-Error	Expanded OGACL [chars] size [dec] exceeded MAX ACL limit [dec]	Expanded OGACL size exceeded the maximum ACL limit. Command rejected	iosxe-acl	"Reduce # of ACEs in the ACL"
FMANRP_ACLINVALIDTYPE	4-Warning	v4 ACE type is invalid	An unexpected condition has occurred which is due to the type of v4 ACE\n\ created	iosxe-acl	"show ip access-list"
FMANRP_ACLINVALIDOP	4-Warning	Operation is invalid	An unexpected condition has occurred which is due to the operation \n\ performed	iosxe-acl	"show ipv6 access-list"
FMANRP_ACLNOACL	4-Warning	ACL is null	An unexpected condition has occurred which is due to the absence of\n\ an ACL structure.	iosxe-acl	"show ip access-list"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FMANRP_ACL4NOVACE	4-Warning	mac ACE is null	An unexpected condition has occurred which is due to the absence of\n\ an mac ACE structure.	iosxe-acl	"show access-list"
FMANRP_ACL4NOSB	4-Warning	Subblock on interface [chars] 0x[hec] is null	An unexpected condition has occurred which is due to the absence of\n\ a subblock structure on interface.	iosxe-acl	"show ip interface"
FMANRP_ACL4NOSMDB	4-Warning	Sub-interface is null	An unexpected condition has occurred which is due to the absence of\n\ a swidb structure.	iosxe-acl	"show ip interface"
FMANRP_ACL4NOV4ACE	4-Warning	v4 ACE is null	An unexpected condition has occurred which is due to the absence of\n\ an v4 ACE structure.	iosxe-acl	"show ip access-list"
FMANRP_ACL4NOV6ACE	4-Warning	v6 ACE is null	An unexpected condition has occurred which is due to the absence of\n\ an v6 ACE structure.	iosxe-acl	"show ipv6 access-list"
FMANRP_ACL4NOV4ACLBERR	4-Warning	Not enough resources to disable template ACL	Not enough resurces to store individual ACLs	iosxe-acl	"show ip access-list template summary"
FMANRP_ACL4NOV4ACLNERR	4-Warning	Template ACL initialization error	An unexpected condition has occurred on template ACL initialization	iosxe-acl	"show memory"
FMANRP_ACL4NOV4ACLNOMERR	4-Warning	Template ACL no memory error	An unexpected condition has occurred on template ACL processing	iosxe-acl	"show memory"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FMANR_ACL4EMCSASRR	4-Warning	Update mac ACL statistics error	An unexpected condition has occurred when updating mac ACL statistics	iosxe-acl	"show access-list"
FMANR_ACL4EMCSASRR	4-Warning	Update v4 ACL statistics error	An unexpected condition has occurred when updating v4 ACL statistics	iosxe-acl	"show ip access-list"
FMANR_ACL4EMCSASRR	4-Warning	Update v6 ACL statistics error	An unexpected condition has occurred when updating v6 ACL statistics	iosxe-acl	"show ipv6 access-list"
FMANR_ALG3AFI_FAILED	3-Error	NULL	A call to the API of another component has indicated an\n\n error.	iosxe-alg	LOG_STD_ACTION
FMANR_ALG3ENVAL	3-Error	NULL	An unexpected input value to a function was incorrect	iosxe-alg	LOG_STD_ACTION
FMANR_DPSS3CENQUEUE	3-Error	Failed to enqueue dpss feature object 0x[hec] config message for transmission	This operation to enqueue an IPC message for sending has failed.	asr1k-dpss	LOG_STD_ACTION
FMANR_DPSS3CENALLOC	3-Error	Failed to alloc IPC buffer for dpss feature object 0x[hec] config\n\n message	This operation to allocate IPC buffer for dpss feature object \n\n configuration has failed.	asr1k-dpss	LOG_STD_ACTION
FMANR_DPSS3CENCREATE	3-Error	Failed to create tdl msg for dpss feature object 0x[hec] config message	This operation to create an TDL message has failed.	asr1k-dpss	LOG_STD_ACTION
FMANR_DPSS3CENCOPY	3-Error	Failed to copy dpss feature object config message to IPC buffer for\n\n fo_hdl 0x[hec]	This operation to build a TDL message for dpss feature object \n\n configuration has failed.	asr1k-dpss	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>FMANR_PSS3DSET</del>	3-Error	Failed to set tdl msg detail for dpss feature object 0x[hec] config message	This operation to set an TDL message has failed.	asr1k-dpss	LOG_STD_ACTION
<del>FMANR_PSS3DSEQE</del>	3-Error	Failed to enqueue dpss global config message for transmission	This operation to enqueue an IPC message for sending has failed.	asr1k-dpss	LOG_STD_ACTION
<del>FMANR_PSS3DPAIC</del>	3-Error	Failed to alloc IPC buffer for dpss global config\n\ message	This operation to allocate IPC buffer for dpss global \n\ configuration has failed.	asr1k-dpss	LOG_STD_ACTION
<del>FMANR_PSS3DTCRE</del>	3-Error	Failed to create tdl msg for dpss global config message	This operation to create an TDL message has failed.	asr1k-dpss	LOG_STD_ACTION
<del>FMANR_PSS3DUMSA</del>	3-Error	Failed to copy dpss global config message to IPC buffer	This operation to build a TDL message for dpss global \n\ configuration has failed.	asr1k-dpss	LOG_STD_ACTION
<del>FMANR_PSS3DUDSET</del>	3-Error	Failed to set tdl msg detail for dpss global config message	This operation to set an TDL message has failed.	asr1k-dpss	LOG_STD_ACTION
FMANR_PSS3ENQUEHAL	3-Error	[chars] [hex] [hex]	-	-	-
FMANR_PSS3ERREVENT	3-Error	[chars] [hex]	-	-	-
FMANR_PSS3ERREVENI2	3-Error	[chars] [hex] / [hex]	-	-	-
FMANR_PSS4EVSREAT	4-Warning	[chars] sip_ess_segment= [hex] segment_id= [node] fsp_ess_segment= [hex] segment_id= [node]evsi= %u	A failure has occurred in creating a session interface.	iosxe-bb	" The session creation is rejected." " If you determine that the system is " " adversely affected then" LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FMANRP_ESS4FULLVAI	4-Warning	Session creation failed due to Full Virtual-Access Interfaces not being supported. Check that all applied Virtual-Template and RADIUS features support Virtual-Access sub-interfaces. swidb= [hex] ifnum= [dec]	A failure has occurred in creating a session interface due to a Full Virtual-Access Interface being created. Full Virtual-Access Interface are created if a Virtual-Template or RADIUS feature does not support Virtual-Access sub-interfaces. This platform only supports Virtual-Access sub-interfaces. Refer to Action to isolate offending feature.	iosxe-bb	" The session creation is rejected." " Steps to isolate unsupported Session feature:\n" " Run 'test Virtual-Template # subinterface' where " # is the Virtual-Template number being used to" " create the session. Remove any identified" " features that are not sub-interface compliant.\n" " For RADIUS features:\n" " Configure \"aaa policy interface-config" " allow-subinterface\" on the router or\n" " capabilities" needs" " to be specified in the subscriber profile on the" " Radius server."
FMANRP_ESS4MAXSESS	4-Warning	[chars] [dec]	-	-	-
FMANRP_ESS4SEGFAIL	4-Warning	[chars] Seghandle 0x[hec] of Type %u	A failure has occurred with a segment operation.	iosxe-bb	" The session creation is rejected." " If you determine that the system is" " adversely affected then" LOG_STD_ACTION
FMANRP_ESS4SEGFAIL2	4-Warning	[chars] Seghandle 0x[hec] of Type [node]ess_segment= [hex]	A failure has occurred with a segment operation.	iosxe-bb	" The session creation is rejected." " If you determine that the system is" " adversely affected then" LOG_STD_ACTION
FMANRP_ESS4SESSCNT	4-Warning	[chars] [hex]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
EMANRPESSWRNEMENT	4-Warning	[chars] [hex]	-	-	-
EMANRPESSWRNEMENT2	4-Warning	[chars] [hex] / [hex]	-	-	-
EMANRPESSWRNPARAM	4-Warning	[chars]	A failure has occurred relating to an incorrect functional parameters.	iosxe-bb	" The session creation is rejected." " If you determine that the system is" " adversely affected then" LOG_STD_ACTION
EMANRPESSWRNPARAM_U	4-Warning	[chars] [node]/ %u	-	-	-
EMANRPESSWRNPARAM_X	4-Warning	[chars] [hex] / [hex]	-	-	-
EMANRPESSWRNPARAM_XS	4-Warning	[chars] [hex] / [hex] / [chars] / [chars]	-	-	-
EMANRPESSWRNPARAM_XD	4-Warning	[chars] [hex] / [hex] / [dec]	-	-	-
EMANRPESSWRNPARAM_XX	4-Warning	[chars] [hex] / [hex] / [hex]	-	-	-
EMANRPESSWRNPARAM_D	4-Warning	[chars] [dec]	-	-	-
EMANRPESSWRNPARAM_U	4-Warning	[chars] [dec] / %u	-	-	-
EMANRPESSWRNPARAM_ES	4-Warning	[chars]: [chars] [chars] / [chars]	-	-	-
EMANRPESSWRNPARAM_EX	4-Warning	[chars]: [chars] [hex] / [hex]	-	-	-
EMANRPESSWRNPARAM_U	4-Warning	[chars]: [chars] %u	-	-	-
EMANRPESSWRNPARAM_S	4-Warning	[chars]: [chars]	A failure has occurred relating to an incorrect functional parameters.	iosxe-bb	" The session creation is rejected." " If you determine that the system is" " adversely affected then" LOG_STD_ACTION
EMANRPESSWRNPARAM_U	4-Warning	[chars] %u	-	-	-
EMANRPESSWRNPARAM_UX	4-Warning	[chars] [node]/ [hex] / [hex]	-	-	-
EMANRPESSWRNPARAM_UD	4-Warning	[chars] [node]/ [hex] / [dec]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FMANRP_SSMNPARAM_XU	4-Warning	[chars] [hex] / %u	-	-	-
FMANRP_EVPN3UNSCP	3-Error	Unsupport operation	An unexpected operation is get during EVPN configuration	iosxe-evpn	LOG_STD_ACTION
FMANRP_IPSEC4IPUNERRHY	3-Error	[chars]: PCP trans 0x[hec] opcode 0x[hec]: unexpected reply from crypto	An unexpected internal software error. Engineering must be reported and investigate this occurrence.	iosxe-ipsec	LOGSIDDISTACTEALS
FMANRP_IPSEC4IPUNERRHY	6-Information	[chars]: PCP NACK trans 0x[hec] opcode 0x[hec] errcode 0x[hec]: crypto	A failure has occurred during security policy downloading in crypto hardware. The command is rejected.	iosxe-ipsec	"The configuration may be ignorable or recovered " "automatically in crypto hardware. The session may " "still be functional but less than optimal " "performance. If you determine that the system is " "adversely affected then Embedded Services Processor " "ESP tracelog should be collected. "
FMANRP_MR3BLCFGAL	3-Error	Unable to [chars] link [chars] [chars]	An unexpected condition has occurred at Bundle link configuration [chars]	iosxe-mlfr	LOG_STD_ACTION
FMANRP_MFR3BLEFAIL	3-Error	Unable to [chars] link [chars] [chars]	An unexpected condition has occurred at Bundle link configuration [chars]	iosxe-mlfr	LOG_STD_ACTION
FMANRP_MR3BNDLFAIL	3-Error	Unable to [chars] bundle [chars]	An unexpected condition has occurred at Bundle configuration	iosxe-mlfr	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FMANRP_MFR3IDLEFAIL	3-Error	Unable to send [chars] [chars] message to Forwarding Manager Process [chars]	An unexpected condition has occurred which resulted in a configuration \n\ not being sent to the Forwarding Manager Process.	iosxe-mlfr	LOG_STD_ACTION
FMANRP_MLS3ENQUEL	3-Error	Unable to send [chars] [chars] message to Forwarding Manager Process	An unexpected condition has occurred which resulted in a configuration \n\ not being sent to the Forwarding Manager Process.	asr1k-fwdmgr	LOG_STD_ACTION
FMANRP_MLS3NCOBJ	3-Error	Object entry is null	An unexpected condition has occurred which is due to the absence of\n\ an object entry structure.	asr1k-fwdmgr	"show mpls"
FMANRP_MLS3UNSPTYPE	3-Error	Not supported bundle type [dec]	An unexpected condition has occurred which is due to an operation request\n\ to an unsupported bundle ope type is received.	asr1k-fwdmgr	LOG_STD_ACTION
FMANRP_NAT3MIDHEIE	3-Error	Failed to delete node from NAT [chars] database for %i	This operation to perform delete processing has failed.	iosxe-nat	LOG_STD_ACTION
FMANRP_NAT3MIDHEIE	3-Error	Failed to delete node from NAT [chars] database for %i	This operation to perform delete processing has failed.	iosxe-nat	LOG_STD_ACTION
FMANRP_NAT3MIDHEIE	3-Error	Failed to walk NAT [chars] database for [chars]	This operation to perform stale processing has failed.	iosxe-nat	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IOSXE-NAT-ERR-WALK</del>	3-Error	Failed to walk NAT [chars] database for [chars]	This operation to perform stale processing has failed.	iosxe-nat	LOG_STD_ACTION
<del>IOSXE-NAT-ERR-COPY</del>	3-Error	Failed to copy debug NAT request message to IPC buffer	This operation to build a TDL message for debug NAT command \n\ has failed.	iosxe-nat	LOG_STD_ACTION
<del>IOSXE-NAT-ERR-COPY</del>	3-Error	Failed to copy debug NAT request message to IPC buffer	This operation to build a TDL message for debug NAT command \n\ has failed.	iosxe-nat	LOG_STD_ACTION
<del>IOSXE-NAT-ERR-COPY</del>	3-Error	Failed to copy interface address change message to IPC buffer for\n\ interface [chars] new address %i	This operation to build a TDL message for NAT interface address\n\ configuration has failed.	iosxe-nat	LOG_STD_ACTION
<del>IOSXE-NAT-ERR-COPY</del>	3-Error	Failed to copy interface address change message to IPC buffer for\n\ interface [chars] new address %i	This operation to build a TDL message for NAT interface address\n\ configuration has failed.	iosxe-nat	LOG_STD_ACTION
<del>IOSXE-NAT-ERR-COPY</del>	3-Error	Failed to copy interface config message to IPC buffer for \n\ Interface [chars] 0x[hec] domain [chars] operation [chars]	This operation to build a TDL message for interface configuration\n\ has failed.	iosxe-nat	LOG_STD_ACTION
<del>IOSXE-NAT-ERR-COPY</del>	3-Error	Failed to copy interface config message to IPC buffer for \n\ Interface [chars] 0x[hec] domain [chars] operation [chars]	This operation to build a TDL message for interface configuration\n\ has failed.	iosxe-nat	LOG_STD_ACTION
<del>IOSXE-NAT-ERR-ADDRESS</del>	3-Error	Received an invalid address %i	An unsupported address for the given config was received.	iosxe-nat	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPNAT-3-ERR-INVALID_ADDR	3-Error	Received an invalid address %i	An unsupported address for the given config was received.	iosxe-nat	LOG_STD_ACTION
IPNAT-3-ERR-ENQUEUE	3-Error	Failed to enqueue NAT [chars] message for transmission	This operation to enqueue an IPC message for sending has failed.	iosxe-nat	LOG_STD_ACTION
IPNAT-3-ERR-ENQUEUE	3-Error	Failed to enqueue NAT [chars] message for transmission	This operation to enqueue an IPC message for sending has failed.	iosxe-nat	LOG_STD_ACTION
IPNAT-3-ERR-IPALIAS_IDL	3-Error	Error with ipalias message received from data path	An unexpected condition has occurred with received ipalias \n\ message from data path	iosxe-nat	LOG_STD_ACTION
IPNAT-3-ERR-IPALIAS_IDL	3-Error	Error with ipalias message received from data path	An unexpected condition has occurred with received ipalias \n\ message from data path	iosxe-nat	LOG_STD_ACTION
IPNAT-3-ERR-IPALIAS_IDE	3-Error	Received ipalias message from data path with unsupported \n\ address type [dec]	An unexpected condition has occurred with received ipalias \n\ message from data path with unsupported address type	iosxe-nat	LOG_STD_ACTION
IPNAT-3-ERR-IPALIAS_IDE	3-Error	Received ipalias message from data path with unsupported \n\ address type [dec]	An unexpected condition has occurred with received ipalias \n\ message from data path with unsupported address type	iosxe-nat	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IOSXE-NAT-ROUTED</del>	3-Error	Error with static ip route message received from data path	An unexpected condition has occurred with received static\n\n ip route message from data path	iosxe-nat	LOG_STD_ACTION
<del>IOSXE-NAT-ROUTED</del>	3-Error	Error with static ip route message received from data path	An unexpected condition has occurred with received static\n\n ip route message from data path	iosxe-nat	LOG_STD_ACTION
<del>IOSXE-NAT-ROUTE</del>	3-Error	Received ip static route message from data path with\n\n unsupported address type	An unexpected condition has occurred with received static \n\n ip route message from data path with unsupported address type	iosxe-nat	LOG_STD_ACTION
<del>IOSXE-NAT-ROUTE</del>	3-Error	Received ip static route message from data path with\n\n unsupported address type	An unexpected condition has occurred with received static \n\n ip route message from data path with unsupported address type	iosxe-nat	LOG_STD_ACTION
<del>IOSXE-NAT-MASA</del>	3-Error	Failed to copy mapping config message to IPC buffer for\n\n mapping id [dec] vrf table id [dec]	This operation to build a TDL message for mapping configuration\n\n has failed.	iosxe-nat	LOG_STD_ACTION
<del>IOSXE-NAT-MASA</del>	3-Error	Failed to copy mapping config message to IPC buffer for\n\n mapping id [dec] vrf table id [dec]	This operation to build a TDL message for mapping configuration\n\n has failed.	iosxe-nat	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IOSXE-NAT-DNS-MIB</del>	3-Error	Failed to copy max entry config message to IPC buffer for\n\ntype [chars] entry data 0x[hec] max_limit [dec]	This operation to build a TDL message for max entry add/delete\n\ has failed.	iosxe-nat	LOG_STD_ACTION
<del>IOSXE-NAT-DNS-MIB</del>	3-Error	Failed to copy max entry config message to IPC buffer for\n\ntype [chars] entry data 0x[hec] max_limit [dec]	This operation to build a TDL message for max entry add/delete\n\ has failed.	iosxe-nat	LOG_STD_ACTION
IOSXE-NAT-3MIB-EVENT	3-Error	Failed to get NAT MIB response message: [chars]	An unsupported error occured with waiting for NAT MIB response \n\ message.	iosxe-nat	LOG_STD_ACTION
IOSXE-NAT-3MIB-EVENT	3-Error	Failed to get NAT MIB response message: [chars]	An unsupported error occured with waiting for NAT MIB response \n\ message.	iosxe-nat	LOG_STD_ACTION
IOSXE-NAT-3MIB-ERR	3-Error	Failed to allocate message	When attempting to send message to dataplane there was not enough memory to allocate the message.	iosxe-nat	LOG_STD_ACTION
IOSXE-NAT-3MIB-ERR	3-Error	Failed to allocate message	When attempting to send message to dataplane there was not enough memory to allocate the message.	iosxe-nat	LOG_STD_ACTION
IOSXE-NAT-3MIB-ERR	3-Error	When download [chars] failed to set a field in message	software error.	iosxe-nat	LOG_STD_ACTION
IOSXE-NAT-3MIB-ERR	3-Error	When download [chars] failed to set a field in message	software error.	iosxe-nat	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPNAPRODMSA	3-Error	Failed to copy pool config message to IPC buffer for\n\n pool [chars] id [dec]	This operation to build a TDL message for pool configuration\n\n has failed.	iosxe-nat	LOG_STD_ACTION
IPNAPRODMSA	3-Error	Failed to copy pool config message to IPC buffer for\n\n pool [chars] id [dec]	This operation to build a TDL message for pool configuration\n\n has failed.	iosxe-nat	LOG_STD_ACTION
IPNAPRODMSA	3-Error	Protocol type [dec] for global addr [node]in the portlist allocation request is not supported	An unexpected protocol type has occurred with received portlist\n\n allocation request message from data path	iosxe-nat	LOG_STD_ACTION
IPNAPRODMSA	3-Error	Protocol type [dec] for global addr [node]in the portlist allocation request is not supported	An unexpected protocol type has occurred with received portlist\n\n allocation request message from data path	iosxe-nat	LOG_STD_ACTION
IPNAPRODMSA	3-Error	Error with portlist allocation request message received from data path	An unexpected condition has occurred with received portlist\n\n allocation request message from data path	iosxe-nat	LOG_STD_ACTION
IPNAPRODMSA	3-Error	Error with portlist allocation request message received from data path	An unexpected condition has occurred with received portlist\n\n allocation request message from data path	iosxe-nat	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IOSXE-NAT-ERR-3-IPDMLMBSA</del>	3-Error	Failed to copy portlist config message to IPC buffer for\n\ addr [node]proto [dec] start_port [dec] end_port [dec]	This operation to build a TDL message for portlist add/delete\n\ has failed.	iosxe-nat	LOG_STD_ACTION
<del>IOSXE-NAT-ERR-3-IPDMLMBSA</del>	3-Error	Failed to copy portlist config message to IPC buffer for\n\ addr [node]proto [dec] start_port [dec] end_port [dec]	This operation to build a TDL message for portlist add/delete\n\ has failed.	iosxe-nat	LOG_STD_ACTION
<del>IOSXE-NAT-ERR-3-IPRISLTYE</del>	3-Error	Address type [dec] for global address in the portlist allocation request is not supported	An unexpected address type has occurred with received portlist\n\ allocation request message from data path	iosxe-nat	LOG_STD_ACTION
<del>IOSXE-NAT-ERR-3-IPRISLTYE</del>	3-Error	Address type [dec] for global address in the portlist allocation request is not supported	An unexpected address type has occurred with received portlist\n\ allocation request message from data path	iosxe-nat	LOG_STD_ACTION
<del>IOSXE-NAT-ERR-3-IPRCHDMLMBSA</del>	3-Error	Failed to copy pool address range config message to IPC buffer for\n\ pool [chars] range start [node]range end %i	This operation to build a TDL message for address range configuration\n\ has failed.	iosxe-nat	LOG_STD_ACTION
<del>IOSXE-NAT-ERR-3-IPRCHDMLMBSA</del>	3-Error	Failed to copy pool address range config message to IPC buffer for\n\ pool [chars] range start [node]range end %i	This operation to build a TDL message for address range configuration\n\ has failed.	iosxe-nat	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IOSXE-NAT-ERR-MCMSG</del>	3-Error	Failed to copy service config message to IPC buffer for\n\n application type [dec] protocol type [dec] port [dec]	This operation to build a TDL message for service configuration\n\n has failed.	iosxe-nat	LOG_STD_ACTION
<del>IOSXE-NAT-ERR-MCMSG</del>	3-Error	Failed to copy service config message to IPC buffer for\n\n application type [dec] protocol type [dec] port [dec]	This operation to build a TDL message for service configuration\n\n has failed.	iosxe-nat	LOG_STD_ACTION
<del>IOSXE-NAT-ERR-MCHRM</del>	3-Error	Failed to delete NAT services for appl type [chars] protocol [chars]\n\n port [dec]	An unexpected condition has occurred which is due to the failure\n\n to remove data structures for NAT special services.	iosxe-nat	LOG_STD_ACTION
<del>IOSXE-NAT-ERR-MCHRM</del>	3-Error	Failed to delete NAT services for appl type [chars] protocol [chars]\n\n port [dec]	An unexpected condition has occurred which is due to the failure\n\n to remove data structures for NAT special services.	iosxe-nat	LOG_STD_ACTION
<del>IOSXE-NAT-ERR-SUBIDL</del>	3-Error	Failed to update NAT [chars] statistics	An unexpected condition has occurred when updating statistics	iosxe-nat	LOG_STD_ACTION
<del>IOSXE-NAT-ERR-SUBIDL</del>	3-Error	Failed to update NAT [chars] statistics	An unexpected condition has occurred when updating statistics	iosxe-nat	LOG_STD_ACTION
<del>IOSXE-NAT-ERR-TMMSG</del>	3-Error	Failed to copy timeout config message to IPC buffer for\n\n timeout type [dec]	This operation to build a TDL message for timeout configuration\n\n has failed.	iosxe-nat	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IOSXE-NAT-3-ERR-MSG1</del>	3-Error	Failed to copy timeout config message to IPC buffer for\n\ timeout type [dec]	This operation to build a TDL message for timeout configuration\n\ has failed.	iosxe-nat	LOG_STD_ACTION
<del>IOSXE-NAT-3-ERR-MSG2</del>	3-Error	Failed to copy VRF delete message to IPC buffer for vrf table id [dec]	This operation to build a TDL message for vrf deletion configuration\n\ has failed.	iosxe-nat	LOG_STD_ACTION
<del>IOSXE-NAT-3-ERR-MSG3</del>	3-Error	Failed to copy VRF delete message to IPC buffer for vrf table id [dec]	This operation to build a TDL message for vrf deletion configuration\n\ has failed.	iosxe-nat	LOG_STD_ACTION
<del>IOSXE-NAT-3-ERR-MSG4</del>	3-Error	Received WLAN session message from data path with nil\n\ input interface for inside local host %i	An unexpected condition has occurred with received WLAN session\n\ message from data path with nil input interface	iosxe-nat	LOG_STD_ACTION
<del>IOSXE-NAT-3-ERR-MSG5</del>	3-Error	Received WLAN session message from data path with nil\n\ input interface for inside local host %i	An unexpected condition has occurred with received WLAN session\n\ message from data path with nil input interface	iosxe-nat	LOG_STD_ACTION
<del>IOSXE-NAT-3-ERR-MSG6</del>	3-Error	Error with WLAN session message received from data path	An unexpected condition has occurred with received WLAN session\n\ message from data path	iosxe-nat	LOG_STD_ACTION
<del>IOSXE-NAT-3-ERR-MSG7</del>	3-Error	Error with WLAN session message received from data path	An unexpected condition has occurred with received WLAN session\n\ message from data path	iosxe-nat	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FMANRP_WLAN3SESYM	3-Error	Received WLAN session message from data path with unsupported \n\ address type [dec]	An unexpected condition has occurred with received WLAN session \n\ message from data path with unsupported address type	iosxe-nat	LOG_STD_ACTION
FMANRP_WLAN3SESYM	3-Error	Received WLAN session message from data path with unsupported \n\ address type [dec]	An unexpected condition has occurred with received WLAN session \n\ message from data path with unsupported address type	iosxe-nat	LOG_STD_ACTION
FMANRP_NAT4BADACI	4-Warning	Invalid action [dec] for NAT configuration	An unexpected condition has occurred which is invalid action \n\ for a NAT configuration.	iosxe-nat	LOG_SID_SH_CMD_ACTION
FMANRP_NAT4BADACI	4-Warning	Invalid action [dec] for NAT configuration	An unexpected condition has occurred which is invalid action \n\ for a NAT configuration.	iosxe-nat	LOG_SID_SH_CMD_ACTION
FMANRP_HIGGNG4PARAM	4-Warning	Highspeed logging export [chars] [node]unsupported	An unsupported exporting parameter for highspeed logging\n\ on data path is received.	iosxe-nat	"show running"
FMANRP_HIGGNG4PARAM	4-Warning	Highspeed logging export [chars] [node]unsupported	An unsupported exporting parameter for highspeed logging\n\ on data path is received.	iosxe-nat	"show running"
FMANRP_NAT4NOACL	4-Warning	Access list is null	An unexpected condition has occurred which is due to the absence of\n\ an access list structure.	iosxe-nat	"show ip access-lists"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>FWANRP_NAT4NOACL</del>	4-Warning	Access list is null	An unexpected condition has occurred which is due to the absence of\n an access list structure.	iosxe-nat	"show ip access-lists"
<del>FWANRP_NAT4NOLOGPRM</del>	4-Warning	Highspeed logging structure is nil	An unexpected condition has occurred which is due to the absence of\n a logging parameter structure.	iosxe-nat	"show running"
<del>FWANRP_NAT4NOLOGPRM</del>	4-Warning	Highspeed logging structure is nil	An unexpected condition has occurred which is due to the absence of\n a logging parameter structure.	iosxe-nat	"show running"
<del>FWANRP_NAT4NOMAPPING</del>	4-Warning	A mapping structure is null	An unexpected condition has occurred which is due to the absence of\n a NAT mapping structure.	iosxe-nat	LOG_SID_SH_CMD_ACTION
<del>FWANRP_NAT4NOMAPPING</del>	4-Warning	A mapping structure is null	An unexpected condition has occurred which is due to the absence of\n a NAT mapping structure.	iosxe-nat	LOG_SID_SH_CMD_ACTION
<del>FWANRP_NAT4NOSERVICE</del>	4-Warning	Service structure is null	An unexpected condition has occurred which is due to the absence of\n a NAT service structure.	iosxe-nat	LOG_SID_SH_CMD_ACTION
<del>FWANRP_NAT4NOSERVICE</del>	4-Warning	Service structure is null	An unexpected condition has occurred which is due to the absence of\n a NAT service structure.	iosxe-nat	LOG_SID_SH_CMD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FMANRP_NAT4NOPOOL	4-Warning	Pool structure is null	An unexpected condition has occurred which is due to the absence of\n\ a NAT pool structure.	iosxe-nat	LOG_SID_SH_CMD_ACTION
FMANRP_NAT4NOPOOL	4-Warning	Pool structure is null	An unexpected condition has occurred which is due to the absence of\n\ a NAT pool structure.	iosxe-nat	LOG_SID_SH_CMD_ACTION
FMANRP_NAT4NRANGE	4-Warning	Pool address range structure is null	An unexpected condition has occurred which is due to the absence of\n\ a NAT pool address range structure.	iosxe-nat	LOG_SID_SH_CMD_ACTION
FMANRP_NAT4NRANGE	4-Warning	Pool address range structure is null	An unexpected condition has occurred which is due to the absence of\n\ a NAT pool address range structure.	iosxe-nat	LOG_SID_SH_CMD_ACTION
FMANRP_NAT4NRCPARAM	4-Warning	Session replication structure is nil	An unexpected condition has occurred which is due to the absence of\n\ a session replication parameter structure.	iosxe-nat	"show running"
FMANRP_NAT4NRCPARAM	4-Warning	Session replication structure is nil	An unexpected condition has occurred which is due to the absence of\n\ a session replication parameter structure.	iosxe-nat	"show running"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IOSXE-NETFLOW-ERR</del>	3-Error	Failed to copy cache config message to IPC buffer for cache type [dec]	The operation of building a TDL message for cache configuration\n\n has failed.	iosxe-netflow	LOG_STD_ACTION
<del>IOSXE-NETFLOW-ERR</del>	3-Error	Failed to copy clear statistics message to IPC buffer	The operation of building a TDL message for clearing statistics \n\n in the data path has failed.	iosxe-netflow	LOG_STD_ACTION
<del>IOSXE-NETFLOW-ERR</del>	3-Error	Management interface [chars] cannot be used as source for an exporter	Exporter configuration failed because the management interface cannot be configured as source interface	iosxe-netflow	LOG_STD_ACTION
<del>IOSXE-NETFLOW-ERR</del>	3-Error	Failed to copy exporter config message to IPC buffer for cache \n\ type [dec]	The operation of building a TDL message for exporter configuration\n\n has failed.	iosxe-netflow	LOG_STD_ACTION
<del>IOSXE-NETFLOW-ERR</del>	3-Error	Management vrf [chars] cannot be used as exporter destination	Exporter configuration failed because management vrf cannot be used as exporter destination	iosxe-netflow	LOG_STD_ACTION
<del>IOSXE-NETFLOW-ERR</del>	3-Error	Failed to copy interface flow config message to IPC buffer for [chars]	The operation of building a TDL message for interface flow configuration\n\n has failed.	iosxe-netflow	LOG_STD_ACTION
<del>IOSXE-NETFLOW-ERR</del>	3-Error	CPP Flow definition can not be created %u	The operation of building a flow definition using flow fields received from CPP has failed.	iosxe-netflow	LOG_STD_ACTION
<del>IOSXE-NETFLOW-ERR</del>	3-Error	Sampler for sampler-map name [chars] is null	An unexpected condition has occurred which is due to the absence of\n\n a sampler-map structure	iosxe-netflow	"show sampler"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IOSXE-NETFLOW-SAMPLERMAP</del>	3-Error	Sampler-map name is null	An unexpected condition has occurred which is due to the absence of\n a sampler-map name.	iosxe-netflow	"show sampler"
<del>IOSXE-NETFLOW-SAMPLERMAP</del>	3-Error	Failed to copy sampler-map config message to IPC buffer for [chars]	The operation of building a TDL message for sampler-map configuration\n has failed.	iosxe-netflow	LOG_STD_ACTION
<del>IOSXE-NETFLOW-STAT</del>	3-Error	Failed to update netflow [chars] statistics	An unexpected condition has occurred when updating statistics	iosxe-netflow	LOG_STD_ACTION
<del>IOSXE-NETFLOW-AGGREGATION</del>	3-Error	Unknown aggregation cache command [dec] received	The aggregation cache configuration command has failed due to \n unknown command.	-	LOG_STD_ACTION
<del>IOSXE-NETFLOW-CACHE</del>	3-Error	Unknown cache type [dec] received	The cache configuration command has failed due to unknown\n cache scheme type.	-	LOG_STD_ACTION
<del>IOSXE-NETFLOW-EXPORTER</del>	4-Warning	Failed to change default exporter version to [dec]	The operation of changing the default exporter version has failed.	iosxe-netflow	"show ip flow export"
<del>IOSXE-NETFLOW-FIBDB</del>	4-Warning	fibdb for interface [chars] is null	An unexpected condition has occurred which is due to the absence\n of a fibidb structure.	iosxe-netflow	"show ip interface"
<del>IOSXE-NETFLOW-SUBIDB</del>	4-Warning	Sub-interface is null	An unexpected condition has occurred which is due to the absence of\n a swidb structure.	iosxe-netflow	"show ip interface"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>FMANRP_PBR3INVALID</del>	3-Error	The interface specified for '[chars]' is not valid	An non-existent interface is specified for the policy based routing route-map operation specified in the message.	iosxe-pbr	"show interface"
<del>FMANRP_PBR1PNAMEUL</del>	3-Error	The route-map name for [chars] is NULL	An unexpected condition has occurred due to the absence of an internal route-map data structure.	iosxe-pbr	"show route-map"
<del>FMANRP_PBR1MANULL</del>	3-Error	The route-map structure for [chars] is NULL	An unexpected condition has occurred due to the absence of an internal route-map data structure.	iosxe-pbr	"show route-map"
<del>FMANRP_PBR1RMP</del>	3-Error	Route-map [chars] has unsupported options for Policy-Based Routing. It has been removed from the interface if applied.		-	
<del>FMANRP_PBR1CMD</del>	3-Error	This Policy-Based Routing command is not supported on this platform. Use the no form of this command to remove it from configurations	Policy-Based Routing is not supported on this platform	hardware	"Remove this command"
<del>FMANRP_PBR1MNF</del>	3-Error	Route-map [chars] has unsupported options for Policy-Based Routing and has been removed from the interface if applied. \set interface [chars]\ is not a supported interface type for route-map.		-	

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MANRPF4R4MSEMF	3-Error	Route-map [chars] has unsupported options for Policy-Based Routing and has been removed from the interface if applied. \set interface [chars] cannot be the same interface where route-map is being applied [chars].	The route-map attached to an interface for policy routing contains an action that is not supported on this platform. This is a hardware limitation.	hardware	"Reconfigure the route-map. Use only 'permit' " "entries and 'set ip next-hop' action in the " "route-map."
MANRP_PFR4NONIF	4-Warning	PfR Interface [chars] not exist can't be [chars]	An unexpected condition has occurred which is due to the absence of\n\n MCP PfR interface info.	iosxe-pfr	"show oer border"
MANRP_HR4NULLNUT	4-Warning	NULL input [chars]	An unexpected condition has occurred which is due to the NULL value\n\n of the input parameter.	iosxe-pfr	"show oer border"
MANRP_HR4UNSUPPORTED	4-Warning	Unsupported action [chars]	An unexpected condition has occurred which is due to and unsupported action being executed.	iosxe-pfr	"show oer border"
MANRQSACTCLASMP	3-Error	Class-map information not found	An unexpected condition has occurred when trying to determine class-map information for one of the classes in a policy-map.	asr1k-qos	"show policy-map"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IMANRQSCNFCMP</del>	3-Error	Policy-map information not found	An unexpected condition has occurred when trying to determine policy-map information for one of the service policies attached to an interface.	asr1k-qos	"show policy-map"
<del>IMANRQSHRCHK</del>	3-Error	Only 2 level policy is supported.\n\n Service-policy : [chars]	Error occurred while attaching a hierarchical policy	polaris-qos	LOG_STD_ACTION
<del>IMANRQSCICLFL</del>	3-Error	No support for client policy with policing in class-default and marking in custom class	An internal error occurred during installing qos policy.	polaris-qos	LOG_STD_ACTION
<del>IMANRQSKNACHK</del>	3-Error	Conform-action in a policer can only be transmit.\n\n Policy Rejected.	Error occurred while performing conform action\n\n check on the policer.	polaris-qos	LOG_STD_ACTION
<del>IMANRQSHRCHK</del>	3-Error	Hierarchical Policy must have child under all user defined\n\n classes for wired ports. Service-policy : [chars]	Error occurred while attaching a hierarchical policy	polaris-qos	LOG_STD_ACTION
<del>IMANRQSHMDBCHK</del>	3-Error	Configuring service-policy on interface [chars] is not allowed	Error occurred while attaching policy on gigethernet0/0.	polaris-qos	LOG_STD_ACTION
<del>IMANRQSMARKCHK</del>	3-Error	Only markdown with a table-map is supported.	Error occurred while performing exceed\n\n action check on the policy attached	polaris-qos	LOG_STD_ACTION
<del>IMANRQSNOCUNFAS</del>	3-Error	account stats entry not found for class [node][node]target %u	An internal error occurred when looking up account\n\n statistics.	asr1k-qos	"show policy-map interface"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FWANR_QOS_POLICER_STATS	3-Error	policer stats entry not found for class [node][node]target %u	An internal error occurred when looking up policer\n\n statistics.	asr1k-qos	"show policy-map interface"
FWANR_QOS_SET_STATS	3-Error	set stats entry not found for class [node][node]target %u	An internal error occurred when looking up set\n\n statistics.	asr1k-qos	"show policy-map interface"
FWANR_QOS_PRIORITY	3-Error	Priority with level 3 is not supported.\n\n Service-policy : [chars]	Priority level 3 support is only for AVB policy.\n\n Hence configuration is rejected.	polaris-qos	LOG_STD_ACTION
FWANR_QOS_QBUFFER_CHECK	3-Error	Sum of configured qbuffer ratios should be less than 100.\n\n Configuration not accepted.\n\n Service-policy : [chars]\n\n Info : classes for which qbuffer ratio is not configured\n\n is given a buffer ratio 1	Error occurred while performing queue buffers\n\n policy install check. Wrong configuration	polaris-qos	LOG_STD_ACTION
FWANR_QOS_QOS_PARAM	3-Error	Internal QOS API error.	An internal API error occurred. QOS configuration may be limited.	asr1k-qos	LOG_STD_ACTION
FWANR_QOS_QCLASS_DEL	3-Error	Error trying to remove class [chars] from policymap [chars]	An operation to remove a class from a policy \n\n has failed due to an internal error.	asr1k-qos	"show policy-map"
FWANR_QOS_QOS_DEP	3-Error	Service policy [[chars]] installation error: invalid interface type [dec]	An invalid interface type was encountered when trying to configure a service policy. This service policy could not be installed.	asr1k-qos	"show policy-map"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FMANRP_QOS3QOSDBSP	3-Error	Service policy [[chars]] installation error: invalid interface type [dec]	An invalid interface type was encountered when trying to configure a service policy. This service policy could not be installed.	asr1k-qos	"show policy-map"
FMANRP_QOS3QOSDMAHAL	3-Error	Failed to copy more than [dec] bytes of message [chars] length [dec] into IPC buffer	An internal error occurred when trying to build an IPC message.	asr1k-qos	LOG_STD_ACTION
FMANRP_QOS3QOSMICRAHAL	3-Error	QoS template interface creation failed for policy [chars]: [chars]	An error occurred during template interface creation	ewlc-qos	LOG_STD_ACTION
FMANRP_QOS3QOSMPLDBRC	3-Error	Failed to [chars] record for policymap [chars] err [chars]	Database operation failed for record of the policymap	ewlc-qos	LOG_STD_ACTION
FMANRP_QOS3QOSMPLDBRRC	3-Error	Failed to [chars] record for flex mode policymap [chars] record size [dec] max record size [dec]	Database operation failed for record of the policymap because of max record size	ewlc-qos	LOG_STD_ACTION
FMANRP_QOS3QOSMPLDEHAL	3-Error	QoS template interface deletion failed for policy [chars]: [chars]	An error occurred during template interface deletion	ewlc-qos	LOG_STD_ACTION
FMANRP_QOS3QOSMPLINUSE	3-Error	[chars]: [chars]	record of the policymap is already in use	ewlc-qos	LOG_STD_ACTION
FMANRP_QOS3QOSMPLINEXIST	3-Error	QoS template does not exist in [chars] for policymap [chars]	QoS template information does not exist	ewlc-qos	LOG_STD_ACTION
FMANRP_QOS3QOSMPLINREJ	3-Error	Shape and bandwidth in the same class is unsupported.\n Policy Rejected. Service-policy : [chars]	Error occurred while performing qos policy check.	polaris-qos	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IMANR_QOSLIMDFMAL</del>	4-Warning	classmap [chars] is currently used by policymap please remove policymap from all targets before the modification	An internal error occurred when classmap being modified	asr1k-qos	LOG_STD_ACTION
<del>IMANR_QOSCOMDFY</del>	4-Warning	Police rate modification for COPP system class [chars] is discouraged.	User modified police rate for COPP system classes.	accsw-p-qos	LOG_STD_ACTION
<del>IMANR_QOSCOMDRNG</del>	4-Warning	Police rate modification for COPP system class [chars] is out-of-range.	User modified police rate for COPP system classes.	accsw-p-qos	LOG_STD_ACTION
<del>IMANR_QOSCOMRME</del>	4-Warning	Police rate removal for COPP system class [chars] is discouraged.	User removed police rate for COPP system classes.	accsw-p-qos	LOG_STD_ACTION
<del>IMANR_QOSMICHCK</del>	4-Warning	\nOnly class-default shaper in flat policy-map on parent interface [chars] can co-exist with Qos on sub targets	QoS attaching validation check for MPOL	qfp-qos	LOG_STD_ACTION
<del>IMANR_QOSMICHCKDFL</del>	4-Warning	\nOnly class-default shaper in flat policy-map on parent interface [chars] can co-exist with QoS on sub targets\n so policy-map [chars] on parent interface and its sub policy-maps all failed to attach please check it.	QoS attaching validation check for MPOL	qfp-qos	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FMANR_QOS4DMVPN	4-Warning	Only Shape and/or BRR is allowed on the QoS policy on GRE tunnel on MPoL hierarchy	An error occurred during MPoL check between DMVPN and GRE tunnel QoS policy	asr1k-qos	LOG_STD_ACTION
FMANR_QOS4QONC	4-Warning	fair-queue can not be configured on the parent queue of an ATM VC use child queue instead	Configuring fair-queue on the parent queue of an ATM VC is not supported	asr1k-qos	LOG_STD_ACTION
FMANR_QOS4QGENAL	4-Warning	qid generation failed reverting to default	An internal error occurred during platform qos \n\ initialization.	asr1k-qos	LOG_STD_ACTION
FMANR_QOS4QOSSTACK	4-Warning	Failed to install all classes for policymap [chars] excessive stack usage	An operation to configure the classes within a policymap \n\ has failed due to a resource issue. QoS configuration\n\ for this policymap is unlikely to work.	asr1k-qos	"show policy-map"
FMANR_QOS4QOSUBR	4-Warning	qos can not be attached to the target with UBR configured	An error occurred to attach qos to ATM VC/VP\n\ target with UBR configured	asr1k-qos	LOG_STD_ACTION
FMANR_QOS4STACKBUFR	4-Warning	Stack-buffer configuration has been modified. Current setting is stack-buffer [chars]. This change will take an effect once the configuration is written in flash write memory and then reload the switch.	Stack-buffer configurations in Catalyst 9300D switches.	accsw-p-qos	LOG_STD_ACTION
FMANR_QOS4BUFRSHARE	6-Information	The QoS share-buffer is [chars]. Traffic might be impacted momentarily due to policy reattachment.	QoS unified buffer configurations in CAT9K switches.	accsw-p-qos	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MANRPOQOCLASNSI</del>	6-Information	class [chars] id [node]in policymap [chars] id [node]already exists	This is an informational message and no action \n\ is required.	asr1k-qos	"show policy-map"
<del>MANRQOSPPOLCKK</del>	7-Debug	Unsupported QoS policy format in policy: [chars]	QoS policy validation check for EVPN policy	accsw-p-qos	LOG_STD_ACTION
<del>MANRQOSQORCHE</del>	7-Debug	The QoS profile has been modified to [chars]. The QoS policy-map's counters may not be updated accurately during the modification.	QoS profile configurations in CAT9K switches.	accsw-p-qos	LOG_STD_ACTION
<del>MANRBSIDMMSA</del>	3-Error	Failed to copy Bulk SN Entry message to IPC buffer	This operation to build a TDL message for Bulk SN Entry \n\ has failed.	iosxe-service_controller	LOG_STD_ACTION
<del>MANRBDIDMMSA</del>	3-Error	Failed to copy debug SC request message to IPC buffer	This operation to build a TDL message for debug SC command \n\ has failed.	iosxe-service_controller	LOG_STD_ACTION
<del>MANRBNIDMMSA</del>	3-Error	Failed to copy interface config message to IPC buffer for \n\ Interface [chars] 0x[hec] operation [chars]	This operation to build a TDL message for interface configuration\n\ has failed.	iosxe-service_controller	LOG_STD_ACTION
<del>MANRPSQODNQUE</del>	3-Error	Failed to enqueue SC [chars] message for transmission	This operation to enqueue an IPC message for sending has failed.	iosxe-service_controller	LOG_STD_ACTION
<del>MANRPSXIDMMSA</del>	3-Error	Failed to copy service context config message to IPC buffer for\n\ setx_name id [dec]	This operation to build a TDL message for service context \n\ configuration has failed.	iosxe-service_controller	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FMANRPS4NCSBMCIX	4-Warning	A mapping structure is null	An unexpected condition has occurred which is due to the absence of\n\ a SC mapping structure.	iosxe-service_controller	LOG_SID_SHCMD_ACTION
FMANRPS4NCSBADACI	4-Warning	Invalid action [dec] for SC configuration	An unexpected condition has occurred which is invalid action \n\ for a SC configuration.	iosxe-service_controller	LOG_SID_SHCMD_ACTION
FMANRPS4NCSWSWDB	4-Warning	Sub-interface is null	An unexpected condition has occurred which is due to the absence of\n\ a swidb structure.	iosxe-service_controller	"show ip interface"
FMANRPS3NAAAIDERR	3-Error	[chars][chars]. [chars]	An unexpected condition has occurred in processing AAA request/reply message causing AAA handling failure.	iosxe-sslvpn	LOG_STD_ACTION
FMANRPS3NAAAISAUERR	3-Error	[chars]: [chars]	An unexpected condition has occurred when got status of\n\ configuration	iosxe-sslvpn	LOG_STD_ACTION
FMANRPS3NAAAICNDERR	3-Error	[chars]. [chars]	An unexpected condition has occurred in processing conditional debug message	iosxe-sslvpn	LOG_STD_ACTION
FMANRPS3NAAAICGMERR	3-Error	Failed [chars]: [chars]	An unexpected condition has occurred in configuration processing \n\ causing configuration failure.	iosxe-sslvpn	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IOSXE-SSLVPN-3KERR	3-Error	Failed [chars]: [chars]	An unexpected condition has occurred in configuration processing \n\ causing configuration failure.	iosxe-sslvpn	LOG_STD_ACTION
IOSXE-SSLVPN-3HERR	3-Error	[chars]	Error has occurred when requested memory for SSLVPN route handling	iosxe-sslvpn	LOG_STD_ACTION
IOSXE-SSLVPN-3RIDERR	3-Error	[chars][chars]. [chars]	An unexpected condition has occurred in processing of SSLVPN route inject/remove message	iosxe-sslvpn	LOG_STD_ACTION
IOSXE-SSLVPN-3KLEARR	3-Error	Unable to send clear WEB VPN context stats message. [chars] [dec]	This operation to build a TDL messages for WEB VPN context stats \n\ clearing has failed.	iosxe-sslvpn	LOG_STD_ACTION
IOSXE-SSLVPN-3KUPERR	3-Error	Update WEB VPN context stats error. [chars] [dec]	An unexpected condition has occurred when updating global sslvpn \n\ statistics	iosxe-sslvpn	LOG_STD_ACTION
IOSXE-SSLVPN-3ASWUERR	3-Error	[chars]: [chars]	An unexpected condition has occurred when updating ssl web vpn \n\ context statistics	iosxe-sslvpn	LOG_STD_ACTION
IOSXE-SSLVPN-3WCNERR	3-Error	Failed [chars]: [chars]	An unexpected condition has occurred during WebVPN Context configuration\n\ causing failure.	iosxe-sslvpn	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FMANRP3WNAARFWAN	4-Warning	[chars]Invalid framed ip address [node]received from AAA. Not sending user config	Wrong AAA server config.	iosxe-sslvpn	LOG_STD_ACTION
FMANRP_VRF3AIFAILED	3-Error	NULL	A call to the API of another component has indicated an\n\n error.	iosxe-nat	LOG_STD_ACTION
FMANRP_VRF3EINVAL	3-Error	NULL	An unexpected input value to a function was incorrect	iosxe-nat	LOG_STD_ACTION
FMANRP_VRF3ENOMEM	3-Error	NULL	Not enough memory memory pre allocation failed	picasso-infra	LOG_STD_ACTION
FMANRP3DNDLCPAIED	3-Error	iosxe-fwdmgr	%s download to FP failed	"An object has failed to download to the forwarding processor (FP)"	"Examine the process logs to identify the cause for object download failure"
FMANRP3HER_IC_RESET	3-Error	iosxe-fwdmgr	IPC to[chars] has been reset after previous stuck	"IPC to a peer has been reset after previous stuck"	"check if there is any functional impact after recovery"
FMANRP3HER_IC_RESUME	3-Error	iosxe-fwdmgr	IPC to[chars] has returned to normal after previous stuck	"IPC to a peer is back to normal after previous stuck"	"check if there is any functional impact after recovery"
FMANRP3HER_IC_STUCK	3-Error	iosxe-fwdmgr	IPC to[chars] is stuck for more than %u seconds	"IPC to a peer is stuck"	-
FMANRP3NADCCERXION	4-Warning	iosxe-fwdmgr	Invalid position '%d' prevented[chars]	"A messaging error has occurred during service-policy modification and the configuration could not be downloaded properly"	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FMCORE2ACL_FAILURE	2-Critical	Interface [chars] traffic will not comply with ACLs in [chars] directions	ACLs will not be applied on traffic for this interface due to TCAM\n\n resource contention.	fm	"The configured ACLs are too large to all fit in the hardware TCAM.\n\n Use mls tcam priority command to prioritize interfaces for hardware\n\n switching. Try and share the same ACLs across multiple interfaces\n\n in order to reduce TCAM resource contention."
FMCORE2VACL_FAILURE	2-Critical	Interface [chars] traffic will not comply with VACLs in [chars] directions	VACLs will not be applied on traffic for this interface due to TCAM\n\n resource contention.	fm	"The configured ACLs are too large to all fit in the hardware TCAM.\n\n Use mls tcam priority command to prioritize interfaces for hardware\n\n switching. Try and share the same ACLs across multiple interfaces\n\n in order to reduce TCAM resource contention."
FMCORE4ACL_REDUCED	4-Warning	Interface [chars] routed traffic will be software switched in [chars] direction	TCAM resource contention prevents ACLs from being applied in the TCAM\n\n for this interface. The traffic on this interface will be sent to\n\n software in order that the ACLs can be applied.	fm	"The configured ACLs are too large to all fit in the hardware TCAM.\n\n Use mls tcam priority command to prioritize interfaces for hardware\n\n switching. Try and share the same ACLs across multiple interfaces\n\n in order to reduce TCAM resource contention."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FMCOREACL_ENABLED	6-Information	Interface [chars] routed traffic is hardware switched in [chars] direction	Earlier TCAM resource contention may have prevented ACLs from being applied in the TCAM for this interface. It has been enabled and traffic on this interface is hardware switched.	fm	"No need to take an action for this as it is an informational" "message not an error message."
FMD_ISSU2GET_BUFFER	2-Critical	FMD ISSU client failed to get buffer for message. Error: [dec] [chars]	The FMD ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	medianet-metadata	"show logging and show checkpoint client"
FMD_ISSU2GET_BUFFER	2-Critical	FMD ISSU client failed to get buffer for message. Error: [dec] [chars]	The FMD ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	medianet-metadata	"show logging and show checkpoint client"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FMD_ISSU-2-INIT	2-Critical	FMD ISSU client initialization failed to [chars]. Error: [dec] [chars]	The FMD ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	medianet-metadata	LOG_STD_ACTION
FMD_ISSU-2-INIT	2-Critical	FMD ISSU client initialization failed to [chars]. Error: [dec] [chars]	The FMD ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	medianet-metadata	LOG_STD_ACTION
FMD_ISSU-2-INIT	2-Critical	FMD ISSU client failed to send negotiation message. Error: [dec] [chars]	The FMD ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	medianet-metadata	"show logging and show checkpoint client"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>FMD_ISSU_SESSON_NEGO</del> FMD_ISSU_SESSON_NEGO	2-Critical	FMD ISSU client failed to send negotiation message. Error: [dec] [chars]	The FMD ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	medianet-metadata	"show logging and show checkpoint client"
<del>FMD_ISSU_SESSON_NEGO</del> FMD_ISSU_SESSON_NEGO	2-Critical	FMD ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The FMD ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	medianet-metadata	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>FMD_ISSU_SESSON_NEGO</del> FMD_ISSU_SESSON_NEGO	2-Critical	FMD ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The FMD ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	medianet-metadata	"show issu session <client_id> and " "show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FMD_ISSU_SESSION_RECV_ERR	2-Critical	FMD ISSU client failed to register session information. Error: [dec] [chars]	The FMD ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	medianet-metadata	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
FMD_ISSU_SESSION_RECV_ERR	2-Critical	FMD ISSU client failed to register session information. Error: [dec] [chars]	The FMD ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	medianet-metadata	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
FMD_ISSU_CAPN_EXCH_SIZE_ERR	3-Error	FMD ISSU client capability list is empty.	The FMD ISSU client capability exchange list size is invalid.	medianet-metadata	"show issu capability entires <Client_ID>"
FMD_ISSU_CAPN_EXCH_SIZE_ERR	3-Error	FMD ISSU client capability list is empty.	The FMD ISSU client capability exchange list size is invalid.	medianet-metadata	"show issu capability entires <Client_ID>"
FMD_ISSU_CAPN_EXCH_INCOMP_ERR	3-Error	FMD ISSU client capability exchange result incompatible.	The FMD ISSU client capability exchange have negotiated as incompatible with the peer.	medianet-metadata	"show issu negotiated capability <Session_ID>"
FMD_ISSU_CAPN_EXCH_INCOMP_ERR	3-Error	FMD ISSU client capability exchange result incompatible.	The FMD ISSU client capability exchange have negotiated as incompatible with the peer.	medianet-metadata	"show issu negotiated capability <Session_ID>"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
FMD_ISSU_NVALD_SESSION	3-Error	FMD ISSU client does not have a valid registered session.	The FMD ISSU client does not have a valid registered session.	medianet-metadata	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
FMD_ISSU_NVALD_SESSION	3-Error	FMD ISSU client does not have a valid registered session.	The FMD ISSU client does not have a valid registered session.	medianet-metadata	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>FMD_ISSU_NVALD_SESSION</del>	3-Error	'Message Type [dec]' is not supported by FMD ISSU client at peer	The FMD ISSU client at the peer supervisor is not compatible for this message type. The FMD client will be marked as incompatible with the peer.	medianet-metadata	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>FMD_ISSU_NVALD_SESSION</del>	3-Error	'Message Type [dec]' is not supported by FMD ISSU client at peer	The FMD ISSU client at the peer supervisor is not compatible for this message type. The FMD client will be marked as incompatible with the peer.	medianet-metadata	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
FMD_ISSU_BMSG_NOT_CHK	3-Error	FMD ISSU client 'Message Type [dec]' is not compatible	The FMD ISSU client received an incompatible message from the peer device. The message cannot be processed.	medianet-metadata	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FMD_ISSU3MSG_NOT_OK	3-Error	FMD ISSU client 'Message Type [dec]' is not compatible	The FMD ISSU client received an incompatible message from the peer device. The message cannot be processed.	medianet-metadata	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
FMD_ISSU3MSG_SIZE	3-Error	FMD ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The FMD ISSU client failed to calculate the MTU for the specified message. The FMD ISSU client is not able to send the message to the standby device.	medianet-metadata	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
FMD_ISSU3MSG_SIZE	3-Error	FMD ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The FMD ISSU client failed to calculate the MTU for the specified message. The FMD ISSU client is not able to send the message to the standby device.	medianet-metadata	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
FMD_ISSU3UNREG_SRV	3-Error	FMD ISSU client failed to unregister session information. Error: [dec] [chars]	The FMD ISSU client failed to unregister session information.	medianet-metadata	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
FMD_ISSU3UNREG_SRV	3-Error	FMD ISSU client failed to unregister session information. Error: [dec] [chars]	The FMD ISSU client failed to unregister session information.	medianet-metadata	"show issu session <client_id> and " "show issu negotiated capability <session_id>"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
FMDISSUBTRANSFORMAL	3-Error	FMD ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The FMD ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the FMD state between the active device and the standby device is not identical.	medianet-metadata	"show issu session <client_id> and " "show issu negotiated version <session_id>"
FMDISSUBTRANSFORMAL	3-Error	FMD ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The FMD ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the FMD state between the active device and the standby device is not identical.	medianet-metadata	"show issu session <client_id> and " "show issu negotiated version <session_id>"
FMD-IMALPNITFAILED	1-Alert	MAL process failed creation	System is going through a software error and has failed to create a process	-	LOG_SIDSH_TIEHACION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FMD-1-MALPNITFAILED	1-Alert	MAL process failed creation	System is going through a software error and has failed to create a process	-	LOG_STD_ACTION
FMD-2-IPC_INIT	2-Critical	IPC message handler registration failure rc %u	Registering an IPC message handler for the FMD feature failed. This will cause the feature to not function.	qfp-fmd	"This is normally a software issue. " "The consequences are that the FMD feature will not function. " LOG_STD_ACTION
FMD-3-DBINITFAILED	3-Error	Database Init failed	This message can occur for the following unrelated reasons. Each reason is accompanied by a recommended action.\n Due to resource unavailability the INIT would have been failed.\n	-	"If none of the previous actions fix the problem copy the error " "message exactly as it appears and report it to your Cisco " "technical support representative."
FMD-3-DBINITFAILED	3-Error	Database Init failed	This message can occur for the following unrelated reasons. Each reason is accompanied by a recommended action.\n Due to resource unavailability the INIT would have been failed.\n	-	"If none of the previous actions fix the problem copy the error " "message exactly as it appears and report it to your Cisco " "technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FMD3-DHLEIENCDEHALD	3-Error	Lookup failed for the flow of source_ip: [node]dest_ip: [node] source_port: [node]dest_port: [node]l4_protocol: [node] class_id: [node]vrf_table_id: %u	This message can occur for the following unrelated reasons. Each reason is accompanied by a recommended action.\n This entry is not present in the Flow Table for the 4 Tuple to delete the node It might because the Table is not populated for the flow \n The flow would have been deleted \n	-	"If none of the previous actions fix the problem copy the error " "message exactly as it appears and report it to your Cisco " "technical support representative."
FMD3-DHLEIENCDEHALD	3-Error	Lookup failed for the flow of source_ip: [node]dest_ip: [node] source_port: [node]dest_port: [node]l4_protocol: [node] class_id: [node]vrf_table_id: %u	This message can occur for the following unrelated reasons. Each reason is accompanied by a recommended action.\n This entry is not present in the Flow Table for the 4 Tuple to delete the node It might because the Table is not populated for the flow \n The flow would have been deleted \n	-	"If none of the previous actions fix the problem copy the error " "message exactly as it appears and report it to your Cisco " "technical support representative."
FMD-3-IPC_NORES	3-Error	No space for the IPC reply size %u	For a request from upper FMD software stack layers it was not possible to allocate space for a reply for the specified size. The consequence of this could be a stuck binding that cannot be established etc. In rare cases this could also affect other operations such as feature activation.	qfp-fmd	"This is normally a software issue. " <b>LOG_SID_RECUR_ACTION</b>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FMD3-IPC_OPEN_REPLY	3-Error	IPC Open Reply failed request %u	For a request from upper FMD software stack layers it was not possible to open the reply buffer. The consequence of this could be a stuck binding that cannot be established etc. In rare cases this could also affect other operations such as feature activation.	qfp-fmd	"This is normally a software issue. " LOG_SID_RECUR_ACTION
FMD3-LOOKUPFAILED	3-Error	Lookup failed for the flow of source_ip: [node]dest_ip: [node] source_port: [node]dest_port: [node]l4_protocol: [node] class_id: [node]vrf_table_id: %u	This message can occur for the following unrelated reasons. Each reason is accompanied by a recommended action.\n This entry is not present in the Flow Table for the 4 Tuple It might because the Table is not populated for the flow \n The flow would have been deleted \n	-	"If none of the previous actions fix the problem copy the error " "message exactly as it appears and report it to your Cisco " "technical support representative."
FMD3-LOOKUPFAILED	3-Error	Lookup failed for the flow of source_ip: [node]dest_ip: [node] source_port: [node]dest_port: [node]l4_protocol: [node] class_id: [node]vrf_table_id: %u	This message can occur for the following unrelated reasons. Each reason is accompanied by a recommended action.\n This entry is not present in the Flow Table for the 4 Tuple It might because the Table is not populated for the flow \n The flow would have been deleted \n	-	"If none of the previous actions fix the problem copy the error " "message exactly as it appears and report it to your Cisco " "technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FMD3MEMALOCFAILED	3-Error	Memory Allocation failed	This message can occur for the following unrelated reasons. Each reason is accompanied by a recommended action. The memory might be full due to Flow Limit Exceeded. The Memory Leak would have happened.	-	"If none of the previous actions fix the problem copy the error " "message exactly as it appears and report it to your Cisco " "technical support representative."
FMD3MEMALOCFAILED	3-Error	Memory Allocation failed	This message can occur for the following unrelated reasons. Each reason is accompanied by a recommended action. The memory might be full due to Flow Limit Exceeded. The Memory Leak would have happened.	-	"If none of the previous actions fix the problem copy the error " "message exactly as it appears and report it to your Cisco " "technical support representative."
FMD-3-NULL	3-Error	System received an invalid NULL pointer	This message can occur for the following unrelated reasons. Each reason is accompanied by a recommended action. Due to a software error.	-	"If none of the previous actions fix the problem copy the error " "message exactly as it appears and report it to your Cisco " "technical support representative."
FMD-3-NULL	3-Error	System received an invalid NULL pointer	This message can occur for the following unrelated reasons. Each reason is accompanied by a recommended action. Due to a software error.	-	"If none of the previous actions fix the problem copy the error " "message exactly as it appears and report it to your Cisco " "technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FMD-3-TRANSPORT	3-Error	Operation [chars] on transport layer failed due to [chars]	This message can occur for the following unrelated reasons. Each reason is accompanied by a recommended action. Due to a software error.	-	"If none of the previous actions fix the problem copy the error " "message exactly as it appears and report it to your Cisco " "technical support representative."
FMD-3-TRANSPORT	3-Error	Operation [chars] on transport layer failed due to [chars]	This message can occur for the following unrelated reasons. Each reason is accompanied by a recommended action. Due to a software error.	-	"If none of the previous actions fix the problem copy the error " "message exactly as it appears and report it to your Cisco " "technical support representative."
FME-3-DEBUG_FAILED	3-Error	Flow Metric Engine fails to register with Conditional Debugging.	Flow Metric Engine fails to register with Conditional Debugging infra.	asr1k-avc	LOG_STD_ACTION
FME-2-IPC_INIT	2-Critical	IPC message handler registration failure rc %u	Registering an IPC message handler for the FME feature failed. This will cause the feature to not function.	qfp-mmon	"This is normally a software issue. " "The consequences are that the FME feature will not function. " LOG_STD_ACTION
FME-3-IPC_NORES	3-Error	No space for the IPC reply size %u	For a request from upper FME software stack layers it was not possible to allocate space for a reply for the specified size. The consequence of this could be a stuck monitor that cannot be established etc. In rare cases this could also affect other operations such as feature activation.	qfp-mmon	"This is normally a software issue. " LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FME3IPC_OPEN_REPLY	3-Error	IPC Open Reply failed request %u	For a request from upper FME software stack layers it was not possible to open the reply buffer. The consequence of this could be a stuck monitor that cannot be established etc. In rare cases this could also affect other operations such as feature activation.	qfp-mmon	"This is normally a software issue. " LOG_SID_RECUR_ACTION
FMEA4DS_JIB_ERRLOG	4-Warning	DS JIB Santana FPGA Err log [chars] [chars]	DS JIB Santana FPGA FMEA failure log	cmts-infra	"Minor non-fatal recoverable failure event"
IMPACL3ACLIMEXCEED	3-Error	iosxe-fwdmgr	ACL[chars] exceeded limitation of %u ACEs per ACL	"A software limitation has been exceeded."	"Reduce the access control list (ACL) configuration. A reboot of the forwarding processor (FP) is recommended."
IMPACL3ACLMODYFAIL	3-Error	asr1k-acl	ACL:%s modification through object group edit failed	"Object-group used in the ACL was modified. Those changes could not be accommodated in the ACL"	"Fix the object-group changes. Delete ACL and reconfigure it "
IMPACL3ACLDOWNOD	3-Error	iosxe-fwdmgr	%s%s fail to download because[chars].	"The access control list (ACL) object has failed to download. This could be due to a hardware or software resource limitation or a software defect."	"Check the logs for information on the relevant object download states. Remove the ACL attachment to the interface or delete the ACL. Reboot the forwarding processor (FP)."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IMP_ACL_PROTOCOL_CHK	3-Error	iosxe-fwdmgr	ACL[chars] protocol does not match what was previously configured	"The error occurs for one of two reasons. An access control list (ACL) reference was made to an ACL of a different protocol; or an ACL was added or edited when there were similarly named ACL references of a different protocol"	"Remove the conflicting ACL or the conflicting ACL references."
IMP_OGACL_BCODE_CHK	3-Error	asr1k-acl	%s OGACL request failed in bincode check: required bits (%d) max available bits (%d).	"The scaled OGACL failed to download due to the hardware or software resource limitation on bincode."	"Check the logs for information on the relevant object download states. Remove the OGACL configuration and binding"
IMP_OGACL_PD_RESOURCE	3-Error	asr1k-acl	%s OGACL runs out of PD resources.	"The scaled OGACL failed to download due to PD hardware or software resource limitation."	"Check the logs for information on the relevant object download states. Remove the OGACL configuration and binding"
IMP_SGACL_CELL_DOWNLOAD	3-Error	iosxe-fwdmgr	SGACL Cell (%d %d) policy[chars] fail to download because[chars].	"The SGACL policy has failed to download. This could be due to a hardware or software resource limitation or a software defect."	"Check the logs for information on the relevant object download states. Remove the SGACL policy for that cell"
IMP_CK_INCONSISTENCY	4-Warning	iosxe-fwdmgr	Consistency Checker(CCK) detected inconsistency for[chars]. Check 'show consistency-checker run-id %d detail'.	"CCK has detected the inconsistency between the IOSD and fmanFP tables."	"Find out the entry using the show consistency-checker <> command"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IMP_CXSC_DEINITIALIZATION</del>	3-Error	iosxe-cxsc	%s Returned:[chars]	"The CXSC DEINITIALIZATION has FAILED. This could be due to a hardware or software resource limitation or a software defect."	"Check memory usage and router configuration and try to re-activate virtual service again. If it shows the same results then please contact TAC."
<del>IMP_CXSC_DOMAIN_CONFIG</del>	3-Error	iosxe-cxsc	%s Returned:[chars]	"The CXSC DOMAIN CONFIG DOWNLOAD has FAILED. This could be due to a hardware or software resource limitation or a software defect."	"Check memory usage and router configuration and try to re-activate virtual service again. If it shows the same results then please contact TAC."
<del>IMP_CXSC_INITIALIZATION</del>	3-Error	iosxe-cxsc	%s Returned:[chars]	"The CXSC INITIALIZATION has FAILED. This could be due to a hardware or software resource limitation or a software defect."	"Check memory usage and router configuration and try to re-activate virtual service again. If it shows the same results then please contact TAC."
<del>IMP_CXSC_POLICY_DOWNLOAD</del>	3-Error	iosxe-cxsc	%s Returned:[chars]	"The CXSC POLICY DOWNLOAD has FAILED. This could be due to a hardware or software resource limitation or a software defect."	"Check memory usage and router configuration and try to re-activate virtual service again. If it shows same results then please contact TAC."
<del>IMP_CXSC_POLICY_DOWNLOAD</del>	6-Information	iosxe-cxsc	New policy version: %llu has now been installed and is active	"The CXSC POLICY DOWNLOAD of the numbered version has succeeded."	"This an informational message only"
<del>IMP_QoS_STATS_PROGRESS</del>	6-Information	iosxe-fwdmgr	statistics are progressing	"QoS statistics are now progressing normally. This is an informational message."	"No action is required."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IMP_QOS_STATS_STALLED</del>	6-Information	iosxe-fwdmgr	statistics stalled	"QoS statistics are temporarily stalled. This is an informational message."	"No action is required."
<del>IMP_URPF_LIST_DOWNLOAD</del>	3-Error	iosxe-fwdmgr	Unicast RPF list[chars] for list %u fail to download because[chars].	"The unicast reverse path forwarding (URPF) list failed to download. This can be caused by a hardware or software resource limitation or software defect."	"Check the logs for information on the relevant download states. Reboot the forwarding processor (FP)."
<del>IMP_URPF_IC_DOWNLOAD</del>	3-Error	iosxe-fwdmgr	Unicast RPF[chars] on interface[chars] fail to download because[chars].	"The unicast reverse path forwarding (URPF) operation failed to download. This can be caused by a hardware or software resource limitation or a software defect."	"Check the logs for information on the relevant download states. Remove the uRPF feature enabled on any interface. Reboot the forwarding processor (FP)."
FMFP-3-DP_NOMEM	3-Error	iosxe-fwdmgr	DP not enough memory.[chars]	"An object download to DP failed because the memory of DP is not enough."	"Run show platform resource to see the memory usage"
<del>IMP_INTERFACE_LOOKUP</del>	3-Error	iosxe-fwdmgr	Interface object lookup by[chars] not found for interface %u	"The desired interface object was not found."	"Examine the interface state in the operating system"
<del>IMP_ACK_FROM_DP_RESUME</del>	3-Error	iosxe-fwdmgr	AOM ack of objects to Data Plane is back to normal	"An object ack from lower layer to FMAN-FP has finished after a temporary stuck. It can be caused by incomplete configuration or software defects"	"check if there is any functional impact after recovery"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FM3_OB_ACK_FROM_DP_SUCK	3-Error	iosxe-fwdmgr	AOM ack download to Data Plane is stuck for more than %u seconds[chars]	"An object ack from lower layer to FMAN-FP has taken long time. It can be caused by incomplete configuration or software defects"	"Run show platform software object-manager fp [active standby] [pending-ack-update update update command] sorted <min_pending_time> to see the sorted list of update/batch/command in pending state for more than the min_pending_time. For incomplete configuration
FM3_OB_DWN_DP_FAILED	3-Error	iosxe-fwdmgr	%s download to DP failed	"An object has failed to download to the data plane"	"Examine the list of error objects in the forwarding processor (FP) forwarding manager asynchronous object logs."
FM3_OB_DWN_DP_RESUME	3-Error	iosxe-fwdmgr	AOM download of objects to Data Plane is back to normal	"An object download from FMAN-FP to lower layer has finished after a temporary stuck. It can be caused by incomplete configuration or software defects"	"check if there is any functional impact after recovery"
FM3_OB_DWN_DP_SUCK	3-Error	iosxe-fwdmgr	AOM download to Data Plane is stuck for more than %u seconds[chars]	"An object download from FMAN-FP to lower layer has taken long time. It can be caused by incomplete configuration or software defects"	"Run show platform software object-manager fp [active standby] [pending-ack-update update update command] sorted <min_pending_time> to see the sorted list of update/batch/command in pending state for more than the min_pending_time. For incomplete configuration

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>INFROK4CONSECYOND</del>	4-Warning	iosxe-fwdmgr	Consistency Checker(CCK) detected inconsistency for[chars]. Check 'show consistency-checker run-id %d detail'.	"CCK has detected the inconsistency between the IOSD and fmanRP tables."	"Find out the entry using the show consistency-checker < > command"
<del>INFROK3VALRCHDIS</del>	3-Error	Failed with return code: [dec]	Netflow failed to process an evaluate flow record field list request.	cpp-ucode	LOG_STD_ACTION
<del>INFROK3PRECTEMPLSH</del>	3-Error	Failed with return code: [dec]	Netflow failed to force a template refresh for an exporter.	cpp-ucode	LOG_STD_ACTION
<del>INFROK3EXPORTERINT</del>	3-Error	Failed with return code: [dec]	Netflow failed to initialize the exporter.	cpp-ucode	LOG_STD_ACTION
<del>INFROK3PRECTEMPLATE</del>	3-Error	Failed for exporter: [hec] with return code: [dec]	Netflow failed to bind an option template.	cpp-ucode	LOG_STD_ACTION
<del>INFROK3PRECTEMPLATE</del>	3-Error	Failed for exporter: [hec] with return code: [dec]	Netflow failed to unbind an option template.	cpp-ucode	LOG_STD_ACTION
<del>INFROK3PRECTIMERSTART</del>	3-Error	Failed for exporter: [hec] with return code: [dec]	Netflow failed to start an option timer.	cpp-ucode	LOG_STD_ACTION
<del>INFROK3PRECTIMERSTOP</del>	3-Error	Failed for exporter: [hec] with return code: [dec]	Netflow failed to stop an option timer.	cpp-ucode	LOG_STD_ACTION
<del>INFROK3EXPORTERSHUT</del>	3-Error	Failed with return code: [dec]	Netflow failed to shutdown the exporter.	cpp-ucode	LOG_STD_ACTION
<del>INFROK3FLOWCACHEWALK</del>	3-Error	Failed for session: [hec] with return code: [dec]	Netflow failed to process a flow cache walk request.	cpp-ucode	LOG_STD_ACTION
<del>INFROK3FLOWCACHEWALKFLEX</del>	3-Error	Failed for session: [hec] with return code: [dec]	Netflow failed to process a flow cache walk/flexible request.	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>INF_PROXY3TOPKORRESMUST</del>	3-Error	This field can't be used for sort	Show Top Talkers command contains sort field specification that is not supported.	cpp-ucode	LOG_STD_ACTION
<del>INF_PROXY3CUNHANDLED</del>	3-Error	type [dec]	An unknown message was received by the Netflow Client Proxy.	cpp-ucode	LOG_STD_ACTION
<del>INF_PROXY3MOCACHEAGRT</del>	3-Error	Failed with return code: [dec]	Netflow failed to initialize the ager.	cpp-ucode	LOG_STD_ACTION
<del>INF_PROXY3MOCACHEAGRT</del>	3-Error	Failed with return code: [dec]	Netflow failed to shutdown the ager.	cpp-ucode	LOG_STD_ACTION
<del>INF_PROXY3MOCACHECLEAN</del>	3-Error	Failed with return code: [dec]	Netflow failed to perform cache cleanup.	cpp-ucode	LOG_STD_ACTION
<del>INF_PROXY3MOCACHEFLUSH</del>	3-Error	Failed with return code: [dec]	Netflow failed to force a cache flush.	cpp-ucode	LOG_STD_ACTION
<del>INF_PROXY3MOCACHEFREEINIT</del>	3-Error	Failed with return code: [dec]	Netflow failed to initialize the free list.	cpp-ucode	LOG_STD_ACTION
<del>INF_PROXY3MOCACHEFREEPOPULATE</del>	3-Error	Failed with return code: [dec]	Netflow failed to populate the free list.	cpp-ucode	LOG_STD_ACTION
<del>INF_PROXY3OBJMODIFY</del>	3-Error	Failed with return code: [dec]	Netflow failed to process an object modify request.	cpp-ucode	LOG_STD_ACTION
<del>INF_PROXY3PROCESSFLOWRECORDFIELDLIST</del>	3-Error	Failed with return code: [dec]	Netflow failed to process a process flow record field list request.	cpp-ucode	LOG_STD_ACTION
<del>INF_PROXY3PACKETALLOCATION</del>	3-Error		Allocation of IPC packet failed.	cpp-ucode	LOG_STD_ACTION
<del>INF_PROXY3SENDIPC</del>	3-Error	[dec]	Could not send IPC reply for proxy request.	cpp-ucode	LOG_STD_ACTION
FNF_PROXY-3-STATS	3-Error	Failed with return code: [dec]	Netflow failed to process a stats request.	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FNF3CFT_REG_FAILED	3-Error	FNF fails to connect to CFT infra.	FNF fails to connect to CFT infra.	cpp-ucode	LOG_STD_ACTION
FNF3CLEANUP_ENTRNY	3-Error	Failed	Netflow failed to clean up a record for reuse.	cpp-ucode	LOG_STD_ACTION
FNF3DEBUG_REG_FAILED	3-Error	FNF fails to registrate with Conditional Debugging.	FNF fails to registrate with Conditional Debugging infra.	cpp-ucode	LOG_STD_ACTION
<del>FNF3CLI_BUFFER_ZERO</del>	3-Error	Failed copy to CLI buffer PI will receive zero buffer	Failed copy to CLI buffer during the walk process fill the buffer with 0	cpp-ucode	LOG_STD_ACTION
<del>FNF3EXPORTER_FAILED</del>	3-Error	Format: [dec]	FNF Exporter build failed. unknown type.	cpp-ucode	
<del>FNF3FIELDLIST_MEM</del>	3-Error	Insufficient memory [dec] for field_list	Internal error netflow client provided insufficient memory to process a field list	cpp-ucode	LOG_STD_ACTION
<del>FNF3FIELDLIST_MAX</del>	3-Error	Field_list too large max [dec]	Netflow field list contains too many fields. At most 32 fields are supported including any hidden fields automatically added as necessary for record keeping	cpp-ucode	LOG_STD_ACTION
<del>FNF3FIELDLIST_NONKEY</del>	3-Error	Field_id [dec] must be non-key	Netflow Field list specified timestamp/counter field as a key field which is not supported	cpp-ucode	LOG_STD_ACTION
<del>FNF3FIELDLIST_UNKNOWN</del>	3-Error	Unknown field variety [dec] for field_id [dec]	Internal error Netflow field list entry mapped to unknown field variety	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>FNF-FIELD_UNEXPECTED_SIZE</del>	3-Error	Unexpected size for field_id [dec] expected [dec]/got [dec]	Netflow specified unexpected size for field_id	cpp-ucode	LOG_STD_ACTION
<del>FNF-FLOW_RECORD_LAYOUT</del>	3-Error	Flow record layout too large max [dec]	Netflow field list results in a flow record layout which is too large. At most 128 bytes of flow record data is supported including any padding and any hidden fields automatically added as necessary for record keeping	cpp-ucode	LOG_STD_ACTION
<del>FNF-FUNCTION_DEPRECATED</del>	3-Error	Format: [dec]	Netflow doesn't support this aggregation type.	cpp-ucode	LOG_STD_ACTION
<del>FNF-FUNCTION_EXPORT</del>	3-Error	Format: [dec]	Netflow doesn't support this export format.	cpp-ucode	LOG_STD_ACTION
<del>FNF-FUNCTION_MMA_ID</del>	3-Error	MMA global ID [dec] Netflow field [dec] is not supported by MMA	-	-	-
<del>FNF-FUNCTION_OPTION</del>	3-Error	Option: [dec]	Netflow doesn't support this export option.	cpp-ucode	LOG_STD_ACTION
FNF-3-FREE_LIST_ADD	3-Error	Failed for record: 0x[hec]	Netflow failed to return a record to the free list.	cpp-ucode	LOG_STD_ACTION
FNF-3-INVALID_CMD	3-Error	Flow builder encountered an invalid command: [dec].	Flow builder doesn't support the command encountered in the instruction stream.	cpp-ucode	LOG_STD_ACTION
FNF-3-INVALID_FO	3-Error	FNF FO is not valid	FNF feature object is not valid.	cpp-ucode	LOG_STD_ACTION
<del>FNF-FUNCTION_MONITOR</del>	3-Error	Monitor type: [dec]	IPFIX doesn't support this monitor type.	cpp-ucode	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
FNF3KEY_SIZE_INVALID	3-Error	Unexpected key fields size: [dec]	Netflow attempted to install a flow with an invalid key fields size.	cpp-ucode	LOG_STD_ACTION
FNF-3-LC_STATUS	3-Error	Flow monitor [chars] can not be added to [chars] rejected on module [chars] : [chars]	The flow monitor has been rejected on the specified module. It will have been removed from the RP configuration too. This can happen for example when a monitor is removed and added again immediately before the tidy has been completed or in the case where a flow monitor is waiting at automore when the monitor is removed from the interface then reapplied	flexible-netflow	"Check the configuration of the Flow Monitor that" " was applied for errors. If the rejection was" " due to the LC not having finished cleaning up after" " a previous removal of a Flow Monitor wait until" " the cleaning up has finished then reapply the" " config."
FNF-3-LC_STATUS	3-Error	Flow monitor [chars] can not be added to [chars] rejected on module [chars] : [chars]	The flow monitor has been rejected on the specified module. It will have been removed from the RP configuration too. This can happen for example when a monitor is removed and added again immediately before the tidy has been completed or in the case where a flow monitor is waiting at automore when the monitor is removed from the interface then reapplied	flexible-netflow	"Check the configuration of the Flow Monitor that" " was applied for errors. If the rejection was" " due to the LC not having finished cleaning up after" " a previous removal of a Flow Monitor wait until" " the cleaning up has finished then reapply the" " config."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FNF3-PROVISIONING	3-Error	[chars] failed to provision '[chars] flow monitor [chars] [chars]' on [chars]: [chars]	The attachment of the Flow Monitor to has had a problem on the device identified. It may be working on other devices and the configuration is retained.	flexible-netflow	"Check the device identified is working as expected" " and that it can support the configuration of the" " Flow Monitor to the chosen attachment point."
FNF3-PROVISIONING	3-Error	[chars] failed to provision '[chars] flow monitor [chars] [chars]' on [chars]: [chars]	The attachment of the Flow Monitor to has had a problem on the device identified. It may be working on other devices and the configuration is retained.	flexible-netflow	"Check the device identified is working as expected" " and that it can support the configuration of the" " Flow Monitor to the chosen attachment point."
FNF3REFCNT_TIMEOUT	3-Error	never reached 0 for entry [hec]	Netflow timed out waiting for an flow cache entries refcnt. to hit 0. The entry was forced out	cpp-ucode	LOG_STD_ACTION
FNF3REFCNT_UNDERFLOW	3-Error	refcnt underflow for entry [hec]	Netflow error caused flow cache entry reference count to go negative. The decrement was rescinded	cpp-ucode	LOG_STD_ACTION
FNF3UNSUPPORTED_PROTO	3-Error	[chars]	This protocol is unsupported.	cpp-ucode	LOG_STD_ACTION
FNF4FREE_LIST_EMPTY	4-Warning	Monitor: 0x[hec]	Netflow attempted to install a flow but no free flow records were available.	cpp-ucode	LOG_STD_ACTION
FNF6AGER_OVERRIDE	6-Information	Flow [chars] time modified by [chars] to [dec]	The aging timer has been modified and may be different from configured value.	flexible-netflow	LOG_SID_NO_ACTION



<del>Facility-Severity-Mnemonic</del>	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>FNF-6-AGGER_OVERRIDE</del>	6-Information	Flow [chars] time modified by [chars] to [dec]	The aging timer has been modified and may be different from configured value.	flexible-netflow	LOG_SID_NO_ACTION
<del>FNF-6-CONFIGURATION</del>	6-Information	Invalid FNF configuration: [chars]	An invalid FNF configuration was detected.	flexible-netflow	"Review the FNF configuration before repeating the action."
<del>FNF-6-CONFIGURATION</del>	6-Information	Invalid FNF configuration: [chars]	An invalid FNF configuration was detected.	flexible-netflow	"Review the FNF configuration before repeating the action."
<del>FNF-6-MONITOR_EXCEEDED</del>	6-Information	Interface [chars] dir=[chars]: the number of monitors that should run on	QFP maximum supported number of monitors per packet was exceeded. As a result the excess number of monitors will not run on the packet. Static monitors always take priority over policy-map monitors.	cpp-ucode	LOG_SID_DBG_ACTION
<del>FNF-6-ERROR</del>	6-Information	FNF error: [chars]	An FNF error occurred.	flexible-netflow	"For more information repeat the action with FNF debugging enabled."
<del>FNF-6-ERROR</del>	6-Information	FNF error: [chars]	An FNF error occurred.	flexible-netflow	"For more information repeat the action with FNF debugging enabled."
<del>FNF-6-CACHE_OVERFLOW</del>	6-Information	For synchronized cache the number of records is larger than can be exported in configured interval.	The number of records is too large for the configured interval. As a result some records may not be exported in a timely manner. Consider reducing cache size or increasing interval length.	cpp-ucode	LOG_SID_DBG_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>FORCE_RPR</del> <del>RF</del> <del>MODE</del>	3-Error	Peer node has reset [dec] times. [chars]	The peer node has reset the maximum number allowed before reaching STANDBY-HOT state. The 'redundancy force-rpr' command is enabled and will try to set the peer system to RPR operating mode.	redundancy-rf	LOG_STD_ACTION FORCE_RPR_SID_ACTION
<del>FORCE_RPR</del> <del>RF</del> <del>MODE</del>	3-Error	Peer node has reset [dec] times. [chars]	The peer node has reset the maximum number allowed before reaching STANDBY-HOT state. The 'redundancy force-rpr' command is enabled and will try to set the peer system to RPR operating mode.	redundancy-rf	LOG_STD_ACTION FORCE_RPR_SID_ACTION
<del>FORCE_RPR</del> <del>RF</del> <del>REGISTER</del>	3-Error	RF error = [dec]. [chars]	During system initialization Force RPR component was unable to register with the Redundancy Facility.	redundancy-rf	LOG_STD_ACTION FORCE_RPR_SID_ACTION
<del>FORCE_RPR</del> <del>RF</del> <del>REGISTER</del>	3-Error	RF error = [dec]. [chars]	During system initialization Force RPR component was unable to register with the Redundancy Facility.	redundancy-rf	LOG_STD_ACTION FORCE_RPR_SID_ACTION
<del>FORCE_RPR</del> <del>NOTON</del> <del>ACTIVE</del>	4-Warning	[chars]	Only the Active node may enable this feature. Make sure you're on the Active system before trying to enable this command	redundancy-rf	LOG_STD_ACTION FORCE_RPR_SID_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FORERRNOTONACTIME	4-Warning	[chars]	Only the Active node may enable this feature. Make sure you're on the Active system before trying to enable this command	redundancy-rf	LOG_STD_ACTION FORCE_RPR_SID_ACTION
HD_MGME2CREATE_FAIL	2-Critical	Couldn't create [chars].	The system does not have enough free main memory to create the specified resource.	-	HD_NOFREEMEMORY_SID_ACTION
HD_MGME2CREATE_FAIL	2-Critical	Couldn't create [chars].	The system does not have enough free main memory to create the specified resource.	spa-infra-fpd	HD_NOFREEMEMORY_SID_ACTION
HEMCMEMCARDTYPE_MISMATCH	3-Error	The [chars] file does not contain the card type [hex] in the image bundle	The image bundle in the indicated file does not contain a correct card type value for the target card.	-	HD_WRONGIMG_SID_ACTION
HEMCMEMCARDTYPE_MISMATCH	3-Error	The [chars] file does not contain the card type [hex] in the image bundle	The image bundle in the indicated file does not contain a correct card type value for the target card.	spa-infra-fpd	HD_WRONGIMG_SID_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HDMCMBND_CRCCHKIA	3-Error	The [chars] file contains a corrupted image bundle - CRC mismatch: current value [hex] expected value [hex]. Please make sure that this is a valid FPD image [chars] file for card in [chars].	The file failed the CRC checking process. This failure indicates a corrupt FPD image bundle or package file.	spa-infra-fpd	<p>"Try to download again the required package from the Cisco " "Software Center website as the indicated one might be corrupted. " "If the problem persists copy the error message exactly as it appears " "and gather the output of the</p> <pre>&lt;CmdBold&gt;show hw-module slot fpd" "&lt;NoCmdBold&gt; &lt;CmdBold&gt;show upgrade fpd table&lt;NoCmdBold&gt; and &lt;CmdBold&gt;" "show upgrade fpd file&lt;NoCmdBold&gt; &lt;CmdBold&gt; "&lt;NoCmdBold&gt; commands " "then contact your technical support representative with the gathered " "information."</pre>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>FPD</del> <del>MEND</del> <del>CRC</del> <del>CHK</del> <del>FA</del>	3-Error	The [chars] file contains a corrupted image bundle - CRC mismatch: current value [hex] expected value [hex]. Please make sure that this is a valid FPD image [chars] file for card in [chars].	The file failed the CRC checking process. This failure indicates a corrupt FPD image bundle or package file.	-	"Try to download again the required package from the Cisco " "Software Center website as the indicated one might be corrupted. " "If the problem persists copy the error message exactly as it appears " "and gather the output of the <CmdBold>show hw-module slot fpd" "<NoCmdBold> <CmdBold>show upgrade fpd table<NoCmdBold> and <CmdBold>" "show upgrade fpd file<NoCmdBold> <CmdAg file<NoCmdAg commands " "then contact your technical support representative with the gathered " "information."
<del>FPD</del> <del>BD</del> <del>NAME</del> <del>PREFIX</del> <del>MATCH</del>	3-Error	The [chars] file contains a bundle name prefix [chars] that does not match	The content of the selected FPD image bundle does not match its filename.	-	<del>HD</del> <del>WRONG</del> <del>FILE</del> <del>SID</del> <del>ACIDN</del>
<del>FPD</del> <del>BD</del> <del>NAME</del> <del>PREFIX</del> <del>MATCH</del>	3-Error	The [chars] file contains a bundle name prefix [chars] that does not match	The content of the selected FPD image bundle does not match its filename.	spa-infra-fpd	<del>HD</del> <del>WRONG</del> <del>FILE</del> <del>SID</del> <del>ACIDN</del>
<del>FPD</del> <del>MEND</del> <del>WRONG</del> <del>HEADER</del>	3-Error	The [chars] file contains wrong header length for the image bundle: [node] bytes expected [node]bytes. Please make sure that this is a valid	The indicated file might not be a valid FPD image bundle or package file for the target card.	spa-infra-fpd	<del>HD</del> <del>WRONG</del> <del>FILE</del> <del>SID</del> <del>ACIDN</del>

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>FPD</del> <del>M</del> <del>B</del> <del>ND</del> <del>WRONG</del> <del>CH</del> <del>LEN</del>	3-Error	The [chars] file contains wrong header length for the image bundle: [node] bytes expected [node]bytes. Please make sure that this is a valid	The indicated file might not be a valid FPD image bundle or package file for the target card.	-	<del>HD</del> <del>WRONG</del> <del>CHK</del> <del>SID</del> <del>ACION</del>
<del>FPD</del> <del>M</del> <del>B</del> <del>ND</del> <del>WRONG</del> <del>M</del> <del>AG</del> <del>NUM</del>	3-Error	The [chars] file contains a wrong magic number for the image bundle: [hex] expected [hex]. Please make sure that this is a valid FPD image [chars]	The indicated file might not be a valid FPD image bundle or package file for the target card or the file could be corrupted.	spa-infra-fpd	<del>HD</del> <del>WRONG</del> <del>CHK</del> <del>SID</del> <del>ACION</del>
<del>FPD</del> <del>M</del> <del>B</del> <del>ND</del> <del>WRONG</del> <del>M</del> <del>AG</del> <del>NUM</del>	3-Error	The [chars] file contains a wrong magic number for the image bundle: [hex] expected [hex]. Please make sure that this is a valid FPD image [chars]	The indicated file might not be a valid FPD image bundle or package file for the target card or the file could be corrupted.	-	<del>HD</del> <del>WRONG</del> <del>CHK</del> <del>SID</del> <del>ACION</del>
<del>FPD</del> <del>M</del> <del>B</del> <del>ND</del> <del>WRONG</del> <del>S</del> <del>E</del>	3-Error	The [chars] file contains incorrect image bundle size: [node]bytes expected [node]bytes. Please make sure that this is a valid FPD image [chars] file	The indicated file might not be a valid FPD image bundle or package file for the target card.	spa-infra-fpd	<del>HD</del> <del>WRONG</del> <del>CHK</del> <del>SID</del> <del>ACION</del>
<del>FPD</del> <del>M</del> <del>B</del> <del>ND</del> <del>WRONG</del> <del>S</del> <del>E</del>	3-Error	The [chars] file contains incorrect image bundle size: [node]bytes expected [node]bytes. Please make sure that this is a valid FPD image [chars] file	The indicated file might not be a valid FPD image bundle or package file for the target card.	-	<del>HD</del> <del>WRONG</del> <del>CHK</del> <del>SID</del> <del>ACION</del>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HD</del> <del>MC</del> <del>B</del> <del>U</del> <del>N</del> <del>D</del> <del>E</del> <del>X</del> <del>T</del> <del>R</del> <del>A</del> <del>C</del> <del>T</del> <del>I</del> <del>O</del> <del>N</del>	3-Error	Cannot extract the [chars] bundle from [chars] - [chars]	Bundle file extraction error. The cause of the failure is indicated in the error message. The indicated file might not be a valid FPD image package file.	spa-infra-fpd	<del>HD</del> <del>WR</del> <del>NG</del> <del>I</del> <del>NG</del> <del>S</del> <del>I</del> <del>D</del> <del>A</del> <del>C</del> <del>I</del> <del>O</del> <del>N</del>
<del>HD</del> <del>MC</del> <del>B</del> <del>U</del> <del>N</del> <del>D</del> <del>E</del> <del>X</del> <del>T</del> <del>R</del> <del>A</del> <del>C</del> <del>T</del> <del>I</del> <del>O</del> <del>N</del>	3-Error	Cannot extract the [chars] bundle from [chars] - [chars]	Bundle file extraction error. The cause of the failure is indicated in the error message. The indicated file might not be a valid FPD image package file.	-	<del>HD</del> <del>WR</del> <del>NG</del> <del>I</del> <del>NG</del> <del>S</del> <del>I</del> <del>D</del> <del>A</del> <del>C</del> <del>I</del> <del>O</del> <del>N</del>
<del>HD</del> <del>MC</del> <del>B</del> <del>E</del> <del>C</del> <del>A</del> <del>R</del> <del>D</del> <del>_</del> <del>F</del> <del>A</del> <del>I</del> <del>L</del> <del>E</del> <del>D</del>	3-Error	[chars] card in [chars] is being disabled because of an incompatible FPD image version. Note that the [chars] package will be required if you want to perform the upgrade operation.	The indicated card contains an incompatible FPD image version and is being disabled to avoid operational problems with the existing Cisco IOS software. This can happen if the automatic upgrade feature has not been enabled with the <CmdBold>upgrade fpd auto<NoCmdBold> global configuration command or if the automatic upgrade operation failed to perform the required upgrade or because it could not find the necessary FPD image package file. The incompatible image will need to be upgraded in order for the system to enable the card.	spa-infra-fpd	"The FPD image upgrade can be performed automatically by making sure that " "the automatic upgrade feature is enabled with the <CmdBold>upgrade fpd " "auto<NoCmdBold> global configuration command and the necessary FPD image " "package file is located in the system's default filesystem e.g. disk0: "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HDMCMFCARDSAIED	3-Error	[chars] card in [chars] is being disabled because of an incompatible FPD image version. Note that the [chars] package will be required if you want to perform the upgrade operation.	The indicated card contains an incompatible FPD image version and is being disabled to avoid operational problems with the existing Cisco IOS software. This can happen if the automatic upgrade feature has not been enabled with the <CmdBold>upgrade fpd auto<NoCmdBold> global configuration command or if the automatic upgrade operation failed to perform the required upgrade or because it could not find the necessary FPD image package file. The incompatible image will need to be upgraded in order for the system to enable the card.	-	"The FPD image upgrade can be performed automatically by making sure that " "the automatic upgrade feature is enabled with the <CmdBold>upgrade fpd " "auto<NoCmdBold> global configuration command and the necessary FPD image " "package file is located in the system's default filesystem e.g. disk0: "
HDMCMFCLOSEFAILED	3-Error	Failed to close [chars] file.	<del>IPNRA_SWR_UPD_PAN</del>	-	LOG_STD_ACTION
HDMCMFCLOSEFAILED	3-Error	Failed to close [chars] file.	<del>IPNRA_SWR_UPD_PAN</del>	spa-infra-fpd	LOG_STD_ACTION
<del>IPNRA_SWR_UPD_PAN</del>	3-Error	Upgrade result already received for the FPD image upgrade of FPD ID [node]for [chars] card in [chars].	<del>IPNRA_SWR_UPD_PAN</del>	-	LOG_STD_ACTION
<del>IPNRA_SWR_UPD_PAN</del>	3-Error	Upgrade result already received for the FPD image upgrade of FPD ID [node]for [chars] card in [chars].	<del>IPNRA_SWR_UPD_PAN</del>	spa-infra-fpd	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HEMCMHEURPDCNHEH</del>	3-Error	Rest of the FPD upgrade sequence for [chars] card in [chars] has been canceled due to upgrade failure with [chars] FPD ID=[node]image.	The FPD image upgrade process for additional FPD images has been canceled due to upgrade error in the indicated device.	spa-infra-fpd	"Retry the upgrade operation again. If the affected card remains " "disabled by the system after attempts to retry the upgrade then copy " "the error message exactly as it appears and gather the output of " " <CmdBold>show hw-module subslot fpd<NoCmdBold> and contact your " "technical support representative with the gathered information."
<del>HEMCMHEURPDCNHEH</del>	3-Error	Rest of the FPD upgrade sequence for [chars] card in [chars] has been canceled due to upgrade failure with [chars] FPD ID=[node]image.	The FPD image upgrade process for additional FPD images has been canceled due to upgrade error in the indicated device.	-	"Retry the upgrade operation again. If the affected card remains " "disabled by the system after attempts to retry the upgrade then copy " "the error message exactly as it appears and gather the output of " " <CmdBold>show hw-module subslot fpd<NoCmdBold> and contact your " "technical support representative with the gathered information."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<b>HEMCMIBPUCRADEAID</b>	3-Error	[chars] FPD ID=[node]image upgrade for [chars] card in [chars] has FAILED.	The FPD image upgrade process has failed for the indicated device.	-	"Retry the upgrade operation again. If the affected card remains " "disabled by the system after attempts to retry the upgrade then copy " "the error message exactly as it appears and gather the output of " "<CmdBold>show hw-module subslot fpd<NoCmdBold> and contact your " "technical support representative with the gathered information."
<b>HEMCMIBPUCRADEAID</b>	3-Error	[chars] FPD ID=[node]image upgrade for [chars] card in [chars] has FAILED.	The FPD image upgrade process has failed for the indicated device.	spa-infra-fpd	"Retry the upgrade operation again. If the affected card remains " "disabled by the system after attempts to retry the upgrade then copy " "the error message exactly as it appears and gather the output of " "<CmdBold>show hw-module subslot fpd<NoCmdBold> and contact your " "technical support representative with the gathered information."
<b>HEMCMIBGRCCHKFAID</b>	3-Error	The FPD image for [chars] FPD ID [node]in [chars] file is corrupted - CRC	The image failed the CRC checking process this indicates a corrupt FPD image bundle or package file.	-	<b>HEDWROGHRKSIDACION</b>

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>HDMMIMCRCCHKFAD</del>	3-Error	The FPD image for [chars] FPD ID [node]in [chars] file is corrupted - CRC	The image failed the CRC checking process this indicates a corrupt FPD image bundle or package file.	spa-infra-fpd	<del>HDWRONGHKSIDACDN</del>
<del>HDMDADUCPSRR</del>	3-Error	Could not uncompress [chars] FPD image for [chars] in [chars].	An error has been detected during the uncompress operation of the compressed FPD image data.	-	<del>HDWRONGHKSIDACDN</del>
<del>HDMDADUCPSRR</del>	3-Error	Could not uncompress [chars] FPD image for [chars] in [chars].	An error has been detected during the uncompress operation of the compressed FPD image data.	spa-infra-fpd	<del>HDWRONGHKSIDACDN</del>
<del>HDMMIMGNRCIOND</del>	3-Error	FPD image version information is not available for [chars] card in [chars]. All the FPD images will be upgraded to recover from this error.	The FPD image version information for the indicated card is not available because the system was not able to extract this information for all the FPDs in the card. This could be the result of a corrupted FPD image from a power failure.	spa-infra-fpd	<del>HDVRONERORSIDACDN</del>
<del>HDMMIMGNRCIOND</del>	3-Error	FPD image version information is not available for [chars] card in [chars]. All the FPD images will be upgraded to recover from this error.	The FPD image version information for the indicated card is not available because the system was not able to extract this information for all the FPDs in the card. This could be the result of a corrupted FPD image from a power failure.	-	<del>HDVRONERORSIDACDN</del>

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
HDMCMENCOMPBLMR	3-Error	The selected [chars] file contain an image bundle that has a version number that is incompatible for this IOS release - [chars]. Selected version = [node][node]minimum compatible version = [node][node] Please make sure that this is a valid FPD image [chars] file for card in [chars]. The SPA type is [chars].	The version of the selected FPD image bundle does not contain a valid version number that is compatible for the IOS release. The major version number should be the same and the minor version number should be at least equal to the minimal required version.	spa-infra-fpd	HWRONGHKSIDACION
HDMCMENCOMPBLMR	3-Error	The selected [chars] file contain an image bundle that has a version number that is incompatible for this IOS release - [chars]. Selected version = [node][node]minimum compatible version = [node][node] Please make sure that this is a valid FPD image [chars] file for card in [chars].	The version of the selected FPD image bundle does not contain a valid version number that is compatible for the IOS release. The major version number should be the same and the minor version number should be at least equal to the minimal required version.	-	HWRONGHKSIDACION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>HDMGMENCOMPIMGVER</del>	3-Error	Incompatible [chars] FPD ID=[node]image version detected for [chars] card	An incompatible FPD image version has been detected. The FPD image needs to be upgraded either automatically or manually to make the card operational. If the automatic upgrade feature is not enabled or if the system cannot find the necessary FPD image package file then the card will be disabled.	spa-infra-fpd	<del>HDMVRNERRORSIDACDN</del>
<del>HDMGMENCOMPIMGVER</del>	3-Error	Incompatible [chars] FPD ID=[node]image version detected for [chars] card	An incompatible FPD image version has been detected. The FPD image needs to be upgraded either automatically or manually to make the card operational. If the automatic upgrade feature is not enabled or if the system cannot find the necessary FPD image package file then the card will be disabled.	-	<del>HDMVRNERRORSIDACDN</del>
<del>HDMGMENADMGESZE</del>	3-Error	The [chars] FPD image from [chars] file does not have a valid image size: expected size = [dec] bytes actual size = [dec] bytes.	The size of the indicated FPD image does not have the expected size. The FPD image bundle or package might not be a valid file.	spa-infra-fpd	<del>HDMWRONGHKSIDACDN</del>
<del>HDMGMENADMGESZE</del>	3-Error	The [chars] FPD image from [chars] file does not have a valid image size: expected size = [dec] bytes actual size = [dec] bytes.	The size of the indicated FPD image does not have the expected size. The FPD image bundle or package might not be a valid file.	-	<del>HDMWRONGHKSIDACDN</del>

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>HDMCMENADMGRMT</del>	3-Error	Invalid image format '[chars]' detected for FPD ID=[node]	The selected FPD image to upgrade the indicated field programmable device does not have the right image format that can be used by the system to perform the upgrade operation.	spa-infra-fpd	"Please check if the FPD image package used in the upgrade is for the " "correct platform. This can be checked by using the <CmdBold>show upgrade " "fpd package default<NoCmdBold> privileged EXEC command."
<del>HDMCMENADMGRMT</del>	3-Error	Invalid image format '[chars]' detected for FPD ID=[node]	The selected FPD image to upgrade the indicated field programmable device does not have the right image format that can be used by the system to perform the upgrade operation.	-	"Please check if the FPD image package used in the upgrade is for the " "correct platform. This can be checked by using the <CmdBold>show upgrade " "fpd package default<NoCmdBold> privileged EXEC command."
<del>HDMCMENADMGR</del>	3-Error	Invalid [chars] FPD ID=[node]image version detected for [chars] card in [chars].	The indicated field programmable device contains an invalid version for the FPD image because the system was not able to extract this information from the indicated card. A failed upgrade attempt might have corrupted the FPD image identification on the device.	spa-infra-fpd	<del>HDMCMENADMGR</del>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HDMCMENADIMGVER</del>	3-Error	Invalid [chars] FPD ID=[node]image version detected for [chars] card in [chars].	The indicated field programmable device contains an invalid version for the FPD image because the system was not able to extract this information from the indicated card. A failed upgrade attempt might have corrupted the FPD image identification on the device.	-	<del>HDMCMENADIMGVER</del>
<del>HDMCMENADIRGHE</del>	3-Error	The indicated file [chars] is not a valid FPD image package file - [chars]	The file format does not appear to be a valid FPD image package.	-	<del>HDMCMENADIRGHE</del>
<del>HDMCMENADIRGHE</del>	3-Error	The indicated file [chars] is not a valid FPD image package file - [chars]	The file format does not appear to be a valid FPD image package.	spa-infra-fpd	<del>HDMCMENADIRGHE</del>
<del>HDMCMENADIRGHESE</del>	3-Error	The indicated file [chars] does not have a valid FPD image package	The file size of the indicated FPD image package does not meet the required minimum size. The file is too small to be a valid FPD image package file.	spa-infra-fpd	<del>HDMCMENADIRGHESE</del>
<del>HDMCMENADIRGHESE</del>	3-Error	The indicated file [chars] does not have a valid FPD image package	The file size of the indicated FPD image package does not meet the required minimum size. The file is too small to be a valid FPD image package file.	-	<del>HDMCMENADIRGHESE</del>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>FPD_MGMT3FPD_ERR</del>	3-Error	Invalid upgrade result '[node]' received for the FPD image upgrade of [chars] FPD ID=[node]for [chars] card in [chars].	<del>FPD_MGMT3FPD_ERR</del>	-	LOG_STD_ACTION
<del>FPD_MGMT3FPD_ERR</del>	3-Error	Invalid upgrade result '[node]' received for the FPD image upgrade of [chars] FPD ID=[node]for [chars] card in [chars].	<del>FPD_MGMT3FPD_ERR</del>	spa-infra-fpd	LOG_STD_ACTION
FPD_MGMT3IPC_FAILED	3-Error	Failed to send IPC message to [chars] in [chars] - [chars]	The system failed to send a message via IPC to the indicated card. The cause of the specific IPC failure is indicated in the message.	-	LOG_STD_ACTION
FPD_MGMT3IPC_FAILED	3-Error	Failed to send IPC message to [chars] in [chars] - [chars]	The system failed to send a message via IPC to the indicated card. The cause of the specific IPC failure is indicated in the message.	spa-infra-fpd	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HDV1R0N1E1R0R51D1A1C1N</del>	3-Error	Major image version mismatch detected with [chars] FPD ID=[node]for [chars] card	A major image version mismatch has been detected. This incompatibility will need to be resolved by doing an upgrade or downgrade operation either automatically or manually to make the card operational. If the automatic upgrade feature is not enabled or if the system cannot find the necessary FPD image package file then the card will be disabled.	spa-infra-fpd	<del>HDV1R0N1E1R0R51D1A1C1N</del>
<del>HDV1R0N1E1R0R51D1A1C1N</del>	3-Error	Major image version mismatch detected with [chars] FPD ID=[node]for [chars] card	A major image version mismatch has been detected. This incompatibility will need to be resolved by doing an upgrade or downgrade operation either automatically or manually to make the card operational. If the automatic upgrade feature is not enabled or if the system cannot find the necessary FPD image package file then the card will be disabled.	-	<del>HDV1R0N1E1R0R51D1A1C1N</del>
<del>HDV1R0N1E1R0R51D1A1C1N</del>	3-Error	Failed to find a matching entry in the programmable device bundle information table for [chars] in [chars]. Card type or HW version [node][node]	<del>HDV1R0N1E1R0R51D1A1C1N</del>	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HD</del> <del>MEM</del> <del>MSG</del> <del>BNDL</del> <del>ENTRY</del>	3-Error	Failed to find a matching entry in the programmable device bundle information table for [chars] in [chars]. Card type or HW version [node][node]	<del>HD</del> <del>INFRA</del> <del>SW</del> <del>RS</del> <del>CD</del> <del>ERR</del> <del>NO</del>	spa-infra-fpd	LOG_STD_ACTION
<del>HD</del> <del>MEM</del> <del>MSG</del> <del>DEV</del> <del>NO</del>	3-Error	Could not find [chars] FPD ID=[node]in the list of FPD IDs populated	<del>HD</del> <del>INFRA</del> <del>SW</del> <del>RS</del> <del>CD</del> <del>ERR</del> <del>NO</del>	-	LOG_STD_ACTION
<del>HD</del> <del>MEM</del> <del>MSG</del> <del>DEV</del> <del>NO</del>	3-Error	Could not find [chars] FPD ID=[node]in the list of FPD IDs populated	<del>HD</del> <del>INFRA</del> <del>SW</del> <del>RS</del> <del>CD</del> <del>ERR</del> <del>NO</del>	spa-infra-fpd	LOG_STD_ACTION
<del>HD</del> <del>MEM</del> <del>MSG</del> <del>IMAGE</del>	3-Error	Could not find the required [chars] image FPD ID=[node]and FPD version=[node][node] compatible with HW version=[node][node]from the [chars]-fpd.bndl bundle in [chars]	The indicated FPD image bundle or package file might not be the correct one. IF this is a FPD image package file then an incompatible package file might have been renamed with a filename that matched with the one that the system is expecting for this Cisco IOS software release. You should never rename an FPD image package file name.	spa-infra-fpd	<del>HD</del> <del>WRONG</del> <del>PKG</del> <del>SID</del> <del>ACTION</del>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HDMGMEMMSGIMAGE	3-Error	Could not find the required [chars] image FPD ID=[node]and FPD version=[node][node] compatible with HW version=[node][node]from the [chars]-fpd.bndl bundle in [chars]	The indicated FPD image bundle or package file might not be the correct one. IF this is a FPD image package file then an incompatible package file might have been renamed with a filename that matched with the one that the system is expecting for this Cisco IOS software release. You should never rename an FPD image package file name.	-	HDRONGHKSIDACDN
HDMGMEMOPENFAILED	3-Error	Failed to open [chars] [chars]. Please make sure that the required file	The system cannot access the required file from the indicated URL.	-	"Make sure that the indicated URL is a valid path and the system " "has access to the filesystem where the file has been placed."
HDMGMEMOPENFAILED	3-Error	Failed to open [chars] [chars]. Please make sure that the required file	The system cannot access the required file from the indicated URL.	spa-infra-fpd	"Make sure that the indicated URL is a valid path and the system " "has access to the filesystem where the file has been placed."
HDMGMEMOUTOFMEMORY	3-Error	Could not allocate the required [dec] bytes of memory.	The system does not have enough free main memory to download the bundle file.	-	HDRNOREMEMORSDACDN
HDMGMEMOUTOFMEMORY	3-Error	Could not allocate the required [dec] bytes of memory.	The system does not have enough free main memory to download the bundle file.	spa-infra-fpd	HDRNOREMEMORSDACDN

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>FPD</del> <del>MSG</del> <del>ERR</del> <del>CH1</del> <del>AD</del>	3-Error	FPD image package [chars] cannot be found in system's flash card or	By default if the <CmdBold>upgrade fpd path<NoCmdBold> <CmdAg file> <NoCmdAg global configuration command is not configured then the system will try to locate the required FPD image package file from removable flash cards or disks that are accessible by the system for FPD upgrade. This message indicates that the system could not find the package file.	spa-infra-fpd	"Make sure that the indicated FPD image package file is copied into a "flash card or disk that is accessible by the system then restart the " "FPD upgrade by reinsertion of the target card to the system or use of " "a system command to reload or power-cycle the target card."
<del>FPD</del> <del>MSG</del> <del>ERR</del> <del>CH1</del> <del>AD</del>	3-Error	FPD image package [chars] cannot be found in system's flash card or	By default if the <CmdBold>upgrade fpd path<NoCmdBold> <CmdAg file> <NoCmdAg global configuration command is not configured then the system will try to locate the required FPD image package file from removable flash cards or disks that are accessible by the system for FPD upgrade. This message indicates that the system could not find the package file.	-	"Make sure that the indicated FPD image package file is copied into a "flash card or disk that is accessible by the system then restart the " "FPD upgrade by reinsertion of the target card to the system or use of " "a system command to reload or power-cycle the target card."
<del>FPD</del> <del>MSG</del> <del>ERR</del> <del>CH1</del> <del>RR</del>	3-Error	Cannot extract the [chars] version file from [chars] - [chars]	Package version file extraction error. The cause of the failure is indicated in the error message. The indicated file might not be a valid FPD image package file.	spa-infra-fpd	<del>FPD</del> <del>WFO</del> <del>GR</del> <del>KS</del> <del>SD</del> <del>AC</del> <del>ION</del>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>FPD_IMAGE_EXTRACTOR</del>	3-Error	Cannot extract the [chars] version file from [chars] - [chars]	Package version file extraction error. The cause of the failure is indicated in the error message. The indicated file might not be a valid FPD image package file.	-	<del>HD_WRONG_IMAGE_NAME</del>
<del>FPD_IMAGE_MISMATCH</del>	3-Error	The FPD image package being used [chars] is not the right version for	The indicated FPD image package that is being used in FPD automatic upgrade does not contain the correct version information for the IOS version that is running in the system. This condition can occur if a different version of the FPD image package was renamed to match the filename that the IOS image is expecting to use. The upgrade operation will still be performed by trying to find the required FPD image from the renamed package file.	spa-infra-fpd	"If the upgrade operation fails because the required FPD image cannot be " "found with the renamed FPD image package replace the wrong package " "file with a valid one and perform the upgrade operation again."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>IPMCMRENAME</del>	3-Error	The FPD image package being used [chars] is not the right version for	The indicated FPD image package that is being used in FPD automatic upgrade does not contain the correct version information for the IOS version that is running in the system. This condition can occur if a different version of the FPD image package was renamed to match the filename that the IOS image is expecting to use. The upgrade operation will still be performed by trying to find the required FPD image from the renamed package file.	-	"If the upgrade operation fails because the required FPD image cannot be " "found with the renamed FPD image package replace the wrong package " "file with a valid one and perform the upgrade operation again."
<del>IPMCMREADHDR</del>	3-Error	Failed to read the FPD bundle header from [chars] file.	The indicated file might not be a valid FPD image bundle or package file.	-	<del>HDWRONGKGSIDACTN</del>
<del>IPMCMREADHDR</del>	3-Error	Failed to read the FPD bundle header from [chars] file.	The indicated file might not be a valid FPD image bundle or package file.	spa-infra-fpd	<del>HDWRONGKGSIDACTN</del>
<del>IPMCMREADERR</del>	3-Error	Could not read the [chars] file.	The system cannot read the required file from the indicated URL.	-	"Make sure that the indicated URL is a valid path and the system " "has access to the filesystem where the file has been placed."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HDMCMIBREAD_ERROR	3-Error	Could not read the [chars] file.	The system cannot read the required file from the indicated URL.	spa-infra-fpd	"Make sure that the indicated URL is a valid path and the system " "has access to the filesystem where the file has been placed."
HDMCMIBSENDMFAIL	3-Error	[chars] FPD ID=[node]image for [chars] card in [chars] has failed to be sent	The FPD image was not able to be sent for the upgrade operation. The system might be too busy to handle this operation. The affected card will be disabled by this failure.	spa-infra-fpd	"Wait until the system load is lower to try again with the manual upgrade " "procedure by using the <CmdBold>upgrade hw-module-NoCmdBold</CmdBold> privileged " "EXEC command. If the symptom persists copy the error message " "exactly as it appears and gather the output of the <CmdBold>show " "tech-support-NoCmdBold</CmdBold> command and contact your technical support " "representative with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HDMGM3ENDMG1AED	3-Error	[chars] FPD ID=[node]image for [chars] card in [chars] has failed to be sent	The FPD image was not able to be sent for the upgrade operation. The system might be too busy to handle this operation. The affected card will be disabled by this failure.	-	"Wait until the system load is lower to try again with the manual upgrade " "procedure by using the <CmdBold>upgrade hw-module<NoCmdBold> privileged " "EXEC command. If the symptom persists copy the error message " "exactly as it appears and gather the output of the <CmdBold>show " "tech-support<NoCmdBold> command and contact your technical support " "representative with the gathered information."
HDMGM3SW_ERROR	3-Error	NULL	<del>IPNRA3WRSCEPAN</del>	-	LOG_STD_ACTION
HDMGM3SW_ERROR	3-Error	NULL	<del>IPNRA3WRSCEPAN</del>	spa-infra-fpd	LOG_STD_ACTION
HDMGM3COMV1PENS	3-Error	Too many FPD entries for the FPD Bundle Info Table. Required number of entries = [node]maximum number of entries allowed = [node]	<del>IPNRA3WRSCEPAN</del>	-	LOG_STD_ACTION
HDMGM3COMV1PENS	3-Error	Too many FPD entries for the FPD Bundle Info Table. Required number of entries = [node]maximum number of entries allowed = [node]	<del>IPNRA3WRSCEPAN</del>	spa-infra-fpd	LOG_STD_ACTION
HDMGM3KONB1IDCA	3-Error	Unknown header format version: [hex]	<del>IPNRA3WRSCEPAN</del>	-	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HEMCMKONBIDHCA</del>	3-Error	Unknown header format version: [hex]	<del>HEMCMKONBIDHCA</del>	spa-infra-fpd	LOG_STD_ACTION
<del>HEMCMURADEISUL</del>	3-Error	Could not add a new entry in the FPD Management Upgrade List. No upgrade will be performed for the [chars] card in [chars].	<del>HEMCMURADEISUL</del>	-	LOG_STD_ACTION
<del>HEMCMURADEISUL</del>	3-Error	Could not add a new entry in the FPD Management Upgrade List. No upgrade will be performed for the [chars] card in [chars].	<del>HEMCMURADEISUL</del>	spa-infra-fpd	LOG_STD_ACTION
<del>HEMCMBAROCMDAEN</del>	3-Error	The FPD image for [chars] FPD ID [node]in [chars] file contains wrong data	The indicated file might not be a valid FPD image bundle or package file for the card.	-	<del>HEMCMBAROCMDAEN</del>
<del>HEMCMBAROCMDAEN</del>	3-Error	The FPD image for [chars] FPD ID [node]in [chars] file contains wrong data	The indicated file might not be a valid FPD image bundle or package file for the card.	spa-infra-fpd	<del>HEMCMBAROCMDAEN</del>
<del>HEMCMBAROCMDHREN</del>	3-Error	The FPD image for [chars] FPD ID [node]in [chars] file contains wrong header	The indicated file might not be a valid FPD image bundle or package file for the card.	-	<del>HEMCMBAROCMDHREN</del>
<del>HEMCMBAROCMDHREN</del>	3-Error	The FPD image for [chars] FPD ID [node]in [chars] file contains wrong header	The indicated file might not be a valid FPD image bundle or package file for the card.	spa-infra-fpd	<del>HEMCMBAROCMDHREN</del>
<del>HEMCMBAROCMDGNM</del>	3-Error	The FPD image for [chars] FPD ID [node]in [chars] file contains wrong magic	The indicated file might not be a valid FPD image bundle or package file for the card.	-	<del>HEMCMBAROCMDGNM</del>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>FPD_MIB_WO_CMD_MGR</del>	3-Error	The FPD image for [chars] FPD ID [node] in [chars] file contains wrong magic	The indicated file might not be a valid FPD image bundle or package file for the card.	spa-infra-fpd	<del>HD_WRONG_MAGIC</del>
<del>FPD_MIB_WO_CMD_MGR</del>	3-Error	The selected FPD image for upgrade contains wrong FPD image major version number = '[node]' expected number = '[node]' for [chars] FPD ID [node]	The file used for upgrade might not be a valid FPD image bundle or package file for the card.	spa-infra-fpd	<del>HD_WRONG_MAGIC</del>
<del>FPD_MIB_WO_CMD_MGR</del>	3-Error	The selected FPD image for upgrade contains wrong FPD image major version number = '[node]' expected number = '[node]' for [chars] FPD ID [node]	The file used for upgrade might not be a valid FPD image bundle or package file for the card.	-	<del>HD_WRONG_MAGIC</del>
<del>FPD_MIB_SECURE</del>	4-Warning	The automatic FPD image upgrade feature is not enabled bypassing the image upgrade for [chars] card in [chars].	The automatic FPD image upgrade feature is not enabled. The incompatible image will not be automatically upgraded. The card will be disabled until the image is upgraded to a compatible version.	spa-infra-fpd	"Enable the automatic FPD image upgrade with the <CmdBold>upgrade fpd " "auto<NoCmdBold> global configuration command or use the <CmdBold>upgrade " "hw-module<NoCmdBold> privileged EXEC command for a manual upgrade " "operation. For more information about these commands refer to the " HD_DOCUMENT_NAME " "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HDMCIBPSAUCRDE	4-Warning	The automatic FPD image upgrade feature is not enabled bypassing the image upgrade for [chars] card in [chars].	The automatic FPD image upgrade feature is not enabled. The incompatible image will not be automatically upgraded. The card will be disabled until the image is upgraded to a compatible version.	-	"Enable the automatic FPD image upgrade with the <CmdBold>upgrade fpd " "auto<NoCmdBold> global configuration command or use the <CmdBold>upgrade " "hw-module<NoCmdBold> privileged EXEC command for a manual upgrade " "operation. For more information about these commands refer to the " HD_DOCUMENT_NAME " "
HDMCIBGNOSYCD	4-Warning	Failed to sync \[chars]\ command to standby: [chars]	A FPD configuration command failed to get synced to standby RP due to the indicated error condition. Usually this can happen if the standby RP hardware doesn't support the type of filesystem supported on the active one.	spa-infra-fpd	"Configure again the command with a filesystem that is supported on " "both standby and active RP. To find out if a specific filesystem is " "also supported on standby RP the <CmdBold>dir ?<NoCmdBold> command " "can be used to display a list of filesystem supported on both standby " "and active RP."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HDMCM4IGNOSNCD	4-Warning	Failed to sync \[chars]\ command to standby: [chars]	A FPD configuration command failed to get synced to standby RP due to the indicated error condition. Usually this can happen if the standby RP hardware doesn't support the type of filesystem supported on the active one.	-	"Configure again the command with a filesystem that is supported on " "both standby and active RP. To find out if a specific filesystem is " "also supported on standby RP the <CmdBold>dir ?<NoCmdBold> command " "can be used to display a list of filesytem supported on both standby " "and active RP."
HDMCM4URGRADE_XIT	4-Warning	Unexpected exit of FPD image upgrade operation for [chars] card in [chars].	The FPD image upgrade operation was interrupted by the physical removal of the card from the system or by the use of other commands that have interrupted the normal operation of the target card. The partial upgrade operation might have left the card unusable because of corrupted FPD images.	spa-infra-fpd	"If the card does not come up after reinserting into the system then " "perform the recovery upgrade operation by using the <CmdBold>upgrade " " <del>hw-module</del> <NoCmdBold> privileged EXEC command. With this command the " "system will attempt the reprogramming of the image to recover from the " "previous partial upgrade operation. For more information about " "performing a recovery upgrade operation refer to the " FD_DOCUMENT_NAME ". "

Faulty-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HDMGM4UPGRADE_EXIT	4-Warning	Unexpected exit of FPD image upgrade operation for [chars] card in [chars].	The FPD image upgrade operation was interrupted by the physical removal of the card from the system or by the use of other commands that have interrupted the normal operation of the target card. The partial upgrade operation might have left the card unusable because of corrupted FPD images.	-	<p>"If the card does not come up after reinserting into the system then "</p> <p>"perform the recovery upgrade operation by using the</p> <p>&lt;CmdBold&gt;upgrade</p> <p>"</p> <p>"hw-module-NoCmdBold&gt; privileged EXEC command. With this command the "</p> <p>"system will attempt the reprogramming of the image to recover from the "</p> <p>"previous partial upgrade operation. For more information about "</p> <p>"performing a recovery upgrade operation refer to the "</p> <p>HFD_DOCUMENT_NAME</p> <p>" "</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>FPD/ABN/CHK/ABN</del>	4-Warning	FPD image version check operation has been aborted for [chars] card in [chars] because manual upgrade has already being started.	The FPD image version check operation required for the automatic upgrade feature is not being performed for the indicated card because the <CmdBold>upgrade hw-module<NoCmdBold> privileged EXEC command has already being executed. These two operations cannot be performed at the same time.	spa-infra-fpd	"If an automatic upgrade operation is required do not enter the " "<CmdBold>upgrade hw-module<NoCmdBold> privileged EXEC command for the " "manual upgrade while the target card is initializing. Enter the " "<CmdBold>show hw-module subslot fpd<NoCmdBold> command and ensure that " "the target card is displayed in the command output before proceeding " "with the manual upgrade."
<del>FPD/ABN/CHK/ABN</del>	4-Warning	FPD image version check operation has been aborted for [chars] card in [chars] because manual upgrade has already being started.	The FPD image version check operation required for the automatic upgrade feature is not being performed for the indicated card because the <CmdBold>upgrade hw-module<NoCmdBold> privileged EXEC command has already being executed. These two operations cannot be performed at the same time.	-	"If an automatic upgrade operation is required do not enter the " "<CmdBold>upgrade hw-module<NoCmdBold> privileged EXEC command for the " "manual upgrade while the target card is initializing. Enter the " "<CmdBold>show hw-module subslot fpd<NoCmdBold> command and ensure that " "the target card is displayed in the command output before proceeding " "with the manual upgrade."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HEMCMKCARDPOWERCYCLE</del>	5-Notice	[chars] card in [chars] is being power cycled for the FPD image upgrade to take effect.	The indicated card is being power cycled after the FPD image upgrade. This action allows the target card to be operational with the new upgraded FPD image or images.	spa-infra-fpd	LOG_SID_NO_ACTION
<del>HEMCMKCARDPOWERCYCLE</del>	5-Notice	[chars] card in [chars] is being power cycled for the FPD image upgrade to take effect.	The indicated card is being power cycled after the FPD image upgrade. This action allows the target card to be operational with the new upgraded FPD image or images.	-	LOG_SID_NO_ACTION
<del>HEMCMKSPURCHANDLER</del>	5-Notice	[chars] card in [chars] will require a [chars] for the FPD image upgrade to take effect.	The indicated card will require manual intervention after the FPD image upgrade. The specified operation is required for the upgraded FPD image to take effect.	spa-infra-fpd	LOG_SID_NO_ACTION
<del>HEMCMKSPURCHANDLER</del>	5-Notice	[chars] card in [chars] will require a [chars] for the FPD image upgrade to take effect.	The indicated card will require manual intervention after the FPD image upgrade. The specified operation is required for the upgraded FPD image to take effect.	-	LOG_SID_NO_ACTION
<del>HEMCMKSPURPOWERCYCLE</del>	5-Notice	[chars] card in [chars] will be power cycled after bulk sync completion.	Currently Bulk sync is in Progress. Once the new standby reaches HOT state the indicated card will be power cycled to be operational with the new upgraded FPD image.	spa-infra-fpd	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HD</del> MCMBURGRADEATMP	5-Notice	Attempting to automatically upgrade the FPD images for [chars] card	The automatic FPD image upgrade feature is enabled with the <CmdBold> upgrade fpd auto<NoCmdBold> global configuration command. The system is currently upgrading an incompatible image version automatically.	spa-infra-fpd	"No action is required. The upgrade process can take a long time. The " <del>HD</del> MCMBURGRADEIME message gives an estimate of the total " " "upgrade time"
<del>HD</del> MCMBURGRADEATMP	5-Notice	Attempting to automatically upgrade the FPD images for [chars] card	The automatic FPD image upgrade feature is enabled with the <CmdBold> upgrade fpd auto<NoCmdBold> global configuration command. The system is currently upgrading an incompatible image version automatically.	-	"No action is required. The upgrade process can take a long time. The " <del>HD</del> MCMBURGRADEIME message gives an estimate of the total " " "upgrade time"
<del>HD</del> MCMBURGRADEDOWNOD	6-Information	Downloading FPD image bundle for [chars] card in [chars] ...	The system is downloading the field programmable device image bundle to the system main memory.	-	LOG_SID_NO_ACTION
<del>HD</del> MCMBURGRADEDOWNOD	6-Information	Downloading FPD image bundle for [chars] card in [chars] ...	The system is downloading the field programmable device image bundle to the system main memory.	spa-infra-fpd	LOG_SID_NO_ACTION
<del>HD</del> MCMBURGRADE	6-Information	All the attempts to upgrade the required FPD images have been completed for [chars] card in [chars]. Number of successful/failure upgrades:	All the FPD image upgrades have completed for the indicated card.	spa-infra-fpd	LOG_SID_NO_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HDMC160RALUPRADE	6-Information	All the attempts to upgrade the required FPD images have been completed for [chars] card in [chars]. Number of successful/failure upgrades:	All the FPD image upgrades have completed for the indicated card.	-	LOG_SID_NO_ACTION
HDMC160BENDUPRADE	6-Information	[node]more FPD image upgrade operation will be required on [chars] in [chars] after additional power-cycle operation on the target card.	All upgrade operations have not completed and additional power-cycle operations are required before the upgraded or new FPD image will be applied to the system configuration. The message text indicates the number of pending upgrade operations that will be performed. More than one power-cycle operation might be required to complete the overall upgrade process.	spa-infra-fpd	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HDMCMIBENNGURAE	6-Information	[node]more FPD image upgrade operation will be required on [chars] in [chars] after additional power-cycle operation on the target card.	All upgrade operations have not completed and additional power-cycle operations are required before the upgraded or new FPD image will be applied to the system configuration. The message text indicates the number of pending upgrade operations that will be performed. More than one power-cycle operation might be required to complete the overall upgrade process.	-	LOG_SID_NO_ACTION
HDMCMIBURAEPSID	6-Information	[chars] FPD ID=[node]image in the [chars] card in [chars] has been successfully	The FPD image upgrade process has completed successfully for the indicated device.	-	LOG_SID_NO_ACTION
HDMCMIBURAEPSID	6-Information	[chars] FPD ID=[node]image in the [chars] card in [chars] has been successfully	The FPD image upgrade process has completed successfully for the indicated device.	spa-infra-fpd	LOG_SID_NO_ACTION
HDMCMIBURADEREIRY	6-Information	Attempting to recover from the failed upgrades ...	Because of an image upgrade failure the system will attempt again the upgrade operation for the same FPD image.	-	LOG_SID_NO_ACTION
HDMCMIBURADEREIRY	6-Information	Attempting to recover from the failed upgrades ...	Because of an image upgrade failure the system will attempt again the upgrade operation for the same FPD image.	spa-infra-fpd	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
HDMGMIAUCRADESART	6-Information	[chars] FPD ID=[node]image upgrade in progress for [chars] card in [chars].	The FPD image upgrade process has started. Do not interrupt the upgrade operation as any interruption could render the target card unusable. Avoid actions like removing the target card from the system powering off the system or using commands that can power-cycle the target card during the upgrade process.	spa-infra-fpd	LOG_SID_NO_ACTION
HDMGMIAUCRADESART	6-Information	[chars] FPD ID=[node]image upgrade in progress for [chars] card in [chars].	The FPD image upgrade process has started. Do not interrupt the upgrade operation as any interruption could render the target card unusable. Avoid actions like removing the target card from the system powering off the system or using commands that can power-cycle the target card during the upgrade process.	-	LOG_SID_NO_ACTION
HDMGMIAUCRADETIME	6-Information	Estimated total FPD image upgrade time for [chars] card in [chars] = [node].	The estimated total time for all FPD images to be upgraded is displayed for the indicated card.	-	LOG_SID_NO_ACTION
HDMGMIAUCRADETIME	6-Information	Estimated total FPD image upgrade time for [chars] card in [chars] = [node].	The estimated total time for all FPD images to be upgraded is displayed for the indicated card.	spa-infra-fpd	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QDN_MISCFQDN_FLEX_ER	3-Error	iosxe-binos-utils	Error in[chars]	ewlc fqdn flex push error message.	LOG_STD_ACTION
QDN_MISCFQDN_NAME_ER	3-Error	iosxe-binos-utils	Error in[chars]	ewlc FQDN url list name error message.	LOG_STD_ACTION
QDN_MISCFQDN_URL_ER	3-Error	iosxe-binos-utils	Error in[chars]	ewlc fqdn urlist forwarding push error message.	LOG_STD_ACTION
FR_EEK-5-FAILED	5-Notice	Interface [chars] - DLCI [dec]	The end-to-end keepalive protocol has failed for the indicated PVC. A failure occurs when the DLCI is ACTIVE and end-to-end keepalives are enabled but the number of errors due to timeouts or sequence number mismatches has reached the failure threshold. The DLCI is taken out of operation until the protocol recovers.	fr	"A persistent failure may indicate a mismatched end-to-end keepalive " "configuration at each end of the PVC. A transient failure may be due " "to a temporary loss of connectivity or heavy congestion in the network. " "This is a rate-limited log message so not all failures may be logged. " "The <CmdBold>show frame-relay end-to-end keepalive failures<NoCmdBold> " "command can be used to obtain further information on what PVCs have " "experienced failures."
FR_ELM3INCORRECT_ID	3-Error	Incorrect ID	Incorrect ID in QOS parameter message.	-	""
FR_ELM3INCORRECT_IE	3-Error	Incorrect IE	Enhanced LMI is not configured on the interface. The frame was dropped.	-	""
FR_FRAG-3-BADPAK	3-Error	Inconsistent packet: size [dec] linktype [chars] input [chars] output [chars]	A packet being fragmented has inconsistent size and data	fr	"Inform Cisco technical support representative"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FR_HA-3-ISSU	3-Error	[chars]: [chars]	A Frame Relay ISSU error occurred.	fr	LOG_SID_SH_TECH_ACTION
FR_HA-3-SYNC	3-Error	[chars]: code [dec]	An error occurred when syncing Frame Relay state to the Standby Route Processor. This may affect Non-Stop Forwarding capability on Frame Relay interfaces during and after switchover until the state is recovered through normal protocol operation.	fr	"Reset the standby processor to attempt the sync again. " LOG_SID_RECUR_ACTION
FR_CXDRPULSENDERRR	3-Error	Error occurred sending FR PVC stats to the RP: error code %u	An error occurred while updating the RP with FR PVC stats.\n\n Some of the FR PVC counters may be inaccurate.	fr	"Some FR PVC stats may be lost. This may be a temporary failure.\n\n If this error message continues to be seen please contact Cisco TAC"
FR_CXDRUNISZTOEG	3-Error	Error occurred sending FR PVC stats to the RP: [chars]: DLCI [dec]: unit sz %u	An error occurred while updating the RP with FR PVC stats.\n\n Some of the FR PVC counters may be inaccurate.	fr	"Some FR PVC stats may be lost. This may be a temporary failure.\n\n If this error message continues to be seen please contact Cisco TAC"
FR_LMI3INCORRECT_IE	3-Error	Enhanced LMI not configured incorrect IE	An unexpected LMI information element has been received.	fr	"Verify the configuration for enhanced LMI on the switch matches the configuration on the router."
FR_LMI3MSG_TOO_BIG	3-Error	[chars] [chars] Status message too big status of PVCs with dlci values	LMI STATUS message size is too big to fit into interface MTU.	fr	"LMI type - cisco - does not support segmentation of STATUS message " "so either increase the interface MTU or use LMI types - ansi or " "q933a."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>FR</del> _ <del>IP</del> _ <del>STATS</del> _ <del>CORRUPT</del> _ <del>MSG</del>	3-Error	FR IPC stats msg is corrupted: buffer [hec]: length %u	An error occurred while processing a FR IPC stats message. \n\ Some of the FR PVC counters may be inaccurate.	fr	"This could be a temporary failure.\n\n But there could be a possibility that some of the FR PVC counters may\n\n not have updated correctly.\n\n If the error message is seen multiple times please inform Cisco \n\ technical support representative."
<del>FR</del> _ <del>IP</del> _ <del>STATS</del> _ <del>NALD</del> _ <del>SA</del> _ <del>UNI</del>	3-Error	Error processing FR IPC stats msg: DLCI is out of bounds	An error occurred while processing a FR IPC stats message.\n\ Some of the FR PVC counters may be inaccurate.	fr	"This could be a temporary failure that may or may not affect the\n\ accuracy of PVC stats. If this error message continues to be seen\n\ multiple times please inform Cisco technical support representative."
<del>FR</del> _ <del>IP</del> _ <del>STATS</del> _ <del>NAD</del> _ <del>UNI</del> _ <del>COUNT</del>	3-Error	FR IPC stats msg is corrupted: unit count %u	An error occurred while processing a FR IPC stats message.\n\ Some of the FR PVC counters may be inaccurate.	fr	"This could be a temporary failure.\n\n But there could be a possibility that some of the FR PVC counters may\n\n not have updated correctly.\n\n If the error message is seen multiple times please inform Cisco \n\ technical support representative."
<del>FR</del> _ <del>RP</del> _ <del>XDR</del> _ <del>CLIENT</del> _ <del>INIT</del> _ <del>ERR</del>	3-Error	FR XDR client initialization error: error code %u	An error occurred while registering the FR RP XDR client. \n\ Distributed packet forwarding over FR will not work.	fr	"This is a serious error. Without the FR XDR client distributed \n\ packet forwarding over FR will not work. Please inform a Cisco \n\ technical support representative"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>FR_PDN_INTERFACE_ERROR</del>	3-Error	Unable to setup FR XDR for interface [chars]	An error occurred while setting up FR XDR for a FR interface.\n\ This will affect distributed packet forwarding over this interface.	fr	"This is a serious error. Without FR XDR support distributed \n\ packet forwarding over the FR interface in question will not work. \n\ Please inform a Cisco technical support representative"
<del>FR_VCB3ADJ_SRC_ERROR</del>	3-Error	Error sourcing adjacency - vc-bundle [chars] dlcI [dec]	An error occurred while setting up the adj for a member pvc	fr	"Try reconfiguring the vc-bundle"
FR_VCB-3-BUMPING	3-Error	Bumping error - vcb [chars] - [chars]	An error occurred while bumping traffic in a vc-bundle	fr	"As a workaround reconfigure the vc-bundle to avoid bumping"
FR_VCB-3-CONFIG	3-Error	Configuration error - vcb [chars] - [chars]	An error occurred while interpreting vc-bundle configuration	fr	"Try reconfiguring the vc-bundle"
<del>FR_VCB3FIB_SWITCHING</del>	3-Error	FIB switching error - vc-bundle [chars]	An error occurred while FIB switching packets across vc-bundle	fr	"As a workaround delete the vc-bundle and employ a PVC to substitute " "for the vc-bundle"
<del>FR_VCB3PROCESS_SWITCHING</del>	3-Error	Switching error - vcb [chars] - [chars]	An error occurred while switching packets across vc-bundle	fr	"As a workaround delete the vc-bundle and employ a PVC to substitute " "for the vc-bundle"
FR_VCB-5-UPDOWN	5-Notice	FR VC-Bundle [chars] changed state to [chars]	The state of a frame-relay vc-bundle changed to up/down	fr	"Notification message only. No action required"
FR_VIP-3-INCONSISTENT	3-Error	Invalid state on VIP: DLCI [dec]: Slot [dec]: Error code [dec]	An error occurred while processing FR state on the VIP	fr	"Shut - no shut the frame-relay encapsulated interface for the" "slot in question"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FR_VIP-3-MISSING_STATE	3-Error	Missing state on VIP: DLCI [dec]: Slot [dec]	An error occurred while preparing an IPC stats unit	fr	"Shut - no shut the frame-relay encapsulated interface for the" "slot in question"
FR_VIP-3-SWITCHING	3-Error	[chars] DLCI [dec]: [chars]	An error was detected while switching a packet on the VIP	fr	"Shut - no shut of the interface in question or unconfigure then\n\n re-configure may solve the problem. Copy and save the message\n\n and call your technical support representative for assistance"
FR_VIP-5-FLUSH	5-Notice	Flushing frame relay state	Clearing up frame relay state on the VIP card	fr	"Notification message only. No action required."
FR-3-BQ_DEQ_ERR	3-Error	fr_bq_proc: unknown packet on broadcast queue packet dropped!	Invalid packet on FR broadcast queue packet dropped!	fr	"If the router or some features are not operational due to this" "condition attempt to disable the Frame Relay broadcast queue by " "entering the <CmdBold>no frame-relay broadcast-queue</CmdBold>" "command in interface configuration mode for a immediate workaround." "And "LOG_STD_ACTION"
FR-3-BQ_DEQ_PTR	3-Error	fr_br_proc: hdr-[hec] size-[dec] dlci-[node] [node] [node]	The Frame Relay broadcast queue contains a datagram that is invalid. The packet has been dropped.	fr	"Inform Cisco technical support representative"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FR-3-BQ_ENQ_ERR	3-Error	fr_oqueue: Invalid datagramstart [hec] [hec] pak dropped	A broadcast packet was detected in the Frame Relay output queue that contained an invalid datagram header. The packet has been dropped.	fr	"If the router or some features are not operational due to this" "condition attempt to disable the Frame Relay broadcast queue by " "entering the <CmdBold>no frame-relay broadcast-queue </CmdBold>" "command in interface configuration mode for a immediate workaround." "And "LOG_STD_ACTION
FR-3-INV_OUTPUT_VECTOR	3-Error	An invalid output vector detected on interface [chars]	An invalid internal function vector is installed on a Frame Relay interface which affects the ability of processing outbound traffic on the device.	fr	"Remove and re-apply Frame Relay encapsulation on the interface to " "recover from the error."
FR-3-PVC_STATUS_CREATE_ERR	3-Error	FR PVC status event queue error: failed to create queue	Unable to create FR PVC status event queue	fr	LOG_STD_ACTION
FR-3-FRTSZEROCIR	3-Error	FRTS: attempt to configure zero CIR	It should not be possible to configure a zero CIR. To do so would prevent data transmission on the VC.	fr	"Inform Cisco technical support representative"
FR-3-MAP_DELETE_ERROR	3-Error	[chars]	An error occurred while deleting a frame-relay map	fr	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FR-MR-UNEXCIDEVENT	3-Error	MFR Timer process error: event table is NULL for event [dec] state [dec]	The event was ignored because the state transition table is NULL. Normal processing continue.	fr	"Please refer to Bug Toolkit on CCO to check for existing bugs. " "If you need further assistance please provide 'show version' and " "'show running' and any configurations that were being done at the " "time the message was seen. Copy the message text exactly as it " "appears on the console or in the system log. Inform Cisco technical " "support representative and provide the representative with the " "gathered information."
FR-3-MLPofR_ERROR	3-Error	MLPofR not configured properly on Link [chars] Bundle [chars] :[chars]	The configuration of MLPoFR over Frame Relay MLPoFR	fr	"Ensure that FRTS has been configured on physical interface and that " "the service policy has been attached to the Virtual Template. To " "verify the configuration use the <CmdBold>show running-config serial " "interface<noCmdBold> and <CmdBold>show running-config " "virtual-template<noCmdBold> commands."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FR-3-NOMEMORY	3-Error	No memory for [chars]	The requested operation could not be accomplished because of a low memory condition.	-	"Reduce other system activity to ease memory demands. If conditions " "warrant upgrade to a larger memory configuration."
FR-3-NULL_PTR_DEREF	3-Error	Dereferencing NULL pointer [chars]	Dereferencing a NULL pointer	fr	"Inform Cisco technical support representative"
FR-3-SVC_SETUP	3-Error	[chars]: interface [chars]: DLCI [dec]	An error occurred while attempting to setup a Frame-Relay SVC. There may have been an attempt to setup a SVC using a DLCI thats already in use	fr	"Check if the DLCI is already in use. For example: A PVC may be " "configured to use the same DLCI " "use <CmdBold>show frame-relay pvc<CmdBold> to verify. "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FR-4-DLCIDELETE	4-Warning	Interface [chars] - DLCI [dec] - PVC use count [dec]	Trying to remove PVC DLCI while it is still being used.	fr	"If this error can be easily recreated enter the " "<CmdBold>debug frame-relay event<NoCmdBold> command and recreate " "the condition that caused this error. " "Copy all the debug messages text and the system message text " "exactly as it appears on the console or in the system log enter " "the show tech-support command contact your Cisco technical support " "representative and provide the representative with the gathered " "information."
FR-4-NNISUBINTF	4-Warning	Subinterface not supported on Frame Relay NNI	Trying to change the state of a subinterface on FR NNI.	fr	"Reconfigure the Frame Relay link type or remove the subinterface."
FR-5-CONVERT_ROUTE	5-Notice	Converting route pair to connect	A pair of Frame Relay routes are being converted to connections.	-	LOG_SID_NO_ACTION
FR-5-DLCICHANGE	5-Notice	Interface [chars] - DLCI [dec] state changed to [chars]	The state of the Frame Relay PVC specified by the DLCI changed.	fr	"Notification message only. No action required."
<del>FR-5-CONVERT_ROUTE</del>	3-Error		Increasing of fragment descriptor pool failed.	cpp-ucode	LOG_STD_ACTION
<del>FR-5-CONVERT_ROUTE</del>	3-Error		Initialization of fragment descriptor pool failed.	cpp-ucode	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IRAG3REASSEMBLY_DBG	3-Error	Reassembly/VFR encountered an error: [chars] [chars] [node] [chars] [node]	Reassembly/VFR encountered a runtime error as indicated in the message with parameter data for debug	qfp	LOG_STD_ACTION
IRAG3REASSEMBLY_ERR	3-Error	Reassembly/VFR encountered an error: [chars]	Reassembly/VFR encountered a runtime error as indicated	qfp	LOG_STD_ACTION
IRAIM1INTERNAL_CRITICAL	3-Error	[chars]	-	-	-
IRAIM1INTERNAL_ERROR	3-Error	[chars]	-	-	-
IRAIM1INTERNAL_CRITICAL	2-Critical	[chars]	-	-	LOG_SIDSH_TECH_ACTION
IRAIM3CONFIG_ERROR	3-Error	[chars]	-	-	LOG_SIDSH_TECH_ACTION
IRAIM3INTERNAL_ERROR	3-Error	[chars]	-	-	LOG_SIDSH_TECH_ACTION
IRAIM1INTERNAL_WARNING	4-Warning	[chars]	-	-	LOG_SIDSH_TECH_ACTION
FREEDM2FATALEVENT	2-Critical	Freedm [chars] fatal event occurred: 0x[hec]	A catastrophic Freedm error occurred	-	""
FREEDM3BUSYTIMEOUT	3-Error	Freedm [chars] busy bit of register 0x[hec] never cleared	Driver timedout waiting for the Freedm to acknowlege a request	-	""
FREEDM4HDLCALLOCFAIL	3-Error	Freedm [chars]: Allocation of HDLC controller [dec] for channel [dec] failed	Allocation of an HDLC controller failed	-	""
FREEDM3HDLC_INUSE	3-Error	Freedm [chars]: HDLC controller [dec] already in use on channel [dec]	An attempt was made to use an HDLC controller which was already in use	-	""
FREEDM-3-INITFAIL	3-Error	Freedm [chars] initialization failed: [chars]	Freedm device failed initialization	-	""

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FREEDM3NOIFREEDM	3-Error	Freedm [chars] returned device/vendor of [hex]	PCI get device id returned an unrecognized value	-	""
FREEDM3RGREADTIMEOUT	3-Error	Busy Out Error of FREEDM [dec] [chars]	Trying to read FREEDM internal RAM Busy bit is still set for\n\ more than 10 seconds.	as	LOGSIDSHTTECH ACTION
IRNEND_CRRMCRITQUL	1-Alert	The front end controller Tx queue reached watermark level	The queue between microcontroller controlling the front end and IOS has reached the watermark level. Too many messages are pending in the queue	firmware	"Please try reloading the switch. If it does not fix the " "problem this could be a bad hardware. Contact the Cisco " "technical support representative"
IRNEND_CRRMCRITQUL	1-Alert	A UCODE upgrade has taken place without a reload. There must be a reload in order to complete the upgrade. Some features will not work properly until the reload is performed.	The UCODE images were upgraded during an archive download software upgrade but the switch was not reloaded as part of the upgrade. The switch must be reloaded to complete the upgrade. Until the switch is reloaded PoE thermal power supply and stack-power features will not be completely supported.	firmware	"Please reload the switch at the earliest convenience."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>FRR_OCE-3-GENERAL</del> FRR_OCE-3-GENERAL	2-Critical	The front end controller [dec] is inactive	The microcontroller controlling the front end has become inactive. This controls the Port LEDs Uplink LEDs Power over ethernet and thermal/fan control functionality. These functionalities will not work on the ports controlled by this microcontroller. This does not have any impact on data traffic	hardware	"Please try a reset of the hardware. If it does not fix the " "problem this could be a bad hardware. Contact the Cisco " "technical support representative"
FRR_OCE-3-GENERAL	3-Error	[chars]	An internal software error occurred.	OCE_DDIS_COMPONENT	"Refer to the Bug Navigator at www.cisco.com to see if this " "condition has been previously reported and resolved in a " "later release."
FRR_OCE-3-GENERAL	3-Error	[chars]	An internal software error occurred.	OCE_DDIS_COMPONENT	"Refer to the Bug Navigator at www.cisco.com to see if this " "condition has been previously reported and resolved in a " "later release."
<del>FRR_OCE-3-GENERAL</del> FRR_OCE-3-GENERAL	3-Error	addrtype to xdr: [dec] [dec]	An internal software error occurred.	OCE_DDIS_COMPONENT	"Refer to the Bug Navigator at www.cisco.com to see if this " "condition has been previously reported and resolved in a " "later release."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HR</del> <del>OCE</del> <del>3</del> <del>NALD</del> <del>ADR</del> <del>ME</del>	3-Error	addrtype to xdr: [dec] [dec]	An internal software error occurred.	OCE_DDIS_COMPONENT	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this "condition has been previously reported and resolved in a "later release."
<del>HR</del> <del>OCE</del> <del>3</del> <del>NALD</del> <del>B</del> <del>DE</del> <del>V</del>	3-Error	Error in BFD event retrieval bfd notification handle is [node]session handle is %p	An internal software error occurred.	OCE_DDIS_COMPONENT	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this "condition has been previously reported and resolved in a "later release."
<del>HR</del> <del>OCE</del> <del>3</del> <del>NALD</del> <del>B</del> <del>DE</del> <del>V</del>	3-Error	Error in BFD event retrieval bfd notification handle is [node]session handle is %p	An internal software error occurred.	OCE_DDIS_COMPONENT	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this "condition has been previously reported and resolved in a "later release."
<del>HR</del> <del>OCE</del> <del>3</del> <del>NALD</del> <del>B</del> <del>D</del> <del>H</del> <del>N</del> <del>L</del>	3-Error	[chars] bfd notification handle is %p	An internal software error occurred.	OCE_DDIS_COMPONENT	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this "condition has been previously reported and resolved in a "later release."
<del>HR</del> <del>OCE</del> <del>3</del> <del>NALD</del> <del>B</del> <del>D</del> <del>H</del> <del>N</del> <del>L</del>	3-Error	[chars] bfd notification handle is %p	An internal software error occurred.	OCE_DDIS_COMPONENT	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this "condition has been previously reported and resolved in a "later release."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>FRR_OCE3INVALIDPAR</del>	3-Error	BFD session db node mismatch: bfd context db node is [node]fr db node is %p	An internal software error occurred.	OCE_DDIS_COMPONENT	"Refer to the Bug Navigator at www.cisco.com to see if this "condition has been previously reported and resolved in a "later release."
<del>FRR_OCE3INVALIDPAR</del>	3-Error	BFD session db node mismatch: bfd context db node is [node]fr db node is %p	An internal software error occurred.	OCE_DDIS_COMPONENT	"Refer to the Bug Navigator at www.cisco.com to see if this "condition has been previously reported and resolved in a "later release."
FRR_OCE3INVALIDPAR	3-Error	Parent OCE [node]chars] is [chars]	An internal software error occurred.	OCE_DDIS_COMPONENT	"Refer to the Bug Navigator at www.cisco.com to see if this "condition has been previously reported and resolved in a "later release."
FRR_OCE3INVALIDPAR	3-Error	Parent OCE [node]chars] is [chars]	An internal software error occurred.	OCE_DDIS_COMPONENT	"Refer to the Bug Navigator at www.cisco.com to see if this "condition has been previously reported and resolved in a "later release."
FRR_OCE3NULLPONIER	3-Error	[chars]	An internal software error occurred.	OCE_DDIS_COMPONENT	"Refer to the Bug Navigator at www.cisco.com to see if this "condition has been previously reported and resolved in a "later release."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HR_OCE3_NULL_POINTER	3-Error	[chars]	An internal software error occurred.	OCE_DDIS_COMPONENT	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this "condition has been previously reported and resolved in a "later release."
HR_OCE4_ERROR_BFD_SESSION	4-Warning	[chars]BFD returned [dec] for address [chars] and interface [chars] if_num: [dec] - node [node]handle %p	An internal software error occurred.	OCE_DDIS_COMPONENT	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this "condition has been previously reported and resolved in a "later release."
HR_OCE4_ERROR_BFD_SESSION	4-Warning	[chars]BFD returned [dec] for address [chars] and interface [chars] if_num: [dec] - node [node]handle %p	An internal software error occurred.	OCE_DDIS_COMPONENT	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this "condition has been previously reported and resolved in a "later release."
HR_OCE4_INVALID_BACKUP_OCE	4-Warning	Invalid backup oce is found because interface [node] is removed or reloading	The interface or line card is reloading or removed.	OCE_DDIS_COMPONENT	"Check whether the line card is present and the interface is up."
HR_OCE4_INVALID_BACKUP_OCE	4-Warning	Invalid backup oce is found because interface [node] is removed or reloading	The interface or line card is reloading or removed.	OCE_DDIS_COMPONENT	"Check whether the line card is present and the interface is up."
HR_OCE4_NULL_PRIMARY_OCE	4-Warning	[chars]	The interface or line card is reloading or pulled off.	OCE_DDIS_COMPONENT	"Check whether the line card is in online and the interface is up."
HR_OCE4_NULL_PRIMARY_OCE	4-Warning	[chars]	The interface or line card is reloading or pulled off.	OCE_DDIS_COMPONENT	"Check whether the line card is in online and the interface is up."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FRR_OCE-5-ISSULOG	5-Notice	FRR is not ISSU compatible notified by [chars]	MPLS failed to set offset within packet	OCE_DDIS_COMPONENT	LOG_STD_ACTION
FRR_OCE-5-ISSULOG	5-Notice	FRR is not ISSU compatible notified by [chars]	MPLS failed to set offset within packet	OCE_DDIS_COMPONENT	LOG_STD_ACTION
FRR-5-MPLS_TE	5-Notice	ERRMSG_NOFLAGS	-	-	-
FRR-5-MPLS_TE	5-Notice	ERRMSG_NOFLAGS	-	-	-
<del>FRR-5-MPLS_TE</del>	3-Error	[chars]	<del>FRR-5-MPLS_TE</del>	ribinfra	LOG_SID_RECUR_ACTION
<del>FRR-5-MPLS_TE</del>	3-Error	[chars]	<del>FRR-5-MPLS_TE</del>	ribinfra	LOG_SID_RECUR_ACTION
ISHC2LCSETUPAL	2-Critical	Failed to initialise or allocate memory for IP Compression database.	IP Compression main database not created due to lack of memory resources.\n\	iphc	"The Line Card cannot allocate memory for an IP Compression database.\n\ Add more memory if possible to the VIP.\n\ Free up memory on the VIP by reducing features used or " "buffer allocations.\n\ Reduce the number of contexts configured on all interfaces on\n\ the affected line card using the interface configuration \n\ <CmdBold>ip rtp compression no-gt-bit"
FS_IPHC2LC_PROC_INT	2-Critical	LC Failed to initialise distributed IP Hdr Comp Process	IP Compression Process not created on Line Card.	iphc	"A possible reason for a process failing to start is lack of resources.\n\ Check memory allocation on line card and either upgrade line card memory\n\ or reduce feature burden in it's interface configurations."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FS_IPHC2RP_NOLCINFO	2-Critical	Unable to malloc state table for LC	An internal data structure is missing due to lack of memory resources.	iphc	"The Route Processor is dangerously low on memory resources. Free up \n\n memory by removing unwanted feature configuration or upgrade the memory\n\n on the system router processor"
FS_IPHC3LC_NAID_MSG	3-Error	Received IPC message of unknown type	IP compression on Line Card has received an unknown message from Route\n\n Processor.	iphc	"If this message occurs regularly copy the error message exactly as it\n\n appears and report it to your technical support representative."
FS_IPHC3MSG_TOO_LARGE	3-Error	Received IPC message too large to handle %u	IP compression has received an IPC message of a size larger than expected.\n\n	iphc	"If this message occurs regularly copy the error message exactly as it\n\n appears and report it to your technical support representative."
FS_IPHC4FC_NO_CHUNK	4-Warning	IPC Chunk pool empty slot [dec] VIP junked RSP msg	IP compression private memory pool for IPC messages exhausted.	iphc	"If this message occurs regularly copy the error message exactly as it\n\n appears and report it to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IS_IPHC4LC_IPCSENFAL	4-Warning	LC unable to send IPHC msg to RP %u	Line card was unable to send an IP header compression \n\ information message to the route processor.	iphc	"Copy the error message exactly as it appears and report it to your\n\ technical support representative. If possible also provide the output\n\ of the <CmdBold>debug ip rtp head<NoCmdBold> and <CmdBold>debug ip tcp head<NoCmdBold>\n\ commands for the period during which this message appeared."
IS_IPHC4LC_IPCNOBUFR	4-Warning	Unable to malloc IPC msg buffer [node]on line card	Line card unable to send IPHC information to Route Processor due to lack\n\ of memory in it's private memory pool.	iphc	"If this message occurs regularly copy the error message exactly as it\n\ appears and report it to your technical support representative."
IS_IPHC4RP_IPCSENFAL	4-Warning	RP unable to send IPHC msg to LC %u	Route processor was unable to send an IP header compression \n\ configuration message to a line card interface.	iphc	"Copy the error message exactly as it appears and report it to your\n\ technical support representative. If possible also provide the output\n\ of the <CmdBold>debug ip rtp head<NoCmdBold> and <CmdBold>debug ip tcp head<NoCmdBold>\n\ commands for the period during which this message appeared."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IS_IPC4RP_NOPBUFR	4-Warning	Unable to malloc IPC msg buffer [node]on RP	Route Processor unable to send IPHC information to Line Card due to lack of memory in its private memory pool.	iphc	"If this message occurs regularly copy the error message exactly as it appears and report it to your technical support representative."
FIC_TRUNK_NOMEMORY	1-Alert	msgtxt_nomemory	The MPC860/PowerQUICC CPU was unable to access the memory it needs to carry out its functions. Here are some possible causes. The network is large requiring a lot of memory for routing tables and so on. The router configuration has many features enabled each of which require a certain amount of memory. A software error memory leak exists.	-	"Reduce system activity to ease the memory demand or upgrade to a larger memory configuration."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
FIC_TRUNK1RELOAD	1-Alert	Must reload to config Interface [chars] as ftc-trunk again	If the operator first configures an interface to 'encapsulation ftc-trunk' then re-configures it later to some other encapsulation such as HDLC then attempts to re-configure it again to 'encap ftc-trunk' then this error message is displayed to notify the operator that the 'reload' command must be entered first before attempting to configure the interface to 'encap ftc-trunk' again.	-	"Issue the 'reload' command."
FIC_TRUNK3CD_IN_USE	3-Error	[chars] connection-id [dec] is busy try other cid	When setting up a new session-trunk if the operator attempts to use a connection-ID that is already assigned and in-use then the error message is displayed to indicate that the selected connection-id cannot be used for this session-trunk.	-	"Try again with a connection-ID which is not already in use."
FIC_TRUNK3TOOMANY	3-Error	Cannot config more than [dec] ftc-trunks	When the operator enters the 'encap ftc-trunk' configuration command if there are already 4 interfaces configured for encap ftc-trunk this message is displayed to indicate that no more can be configured.	-	"Free one of the other interfaces first or if conditions warrant upgrade to a larger configuration with more interfaces."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>FTTRUNKCOMANYSSON</del>	3-Error	Cannot config more than [dec] session-trunks	When the operator enters the 'encap ftc-trunk' configuration command if there are already 4 interfaces configured for encap ftc-trunk then the message is displayed to indicate that no more can be configured.	-	"Free one of the existing interfaces before trying again or if conditions warrant upgrade to a larger configuration."
FIP_ALG3BAD_L7_DATA	3-Error	-	Receive Bad L7 data from either FW or NAT.	cpp-ucode	LOG_STD_ACTION
FIP_ALG_CHUNK_CREATE_FAIL	3-Error	-	Chunk create failed. FTP ALG will not be able to finish initialization.	cpp-ucode	LOG_STD_ACTION
<del>HPACCOMMABLEMAGIC</del>	3-Error	rcvd:[hec] expect:[hec]	Incompatible HA Message Length. FTP ALG will reject sync data.	cpp-ucode	LOG_STD_ACTION
<del>HPACCOMMABLEVERSION</del>	3-Error	rcvd:[hec] expect:[hec]	Incompatible HA Version. FTP ALG will reject sync data.	cpp-ucode	LOG_STD_ACTION
<del>HPACMAGICMAGIC</del>	3-Error	rcvd:[hec] expect:[hec]	Incorrect HA MAGIC. FTP ALG will reject sync data.	cpp-ucode	LOG_STD_ACTION
<del>FIPALGINVALID_OPCODE</del>	3-Error	rcvd:[hec] expect:[hec]	Invalid HA opcode. FTP ALG will reject sync data.	cpp-ucode	LOG_STD_ACTION
<del>FIPALG_L7_DATA_CREATE_ERROR</del>	3-Error	-	Error during L7 data creation.	cpp-ucode	LOG_STD_ACTION
<del>FIPALG_WRITEBACK_ERROR</del>	3-Error	-	Error during writeback.	cpp-ucode	LOG_STD_ACTION
FIP6_ALG3BAD_L7_DATA	3-Error	-	Receive Bad L7 data from either FW or NAT.	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FTPALG3CHNKCREAIFAL	3-Error	-	Chunk create failed. FTP64 ALG will not be able to finish initialization.	cpp-ucode	LOG_STD_ACTION
FTPALG3MPLHAMELEN	3-Error	rcvd:[hec] expect:[hec]	Incompatible HA Message Length. FTP64 ALG will reject sync data.	cpp-ucode	LOG_STD_ACTION
FTPALG3MPLHAMEVER	3-Error	rcvd:[hec] expect:[hec]	Incompatible HA Version. FTP64 ALG will reject sync data.	cpp-ucode	LOG_STD_ACTION
FTPALG3MPLHAMCC	3-Error	rcvd:[hec] expect:[hec]	Incorrect HA MAGIC. FTP64 ALG will reject sync data.	cpp-ucode	LOG_STD_ACTION
FTPALG3MPLHAMOPE	3-Error	rcvd:[hec] expect:[hec]	Invalid HA opcode. FTP64 ALG will reject sync data.	cpp-ucode	LOG_STD_ACTION
FTPALG7DATAERRR	3-Error	-	Error during L7 data creation.	cpp-ucode	LOG_STD_ACTION
FTPSE-3-MSG_ERR	3-Error	[chars]	Error Messages	pagent	"try debug command"
FTPSE-6-MSG_INF	6-Information	[chars]	Program information	-	-
FTPSE6NETWRIFALED	6-Information	FTPSE Server:connection / tcp_write failed.	A TCP write failed while sending an FTP command reply to the client.	-	"Verify network connection from client to server and verify ftp client operation."
FTPSE-7-MSG_DBG	7-Debug	[chars]	Debug Messages	-	-
FTPSE-4-FILEWRNG	4-Warning	File may not have transferred correctly	Extra linefeeds were received in ASCII mode	-	-
FTPSE-6-CONCLOSD	6-Information	Connection closed after [dec] seconds. '[chars]'	The FTP connection to a client was closed after 5 minutes inactivity.	-	"Client inactivity will cause the server to shutdown the connection."
FTPSE-6-CWDFALED	6-Information	setcwd failed [chars].	FTP client request failed to change to requested directory.	-	"Verify correct path for desired directory."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FIPSERVER6NETRDFALD	6-Information	FTP control connection / tcp_read failed.	An error occurred reading the command line from the ftp client.	-	"Verify network connection from client to server and verify ftp client operation."
FIPSERVER6NETWRIFALD	6-Information	FTP Server:connection / tcp_write failed.	A TCP write failed while sending an FTP command reply to the client.	-	"Verify network connection from client to server and verify ftp client operation."
FIPSERVER6NEWCONN	6-Information	FTP Server - new connection made.	An new ftp server connection has opened.	-	"FTP Server connections can be disabled by config 'no ftp-server enable'."
FIPSERVER6REHYLOGN	6-Information	REPLY [dec]	This is an informational message only.\n\n An FTP login has occurred.	-	"Informational messages can be disabled by changing logging level."
FIPSERVER6REHYLOGEXT	6-Information	[dec][chars]	This is an informational message only.\n\n This text was sent to the FTP client.	-	"Informational messages can be disabled by changing logging level."
FIPSERVER6TOPDIRTEST	6-Information	Input path failed Top-dir[chars] test.	An operation attempted to use a path not within the tree under the ftp-server topdir config parameter.	-	"Re-configure the server 'topdir' parameter or select another path."
FTSP-1-NOMEMORY	1-Alert	msgtxt_nomemory	The requested operation could not be accomplished because of a low\n\n memory condition.	-	"Reduce other system activity to ease memory demands. If conditions\n\n warrant upgrade to a larger memory configuration."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FTSP-1-NOMEMORY	1-Alert	msgtxt_nomemory	The requested operation could not be accomplished because of a low\n\n memory condition.	-	"Reduce other system activity to ease memory demands. If conditions\n\n warrant upgrade to a larger memory configuration."
FISP2INTERNAL_ERROR	2-Critical	Internal software error. [chars]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
FISP2INTERNAL_ERROR	2-Critical	Internal software error. [chars]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
FSP4AUTHENTICATION	4-Warning	Authentication for > [chars] < failed\n	Authenticating the specified user failed	-	LOG_SID_RECUR_ACTION
FSP4AUTHENTICATION	4-Warning	Authentication for > [chars] < failed\n	Authenticating the specified user failed	-	LOG_SID_RECUR_ACTION
FSP4MAIL_NO_ACCOUNTING	4-Warning	FAXMAIL-Accounting\n\nfor tty[dec] failed	Accounting failed for the specified tty.	-	LOG_SID_RECUR_ACTION
FSP4MAIL_NO_ACCOUNTING	4-Warning	FAXMAIL-Accounting\n\nfor tty[dec] failed	Accounting failed for the specified tty.	-	LOG_SID_RECUR_ACTION
FISP4HARDWARE_ERROR	4-Warning	tty [dec]	A hardware interface was not configured when a fax call was\n\n answered or attempted.	-	LOG_SID_RECUR_ACTION
FISP4HARDWARE_ERROR	4-Warning	tty [dec]	A hardware interface was not configured when a fax call was\n\n answered or attempted.	-	LOG_SID_RECUR_ACTION
FISP4UNEXPECTED_EVENT	4-Warning	Bad event received\n\n[dec] [dec]	An unexpected event was received.	-	LOG_SID_RECUR_ACTION
FISP4UNEXPECTED_EVENT	4-Warning	Bad event received\n\n[dec] [dec]	An unexpected event was received.	-	LOG_SID_RECUR_ACTION
FTSP-6-FAX_CONNECT	6-Information	[chars]	Fax carrier detected	-	LOG_SID_NO_ACTION
FTSP-6-FAX_CONNECT	6-Information	[chars]	Fax carrier detected	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FISP6FAX_DISCONNECT	6-Information	[chars]	Fax call disconnected	-	LOG_SID_NO_ACTION
FISP6FAX_DISCONNECT	6-Information	[chars]	Fax call disconnected	-	LOG_SID_NO_ACTION
FTTM-3-ERROR	3-Error	[chars]	Full Ternary TCAM Manager Error	-	LOG_SID_SH_TECH_ACTION
FW_HA3CF_REG_FAILED	3-Error	Firewall High availability registration to CF failed	Firewall High Availability could not register as a Checkpoint Facility\n client	ios-firewall	"Firewall HA subsys registration as Checkpoint Facility client failed \n\n verify if this image is capable of doing Box-Box redundancy. \n\n Collect the image version information and report the problem to\n\n Cisco Technical assistance centre"
FW_HA3RF_REG_FAILED	3-Error	Firewall High availability registration to RF failed	Firewall High Availability could not register as a Redundancy Facility\n client	ios-firewall	"Firewall HA subsys registration as Redundancy Facility client failed \n\n verify if this image is capable of doing Box-Box redundancy. \n\n Collect the image version information and report the problem to\n\n Cisco Technical assistance centre"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FW_HA3SUBSYSNT_FAILED	3-Error	Firewall High availability subsystem initialization failed	Firewall High Availability subsystem initialization failed	ios-firewall	"Firewall HA subsystem initialization failed under unusual circumstances \n\ Check the available memory and CPU utilization on the router and verify \n\ that it satisfies the requirements for the feature \n\ If the requirement are satisfied collect the output of show tac and \n\ report it to Cisco Technical assistance centre."
FW_HA3IW_NT_FAILED	3-Error	Firewall High availability update timer initialization failed	Firewall High Availability update timer initialization failed	ios-firewall	"Firewall HA update timer initialization failed under unusual circumstances \n\ Check the available memory and CPU utilization on the router and verify \n\ that it satisfies the requirements for the feature \n\ If the requirement are satisfied collect the output of show tac and \n\ report it to Cisco Technical assistance centre."
FW_HA3AUDITR_SIDBY_SPT	6-Information	[chars]Start [chars] standby session: initiator [node][dec] -- responder [node][dec]	This message documents the opening of an inspection session on \n\ standby router. The message is issued at the start of each \n\ inspected session and it records the source/destination \n\ addresses and ports.	ios-firewall	"This message is for informational purposed only and can be used \n\ to collect the basic accounting for inspected sessions."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>FW-6-INFO-TRA-SDB/SCP</del>	6-Information	[chars]Stop [chars] standby session: initiator [node][dec] -- responder [node][dec]	This message documents the deletion of an inspection session on\n\n standby router. The message is issued at the end of each\n\n inspected session and it records the source/destination\n\n addresses and ports.	ios-firewall	"This message is for informational purposed only and can be used\n\n to collect the basic accounting for inspected sessions."
<del>FW-6-INFO-TRA-SDB/DCI</del>	6-Information	Sessions matching HSRP group [chars] are being transitioned from Standby to Active state	This message documents sessions on standby router that\n\n match this hsrp group name are changed to active. The message\n\n is issued when the standby router becomes active	ios-firewall	"This message is for informational purposed only and can be used\n\n to collect the basic accounting for inspected sessions."
<del>FW-6-INFO-HR-NAME-ON-SDB</del>	6-Information	Firewall High availability - Inpsct redundancy group is not configured on standby for interface [chars] dir in/out	NO hsrp group name on standby is configured on same interface and\n\n inspect dir configured on active	ios-firewall	"Please check firewall configuration on standby and make sure it \n\n is same with active's configuration"
<del>FW-6-INFO-INSR-RULE-ON-SDB</del>	6-Information	Firewall High availability - inspect rule is not configured on standby for interface [chars] dir in/out	NO inspect rule on standby is configured on same interface and inspect\n\n dir configured on active	ios-firewall	"Please check firewall configuration on standby and make sure it should \n\n be same with active's configuration"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FW-HA-PROT_MISMATCH	6-Information	Firewall High availability - L4/L7 protocol mismatch between active and standby	Firewall High Availability configuration of inspect rule or hsrp group \n\ name does not match between the Active and Standby devices	ios-firewall	"Firewall High Availability configuration between the Active and Standby\n\ devices are not automatically synched. Check to see if the configuration\n\ of the Active and Standby are in synch. Check the configuration guidelines\n\ for all areas that should match."
FW-2-BLOCK_HOST	2-Critical	[chars]Blocking new TCP connections to host [node]for [dec] minute[chars] half-open count [dec] exceeded.	This message indicates that any subsequent new TCP connection \n\ attempts to the specified host will be denied because the \n\ max-incomplete host threshold of half-open TCP connections is \n\ exceeded and the blocking option is configured to block the \n\ subsequent new connections. The blocking will be removed when the \n\ configured block-time expires.	firewall	"This message is for informational purposes only but may indicate \n\ that a SYN flood attack was attempted."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FW-2-BLOCK_HOST	2-Critical	[chars][node]Blocking new TCP connections to host [char]A for [node]minute[chars] half-open count [node]exceeded. [chars]	This message indicates that any subsequent new TCP connection \n attempts to the specified host will be denied because the \n max-incomplete host threshold of half-open TCP connections is \n exceeded and the blocking option is configured to block the \n subsequent new connections. The blocking will be removed when the \n configured block-time expires.	cpp-ucode	"This message is for informational purposes only but may indicate \n"" that a SYN flood attack was attempted."
FW-3-FTP_NMATCH_PADR	3-Error	[chars]Non-matching address [node]used in [chars] -- FTP client [node]FTP server %i	An FTP client attempted to use a PORT command or the FTP server \n\ attempted to use the response to a PASV command to trick the \n\ firewall into opening access to a third-party host that is \n\ different from the two hosts engaged in the FTP connection. \n\ This message indicates that a suspicious violation was detected \n\ while attempting to modify the security policy in the firewall. \n\ The command is rejected and the connection is reset by the \n\ firewall.	firewall	"This message is for informational purposes only but may indicate \n\ that an attempt was made to grant or open access to unauthorized \n\ hosts."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FW-3-FTP_PRIV_PORT	3-Error	[chars]Privileged port [dec] used in [chars] -- FTP client [node]FTP server %i	An FTP client attempted to use a PORT command or the FTP server \n\ attempted to use the response to a PASV command to trick the \n\ firewall into opening access to a privileged port. This message \n\ indicates that a suspicious violation was detected from the FTP \n\ client/server attempting to modify the security policy in the \n\ firewall. The command is rejected and the connection is reset by \n\ the firewall.	firewall	"This message is for informational purposes only but may indicate that an attempt was made to gain access to privileged ports."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>FWPASSNOTAUTH</del>	3-Error	[chars]Command issued before the session is authenticated -- FTP client [node]FTP server %i	An FTP client attempted to use the PORT command or an FTP server \n\ attempted to use the response to a PASV command to open a data \n\ channel in the firewall prior to the client's successful \n\ authentication with the server. This is a suspicious attempt by \n\ the client/server to trick the firewall into opening a hole \n\ so that outside attackers can take advantage of the firewall \n\ opening. This message indicates that a suspicious violation was \n\ detected and the PORT or PASV command/response is rejected \n\ by the firewall. The data channel in the firewall will not be \n\ opened until the authentication is done successfully.	firewall	"This message is for informational purposes only but may indicate \n\ that an illegal attempt was made to modify the firewall security \n\ policy."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
FW-3-HTTP_JAVA_BLOCK	3-Error	[chars]JAVA applet is blocked from [node][dec] to [node][dec].	A Java applet was seen in the HTTP channel and the firewall \n\ configuration indicates that the applet from this Web site should \n\ be prohibited. The message indicates that the applet is being \n\ downloaded from one of the prohibited sites and its entrance to \n\ the protected network is not allowed. The connection is reset and \n\ the transmission of the detected applet is aborted immediately.	firewall	"This message is for informational purposes only but may indicate a security problem."
FW-3-INTERNAL_ERROR	3-Error	IP Firewall internal failure -- [chars]	This message indicates the misc errors in the IP FW subsystem	firewall	"This message indicates the misc errors in the IP FW subsystem"
FW-3-NOTFOUND	3-Error	[chars]Session context for [node][dec] => [node][dec] not found.	The CBAC code was searching its database for information for a \n\ particular inspection session but this information was not found.	firewall	"If this message recurs copy it down exactly as it appears and \n\ contact your technical support representative for assistance."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FWFWNDWSCALE	3-Error	Dropping packet - Invalid Window Scale option for session [node][dec] to [node][dec] Initiator scale [node]Responder scale %u	Firewall detected the packet from Responder to Initiator \n\ has windows scaling option but did not have the scaling \n\ option in the SYN packet from Initiator to responder. \n\ This is an error according to RFC 1323	firewall	"Turn on window scaling option on both Initiator" " and Responderor Turn off window scaling on the " " Responder"
FWSMTPINVALIDCOMMAND	3-Error	[chars]Invalid SMTP command [chars]total [dec] chars from initiator [node][dec]	The CBAC code detected an invalid SMTP command in the inspected \n\ SMTP connection. This message indicates that a suspicious violation \n\ was detected that may be an attack to the mail server system. \n\ The command is rejected and the connection is reset by the firewall \n\ immediately.	firewall	"This message is for informational purposes only but may indicate\n\ a security problem."
FWTIMERWHEELFAILED	3-Error	Timer Wheel initialization failed	This message indicates that Timer Wheel initialization is\n\ failed in the FW subsystem	-	"This message indicates a series problem with IOS Firewall. \n\ On seeing this error message copy the message exactly as \n\ it appears and report it to your technical support \n\ representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FW4AGG_AGE_PERIOD_OFF	4-Warning	[chars] session count has dipped below the aggressive aging low watermark [node][chars]	The number of per-box half-open or total sessions has gone \n below the aggressive aging low threshold. This message indicates \n end of aggressive aging period.	cpp-ucode	"This message is for informational purposed only but may indicate \n"" a security problem."
FW4AGG_AGE_PERIOD_ON	4-Warning	[chars] session count has exceeded the aggressive aging high watermark [node][chars]	Start aggressive aging period. The aggressive aging high threshold \n of per-box halfopen or total sessions has been exceeded. \n This message indicates that a DOS attack may be in progress hence \n aggressive aging feature will take affect. The feature protects \n the firewall sessions resources by allowing idle sessions to be \n exist for a shorter period of time.	cpp-ucode	"This message is for informational purposed only but may indicate \n"" a security problem."
FW-4-ALERT_OFF	4-Warning	[chars][chars] count [dec]/[dec] current 1-min rate: [dec]	Either the number of half-open connections or the new connection \n\ initiation rate has gone below the max-incomplete low threshold. \n\ This message indicates that the rate of incoming new connections \n\ has slowed down and is issued only when the max-incomplete low \n\ threshold is crossed.	firewall	"This message is for informational purposed only but may indicate \n\ that an attack has stopped."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FW-4-ALERT_OFF	4-Warning	target: [chars][chars][chars] count [node][node] current rate: [node][chars]	Either the number of half-open connections or the new connection \n initiation rate has gone below the max-incomplete low threshold. \n This message indicates that the rate of incoming new connections \n has slowed down and is issued only when the max-incomplete low \n threshold is crossed.	cpp-ucode	"This message is for informational purposed only but may indicate \n"" that an attack has stopped."
FW-4-ALERT_ON	4-Warning	[chars][chars] count [dec]/[dec] current 1-min rate: [dec]	Either the max-incomplete high threshold of half-open connections \n\ or the new connection initiation rate has been exceeded. This error \n\ message indicates that an unusually high rate of new connections is \n\ coming through the firewall and a DOS attack may be in progress. \n\ This message is issued only when the max-incomplete high threshold \n\ is crossed.	firewall	"This message is for informational purposed only but may indicate \n\ a security problem."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FW-4-ALERT_ON	4-Warning	target: [chars][chars][chars] count [node][node]current rate: [node][chars]	Either the max-incomplete high threshold of half-open connections \n or the new connection initiation rate has been exceeded. This error \n message indicates that an unusually high rate of new connections is \n coming through the firewall and a DOS attack may be in progress. \n This message is issued only when the max-incomplete high threshold \n is crossed.	cpp-ucode	"This message is for informational purposed only but may indicate \n"" a security problem."
FW-4-OPEN_EXCEEDED	4-Warning	[chars] half open session limit exceeded. configured limit %u	The halfopen session limit of a specific layer 4 protocol or the total \n halfopen session limit exceeded. \n This error message indicates that an unusually high rate of new \n connections is coming through the firewall and a DOS attack may be in \n progress. \n This message is issued only when the max-incomplete high threshold \n is crossed.	cpp-ucode	"This message is for informational purposed only but may indicate \n"" a security problem."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FW-4-HOST_TCP_ALERT_ON	4-Warning	[chars]Max tcp half-open connections [dec] exceeded for host [node]	The max-incomplete host limit of half-open TCP connections has been \n\n exceeded. This message indicates that a high number of half-open \n\n connections is coming to the protected server and may indicate \n\n that a SYN flood attack is in progress and is targeted to the \n\n specified server host.	firewall	"This message is for informational purposes only but may indicate \n\n that a SYN flood attack was attempted. If this alert is issued \n\n frequently and identified to be mostly false alarms then the \n\n max-incomplete host threshold value is probably set too low \n\n and there is a lot of legitimate traffic coming in to that server. \n\n In this case the max-incomplete host parameter should be set to \n\n a higher number to avoid false alarms."
FW-4-HOST_TCP_ALERT_ON	4-Warning	target: [char] [char] Max tcp half-open connections [node] exceeded for host [char]A[chars]. [chars]	-	-	-
FW-4-NO_CB_DROP	4-Warning	[chars] returned error but did not drop packet as expected	Dependent feature returned error but did not drop the packet. Packet will be dropped but not properly attributed. This may result in drop counters and packet trace info being incorrect.	cpp-unicode	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FW4SESSIONS_EXCEEDED	4-Warning	[chars]Number of sessions for the firewall rule '[chars]' applied on interface '[chars]' exceeds the configured threshold [dec]	This message indicates that the number of established CBAC\n sessions have crossed the configured threshold.	firewall	"This message is for informational purpose only but may indicate\n a security problem. This might also mean that the session threshold\n is set to a low value in which case the threshold value could be\n increased through CLI command"
FW4SESSIONS_MAXMIM	4-Warning	Number of sessions for the firewall policy on target.class-[chars]:[chars] exceeds	This message indicates that the number of established ZBF\n sessions have crossed the configured sessions maximum limit	cpp-ucode	"This message is for informational purpose only but may indicate\n a security problem. This might also mean that the sessions maximum\n is set to a low value in which case the sessions maximum value could be\n increased through paramter-map type inspect CLI"
FW4CVM_JORDOMO_EXCBG	4-Warning	[chars]Majordomo Execute Attack - from [node]to %i	A bug in the Majordomo program will allow remote users to\n execute arbitrary commands at the privilege level of the\n server.	firewall	"For security reasons users should not\n be allowed to execute programs via e-mail servers. This is a very\n serious indication that your network may be under attack and the\n source should be shunned immediately."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FW4CPSNDMAILBADFROMG	4-Warning	[chars]Sendmail Invalid Sender - from [node]to %i	-	firewall	"For security reasons users should not \n\be allowed to execute programs via e-mail servers. This is a very \n\serious indication that your network may be under attack and the \n\source should be shunned immediately."
FW4CPSNDMAILBADTOG	4-Warning	[chars]Sendmail Invalid Recipient - from [node]to %i	-	firewall	"For security reasons users should not \n\be allowed to execute programs via e-mail servers. This is a very \n\serious indication that your network may be under attack and the \n\source should be shunned immediately."
FW4CPSNDMAILDKODE	4-Warning	[chars]Sendmail Decode Alias - from [node]to %i	Triggers on any mail message with ":\n\ decode@" in the header.\n\ The decode alias is used to uudecode files and is primarily\n\ implemented as a convenience for system administration.	firewall	"For security reasons users should not \n\be allowed to execute programs via e-mail servers. This is a very \n\serious indication that your network may be under attack and the \n\source should be shunned immediately."
FW4CPSNDMAILDKOMAD	4-Warning	[chars]Invalid SMTP command - [node]to %i	Triggers on an invalid SMTP command in the \n\ SMTP connection. This message indicates that a suspicious violation \n\ was detected that may be an attack to the mail server system.	firewall	"This is unusual traffic and may warrant\n\investigation."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
FW4ICPSENDMAIL_CDSG	4-Warning	[chars]Archaic Sendmail Attacks - from [node]to %i	Triggers when "wiz" or "debug" commands are sent to the SMTP port.	firewall	"For security reasons users should not \n\nbe allowed to execute programs via e-mail servers. This is a very \n\nserious indication that your network may be under attack and the \n\nsource should be shunned immediately."
FW4UNBLOCK_HOST	4-Warning	[chars]New TCP connections to host [node]no longer blocked	New TCP connection attempts to the specified host are no longer \n\nblocked. This message indicates that the blocking of new TCP \n\nattempts to the specified host has been lifted.	firewall	"This message is for informational purposed only but may indicate \n\n a SYN flood attack was attempted to the host."
FW4UNBLOCK_HOST	4-Warning	target[chars][chars]New TCP connections to host [char]A[chars] no longer blocked [chars]	New TCP connection attempts to the specified host are no longer \n\nblocked. This message indicates that the blocking of new TCP \n\nattempts to the specified host has been lifted.	cpp-ucode	"This message is for informational purposed only but may indicate \n\n" a SYN flood attack was attempted to the host."
FW4VRF_AGGRESSIVE_AGEING_LOW	4-Warning	[chars] session count of VRF id [dec] has dipped below the aggressive aging low watermark [node][chars]	The number of VRF half-open or total sessions has gone \n\nbelow the aggressive aging low threshold. This message indicates \n\n end of aggressive aging period.	cpp-ucode	"This message is for informational purposed only but may indicate \n\n" a security problem."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>FW</del> FWAGGAGEHDDN	4-Warning	[chars] session count of VRF id [dec] has exceeded the aggressive aging high watermark [node][chars]	Start aggressive aging period for VRF. The aggressive aging high \n threshold of VRF halfopen or total sessions has been exceeded. \n This message indicates that a DOS attack may be in progress hence \n aggressive aging feature will take affect. The feature protects \n the firewall sessions resources by allowing idle sessions to be \n exist for a shorter period of time.	cpp-ucode	"This message is for informational purposed only but may indicate \n"" a security problem."
<del>FW</del> FWHCPNEXCEED	4-Warning	VRF id [dec] [chars] half open session limit exceeded. configured limit [node][chars]	The halfopen session limit of a specific layer 4 protocol or the total \n halfopen session limit exceeded for a specific vrf id. \n This error message indicates that an unusually high rate of new \n connections is coming through the firewall and a DOS attack may be in \n progress. \n This message is issued only when the max-incomplete high threshold \n is crossed.	cpp-ucode	"This message is for informational purposed only but may indicate \n"" a security problem."
<del>FW</del> FWMALDQPIRAGMENT	5-Notice	[chars] Dropping [chars] command fragment from initiator [node][dec]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>FW</del> IMAP_NAID_COMMAND	5-Notice	[chars]Invalid IMAP command from initiator [node][dec]: [chars]	-	-	-
<del>FW</del> IMAP_NON_SECURE_LOGIN	5-Notice	[chars]LOGON IMAP command from initiator [node][dec]: [chars]	The CBAC code detected a cleartext logon attempt in the inspected IMAP\n\n connection while secure-login is configured.\n\n The command is rejected and the connection is reset by the firewall\n\n immediately.	firewall	"This message is for informational purposes only but may indicate a\n\n security problem."
<del>FW</del> POP3_NAID_COMMAND	5-Notice	[chars]Invalid POP3 command from initiator [node][dec]: [chars]	-	-	-
<del>FW</del> POP3_NON_SECURE_LOGIN	5-Notice	[chars]LOGON POP3 command from initiator [node][dec]: [chars]	The CBAC code detected a cleartext logon attempt in the inspected POP3\n\n connection while secure-login is configured.\n\n The command is rejected and the connection is reset by the firewall\n\n immediately.	firewall	"This message is for informational purposes only but may indicate a\n\n security problem."
FW-6-DROP_PKT	6-Information	Dropping [chars] pkt [node][node]=> [node]%u	Packet dropped by firewall inspection.	firewall	"This message is for informational purposes only. \n\n It may be used to verify that packets were dropped by the firewall."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FW-6-DROP_PKT	6-Information	Dropping [chars][chars] pkt from [chars] [char]A[chars]:[node]>=> [char]A[chars]:[node] targetclass-[chars]:[chars] [chars] [chars] with ip ident [node][chars] [chars] [chars] [chars] [chars]	-	-	-
FW-6-LOG_SUMMARY	6-Information	[node][chars] packet[chars] [chars] from [chars] [char]A[chars]:[node]>=> [char]A[chars]:[node] targetclass-[chars]:[chars] [chars] [chars] with ip ident [node][chars] [chars] [chars] [chars] [chars]	-	-	-
FW-6-PASS_PKT	6-Information	Passing [chars] pkt from [chars] [char]A[chars]:[node]>=> [char]A[chars]:[node] targetclass-[chars]:[chars] [chars] [chars] with ip ident [node][chars]	-	-	-
FW-6-ALLOC_CHANNEL	6-Information	[chars]Pre-Allocated [chars] channel from [node][dec]:[dec] to [node][dec]:[dec]	Firewall inspection is configured on at least one interface in the\n\ startup config.	firewall	"This message is for informational purposes only. \n\ It may be used to verify whether firewall inspection is on at startup."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FW6SESS_AUDIT_TRAIL	6-Information	[chars]Stop [chars] session: initiator [node][dec] sent [node]bytes -- responder [node][dec] sent [node]bytes	This message documents the per-session transaction log of network \n\ activities. The message is issued at the end of each inspected \n\ session and it records the source/destination addresses and ports \n\ as well as the number of bytes transmitted by the client and \n\ server.	firewall	"This message is for informational purposed only and can be used \n\ to collect the basic accounting for the inspected sessions."
FW6SESS_AUDIT_TRAIL	6-Information	target: [char]A[chars]:[node] [chars] session: initiator [char]A[chars]:[node]	This message documents the per-session transaction log of network \n activities. The message is issued at the end of each inspected \n session and it records the source/destination addresses and ports \n as well as the number of bytes transmitted by the client and \n server.	cpp-ucode	"This message is for informational purposed only and can be used \n"" to collect the basic accounting for the inspected sessions."
FW6SESS_AUDIT_TRAIL_START	6-Information	[chars]Start [chars] session: initiator [node][dec] -- responder [node][dec]	This message documents the opening of an inspection session.\n\ The message is issued at the start of each inspected session\n\ and it records the source/destination addresses and ports.	firewall	"This message is for informational purposed only and can be used \n\ to collect the basic accounting for inspected sessions."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FW6ISS_AUDITRAL_START	6-Information	target=as-[chars][chars]Stat [chars] session: initiator [char]A[chars]:[node]	This message documents the opening of an inspection session.\n The message is issued at the start of each inspected session\n and it records the source/destination addresses and ports.	cpp-ucode	"This message is for informational purposed only and can be used \n"" to collect the basic accounting for inspected sessions."
FWALPOXPOXFWBCHHEID	3-Error	[dec]	FW Conditional Debugging registration failed.	cpp-ucode	LOG_STD_ACTION
FWALPOXPOXFWALDDPHI	3-Error	Data plane double initialization request.	Coding error - second attempt to initialize data plane.	cpp-ucode	LOG_STD_ACTION
FWALPOXPOXFWBDCBHEID	3-Error	FBD Not enabled.. cannot initialize data plane.	Mismatch in FBD capabilities between client and data plane. Coding error.	cpp-ucode	LOG_STD_ACTION
FWALPOXPOXFWALNHEID	3-Error	[dec]	Firewall initialization failed.	cpp-ucode	LOG_STD_ACTION
FWALPOXPOXFWALRCHHEID	3-Error	[chars] err: [dec]	FW VFR registration failed.	cpp-ucode	LOG_STD_ACTION
FWALPOXPOXFWALVHEID	3-Error	-	Increasing of ha retry pool failed.	cpp-ucode	LOG_STD_ACTION
FWALPOXPOXFWALVHEID	3-Error	-	Initialization of ha retry pool failed.	cpp-ucode	LOG_STD_ACTION
FWALPOXPOXFWALVHEID	3-Error	-	Increasing of host database pool failed.	cpp-ucode	LOG_STD_ACTION
FWALPOXPOXFWALVHEID	3-Error	-	Initialization of host database pool failed.	cpp-ucode	LOG_STD_ACTION
FWALPOXPOXFWALVHEID	3-Error	-	HSL add destination failed.	cpp-ucode	LOG_STD_ACTION
FWALPOXPOXFWALVHEID	3-Error	-	HSL bind failed.	cpp-ucode	LOG_STD_ACTION
FWALPOXPOXFWALVHEID	3-Error	[dec]	HSL bind tempalte failed at given index.	cpp-ucode	LOG_STD_ACTION
FWALPOXPOXFWALVHEID	3-Error	-	HSL creation failed.	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>FVALPROXOYSEBAAED</del>	3-Error	-	HSL enable failed.	cpp-ucode	LOG_STD_ACTION
<del>FVALPROXOYSEBBSAE</del>	3-Error	-	HSL modify destination failed.	cpp-ucode	LOG_STD_ACTION
<del>FVALPROXOYSEBDBAE</del>	3-Error	-	HSL modification failed.	cpp-ucode	LOG_STD_ACTION
<del>FVALPROXOYSEBDBAE</del>	3-Error	-	Increasing of ICMP Error pool failed.	cpp-ucode	LOG_STD_ACTION
<del>FVALPROXOYSEBDBAE</del>	3-Error	-	Initialization of ICMP Error control block pool failed.	cpp-ucode	LOG_STD_ACTION
<del>FVALPROXOYSEBDBAE</del>	3-Error	%u	IPC allocation failed.	cpp-ucode	LOG_STD_ACTION
<del>FVALPROXOYSEBDBAE</del>	3-Error	[dec]	FW IPC send failed to reply for event rate monitoring configuration change.	cpp-ucode	LOG_STD_ACTION
<del>FVALPROXOYSEBDBAE</del>	3-Error	[chars] [dec]	IPC message allocation for firewall failed.	cpp-ucode	LOG_STD_ACTION
<del>FVALPROXOYSEBDBAE</del>	3-Error	[dec]	IPC handler initialization failed.	cpp-ucode	LOG_STD_ACTION
<del>FVALPROXOYSEBDBAE</del>	3-Error	[dec]	IPC send failed to reply for firewall session clear.	cpp-ucode	LOG_STD_ACTION
<del>FVALPROXOYSEBDBAE</del>	3-Error	[dec]	IPC send failed to reply for firewall session debug.	cpp-ucode	LOG_STD_ACTION
<del>FVALPROXOYSEBDBAE</del>	3-Error	[node][chars]	IPC send failed.	cpp-ucode	LOG_STD_ACTION
<del>FVALPROXOYSEBDBAE</del>	3-Error	[chars] [dec]	IPC failed to reply for firewall initialization status.	cpp-ucode	LOG_STD_ACTION
<del>FVALPROXOYSEBDBAE</del>	3-Error	[dec]	IPC send failed to reply for firewall scb query.	cpp-ucode	LOG_STD_ACTION
<del>FVALPROXOYSEBDBAE</del>	3-Error	[dec]	IPC send failed to reply for firewall session query.	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FVALIPXIPXSEINFSAID	3-Error	[dec]	IPC send failed to reply for firewall status.	cpp-ucode	LOG_STD_ACTION
FVALIPXIPXSEMEXEIDE	3-Error	-	Increasing of session control block pool failed.	cpp-ucode	LOG_STD_ACTION
FVALIPXIPXSEMIVNIAID	3-Error	-	Initialization of session control block pool failed.	cpp-ucode	LOG_STD_ACTION
FVALIPXIPXITBNIAD	3-Error	[chars]	Failed to initialize table.	cpp-ucode	LOG_STD_ACTION
FVALIPXIPXITWMEIDE	3-Error	-	Increasing of teardown pool failed.	cpp-ucode	LOG_STD_ACTION
FVALIPXIPXITWVNIAD	3-Error	-	Initialization of teardown pool failed.	cpp-ucode	LOG_STD_ACTION
FVALIPXIPXILAHON	4-Warning	-	HSL logger already initialized	cpp-ucode	LOG_STD_ACTION
FVALIPXIPXIHINON	4-Warning	%u	HSL logger not initialized	cpp-ucode	LOG_STD_ACTION
FVALIPXIPXINALMSG	4-Warning	[hec]	Invalid IPC message subtype.	cpp-ucode	LOG_STD_ACTION
FVALIPXIPXINALMSTEN	4-Warning	[dec]:[dec] len [dec] flags 0x[hec] source [dec]	Invalid IPC message length.	cpp-ucode	LOG_STD_ACTION
FVALIPXIPXINUNFOIDE	4-Warning	[chars]: [dec]	Could not destroy chunk pool	cpp-ucode	LOG_STD_ACTION
FVALIPXIPXUNISSDS	4-Warning	in use [node]%u	Not all sessions freed	cpp-ucode	LOG_STD_ACTION
FVALIPXIPXWAGNADTME	3-Error	[chars] [dec]:[dec]	Invalid alg type passed from alg to firewall	cpp-ucode	LOG_STD_ACTION
FVALIPXIPXWAGNADTME	3-Error	[node]--%u	Client has not provided stats for the given match_index	cpp-ucode	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>FWALL3FW_NO_STATS</del>	3-Error	[dec]:[dec] zone pair [chars] class [chars]	Client has not provided stats for the given protocol:applicaton id	cpp-ucode	LOG_STD_ACTION
<del>FWALL3HANADMGRCD</del>	3-Error	invalid [chars] [hec] expected [hec] opcode [chars] [hec]	Standby received an invalid Firewall HA message	cpp-ucode	LOG_STD_ACTION
<del>FWALL3HANALDSTATE</del>	3-Error	[dec]	Invalid state	cpp-ucode	LOG_STD_ACTION
<del>FWALL7WNOALERTCAUSE</del>	7-Debug	[dec]	Unsupported alert cause	cpp-ucode	LOG_STD_ACTION
<del>FWALL7WNODROPCAUSE</del>	7-Debug	[dec]	Unsupported drop cause	cpp-ucode	LOG_STD_ACTION
<del>CRSECURITYCRPDMATCH</del>	4-Warning	Identification check failed for GBIC in port [dec]	The GBIC was identified as a Cisco GBIC but the system was unable to verify its identity	firmware	"Check to see if the Cisco IOS software running on the system supports " "the GBIC. If the GBIC is newer a system software upgrade might be " "required. Otherwise verify that the GBIC was obtained from Cisco or " "from a supported vendor."
<del>CRSECURITYCRPDMANUFACTURER</del>	4-Warning	GBIC in port [dec] manufactured by an unrecognized vendor	The GBIC was identified as a Cisco GBIC but the system was unable to match its manufacturer with one on the known list of Cisco GBIC vendors	firmware	"Check to see if the Cisco IOS software running on the system supports " "the GBIC. If the GBIC is newer a system software upgrade might be " "required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CR_SECURITY_PORT_CRC_ERR</del>	4-Warning	GBIC in port [dec] has bad crc	The GBIC was identified as a Cisco GBIC but it does not have valid CRC in the EEPROM data.	firmware	"Check to see if the Cisco IOS software running on the system supports "the GBIC. If the GBIC is newer a system software upgrade might be "required. Even if the GBIC is unrecognized by the system the GBIC "may still operate properly but might have limited functionality."
<del>CR_SECURITY_QBID_MISMATCH</del>	3-Error	GBIC interface [dec]/[dec] is a duplicate of GBIC interface [dec]/[dec]	The GBIC was identified as a Cisco GBIC but its vendor ID and serial number match that of another interface on the system.	firmware	"Cisco GBICs are assigned unique serial numbers. Verify that the GBIC "was obtained from Cisco or a supported vendor"
<del>CR_SECURITY_QBID_MISMATCH</del>	4-Warning	GBIC interface [dec]/[dec] has the same serial number as another GBIC interface	The GBIC was identified as a Cisco GBIC but its serial number matches that of another interface on the system.	firmware	"Cisco GBICs are assigned unique serial numbers. Verify that the GBIC "was obtained from Cisco or a supported vendor"
<del>CR_SECURITY_EEPROM_CRC_ERR</del>	4-Warning	EEPROM checksum error for GBIC in [chars]	The GBIC in the port specified in the error message has invalid EEPROM data.	-	"Remove the GBIC from the specified port."
<del>CR_SECURITY_EEPROM_READ_ERR</del>	4-Warning	Error in reading GBIC serial ID in [chars]	Error when reading GBIC type from EEPROM	-	"Please remove GBIC from this Port"
<del>CR_SECURITY_EEPROM_SECURITY_ERR</del>	4-Warning	GBIC in [chars] failed security check	The GBIC in the port specified in the error message has invalid EEPROM data.	-	"Remove the GBIC from the specified port."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
GBICSECURITY4GBICNERR	4-Warning	Internal error occurred in setup for GBIC interface [chars]	The system could not allocate resources or had some other problem in the setup for the specified GBIC interface.	firmware	"Reload the system. If the problem persists " "contact TAC."
GBIC4CHECK_SUM_FAILED	4-Warning	GBIC EEPROM data check sum failed for GBIC interface [chars]	The GBIC was identified as a Cisco GBIC but the system was unable to read vendor-data information to verify its correctness.	firmware	"Remove and reinsert the GBIC. If it fails " "again in the same way the GBIC may be defective."
GBIC4CHECK_SUM_FAILED	4-Warning	GBIC EEPROM data check sum failed for GBIC interface [chars]	The GBIC was identified as a Cisco GBIC but the system was unable to read vendor-data information to verify its correctness.	firmware	"Remove and reinsert the GBIC. If it fails " "again in the same way the GBIC may be defective."
GBIC4NOREAD_VNAME	4-Warning	Unable to read vendor name for GBIC interface [chars]	The GBIC was identified as a Cisco GBIC but the system was unable to read the name of the GBIC's vendor.	firmware	"Remove and reinsert the GBIC. If it fails " "again in the same way the GBIC may be defective."
GBIC4NOREAD_VNAME	4-Warning	Unable to read vendor name for GBIC interface [chars]	The GBIC was identified as a Cisco GBIC but the system was unable to read the name of the GBIC's vendor.	firmware	"Remove and reinsert the GBIC. If it fails " "again in the same way the GBIC may be defective."
GBIC4NOREAD_VSDATA	4-Warning	Unable to read vendor-specific data for GBIC interface [chars]	The GBIC was identified as a Cisco GBIC but the system was unable to read identifying vendor-specific information to verify its authenticity.	firmware	"Remove and reinsert the GBIC. If it fails " "again in the same way the GBIC may be defective."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
GBIC4NOREAD_VSDATA	4-Warning	Unable to read vendor-specific data for GBIC interface [chars]	The GBIC was identified as a Cisco GBIC but the system was unable to read identifying vendor-specific information to verify its authenticity.	firmware	"Remove and reinsert the GBIC. If it fails " "again in the same way the GBIC may be defective."
GBIC4NOREAD_VSERNUM	4-Warning	Unable to read serial number for GBIC interface [chars]	The GBIC was identified as a Cisco GBIC but the system was unable to read the GBIC's serial number.	firmware	"Remove and reinsert the GBIC. If it fails " "again in the same way the GBIC may be defective."
GBIC4NOREAD_VSERNUM	4-Warning	Unable to read serial number for GBIC interface [chars]	The GBIC was identified as a Cisco GBIC but the system was unable to read the GBIC's serial number.	firmware	"Remove and reinsert the GBIC. If it fails " "again in the same way the GBIC may be defective."
GBIC4UNRECOGNIZED_EXTYPE	4-Warning	GBIC interface [chars] has unrecognized extended type	The GBIC was identified as a Cisco GBIC but the system does not recognize its reported extended type code.	firmware	"Check the list of supported GBICs for this version " "of the system software. An upgrade may be required " "for newer GBICs. Even if unrecognized the GBIC " "may still operate properly perhaps with limited " "functionality."
GBIC4UNRECOGNIZED_EXTYPE	4-Warning	GBIC interface [chars] has unrecognized extended type	The GBIC was identified as a Cisco GBIC but the system does not recognize its reported extended type code.	firmware	"Check the list of supported GBICs for this version " "of the system software. An upgrade may be required " "for newer GBICs. Even if unrecognized the GBIC " "may still operate properly perhaps with limited " "functionality."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
GBIC4XCVR_INTERR	4-Warning	Internal error occurred in setup for GBIC interface [chars]	The system could not allocate resources or had some other problem in the setup for the specified GBIC interface.	firmware	"Reload the system. If the problem persists " "contact TAC."
GBIC4XCVR_INTERR	4-Warning	Internal error occurred in setup for GBIC interface [chars]	The system could not allocate resources or had some other problem in the setup for the specified GBIC interface.	firmware	"Reload the system. If the problem persists " "contact TAC."
<del>GBIC5MODULE_UNKNOWN</del>	6-Information	Unrecognizable GBIC found in [chars] module mask 0x[node]x	The GBIC presented data to the system which did not correctly identify the type of the GBIC. It will be handled as a 'generic' GBIC.	firmware	"If the GBIC fails to become operational " "carefully reinsert it in the slot. If it " "continues to fail after reinsertion " "the GBIC may be defective or incompatible " "with the switch."
<del>GBIC5MODULE_UNKNOWN</del>	6-Information	Unrecognizable GBIC found in [chars] module mask 0x[node]x	The GBIC presented data to the system which did not correctly identify the type of the GBIC. It will be handled as a 'generic' GBIC.	firmware	"If the GBIC fails to become operational " "carefully reinsert it in the slot. If it " "continues to fail after reinsertion " "the GBIC may be defective or incompatible " "with the switch."
<del>GBIC5SERIAL_DATA</del>	6-Information	Unrecognizable GBIC found in [chars] serial data 0x[node]x	The GBIC presented data to the system which did not correctly identify the type of the GBIC. It will be handled as a 'generic' GBIC.	firmware	"If the GBIC fails to become operational " "carefully reinsert it in the slot. If it " "continues to fail after reinsertion " "the GBIC may be defective or incompatible " "with the switch."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
GBICHSERRALN_DVA	6-Information	Unrecognizable GBIC found in [chars] serial data 0x[node]x	The GBIC presented data to the system which did not correctly identify the type of the GBIC. It will be handled as a 'generic' GBIC.	firmware	"If the GBIC fails to become operational " "carefully reinsert it in the slot. If it " "continues to fail after reinsertion " "the GBIC may be defective or incompatible " "with the switch."
GDOHGDOLACE_DENY	1-Alert	A Group Member ACL policy containing deny was attempted. This is not supported.	A Group Member ACL policy containing deny was attempted. This is not supported.	ipsec-getvpn	LOG_STD_ACTION
GDOHGDOLACE_DENY	1-Alert	A Group Member ACL policy containing deny was attempted. This is not supported.	A Group Member ACL policy containing deny was attempted. This is not supported.	ipsec-getvpn	LOG_STD_ACTION
GDOHGDOLACL_NUM	1-Alert	The ACL has too many entries.\n GDOI will honor only the first 100 ACL entries specified.	The ACL has too many entries. GDOI will honor only the first 100 ACL entries specified.	ipsec-getvpn	LOG_STD_ACTION
GDOHGDOLACL_NUM	1-Alert	The ACL has too many entries.\n GDOI will honor only the first 100 ACL entries specified.	The ACL has too many entries. GDOI will honor only the first 100 ACL entries specified.	ipsec-getvpn	LOG_STD_ACTION
GDOHKS_NO_RSA_KEYS	1-Alert	RSA Key - [chars] : Not found Required for group [chars]	Rsa Keys were not found in Key Server and they are required for signing and verifying rekey messages	ipsec-getvpn	"Contact the Key Server's administrator and ask him to do create" " the RSA Key pair"
GDOHKS_NO_RSA_KEYS	1-Alert	RSA Key - [chars] : Not found Required for group [chars]	Rsa Keys were not found in Key Server and they are required for signing and verifying rekey messages	ipsec-getvpn	"Contact the Key Server's administrator and ask him to do create" " the RSA Key pair"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CDU</del> UNAUTHORIDENITY	1-Alert	Group [chars] received registration from unauthorized identity: [chars]	The registration request was dropped because the requesting device was not authorized to join the group.	ipsec-getvpn	LOG_STD_ACTION
<del>CDU</del> UNAUTHORIDENITY	1-Alert	Group [chars] received registration from unauthorized identity: [chars]	The registration request was dropped because the requesting device was not authorized to join the group.	ipsec-getvpn	LOG_STD_ACTION
<del>CDU</del> UNAUTHORIDADDR	1-Alert	Group [chars] received registration from unauthorized ip address: [chars]	The registration request was dropped because the requesting device was not authorized to join the group.	ipsec-getvpn	LOG_STD_ACTION
<del>CDU</del> UNAUTHORIDADDR	1-Alert	Group [chars] received registration from unauthorized ip address: [chars]	The registration request was dropped because the requesting device was not authorized to join the group.	ipsec-getvpn	LOG_STD_ACTION
<del>CDU</del> UNREGISTERINTERFACE	1-Alert	Group [chars] received registration from unregistered interface.	Receiving registration from unregistered interface. Stop processing it.	ipsec-getvpn	LOG_STD_ACTION
<del>CDU</del> UNREGISTERINTERFACE	1-Alert	Group [chars] received registration from unregistered interface.	Receiving registration from unregistered interface. Stop processing it.	ipsec-getvpn	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>COOP_MINOR_MISMATCH</del>	2-Critical	COOP-KS Minor version mismatch in group [chars]. My COOP version is [dec].[dec].[dec] peer [chars] has version [dec].[dec].[dec]. Upgrade [chars] [chars] to COOP version [dec].[dec].[dec] to prevent COOP outage.	Coop KS has different minor version.	ipsec-getvpn	"show crypto gdoi ks coop"
<del>COOP_MINOR_MISMATCH</del>	2-Critical	COOP-KS Minor version mismatch in group [chars]. My COOP version is [dec].[dec].[dec] peer [chars] has version [dec].[dec].[dec]. Upgrade [chars] [chars] to COOP version [dec].[dec].[dec] to prevent COOP outage.	Coop KS has different minor version.	ipsec-getvpn	"show crypto gdoi ks coop"
<del>COOP_ANNSQFAURE</del>	3-Error	COOP Ann msg seq check failed for group [chars] ann seq# [node]sess seq# %u	COOP Ann msg seq check failed	ipsec-getvpn	"Contact Administrator"
<del>COOP_ANNSQFAURE</del>	3-Error	COOP Ann msg seq check failed for group [chars] ann seq# [node]sess seq# %u	COOP Ann msg seq check failed	ipsec-getvpn	"Contact Administrator"
<del>COOP_CONFIG_MISMATCH</del>	3-Error	WARNING: Group [chars] [chars] configuration between Primary KS and Secondary KS are mismatched	The configuration between Primary KS and Secondary KS are mismatched	ipsec-getvpn	"Contact the Key Sever's administrator"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>COOPCONG_MISMATCH</del>	3-Error	WARNING: Group [chars] [chars] configuration between Primary KS and Secondary KS are mismatched	The configuration between Primary KS and Secondary KS are mismatched	ipsec-getvpn	"Contact the Key Sever's administrator"
<del>COOPKSANCIINDROE</del>	3-Error	Coop KS in group [chars] has a configured IKEv2 profile '[chars]' that doesn't exist. The COOP will not come up until this error is fixed.	The KS COOP coniguration redundancy ikve2-profile specifies a profile that doesn't exist. The COOP will not come up.	ipsec-getvpn	LOG_STD_ACTION
<del>COOPKSANCIINDROE</del>	3-Error	Coop KS in group [chars] has a configured IKEv2 profile '[chars]' that doesn't exist. The COOP will not come up until this error is fixed.	The KS COOP coniguration redundancy ikve2-profile specifies a profile that doesn't exist. The COOP will not come up.	ipsec-getvpn	LOG_STD_ACTION
<del>COOPSNOWLIMITREACH</del>	3-Error	The COOP KS has reached its window limit for the peer addresses local [chars] remote [chars]. This is due to connectivity issues between the key servers in question.	The COOP KS running over IKEv2 has a limit to the number of pending messages that can be sent. This limit has been reached which is an indication that there is a connectivity issue between the key servers	ipsec-getvpn	LOG_STD_ACTION
<del>COOPSNOWLIMITREACH</del>	3-Error	The COOP KS has reached its window limit for the peer addresses local [chars] remote [chars]. This is due to connectivity issues between the key servers in question.	The COOP KS running over IKEv2 has a limit to the number of pending messages that can be sent. This limit has been reached which is an indication that there is a connectivity issue between the key servers	ipsec-getvpn	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>COOPKSA_MNCRDRESA</del>	3-Error	The COOP KS has too many groups sharing the same IKE SA for the peer addresses local [chars] remote [chars]. Connectivity could be compromised. Please reduce to [dec].	There is a limit to the number of COOP KS groups that can share the. same IKE SA. This can lead to intermittent connectivity for the COOP KS in congested networks	ipsec-getvpn	LOG_STD_ACTION
<del>COOPKSA_MNCRDRESA</del>	3-Error	The COOP KS has too many groups sharing the same IKE SA for the peer addresses local [chars] remote [chars]. Connectivity could be compromised. Please reduce to [dec].	There is a limit to the number of COOP KS groups that can share the. same IKE SA. This can lead to intermittent connectivity for the COOP KS in congested networks	ipsec-getvpn	LOG_STD_ACTION
COOPKSA_UNREACH	3-Error	Cooperative KS [chars] Unreachable in group [chars]. IKE SA Status = [chars]	The reachability between the configugred cooperative key servers is lost. Some might consider this a hostile event.	ipsec-getvpn	"Contach the Administrators of the configured key servers."
COOPKSA_UNREACH	3-Error	Cooperative KS [chars] Unreachable in group [chars]. IKE SA Status = [chars]	The reachability between the configugred cooperative key servers is lost. Some might consider this a hostile event.	ipsec-getvpn	"Contach the Administrators of the configured key servers."
COOPKSA_OVERLAP	3-Error	Overlapping KS Sender Identifiers KSSID {[chars]}	Another COOP-KS peer in the group has been configured with a KSSID value that is the same as one configured on this KS. GM registration is blocked as a result until the overlap is fixed.	ipsec-getvpn	"Check the configured KSSIDs for all COOP-KS peers by issuing "

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>COOP_KSSD_OVERLAP</del>	3-Error	Overlapping KS Sender Identifiers KSSID {[chars]}	Another COOP-KS peer in the group has been configured with a KSSID value that is the same as one configured on this KS. GM registration is blocked as a result until the overlap is fixed.	ipsec-getvpn	"Check the configured KSSIDs for all COOP-KS peers by issuing "
<del>COOP_LIMIT_REACHED</del>	3-Error	Peer [chars] has reached COOP limit of maximum number of gms. COOP GM database sync fails. Upgrade to COOP version [dec].[dec].[dec] and above	COOP-KS has a non-compatible peer.	ipsec-getvpn	"Check COOP version compatibility on peer KS"
<del>COOP_LIMIT_REACHED</del>	3-Error	Peer [chars] has reached COOP limit of maximum number of gms. COOP GM database sync fails. Upgrade to COOP version [dec].[dec].[dec] and above	COOP-KS has a non-compatible peer.	ipsec-getvpn	"Check COOP version compatibility on peer KS"
<del>COOP_MAJOR_VERSION_MISMATCH</del>	3-Error	COOP-KS Major Version mismatch in group [chars]. My version is [dec].[dec].[dec] peer [chars] has version [dec].[dec].[dec]	COOP-KS has a non-compatible major version.	ipsec-getvpn	"Check COOP version compatibility on KS"
<del>COOP_MAJOR_VERSION_MISMATCH</del>	3-Error	COOP-KS Major Version mismatch in group [chars]. My version is [dec].[dec].[dec] peer [chars] has version [dec].[dec].[dec]	COOP-KS has a non-compatible major version.	ipsec-getvpn	"Check COOP version compatibility on KS"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
GDDKCOIPACKETDROHD	3-Error	Announcement message dropped due to packet size [dec] bytes.	Hard limit set on the driver buffer size prevents sending packets of this size or bigger	ipsec-getvpn	"Informational message"
GDDKCOIPACKETDROHD	3-Error	Announcement message dropped due to packet size [dec] bytes.	Hard limit set on the driver buffer size prevents sending packets of this size or bigger	ipsec-getvpn	"Informational message"
GDOBGDOIACL_RANGE	3-Error	The ACL [chars] contains port range which is NOT supported. WARNING: No TEK policy will be created.	GDOI does not support port range in the ACL policy.	ipsec-getvpn	LOG_STD_ACTION
GDOBGDOIACL_RANGE	3-Error	The ACL [chars] contains port range which is NOT supported. WARNING: No TEK policy will be created.	GDOI does not support port range in the ACL policy.	ipsec-getvpn	LOG_STD_ACTION
GDOBGDOI_REKEY_FAILURE	3-Error	Processing of REKEY payloads failed on GM [chars] in the group [chars] with peer at [chars]	During GDOI rekey the payload parsing failed on this GM from the Key Server.	ipsec-getvpn	"Contact the Group member's administrator."
GDOBGDOI_REKEY_FAILURE	3-Error	Processing of REKEY payloads failed on GM [chars] in the group [chars] with peer at [chars]	During GDOI rekey the payload parsing failed on this GM from the Key Server.	ipsec-getvpn	"Contact the Group member's administrator."
GDDKDOI_REKEY_SEQ_FAILURE	3-Error	Failed to process rekey seq # [node] in seq payload for group [chars] last seq # %u	During GDOI rekey the seq payload parsing failed on this GM from the Key Server.	ipsec-getvpn	"Contact the Group member's administrator."
GDDKDOI_REKEY_SEQ_FAILURE	3-Error	Failed to process rekey seq # [node] in seq payload for group [chars] last seq # %u	During GDOI rekey the seq payload parsing failed on this GM from the Key Server.	ipsec-getvpn	"Contact the Group member's administrator."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
GDOI3GM_ACL_PERMIT	3-Error	GM doesn't support permit configured under local access-list. Traffic from [chars] to [chars] will be dropped.	GM can only support ACL for deny. Any traffic matching the permit entry will be dropped.	ipsec-getvpn	"Remove the permit entry from the ACL used by GDOI crypto map"
GDOI3GM_ACL_PERMIT	3-Error	GM doesn't support permit configured under local access-list. Traffic from [chars] to [chars] will be dropped.	GM can only support ACL for deny. Any traffic matching the permit entry will be dropped.	ipsec-getvpn	"Remove the permit entry from the ACL used by GDOI crypto map"
GDOI3GM_INIT_FAIL	3-Error	GDOI GM Process has failed to initialise	GDOI Group Member process has failed to initialise on this Network Element	ipsec-getvpn	-
GDOI3GM_INIT_FAIL	3-Error	GDOI GM Process has failed to initialise	GDOI Group Member process has failed to initialise on this Network Element	ipsec-getvpn	-
GDOI3GM_INIT_FAIL	3-Error	Registration: incomplete config for group [chars]	Registration can not be completed since the GDOI group configuration may be missing the group id server id or both	ipsec-getvpn	"Contact the Group member's administrator."
GDOI3GM_INIT_FAIL	3-Error	Registration: incomplete config for group [chars]	Registration can not be completed since the GDOI group configuration may be missing the group id server id or both	ipsec-getvpn	"Contact the Group member's administrator."
GDOI3GM_INIT_FAIL	3-Error	GETVPN group-member does not support coexistence of IPD3P and Cisco-metadata features	GETVPN group-member does not support the enabling of IPD3P and Cisco-metadata features e.g TBAR-PST SGT at the	ipsec-getvpn	"Contact the Administrators to correct the key server policy."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>GETVPN</del>	3-Error	GETVPN group-member does not support coexistence of IPD3P and Cisco-metadata features	GETVPN group-member does not support the enabling of IPD3P and Cisco-metadata features e.g TBAR-PST SGT at the	ipsec-getvpn	"Contact the Administrators to correct the key server policy."
<del>GETVPN</del>	3-Error	GETVPN group-member does not support IP-D3P for IPv6.	GETVPN group-member does not support IP-D3P for IPv6.	ipsec-getvpn	"Contact the Administrators to correct the key server policy."
<del>GETVPN</del>	3-Error	GETVPN group-member does not support IP-D3P for IPv6.	GETVPN group-member does not support IP-D3P for IPv6.	ipsec-getvpn	"Contact the Administrators to correct the key server policy."
<del>GETVPN</del>	3-Error	GETVPN group-member does not support IPD3P transport mode	GETVPN group-member does not support IPD3P transport mode	ipsec-getvpn	"Contact the Administrators to correct the key server policy."
<del>GETVPN</del>	3-Error	GETVPN group-member does not support IPD3P transport mode	GETVPN group-member does not support IPD3P transport mode	ipsec-getvpn	"Contact the Administrators to correct the key server policy."
<del>GM</del>	3-Error	GM [node]registration rejected due to major version mismatch. GM must be using major version [dec] in order to be compatible with this KS	GM has a non-compatible major version.	ipsec-getvpn	"Check GDOI version compatibility on KS and GMs"
<del>GM</del>	3-Error	GM [node]registration rejected due to major version mismatch. GM must be using major version [dec] in order to be compatible with this KS	GM has a non-compatible major version.	ipsec-getvpn	"Check GDOI version compatibility on KS and GMs"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>GDOI</del> NOCRYPTENGINE	3-Error	No crypto engine is found due to lack of resource or unsupported feature requested	Failed to select a suitable crypto engine because requested packet path not available or requested feature not supported	ipsec-getvpn	"Check policy configured on KS"
<del>GDOI</del> NOCRYPTENGINE	3-Error	No crypto engine is found due to lack of resource or unsupported feature requested	Failed to select a suitable crypto engine because requested packet path not available or requested feature not supported	ipsec-getvpn	"Check policy configured on KS"
<del>GDOI</del> NOIPSEC_FLOWS	3-Error	IPSec FLOW limit possibly reached	Hardware Limitation for IPSec Flow limit Reached. Cannot create any more IPSec SAs	ipsec-getvpn	"Contact the Group member's administrator."
<del>GDOI</del> NOIPSEC_FLOWS	3-Error	IPSec FLOW limit possibly reached	Hardware Limitation for IPSec Flow limit Reached. Cannot create any more IPSec SAs	ipsec-getvpn	"Contact the Group member's administrator."
<del>GDOI</del> NOIPSEC_TRIGGER	3-Error	IPSEC triggering registration for group [chars] too frequently. Ignore the request as registartion has already been scheduled to occur in [dec] msec.	GM detects IPSEC triggering registration for the group too frequently. GDOI will ignore the request as registration has already been scheduled.	ipsec-getvpn	"Contact the Group member's administrator."
<del>GDOI</del> NOIPSEC_TRIGGER	3-Error	IPSEC triggering registration for group [chars] too frequently. Ignore the request as registartion has already been scheduled to occur in [dec] msec.	GM detects IPSEC triggering registration for the group too frequently. GDOI will ignore the request as registration has already been scheduled.	ipsec-getvpn	"Contact the Group member's administrator."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>GDOI-NYGM-CHERRSIDE</del>	3-Error	IPSEC triggering registration for group [chars] too frequently. Postpone the registration to occur in [dec] msec.	GM detects IPSEC triggering registration for the group too frequently. GDOI will rate-limit and postpone the registration.	ipsec-getvpn	"Contact the Group member's administrator."
<del>GDOI-NYGM-CHERRSIDE</del>	3-Error	IPSEC triggering registration for group [chars] too frequently. Postpone the registration to occur in [dec] msec.	GM detects IPSEC triggering registration for the group too frequently. GDOI will rate-limit and postpone the registration.	ipsec-getvpn	"Contact the Group member's administrator."
GDOI-3-KS_BAD_ID	3-Error	Registration: [chars] config mismatch between KS and the GM [node]in the group [chars].	During GDOI registration protocol a configuration mismatch between local key server and group member.	ipsec-getvpn	"Contact the Group member's administrator."
GDOI-3-KS_BAD_ID	3-Error	Registration: [chars] config mismatch between KS and the GM [node]in the group [chars].	During GDOI registration protocol a configuration mismatch between local key server and group member.	ipsec-getvpn	"Contact the Group member's administrator."
<del>GDOI-KS-BLACKHOLEACK</del>	3-Error	KS blackholing GM [node]in group [chars].	Key server has reached a condition of blackholing messages from GM Some might consider this a hostile event.	ipsec-getvpn	-
<del>GDOI-KS-BLACKHOLEACK</del>	3-Error	KS blackholing GM [node]in group [chars].	Key server has reached a condition of blackholing messages from GM Some might consider this a hostile event.	ipsec-getvpn	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
GDOBKS_GM_REVOKED	3-Error	Re-Key: GM [node]revoked by KS in the group [chars].	During Re-key protocol an unauthorized member tried to join a group. Some might consider this a hostile event.	ipsec-getvpn	"Contact the Key Server's administrator."
GDOBKS_GM_REVOKED	3-Error	Re-Key: GM [node]revoked by KS in the group [chars].	During Re-key protocol an unauthorized member tried to join a group. Some might consider this a hostile event.	ipsec-getvpn	"Contact the Key Server's administrator."
COOP_KS_MAJOR_VERSION_MISMATCH	3-Error	COOP-KS Major Version mismatch in group [chars]. My version is [dec].[dec].[dec] peer [chars] has version [dec].[dec].[dec]	COOP-KS has a non-compatible major version.	ipsec-getvpn	"Check GDOI version compatibility on KS"
COOP_KS_MAJOR_VERSION_MISMATCH	3-Error	COOP-KS Major Version mismatch in group [chars]. My version is [dec].[dec].[dec] peer [chars] has version [dec].[dec].[dec]	COOP-KS has a non-compatible major version.	ipsec-getvpn	"Check GDOI version compatibility on KS"
GDOBKS_NO_SIDS_AVAILABLE	3-Error	GMs for group [chars] need SIDs but this KS has no KS SIDs configured or no more SIDs available.	This KS has a counter-mode transform configured requiring SIDs and either has no KSSIDs configured or has run out of SIDs. Registering GMs will not be able to register successfully until more KSSIDs are configured on this KS.	ipsec-getvpn	"Check the configured KSSIDs for this KS by issuing "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>GD</del> KS_NOSD_AALALE	3-Error	GMs for group [chars] need SIDs but this KS has no KS SIDs configured or no more SIDs available.	This KS has a counter-mode transform configured requiring SIDs and either has no KSSIDs configured or has run out of SIDs. Registering GMs will not be able to register successfully until more KSSIDs are configured on this KS.	ipsec-getvpn	"Check the configured KSSIDs for this KS by issuing "
<del>GD</del> KEYAUTHMICHISEN	3-Error	Rejected [chars] change: using sig-hash algorithm [chars] requires an authentication key length of at least [node]bits [node]blocks in bytes	Using a sig-hash algorithm for rekeys requires that the RSA key modulus length for the rekey authentication be at least the length of the hash generated by the sig-hash algorithm plus some padding bytes. If the RSA key modulus length is not large enough the Key Server administrator needs to generate a new RSA key pair with a sufficient length.	ipsec-getvpn	"Contact the Key Server's administrator to re-generate the RSA " "key pair with at least the modulus length given in the syslog."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>GDOI_KGSAFRMCHSHST</del>	3-Error	Rejected [chars] change: using sig-hash algorithm [chars] requires an authentication key length of at least [node]bits [node]blocks in bytes	Using a sig-hash algorithm for rekeys requires that the RSA key modulus length for the rekey authentication be at least the length of the hash generated by the sig-hash algorithm plus some padding bytes. If the RSA key modulus length is not large enough the Key Server administrator needs to generate a new RSA key pair with a sufficient length.	ipsec-getvpn	"Contact the Key Server's administrator to re-generate the RSA " "key pair with at least the modulus length given in the syslog."
GDOBK_UNAUTHORIZED	3-Error	Registration: Unauthorized [node]tried to join the group [chars].	During GDOI registration protocol an unauthorized member tried to join a group Some might consider this a hostile event.	ipsec-getvpn	"Contact the Key Server's administrator."
GDOBK_UNAUTHORIZED	3-Error	Registration: Unauthorized [node]tried to join the group [chars].	During GDOI registration protocol an unauthorized member tried to join a group Some might consider this a hostile event.	ipsec-getvpn	"Contact the Key Server's administrator."
<del>GDOI_KGSNRAHRCR</del>	3-Error	PIP session with [chars] failed because of KGS Infra failure. Reason = [chars]	A Group Member has encountered a KGS Infra failure.	ipsec-getvpn	LOG_STD_ACTION
<del>GDOI_KGSNRAHRCR</del>	3-Error	PIP session with [chars] failed because of KGS Infra failure. Reason = [chars]	A Group Member has encountered a KGS Infra failure.	ipsec-getvpn	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CD</del> P2P_I <del>RM</del> CRA <del>E</del> IED	3-Error	Failed to install P2P rekey SA with peer [chars] in group [chars]	Installation of P2P Rekey SA with an existing peer has failed	ipsec-getvpn	"Check the status of all peers using the command " " 'show crypto gdoi gm p2p peers' and wait for PIP initiation between " "the failed peers. Traffic disruption may occur."
<del>CD</del> P2P_I <del>RM</del> CRA <del>E</del> IED	3-Error	Failed to install P2P rekey SA with peer [chars] in group [chars]	Installation of P2P Rekey SA with an existing peer has failed	ipsec-getvpn	"Check the status of all peers using the command " " 'show crypto gdoi gm p2p peers' and wait for PIP initiation between " "the failed peers. Traffic disruption may occur."
<del>CD</del> P_I <del>S</del> U <del>D</del> O_I <del>M</del> E <del>R</del> R <del>O</del> R	3-Error	An Anti-Replay check has failed for PIP in group [chars]: my_pseudotime = [chars] peer_pseudotime = [chars] replay_window = [node]d sec src_addr = [chars] dst_addr = [chars]	-	-	-
<del>CD</del> P_I <del>S</del> U <del>D</del> O_I <del>M</del> E <del>R</del> R <del>O</del> R	3-Error	An Anti-Replay check has failed for PIP in group [chars]: my_pseudotime = [chars] peer_pseudotime = [chars] replay_window = [node]d sec src_addr = [chars] dst_addr = [chars]	-	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>GDPS</del> PSEUDO_TIME_LARGE	3-Error	Pseudotime difference between KS [dec] sec and GM [dec] sec	A Group member has received pseudotime which has large difference as compared to own pseudotime	ipsec-getvpn	-
<del>GDPS</del> PSEUDO_TIME_LARGE	3-Error	Pseudotime difference between KS [dec] sec and GM [dec] sec	A Group member has received pseudotime which has large difference as compared to own pseudotime	ipsec-getvpn	-
<del>GDPS</del> PSEUDO_TIME_TOO_OLD	3-Error	Rekey received in group [chars] is too old and fail PST check: my_pst is [dec] sec peer_pst is [dec] sec allowable_skew is [dec] sec	A Group member has received pseudotime which has large difference as compared to own pseudotime	ipsec-getvpn	-
<del>GDPS</del> PSEUDO_TIME_TOO_OLD	3-Error	Rekey received in group [chars] is too old and fail PST check: my_pst is [dec] sec peer_pst is [dec] sec allowable_skew is [dec] sec	A Group member has received pseudotime which has large difference as compared to own pseudotime	ipsec-getvpn	-
<del>GDPS</del> KEK_INSTALL_FAILED	3-Error	Failed to install KEK SA	KEK SA instalation has failed	ipsec-getvpn	"Informational message."
<del>GDPS</del> KEK_INSTALL_FAILED	3-Error	Failed to install KEK SA	KEK SA instalation has failed	ipsec-getvpn	"Informational message."
<del>GDPS</del> UNEXPECTED_SIGNATURE_KEY	3-Error	Unexpected Signature Key detected: freeing it	Unexpected Signature Key found: freeing the signature key	ipsec-getvpn	"Informational message"
<del>GDPS</del> UNEXPECTED_SIGNATURE_KEY	3-Error	Unexpected Signature Key detected: freeing it	Unexpected Signature Key found: freeing the signature key	ipsec-getvpn	"Informational message"
<del>GDPS</del> UNEXPECTED_TEK_PROTOCOL	3-Error	Unexpected TEK Protocol : [dec]	Unexpected TEK PROTOCOL	ipsec-getvpn	"Informational message"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>COOP_KS_REDEKPROT</del>	3-Error	Unexpected TEK Protocol : [dec]	Unexpected TEK PROTOCOL	ipsec-getvpn	"Informational message"
<del>COOP_KS_CHECKMISMATCH</del>	4-Warning	Coop KS [chars] in group [chars] received Checkpoint Mismatch message.	The KS COOP had received a checkpoint mismatch from a KS COOP peer	ipsec-getvpn	LOG_STD_ACTION
<del>COOP_KS_CHECKMISMATCH</del>	4-Warning	Coop KS [chars] in group [chars] received Checkpoint Mismatch message.	The KS COOP had received a checkpoint mismatch from a KS COOP peer	ipsec-getvpn	LOG_STD_ACTION
<del>COOP_KS_CKM_INCOMPATIBLE</del>	4-Warning	Found incompatible COOP-KS that cannot support CKM in group [chars]. Please check 'show crypto gdoi feature ckm'and upgrade the incompatible KS immediately.	Found incompatible COOP-KS that cannot support CKM in the group. Network administrator should check 'show crypto gdoi feature ckm'and upgrade the incompatible KS immediately	-	LOG_STD_ACTION
<del>COOP_KS_CKM_INCOMPATIBLE</del>	4-Warning	Found incompatible COOP-KS that cannot support CKM in group [chars]. Please check 'show crypto gdoi feature ckm'and upgrade the incompatible KS immediately.	Found incompatible COOP-KS that cannot support CKM in the group. Network administrator should check 'show crypto gdoi feature ckm'and upgrade the incompatible KS immediately	-	LOG_STD_ACTION
<del>COOP_KS_REBY_FAILED</del>	4-Warning	Coop KS [chars] in group [chars] session Reassembly failed in TransID %u	The KS COOP had an error reassembling a packet from a peer KS	ipsec-getvpn	LOG_STD_ACTION
<del>COOP_KS_REBY_FAILED</del>	4-Warning	Coop KS [chars] in group [chars] session Reassembly failed in TransID %u	The KS COOP had an error reassembling a packet from a peer KS	ipsec-getvpn	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>GD04</del> COOP_KS_UNAUJH	4-Warning	Contact from unauthorized KS [chars] in group [chars] at local address [chars] Possible MISCONFIG of peer/local address	-	-	-
<del>GD04</del> COOP_KS_UNAUJH	4-Warning	Contact from unauthorized KS [chars] in group [chars] at local address [chars] Possible MISCONFIG of peer/local address	-	-	-
<del>GD04</del> ANN_COSEN_TBR	4-Warning	COOP_KS ANN received from [chars] in group [chars] has inconsistent TBAR setting inconsistent than mine	The KS has received an ANN msg from a secondary KS in which the timestamp is too old	ipsec-getvpn	-
<del>GD04</del> ANN_COSEN_TBR	4-Warning	COOP_KS ANN received from [chars] in group [chars] has inconsistent TBAR setting inconsistent than mine	The KS has received an ANN msg from a secondary KS in which the timestamp is too old	ipsec-getvpn	-
<del>GD04</del> ANN_MSA_PLACE	4-Warning	COOP_KS ANN received from KS [chars] in group [chars] has PST bigger than myself. Adjust to new PST:\n my_old_pst is [node]u sec peer_pst is [node]u sec	-	ipsec-getvpn	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>COOP_ANN_MS_A</del> COOP_ANN_MS_A	4-Warning	COOP_KS ANN received from KS [chars] in group [chars] has PST bigger than myself. Adjust to new PST:\n my_old_pst is [node]u sec peer_pst is [node]u sec	-	ipsec-getvpn	-
<del>COOP_ANN_MS_A</del> COOP_ANN_MS_A	4-Warning	COOP_KS ANN received from KS [chars] in group [chars] has PST bigger than myself:\n my_pst is [node]u sec peer_pst is [node]u sec	-	ipsec-getvpn	-
<del>COOP_ANN_MS_A</del> COOP_ANN_MS_A	4-Warning	COOP_KS ANN received from KS [chars] in group [chars] has PST bigger than myself:\n my_pst is [node]u sec peer_pst is [node]u sec	-	ipsec-getvpn	-
<del>COOP_ANN_MS_A</del> COOP_ANN_MS_A	4-Warning	COOP_KS ANN from KS [chars] in group [chars] is too old and fail PST check:\n my_pst is [node]u sec peer_pst is [node]u sec allowable_skew is [dec] sec	The KS has received an ANN msg from a primary KS in which the timestamp is too old	ipsec-getvpn	-
<del>COOP_ANN_MS_A</del> COOP_ANN_MS_A	4-Warning	COOP_KS ANN from KS [chars] in group [chars] is too old and fail PST check:\n my_pst is [node]u sec peer_pst is [node]u sec allowable_skew is [dec] sec	The KS has received an ANN msg from a primary KS in which the timestamp is too old	ipsec-getvpn	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
GDOI4-GM_DELETE	4-Warning	GM [chars] deleted from group [chars].	A group member has been deleted in a group from Key Server	ipsec-getvpn	"Informational message"
GDOI4-GM_DELETE	4-Warning	GM [chars] deleted from group [chars].	A group member has been deleted in a group from Key Server	ipsec-getvpn	"Informational message"
GDOI4GM_HASH_FAIL	4-Warning	Registration: BadNo hash in message sent by the KS [node]	During GDOI registration protocol a message sent by the Key server has bad or no hash .	ipsec-getvpn	"Contact the Key Server's administrator."
GDOI4GM_HASH_FAIL	4-Warning	Registration: BadNo hash in message sent by the KS [node]	During GDOI registration protocol a message sent by the Key server has bad or no hash .	ipsec-getvpn	"Contact the Key Server's administrator."
<del>GDOI4GM_MINOR_MISMATCH</del>	4-Warning	GM [node]Minor Version mismatch. Use 'show crypto gdoi ks members' to see GM versions	GM has different minor version.	ipsec-getvpn	"show crypto gdoi ks members"
<del>GDOI4GM_MINOR_MISMATCH</del>	4-Warning	GM [node]Minor Version mismatch. Use 'show crypto gdoi ks members' to see GM versions	GM has different minor version.	ipsec-getvpn	"show crypto gdoi ks members"
GDOI4GMHSRE_REGSISR	4-Warning	Start PFS triggered re-registration to KS [chars] for group [chars] using address [chars] fvrf [chars] ivrf [chars]	Received PFS Rekey Hence re-registring to download new policy.	ipsec-getvpn	LOG_STD_ACTION
GDOI4GMHSRE_REGSISR	4-Warning	Start PFS triggered re-registration to KS [chars] for group [chars] using address [chars] fvrf [chars] ivrf [chars]	Received PFS Rekey Hence re-registring to download new policy.	ipsec-getvpn	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>GDOI4GM_RE_REGISTER</del>	4-Warning	The IPsec SA created for group [chars] may have expired/been cleared or didn't go through. Re-register to KS.	The IPsec SA created for one group may have expired/been cleared or didn't go through need to re-register to KS.	ipsec-getvpn	LOG_STD_ACTION
<del>GDOI4GM_RE_REGISTER</del>	4-Warning	The IPsec SA created for group [chars] may have expired/been cleared or didn't go through. Re-register to KS.	The IPsec SA created for one group may have expired/been cleared or didn't go through need to re-register to KS.	ipsec-getvpn	LOG_STD_ACTION
<del>GDMRCM/RCPAD</del>	4-Warning	GM recovery re-registration for group [chars] will start in a randomly chosen period of [dec] sec	GM recovery feature detects dataplane error and will re-register to KS to refresh keys and policy	-	"Informational message."
<del>GDMRCM/RCPAD</del>	4-Warning	GM recovery re-registration for group [chars] will start in a randomly chosen period of [dec] sec	GM recovery feature detects dataplane error and will re-register to KS to refresh keys and policy	-	"Informational message."
<del>GDMRCM/RCPAD</del>	4-Warning	Detects data error in group [chars] but the previous recovery/rekey has occurred within the last recovery-check interval. Postpone recovery registration to start in [dec] sec	GM recovery feature detects dataplane error and will re-register to KS to refresh keys and policy	-	"Informational message."
<del>GDMRCM/RCPAD</del>	4-Warning	Detects data error in group [chars] but the previous recovery/rekey has occurred within the last recovery-check interval. Postpone recovery registration to start in [dec] sec	GM recovery feature detects dataplane error and will re-register to KS to refresh keys and policy	-	"Informational message."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>GDD4GM_RECV_DELETE</del>	4-Warning	GM received delete-msg from KS in group [chars]. TEKs lifetime are reduced and re-registration will start before SA expiry	A messages sent by the KS to delete the GM has been received.	ipsec-getvpn	"Informational message."
<del>GDD4GM_RECV_DELETE</del>	4-Warning	GM received delete-msg from KS in group [chars]. TEKs lifetime are reduced and re-registration will start before SA expiry	A messages sent by the KS to delete the GM has been received.	ipsec-getvpn	"Informational message."
<del>GDD4GM_RECV_DELETE</del>	4-Warning	GM receive REMOVAL-NOW in group [chars] to cleanup downloaded policy now. Re-registration will start in a randomly chosen period of [dec] sec	A messages sent by the KS to delete the GM has been received.	ipsec-getvpn	"Informational message."
<del>GDD4GM_RECV_DELETE</del>	4-Warning	GM receive REMOVAL-NOW in group [chars] to cleanup downloaded policy now. Re-registration will start in a randomly chosen period of [dec] sec	A messages sent by the KS to delete the GM has been received.	ipsec-getvpn	"Informational message."
<del>GDD4GM_RECV_POLICY_REPLACE_NOW</del>	4-Warning	GM received policy replace now rekey from KS in group [chars].	A messages sent by the KS to immediately replace SAs policies on the GM has been received.	ipsec-getvpn	"Informational message."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>GDOI</del> GM_RECV_POLICY_REPLACE_NOW	4-Warning	GM received policy replace now rekey from KS in group [chars].	A messages sent by the KS to immediately replace SAs policies on the GM has been received.	ipsec-getvpn	"Informational message."
<del>GDOI</del> GM_RECV_REAUTH	4-Warning	GM received Re-auth-msg from KS in group [chars]. re-registration will start before SA expiry	A message sent by the KS to have a GM re-auth has been received.	ipsec-getvpn	"Informational message."
<del>GDOI</del> GM_RECV_REAUTH	4-Warning	GM received Re-auth-msg from KS in group [chars]. re-registration will start before SA expiry	A message sent by the KS to have a GM re-auth has been received.	ipsec-getvpn	"Informational message."
<del>GDOI</del> GM_RECV_IN_SA_PAYLOAD	4-Warning	Registration: Policy in SA payload sent by KS [node] rejected by GM in the group [chars] reason [chars].	During GDOI registration protocol a proposal sent by the key server was refused by the local group member.	ipsec-getvpn	"Contact the Key server's administrator."
<del>GDOI</del> GM_RECV_IN_SA_PAYLOAD	4-Warning	Registration: Policy in SA payload sent by KS [node] rejected by GM in the group [chars] reason [chars].	During GDOI registration protocol a proposal sent by the key server was refused by the local group member.	ipsec-getvpn	"Contact the Key server's administrator."
<del>GDOI</del> GM_RECV_KEY_NOT_RECV	4-Warning	GM did not receive rekey from KS [node]in group [chars].	GM has not received a rekey message from a key server in a group Currently Unimplemented.	ipsec-getvpn	"Informational message"
<del>GDOI</del> GM_RECV_KEY_NOT_RECV	4-Warning	GM did not receive rekey from KS [node]in group [chars].	GM has not received a rekey message from a key server in a group Currently Unimplemented.	ipsec-getvpn	"Informational message"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>GM_SATRACK_SHICHROR</del>	4-Warning	Group [chars] encountered error in setting EOT object ID [dec] to state [chars].	GM SA TRACK state change occur but fail to update EOT object ID accordingly	-	"Informational message. Check to make sure the EOT " "object ID is configured properly"
<del>GM_SATRACK_SHICHROR</del>	4-Warning	Group [chars] encountered error in setting EOT object ID [dec] to state [chars].	GM SA TRACK state change occur but fail to update EOT object ID accordingly	-	"Informational message. Check to make sure the EOT " "object ID is configured properly"
<del>GDKSMRHCSSA_PMOD</del>	4-Warning	Registration: GM [node]rejected a policy in the SA proposal sent by KS in the group [chars].	During GDOI registration protocol a proposal sent by the key server was refused by the group member.	ipsec-getvpn	"Contact the Group member's administrator."
<del>GDKSMRHCSSA_PMOD</del>	4-Warning	Registration: GM [node]rejected a policy in the SA proposal sent by KS in the group [chars].	During GDOI registration protocol a proposal sent by the key server was refused by the group member.	ipsec-getvpn	"Contact the Group member's administrator."
GDOI4KS_HASH_FAIL	4-Warning	Registration: BadNo Hash in Message sent by the GM [node]	During GDOI registration protocol a message sent by the Group member has bad or no hash .	ipsec-getvpn	"Contact the Group member's administrator."
GDOI4KS_HASH_FAIL	4-Warning	Registration: BadNo Hash in Message sent by the GM [node]	During GDOI registration protocol a message sent by the Group member has bad or no hash .	ipsec-getvpn	"Contact the Group member's administrator."
<del>GDKSMRHCSSA_PMOD</del>	4-Warning	COOP-KS Minor Version mismatch in group [chars]. My version is [dec].[dec].[dec] peer [chars] has version [dec].[dec].[dec]	Coop KS has different minor version.	ipsec-getvpn	"show crypto gdoi ks coop"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>GDOI4KS_MINOR_MISMATCH</del>	4-Warning	COOP-KS Minor Version mismatch in group [chars]. My version is [dec].[dec].[dec] peer [chars] has version [dec].[dec].[dec]	Coop KS has different minor version.	ipsec-getvpn	"show crypto gdoi ks coop"
GDOI4KS_UN SOL_ACK	4-Warning	KS received unsolicited ACK from GM [node]in group [chars].	Key server has received an unsolicited ACK from a past GM or is under a DOS attack. Some might consider this a hostile event.	ipsec-getvpn	-
GDOI4KS_UN SOL_ACK	4-Warning	KS received unsolicited ACK from GM [node]in group [chars].	Key server has received an unsolicited ACK from a past GM or is under a DOS attack. Some might consider this a hostile event.	ipsec-getvpn	-
GDOI4LKH_GM_DELETE	4-Warning	GM [node]deleted from LKH in group [chars].	A Group member has been deleted in a group from LKH	ipsec-getvpn	-
GDOI4LKH_GM_DELETE	4-Warning	GM [node]deleted from LKH in group [chars].	A Group member has been deleted in a group from LKH	ipsec-getvpn	-
<del>GDOI4NEW_GM_VERSION</del>	4-Warning	WARNING: GM [chars] registers to group [chars] with newer GDOI version than KS. Please check 'show crypto gdoi ks members' and 'show crypto gdoi feature' to ensure all GMs can support the GETVPN features enabled.	-	ipsec-getvpn	"Check GMs can support all GETVPN features enabled " "in KS. Also check output of 'show crypto gdoi " "feature' and 'debug crypto gdoi ks infra detail' " "note: high volume of debugs. "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IPSEC</del> GMES	4-Warning	WARNING: GM [chars] registers to group [chars] with newer GDOI version than KS. Please check 'show crypto gdoi ks members' and 'show crypto gdoi feature' to ensure all GMs can support the GETVPN features enabled.	-	ipsec-getvpn	"Check GMs can support all GETVPN features enabled " "in KS. Also check output of 'show crypto gdoi " "feature' and 'debug crypto gdoi ks infra detail' " "note: high volume of debugs. "
<del>IPSEC</del> CKM	4-Warning	Reject registration of GM [node]in group [chars] as it has CKM enabled but this secondaryKS has not sync up all KGS params yet	Reject GM registration because this is a secondaryKS and it has not received KGS seed and rekey-epoch from primaryKS yet	-	LOG_STD_ACTION
<del>IPSEC</del> CKM	4-Warning	Reject registration of GM [node]in group [chars] as it has CKM enabled but this secondaryKS has not sync up all KGS params yet	Reject GM registration because this is a secondaryKS and it has not received KGS seed and rekey-epoch from primaryKS yet	-	LOG_STD_ACTION
<del>IPSEC</del> MES	4-Warning	Reject registration of GM [chars] ver 0x[hec] in group [chars] as it	Reject GM registration because it cannot support the GETVPN features enabled in the group.	ipsec-getvpn	"Check GMs can support all GETVPN features enabled " "in KS. Also check output of 'show crypto gdoi " "feature' and 'debug crypto gdoi ks infra detail' " "note: high volume of debugs. "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>GDHICMIBNONRCSER</del>	4-Warning	Reject registration of GM [chars] ver 0x[hec] in group [chars] as it	Reject GM registration because it cannot support the GETVPN features enabled in the group.	ipsec-getvpn	"Check GMs can support all GETVPN features enabled " "in KS. Also check output of 'show crypto gdoi " 'feature' and 'debug crypto gdoi ks infra detail' " "note: high volume of debugs. "
<del>GDHSA_KEYSMDHD</del>	4-Warning	WARNING: GMs for group [chars] will re-register due to signature verification failure	Rekeys will be dropped by GM as signature verification would fail due to modification of RSA Keys	ipsec-getvpn	"Informational message"
<del>GDHSA_KEYSMDHD</del>	4-Warning	WARNING: GMs for group [chars] will re-register due to signature verification failure	Rekeys will be dropped by GM as signature verification would fail due to modification of RSA Keys	ipsec-getvpn	"Informational message"
<del>GDHMBASDRRLAFLD</del>	4-Warning	An anti replay check has failed in group [chars]: my_pseudotime = [chars] peer_pseudotime = [chars] replay_window = [dec] sec src_ip = [node]dst_ip = %i	-	-	-
<del>GDHMBASDRRLAFLD</del>	4-Warning	An anti replay check has failed in group [chars]: my_pseudotime = [chars] peer_pseudotime = [chars] replay_window = [dec] sec src_ip = [node]dst_ip = %i	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>GD</del> COOP_KS_ADD	4-Warning	An anti replay check has failed in group [chars]: my_pseudotime = [chars] peer_pseudotime = [chars] replay_window = [dec] sec src_ip = [node]dst_ip = %P	-	-	-
<del>GD</del> COOP_KS_ADD	4-Warning	An anti replay check has failed in group [chars]: my_pseudotime = [chars] peer_pseudotime = [chars] replay_window = [dec] sec src_ip = [node]dst_ip = %P	-	-	-
GDCOOP_KS_ADD	5-Notice	[chars] added as COOP Key Server in group [chars].	A key server has been added to the list of cooperative key servers in a group	ipsec-getvpn	"Informational message"
GDCOOP_KS_ADD	5-Notice	[chars] added as COOP Key Server in group [chars].	A key server has been added to the list of cooperative key servers in a group	ipsec-getvpn	"Informational message"
<del>GD</del> COOP_KS_ADMIN_USURP	5-Notice	Primary role Usurped by KS [chars] in group [chars].	A network administrator has made the local KS as primary by means of a CLI command. Currently Unimplemented.	ipsec-getvpn	"Informational message"
<del>GD</del> COOP_KS_ADMIN_USURP	5-Notice	Primary role Usurped by KS [chars] in group [chars].	A network administrator has made the local KS as primary by means of a CLI command. Currently Unimplemented.	ipsec-getvpn	"Informational message"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>COOP-SIC-KS-NVC-M-ERR-ANN</del>	5-Notice	This KS temporarily blocks GM with ip-addr [chars] from registering in group [chars] as it has not received an ANN with valid PST for prolonged period	No valid ANN message has been received in this secondary KS for a prolong period. Temporarily blocking new GM registrations until a valid ANN is received	ipsec-getvpn	LOG_STD_ACTION
<del>COOP-SIC-KS-NVC-M-ERR-ANN</del>	5-Notice	This KS temporarily blocks GM with ip-addr [chars] from registering in group [chars] as it has not received an ANN with valid PST for prolonged period	No valid ANN message has been received in this secondary KS for a prolong period. Temporarily blocking new GM registrations until a valid ANN is received	ipsec-getvpn	LOG_STD_ACTION
<del>COOP-SIC-KS-NVC-M-ERR-IND</del>	5-Notice	This KS temporarily blocks GM with ip-addr [chars] from registering in group [chars] as the KS election is underway	The KS is in the process of electing a primary. Temporarily blocking new GM registrations until the election is complete	ipsec-getvpn	LOG_STD_ACTION
<del>COOP-SIC-KS-NVC-M-ERR-IND</del>	5-Notice	This KS temporarily blocks GM with ip-addr [chars] from registering in group [chars] as the KS election is underway	The KS is in the process of electing a primary. Temporarily blocking new GM registrations until the election is complete	ipsec-getvpn	LOG_STD_ACTION
<del>COOP-SIC-KS-NVC-M-ERR-S</del>	5-Notice	This KS is blocking GM with ip-addr [chars] from registering in group [chars] as it has overlapping KS Sender Identifiers KSSID with	Another COOP-KS peer in the group has been configured with a KSSID value that is the same as one configured on this KS. GM registration is blocked as a result until the overlap is fixed.	ipsec-getvpn	"Check the configured KSSIDs for all COOP-KS peers by issuing "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>GD05COOP_KS_BLOCK</del>	5-Notice	This KS is blocking GM with ip-addr [chars] from registering in group [chars] as it has overlapping KS Sender Identifiers KSSID with	Another COOP-KS peer in the group has been configured with a KSSID value that is the same as one configured on this KS. GM registration is blocked as a result until the overlap is fixed.	ipsec-getvpn	"Check the configured KSSIDs for all COOP-KS peers by issuing "
GD05COOP_KS_ELECTION	5-Notice	KS entering election mode in group [chars] Previous Primary = [chars]	The local Key server has entered the election process in a group	ipsec-getvpn	"Informational message"
GD05COOP_KS_ELECTION	5-Notice	KS entering election mode in group [chars] Previous Primary = [chars]	The local Key server has entered the election process in a group	ipsec-getvpn	"Informational message"
GD05COOP_KS_REACH	5-Notice	Reachability restored with Cooperative KS [chars] in group [chars].	The reachability between the configugred cooperative key servers is restored.	ipsec-getvpn	"Informational message"
GD05COOP_KS_REACH	5-Notice	Reachability restored with Cooperative KS [chars] in group [chars].	The reachability between the configugred cooperative key servers is restored.	ipsec-getvpn	"Informational message"
GD05COOP_KS_REMOVE	5-Notice	[chars] removed as COOP Key Server in group [chars].	A key server has been removed from the list of cooperative key servers in a group	ipsec-getvpn	"Informational message"
GD05COOP_KS_REMOVE	5-Notice	[chars] removed as COOP Key Server in group [chars].	A key server has been removed from the list of cooperative key servers in a group	ipsec-getvpn	"Informational message"
<del>GD05KSM_NEWGM_REGR</del>	5-Notice	This KS will now resume new GM registration functionality in group [chars]	This KS will now resume new GM registration functionality	ipsec-getvpn	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>COCKSADANNMEMRD</del> COCKSADANNMEMRD	5-Notice	This KS will now resume new GM registration functionality in group [chars]	This KS will now resume new GM registration functionality	ipsec-getvpn	LOG_STD_ACTION
<del>COCKSADANNMEMRD</del> COCKSADANNMEMRD	5-Notice	KS [chars] in group [chars] transitioned to Primary Previous Primary = [chars]	The local Key server transitioned to a primary role from being a secondary server in a group	ipsec-getvpn	"Informational message"
<del>COCKSADANNMEMRD</del> COCKSADANNMEMRD	5-Notice	KS [chars] in group [chars] transitioned to Primary Previous Primary = [chars]	The local Key server transitioned to a primary role from being a secondary server in a group	ipsec-getvpn	"Informational message"
<del>COCKSADANNMEMRD</del> COCKSADANNMEMRD	5-Notice	This sec-KS has NOT received an ANN with valid PST for an extended period in group [chars]. It will block new GMs registration temporarily until a valid ANN is received	No valid ANN message has been received in this secondary KS for a prolong period. Temporarily blocking new GM registrations until a valid ANN is received	ipsec-getvpn	"Informational message"
<del>COCKSADANNMEMRD</del> COCKSADANNMEMRD	5-Notice	This sec-KS has NOT received an ANN with valid PST for an extended period in group [chars]. It will block new GMs registration temporarily until a valid ANN is received	No valid ANN message has been received in this secondary KS for a prolong period. Temporarily blocking new GM registrations until a valid ANN is received	ipsec-getvpn	"Informational message"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>COOP_KS_OVRLAP_RSMD</del>	5-Notice	Resolved overlapping KS Sender Identifiers KSSID	Another COOP-KS peer in the group had been configured with a KSSID value that was the same as one configured on this KS but has been resolved so that GM registration is allowed again.	ipsec-getvpn	LOG_STD_ACTION
<del>COOP_KS_OVRLAP_RSMD</del>	5-Notice	Resolved overlapping KS Sender Identifiers KSSID	Another COOP-KS peer in the group had been configured with a KSSID value that was the same as one configured on this KS but has been resolved so that GM registration is allowed again.	ipsec-getvpn	LOG_STD_ACTION
<del>ESON_POLICY_CHG_RSMD</del>	5-Notice	ESON group [chars] policy has changed. Must use 'clear crypto gdoi ks members now' to restart the group	Reminder message that ESON configuration has changed.	eson-ckm	LOG_STD_ACTION
<del>ESON_POLICY_CHG_RSMD</del>	5-Notice	ESON group [chars] policy has changed. Must use 'clear crypto gdoi ks members now' to restart the group	Reminder message that ESON configuration has changed.	eson-ckm	LOG_STD_ACTION
<del>ESON_POLICY_CHG_RSMD</del>	5-Notice	ESON group [chars] policy has changed. Must use 'crypto gdoi ks replace now' to restart the group	Reminder message that ESON configuration has changed.	eson-ckm	LOG_STD_ACTION
<del>ESON_POLICY_CHG_RSMD</del>	5-Notice	ESON group [chars] policy has changed. Must use 'crypto gdoi ks replace now' to restart the group	Reminder message that ESON configuration has changed.	eson-ckm	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
GDOI5GM_ACL_MERGE	5-Notice	ACL between KS and GM in group [chars] merged.	The ACL differences between GM and KS are resolved and a merge took place	ipsec-getvpn	-
GDOI5GM_ACL_MERGE	5-Notice	ACL between KS and GM in group [chars] merged.	The ACL differences between GM and KS are resolved and a merge took place	ipsec-getvpn	-
GDOI5GM_CLEAR_REGISIER	5-Notice	Config: GM cleared gdoi configuration for the group [chars].	clear crypto gdoi command has been executed by the local GM	ipsec-getvpn	"Informational message."
GDOI5GM_CLEAR_REGISIER	5-Notice	Config: GM cleared gdoi configuration for the group [chars].	clear crypto gdoi command has been executed by the local GM	ipsec-getvpn	"Informational message."
GDOI5GM_CM_ATTACH	5-Notice	Crypto map attached for GM in group [chars].	A crypto map has been attached for the local group member.	ipsec-getvpn	"Informational message."
GDOI5GM_CM_ATTACH	5-Notice	Crypto map attached for GM in group [chars].	A crypto map has been attached for the local group member.	ipsec-getvpn	"Informational message."
GDOI5GM_CM_DETACH	5-Notice	Crypto map detached for GM in group [chars].	A crypto map has been detached for the local group member.	ipsec-getvpn	"Informational message."
GDOI5GM_CM_DETACH	5-Notice	Crypto map detached for GM in group [chars].	A crypto map has been detached for the local group member.	ipsec-getvpn	"Informational message."
GDOI5GM_CONV_SADUPLEX	5-Notice	IPSec SAs converted to Duplex in group [chars] on the GM.	IPSec SAs have been converted to bidirectional mode in a group on a GM	ipsec-getvpn	-
GDOI5GM_CONV_SADUPLEX	5-Notice	IPSec SAs converted to Duplex in group [chars] on the GM.	IPSec SAs have been converted to bidirectional mode in a group on a GM	ipsec-getvpn	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>DDMCONVSDUPLEXICAL</del>	5-Notice	IPSec SAs converted to Duplex in group [chars] on a GM by a local event.	IPSec SAs have been converted to bidirectional mode in a group on a GM by a CLI command	ipsec-getvpn	-
<del>DDMCONVSDUPLEXICAL</del>	5-Notice	IPSec SAs converted to Duplex in group [chars] on a GM by a local event.	IPSec SAs have been converted to bidirectional mode in a group on a GM by a CLI command	ipsec-getvpn	-
<del>DDMDELEXPNDK</del>	5-Notice	KEK expired for group [chars] and was deleted	Deleting Expired KEK	ipsec-getvpn	LOG_STD_ACTION
<del>DDMDELEXPNDK</del>	5-Notice	KEK expired for group [chars] and was deleted	Deleting Expired KEK	ipsec-getvpn	LOG_STD_ACTION
<del>DDMDELEXPNDP</del>	5-Notice	P2P SA with epoch hash 0x[chars] expired for group [chars] and was deleted	Deleting Expired P2P	ipsec-getvpn	LOG_STD_ACTION
<del>DDMDELEXPNDP</del>	5-Notice	P2P SA with epoch hash 0x[chars] expired for group [chars] and was deleted	Deleting Expired P2P	ipsec-getvpn	LOG_STD_ACTION
<del>DDMDELEXPNDP</del>	5-Notice	PIP with SPI 0x[chars] expired for group [chars] and was deleted	Deleting Expired PIP	ipsec-getvpn	LOG_STD_ACTION
<del>DDMDELEXPNDP</del>	5-Notice	PIP with SPI 0x[chars] expired for group [chars] and was deleted	Deleting Expired PIP	ipsec-getvpn	LOG_STD_ACTION
<del>DDMENABLEGDOI</del>	5-Notice	GM has enabled ACL on GDOI crypto map in group [chars].	Group member has enabled ACL on a GDOI Crypto map in a group with a key server	ipsec-getvpn	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
GDDGMENABE_GDDGM	5-Notice	GM has enabled ACL on GDOI crypto map in group [chars].	Group member has enabled ACL on a GDOI Crypto map in a group with a key server	ipsec-getvpn	-
GDDMADICNSALPKIS	5-Notice	FAILED: Installation of Reg/Rekey policies from KS [chars] for group [chars] & gm identity [chars]	Failed Policy installation	ipsec-getvpn	LOG_STD_ACTION
GDDMADICNSALPKIS	5-Notice	FAILED: Installation of Reg/Rekey policies from KS [chars] for group [chars] & gm identity [chars]	Failed Policy installation	ipsec-getvpn	LOG_STD_ACTION
GDDMSALPKISSUCSS	5-Notice	SUCCESS: Installation of Reg/Rekey policies from KS [chars] for group [chars] & gm identity [chars] fvr [chars] ivrf [chars]	Policy Installation Success	ipsec-getvpn	LOG_STD_ACTION
GDDMSALPKISSUCSS	5-Notice	SUCCESS: Installation of Reg/Rekey policies from KS [chars] for group [chars] & gm identity [chars] fvr [chars] ivrf [chars]	Policy Installation Success	ipsec-getvpn	LOG_STD_ACTION
GDDGMIV_EXHAUSTED	5-Notice	GM for group [chars] exhausted its IV space for interface [chars] and will re-register.	This GM is registering to an IPv6 group but erroneously receiving IPv4 policies in rekey	ipsec-getvpn	"Check GMs can support all GETVPN features enabled " "in KS. Also check output of 'show crypto gdoi " "feature' and 'debug crypto gdoi ks infra detail' " "note: high volume of debugs. "

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
GDOI5GM_IV_EXHAUSTED	5-Notice	GM for group [chars] exhausted its IV space for interface [chars] and will re-register.	This GM is registering to an IPv6 group but erroneously receiving IPv4 policies in rekey	ipsec-getvpn	"Check GMs can support all GETVPN features enabled " "in KS. Also check output of 'show crypto gdoi " 'feature' and 'debug crypto gdoi ks infra detail' " "note: high volume of debugs. "
GDOI5GM_POLICY_CLEANUP	5-Notice	KS downloaded Policy Cleared and Fail Close policy installed for GM [chars] in group [chars]	As the Fail close revert option is configured and KS is not reachable or registartion is failed we will remove the KS downloaded policy and apply the Fail close policy back on this GM	ipsec-getvpn	"Informational message."
GDOI5GM_POLICY_CLEANUP	5-Notice	KS downloaded Policy Cleared and Fail Close policy installed for GM [chars] in group [chars]	As the Fail close revert option is configured and KS is not reachable or registartion is failed we will remove the KS downloaded policy and apply the Fail close policy back on this GM	ipsec-getvpn	"Informational message."
GDOI5GM_RECV_REKEY	5-Notice	Received Rekey for group [chars] from [chars] to [chars] with seq # [dec] spi 0x[hec][hec][hec][hec]	Received Rekey	ipsec-getvpn	LOG_STD_ACTION
GDOI5GM_RECV_REKEY	5-Notice	Received Rekey for group [chars] from [chars] to [chars] with seq # [dec] spi 0x[hec][hec][hec][hec]	Received Rekey	ipsec-getvpn	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>GDGMRCGRUPDNEIBAR</del>	5-Notice	Platform HA forwarding-plane comes online group [chars] gm-identity [chars] fvrf [chars] ivrf [chars] re-register to refresh TBAR info.	HA forwarding-plane comes online group [chars] gm-identity [chars] fvrf [chars] ivrf [chars] is re-registering to refresh TBAR info.	ipsec-getvpn	LOG_STD_ACTION
<del>GDGMRCGRUPDNEIBAR</del>	5-Notice	Platform HA forwarding-plane comes online group [chars] gm-identity [chars] fvrf [chars] ivrf [chars] re-register to refresh TBAR info.	HA forwarding-plane comes online group [chars] gm-identity [chars] fvrf [chars] ivrf [chars] is re-registering to refresh TBAR info.	ipsec-getvpn	LOG_STD_ACTION
GDGSGM_REGS_COMPL	5-Notice	Registration to KS [chars] complete for group [chars] using address [chars] fvrf [chars] ivrf [chars]	Complete registration	ipsec-getvpn	LOG_STD_ACTION
GDGSGM_REGS_COMPL	5-Notice	Registration to KS [chars] complete for group [chars] using address [chars] fvrf [chars] ivrf [chars]	Complete registration	ipsec-getvpn	LOG_STD_ACTION
<del>GDGMREKEYAS2MII</del>	5-Notice	Rekey cipher/hash [chars] used in Group [chars] is unacceptable	The key-server has chosen KEK rekey cipher/hash algorithms which are not acceptable by this group-member	-	"Contact the Key server's administrator."
<del>GDGMREKEYAS2MII</del>	5-Notice	Rekey cipher/hash [chars] used in Group [chars] is unacceptable	The key-server has chosen KEK rekey cipher/hash algorithms which are not acceptable by this group-member	-	"Contact the Key server's administrator."
<del>GDGMREKEYAS2MII</del>	5-Notice	Group [chars] transitioned to multicast rekey.	GM has transitioned from using unicast rekey mechanism to multicast mechanism	ipsec-getvpn	"Informational message"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>GDOI</del> MRKEY_TRANS2MII	5-Notice	Group [chars] transitioned to multicast rekey.	GM has transitioned from using unicast rekey mechanism to multicast mechanism	ipsec-getvpn	"Informational message"
<del>GDOI</del> MRKEY_TRANS2UN	5-Notice	Group [chars] transitioned to Unicast Rekey.	GM has transitioned from using multicast rekey mechanism to unicast mechanism	ipsec-getvpn	"Informational message"
<del>GDOI</del> MRKEY_TRANS2UN	5-Notice	Group [chars] transitioned to Unicast Rekey.	GM has transitioned from using multicast rekey mechanism to unicast mechanism	ipsec-getvpn	"Informational message"
<del>GDOI</del> MRKEY_TRANS2MII	5-Notice	The transformset [chars] for data-protection in Group [chars] is	The key-server has chosen a TEK transformset which is not acceptable by this group-member	-	"Contact the Key server's administrator."
<del>GDOI</del> MRKEY_TRANS2MII	5-Notice	The transformset [chars] for data-protection in Group [chars] is	The key-server has chosen a TEK transformset which is not acceptable by this group-member	-	"Contact the Key server's administrator."
GDOI5GM_SA_INGRESS	5-Notice	Receive only ACL received from KS [node]in group [chars].	Received only acl has been received by GM from a KS in a group	ipsec-getvpn	-
GDOI5GM_SA_INGRESS	5-Notice	Receive only ACL received from KS [node]in group [chars].	Received only acl has been received by GM from a KS in a group	ipsec-getvpn	-
GDOI5GM_UNREGISTER	5-Notice	GM left the group [chars].	A Group member has left the group.	ipsec-getvpn	"Informational message."
GDOI5GM_UNREGISTER	5-Notice	GM left the group [chars].	A Group member has left the group.	ipsec-getvpn	"Informational message."
<del>GDOI</del> 5IPSEC_REGISTER	5-Notice	IPSEC initiate GDOI group [chars] to register	IPSEC initiate a GM registration for the group	ipsec-getvpn	LOG_STD_ACTION
<del>GDOI</del> 5IPSEC_REGISTER	5-Notice	IPSEC initiate GDOI group [chars] to register	IPSEC initiate a GM registration for the group	ipsec-getvpn	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
GDOI5KS_CLEAR_REGISIER	5-Notice	Config: KS cleared gdoi configuration for the group [chars].	clear crypto gdoi command has been executed by the local KS	ipsec-getvpn	"Informational message."
GDOI5KS_CLEAR_REGISIER	5-Notice	Config: KS cleared gdoi configuration for the group [chars].	clear crypto gdoi command has been executed by the local KS	ipsec-getvpn	"Informational message."
GDOI5KS_CONV_SAS_DUPLEX	5-Notice	IPSec SAs converted to Duplex in group [chars].	IPSec SAs have been converted to bidirectional mode in a group	ipsec-getvpn	-
GDOI5KS_CONV_SAS_DUPLEX	5-Notice	IPSec SAs converted to Duplex in group [chars].	IPSec SAs have been converted to bidirectional mode in a group	ipsec-getvpn	-
GDOI5KS_CONV_SAS_INGRESS	5-Notice	IPSec SAs converted to Ingress in group [chars].	IPSec SAs have been converted to receive only mode in a group	ipsec-getvpn	-
GDOI5KS_CONV_SAS_INGRESS	5-Notice	IPSec SAs converted to Ingress in group [chars].	IPSec SAs have been converted to receive only mode in a group	ipsec-getvpn	-
GDOI5KS_GROUP_ADD	5-Notice	Config: KS [node]added to the Group [chars].	A Config command has been executed to add a Key Server in a group	ipsec-getvpn	"Informational message."
GDOI5KS_GROUP_ADD	5-Notice	Config: KS [node]added to the Group [chars].	A Config command has been executed to add a Key Server in a group	ipsec-getvpn	"Informational message."
GDOI5KS_GROUP_DELETE	5-Notice	Config: KS [node]removed from the Group [chars].	A Config command has been executed to remove a Key Server from a group	ipsec-getvpn	"Informational message."
GDOI5KS_GROUP_DELETE	5-Notice	Config: KS [node]removed from the Group [chars].	A Config command has been executed to remove a Key Server from a group	ipsec-getvpn	"Informational message."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
GDOI:SKS_NACK_GMEJECT	5-Notice	KS ejected GM [node]in group [chars].	Key server has reached a condition of not receiving an ACK from GM and has been ejected	ipsec-getvpn	"Informational message"
GDOI:SKS_NACK_GMEJECT	5-Notice	KS ejected GM [node]in group [chars].	Key server has reached a condition of not receiving an ACK from GM and has been ejected	ipsec-getvpn	"Informational message"
GDOI:SKS_REGS_COMPL	5-Notice	KS completed successful registration in group [chars] with GM [node]	Key server has successfully completed a registration in a group	ipsec-getvpn	-
GDOI:SKS_REGS_COMPL	5-Notice	KS completed successful registration in group [chars] with GM [node]	Key server has successfully completed a registration in a group	ipsec-getvpn	-
GDOI:SKS_REINIT_FINISH	5-Notice	Re-initialization of group [chars] completed.	A previously triggered re-initialization as signified by a <del>int</del> GDOI:SKS_REINIT_GROUP syslog has completed after the expiry of the old TEK.	ipsec-getvpn	LOG_STD_ACTION
GDOI:SKS_REINIT_FINISH	5-Notice	Re-initialization of group [chars] completed.	A previously triggered re-initialization as signified by a <del>int</del> GDOI:SKS_REINIT_GROUP syslog has completed after the expiry of the old TEK.	ipsec-getvpn	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>GDOS</del> KS_REINIT_GROUP	5-Notice	[chars] for group [chars] and will re-initialize the group.	KS has reached one of the following conditions indicated by the first part of the message requiring re-initialization of the group:\n	ipsec-getvpn	LOG_STD_ACTION
<del>GDOS</del> KS_REINIT_GROUP	5-Notice	[chars] for group [chars] and will re-initialize the group.	KS has reached one of the following conditions indicated by the first part of the message requiring re-initialization of the group:\n	ipsec-getvpn	LOG_STD_ACTION
<del>GDOS</del> KS_REKEY_REPLACE	5-Notice	Group [chars] transitioned to primary but no policy generated yet continuing with POLICY REPLACE rekey	KS Group has transitioned to new Primary but no policy generated yet to recover from this situation continuing with POLICY REPLACE rekey	ipsec-getvpn	"Informational message"
<del>GDOS</del> KS_REKEY_REPLACE	5-Notice	Group [chars] transitioned to primary but no policy generated yet continuing with POLICY REPLACE rekey	KS Group has transitioned to new Primary but no policy generated yet to recover from this situation continuing with POLICY REPLACE rekey	ipsec-getvpn	"Informational message"
<del>GDOS</del> KS_REKEY_TRANS2MULTI	5-Notice	Group [chars] transitioned to multicast rekey.	Group has transitioned from using unicast rekey mechanism to multicast mechanism	ipsec-getvpn	"Informational message"
<del>GDOS</del> KS_REKEY_TRANS2MULTI	5-Notice	Group [chars] transitioned to multicast rekey.	Group has transitioned from using unicast rekey mechanism to multicast mechanism	ipsec-getvpn	"Informational message"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
GROUPSREKEYTRANS2UN	5-Notice	Group [chars] transitioned to Unicast Rekey.	Group has transitioned from using multicast rekey mechanism to unicast mechanism	ipsec-getvpn	"Informational message"
GROUPSREKEYTRANS2UN	5-Notice	Group [chars] transitioned to Unicast Rekey.	Group has transitioned from using multicast rekey mechanism to unicast mechanism	ipsec-getvpn	"Informational message"
GROUPSENDMCASTREKEY	5-Notice	Sending Multicast Rekey [chars]for group [chars] from address [chars] to [chars] with seq # [dec] spi: 0x[hec][hec][hec][hec]	Sending Multicast Rekey	ipsec-getvpn	LOG_STD_ACTION
GROUPSENDMCASTREKEY	5-Notice	Sending Multicast Rekey [chars]for group [chars] from address [chars] to [chars] with seq # [dec] spi: 0x[hec][hec][hec][hec]	Sending Multicast Rekey	ipsec-getvpn	LOG_STD_ACTION
GROUPSENDUNCASTREKEY	5-Notice	Sending Unicast Rekey [chars]for group [chars] from address [chars] with seq # [dec] spi: 0x[hec][hec][hec][hec]	Sending Unicast Rekey	ipsec-getvpn	LOG_STD_ACTION
GROUPSENDUNCASTREKEY	5-Notice	Sending Unicast Rekey [chars]for group [chars] from address [chars] with seq # [dec] spi: 0x[hec][hec][hec][hec]	Sending Unicast Rekey	ipsec-getvpn	LOG_STD_ACTION
GROUPSINGDEFAULTTRANSFORM	5-Notice	GETVPN is using default transforms for profile [chars]	Using default transformset	ipsec-getvpn	LOG_STD_ACTION
GROUPSINGDEFAULTTRANSFORM	5-Notice	GETVPN is using default transforms for profile [chars]	Using default transformset	ipsec-getvpn	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
GDOI-5-LKH_DISABLE	5-Notice	LKH disabled in group [chars].	LKH has been disabled in a group	ipsec-getvpn	-
GDOI-5-LKH_DISABLE	5-Notice	LKH disabled in group [chars].	LKH has been disabled in a group	ipsec-getvpn	-
GDOI-5-LKH_ENABLE	5-Notice	LKH enabled in group [chars].	LKH has been enabled in a group	ipsec-getvpn	-
GDOI-5-LKH_ENABLE	5-Notice	LKH enabled in group [chars].	LKH has been enabled in a group	ipsec-getvpn	-
GDOI5POLICY_CHANGE	5-Notice	GDOI group [chars] policy has changed. Use 'crypto gdoi ks rekey' to send a rekey or the changes will be send in the next scheduled rekey	Reminder message that GDOI configuration has changed.	ipsec-getvpn	LOG_STD_ACTION
GDOI5POLICY_CHANGE	5-Notice	GDOI group [chars] policy has changed. Use 'crypto gdoi ks rekey' to send a rekey or the changes will be send in the next scheduled rekey	Reminder message that GDOI configuration has changed.	ipsec-getvpn	LOG_STD_ACTION
<del>GDOI5POLICY_CHANGE</del>	5-Notice	Multiple ports detected for ACL [chars] which is not supported. WARNING: No TEK policy will be created.	Warns user that there is an error in the ACL with regards to the number of ports.	ipsec-getvpn	LOG_STD_ACTION
<del>GDOI5POLICY_CHANGE</del>	5-Notice	Multiple ports detected for ACL [chars] which is not supported. WARNING: No TEK policy will be created.	Warns user that there is an error in the ACL with regards to the number of ports.	ipsec-getvpn	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>GDIPOLICYCHANGEISUIEB</del>	5-Notice	Group [chars] changed to Suite-B policy. Use 'crypto gdoi ks rekey' to generate the new Suite-B policy and cause all GMs to re-register to download SIDs or this will happen in the next scheduled rekey	Migrating from non-Suite-B to Suite-B policy requires that the user issues 'crypto gdoi ks rekey' like any other POLICY_CHANGE but this will cause a re-initialization rather than just a rekey.	ipsec-getvpn	LOG_STD_ACTION
<del>GDIPOLICYCHANGEISUIEB</del>	5-Notice	Group [chars] changed to Suite-B policy. Use 'crypto gdoi ks rekey' to generate the new Suite-B policy and cause all GMs to re-register to download SIDs or this will happen in the next scheduled rekey	Migrating from non-Suite-B to Suite-B policy requires that the user issues 'crypto gdoi ks rekey' like any other POLICY_CHANGE but this will cause a re-initialization rather than just a rekey.	ipsec-getvpn	LOG_STD_ACTION
<del>GDIOSSA_KEK_UPDATED</del>	5-Notice	SA KEK was updated <del>0x[chars]</del>	KEK was updated in the Registration/Rekey and a new KEK SA was created	ipsec-getvpn	"Informational message."
<del>GDIOSSA_KEK_UPDATED</del>	5-Notice	SA KEK was updated <del>0x[chars]</del>	KEK was updated in the Registration/Rekey and a new KEK SA was created	ipsec-getvpn	"Informational message."
<del>GDIOSSA_PIP_UPDATED</del>	5-Notice	SA PIP was updated 0x[chars]	PIP was updated in Registration/Rekey and a new PIP SA was created	ipsec-getvpn	"Informational message."
<del>GDIOSSA_PIP_UPDATED</del>	5-Notice	SA PIP was updated 0x[chars]	PIP was updated in Registration/Rekey and a new PIP SA was created	ipsec-getvpn	"Informational message."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
GDO5SA_TEK_UPDATED	5-Notice	SA TEK was updated	TEK was updated in the Registration/Rekey and a new TEK IPSEC SA was created	ipsec-getvpn	"Informational message."
GDO5SA_TEK_UPDATED	5-Notice	SA TEK was updated	TEK was updated in the Registration/Rekey and a new TEK IPSEC SA was created	ipsec-getvpn	"Informational message."
GDO5K_ADTMR_STARTED	5-Notice	TEK ATD Timer started for [dec] seconds New TEK will be installed once ATD timer expires	TEK ATD timer started and new TEK will be installed after atd timer expiry	ipsec-getvpn	LOG_STD_ACTION
GDO5K_ADTMR_STARTED	5-Notice	TEK ATD Timer started for [dec] seconds New TEK will be installed once ATD timer expires	TEK ATD timer started and new TEK will be installed after atd timer expiry	ipsec-getvpn	LOG_STD_ACTION
GDO6KOP_KSMR_TRANSIT	6-Information	Coop KS [chars] protocol version transits from version 1.0.1 to 2.0.0	The KS is transitioning to a new version.	ipsec-getvpn	LOG_STD_ACTION
GDO6KOP_KSMR_TRANSIT	6-Information	Coop KS [chars] protocol version transits from version 1.0.1 to 2.0.0	The KS is transitioning to a new version.	ipsec-getvpn	LOG_STD_ACTION
GDO6KS_FIRST_GM	6-Information	Re-key: First GM [node]seen by KS in the group [chars].	Local key server has received the first group member joining the group	ipsec-getvpn	"Informational message."
GDO6KS_FIRST_GM	6-Information	Re-key: First GM [node]seen by KS in the group [chars].	Local key server has received the first group member joining the group	ipsec-getvpn	"Informational message."
GDO6KS_LAST_GM	6-Information	Re-key: Last GM [node]left the group [chars].	Last group member has left the group on the local key server	ipsec-getvpn	"Informational message."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
GDOI6-KS_LAST_GM	6-Information	Re-key: Last GM [node]left the group [chars].	Last group member has left the group on the local key server	ipsec-getvpn	"Informational message."
GE_LINK-3-MDIO_ERR	3-Error	[chars] error for controller [dec] port [dec]	Error in accessing GigE Transceiver	cmts-platform	"Copy the error message exactly as it appears and report it to your " "technical support"
GE_LINK-3-SW_ERR	3-Error	[chars] error in GE pair [dec] port [dec]	Internal software error	cmts-platform	"Copy the error message exactly as it appears and report it to your " "technical support"
GE_LINK-3-SWICHOVER_ERR	4-Warning	switchover to primary port in GE pair is suppressed due to port instability	-	cmts-platform	"check GE link"
GE_LINK-3-AUTONEGOTIATION	5-Notice	Waiting for completed A/N in GE pair [dec] primary port	-	cmts-platform	"If persistent check peer GigabitEthernet port"
GE_LINK-3-SWICHOVER_PRI	5-Notice	primary port set active for GE pair [dec]	GE link is restored for primary port	cmts-platform	"if not expected check secondary port in GE pair"
GE_LINK-3-SWICHOVER_SEC	5-Notice	secondary port set active for GE pair [dec]	GE link is lost for primary port	cmts-platform	"if not expected check secondary port in GE pair"
GE_LINK-5-UPDOWN	5-Notice	Link status is [chars] for GE pair [dec] port [dec]	Link Status Change detected for GigE Transceiver	cmts-platform	"If not expected check GIGE link"
GE_LINK-6-PHY_EVENT	6-Information	PHY [chars] event detected for phy [dec] port [dec]	Link Event detected for non-SFP port of GigE Transceiver	cmts-platform	"Copy the error message exactly as it appears and report it to your " "technical support"
GENE-3-INVALID_CLIENT_TYPE	3-Error	[chars]: Invalid client type got [dec] must be between 0 and [dec]	This message indicates that client type is outside the expected range	-	"Copy the error message exactly as it appears and report it to your\n technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>GENDBNADRCORKEY</del>	3-Error	[chars]: invalid record key *	This message indicates that the record key is invalid	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
<del>GENDBKEYFUNCNOEXIST</del>	3-Error	[chars]: Key function does not exist	This message indicates that key function being considered does not exist in the database definition	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
GEN_DB-3-LIST_FAIL	3-Error	[chars]:[chars]	This message indicates that a list operations such as enqueue dequeu failed	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
<del>GENDBLISTAFCORCOD</del>	3-Error	[chars]:[dec]:[chars]	This message indicates that a list operations such as enqueue dequeu failed	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
GEN_DB3NO_KEY_FUNC	3-Error	[chars]: [chars][chars]	This message indicates that key functions are missing from the database handle or key function is a NULL Pointer	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
GEN_DB3NULL_DB_HDL	3-Error	NULL Database Handle [chars]	This message indicates the database handle was NULL	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
<del>GENDBNULLDBHDMN</del>	3-Error	[chars]: NULL Database Element [chars]	This message indicates the database handle element was NULL	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>GEN_DB3</del> NULL_TREE_NODE	3-Error	Node is NULL [chars]	This message indicates that the tree node being examined is NULL	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
<del>GEN_DB3</del> PARSER_INIT_FAIL	3-Error	[chars]:[dec]: Parser Could not be initialized	This message indicates that the IOS Parser command could not be initialized	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
<del>GEN_DB3</del> RECORD_DELETE_FAIL	3-Error	[chars]:[chars]	This message indicates that a record could not be deleted	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
<del>GEN_DB3</del> UNKNOWN_PARSER_CMD	3-Error	[chars]:[dec]: Unknown Parser Command	This message indicates that the IOS Parser command was not recognized	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
GEN_DB3-WAVL_FAIL	3-Error	[chars]: [chars]	This message indicates that a wavl tree operation failed	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
<del>GEN_PROXY3</del> GM_ALLOC_FAIL	3-Error	GPM allocation for reply failed pak_size [hec] reply_size [hec]	GPM could not be allocated for reply.	cpp-ucode	LOG_STD_ACTION
<del>GEN_PROXY3</del> IPC_SEND_FAIL	3-Error	IPC send reply failed [chars]	GEN proxy failed to send of reply to IPC msg.	cpp-ucode	LOG_STD_ACTION
<del>GEN_PROXY3</del> IC_UNHANDLED	3-Error	failure	An unknown message type: [dec] was received by the Generic Client Proxy.	cpp-ucode	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>GEN_PROXY_REPLY_MSG</del>	3-Error	wrong version [dec]	An incorrect SBS message was received by the Generic Client Proxy.	cpp-ucode	LOG_STD_ACTION
<del>GEN_PROXY_STACK_ALLOC_FAIL</del>	3-Error	Stack allocation for reply failed reply_size [hec]	Stack space could not be allocated for reply.	cpp-ucode	LOG_STD_ACTION
GENERAL-3-LDP	3-Error	<del>ERRMSG_HLGRACBACK</del>	-	-	-
GENERAL-3-LDP	3-Error	<del>ERRMSG_HLGRACBACK</del>	-	-	-
GENERAL-3-LDPLIB	3-Error	ERRMSG_NOFLAGS	-	-	-
GENERAL-3-LDPLIB	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>GENSUBBLOCKBUILDERR</del>	2-Critical	Failed to build message for GSB: [chars]	An attempt to build a message for distribution of generic subblock failed	-	LOG_STD_ACTION
<del>GENSUBBLOCKBUILDERR</del>	2-Critical	Failed to build message for GSB: [chars]	An attempt to build a message for distribution of generic subblock failed	-	LOG_STD_ACTION
<del>GENSUBBLOCKSLOTNAME</del>	2-Critical	GSB [chars] is not ISSU aware. Cannot distribute it to ISSU-aware slots	This GSB is expected to be ISSU aware but it is not. It cannot be distributed safely to ISSU-aware slots as it may not be correctly interpreted	-	LOG_STD_ACTION
<del>GENSUBBLOCKSLOTNAME</del>	2-Critical	GSB [chars] is not ISSU aware. Cannot distribute it to ISSU-aware slots	This GSB is expected to be ISSU aware but it is not. It cannot be distributed safely to ISSU-aware slots as it may not be correctly interpreted	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>GENSUBBLOCKLATER</del>	2-Critical	Late registration of GSB type [chars] with id [dec]	An attempt to register a new generic subblock type was received after subblocks have already been allocated from the control structure with previously registered types	-	LOG_STD_ACTION
<del>GENSUBBLOCKLATER</del>	2-Critical	Late registration of GSB type [chars] with id [dec]	An attempt to register a new generic subblock type was received after subblocks have already been allocated from the control structure with previously registered types	-	LOG_STD_ACTION
<del>GENSUBBLOCKPACKR</del>	2-Critical	Unpacked [dec] bytes and attempted to consume [dec] bytes for GSB: [chars]	A discrepancy was detected between length of message expected versus length of message received	-	LOG_STD_ACTION
<del>GENSUBBLOCKPACKR</del>	2-Critical	Unpacked [dec] bytes and attempted to consume [dec] bytes for GSB: [chars]	A discrepancy was detected between length of message expected versus length of message received	-	LOG_STD_ACTION
<del>ERRMSG_NOFLAGS</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>ERRMSG_NOFLAGS</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>ewlc-ap-location</del>	5-Notice	ewlc-ap-location	Ranging request :[chars]	Information message related to ranging request	LOG_SID_NO_ACTION
<del>cpp-ucode</del>	3-Error	-	GEO Conditional Debugging registration failed.	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
GGASACKNOLOOPDETECT	1-Alert	The link neighbor of link [dec] of Gigastack GBIC in [chars] did not respond to the loop detection request. If loop topology is deployed make sure all switches in the stack are running the latest software.\n	No acknowledgement for Gigastack loop detection request is received from one of the links on a Gigastack GBIC. Either the neighboring switch does not support Gigastack Loop breaking algorithm or the link between the two Gigastack GBICs is broken. Under this condition a Gigastack loop topology will not be automatically detected and the connectivity between switches in the stack could be lost.	-	"If loop topology is used in the Gigastack make sure the latest software is running on all switches in the stack. Check the Gigastack GBICs involved to make sure they are functioning."
GGASACKNOLOOPDETECT	1-Alert	The link neighbor of link [dec] of Gigastack GBIC in [chars] did not respond to the loop detection request. If loop topology is deployed make sure all switches in the stack are running the latest software.\n	No acknowledgement for Gigastack loop detection request is received from one of the links on a Gigastack GBIC. Either the neighboring switch does not support Gigastack Loop breaking algorithm or the link between the two Gigastack GBICs is broken. Under this condition a Gigastack loop topology will not be automatically detected and the connectivity between switches in the stack could be lost.	-	"If loop topology is used in the Gigastack make sure the latest software is running on all switches in the stack. Check the Gigastack GBICs involved to make sure they are functioning."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CGASTACK</del> 3INT_FAILURE	3-Error	Gigastack GBIC in [chars] initialization failed.	Gigastack GBIC failed POST.	firmware	"Remove the Gigastack GBIC and re-insert it into the GBIC slot."
<del>CGASTACK</del> 3INT_FAILURE	3-Error	Gigastack GBIC in [chars] initialization failed.	Gigastack GBIC failed POST.	firmware	"Remove the Gigastack GBIC and re-insert it into the GBIC slot."
<del>CGASTACK</del> 4LOOP_BROKEN	6-Information	Link loss is detected in the Gigastack loop \nLink 2 of the Gigastack GBIC in [chars] is re-enabled.	Loop formed by Gigastack modules is broken because of link loss. Link 2 of the Master Loop Breaker is re-enabled to replace the broken link	-	LOG_SID_NO_ACTION
<del>CGASTACK</del> 4LOOP_BROKEN	6-Information	Link loss is detected in the Gigastack loop \nLink 2 of the Gigastack GBIC in [chars] is re-enabled.	Loop formed by Gigastack modules is broken because of link loss. Link 2 of the Master Loop Breaker is re-enabled to replace the broken link	-	LOG_SID_NO_ACTION
<del>CGASTACK</del> 4LOOP_DEFICED	6-Information	Gigastack GBIC in [chars] is selected as Master Loop Breaker. \nLink 2 of the Gigastack GBIC is disabled to break the loop.	Loop is detected in the Gigastack and this Gigastack GBIC is selected as the Master Loop Breaker. Link 2 of this Gigastack GBIC is disabled to break the loop.	-	LOG_SID_NO_ACTION
<del>CGASTACK</del> 4LOOP_DEFICED	6-Information	Gigastack GBIC in [chars] is selected as Master Loop Breaker. \nLink 2 of the Gigastack GBIC is disabled to break the loop.	Loop is detected in the Gigastack and this Gigastack GBIC is selected as the Master Loop Breaker. Link 2 of this Gigastack GBIC is disabled to break the loop.	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
GK_OSP_KO_PNI_NOMEM	3-Error	\ Not enough emory to initialize GK_OSP subsystem: [chars].	Unable to initialize the gatekeeper OSP subsystem because of low memory conditions.	-	"Upgrade memory capacity on the router."
GK_OSP_KO_PNI_NOMEM	3-Error	\ Not enough emory to initialize GK_OSP subsystem: [chars].	Unable to initialize the gatekeeper OSP subsystem because of low memory conditions.	-	"Upgrade memory capacity on the router."
GK_OSP_KO_PSECH_FINAL	3-Error	\ Could not install gatekeeper osp CLI.	An internal error has occured.	-	"None. Please report this to customer support."
GK_OSP_KO_PSECH_FINAL	3-Error	\ Could not install gatekeeper osp CLI.	An internal error has occured.	-	"None. Please report this to customer support."
GK_3ATICK_CONFIG_ERROR	3-Error	\ An error in the alternate gatekeeper configuration was detected. Remote gatekeeper [chars] claims to be part of zone [chars]	-	-	-
GK_3ATICK_CONFIG_ERROR	3-Error	\ An error in the alternate gatekeeper configuration was detected. Remote gatekeeper [chars] claims to be part of zone [chars]	-	-	-
GK_3ATICK_CONFIG_ERROR_LOCAL	3-Error	\ An alternate gatekeeper indicates an alt-gk configuration error on a local zone.\n	-	-	-
GK_3ATICK_CONFIG_ERROR_LOCAL	3-Error	\ An alternate gatekeeper indicates an alt-gk configuration error on a local zone.\n	-	-	-
GK_3ANON_TURN_OF_AIRB	3-Error	\ Subnet attributes are currently turned ON for\n	-	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>GK3</del> NO_TUN_OF_AIRB	3-Error	\ Subnet attributes are currently turned ON for\n	-	-	-
GK3CONFLICTING_DATA	3-Error	\ Static-alias command failed. Endpoint already exists with different [chars].\n Use the \show gatekeeper endpoints\ command to check on existing endp\n\oints.	-	-	-
<del>GK3</del> CONFLICTING_DATA	3-Error	\ Static-alias command failed. Endpoint already exists with different [chars].\n Use the \show gatekeeper endpoints\ command to check on existing endp\n\oints.	-	-	-
GK3ENDPT_NOT_FOUND	3-Error	\ Endpoint not found for specified IP address [node]	-	-	-
<del>GK3</del> ENDPT_NOT_FOUND	3-Error	\ Endpoint not found for specified IP address [node]	-	-	-
<del>GK3</del> EXC_MN_QZD_ALLOWED	3-Error	\ Exceeded maximum number of local zones [dec] allowed.	-	-	-
<del>GK3</del> EXC_MN_QZD_ALLOWED	3-Error	\ Exceeded maximum number of local zones [dec] allowed.	-	-	-
GK3GK_GUP_NT_ERROR	3-Error	\ An error occurred trying to initialize the Gatekeeper Update Protocol GUP.	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
GK3GK_GUPNT_ERROR	3-Error	\ An error occurred trying to initialize the Gatekeeper Update Protocol GUP.	-	-	-
GK3GK_SRV_LISTEN_FAIL	3-Error	\ Failed to open Gatekeeper Server listening socket.	-	-	-
GK3GK_SRV_LISTEN_FAIL	3-Error	\ Failed to open Gatekeeper Server listening socket.	-	-	-
GK3GK_TMSG_NOMEM	3-Error	\ No memory for gk-server transport message block.	-	-	-
GK3GK_TMSG_NOMEM	3-Error	\ No memory for gk-server transport message block.	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>GKTMP</del> GKTMP-REUNSAFE	3-Error	GKTMP Server: [chars][chars] connected to GK: [chars] is marked unusable	The Gatekeeper has marked a GKTMP server as unusable when flow control is configured. The reason for this action could be that the average response time of the GMTMP server is very high or the number of messages queued to be sent to the GKTMP server is very high. These conditions could be caused by an overloaded server or a problem with the TCP connection between the server and the Gatekeeper.	voice-h323	"Check the operational status of of the GKTMP server and the network link between the server and the Gatekeeper. If both are operational enter the <b>show running-config</b> and <b>show gatekeeper servers</b> commands and verify the status of the GKTMP server. Enter the <b>debug gatekeeper server</b> on the Gatekeeper to enable debugging on the gatekeeper server. Gather this information contact your Cisco technical support representative and provide the representative with the gathered information."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
GKTMP-ERR-UNUSABLE	3-Error	GKTMP Server: [chars][chars] connected to GK: [chars] is marked unusable	The Gatekeeper has marked a GKTMP server as unusable when flow control is configured. The reason for this action could be that the average response time of the GMTMP server is very high or the number of messages queued to be sent to the GKTMP server is very high. These conditions could be caused by an overloaded server or a problem with the TCP connection between the server and the Gatekeeper.	voice-h323	"Check the operational status of of the GKTMP server and the network link between the server and the Gatekeeper. If both are operational enter the <CmdBold>show running-config</CmdBold> and <CmdBold>show gatekeeper servers</CmdBold> commands and verify the status of the GKTMP server. Enter the <CmdBold>debug gatekeeper server</CmdBold> on the Gatekeeper to enable debugging on the gatekeeper server. Gather this information contact your Cisco technical support representative and provide the representative with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
GKCKIMP_SRM_RCHLINE	3-Error	GKTMP Server: [chars][chars] is disconnected with Gatekeeper: [chars]	-	voice-h323	"Check the operational status of the Gatekeeper and the GKTMP server. If both are operational check the TCP connection between the server and the Gatekeeper. Check the output of the <code>&lt;CmdBold&gt;show running-config&lt;/NoCmdBold&gt;</code> and <code>&lt;CmdBold&gt;show gatekeeper servers&lt;/NoCmdBold&gt;</code> and verify the status of the GKTMP server. Enter the <code>&lt;CmdBold&gt;debug gatekeeper server&lt;/NoCmdBold&gt;</code> command on the Gatekeeper to enable debugging on the gatekeeper server. Collect this information contact your Cisco technical support representative and provide the representative with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>GK</del> GKIMPS/EMR/CHNE	3-Error	GKTMP Server: [chars][chars] is disconnected with Gatekeeper: [chars]	-	voice-h323	"Check the operational status of the Gatekeeper and the GKTMP server. If both are operational check the TCP connection between the server and the Gatekeeper. Check the output of the <code>&lt;CmdBold&gt;show running-config&lt;/CmdBold&gt;</code> and <code>&lt;CmdBold&gt;show gatekeeper servers&lt;/CmdBold&gt;</code> and verify the status of the GKTMP server. Enter the <code>&lt;CmdBold&gt;debug gatekeeper server&lt;/CmdBold&gt;</code> command on the Gatekeeper to enable debugging on the gatekeeper server. Collect this information contact your Cisco technical support representative and provide the representative with the gathered information."
<del>GK</del> GK/PROX/ADD/COST/AL	3-Error	\GW/Proxy add cost failed. Could be out of memory.	-	-	-
<del>GK</del> GK/PROX/ADD/COST/AL	3-Error	\GW/Proxy add cost failed. Could be out of memory.	-	-	-
<del>GK</del> GK/PROX/ALIAS/FOUND	3-Error	\GW/Proxy not found for specified alias name [chars].	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>GK</del> GW_PROXY_ALIAS_FOUND	3-Error	\ GW/Proxy not found for specified alias name [chars].	-	-	-
<del>GK</del> GW_PROXY_IP_FOUND	3-Error	\ GW/PROXY may not be registered. Add cost failed.	-	-	-
<del>GK</del> GW_PROXY_IP_FOUND	3-Error	\ GW/PROXY may not be registered. Add cost failed.	-	-	-
<del>GK</del> GW_PROXY_IP_FOUND	3-Error	\ GW/Proxy not found for specified IP address [node]	-	-	-
<del>GK</del> GW_PROXY_IP_FOUND	3-Error	\ GW/Proxy not found for specified IP address [node]	-	-	-
<del>GK</del> INVALID_GK_CMD	3-Error	\ To shutdown Gatekeeper use the \shutdown\ command in the Gatekeeper mode.	-	-	-
<del>GK</del> INVALID_GK_CMD	3-Error	\ To shutdown Gatekeeper use the \shutdown\ command in the Gatekeeper mode.	-	-	-
<del>GK</del> MSGCB_TIMER_RUNNING	3-Error	\ Message CB freed while timer still running: msgcb state=[dec] status=[dec] timer type=[dec]	-	-	-
<del>GK</del> MSGCB_TIMER_RUNNING	3-Error	\ Message CB freed while timer still running: msgcb state=[dec] status=[dec] timer type=[dec]	-	-	-
<del>GK</del> 3-NO_DISC_PORT	3-Error	\ Unable to open or bind to gatekeeper discovery port. Bringup failed.	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
GK-3-NO_DISC_PORT	3-Error	\ Unable to open or bind to gatekeeper discovery port. Bringup failed.	-	-	-
GK-3-NO_RAS_PORT	3-Error	\ Unable to open or bind to RAS well-known port. Bringup failed.	-	-	-
GK-3-NO_RAS_PORT	3-Error	\ Unable to open or bind to RAS well-known port. Bringup failed.	-	-	-
GK-3-PARTIAL_STATIC_ALIAS	3-Error	\ Not all aliases were successfully created. Use the \show gatekeeper endpt\ command to check on successful aliases.	-	-	-
GK-3-PARTIAL_STATIC_ALIAS	3-Error	\ Not all aliases were successfully created. Use the \show gatekeeper endpt\ command to check on successful aliases.	-	-	-
GK-3-PROC_CB_NOMEM	3-Error	\ No memory for process control block. Gatekeeper bringup failed.	-	-	-
GK-3-PROC_CB_NOMEM	3-Error	\ No memory for process control block. Gatekeeper bringup failed.	-	-	-
GK-3-PROC_EV_NOMEM	3-Error	\ No memory for free event queue. Gatekeeper bringup failed.	-	-	-
GK-3-PROC_EV_NOMEM	3-Error	\ No memory for free event queue. Gatekeeper bringup failed.	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
GK3-PROC_IQARRAY_NOMEM	3-Error	\ No memory for lrq array. Gatekeeper bringup failed.	-	-	-
GK3-PROC_IQARRAY_NOMEM	3-Error	\ No memory for lrq array. Gatekeeper bringup failed.	-	-	-
GK3-PROC_MCCB_NOMEM	3-Error	\ No memory for IPC message control block. Gatekeeper bringup failed.	-	-	-
GK3-PROC_MCCB_NOMEM	3-Error	\ No memory for IPC message control block. Gatekeeper bringup failed.	-	-	-
GK3-PROC_MSGRING_NOMEM	3-Error	\ No memory for msgring. Gatekeeper bringup failed.	-	-	-
GK3-PROC_MSGRING_NOMEM	3-Error	\ No memory for msgring. Gatekeeper bringup failed.	-	-	-
GK-3-PROC_NOCREAT	3-Error	\ Unable to create gatekeeper process. Gatekeeper bringup failed.	-	-	-
GK-3-PROC_NOCREAT	3-Error	\ Unable to create gatekeeper process. Gatekeeper bringup failed.	-	-	-
GK-3-PROC_NOIDOWN	3-Error	\ Invalid state [chars]: bringup is only permitted after shut down.	-	-	-
GK-3-PROC_NOIDOWN	3-Error	\ Invalid state [chars]: bringup is only permitted after shut down.	-	-	-
GK-3-PROC_NOTUP	3-Error	\ Invalid state [chars]: shutdown is only permitted after bringup.	-	-	-

Family-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
GK-3-PROC_NOTUP	3-Error	\ Invalid state [chars]: shutdown is only permitted after bringup.	-	-	-
<del>GK-3-SHUTDOWN_WITH_CALLS</del>	3-Error	\ Cannot shutdown gatekeeper because there are calls in progress.	-	-	-
<del>GK-3-SHUTDOWN_WITH_CALLS</del>	3-Error	\ Cannot shutdown gatekeeper because there are calls in progress.	-	-	-
<del>GK-3-STATIC_ALIAS_FAILED</del>	3-Error	\ static-alias command failed. Could not create endpoint in endpoint dbase.	-	-	-
<del>GK-3-STATIC_ALIAS_FAILED</del>	3-Error	\ static-alias command failed. Could not create endpoint in endpoint dbase.	-	-	-
<del>GK-3-STATIC_ALIASGW_FAILED</del>	3-Error	\ A static endpoint was added into the database but failed to create a gateway.\n	-	-	-
<del>GK-3-STATIC_ALIASGW_FAILED</del>	3-Error	\ A static endpoint was added into the database but failed to create a gateway.\n	-	-	-
GK-3-SUBNET_FAILED	3-Error	\ Failed to add/modify subnet information for specified subnet [node][node]	-	-	-
GK-3-SUBNET_FAILED	3-Error	\ Failed to add/modify subnet information for specified subnet [node][node]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>GK</del> SUBNET_NO_ATTRIBUTES	3-Error	\ Please specify attribute [default   explicit] for this command.	-	-	-
<del>GK</del> SUBNET_NO_ATTRIBUTES	3-Error	\ Please specify attribute [default   explicit] for this command.	-	-	-
<del>GK</del> SUBNET_NOT_FOUND	3-Error	\ Subnet not found under specified IP address [node][node]	-	-	-
<del>GK</del> SUBNET_NOT_FOUND	3-Error	\ Subnet not found under specified IP address [node][node]	-	-	-
GK-3-ZONE_ACTIVE	3-Error	\ There are endpoints currently registered in zone [chars]. Zone remove failed	-	-	-
GK-3-ZONE_ACTIVE	3-Error	\ There are endpoints currently registered in zone [chars]. Zone remove failed	-	-	-
<del>GK</del> ZONE_NOT_FOUND	3-Error	\ Zone not found for specified Gatekeeper name [chars].	-	-	-
<del>GK</del> ZONE_NOT_FOUND	3-Error	\ Zone not found for specified Gatekeeper name [chars].	-	-	-
GK-4-PROC_NOTALL	4-Warning	\ Unable to create more than [dec] gk thread processes.	-	-	-
GK-4-PROC_NOTALL	4-Warning	\ Unable to create more than [dec] gk thread processes.	-	-	-
<del>GK</del> TEMPORARY_USABLE	5-Notice	GKTMP Server: [chars][chars] connected to GK: [chars] is marked usable	The Gatekeeper has marked the GKTMP server as usable when flow\n\n control is configured.	voice-h323	LOG_SID_NO_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>GKTMP_SERVER_USABLE</del>	5-Notice	GKTMP Server: [chars][chars] connected to GK: [chars] is marked usable	The Gatekeeper has marked the GKTMP server as usable when flow\n\ control is configured.	voice-h323	LOG_SID_NO_ACTION
<del>GKTMP_SERVER_ONLINE</del>	5-Notice	GKTMP Server: [chars][chars] is connected with Gatekeeper: [chars]	A connection between a GKTMP server and a gatekeeper has been\n\ established. The connection establishment could be initiated by\n\ either the Gatekeeper or a GKTMP server.	voice-h323	LOG_SID_NO_ACTION
<del>GKTMP_SERVER_ONLINE</del>	5-Notice	GKTMP Server: [chars][chars] is connected with Gatekeeper: [chars]	A connection between a GKTMP server and a gatekeeper has been\n\ established. The connection establishment could be initiated by\n\ either the Gatekeeper or a GKTMP server.	voice-h323	LOG_SID_NO_ACTION
<del>LRQ_PASSWORD_UPDATED</del>	5-Notice	\ LRQ receive password for security password-group '[chars]' has been updated.	The Gatekeeper was configured with a LRQ security password-goup that contained the 'effective' keyword. This keyword allows the user to specify a time at which the requested password is to take effect. The log is displayed to inform the user that the time period has expired and the updated password is now in effect.	-	"This log is only for informational purposes. The user should verify " "that all remote zones associated with this password-group are now " "providing the password in its LRQ messages. Failure to do so will " "result in a LRJ containing a reason of invalid_permission."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CK</del> LRQ_PSWD_UPDATE	5-Notice	\ LRQ receive password for security password-group '[chars]' has been updated.	The Gatekeeper was configured with a LRQ security password-goup that contained the 'effective' keyword. This keyword allows the user to specify a time at which the requested password is to take effect. The log is displayed to inform the user that the time period has expired and the updated password is now in effect.	-	"This log is only for informational purposes. The user should verify " "that all remote zones associated with this password-group are now " "providing the password in its LRQ messages. Failure to do so will " "result in a LRJ containing a reason of invalid_permission."
<del>CK</del> ARQ_ACCESS_DENIED	6-Information	\ AnswerCall ARQ with source IP [chars] was blocked by ARQ access list	-	-	-
<del>CK</del> ARQ_ACCESS_DENIED	6-Information	\ AnswerCall ARQ with source IP [chars] was blocked by ARQ access list	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
K4KCIIRASPCANGED	6-Information	\ The IP address which\n has been changed was the gatekeeper's configured RAS address.\n Existing RAS clients will no longer be able to reach the gatekeeper.\n	The IP address being changed at the interface was statically assigned to the gatekeeper for its RAS signaling via the \zone local\ command. This action will automatically replace the gatekeeper's static RAS address with the new IP address. Since the gatekeeper's old RAS address is no longer valid existing clients which have registered to this gatekeeper via the old RAS address will no longer be able to communicate with this gatekeeper.	-	"It is the user's responsibility to notify existing RAS clients to " "re-register their systems to the gatekeeper's new RAS address as " "shown in the \"show gatekeeper zone status\" display"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CK</del> CKCIRASPCANGED	6-Information	\ The IP address which\n has been changed was the gatekeeper's configured RAS address.\n Existing RAS clients will no longer be able to reach the gatekeeper.\n	The IP address being changed at the interface was statically assigned to the gatekeeper for its RAS signaling via the \zone local\ command. This action will automatically replace the gatekeeper's static RAS address with the new IP address. Since the gatekeeper's old RAS address is no longer valid existing clients which have registered to this gatekeeper via the old RAS address will no longer be able to communicate with this gatekeeper.	-	"It is the user's responsibility to notify existing RAS clients to " "re-register their systems to the gatekeeper's new RAS address as " "shown in the \"show gatekeeper zone status\" display"
<del>CK</del> CKCIRASPREMOVED	6-Information	\ The IP address which\n has been removed was the gatekeeper's configured RAS address. The\n system will automatically assign a new IP address if available to\n	The IP address being removed at the interface was statically assigned to the gatekeeper for its RAS signaling via the \zone local\ command. This action will automatically remove the gatekeeper's static RAS address. Since the gatekeeper no longer has a configured RAS address the router will automatically assign an IP address if there is any to the gatekeeper. Existing clients which have registered to	-	"It is the user's responsibility to notify existing RAS clients to " "re-register their systems to the gatekeeper's new RAS address as " "shown in the \"show gatekeeper zone status\" display"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>GK</del> <u>GK</u> <del>CI</del> <u>CI</u> <del>RAS</del> <u>RAS</u> <del>PREMOVED</del>	6-Information	\ The IP address which\n has been removed was the gatekeeper's configured RAS address. The\n system will automatically assign a new IP address if available to\n	The IP address being removed at the interface was statically assigned to the gatekeeper for its RAS signaling via the \zone local\ command. This action will automatically remove the gatekeeper's static RAS address. Since the gatekeeper no longer has a configured RAS address the router will automatically assign an IP address if there is any to the gatekeeper. Existing clients which have registered to	-	"It is the user's responsibility to notify existing RAS clients to " "re-register their systems to the gatekeeper's new RAS address as " "shown in the \"show gatekeeper zone status\" display"
<del>GK</del> <u>GK</u> <del>CI</del> <u>CI</u> <del>ES</del> <u>ES</u> <del>CONCIN</del>	6-Information	\ The connection to GKTMP server [chars][node]appears to be hung	Messages are being backed up in the gatekeeper's write queue in the connection with the specified server name. The connection is assumed to have gone bad and the gatekeeper is closing the connection. This implies that messages will not be sent to that server for processing until either the gatekeeper or the server re-initiates the connection.	-	"Check with the specified server for possible connection error."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CKKCDER/CONCID</del>	6-Information	\ The connection to GKTMP server [chars][node] appears to be hung	Messages are being backed up in the gatekeeper's write queue in the connection with the specified server name. The connection is assumed to have gone bad and the gatekeeper is closing the connection. This implies that messages will not be sent to that server for processing until either the gatekeeper or the server re-initiates the connection.	-	"Check with the specified server for possible connection error."
<del>CKKHO/RASPC/ACED</del>	6-Information	\ The gatekeeper's RAS address\n has been automatically changed by the system. Existing RAS clients\n may no longer be able to reach the gatekeeper.\n	The IP address being changed at the interface causes the system to look for a better IP address to be used for the gatekeeper's RAS address. existing clients which have registered to this gatekeeper via the old RAS address may no longer be able to communicate with this gatekeeper.	-	"It is the user's responsibility to notify existing RAS clients to "re-register their systems to the gatekeeper's new RAS address as "shown in the \"show gatekeeper zone status\" display"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CK</del> CKHONRSPCHNGD	6-Information	\ The gatekeeper's RAS address\n has been automatically changed by the system. Existing RAS clients\n may no longer be able to reach the gatekeeper.\n	The IP address being changed at the interface causes the system to look for a better IP address to be used for the gatekeeper's RAS address. existing clients which have registered to this gatekeeper via the old RAS address may no longer be able to communicate with this gatekeeper.	-	"It is the user's responsibility to notify existing RAS clients to " "re-register their systems to the gatekeeper's new RAS address as " "shown in the \"show gatekeeper zone status\" display"
<del>CK</del> CKRQACLBLOCKDMG	6-Information	\ LRQ from IP [chars] was blocked by LRQ access list	-	-	-
<del>CK</del> CKRQACLBLOCKDMG	6-Information	\ LRQ from IP [chars] was blocked by LRQ access list	-	-	-
GLBP-3-MISCONFIG	3-Error	Cannot add MAC address [enet] to interface [chars] - not supported	A software or hardware error occurred.	-	LOGSIDSHTECHACI0N
GLBP-4-BADAUTH	4-Warning	Bad authentication received from [chars] group [dec]	Two routers participating in a Gateway Load Balancing Protocol group disagree on the valid authentication string.	-	"Use the glbp authentication interface command to repair the " "GLBP authentication discrepancy between the local system " "and the one whose IP address is reported."
GLBP-4-BADVIP	4-Warning	[chars] Grp [dec] address [chars] is in the wrong subnet for this interface	The GLBP virtual IP address contained in the Hello message cannot be learnt as it is not within a subnet configured on the interface.	-	"Check the configuration on all GLBP routers and ensure " "that the virtual IP address is within a configured subnet."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
GLBP-4-DIFFVIP1	4-Warning	[chars] Grp [dec] active routers virtual IP address [chars] is different to the locally configured address [chars]	The GLBP virtual IP address contained in the Hello message from the Active router is different to that configured locally.	-	"Check the configuration on all GLBP routers."
GLBP-4-DUPADDR	4-Warning	Duplicate address [chars] on [chars] sourced by [enet]	The IP address in a GLBP message received on the interface is the same as the router's own IP address. This may be because of misconfiguration or because of a malfunctioning switch	-	"Check the configurations on all the GLBP routers and make sure that "any switches you have are functioning properly."
GLBP-4-DUPVIP1	4-Warning	[chars] Grp [dec] address [chars] is already assigned to [chars] group [dec]	The GLBP virtual IP address contained in the Hello message cannot be learnt as it is already assigned to a different GLBP group.	-	"Check the configuration on all GLBP routers."
GLBP-4-DUPVIP2	4-Warning	[chars] Grp [dec] address [chars] is already assigned on this interface	The GLBP virtual IP address contained in the Hello message cannot be learnt as it is already assigned to this interface.	-	"Check the configuration on all GLBP routers."
GLBP-4-DUPVIP3	4-Warning	[chars] Grp [dec] address [chars] is already assigned to or overlaps with an address on another interface or application	The GLBP virtual IP address contained in the Hello message cannot be learnt as it is already assigned to or overlaps with an address on another interface or application.	-	"Check the configuration on all GLBP routers."
GLBP-4-FWDSTATECHANGE	6-Information	[chars] Grp [node]Fwd [node]state [chars] -> [chars]	The GLBP forwarder has changed state	-	LOG_SID_NO_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
GLBP6STATECHANGE	6-Information	[chars] Grp [node]state [chars] -> [chars]	The GLBP gateway has changed state	-	LOG_STD_NO_ACTION
<del>GMB5SRV_REFRESH</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>GMB5SRV_REFRESH</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
GMB5SRV_ADMIN_SCN	5-Notice	polaris-gnmi-infra	Component [[chars] ] administrative state:[chars]	gnmib component administrative state	ACTION_NONE_REQUIRED
GMB5SRV_OPER_SCN	5-Notice	polaris-gnmi-infra	Component [[chars] ] operational status:[chars]	gnmib component operational status	ACTION_NONE_REQUIRED
GMB6GRPC_CON_STATE	6-Information	polaris-gnmi-infra	Received gRPC[chars] from[chars] for RPC[chars]	gRPC Connection state logging	ACTION_NONE_REQUIRED
GMB6GRPC_TUNN_SESS	6-Information	polaris-gnxi-infra	Received gRPC Tunnel session request from[chars] for Target Type[chars]	gRPC Tunnel state logging	ACTION_NONE_REQUIRED
GMB6GRPC_TUNN_STATE	6-Information	polaris-gnxi-infra	Connected to gRPC Destination[chars] (%s) with Targets[%s] using[chars]:%s	gRPC Tunnel state logging	ACTION_NONE_REQUIRED

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
GPRSIMG0GPRS_DHCP	0-Emergency	\ [chars]	Two reasons for this error message\n\n 1. DHCP Client failed to get started this could be because of malloc\n\n failures.\n\n 2. GPRS DHCP Process failed to start	gprs	"If this error message is seen it is recommended not to use this \n\ GGSN for PDP session establishment with SGSN with dynamic IP request.\n\n Check the available memory in the box and for the first reason try \n\n to get 'debug dhcp detail' before the failure.\n\n Contact your technical support representative with the error \n\n message you got."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
GPRSMSG_GPRS_SRMCE	0-Emergency	\ GSN: [node]TID: [node]x[node]x APN: [chars] Reason: [dec] [chars]	You get this error messages because of one of the following reasons : 1. Path fail - No echo message is received from the GSN peer 2. GGSN service up - GGSN service starts. 3. GGSN service down - GGSN service shutdown. 4. Primary Charging Gateway down - Primary charging gateway is not reachable or unconfigured. 5. Primary Charging Gateway up - Primary Charging gateway is up or its configured. 6. Secondary Charging Gateway up - Secondary Charging Gateway is up or its configured. 7. Secondary Charging Gateway becomes unreachable or unconfigured.	gprs	"Error messages with reasons 36 and 7 are informational. For error messages with the other reasons contact your technical support representative with the error message you got."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
GPRSIMG0RNRRESOURCE	0-Emergency	\ GSN: [node]TEID: [hec] APN: [chars] Reason: [dec] [chars]	Available resources exhausted to continue GGSN service because of \n the following reasons :\n 1. Number of pending signaling messages reaches limit.\n 2. Out of Memory - Insuffient in GGSN.\n 3. System failure - Permanant system failure has occured.	gprs	"1. Check whether you can increase number of PDP that can be handled\n by GGSN.\n If the problem recurs contact your technical support representative\n with the error message you got and with the output of\n 'show gprs gtp status'."
GPRSIMG0NPROCESS	0-Emergency	\ [chars]	A Process could not be started	-	"Please contact your technical support representative \n with the error message you got and with the output of\n 'show gprs gtp status'."
GPRSIMG0RESOURCE	0-Emergency	\ GSN: [node]TID: [node]x[node]x APN: [chars] Reason: [dec] [chars]	Available resources exhausted to continue GGSN service because of \n the following reasons :\n 1. Number of PDP reaches Limit.\n 2. Number of Network Initiated PDP reached percentage - Insuffient \n in GGSN.\n 3. Number of IP PDP regenerated PPP reaches limit.	gprs	"1. Check whether you can increase number of PDP that can be handled \n by GGSN.\n If the problem recurs contact your technical support representative \n with the error message you got and with the output of\n 'show gprs gtp status'."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRIT</del> <del>AAA</del> <del>PP</del> <del>CD</del> <del>DL</del>	4-Warning	\ GSN: [node]TID: [node]x[node]x APN: [chars] Reason: [dec] [chars]	A PDP Activation has been failed because of one of the \n\ following reasons: \n\n\ 1. No RADIUS server present for Authentication - No RADIUS server is \n\ configured or configured RADIUS server is not reachable.\n\ 2. Authentication fail - Authentication failed for invalid username \n\ or password.\n\ 3. Missing PAP/CHAP in non-transparent mode - PAP/CHAP IE is missing in \n\ the packet in non-transparent mode.\n\ 4. Missing username - User name field is not present in the PDP \n\ activation Request sent.	gprs	"1. Check whether RADIUS server is configured properly and able to \n\ ping it.\n\ 2. Check whether RADIUS server is configured properly. \n\ For the other reasons copy and save the error message with the output \n\ of 'show running' command. and contact your technical support \n\ representative."
<del>CRIT</del> <del>AAA</del> <del>PP</del> <del>CD</del> <del>DL</del>	4-Warning	\ GSN: [node]TID: [node]x[node]x APN: [chars] Reason: [dec] [chars]	PDP activation has failed due to one of the APN related problem: \n\ 1. APN not configured - The APN requested in the PDP Request is not\n\ configured in the GGSN router.\n\ 2. Subscribe mode on APN but selection mode field not verified.\n\ 3. Duplicate static IP address to access same APN.\n\ 4. Session already exists for a different APN.	gprs	"Check the APN configuration correspondingly. If that can't solve the \n\ problem get the output of 'sh run' and 'sh gprs access-point all' \n\ copy the error message exactly as it appears and report to your \n\ technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
GPRSIMG4CHARGING	4-Warning	\ GSN: [node]TID: [node]x[node]x APN: [chars] Reason: [dec] [chars]	You get this syslog message due to one of the following reasons : 1. Primary/Secondary Charging gateway configured/unconfigured. 2. GSN GTP' Transfer Failure - Failure in sending CDRs to \n\n Charging gateway configured. 3. GSN CGF Echo Request Failure/Restored - Failure/Success of \n\n Echo messages sent charging gateway to check the connectivity of \n\n the Charging gateway configured. 4. GSN CDR Capacity Full/Free - Status of GSN CDR buffer full/free \n\n the subsequent packet might be dropped if the buffer is full. 5. GSN CDR Discard Notification - a status whether the GSN CDRs are \n\n getting discard/buffered.	gprs	"1. This is informational . 2. Check whether the charging gateways are configured correctly \n\n and are active with the charging functionality. 3. If the configured charging gateway is up and reachable from the GSN \n\n check whether charging function is enabled in the gateway. 4. If you have configured "gprs char charging-send-buffer-size" with minimum bytes you may configure maximum bytes. 5. If the problem recurs contact your technical support representative \n\n with the error message you got"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CHAP/CHAP/DHCP/DHCP/DHCP</del>	4-Warning	\ GSN: [node]TEID: [hec] APN: [chars] Reason: [dec] [chars]	Failed to allocate IP address dynamically because of one of the \n\ following reason:\n\n\ 1. a. DHCP/RADIUS server IP address has been wrongly configured in GGSN.\n\ b. DHCP/RADIUS server is reachable but the configuration to \n\ allocate IP address might be wrong. or \n\ c. Properly configured DHCP/RADIUS server is unreachable.\n\ 2. Dynamic IP allocation is disabled in the APN configuration .\n\ 3. Missing PAP/CHAP information from radius client in \n\ transparent mode - Username and Password is missing in the \n\ PDP Activation Request.	gprs	"1.a. Check whether the GGSN is configured with the valid DHCP/RADIUS \n\ server IP address.\n\ b. Check whether DHCP/RADIUS server is configured properly to \n\ allocate IP address .\n\ c. If the configurations are fine then check whether the server \n\ is reachable from GGSN.\n\ 2. Configure IP allocation pool as either DHCP proxy client or RADIUS \n\ client in the APN .\n\ If you could not solve the problem still contact your technical support\n\ representative with the error message you got."



Family-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>GRS</del> IMGIRMOBIIY	4-Warning	GSN: [node]TEID: [hec] APN: [chars] Reason: [dec] [chars]	One of the following Mobility Related problem has occurred :\n\ 1. MS GPRS Detached.\n\ 2. MS GPRS present.\n\ 3. MS not GPRS responding for network initiated PDP - MS does not \n\ respond for packets initiated by external network. \n\ 4. MS Refused for network initiated PDP.\n\ 5. IMSI unknown for network initiated PDP.	gprs	"If the problem recurs contact your technical support representative\n\ with the error message you got "
<del>GRS</del> GRQSLPADA	4-Warning	\ GSN: [node]TEID: [hec] APN: [chars] Reason: [dec] [chars]	QoS negotitaion/update has failed since resources not available.	gprs	"Contact your technical support representative with the error messages \n\ and the output of command 'sh gprs gtp status' ."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
CPENMICO/DHAP/CDH	4-Warning	\ GSN: [node]TID: [node]x[node]x APN: [chars] Reason: [dec] [chars]	Failed to allocate IP address dynamically because of one of the \n\ following reason:\n\n\ 1. a. DHCP/RADIUS server IP address has been wrongly configured in GGSN.\n\ b. DHCP/RADIUS server is reachable but the configuration to \n\ allocate IP address might be wrong. or \n\ c. Properly configured DHCP/RADIUS server is unreachable.\n\ 2. Dynamic IP allocation is disabled in the APN configuration .\n\ 3. Missing PAP/CHAP information from radius client in \n\ transparent mode - Username and Password is missing in the \n\ PDP Activation Request.	gprs	"1.a. Check whether the GGSN is configured with the valid DHCP/RADIUS \n\ server IP address.\n\ b. Check whether DHCP/RADIUS server is configured properly to \n\ allocate IP address .\n\ c. If the configurations are fine then check whether the server \n\ is reachable from GGSN.\n\ 2. Configure IP allocation pool as either DHCP proxy client or RADIUS \n\ client in the APN .\n\ If you could not solve the problem still contact your technical support\n\ representative with the error message you got."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
GPRSIMG4MOBILITY	4-Warning	\ GSN: [node]TID: [node]x[node]x APN: [chars] Username: [chars] Reason: [dec] [chars]	One of the following Mobility Related problem has occurred :\n\ 1. MS GPRS Detached.\n\ 2. MS GPRS present.\n\ 3. MS not GPRS responding for network initiated PDP - MS does not \n\ respond for packets initiated by external network. \n\ 4. MS Refused for network initiated PDP.\n\ 5. IMSI unknown for network initiated PDP.	gprs	"If the problem recurs contact your technical support representative\n\ with the error message you got "
GPRSQoSAPPCMDL	4-Warning	\ GSN: [node]TID: [node]x[node]x APN: [chars] Reason: [dec] [chars]	QoS negotiation/update has failed since resources not available.	gprs	"Contact your technical support representative with the error messages \n\ and the output of command 'sh gprs gtp status' ."
GPSMODULEAUTHN	0-Emergency	Failed to authenticate the GPS/DR module: [chars] return code 0x[hec].	Failed to authenticate the GPS/DR module.	TAMPER_COMPONENT	LOG_STD_ACTION
GPSMODULEINIT	0-Emergency	Failed to initialize the GPS/DR module.	Failed to initialize the GPS/DR module.	-	LOG_STD_ACTION
GR_IOS_DB3-DB_EXIST	3-Error	Persist DB [chars][dec] not deleted!!!\n	GR_IOS_DB was not deleted from boot flash!	-	GR_IOS_DB_ERR_ACTION
GR_IOS_DB3-OPEN_DB	3-Error	Failed to open path: [chars] handle: 0x[hec] err: [chars] [dec]\n	Failed to open GR_IOS_DB database	-	GR_IOS_DB_ERR_ACTION
GR_IOS_DB3-PATH_FAILED	3-Error	Failed to get database path for [chars]\n	Failed to get database path.	-	GR_IOS_DB_ERR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
GR_IOS_DB3VFT_SET	3-Error	Failed to set VFT path: [chars] handle: 0x[hec] err: [chars] [dec]\n	Failed to set VFT for GR_IOS_DB database	-	GR_IOS_DB_ERR_ACTION
GR_VRF_TOPO3TOPO_DEL	3-Error	Failed to delete Topology record 0x[hec] number: [dec]	Failed to delete topology mapping entry.	-	GR_IOS_DB_ERR_ACTION
GR_VRF_TOPO3TOPO_GET	3-Error	Failed to get vrf_id: 0x[hec] afi: [dec] topology: [chars] topo_id: 0x[hec] err: [chars] [dec]\n	Failed to get topology mapping entry.	-	GR_IOS_DB_ERR_ACTION
GR_VRF_TOPO3TOPO_SET	3-Error	Failed to set vrf_id: 0x[hec] afi: [dec] topology: [chars] topo_id: 0x[hec] err: [chars] [dec]\n	Failed to set topology mapping entry.	-	GR_IOS_DB_ERR_ACTION
GR_VRF_TOPO3TOPO_TBL_FREE	3-Error	Failed to free topology table err: [chars] [dec]\n	Failed to free topology mapping table.	-	GR_IOS_DB_ERR_ACTION
GR_VRF_TOPO3TOPO_TBL_OPEN	3-Error	Failed to open table type: [dec] root: 0x[hec] err: [chars] [dec]\n	Failed to open topology mapping table.	-	GR_IOS_DB_ERR_ACTION
GR_VRF_TOPO3VRF_DEL	3-Error	Failed to delete VRF record 0x[hec] number: [dec]	Failed to delete VRF mapping entry.	-	GR_IOS_DB_ERR_ACTION
GR_VRF_TOPO3VRF_GET	3-Error	Failed to get vrf_name: [chars] vrf_id: 0x[hec] err: [chars] [dec]\n	Failed to get VRF mapping entry.	-	GR_IOS_DB_ERR_ACTION
GR_VRF_TOPO3VRF_SET	3-Error	Failed to set vrf_name: [chars] vrf_id: 0x[hec] err: [chars] [dec]\n	Failed to set VRF mapping entry.	-	GR_IOS_DB_ERR_ACTION
GR_VRF_TOPO3VRF_TBL_FREE	3-Error	Failed to free VRF table err: [chars] [dec]\n	Failed to free VRF mapping table.	-	GR_IOS_DB_ERR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
GRVRFICORVRFIBLON	3-Error	Failed to open table type: [dec] root: 0x[hec] err: [chars] [dec]\n	Failed to open VRF mapping table.	-	GRICS_DB_ERR_ACTION
GR-5-LDP	5-Notice	ERRMSG_NOFLAGS	-	-	-
GR-5-LDP	5-Notice	ERRMSG_NOFLAGS	-	-	-
GRIP-2-BADROUTE	2-Critical	Error [chars] route - null table	A hardware or software error occurred.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
GRIP-3-BADPATHS	3-Error	Invalid number of paths [dec] for %q	An internal inconsistency was detected in the XNS routing table\n\ structure.	-	"Note the parameters associated with this message and call your\n\ technical support representative for assistance."
<del>GRIPCSHNGCHAD</del>	2-Critical	Failed to [chars][chars] steering policy '[chars]' for SGT=[chars] due to ACE '[chars]' error. Download will be retried in 60 seconds	An error occurred in the ACE while GPP attempted to acquire steering policy from the policy server. Retry will be attempted in 60 seconds	-	LOG_STD_ACTION
<del>GRIPCSHNGCHAD</del>	2-Critical	Failed to [chars][chars] steering policy '[chars]' for SGT=[chars] due to ACE '[chars]' error. Download will be retried in 60 seconds	An error occurred in the ACE while GPP attempted to acquire steering policy from the policy server. Retry will be attempted in 60 seconds	-	LOG_STD_ACTION
<del>GRIPCSHNGSALAD</del>	3-Error	Failed to [chars][chars] steering policy [chars] for SGT=[chars]	An error occurred while GPP attempted to acquire steering policy from the policy server.	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CRDPUSHCING_SAL_AED</del>	3-Error	Failed to [chars][chars] steering policy [chars] for SGT=[chars]	An error occurred while GPP attempted to acquire steering policy from the policy server.	-	LOG_STD_ACTION
<del>CRDPUSHCIBROWN_CME</del>	3-Error	Failed to download peer policy for [chars]	An error occurred while GPP attempted to acquire peer policy from the policy server	-	LOG_STD_ACTION
<del>CRDPUSHCIBROWN_CME</del>	3-Error	Failed to download peer policy for [chars]	An error occurred while GPP attempted to acquire peer policy from the policy server	-	LOG_STD_ACTION
<del>CRDPUSHCIPYDNE_AED</del>	3-Error	Failed to delete steering policy definition. Invalid steering policy [chars].	An error occurred while GPP attempted to delete steering policy info with invalid handle.	-	LOG_STD_ACTION
<del>CRDPUSHCIPYDNE_AED</del>	3-Error	Failed to delete steering policy definition. Invalid steering policy [chars].	An error occurred while GPP attempted to delete steering policy info with invalid handle.	-	LOG_STD_ACTION
<del>CRDPUSHCIPYDNE_SAE</del>	3-Error	Steering policy definition is not valid.	An error occurred while GPP attempted to access steering policy definition with invalid handle.	-	LOG_STD_ACTION
<del>CRDPUSHCIPYDNE_SAE</del>	3-Error	Steering policy definition is not valid.	An error occurred while GPP attempted to access steering policy definition with invalid handle.	-	LOG_STD_ACTION
<del>CRDPUSHCIPYDNE_SAE</del>	3-Error	Steering policy named list having policy definition is not valid.	An error occurred while GPP attempted to access steering policy list with invalid handle.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRPPLSHKPOLYDEFNIAE</del>	3-Error	Steering policy named list having policy definition is not valid.	An error occurred while GPP attempted to access steering policy list with invalid handle.	-	LOG_STD_ACTION
<del>CRPPLSHKPOLYDEFNIAE</del>	3-Error	GPP policy-server password encryption failed	GPP policy-server password encryption failed	-	LOG_STD_ACTION
<del>CRPPLSHKPOLYDEFNIAE</del>	3-Error	GPP policy-server password encryption failed	GPP policy-server password encryption failed	-	LOG_STD_ACTION
<del>CRPPLSHKPOLYDEFNIAE</del>	3-Error	Invalid policy-server credentials have configured on device OR Server port number is incorrect	GPP policy-server username or password are invalid	-	LOG_STD_ACTION
<del>CRPPLSHKPOLYDEFNIAE</del>	3-Error	Invalid policy-server credentials have configured on device OR Server port number is incorrect	GPP policy-server username or password are invalid	-	LOG_STD_ACTION
<del>CRPPLSHKSSUNSHIAE</del>	3-Error	Failed to detach session handle from steering policy list for sgt[chars]	-	-	-
<del>CRPPLSHKSSUNSHIAE</del>	3-Error	Failed to detach session handle from steering policy list for sgt[chars]	-	-	-
<del>CRPPLSHKSGTPOLSIAE</del>	3-Error	Steering policy for sgt '[chars]' is not valid.	An error occurred while GPP attempted to access sgt policy with invalid handle.	-	LOG_STD_ACTION
<del>CRPPLSHKSGTPOLSIAE</del>	3-Error	Steering policy for sgt '[chars]' is not valid.	An error occurred while GPP attempted to access sgt policy with invalid handle.	-	LOG_STD_ACTION
<del>CRPPLSHKSSMIAE</del>	3-Error	Failed to start the entry state machine to start policy acquisition for name[chars]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRDPOLSHRCSMAED</del>	3-Error	Failed to start the entry state machine to start policy acquisition for name[chars]	-	-	-
<del>CRDPOLSHRCSNCAED</del>	3-Error	Failed to send [chars] sync msg[chars] to Standby	An error occurred while GPP is performing a sync to the Standby.	-	LOG_STD_ACTION
<del>CRDPOLSHRCSNCAED</del>	3-Error	Failed to send [chars] sync msg[chars] to Standby	An error occurred while GPP is performing a sync to the Standby.	-	LOG_STD_ACTION
<del>CRDPOLSHRCREMAEAD</del>	3-Error	Failed to insert the entry info into tree map for name[chars]	-	-	-
<del>CRDPOLSHRCREMAEAD</del>	3-Error	Failed to insert the entry info into tree map for name[chars]	-	-	-
<del>CRDPOLSHRCAPKFCES</del>	6-Information	Successfully attached steering policy to PDM for sgt[chars]:[chars]	-	-	-
<del>CRDPOLSHRCAPKFCES</del>	6-Information	Successfully attached steering policy to PDM for sgt[chars]:[chars]	-	-	-
<del>CRDPOLSHRCPLMPE</del>	6-Information	Steering policy definition[chars]-[chars] updated to new definition[chars]-[chars]	-	-	-
<del>CRDPOLSHRCPLMPE</del>	6-Information	Steering policy definition[chars]-[chars] updated to new definition[chars]-[chars]	-	-	-



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IOS-LICENSING-ATG</del>	3-Error	<pre> ***** \\nWARNING: GSM AMR-NB License is not yet activated. \\nPlease configure 'license feature gsmammb-codec-pack\\ \\nand accept the EULA to activate the license. \\ ***** </pre>	EULA is not accepted for the license	ios-licensing-atg	LOG_STD_ACTION
<del>IOS-LICENSING-ATG</del>	3-Error	<pre> ***** \\nWARNING: GSM AMR-NB License is not yet activated. \\nPlease configure 'license feature gsmammb-codec-pack\\ \\nand accept the EULA to activate the license. \\ ***** </pre>	EULA is not accepted for the license	ios-licensing-atg	LOG_STD_ACTION
GT64010-1-DMASTALL	1-Alert	DMA interrupt stalled restarted engine [dec]	The driver timed out waiting for completion of DMA task. \\n\\ The DMA engine has been restarted.	-	LOG_SID_RECUR_ACTION
GT64010-3-DMA	3-Error	Interrupt error c=[hex] m=[hex] rc=[hex]	An unexpected interrupt was registered from a DMA \\n\\ engine that was not initialized by software.	-	LOG_STD_ACTION
GT64010-3-NOCHANNEL	3-Error	Referencing unused DMA channel [dec]	An access to an uninitialized DMA engine was attempted.	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
GT64010-3-TIMER	3-Error	Interrupt error c=[hex] m=[hex] rc=[hex]	An unexpected timer interrupt was received from\n\n a timer element that was not initialized by software.	-	LOG_STD_ACTION
GT640103-TIMERINSTALL	3-Error	Attempt to install already installed timer [dec]	An attempt was made to initialize a timer element that\n\n is already in use.	-	LOG_STD_ACTION
GIPACCHUNK_CREATE_FAIL	3-Error		This message indicates that the packet is dropped by GTP AIC.	cpp-ucode	"This message is for informational purposed only but may indicate " "a security problem."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>GTP</del> PACKETPARSER	0-Emergency	\ GSN: [node]TEID: [hec] APN: [chars] Reason: [chars]	A PDP context activation failed at the packet parsing state for one\n\ of the following reasons:\n\ 1. Mandatory IE is missing in the PDP .\n\ 2. Mandatory IE incorrect - Mandatory IE has invalid range of value.\n\ 3. Mandatory IE out of sequence - The Mandatory IEs are not in sequence.\n\ 4. Invalid message format.\n\ 5. Optional IE incorrect - Optional IE present in the packet has\n\ invalid range of value.\n\ 6. Version not support - The GGSN Node does not support the GTP\n\ version recieved.\n\ 7. Non-charging msg in charging path.\n\ 8. Charging msg in GTP path.\n\ 9. Unknown GTP message.\n\ 10.Message too short - GTP message received is too short to contain\n\ all expected inform IE.\n\ 11.Unexpected message seen.	gprs	"Copy the error message exactly as it appears and report to your\n\ technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
GTP-0-NORESOURCE	0-Emergency	\ GSN: [node]TID: [hec][hec] APN: [chars] Reason: [chars]	Available resources exhausted to continue GGSN service because of\n the following reasons :\n 1. Number of pending signaling messages reaches limit.\n 2. Out of Memory - Insuffient in GGSN.\n 3. System failure - Permenant system failure has occured.	gprs	"1. Check whether you can increase number of PDP that can be handled\n by GGSN.\n If the problem recurs contact your technical support representative\n with the error message you got and with the output of\n 'show gprs gtp status'."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>GIP</del> PACKETPARSNGRROR	0-Emergency	\ GSN: [node]TID: [hec][hec] APN: [chars] Reason: [chars]	A PDP context activation failed at the packet parsing state for one\n of the following reasons:\n 1. Mandatory IE is missing in the PDP .\n 2. Mandatory IE incorrect - Mandatory IE has invalid range of value.\n 3. Mandatory IE out of sequence - The Mandatory IEs are not in sequence.\n 4. Invalid message format.\n 5. Optional IE incorrect - Optional IE present in the packet has\n invalid range of value.\n 6. Version not support - The GGSN Node does not support the GTP\n version recieved.\n 7. Non-charging msg in charging path.\n 8. Charging msg in GTP path.\n 9. Unknown GTP message.\n 10.Message too short - GTP message received is too short to contain\n all expected inform IE.\n 11.Unexpected message seen.	gprs	"Copy the error message exactly as it appears and report to your\n technical support representative."
<del>GIP</del> GSNSRVCLDOWN	2-Critical	GSN service [chars] changed state to [chars]	SGSN service starts or shutdown	gprs	"If this message recurs contact your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
GIP2GIRIPDPAICMNFAL	2-Critical	GTP PDP activation/update failed GSN: [node]TEID: [hec] Reason: [chars]	A PDP context activation failed	gprs	"If this message recurs contact your technical support representative."
GIP2GIRIPDPAICMNFAL	2-Critical	GTP PDP activation/update failed GSN: [node]TID: [hec][hec] Reason: [chars]	A PDP context activation failed	gprs	"If this message recurs contact your technical support representative."
GIP2INCOMPLEIECONFG	3-Error	\ APN: [chars] Reason: [chars]	A required configuration is missing	gprs	"Please make sure the missing commands are configured"
GIP4RECOVERYMEDIFF	4-Warning	\ GSN: [node]TID: [hec][hec] APN: [chars] Reason: [chars]	GGSN has recieved PDP update request with different Recovery\n\n Information Element in the same path.	gprs	"Contact your technical support representative with the error messages\n\n you got."
GTP-6-PDP_PURGED	6-Information	\ GSN: [node]TID: [hec][hec] APN: [chars] Reason: [chars]	PDP context purged because of PDP context idle timeout	-	"This is purely informational "
GULF2488-3-INITERR	3-Error	gulf2488 chip initialization failed errcode=[dec]: [chars]	required resources unavailable.	osm-choc-ds3	"Reinsert the linecard. If still fails do\n\n 'test cwtlc show seeprom red' swap hardware and\n\n Copy the error message exactly as it appears and report it to your\n\n technical support representative."
GULF2488-3-PROVERR	3-Error	gulf2488 channel provisioning failed slice:[dec] ch:[dec]: [chars]	required resources unavailable.	osm-choc-ds3	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
GULF2483UNPROVERR	3-Error	gulf2488 channel unprovisioning failed slice:[dec] ch:[dec]: [chars]	required resources unavailable.	osm-choc-ds3	LOG_STD_ACTION
GVRP3ADDRCSIRY_FAILED	3-Error	GVRP subsystem fails to add callback function [chars]	Other subsystem must have mistakenly add its own callback functions. This syslog is for debugging purpose.	gvrp	LOG_SID_NO_ACTION
GVRP3ENABLE_FAILED	3-Error	GVRP can't be enabled because [chars]	GVRP can't be enabled for some reason.	gvrp	"Action may be taken according to the given " "reason. If for instance the problem is " "due to lack of memory the user should " "add more memory to his system."
GVRP3HA_INIT_FAILED	3-Error	GVRP High Availability subsystem fails to be initialized and hence GVRP won't support HA stateful switchover.	Either GVRP CF client or GVRP RF client fails to be initialized.	gvrp	"Enter the " "<CmdBold>show redundancy clients<NoCmdBold>" "and <CmdBold>show checkpoint clients<NoCmdBold> to " "find out which client is not initialized."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
GVRP6SUBSYSNFI	3-Error	GVRP subsystem failed in initialization[chars] and GVRP won't	This is extremely unlikely to occur on a customer device. If it does occur the cause is most likely due to the lack of memory so the software failed to create data structures. User should see many	gvrp	"Most likely the system has crashed by then " "if the problem is due to lack of memory. " "If the system miraculously came up then " "user can run <CmdBold>show memory summary" " <NoCmdBold> to check the memory usage. " "Please contact the TAC with the output of " " <CmdBold>show memory summary<NoCmdBold> " " <CmdBold>show version<NoCmdBold> and " " <CmdBold>show run<NoCmdBold> and the " "associated syslog messages from the time " "of the problem."
GVRP6MODECHANGE	6-Information	The operating mode is changed to [chars] mode on interface [chars].	As a result of protocol negotiation the operating mode changed to the specified mode on the specified interface.	gvrp	LOG_SID_NO_ACTION
H323ALGCHUNKCREATE	3-Error		Chunk create failed. H323 ALG will not be able to finish initialization.	cpp-ucode	LOG_STD_ACTION
H323ALGCHUNKMEMLEAK	3-Error		Chunk memory is not being freed by H.323 ALG.	cpp-ucode	LOG_STD_ACTION



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
HACIENBOSIBYALD	3-Error	The [chars] HA client's Bulk Sync phase was unsuccessful	The nominated HA client could not get a buffer from the Checkpointing Facility CF in which to put some checkpointing	as5850-redundancy	LOG_STD_ACTION
HACIENCFRGLAED	3-Error	CF registration for the [chars] HA client failed with return code %u	The specified HA client failed to register properly with the Checkpointing Facility CF. This should not happen and suggests	as5850-redundancy	LOG_STD_ACTION
HACIENCLIENTIALD	3-Error	Initialisation of the [chars] HA client failed required fields missing	The HA client utilities code could not initialise the specified client because some fields required by the utilities code were not provided by the client. This should not happen and suggests a software problem.	as5850-redundancy	LOG_STD_ACTION
HACIENCPISIBYALD	3-Error	Delivery of a checkpointing CP message from the [chars] HA client failed	The nominated HA client on the Active unit was told by the Checkpointing Facility CF that one of its checkpointing messages	as5850-redundancy	LOG_STD_ACTION
HACIENINDEXADLURE	3-Error	Unable to add an interface index to a table: [chars] rc=[dec]	The interface index could not be added to a table. This should not normally happen and should be reported.	as5850-redundancy	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>HACLINFNOBSPROCESS</del>	3-Error	The [chars] HA client failed to create a Bulk Sync process rc %u	The nominated HA client could not create an IOS process that it needed in order to perform its Bulk Sync. This means the client's Bulk Sync did not occur. Hence the Standby unit is now out-of-sync. This should not occur and should be reported.	as5850-redundancy	LOG_STD_ACTION
<del>HACLINFNOBFUHR</del>	3-Error	The [chars] HA client failed to get a buffer len=[node]from RF	-	-	-
<del>HACLINFNOBRCOMM</del>	3-Error	The HA client '[chars]' is incompatible with the peer	The named HA client can not communicate with the client on the peer unit. These units can not be used in a warm or hot standby environment.	as5850-redundancy	LOG_STD_ACTION
<del>HACLINFNOBMSGSENT</del>	3-Error	Delivery of an RF message from the [chars] HA client failed rc=%u	The nominated HA client was told by the Redundancy Facility RF	as5850-redundancy	LOG_STD_ACTION
<del>HACLINFNOBREGFAILED</del>	3-Error	RF registration for the [chars] HA client failed with return code %u	The specified HA client failed to register properly with the Redundancy Facility RF. This should not happen and suggests	as5850-redundancy	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HACLN_BALTY_CHK_FAIL	3-Error	The HA client detected a validity check failure: [chars]	The HA client performed a validity check. This check failed and may indicate a serious problem. A reload may be required to recover from this situation	as5850-redundancy	LOG_STD_ACTION
HACLN_CF_NO_BUNDLED	4-Warning	CF failed to go into bundled mode for the [chars] HA client rc %u	The Checkpointing Facility CF did not allow the specified HA	as5850-redundancy	LOG_STD_ACTION
HACLN_IDX_COUP_FAIL	4-Warning	Unable to find an interface index: rc=[dec] [chars]	The interface index could not be found. This is a rare but possible situation and it should be able to correct itself.	as5850-redundancy	LOG_STD_NO_ACTION
HACLN_RESRC_RECOVERY_FAIL	4-Warning	Failed to create [chars] resource recovery list	The specified resource recovery list could not be created. This means resource recovery cannot be performed upon switchover which will most likely leave some of the relevant resources unusable. This should not normally happen and should be reported.	as5850-redundancy	LOG_STD_ACTION
HACLN_CFG_SYNC_BOOTVR	3-Error	Cannot communicate boot variable to standby [chars]	Active failed to send the boot variable specified to standby. A reload or a switchover operation will likely result in the standby booting a wrong image.	config-sync	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HACONFSYNCBOOTVAR	3-Error	Cannot communicate boot variable to standby [chars]	Active failed to send the boot variable specified to standby. A reload or a switchover operation will likely result in the standby booting a wrong image.	config-sync	LOG_STD_ACTION
HACONFSYNGBULKCSNC	3-Error	[chars]	Bulk config sync failure the reason for the failure will be provided in the string	config-sync	"Copy the error message exactly as it appears. Copy down the system's\n\ configuration along with any other relevant information. Contact your\n\ technical support representative for assistance."
HACONFSYNGBULKCSNC	3-Error	[chars]	Bulk config sync failure the reason for the failure will be provided in the string	config-sync	"Copy the error message exactly as it appears. Copy down the system's\n\ configuration along with any other relevant information. Contact your\n\ technical support representative for assistance."
HACONFSYNCCONREG	3-Error	Cannot communicate config register to standby	Active failed to send the config register to standby. The active and standby supervisors won't have the same config registers.	config-sync	LOG_STD_ACTION
HACONFSYNCCONREG	3-Error	Cannot communicate config register to standby	Active failed to send the config register to standby. The active and standby supervisors won't have the same config registers.	config-sync	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>HACONFSNGBIKCSNC</del>	3-Error	[chars] [[chars]]	Bulk config sync filesys failure the reason for the failure will be provided in the string	config-sync	"Copy the error message exactly as it appears. Copy down the system's\n\ configuration along with any other relevant information. Contact your\n\ technical support representative for assistance."
<del>HACONFSNGBIKCSNC</del>	3-Error	[chars] [[chars]]	Bulk config sync filesys failure the reason for the failure will be provided in the string	config-sync	"Copy the error message exactly as it appears. Copy down the system's\n\ configuration along with any other relevant information. Contact your\n\ technical support representative for assistance."
<del>HACONFSNGBIKCSNC</del>	3-Error	[chars]	General Config Sync Problem	config-sync	"Copy the error message exactly as it appears. Copy down the system's\n\ configuration along with any other relevant information. Contact your\n\ technical support representative for assistance."
<del>HACONFSNGBIKCSNC</del>	3-Error	[chars]	General Config Sync Problem	config-sync	"Copy the error message exactly as it appears. Copy down the system's\n\ configuration along with any other relevant information. Contact your\n\ technical support representative for assistance."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HA_CONFIG_SYNC3IPC	3-Error	IPC operation failed for [ [chars] ] with error code [ [chars] ]	A config sync error occurred. The details about\n what was attempted and what went wrong will be printed.	config-sync	"Copy the error message exactly as it appears. Copy down the system's\n configuration along with any other relevant information. Contact your\n technical support representative for assistance."
HA_CONFIG_SYNC3IPC	3-Error	IPC operation failed for [ [chars] ] with error code [ [chars] ]	A config sync error occurred. The details about\n what was attempted and what went wrong will be printed.	config-sync	"Copy the error message exactly as it appears. Copy down the system's\n configuration along with any other relevant information. Contact your\n technical support representative for assistance."
HA_CONFIG_SYNC3ISSU_MIU	3-Error	CONFIG SYNC Failed to get MTU Size for session[[dec]] msg_type[[dec]] MTU[[dec]] rc[[dec]]	An ISSU Config Sync failed to get Messge MTU. The details about\n what was attempted and what went wrong will be printed.	config-sync	"Copy the error message exactly as it appears. Copy down the system's\n configuration along with any other relevant information. Contact your\n technical support representative for assistance."
HA_CONFIG_SYNC3ISSU_MIU	3-Error	CONFIG SYNC Failed to get MTU Size for session[[dec]] msg_type[[dec]] MTU[[dec]] rc[[dec]]	An ISSU Config Sync failed to get Messge MTU. The details about\n what was attempted and what went wrong will be printed.	config-sync	"Copy the error message exactly as it appears. Copy down the system's\n configuration along with any other relevant information. Contact your\n technical support representative for assistance."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HACONFGSYNCISSUREG	3-Error	[chars] with error code [ [chars] ]	An ISSU Config Sync Registration Error occurred. The details about\n what was attempted and what went wrong will be printed.	config-sync	"Copy the error message exactly as it appears. Copy down the system's\n configuration along with any other relevant information. Contact your\n technical support representative for assistance."
HACONFGSYNCISSUREG	3-Error	[chars] with error code [ [chars] ]	An ISSU Config Sync Registration Error occurred. The details about\n what was attempted and what went wrong will be printed.	config-sync	"Copy the error message exactly as it appears. Copy down the system's\n configuration along with any other relevant information. Contact your\n technical support representative for assistance."
HACONFGSYNCISSUFORM	3-Error	CONFIG SYNC [chars] msg_type[[dec]] rc[[dec]]	An ISSU Config Sync failed to transform message. The details about\n what was attempted and what went wrong will be printed.	config-sync	"Copy the error message exactly as it appears. Copy down the system's\n configuration along with any other relevant information. Contact your\n technical support representative for assistance."
HACONFGSYNCISSUFORM	3-Error	CONFIG SYNC [chars] msg_type[[dec]] rc[[dec]]	An ISSU Config Sync failed to transform message. The details about\n what was attempted and what went wrong will be printed.	config-sync	"Copy the error message exactly as it appears. Copy down the system's\n configuration along with any other relevant information. Contact your\n technical support representative for assistance."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
HACONCSNGB_CCSMC	3-Error	[chars]	Line by Line sync failure what was attempted and what went wrong \n\ will be printed.	config-sync	"Copy the error message exactly as it appears. Copy down the system's\n\ configuration along with any other relevant information. Contact your\n\ technical support representative for assistance."
HACONCSNGB_CCSMC	3-Error	[chars]	Line by Line sync failure what was attempted and what went wrong \n\ will be printed.	config-sync	"Copy the error message exactly as it appears. Copy down the system's\n\ configuration along with any other relevant information. Contact your\n\ technical support representative for assistance."
HACONCSNGB_LIICY	3-Error	[chars]	Active and Standby configuration out of sync LBL\n\ what was attempted and what went wrong will be printed.	config-sync	"Copy the error message exactly as it appears. Copy down the system's\n\ configuration along with any other relevant information. Contact your\n\ technical support representative for assistance."
HACONCSNGB_LIICY	3-Error	[chars]	Active and Standby configuration out of sync LBL\n\ what was attempted and what went wrong will be printed.	config-sync	"Copy the error message exactly as it appears. Copy down the system's\n\ configuration along with any other relevant information. Contact your\n\ technical support representative for assistance."
HACONSBULKSYNCED	6-Information	Bulk Sync succeeded	Bulk Sync has succeeded	config-sync	"No action necessary"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HCONF_SYNC_BULK_SYNC_SUCCEED</del>	6-Information	Bulk Sync succeeded	Bulk Sync has succeeded	config-sync	"No action necessary"
<del>HCONF_SYNC_CFG_SYNC_SUCCEED</del>	6-Information	CONFIG SYNC : Subcode not matching for command [chars] Active subcode[0x[hec]] Standby subcode[0x[hec]]	The line by line synchronization of a command has succeeded. A command entered on the active system was successfully synchronized with the standby system. However the sub code of Parser Return Code that were returned by the Active and Standby systems were different. However the sub code of Parser Return Code that were returned by the Active and Standby systems were different.	config-sync	"Normally no action is required. If however any "problems with line by line synchronization are found "copy this message exactly as it appears on the console "or in the system log and contact your Cisco technical "support representative."
<del>HCONF_SYNC_CFG_SYNC_SUCCEED</del>	6-Information	CONFIG SYNC : Subcode not matching for command [chars] Active subcode[0x[hec]] Standby subcode[0x[hec]]	The line by line synchronization of a command has succeeded. A command entered on the active system was successfully synchronized with the standby system. However the sub code of Parser Return Code that were returned by the Active and Standby systems were different. However the sub code of Parser Return Code that were returned by the Active and Standby systems were different.	config-sync	"Normally no action is required. If however any "problems with line by line synchronization are found "copy this message exactly as it appears on the console "or in the system log and contact your Cisco technical "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HAEM#CIDN#CNS#OPEN#AL	3-Error	[chars]: Unable to open connection to CNS Event Agent: [dec]	The CNS Action process failed to open CNS handle to Event Agent.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HAEM#CIDN#CNS#OPEN#AL	3-Error	[chars]: Unable to open connection to CNS Event Agent: [dec]	The CNS Action process failed to open CNS handle to Event Agent.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HAEM#MCB#PROC#CRE#AE	3-Error	[chars]: callback handler process create failed for eid: [dec]	The process_create function reported an error trying to create the callback handler process.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HAEM#MCB#PROC#CRE#AE	3-Error	[chars]: callback handler process create failed for eid: [dec]	The process_create function reported an error trying to create the callback handler process.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM3#FMC#FH#INT	3-Error	[chars]: fh_init failed : [dec]	The strdup function reported an error.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM3#FMC#FH#INT	3-Error	[chars]: fh_init failed : [dec]	The strdup function reported an error.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HAEM#MDEMPY#Q#LE	3-Error	[chars]: The [chars] event detector I/O queue empty.	The SNMP message failed to be created	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HAEM#MDEMPY#Q#LE	3-Error	[chars]: The [chars] event detector I/O queue empty.	The SNMP message failed to be created	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HA_EMBMDCDUN_AAL</del>	3-Error	[chars]: The following oid has become unavailable: [chars]	The enqueue function reported an error.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HA_EMBMDCDUN_AAL</del>	3-Error	[chars]: The following oid has become unavailable: [chars]	The enqueue function reported an error.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HA_EMBMSMIBORR_AAL</del>	3-Error	[chars]: SNMP MIB object info replace failed [dec]	The SNMP MIB object info replace function has failed.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HA_EMBMSMIBORR_AAL</del>	3-Error	[chars]: SNMP MIB object info replace failed [dec]	The SNMP MIB object info replace function has failed.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HA_EMBMSMIBORR_AAL</del>	3-Error	[chars]: Unknown SNMP object response code [dec]	The SNMP MIB object response code is unknown.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HA_EMBMSMIBORR_AAL</del>	3-Error	[chars]: Unknown SNMP object response code [dec]	The SNMP MIB object response code is unknown.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EMBMFD_TTY_NUM	3-Error	[chars]: Error occurred while fetching TTY number.	The Embedded Event Manager failed to fetch a TTY number.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EMBMFD_TTY_NUM	3-Error	[chars]: Error occurred while fetching TTY number.	The Embedded Event Manager failed to fetch a TTY number.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HA_EM3FMPD_ACTION	3-Error	[chars]: Error occurred while performing action: [chars].	The Embedded Event Manager Policy Director failed to perform an action for the registered event.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM3FMPD_ACTION	3-Error	[chars]: Error occurred while performing action: [chars].	The Embedded Event Manager Policy Director failed to perform an action for the registered event.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM3FMPD_ACTION_NO	3-Error	[chars]: Error occurred while fetching action information: [dec].	The Embedded Event Manager applet attempted to set the state of a tracking object that does not exist.	ha/eem	"Only set the state of tracking objects that have already been " "configured in the system. If the " "message continues to occur copy the message exactly as it appears " "and report it your technical support representative."
HA_EM3FMPD_ACTION_NO	3-Error	[chars]: Error occurred while fetching action information: [dec].	The Embedded Event Manager applet attempted to set the state of a tracking object that does not exist.	ha/eem	"Only set the state of tracking objects that have already been " "configured in the system. If the " "message continues to occur copy the message exactly as it appears " "and report it your technical support representative."
HA_EM3CHKSUM_MISMATCH	3-Error	[chars]: file checksum mismatch	The checksum value of an installed policy does not match the value provided by the installation manager.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HA_EM_BFD_CHECKSUM_MISMATCH	3-Error	[chars]: file checksum mismatch	The checksum value of an installed policy does not match the value provided by the installation manager.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM_BFD_CLI_CONNECT	3-Error	Unable to establish CLI session: [chars]	Unable to establish CLI session.	ha/eem	""
HA_EM_BFD_CLI_CONNECT	3-Error	Unable to establish CLI session: [chars]	Unable to establish CLI session.	ha/eem	""
HA_EM_BFD_CLI_DISCONNECT	3-Error	Error disconnecting from CLI session: [chars]	An error occurred while disconnecting from the CLI session.	ha/eem	""
HA_EM_BFD_CLI_DISCONNECT	3-Error	Error disconnecting from CLI session: [chars]	An error occurred while disconnecting from the CLI session.	ha/eem	""
HA_EM_BFD_CLI_NOTIFY	3-Error	Error attempting to access an unopened CLI session: [chars]	An error occurred attempting to access an unopened CLI session: [chars]	ha/eem	""
HA_EM_BFD_CLI_NOTIFY	3-Error	Error attempting to access an unopened CLI session: [chars]	An error occurred attempting to access an unopened CLI session: [chars]	ha/eem	""
HA_EM_BFD_CLI_READ	3-Error	Unable to read CLI response: [chars]	Unable to read CLI response.	ha/eem	""
HA_EM_BFD_CLI_READ	3-Error	Unable to read CLI response: [chars]	Unable to read CLI response.	ha/eem	""
HA_EM_BFD_CLI_WRITE	3-Error	Unable to send CLI command: [chars]	Unable to send CLI command.	ha/eem	""
HA_EM_BFD_CLI_WRITE	3-Error	Unable to send CLI command: [chars]	Unable to send CLI command.	ha/eem	""

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HA_EM3FMPD_ERROR	3-Error	Error executing applet [chars] statement [chars]	The Embedded Event Manager policy director found an error when processing an applet.	ha/eem	"Check syntax of applet statement. If the " "message continues to occur copy the message exactly as it appears " "and report it your technical support representative."
HA_EM3FMPD_ERROR	3-Error	Error executing applet [chars] statement [chars]	The Embedded Event Manager policy director found an error when processing an applet.	ha/eem	"Check syntax of applet statement. If the " "message continues to occur copy the message exactly as it appears " "and report it your technical support representative."
<del>HA_EM3FMPD_ERROR</del>	3-Error	[chars]: failed to execute callback	Failed to execute callback routine.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HA_EM3FMPD_ERROR</del>	3-Error	[chars]: failed to execute callback	Failed to execute callback routine.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM3FMPD_FH_INIT	3-Error	[chars]: could not initialize Embedded Event Manager service: [chars]	An internal error was detected when initializing Embedded Event Manager service.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM3FMPD_FH_INIT	3-Error	[chars]: could not initialize Embedded Event Manager service: [chars]	An internal error was detected when initializing Embedded Event Manager service.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HA_EM3FMPD_ERROR</del>	3-Error	[chars]: failed to create an IPC port: [chars]	Embedded Event Manager failed to create an IPC port.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HA_EM3EMD_IPC_CREATE	3-Error	[chars]: failed to create an IPC port: [chars]	Embedded Event Manager failed to create an IPC port.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM3EMD_IPC_OPEN	3-Error	[chars]: failed to open an IPC port: [chars]	Embedded Event Manager failed to open an IPC port.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM3EMD_IPC_OPEN	3-Error	[chars]: failed to open an IPC port: [chars]	Embedded Event Manager failed to open an IPC port.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM3EMD_IPC_REGISTER	3-Error	[chars]: failed to register an IPC port: [chars]	Embedded Event Manager failed to register an IPC port.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM3EMD_IPC_REGISTER	3-Error	[chars]: failed to register an IPC port: [chars]	Embedded Event Manager failed to register an IPC port.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM3EMD_NO_PROC	3-Error	[chars]: Failed to create process	The process create function reports an error	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM3EMD_NO_PROC	3-Error	[chars]: Failed to create process	The process create function reports an error	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM3EMD_NO_ID	3-Error	[chars]: No such event id found.	An internal software error occurred.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
HA_EM3FMPD_NOEID	3-Error	[chars]: No such event id found.	An internal software error occurred.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM3FMPD_NOESD	3-Error	[chars]: No such event spec id found.	The Embedded Event Manager Policy Director could not find the event for the event spec. ID.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM3FMPD_NOESD	3-Error	[chars]: No such event spec id found.	The Embedded Event Manager Policy Director could not find the event for the event spec. ID.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM3FMPD_PROCESS_XML	3-Error	[chars]: error processing xml buffer	An error occurred processing the event publish information xml buffer.	ha/eem	"Copy the message exactly as it appears and report it your technical\n\n support representative."
HA_EM3FMPD_PROCESS_XML	3-Error	[chars]: error processing xml buffer	An error occurred processing the event publish information xml buffer.	ha/eem	"Copy the message exactly as it appears and report it your technical\n\n support representative."
HA_EM3FMPD_QUEUE_INIT	3-Error	[chars]: could not initialize queue	An internal error was detected when initializing Embedded Event Manager queue.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM3FMPD_QUEUE_INIT	3-Error	[chars]: could not initialize queue	An internal error was detected when initializing Embedded Event Manager queue.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM3FMPD_REQINFO	3-Error	[chars]: Error attempting to fetch event information: [chars].	The Embedded Event Manager Policy Director failed to receive event info for a callback.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
HA_EMBFMPD_REQNFO	3-Error	[chars]: Error attempting to fetch event information: [chars].	The Embedded Event Manager Policy Director failed to receive event info for a callback.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EMBFMPD_SET_NFO	3-Error	[chars]: Error occurred while fetching variable information: [dec].	The Embedded Event Manager Policy Director was unable to set the variable with the requested information.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EMBFMPD_SET_NFO	3-Error	[chars]: Error occurred while fetching variable information: [dec].	The Embedded Event Manager Policy Director was unable to set the variable with the requested information.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM3FMPD_SMIP	3-Error	Error occurred when sending mail to SMTP server: [chars] : [chars]	An unexpected error occurred when sending mail to SMTP server.	ha/eem	""
HA_EM3FMPD_SMIP	3-Error	Error occurred when sending mail to SMTP server: [chars] : [chars]	An unexpected error occurred when sending mail to SMTP server.	ha/eem	""
HA_EMBFMPD_SMIP_SEND	3-Error	Unable to send notification using all SMTP servers	An unexpected error occurred when sending mail to all SMTP servers.	ha/eem	""
HA_EMBFMPD_SMIP_SEND	3-Error	Unable to send notification using all SMTP servers	An unexpected error occurred when sending mail to all SMTP servers.	ha/eem	""

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>HAEM#MDUNKNOWN#EV</del>	3-Error	[chars]: could not find environment variable: [chars]	The Embedded Event Manager policy director could not find the environment variable specified in the action message.	ha/eem	"Only use well known Embedded Event Manager environment variables. If the "message continues to occur copy the message exactly as it appears "and report it your technical support representative."
<del>HAEM#MDUNKNOWN#EV</del>	3-Error	[chars]: could not find environment variable: [chars]	The Embedded Event Manager policy director could not find the environment variable specified in the action message.	ha/eem	"Only use well known Embedded Event Manager environment variables. If the "message continues to occur copy the message exactly as it appears "and report it your technical support representative."
<del>HAEM#MDUNKNOWN#E</del>	3-Error	[chars]: Unknown event type found in applet.	The Embedded Event Manager applet had an unknown event type.	ha/eem	"Copy the message exactly as it appears and report it your technical "support representative."
<del>HAEM#MDUNKNOWN#E</del>	3-Error	[chars]: Unknown event type found in applet.	The Embedded Event Manager applet had an unknown event type.	ha/eem	"Copy the message exactly as it appears and report it your technical "support representative."
<del>HAEM#MDWRONG#E</del>	3-Error	[chars]: Published event type does not match event spec.	The Embedded Event Manager Policy Director detected a mis-match in event type between the published event and the event spec.	ha/eem	"Copy the message exactly as it appears and report it your technical "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HA_EM3FMS_WRONGTYPE	3-Error	[chars]: Published event type does not match event spec.	The Embedded Event Manager Policy Director detected a mis-match in event type between the published event and the event spec.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM3FMS_CNS_FAIL	3-Error	[chars]: Failed to perform CNS action: [chars]	The Embedded Event Manager failed attempting to send a CNS message.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM3FMS_CNS_FAIL	3-Error	[chars]: Failed to perform CNS action: [chars]	The Embedded Event Manager failed attempting to send a CNS message.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM3FMS_EMPTY_QUEUE	3-Error	[chars]: The I/O queue empty.	The I/O queue is empty at this point and should not be.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM3FMS_EMPTY_QUEUE	3-Error	[chars]: The I/O queue empty.	The I/O queue is empty at this point and should not be.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM3FMS_QUEUE_FULL	3-Error	[chars]: The Unable to enqueue packet onto queue.	The queue is not in a state to handle enqueues.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM3FMS_QUEUE_FULL	3-Error	[chars]: The Unable to enqueue packet onto queue.	The queue is not in a state to handle enqueues.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM3FMS_NO_TRACK	3-Error	Use of the \track\ keyword in the correlate statement is not supported in this image.	The Embedded Event Manager Track ED is not supported in this image.	ha/eem	"Track ED is not available in this image"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
HA_EMBEEMS_NO_TRACK	3-Error	Use of the \track\ keyword in the correlate statement is not supported in this image.	The Embedded Event Manager Track ED is not supported in this image.	ha/eem	"Track ED is not available in this image"
HA_EMBEEMSPOLYCHECKSUM	3-Error	[chars]: Checksum error for policy [chars] - this policy will not be run	The checksum computed for the specified policy does not match the original checksum computed when the policy was registered.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EMBEEMSPOLYCHECKSUM	3-Error	[chars]: Checksum error for policy [chars] - this policy will not be run	The checksum computed for the specified policy does not match the original checksum computed when the policy was registered.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EMBEEMSPOLYLOOKUP	3-Error	[chars]: Failed to look up in the table the registration specification for policy [chars].	The realloc function reported an error.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EMBEEMSPOLYLOOKUP	3-Error	[chars]: Failed to look up in the table the registration specification for policy [chars].	The realloc function reported an error.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EMBEEMSQUEUE_NT	3-Error	[chars]: The Unable to initialize queue.	An attempt to publish an event failed because there is no more room in the publish queue.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EMBEEMSQUEUE_NT	3-Error	[chars]: The Unable to initialize queue.	An attempt to publish an event failed because there is no more room in the publish queue.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HAEMFSSWICNCR/ACNE</del>	3-Error	[chars]: This processor is not in ACTIVE state state = [dec]. Switchover must be performed on ACTIVE processor.	Switchovers must occur on ACTIVE unit not STANDBY unit.	ha/eem	""
<del>HAEMFSSWICNCR/ACNE</del>	3-Error	[chars]: This processor is not in ACTIVE state state = [dec]. Switchover must be performed on ACTIVE processor.	Switchovers must occur on ACTIVE unit not STANDBY unit.	ha/eem	""
<del>HAEMFSSMPCOIKT/VALE</del>	4-Warning	[chars]: SNMP MIB object value not provided	The SNMP MIB object value is not provided for substitution.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HAEMFSSMPCOIKT/VALE</del>	4-Warning	[chars]: SNMP MIB object value not provided	The SNMP MIB object value is not provided for substitution.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HAEMFMDLXGMECH/ACNE</del>	4-Warning	Cisco Signature not found or invalid. [chars] has been registered as a user policy.	Cisco Signature not found or invalid.	ha/eem	"Sign with Cisco signature."
<del>HAEMFMDLXGMECH/ACNE</del>	4-Warning	Cisco Signature not found or invalid. [chars] has been registered as a user policy.	Cisco Signature not found or invalid.	ha/eem	"Sign with Cisco signature."
<del>HAEMFMDDEMENT/CREAIE</del>	4-Warning	[chars]: failed to create an event: [chars]	Failed to create an Embedded Event Manager event.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HAEMFMDDEMENT/CREAIE</del>	4-Warning	[chars]: failed to create an event: [chars]	Failed to create an Embedded Event Manager event.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HAEM4EMD_EVENT_REG	4-Warning	[chars]: failed to register an event: [chars]	Failed to register an Embedded Event Manager event.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HAEM4EMD_EVENT_REG	4-Warning	[chars]: failed to register an event: [chars]	Failed to register an Embedded Event Manager event.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HAEM4EMD_IPC_GET_PAK	4-Warning	[chars]: failed to allocate an IPC buffer	Embedded Event Manager failed to allocate a buffer from IPC.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HAEM4EMD_IPC_GET_PAK	4-Warning	[chars]: failed to allocate an IPC buffer	Embedded Event Manager failed to allocate a buffer from IPC.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HAEM4EMD_IPC_SEND_MSG	4-Warning	[chars]: failed to send an IPC message: [chars]	Embedded Event Manager failed to send a message through IPC.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HAEM4EMD_IPC_SEND_MSG	4-Warning	[chars]: failed to send an IPC message: [chars]	Embedded Event Manager failed to send a message through IPC.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HAEM4EMD_NO_ACTION	4-Warning	No action configured for applet [chars]	No action has been configured for this applet.	ha/eem	"Configure at least one action for this applet."
HAEM4EMD_NO_ACTION	4-Warning	No action configured for applet [chars]	No action has been configured for this applet.	ha/eem	"Configure at least one action for this applet."
HAEM4EMD_NO_EVENT	4-Warning	No event configured for applet [chars]	No event has been configured for this applet.	ha/eem	"Configure an event for this applet."
HAEM4EMD_NO_EVENT	4-Warning	No event configured for applet [chars]	No event has been configured for this applet.	ha/eem	"Configure an event for this applet."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HAEMEMDNOIAGNAME</del>	4-Warning	[chars]: No tag [chars] found corresponding to this event publish.	The Embedded Event Manager policy director could not associate the tagname with a published event.	ha/eem	"Only use tagnames in the action info type event reqinfo command which correspond to the published event."
<del>HAEMEMDNOIAGNAME</del>	4-Warning	[chars]: No tag [chars] found corresponding to this event publish.	The Embedded Event Manager policy director could not associate the tagname with a published event.	ha/eem	"Only use tagnames in the action info type event reqinfo command which correspond to the published event."
<del>HAEMEMNOCHDTHRD</del>	4-Warning	No threads are configured to service event class [chars]	The Embedded Event Manager has no scheduler threads to service this event class.	ha/eem	"Configure threads for the event class using the 'event manager scheduler' command."
<del>HAEMEMNOCHDTHRD</del>	4-Warning	No threads are configured to service event class [chars]	The Embedded Event Manager has no scheduler threads to service this event class.	ha/eem	"Configure threads for the event class using the 'event manager scheduler' command."
<del>HAEMEMDCONEXTRM</del>	6-Information	Failed to retrieve context for key [chars]: [chars]	Failed to context retrieve variable information for event.	ha/eem	"Ensure context information with the given key is saved. " "If the message continues to occur copy the message exactly as it appears " "and report it your technical support representative."
<del>HAEMEMDCONEXTRM</del>	6-Information	Failed to retrieve context for key [chars]: [chars]	Failed to context retrieve variable information for event.	ha/eem	"Ensure context information with the given key is saved. " "If the message continues to occur copy the message exactly as it appears " "and report it your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>HAEM</del> MDCONTEXTSAE	6-Information	Failed to save variable context for key [chars]: [chars]	Failed to context save variable information for event.	ha/eem	"Ensure context information with the same key is not already saved. " "If the message continues to occur copy the message exactly as it appears " "and report it your technical support representative."
<del>HAEM</del> MDCONTEXTSAE	6-Information	Failed to save variable context for key [chars]: [chars]	Failed to context save variable information for event.	ha/eem	"Ensure context information with the same key is not already saved. " "If the message continues to occur copy the message exactly as it appears " "and report it your technical support representative."
<del>HAEM</del> MDMEZERO	6-Information	Invalid operand in arithmetic division cannot divide by zero	Arithmetic division does not allow divide by zero.	ha/eem	"Ensure denominator provided to division action is non-zero."
<del>HAEM</del> MDMEZERO	6-Information	Invalid operand in arithmetic division cannot divide by zero	Arithmetic division does not allow divide by zero.	ha/eem	"Ensure denominator provided to division action is non-zero."
<del>HAEM</del> MEEMCONG	6-Information	[chars]: [chars]	The Embedded Event Manager reports an error on Event Manager configuration	ha/eem	"Check the EEM applet or policy configuration"
<del>HAEM</del> MEEMCONG	6-Information	[chars]: [chars]	The Embedded Event Manager reports an error on Event Manager configuration	ha/eem	"Check the EEM applet or policy configuration"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HA_EEMD_OBRAD_NAD	6-Information	Invalid operand in action expected value within range [node] to [node] received: [chars]	Arithmetic actions only accept valid long integer values.	ha/eem	"Ensure value provided to action is long integer."
HA_EEMD_OBRAD_NAD	6-Information	Invalid operand in action expected value within range [node] to [node] received: [chars]	Arithmetic actions only accept valid long integer values.	ha/eem	"Ensure value provided to action is long integer."
HA_EEMD_RECCOMP	6-Information	Error compiling regular expression: [chars]	An error was encountered when compiling the given regular expression.	ha/eem	"Check syntax of regular expression pattern. If the "message continues to occur copy the message exactly as it appears "and report it your technical support representative."
HA_EEMD_RECCOMP	6-Information	Error compiling regular expression: [chars]	An error was encountered when compiling the given regular expression.	ha/eem	"Check syntax of regular expression pattern. If the "message continues to occur copy the message exactly as it appears "and report it your technical support representative."
HA_EEMD_SMPDUPCD	6-Information	[chars]: duplicate oid	The oid is a duplicate	ha/eem	"Check the EEM applet or policy configuration"
HA_EEMD_SMPDUPCD	6-Information	[chars]: duplicate oid	The oid is a duplicate	ha/eem	"Check the EEM applet or policy configuration"
HA_EEMD_SMPNOVAR	6-Information	[chars]: No variable [chars]	The variable is not defined.	ha/eem	"Check the EEM applet or policy configuration"
HA_EEMD_SMPNOVAR	6-Information	[chars]: No variable [chars]	The variable is not defined.	ha/eem	"Check the EEM applet or policy configuration"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>HAEMDSMPTRVARAD</del>	6-Information	[chars]: Error adding trapvar to queue [chars]	The trap variable was not added to the queue.	ha/eem	"Check the EEM applet or policy configuration"
<del>HAEMDSMPTRVARAD</del>	6-Information	[chars]: Error adding trapvar to queue [chars]	The trap variable was not added to the queue.	ha/eem	"Check the EEM applet or policy configuration"
<del>HAEMDSMPVASEXEDD</del>	6-Information	[chars]: number of values exceeded [dec]	The number of values per variable exceeded the maximum	ha/eem	"Check the EEM applet or policy configuration"
<del>HAEMDSMPVASEXEDD</del>	6-Information	[chars]: number of values exceeded [dec]	The number of values per variable exceeded the maximum	ha/eem	"Check the EEM applet or policy configuration"
<del>HAEMDSWICHARDWE</del>	6-Information	[chars]: Policy has requested a hardware switchover	An Embedded Event Manager policy requested that a hardware switchover occur.	ha/eem	"None"
<del>HAEMDSWICHARDWE</del>	6-Information	[chars]: Policy has requested a hardware switchover	An Embedded Event Manager policy requested that a hardware switchover occur.	ha/eem	"None"
<del>HAEMDUPDPCYCOY</del>	6-Information	Policy update has copied [dec] bytes from [chars] to [chars]	An EEM policy has been copied as a result of an event manager update command	ha/eem	""
<del>HAEMDUPDPCYCOY</del>	6-Information	Policy update has copied [dec] bytes from [chars] to [chars]	An EEM policy has been copied as a result of an event manager update command	ha/eem	""
<del>HAEMDUPDPCYCSER</del>	6-Information	Policy update has successfully re-registered policy [chars]	An EEM policy has been successfully re-registered as a result of an event manager update command	ha/eem	""

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HAEMUPPOLYRGR</del>	6-Information	Policy update has successfully re-registered policy [chars]	An EEM policy has been successfully re-registered as a result of an event manager update command	ha/eem	""
<del>HAEMUPPOLYRGR</del>	6-Information	Policy update has failed to register policy [chars] [chars]	An EEM policy has failed to be registered as a result of an event manager update command	ha/eem	""
<del>HAEMUPPOLYRGR</del>	6-Information	Policy update has failed to register policy [chars] [chars]	An EEM policy has failed to be registered as a result of an event manager update command	ha/eem	""
<del>HAEMUPPOLYRGR</del>	6-Information	Policy update has failed to unregister policy [chars] [chars]	An EEM policy has failed to be unregistered as a result of an event manager update command	ha/eem	""
<del>HAEMUPPOLYRGR</del>	6-Information	Policy update has failed to unregister policy [chars] [chars]	An EEM policy has failed to be unregistered as a result of an event manager update command	ha/eem	""
HAEM6M5LASTPOLY	6-Information	[chars]: Cannot change a class [chars] [chars] to priority LAST. LAST is for default policies only	Embedded Event Manager Scheduler Command can only change a default policy to priority LAST.	ha/eem	"The command is applicable to default policies only."
HAEM6M5LASTPOLY	6-Information	[chars]: Cannot change a class [chars] [chars] to priority LAST. LAST is for default policies only	Embedded Event Manager Scheduler Command can only change a default policy to priority LAST.	ha/eem	"The command is applicable to default policies only."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HAEM#MSMODYLASTPOLICY</del>	6-Information	[chars]: Cannot modify a LAST policy to class [chars]. LAST policies are for class default only.	Embedded Event Manager LAST policy is for default class only.	ha/eem	"The command is applicable to default policies only."
<del>HAEM#MSMODYLASTPOLICY</del>	6-Information	[chars]: Cannot modify a LAST policy to class [chars]. LAST policies are for class default only.	Embedded Event Manager LAST policy is for default class only.	ha/eem	"The command is applicable to default policies only."
<del>HAEM#MSMODYPOLICY</del>	6-Information	[chars]: unable to modify the policy to class [chars]: scheduling rule unavailable.	There is no scheduler rule configured to service this event class.	ha/eem	"Please configure a scheduler rule before modifying the event."
<del>HAEM#MSMODYPOLICY</del>	6-Information	[chars]: unable to modify the policy to class [chars]: scheduling rule unavailable.	There is no scheduler rule configured to service this event class.	ha/eem	"Please configure a scheduler rule before modifying the event."
<del>HAEM#MSRUNNGPOLICY</del>	6-Information	[chars]: cannot [chars] a running policy with jobid [dec].	Embedded Event Manager Scheduler Command cannot change a running policy.	ha/eem	"The command is not applicable to a running policy."
<del>HAEM#MSRUNNGPOLICY</del>	6-Information	[chars]: cannot [chars] a running policy with jobid [dec].	Embedded Event Manager Scheduler Command cannot change a running policy.	ha/eem	"The command is not applicable to a running policy."
<del>HAEM#SSWICH_HARWARE</del>	6-Information	[chars]: Policy has requested a hardware switchover	An Embedded Event Manager policy requested that a hardware switchover occur.	ha/eem	""
<del>HAEM#SSWICH_HARWARE</del>	6-Information	[chars]: Policy has requested a hardware switchover	An Embedded Event Manager policy requested that a hardware switchover occur.	ha/eem	""

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HA_EM/ACNS/AGNUM</del>	7-Debug	[chars]: CNS Event Agent not available: [dec]	The enqueue function reported an error.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HA_EM/ACNS/AGNUM</del>	7-Debug	[chars]: CNS Event Agent not available: [dec]	The enqueue function reported an error.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HA_EM/ACION/WB/CREATE</del>	7-Debug	[chars]: create_watched_boolean failed: [chars]	The create_watched_boolean function reported an error trying to create the watched boolean.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HA_EM/ACION/WB/CREATE</del>	7-Debug	[chars]: create_watched_boolean failed: [chars]	The create_watched_boolean function reported an error trying to create the watched boolean.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HA_EM/ACION/WB/DELETE</del>	7-Debug	[chars]: delete_watched_boolean failed: [chars]	The delete_watched_boolean function reported an error trying to delete the watched boolean.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HA_EM/ACION/WB/DELETE</del>	7-Debug	[chars]: delete_watched_boolean failed: [chars]	The delete_watched_boolean function reported an error trying to delete the watched boolean.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HA_EM/AMC/INV_REPLY</del>	7-Debug	[chars]: Application client library unable to handle message receive.	The CNS Action process failed to set the restart callback.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HA_EM/AMC/INV_REPLY</del>	7-Debug	[chars]: Application client library unable to handle message receive.	The CNS Action process failed to set the restart callback.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HA_EM#MCRGCB_RISE	7-Debug	[chars]: Unable to locate reg callback entry for pulse code [dec]	The registration callback handler was unable to validate the pulse code received.	ha/eem	"The pthread_create function reported an error."
HA_EM#MCRGCB_RISE	7-Debug	[chars]: Unable to locate reg callback entry for pulse code [dec]	The registration callback handler was unable to validate the pulse code received.	ha/eem	"The pthread_create function reported an error."
HA_EM#MCRGCB_SEND	7-Debug	[chars]: Unable to send response for HIMG_CALLBACK_DONE [chars]	The registration callback handler was unable to send the HIMG_CALLBACK_DONE message to the Embedded Event Manager Server.	ha/eem	"The pthread_create function reported an error."
HA_EM#MCRGCB_SEND	7-Debug	[chars]: Unable to send response for HIMG_CALLBACK_DONE [chars]	The registration callback handler was unable to send the HIMG_CALLBACK_DONE message to the Embedded Event Manager Server.	ha/eem	"The pthread_create function reported an error."
HA_EM#MMD_DE_FEICH	7-Debug	[chars]: [chars][[dec]]	Internal error. The event detector has failed to fetch a data element from the statistics data engine.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM#MMD_DE_FEICH	7-Debug	[chars]: [chars][[dec]]	Internal error. The event detector has failed to fetch a data element from the statistics data engine.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM#MMD_HST_QRR	7-Debug	[chars]	Internal error. The event detector has failed to get a free history list entry.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM#MMD_HST_QRR	7-Debug	[chars]	Internal error. The event detector has failed to get a free history list entry.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HA_EM#M#DN#CMP#REP</del>	7-Debug	[chars]: invalid comparison operator: [dec]	Internal error. The value comparison operator is invalid or not supported.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HA_EM#M#DN#CMP#REP</del>	7-Debug	[chars]: invalid comparison operator: [dec]	Internal error. The value comparison operator is invalid or not supported.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HA_EM#M#DN#S#AST#ME</del>	7-Debug	[chars]: invalid statistics value type: [dec]	Internal error. The statistics data type is invalid or not supported.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HA_EM#M#DN#S#AST#ME</del>	7-Debug	[chars]: invalid statistics value type: [dec]	Internal error. The statistics data type is invalid or not supported.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HA_EM#M#DN#INV#TM</del>	7-Debug	[chars]: invalid timer: type=[dec] timer=%p	Internal error. The timer value is invalid or not as expected.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HA_EM#M#DN#INV#TM</del>	7-Debug	[chars]: invalid timer: type=[dec] timer=%p	Internal error. The timer value is invalid or not as expected.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HA_EM#M#DN#INV#TY#E</del>	7-Debug	[chars]: invalid timer type: [dec]	Internal error. The timer type is invalid or not supported.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HA_EM#M#DN#INV#TY#E</del>	7-Debug	[chars]: invalid timer type: [dec]	Internal error. The timer type is invalid or not supported.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HA_EM/7MDMET_RBD	7-Debug	[chars]: [chars]	Internal error. The event detector has failed to rebuild the metric list from the checkpointed records.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM/7MDMET_RBD	7-Debug	[chars]: [chars]	Internal error. The event detector has failed to rebuild the metric list from the checkpointed records.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM/7MDSNDR_MIR	7-Debug	[chars]: [dec]	The event detector has exceeded its maximum number of retries to send a pulse to the embedded event manager to notify of an event publish.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM/7MDSNDR_MIR	7-Debug	[chars]: [dec]	The event detector has exceeded its maximum number of retries to send a pulse to the embedded event manager to notify of an event publish.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM/7MDCE_CREATE	7-Debug	[chars]: could not create an occurrence entry	Internal error. The event detector has failed to create an entry for the matched occurrence list.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM/7MDCE_CREATE	7-Debug	[chars]: could not create an occurrence entry	Internal error. The event detector has failed to create an entry for the matched occurrence list.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HAEM#MDCEREMO</del>	7-Debug	[chars]: could not remove an occurrence entry	Internal error. The event detector has failed to remove an entry for the matched occurrence list.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HAEM#MDCEREMO</del>	7-Debug	[chars]: could not remove an occurrence entry	Internal error. The event detector has failed to remove an entry for the matched occurrence list.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HAEM#MDRBTMAIOC</del>	7-Debug	[chars]: Unable to allocate memory for event publish timer block	Internal error. The event detector has failed to allocate memory for the event publish timer block.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HAEM#MDRBTMAIOC</del>	7-Debug	[chars]: Unable to allocate memory for event publish timer block	Internal error. The event detector has failed to allocate memory for the event publish timer block.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HAEM#MDSMPADRUGL</del>	7-Debug	[chars]: Illegal SNMP address type	The SNMP address is illegal.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HAEM#MDSMPADRUGL</del>	7-Debug	[chars]: Illegal SNMP address type	The SNMP address is illegal.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HAEM#MDSMPADRIV6</del>	7-Debug	[chars]: SNMP IPV6 address is not supported	The IPV6 address is not supported.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HAEM#MDSMPADRIV6</del>	7-Debug	[chars]: SNMP IPV6 address is not supported	The IPV6 address is not supported.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>HAEMFDSMBIDPDAED</del>	7-Debug	[chars]: SNMP build pdu failed	The SNMP pdu build has failed.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HAEMFDSMBIDPDAED</del>	7-Debug	[chars]: SNMP build pdu failed	The SNMP pdu build has failed.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HAEMFDSMPRCOE</del>	7-Debug	[chars]: [chars]	The SNMP error code.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HAEMFDSMPRCOE</del>	7-Debug	[chars]: [chars]	The SNMP error code.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HAEMFDSMKEPDAED</del>	7-Debug	[chars]: SNMP make pdu failed	The SNMP pdu make has failed.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HAEMFDSMKEPDAED</del>	7-Debug	[chars]: SNMP make pdu failed	The SNMP pdu make has failed.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HAEMFDSMPCDNAD</del>	7-Debug	[chars]: Invalid SNMP oid length [dec]	The SNMP oid has invalid length	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HAEMFDSMPCDNAD</del>	7-Debug	[chars]: Invalid SNMP oid length [dec]	The SNMP oid has invalid length	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>HAEMFMDSNMPREQAED</del>	7-Debug	[chars]: SNMP request failed	The SNMP request has failed.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HAEMFMDSNMPREQAED</del>	7-Debug	[chars]: SNMP request failed	The SNMP request has failed.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HAEMFMDSNMPRESPCNEL</del>	7-Debug	[chars]: SNMP response cancelled	The SNMP response has been cancelled.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HAEMFMDSNMPRESPCNEL</del>	7-Debug	[chars]: SNMP response cancelled	The SNMP response has been cancelled.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HAEMFMDSNMPREQIMTY</del>	7-Debug	[chars]: SNMP proxy exec got event but queue is empty	The SNMP proxy got event but the queue is empty.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HAEMFMDSNMPREQIMTY</del>	7-Debug	[chars]: SNMP proxy exec got event but queue is empty	The SNMP proxy got event but the queue is empty.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HAEMFMDSNMPRESPIMOUT</del>	7-Debug	[chars]: SNMP response has timed out	The SNMP response has error.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HAEMFMDSNMPRESPIMOUT</del>	7-Debug	[chars]: SNMP response has timed out	The SNMP response has error.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HAEMESMUNKNOWNE</del>	7-Debug	[chars]: Unknown SNMP operation or response type [dec]	The operation or response type is unknown.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HAEMESMUNKNOWNE</del>	7-Debug	[chars]: Unknown SNMP operation or response type [dec]	The operation or response type is unknown.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HAEMESMPVBNDA</del>	7-Debug	[chars]: Unable to create a SNMP varbind	The oid failed to make into a SNMP varbind	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HAEMESMPVBNDA</del>	7-Debug	[chars]: Unable to create a SNMP varbind	The oid failed to make into a SNMP varbind	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HAEMEMDMLLEAFNBW</del>	7-Debug	[chars]: could not create a leaf timer	Internal error. The event detector has failed to create a managed leaf timer.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HAEMEMDMLLEAFNBW</del>	7-Debug	[chars]: could not create a leaf timer	Internal error. The event detector has failed to create a managed leaf timer.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HAEMEMDEVENTTYPE</del>	7-Debug	[chars]: unknown event type [dec]	An unknown Embedded Event Manager even type was detected.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
<del>HAEMEMDEVENTTYPE</del>	7-Debug	[chars]: unknown event type [dec]	An unknown Embedded Event Manager even type was detected.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
HA_EM#EMD_FORMATIME	7-Debug	[chars]: error attempting to format time string	Format time failure.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM#EMD_FORMATIME	7-Debug	[chars]: error attempting to format time string	Format time failure.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM#EMD_LASTPOLICY	7-Debug	[chars]: invalid last policy name replied [chars]	Internal error. The last policy name the script director replied to show fm policy registered command is an invalid policy name.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM#EMD_LASTPOLICY	7-Debug	[chars]: invalid last policy name replied [chars]	Internal error. The last policy name the script director replied to show fm policy registered command is an invalid policy name.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM#EMD_NO_MEM	7-Debug	[chars]: not enough memory: [chars]	Allocating memory failed due to a low-memory condition.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM#EMD_NO_MEM	7-Debug	[chars]: not enough memory: [chars]	Allocating memory failed due to a low-memory condition.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM#EMD_SWICHIHAL	7-Debug	[chars]: The system is unable to switch to standby processor. Switchover cancelled.	Switchovers must occur when STANDBY is available and ready.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM#EMD_SWICHIHAL	7-Debug	[chars]: The system is unable to switch to standby processor. Switchover cancelled.	Switchovers must occur when STANDBY is available and ready.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HA_EM7#MS_FDC_OPEN	7-Debug	[chars]: Failed to open Event Detector context control block	The malloc function reported an error.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM7#MS_FDC_OPEN	7-Debug	[chars]: Failed to open Event Detector context control block	The malloc function reported an error.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM#MSN_ARGSING	7-Debug	[chars]: Invalid argument string: [chars]	The fh_hash_md5_fd function reported the specified error.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM#MSN_ARGSING	7-Debug	[chars]: Invalid argument string: [chars]	The fh_hash_md5_fd function reported the specified error.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM#MSNULLSRPNAME	7-Debug	[chars]: The script name is NULL	An invalid script name was passed as an argument into the specified function.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM#MSNULLSRPNAME	7-Debug	[chars]: The script name is NULL	An invalid script name was passed as an argument into the specified function.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_EM#MSPOLICY_EXEC	7-Debug	[chars]: Policy execution [chars]	An Embedded Event Manager policy requested that the system be reloaded.	ha/eem	""
HA_EM#MSPOLICY_EXEC	7-Debug	[chars]: Policy execution [chars]	An Embedded Event Manager policy requested that the system be reloaded.	ha/eem	""
HA_EM7#MSWICHI_FAIL	7-Debug	[chars]: The system is unable to switch to standby processor. Switchover cancelled.	Switchovers must occur when STANDBY is available and ready.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HA_EEM7#MS_SWI#CH#F#AL	7-Debug	[chars]: The system is unable to switch to standby processor. Switchover cancelled.	Switchovers must occur when STANDBY is available and ready.	ha/eem	"Copy the message exactly as it appears and report it your technical " "support representative."
HA_RX#2#AN#DR#R#E#D	2-Critical	[chars]: unable to find [chars] service	HA could not find the specified service	cpp-ucode	LOG_STD_ACTION
HA_RX#2#AS#D#A#I#C#E#D	2-Critical	[chars]: unable to allocate entry for [chars] binding	HA could not allocate a control block to manage the service	cpp-ucode	LOG_STD_ACTION
HA_RX#3#AD#PS#R#E#D#X	3-Error	[chars]: Duplicate service index: [dec] on bind	Duplicate service index on ha service bind	cpp-ucode	LOG_STD_ACTION
HA_RX#3#AD#PS#R#E#D#E	3-Error	[chars]: Duplicate service name: [chars] on bind	Duplicate service name on ha service bind	cpp-ucode	LOG_STD_ACTION
HA_RX#3#AN#DR#R#E#D#T	3-Error	[chars]: Unknown request: [dec]	HA control services received unknown request	cpp-ucode	LOG_STD_ACTION
HA_RX#3#AN#DR#R#E#D#K	3-Error	Malformed packet bad [chars] [hec]	HA Sync packet was malformed may not have been fully processed	cpp-ucode	LOG_STD_ACTION
HA_RX#3#AN#DR#R#E#D#D	3-Error	-	Allocation of IPC packet failed.	cpp-ucode	LOG_STD_ACTION
HA_RX#4#A#K#T#R#R#C#R	4-Warning	Error processing HA sync pkt rg [hec]	HA Sync packet was dropped while processing	cpp-ucode	LOG_STD_ACTION
HA_RX#4#A#K#T#R#R#C#E	4-Warning	Sync msg for unknown service [hec] rg [hec]	HA Sync received a message for an unknown service	cpp-ucode	LOG_STD_ACTION
HA_TLV-2-LDP	2-Critical	ERRMSG_NOFLAGS	-	-	-
HA_TLV-2-LDP	2-Critical	ERRMSG_NOFLAGS	-	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
HA2CCB_PLAYBACK_ERROR	2-Critical	CCB playback failed.	This is a critical error message about a High Availability System status or condition.	-	"Copy the notice exactly as it appears. Check both the active system and standby system for messages. Call your technical support representative for assistance."
HA2CCB_RECORD_ERROR	2-Critical	CCB record failed.	This is a critical error message about a High Availability System status or condition.	-	"Copy the notice exactly as it appears. Check both the active system and standby system for messages. Call your technical support representative for assistance."
HA2CUTOVER_ERROR	2-Critical	[chars]	This is a critical error message about a High Availability System cutover status or condition. A message of this type indicates that a critical failure occurred during cutover of the standby system to the active system. Messages of this type indicate that the active system relinquished system control that the standby system failed to properly take over as the active.	-	"Copy the notice exactly as it appears. Check both the active system and standby system for messages. Call your technical support representative for assistance."



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
HA2CUTOVER_NOTICE	2-Critical	[chars]	This is an important High Availability System notice logging the state of a system cutover of the standby system to the active system. Messages of this type indicate that the active system relinquished system control and that the standby system is taking over as active.	-	"If the message is due to a failure condition copy the notice exactly as it appears. Check both the active system and standby system for messages. Call your technical support representative for assistance. If the message is not due to a failure condition no action is required."
HA-2-INIT_ERROR	2-Critical	[chars]	This is a critical error message about a High Availability System initialization status or condition. A message of this type indicates that a failure occurred during high availability system initialization.	-	"Copy the notice exactly as it appears. Check both the active system and standby system for messages. Call your technical support representative for assistance."
HA-2-IPC_ERROR	2-Critical	[chars] [chars]	This is a critical error message about a High Availability System interprocess communication status or condition. A message of this type indicates that an interprocess communication failure occurred between the active system and the standby system.	-	"Copy the notice exactly as it appears. Check both the active system and standby system for messages. Call your technical support representative for assistance."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
HA2MAX_NO_QUIESCE	2-Critical	[dec] linecards not quiesced exceeds limit of [dec] all slots will be reloaded.	-	-	"If you OIR removed the active RSP or have legacy IPs installed in the system this message is normal. Otherwise copy the notice exactly as it appears. Check both the active system and standby system for messages. Call your technical support representative for assistance."
HA-2-NO_QUIESCE	2-Critical	Slot [dec] did not quiesce it will be disabled and then reloaded.	This is a cutover notice about a High Availability System linecard error condition. The linecard did not quiesce properly.	-	"This message is normal if the slot contains a legacy IP. Otherwise copy the notice exactly as it appears. Check both the active system and standby system for messages. Call your technical support representative for assistance."
HA-3-ERROR	3-Error	[chars]	This is a error message about a High Availability System status or condition.	-	"Copy the notice exactly as it appears. Check both the active system and standby system for messages. Call your technical support representative for assistance."
HA3RF_EVENT_FAILED	3-Error	RF event not processed till [dec] milliseconds. Code = [dec]	The event sent to the redundancy facility was not processed till the specific time delay.	-	"Copy the notice exactly as it appears. Check both the active system and standby system for messages. Call your technical support representative for assistance."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
HA-3-SYNC_ERROR	3-Error	[chars]	This is a error message about a High Availability System state synchronization error status or condition.	-	"Copy the notice exactly as it appears. Check both the active system and standby system for messages. Call your technical support representative for assistance."
HA-4-CHKPT	4-Warning	Platform CF - [chars]	Failure in some UNIX checkpointing activity.	UNRPLDISCOMPONENT	LOGSIDSHTECHACTION
HA-4-CHKPTSEND	4-Warning	[chars] rc [dec] event [chars]	Failure to send UNIX checkpointing data.	UNRPLDISCOMPONENT	LOGSIDSHTECHACTION
HA-4-CONFNOTLOCKED	4-Warning	Unable to lock the configuration session.	This is a warning message indicating that the configuration session could not be locked. Simultaneous configuration sessions can corrupt the configuration.	-	"Copy the message exactly as it appears. Check both the active system and standby system for messages. Call your technical support representative for assistance."
HA-4-NOPROCESS	4-Warning	Creation of [chars] process failed	Creation of a platform high availability process failed.	UNRPLDISCOMPONENT	LOGSIDSHTECHACTION
HA-4-SYNC	4-Warning	[chars]	An error was encountered in a data sync operation	UNRPLDISCOMPONENT	LOGSIDSHTECHACTION
HA-4-WARNING	4-Warning	[chars]	This is a warning message about a High Availability System status condition or event.	-	"Copy the notice exactly as it appears. Check both the active system and standby system for messages. Call your technical support representative for assistance."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
HA-5-HA_IOS_VERSION	5-Notice	Active IOS version differs from standby IOS version	This is a notice about High Availability System version mismatch between the active and standby systems.	-	"No action required."
HA-5-HA_VERSION	5-Notice	Active HA version [node][node]differs from standby HA version [node][node]	This is a notice about High Availability System version mismatch between the active and standby systems.	-	"No action required."
HA-5-HWMDMG_NOTICE	5-Notice	[chars] hw-module slot [dec] image [chars] : [chars]	This is a notice message about a High Availability System hardware module configuration status condition or event.	-	"Copy the notice exactly as it appears. Check both the active system and standby system for messages. Call your technical support representative for assistance."
HA-5-MODE	5-Notice	Operating mode is [chars] [chars]mode is [chars].	This is a notice about the High Availability System mode.	-	"Make sure that both the active system and standby systems are correctly configured and operational."
HA-5-NOTICE	5-Notice	[chars]	This is a notice message about a High Availability System status condition or event.	-	"No action required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HA-SRF_RELOAD_NOTICE	5-Notice	Unable to reload the standby. [chars]	The active RSP was unable to reload the standby because of the reason indicated in the message. This may be because the slave is in unplugged state or because there is a redundancy forced switchover process in progress or because the reload function is incorrectly called from the standby to the active.	-	-
HA-5-SYNC_NOTICE	5-Notice	[chars]	This is a notice message about a High Availability System synchronization status condition or event.	-	"No action required."
HA-5-SYNC_RETRY	5-Notice	Reloading standby and retrying sync operation retry [dec].	This is a notice message about a High Availability System synchronization status condition or event. The synchronization operation will be retried.	-	"No action required."
HA-5-SYNC_RETRY_FAIL	5-Notice	Maximum sync retries exceeded. Reloading standby and cancelling sync.	This is a notice message about a High Availability System synchronization status condition or event. The synchronization operation failed.	-	"Copy the notice exactly as it appears. Check both the active system and standby system for messages. Call your technical support representative for assistance."
HA-6-FALLBACK	6-Information	[chars] - configured mode[chars] fallback mode[chars]	This RP redundancy mode fell back to the indicated mode	UNRPLDISCOMPONENT	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HA-6-MODE	6-Information	Operating RP redundancy mode is [chars]\n	Operational redundancy mode information	UNRPDISCOMPONENT	LOG_SID_NO_ACTION
HA6STANDBY_READY	6-Information	Standby RP in slot [dec] is operational in [chars] mode\n	Indicates standby route processor readiness	UNRPDISCOMPONENT	LOG_SID_NO_ACTION
HA-6-SWITCHOVER	6-Information	Route Processor switched from standby to being active	This RP switched to become the active RP	-	LOG_SID_NO_ACTION
HA-6-TOOBIG	6-Information	Running config too big config sync failed	The running configuration was too big to be synced	UNRPDISCOMPONENT	LOG_SID_NO_ACTION
HA-6-TOOBIG	6-Information	Running config too big config sync failed	The running config was too big to be synced	-	LOG_SID_NO_ACTION
<del>HAL_GEMM_BAD_OPCODE</del>	2-Critical	Opcode=[hec]	A bad Opcode was received by the general memory manager.	cpp-ucode	LOG_STD_ACTION
<del>HAL_GEMM_BAD_OPCODE</del>	3-Error	VADDR:[node] LINE: [dec]	Mismatched genmem.	cpp-ucode	LOG_STD_ACTION
<del>HAL_GEMM_BAD_OPCODE</del>	3-Error	offset 0x[node]lx retcode %u	A critical failure occurred when trying pre-allocate GPM	cpp-ucode	LOG_STD_ACTION
<del>HAL_KIMM_BAD_OPCODE</del>	3-Error	seqnum=[node] pak-type=[node]	Packet Hardware Transmit Error	cpp-ucode	LOG_STD_ACTION
<del>HAL_KIMM_BAD_OPCODE</del>	2-Critical	rc 0x[hec]	A critical failure occurred when trying to obtain packet memory	cpp-ucode	LOG_STD_ACTION
<del>HAL_KIMM_BAD_OPCODE</del>	2-Critical	rc 0x[hec]	A critical failure occurred when trying to obtain packet memory	cpp-ucode	LOG_STD_ACTION
<del>HAL_KIMM_BAD_OPCODE</del>	2-Critical	-	Packet buffer memory is low packets are being dropped	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HLKMM4UJADRSQIS</del>	2-Critical	Packet buffer memory is low packets are being dropped	Packet buffer memory is low packets are being dropped	cpp-ucode	LOG_STD_ACTION
<del>HLKMM4UJADSMRE</del>	3-Error	making very aggressive adjustments to conserve [chars] buffer resources.	Packet buffer utilization is at a severe level.	cpp-ucode	LOG_STD_ACTION
<del>HLKMM4UJADWRNG</del>	4-Warning	making more aggressive adjustments to conserve [chars] buffer resources.	Packet buffer utilization is at a risky level.	cpp-ucode	LOG_STD_ACTION
<del>HLKMM4UJADNOIE</del>	5-Notice	making adjustments to conserve [chars] buffer resources.	Packet buffer utilization is substantial.	cpp-ucode	LOG_STD_ACTION
<del>HCCPSLMLCGRUJDN</del>	3-Error	High CPU utilization on line card [dec]/[dec] line card ISSU may fail.	Line card ISSU may fail due to high CPU utilization on the line card.	cmts-platform	"Attempt line card ISSU when line card has lower CPU load"
<del>HCCPSLMLCGRUJDN</del>	3-Error	HCCP revertive configuration exists for interfaces on slot [dec]/[dec].	HCCP revertive is enabled for the protect interfaces on the given line card. For ISSU to function without being disrupted by automatic revert backs please configure interfaces to be non-revertive.	cmts-platform	"Configure interfaces to be non-revertive."
<del>HCCPSLMLCGRUJDN</del>	3-Error	High CPU utilization on PRE line card ISSU may fail.	Line card ISSU may fail due to high CPU utilization on the PRE.	cmts-platform	"Attempt line card ISSU when PRE has lower CPU load"
<del>HCCPSLMLCGRUJDN</del>	3-Error	Switchover from line card [dec]/[dec] aborted.	HCCP switchover from the give slot is aborted due to external RF switch error in the HCCP LC ISSU shim layer.	cmts-platform	"Check the network connection between the router and " "the external RF switch."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HCCP-3-BADCHAN	3-Error	HCCP [chars] Mbr [dec] [chars]: channel switch \[chars]\ failed retries exhausted.	HCCP LC member notifies failure in its channel switch.	-	"Make sure channel switch is functioning."
HCCP-3-BADMSG	3-Error	Grp [dec] Mbr [dec] [chars]: received wrong type of message-[chars].	Certain types of HCCP message are not supposed to be received by Working or Protect.	-	"Check configuration on this interface and the sender's interface"
HCCP-3-BADSTATE	3-Error	HCCP [chars] Grp [dec] inconsistant state !!	HCCP state inconsistency after control plane switchover	-	"Reset the interface"
HCCP-3-CFG_FAIL	3-Error	Configuration failed. [chars]	An error occurred during configuration.	-	LOGSIDSHTICTION
HCCP-3-CFR_LIST	3-Error	Remove an element before destroy [chars]: ch=[char] h=[byte] de=[dec] p=[hex] h=[hex] m=[hex] a=[hex] b=[hex] src_macaddr=[enet] ip_prot=[node] port=[%u]	Switchcards in RFSW has been inserted/removed.	cmts-redundancy	."
HCCP-3-CONFIG_SYNC_ERR	3-Error	Enable config-sync when it is not disabled	HCCP internal flag configsync the software is trying to enable this flag set to 0 while it is already enabled 0.	ubr10000	"Reset the system"
HCCP-3-CTRL_PLANE_READY	3-Error	HCCP ctrl plane for [chars] member [dec] is ready.	HCCP ctrl plane is ready to receive lc2rp sync for the groups in list.	-	."
HCCP-3-DATA_PLANE_READY	3-Error	HCCP data plane for [chars] member [dec] is ready.	HCCP lc2rp sync for the groups in list is completed.	-	."
HCCP-3-INVALID_PROTECT	3-Error	ERROR!LC-RED: License of protect card [node][node]is incompatible with working card [node][node]	The protect linecard has lower license.	-	"Please upgrade the license on the protect"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HCCPMSCTRLAERADY	3-Error	HCCP [chars] member [dec]: Ctrl Plane Ready is missed because [chars]	HCCP ctrl plane ready is missed because of message missed or ctrl plane error.	-	"Check the status of ctrl plane"
HCCPMSDATAERADY	3-Error	HCCP [chars] member [dec]: Data Plane Ready is missed because [chars]	HCCP data plane ready is missed because of message missed or data plane error.	-	"Check the status of data plane"
HCCPMSSTATSYNCDONE	3-Error	HCCP [chars] member [dec]: Static Sync Done is missed because [chars] Redo static sync through CLI.	HCCP static sync done is missed because of switch over happened or STATICSYNCDONE message missed.	-	"Perform static sync through CLI."
HCCP3OUTCFORDERMSG	3-Error	HCCP slot [dec] member [dec] status [chars]: NULL hp/mp encountered.	HCCP software has detected that messages are Out of Order.	-	LOG_STD_ACTION
HCCP3OUTCFORDERICP	3-Error	Grp [dec] Mbr [dec] status [chars]: Received LC to RP sync in standby state. Message rejected.	HCCP software has detected that messages are Out of Order.	-	LOG_STD_ACTION
HCCP3OUTCFORDERMSG	3-Error	Grp [dec] Mbr [dec] status [chars]: NULL hp encountered.	HCCP software has detected that messages are Out of Order.	-	LOG_STD_ACTION
HCCP3PROTECTINGTOOMANY	3-Error	Grp [dec] Mbr [dec] status [chars]: Protecting too many Workings.	HCCP detected that protect is asked to protect too many working i/fs.	-	LOG_STD_ACTION
HCCP3UNKNOWN_TLV	3-Error	Grp [dec] Mbr [dec] [chars]: received Unknown TLV type-[dec].	HCCP software has detected Unknown TLV type this may not affect the functionality	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
HCCP-4-NOREVERT	4-Warning	HCCP [chars] Mbr [dec]: Revert operation cancelled.	HCCP LC member will not attempt to revert back to the Working interface.	-	"it may have occurred because last time switchover is not finished. " "Make sure the current hccp state is in warm state"
HCCP-4-NOSWOVER	4-Warning	HCCP [chars] Mbr [dec]: switchover is not triggered because [chars].	HCCP LC member will not attempt to revert back to the Working interface.	-	"it may have occurred because last time switchover is not finished. " "Make sure the current hccp state is in warm state"
HCCP-4-PEERBUSY	4-Warning	HCCP [chars] member [dec] Switchover aborted. Protect [chars] is already ACTIVE for member [dec].	HCCP software has detected that the PROTECT linecard is already Active for another Working	-	"Please free up the Protect interface by reverting back to the " "other Working and try this switchover again"
HCCP-5-BULKSYNCNCOMP	5-Notice	Grp [dec] Mbr [dec] [chars]: During PRE bulk syncing ignore LC failover.	Ignore LC failover event when active PRE is syncing data to standby PRE.	cmts-redundancy	
HCCP-5-CHANOFF	5-Notice	HCCP [chars] Mbr [dec] [chars]: turning off channel.	HCCP LC member notifies that it turns off channel switch.	-	"Make sure peer controls the channel."
HCCP-5-CHANON	5-Notice	HCCP [chars] Mbr [dec] [chars]: turning on channel.	HCCP LC member notifies that it turns on channel switch.	-	"Make sure peer relinquishes the channel."
HCCP-5-LC_ACTIVE	5-Notice	HCCP [chars] Mbr [dec] [chars]: change state to active due to: [chars].	HCCP LC member notifies that it changes to active.	-	"Make sure peer relinquishes the channel."
HCCP-5-LC_STANDBY	5-Notice	HCCP [chars] Mbr [dec] [chars]: change state to standby due to: [chars].	HCCP LC member notifies that it changes to standby.	-	"Make sure peer controls the channel."
HCCP-5-STANDBY	5-Notice	Grp [dec] Mbr [dec] [chars]: change state from active to standby cause: [chars].	HCCP group member notifies that it changes from active to standby.	-	"Make sure peer controls the channel."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HCCP5MICHOMREADY	5-Notice	HCCP [chars] Mbr [dec] [chars]: ready to switchover.	HCCP LC member suspend timer expires ready to switchover.	-	."
HCCP6CHANSASMEMOR	6-Information	[chars] error: [chars].	HCCP channel process errors related SNMP.	-	."
HCCP6CPANRSMNO	6-Information	[chars]: [chars].	SNMP response.	-	."
HCCP6IGNORE_MD_UP	6-Information	The member [chars] [dec][dec] is already up ignore repeated event.	The mac domain is already active ignore the repeated up events.	-	."
HCCP6RCCSYNCONG	6-Information	HCCP [dec] [dec] [chars]: LC [chars] rplc_cfgsync configuration recover is failed PRE will download LC configurations again.	HCCP recover LC rplc_cfgsync configurations is failed because last rplc_cfgsync configuration is not success.	-	"PRE should download LC configurations otherwise it is a critical bug."
HCCP6RCCSYNCONFASR	6-Information	Parser Error: [dec]	HCCP recover LC rplc_cfgsync configurations parser error.	-	."
HCCP6RCCSYNCONFACR	6-Information	HCCP [dec] [dec] [chars]: LC [chars] rplc_cfgsync configuration recover is succeed.	HCCP recover LC rplc_cfgsync configurations is succeed.	-	."
HCCP6SACS/NCCOMPEED	6-Information	HCCP static sync for [chars] member [dec] is completed in [dec] ms.	HCCP static sync for the groups in list is completed.	-	."
HD-1-BADLOOPCABLE	1-Alert	Loopback not supported for a 4T DTE/X.21 port [dec] in slot [dec]	Loopback mode is not allowed when using an X.21 DTE cable on a Quad\n serial NIM port.	-	"Do not enable loopback or use a different cable type."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HD-1BADPORTADAPTER	1-Alert	4T Port Adapter fault on port [dec] in slot [dec]	A hardware or software error occurred.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
HD-1-BADRING	1-Alert	msgtxt_badringsize	An internal software error occurred.	-	"If message recurs call your technical support representative for\n\ assistance."
HD-5-LINEFLAP	5-Notice	Unit [dec] excessive modem control changes	Too many modem control interrupts have been received. The port was\n\ disabled to prevent excessive use of the CPU.	-	"Check the cable on the serial port."
HDLG4ISSU_NOMEMORY	1-Alert	msgtxt_nomemory	The requested operation could not be accomplished because of a low memory condition.	-	"Reduce other system activity to ease memory demands. If conditions " "warrant upgrade to a larger memory configuration."
HDLG4ISSU_INCOMPATIBLE	4-Warning	\nhdlc-issu-compat: returned FALSE	The compatibility checking has failed	-	LOG_SID_SH_TECH_ACTION
HDLG4ISSU_SENDFAILED	4-Warning	\nHDLG4ISSU: send message failed rc = [dec]\n	The sending of a message has failed.	-	LOG_SID_SH_TECH_ACTION
HDLG4ISSU_XFORM	4-Warning	\n[chars]: failed rc=[chars]	The transform has failed.	-	LOG_SID_SH_TECH_ACTION
HDX-3-BADFSM	3-Error	On int [dec]/[dec] unexpected state [dec] event [dec]	A bad state event pair is detected in the rx/tx half duplex state\n\ machine.	pm-fecpm	LOG_STD_ACTION
HFSUB3HFSINOFALIED	3-Error	iosxe-chassismgr	Inotify failed to initialize :[chars]	"This error occurs when the inotify sub-system is misbehaving"	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HFSLIB3-HFSNOWATCH	3-Error	iosxe-chassismgr	Inotify failed to add a watch:[chars]	"This error occurs when the inotify sub-system is misbehaving"	LOG_SID_NO_ACTION
HFSLIB-3-HFSOPEN	3-Error	iosxe-chassismgr	Problem accessing the udev generated file:[chars]	"No explanation."	LOG_SID_NO_ACTION
HCOADEVWIPRSHEDIE	3-Error	iosxe-binos-utils	Failed to (re)schedule CPUHOG protected loop. Operation will be aborted. Please check the logs for more details.	Hyperlocation was interrupted while trying to defer a looping operation and can not continue.	LOG_SID_NO_ACTION
HMCRCMXP6NIFBC	3-Error	iosxe-binos-utils	CMX[chars] connected over IPv6 which is not currently supported for Hyperlocation in Fabric mode.	Currently the Fabric mode only operates over IPv4.	Please connect the CMX over IPv4
HMCRCMXP6NIFBCSY	3-Error	iosxe-binos-utils	CMX[chars] is reachable through a routed port with MAC address %pM. This deployment configuration is not supported for Hyperlocation	CMX should be reachable via a SVI (VLAN) interface for traffic forwarding to be operational	Please rejoin CMX.
HMANCPUACEAUIHCH	3-Error	iosxe-hostmgr	CPU Usage due to Memory Pressure exceeds threshold on[chars]. Below are the top 5 memory consuming processes:[chars] (PID=%d; RSS=%d KB)	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HMANINITIALIZATION_FAILED	2-Critical	iosxe-hostmgr	Host Manager initialization failed.	Initialization of the host manager failed.	Review Host Manager logs taking note of the timestamp information to select specific information to review. Copy the message and other related information exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <a href="http://www.cisco.com/tac">http://www.cisco.com/tac</a> . With some messages
HMANCONSOLE_SETUP_FAILED	3-Error	iosxe-hostmgr	Failed to setup console service. It should be enabled on[chars]	Setup of a console service failed.	Check the host manager launch parameters and correct as required.
HMANHOSTNAME_SETUP_FAILED	3-Error	iosxe-hostmgr	Failed to set hostname:[chars]	The host manager received notification that the system hostname has been set. The host manager failed to pass this value to the ASR kernel.	Repeat the process to configure the hostname. If the problem persists
HMAN3VRF_API_FAILED	3-Error	iosxe-hostmgr	%s	-	-
HMANR3MSG_CREATE_FAILED	3-Error	Message creation failed [chars]	Could not create tdl message	polaris-emp-relay	LOG_STD_ACTION
HMANR3MSG_GET_FAILED	3-Error	Message read failed [chars]	Could not fetch tdl message	polaris-emp-relay	LOG_STD_ACTION
HMANR3MSG_GET_VALUE_FAILED	3-Error	Message get value failed [chars]	Could not fetch value from tdl message	polaris-emp-relay	LOG_STD_ACTION
HMANR3MSG_SEND_FAILED	3-Error	Message send failed [chars]	Could not send tdl message	polaris-emp-relay	LOG_STD_ACTION
HMANR3MSG_SET_VALUE_FAILED	3-Error	TDL set value failed [chars]	Could not tdl message values	polaris-emp-relay	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HMANRCHASSDOWNENT	5-Notice	Chassis [dec] gone DOWN!	Chassis removed event	polaris-emp-relay	LOG_STD_ACTION
HMANRACIMFLAGSET	6-Information	EMP_RELAY: Status received from active setting active status flag	Setting active status flag prioritizes active switch for election	polaris-emp-relay	LOG_STD_ACTION
HMANREMPHICIONNO	6-Information	EMP active switch [dec] elected: [chars]	EMP election algorithm has been run and a switch has been elected as active EMP	polaris-emp-relay	LOG_STD_ACTION
HMANREMPNOHICIONNO	6-Information	Could not elect active EMP switch setting emp active switch to 0: [chars]	Could not elect active EMP switch	polaris-emp-relay	LOG_STD_ACTION
HMANREMPROCESSSTOP	6-Information	EMP_RELAY: Stopping and killing the monitoring process: [chars]	The monitoring process has hit an event. The process has fulfilled its purpose it can now be killed.	polaris-emp-relay	LOG_STD_ACTION
HMANREMPROCESSPREMPT	6-Information	EMP_RELAY: Preempting and killing the monitoring process: [chars]	An event has occurred which has rendered the watching process useless. So the system will kill this process since it is not needed anymore.	polaris-emp-relay	LOG_STD_ACTION
HMANREMPROCESSSTART	6-Information	EMP_RELAY: Starting process for event monitoring	IOS-HMAN channel gone down possibly due to HMAN process dying. The EMP IOS process monitors if this channel has come upHMAN respawned	polaris-emp-relay	LOG_STD_ACTION
HMANREMPSTATUSRCVD	6-Information	EMP status [dec] received from switch [dec]	EMP status received from member HMAN	polaris-emp-relay	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HMAN-HMAN_CHANNEL	6-Information	HMAN-IOS channel event for switch [dec]: [chars]	Info on HMAN-IOS events	polaris-emp-relay	LOG_STD_ACTION
HMAN-RESET_ACTIVE_FLAG	6-Information	EMP_RELAY: Resetting active status flag IOS config'd shut/no shut admin_state = [dec]	Resetting active status flag prioritizes active switch for election	polaris-emp-relay	LOG_STD_ACTION
HMR3-HASH_SIZE_ZERO	3-Error	count [dec] poly [dec]	An invalid hash table size of 0 was detected	cpp-ucode	LOG_STD_ACTION
HOOD-3-BADUNIT	3-Error	msgtxt_badunit	An internal software error occurred.	-	"If the message recurs call your technical support representative\n\n for assistance."
HOOD-5-CABLEERR	5-Notice	Unit [dec] HP100VG cable error. Training failed	A 100VG cable or hub is faulty.	-	"If the message recurs and either the cable or hub appears to be\n\n good repair or replace the router module."
HOOD-5-COLL	5-Notice	Unit [dec] excessive collisions	An Ethernet cable is broken or unterminated or the transceiver is\n\n unplugged.	-	"If the transceiver appears to be properly terminated repair or\n\n replace the router."
HOOD-5-LOSTCARR	5-Notice	Unit [dec] lost carrier. Transceiver problem?	An Ethernet transceiver is unplugged or faulty.	-	"Repair or replace the controller."
HOOD-5-NOCABLE	5-Notice	Unit [dec] HP100VG no tone detected. Check cable hub	A 100VG cable is faulty.	-	"If the message recurs and either the cable or hub appears to be \n\n good repair or replace the router module."
HBCODEC_NOT_LOADED	3-Error	channel:[chars] DSP ID:0x[hec] command failed as codec not loaded [dec]	Sending messages to DSP without a loaded codec can result with the DSP failing	ios-voice	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
H3C0DEC_NOT_LOADED	3-Error	channel:[chars] DSP ID:0x[hec] command failed as codec not loaded [dec]	Sending messages to DSP without a loaded codec can result with the DSP failing	ios-voice	LOG_STD_ACTION
HPI3-FAILED_START	3-Error	channel:[chars] DSP ID:0x[hec] failed mode [dec] for service [dec]	Failed to start DSP services	ios-voice	LOG_STD_ACTION
HPI3-FAILED_START	3-Error	channel:[chars] DSP ID:0x[hec] failed mode [dec] for service [dec]	Failed to start DSP services	ios-voice	LOG_STD_ACTION
H3MAMR_NB_LICENSE	3-Error	<pre> ##### \\nGSM AMR-NB License is not yet activated. \\nPlease configure 'license feature gsmammb-codec-pack' \\nand accept the EULA to activate the license. \\n ##### </pre>	Failed to start DSP services for GSM AMR-NB codec	ios-licensing-atg	LOG_STD_ACTION
H3MAMR_NB_LICENSE	3-Error	<pre> ##### \\nGSM AMR-NB License is not yet activated. \\nPlease configure 'license feature gsmammb-codec-pack' \\nand accept the EULA to activate the license. \\n ##### </pre>	Failed to start DSP services for GSM AMR-NB codec	ios-licensing-atg	LOG_STD_ACTION
HPI3-INVALID_PAYLOAD	3-Error	wrong payload size channel:[chars] DSP ID:0x[hec] failed mode [dec] for service [dec]	Failed to start DSP services	ios-voice	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HPI3-INVALID_PAYLOAD	3-Error	wrong payload size channel:[chars] DSP ID:0x[hec] failed mode [dec] for service [dec]	Failed to start DSP services	ios-voice	LOG_STD_ACTION
HPI-3-NACK_HIGH	3-Error	DSP to IOS Nack message with severity [chars] [chars] [chars]	DSP to IOS Nack message with high severity	ios-voice	-
HPI-3-NACK_HIGH	3-Error	DSP to IOS Nack message with severity [chars] [chars] [chars]	DSP to IOS Nack message with high severity	ios-voice	-
HSPRIPEALIREERRCR	3-Error	Error encountered on release SRTP bandwidth and tunnels reservation	Error encountered on release SRTP bandwidth and tunnels	xformers-csl	LOG_SID_NO_ACTION
HSPRIPEALIREERRCR	3-Error	Error encountered on release SRTP bandwidth and tunnels reservation	Error encountered on release SRTP bandwidth and tunnels	xformers-csl	LOG_SID_NO_ACTION
HPI4-INVALID_CODEC_LOAD	4-Warning	channel:[chars] DSP ID:0x[hec] invalid hpi mode [dec] for loading codec [dec]	Attempt to load codec when the DSP is in an invalid mode which can result with DSP failure	ios-voice	LOG_STD_ACTION
HPI4-INVALID_CODEC_LOAD	4-Warning	channel:[chars] DSP ID:0x[hec] invalid hpi mode [dec] for loading codec [dec]	Attempt to load codec when the DSP is in an invalid mode which can result with DSP failure	ios-voice	LOG_STD_ACTION
HPI4-INVALID_ECANTYPE	4-Warning	[chars] ECAN is not available in voice-card [dec] [chars] ECAN will be used	All voice cards participated in DSPFarm must have the same echo canceller type	-	"Make sure all voice cards participated in DSPFarm have the same echo canceller type configured"
HPI4-INVALID_ECANTYPE	4-Warning	[chars] ECAN is not available in voice-card [dec] [chars] ECAN will be used	All voice cards participated in DSPFarm must have the same echo canceller type	-	"Make sure all voice cards participated in DSPFarm have the same echo canceller type configured"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
HPI-4-NACK_MED	4-Warning	DSP to IOS Nack message with severity [chars] [chars] [chars]	DSP to IOS Nack message with medium severity	ios-voice	"Check the NACKed message's parameters for \"\minor configuration errors.\""
HPI-4-NACK_MED	4-Warning	DSP to IOS Nack message with severity [chars] [chars] [chars]	DSP to IOS Nack message with medium severity	ios-voice	"Check the NACKed message's parameters for \"\minor configuration errors.\""
HPI-4-NO_CLOSE	4-Warning	channel:[chars] DSP ID:0x[hec]	Attempt to release DSP without sending close message	ios-voice	LOG_STD_ACTION
HPI-4-NO_CLOSE	4-Warning	channel:[chars] DSP ID:0x[hec]	Attempt to release DSP without sending close message	ios-voice	LOG_STD_ACTION
HPI-6-NACK	6-Information	DSP to IOS Nack message [chars] [chars]	DSP to IOS Nack message with no severity in order to work with dspware without Nack severity implementation	ios-voice	"Information only displaying NACKed messages."
HPI-6-NACK	6-Information	DSP to IOS Nack message [chars] [chars]	DSP to IOS Nack message with no severity in order to work with dspware without Nack severity implementation	ios-voice	"Information only displaying NACKed messages."
HPI-6-NACK_LOW	6-Information	DSP to IOS Nack message with severity [chars] [chars] [chars]	DSP to IOS Nack message with low severity	ios-voice	"Information only displaying NACKed messages \"\that are for debugging purposes.\""
HPI-6-NACK_LOW	6-Information	DSP to IOS Nack message with severity [chars] [chars] [chars]	DSP to IOS Nack message with low severity	ios-voice	"Information only displaying NACKed messages \"\that are for debugging purposes.\""

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HP16</del> SRTP_EVAL_LIMIT	6-Information	The SRTP bandwidth and tunnels usage exceed the license limits	The SRTP bandwidth and tunnels exceed the license limits	xformers-csl	LOG_SID_NO_ACTION
<del>HP16</del> SRTP_EVAL_LIMIT	6-Information	The SRTP bandwidth and tunnels usage exceed the license limits	The SRTP bandwidth and tunnels exceed the license limits	xformers-csl	LOG_SID_NO_ACTION
<del>HQ16</del> RCN/AIOWE/OFFR	3-Error	Can't configure Overhead Accounting and fragmentation together!	Overhead Accounting feature currently is not allowed to coexist with fragmentation configuration.	qos	"Remove either Overhead Accounting or fragmentation\n "
<del>HQ16</del> RCN/AIOWE/OFFR	3-Error	Can't configure Overhead Accounting and fragmentation together!	Overhead Accounting feature currently is not allowed to coexist with fragmentation configuration.	qos	"Remove either Overhead Accounting or fragmentation\n "
HQF4NOT_ENOUGH_BW	4-Warning	interface [chars]: available bandwidth may not meet bandwidth guarantees on direction [chars]	The interface bandwidth is less than the total bandwidth that is required for HQF queuing features on this interface.\n	-	"Increase the bandwidth available on the interface.\n"
HQF4NOT_ENOUGH_BW	4-Warning	interface [chars]: available bandwidth may not meet bandwidth guarantees on direction [chars]	The interface bandwidth is less than the total bandwidth that is required for HQF queuing features on this interface.\n	-	"Increase the bandwidth available on the interface.\n"
HQF-6-ENOUGH_BW	6-Information	interface [chars]: available bandwidth now meet bandwidth guarantees on direction [chars]	The interface bandwidth is now enough for the total bandwidth that is required for HQF queuing features on this interface.\n	-	"Do nothing.\n"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
HQF-6-ENOUGH_BW	6-Information	interface [chars]: available bandwidth now meet bandwidth guarantees on direction [chars]	The interface bandwidth is now enough for the total bandwidth that is required for HQF queuing features on this interface.\n	-	"Do nothing.\n"
HQF-TUNNEL_POLICY_FAILED	6-Information	\nHQF-TUN: [chars] move failed to [chars] suspending policy	-	qos	"The service-policy will be automatically restored " "if the tunnel adjacency changes again. " "Run 'show policy-map interface <tunnel>' " "to see if the service policy is still suspended. " "If a service-policy remains suspended longer than expected " "then check for other messages in the log that may " "clarify the source of the problem " "e.g. insufficient bandwidth to meet bandwidth guarantees. "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HQ</del> TUNNEL_POLICY_FAILED	6-Information	\nHQF-TUN: [chars] move failed to [chars] suspending policy	-	qos	"The service-policy will be automatically restored " "if the tunnel adjacency changes again. " "Run 'show policy-map interface <tunnel>' " "to see if the service policy is still suspended. " "If a service-policy remains suspended longer than expected " "then check for other messages in the log that may " "clarify the source of the problem " "e.g. insufficient bandwidth to meet bandwidth guarantees. "
<del>HR</del> ALARM_HSR_FAULT	2-Critical	The HSR ring is now in FAULT state	HSR Ring Down: The HSR ring is in FAULT state. This typically happens when both ring ports are down because of link or node failure.	-	-
<del>HR</del> ALARM_HSR_PARTIAL	3-Error	The HSR ring is now in PARTIAL FAULT state	HSR Port Down: The HSR ring is in PARTIAL FAULT state. This typically happens when one of the ring port is down because of link or node failure. The Ring is still functional but needs attention as it can not handle further faults.	petra-hsr	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HSRP-3-MISCONFIG	3-Error	Attempt to change [chars] MAC address to [enet] when DECNET already running	An HSRP group attempted to become active on an interface that can only support a single MAC address and which is running DECnet. If standby use-bia is not configured then HSRP would normally set the interface MAC address to the HSRP virtual MAC address but this is not allowed if DECnet is running.	hsrp	"Enable standby use-bia on the interface."
HSRP-3-NOSOCKET	3-Error	Unable to open socket	The system was unable to initialize an IP connection for the Hot Standby protocol.	hsrp	"Make sure that there is at least one interface configured to run " "IP."
HSRP-4-BADAUTH	4-Warning	Bad authentication from [chars] group [dec] remote state [chars]	Two routers participating in HSRP disagree on the valid authentication string.	hsrp	"Use the standby authentication command to repair the HSRP authentication \n\ discrepancy between the local system and the one whose IP address \n\ is reported."
HSRP-4-BADAUTH2	4-Warning	Bad authentication from [chars]	Two routers participating in HSRP disagree on the valid authentication string.	hsrp	"Use the standby authentication command to repair the HSRP authentication " "discrepancy between the local system and the one whose IP address " "is reported."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HSRP-4-BADVIP	4-Warning	[chars] Grp [dec] address [chars] is in the wrong subnet for this interface	The HSRP virtual IP address contained in the Hello message cannot be learnt as it is not within a subnet configured on the interface.	hsrp	"Check the configuration on all HSRP routers and ensure " "that the virtual IP address is within a configured subnet."
HSRP-4-DIFFVIP1	4-Warning	[chars] Grp [dec] active routers virtual IP address [chars] is different to the locally configured address [chars]	The HSRP virtual IP address contained in the Hello message from the Active router is different from the virtual IP address configured locally.	hsrp	"Check the configuration on all HSRP routers in the group " "and ensure they are all configured with the same virtual " "IP address."
HSRP-4-DUPADDR	4-Warning	Duplicate address [chars] on [chars] sourced by [enet]	The IP address in an HSRP message received on the specified interface is the same as the IP address of the router. Another router might be configured with the same IP address. The most likely cause is a network loop or a misconfigured switch that is causing the router to see its own HSRP Hello messages.	hsrp	"Check the configurations on all the HSRP routers to ensure " "that the interface IP addresses are unique. Check that no " "network loops exist. If port channels are configured check " "that the switch is correctly configured for port-channels. " "Enable standby use-bia so that the error message displays " "the interface MAC address of the sending router. This can " "be used to determine if the error message is caused by a " "misconfigured router or a network loop."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HSRP-4-DUPVIP1	4-Warning	[chars] Grp [dec] address [chars] is already assigned to [chars] group [dec]	The HSRP virtual IP address contained in the Hello message cannot be learnt as it is already assigned to a different HSRP group.	hsrp	"Check the configuration on all HSRP routers and ensure " "that the virtual IP address of each HSRP group is unique."
HSRP-4-DUPVIP2	4-Warning	[chars] Grp [dec] address [chars] is already assigned on this interface	The HSRP virtual IP address contained in the Hello message cannot be learnt as it is already assigned to this interface.	hsrp	"Check the configuration on all HSRP routers and ensure " "that the virtual IP address of each HSRP group is unique."
HSRP-4-DUPVIP3	4-Warning	[chars] Grp [dec] address [chars] is already assigned to or overlaps with an address on another interface or application	The HSRP virtual IP address contained in the Hello message cannot be learnt as it is already assigned to or overlaps with an address on another interface or application.	hsrp	"Check the configuration on all HSRP routers and ensure " "that the virtual IP address of each HSRP group is unique."
HSRP-5-STATECHANGE	5-Notice	[chars] Grp [dec] state [chars] -> [chars]	The router has changed state	hsrp	LOG_SID_NO_ACTION
HSR-3-ADNENOSUPRIED	3-Error	voice port [chars]: ring cadence not suitable for caller id. on_time_first=[dec] off_time_first=[dec] on_time_second=[dec] off_time_second=[dec]	Ring off period is not sufficient for caller id transmission.\n If caller id transmission during ring is configured make sure\n that the ring off duration is long enough.	-	"If caller id transmission during ring is configured make sure\n that the ring off duration is long enough. Make sure that the\n\ cptone setting and caller-id alerting settings are correct."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HISCADENCENOSURIED	3-Error	voice port [chars]: ring cadence not suitable for caller id. on_time_first=[dec] off_time_first=[dec] on_time_second=[dec] off_time_second=[dec]	Ring off period is not sufficient for caller id transmission.\n\n If caller id transmission during ring is configured make sure\n\n that the ring off duration is long enough.	-	"If caller id transmission during ring is configured make sure\n\n that the ring off duration is long enough. Make sure that the\n\n cptone setting and caller-id alerting settings are correct."
HISCAPABILITYMISMATCH	3-Error	voice port [chars]: call connection id [0x[hec] 0x[hec] 0x[hec] 0x[hec]]	There was a capabilities mismatch between the two call legs.\n\n capabilities are negotiated between call legs for CODEC VAD and\n\n FAX rate.	-	"Check that the dial peer configuration is appropriate for the interface\n\n in question. Also check that and configuration on the interface is\n\n correct."
HISCAPABILITYMISMATCH	3-Error	voice port [chars]: call connection id [0x[hec] 0x[hec] 0x[hec] 0x[hec]]	There was a capabilities mismatch between the two call legs.\n\n capabilities are negotiated between call legs for CODEC VAD and\n\n FAX rate.	-	"Check that the dial peer configuration is appropriate for the interface\n\n in question. Also check that and configuration on the interface is\n\n correct."
HTSP-3-DSPALARM	3-Error	voice port [chars]: status=0x[hec] message=0x[hec] text=[chars]	The DSP reported a fatal error. All calls on the DSP were dropped\n\n and a DSP reload was attempted.	-	"Verify that the DSP reloaded properly by attempting to place a call\n\n on the affected voice port. Contact your technical support\n\n representative include the full text of the error message."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HTSP-3-DSPALARM	3-Error	voice port [chars]: status=0x[hec] message=0x[hec] text=[chars]	The DSP reported a fatal error. All calls on the DSP were dropped\n\n and a DSP reload was attempted.	-	"Verify that the DSP reloaded properly by attempting to place a call\n\n on the affected voice port. Contact your technical support\n\n representative include the full text of the error message."
HTSP-3-NOEVENT	3-Error	no free event structure available from [chars] for DSP message	There were no event structures remaining in the system pools to alert the\n\n router of a voice or signaling event.	-	"Check that the voice port for which the event was reported is\n\n still operational. If not clear the voice port."
HTSP-3-NOEVENT	3-Error	no free event structure available from [chars] for DSP message	There were no event structures remaining in the system pools to alert the\n\n router of a voice or signaling event.	-	"Check that the voice port for which the event was reported is\n\n still operational. If not clear the voice port."
HTSP-3-NOEVENT	3-Error	voice port [chars]: Ground Start trunking not supported	This voice port does not support the 'connection trunk' command when\n\n ground start signaling is configured. Trunking mode on this voice\n\n is supported when using loop start signaling.	-	"Shut down the voice port remove the 'connection trunk' and/or\n\n 'signal groundStart' command from the voice port configuration\n\n and unshut the voice port."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HISPRUNKNOISUPRIED	3-Error	voice port [chars]: Ground Start trunking not supported	This voice port does not support the 'connection trunk' command when\n\nground start signaling is configured. Trunking mode on this voice\n\ is supported when using loop start signaling.	-	"Shut down the voice port remove the 'connection trunk' and/or\n\ 'signal groundStart' command from the voice port configuration\n\ and unshut the voice port."
HTSP-5-UPDOWN	5-Notice	Trunk portchannel [[chars]] is [chars]	Trunk port:channel changed state.	-	LOG_SID_NO_ACTION
HTSP-5-UPDOWN	5-Notice	Trunk portchannel [[chars]] is [chars]	Trunk port:channel changed state.	-	LOG_SID_NO_ACTION
HISP5VPM_BUSYOUT	5-Notice	voice port [chars]: [chars] busyout	voice port busyout status changed	-	"use SHOW VOICE BUSYOUT to find out the reason why voice port busyout\n\ monitoring is triggered"
HISP5VPM_BUSYOUT	5-Notice	voice port [chars]: [chars] busyout	voice port busyout status changed	-	"use SHOW VOICE BUSYOUT to find out the reason why voice port busyout\n\ monitoring is triggered"
HISP5VPM_CABLE_STAT	5-Notice	voice port [chars]: cable [chars]	Cable for analog voice port is reconnected or removed	-	"Check the cable connection for this analog voice port"
HISP5VPM_CABLE_STAT	5-Notice	voice port [chars]: cable [chars]	Cable for analog voice port is reconnected or removed	-	"Check the cable connection for this analog voice port"
HISP5VPM_PCM_CAPTURE	5-Notice	User trigger PCM capture is [chars] on voice port [chars]	User trigger PCM capture is enabled or disable on this voice port	-	"This is just for information only"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HISPSVMPCM_CAPTURE	5-Notice	User trigger PCM capture is [chars] on voice port [chars]	User trigger PCM capture is enabled or disable on this voice port	-	"This is just for information only"
HTTP3CHK_CREATE_FAIL	3-Error	-	This message indicates detection of an HTTP Java applet in a response	cpp-unicode	"This message is for informational purposed only but may indicate" " a security problem."
HTTP-3-INIT_FAIL	3-Error	\ HTTP Process Init failed.	Initialization of the HTTP Subsystem has failed	http	"Reduce other system activity to ease memory demands. If " "conditions warrant upgrade to a larger memory configuration. "
HTTP-3-OUTOF_MEM	3-Error	\ HTTP out of memory.	An error occurred during initialization of the HTTP process. The HTTP process could not create crucial internal data structures that are required for operation of the HTTP subsystem. The most likely reason for this condition is an exhaustion of system memory.	http	"Reduce other system activity to ease memory demands. if " "conditions warrant upgrade to a larger memory configuration. "
HTTP3PROC_NOCREAT	3-Error	\ Unable to create HTTP process.	An error occurred during initialization of the HTTP process. The HTTP process that processes all HTTP requests and responses could not be created.	-	"Reduce other system activity to ease memory demands. If " "conditions warrant upgrade to a larger memory configuration. "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HTTPMCONNREFUSED	4-Warning	\ Number of connections per minute has exceeded the maximum limit[dec]	The message indicates that the current number of connections requested per minute has exceeded the limit specified by the platform. HTTP server will resume accepting the connections 15 seconds from the time the message is issued. This restriction is done as per the HTTP throttling functionality.	http	"Reduce connection rate to the server."
HTTPSRVSETUPFAILED	6-Information	\ Server setup failed	Setup of the HTTPS server to listen on the specified port number has failed.	http	"Disable the server verify that port number is correct " "and enable the server." "Reduce other system activity to ease memory demands. If " "conditions warrant upgrade to a larger memory configuration. "
HTTPC3CACHE_MEM	3-Error	\ HTTP Client Cache Init out of memory.	-	-	-
HTTPC3CACHE_MEM	3-Error	\ HTTP Client Cache Init out of memory.	-	-	-
HTTPC3CONNECT_NULL	3-Error	\ NULL connection structure for fd[dec] - closing socket.	The HTTP Client is receiving the socket READ event but it fails to locate the connection structure for this file descriptorfd.	-	"Record the error and traceback and report it to the system administrator."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HTTPC3CONNECT_NULL	3-Error	\ NULL connection structure for fd[dec] - closing socket.	The HTTP Client is receiving the socket READ event but it fails to locate the connection structure for this file descriptorfd.	-	"Record the error and traceback and report it to the system administrator."
HTTPC3COOKIE_MEM	3-Error	\ HTTP Client runs out of allowable memory to store cookies.	The total memory allocated for storing cookies has run out. All cookies received from the HTTP server will be dropped. Users may no longer be able to interact with a session-based origin server until memory is freed up.	-	"Users may want to try their requests at a later time or contact the " "system administrator to increase the maximum RAM allowed for saving " "HTTP cookies."
HTTPC3COOKIE_MEM	3-Error	\ HTTP Client runs out of allowable memory to store cookies.	The total memory allocated for storing cookies has run out. All cookies received from the HTTP server will be dropped. Users may no longer be able to interact with a session-based origin server until memory is freed up.	-	"Users may want to try their requests at a later time or contact the " "system administrator to increase the maximum RAM allowed for saving " "HTTP cookies."
HTTPC3-INIT_FAIL	3-Error	\ HTTP Client Process Init failed.	-	-	-
HTTPC3-INIT_FAIL	3-Error	\ HTTP Client Process Init failed.	-	-	-
HTTPC3OUTOF_MEM	3-Error	\ HTTP Client out of memory.	-	-	-
HTTPC3OUTOF_MEM	3-Error	\ HTTP Client out of memory.	-	-	-
HTTPC3OUTOF_SYNC	3-Error	\ HTTP Client header tables out of sync.	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HTTP3OUTOF_SYNC	3-Error	\ HTTP Client header tables out of sync.	-	-	-
HTTP3PROC_NOCREAT	3-Error	\ Unable to create HTTP Client process.	-	-	-
HTTP3PROC_NOCREAT	3-Error	\ Unable to create HTTP Client process.	-	-	-
<del>HTTP3READ_INTEREST_DISABLED</del>	3-Error	\ Received socket read event while read interest is disabled callID[dec] fd[dec] - closing socket.	The HTTP Client is receiving the socket READ event while the READ interest is being disabled. Something has gone wrong between the http client and the socket interfaced.	-	"Record the error and report it to the system administrator."
<del>HTTP3READ_INTEREST_DISABLED</del>	3-Error	\ Received socket read event while read interest is disabled callID[dec] fd[dec] - closing socket.	The HTTP Client is receiving the socket READ event while the READ interest is being disabled. Something has gone wrong between the http client and the socket interfaced.	-	"Record the error and report it to the system administrator."
<del>HTTP3ESV_CONNCP4</del>	6-Information	\ The connection to server [node] appears to be hung and will be closed.	-	-	-
<del>HTTP3ESV_CONNCP4</del>	6-Information	\ The connection to server [node] appears to be hung and will be closed.	-	-	-



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HTTPCRESV_CONCIPV6</del>	6-Information	\ The connection to server [chars] appears to be hung and will be closed.	Messages are being backed up in the HTTP Client's write queue in the connection with the specified server. The connection is assumed to have gone bad and the HTTP Client is closing the connection.	-	"Check with the specified server for possible connection error."
<del>HTTPCRESV_CONCIPV6</del>	6-Information	\ The connection to server [chars] appears to be hung and will be closed.	Messages are being backed up in the HTTP Client's write queue in the connection with the specified server. The connection is assumed to have gone bad and the HTTP Client is closing the connection.	-	"Check with the specified server for possible connection error."
<del>HTTPCONCIFAILEDPV4</del>	6-Information	\ The connection to server [node]failed	-	-	-
<del>HTTPCONCIFAILEDPV4</del>	6-Information	\ The connection to server [node]failed	-	-	-
<del>HTTPCONCIFAILEDPV6</del>	6-Information	\ The connection to server [chars] failed	-	-	-
<del>HTTPCONCIFAILEDPV6</del>	6-Information	\ The connection to server [chars] failed	-	-	-
<del>HTTPCREQUEST_FAILED</del>	6-Information	\ request URI [chars] failed	-	-	-
<del>HTTPCREQUEST_FAILED</del>	6-Information	\ request URI [chars] failed	-	-	-
HUJR-3-RDWRFAIL	3-Error	Read/write failed [[chars]]	A read/write error occurred when accessing the hardware	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HUNIGRP3INVALID_URL	3-Error	Could not open the file provided in URL: <[chars]>	URL path provided can't be accessed. This usually indicates\n\n that path provided is invalid but may also be because the the\n\n path doesn't allow anonymous access to create files or open it\n\n in write mode	cme-callcontrol	"Check that the url path provided is valid"
HUNIGRP3INVALID_URL	3-Error	Could not open the file provided in URL: <[chars]>	URL path provided can't be accessed. This usually indicates\n\n that path provided is invalid but may also be because the the\n\n path doesn't allow anonymous access to create files or open it\n\n in write mode	cme-callcontrol	"Check that the url path provided is valid"
HUNIGRP3WRITE_FAIL	3-Error	Could not write data to the URL: <[chars]>\n\t [node]ytes written=[dec] out of [dec]	Write attempt to the url path provided was unsuccessful. This usually \n\n indicates that the file was successfully opened with write and append \n\n permissions but writing all the content from buffer or may be some of \n\n it to the file failed.	cme-callcontrol	""

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HUNIGRP3-WRITE_FAIL	3-Error	Could not write data to the URL: <[chars]>\n\t [node]ytes written=[dec] out of [dec]	Write attempt to the url path provided was unsuccessful. This usually \n\ indicates that the file was successfully opened with write and append \n\ permissions but writing all the content from buffer or may be some of \n\ it to the file failed.	cme-callcontrol	""
<del>HW_API3-WALK_REQUEST</del>	3-Error	Backwalk request failed [chars]	A request to walk internal data structures has failed. Depending on criticality of the data accuracy of forwarding may impacted.	<del>COMMON_HW_API3_COMPONENT</del>	LOG_STD_ACTION
<del>HW_API3-WALK_REQUEST</del>	3-Error	Backwalk request failed [chars]	A request to walk internal data structures has failed. Depending on criticality of the data accuracy of forwarding may impacted.	<del>COMMON_HW_API3_COMPONENT</del>	LOG_STD_ACTION
<del>HW_API3-WALK_REQUEST</del>	3-Error	Backwalk request failed [chars] 0x[hec]	-	-	-
<del>HW_API3-WALK_REQUEST</del>	3-Error	Backwalk request failed [chars] 0x[hec]	-	-	-
HW_API3-INIT_FAIL	3-Error	HW-API init [chars] failed[chars]	HW_API3_INTERNAL_ERROR	HW_API3_COMPONENT	LOG_STD_ACTION
HW_API3-INIT_FAIL	3-Error	HW-API init [chars] failed[chars]	HW_API3_INTERNAL_ERROR	HW_API3_COMPONENT	LOG_STD_ACTION
HW_API3_INVALID_CONTEXT	3-Error	Invalid context 0x[hec]	HW_API3_INTERNAL_ERROR	HW_API3_COMPONENT	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HW_API3-INVALID_CONTEXT	3-Error	Invalid context 0x[hec]	HW_AH_INTERNAL_ERROR	HW_AHDISCOMPONENT	LOG_STD_ACTION
HW_API3-INVALID_OBJ	3-Error	Invalid object 0x[hec]	HW_AH_INTERNAL_ERROR	HW_AHDISCOMPONENT	LOG_STD_ACTION
HW_API3-INVALID_OBJ	3-Error	Invalid object 0x[hec]	HW_AH_INTERNAL_ERROR	HW_AHDISCOMPONENT	LOG_STD_ACTION
HW_API3-INVALID_TYPE	3-Error	Invalid type [dec]	HW_AH_INTERNAL_ERROR	HW_AHDISCOMPONENT	LOG_STD_ACTION
HW_API3-INVALID_TYPE	3-Error	Invalid type [dec]	HW_AH_INTERNAL_ERROR	HW_AHDISCOMPONENT	LOG_STD_ACTION
HW_API3-INVALID_WALK_SPEC	3-Error	Invalid walk spec 0x[hec]	HW_AH_INTERNAL_ERROR	HW_AHDISCOMPONENT	LOG_STD_ACTION
HW_API3-INVALID_WALK_SPEC	3-Error	Invalid walk spec 0x[hec]	HW_AH_INTERNAL_ERROR	HW_AHDISCOMPONENT	LOG_STD_ACTION
HW_API3-INVALID_SW_OBJ_TYPE	3-Error	Invalid sw_obj_type [dec] used with obj_type_list	-	-	-
HW_API3-INVALID_SW_OBJ_TYPE	3-Error	Invalid sw_obj_type [dec] used with obj_type_list	-	-	-
HW_API3-INVALID_SW_OBJ_LINK_TYPE	3-Error	Invalid sw_obj_link_type [dec] used with obj_type_list	-	-	-
HW_API3-INVALID_SW_OBJ_LINK_TYPE	3-Error	Invalid sw_obj_link_type [dec] used with obj_type_list	-	-	-
HW_API3-NO_HANDLERS	3-Error	No handlers in place for [chars] sw object creation failure.	COMMON_HW_INTERNAL_ERROR	COMMON_HW_AHDISCOMPONENT	LOG_STD_ACTION
HW_API3-NO_HANDLERS	3-Error	No handlers in place for [chars] sw object creation failure.	COMMON_HW_INTERNAL_ERROR	COMMON_HW_AHDISCOMPONENT	LOG_STD_ACTION
HW_API3-VECTOR	3-Error	Failed to set [chars] vector for [chars] [chars]	HW_AH_INTERNAL_ERROR	COMMON_HW_AHDISCOMPONENT	LOG_STD_ACTION
HW_API3-VECTOR	3-Error	Failed to set [chars] vector for [chars] [chars]	HW_AH_INTERNAL_ERROR	COMMON_HW_AHDISCOMPONENT	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HW_AWKMODE_USAGE</del>	3-Error	Walk mode '[chars]' unsupported	<del>HW_AH_INTERNAL_ERROR</del>	<del>HW_AH_DISCOMPONENT</del>	LOG_STD_ACTION
<del>HW_AWKMODE_USAGE</del>	3-Error	Walk mode '[chars]' unsupported	<del>HW_AH_INTERNAL_ERROR</del>	<del>HW_AH_DISCOMPONENT</del>	LOG_STD_ACTION
<del>FW_FLOWDB_DELETE_FEAT</del>	3-Error	FlowDB featobj cannot be deleted twice.	A feature attempted to remove a feature object pointer in flowDB that was already removed	-	"Bug in feature code track down why this happened"
<del>FW_FLOWDB_INSTALL_FEAT</del>	3-Error	FlowDB featobj cannot be installed twice.	A feature attempted to install a feature object pointer in flowDB that was already populated	-	"Bug in feature code track down why this happened"
<del>FW_FLOWDB_INVALID_PROTOCOL</del>	3-Error	FlowDB imprecise API detected invalid protocol '[dec]'.	A feature attempted to install an imprecise flow using an invalid protocol	-	"Bug in feature code track down why this happened"
<del>FW_FLOWDB_INVALID_CORE</del>	3-Error	FlowDB core [dec] detected invalid featobj owned by core [dec].	A feature attempted to validate a BAD feature object pointer in flowDB	-	"Bug in feature code track down why this happened"
<del>FW_FLOWDB_REMOVE_FLOW</del>	3-Error	FlowDB featobj remove attempted on core not owning flow.	A feature attempted to remove a featobj from a BAD flowDB entry	-	"Bug in feature code track down why this happened"
<del>FW_FLOWDB_NULL_FEAT</del>	3-Error	FlowDB featobj install attempted with invalid pointer.	A feature attempted to install a NULL feature object pointer in flowDB	-	"Bug in feature code track down why this happened"
<del>FW_FLOWDB_OOM</del>	3-Error	FlowDB memory usage exceeded 95[node]usage. OOM condition can occur.	FlowDB running low on memory. Out-of-memory condition can occur	cpp-ucode	"Check sw-distrib for actual utilization of FlowDB memory"
<del>FW_FLOWDB_RECOVER</del>	3-Error	FlowDB memory usage recovered. Memory usage no longer exceeds 95%%	FlowDB recovered from low memory.	cpp-ucode	"Check sw-distrib for actual utilization of FlowDB memory"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>FWFLOWDBFEATOBJ</del>	3-Error	FlowDB featobj remove attempted on stale entry.	A feature attempted to remove a feature object pointer in flowDB from a stale flow	-	"Bug in feature code track down why this happened"
<del>FWFLOWDBVALID</del>	3-Error	FlowDB failed to find matching flow during validation.	A feature attempted to validate an installed flow.	-	"No recommended action. Output is used as a debug aid."
<del>FWROMNOCLUID</del>	2-Critical	iosxe-binos-utils	No format	"This Router may not have been manufactured by Cisco or with Cisco's authorization. This product may contain software that was copied in violation of Cisco's license terms. If your use of this product is the cause of a support issue	-
<del>FWROMNOCHSUM</del>	3-Error	iosxe-binos-utils	The idprom contains an invalid checksum in a sensor entry. Expected:[hex]	-	-
<del>FWROMNOCHRMND</del>	3-Error	iosxe-binos-utils	The idprom contains an invalid environmental monitoring field.	"If this error occurs then parsing of the environmental monitoring data is aborted. Environmental monitoring will be either incomplete or absent entirely."	LOG_SID_RECUR_ACTION
<del>FWROMNOCHRMND</del>	3-Error	iosxe-chassismgr	%s in slot PFU%d has INVALID PID[chars] and it needs to be replaced immediately	"The PID read from the PEM IDPROM is not supported in this hardware configuration. It will be allowed to continue but immediate replacement is required"	LOG_SID_RECUR_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<b>HW_PFU_IDROM_CORRUPT</b>	3-Error	iosxe-chassismgr	The PEM/FM idprom could be read	-	-
<b>HW_PFU_IDROM_INVALID</b>	3-Error	iosxe-chassismgr	The PEM/FM idprom has invalid PID in slot PFU%d The system will run without environmental monitoring for this component	"The idprom contains PID information required in order to properly operate the environmental monitoring subsystems. The idprom PID is invalid	-
<b>HW_PFU_IDROM_READERR</b>	3-Error	iosxe-chassismgr	Could not read the PEM/FM idprom in slot P%d. The system will run without environmental monitoring for this component	"The idprom contains information required in order to properly operate the environmental monitoring subsystems. The idprom could not be read	-
<b>HW_PFU_UNSUPPORTED</b>	3-Error	asr900-system-rsp3	The PEM/FM in slot P%d is not supported. The system will run without environmental monitoring for this component	"The PEM/FM inserted in not supported by this platform. Replace with a supported module."	<b>LOG_SID_RECUR_ACTION</b>
<b>HW_TIMER_TICK_CARD</b>	2-Critical	[node]ums since last timer heartbeat processed	Something caused us to go long durations without processing timer heartbeats	-	"sh plat hard qfp act da inf time basic"msgdef_tac_details

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HW2CBSLEIE_HW_VR	2-Critical	Module Version in [chars] is obsolete\n\n* IMPORTANT !!!\n\n* The module in [chars] is obsolete and must be returned\n\n* via RMA to Cisco Manufacturing. If it is a lab unit * \n\n* it must be returned to Proto Services for upgrade. *\n\n	The Smart Cookie is obsolete and need to be replaced ASAP.	c2800	"Contact TAC" LOG_SID_RECUR_ACTION
HWMIMMCDNULPIR	3-Error	Unexpected null pointer in [chars] at [dec]	An internal software error occurred.	-	LOG_SID_SH_TECH_ACTION
I2C-3-ACCESS_ERR	3-Error	I2C access error [chars] for device [dec]	I2C device initialization error	cmts-platform	"Copy the error message exactly as it appears and report it to your " "technical support"
I2C-3-CONFIG_ERR	3-Error	I2C config failure [chars] for device [dec] value 0x[hec]	I2C device configuration error	cmts-platform	"Copy the error message exactly as it appears and report it to your " "technical support"
I2C-5-LTC4306	5-Notice	sanity check failed: device 0x[hec] channel [dec] action [chars] retry [dec] read back 0x[hec]		cmts-platform	
IAMP4CLIENT_ID_EXIST	4-Warning	Client id [[dec]] already exists	client id already exists in the database. Choose unique ID to solve this issue	mediatrace	"Applications could be re-registering or client id is in use by " "other application. If it is not due to duplicate registration " "it may be advisable to contact your Cisco technical support " "representative."





<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
IMP4CLIENT_REG_FAILED	4-Warning	-	-	-	-
ICC-2-JOIN	2-Critical	ICC mcast joining failed member <0x[hec]> to group <0x[hec]> with ipc error <[chars]>	ICC was not able to join a member for the mcast group	c7600-system	"collect output 'show icc mcast status' from RP"
ICC-2-NOMEM	2-Critical	No memory available for [chars]	The ICC subsystem could not obtain the memory it needed.	icc	LOG_SIDSHTTECH_ACTION
ICC-2-OPEN	2-Critical	ICC Create Session Failed for card <0x[hec]> Queue <[chars]>	ICC was not able to create a session for the destination seat	icc	"collect output from 'show oir debug swover_global_mask' from SP"
ICC3-MAST_BAD_FREE	3-Error	ICC multicast memory already freed	One of the ICC multicast request's memory was found to be free when response arrived	icc	LOG_SIDSHTTECH_ACTION
ICC4BAD_ACCOUNTING	4-Warning	ICC received a bad class [dec]	A communication failure has occurred between this card and\n another card in the system.	icc	LOG_SIDSHTTECH_ACTION
ICC-4-COMM	4-Warning	Communication failure occurred while [chars]	-	-	-
ICC-4-CONSISTENCY	4-Warning	Internal consistency check: [chars]	An internal inconsistency was found in some ICC data structures.	icc	LOG_SIDSHTTECH_ACTION
ICC-4-HEARTBEAT	4-Warning	Card [dec] failed to respond to heartbeat	A communication failure has occurred between the primary and\n the specified line card.	icc	LOG_SIDSHTTECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ICC-5-HUGE_BUFFER	5-Notice	Class [[chars]] with Request id [dec] requested a huge buffer of Size [dec].	Huge packet requests would deplete the memory at the linecards	-	"ICC client is trying to request huge packet buffer " "Please use the command Show icc internal to get " "get the traceback and file a DDTS against the component"
ICC-5-WATERMARK	5-Notice	[dec] [chars] [chars] pkts for class [chars] are waiting to be processed	Processor got packets for the class and are waiting to be processed	icc	LOG_STD_ACTION
ICPM-3-ALLOC	3-Error	Cannot alloc [chars]	An attempt to allocate an ICPM data structure failed because\n\ of a low memory condition.	mpls-ldp	ACTNSDLOWMEMORY
ICPM-3-ALLOC	3-Error	Cannot alloc [chars]	An attempt to allocate an ICPM data structure failed because\n\ of a low memory condition.	mpls-ldp	ACTNSDLOWMEMORY
<del>DMANAGER3ERR</del>	3-Error	iosxe-binos-utils	"Internal error occurred:[chars]"	"Internal Error occurred with ID Manager"	LOG_STD_ACTION
<del>DMANAGER3INVALID</del>	3-Error	iosxe-binos-utils	"bad id in [chars] (id: 0x%08X)"	"An ID Manager error occurred"	LOG_STD_ACTION
<del>DMANAGER3INVALIDTABLE</del>	3-Error	iosxe-binos-utils	"bad new ID table size"	"A bad new table request to ID Manager occurred"	LOG_STD_ACTION
DB_IDENTITY3MALLOC	3-Error	Memory allocation failure for HWIDB type [dec]	A memory allocation failure occurred when trying to allocate the identity for this HWIDB. This HWIDB will not be allocated an IF Index which will prevent it from being used for forwarding data.	ha-ifindex-sync	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IDB_IDENIIFY3MALLOC	3-Error	Memory allocation failure for HWIDB type [dec]	A memory allocation failure occurred when trying to allocate the identity for this HWIDB. This HWIDB will not be allocated an IF Index which will prevent it from being used for forwarding data.	ha-ifindex-sync	LOG_STD_ACTION
IDB_SGI-2-MEMREQ	2-Critical	[chars]	An internal software error occurred.	idb	LOG_STD_ACTION
IDB_SGI-2-MEMREQ	2-Critical	[chars]	An internal software error occurred.	idb	LOG_STD_ACTION
IDB_SGI-2-XDRREQ	2-Critical	[chars]	An internal software error occurred.	idb	LOG_STD_ACTION
IDB_SGI-2-XDRREQ	2-Critical	[chars]	An internal software error occurred.	idb	LOG_STD_ACTION
IDB_SGI-3-BADPTR	3-Error	[chars] of interface with ifindex [node] is invalid	An internal software error occurred.	Ownersoftheinterface	LOG_STD_ACTION
IDB_SGI-3-BADPTR	3-Error	[chars] of interface with ifindex [node] is invalid	An internal software error occurred.	Ownersoftheinterface	LOG_STD_ACTION
IDB_SGI-3-MEMFAIL	3-Error	[chars]	An internal software error occurred.	idb	LOG_STD_ACTION
IDB_SGI-3-MEMFAIL	3-Error	[chars]	An internal software error occurred.	idb	LOG_STD_ACTION
IDB_SGI-3-XDRREQ	3-Error	[chars]	An internal software error occurred.	xdr	LOG_STD_ACTION
IDB_SGI-3-XDRREQ	3-Error	[chars]	An internal software error occurred.	xdr	LOG_STD_ACTION
IDB_SGI-4-INTERR	4-Warning	[chars] for interface with ifindex %u	An internal software error occurred.	idb	LOG_STD_ACTION
IDB_SGI-4-INTERR	4-Warning	[chars] for interface with ifindex %u	An internal software error occurred.	idb	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IDB_SGI4MEMBERREQ	4-Warning	member request failure for interface with ifindex [node]n returned err - [chars]	An internal software error occurred.	sgi	LOG_STD_ACTION
IDB_SGI4MEMBERREQ	4-Warning	member request failure for interface with ifindex [node]n returned err - [chars]	An internal software error occurred.	sgi	LOG_STD_ACTION
IDB_SGI4UNEXPINP	4-Warning	[chars]	An internal software error occurred.	idb	LOG_STD_ACTION
IDB_SGI4UNEXPINP	4-Warning	[chars]	An internal software error occurred.	idb	LOG_STD_ACTION
<del>IDB_SGI4UNEXPINP</del>	3-Error	Interface type is unknown and cannot be synced: \[chars]\ [dec]	An internal software error has occurred.	<del>IDB_SGI4UNEXPINP</del>	LOG_STD_ACTION
<del>IDB_SGI4UNEXPINP</del>	3-Error	Interface type is unknown and cannot be synced: \[chars]\ [dec]	An internal software error has occurred.	<del>IDB_SGI4UNEXPINP</del>	LOG_STD_ACTION
<del>IDB_SGI4UNEXPINP</del>	3-Error	Failed to assign an index to IDB type [dec] for interface \[chars]\ rc=[dec]	An IF-Index can not be allocated for this interface due to an internal software error. This is an unrecoverable error that results in this interface not being usable for traffic.	<del>IDB_SGI4UNEXPINP</del>	LOG_STD_ACTION <del>IDB_SGI4UNEXPINP</del>
<del>IDB_SGI4UNEXPINP</del>	3-Error	Failed to assign an index to IDB type [dec] for interface \[chars]\ rc=[dec]	An IF-Index can not be allocated for this interface due to an internal software error. This is an unrecoverable error that results in this interface not being usable for traffic.	<del>IDB_SGI4UNEXPINP</del>	LOG_STD_ACTION <del>IDB_SGI4UNEXPINP</del>

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>IDBXSNCIDEXRMATCH</del>	3-Error	An interface index mismatched its active table entry: \[chars]\ type [dec] table index=[dec] interface index=[dec]	An interface index was found which didn't match the active interface index table entry with the corresponding sync key due to an internal software error.	<del>IDBXSNCIDDISCOMP</del>	<del>LOG_STD_ACTION IDBXSNCLOGSDACTN</del>
<del>IDBXSNCIDEXRMATCH</del>	3-Error	An interface index mismatched its active table entry: \[chars]\ type [dec] table index=[dec] interface index=[dec]	An interface index was found which didn't match the active interface index table entry with the corresponding sync key due to an internal software error.	<del>IDBXSNCIDDISCOMP</del>	<del>LOG_STD_ACTION IDBXSNCLOGSDACTN</del>
<del>IDBXSNCIDEXNKEY</del>	3-Error	Cannot initialize interface index table lookup key: \[chars]\ [dec]	An internal software error has occurred.	<del>IDBXSNCIDDISCOMP</del>	<del>LOG_STD_ACTION IDBXSNCLOGSDACTN</del>
<del>IDBXSNCIDEXNKEY</del>	3-Error	Cannot initialize interface index table lookup key: \[chars]\ [dec]	An internal software error has occurred.	<del>IDBXSNCIDDISCOMP</del>	<del>LOG_STD_ACTION IDBXSNCLOGSDACTN</del>
<del>IDBXSNCIDEXINK</del>	3-Error	Driver for IDB type '[dec]' changed the Identity of interface \[chars]\ without deleting the old Identity first rc=[dec]	The IF-Index Table can not be updated with the new Identity provided for this interface due to an internal software error. Most likely the old Identity was not deleted first by the driver or that the driver accidentally changed the Identity.	<del>IDBXSNCIDDISCOMP</del>	<del>LOG_STD_ACTION IDBXSNCLOGSDACTN</del>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<b>DBNEXSYNCDBNEXINK</b>	3-Error	Driver for IDB type '[dec]' changed the Identity of interface \[chars]\ without deleting the old Identity first rc=[dec]	The IF-Index Table can not be updated with the new Identity provided for this interface due to an internal software error. Most likely the old Identity was not deleted first by the driver or that the driver accidentally changed the Identity.	<b>DBNEXSYNCDBNEXCOMP</b>	<b>LOG_STD_ACTION</b> <b>DBNEXSYNCDBNEXACTION</b>
<b>DBNEXSYNCDBNEXIRME</b>	3-Error	Cannot retrieve if-index for this interface: \[chars]\ [dec] [chars] [chars]	The interface index number was not found in the interface index table for the interface specified in the error message. This condition might have been caused by the interface index number not being properly synchronized by the primary processor card.	<b>DBNEXSYNCDBNEXCOMP</b>	<b>LOG_STD_ACTION</b> <b>DBNEXSYNCDBNEXACTION</b>
<b>DBNEXSYNCDBNEXIRME</b>	3-Error	Cannot retrieve if-index for this interface: \[chars]\ [dec] [chars] [chars]	The interface index number was not found in the interface index table for the interface specified in the error message. This condition might have been caused by the interface index number not being properly synchronized by the primary processor card.	<b>DBNEXSYNCDBNEXCOMP</b>	<b>LOG_STD_ACTION</b> <b>DBNEXSYNCDBNEXACTION</b>
<b>DBNEXSYNC3INTERR</b>	3-Error	[chars]	The interface index sync ISSU client has an initialization error.	<b>DBNEXSYNCDBNEXCOMP</b>	<b>LOG_STD_ACTION</b> <b>DBNEXSYNCDBNEXACTION</b>

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<b>DBINDEX_SYNC3INT_ERR</b>	3-Error	[chars]	The interface index sync ISSU client has an initialization error.	<b>DBINDEX_SYNC3DISCOMP</b>	<b>LOG_STD_ACTION</b> <b>DBINDEX_SYNC3DISCOMP</b>
<b>DBINDEX_SYNC3IPC_ERR</b>	3-Error	[chars]: [chars] in domain [node]	The interface index sync IPC session has error.	<b>DBINDEX_SYNC3DISCOMP</b>	<b>LOG_STD_ACTION</b> <b>DBINDEX_SYNC3DISCOMP</b>
<b>DBINDEX_SYNC3IPC_ERR</b>	3-Error	[chars]: [chars] in domain [node]	The interface index sync IPC session has error.	<b>DBINDEX_SYNC3DISCOMP</b>	<b>LOG_STD_ACTION</b> <b>DBINDEX_SYNC3DISCOMP</b>
<b>DBINDEX_SYNC3ISSU_ERR</b>	3-Error	[chars][chars] rc=[dec]	The interface index sync ISSU client has error.	<b>DBINDEX_SYNC3DISCOMP</b>	<b>LOG_STD_ACTION</b> <b>DBINDEX_SYNC3DISCOMP</b>
<b>DBINDEX_SYNC3ISSU_ERR</b>	3-Error	[chars][chars] rc=[dec]	The interface index sync ISSU client has error.	<b>DBINDEX_SYNC3DISCOMP</b>	<b>LOG_STD_ACTION</b> <b>DBINDEX_SYNC3DISCOMP</b>
<b>DBINDEX_SYNC3ISREMOVE</b>	3-Error	Failed to remove node from the if-index entry list	When an if-index lookup failed on the Standby the process waits on timer till the standby receives the if-index or the timer expires To know which processes are waiting a list will be maintained and when any of the above mentioned events occurred the corresponding node from the list will be removed	<b>DBINDEX_SYNC3DISCOMP</b>	<b>LOG_STD_ACTION</b> <b>DBINDEX_SYNC3DISCOMP</b>



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>DBNEXSYNCIFREMOVE</del>	3-Error	Failed to remove node from the if-index entry list	When an if-index lookup failed on the Standby the process waits on timer till the standby receives the if-index or the timer expires To know which processes are waiting a list will be maintained and when any of the above mentioned events occurred the corresponding node from the list will be removed	<del>DBNEXSYNCDDISCOMP</del>	<del>LOG_STD_ACTION DBNEXSYNCLOGSIDACTN</del>
<del>DBNEXSYNC3RF_ERR</del>	3-Error	[chars] [dec] .	The interface index sync RF client has an error.	<del>DBNEXSYNCDDISCOMP</del>	<del>LOG_STD_ACTION DBNEXSYNCLOGSIDACTN</del>
<del>DBNEXSYNC3RF_ERR</del>	3-Error	[chars] [dec] .	The interface index sync RF client has an error.	<del>DBNEXSYNCDDISCOMP</del>	<del>LOG_STD_ACTION DBNEXSYNCLOGSIDACTN</del>
<del>DBNEXSYNC3IRANSORM</del>	3-Error	Require IF-Index ISSU transformation function [chars] [chars]	IF-Index Sync has identified a missing ISSU transformation function which may lead to unpredictable results. This must be resolved before the code is released.	<del>DBNEXSYNCDDISCOMP</del>	"Contact IF-Index Sync development team with the contents of the " "configuration and error message so that the driver may be identified."
<del>DBNEXSYNC3IRANSORM</del>	3-Error	Require IF-Index ISSU transformation function [chars] [chars]	IF-Index Sync has identified a missing ISSU transformation function which may lead to unpredictable results. This must be resolved before the code is released.	<del>DBNEXSYNCDDISCOMP</del>	"Contact IF-Index Sync development team with the contents of the " "configuration and error message so that the driver may be identified."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<b>DBINDEX_SYNC3VALIDAIE</b>	3-Error	Cannot validate if-index for this interface: \[chars]\[dec] [chars] [chars]	The identity of this interface could not be validated against the stored identity within the IDB Index table. This condition is likely to have occurred due to the identity of the IDB changing without first explicitly unlinking the previous identity.	<b>DBINDEX_SYNC3DISCOMP</b>	LOG_STD_ACTION <b>DBINDEX_SYNC3DISCOMP</b>
<b>DBINDEX_SYNC4VALIDAIE</b>	3-Error	Cannot validate if-index for this interface: \[chars]\[dec] [chars] [chars]	The identity of this interface could not be validated against the stored identity within the IDB Index table. This condition is likely to have occurred due to the identity of the IDB changing without first explicitly unlinking the previous identity.	<b>DBINDEX_SYNC4DISCOMP</b>	LOG_STD_ACTION <b>DBINDEX_SYNC4DISCOMP</b>
<b>DBINDEX_SYNC4RESERVE</b>	4-Warning	Failed to lookup existing ifindex for an interface on the Standby allocating a new ifindex from the Active ifindex=[dec] idbtype=[chars]	Encountered a lookup failure for an interface on the Standby. An attempt has been made to resolve the issue by reserving a possibly new ifindex on the Active. If this situation was encountered due to a defect in the key encoding then traffic may stop on this interface should the system switchover.	<b>DBINDEX_SYNC4DISCOMP</b>	LOG_STD_ACTION <b>DBINDEX_SYNC4DISCOMP</b>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DBNEX_SYNC4RESRME	4-Warning	Failed to lookup existing ifindex for an interface on the Standby allocating a new ifindex from the Active ifindex=[dec] idbtype=[chars]	Encountered a lookup failure for an interface on the Standby. An attempt has been made to resolve the issue by reserving a possibly new ifindex on the Active. If this situation was encountered due to a defect in the key encoding then traffic may stop on this interface should the system switchover.	DBNEX_SYNC4DISCOMP	LOG_STD_ACTION DBNEX_SYNC4DISCOMP
DBNEX_SYNC4RUNCAIE	4-Warning	Overflow in [chars] when encoding interface sync key got [dec] maximum is [dec]	When creating a unique sync key to represent an interface it has been detected that one of the attributes making up the key was truncated to fit in the allocated space in the key. This may lead to overlapping key allocations which would cause an error.	DBNEX_SYNC4DISCOMP	LOG_STD_ACTION DBNEX_SYNC4DISCOMP
DBNEX_SYNC4RUNCAIE	4-Warning	Overflow in [chars] when encoding interface sync key got [dec] maximum is [dec]	When creating a unique sync key to represent an interface it has been detected that one of the attributes making up the key was truncated to fit in the allocated space in the key. This may lead to overlapping key allocations which would cause an error.	DBNEX_SYNC4DISCOMP	LOG_STD_ACTION DBNEX_SYNC4DISCOMP

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IDMAN3AGGRIMMACH</del>	3-Error	[chars][dec] / [dec] does match internal slot/port state [chars][dec] / [dec]	There is an internal error that caused an invalid aggregate port\n\ to be used by the software.	<platform>	LOG_STD_ACTION
<del>IDMAN3DEHAGGCRIT</del>	3-Error	[chars][dec] / [dec] Group [dec] has been deleted but is being reused.	There is an internal error that caused an interface that has been deleted\n\ to be reused for a new aggregate port.	<platform>	LOG_STD_ACTION
<del>IDMAN3DRGRADNAD</del>	3-Error	IIF_ID registration failed for Port [chars] due to memory allocation failure. Port has been shutdown	The system is low on memory due to which IIF-ID registration failed. This results in failure to apply polices such as QoS and Security acls on this port.	<platform>	LOG_STD_ACTION "Once memory is available " 'run 'no shutdown' on the port."
<del>IDMAN3AGGRBNDWH</del>	3-Error	[chars][dec] / [dec] has an invalid bandwidth value of [dec]	There is an internal error that caused an invalid bandwidth to be used\n\ for an aggregate port.	<platform>	LOG_STD_ACTION
<del>IDMAN3INVALIDPORT</del>	3-Error	[chars]: trying to use invalid port number [dec] Max [dec]	There is an internal error that caused an invalid port number to be used\n\ by the software.	<platform>	LOG_STD_ACTION
<del>IDMAN3INVALIDMLAN</del>	3-Error	[chars]: trying to use invalid Vlan [dec]	There is an internal error that caused an invalid Vlan to be used \n\ by the software.	<platform>	LOG_STD_ACTION
<del>IDMAN3NOIANAGGCRIT</del>	3-Error	[chars] [dec] / [dec] is not an aggregate port	There is an internal error that caused an interface that is not an aggregate\n\ port to be used for aggregate port operations	<platform>	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DBMAN3CRNOINAGGPORT	3-Error	[chars][dec] / [dec] is not present in Aggport [chars][dec] / [dec]	There is an internal error that caused an invalid port to be referred\n\ to be part of an aggregate port.	<platform>	LOG_STD_ACTION
IDBMAN3VLANNINUSE	3-Error	[chars]: Vlan [dec] is in use by [chars]	Each L3 interface has a Vlan associated with it. This message indicates \n\ that the Vlan associated with the interface is being used by some other \n\ L3 Interface which is not anticipated to happen	<platform>	LOG_SID_NO_ACTION
IDBMAN3VLANNNOISET	3-Error	[chars]: Vlan [dec] not set since it already has Vlan [dec]	There is an internal error that caused an interface to not have its\n\ Vlan set to the requested value	<platform>	LOG_STD_ACTION
DBMAN3CMHCRSAAGGPORT	4-Warning	[chars] [dec] / [dec] has [dec] active ports but is being removed	There is an internal error that caused an aggregate port with active ports\n\ to be removed	<platform>	LOG_STD_ACTION
DBMAN3CRNOINAGGPORT	4-Warning	Removed non default configuration for interfaces in [chars]	In SSO mode the non-default configuration for any removed linecard is\n\ not synced to the standby during the bulk sync and it is removed from\n\ the configuration to avoid a config mismatch between active and standby\n\ supervisors.	<platform>	LOG_SID_NO_ACTION
IDBMAN3VLANNMAPPED	6-Information	Vlan [dec] is mapped to [chars]	Informational message indicating that the given Vlan is mapped \n\ to the given interface	<platform>	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IDENT-4-LDP	4-Warning	ERRMSG_LMT_SLOW*15	-	-	-
IDENT-4-LDP	4-Warning	ERRMSG_LMT_SLOW*15	-	-	-
<del>IDMGR3GENERALERR</del>	3-Error	[chars]	Internal Error occurred with ID Manager.	os	LOG_STD_ACTION
<del>IDMGR3GENERALERR</del>	3-Error	[chars]	Internal Error occurred with ID Manager.	os	LOG_STD_ACTION
IDMGR3-INTERRUPT	3-Error	[chars]	An id_get attempted at interrupt level.	-	LOG_STD_ACTION
IDMGR3-INTERRUPT	3-Error	[chars]	An id_get attempted at interrupt level.	-	LOG_STD_ACTION
IDMGR3-INVALID_ID	3-Error	bad id in [chars] id: 0x[node]	An ID Manager error occurred.	-	LOG_STD_ACTION
IDMGR3-INVALID_ID	3-Error	bad id in [chars] id: 0x[node]	An ID Manager error occurred.	-	LOG_STD_ACTION
<del>IDMGR3INVALIDID</del>	3-Error	bad new ID table size	A bad new table request to ID Manager occurred.	-	LOG_STD_ACTION
<del>IDMGR3INVALIDID</del>	3-Error	bad new ID table size	A bad new table request to ID Manager occurred.	-	LOG_STD_ACTION
<del>IDMGR3MALLOC_FAILURE</del>	3-Error	[chars]	A malloc failure occurred in ID Manager.	-	LOG_STD_ACTION
<del>IDMGR3MALLOC_FAILURE</del>	3-Error	[chars]	A malloc failure occurred in ID Manager.	-	LOG_STD_ACTION
<del>IDMGR3CORRECTMALLOC</del>	3-Error	Error: Unable to handle request [node]x	Unable to handle a client request	identity	"Contact support"
IDMGR3-EMPTYREQ	3-Error	Error: empty request received	Unable to handle a client request/event	identity	"Contact support"
IDMGR3-INVALIDARG	3-Error	Error: Argument [chars] with NIL value	Internal software error	identity	"Contact support"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IDMNGR3NAUDEVENT	3-Error	Error: Invalid process event received [dec]	Internal process error	identity	"Contact support"
IDMNGR3NALREQUEST	3-Error	Error: Invalid request type received [dec]	Unable to handle a client request	identity	"Contact support"
IDMNGR3NOPROCESS	3-Error	Error: NO idmgr process	Internal software error	identity	"Contact support"
IDMNGR3PROCNAME	3-Error	Error: Unable to get idmgr process name for request [node]x	Unable to handle a client request/event	identity	"Contact support"
IDMNGR7-ALLOCFAIL	7-Debug	Error: Failed to allocate memory for [chars]	Internal software error	identity	"Contact support"
DS4ICMP_ECHO_REPLY_SIG	4-Warning	Sig:2000:ICMP Echo Reply - from [node]to %i	-	ids	"This is extremely common network traffic. Suspicion should be raised when a large number of these packets are found on the network. If no legitimate reason for this traffic can be identified prudent security practices would suggest that the source be shunned."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IDS4ICMP_ECHO_SIG	4-Warning	Sig:2004:ICMP Echo Request - from [node]to %i	-	ids	<p>"The ICMP Echo Request is issued by the source to determine if the destination is "alive". When the destination receives the request it will reply with an ICMP Echo Reply. This request/reply pair is most commonly implemented via the "ping" utility. Many network management tools use this utility or some derivative. This is extremely common network traffic. Suspicion should be raised when a large number of these packets are found on the network. If no legitimate reason for this traffic can be identified prudent security practices would suggest that the source be shunned."</p>



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DS4ICMP_FRAGMNT_SG	4-Warning	Sig:2150:Fragmented ICMP Traffic - from [node]to %i	-	ids	"IP datagrams may be fragmented normally as they are transported across the network but ICMP is rarely fragmented. The traffic should be investigated. If no legitimate reason for the fragmentation can be found and especially if the packets seem to be originating from a single source prudent security practices would suggest that the host be shunned."
DS4ICMP_NO_RHLY_SG	4-Warning	Sig:2010:ICMP Information Reply - from [node]to %i	Triggers when a IP datagram is received with the "protocol" field of the IP header set to 1 ICMP	ids	"This datagram type is obsolete and should not be encountered. When non-specific network traffic of this type is encountered the most prudent action from a security perspective is to shun or disallow it. If the source of this traffic is legitimate the user will then identify him or herself."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IDS4-ICMP_INFO_SIG	4-Warning	Sig:2009:ICMP Information Request - from [node]to %i	-	ids	"This datagram type is obsolete and should not be encountered. When non-specific network traffic of this type is encountered the most prudent action from a security perspective is to shun or disallow it. If the source of this traffic is legitimate the user will then identify him or herself."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DS4ICMP_MASK_REPLY_SG	4-Warning	Sig:2012:ICMP Address Mask Reply - from [node]to %i	-	ids	"The ICMP Address Mask Request/Reply pair can be used to determine the subnet mask used on the network. The requesting system issues the Address Mask Request bound for a destination the destination system responds with an Address Mask Reply message. This is normal network traffic but is uncommon on most networks. Suspicion should be raised when a large number of these packets are found on the network. If no legitimate reason for this traffic can be identified prudent security practices would suggest that the source be shunned."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IDS4ICMP_MASK_SIG	4-Warning	Sig:2011:ICMP Address Mask Request - from [node]to %i	-	ids	"The ICMP Address Mask Request/Reply pair can be used to determine the subnet mask used on the network. The requesting system issues the Address Mask Request bound for a destination the destination system responds with an Address Mask Reply message. This is normal network traffic but is uncommon on most networks. Suspicion should be raised when a large number of these packets are found on the network. If no legitimate reason for this traffic can be identified prudent security practices would suggest that the source be shunned."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IDS:ICMP_PARAMETER_PROBLEM	4-Warning	Sig:2006:ICMP Parameter Problem on Datagram - from [node]to %i	Triggers when a IP datagram is received with the \n\ "protocol" field of the IP header set to 1 ICMP	ids	"ICMP Parameter Problem datagrams are issued when a router\n\nhas had to drop a datagram because it was malformed. This is a normal and\n\nnecessary type of network traffic. Large numbers of this datagram type on\n\nthe network are indicative of network difficulties or may be indicative of\n\nhostile actions. If no network problems can be identified to account for the\n\ntraffic prudent security practices would suggest that the source be shunned."
IDS:ICMP_PING_DENIED	4-Warning	Sig:2154:ICMP Ping of Death Attack - from [node]to %i	-	ids	"This indicates a denial of service attack. It is likely that the source\n\naddress has been spoofed making shunning ineffective"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IDS4ICMP_REDIRECT_SG	4-Warning	Sig:2003:ICMP Redirect - from [node]to %i	-	ids	"The redirect message may be issued from a router to inform a host of a better route to a requested destination. The host then updates its routing table to include this route. This method of updating routing tables is an uncommon practice today. When non-specific network traffic of this type is encountered the most prudent action from a security perspective is to shun or disallow it. If the source of this traffic is legitimate the user will then identify him or herself."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
D <del>S</del> CMPSURICQUENCHSG	4-Warning	Sig:2002:ICMP Source Quench - from [node]to %i	-	ids	<p>"This datagram may be used in network management to provide\n\congestion control. A source quench packet will be issued when a router is\n\beginning to lose packets due to the transmission rate of a source. The\n\source quench is a request to the source to reduce the rate of datagram\n\transmission. This datagram type is rarely if ever seen on networks and some\n\systems do not even support it. Large numbers of this datagram type on the\n\network are indicative of network difficulties or may be indicative of\n\nhostile actions. If no network problems can be identified to account for the\n\traffic prudent security practices would suggest that the source be shunned."</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DS4ICMP_TIMEREPLY_SG	4-Warning	Sig:2008:ICMP Timestamp Reply - from [node]to %i	-	ids	"The ICMP Timestamp Request/Reply pair can be used to\n\synchronize system clocks on the network. The requesting system issues the\n\Timestamp Request bound for a destination the destination system responds\n\nwith a Timestamp Reply message. This is normal network traffic but is\n\nuncommon on most networks. Suspicion should be raised when a large number of\n\nthese packets are found on the network. If no legitimate reason for this\n\ntraffic can be identified prudent security practices would suggest that the\n\nsource be shunned."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IDS4ICMP_TIME_SIG	4-Warning	Sig:2007:ICMP Timestamp Request - from [node]to %i	-	ids	"The ICMP Timestamp Request/Reply pair can be used to\n\rsynchronize system clocks on the network. The requesting system issues the\n\Timestamp Request bound for a destination the destination system responds\n\nwith a Timestamp Reply message. This is normal network traffic but is\n\nuncommon on most networks. Suspicion should be raised when a large number of\n\nthese packets are found on the network. If no legitimate reason for this\n\ntraffic can be identified prudent security practices would suggest that the\n\nsource be shunned."
IDS4ICMP_TIMEXCEED_SIG	4-Warning	Sig:2005:ICMP Time Exceeded for a Datagram - from [node]to %i	Triggers when a IP datagram is received with the \n\ "protocol" field of the IP header set to 1 ICMP and the "type" \n\nof the datagram Time Exceeded datagrams are issued when a router has\n\nhad to drop a datagram whose Time to Live	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IDS4ICMP_TOOLARGE_SG	4-Warning	Sig:2151:Large ICMP Traffic - from [node]to %i	While it is possible to receive ICMP datagrams that have a size greater than 1024 bytes this is a highly unusual occurrence that warrants investigation.	ids	"While it is possible to receive ICMP datagrams that have a size greater than 1024 bytes this is a highly unusual occurrence that warrants investigation. If no legitimate reason for the large packet size can be found and especially if the packets seem to be originating from a single source prudent security practices would suggest that the host be shunned."
IDS4ICMP_UNREACH_SG	4-Warning	Sig:2001:ICMP Host Unreachable - from [node]to %i	-	ids	"This is the common response provided to a client when there is no path available to the requested host. This is a very common type of network traffic. Large numbers of this datagram type on the network are indicative of network difficulties or may be indicative of hostile actions. If no network problems can be identified to account for the traffic prudent security practices would suggest that the source be shunned."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IDS4IP_IMPOSSIBLE_SIG	4-Warning	Sig:1102:Impossible IP Packet - from [node]to %i	This triggers when an IP packet arrives with source\n\ equal to destination address. This signature will\n\ catch the so-called Land Attack.	ids	"This should never occur in legitimate traffic."
IDS4IP_UNKNOWN_PROTOCOL_SIG	4-Warning	Sig:1101:Unknown IP Protocol - from [node]to %i	Triggers when an IP datagram is received with the protocol\n\ field set to 101 or greater. The use of these protocol\n\ types is highly unusual and should be investigated.	ids	"Locally developed protocols that may use \n\these protocol types will trigger the signature. The use of these \n\protocol types is highly unusual and should be investigated. When \n\non-specific network traffic of this type is encountered the most \n\prudent action from a security perspective is to shun or disallow it.\n\nIf the source of this traffic is legitimate the user will then \n\nidentify him or herself."
IDS4IP_FRAG_ATTACK_SIG	4-Warning	Sig:1100:IP Fragment Attack - from [node]to %i	Triggers when any IP datagram is received with the\n\ 'more fragments' flag set to 1 or if there is an\n\ offset indicated in the offset field.	ids	"IP datagrams may be fragmented normally as they\n\are transported across the network. This is not uncommon but is \n\nunusual enough that the traffic should be investigated. This is \n\nespecially important if the network is protected by a packet \n\nfiltering firewall."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IDS4-IPOPT_LSRR_SIG	4-Warning	Sig:1004:IP options-Loose Source Route - from [node]to %i	Triggers on receipt of an IP datagram where the IP option list for the datagram includes option 3 Loose Source Route. This option may be misused to defeat	ids	"While network troubleshooting may require the legitimate use of this feature this type of traffic is rarely if ever noted and should comprise much less than 1% of network traffic. Small amounts of source routed traffic most probably indicates that a network problem is being investigated. Large amounts of source routed traffic is more suspicious and a thorough investigation of the source and reason is indicated."
IDS4-IPOPT_RR_SIG	4-Warning	Sig:1001:IP options-Record Packet Route - from [node]to %i	The IP options list contains one or more options that perform various network management or debugging tasks. This alarm may indicate a reconnaissance attack is in progress against your network.	ids	"While network troubleshooting may require the legitimate use of this feature this is unusual traffic that warrants investigation. When non-specific network traffic of this type is encountered the most prudent action from a security perspective is to shun or disallow it. If the source of this traffic is legitimate the user will then identify him or herself."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IDS4IPOPT_SATID_SIG	4-Warning	Sig:1005:IP options-SATNET ID - from [node]to %i	Triggers on receipt of an IP datagram where the IP option list for the datagram includes option 8 SATNET stream identifier. No known exploit exists.	ids	"This option is obsolete and should not be encountered. When non-specific network traffic of this type is encountered the most prudent action from a security perspective is to shun or disallow it. If the source of this traffic is legitimate the user will then identify him or herself."
IDS4IPOPT_SECURITY_SIG	4-Warning	Sig:1003:IP options-Provide schtcc - from [node]to %i	Triggers on receipt of an IP datagram where the IP option list for the datagram includes option 2. No known exploit exists.	ids	"This signature will trigger if you have implemented IP security options on your network. However this is rarely if ever implemented. When non-specific network traffic of this type is encountered the most prudent action from a security perspective is to shun or disallow it. If the source of this traffic is legitimate the user will then identify him or herself."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IDS-4-IPOPT_SSRR_SIG	4-Warning	Sig:1006:IP options-Strict Source Route - from [node]to %i	-	ids	"While network troubleshooting may require the legitimate use of this\n\feature this type of traffic is rarely if ever noted and should \n\comprise much less than 1[node]f network traffic. Small amounts of source \n\routed traffic most probably indicates that a network problem is being \n\investigated. Large amounts of source routed traffic is more suspicious \n\and a thorough investigation of the source and reason is indicated."
IDS-4-IPOPT_TS_SIG	4-Warning	Sig:1002:IP options-TimeStamp - from [node]to %i	-	ids	"While network troubleshooting may require \n\the legitimate use of this feature this is unusual traffic that warrants\n\investigation. When non-specific network traffic of this type is \n\encountered the most prudent action from a security perspective is \n\to shun or disallow it. If the source of this traffic is legitimate \n\the user will then identify him or herself."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IDS4ILOPTS_BAD_SIG	4-Warning	Sig:1000:Bad IP Option List - from [node]to %i	Triggers on receipt of an IP datagram where the list of IP options in the IP datagram header is incomplete or malformed. No known exploits purposely incorporate this option.	ids	"There is no legitimate use for malformed datagrams. This may be indicative of systems that are experiencing problems with their kernel or NIC cards. This is unusual traffic and warrants investigation. When non-specific network traffic of this type is encountered the most prudent action from a security perspective is to shun or disallow it. If the source of this traffic is legitimate the user will then identify him or herself."
IDS4LOST_CONNECT	4-Warning	Connection to HostID:[node]OrgID:%u	Triggers when a connection drops and there is no previous connection.	ids	"This message indicates that the IDS cannot communicate with the Director. Check connectivity to the Director and check Postoffice configuration on both the router and the Director."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
DS4RPC_CALL_REQUEST	4-Warning	Sig:6103:Proxied RPC Request - from [node]to %i	Triggers when a proxied RPC request is sent to the portmapper\n\ of a target host.	ids	"If this procedure is allowed on your network those users\n\that employ it will trigger the signature. This may be a serious attempt at\n\gaining unauthorized access and if the source of the attempt is not within\n\your network they should be shunned."
DS4RPC_DUMP_REQUEST	4-Warning	Sig:6102:RPC Dump - from [node]to %i	Triggers when an RPC dump request is issued to a target host.	ids	"This is a common procedure performed by many system\n\administrators and wary users to determine which RPC services are being\n\offered. Executing this procedure is most likely due to curiosity on the\n\part of a novice user or a system administrator performing system\n\maintenance. If upon investigation no valid user can be associated with this\n\event prudent security practices would suggest shunning the source."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DS4RPC_PORREQ_MOUNID	4-Warning	Sig:6155:RPC mountd Portmap Request - from [node]to %i	Triggers when a request is made to the portmapper for the mount daemon mountd port.	ids	"If this procedure is allowed on your network those users that employ it will trigger the signature. This may be a serious attempt at gaining unauthorized access and if the source of the attempt is not within your network they should be shunned."
DS4RPC_PORREQ_REXD	4-Warning	Sig:6175: RPC rexd Portmap Request - from [node]to %i	-	ids	"If this procedure is allowed on your network those users who employ it will trigger the signature. This may be a serious attempt at gaining unauthorized access and if the source of the attempt is not within your network it should be shunned."
DS4RPC_PORREQ_YBIND	4-Warning	Sig:6151:RPC ypbind Portmap Request - from [node]to %i	Triggers when a request is made to the portmapper for the YP bind daemon ypbind port.	ids	"If this procedure is allowed on your network those users that employ it will trigger the signature. This may be a serious attempt at gaining unauthorized access and if the source of the attempt is not within your network they should be shunned."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DSRPC CR REQ YPPASSWD	4-Warning	Sig:6152:RPC ypbind yppasswdd Portmap Request - from [node]to %i	Triggers when a request is made to the portmapper for the YP\n\ password daemon yppasswdd port.	ids	"If this procedure is allowed on your network those users\n\that employ it will trigger the signature. This may be a serious attempt at\n\gaining unauthorized access and if the source of the attempt is not within\n\your network they should be shunned."
DSRPC CR REQ YPSERV	4-Warning	Sig:6150:RPC ypserv Portmap Request - from [node]to %i	Triggers when a request is made to the portmapper for the YP\n\ server daemon ypserv port.	ids	"If this procedure is allowed on your network those users\n\that employ it will trigger the signature. This may be a serious attempt at\n\gaining unauthorized access and if the source of the attempt is not within\n\your network they should be shunned."
DSRPC CR REQ YPUAIED	4-Warning	Sig:6153:RPC ypupdated Portmap Request - from [node]to %i	Triggers when a request is made to the portmapper for the YP\n\ update daemon ypupdated port.	ids	"If this procedure is allowed on your network those users\n\that employ it will trigger the signature. This may be a serious attempt at\n\gaining unauthorized access and if the source of the attempt is not within\n\your network they should be shunned."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IDS4RPC_FORIREQ_YPRD	4-Warning	Sig:6154:RPC ypxfrd Portmap Request - from [node]to %i	Triggers when a request is made to the portmapper for the\n\ YP transfer daemon ypxfrd port.	ids	"If this procedure is allowed on your network those users\n\nthat employ it will trigger the signature. This may be a serious attempt at\n\gaining unauthorized access and if the source of the attempt is not within\n\nyour network they should be shunned."
IDS4RPC_REXD_REQUEST	4-Warning	Sig:6180:RPC rexd Attempt - from [node]to %i	Triggers when a call to the rexd program is made. The remote execution \n\daemon is the server responsible for remote program execution. This\n\nmay be indicative of an attempt to gain unauthorized access to system \n\nresources.	ids	"If this service is being used legitimately this alarm will\n\nfire. For security purposes this service really should not be used."
IDS4RPC_SET_REQUEST	4-Warning	Sig:6100:RPC Port Registration - from [node]to %i	Triggers when attempts are made to register new RPC services\n\n on a target host.	ids	"No benign triggers exist for this signature. Prudent\n\nsecurity practices suggest that the source of this attempt should be\n\nshunned."
IDS4RPC_STAID_OMLW	4-Warning	Sig:6190:statd Buffer Overflow - from [node]to %i	Triggers when a large statd request is sent.	ids	"You should not see this in legitimate traffic."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
IDS4RPC_UNSET_REQUEST	4-Warning	Sig:6101:RPC Port Unregistration - from [node]to %i	Triggers when attempts are made to unregister new RPC services\n\n on a target host.	ids	"No benign triggers exist for this signature. Prudent\n\nsecurity practices suggest that the source of this attempt should be\n\nshunned."
IDS4SIR_MATCH_SIG	4-Warning	Sig:8000:FTP Retrieve Password File - from [node]to %i	Triggers on string "passwd" issued during an FTP session.	ids	"System administrators might use this service to update\n\nsystem files. It is a high security risk if this is normal practice and\n\nshould be avoided. No other benign triggers exist for this signature. If\n\nafter investigation the alarm was not generated by a system administrator\n\nprudent security practices would suggest that the source be shunned."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IDS4TCP_FIN_ONLY_SIG	4-Warning	Sig:3042:TCP - FIN bit with no ACK bit in flags - from [node]to %i	Triggers when a TCP packet is received with the \n\n FIN bit set but with no ACK bit set in the flags field.	ids	"There is no legitimate use for malformed TCP datagrams. This is \n\nunusual traffic and warrants investigation. Hacker tools will generate\n\nTCP packets with the FIN bit set but with no ACK bit set in the flags \n\nfield in an attempt to elude intrusion dection. When non-specific network \n\ntraffic of this type is encountered the most prudent action from a \n\nsecurity perspective is to shun or disallow it. If the source of this \n\ntraffic is legitimate the user will then identify him or herself."
IDS4ICP_FIP_CWD_ROOT_SIG	4-Warning	Sig:3152:FTP CWD root - from [node]to %i	root - from [node]to %i	ids	root command.
IDS4ICP_FIP_CWD_ROOT_SIG	4-Warning	Sig:3153:FTP Improper Address Specified - from [node]to %i	Triggers if a port command is issued with an address that is not the same \n\nas the requesting host.	ids	"Triggers if a port command is issued with an address that is\n\nnot the same as the requesting host."
IDS4ICP_FIP_CWD_ROOT_SIG	4-Warning	Sig:3154:FTP Improper Port Specified - from [node]to %i	Triggers if a port command is issued with a data port specified that is \n\n<1024 or >65535.	ids	"Triggers if a port command is issued with a data port specified\n\nthat is <1024 or >65535."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IDS4-TCP_FTP_SITE_SIG	4-Warning	Sig:3150:FTP Remote Command Execution - from [node]to %i	Triggers when someone tries to execute the FTP SITE command.	ids	"The FTP Site command allows a user to execute a limited number of commands via the FTP server on the host machine. No authentication is required to execute the command. The commands that may be executed vary from system to system and on many systems the SITE command is not implemented. Recommend that the SITE command be disabled on FTP servers if possible. If this signature is triggered from a source outside of your network prudent security practices would suggest that the source be shunned."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
IDS4TCP_FIP_SYST_SIG	4-Warning	Sig:3151:FTP SYST Command Attempt - from [node]to %i	Triggers when someone tries to execute the FTP SYST command.	ids	"The FTP SYST command returns the type of operating system\nthat the FTP server is running. Authentication is not required to execute\nthis command. SYST provides information that may be used to refine attack\nmethods. FTP from Linux causes SYST signature to fire. Some proxies such as\nthe TIS Toolkit issue the SYST command as a matter of course. Running an\nFTP version with SYST disabled."
IDS4Majordomo_EXCHG	4-Warning	Sig:3107:Majordomo Execute Attack - from [node]to %i	A bug in the Majordomo program will allow remote users to\nexecute arbitrary commands at the privilege level of the\nserver.	ids	"Prudent security practices would suggest that the source of this\nattempt be shunned."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<b>IDS4TCP_NO_FLAGS_SG</b>	4-Warning	Sig:3040:TCP - No bits set in flags - from [node]to %i	Triggers when a TCP packet is received with no bits set in the flags field.	ids	"There is no legitimate use for malformed TCP datagrams. This is unusual traffic and warrants investigation. Hacker tools will generate TCP packets with no bits set in the flags field in an attempt to elude intrusion detection. When non-specific network traffic of this type is encountered the most prudent action from a security perspective is to shun or disallow it. If the source of this traffic is legitimate the user will then identify him or herself."
<b>IDS3SENDMAILBADFROMSG</b>	4-Warning	Sig:3102:Sendmail Invalid Sender - from [node]to %i	-	ids	"For security reasons users should not be allowed to execute programs via e-mail servers. This is a very serious indication that your network may be under attack and the source should be shunned immediately."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
D81CPSNDMAILBADTOSG	4-Warning	Sig:3101:Sendmail Invalid Recipient - from [node]to %i	-	ids	"For security reasons users should not be allowed to execute\n\programs via e-mail servers. This is a very serious indication that your\n\network may be under attack and the source should be shunned immediately."
D81CPSNDMAILBUNCEG	4-Warning	Sig:3100:Smail Attack - from [node]to %i	Triggers on the very common "smail" attack against e-mail\n\ servers. This attack attempts to cause e-mail servers to\n\ execute programs on the attacker's behalf.	ids	"For security reasons users should not be allowed to execute\n\programs via e-mail servers. This is a very serious indication that your\n\network may be under attack and the source should be shunned immediately. "
D81CPSNDMAILDCODE	4-Warning	Sig:3105:Sendmail Decode Alias - from [node]to %i	Triggers on any mail message with ": decode@" in the header.\n\ The decode alias is used to uudecode files and is primarily\n\ implemented as a convenience for system administration.	ids	"The decode alias is used to uudecode files and is primarily\n\nimplemented as a convenience for system administration. For security\n\npurposes this should not be allowed and the service should be disabled. If\n\nallowed users that mail to the alias will trigger this signature. Recommend\n\nshunning of hosts that attempt to mail to this alias especially if they are\n\noutside of your network."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<b>IDSSENDMAILCMD</b>	4-Warning	Invalid SMTP command - from [node]to %i	Triggers on an invalid SMTP command in the \n\ SMTP connection. This message indicates that a suspicious violation \n\ was detected that may be an attack to the mail server system.	ids	"This is unusual traffic and may warrant investigation."
<b>IDS4CPSENDMAIL_CIDSG</b>	4-Warning	Sig:3104:Archaic Sendmail Attacks - from [node]to %i	Triggers when "wiz" or "debug" commands are sent to the SMTP port.	ids	"There is no reason for this type of traffic to be seen on\n\nmodern networks. There is little chance that there will be any adverse\n\neffects from someone attempting these "old" hacks. Prudent security\n\npractices would suggest that the source of this attempt be shunned."
<b>IDS4CPSENDMAIL_SPMSG</b>	4-Warning	Sig:3106:Excessive Rcpt to: SPAM - from [node]to %i	Parse for RCPT TO: in header. Alarm on threshold.	ids	"Some mailing list software may trigger this signature."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DSMCPSENDMAIL_VRFYSG	4-Warning	Sig:3103:Sendmail Reconnaissance - from [node]to %i	Triggers when "expn" or "vrfy" commands are issued to\n\ the SMTP port.	ids	"These commands are commonly used to verify that a user mail\n\account exists on the server or to expand an alias to determine who the\n\actual recipients of a message may be. Users that use the EXPN and VRFY\n\functions for legitimate purposes will trigger this signature. The\n\information that can be obtained is useful but not dangerous on its own.\n\Monitoring of future traffic for patterns of misuse is recommended."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IDS4ICP_SYN_ATTACK_SG	4-Warning	Sig:3050:Half-Open Syn Flood - from [node]to %i	Triggers when the number of half-open TCP connections\n\nexceeds the high-water mark or the one minute high rate mark	ids	"There are no known sources that would legitimately generate\n\nthis traffic pattern. This may be indicative of some type of network problem\n\nand should be investigated. To avoid depletion of your network resources it\n\nis recommended that the source be shunned during the course of the\n\ninvestigation. If no network problems are discovered prudent security\n\npractices would suggest that the source be shunned permanently."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IDS4TCP_SYN_FIN_SIG	4-Warning	Sig:3041:TCP - SYN and FIN bits set - from [node]to %i	Triggers when a TCP packet is received with both the SYN and FIN bits set in the flags field.	ids	"There is no legitimate use for malformed TCP datagrams. This is unusual traffic and warrants investigation. Hacker tools will generate TCP packets with the SYN and FIN bits set in the flags field in an attempt to elude intrusion detection. When non-specific network traffic of this type is encountered the most prudent action from a security perspective is to shun or disallow it. If the source of this traffic is legitimate the user will then identify him or herself."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IDS4UDP_BOMB_SIG	4-Warning	Sig:4050:UDP Bomb - from [node]to %i	Triggers when the UDP length specified is less than the IP length specified. This malformed packet type is associated with a denial of service attempt.	ids	"There is no legitimate use for malformed datagrams. This may be indicative of systems that are experiencing problems with their kernel or NIC cards. This is unusual traffic and warrants investigation. When non-specific network traffic of this type is encountered the most prudent action from a security perspective is to shun or disallow it. If the source of this traffic is legitimate the user will then identify him or herself."
IDS4UDP_TFTP_PASSWD_SIG	4-Warning	Sig:4100:Tftp Passwd File - from [node]to %i	Triggered when someone tries to tftp a password file.	ids	"System administrators might use this service to update system files. It is a high security risk if this is normal practice and should be avoided. No other benign triggers exist for this signature. If after investigation the alarm was not generated by a system administrator prudent security practices would suggest that the source be shunned."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IDTATM25-1-DISCOVER	1-Alert	Only found [dec] interfaces on bay [dec] shutting down bay	The ATM25 network module hardware may be bad	pm-atm25	"Copy the error message exactly as it appears and report it to your " "technical support representative."
IDTATM25-1-INITFAIL	1-Alert	IDTATM25[dec]/[dec] Init failed at [chars].	The ATM25 network module hardware may be bad	pm-atm25	"Copy the error message exactly as it appears and report it to your " "technical support representative."
IDTATM25-3-FAISETUPVC	3-Error	Interface [chars] Failed to setup vc [dec] Cause: [chars]	The ATM25 network module hardware may be bad	pm-atm25	"Copy the error message exactly as it appears and report it to your " "technical support representative."
IDTATM25-3-FAIDOWNVC	3-Error	Interface [chars] Failed to down vc [dec] Cause: [chars]	The ATM25 network module hardware may be bad	pm-atm25	"Copy the error message exactly as it appears and report it to your " "technical support representative."
IDTATM25-3-NOIDTATM25	3-Error	Device reported [hex]	The ATM25 network module hardware may be bad	pm-atm25	"Copy the error message exactly as it appears and report it to your " "technical support representative."
IDTATM25-3-RXLOSISYNC	3-Error	IDB= [chars] RX lost sync Interface reset	RX hang	c1400	"Copy the error message exactly as it appears and report it to your " "technical support representative."
IDTATM25-3-TXHANG	3-Error	IDB= [chars] TX hang Interface reset	TX hang	c1400	"Copy the error message exactly as it appears and report it to your " "technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>DI</del> ATM25UNSUPPORTED	3-Error	Interface [chars] [chars] not supported	The ATM25 network module hardware may be bad	pm-atm25	"Copy the error message exactly as it appears and report it to your " "technical support representative."
IDTATM25-6-TXLIMIT	6-Information	ATM transmit bandwidth is limited to smallest shaped value.	Any PVC configured with traffic shaping will limit the entire ATM interface to not exceed the bandwidth of any traffic shaped pvc.	-	""
<del>DM</del> LOOPBACK_DETECTED	3-Error	Loop-back detected on [chars].	Loop-back may be caused by accidentally plugging a balun cable into the port or there may be a misconfiguration in the network.	firmware	"Correct the problem causing the loopback " "condition. Then bring the port up by entering the shutdown " "then no shutdown interface configuration commands."
<del>HD</del> INTERNAL_ERROR	3-Error	Internal error in command processing - session handle=[hex]	There has been an internal error relating to CoA command processing.	policy	"Copy the error message exactly as it appears and " "report it to your technical support " "representative."
<del>HD</del> REGISTRATION_ERROR	3-Error	CoA registration error in command processing - type '[chars]'	There has been an internal error relating to CoA command processing.	policy	"Copy the error message exactly as it appears and " "report it to your technical support " "representative."
<del>HD</del> CLOCK_CHANGE_IMRN	4-Warning	A Local clock change has caused a running timer to be invalid	A change in local clock has made a currently running timer to be invalid	sss	"Check the clock configuration"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
H024BK_DHEEDNDES	4-Warning	No more portbundles can be allocated	The source interfaces configured for Portbundle Hostkey feature are not sufficient and the number of portbundles available are all used up. Add more source interfaces in the configuration.	sss	"Check configuration on the ISG"
H024C_UNDEFND_ACL	4-Warning	Traffic class ACL [chars] is not defined creating permit all ACL	The ACL specified for classification of traffic is not configured on the ISG. Creating a permit all ACL. ACL should be configured on the ISG.	sss	"Configure the ACL on the ISG"
FFAL2MHS_TEEEXTPWDG	2-Critical	ERRMSG_NOFLAGS	-	-	-
FFAL2MHS_TEEEXTPWDG	2-Critical	ERRMSG_NOFLAGS	-	-	-
FL3_SVC_ASSOC4L2MN	4-Warning	ERRMSG_NOFLAGS	-	-	-
FL3_SVC_ASSOC4L2MN	4-Warning	ERRMSG_NOFLAGS	-	-	-
FMUIRES_CASOCL2MN	4-Warning	ERRMSG_NOFLAGS	-	-	-
FMUIRES_CASOCL2MN	4-Warning	ERRMSG_NOFLAGS	-	-	-
FPWIMEEXCHDHL2MN	5-Notice	ERRMSG_NOFLAGS	-	-	-
FPWIMEEXCHDHL2MN	5-Notice	ERRMSG_NOFLAGS	-	-	-
FSETCGRESPAHL2MN	3-Error	ERRMSG_NOFLAGS	-	-	-
FSETCGRESPAHL2MN	3-Error	ERRMSG_NOFLAGS	-	-	-
IF-2-IDB_TABLE_INIT	2-Critical	Malloc failed while initializing idb table		-	
IF-3-BAD_MTU	3-Error	Internal error. MTU on [chars] too large or negative. Truncating from [node] to [node].\n	An internal software error occurred. The system attempted\n\ to set the MTU on an interface to an invalid value.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IF-3-BADHWUNLOCK	3-Error	[chars] attempted to unlock [chars] [dec]. Locked by [chars] [dec].	Attempt to release semaphore held by another process.	-	"LOG_STD_ACTION"
IF-3-BADLOCK	3-Error	Invalid lock use for [chars]: [chars][chars]	Application layer code attempted to access an unlocked interface.	-	"LOG_STD_ACTION"
IF-3-BADMACADDRTYPE	3-Error	illegal mac address type [dec]	This is an internal error that was recovered gracefully.	idb	"LOG_STD_ACTION"
IF-3-BADLISTBADREFCOUNT	3-Error	A bad reference count was encountered in an idb list element.	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your technical support representative."
IF-3-SEMAHOG	3-Error	[chars] could not get [chars] semaphore. Held by [chars].	Unable to obtain interface semaphore.	-	"LOG_STD_ACTION"
IF-4-BACKWARD_COUNTERS	4-Warning	Corrected for backward [chars] counters [node]u -> [node]u on [chars]	-	-	-
IF-4-NOBGPROCESS	4-Warning	Network background process not running. [chars]	A process which manages network interface background processing is not yet running but another system process has tried to send the process a message.	idb	"An interface on the router may have missed a request to bring " "itself up. If that happens it may be necessary to reset the " "interface using a <del>no shutdown</del> operation and " "then a <del>no shutdown</del> ." "
IFDAMP-5-UPDOWN	5-Notice	interface [chars] update [chars] state to [chars] interface is [chars]suppressed	dampening interface changed state.	ip	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IFDAMP-5-ZERODELAY	5-Notice	dampening reuse timer is updated with 0 delay time	Inconsistency of dampening reuse timer wheel	ip	LOG_STD_NO_ACTION
IFM_SHIM-3-AVL_TREE	3-Error	AVL tree [chars] action failed for [chars] iif-id 0x[node]6llx	AVL tree operation failure for specific interface object in IFM-SHIM software module. This usually implies a duplicate node already existing or the tree data structure corruption.	accsw-platform	LOG_SIDSH_TECH_ACTION
IFM_SHIM-3-INT_FAILURE	3-Error	[chars]	IFM-SHIM has experienced initialization failure.	accsw-platform	LOG_SIDSH_TECH_ACTION
IFM_SHIM-3-INT_FAILURE	3-Error	[chars]	Internal interface not created	accsw-platform	LOG_SIDSH_TECH_ACTION
IFM_SHIM-3-ALLOC_FAILURE	3-Error	Memory allocation failure when [chars]	Failed to allocated memory for a structure or event.	accsw-platform	LOG_SIDSH_TECH_ACTION
IFM_SHIM-3-SEND_FAILURE	3-Error	[chars]	IFM-SHIM is experiencing message send failure.	accsw-platform	LOG_SIDSH_TECH_ACTION
IFM_SHIM-3-SPI_FAILURE	3-Error	[chars]	IFM-SHIM is experiencing SPI failure.	accsw-platform	LOG_SIDSH_TECH_ACTION
IFMAP-3-CAUSE_CFG	3-Error	hash table not initialized	PAL interface handle to uidb hash table not initialized	cpp-ucode	LOG_STD_ACTION
IFMGR-3-BADINDEXABLE	3-Error	The file nvram:ifIndex-table is corrupt.	The file is not in the expected format.	none	"If possible please delete the file."
IFMGR-3-IFDB	3-Error	IF manager interface database [chars] failure- [dec]	-	if_mgr	"TBD"
IFINDEX-3-INTCORUP	3-Error	[chars] seems to be corrupted. Trying to read [dec] size	The ifIndex-table seems to be corrupted.	if_mgr	"Delete the ifindex-table."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
IFMGR-3-IFTDB	3-Error	IF manager interface table database [chars] failure- [dec]	-	if_mgr	"TBD"
<del>IFMGR-3-INVALIDPERSISTENTDATA</del>	3-Error	Invalid persistent data	Trying to write invalid persistent data	snmp-if	"Copy the error message exactly as it appears and report it\n\ to your technical support representative."
IFMGR-3-NOIMACP	3-Error	IF manager control process failed to start	-	if_mgr	"TBD"
<del>IFMGR-3-NOIFVECTOR</del>	3-Error	Interface manager failed to allocate IF type vector. size [dec]	The interface type vector was not able to be allocated with the number of elements required--initially or resize.	if_mgr	"TBD"
IFMGR-3-NOVECTOR	3-Error	Interface manager failed to allocate IF vector. size [dec]	The interface vector was not able to be allocated with the number of elements required--initially or resize see size in the error message.	if_mgr	"TBD"
IFMGR-3-VECTOREXD	3-Error	IF manager attempted to use interface [dec] outside vector range.	This message indicates that an interface with too large of an ifIndex value was attempted to be added to the IF-MGR DB.	if_mgr	"Additional IF-MGR warning and/or error messages should accompany" "indication of this error. These additional messages should provide more" "details on the effected interface."
<del>IFMGR-3-VECTORFOUSED</del>	3-Error	IF manager attempted to add interface [dec] which was already added.	This message comes from the IF-MGR DB when it is trying to add an ifIndex value for this interface which already exists in the ifIndex DB.	if_mgr	"TBD"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IFMGR-4-NOIFINDEX	4-Warning	All SNMP if indices are exhausted	All SNMP MIB indices have been exhausted. Interfaces will not be able to obtain an interface index that they can use to register with the interface MIB.	if_mgr	"Attempt a system reload. If the problem persists after the system reload copy the message exactly as it appears on the console or in the system log contact your Cisco technical support representative and provide the representative with the gathered information."
IFMGR-4-NOSYNC	4-Warning	ifIndex not being synced between active and standby	When the standby comes up then the tuple of ifIndex and ifDescr is synced so that when interfaces comes up they get the same ifIndex. This error happens when the interface doesn't get the ifIndex for the given ifDescr	if_mgr	"Inform the technical support to raise the ddts"
<del>IFMGR-4-NOINDEX</del>	4-Warning	[chars]: Request for creating invalid stack relationship [dec] [dec]	Interfaces have same ifIndex in IF-MGR assigned list. The 2nd interface registered with IF-MGR will be assigned with new index	if_mgr	"1. No Action if ifIndex persist is not required." "2. Reload the standby RP if ERR msg only seen in standby RP" "3. Reload the router with the proper ifindex-table and image"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IFMGR4MCIORISUSPECT	4-Warning	IF manager added interface [dec] which is unexpectedly large.	The ifIndex allocation scheme gives out sequential ifIndex values. This message comes from the IF-MGR DB when it is trying to add an ifIndex value much larger than the former greatest ifIndex value in the DB.	if_mgr	"TBD"
IFMGR-5-RESTART	5-Notice	[chars]	The IF MGR process has restarted	if_mgr	"This is an informational message. The system should recover on its" " own."
IFMGR7NO_IFINDEX_FILE	7-Debug	Unable to open [chars] [chars]	This is a informational message. This means system found no saved ifIndex information and ifIndex is not persisted across reboots. The ifIndices will be reassigned.	if_mgr	"1. No Action if 'snmp-server ifIndex persist' is not configured. " "2. If 'snmp-server ifindex persist' is configured then copy the error" " message exactly as it appears and report it to your technical" " support representative."
IFS3-FS_CREATE_FAIL	3-Error	Failed to create [chars] file system [chars]	An internal software error occurred.	<del>Developmental message</del>	"Call your technical support representative for assistance."
IFS3-FS_CREATE_FAIL2	3-Error	Failed to create [chars] simple file system [chars]	An internal software error occurred.	<del>Developmental message</del>	"Call your technical support representative for assistance."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IFS3FS_MSSNG_FUNCTIONS	3-Error	'[chars]' file system missing required functions not created	Some file systems require a certain set of function to be present in\n\n order to be usable. This file sustem does not support all the\n\n mandatory functionality.	<del>Device-File-System</del>	"Call your technical support representative for assistance."
IFS3FS_STRUCT_ERROR	3-Error	Data does not match expected internal representation	A mismatch exists between the representation of data extracted from the filesystem and the expectation of its formatting. This may occur when running in a dual-RP environment with different IOS versions running on the two RPs.	ifs	"Ensure both RPs are running the IOS same version if running in " "a dual-RP environment. If not call your technical support " "representative for assistance."
IFS-3-FSDUP	3-Error	Failed to add [chars] filesystem prefix exists	A file system cound not be added because another file system exists\n\n with the same name.	<del>Device-File-System</del>	"Contact your technical support representative."
IFS-3-FSMAX	3-Error	Failed to add [chars] maximum filesystems [dec]	The router has reached the maximum number of file systems that\n\n can be supported at one time.	ifs	"Contact your technical support representative."
IFS-4-FILEMAX	4-Warning	Failed to open [chars] maximum open files [dec]	The router has reached the maximum number of files that may\n\n be open at one time.	ifs	"Close some files and try again. If this messages recurs contact your\n\n technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IGMPQUERIERNOIPADDR	4-Warning	The IGMP querier cannot send out General Query messages in VLAN [dec] because there is no IP address configured on the system.	An IP address should be specified for the IGMP querier either at the global or per VLAN level.	igmp	"Configure a source IP address for the IGMP querier. "
IGMPQUERIERNOENABLED	4-Warning	The IGMP querier is operationally disabled in VLAN [dec] because PIM has been enabled on the SVI.	PIM has been detected on the SVI. The IGMP querier function should not be operationally enabled when PIM is enabled on the SVI.	igmp	"Ensure that PIM is disabled on the SVI. "
IGMPQUERIERMULTICASTER	4-Warning	An external IGMP querier or a multicast router has been detected in VLAN [dec] on port [chars].	An external querier or multicast router has been detected in the VLAN. The IGMP querier function should not be enabled when there is external querier or multicast router present in the VLAN.	igmp	"Either manually disable the IGMP querier on this system or disable " "querier or PIM/DVMRP on the multicast routers identified. The IGMP "
IGMPQUERIERSAMEIPADDR	4-Warning	An IGMP General Query packet with the same source IP address [node]	The IGMP querier has received an IGMP General Query message with a source IP address identical to that configured for the IGMP querier itself. This is considered a network configuration error.	igmp	"Check IGMP querier source IP address configuration on the router " "or switch connected via the port identified." "Ensure unique source IP addresses are configured on each system. "
IGMPQUERIERNOENABLED	4-Warning	The IGMP querier is operationally disabled in VLAN [dec] because IGMP snooping has been disabled in this VLAN.	IGMP snooping has been detected as being disabled on this VLAN. The IGMP querier function should not be operationally enabled when IGMP snooping is disabled.	igmp	"Ensure that IGMP snooping is enabled globally and on the VLAN " "reported. "



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IGMP</del> IGMP_MNAN_FWD	4-Warning	The IGMP querier is operationally disabled in VLAN [dec] because VLAN is not in forwarding state.	The IGMP querier function is not be operationally enabled when VLAN is not forwarding.	igmp	"Check spanning tree state for this VLAN."
<del>IGMP</del> IGMP_RRSCPADR	4-Warning	An IGMP General Query packet with source IP address that contained all zeroes is received in VLAN [dec] on port [chars].	The IGMP querier has received an IGMP General Query message with a source IP address that contained all zeroes. Some IGMP clients cannot process General Query with source IP address that contained all zeroes.	igmp	"Check the source IP address of the IGMP querier that is on the router " "or switch connected to the port specified in the message. "
<del>IGMP</del> IGMP_MNOR_DISABLED	6-Information	The IGMP querier is now operationally enabled in VLAN [dec] because no external querier or multicast router has been detected.	No external querier or multicast router has been detected. As a result the IGMP querier function has now been enabled.	igmp	"No action is required."
<del>IGMP</del> IGMP_MN_DISABLED	6-Information	The IGMP querier is now operationally enabled in VLAN [dec] because PIM is no longer enabled on the SVI.	PIM has been disabled on the SVI and as a result the IGMP querier function has now been enabled.	igmp	"No action is required."
<del>IGMP</del> IGMP_MN_DISABLED	6-Information	The IGMP querier is now operationally enabled in VLAN [dec] because IGMP snooping is no longer disabled.	IGMP snooping has now been enabled and as a result the IGMP querier function has now been enabled.	igmp	"No action is required."
<del>IGMP</del> IGMP_MN_FWD	6-Information	The IGMP querier is now operationally enabled in VLAN [dec] because the VLAN has entered forwarding state.	The VLAN has been placed in the forwarding state and as a result the IGMP querier function has now been enabled.	igmp	"No action is required."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
IGMP_SNOOP_ISSU2FBHR	2-Critical	IGMP Snooping ISSU client failed to get buffer for message. Error: [dec] [chars]	The allocation of explicit-tracking entries is bounded to avoid\n\ the IGMP/MLD snooping hogs the system resources	igmp/mldsnooping	"Disable and re-enable L2 multicast snooping on the VLAN."
IGMP_SNOOP_ISSU2FBHR	2-Critical	IGMP Snooping ISSU client failed to get buffer for message. Error: [dec] [chars]	The IGMP Snooping ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	igmp-snooping	"show logging and show checkpoint client"
IGMP_SNOOP_ISSU2NIT	2-Critical	IGMP Snooping ISSU client initialization failed to [chars]. Error: [dec] [chars]	The IGMP Snooping ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	igmp-snooping	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IGMP_SNOOP_ISSU2INT	2-Critical	IGMP Snooping ISSU client initialization failed to [chars]. Error: [dec] [chars]	The IGMP Snooping ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	igmp-snooping	LOG_STD_ACTION
<del>IGMP_SNOOP_ISSU2INT</del>	2-Critical	IGMP Snooping ISSU client failed to send negotiation message. Error: [dec] [chars]	The IGMP Snooping ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	igmp-snooping	"show logging and show checkpoint client"
<del>IGMP_SNOOP_ISSU2INT</del>	2-Critical	IGMP Snooping ISSU client failed to send negotiation message. Error: [dec] [chars]	The IGMP Snooping ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	igmp-snooping	"show logging and show checkpoint client"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IGMPSNOOPING_ISSU_NGO</del>	2-Critical	IGMP Snooping ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The IGMP Snooping ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	igmp-snooping	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>IGMPSNOOPING_ISSU_NGO</del>	2-Critical	IGMP Snooping ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The IGMP Snooping ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	igmp-snooping	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>IGMPSNOOPING_ISSU_NGRIV</del>	2-Critical	IGMP Snooping ISSU client failed to register session information. Error: [dec] [chars]	The IGMP Snooping ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	igmp-snooping	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IGMPSNOOP_ISSU_NCRV	2-Critical	IGMP Snooping ISSU client failed to register session information. Error: [dec] [chars]	The IGMP Snooping ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	igmp-snooping	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
IGMPSNOOP_ISSU_NDSSN	3-Error	IGMP Snooping ISSU client does not have a valid registered session.	The IGMP Snooping ISSU client does not have a valid registered session.	igmp-snooping	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
IGMPSNOOP_ISSU_NDSSN	3-Error	IGMP Snooping ISSU client does not have a valid registered session.	The IGMP Snooping ISSU client does not have a valid registered session.	igmp-snooping	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
IGMPSNOOP_ISSU_MCNICK	3-Error	IGMP Snooping ISSU client 'Message Type [dec]' is not compatible	The IGMP Snooping ISSU client received an incompatible message from the peer device. The message cannot be processed.	igmp-snooping	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
IGMPSNOOP_ISSU_MCNICK	3-Error	IGMP Snooping ISSU client 'Message Type [dec]' is not compatible	The IGMP Snooping ISSU client received an incompatible message from the peer device. The message cannot be processed.	igmp-snooping	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>IGMPSNOOP</del> ISSU/MSG/SE	3-Error	IGMP Snooping ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The IGMP Snooping ISSU client failed to calculate the MTU for the specified message. The IGMP Snooping ISSU client is not able to send the message to the standby device.	igmp-snooping	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>IGMPSNOOP</del> ISSU/MSG/SE	3-Error	IGMP Snooping ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The IGMP Snooping ISSU client failed to calculate the MTU for the specified message. The IGMP Snooping ISSU client is not able to send the message to the standby device.	igmp-snooping	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>IGMPSNOOP</del> ISSU/UNREG/SE	3-Error	IGMP Snooping ISSU client failed to unregister session information. Error: [dec] [chars]	The IGMP Snooping ISSU client failed to unregister session information.	igmp-snooping	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>IGMPSNOOP</del> ISSU/UNREG/SE	3-Error	IGMP Snooping ISSU client failed to unregister session information. Error: [dec] [chars]	The IGMP Snooping ISSU client failed to unregister session information.	igmp-snooping	"show issu session <client_id> and " "show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OMSPDLSRNCMA</del>	3-Error	IGMP Snooping ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The IGMP Snooping ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the IGMP Snooping state between the active device and the standby device is not identical.	igmp-snooping	"show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>OMSPDLSRNCMA</del>	3-Error	IGMP Snooping ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The IGMP Snooping ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the IGMP Snooping state between the active device and the standby device is not identical.	igmp-snooping	"show issu session <client_id> and " "show issu negotiated version <session_id>"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
IGMP-3-DNS_ERROR	3-Error	DNS lookup time out. DNS lookup for ssm mapping will be disabled for 60 sec.	DNS source lookup time out. DNS server did not respond \n\ to the DNS query this may be due to DNS server is down. \n\ DNS lookup will be stopped for next 60 sec.	-	"Disable DNS lookup for ssm mapping till the DNS " "server comes up." LOG_STD_ACTION
IGMP-3-DNS_ERROR	3-Error	DNS lookup time out. DNS lookup for ssm mapping will be disabled for 60 sec.	DNS source lookup time out. DNS server did not respond \n\ to the DNS query this may be due to DNS server is down. \n\ DNS lookup will be stopped for next 60 sec.	-	"Disable DNS lookup for ssm mapping till the DNS " "server comes up." LOG_STD_ACTION
<del>IGMP-3-CLIENT_ID_ERR</del>	3-Error	Invalid Client Id usage [dec].	Invalid Client Id usage	-	"Check the Client Id" LOG_STD_NO_ACTION
<del>IGMP-3-CLIENT_ID_ERR</del>	3-Error	Invalid Client Id usage [dec].	Invalid Client Id usage	-	"Check the Client Id" LOG_STD_NO_ACTION
<del>IGMP-3-PLIST_DEL_STATIC</del>	3-Error	Failed to delete static groups for interface [chars].	Repeated attempts to walk the list failed.	mcast-igmp	LOG_STD_ACTION
<del>IGMP-3-PLIST_DEL_STATIC</del>	3-Error	Failed to delete static groups for interface [chars].	Repeated attempts to walk the list failed.	mcast-igmp	LOG_STD_ACTION
<del>IGMP-3-RSRSRCH_FLAGS</del>	3-Error	Failed to reset source flags for [node]	Repeated attempts to reset the flags failed.	mcast-igmp	LOG_STD_ACTION
<del>IGMP-3-RSRSRCH_FLAGS</del>	3-Error	Failed to reset source flags for [node]	Repeated attempts to reset the flags failed.	mcast-igmp	LOG_STD_ACTION
IGMP-3-NO_DNS_SERVER	3-Error	No DNS server is configured. \n\DNS-based SSM mapping should be disabled if no DNS server is configured.	There is no DNS server present. Processing IGMP \n\ packets may be delayed if the DNS-lookup is done continuously.	-	"Disable DNS-based SSM mapping if there is \n\ no DNS-server present in the network." LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IGMP3-NO_DNS_SERVER	3-Error	No DNS server is configured. \nDNS-based SSM mapping should be disabled if no DNS server is configured.	There is no DNS server present. Processing IGMP \n\ packets may be delayed if the DNS-lookup is done continuously.	-	"Disable DNS-based SSM mapping if there is \n\ no DNS-server present in the network." LOG_STD_ACTION
IGMP3-QUERY_INTERVAL_MISMATCH	3-Error	Received a non-matching query interval [dec] from querier address %i	Mismatch of IGMP version found between routers.	-	"Configure both the interfaces with same IGMP version." LOG_STD_ACTION
IGMP3-QUERY_INTERVAL_MISMATCH	3-Error	Received a non-matching query interval [dec] from querier address %i	Mismatch of IGMP version found between routers.	-	"Configure both the interfaces with same IGMP version." LOG_STD_ACTION
IGMP4-MRQUITE_IC_FLAG	4-Warning	While adding or deleting multicast state some state may not correctly have local interest flag set or cleared.	Repeated attempts to adjust local interest flag were running over time and some state may not have been adjusted.	-	LOG_STD_ACTION
IGMP4-MRQUITE_IC_FLAG	4-Warning	While adding or deleting multicast state some state may not correctly have local interest flag set or cleared.	Repeated attempts to adjust local interest flag were running over time and some state may not have been adjusted.	-	LOG_STD_ACTION
IGMP-4-NO_INPUT	4-Warning	IGMP packet without input interface received from [node]for %i	An unexpected IGMP packet without input interface was received.	ipmulticast	"Consider taking note of source and destination present in syslog." LOG_STD_ACTION
IGMP-4-NO_INPUT	4-Warning	IGMP packet without input interface received from [node]for %i	An unexpected IGMP packet without input interface was received.	ipmulticast	"Consider taking note of source and destination present in syslog." LOG_STD_ACTION
IGMP-6-CHANNEL_LIMIT	6-Information	IGMP limit exceeded for channel [node][node]on [chars] by host %i	-	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>IGMP</del> IGMP_CHANNEL_LMT	6-Information	IGMP limit exceeded for channel [node][node]on [chars] by host %i	-	-	-
<del>IGMP</del> IGMP_GROUP_LMT	6-Information	IGMP limit exceeded for group * [node]on [chars] by host %i	-	-	-
<del>IGMP</del> IGMP_GROUP_LMT	6-Information	IGMP limit exceeded for group * [node]on [chars] by host %i	-	-	-
<del>IGNON</del> IGN_FAILED_CMD	4-Warning	Ignition Management hardware failed to execute the '[chars]' command. Code: [dec]	The hardware MCU responsible for the ignition power management is not responding properly to software commands.	aventus-platform	LOG_SID_RECUR_ACTION
<del>IGNON</del> IGN_OVR_VOLTAGE	4-Warning	The input voltage is at [dec].[dec] V. The overvoltage threshold of [dec].[dec] V has been tripped recently. Shutdown sequence will begin.	The input voltage became higher than the overvoltage threshold and the router might shutdown shortly.	aventus-platform	"Reduce the input power supply voltage."
<del>IGNON</del> IGN_UNDR_VOLTAGE	4-Warning	Incompatible 'under voltage' setting [dec].[dec] V was not applied. The	The under voltage threshold value was set to a higher value than actual input voltage and applying this setting would cause the router to shutdown shortly	aventus-platform	LOG_SID_RECUR_ACTION
<del>IGNON</del> IGN_UNDR_VOLTAGE	4-Warning	The input voltage below the undervoltage threshold of [dec].[dec] V was detected. The system may shutdown.	The input voltage became lower than the undervoltage threshold and the router might shutdown shortly.	aventus-platform	"Increase the input power supply voltage."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IGNUNDRVTOACHED	4-Warning	The input voltage above the undervoltage threshold of [dec].[dec] V was detected.	The input voltage became higher than the undervoltage threshold.	aventus-platform	LOG_SID_NO_ACTION
IGNIGNDEBUGSET	5-Notice	Ignition Management debugging [chars] is turned [chars]	The system's debugging facility is turned on or off	aventus-platform	LOG_SID_NO_ACTION
IGNIGNENABLECMD	5-Notice	The Ignition Power Management is [chars]	The system administrator has enabled the Ignition Power Management feature.	aventus-platform	LOG_SID_NO_ACTION
IGNIGNRELOADSYS	5-Notice	The Ignition Power Management is preparing for shutdown	The Ignition Power Management is about to shut the system down.	aventus-platform	LOG_SID_NO_ACTION
IGNIGNSENSECMD	5-Notice	The Ignition Voltage Sense is [chars]	The system administrator has enabled the Ignition Voltage Sense feature.	aventus-platform	LOG_SID_NO_ACTION
IGNIGNTURNONOFF	5-Notice	The ignition is turned [chars]	The ignition state changed between ON and OFF.	aventus-platform	LOG_SID_NO_ACTION
DF3DPARYPOWEREDOFF	0-Emergency	3rd-party module is powered off	3rd-party module is powered off by CLI command	DF3DPARYCOMPONENT	"No action recommended" LOG_STD_ACTION
DF3DPARYPOWEREDON	0-Emergency	3rd-party module is powered on	3rd-party module is powered on by CLI command	DF3DPARYCOMPONENT	"No action recommended" LOG_STD_ACTION
DF3DPARYSLOTASGND	0-Emergency	3rd-party module bay number is assigned to [dec].	3rd-party module bay number is assigned by CLI command.	DF3DPARYCOMPONENT	"No action recommended" LOG_STD_ACTION
DF3DPARYSLOTCLEARD	0-Emergency	3rd-party module bay number is cleared.	previously configured 3rd-party module bay number is cleared.	DF3DPARYCOMPONENT	"No action recommended" LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>KEYSARHCIDIMREACH</del>	5-Notice	[chars]	-	ipsec-ikev2	-
<del>KEYSARHCIDIMREACH</del>	5-Notice	[chars]	-	ipsec-ikev2	-
<del>KEYSARHCIDRSOREHOW</del>	5-Notice	NULL	-	ipsec-ikev2	-
<del>KEYSARHCIDRSOREHOW</del>	5-Notice	NULL	-	ipsec-ikev2	-
IKEV2-5-SA_UP	5-Notice	NULL	-	ipsec-ikev2	-
IKEV2-5-SA_UP	5-Notice	NULL	-	ipsec-ikev2	-
ILACC-1-INITFAIL	1-Alert	msgtxt_initfail	The hardware failed to initialize correctly.	-	"Repair or replace the controller."
ILACC-1-MEMERR	1-Alert	msgtxt_memoryerror	An Ethernet interface detected a hardware problem.	-	"Repair or replace the controller."
ILACC-3-BADUNIT	3-Error	msgtxt_badunit	An internal software error occurred.	-	"If this message recurs contact your technical support representative."
ILACC-3-OWNERR	3-Error	msgtxt_ownerror	An Ethernet interface is malfunctioning or an internal software error\n\ occurred.	-	"Repair or replace the controller."
ILACC-3-SPURIDON	3-Error	Unit [dec] spurious IDON interrupt csr[dec]=0x[node]x	An Ethernet interface generated a spurious Initialization Done\n\ interrupt.	-	"Repair or replace the controller."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ILACC-3-UNDERFLO	3-Error	Unit [dec] underflow error	The Ethernet hardware is requesting data faster than the system can supply it. This condition might indicate that the system is at the limit of its performance.	-	"A small number of underflows might not be a cause for concern. You can monitor underflows with the <b>show interface</b> command. Reducing the load on the router or installing a higher-performance router should alleviate this problem."
ILACC-4-BABBLE	4-Warning	Unit [dec] babble error csr0 = 0x[hec]	An Ethernet interface is malfunctioning.	-	"Determine whether the malfunction stems from a software or hardware error by turning off all fast switching. Error messages showing that the packet is too large for the link indicate a software error at a high level. Copy the error message exactly as it appears and report it to your technical support representative. Receiving no error messages indicates a hardware error. Repair or replace the controller."
ILACC-5-COLL	5-Notice	Unit [dec] excessive collisions. TDR=[dec]		-	"If the transceiver appears to be properly terminated repair or replace the Ethernet interface card."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ILACC-5-LATECOLL	5-Notice	Unit [dec] late collision error	An Ethernet transceiver is malfunctioning the Ethernet is overloaded\n\ or the Ethernet cable is too long.	-	"Repair or replace the controller."
ILACC-5-LOSTCARR	5-Notice	Unit [dec] lost carrier. Transceiver problem?	An Ethernet transceiver is unplugged or faulty.	-	"Repair or replace the controller."
IEEEAUTHENICAI_CNFL	2-Critical	iosxe-hostmgr	No format	Trusted Anchor module detected an invalid SUDI.	Please contact Cisco's Technical Assistance Center for more information
IEEEAUTHENICAI_CNFL	2-Critical	iosxe-hostmgr	No format	Trusted Anchor module detected an invalid SUDI.	Please contact Cisco's Technical Assistance Center for more information
ILLEGAL-3-VFI	3-Error	ERRMSGHAGTRACBACK	-	-	-
ILLEGAL-3-VFI	3-Error	ERRMSGHAGTRACBACK	-	-	-
ILLEGAL-3-XCONNECT	3-Error	ERRMSGHAGTRACBACK	-	-	-
ILLEGAL-3-XCONNECT	3-Error	ERRMSGHAGTRACBACK	-	-	-
ILP_ISSU-3-BUFFER	3-Error	Platform ILPower ISSU client failed to get buffer for msg error [dec]	Platform Inline Power ISSU client failed to get buffer for building\n\ a negotiation message. Hence it can send the negotiation\n\ message to the standby unit. When there is a problem in\n\ the negotiaiton the standby unit can not be brought up.	platform-ha	"show logging and show checkpoint client"
IPSSUCAP_NALD_SE	3-Error	Platform Inline Power ISSU client capability list is empty.	The Platform Inline Power ISSU client capability exchange list size\n\ is invalid.	platform-ha	"show issu capability entries <Client_ID>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPISU3CAPNOTCOMPABLE	3-Error	Platform Inline Power ISSU client capability exchange result incompatible.	The Platform ILPower ISSU client capability exchange has negotiated\n\n as incompatible with the peer.	platform-ha	"show issu negotiated capability <Session_ID>"
ILP_ISSU3CAPABILITY	3-Error	Platform Inline Power ISSU client [chars]	Platform Inline Power ISSU client observed an error during capability\n\n negotiation. When this error happens there is a mismatch\n\n between the client capability between the active and\n\n standby unit.	platform-ha	"show issu capability entries <client_id> and\n\n show issu session <client_id> and\n\n show issu negotiated capability <session_id>"
ILP_ISSU3-INIT	3-Error	Platform Inline Power ISSU client initialization failed at [chars] error [chars]	Platform ILP ISSU client could not be initialied this will\n\n cause catastrophic failure when ISSU upgrade or downgrade\n\n is performed.	platform-ha	LOG_SIDSHTFHACION
ILP_ISSU3MSG_NOT_OK	3-Error	Platform Inline Power ISSU client message [dec] is not compatible	Platform Inline Power ISSU client received an incompatible message\n\n from the peer unit. Since the message is not compatible\n\n it can be processed by this unit	platform-ha	"show issu message group <client_id> and\n\n show issu session <client_id> and\n\n show issu negotiated version <session_id>"
ILP_ISSU3-MSG_SIZE	3-Error	Platform Inline Power ISSU client failed to get the message size for message [dec]	Platform Inline Power ISSU client failed to calculate message size\n\n for the message specified. The Platform ILPower ISSU client will not\n\n be able to send message to the standby unit.	platform-ha	"show issu message group <client_id> and\n\n show issu session <client_id> and\n\n show issu negotiated version <session_id>"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ILP_ISSU-3-POLICY	3-Error	Platform Inline Power ISSU client message type [dec] is [chars]	Platform Inline Power ISSU client received a message type which it does not support. The policy is applied to make the session compatible.	platform-ha	"show issu session <client_id>"
ILP_ISSU3SEND_FAILED	3-Error	Platform Inline Power ISSU client failed to send a negotiation message error [dec]	Platform ILPower ISSU client could not send a session negotiation message to the peer. When there is a problem in the negotiation the standby unit can not be brought up.	platform-ha	"show logging and show checkpoint client"
ILP_ISSU-3-SESSION	3-Error	Platform ILPower ISSU client [chars]	Platform Inline Power ISSU client observed an error during a session negotiation with the peer unit. When there is a problem with the session the standby unit can not be brought up.	platform-ha	"show issu capability entries <client_id> and show issu session <client_id> and show issu negotiated capability <session_id>"
ILP_ISSU-3-UNREGISTER	3-Error	Platform ILPower ISSU client failed to unregister session information. Error: [dec] [chars]	The Platform Inline Power ISSU client failed to unregister session information.	platform-ha	"show issu session <client_id> and " "show issu negotiated capability <session_id>"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ILP_ISSU-3-TRANSFORM	3-Error	Platform Inline Power ISSU client [chars] transform failed error [chars]	Platform Inline Power ISSU client could not transform the message.\n If the transmit transformation failed it means that the\n checkpoint message can not be sent to the standby unit.\n If the receive transformation failed it means that the\n checkpoint message can not be applied on the standby\n unit. In both cases the Platform Inline Power state will not\n be indential with the active unit.	platform-ha	"show issu session <client_id> and\n show issu negotiated version <session_id>"
IPOWER_ISSU-3-GET_BUFFER	3-Error	Inline power ISSU client failed to get buffer for message.\n Error: [dec] [chars]	Inline power ISSU client failed to get buffer for building\n a negotiation message. Hence it cannot send the negotiation\n message to the standby unit. When there is a problem in\n the negotiaiton the standby unit can not be brought up.	ilpower	"show logging and show checkpoint client"
ILPOWER_ISSU-3-INIT	3-Error	Inline power ISSU client initialization failed to [chars].Error: [dec] [chars]	Inline power ISSU client could not be initiaized this will\n cause catstrophic failure when ISSU upgrade or downgrade\n is performed.	ilpower	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IPOWER_ISSU_A</del> ISSN	3-Error	Inline power ISSU client does not have a valid registered session.	Inline power ISSU client does not have a valid registered session.\n\n When there is a problem with the session the standby unit cannot\n\n be brought up.	ilpower	"show issu capability entries <client_id> and\n\n show issu session <client_id> and\n\n show issu negotiated capability <session_id>"
<del>IPOWER_ISSU_A</del> MSG_NOTCK	3-Error	Inline power ISSU client message type [dec] is not compatible	Inline power ISSU client received an incompatible message\n\n from the peer unit. Since the message is not compatible\n\n it cannot be processed by this unit	ilpower	"show issu message group <client_id> and\n\n show issu session <client_id> and\n\n show issu negotiated version <session_id>"
<del>IPOWER_ISSU_A</del> MSG_SIZE	3-Error	Inline power ISSU client failed to get the MTU for message type [dec].\n\n Error: [dec] [chars]	Inline power ISSU client failed to calculate MTU\n\n for the message specified. The dot1x ISSU client will not\n\n be able to send message to the standby unit.	ilpower	"show issu message group <client_id> and\n\n show issu session <client_id> and\n\n show issu negotiated version <session_id>"
<del>IPOWER_ISSU_A</del> NEG_FAILED	3-Error	Inline power ISSU client failed to send negotiation message.\n\n Error: [dec] [chars]	Inline power ISSU client failed to send a session negotiation\n\n message to the peer. When there is a problem in the ISSU\n\n negotiation the standby unit can not be brought up.	ilpower	"show logging and show checkpoint client"
<del>IPOWER_ISSU_A</del> SESSION_CO	3-Error	Inline power ISSU client encountered unexpected client nego_done.\n\n Error: [dec] [chars]	Inline power ISSU client encountered an unexpected 'client\n\n negotiation done'.	ilpower	"show issu session <client_id> and\n\n show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IPWRIS</del> ISSNREGRY	3-Error	Inline power ISSU client failed to register session information.\n\n Error: [dec] [chars]	Inline power ISSU client failed to register session information.\n\n When there is a problem with the session the standby unit cannot\n\n be brought up.	ilpower	"show issu capability entries <client_id> and\n\n show issu session <client_id> and\n\n show issu negotiated capability <session_id>"
<del>IPWRIS</del> ISSNREGRY	3-Error	Inline power ISSU client failed to unregister session information.\n\n Error: [dec] [chars]	Inline power ISSU client failed to unregister session information.	ilpower	"show issu session <client_id> and\n\n show issu negotiated capability <session_id>"
<del>IPWRIS</del> IRANSRMA	3-Error	Inline power ISSU client [chars] transform failed for message type [dec].\n\n Error: [dec] [chars]	Inline power ISSU client could not transform the message.\n\n If the transmit transformation failed it means that the\n\n checkpoint message can not be sent to the standby unit.\n\n If the receive transformation failed it means that the\n\n checkpoint message can not be applied on the standby\n\n unit. In both cases the Inline power state will not\n\n be identical with the active unit.	ilpower	"show issu session <client_id> and\n\n show issu negotiated version <session_id>"
<del>IPWRIS</del> PROCRIMT	2-Critical	Priority [dec] reached critical limit. Load shedding can lead to chassis reload. Please avoid configuring any more ports at this priority level. Maximum interface power is used for this calculation.	This priority level reached maximum allowed wattage	inline-power	"Please distribute ports to another priority"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPWR&PRIORITYMISM	2-Critical	On Chassis [dec] priority [dec] reached critical limit. Load shedding can lead to chassis reload. Please avoid configuring any more ports at this priority level. Maximum interface power is used for this calculation.	This priority level reached maximum allowed wattage	inline-power	"Please distribute ports to another priority"
IPWR&CONTROLLERERR	3-Error	Controller error Controller number [dec]: [chars]	An error reported or caused by the Power over Ethernet PoE controller is detected.	inline-power	LOGSIDSHTTECHACION
IPWR&CONTROLLERERR	3-Error	Controller error Controller number [dec]: [chars]	An error reported or caused by the Power over Ethernet PoE controller is detected.	inline-power	LOGSIDSHTTECHACION
IPWR&CONTROLLERERR	3-Error	Controller interface error [chars]: [chars]	An interface error is detected between the Power over Ethernet PoE controller and system.	inline-power	LOGSIDSHTTECHACION
IPWR&CONTROLLERERR	3-Error	Controller interface error [chars]: [chars]	An interface error is detected between the Power over Ethernet PoE controller and system.	inline-power	LOGSIDSHTTECHACION
IPWR&CONTROLLERERR	3-Error	Controller port error Interface [chars]: [chars]	A port error reported by the Power over Ethernet PoE controller is detected.	inline-power	LOGSIDSHTTECHACION
IPWR&CONTROLLERERR	3-Error	Controller port error Interface [chars]: [chars]	A port error reported by the Power over Ethernet PoE controller is detected.	inline-power	LOGSIDSHTTECHACION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>POWERCONTROLPOSTHR</del>	3-Error	Inline Power Feature is disabled on this switch because\n\nPower On Self Test POST failed on this switch\n\nmsgdef_explanation An error reported or caused by the Power over Ethernet	-	-	-
<del>POWERCONTROLPOSTHR</del>	3-Error	Inline Power Feature is disabled on this switch because\n\nPower On Self Test POST failed on this switch\n\nmsgdef_explanation An error reported or caused by the Power over Ethernet	-	-	-
<del>POWERPOWERINERRR</del>	3-Error	Inline Power internal error interface [chars]: [chars]	A software check failed during Power over Ethernet PoE processing.	inline-power	LOG_SIDSHTTECH_ACTION
<del>POWERPOWERINERRR</del>	3-Error	Inline Power internal error interface [chars]: [chars]	A software check failed during Power over Ethernet PoE processing.	inline-power	LOG_SIDSHTTECH_ACTION
<del>POWERPOWERDOWN</del>	3-Error	Interface [chars] is shutdown as it is consuming more than the maximum configured power [dec] milliwatts.	Interface is shutdown because it is consuming more than the maximum configured power	inline-power	"Make sure correct power is budgeted for this interface\n\nbased on the power device electrical specifications or ratings. It is recommended to change the police cutoff power to a higher value to keep the device powered on"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
POWER_SHUTDOWN	3-Error	Interface [chars] is shutdown as it is consuming more than the maximum configured power [dec] milliwatts.	Interface is shutdown because it is consuming more than the maximum configured power	inline-power	"Make sure correct power is budgeted for this interface based on the power device electrical specifications or ratings. It is recommended to change the police cutoff power to a higher value to keep the device powered on"
POWER_POWER_SUPPLY	4-Warning	PoE Power Supply [chars]: [chars]	The power supply for PoE is OIR	inline-power	"Make sure power supply to PoE input is inserted after removal"
POWER_POWER_SUPPLY	4-Warning	PoE Power Supply [chars]: [chars]	The power supply for PoE is OIR	inline-power	"Make sure power supply to PoE input is inserted after removal"
POWER_POWER_ABSENCE	4-Warning	PoE module Power Supply not present \n\n Inline Power Feature is disabled on [chars] because Power On Self Test POST failed \n : [chars]	The power supply for PoE expansion module is not present or not inserted properly or faulty	inline-power	"Make sure power supply to expansion module is inserted properly\ and reload the switch with PoE power supply present"
POWER_POWER_ABSENCE	4-Warning	PoE module Power Supply not present \n\n Inline Power Feature is disabled on [chars] because Power On Self Test POST failed \n : [chars]	The power supply for PoE expansion module is not present or not inserted properly or faulty	inline-power	"Make sure power supply to expansion module is inserted properly\ and reload the switch with PoE power supply present"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>IPOWERLOGOVERDRAWN</del>	4-Warning	Interface [chars] is overdrawing power. it is consuming [dec] milliwatts where as maximum configured power is [dec] milliwatts.	-	inline-power	"Make sure correct power is budgeted for this interface based on the power device electrical specifications or ratings. Otherwise you might risk overloading the switch. It is recommended to change the police cutoffpower appropriately if needed"
<del>IPOWERLOGOVERDRAWN</del>	4-Warning	Interface [chars] is overdrawing power. it is consuming [dec] milliwatts where as maximum configured power is [dec] milliwatts.	-	inline-power	"Make sure correct power is budgeted for this interface based on the power device electrical specifications or ratings. Otherwise you might risk overloading the switch. It is recommended to change the police cutoffpower appropriately if needed"
<del>IPOWERWARNLIMIT</del>	4-Warning	Priority [dec] is reaching critical limit. Maximum interface power is used for this calculation.	This priority level reached warning limit wattage	inline-power	"Please don't configure any more ports " "at this priority."
<del>IPOWERWARNLIMITSL</del>	4-Warning	On Chassis [dec] priority [dec] is reaching critical limit. Maximum interface power is used for this calculation.	This priority level reached warning limit wattage	inline-power	"Please don't configure any more ports at this priority"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ILPOWER-4-WARNING	4-Warning	Power-over-Ethernet is disabled on this switch \n\ PoE functionality requires a power input of 44 to 57 Volts DC	The power supply voltage is NOT in range 44 V-57 V to support PoE/PoE+	inline-power	"Make sure the power supply Voltage is in range 44 V-57 V if intend to use PoE/PoE+"
IPWRSCIRDMDRAWN	5-Notice	Interface [chars] is NOT overdrawing power. it is consuming [dec] milliwatts where as maximum configured value is [dec] milliwatts.	-	inline-power	LOG_SID_NO_ACTION
IPWRSCIRDMDRAWN	5-Notice	Interface [chars] is NOT overdrawing power. it is consuming [dec] milliwatts where as maximum configured value is [dec] milliwatts.	-	inline-power	LOG_SID_NO_ACTION
IPWRSDISORISPAIR	5-Notice	Interface [chars]: spare pair short detected	spare pair short detect error has occurred power on spare pair will not be supplied	inline-power	LOG_SID_NO_ACTION
IPWRSDISORISPAIR	5-Notice	Interface [chars]: spare pair short detected	spare pair short detect error has occurred power on spare pair will not be supplied	inline-power	LOG_SID_NO_ACTION
IPWRSDTIMOISPAIR	5-Notice	Interface [chars]: spare pair detect timeout	spare pair timeout detect error has occurred power on spare pair will not be supplied	inline-power	LOG_SID_NO_ACTION
IPWRSDTIMOISPAIR	5-Notice	Interface [chars]: spare pair detect timeout	spare pair timeout detect error has occurred power on spare pair will not be supplied	inline-power	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ILPOWER-5-DETECT	5-Notice	Interface [chars]: Power Device detected: [chars]	The switch has detected the attached power device.	inline-power	LOG_SID_NO_ACTION
<del>IPWRSHEDCONCT</del>	5-Notice	Interface [chars]: PD removed	The powered device is no longer connected to the\n\ switch or the connected powered device is being powered by an\ external AC power source. The switch is no longer providing power on\n\ the interface.	inline-power	LOG_SID_NO_ACTION
<del>IPWRSHEDCONCT</del>	5-Notice	Interface [chars]: PD removed	The powered device is no longer connected to the\n\ switch or the connected powered device is being powered by an\ external AC power source. The switch is no longer providing power on\n\ the interface.	inline-power	LOG_SID_NO_ACTION
<del>IPWRPOWERDPSHT</del>	5-Notice	Interface [chars]: inline power shut	-	inline-power	LOG_SID_NO_ACTION
<del>IPWRPOWERDPSHT</del>	5-Notice	Interface [chars]: inline power shut	-	inline-power	LOG_SID_NO_ACTION
<del>IPWRPOWERDENY</del>	5-Notice	Interface [chars]: inline power denied. Reason: [chars]	There is not enough power remaining in the switch to supply to\n\ the Power over Ethernet PoE port.	inline-power	LOG_SID_NO_ACTION
<del>IPWRPOWERDENY</del>	5-Notice	Interface [chars]: inline power denied. Reason: [chars]	There is not enough power remaining in the switch to supply to\n\ the Power over Ethernet PoE port.	inline-power	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPOWER5MAX_SARE_PAR	5-Notice	Interface [chars]: spare pair power error: IMAX	spare pair imax error has occurred power on spare pair will not be supplied	inline-power	LOG_SID_NO_ACTION
IPOWER5INVALID_IEEE_CLASS	5-Notice	Interface [chars]: has detected invalid IEEE class: [dec] device. Power denied	The power device has invalid IEEE class. switch won't power\n\nup the device	-	LOG_SID_NO_ACTION
IPOWER5INVALID_IEEE_CLASS	5-Notice	Interface [chars]: has detected invalid IEEE class: [dec] device. Power denied	The power device has invalid IEEE class. switch won't power\n\nup the device	-	LOG_SID_NO_ACTION
IPOWER5LINK_DOWN_DISCONNECT	5-Notice	Interface [chars]: Link down disconnect	The powered device is no longer connected to the\n\nswitch or the connected powered device is being powered by an\n\nexternal AC power source. The switch is no longer providing power on\n\nthe interface.	inline-power	LOG_SID_NO_ACTION
IPOWER5LINK_DOWN_DISCONNECT	5-Notice	Interface [chars]: Link down disconnect	The powered device is no longer connected to the\n\nswitch or the connected powered device is being powered by an\n\nexternal AC power source. The switch is no longer providing power on\n\nthe interface.	inline-power	LOG_SID_NO_ACTION
IPOWER5LLDP_SHUTDOWN	5-Notice	Interface [chars]: PD requested shutdown for [dec] sec via LLDP MDI TLV	Inline power is removed because \n\nPD requested shutdown via LLDP MDI TLV	inline-power	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IPWR</del> POWER_REMOVE	5-Notice	Interface [chars]: power device entry removed admin_state=[chars] oper_state=[chars]	received power device removal event from controller	inline-power	LOG_SID_NO_ACTION
<del>IPWR</del> POWER_DENIED	5-Notice	Interface [chars] requested power=[dec]w hardware limit=[dec]w	Requested power is greater than the hardware limit	inline-power	LOG_SID_NO_ACTION
<del>IPWR</del> POWER_GOOD_SPARER	5-Notice	Interface [chars]: spare pair power good timeout error	spare pair power good timeout error has occurred power on spare pair will not be supplied	inline-power	LOG_SID_NO_ACTION
<del>IPWR</del> POWER_GOOD_SPARER	5-Notice	Interface [chars]: spare pair power good timeout error	spare pair power good timeout error has occurred power on spare pair will not be supplied	inline-power	LOG_SID_NO_ACTION
<del>IPWR</del> POWER_POLICY_WARN_AD	5-Notice	Interface [chars]: invalid power police [dec] milliwatts current [dec] mA voltage [dec] mV	power policing current or voltage value is invalid.	-	LOG_SID_SH_TECH_ACTION
<del>IPWR</del> POWER_POLICY_WARN_AD	5-Notice	Interface [chars]: invalid power police [dec] milliwatts current [dec] mA voltage [dec] mV	power policing current or voltage value is invalid.	-	LOG_SID_SH_TECH_ACTION
<del>IPWR</del> POWER_GRANTED	5-Notice	Interface [chars]: Power granted	There is enough power available in the switch and\n\n the switch is providing power on the interface.	inline-power	LOG_SID_NO_ACTION
<del>IPWR</del> POWER_GRANTED	5-Notice	Interface [chars]: Power granted	There is enough power available in the switch and\n\n the switch is providing power on the interface.	inline-power	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPOWERGOODSPAREPAR	5-Notice	Interface [chars]: spare pair power good	Spare pair power request was successful and power is available on spare pair	inline-power	LOG_SID_NO_ACTION
IPOWERGOODSPAREPAR	5-Notice	Interface [chars]: spare pair power good	Spare pair power request was successful and power is available on spare pair	inline-power	LOG_SID_NO_ACTION
IPOWERSENPOWERNAD	5-Notice	Interface [chars]: invalid power sense [dec] milliwatts current [dec] mA voltage [dec] mV	power sensing current or voltage value is invalid.	inline-power	LOG_SID_SHTECH_ACTION
IPOWERSENPOWERNAD	5-Notice	Interface [chars]: invalid power sense [dec] milliwatts current [dec] mA voltage [dec] mV	power sensing current or voltage value is invalid.	inline-power	LOG_SID_SHTECH_ACTION
IPOWERSCHEPSETFAULT	5-Notice	Interface [chars]: shutting down [chars] pairset due to [chars] fault	The dual signature PD on this port has hit a critical fault on one pairset and hence that pairset will be shutdown	inline-power	LOG_SID_NO_ACTION
IPOWERSTARTSPAREPAR	5-Notice	Interface [chars]: spare pair power error: TSTART	spare pair tstart error has occurred power on spare pair will not be supplied	inline-power	LOG_SID_NO_ACTION
IPOWERSTARTSPAREPAR	5-Notice	Interface [chars]: spare pair power error: TSTART	spare pair tstart error has occurred power on spare pair will not be supplied	inline-power	LOG_SID_NO_ACTION
IPOWERSETAVAILABLEPOWER	6-Information	Available POE budget for switch [dec] is updated. New available POE budget = [chars] Watts	The available power budget has changed	inline-power	LOG_SID_NO_ACTION
IPOWER6SETPOWER	6-Information	Set power allocated to POE to [dec] for slot [dec]	The power allocated to POE has changed	inline-power	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ILPOWER-7-DETECT	7-Debug	Interface [chars]: Power Device detected: [chars]	The switch has detected the attached power device.	inline-power	LOG_SID_NO_ACTION
MEMROM#EEDNOTFOUND	3-Error	[chars]: Failed to find content of field type 0x[hec] with data size = [dec] bytes. The EEPROM might require an update.	System failed to find the content of the indicated field type from the IM EEPROM. The format of the EEPROM of the indicated IM might not be up to date.	spa-infra	SA#HROM#S#D#B#G#A#C#I#O#N
M#H#R#O#M#F#O#R#M#A#T#E#R#R#O#R	3-Error	[chars]: [chars]. The EEPROM might require an update.	A format error has been detected in the EEPROM of the indicated IM. The type of error is indicated in the error message.	asr900-im	SA#H#R#O#M#S#D#B#G#A#C#I#O#N
IM0EVENT_LIBRARY	0-Emergency	polaris-infra	"An event facility initialization or maintenance function failed because[chars]"	"An event facility initialization or maintenance function failed. This could be due to a software defect or system resource exhaustion."	"In most cases
IM0UIPEER_CREATE	0-Emergency	polaris-infra	Failed to create user interface peer.	"The system failed to create a user interface peer."	"In most cases
IM2ACTIVATION_STATE	2-Critical	polaris-infra	%s "%s"[chars][chars]	"The activation state of the named virtualization service has changed as notified by IOx-manager."	"In the failed case

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
M2ALLOC_VIRTNSFRCS	2-Critical	polaris-infra	Virtualization Service%s	"A memory allocation request failed to allocate a data structure required to activate the virtualization service."	"Enable the IOx-manager trace logs and repeat the activation of the virtualization service. Collect the IOx-manager logs and scan them for the cause."
M2CPUSHARES_LIMIT	2-Critical	polaris-infra	Virtualization Service%s	"The virtualization service machine definition file is requesting more CPU shares than the system has available for virtualization services."	"Deactivate any other virtualization services to free up CPU share resources and activate this virtualization service. If that does not address the problem
M2DEACT_FOR_ISSU	2-Critical	polaris-infra	%s Max (%us)	"An ISSU event is pending. Any active VMs will be automatically deactivated to allow ISSU preprocessing to validate the environment. Any ISSU-deactivated VMs will be automatically restarted if the ISSU is cancelled."	"None. Allow the ISSU to continue and the VMs will restart when the ISSU completes; or cancel the ISSU and IOx-manager will automatically restart the VMs."
M2DISK_IMAGE_PATH	2-Critical	polaris-infra	Virtualization Service%s	"The virtualization service machine definition file contains an invalid disk image path for one of the disk devices. This may be a Harddisk	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
M2FND_VIRTNSF_ENIRY	2-Critical	polaris-infra	Failed to find virtualization service with id %u in the IOx-manager list	"The virtualization service with the ID named could not be located in the IOx-manager list."	"Enable the IOx-manager trace logs and repeat the activation of the virtualization service. Collect the IOx-manager logs and scan them for the cause."
M2GENERAL_FAILURE	2-Critical	polaris-infra	Virtualization Service%s	"The named virtualization service has triggered the log. Please interpret the log in the context of the virtualization services."	"No action is required"
M2GUESTSHELL_ENABLED	2-Critical	polaris-infra	The guest shell has been enabled. The command '%s' may be used to access it	-	-
IM-2-HA_STATE	2-Critical	polaris-infra	%s[chars][chans][chans]	"IOx-manager tries to detect the role/slot of various nodes on HA events from the platform. If any of those event callbacks fail	-
M2HA_SWITCHOVER_STATE	2-Critical	polaris-infra	%s[chars][chans][chans]	"IOx-manager HA switchover state related messages for a virtual-service whilst it is being recovered on newly active RP after a HA switchover."	"In the failed case
IM-2-HA_SYNC_ERR	2-Critical	polaris-infra	%s '%s'[chans]	"The ha-sync persistent storage disk for the virtualization service cannot be watched for sync to standby RP."	"Collect the IOx-manager logs and scan them for the cause."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IM-2-HASYNC_THREAD_STATE	2-Critical	polaris-infra	HA remote synchronize thread has failed and exited.	"IOx-manager tries to remote sync the OVA repository to all online nodes using a separate thread. If that thread fails	-
IM-2-INITIALIZATION_FAILED	2-Critical	polaris-infra	"Initialization of[chars] failed for IOx Manager"	"Initialization of IOx Manager process failed."	"Review ioxman logs taking note of the timestamp information to select specific information to review. Copy the message and other related information exactly as it appears on the console or in the system log."
IM-2-INSTALL_FAILURE	2-Critical	polaris-infra	Virtualization Service%s	"The installation of the virtualization service failed."	"Enable the IOx-manager trace logs and repeat the installation of the virtualization service. Collect the IOx-manager logs and scan them for the cause."
IM-2-INSTALL_LOG	2-Critical	polaris-infra	%s[chars][chars][chars]	"The installation log of the named virtualization service	-
IM-2-INSTALL_MEDIA_RETRY	2-Critical	polaris-infra	VM install media still unavailable.%s	"The install media was not detected. Waiting for udev to complete install media(harddisk) detection."	"After IOx-manager exceeds the maximum retry limit
IM-2-INSTALL_STATE	2-Critical	polaris-infra	%s '%s'%s[chars]	"The installation state of the named virtualization service has changed as notified by IOx-manager."	"In the failed case

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IM2-INVALID_ACT_MSG	2-Critical	polaris-infra	Virtualization Service%s	"The virtualization service activate message was received	-
IM2-INVALID_DEACT_MSG	2-Critical	polaris-infra	Failed to process virtualization service deactivate message	"The virtualization service deactivate message was received	-
IM2-INVALID_UNPROV_MSG	2-Critical	polaris-infra	Failed to process virtualization service unprovision message	"The virtualization service unprovision message was received	-
IM2-IOX_INST_CRIT	2-Critical	polaris-infra	IOX SERVICE[chars] LOG:[chars]	"The named virtual service has triggered the log. Please interpret the log in the context of the virtual services."	"No action is required"
IM2-IOX_INST_THROTTLE	2-Critical	polaris-infra	Failed to unthrottle the log for IOX service[chars]	"The named IOX service had sent overwhelming sys log messages and its log had been throttled as a result	-
IM2-MEMORY_LIMIT	2-Critical	polaris-infra	Virtualization Service%s	"The virtualization service machine definition file is requesting more memory than the system has available for virtualization services."	"Enable the IOx-manager trace logs and repeat the activation of the virtualization service. Collect the IOx-manager logs and scan them for the cause."
IM2-MOVE_STATE	2-Critical	polaris-infra	%s %s'[chars][chars]	"The move of the core or log file of the named virtualization service has as been successful or failed as notified by IOx-manager."	"In the failed case

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NETWORK_CONFIG_ERR	2-Critical	polaris-infra	Virtualization Service%s	"A network configuration error has been detected for the named virtualization service."	"No action is required"
IM-2-RESET_FORCE	2-Critical	polaris-infra	Virtualization Services non-recoverable reset command processed	"A 'virtualization service reset force' command has been entered and processed. This action initiates a cleanup of last resort. Occasionally a VM will get into an unrecoverable state that prevents it from activating but also from uninstalling. This is a rare event but when it happens the only resort may be to remove the .conf control file and reboot	-
IM-2-RESIZE_OPER_STATE	2-Critical	polaris-infra	Virtualization service '%s'[chars]%s to '%u'[chars]	"IOx-manager attempts to resize various VM parameters like rootfs size	-
IM-2-RSYNC_STATE	2-Critical	polaris-infra	%s[chars][chars][chars]	"IOx-manager tries to remote sync the virtual-instance configuration file and the OVA repository to all online nodes. If rsync fails even after consecutive retries	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IM-2-START_FAILED	2-Critical	polaris-infra	Virtualization Service%s	"The named virtualization service failed to start."	"Enable the IOx-manager trace logs and repeat the activation of the virtualization service. Collect the IOx-manager logs and scan them for the cause."
UNINSTALL_ALL_VMS	2-Critical	polaris-infra	All Virtualization Services are being uninstalled[chars]%s[chars]	"All virtualization services are being uninstalled by IOx-manager."	"Examine the reason given as to why all virtualization services are being uninstalled for more information. If the reason indicated is due to some error condition
IM-2-UPGRADE_LOG	2-Critical	polaris-infra	%s[chars][chars][chars]	"The upgrade log of the named virtualization service	-
IM-2-VCPU_INVALID	2-Critical	polaris-infra	Virtualization Service%s	"The virtualization service machine definition file is requesting invalid VCPU value."	"Enable the IOx-manager trace logs and repeat the activation of the virtualization service. Collect the IOx-manager logs and scan them for the cause."
IM-2-VCPU_LIMIT	2-Critical	polaris-infra	Virtualization Service%s	"The virtualization service machine definition file is requesting more VCPUs than the system has reserved for virtualization services."	"Enable the IOx-manager trace logs and repeat the activation of the virtualization service. Collect the IOx-manager logs and scan them for the cause."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IM2-VIRT_INST_DISK	2-Critical	polaris-infra	Virtualization Service%s	"The virtualization service requires Disk Storage in excess of the Free Disk Storage available to virtualization services."	"Enable the IOx-manager trace logs and repeat the activation of the virtualization service. Collect the IOx-manager logs and scan them for the cause."
MAVIRTLOGNIFROIE	2-Critical	polaris-infra	Failed to unthrottle the log for virtualization service[chars]	"The named virtualization service had sent overwhelming sys log messages and its log had been throttled as a result"	-
IM2VIRT_INST_MEMORY	2-Critical	polaris-infra	Virtualization Service%s	"The virtualization service requires physical memory in excess of the free memory available to virtualization services."	"Enable the IOx-manager trace logs and repeat the activation of the virtualization service. Collect the IOx-manager logs and scan them for the cause."
MAVIRTMGMINIFRACE	2-Critical	polaris-infra	Virtualization service[chars] has no management interface defined but it is configured in CLI.	"A management interface is configured but none is defined."	"Deactivate the virtualization service"
IM2-VIRT_INST_STATE	2-Critical	polaris-infra	Virtualization Service%s	"The named virtualization service has failed. It is no longer running either because the guest OS has failed"	-
IM-3-IOX_INST_ERR	3-Error	polaris-infra	IOX SERVICE[chars] LOG:[chars]	"The named IOX service has triggered the log. Please interpret the log in the context of the IOX services."	"No action is required"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
M3IOX_NETMASK_ERR	3-Error	polaris-infra	app configuration has wrong[chars] netmask.	"The netmask configuration is wrong."	"Configure guest-ipaddress with IPV4 or IPV6 netmask."
IM-3-PSS_ERR	3-Error	polaris-infra	Purpose:[chars]	-	-
M3PSS_SNAPSHOT_ERR	3-Error	polaris-infra	Source URI:[chars]	-	-
IM-3-SDWRAP_ERR	3-Error	polaris-infra	Description:[chars]	-	-
M3UNSUPPORTED_DATA	3-Error	Data conversion error [chars] 0x[hex]	An internal software error has occurred when converting the data specified in the message from one representation to another.	asr900-im	LOG_SIDS_HTECH_ACTION
M4HA_SYNC_NEEDED	4-Warning	polaris-infra	If using the guest shell	-	-
IM4IOX_INST_WARN	4-Warning	polaris-infra	IOX SERVICE[chars] LOG:[chars]	"The named IOX service has triggered the log. Please interpret the log in the context of the IOX services."	"No action is required"
M4WATCHDOG_TIMER	4-Warning	polaris-infra	%s '%s'[chars][chars]	"The watchdog timer configured for the named virtual service has expired."	"Check any logs produced by the virtualization service to determine the cause."
IM-5-AUX	5-Notice	polaris-infra	Virtualization Service%s	"The AUX login to a virtualization service may allow the user access to system functions that may not have been tested or may interact with the system in unintended ways. Use with caution."	"No action is required"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IM5-IOX_INST_NOTICE	5-Notice	polaris-infra	IOX SERVICE[chars] LOG:[chars]	"The named IOX service has triggered the log. Please interpret the log in the context of the IOX services."	"No action is required"
IM5-IOX_IPV6_NOTICE	5-Notice	polaris-infra	guest-interface(%u)	-	-
IM-5-IOX_NOTICE	5-Notice	polaris-infra	app-hosting:[chars]	"The generic IOX notice. Please interpret the log in the context of the information provided."	"No action is required"
M5IOX_URL_COPY_MSG	5-Notice	polaris-infra	URL Copy:[chars]	"Copy a package file from URL"	"Check if 'ip name-server'
M5IOX_VPG_IPV6_MSG	5-Notice	polaris-infra	no IPv6 address for VirtualPortGroup%d in IOS_Oper_DB	"VirtualPortGroup IPv6 address is not present in IOS_Oper_DB"	"Check if 'show ip interface brief' displays IPv6 for the VirtualPortGroup"
M5PERMISSION_DENIED	5-Notice	polaris-infra	Virtualization Service '%s' is not owned by client IOSd	"An attempt was made to modify a virtual-service that is not owned by the client. The request was rejected."	"No action is required."
IM-6-ACTIVATE_MSG	6-Information	polaris-infra	app-hosting:[chars]	"Message for activating an app."	"In the failed case
IM-6-DEACTIVATE_MSG	6-Information	polaris-infra	app-hosting:[chars]	"Message for deactivating an app."	"In the failed case
IM-6-INSTALL_MSG	6-Information	polaris-infra	app-hosting:[chars]	"Message for installing an app."	"In the failed case
IM-6-IOX_ENABLEMENT	6-Information	polaris-infra	IOX is ready.	"Message for IOX enablement."	"No action is required"
IM-6-IOX_INST_INFO	6-Information	polaris-infra	IOX SERVICE[chars] LOG:[chars]	"The named IOX service has triggered the log. Please interpret the log in the context of the IOX services."	"No action is required"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
IM6IOX_MEDIA_MSG	6-Information	polaris-infra	dynamic media:[chars]	"Message for IOX shared median"	"In the failed case"
M6OX_RECONCILE_INFO	6-Information	polaris-infra	App-hosting application reconcile process[chars]	"Indicates stage of reconcile (application recovery) process."	"No action is required"
IM6IOX_START_FAIL	6-Information	polaris-infra	%s failed to start	"Indicates starting an app after installation."	"No action is required"
IM6IOX_START_INFO	6-Information	polaris-infra	%s cannot be started because it is not installed	"Indicates starting an app before installation."	"No action is required"
M6OX_START_SUCCESS	6-Information	polaris-infra	%s is in RUNNING state	"Indicates starting an app after installation."	"No action is required"
IM-6-START_MSG	6-Information	polaris-infra	app-hosting:[chars]	"Message for starting an app."	"In the failed case"
IM-6-STOP_MSG	6-Information	polaris-infra	app-hosting:[chars]	"Message for stopping an app."	"In the failed case"
IM6UNINSTALL_MSG	6-Information	polaris-infra	app-hosting:[chars]	"Message for uninstalling an app."	"In the failed case"
IM-6-UPGRADE_MSG	6-Information	polaris-infra	app-hosting:[chars]	"Message for upgrading an app."	"In the failed case"
IM6VERIFICATION_MSG	6-Information	polaris-infra	app-hosting:[chars]	"Message for signature verification"	"In the failed case"
IM7IOX_INST_DEBUG	7-Debug	polaris-infra	IOX SERVICE[chars] LOG:[chars]	"The named IOX service has triggered the log. Please interpret the log in the context of the IOX services."	"No action is required"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MPCACHUNKCREAFAL</del>	3-Error		IMAP code has detected a cleartext logon attempt in the inspected IMAP connection while secure-login is configured. This command has been rejected.	cpp-ucode	"This message is for informational purposed only but may indicate" "a security problem."
<del>MPCFIPCNBYPASST</del>	0-Emergency	iosxe-fwdmgr	CPP Client FIPS bypass test failed for[chars]\n.	"Forwarding Manager CPP client IPSEC bypass test failed. This could be due to a hardware malfunction or a software defect."	"If the problem persists reboot the forwarding processor (ESP)."
<del>MPCFISMPBYPASST</del>	0-Emergency	iosxe-fwdmgr	NIST bypass test failed for[chars].\n	"Forwarding Manager IPsec component detected a discrepancy when adding or deleting a security sensitive object. This could be due to a hardware or software resouce limitation or a software defect."	"Check the logs for information on the relevant object download states. Remove the object or a parent object in question. If the problem persists reboot the forwarding processor (ESP)."
<del>MPCFISMPSEVERIAL</del>	0-Emergency	iosxe-fwdmgr	Cryptographic coprocessor severe failure:[chars]\n.	"Cryptographic coprocessor critical operation failed. Further data processing on ESP is halted"	"forwarding processor (ESP) is rebooted automatically. no action needed"
<del>MPCFISMPCRNGTEST</del>	6-Information	iosxe-fwdmgr	continuous[chars]approved RNG test failed.\n	"Forwarding Manager IPsec component detected two identical random number sequences. This could be due to a hardware malfunction or a software defect."	"If the problem persists reboot the forwarding processor (ESP)."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MCRGHSMPKATTEST	6-Information	iosxe-fwdmgr	power up cryptographic self-test did not run to completion:[chars]\n.	"Forwarding Manager power up known answer self-test (KAT) failed. This could be due to a hardware malfunction or a software defect."	"If using ipsec
MCRGHSMPNERRAL	6-Information	iosxe-fwdmgr	Cryptographic coprocessor non-critical failure:[chars]\n.	"Cryptographic coprocessor non-critical operation failed. If the problem persists reboot the forwarding processor(ESP)"	"If the problem persists reboot the forwarding processor (ESP)."
MCRGHSMPCLAPTEST	6-Information	iosxe-fwdmgr	FIPS-approved RNG key seed and state overlap.\n	"Forwarding Manager IPsec component detected an overlap in FIPS-approved RNG key seed and state. This could be due to a hardware malfunction or a software defect."	"If the problem persists reboot the forwarding processor (ESP)."
MCRGMPICRPODBUSY	6-Information	qfp-ipsec	All Crypto Device cores are busy with data packets.\n	"All ESP crypto device are busy. "	"May need to lower crypto traffic rate."
MCRGMPICRPOCRHIED	6-Information	qfp-ipsec	IPsec Control Plane Overload Crypto Device:[chars].	"This ESP crypto device is overloaded. "	"May need to config platform ipsec control-plane medium heavy"
MCRGMPICNMMUNO	6-Information	iosxe-fwdmgr	MTU smaller than minimum IPsec MTU	-	-
MCRGMPICUSIPREDPHR	6-Information	iosxe-fwdmgr	Cipher[chars] is not supported on this ESP.	"This ESP does not support this IPsec cipher"	"No action needed"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MCRMPKATTESTRESULT	6-Information	iosxe-fwdmgr	crypto self-test for algorithm: (%s ... passed)\n.	"Forwarding Manager power up known answer self-test (KAT) success. This is not an error message"	"No action needed."
MCDNABLEACMRAS	5-Notice	ERRMSG_NOFLAGS	-	-	-
MCDNABLEACMRAS	5-Notice	ERRMSG_NOFLAGS	-	-	-
MCDNABLEACMRAS	5-Notice	ERRMSG_NOFLAGS	-	-	-
MCDNABLEACMRAS	5-Notice	ERRMSG_NOFLAGS	-	-	-
MSP_ACLMGR2NOVEM	2-Critical	[chars]. Out of memory	System is out of Memory	imsp-acl	LOG_STD_ACTION
MSP_ACLMGR2NOVMR	2-Critical	Cannot generate hardware representation of access list [chars]	There were insufficient resources available for generating a hardware representation of the access list. Either lack of available logical operation units or lack of memory can cause this problem. Logical operation units are needed when a match on TCP flags is specified or when any test other than eq that is: ne gt lt or range is	firmware	"Modify the ACL configuration to use fewer resources."
MSP_ACLMGR3NAIDACL	3-Error	[chars] failed	Addition/Deletion Failed	imsp-acl	LOG_STD_ACTION
MSP_ACLMGR3NADPARAM	3-Error	Invalid [chars] [dec] encountered	ACL Manager has encountered an invalid parameter value.	firmware	"show running-config"
MSP_ACLMGR3MAXACE	3-Error	MAX ACE count [dec] exceeded	No. ACEs configured is beyond limit	imsp-acls	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MPCIM3</del> UNKNOWN	3-Error	Unknown VMR access group action 0x[hec]	An internal software error has occurred.	firmware	LOG_STD_ACTION
<del>MPCIM3</del> UNKNOWN	3-Error	Unknown L4 operation 0x[hec]	ACL Manager module received invalid value for L4 operation. The problem can be due to memory corruption or bad system memory.	firmware	MSP_ACL_L4OP_ERROR
<del>MPCIM3</del> ACLTCAMFUL	4-Warning	[chars]ACL TCAM Full. Software Forwarding packets on	The ACL configuration is too large to fit in the platform -specific ACL TCAM table.	firmware	"Simplify the ACLs applied to interfaces or reduce" " their number."
<del>MPCIS6</del> SGACLPROGRAMERR	3-Error	Unable to [chars] SGACLs for sgt [dec] dgt [dec] with reason [chars]	An unexpected condition has occurred while programming SGACL	petra-cts	"Reconfigure the SGACL"
<del>MPCIS6</del> SGTPROGRAMERR	3-Error	[chars] binding [chars] failed for [chars] with reason [chars]\n	An unexpected condition has occurred while programming IP SGT	-	"Reconfigure the IP SGT binding"
<del>MPCIS6</del> INVALIDACE	6-Information	Platform can support match only ip protocol tcp/udp src or dst port	Invalid match criteria	-	"Remove one or more entries from ACES\n"
<del>MPCIS6</del> SGACLRULES	6-Information	Platform can not support more than [dec] ACES per cell.	SGACL policy entries limit exceeded	-	"Remove one or more entries from ACES\n"
<del>MPCIS6</del> SGACLTABLEFUL	6-Information	Platform can not support more than [dec] SGT/DGT pairs	SGACL table resource full	-	"Remove SGACL\n"
<del>MPCIS6</del> SGTABLEFUL	6-Information	Platform can not support more than [dec] [chars] bindings	IP/SUBNET SGT table resource full	-	"Remove SGT binding\n"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MPM#EMAXCRS	3-Error	EPM - Reached max ace limit255	An unexpected condition has occurred since max ACE limit reached	l2security	"Correct the config which can have max of 255 ACEs\ per port"
MP#PGADRSUL	3-Error	IPSG Platform Address list is null	SWC Sensor Registration failed!	-	"This message is for informational purposes only"
NBAND#OC#WDSND	3-Error	Invalid send operation packet on [chars]	Internal error caused illegal call to device driver:normal operation continues	msfc2	LOG_SID_RECUR_ACTION
INBAND-3-BAD_PAK	3-Error	Possibly un-encapsulated packet passed to Mistral: int [chars] type [node]stat 0x[hec] flags 0x[hec] size [dec] offset [dec] requeue_token [node]r1 [node]r2 [node]total detected %u	Badly encapsulated packet from process level	msfc2	LOG_STD_ACTION
NBAND#NV#IX#PACKET	3-Error	[chars]: packet neither on IBL nor on OBL	The packet to be transmitted is neither on the IBL nor on the OBL:normal operation continues	msfc2	LOG_SID_RECUR_ACTION
INBAND3-INVALID_PAK	3-Error	Sent from [chars] with invalid [chars] of [dec] bytes with source vlan:[dec] and packetsize:[dec]	Badly formed packet in inband fastpath or process level	msfc2	LOG_STD_ACTION
INBAND-3-NOBUF	3-Error	Dropping the packet.	The system controller receive buffer pool has been exhausted. No further input packets can be handled until some buffers are returned to the pool:normal operation continues	msfc2	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
INBAND-6-BAD_IDB	6-Information	Bad idb for vector [chars]: [chars] vlan [dec] total [dec]	Bad idb returned from get_13_swidb	msfc2	LOG_SID_RECUR_ACTION
INDXOBJ3-ADD_ERROR	3-Error	index add for [chars] failed: [chars]	index object routine error	-	LOG_STD_ACTION
INDXOBJ3-ADD_ERROR	3-Error	index add for [chars] failed: [chars]	index object routine error	-	LOG_STD_ACTION
INDXOBJ3-INTERRUPT	3-Error	index object routine [chars] called from interrupt context	inappropriate index object routine called from interrupt routine.	-	LOG_STD_ACTION
INDXOBJ3-INTERRUPT	3-Error	index object routine [chars] called from interrupt context	inappropriate index object routine called from interrupt routine.	-	LOG_STD_ACTION
INFO-5-LDP	5-Notice	ERRMSG_NOFLAGS	-	-	-
INFO-5-LDP	5-Notice	ERRMSG_NOFLAGS	-	-	-
INFO-6-OF_AGENT	6-Information	ERRMSG_NOFLAGS	-	-	-
INFO-6-OF_AGENT	6-Information	ERRMSG_NOFLAGS	-	-	-
INFO-6-OVS	6-Information	ERRMSG_NOFLAGS	-	-	-
INFO-6-OVS	6-Information	ERRMSG_NOFLAGS	-	-	-
NRA_ARL3-BAD_ART_ID	3-Error	art_id=[hec]	An internal error occurred	cpp-ucode	LOG_STD_ACTION
NRA_STATS-OUT_FRANGE	3-Error	[chars] [dec] out of max size [dec] STATS work improperly	Data invalid from DMA	cmts-application	LOG_SID_RECUR_ACTION
NRA_STATS-OUT_OF_MEM	3-Error	out of max size [dec] start [node]curloc [node]type [dec] len [dec] next [node]d	Data invalid from NONDMA	cmts-application	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>NRA</del> NON_DMA_PROCESS_OVRIME	4-Warning	NON_DMA has been processing for [dec]ms check if CPU high	Process NONDMA Stats overtime it is probably related to CPU high utilization. It is normal to see a small amount of it right after LCHA with scale modems due to low priority of this process and high CPU	cmts-application	LOG_SID_RECUR_ACTION
<del>NRA</del> INVALID_GPM_ACCESS	3-Error	Invalid GPM [chars] at [hec] HAL start [hec] HAL end [hec] INFRA start [hec] INFRA [hec] NET [hec]	Processing packet went beyond valid packet data packet was possibly invalid ppe info and encrypted pkt dump follow	cpp-ucode	LOG_STD_ACTION
<del>NRA</del> INVALID_GPM_ACCESS	3-Error	Invalid GPM [chars] at [hec] HAL start [hec] HAL end [hec] INFRA start [hec] INFRA [hec] NET [hec]	Processing packet went beyond valid packet data packet was possibly invalid ppe info and encrypted pkt dump follow	cpp-ucode	LOG_STD_ACTION
<del>NRA</del> INVALID_GPM_ACCESS_DMA	3-Error	-	Packet associated with previous exception error The packet data has been encrypted	cpp-ucode	LOG_STD_ACTION
<del>NRA</del> INVALID_GPM_ACCESS_DMA	3-Error	-	Packet associated with previous exception error The packet data has been encrypted	cpp-ucode	LOG_STD_ACTION
<del>NRA</del> INVALID_GPM_ACCESS_NO	3-Error	[node]x [node]x [node]x [node]x [node]x [node]x [node]x [node]x [node]x [node]x [node]x [node]x [node]x [node]x	Registers associated with previous exception error	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NRA3NIDCMACISSNO	3-Error	[node]x [node]x [node]x [node]x [node]x [node]x [node]x [node]x [node]x [node]x [node]x [node]x [node]x [node]x	Registers associated with previous exception error	-	LOG_STD_ACTION
NRA3L0FEICHERRCR	3-Error	thread=[dec] PC=0x[hec]	Level-0 instruction cache fetch error possibly recoverable	cpp-ucode	LOG_STD_ACTION
NRA3L12CACHEERRCR	3-Error	thread=[dec] reg=[chars] addr=0x[node]x val=0x[hec]	L1/L2 ICACHE error possibly recoverable	cpp-ucode	LOG_STD_ACTION
NI_FAIL3AICM_TRANS	3-Error	ERRMSG_NOFLAGS	-	-	-
NI_FAIL3AICM_TRANS	3-Error	ERRMSG_NOFLAGS	-	-	-
NI_TAG_ALLOC4LCON	4-Warning	ERRMSG_NOFLAGS	-	-	-
NI_TAG_ALLOC4LCON	4-Warning	ERRMSG_NOFLAGS	-	-	-
INIT-3-LCON	3-Error	ERRMSG_NOFLAGS	-	-	-
INIT-3-LCON	3-Error	ERRMSG_NOFLAGS	-	-	-
INIT-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
INIT-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
INIT-3-LDPLIB	3-Error	ERRMSG_NOFLAGS	-	-	-
INIT-3-LDPLIB	3-Error	ERRMSG_NOFLAGS	-	-	-
INIT-3-LDPLIB	3-Error	-	MPLS_LDP Service Disabled	SRVNAME_LDP	SYSLOGDOC_NO_ACTION
INIT-3-LDPLIB	3-Error	-	MPLS_LDP Service Disabled	SRVNAME_LDP	SYSLOGDOC_NO_ACTION
INIT-3-LDPLIB	3-Error	-	MPLS_LDP Service nabled	SRVNAME_LDP	SYSLOGDOC_NO_ACTION
INIT-3-LDPLIB	3-Error	-	MPLS_LDP Service nabled	SRVNAME_LDP	SYSLOGDOC_NO_ACTION
NI3MPLS_TE_PCALC	3-Error	ERRMSG_HAG_TRACEBACK	-	-	-
NI3MPLS_TE_PCALC	3-Error	ERRMSG_HAG_TRACEBACK	-	-	-



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>NSAL</del> <del>ERR</del> <del>FROM</del> <del>MSGE</del>	3-Error	iosxe-binos-utils	Error Message:[chars]	"This message is used to send a instant error message."	"No action required."
<del>NSAL</del> <del>ERR</del> <del>FROM</del> <del>MSGE</del>	3-Error	iosxe-binos-utils	Failed to[chars] package[chars]	-	-
<del>NSAL</del> <del>NSAL</del> <del>AUTO</del> <del>ABRT</del>	5-Notice	iosxe-binos-utils	Install auto abort timer expired: initiating abort	"An install operation has been aborted because the auto abort timer has expired."	"No user action is needed. If you want to commit the ISSU upgrade
<del>NSAL</del> <del>AUTO</del> <del>ABRT</del> <del>MSGE</del>	5-Notice	iosxe-binos-utils	Install auto abort timer will expire in %d seconds	"An install operation will be aborted after specified seconds of time."	"No user action is needed. If you want to commit the ISSU upgrade
<del>NSAL</del> <del>NSAL</del> <del>COMP</del> <del>ED</del> <del>NO</del>	5-Notice	iosxe-p-install	Completed[chars][chars][chars]	"This message is used to indicate the completion of install operations."	"No action required. This is not an error
<del>NSAL</del> <del>NSAL</del> <del>SCHED</del> <del>MSGE</del> <del>NO</del>	5-Notice	iosxe-p-install	Install schedule timer will expire in %d seconds	"An install operation will be started after specified seconds of time."	"No user action is needed. This is an informational message only."
<del>NSAL</del> <del>NSAL</del> <del>SAR</del> <del>NO</del>	5-Notice	iosxe-p-install	Started[chars][chars][chars]	"This message is used to indicate the beginning of install operations."	"No action required. This is not an error
<del>NSAL</del> <del>ERR</del> <del>NO</del> <del>COMP</del> <del>ED</del> <del>NO</del>	5-Notice	iosxe-binos-utils	Completed[chars] package[chars]	"This message is used to indicate the completion of operations."	"No action required. This is not an error
<del>NSAL</del> <del>ERR</del> <del>NO</del> <del>SAR</del> <del>NO</del>	5-Notice	iosxe-binos-utils	Started[chars] package[chars]	"This message is used to indicate the beginning of operations."	"No action required. This is not an error
<del>NR</del> <del>ERR</del> <del>NO</del> <del>WARN</del> <del>NO</del>	4-Warning	Removal of standby RP in location [chars] is recommended for inter-chassis redundancy configuration	Removal of standby RP from the chassis is recommended for inter-chassis redundancy	iosxe-b2b-ha	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>NIIFACE_AINMSRTOLOG</del>	1-Alert	Interface name [chars].[node]exceeded maximum allowed length [dec]	An internal software error occurred.	idb	LOG_STD_ACTION
<del>NIIFACE_AINMSRTOLOG</del>	1-Alert	Interface name [chars].[node]exceeded maximum allowed length [dec]	An internal software error occurred.	idb	LOG_STD_ACTION
<del>NIIFACE_AINMSRTOLOG</del>	1-Alert	No more IDBS can be created. \nThe maximum allowed numbers [node]has been reached on Standby \nPlease force redundancy mode to RPR if full Active Capacity [node] is needed	No more Software IDB numbers can be Created. The maximum allowed numbers has been reached for this High Available System.\n	idb	-
<del>NIIFACE_AINMSRTOLOG</del>	1-Alert	No more IDBS can be created. \nThe maximum allowed numbers [node]has been reached on Standby \nPlease force redundancy mode to RPR if full Active Capacity [node] is needed	No more Software IDB numbers can be Created. The maximum allowed numbers has been reached for this High Available System.\n	idb	-
<del>NIIFACE_AINMSRTOLOG</del>	1-Alert	No more hardware IDB numbers can be issued. The maximum allowed numbers [dec] has been reached for this platform.\n	No more hardware IDB numbers can be issued. The maximum allowed numbers has been reached for this platform.\n	idb	"In addition to the following copy the information " "from <CmdBold>show idb<NoCmdBold>." LOG_STD_ACTION
<del>NIIFACE_AINMSRTOLOG</del>	1-Alert	No more hardware IDB numbers can be issued. The maximum allowed numbers [dec] has been reached for this platform.\n	No more hardware IDB numbers can be issued. The maximum allowed numbers has been reached for this platform.\n	idb	"In addition to the following copy the information " "from <CmdBold>show idb<NoCmdBold>." LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>INTERFACE#FROMRSMDB</del>	1-Alert	No more SWIDB can be allocated maximum allowed [dec]	No more Interfaces can be created because the maximum number \n\ of SWIDB allowed for this platform has been reached	Obtainfromtraceback.	LOG_STD_ACTION
<del>INTERFACE#FROMRSMDB</del>	1-Alert	No more SWIDB can be allocated maximum allowed [dec]	No more Interfaces can be created because the maximum number \n\ of SWIDB allowed for this platform has been reached	Obtainfromtraceback.	LOG_STD_ACTION
<del>INTERFACE#FROMRSMDB</del>	1-Alert	No more software IDB numbers can be issued. The maximum allowed numbers [dec] has been reached for this platform.\n	No more software IDB numbers can be issued. The maximum allowed numbers has been reached for this platform.\n	idb	"In addition to the following copy the information " "from <CmdBold>show idb<NoCmdBold>. " LOG_STD_ACTION
<del>INTERFACE#FROMRSMDB</del>	1-Alert	No more software IDB numbers can be issued. The maximum allowed numbers [dec] has been reached for this platform.\n	No more software IDB numbers can be issued. The maximum allowed numbers has been reached for this platform.\n	idb	"In addition to the following copy the information " "from <CmdBold>show idb<NoCmdBold>. " LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IRFAC/IDB/SE/NOAL</del>	3-Error	Invalid function call at interrupt level.	An internal function was illegally called at interrupt level. This error might be caused by incorrectly coded creation or deletion of an interface or during an OIR operation.\n	idb	"Perform a search of the Bug Toolkit "BUG_TOOLKIT". "If you still require assistance copy the error message "exactly as it appears on the console or in the system log. " "Issue the <CmdBold>show tech<NoCmdBold> command and copy the "output. If you performed any actions before the error message "appeared make a note of this. Open a case with the Technical "Assistance Center via the Internet "TAC_CASE_OPEN" or contact "your Cisco technical support representative and provide the "representative with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>NIHACE_BUG</del> SEANCEAL	3-Error	Invalid function call at interrupt level.	An internal function was illegally called at interrupt level. This error might be caused by incorrectly coded creation or deletion of an interface or during an OIR operation.\n	idb	"Perform a search of the Bug Toolkit " BUG_TOOLKIT ". " "If you still require assistance copy the error message " "exactly as it appears on the console or in the system log. " "Issue the <CmdBold>show tech<NoCmdBold> command and copy the " "output. If you performed any actions before the error message " "appeared make a note of this. Open a case with the Technical " "Assistance Center via the Internet " TAC_CASE_OPEN " or contact " "your Cisco technical support representative and provide the " "representative with the gathered information."
<del>NIHACE_AIR</del> ANOCCEMIU	3-Error	Error [dec] received while getting MTU: [chars]. Using default %u	A software error has occurred while attempting to retrieve the MTU value from the interface.	Obtainfromtraceback.	LOG_STD_ACTION
<del>NIHACE_AIR</del> ANOCCEMIU	3-Error	Error [dec] received while getting MTU: [chars]. Using default %u	A software error has occurred while attempting to retrieve the MTU value from the interface.	Obtainfromtraceback.	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>INTERFACE_</del> ERRANT	3-Error	[chars] in progress of being inserted/removed ignoring new request to [chars]	A software error has occurred while attempting to insert or remove the interface into the system as there's already another attempt in progress to insert or remove this interface. The first attempt must complete before a new attempt can be started. The user should retry this operation at a later time.	idb	LOG_STD_ACTION
<del>INTERFACE_</del> ERRANT	3-Error	[chars] in progress of being inserted/removed ignoring new request to [chars]	A software error has occurred while attempting to insert or remove the interface into the system as there's already another attempt in progress to insert or remove this interface. The first attempt must complete before a new attempt can be started. The user should retry this operation at a later time.	idb	LOG_STD_ACTION
<del>INTERFACE_</del> NUMODERR	3-Error	Error occurred while using the ifnum to idb table for interface [chars] if number [dec] during [chars]	A software error has occurred. This message is displayed when an operation on the if_number to idb mapping table could not be performed successfully.	idb	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
INTERFACE-3-ERR	3-Error	Error occurred while using the ifnum to idb table for interface [chars] if number [dec] during [chars]	A software error has occurred. This message is displayed when an operation on the if_number to idb mapping table could not be performed successfully.	idb	LOG_STD_ACTION
INTERNAL-3-ERR	3-Error	Invalid subblock parameters for [chars] were supplied.	An internal software error occurred.	idb	"Copy the error message exactly as it appears on the console or in " "the system log. Issue the show idb and show tech-support " "commands to gather data that may help identify the nature of " "the error. Also perform a search of the Bug Toolkit " "BUG_TOOLKIT " " "If you still require assistance open a case with the " "Technical Assistance Center via the Internet " "TAC_CASE_OPEN " or contact your Cisco technical support representative and " "provide the representative with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>NRACE_A</del> <del>NO_DS</del> <del>ERRMHS</del>	3-Error	Invalid subblock parameters for [chars] were supplied.	An internal software error occurred.	idb	"Copy the error message exactly as it appears on the console or in " "the system log. Issue the show idb and show tech-support " "commands to gather data that may help identify the nature of " "the error. Also perform a search of the Bug Toolkit " "BUG_TOOLKIT "." "If you still require assistance open a case with the " "Technical Assistance Center via the Internet " "TAC_CASE_OPEN " or contact your Cisco technical support representative and " "provide the representative with the gathered information."
<del>NRACE_A</del> <del>NO_DS</del> <del>ERRMHS</del>	3-Error	The [chars] subblock named [chars] was not added to [chars]	A software error has occurred this message is displayed when IDB subblocks cannot be added.	Obtainfromtraceback.	LOG_STD_ACTION
<del>NRACE_A</del> <del>NO_DS</del> <del>ERRMHS</del>	3-Error	The [chars] subblock named [chars] was not added to [chars]	A software error has occurred this message is displayed when IDB subblocks cannot be added.	Obtainfromtraceback.	LOG_STD_ACTION
<del>NRACE_A</del> <del>NO_DS</del> <del>ERRMHS</del>	3-Error	The [chars] subblock named [chars] was not removed	A software error has occurred this message is displayed when \n\ IDB subblocks cannot be removed.	Obtainfromtraceback.	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>NIERFACE_ABNOSUBBLOCK</del>	3-Error	The [chars] subblock named [chars] was not removed	A software error has occurred this message is displayed when \n\ IDB subblocks cannot be removed.	Obtainfromtraceback.	LOG_STD_ACTION
<del>NIERFACE_ABNOSUBBLOCK</del>	3-Error	[chars] subblock does not exist on interface [chars]	An internal software error occurred.	Obtainfromtraceback.	LOG_STD_ACTION
<del>NIERFACE_ABNOSUBBLOCK</del>	3-Error	[chars] subblock does not exist on interface [chars]	An internal software error occurred.	Obtainfromtraceback.	LOG_STD_ACTION
<del>NIERFACE_ABNUMDBR</del>	3-Error	subnum [hec] error in [chars]	A software error has occurred this message is displayed when a problem has occurred with a sub_number db.	Obtainfromtraceback.	LOG_STD_ACTION
<del>NIERFACE_ABNUMDBR</del>	3-Error	subnum [hec] error in [chars]	A software error has occurred this message is displayed when a problem has occurred with a sub_number db.	Obtainfromtraceback.	LOG_STD_ACTION
<del>NIERFACE_ABNPAKINUT</del>	4-Warning	pak->if_input is not initialized	An internal software error occurred.	Obtainfromtraceback.	LOG_SID_RECUR_ACTION
<del>NIERFACE_ABNPAKINUT</del>	4-Warning	pak->if_input is not initialized	An internal software error occurred.	Obtainfromtraceback.	LOG_SID_RECUR_ACTION
<del>NIERFACE_ABNPAKOUT</del>	4-Warning	pak->if_output is not initialized on interface [chars]	An internal software error occurred.	Obtainfromtraceback.	LOG_SID_RECUR_ACTION
<del>NIERFACE_ABNPAKOUT</del>	4-Warning	pak->if_output is not initialized on interface [chars]	An internal software error occurred.	Obtainfromtraceback.	LOG_SID_RECUR_ACTION
<del>NIERFACE_ABNPDRNERR</del>	4-Warning	Function [chars] detected an invalid [chars] pointer of [node]IX ignoring	A software error has occurred this message is displayed when \n\ an invalid pointer is detected.	Obtainfromtraceback.	'LOG_SID_SHITCH_ACTION'

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NIIRFACE_AH4BADCNIR	4-Warning	Function [chars] detected an invalid [chars] pointer of [node]IX ignoring	A software error has occurred this message is displayed when \n\ an invalid pointer is detected.	Obtainfromtraceback.	'LOG_SID_SH_TECH_ACTION'
NIIRFACE_AH4BADSWDB	4-Warning	[chars] may not be referencing the correct swidb	An internal software error occurred.	Obtainfromtraceback.	LOG_SID_RECUR_ACTION
NIIRFACE_AH4BADSWDB	4-Warning	[chars] may not be referencing the correct swidb	An internal software error occurred.	Obtainfromtraceback.	LOG_SID_RECUR_ACTION
NIIRFACE_AH4BLRRCR	4-Warning	A error occurred while using the Index Table utility for [chars].	-	Obtainfromtraceback.	LOG_STD_ACTION
NIIRFACE_AH4BLRRCR	4-Warning	A error occurred while using the Index Table utility for [chars].	-	Obtainfromtraceback.	LOG_STD_ACTION
Interface[chars]:[chars]	The CHOCX RP driver queries the LC for SONET information the LC didn't reply.	c7600-sip-200	"This is a internal software error. Decode the " "traceback. Enable <CmdBold>debug hw-module subslot " "<slot>/<bay> command<NoCmdBold>. Check Bug Toolkit " "before calling the TAC. When calling the TAC " "please provide the above information along with the " "output of <CmdBold>show logging<NoCmdBold> and the " "output of <CmdBold>show tech<NoCmdBold details."	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
INTF_SYNC-2-INTSYS	2-Critical	[chars]	A software error occurred during initialization of the Interface Sync RF subsystem	-	"Check for sufficient processor memory." LOG_STD_ACTION
NIF_SYNC3NAID_MG	3-Error	Incorrectly formatted message 0x[hec] 0x[hec] received by [chars]	Inconsistent message data was received from the peer CPU possibly due to an incompatible image version.	-	LOG_STD_ACTION
NIF_SYNC3NO_BUFFER	3-Error	Unable to transmit message type [dec] from [chars]	A transmit error occurred while sending msg to other CPU due to non-availability of buffer	-	LOG_STD_ACTION
NIF_SYNC3TRANSMIT_ERROR	3-Error	Unable to transmit message type [dec] from [chars]	A transmit error occurred while sending msg to other CPU due to msg translation	-	LOG_STD_ACTION
NIF_SYNC3UNKNOWN_MG	3-Error	Unknown message type 0x[hec] received by [chars]	An unknown message type was received from the peer CPU possibly due to an incompatible image version.	-	LOG_STD_ACTION
NIF_SYNC3UNSUPPORTED_MG	5-Notice	Msgtype [chars] sent by [chars] unsupported by peer.	Peer responded that it didn't recognize a message sent by this CPU possibly due to a different image version.	-	"May require a software upgrade on the Standby CPU. " LOG_STD_ACTION
INTR_MGR-3-BURST	3-Error	[chars] [chars] [[dec]]	A burst of hardware interrupts of the type indicated has occurred.	-	"The message text on the console or in the " "system log provides more information " "on the specific nature of the error. " LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
INTR_MGR-3-INTR	3-Error	[chars] [chars]	The specified interrupt event has been detected.	-	"The message text on the console or in the " "system log provides more information " "on the specific nature of the error. " LOGS_IDSHTTECH_ACTION
NIR_MGR3MAXBURST	3-Error	[chars] [chars] [[dec]]	The specified hardware interrupt has exceeded the maximum allowed number of bursts.	-	"The message text on the console or in the " "system log provides more information " "on the specific nature of the error. " LOGS_IDSHTTECH_ACTION
<del>NAALDISP3MHS_TELM</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>NAALDISP3MHS_TELM</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
INVALID_MSG3L2VPN	3-Error	ERRMSG_NOFLAGS	-	-	-
INVALID_MSG3L2VPN	3-Error	ERRMSG_NOFLAGS	-	-	-
INVEVENT3-TENSFRSM	3-Error	ERRMSG_NOFLAGS	-	-	-
INVEVENT3-TENSFRSM	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>NDRFRGM3MSEIAC</del>	2-Critical	ERRMSG_NOFLAGS	-	-	-
<del>NDRFRGM3MSEIAC</del>	2-Critical	ERRMSG_NOFLAGS	-	-	-
<del>NMDRIRI2MSEIAC</del>	2-Critical	ERRMSG_NOFLAGS	-	-	-
<del>NMDRIRI2MSEIAC</del>	2-Critical	ERRMSG_NOFLAGS	-	-	-
INVSTATE3-TENSFRSM	3-Error	ERRMSG_NOFLAGS	-	-	-
INVSTATE3-TENSFRSM	3-Error	ERRMSG_NOFLAGS	-	-	-
INVIRANS3-TENSFRSM	3-Error	ERRMSG_NOFLAGS	-	-	-
INVIRANS3-TENSFRSM	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>OMDHCMDR3RTRIAA</del>	3-Error	asr900-im	IOMD failed to send rate adapt message for port %d speed %d duplex %d reason:%s	"IOMD failed to send message to nile"	"Examine the IOMD logs. If the problem persists

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OMDEFRCM1A0RNER	4-Warning	asr900-im	Function[chars] detected an invalid[chars] pointer of %08IX	-	-
OMDEFRCM1A0RMEED	4-Warning	asr900-im	IOMD Detects Maximum No of SSFP:%d Inserted	"Exceeding Maximum SSFP transceivers(>6) Insertion"	"Need to remove the SSFP if it exceeds the Maximum number of supported SSFP "
OMDEFRCM1A0MXCR	2-Critical	INVALID	Number of[chars] that can be supported has reached the max limit of %d	-	-
OMDEFRCM1A0MBCOW	3-Error	asr900-im	%s fifo overflow occurred for port %d	"A hardware error in phy has occurred"	"Examine the IOMD logs for Phy driver or hardware errors. If the problem persists
OMDEFRCM1A0NRUER	3-Error	INVALID	interrupt handling error[chars]	"Interrupt could not be handled because of internal sw error"	"Examine the IOMD logs. If the problem persists
OMDEFRCM1A0CRHQD	4-Warning	INVALID	Found mismatch between the line card Phy firmware versions bundled in software and programmed in hardware in slot %d. To upgrade the Phy firmware to version bundled in software	-	-
OMDEFRCM1A0CSURFD	4-Warning	INVALID	1G Transceiver is inserted in slot %d for ports[chars]. The current linecard phy firmware does not support 1G capability. To upgrade the firmware	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MDHRCMCSIPHECR</del>	4-Warning	INVALID	1G Transceiver is inserted in slot %d for port %d. The current linecard phy firmware does not support 1G capability. To upgrade the firmware	-	-
<del>MDHRCQSIPHEDE</del>	4-Warning	INVALID	On SLOT %u	-	-
<del>MDHRCQSIPHEDE</del>	4-Warning	INVALID	On SLOT %u	-	-
<del>MDHRCM4MOECCR</del>	4-Warning	INVALID	Unplug the transceiver in interface[chars]	-	-
<del>MDHRCMSIPHEBSR</del>	4-Warning	INVALID	On SLOT %u	-	-
<del>MDHRCM4KNOSEY</del>	5-Notice	INVALID	Inconsistency detected between hardware and software parameters in slot %d for ports[chars]	-	-
<del>MDHRCM4OHEDE</del>	5-Notice	INVALID	Hardware parameters on PHY for slot %d need modification	-	-
<del>MDHRCM4EYSPWD</del>	6-Information	INVALID	Interfaces on slot %d are initialized on standby and ready for switchover	"All the interfaces on standby for particular slot is initialized and Interface are ready for switchover."	"No action is required."
<del>MDHRCMSIPHEDE</del>	6-Information	INVALID	On SLOT %u QSFP transceiver plugged into 40G port %u and a QSA module plugged into port %u is unsupported combination. To linkup the desired connections	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IMD_MFGA3IC_READ	3-Error	asr900-im	IM slot %d: An I2C read has failed for addr: 0x%x reg: 0x%x	"An attempt to read the I2C bus has failed. This error could be caused by a hardware or software defect."	"Examine the logs for I2C driver errors."
IMD_MFGA3IC_WRITE	3-Error	asr900-im	IM slot %d: An I2C write has failed for addr: 0x%x reg: 0x%x data: 0x%x	"An attempt to write to the I2C has failed. This error could be caused by a hardware or software defect."	"Examine the logs for I2C driver errors."
IMD_MFGA3IC_STATUS	3-Error	asr900-im	%s ----> %d	"Test msg to indicate status of CEM FPGA Firmware programming"	"None - do nothing"
IMD_MFGA3MDIO_READ	3-Error	asr900-im	An MDIO read has failed for addr:[hex] reg:[hex]	"An attempt to read the MDIO bus has failed. This error could be caused by a hardware or software defect."	"Examine the logs for MDIO driver errors."
IMD_MFGA3MDIO_WRITE	3-Error	asr900-im	An MDIO write has failed for addr:[hex] reg:[hex] data:[hex]	"An attempt to write to the MDIO has failed. This error could be caused by a hardware or software defect."	"Examine the logs for MDIO driver errors."
IMD_INFRA3IC_READ	3-Error	asr900-im	An I2C read has failed because[chars]	"An I2C read has failed. This could be due to a hardware or software defect."	"Note the time of the error message and examine the logs for I2C errors. If the logs provide information about a correctable problem"
IMD_INFRA3IC_WRITE	3-Error	asr900-im	An I2C write has failed because[chars]	"An I2C write has failed. This could be due to a hardware or software defect."	"Note the time of the error message and examine the logs for I2C errors. If the logs provide information about a correctable problem"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
IMD_NRA3NIREVENT	3-Error	asr900-im	IOMd fast thread event (%d).	"IOMd fast thread event"	"Examine the logs for IOMD. If the problem persists"
IMD_NRA3NIBAYNUM	3-Error	asr900-im	An invalid bay number is specified in one of the internal APIs. bay=%d max_bay=%d	"Invalid bay number to find the TDL domain"	"Examine the logs for IOMD. If the problem persists"
IMD_NRA3NISLOTNUM	3-Error	asr900-im	An invalid slot number is specified in one of the internal APIs. slot=%d max_slot=%d	"Invalid slot number to find the TDL domain"	"Examine the logs for IOMD. If the problem persists"
IMD_NRA3NICALLOCAL	3-Error	asr900-im	Failed to allocate IPC buffer[chars]	"The IM failed to allocate a buffer for communication with RSP"	"Examine the logs for IOMD. If the problem persists"
IMD_NRA3NISENDFAL	3-Error	asr900-im	IOMD failed to send a message[chars] reason:[chars]	"IOMD failed to send message to the RP"	"Examine the logs for IOMD. If the problem persists"
IMD_NRA3NINCADDFALD	3-Error	asr900-im	Module[chars] in Slot %d failed online diagnostics. Please use 'show post' for more details	"Online Diag has failed. This could be due to a hardware or software defect."	"Note the time of the error message and examine the logs for errors. If the logs provide information about a correctable problem"
IMD_NRA3NISVLSPEEDMACH	3-Error	asr900-im	Speed of SVL Port %d in Slot %d does not match with other SVL Links. Please take necessary action.	"Speed of this SVL Link does not match with the speed of other SVL Links This can be due to replacement of a cable with different Speed on SVL port."	"Please check the operating speed of this SVL Link and the operating speed of the other SVL Links.If the logs provide information about a correctable problem"
IMD_NRA4NIBADPNIER	4-Warning	asr900-im	Function[chars] detected an invalid[chars] pointer of %08IX	-	-
IMD_NRA4NIFAN_ALARM	4-Warning	INVALID	Interface[chars]	-	-



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>OMDNRANTRCVRIMT</del>	4-Warning	asr900-im	IOMd main thread disabled interrupt for %u msec.	"IOMd main thread process disabled interrupt too long"	"Examine the logs for IOMD. If the problem persists"
<del>OMDNRALCCORREQD</del>	4-Warning	INVALID	Found mismatch between the line card Phy firmware versions bundled in software and programmed in hardware in slot %d. To upgrade the Phy firmware to version bundled in software	-	-
<del>OMNRABEACONLEDIND</del>	6-Information	INVALID	Slot %d Port %d Beacon LED turned[chars]	"Beacon LED turned ON/OFF. This is a notification message only.No action is required."	"This is a notification message only. No action is required."
<del>OMNRGFPWRBSDICE</del>	6-Information	INVALID	The port[chars] supports optics with a max power of %d.%d W	-	-
<del>OMNRGFPWRBSISEN</del>	6-Information	INVALID	The line card %d has optic(s) inserted in port(s) that has power limitations. The optics max power is more than the power recommended. This can lead to operational and thermal issues for these and neighbouring ports. To identify allocated port max power	-	-
<del>OMNRASIBYCRSNIID</del>	6-Information	INVALID	Interfaces on slot %d are initialized on standby and ready for switchover	"All the interfaces on standby for particular slot is initialized and Interface are ready for switchover."	"No action is required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OMDR900IMCOMPBE</del>	6-Information	asr900-im	Failed to copy message[chars] to buffer	-	-
<del>OMDR900SUFREMOE</del>	6-Information	INVALID	Transceiver module in[chars] going in err-disabled state.	"Breakout optics is not supported in non-breakout port; Non-breakout optics is not supported in breakout port"	"Unplug the error disabled transceiver"
<del>OMDR900SUFREMOE</del>	6-Information	INVALID	Transceiver module in[chars] going in err-disabled state.	"Breakout optics is not supported in non-breakout port; Non-breakout optics is not supported in breakout port"	"Unplug the error disabled transceiver"
<del>OMDR900SUFREMOE</del>	6-Information	INVALID	On SLOT %u QSFP 100G/40G transceiver plugged into port %u and a QSA module plugged into port %u is unsupported combination. To linkup the desired connections	-	-
<del>OMDR900SUFREMOE</del>	5-Notice	INVALID	Interface[chars] link recovery mechanism triggered [Reason: System Side Signal down]	"Link recovery mechanism detected a system side signal issue on UADP transmit. Recovery mechanism was triggered for correcting it."	"No action is required."
IOMD-2-INITFAIL	2-Critical	IOMD initialization error: [chars] Slot [node]Subslot %u	A failure occurred during initialization of IOMD. The line card that generated the message is not functional.	iomd	<del>OMDAUORCOMRYACDN</del>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IOMD-2-INITFAIL	2-Critical	IOMD initialization error: [chars] Slot [node]Subslot %u	A failure occurred during initialization of IOMD. The line card that generated the message is not functional.	iomd	<del>IOMD_AUORCOMRYACDN</del>
IOMD-2-IPC_ERR	2-Critical	IOMD IPC error: [chars] Slot [node]Subslot %u	A failure in communication occurred to another process	iomd	<del>IOMD_AUORCOMRYACDN</del>
<del>IOMD2MB_FAKE_SWOVR</del>	2-Critical	Asic [dec] on slot [dec] detected a spurious switchover	ASIC on the linecard detected a fake switchover event. Check if it is a prototype board	iomd	IOMD_STD_ACTION
<del>IOMD2PCIE_ACCESS_FAIL</del>	2-Critical	[chars] on Slot [node] Subslot [node] PCIe access failed HW faulty shutting down this slot.	A failure occurred during read/write of PCIe registers from HW. This board is not usable in current state.	iomd	IOMD_STD_ACTION
<del>IOMD2PCIE_FW_MSMACH</del>	2-Critical	[chars] on Slot [node]Subslot [node] POE is not functional on this line card\n To recover from issue power-cycle the linecard using the CLI: hw-module subslot <Slot>/<Subslot> oir power-cycle	The Firmware version on this Linecard is not supported by the Software. POE is not functional on this line card The linecard should be power-cycled to recover from this issue.	iomd	<del>IOMD2PCIE_FW_MSMACH_ACDN</del>
IOMD-2-POE_INIT_FAIL	2-Critical	[chars] on Slot [node]Subslot [node] POE functionality will not work on this LC	A failure occurred during initialization of LC for POE. POE is not functional on the line card that generated the message.	iomd	IOMD_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IOMD2-POE_RW_FAIL	2-Critical	[chars] on Slot [node]Subslot [node] POE functionality will not continue to work on this LC	A failure occurred during read/write of POE registers from HW. POE is not functional on the line card that generated the message.	iomd	IOMD_STD_ACTION
IOMD2-TIMERFAIL_CXT	2-Critical	IOMD timer context error	A failure occurred during context retrieval for a timer	iomd	IOMD_TIMER_FAIL_CXT
IOMD3-SPACREATE_IDH_FAIL	3-Error	Failed to create SPA [dec]/[dec] handle	Failed to create message handle for SPA communication.	asr900-im	LOG_SIDSHTTECH_ACTION
IOMD3-SPACREATE_IDMG_FAIL	3-Error	Failed to create [chars] message for [chars].	Failed to create/allocate necessary TDL message for SPA communication.	asr900-im	LOG_SIDSHTTECH_ACTION
IOMD3-SPADISPATCH_IDH_FAIL	3-Error	Failed to initialize dispatch path for SPA [dec]/[dec] handle	Failed to initialize dispatch path handle for SPA communication.	asr900-im	LOG_SIDSHTTECH_ACTION
IOMD3-SPABIND_IDH_FAIL	3-Error	[chars] rc = [dec]	Failed to bind message handle for SPA communication.	asr900-im	LOG_SIDSHTTECH_ACTION
IOMD3-HAIPC_FAIL	3-Error	Failed to [chars] reason: [chars].	Failure in handling IOMD HA IPC.	asr900-im	LOG_SIDSHTTECH_ACTION
IOMD3-HARFROLE_FAIL	3-Error	Failed to [chars].	Failure to establish start client or server.	asr900-im	LOG_SIDSHTTECH_ACTION
IOMD3-INVALID_HANDLE	3-Error	Failed to get a valid IPC handle for type [node]slot [dec] subslot [dec].	The client handle was found to be NULL for the given type/slot/subslot.	asr900-im	LOG_SIDSHTTECH_ACTION
IOMD3-INVALID_SLOT_NUM	3-Error	slot= [dec] max slot = [dec]	An invalid slot number is specified in one of the internal APIs.	asr900-im	LOG_SIDSHTTECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IOMD3INVALIDSUBLOTNUM	3-Error	subslot= [dec] max subslot = [dec]	An invalid subslot number is specified in one of the internal APIs.	asr900-im	LOG_SIDSH_TECH_ACTION
IOMD3INVALIDCAUSCE	3-Error		Incorrect usage of an internal API that should only be used on CC.	asr900-im	LOG_SIDSH_TECH_ACTION
IOMD3IPCALLOCFAIL	3-Error	Failed to allocate IPC buffer [chars]	The SPA failed to allocate a buffer for communication with\n\ the Route Processor ASR1000-RP.	asr900-im	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
IOMD3ISR_RC_ERROR	3-Error	ISR return code out of range. rc=[dec]	The ISR error return code is out of range.	asr900-im	LOG_SIDSH_TECH_ACTION
IOMD3MARSHAL_ERR	3-Error	Failed to marshal [chars].	Failure to marshal tdl message	asr900-im	LOG_SIDSH_TECH_ACTION
IOMD3MESSAGE_ERROR	3-Error	Bay [dec]: [chars]	An unexpected error has occurred.	asr900-im	"Seach for resolved software issues using the Bug " "Toolkit at <a href="http://www.cisco.com/bugtools">http://www.cisco.com/bugtools</a> " "If you still require assistance " LOG_STD_ACTION
IOMD3MODULEMESSAGE	3-Error	[chars]	An error is detected by the firmware running on the module in the slot and subslot specified in the message	esg-io-infra	LOG_SIDSH_TECH_ACTION
IOMD3NEBS_ACCESS_FAIL	3-Error	Failed to access NGIO PID list for [chars] on slot/bay [dec]/[dec] in NEBS mode	The access to NGIO PID list failed in NEBS mode and module will not be powered on	esg-io-infra	LOG_SIDSH_TECH_ACTION
IOMD3NRU_OR_DRAIN_FAIL	3-Error	NRU OIR EPF Fifo drain failed for mac [node]on slot [dec]	A failure occurred during NRU OIR EPF Fifo drain. NRU datapath may not functional.	iomd	IOMD_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
IOMD-3-QUEUE_FAIL	3-Error	Failed to dequeue because [chars].	Failure to handle events in queue.	asr900-im	LOG_SIDSH_TECH_ACTION
IOMD-3-RFROLE_FAIL	3-Error	Failed to update IM role for reason: [chars]	Failure to handle role update.	asr900-im	LOG_SIDSH_TECH_ACTION
IOMD-3-SETUP_IDH_FAILURE	3-Error	Failed to set the alloc/free handler for SPA [dec]/[dec] handle	Failed to set the alloc/free handler for SPA communication.	asr900-im	LOG_SIDSH_TECH_ACTION
IOMD-3-SIGBUS_ERROR	3-Error	SIGBUS received for IM in slot: [dec]	SIGBUS error encountered for IM	asr900-im	LOG_SIDSH_TECH_ACTION
IOMD-3-TIMER_FAIL	3-Error	Failed to [chars].	Failure in timer processing.	asr900-im	LOG_SIDSH_TECH_ACTION
IOMD-3-UNSUBCRIBED_DATA	3-Error	Data conversion error [chars] 0x[hex]	An internal software error has occurred when converting the data specified in the message from one representation to another.	asr900-im	LOG_SIDSH_TECH_ACTION
IOMD-3-UNSUPPORTED_MODULE	3-Error	The module [chars] in slot [dec] bay [dec] is not supported on this platform	The module inserted is not supported on this platform and will not be powered on	esg-io-infra	LOG_SIDSH_TECH_ACTION
IOMD-3-UNSUPPORTED_MODULE_IN_NEBS	3-Error	The module [chars] in slot [dec] bay [dec] is not supported in NEBS mode	The module inserted is not supported in NEBS mode and will not be powered on	esg-io-infra	LOG_SIDSH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OMNSRPRESWTMDIE</del>	3-Error	The switch module [chars] in slot [dec] bay [dec] is not compatible with current switching mode	Legacy next-gen and flex 1213 switch modules have different feature set and cli behaviors which require system to determine corresponding switching mode at system boot time. Current mode selection is to check module locates in the chassis at boot time then base on priority next-gen > flex 1213 > legacy to decide switching mode. Users need to reload system to change system switching mode if it is necessary	esg-io-infra	LOGSIDSHTTECHACION
<del>OMD6IDMGNCMAIBE</del>	6-Information	Failed to copy message [chars] to buffer not allowed for current domain.	Failure to marshal a message indicates an incompatibility with the intended recipient.	asr900-im	LOGSIDSHTTECHACION
<del>OSISEMCEAFICADPAD</del>	3-Error	[chars]	The ios licensing subsystem failed to create a process/watched boolean etc to watch request from the remote show subsys license commands	ios-licensing	"please capture the error msg and forward it to the appropriate licensing component"
<del>OSISEMCEAFICADPAD</del>	3-Error	[chars]	The ios licensing subsystem failed to create a process/watched boolean etc to watch request from the remote show subsys license commands	ios-licensing	"please capture the error msg and forward it to the appropriate licensing component"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>OSN/A/ERR/UNKNOWN</del>	3-Error	[chars]	The ios image licensing subsystem received an event which it does not understand or recognizes	ios-licensing	"please capture the error msg and forward it to the appropriate licensing component"
<del>OSN/A/ERR/UNKNOWN</del>	3-Error	[chars]	The ios image licensing subsystem received an event which it does not understand or recognizes	ios-licensing	"please capture the error msg and forward it to the appropriate licensing component"
<del>OSN/A/ERR/UNKNOWN</del>	3-Error	[chars]	The ios image licensing subsystem received an event for an unknown version of a feature	ios-licensing	"please capture the error msg and forward it to the appropriate licensing component"
<del>OSN/A/ERR/UNKNOWN</del>	3-Error	[chars]	The ios image licensing subsystem received an event for an unknown version of a feature	ios-licensing	"please capture the error msg and forward it to the appropriate licensing component"
<del>OSN/A/INF/UNKNOWN</del>	6-Information	EULA must be accepted for license level = [chars]	This is an informational message to inform user that the user needs to reissue the command from an interactive terminal	ios-licensing	"This is an informational message no action is required"
<del>OSN/A/INF/UNKNOWN</del>	6-Information	EULA must be accepted for license level = [chars]	This is an informational message to inform user that the user needs to reissue the command from an interactive terminal	ios-licensing	"This is an informational message no action is required"
<del>OSN/A/INF/UNKNOWN</del>	6-Information	Module name = [chars] Next reboot level = [chars] and License = [chars]	This is an informational message to display the change in the next reboot license level	ios-licensing	"This is an informational message no action is required"



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CSMSMCEARADNESHNE</del>	6-Information	Module name = [chars] Next reboot level = [chars] and License = [chars]	This is an informational message to display the change in the next reboot license level	ios-licensing	"This is an informational message no action is required"
<del>CSMSMCEARADNESHNE</del>	6-Information	Please issue 'license boot' config command to make extension license [chars] available for use.	This is an informational message to info user that to make extension license available to support image level licensing image level needs to be configured	ios-licensing	"This is an informational message no action is required"
<del>CSMSMCEARADNESHNE</del>	6-Information	Please issue 'license boot' config command to make extension license [chars] available for use.	This is an informational message to info user that to make extension license available to support image level licensing image level needs to be configured	ios-licensing	"This is an informational message no action is required"
<del>CSMSMCEARADNESHNE</del>	6-Information	[chars] [chars].	There is no valid license available on the box and we are running on a default feature	ios-licensing	"please purchase a license to activate required features"
<del>CSMSMCEARADNESHNE</del>	6-Information	[chars] [chars].	There is no valid license available on the box and we are running on a default feature	ios-licensing	"please purchase a license to activate required features"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>IOS_LICENSE2</del> NO_LICENSE	2-Critical	No valid license available to run any feature	The Ios licensing subsystem could not get a valid license to run any feature on the box please purchase a license.	ios-licensing	"Purchase a valid license to run the features you requier on the " "box. You should contact the cisco portal or a TAC engineer to get " "a license. You can do a <CmdBold>show license<noCmdBold> at the " "privileged command line prompt to get the list of availabe feature " "in the box "
<del>IOS_LICENSE2</del> NO_LICENSE	2-Critical	No valid license available to run any feature	The Ios licensing subsystem could not get a valid license to run any feature on the box please purchase a license.	ios-licensing	"Purchase a valid license to run the features you requier on the " "box. You should contact the cisco portal or a TAC engineer to get " "a license. You can do a <CmdBold>show license<noCmdBold> at the " "privileged command line prompt to get the list of availabe feature " "in the box "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IOS_LICENSE2NO_MEM	2-Critical	No memory available for [chars]	The Ios licensing subsystem could not obtain the memory it needed.	ios-licensing	"If this error message recurs attempt to reduce memory usage by " "reducing the number of router features or interfaces enabled. " "Alternatively add more memory. " " "To display total memory usage for a router enter " "<CmdBold>show memory summary<noCmdBold> at the privileged " "command line prompt. To display buffer usage enter " "<CmdBold>show buffers<noCmdBold> at the prompt."
IOS_LICENSE2NO_MEM	2-Critical	No memory available for [chars]	The Ios licensing subsystem could not obtain the memory it needed.	ios-licensing	"If this error message recurs attempt to reduce memory usage by " "reducing the number of router features or interfaces enabled. " "Alternatively add more memory. " " "To display total memory usage for a router enter " "<CmdBold>show memory summary<noCmdBold> at the privileged " "command line prompt. To display buffer usage enter " "<CmdBold>show buffers<noCmdBold> at the prompt."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
IOS_LICENSE-3-FAILED	3-Error	[chars]	The ios licensing subsystem failed to create a process/watched boolean etc to watch request from the remote show subsys license commands	ios-licensing	"please capture the error msg and forward it to the appropriate licensing component"
IOS_LICENSE-3-FAILED	3-Error	[chars]	The ios licensing subsystem failed to create a process/watched boolean etc to watch request from the remote show subsys license commands	ios-licensing	"please capture the error msg and forward it to the appropriate licensing component"
IOS_LICENSE-3-IPC_FAILED	3-Error	[chars] failed with an error = [chars]	The ipc calls in the Ios licensing subsystem failed for some reason please capture the error msg and forward it to the appropriate licensing component	ios-licensing	"please capture the error msg and forward it to the appropriate licensing component"
IOS_LICENSE-3-IPC_FAILED	3-Error	[chars] failed with an error = [chars]	The ipc calls in the Ios licensing subsystem failed for some reason please capture the error msg and forward it to the appropriate licensing component	ios-licensing	"please capture the error msg and forward it to the appropriate licensing component"
IOS_LICENSE-3-RTTYS_FAILED	3-Error	[chars] failed	The rttys calls in the Ios licensing subsystem failed for some reason please capture the error msg and forward it to the appropriate licensing component	ios-licensing	"please capture the error msg and forward it to the appropriate licensing component"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IOSLICENSE3RTYS_FAILED</del>	3-Error	[chars] failed	The rttys calls in the Ios licensing subsystem failed for some reason please capture the error msg and forward it to the appropriate licensing component	ios-licensing	"please capture the error msg and forward it to the appropriate licensing component"
<del>IOSLICENSE3UNKNOWNMSGTYPE</del>	3-Error	an unknown message type was received dropping it msg_type = [dec]	Ios licensing subsystem received a msg type which it does not recognizes or support	ios-licensing	"please capture the error msg and forward it to the appropriate licensing component"
<del>IOSLICENSE3UNKNOWNMSGTYPE</del>	3-Error	an unknown message type was received dropping it msg_type = [dec]	Ios licensing subsystem received a msg type which it does not recognizes or support	ios-licensing	"please capture the error msg and forward it to the appropriate licensing component"
<del>IOSDNRAISDEMECFIAL</del>	3-Error	Device [chars] [chars]	USB detection failed	-	"USB Insertion could not be handled completely." "Device needs to be removed and re-inserted"
<del>IOSDNRAISDEMECFOR</del>	6-Information	Device [chars] [chars]	USB inserted/removed	-	LOG_SID_NO_ACTION
IOSD-3-BIPC_REJECT	3-Error	iosxe-shellmgr	Could not accept ipc connection:[chars]	This error occurs if shell-manager has denied an ipc connection request from IOS.	Check the connection request parameters.
IOSD3-TDL_PROPERTIES	3-Error	iosxe-shellmgr	Could not set message properties for connection:[chars]	This error occurs if shell-manager is unable to set message properties for the IOS-sman connection	Check the connection request parameters.
<del>IOSXSPA3SCONCFG_FAILED</del>	3-Error	Pair config for interface [chars] Group [dec] failed	Pair config for interface has failed	iosxe-spa-pos	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>IOSXE_APS3CONFIG_FAIL</del>	3-Error	config change for interface [chars] Group [dec] failed	config for an interface to forwarding plane has failed	iosxe-spa-pos	LOG_STD_ACTION
<del>IOSXE_APSDOWNLOAD_FAIL</del>	3-Error	Unable to download [chars] message to [chars]	An unexpected condition has occurred which resulted in a configuration \n\ not being sent to the reported process.	iosxe-spa-pos	LOG_STD_ACTION
<del>IOSXE_APSFLOWCONFIG_FAIL</del>	3-Error	Flow id to cc for interface [chars] Group [dec] failed	Flow id to cc for an interface has failed	iosxe-spa-pos	LOG_STD_ACTION
<del>IOSXE_APSFLOWIDCONFIG_FAIL</del>	3-Error	Allocation of APS flow ID with manager failed for interface [chars] group [dec]	An unexpected condition has occurred that allocation of\n\ APS flow ID. failed	iosxe-spa-pos	"show interface"
<del>IOSXE_APSFLOWIDDELETE_FAIL</del>	3-Error	Deletion of APS flow ID with manager failed for interface [chars] group [dec]	An unexpected condition has occurred that deletion of\n\ APS flow ID.	iosxe-spa-pos	"show interface"
<del>IOSXE_APSGROUPCONFIG_FAIL</del>	3-Error	Group change for interface [chars] Group [dec] failed	Group change for interface has failed	iosxe-spa-pos	LOG_STD_ACTION
<del>IOSXE_APSPAIRCONFIG_FAIL</del>	3-Error	Pair config for interface [chars] Group [dec] failed	Pair config for interface has failed	iosxe-spa-pos	LOG_STD_ACTION
<del>IOSXE_AUTHN/AUTHN_FAIL</del>	2-Critical	The platform authentication failed	WDC authentication failed	iosxe-esl	"Check if WDC is programmed on this device"
<del>IOSXE_CKGRUNCOMPLETE</del>	6-Information	Consistency Check for Run-Id [dec] is completed. Check 'show consistency-checker run-id [dec]'.	Informational syslog indicating that consistency check has completed.	iosxe-fwdmgr	"show consistency-checker run-id "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IOSXE_CIDB3-ALLOC	3-Error	Failed to allocate message for CIDB message	When attempting to program the dataplane with a CIDB object there was not enough memory to allocate the message.	iosxe-cidb	LOG_STD_ACTION
IOSXE_CIDB3MESSAGE	3-Error	Failed to send message for CIDB object	When the cidb object was being prepared to be sent to the data plane there was an error.	iosxe-cidb	LOG_STD_ACTION
<del>IOSXE_CRYPTOWALCON_FAIL</del>	3-Error	Configuration failed	An error occurred when the crypto throughput configuration was attempted.	iosxe-csl	-
<del>IOSXE_CRYPTOWALCON_FAIL</del>	3-Error	The EULA has to be accepted prior to crypto throughput configuration.	Users need to accept EULA to activate the license	iosxe-csl	"Accept EULA for crypto throughput license"
<del>IOSXE_CRYPTOWALCON_FAIL</del>	3-Error	No valid license found for the configured crypto throughput level: [chars] kbps	The boot up crypto throughput has been set to non-default level without having the valid license.	iosxe-csl	"Install valid crypto throughput license"
IOSXE_CRYPTOWALCON_LEVEL	6-Information	Crypto Throughput level has been set to [chars] bps	Crypto Throughput level has been set to a number	iosxe-csl	-
IOSXE_CRYPTOWALCON_RESET	6-Information	Crypto Throughput level has been reset to default [chars] bps	Crypto Throughput level has been reset	iosxe-csl	-
<del>IOSXE_CSL_ERROR_SETTING</del>	3-Error	Error setting default file system [dec]	There is an error happened after calling function ifs_set_default_directory	iosxe-csl	"Check the csl filesystem"
<del>IOSXE_CSL_ERROR_SETTING</del>	3-Error	Error setting default file system [dec]	There is an error happened after calling function ifs_set_default_directory	iosxe-csl	"Check the csl filesystem"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
IOSXE_CXSC3-ACTION	3-Error	Unknown proposition action [dec]	-	-	-
IOSXE_CXSC3-ALLOC	3-Error	Failed to allocate message for proposition	When attempting to program the dataplane with a CXSC proposition object there was no enough memory to allocate the message.	iosxe-cxsc	LOG_STD_ACTION
<del>IOSXE_CXSC3-BADPROPOSITION</del>	3-Error	Proposition obj corrupt	When the proposition was being sent to the data plane the object itself is corrupt.	iosxe-cxsc	LOG_STD_ACTION
<del>IOSXE_CXSC3-BADPROTOPACK</del>	3-Error	Invalid Protocol Pack object	When the Protocol Pack was being sent to the data plane the object's contents were invalid.	iosxe-cxsc	LOG_STD_ACTION
<del>IOSXE_CXSC3-BADSUMMARY</del>	3-Error	Summary obj corrupt	When the proposition summary was being sent to the data plane the object itself is corrupt.	iosxe-cxsc	LOG_STD_ACTION
<del>IOSXE_CXSC3-FILESYSERR</del>	3-Error	FileSystem Error [chars]: Unable to Copy File from	Unable to copy the NBAR Protocol Pack File to the file system for subsequent loading. The system will revert to the previously loaded Protocol Pack.	iosxe-cxsc	LOG_STD_ACTION
<del>IOSXE_CXSC3-INSUFMEM</del>	3-Error	Insufficient memory allocated for IOSXE version String	The input IOSXE Version String has insufficient memory to hold the IOSXE Version.	iosxe-cxsc	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IOSXE_CXSC3MSG</del> IOSXE_CXSC3MSG	3-Error	Insufficient memory allocated for NBAR Engine Version String	The input NBAR Engine Version string has insufficient memory to hold the NBAR Engine Version.	iosxe-cxsc	LOG_STD_ACTION
IOSXE_CXSC3MESSAGE	3-Error	Failed to send message for proposition	When the proposition was being prepared for sending to the data plane there was an error.	iosxe-cxsc	LOG_STD_ACTION
<del>IOSXE_CXSC3PLATFMTYPE</del> IOSXE_CXSC3PLATFMTYPE	3-Error	Unrecognised platform type. CPU ID [dec]	The platform that the cxsc service is being installed on is not recognised. The most likely cause is that this platform is not supported.	iosxe-cxsc	LOG_STD_ACTION
IOSXE_CXSC3RF_INIT	3-Error	Failed to initialize CXSC Redundancy Facility client	An unexpected condition occurred where the CXSC Redundancy Facility failed to initialize.	iosxe-cxsc	LOG_STD_ACTION
<del>IOSXE_CXSC3STATS_ALLOCDN</del> IOSXE_CXSC3STATS_ALLOCDN	3-Error	Unable to allocate space for statistics	During initialization there was failure in the allocation of the memory to gather the statistics. It is non fatal but after seeing this message the CXSC subsystem will not be able to gather statistics.	iosxe-cxsc	LOG_STD_ACTION
<del>IOSXE_CXSC3SILE_ACTIVATE</del> IOSXE_CXSC3SILE_ACTIVATE	3-Error	Failed to activate NBAR classification: [dec]	An unexpected condition occurred where the CXSC NBAR protocol classification failed to activate.	iosxe-cxsc	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CXSCDARUNIPED</del>	4-Warning	Dual RPs are not supported in conjunction with CXSC	CXSC is not supported in a dual RP environment. To resolve this warning either unconfigure CXSC or remove the redundant Route Processor.	iosxe-cxsc	LOG_STD_ACTION
<del>IOSXE_DNSUPDATE_FAILED</del>	3-Error	Update resolv.conf vrf [chars] rc [dec]	An unexpected condition has occurred while updating the DNS file	iosxe-iosd-infra	LOG_STD_ACTION
<del>IOSXE_DNS3VRF_FAILED</del>	3-Error	Operation [chars] on /etc/netns/[chars] rc [dec]	An unexpected condition has occurred while updating the DNS directory	iosxe-iosd-infra	LOG_STD_ACTION
<del>IOSXE_DSP3ENQUEFAIL</del>	3-Error	Enqueue of TDL message failed [chars].	-	-	-
<del>IOSXE_D2CHNADMALE</del>	3-Error	slot=[dec] subslot=[dec] spa_type=0x[hec] lc_type=0x[hec].	ACT2 dev authentication Failed.	DDTS_COMPONENT	LOG_SIDSH_TECH_ACTION
<del>IOSXEPA3AUTONGCGR</del>	3-Error	interface [chars] autoneg state '[chars]' is incompatible with transceiver. Remove '[chars]' to allow the transceiver.	Autoneg Config is not compatible. Remove autoneg config on the interface to allow the transceiver	DDTS_COMPONENT	"Remove the negotiation auto config or "reinsert the previously enabled transceiver."
<del>IOSXEPA3CARDNUMALE</del>	3-Error	Failure in getting card port number from spa port [dec] for EPA in [dec]/[dec]	Failed to get card port number from spa port number	DDTS_COMPONENT	LOG_SIDSH_TECH_ACTION
<del>IOSXEPA3CREATECNFAURE</del>	3-Error	slot=[dec] subslot=[dec] spa_type=0x[hec] lc_type=0x[hec].	Failed to create a SPA object.	DDTS_COMPONENT	LOG_SIDSH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IOSXE_EPA3EPA_PROHBIT	3-Error	Insertion of [chars] not allowed in [dec]/[dec] post-boot	The SPA in the specified subslot cannot be inserted once the system boots up in controller mode	-	LOG_SID_SH_TECH_ACTION
IOSXE_EPA3MAC_FAULT	3-Error	MAC link on [chars] is down due to [chars]	MAC fault reason local/remote fault	DDTS_COMPONENT	LOG_SID_SH_TECH_ACTION
IOSXE_EPA3NULL_ALSP_IR	3-Error	-	Pointer to a als object is NULL.	DDTS_COMPONENT	LOG_SID_SH_TECH_ACTION
IOSXE_EPA3NULL_DEVOBJ_IR	3-Error	-	Pointer to a DEVOBJ object is NULL.	DDTS_COMPONENT	LOG_SID_SH_TECH_ACTION
IOSXE_EPA3NULL_DEVPSEQ_IR	3-Error	-	Pointer to a DEVPSEQ object is NULL.	DDTS_COMPONENT	LOG_SID_SH_TECH_ACTION
IOSXE_EPA3NULL_DS_IR	3-Error	-	Pointer to a ether instance is NULL.	DDTS_COMPONENT	LOG_SID_SH_TECH_ACTION
IOSXE_EPA3NULL_EPA_MODE_IR	3-Error	-	Pointer to an EPA mode subblock is NULL.	DDTS_COMPONENT	LOG_SID_SH_TECH_ACTION
IOSXE_EPA3NULL_EPA_PORT_CFG_IR	3-Error	-	Pointer to an epa port cfg is NULL.	DDTS_COMPONENT	LOG_SID_SH_TECH_ACTION
IOSXE_EPA3NULL_EPA_IR	3-Error	-	Pointer to an EPA object is NULL.	DDTS_COMPONENT	LOG_SID_SH_TECH_ACTION
IOSXE_EPA3NULL_DEVSENSOR_IR	3-Error	-	Pointer to a DEVSENSOR object is NULL.	DDTS_COMPONENT	LOG_SID_SH_TECH_ACTION
IOSXE_EPA3NULL_FPGA_IR	3-Error	-	Pointer to a FPGA object is NULL.	DDTS_COMPONENT	LOG_SID_SH_TECH_ACTION
IOSXE_EPA3NULL_HWIDB_IR	3-Error	-	Pointer to a HWIDB object is NULL.	DDTS_COMPONENT	LOG_SID_SH_TECH_ACTION
IOSXE_EPA3NULL_PORT_IR	3-Error	-	Pointer to a PORT object is NULL.	DDTS_COMPONENT	LOG_SID_SH_TECH_ACTION
IOSXE_EPA3NULL_VFT_IR	3-Error	-	Pointer to a DEVSENSOR object is NULL.	DDTS_COMPONENT	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DSXEPAULVCHMOPR	3-Error	-	Pointer to a VSC PHY INFO object is NULL.	DDTS_COMPONENT	LOG_SIDSH_TECH_ACTION
DSXEPAHYCONGERR	3-Error	[chars] for port [dec] dev_id [dec] reg_addr [hec] rd_val [hec] wr_val [hec] ret_rd [dec] ret_wr [dec]	PHY CFG Read/Write error	DDTS_COMPONENT	LOG_SIDSH_TECH_ACTION
DSXEPAKRNMALE	3-Error	Failure in getting spa port number from card port [dec] for EPA in [dec]/[dec]	Failed to get spa port number from card port number	DDTS_COMPONENT	LOG_SIDSH_TECH_ACTION
DSXEPAUNRPHDXCR	3-Error	Transceiver type [chars] is not allowed on spa [chars] port [dec]	This transceiver is not allowed on the SPA	DDTS_COMPONENT	"Consult the documentation and ensure supported " "transceivers are plugged into the SPA "
DSXEPAVLANSTATERR	3-Error	VLAN Counter got wrong value for OuterVlan [dec] InnerVlan [dec]	VLAN Counter is having value less than previous value	DDTS_COMPONENT	LOG_SIDSH_TECH_ACTION
DSXEPAVCRICBWMACH	3-Error	Transceiver bandwidth is incompatible with Port-channel[dec] allowed bandwidth. Remove \channel-group [dec]\ config for interface [chars] to allow the transceiver	The interface port into which the transceiver is inserted is part of a Port-channel. The Port-channel has member links whose bandwidth doesn't match with the inserted transceiver's bandwidth. Since port-channel cannot allow heterogenous bandwidth links this transceiver is not allowed in to the port.	DDTS_COMPONENT	"Remove the channel-group config for the port where " "transceiver is inserted or insert a transceiver " "whose bandwidth is compatible with the port-channel " "bandwidth"
DSXEPAVXCRPHCHIT	3-Error	Transceiver is prohibited to come online for interface [chars]	XCVR is prohibited on the interface	DDTS_COMPONENT	LOG_SIDSH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSSETHRCHANNKMUFL</del>	3-Error	Failure in changing MTU of interface [chars] to port-channel [chars] MTU	The MTU for the interface mentioned in the message cannot be changed to match the MTU configured on the port channel interface	iosxe-fwdmgr	"Remove the link mentioned in the message from " "the port-channel group"
<del>OSSETHRCHANNKMU</del>	6-Information	Interface [chars] MTU set to port-channel [chars] MTU [dec]	The MTU for the interface mentioned in the message is changed to match the MTU configured on the port channel interface	-	LOG_SID_NO_ACTION
<del>OSSEVCLNBSLDMCHG</del>	2-Critical	Unregistered 9800-CL can only be used in lab. For production usage please register this device in [dec] days. Failure to do so will result in a limited number [dec] of Access Points being allowed post this.	Device is required to be registered with license manager within the licensing period.	ewlc-licensing	LOG_STD_ACTION
<del>OSSEVMNARSVCRSR</del>	3-Error	Failed to register '[chars]' with virtual service manager	An unexpected error has occurred while trying to register this virtual service with the virtual service manager. This has prevented the virtual service from being enabled/disabled.	vman	LOG_STD_ACTION
<del>OSSEVMNRPADENSE</del>	3-Error	Invalid encap length [dec] which is larger than max allowed [dec] bytes	An unexpected condition has occurred which is due to invalid\n adjacency encapsulation size being larger than the maximum value\n allowed.	iosxe-fwdmgr	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IOSXE/MNRP/DEF/QUEAL</del>	3-Error	Unable to send [chars] [chars] message to Forwarding Manager Process	An unexpected condition has occurred which resulted in a configuration \n\ not being sent to the Forwarding Manager Process.	iosxe-fwdmgr	LOG_STD_ACTION
<del>IOSXE/MNRP/DEF/NOADJ</del>	3-Error	Adjacency entry is null	An unexpected condition has occurred which is due to the absence of\n\ an adjacency entry structure.	iosxe-fwdmgr	"show adjacency"
<del>IOSXE/MNRP/DEF/NOHWD</del>	3-Error	FIB Interface [chars] is null	An unexpected condition has occurred which is due to the absence of\n\ a FIB interface structure.	iosxe-fwdmgr	"show adj"
<del>IOSXE/MNRC/CLAS/CLASAE</del>	3-Error	Unable to create class [node]%u	An error occurred when trying to create a class-map.	iosxe-fwdmgr	"show policy-map\n\ [type <policy type> <name>]"
<del>IOSXE/MNRC/CLAS/CLASOV</del>	3-Error	Filter list overflow at type [chars]	An internal error occurred when trying to build class-map information for one of the classes in a policy-map.	iosxe-fwdmgr	"show class-map\n\ [type <class type> <name>]"
<del>IOSXE/MNRC/CLAS/CLASRN</del>	3-Error	Invalid filter relation %u	An internal error occurred when trying to build class-map information for one of the classes in a policy-map.	iosxe-fwdmgr	"show policy-map\n\ [type <policy type> <name>]"
<del>IOSXE/MNRC/CLAS/CLASMT</del>	4-Warning	Nested class [dec] layers cannot exceed 4	When configure nested classes as match statements\n\ the total levels of nested classes cannot exceed 4 layers	iosxe-fwdmgr	"show class-map\n\ [type\n\ <class type> <name>]"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSFIMNRCFCESAKIM</del>	4-Warning	Failed to create class [dec] filter list	An operation to send a filter list to the forwarding \n\ processor for a particular class has failed due to a \n\ resource issue. This may imply that the notification was\n\ dropped.	iosxe-fwdmgr	"show class-map [type\n\ <class type> <name>]"
<del>OSFIMNRCFCANOSIN</del>	4-Warning	Consistency Check for [chars] cannot be completed for all entries. Check 'show consistency-checker run-id [dec] detail'.	Unexpected counts of updates happened during the CCK Run.	iosxe-fwdmgr	"show consistency-checker run-id "
<del>OSFIMNRCFCENQHAL</del>	3-Error	Unable to send [chars] [chars] message to Forwarding Manager Process	An unexpected condition has occurred which resulted in a configuration \n\ not being sent to the Forwarding Manager Process.	iosxe-fwdmgr	LOG_STD_ACTION
<del>OSFIMNRCFCENOB</del>	3-Error	FIB entry is null	An unexpected condition has occurred which is due to the absence of\n\ a FIB entry structure.	iosxe-fwdmgr	"show ip cef"
<del>OSFIMNRCFCENHDB</del>	3-Error	FIB interface is null	An unexpected condition has occurred which is due to the absence of\n\ a FIB interface structure.	iosxe-fwdmgr	"show ip cef"
<del>OSFIMNRCFCENRSCN</del>	3-Error	FIB push counter is null	An unexpected condition has occurred which is due to the absence of\n\ a FIB push counter structure.	iosxe-fwdmgr	"show ip cef"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>IOSXE_MNRCENOBBS</del>	3-Error	FIB SB entry is null	An unexpected condition has occurred which is due to the absence of\n\ a FIB SB entry structure.	iosxe-fwdmgr	"show ip cef"
<del>IOSXE_MNRCENOBCL</del>	3-Error	FIB signal is null	An unexpected condition has occurred which is due to the absence of\n\ a FIB signal structure.	iosxe-fwdmgr	"show ip cef"
<del>IOSXE_MNRCENOBFE</del>	3-Error	FIB table is null	An unexpected condition has occurred which is due to the absence of\n\ a FIB table structure.	iosxe-fwdmgr	"show ip cef"
<del>IOSXE_MNRCENOADR</del>	3-Error	NAT address is null	An unexpected condition has occurred which is due to the absence of\n\ an NAT address.	iosxe-fwdmgr	"show ip alias"
<del>IOSXE_MNRCENOMSA</del>	3-Error	Failed to copy route message to IPC buffer for prefix [chars]/[dec] - [chars]	This operation to build a TDL messages for route download has failed.	iosxe-fwdmgr	LOG_STD_ACTION
<del>IOSXE_MNRCENPCSPFR</del>	4-Warning	Update IP Fragmentation statistics error	An unexpected condition has occurred when updating fragmentation \n\ statistics	iosxe-fwdmgr	LOG_STD_ACTION
<del>IOSXE_MNRCENPCSPRR</del>	4-Warning	Update IP Reassembly statistics error	An unexpected condition has occurred when updating reassembly \n\ statistics	iosxe-fwdmgr	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IOSXE_MNRCHEPASA</del>	4-Warning	Update CEF statistics error	An unexpected condition has occurred when updating cef statistics	iosxe-fwdmgr	LOG_STD_ACTION
<del>IOSXE_MNRCHEPACONF</del>	3-Error	[chars] FMAN EFP support has encountered an EFP accounting error on [chars]: [chars]	An invalid EFP count found during EFP accounting in IOSXE FMAN EFP support.	asr1k-evc	show ethernet service instance detail
<del>IOSXE_MNRCHEPADDLE</del>	3-Error	Failed to delete EFP node with id [dec] in [chars]	An unexpected condition during configuration change	asr1k-evc	LOG_STD_ACTION
<del>IOSXE_MNRCHEPFCM</del>	3-Error	IOSXE FMAN EFP has encountered an unsupported encaps for CFM. Please remove any CFM configuration before applying this encaps.	The encapsulation type is not supported for CFM on IOSXE.	asr1k-ecfm	"Remove any CFM config and reapply encapsulation"
<del>IOSXE_MNRCHEPINVALID</del>	3-Error	Configuration specified invalid value [dec] for [chars]	An unexpected condition in which configuration has accepted an invalid value.	asr1k-evc	LOG_STD_ACTION
<del>IOSXE_MNRCHEPFCMCFG</del>	3-Error	MIP Filtering enable/disable will take into affect only if it is applied before applying any cfm config.	MIP filtering enable/disable should be applied before applying cfm config. Otherwise the command will have no affect on CFM Filtering.	asr1k-ecfm	"show platform software eoam fp active cfm global"
<del>IOSXE_MNRCHEPETHERDPLB</del>	3-Error	Configuration specified invalid value [dec] for [chars]	An non-existent interface is specified for ETHER_DPLB operation.	iosxe-ether-dplb	"show interface"
<del>IOSXE_MNRCHEPETHERDPLB</del>	3-Error	Invalid stats update. type [dec] id [dec]	An invalid stats update is received by ETHER_DPLB.	iosxe-ether-dplb	"show platform software ether_dplb"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>OSMNRIPNSAIDE</del>	3-Error	Failed to update class-map statistics during periodic update	A statistics update for a class-map has failed.	iosxe-fwdmgr	LOG_STD_ACTION
<del>OSMNRIPNADCN</del>	4-Warning	FPM feature action is invalid [dec]	An unexpected condition has occurred which is due to the invalid\n\n action type when trying to bind FPM action with target class group.	iosxe-fwdmgr	LOG_SID_SHCMD_ACTION
<del>OSMNRIPNADENE</del>	4-Warning	Field length type in PHDF file is invalid	An unexpected condition has occurred which is due to the invalid\n\n field length type in PHDF file.	iosxe-fwdmgr	LOG_SID_SHCMD_ACTION
<del>OSMNRIPNADACTE</del>	4-Warning	FPM match type is invalid [dec]	An unexpected condition has occurred which is due to the invalid\n\n FPM match type in one of FPM class-map filter match entry	iosxe-fwdmgr	LOG_SID_SHCMD_ACTION
<del>OSMNRIPQALSYE</del>	4-Warning	IP header compression statistic message received has invalid stats type	When receiving an IP header compression statistic update for an \n\n interface or sub-interface in IOS the statistic type in that \n\n message is invalid.	iosxe-fwdmgr	LOG_SID_SHCMD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IOS_E_MNRP_HCNODB</del>	4-Warning	IOS interface [chars] is not available for an IP header compression	When receiving an IP header compression statistic update for an \n\ interface or sub-interface in IOS one of data structures in IOS\n\ to store those IP header compression statistics is NULL	iosxe-fwdmgr	LOG_SID_SHCMDACI0N
<del>IOS_E_MNRP_HCSASRR</del>	4-Warning	There is error when processing IP header compression statistic message received on IOS	When receiving an IP header compression statistic update for an \n\ interface or sub-interface in IOS an unexpected error occurred	iosxe-fwdmgr	LOG_SID_SHCMDACI0N
<del>IOS_E_MNPL_HLBNALDF</del>	3-Error	Configuration specified invalid value [dec] for [chars]	An non-existent interface is specified for L2FIB operation.	iosxe-l2fib	"show interface"
<del>IOS_E_MNPL_HLBNALDF</del>	3-Error	Invalid stats update. type [dec] id [dec]	An invalid stats update is received by L2FIB.	iosxe-l2fib	"show platform software l2fib"
<del>IOS_E_MNPL_HLBNALDF</del>	3-Error	Update LISP-SFLTR Entry statistics error	An unexpected condition has occurred when updating lisp-sfltr entry statistics	asr1k-lisp	LOG_STD_ACTION
<del>IOS_E_MNPL_HLBNALDF</del>	3-Error	Update LISP-SFLTR Table statistics error	An unexpected condition has occurred when updating lisp-sfltr table statistics	asr1k-lisp	LOG_STD_ACTION
<del>IOS_E_MNRM_MACNADF</del>	3-Error	Configuration specified invalid value [dec] for [chars]	An non-existent interface is specified for MACSEC operation.	iosxe-macsec	"show interface"
<del>IOS_E_MNRM_MACNADF</del>	3-Error	Invalid stats update. type [dec] id [dec]	An invalid stats update is received by MACSEC.	iosxe-macsec	"show platform software macsec"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSM/NRM/CSM/NRE/DF</del>	3-Error	Unknown Multicast AF [dec]	An unexpected condition has occurred due to the download\n\ of an unknown MFIB address family code.	iosxe-fwdmgr	"show mfib"
<del>OSM/NRM/CSM/NRE/DD</del>	3-Error	Failed to remove Multicast ID [dec]	An unexpected condition has occurred due to the failure\n\ to delete an internal identifier that is no longer in use.	iosxe-fwdmgr	"show mfib"
<del>OSM/NRM/CSM/NRE/CP</del>	3-Error	Multicast Capability [chars]:[chars] error [chars]	An unexpected condition has occurred due to the failure to set\n\ a multicast capability for this platform.	iosxe-fwdmgr	"show mfib state cap"
<del>OSM/NRM/CSM/NRE/MS</del>	3-Error	Can't process multicast stats upload from fman. type [dec] id [dec]	An unexpected condition has occurred preventing interpretation\n\ of the stats message from the forwarding manager. This will\n\ prevent the statistics for the affected multicast entries from\n\ being updated.	iosxe-fwdmgr	"show ip mroute count"
<del>OSM/NRM/CSM/NRE/ND</del>	3-Error	No Multicast ID for [node][node][dec] action %i	-	iosxe-fwdmgr	"show ip mroute count"
<del>OSM/NRM/CSM/NRE/DF</del>	3-Error	Failed to update flag count for [chars] due to [chars]	An unexpected condition has occurred due to the failure\n\ to update the interface flag count	iosxe-fwdmgr	"show mfib"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSMNRRCASID</del>	3-Error	Multicast ID management error	An unexpected condition has occurred causing an internal\n\ ID to not be properly handled or disposed of	iosxe-fwdmgr	"show ip mroute count"
<del>OSMNRFDUREAE</del>	5-Notice	Duplicate forwarding object creation obj_handle 0x[hec] type [node] existing obj_id 0x[hec] type %u	An unexpected condition has occurred which results in duplicate\n\ forwarding object creation.	iosxe-fwdmgr	LOG_STD_ACTION
<del>OSMNRFDUREAE</del>	3-Error	Duplicate forwarding object creation obj_handle 0x[hec] type [node] existing obj_id 0x[hec] type %u	An unexpected condition has occurred which results in duplicate\n\ forwarding object creation with different object types.	iosxe-fwdmgr	LOG_STD_ACTION
<del>OSMNRPMADIS</del>	3-Error	NULL	An internal list structure has been detected as invalid.	iosxe-pbr	LOG_SID_CMD_ACTION
<del>OSMNRPMASIDE</del>	3-Error	Routemap [chars] contain unsupported match/set clause ignored	-	-	-
<del>OSMNRPMANUL</del>	3-Error	The route-map structure for [chars] is null	An unexpected condition has occurred which is due to the absence of\n\ a route-map data structure.	iosxe-fwdmgr	"show route-map"
<del>OSMNRPMKOWIN</del>	4-Warning	Unknown client type [dec] received	An unexpected known client type is received for route-map download.	iosxe-fwdmgr	LOG_SID_CMD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSF_MNRPURINADFL</del>	3-Error	Invalid interface handle [node]for interface number=[node] swidb= [hex] name= [chars]	An unexpected condition has occurred which is due to an invalid \n\ interface handle	iosxe-fwdmgr	LOG_STD_ACTION
<del>OSF_MNRPURINOSADB</del>	4-Warning	v4 sub-interface is null	An unexpected condition has occurred which is due to the absence of\n\ a v4 swidb structure.	iosxe-fwdmgr	"show ip interface"
<del>OSF_MNRPURINOSADB</del>	4-Warning	v6 sub-interface is null	An unexpected condition has occurred which is due to the absence of\n\ a v6 swidb structure.	iosxe-fwdmgr	"show ipv6 interface"
<del>OSF_MNRPURINOSASR</del>	4-Warning	Update v4 URPF statistics error	An unexpected condition has occurred when updating v4 URPF statistics	iosxe-fwdmgr	"show ip interface <name>"
<del>OSF_MNRPURINOSASR</del>	4-Warning	Update v6 URPF statistics error	An unexpected condition has occurred when updating v6 URPF statistics	iosxe-fwdmgr	"show ipv6 interface <name>"
<del>OSF_MNRPURINADALE</del>	3-Error	Invalid value for [chars]	An unexpected condition in which an invalid value is get during VPLS configuration.	iosxe-vpls	LOG_STD_ACTION
<del>OSF_MNRPURINOSAFDE</del>	3-Error	Failed to update zone-pair statistics during periodic update \n\ zone [chars] class %u	A statistics update for a zone-pair has failed.	iosxe-fwdmgr	LOG_STD_ACTION
<del>OSF_MNRPURINOSASL</del>	3-Error	Failed to copy epoch TDL message to IPC buffer epoch number [dec]	This operation to build a TDL messages for epoch message has failed.	iosxe-fwdmgr	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSF_IPC_TDL_MSA</del>	3-Error	Failed to copy epoch TDL message to IPC buffer epoch number [dec]	This operation to build a TDL messages for epoch message has failed.	iosxe-fwdmgr	LOG_STD_ACTION
<del>OSF_IPC_QUEUE_ERR</del>	3-Error	Unable to enqueue IPC messages to IOS IPC queue. Message: [chars].	An unexpected condition has occurred while IOS trying to enqueue \n IPC message to IOS IPC queue in order to send the message to \n Forwarding Manager.	iosxe-fwdmgr	LOG_STD_ACTION
<del>OSF_IPC_QUEUE_ERR</del>	3-Error	Unable to enqueue IPC messages to IOS IPC queue. Message: [chars].	An unexpected condition has occurred while IOS trying to enqueue \n IPC message to IOS IPC queue in order to send the message to \n Forwarding Manager.	iosxe-fwdmgr	LOG_STD_ACTION
<del>OSF_IPC_COPY_ERR</del>	3-Error	Unable to copy IPC messages into transport buffer. Message: [chars]	An unexpected condition has occurred while IOS trying to copy \n IPC message to transport buffer in order to send the message \n from IOSd to Forwarding Manager.	iosxe-fwdmgr	LOG_STD_ACTION
<del>OSF_IPC_COPY_ERR</del>	3-Error	Unable to copy IPC messages into transport buffer. Message: [chars]	An unexpected condition has occurred while IOS trying to copy \n IPC message to transport buffer in order to send the message \n from IOSd to Forwarding Manager.	iosxe-fwdmgr	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IOS_E_MNR_PAC</del> IOS_E_MNR_PAC	4-Warning	Unable to dispatch received TDL message '[chars]' from Forwarding Manager. LUID: [chars]	An unexpected condition has occurred while IOS trying to dispatch\n\ the TDL message handler functions for received TDL messages from \n\ Forwarding Manager.	iosxe-fwdmgr	LOG_STD_ACTION
<del>IOS_E_MNR_PAC</del> IOS_E_MNR_PAC	4-Warning	Unable to dispatch received TDL message '[chars]' from Forwarding Manager. LUID: [chars]	An unexpected condition has occurred while IOS trying to dispatch\n\ the TDL message handler functions for received TDL messages from \n\ Forwarding Manager.	iosxe-fwdmgr	LOG_STD_ACTION
<del>IOS_E_MNR_PAC</del> IOS_E_MNR_PAC	4-Warning	TDL messages NULL from IOS.	An unexpected condition has occurred while IOS trying to dispatch\n\ the TDL message handler functions for received TDL messages from \n\ Forwarding Manager.	iosxe-fwdmgr	LOG_STD_ACTION
<del>IOS_E_MNR_PAC</del> IOS_E_MNR_PAC	4-Warning	TDL messages NULL from IOS.	An unexpected condition has occurred while IOS trying to dispatch\n\ the TDL message handler functions for received TDL messages from \n\ Forwarding Manager.	iosxe-fwdmgr	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSFEMANRPMCFERR</del>	4-Warning	Unable to process received IPC messages from Forwarding Manager\n\n error: [chars].	An unexpected condition has occurred while IOS trying to process\n\n received IPC message from Forwarding Manager.	iosxe-fwdmgr	LOG_STD_ACTION
<del>OSFEMANRPMCFERR</del>	4-Warning	Unable to process received IPC messages from Forwarding Manager\n\n error: [chars].	An unexpected condition has occurred while IOS trying to process\n\n received IPC message from Forwarding Manager.	iosxe-fwdmgr	LOG_STD_ACTION
<del>OSFEMANRPMCFERR</del>	4-Warning	Unable to process received non-TDL stats message from \ Forwarding Manager\n\n error: [chars] [dec].	-	-	-
<del>OSFEMANRPMCFERR</del>	4-Warning	Unable to process received non-TDL stats message from \ Forwarding Manager\n\n error: [chars] [dec].	-	-	-
<del>OSFEMCCABRASHDUMP</del>	2-Critical	Fatal error calling crashdump error: [dec] [chars]	A fatal condition has occurred causing IOS to crashdump.	iosxe-intfmgr	LOG_STD_ACTION
<del>OSFEMCCABRASHDUMP</del>	3-Error	Unable to dispatch received TDL message name = [chars] from	An unexpected condition has occurred while IOS is trying to dispatch\n\n to the TDL message handler functions for received TDL messages from \n\n Interface Manager.	iosxe-intfmgr	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IOSXEMCCADMCRPACHTUL</del>	3-Error	Received NULL TDL message from IOS	An unexpected condition in which IOSD has received a NULL TDL \n\ message from Interface Manager.	iosxe-intfmgr	LOG_STD_ACTION
<del>IOSXEMCCADMCRERR</del>	3-Error	Unable to process received IPC messages from Interface Manager\n\ error: [chars]	An unexpected condition has occurred while IOS trying to process a\n\ received IPC message from Interface Manager.	iosxe-intfmgr	LOG_STD_ACTION
<del>IOSXEMCCADMCRSAUS</del>	6-Information	Interface Manager Process is [chars]	The current status of Interface Manager Process.	-	LOG_SID_NO_ACTION
<del>IOSXEMSPADBENCSE</del>	3-Error	Invalid encap length [dec] which is larger than max allowed [dec] bytes	An unexpected condition has occurred which is due to invalid\n\ adjacency encapsulation size being larger than the maximum value\n\ allowed.	iosxe-fwdmgr	LOG_STD_ACTION
<del>IOSXEMSPADBENQHAL</del>	3-Error	Unable to send [chars] [chars] message to Forwarding Manager Process	An unexpected condition has occurred which resulted in a configuration \n\ not being sent to the Forwarding Manager Process.	iosxe-fwdmgr	LOG_STD_ACTION
<del>IOSXEMSPADBENQADI</del>	3-Error	Adjacency entry is null	An unexpected condition has occurred which is due to the absence of\n\ an adjacency entry structure.	iosxe-fwdmgr	"show adjacency"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSNMPADNOBHWB</del>	3-Error	FIB Interface [chars] is null	An unexpected condition has occurred which is due to the absence of\n a FIB interface structure.	iosxe-fwdmgr	"show adj"
<del>OSNRAVNOPNKEAME</del>	2-Critical	Keepalive not received for [node]seconds resetting	Punt Inject keepalive message was not received	mcp-infrastructure	LOG_STD_ACTION
<del>OSNRAVUPNINKDOWN</del>	2-Critical	Punt Inject link went down resetting	Punt Inject link went down	mcp-infrastructure	LOG_STD_ACTION
<del>OSNRAVPSSENFIED</del>	3-Error	An attempt to open [chars] with handle number [dec] has failed [dec]	Application session between processes failed to establish.	iosxe-iosd-fastpath	LOG_STD_ACTION
<del>OSNRAVBCBCHFRE</del>	3-Error	An IOS buffer is freed into GLIBC buffer pool buffer blockmagic 0x[hec] flags 0x[hec]	An IOS buffer is freed into GLIBC buffer pool.	iosxe-iosd-infra	LOG_STD_ACTION
<del>OSNRAVCMCAICUAL</del>	3-Error	Allocating [dec] byte for IPC [chars] msg failed: out of memory	system is out of memory	iosxe-iosd-infra	LOG_STD_ACTION
<del>OSNRAVCMKCAHER</del>	3-Error	BSO message query cache update error - [chars]	BSO message query cache update error	iosxe-iosd-infra	LOG_STD_ACTION
<del>OSNRAVCMCHNECTHER</del>	3-Error	BSO message header length [node]is incorrect	BSO message header length is incorrect	iosxe-iosd-infra	LOG_STD_ACTION
<del>OSNRAVCMHDVCTHER</del>	3-Error	BSO message header msgtype [node]is incorrect	BSO message header msgtype is incorrect	iosxe-iosd-infra	LOG_STD_ACTION
<del>OSNRAVCMUMASAIR</del>	3-Error	BSO message unmarshalling has failed	BSO message unmarshalling has failed	iosxe-iosd-infra	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IOSXE_NRA3CONSOLEDBGDRP</del>	3-Error	System dropped [dec] bytes of console debug messages.\n	Debugging messages are being generated faster than they can be displayed on the console. The messages can not be guaranteed to be seen so this message replaces the lost messages.	-	"Consider using conditional debugging or turning off console logging."
<del>IOSXE_NRA3CYANAPIERR</del>	3-Error	Failed to retrieve platform dependent value of [chars] err=[dec]	CYAN API function failed	polaris-plat-abs	LOG_STD_ACTION
<del>IOSXE_NRA3CPUINTRR</del>	3-Error	Interrupt processing of Punt received packets over socket failed to get a packet buffer for len [dec]	Failed to get a packet buffer from the specified pool.	iosxe-iosd-infra	LOG_STD_ACTION
<del>IOSXE_NRA3IDBCREATEERR</del>	3-Error	Failed to create IDBInterface Descriptor Block for Punt/Inject	Creating an idb corresponding to an interface failed.	iosxe-iosd-infra	LOG_STD_ACTION
<del>IOSXE_NRA3IDBINTERR</del>	3-Error	Failed to initialize IDBInterface Descriptor Block for Punt/Inject	Hit error when we initialize idb.	iosxe-iosd-infra	LOG_STD_ACTION
<del>IOSXE_NRA3SDIISRCIAL</del>	3-Error	Unable to set [chars] as a default file system.\n	IOSXE's platform dependent code failed to register the default file system.	iosxe-iosd-fastpath	LOG_STD_ACTION
<del>IOSXE_NRA3SEXINKADIAL</del>	3-Error	Could not add filesystem [chars] to IFS links	Attempt to add filesystem root to allow for links failed	iosxe-iosd-fastpath	LOG_STD_ACTION
<del>IOSXE_NRA3SNITHDENIAL</del>	3-Error	IOSXE shim layer initialization failed: Can not create receiving queues	IOSXE IOS shim layer initialization of hidden path watch failed	iosxe-iosd-fastpath	LOG_STD_ACTION
<del>IOSXE_NRA3SUDVHMOEAL</del>	3-Error	Could not remove udev device [chars]	Attempt to remove udev device failed	iosxe-iosd-fastpath	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSNENRANCINMDEINDEINCFIR</del>	3-Error	Can't allot space needed for embedded inject hdr size [node]exceeds limit	Can't allot space needed for embedded inject header exceeds pak header space	iosxe-iosd-fastpath	LOG_STD_ACTION
<del>OSNENRANCINHAUCUESIR</del>	3-Error	ESS segment not found type [dec] hdl 0x[node]	Packets to be injected to an unsupported ESS segment	iosxe-iosd-fastpath	LOG_STD_ACTION
<del>OSNENRANCINCBCTNFA</del>	3-Error	Inject adjacency subblock init failed	Adj subblock control or register failed	iosxe-iosd-fastpath	LOG_STD_ACTION
<del>OSNENRANCINHREINCFIR</del>	3-Error	Inject hdr size [node]exceeds limit	Inject header length exceeds pak header space	iosxe-iosd-fastpath	LOG_STD_ACTION
<del>OSNENRANCINCHADRIR</del>	3-Error	Transmit packet to the socket failed as packet header length is greater than datagram size. It's an incorrect packet and cannot proceed sending. header length is [dec] datagram size is [dec].	Packet header length is wrong.	iosxe-iosd-infra	LOG_STD_ACTION
<del>OSNENRANCINCOUPIIR</del>	3-Error	Output intf is NULL [chars]	Output intf is required to proceed else skip the feautre	iosxe-iosd-fastpath	LOG_STD_ACTION
<del>OSNENRANCINWADRIRMG</del>	3-Error	Error message type [dec] not defined	Error message type used is not defined in IOSXE infrastruction	iosxe-iosd-fastpath	LOG_STD_ACTION
<del>OSNENRANCINADRUNIMEX</del>	3-Error	Thread runtime index [dec] is not valid	Export the thread's running time failed.	iosxe-iosd-fastpath	LOG_STD_ACTION
<del>OSNENRANCINLIINUMGIR</del>	3-Error	LIIN error - [chars] [chars] [dec]	LIIN in Tunnel mode experiencing error	iosxe-iosd-infra	LOG_STD_ACTION
<del>OSNENRANCINMALLOCFASTIR</del>	3-Error	Failed to allocate memory for Punt/Inject socket instance	malloc_fast failed to allocate memory.	iosxe-iosd-infra	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CSNRA</del> <del>CRNP</del> <del>PF</del> <del>HR</del>	3-Error	Initializing the ipc control for the puntpath fd failed	Initializing the ipc control for the puntpath fd failed	iosxe-iosd-infra	LOG_STD_ACTION
<del>CSNRA</del> <del>MR</del> <del>KT</del> <del>UN</del> <del>HR</del>	3-Error	[chars]	Meraki Tunnel interface hit error	polaris-aurora	LOG_STD_ACTION
<del>CSNRA</del> <del>ROK</del> <del>RAW</del> <del>NI</del> <del>HR</del>	3-Error	Punt/Inject socket initialization failed	PI Socket Raw initialization failed.	iosxe-iosd-infra	LOG_STD_ACTION
<del>CSNRA</del> <del>ROK</del> <del>RAW</del> <del>NI</del> <del>HR</del>	3-Error	Punt/Inject socket pre-initializationIDB creation failed	PI Socket Raw pre-initialization failed.	iosxe-iosd-infra	LOG_STD_ACTION
<del>CSNRA</del> <del>PT</del> <del>TUN</del> <del>NI</del> <del>HR</del>	3-Error	Punt/Inject TUN initialization - [chars] failed	PI TUN initialization failed.	picasso-infra	LOG_STD_ACTION
<del>CSNRA</del> <del>PN</del> <del>AD</del> <del>NS</del> <del>HR</del>	3-Error	Punted address resolution packet with unknown encap [chars]	Punted packet for ARP/ND with encap not supported	iosxe-iosd-fastpath	LOG_STD_ACTION
<del>CSNRA</del> <del>PN</del> <del>AD</del> <del>NS</del> <del>HR</del>	3-Error	Punted address resolution packet linktype [chars] adj-id [dec] is with linktype [chars]\n	CPP needs to punt incomplete adjacency for resolution by specifying the adjacency-id but the included adjacency-id does not match the incomplete adjacency this packet triggered.	iosxe-iosd-fastpath	LOG_STD_ACTION
<del>CSNRA</del> <del>PN</del> <del>AD</del> <del>NS</del> <del>HR</del>	3-Error	Failed to allocate a csb	Can't allocate a csb when generating punt err log	mcp-infrastructure	LOG_STD_ACTION
<del>CSNRA</del> <del>PN</del> <del>AD</del> <del>NS</del> <del>HR</del>	3-Error	Failed to allocate a tty	Can't allocate a TTY when generating punt err log	mcp-infrastructure	LOG_STD_ACTION
<del>CSNRA</del> <del>PN</del> <del>AD</del> <del>NS</del> <del>HR</del>	3-Error	Failed to open file: [chars]	Failed to open file when generating punt err log	mcp-infrastructure	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSNENRASHMNOBRASND</del>	3-Error	Failed to parse command: [chars]	Failed to parse a command when generating punt err log	mcp-infrastructure	LOG_STD_ACTION
<del>OSNENRASHMNOBRVCE</del>	3-Error	Write to file Id [dec] failed [dec] bytes expected [dec] bytes	Write to file failed when generating punt err log	mcp-infrastructure	LOG_STD_ACTION
<del>OSNENRASHMNOBRCR</del>	3-Error	Punt service [chars] create failed	Punt service process can not be created	iosxe-iosd-fastpath	LOG_STD_ACTION
<del>OSNENRASHMNOBTKOW</del>	3-Error	Punted packet with unknown service type %u	Punted pak with an unsupported service type	iosxe-iosd-fastpath	LOG_STD_ACTION
<del>OSNENRASHMNOBSAFL</del>	3-Error	Unable to save reload information: [dec]: [chars].\n	IOSXE's platform dependent code failed to save the reload information.	iosxe-iosd-fastpath	LOG_STD_ACTION
<del>OSNENRASHMNOBTFNLA</del>	3-Error	IOSXE shim layer initialization dispatch path init failed.	IOSXE IOS shim layer initialization of TDL disatch path	iosxe-iosd-fastpath	LOG_STD_ACTION
<del>OSNENRASHMNOBTFMFA</del>	3-Error	IOSXE shim layer initialization failed: Memory initialization failed.	IOSXE IOS shim layer initialization of memory failed	iosxe-iosd-fastpath	LOG_STD_ACTION
<del>OSNENRASHMNOBTRCAL</del>	3-Error	IOSXE shim layer initialization failed: Dispatch process creation failed	IOSXE IOS shim layer initialization creating dispatch process failed	iosxe-iosd-fastpath	LOG_STD_ACTION
<del>OSNENRASHMNOBTDLFA</del>	3-Error	IOSXE shim layer initialization TDL Lib [chars] failed.	IOSXE IOS shim layer initialization of TDL library	iosxe-iosd-fastpath	LOG_STD_ACTION
<del>OSNENRASHMNOBQASLA</del>	3-Error	IOSXE shim layer initialization failed: Can not create receiving chasfs watched queue	IOSXE IOS shim layer initialization of watched queue failed	iosxe-chassismgr	LOG_STD_ACTION
<del>OSNENRASHMNOBQWFL</del>	3-Error	IOSXE shim layer initialization failed: Can not create receiving queues	IOSXE IOS shim layer initialization of watched queue failed	iosxe-iosd-fastpath	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>OSNRSMIPCOSD</del>	3-Error	msg handler returned FALSE for IPC msg for fd [dec] seq_num [dec] service [chars]	-	-	LOG_STD_ACTION
<del>OSNRSMIPCCHD</del>	3-Error	IOSXE shim layer [chars] process message without IPC dispatch handler.	IOSXE IOS shim layer has no ipc dispatch handler set	iosxe-iosd-fastpath	LOG_STD_ACTION
<del>OSNRSMIPMGCHD</del>	3-Error	IOSXE shim layer without IPC handler for fd [dec] seqnum [dec].	IOSXE IOS shim layer cannot find ipc handler	iosxe-iosd-fastpath	LOG_STD_ACTION
<del>OSNRSMIPFRRCHR</del>	3-Error	Static Nexthop IPFRR [chars] create failed	SN IPFRR process can not be created	iosxe-iosd-fastpath	LOG_STD_ACTION
<del>OSNRSMIPKTHCHR</del>	3-Error	Interrupt processing of Punt received packets over socket failed as peek of packet returned error: [chars]	Peek at incoming message hit error	iosxe-iosd-infra	LOG_STD_ACTION
<del>OSNRSMIPKRCVHR</del>	3-Error	Interrupt processing of Punt received packets over socket failed as receive packet hit error: [chars]	Hit error when receives packet from a socket.	iosxe-iosd-infra	LOG_STD_ACTION
<del>OSNRSMIPKSENDHR</del>	3-Error	Transmit packet to the socket hit error: [chars]	Transmit a packet to another socket hit error.	iosxe-iosd-infra	LOG_STD_ACTION
<del>OSNRSMIPKORCHRA</del>	3-Error	IOSXE SWIFT Orchestrator process creation failed	The SWIFT Orchestrator process could not be created	iosxe-iosd-infra	LOG_STD_ACTION
<del>OSNRSMIPKUNHCHR</del>	3-Error	TLS tunnel to host interface hit error: [chars]	TLS tunnel to host interface hit error	picasso-infra	LOG_STD_ACTION
<del>OSNRSMIPKUNHCHR</del>	3-Error	[chars]	TLS client daemon interface hit error	tlscd-infra	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSNENRA3IUNRCVERR</del>	3-Error	Interrupt processing of Punt received packets over TUN interface failed as read hit error: [chars]	Hit error when receives packet from TUN.	picasso-infra	LOG_STD_ACTION
<del>OSNENRA3IUNSENDER</del>	3-Error	Transmit packet to the TUN interface hit error: [chars]	Transmit packet to the TUN interface hit error.	picasso-infra	LOG_STD_ACTION
<del>OSNENRA3IUNPAGEERR</del>	3-Error	VM guarded page operation failed address 0x[hec] [chars]	VM guarded page avl tree operation error	iosxe-iosd-fastpath	LOG_STD_ACTION
<del>OSNENRA3IUNCFERR</del>	3-Error	Control fd open failed for VRF [chars] with error: [chars]	Control fd open failed for a specified VRF	picasso-infra	LOG_STD_ACTION
<del>OSNENRA3IUNBSOERR</del>	4-Warning	BSO message RIB watch start error	BSO message RIB watch start error	iosxe-p-punject	LOG_STD_ACTION
<del>OSNENRA3IUNPACKERR</del>	4-Warning	pak with linktype [chars] gets into non-ip tunnel	IP/IPv6/MPLS packet should to go through GRE tunnel for non-IP payload	iosxe-iosd-fastpath	LOG_STD_ACTION
<del>OSNENRA3IUNKEEPM</del>	4-Warning	Keepalive not received for [node]seconds	Punt Inject keepalive message was not received	mcp-infrastructure	LOG_STD_ACTION
<del>OSNENRA3IUNFILEERR</del>	4-Warning	Failed to close file with descriptor: [dec]	Closing of file failed when generating punt err log	mcp-infrastructure	LOG_STD_ACTION
<del>OSNENRA3IUNFILEM</del>	4-Warning	Failed to get file name: [chars]	Punt keepalive log error seen	mcp-infrastructure	LOG_STD_ACTION
<del>OSNENRA3IUNFILEP</del>	4-Warning	Failed to get process id	Can't get identifier of the process generating punt err log	mcp-infrastructure	LOG_STD_ACTION
<del>OSNENRA3IUNFILED</del>	4-Warning	Invalid file descriptor: [dec]	Invalid file descriptor was found when generating punt err log	mcp-infrastructure	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CSNENRPAFCOENARM</del>	4-Warning	Invalid parameter: [chars]	Invalid parameter was passed when generating punt err log	mcp-infrastructure	LOG_STD_ACTION
<del>CSNENRPAFCOENRPO</del>	4-Warning	Invalid proc id [dec] expected [dec]	Invalid process trying to generate punt err log	mcp-infrastructure	LOG_STD_ACTION
<del>CSNENRNSCNEEQLE</del>	5-Notice	Punted pak can't be enqueued for service	Punted pak enqueue failed	iosxe-iosd-fastpath	LOG_STD_ACTION
<del>CSNENRNSCNMDMRT</del>	5-Notice	Invalid IPv4 options packet punted to RP	Invalid IPv4 options packet dropped in RP	iosxe-iosd-fastpath	LOG_STD_ACTION
<del>CSNENRAGUXIFDRQIST</del>	6-Information	Too many outstanding requests for file system access	Resource temporarily unavailable	iosxe-iosd-fastpath	LOG_STD_ACTION
<del>CSNENRAGPSSCKKSHL</del>	6-Information	Failed to set Chasfs property on system time change	Unable to set chasfs property on system time change	iosxe-chassismgr	LOG_STD_ACTION
<del>CSNENRACONSOLEACME</del>	6-Information	[chars]	Indicates that the current instance of IOS is assuming active control of the console. This is informational.	-	LOG_SID_NO_ACTION
<del>CSNENRAGDMRCKKSHL</del>	6-Information	Failed to set Hardware clock on system time change	Unable to set Hardware clock on system time change	iosxe-chassismgr	LOG_STD_ACTION
<del>CSNENRABRAKUNFNO</del>	6-Information	[chars]	Some info from Meraki Tunnel interface	polaris-aurora	LOG_STD_ACTION
<del>CSNENRBLAFCMRHOD</del>	6-Information	[chars]	Indicates that the current instance of IOS is being reset by the platform code. This is part of a normal reset sequence and the message is informational.	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSXENRACQAFICENHCG</del>	6-Information	IOS shim client '[chars]' has taken [node] msec runtime: [node] msec to process	The specified IOSXE IOS shim client has taken too long to process a received IPC or chasfs message	iosxe-iosd-fastpath	LOG_STD_ACTION
<del>OSXENRASHMPCFNO</del>	6-Information	IOS shim layer process IPC msg for fd [dec] seq_num [dec] ipc_status [dec]	-	-	LOG_STD_ACTION
<del>OSXENRAGEOSLICTHR</del>	6-Information	Inbound message or packet select error [chars].	Socket select operation error in threads	iosxe-iosd-fastpath	LOG_STD_ACTION
<del>OSXENRAGILSCDFNO</del>	6-Information	[chars]	Some info from TLS client daemon interface	tlscd-infra	LOG_STD_ACTION
<del>OSXENRANRMAICHOE</del>	2-Critical	[chars]: Policy Mgr Bay DB malloc failed for [dec]/[dec]	Memory allocation for SPA/EPA failed	asr1k-smart-lic	LOG_STD_ACTION
<del>OSXENRANRACDENIL</del>	2-Critical	[chars]: Configuration is unavailable	License Configuration is undefined for this platform.	asr1k-smart-lic	LOG_STD_ACTION
<del>OSXENRANRACDENIL</del>	2-Critical	[chars]: Feature Configuration is unavailable	Feature Configuration is undefined for this platform.	asr1k-smart-lic	LOG_STD_ACTION
<del>OSXENRANRMAICHOE</del>	2-Critical	[chars]: Policy Mgr Feature Registration struct malloc failed	Memory allocation for Feature Registration Struct failed	asr1k-smart-lic	LOG_STD_ACTION
<del>OSXENRANRACDENIL</del>	2-Critical	[chars]: Feature name is NULL	License feature name string is NULL	asr1k-smart-lic	LOG_STD_ACTION
<del>OSXENRANRMAICHOE</del>	2-Critical	[chars]: Policy Mgr IF DB malloc failed for [dec]/[dec]	Memory allocation for SPA/EPA interfaces failed	asr1k-smart-lic	LOG_STD_ACTION
<del>OSXENRANRMAICHOE</del>	2-Critical	[chars]: Failed to register [chars] license feature result = [hex]	License Registration failed	asr1k-smart-lic	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CSCHESPTM\NCRHREHD</del>	2-Critical	[chars]: [dec]/[dec]: Lic release failed idx:[dec] feature=[chars] lic_cnt=[dec]	License Release failed	asr1k-smart-lic	LOG_STD_ACTION
<del>CSCHESPTM\NCRHREHA</del>	2-Critical	[chars]: [dec]/[dec]: Lic request failed	License Release failed	asr1k-smart-lic	LOG_STD_ACTION
<del>CSCHESPTM\NCRHREHD</del>	2-Critical	[chars]: [dec]/[dec]: Lic request failed idx:[dec] feature=[chars] lic_cnt=[dec]	License Request failed	asr1k-smart-lic	LOG_STD_ACTION
<del>CSCHESPTM\NCRHREHA</del>	2-Critical	[chars]: [dec]/[dec]: Lic request failed	License Request failed	asr1k-smart-lic	LOG_STD_ACTION
<del>CSCHESPTM\NCRHREMC</del>	4-Warning	[chars]: Disabling MACsec configuration due to insufficient license	Disabling MACsec configuration from port due to insufficient MACsec license	asr1k-port-lic	"Purchase/Install MACsec license"
<del>CSCHESPTM\NCRHREHC</del>	4-Warning	[node][node][node] Insufficient [chars] license skipping license request assuming customer has honor license	Permanent/Evaluation licenses have exhausted skipping license request assuming customer has purchased license	DDTS_COMPONENT	"Nothing the system is working properly"
<del>CSCHESPTM\NCRHRESC</del>	6-Information	[node][node][node] License release is successful for [chars] feature	License release is successful port allowed to go down	DDTS_COMPONENT	"Nothing the system is working properly"
<del>CSCHESPTM\NCRHRESC</del>	6-Information	[node][node][node] License request is successful for [chars] feature	License release is successful port allowed to go down	DDTS_COMPONENT	"Nothing the system is working properly"
<del>CSCHESPTM\NCRHREHA</del>	3-Error	License unregistration not successful for feature [chars]	Unregistration failed as license was not released.	iosxe-csl	"License has to be released before unregistering"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSELMNRBMCDBACH</del>	3-Error	Unable to dispatch received TDL message from lman daemon.	An unexpected condition has occurred while IOS was trying to dispatch a TDL message received from lman daemon.	iosxe-csl	LOG_STD_ACTION
<del>OSELMNRBMCNIAL</del>	3-Error	Failed to initialize required lman resource: [chars]	During the initialization of the resources required by lman a failure occurred. This has prevented lman from being activated.	iosxe-csl	LOG_STD_ACTION
<del>OSELMNRBMCORADN</del>	3-Error	Unable to [chars] the [chars] to license manager i.e. lman daemon. Error: [dec]	An unexpected condition has occurred while IOS was trying to send a TDL message to lman daemon.	iosxe-csl	LOG_STD_ACTION
<del>OSEMCMNRBIAFACHA</del>	3-Error	Management VRF AFI [chars] attach failed	Can not create afi subblock for mgmt vrf	iosxe-iosd-infra	LOG_STD_ACTION
<del>OSEMCMNRBFAFACHA</del>	3-Error	Management VRF attach to mgmt [chars] failed	Can not associate mgmt port to mgmt vrf	iosxe-iosd-infra	LOG_STD_ACTION
<del>OSEMCMNRBFOSCRAFA</del>	3-Error	Management VRF process creation failed [chars]	Can not create IOS process for mgmt port init	iosxe-iosd-infra	LOG_STD_ACTION
<del>OSEMCMNRBGTABIDFA</del>	3-Error	Installing [chars] Management interface tableid 0x[hec] failed	Fail to set mgmt port tableid into Linux kernel	iosxe-iosd-infra	LOG_STD_ACTION
<del>OSEMCMNRBGRCAFA</del>	3-Error	Management VRF creation failed [chars]	Can not create mgmt vrf during system init	iosxe-iosd-infra	LOG_STD_ACTION
<del>OSEMCMNRBFAECSCFO</del>	6-Information	Management vrf [chars] created with ID [dec] ipv4 table-id 0x[hec] ipv6 table-id 0x[hec]	mgmt vrf and ipv4 ipv6 tables created for mgmt port	iosxe-iosd-infra	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSXEMLPDBALOCFL</del>	2-Critical	MLP link db allocation failed	MLP link database error. Memory chunk creation for MLP link database has failed.	iosxe-mlppp	"Check for accurate memory management. " "Perform memory leak checks " "and look for memory corruption causes. " "Execute 'show proc memory' command."
<del>OSXEMLPDBHEIFAL</del>	2-Critical	MLP link db entry delete for link [chars] failed	MLP link database error. Removal of entry from MLP link database has failed.	iosxe-mlppp	"Check for accurate memory management. " "Perform memory leak checks " "look for mamory corruption causes and " "check for correct database management. " "Execute 'show proc memory' command. " "
<del>OSXEMLPDBDSIOYAL</del>	2-Critical	MLP link database destroy failed	MLP link database error. Memory chunk destroy has failed for MLP link database.	iosxe-mlppp	"Check for accurate memory management. " "Perform memory leak checks " "and look for memory corruption causes. " "Execute show proc memory command."
<del>OSXEMLPDBENR/ALOCFL</del>	2-Critical	MLP link db entry allocation for link [chars] failed	MLP link database error. Memory chunk allocation for MLP link database entry has failed.	iosxe-mlppp	"Check for accurate memory management. " "Perform memory leak checks and " "look for memory corruption causes. " "Execute 'show proc memory' command."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSXEMLP2DBNTRFREEAL</del>	2-Critical	MLP link entry free failed	MLP link database error. Memory chunk free of MLP link database entry has failed.	iosxe-mlppp	"Check for accurate memory management. " "Perform memory leak checks " "and look for memory corruption causes. " "Execute 'show proc memory' command."
<del>OSXEMLP2DBNTRFREEAL</del>	2-Critical	MLP link db entry add for interface [chars] failed	MLP link database error. Insertion of a new entry into MLP link database has failed.	iosxe-mlppp	"Check for accurate memory management. " "Perform memory leak checks " "look for memory corruption causes " "verify correct database management. " "Execute 'show proc memory' command."
<del>OSXE_MLP3ENQUEFAIL</del>	3-Error	Unable to send [chars] [chars] message to Forwarding Manager Process	An unexpected condition has occurred which resulted in a configuration \n\ not being sent to the Forwarding Manager Process.	iosxe-fwdmgr	LOG_STD_ACTION
<del>OSXE_MLP4UHSIAISERR</del>	4-Warning	Update MLP statistics error	An unexpected condition has occurred when updating mlp statistics	iosxe-fwdmgr	LOG_STD_ACTION
<del>OSXEMMA1M3ENQUEHAL</del>	3-Error	Enqueue of TDL message failed [chars].	-	-	-
<del>OSXE_MMA3ENQUEHAL</del>	3-Error	Enqueue of TDL message failed [chars].	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IOSXE_OIR3CARDERR</del>	3-Error	An IOS buffer is freed into GLIBC buffer pool buffer blockmagic 0x[hec] flags 0x[hec]	An IOS buffer is freed into GLIBC buffer pool.	iosxe-mock-simulation	LOG_STD_ACTION
<del>IOSXE_OIR3MODULE</del>	3-Error	API call incorrectly made from interrupt level	-	DDTS_COMPONENT	LOG_STD_ACTION
<del>IOSXE_OIR3OIRTWICE</del>	3-Error	Invalid API parameter	An external routine provided by the ASR1000 scheduler was incorrectly called with an invalid NULL pointer.	DDTS_COMPONENT	LOG_STD_ACTION
IOSXE_OIR3CARDERR	3-Error	Could not read state property for [chars] slot [dec]	The OIR facility detected a failure for exceeding the number of retries to find state chasfs property.	-	LOG_SID_NO_ACTION
IOSXE_OIR3MODULE	3-Error	Missing [chars] for [chars]	A hardware or software error occurred.	iosxe-iosd-infra	LOG_SID_SH_TECH_ACTION
IOSXE_OIR3OIRTWICE	3-Error	Subslot [node][node]OIR insertion/removal not paired up: [chars]	An internal OIR-related error occurred for the specified SPA.	iosxe-iosd-infra	LOG_STD_ACTION
<del>IOSXE_OIR3PROCMSG</del>	3-Error	The SPA in subslot [node][node] will be power cycled in [dec] seconds.	The SPA in the specified subslot will be power cycled in the amount of time specified in the error message.	-	LOG_SID_NO_ACTION
IOSXE_OIR3PROCMSG	3-Error	Process msg send failed for process[dec]	Process message send failed.	iosxe-iosd-infra	LOG_STD_ACTION
IOSXE_OIR3QUESCE_FAIL	3-Error	Quiesce failed for subslot [node][node]error = [dec]	The RP failed to contact the SPA during failover. The SPA will be reset.	iosxe-iosd-infra	LOG_SID_NO_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IOSXE_C3SPANFDAILOC_FAIL</del>	3-Error	Failed to allocate interface identifiers for SPA[chars] in slot/bay: [node]%u	Failed to get CC buffer and flow control identifiers for the SPA in the specified subslot. Traffic cannot flow through the SPA under this failure condition. This can happen if the system runs out of available identifiers.	iosxe-spa-infra	"Try to reduce the number of interfaces" "configured in the system either by physically removing the SPAs" "or by changing the system configuration"
IOSXE_OR3SPA_MDR_FAIL	3-Error	Minimal Disruptive Restart process failed for SPA in subslot [node][node]reason [chars].	The SPA in the subslot failed Minimal Disruptive Restart. Minimal Disruptive Restart process is aborted and an attempt will be made to recover the SPA by resetting the SPA hardware.	iosxe-binos-ha	LOG_SID_NO_ACTION
IOSXE_OR3UNQESCE_FAIL	3-Error	Unquiesce failed for subslot [node][node]error = [dec]	The RP failed to unquiesce the SPA in the specified subslot. The SPA will be reset.	iosxe-iosd-infra	LOG_SID_NO_ACTION
IOSXE_OR3CARD_RECONCLE	6-Information	SPA type changed on subslot [node][node]from [node]to %u	The SPA in the specified subslot has been initialized and it has been detected that it is of a different type to the SPA that was previously in this subslot.	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IOSXE_OIR-6-CLEAR_FAKE_SPA	6-Information	Insert Event received for subslot [chars] [chars] FAKE_SPA>NONE	The OIR facility detected the insertion of a SPA from the subslot number specified in the message. SPA insertion happened while standby Supervisor is booting up. This results into config mismatch which software can't handle and this will cause standby to go for reload.	-	LOG_SID_NO_ACTION
IOSXE_OIR-6-INSCARD	6-Information	Card [chars] inserted in [chars]slot [chars]	The OIR facility detected the insertion of a card in the slot number specified in the message.	-	LOG_SID_NO_ACTION
IOSXE_OIR-6-INSSPA	6-Information	SPA inserted in [chars]/%u	The OIR facility detected the insertion of a SPA in the subslot number specified in the message.	-	LOG_SID_NO_ACTION
IOSXE_OIR-6-INSSSFP	6-Information	Smart SFP inserted in port [chars]	The OIR facility detected the insertion of TSoP/VCoP SSFP in the port number specified in the message.	-	LOG_SID_NO_ACTION
IOSXE_OIR-6-OHLINECARD	6-Information	Card [chars] offline in [chars]slot [chars]	The OIR facility detected the state change to offline for the card in the slot number specified in the message.	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IOSXE_OIR-6ONLINECARD	6-Information	Card [chars] online in [chars]slot [chars]	The OIR facility detected the state change to online for the card in the slot number specified in the message.	-	LOG_SID_NO_ACTION
IOSXE_OIR-6REMCARD	6-Information	Card [chars] removed from [chars]slot [chars]	The OIR facility detected the removal of a card from the slot number specified in the message.	-	LOG_SID_NO_ACTION
IOSXE_OIR-6REMSPA	6-Information	SPA removed from [chars]/[node]interfaces disabled	The OIR facility detected the removal of a SPA from the subslot number specified in the message. The interfaces on that processor will be administratively shut down and marked as removed. The routing table will be flushed of any routes through the removed interfaces.	-	LOG_SID_NO_ACTION
IOSXE_OIR-6REMSSFP	6-Information	Smart SFP removed from port [chars]	The OIR facility detected the removal of TSoP/VCoP SSFP in the port number specified in the message.	-	LOG_SID_NO_ACTION
IOSXE_OIR-6OFTRELOADSPA	6-Information	SPA[chars] reloaded on [chars]	The SPA in the specified subslot is reloaded by the command <CmdBold>hw-module subslot<NoCmdBold> <CmdBold>#<NoCmdBold> <CmdBold>#<NoCmdBold>	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IOSXE_OIR-6SOFT_STARTSPA	6-Information	SPA[chars] restarted in [chars]	The SPA in the specified subslot is restarted by the command <CmdBold>hw-module subslot<NoCmdBold> <CmdAg>start<NoCmdAg> <CmdBld>start<NoCmdBld>	-	LOG_SID_NO_ACTION
IOSXE_OIR-6SOFT_STOPSPA	6-Information	SPA[chars] stopped in [chars] interfaces disabled	The SPA in the specified subslot is stopped by the command <CmdBold>hw-module subslot<NoCmdBold> <CmdAg>stop<NoCmdAg> <CmdBld>stop<NoCmdBld> The interfaces on that processor will be administratively shut down and marked as removed. The routing table will be flushed of any routes through the removed interfaces.	-	LOG_SID_NO_ACTION
IOSXE_OIR-6SPARELOAD	6-Information	SPA reloaded on subslot [node]%u	The SPA in the specified subslot is reloaded.	-	LOG_SID_NO_ACTION
IOSXE_OIR-6SYNCSIPA	6-Information	SPA [chars] reloading to come up in [chars] mode	The SPA in the specified subslot is reloaded by the command <CmdBold>hw-module subslot<NoCmdBold> <CmdAg>start<NoCmdAg> <CmdBld>start<NoCmdBld>	-	LOG_SID_NO_ACTION
IOSXE_TEMP-3SHUTDOWN	3-Error	More than one [chars] has failed Leads to shutdown the system	The Temperature sensor reaching maximum threshold value working properly.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IOSXE_PEM3-FANFAIL	3-Error	The fan in [chars]/[dec] is encountering a failure condition	The fan's hardware is reporting that the fan is failing. This is most likely because the hardware detects the fan as spinning below the minimum speed.	-	LOG_STD_ACTION
IOSXE_PEM3-CHASSERR	3-Error	The PEM in [chars] has encountered a system software error.	The PEM's underlying software for storing PEM state is not working properly.	iosxe-chassismgr	LOG_STD_ACTION
IOSXE_PEM3-PEMFAIL	3-Error	The Power Supply in [chars] is switched off or encountering a failure condition.	The PEM hardware has been either switched off or is reporting a failure condition.	iosxe-chassismgr	LOG_STD_ACTION
IOSXE_PEM3-REDALARM	3-Error	Cannot enable power redundancy mode [chars] because the system is in software alarm state caused by previous active power-supply failures while in redundancy	Configuration set by user cannot be accepted as there are previous active power supply failures while in redundancy. Letting redundancy with failed supplies would reduce the total available power	-	"Insert additional power supplies or restore all the previously failed supplies " "in active slots before the system went in Alarm state"
IOSXE_PEM3-NOSTANDBY	3-Error	Cannot activate [chars] configuration. Total power budget of standby power supplies is [dec]W. Standby power must be greater than or equal to the largest power supply capacity [dec]W.	Operating in unprotected mode Should insert at least one ps in standby slots with a capacity greater than or equal to the largest capacity power supply in the system. The configuration will be applied automatically once requirements are met.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IOSXE_PEM-6-RENOVR	3-Error	Cannot enable power redundancy mode [chars] because config would create mode with insufficient [chars] power	Configuration set by user is not valid as power supplies in the active slots do not contain enough power to meet the power requirements	-	"Insert additional power supplies and configure them to be active or " "configure current standby power supplies to active such that " "power requirements are met"
IOSXE_PEM-6-TEMPRAE	3-Error	[chars] transceiver temperature reached threshold value Leads to shutdown of the system	The Temperature sensor reaching maximum threshold value working properly.	-	LOG_STD_ACTION
IOSXE_PEM-6-TEMPRAE	3-Error	Sensor [chars] has reached maximum temperature value Leads to shutdown of the system	The Temperature sensor reaching maximum threshold value working properly.	-	LOG_STD_ACTION
IOSXE_PEM-6-FANOK	6-Information	The fan in [chars]/[dec] is functioning properly	The fan was reporting a failure condition. This message indicates that the fan is no longer reporting a failure	-	LOG_STD_ACTION
IOSXE_PEM-6-INS_FM	6-Information	Fantray in [chars] inserted	The platform detected the insertion of a fantray module in the slot number specified in the message.	-	LOG_SID_NO_ACTION
IOSXE_PEM-6-INS_PS	6-Information	Power Supply [chars] inserted	The platform detected the insertion of a power module in the slot number specified in the message.	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IOSXE_PEM6INSPEM_FM	6-Information	PEM/FM [chars] inserted	The platform detected the insertion of a power/fan module in the slot number specified in the message.	-	LOG_SID_NO_ACTION
IOSXE_PEM6PEMOK	6-Information	The Power Supply in [chars] is functioning properly	The PEM hardware may have been either switched off or reporting a failure condition. This message indicates that the PEM is no longer either switched off or reporting a failure	-	LOG_STD_ACTION
IOSXE_PEM6REM_FM	6-Information	Fantray in [chars] removed	The platform detected the removal of a fantray module in the slot number specified in the message.	-	LOG_SID_NO_ACTION
IOSXE_PEM6REM_PS	6-Information	Power Supply [chars] removed	The platform detected the removal of a power module in the slot number specified in the message.	-	LOG_SID_NO_ACTION
IOSXE_PEM6REMPEM_FM	6-Information	Power Supply/Fantray module [chars] removed	The platform detected the removal of a power/fan module in the slot number specified in the message.	-	LOG_SID_NO_ACTION
<del>IOSXE_PEM6RESRCERR</del>	3-Error	Platform Resource Dynamic Core Allocation Configuration Error [chars]	Error occurred while configuring dynamic core allocation across system components.	iosd-infra	"Check System Core Allocations"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IOSD_INFRA</del>	3-Error	Platform Resource Dynamic Core Allocation Failure	An unexpected error occurred during attempt to dynamically apply a platform resource template configuration. System reboot required.	iosd-infra	"Reboot the system"
<del>IOSD_INFRA</del>	5-Notice	Platform Resource profile [chars] : [chars]	Informational message to indicate the start and completion of dynamically applying platform resource template configuration.	iosd-infra	LOG_STD_ACTION
<del>IOSXE_CSL</del>	3-Error	WDC length can not be determined: [dec]	WDC length was not retrieved properly	iosxe-csl	"Check if WDC is programmed on this device"
<del>IOSXE_CSL</del>	3-Error	WDC returned length: [dec]	WDC length was set to 0 which specifies probably WDC does not exist	iosxe-csl	"Check if WDC is programmed on this device"
<del>IOSXE_CSL</del>	3-Error	WDC TLV could not be read from the Quack device	WDC TLV couldn't be read from the Quack device	iosxe-csl	"Check if WDC is programmed on this device"
<del>IOSXE_MIBS</del>	4-Warning	[chars] Error with process mib message from sub-slot [dec]/[dec]	When processing a process MIB message from the specified subslot the specified error has occurred.	iosxe-mibs	LOG_STD_ACTION
<del>IOSXE_MIBS</del>	4-Warning	Failure in sending process mib information from subslot [dec]/[dec] to RP [chars]	A failure is encountered when sending process MIB statistics from the IOS driver for the subslot specified in the message to RP IOS. This indicates a software failure.	iosxe-mibs	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IOSXE_QFP_LOAD_EXCHD</del>	2-Critical	Slot: [node]QFP:[node]Load [node][node]xceeds the setting threshold [node][node]n 5 secs traffic rate on QFP: Total Input: [node]u pps [node]u.[node]u kpps [node]u bps [node]u.[node]u mbps	QFP Load exceeds setting threshold.	-	"Monitor the traffic load."
<del>IOSXE_QFP_LOAD_RECOMR</del>	2-Critical	Slot: [node]QFP:[node]Load [node][node]recovered. n 5 secs traffic rate on QFP: Total Input: [node]u pps [node]u.[node]u kpps [node]u bps [node]u.[node]u mbps	QFP Load recovered.	-	"No action required normal operation."
<del>IOSXE_RP_ALARM2ESP</del>	2-Critical	[chars] [chars] [chars] [chars] [chars]	No ESP running alarm information	-	LOG_SID_NO_ACTION
<del>IOSXE_RP_ALARM2ESP</del>	2-Critical	[chars] [chars] [chars]: [chars] [chars]	-	-	-
<del>IOSXE_RP_ALARM2PEM</del>	2-Critical	[chars] [chars] [chars] [chars] [chars]	Power Entity Module missing information	-	LOG_SID_NO_ACTION
<del>IOSXE_RP_ALARM2PEM</del>	2-Critical	[chars] [chars] [chars]: [chars] [chars]	-	-	-
<del>IOSXE_RP_ALARM6NFO</del>	6-Information	[chars] [chars] [chars] [chars] [chars]	Alarm assertion or deassertion information.	-	LOG_SID_NO_ACTION
<del>IOSXE_RP_ALARM6NFO</del>	6-Information	[chars] [chars] [chars]: [chars] [chars]	-	-	-
<del>IOSXE_CFG_CFG_ASCII</del>	6-Information	System configuration : ASCII	System is using ASCII config during startup	polaris-mgbl-infra	LOG_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>OSERRNO</del> OSERRNO	6-Information	System configuration : Binary	System is using binary config during startup	polaris-mgbl-infra	LOG_NO_ACTION
<del>OSERRNO</del> OSERRNO	2-Critical	Error initializing IPC queue	An unexpected condition in which IOS could not initialize\n\ a message queue to the PSD.	iosxe-shellmgr	LOG_STD_ACTION
<del>OSERRNO</del> OSERRNO	2-Critical	Can not construct a '[chars]' message for configuration export: [chars]	This error usually indicates either an out of memory condition or a TDL error. If ample memory is available then the the TDL error may indicate a version conflict with respect to configuration.	iosxe-shellmgr	LOG_STD_ACTION
<del>OSERRNO</del> OSERRNO	2-Critical	Error processing TDL message. [dec]	An unexpected condition in which IOS has received a TDL \n\ message which it can not process.	iosxe-shellmgr	LOG_STD_ACTION
<del>OSERRNO</del> OSERRNO	2-Critical	Configuration Notification messaging module initialization failed: Unable to initialize messaging: [chars]	The Configuration Notification subsystem has failed to initialize the infrastructure for messaging with the Pluggable Services Daemon. Notification of configuration to critical modules cannot proceed.	iosxe-shellmgr	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CSRRGNCBOMAEFCOME</del>	3-Error	Primary image is not compatible the system is going to reload as per user request.	Primary image which is set in boot statement is not compatible with system. Primary image incompatible it should prompt the user to see if they wish to proceed. Aborting reload.	esg-chassismgr	LOG_STD_ACTION
<del>CSRRGNCBOMAEFCOND</del>	3-Error	Primary image is not found the system is going to reload as per user request.	Primary image which is set in boot statement either does not exist or not found. Primary image is not found it should prompt the user to see if they wish to proceed. Aborting reload.	asr1k-chassismgr	LOG_STD_ACTION
<del>CSRRGNCBOMAEFCFPM</del>	3-Error	Boot image validate function does not recognize the current platform type. This is likely due to new chassis/platform variant being introduced. The reload operation is not affected however presence of this syslog indicates that esg-chassismgr component owner should investigate and determine root cause.	Boot image validate function does not recognize the current platform type. This is likely due to new chassis/platform variant being introduced. The reload operation is not affected however presence of this syslog indicates that esg-chassismgr component owner should investigate and determine root cause.	esg-chassismgr	LOG_STD_ACTION
<del>CSRRGNCBOMAEFCISF</del>	3-Error	Either the boot variable does not exist or the buffer is too small. Keep it blank.	Boot variable either does not exist or buffer is too small. Not able to set boot variable. Ignoring it. Aborting reload.	asr1k-chassismgr	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>CSRRGNOCMPRESRRC</del>	3-Error	System configuration update could not complete	When a 'reload' operation occurs this chasfs property is read to determine the status of the DB persist/restore/delete operation. This message indicates that the operation failed.	polaris-mgbl-infra	LOG_STD_ACTION
<del>CSRRGNOCMPRESISA</del>	3-Error	Failed to read [chars] property: [dec]	When a 'reload' operation occurs this chasfs property is read to determine the status of the DB persist/restore/delete operation. This message indicates that the read failed.	polaris-mgbl-infra	LOG_STD_ACTION
<del>CSRRGNOCMPRUNAD</del>	3-Error	Unknow FRU location: [chars]	Unknown FRU location	polaris-mgbl-infra	LOG_STD_ACTION
<del>CSRRGNOCMPRUNCND</del>	3-Error	Failed to get local FRU location: [dec]	Unable to get local FRU location	polaris-mgbl-infra	LOG_STD_ACTION
<del>CSRRGNOCMPRUNCFAD</del>	3-Error	System could not delete binary startup-config error: [chars]	Each time that you erase startup-config binary-config is also erased. This message indicates that system failed to erase binary-configuration.	polaris-mgbl-infra	LOG_STD_ACTION
<del>CSRRGNOCMPRUNCFAD</del>	3-Error	System could not generate binary startup-config error: [chars]	Each time that you save running-config to startup-config a binary file is created and the ASCII file is updated. A valid binary configuration file reduces the overall boot time significantly. This message indicates that system failed to generate binary-configuration.	polaris-mgbl-infra	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSRRCNCPNCFRAME</del>	3-Error	System could not apply binary startup-config error: [chars]	During reload system uses binary startup configuration. A valid binary configuration file reduces the overall boot time significantly. This message indicates that system failed to apply binary-configuration.	polaris-mgbl-infra	LOG_STD_ACTION
<del>OSRRCNCPNCFRMD</del>	3-Error	The mcprp_cfg_notify subsystem has seen an encryption type it does\n\n not recognize. [dec]	An unexpected condition has occurred while IOS is trying to process\n\n a username command.	iosxe-shellmgr	LOG_STD_ACTION
<del>OSRRCNCPNCFROR</del>	3-Error	IPC transmit error. [dec]	An unexpected condition in which IOS encountered an error\n\n trying to send a message to another process. [dec]	iosxe-shellmgr	LOG_STD_ACTION
<del>OSRRCNCPNCFRND</del>	3-Error	Can not construct a candidate entry for configuration export	This error usually indicates either an out of memory condition or a TDL error. If ample memory is available then the the TDL error may indicate a version conflict with respect to configuration.	iosxe-shellmgr	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>IOSXRGNBMSGWAR</del>	3-Error	Can not construct an array for configuration export	This error usually indicates either an out of memory condition or a TDL error. If ample memory is available then the the TDL error may indicate a version conflict with respect to configuration.	iosxe-shellmgr	LOG_STD_ACTION
<del>IOSXRGNBMSGHMG</del>	3-Error	Can not construct a replace message for configuration export	This error usually indicates either an out of memory condition or a TDL error. If ample memory is available then the the TDL error may indicate a version conflict with respect to configuration.	iosxe-shellmgr	LOG_STD_ACTION
<del>IOSXRGNBMSGUPMG</del>	3-Error	Can not construct an update message for configuration export	This error usually indicates either an out of memory condition or a TDL error. If ample memory is available then the the TDL error may indicate a version conflict with respect to configuration.	iosxe-shellmgr	LOG_STD_ACTION
<del>IOSXRGNBMSGNULL</del>	3-Error	An unexpected condition in which IOS has received a null\n pointer that it expects to be non-null.	An unexpected condition has occurred while IOS is trying to process\n a username command.	iosxe-shellmgr	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CSRRUCN03WHEMPT</del>	3-Error	Failed to export [chars] notification: [dec]	When a 'write memory' or 'write erase' operation occurs the Configuration Notification subsystem exports this event into the chassis file system. This message indicates that the export failed.	access	LOG_STD_ACTION
<del>CSRRUCN06PNCIPE</del>	6-Information	IOx service not supported.	IOx service is not supported in this platform currently. This may be either due to the feature unavailability or due the current inadequate license level of the system.	iox-caf	-
<del>CSRRUCN06PNCIMG</del>	6-Information	Binary configuration missing.	System is booted with ASCII based startup configuration. Please perform \write mem\ to generate binary configuration. System uses binary-config internally to reduce overall boottime significantly.	polaris-mgbl-infra	-
<del>CSRRUCN03SICNQUE</del>	3-Error	Online diagnostics could not enqueue a diagnostic test response.	The iosxe online diagnostics failed to respond properly to a \n\ request by the system to perform a diagnostic test.	iosxe-chassismgr	LOG_STD_ACTION
<del>CSRRUCN03SICMOT</del>	3-Error	A timeout ocured while waiting for an online diagnostic \n\ test to finish.	The iosxe online diagnostics failed to respond properly to a \n\ request by the system to perform a diagnostic test.	iosxe-chassismgr	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>IOSXDGISMKTDIRR</del>	3-Error	IPC transmit error. [dec]	An unexpected condition in which IOS encountered an error \n\ trying to send a message to another process. [dec]	iosxe-chassismgr	LOG_STD_ACTION
<del>IOSXDGISMKTGNUL</del>	3-Error	An unexpected condition in which IOS has received a null\n\ pointer that it expects to be non-null.	An unexpected condition has occurred while IOS is trying to perform \n\ online diagnostics work.	iosxe-chassismgr	LOG_STD_ACTION
<del>IOSXDGISMKTSDIR</del>	3-Error	A diagnostic test result could not be read properly.	The iosxe online diagnostics failed to respond properly to a \n\ request by the system to perform a diagnostic test.	iosxe-chassismgr	LOG_STD_ACTION
<del>IOSXDGISMKTDIRR</del>	3-Error	Error processing TDL message. [dec]	An unexpected condition in which IOS has received a TDL \n\ message which it can not process.	iosxe-chassismgr	LOG_STD_ACTION
<del>IOSXDGISRNFMSIDA</del>	4-Warning	ERROR_COUNTER_DATA: ID:[dec] IN:[node]PO:[dec] RE:[dec] RM:[dec] DV:[node] EG:[dec] CF:[dec] TF:[dec]	Error Counter Monitoring test has failed on one of the cards of IOSXE Corresponding Data is printed.	iosxe-sch-gold	LOG_STD_ACTION
<del>IOSXDGISRNFMSIDA</del>	4-Warning	ERROR_COUNTER_WARNG Slot [chars] Error counter exceeds threshold system operation continue.	Error Counter Monitoring test has failed on the given card of IOSXE.	iosxe-sch-gold	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IOSRDISSA_GOUTDR</del>	6-Information	Received a test result after IOS had timed out. [[dec]][dec]	When a diagnostic test is performed IOS waits for the result \n\ be returned. If it does not return in a specified period of \n\ IOS times out on that test request and moves on.	iosxe-chassismgr	LOG_STD_ACTION
<del>IOSRDISSA_GOUTDR</del>	6-Information	Unexpected event recieved.	When a diagnostic test is performed IOS waits for the result\n\ be returned. While waiting for the result IOS unexpectedly\n\ received an event it does not recognize and so IOS stopped\n\ waiting for the result. The test continued IOS does not know\n\ what the results are and hence can not report them.	iosxe-chassismgr	LOG_STD_ACTION
<del>IOSRDPIDB_UKSYNC</del>	3-Error	Failed to send [chars] information to peer	-	iosxe-infmgr	LOG_STD_ACTION
IOSXE_RP_DPIDB-3-CF	3-Error	Datapath IDB CF operation failed - [chars]	Failure in some datapath ID CF activity.	iosxe-infmgr	"show interface"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IOSXR_P_DB3</del> DCODE	3-Error	Decode via [chars] of [chars] failed	The active route processor has sent a notification to the standby\n\n to inform of the completion of the bulk synchronization of the DPIDX\n\n configuration. The standby has failed to respond to the active\n\n informing that it received the notification noting the reason for\n\n the failure. The resultant action taken by the standby route\n\n processor is an attempt to resynchronize.	iosxe-infmgr	LOG_STD_ACTION
<del>IOSXR_P_DB3</del> DOWNCALL	3-Error	Unable to download [chars] message to [chars]	An unexpected condition has occurred which resulted in a configuration \n\n not being sent to the reported process.	iosxe-infmgr	LOG_STD_ACTION
<del>IOSXR_P_DB3</del> DNNSMC	3-Error	Failed to process [chars] dynamic state	The incremental synchronization of the DPIDX configuration to the\n\n standby RP has failed to complete successfully. This implies that the\n\n configuration state between the active and standby RP is\n\n inconsistent.	iosxe-infmgr	"show interfaces"
<del>IOSXR_P_DB3</del> HSASALD	3-Error	EFP stats message data get error: [dec] for EFP [node]on [chars]	An unexpected error occurred extracting fields from an EFP stats\n\n message.	iosxe-infmgr	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSXR_P_DBFASINIFY</del>	3-Error	Fast notify failed for [chars]	A fast notify message failed	iosxe-infmgr	"show interface"
<del>OSXR_P_DBFDECFIE</del>	3-Error	Deletion of fast-reroute flow ID with manager failed	An unexpected condition has occurred that deletion of\n fast-reroute flow ID.	iosxe-infmgr	"show interface"
<del>OSXR_P_DBFBADIME</del>	3-Error	Datapath IDB type [dec] is not valid	An unexpected condition has occurred as the type of\n a datapath IDB is not valid.	iosxe-infmgr	"show interface"
<del>OSXR_P_DBFBEXIST</del>	3-Error	Datapath IDB already exists in this mapping entry: [chars]-[dec]	An unexpected condition has occurred that an attempt is made\n to save datapath IDB in a mapping entry filled by another.	iosxe-infmgr	"show interface"
<del>OSXR_P_DBFBONEST</del>	3-Error	Datapath IDB does not exist in this mapping entry: [chars]-[dec]	Datapath IDB lookup points to empty mapping entry.	iosxe-infmgr	"show interface"
<del>OSXR_P_DBFBNOVAL</del>	3-Error	Invalid API call for [chars]	Failure in an internal API	iosxe-infmgr	"show interface"
<del>OSXR_P_DBFALCOAID</del>	3-Error	Datapath IDB index allocation failed: [chars]	An unexpected condition has occurred as all the available of\n datapath IDB indices are used.	iosxe-infmgr	"show interface"
<del>OSXR_P_DBFBARANCE</del>	3-Error	Datapath IDB index [dec] is not in a valid range	An unexpected condition has occurred as the index of\n a datapath IDB is not valid.	iosxe-infmgr	"show interface"
<del>OSXR_P_DBFOLEDAID</del>	3-Error	Deletion of datapath IDB index from the database failed \n [chars] - 0x[hec] rc [dec]	An unexpected condition has occurred that deletion of\n datapath IDB indices failed.	iosxe-infmgr	"show interface"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>IOSR_DPDB_INSERT_FAILED</del>	3-Error	Insertion of datapath IDB index [dec] into database failed	An unexpected condition has occurred that insertion of\n\ datapath IDB indices failed.	iosxe-infmgr	"show interface"
<del>IOSR_DPDB_LOOKUP_FAILED</del>	3-Error	Lookup of datapath IDB index from the database failed [chars]	An unexpected condition has occurred that lookup of\n\ datapath IDB indices failed.	iosxe-infmgr	"show interface"
<del>IOSR_DPDB_MTU_ALLOC_FAILED</del>	3-Error	No hardware resources for [node]byte IP MTU on [chars]	We reached to the threshold of maximum supported unique IP MTU \ on this platform.	-	LOG_SID_NO_ACTION
IOSXE_RP_DPIDB3LIST	3-Error	List [chars] failed for [chars]	List enqueue or removal failed	iosxe-infmgr	"show interface"
<del>IOSR_DPDB_MTU_ALLOC_FAILED</del>	3-Error	No hardware resources for [node]byte MTU on [chars]	We reached to the threshold of maximum supported unique MTU on \ this platform.	-	LOG_SID_NO_ACTION
<del>IOSR_DPDB_HWSUBBLOCK</del>	3-Error	HWIDB [chars] does not have a hardware subblock	An unexpected condition has occurred that no hardware subblock\n\ was previously allocated for a HWIDB.	iosxe-infmgr	"show interface"
<del>IOSR_DPDB_SWSUBBLOCK</del>	3-Error	SWIDB [chars] does not have a software subblock	An unexpected condition has occurred that no software subblock\n\ was previously allocated for a SWIDB.	iosxe-infmgr	"show interface"
<del>IOSR_DPDB_NULLTIMER</del>	3-Error	NULL timer	A timer is NULL	iosxe-infmgr	"show interface"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IOSXE_RP_DHDB3RCHE	3-Error	Message via [chars] is [chars]	The ISSU negotiation with the peer failed to start for either the CF or\n\n IPC transport with the reason specified.	iosxe-infmgr	LOG_STD_ACTION
IOSXE_RP_DPIDB3RF	3-Error	Datapath IDB RF operation failed - [chars]	Failure in some datapath ID RF activity.	iosxe-infmgr	"show interface"
IOSXE_RP_DPIDB3RPC	3-Error	Datapath IDB RPC operation failed - [chars]	An operation pertaining to the ISSU support for DPIDX failed to complete\n\n using either the CF or IPC transport context with the reason\n\n specified	iosxe-infmgr	LOG_STD_ACTION
IOSXE_RP_DPIDB3RANFORM	3-Error	[chars] of [chars] via [chars] failed for dpidx %u	An attempt to either encode or decode a versioned synchronization\n\n message has failed due to an internal error encountered by the ISSU\n\n component.	iosxe-infmgr	LOG_STD_ACTION
IOSXE_RP_DPIDB3MTUADV	5-Notice	[chars] - [chars]	MTU Advisory	-	LOG_SID_NO_ACTION
IOSXE_RP_DHDB3READY	6-Information	[chars] peer not ready discarding [chars]	The synchronization attempt for the message has determined that the\n\n transport has lost communication with its peer. This is a normal\n\n situation which indicates that the standby route-processor is currently\n\n out of service implying a simplex redundancy mode.	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IOSXR_P_DB6</del> RELOAD	6-Information	[chars] reloading [chars]	A synchronization attempt between the active and standby RP peers has\n\n failed with the reason indicated. The standby peer is reloaded in an\n\n attempt to resynchronize when operating in a stateful redundant\n\n mode.	iosxe-infmgr	LOG_STD_ACTION
<del>IOSXR_P_DB6</del> IMEOUT	6-Information	Bulk sync is flow controlled by [chars]	The bulk synchronization of the DPIDX configuration to the standby RP\n\n has encountered a flow control condition which has effected a timeout\n\n awaiting the condition to clear. This will result in a reload of the\n\n standby RP to allow the bulk synchronization to restart.	iosxe-infmgr	LOG_STD_ACTION
<del>IOSXR_WC_NM</del> EWLC_STARTUP	2-Critical	Starting EWLC process [dec]	Sending TLD message to start up all eWLC processes	iosxe-shellmgr	LOG_STD_ACTION
<del>IOSXR_WC_NM</del> ERROR	2-Critical	Error initializing IPC queue	An unexpected condition in which IOS could not initialize\n\n a message queue to the PSD.	iosxe-shellmgr	LOG_STD_ACTION
<del>IOSXR_WC_NM</del> ERROR	2-Critical	Error processing TDL message. [dec]	An unexpected condition in which IOS has received a TDL \n\n message which it can not process.	iosxe-shellmgr	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CSERRWLCMSTARTERR</del>	2-Critical	eWLC startup module initialization failed: Unable to initialize messaging: [chars]	The eWLC startup subsystem has failed to initialize the infrastructure for messaging with the Pluggable Services Daemon. Notification of configuration to critical modules cannot proceed.	iosxe-shellmgr	LOG_STD_ACTION
<del>CSERRHOMESBFCOENUL</del>	3-Error	Unable to utilize the memory buffer provided by the Checkpoint Facility. This [chars] CF client has failed to Bulk Sync.	This error indicates the Checkpoint Facility is having problems recognizing its own buffer layout. If this occurs during Bulk Sync then Bulk Sync will terminate without completing. Otherwise the incremental Sync will fail.	iosxe-binos-ha	LOG_STD_ACTION
<del>CSERRHOMESBFCOENUL</del>	3-Error	The call to add this [chars] CF client to the Checkpoint Facility failed with the error [chars]. This client is unable to proceed and will not be registered.	For some reason the Checkpoint Facility will not register this client. As a result the Standby will never receive synchronized state from this CF client on the Active RP The system is not capable of SSO and HA switchover.	iosxe-binos-ha	LOG_STD_ACTION
<del>CSERRHOMESBFCOENUL</del>	3-Error	The Checkpoint Facility reported the error [chars] while attempting to send a message. Bulk Sync of this [chars] CF client is terminating.	This error indicates the Checkpoint Facility has internal problems related to IPC and cannot perform a non-blocked send operation.	iosxe-binos-ha	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSCHKVBSNCRDIOBE</del>	3-Error	The Checkpoint Facility reported the error [chars] while attempting to send a non-blocked message. The Incremental Sync transaction for this [chars] CF client cannot be sent to the Standby RP.	This error indicates the Checkpoint Facility has internal problems related to IPC.	iosxe-binos-ha	LOG_STD_ACTION
<del>OSRPFHOWDSDIOE</del>	3-Error	Decode via CF of [chars] failed	A message sent via the CF transport failed in its attempt to be decoded on the standby. The resultant action taken by the standby route processor is an attempt to resynchronize.	iosxe-binos-ha	LOG_STD_ACTION
<del>OSCHKVBSNCRDIOBSC</del>	3-Error	Encountered error [chars] while trying to place an [chars] transaction on the Deferred list during Bulk Sync for the [chars] CF client.	Unable to cache a deferred transaction while Bulk Sync is underway. This can adversely impact SSO state on the Standby RP.	iosxe-binos-ha	LOG_STD_ACTION
<del>OSRHOWDSCBHSYC</del>	3-Error	The Checkpoint Facility reported the error [chars] during a request for a buffer length of [dec]. This [chars] CF client has failed to synchronize a transaction to the Standby RP.	This error indicates that the buffer management within the Checkpoint Facility has either run out of buffers or has some other problem. If this occurs during Bulk Sync then Bulk Sync will terminate without completing. Otherwise the incremental Sync will fail.	iosxe-binos-ha	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSRPFLOWDOWN</del>	3-Error	Client reports message CF is [chars]	An attempt to receive and process a versioned negotiation or\n\ synchronization message has failed due to an internal error\n\ being detected by the information received from the CF component.	iosxe-binos-ha	LOG_STD_ACTION
<del>OSRFACILITYADDED</del>	3-Error	The RF facility failed to add this [chars] client reason given is [chars].	An operation pertaining to the ISSU support for SPA MARMOT IDs failed \n\ to complete using the CF transport context with the reason specified	iosxe-binos-ha	LOG_STD_ACTION
<del>OSRIFLOWCONTROL</del>	3-Error	Error code [dec] encountered trying to regenerate interface flow-control identifier. If id [node]resides in slot/subslot/port [node][node][node]	-	-	-
<del>OSRFCLIENTEVENT</del>	3-Error	This [chars] RF client is unable to acquire an event buffer to send an RF peer message the error [chars] was returned.	This indicates the RF facility is unable to provide a message buffer needed to communicate with the RF peer. As a consequence the RF progression may be compromised.	iosxe-binos-ha	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CSHFICWLRPDCENR</del>	3-Error	Id Pool Regeneration encountered error code [dec] cannot switchover.	The background process which performs Flow Control Id Pool regeneration encountered an error. As a consequence the Standby does not have valid Flow Id pools and cannot progress to Active state.	iosxe-binos-ha	LOG_STD_ACTION
<del>CSHFICWLRPDCENR</del>	3-Error	The [chars] RF client Failed to create the Id Pool Regeneration process.	The background process which performs Flow Control Id Pool regeneration failed to start. As a consequence the Standby will never obtain the relevent SSO state to enable HA switchover.	iosxe-binos-ha	LOG_STD_ACTION
<del>CSHFICWLRPDCENR</del>	3-Error	This [chars] RF client Failed to create the Bulk Sync Process.	The background process which performs the RF Bulk Sync failed to be created. As a consequence the Standby will never obtain the relevent SSO state to enable HA switchover.	iosxe-binos-ha	LOG_STD_ACTION
<del>CSHFICWLRPDCENR</del>	3-Error	This [chars] RF client encountered error [chars] when attempting to send a peer message.	This indicates the RF facility could not send a message to the RF peer. As a consequence the RF progression may be compromised.	iosxe-binos-ha	LOG_STD_ACTION
<del>CSHFICWLRPDCENR</del>	3-Error	Error code [dec] encountered trying to regenerate spa [chars] identifier in slot/subslot [node]%u	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSERRHOMSENDARICD</del>	3-Error	Checkpoint Facility Failed to send a [chars] transaction for this [chars] CF client. Reloading the Standby RP.	This indicates the underlying Checkpoint Facility could not deliver a message sent from the active RP to the standby RP. The process will automatically reload the standby RP.	iosxe-binos-ha	LOG_STD_ACTION
<del>OSERRHOMSTRANSOM</del>	3-Error	[chars] of [chars] via CF failed	The ISSU negotiation with the peer failed to start for either the CF or\n IPC transport with the reason specified.	iosxe-binos-ha	LOG_STD_ACTION
<del>OSERRHOMDEHSRMOE</del>	4-Warning	Failed to remove one entry from the Deferred Sync list for the [chars] CF client.	An unexpected condition occurred during list maintenance.	iosxe-binos-ha	LOG_STD_ACTION
<del>OSERRHOMSTRANCORV</del>	6-Information	The Checkpoint Peer is not ready to receive messages. The Incremental Sync transaction for this [chars] CF client will not occur.	This error indicates the Checkpoint Facility has signalled the peer has gone away.	iosxe-binos-ha	LOG_STD_ACTION
<del>OSERRFLOWDRGADY</del>	6-Information	[chars] peer not ready discarding [chars]	The synchronization attempt for the message has determined that the\n transport has lost communication with its peer. This is a normal\n situation which indicates that the standby route-processor is currently\n out of service implying a simplex redundancy mode.	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>OSRM/INT/PROS/ERR/A</del>	3-Error	Management ethernet inventory process creation failed	Can not create IOS process for RP management ethernet inventory updation	bb-intrepid-drv	LOG_STD_ACTION
<del>OSRM/MSG/GRANUL</del>	3-Error	Cannot allocate [chars] TDL message	An unexpected condition in which IOS cannot allocate TDL message for Management ethernet.	iosxe-tdl	LOG_STD_ACTION
<del>OSRM/MSG/INT/ERR</del>	3-Error	Management ethernet interface messaging module initialization failed: Unable to initialize messaging: [chars]	The Management ethernet interface subsystem has failed to initialize the infrastructure for messaging with the Pluggable Services Daemon. Configuration of management ethernet modules cannot proceed.	iosxe-iosd-fastpath	LOG_STD_ACTION
<del>OSRM/INT/PROS/ERR/A</del>	3-Error	Management ethernet statistics process creation failed	Can not create IOS process for RP management ethernet port statistics collection	iosxe-iosd-fastpath	LOG_STD_ACTION
<del>OSRM/BCUN/AC/ERR/A</del>	3-Error	Initial read of backup NVRAM contents failed	This error happens when the contents of the backup NVRAM cannot be read during system initialization. The failure may be due to data corruption of the backup NVRAM contents. The primary nvrn contents will be backed up here again.	iosxe-binos-ha	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IOSRPNV</del> <u>IOSRPNV</u> <del>ACCESS</del> <u>ACCESS</u> <del>FAIL</del>	3-Error	Initial read of NVRAM contents failed	This error happens when the contents of the NVRAM cannot be read during system initialization. The failure may be due to data corruption of the NVRAM contents. The initial configuration dialog will be entered and the configuration must be restored.	iosxe-binos-ha	LOG_STD_ACTION
<del>IOSRONDGM</del> <u>IOSRONDGM</u> <del>MAXCAR</del>	3-Error	Online diagnostics maximum number of cards exceeded	An unexpected condition in which IOS has attempted to \n\ register more hardware cards for diagnostics than it\n\ expects the maximum to be.	iosxe-chassismgr	LOG_STD_ACTION
<del>IOSRONDGM</del> <u>IOSRONDGM</u> <del>CONUL</del>	3-Error	An unexpected condition in which IOS has received a null\n\ pointer that it expects to be non-null.	An unexpected condition has occurred while IOS is trying to perform\n\ online diagnostics work.	iosxe-chassismgr	LOG_STD_ACTION
<del>IOSRONDGM</del> <u>IOSRONDGM</u> <del>TDLERR</del>	3-Error	Error processing TDL message. [dec]	An unexpected condition in which IOS has received a TDL\n\ message which it can not process.	iosxe-chassismgr	LOG_STD_ACTION
<del>IOSRPNV</del> <u>IOSRPNV</u> <del>CRNERR</del>	2-Critical	Error initializing IPC queue	An unexpected condition in which IOS could not initialize\n\ a message queue to the PSD.	iosxe-shellmgr	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IOS_XE_PAE_CFG_DERR</del>	2-Critical	Error processing TDL message. [dec]	An unexpected condition in which IOS has received a TDL \n\ message which it can not process.	iosxe-shellmgr	LOG_STD_ACTION
<del>IOS_XE_PAE_CFG_DERR</del>	2-Critical	PAE startup module initialization failed: Unable to initialize messaging: [chars]	The PAE startup subsystem has failed to initialize the infrastructure for messaging with the Pluggable Services Daemon. Notification of configuration to critical modules cannot proceed.	iosxe-shellmgr	LOG_STD_ACTION
<del>IOS_XE_PAE_CFG_CSSM</del>	5-Notice	PAE CSSM notification [chars]	PAE CSSM general notification.	polaris-pae	LOG_STD_ACTION
<del>IOS_XE_PAE_CFG_STARTUP</del>	6-Information	Product Analytics is [chars]	Indicate whether Product Analytics is enabled	iosxe-shellmgr	LOG_STD_ACTION
<del>IOS_XE_ETH_MSG_HANDLER</del>	0-Emergency	Invalid Ethernet Message handler Function Vector Table for [chars] Module [node]%u	TDL Message handler vector table is not registered for Ethernet Module	DDTS_COMPONENT	LOG_STD_ACTION
<del>IOS_XE_SPA_BAD_IFCOM_MSG</del>	3-Error	Bad ifcom message type=%u	A SPA module passed down a message that the RP software\n\ was not prepared to handle.	DDTS_COMPONENT	LOG_STD_ACTION
<del>IOS_XE_SPA_CFG_UPDATE_FAIL</del>	3-Error	Failed to update connection identifier for interface [chars]	The SPA driver is not able to update the datapath connection identifier for the interface specified in the message. This indicates a software error.	DDTS_COMPONENT	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSXERP3DDXIKUPAL</del>	3-Error	Failed to retrieve datapath identifier for interface [chars]	The SPA driver is not able to retrieve the datapath identifier for the interface specified in the message. This indicates a software error.	DDTS_COMPONENT	LOG_SID_NO_ACTION
IOSXE_RP_SPA3ERROR	3-Error	common_str_empty_str	This message can take many forms. It provides information about a\n\ software error.	DDTS_COMPONENT	LOG_STD_ACTION
<del>IOSXE_RP_SPA3ERROR_NO</del>	3-Error	common_str_empty_str	This message can take many forms. It provides information about a\n\ software error without traceback.	DDTS_COMPONENT	LOG_STD_ACTION
<del>OSXERP3FLOWDAICCPAL</del>	3-Error	Failed to allocate a flow control identifier for interface [chars]	The SPA driver is not able to allocate the datapath flow control identifier for the interface specified in the message. This indicates a software error.	DDTS_COMPONENT	LOG_SID_NO_ACTION
<del>OSXERP3FLOWRELEASEPAL</del>	3-Error	Failed to release a flow control identifier for interface [chars] status = [dec]	The SPA driver is not able to release the datapath flow control identifier for the interface specified in the message. This indicates a software error.	DDTS_COMPONENT	LOG_SID_NO_ACTION
IOSXE_RP_SPA3FOREVER	3-Error	cmd [node]to [chars] slot [node][node]took [node]usecs done [hec]	A CCB command from the RP to a SPA module took longer than expected.	DDTS_COMPONENT	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSXERPSAIFRCGRICAL</del>	3-Error	Failed to record fast reroute configuration on [chars]: [chars]	This message is displayed when a fast reroute configuration is not properly recorded.	DDTS_COMPONENT	LOG_STD_ACTION
<del>OSXERPSAHWDIFLURE</del>	3-Error	Creation: slot [dec] subSlot [dec] port [dec] vc [dec]	Failed to create an interface hwidb.	DDTS_COMPONENT	LOG_SIDSHIIEH_ACTION
<del>OSXERPSAHWDINIAL</del>	3-Error	Failed to initialize data structure for SPA port [dec]/[dec]/[dec]	A SPA driver was not able to properly initialize a data structure mentioned in the message. This indicates a software error.	DDTS_COMPONENT	LOG_STD_NO_ACTION
<del>OSXERPSAICMDNLOWR</del>	3-Error	Process '[chars]' waiting for interface configuration command 0x[hec] to	A process on the RP sent an configuration command to the slot specified in the error message and a different process waited for the result. This could cause incorrect line card configuration states.	DDTS_COMPONENT	LOG_STD_ACTION
<del>OSXERPSAICGIGFORMR</del>	3-Error	to [chars] slot [node][node]took [node]usecs ret_val [node]	A interface config command from the RP to a SPA module took\n\ longer than expected.	DDTS_COMPONENT	LOG_STD_ACTION
<del>OSXERPSAICGOUNQKEY</del>	3-Error	No unique-key generator registered for interface configuration command [node]	The High Availability component for SPA modules is unable to properly synchronize state information for the current configuration.	DDTS_COMPONENT	LOG_STD_ACTION
<del>OSXERPSAIDIRHMSHNDIR</del>	3-Error	Invalid Message Handler for [chars] on [node][node][chars] Module	TDL Message handler is not registered for Ethernet Module	DDTS_COMPONENT	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSXR_P3A3AD_CRI_NM	3-Error	slot=[dec] port=[dec] hwiDbType=0x[hec] max_port_num=[dec] LCtype=0x[hec]	The port number is out of range.	DDTS_COMPONENT	LOG_SIDSH_TECH_ACTION
OSXR_P3A3MD_CRI_NM	3-Error	The IOMD return value for BAY: [dec] CMD [dec]: code:[node] msg:[chars]	Failed to configure in IOMD.	DDTS_COMPONENT	LOG_SIDSH_TECH_ACTION
OSXR_P3A3FCAL_CRI_NM	3-Error	Failed to allocate IPC buffer [chars]	The RP failed to allocate a buffer for communication with a SPA	DDTS_COMPONENT	LOG_STD_ACTION
OSXE_RP_SPA3FCPORT	3-Error	Failed to [chars] IPC port '[chars]' error [chars]	The standby has failed to notify the active that its bulks\n\ synchronization of the SPA TSM has completed. The resultant action\n\ taken by the standby route processor is an attempt to resynchronize.	DDTS_COMPONENT	LOG_STD_ACTION
OSXR_P3A3FC_CRI_NM	3-Error	Failed to open IPC port '[chars]' with error [chars]	The RP failed to open a port for communication with a SPA\n\ module.	DDTS_COMPONENT	LOG_STD_ACTION
OSXR_P3A3FCSEND_CRI_NM	3-Error	Failed to send IPC message [chars]	The RP failed to send a message to a SPA module.	DDTS_COMPONENT	LOG_STD_ACTION
OSXR_P3A3LCREG_CRI_NM	3-Error	[node][node][node] Failed to register license feature [chars] err=[hex]	License registration has been denied by license manager	DDTS_COMPONENT	LOG_STD_ACTION
OSXR_P3A3LCREL_CRI_NM	3-Error	[node][node][node] Failed to release license feature [chars] handle=0x[hec] err=[hex]	License release has been denied by license manager	DDTS_COMPONENT	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSXE_IPSPA10G_QALID</del>	3-Error	[node][node][node] Interface enable not allowed - license request failed err=[hex]	A 10 Gig License is required to enable this port. License request has been denied by license manager	DDTS_COMPONENT	LOG_STD_ACTION
<del>OSXERPA/CHTRADIA</del>	3-Error	All the available [dec] mac filters for [chars] have been consumed. Failed to add [enet] for interface [chars]	The hardware cannot support any more filters.	DDTS_COMPONENT	"The interface configuration should be reworked " "to not cross the limit set by the hardware." "If the error is still seen please " LOGSIDSHTTECHACTION
<del>OSXE_IPSPA3MAX_SPA</del>	3-Error	Power to IPSEC-SPA-2G in [chars] is denied because it has exceeded the number allowed[dec]	The number of IPSEC-SPA-2G in a chassis is limited. This message is displayed when the number of IPSEC-SPA-2G in the chassis has exceeded this limit.	DDTS_COMPONENT	"Use only the number of supported IPSEC-SPA-2G"
<del>OSXERPA/MSG_SPA1CHR</del>	3-Error	sipspa[chars] package is not installed for slot = [dec] and subslot = [dec] SPA bootup failed.	This message is displayed when attempting to bootup a SPA without installing a subpackage required for the same.	-	"Download the sub-package required for the " "affected SPA from the Cisco CCO software download site and install " "the same. This SPA can be booted in sub-package mode only. Please " "refer to the Cisco ASR platform documentation for " "obtaining and installing sub-packages."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSERRSPAMISGPAICGMAN</del>	3-Error	sipspa[chars] package is not installed in standby for slot = [dec] and subslot = [dec].	This message is displayed in standby console when attempting to bootup or restart or reload a WMA SPA without installing a subpackage in the standby RP although the SPA is or will be operational due to prior wma spa package installation in active RP. If switchover takes place the WMA SPA will still be operational. But any subsequent soft or hard oir of the SPA will fail due to missing sub package required to boot up the SPA. Hence it is recommended to complete the wma spa package installation in standby also before switchover or immediatly after switchover.	-	"Download the sub-package required for the " "affected SPA from the Cisco CCO software download site and install " " the same for the standby RP as is done on active RP. Please refer " " to the Cisco ASR platform documentation for obtaining and installing " "sub-packages."
<del>OSERRSPANOHLSINO</del>	3-Error	slot [dec] subSlot [dec] spaType 0x[hec]	Failed to get information about the host linecard.	DDTS_COMPONENT	LOG_SID_SH_TECH_ACTION
<del>OSERRSPANULDASTRUCRE</del>	3-Error	common_str_empty_str	A SPA driver is not able to retrieve the data structure mentioned in the message. This indicates a software error.	DDTS_COMPONENT	LOG_SID_NO_ACTION
<del>OSERRSPANL2HRMGAL</del>	3-Error	slot [dec] subslot [dec]	Failed to send ngio L2 header to iomd.	DDTS_COMPONENT	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSER</del> SPAENDNOMGIAL	3-Error	NGIO Module message send failed for slot [dec] subslot [dec]	Failed to send ngio msg to iomd.	DDTS_COMPONENT	LOG_SIDSH_TECH_ACTION
<del>OSER</del> SPDHLARMPROC	3-Error	[chars] Error has occurred while processing in the sonet alarm-proc	Either free/create of the memory failed in SONET alarm proc	-	-
<del>OSER</del> SPAINFOCINO	3-Error	slot [dec] subSlot [dec] PID [chars]	Failed to get information about the host linecard.	DDTS_COMPONENT	LOG_SIDSH_TECH_ACTION
<del>OSER</del> SPAWRONGIME	3-Error	Mismatched SPA type [dec] in slot [dec]/[dec]. Expected type [dec].	The SPA inserted does not match the currently provisioned SPA type.	-	"Replace wrong SPA with currently provisioned SPA type or type 'no card' " "to allow new card type to be discovered."
<del>OSER</del> SPUNREDCSA	3-Error	Service SPA [hex] in [dec]/[dec] is not supported. SPA bootup failed.	This message is displayed when attempting to bootup any service SPA in router running non K9 image i.e. non-crypto image.	-	"Download the K9 IOS XE sub-packages and the " "required sub-package for the given service SPA from the Cisco CCO " "software download site and install the same. This SPA can be booted " "in sub-package mode only. Please refer to the Cisco ASR platform " "documentation for obtaining and installing sub-packages."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSRSPACNDALICFL</del>	3-Error	Failed to allocate a flow control identifier for VC [dec] under interface [chars]	The SPA driver is not able to allocate the datapath flow control identifier for the VC/interface specified in the message. This indicates a software error.	DDTS_COMPONENT	LOG_STD_NO_ACTION
<del>OSRSPACNDALICFL</del>	3-Error	Failed to allocate a ingress identifier for VC [dec] interface [chars]	The SPA driver is not able to allocate the datapath ingress identifier for the VC/interface specified in the message. This indicates a software error.	DDTS_COMPONENT	LOG_STD_NO_ACTION
<del>OSRSPACRCVIAL</del>	3-Error	Failed to provision interface [chars]	The SPA driver is not able to provision the interface specified in the message. Verify that the SPA hardware is not provisioned above the supported limit. Otherwise this indicates a hardware error.	DDTS_COMPONENT	LOG_STD_NO_ACTION
<del>OSRSPACRPHEDOTS</del>	3-Error	port [dec] hwidb:[chars] epa_name [chars] admin_state [chars] xcvr_type [dec]\n	XCVR prohibited for unsupported optics.	DDTS_COMPONENT	LOG_STD_NO_ACTION
<del>OSRSPACRBACKERR</del>	4-Warning	CCB playback failed for slot [dec].	The High Availability component for SPA modules failed to synchronize some new state information for the specified slot.	DDTS_COMPONENT	"Reload the standby supervisor module to force a fresh bulk " "synchronization. If this error recurs " LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSERSPAICBRCCHRCR</del>	4-Warning	CCB record failed for slot [dec].	The High Availability component for SPA modules failed to record some new state information for the specified slot.	DDTS_COMPONENT	LOG_STD_ACTION
<del>OSERSPAICGMDMOUT</del>	4-Warning	Interface configuration command 0x[hec] to slot [node][node]timed out	The RP sent an configuration command to the slot specified in the error message and received no confirmation for the command.	DDTS_COMPONENT	LOG_STD_ACTION
<del>OSERSPAICGDIISHRCR</del>	4-Warning	For Interface Configuration command [node]default retval list search resulted 0x[hec] for slot [node]%u	The High Availability component for SPA modules failed to synchronize some new state information for the specified slot.	DDTS_COMPONENT	show platform redundancy \ if-config default-retvals
<del>OSERSPAICPLABCKHRCR</del>	4-Warning	Interface Configuration command [node]playback failed for slot [node][node]	The High Availability component for SPA modules failed to synchronize some new state information for the specified slot.	DDTS_COMPONENT	LOG_STD_ACTION
<del>OSERSPAICRCCHRCR</del>	4-Warning	Interface Configuration command [node]record failed for slot [node][node]	The High Availability component for SPA modules failed to record some new state information for the specified slot.	DDTS_COMPONENT	LOG_STD_ACTION
<del>OSERSPANRCOSNCIAL</del>	4-Warning	[chars] incremental running-config sync for [[dec]/[dec]] failed - [chars][dec]	The specified IOSXE incremental running-config sync failed	DDTS_COMPONENT	"Power cycle the redundant supervisor"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSXE_RP_SPA4RPCFAILED	4-Warning	IPC failed to send RPC message to SPA module	The RP failed to send an RPC message via IPC to a SPA module.	DDTS_COMPONENT	LOG_STD_NO_ACTION
OSXR_SPA4LOGPARSEERR	4-Warning	Error parsing logger message: [chars] from subslot [node]%u	The SPA module passed down a logger message that could not be parsed.	DDTS_COMPONENT	LOG_STD_ACTION
OSXR_SPA4LOGTOOLOG	4-Warning	Message too long from slot [node][node] [node]bytes	The SPA module passed down a logger message that is too long for\n\ the RP to handle.	DDTS_COMPONENT	LOG_STD_ACTION
OSXR_SPA4LINKMTUCHANGE	4-Warning	[chars] MTU value is reset to default MTU	MTU value is reset to default MTU	uea-im-tdm	"This is an informational message only. No action is required"
OSXR_SPA4LINKMUSIPIED	4-Warning	If [chars] added as a member MTU change is not allowed	added as a member MTU change is not allowed	uea-im-tdm	"This is an informational message only. No action is required"
OSXE_RP_SPA4SEMAHOG	4-Warning	Process [dec] [chars] hogging [chars]! calling proc [dec] [chars]	-	-	-
OSXR_SPA4ACMDNORESP	4-Warning	[chars]: No response for interface configuration command [node]	A timeout occurred while RP was waiting for a response from line card. This may happen due to line card CPU being too busy to respond to the command.	DDTS_COMPONENT	LOG_STD_NO_ACTION
OSXR_SPA4RESPCMDERR	4-Warning	[chars]: Received response to interface configuration command [chars] with wrong return value [node]	An internal error occurred while configuring the interface. The configuration may not have succeeded.	DDTS_COMPONENT	"Check that the running configuration for the " "interface is correct. If this message is repeatable please " LOG_STD_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IOS_XE_SIP_CDM_MCH</del>	4-Warning	[chars]: Expecting response to interface configuration command [node] but received response to command [node]	An internal synchronization error occurred while configuring the interface. The configuration may not have succeeded.	DDTS_COMPONENT	"Check that the running configuration for the " "interface is correct. If this message occurred on the standby try " "reloading the standby to ensure that its configuration is in sync. " "If this message is repeatable please " LOG_SID_SH_TECH_ACTION
<del>IOS_XE_SIP_CARD_LOAD</del>	6-Information	Module [node]reload due to SPA insert in [node][node]	When inserting a SPA on this carrier card the card is reset.	-	LOG_SID_NO_ACTION
<del>IOS_XE_SIP_CIRL_S_MCH</del>	6-Information	switching controller type from [chars][dec] to [chars][dec] for subslot [node][node]	When IOSXE-SIP40 is inserted in the slot previously occupied by IOSXE-SIP10 or vice-versa the controller type of the card is overwritten to reflect the current SIP.	-	LOG_SID_NO_ACTION
<del>IOS_XE_SIP_MEDIA_FAIL</del>	6-Information	Media Fail over from [chars] to [chars]	Gige Media Failover.	-	"This is inforamtional message Not an error message." "Use 'show interface gig'" "to see the current active media type."
<del>IOS_XE_SIP_MGR_ERR</del>	3-Error	Unable to acquire a BIPC buffer of length [dec] for sending messages.	A message was to be sent by IOS but no BIPC buffer was available. The message to be sent has been discarded and the associated operation failed.	iosxe-shellmgr	LOG_STD_ACTION



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>OSERVTYMGR</del> BIPCR	3-Error	Unable to process received BIPC messages for Vty Management error: [chars]	An unexpected condition has occurred while IOS was trying to process a received BIPC message for Vty Management.	iosxe-shellmgr	LOG_STD_ACTION
<del>OSERVTYMGR</del> BLDRC	3-Error	Error '[dec]' building TDL Vty Management message '[chars]': [chars]	An unexpected condition has occurred while IOS is building a TDL response message for Vty Management	iosxe-shellmgr	LOG_STD_ACTION
<del>OSERVTYMGR</del> DPAH	3-Error	Unable to dispatch received TDL messages for Vty Management	An unexpected condition has occurred while IOS is trying to dispatch to the TDL message handler functions for received TDL messages for Vty Management.	iosxe-shellmgr	LOG_STD_ACTION
<del>OSERVTYMGR</del> EPTNL	3-Error	Received NULL TDL message	An unexpected condition in which IOS has received a NULL TDL message for Vty Management.	iosxe-shellmgr	LOG_STD_ACTION
<del>OSERVTYMGR</del> EQERR	3-Error	Error queuing TDL Vty Management message '[chars]'	An unexpected condition has occurred when IOS attempted to queue a TDL response message for Vty Management	iosxe-shellmgr	LOG_STD_ACTION
<del>OSERVTYMGR</del> HERR	3-Error	Error '[dec]' handling a received TDL message '[chars]' for Vty Management: [chars]	An unexpected condition has occurred while IOS is processing a received Vty Management TDL message	iosxe-shellmgr	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>OSRVTCMEXARDE</del>	3-Error	Unable to update external application data for line '[dec]'	An attempt to update the external application for a line failed unexpectedly. The line update failed and if the line number specified is valid the line was released.	iosxe-shellmgr	LOG_STD_ACTION
<del>OSRVTCMEXALDN</del>	3-Error	Invalid field '[chars]' in TDL message '[chars]' received: value '[node]' for Vty Management	A message with an invalid field value was received for Vty Management	iosxe-shellmgr	LOG_STD_ACTION
<del>OSRVTCMEXALDR</del>	3-Error	Invalid field '[chars]' value '[chars]' in TDL message '[chars]' received for Vty Management	A message with an invalid field value was received for Vty Management	iosxe-shellmgr	LOG_STD_ACTION
<del>OSRVTCMEXASARR</del>	3-Error	Error '[dec]' marshaling TDL Vty Management message '[chars]': [chars]	An unexpected condition has occurred while IOS is marshaling TDL response message for Vty Management	iosxe-shellmgr	LOG_STD_ACTION
<del>OSRVTCMEXASCHD</del>	3-Error	Missing field '[chars]' in TDL Vty Management message '[chars]' received	A message missing a required field was received for Vty Management	iosxe-shellmgr	LOG_STD_ACTION
<del>OSRVTCMEXVCNT</del>	3-Error	Invalid vty count [dec] detected on initialization	Upon initialization the Vty Management subsystem checks that the number of available vtys for the platform is valid.	iosxe-shellmgr	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSERVVTMG</del> CVTSCN	3-Error	Unable to initialize the Vty Management service listen port	The platform IPC services failed to register the Vty Management service's need for a listen port. The Vty Management service will be unable to process requests. IOS services will be unavailable to external access methods.	iosxe-shellmgr	LOG_STD_ACTION
<del>OSERVVTMG</del> CFACSA	3-Error	Installing LIIN interface access control failed	This error happens when the Vty Management subsystem failed to set the access control function for the LIIN possibly due to IOS out of memory or corruption. Persistent access features into IOS will not work.	iosxe-shellmgr	LOG_STD_ACTION
<del>OSXCHDA</del> M_NSRIAL	3-Error	Could not insert pid [dec] into process tree	An avl_insert failed to add a process structure to the ASR1000	DDTS_COMPONENT	LOG_STD_ACTION
<del>OSXCHDA</del> CFPRODUR	3-Error	Tx data in message queue '[chars]' appears to have stalled. Producer info: '[chars]' pid [dec] current queue depth: [dec] bytes	Based upon internal state derived from calls to mcp_queue_produced	DDTS_COMPONENT	LOG_STD_ACTION
<del>OSXCHDA</del> CALLFRONT	3-Error	API call incorrectly made from interrupt level	-	DDTS_COMPONENT	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSXSE_HLCONINHPDOR</del>	3-Error	Stall for message queue '[chars]' have been cleared current queue depth: [dec] bytes	This is to inform that the condition for a message queue which had previously caused back-off of producer processs has been cleared	DDTS_COMPONENT	LOG_STD_ACTION
<del>OSXSE_HDNGAMEDPH</del>	3-Error	Queue '[chars]' consumed more than it produced [dec]	-	-	-
IOSXE_SCHED3-NULLQ	3-Error	Invalid API parameter	An external routine provided by the ASR1000 scheduler was incorrectly called with an invalid NULL pointer.	DDTS_COMPONENT	LOG_STD_ACTION
<del>OSSEVNOBASEKEYID</del>	2-Critical	A new type 6 encryption master key has failed to generate	A type 6 encryption master key was not found on this device. A new key failed to generate.	cedge-dfp	LOGSIDDISTACTEALS
<del>OSSEVNOBASEKEYMG</del>	3-Error	Type 6 master key is missing. A new key will be generated.	-	cedge-dfp	LOG_NO_ACTION
<del>OSSEVNOBASEKEYMG</del>	4-Warning	A type 7 key was detected for [chars] which supports type 6. Re-encrypting to type 6.	A type 7 key was configured. Type 7 usage is discouraged when the component also supports type 6. The type 7 key will be descripted and re-encrypted to type 6.	cedge-dfp	LOG_NO_ACTION
<del>OSSEVNOBASEKEYMG</del>	4-Warning	A new type 6 encryption master key has been generated.	A type 6 encryption master key was not found on this device. A new key has been generated.	cedge-dfp	LOG_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSD</del> <del>NO</del> <del>DM</del> <del>NO</del> <del>DM</del> <del>MT</del>	4-Warning	SDWAN sessions [dec] exceeds maximum [dec] to which QoS is applied	-	-	-
<del>OSD</del> <del>NO</del> <del>DM</del> <del>NO</del> <del>DM</del> <del>DOWN</del>	4-Warning	This device is being managed by vManage. Any config changes via CLI will be overwritten by vManage once control connection is up.	Control connection to vManage is currently down while the device is being managed by vManage. Any CLI config changes will be overwritten by vManage once control connection comes back up.	cntrl-mng-rtg	LOG_NO_ACTION
<del>OSD</del> <del>NO</del> <del>DM</del> <del>NO</del> <del>DM</del> <del>EN</del>	5-Notice	Type 6 master key is present on the device.	A type 6 key encryption has been requested by config-manager and an existing type 6 master key will be used for encryption/decryption.	cedge-dfp	LOG_NO_ACTION
<del>OSD</del> <del>NO</del> <del>DM</del> <del>NO</del> <del>DM</del> <del>ERR</del>	5-Notice	PnP Redirect Msg: [chars]	PnP redirection message was received by the device.	cedge-install	LOG_NO_ACTION
<del>OSD</del> <del>NO</del> <del>DM</del> <del>NO</del> <del>DM</del> <del>ERR</del>	3-Error	Initialization of interface [chars] failed	The initialization of the interface mentioned in the error message has failed.	DDTS_COMPONENT	LOG_STD_ACTION
<del>OSD</del> <del>NO</del> <del>DM</del> <del>NO</del> <del>DM</del> <del>ERR</del>	3-Error	Cannot open interface [chars] [dec]	During the creation of a Service-Engine interface it is necessary to program the system parameters in the driver. The driver cannot be opened.	DDTS_COMPONENT	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSXESIMENONAKCFAL</del>	3-Error	Set id on interface [chars] [dec]	During the creation of a Service-Engine interface it is necessary to program the system parameters in the driver. The failed to accept the programming.	DDTS_COMPONENT	LOG_STD_ACTION
<del>OSXESIMENONAKCFAL</del>	5-Notice	Service Engine Not Available	The Service Engine Not Available.	-	LOG_SID_NO_ACTION
<del>OSXESPA3APSICFAL</del>	3-Error	Failed to configure APS on [chars]: [chars].	The SPA driver failed to configure APS on an interface.	asr1k-spa-infra	LOG_STD_ACTION
<del>OSXESPA3APSRCPAL</del>	3-Error	APS PGP Message send failed toslot/tobay [dec]: [dec].	The SPA ETHER process is not able to write to ezman as ezman is blocked for writes. Copy the error message exactly as it appears and report it to your technical support representative.	asr1k-spa-infra	LOG_STD_ACTION
<del>OSXESPA3APSRCPAL</del>	3-Error	Failed to allocate Common IPC buffer [chars]	The Carrier Card failed to allocate a buffer for\n\ communication with the Route Processor.	asr1k-spa-infra	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
<del>OSXESPA3BADICMIYE</del>	3-Error	Bad ifcom message type=%u	-	asr1k-spa-infra	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
<del>OSXESPA3BADMALCMD</del>	3-Error	Unsupported MALU command [dec] arg=[hex] pascb=[hex]	-	asr1k-spa-infra	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSXESPAADMALCMD	3-Error	Unsupported MALU cmd/arg0=0x[node]x[node] arg1arg2=0x[node]x[node] hwidb=[chars]	-	asr1k-spa-infra	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
OSXESPA2WMAINIAL	3-Error	Failed to initialize SPA main c2w bus for subslot [dec] status = [dec]	The SPA driver is not able to initialize SPA main c2w. This indicates a hardware error.	asr1k-spa-infra	LOG_SID_NO_ACTION
OSXESPA3CMDNONI	3-Error	HWIDB Null for command [dec] port [hex]	The Route Processor passed down a port number that is unknown on the\n\ carrier card.	asr1k-spa-infra	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
OSXESPA3ECEERROR	3-Error	subSlot [dec] spatype 0x[hec]. Device error: [chars]	An error related to a device on the SPA is detected.	asr1k-spa-infra	LOG_SID_SHTECHACION
OSXESPA4HCCHANERR	3-Error	EFC error - interface [chars] vc [dec] anyphy [dec] err_code [dec] : [chars]	Failed to configure efc channel/parameters	asr1k-spa-infra	"Seach for resolved software issues using the Bug " "Toolkit at <a href="http://www.cisco.com/bugtools">http://www.cisco.com/bugtools</a> " "If you still require assistance " LOG_STD_ACTION
OSXESPA4HCICMAPIAL	3-Error	Failed to update EFC flow control identifier for interface [chars] status = [dec]	The SPA driver is not able to update the datapath EFC flow control identifier for the interface specified in the message. This indicates a hardware error.	asr1k-spa-infra	LOG_SID_NO_ACTION
OSXESPA4HCROVIAL	3-Error	Failed to provision EFC for interface [chars] status = [dec]	The SPA driver is not able to provision EFC for the interface specified in the message. This indicates a hardware error.	asr1k-spa-infra	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DSXESPAHFCUNRCVIAL	3-Error	Failed to unprovision EFC for VC [chars] status = [dec]	The SPA driver is not able to unprovision EFC for the interface specified in the message. This indicates a hardware error.	asr1k-spa-infra	LOG_SID_NO_ACTION
DSXESPAFASTNOFYRRR	3-Error	Failed to send fast notification to [chars] for [chars] [chars].	The SPA driver failed to deliver a fast notification.	asr1k-spa-infra	LOG_STD_ACTION
DSXESPAFCINOTSET	3-Error	Bay [dec] - FCI type not set	An FCI type of zero was detected	asr1k-spa-infra	LOG_STD_ACTION
DSXESPAFRRCFGIAL	3-Error	Failed to configure fast reroute on [chars]: [chars].	The SPA driver failed to configure fast rerouting on an interface.	asr1k-spa-infra	LOG_STD_ACTION
DSXESPAHMCBFAILURE	3-Error	Creation: port [dec] vc [dec]	Failed to create a hwidb.	asr1k-spa-infra	LOGSIDSHTECHACION
DSXESPAINVALIDANPHY	3-Error	Bay [dec] - Invalid anyphy number [node]for vc [dec]	Interface has invalid anyphy number	asr1k-spa-infra	"Seach for resolved software issues using the Bug " "Toolkit at <a href="http://www.cisco.com/cgi-bin/tabletools/buginform.pl">http://www.cisco.com/cgi-bin/tabletools/buginform.pl</a> " "If you still require assistance open a case with the Technical Assistance " "Center via the Internet at " " <a href="http://www.cisco.com/cgi-bin/tabletools/contacts.pl">http://www.cisco.com/cgi-bin/tabletools/contacts.pl</a> or contact " "your Cisco technical support representative. Be sure to provide the " "the information you have gathered and a 'show tech-support' to " "your support representative or attach it to your case in non-zipped " "plain text format .txt."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IOSXE_SP_SPA3INVALID	3-Error	Attempted to access HWIDB for port [node]on slot [dec] subSlot [dec]	The ASR1000 attempted to access the HWIDB associated with\n a non-existent port.	asr1k-spa-infra	"Copy the error message exactly as it appears and report it to your\n technical support representative."
IOSXE_SP_SPA3CALLOC	3-Error	Failed to allocate IPC buffer [chars]	The SPA failed to allocate a buffer for communication with\n the Route Processor ASR1000-RP.	asr1k-spa-infra	"Copy the error message exactly as it appears and report it to your\n technical support representative."
IOSXE_SP_SPA3PCPORT	3-Error	Failed to [chars] IPC port '[chars]' error [chars]	The Linecard failed to create a port for\n communication with the Route Processor ASR1000-RP.	asr1k-spa-infra	"Copy the error message exactly as it appears and report it to your\n technical support representative."
IOSXE_SP_SPA3PCPORT	3-Error	Failed to [chars] IPC port '[chars]' error [chars]	The Linecard failed to create a port for\n communication with the Route Processor ASR1000-RP.	asr1k-spa-infra	"Copy the error message exactly as it appears and report it to your\n technical support representative."
IOSXE_SP_SPA3PCRFAL	3-Error	Failed to open IPC port '[chars]' [chars] with error [chars]	The RP failed to open a port for communication with a SPA\n module.	asr1k-spa-infra	LOG_STD_ACTION
IOSXE_SP_SPA3PCRFAL	3-Error	Failed to open IPC port '[chars]' [chars] with error [chars]	The RP failed to open a port for communication with a SPA\n module.	asr1k-spa-infra	LOG_STD_ACTION
IOSXE_SP_SPA3RCSEND	3-Error	Failed to send IPC message [chars]	The Linecard failed to send a message to the\n Route Processor ASR1000-RP.	asr1k-spa-infra	"Copy the error message exactly as it appears and report it to your\n technical support representative."
IOSXE_SP_SPA3RCSEND	3-Error	Failed to send IPC message [chars]	The Linecard failed to send a message to the\n Route Processor ASR1000-RP.	asr1k-spa-infra	"Copy the error message exactly as it appears and report it to your\n technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
DSN_E_SPA3ERRCHRCR	3-Error	ISR return code out of range. rc=[dec]	The ISR error return code is out of range.	asr1k-spa-infra	LOG_STD_ACTION
DSN_E_SPA3ERRCHRCR	3-Error	Link record error - Bay [dec] vc [dec] error code [dec]	Error processing link record structure	asr1k-spa-infra	"Search for resolved software issues using the Bug " "Toolkit at <a href="http://www.cisco.com/cgi-bin/tabletools/bug_search.pl">http://www.cisco.com/cgi-bin/tabletools/bug_search.pl</a> " "If you still require assistance open a case with the Technical Assistance " "Center via the Internet at " " <a href="http://www.cisco.com/cgi-bin/tabletools/techassist.pl">http://www.cisco.com/cgi-bin/tabletools/techassist.pl</a> or contact " "your Cisco technical support representative. Be sure to provide the " "the information you have gathered and a 'show tech-support' to " "your support representative or attach it to your case in non-zipped " "plain text format .txt."
DSN_E_SPA3ERRCHRCR	3-Error	Loveletter length exceeds max [node]bytes	The ASR1000-SIP line card attempted to send a large message to the\n\n Route Processor ASR1000-RP.	asr1k-spa-infra	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
DSN_E_SPA3ERRCHRCR	3-Error	Bay [dec]: [chars]	An unexpected error has occurred.	asr1k-spa-infra	"Search for resolved software issues using the Bug " "Toolkit at <a href="http://www.cisco.com/cgi-bin/tabletools/bug_search.pl">http://www.cisco.com/cgi-bin/tabletools/bug_search.pl</a> " "If you still require assistance " "LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSXE_SPA3NEICK_FAL</del>	3-Error	Failed to [chars] SPA reference clock on [chars]	The SPA driver is not able to correctly configure the SPA reference clock on the specified interface. This indicates a hardware error.	asr1k-spa-infra	LOG_SID_NO_ACTION
<del>OSXE_SPA3NODSPACH</del>	3-Error	Dispatch vector Null cmd=[dec] dintf=[dec]	No command dispatch vector was found for the specified interface.	asr1k-spa-infra	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
<del>OSXE_SIP_SPA3POWER</del>	3-Error	Bay [dec] 12V power is [chars]	SPA 12V power fault indicator	asr1k-spa-infra	LOG_STD_ACTION
<del>OSXE_SPA3SONETCLOCK_FAL</del>	3-Error	SPA Sonet clock has failed status = 0x[node]x	The SPA SONET clock has failed. SPAs that rely on the SPA SONET clock for proper operation such as POS and ATM will be affected.	asr1k-spa-infra	"If the SPA Sonet clock does not recover perform an " "OIR." LOG_SID_RECUR_ACTION
<del>OSXE_SPA3SONETCLOCK_REC</del>	3-Error	SPA Sonet clock has recovered status = 0x[node]x	SPA Sonet clock has recovered	asr1k-spa-infra	LOG_SID_NO_ACTION
<del>OSXE_SPA3CRICONF_FAIL</del>	3-Error	Subslot spa controller EFC configuration failure error [dec]	Failed to configure SPA controller EFC	asr1k-spa-infra	"Seach for resolved software issues using the Bug " "Toolkit at <del>http://www.cisco.com/cgi-bin/tablelookup.pl?table=&amp;table=bug&amp;code=OSXE_SPA3CRICONF_FAIL</del> " "If you still require assistance " LOG_STD_ACTION
<del>OSXE_SPA3CRINI_FAIL</del>	3-Error	Subslot [dec] spa controller initialisation failure error [dec]	Failed to initialise SPA controller	asr1k-spa-infra	"Seach for resolved software issues using the Bug " "Toolkit at <del>http://www.cisco.com/cgi-bin/tablelookup.pl?table=&amp;table=bug&amp;code=OSXE_SPA3CRINI_FAIL</del> " "If you still require assistance " LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSX_SPANDCALCULD</del>	3-Error	Failed to allocate interface identifiers for SPA [chars]	Failed to get CC buffer and flow control identifiers for the SPA in the specified subslot Traffic cannot flow through the SPA under this failure condition. This can happen if the system runs out of available identifiers.	asr1k-spa-infra	"Try to reduce the number of interfaces" "configured in the system either by physically removing the SPAs" "or by changing the system configuration"
<del>OSX_SPANCONGFAUR</del>	3-Error	Bay [dec] spi4 configuration failure error [dec]	Failed to configure SPI4 interface	asr1k-spa-infra	"Search for resolved software issues using the Bug " " <a href="http://www.cisco.com/cgi-bin/tabletools/hotprod">Toolkit at http://www.cisco.com/cgi-bin/tabletools/hotprod</a> " "If you still require assistance " LOG_STD_ACTION
<del>OSX_SPANSHINITFAUR</del>	3-Error	Bay [dec] initialization failure	Failed to create SPI4 subblock	asr1k-spa-infra	"Search for resolved software issues using the Bug " " <a href="http://www.cisco.com/cgi-bin/tabletools/hotprod">Toolkit at http://www.cisco.com/cgi-bin/tabletools/hotprod</a> " "If you still require assistance " LOG_STD_ACTION
<del>OSX_SPANSHNOISNC</del>	3-Error	[chars]: Can not synchronize SPI4 bus host: src [chars]in sync sink [chars]in sync spa: src [chars]in sync sink [chars]in sync.	SPI4 bus between modular services card and SPA is not synchronized. It indicates either a not properly seated SPA a hardware failure or an outdated ROMMON/FPGA image.	-	"Ensure that the SPA is properly seated " "in its subslot and reseal it if required."
<del>OSX_SPANXBNDWDH</del>	4-Warning	Total SPA bandwidth exceeds line card capacity of [node] Mbps	The total bandwidth of SPAs exceeds the rated capacity of this line card.	asr1k-spa-infra	"Refer to the line card guidelines for the maximum allowed" "aggregated SPA bandwidth for the line card"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IOSSPA1XBNWDHNS</del>	4-Warning	Total SPA bandwidth exceeds line card capacity full utilization of installed SPA interfaces is not supported	The total bandwidth of SPAs exceeds the rated capacity of this line card.	asr1k-spa-infra	"Refer to the line card guidelines for the maximum allowed" "aggregated SPA bandwidth for the line card"
IOSXE_SIP_SPA4SPABUS	4-Warning	Subslot [dec] [chars] SPA BUS access failed. <del>not fully full [dec] [hex]</del> addr=0x[node]x data=0x[hec]	SPABUS has reported an error.	asr1k-spa-infra	LOG_STD_ACTION
IOSXE_SIP_SPA4SPABUS2	4-Warning	Subslot [dec] SPA BUS access failed. No SPA present error	SPABUS has reported an error.	asr1k-spa-infra	LOG_STD_ACTION
<del>IOSSPA4CGRMCTOG</del>	6-Information	Logger message length [node]bytes exceeds the maximum allowed size	The carrier card attempted to send a large message to the Route Processor	asr1k-spa-infra	LOG_STD_ACTION
IOSXE_SIP_SPA-6OIR	6-Information	Bay [dec] [chars] changed to [chars]	SPA OIR Sequence	asr1k-spa-infra	LOG_SID_NO_ACTION
<del>IOSMRAENCFNCFIDE</del>	3-Error	Requested count [node]for license level [chars] is in 'not authorized' state.	Authorization Code needs to be installed using 'license smart reservation install' CLI	iosxe-smart-agent	-
<del>IOSMRAENCFNCFIOC</del>	3-Error	Pool is out of compliance	This pool is Out Of Compliance	iosxe-smart-agent	"The pool is out of compliance. Customer needs" "to update his license pool"
<del>IOSMRAENCFNCFIABD</del>	6-Information	Smart Licensing is now Disabled	Smart Licensing is Disabled	iosxe-smart-agent	-
<del>IOSMRAENCFNCFIABE</del>	6-Information	Smart Licensing is now Enabled	Smart Licensing is Enabled	iosxe-smart-agent	-
<del>IOSMRAENCFNCFIABF</del>	6-Information	Grace Period will Expire	Grace Period will expire	iosxe-smart-agent	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IOSXSMARTAGNOCIFYC</del>	6-Information	Pool is now in Compliance	Smart Licensing Pool in Compliance	iosxe-smart-agent	-
<del>IOSXPAKSNAPSHOT</del>	6-Information	Platform supports PAK snapshot but none exists.	Platform supports PAK snapshot but none exists.	iosxe-smart-agent	-
<del>IOSXSTANDBYNOTAUTH</del>	6-Information	Standby is in 'not authorized' state for license [chars]	Authorization Code needs to be installed using 'license smart reservation install' CLI on standby	iosxe-smart-agent	-
<del>IOSXSPANDSPCONFERR</del>	3-Error	Abandon configuration for subslot [dec]/[dec] the SPA type[dec] is NOT match	Abandon SPA configuration.	DDTS_COMPONENT	"Please check the startup configuration use \"no \" \"card\" command to override wrong card configuration and update card \" \"type.\""
<del>IOSXSPAREIDHFAILURE</del>	3-Error	Failed to create SPA [dec]/[dec] handle	Failed to create message handle for SPA communication.	DDTS_COMPONENT	LOG_SIDSH_TECH_ACTION
<del>IOSXSPAREIDMFAILURE</del>	3-Error	Failed to create [chars] message for [chars].	Failed to create/allocate necessary TDL message for SPA communication.	DDTS_COMPONENT	LOG_SIDSH_TECH_ACTION
<del>IOSXSPACREATIONFAILURE</del>	3-Error	slot=[dec] subslot=[dec] spa_type=0x[hec] lc_type=0x[hec].	Failed to create a SPA object.	DDTS_COMPONENT	LOG_SIDSH_TECH_ACTION
<del>IOSXSPA3DIAG_CONFIG</del>	3-Error	[chars] did not complete [dec]/[dec]	An error has occurred during diagnostic test.	DDTS_COMPONENT	LOG_SIDSH_TECH_ACTION
<del>IOSXSPACFNIDHFAILURE</del>	3-Error	Failed to initialize dispatch path for SPA [dec]/[dec] handle	Failed to initialize dispatch path handle for SPA communication.	DDTS_COMPONENT	LOG_SIDSH_TECH_ACTION
<del>IOSXSPADOMNIDHFAILURE</del>	3-Error	[chars] rc = [dec]	Failed to bind message handle for SPA communication.	DDTS_COMPONENT	LOG_SIDSH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSXESPA3NADCRUNM	3-Error	cpu= [dec] max cpu = [dec]	An invalid CPU number is specified in one of the internal APIs.	DDTS_COMPONENT	LOGSIDSHTECHACI0N
OSXESPA3NADDVANSPE	3-Error	interface type [chars] slot [dec] port [dec] vc [dec] : [chars]	Data required to support the interface is not available.	DDTS_COMPONENT	LOGSIDSHTECHACI0N
OSXESPA3NADDDBNUM	3-Error	db = [dec] max db = [dec] db intf = [dec] max db intf = [dec]	An invalid daughter board number is specified in one of the internal APIs.	DDTS_COMPONENT	LOGSIDSHTECHACI0N
OSXESPA3NADHANDLE	3-Error	Failed to get a valid IPC handle for type [node]slot [dec] subslot [dec].	The client handle was found to be NULL for the given type/slot/subslot.	DDTS_COMPONENT	LOGSIDSHTECHACI0N
OSXESPA3NADFNDEX	3-Error	index= [dec] spaType=0x[hec] slot [dec] subSlot [dec] slotunit [dec] vc [dec]	Index for the interface is not valid.	DDTS_COMPONENT	LOGSIDSHTECHACI0N
OSXESPA3NADNKRACE	3-Error	index1= [dec] index2= [dec] maxIndex= [dec]	An invalid index range is specified in one of the internal APIs.	DDTS_COMPONENT	LOGSIDSHTECHACI0N
OSXESPA3NADRPSIONM	3-Error	slot= [dec] max slot = [dec]	An invalid RP slot number is specified in one of the internal APIs.	DDTS_COMPONENT	LOGSIDSHTECHACI0N
OSXESPA3NADSIONM	3-Error	slot= [dec] max slot = [dec]	An invalid slot number is specified in one of the internal APIs.	DDTS_COMPONENT	LOGSIDSHTECHACI0N
OSXESPA3NADSCIONM	3-Error	cardwide-port = [dec] max cardwide-port = [dec]	An invalid cardwide-port number is specified in one of the internal APIs.	DDTS_COMPONENT	LOGSIDSHTECHACI0N
OSXESPA3NADCAUSGE	3-Error	-	Incorrect usage of an internal API that should only be used on CC.	DDTS_COMPONENT	LOGSIDSHTECHACI0N

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSXE_SPA3INVALID_SLOT_NUM	3-Error	subslot= [dec] max subslot = [dec]	An invalid subslot number is specified in one of the internal APIs.	DDTS_COMPONENT	LOG_SIDSH_TECH_ACTION
OSXE_SPA3IPC_FAILURE	3-Error	IPC failure while [chars]	An error has occurred while preparing or sending an IPC message.	DDTS_COMPONENT	LOG_SIDSH_TECH_ACTION
OSXE_SPA3MEM_ALLOC_ERR	3-Error	[chars]	Memory allocation error.	DDTS_COMPONENT	LOG_SIDSH_TECH_ACTION
OSXE_SPA3NULL_BAY_PIR	3-Error	-	Pointer to SPA bay is NULL.	DDTS_COMPONENT	LOG_SIDSH_TECH_ACTION
OSXE_SPA3NULL_SPA_PIR	3-Error	-	Pointer to a SPA object is NULL.	DDTS_COMPONENT	LOG_SIDSH_TECH_ACTION
OSXE_SPA3NULL_VFT	3-Error	[chars] virtual function table is not initialized. spaType=0x[hec]	A required function table is not initialized	DDTS_COMPONENT	LOG_SIDSH_TECH_ACTION
OSXE_SPA3NULL_VFUNC	3-Error	[chars] vector is not initialized. spaType=0x[hec]	A required function vector is not initialized	DDTS_COMPONENT	LOG_SIDSH_TECH_ACTION
OSXE_SPA3POWER_CYCLE	3-Error	[chars] occurred on Shared Port Adapter [node]%u	An error has occurred which will cause the \n\ Shared Port Adapter to be power cycled	DDTS_COMPONENT	LOG_SIDSH_TECH_ACTION
OSXE_SPA3SENDCFG_FAIL	3-Error	Failed to send configuration for [chars] to carrier-card for subslot=[dec]/[dec]	Sending configuration failed.	DDTS_COMPONENT	LOG_SIDSH_TECH_ACTION
OSXE_SPA3SETUP_ID_FAILURE	3-Error	Failed to set the alloc/free handler for SPA [dec]/[dec] handle	Failed to set the alloc/free handler for SPA communication.	DDTS_COMPONENT	LOG_SIDSH_TECH_ACTION
OSXE_SPA3CREATE_FAILURE	3-Error	slot=[dec] subslot=[dec] PID=[chars] lc_type=0x[hec].	Failed to create a SPA object.	DDTS_COMPONENT	LOG_SIDSH_TECH_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IOSXE_SPA6SETUPFAILURE</del>	3-Error	Failed to properly setup for SPA communication on slot [dec] subslot [dec].	Discovery of the linux interface used to communicate with a SPA failed	DDTS_COMPONENT	LOG_SID_SH_TECH_ACTION
<del>IOSXE_SPA6UNFORMEDDATA</del>	3-Error	Data conversion error [chars] 0x[hex]	An internal software error has occurred when converting the data specified in the message from one representation to another.	DDTS_COMPONENT	LOG_SID_SH_TECH_ACTION
<del>IOSXE_SPA6COMMUNICATIONDOWN</del>	4-Warning	Communication with IM in [dec]/[dec] stalled. Retrying. IM will reboot if situation persists	Retransmit IPC communication request between IOS and IOMD.	DDTS_COMPONENT	LOG_SID_NO_ACTION
<del>IOSXE_SPA6COMMUNICATIONRESTORED</del>	4-Warning	Communication with IM in [dec]/[dec] restored.	IPC communication between IOS and specified IM has been restored.	DDTS_COMPONENT	LOG_SID_NO_ACTION
<del>IOSXE_SPA6LINKRATECHANGE</del>	6-Information	[chars]: [chars]	Change in rate of the link.	DDTS_COMPONENT	LOG_SID_NO_ACTION
<del>IOSXE_SPA6LINKMGNTCOMPLAINT</del>	6-Information	Failed to copy message [chars] to buffer not allowed for current domain.	Failure to marshal a message indicates an incompatibility with the intended recipient.	iosxe-spa-infra	LOG_SID_SH_TECH_ACTION
IOSXE_SPA6UPDOWN	6-Information	Interface [chars] link down due to [chars]	Ethernet link is down due to remote/local fault.	DDTS_COMPONENT	"Replace the faulty cable."
IOSXE_SPA6UPDOWN1	6-Information	Interface [chars] link down due to [chars] [chars][dec].[dec] dbm	Ethernet link is down due to mac LF/RF/phy line/host side fault. Optics Rx power is ok/low/hi	DDTS_COMPONENT	"Debug mac/phy/optics block"
IOSXE_SPA6UPDOWN2	6-Information	Interface [chars] link down due to [chars] [chars][dec]	Ethernet link is down due to macLF/RF/phy line/hostside fault. Dom is not supported by the optics	DDTS_COMPONENT	"Debug phy/optics block"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IOSXE_SPA-6UPDOWN3	6-Information	Interface [chars] link down due to [chars] ln0:[chars][dec].[dec] dbmln1:[chars][dec].[dec] dbmln2:[chars][dec].[dec] dbmln3:[chars][dec].[dec] dbm	Ethernet link is down due to macLF/RF/phy line/host side fault. Optics Rx power lane is ok/low/high.	DDTS_COMPONENT	"Debug phy/optics block"
IOSXE_SPA-6UPDOWN4	6-Information	Interface [chars] link down due to [chars] -40dbm	Ethernet link is down due to macLF/RF/phy line/host side fault. Optics Rx power is zero.	DDTS_COMPONENT	"Debug mac/phy/optics block"
IOSXE_SPA-6UPDOWN5	6-Information	Interface [chars] link down due to [chars] ln0:[chars][dec].[dec] dbmln1:[chars][dec].[dec] dbmln2:[chars][dec].[dec] dbmln3:[chars][dec].[dec] dbmln4:[chars][dec].[dec] dbmln5:[chars][dec].[dec] dbmln6:[chars][dec].[dec] dbmln7:[chars][dec].[dec] dbmln8:[chars][dec].[dec] dbmln9:[chars][dec].[dec] dbm	Ethernet link is down due to macLF/RF/phy line/host side fault. Optics Rx power lane is ok/low/high.	DDTS_COMPONENT	"Debug phy/optics block"
<del>IOSXE_SPA-6UPDOWN5</del>	2-Critical	Subsys exclusion init failed. Invalid subsys list.	Fail to initialize excluded subsystems to NULL. \n\n an abnormal condition	DDTS_COMPONENT	"This message means a software error had happened. \n" "The list of subsystems to be removed is not initialized. \n" "\n\n When reporting this message copy the message text exactly as\n\ it appears include the stack trace and report to your technical\n\ support representative"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSSESXSUBSFCRMAE</del>	2-Critical	Subsystems in exclusion list is not terminated correctly.	The subsystem exclusion list is not terminated \ by a NULL entry. \n It is \ an abnormal condition	DDTS_COMPONENT	"This message may be related to a memory corruption or hardware issue.\n\n When reporting this message copy the message text exactly as\n it appears include the stack trace and report to your technical\n support representative"
<del>OSSESXSUBSFCRMAE</del>	2-Critical	Unable to remove excluded subsystems.	Fail to remove excluded subsystems. \n an abnormal condition	DDTS_COMPONENT	"This message may be related to a memory corruption. \n" "\n\n When reporting this message copy the message text exactly as\n it appears include the stack trace and report to your technical\n support representative"
<del>OSSESXSUBSFCRMAE</del>	3-Error	Failed to open IPC port '[chars]' for service '[chars]' with error [chars].	BIPC connect failed	iosxe-iosd-infra	LOG_STD_ACTION
<del>OSSESXSUBSFCRMAE</del>	3-Error	Failed to disconnect IPC port '[chars]' for service '[chars]' with error [chars].	BIPC disconnect failed	iosxe-iosd-infra	LOG_STD_ACTION
<del>OSSESXSUBSFCRMAE</del>	3-Error	Fastpath thread epoll wait failed errno [dec]	Fastpath epoll wait failed	iosxe-iosd-infra	LOG_STD_ACTION
<del>OSSESXSUBSFCRMAE</del>	3-Error	Fastpath thread event dispatch failed ev_ret [dec] errno [dec]	fastpath thread event dispatch failed	iosxe-iosd-infra	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IOSXESNRAIPBCEXT</del>	3-Error	Fastpath thread get next event failed ev_ret [dec] errno [dec]	Fastpath thread get next event failed	iosxe-iosd-infra	LOG_STD_ACTION
<del>IOSXESNRAIPBCEXT</del>	3-Error	Fastpath thread [chars] [chars] for IPC channel [chars] ipc id [dec] ipc fd [dec] seqnum [dec] failed efd [dec] errno [dec]	Fastpath epoll_ctl operation for an IPC channel failed	iosxe-iosd-infra	LOG_STD_ACTION
<del>IOSXESNRAIPBCEXT</del>	3-Error	IPC entry not found for ipc fd [dec] seq [dec] events 0x[hec] while processing [chars] from epoll fd [dec]	Fastpath failed to find IPC entry after epoll_wait	iosxe-iosd-infra	LOG_STD_ACTION
<del>IOSXESNRAIPBCEXT</del>	3-Error	Fastpath thread top level efd epoll [chars] failed fd [dec] errno [dec]	Fastpath top level efd epoll_ctl operation failed	iosxe-iosd-infra	LOG_STD_ACTION
<del>IOSXESNRAIPBCEXT</del>	3-Error	IOS scheduler event dispatch failed ev_ret [dec] errno [dec]	IOS scheduler event dispatch failed	iosxe-iosd-infra	LOG_STD_ACTION
<del>IOSXESNRAIPBCEXT</del>	3-Error	IOS scheduler get next event failed ev_ret [dec] errno [dec]	IOS scheduler get next event failed	iosxe-iosd-infra	LOG_STD_ACTION
<del>IOSXESNRAIPBCEXT</del>	3-Error	IOS thread poll on event lib and wakeup fds failed errno [dec]	IOS thread poll on event lib and wakeup fds failed	iosxe-iosd-infra	LOG_STD_ACTION
<del>IOSXESNRAIPBCEXT</del>	3-Error	Socket event for [chars]	An internal socket level event has returned an error which\n is indicated. This may have been the result of a bind\n peek receive or send operation with respect to the EOBC\n interface listed.	iosxe-iosd-infra	"show eobc\n show platform software\n infrastructure bipe"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSXESNRAEADBEINID</del>	3-Error	[chars] read from wakeup fd failed errno [dec]	A thread reading from its wakeup fd failed	iosxe-iosd-infra	LOG_STD_ACTION
<del>OSXESNRAEIBPOLACS</del>	3-Error	evGetEpollArgs returned fd [dec]	Evlib returned a huge FD value that IOS can not handle.	iosxe-iosd-infra	LOG_STD_ACTION
<del>OSXESNRAEIBFEINID</del>	3-Error	Write to [chars] wakeup fd failed errno [dec] current signal/wakeup cnt: [node]u/[node]u	Trigering a thread by writing to its wakeup fd failed	iosxe-iosd-infra	LOG_STD_ACTION
<del>OSXESNRAEICTARCON</del>	4-Warning	IPC channel fd [dec] seq_num [dec] for service '[chars]' cleared by user	BIPC disconnect requested by an user with clear command	iosxe-iosd-infra	LOG_STD_ACTION
<del>OSXESNRAEICTAFRSOD</del>	4-Warning	Number of IPC messages held in the application reached the \n\ maximum channel threshold. IPC channel '[chars]': \n\ ipc_ctl_id [dec] ipc_fd [dec] seq_num [dec] curr IPC msg hel in appl [dec]	-	-	-
<del>OSXESNRAEICTQFRSOD</del>	4-Warning	BIPC transmit queue threshold reached for the channel '[chars]': \n\ ipc_ctl_id [dec] ipc_fd [dec] seq_num [dec] Tx Q size [dec]	-	-	-
<del>OSXESNRAEICTCREAE</del>	6-Information	bipc connect succeeded for [chars] ipc_ctl_id [dec] ipc_fd [dec] seq [dec]	BIPC connect succeeded	iosxe-iosd-infra	LOG_STD_ACTION
<del>OSXESNRAEICTKONCT</del>	6-Information	disconnect by application for [chars] bring down IPC	BIPC disconnect requested by an application	iosxe-iosd-infra	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSSES</del> <del>SNRA</del> <del>IPC</del> <del>READ</del> <del>ERR</del>	6-Information	connection read error from [chars] rc [dec] bring down IPC id [dec] for fd [dec] seq [dec]	BIPC error during IPC read	iosxe-iosd-infra	LOG_STD_ACTION
<del>OSSES</del> <del>SNRA</del> <del>IPC</del> <del>READ</del> <del>ERR</del>	6-Information	process receive buffer error from [chars] rc [dec] bring down IPC	BIPC error during IPC read from buffer	iosxe-iosd-infra	LOG_STD_ACTION
<del>OSSES</del> <del>SNRA</del> <del>IPC</del> <del>WRITE</del> <del>ERR</del>	6-Information	write bipc error for [chars] rc [dec] bring down IPC	BIPC error during IPC read	iosxe-iosd-infra	LOG_STD_ACTION
<del>OSSES</del> <del>SNRA</del> <del>IPC</del> <del>ADDR</del> <del>CACHE</del>	6-Information	EOBC ip-table cache: [chars]	Unable to setup internal address for eobc communication	iosxe-iosd-infra	LOG_STD_ACTION
<del>OSSES</del> <del>SNRA</del> <del>IPC</del> <del>CONNECT</del>	6-Information	IPC channel disconnect for [chars] ipc_ctl_id [dec] fd [dec] seq_num [dec] loc [chars] err [dec] [chars]	An IPC channel in fastpath is terminated	iosxe-iosd-infra	LOG_STD_ACTION
<del>OSSES</del> <del>SNRA</del> <del>IPC</del> <del>CONTROL</del> <del>BLK</del> <del>FREE</del>	6-Information	IPC control blk free: name [chars] ipc_ctl_id [dec] refcount [dec]	An IPC control block is freed	iosxe-iosd-infra	LOG_STD_ACTION
<del>OSSES</del> <del>SNRA</del> <del>IPC</del> <del>CONTROL</del> <del>BLK</del> <del>DESTROY</del>	6-Information	IPC control blk destroy: name [chars] ipc_ctl_id [dec] refcount [dec] need_free [dec]	An IPC control block is requested to be destroyed	iosxe-iosd-infra	LOG_STD_ACTION
<del>OS</del> <del>THRU</del> <del>CH</del> <del>RU</del> <del>ON</del> <del>FA</del> <del>IL</del>	3-Error	Configuration failed. Installed license does not support the throughput level. Please install the valid license	An error occurred when the throughput configuration was attempted.	iosxe-csl	-
<del>OS</del> <del>THRU</del> <del>CH</del> <del>RU</del> <del>ON</del> <del>FA</del> <del>IL</del>	3-Error	The EULA has to be accepted prior to throughput configuration.	Users need to accept EULA to activate the license	iosxe-csl	"Accept EULA for throughput license"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSETHROUGHPUTDONG</del>	3-Error	No valid license found for the configured throughput level: [chars] kbps	Users has the boot up throughput set to non-default level without having the valid license.	iosxe-csl	"Install valid throughput license"
<del>OSETHROUGHPUTDEL</del>	3-Error	An invalid throughput level: [chars] kbps was selected.	The configured throughput level is unknown	iosxe-csl	-
<del>OSETHROUGHPUTPAID</del>	3-Error	Throughput level setup failed. Boot up will be at the default throughput	An error occurred when licensing tried to setup the throughput	iosxe-csl	-
<del>OSETHROUGHPUTLEVL</del>	6-Information	Throughput level has been set to [dec]00000 kbps	Throughput level has been set to a number	iosxe-csl	-
<del>OSEMSAMPENCERRR</del>	3-Error	An unexpected condition has occurred at module [chars]	An unexpected condition has occurred at the Interface Module TSU.	asr900-ptp	LOG_STD_ACTION
<del>OSEMSAMPENCERRR</del>	4-Warning	NULL	An unexpected condition has occurred.	asr900-ptp	LOG_STD_ACTION
<del>OSUEFAFNADHROM</del>	3-Error	MAC count from BP is supposed to be 512 for NCS. Actual MAC count[dec]	For UEA NCS platforms MAC count must be 512	uea-systems	"Please program the EEPROM to correct MAC count"
<del>OSERRMOMDOLASH</del>	0-Emergency	iosxe-binos-utils	ROMMON FIPS_140-3 Load test *FAILED*: file[chars]	"FIPS 140-3 Related Load test failed for the ROMmon."	"Check the system messages to see if any messages appeared that might indicate the source of the ROMmon Load test problem. If you do not find any additional information indicating a correctable problem

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>IOSXE_ROMMONUPGRADE</del>	0-Emergency	iosxe-binos-utils	ROMMON upgrade failed: partition[chars]	"An attempt to upgrade the ROMmon failed."	"Check the system messages to see if any messages appeared that might indicate the source of the ROMmon problem. If you do not find any additional information indicating a correctable problem
IOSXE_USB3ESHOW_USB	3-Error	Internal Error locating database for USB Devices.	The mcp_usb_devices is incorrect and needs to be changed	iosxe-iosd-infra	LOG_STD_ACTION
<del>IOSXE_UTDUNSUPRD</del>	2-Critical	UTD package version \[chars]\ is not supported recommended version is \[chars]\	The UTD package version does not match the required UTD version embedded in this IOS-XE version. This is an unsupported configuration and may behave unexpectedly.	iosxe-utd	LOG_STD_ACTION
IOSXE_UTD3-ALLOC	3-Error	Failed to allocate message	When attempting to program the dataplane there was not enough memory to allocate the message.	iosxe-utd	LOG_STD_ACTION
IOSXE_UTD3MESSAGE	3-Error	Failed to send message	When the message was being prepared for sending to the data plane there was an error.	iosxe-utd	LOG_STD_ACTION



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>OS_U_TSD_M_SUA_P_DEC</del>	4-Warning	UTD custom-signature apply new file has been executed - A brief service interruption is expected	The UTD service will be restarted if a new custom-signature is found and appended. During this time if fail-close has been configured recommended traffic that would be inspected by	iosxe-utd	LOG_STD_ACTION
<del>OS_U_TSD_M_SUA_P_DEC</del>	4-Warning	UTD custom-signature file '[chars]' in custom-signature profile '[chars]' was not found.	The specified custom-signature file used in the custom-signature profile did not exist at the time it was referenced. An empty custom-signature file with the same name was created.	iosxe-utd	LOG_STD_ACTION
<del>OS_U_TSD_M_SUA_P_DEC</del>	4-Warning	UTD MT configuration download has [chars]	In UTD multitenancy mode the configuration download to the container can take a while. Please be patient.	iosxe-utd	LOG_STD_ACTION
<del>OS_U_TSD_M_SUA_P_DEC</del>	4-Warning	Container responded to UTD message with an error: [dec]	The container rejected the UTD message	iosxe-utd	LOG_STD_ACTION
<del>OS_U_TSD_M_SUA_P_DEC</del>	4-Warning	UTD message sent to the container has timed out	The UTD message sent to the container has timed out.	iosxe-utd	LOG_STD_ACTION
<del>OS_U_TSD_M_SUA_P_DEC</del>	4-Warning	UTD container download has timed out	The container did not respond with an up/down status before the session timed out.	iosxe-utd	LOG_STD_ACTION
<del>OS_U_TSD_M_SUA_P_DEC</del>	4-Warning	UTD poll: container status is DOWN	The container sent a down status to the poll message	iosxe-utd	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IOSXE</del> UTD <del>AD</del> DIR <del>CA</del> ION	4-Warning	The UTD OVA is being deprecated in an upcoming release. Please migrate to IOX to use the UTD TAR	The UTD OVA is being deprecated in an upcoming release. Support for the virtual-service command suite will end. To use UTD going forward please migrate to IOX infrastructure. See the 'Migrating to IOx Container' section on the following link for more information: <a href="http://cs.co/UtdSnortIPS">http://cs.co/UtdSnortIPS</a>	iosxe-utd	LOG_STD_ACTION
<del>IOSXE</del> UTD <del>SG</del> UDA <del>IE</del> CFG	4-Warning	UTD signature updates have been configured - A brief service interruption at the time of update is expected	The UTD service will be restarted if a new signature package is found. During this time if fail-close has been configured recommended traffic that would be inspected by	iosxe-utd	LOG_STD_ACTION
<del>IOSXE</del> UTD <del>UP</del> CFG <del>IN</del> COM <del>PL</del> E	4-Warning	UTD signature update configuration is incomplete	UTD signature updates have been partially configured. Both the signature update server and occur-at frequency are required.	iosxe-utd	LOG_STD_ACTION
<del>IOSXE</del> UTD <del>SG</del> UDA <del>IE</del> EXE <del>C</del>	4-Warning	UTD signature update has been executed - A brief service interruption is expected	The UTD service will be restarted if a new signature package is found. During this time if fail-close has been configured recommended traffic that would be inspected by	iosxe-utd	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IOSXE_UEDM4MCMABHY</del>	4-Warning	UTD package version \[chars]\ does not match recommended UTD package version \[chars]\	The UTD package version does not match the recommended UTD package version embedded in this IOS-XE version.	iosxe-utd	LOG_STD_ACTION
<del>IOSXE_VMAN4MCDPACH</del>	3-Error	Unable to dispatch received TDL message from Virt-manager	An unexpected condition has occurred while IOS was trying to dispatch a TDL message received from Virt-manager.	vman	LOG_STD_ACTION
<del>IOSXE_VMAN4MGNIFAL</del>	3-Error	Failed to initialize required Virt-manager resource: [chars]	During the initialization of the resources required by Virt-manager a failure occurred. This has prevented virtual services from being activated.	vman	LOG_STD_ACTION
<del>IOSXE_VMAN4RSMKHDR</del>	3-Error	Failed to deliver response message: [chars]	An unexpected condition has occurred while IOS was trying to deliver a response message to a virtual service received from Virt-manager.	vman	LOG_STD_ACTION
IOSXE_WCCP4ACELIMIT	4-Warning	Too many ACEs in MASK ACL please switch to Hash mode	Mask merged ACL generate too many ACEs.	asr1k-wccp	"show ip access-lists"
IOSXE_WCCP4BADACE	4-Warning	Access list contains invalid ace	An unexpected condition has occurred which is due to an invalid\n\ statement in the access list structure.	asr1k-wccp	"show ip access-lists"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IOSXE_WCCP4NOACL	4-Warning	Access list is null	An unexpected condition has occurred which is due to the absence of\n\ an access list structure.	asr1k-wccp	"show ip access-lists"
IOSXE_WCCP4NOINPUT	4-Warning	NULL input [chars]	An unexpected condition has occurred which is due to the NULL value\n\ of the input parameter.	asr1k-wccp	"show ip wccp"
IOSXE_WCCP4NOINIF	4-Warning	No [chars] interface info for Service Group [dec] [dec] %u	An unexpected condition has occurred which is due to the absence of\n\ MCP WCCP interface info for the specific service group.	asr1k-wccp	"show platform software wccp"
IOSXE_WCCP4NOSTATS	4-Warning	WCCP [chars] message error	An unexpected condition has occurred which is due to the error in\n\ receiving WCCP stats update message.	asr1k-wccp	"show platform software wccp <id> counters"
IOSXE_WCCP4NOSTATSNIF	4-Warning	Interface handle [node]not exist for the stats message	An unexpected condition has occurred which can't find the interface handle\n\ for the interface stats message.	asr1k-wccp	"show platform software wccp <id> int counters"
IOSXE_WCCP4NOSTATSSVC	4-Warning	Service Group [dec] [dec] [node]not exist for the stats message	An unexpected condition has occurred which can't find the service group\n\ for the service group stats message.	asr1k-wccp	"show platform software wccp"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSXE_WCP4NCSVGRP	4-Warning	[chars] Service Group [dec] [dec] [node]NOT exist	An unexpected condition has occurred which is due to the absence of\n\ the service group structure.	asr1k-wccp	"show ip wccp"
OSXE_WCP4UNKNOWNR	4-Warning	Unknown [chars] interface direction 0x[hec] for Service Group [dec] [dec] %u	An unexpected condition has occurred which is due to the unknown direction\n\ has been applied to the interface for the service group.	asr1k-wccp	"show platform software wccp"
OSXE_WD4HEARTBEATL	2-Critical	Heartbeat is not emitted. Heartbeat count:[dec]	Failure in IOS to generate a heartbeat is\n\ an abnormal condition	DDTS_COMPONENT	"This message may be related to an abnormal configuration\n\ and system load or transient high processing demand." "\n\n When reporting this message copy the message text exactly as\n\ it appears include the stack trace and report to your technical\n\ support representative"
OSXE_WD4CPUHOGL	2-Critical	CPUHOG detection failed to start.	Failure in setting up CPUHOG detection mechanism is\n\ an abnormal condition	DDTS_COMPONENT	"This message may be related to an abnormal configuration\n\ and system load or transient high processing demand." "\n\n When reporting this message copy the message text exactly as\n\ it appears include the stack trace and report to your technical\n\ support representative"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>DCAC</del> GUESTSHELL_P4_NOTICE	5-Notice	polaris-infra	guestshell ip address(%s) of Mgmt-Intf is ignored.	"The ipv4 address configured for guestshell's Mgmt-Intf is ignored. When guestshell is on Mgmt-Intf it is natted and has an internal 192.168 ipv4 address. "	"No action is required"
<del>DCAC</del> GUESTSHELL_P4_NOTICE	5-Notice	polaris-infra	guestshell ip address(%s) of Mgmt-Intf is ignored.	"The ipv4 address configured for guestshell's Mgmt-Intf is ignored. When guestshell is on Mgmt-Intf it is natted and has an internal 192.168 ipv4 address. "	"No action is required"
<del>DCAC</del> GUESTSHELL_P6_NOTICE	5-Notice	polaris-infra	guestshell ipv6 address(%s) of Mgmt-Intf is ignored.	"The ipv6 address configured for guestshell Mgmt-Intf is ignored. When guestshell is on Mgmt-Intf it is natted and has an internal 192.168 ipv4 address. Therefore there is no need to provide a static ipv6 address to guestshell interfaces."	"No action is required"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IOXCAF6GUESTSHELLV6_NOISE</del>	5-Notice	polaris-infra	guestshell ipv6 address(%s) of Mgmt-Intf is ignored.	"The ipv6 address configured for guestshell Mgmt-Intf is ignored. When guestshell is on Mgmt-Intf it is natted and has an internal 192.168 ipv4 address. Therefore there is no need to provide a static ipv6 address to guestshell interfaces."	"No action is required"
IOXCAF6INSTALL_MSG	6-Information	polaris-infra	app-hosting:[chars]	"Message for installing an app."	"In the failed case
IOXCAF6INSTALL_MSG	6-Information	polaris-infra	app-hosting:[chars]	"Message for installing an app."	"In the failed case
IOXCAF6UPGRADE_MSG	6-Information	polaris-infra	app-hosting:[chars]	"Message for upgrading an app."	"In the failed case
IOXCAF6UPGRADE_MSG	6-Information	polaris-infra	app-hosting:[chars]	"Message for upgrading an app."	"In the failed case
<del>DMXCAF6DNACRESNFCIOSM</del>	2-Critical	ewlc-iot-gw	Cisco-DNAC configured address is IPv6	-	-
<del>DMXCAF6DNACRESNFCIOSM</del>	2-Critical	ewlc-iot-gw	Not supported: egress interface (%s) towards Cisco-DNAC server[chars] is not an SVI	Egress interface to reach the Cisco-DNAC server is restricted to be an SVI	If this message occurs
IOXN_APP3CFGFAIL	3-Error	[chars] [chars]	An unexpected condition resulted into failure to apply auto config	iox-caf	LOG_STD_ACTION
IOXN_APP3CLEANUPFAIL	3-Error	Failed to create chasfs property to indicate cleanup of previous app installation rc = [chars]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IOXN_APP-3-GSFAIL	3-Error	[chars] %u	An unexpected condition resulted into failure to start an application.	iox-caf	LOG_STD_ACTION
IOXN_APP-3-INITFAIL	3-Error	Failed to create chasfs property ioxman rc = [chars] or caf rc = [chars] is not up	-	-	-
IOXN_APP-3-IOXCONFAL	3-Error	IOX configuration change not allowed while running\n	Error in iox configuration	-	LOG_STD_ACTION
IOXN_APP-3-IOXERR	3-Error	IOx Error: [chars].	IOx general Error in handling.	iox-caf-polaris	LOG_STD_ACTION
IOXN_APP-3-IPCINITFAIL	3-Error	[chars]\n	A critical IPC initialization error occurred	iox-caf	LOG_STD_ACTION
IOXN_APP-3-MSGFAIL	3-Error	Message dispatch failure [chars].	-	-	-
IOXN_APP-3-PREVOFAIL	3-Error	Overriding previous operation [chars] iox that is taking longer than [node]	An unexpected condition resulted in failure to apply iox config	iox-caf	LOG_STD_ACTION
IOXN_APP-3-STARTUPCONFAL	3-Error	[chars] [chars]\n	Error while creating startup config	-	LOG_STD_ACTION
IOXN_APP-3-10GPHCSUPPORT	6-Information	[chars]	Informational logs to show App Gigabit Interface is not supported on 10 Slot Catalyst 9400	-	LOG_STD_ACTION
IOXN_APP-3-IOXSTARTSTOPREQ	6-Information	[chars]\n	Informational logs for IOX Start/Stop request.	-	LOG_STD_ACTION
IOXN_APP-3-LICENSECHECKNO	6-Information	[chars]\n	Informational log about license.	-	LOG_STD_ACTION
IOXN_APP-3-INITDAY0GSNO	6-Information	[chars]\n	Informational logs for Day0 GS initialization.	-	LOG_STD_ACTION
IOXN_APP-3-SLOTNOINFORMATION	6-Information	[chars] [dec]	Slot addition or removal information	-	LOG_SID_NO_ACTION



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>DNAB</del> STARTUPCHASSINFO	6-Information	[chars] [dec]/[chars]/[dec]/[dec]\n	Chassis information at startup config injection.	-	LOG_STD_NO_ACTION
<del>DNAB</del> STARTUPCNGINFO	6-Information	[chars]\n	Informational logs for startup config injection.	-	LOG_STD_ACTION
<del>IPERR</del> CLASND_SDOCE	3-Error	Failed to send [chars] message to active for [chars] [chars]	The specified synchronization message which is an internal IPC message could not be sent to the active unit in the specified run-time module. The failure most likely occurred because of a software error. Additional details on the nature of the error are specified in the message text on the console or in the system log. The system state between the active and standby units might not be properly synchronized.	-	LOG_SID_SH_TECH_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<b><u>H</u><u>M</u><u>E</u><u>R</u><u>C</u><u>A</u><u>L</u><u>E</u><u>R</u><u>C</u><u>O</u><u>N</u><u>D</u><u>I</u><u>C</u><u>O</u><u>N</u><u>D</u><u>I</u><u>C</u><u>I</u><u>O</u><u>N</u></b>	3-Error	[chars]	A run-time module could not obtain the resources that are required to complete a task. The failure most likely occurred because of a software error or a lack of system memory. Additional details on the nature of the error are specified in the message text on the console or in the system log. The system state between the active and standby units might not be properly synchronized.	-	"If you determine that this condition was caused by " "a lack of system memory reduce system activity to " "ease memory demands or if conditions warrant upgrade " "to a larger memory configuration. Otherwise " <b>LOG_SID_SH_TECH_ACTION</b>
<b><u>H</u><u>M</u><u>E</u><u>R</u><u>C</u><u>A</u><u>L</u><u>E</u><u>R</u><u>C</u><u>O</u><u>N</u><u>D</u><u>I</u><u>C</u><u>O</u><u>N</u><u>D</u><u>I</u><u>C</u><u>I</u><u>O</u><u>N</u></b>	4-Warning	Host mac-address [enet] ip-address [node]interface [chars] event_type: [chars] entry_type: [chars]	An inconsistency has been detected in the IP device tracking table for this host between active and standby	-	<b>LOG_SID_NO_ACTION</b>
<b><u>H</u><u>M</u><u>E</u><u>R</u><u>C</u><u>A</u><u>L</u><u>E</u><u>R</u><u>C</u><u>O</u><u>N</u><u>D</u><u>I</u><u>C</u><u>O</u><u>N</u><u>D</u><u>I</u><u>C</u><u>I</u><u>O</u><u>N</u></b>	4-Warning	Table already locked by process-id [dec][chars]	The IP device tracking table could not be updated due to a lock held by another process	-	<b>LOG_SID_NO_ACTION</b>
<b><u>H</u><u>H</u><u>O</u><u>S</u><u>T</u><u>I</u><u>S</u><u>S</u><u>U</u><u>C</u><u>L</u><u>I</u><u>E</u><u>N</u><u>T</u><u>U</u><u>N</u><u>T</u><u>E</u><u>R</u><u>R</u><u>O</u><u>R</u></b>	2-Critical	IP Host ISSU client failed to get buffer for message. Error: [dec] [chars]	The IP Host ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	-	"show logging and show checkpoint client"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IP_HOST_ISSU-2-INIT	2-Critical	IP Host ISSU client initialization failed to [chars]. Error: [dec] [chars]	The IP Host ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	-	LOG_STD_ACTION
PHOST_ISSU_NCOAID	2-Critical	IP Host ISSU client failed to send negotiation message. Error: [dec] [chars]	The IP Host ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	-	"show logging and show checkpoint client"
PHOST_ISSU_SESSIONCO	2-Critical	IP Host ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The IP Host ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	-	"show issu session <client_id> and " "show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PHOST_ISSU3SESSION_RECV	2-Critical	IP Host ISSU client failed to register session information. Error: [dec] [chars]	The IP Host ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	-	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
PHOST_ISSU3CAPNADSE	3-Error	IP_HOST ISSU client capability list is empty.	The IP_HOST ISSU client capability exchange list size is invalid.	-	"show issu capability entires <Client_ID>"
PHOST_ISSU3CAPNOCMABE	3-Error	IP Host ISSU client capability exchange result incompatible.	The IP Host ISSU client capability exchange have negotiated as incompatible with the peer.	-	"show issu negotiated capability <Session_ID>"
PHOST_ISSU3ANADSESSION	3-Error	IP Host ISSU client does not have a valid registered session.	The IP Host ISSU client does not have a valid registered session.	-	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
PHOST_ISSU3MSGNOTCK	3-Error	IP Host ISSU client 'Message Type [dec]' is not compatible	The IP Host ISSU client received an incompatible message from the peer device. The message cannot be processed.	-	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
IP_HOST_ISSU3MSG_SIZE	3-Error	IP Host ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The IP Host ISSU client failed to calculate the MTU for the specified message. The IP Host ISSU client is not able to send the message to the standby device.	-	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>PHOSTS_ISSU_UNREGSrv</del>	3-Error	IP Host ISSU client failed to unregister session information. Error: [dec] [chars]	The IP Host ISSU client failed to unregister session information.	-	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>PHOSTS_ISSU_TRANSFORMAL</del>	3-Error	IP Host ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The IP Host ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the IP Host state between the active device and the standby device is not identical.	-	"show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>IPSecURMENNADPARET</del>	4-Warning	Detected and dropped illegal traffic on port [chars] and vlan [dec] the non-cumulative packet dropped count is [node].	IP Port Security only permits traffic with the correct source IP to MAC\n\n binding on the port or VLAN. There may be a malicious host trying to\n\n carry out a denial of service attack using another host's source address.\n\n The illegal traffic is dropped by the IP Port Security feature.	ipsg	"Identify the source of the illegal traffic " " "and stop it."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IP_SNMP-3-SOCKET	3-Error	can't open UDP socket	The SNMP server was unable to open a port for receiving or transmitting SNMP requests. This usually happens when the SNMP server is started using the snmp-server community configuration command on a router or communication server with an interface that has no IP address configured. Another possible cause is low memory.	-	"Configure at least one interface with an IP address or specify the no snmp-server command to remove the SNMP server process. Call your technical support representative if problems persist or if it becomes necessary to add memory."
IP_SNMP-4-NOTRAPIP	4-Warning	SNMP trap source [chars] has no ip address	The user entered an snmp-server trap-source command. The interface requested for use as the source address has no ipv4 address associated with it. The SNMP trap is being sent anyway but without the source address that the user intended.	-	"There are two possible solutions. Either enter a no snmp-server trap-source command to disable the request for a specific source IP address or add an IP address to the interface referenced in the snmp-server trap-source configuration command."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IP_SNMP-4-NOIPV6	4-Warning	SNMP trap source [chars] has no ipv6 address	The user entered an snmp-server trap-source command. The interface requested for use as the source address has no ipv6 address associated with it. The SNMP trap is being sent anyway but without the source address that the user intended.	-	"There are two possible solutions. Either enter a no snmp-server trap-source command to disable the request for a specific source IP address or add an IPV6 address to the interface referenced in the snmp-server trap-source configuration command."
IP_SNMP-4-TOOBIG	4-Warning	Oversize message from [node]datagram size [node]udp length %u	An incoming SNMP packet had a length field so large that the system had to assume it was in error. This system made a correct reaction to bad external data. Since SNMP packets should originate from systems under the same administration this may indicate that the network host used to originate the SNMP request had a problem in its networking layer. Alternatively if the SNMP packet originated from outside the local administrative domain it could indicate a failed attempt at security penetration and that site should be watched more closely.	-	"If the origin is local no action is required. If the origin is determined to be malicious either contact the administrator of the originating site or install filters to prevent access by that site as circumstances warrant."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IP_SRC_GUARD_DENY_VLANS	4-Warning	Detected and dropped illegal traffic on port [chars] and vlan [dec] the non-cumulative packet dropped count is [node].	IP Source Guard only permits traffic with the correct source IP to MAC\n\n binding on the port or VLAN. There may be a malicious host trying to\n\n carry out a denial of service attack using another host's source address.\n\n The illegal traffic is dropped by the IP Source Guard feature.	ipsg	"Identify the source of the illegal traffic " "and stop it."
IP_TUNNEL2-IPC_INT	2-Critical	IPC message handler registration failure rc %u	Registering an IPC message handler for the Tunnel feature failed. This may cause the feature to not function.	qfp-ip-tunnel	"This is normally a software issue. " "The consequences are that the tunnel feature may not function. " LOG_STD_ACTION
IP_TUNNEL3-IPC_NORES	3-Error	No space for the IPC reply size %u	For a request from upper TUNNEL software stack layers it was not possible to allocate space for a reply for the specified size. The consequence of this could be a stuck monitor that cannot be established etc. In rare cases this could also affect other operations such as feature activation.	qfp-ip-tunnel	"This is normally a software issue. " LOG_SID_RECUR_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
P_TUNNEL3_IPC_OPEN_REPLY	3-Error	IPC Open Reply failed request %u	For a request from upper TUNNEL software stack layers it was not possible to open the reply buffer. The consequence of this could be a stuck monitor that cannot be established etc. In rare cases this could also affect other operations such as feature activation.	qfp-ip-tunnel	"This is normally a software issue. " LOG_STD_RECUR_ACTION
P_TUNNEL3_PROXY_IPC_MEM_EXTEND_FAILED	3-Error	QFP TUNNEL Proxy IPC VRF host mem extend failed	Extending memory failed.	qfp-tunnelkeyword:tunnel	LOG_STD_ACTION
P_TUNNEL3_PROXY_IPC_MEM_REQ_FAILED	3-Error	QFP TUNNEL Proxy IPC VRF host mem req failed	Requesting more memory failed.	qfp-tunnelkeyword:tunnel	LOG_STD_ACTION
P_TUNNEL4_PROXY_IPC_INVALID_LENGTH	4-Warning	QFP TUNNEL Proxy IPC invalid length [dec]:[dec] len [dec] flags 0x[hec] source [dec]	Cisco internal software error. QFP TUNNEL Proxy received invalid IPC message length from control plane. This message will be ignored.	qfp-tunnelkeyword:tunnel	LOG_STD_ACTION
P_PROXY_IPC_FRAGMENT_LENGTH_INVALID	3-Error	[chars]: fragment length invalid - received from [node]destined to %i	This message indicates that the router has encountered a ping-of-death sort of an attack	ios-firewall	"To prevent further attacks its highly recommended that an ACL " "be configured to drop any traffic from the sender"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
P_VR3OVLAP_FRAGMENTS	3-Error	[chars]: from the host [node]destined to %i	This message is logged whenever the router encounters overlap fragments. Overlap fragment means offset of one fragment overlaps the offset of another fragment. For example if first fragment's offset is 0 and length is 800 then the second fragments offset must be 800. If second fragment's offset is less than 800 that means the second fragment overlaps the first fragment.	ios-firewall	"This could possibly be an attack configure a static ACL to prevent " further overlap fragments from the sender"
P_VR3SYSTEM_ERROR	3-Error	[chars]: IP VFR System failure - [chars]	This message indicates the misc errors in the VFR subsystem	ios-firewall	-
P_VR4FRG_TABE_OVRFLOW	4-Warning	[chars]: the fragment table has reached its maximum threshold [dec]	This means the number of datagrams reassembled at a time reached its maximum limit increase the value of max-reassemblies using ip virtual-reassembly max-reassemblies <number>	ios-firewall	-
P_VR4TINY_FRAGMENTS	4-Warning	[chars]: from the host [node]destined to %i	This message indicates that the router is receiving tiny fragments - meaning the initial fragment does not have complete layer 4 header	ios-firewall	"This is an informational message"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
P_VRF3-CONV_FRAGMENTS	4-Warning	[chars]: Too many fragments per datagram more than [dec] - sent by [node]	This message indicates the datagram being reassembled has received more fragments than its threshold value	ios-firewall	"Check if the fragments received are from a genuine source if so " "increase the value of max-fragments using the CLI " "ip virtual-reassembly max-fragments <number>"
IP_VRF3-MAX_VRF	3-Error	[chars]	Related to MAX number of VRFs	vrfinfra	LOG_STD_ACTION
IP_VRF3-MAX_VRF	3-Error	[chars]	Related to MAX number of VRFs	vrfinfra	LOG_STD_ACTION
IP_VRF3-RD_SYNC_ERR	3-Error	Failed RD sync operation for VRF id 0x[node] [chars]	An internal error occurred syncing data between the active and standby	vrfinfra	LOG_STD_ACTION
IP_VRF3-RD_SYNC_ERR	3-Error	Failed RD sync operation for VRF id 0x[node] [chars]	An internal error occurred syncing data between the active and standby	vrfinfra	LOG_STD_ACTION
IP_VRF3-TREE_INVALID	3-Error	Internal data structure has invalid entry: [chars]	An internal data structure has an invalid entry	vrfinfra	LOG_STD_ACTION
IP_VRF3-TREE_INVALID	3-Error	Internal data structure has invalid entry: [chars]	An internal data structure has an invalid entry	vrfinfra	LOG_STD_ACTION
P_VRF3-VRF_AF_ACTIVATION_ERR	3-Error	Unable to activate VRF support for address family [chars]	The VRF subsystem was unable to initialize support for the indicated address family	vrfinfra	LOG_STD_ACTION
P_VRF3-VRF_AF_ACTIVATION_ERR	3-Error	Unable to activate VRF support for address family [chars]	The VRF subsystem was unable to initialize support for the indicated address family	vrfinfra	LOG_STD_ACTION
P_VRF3-VRF_AF_ENABLE_ERR	3-Error	Failed to enable address-family [chars] in VRF [chars]: [chars]	Failed to enable AF in a VRF	vrfinfra	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>P_VRF_AF_ENABLE_ERR</del>	3-Error	Failed to enable address-family [chars] in VRF [chars]: [chars]	Failed to enable AF in a VRF	vrfinfra	LOG_STD_ACTION
<del>P_VRF_VRF_CCA_ERR</del>	3-Error	VRF-CCA: [chars]	VRF manager encountered a command inheritance error	vrfinfra	LOG_STD_ACTION
<del>P_VRF_VRF_CCA_ERR</del>	3-Error	VRF-CCA: [chars]	VRF manager encountered a command inheritance error	vrfinfra	LOG_STD_ACTION
<del>P_VRF_CMN_VAL_PARAM</del>	3-Error	[chars]	Invalid parameter.	vrfinfra	LOG_STD_ACTION
<del>P_VRF_CMN_VAL_PARAM</del>	3-Error	[chars]	Invalid parameter.	vrfinfra	LOG_STD_ACTION
<del>P_VRF_CNFG_CHK_ERR</del>	3-Error	Failed to acquire interface configuration lock	VRF interface association failed	vrfinfra	LOG_STD_ACTION
<del>P_VRF_CNFG_CHK_ERR</del>	3-Error	Failed to acquire interface configuration lock	VRF interface association failed	vrfinfra	LOG_STD_ACTION
<del>P_VRF_VRF_CREATE_FAIL</del>	3-Error	[chars]	IP VRF creation failed.	vrfinfra	LOG_STD_ACTION
<del>P_VRF_VRF_CREATE_FAIL</del>	3-Error	[chars]	IP VRF creation failed.	vrfinfra	LOG_STD_ACTION
<del>P_VRF_CHK_CNTR_ERR</del>	3-Error	Failed to get lock count for VRF [chars]: [chars]	Failed to lock count from a VRF	vrfinfra	LOG_STD_ACTION
<del>P_VRF_CHK_CNTR_ERR</del>	3-Error	Failed to get lock count for VRF [chars]: [chars]	Failed to lock count from a VRF	vrfinfra	LOG_STD_ACTION
<del>P_VRF_VRF_HDMF_ERR</del>	3-Error	HDVRF: [chars]	HDVRF related error messages	vrfinfra	LOG_STD_ACTION
<del>P_VRF_VRF_HDMF_ERR</del>	3-Error	HDVRF: [chars]	HDVRF related error messages	vrfinfra	LOG_STD_ACTION
<del>P_VRF_VRF_IDN_VAL_ERR</del>	3-Error	Invalid VRF id 0x[hec] in [chars]	VRF ID Invalid	vrfinfra	LOG_STD_ACTION
<del>P_VRF_VRF_IDN_VAL_ERR</del>	3-Error	Invalid VRF id 0x[hec] in [chars]	VRF ID Invalid	vrfinfra	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>P_VRF3-VRF_IFLIST_ADD</del>	3-Error	Error adding [chars] to interface list of VRF [chars]	VRF interface association failed	vrfinfra	LOG_STD_ACTION
<del>P_VRF3-VRF_IFLIST_ADD</del>	3-Error	Error adding [chars] to interface list of VRF [chars]	VRF interface association failed	vrfinfra	LOG_STD_ACTION
<del>P_VRF3-VRF_IFLIST_DEL</del>	3-Error	Error removing [chars] from interface list of VRF [chars]	VRF interface disassociation failed	vrfinfra	LOG_STD_ACTION
<del>P_VRF3-VRF_IFLIST_DEL</del>	3-Error	Error removing [chars] from interface list of VRF [chars]	VRF interface disassociation failed	vrfinfra	LOG_STD_ACTION
<del>P_VRF3-VRF_IFLIST_NOTEMPTY</del>	3-Error	VRF [chars] iflist is not empty in [chars]	VRF iflist is not empty	vrfinfra	LOG_STD_ACTION
<del>P_VRF3-VRF_IFLIST_NOTEMPTY</del>	3-Error	VRF [chars] iflist is not empty in [chars]	VRF iflist is not empty	vrfinfra	LOG_STD_ACTION
<del>P_VRF3-VRF_MRF_ERROR</del>	3-Error	[chars]	VRF infrastructure failure for Platform VRFs.	vrfinfra	LOG_STD_ACTION
<del>P_VRF3-VRF_MRF_ERROR</del>	3-Error	[chars]	VRF infrastructure failure for Platform VRFs.	vrfinfra	LOG_STD_ACTION
<del>P_VRF3-VRF_LOCK_ERROR</del>	3-Error	Failed to initialize lock manager context for vrf [chars][dec] with error [chars]	VRF lock manager initialization failure	vrfinfra	LOG_STD_ACTION
<del>P_VRF3-VRF_LOCK_ERROR</del>	3-Error	Failed to initialize lock manager context for vrf [chars][dec] with error [chars]	VRF lock manager initialization failure	vrfinfra	LOG_STD_ACTION
<del>P_VRF3-VRF_LOCK_ERROR</del>	3-Error	[chars]	VRF lock manager initialization failure	vrfinfra	LOG_STD_ACTION
<del>P_VRF3-VRF_LOCK_ERROR</del>	3-Error	[chars]	VRF lock manager initialization failure	vrfinfra	LOG_STD_ACTION
<del>P_VRF3-VRF_LOCK_ERROR</del>	3-Error	Failed to lock VRF [chars]: [chars]	Failed to lock a VRF	vrfinfra	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PVRM</del> VRF_LOCK_ERRCR	3-Error	Failed to lock VRF [chars]: [chars]	Failed to lock a VRF	vrfinfra	LOG_STD_ACTION
<del>PVRM</del> VRF_MUDEFERRCR	3-Error	Failed to update multicast multi-topology mode for address-family [chars] in VRF [chars]: [chars]	Failed to update multicast multi-topology mode in a VRF	vrfinfra	LOG_STD_ACTION
<del>PVRM</del> VRF_MUDEFERRCR	3-Error	Failed to update multicast multi-topology mode for address-family [chars] in VRF [chars]: [chars]	Failed to update multicast multi-topology mode in a VRF	vrfinfra	LOG_STD_ACTION
<del>PVRM</del> VRF_RDFERRCR	3-Error	Failed to delete RD value from database	Could not delete the RD association to the VRF in an internal database. The RD value may not be re-usable.	vrfinfra	LOG_STD_ACTION
<del>PVRM</del> VRF_RDFERRCR	3-Error	Failed to delete RD value from database	Could not delete the RD association to the VRF in an internal database. The RD value may not be re-usable.	vrfinfra	LOG_STD_ACTION
<del>PVRM</del> VRF_SUBSEMFAILD	3-Error	VRF subsystem initialization failed: [chars]	The VRF subsystem could not be initialized	vrfinfra	LOG_STD_ACTION
<del>PVRM</del> VRF_SUBSEMFAILD	3-Error	VRF subsystem initialization failed: [chars]	The VRF subsystem could not be initialized	vrfinfra	LOG_STD_ACTION
<del>PVRM</del> VRF_TABIDNCSENT	3-Error	[chars]	VRF tableid inconsistent between two RPs.	vrfinfra	LOG_STD_ACTION
<del>PVRM</del> VRF_TABIDNCSENT	3-Error	[chars]	VRF tableid inconsistent between two RPs.	vrfinfra	LOG_STD_ACTION
<del>PVRM</del> VRF_UNLOCKERRCR	3-Error	Failed to unlock VRF [chars]: [chars]	Failed to unlock a VRF	vrfinfra	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PVRARCONFUNLOCKERR</del>	3-Error	Failed to unlock VRF [chars]: [chars]	Failed to unlock a VRF	vrfinfra	LOG_STD_ACTION
<del>PVRARCONFUNLOCKDELA</del>	4-Warning	Unexpected delay while acquiring interface configuration lock	Unexpected delay in VRF interface association	vrfinfra	LOG_SID_NO_ACTION
<del>PVRARCONFUNLOCKDELA</del>	4-Warning	Unexpected delay while acquiring interface configuration lock	Unexpected delay in VRF interface association	vrfinfra	LOG_SID_NO_ACTION
<del>PVRARCONFUNLOCKDELD</del>	4-Warning	Ignored interface configuration lock [node]times	Processing is continuing without obtaining the VRF interface configuration lock	vrfinfra	LOG_SID_NO_ACTION
<del>PVRARCONFUNLOCKDELD</del>	4-Warning	Ignored interface configuration lock [node]times	Processing is continuing without obtaining the VRF interface configuration lock	vrfinfra	LOG_SID_NO_ACTION
<del>PVRARCONFUNLOCKKLEN</del>	4-Warning	Acquired interface configuration lock	Unexpected delay in VRF interface association	vrfinfra	LOG_SID_NO_ACTION
<del>PVRARCONFUNLOCKKLEN</del>	4-Warning	Acquired interface configuration lock	Unexpected delay in VRF interface association	vrfinfra	LOG_SID_NO_ACTION
IP-3-BADIPALIGN	3-Error	Invalid alignment in packet for IP. [chars]=[hex]	The packet data structure is misaligned. This condition may result in a small amount of overhead in processing IP traffic.	-	"Enter a show hardware command and report the output along with this error message to your technical support representative."
IP-3-BADSRUTE	3-Error	Improper source route. Length [dec] Ptr [dec]	A hardware or software error occurred.	-	LOG_STD_ACTION
IP-3-CNTRFULL	3-Error	IP counter block is full setting protocol [dec]	An internal software error occurred.	-	LOG_SID_SH_TECH_ACTION





Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IP-3-MAXIRDP	3-Error	Attempt to send IRDP to proxies exceeding configurable limit: [dec] interface: [chars] secondary = [dec] proxy = [dec]\n	The sum of configured secondary addresses and configured proxy addresses exceeds the number of total addresses that the IRDP can support in its implementation.	-	"Reduce the number of either the secondary IP addresses or proxy" addresses configured for the interface."
IP-3-NONALIAS	3-Error	non-alias address [node]in table [chars] found in IP alias list	The IP alias list holds IP aliases only but non-alias entries are found.	ip	LOG_STD_ACTION
IP-3-NOOUTINTF	3-Error	Output interface not available. source address: [node]destination address: [node]routing type: %u	The output interface for this packet is not set	ip	LOG_STD_ACTION
IP-3-SBINIT	3-Error	Error initializing [chars] subblock data structure. [chars]	Initialization of the specified subblock data structure could not be accomplished.	ip	LOG_STD_ACTION
IP-4-CLASS	4-Warning	Bad IP address and mask [node]m in class_resolve	An internal software error occurred.	-	LOG_STD_ACTION
IP-4-DUPADDR	4-Warning	Duplicate address [node]on [chars] sourced by [enet]	Another system is using your IP address.	-	"Change the IP address of one of the two systems."
IP-4-IPPOOLS	4-Warning	Detected a local pool and a DHCP pool with the same name: [chars]	A local pool and a DHCP pool have been configured with the same name. This may cause conflict during address allocations.	-	"Change the name of one of the two pools"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IP-4-UNICASTRPF	4-Warning	IP unicast reverse-path check disabled on [chars]	The IP verify unicast reverse-path feature was disabled because CEF was disabled either through configuration or due to an internal error.	-	LOG_SIDSH_TECH_ACTION
IP-4-ZERO_ADDR	4-Warning	Zero MAC address for [node]in ARP cache	An entry in the ARP cache have a NULL MAC address	-	"If this message recurs call your technical support\n\n representative for assistance."
IP-5-ACL	5-Notice	[chars]	Error occured in IP access checks.	-	LOG_SIDSH_TECH_ACTION
IP-5-TURBOACL	5-Notice	[chars]	Error occured in intialisation of TURBOACL.	-	show process
IP-5-WEBINST_COMP	5-Notice	Selected IP address %i	A hardware or software error occurred.	-	LOG_STD_ACTION
IP-5-WEBINST_KILL	5-Notice	Terminating DNS process	A hardware or software error occurred.	-	LOG_STD_ACTION
IP-5-WEBINST_RESP	5-Notice	Sending DNS response to [node]request was for %i	-	-	-
IP-5-WEBINST_START	5-Notice	Attempting web install from host %i	A hardware or software error occurred.	-	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
IP-6-L2MCASTDROP	6-Information	Layer 2 Multicast packet detected and dropped src=[node]dst=%i	Layer 2 Multicast packet with Layer3 Unicast Destination was dropped.	ip	LOG_SID_NO_ACTION
IP-6-PHYBCASTDROP	6-Information	Physical broadcast packet detected and dropped src=[node]dst=%i	Physical broadcast packet was dropped.	ip	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IPACCESS2NOMEMORY</del>	2-Critical	Alloc fail for acl-config buffer. Disabling distributed mode on lc	Unable to malloc a buffer to send access-list configuration down\n\n to linecards.	ip-acl	"Enter a show chunks command and report the output along with this\n\n error message to your technical support representative."
<del>IPACCESS2WRONGREQUEST</del>	2-Critical	Invalid request to allocate chunk of size [dec]	We only allow acl chunks of max size <del>IPACCESSLARGECHUNKSZ</del>	ip-acl	" "
<del>IPACCESS2WRONGSIZE</del>	2-Critical	Incorrect length acl ipc xdr of type=[chars] len=[dec] received	Received an acl message of the wrong size for that type	ip-acl	"Report this error message to your tech support representative."
<del>IPACCESSACLIMEXCEED</del>	3-Error	Exceeding the max aces[dec] per ACL configurable	Error is occurred when aces limit per ACL is exceeding the ACL ace limit set.	ip-acl	LOG_STD_ACTION
<del>IPACCESSACLIMEXCHDD</del>	3-Error	Exceeding max acl limit[dec] configurable failed to create ACL	-	-	-
<del>IPACCESSGLOBALACEIMEXCEED</del>	3-Error	Exceeding the global max ace limit configurable[dec]	Error is occurred when the global ace limit is exceeded than the global ace limit set.	ip-acl	LOG_STD_ACTION
<del>IPACCESS3SANITY_ERROR</del>	3-Error	[chars]	A sanity error occurred while the ACL was being configured on the RP or while the ACL configuration was being downloaded to the line card.	ip-acl	LOG_STD_ACTION
<del>IPACCESS3XDRREGISTRATION</del>	3-Error	Failed to register [chars] XDR client due to [chars]	Failure to register the said XDR client.	ip-acl	"Copy the message exactly as it appears and report it to your " "technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPACCESS4INVALIDACL	4-Warning	Invalid ACL field: [chars] is [dec]	An internal software error occurred.	ip-acl	"Copy the message exactly as it appears and report it to your\n\ technical support representative."
IPAD-3-BLOCKEMPTY	3-Error	Block does not exist.	Try to access a block that does not exist.	ip	""
IPAD3CTXIMASKTYPE	3-Error	Search context mask type or sub type not recognized: [dec] [dec]. Search\n\ context last found IP address [node]search context target IP address [node]	An internal IPAD error occurred. Search contex mask type not defined.	ip	""
IPAD-3-LISTTYPE	3-Error	Double-linked list DLL type not recognized: [dec].	An internal IPAD error occurred. DLL type not defined.	ip	""
IPAD-3-MEMORY	3-Error	Can not allocate memory for a block in IPAD: [chars]	The operation may have failed due to lack of memory.	ip	""
IPAD-3-TRIM	3-Error	Access on level [dec] to the left of index [dec].	IPAD is not trimmed properly.	ip	""
IPRM3CWRNGIRCE	4-Warning	ewlc-app-infra	Warning	-	-
IPRM3CWRNGIRCE	4-Warning	ewlc-app-infra	Warning	-	-
IPLOG3CLOGWRITEAID	3-Error	iosxe-binos-utils	ipc log write %u bytes failed because[chars]	"An internal logging mechanism failed to write a message."	"No action is required. However
IPRSP3BUS3CARDERR	3-Error	[chars]	An IPC card has registered itself to the IPC master twice. The card malfunctioned and its IPC is not active.	-	"Copy the error message exactly as it appears and report it to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPC_RSP_CBUS3INNUM	3-Error	[chars] [dec]	The IPC application tried to send a message that was larger than IPC could handle. The message was not transmitted.	-	"Copy the error message exactly as it appears and report it to your technical support representative."
IPC_RSP_CBUS3MSGERR	3-Error	[chars] [dec]	System controller Bengal has reported an error/event	RSP	"Read error reports. SBE are generally not fatal. Most others are"
IPC_RSP_CBUS3NOBUF	3-Error	[chars]	The IPC ran out of memory device MEMD buffers.	-	"Reduce the number of applications currently running on the IPC. Copy the error message exactly as it appears and report it to your technical support representative."
IPC_RSP_CBUS3NOHWQ	3-Error	Hardware queue for card at slot [dec] not found	IPC messages cannot be transmitted due to a missing hardware queue. The messages were discarded and subsequent messages will not be transmitted to that card.	-	"Copy the error message exactly as it appears and report it to your technical support representative."
IPC_RSP_CBUS3SEATERR	3-Error	[chars] [dec]	The ID associated with an IPC card is either missing duplicated or cannot be created.	-	"Copy the error message exactly as it appears and report it to your technical support representative."
IPC_TEST3SUBTYPE	3-Error	CPP IPC TEST Proxy subtype %u	IPC test proxy failed because of receiving invalid sub-type.	cpp-ucode	LOG_STD_ACTION
IPC_TEST3MEMALLOC	3-Error	CPP IPC TEST Proxy mem alloc	IPC test proxy failed because the GPM allocation failed.	cpp-ucode	-
IPC_TEST3REPLY_FAILED	3-Error	CPP IPC TEST Proxy send reply	IPC test proxy failed because the reply failed to send.	cpp-ucode	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
IPC-2-BADSHARE	2-Critical	Bad refcount in [chars] ptr=[hec] count=[dec]	A reference count is used to track the usage of IPC messages. A function increments the count when it begins to use a message and decrements it when it finishes. When the count becomes zero the data structure is freed. This message indicates that when the count was accessed it was found to be zero or negative.	ipc	"show tech-support ipc"
IPC-2-BADSHARE	2-Critical	Bad refcount in [chars] ptr=[hec] count=[dec]	A reference count is used to track the usage of IPC messages. A function increments the count when it begins to use a message and decrements it when it finishes. When the count becomes zero the data structure is freed. This message indicates that when the count was accessed it was found to be zero or negative.	ipc	"show tech-support ipc"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPC-2-BADSHARE	2-Critical	Bad refcount in [chars] ptr=[hec] count=[dec]	A reference count is used to track the usage of IPC messages. A function increments the count when it begins to use a message and decrements it when it finishes. When the count becomes zero the data structure is freed. This message indicates that when the count was accessed it was found to be zero or negative.	ipc	"show tech-support ipc"
IPC-2-CANT_SEND	2-Critical	[chars]: Cannot send IPC message from 0x[hec] to 0x[hec]: info 0x[hec]	An error occurred when sending IPC message	ipc	"show tech-support ipc"
IPC-2-CANT_SEND	2-Critical	[chars]: Cannot send IPC message from 0x[hec] to 0x[hec]: info 0x[hec]	An error occurred when sending IPC message	ipc	"show tech-support ipc"
IPC-2-CANT_SEND	2-Critical	[chars]: Cannot send IPC message from 0x[hec] to 0x[hec]: info 0x[hec]	An error occurred when sending IPC message	ipc	"show tech-support ipc"
IPC-2-INITFAILED	2-Critical	[chars]	IPC Resource Management Initialization failed	ipc	"This is a critical failure for IPC functionality." "Capture 'sh version' and contact TAC"
IPC-2-INITFAILED	2-Critical	[chars]	IPC Resource Management Initialization failed	ipc	"This is a critical failure for IPC functionality." "Capture 'sh version' and contact TAC"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPC-2-INITFAILED	2-Critical	[chars]	IPC Resource Management Initialization failed	ipc	"This is a critical failure for IPC functionality." "Capture 'sh version' and contact TAC"
IPC-2-INVALIDSEAT	2-Critical	Invalid IPC Seat 0x[hec].	Some operation is attempted on a seat ID not known to IPC	ipc	"show tech-support ipc"
IPC-2-INVALIDSEAT	2-Critical	Invalid IPC Seat 0x[hec].	Some operation is attempted on a seat ID not known to IPC	ipc	"show tech-support ipc"
IPC-2-INVALIDZONE	2-Critical	Invalid IPC Zone 0x[hec].	Some operation is attempted on a zone ID not known to IPC	ipc	"show tech-support ipc"
IPC-2-INVALIDZONE	2-Critical	Invalid IPC Zone 0x[hec].	Some operation is attempted on a zone ID not known to IPC	ipc	"show tech-support ipc"
IPC-2-INVALIDZONE	2-Critical	Invalid IPC Zone 0x[hec].	Some operation is attempted on a zone ID not known to IPC	ipc	"show tech-support ipc"
IPC-2-LOCK	2-Critical	Lock done a deleted element 0x[hec]	An internal inconsistency was found in some IPC data structures.	ipc	"show tech-support ipc"
IPC-2-LOCK	2-Critical	Lock done a deleted element 0x[hec]	An internal inconsistency was found in some IPC data structures.	ipc	"show tech-support ipc"
IPC-2-LOCK	2-Critical	Lock done a deleted element 0x[hec]	An internal inconsistency was found in some IPC data structures.	ipc	"show tech-support ipc"
IPC-2-NO_ACK_HANDLER	2-Critical	No handler for ACK with data for port [hec].	The IPC receiver appended data to an ACK. But at the sender there is no corresponding ACK handler.	ipc	"show tech-support ipc"



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
IPC2NO_ACK_HANDLER	2-Critical	No handler for ACK with data for port [hec].	The IPC receiver appended data to an ACK. But at the sender there is no corresponding ACK handler.	ipc	"show tech-support ipc"
IPC2NO_ACK_HANDLER	2-Critical	No handler for ACK with data for port [hec].	The IPC receiver appended data to an ACK. But at the sender there is no corresponding ACK handler.	ipc	"show tech-support ipc"
IPC-2-NOBLOCK	2-Critical	Invalid blocking operation in interrupt context or process blocking is disabled: [chars] [hec]	Debug Message. An IPC application has attempted an IPC action which has been prohibited from being performed at interrupt level or when process has disabled blocking	ipc	show ipc ports
IPC-2-NOBLOCK	2-Critical	Invalid blocking operation in interrupt context or process blocking is disabled: [chars] [hec]	Debug Message. An IPC application has attempted an IPC action which has been prohibited from being performed at interrupt level or when process has disabled blocking	ipc	show ipc ports
IPC-2-NOBOOL	2-Critical	Boolean NULL in IPC message: [hec].	A watched boolean that was allocated while sending the message is found to be NULL when an ACK arrived.	ipc	show ipc status
IPC-2-NOBOOL	2-Critical	Boolean NULL in IPC message: [hec].	A watched boolean that was allocated while sending the message is found to be NULL when an ACK arrived.	ipc	show ipc status

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
IPC-2-NOBOOL	2-Critical	Boolean NULL in IPC message: [hec].	A watched boolean that was allocated while sending the message is found to be NULL when an ACK arrived.	ipc	show ipc status
IPC-2-NODISPATCH	2-Critical	Message for [hec].[hec] has no receive queue or dispatch routine	The IPC user failed to provide any means of handling the received message.	ipc	show ipc ports
IPC-2-NODISPATCH	2-Critical	Message for [hec].[hec] has no receive queue or dispatch routine	The IPC user failed to provide any means of handling the received message.	ipc	show ipc ports
IPC-2-NODISPATCH	2-Critical	Message for [hec].[hec] has no receive queue or dispatch routine	The IPC user failed to provide any means of handling the received message.	ipc	show ipc ports

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPC-2-NOMEM	2-Critical	No memory available for [chars]	The IPC protocol subsystem could not obtain the memory it needed.	ipc	<p>"If this error message recurs attempt to reduce memory usage by "</p> <p>"reducing the number of router features or interfaces enabled. "</p> <p>"Alternatively add more memory. "</p> <p>"\n\nTo display total memory usage for a router enter "</p> <p>"&lt;CmdBold&gt;show memory summary&lt;noCmdBold&gt; at the privileged "</p> <p>"command line prompt. To display buffer usage enter "</p> <p>"&lt;CmdBold&gt;show buffers&lt;noCmdBold&gt; at the prompt. To display IPC " "usage enter</p> <p>&lt;CmdBold&gt;show ipc queue&lt;noCmdBold&gt; at the prompt"</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPC-2-NOMEM	2-Critical	No memory available for [chars]	The IPC protocol subsystem could not obtain the memory it needed.	ipc	<p>"If this error message recurs attempt to reduce memory usage by "</p> <p>"reducing the number of router features or interfaces enabled. "</p> <p>"Alternatively add more memory. "</p> <p>"\n\nTo display total memory usage for a router enter "</p> <p>"&lt;CmdBold&gt;show memory summary&lt;noCmdBold&gt; at the privileged "</p> <p>"command line prompt. To display buffer usage enter "</p> <p>"&lt;CmdBold&gt;show buffers&lt;noCmdBold&gt; at the prompt. To display IPC " "usage enter "</p> <p>&lt;CmdBold&gt;show ipc queue&lt;noCmdBold&gt; at the prompt"</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPC-2-NOMEM	2-Critical	No memory available for [chars]	The IPC protocol subsystem could not obtain the memory it needed.	ipc	"If this error message recurs attempt to reduce memory usage by " "reducing the number of router features or interfaces enabled. " "Alternatively add more memory. " "\n\nTo display total memory usage for a router enter " "<CmdBold>show memory summary<noCmdBold> at the privileged " "command line prompt. To display buffer usage enter " "<CmdBold>show buffers<noCmdBold> at the prompt. To display IPC " "usage enter <CmdBold>show ipc queue<noCmdBold> at the prompt"
IPC-2-ONINT	2-Critical	Invalid operation at interrupt level: [chars] [hec]	Debug Message. An IPC application has attempted an IPC action which has been prohibited from being performed at the interrupt level.	ipc	show ipc ports
IPC-2-ONINT	2-Critical	Invalid operation at interrupt level: [chars] [hec]	Debug Message. An IPC application has attempted an IPC action which has been prohibited from being performed at the interrupt level.	ipc	show ipc ports

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPC-2-ONINT	2-Critical	Invalid operation at interrupt level: [chars] [hec]	Debug Message. An IPC application has attempted an IPC action which has been prohibited from being performed at the interrupt level.	ipc	show ipc ports
IPC-2-PRECLOSE	2-Critical	IPC port pre-closure overflow : 0x[hec] : 0x[hec]	An application attempts to close an ipc port when there are messages pending in retransmit queue and ipc defer table overflows.	ipc	"show ipc ports open"
IPC-2-PRECLOSE	2-Critical	IPC port pre-closure overflow : 0x[hec] : 0x[hec]	An application attempts to close an ipc port when there are messages pending in retransmit queue and ipc defer table overflows.	ipc	"show ipc ports open"
IPC-2-PRECLOSE	2-Critical	IPC port pre-closure overflow : 0x[hec] : 0x[hec]	An application attempts to close an ipc port when there are messages pending in retransmit queue and ipc defer table overflows.	ipc	"show ipc ports open"
<del>SPiOSdIPCINITAID</del>	2-Critical	SPI IOSd IPC init failed - [chars].	SPI IOSd IPC initialization failed	spi	"show tech-support ipc"
<del>SPiOSdIPCINITAID</del>	2-Critical	SPI IOSd IPC init failed - [chars].	SPI IOSd IPC initialization failed	spi	"show tech-support ipc"
IPC-2-TEST	2-Critical	IPC test: [chars]	The IPC test routines.	ipc	"IPC test only - no action required."
IPC-2-TEST	2-Critical	IPC test: [chars]	The IPC test routines.	ipc	"IPC test only - no action required."
IPC-2-TEST	2-Critical	IPC test: [chars]	The IPC test routines.	ipc	"IPC test only - no action required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPC-2-UNLOCK	2-Critical	Unlock done on already unlocked element 0x[hec]	An internal inconsistency was found in some IPC data structures.	ipc	"show tech-support ipc"
IPC-2-UNLOCK	2-Critical	Unlock done on already unlocked element 0x[hec]	An internal inconsistency was found in some IPC data structures.	ipc	"show tech-support ipc"
IPC-2-UNLOCK	2-Critical	Unlock done on already unlocked element 0x[hec]	An internal inconsistency was found in some IPC data structures.	ipc	"show tech-support ipc"
IPC-3-ACKALLOC	3-Error	couldn't send to [chars]	Allocating an IPC acknowledgement failed with the likely result that some software on the specified source node will timeout.	cpp-ucode	LOG_STD_ACTION
IPC-3-ACKSEND	3-Error	sending to [chars]: [chars]	Sending an acknowledgement reply to the specified source failed for the given reason with the likely result that some software on the source will timeout.	cpp-ucode	LOG_STD_ACTION
IPC-3-APP_IPC_FAIL	3-Error	[chars] failed. IPC Error: [chars] %u	IPC Application Process failed to do some operation with the IPC Layer. The message includes the error code from ipc layer	ipc	show ipc status
IPC-3-APP_IPC_FAIL	3-Error	[chars] failed. IPC Error: [chars] %u	IPC Application Process failed to do some operation with the IPC Layer. The message includes the error code from ipc layer	ipc	show ipc status

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPC-3-APP_IPC_FAIL	3-Error	[chars] failed. IPC Error: [chars] %u	IPC Application Process failed to do some operation with the IPC Layer. The message includes the error code from ipc layer	ipc	show ipc status
IPC-3-BADLENGTH	3-Error	IPC length [node]> received length [node]to sub device [node]with fc code %u	The length field in an IPC packet was larger than the number of bytes actually in the packet.	cpp-ucode	LOG_STD_ACTION
IPC-3-BADMSG	3-Error	received type %u	An IPC message was received containing an invalid message type.	cpp-ucode	LOG_STD_ACTION
IPC-3-BADRSTATE	3-Error	Received ICP msg state %u	Received IPC message while connection not ACTIVE	cpp-ucode	LOG_STD_ACTION
IPC-3-BADSEQ	3-Error	got [node]expected [node]from [chars]	-	-	-
IPC-3-CNTALLOC	3-Error	IPC control msg subtype %u	Allocating an IPC control message failed.	cpp-ucode	LOG_STD_ACTION
IPC-3-CNTSEND	3-Error	sending ICP msg subtype [node]to [chars]: [chars]	Sending an ICP control message to the specified source failed for the given reason. Message should will be retried	cpp-ucode	LOG_STD_ACTION
IPC-3-CONTROL	3-Error	Unhandled message subtype %u	An IPC control message was received containing an unrecognized type.	cpp-ucode	LOG_STD_ACTION
IPC-3-CREATEFAIL	3-Error	IPC CREATE msg failed invalid [chars] %u	IPC Create message had invalid parameter	cpp-ucode	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPC-3-DELETED	3-Error	Attempt to delete an IPC message 0x[hec] a second time	-	-	-
IPC-3-DELETED	3-Error	Attempt to delete an IPC message 0x[hec] a second time	-	-	-
IPC-3-DELETED	3-Error	Attempt to delete an IPC message 0x[hec] a second time	-	-	-
IPC-3-GIANT	3-Error	Request for giant IPC packet denied. Request size = [dec]	Someone requested a message that was too large for the IPC system	ipc	"show tech-support ipc"
IPC-3-GIANT	3-Error	Request for giant IPC packet denied. Request size = [dec]	Someone requested a message that was too large for the IPC system	ipc	"show tech-support ipc"
IPC-3-GIANT	3-Error	Request for giant IPC packet denied. Request size = [dec]	Someone requested a message that was too large for the IPC system	ipc	"show tech-support ipc"
IPC3-INIT_IN_PROGRESS	3-Error	IPC Message received before init complete	Cannot process IPC packet until init stage is complete	-	LOG_STD_ACTION
IPC-3-ISSU_API_ERR	3-Error	[chars] failed with error code [dec]	ISSU API failed to do some operation for IPC layer The message includes the error code from ISSU library	os-ipc	show issu client
IPC-3-ISSU_API_ERR	3-Error	[chars] failed with error code [dec]	ISSU API failed to do some operation for IPC layer The message includes the error code from ISSU library	os-ipc	show issu client
IPC-3-ISSU_API_ERR	3-Error	[chars] failed with error code [dec]	ISSU API failed to do some operation for IPC layer The message includes the error code from ISSU library	os-ipc	show issu client

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPC-3-ISSU_ERROR	3-Error	[chars] failed with error code [dec] for seat [hec]	ISSU API failed to do some operation for IPC layer The message includes the error code from ISSU library	os-ipc	show issu fsm
IPC-3-ISSU_ERROR	3-Error	[chars] failed with error code [dec] for seat [hec]	ISSU API failed to do some operation for IPC layer The message includes the error code from ISSU library	os-ipc	show issu fsm
IPC-3-ISSU_ERROR	3-Error	[chars] failed with error code [dec] for seat [hec]	ISSU API failed to do some operation for IPC layer The message includes the error code from ISSU library	os-ipc	show issu fsm
IPC-3-LOG_ERR	3-Error	[chars] CPP QoS Client Proxy failure	QoS proxy failed because of receiving invalid sub-type or failed to allocate ipc response buffer.	cpp-ucode	LOG_STD_ACTION
IPC-3-LOWBUFF	3-Error	The main IPC message header cache below application reserve count [dec].	-	-	-
IPC-3-LOWBUFF	3-Error	The main IPC message header cache below application reserve count [dec].	-	-	-
IPC-3-LOWBUFF	3-Error	The main IPC message header cache below application reserve count [dec].	-	-	-
IPC-3-NOBUFF	3-Error	The [chars] IPC message header cache is empty	The specified IPC message header cache is empty and an incoming IPC message may be dropped as a result.	ipc	"show tech-support ipc"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPC-3-NOBUFF	3-Error	The [chars] IPC message header cache is empty	The specified IPC message header cache is empty and an incoming IPC message may be dropped as a result.	ipc	"show tech-support ipc"
IPC-3-NOBUFF	3-Error	The [chars] IPC message header cache is empty	The specified IPC message header cache is empty and an incoming IPC message may be dropped as a result.	ipc	"show tech-support ipc"
IPC-3-NOHANDLER	3-Error	message type [node]from [chars]	An IPC message was received containing an unrecognized type.	cpp-ucode	LOG_STD_ACTION
IPC-3-NOSRC	3-Error	packet from id %u	Received an IPC packet from an unrecognized source node with the specified ID.	cpp-ucode	LOG_STD_ACTION
IPC-3-NULL_SESSION	3-Error	unable to process ipc mcast message - no member session for dest_port_info [node]group 0x[hec] session [dec] For appclass [chars]	IPC Mcast message has been received for a NULL session	ipc	show ipc mcast session verbose
IPC-3-NULL_SESSION	3-Error	unable to process ipc mcast message - no member session for dest_port_info [node]group 0x[hec] session [dec] For appclass [chars]	IPC Mcast message has been received for a NULL session	ipc	show ipc mcast session verbose
IPC-3-PGENALLOC	3-Error	[node]bytes	Allocating a packet of the specified size failed.	cpp-ucode	LOG_STD_ACTION
IPC-3-PGENSEND	3-Error	[chars]	Sending a generated packet failed for the specified reason.	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PROXY_IP_ALLOC_FAIL	3-Error	Allocate IPC message by [chars] failed - [chars]	Allocation of an IPC packet buffer by proxy failed.	cpp-ucode	LOG_STD_ACTION
PROXY_IP_SEND_FAIL	3-Error	Attempt to send IPC message by [chars] failed with [chars]	Transmission of an IPC message by proxy failed.	cpp-ucode	LOG_STD_ACTION
IPC-3-REPLY	3-Error	unexpected from [chars]	An unexpected reply was received from the specified source.	cpp-ucode	LOG_STD_ACTION
IPC-3-TOOBIG	3-Error	message type [node]length [node]offset [hec] from [chars]	The length field in an IPC message was found to extend beyond the packet that contained it.	cpp-ucode	LOG_STD_ACTION
IPC-3-TOOSMALL	3-Error	message type [node]length [node]offset [hec] from [chars]	The length field in an IPC message was smaller than the IPC msg header length.	cpp-ucode	LOG_STD_ACTION
IPC-4-CONSISTENCY	4-Warning	Consistency check failed for [chars] 0x[hec]	Debug Message. An action attempted by the IPC module has encountered an unexpected state in its/clients data structures.	ipc	"show tech-support ipc"
IPC-4-CONSISTENCY	4-Warning	Consistency check failed for [chars] 0x[hec]	Debug Message. An action attempted by the IPC module has encountered an unexpected state in its/clients data structures.	ipc	"show tech-support ipc"
IPC-4-CONSISTENCY	4-Warning	Consistency check failed for [chars] 0x[hec]	Debug Message. An action attempted by the IPC module has encountered an unexpected state in its/clients data structures.	ipc	"show tech-support ipc"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPC-4-GET_PAK_MSG	4-Warning	Failed for message size [dec]	System unable to allocate IPC message of required size.	ipc	"If this error message recurs copy the error message exactly" " as it appears on the console or in the system log contact" " your Cisco technical support representative with the" " gathered information." "\n\nTo display total memory usage for a router enter " "<CmdBold>show memory summary<noCmdBold> at the privileged " "command line prompt. To display buffer usage enter " "<CmdBold>show buffers<noCmdBold> at the prompt. To display IPC " "usage enter <CmdBold>show ipc queue<noCmdBold> at the prompt"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPC-4-GET_PAK_MSG	4-Warning	Failed for message size [dec]	System unable to allocate IPC message of required size.	ipc	<p>"If this error message recurs copy the error message exactly" " as it appears on the console or in the system log contact" " your Cisco technical support representative with the" " gathered information."</p> <p>"\n\nTo display total memory usage for a router enter "</p> <p>"&lt;CmdBold&gt;show memory summary&lt;noCmdBold&gt; at the privileged "</p> <p>"command line prompt. To display buffer usage enter "</p> <p>"&lt;CmdBold&gt;show buffers&lt;noCmdBold&gt; at the prompt. To display IPC " "usage enter</p> <p>&lt;CmdBold&gt;show ipc queue&lt;noCmdBold&gt; at the prompt"</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPC-4-GET_PAK_MSG	4-Warning	Failed for message size [dec]	System unable to allocate IPC message of required size.	ipc	"If this error message recurs copy the error message exactly" " as it appears on the console or in the system log contact" " your Cisco technical support representative with the" " gathered information." "\n\nTo display total memory usage for a router enter " "<CmdBold>show memory summary<noCmdBold> at the privileged " "command line prompt. To display buffer usage enter " "<CmdBold>show buffers<noCmdBold> at the prompt. To display IPC " "usage enter <CmdBold>show ipc queue<noCmdBold> at the prompt"
IPC-4-MESSAGE_ERR	4-Warning	Consistency check failed for IPC Message. IPC message 0x[hec] and port information 0x[hec] differ	Debug Message. An action attempted by the IPC module has encountered an unexpected state in its/clients data structures.	ipc	"show ipc ports"
IPC-4-MESSAGE_ERR	4-Warning	Consistency check failed for IPC Message. IPC message 0x[hec] and port information 0x[hec] differ	Debug Message. An action attempted by the IPC module has encountered an unexpected state in its/clients data structures.	ipc	"show ipc ports"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPC-4-MESSAGE_ERR	4-Warning	Consistency check failed for IPC Message. IPC message 0x[hec] and port information 0x[hec] differ	Debug Message. An action attempted by the IPC module has encountered an unexpected state in its/clients data structures.	ipc	"show ipc ports"
IPC-4-NOPORT	4-Warning	Port Not Found. [hec] --> [hec] Index:[hec] Seq: [dec] flags: [hec] size: [dec]	IPC Received a message which is destined for a port that cannot be found by IPC	ipc	"Capture 'sh ipc status' 'sh ipc ports' and" " 'deb ipc errors' outputs and contact TAC"
IPC-4-NOPORT	4-Warning	Port Not Found. [hec] --> [hec] Index:[hec] Seq: [dec] flags: [hec] size: [dec]	IPC Received a message which is destined for a port that cannot be found by IPC	ipc	"Capture 'sh ipc status' 'sh ipc ports' and" " 'deb ipc errors' outputs and contact TAC"
IPC-4-NOPORT	4-Warning	Port Not Found. [hec] --> [hec] Index:[hec] Seq: [dec] flags: [hec] size: [dec]	IPC Received a message which is destined for a port that cannot be found by IPC	ipc	"Capture 'sh ipc status' 'sh ipc ports' and" " 'deb ipc errors' outputs and contact TAC"
IPC-5-FC_OFF	5-Notice	SEAT FC is turned off for Seat [hec] Port ID [hec] Port Index [node] Portinfo [hec] Last sent [node] Last Heard [node] Last xmitted [node] Last Ack [node] Ack Pending [node] Last AckXmitted [node]	SEAT FC is being turned off	ipc	"show tech-support ipc"
IPC-5-FC_OFF	5-Notice	SEAT FC is turned off for Seat [hec] Port ID [hec] Port Index [node] Portinfo [hec] Last sent [node] Last Heard [node] Last xmitted [node] Last Ack [node] Ack Pending [node] Last AckXmitted [node]	SEAT FC is being turned off	ipc	"show tech-support ipc"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPC-5-FC_ON	5-Notice	SEAT FC is turned on for Seat [hec] Port ID [hec] Port Index [node] Portinfo [hec] Last sent [node]Last Heard [node]Last xmitted [node]Last Ack [node]Ack Pending [node]Last Ack xmitted [node]	SEAT FC is being turned on Wait for it to be turned off .	ipc	"show tech-support ipc"
IPC-5-FC_ON	5-Notice	SEAT FC is turned on for Seat [hec] Port ID [hec] Port Index [node] Portinfo [hec] Last sent [node]Last Heard [node]Last xmitted [node]Last Ack [node]Ack Pending [node]Last Ack xmitted [node]	SEAT FC is being turned on Wait for it to be turned off .	ipc	"show tech-support ipc"
IPC-5-INVALID	5-Notice	[chars] Dest Port 0x[hec] Session 0x[hec] Source 0x[hec]	While processing an incoming message IPC encountered invalid data in its internal data structures.	ipc	"show tech-support ipc"
IPC-5-INVALID	5-Notice	[chars] Dest Port 0x[hec] Session 0x[hec] Source 0x[hec]	While processing an incoming message IPC encountered invalid data in its internal data structures.	ipc	"show tech-support ipc"
IPC-5-INVALID	5-Notice	[chars] Dest Port 0x[hec] Session 0x[hec] Source 0x[hec]	While processing an incoming message IPC encountered invalid data in its internal data structures.	ipc	"show tech-support ipc"
IPC-5-INVALIDINPUT	5-Notice	[chars]	IPC API is called with invalid argument.	os-ipc	LOG_SID_RECUR_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
IPC-5-INVALIDINPUT	5-Notice	[chars]	IPC API is called with invalid argument.	os-ipc	LOG_SID_RECUR_ACTION
IPC-5-INVALIDINPUT	5-Notice	[chars]	IPC API is called with invalid argument.	os-ipc	LOG_SID_RECUR_ACTION
IPC-5-MSG_NULL	5-Notice	[chars]	IPC message returned is Null	ipc	"show tech-support ipc"
IPC-5-MSG_NULL	5-Notice	[chars]	IPC message returned is Null	ipc	"show tech-support ipc"
IPC-5-MSG_NULL	5-Notice	[chars]	IPC message returned is Null	ipc	"show tech-support ipc"
IPC-5-NOCALLBACK	5-Notice	[chars]: Flow control callback function is not provided by IPC Client [chars]	An IPC application cannot be controlled if flow need to be slowed down. This might result in drop of IPC packets	ipc	"show ipc ports"
IPC-5-NOCALLBACK	5-Notice	[chars]: Flow control callback function is not provided by IPC Client [chars]	An IPC application cannot be controlled if flow need to be slowed down. This might result in drop of IPC packets	ipc	"show ipc ports"
IPC-5-NOCALLBACK	5-Notice	[chars]: Flow control callback function is not provided by IPC Client [chars]	An IPC application cannot be controlled if flow need to be slowed down. This might result in drop of IPC packets	ipc	"show ipc ports"
IPC-5-NODELFUNC	5-Notice	Failed to intialize IPC client	An IPC application cannot be initialized because its initialization\n function does not appear in the IPC initialization list.	ipc	"show tech-support ipc"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPC-5-NODELFUNC	5-Notice	Failed to initialize IPC client	An IPC application cannot be initialized because its initialization\n function does not appear in the IPC initialization list.	ipc	"show tech-support ipc"
IPC-5-NODELFUNC	5-Notice	Failed to initialize IPC client	An IPC application cannot be initialized because its initialization\n function does not appear in the IPC initialization list.	ipc	"show tech-support ipc"
IPC-5-NULL	5-Notice	[chars] [chars]=0x[hec] [chars] 0x[hec]	IPC module could not find an IPC entity that is expected to be existing always	ipc	"show tech-support ipc"
IPC-5-NULL	5-Notice	[chars] [chars]=0x[hec] [chars] 0x[hec]	IPC module could not find an IPC entity that is expected to be existing always	ipc	"show tech-support ipc"
IPC-5-NULL	5-Notice	[chars] [chars]=0x[hec] [chars] 0x[hec]	IPC module could not find an IPC entity that is expected to be existing always	ipc	"show tech-support ipc"
IPC-5-NULL_HEADER	5-Notice	[chars] MSG: ptr: [node]flags: 0x[hec]	IPC message header accessed from IPC message is NULL	ipc	"show tech-support ipc"
IPC-5-NULL_HEADER	5-Notice	[chars] MSG: ptr: [node]flags: 0x[hec]	IPC message header accessed from IPC message is NULL	ipc	"show tech-support ipc"
IPC-5-NULLBPHANDLER	5-Notice	Passed Null backpressure handler	The maximum message timeout for an IPC message exceeds 2 minutes	ipc	"Capture 'sh version' and contact TAC"
IPC-5-NULLBPHANDLER	5-Notice	Passed Null backpressure handler	The maximum message timeout for an IPC message exceeds 2 minutes	ipc	"Capture 'sh version' and contact TAC"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPC-5-NULLBHANDLER	5-Notice	Passed Null backpressure handler	The maximum message timeout for an IPC message exceeds 2 minutes	ipc	"Capture 'sh version' and contact TAC"
IPC-5-NULLDELFUNC	5-Notice	Invalid registration	An IPC application has attempted to register NULL function in the IPC initialization list.	ipc	"show tech-support ipc"
IPC-5-NULLDELFUNC	5-Notice	Invalid registration	An IPC application has attempted to register NULL function in the IPC initialization list.	ipc	"show tech-support ipc"
IPC-5-NULLDELFUNC	5-Notice	Invalid registration	An IPC application has attempted to register NULL function in the IPC initialization list.	ipc	"show tech-support ipc"
IPC-5-QFULL	5-Notice	Q=0x[hec] [chars] [dec]	IPC queue is full.	os-ipc	LOG_SID_SH_TECH_ACTION
IPC-5-QFULL	5-Notice	Q=0x[hec] [chars] [dec]	IPC queue is full.	os-ipc	LOG_SID_SH_TECH_ACTION
IPC-5-QFULL	5-Notice	Q=0x[hec] [chars] [dec]	IPC queue is full.	os-ipc	LOG_SID_SH_TECH_ACTION
IPC-5-REGPORTFAIL	5-Notice	[chars] [chars]=0x[hec] [chars]=0x[hec]	IPC failed to register the control port	ipc	LOG_SID_RECUR_ACTION
IPC-5-REGPORTFAIL	5-Notice	[chars] [chars]=0x[hec] [chars]=0x[hec]	Several IPC messages are pending to be processed. If the number increases it may result in the IPC header cache or buffers being exhausted.	ipc	"show tech-support ipc"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPC-5-REGPORTFAIL	5-Notice	[chars] [chars]=0x[hec] [chars]=0x[hec]	Several IPC messages are pending to be processed. If the number increases it may result in the IPC header cache or buffers being exhausted.	ipc	"show tech-support ipc"
IPC-5-RPCFULL	5-Notice	Cannot hold RPC message port: [hex] index: [dec] type: [hex]	An RPC request for an application could not be added to the RPC request table because pending requests have filled the RPC request table.	ipc	"show tech-support ipc"
IPC-5-RPCFULL	5-Notice	Cannot hold RPC message port: [hex] index: [dec] type: [hex]	An RPC request for an application could not be added to the RPC request table because pending requests have filled the RPC request table.	ipc	"show tech-support ipc"
IPC-5-RPCFULL	5-Notice	Cannot hold RPC message port: [hex] index: [dec] type: [hex]	An RPC request for an application could not be added to the RPC request table because pending requests have filled the RPC request table.	ipc	"show tech-support ipc"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<b>IPSEND_APPMG_FAILED</b>	5-Notice	Send message to peer for [chars] failed. Reason: [chars]	Client using IPC App Port has not been able to send message	ipc	"If the reason is 'no such port' then this may be caused because" " of the difference in the versions of IOS running on Active" " and the standby. Any other reason please collect 'sh ipc stat'" " 'sh ipc rpc' 'sh ipc port' on active and standby RPs and " " contact tac"
<b>IPSEND_APPMG_FAILED</b>	5-Notice	Send message to peer for [chars] failed. Reason: [chars]	Client using IPC App Port has not been able to send message	ipc	"If the reason is 'no such port' then this may be caused because" " of the difference in the versions of IOS running on Active" " and the standby. Any other reason please collect 'sh ipc stat'" " 'sh ipc rpc' 'sh ipc port' on active and standby RPs and " " contact tac"
<b>IPSEND_APPMG_FAILED</b>	5-Notice	Send message to peer for [chars] failed. Reason: [chars]	Client using IPC App Port has not been able to send message	ipc	"If the reason is 'no such port' then this may be caused because" " of the difference in the versions of IOS running on Active" " and the standby. Any other reason please collect 'sh ipc stat'" " 'sh ipc rpc' 'sh ipc port' on active and standby RPs and " " contact tac"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPC-5-SLAVELOG	5-Notice	VIP-[chars]	The Cisco IOS software running on a Versatile Interface Processor VIP card generated this message. The error message has been	high-vip	"This is actually a Cisco IOS error message from a VIP. Handle " "it as indicated by the text after the 'VIP-' string in the " "error message."
IPC-5-SLAVELOG	5-Notice	VIP-[chars]	The Cisco IOS software running on a Versatile Interface Processor VIP card generated this message. The error message has been	high-vip	"This is actually a Cisco IOS error message from a VIP. Handle " "it as indicated by the text after the 'VIP-' string in the " "error message."
IPC-5-SLAVELOG	5-Notice	VIP-[chars]	The Cisco IOS software running on a Versatile Interface Processor VIP card generated this message. The error message has been	high-vip	"This is actually a Cisco IOS error message from a VIP. Handle " "it as indicated by the text after the 'VIP-' string in the " "error message."
IPC-5-WATERMARK	5-Notice	[dec] messages pending in [chars] for the port [chars][hec].[hec] from source seat [hec]	-	-	-
IPC-6-ACKRETRY	6-Information	required [node]retries	Allocating an IPC acknowledgement failed on the first attempt but succeeded on a later attempt.	cpp-ucode	LOG_STD_ACTION
IPC-6-KEEPALIVE	6-Information	Rcvd keepalive from seat 0x[hec] msglen=[dec]	An IPC Keepalive message sent for every 10 sec	ipc	"This is normal behavior"
IPC-6-KEEPALIVE	6-Information	Rcvd keepalive from seat 0x[hec] msglen=[dec]	An IPC Keepalive message sent for every 10 sec	ipc	"This is normal behavior"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
IPC6MAXRPCTIMEOUT	6-Information	Maximum RPC timeout value [dec] seconds set for port 0x[hec]	The maximum RPC timeout for an IPC message exceeds the maximum expected value of 10 minutes. If you are using MOS IPC it may report some fake RPC timeouts at the receiver	ipc	"Capture 'show techsupport ipc' and contact TAC"
IPC6MAXRPCTIMEOUT	6-Information	Maximum RPC timeout value [dec] seconds set for port 0x[hec]	The maximum RPC timeout for an IPC message exceeds the maximum expected value of 10 minutes	ipc	"Capture 'show techsupport ipc' and contact TAC"
IPC6MAXRPCTIMEOUT	6-Information	Maximum RPC timeout value [dec] seconds set for port 0x[hec]	The maximum RPC timeout for an IPC message exceeds the maximum expected value of 10 minutes	ipc	"Capture 'show techsupport ipc' and contact TAC"
IPC-6-STATEFUL	6-Information	[chars]	A Stateful IPC Event occurred	ipc	""
IPC-6-STATEFUL	6-Information	[chars]	A Stateful IPC Event occurred	ipc	"This is not a bug but just an informational message."
IPC-6-STATEFUL	6-Information	[chars]	A Stateful IPC Event occurred	ipc	"This is not a bug but just an informational message."
<del>IPC7CYCLE_HEADER_FAIL</del>	7-Debug	Unable to alloc gpm for recycle header	An IPC message need memory to build recycle header.	cpp-ucode	LOG_STD_ACTION
IPC7RECYCLE_TAIL_DROP	7-Debug	Dropping IPC packet due to recycle queue full	An IPC message can't recycled due to queue full.	cpp-ucode	LOG_STD_ACTION
IPDR2ERROR_SOCKET	2-Critical	\n Receive a wrong socket id [dec]	The socket to close is not exist or belong to the ipdr process	cmts-application	LOG_SIDSHTJCH_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IP3GENRAL_ERR_SOCKET	2-Critical	\n [chars]	encounter some error when binding listening or receiving the event from the socket fd	cmts-application	LOG_STD_ACTION
IP3SECURITY_VIOLATION	2-Critical	Security violation occurred caused by IP address [node]on port [chars].	An unauthorized device attempted to connect on a secure port. The IP address of the unauthorized device and the secure port are specified in the error message.	ipe	"Determine the device that attempted to connect on the secure port." "Notify your network system administrator of this condition."
IP3CONFIG_MASTER	3-Error	Multiple Configuration Masters in domain [chars]. Use \show ipe errors\ command to check for errors.	There must be one Configuration Masters in every IPe domain.	ipe	"Make sure that there is only one Forwarder configured as the "Configuration Master in a domain. Use \"show ipe errors\" \"command to identify the forwarders and fix the error condition"
IP3PG_ACL_RESOURCE	3-Error	Failed to allocate an internal ACL resource needed for Policy Gateway	An attempt to allocate an internal ACL failed.	ipe	LOG_STD_ACTION
IP3PG_VLAN_RESOURCE	3-Error	Failed to allocate an internal vlan resource needed for Policy Gateway	An attempt to allocate an internal vlan failed.	ipe	"Please check the config and make sure that vlan resources " "are available"
IPE-3-SBINIT	3-Error	Error initializing [chars] subblock data structure. [chars]	Initialization of the specified subblock data structure could not be accomplished.	ipe	LOG_STD_ACTION
IPE-3-STATICHOST	3-Error	Failed to add [chars] entry for host [node]of tableid [dec]	An internal software error occurred.	ipe	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
IPF4-DUPLICATE_HOST	4-Warning	Host [node] is attached to multiple forwarders. Use \show ipse errors\ command to check for possible errors.	In a host move scenario it is possible that a host is transiently attached to multiple forwarders during IPE convergence. However it is an error if a host continues to be attached to multiple forwarders.	ipe	"Use \"show ipse errors\" command to identify the forwarders where \"the host is reported to be attached and fix the error condition."
IPF4-DUPLICATE_LOCAL_HOST	4-Warning	Host [node] on interface [chars] has duplicate ip address.	If existing host has been removed it is possible that this is a transient condition. An expedited ARP track is started on existing host to remove the entry if the host is no longer there. Once existing entry is removed host addition will be possible. However it is an error if multiple hosts continue to use duplicate address.	ipe	"Use \"show ip host mapping\" command to identify the interface where \"the host is reported to be attached and remove the duplicate ip \" address from one of the hosts."
IPF2-FAIL_OPEN_PORT	2-Critical	Could not open the IPC ports. [chars]	ipfast could not open the ipc port to communicate to the LC/RRP/SP.	-	LOG_SIDSHTTECH_ACTION
IPFAST-2-INVALSIZE	2-Critical	The IP fast path received an IPC message with an invalid size/type - [dec]/[dec]	-	-	-
IPFAST-2-IPCACHEINIT	2-Critical	Error initializing IP fast cache structures	A programming error occurred.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
IPFAST-2-MSGDROP	2-Critical	IPC queue limit is reached and message is dropped. queue limit = [dec] cumulative drops = [dec]	IPC raw queue limit for IP fast path is reached.	-	LOG_STD_ACTION
IPFAST-2-RADIXINIT	2-Critical	Error initializing IP fast cache structures	A programming error occurred.	-	LOGSIDSHTTECHACIION
IPFAST-6-PAKSHORT	6-Information	Packet too short from [node]datagram size [dec] tl [dec]	An IP packet which is too short was received	-	LOG_STD_NO_ACTION
IPFLOW-2-CACHEINIT	2-Critical	Error initializing IP flow cache	Initialization of the Flow cache could not be accomplished because of \n\ a low memory condition.	netflow-switch	LOGSIDSHTTECHACIION
IPFLOW-2-EXPORTINIT	2-Critical	Error initializing Flow Export queue	Initialization of the Flow export queue could not be accomplished \n\ because of a low memory condition.	netflow-switch	"Reduce other system activitiy to ease memory demands. If conditions\n\ warrant upgrade to a larger memory configuration."
IPFLOW-2-PROCESSINIT	2-Critical	Error initializing Flow background process	Initialization of the Flow background process could not be accomplished because of a low memory condition.	netflow-switch	"Reduce other system activitiy to ease memory demands. If conditions\n\ warrant upgrade to a larger memory configuration."
IPFLOW-2-QUEUEINIT	2-Critical	Error initializing Flow feature queue	Initialization of the Flow feature queue could not be accomplished because of a low memory condition.	netflow-switch	"Reduce other system activitiy to ease memory demands. If conditions\n\ warrant upgrade to a larger memory configuration."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
FLOWZMEMPLAIEBLNT	2-Critical	Error initializing Flow Export Template Table	Initialization of the Flow export template table could not be \n\ accomplished because of a low memory condition.	netflow-switch	"Reduce other system activitiy to ease memory demands. If conditions\n\ warrant upgrade to a larger memory configuration."
FLOWDSABHLOWEXORT	3-Error	NULL	Flow export is disabled because export destination address matches with one of the interface's IP addresses	netflow-switch	"IP addresses of all the interfaces must be checked to make sure none \n\ of them matches with flow export destination IP address."
IPFLOW-3-SBINIT	3-Error	Error initializing [chars] subblock data structure. [chars]	Initialization of the specified subblock data structure could not be accomplished.	netflow-switch	-
FLOWV9TEMPLAEXORT	4-Warning	Error creating [chars]	Version 9 export template length is zero	netflow-switch	LOG_SID_DBG_ACTION
MSIRBCSRIFCOND	3-Error	Failed to find multicast GIR client for vrf [chars]	Failed to find multicast GIR client	ipmulticast	LOG_STD_ACTION
MSIRBCSRIFCOND	3-Error	Failed to find multicast GIR client for vrf [chars]	Failed to find multicast GIR client	ipmulticast	LOG_STD_ACTION
MSIRBDMFRVCONET	3-Error	Specified multicast route watch client registration context is already in use.	The context specified for a multicast route watch client registration request is already in use. The client registration request can not be processed. Multicast traffic flow may be degraded by failure to correctly determine RPF state information.	ipmulticast	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>MC_SIBR/DN/A/RCONTEXT</del>	3-Error	Specified multicast route watch client registration context is already in use.	The context specified for a multicast route watch client registration request is already in use. The client registration request can not be processed. Multicast traffic flow may be degraded by failure to correctly determine RPF state information.	ipmulticast	LOG_STD_ACTION
<del>MC_SIBR/DN/A/IROR</del>	3-Error	An internal error has occurred while obtaining RPF information [chars]	RPF handling Internal error	ipmulticast	LOG_SID_RECUR_ACTION
<del>MC_SIBR/DN/A/IROR</del>	3-Error	An internal error has occurred while obtaining RPF information [chars]	RPF handling Internal error	ipmulticast	LOG_SID_RECUR_ACTION
<del>MC_SIBR/DN/A/RCONTEXT</del>	3-Error	Invalid context specified for a multicast route watch client.	An invalid context was specified for handling a multicast route watch update. Multicast traffic flow may be degraded by failure to correctly determine RPF state information.	ipmulticast	LOG_STD_ACTION
<del>MC_SIBR/DN/A/RCONTEXT</del>	3-Error	Invalid context specified for a multicast route watch client.	An invalid context was specified for handling a multicast route watch update. Multicast traffic flow may be degraded by failure to correctly determine RPF state information.	ipmulticast	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>IPCSIBREBUCSERIAL</del>	3-Error	Failed to register with RIB multicast RPF lookups will not function	Multicast could not register with RIB to obtain RPF information later. This will cause severe problem when there is multicast traffic flow since it will not be possible to obtain RPF information	ipmulticast	LOG_STD_ACTION
<del>IPCSIBREBUCSERIAL</del>	3-Error	Failed to register with RIB multicast RPF lookups will not function	Multicast could not register with RIB to obtain RPF information later. This will cause severe problem when there is multicast traffic flow since it will not be possible to obtain RPF information	ipmulticast	LOG_STD_ACTION
<del>IPCSIBREBWNFINAL</del>	3-Error	Failed to START/STOP Route-watch debugging for '[chars]'	Multicast could not START or STOP Route-watch debugging for the specific Address-family IPv4/IPv6 listed.	ipmulticast	LOG_STD_ACTION
<del>IPCSIBREBWNFINAL</del>	3-Error	Failed to START/STOP Route-watch debugging for '[chars]'	Multicast could not START or STOP Route-watch debugging for the specific Address-family IPv4/IPv6 listed.	ipmulticast	LOG_STD_ACTION
<del>IPCSIBREBWSARIAL</del>	3-Error	Error trying to start RPF route watch for prefix [chars] in table [node] [chars] RPF information will not be obtained	-	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>IPCASTIBREWSERIAL</del>	3-Error	Error trying to start RPF route watch for prefix [chars] in table [node] [chars] RPF information will not be obtained	-	-	-
<del>IPCASTIBREWSERIAL</del>	3-Error	Error trying to stop RPF watch for a prefix	Internal error has occurred while trying to stop obtaining RPF change information	ipmulticast	LOG_SID_RECUR_ACTION
<del>IPCASTIBREWSERIAL</del>	3-Error	Error trying to stop RPF watch for a prefix	Internal error has occurred while trying to stop obtaining RPF change information	ipmulticast	LOG_SID_RECUR_ACTION
<del>IPCASTIBREWSERIAL</del>	4-Warning	Multicast failed to unregister with RIB	Multicast could not unregister with RIB when multicast is disabled. There will not be any existing traffic flow since multicast is already disabled. However if enabled again and if problem is seen with multicast traffic flow it should be reported	ipmulticast	LOG_STD_ACTION
<del>IPCASTIBREWSERIAL</del>	4-Warning	Multicast failed to unregister with RIB	Multicast could not unregister with RIB when multicast is disabled. There will not be any existing traffic flow since multicast is already disabled. However if enabled again and if problem is seen with multicast traffic flow it should be reported	ipmulticast	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>MC</del> <u>SI</u> <del>ERR</del> <u>MC</u> <del>RC</del> <u>ERR</u>	4-Warning	Unexpected error accessing topology specific information	An internal error has occurred while accessing topology specific information. The RPF information may not be obtained resulting in problems with multicast flows	ipmulticast	LOG_STD_ACTION
<del>MC</del> <u>SI</u> <del>ERR</del> <u>MC</u> <del>RC</del> <u>ERR</u>	4-Warning	Unexpected error accessing topology specific information	An internal error has occurred while accessing topology specific information. The RPF information may not be obtained resulting in problems with multicast flows	ipmulticast	LOG_STD_ACTION
<del>MC</del> <u>SI</u> <del>ERR</del> <u>MC</u> <del>RC</del> <u>ERR</u>	3-Error	Multicast string copy failure	Multicast string copy failure	ipmulticast	LOG_STD_ACTION
<del>MC</del> <u>SI</u> <del>ERR</del> <u>MC</u> <del>RC</del> <u>ERR</u>	3-Error	Multicast string copy failure	Multicast string copy failure	ipmulticast	LOG_STD_ACTION
<del>MC</del> <u>SI</u> <del>ERR</del> <u>MC</u> <del>RC</del> <u>ERR</u>	4-Warning	Multicast string copy overflow	Multicast string copy overflow	ipmulticast	LOG_STD_ACTION
<del>MC</del> <u>SI</u> <del>ERR</del> <u>MC</u> <del>RC</del> <u>ERR</u>	4-Warning	Multicast string copy overflow	Multicast string copy overflow	ipmulticast	LOG_STD_ACTION
<del>MC</del> <u>SI</u> <del>ERR</del> <u>MC</u> <del>RC</del> <u>ERR</u>	3-Error	Failed to sync multicast limit state to the standby RP	An internal failure prevented sending of multicast limit information to the standby RP. Some multicast traffic disruption is possible following a route processor failover.	ipmulticast	LOG_SID_NO_ACTION
<del>MC</del> <u>SI</u> <del>ERR</del> <u>MC</u> <del>RC</del> <u>ERR</u>	3-Error	Failed to sync multicast limit state to the standby RP	An internal failure prevented sending of multicast limit information to the standby RP. Some multicast traffic disruption is possible following a route processor failover.	ipmulticast	LOG_SID_NO_ACTION



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>IPCAST_LIB3MEMRY_ERR</del>	3-Error	Not enough memory. [chars]	Memory not available for allocating requested object.	ipmulticast	LOG_STD_ACTION
<del>IPCAST_LIB3MEMRY_ERR</del>	3-Error	Not enough memory. [chars]	Memory not available for allocating requested object.	ipmulticast	LOG_STD_ACTION
<del>IPCAST_LIB3TIMER_ERR</del>	3-Error	Unexpected error in the timer library: [chars]	Internal error	ipmulticast	LOG_STD_ACTION
<del>IPCAST_LIB3TIMER_ERR</del>	3-Error	Unexpected error in the timer library: [chars]	Internal error	ipmulticast	LOG_STD_ACTION
<del>IPCAST_LIB3VRF_CIX_ERR</del>	3-Error	[chars] Ctx: 0x[hec]	Failure in updating the LIB VRF Context structures.	ipmulticast	LOG_STD_ACTION
<del>IPCAST_LIB3VRF_CIX_ERR</del>	3-Error	[chars] Ctx: 0x[hec]	Failure in updating the LIB VRF Context structures.	ipmulticast	LOG_STD_ACTION
<del>IPCAST_LIB4IPCASTIMI</del>	4-Warning	Adding [chars] interface '[chars]' denied for [chars][chars]	The maximum number of times the given interface appears as incoming or outgoing for some multicast state is reached.	ipmulticast	LOG_SID_NO_ACTION
<del>IPCAST_LIB4IPCASTIMI</del>	4-Warning	Adding [chars] interface '[chars]' denied for [chars][chars]	The maximum number of times the given interface appears as incoming or outgoing for some multicast state is reached.	ipmulticast	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<b>MCASIMCASIMFRSOD</b>	4-Warning	[chars] interface '[chars]' for [chars][chars] [chars] [node]d	The maximum number of times the given interface appears as incoming or outgoing for some multicast state has reached threshold of its configured limit.	ipmulticast	"The configured multicast limit for some interface" " has reached the threshold of its configured mCAC" " limit. Please take proactive measures at this point" " like increasing the mCAC limit."
<b>MCASIMCASIMFRSOD</b>	4-Warning	[chars] interface '[chars]' for [chars][chars] [chars] [node]d	The maximum number of times the given interface appears as incoming or outgoing for some multicast state has reached threshold of its configured limit.	ipmulticast	"The configured multicast limit for some interface" " has reached the threshold of its configured mCAC" " limit. Please take proactive measures at this point" " like increasing the mCAC limit."
<b>MCASIMKNKCDONDN</b>	4-Warning	Unexpected condition: [chars]	An un expected condition situation state or event has been detected.	ipmulticast	LOG_SID_NO_ACTION
<b>MCASIMKNKCDONDN</b>	4-Warning	Unexpected condition: [chars]	An un expected condition situation state or event has been detected.	ipmulticast	LOG_SID_NO_ACTION
<b>MCASIMKNKNENR</b>	4-Warning	Unexpected event received: [dec]	No handler found for event	ipmulticast	LOG_STD_ACTION
<b>MCASIMKNKNENR</b>	4-Warning	Unexpected event received: [dec]	No handler found for event	ipmulticast	LOG_STD_ACTION
<b>MCASIMIBEVENTQSE</b>	6-Information	The event queue size has exceeded [dec]	Processing may become slower	ipmulticast	LOG_SID_NO_ACTION
<b>MCASIMIBEVENTQSE</b>	6-Information	The event queue size has exceeded [dec]	Processing may become slower	ipmulticast	LOG_SID_NO_ACTION
<b>MCASIMIBSIMERBUSY</b>	6-Information	Timer drift is accumulating [dec] msec	There is large amount of processin load and the timers are accumulating delay.	ipmulticast	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPCASTLIB6TIMER_BUSY	6-Information	Timer drift is accumulating [dec] msec	There is large amount of processing load and the timers are accumulating delay.	ipmulticast	LOG_SID_RECUR_ACTION
IPCASTLIB4INTERNAL_ERROR	3-Error	An internal error has occurred while obtaining RPF information [chars]	RPF handling Internal error	ipmulticast	LOG_SID_RECUR_ACTION
IPCASTLIB4INTERNAL_ERROR	3-Error	An internal error has occurred while obtaining RPF information [chars]	RPF handling Internal error	ipmulticast	LOG_SID_RECUR_ACTION
IPCASTLIB4FOREIGN_VRF	4-Warning	RPF for [node]VRF [chars] resolves in a foreign VRF [chars]	-	-	-
IPCASTLIB4FOREIGN_VRF	4-Warning	RPF for [node]VRF [chars] resolves in a foreign VRF [chars]	-	-	-
IPCASTLIB4RPF_LOOP	4-Warning	RPF route lookup loop for %i	A routing loop occurred during the recursive resolution of an RPF address	ipmulticast	"Check routing tables used for RPF"
IPCASTLIB4RPF_LOOP	4-Warning	RPF route lookup loop for %i	A routing loop occurred during the recursive resolution of an RPF address	ipmulticast	"Check routing tables used for RPF"
IPCASTLIB5LISP_FAILURE	5-Notice	RPF lookup: LISP registration for [chars] not completed	LISP watch info initialization not ready	ipmulticast	LOG_SID_NO_ACTION
IPCASTLIB5LISP_FAILURE	5-Notice	RPF lookup: LISP registration for [chars] not completed	LISP watch info initialization not ready	ipmulticast	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPMOBILE0IPMOBILE_DHCP	0-Emergency	\ [chars]	Two reasons for this error message\n\n 1. DHCP Client failed to get started this could be because of malloc\n\n failures.\n\n 2. IPMOBILE DHCP Process failed to start	mobileip	"If this error message is seen it is recommended not to use this\n\n HA for binding creation with DHCP Address Allocation.\n\n Check the available memory in the box and for the first reason try\n\n to get 'debug dhcp detail' before the failure.\n\n Contact your technical support representative with the error\n\n message you got."
IPMOBILE0NOPROCESS	0-Emergency	\ [chars]	A Process could not be started	-	"Please contact your technical support representative\n\n with the error message you got and with the output of\n\n 'show process '."
IPMOBILE2ASSERTFAILED	2-Critical	IPMOBILE assertion failed: [chars]	The software detected an inconsistency. This is considered a\n\n serious error. The router attempts to continue but IP Mobility\n\n processing may be impaired.	mobileip	"Copy the error message exactly as it appears noting any IP Mobility\n\n problems that you are experiencing and report it to your technical\n\n support representative."
IPMOBILE3CONFIGERROR	3-Error	Standby FA configuration is not in sync with the active	The software detected an inconsistency in configuration between\n\n the standby and the active. Standby FA may not proceed with the\n\n sync for this visitor.	mobileip	"Re-configure standby FA and make sure the configuration between\n\n the standby and the active is in sync."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPMOBILE3NOSOCKET	3-Error	Unable to open socket	The requested operation could not be accomplished because of a low memory condition.	mobileip	"Reduce other system activity to ease memory demands. If conditions warrant upgrade to a larger memory configuration."
IPMOBILE3NOTUNNEL	3-Error	Maximum number of tunnels [dec] reached	The number of Mobile IP tunnels allowed on the box is reached.	mobileip	"This occurs if the HA/FA is overloaded. If you suspect this condition contact technical support representative with the output of show tech"
IPMOBILE3PARSEFAILED	3-Error	Error in parsing the security association for [chars]	The Mobile IP Home Agent encountered an error while processing the Security Association in the RADIUS Access-Accept message.	mobileip	"Check the Radius profile config for the Mobile Node for which the processing of the Security Association failed."
IPMOBILE3TUNNELDIE	5-Notice	Mobile IP tunnel [chars] deleting	The Mobile IP tunnel is going to be deleted.	mobileip	"This occurs if the active mobile ip binding is deleted. If you suspect this condition contact technical support representative with the output of show tech"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MOBILE6-REDUCE-INFO	6-Information	Too many redundancy update failures [dec] in the last minute.	A mobile router's attempt to dynamically add or delete a\n\n mobile network failed because that mobile network was already\n\n configured as a virtual network in the home agent.	mobileip	"To avoid duplication errors make sure that the virtual networks\n\n configuration on the home agent and the dynamic mobile network\n\n configuration on the mobile router do not have any overlapping\n\n network prefixes."
IPMOBILE-6-SECURE	6-Information	Security violation on [chars] from [chars] [chars] - errcode [chars] [dec]	A security violation occurred during registration attempt.	mobileip	"This is for informational purpose only."
IPMUX3V4_CACHE_FULL	3-Error	IPMux V4 Cache full - replacing active entry	The IPMux V4 cache is full and has replaced a current cache entry. \n\n IP Multiplexing performance may be impacted if this continues.	ipmux	"Increase the size of the cache using the \n\n 'ip mux cache' configuration command."
IPMUX3V6_CACHE_FULL	3-Error	IPMux V6 Cache full - replacing active entry	The IPMux V6 cache is full and has replaced a current cache entry. \n\n IP Multiplexing performance may be impacted if this continues.	ipmux	"Increase the size of the cache using the \n\n 'ipv6 mux cache' configuration command."
IPNAT_HA_SSO_ISSU_BUFFER	3-Error	IPNAT HA SSO ISSU client failed to get buffer for message error [dec]	IPNAT HA SSO ISSU client failed to get buffer for building\n\n a negotiation message. Hence it can send the negotiation\n\n message to the standby unit. When there is a problem in\n\n the negotiaton the standby unit can not be brought up.	nat	"show logging and show " "checkpoint client"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPNAT_HA_SSO_ISSU_CAPNADZE	3-Error	IPNAT HA SSO ISSU client capability list is empty.	The BG3K OIR ISSU client capability exchange list size\n\ is invalid.	nat	"show issu capability entries " "<Client_ID>"
IPNAT_HA_SSO_ISSU_CAPNOCMPBE	3-Error	IPNAT HA SSO ISSU client capability exchange result incompatible.	The IPNAT HA SSO ISSU client capability exchange has negotiated\n\ as incompatible with the peer.	nat	"show issu negotiated " "capability <Session_ID>"
IPNAT_HA_SSO_ISSU_CAPMITY	3-Error	IPNAT HA SSO ISSU client [chars]	IPNAT HA SSO ISSU client observed an error during capability\n\ negotiation. When this error happens there is a mismatch\n\ between the client capability between the active and\n\ standby unit.	nat	"show issu capability entries <client_id> and\n\ show issu session <client_id> and\n\ show issu negotiated capability <session_id>"
IPNAT_HA_SSO_ISSU_3INT	3-Error	IPNAT HA SSO ISSU client initialization failed at [chars] error [chars]	IPNAT HA SSO ISSU client could not be initialized this will\n\ cause catastrophic failure when ISSU upgrade or downgrade\n\ is performed.	nat	LOGSIDSHTECHACIION
IPNAT_HA_SSO_ISSU_MGNCK	3-Error	IPNAT HA SSO ISSU client message [dec] is not compatible	IPNAT HA SSO ISSU client received an incompatible message\n\ from the peer unit. Since the message is not compatible\n\ it can be processed by this unit	nat	"show issu message group <client_id> and\n\ show issu session <client_id> and\n\ show issu negotiated version <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPNAT_HA_SSO_ISSU_MSGSIZE	3-Error	IPNAT HA SSO ISSU client failed to get the message size for message [dec]	IPNAT HA SSO ISSU client failed to calculate message size\n\n for the message specified. The IPNAT HA SSO ISSU client will not\n\n be able to send message to the standby unit.	nat	"show issu message group <client_id> and\n\n show issu session <client_id> and\n\n show issu negotiated version <session_id>"
IPNAT_HA_SSO_ISSU_POLICY	3-Error	IPNAT HA SSO ISSU client message type [dec] is [chars]	IPNAT HA SSO ISSU client received an message type which it\n\n does not support. The policy is applied to make the session\n\n compatible.	nat	"show issu session " "<client_id>"
IPNAT_HA_SSO_ISSU_SEND_FAIL	3-Error	IPNAT HA SSO ISSU client failed to send a negotiation message error [dec]	IPNAT HA SSO ISSU client could not send a session negotiation\n\n message to the peer. When there is a problem in the\n\n negotiation the standby unit can not be brought up.	nat	"show logging and show " "checkpoint client"
IPNAT_HA_SSO_ISSU_SESSION	3-Error	IPNAT HA SSO ISSU client [chars]	IPNAT HA SSO ISSU client observed an error during a session\n\n negotiation with the peer unit. When there is a problem\n\n with the session the standby unit can not be brought up.	nat	"show issu capability entries <client_id> and\n\n show issu session <client_id> and\n\n show issu negotiated capability <session_id>"
IPNAT_HA_SSO_ISSU_UNREG_FAIL	3-Error	IPNAT HA SSO ISSU client failed to unregister session information. Error: [dec] [chars]	The IPNAT HA SSO ISSU client failed to unregister session information.	nat	"show issu session <client_id> " "and " "show issu negotiated " "capability <session_id>"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPNAT_HA_SSO_TRANSFORM	3-Error	IPNAT HA SSO ISSU client [chars] transform failed error [chars]	IPNAT HA SSO ISSU client could not transform the message.\n\n If the transmit transformation failed it means that the\n\n checkpoint message can not be sent to the standby unit.\n\n If the receive transformation failed it means that the\n\n checkpoint message can not be applied on the standby\n\n unit. In both cases the IPNAT HA SSO state will not\n\n be identical with the active unit.	nat	"show issu session <client_id> and\n\n show issu negotiated version <session_id>"
IPNAT_HA3ATTRIBUTE	3-Error	Bulk sync of [chars] via [chars] [chars] is invalid for [chars]	An attempt to bulk sync an address pool or a dynamic/static\n\n translation has detected that the entity which is to be sent to the\n\n standby RP when acting in a stateful redundant mode contains an\n\n invalid owner property and hence cannot be synchronized. The detection\n\n of this case will result in a failure of the bulk sync.	nat	LOG_STD_ACTION
IPNAT_HA3BULK_SYNC	3-Error	Failed to send [chars] information to peer	-	nat	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPNAT_HA-3-CLIENT	3-Error	Failed to register with [chars] [chars]	The NAT High Availability has failed to register with the specified\n\n component during initialization. This is an internal error which\n\n indicates that the NAT HA services will be unavailable.	nat	LOG_STD_ACTION
IPNAT_HA-3-DECODE	3-Error	Decode via [chars] of [chars] failed	A message of the transport and type described failed in its attempt\n\n to be decoded on the standby. The resultant action taken by the\n\n standby route processor is an attempt to resynchronize.	nat	LOG_STD_ACTION
IPNAT_HA-3-DYN_DEFRQ	3-Error	[chars] failed to defer [chars]	The incremental synchronization of the NAT dynamic state to the standby\n\n RP has failed to add the information to the deferral queue for later\n\n processing during the time where the standby RP is progressing to its\n\n hot standby redundant state. This implies that the runtime state\n\n between the active and standby RP would be inconsistent once the\n\n standby has been fully initialized.	nat	"show ip nat ha"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPNAT_HA-3-DYN_SYNC	3-Error	Failed to process [chars] dynamic state	The incremental synchronization of the NAT configuration to the standby\n\ RP has failed to complete successfully. This implies that the\n\ configuration state between the active and standby RP is\n\ inconsistent.	nat	"show ip nat ha"
IPNAT_HA-3-INTERFACE_TYPE	3-Error	[chars] type/slot [node] unit [node] num [node] channel [node] value %u	An attempt to sync a dynamic translation or address change has\n\ detected that the interface which was encoded on the active RP\n\ has a different type the standby RP. The detection of this\n\ case will result in a failure of the bulk or LBL sync.	nat	LOG_STD_ACTION
IPNAT_HA-3-MISMATCH	3-Error	[chars] [chars] mismatch with id %u	The specified synchronization operation has failed to complete on the\n\ standby route processor due to an inconsistency in the internal id\n\ which would have resulted in an inconsistent configuration between\n\ active and standby. The resultant action taken by the standby route\n\ processor is an attempt to resynchronize.	nat	LOG_STD_ACTION
IPNAT_HA-3-PURGE	3-Error	Failed to purge [chars] information	-	nat	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
IPNAT_HA-3-RECEIVE	3-Error	Message via [chars] is [chars]	An ISSU registration for the set of initial capabilities and sessions\n\n failed due to the reason specified. This will have the effect of the\n\n NAT ISSU support being unavailable between peers.	nat	LOG_STD_ACTION
IPNAT_HA3-TRANSFORM	3-Error	[chars] of [chars] via [chars] failed [chars]	An attempt to either encode or decode a versioned synchronization\n\n message has failed due to an internal error encountered by the ISSU\n\n component.	nat	LOG_STD_ACTION
IPNAT_HA6-ADDR_CHANGE	6-Information	[chars] unable to encode data descriptor for interface [chars]	An attempt to sync an address change to the standby RP has\n\n detected that the interface which was to be encoded on the\n\n active RP is no longer present or does not support encoding. \n\n The interface may have been removed from the configuration or \n\n may not support encoding.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPNAT_HA-6INTERFACE	6-Information	[chars] type/slot [node] uint [node] num [node] channel [node]	An attempt to sync a dynamic translation or address change has\n\ detected that the interface which was encoded on the active RP\n\ is not present on the standby RP. The detection of this case\n\ may result in a failure of the bulk or LBL sync.	nat	LOG_STD_ACTION
IPNAT_HA-6MAPPING_COMPARE	6-Information	[chars] [chars] [chars] mapping id [node]comparing [chars] [chars] [chars] mapping id %u	The specified synchronization operation on the standby route processor\n\ has detected an internal condition with respect to the properties of\n\ dynamic mappings. This is informational.	nat	LOG_STD_ACTION
IPNAT_HA-6MAPPING_EXISTS	6-Information	[chars] [chars] [chars] mapping id %u	The specified synchronization operation on the standby route processor\n\ has detected the presence of an existing matching mapping. This may\n\ be associated with any observed PRC failures on the standby.	nat	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPNAT_HA-6-READY	6-Information	[chars] peer not ready discarding [chars]	The synchronization attempt for the message has determined that the transport has lost communication with its peer. This is a normal situation which indicates that the standby route-processor is currently out of service implying a simplex redundancy mode.	-	-
IPNAT_HA-6-RELOAD	6-Information	[chars] reloading [chars]	A synchronization attempt between the active and standby RP peers has failed with the reason indicated. The standby peer is reloaded in an attempt to resynchronize when operating in a stateful redundant mode.	nat	LOG_STD_ACTION
<del>IPNAT_HA-6-RELOAD</del>	6-Information	Standby reload has been disabled NAT RP state is out of sync and the standby should be reloaded manually	The active and standby RPs are out of sync and the standby RP would have been reloaded but this reload was suppressed based on the configured environment.	nat	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPNAT_HA-6-TIMEOUT	6-Information	Bulk sync is flow controlled by [chars]	The bulk synchronization of the NAT configuration to the standby RP\n has encountered a flow control condition which has effected a timeout\n awaiting the condition to clear. This will result in a reload of the\n standby RP to allow the bulk synchronization to restart.	nat	LOG_STD_ACTION
IPNAT3BADMAPNGIYE	3-Error	NAT mapping type [dec] for mapping statistics from platform is \n invalid	The mapping type for passing mapping statistics from platform is \n not for static nor dynamic mapping type which is invalid. This \n condition can cause the statistic counters for NAT mapping to be\n inaccurate on the RP	nat	LOG_STD_ACTION
IPNAT3CENTRAL_POLICY	3-Error	Central policy setting failed: [chars]	Central policy setting can not be changed due to incompatible configuration.	nat	"Remove existing NAT routes and mappings."
IPNAT-3-CONFIG	3-Error	Unable to [chars] the configuration of dynamic mappings	An internal operation relating to the configuration of the\n dynamic mappings has failed. This may imply that the mapping\n has not been installed.	nat	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
IPNAT-3-CSBNUL	3-Error	Parser structure for route-map [chars] configuration is nul	The parser structure for route-map configuraion is nul which is invalid. This condition can cause the new translations to fail in \n\ the data path	nat	LOG_STD_ACTION
IPNAT-3-IF_UP	3-Error	Error in sending interface UP event for [chars] to the ager process	An internal operation relating to the interface UP event\n\ has failed which is unexpected.	nat	LOG_STD_ACTION
IPNAT-3-LIMITSNULL	3-Error	NAT mexentry statistics structure from platform is nul	The structure for passing maxentry limit statistics from platform is \n\ nul which is invalid. This condition can cause the statistic\n\ counters for NAT maxentry limit to be inaccurate on the RP	nat	LOG_STD_ACTION
IPNAT-3-MAPPING_NULL	3-Error	Unexpected NULL pointer received as input.	An internal operation relating to notifying the platform about a\n\ mapping has provided an unexpected input.	nat	LOG_STD_ACTION
IPNAT-3-MAPPING_NULL	3-Error	NAT mapping statistics structure from platform is nul	The structure for passing mapping statistics from platform is \n\ nul which is invalid. This condition can cause the statistic\n\ counters for NAT mapping to be inaccurate on the RP	nat	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPNAT-3-POOLSTATSNULL	3-Error	NAT pool statistics structure from platform is nul	The structure for passing global/systems stats from platform \n\ is nul which is invalid. This condition can cause the statistic\n\ counters for NAT pool to be inaccurate on the RP	nat	LOG_STD_ACTION
IPNAT-3-PORTLISTNULL	3-Error	Portlist for address [node]proto [dec] is nul	The portlist for the address which requests more port blocks \n\ is nul which is invalid. This condition can cause the new \n\ translations to fail in the data path	nat	LOG_STD_ACTION
IPNAT-3-PORTNULL	3-Error	Start port or end port for port block allocation request is nul	Start port or end port for port block allocation request is nul\n\ This condition can cause the new translations to fail in the \n\ data path	nat	LOG_STD_ACTION
IPNAT-3-RIMAPNAMENULL	3-Error	Route-map name for [chars] configuration is nul	The route-map name is nul which is invalid. This condition can cause the new translations to fail in the data path	nat	LOG_STD_ACTION
IPNAT-3-RIMAPNULL	3-Error	route-map for configuration download is nul	The route-map structure is nul which is invalid. This condition\n\ can cause the new translations to fail in the data path	nat	LOG_STD_ACTION
IPNAT-3-SBINIT	3-Error	Error initializing [chars] subblock data structure. [chars]	Initialization of the specified subblock data structure could not be accomplished.	nat	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPNAT3SYSSTATSNULL	3-Error	NAT global/system statistics structure from platform is nul	The structure for passing global/systems statistics from platform \n\ is nul which is invalid. This condition can cause the NAT global\n\ statistic counters in inaccurate on the RP	nat	LOG_STD_ACTION
IPNAT3UNEXPECTEDADDRESS	3-Error	NULL	An address contained an unexpected value.	nat	LOG_STD_ACTION
IPNAT3UNEXPECTEDMAPPINGFLAG	3-Error	Unexpected mapping flag [node]4x received	An internal operation relating to notifying the platform about a\n\ mapping has provided an unexpected input.	nat	LOG_STD_ACTION
IPNAT3WLANSESSNULL	3-Error	NAT WLAN session structure for session [chars] from platform is nul	The structure for passing WLAN session from platform is \n\ nul which is invalid. This condition can cause the NAT WLAN\n\ session to fail in the data path	nat	LOG_STD_ACTION
IPNAT3ADDR_ALLOC_FAILURE	4-Warning	Address allocation failed for [node]pool [chars] might be exhausted	An address could not be allocated from the IP NAT pool. This condition can cause a translation failure and might result in packets being dropped. The counter for misses will be incremented for these packets.	nat	"Check to see if the NAT pool has been exhausted. To reuse any existing " "addresses in the NAT pool for new packet flows clear the current NAT " "entries using clear ip nat translation *"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPNAT-6-ENTRIES	6-Information	Static translation count reset inside/outside source/destination [node]u/[node]u [node]u/[node]u	Upon the removal of the last remaining static translation from the\n\n configuration it has been determined that there is a discrepancy\n\n with the internal accounting as regards the previous provisioning\n\n of inside source/destination versus outside source entries. The\n\n internal accounting has been reset to indicate that there are no\n\n translations of any type currently.	nat	LOG_STD_ACTION
IPNAT-6-ID	6-Information	[chars] identifier has wrapped	The identifier which is assigned to that which is resultant from\n\n the configuration in question has cycled through the available\n\n number space and is now allocating from its initial value again.	nat	LOG_SID_NO_ACTION
IPNAT-6-PORT_ALLOC	6-Information	Port allocation via [chars] for [node][chars] [chars] ports min [node]max %u	A port allocation request for the specified range of ports has been\n\n attempted from the named party on the standby RP. This is an\n\n informational message which tracks the request source.	nat	LOG_STD_ACTION
IPRT-2-COMPRESS	2-Critical	Bad route_compress call sdb= [hec]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPRT-2-COMPRESS	2-Critical	Bad route_compress call sdb= [hec]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
IPRT-2-IPTABLEERROR	2-Critical	IP routing table [chars] initialization failure - [chars]	An internal software error occurred preventing the creation of new IP routing table.	-	"Copy the message exactly as it appears and report it to your " "technical support representative."
IPRT-2-IPTABLEERROR	2-Critical	IP routing table [chars] initialization failure - [chars]	An internal software error occurred preventing the creation of new IP routing table.	-	"Copy the message exactly as it appears and report it to your " "technical support representative."
IRI3BADMGTYEERRCR	3-Error	ION RIB error: [chars] [dec]/[hec]	IRI3BADMGTYEERRCR	-	LOG_SID_RECUR_ACTION
IRI3BADMGTYEERRCR	3-Error	ION RIB error: [chars] [dec]/[hec]	IRI3BADMGTYEERRCR	-	LOG_SID_RECUR_ACTION
IRI3BAD_PDB_HANDLE	3-Error	Pdb handle error [node]x [node]x [hec] [node]x [node]x [node]x [node]x	IRI3BAD_PDB_HANDLE	-	LOG_SID_RECUR_ACTION
IRI3BAD_PDB_HANDLE	3-Error	Pdb handle error [node]x [node]x [hec] [node]x [node]x [node]x [node]x	IRI3BAD_PDB_HANDLE	-	LOG_SID_RECUR_ACTION
IPRT-3BAD_PDB_INDEX	3-Error	Pdb index error [node]x [node]x [hec]	IPRT-3BAD_PDB_INDEX	-	LOG_SID_RECUR_ACTION
IPRT-3BAD_PDB_INDEX	3-Error	Pdb index error [node]x [node]x [hec]	IPRT-3BAD_PDB_INDEX	-	LOG_SID_RECUR_ACTION
IPRT-3-BADCOMLIST	3-Error	Community list check with bad list [dec]	A user specified an invalid BGP community list number.	-	"Check the system configuration to make sure that the community list " "specified falls within the valid range."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPRT-3-BADCOMLIST	3-Error	Community list check with bad list [dec]	A user specified an invalid BGP community list number.	-	"Check the system configuration to make sure that the community list "specified falls within the valid range."
IPRT-3-BADRFREG	3-Error	Unable to register IP Routing as a client of RF.	This is a severe error as far as IP routing NSF is concerned	-	"Copy the error message exactly as it appears and report it to your "technical support representative."
IPRT-3-BADRFREG	3-Error	Unable to register IP Routing as a client of RF.	This is a severe error as far as IP routing NSF is concerned	-	"Copy the error message exactly as it appears and report it to your "technical support representative."
IPRT-3-CFORK	3-Error	Old-style routing processes no longer supported	RBNTERR_EXPLANATION	ip	LOG_SID_RECUR_ACTION
IPRT-3-CFORK	3-Error	Old-style routing processes no longer supported	RBNTERR_EXPLANATION	ip	LOG_SID_RECUR_ACTION
IRCSBADMABADMCC	3-Error	Bad magic for CSB Data [hec]	RBNTERR_EXPLANATION	ribinfra	LOG_SID_RECUR_ACTION
IRCSBADMABADMCC	3-Error	Bad magic for CSB Data [hec]	RBNTERR_EXPLANATION	ribinfra	LOG_SID_RECUR_ACTION
IRGETEACHROUTEADMCC	3-Error	Bad magic for ip_geteachroute	RBNTERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IRGETEACHROUTEADMCC	3-Error	Bad magic for ip_geteachroute	RBNTERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IPRT-3-HMI_INIT_ERROR	3-Error	Unable to init HMI database	RBNTERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IPRT-3-HMI_INIT_ERROR	3-Error	Unable to init HMI database	RBNTERR_EXPLANATION	-	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IRCONSENT_TOPOID_ERR</del>	3-Error	Inconsistent topology id topoid:0x[hec] and topoid:0x[hec] are found for the topology[chars]	-	-	-
<del>IRCONSENT_TOPOID_ERR</del>	3-Error	Inconsistent topology id topoid:0x[hec] and topoid:0x[hec] are found for the topology[chars]	-	-	-
<del>IRINVALID_NEXIHOPE</del>	3-Error	[chars] topoid:0x[hec] [node]m from [chars] gw_topoid:0x[hec] gw:[node] gw_v[output_sil]node[chars] Binding Label: [chars] Type:0x[hec] Attr 0x[hec] Has Repair Path: [dec] Repair Gwy: [node][chars]	<del>IRNTERR_EXPLANATION</del>	-	LOG_SID_RECUR_ACTION
<del>IRINVALID_NEXIHOPE</del>	3-Error	[chars] topoid:0x[hec] [node]m from [chars] gw_topoid:0x[hec] gw:[node] gw_v[output_sil]node[chars] Binding Label: [chars] Type:0x[hec] Attr 0x[hec] Has Repair Path: [dec] Repair Gwy: [node][chars]	<del>IRNTERR_EXPLANATION</del>	-	LOG_SID_RECUR_ACTION
<del>IRINVALID_RIB_UPDATE_ERR</del>	3-Error	Invalid RIB State for update 0x[hec] [node]m [chars]	<del>IRNTERR_EXPLANATION</del>	-	LOG_SID_RECUR_ACTION
<del>IRINVALID_RIB_UPDATE_ERR</del>	3-Error	Invalid RIB State for update 0x[hec] [node]m [chars]	<del>IRNTERR_EXPLANATION</del>	-	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPRT-3-INVALIDTOPO	3-Error	Bad topology [chars] table in static routing entry [node]m	An error has occurred when a static route failed to find corresponding topology routing table.	-	LOG_SID_RECUR_ACTION
IPRT-3-INVALIDTOPO	3-Error	Bad topology [chars] table in static routing entry [node]m	An error has occurred when a static route failed to find corresponding topology routing table.	-	LOG_SID_RECUR_ACTION
IPRT-3-INVALIDVRF_BFD	3-Error	Bad vrf_id 0x[hec] in static BFD neighbor [chars] %i	A static BFD neighbor failed to find corresponding vrf.	-	LOG_SID_RECUR_ACTION
IPRT-3-INVALIDVRF_BFD	3-Error	Bad vrf_id 0x[hec] in static BFD neighbor [chars] %i	A static BFD neighbor failed to find corresponding vrf.	-	LOG_SID_RECUR_ACTION
IPRT-3-IPDB_DEL_ERROR	3-Error	i_pdb delete error [chars] [hec] [hec] [hec] [hec] [hec]	RBNTERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IPRT-3-IPDB_DEL_ERROR	3-Error	i_pdb delete error [chars] [hec] [hec] [hec] [hec] [hec]	RBNTERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IPRT-3-IPTABLEINIT	3-Error	IP routing table creation failure - [chars]	An internal software error occurred preventing the creation of new IP routing table.	-	"Copy the message exactly as it appears and report it to your " "technical support representative."
IPRT-3-IPTABLEINIT	3-Error	IP routing table creation failure - [chars]	An internal software error occurred preventing the creation of new IP routing table.	-	"Copy the message exactly as it appears and report it to your " "technical support representative."
<del>IPRT-3-IPMAXCOUNTREACHED</del>	3-Error	Maximum allowed static route count reached: [dec] \n ip_addstatic_route failed \n	The maximum number of static routes that can be configured is reached. No further routes will be added to the table	-	"Remove the unwanted static routes to add more routes"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RMXALOWMREACHD	3-Error	Maximum allowed static route count reached: [dec] \n ip_addstatic_route failed \n	The maximum number of static routes that can be configured is reached. No further routes will be added to the table	-	"Remove the unwanted static routes to add more routes"
IPRI3NDB_BAD_MAGIC	3-Error	Bad magic for NDB structure [hec]/[hec]	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IPRI3NDB_BAD_MAGIC	3-Error	Bad magic for NDB structure [hec]/[hec]	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IRENDB_CREATE_ERROR	3-Error	Error creating an NDB - [chars] [dec]	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IRENDB_CREATE_ERROR	3-Error	Error creating an NDB - [chars] [dec]	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IPRI3NDB_DEL_ERROR	3-Error	Error Removing an NDB [chars] [node]m tid 0x[hec]	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IPRI3NDB_DEL_ERROR	3-Error	Error Removing an NDB [chars] [node]m tid 0x[hec]	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IRENDBNRPINPROGESS	3-Error	Invalid action on NDB while in NRP in progress: [chars] 0x[hec] [node]m state [dec] flags [hec]	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IRENDBNRPINPROGESS	3-Error	Invalid action on NDB while in NRP in progress: [chars] 0x[hec] [node]m state [dec] flags [hec]	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IPRT-3-NDB_ONQ	3-Error	Queue elem on queue - [node]m	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IPRT-3-NDB_ONQ	3-Error	Queue elem on queue - [node]m	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IRENDBPDBMATCHINVALID	3-Error	Invalid ndb_pdb_match_type 0x[hec]	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IR3NDBPDBMACHNAD	3-Error	Invalid ndb_pdb_match_type 0x[hec]	RBNTERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IR3NDBRHLCNADCP	3-Error	Invalid operation on replicated NDB [chars]:	RBNTERR_EXPLANATION	ribinfra	LOG_SID_RECUR_ACTION
IR3NDBRHLCNADCP	3-Error	Invalid operation on replicated NDB [chars]:	RBNTERR_EXPLANATION	ribinfra	LOG_SID_RECUR_ACTION
IR3NDB_STATE_ERROR	3-Error	NDB state error [chars] 0x[hec] [node]m state [dec] event [hec]->[hec] nh_type [hec] flags [hec]	RBNTERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IR3NDB_STATE_ERROR	3-Error	NDB state error [chars] 0x[hec] [node]m state [dec] event [hec]->[hec] nh_type [hec] flags [hec]	RBNTERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IR3NDBSHR_BAD_MAGIC	3-Error	Bad magic for NDBSHR structure [hec]/[hec]/[hec]	RBNTERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IR3NDBSHR_BAD_MAGIC	3-Error	Bad magic for NDBSHR structure [hec]/[hec]/[hec]	RBNTERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IR3NEXIHOSLIST_ERROR	3-Error	[chars]: [node]m [dec] [hec] [hec]	RBNTERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IR3NEXIHOSLIST_ERROR	3-Error	[chars]: [node]m [dec] [hec] [hec]	RBNTERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IR3NEXIHOSLISTMACH	3-Error	[chars]: [chars] [node]m nhtype: [hec]	RBNTERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IR3NEXIHOSLISTMACH	3-Error	[chars]: [chars] [node]m nhtype: [hec]	RBNTERR_EXPLANATION	-	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPR3-NO_BACKUP_MEM	3-Error	No Backup Route memory available for [chars]	The addition of a Backup Route failed because of a low memory condition. Backup may not be available if the Primary Route is removed	-	"Reduce other system activity to ease memory demands. If conditions " "warrant upgrade to a larger memory configuration."
IPR3-NO_BACKUP_MEM	3-Error	No Backup Route memory available for [chars]	The addition of a Backup Route failed because of a low memory condition. Backup may not be available if the Primary Route is removed	-	"Reduce other system activity to ease memory demands. If conditions " "warrant upgrade to a larger memory configuration."
IRE3-NO_MACRNET_NDB	3-Error	No majornet found: [chars] [node]m	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IRE3-NO_MACRNET_NDB	3-Error	No majornet found: [chars] [node]m	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IPRT-3-NO_PDB_INDEX	3-Error	Pdb index not available for [chars]	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IPRT-3-NO_PDB_INDEX	3-Error	Pdb index not available for [chars]	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IPR3-NO_REPLIC_MEM	3-Error	No Route Replication memory available for [node]m	The replication of a Route failed because of a low memory condition. The route will not be replicated in the destination table at this time.	-	"Reduce other system activity to ease memory demands. If conditions " "warrant upgrade to a larger memory configuration."
IPR3-NO_REPLIC_MEM	3-Error	No Route Replication memory available for [node]m	The replication of a Route failed because of a low memory condition. The route will not be replicated in the destination table at this time.	-	"Reduce other system activity to ease memory demands. If conditions " "warrant upgrade to a larger memory configuration."
IPRT-3-NO_RIB_TABLE	3-Error	RIB table lookup failure: [hec]	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPRT-3-NO_RIB_TABLE	3-Error	RIB table lookup failure: [hec]	RIB_TABLE_EXPLANATION	-	LOG_SID_RECUR_ACTION
IPRT-3-NOMEMORY	3-Error	No memory available for [chars]	The requested operation failed because of a low memory condition.	-	"Reduce other system activity to ease memory demands. If conditions " "warrant upgrade to a larger memory configuration."
IPRT-3-NOMEMORY	3-Error	No memory available for [chars]	The requested operation failed because of a low memory condition.	-	"Reduce other system activity to ease memory demands. If conditions " "warrant upgrade to a larger memory configuration."
IPRT-3-NOTEXIST_BFD	3-Error	Static BFD neighbor does not exist: [chars] [chars] %i	Failed to find corresponding static BFD neighbor.	-	LOG_SID_RECUR_ACTION
IPRT-3-NOTEXIST_BFD	3-Error	Static BFD neighbor does not exist: [chars] [chars] %i	Failed to find corresponding static BFD neighbor.	-	LOG_SID_RECUR_ACTION
IPRT-3-NOTREG_BFD	3-Error	Unexpected reachability notification: [chars] [chars] %i	Gateway is not tracked by BFD.	-	LOG_SID_RECUR_ACTION
IPRT-3-NOTREG_BFD	3-Error	Unexpected reachability notification: [chars] [chars] %i	Gateway is not tracked by BFD.	-	LOG_SID_RECUR_ACTION
IPRT-3-NOISAMEOWNER	3-Error	SAME_PROTO dist_status [dec] from [chars] for route owned by [chars]	-	-	-
IPRT-3-NOISAMEOWNER	3-Error	SAME_PROTO dist_status [dec] from [chars] for route owned by [chars]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPRT-3-NULL_NDB	3-Error	Unexpected null NDB	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IPRT-3-NULL_NDB	3-Error	Unexpected null NDB	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IPRT-3-NULL_NDBSHR	3-Error	Unexpected null NDBSHR [hec]	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IPRT-3-NULL_NDBSHR	3-Error	Unexpected null NDBSHR [hec]	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IPRT-3-NULL_RDB	3-Error	Unexpected null RDB	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IPRT-3-NULL_RDB	3-Error	Unexpected null RDB	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IPRT-3-NULL_RDBSHR	3-Error	Unexpected null RDBSHR [hec]	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IPRT-3-NULL_RDBSHR	3-Error	Unexpected null RDBSHR [hec]	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IRI3PARSER_REG_ERROR	3-Error	Unable to register [chars] submode translation callback mode = 0x[hex]	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IRI3PARSER_REG_ERROR	3-Error	Unable to register [chars] submode translation callback mode = 0x[hex]	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IPRT-3-PATHIDX	3-Error	Bad path pointer of [hec] for [node][dec] max	A software error occurred.	-	LOG_STD_ACTION
IPRT-3-PATHIDX	3-Error	Bad path pointer of [hec] for [node][dec] max	A software error occurred.	-	LOG_STD_ACTION
IPRT-3-PDB_DEL_ERROR	3-Error	Pdb delete error [chars] [hec] [hec] [hec] [hec] [hec]	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IPRT-3-PDB_DEL_ERROR	3-Error	Pdb delete error [chars] [hec] [hec] [hec] [hec] [hec]	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IRI3PDB_STATIC_ERROR	3-Error	Static pdb procinfo is NULL	RB_NT_ERR_EXPLANATION	ip	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPR3PDB_STATIC_ERROR	3-Error	Static pdb procinfo is NULL	RB_NT_ERR_EXPLANATION	ip	LOG_SID_RECUR_ACTION
IRBROCURNADACLME	3-Error	Invalid ACL type [dec] is configured.	RB_NT_ERR_EXPLANATION	ribinfra	LOG_SID_RECUR_ACTION
IRBROCURNADACLME	3-Error	Invalid ACL type [dec] is configured.	RB_NT_ERR_EXPLANATION	ribinfra	LOG_SID_RECUR_ACTION
IRPCHROEVMACONERR	3-Error	Protocol filter routemap [chars] configuration failed	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IRPCHROEVMACONERR	3-Error	Protocol filter routemap [chars] configuration failed	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IRBROCURSBADERR	3-Error	Topology 0x[hec] interface [chars] add sub-block failed for sb_type [dec]	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IRBROCURSBADERR	3-Error	Topology 0x[hec] interface [chars] add sub-block failed for sb_type [dec]	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IPR3RDB_BAD_MAGIC	3-Error	Bad magic for RDB structure [hec]/[hec]	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IPR3RDB_BAD_MAGIC	3-Error	Bad magic for RDB structure [hec]/[hec]	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IPR3RDBSR_BAD_MAGIC	3-Error	Bad magic for RDBSHR structure [hec]/[hec]/[hec]	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IPR3RDBSR_BAD_MAGIC	3-Error	Bad magic for RDBSHR structure [hec]/[hec]/[hec]	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IRPSPAWN_CNTRERR	3-Error	Unable to get process respawn count	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IRPSPAWN_CNTRERR	3-Error	Unable to get process respawn count	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IRI3RIB_ACCHDR_NI	3-Error	Error Registering [chars] RIB handlers with RIB Access Infra	An internal software error occurred preventing Access to RIB Data.	ribinfra	"Copy the message exactly as it appears and report it to your " "technical support representative."
IRI3RIB_ACCHDR_NI	3-Error	Error Registering [chars] RIB handlers with RIB Access Infra	An internal software error occurred preventing Access to RIB Data.	ribinfra	"Copy the message exactly as it appears and report it to your " "technical support representative."
IRI3RIB_INTERNAL_ERR	3-Error	[chars]	RIB_INTERNAL_EXPLANATION	ribinfra	LOG_SID_RECUR_ACTION
IRI3RIB_INTERNAL_ERR	3-Error	[chars]	RIB_INTERNAL_EXPLANATION	ribinfra	LOG_SID_RECUR_ACTION
IPRT-3-RIB_LOOP	3-Error	Resolution loop formed by routes in RIB	RIB route producers have installed routes in the RIB that form a loop during resolution.	-	"Resolve the RIB route resolution loop:\n" "1 Determine which routes are involved in the loop by issuing the "
IPRT-3-RIB_LOOP	3-Error	Resolution loop formed by routes in RIB	RIB route producers have installed routes in the RIB that form a loop during resolution.	-	"Resolve the RIB route resolution loop:\n" "1 Determine which routes are involved in the loop by issuing the "
IPRT-3-RIBTABLEERROR	3-Error	RIB error [dec] on [chars] - [chars]	An internal software error occurred processing an event associated with a routing table.	-	"Copy the message exactly as it appears and report it to your " "technical support representative."
IPRT-3-RIBTABLEERROR	3-Error	RIB error [dec] on [chars] - [chars]	An internal software error occurred processing an event associated with a routing table.	-	"Copy the message exactly as it appears and report it to your " "technical support representative."
IRI3RCUIHENSERERROR	3-Error	Error inserting routing entry [node]m into IP [chars] routing table	An error has occurred when a routing entry was being inserted into the IP routing table.	-	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IRI3R0UIHNSR</del> ERROR	3-Error	Error inserting routing entry [node]m into IP [chars] routing table	An error has occurred when a routing entry was being inserted into the IP routing table.	-	LOG_SID_RECUR_ACTION
<del>IRI3R0UIHM</del> EXCEEDED	3-Error	IP routing table limit exceeded - [chars]	The number of routes in the named IP routing table has reached the configured limit. No further routes will be added to the table	-	"Reduce the number of routes in the table or reconfigure the limit"
<del>IRI3R0UIHM</del> EXCEEDED	3-Error	IP routing table limit exceeded - [chars]	The number of routes in the named IP routing table has reached the configured limit. No further routes will be added to the table	-	"Reduce the number of routes in the table or reconfigure the limit"
<del>IRI3R0UIHM</del> WARNING	3-Error	IP routing table limit warning - [chars]	The number of routes in the named IP routing table has reached the configured warning limit.	-	"Reduce the number of routes in the table or reconfigure the limit"
<del>IRI3R0UIHM</del> WARNING	3-Error	IP routing table limit warning - [chars]	The number of routes in the named IP routing table has reached the configured warning limit.	-	"Reduce the number of routes in the table or reconfigure the limit"
<del>IRI3R0UIHRL</del> ACHERRROR	3-Error	Error replacing route to [node]m with better route in IP [chars] routing table	Copy the message exactly as it appears and report it to your technical support representative.	-	LOG_SID_RECUR_ACTION
<del>IRI3R0UIHRL</del> ACHERRROR	3-Error	Error replacing route to [node]m with better route in IP [chars] routing table	Copy the message exactly as it appears and report it to your technical support representative.	-	LOG_SID_RECUR_ACTION
<del>IRI3R0UIAC</del> GWFNOSSEI	3-Error	Inconsistence static route database [chars] [chars] %i	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>RRS1ACDWNCONSIENCE</del>	3-Error	Inconsistence static route database [chars] [chars] %i	-	-	-
<del>RRS1SRPOLYNOSSIENE</del>	3-Error	Inconsistence static route database due to [chars] on [node]m via policy [chars] [dec]	-	-	-
<del>RRS1SRPOLYNOSSIENE</del>	3-Error	Inconsistence static route database due to [chars] on [node]m via policy [chars] [dec]	-	-	-
<del>RRS1ACDWNCONSIENCE</del>	3-Error	Inconsistent static route database due to [chars] on [node]m on [chars] via %i	An error has occurred due to inconsistence on static route table.	-	LOG_SID_RECUR_ACTION
<del>RRS1ACDWNCONSIENCE</del>	3-Error	Inconsistent static route database due to [chars] on [node]m on [chars] via %i	An error has occurred due to inconsistence on static route table.	-	LOG_SID_RECUR_ACTION
<del>RRS1ACROUTE\$ADDAED</del>	3-Error	Failed to add static route to database [chars] on [node]m on [chars] via %i	An error has occurred due to failed add on static route table.	-	LOG_SID_RECUR_ACTION
<del>RRS1ACROUTE\$ADDAED</del>	3-Error	Failed to add static route to database [chars] on [node]m on [chars] via %i	An error has occurred due to failed add on static route table.	-	LOG_SID_RECUR_ACTION
<del>RRS1ACROUTE\$ALDRWSART</del>	3-Error	Failed to start route watch for topology [chars] gateway [node]m flag 0x[hec] rc [dec]	An error has occurred failed to start route watch for this static route.	-	LOG_SID_RECUR_ACTION
<del>RRS1ACROUTE\$ALDRWSART</del>	3-Error	Failed to start route watch for topology [chars] gateway [node]m flag 0x[hec] rc [dec]	An error has occurred failed to start route watch for this static route.	-	LOG_SID_RECUR_ACTION



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>RSAPRQUSRWDWSCP</del>	3-Error	Failed to stop route watch for static route handle [hec] route watch handle [hec] gateway [node]interface [chars] rc [dec]	An error has occurred due to failed to stop route watch for this static route.	-	LOG_SID_RECUR_ACTION
<del>RSAPRQUSRWDWSCP</del>	3-Error	Failed to stop route watch for static route handle [hec] route watch handle [hec] gateway [node]interface [chars] rc [dec]	An error has occurred due to failed to stop route watch for this static route.	-	LOG_SID_RECUR_ACTION
<del>RSAPRQUSRWCHAECHNO</del>	3-Error	Failed to get the route info through route watch	An internal error has occurred which could cause inconsistence routing table due to route watch	-	LOG_SID_RECUR_ACTION
<del>RSAPRQUSRWCHAECHNO</del>	3-Error	Failed to get the route info through route watch	An internal error has occurred which could cause inconsistence routing table due to route watch	-	LOG_SID_RECUR_ACTION
<del>RSAPRQUSRWCHAEICOP</del>	3-Error	Route watch failed to determine to keep a loop or not	An internal error has occurred which could cause inconsistence routing table due to route watch	-	LOG_SID_RECUR_ACTION
<del>RSAPRQUSRWCHAEICOP</del>	3-Error	Route watch failed to determine to keep a loop or not	An internal error has occurred which could cause inconsistence routing table due to route watch	-	LOG_SID_RECUR_ACTION
<del>RSAPRQUSRWCHAEICG</del>	3-Error	Failed to get the correct route watch signature [hec]	An internal error has occurred which could cause inconsistence routing table due to route watch	-	LOG_SID_RECUR_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>IRSAFROUTEWATCH_HILDG</del>	3-Error	Failed to get the correct route watch signature [hec]	An internal error has occurred which could cause inconsistency routing table due to route watch	-	LOG_SID_RECUR_ACTION
<del>IRSAFROUTE_STATICLOCK</del>	3-Error	Unable to lock topology [chars] table in static route	An error has occurred when a static route failed to lock corresponding topology routing table.	-	LOG_SID_RECUR_ACTION
<del>IRSAFROUTE_STATICLOCK</del>	3-Error	Unable to lock topology [chars] table in static route	An error has occurred when a static route failed to lock corresponding topology routing table.	-	LOG_SID_RECUR_ACTION
<del>IRSAFROUTE_HANDLE_ERROR</del>	3-Error	Unable to get topology handler topoid = [dec] [chars]	<del>RB_NT_ERR_EXPLANATION</del>	ip	LOG_SID_RECUR_ACTION
<del>IRSAFROUTE_HANDLE_ERROR</del>	3-Error	Unable to get topology handler topoid = [dec] [chars]	<del>RB_NT_ERR_EXPLANATION</del>	ip	LOG_SID_RECUR_ACTION
<del>IRSAFROUTE_INVALID_ALLOC_ERROR</del>	3-Error	Error allocating [dec] next hops for [node]m via [node]m	<del>RB_NT_ERR_EXPLANATION</del>	-	LOG_SID_RECUR_ACTION
<del>IRSAFROUTE_INVALID_ALLOC_ERROR</del>	3-Error	Error allocating [dec] next hops for [node]m via [node]m	<del>RB_NT_ERR_EXPLANATION</del>	-	LOG_SID_RECUR_ACTION
<del>IPRT-3-VIAUPD_ERROR</del>	3-Error	Error [dec] inserting additional path for [node]m via [node]m	<del>RB_NT_ERR_EXPLANATION</del>	-	LOG_SID_RECUR_ACTION
<del>IPRT-3-VIAUPD_ERROR</del>	3-Error	Error [dec] inserting additional path for [node]m via [node]m	<del>RB_NT_ERR_EXPLANATION</del>	-	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPRT-4-BADRIBDB	4-Warning	Attempt to remove a next hop from the wrong table. Attempted: [chars] should be: [chars] prefix: %i	Attempt to remove a next hop from the wrong routing table	-	LOG_SID_RECUR_ACTION
IPRT-4-BADRIBDB	4-Warning	Attempt to remove a next hop from the wrong table. Attempted: [chars] should be: [chars] prefix: %i	Attempt to remove a next hop from the wrong routing table	-	LOG_SID_RECUR_ACTION
RR-4-BADRACKOBJECTIVE	4-Warning	can't track this type of object	Route maps only support STATE type track objects. This object is not a STATE object	-	"Reconfigure the track object to make it a STATE object."
RR-4-BADRACKOBJECTIVE	4-Warning	can't track this type of object	Route maps only support STATE type track objects. This object is not a STATE object	-	"Reconfigure the track object to make it a STATE object."
RR-4-INVALID_NRCONTEXT	4-Warning	Invalid context type: [dec] state: [dec]	RR-4-INVALID_NRCONTEXT	-	LOG_SID_RECUR_ACTION
RR-4-INVALID_NRCONTEXT	4-Warning	Invalid context type: [dec] state: [dec]	RR-4-INVALID_NRCONTEXT	-	LOG_SID_RECUR_ACTION
IPRT-4-IPV6_NEXTHOP	4-Warning	IPv4 prefix 0x[hec]:[node]has IPv6 next hop only!	This IPv4 prefix has IPv6 next hop only. Client is calling legacy API which only supports IPv4 next hop	-	"Please file a DDTS against client to call new API to support " "both IPv4 and IPv6 next hop"
IPRT-4-IPV6_NEXTHOP	4-Warning	IPv4 prefix 0x[hec]:[node]has IPv6 next hop only!	This IPv4 prefix has IPv6 next hop only. Client is calling legacy API which only supports IPv4 next hop	-	"Please file a DDTS against client to call new API to support " "both IPv4 and IPv6 next hop"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPRI4NDB_STATE_CHANGE	4-Warning	NDB state change: [node]m [hec]->[hec] [dec]->[dec] [hec] refcnt [dec] tid [dec] cnt [dec]	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IPRI4NDB_STATE_CHANGE	4-Warning	NDB state change: [node]m [hec]->[hec] [dec]->[dec] [hec] refcnt [dec] tid [dec] cnt [dec]	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IPRI4RECURSIVE_ERASE	4-Warning	Recursive erase [dec] [hec]/[hec] [hec]	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IPRI4RECURSIVE_ERASE	4-Warning	Recursive erase [dec] [hec]/[hec] [hec]	RB_NT_ERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IPRI4REDIST_MAX_PFX	4-Warning	Redistribution prefix limit has been reached \[chars]\ - [dec] prefixes	We have reached the maximum number of redistributed prefixes	-	"Check if redistribution of large number of prefixes is " "desired and has not been configured by mistake"
IPRI4REDIST_MAX_PFX	4-Warning	Redistribution prefix limit has been reached \[chars]\ - [dec] prefixes	We have reached the maximum number of redistributed prefixes	-	"Check if redistribution of large number of prefixes is " "desired and has not been configured by mistake"
IPRI4REDIST_THR_PFX	4-Warning	Redistribution prefix threshold has been reached \[chars]\ - [dec] prefixes	We have reached the threshold level of number of redistributed prefixes	-	"Check if redistribution of large number of prefixes is " "desired and has not been configured by mistake"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPRT4REDIST_THR_PFX	4-Warning	Redistribution prefix threshold has been reached \[chars]\ - [dec] prefixes	We have reached the threshold level of number of redistributed prefixes	-	"Check if redistribution of large number of prefixes is " "desired and has not been configured by mistake"
IPRT4RIB_DEBUG_ERROR	4-Warning	Generic RIB error: [hec] [hec] [hec] [hec] [hec] [hec]	RIB_NTERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IPRT4RIB_DEBUG_ERROR	4-Warning	Generic RIB error: [hec] [hec] [hec] [hec] [hec] [hec]	RIB_NTERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IR4RIBDELETEPENDING_ERROR	4-Warning	RIB Marked Delete Pending in wrong state: [hec] [dec]	RIB_NTERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IR4RIBDELETEPENDING_ERROR	4-Warning	RIB Marked Delete Pending in wrong state: [hec] [dec]	RIB_NTERR_EXPLANATION	-	LOG_SID_RECUR_ACTION
IR4ROUTECOUNTINGAIME	4-Warning	IP route counter negative - [chars] [node]Attempt: [dec]	Attempt to decrement IP route counter into negative value	ribinfra	"Use "clear ip route *" command to reset the route counter. If " "the message still comes out consistently copy the messages exactly " "as they appear and report it to your technical support " "representative."
IR4ROUTECOUNTINGAIME	4-Warning	IP route counter negative - [chars] [node]Attempt: [dec]	Attempt to decrement IP route counter into negative value	ribinfra	"Use "clear ip route *" command to reset the route counter. If " "the message still comes out consistently copy the messages exactly " "as they appear and report it to your technical support " "representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>RIB_CHEGRCR</del>	4-Warning	RIB Rwatch failed to create bfd neighbor session proctype [dec] src_topoid [hec] dst_topoid [hec] [chars][chars][chars] neighbor [chars]	<del>RIB_ERR_EXPLANATION</del>	-	LOG_SID_RECUR_ACTION
<del>RIB_CHEGRCR</del>	4-Warning	RIB Rwatch failed to create bfd neighbor session proctype [dec] src_topoid [hec] dst_topoid [hec] [chars][chars][chars] neighbor [chars]	<del>RIB_ERR_EXPLANATION</del>	-	LOG_SID_RECUR_ACTION
<del>RIB_CHEGRCR</del>	4-Warning	RIB Rwatch failed to insert bfd neighbor session into WAVL tree proctype [dec] topoid [hec] [chars] neighbor [chars]	<del>RIB_ERR_EXPLANATION</del>	ribinfra	LOG_SID_RECUR_ACTION
<del>RIB_CHEGRCR</del>	4-Warning	RIB Rwatch failed to insert bfd neighbor session into WAVL tree proctype [dec] topoid [hec] [chars] neighbor [chars]	<del>RIB_ERR_EXPLANATION</del>	ribinfra	LOG_SID_RECUR_ACTION
<del>RIB_CHEGRCR</del>	4-Warning	RIB Rwatch neighbor not found in WAVL tree for deletion client : [chars] topoid : [hec] interface : [chars] binding label: [chars] address : [chars]	<del>RIB_ERR_EXPLANATION</del>	ribinfra	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>RWATCHNEIGHBOR</del>	4-Warning	RIB Rwatch neighbor not found in WAVL tree for deletion client : [chars] topoid : [hec] interface : [chars] binding label: [chars] address : [chars]	<del>RBNTERR</del> EXPLANATION	ribinfra	LOG_SID_RECUR_ACTION
<del>RWATCHRS</del> DELETE	4-Warning	RIB Rwatch tracked sequence number [node]not found for client : [chars] topoid : [hec] prefix : [chars] prefix_len : [dec]	<del>RBNTERR</del> EXPLANATION	ribinfra	LOG_SID_RECUR_ACTION
<del>RWATCHRS</del> DELETE	4-Warning	RIB Rwatch tracked sequence number [node]not found for client : [chars] topoid : [hec] prefix : [chars] prefix_len : [dec]	<del>RBNTERR</del> EXPLANATION	ribinfra	LOG_SID_RECUR_ACTION
<del>RWATCH</del> UPCALL	4-Warning	RIB Rwatch failed to initialize the upcall table afi [dec]	<del>RBNTERR</del> EXPLANATION	-	LOG_SID_RECUR_ACTION
<del>RWATCH</del> UPCALL	4-Warning	RIB Rwatch failed to initialize the upcall table afi [dec]	<del>RBNTERR</del> EXPLANATION	-	LOG_SID_RECUR_ACTION
<del>RWATCH</del> SACEWARN	4-Warning	Route watch client-[chars] is calling the API from RIB context !!	Improper usage of the API spotted from the caller.\n Check if the api was called directly from a notification callback	-	"Ideal usage is to enqueue the RWATCH notifications to a client process and the api should be called from client context"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RWATCHLUSACEWARN	4-Warning	Route watch client-[chars] is calling the API from RIB context !!	Improper usage of the API spotted from the caller.\n Check if the api was called directly from a notification callback	-	"Ideal usage is to enqueue the RWATCH notifications to a client process and the api should be called from client context"
RSAICROUESBDEMENT	5-Notice	BFD session [chars][[chars]]	An ipv4 static route BFD session has either come up or gone down \n The message describes the change for it. This message appears only if the <Bold>log<nobold> command is configured for the ipv4 static route BFD process.	-	"This informational message normally appears as routers and \n\ ipv4 static route BFD sessions go up or down."
RSAICROUESBDEMENT	5-Notice	BFD session [chars][[chars]]	An ipv4 static route BFD session has either come up or gone down \n The message describes the change for it. This message appears only if the <Bold>log<nobold> command is configured for the ipv4 static route BFD process.	-	"This informational message normally appears as routers and \n\ ipv4 static route BFD sessions go up or down."
IPRT-6-DELETEINGTOP	6-Information	topology [chars] is deleting in static routing entry [node]m	A static route found a corresponding deleting topology routing table.	-	"The action is not taken due to topology deleting state"
IPRT-6-DELETEINGTOP	6-Information	topology [chars] is deleting in static routing entry [node]m	A static route found a corresponding deleting topology routing table.	-	"The action is not taken due to topology deleting state"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IPSEC3-ROUTESACROSS</del> IPSEC3-ROUTESACROSS	6-Information	Cannot install inter-topology static route [node]m topology [chars] on outgoing interface [chars]	Restricting the access of static routes that point across topologies	-	"Remove the static routes that are pointing across topology interfaces"
<del>IPSEC3-ROUTESACROSS</del> IPSEC3-ROUTESACROSS	6-Information	Cannot install inter-topology static route [node]m topology [chars] on outgoing interface [chars]	Restricting the access of static routes that point across topologies	-	"Remove the static routes that are pointing across topology interfaces"
<del>IPSEC3-ROUTESACROSS</del> IPSEC3-ROUTESACROSS	6-Information	Un-installing static route [node]m from [chars] routing table with outgoing interface [chars]	Restricting the access of static routes that point across vrfs	-	"Remove the static routes that are pointing across VRF interfaces"
<del>IPSEC3-ROUTESACROSS</del> IPSEC3-ROUTESACROSS	6-Information	Un-installing static route [node]m from [chars] routing table with outgoing interface [chars]	Restricting the access of static routes that point across vrfs	-	"Remove the static routes that are pointing across VRF interfaces"
IPSEC-3-ANTI_REPLAY	3-Error	SA 0x[hec]0x[hec]	Anti Replay check failed for the SA.	cpp-ucode	LOG_STD_ACTION
<del>IPSEC3-CHUNK_CREATE</del> IPSEC3-CHUNK_CREATE	3-Error	-	Chunk creation failed	cpp-ucode	LOG_STD_ACTION
<del>IPSEC3-CHUNK_DESTROY</del> IPSEC3-CHUNK_DESTROY	3-Error	-	Chunk destroy error force cleanup	cpp-ucode	LOG_STD_ACTION
<del>IPSEC3-CHUNK_DESTROY</del> IPSEC3-CHUNK_DESTROY	3-Error	-	Chunk destroy failed	cpp-ucode	LOG_STD_ACTION
IPSEC-3-DROP	3-Error	result type 0x[hec]	Classification results in Drop.	cpp-ucode	LOG_STD_ACTION
<del>IPSEC3-CLEARTEXT_POLICY</del> IPSEC3-CLEARTEXT_POLICY	3-Error	-	Policy fail for For-Us cleartext packet.	cpp-ucode	LOG_STD_ACTION
IPSEC-3-FRAG_ERROR	3-Error	IPSec SA received fragmented ESP packet DP Handle [dec] src_addr [char]i dest_addr [char]i SPI 0x[hec]	Fragmented ESP packet is received for this IPSec session.	qfp-ipsec	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPSEC3FRAG_ERROR_IPV6	3-Error	IPSec SA received fragmented ESP packet DP Handle [dec] ipv6 src_addr [char]I ipv6 dest_addr [char]I SPI 0x[hec]	Fragmented ESP packet is received for this IPSec session.	qfp-ipsec	LOG_STD_ACTION
IPSEC3FRAG_MPASS	3-Error	-	Multipass Error	cpp-ucode	LOG_STD_ACTION
IPSEC3HMAC_ERROR	3-Error	IPSec SA receives HMAC error DP Handle [dec] src_addr [char]i dest_addr [char]i SPI 0x[hec]	HMAC calculation error is encountered for this IPSec session.	qfp-ipsec	LOG_STD_ACTION
IPSEC3HMAC_ERROR_V6	3-Error	IPSec SA receives HMAC error DP Handle [dec] ipv6 src_addr [char]I ipv6 dest_addr [char]I SPI 0x[hec]	HMAC calculation error is encountered for this IPSec session.	qfp-ipsec	LOG_STD_ACTION
IPSEC3IKE_TEDMSG_LMT	3-Error	cnt [dec] sp 0x[hec] cp sp 0x[hec]	IKE TED Message Limit exceeded.	cpp-ucode	LOG_STD_ACTION
IPSEC3IKE_TEDMSG_RATE	3-Error	cnt [dec] sp 0x[hec] cp sp 0x[hec]	IKE TED Message Rate exceeded.	cpp-ucode	LOG_STD_ACTION
IPSEC3IN_POLICY_FAIL	3-Error	out sa 0x[hec]0x[hec] out sp 0x[hec]0x[hec] in sa 0x[hec]0x[hec] in sp 0x[hec]0x[hec]	In-Out SP mis-match.	cpp-ucode	LOG_STD_ACTION
IPSEC3IN_POLICY_MISS	3-Error	sa 0x[hec] cp sa 0x[hec]	TCAM miss.	cpp-ucode	LOG_STD_ACTION
IPSEC3INTIF_NOT_CFG	3-Error	-	Got an encrypted packet on an interface on which ipsec is not configured.	cpp-ucode	LOG_STD_ACTION
IPSEC3INVALID_PROT	3-Error	invalid ipsec prot 0x[hec]	Got an invalid IPSEC protocol value.	cpp-ucode	LOG_STD_ACTION
IPSEC3INVALID_SA	3-Error	sa 0x[hec] cp sa 0x[hec]	SA is invalid.	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPSEC-3-INVALID_SPI	3-Error	spi 0x[hec]	Got an invalid SPI value.	cpp-ucode	LOG_STD_ACTION
IPSEC-3-INVALID_VAL	3-Error	val 0x[hec]	Invalid value seen.	cpp-ucode	LOG_STD_ACTION
IPSEC-3-IPC_ERR_SA	3-Error	rc 0x[hec]	An error has occurred sending SA Byte Lifetime expiry event.	cpp-ucode	LOG_STD_ACTION
IPSEC-3-IPC_HANDLER_ERR	3-Error	rc 0x[hec]	Error setting IPC Handler.	cpp-ucode	LOG_STD_ACTION
IPSEC-3-INVALID_IPC_LEN	3-Error	[dec]:[dec] len [dec] flags 0x[hec] source [dec]	Invalid IPC message length	cpp-ucode	LOG_STD_ACTION
IPSEC-3-IPC_PAK_ALLOC	3-Error	sp 0x[hec] cp sp 0x[hec]	IPC pak allocation failed.	cpp-ucode	LOG_STD_ACTION
IPSEC-3-IPC_PAK_ALLOC_FAIL	3-Error	event 0x[hec] sa 0x[node]x	IPC pak allocation failed.	cpp-ucode	LOG_STD_ACTION
IPSEC-3-IPC_PAK_SEND	3-Error	rc 0x[hec] sp 0x[hec] cp sp 0x[hec]	IPC send failed.	cpp-ucode	LOG_STD_ACTION
IPSEC-3-IPC_PAK_SEND_FAIL	3-Error	rc 0x[hec] event 0x[hec] sa 0x[node]x	IPC send failed.	cpp-ucode	LOG_STD_ACTION
IPSEC-3-IPC_MEM_ALLOC_REACHED_LIMIT	3-Error	IPC type 0x[hec]	Cannot allocate more memory to store state for IPsec Traffic reached upper limit.	cpp-ucode	LOG_STD_ACTION
IPSEC-3-IPC_MEM_EXTEND_FAILED	3-Error	IPC type 0x[hec]	Extending memory failed	cpp-ucode	LOG_STD_ACTION
IPSEC-3-IPC_MEM_REQ_FAILED	3-Error	IPC type 0x[hec]	Requesting more memory failed.	cpp-ucode	LOG_STD_ACTION
IPSEC-3-NO_MEMORY	3-Error	No memory 0x[hec]	No memory to send response back.	cpp-ucode	LOG_STD_ACTION
IPSEC-3-PKT_TOO_BIG	3-Error	IPsec Packet size [dec] larger than maximum supported size [dec] hence dropping it	Maximum size for packet with IPSEC encapsulation is 9K This packet exceeded the size limit hence dropping it.	qfp-ipsec	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IPSEC3RCMDIKTNOTIPSEC</del>	3-Error	Rec'd packet not an IPSEC packet dest_addr= [char]i src_addr= [char]i prot= [dec]\n	Rec'd packet matched crypto map ACL but is not IPSEC-encapsulated.	qfp-ipsec	LOG_STD_ACTION
<del>IPSEC3RCMDIKTNOTIPSEC6</del>	3-Error	Rec'd packet not an IPSEC packet dest_addr= [char]I src_addr= [char]I prot= [dec]\n	Rec'd packet matched crypto map ACL but is not IPSEC-encapsulated.	qfp-ipsec	LOG_STD_ACTION
IPSEC3REPLAY_ERROR	3-Error	IPSec SA receives anti-replay error DP Handle [dec] src_addr [char]i dest_addr [char]i SPI 0x[hec]	Anti-replay error is encountered for this IPSec session.	qfp-ipsec	LOG_STD_ACTION
<del>IPSEC3REPLAY_ERROR_IPV6</del>	3-Error	IPSec SA receives anti-replay error DP Handle [dec] ipv6 src_addr [char]I ipv6 dest_addr [char]I SPI 0x[hec]	Anti-replay error is encountered for this IPSec session.	qfp-ipsec	LOG_STD_ACTION
IPSEC3SA_HARD_BYTE	3-Error	SA 0x[hec]0x[hec]	SA Hardbyte Lifetime expiry event.	cpp-ucode	LOG_STD_ACTION
IPSEC3SA_NOT_FOUND	3-Error	-	SA not found.	cpp-ucode	LOG_STD_ACTION
IPSEC3SA_SOFT_BYTE	3-Error	SA 0x[hec]0x[hec]	SA Softbyte Lifetime expiry event.	cpp-ucode	LOG_STD_ACTION
IPSEC3SEQN_OVERFLOW	3-Error	SA 0x[hec]0x[hec]	Sequence Number overflow for the SA.	cpp-ucode	LOG_STD_ACTION
<del>IPSEC3TRANSIT_POLICY_FAIL</del>	3-Error	-	Policy fail for transit ipsec packet.	cpp-ucode	LOG_STD_ACTION
<del>IPSEC3UNEXHCTED_ERROR</del>	3-Error	orh.w0 0x[hec] error_op 0x[hec] SA 0x[hec]0x[hec]	Unexpected error for the SA.	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IS</del> IS/4/KIP/COO/MB/ACH	4-Warning	IP protocol in packet mismatched with tunnel mode packet from [chars] to [chars] dropped by [chars]	We tried to send an IPv4 packet into an IPSec-IPv6 tunnel or an IPv6 packet into an IPSec-IPv4 tunnel. The tunnel cannot handle this type of packet and so the packet is dropped.	-	"Modify the tunnel configuration either by removing the" " incorrect IP address type from the tunnel interface or by" " changing the tunnel mode to match the IP address type."
<del>IS</del> IS/4/KIP/COO/MB/ACH	4-Warning	IP protocol in packet mismatched with tunnel mode packet from [chars] to [chars] dropped by [chars]	We tried to send an IPv4 packet into an IPSec-IPv6 tunnel or an IPv6 packet into an IPSec-IPv4 tunnel. The tunnel cannot handle this type of packet and so the packet is dropped.	-	"Modify the tunnel configuration either by removing the" " incorrect IP address type from the tunnel interface or by" " changing the tunnel mode to match the IP address type."
<del>IS</del> IS/4/RCD/IK/NO/IS/6	4-Warning	Rec'd packet not an IPSEC packet.\n \tip dest_addr=[node]src_addr=[node]prot=[dec]	-	-	-
<del>IS</del> IS/4/RCD/IK/NO/IS/6	4-Warning	Rec'd packet not an IPSEC packet.\n \tip dest_addr=[node]src_addr=[node]prot=[dec]	-	-	-
<del>IS</del> IS/4/RCD/IK/NO/IS/6	4-Warning	decapsulate: packet missing [chars] destadr=[node]actual prot=[dec]	Rec'd IPSEC packet missing an expected AH or ESP header The peer is sending packets that don't match the negotiated security policy. Some might consider this a hostile event.	-	"Contact the peer's administrator."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IPV4URPF4DROPT</del>	3-Error	Unsupported link type - linktype = [dec] dropping packet	Link type is unsupported at the current time.	cpp-ucode	LOG_STD_ACTION
<del>IPV4URPF4IDSIZE</del>	3-Error	Table ID size configured incorrectly: [dec]	Table ID size must be less than or equal to 16 or 32 bits.	cpp-ucode	LOG_STD_ACTION
<del>IPV4URPF4INDEX</del>	3-Error	Traffic index invalid value: [dec] Buckets allocated: [dec]	Traffic index is greater than or equal to the buckets allocated	cpp-ucode	LOG_STD_ACTION
<del>IPV4URPF4CHKSUM</del>	4-Warning	Checksum buffer walk failed	Internal problem occurred during calculating segmented packet checksum.	cpp-ucode	LOG_STD_ACTION
<del>IPV4URPF4FRAGMENT</del>	3-Error	-	Increasing of fragment information pool failed.	cpp-ucode	LOG_STD_ACTION
<del>IPV4URPF4FRAGMENT</del>	3-Error	-	Initialization of fragment information pool failed.	cpp-ucode	LOG_STD_ACTION
<del>IPV4URPF4IPC</del>	3-Error	[dec]	IPC handler initialization failed.	cpp-ucode	LOG_STD_ACTION
<del>IPV4URPF4IPC</del>	4-Warning	[hec]	Received an invalid IPC messages subtype.	cpp-ucode	LOG_STD_ACTION
IPV4_URPF4-DROP	4-Warning	Dropping [chars] from [chars]	This message indicates that the router dropped a packet due to Unicast Reverse Path Forwarding check failure	qfp-ipucast	"This is an informational message"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
IPV4_VFR-4-CONFIG	4-Warning	Dropping [chars] from [chars] due to system config.	This message indicates that the router drops fragment packet due to ip virtual-reassembly drop-fragments	qfp-ipucast	"This is an informational message"
IPV4_VFR-4-FRAGMENT_OVERFLOW	4-Warning	Dropping [chars] from [chars] due to fragment table overflow.	This means the number of datagrams reassembled at a time reached its maximum limit increase the value of max-reassemblies using ip virtual-reassembly max-reassemblies <number>	qfp-ipucast	-
IPV4_VFR-4-INVALID_DROP_LOG_TYPE	4-Warning	Dropping [chars] from [chars]. Invalid drop log type %u	Unsupported drop log type	qfp-ipucast	LOG_STD_ACTION
IPV4_VFR-4-INVALID_FRAGMENT_LENGTH	4-Warning	Dropping [chars] from [chars] due to invalid fragment length.	This message indicates that the router has encountered a fragment with invalid packet length	qfp-ipucast	"To prevent further attacks its highly recommended that an ACL " "be configured to drop any traffic from the sender"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPV4_OHRLAPFRAGMENTS	4-Warning	Dropping [chars] from [chars] due to overlap fragment.	This message is logged whenever the router encounters overlap fragments. Overlap fragment means offset of one fragment overlaps the offset of another fragment. For example if first fragment's offset is 0 and length is 800 then the second fragments offset must be 800. If second fragment's offset is less than 800 that means the second fragment overlaps the first fragment.	qfp-ipucast	"This could possibly be an attack configure a static ACL to prevent " "further overlap fragments from the sender"
IPV4_VFR-4-TIMEOUT	4-Warning	Dropping [chars] from [chars] due to virtual reassembly timeout.	This message indicates that the router is trying to do virtual-reassembly for fragments but got timeout before receiving all the fragments for a datagram	qfp-ipucast	"This is an informational message"
IPV4_VFR-4-TINYFRAGMENTS	4-Warning	Dropping [chars] from [chars] due to tiny fragment.	This message indicates that the router is receiving tiny fragments - meaning the initial fragment does not have complete layer 4 header	qfp-ipucast	"This is an informational message"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PV6_IPCQMNFRGMS	4-Warning	Dropping [chars] from [chars] due to too many fragments for the datagram.	This message indicates the datagram being reassembled has received more fragments than its threshold value	qfp-ipucast	"Check if the fragments received are from a genuine source if so " "increase the value of max-fragments using the CLI " "ip virtual-reassembly max-fragments <number>"
PV6_MCAST_CGERR	3-Error	[chars]	Processing MCAST packet failed due to incorrect config to HW Data structures.	cpp-ucode	LOG_STD_ACTION
PV6_MCAST_MREERR	3-Error	Non MLRE friendly FIA on interface [chars]	Unexpected flowlock id following feature execution	cpp-ucode	LOG_STD_ACTION
PV6_MCAST_RPLAID	3-Error	[chars]	m-cast replication failure for PA described packet.	cpp-ucode	LOG_STD_ACTION
PV6_MCAST_RPLAID	3-Error	[chars] %i	m-cast replication failure due to a bad Multicast Gather parameter.	cpp-ucode	LOG_STD_ACTION
PV6_MCAST_RCHKIAD	3-Error	PIM register from [node]for [node]%i	-	-	-
PV6_ADDRESS3ADDRESSCG	3-Error	[node][dec] can not be configured on [chars] [chars]	An error was encountered while configuring an IPv6 address	ipv6	LOG_STD_ACTION
PV6_ADDRESS3ADDRESSCG	3-Error	[node][dec] can not be configured on [chars] [chars]	An error was encountered while configuring an IPv6 address	ipv6	LOG_STD_ACTION
PV6_ADDRESS3INTERNAL	3-Error	Internal error [chars]	An internal software error occurred.	ipv6	LOG_STD_ACTION
PV6_ADDRESS3INTERNAL	3-Error	Internal error [chars]	An internal software error occurred.	ipv6	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IPv6_ADDRESS3NULLDB</del>	3-Error	Cannot determine an unique IPv6 identifier for the system. IPv6 will not be started.	An IPv6 process could not be started. This machine will not be able to process any IPv6 packets.	ipv6	"Reduce other system activity to ease memory demands. If conditions " "warrant upgrade to a larger memory configuration."
<del>IPv6_ADDRESS3NULLDB</del>	3-Error	Cannot determine an unique IPv6 identifier for the system. IPv6 will not be started.	An IPv6 process could not be started. This machine will not be able to process any IPv6 packets.	ipv6	"Reduce other system activity to ease memory demands. If conditions " "warrant upgrade to a larger memory configuration."
IPv6_ADDRESS3NULLDB	3-Error	Uninitialized interface pointer - [chars]	An internal software error occurred.	ipv6	LOG_STD_ACTION
IPv6_ADDRESS3NULLDB	3-Error	Uninitialized interface pointer - [chars]	An internal software error occurred.	ipv6	LOG_STD_ACTION
IPv6_ADDRESS3INPROGESS	3-Error	Operation in progress - [chars]	An internal software error occurred.	ipv6	LOG_STD_ACTION
IPv6_ADDRESS3INPROGESS	3-Error	Operation in progress - [chars]	An internal software error occurred.	ipv6	LOG_STD_ACTION
IPv6_ADDRESS3RESERVED	3-Error	Removing [node]from [chars] - contains reserved interface identifier. [chars]	Removing IPv6 global address contains the reserved interface identifier	ipv6	LOG_STD_ACTION
IPv6_ADDRESS3RESERVED	3-Error	Removing [node]from [chars] - contains reserved interface identifier. [chars]	Removing IPv6 global address contains the reserved interface identifier	ipv6	LOG_STD_ACTION
IPv6_ADDRESS3INTERNAL	3-Error	Internal error [chars]	An internal software error occurred.	ipv6	LOG_STD_ACTION
IPv6_ADDRESS3INTERNAL	3-Error	Internal error [chars]	An internal software error occurred.	ipv6	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IPv6FORWARDINGERR</del>	2-Critical	Allocation of ipv6 throttle [chars] memory failed	Allocation of memory resource use by ipv6 throttle fail	cpp-ucode	LOG_STD_ACTION
<del>IPv6FORWARDINGERR</del>	3-Error	Unsupported link type [chars] dropping packet	Link type is unsupported at the current time.	cpp-ucode	LOG_STD_ACTION
<del>IPv6FORWARDINGERR</del>	3-Error	Uninitialized interface pointer - [chars]	An internal software error occurred.	ipv6	LOG_STD_ACTION
<del>IPv6FORWARDINGERR</del>	3-Error	Uninitialized interface pointer - [chars]	An internal software error occurred.	ipv6	LOG_STD_ACTION
<del>IPv6FORWARDINGERR</del>	3-Error	Uninitialized buffer pointer - [chars]	An internal software error occurred.	ipv6	LOG_STD_ACTION
<del>IPv6FORWARDINGERR</del>	3-Error	Uninitialized buffer pointer - [chars]	An internal software error occurred.	ipv6	LOG_STD_ACTION
<del>IPv6FORWARDINGERR</del>	3-Error	Table ID size configured incorrectly: [dec]	Table ID size must be less than or equal to 16 or 32 bits.	cpp-ucode	LOG_STD_ACTION
<del>IPv6FORWARDINGERR</del>	3-Error	Cannot fragment packet: unfragmentable part length [dec] MTU of [dec]	An internal software error occurred. A single packet originated by this system could not be fragmented and has been dropped. Normal system operation continues.	ipv6	-
<del>IPv6FORWARDINGERR</del>	3-Error	Cannot fragment packet: unfragmentable part length [dec] MTU of [dec]	An internal software error occurred. A single packet originated by this system could not be fragmented and has been dropped. Normal system operation continues.	ipv6	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPv6_FORWARDING_CHECKSUM	4-Warning	Checksum buffer walk failed	Internal problem occurred during calculating segmented packet checksum.	cpp-ucode	LOG_STD_ACTION
IPv6_FORWARDING_MULTICAST	4-Warning	Application does not support multicast destination address [node]packet dropped.	-	-	-
IPv6_FORWARDING_MULTICAST	4-Warning	Application does not support multicast destination address [node]packet dropped.	-	-	-
IPv6_ICMP-3-NULLPAK	3-Error	Uninitialized buffer pointer - [chars]	An internal software error occurred.	ipv6	LOG_STD_ACTION
IPv6_ICMP-3-NULLPAK	3-Error	Uninitialized buffer pointer - [chars]	An internal software error occurred.	ipv6	LOG_STD_ACTION
IPv6_INTF-3-INTERNAL	3-Error	Internal error [chars]	An internal software error occurred.	ipv6	LOG_STD_ACTION
IPv6_INTF-3-INTERNAL	3-Error	Internal error [chars]	An internal software error occurred.	ipv6	LOG_STD_ACTION
IPv6_INTF-3-MIN_MTU	3-Error	The link MTU of [chars] is below the [node]byte minimum IPv6 link MTU.	As specified in the standard IPv6 requires that every link has an MTU of at least 1280. Since this link's MTU is below that IPv6 is held down on this interface.	ipv6	LOG_SID_NO_ACTION
IPv6_INTF-3-MIN_MTU	3-Error	The link MTU of [chars] is below the [node]byte minimum IPv6 link MTU.	As specified in the standard IPv6 requires that every link has an MTU of at least 1280. Since this link's MTU is below that IPv6 is held down on this interface.	ipv6	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
IPv6_NIF3NO_PROCESS	3-Error	Cannot start IPv6 Interface Process.	An IPv6 process could not be started. This machine will not be able to process any IPv6 packets.	ipv6	"Reduce other system activity to ease memory demands. If conditions " "warrant upgrade to a larger memory configuration."
IPv6_NIF3NO_PROCESS	3-Error	Cannot start IPv6 Interface Process.	The IPv6 Interface Process could not be started. Interfaces will not be enabled for IPv6 Processing. This machine will not be able to process any IPv6 packets.	ipv6	"Reduce other system activity to ease memory demands. If conditions " "warrant upgrade to a larger memory configuration."
IPv6_NIF3SET_MTU	3-Error	The link MTU of [chars] is below the [node]byte user set IPv6 link MTU.	The interface link MTU is below the user set IPv6 link MTU. IPv6 is held down on this interface.	ipv6	LOG_SID_NO_ACTION
IPv6_INTF3SET_MTU	3-Error	The link MTU of [chars] is below the [node]byte user set IPv6 link MTU.	The interface link MTU is below the user set IPv6 link MTU. IPv6 is held down on this interface.	ipv6	LOG_SID_NO_ACTION
IPv6_NIF4L2_MISMATCH	4-Warning	High load on interface events [chars] auto-recovery complete.	-	-	-
IPv6_NIF4L2_MISMATCH	4-Warning	High load on interface events [chars] auto-recovery complete.	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPV6_ND-3-CONFLICT	3-Error	Router [node]on [chars] conflicting ND setting [chars]	Another router on the link sent router advertisements\n\ with conflicting parameters to ours.	ipv6	"Verify that all IPv6 routers on the link have the same parameters\n\ in the router advertisement for hop-limit managed-config-flag\n\ other-config-flag reachable-time and ns-interval and that\n\ preferred and valid lifetimes for the same prefix advertised\n\ by several routers are the same. Use the command show ipv6 interface\n\ to list the parameters per interface."
IPV6_ND-3-CONFLICT	3-Error	Router [node]on [chars] conflicting ND setting [chars]	Another router on the link sent router advertisements\n\ with conflicting parameters to ours.	ipv6	"Verify that all IPv6 routers on the link have the same parameters\n\ in the router advertisement for hop-limit managed-config-flag\n\ other-config-flag reachable-time and ns-interval and that\n\ preferred and valid lifetimes for the same prefix advertised\n\ by several routers are the same. Use the command show ipv6 interface\n\ to list the parameters per interface."
IPV6_ND-3-INTERNAL	3-Error	Internal error [chars]	An internal software error occurred.	ipv6_nd	LOG_STD_ACTION
IPV6_ND-3-INTERNAL	3-Error	Internal error [chars]	An internal software error occurred.	ipv6_nd	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPV6_ND3IPV6PAKENCAP	3-Error	Dest host is IPv4 in IPv6 packet - [chars]	IPv6 packet encapsulation called with IPv4 destination host	ipv6	"Use an IPv6 address in neighbour for IPv6 packet flow on the router" "if the problem persists or you feel this should be supported then " "please contact the TAC with the failing command line."
IPV6_ND3IPV6PAKENCAP	3-Error	Dest host is IPv4 in IPv6 packet - [chars]	IPv6 packet encapsulation called with IPv4 destination host	ipv6	"Use an IPv6 address in neighbour for IPv6 packet flow on the router" "if the problem persists or you feel this should be supported then " "please contact the TAC with the failing command line."
IPV6_ND3RDR_UIR_NUM	3-Error	Router list not empty [node] Recounting routers autocorrecting	There is a mismatch between the number of routers known to ND and\n the number of routers known to the interface. The issue will\n auto-correct itself	ipv6	NOG_SID_NO_ACTION
IPV6_ND3RDR_UIR_NUM	3-Error	Router list not empty [node] Recounting routers autocorrecting	There is a mismatch between the number of routers known to ND and\n the number of routers known to the interface. The issue will\n auto-correct itself	ipv6	NOG_SID_NO_ACTION
IPV6_ND3NULLDATA	3-Error	Uninitialized data - [chars]	An IPv6 process could not be started. This machine will not be able to process any IPv6 packets.	ipv6	"Reduce other system activity to ease memory demands. If conditions " "warrant upgrade to a larger memory configuration."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPV6_ND3-NULLDATA	3-Error	Uninitialized data - [chars]	An IPv6 process could not be started. This machine will not be able to process any IPv6 packets.	ipv6	"Reduce other system activity to ease memory demands. If conditions " "warrant upgrade to a larger memory configuration."
IPV6_ND4-DUPLICATE	4-Warning	Duplicate address [node]on [chars]	Another system is using your IPv6 address.	ipv6	"Change the IPv6 address of one of the " "two systems."
IPV6_ND4-DUPLICATE	4-Warning	Duplicate address [node]on [chars]	Another system is using your IPv6 address.	ipv6	"Change the IPv6 address of one of the " "two systems."
IPV6_ND4-DUPLICATE	4-Warning	Duplicate address [node]on [chars]	You have elected not to run DAD but another system is using your IPv6 address.	ipv6	"Change the IPv6 address of one of the " "two systems."
IPV6_ND4-DUPLICATE	4-Warning	Duplicate address [node]on [chars]	You have elected not to run DAD but another system is using your IPv6 address.	ipv6	"Change the IPv6 address of one of the " "two systems."
IPV6_ND4-DUPOLPFX	4-Warning	Prefix [node][dec] advertised in RA on [chars] was previously learnt on another interface	This warning indicates that an on-link prefix advertised in an IPv6 ND RA on the specified interface has previously been learnt from an RA on another interface. The prefix will be ignored on the current interface	ipv6_nd	" Learning the same on-link prefix via IPv6 ND RA " " on multiple interfaces indicates a likely " " configuration error on adjacent routers." " Review network topology and adjacent router" " configuration and correct as appropriate"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPV6_ND4DUPOLPFX	4-Warning	Prefix [node][dec] advertised in RA on [chars] was previously learnt on another interface	This warning indicates that an on-link prefix advertised in an IPv6 ND RA on the specified interface has previously been learnt from an RA on another interface. The prefix will be ignored on the current interface	ipv6_nd	" Learning the same on-link prefix via IPv6 ND RA" " on multiple interfaces indicates a likely" " configuration error on adjacent routers." " Review network topology and adjacent router" " configuration and correct as appropriate"
IPV6_ND4INTFLIMIT	4-Warning	Attempt to exceed interface limit on [chars] for %P	An ND resolution request was received on the specified interface for the specified destination. Satisfying the request would have exceeded the ND cache entry limit configured on the interface. The request was ignored	ipv6	"No action is necessary. Review the interface" " ND cache entry limit configured via" " ipv6 nd cache interface-limit if appropriate"
IPV6_ND4INTFLIMIT	4-Warning	Attempt to exceed interface limit on [chars] for %P	An ND resolution request was received on the specified interface for the specified destination. Satisfying the request would have exceeded the ND cache entry limit configured on the interface. The request was ignored	ipv6	"No action is necessary. Review the interface" " ND cache entry limit configured via" " ipv6 nd cache interface-limit if appropriate"
IPV6_ND4LLA_CONFLICT	4-Warning	LLA conflict for static neighbor [node]on [chars] : [chars]	This error indicates that an ND message from the specified neighbor carries a Link Layer Address other than that configured via static neighbor	ipv6	"Reconfigure the static neighbor with correct LLA"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPV6_ND4LLA_CONFLICT	4-Warning	LLA conflict for static neighbor [node]on [chars] : [chars]	This error indicates that an ND message from the specified neighbor carries a Link Layer Address other than that configured via static neighbor	ipv6	"Reconfigure the static neighbor with correct LLA"
IPV6_ND4LOOPBACK	4-Warning	Looped back NSDAD packet detected for [node]on [chars]	A looped back DAD NS packet was detected for [node]on [chars]	ipv6	"A neighbor solicitation packet was received for an " "address on which this router is performing duplicate " "address detection. The packet was ignored because it " "originated from this router and was looped back."
IPV6_ND4LOOPBACK	4-Warning	Looped back NSDAD packet detected for [node]on [chars]	A looped back DAD NS packet was detected for [node]on [chars]	ipv6	"A neighbor solicitation packet was received for an " "address on which this router is performing duplicate " "address detection. The packet was ignored because it " "originated from this router and was looped back."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPV6_ND4OLPFXCON	4-Warning	Prefix [node][dec] advertised in RA on [chars] has been previously configured on another interface	This warning indicates that an on-link prefix advertised in an IPv6 ND RA on the specified interface has previously been configured on another interface. The prefix will be ignored on the current prefix	ipv6_nd	" Learning an on-link prefix via IPv6 ND RA" " when the same prefix has previously been" " configured on another interface indicates a" " likely configuration error either on the" " current router or on the neighbor router" " advertising the ND RA. Review network topology" " current router and adjacent router configuration" " and correct as appropriate"
IPV6_ND4OLPFXCON	4-Warning	Prefix [node][dec] advertised in RA on [chars] has been previously configured on another interface	This warning indicates that an on-link prefix advertised in an IPv6 ND RA on the specified interface has previously been configured on another interface. The prefix will be ignored on the current prefix	ipv6_nd	" Learning an on-link prefix via IPv6 ND RA" " when the same prefix has previously been" " configured on another interface indicates a" " likely configuration error either on the" " current router or on the neighbor router" " advertising the ND RA. Review network topology" " current router and adjacent router configuration" " and correct as appropriate"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
P6NDRAINTERNOSEN	4-Warning	Configured Router Advertisements interval exceeds the configured RA lifetime on [chars].	This warning indicates that the value configured for the Router Advertisements interval exceeds the value configured for Router Advertisements lifetime on the given interface. This is not recommended as it will lead to hosts timing out the router between Router Advertisement transmissions.	ipv6_nd	" Check the router configuration on the interface" " and correct it so that RA lifetime is greater" " than RA interval."
P6NDRAINTERNOSEN	4-Warning	Configured Router Advertisements interval exceeds the configured RA lifetime on [chars].	This warning indicates that the value configured for the Router Advertisements interval exceeds the value configured for Router Advertisements lifetime on the given interface. This is not recommended as it will lead to hosts timing out the router between Router Advertisement transmissions.	ipv6_nd	" Check the router configuration on the interface" " and correct it so that RA lifetime is greater" " than RA interval."
PV6ND4RESOURCE_LMT	4-Warning	[chars] resource limit prevents creation of ND entry	This warning indicates that an ND cache entry could not be created because the indicated platform resource limit has been reached.	ipv6_nd	"Check the size of the ND cache table. " "Consider using ND cache sizing to explicitly " "configure the size of the ND cache on each " "interface"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPv6_ND4RESOURCE_LIMIT	4-Warning	[chars] resource limit prevents creation of ND entry	This warning indicates that an ND cache entry could not be created because the indicated platform resource limit has been reached.	ipv6_nd	"Check the size of the ND cache table. " "Consider using ND cache sizing to explicitly " "configure the size of the ND cache on each " "interface"
IPv6_ND4RSRV_ADDRESS	4-Warning	[chars]: [chars]: [chars]	IPv6 address contains reserved interface identifiers.	ipv6	NOG_SID_NO_ACTION
IPv6_ND4RSRV_ADDRESS	4-Warning	[chars]: [chars]: [chars]	IPv6 address contains reserved interface identifiers.	ipv6	NOG_SID_NO_ACTION
IPv6_ND6-ADDRESS	6-Information	[node][dec] can not generate auto-configured address on [chars] [chars][chars]	IPv6 address could not be auto-configured.	ipv6	NOG_SID_NO_ACTION
IPv6_ND6-ADDRESS	6-Information	[node][dec] can not generate auto-configured address on [chars] [chars][chars]	IPv6 address could not be auto-configured.	ipv6	NOG_SID_NO_ACTION
IPv6_ND6DUPLICATE_INFO	6-Information	DAD attempt detected for [node]on [chars]	Another system attempted to configure an IPv6 address already configured on this interface. The configuration of the other system was denied.	ipv6	"No action is required on this system."
IPv6_ND6DUPLICATE_INFO	6-Information	DAD attempt detected for [node]on [chars]	Another system attempted to configure an IPv6 address already configured on this interface. The configuration of the other system was denied.	ipv6	"No action is required on this system."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IPV6_POLICY_OVERRIDE</del>	4-Warning	Local dynamic policy overriding static local policy	Static policy and dynamic local policy are configured. The dynamic local policy will override the static local policy.	ipv6	"Remove the static local policy config if desired."
<del>IPV6_POLICY_OVERRIDE</del>	4-Warning	Dynamic policy overriding static on intf:[chars]	Static policy and dynamic policy are configured on the interface. The dynamic policy will override the static policy.	ipv6	"Remove the static policy config if desired."
<del>IPV6_FRAGMENT_POOL</del>	3-Error	-	Increasing of fragment information pool failed.	cpp-ucode	LOG_STD_ACTION
<del>IPV6_FRAGMENT_POOL</del>	3-Error	-	Initialization of fragment information pool failed.	cpp-ucode	LOG_STD_ACTION
<del>IPV6_IPC_HANDLER</del>	3-Error	[dec]	IPC handler initialization failed.	cpp-ucode	LOG_STD_ACTION
<del>IPV6_IPC_HANDLER</del>	4-Warning	[hec]	Received an invalid IPC messages subtype.	cpp-ucode	LOG_STD_ACTION
IPV6_RIP3-ALLOC_ERR	3-Error	Memory allocation problem - RIPv6	An internal software error occurred.	ipv6	LOG_STD_ACTION
IPV6_RIP3-ALLOC_ERR	3-Error	Memory allocation problem - RIPv6	An internal software error occurred.	ipv6	LOG_STD_ACTION
IPV6_RIP3-ALLOC_IPDB	3-Error	Can't alloc iPDB structure - RIPv6	An internal software error occurred.	ipv6	LOG_STD_ACTION
IPV6_RIP3-ALLOC_IPDB	3-Error	Can't alloc iPDB structure - RIPv6	An internal software error occurred.	ipv6	LOG_STD_ACTION
IPV6_RIP3-ALLOC_PDB	3-Error	Can't alloc PDB structure - RIPv6	An internal software error occurred.	ipv6	LOG_STD_ACTION
IPV6_RIP3-ALLOC_PDB	3-Error	Can't alloc PDB structure - RIPv6	An internal software error occurred.	ipv6	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
IPV6_RIP-3-NULLIDB	3-Error	Uninitialized interface pointer - RIPv6	An internal software error occurred.	ipv6	LOG_STD_ACTION
IPV6_RIP-3-NULLIDB	3-Error	Uninitialized interface pointer - RIPv6	An internal software error occurred.	ipv6	LOG_STD_ACTION
IPV6_RIP-3-NULLIPDB	3-Error	Uninitialized iPDB pointer - RIPv6	An internal software error occurred.	ipv6	LOG_STD_ACTION
IPV6_RIP-3-NULLIPDB	3-Error	Uninitialized iPDB pointer - RIPv6	An internal software error occurred.	ipv6	LOG_STD_ACTION
IPV6_RIP-3-NULLPAK	3-Error	Uninitialized packet pointer - RIPv6	An internal software error occurred.	ipv6	LOG_STD_ACTION
IPV6_RIP-3-NULLPAK	3-Error	Uninitialized packet pointer - RIPv6	An internal software error occurred.	ipv6	LOG_STD_ACTION
IPV6_RIP-3-NULLPDB	3-Error	Uninitialized PDB pointer - RIPv6	An internal software error occurred.	ipv6	LOG_STD_ACTION
IPV6_RIP-3-NULLPDB	3-Error	Uninitialized PDB pointer - RIPv6	An internal software error occurred.	ipv6	LOG_STD_ACTION
IPV6_RIP-3-NULLPROTO	3-Error	Uninitialized protocol pointer - RIPv6	An internal software error occurred.	ipv6	LOG_STD_ACTION
IPV6_RIP-3-NULLPROTO	3-Error	Uninitialized protocol pointer - RIPv6	An internal software error occurred.	ipv6	LOG_STD_ACTION
IPV6_RIP-3-NULLSOC	3-Error	Uninitialized socket pointer - RIPv6	An internal software error occurred.	ipv6	LOG_STD_ACTION
IPV6_RIP-3-NULLSOC	3-Error	Uninitialized socket pointer - RIPv6	An internal software error occurred.	ipv6	LOG_STD_ACTION
IPV6_RIP-3-PROCESS_CREATE	3-Error	Can't create process - RIPv6	An internal software error occurred.	ipv6	LOG_STD_ACTION
IPV6_RIP-3-PROCESS_CREATE	3-Error	Can't create process - RIPv6	An internal software error occurred.	ipv6	LOG_STD_ACTION
IPV6_RIP-3-PROCESS_MSG_SEND	3-Error	Can't send message to process - RIPv6	An internal software error occurred.	ipv6	LOG_STD_ACTION
IPV6_RIP-3-PROCESS_MSG_SEND	3-Error	Can't send message to process - RIPv6	An internal software error occurred.	ipv6	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPV6_ROUTING3INTERNAL	3-Error	Internal error [chars]	An internal software error occurred.	ipv6	LOG_STD_ACTION
IPV6_ROUTING3INTERNAL	3-Error	Internal error [chars]	An internal software error occurred.	ipv6	LOG_STD_ACTION
IPV6_ROUTING-3-RIB	3-Error	[chars]	An internal software error occurred.	ipv6	LOG_STD_ACTION
IPV6_ROUTING-3-RIB	3-Error	[chars]	An internal software error occurred.	ipv6	LOG_STD_ACTION
IPV6_ROUTING3LIMITEXCEED	3-Error	IPv6 routing table limit exceeded - [chars]	The number of routes in the named IPv6 routing table has reached the configured limit. No further routes will be added to the table	ipv6	"Reduce the number of routes in the table or reconfigure the limit"
IPV6_ROUTING3LIMITEXCEED	3-Error	IPv6 routing table limit exceeded - [chars]	The number of routes in the named IPv6 routing table has reached the configured limit. No further routes will be added to the table	ipv6	"Reduce the number of routes in the table or reconfigure the limit"
IPV6_ROUTING3LIMITWARN	3-Error	IPv6 routing table limit warning - [chars]	The number of routes in the named IPv6 routing table has reached the configured warning limit.	ipv6	"Reduce the number of routes in the table or reconfigure the limit"
IPV6_ROUTING3LIMITWARN	3-Error	IPv6 routing table limit warning - [chars]	The number of routes in the named IPv6 routing table has reached the configured warning limit.	ipv6	"Reduce the number of routes in the table or reconfigure the limit"
IPV6_ROUTING4MAXPDB	4-Warning	Exceeded maximum supported IPv6 Routing Protocol instances	This error indicates that configuration of a Routing Protocol has failed because it would exceed the maximum supported number of Routing Protocols	ipv6	"Reduce the number of IPv6 Routing Protocol" " instances configured"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPv6_ROUTING4_MAX_PDB	4-Warning	Exceeded maximum supported IPv6 Routing Protocol instances	This error indicates that configuration of a Routing Protocol has failed because it would exceed the maximum supported number of Routing Protocols	ipv6	"Reduce the number of IPv6 Routing Protocol" " instances configured"
IPv6_ROUTING4_REDIS_MAX_PREFIX	4-Warning	Redistribution prefix limit has been reached \[chars] \ - [dec] prefixes	We have reached the maximum number of redistributed prefixes	-	"Check if redistribution of large number of prefixes is " "desired and has not been configured by mistake"
IPv6_ROUTING4_REDIS_MAX_PREFIX	4-Warning	Redistribution prefix limit has been reached \[chars] \ - [dec] prefixes	We have reached the maximum number of redistributed prefixes	-	"Check if redistribution of large number of prefixes is " "desired and has not been configured by mistake"
IPv6_ROUTING4_REDIS_THRESHOLD_PREFIX	4-Warning	Redistribution prefix threshold has been reached \[chars] \ - [dec] prefixes	We have reached the threshold level of number of redistributed prefixes	-	"Check if redistribution of large number of prefixes is " "desired and has not been configured by mistake"
IPv6_ROUTING4_REDIS_THRESHOLD_PREFIX	4-Warning	Redistribution prefix threshold has been reached \[chars] \ - [dec] prefixes	We have reached the threshold level of number of redistributed prefixes	-	"Check if redistribution of large number of prefixes is " "desired and has not been configured by mistake"
IPv6_ROUTING4_RECOVERED	6-Information	IPv6 routing table limit recovered - [chars]	The number of routes in the named IPv6 routing table has fallen below the configured limit. The routing table has recovered	ipv6	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IPv6_ROUTING_TABLE_RECOVERED</del>	6-Information	IPv6 routing table limit recovered - [chars]	The number of routes in the named IPv6 routing table has fallen below the configured limit. The routing table has recovered	ipv6	LOG_STD_NO_ACTION
IPV6_URPF-4-DROP	4-Warning	Dropping [chars] from [chars].	This message indicates that the router dropped a packet due to Unicast Reverse Path Forwarding check failure	qfp-ipucast	"This is an informational message"
IPV6_VFR-4-CONFIG	4-Warning	Dropping [chars] from [chars] due to system config.	This message indicates that the router drops fragment packet due to ipv6 virtual-reassembly drop-fragments	qfp-ipucast	"This is an informational message"
<del>IPv6_FRAGMENT_OVERFLOW</del>	4-Warning	Dropping [chars] from [chars] due to fragment table overflow.	This means the number of datagrams reassembled at a time reached its maximum limit increase the value of max-reassemblies using ipv6 virtual-reassembly in/out max-reassemblies <number>	qfp-ipucast	-
<del>IPv6_INVALID_DROP_LOG_TYPE</del>	4-Warning	Dropping [chars] from [chars]. Invalid drop log type %u	Unsupported drop log type	qfp-ipucast	LOG_STD_ACTION
<del>IPv6_INVALID_FRAGMENT_LENGTH</del>	4-Warning	Dropping [chars] from [chars] due to invalid fragment length.	This message indicates that the router has encountered a fragment with invalid packet length	qfp-ipucast	"To prevent further attacks its highly recommended that an ACL " "be configured to drop any traffic from the sender"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPv6_OVRFLP_FRAGMENTS	4-Warning	Dropping [chars] from [chars] due to overlap fragment.	This message is logged whenever the router encounters overlap fragments. Overlap fragment means offset of one fragment overlaps the offset of another fragment. For example if first fragment's offset is 0 and length is 800 then the second fragments offset must be 800. If second fragment's offset is less than 800 that means the second fragment overlaps the first fragment.	qfp-ipucast	"This could possibly be an attack configure a static ACL to prevent " further overlap fragments from the sender"
IPv6_VFR4-TIMEOUT	4-Warning	Dropping [chars] from [chars] due to virtual reassembly timeout.	This message indicates that the router is trying to do virtual-reassembly for fragments but got timeout before receiving all the fragments for a datagram	qfp-ipucast	"This is an informational message"
IPv6_VFR4_TINY_FRAGMENTS	4-Warning	Dropping [chars] from [chars] due to tiny fragment.	This message indicates that the router is receiving tiny fragments - meaning the initial fragment does not have complete layer 4 header	qfp-ipucast	"This is an informational message"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPV6FIBCOMPANYFRAGMENTS	4-Warning	Dropping [chars] from [chars] due to too many fragments for the datagram.	This message indicates the datagram being reassembled has received more fragments than its threshold value	qfp-ipucast	"Check if the fragments received are from a genuine source if so " "increase the value of max-fragments using the CLI " "ipv6 virtual-reassembly in/out max-fragments <number>"
IPV6FIB3GLOBALSTATE	3-Error	Inconsistent global state '[chars]' [chars]	IPV6FIB_INTERNAL_ERROR	IPV6FIBDISCOMPONENT	LOG_STD_ACTION
IPV6FIB3GLOBALSTATE	3-Error	Inconsistent global state '[chars]' [chars]	IPV6FIB_INTERNAL_ERROR	IPV6FIBDISCOMPONENT	LOG_STD_ACTION
IPV6FIB-4-FIBCBLK	4-Warning	Missing cef table for tableid [node] during [chars] event	IPV6FIB_INTERNAL_ERROR	IPV6FIBDISCOMPONENT	LOG_STD_ACTION
IPV6FIB-4-FIBCBLK	4-Warning	Missing cef table for tableid [node] during [chars] event	IPV6FIB_INTERNAL_ERROR	IPV6FIBDISCOMPONENT	LOG_STD_ACTION
IPV6FIB-4-FIBIDB	4-Warning	Missing cef idb for [chars] during [chars]	IPV6FIB_INTERNAL_ERROR	IPV6FIBDISCOMPONENT	LOG_STD_ACTION
IPV6FIB-4-FIBIDB	4-Warning	Missing cef idb for [chars] during [chars]	IPV6FIB_INTERNAL_ERROR	IPV6FIBDISCOMPONENT	LOG_STD_ACTION
IPV6FIB-4-FIBXDRINV	4-Warning	Invalid format. [chars]	IPV6FIB_INTERNAL_ERROR	IPV6FIBDISCOMPONENT	LOG_STD_ACTION
IPV6FIB-4-FIBXDRINV	4-Warning	Invalid format. [chars]	IPV6FIB_INTERNAL_ERROR	IPV6FIBDISCOMPONENT	LOG_STD_ACTION
IPV6FIB-4-FIBXDRLN	4-Warning	Invalid XDR length. Type/event [dec]/[chars]. XDR [dec] buffer [dec]	IPV6FIB_INTERNAL_ERROR	IPV6FIBDISCOMPONENT	LOG_STD_ACTION
IPV6FIB-4-FIBXDRLN	4-Warning	Invalid XDR length. Type/event [dec]/[chars]. XDR [dec] buffer [dec]	IPV6FIB_INTERNAL_ERROR	IPV6FIBDISCOMPONENT	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPX-2-MCAST_CFG_ERR	3-Error	[chars]	Processing MCAST packet failed due to incorrect config to HW Data structures.	cpp-ucode	LOG_STD_ACTION
IPX-2-MCAST_ERR	3-Error	[chars] 0x[hec] 0x[hec] 0x[hec] 0x[hec]	A Mcast replica error has occurred	cpp-ucode	LOG_STD_ACTION
IPX-2-MCAST_CHK_FAIL	3-Error	PIM register from [node]for [node]%i	-	-	-
IPX-2-RADIXINIT	2-Critical	Error Initializing novell path structure	A programming error has occurred	novell	"Please ensure that sufficient memory required to load this " "image is available in this device. If memory requirements " "are met then follow the succeeding procedure. " LOG_STD_ACTION
IPX-2-RADIXINIT	2-Critical	Error Initializing novell path structure	A programming error has occurred	novell	"Please ensure that sufficient memory required to load this " "image is available in this device. If memory requirements " "are met then follow the succeeding procedure. " LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPX-3-BADCOUNT	3-Error	Bad IPX server count. [chars] [dec] [chars] [dec]	The internal SAP service count does not match the number of services\n\currently present and displayed by the <bold>show ipx servers<nobold>command.	novell	"If this message recurs report the problem to your\n\technical support representative along with the output of the <bold>show\n\ipx servers<nobold> command taken before the message appeared and again after\n\ the message appeared."
IPX-3-BADCOUNT	3-Error	Bad IPX server count. [chars] [dec] [chars] [dec]	The internal SAP service count does not match the number of services\n\currently present and displayed by the <bold>show ipx servers<nobold>command.	novell	"If this message recurs report the problem to your\n\technical support representative along with the output of the <bold>show\n\ipx servers<nobold> command taken before the message appeared and again after\n\ the message appeared."
IPX-3-BADHASHTABLE	3-Error	Consistency check failed for SAP table [dec].	An internal SAP table consistency check failed.	novell	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
IPX-3-BADHASHTABLE	3-Error	Consistency check failed for SAP table [dec].	An internal SAP table consistency check failed.	novell	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPX-3-BADIGRPSAP	3-Error	Cannot send incremental SAP update to peer on [chars]. Increasing output-sap-delay may help	An incremental SAP update could not be sent because this might cause the SAP tables between peers to become out of synch.	novell	"Increase the output SAP delay on the listed interface to reduce buffer usage. If after changing the delay the message remains copy the error message exactly as it appears and report it to your technical support representative."
IPX-3-BADIGRPSAP	3-Error	Cannot send incremental SAP update to peer on [chars]. Increasing output-sap-delay may help	An incremental SAP update could not be sent because this might cause the SAP tables between peers to become out of synch.	novell	"Increase the output SAP delay on the listed interface to reduce buffer usage. If after changing the delay the message remains copy the error message exactly as it appears and report it to your technical support representative."
IPX-3-BADIGRPSATYPE	3-Error	Unsupported SAP type for EIGRP being [chars] - type [hec]		novell	"Copy the error message exactly as it appears and report it to your technical support representative. If possible also provide the output of the <b>debug ipx sap activity</b> and <b>debug ipx sap event</b> commands for the period during which this message appeared."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPX-3-BADIGRFSAPTYPE	3-Error	Unsupported SAP type for EIGRP being [chars] - type [hec]		novell	"Copy the error message exactly as it appears and report it to your\n\ technical support representative. If possible also provide the output\n\ of the <bold>debug ipx sap activity<nobold> and <bold>debug ipx sap event<nobold> commands for the\n\ period during which this message appeared."
IPX-3-BADINSERT	3-Error	Duplicate SAP entry insert attempted. [chars][chars] [chars]0x[hec] [chars]0x[hec] [chars][dec] [chars]0x[hec] [chars]0x[hec] [chars]0x[hec]	An IPX SAP service entry which is being added currently already exists in\n\the current internal table.	novell	"Report the error messages and the tracebacks following them to your technical\n\support representative."
IPX-3-BADINSERT	3-Error	Duplicate SAP entry insert attempted. [chars][chars] [chars]0x[hec] [chars]0x[hec] [chars][dec] [chars]0x[hec] [chars]0x[hec] [chars]0x[hec]	An IPX SAP service entry which is being added currently already exists in\n\the current internal table.	novell	"Report the error messages and the tracebacks following them to your technical\n\support representative."
IPX-3-BADPATHS	3-Error	Invalid number of paths [dec] for %q	An internal inconsistency was detected in the IPX routing table\n\ structure.	novell	-
IPX-3-BADPATHS	3-Error	Invalid number of paths [dec] for %q	An internal inconsistency was detected in the IPX routing table\n\ structure.	novell	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPX-3-BADRDBDATA	3-Error	Inconsistency in the [chars] LSP Linkage data structure detected.	An internal inconsistency was detected in the RDB or SRDB\n internal routing table structure. Specifically a data area used by\n NLSP to link LSPs.	novell	"Copy and save this message. If NLSP is not running this could mean\n there is a software or hardware problem which is corrupting memory.\n If the message recurs copy and save the messages and call your\n technical support representative for assistance."
IPX-3-BADRDBDATA	3-Error	Inconsistency in the [chars] LSP Linkage data structure detected.	An internal inconsistency was detected in the RDB or SRDB\n internal routing table structure. Specifically a data area used by\n NLSP to link LSPs.	novell	"Copy and save this message. If NLSP is not running this could mean\n there is a software or hardware problem which is corrupting memory.\n If the message recurs copy and save the messages and call your\n technical support representative for assistance."
IPX-3-NOVNOSTART	3-Error	IPX Failed to Start due to insufficient memory	The Novell IPX routing subsystem failed to initialize properly\n due to memory allocation errors usually due to insufficient\n amount of available memory.	novell	"Free up memory look for a possible memory leak or upgrade the\n system to have more memory."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IPX-3-NOVNOSTART	3-Error	IPX Failed to Start due to insufficient memory	The Novell IPX routing subsystem failed to initialize properly\n\n due to memory allocation errors usually due to insufficient\n\n amount of available memory.	novell	"Free up memory look for a possible memory leak or upgrade the\n\n system to have more memory."
IPX-3-TOOMANYNETS	3-Error	Too many networks. The number of directly connected IPX networks cannot exceed [dec]	The limit of connected IPX networks has been reached.\n\n Additional IPX interfaces cannot be configured.	novell	"Do not configure IPX on additional interfaces. \n\n Remove IPX configuration commands from inactive interfaces."
IPX-3-TOOMANYNETS	3-Error	Too many networks. The number of directly connected IPX networks cannot exceed [dec]	The limit of connected IPX networks has been reached.\n\n Additional IPX interfaces cannot be configured.	novell	"Do not configure IPX on additional interfaces. \n\n Remove IPX configuration commands from inactive interfaces."
IPX-6-NOVACCESSLOG	6-Information	[chars] [chars] [chars] [chars] [hec].[enet] [chars] [hec].[enet] [dec] pkt[chars]	If IPX access violation logging is enabled these messages are\n\n displayed when an access list logging event has occurred.	novell	"Verify that the host system is permitted or denied as defined in the\n\n access list."
IPX-6-NOVACCESSLOG	6-Information	[chars] [chars] [chars] [chars] [hec].[enet] [chars] [hec].[enet] [dec] pkt[chars]	If IPX access violation logging is enabled these messages are\n\n displayed when an access list logging event has occurred.	novell	"Verify that the host system is permitted or denied as defined in the\n\n access list."
IPX-7-DEBUGMSG	7-Debug	[chars]: [node]x [node]x [node]x [node]x [node]x	Internal use only	novell	"Should not be seen in the field"
IPX-7-DEBUGMSG	7-Debug	[chars]: [node]x [node]x [node]x [node]x [node]x	Internal use only	novell	"Should not be seen in the field"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IRCDIRIAAOKAF</del>	0-Emergency	External alarm/digital IO port [chars] asserted\n	External alarm/digital IO port alert is detected	-	"No action recommended" LOG_STD_ACTION
<del>IRCDIRIAAOKAF</del>	0-Emergency	External alarm/digital IO port [chars] cleared\n	External alarm/digital IO port alert is cleared	-	"No action recommended" LOG_STD_ACTION
<del>RCAGENISMR3NCNT</del>	3-Error	Can't initialize iREC agent server	Internal problems with initializing ports for the iREC agent\n\nserver	ios-callmgr	"Make sure the iREC agent server port is available on the local\n\nmachine."
<del>RCAGENISMR3NCNT</del>	3-Error	Can't initialize iREC agent server	Internal problems with initializing ports for the iREC agent\n\nserver	ios-callmgr	"Make sure the iREC agent server port is available on the local\n\nmachine."
<del>RCAGENISMR3NCMEM</del>	3-Error	Can't initialize memory for iREC agent server	Insufficient Memory for iREC agent server	ios-callmgr	"Increase amount of available memory"
<del>RCAGENISMR3NCMEM</del>	3-Error	Can't initialize memory for iREC agent server	Insufficient Memory for iREC agent server	ios-callmgr	"Increase amount of available memory"
<del>RCAGENISMR3NCORC</del>	3-Error	Could not start iREC agent Server	Internal Problem in process creation	ios-callmgr	"None"
<del>RCAGENISMR3NCORC</del>	3-Error	Could not start iREC agent Server	Internal Problem in process creation	ios-callmgr	"None"
<del>RCAGENISMR3NCOKETS</del>	3-Error	Max Number of iREC agent Server sockets exceeded	There are too many iREC agent clients requesting service	ios-callmgr	"Reduce number of iREC agent requesting service"
<del>RCAGENISMR3NCOKETS</del>	3-Error	Max Number of iREC agent Server sockets exceeded	There are too many iREC agent clients requesting service	ios-callmgr	"Reduce number of iREC agent requesting service"
ISDN-1-NOMEMORY	1-Alert	no memory for [chars]	The requested operation could not be accomplished because of a low\n\nmemory condition.	-	"Reduce other system activity to ease memory demands. If conditions\n\n warrant upgrade to a larger memory configuration."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ISDN-2-ISDN_EXIT	2-Critical	[chars]	The ISDN task has terminated execution for the specified reason and may cause CISCO IOS to terminate.	-	LOG_STD_ACTION
ISDN-2-ISDN_FATAL	2-Critical	ISDN FATAL ERROR: file [chars] function [chars] message: [chars]	ISDN has detected a fatal system error.	-	LOG_STD_ACTION
<del>ISDN</del> ISDN_FATAL_TRACEBACK	2-Critical	[chars]:[dec]	A debug - traceback condition has occurred	-	LOG_SID_NO_ACTION
ISDN-3-ISDN_CCB_FREE	3-Error	[chars]: CCB with call id 0x[node]X on b channel [dec] was leaked but has been freed by ISDN Housekeeping. Reason: [chars]	A data structure internal to ISDN has leaked.	isdn	LOG_SID_NO_ACTION
<del>ISDN</del> ISDN_CCB_FREE_FAIL	3-Error	[chars]: CCB with call id 0x[node]X on b channel [dec] was leaked reason: [chars] and can't be free'd by ISDN Housekeeping.	A data structure internal to ISDN has leaked and we can't fix it for some reason.	isdn	LOG_SID_NO_ACTION
<del>ISDN</del> ISDN_NLCB_FREE	3-Error	[chars]: NLCB with call id 0x[node]X was leaked but has been freed by ISDN Housekeeping. Reason: [chars]	A data structure internal to ISDN has leaked.	isdn	LOG_SID_NO_ACTION
<del>ISDN</del> ISDN_RESOURCE_UNAVAILABLE	3-Error	[chars]: Resource not available at [chars]:[dec]	Hardware resource could not be allocated	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ISDN-3-LAYER2_DOWN	3-Error	Layer 2 for Interface [chars] TEI [node]changed to down	This is an informational message but being logged as ERR at request\n\ from some customers. It is sent when an ISDN Layer2 logical link is \n\ down. It also shows the TEI associated with this logical link.	-	LOG_SID_NO_ACTION
ISDN-3-LAYER2_UP	3-Error	Layer 2 for Interface [chars] TEI [node]changed to up	This is an informational message but being logged as an ERR at request\n\ from some customers. It is sent when an ISDN Layer2 logical link is up.\n\ It also shows the TEI associated with this logical link.	-	LOG_SID_NO_ACTION
<del>ISDN-4-CRASH</del>	4-Warning	[chars]: <del>Unknown DSL</del> Unknown DSL [node]for\n\ [chars]	The Creation/Deletion service for the L2 Signalling handler\n\for the given DSL is missing	-	LOG_SID_SH_TECH_ACTION
<del>ISDN-4-STATUS</del>	4-Warning	[chars]: isdn_get_status_state: Unknown DSL %u	An attempt to retrieve the status of a DSL that \n\is not currently configured.	-	LOG_SID_SH_TECH_ACTION
<del>ISDN-4-LDN</del>	4-Warning	Interface [chars] Ignoring call LDN and Called Party Number mismatch	The incoming ISDN call is ignored because the Called Party Number does\n\ not match the LDN numbers configured in the router.	-	"Correct the LDN in the router to match the Called Party\n\ Number delivered in the incoming setup message."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ISDN-4-INVALID_EID	4-Warning	Interface [chars] Ignoring call EndPoint Identifier EID mismatch	The incoming ISDN call is ignored because the EID delivered in the incoming setup message cannot be matched.	-	"If EID is delivered in the setup message use the <bold>isdn\n\ debugs <nobold> and <bold> show isdn status <nobold> commands\n\ to determine the current EID values. You may need to contact\n\ the service provider."
ISDN-4-INVALID_EVENT	4-Warning	[chars]: Bad Event Received For Current State	The State Transition for the ISDN L2 Socket Process failed.	-	LOG_SID_SH_TECH_ACTION
ISDN-4-INVALID_SPID	4-Warning	Interface [chars] Spid[dec] was rejected	The SPID configured in the router has been rejected by the switch.	-	"Determine the correct SPID reenter the SPID and clear the\n\ BRI interface."
ISDN-4-ISDN_CCB_LEAK	4-Warning	[chars]: CCB with callid 0x[node]X on b channel [dec] has been leaked. Reason: [chars]	A data structure internal to ISDN has been leaked	isdn	LOG_SID_NO_ACTION
ISDN-4-ISDN_UNREGISTERED	4-Warning	[chars]: isdn_to_L2: Unknown DSL [node]for command [chars]	The ISDN Stack has not registered its L2 Message Handler	-	LOG_SID_SH_TECH_ACTION
ISDN-4-ISDN_NLCB_LEAK	4-Warning	[chars]: NLCB leak detected. nlcb [node]call id 0x[node]X reason: [chars]	A data structure internal to ISDN has not been freed	isdn	LOG_SID_NO_ACTION
ISDN-4-ISDN_UNEXPECTED	4-Warning	[chars]: Occurred at [chars]:[dec]	An unexpected event of significance has occurred	-	LOG_SID_SH_TECH_ACTION
ISDN-4-OPEN_TEMP_SOCKET_FAIL	4-Warning	[chars]: Failed to Open Required Temporary Socket[chars]	-	-	LOG_SID_SH_TECH_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ISDN-4-RESTART	4-Warning	Interface [chars] [chars] [chars] message with restart class of [chars] chan [dec]	This is an informational message but will be logged as a \n\n warning message if so configured.	-	"No action is required."
ISDN-4-RMSTATUSCHANGE	4-Warning	ISDN SC [chars]: Status Changed to: [chars].	ISDN has been notified by the RLM component of a \n\n status change in the RLM link	-	LOG_SID_NO_ACTION
ISDN-4-SERV_AUDIT_C1	4-Warning	Interface [chars] service audit trigger condition [dec] on channel [dec]	This is an informational message but will be logged as a warning message if so configured.	-	"No action is required."
ISDN-4-SERVICE	4-Warning	Interface [chars] [chars] [chars] message for chan [dec] state [chars]	This is an informational message but will be logged as a \n\n warning message if so configured.	-	"No action is required."
ISDN-4-SRUCUSCONNECT	4-Warning	[chars]: Spurious Connection Accepted and Closed on port %u	An unknown TCP connection was accepted and refused.	-	LOG_SID_SH_TECH_ACTION
ISDN-4-STATUS	4-Warning	Interface [chars] [chars] [chars] st 0x[hec] ev 0x[hec] cid 0x[hec] cref 0x[hec]	This is an informational message but being logged as a \n\n warning message if so configured.	-	"No action is required."
ISDN-5-SERV_AUDIT_C2	5-Notice	Interface [chars] service audit trigger condition [dec] on channel [dec]	This is an informational message but will be logged as a warning message if so configured.	-	"No action is required."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ISDN6CALL_COLLISION	6-Information	Interface [chars] Call Cid 0x[hec] Cref 0x[hec] collision on Channel [dec] in_use_cid 0x[hec] cref 0x[hec] Channel awarded to the received call	This is an informational message. It is sent when a Call is\n\n received that collides with an existing call on the same channel.	-	"No action is required."
ISDN6CHAN_UNAVAILABLE	6-Information	Interface [chars] Requested Channel [dec] is not available	This is an informational message. It is sent when the requested\n\n channel is not available.	-	"No action is required."
ISDN-6-CONNECT	6-Information	Interface [chars] is now connected to [chars] [chars]	-	-	LOG_SID_NO_ACTION
ISDN-6-DISCONNECT	6-Information	Interface [chars] disconnected from [chars] [chars] call lasted [node]seconds	-	-	LOG_SID_NO_ACTION
ISDN6INVALID_TIMER	6-Information	[chars]: Invalid Timer Handle caller 0x[hec] handle [node]	This could be an indication of low memory. It is sent when \n\n an invalid ISDN timer handle is passed on for timer operations	-	"capture the show isdn mem show isdn status output for possible \n\n debugging information. Reduce other system activity to ease the \n\n memory demands in the system."
ISDN6LAYER2DOWN	6-Information	Layer 2 for Interface [chars] TEI [node]changed to down	This is an informational message. It is sent when an ISDN Layer2\n\n logical link is down. It also shows the TEI associated with this\n\n logical link.	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ISDN-6-LAYER2UP	6-Information	Layer 2 for Interface [chars] TEI [node]changed to up	This is an informational message. It is sent when an ISDN Layer2\n\ logical link is up. It also shows the TEI associated with this\n\ logical link.	-	LOG_SID_NO_ACTION
ISDN-6-NFASDCHANNEL	6-Information	[chars] [chars] [chars] [chars]	The NFAS D-channel status has changed.	-	LOG_NO_ACTION
ISDN-6-NO_TIMER	6-Information	No Free Timer Entry caller 0x[hec] timers used [dec]	This could be an indication of low memory. It is sent when the ISDN \n\ protocol cannot start new timers for it's operation.	-	"capture the show isdn mem show isdn status output for possible \n\ debugging information. Reduce other system activity to ease the \n\ memory demands in the system."
ISDN-6-REPEATED_SETUP	6-Information	Interface [chars] Call Cid 0x[node]X Cref 0x[node]X received a retransmitted setup on channel [dec] in_use_cid 0x[node]X cref 0x[node]X.	This is an informational message sent when a duplicate SETUP message is received on a B-channel. This indicates that the rate of calls being received is momentarily greater than the rate calls can be processed. No action is required.	-	LOG_SID_NO_ACTION
ISDN-6-SERV_AUDIT_C3	6-Information	Interface [chars] service audit trigger condition [dec] on channel [dec]	This is an informational message but will be logged as a warning message if so configured.	-	"No action is required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ISSM3DCMANMISMATCH	3-Error	Chassis [dec] MAC Addr:[chars] B0/0: Stackwise virtual domain number mismatch on stackwise virtual link [dec]	A port associated with a stackwise virtual link is connected to a peer with a different domain number on the local switch	-	"For the switch to form a stack please configure same domain numbers on both the switches"
ISSM3SEVENTUDFAILURE	3-Error	[chars]-RIBInfo[chars]: [chars] client failed to send Multicast event [node][dec] update request with error [chars]	-	-	-
ISSM3SEVENTUDFAILURE	3-Error	[chars]-RIBInfo[chars]: [chars] client failed to send Multicast event [node][dec] update request with error [chars]	-	-	-
ISSM3SRUDRFAILURE	3-Error	[chars]-RIBInfo[chars]: [chars] client receives the response of Multicast RT [chars] message with code:[dec] topoid:%u	ISISL2 client receives the response of Multicast RT update failure	ISS2DDISCOMPONENT	LOG_STD_ACTION
ISSM3SRUDRFAILURE	3-Error	[chars]-RIBInfo[chars]: [chars] client receives the response of Multicast RT [chars] message with code:[dec] topoid:%u	ISISL2 client receives the response of Multicast RT update failure	ISS2DDISCOMPONENT	LOG_STD_ACTION
ISSM3SRUDRFAILURE	3-Error	[chars]-RIBInfo[chars]: Multicast RT [node][chars] [chars]: Failed to send the	ISISL2 client failed to send the Multicast route update request to MLMRIB	ISS2DDISCOMPONENT	LOG_STD_ACTION
ISSM3SRUDRFAILURE	3-Error	[chars]-RIBInfo[chars]: Multicast RT [node][chars] [chars]: Failed to send the	ISISL2 client failed to send the Multicast route update request to MLMRIB	ISS2DDISCOMPONENT	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IS2NCSIEMNUDPALE</del>	3-Error	[chars]-RIBInfo[chars]: [chars] client failed to send Unicast event [node][dec] update request with error [chars]	-	-	-
<del>IS2NCSIEMNUDPALE</del>	3-Error	[chars]-RIBInfo[chars]: [chars] client failed to send Unicast event [node][dec] update request with error [chars]	-	-	-
<del>IS2NCSIUDRPALE</del>	3-Error	[chars]-RIBInfo[chars]: [chars] client receives the response of Unicast RT [chars] message with code:[dec] topoid:%u	ISISL2 client receives the response of Unicast RT update failure	<del>IS2DDISCOMPONENT</del>	LOG_STD_ACTION
<del>IS2NCSIUDRPALE</del>	3-Error	[chars]-RIBInfo[chars]: [chars] client receives the response of Unicast RT [chars] message with code:[dec] topoid:%u	ISISL2 client receives the response of Unicast RT update failure	<del>IS2DDISCOMPONENT</del>	LOG_STD_ACTION
<del>IS2NCSIUDRQPALE</del>	3-Error	[chars]-RIBInfo[chars]: Unicast RT [node][chars]: Failed to send the	ISISL2 client failed to send Unicast route update request to MLURIB	<del>IS2DDISCOMPONENT</del>	LOG_STD_ACTION
<del>IS2NCSIUDRQPALE</del>	3-Error	[chars]-RIBInfo[chars]: Unicast RT [node][chars]: Failed to send the	ISISL2 client failed to send Unicast route update request to MLURIB	<del>IS2DDISCOMPONENT</del>	LOG_STD_ACTION
<del>RIFRUCHRUCONFAD</del>	3-Error	Configuration failed	An error occurred when the throughput configuration was attempted.	iosxe-csl	-
<del>RIFRUCRUCONFAD</del>	3-Error	The EULA has to be accepted prior to throughput configuration.	Users need to accept EULA to activate the license	iosxe-csl	"Accept EULA for throughput license"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SR_THROUGHPUT_CONFIG</del>	3-Error	An invalid throughput config: [chars] kbps was selected.	The configured throughput is unknown	iosxe-csl	-
<del>SR_THROUGHPUT_LICENSE</del>	3-Error	Throughput upgrade license set up failed	An error occurred when setting up the throughput upgrade licenses.	iosxe-csl	-
<del>SR_THROUGHPUT_CRYPTO</del>	6-Information	Crypto level has been set to [dec]00 kbps	Crypto level has been set to a number	iosxe-csl	-
<del>SR_THROUGHPUT_LEVEL</del>	6-Information	Throughput level has been set to [dec]00 kbps	Throughput level has been set to a number	iosxe-csl	-
<del>SR_THROUGHPUT_THROTTLED</del>	6-Information	Crypto level is unthrottled	Crypto level has been unthrottled	iosxe-csl	-
<del>SPRNGOVMIDBAICL</del>	3-Error	Failed to allocate a data plane identifier for interface [chars] for VCD [dec]	The SPA driver is not able to allocate the datapath identifier for the VCD under the interface specified in the message. This indicates a software error.	esg-io-infra	LOG_SID_NO_ACTION
<del>SPRNGOVMIDBAICL</del>	3-Error	Failed to get a data plane identifier for interface [chars] for VCD [dec]	The SPA driver is not able to obtain the datapath identifier for the VCD under the interface specified in the message. This indicates a software error.	esg-io-infra	LOG_SID_NO_ACTION
<del>SPRNGOVMIDCHL</del>	3-Error	Failed to get a flow control identifier for interface [chars] for index [dec]	The SPA driver is not able to obtain the datapath flow control identifier for the data path identifier under the interface specified in the message. This indicates a software error.	esg-io-infra	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPPC/AM/NO/ERR/E</del>	3-Error	Flow control identifiers for interface [chars] chan lo [hec] chan hi [hec]	The flow control identifier received for the interface is out of range. This indicates SPA driver is responding with out of range flow control identifier	esg-io-infra	LOG_STD_ACTION
<del>SPPC/AM/NO/ERR/E</del>	3-Error	total active atm vc per ATM SPA reached limitation of [dec]	total number of active atm vc per ATM SPA has reached max limit	-	LOG_STD_ACTION
<del>SPPC/AM/NO/ERR/E</del>	3-Error	[chars]: atm autovc discovery configuration failed reason: [chars]	A command to configure the atm autovc discovery on an atm interface has failed	-	LOG_STD_ACTION
<del>SPPC/AM/NO/ERR/E</del>	3-Error	total active atm vc reached system limitation of [dec]	total number of active atm vc has reached max limit allowed on the system	-	LOG_STD_ACTION
<del>SPPC/AM/NO/ERR/E</del>	3-Error	Failed to get a valid tx_chan id for interface [chars] for VCD [dec]	The SPA driver is not able to obtain the datapath tx channel identifier for the VCD under the interface specified in the message. This indicates a SPA occur error.	esg-io-infra	LOG_SID_NO_ACTION
<del>SPPC/AM/NO/ERR/E</del>	3-Error	Error in sending message to SPA on interface [chars] when [chars] for VCD [dec] ebfc_id [dec]	The SPA give a error response for ATM setup or response timeout in atm vc setup message. This indicates a SPA occur error.	esg-io-infra	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPRGNVAVCCNHA</del>	3-Error	Failed set ATM con for interface [chars] [dec]/[dec] VCD [dec]	Could not get VC encapsulation information when get SPA VCOPEN or VCMODIFY response This indicates ATM occur error.	esg-io-infra	LOG_SID_NO_ACTION
<del>SPRGNVAVCCCHA</del>	3-Error	Failed to get a ATM VC core info for interface [chars] VCD [dec]	Could not get VC core information when get SPA VCOPEN or VCMODIFY response. This indicates a ATM information error.	esg-io-infra	LOG_SID_NO_ACTION
<del>SPRGNVAVCDXHA</del>	3-Error	Failed to get ATM dpidx for interface [chars] VCD [dec]	Could not get VC dpidx information when get SPA VCOPEN or VCMODIFY response This indicates ATM occur error.	esg-io-infra	LOG_SID_NO_ACTION
<del>SPRGNVAVCESDHA</del>	3-Error	Failed to update ATM egress id for interface [chars] VCD [dec] egress_id [dec]	Could not update VC egress id when get SPA VCOPEN or VCMODIFY response This indicates ATM occur error.	esg-io-infra	LOG_SID_NO_ACTION
<del>SPRGNVAVCECHA</del>	3-Error	Failed to get ATM encapsulation for interface [chars] [dec]/[dec] VCD [dec]	Could not get VC encapsulation information when get SPA VCOPEN or VCMODIFY response This indicates ATM occur error.	esg-io-infra	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPRCVATMCRERRCPE</del>	3-Error	Get ATM ERROR encapsulation for interface [chars] [dec]/[dec] VCD [dec]	Get a ERROR VC encapsulation information when get SPA VCOPEM or VCMODIFY response This indicates ATM occur error.	esg-io-infra	LOG_SID_NO_ACTION
<del>SPRCVATMCRSDIOA</del>	3-Error	Failed to allocate VC ingress identifier on interface [chars] for VCD [dec] ebfc_id [dec] when [chars]	The ATM SHIM is not able to allocate the ingress identifier for the VCD under the interface specified in the message. This indicates a software error.	esg-io-infra	LOG_SID_NO_ACTION
<del>SPRCVATMCRSPAHL</del>	3-Error	SPA Error response on interface [chars] when [chars] for VCD [dec] ebfc_id [dec] ret_val [dec]	The SPA give a error response for ATM setup or response timeout in atm vc setup message. This indicates a SPA occur error.	esg-io-infra	LOG_SID_NO_ACTION
<del>SPRCVATMCRSSIAL</del>	3-Error	process creation failed for [chars]	The Periodic one second process creation failed. This indicates a software error.	esg-io-infra	LOG_STD_ACTION
<del>SPRCVATMCRBYWMBG</del>	4-Warning	total active atm vc approaching [node]percent of system limitation of [dec]	total number of active atm vc is approaching the high water mark of sysyem limitation	-	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ERR_PNC_OAMSETUPC	4-Warning	Interface [chars] VC [dec] setup failed reason = [dec]	A command to setup a VC has failed on RP.	esg-io-infra	<p>"The SPA ATM driver has detected a problem creating the internal OAM" "VC. Reload the indicated SPA card to reconfigure the internal OAM VC."</p> <p>"If the error messages persists copy the error message exactly as " "it appears. Next research and attempt to resolve the issue using " "the SPA hardware troubleshooting documentation as well as the tools " "and utilities provided at " "<a href="http://www.cisco.com/itd/td/td.html">http://www.cisco.com/itd/td/td.html</a>"</p> <p>If you still " "require assistance open a case with the Technical Assistance Center " "via the Internet at " "<a href="http://www.cisco.com/itd/td/td.html">http://www.cisco.com/itd/td/td.html</a>"</p> <p>or contact " "your Cisco technical support representative. Be sure to provide the " "the information you have gathered and a 'show tech-support' to " "your support representative or attach it to your case in non-zipped " "plain text format .txt."</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>RPNC-DNMRDWN</del>	4-Warning	Interface [chars] VC [dec] teardown failed vc state = [dec]/[dec]	A command to remove a VC config has failed on RP.	esg-io-infra	<p>"The SPA ATM driver has detected a problem tearing down the internal" "OAM VC. Reload the indicated SPA card to do a clean tear down of the " "internal OAM VC. If the error messages persists copy the error " "message exactly as it appears. Next research and attempt to resolve " "the issue using the SPA hardware troubleshooting documentation as well" " as the tools and utilities provided at " <a href="http://www.cisco.com/113376.html">http://www.cisco.com/113376.html</a> If you still " "require assistance open a case with the Technical Assistance Center " "via the Internet at " <a href="http://www.cisco.com/113376.html">http://www.cisco.com/113376.html</a> or contact " "your Cisco technical support representative. Be sure to provide the " "the information you have gathered and a 'show tech-support' to " "your support representative or attach it to your case in non-zipped " "plain text format .txt."</p>
<del>SPCA-NRLOWWCE</del>	5-Notice	total active atm vc below [node]percent of system limitation of [dec]	total number of active atm vc below the high water mark of sysyem limitation	esg-io-infra	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ISURROCNAMVACUSEUP</del>	5-Notice	Interface [chars] has a VC/VP [dec] configured already VC/VP [dec] cannot	The SPA ATM driver supports configuring only one VC/VP under a point to multi point sub-interface. The sub-interface specified in the message already has VP/VC configured.	-	LOG_STD_NO_ACTION
ISRHOG-2-NOMEM	2-Critical	No memory available for configuring ISRHOG	The ISRHOG protocol subsystem could not obtain the memory it needed.	<del>ISURROCNAMVACUSEUP</del>	"Copy the message exactly as it appears and report it your technical\n\n support representative."
ISRHOG-2-NOMEM	2-Critical	No memory available for configuring ISRHOG	The ISRHOG protocol subsystem could not obtain the memory it needed.	<del>ISURROCNAMVACUSEUP</del>	"Copy the message exactly as it appears and report it your technical\n\n support representative."
ISRHOG-4-MASK	4-Warning	Process masked interrupts for more than [chars]Process Buffer [node]microsecs	The process blocked interrupts for more than the latency threshold set\n\n for the ISRHOG tool.	<del>ISURROCNAMVACUSEUP</del>	"Copy the message exactly as it appears and report it your technical\n\n support representative."
ISRHOG-4-MASK	4-Warning	Process masked interrupts for more than [chars]Process Buffer [node]microsecs	The process blocked interrupts for more than the latency threshold set\n\n for the ISRHOG tool.	<del>ISURROCNAMVACUSEUP</del>	"Copy the message exactly as it appears and report it your technical\n\n support representative."
<del>ISURROCNAMVACUSEUP</del>	2-Critical	[chars][dec]: ISSU Client	ISSU Client incompatible.	ISSU_CLIENT_COMP	LOG_STD_ACTION
<del>ISURROCNAMVACUSEUP</del>	2-Critical	[chars][dec]: ISSU Client	ISSU Client incompatible.	ISSU_CLIENT_COMP	LOG_STD_ACTION
<del>ISURROCNAMVACUSEUP</del>	2-Critical	[chars][dec]: ISSU Negotiation not complete	Unable to complete ISSU negotiation.	ISSU_CLIENT_COMP	LOG_STD_ACTION
<del>ISURROCNAMVACUSEUP</del>	2-Critical	[chars][dec]: ISSU Negotiation not complete	Unable to complete ISSU negotiation.	ISSU_CLIENT_COMP	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>ISSU_ERROR2NIIPTM_REG</del>	2-Critical	[chars][dec]:	Client could not register endpoint type with NTI.	ISSU_CLIENT_COMP	LOG_STD_ACTION
<del>ISSU_ERROR2NIIPTM_REG</del>	2-Critical	[chars][dec]:	Client could not register endpoint type with NTI.	ISSU_CLIENT_COMP	LOG_STD_ACTION
<del>ISSU_ERROR2NIIPTME_UNREG</del>	2-Critical	[chars][dec]:	Client could not unregister endpoint type with NTI.	ISSU_CLIENT_COMP	LOG_STD_ACTION
<del>ISSU_ERROR2NIIPTME_UNREG</del>	2-Critical	[chars][dec]:	Client could not unregister endpoint type with NTI.	ISSU_CLIENT_COMP	LOG_STD_ACTION
ISSU_ERROR2NII_REG	2-Critical	[chars][dec]: Failed to register with	Could not register client with NTI.	ISSU_CLIENT_COMP	LOG_STD_ACTION
ISSU_ERROR2NII_REG	2-Critical	[chars][dec]: Failed to register with	Could not register client with NTI.	ISSU_CLIENT_COMP	LOG_STD_ACTION
ISSU_ERROR2NII_UNREG	2-Critical	[chars][dec]:	Could not unregister client with NTI.	ISSU_CLIENT_COMP	LOG_STD_ACTION
ISSU_ERROR2NII_UNREG	2-Critical	[chars][dec]:	Could not unregister client with NTI.	ISSU_CLIENT_COMP	LOG_STD_ACTION
<del>ISSU_ERROR3CAPEXCHANGE</del>	3-Error	[chars][dec]: Capability exchange failed with error [chars]	The capability exchange failed the ISSU client is unable to process the received capability	ISSU_CLIENT_COMP	LOG_STD_ACTION
<del>ISSU_ERROR3CAPEXCHANGE</del>	3-Error	[chars][dec]: Capability exchange failed with error [chars]	The capability exchange failed the ISSU client is unable to process the received capability	ISSU_CLIENT_COMP	LOG_STD_ACTION
ISSU_ERROR3CAP_REG	3-Error	[chars][dec]: failed to register	The capabilities of the ISSU client could not be registered	ISSU_CLIENT_COMP	LOG_STD_ACTION
ISSU_ERROR3CAP_REG	3-Error	[chars][dec]: failed to register	The capabilities of the ISSU client could not be registered	ISSU_CLIENT_COMP	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ISSU_ERROR3CAPENTRY_REG	3-Error	[chars][dec]: failed to register a capability entry [chars]	The ISSU client failed to register a capability entry	ISSU_CLIENT_COMP	LOG_STD_ACTION
ISSU_ERROR3CAPENTRY_REG	3-Error	[chars][dec]: failed to register a capability entry [chars]	The ISSU client failed to register a capability entry	ISSU_CLIENT_COMP	LOG_STD_ACTION
ISSU_ERROR3CAPGRP_REG	3-Error	[chars][dec]: failed to register a capability group [chars]	The ISSU client failed to register a capability group	ISSU_CLIENT_COMP	LOG_STD_ACTION
ISSU_ERROR3CAPGRP_REG	3-Error	[chars][dec]: failed to register a capability group [chars]	The ISSU client failed to register a capability group	ISSU_CLIENT_COMP	LOG_STD_ACTION
ISSU_ERROR3CAPTYPE_REG	3-Error	[chars][dec]: failed to	The ISSU client failed to register a capability type	ISSU_CLIENT_COMP	LOG_STD_ACTION
ISSU_ERROR3CAPTYPE_REG	3-Error	[chars][dec]: failed to	The ISSU client failed to register a capability type	ISSU_CLIENT_COMP	LOG_STD_ACTION
ISSU_ERROR3CF_SEND	3-Error	[chars][dec]: Client failed to send message [dec]	ISSU client cannot send a negotiation message to a peer	ISSU_CLIENT_COMP	LOG_STD_ACTION
ISSU_ERROR3CF_SEND	3-Error	[chars][dec]: Client failed to send message [dec]	ISSU client cannot send a negotiation message to a peer	ISSU_CLIENT_COMP	LOG_STD_ACTION
ISSU_ERROR3CLIENT_REG	3-Error	[chars][dec]: Client failed to register [chars]	The ISSU Client could not be registered	ISSU_CLIENT_COMP	LOG_STD_ACTION
ISSU_ERROR3CLIENT_REG	3-Error	[chars][dec]: Client failed to register [chars]	The ISSU Client could not be registered	ISSU_CLIENT_COMP	LOG_STD_ACTION
ISSU_ERROR3CLIENT_REG	3-Error	[chars][dec]: Client is not	The ISSU Client is not yet initialized. The negotiation for this client is not yet done.	ISSU_CLIENT_COMP	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ISSU_ERROR3CLIENT_REG_FAILD	3-Error	[chars][dec]: Client is not	The ISSU Client is not yet initialized. The negotiation for this client is not yet done.	ISSU_CLIENT_COMP	LOG_STD_ACTION
ISSU_ERROR3ENTITY_REG	3-Error	[chars][dec]: failed to register	The ISSU entity could not be registered	ISSU_CLIENT_COMP	LOG_STD_ACTION
ISSU_ERROR3ENTITY_REG	3-Error	[chars][dec]: failed to register	The ISSU entity could not be registered	ISSU_CLIENT_COMP	LOG_STD_ACTION
ISSU_ERROR3ENTITY_UNREG	3-Error	[chars][dec]: failed to unregister	The ISSU entity could not be unregistered	ISSU_CLIENT_COMP	LOG_STD_ACTION
ISSU_ERROR3ENTITY_UNREG	3-Error	[chars][dec]: failed to unregister	The ISSU entity could not be unregistered	ISSU_CLIENT_COMP	LOG_STD_ACTION
ISSU_ERROR3ICC_SEND	3-Error	[chars][dec]: Client failed to send message	ISSU client cannot send a negotiation message to a peer	ISSU_CLIENT_COMP	LOG_STD_ACTION
ISSU_ERROR3ICC_SEND	3-Error	[chars][dec]: Client failed to send message	ISSU client cannot send a negotiation message to a peer	ISSU_CLIENT_COMP	LOG_STD_ACTION
ISSU_ERROR3MSG_MIU	3-Error	[chars][dec]: Client failed to get mtu for message [dec] [chars]	[chars][dec]: client cannot get the MTU for a message type	ISSU_CLIENT_COMP	LOG_STD_ACTION
ISSU_ERROR3MSG_MIU	3-Error	[chars][dec]: Client failed to get mtu for message [dec] [chars]	[chars][dec]: client cannot get the MTU for a message type	ISSU_CLIENT_COMP	LOG_STD_ACTION
ISSU_ERROR3MSG_NOTCK	3-Error	[chars][dec]: ISSU message type [dec] is not compatible	ISSU received a message not compatible with the running version.	ISSU_CLIENT_COMP	"show message type <Client_ID>"
ISSU_ERROR3MSG_NOTCK	3-Error	[chars][dec]: ISSU message type [dec] is not compatible	ISSU received a message not compatible with the running version.	ISSU_CLIENT_COMP	"show message type <Client_ID>"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ISSU_ERROR3MSG_POLICY	3-Error	[chars][dec]: Client failed to negotiate version for message type [dec] error [chars]	ISSU client cannot negotiate message to a peer	ISSU_CLIENT_COMP	LOG_STD_ACTION
ISSU_ERROR3MSG_POLICY	3-Error	[chars][dec]: Client failed to negotiate version for message type [dec] error [chars]	ISSU client cannot negotiate message to a peer	ISSU_CLIENT_COMP	LOG_STD_ACTION
ISSU_ERROR3MSG_REG	3-Error	[chars][dec]: failed to register its messages [chars]	Messages for the ISSU client could not be registered	ISSU_CLIENT_COMP	LOG_STD_ACTION
ISSU_ERROR3MSG_REG	3-Error	[chars][dec]: failed to register its messages [chars]	Messages for the ISSU client could not be registered	ISSU_CLIENT_COMP	LOG_STD_ACTION
ISSU_ERROR3MSG_GRP_REG	3-Error	[chars][dec]: failed to	The ISSU client failed to register a message group	ISSU_CLIENT_COMP	LOG_STD_ACTION
ISSU_ERROR3MSG_GRP_REG	3-Error	[chars][dec]: failed to	The ISSU client failed to register a message group	ISSU_CLIENT_COMP	LOG_STD_ACTION
ISSU_ERROR3MSG_TYP_REG	3-Error	[chars][dec]: failed to register a message type [chars]	The ISSU client failed to register a message type	ISSU_CLIENT_COMP	LOG_STD_ACTION
ISSU_ERROR3MSG_TYP_REG	3-Error	[chars][dec]: failed to register a message type [chars]	The ISSU client failed to register a message type	ISSU_CLIENT_COMP	LOG_STD_ACTION
ISSU_ERROR3MUNCNENOUGH	3-Error	[chars][dec]: Requested buffer size [dec] is greater than the max MTU size	Checkpoint buffer size requested is greater than the max MTU size checkpoint supports	cat6000-ha	LOG_STD_ACTION
ISSU_ERROR3MUNCNENOUGH	3-Error	[chars][dec]: Requested buffer size [dec] is greater than the max MTU size	Checkpoint buffer size requested is greater than the max MTU size checkpoint supports	cat6000-ha	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ISSU_ERROR_NCO_PROCESS</del>	3-Error	[chars][dec]: Cannot create process: [chars]	The process to negotiate the session for the specified ISSU client cannot be created.	ISSU_CLIENT_COMP	LOG_STD_ACTION
<del>ISSU_ERROR_NCO_PROCESS</del>	3-Error	[chars][dec]: Cannot create process: [chars]	The process to negotiate the session for the specified ISSU client cannot be created.	ISSU_CLIENT_COMP	LOG_STD_ACTION
<del>ISSU_ERROR_AHRT_CALLBACK</del>	3-Error	[chars][dec]:	-	ISSU_CLIENT_COMP	LOG_STD_ACTION
<del>ISSU_ERROR_AHRT_CALLBACK</del>	3-Error	[chars][dec]:	-	ISSU_CLIENT_COMP	LOG_STD_ACTION
<del>ISSU_ERROR_SESSION_REG</del>	3-Error	[chars][dec]: session failed to register [chars]	The client's ISSU session could not be registered	ISSU_CLIENT_COMP	LOG_STD_ACTION
<del>ISSU_ERROR_SESSION_REG</del>	3-Error	[chars][dec]: session failed to register [chars]	The client's ISSU session could not be registered	ISSU_CLIENT_COMP	LOG_STD_ACTION
<del>ISSU_ERROR_SESSION_UNREG</del>	3-Error	[chars][dec]: session [dec]	The client's ISSU session could not be unregistered	ISSU_CLIENT_COMP	LOG_STD_ACTION
<del>ISSU_ERROR_SESSION_UNREG</del>	3-Error	[chars][dec]: session [dec]	The client's ISSU session could not be unregistered	ISSU_CLIENT_COMP	LOG_STD_ACTION
<del>ISSU_ERROR_SESSION_NEGO_AID</del>	3-Error	[chars][dec]: failed to	The ISSU client cannot start its negotiation	ISSU_CLIENT_COMP	LOG_STD_ACTION
<del>ISSU_ERROR_SESSION_NEGO_AID</del>	3-Error	[chars][dec]: failed to	The ISSU client cannot start its negotiation	ISSU_CLIENT_COMP	LOG_STD_ACTION
<del>ISSU_ERROR_SESSION_TRANSFORM_AID</del>	3-Error	[chars][dec]: [chars] transformation failed [chars]	The transformation operation for the ISSU message has failed	ISSU_CLIENT_COMP	LOG_STD_ACTION
<del>ISSU_ERROR_SESSION_TRANSFORM_AID</del>	3-Error	[chars][dec]: [chars] transformation failed [chars]	The transformation operation for the ISSU message has failed	ISSU_CLIENT_COMP	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ISSU_PROCESS3-ABORT</del>	3-Error	[chars][dec]: [chars] transformation failed for message [dec] endpoint [dec] [chars]	The transformation operation for the ISSU message has failed	ISSU_CLIENT_COMP	LOG_STD_ACTION
<del>ISSU_PROCESS3-ABORT</del>	3-Error	[chars][dec]: [chars] transformation failed for message [dec] endpoint [dec] [chars]	The transformation operation for the ISSU message has failed	ISSU_CLIENT_COMP	LOG_STD_ACTION
ISSU_NT_FAILURES_TIEHA	3-Error	ERRMSG_NOFLAGS	-	-	-
ISSU_NT_FAILURES_TIEHA	3-Error	ERRMSG_NOFLAGS	-	-	-
ISSU_PROCESS3-ABORT	3-Error	[chars]	Provides abort status information	install	"Observe the status message"
ISSU_PROCESS3-ABORT	3-Error	[chars]	Provides abort status information	install	"Observe the status message"
ISSU_PROCESS3-ABORTVERSION	3-Error	issu abortversion: [chars]	The ISSU abortversion command can be run only from the LoadVersion or RunVersion state	install	"Please proceed to reinitializing the ISSU process"
ISSU_PROCESS3-ABORTVERSION	3-Error	issu abortversion: [chars]	The ISSU abortversion command can be run only from the LoadVersion or RunVersion state	install	"Please proceed to reinitializing the ISSU process"
ISSU_PROCESS3-FILESYS	3-Error	'[chars]' filesystem does not exist\n	Verification of the filesystem failed	install	"The file needs to be downloaded to the flash disk"
ISSU_PROCESS3-FILESYS	3-Error	'[chars]' filesystem does not exist\n	Verification of the filesystem failed	install	"The file needs to be downloaded to the flash disk"
ISSU_PROCESS3-IMAGE	3-Error	[chars] is loading the wrong image [ [chars] ] expected image [ [chars] ]	Wrong image is being loaded during ISSU process.	install	"Check the detail state of ISSU process make sure " "the right images are loaded on Active and " "on Standby"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ISSU_PROCESS3IMAGE	3-Error	[chars] is loading the wrong image [ [chars] ] expected image [ [chars] ]	Wrong image is being loaded during ISSU process.	install	"Check the detail state of ISSU process make sure " "the right images are loaded on Active and " "on Standby"
ISSU_PROCESS3IPC_AGENT	3-Error	[chars] [ [chars] ]	The ISSU process IPC agent had an error.	install	"Copy the error and send it to TAC."
ISSU_PROCESS3IPC_AGENT	3-Error	[chars] [ [chars] ]	The ISSU process IPC agent had an error.	install	"Copy the error and send it to TAC."
ISSU_PROCESS3IPC_MSG	3-Error	[chars]	The ISSU process IPC MSG Queue Setup encountered an error.	install	"Copy the error and send it to TAC."
ISSU_PROCESS3IPC_MSG	3-Error	[chars]	The ISSU process IPC MSG Queue Setup encountered an error.	install	"Copy the error and send it to TAC."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ISSU</del> PROCESSORVERSION	3-Error	[chars]	The ISSU commitversion command did not fulfill the necessary criteria. This can happen due to the following conditions not being met. \n1. Current ISSU state is not RunVersion \n2. Secondary Version doesn't exist on Standby \n3. Standby BOOT variable doesn't exist \n4. The new image is not the first in BOOT on Standby \n5. Active BOOT variable is not set \n6. Primary Version on Active doesn't exist \n7. New image is not the first in Active BOOT \n8. Configuration register is not 0x2102	install	"Fix the error and try the command again"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ISSU_PROCESSLOADVERSION	3-Error	[chars]	The ISSU commitversion command did not fulfill the necessary criteria. This can happen due to the following conditions not being met. \n1. Current ISSU state is not RunVersion \n2. Secondary Version doesn't exist on Standby \n3. Standby BOOT variable doesn't exist \n4. The new image is not the first in BOOT on Standby \n5. Active BOOT variable is not set \n6. Primary Version on Active doesn't exist \n7. New image is not the first in Active BOOT \n8. Configuration register is not 0x2102	install	"Fix the error and try the command again"
ISSU_PROCESS3NVRAM	3-Error	[chars]	NVRAM variables are not set properly.	install	"The issu commands or the hw-module command did not "set the variables properly."
ISSU_PROCESS3NVRAM	3-Error	[chars]	NVRAM variables are not set properly.	install	"The issu commands or the hw-module command did not "set the variables properly."
ISSU_PROCESSPARAMETERS	3-Error	[chars] [chars] parameters are wrong	The system could not be configured for ISSU	install	"Fix the error and try the command again"
ISSU_PROCESSPARAMETERS	3-Error	[chars] [chars] parameters are wrong	The system could not be configured for ISSU	install	"Fix the error and try the command again"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ISSU_PROCESS-3-PEER	3-Error	[chars]	The ISSU process cannot continue with negotiation as it can't verify the peer's state.\n	install	"Make sure the peer is present and try again.\n" "If the problem persists send the output of " 'show issu state' and 'show version' to TAC."
ISSU_PROCESS-3-PEER	3-Error	[chars]	The ISSU process cannot continue with negotiation as it can't verify the peer's state.\n	install	"Make sure the peer is present and try again.\n" "If the problem persists send the output of " 'show issu state' and 'show version' to TAC."
ISSU_PROCESS-3-PRST	3-Error	[chars]	Persistent variables are not set properly.	install	"The issu commands or the hw-module command did not " 'set the variables properly."
ISSU_PROCESS-3-PRST	3-Error	[chars]	Persistent variables are not set properly.	install	"The issu commands or the hw-module command did not " 'set the variables properly."
ISSU_PROCESS-3-RF	3-Error	[chars] [ [chars] ]	The ISSU process RF client had an error.	install	"Copy the error and send it to TAC."
ISSU_PROCESS-3-RF	3-Error	[chars] [ [chars] ]	The ISSU process RF client had an error.	install	"Copy the error and send it to TAC."
<del>ISSU_PROCESS-3-RF</del> ISSU_PROCESS-3-RF	3-Error	[chars]	The rollback timer could not be configured	install	"Fix the error and try the command again"
<del>ISSU_PROCESS-3-RF</del> ISSU_PROCESS-3-RF	3-Error	[chars]	The rollback timer could not be configured	install	"Fix the error and try the command again"
ISSU_PROCESS3SYSTEM	3-Error	[chars]	The configuration register value should not be changed while the ISSU process is in progress	install	"The low order byte of the configuration register " 'should be 0x02 during the upgrade process"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ISSU_PROCESS3SYSTEM	3-Error	[chars]	The configuration register value should not be changed while the ISSU process is in progress	install	"The low order byte of the configuration register " "should be 0x02 during the upgrade process"
ISSU_PROCESS3TRANSFORM	3-Error	[chars] [ [chars] ]	The ISSU process transform utility had an error.	install	"Send the output of 'show version' from the Active " "and the Standby and send it to TAC."
ISSU_PROCESS3TRANSFORM	3-Error	[chars] [ [chars] ]	The ISSU process transform utility had an error.	install	"Send the output of 'show version' from the Active " "and the Standby and send it to TAC."
ISSU_PROCESS3UAM	3-Error	[chars] [chars]	Return code failure from calling UAM API.	install	"Got unexpected rc from calling UAM API."
ISSU_PROCESS3UAM	3-Error	[chars] [chars]	Return code failure from calling UAM API.	install	"Got unexpected rc from calling UAM API."
ISSU_PROCESS4ABORT_ISSU	4-Warning	[chars]	The peer has been determined to be incompatible and hence is being reloaded.	install	"Send the output of 'show redundancy history' from " "the Active to TAC."
ISSU_PROCESS4ABORT_ISSU	4-Warning	[chars]	The peer has been determined to be incompatible and hence is being reloaded.	install	"Send the output of 'show redundancy history' from " "the Active to TAC."
ISSU_PROCESS4CENB_WARNING	4-Warning	ISSU auto-rollback will be initiated in [dec] minutes.	It shows the warning message several minutes before the expiration of rollback timer	install	"Issue the acceptversion command before the " "expiration of rollback timer"
ISSU_PROCESS4CENB_WARNING	4-Warning	ISSU auto-rollback will be initiated in [dec] minutes.	It shows the warning message several minutes before the expiration of rollback timer	install	"Issue the acceptversion command before the " "expiration of rollback timer"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ISSU_PROCESSCOMMVRD_NO</del>	6-Information	[chars]	Provides the issu state information	install	"Observe the status message"
<del>ISSU_PROCESSCOMMVRD_NO</del>	6-Information	[chars]	Provides the issu state information	install	"Observe the status message"
<del>ISSU_PROCESSOCDVRD_NO</del>	6-Information	[chars]	Provides the issu state information	install	"Observe the status message"
<del>ISSU_PROCESSOCDVRD_NO</del>	6-Information	[chars]	Provides the issu state information	install	"Observe the status message"
<del>ISSU_PROCESSUNMRD_NO</del>	6-Information	[chars]	Provides the issu state information	install	"Observe the status message"
<del>ISSU_PROCESSUNMRD_NO</del>	6-Information	[chars]	Provides the issu state information	install	"Observe the status message"
<del>ISSU_PROCESSSELF_RELOAD</del>	6-Information	slot [dec] countdown to self-reload started [dec] second delay\n	Self reload from Upgrade Director's instructions	install	"Log the circumstances"
<del>ISSU_PROCESSSELF_RELOAD</del>	6-Information	slot [dec] countdown to self-reload started [dec] second delay\n	Self reload from Upgrade Director's instructions	install	"Log the circumstances"
<del>ISSU_PROCESSLHIODCANCEL</del>	6-Information	Self-reload cancelled on slot [dec]\n	Cancel of self-reload from user 'abort' instruction	install	"Log the circumstances"
<del>ISSU_PROCESSLHIODCANCEL</del>	6-Information	Self-reload cancelled on slot [dec]\n	Cancel of self-reload from user 'abort' instruction	install	"Log the circumstances"
ISSU_PROCESS7-DEBUG	7-Debug	[chars]	Debug commands for the ISSU process. The system is \nattempting to recover from an unknown error.\n	install	"Send the output of 'show logging' to TAC for "debugging purposes."
ISSU_PROCESS7-DEBUG	7-Debug	[chars]	Debug commands for the ISSU process. The system is \nattempting to recover from an unknown error.\n	install	"Send the output of 'show logging' to TAC for "debugging purposes."
ISSU_XFORM-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
ISSU_XFORM-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ISSU0BOOT_SYNC_FAIL	0-Emergency	iosxe-binos-utils	Problem with sync of ISSU boot state -[chars]	"The ISSU state between two FRUs is not properly synchronized as a result of a boot error."	"This message will automatically appear during certain events"
ISSU0PKG_INCONSIST	0-Emergency	iosxe-binos-utils	Reason:[chars]	"A software consolidated package or sub-package has an error that indicates the sub-package should not be installed or used."	"If this message is received"
ISSU0PKG_MNT_SCRIPT_FAIL	0-Emergency	iosxe-binos-utils	Package:[chars]	"A consolidated package or sub-package has encountered an error indicating it is not usable."	"Upgrade your software using a different consolidated package or sub-package."
ISSU0RESET_FRU_FAIL	0-Emergency	iosxe-binos-utils	Problem with ISSU reset of remote FRU -[chars]	"After a sub-package installation"	-
ISSU0SOFTWARE_INVALID	0-Emergency	iosxe-binos-utils	Package for location[chars]:[chars]	"The sub-packages have encountered an error related to the structure of the loaded software."	"This error is likely caused by a failure of the boot or installation process or a corrupted provisioning file. If the system displays error messages related to the boot that can be addressed"
ISSU-3-BAD_PARAMS	3-Error	[chars]	Bad parameters are being passed	ha-issu-infra	"Copy the error and send it to TAC. TAC team can contact ISSU infrastructure team to investigate the problem."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ISSU-3-BAD_PARAMS	3-Error	[chars]	Bad parameters are being passed	ha-issu-infra	"Copy the error and send it to TAC. TAC team can contact ISSU infrastructure team to investigate the problem."
<del>ISSU-3-BAD_PARAMS</del>	3-Error	[chars]	Error found during checking of ISSU base client compatibility	ha-issu-infra	"Copy the error and send it to TAC. TAC team can contact ISSU infrastructure team to investigate the problem."
<del>ISSU-3-BAD_PARAMS</del>	3-Error	[chars]	Error found during checking of ISSU base client compatibility	ha-issu-infra	"Copy the error and send it to TAC. TAC team can contact ISSU infrastructure team to investigate the problem."
ISSU-3-BOOT_SYNC	3-Error	iosxe-binos-utils	Problem with sync of ISSU boot state -[chars]	"The ISSU state between two FRUs is not properly synchronized as a result of a boot error."	"This message will automatically appear during certain events"
ISSU-3-BOOT_UNCLEAN	3-Error	iosxe-binos-utils	Found reload log file	-	-
<del>ISSU-3-CAPTABLEOUTOFBOUND</del>	3-Error	Cap_table_count [dec] is out of bound max is [dec] for	The cap_table_count is out of bound for the cap_entry_id.	ha-issu-infra	"Copy the error and send it to TAC. TAC team " "can contact ISSU infrastructure team to check why the count " "is out of bound for the cap_entry_id."
<del>ISSU-3-CAPTABLEOUTOFBOUND</del>	3-Error	Cap_table_count [dec] is out of bound max is [dec] for	The cap_table_count is out of bound for the cap_entry_id.	ha-issu-infra	"Copy the error and send it to TAC. TAC team " "can contact ISSU infrastructure team to check why the count " "is out of bound for the cap_entry_id."
<del>ISSU-3-CLIENTENTITYNOTREG</del>	3-Error	Client [chars][dec] or entity[dec] is not registered [chars].	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ISSU3CLIENT_REG_DIST	3-Error	Client [chars][dec] or entity[dec] is not registered [chars].	-	-	-
ISSU3CLIENT_REG_DIST	3-Error	Failed to [chars] distributed client [dec]	Distributed client reservation or unreservation failed	ha-issu-infra	"Copy the error and send it to TAC. TAC team can contact ISSU infrastructure team to investigate the problem."
ISSU3CLIENT_REG_DIST	3-Error	Failed to [chars] distributed client [dec]	Distributed client reservation or unreservation failed	ha-issu-infra	"Copy the error and send it to TAC. TAC team can contact ISSU infrastructure team to investigate the problem."
ISSU3-DEBUG_ERROR	3-Error	[chars]	Error happens when turning on ISSU debug.	ha-issu-infra	"show issu client   include <client id>' \n\copy the error and send it to TAC. TAC team can contact ISSU client team to \n\check why reported item is used if client problem reported. \n\Otherwise contact ISSU infrastructure team instead"
ISSU3-DEBUG_ERROR	3-Error	[chars]	Error happens when turning on ISSU debug.	ha-issu-infra	"show issu client   include <client id>' \n\copy the error and send it to TAC. TAC team can contact ISSU client team to \n\check why reported item is used if client problem reported. \n\Otherwise contact ISSU infrastructure team instead"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ISSUMVENDUORNE</del>	3-Error	Dummy msg version [dec] is out of range for msg[dec] under client [chars][dec] and entity[dec].	dummy msg version is out of range	ha-issu-infra	"show issu message type   include <client id> <entity_id> <msg_type>' and copy the error and send it to TAC. TAC team can contact ISSU team to check why reported item is registered already"
<del>ISSUMVENDUORNE</del>	3-Error	Dummy msg version [dec] is out of range for msg[dec] under client [chars][dec] and entity[dec].	dummy msg version is out of range	ha-issu-infra	"show issu message type   include <client id> <entity_id> <msg_type>' and copy the error and send it to TAC. TAC team can contact ISSU team to check why reported item is registered already"
<del>ISSUMENIRYNOTLAST</del>	3-Error	Dumy cap entry is not last one for cap group[dec] registration	Dumy cap entry is not last one for cap group registration	ha-issu-infra	"show issu client   include <client id>' and \n\copy the error and send it to TAC. TAC team can contact ISSU client team \n\to check why dumy entry is not last one during registration"
<del>ISSUMENIRYNOTLAST</del>	3-Error	Dumy cap entry is not last one for cap group[dec] registration	Dumy cap entry is not last one for cap group registration	ha-issu-infra	"show issu client   include <client id>' and \n\copy the error and send it to TAC. TAC team can contact ISSU client team \n\to check why dumy entry is not last one during registration"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>ISS3DUP_MVBSNREG</del>	3-Error	[chars] is already registered under client [chars][dec] entity[dec] and msgtype[dec]	Item is registered already under that msg type.	ha-issu-infra	"show issu message type   include <client id> <entity_id> <msgtype>' and copy the error and send it to TAC. TAC team can contact ISSU team to check why reported item is registered already"
<del>ISS3DUP_MVBSNREG</del>	3-Error	[chars] is already registered under client [chars][dec] entity[dec] and msgtype[dec]	Item is registered already under that msg type.	ha-issu-infra	"show issu message type   include <client id> <entity_id> <msgtype>' and copy the error and send it to TAC. TAC team can contact ISSU team to check why reported item is registered already"
ISS3DUP_ENTITY_REG	3-Error	Entity[dec] is registered already under client [chars][dec]	-	-	-
ISS3DUP_ENTITY_REG	3-Error	Entity[dec] is registered already under client [chars][dec]	-	-	-
<del>ISS3DUP_MVBSNREG</del>	3-Error	[chars] is duplicated [chars] under client [chars][dec] and entity[dec]	-	-	-
<del>ISS3DUP_MVBSNREG</del>	3-Error	[chars] is duplicated [chars] under client [chars][dec] and entity[dec]	-	-	-
ISS3DUP_REG_ENDPOINT	3-Error	Endpoint is registered already.	Endpoint is registered already.	ha-issu-infra	"show issu endpoint' to check if ISSU subsystem \n\is initialized twice."
ISS3DUP_REG_ENDPOINT	3-Error	Endpoint is registered already.	Endpoint is registered already.	ha-issu-infra	"show issu endpoint' to check if ISSU subsystem \n\is initialized twice."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ISSU_PRCG_NDRENDONT</del>	3-Error	[chars][dec] is registered already under endpoint.	Item is registered already under endpoint.	ha-issu-infra	"show issu client   include <client id>' \n\ncopy the error and send it to TAC. TAC team can contact ISSU client team \n\nto check why reported item is registered already if client problem reported. \n\Otherwise contact ISSU infrastructure team instead"
<del>ISSU_PRCG_NDRENDONT</del>	3-Error	[chars][dec] is registered already under endpoint.	Item is registered already under endpoint.	ha-issu-infra	"show issu client   include <client id>' \n\ncopy the error and send it to TAC. TAC team can contact ISSU client team \n\nto check why reported item is registered already if client problem reported. \n\Otherwise contact ISSU infrastructure team instead"
<del>ISSU_PRCG_NDRENDNTTY</del>	3-Error	[chars][dec] is registered already under client [chars][dec] and	Item is registered already under client and entity.	ha-issu-infra	"show issu client   include <client id>' and \n\ncopy the error and send it to TAC. TAC team can contact ISSU client team \n\nto check why reported items under entity is registered already"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ISSDUPREGUNDERENTITY</del>	3-Error	[chars][dec] is registered already under client [chars][dec] and	Item is registered already under client and entity.	ha-issu-infra	"show issu client   include <client id>' and \n\copy the error and send it to TAC. TAC team can contact ISSU client team \n\to check why reported items under entity is registered already"
<del>ISSEMPTYDUMMYVERSION</del>	3-Error	[chars] is empty under client [chars][dec] entity[dec].	dummy version is empty.	ha-issu-infra	"copy the error and send it to TAC. TAC team can contact ISSU team to check why reported item is registered already"
<del>ISSEMPTYDUMMYVERSION</del>	3-Error	[chars] is empty under client [chars][dec] entity[dec].	dummy version is empty.	ha-issu-infra	"copy the error and send it to TAC. TAC team can contact ISSU team to check why reported item is registered already"
<del>ISSEMPTYUNDERCLIENT</del>	3-Error	[chars] is empty under client [chars][dec].	Item is empty in client.	ha-issu-infra	"show issu client   include <client id>' and \n\copy the error and send it to TAC. TAC team can contact ISSU client team \n\to check why reported item under client is empty"
<del>ISSEMPTYUNDERCLIENT</del>	3-Error	[chars] is empty under client [chars][dec].	Item is empty in client.	ha-issu-infra	"show issu client   include <client id>' and \n\copy the error and send it to TAC. TAC team can contact ISSU client team \n\to check why reported item under client is empty"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ISSUBEMPTY_UNDERENDPOINT</del>	3-Error	[chars] is empty under endpoint.	Item is empty under endpoint.	ha-issu-infra	"show issu client   include <client id>' \n\ncopy the error and send it to TAC. TAC team can contact ISSU client team to \n\ncheck why reported item is empty if client problem reported. \n\Otherwise contact ISSU infrastructure team instead"
<del>ISSUBEMPTY_UNDERENDPOINT</del>	3-Error	[chars] is empty under endpoint.	Item is empty under endpoint.	ha-issu-infra	"show issu client   include <client id>' \n\ncopy the error and send it to TAC. TAC team can contact ISSU client team to \n\ncheck why reported item is empty if client problem reported. \n\Otherwise contact ISSU infrastructure team instead"
<del>ISSUBEMPTY_UNDERENTITY</del>	3-Error	[chars] is empty [chars] under client [chars][dec] and entity[dec].	-	-	-
<del>ISSUBEMPTY_UNDERENTITY</del>	3-Error	[chars] is empty [chars] under client [chars][dec] and entity[dec].	-	-	-
ISSUBENDPOINT_NOT_REG	3-Error	Endpoint is not registered yet.	Endpoint is not registered yet.	ha-issu-infra	"Copy the error and send it to TAC. \n\TAC team can contact ISSU infrastructure team to check why endpoint is not registered"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ISSU-3-ENDPOINT_NOT_REG	3-Error	Endpoint is not registered yet.	Endpoint is not registered yet.	ha-issu-infra	"Copy the error and send it to TAC. \nTAC team can contact ISSU infrastructure team to check why endpoint is not registered"
ISSU-3-ERP_AGENT	3-Error	[chars]	The send message function call failed.	ha-issu-infra	"Copy the error and send it to TAC.\nTAC team can contact ISSU infrastructure team to check \nwhy one of the primary functions for the ERP agent failed"
ISSU-3-ERP_AGENT	3-Error	[chars]	The send message function call failed.	ha-issu-infra	"Copy the error and send it to TAC.\nTAC team can contact ISSU infrastructure team to check \nwhy one of the primary functions for the ERP agent failed"
ISSU-3-ERP_CLIENT	3-Error	For context ID [dec] [chars]	One of the primary functions for the ERP client failed.	ha-issu-infra	"Copy the error and send it to TAC.\nTAC team can contact ISSU infrastructure team to check \nwhy one of the primary functions for the ERP client failed"
ISSU-3-ERP_CLIENT	3-Error	For context ID [dec] [chars]	One of the primary functions for the ERP client failed.	ha-issu-infra	"Copy the error and send it to TAC.\nTAC team can contact ISSU infrastructure team to check \nwhy one of the primary functions for the ERP client failed"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ISSUBERP_CLIENT_EVENT	3-Error	Unknown [chars] event - [dec]	An unknown event was received	ha-issu-infra	"Copy the error and send it to TAC.\nTAC team can contact ISSU infrastructure team to check \nwhy an unknown event was received"
ISSUBERP_CLIENT_EVENT	3-Error	Unknown [chars] event - [dec]	An unknown event was received	ha-issu-infra	"Copy the error and send it to TAC.\nTAC team can contact ISSU infrastructure team to check \nwhy an unknown event was received"
ISLEXTERNAL_MATRIX_FILE	3-Error	Line [node] [chars]	External matrix file data is corrupted	ha-issu-infra	"An error was found in the external " "matrix data file. Open a case with TAC and attach output of " "<CmdBold>more if <matrix_cm_file> <CmdBd command " "where <matrix_cm_file> is the output of <CmdBold>dir " "systeming <CmdBd command."
ISLEXTERNAL_MATRIX_FILE	3-Error	Line [node] [chars]	External matrix file data is corrupted	ha-issu-infra	"An error was found in the external " "matrix data file. Open a case with TAC and attach output of " "<CmdBold>more if <matrix_cm_file> <CmdBd command " "where <matrix_cm_file> is the output of <CmdBold>dir " "systeming <CmdBd command."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SFEDCAICCFUNKMEMOV</del>	3-Error	chunk allocation for [chars] failed.	Chunk malloc failed.	ha-issu-infra	"copy the error and send it to TAC. TAC team can \n\contact ISSU client team"
<del>SFEDCAICCFUNKMEMOV</del>	3-Error	chunk allocation for [chars] failed.	Chunk malloc failed.	ha-issu-infra	"copy the error and send it to TAC. TAC team can \n\contact ISSU client team"
<del>SFEDCAICCDMMYBEN</del>	3-Error	Can not allocate [chars] under client [chars][dec] and entity[dec]	Can not allocate dummy version under client and entity.	ha-issu-infra	"'show proc mem' or 'show buffs' to check if memory \n\or buffer is full. shutdown unused tasks or reset cards usually can recover \n\those memory leak problem. Copy the error and send it to TAC if those actions \n\does not help."
<del>SFEDCAICCDMMYBEN</del>	3-Error	Can not allocate [chars] under client [chars][dec] and entity[dec]	Can not allocate dummy version under client and entity.	ha-issu-infra	"'show proc mem' or 'show buffs' to check if memory \n\or buffer is full. shutdown unused tasks or reset cards usually can recover \n\those memory leak problem. Copy the error and send it to TAC if those actions \n\does not help."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ISSU#AIEDJOAICENNTTY</del>	3-Error	Can not allocate entity[dec] under client [chars][dec]	Can not allocate entity control block under client.	ha-issu-infra	""show proc mem' or 'show buffs' to check if memory \n\or buffer is full. shutdown unused tasks or reset cards usually can recover \n\those memory leak problem. Copy the error and send it to TAC if those actions \n\does not help."
<del>ISSU#AIEDJOAICENNTTY</del>	3-Error	Can not allocate entity[dec] under client [chars][dec]	Can not allocate entity control block under client.	ha-issu-infra	""show proc mem' or 'show buffs' to check if memory \n\or buffer is full. shutdown unused tasks or reset cards usually can recover \n\those memory leak problem. Copy the error and send it to TAC if those actions \n\does not help."
<del>ISSUEDAICORCUNIBNTN</del>	3-Error	Can not allocate [chars][dec] [chars].	Can not allocate function callback.	ha-issu-infra	""show proc mem' or 'show buffs' to check if memory \n\or buffer is full. shutdown unused tasks or reset cards usually can recover \n\those memory leak problem. 'show issu client   include <client id>' \n\copy the error and send it to TAC. TAC team can contact ISSU client team \n\if client problem reported. Otherwise contact ISSU infrastructure team instead"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SEEDCALLOCUNDEFERR</del>	3-Error	Can not allocate [chars][dec] [chars].	Can not allocate function callback.	ha-issu-infra	"'show proc mem' or 'show buffs' to check if memory \n\or buffer is full. shutdown unused tasks or reset cards usually can recover \n\those memory leak problem. 'show issu client   include <client id>' \n\copy the error and send it to TAC. TAC team can contact ISSU client team \n\if client problem reported. Otherwise contact ISSU infrastructure team instead"
<del>SEEDCALLOCUNDEFERR</del>	3-Error	Can not allocate [chars] under client [chars][dec] and entity[dec]	-	-	-
<del>SEEDCALLOCUNDEFERR</del>	3-Error	Can not allocate [chars] under client [chars][dec] and entity[dec]	-	-	-
<del>SEEDCALLOCUNDEFERR</del>	3-Error	memory allocation for [chars] failed.	malloc failed.	ha-issu-infra	"copy the error and send it to TAC. TAC team can \n\contact ISSU client team"
<del>SEEDCALLOCUNDEFERR</del>	3-Error	memory allocation for [chars] failed.	malloc failed.	ha-issu-infra	"copy the error and send it to TAC. TAC team can \n\contact ISSU client team"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>S.FAIDCAICUNDRNPN</del>	3-Error	Can not allocate [chars] [chars][dec] control block.	Can not allocate control block.	ha-issu-infra	""show proc mem' or 'show buffs' to check if memory \n\or buffer is full. shutdown unused tasks or reset cards usually can recover \n\those memory leak problem. 'show issu client   include <client id>' \n\copy the error and send it to TAC. TAC team can contact ISSU client team \n\if client problem reported. Otherwise contact ISSU infrastructure team instead"
<del>S.FAIDCAICUNDRNPN</del>	3-Error	Can not allocate [chars] [chars][dec] control block.	Can not allocate control block.	ha-issu-infra	""show proc mem' or 'show buffs' to check if memory \n\or buffer is full. shutdown unused tasks or reset cards usually can recover \n\those memory leak problem. 'show issu client   include <client id>' \n\copy the error and send it to TAC. TAC team can contact ISSU client team \n\if client problem reported. Otherwise contact ISSU infrastructure team instead"
<del>S.FAIDCAICUNDRNPN</del>	3-Error	Can not allocate [chars][dec] under client [chars][dec] and entity[dec]	-	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SI</del> AEDC[AIC]UNDR[ENTY]	3-Error	Can not allocate [chars][dec] under client [chars][dec] and entity[dec]	-	-	-
<del>SI</del> AEDC[AIC]UNDR[ROP]	3-Error	Can not allocate [chars][dec] for [chars][dec] registration under client	Can not allocate item for group registration under client and entity.	ha-issu-infra	"show proc mem' or 'show buffs' to check if memory \n\or buffer is full. shutdown unused tasks or reset cards usually can recover \n\those memory leak problem. Copy the error and send it to TAC if those actions \n\does not help."
<del>SI</del> AEDC[AIC]UNDR[ROP]	3-Error	Can not allocate [chars][dec] for [chars][dec] registration under client	Can not allocate item for group registration under client and entity.	ha-issu-infra	"show proc mem' or 'show buffs' to check if memory \n\or buffer is full. shutdown unused tasks or reset cards usually can recover \n\those memory leak problem. Copy the error and send it to TAC if those actions \n\does not help."
<del>SI</del> AEDC[AIC]UNDR[MG]	3-Error	Can not allocate [chars] for msg [dec] registration under client	Can not allocate control block for msg registration.	ha-issu-infra	"show proc mem' or 'show buffs' to check if memory \n\or buffer is full. shutdown unused tasks or reset cards usually can recover \n\those memory leak problem. Copy the error and send it to TAC if those actions \n\does not help."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SLFADDAICUNDRMSG</del>	3-Error	Can not allocate [chars] for msg [dec] registration under client	Can not allocate control block for msg registration.	ha-issu-infra	""show proc mem' or 'show buffs' to check if memory \n\or buffer is full. shutdown unused tasks or reset cards usually can recover \n\those memory leak problem. Copy the error and send it to TAC if those actions \n\does not help."
<del>SLFADDAICUNDRMSG</del>	3-Error	Can not allocate [chars] for msg session[dec] registration under	Can not allocate control block for msg session registration.	ha-issu-infra	""show proc mem' or 'show buffs' to check if memory \n\or buffer is full. shutdown unused tasks or reset cards usually can recover \n\those memory leak problem. Copy the error and send it to TAC if those actions \n\does not help."
<del>SLFADDAICUNDRMSG</del>	3-Error	Can not allocate [chars] for msg session[dec] registration under	Can not allocate control block for msg session registration.	ha-issu-infra	""show proc mem' or 'show buffs' to check if memory \n\or buffer is full. shutdown unused tasks or reset cards usually can recover \n\those memory leak problem. Copy the error and send it to TAC if those actions \n\does not help."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>ISSAIDTICRAEIDSPACE</del>	3-Error	Failed to create ID32 space.	Failed to create ID32 space.	ha-issu-infra	"'show proc mem' or 'show buffs' to check if memory \n\or buffer is full. shutdown unused tasks or reset cards usually can recover \n\those memory leak problem. Copy the error and send it to TAC if those actions \n\does not help."
<del>ISSAIDTICRAEIDSPACE</del>	3-Error	Failed to create ID32 space.	Failed to create ID32 space.	ha-issu-infra	"'show proc mem' or 'show buffs' to check if memory \n\or buffer is full. shutdown unused tasks or reset cards usually can recover \n\those memory leak problem. Copy the error and send it to TAC if those actions \n\does not help."
<del>ISSAIDTONISSUROO</del>	3-Error	Failed to initialize ISSU proto.	Failed to initialize ISSU proto.	ha-issu-infra	"Copy the error and send it to TAC.\n\TAC team can contact ISSU infrastructure team to check \n\why ISSU protocol can not initialize correctly"
<del>ISSAIDTONISSUROO</del>	3-Error	Failed to initialize ISSU proto.	Failed to initialize ISSU proto.	ha-issu-infra	"Copy the error and send it to TAC.\n\TAC team can contact ISSU infrastructure team to check \n\why ISSU protocol can not initialize correctly"



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>ISSU</del> FAILED_TO_UNREGSES	3-Error	Failed to unregister [chars] session under client [chars][dec] and	Failed to unregister session.	ha-issu-infra	"'show proc mem' or 'show buffs' to check if memory \n\or buffer is full. shutdown unused tasks or reset cards usually can recover \n\those memory leak problem. Copy the error and send it to TAC if those actions \n\does not help."
<del>ISSU</del> FAILED_TO_UNREGSES	3-Error	Failed to unregister [chars] session under client [chars][dec] and	Failed to unregister session.	ha-issu-infra	"'show proc mem' or 'show buffs' to check if memory \n\or buffer is full. shutdown unused tasks or reset cards usually can recover \n\those memory leak problem. Copy the error and send it to TAC if those actions \n\does not help."
<del>ISSU</del> FOF_OWNER_INCONS	3-Error	FOF owner msg type [dec] of owner client [chars][dec] entity [dec].	An owner FOF message of interest to an using client has inconsistent negotiation results in different owner sessions under the same entity	ha-issu-infra	"Copy the error and send it to TAC. TAC team can " "contact ISSU infrastructure team to investigate " "the problem."
<del>ISSU</del> FOF_OWNER_INCONS	3-Error	FOF owner msg type [dec] of owner client [chars][dec] entity [dec].	An owner FOF message of interest to an using client has inconsistent negotiation results in different owner sessions under the same entity	ha-issu-infra	"Copy the error and send it to TAC. TAC team can " "contact ISSU infrastructure team to investigate " "the problem."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ISSU-3-FSM_BADMSG	3-Error	Peer session [dec] while receiving message [chars] is wrong.	Session are mismatched on peers or not found.	ha-issu-infra	"show issu session   include <session id>' and \n\copy the error and send it to TAC. TAC team can contact ISSU client team \n\to make sure that receiving path uses correct session id."
ISSU-3-FSM_BADMSG	3-Error	Peer session [dec] while receiving message [chars] is wrong.	Session are mismatched on peers or not found.	ha-issu-infra	"show issu session   include <session id>' and \n\copy the error and send it to TAC. TAC team can contact ISSU client team \n\to make sure that receiving path uses correct session id."
ISSU-3-FSM_DUP_UID	3-Error	Duplicate unique_id on session [dec]: my_uid [dec] peer_uid [dec].	Violate the requirement that each endpoint must have distinctive \n\ identifier.	ha-issu-infra	"Copy the error and send it to TAC. \n\TAC team can contact platform team to provide distinctive identifier \n\for endpoint"
ISSU-3-FSM_DUP_UID	3-Error	Duplicate unique_id on session [dec]: my_uid [dec] peer_uid [dec].	Violate the requirement that each endpoint must have distinctive \n\ identifier.	ha-issu-infra	"Copy the error and send it to TAC. \n\TAC team can contact platform team to provide distinctive identifier \n\for endpoint"
ISSU-3-FSM_INIT	3-Error	Fail to create process during FSM init.	The creation of FSM timer process fails.	ha-issu-infra	"User should check system resource during bootup\n\ time."
ISSU-3-FSM_INIT	3-Error	Fail to create process during FSM init.	The creation of FSM timer process fails.	ha-issu-infra	"User should check system resource during bootup\n\ time."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ISSUBSM_MSMATCH_MIU	3-Error	ISSU nego failed for client [chars][dec] entity_id [dec] session [dec] due to mismatch of mtu size [dec] & [dec].	-	-	-
ISSUBSM_MSMATCH_MIU	3-Error	ISSU nego failed for client [chars][dec] entity_id [dec] session [dec] due to mismatch of mtu size [dec] & [dec].	-	-	-
ISSUBSM_NCO_SEND_ERR	3-Error	Client '[chars]' with ID [dec] encountered '[chars]' in session [dec].	Creation/removal of the named port failed for IPC.	ha-issu-infra	"Copy the error and send it to TAC.\nTAC team can contact ISSU infrastructure team to check \n\why creation/removal of the named port failed for IPC"
ISSUBSM_NCO_SEND_ERR	3-Error	Client '[chars]' with ID [dec] encountered '[chars]' in session [dec].	Creation/removal of the named port failed for IPC.	ha-issu-infra	"Copy the error and send it to TAC.\nTAC team can contact ISSU infrastructure team to check \n\why creation/removal of the named port failed for IPC"
ISSUBSM_RUNIME_ERR	3-Error	Client '[chars]' with ID [dec] has '[chars]' in session [dec].	Runtime error occurs during FSM negotiation.	ha-issu-infra	""show issu session   include <session id>' and \n\copy the error and send it to TAC. TAC team can contact ISSU client team \n\to check why this runtime error occurs. Use 'show issu fsm   include <session id>' \n\to get error reason for futher debug."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>ISSU</del> 3FSM_RUNTIME_ERR	3-Error	Client '[chars]' with ID [dec] has '[chars]' in session [dec].	Runtime error occurs during FSM negotiation.	ha-issu-infra	"show issu session   include <session id>' and \n\copy the error and send it to TAC. TAC team can contact ISSU client team \n\to check why this runtime error occurs. Use 'show issu fsm   include <session id>\n\to get error reason for futher debug."
ISSU-3-HANDLE_SIZE	3-Error	Handle buffer size is [dec] should be [dec]	Statically defined handle buffer size is incorrect	ha-issu-infra	"Copy the error and send it to TAC. TAC team can contact ISSU infrastructure team to investigate the problem."
ISSU-3-HANDLE_SIZE	3-Error	Handle buffer size is [dec] should be [dec]	Statically defined handle buffer size is incorrect	ha-issu-infra	"Copy the error and send it to TAC. TAC team can contact ISSU infrastructure team to investigate the problem."
<del>ISSU</del> 3INUSE_UNDERENDPOINT	3-Error	[chars][dec] is in use under endpoint	Item is in use under endpoint.	ha-issu-infra	"show issu client   include <client id>' \n\copy the error and send it to TAC. TAC team can contact ISSU client team to \n\check why reported item is used if client problem reported. \n\Otherwise contact ISSU infrastructure team instead"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ISSU</del> ISSU-3-UNDERENDPOINT	3-Error	[chars][dec] is in use under endpoint	Item is in use under endpoint.	ha-issu-infra	"show issu client   include <client id>' \n\ncopy the error and send it to TAC. TAC team can contact ISSU client team to \n\check why reported item is used if client problem reported. \n\Otherwise contact ISSU infrastructure team instead"
<del>ISSU</del> ISSU-3-UNDERENTITY	3-Error	[chars][dec] is in use under client [chars][dec] and entity[dec]	-	-	-
<del>ISSU</del> ISSU-3-UNDERENTITY	3-Error	[chars][dec] is in use under client [chars][dec] and entity[dec]	-	-	-
ISSU-3-INCOMPAT	3-Error	iosxe-binos-utils	The packages in[chars] are not consistent	"The sub-packages specified for running on the chassis are not compatible with one other."	"Install a compatible set of packages to allow normal operation. This will require booting a known-good package set."
<del>ISSU</del> ISSU-3-INCOMPATIBLECLIENTS	3-Error	[chars]\n	List of ISSU base clients found incompatible	ha-issu-infra	"Copy the error and send it to TAC. TAC team can contact ISSU infrastructure team to investigate the problem."
<del>ISSU</del> ISSU-3-INCOMPATIBLECLIENTS	3-Error	[chars]\n	List of ISSU base clients found incompatible	ha-issu-infra	"Copy the error and send it to TAC. TAC team can contact ISSU infrastructure team to investigate the problem."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>ISSUINCOMPATIBLEERRUD</del>	3-Error	Setting image [chars] version [chars] on peer uid [dec] as incompatible	Peer is incompatible	ha-issu-infra	"A runtime exception occurred in the previous run.\n\Clear the condition according to the client eg. config-sync and reload \n\the Standby"
<del>ISSUINCOMPATIBLEERRUD</del>	3-Error	Setting image [chars] version [chars] on peer uid [dec] as incompatible	Peer is incompatible	ha-issu-infra	"A runtime exception occurred in the previous run.\n\Clear the condition according to the client eg. config-sync and reload \n\the Standby"
<del>ISSUINCONSENTIMGTIME</del>	3-Error	[chars]	Foreign owned field transformation failed	ha-issu-infra	"Copy the error and send it to TAC."
<del>ISSUINCONSENTIMGTIME</del>	3-Error	[chars]	Foreign owned field transformation failed	ha-issu-infra	"Copy the error and send it to TAC."
<del>ISSUERRUPHIVELSSDOPEND</del>	3-Error	[chars] [chars] [dec] [chars] [dec]	ISSU session registration or unregistration should not be done at interrupt level	ha-issu-infra	"Copy the error and send it to TAC. TAC team can contact ISSU infrastructure team to investigate the problem."
<del>ISSUERRUPHIVELSSDOPEND</del>	3-Error	[chars] [chars] [dec] [chars] [dec]	ISSU session registration or unregistration should not be done at interrupt level	ha-issu-infra	"Copy the error and send it to TAC. TAC team can contact ISSU infrastructure team to investigate the problem."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ISSUADIE_M_UNDERENDNT</del>	3-Error	Invalid [chars] under endpoint	Invalid item under endpoint	ha-issu-infra	"show issu client   include <client id>' \n\ncopy the error and send it to TAC. TAC team can contact ISSU client team to \n\check why invalid item is used if client problem reported. \n\Otherwise contact ISSU infrastructure team instead"
<del>ISSUADIE_M_UNDERENDNT</del>	3-Error	Invalid [chars] under endpoint	Invalid item under endpoint	ha-issu-infra	"show issu client   include <client id>' \n\ncopy the error and send it to TAC. TAC team can contact ISSU client team to \n\check why invalid item is used if client problem reported. \n\Otherwise contact ISSU infrastructure team instead"
<del>ISSUADIE_M_UNDERENDNT</del>	3-Error	Invalid [chars] under client [chars][dec] and entity[dec]	-	-	-
<del>ISSUADIE_M_UNDERENDNT</del>	3-Error	Invalid [chars] under client [chars][dec] and entity[dec]	-	-	-
<del>ISSUADIPARAM_UNDERSES</del>	3-Error	Invalid params [chars] under session[dec]	Invalid parameters under session	ha-issu-infra	"show issu session   include <session id>' \n\to find out which client's session is causing this error msg. \n\copy the error and send it to TAC. TAC team can contact ISSU team to \n\check why invalid params is used if problem reported. \n\Otherwise contact ISSU infrastructure team instead"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ISSUADPARAMUNDRSS</del>	3-Error	Invalid params [chars] under session[dec]	Invalid parameters under session	ha-issu-infra	"show issu session   include <session id>' \n\nto find out which client's session is causing this error msg. \n\ncopy the error and send it to TAC. TAC team can contact ISSU team to \n\ncheck why invalid params is used if problem reported. \n\Otherwise contact ISSU infrastructure team instead"
<del>ISSUADVERNONLOWCH</del>	3-Error	Invalid low[dec] and high[dec] value for msg[dec] under client	Invalid low and high value for group registration.	ha-issu-infra	"show issu client   include <client id>' and \n\ncopy the error and send it to TAC. TAC team can contact ISSU client team \n\nto check why invalid low or high version is used for group registration"
<del>ISSUADVERNONLOWCH</del>	3-Error	Invalid low[dec] and high[dec] value for msg[dec] under client	Invalid low and high value for group registration.	ha-issu-infra	"show issu client   include <client id>' and \n\ncopy the error and send it to TAC. TAC team can contact ISSU client team \n\nto check why invalid low or high version is used for group registration"
<del>ISSUCOMPCHKIAD</del>	3-Error	polaris-issu-infra	ISSU compatibility check failed for[chars]	"The image is not ISSU compatible"	"Please add another ISSU compatible image to start ISSU"
<del>ISSUINIOTCOMREE</del>	3-Error	[chars]	ISSU initialization has not been completed	ha-issu-infra	"Copy the error and send it to TAC. TAC team can contact ISSU infrastructure team to investigate the problem."



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>ISSUNINOTCOMHEE</del>	3-Error	[chars]	ISSU initialization has not been completed	ha-issu-infra	"Copy the error and send it to TAC. TAC team can contact ISSU infrastructure team to investigate the problem."
ISSU-3-JID	3-Error	Failed to get the local process JID with err [dec]	The system manager call to collect the job-id failed	ha-issu-infra	"Copy the error and send it to TAC. TAC team can contact ISSU infrastructure team to investigate the problem."
ISSU-3-JID	3-Error	Failed to get the local process JID with err [dec]	The system manager call to collect the job-id failed	ha-issu-infra	"Copy the error and send it to TAC. TAC team can contact ISSU infrastructure team to investigate the problem."
<del>ISSMSG_IITEMN_REG</del>	3-Error	[chars][dec] is not available [chars] under client [chars][dec] and entity[dec]	-	-	-
ISSMSG_IITEMN_REG	3-Error	[chars][dec] is not available [chars] under client [chars][dec] and entity[dec]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ISSU</del> MSGNEGRESULTCHUNK	3-Error	Failed to [chars] element [hec]	Failed to lock or free the message negotiation result chunk element	ha-issu-infra	"MSG negotiation result element is locked and unlocked during avl_walk_extended of msg_nego_result_cb_root. The failure to lock or free of the element indicates invalid element or corrupted chunk memory. Copy the error and send it to TAC. TAC team can contact ISSU infrastructure team to investigate the problem."
<del>ISSU</del> MSGNEGRESULTCHUNK	3-Error	Failed to [chars] element [hec]	Failed to lock or free the message negotiation result chunk element	ha-issu-infra	"MSG negotiation result element is locked and unlocked during avl_walk_extended of msg_nego_result_cb_root. The failure to lock or free of the element indicates invalid element or corrupted chunk memory. Copy the error and send it to TAC. TAC team can contact ISSU infrastructure team to investigate the problem."
<del>ISSU</del> ISSMSGNOTFOUND	3-Error	The intended session [dec] specified in received [chars] for client [chars][dec] is not found.	Cannot find the session with the session id\n\ specified in the received message.	ha-issu-infra	"show issu session   include <session id>' and \n\copy the error and send it to TAC. TAC team can contact ISSU client team \n\to make sure that receiving path uses correct session id."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ISSU-3-NO_SESSION_ID</del>	3-Error	The intended session [dec] specified in received [chars] for client [chars][dec] is not found.	Cannot find the session with the session id\n\n specified in the received message.	ha-issu-infra	"show issu session   include <session id>' and \n\ncopy the error and send it to TAC. TAC team can contact ISSU client team \n\nto make sure that receiving path uses correct session id."
ISSU-3-NO_PEER_UID	3-Error	No peer uid found at [chars]	No peer uid with this value found registered in ISSU Database	ha-issu-infra	"Copy the error and send it to TAC.\n\nTAC team can contact ISSU infrastructure team to check \n\nwhy no peer uid with this value foundi registered in ISSU Database"
ISSU-3-NO_PEER_UID	3-Error	No peer uid found at [chars]	No peer uid with this value found registered in ISSU Database	ha-issu-infra	"Copy the error and send it to TAC.\n\nTAC team can contact ISSU infrastructure team to check \n\nwhy no peer uid with this value foundi registered in ISSU Database"
ISSU-3-NO_UID	3-Error	No uid [dec] registered with ISSU at [chars]	No uid with this value found registered in ISSU Database	ha-issu-infra	"Copy the error and send it to TAC.\n\nTAC team can contact ISSU infrastructure team to check \n\nwhy no uid with this value found registered in ISSU Database"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ISSU-3-NO_UID	3-Error	No uid [dec] registered with ISSU at [chars]	No uid with this value found registered in ISSU Database	ha-issu-infra	"Copy the error and send it to TAC.\n\nTAC team can contact ISSU infrastructure team to check \n\nwhy no uid with this value found registered in ISSU Database"
<del>ISSU-3-NON_ISSU_ID</del>	3-Error	Non ISSU [chars]	Peer endpoint does not support ISSU	ha-issu-infra	"Copy the error and send it to TAC.\n\nTAC team can contact ISSU infrastructure team to check why non-issu ID is used"
<del>ISSU-3-NON_ISSU_ID</del>	3-Error	Non ISSU [chars]	Peer endpoint does not support ISSU	ha-issu-infra	"Copy the error and send it to TAC.\n\nTAC team can contact ISSU infrastructure team to check why non-issu ID is used"
<del>ISSU-3-NON_DUMMY_CAP_TYPE</del>	3-Error	Cap type[dec] is not dummy one.	Cap type is not dummy one.	ha-issu-infra	"show issu cap type   include <cap type>' and \n\ncopy the error and send it to TAC. TAC team can contact ISSU client team \n\nto check why dummy cap type is not used"
<del>ISSU-3-NON_DUMMY_CAP_TYPE</del>	3-Error	Cap type[dec] is not dummy one.	Cap type is not dummy one.	ha-issu-infra	"show issu cap type   include <cap type>' and \n\ncopy the error and send it to TAC. TAC team can contact ISSU client team \n\nto check why dummy cap type is not used"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ISSUCINDUNDRSSN</del>	3-Error	Can not find [chars] under [chars] session[dec].	Can not find function under session.	ha-issu-infra	"show issu session   include <session id>' and \n\copy the error and send it to TAC. TAC team can contact ISSU client team \n\to check why control block under session can not be found"
<del>ISSUCINDUNDRSSN</del>	3-Error	Can not find [chars] under [chars] session[dec].	Can not find function under session.	ha-issu-infra	"show issu session   include <session id>' and \n\copy the error and send it to TAC. TAC team can contact ISSU client team \n\to check why control block under session can not be found"
<del>ISSUBNOT_FND_MEG_SES</del>	3-Error	Can not find message session[dec] [chars].	-	-	-
<del>ISSUBNOT_FND_MEG_SES</del>	3-Error	Can not find message session[dec] [chars].	-	-	-
<del>ISSUCINDUNDRENDNT</del>	3-Error	Can not find [chars]0x[hec] control block under endpoint.	-	-	-
<del>ISSUCINDUNDRENDNT</del>	3-Error	Can not find [chars]0x[hec] control block under endpoint.	-	-	-
<del>ISSUCINDUNDRENDNT</del>	3-Error	Can not find [chars][dec] control block under client [chars][dec] and	Can not find control block under client and entity.	ha-issu-infra	"show issu client   include <client id>' and \n\copy the error and send it to TAC. TAC team can contact ISSU client team \n\to check why control block can not be found"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ISSU</del> NOTINDUNDERENTTY	3-Error	Can not find [chars][dec] control block under client [chars][dec] and	Can not find control block under client and entity.	ha-issu-infra	"show issu client   include <client id>' and \n\copy the error and send it to TAC. TAC team can contact ISSU client team \n\to check why control block can not be found"
<del>ISSU</del> NOTINDUNDERSESSION	3-Error	Can not find [chars][dec] under [chars] session[dec].	Can not find item under session.	ha-issu-infra	"show issu session   include <session id>' and \n\copy the error and send it to TAC. TAC team can contact ISSU client team \n\to check why control block under session can not be found"
<del>ISSU</del> NOTINDUNDERSESSION	3-Error	Can not find [chars][dec] under [chars] session[dec].	Can not find item under session.	ha-issu-infra	"show issu session   include <session id>' and \n\copy the error and send it to TAC. TAC team can contact ISSU client team \n\to check why control block under session can not be found"
<del>ISSU</del> NOTINDUNDERENDPOINT	3-Error	[chars][dec] is not registered under endpoint.	Item is not registered under endpoint.	ha-issu-infra	"show issu client   include <client id>' \n\copy the error and send it to TAC. TAC team can contact ISSU client team to \n\check why reported item is not registered if client problem reported. \n\Otherwise contact ISSU infrastructure team instead"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ISSUORGNDRNENT</del>	3-Error	[chars][dec] is not registered under endpoint.	Item is not registered under endpoint.	ha-issu-infra	"show issu client   include <client id>' \n\ncopy the error and send it to TAC. TAC team can contact ISSU client team to \n\check why reported item is not registered if client problem reported. \n\Otherwise contact ISSU infrastructure team instead"
<del>ISSUORGNDRNENT</del>	3-Error	[chars][dec] is not registered under client [chars][dec] and entity[dec]	-	-	-
<del>ISSUORGNDRNENT</del>	3-Error	[chars][dec] is not registered under client [chars][dec] and entity[dec]	-	-	-
<del>ISSUORGNDRNENT</del>	3-Error	[chars] callback is NULL for registration.	Callback is NULL for registration	ha-issu-infra	"show issu client   include <client id>' \n\ncopy the error and send it to TAC. TAC team can contact ISSU client team to \n\check why reported callback is NULL if client problem reported. \n\Otherwise contact ISSU infrastructure team instead"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ISSULCALLBACKINFRA</del>	3-Error	[chars] callback is NULL for registration.	Callback is NULL for registration	ha-issu-infra	"show issu client   include <client id>' \n\ncopy the error and send it to TAC. TAC team can contact ISSU client team to \n\ncheck why reported callback is NULL if client problem reported. \n\Otherwise contact ISSU infrastructure team instead"
<del>ISSULCALLBACKINFRA</del>	3-Error	[chars] callback is NULL for msg session registration under client [chars][dec] and entity[dec]	Callback is NULL for msg session registration.	ha-issu-infra	"show issu client   include <client id>' and \n\ncopy the error and send it to TAC. TAC team can contact ISSU client team \n\to check why reported callback is NULL"
<del>ISSULCALLBACKINFRA</del>	3-Error	[chars] callback is NULL for msg session registration under client [chars][dec] and entity[dec]	Callback is NULL for msg session registration.	ha-issu-infra	"show issu client   include <client id>' and \n\ncopy the error and send it to TAC. TAC team can contact ISSU client team \n\to check why reported callback is NULL"
<del>ISSULCALLBACKINFRA</del>	3-Error	Can not register null [chars] callback in [chars] session[dec].	-	-	-
<del>ISSULCALLBACKINFRA</del>	3-Error	Can not register null [chars] callback in [chars] session[dec].	-	-	-



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IS_PEER_MCE_INCOMPATIBLE</del>	3-Error	Peer image [chars] version [chars] on peer uid [dec] is incompatible	Peer is incompatible	ha-issu-infra	"A runtime exception occurred in the previous run.\n\nClear the condition according to the client eg. config-sync and reload \n\nthe Standby"
<del>IS_PEER_MCE_INCOMPATIBLE</del>	3-Error	Peer image [chars] version [chars] on peer uid [dec] is incompatible	Peer is incompatible	ha-issu-infra	"A runtime exception occurred in the previous run.\n\nClear the condition according to the client eg. config-sync and reload \n\nthe Standby"
<del>IS_PEER_MCE_INCOMPATIBLE</del>	3-Error	Peer image [chars] version [chars] on peer uid [dec] is not in the	Peer is incompatible	ha-issu-infra	"A runtime exception occurred in the previous run.\n\nClear the condition according to the client eg. config-sync and reload \n\nthe Standby"
<del>IS_PEER_MCE_INCOMPATIBLE</del>	3-Error	Peer image [chars] version [chars] on peer uid [dec] is not in the	Peer is incompatible	ha-issu-infra	"A runtime exception occurred in the previous run.\n\nClear the condition according to the client eg. config-sync and reload \n\nthe Standby"
<del>IS_PEER_MCE_INCOMPATIBLE</del>	3-Error	Peer image [chars] version [chars] on peer uid [dec] being removed	Peer is incompatible	ha-issu-infra	"A runtime exception occurred in the previous run.\n\nClear the condition according to the client eg. config-sync and reload \n\nthe Standby"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ISSU3PEER_INCOMP_ERR</del>	3-Error	Peer image [chars] version [chars] on peer uid [dec] being removed	Peer is incompatible	ha-issu-infra	"A runtime exception occurred in the previous run.\n\nClear the condition according to the client eg. config-sync and reload \n\nthe Standby"
ISSU3PEER_INCOMP_SET	3-Error	Peer incompatibility set for image [chars] version [chars] on peer	Peer is incompatible	ha-issu-infra	"A runtime exception occurred in the previous run.\n\nClear the condition according to the client eg. config-sync and reload \n\nthe Standby"
ISSU3PEER_INCOMP_SET	3-Error	Peer incompatibility set for image [chars] version [chars] on peer	Peer is incompatible	ha-issu-infra	"A runtime exception occurred in the previous run.\n\nClear the condition according to the client eg. config-sync and reload \n\nthe Standby"
<del>ISSU3PEER_UDCBS_NULL</del>	3-Error	Peer uid control block is NULL	Peer is incompatible	ha-issu-infra	"A runtime exception occurred in the previous run.\n\nClear the condition according to the client eg. config-sync and reload \n\nthe Standby"
ISSU3PEER_UDCBS_NULL	3-Error	Peer uid control block is NULL	Peer is incompatible	ha-issu-infra	"A runtime exception occurred in the previous run.\n\nClear the condition according to the client eg. config-sync and reload \n\nthe Standby"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ISSUBPROTOCLIENT_UNREG	3-Error	Proto Client entity unreg for [chars] has failed	Protocol client has failed to unregister its entity with ISSU	ha-issu-infra	"Copy the error and send it to TAC.\nTAC team can contact ISSU infrastructure team to check \n\nwhy protocol client has failed to unregister its entity with ISSU"
ISSUBPROTOCLIENT_UNREG	3-Error	Proto Client entity unreg for [chars] has failed	Protocol client has failed to unregister its entity with ISSU	ha-issu-infra	"Copy the error and send it to TAC.\nTAC team can contact ISSU infrastructure team to check \n\nwhy protocol client has failed to unregister its entity with ISSU"
ISSUBPROTOCLIENT_REG	3-Error	Proto Client registration for [chars] has failed	Protocol client has failed to register with ISSU	ha-issu-infra	"Copy the error and send it to TAC.\nTAC team can contact ISSU infrastructure team to check \n\nwhy protocol client has failed to register with ISSU"
ISSUBPROTOCLIENT_REG	3-Error	Proto Client registration for [chars] has failed	Protocol client has failed to register with ISSU	ha-issu-infra	"Copy the error and send it to TAC.\nTAC team can contact ISSU infrastructure team to check \n\nwhy protocol client has failed to register with ISSU"
ISSU-3-REF_TREE	3-Error	[chars] reference tree [chars] failed	The AVL based ISSU reference tree operation failed	ha-issu-infra	"Copy the error and send it to TAC. TAC team can contact ISSU infrastructure team to investigate the problem."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ISSU-3-REF_TREE	3-Error	[chars] reference tree [chars] failed	The AVL based ISSU reference tree operation failed	ha-issu-infra	"Copy the error and send it to TAC. TAC team can contact ISSU infrastructure team to investigate the problem."
ISSU3SESSION_ID_ERROR	3-Error	Failed to [chars] session id [dec] for [chars]	Session ID related operation failed	ha-issu-infra	"Copy the error and send it to TAC. TAC team can contact ISSU infrastructure team to investigate the problem."
ISSU3SESSION_ID_ERROR	3-Error	Failed to [chars] session id [dec] for [chars]	Session ID related operation failed	ha-issu-infra	"Copy the error and send it to TAC. TAC team can contact ISSU infrastructure team to investigate the problem."
ISSU3SESSION_RENEGOTIATE	3-Error	Client Attempting to renegotiate on session [dec]	Client Attempting to renegotiate session	ha-issu-infra	"A Client is attempting to renegotiate on session\n\nwithout unregistering it and do the negotiation over again. This is not allowed\n\nand is considered an error condition. The client should unregister the msg\n\nsession first and then re-register and attempt the negotiation."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ISS</del> SESSION_RENEGOTIATE	3-Error	Client Attempting to renegotiate on session [dec]	Client Attempting to renegotiate session	ha-issu-infra	"A Client is attempting to renegotiate on session\n\nwithout unregistering it and do the negotiation over again. This is not allowed\n\nand is considered an error condition. The client should unregister the msg\n\nsession first and then re-register and attempt the negotiation."
<del>ISS</del> SET_UNKNOWN_UID	3-Error	Unknown unique_id is set.	Platform team should provide distinctive identifier for endpoint.	ha-issu-infra	"Copy the error and send it to TAC. \n\nTAC team can contact platform team to provide distinctive identifier \n\nfor endpoint"
<del>ISS</del> SET_UNKNOWN_UID	3-Error	Unknown unique_id is set.	Platform team should provide distinctive identifier for endpoint.	ha-issu-infra	"Copy the error and send it to TAC. \n\nTAC team can contact platform team to provide distinctive identifier \n\nfor endpoint"
ISSU-3-SYNC_ERR	3-Error	iosxe-binos-utils	Problem with sync of state -[chars]	"The software state between two FRUs or switches is not properly synchronized as a result of a boot error."	"This message may appear during certain events
<del>ISS</del> TRANSPORTER_UID_IS_NULL	3-Error	Transport ERP uid control block is NULL	Peer is incompatible	ha-issu-infra	"A runtime exception occurred in the previous run.\n\nClear the condition according to the client eg. config-sync and reload \n\nthe Standby"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ISS</del> TRANSPORT_UID_BLOCK_NULL	3-Error	Transport ERP uid control block is NULL	Peer is incompatible	ha-issu-infra	"A runtime exception occurred in the previous run.\n\nClear the condition according to the client eg. config-sync and reload \n\nthe Standby"
<del>ISS</del> UCODE_INCOMPAT	3-Error	iosxe-binos-utils	Found mismatch for ucode feature -[chars]	"During boottime microcode feature version check	-
<del>ISS</del> UNKNOWN_DOMAIN	3-Error	Unknown domain id [dec] under client [chars][dec] entity [dec]	-	-	-
<del>ISS</del> UNKNOWN_DOMAIN	3-Error	Unknown domain id [dec] under client [chars][dec] entity [dec]	-	-	-
<del>ISS</del> UNKNOWN_ENTITY_ID	3-Error	Unknown entity id under client [chars][dec]	Unknown entity id under client	ha-issu-infra	"show issu client   include <client id>' and \n\ncopy the error and send it to TAC. TAC team can contact ISSU client team \n\nto check why unknown entity id is used during registration"
<del>ISS</del> UNKNOWN_ENTITY_ID	3-Error	Unknown entity id under client [chars][dec]	Unknown entity id under client	ha-issu-infra	"show issu client   include <client id>' and \n\ncopy the error and send it to TAC. TAC team can contact ISSU client team \n\nto check why unknown entity id is used during registration"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>UNKNOWNIDERR</del>	3-Error	Can not use unknown [chars].	Can not use unknown id.	ha-issu-infra	"Copy the error and send it to TAC.\nTAC team can contact ISSU infrastructure team to check why unknown ID is used"
<del>UNKNOWNIDERR</del>	3-Error	Can not use unknown [chars].	Can not use unknown id.	ha-issu-infra	"Copy the error and send it to TAC.\nTAC team can contact ISSU infrastructure team to check why unknown ID is used"
<del>UNKNOWNIDERR</del>	3-Error	Unknown [chars] under client [chars][dec] and entity[dec]	-	-	-
<del>UNKNOWNIDERR</del>	3-Error	Unknown [chars] under client [chars][dec] and entity[dec]	-	-	-
<del>SHOWNOCTABLE</del>	3-Error	Version low[dec] and high[dec] value for msg[dec] does not	Version low and high value for msg does not match table size.	ha-issu-infra	"show issu client   include <client id>' and \n\ncopy the error and send it to TAC. TAC team can contact ISSU client team \n\nto check why low/high version is not machth table size for msg registration"
<del>SHOWNOCTABLE</del>	3-Error	Version low[dec] and high[dec] value for msg[dec] does not	Version low and high value for msg does not match table size.	ha-issu-infra	"show issu client   include <client id>' and \n\ncopy the error and send it to TAC. TAC team can contact ISSU client team \n\nto check why low/high version is not machth table size for msg registration"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ISSU</del> <del>ERR</del> <del>ON</del> <del>OUT</del> <del>OF</del> <del>ORDER</del>	3-Error	Msg version[dec][dec] is out of order for msg[dec] under client	Msg version is out of order for group registration.	ha-issu-infra	"show issu client   include <client id>' and \n\copy the error and send it to TAC. TAC team can contact ISSU client team \n\to check why version is out of order for msg registration"
<del>ISSU</del> <del>ERR</del> <del>ON</del> <del>OUT</del> <del>OF</del> <del>ORDER</del>	3-Error	Msg version[dec][dec] is out of order for msg[dec] under client	Msg version is out of order for group registration.	ha-issu-infra	"show issu client   include <client id>' and \n\copy the error and send it to TAC. TAC team can contact ISSU client team \n\to check why version is out of order for msg registration"
<del>ISSU</del> <del>ERR</del> <del>ON</del> <del>OUT</del> <del>OF</del> <del>RANGE</del>	3-Error	Msg version[dec][dec] is out of range for msg[dec] under client	Msg version is out of range for group registration.	ha-issu-infra	"show issu client   include <client id>' and \n\copy the error and send it to TAC. TAC team can contact ISSU client team \n\to check why version is out of range for group registration"
<del>ISSU</del> <del>ERR</del> <del>ON</del> <del>OUT</del> <del>OF</del> <del>RANGE</del>	3-Error	Msg version[dec][dec] is out of range for msg[dec] under client	Msg version is out of range for group registration.	ha-issu-infra	"show issu client   include <client id>' and \n\copy the error and send it to TAC. TAC team can contact ISSU client team \n\to check why version is out of range for group registration"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ISSU3XFORM_CALLBACK	3-Error	No [chars] callback specified for client [chars][dec] msg [dec] from version [dec] to version [dec] in session [dec].	Client didn't specify transformation function	ha-issu-infra	"Copy the error and send it to TAC. TAC team\n\n can contact ISSU client team to check why reported\n\n callback is not specified"
ISSU3XFORM_CALLBACK	3-Error	No [chars] callback specified for client [chars][dec] msg [dec] from version [dec] to version [dec] in session [dec].	Client didn't specify transformation function	ha-issu-infra	"Copy the error and send it to TAC. TAC team\n\n can contact ISSU client team to check why reported\n\n callback is not specified"
ISSU4-FSM_INCOMP	4-Warning	Version of local ISSU client [chars][dec] in session [dec] is	The protocol versions of the local and remote clients are\n\n incompatible. These clients can not communicate with each\n\n other.	ha-issu-infra	"Use 'show version' and 'show issu clients' to help\n\n verify that the software images are incompatible. Upgrade\n\n the software images on each unit to versions that are \n\n compatible. " LOG_SID_RECUR_ACTION
ISSU4-FSM_INCOMP	4-Warning	Version of local ISSU client [chars][dec] in session [dec] is	The protocol versions of the local and remote clients are\n\n incompatible. These clients can not communicate with each\n\n other.	ha-issu-infra	"Use 'show version' and 'show issu clients' to help\n\n verify that the software images are incompatible. Upgrade\n\n the software images on each unit to versions that are \n\n compatible. " LOG_SID_RECUR_ACTION
ISSU4-MSG_INCOMP	4-Warning	Message[dec] is incompatible under msg session[dec].	-	-	-
ISSU4-MSG_INCOMP	4-Warning	Message[dec] is incompatible under msg session[dec].	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ISSU</del> ISSU_NEGOTIATION_FAILED	4-Warning	Negotiation is not finished for client [chars][dec] msg session[dec].	-	-	-
<del>ISSU</del> ISSU_NEGOTIATION_FAILED	4-Warning	Negotiation is not finished for client [chars][dec] msg session[dec].	-	-	-
<del>ISSU</del> ISSU_AUTOROLLBACK	5-Notice	iosxe-binos-utils	ISSU rollback timer expired: initiating rollback	"An ISSU upgrade has been rolled back because the rollback timer has expired."	"No user action is needed. If you want to commit the ISSU upgrade
<del>ISSU</del> ISSU_STATE_INVALID	5-Notice	iosxe-binos-utils	ISSU stored state found invalid and cleaned up:[chars]	"The RP has corrected a failed ISSU install state that was detected at bootup."	"No user action is necessary. This is an informative message indicating that the failed ISSU state has been corrected."
ISYNC_CHKPT-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
ISYNC_CHKPT-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
ISYNC-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
ISYNC-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>IRMS</del> IRMS_ERROR_CONFIGURATION	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>IRMS</del> IRMS_ERROR_CONFIGURATION	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>IRMS</del> IRMS_INVALID_MAX_PROMPTS	3-Error	[chars]: This version of IOS does not support prompt payout for IVR applications.\n	This error will be displayed if an IVR application is used on a gateway that does\n\n not support IVR prompt payout.	voice-ivr	"Ensure that this platform and IOS version support the IVR feature set."
<del>IRMS</del> IRMS_INVALID_MAX_PROMPTS	3-Error	[chars]: This version of IOS does not support prompt payout for IVR applications.\n	This error will be displayed if an IVR application is used on a gateway that does\n\n not support IVR prompt payout.	voice-ivr	"Ensure that this platform and IOS version support the IVR feature set."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MR_MSB3-NADPROMPTSE</del>	3-Error	[chars]: Bad size for the prompt file [chars]. Read size [dec]. Expected size [dec].\n	System does not have enough CPU capacity to spawn a new instance of \n\ IVR application	voice-ivr	"Ensure that the call setup rate is within the supported capacity of\n\ this gateway."
<del>MR_MSB3-NADPROMPTSE</del>	3-Error	[chars]: Bad size for the prompt file [chars]. Read size [dec]. Expected size [dec].\n	System does not have enough CPU capacity to spawn a new instance of \n\ IVR application	voice-ivr	"Ensure that the call setup rate is within the supported capacity of\n\ this gateway."
<del>MR_MSB3-NOIDMEMORY</del>	3-Error	[chars]: Failed to create pool_group [hec] buffer_pool [hec] <del>platform_mc_buf_pool_count</del> [dec]\n	No IO memory to create IVR private pak pool	voice-ivr	"Check to see if there is enough IO memory."
<del>MR_MSB3-NOIDMEMORY</del>	3-Error	[chars]: Failed to create pool_group [hec] buffer_pool [hec] <del>platform_mc_buf_pool_count</del> [dec]\n	No IO memory to create IVR private pak pool	voice-ivr	"Check to see if there is enough IO memory."
IVR_MSB3-NOPROMPT	3-Error	Could not create IVR prompt\n [chars]\n errno=[dec]=[chars]	Could not read in the IVR prompt	voice-ivr	"Check that prompt exists on the server and is readable."
IVR_MSB3-NOPROMPT	3-Error	Could not create IVR prompt\n [chars]\n errno=[dec]=[chars]	Could not read in the IVR prompt	voice-ivr	"Check that prompt exists on the server and is readable."
<del>MR_APPARALLEL_NADLIST</del>	1-Alert	Call terminated. Huntgroup '[dec]' does not contain enough valid SIP end-points to proceed with a parallel call. \n	The call to a parallel hunt-group was denied because less than \n\ two valid SIP end-points were found in the huntgroup list.	voice-ivr	"Check the hunt-group list's numbers. Remove any incorrect numbers \n\ or numbers that have a non-SIP dial-peer. If the numbers are from\n\ SIP phones then verify whether the phones have registered to the\n\ system yet."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MR-APP-IVR-NADIS</del>	1-Alert	Call terminated. Huntgroup '[dec]' does not contain enough valid SIP end-points to proceed with a parallel call. \n	The call to a parallel hunt-group was denied because less than \n\ two valid SIP end-points were found in the huntgroup list.	voice-ivr	"Check the hunt-group list's numbers. Remove any incorrect numbers \n\ or numbers that have a non-SIP dial-peer. If the numbers are from\n\ SIP phones then verify whether the phones have registered to the\n\ system yet."
IVR-2-APP_CRIT	2-Critical	[chars]\n	A critical message was reported by an IVR Tcl application.	voice-scripts	"The remedy of the problem is application specific."
IVR-2-APP_CRIT	2-Critical	[chars]\n	A critical message was reported by an IVR Tcl application.	voice-scripts	"The remedy of the problem is application specific."
IVR-2-APP_CRIT_R	2-Critical	[chars]\n	A critical message was reported by an IVR Tcl application.	voice-scripts	"The remedy of the problem is application specific."
IVR-2-APP_CRIT_R	2-Critical	[chars]\n	A critical message was reported by an IVR Tcl application.	voice-scripts	"The remedy of the problem is application specific."
<del>MR-APP-IVR-NADIS</del>	2-Critical	Service dsapp contains an invalid dial peer tag: [chars]	An invalid dial peer tag has been configured for the dsapp service. The tag either is not in the range from 1 to 2147483647 or it belongs to a non-existent dial-peer.	voice-ivr	"Enter the <CmdBold>show running-config</CmdBold> " "or the <CmdBold>show dial-peer voice</CmdBold> " "command to find a valid dial peer tag. " "Reconfigure the dial peer with a valid tag or " "remove the dial peer tag completely to allow the " "system to match from the system dial peers."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
INVALID_DSAPP_PEER	2-Critical	Service dsapp contains an invalid dial peer tag: [chars]	An invalid dial peer tag has been configured for the dsapp service. The tag either is not in the range from 1 to 2147483647 or it belongs to a non-existent dial-peer.	voice-ivr	"Enter the <CmdBold>show running-config</CmdBold> " "or the <CmdBold>show dial-peer voice</NoCmdBold> " "command to find a valid dial peer tag. " "Reconfigure the dial peer with a valid tag or " "remove the dial peer tag completely to allow the " "system to match from the system dial peers."
IVR3-ABNORMAL_EXIT	3-Error	TCL IVR Process for this call with CallID [dec] exits bad event: [chars] received\n	The TCL IVR call process exited for the specified call. The call \n\ process did not clear a prior call properly so other events could \n\ not be handled. Only the specified call is affected	voice-ivr	"If problem persists for subsequent calls copy the message exactly \n\ as it appears on the console or in the system log contact your \n\ Cisco technical support representative and provide the representative \n\ with the gathered information."
IVR3-ABNORMAL_EXIT	3-Error	TCL IVR Process for this call with CallID [dec] exits bad event: [chars] received\n	The TCL IVR call process exited for the specified call. The call \n\ process did not clear a prior call properly so other events could \n\ not be handled. Only the specified call is affected	voice-ivr	"If problem persists for subsequent calls copy the message exactly \n\ as it appears on the console or in the system log contact your \n\ Cisco technical support representative and provide the representative \n\ with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IVR-3-APP_ERR	3-Error	[chars]\n	An error message was reported by an IVR Tcl application.	voice-scripts	"The remedy of the problem is application specific."
IVR-3-APP_ERR	3-Error	[chars]\n	An error message was reported by an IVR Tcl application.	voice-scripts	"The remedy of the problem is application specific."
IVR-3-APP_ERR_R	3-Error	[chars]\n	An error message was reported by an IVR Tcl application.	voice-scripts	"The remedy of the problem is application specific."
IVR-3-APP_ERR_R	3-Error	[chars]\n	An error message was reported by an IVR Tcl application.	voice-scripts	"The remedy of the problem is application specific."
MR3BAD_IVR_VERSION	3-Error	Script requires version [dec].[dec] image supports [dec].[dec]\n	IVR Script requires a higher IVR infrastructure version	voice-ivr	"Upgrade IOS or use a different script"
MR3BAD_IVR_VERSION	3-Error	Script requires version [dec].[dec] image supports [dec].[dec]\n	IVR Script requires a higher IVR infrastructure version	voice-ivr	"Upgrade IOS or use a different script"
IVR-3-BADSCRIPT	3-Error	Could not parse malformed IVR script: [chars]\n	Could not parse malformed IVR script	voice-ivr	"Check the script and fix the syntax error."
IVR-3-BADSCRIPT	3-Error	Could not parse malformed IVR script: [chars]\n	Could not parse malformed IVR script	voice-ivr	"Check the script and fix the syntax error."
IVR-3-LOW_MEMORY	3-Error	IVR: Sytem running on low memory. Free memory: [node]bytes. Call is rejected.\n	System does not have enough CPU resources available to accept\n a new call	voice-ivr	"Ensure that the call setup rate is within the supported capacity of\n this gateway."
IVR-3-LOW_MEMORY	3-Error	IVR: Sytem running on low memory. Free memory: [node]bytes. Call is rejected.\n	System does not have enough CPU resources available to accept\n a new call	voice-ivr	"Ensure that the call setup rate is within the supported capacity of\n this gateway."
IVR-3-NOSCRIPT	3-Error	Could not load IVR script\n [chars]\n errno=[dec]=[chars]	Could not read in the IVR script	voice-ivr	"Check that script exists on the server and is readable."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
IVR-3-NOSCRIPT	3-Error	Could not load IVR script\n [chars]\n errno=[dec]=[chars]	Could not read in the IVR script	voice-ivr	"Check that script exists on the server and is readable."
IVR-4-APP_WARN	4-Warning	[chars]\n	A warning message was reported by an IVR Tcl application.	voice-scripts	"The remedy of the problem is application specific."
IVR-4-APP_WARN	4-Warning	[chars]\n	A warning message was reported by an IVR Tcl application.	voice-scripts	"The remedy of the problem is application specific."
IVR-4-APP_WARN_R	4-Warning	[chars]\n	A warning message was reported by an IVR Tcl application.	voice-scripts	"The remedy of the problem is application specific."
IVR-4-APP_WARN_R	4-Warning	[chars]\n	A warning message was reported by an IVR Tcl application.	voice-scripts	"The remedy of the problem is application specific."
<del>MRNADDSAPPENDIME</del>	4-Warning	Blind-xfer-wait-time [dec] is invalid. Resetting to [dec] seconds.	The configured value for blind-xfer-wait-time was outside of the acceptable range 0-10 and has been reset to	voice-ivr	"If the new value for blind-xfer-wait-time is " "unacceptable you can change it from the command " " line interface."
<del>MRNADDSAPPENDIME</del>	4-Warning	Blind-xfer-wait-time [dec] is invalid. Resetting to [dec] seconds.	The configured value for blind-xfer-wait-time was outside of the acceptable range 0-10 and has been reset to	voice-ivr	"If the new value for blind-xfer-wait-time is " "unacceptable you can change it from the command " " line interface."
<del>MRNADDSAPTCGTIME</del>	4-Warning	Disc-toggle-time [dec] is invalid. Resetting to [dec] seconds.	The configured value for disc-toggle-time was outside of the acceptable range 10-30 and has been reset	voice-ivr	"If the new value for disc-toggle-time " "is unacceptable you can change it from the " "command line interface."
<del>MRNADDSAPTCGTIME</del>	4-Warning	Disc-toggle-time [dec] is invalid. Resetting to [dec] seconds.	The configured value for disc-toggle-time was outside of the acceptable range 10-30 and has been reset	voice-ivr	"If the new value for disc-toggle-time " "is unacceptable you can change it from the " "command line interface."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>MSAP</del> CALLPREMPT	5-Notice	CallID [dec] is being preempted\n	A notification message was reported by an IVR application on detecting callID [dec] being preempted.	voice-ivr	"This is not a problem but notifying syslog about preempted call."
<del>MSAP</del> CALLPREMPT	5-Notice	CallID [dec] is being preempted\n	A notification message was reported by an IVR application on detecting callID [dec] being preempted.	voice-ivr	"This is not a problem but notifying syslog about preempted call."
<del>MSAP</del> CDRCLDHEICD	5-Notice	[chars]\n	A notification message was reported by an IVR application on detecting long duration call.	voice-scripts	"This is not a problem but notifying syslog about long duration call."
<del>MSAP</del> CDRCLDHEICD	5-Notice	[chars]\n	A notification message was reported by an IVR application on detecting long duration call.	voice-scripts	"This is not a problem but notifying syslog about long duration call."
<del>MSAP</del> MDNACTHEICD	5-Notice	[chars]\n	A notification message was reported by an IVR application on detecting media inactivity.	voice-scripts	"This is not a problem but notifying syslog about media inactivity."
<del>MSAP</del> MDNACTHEICD	5-Notice	[chars]\n	A notification message was reported by an IVR application on detecting media inactivity.	voice-scripts	"This is not a problem but notifying syslog about media inactivity."
<del>MSAP</del> MDRACTHEICD	5-Notice	[chars]\n	A notification message was reported by an IVR application on detecting media activity.	voice-scripts	"This is not a problem but notifying syslog about media activity."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MSAP-MEDIA-CTDETECT</del>	5-Notice	[chars]\n	A notification message was reported by an IVR application on detecting media activity.	voice-scripts	"This is not a problem but notifying syslog about media activity."
IVR-6-APP_INFO	6-Information	[chars]\n	An informational message was reported by an IVR Tcl application.	voice-scripts	"The remedy of the problem is application specific."
IVR-6-APP_INFO	6-Information	[chars]\n	An informational message was reported by an IVR Tcl application.	voice-scripts	"The remedy of the problem is application specific."
IVR-6-APP_INFO_R	6-Information	[chars]\n	An informational message was reported by an IVR Tcl application.	voice-scripts	"The remedy of the problem is application specific."
IVR-6-APP_INFO_R	6-Information	[chars]\n	An informational message was reported by an IVR Tcl application.	voice-scripts	"The remedy of the problem is application specific."
IVR-6-APP_PARALLEL	6-Information	Cannot use dial-peer [dec] parallel hunt-group for a rotary or	The dial-peer for parallel hunt-groups must have a unique pilot number.	voice-ivr	"Create a unique dial-peer destination-number for the parallel \n\ hunt-group."
IVR-6-APP_PARALLEL	6-Information	Cannot use dial-peer [dec] parallel hunt-group for a rotary or	The dial-peer for parallel hunt-groups must have a unique pilot number.	voice-ivr	"Create a unique dial-peer destination-number for the parallel \n\ hunt-group."
IVR-6-APP_SEQ_HUNT	6-Information	Pilot hunt-group '[chars]' found in hunt-group list. Nested hunt-groups are allowed only as the hunt-group's final number.\n	Nested sequential hunt-group detected in dial-peer rotary. \n\ Nested hunt-groups is unsupported.	voice-ivr	"Do not create hunt-group lists that contain hunt-group pilot numbers."



Fault-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IXP_MAP-3-ATOM	3-Error	[chars] error detected: [chars] [chars] 0x[hec] 0x[hec]	A software programming error for the ATOM ESF Network Processor Client\n Mapper was detected.	c7600-sip-400-clnt	"This software programming error is not considered fatal to the\n operation of the ESF Network Processors. The software is designed to\n detect and report the error condition. If the error persists reset\n the affected device.\n\n Record the output from the following commands:\n\n <Bulleted list>\n\n Provide this information to your technical support\n representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IXP_MAP-3-CEM	3-Error	[chars] error detected: [chars] [chars] 0x[hec] 0x[hec]	A software programming error for the CEM ESF Network Processor\n Client Mapper was detected.	c7600-sip-400-clnt	"This software programming error is not considered fatal to the\n operation of the ESF Network Processors. The software is designed to\n detect and report the error condition. If the error persists reset\n the affected device.\n\n Record the output from the following commands:\n\n <del>Bulleted</del> <del>par</del> <del>Bold</del> show tech <del>NoBold</del>\n\n <del>Bulleted</del> <del>par</del> <del>Bold</del> show log <del>NoBold</del>\n\n\n <del>Body</del><del>par</del> Provide this information to your technical support\n representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IXP_MAP3-CEMOUDP	3-Error	[chars] error detected: [chars] [chars] 0x[hec] 0x[hec]	A software programming error for the CEMOUDP ESF Network Processor Client\n Mapper was detected.	c7600-sip-400	"This software programming error is not considered fatal to the\n operation of the ESF Network Processors. The software is designed to\n detect and report the error condition. If the error persists reset\n the affected device.\n\n Record the output from the following commands:\n\n <Bulleted> show tech </Bulleted>\n\n <Bulleted> show log </Bulleted>\n\n <Body> Provide this information to your technical support\n representative."
IXP_MAP3-DROP_BLOCK	3-Error	[chars] error detected - 0x[hec] 0x[hec] [dec] [dec]	Error detected processing ESF Network Processor drop block\n allocations.	c7600-sip-400-clnt	"This is a software programming error. Record the\n Output from the following show commands:\n\n <Bulleted> show tech </Bulleted>\n\n <Bulleted> show log </Bulleted>\n\n <Body> Provide this information to your technical support\n representative."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IXP_MAP-3-HQF	3-Error	[chars] error detected: [chars] [chars] 0x[hec] 0x[hec]	A software programming error for the HQF ESF Network Processor Client\n Mapper was detected.	c7600-sip-400-clnt	"This software programming error is not considered fatal to the\n operation of the ESF Network Processors. The software is designed to\n detect and report the error condition. If the error persists reset\n the affected device. \n\n Record the output from the following commands:\n\n<Bulleted>\n</Bulleted>\n\n<Bulleted>\n</Bulleted>\n\n<Body>\n\n Provide this information to your technical support\n representative."
IXP_MAP-3-INITFAIL	3-Error	Initialization Failed - [chars]: [chars] [chars]	Memory needed to service one or more Network Processors\n could not be initialized.	c7600-sip-400-clnt	"Try to reload the IOS image on the affected\n card or platform.\n If the error persists record the output\n from the following commands:\n\n<Bulleted>\n</Bulleted>\n\n<Bulleted>\n</Bulleted>\n\n<Body>\n\n Provide this information to your technical support\n representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IXP_MAP-3-INTF	3-Error	[chars] error detected: [chars] [chars] 0x[hec] 0x[hec]	A software programming error for the Interface ESF Network Processor\n Client Mapper was detected.	c7600-sip-400-clnt	"This software programming error is not considered fatal to the\n operation of the ESF Network Processors. The software is designed to\n detect and report the error condition. If the error persists reset\n the affected device. \n\n Record the output from the following commands:\n\n<Bulleted list>\n\nProvide this information to your technical support\n representative."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IXP_MAP-3-IPSESS	3-Error	[chars] error detected: [chars] [chars] 0x[hec] 0x[hec]	A configuration error for the IP Sessions ESF Network Processor Client\n Mapper was detected.	c7600-sip-400-clnt	"This configuration error is not considered fatal to the\n operation of the ESF Network Processors. The software is designed to\n detect and report the error condition. If the error persist reset\n the affected device.\n\n Record the output from the following commands:\n\n <Bullet><par><Bold>show tech <NoBold>\n <Bullet><par><Bold>show log <NoBold>\n\n <Body><par>Provide this information to your technical support\n representative."
IXP_MAP-3-L2SRC	3-Error	[chars] error detected: [chars] [chars] 0x[hec] 0x[hec]	A configuration error for the L2SRC ESF Network Processor\n Client Mapper was detected.	c7600-sip-400-clnt	"This configuration error is not considered fatal to the\n operation of the ESF Network Processors. The software is designed to\n detect and report the error condition.\n\n If the error persist record the output from the following commands:\n\n <Bullet><par><Bold>show tech <NoBold>\n <Bullet><par><Bold>show log <NoBold>\n\n <Body><par>Provide this information to your technical support\n representative."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IXP_MAP3-LOCK_LIST	3-Error	[chars] error detected - 0x[hec] [dec] [dec] [dec]	Error detected processing ESF Network Processor lock bit list\n\n allocations.	c7600-sip-400-clnt	"This is a software programming error. Record the \n\n Output from the following show commands:\n\n\n\n <del>Bullet</del><del>par</del><del>Bold</del> show tech <del>NoBold</del>\n\n <del>Bullet</del><del>par</del><del>Bold</del> show log <del>NoBold</del>\n\n\n\n <del>Body</del><del>par</del> Provide this information to your technical support\n\n representative."
IXP_MAP3-MAXEXCEED	3-Error	ESF NP Mapper Max Services Exceeded - [chars]: [chars] [dec]	The maximum number ESF Network Processor Client Mapper services have\n\n been exceeded.	c7600-sip-400-clnt	"Change the configuration to reduce the number of services configured.\n\n\n\n If the error persists record the output\n\n from the following commands:\n\n\n\n\n\n <del>Bullet</del><del>par</del><del>Bold</del> show tech <del>NoBold</del>\n\n <del>Bullet</del><del>par</del><del>Bold</del> show log <del>NoBold</del>\n\n\n\n <del>Body</del><del>par</del> Provide this information to your technical support\n\n representative."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IXP_MAP3MPLSOMGRE	3-Error	[chars] error detected: [chars] [chars] 0x[hec] 0x[hec]	A software programming error for the MPLSOGRE ESF Network Processor\n\n Client Mapper was detected.	c7600-sip-400-clnt	"This software programming error is not considered fatal to the\n\n operation of the ESF Network Processors. The software is designed to\n\n detect and report the error condition. If the error persists reset\n\n the affected device.\n\n\n Record the output from the following commands:\n\n\n <del>&lt;Bulleted list&gt;</del> tech <NoBold>\n\n <del>&lt;Bulleted list&gt;</del> log <NoBold>\n\n\n <Body><par>Provide this information to your technical support\n\n representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IXP_MAP-3-NOMEM	3-Error	Memory Allocation Failure - [chars] : [chars]0x[hec]	Memory required to service one or more Network Processors\n could not be allocated.	c7600-sip-400-clnt	<p>"This error may indicate that more memory \n must be installed on the affected card \n or platform in order to service all the\n features and related entities enabled via \n the configuration.\n \n Try to reload the IOS image on the affected \n card or platform.\n If the error persists record the output\n from the following commands:\n\n</p> <ul style="list-style-type: none"> <li><b>show tech</b></li> <li><b>show log</b></li> </ul> <p>Provide this information to your technical support\n representative."</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IXP_MAP3-NOMEM_S	3-Error	Memory Allocation Failure - [chars]: [chars] [chars]	Memory required to service one or more Network Processors could not be allocated.	c7600-sip-400-clnt	"This error may indicate that more memory must be installed on the affected card or platform in order to service all the features and related entities enabled via the configuration. Try to reload the IOS image on the affected card or platform. If the error persists record the output from the following commands: <ul style="list-style-type: none"> <li><b>show tech</b></li> <li><b>show log</b></li> </ul> Provide this information to your technical support representative."
IXP_MAP3-NOTFOUND	3-Error	ESF NP Client Mapper - [chars]: [chars] 0x[hex]	The ESF Network Processor Client Mapper could not locate a required software element.	c7600-sip-400-clnt	"Try to reload the IOS image on the affected card or platform. If the error persists record the output from the following commands: <ul style="list-style-type: none"> <li><b>show tech</b></li> <li><b>show log</b></li> </ul> Provide this information to your technical support representative."





Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IXP_MAP-3-PPPOESESS	3-Error	[chars] error detected: [chars] [chars] 0x[hec] 0x[hec]	A configuration error for the PPPOE Sessions ESF Network Processor\n\n Client Mapper was detected.	c7600-sip-400-clnt	"This configuration error is not considered fatal to the\n\n operation of the ESF Network Processors. The software is designed to\n\n detect and report the error condition.\n\n \n\n If the error persist record the output from the following commands:\n\n\n\n <Bulleted>\n\n <Bulleted>\n\n <Bulleted>\n\n <Bulleted>\n\n log <NoBold>\n\n\n\n <Body>\n\n Provide this information to your technical support\n\n representative."
IXP_MAP-3-QOS	3-Error	[chars] error detected: [chars] [chars] 0x[hec] 0x[hec]	A software programming error for the QOS ESF Network Processor Client\n\n Mapper was detected.	c7600-sip-400-clnt	"This software programming error is not considered fatal to the\n\n operation of the ESF Network Processors. The software is designed to\n\n detect and report the error condition. If the error persists reset\n\n the affected device.\n\n \n\n Record the output from the following commands:\n\n\n\n <Bulleted>\n\n <Bulleted>\n\n <Bulleted>\n\n log <NoBold>\n\n\n\n <Body>\n\n Provide this information to your technical support\n\n representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IXP_MAP3QOS_CONFIG	3-Error	[chars] error detected: [chars] [chars] 0x[hec] 0x[hec]	A configuration error for the QOS ESF Network Processor Client\n Mapper was detected.	c7600-sip-400-clnt	"This configuration error is not considered fatal to the\n operation of the ESF Network Processors. The software is designed to\n detect and report the error condition. Change the configuration to\n correct the QOS ACL configuration problem.\n\n If the error persist record the output from the following commands:\n\n<del><ul style='list-style-type: none; padding-left: 0; margin: 0;'><li><del><strong>show tech</del></li><li><del><strong>show log</del></li></ul></del>\n\n<del><strong>Provide</del> this information to your technical support\n representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IXP_MAP-3-SACL	3-Error	[chars] error detected: [chars] [chars] 0x[hec] 0x[hec]	A software programming error for the Security ACL ESF Network Processor Client Mapper was detected.	c7600-sip-400-clnt	"This software programming error is not considered fatal to the operation of the ESF Network Processors. The software is designed to detect and report the error condition. If the error persists reset the affected device. Record the output from the following commands: <ul style="list-style-type: none"> <li>&lt;B&gt;show tech &lt;/B&gt;</li> <li>&lt;B&gt;show log &lt;/B&gt;</li> </ul> Provide this information to your technical support representative."



Fault-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IXP_MAP-3-TCAM	3-Error	[chars] error detected: [chars] [chars] 0x[hec] 0x[hec]	A software programming error for the NetLogic NSE TCAM was detected.	c7600-sip-400-clnt	<p>"This software programming error is not considered fatal to the\n\n operation of the ESF Network Processors. The software is designed to\n\n detect and report the error condition. If the error persists reset\n\n the affected device.\n\n\n Record the output from the following commands:\n\n\n</p> <ul style="list-style-type: none"> <li><b>show tech</b></li> <li><b>show log</b></li> </ul> <p>Provide this information to your technical support\n\n representative."</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IXP_MAP-3-VPLS	3-Error	Error detected: [chars] [chars] 0x[hec] 0x[hec]	A software programming error for the VPLS ESF Network Processor Client\n Mapper was detected.	c7600-sip-400-clnt	"This software programming error is not considered fatal to the\n operation of the ESF Network Processors. The software is designed to\n detect and report the error condition. If the error persists reset\n the affected device.\n\n Record the output from the following commands:\n\n <del>Bul</del><del>pa</del><del>B</del><del>o</del><del>l</del><del>d</del> show tech <del>No</del><del>B</del><del>o</del><del>l</del><del>d</del>\n\n <del>Bul</del><del>pa</del><del>B</del><del>o</del><del>l</del><del>d</del> show log <del>No</del><del>B</del><del>o</del><del>l</del><del>d</del>\n\n <del>B</del><del>o</del><del>d</del><del>y</del><del>e</del><del>P</del><del>a</del><del>r</del>>Provide this information to your technical support\n representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IXP_MAP-3-WRED	3-Error	[chars] error detected: [chars] [chars] 0x[hec] 0x[hec]	A software programming error for the WRED ESF Network Processor Client\n Mapper was detected.	c7600-sip-400-clnt	"This software programming error is not considered fatal to the\n operation of the ESF Network Processors. The software is designed to\n detect and report the error condition. If the error persists reset\n the affected device.\n\n Record the output from the following commands:\n\n <Bulleted>\n\n <Bulleted>\n\n log <NoBulleted>\n\n <Body>\n\n Provide this information to your technical support\n representative."
MPA-4-CONNECTION EXCEED	4-Warning	The number of connections has reached the capacity of the line card [dec].	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IXP_MAP4-IPC_FAIL	4-Warning	ESF IPC Command failed - [chars] NP=[chars] cmd=[dec] me=[dec] rc=[dec]	An IPC command sent to the ESF Network Processor failed.	c7600-sip-400-clnt	"This error indicates a possible problem with the\n\ Network Processor hardware or microcode. Reload\n\ the affected HW to clear the condition.\n\ \n\ If the error persists record the output\n\ from the following commands:\n\ \n\ <Bulleted>\n\ show tech <NoBulleted>\n\ <Bulleted>\n\ show log <NoBulleted>\n\ \n\ <Body>\n\ Provide this information to your technical support\n\ representative."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NPMAQLEIMEXHD	4-Warning	Warning: Line card default queue-limit exceeds the maximum transmit packet buffers [dec]. To ensure high priority traffic is	An error for the HQF ESF Network Processor Client\n Mapper was detected. The total of the default queue-limits\n exceeds the maximum transmit packet buffers for this line card.\n Under high traffic conditions the line card may run out of\n packet buffers and drop high priority traffic.	c7600-sip-400-clnt	"This configuration error is not considered fatal to the\n operation of the ESF Network Processors. The software is designed to\n detect and report the error condition. Apply the QOS policy\n configuration in the output direction of each interface.\n Adjust the queue-limit so that the total of the queue-limits\n on this line card is less than the maximum transmit packet buffers.\n \n <Bullet><par>policy-map qlimit\n <Bullet><par>class class-default\n <Bullet><par>queue-limit 100000\n \n <Bullet><par>interface Gig1/0/0\n <Bullet><par>service-policy output qlimit\n \n If the error persist record the output from the following commands:\n \n <Bullet><par><Bold>show policy-map interface <NoBold>\n \n <Body><par>Provide this information to your technical support\n representative."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>KEYM4KESRBDQMPD</del>	4-Warning	Bad encrypted keystore for key id [dec].	The system could not successfully decrypt an encrypted keystore. The keystore may have been corrupted during system configuration.	-	"Re-enter the key-string command and reconfigure the key string."
<del>KEYM4KESRCPDME</del>	4-Warning	Type [dec] encryption unknown. Interpreting keystore as literal	The format type was not recognized by the system. A keystore format type value of 0 unencrypted keystore or 7 hidden keystore	-	"Use the correct format for the value type or remove the space following " "the value type"
<del>KEYSC4KCBF1SFAUR</del>	3-Error	Keystore power on self test failure. [chars]	keystore pass power on self test failure for SHA1 or HMAC-SHA1. The chips is not usable in this state.	-	"Report this error to your Cisco technical support representative " "and arrange to have the hardware keystore on the supervisor " "card replaced."
<del>KEYSC4KCBF1SFAUR</del>	3-Error	Keystore power on self test failure. [chars]	keystore pass power on self test failure for SHA1 or HMAC-SHA1. The chips is not usable in this state.	-	"Report this error to your Cisco technical support representative " "and arrange to have the hardware keystore on the supervisor " "card replaced."
<del>KEYSC4KCBF1SFAUR</del>	3-Error	Keystore power on self test failure. [chars]	keystore pass power on self test failure for SHA1 or HMAC-SHA1. The chips is not usable in this state.	-	"Report this error to your Cisco technical support representative " "and arrange to have the hardware keystore on the supervisor " "card replaced."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
KEYSTORE_AEIKRANDOM	6-Information	A pseudo-random number was generated twice in succession[dec].	A pseudo-random number generator produced the same number twice\n\n in succession.	-	"Under normal circumstances a pseudo-random number generator will\n\n occasionally produce the same number twice in succession and this\n\n is not a problem. However if this message occurs frequently the \n\n system should be manually reloaded. If the message is persistent \n\n across reloads copy the error message exactly as it appears and \n\n report it to your technical support representative."
KEYSTORE_AEIKRANDOM	6-Information	A pseudo-random number was generated twice in succession[dec].	A pseudo-random number generator produced the same number twice\n\n in succession.	-	"Under normal circumstances a pseudo-random number generator will\n\n occasionally produce the same number twice in succession and this\n\n is not a problem. However if this message occurs frequently the \n\n system should be manually reloaded. If the message is persistent \n\n across reloads copy the error message exactly as it appears and \n\n report it to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
KEYSTORE40RANDOM	6-Information	A pseudo-random number was generated twice in succession[dec].	A pseudo-random number generator produced the same number twice\n\n in succession.	-	"Under normal circumstances a pseudo-random number generator will\n\n occasionally produce the same number twice in succession and this\n\n is not a problem. However if this message occurs frequently the \n\n system should be manually reloaded. If the message is persistent \n\n across reloads copy the error message exactly as it appears and \n\n report it to your technical support representative."
KEYSTORE40SELF_TEST_PASS	6-Information	Keystore pass power on self test	keystore pass power on self test for both SHA1 and HMAC-SHA1	-	-
KEYSTORE40SELF_TEST_PASS	6-Information	Keystore pass power on self test	keystore pass power on self test for both SHA1 and HMAC-SHA1	-	-
KEYSTORE40SELF_TEST_PASS	6-Information	Keystore pass power on self test	keystore pass power on self test for both SHA1 and HMAC-SHA1	-	-
KEYSTORE3BAD_MAGIC	3-Error	Bad magic number 0x[node]x in software keystore file [chars]\.	Keystore data file appears to have been corrupted. Keys can not be retrieved from persistent memory.	-	-
KEYSTORE3BAD_MAGIC	3-Error	Bad magic number 0x[node]x in software keystore file [chars]\.	Keystore data file appears to have been corrupted. Keys can not be retrieved from persistent memory.	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
KEYSTORE3BAD_MAGIC	3-Error	Bad magic number 0x[node]x in software keystore file \[chars]\.	Keystore data file appears to have been corrupted. Keys can not be retrieved from persistent memory.	-	-
KEYSTORE3BAD_MAGIC	3-Error	Bad magic number 0x[node]x in software keystore file \[chars]\.	Keystore data file appears to have been corrupted. Keys can not be retrieved from persistent memory.	-	-
KEYSTORE3IFS_OPEN_R	3-Error	Failed to open file \[chars]\ for reading software keystore. [chars]	An error occurred while opening the keystore file for reading. CTS keys could not be retrieved.	-	-
KEYSTORE3IFS_OPEN_R	3-Error	Failed to open file \[chars]\ for reading software keystore. [chars]	An error occurred while opening the keystore file for reading. CTS keys could not be retrieved.	-	-
KEYSTORE3IFS_OPEN_R	3-Error	Failed to open file \[chars]\ for reading software keystore. [chars]	An error occurred while opening the keystore file for reading. CTS keys could not be retrieved.	-	-
KEYSTORE3IFS_OPEN_R	3-Error	Failed to open file \[chars]\ for reading software keystore. [chars]	An error occurred while opening the keystore file for reading. CTS keys could not be retrieved.	-	-
KEYSTORE3IFS_OPEN_W	3-Error	Failed to open file \[chars]\ for writing software keystore. [chars]	An error occurred while opening a file for persistent storage. CTS keys could not be saved to persistent storage.	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
KEYSTORE3IFS_OPEN_W	3-Error	Failed to open file \[chars]\ for writing software keystore. [chars]	An error occurred while opening a file for persistent storage. CTS keys could not be saved to persistent storage.	-	-
KEYSTORE3IFS_OPEN_W	3-Error	Failed to open file \[chars]\ for writing software keystore. [chars]	An error occurred while opening a file for persistent storage. CTS keys could not be saved to persistent storage.	-	-
KEYSTORE3IFS_OPEN_W	3-Error	Failed to open file \[chars]\ for writing software keystore. [chars]	An error occurred while opening a file for persistent storage. CTS keys could not be saved to persistent storage.	-	-
KEYSTORE3IFS_READ	3-Error	An error [chars] occurred while reading from the software	CTS keys could not be retrieved from persistent storage.	-	-
KEYSTORE3IFS_READ	3-Error	An error [chars] occurred while reading from the software	CTS keys could not be retrieved from persistent storage.	-	-
KEYSTORE3IFS_READ	3-Error	An error [chars] occurred while reading from the software	CTS keys could not be retrieved from persistent storage.	-	-
KEYSTORE3IFS_READ	3-Error	An error [chars] occurred while reading from the software	CTS keys could not be retrieved from persistent storage.	-	-
KEYSTORE3IFS_WRITE	3-Error	An error occurred while writing to the software keystore file.	CTS keys could not be saved to persistent storage.	-	-
KEYSTORE3IFS_WRITE	3-Error	An error occurred while writing to the software keystore file.	CTS keys could not be saved to persistent storage.	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
KEYSTORE3:IFS_WRITE	3-Error	An error occurred while writing to the software keystore file.	CTS keys could not be saved to persistent storage.	-	-
KEYSTORE3:IFS_WRITE	3-Error	An error occurred while writing to the software keystore file.	CTS keys could not be saved to persistent storage.	-	-
KEYSTORE3:FC_NO_RCC	3-Error	Could not create a process to receive keystore redundancy messages.	An error was encountered when trying to create a process to handle incoming keystore redundancy messages. This means that any updates made to the ACTIVE keystore cannot be pushed to the STANDBY keystore.	-	-
KEYSTORE3:FC_NO_RCC	3-Error	Could not create a process to receive keystore redundancy messages.	An error was encountered when trying to create a process to handle incoming keystore redundancy messages. This means that any updates made to the ACTIVE keystore cannot be pushed to the STANDBY keystore.	-	-



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
KEYSTORE3FCNOPROC	3-Error	Could not create a process to receive keystore redundancy messages.	An error was encountered when trying to create a process to handle incoming keystore redundancy messages. This means that any updates made to the ACTIVE keystore cannot be pushed to the STANDBY keystore.	-	-
KEYSTORE3FCNOPROC	3-Error	Could not create a process to receive keystore redundancy messages.	An error was encountered when trying to create a process to handle incoming keystore redundancy messages. This means that any updates made to the ACTIVE keystore cannot be pushed to the STANDBY keystore.	-	-
KEYSTORE3FCNOCONN	3-Error	No IPC communication path to peer available for keystore [chars].	No IPC connection to the peer was available for keystore redundancy messages. This means that any updates made to the ACTIVE keystore cannot be pushed to the STANDBY keystore.	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
KEYSTORE3-IPCNOCONN	3-Error	No IPC communication path to peer available for keystore [chars].	No IPC connection to the peer was available for keystore redundancy messages. This means that any updates made to the ACTIVE keystore cannot be pushed to the STANDBY keystore.	-	-
KEYSTORE3-IPCNOCONN	3-Error	No IPC communication path to peer available for keystore [chars].	No IPC connection to the peer was available for keystore redundancy messages. This means that any updates made to the ACTIVE keystore cannot be pushed to the STANDBY keystore.	-	-
KEYSTORE3-IPCNOCONN	3-Error	No IPC communication path to peer available for keystore [chars].	No IPC connection to the peer was available for keystore redundancy messages. This means that any updates made to the ACTIVE keystore cannot be pushed to the STANDBY keystore.	-	-
KEYSTORE3-IPCOPEN	3-Error	Failed to open IPC port to peer for keystore redundancy: [chars]	An error was encountered when trying to open an IPC port for keystore redundancy messages. This means that any updates made to the ACTIVE keystore cannot be pushed to the STANDBY keystore.	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
KEYSTORE-3-IPCOPEN	3-Error	Failed to open IPC port to peer for keystore redundancy: [chars]	An error was encountered when trying to open an IPC port for keystore redundancy messages. This means that any updates made to the ACTIVE keystore cannot be pushed to the STANDBY keystore.	-	-
KEYSTORE-3-IPCOPEN	3-Error	Failed to open IPC port to peer for keystore redundancy: [chars]	An error was encountered when trying to open an IPC port for keystore redundancy messages. This means that any updates made to the ACTIVE keystore cannot be pushed to the STANDBY keystore.	-	-
KEYSTORE-3-IPCOPEN	3-Error	Failed to open IPC port to peer for keystore redundancy: [chars]	An error was encountered when trying to open an IPC port for keystore redundancy messages. This means that any updates made to the ACTIVE keystore cannot be pushed to the STANDBY keystore.	-	-
KEYSTORE-3-IPCPORT	3-Error	Failed to create IPC port [chars] for keystore redundancy. [chars].	An error was encountered when trying to create an IPC port. This means that any updates made to the ACTIVE keystore cannot be pushed to the STANDBY keystore.	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
KEYSTORE-3-IPCPORT	3-Error	Failed to create IPC port [chars] for keystore redundancy. [chars].	An error was encountered when trying to create an IPC port. This means that any updates made to the ACTIVE keystore cannot be pushed to the STANDBY keystore.	-	-
KEYSTORE-3-IPCPORT	3-Error	Failed to create IPC port [chars] for keystore redundancy. [chars].	An error was encountered when trying to create an IPC port. This means that any updates made to the ACTIVE keystore cannot be pushed to the STANDBY keystore.	-	-
KEYSTORE-3-IPCPORT	3-Error	Failed to create IPC port [chars] for keystore redundancy. [chars].	An error was encountered when trying to create an IPC port. This means that any updates made to the ACTIVE keystore cannot be pushed to the STANDBY keystore.	-	-
KEYSTORE-3-IPSEND	3-Error	IPC send error [chars] while sending [chars].	An error occurred while sending an IPC message to the peer during a keystore redundancy operation. This means that any updates made to the ACTIVE keystore cannot be pushed to the STANDBY keystore.	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
KEYSTORE3-IPCSEND	3-Error	IPC send error [chars] while sending [chars].	An error occurred while sending an IPC message to the peer during a keystore redundancy operation. This means that any updates made to the ACTIVE keystore cannot be pushed to the STANDBY keystore.	-	-
KEYSTORE3-IPCSEND	3-Error	IPC send error [chars] while sending [chars].	An error occurred while sending an IPC message to the peer during a keystore redundancy operation. This means that any updates made to the ACTIVE keystore cannot be pushed to the STANDBY keystore.	-	-
KEYSTORE3-IPCSEND	3-Error	IPC send error [chars] while sending [chars].	An error occurred while sending an IPC message to the peer during a keystore redundancy operation. This means that any updates made to the ACTIVE keystore cannot be pushed to the STANDBY keystore.	-	-
KEYSTORE3-SSUNCOMPAT	3-Error	Standby incompatible for SSO.	The image on the standby failed ISSU message version negotiation. As a result we will not be able to sync keystore updates to it and so it is disallowed from reaching \hot\ standby status in SSO mode.	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
KEYSTORE_ISS_UNCOMPAT	3-Error	Standby incompatible for SSO.	The image on the standby failed ISSU message version negotiation. As a result we will not be able to sync keystore updates to it and so it is disallowed from reaching \hot\ standby status in SSO mode.	-	-
KEYSTORE_ISS_UNCOMPAT	3-Error	Standby incompatible for SSO.	The image on the standby failed ISSU message version negotiation. As a result we will not be able to sync keystore updates to it and so it is disallowed from reaching \hot\ standby status in SSO mode.	-	-
KEYSTORE_ISS_UNCOMPAT	3-Error	Standby incompatible for SSO.	The image on the standby failed ISSU message version negotiation. As a result we will not be able to sync keystore updates to it and so it is disallowed from reaching \hot\ standby status in SSO mode.	-	-

Fault-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
KEYSTORE_NO_KEYSTORE	3-Error	CTS hardware keystore is not responsive and software emulation is not enabled.	<p>The CTS hardware keystore on the switch has failed and needs to be inspected.</p> <p>Since CTS credentials are stored in the keystore this means that CTS authentication and authorization operations will fail.</p> <p>The following action is recommended: If the defect is shown on the Active Supervisor try to switchover to Standby Supervisor. If the defect is shown on Standby Supervisor try to reset the Standby. If the defect persists there may be damage to the hardware keystore chip please take appropriate action. In the meantime you can configure the switch to use software keystore emulation. After you have enabled software keystore emulation please re-configure CTS credentials to populate the software keystore.</p>	-	-

Fault-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
KEYSTORE_NO_KEYSTORE	3-Error	CTS hardware keystore is not responsive and software emulation is not enabled.	The CTS hardware keystore on the switch has failed and needs to be inspected. Since CTS credentials are stored in the keystore this means that CTS authentication and authorization operations will fail. The following action is recommended: If the defect is shown on the Active Supervisor try to switchover to Standby Supervisor. If the defect is shown on Standby Supervisor try to reset the Standby. If the defect persists there may be damage to the hardware keystore chip please take appropriate action. In the meantime you can configure the switch to use software keystore emulation. After you have enabled software keystore emulation please re-configure CTS credentials to populate the software keystore.	-	-



Fault-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
KEYSTORE_NO_KEYSTORE	3-Error	CTS hardware keystore is not responsive and software emulation is not enabled.	<p>The CTS hardware keystore on the switch has failed and needs to be inspected.</p> <p>Since CTS credentials are stored in the keystore this means that CTS authentication and authorization operations will fail.</p> <p>The following action is recommended: If the defect is shown on the Active Supervisor try to switchover to Standby Supervisor. If the defect is shown on Standby Supervisor try to reset the Standby. If the defect persists there may be damage to the hardware keystore chip please take appropriate action. In the meantime you can configure the switch to use software keystore emulation. After you have enabled software keystore emulation please re-configure CTS credentials to populate the software keystore.</p>	-	-

Fault-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
KEYSTORE_NO_KEYSTORE	3-Error	CTS hardware keystore is not responsive and software emulation is not enabled.	The CTS hardware keystore on the switch has failed and needs to be inspected. Since CTS credentials are stored in the keystore this means that CTS authentication and authorization operations will fail. The following action is recommended: If the defect is shown on the Active Supervisor try to switchover to Standby Supervisor. If the defect is shown on Standby Supervisor try to reset the Standby. If the defect persists there may be damage to the hardware keystore chip please take appropriate action. In the meantime you can configure the switch to use software keystore emulation. After you have enabled software keystore emulation please re-configure CTS credentials to populate the software keystore.	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
KEYSTORE-3-SESSION	3-Error	KeyStore ISSU client [chars]	KeyStore ISSU client observed an error during a session negotiation with the peer unit. When there is a problem with the session the standby unit can not be brought up.	-	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
KEYSTORE-3-SESSION	3-Error	KeyStore ISSU client [chars]	KeyStore ISSU client observed an error during a session negotiation with the peer unit. When there is a problem with the session the standby unit can not be brought up.	-	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
KEYSTORE-3-UNEXPECTED_EOF	3-Error	Unexpected end of file while reading software keystore \[chars]\.	Keystore data file appears to have been truncated. One or more keys can not be retrieved from persistent memory.	-	-
KEYSTORE-3-UNEXPECTED_EOF	3-Error	Unexpected end of file while reading software keystore \[chars]\.	Keystore data file appears to have been truncated. One or more keys can not be retrieved from persistent memory.	-	-
KEYSTORE-3-UNEXPECTED_EOF	3-Error	Unexpected end of file while reading software keystore \[chars]\.	Keystore data file appears to have been truncated. One or more keys can not be retrieved from persistent memory.	-	-
KEYSTORE-3-UNEXPECTED_EOF	3-Error	Unexpected end of file while reading software keystore \[chars]\.	Keystore data file appears to have been truncated. One or more keys can not be retrieved from persistent memory.	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>KNEPAK</del> 3CONTIGUOUS	3-Error	Contiguous packet sent for transmit	A software error occurred resulting in an unexpected packet being\n\ set up for transmission and the packet was dropped.	-	LOG_SID_RECUR_ACTION
<del>KNEPAK</del> ERR_DSPWARE_DND	3-Error	dsp[dec] cannot download dspware [chars]	A software error occurred resulting in failure to download a \n\ dspware component.	-	LOG_STD_ACTION
<del>KNEPAK</del> ERR_DSPWARE_EMG	3-Error	Cannot find dspware [chars] component	A software error occurred resulting in failure to download a \n\ dspware component.	-	LOG_STD_ACTION
<del>KNEPAK</del> 3NODSPENIRY	3-Error	No dsp entry in dsp list	The software structure that is used to maintain the DSP \n\ instance is missing.	-	LOG_SID_RECUR_ACTION
<del>KNEPAK</del> 3NOMESSAGES	3-Error	Cannot create message buffer	A software error occurred resulting in failure to create a \n\ message buffer to send messages among processes.	-	LOG_STD_ACTION
<del>KNEPAK</del> 3NOPARTICLE	3-Error	No particle available for ingress packet	A software error occurred resulting in failure to obtain a \n\ particle to hold an ingress packet from DSP.	-	LOG_SID_RECUR_ACTION
<del>KNEPAK</del> 3NOPARTICLEPOOL	3-Error	Cannot create particle pool	A software error occurred resulting in failure to create a \n\ particle pool to receive packets from DSP.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
KINPAK-3-NORXPAK	3-Error	Static receive paktype unavailable	A software structure was found in an unexpected state during\n\ run-time for the indicated DSP.	-	LOG_STD_ACTION
<del>L2BDX2</del> QFPXCNPAID	2-Critical	QFP L2BD Proxy IPC interface initialization failure result: [dec].	Cisco internal software error. QFP L2BD Proxy initialization detected that the IPC interface initialization failed. QFP L2BD proxy will not be functional while this condition exists.	qfp-l2bdkeyword:l2bd	LOG_STD_ACTION
<del>L2BDX2</del> EDMEXENPAID	3-Error	L2BD IPC subtype: [dec]	Extending memory failed.	qfp-l2bdkeyword:l2bd	LOG_STD_ACTION
<del>L2BDX2</del> EDMEXQPAID	3-Error	L2BD IPC subtype: [dec]	Requesting more memory failed.	qfp-l2bdkeyword:l2bd	LOG_STD_ACTION
<del>L2BDX2</del> QFPXBDMG	3-Error	QFP L2BD Proxy received bad length message type [dec]	Cisco internal software error. QFP L2BD Proxy received a corrupted message from control plane. This message will be ignored.	qfp-l2bdkeyword:l2bd	LOG_STD_ACTION
<del>L2BDX2</del> QFPXCALQPAID	3-Error	QFP L2BD Proxy [chars] message lost due to message buffer allocation failure.	Cisco internal software error. QFP L2BD Proxy message processing detected a message buffer allocation failure. The message is lost as the result of this condition.	qfp-l2bdkeyword:l2bd	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>QFP</del> <u>L2BD</u> <del>PROXY</del> <u>MSG</u> <del>ERR</del>	3-Error	QFP L2BD Proxy [chars] message lost due to message sent failure result: [dec].	Cisco internal software error. QFP L2BD Proxy message processing detected a message sent failure. The message is lost as the result of this condition.	qfp-l2bdkeyword:l2bd	LOG_STD_ACTION
<del>QFP</del> <u>L2BD</u> <del>PROXY</del> <u>MSG</u> <del>WRN</del>	4-Warning	QFP L2BD Proxy received invalid message type [dec]	Cisco internal software error. QFP L2BD Proxy received an invalid message from control plane. This message will be ignored.	qfp-l2bdkeyword:l2bd	LOG_STD_ACTION
<del>QFP</del> <u>L2BD</u> <del>PROXY</del> <u>MSG</u> <del>WRN</del>	4-Warning	QFP L2BD Proxy IPC invalid length [dec]:[dec] len [dec] flags 0x[hec] source [dec]	Cisco internal software error. QFP L2BD Proxy received invalid IPC message length from control plane. This message will be ignored.	qfp-l2bdkeyword:l2bd	LOG_STD_ACTION
<del>LAG</del> <u>CBW</u> <del>NOT</del> <u>ENOUGH</u>	5-Notice	VC [dec]/[dec] bandwidth is not enough to add this Trunk portchannel. Total bandwidth is [dec] cps but requires [dec] cps to add this Trunk portchanel	VC bandwidth is not enough Need to increase the bandwidth .	-	"To support this call VC bandwidth the sustained cell rate has to be increased to accomidate the new calls."
<del>LAG</del> <u>CBW</u> <del>NOT</del> <u>ENOUGH</u>	5-Notice	VC [dec]/[dec] bandwidth is not enough to add this Trunk portchannel. Total bandwidth is [dec] cps but requires [dec] cps to add this Trunk portchanel	VC bandwidth is not enough Need to increase the bandwidth .	-	"To support this call VC bandwidth the sustained cell rate has to be increased to accomidate the new calls."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
L2FIB-3-DRCSRV_FAIL	3-Error	Subsystem [chars] fails to add callback function [chars]	Other subsystem must have mistakenly add its own callback functions. This syslog is for debugging purpose.	l2ctrl	LOG_STD_NO_ACTION
L2FIB-3-BAD_PARAM	3-Error	[chars]	Invalid parameter	l2fib	LOG_STD_ACTION
L2FIB-3-EVPN_ERROR	3-Error	[chars]	EVPN encap error	l2fib	LOG_STD_ACTION
L2FIB-3-IMET_ENCAP_MISMATCH	3-Error	IMET Encapsulation Mismatch on bridge domain [dec] from [chars]	-	-	-
L2FIB-3-IMET_REP_MISMATCH	3-Error	IMET Replication Mismatch on bridge domain [dec] from [chars] Local is Static	-	l2fib	LOG_STD_ACTION
L2FIB-3-MAC_ENC_MISMATCH	3-Error	MAC [chars] Encapsulation Mismatch on bridge domain [dec] from [chars]	Incompatible Encapsulation Type in MAC/IP Route RT-2 received from remote peer	l2fib	LOG_STD_ACTION
L2FIB-3-MAC_ERROR	3-Error	MAC address [chars] is reserved for [chars] output list bit is produced by [chars] on bridge domain [dec]		l2fib	LOG_STD_ACTION
L2MCQUERY-4-NOP_ADDR_CFG	4-Warning	The [chars] querier cannot send out General Query messages in VLAN [dec] because there is no IP address configured on the system.	An IP address should be specified for the IGMP/MLD querier either at the global or per VLAN level.	l2mcast	"Configure a source IP address for the IGMP/MLD querier." "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>LMQIRRNOPADRGG</del>	4-Warning	The [chars] querier cannot send out General Query messages in VLAN [dec] because there is no IP address configured on the system.	An IP address should be specified for the IGMP/MLD querier either at the global or per VLAN level.	l2mcast	"Configure a source IP address for the IGMP/MLD querier. "
<del>LMQIRRMENABED</del>	4-Warning	The [chars] querier is operationally disabled in VLAN [dec] because multicast router interface has been enabled on the SVI.	multicast router interface has been detected on the SVI. The IGMP/MLD querier function should not be operationally enabled when multicast router interface is enabled on the SVI.	l2mcast	"Ensure that multicast router interface is disabled on the SVI. "
<del>LMQIRRMENABED</del>	4-Warning	The [chars] querier is operationally disabled in VLAN [dec] because PIM has been enabled on the SVI.	PIM has been detected on the SVI. The IGMP/MLD querier function should not be operationally enabled when PIM is enabled on the SVI.	l2mcast	"Ensure that PIM is disabled on the SVI. "
<del>LMQIRRSVESCADR</del>	4-Warning	An [chars] General Query packet with the same source IP address [chars]	The querier has received an IGMP/MLD General Query message with a source IP address identical to that configured for the IGMP/MLD querier itself. This is considered a network configuration error.	l2mcast	"Check IGMP/MLD querier source IP address configuration on the router " "or switch connected via the port identified." "Ensure unique source IP addresses are configured on each system. "



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>LMQERRSNOGLBBD</del>	4-Warning	The [chars] querier is operationally disabled in VLAN [dec] because [chars] snooping has been disabled in this VLAN.	IGMP/MLD snooping has been detected as being disabled on this VLAN. The IGMP/MLD querier function should not be operationally enabled when IGMP/MLD snooping is disabled.	l2mcast	"Ensure that IGMP/MLD snooping is enabled globally and on the VLAN " "reported. "
<del>LMQERRSNOGLBBD</del>	4-Warning	The [chars] querier is operationally disabled in VLAN [dec] because [chars] snooping has been disabled in this VLAN.	IGMP/MLD snooping has been detected as being disabled on this VLAN. The IGMP/MLD querier function should not be operationally enabled when IGMP/MLD snooping is disabled.	l2mcast	"Ensure that IGMP/MLD snooping is enabled globally and on the VLAN " "reported. "
<del>LMQERRRFSQPADR</del>	4-Warning	An [chars] General Query packet with source IP address that contained all zeroes is received in VLAN [dec] on port [chars].	The IGMP/MLD querier has received an IGMP/MLD General Query message with a source IP address that contained all zeroes. Some IGMP/MLD clients cannot process General Query with source IP address that contained all zeroes.	l2mcast	"Check the source IP address of the IGMP/MLD querier that is on the router " "or switch connected to the port specified in the message. "
<del>LMQERRRMDLDBD</del>	6-Information	The [chars] querier is now operationally enabled in VLAN [dec] because multicast router interface is no longer enabled on the SVI.	multicast router interface has been disabled on the SVI and as a result the IGMP/MLD querier function has now been enabled.	l2mcast	"No action is required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>LMQIERE</del> <del>DIS</del> <del>ABED</del>	6-Information	The [chars] querier is now operationally enabled in VLAN [dec] because PIM is no longer enabled on the SVI.	PIM has been disabled on the SVI and as a result the IGMP/MLD querier function has now been enabled.	l2mcast	"No action is required."
<del>LMQIESNO</del> <del>CE</del> <del>ABED</del>	6-Information	The [chars] querier is now operationally enabled in VLAN [dec] because [chars] snooping is no longer disabled.	IGMP/MLD snooping has now been enabled and as a result the IGMP/MLD querier function has now been enabled.	l2mcast	"No action is required."
<del>LMQIESNO</del> <del>CE</del> <del>ABED</del>	6-Information	The [chars] querier is now operationally enabled in VLAN [dec] because [chars] snooping is no longer disabled.	IGMP/MLD snooping has now been enabled and as a result the IGMP/MLD querier function has now been enabled.	l2mcast	"No action is required."
<del>LMQIESNO</del> <del>CE</del> <del>ABED</del>	6-Information	The [chars] querier is now operationally enabled in VLAN [dec] because switchover has occurred.	Switchover has occurred and the IGMP/MLD querier function has now been enabled.	l2mcast	"No action is required."
<del>LMCS</del> <del>WIRE</del> <del>SS</del> <del>2</del> <del>FB</del> <del>ERR</del>	2-Critical	L2mcast Wireless ISSU client failed to get buffer for message. Error: [dec] [chars]	The L2mcast Wireless ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	ewlc-multicast	"show logging and show checkpoint client"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>L2MCAST_WIRELESS_ISSU_INIT</del>	2-Critical	L2mcast Wireless ISSU client initialization failed to [chars]. Error: [dec] [chars]	The L2mcast Wireless ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	ewlc-multicast	LOG_STD_ACTION
<del>L2MCAST_WIRELESS_ISSU_NEGO_FAIL</del>	2-Critical	L2mcast Wireless ISSU client failed to send negotiation message. Error: [dec] [chars]	The L2mcast Wireless ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	ewlc-multicast	"show logging and show checkpoint client"
<del>L2MCAST_WIRELESS_ISSU_NEGO_DONE</del>	2-Critical	L2mcast Wireless ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The L2mcast Wireless ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	ewlc-multicast	"show issu session <client_id> and " "show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>LMCSTWIRELESSDREGV</del>	2-Critical	L2mcast Wireless ISSU client failed to register session information. Error: [dec] [chars]	The L2mcast Wireless ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	ewlc-multicast	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>LMCSTWIRELESSDREN</del>	3-Error	L2mcast Wireless ISSU client does not have a valid registered session.	The L2mcast Wireless ISSU client does not have a valid registered session.	ewlc-multicast	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>LMCSTWIRELESSMNCCK</del>	3-Error	L2mcast Wireless ISSU client 'Message Type [dec]' is not compatible	The L2mcast Wireless ISSU client received an incompatible message from the peer device. The message cannot be processed.	ewlc-multicast	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>LMCSTWIRELESSMNCSE</del>	3-Error	L2mcast Wireless ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The L2mcast Wireless ISSU client failed to calculate the MTU for the specified message. The L2mcast Wireless ISSU client is not able to send the message to the standby device.	ewlc-multicast	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>LMCSTWIRELESSDREGV</del>	3-Error	L2mcast Wireless ISSU client failed to unregister session information. Error: [dec] [chars]	The L2mcast Wireless ISSU client failed to unregister session information.	ewlc-multicast	"show issu session <client_id> and " "show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>L2MCAST_WIRELESS_ISSU</del>	3-Error	L2mcast Wireless ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The L2mcast Wireless ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the L2mcast Wireless state between the active device and the standby device is not identical.	ewlc-multicast	"show issu session <client_id> and " "show issu negotiated version <session_id>"
L2TM-3-ACCESS_ERR	3-Error	Tcam access failed while [chars]	Failed to read/write from/to tcam.	hardware	LOG_STD_ACTION
L2TM-7-INTERNAL_ERR	7-Debug	Internal error: [chars]	An internal error occurred.	firmware	LOG_STD_ACTION
L2TP_HA-3-ISSU	3-Error	[chars]: [chars]	A L2TP ISSU error occurred.	l2tp	LOG_SID_SHI_TECH_ACTION
L2TP_HA-3-SYNC	3-Error	[chars]: code [dec]	An error occurred when syncing L2TP state to the Standby Route Processor. This may affect Non-Stop Forwarding capability on L2TP-based interfaces during and after switchover until the state is recovered through normal protocol operation.	fr	"Reset the standby processor to attempt the sync again. " LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
L2TP-3-ALLOCATEFAIL	3-Error	Error allocating [chars]	An internal software error occurred. This is probably because not enough memory was available.	-	LOG_SID_NO_ACTION
L2TP-3-CRITICAL	3-Error	[chars]	An critical event has been processed by the L2TP subsystem.	L2TP	LOG_SID_NO_ACTION
L2TP-3-ILLEGAL	3-Error	[chars]: [chars]	An illegal event has been processed by the L2TP subsystem.	L2TP	LOG_SID_NO_ACTION
L2TP-5-IGNOREICMPMTU	5-Notice	Ignoring received ICMP Type 3 Code 4 due to pmtu min or max setting	An ICMP Type 3 Code 4 fragmentation needed and DF set packet	L2TP	"If you want the ICMP packet to be accepted and used to " "decrease or increase the MTU then use the " "<CmdBold>vpdn pmtu min <NoCmdBold> command to " "decrease the minimum MTU allowed and enter the " "<CmdBold> vpdn pmtu max <NoCmdBold> command to " "increase the maximum MTU that is allowed. The minimum value " "specified is the minimum MTU that is allowed and the " "maximum value specified is the maximum MTU that is " "allowed."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
L2TPV3_NP_CLIENT3INFO	3-Error	[chars]	L2TPv3 NP Client failed to initialize properly which will result in improper operation of l2tpv3 feature	vsp-mid	"Try to reload the IOS image on the affected card or platform. If the error persists record the output from the following commands: <ul style="list-style-type: none"> <li>&lt;Bullet&gt;&lt;par&gt;&lt;Bold&gt;show tech &lt;NoBold&gt;</li> <li>&lt;Bullet&gt;&lt;par&gt;&lt;Bold&gt;show log &lt;NoBold&gt;</li> </ul> <Body><par>Provide this information to your technical support representative."
L2TPV3_NP_CLIENT3MEM	3-Error	[chars]	L2TPv3 NP Client failed to initialize properly which will result in improper operation of l2tpv3 feature	vsp-mid	"This error may indicate that more memory must be installed on the affected card or platform in order to service all the features and related entities enabled via the configuration. Try to reload the IOS image on the affected card or platform. If the error persists record the output from the following commands: <ul style="list-style-type: none"> <li>&lt;Bullet&gt;&lt;par&gt;&lt;Bold&gt;show tech &lt;NoBold&gt;</li> <li>&lt;Bullet&gt;&lt;par&gt;&lt;Bold&gt;show log &lt;NoBold&gt;</li> </ul> <Body><par>Provide this information to your technical support representative."





Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
L3MM4DUP_IPADDR	4-Warning	MN [enet] is requesting ip [node] which is being used by MN [enet]	The L3MM detected that a mobile node requested an IP address that is being used by another mobile node in the network.	-	"Change the IP address of one of the two mobile " "nodes"
L3MM4MALLOC_FAIL	4-Warning	Memory allocation failure [chars]	The L3MM failed to allocate memory which was needed to perform a given operation and/or respond to an event	-	"Increase the memory on the RP of the supervisor"
L3MM4MN_IPDB_ADD	4-Warning	Failed to add MN to MN DB { MN: [enet] [node]	The L3MM failed to add the entry for the specified MN into the MN IP database	cat6000-wireless	"Copy the error message exactly as it appears and report it to your " "technical support representative."
L3MM4MN_IPDB_DEL	4-Warning	Failed to delete MN from IP DB { MN: [enet] [node]	The L3MM failed to delete the entry for the specified MN from the MN IP database	cat6000-wireless	"Copy the error message exactly as it appears and report it to your " "technical support representative."
L3MM4MN_MACDB_ADD	4-Warning	Failed to add MN to MAC DB { MN: [enet] AP: [node]}	The L3MM failed to add the entry for the specified MN into the MN MAC database	cat6000-wireless	"Copy the error message exactly as it appears and report it to your " "technical support representative."
L3MM4MN_MACDB_DEL	4-Warning	Failed to delete MN from MAC DB { MN: [enet] [node] AP: [node] WNID: [dec] }	The L3MM failed to delete the entry for the specified MN from the MN MAC database	cat6000-wireless	"Copy the error message exactly as it appears and report it to your " "technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
L3MM-5-WLAN	5-Notice	Wireless LAN Module in slot [dec] is [chars]	The L3MM detected a change in the state of the Wireless LAN module in the specified slot. If the module is now on line L3MM starts accepting access-point and mobile-node registrations from the WDS on the module. If the module is now off line L3MM purges all access points and mobile nodes received from the module.	-	LOG_SID_NO_ACTION
L3MM-5-WLAN-COMM-ABORT	5-Notice	Communication with Wireless LAN Module in slot [dec] aborted [chars]	The Layer 3 Mobility Manager detected communication failure with the Wireless LAN module specified in the error message above and will respond as if the module went offline by purging its access point and mobile node databases. However the module will not be reset by the Layer 3 Mobility Manager	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
L3MM5WLAN_PWR_DN	5-Notice	Wireless LAN Module in slot [dec] will be powered down another module is already active	The L3MM detected a Wireless LAN module trying to come online while another module was already functional as the active Wireless LAN module. The L3MM does not support more than one Wireless LAN module online in the chassis at a given time which is why this module will be powered down	-	LOG_STID_NO_ACTION
L3ICAM3SIZE_CONFLICT	3-Error	[chars] requires enabling extended routing	In order to support this feature TCAM entry needs to be configured to extended routing enable.	firmware	"Modify the Switch Database Management SDM " "template to enable the switch to support the " "144-bit Layer 3 TCAM. Use the sdm prefer " "extended-match sdm prefer access extended-match " "or sdm prefer routing extended-match global " "configuration command and then reload the switch " "by using the reload privileged EXEC command."
L3ICAM3ICOMANY_VRF	3-Error	Exceed the maximum number of VRF allowed	The number of VPN exceeds the maximum number of allowed VPN routing/forwarding table on this hardware platform.	firmware	"Reconfigure your switch to limit the number " "of VRFs. Do not define name more than seven "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
L4NFCEINVALIDCHUNKID	3-Error	Invalid chunk ID for protocol %u	Failed to determine chunk ID for specified protocol. Unable to free CFT feature object.	qfp-cxsc	LOG_STD_ACTION
L4FANADMGRGLENRCVD	3-Error	invalid [chars] rg [node][node]expected [node]opcode [chars] [hec]	Standby received an invalid Firewall HA message	cpp-ucode	LOG_STD_ACTION
L4FANADMGRRCVD	3-Error	invalid [chars] [hec] expected [hec] opcode [chars] [hec]	Standby received an invalid Layer 4 HA message	cpp-ucode	LOG_STD_ACTION
L4F-2-INVALIDFLOW	2-Critical	Invalid L4F flow: 0x[hec]	An invalid L4F flow entry was detected.	layer4-forwarding	"If this message recurs copy it down exactly as it appears and contact\n\ your technical support representative for assistance."
L4F-2-INVALIDFLOW	2-Critical	Invalid L4F flow: 0x[hec]	An invalid L4F flow entry was detected.	layer4-forwarding	"If this message recurs copy it down exactly as it appears and contact\n\ your technical support representative for assistance."
L4F-2-SEMLOCKFAILURE	2-Critical	Cannot lock TCP semaphore on flow 0x[hec] with tcb 0x[hec]	Cannot obtain the semaphore lock for a TCB we expect to be able to lock.	layer4-forwarding	"If this message recurs copy it down exactly as it appears and contact\n\ your technical support representative for assistance."
L4F-2-SEMLOCKFAILURE	2-Critical	Cannot lock TCP semaphore on flow 0x[hec] with tcb 0x[hec]	Cannot obtain the semaphore lock for a TCB we expect to be able to lock.	layer4-forwarding	"If this message recurs copy it down exactly as it appears and contact\n\ your technical support representative for assistance."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>L4F-RNCH-ANDE-ERR</del>	4-Warning	L4F reinject [chars]	L4F reinjection handle creation or update failed.	layer4-forwarding	"If this message recurs copy it down exactly as it appears and contact your technical support representative for assistance."
<del>L4F-RNCH-ANDE-ERR</del>	4-Warning	L4F reinject [chars]	L4F reinjection handle creation or update failed.	layer4-forwarding	"If this message recurs copy it down exactly as it appears and contact your technical support representative for assistance."
L4F-5-NOBUFFER	5-Notice	Cannot allocate buffer to send data on the flows [chars]:[dec] -> [chars]:[dec]	A buffer could not be allocated while trying to send data on the indicated flow. The issue could be due to low or fragmented memory. If the memory issue doesn't resolve automatically it could result in connection resets.	layer4-forwarding	"This is an informational message that potential points to low or fragmented memory which could happen if the router is running beyond its resource limits. Check the number of flows and the traffic rate going through the router and contact your technical support representative with that info for assistance."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
L4F-5-NOBUFFER	5-Notice	Cannot allocate buffer to send data on the flows [chars]:[dec] -> [chars]:[dec]	A buffer could not be allocated while trying to send data on the\n\n indicated flow. The issue could be due to low or fragmented memory.\n\n If the memory issue doesn't resolve automatically it could result\n\n in connection resets.	layer4-forwarding	"This is an informational message that potential points to low or\n\n fragmented memory which could happen if the router is running beyond\n\n its resource limits. Check the number of flows and the traffic rate\n\n going through the router and contact your technical support\n\n representative with that info for assistance."
<del>L4F-FLOW_CREATION_FAILED</del>	6-Information	L4F flow creation failed [chars]	L4F flow entry creation failed due to an error.	layer4-forwarding	"If this message recurs copy it down exactly as it appears and contact\n\n your technical support representative for assistance."
<del>L4F-FLOW_CREATION_FAILED</del>	6-Information	L4F flow creation failed [chars]	L4F flow entry creation failed due to an error.	layer4-forwarding	"If this message recurs copy it down exactly as it appears and contact\n\n your technical support representative for assistance."
<del>L4F-FLOW_LIMIT_EXCEEDED</del>	6-Information	L4F flow limit was exceeded:[dec]	This is an informational message. L4F flow max limit was exceeded.	layer4-forwarding	"Issue the "<CmdBold>show l4f statistics <NoCmdBold> command and " "contact your technical support representative and \n\n provide the representative with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
L4F_FLOWLIMIT_EXCD	6-Information	L4F flow limit was exceeded:[dec]	This is an informational message. L4F flow max limit was exceeded.	layer4-forwarding	"Issue the "<CmdBold>show l4f statistics</NoCmdBold> command and "contact your technical support representative and \n\ provide the representative with the gathered information."
LABEL_AIC3COMIRNS	3-Error	ERRMSG_NOFLAGS	-	-	-
LABEL_AIC3COMIRNS	3-Error	ERRMSG_NOFLAGS	-	-	-
LABEL_REGION3LCON	3-Error	ERRMSG_NOFLAGS	-	-	-
LABEL_REGION3LCON	3-Error	ERRMSG_NOFLAGS	-	-	-
LANCE-1-INITFAIL	1-Alert	msgtxt_initfail	The hardware failed to initialize correctly.	-	"Repair or replace the controller."
LANCE-1-MEMERR	1-Alert	msgtxt_memoryerror	An Ethernet interface detected a hardware problem.	-	"Repair or replace the controller."
LANCE-3-BADCABLE	3-Error	msgtxt_badcable	Ethernet cable is not connected.	-	"Check Ethernet cable connection."
LANCE-3-BADUNIT	3-Error	msgtxt_badunit	An internal software error occurred.	-	"If either message recurs call your technical support representative\n\ for assistance."
LANCE-3-OWNERR	3-Error	msgtxt_ownerror	An Ethernet interface is malfunctioning or an internal software error\n\ occurred.	-	"Repair or replace the controller."
LANCE-3-SPURIDON	3-Error	Unit [dec] spurious IDON interrupt csr[dec]=0x[node]x	An Ethernet interface generated a spurious Initialization Done\n\ interrupt.	-	"Repair or replace the controller."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LANCE-3-UNDERFLO	3-Error	Unit [dec] underflow error	The Ethernet hardware is requesting data faster than the system can supply it. This condition might indicate that the system is at the limit of its performance.	-	"A small number of underflows might not be a cause for concern. You can monitor underflows with the show interface command. Reducing the load on the router or installing a higher-performance router should alleviate this problem."
LANCE-4-BABBLE	4-Warning	Unit [dec] babble error csr0 = 0x[hec]	An Ethernet interface is malfunctioning.	-	"Determine whether the malfunction stems from a software or hardware error by turning off all fastswitching. Error messages showing that the packet is too large for the link indicate a software error at a high level. Copy the error message exactly as it appears and report it to your technical support representative. Receiving no error messages indicates a hardware error. Repair or replace the controller."
LANCE-5-COLL	5-Notice	Unit [dec] excessive collisions. TDR=[dec]		-	"If the transceiver appears to be properly terminated repair or replace the Ethernet interface card."



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
LANCE-5-LATECOLL	5-Notice	Unit [dec] late collision error	An Ethernet transceiver is malfunctioning the Ethernet is overloaded\n\n or the Ethernet cable is too long.	-	"Repair or replace the controller."
LANCE-5-LOSTCARR	5-Notice	Unit [dec] lost carrier. Transceiver problem?	An Ethernet transceiver is unplugged or faulty.	-	"Repair or replace the controller."
LANE-3-BADILMI	3-Error	Unexpected ILMI event [dec]	An internal error occurred.	-	"This error should not occur. Download the system error log then call\n\n your technical support representative and provide the log the error\n\n message and the router configuration."
LANE-3-BADNAME	3-Error	ELAN name must be 1-32 characters long	A name which is longer than 32 characters identifying a LANE\n\n component has been entered by the user.	-	"Re-enter a shorter name."
LANE-3-BADTYPE	3-Error	Inappropriate LAN type	An unexpected LAN type has been specified for a LANE component.\n\n Only ethernet and token-ring elans are supported.	-	"Specify a valid LAN type."
LANE3-LANE_ERROR	3-Error	[chars]	An internal error has occured which reflects an inconsistency\n\n in the system and needs attention.	-	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
LANE-3-LANE_SIG_ERR	3-Error	[chars]	An internal error occurred while system routines were handling ATM\n\ signaling messages for LANE.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
LANE-3-CTL_DIST_ERR	3-Error	[chars] CTL DIST blli type wrong	Wrong BLLI value specified on the incoming circuit.	-	"The originator of the circuit is not using the correct BLLI value\n\ for this type of circuit. LANE standard defines these values and\n\ the originator is violating the standard."
LANE-3-LEC_BADAD	3-Error	[chars] LEC unable to compute ATM address	The client cannot obtain an ATM address from the given configuration\n\ or auto-assignment failed to get an ATM prefix from the switch.	-	-
LANE-3-LEC_CFG	3-Error	[chars] CFG_REQ failed [chars] LECS returned [dec]	The master LECS refused the LEC's configuration request.	-	"Check your LECS configurations."
LANE-3-LEC_CTRL_MSG	3-Error	Received bad control message on interface [chars]	The LANE client received an unexpected or inappropriate control message\n\ over one of its vc's.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
LANE-3-LEC_ERR	3-Error	[chars]	A LANE client software or hardware error occurred.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LANE-3-LEC_JOIN	3-Error	[chars] JOIN failed [chars] LES returned [dec]	LANE client was rejected the Join request to join its elan.	-	"This is usually because of user configuration errors: LANE client\n attempting to join an incorrect elan or elan not configured\n in the LES or validation failures with the LECS etc..."
LANE-3-LEC_LISTEN	3-Error	[chars] listen failed on [chars]	The LANE client could not register its address with ATM signalling\n to be able to accepts calls on that address.	-	"Reconfigure the client ATM address. It may be conflicting with another\n component with the same ATM address."
LANE-3-LEC_RD_REGISTER	3-Error	[chars] RD REGISTER failed for Route Descriptor [hec]	A software or hardware error occurred.	-	"Copy the error message exactly as it appears and report it to your\n technical support representative."
LANE-3-LEC_REGISTER	3-Error	[chars] REGISTER failed [chars] LES returned [dec]	attempt to register a mac-atm address binding with LES failed.	-	"The LES has already registered the requested mac addr - atm addr binding."
LANE-3-LEC_SIGNAL	3-Error	Unexpected SigAPI event [dec]	ATM signaling sent the LANE client an unexpected message type.	-	"Copy the error message exactly as it appears and report it to your\n technical support representative."
LANE-3-LEC_WRONG_ELAN_ID	3-Error	[chars]: elan id mismatch: LECS indicates [node]LES indicates %u	The elan-id returned by LES does not match the value given by LECS or\n via the CLI	-	"Check configuration of elan ids specified in the LECS database and\n the LES. The mismatch must be occurring as a result of misconfiguration."
LANE-3-LECS_ERROR	3-Error	MSG_TRACEBACK   MSG_PROCESS	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LANE-3-LES_ERROR	3-Error	[chars]	A serious internal occurred with LES/BUS.	-	"This error should not occur. Download the system error log then call\n\n your technical support representative and provide the log the error\n\n message and the router configuration."
LANE-3-LSV_BADAD	3-Error	[chars] elan [chars] unable to compute [chars] ATM address		-	"Enter a correct ATM address template for the LANE component \"BUS\" or \"config server\" named in the error message."
LANE-3-LSV_CRASH	3-Error	[chars] elan [chars] unrecoverable error [chars]	A very serious LES/BUS internal error occurred.	-	"This error should not occur. Download the system error log then call\n\n your technical support representative and provide the log the error\n\n message and the router configuration."
LANE-3-NAMECHG	3-Error	A LANE Client is already running here using another elan name	Both the LANE client and the LANE server/BUS may have an emulated LAN name specified in the configuration via the lane server-bus and lane client commands. If both specify the emulated LAN name then the name cannot be changed by re-entering just one of the commands.	-	"Use the no lane server-bus command to delete the server-bus or the no lane client command to delete the client. Then the other of the two commands can be re-entered with another emulated LAN name. Finally re-enter the deleted command with the new emulated LAN name."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LANE-3-NOILMI	3-Error	ILMI service registration failed		-	"This error should not occur. Download the system error log then call your technical support representative and provide the log the error message and the router configuration."
LANE-3-NOINT	3-Error	[chars] still destroying old sub-interface	An attempt was made to create a new subinterface while a previous version of the subinterface was still being destroyed.	-	"Wait a minute and try again. If failure still occurs try shutting down the main interface. Rebooting may be required to recover in extreme cases."
LANE-3-NOREGILMI	3-Error	[chars] [chars] cannot register [char]j with ILMI	An attempt to register the given ATM address with the ATM switch failed. This failure can occur because the ATM switch is down or misconfigured. The registration will be retried.	-	"If the situation persists after a number of attempts and the switch is up the configuration of the switch and router should be examined. A likely cause is that the ATM address being registered is not compatible with the parameters configured in the switch. Correct the configuration."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LANE-3-TYPECHG	3-Error	A LANE Client is already running here using another elan type		-	"Use the no lane server-bus command to delete the server-bus or the no\n\n lane client command to delete the client. Then the other of the two\n\n commands can be re-entered with a new type. Finally re-enter the\n\n deleted command with the new type."
LANE4LECS_WARNING	4-Warning	[chars]		-	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
LANE4LSV_ADDR	4-Warning	[chars] elan [chars] unable to register LES/BUS ATM addr	LANE Server or BUS could not register its address with ILMI.	-	"Try and investigate why. Some of the reasons are: user defined\n\n override address does not conform to the switch prefix or that\n\n there is a problem with the ATM switch with whom the entity is\n\n registering."
LANE4LSV_LECID	4-Warning	[chars] elan [chars] LECIDs exhausted	The LANE server specified has 65279 clients. No more can be added.	-	"Change the configurations to avoid trying to have more than 65279 LANE\n\n clients on this server."
LANE-5-UPDOWN	5-Notice	[chars] [chars] [chars]: [chars] changed state to [chars]	A LANE component changed state to up/down.	-	"If this event is expected then take no action. Otherwise\n\n please contact a technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
LANE-6-INFO	6-Information	[chars]	LANE subsystem simple informational messages.	-	"None."
LANE-6-LEC_INFO	6-Information	[chars]	LANE client informational messages.	-	"None."
LANE-6-LECS_INFO	6-Information	[chars]	Simple informational LECS messages.	-	"None."
LANE-6-LES_INFO	6-Information	[chars]	Simple informational LES messages.	-	"None."
LANMGR2NOMEMORY	2-Critical	No memory available: [chars]	The requested operation failed because of a low memory condition.	-	"Reduce other system activity to ease memory demands. If conditions\n\ warrant upgrade to a larger memory configuration."
LANMGR4BADRINGNUM	4-Warning	Ring number mismatch on [chars] shutting down the interface		-	"Check all bridges connected to this Token Ring and ensure that they\n\ are using the same assigned ring number."
LANMGR4BADUCALL	4-Warning	Unexpected call [chars] from LLC2 for Bridge [node]x-[hec]-[node]x	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
LANMGR4NORING	4-Warning	No ring info for [chars]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
LANMGR4OLDTRAMON	4-Warning	Cannot run RPS on [chars] Old TRAMON code.	The software on this interface cannot support the functions required\n\ for LAN Network Manager.	-	"Call your Cisco technical support representative about a\n\ firmware upgrade for this interface card."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LAPB-2-NOBUF	2-Critical	Interface [chars] no buffer available to [chars]	There was insufficient memory for the LAPB protocol engine to send a\n message.	lapb	"This message is acceptable if it occurs infrequently because the LAPB\n protocol is designed to handle loss of frames. Frequent occurrences can\n cause disruption of service. The system can be configured to ease\n memory demands or if conditions warrant the system can be upgraded to\n a larger memory configuration."
LAPB-3-BADPAYLOAD	3-Error	Interface [chars] Invalid payload value: [chars]	An internal software error occurred.	lapb	"If either of these messages recur call your technical support\n representative for assistance."
LAPB-3-CONEXTIERR	3-Error	[chars]: [chars]	An internal software error occurred.	lapb	"If either of these messages recur call your technical support\n representative for assistance."
LAPB-3-NOINPIDB	3-Error	Input idb not set	An internal software error occurred.	lapb	"If either of these messages recur call your technical support\n representative for assistance."
LAPB-3-NULLPAK	3-Error	Interface [chars] NULL packet ptr rvr [dec] vs [dec] vr [dec]	An internal software error occurred.	lapb	"If either of these messages recur call your technical support\n representative for assistance."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LAPB-3-TIMERERR	3-Error	LAPB timer task cannot be created	An internal software error occurred.	lapb	"If either of these messages recur call your technical support\n\n representative for assistance."
LAPB-4-CTRLBAD	4-Warning	Interface [chars] Invalid control field	A received FRMR reported a frame with an invalid control code.	lapb	"Check the serial line and the devices attached to the line."
LAPB-4-FRAMEERR	4-Warning	Interface [chars] Frame error: CF [hex] VS [dec] [chars] VR [dec] Reason [hex]	-	lapb	-
LAPB-4-INFOBAD	4-Warning	Interface [chars] Info field not permitted	A received FRMR frame reported that an information field was present\n\n in a frame where no information field is allowed.	lapb	"Check the serial line and the device attached to the line."
LAPB-4-INVNR	4-Warning	Interface [chars] Invalid NR value	A received FRMR reported a frame with an invalid NR value.	lapb	"Verify that the equipment attached to the serial line is configured\n\n with the same K value maximum number of outstanding I frames."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LAPB-4-N1TOOBIG	4-Warning	Interface [chars] N1 too large	A received FRMR reported an information frame that was too long.	lapb	"Verify that the equipment attached to the serial line is configured\n\n with the same N1 value. N1 is in bits and includes the entire frame\n\n plus 16 bits of CRC. However some equipment may require configuration\n\n in octets the omission of the two CRC octets or the omission of the\n\n three octets of LAPB control information."
LAPD-1-ISSU_NOMEMORY	1-Alert	msgtxt_nomemory	The requested operation could not be accomplished because of a low\n\n memory condition.	lapdcommon	"Reduce other system activity to ease memory demands. If conditions\n\n warrant upgrade to a larger memory configuration."
LAPD-3-ISSU_SENDFAILED	3-Error	\nLAPD ISSU: send message failed rc = [dec]\n	The sending of a message has failed.	lapdcommon	LOG_SIDSHTTECH_ACTION
LAPD-4-ISSU_INCOMPATIBLE	4-Warning	\nlapd-issu-compat: returned FALSE	The compatibility checking has failed	lapdcommon	LOG_SIDSHTTECH_ACTION
LAPD-4-ISSU_XFORM	4-Warning	\n[chars]: failed rc=[chars]	The transform has failed.	lapdcommon	LOG_SIDSHTTECH_ACTION
LAPP-1-OFF-I-NOMEMORY	1-Alert	msgtxt_nomemory	The requested operation could not be accomplished because of a low\n\n memory condition.	-	"Reduce other system activity to ease memory demands. If conditions\n\n warrant upgrade to a larger memory configuration."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
LAPP_OFF-1-NOMEMORY	1-Alert	msgtxt_nomemory	The requested operation could not be accomplished because of a low\n\n memory condition.	-	"Reduce other system activity to ease memory demands. If conditions\n\n warrant upgrade to a larger memory configuration."
LAPP_OFF-2-INTERNAL_ERROR	2-Critical	Internal software error [chars]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
LAPP_OFF-2-INTERNAL_ERROR	2-Critical	Internal software error [chars]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
LAPP_OFF-2-INTERNAL_ERROR	2-Critical	Internal software error [chars] cid=[dec]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
LAPP_OFF-2-INTERNAL_ERROR	2-Critical	Internal software error [chars] cid=[dec]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
LAPP_OFF-4-POF_B_MISCE	4-Warning	LAPP_OFF- Bad message received	An unexpected message was received.	-	LOG_SID_RECUR_ACTION
LAPP_OFF-4-POF_B_MISCE	4-Warning	LAPP_OFF- Bad message received	An unexpected message was received.	-	LOG_SID_RECUR_ACTION
LAPP_OFF-4-POF_N_SMIP	4-Warning	mmsp- Can't connect to the SMTP server	No connection was created to the specified SMTP server.	-	LOG_SID_RECUR_ACTION
LAPP_OFF-4-POF_N_SMIP	4-Warning	mmsp- Can't connect to the SMTP server	No connection was created to the specified SMTP server.	-	LOG_SID_RECUR_ACTION
LAPP_OFF-4-POF_N_SMIP_SND	4-Warning	FAXMAIL- Could not\n\nsend data to the SMTP server	A connection was made to the SMTP server but no data can be sent.	-	LOG_SID_RECUR_ACTION
LAPP_OFF-4-POF_N_SMIP_SND	4-Warning	FAXMAIL- Could not\n\nsend data to the SMTP server	A connection was made to the SMTP server but no data can be sent.	-	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LAP04SMTPCONCED	4-Warning	SMTP- failed [chars] [dec]	A connection attempt to a remote mail server was not successful.\n\ This unexpected behavior.	-	LOG_SID_NO_ACTION
LAP04SMTPCONCED	4-Warning	SMTP- failed [chars] [dec]	A connection attempt to a remote mail server was not successful.\n\ This unexpected behavior.	-	LOG_SID_NO_ACTION
LAP06APCASEBOML	6-Information	Call aborted cause = 0x[hec]	Call Aborted due to abnormal error	-	LOG_SID_NO_ACTION
LAP06APCASEBOML	6-Information	Call aborted cause = 0x[hec]	Call Aborted due to abnormal error	-	LOG_SID_NO_ACTION
LAPP_OFF6SMTP_OPEN	6-Information	SMTP- opening [chars] [dec]	A connection attempt ...	-	LOG_SID_NO_ACTION
LAPP_OFF6SMTP_OPEN	6-Information	SMTP- opening [chars] [dec]	A connection attempt ...	-	LOG_SID_NO_ACTION
LAP06SERPCASEFHED	6-Information	User authentication failed	Call aborted due to user authentication failure	-	LOG_SID_NO_ACTION
LAP06SERPCASEFHED	6-Information	User authentication failed	Call aborted due to user authentication failure	-	LOG_SID_NO_ACTION
LAP06SERPCASEFHED	6-Information	Document Media Service DMSP disconnected	Call aborted due to Document Media Service DMSP disconnect	-	LOG_SID_NO_ACTION
LAP06SERPCASEFHED	6-Information	Document Media Service DMSP disconnected	Call aborted due to Document Media Service DMSP disconnect	-	LOG_SID_NO_ACTION
LAP06SERPCASEFHED	6-Information	DMSP - no route - likely - ESMTP client did not connect to remote server	Call aborted due to DMSP no route disconnect - likely reason being no ESMTP connection to remote server	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>LAPMSEPCASVREDCIE</del>	6-Information	DMSP - no route - likely - ESMTP client did not connect to remote server	Call aborted due to DMSP no route disconnect - likely reason being no ESMTP connection to remote server	-	LOG_SID_NO_ACTION
<del>LAPMSEPCASVREDCIE</del>	6-Information	Fax protocol FMSP disconnected	Call aborted due to Fax sessionFMSP disconnect	-	LOG_SID_NO_ACTION
<del>LAPMSEPCASVREDCIE</del>	6-Information	Fax protocol FMSP disconnected	Call aborted due to Fax sessionFMSP disconnect	-	LOG_SID_NO_ACTION
<del>LAPMSEPCASVREDCIE</del>	6-Information	Internal error occurred	Call aborted due to an internal error	-	LOG_SID_NO_ACTION
<del>LAPMSEPCASVREDCIE</del>	6-Information	Internal error occurred	Call aborted due to an internal error	-	LOG_SID_NO_ACTION
<del>LAPMSEPCASVREDCIE</del>	6-Information	ESMTP client did not connect or lost connection to remote server	Call aborted due to loss of outbound ESMTP connection to remote server	-	LOG_SID_NO_ACTION
<del>LAPMSEPCASVREDCIE</del>	6-Information	ESMTP client did not connect or lost connection to remote server	Call aborted due to loss of outbound ESMTP connection to remote server	-	LOG_SID_NO_ACTION
<del>LAPMSEPCASVREDCIE</del>	6-Information	No memory available	Call aborted due to insufficient memory being available	-	LOG_SID_NO_ACTION
<del>LAPMSEPCASVREDCIE</del>	6-Information	No memory available	Call aborted due to insufficient memory being available	-	LOG_SID_NO_ACTION
<del>LAPMSEPCASVREDCIE</del>	6-Information	Normal call clearing	Call clearing occurred normally	-	LOG_SID_NO_ACTION
<del>LAPMSEPCASVREDCIE</del>	6-Information	Normal call clearing	Call clearing occurred normally	-	LOG_SID_NO_ACTION
<del>LAPMSEPCASVREDCIE</del>	6-Information	Telephony interface VTSP disconnected	Call termination due to Telephony interface disconnect	-	LOG_SID_NO_ACTION
<del>LAPMSEPCASVREDCIE</del>	6-Information	Telephony interface VTSP disconnected	Call termination due to Telephony interface disconnect	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LAT-3-BADDATA	3-Error	Tty[node]Data pointer does not correspond to current packet	An internal software error occurred.	-	"If this message recurs contact your technical support representative."
LAT-3-BUFFULL	3-Error	Tty[node]data buffer full with count [dec]	An internal software error occurred.	-	"If this message recurs contact your technical support representative."
LAT-3-NOSYNC	3-Error	Tty[node]Output data ptrs out of sync with byte count	An internal software error occurred.	-	"If this message recurs contact your technical support representative."
LAT-3-NULLIDB	3-Error	Null IDB pointer with destination [enet]	An internal software error occurred.	-	"If this message recurs contact your technical support representative."
LAT-3-QBSPACED	3-Error	Queue block at [hec] not found for HI connection	An internal software error occurred.	-	"If this message recurs contact your technical support representative."
LAT-3-REUSE	3-Error	Tty[node]Attempt to re-use slot array empty = [dec] fill = [dec]	An internal software error occurred.	-	"If this message recurs contact your technical support representative."
LAIRNUMWRAPBLCN	3-Error	ERRMSG_NOFLAGS	-	-	-
LAIRNUMWRAPBLCN	3-Error	ERRMSG_NOFLAGS	-	-	-
LAYER3LPMCAPACITY10	6-Information	Warning: LPM 100[node]capacity is reached. Used [dec] Available: [dec] Additional routes will not be installed in LPM	100 percent of LPM table capacity has been utilized. Additional routes will not be installed in LPM	iiot-sw-layer3	LOG_SID_NO_ACTION
LAYER3LPMCAPACITY90	6-Information	Warning: LPM 90[node]capacity is reached. Space Used: [dec] Available: [dec] v4 Route: [dec] v6 Route: [dec].	90 percent of LPM table capacity has been utilized.	iiot-sw-layer3	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LAYER3LPMCAPACITY95	6-Information	Warning: LPM 95[node]capacity is reached. Space Used: [dec] Available: [dec] v4 Route: [dec] v6 Route: [dec].	95 percent of LPM table capacity has been utilized.	iiot-sw-layer3	LOG_STD_NO_ACTION
LAYER3LPMCAPACITY98	6-Information	Warning: LPM 98[node]capacity is reached. Space Used: [dec] Available: [dec] v4 Route: [dec] v6 Route: [dec].	98 percent of LPM table capacity has been utilized.	iiot-sw-layer3	LOG_STD_NO_ACTION
LAYER3LPMCAPACITY99	6-Information	Warning: LPM 99[node]capacity is reached. Space Used: [dec] Available: [dec] v4 Route: [dec] v6 Route: [dec].	99 percent of LPM table capacity has been utilized.	iiot-sw-layer3	LOG_STD_NO_ACTION
LAYER3LPMCAPACITYMG	6-Information	Error: LPM IP[chars] 100[node]capacity is reached.	LPM table capacity has been completely utilized. No space for more entries.	iiot-sw-layer3	LOG_STD_NO_ACTION
LAYER2QFPALLOCATION	3-Error	Allocation of[chars] memory failed for layer 2 bridging feature in QFP	Allocation of memory by the QFP layer 2 bridging feature microcode failed. The name of the memory chunk is specified in the message. This indicates a software failure	qfp-bridging	LOG_STD_ACTION
LAYER2BRIDGEBULKSYNC	3-Error	rg [dec]	There was a failure such that Layer 2 bridge domain bulk sync did not occur	cpp-ucode	LOG_STD_ACTION
LAYER2BRIDGEANALYSIS	3-Error	state [dec]	An invalid HA state was received from the HA infrastructure.	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LAYER2_BRIDGE_INIT_FAILED	3-Error	Initialization of the layer 2 bridging feature in QFP failed	Initialization of the layer 2 bridging feature in the QFP failed. This indicates a software failure.	qfp-bridging	LOG_STD_ACTION
LAYER2_BRIDGE_PKT_REP_INIT_FAILED	3-Error	Failed to register with generic packet replication for layer 2 bridging feature in QFP	Layer 2 bridging initialization of packet replication registration failed.	qfp-bridging	LOG_STD_ACTION
LAYER2_SVBALOC_FAILED	3-Error	Allocation of [chars] memory failed for SVI feature in QFP	Allocation of memory by the QFP SVI feature microcode failed. The name of the memory chunk is specified in the message. This indicates a software failure	qfp-switch-infra	LOG_STD_ACTION
LAYER2_SVBINT_FAILED	3-Error	Initialization of the SVI feature in QFP failed	Initialization of the SVI feature in the QFP failed. This indicates a software failure.	qfp-switch-infra	LOG_STD_ACTION
LAYER2_SV_PKT_REP_INIT_FAILED	3-Error	Failed to register with generic packet replication for SVI feature in QFP	SVI initialization of packet replication registration failed.	qfp-switch-infra	LOG_STD_ACTION
IB3ACL_ICB_REG_ERRCR	3-Error	Failed to registered Link Bundle ACL feature control block	For the given interface failed to register the ACL feature control block.	gsr-link-bundling	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LB3CHUNK_CREATE_FAIL	3-Error	[chars]channel: failed to create chunk	An internal data structure called a chunk and used for channel route processor - line card interprocess communications failed to be created. Such interprocess communication may be impeded.	gsr-link-bundling	LOG_STD_ACTION
LB3CHAN_ADDR_ALLOC_ERROR	3-Error	Channel [dec] error in MAC address allocation configured MAC address [enet] actual MAC address [dec]	For the given channel number addition of the first member caused a failure in changing the MAC address of the channel to that of this first member.	gsr-link-bundling	LOG_STD_ACTION
LB3CHAN_CMD_REPLAY_FAIL	3-Error	Failed to register bundle interface [chars] for Command Replay service	For the given link bundle interface failed to register it for the Command Replay service.	gsr-link-bundling	LOG_STD_ACTION
LB3CHAN_FCB_ERROR	3-Error	Bundle creation feature callback failed for [chars]	For the given link bundle interface failed to create its feature callback.	gsr-link-bundling	LOG_STD_ACTION
LB3FEATURE_ACL_APPLY_ERROR	3-Error	Failed to apply ACL [dec] to interface [chars]. Removing new ACL config reapplying old ACL [dec].	For the given member interface or subinterface failed to apply the given ACL. This new ACL configuration is removed from the bundle and the old ACL configuration if any is reapplied to the bundle. The new ACL that failed to be applied is removed in order to maintain consistent state for the whole bundle.	gsr-link-bundling	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IB3FEAURE_ACL_REG_ERRCR	3-Error	Failed to register ACL control block with Link Bundle subinterface module	For the given interface failed to register the ACL feature control block. This happened during install ACL support for link bundling. ACL support installation for link bundling is aborted.	gsr-link-bundling	LOG_STD_ACTION
IB3FEAURE_INSTALL_ERRCR	3-Error	One or more NULL feature control block members	In installing link bundling feature support there were one or more NULL function pointers used in a feature control block. Installation of the feature support is aborted.	gsr-link-bundling	LOG_STD_ACTION
IB3FEAURE_MDIE_ERRCR	3-Error	Failed to create Link Bundle Feature ListQ	In initializing link bundling feature support an internal list queue failed to be created.	gsr-link-bundling	LOG_STD_ACTION
IB3FEAURE_REG_ERRCR	3-Error	One or more NULL feature callbacks in the passed in Feature Control Block	In registering a feature for services from link bundling feature support there were one or more NULL function pointers used as function callbacks. Aborted the feature registration as a result.	gsr-link-bundling	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IBFUNCTIONVEC_EMPTY</del>	3-Error	Empty link bundling function vectors	One or more function vectors used in generic etherchannel and poschannel code was null i.e. not initialized. This is a severe error resulting from a coding error. Crash will happen because this error prevents the proper functioning of the ether or pos channel features.	gsr-link-bundling	LOG_STD_ACTION
<del>IBCFANMREG_FAILURE</del>	3-Error	Failed to register bundle interface [chars] for Command Replay service	For the given link bundle interface failed to register it for the Command Replay service.	gsr-link-bundling	LOG_STD_ACTION
<del>IBPOCHANFCB_ERROR</del>	3-Error	Bundle creation feature callback failed for [chars]	For the given link bundle interface failed to create its feature callback.	gsr-link-bundling	LOG_STD_ACTION
LB-3-SUBINT_ERROR	3-Error	[chars] [chars]	There was a subinterface error for the given interface.	gsr-link-bundling	LOG_STD_ACTION
<del>IBSUBINTSUBIF_FAILURE</del>	3-Error	Failed to registered Link Bundle subinterface control block	In initializing link bundling subinterface feature support could not register for notifications from the common link bundle infrastructure.	gsr-link-bundling	LOG_STD_ACTION
<del>IBSUBINTNOIF_FAILURE</del>	3-Error	Failed to create Link Bundle Subinterface ClientQ	In initializing link bundling subinterface feature support an internal subinterface client queue failed to be created.	gsr-link-bundling	"Copy the error message exactly as it appears and report it to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>IB5</del> IB5INTNOIFRGIAURE	3-Error	NULL notification callback	In registering a client for service from the Link Bundling subinterface module the callback notification callback function was NULL.	gsr-link-bundling	LOG_STD_ACTION
<del>IB5</del> IB5CHANMEMBRADPSE	5-Notice	[chars] added as passive member to [chars]channel[dec]	The given interface was added as a passive member in the given channel number.	gsr-link-bundling	LOG_SID_NO_ACTION
IB5CHAN_MEMBER_IN	5-Notice	[chars] added as member-[dec] to [chars]channel[dec]	The given channel member interface was added to the given channel number.	gsr-link-bundling	LOG_SID_NO_ACTION
<del>IB5</del> IB5CHANMEMBRMOIYCKE	5-Notice	[chars] moved to active state as member-[dec] in [chars]channel[dec]	The given etherchannel member interface became an active member in the given channel number.	gsr-link-bundling	LOG_SID_NO_ACTION
<del>IB5</del> IB5CHANMEMBRMOIYSE	5-Notice	[chars] moved to passive state in [chars]channel[dec]	The given channel member interface became a passive member in the given channel number.	gsr-link-bundling	LOG_SID_NO_ACTION
IB5CHAN_MEMBER_OUT	5-Notice	[chars] taken out of [chars]channel[dec]	The given channel member interface was taken out of the given channel number.	gsr-link-bundling	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LCB-3-LOCKFAILURE	3-Error	Multiple LCB event processes scheduled	This message occurs when LCB event process fails to lock the\n\ semaphore which is used to prevent multiple LCB processes from\n\ running. This implies that multiple LCB processes have been\n\ scheduled to run which should not happen	-	"Try executing the command again after a few minutes. If the problem\n\ persists contact Cisco Technical support"
LCB-3-QUEUEFAILURE	3-Error	LCB process unable to create event queue	Unable to create LCB event queue. LCB process quit. The operating\n\ system was unable to allocate RAM space for the queue	-	"Try executing the command again after a few minutes. If the problem\n\ persists it indicates a lack of RAM space. Most likely the router\n\ image requires more system memory RAM than the router contains."
ICD <del>SLA</del> 3CHAR <del>ERR</del>	3-Error	Invalid character	This character is not supported by card LCD	cmts-platform	"Copy the error message exactly as it appears and report it to your " "technical support"
ICD <del>SLA</del> 4INUT <del>ERR</del>	4-Warning	Invalid input DS [dec] US [dec] channels	Wrong number of D/S or U/S channels	cmts-platform	"Copy the error message exactly as it appears and report it to your" " technical support"
ICD <del>SLA</del> 4STAT <del>ERR</del>	4-Warning	Invalid status	Invalid status bit	cmts-platform	"Copy the error message exactly as it appears and report it to your" " technical support"
ICHANRA3UNEXICED	3-Error	[chars]	An unexpected error has occurred while performing a linecard HA action	iosxe-iosd-lcha	LOGSIDICHASUPACION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LCHA_INRA4CUTOVER	4-Warning	Cutover request received from slot %u	A cutover interrupt received from a failing linecard	cmts-platform-infra	"Check core files and crashinfo files. Collect tech-support logs. Collect the system log using CLI 'show logging' and LCHA log on SUP using CLI 'show lcha logging level noise'."
LCHA_INRA4FORCE_RESET	4-Warning	Reset slot [node]for reason: [chars]	The SUP forced a linecard to reload for the given reason.	cmts-platform-infra	LOG_SID_NO_ACTION
LCHA_INRA5SW_RESET	5-Notice	Soft-reset slot [node][chars]	The SUP software reset linecard's processes without HW reset it.	cmts-platform-infra	LOG_SID_NO_ACTION
LCHA_INRA6LCHA_NO	6-Information	[chars]	lcha information for better monitor chassis lcha relates status	-	LOG_SID_NO_ACTION
LCHA-3-CFR_LIST	3-Error	Remove an element before destroy [chars]: ch [dec] [byte] [dec] ps [dec] [byte] [dec] src_macaddr=[enet] ip_prot=[node]port=%u	Remove an element from interdb cfr_list before destroy the list.	iosxe-iosd-lcha	"Reset the system"
LCHA-4-DYN_SRV	4-Warning	CM [enet] [chars] transaction id [dec] is not end before lc switch	Dynamic service not finished	iosxe-iosd-lcha	LOG_SID_NO_ACTION
LCHA-4-RF_CHANNEL_OUT_OF_RANGE	4-Warning	CM [enet] RF channel id [dec] is out of range [dec]	RF channel index out of range	iosxe-iosd-lcha	LOG_SID_NO_ACTION
LCTAG_ALLOC3LCON	3-Error	ERRMSG_NOFLAGS	-	-	-
LCTAG_ALLOC3LCON	3-Error	ERRMSG_NOFLAGS	-	-	-
LCMDC3ACCESS_FAIL	3-Error	Alarm: [chars] [chars] [chars] [chars]	Submit An alarm - Prints out descriptive message	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ICMDC3BICNFCRAE1AL	3-Error	Transparent Interface Creation Failed for slot [[dec]]	Interface data structure creation/initialization failed	-	LOG_STD_ACTION
ICMDC3EOPNOLG1AL	3-Error	Egress Loss of Light: [chars]	Egress side No Light	-	LOG_STD_ACTION
ICMDC3EOPNOLG1PAL	3-Error	Egress Loss of Light Prealarm: [chars]	CDL Drop FIFO Overflow Prealarm	-	LOG_STD_ACTION
ICMDC3EIHDC1PBK1AL	3-Error	Alarm: [chars] [chars] [chars] [chars] [chars]	Submit An alarm - Prints out descriptive message	-	LOG_STD_ACTION
ICMDC3FCGA_ACCESS1AL	3-Error	Alarm: [chars] [chars] [chars] [chars] [chars]	Submit An alarm - Prints out descriptive message	-	LOG_STD_ACTION
ICMDC3DROM_ACCESS1AL	3-Error	Alarm: [chars] [chars] [chars] [chars] [chars]	Submit An alarm - Prints out descriptive message	-	LOG_STD_ACTION
ICMDC3DROMCRC1AL	3-Error	IDPROM CRC check failed [[chars]]	CRC check failed for IDPROM	-	LOG_STD_ACTION
ICMDC3DROMMACH1AL	3-Error	IDPROM mismatch read failed [[chars]]	check with cached value fail	-	LOG_STD_ACTION
ICMDC3DROMRDF1AL	3-Error	IDPROM read failed [[chars]].\n \tThe card may not be inserted correctly. Please ensure that card is\n \tinserted completely and then please fasten the screws completely.	The read error occurred when accessing the IDPROM	-	LOG_STD_ACTION
ICMDC3INT_LPBK_FAIL	3-Error	Alarm: [chars] [chars] [chars] [chars] [chars]	Submit An alarm - Prints out descriptive message	-	LOG_STD_ACTION
ICMDC3NICNFCRAE1AL	3-Error	Interface Create Failed [[chars]]	Interface data structure creation/initialization failed	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ICMDC3NFDEIEFALD	3-Error	Interface Delete Failed [[chars]]	Interface data structure deletion failed	-	LOG_STD_ACTION
ICMDC3NIRPENDING	3-Error	Pending unexpected interrupt [addr [hex] = [hex]]	One or more pending unexpected interrupts	-	LOG_STD_ACTION
ICMDC3NAIDCKRAIE	3-Error	Non supported clock rate [dec] Khz	The entered clock rate in Khz is not supported	-	LOG_STD_ACTION
ICMDC3NAIDSGRAIE	3-Error	Non supported signal rate [dec]	The entered enum signal rate is invalid	-	LOG_STD_ACTION
ICMDC3LASR_DEGRADE	3-Error	Alarm: [chars] [chars] [chars] [chars] [chars]	Submit An alarm - Prints out descriptive message	-	LOG_STD_ACTION
ICMDC3LASR_DEMAION	3-Error	Alarm: [chars] [chars] [chars] [chars] [chars]	Submit An alarm - Prints out descriptive message	-	LOG_STD_ACTION
ICMDC3LINE_LASR_FAL	3-Error	Alarm: [chars] [chars] [chars] [chars] [chars]	Submit An alarm - Prints out descriptive message	-	LOG_STD_ACTION
ICMDC3LKH_THURCFAL	3-Error	Alarm: [chars] [chars] [chars] [chars] [chars]	Submit An alarm - Prints out descriptive message	-	LOG_STD_ACTION
ICMDC3RMACRRESSET	3-Error	Magic Register Reset Slot [dec]	Magic Register Reset for Linecard in slot	-	LOG_STD_ACTION
ICMDC3RKA_DROMA	3-Error	Alarm: [chars] [chars] [chars] [chars] [chars]	Submit An alarm - Prints out descriptive message	-	LOG_STD_ACTION
ICMDC3MCDL_HCAM	3-Error	CDL HEC Err count [chars] [chars] [chars]	CDL HEC error count threshold exceeded	-	LOG_STD_ACTION
ICMDC3MCDL_RCFND	3-Error	CDL Drop FIFO OvrFL [chars] [chars] [chars]	CDL Drop FIFO Overflow Prealarm	-	LOG_STD_ACTION
ICMDC3MBCDRK_AIM	3-Error	Egress CDR Locking error [chars] [chars] [chars]	CDR is having trouble locking onto the signal.	-	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ICMDC3MBIPNIGAM	3-Error	Egress Loss of Light [chars] [chars] [chars]	Egress side No Light	-	LOG_STD_ACTION
ICMDC3MBIPNIGAM	3-Error	Egress Loss of Light Prealarm [chars] [chars] [chars]	-	-	LOG_STD_ACTION
ICMDC3MBIPKSWAM	3-Error	Egress Trunk Switch Mech. Failure [chars] [chars] [chars]	Egress side switch failed to switch position during auto-failover	-	LOG_STD_ACTION
ICMDC3MBISRDESKAM	3-Error	Egress Serdes Locking error [chars] [chars] [chars]	Serdes has trouble locking onto the signal	-	LOG_STD_ACTION
ICMDC3MBISRHRAM	3-Error	Egress Serdes Phase Error [chars] [chars] [chars]	Serdes has a phase error.	-	LOG_STD_ACTION
ICMDC3MBIHCEIXAM	3-Error	Egress Fiber Channel/ESCON Line Err [chars] [chars] [chars]	Fiber Channel/ESCON Line code error count exceeded threshold	-	LOG_STD_ACTION
ICMDC3MBIHCSYAM	3-Error	Egress FC/ESCON Loss of Sync [chars] [chars] [chars]	Fiber Channel/ESCON Synchronization error	-	LOG_STD_ACTION
ICMDC3MBIHCEIXAM	3-Error	Ingress FC/ESCON Line Code err [chars] [chars] [chars]	Ingress FC/ESCON Line code error count threshold exceeded	-	LOG_STD_ACTION
ICMDC3MBIHCSYAM	3-Error	Ingress FC/ESCON Loss of Sync [chars] [chars] [chars]	Ingress Fiber Channel/ESCON Loss of Synchronization	-	LOG_STD_ACTION
ICMDC3MBGECEIX	3-Error	Egress GE Line Code Err count [chars] [chars] [chars]	GE Line Code error count exceeded threshold	-	LOG_STD_ACTION
ICMDC3MBGECSYAM	3-Error	Egress GE Loss of Sync [chars] [chars] [chars]	GE Loss of Synchronization error	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ICMDC3MBCELOS <del>Y</del> _AM	3-Error	Ingress GE Loss of Sync [chars] [chars] [chars]	Ingress GE Loss of the Synchronization	-	LOG_STD_ACTION
ICMDC3MBCHIEIX <del>A</del> _AM	3-Error	Ingress GE Line Code Err [chars] [chars] [chars]	Ingress Line Code error count threshold exceeded	-	LOG_STD_ACTION
ICMDC3MBIDRK <del>A</del> _AM	3-Error	Ingress CDR Locking error [chars] [chars] [chars]	Ingress CDR failed to lock onto signal	-	LOG_STD_ACTION
ICMDC3MBOPNOG <del>A</del> _AM	3-Error	Ingress Loss of Light [chars] [chars] [chars]	Loss of Light	-	LOG_STD_ACTION
ICMDC3MBHUSK <del>A</del> _AM	3-Error	Ingress Serdes Locking Error [chars] [chars] [chars]	Ingress Serdes signal lock error	-	LOG_STD_ACTION
ICMDC3MBHERR <del>A</del> _AM	3-Error	Ingress Serdes Phase error [chars] [chars] [chars]	Ingress Serdes out of Phase error	-	LOG_STD_ACTION
ICMDC3MBINOC <del>N</del> _ND	3-Error	Line OFC IND [chars] [chars] [chars]	Ingress OFC Indication	-	LOG_STD_ACTION
ICMDC3MBINTX <del>A</del> _AM	3-Error	Line Laser Failure [chars] [chars] [chars]	Laser failure	-	LOG_STD_ACTION
ICMDC3MBSHBP <del>A</del> _AM	3-Error	Egress SONET BIP Err count [chars] [chars] [chars]	SONET BIP Err count exceeded threshold	-	LOG_STD_ACTION
ICMDC3MBSHCF <del>A</del> _AM	3-Error	Egress SONET Loss of Frame [chars] [chars] [chars]	SONET Loss of Frame error	-	LOG_STD_ACTION
ICMDC3MBSHSF <del>A</del> _AM	3-Error	Egress SONET SEF Prealarm [chars] [chars] [chars]	Egress SONET Severely Errored Frame threshold exceeded	-	LOG_STD_ACTION
ICMDC3MBSHBP <del>A</del> _AM	3-Error	Ingress SONET BIP error [chars] [chars] [chars]	Ingress SONET BIP error count threshold exceeded	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ICMDC3MB_HIF_ALM	3-Error	Ingress SONET Loss of Frame [chars] [chars] [chars]	Ingress SONET Loss of frame	-	LOG_STD_ACTION
ICMDC3MB_HIF_SEF_ALM	3-Error	Ingress SONET SEF [chars] [chars] [chars]	Ingress SONET Severely Errored Frame threshold exceeded	-	LOG_STD_ACTION
ICMDC3MB_TK_OFC_IND	3-Error	Trunk OFC IND [chars] [chars] [chars]	Egress OFC Indication	-	LOG_STD_ACTION
ICMDC3MB_TK_TX_ALM	3-Error	Transmit Failure [chars] [chars] [chars]	Transmit failure	-	LOG_STD_ACTION
ICMDC3MB_TK_TX_IDGR	3-Error	Laser Degrade Trunk side [chars] [chars] [chars]	Laser Degrade failure on the transmit side	-	LOG_STD_ACTION
ICMDC3MB_TK_TX_WD	3-Error	Wavelength Deviation [chars] [chars] [chars]	Wavelength deviation error	-	LOG_STD_ACTION
ICMDC3MB_TK_WDGR_DEAM	3-Error	Trunk laser degrade: [chars] [chars] [chars]	Trunk laser wavelength degrade	-	LOG_STD_ACTION
ICMDC3MB_TK_WDGR_DEAM	3-Error	Trunk Laser wavelength deviation: [chars] [chars] [chars]	Trunk laser wavelength deviation	-	LOG_STD_ACTION
ICMDC3OPT_SWICH0_FAL	3-Error	Alarm: [chars] [chars] [chars] [chars]	Submit An alarm - Prints out descriptive message	-	LOG_STD_ACTION
ICMDC3OPT_SWICH1_FAL	3-Error	Alarm: [chars] [chars] [chars] [chars]	Submit An alarm - Prints out descriptive message	-	LOG_STD_ACTION
ICMDC3OPT_SWICH2_FAL	3-Error	Alarm: [chars] [chars] [chars] [chars]	Submit An alarm - Prints out descriptive message	-	LOG_STD_ACTION
ICMDC3OPT_SWICH3_FAL	3-Error	Alarm: [chars] [chars] [chars] [chars]	Submit An alarm - Prints out descriptive message	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LCMDC3OSC_HW_FAIL	3-Error	Alarm: [chars] [chars] [chars] [chars] [chars]	Submit An alarm - Prints out descriptive message	-	LOG_STD_ACTION
LCMDC3PORT_CREATE_FAILED	3-Error	Port Creation Failed [[chars]]	Port data structure creation/initialization failed	-	LOG_STD_ACTION
LCMDC3PORT_ASSERTED	3-Error	Unexpected portfail asserted	One or more unexpected portfails asserted	-	LOG_STD_ACTION
LCMDC3-RDWRFAIL	3-Error	Read/write failed [[chars]]	A read/write error occurred when accessing the hardware	-	LOG_STD_ACTION
LCMDC3READYPRESENT	3-Error	Card [slot [dec]] present but not ready	Egress side switch failed to switch position during auto-failover	-	LOG_STD_ACTION
LCMDC3IBOPNIGAM	3-Error	Loss of Light on Standby: [chars]	Ingress SONET BIP error count threshold exceeded	-	LOG_STD_ACTION
LCMDC3IKWDCRADEAM	3-Error	Trunk laser degrade: [chars]	Trunk laser wavelength degrade	-	LOG_STD_ACTION
LCMDC3IKWDEVIADNAM	3-Error	Trunk Laser wavelength deviation: [chars]	Trunk laser wavelength deviation	-	LOG_STD_ACTION
LCMDC3IKLASRDKRAE	3-Error	Alarm: [chars] [chars] [chars] [chars] [chars]	Submit An alarm - Prints out descriptive message	-	LOG_STD_ACTION
LCMDC3IKLASRDEAMN	3-Error	Alarm: [chars] [chars] [chars] [chars] [chars]	Submit An alarm - Prints out descriptive message	-	LOG_STD_ACTION
LCMDC3IKWLENCHDEAMN	3-Error	Alarm: [chars] [chars] [chars] [chars] [chars]	Submit An alarm - Prints out descriptive message	-	LOG_STD_ACTION
LCMDC3IKWLENCHDMACH	3-Error	Alarm: [chars] [chars] [chars] [chars] [chars]	Submit An alarm - Prints out descriptive message	-	LOG_STD_ACTION
LCMDC3WLENCKEFAIL	3-Error	Unexpected trunk laser wavelength: [chars]	Trunk laser wavelength is incorrect	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LCMDC4RATEMISMATCH	4-Warning	Encap rate mismatched: [chars]	The entered encap rate is not matched with xcvr type	-	LOG_STD_ACTION
LCMDC5DEFWAVELEN	5-Notice	Default wavelength selected: [chars]	The inserted transponder can not support cached hwsb->itu_num so the default wavelength is used instead	-	LOG_STD_NO_ACTION
LCMDC6IX_ALARM_SOK	6-Information	[chars]\n	Submit An alarm - Prints out descriptive message	-	LOG_STD_ACTION
LCON-3-ALLOC	3-Error	Cannot alloc [chars]	An attempt to allocate a LDP data structure failed\n because of a low memory condition.	mpls-ldp	<del>ADNSLOWMEMORYCON</del>
LCON-3-ALLOC	3-Error	Cannot alloc [chars]	An attempt to allocate a LDP data structure failed\n because of a low memory condition.	mpls-ldp	<del>ADNSLOWMEMORYCON</del>
LCON-3-ALLOC	3-Error	Cannot alloc [chars]	An attempt to allocate a LDP data structure failed\n because of a low memory condition.	mpls-ldp	<del>ADNSLOWMEMORYCON</del>
LCON-3-CONSISTENCY	3-Error	[chars]	An action attempted by the Label Control process encountered\n an unexpected condition.	mpls-ldp	"The request will be ignored. If it repeatedly occurs\n copy the message exactly as it appears and report it to your\n technical service representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
LCON-3-CONSISTENCY	3-Error	[chars]	An action attempted by the Label Control process encountered an unexpected condition.	mpls-ldp	"The request will be ignored. If it repeatedly occurs copy the message exactly as it appears and report it to your technical service representative."
LCON-3-CONSISTENCY	3-Error	[chars]	An action attempted by the Label Control process encountered an unexpected condition.	mpls-ldp	"The request will be ignored. If it repeatedly occurs copy the message exactly as it appears and report it to your technical service representative."
LCON-3-DEADADJ	3-Error	[chars] [chars]	An unexpected failure occurred while building a LDP protocol message for transmission to a LDP peer. It occurred when attempting to add a label binding or an address to the message.	mpls-ldp	<del>ACT COPY REPORT TO</del>
LCON-3-DEADADJ	3-Error	[chars] [chars]	An unexpected failure occurred while building a LDP protocol message for transmission to a LDP peer. It occurred when attempting to add a label binding or an address to the message.	mpls-ldp	<del>ACT COPY REPORT TO</del>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LCON-3-DEADADJ	3-Error	[chars] [chars]	An unexpected failure occurred while building a LDP protocol\n\n message for transmission to a LDP peer. It occurred when\n\n attempting to add a label binding or an address to the message.	mpls-ldp	ACI0N0PYR0R0TAC0N
IC0N0HCAS0BN0NG0H0	3-Error	Unexpected blist_type [dec] for [chars] message from peer [chars]	A LDP protocol message received from a LDP peer contained an\n\n unexpected binding list type. The message will be ignored.	mpls-ldp	ACI0N0NCR0R0H0TAC0N
IC0N0HCAS0BN0NG0H0	3-Error	Unexpected blist_type [dec] for [chars] message from peer [chars]	A LDP protocol message received from a LDP peer contained an\n\n unexpected binding list type. The message will be ignored.	mpls-ldp	ACI0N0NCR0R0H0TAC0N
IC0N0HCAS0BN0NG0H0	3-Error	Unexpected blist_type [dec] for [chars] message from peer [chars]	A LDP protocol message received from a LDP peer contained an\n\n unexpected binding list type. The message will be ignored.	mpls-ldp	ACI0N0NCR0R0H0TAC0N
IC0N03DUP_ADDR_RCVD	3-Error	Duplicate Address [chars] advertised by peer [chars] is already bound to [chars]	ERR0R0N0ADR0R0TAC0N	mpls-ldp	ACI0N0NCR0R0H0TAC0N

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LCON3DUP_ADDR_RCVD	3-Error	Duplicate Address [chars] advertised by peer [chars] is already bound to [chars]	<del>BRAND_ADDR_BAGCN</del>	mpls-ldp	<del>ACDNTOGGEAGPAGCN</del>
LCON3DUP_ADDR_RCVD	3-Error	Duplicate Address [chars] advertised by peer [chars] is already bound to [chars]	<del>BRAND_ADDR_BAGCN</del>	mpls-ldp	<del>ACDNTOGGEAGPAGCN</del>
LCON-3-EVENTQ	3-Error	Can't alloc work item for [chars]	An operation on the LDP Directed Adjacency data structure\n\n failed.	mpls-ldp	<del>ACDNCPYRHRPAGCN</del>
LCON-3-EVENTQ	3-Error	Can't alloc work item for [chars]	An operation on the LDP Directed Adjacency data structure\n\n failed.	mpls-ldp	<del>ACDNCPYRHRPAGCN</del>
LCON-3-EVENTQ	3-Error	Can't alloc work item for [chars]	An operation on the LDP Directed Adjacency data structure\n\n failed.	mpls-ldp	<del>ACDNCPYRHRPAGCN</del>
LCON-3-INIT	3-Error	process cannot initialize	The label distribution and control process failed to initialize\n\n itself. The probable cause is insufficient memory.	mpls-ldp	<del>ACDSDLOWMEMOYAGCN</del>
LCON-3-INIT	3-Error	process cannot initialize	The label distribution and control process failed to initialize\n\n itself. The probable cause is insufficient memory.	mpls-ldp	<del>ACDSDLOWMEMOYAGCN</del>
LCON-3-INIT	3-Error	process cannot initialize	The label distribution and control process failed to initialize\n\n itself. The probable cause is insufficient memory.	mpls-ldp	<del>ACDSDLOWMEMOYAGCN</del>



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
LCON-3LABEL_REGION	3-Error	Platform specified information for label region [chars] is invalid.	A platform service routine provides label region information about\n\n all label regions it supports. This error message is printed when\n\n the service routine does not specify its label region information\n\n correctly.	mpls-ldp	"Report this condition to your technical service representative."
LCON-3LABEL_REGION	3-Error	Platform specified information for label region [chars] is invalid.	A platform service routine provides label region information about\n\n all label regions it supports. This error message is printed when\n\n the service routine does not specify its label region information\n\n correctly.	mpls-ldp	"Report this condition to your technical service representative."
LCON-3LABEL_REGION	3-Error	Platform specified information for label region [chars] is invalid.	A platform service routine provides label region information about\n\n all label regions it supports. This error message is printed when\n\n the service routine does not specify its label region information\n\n correctly.	mpls-ldp	"Report this condition to your technical service representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ICON3LAIREVNUMWRAP	3-Error	Label Local Address Table revision number wrapped	The revision number used to manage advertisement of interface addresses to LDP peers overflowed. This will result in faulty advertisement of interface addresses to LDP peers and faulty label switching on those peers.	mpls-ldp	"To restore proper interface address advertisement reboot the platform. Report this condition to your technical service representative."
ICON3LAIREVNUMWRAP	3-Error	Label Local Address Table revision number wrapped	The revision number used to manage advertisement of interface addresses to LDP peers overflowed. This will result in faulty advertisement of interface addresses to LDP peers and faulty label switching on those peers.	mpls-ldp	"To restore proper interface address advertisement reboot the platform. Report this condition to your technical service representative."
ICON3LAIREVNUMWRAP	3-Error	Label Local Address Table revision number wrapped	The revision number used to manage advertisement of interface addresses to LDP peers overflowed. This will result in faulty advertisement of interface addresses to LDP peers and faulty label switching on those peers.	mpls-ldp	"To restore proper interface address advertisement reboot the platform. Report this condition to your technical service representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LCON3LCTAG_ALLOC	3-Error	Cannot allocate local label	-	mpls-ldp	"The number of labels available for allocation can be changed\n by the <CmdBold>mpls label range ...<NoCmdBold> configuration command.\n Consult with your technical service representative to determine\n whether you should use this command to increase the number of\n available labels."
LCON3LCTAG_ALLOC	3-Error	Cannot allocate local label	-	mpls-ldp	"The number of labels available for allocation can be changed\n by the <CmdBold>mpls label range ...<NoCmdBold> configuration command.\n Consult with your technical service representative to determine\n whether you should use this command to increase the number of\n available labels."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LCON3LCTAG_ALLOC	3-Error	Cannot allocate local label	-	mpls-ldp	"The number of labels available for allocation can be changed\n\ by the <CmdBold>mpls label range ...<NoCmdBold> configuration command.\n\ Consult with your technical service representative to determine\n\ whether you should use this command to increase the number of\n\ available labels."
LCON-3-LDPID	3-Error	peer [chars] LDP Id/Addr mapping problem [chars]	<del>ERRANDRETAGCON</del>	mpls-ldp	<del>ACTOGEAGPACON</del>
LCON-3-LDPID	3-Error	peer [chars] LDP Id/Addr mapping problem [chars]	<del>ERRANDRETAGCON</del>	mpls-ldp	<del>ACTOGEAGPACON</del>
LCON-3-LDPID	3-Error	peer [chars] LDP Id/Addr mapping problem [chars]	<del>ERRANDRETAGCON</del>	mpls-ldp	<del>ACTOGEAGPACON</del>
LCON-3-PEERSM	3-Error	LDP peer [chars][chars]: [chars]	An operation on the state machine for the label distribution and\n\ control process failed.	mpls-ldp	<del>ACTNCPYRRTACON</del>
LCON-3-PEERSM	3-Error	LDP peer [chars][chars]: [chars]	An operation on the state machine for the label distribution and\n\ control process failed.	mpls-ldp	<del>ACTNCPYRRTACON</del>
LCON-3-PEERSM	3-Error	LDP peer [chars][chars]: [chars]	An operation on the state machine for the label distribution and\n\ control process failed.	mpls-ldp	<del>ACTNCPYRRTACON</del>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LCON-3-PROCESS	3-Error	process not created	An attempt to create the label distribution and control process\n\ failed. The probable cause is insufficient memory.	mpls-ldp	<del>ACDN_SLOW_MEMORY_KCON</del>
LCON-3-PROCESS	3-Error	process not created	An attempt to create the label distribution and control process\n\ failed. The probable cause is insufficient memory.	mpls-ldp	<del>ACDN_SLOW_MEMORY_KCON</del>
LCON-3-PROCESS	3-Error	process not created	An attempt to create the label distribution and control process\n\ failed. The probable cause is insufficient memory.	mpls-ldp	<del>ACDN_SLOW_MEMORY_KCON</del>
LCON-3-RADIXTREE	3-Error	[chars]LIB walk failed [chars]	-	mpls-ldp	<del>ACDN_COPY_ERROR_KCON</del>
LCON-3-RADIXTREE	3-Error	[chars]LIB walk failed [chars]	-	mpls-ldp	<del>ACDN_COPY_ERROR_KCON</del>
LCON-3-RADIXTREE	3-Error	[chars]LIB walk failed [chars]	-	mpls-ldp	<del>ACDN_COPY_ERROR_KCON</del>
LCON-3-REGISTRY	3-Error	Unexpected [chars] for reg_invoke_[chars]	-	mpls-ldp	-
LCON-3-REGISTRY	3-Error	Unexpected [chars] for reg_invoke_[chars]	-	mpls-ldp	-
LCON-3-REGISTRY	3-Error	Unexpected [chars] for reg_invoke_[chars]	-	mpls-ldp	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LCON-4-ADDR_PROC	4-Warning	Can't create lcon addr proc	-	mpls-ldp	"This is an informational message. As long as it needs the\n\n process the system will regularly attempt to create it. If\n\n this message occurs repeatedly copy it exactly as it appears\n\n and report it to your technical service representative."
LCON-4-ADDR_PROC	4-Warning	Can't create lcon addr proc	-	mpls-ldp	"This is an informational message. As long as it needs the\n\n process the system will regularly attempt to create it. If\n\n this message occurs repeatedly copy it exactly as it appears\n\n and report it to your technical service representative."
LCON-4-ADDR_PROC	4-Warning	Can't create lcon addr proc	-	mpls-ldp	"This is an informational message. As long as it needs the\n\n process the system will regularly attempt to create it. If\n\n this message occurs repeatedly copy it exactly as it appears\n\n and report it to your technical service representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
LCON-4-ADDRQ	4-Warning	Can't alloc work item for [chars]	-	mpls-ldp	"This is an informational message. The system remembers that\n\n it needs to do this work and will regularly attempt to queue\n\n the necessary work item. If this message occurs repeatedly\n\n copy it exactly as it appears and report it to your technical\n\n service representative."
LCON-4-ADDRQ	4-Warning	Can't alloc work item for [chars]	-	mpls-ldp	"This is an informational message. The system remembers that\n\n it needs to do this work and will regularly attempt to queue\n\n the necessary work item. If this message occurs repeatedly\n\n copy it exactly as it appears and report it to your technical\n\n service representative."
LCON-4-ADDRQ	4-Warning	Can't alloc work item for [chars]	-	mpls-ldp	"This is an informational message. The system remembers that\n\n it needs to do this work and will regularly attempt to queue\n\n the necessary work item. If this message occurs repeatedly\n\n copy it exactly as it appears and report it to your technical\n\n service representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ICON4CFGD_IBL_REGION	4-Warning	Adjusting configured label range to default range	The saved configuration has been ignored and the default label range\n\n is being used.	mpls-ldp	"Please reconfigure the label range to a valid range using <CmdBold>\n\n mpls label range ... <NoCmdBold> configuration command."
ICON4CFGD_IBL_REGION	4-Warning	Adjusting configured label range to default range	The saved configuration has been ignored and the default label range\n\n is being used.	mpls-ldp	"Please reconfigure the label range to a valid range using <CmdBold>\n\n mpls label range ... <NoCmdBold> configuration command."
ICON4CFGD_IBL_REGION	4-Warning	Adjusting configured label range to default range	The saved configuration has been ignored and the default label range\n\n is being used.	mpls-ldp	"Please reconfigure the label range to a valid range using <CmdBold>\n\n mpls label range ... <NoCmdBold> configuration command."
ICON4INT_TAG_ALLOC	4-Warning	Failure to initialize label allocation pool [dec]	The system was unable to initialize the data structure used to support\n\n allocation of labels for label switching for the specified label pool.	mpls-ldp	-
ICON4INT_TAG_ALLOC	4-Warning	Failure to initialize label allocation pool [dec]	The system was unable to initialize the data structure used to support\n\n allocation of labels for label switching for the specified label pool.	mpls-ldp	-



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LCON4INT_TAG_ALLOC	4-Warning	Failure to initialize label allocation pool [dec]	The system was unable to initialize the data structure used to support\n\ allocation of labels for label switching for the specified label pool.	mpls-ldp	-
LCON-5-SEND	5-Notice	cannot queue LDP [chars] message for [chars][chars]	-	mpls-ldp	"This is an informational message. Failure to queue a message for\n\ a peer should occur only when the LDP session with the peer no\n\ longer exists. The software should recover from this\n\ situation by discarding the LDP session and trying to\n\ establish a new one. If this message occurs repeatedly copy\n\ it exactly as it appears and report it to your technical\n\ service representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LCON-5-SEND	5-Notice	cannot queue LDP [chars] message for [chars][chars]	-	mpls-ldp	"This is an informational message. Failure to queue a message for\n a peer should occur only when the LDP session with the peer no\n longer exists. The software should recover from this\n situation by discarding the LDP session and trying to\n establish a new one. If this message occurs repeatedly copy\n it exactly as it appears and report it to your technical\n service representative."
LCON-5-SEND	5-Notice	cannot queue LDP [chars] message for [chars][chars]	-	mpls-ldp	"This is an informational message. Failure to queue a message for\n a peer should occur only when the LDP session with the peer no\n longer exists. The software should recover from this\n situation by discarding the LDP session and trying to\n establish a new one. If this message occurs repeatedly copy\n it exactly as it appears and report it to your technical\n service representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ICPR_NRA3</del> UNEXPECTED	3-Error	[chars]	An unexpected error has occurred while performing linecard IOSD or CDMAN process restart.	iosxe-iosd-lcpr	"Check the IPC status of the platform. Collect the system log using CLI 'show logging' and LCHA log on SUP using CLI 'show lcha logging level noise'. Collect the lchaman iosd-clc and cdman btrace logs."
<del>ICPR_NRA5</del> PROGRESSION	5-Notice	[chars]	LCPR generic progression information.	iosxe-iosd-lcpr	LOG_SID_NO_ACTION
<del>ICR2C1M5N1M5</del> MSCHAID	2-Critical	Checkpointing sync message was received on Standby RP but it was corrupted or there was an error processing it.	A sync message was sent from the Active RP and received on the Standby RP. The message was either empty corrupted or could not be processed by Standby client. If system is NOT in bulk sync mode then Standby RP will be reset.	ha-lcred-infra	"Informational. The linecard recovery " "infrastructure will take recovery actions."
<del>ICR2C1M5N1M5</del> MSCHAID	2-Critical	Checkpointing sync message was received on Standby RP but it was corrupted or there was an error processing it.	A sync message was sent from the Active RP and received on the Standby RP. The message was either empty corrupted or could not be processed by Standby client. If system is NOT in bulk sync mode then Standby RP will be reset.	ha-lcred-infra	"Informational. The linecard recovery " "infrastructure will take recovery actions."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>LCRED</del> <u>LCRED</u> <del>SYNC</del> <u>SYNC</u> <del>CH</del> <u>CH</u> <del>ALD</del> <u>ALD</u>	2-Critical	Checkpointing sync message to client on Standby RP was not received.	A sync message was sent from the Active RP but it was never received or was received in corrupted form on the Standby RP. The platform code has been notified and platform-specific recovery actions will be taken.	ha-lcred-infra	"Informational. The linecard recovery " "infrastructure will take recovery actions."
<del>LCRED</del> <u>LCRED</u> <del>SYNC</del> <u>SYNC</u> <del>CH</del> <u>CH</u> <del>ALD</del> <u>ALD</u>	2-Critical	Checkpointing sync message to client on Standby RP was not received.	A sync message was sent from the Active RP but it was never received or was received in corrupted form on the Standby RP. The platform code has been notified and platform-specific recovery actions will be taken.	ha-lcred-infra	"Informational. The linecard recovery " "infrastructure will take recovery actions."
<del>LCRED</del> <u>LCRED</u> <del>BSYS</del> <u>BSYS</u> <del>INIT</del> <u>INIT</u> <del>ALD</del> <u>ALD</u>	2-Critical	Subsystem failed during init phase with error [chars].	During subsystem initialization for LCRED Line Card Redundancy subsystem an unrecoverable error occurred. The system will come up and run fine but linecard redundancy will not be available for configuration and will not come up if it was already configured in start-config.	ha-lcred-infra	"You can continue to use the system without " "linecard redundancy. At your earliest convenience reloading the " "system might allow linecard redundancy subsystem to come up. In " "any case report the error message to TAC and include the " "following: 'show run' 'show redundancy linecard history' " "'show redundancy linecard all' and 'show version'."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LCRED_SBSM_INITAHD	2-Critical	Subsystem failed during init phase with error [chars].	During subsystem initialization for LCRED Line Card Redundancy subsystem an unrecoverable error occurred. The system will come up and run fine but linecard redundancy will not be available for configuration and will not come up if it was already configured in start-config.	ha-lcred-infra	"You can continue to use the system without " "linecard redundancy. At your earliest convenience reloading the " "system might allow linecard redundancy subsystem to come up. In " "any case report the error message to TAC and include the " "following: 'show run' 'show redundancy linecard history' " "'show redundancy linecard all' and 'show version'."
LCRED_SYNC_BUF_ERR	2-Critical	Could not get sync buffer to checkpoint data.	An attempt to get a sync buffer failed when trying to sync data from Active RP to Standby. This is likely a system memory issue. The platform code has been notified to take possible corrective action.	ha-lcred-infra	"Informational. The system will correct " "if possible."
LCRED_SYNC_BUF_ERR	2-Critical	Could not get sync buffer to checkpoint data.	An attempt to get a sync buffer failed when trying to sync data from Active RP to Standby. This is likely a system memory issue. The platform code has been notified to take possible corrective action.	ha-lcred-infra	"Informational. The system will correct " "if possible."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LCRED3CANT_SET_ROLE	3-Error	Couldn't set or clear slot or port roles for Line card [chars] idx=[dec].	Failed when attempting to set or clear the slot or port Active/Standby roles for a Line Card .	ha-lcred-infra	"This indicates an error during redundant " "linecard state progression. User should check redundancy config " "and try to remedy via CLI if not correct. Check config by " "'show redundancy linecard all' and 'show redundancy linecard " "group all'. If redundancy config cannot be corrected then " "open a TAC case attaching the info above and also 'show " "redundancy linecard history' 'show version' and 'show run'."
LCRED3CANT_SET_ROLE	3-Error	Couldn't set or clear slot or port roles for Line card [chars] idx=[dec].	Failed when attempting to set or clear the slot or port Active/Standby roles for a Line Card .	ha-lcred-infra	"This indicates an error during redundant " "linecard state progression. User should check redundancy config " "and try to remedy via CLI if not correct. Check config by " "'show redundancy linecard all' and 'show redundancy linecard " "group all'. If redundancy config cannot be corrected then " "open a TAC case attaching the info above and also 'show " "redundancy linecard history' 'show version' and 'show run'."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ICREDLNADREDDNF</del>	3-Error	Error occurred while configuring redundant interface [dec]/[dec]: [chars]	While configuring a redundant i/f the specified error occurred. This means the redundant configuration command was NOT successfully completed.	ha-lcred-infra	"First verify the command was correct and " "verify the current redundancy config with 'show redundancy " "linecard all' and 'show redundancy linecard group all'. If you " "feel the command was correct and failed anyway file a TAC " "case with the following: 'show run' 'show redundancy linecard " "history' 'show redundancy linecard all' 'show proc mem' and " "show version'."
<del>ICREDLNADREDDNF</del>	3-Error	Error occurred while configuring redundant interface [dec]/[dec]: [chars]	While configuring a redundant i/f the specified error occurred. This means the redundant configuration command was NOT successfully completed.	ha-lcred-infra	"First verify the command was correct and " "verify the current redundancy config with 'show redundancy " "linecard all' and 'show redundancy linecard group all'. If you " "feel the command was correct and failed anyway file a TAC " "case with the following: 'show run' 'show redundancy linecard " "history' 'show redundancy linecard all' 'show proc mem' and " "show version'."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LCRED-3-EREVENT1	3-Error	[chars] 0x[hex]	This message is used for reporting invalid values for parameters or database members.	ha-lcred-infra	"Check the redundancy configuration for the " "slot with 'show redundancy linecard all' and 'show " "redundancy linecard group all'. Fix the configuration " "if required and re-execute the command making sure " "any command parameters are correct. If it's still in " "error then file a case with TAC. In addition to the " "usual system information provide them with the output " "from above commands and 'show redundancy linecard " "history'."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LCRED-3-EREVENT1	3-Error	[chars] 0x[hec]	This message is used for reporting invalid values for parameters or database members.	ha-lcred-infra	"Check the redundancy configuration for the " "slot with 'show redundancy linecard all' and 'show " "redundancy linecard group all'. Fix the configuration " "if required and re-execute the command making sure " "any command parameters are correct. If it's still in " "error then file a case with TAC. In addition to the " "usual system information provide them with the output " "from above commands and 'show redundancy linecard " "history'."
<del>LCRED-3-EREVENT1</del>	3-Error	Creation of hwidb subblock for [chars] i/f [chars] failed.	Each redundant i/f whether active standby or virtual has a hwidb subblock that stores redundancy information about that i/f. If this subblock cannot be created then creation of the redundant i/f will fail.	ha-lcred-infra	"Try the CLI that triggered it again. If the " "error occurs again open a case with TAC. Report the output of " "'show redundancy linecard group all' and 'show redundancy " "linecard all' in addition to usual system configuration " "information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ICRED3HWIDB_SUBBLOCK_CREATE_FAIL	3-Error	Creation of hwidb subblock for [chars] i/f [chars] failed.	Each redundant i/f whether active standby or virtual has a hwidb subblock that stores redundancy information about that i/f. If this subblock cannot be created then creation of the redundant i/f will fail.	ha-lcred-infra	"Try the CLI that triggered it again. If the " "error occurs again open a case with TAC. Report the output of " "show redundancy linecard group all' and 'show redundancy " "linecard all' in addition to usual system configuration " "information."
ICRED3INVALID_DEBUG	3-Error	Invalid debug type parameter [node]specified.	The function responsible for turning debugging on/off was called with an invalid debug type code.	ha-lcred-infra	"Verify the debug command is available " "by 'debug redundancy lc ?' and try it again."
ICRED3INVALID_DEBUG	3-Error	Invalid debug type parameter [node]specified.	The function responsible for turning debugging on/off was called with an invalid debug type code.	ha-lcred-infra	"Verify the debug command is available " "by 'debug redundancy lc ?' and try it again."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LCRED-3-IPC	3-Error	\n[chars]	General IPC error.	ha-lcred-infra	<p>"Check redundancy configuration with " "show redundancy linecard all'. If the configuration is not " "what you expected try the commands again. If the configuration " "is correct and you get this message try switching over the " "linecard if the standby LC is configured and ready. Otherwise " "try resetting the linecard in the slot specified. If you still " "get the error submit a TAC case with the system information " "show redundancy linecard all' and 'show proc mem'."</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LCRED-3-IPC	3-Error	\n[chars]	General IPC error.	ha-lcred-infra	"Check redundancy configuration with " "show redundancy linecard all'. If the configuration is not " "what you expected try the commands again. If the configuration " "is correct and you get this message try switching over the " "linecard if the standby LC is configured and ready. Otherwise " "try resetting the linecard in the slot specified. If you still " "get the error submit a TAC case with the system information " "show redundancy linecard all' and 'show proc mem'."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LCRED-3-IPCPORT	3-Error	Can't Create IPC port [chars] error [chars] IPC err[chars].	Can't create IPC to receive traffic from peer.	ha-lcred-infra	"Check redundancy configuration with " "show redundancy linecard all'. If the configuration is not " "what you expected try the commands again. If the configuration " "is correct and you get this message try switching over the " "linecard if the standby LC is configured and ready. Otherwise " "try resetting the linecard in the slot specified. If you still " "get the error submit a TAC case with the system information " "show redundancy linecard all' and 'show proc mem'."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LCRED-3-IPCPOR	3-Error	Can't Create IPC port [chars] error [chars] IPC err[chars].	Can't create IPC to receive traffic from peer.	ha-lcred-infra	"Check redundancy configuration with " "show redundancy linecard all'. If the configuration is not " "what you expected try the commands again. If the configuration " "is correct and you get this message try switching over the " "linecard if the standby LC is configured and ready. Otherwise " "try resetting the linecard in the slot specified. If you still " "get the error submit a TAC case with the system information " "show redundancy linecard all' and 'show proc mem'."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ICREDLCCANTSETLTXRX	3-Error	Unable to set Active/Standby Tx/Rx selection for Line Card [chars] idx=[dec].	Platform driver rejected a request to set the Tx/Rx selectors for a redundant linecard.	ha-lcred-infra	"This indicates the platform was unable to "initialize linecard Active/STandby states. User should check " "redundancy config and try to remedy via CLI if not correct. " "Check config by 'show redundancy linecard all' and 'show " "redundancy linecard group all'. If redundancy config cannot " "be corrected then open a TAC case attaching the info above " "and also 'show redundancy linecard history' 'show version' " "and 'show run'."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LCREDLCCANTSETTXRX	3-Error	Unable to set Active/Standby Tx/Rx selection for Line Card [chars] idx=[dec].	Platform driver rejected a request to set the Tx/Rx selectors for a redundant linecard.	ha-lcred-infra	"This indicates the platform was unable to " "initialize linecard Active/Standby states. User should check " "redundancy config and try to remedy via CLI if not correct. " "Check config by 'show redundancy linecard all' and 'show " "redundancy linecard group all'. If redundancy config cannot " "be corrected then open a TAC case attaching the info above " "and also 'show redundancy linecard history' 'show version' " "and 'show run'."
LCREDLCCARDMMATCH	3-Error	Mismatch is seen between Inserted card type0x[node][dec] and	Inserted card type is rejected by lcred component due to mismatch between inserted card type and reserved card type	ha-lcred-infra	"This indicates the reserved card type is " "different than inserted card type. Check the reserve-cardtype setting " "in show run. Insert the card type same of reserve card type " "If the cards are of same type but still it shows mismatch then open " "a TAC case attaching output of 'show run' " "'redundancy linecard group all' 'redundancy lincard group <group#>.'" "



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ICRED_LCCARD_MISMATCH	3-Error	Mismatch is seen between Inserted card type0x[node][dec] and	Inserted card type is rejected by lcred component due to mismatch between inserted card type and reserved card type	ha-lcred-infra	"This indicates the reserved card type is " "different than inserted card type. Check the reserve-cardtype setting " "in show run. Insert the card type same of reserve card type " "If the cards are of same type but still it shows mismatch then open " "a TAC case attaching output of 'show run' " "'redundancy linecard group all' 'redundancy linecard group <group#>.'" "
ICRED_LCRED_ERROR	3-Error	Progression attempt returned error for Line Card [chars] idx=[dec].	Attempt to complete progression failed.	ha-lcred-infra	"This indicates an error during redundant " "linecard state progression. User should check redundancy " "config and try to remedy via CLI if not correct. Check " "config by 'show redundancy linecard all' and 'show " "redundancy linecard group all'. If redundancy config cannot " "be corrected then open a TAC case attaching the info above " "and also 'show redundancy linecard history' 'show version' " "and 'show run'." "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ICREDCFGUNDROR	3-Error	Progression attempt returned error for Line Card [chars] idx=[dec].	Attempt to complete progression failed.	ha-lcred-infra	"This indicates an error during redundant " "linecard state progression. User should check redundancy " "config and try to remedy via CLI if not correct. Check " "config by 'show redundancy linecard all' and 'show " "redundancy linecard group all'. If redundancy config cannot " "be corrected then open a TAC case attaching the info above " "and also 'show redundancy linecard history' 'show version' " "and 'show run'."
ICREDCFGIONDROR	3-Error	Unable to reset progression to INIT for Line Card [chars] idx=[dec].	Attempt to reinitialize progression failed.	ha-lcred-infra	"This indicates an error during redundant " "linecard state progression. User should check redundancy config " "and try to remedy via CLI if not correct. Check config by " "'show redundancy linecard all' and 'show redundancy linecard " "group all'. If redundancy config cannot be corrected then " "open a TAC case attaching the info above and also 'show " "redundancy linecard history' 'show version' and 'show run'."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<u>ICRED</u> <u>IC</u> <u>ROG</u> <u>ION</u> <u>ERR</u>	3-Error	Unable to reset progression to INIT for Line Card [chars] idx=[dec].	Attempt to reinitialize progression failed.	ha-lcred-infra	"This indicates an error during redundant " "linecard state progression. User should check redundancy config " "and try to remedy via CLI if not correct. Check config by " "'show redundancy linecard all' and 'show redundancy linecard " "group all'. If redundancy config cannot be corrected then " "open a TAC case attaching the info above and also 'show " "redundancy linecard history' 'show version' and 'show run'."
<u>ICRED</u> <u>IC</u> <u>ROG</u> <u>ION</u> <u>ERR</u>	3-Error	Illegal Line Card redundancy role assignments found following role negotiation.	When LC role negotiation is done illegal Line Card redundancy role was assigned to it and/or its peer. There are four kinds of roles can be assigned to a LC: Active Standby Wait or None. The only legal combination of roles for a slot and its peer are: Active-NONE Active-Standby WAIT-NONE. The rest are all illegal.	ha-lcred-infra	"Informational only. The LC Redundancy system " "will take recovery action."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>LCR</del> <del>RED</del> <del>INFRA</del> <del>ICARD</del>	3-Error	Illegal Line Card redundancy role assignments found following role negotiation.	When LC role negotiation is done illegal Line Card redundancy role was assigned to it and/or its peer. There are four kinds of roles can be assigned to a LC: Active Standby Wait or None. The only legal combination of roles for a slot and its peer are: Active-NONE Active-Standby WAIT-NONE. The rest are all illegal.	ha-lcred-infra	"Informational only. The LC Redundancy system " "will take recovery action."
<del>LCR</del> <del>CS</del> <del>AE</del> <del>ROG</del> <del>R</del> <del>CR</del>	3-Error	Illegal event in redundant Line Card [chars] idx=[dec] state progression.	Illegal event in redundant Line Card state progression.	ha-lcred-infra	"This is informational. The LCRED system " "will reset the linecard to recover. No action is required " "unless the error keeps re-occurring. If it keeps happening " "then open a TAC case. Include 'show redundancy linecard all' " "'show redundancy linecard group all' and 'show redundancy " "linecard history'."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LCRED_LC_STATE_ERROR	3-Error	Illegal event in redundant Line Card [chars] idx=[dec] state progression.	Illegal event in redundant Line Card state progression.	ha-lcred-infra	"This is informational. The LCRED system " "will reset the linecard to recover. No action is required " "unless the error keeps re-occurring. If it keeps happening " "then open a TAC case. Include 'show redundancy linecard all' " "show redundancy linecard group all' and 'show redundancy " "linecard history'."
LCRED_LC_STATE_ERROR	3-Error	Redundant Line Card [chars] idx=[dec] state progression failure. Line	Redundant Line Card state progression failure.	ha-lcred-infra	"This is informational. The LCRED system " "will reset the linecard to recover. No action is required " "unless the error keeps re-occurring. If it keeps happening " "then open a TAC case. Include 'show redundancy linecard all' " "show redundancy linecard group all' and 'show redundancy " "linecard history'."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LCRED_CSAEPROG_FAILED	3-Error	Redundant Line Card [chars] idx=[dec] state progression failure. Line	Redundant Line Card state progression failure.	ha-lcred-infra	"This is informational. The LCRED system " "will reset the linecard to recover. No action is required " "unless the error keeps re-occurring. If it keeps happening " "then open a TAC case. Include 'show redundancy linecard all' " "'show redundancy linecard group all' and 'show redundancy " "linecard history'."
LCRED_CSAEPROG_FAILED	3-Error	Redundant Line Card [chars] idx=[dec] state progression failed more than [dec]	Redundant Line Card state progression failure rate exceeds threshold.	ha-lcred-infra	"Open a TAC case attaching the following: " "'show redundancy linecard all' 'show redundancy linecard group " "all' 'show redundancy linecard history' 'show version' and " "'show run'."
LCRED_CSAEPROG_FAILED	3-Error	Redundant Line Card [chars] idx=[dec] state progression failed more than [dec]	Redundant Line Card state progression failure rate exceeds threshold.	ha-lcred-infra	"Open a TAC case attaching the following: " "'show redundancy linecard all' 'show redundancy linecard group " "all' 'show redundancy linecard history' 'show version' and " "'show run'."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LCRED3CUPWILLEGALROE	3-Error	Illegal Line Card redundancy role assignments during linecard up.	When LC comes up illegal Line Card redundancy role was assigned to it and/or its peer. There are four kinds of roles can be assigned to a LC: Active Standby Wait or None. The only legal combination of roles for a slot and its peer are: Active-NONE Active-Standby WAIT-NONE. The rest are all illegal.	ha-lcred-infra	"Informational only. The system will reset " "both linecards in the redundant pair to recover."
LCRED3CUPWILLEGALROE	3-Error	Illegal Line Card redundancy role assignments during linecard up.	When LC comes up illegal Line Card redundancy role was assigned to it and/or its peer. There are four kinds of roles can be assigned to a LC: Active Standby Wait or None. The only legal combination of roles for a slot and its peer are: Active-NONE Active-Standby WAIT-NONE. The rest are all illegal.	ha-lcred-infra	"Informational only. The system will reset " "both linecards in the redundant pair to recover."
LCRED3MEMBERTWICE	3-Error	LC: Request to add slot member [node]twice to group [node]	An attempt was made to add a member from the specified slot to a redundant interface group which already contains a member from that slot.	ha-lcred-infra	"This is a user error. Please double-check " "the configuration with 'show redundancy linecard group " "all' and try the command again."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LCRED3MEMBERTWICE	3-Error	LC: Request to add slot member [node]twice to group [node]	An attempt was made to add a member from the specified slot to a redundant interface group which already contains a member from that slot.	ha-lcred-infra	"This is a user error. Please double-check " "the configuration with 'show redundancy linecard group " "all' and try the command again."
ICRED3HWDIBSUBCK	3-Error	No redundancy subblock is found for i/f [chars].	Each redundant i/f whether active standby or virtual has a hwdib subblock that stores redundancy information about that i/f. If this subblock cannot be found then an error is reported.	ha-lcred-infra	"Try the CLI that triggered it again. If the " "error occurs again open a case with TAC. Report the output of " "show redundancy linecard group all' 'show redundancy " "linecard all' and 'show redundancy linecard sub-block all' " "in addition to usual system configuration information."
ICRED3HWDIBSUBCK	3-Error	No redundancy subblock is found for i/f [chars].	Each redundant i/f whether active standby or virtual has a hwdib subblock that stores redundancy information about that i/f. If this subblock cannot be found then an error is reported.	ha-lcred-infra	"Try the CLI that triggered it again. If the " "error occurs again open a case with TAC. Report the output of " "show redundancy linecard group all' 'show redundancy " "linecard all' and 'show redundancy linecard sub-block all' " "in addition to usual system configuration information."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ICRED</del> ICRED	3-Error	Could not allocate redundancy subblock. Pre-allocated memory for subblock creation of [node] is exhausted.	The platform pre-allocates a pool of memory for creating redundancy subblocks via registry <code>plm_get_max_redundancy_sb</code> . This pool has been	ha-lcred-infra	"Open a case with TAC. Report the contents " "of this message including the preallocation size value. " "Provide TAC with the following information: 'show run' " "'show ver' 'show hardware' and 'show proc mem'. TAC " "will need to get the platform in question to increase " "the pre-allocated pool of memory."
<del>ICRED</del> ICRED	3-Error	Could not allocate redundancy subblock. Pre-allocated memory for subblock creation of [node] is exhausted.	The platform pre-allocates a pool of memory for creating redundancy subblocks via registry <code>plm_get_max_redundancy_sb</code> . This pool has been	ha-lcred-infra	"Open a case with TAC. Report the contents " "of this message including the preallocation size value. " "Provide TAC with the following information: 'show run' " "'show ver' 'show hardware' and 'show proc mem'. TAC " "will need to get the platform in question to increase " "the pre-allocated pool of memory."
<del>ICRED</del> ICRED	3-Error	LC: Request to delete non-member slot [node] from redundancy group [node]	An attempt was made to delete a slot from a redundant line card group which does not contain the specified slot as a member.	ha-lcred-infra	"Check the configuration with 'show " "redundancy linecard group all' and try command again."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LCRED-3-NOISLOTIDHEE	3-Error	LC: Request to delete non-member slot [node]from redundancy group [node]	An attempt was made to delete a slot from a redundant line card group which does not contain the specified slot as a member.	ha-lcred-infra	"Check the configuration with 'show " "redundancy linecard group all' and try command again."
LCRED-3-NOINITMEM	3-Error	Subsystem Init [chars] Failed due to unavailability of memory of	Initialization of LCRED subsystem failed due to insufficient memory.	ha-lcred-infra	"This is indicative of system memory " "shortage. The problem is likely unrelated to linecard " "redundancy. You should initiate recovery procedures as " "you would for any system that does not have sufficient " "memory to perform actions."
LCRED-3-NOINITMEM	3-Error	Subsystem Init [chars] Failed due to unavailability of memory of	Initialization of LCRED subsystem failed due to insufficient memory.	ha-lcred-infra	"This is indicative of system memory " "shortage. The problem is likely unrelated to linecard " "redundancy. You should initiate recovery procedures as " "you would for any system that does not have sufficient " "memory to perform actions."
LCRED-3-NOIPCMEM	3-Error	Cannot Allocate IPC memory to get message.	Can't allocate memory to send redundancy control message.	ha-lcred-infra	"This is indicative of system memory " "shortage. The problem is likely unrelated to linecard " "redundancy. You should initiate recovery procedures as " "you would for any system that does not have sufficient " "memory to perform actions."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
LCRED-3-NOIPCMEM	3-Error	Cannot Allocate IPC memory to get message.	Can't allocate memory to send redundancy control message.	ha-lcred-infra	"This is indicative of system memory " "shortage. The problem is likely unrelated to linecard " "redundancy. You should initiate recovery procedures as " "you would for any system that does not have sufficient " "memory to perform actions."
<del>LCRED-3-NOIPCMEM</del>	3-Error	Removal of redundant interface caused an unexpected condition for i/f [chars].	While removing a redundant i/f possibly during redundant LC removal a SW bug was encountered. LC redundancy	ha-lcred-infra	"Verify LC Redundancy config with 'show " "redundancy linecard all' and 'show redundancy linecard group " "all'. Try to fix config with CLI. Open TAC case with above " "output as well as 'show run' 'show ver' and 'show redundancy " "history'."
<del>LCRED-3-NOIPCMEM</del>	3-Error	Removal of redundant interface caused an unexpected condition for i/f [chars].	While removing a redundant i/f possibly during redundant LC removal a SW bug was encountered. LC redundancy	ha-lcred-infra	"Verify LC Redundancy config with 'show " "redundancy linecard all' and 'show redundancy linecard group " "all'. Try to fix config with CLI. Open TAC case with above " "output as well as 'show run' 'show ver' and 'show redundancy " "history'."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ICREDUNINFRAISSNOICK	3-Error	Could not send checkpoint message during [chars] sync because issu infrastructure deemed ISSU state is incorrect.	The ISSU infrastructure deemed the ISSU state of Linecard Redundancy's ISSU client peer is incorrect.	ha-lcred-infra	"If this message occurs once ISSU client " "negotiation is complete and system is up and running " "you need to reset the Standby RP. If it occurs during " "system bringup nothing needs to be done. The HA " "infrastructure should recover without intervention."
ICREDUNINFRAISSNOICK	3-Error	Could not send checkpoint message during [chars] sync because issu infrastructure deemed ISSU state is incorrect.	The ISSU infrastructure deemed the ISSU state of Linecard Redundancy's ISSU client peer is incorrect.	ha-lcred-infra	"If this message occurs once ISSU client " "negotiation is complete and system is up and running " "you need to reset the Standby RP. If it occurs during " "system bringup nothing needs to be done. The HA " "infrastructure should recover without intervention."
ICREDUNMAHEDINDEX	3-Error	NULL/Invalid [chars] ifindex 0x[hec] downloaded for interface group number [node]	The interface identifier specified for a member or virtual interface of a redundant interface group does not correspond to a known interface.	ha-lcred-infra	"Open a TAC case. Attach the output of " "'show redundancy linecard all' 'show redundancy " "linecard group all' and 'show redundancy linecard " "history'."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LCRED3-INVALIDINDEX	3-Error	NULL/Invalid [chars] ifindex 0x[hec] downloaded for interface group number [node]	The interface identifier specified for a member or virtual interface of a redundant interface group does not correspond to a known interface.	ha-lcred-infra	"Open a TAC case. Attach the output of " "show redundancy linecard all' 'show redundancy " "linecard group all' and 'show redundancy linecard " "history'."
LCRED3-UPDATEINSENT	3-Error	The update message was not sent to the linecards	-	-	-
LCRED3-UPDATEINSENT	3-Error	The update message was not sent to the linecards	-	-	-
LCRED3-VIFHWIDB_CREAFAL	3-Error	Virtual hwidb creation failed from physical i/f [chars]: [chars].	Creation of virtual hwidb failed with specified error.	ha-lcred-infra	"Without the virtual hwidb VIF the i/f "
LCRED3-VIFHWIDB_CREAFAL	3-Error	Virtual hwidb creation failed from physical i/f [chars]: [chars].	Creation of virtual hwidb failed with specified error.	ha-lcred-infra	"Without the virtual hwidb VIF the i/f "
LCRED-3-VIFTWICE	3-Error	LC: Request to add a second virtual interface to group [node]	An attempt was made to add a virtual interface to a redundant interface group which already has a configured virtual interface.	ha-lcred-infra	"If this error was in response to a user " "command then check the command and try again if it " "appears correct. If the error seems to be from some " "undefined action then file a TAC case and attach the " "output from 'show redundancy linecard group all' and " "'show redundancy linecard history'."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
LCRED-3-VIFTWICE	3-Error	LC: Request to add a second virtual interface to group [node]	An attempt was made to add a virtual interface to a redundant interface group which already has a configured virtual interface.	ha-lcred-infra	"If this error was in response to a user " "command then check the command and try again if it " "appears correct. If the error seems to be from some " "undefined action then file a TAC case and attach the " "output from 'show redundancy linecard group all' and " "'show redundancy linecard history'."
<del>ICRED-4-SUPPRESSSWICHOVER</del>	4-Warning	Platform has requested to temporarily suppress switchover for Line card redundancy group Group Index=[dec].	Attempt to switchover is suppress. This is just the informative message and not the error	ha-lcred-infra	"This indicates an informative error message " "during switchover.If secondary is never becoming Active for the " "failed or removed primary after Chassis reload then open a TAC " "case."
<del>ICRED-4-SUPPRESSSWICHOVER</del>	4-Warning	Platform has requested to temporarily suppress switchover for Line card redundancy group Group Index=[dec].	Attempt to switchover is suppress. This is just the informative message and not the error	ha-lcred-infra	"This indicates an informative error message " "during switchover.If secondary is never becoming Active for the " "failed or removed primary after Chassis reload then open a TAC " "case."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ICRED-4-PRIMARY_CONFIG_LOSS	4-Warning	Partial redundancy config loss while configuring redundant interface [dec]/[dec]	During system reload could not get hwidb for the Secondary i/f so the Secondary redundancy configuration will be lost. The Primary i/f will be Active if it was parsed correctly.	ha-lcred-infra	"Verify that Primary i/f is configured. " "Reconfigure Secondary i/f for redundancy."
ICRED-4-PRIMARY_CONFIG_LOSS	4-Warning	Partial redundancy config loss while configuring redundant interface [dec]/[dec]	During system reload could not get hwidb for the Secondary i/f so the Secondary redundancy configuration will be lost. The Primary i/f will be Active if it was parsed correctly.	ha-lcred-infra	"Verify that Primary i/f is configured. " "Reconfigure Secondary i/f for redundancy."
LDP-3-AUTOCFG	3-Error	Interface [chars] is in an unexpected autoconfig state 0x[hec] [chars] request.	An interface is in an unexpected LDP auto config state. This could\n impact the LDP session running on this interface	mpls-ldp	<u>ACTION_COPY_REFOR_IDP</u>
LDP-3-AUTOCFG	3-Error	Interface [chars] is in an unexpected autoconfig state 0x[hec] [chars] request.	An interface is in an unexpected LDP auto config state. This could\n impact the LDP session running on this interface	mpls-ldp	<u>ACTION_COPY_REFOR_IDP</u>
LDP-3-AUTOCFG	3-Error	Interface [chars] is in an unexpected autoconfig state 0x[hec] [chars] request.	An interface is in an unexpected LDP auto config state. This could\n impact the LDP session running on this interface	mpls-ldp	<u>ACTION_COPY_REFOR_IDP</u>
LDP-3-CONSISTENCY	3-Error	[chars]	-	mpls-ldp	<u>ACTION_COPY_REFOR_IDP</u>
LDP-3-CONSISTENCY	3-Error	[chars]	-	mpls-ldp	<u>ACTION_COPY_REFOR_IDP</u>
LDP-3-CONSISTENCY	3-Error	[chars]	-	mpls-ldp	<u>ACTION_COPY_REFOR_IDP</u>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LDP-3-GENERAL	3-Error	[chars]	-	mpls-ldp	ACTION_COPY_REFORM_IDP
LDP-3-GENERAL	3-Error	[chars]	-	mpls-ldp	ACTION_COPY_REFORM_IDP
LDP-3-GENERAL	3-Error	[chars]	-	mpls-ldp	ACTION_COPY_REFORM_IDP
LDP-3-ISSU_XFORM	3-Error	ISSU [chars] transformation failed for msg type [dec][chars].	-	-	-
LDP-3-ISSU_XFORM	3-Error	ISSU [chars] transformation failed for msg type [dec][chars].	-	-	-
LDP-3-ISSU_XFORM	3-Error	ISSU [chars] transformation failed for msg type [dec][chars].	-	-	-
LDP-3-ISYNC	3-Error	[chars]	An unexpected error happened in LDP-IGP Synchronization operation.	mpls-ldp	ACTION_COPY_REFORM_IDP
LDP-3-ISYNC	3-Error	[chars]	An unexpected error happened in LDP-IGP Synchronization operation.	mpls-ldp	ACTION_COPY_REFORM_IDP
LDP-3-ISYNC	3-Error	[chars]	An unexpected error happened in LDP-IGP Synchronization operation.	mpls-ldp	ACTION_COPY_REFORM_IDP
LDP-3-ISYNC_CHKPT	3-Error	[chars]:: [chars] request failed [chars]	An unexpected condition happened while uncheckpointing	mpls-ldp	ACTION_COPY_REFORM_IDP
LDP-3-ISYNC_CHKPT	3-Error	[chars]:: [chars] request failed [chars]	An unexpected condition happened while uncheckpointing	mpls-ldp	ACTION_COPY_REFORM_IDP



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
LDP-3-ISYNC_CHKPT	3-Error	[chars]:: [chars] request failed [chars]	An unexpected condition happened while uncheckpointing	mpls-ldp	ACTION_COPY_REFORM_IDP
LDP-3-KA_NOMEMORY	3-Error	Can't alloc KA message	An attempt to allocate a buffer for Label Distribution Protocol\n LDP Keep Alive protocol message has failed.	mpls-ldp	"The system will continue by omitting transmission of the LDP\n Keep Alive Message. This may result in termination of one or more\n LDP sessions as the peers time out the sessions. If this\n message persists reduce other system activity if possible\n and call your technical service representative for\n assistance."
LDP-3-KA_NOMEMORY	3-Error	Can't alloc KA message	An attempt to allocate a buffer for Label Distribution Protocol\n LDP Keep Alive protocol message has failed.	mpls-ldp	"The system will continue by omitting transmission of the LDP\n Keep Alive Message. This may result in termination of one or more\n LDP sessions as the peers time out the sessions. If this\n message persists reduce other system activity if possible\n and call your technical service representative for\n assistance."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LDP3KA_NOMEMORY	3-Error	Can't alloc KA message	An attempt to allocate a buffer for Label Distribution Protocol\n\ LDP Keep Alive protocol message has failed.	mpls-ldp	"The system will continue by omitting transmission of the LDP\n\ Keep Alive Message. This may result in termination of one or more\n\ LDP sessions as the peers time out the sessions. If this\n\ message persists reduce other system activity if possible\n\ and call your technical service representative for\n\ assistance."
LDP-3-PTCLREAD	3-Error	peer [chars] read failure	An error occurred while attempting to read a LDP PDU received\n\ from a peer.	mpls-ldp	ACTION_NEW_SESSION_IDP
LDP-3-PTCLREAD	3-Error	peer [chars] read failure	An error occurred while attempting to read a LDP PDU received\n\ from a peer.	mpls-ldp	ACTION_NEW_SESSION_IDP
LDP-3-PTCLREAD	3-Error	peer [chars] read failure	An error occurred while attempting to read a LDP PDU received\n\ from a peer.	mpls-ldp	ACTION_NEW_SESSION_IDP
LDP-3-RECONNECT	3-Error	[chars]	An error occurred while parsing the incoming LDP Initialization message.\n\ The FT Reconnect Timer value received was greater than\n\ the locally-configured Forwarding State Holding Timer value.	mpls-ldp	"Reconfigure the Forwarding State Holding Timer value."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LDP-3-RECONNECT	3-Error	[chars]	An error occurred while parsing the incoming LDP Initialization message.\n\ The FT Reconnect Timer value received was greater than\n\ the locally-configured Forwarding State Holding Timer value.	mpls-ldp	"Reconfigure the Forwarding State Holding Timer value."
LDP-3-RECONNECT	3-Error	[chars]	An error occurred while parsing the incoming LDP Initialization message.\n\ The FT Reconnect Timer value received was greater than\n\ the locally-configured Forwarding State Holding Timer value.	mpls-ldp	"Reconfigure the Forwarding State Holding Timer value."
LDP-3-SM	3-Error	unexpected event: peer [chars][chars] state=[chars] event=[chars][chars]	An operation on the state machine for a LDP peer failed.	mpls-ldp	<del>ACDNUNBERSIOEIDP</del>
LDP-3-SM	3-Error	unexpected event: peer [chars][chars] state=[chars] event=[chars][chars]	An operation on the state machine for a LDP peer failed.	mpls-ldp	<del>ACDNUNBERSIOEIDP</del>
LDP-3-SM	3-Error	unexpected event: peer [chars][chars] state=[chars] event=[chars][chars]	An operation on the state machine for a LDP peer failed.	mpls-ldp	<del>ACDNUNBERSIOEIDP</del>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LDP3IAGIMBADRANGE	3-Error	Interface [chars] Bad VPI/VCI range. Can't start a LDP session	The session parameters proposed by an LDP peer differ from those preferred by the platform. The differences are not sufficient to prevent the LDP session from being established but may have an impact on label distribution operation	mpls-ldp	"If the parameters identified relate to the optional path vector-based loop detection mechanism note that the IETF LDP specification recommends that when Loop Detection is enabled in a portion of a network it is recommended that all LSRs in that portion of the network be configured with Loop Detection enabled and with the same path vector limit. If the parameters identified relate to some other aspect of the LDP session and the message occurs repeatedly copy it exactly as it appears and report it to your technical service representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LDP31AGAIMBAD_RANGE	3-Error	Interface [chars] Bad VPI/VCI range. Can't start a LDP session	The session parameters proposed by an LDP peer differ from those preferred by the platform. The differences are not sufficient to prevent the LDP session from being established but may have an impact on label distribution operation	mpls-ldp	"If the parameters identified relate to the optional path vector-based loop detection mechanism note that the IETF LDP specification recommends that when Loop Detection is enabled in a portion of a network it is recommended that all LSRs in that portion of the network be configured with Loop Detection enabled and with the same path vector limit. If the parameters identified relate to some other aspect of the LDP session and the message occurs repeatedly copy it exactly as it appears and report it to your technical service representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LDPTAGATM_BADRANGE	3-Error	Interface [chars] Bad VPI/VCI range. Can't start a LDP session	The session parameters proposed by an LDP peer differ from those preferred by the platform. The differences are not sufficient to prevent the LDP session from being established but may have an impact on label distribution operation	mpls-ldp	"If the parameters identified relate to the optional path vector-based loop detection mechanism note that the IETF LDP specification recommends that when Loop Detection is enabled in a portion of a network it is recommended that all LSRs in that portion of the network be configured with Loop Detection enabled and with the same path vector limit. If the parameters identified relate to some other aspect of the LDP session and the message occurs repeatedly copy it exactly as it appears and report it to your technical service representative."
LDPTAGATM_NOMEM	3-Error	Interface [chars] Resource failure. Can't start a LDP session	An attempt to allocate a buffer for Label Distribution Protocol LDP TAGATM VPI/VCI ranges has failed.	mpls-ldp	"The system will not be able to create a LDP session between the affected LDP peers. If this message persists reduce other system activity if possible and call your technical service representative for assistance."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LDP-3-TAG-ATM-NO-MEM	3-Error	Interface [chars] Resource failure. Can't start a LDP session	An attempt to allocate a buffer for Label Distribution Protocol\n LDP TAG-ATM VPI/VCI ranges has failed.	mpls-ldp	"The system will not be able to create a LDP session between\n\n the affected LDP peers. If this message persists reduce \n\n other system activity if possible and call your technical \n\n service representative for assistance."
LDP-3-TAG-ATM-NO-MEM	3-Error	Interface [chars] Resource failure. Can't start a LDP session	An attempt to allocate a buffer for Label Distribution Protocol\n LDP TAG-ATM VPI/VCI ranges has failed.	mpls-ldp	"The system will not be able to create a LDP session between\n\n the affected LDP peers. If this message persists reduce \n\n other system activity if possible and call your technical \n\n service representative for assistance."
LDP-4-ADV	4-Warning	Label advertisement mode DU/DoD mismatch with peer [chars] resolved to [chars].	-	mpls-ldp	<u>ACTION_NEW_SESSION_IDP</u>
LDP-4-ADV	4-Warning	Label advertisement mode DU/DoD mismatch with peer [chars] resolved to [chars].	-	mpls-ldp	<u>ACTION_NEW_SESSION_IDP</u>
LDP-4-ADV	4-Warning	Label advertisement mode DU/DoD mismatch with peer [chars] resolved to [chars].	-	mpls-ldp	<u>ACTION_NEW_SESSION_IDP</u>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LDP-4-CAPCHANGE	4-Warning	Reset of established LDP sessions required to propagate [chars]	A capability was installed/updated/uninstalled by an LDP client.\n\nLDP peers will not learn of the change until the LDP session has\n\n been reset.	mpls-ldp	"Reset LDP neighbor using the 'clear mpls ldp neighbor ...' command."
LDP-4-CAPCHANGE	4-Warning	Reset of established LDP sessions required to propagate [chars]	A capability was installed/updated/uninstalled by an LDP client.\n\nLDP peers will not learn of the change until the LDP session has\n\n been reset.	mpls-ldp	"Reset LDP neighbor using the 'clear mpls ldp neighbor ...' command."
LDP-4-CAPCHANGE	4-Warning	Reset of established LDP sessions required to propagate [chars]	A capability was installed/updated/uninstalled by an LDP client.\n\nLDP peers will not learn of the change until the LDP session has\n\n been reset.	mpls-ldp	"Reset LDP neighbor using the 'clear mpls ldp neighbor ...' command."
LDP-4-CHANGEDYNAMIC	4-Warning	Reset of established LDP session required to propagate [chars]\n\n change to peers that don't support Dynamic Announcement	A capability was installed/updated/uninstalled by an LDP client.\n\nLDP peers that don't support Dynamic Announcement will not learn\n\n of the changeuntil the LDP session has been reset.	mpls-ldp	"Use the 'show mpls ldp neighbor capability' command to determine\n\n which neighbors need to be reset. Reset LDP neighbor using the\n\n 'clear mpls ldp neighbor ...' command."
LDP-4-CHANGEDYNAMIC	4-Warning	Reset of established LDP session required to propagate [chars]\n\n change to peers that don't support Dynamic Announcement	A capability was installed/updated/uninstalled by an LDP client.\n\nLDP peers that don't support Dynamic Announcement will not learn\n\n of the changeuntil the LDP session has been reset.	mpls-ldp	"Use the 'show mpls ldp neighbor capability' command to determine\n\n which neighbors need to be reset. Reset LDP neighbor using the\n\n 'clear mpls ldp neighbor ...' command."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LDP4-CHANGEDYNAMIC	4-Warning	Reset of established LDP session required to propagate [chars]\n change to peers that don't support Dynamic Announcement	A capability was installed/updated/uninstalled by an LDP client.\n\n LDP peers that don't support Dynamic Announcement will not learn\n\n of the change until the LDP session has been reset.	mpls-ldp	"Use the 'show mpls ldp neighbor capability' command to determine\n\n which neighbors need to be reset. Reset LDP neighbor using the\n\n 'clear mpls ldp neighbor ...' command."
LDP4-MAXMSGSIZE	4-Warning	Maximum implementation message size exceeded actual [node]maximum %u	This is an informational message that appears when LDP receives\n\n a request to allocate memory resources for an LDP message with\n\n a size exceeding the current implemented maximum.	mpls-ldp	"No action is required unless a larger message size is deemed to be\n\n required to support a new application. In this case the actual\n\n application should be identified and component owners contacted\n\n to increase the implemented maximum message size."
LDP4-MAXMSGSIZE	4-Warning	Maximum implementation message size exceeded actual [node]maximum %u	This is an informational message that appears when LDP receives\n\n a request to allocate memory resources for an LDP message with\n\n a size exceeding the current implemented maximum.	mpls-ldp	"No action is required unless a larger message size is deemed to be\n\n required to support a new application. In this case the actual\n\n application should be identified and component owners contacted\n\n to increase the implemented maximum message size."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
LDP-4-MAXMSGSIZE	4-Warning	Maximum implementation message size exceeded actual [node]maximum %u	This is an informational message that appears when LDP receives a request to allocate memory resources for an LDP message with a size exceeding the current implemented maximum.	mpls-ldp	"No action is required unless a larger message size is deemed to be required to support a new application. In this case the application should be identified and component owners contacted to increase the implemented maximum message size."
LDP-4-PTCL	4-Warning	peer [chars] [chars]	A violation of the LDP protocol by a LDP peer has been detected.	mpls-ldp	<u>ACTION_NEW_SESSION_IDP</u>
LDP-4-PTCL	4-Warning	peer [chars] [chars]	A violation of the LDP protocol by a LDP peer has been detected.	mpls-ldp	<u>ACTION_NEW_SESSION_IDP</u>
LDP-4-PTCL	4-Warning	peer [chars] [chars]	A violation of the LDP protocol by a LDP peer has been detected.	mpls-ldp	<u>ACTION_NEW_SESSION_IDP</u>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LDP-4-PWD	4-Warning	MD5 protection is required for peer [chars] no password configured	-	mpls-ldp	"This message indicates a misconfiguration on the router. If the user requires MD5 password protection for the LDP session configure a password for the LDP peer. If the user requires MD5 password protection for a subset of LDP neighbors but not for this specific LDP peer modify the LDP password configuration to exclude this LDP peer from the password required list. Otherwise if an LDP session should not exist disable MPLS to this neighbor."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LDP-4-PWD	4-Warning	MD5 protection is required for peer [chars] no password configured	-	mpls-ldp	"This message indicates a misconfiguration on the router. If the user requires MD5 password protection for the LDP session configure a password for the LDP peer. If the user requires MD5 password protection for a subset of LDP neighbors but not for this specific LDP peer modify the LDP password configuration to exclude this LDP peer from the password required list. Otherwise if an LDP session should not exist disable MPLS to this neighbor."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LDP-4-PWD	4-Warning	MD5 protection is required for peer [chars] no password configured	-	mpls-ldp	"This message indicates a misconfiguration on the router. If the user requires MD5 password protection for the LDP session configure a password for the LDP peer. If the user requires MD5 password protection for a subset of LDP neighbors but not for this specific LDP peer modify the LDP password configuration to exclude this LDP peer from the password required list. Otherwise if an LDP session should not exist disable MPLS to this neighbor."
LDP-5-ACL	5-Notice	mpls ldp advertise-labels has no effect for lc-atm	EXPLANATION_ACL_IDP	mpls-ldp	"No action is required."
LDP-5-ACL	5-Notice	mpls ldp advertise-labels has no effect for lc-atm	EXPLANATION_ACL_IDP	mpls-ldp	"No action is required."
LDP-5-ACL	5-Notice	mpls ldp advertise-labels has no effect for lc-atm	EXPLANATION_ACL_IDP	mpls-ldp	"No action is required."
LDP-5-ACL1	5-Notice	mpls ldp advertise-labels has no effect for lc-atm	EXPLANATION_ACL_IDP	mpls-ldp	ACTION_COPY_REFOR_IDP
LDP-5-ACL1	5-Notice	mpls ldp advertise-labels has no effect for lc-atm	EXPLANATION_ACL_IDP	mpls-ldp	ACTION_COPY_REFOR_IDP

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
LDP-5-ACL1	5-Notice	mpls ldp advertise-labels has no effect for lc-atm	EXPLANATION_ACL_TDP	mpls-ldp	ACTION_COPY_REFORM_TDP
LDP-5-CLEAR_CHKPT	5-Notice	Clear [chars] checkpoint state [chars] by [chars]	Checkpoint state for one or more LDP objects has been reset	mpls-ldp	LOG_SID_NO_ACTION
LDP-5-CLEAR_CHKPT	5-Notice	Clear [chars] checkpoint state [chars] by [chars]	Checkpoint state for one or more LDP objects has been reset	mpls-ldp	LOG_SID_NO_ACTION
LDP-5-CLEAR_CHKPT	5-Notice	Clear [chars] checkpoint state [chars] by [chars]	Checkpoint state for one or more LDP objects has been reset	mpls-ldp	LOG_SID_NO_ACTION
LDP-5-CLEAR_NBRS	5-Notice	Clear LDP neighbors [chars] by [chars]	One or more LDP neighbor sessions has been reset	mpls-ldp	LOG_SID_NO_ACTION
LDP-5-CLEAR_NBRS	5-Notice	Clear LDP neighbors [chars] by [chars]	One or more LDP neighbor sessions has been reset	mpls-ldp	LOG_SID_NO_ACTION
LDP-5-CLEAR_NBRS	5-Notice	Clear LDP neighbors [chars] by [chars]	One or more LDP neighbor sessions has been reset	mpls-ldp	LOG_SID_NO_ACTION
LDP-5-GR	5-Notice	[chars]	An informational LDP notice was generated for a Graceful Restart event.	mpls-ldp	LOG_SID_NO_ACTION
LDP-5-GR	5-Notice	[chars]	An informational LDP notice was generated for a Graceful Restart event.	mpls-ldp	LOG_SID_NO_ACTION
LDP-5-GR	5-Notice	[chars]	An informational LDP notice was generated for a Graceful Restart event.	mpls-ldp	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LDP-5-IDENT	5-Notice	cannot set [chars][chars] LDP ident	-	mpls-ldp	"This is an informational message. As long as it needs to set\n\ its chassis LDP identifier the system will periodically\n\ attempt to do so until it succeeds. If this message occurs\n\ repeatedly copy it exactly as it appears and report it to\n\ your technical service representative."
LDP-5-IDENT	5-Notice	cannot set [chars][chars] LDP ident	-	mpls-ldp	"This is an informational message. As long as it needs to set\n\ its chassis LDP identifier the system will periodically\n\ attempt to do so until it succeeds. If this message occurs\n\ repeatedly copy it exactly as it appears and report it to\n\ your technical service representative."
LDP-5-IDENT	5-Notice	cannot set [chars][chars] LDP ident	-	mpls-ldp	"This is an informational message. As long as it needs to set\n\ its chassis LDP identifier the system will periodically\n\ attempt to do so until it succeeds. If this message occurs\n\ repeatedly copy it exactly as it appears and report it to\n\ your technical service representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
LDP-5-INFO	5-Notice	[chars]	This is an informational message generated by the Label\n Distribution Protocol LDP implementation.	mpls-ldp	ACTION_LOOPING_LSP
LDP-5-INFO	5-Notice	[chars]	This is an informational message generated by the Label\n Distribution Protocol LDP implementation.	mpls-ldp	ACTION_LOOPING_LSP
LDP-5-INFO	5-Notice	[chars]	This is an informational message generated by the Label\n Distribution Protocol LDP implementation.	mpls-ldp	ACTION_LOOPING_LSP
LDP-5-NBRCHG	5-Notice	[chars] Neighbor [chars] is [chars][chars]	An LDP neighbor has either come up or gone down. The message\n describes the change for it.	mpls-ldp	"This informational message normally appears as routers and\n LDP neighbors go up or down. However unexpected neighbor loss\n might indicate high error rates or high packet loss in the\n network and should be investigated."



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
LDP-5-NBRCHG	5-Notice	[chars] Neighbor [chars] is [chars][chars]	An LDP neighbor has either come up or gone down. The message\n\ describes the change for it.	mpls-ldp	"This informational message normally appears as routers and\n\ LDP neighbors go up or down. However unexpected neighbor loss\n\ might indicate high error rates or high packet loss in the\n\ network and should be investigated."
LDP-5-NBRCHG	5-Notice	[chars] Neighbor [chars] is [chars][chars]	An LDP neighbor has either come up or gone down. The message\n\ describes the change for it.	mpls-ldp	"This informational message normally appears as routers and\n\ LDP neighbors go up or down. However unexpected neighbor loss\n\ might indicate high error rates or high packet loss in the\n\ network and should be investigated."
LDP-5-PWDCFG	5-Notice	Password configuration changed for [chars]	An informational LDP notice was generated to report password\n\ configuration change for a neighbor.	mpls-ldp	LOG_SID_NO_ACTION
LDP-5-PWDCFG	5-Notice	Password configuration changed for [chars]	An informational LDP notice was generated to report password\n\ configuration change for a neighbor.	mpls-ldp	LOG_SID_NO_ACTION
LDP-5-PWDCFG	5-Notice	Password configuration changed for [chars]	An informational LDP notice was generated to report password\n\ configuration change for a neighbor.	mpls-ldp	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LDP-5PWDKEYTRUNC	5-Notice	MD5 digest uses [dec] chars of longer [chars] keys for peer [chars]	-	mpls-ldp	"This message indicates a possible misconfiguration on the router.\n\n Ensure that you have configured your key chains correctly on each\n\n router. Your LDP session can be established if the MD5 key used by\n\n the specified LDP peer has been truncated by the same amount or is\n\n defined to be equal to the truncated key value on this router."
LDP-5PWDKEYTRUNC	5-Notice	MD5 digest uses [dec] chars of longer [chars] keys for peer [chars]	-	mpls-ldp	"This message indicates a possible misconfiguration on the router.\n\n Ensure that you have configured your key chains correctly on each\n\n router. Your LDP session can be established if the MD5 key used by\n\n the specified LDP peer has been truncated by the same amount or is\n\n defined to be equal to the truncated key value on this router."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LDP-5-PWDKEYTRUNC	5-Notice	MD5 digest uses [dec] chars of longer [chars] keys for peer [chars]	-	mpls-ldp	"This message indicates a possible misconfiguration on the router.\n\n Ensure that you have configured your key chains correctly on each\n\n router. Your LDP session can be established if the MD5 key used by\n\n the specified LDP peer has been truncated by the same amount or is\n\n defined to be equal to the truncated key value on this router."
LDP-5-PWDRO	5-Notice	Password rolled over for [chars]	An informational LDP notice was generated to report lossless password\n\n change for a neighbor.	mpls-ldp	LOG_SID_NO_ACTION
LDP-5-PWDRO	5-Notice	Password rolled over for [chars]	An informational LDP notice was generated to report lossless password\n\n change for a neighbor.	mpls-ldp	LOG_SID_NO_ACTION
LDP-5-PWDRO	5-Notice	Password rolled over for [chars]	An informational LDP notice was generated to report lossless password\n\n change for a neighbor.	mpls-ldp	LOG_SID_NO_ACTION
LDP-5-SP	5-Notice	[chars]	An informational LDP notice was generated for a Session Protection event.	mpls-ldp	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LDP-5-SP	5-Notice	[chars]	An informational LDP notice was generated for a Session Protection event.	mpls-ldp	LOG_SID_NO_ACTION
LDP-5-SP	5-Notice	[chars]	An informational LDP notice was generated for a Session Protection event.	mpls-ldp	LOG_SID_NO_ACTION
LDP-5-UNKNOWNCAP	5-Notice	Advertised Capability [chars] not supported by peer [chars]	This information message is returned by peer to assist in\n\n troubleshooting interop issues that may arise when a peer is\n\n not capable of supporting an advertised LDP capability	mpls-ldp	LOG_SID_NO_ACTION
LDP-5-UNKNOWNCAP	5-Notice	Advertised Capability [chars] not supported by peer [chars]	This information message is returned by peer to assist in\n\n troubleshooting interop issues that may arise when a peer is\n\n not capable of supporting an advertised LDP capability	mpls-ldp	LOG_SID_NO_ACTION
LDP-5-UNKNOWNCAP	5-Notice	Advertised Capability [chars] not supported by peer [chars]	This information message is returned by peer to assist in\n\n troubleshooting interop issues that may arise when a peer is\n\n not capable of supporting an advertised LDP capability	mpls-ldp	LOG_SID_NO_ACTION
LDPID-3-LCON	3-Error	ERRMSG_NOFLAGS	-	-	-
LDPID-3-LCON	3-Error	ERRMSG_NOFLAGS	-	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
LDPLIB-3-GENERAL	3-Error	[chars]	Record associated with a withdrawn label has timed out before receiving acknowledgements from all peers.	mpls-ldp	"This is an informational message. This will not " "have any operational impact. The system will ignore any subsequently " "received release messages associated with the label."
LDPLIB-3-GENERAL	3-Error	[chars]	Record associated with a withdrawn label has timed out before receiving acknowledgements from all peers.	mpls-ldp	"This is an informational message. This will not " "have any operational impact. The system will ignore any subsequently " "received release messages associated with the label."
LDPLIB-3-GENERAL	3-Error	[chars]	Record associated with a withdrawn label has timed out before receiving acknowledgements from all peers.	mpls-ldp	"This is an informational message. This will not " "have any operational impact. The system will ignore any subsequently " "received release messages associated with the label."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
LDPLIB-3-INIT	3-Error	Cannot allocate LIB	The LIB revision number used to manage advertisement of labels to LDP peers overflowed. This will result in faulty label distribution to LDP peers. The system recovers by toggling dynamic label switching off and on which forces the revision number to be re-initialized.	mpls-ldp	"None required."
LDPLIB-3-INIT	3-Error	Cannot allocate LIB	The LIB revision number used to manage advertisement of labels to LDP peers overflowed. This will result in faulty label distribution to LDP peers. The system recovers by toggling dynamic label switching off and on which forces the revision number to be re-initialized.	mpls-ldp	"None required."
LDPLIB-3-INIT	3-Error	Cannot allocate LIB	The LIB revision number used to manage advertisement of labels to LDP peers overflowed. This will result in faulty label distribution to LDP peers. The system recovers by toggling dynamic label switching off and on which forces the revision number to be re-initialized.	mpls-ldp	"None required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LES_FDDI-2-ILLEGAL	2-Critical	msgtxt_fddi_illegal	This error message is displayed when the router does not have enough I/O memory to support a FDDI interface. The FDDI interface requires at least 4MB of I/O memory.	mid-fddi	"Install the required amount of I/O memory. For maximum performance Cisco recommends installing 8Mb of I/O memory for a single FDDI NIM and 16MB of I/O memory if 2 FDDI NIMs are installed. With 4MB of I/O memory the system will create 256 FDDI buffers for a one FDDI interface or 384 buffers for two FDDI interfaces. With 8MB of I/O memory the system will create 512 FDDI buffers for either one or two FDDI interfaces. With 16MB of I/O memory the system will create 512 FDDI buffers for a one FDDI interface or 1024 buffers for two FDDI interfaces."
LEX-3-NOTSENT	3-Error	Serial line down [chars] : [chars] not sent	The serial line went down and the specified command was not sent to the LAN Extender.	-	"Determine why the serial line went down. For example was the cable pulled or the LAN Extender powered off? The command will automatically be re-sent once the serial interface is operational."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LEX-3-RCMDNAK	3-Error	[chars] : [chars] could not be processed by LAN Extender	The LAN Extender could not process the command from the host router.\n\ Possible causes are:\n\ <n\ </n\  The LAN Extender ran out of memory.\n\ <n\ </n\  The message from the host router is malformed.\n\ <n\ </n\  A request to write flash occurred while the LAN Extender was busy\n\ writing flash for a previous request.\n\ <n\ </n\  The size of a file to be downloaded is greater than the amount of flash\n\ memory available.	-	"If the command was copy tftp lex unit-number or copy flash lex\n\ unit-number make sure that the correct file that is a FLEX image\n\ file is specified. Only a single copy request can be handled at one\n\ time. If the problem was caused by a temporary out-of-memory condition\n\ on the LAN Extender re-enter the command."
LEX-3-RCMDREJ	3-Error	[chars] : [chars] could not be processed by LAN Extender	The LAN Extender did not recognize the code for the specified remote\n\ command. This might occur if the user is running old LAN Extender\n\ software with newer host router software that has support for new LEX\n\ remote commands.	-	"Update the LAN Extender software."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LEX-3-TIMEOUT	3-Error	Retry count exceeded for [chars] : [chars]	The host router re-sent the given message as many times as specified\n\n in the lex retry-count command configuration variable without\n\n receiving an acknowledgment from the LAN Extender. At this point the\n\n host router gives up trying to send this particular remote command\n\n message.	-	"Use the LEDs on the LAN Extender to determine if it is operational.\n\n Confirm that the lex timeout configuration command is set appropriately\n\n for the speed of the link."
LFD-2-AVL	2-Critical	[chars] [hec]	AVL tree operation error	mpls-mfi	LOG_STD_ACTION
LFD-2-AVL	2-Critical	[chars] [hec]	AVL tree operation error	mpls-mfi	LOG_STD_ACTION
LFD2-FPIHANDLER3	2-Critical	[chars] [hec] [hec] [hec]	FPI Handler error	mpls-mfi	LOG_STD_ACTION
LFD2-FPIHANDLER3	2-Critical	[chars] [hec] [hec] [hec]	FPI Handler error	mpls-mfi	LOG_STD_ACTION
LFD-3-BADEXEC	3-Error	Unexpected Code Execution: [chars] [dec]	Unexpected Code Execution	mpls-mfi	LOG_STD_ACTION
LFD-3-BADEXEC	3-Error	Unexpected Code Execution: [chars] [dec]	Unexpected Code Execution	mpls-mfi	LOG_STD_ACTION
LFD-3-BADFRRRTYPE	3-Error	illegal frr type: [dec]	FRR request type error	mpls-mfi	LOG_STD_ACTION
LFD-3-BADFRRRTYPE	3-Error	illegal frr type: [dec]	FRR request type error	mpls-mfi	LOG_STD_ACTION
LFD3-BADLABELADD	3-Error	Cannot add label - [chars].	Unable to create label due to reason given.	mpls-mfi	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LFD3-BADLABELADD	3-Error	Cannot add label - [chars].	Unable to create label due to reason given.	mpls-mfi	LOG_STD_ACTION
LFD3-BADSHRILABELADD	3-Error	Cannot add short label: path_idx [dec] moi_type [dec]	Unable to create MFI feature space in FIB entry so unable to store short path extension information there.	mpls-mfi	LOG_STD_ACTION
LFD3-BADSHRILABELADD	3-Error	Cannot add short label: path_idx [dec] moi_type [dec]	Unable to create MFI feature space in FIB entry so unable to store short path extension information there.	mpls-mfi	LOG_STD_ACTION
LFD3-BROKERINITFAIL	3-Error	Failed to initialise lte RP broker facility	An internal software error occurred.	mpls-mfi	LOG_STD_ACTION
LFD3-BROKERINITFAIL	3-Error	Failed to initialise lte RP broker facility	An internal software error occurred.	mpls-mfi	LOG_STD_ACTION
LFD3-CHUNKMGR	3-Error	chunk mgr: [chars] 0x[hec]	Chunk manager error	mpls-mfi	LOG_STD_ACTION
LFD3-CHUNKMGR	3-Error	chunk mgr: [chars] 0x[hec]	Chunk manager error	mpls-mfi	LOG_STD_ACTION
LFD3-CHUNKMGRALLOC	3-Error	failed chunk alloc: [chars]	Chunk alloc failed	mpls-mfi	LOG_STD_ACTION
LFD3-CHUNKMGRALLOC	3-Error	failed chunk alloc: [chars]	Chunk alloc failed	mpls-mfi	LOG_STD_ACTION
LFD3-CHUNKMGRDEALLOC	3-Error	failed chunk dealloc: [chars]	Chunk free failed	mpls-mfi	LOG_STD_ACTION
LFD3-CHUNKMGRDEALLOC	3-Error	failed chunk dealloc: [chars]	Chunk free failed	mpls-mfi	LOG_STD_ACTION
LFD3-CORRUPTED_PKT	3-Error	[chars]	lfd received corrupted packet	mpls-mfi	LOG_STD_ACTION
LFD3-CORRUPTED_PKT	3-Error	[chars]	lfd received corrupted packet	mpls-mfi	LOG_STD_ACTION
LFD3-EVLOGCBADSOURCE	3-Error	Illegal log event source: [dec]	Illegal event found in log buffer	mpls-mfi	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ILLEGALLOGBADSOURCE	3-Error	Illegal log event source: [dec]	Illegal event found in log buffer	mpls-mfi	LOG_STD_ACTION
LFD-3-FIB_SRC	3-Error	Label [[dec]/[dec]] [chars] [chars] [chars]	The fib entry could not be sourced for label in question.	mpls-mfi	"If there is no matching bug for this problem " "please collect the output of " "<CmdBold>show mpls forwarding-table internal<NoCmdBold> and " "<CmdBold>show ip route [vrf <name>] <prefix> <NoCmdBold> and " "the error message traceback and file a bug"
LFD-3-FIB_SRC	3-Error	Label [[dec]/[dec]] [chars] [chars] [chars]	The fib entry could not be sourced for label in question.	mpls-mfi	"If there is no matching bug for this problem " "please collect the output of " "<CmdBold>show mpls forwarding-table internal<NoCmdBold> and " "<CmdBold>show ip route [vrf <name>] <prefix> <NoCmdBold> and " "the error message traceback and file a bug"
LFD-3-FIBIPINVALID	3-Error	[chars] table: [dec] label: [dec]	IP path information is invalid for the indicated label table entry	mpls-mfi	LOG_SIDSH_TECH_ACTION
LFD-3-FIBIPINVALID	3-Error	[chars] table: [dec] label: [dec]	IP path information is invalid for the indicated label table entry	mpls-mfi	LOG_SIDSH_TECH_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
LFD3-FIBIPINVALIDAF	3-Error	AF: [dec] [chars] table: [dec] label: [dec]	IP path information AF is invalid for the indicated label table entry	mpls-mfi	LOG_SIDSH_TECH_ACTION
LFD3-FIBIPINVALIDAF	3-Error	AF: [dec] [chars] table: [dec] label: [dec]	IP path information AF is invalid for the indicated label table entry	mpls-mfi	LOG_SIDSH_TECH_ACTION
LFD3-FIBNONIPINVALID	3-Error	[chars] table: [dec] label: [dec]	Non IP path information is invalid for the indicated label table entry	mpls-mfi	LOG_SIDSH_TECH_ACTION
LFD3-FIBNONIPINVALID	3-Error	[chars] table: [dec] label: [dec]	Non IP path information is invalid for the indicated label table entry	mpls-mfi	LOG_SIDSH_TECH_ACTION
LFD-3-FPIHANDLER	3-Error	LFD SSS Handler: [chars]	Error in fpi handler	mpls-mfi	LOG_STD_ACTION
LFD-3-FPIHANDLER	3-Error	LFD SSS Handler: [chars]	Error in fpi handler	mpls-mfi	LOG_STD_ACTION
LFD3-FPIYPEWRONG	3-Error	Require fpi type [chars] get fpi type [chars]	Unmatched FPI type	mpls-mfi	LOG_STD_ACTION
LFD3-FPIYPEWRONG	3-Error	Require fpi type [chars] get fpi type [chars]	Unmatched FPI type	mpls-mfi	LOG_STD_ACTION
LFD-3-INTFDB	3-Error	intf db: [chars] [hec]	Interface db error	mpls-mfi	LOG_STD_ACTION
LFD-3-INTFDB	3-Error	intf db: [chars] [hec]	Interface db error	mpls-mfi	LOG_STD_ACTION
LFD-3-INTFDB2	3-Error	intf db: [chars] [hec] [hec]	Interface db error	mpls-mfi	LOG_STD_ACTION
LFD-3-INTFDB2	3-Error	intf db: [chars] [hec] [hec]	Interface db error	mpls-mfi	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LFD-3-INVIPLABELTYPE	3-Error	Wrong label type [dec] for IP Label [dec] table [dec] prefix [chars] vrf [chars]	Label type is invalid for the indicated label table entry	mpls-mfi	"Refer to the Bug Navigator at www.cisco.com to see if this " "condition has been previously reported and resolved in a " "later release. If not gather the output of" " <CmdBold>show version<NoCmdBold> " "and <CmdBold>show running-config<NoCmdBold> and" "contact your Cisco technical support representative."
LFD-3-INVIPLABELTYPE	3-Error	Wrong label type [dec] for IP Label [dec] table [dec] prefix [chars] vrf [chars]	Label type is invalid for the indicated label table entry	mpls-mfi	"Refer to the Bug Navigator at www.cisco.com to see if this " "condition has been previously reported and resolved in a " "later release. If not gather the output of" " <CmdBold>show version<NoCmdBold> " "and <CmdBold>show running-config<NoCmdBold> and" "contact your Cisco technical support representative."
LFD-3-INVLABELTYPE	3-Error	Wrong label type [dec] for non-ip LTE [dec]/[dec]	Label type invalid for non-ip label table entry	mpls-mfi	LOG_STD_ACTION
LFD-3-INVLABELTYPE	3-Error	Wrong label type [dec] for non-ip LTE [dec]/[dec]	Label type invalid for non-ip label table entry	mpls-mfi	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IFD3-INMLABELTYPE	3-Error	Wrong label type [dec] for label [dec] table [dec] [chars] [chars]	An invalid Label type was encountered during the specified operation	mpls-mfi	"If there is no matching bug for this problem " "please collect the output of <CmdBold>show mpls" " forwarding-table label <label> internal<NoCmdBold>" " and the error message traceback and file a bug" " report."
IFD3-INMLABELTYPE	3-Error	Wrong label type [dec] for label [dec] table [dec] [chars] [chars]	An invalid Label type was encountered during the specified operation	mpls-mfi	"If there is no matching bug for this problem " "please collect the output of <CmdBold>show mpls" " forwarding-table label <label> internal<NoCmdBold>" " and the error message traceback and file a bug" " report."
LFD-3-INVPATHLBL	3-Error	[chars] [chars]	An invalid outgoing label is attached to the prefix	mpls-mfi	"Refer to the Bug Navigator at www.cisco.com to see if this " "condition has been previously reported and resolved in a " "later release. If not gather the output of" " <CmdBold>show version<NoCmdBold>" "and <CmdBold>show running-config<NoCmdBold>" and" "contact your Cisco technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LFD-3-INVPATHLBL	3-Error	[chars] [chars]	An invalid outgoing label is attached to the prefix	mpls-mfi	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this "condition has been previously reported and resolved in a "later release. If not gather the output of" <CmdBold>show version<NoCmdBold> " "and <CmdBold>show running-config<NoCmdBold> and" "contact your Cisco technical support representative."
LFD-3-INVPEXTLEN	3-Error	[chars] path ext : attempt to decode beyond XDR buffer cp 0x[hec] cp_end 0x[hec] msg_type [dec] msg_size [dec] padding [dec]	Accessing memory beyond XDR buffer length while decoding path extensions	mpls-mfi	LOG_STD_ACTION
LFD-3-INVPEXTLEN	3-Error	[chars] path ext : attempt to decode beyond XDR buffer cp 0x[hec] cp_end 0x[hec] msg_type [dec] msg_size [dec] padding [dec]	Accessing memory beyond XDR buffer length while decoding path extensions	mpls-mfi	LOG_STD_ACTION
LFD-3-INVPLIST	3-Error	Wrong path list type [dec] for label [dec]/[dec] [chars]	The path list type is set incorrectly for the label in quest\n\ion	mpls-mfi	LOG_STD_ACTION
LFD-3-INVPLIST	3-Error	Wrong path list type [dec] for label [dec]/[dec] [chars]	The path list type is set incorrectly for the label in quest\n\ion	mpls-mfi	LOG_STD_ACTION
LFD-3-INVPLISTTYPE	3-Error	Wrong plist_type expected [dec] for [dec]/[dec] update was [dec]	Rewrite PLISTTYPE invalid for non-ip label table entry	mpls-mfi	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LFD-3-INVPLISTTYPE	3-Error	Wrong plist_type expected [dec] for [dec]/[dec] update was [dec]	Rewrite PLISTTYPE invalid for non-ip label table entry	mpls-mfi	LOG_STD_ACTION
LFD-3-INVRWID	3-Error	Wrong rwid [dec] for non-ip LTE [dec]/[dec]	Rewrite ID invalid for non-ip label table entry	mpls-mfi	LOG_STD_ACTION
LFD-3-INVRWID	3-Error	Wrong rwid [dec] for non-ip LTE [dec]/[dec]	Rewrite ID invalid for non-ip label table entry	mpls-mfi	LOG_STD_ACTION
LFD-3-KEY_DB_SERIAL	3-Error	[chars] entry 0x[hec] existing 0x[hec]	The element could not be inserted into the LFD's key database.	mpls-mfi	"If there is no matching bug for this problem " "please collect the output of " "<CmdBold>show mpls forwarding-table internal<NoCmdBold> and " "the error message traceback and file a bug"
LFD-3-KEY_DB_SERIAL	3-Error	[chars] entry 0x[hec] existing 0x[hec]	The element could not be inserted into the LFD's key database.	mpls-mfi	"If there is no matching bug for this problem " "please collect the output of " "<CmdBold>show mpls forwarding-table internal<NoCmdBold> and " "the error message traceback and file a bug"
LFD-3-LABEL_BLOCK_CHUNK	3-Error	[chars]	lfd label block chunk entry corrupted	mpls-mfi	LOG_STD_ACTION
LFD-3-LABEL_BLOCK_CHUNK	3-Error	[chars]	lfd label block chunk entry corrupted	mpls-mfi	LOG_STD_ACTION
LFD-3-LCXDRCLIENT	3-Error	LTE distribution client: [chars]	An internal software error occurred.	mpls-mfi	LOG_STD_ACTION
LFD-3-LCXDRCLIENT	3-Error	LTE distribution client: [chars]	An internal software error occurred.	mpls-mfi	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LFD-3-LTABLEMEM	3-Error	Cannot allocate new mpls table [dec] of size [dec] needed for entry [dec]	Not enough contiguous memory for mpls forwarding table	mpls-mfi	LOG_SID_REDUCE_ACTION
LFD-3-LTABLEMEM	3-Error	Cannot allocate new mpls table [dec] of size [dec] needed for entry [dec]	Not enough contiguous memory for mpls forwarding table	mpls-mfi	LOG_SID_REDUCE_ACTION
LFD-3-NONIPINFO	3-Error	Non-ip info: [chars]	An internal software error occurred.	mpls-mfi	LOG_STD_ACTION
LFD-3-NONIPINFO	3-Error	Non-ip info: [chars]	An internal software error occurred.	mpls-mfi	LOG_STD_ACTION
LFD-3-NOOCE	3-Error	Attempt to get labels from OCE failed - [chars].	Calling function has provided insufficient information to get labels.	mpls-mfi	LOG_STD_ACTION
LFD-3-NOOCE	3-Error	Attempt to get labels from OCE failed - [chars].	Calling function has provided insufficient information to get labels.	mpls-mfi	LOG_STD_ACTION
LFD-3-NORESOURCE	3-Error	[chars] [dec]	Resource Failure: [chars] [dec]	mpls-mfi	LOG_STD_ACTION
LFD-3-NORESOURCE	3-Error	[chars] [dec]	Resource Failure: [chars] [dec]	mpls-mfi	LOG_STD_ACTION
LFD-3-NULLADIACENCY	3-Error	NULL Adjacency	NULL adjacency encountered	mpls-mfi	LOG_STD_ACTION
LFD-3-NULLADIACENCY	3-Error	NULL Adjacency	NULL adjacency encountered	mpls-mfi	LOG_STD_ACTION
LFD-3-NULLFIBIDB	3-Error	NULL FIB IDB: [chars] [dec]	NULL FIB IDB encountered	mpls-mfi	LOG_STD_ACTION
LFD-3-NULLFIBIDB	3-Error	NULL FIB IDB: [chars] [dec]	NULL FIB IDB encountered	mpls-mfi	LOG_STD_ACTION
LFD-3-OCE_CHAIN	3-Error	[chars]	NULL OCE in chain	mpls-mfi	LOG_STD_ACTION
LFD-3-OCE_CHAIN	3-Error	[chars]	NULL OCE in chain	mpls-mfi	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LFD-3-ORPHANLTE	3-Error	Label [dec]/[dec] plist [dec] LDM: 0x[hec]	The LTE for the label was supposed to be deleted but is still present	mpls-mfi	"Collect the running configuration and output of " "<CmdBold>show mpls forwarding-table labels<NoCmdBold> " " <del>CmdAgg</del> " " <del>Agg</del> " command and contact cisco " "technical service representative. "
LFD-3-ORPHANLTE	3-Error	Label [dec]/[dec] plist [dec] LDM: 0x[hec]	The LTE for the label was supposed to be deleted but is still present	mpls-mfi	"Collect the running configuration and output of " "<CmdBold>show mpls forwarding-table labels<NoCmdBold> " " <del>CmdAgg</del> " " <del>Agg</del> " command and contact cisco " "technical service representative. "
LFD3PATHEXTENCODE	3-Error	[chars] [chars] path list: [node]path ext: %p	MPLS path extensions could not be encoded for distribution	mpls-mfi	LOG_STD_ACTION
LFD3PATHEXTENCODE	3-Error	[chars] [chars] path list: [node]path ext: %p	MPLS path extensions could not be encoded for distribution	mpls-mfi	LOG_STD_ACTION
LFD-3-REWMGR	3-Error	Rewrite Manager: [chars] [hec]	Rewrite Manager error	mpls-mfi	LOG_STD_ACTION
LFD-3-REWMGR	3-Error	Rewrite Manager: [chars] [hec]	Rewrite Manager error	mpls-mfi	LOG_STD_ACTION
LFD-3-REWMGR2	3-Error	[chars] 0x[node]x 0x[node]x	Rewrite lookup failed due to FPI inconsistency	mpls-mfi	LOG_STD_ACTION
LFD-3-REWMGR2	3-Error	[chars] 0x[node]x 0x[node]x	Rewrite lookup failed due to FPI inconsistency	mpls-mfi	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LFD-3-RPXDRCLIENT	3-Error	Invalid XDR Client: [chars]	An internal software error occurred.	mpls-mfi	LOG_STD_ACTION
LFD-3-RPXDRCLIENT	3-Error	Invalid XDR Client: [chars]	An internal software error occurred.	mpls-mfi	LOG_STD_ACTION
LFD3RUNNING_TIMER	3-Error	[chars] [dec] [chars] [dec]	The MPLS forwarding entry for the specified label was deleted prior to the expiry of its associated timer	mpls-mfi	"If there is no matching bug for this problem " "please collect the output of <CmdBold>show mpls" " forwarding-table label <label> internal<NoCmdBold>" " and the error message traceback and file a bug" " report."
LFD3RUNNING_TIMER	3-Error	[chars] [dec] [chars] [dec]	The MPLS forwarding entry for the specified label was deleted prior to the expiry of its associated timer	mpls-mfi	"If there is no matching bug for this problem " "please collect the output of <CmdBold>show mpls" " forwarding-table label <label> internal<NoCmdBold>" " and the error message traceback and file a bug" " report."
LFD-3-SM	3-Error	[chars] [dec]	State Machine error: [chars] [dec]	mpls-mfi	LOG_STD_ACTION
LFD-3-SM	3-Error	[chars] [dec]	State Machine error: [chars] [dec]	mpls-mfi	LOG_STD_ACTION
LFD-3-SMBADEVENT	3-Error	Unexpected event [chars] for state [chars]	The LFD received an unexpected event for its state. The state of the LFD and the unexpected event are specified in the message text.	mpls-mfi	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LFD3-SMBADEVENT	3-Error	Unexpected event [chars] for state [chars]	The LFD received an unexpected event for its state. The state of the LFD and the unexpected event are specified in the message text.	mpls-mfi	LOG_STD_ACTION
LFD3UNSUPP_OCE	3-Error	Not support - [chars] [dec]	Unsupported OCE	mpls-mfi	LOG_STD_ACTION
LFD3UNSUPP_OCE	3-Error	Not support - [chars] [dec]	Unsupported OCE	mpls-mfi	LOG_STD_ACTION
LFD3UNSUPP_OCE_XDR	3-Error	[chars]	Decoding of an XDR message revealed data or format that is unsupported in the current release.	mpls-mfi	LOG_STD_ACTION
LFD3UNSUPP_OCE_XDR	3-Error	[chars]	Decoding of an XDR message revealed data or format that is unsupported in the current release.	mpls-mfi	LOG_STD_ACTION
LFD3UPDATEHANDLER2	3-Error	[chars] [hec] [hec]	Error in update handler	mpls-mfi	LOG_STD_ACTION
LFD3UPDATEHANDLER2	3-Error	[chars] [hec] [hec]	Error in update handler	mpls-mfi	LOG_STD_ACTION
LFD3UPDATEHANDLER3	3-Error	[chars] [hec] [hec] [hec]	Error in update handler	mpls-mfi	LOG_STD_ACTION
LFD3UPDATEHANDLER3	3-Error	[chars] [hec] [hec] [hec]	Error in update handler	mpls-mfi	LOG_STD_ACTION
LFD3UPDATEHANDLERRH	3-Error	No handler installed: fpi=[dec] handler type=[chars]	No handler installed	mpls-mfi	LOG_STD_ACTION
LFD3UPDATEHANDLERRH	3-Error	No handler installed: fpi=[dec] handler type=[chars]	No handler installed	mpls-mfi	LOG_STD_ACTION
LFD3-XDRBADMAGIC	3-Error	xdr message for [chars] spilled out of allocated static storage	An internal software error occurred.	mpls-mfi	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LFD-3-XDRBADMAGIC	3-Error	xdr message for [chars] spilled out of allocated static storage	An internal software error occurred.	mpls-mfi	LOG_STD_ACTION
LFD-4-FIB_SRC1	4-Warning	Label [[dec]/[dec]] [chars] [chars] [chars]	The fib entry could not be sourced for label in question.	mpls-mfi	"If there is no matching bug for this problem " "please collect the output of " "<CmdBold>show mpls forwarding-table internal<NoCmdBold> and " "<CmdBold>show ip route [vrf <name>] <prefix> <NoCmdBold> and " "the error message traceback and file a bug"
LFD-4-FIB_SRC1	4-Warning	Label [[dec]/[dec]] [chars] [chars] [chars]	The fib entry could not be sourced for label in question.	mpls-mfi	"If there is no matching bug for this problem " "please collect the output of " "<CmdBold>show mpls forwarding-table internal<NoCmdBold> and " "<CmdBold>show ip route [vrf <name>] <prefix> <NoCmdBold> and " "the error message traceback and file a bug"
LFD-4-NOFIBIDB	4-Warning	[chars] - ifnum [dec]	fibidb missing on linecard	mpls-mfi	LOG_SID_RECUR_ACTION
LFD-4-NOFIBIDB	4-Warning	[chars] - ifnum [dec]	fibidb missing on linecard	mpls-mfi	LOG_SID_RECUR_ACTION
LFD4OWNCHANGED	4-Warning	Owner changed for [chars] [dec]/[dec] from [dec] to [dec]	Label was previously installed by different installer	mpls-mfi	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
LFD4OWNCHANGED	4-Warning	Owner changed for [chars] [dec]/[dec] from [dec] to [dec]	Label was previously installed by different installer	mpls-mfi	LOG_STD_ACTION
LFD4-RE_ENTRANT	4-Warning	Re-entrancy detected: [chars]	lfd non ip recalculation has re-entrancy	mpls-mfi	LOG_STD_ACTION
LFD4-RE_ENTRANT	4-Warning	Re-entrancy detected: [chars]	lfd non ip recalculation has re-entrancy	mpls-mfi	LOG_STD_ACTION
LFD4UNSUPPORTIEDRW	4-Warning	Unexpected rewrites seen where MPLS is not supported by platform for this slot	MPLS is either not needed or not handled by the platform for this card and should not handle rewrites	mpls-mfi	LOG_SID_NO_ACTION
LFD4UNSUPPORTIEDRW	4-Warning	Unexpected rewrites seen where MPLS is not supported by platform for this slot	MPLS is either not needed or not handled by the platform for this card and should not handle rewrites	mpls-mfi	LOG_SID_NO_ACTION
LFD-6-RESOURCE	6-Information	[chars]	MPLS software is disabled on LC	mpls-mfi	LOG_SID_NO_ACTION
LFD-6-RESOURCE	6-Information	[chars]	MPLS software is disabled on LC	mpls-mfi	LOG_SID_NO_ACTION
<del>LI3MEM_INIT_FAILED</del>	2-Critical	ewlc-spwifi	LI host address configured is IPv6	-	-
<del>LI3MEM_INIT_FAILED</del>	2-Critical	ewlc-spwifi	Not supported: egress interface (%s) towards LI host[chars] is not an SVI	Egress interface to reach the LI host is restricted to be an SVI	If this message occurs
LI3MEM_INIT_FAILED	3-Error	Allocation of [chars] memory failed for LI	LI Initialization of channel pool failed.	cpp-ucode	LOG_STD_ACTION
LI3MEM_INIT_FAILED	3-Error	Register to Generic Packet Replication failed for LI	LI Initialization of packet replication registration failed.	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LI4DEDICATED_MODE	4-Warning	Slot [dec] can not switch to LI dedicated mode because there are SPAs in it.	A SIP-400 can be configured as LI dedicated service card. But it can only switch to dedicated mode if all SPAs in it are un-plugged. Otherwise it will stay in non-dedicated mode.	c7600-acl	"Un-plug all the SPAs in the SIP-400. It will automatically switch " "to LI dedicated mode."
LIB2F2NEW_CONTEXT	2-Critical	A new text2fax context could not be created	An internal error occurred in the initialization of the text2fax engine. The fax transmission will be aborted.	-	LOG_STD_ACTION
LIB2F2NEW_CONTEXT	2-Critical	A new text2fax context could not be created	An internal error occurred in the initialization of the text2fax engine. The fax transmission will be aborted.	-	LOG_STD_ACTION
LIB2F3ENGINE_FAILED	3-Error	The text2fax engine failed	This occurred most likely due to a memory limitation or illegal data being passed into the text2fax engine. The fax transmission will be aborted	-	LOG_STD_ACTION
LIB2F3ENGINE_FAILED	3-Error	The text2fax engine failed	This occurred most likely due to a memory limitation or illegal data being passed into the text2fax engine. The fax transmission will be aborted	-	LOG_STD_ACTION
LIB2F3ENGINE_FAILED	3-Error	Cannot allocate a packet from shared memory	The system is running low on packet memory. The fax cannot be sent correctly.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LIBT3CEIBUFFER_FAILED	3-Error	Cannot allocate a packet\n\from shared memory	The system is running low on packet memory. The fax cannot be\n\sent correctly.	-	LOG_STD_ACTION
LIBT2F3NULL_BUFFER	3-Error	A text buffer is NULL	An internal error occurred in the text buffer processing. The\n\fax tranmission be aborted.	-	LOG_STD_ACTION
LIBT2F3NULL_BUFFER	3-Error	A text buffer is NULL	An internal error occurred in the text buffer processing. The\n\fax tranmission be aborted.	-	LOG_STD_ACTION
LIBT1FF3BAD_DIALPEER	3-Error	Invalid dial peer tag [dec]	Invalid mmoip dial peer tag	-	LOG_STD_ACTION
LIBT1FF3BAD_DIALPEER	3-Error	Invalid dial peer tag [dec]	Invalid mmoip dial peer tag	-	LOG_STD_ACTION
LIBT1FF3ENGINE_FAILED	3-Error	The tiff engine failed	This occurred most likely due to a memory limitation or\n\illegal data being passed into the tiff engine. The fax transmission will be aborted	-	LOG_STD_ACTION
LIBT1FF3ENGINE_FAILED	3-Error	The tiff engine failed	This occurred most likely due to a memory limitation or\n\illegal data being passed into the tiff engine. The fax transmission will be aborted	-	LOG_STD_ACTION
LIBT1F3CEIBUFFER_FAILED	3-Error	Cannot allocate a packet\n\from shared memory	The system is running low on packet memory. The\n\fax cannot be sent correctly	-	-



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LIBIFF3CEIBUFFER_FAILED	3-Error	Cannot allocate a packet\n\nfrom shared memory	The system is running low on packet memory. The\n\nfax cannot be sent correctly	-	-
LIBIFF3INVALID_BUFFER	3-Error	A tiff buffer is invalid	An internal error occurred in the tiff buffer\n\nprocessing. The fax transmission will be aborted.	-	LOG_STD_ACTION
LIBIFF3INVALID_BUFFER	3-Error	A tiff buffer is invalid	An internal error occurred in the tiff buffer\n\nprocessing. The fax transmission will be aborted.	-	LOG_STD_ACTION
LIBIFF3NEW_CONTEXT	3-Error	A new tiff context could not be created	An internal error occurred in the initialization of the\n\ntiff engine. The fax transmission will be aborted.	-	LOG_STD_ACTION
LIBIFF3NEW_CONTEXT	3-Error	A new tiff context could not be created	An internal error occurred in the initialization of the\n\ntiff engine. The fax transmission will be aborted.	-	LOG_STD_ACTION
LIBIFF3NULL_BUFFER	3-Error	A tiff buffer is NULL	An internal error occurred in the tiff buffer\n\nprocessing. The fax transmission will be aborted.	-	LOG_STD_ACTION
LIBIFF3NULL_BUFFER	3-Error	A tiff buffer is NULL	An internal error occurred in the tiff buffer\n\nprocessing. The fax transmission will be aborted.	-	LOG_STD_ACTION
LIBIFF4COPY_QUALITY	4-Warning	Bad copy quality on tty\n\n[dec]	Noisy phone lines or a bad modem caused this error	-	LOG_SID_RECUR_ACTION
LIBIFF4COPY_QUALITY	4-Warning	Bad copy quality on tty\n\n[dec]	Noisy phone lines or a bad modem caused this error	-	LOG_SID_RECUR_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>LICENSE-1-NOT_SUPPORTED_BY</del>	6-Information	Platform does not support additional bay license store Bay: [dec]	Platform does not support additional bay license store	iosxe-csl	-
<del>LICENSE-ENFORCEMENT</del>	1-Alert	Feature [chars] [chars] running without a License. UDI=[chars]	End User License Agreement was accepted on this device	none	"none"
<del>LICENSE-ENFORCEMENT</del>	1-Alert	Feature [chars] [chars] running without a License. UDI=[chars]	End User License Agreement was accepted on this device	none	"none"
LICENSE-1-EXPIRED	1-Alert	License for feature [chars] [chars] has expired [chars]. UDI=[chars]	License for the feature specified has expired	ios-licensing	"If this message recurs customer should buy the license from Cisco " "since feature will not run"
LICENSE-1-EXPIRED	1-Alert	License for feature [chars] [chars] has expired [chars]. UDI=[chars]	License for the feature specified has expired	ios-licensing	"If this message recurs customer should buy the license from Cisco " "since feature will not run"
LICENSE-1-EXPIRING	1-Alert	License for feature [chars] [chars] will expire in [chars]. UDI=[chars]	License for the feature specified will expire in the specified time.	ios-licensing	"If this message recurs customer should buy license for the feature" " from Cisco since feature will not run after license expiry"
LICENSE-1-EXPIRING	1-Alert	License for feature [chars] [chars] will expire in [chars]. UDI=[chars]	License for the feature specified will expire in the specified time.	ios-licensing	"If this message recurs customer should buy license for the feature" " from Cisco since feature will not run after license expiry"
<del>LICENSE-REQUEST_FAILED</del>	1-Alert	License request for feature [chars] [chars] failed. UDI=[chars]	Your system is trying to run a feature without a license.	none	"Please buy and install the license for the feature immediately"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LICENSE-I-REQUEST_FAILED	1-Alert	License request for feature [chars] [chars] failed. UDI=[chars]	Your system is trying to run a feature without a license.	none	"Please buy and install the license for the feature immediately"
LICENSE-I-TRANSITION	1-Alert	EvalRightToUse License for feature [chars] [chars] will transition to RightToUse in [chars]. UDI=[chars]	License for the feature specified will transition in the number of days displayed in the syslog message.	ios-licensing	"Customer is expected to purchase this license if" " usage is planned beyond the trial period which" " expires in the number of days displayed in the syslog message." " This license will automatically convert to a Right to Use at" " the end of the trial period"
LICENSE-I-TRANSITION	1-Alert	EvalRightToUse License for feature [chars] [chars] will transition to RightToUse in [chars]. UDI=[chars]	License for the feature specified will transition in the number of days displayed in the syslog message.	ios-licensing	"Customer is expected to purchase this license if" " usage is planned beyond the trial period which" " expires in the number of days displayed in the syslog message." " This license will automatically convert to a Right to Use at" " the end of the trial period"
LICENSE-I-TRANSITION_COMPLETED	1-Alert	RightToUse License for feature [chars] [chars] has become active. UDI=[chars]	The transition of the license from EvalRightToUse to Right to Use RTU is completed	ios-licensing	"The trial period for this license has ended. This" " trial license has been automatically converted to" " a Right to Use License. Customer is required to" " purchase this license to continue usage"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>LICENSE-RANSI</del> LICENSE-RANSI_CNMBEE	1-Alert	RightToUse License for feature [chars] [chars] has become active. UDI=[chars]	The transition of the license from EvalRightToUse to Right to Use RTU is completed	ios-licensing	"The trial period for this license has ended. This " " trial license has been automatically converted to " " a Right to Use License. Customer is required to " " purchase this license to continue usage"
<del>LICENSE-AUDIY</del> LICENSE-AUDIY_ENDED	1-Alert	Feature [chars] [chars] [chars]. UDI=[chars]	-	-	-
<del>LICENSE-AUDIY</del> LICENSE-AUDIY_ENDED	1-Alert	Feature [chars] [chars] [chars]. UDI=[chars]	-	-	-
<del>LICENSE-AUDIY</del> LICENSE-AUDIY_ENGNG	1-Alert	Feature [chars] [chars] will expire on [chars]. UDI=[chars]	-	-	-
<del>LICENSE-AUDIY</del> LICENSE-AUDIY_ENGNG	1-Alert	Feature [chars] [chars] will expire on [chars]. UDI=[chars]	-	-	-
<del>LICENSE-AUDIY</del> LICENSE-AUDIY_EXIENG	1-Alert	Feature [chars] [chars] in grace period. UDI=[chars]	-	-	-
<del>LICENSE-AUDIY</del> LICENSE-AUDIY_EXIENG	1-Alert	Feature [chars] [chars] in grace period. UDI=[chars]	-	-	-
LICENSE-2-IPC_INIT	2-Critical	License IPC subsystem could not be initialized: [chars]	License IPC subsystem could not be initialized. The reason for failure is displayed after :	ios-licensing	"If this error message recurs please copy the message and " "and contact the customer service See whether the system resources" "are available"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LICENSE-2-IPC_INIT	2-Critical	License IPC subsystem could not be initialized: [chars]	License IPC subsystem could not be initialized. The reason for failure is displayed after :	ios-licensing	"If this error message recurs please copy the message and " "and contact the customer service See whether the system resources" "are available"
LICENSE2LIC_STORAGE	2-Critical	[chars]	The IOS licensing subsystem does not have a primary storage	ios-licensing	"If this error message recurs please copy the message and " "and contact the customer service"
LICENSE2LIC_STORAGE	2-Critical	[chars]	The IOS licensing subsystem does not have a primary storage	ios-licensing	"If this error message recurs please copy the message and " "and contact the customer service"
LICENSE2LIC_STORAGE	2-Critical	[chars] UDI=[chars]	The IOS licensing subsystem detected corrupted storage	ios-licensing	"If this error message occurs please reinstall all the licenses." "If you do not have the licenses please contact Cisco with the correct" "UDI to get all the licenses issued for this particular device"
LICENSE2LIC_STORAGE	2-Critical	[chars] UDI=[chars]	The IOS licensing subsystem detected corrupted storage	ios-licensing	"If this error message occurs please reinstall all the licenses." "If you do not have the licenses please contact Cisco with the correct" "UDI to get all the licenses issued for this particular device"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LICENSE-2-NO_MEM	2-Critical	No memory available for [chars]	The IOS licensing subsystem could not obtain the memory it needed.	ios-licensing	"If this error message recurs attempt to reduce memory usage by " "reducing the number of router features or interfaces enabled. " "Alternatively add more memory. " "\n\nTo display total memory usage for a router enter " "<CmdBold>show memory summary<noCmdBold> at the privileged " "command line prompt. To display buffer usage enter " "<CmdBold>show buffers<noCmdBold> at the prompt."
LICENSE-2-NO_MEM	2-Critical	No memory available for [chars]	The IOS licensing subsystem could not obtain the memory it needed.	ios-licensing	"If this error message recurs attempt to reduce memory usage by " "reducing the number of router features or interfaces enabled. " "Alternatively add more memory. " "\n\nTo display total memory usage for a router enter " "<CmdBold>show memory summary<noCmdBold> at the privileged " "command line prompt. To display buffer usage enter " "<CmdBold>show buffers<noCmdBold> at the prompt."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LICENSE2UDI_CHANGED	2-Critical	UDI of this instance changed from OLD: [chars]:[chars] to New: [chars]:[chars]	License UDI has changed - caused mainly because of too many configuration changes.	ios-licensing	"show license udi history"
LICENSE2UDI_CHANGED	2-Critical	UDI of this instance changed from OLD: [chars]:[chars] to New: [chars]:[chars]	License UDI has changed - caused mainly because of too many configuration changes.	ios-licensing	"show license udi history"
LICENSE2VLS_ERROR	2-Critical	'[chars]' failed with an error - rc = [dec] - '[chars]'	The IOS licensing subsystem encountered an error with the VLS api	ios-licensing	"If this error message recurs please copy the message and " "and contact the customer service"
LICENSE2VLS_ERROR	2-Critical	'[chars]' failed with an error - rc = [dec] - '[chars]'	The IOS licensing subsystem encountered an error with the VLS api	ios-licensing	"If this error message recurs please copy the message and " "and contact the customer service"
LICENSE3BUK_SYNC_FAILED	3-Error	License bulk sync operation [chars] for feature [chars] [chars] failed on standby rc=[chars]	-	-	-
LICENSE3BUK_SYNC_FAILED	3-Error	License bulk sync operation [chars] for feature [chars] [chars] failed on standby rc=[chars]	-	-	-
LICENSE3BUK_SYNC_NO	3-Error	License bulk sync operation [chars] for feature [chars] [chars] Info on standby rc=[chars]	Licensing is experiencing Errors when performing bulk sync	ios-licensing	"show license"
LICENSE3BUK_SYNC_NO	3-Error	License bulk sync operation [chars] for feature [chars] [chars] Info on standby rc=[chars]	Licensing is experiencing Errors when performing bulk sync	ios-licensing	"show license"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LICENSE3-AURENCONSENT	3-Error	License mismatch for feature [chars] [chars]: Active has [chars] and standby has [chars]	Licensing is experiencing Errors when performing consistency checker	ios-licensing	"show license"
LICENSE3-AURENCONSENT	3-Error	License mismatch for feature [chars] [chars]: Active has [chars] and standby has [chars]	Licensing is experiencing Errors when performing consistency checker	ios-licensing	"show license"
LICENSE3-IMPLICIT_LIC	3-Error	[chars]	The IOS licensing subsystem encountered an error while initializing/handling the implicit licenses	ios-licensing	"If this error message recurs please copy the message and " "and contact the customer service"
LICENSE3-IMPLICIT_LIC	3-Error	[chars]	The IOS licensing subsystem encountered an error while initializing/handling the implicit licenses	ios-licensing	"If this error message recurs please copy the message and " "and contact the customer service"
LICENSE3-IPC_ERROR	3-Error	[chars][chars] [hec] rc:[chars]	Licensing is experiencing errors when communicating to Line Cards using IPC	ios-licensing	"show ipc ports"
LICENSE3-IPC_ERROR	3-Error	[chars][chars] [hec] rc:[chars]	Licensing is experiencing errors when communicating to Line Cards using IPC	ios-licensing	"show ipc ports"
LICENSE3-IPC_PORT	3-Error	License [chars] IPC port [chars] failed: [chars]	License IPC port could not be created. The reason for failure is displayed after :	ios-licensing	"If this error message recurs please copy the message and " "and contact the customer service See whether the system resources" "are available"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LICENSE-3-IPC_PORT	3-Error	License [chars] IPC port [chars] failed: [chars]	License IPC port could not be created. The reason for failure is displayed after :	ios-licensing	"If this error message recurs please copy the message and " "and contact the customer service See whether the system resources" "are available"
LICENSE-3-ISSU_ERR	3-Error	[chars] error:[dec]	Licensing is experiencing ISSU Errors	ios-licensing	"show ipc ports"
LICENSE-3-ISSU_ERR	3-Error	[chars] error:[dec]	Licensing is experiencing ISSU Errors	ios-licensing	"show ipc ports"
LICENSE-3-ISSU_MTU	3-Error	Client id:[dec] MTU failed error:[dec]	Licensing is experiencing Errors when performing ISSU GET MTU during a transmit operation	ios-licensing	"show issu nego"
LICENSE-3-ISSU_MTU	3-Error	Client id:[dec] MTU failed error:[dec]	Licensing is experiencing Errors when performing ISSU GET MTU during a transmit operation	ios-licensing	"show issu nego"
LICENSE-3-ISSU_RCV	3-Error	Client id:[dec] type = [dec] receive failed error:[dec]	Licensing is experiencing Errors when performing ISSU Transformation during a receive operation	ios-licensing	"show ipc ports"
LICENSE-3-ISSU_RCV	3-Error	Client id:[dec] type = [dec] receive failed error:[dec]	Licensing is experiencing Errors when performing ISSU Transformation during a receive operation	ios-licensing	"show ipc ports"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
LICENSE-3-ISSU_XMIT	3-Error	Client id:[dec] type = [dec] xmit failed error:[dec]	Licensing is experiencing errors when performing ISSU Transformation during a transmit operation	ios-licensing	"show ipc ports"
LICENSE-3-ISSU_XMIT	3-Error	Client id:[dec] type = [dec] xmit failed error:[dec]	Licensing is experiencing errors when performing ISSU Transformation during a transmit operation	ios-licensing	"show ipc ports"
<del>LICENSE-3-ISSU_XMIT</del>	3-Error	[chars]	The IOS licensing subsystem was unable to create a process	ios-licensing	"If this error message recurs please copy the message and " "and contact the customer service See whether the system resources" "are available"
<del>LICENSE-3-ISSU_XMIT</del>	3-Error	[chars]	The IOS licensing subsystem was unable to create a process	ios-licensing	"If this error message recurs please copy the message and " "and contact the customer service See whether the system resources" "are available"
LICENSE-SLAVE_REG_FAIL	3-Error	License Slave device registration failed : [chars]	License Slave registration failed. The reason for failure is displayed after :	ios-licensing	"If this error message recurs please copy the message and " "and contact the customer service See whether the system resources" "are available"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LICENSE3SLAVE_REGISTER	3-Error	License Slave device registration failed : [chars]	License Slave registration failed. The reason for failure is displayed after :	ios-licensing	"If this error message recurs please copy the message and " "and contact the customer service See whether the system resources" "are available"
LICENSE3SYNC_FAILED	3-Error	License command [chars] for feature [chars] [chars] failed on standby rc=[chars]	Licensing is experiencing Errors when performing incremental sync	ios-licensing	"show license"
LICENSE3SYNC_FAILED	3-Error	License command [chars] for feature [chars] [chars] failed on standby rc=[chars]	Licensing is experiencing Errors when performing incremental sync	ios-licensing	"show license"
LICENSE4LC_AGENT_OFF	4-Warning	License Agent is turned off. UDI=[chars]	The License Agent on this device is not running	none	"Please check the device configuration " "if you need to enable it."
LICENSE4LC_AGENT_OFF	4-Warning	License Agent is turned off. UDI=[chars]	The License Agent on this device is not running	none	"Please check the device configuration " "if you need to enable it."
LICENSE4PRECEDENCE	4-Warning	Setting precedence for feature [chars] failed with error : [dec]	A license is revoked from the system	none	"This is just an informational message to" " log a message when a license has been revoked"
LICENSE4PRECEDENCE	4-Warning	Setting precedence for feature [chars] failed with error : [dec]	A license is revoked from the system	none	"This is just an informational message to" " log a message when a license has been revoked"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LICENSE4UDI_MISMATCH	4-Warning	The source license udi[chars]:[chars] differs from the platform udi[chars]:[chars] please save the running config.	The source license udi mismatches with the platform udi	none	"Please save running-config."
LICENSE4UDI_MISMATCH	4-Warning	The source license udi[chars]:[chars] differs from the platform udi[chars]:[chars] please save the running config.	The source license udi mismatches with the platform udi	none	"Please save running-config."
LICENSE-6-COUNT	6-Information	Feature [chars] [chars] license count changed from [dec] to [dec].	The feature's maximum licensable count has changed	none	"This is just an informational message to" "denote count change for particular feature"
LICENSE-6-COUNT	6-Information	Feature [chars] [chars] license count changed from [dec] to [dec].	The feature's maximum licensable count has changed	none	"This is just an informational message to" "denote count change for particular feature"
LICENSE6EULA_ACCEPT_ALL	6-Information	The Right to Use End User License Agreement is accepted	This message indicates that the customer has configured 'license agree end user agreement' in the system to indicate that EULA for all licenses are accepted. And that they accept the Right to use End Use License Agreement found at: <a href="http://www.cisco.com/wwww/ios/ios_eula/ios_eula.html">http://www.cisco.com/wwww/ios/ios_eula/ios_eula.html</a>	ios-licensing	-



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
LICENSE-6-VIOLATION	6-Information	Feature [chars] [chars] count violation - count = [dec] usage count = [dec].	The feature's count is less than the current usage count	none	"This is just an informational message to" "denote count change for particular feature"
LICENSE-6-LC_MISMATCH	6-Information	Configured license image level [chars] does not match the current level [chars]. Reload is required to bring the system up in [chars]	During boot-up of system the configured license image level might mismatch with the current level. This could happen when customer copy a different startup-config to the system.	polaris-license	"Reload is required to bring the system up in " "the configured license image level."
LIIN3-SET_ACCESS_FAIL	3-Error	Installing LIIN interface access control failed	This error happens when IOS failed to set the access control function for the LIIN possibly due to IOSd out of memory or corruption. In this case LIIN interface setup will not proceed will not operate properly and cannot be recovered. Persistent access features and interactive commands will not work.	iosxe-iosd-infra	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LIIN3SET_TABLEID_FAIL	3-Error	Installing [chars] LIIN interface tableid failed	This error happens when IOS failed to set tableid into linux kernel possibly due to either IOSd or kernel out of memory or corruption. In this case LIIN interface will not have VRF installed for the associated address family. The LIIN interface will not operate properly and cannot be recovered. Persistent access features and interactive commands will not work.	iosxe-iosd-infra	LOG_STD_ACTION
LIIN3-VRFADD_FAIL	3-Error	Problem creating vrf	The LIIN config process failed to allocate a mandatory iVRF. The LIIN interface will not operate properly and cannot be recovered. Persistent access features and interactive commands will not work.	-	LOG_STD_ACTION
LIIN3-VRFMODIFY_FAIL	3-Error	Problem adding LIIN interface to vrf table	The LIIN config process failed to assign the LIIN interface to its mandatory iVRF. The LIIN interface will not operate properly and cannot be recovered. Persistent access features and interactive commands will not work.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LINE-TENET_ALLOWED	6-Information	Telnet access allowed due to romvar: SR_INIT_SHELL	Telnet from shell to IOS allowed because rommon variable SR_INIT_SHELL is set with value aux_do_system_shell. Remove this value from SR_INIT_SHELL or unset SR_INIT_SHELL to disable the telnet access	-	LOG_SID_NO_ACTION
LINEPROIO-RPSDOWN	5-Notice	Line protocol on Interface [chars] changed state to [chars]	The data link level line protocol changed state.	iiot-sw-redundancy	LOG_SID_NO_ACTION
LINEPROIO-SUPDOWN	5-Notice	Line protocol on Interface [chars] changed state to [chars]	The data link level line protocol changed state.	-	LOG_SID_NO_ACTION
LINK-0-REENTER	0-Emergency	MSG_PROCESS   MSG_TRACEBACK	-	-	-
LINK-2-BADVCALL	2-Critical	Interface [chars] undefined entry point	An internal software error occurred. The high-level system code tried\n\ to use an unimplemented entry point with the virtual interface\n\ descriptor block IDB driver.	-	LOG_STD_ACTION
LINK-2-INTVULN	2-Critical	MSG_PROCESS   MSG_TRACEBACK	-	-	-
LINK-2-LINEST	2-Critical	No linestate vector for [chars]	An internal software inconsistency occurred.	-	LOG_STD_ACTION
LINK-2-NOSOURCE	2-Critical	Source idb not set	An internal software error occurred.	-	LOG_SIDSHITEH_ACTION
LINK-3-BADENCAP	3-Error	Interface [chars] Bad encapsulation code [dec]	-	-	-



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LINK-3-BADMACREG	3-Error	Interface [chars] non-existent MACADDR registry for link [dec]	An attempt to map a network level address to a MAC level address\n\ failed.	-	LOG_STD_ACTION
LINK-3-BOGUSENCAP	3-Error	msgtxt_badencap	A serial interface has been configured with an unknown\n\ encapsulation.	-	LOG_STD_ACTION
LINK-3-COMPREG	3-Error	Interface [chars] non-existent decompression registry.	A software or hardware error occurred.	-	LOG_STD_ACTION
LINK-3-FCS_ERROR	3-Error	[chars] [chars] [chars] [chars]	The FCS Error rate exceeds the configured threshold	-	LOG_STD_ACTION
LINK-3-IDBLISCRE	3-Error	Unable to create [chars] interface list	This message indicates an internal software error.	-	LOG_STD_ACTION
LINK-3-IDBLISINS	3-Error	Not able to insert interface [chars] into [chars] list	This message indicates an internal software error.	-	LOG_STD_ACTION
LINK-3-LINK_FAULT	3-Error	[chars] [chars] [chars] [chars]	The link state for the port is down	-	LOG_STD_ACTION
LINK-3-TOOSMALL	3-Error	Interface [chars] Output runt packet of [dec] bytes	An output packet was detected that was smaller than the minimum\n\ allowable datagram size. An error in another driver or an error in \n\ the system software probably triggered this error message.	-	LOG_STD_ACTION
LINK-3-UPDOWN	3-Error	Interface [chars] changed state to [chars]	The interface hardware went either up or down.	-	"If the state change was unexpected confirm the configuration settings\n\ for the interface."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
LINK-4-BADQID	4-Warning	Interface [chars] bad output queue ID specified [dec].	This message indicates an internal software error.	-	LOG_STD_ACTION
LINK4BRIDGECONFLICT	4-Warning	Interface [chars] encapsulated BPDU recvd from [enet]	An FCIT running in nonencapsulating transparent mode detected an FDDI\n bridge running in encapsulation mode on the same fiber. This is an\n unstable situation and should be corrected. The incoming interface is\n displayed along with the FDDI MAC address in standard form.	-	"Upgrade the errant interface to full transparent mode. Copy the error\n message exactly as it appears and report it to your Cisco\n technical support representative."
LINK-4-FDDISTAT	4-Warning	Interface [chars] FDDI state [chars] detected	There was a state change on the FDDI ring.	-	LOG_STD_ACTION
LINK-4-NOMAC	4-Warning	A random default MAC address of [enet] has\n been chosen. Ensure that this address is unique or specify MAC\n addresses for commands such as 'novell routing' that allow the\n	An addressing inconsistency occurred.	-	"Make sure that this address is unique or specify MAC addresses for\n commands such as novell routing that allow the use of this address as a\n default."
LINK-4-NOSSB	4-Warning	SSB deleted with timer running	An internal software error occurred.\n Problem has been corrected and router operation\n has not been impaired.	-	LOG_STD_ACTION
LINK-4-TOOBIG	4-Warning	Interface [chars] Output packet size of [dec] bytes too big	An internal software error occurred.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LINK-5-BOOTP	5-Notice	[chars] address [node]resolved by %i	An interface's IP address was successfully learned dynamically through\n\n BootP. The first address is the learned IP address. The second IP\n\n address is the IP address of the BootP server that provided the\n\n information.	-	LOG_STD_ACTION
LINK-5-CHANGED	5-Notice	Interface [chars] changed state to [chars]	The interface hardware changed state.	-	LOG_STD_ACTION
LINK-5-LOOPSTATUS	5-Notice	Interface [chars] [chars]	The interface entered or exited loopback.	-	LOG_STD_ACTION
LINK-5-RARP	5-Notice	[chars] address [node]resolved by %i	-	-	LOG_STD_ACTION
LINK-5-REMLOOP	5-Notice	Interface [chars] remote loop [chars] [chars]	The interface entered or exited a remote loopback.	-	LOG_STD_ACTION
LINK-5-SLARP	5-Notice	[chars] address [node]resolved by %i	-	-	LOG_STD_ACTION
LINK-6-BERTMSGGS	6-Information	[chars]	BERT related information messages.	-	LOG_STD_ACTION
LINK-6-BERTSTATUS	6-Information	Interface [chars] [chars]	BERT is completed for this interface.	-	LOG_STD_ACTION
LINK-6-DOWNSHIFT	6-Information	Experienced Channel Quality Impairment on interface [chars] Downshifting Speed to [chars]	Speed Downshift Detected.	firmware	"No action is required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>EWLC-WLSS-LISP</del>	3-Error	ewlc-wlss-lisp	DB-Error:[chars]	An internal error occurred due to which unable to update the oper DB records	LOG_STD_ACTION
<del>EWLC-WLSS-LISP</del>	3-Error	ewlc-wlss-lisp	Error: Failed to send[chars] to MAP Server for[chars]: %d%d%d%d%d	An internal error occurred due to which unable to send Map Register message to MAP server	LOG_STD_ACTION
<del>EWLC-WLSS-LISP</del>	3-Error	ewlc-wlss-lisp	Error:[chars] %d%d%d%d%d with rejection code %u -[chars]	-	-
<del>EWLC-WLSS-LISP</del>	3-Error	ewlc-wlss-lisp	Error:[chars] %d%d%d%d%d	Received MAP reply NACK Message	LOG_STD_ACTION
<del>EWLC-WLSS-LISP</del>	3-Error	ewlc-wlss-lisp	Error: Failed to send[chars] to MAP Server for[chars]: %d%d%d%d%d	An internal error occurred due to which unable to send Map Request message to MAP server	LOG_STD_ACTION
<del>EWLC-WLSS-LISP</del>	3-Error	ewlc-wlss-lisp	LISP AGENT clear[chars]	Map Server msg stats not exists error	LOG_STD_ACTION
<del>EWLC-WLSS-LISP</del>	3-Error	ewlc-wlss-lisp	Error: Received reliable error notification msg with[chars] %d	the Error Notification message received from the MAP Server	LOG_STD_ACTION
<del>EWLC-WLSS-LISP</del>	6-Information	ewlc-wlss-lisp	%s with Map server IP %u.%u.%u.%u	re-establishment of connection with map server got success	LOG_STD_ACTION
<del>EWLC-WLSS-LISP</del>	3-Error	lisp proxy get stats failed for type[[chars]] idx = [dec] ppe_addr[0x[hec]].	Getting lisp default entry stats failed.	cpp-ucode	LOG_STD_ACTION
<del>EWLC-WLSS-LISP</del>	3-Error	lisp proxy init failed rc = [dec]	IPC handler initialization failed.	cpp-ucode	LOG_STD_ACTION
<del>EWLC-WLSS-LISP</del>	3-Error	lisp proxy alloc reply pak failed	Failed to allocate packet buffer for IPC	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IPXPROXIPRESNMLE</del>	3-Error	lisp proxy send failed rc = [dec]	Failed to send IPC packet.	cpp-ucode	LOG_STD_ACTION
<del>IPXPROXIPREQSNMID</del>	3-Error	lisp proxy request msg invalid.	Failed to get lisp default entry stats req from IPC packet.	cpp-ucode	LOG_STD_ACTION
<del>IPXPROXIPRNALMG</del>	4-Warning	invalid lisp proxy msg [dec]	Received an invalid IPC messages subtype.	cpp-ucode	LOG_STD_ACTION
<del>MACACHEXRNNSHCIR</del>	3-Error	Config map-cache site-registration should not be configured on lisp extranet instance %u	Config map-cache site-registration is not supported on lisp instances part of extranet	-	"Remove config map-cache site-registration from " "lisp instances part of extranet. Consider using " "config map-cache extranet-registration under " "provider instance"
<del>MACACHEXRNNSHCIR</del>	3-Error	Config map-cache site-registration should not be configured on lisp extranet instance %u	Config map-cache site-registration is not supported on lisp instances part of extranet	-	"Remove config map-cache site-registration from " "lisp instances part of extranet. Consider using " "config map-cache extranet-registration under " "provider instance"
<del>IPCPACKEXCHNCHND</del>	3-Error	TCP Authentication Option keychain [chars] no longer valid	This message is a warning that the TCP keychain configuration was changed while it was in use.	-	"The TCP keychain configuration was changed while " "being used by LISP session. Correct the " "configuration to restore session"
<del>IPCPACKEXCHNCHND</del>	3-Error	TCP Authentication Option keychain [chars] no longer valid	This message is a warning that the TCP keychain configuration was changed while it was in use.	-	"The TCP keychain configuration was changed while " "being used by LISP session. Correct the " "configuration to restore session"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>LISP</del> ICPMGTOLARGE	3-Error	Received too large TCP message type [node]length [node]> [node] resetting the session	This message is a warning that a too large TCP message is received. LISP resets the session	-	-
<del>LISP</del> ICPMGTOLARGE	3-Error	Received too large TCP message type [node]length [node]> [node] resetting the session	This message is a warning that a too large TCP message is received. LISP resets the session	-	-
LISP-4-ASSERT	4-Warning	Internal LISP error [chars][chars]\n	LISP control plane code execution encountered an unexpected condition.	lisp	"show {ip   ipv6} lisp"
LISP-4-ASSERT	4-Warning	Internal LISP error [chars][chars]\n	LISP control plane code execution encountered an unexpected condition.	lisp	"show {ip   ipv6} lisp"
LISP4-CEF_DISABLED	4-Warning	Disabling [chars] CEF will impact configured LISP functionality.	CEF has been disabled whilst LISP has configuration which depends on CEF being enabled.	-	"Re-enable CEF using the command " "<CmdBold>{ip ipv6} cef [distributed]<noCmdBold>."
LISP4-CEF_DISABLED	4-Warning	Disabling [chars] CEF will impact configured LISP functionality.	CEF has been disabled whilst LISP has configuration which depends on CEF being enabled.	-	"Re-enable CEF using the command " "<CmdBold>{ip ipv6} cef [distributed]<noCmdBold>."
<del>DEFAULT</del> PREV_HAUSER	4-Warning	This message is a warning that the eid-prefix [chars] being used by default-etr is imported into LISP by another configuration.	PxTR doesn't allow the eid-prefix that is being used by default-etr to be imported into LISP by another source.	-	"Remove configuration causing conflict for the eid-" "prefix source from the PxTR/xTR"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>EDIDM_AQOICSRACED</del>	4-Warning	This message is a warning that the eid-prefix [chars] being used by default-etr is imported into LISP by another configuration.	PxTR doesn't allow the eid-prefix that is being used by default-etr to be imported into LISP by another source.	-	"Remove configuration causing conflict for the eid-" "prefix source from the PxTR/xTR"
<del>EDIDM_AQOICSRACED</del>	4-Warning	The LISP [chars] configured Local EID limit [node]has been reached.	-	-	-
<del>EDIDM_AQOICSRACED</del>	4-Warning	The LISP [chars] configured Local EID limit [node]has been reached.	-	-	-
<del>EDIDM_AQOICSRACED</del>	4-Warning	The LISP dynamic database-mapping limit[chars] [dec]/[dec] dynamic entries for eid-table [chars] has been reached.	-	-	-
<del>EDIDM_AQOICSRACED</del>	4-Warning	The LISP dynamic database-mapping limit[chars] [dec]/[dec] dynamic entries for eid-table [chars] has been reached.	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ERR</del> <del>SM</del> <del>INP</del> <del>ACT</del> <del>LR</del> <del>ERR</del>	4-Warning	The LISP database-mapping platform limit of [dec] has been reached. Current count is [dec].	This message is a warning that the local database size has hit the platform limit. The limit may be reached during normal operation if a xTR discovers a large number of dynamic hosts in the EID-prefix ranges enabled for dynamic learning. If the dynamic local database size limit is reached new hosts will not be discovered. It is worth noting that it is normal for the local database to have a limit for dynamic entries for example to set an upper limit on the amount of memory required. To diagnose this issue it may be helpful to inspect the local database using show ip[v6] lisp [eid-table <vrf>] database. The entries can also be cleared with clear lisp[eid-table <vrf>] dynamic-eid.	-	"If this warning persists and traffic drops are "experienced please contact TAC."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>BDLW</del> IP2ORLW4E	4-Warning	The LISP database-mapping platform limit of [dec] has been reached. Current count is [dec].	This message is a warning that the local database size has hit the platform limit. The limit may be reached during normal operation if a xTR discovers a large number of dynamic hosts in the EID-prefix ranges enabled for dynamic learning. If the dynamic local database size limit is reached new hosts will not be discovered. It is worth noting that it is normal for the local database to have a limit for dynamic entries for example to set an upper limit on the amount of memory required. To diagnose this issue it may be helpful to inspect the local database using show ip[v6] lisp [eid-table <vrf>] database. The entries can also be cleared with clear lisp[eid-table <vrf>] dynamic-eid.	-	"If this warning persists and traffic drops are " "experienced please contact TAC."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>EXMISRP/CM/RAED</del>	4-Warning	The LISP [chars] EID platform limit [node]percent has been reached.	This message is a warning that the EID resource size has hit the platform limit. The limit may be reached during normal operation if a xTR has a large number of Local hosts/and or Remote map-caches entries. To diagnose this issue it may be helpful to inspect the platform resource usage using show lisp platform	-	"If this warning persists traffic drops can be " "experienced please contact TAC."
<del>EXMISRP/CM/RAED</del>	4-Warning	The LISP [chars] EID platform limit [node]percent has been reached.	This message is a warning that the EID resource size has hit the platform limit. The limit may be reached during normal operation if a xTR has a large number of Local hosts/and or Remote map-caches entries. To diagnose this issue it may be helpful to inspect the platform resource usage using show lisp platform	-	"If this warning persists traffic drops can be " "experienced please contact TAC."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>EXMREPERMKNRACED</del>	4-Warning	The LISP [chars] EID warning limit greater than [node]percent for platform	This message is a warning that the EID resource size has hit the platform warning limit. The limit may be reached during normal operation if a xTR has a large number of Local hosts/and or Remote map-caches entries. To diagnose this issue it may be helpful to inspect the platform resource usage using show lisp platform	-	"If this warning persists traffic drops can be " "experienced please contact TAC."
<del>EXMREPERMKNRACED</del>	4-Warning	The LISP [chars] EID warning limit greater than [node]percent for platform	This message is a warning that the EID resource size has hit the platform warning limit. The limit may be reached during normal operation if a xTR has a large number of Local hosts/and or Remote map-caches entries. To diagnose this issue it may be helpful to inspect the platform resource usage using show lisp platform	-	"If this warning persists traffic drops can be " "experienced please contact TAC."
<del>EXXRNHCORATGRK</del>	4-Warning	[node]Map-Server detected overlapping prefix [chars] in extranet [chars]	An extranet prefix configured or dynamically learnt on one extranet IID cannot overlap with a prefix in another extranet.	-	"If it is not for specific purposes like firewall " "or service insertion please remove configuration " "causing overlapping extranet prefix to be learnt " "with different instance ID or in a different " "extranet."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IS</del> EXTRANET_OVLAP_PREFIX	4-Warning	[node]Map-Server detected overlapping prefix [chars] in extranet [chars]	An extranet prefix configured or dynamically learnt on one extranet IID cannot overlap with a prefix in another extranet.	-	"If it is not for specific purposes like firewall " "or service insertion please remove configuration " "causing overlapping extranet prefix to be learnt " "with different instance ID or in a different " "extranet."
LISP-4-INTERRUPT	4-Warning	Internal LISP error during interrupt [chars]	-	-	-
LISP-4-INTERRUPT	4-Warning	Internal LISP error during interrupt [chars]	-	-	-
ISP4LISP_TOPRLOC_ADI	4-Warning	[dec] router lisp instances [router lisp [chars]] are not	This message is a warning that the one or more configured router lisp <x> instances are missing the locator-table config. Without this locator-table the lisp instance is not operational.	-	"The operator must configure the " "locator-table below the router lisp instances or "
ISP4LISP_TOPRLOC_ADI	4-Warning	[dec] router lisp instances [router lisp [chars]] are not	This message is a warning that the one or more configured router lisp <x> instances are missing the locator-table config. Without this locator-table the lisp instance is not operational.	-	"The operator must configure the " "locator-table below the router lisp instances or "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ISPCOALDNMRCSETR</del> AUE	4-Warning	[node]IID [node]Failed to receive map-notify from map-server [chars]	This implies the map-sever may not have received/processed the map-register from this ETR or the map-server failed to successfully deliver the map-notify to the ETR.	-	"Ensure map-server is configured to accept " "map-register for this EID prefix ETR is " "configured with the correct map-server key and " "bidirectional traffic can flow between ETR and " "map-server."
<del>ISPCOALDNMRCSETR</del> AUE	4-Warning	[node]IID [node]Failed to receive map-notify from map-server [chars]	This implies the map-sever may not have received/processed the map-register from this ETR or the map-server failed to successfully deliver the map-notify to the ETR.	-	"Ensure map-server is configured to accept " "map-register for this EID prefix ETR is " "configured with the correct map-server key and " "bidirectional traffic can flow between ETR and " "map-server."
<del>ISP4LOCALDNORCUIE</del>	4-Warning	No route to local EID database prefix [chars].	There is no RIB route that covers or is a more specific of the configured local EID database prefix. This means that the ETR will not be able to forward decapsulated packets to their destination.	-	"Check the network connectivity and routing " "configuration within the LISP site and re-establish " "a route to destinations covered by the configured " "EID prefix."
<del>ISP4LOCALDNORCUIE</del>	4-Warning	No route to local EID database prefix [chars].	There is no RIB route that covers or is a more specific of the configured local EID database prefix. This means that the ETR will not be able to forward decapsulated packets to their destination.	-	"Check the network connectivity and routing " "configuration within the LISP site and re-establish " "a route to destinations covered by the configured " "EID prefix."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ISPCO_LOCAL_DB_ERR</del>	4-Warning	Created local eid entry for EID prefix [chars] under Lisp instance-id [dec] Cause: [chars]	This message is a notification that the must have local eid for an EID prefix has been created.	-	"If this warning persists check platform " "limits and please contact TAC."
<del>ISPCO_LOCAL_DB_ERR</del>	4-Warning	Created local eid entry for EID prefix [chars] under Lisp instance-id [dec] Cause: [chars]	This message is a notification that the must have local eid for an EID prefix has been created.	-	"If this warning persists check platform " "limits and please contact TAC."
<del>ISPCO_LOCAL_DB_ERR</del>	4-Warning	Inconsistent LISP routing locator configuration detected in the local EID database for instance-ID [node][chars] address family.	All the LISP local EID prefixes for an address family must be configured with the same set of routing locators. LISP detected that there are routing locators configured on some local EID prefixes and not on other local EID prefixes of the same address family.	-	"Issue the <CmdBold>show {ip   ipv6} lisp database" "<noCmdBold> command and look for routing " "locators marked as <CmdBold>missing</CmdBold>" "Configure the missing routing locators for the " "remaining local EID prefixes. If a routing locator" "must not be used for inbound traffic to a local " "EID prefix then a priority of 255 can be " "specified."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HA</del> COA_HRCO@NOSEFY	4-Warning	Inconsistent LISP routing locator configuration detected in the local EID database for instance-ID [node][chars] address family.	All the LISP local EID prefixes for an address family must be configured with the same set of routing locators. LISP detected that there are routing locators configured on some local EID prefixes and not on other local EID prefixes of the same address family.	-	"Issue the <CmdBold>show {ip   ipv6} lisp database" "<noCmdBold> command and look for routing " "locators marked as <CmdBold>missing</CmdBold>." "Configure the missing routing locators for the " "remaining local EID prefixes. If a routing locator" "must not be used for inbound traffic to a local " "EID prefix then a priority of 255 can be " "specified."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IBM_MAP_CACHE_CREATE_FAIL	4-Warning	Failed to create map cache entry for EID prefix [chars] under Lisp instance-id [dec] Cause: [chars]	This message is a notification that the map cache creation for an EID prefix has failed. Probable reasons could be failure to create or lookup a corresponding map cache entry due to inconsistent states low memory conditions or commonly if map-cache-limit is explicitly set to a low value. If the cache size limit is reached new entries will replace old/inactive ones as required. If the map-cache limit is set too low actively used EID-to-RLOC mappings may be replaced continuously which causes traffic to be dropped while these mappings are re-	-	"If this limit is reached and traffic drops are " "experienced consider re-evaluating the map-cache " "limit and configure a higher limit."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MAP-CACHE-CREATION-FAILURE</del>	4-Warning	Failed to create map cache entry for EID prefix [chars] under Lisp instance-id [dec] Cause: [chars]	This message is a notification that the map cache creation for an EID prefix has failed. Probable reasons could be failure to create or lookup a corresponding map cache entry due to inconsistent states low memory conditions or commonly if map-cache-limit is explicitly set to a low value. If the cache size limit is reached new entries will replace old/inactive ones as required. If the map-cache limit is set too low actively used EID-to-RLOC mappings may be replaced continuously which causes traffic to be dropped while these mappings are re-	-	"If this limit is reached and traffic drops are "experienced consider re-evaluating the map-cache "limit and configure a higher limit."
<del>MAP-CACHE-LIMIT-REACHED</del>	4-Warning	The LISP map-cache limit warning threshold [dec]/[dec] entries for instance-id [dec] has been reached.	-	-	-
<del>MAP-CACHE-LIMIT-REACHED</del>	4-Warning	The LISP map-cache limit warning threshold [dec]/[dec] entries for instance-id [dec] has been reached.	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ISPMAPRCSIR</del> WARNNG	4-Warning	Map-Server received registration for a /0 subnet which specifies an attempt to register all prefix range	This message is a warning that the Map-Server received a registration message for a /0 subnet. An XTR may be attempting to receive all traffic of the network	-	"Check the router lisp configuration on XTR. " "Consider removing/changing the /0 eid-prefix in " "database mapping entry on XTR"
<del>ISPMAPRCSIR</del> WARNNG	4-Warning	Map-Server received registration for a /0 subnet which specifies an attempt to register all prefix range	This message is a warning that the Map-Server received a registration message for a /0 subnet. An XTR may be attempting to receive all traffic of the network	-	"Check the router lisp configuration on XTR. " "Consider removing/changing the /0 eid-prefix in " "database mapping entry on XTR"
<del>IAARQISNCS</del> ERRRC	4-Warning	IID [node]No usable ITR RLOC unable to send map-request.	This message is a warning that the device does not have any usable ITR RLOC for map-request transmission. When this condition occurs new traffic is impacted.	-	"Verify there is any least one static local EID " "configured or a dynamic EID is detected or " "\map-request itr-rlocs\" is configured or the " "device is configured as a proxy-itr. If the " "message persists then verify the RLOC is local " "and in UP state."
<del>IAARQISNCS</del> ERRRC	4-Warning	IID [node]No usable ITR RLOC unable to send map-request.	This message is a warning that the device does not have any usable ITR RLOC for map-request transmission. When this condition occurs new traffic is impacted.	-	"Verify there is any least one static local EID " "configured or a dynamic EID is detected or " "\map-request itr-rlocs\" is configured or the " "device is configured as a proxy-itr. If the " "message persists then verify the RLOC is local " "and in UP state."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IPMAPSRMRCNMRG</del>	4-Warning	IID [node]Map-server is converging unable to send negative map-reply.	This message is a warning that the map-server is converging after reload or HA event. During this time the map-server would not send negative map-reply hence traffic would be impacted. It typically takes 3-6 minutes for the map-server to converge.	-	"Ensure there is at least two map-servers " "in the network for redundancy. When reload is " "required then ensure the peering map-server is " "fully converged before triggering reload."
<del>IPMAPSRMRCNMRG</del>	4-Warning	IID [node]Map-server is converging unable to send negative map-reply.	This message is a warning that the map-server is converging after reload or HA event. During this time the map-server would not send negative map-reply hence traffic would be impacted. It typically takes 3-6 minutes for the map-server to converge.	-	"Ensure there is at least two map-servers " "in the network for redundancy. When reload is " "required then ensure the peering map-server is " "fully converged before triggering reload."
<del>MAPSRMRCNMRG</del>	4-Warning	Map-server Extranet policy EID platform limit for [chars] is reached [node] prefix [chars] in [node]IID [node]Extranet [chars] blocked	-	-	-
<del>MAPSRMRCNMRG</del>	4-Warning	Map-server Extranet policy EID platform limit for [chars] is reached [node] prefix [chars] in [node]IID [node]Extranet [chars] blocked	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IBM/AS/RS/SE/ED/RR/KIM</del>	4-Warning	[node]IID [node]Site [chars] Map-server site dynamic EID prefix	Map-server cannot create any more dynamic EID prefix entry result accept-more-specifics. Consequently the map-register is not processed.	-	"Increase the map-server dynamic EID prefix " "entry limit."
<del>IBM/AS/RS/SE/ED/RR/KIM</del>	4-Warning	[node]IID [node]Site [chars] Map-server site dynamic EID prefix	Map-server cannot create any more dynamic EID prefix entry result accept-more-specifics. Consequently the map-register is not processed.	-	"Increase the map-server dynamic EID prefix " "entry limit."
<del>IBM/AS/RS/SE/ED/RR/MCG</del>	4-Warning	Configured limit [node]is less than current EID prefix count	The newly configured limit is less than the current EID prefix count.	-	"Issue \"clear lisp site\" for limit to \"take effect."
<del>IBM/AS/RS/SE/ED/RR/MCG</del>	4-Warning	Configured limit [node]is less than current EID prefix count	The newly configured limit is less than the current EID prefix count.	-	"Issue \"clear lisp site\" for limit to \"take effect."
<del>IBM/AS/RS/SE/ED/RR/SOD</del>	4-Warning	[node]IID [node]Site [chars] Map-server site dynamic EID prefix	Dynamic EID prefix entry count has reached or exceeded the configured threshold. This is used to warn the administrator that corrective action may need to be taken to avoid reaching the map-server EID prefix limit.	-	"No immediate action is required unless the " "entry count is very close to the configured " "limit at which point the limit on the map-server " "needs to be adjusted."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MAPSERVPRMTHSOD</del>	4-Warning	[node]IID [node]Site [chars] Map-server site dynamic EID prefix	Dynamic EID prefix entry count has reached or exceeded the configured threshold. This is used to warn the administrator that corrective action may need to be taken to avoid reaching the map-server EID prefix limit.	-	"No immediate action is required unless the " "entry count is very close to the configured " "limit at which point the limit on the map-server " "needs to be adjusted."
<del>MAPSERVPRMTHSOD</del>	4-Warning	Map-server site EID prefix entry platform limit for [chars] is reached [node] prefix [chars] in [node]IID [node]Site [chars] blocked	-	-	-
<del>MAPSERVPRMTHSOD</del>	4-Warning	Map-server site EID prefix entry platform limit for [chars] is reached [node] prefix [chars] in [node]IID [node]Site [chars] blocked	-	-	-
ISPMSKEDSMRCONICT	4-Warning	RLOC address [chars] has conflicts with other RLOCs in lower [node]bits SMR may be delayed.	Due to the platform forwarding ASIC limitation RLOCs in the site should have unique combination of lower bits. Otherwise LISP SMR messages may not be sent and traffic after host roam may be blackholed for a period of time.	-	"Lower bits of RLOCs are guaranteed to be unique " "if addresses as assigned from the same /96 network " "subnet."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>ISP</del> MASKEDSMRCONFLICT	4-Warning	RLOC address [chars] has conflicts with other RLOCs in lower [node]bits SMR may be delayed.	Due to the platform forwarding ASIC limitation RLOCs in the site should have unique combination of lower bits. Otherwise LISP SMR messages may not be sent and traffic after host roam may be blackholed for a period of time.	-	"Lower bits of RLOCs are guaranteed to be unique " "if addresses as assigned from the same /96 network " "subnet."
<del>ISP</del> EXTRANETLOCACR	4-Warning	[node]Map-Resolver detected the PETR locator [chars] with	Map resolver does not allow PETR locator's instance outside of the instances configured as extranet Policy	-	"Remove configuration causing locator-set with " "extranet prefix to be advertised to instances " "outside of extranet."
<del>ISP</del> EXTRANETLOCACR	4-Warning	[node]Map-Resolver detected the PETR locator [chars] with	Map resolver does not allow PETR locator's instance outside of the instances configured as extranet Policy	-	"Remove configuration causing locator-set with " "extranet prefix to be advertised to instances " "outside of extranet."
<del>ISP</del> LOCALSIZINGRD	4-Warning	The LISP [chars] EID platform limit reached. Remote EID eviction triggered to make space for Local EIDs. The eviction will continue till the Local EID Reserved [node]percentage is reached.	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ERRMCEIDCONRGRBD</del>	4-Warning	The LISP [chars] EID platform limit reached. Remote EID eviction triggered to make space for Local EIDs. The eviction will continue till the Local EID Reserved [node]percentage is reached.	-	-	-
<del>ERRMCEIDCONRGRBD</del>	4-Warning	Created map cache entry for EID prefix [chars] under Lisp instance-id [dec] Cause: [chars]	This message is a notification that the must have map cache for an EID prefix has been created. The platform may not accept this map-cache as its limit may have exceeded. To diagnose this issue it may be helpful to inspect the sources of map-cache using show lisp instance-id <id> <ipv4   ipv6> map-cache.	-	"If this warning persists check platform " "limits and please contact TAC."
<del>ERRMCEIDCONRGRBD</del>	4-Warning	Created map cache entry for EID prefix [chars] under Lisp instance-id [dec] Cause: [chars]	This message is a notification that the must have map cache for an EID prefix has been created. The platform may not accept this map-cache as its limit may have exceeded. To diagnose this issue it may be helpful to inspect the sources of map-cache using show lisp instance-id <id> <ipv4   ipv6> map-cache.	-	"If this warning persists check platform " "limits and please contact TAC."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ISPMOERCQOUEHCID</del>	4-Warning	LISP remote locator [chars] route rejected due to locator reachability minimum-mask-length check.	LISP locator not reachable as per shortest mask prefix configured to accept when looking up a remote RLOC in the RIB	-	"Ensure LISP locator reachability is consistent with " "minimum-mask configuration"
<del>ISPMOERCQOUEHCID</del>	4-Warning	LISP remote locator [chars] route rejected due to locator reachability minimum-mask-length check.	LISP locator not reachable as per shortest mask prefix configured to accept when looking up a remote RLOC in the RIB	-	"Ensure LISP locator reachability is consistent with " "minimum-mask configuration"
<del>ISPMOERCQOUEHCID</del>	4-Warning	LISP [chars] RIB [chars] route import events dropped after reaching queue size of [node] Re-evaluation scheduled in [node]minutes.	The transient event queue used by LISP to store received RIB route import events reached the limit specified through the <CmdBold>{ipv4   ipv6} route-import maximum-prefix <limit><noCmdBold> configuration. Subsequent RIB events were dropped. There may now be an inconsistency between the routes present in the RIB and those imported by LISP. A re-evaluation of LISP route import for the affected EID table has been scheduled to attempt to automatically recover from this condition.	-	"Modify the LISP <noCmdBold>route-import <noCmdBold> " "configuration for the specified EID table to " "apply a route-map that only allows the desired RIB " "routes. If more routes are desired than the " "current limit you can increase it through the " "route-map command. If " "error was a transient condition in the RIB you can " "force a re-evaluation of route import through the " "<CmdBold>clear {ip   ipv6} lisp route-import" "<noCmdBold>"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LISP4RIBEVENTDOWN	4-Warning	LISP [chars] RIB [chars] route import events dropped after reaching queue size of [node] Re-evaluation scheduled in [node]minutes.	The transient event queue used by LISP to store received RIB route import events reached the limit specified through the <CmdBold>{ipv4   ipv6} route-import maximum-prefix <limit><noCmdBold> configuration. Subsequent RIB events were dropped. There may now be an inconsistency between the routes present in the RIB and those imported by LISP. A re-evaluation of LISP route import for the affected EID table has been scheduled to attempt to automatically recover from this condition.	-	"Modify the LISP <CmdBold>route-import <CmdBold> " "configuration for the specified EID table to " "apply a route-map that only allows the desired RIB " "routes. If more routes are desired than the " "current limit you can increase it through the " " <CmdBold>maximum-prefix <CmdBold> command. If " "error was a transient condition in the RIB you can " "force a re-evaluation of route import through the " "<CmdBold>clear {ip   ipv6} lisp route-import" "<noCmdBold>"
LISP4ROUTEIMPORT_WARN	4-Warning	LISP [chars] RIB import warning[chars] [chars] reached [node]routes limit set to [node]	-	-	-
LISP4ROUTEIMPORT_WARN	4-Warning	LISP [chars] RIB import warning[chars] [chars] reached [node]routes limit set to [node]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MAPSERVER</del> <del>CRITICAL</del> <del>EXCEEDED</del>	4-Warning	Configured site-registration limit [node]has been reached or	Map-server cannot create any more site registrations which are not explicitly configured. Consequently at least one map-register has been dropped.	-	"Increase the site registration limit using " "<CmdBold>site-registration limit <limit><noCmdBold>" "or limit the number of registrations from ETRs."
<del>MAPSERVER</del> <del>CRITICAL</del> <del>EXCEEDED</del>	4-Warning	Configured site-registration limit [node]has been reached or	Map-server cannot create any more site registrations which are not explicitly configured. Consequently at least one map-register has been dropped.	-	"Increase the site registration limit using " "<CmdBold>site-registration limit <limit><noCmdBold>" "or limit the number of registrations from ETRs."
<del>MAPSERVER</del> <del>CRITICAL</del> <del>EXCEEDED</del>	4-Warning	Configured site-registration limit [node]is less than or equal	The newly configured limit is less than the current count of registrations.	-	"Issue <CmdBold>clear lisp <id> site<noCmdBold> for " "limit to take immediate effect."
<del>MAPSERVER</del> <del>CRITICAL</del> <del>EXCEEDED</del>	4-Warning	Configured site-registration limit [node]is less than or equal	The newly configured limit is less than the current count of registrations.	-	"Issue <CmdBold>clear lisp <id> site<noCmdBold> for " "limit to take immediate effect."
<del>MAPSERVER</del> <del>CRITICAL</del> <del>WARNING</del>	4-Warning	Configured site-registration warning threshold [node][node]> [node]%	Site registration count has reached or exceeded the configured threshold. This is used to warn the administrator that corrective action may need to be taken to avoid reaching the configured site registration limit.	-	"No immediate action is required. Administrator may " "want to consider whether ETR registrations should " "be limited or capacity provisioned to accomodate " "growth in registration count."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ERR</del> ERRADMWRNG	4-Warning	Configured site-registration warning threshold [node][node]> [node]%	Site registration count has reached or exceeded the configured threshold. This is used to warn the administrator that corrective action may need to be taken to avoid reaching the configured site registration limit.	-	"No immediate action is required. Administrator may " "want to consider whether ETR registrations should " "be limited or capacity provisioned to accomodate " "growth in registration count."
<del>ERR</del> ERRRCONSENY	4-Warning	[chars] RLOC [chars] in EID database configuration in record for [chars] from [chars].	While probing other xTRs in our own site we received a map reply mapping record listing a different set of locators than those we have configured in database commands.	-	"Issue the <CmdBold>show {ip   ipv6} lisp database" "<noCmdBold> command on both this xTR and the other " "site xTR that sent us the map reply to locate the " "mis-configuration. Add or remove locators in the " "config of one or both xTRs to make them have the " "same list of configured locators."
<del>ERR</del> ERRRCONSENY	4-Warning	[chars] RLOC [chars] in EID database configuration in record for [chars] from [chars].	While probing other xTRs in our own site we received a map reply mapping record listing a different set of locators than those we have configured in database commands.	-	"Issue the <CmdBold>show {ip   ipv6} lisp database" "<noCmdBold> command on both this xTR and the other " "site xTR that sent us the map reply to locate the " "mis-configuration. Add or remove locators in the " "config of one or both xTRs to make them have the " "same list of configured locators."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>IBANS.POREDIOCA_RCC</del>	4-Warning	This platform does not support local [chars] RLOCs [chars] will be marked as down.	The platform has indicated it does not support local RLOCs of this address family.	-	"Deconfigure the RLOC or move it to another xTR at " "the site which does not have this platform " "limitation."
<del>IBANS.POREDIOCA_RCC</del>	4-Warning	This platform does not support local [chars] RLOCs [chars] will be marked as down.	The platform has indicated it does not support local RLOCs of this address family.	-	"Deconfigure the RLOC or move it to another xTR at " "the site which does not have this platform " "limitation."
<del>IBSP.PSEONSAEHCNE</del>	5-Notice	Lisp session to peer address [chars] peer port [node]changed to [chars].	This message is a notification that the specified session has gone up/down.	-	"If the session is expected to go up/down then" "no action is required. Otherwise investigation" "regarding the session going up/down should be" "done."
<del>IBSP.PSEONSAEHCNE</del>	5-Notice	Lisp session to peer address [chars] peer port [node]changed to [chars].	This message is a notification that the specified session has gone up/down.	-	"If the session is expected to go up/down then" "no action is required. Otherwise investigation" "regarding the session going up/down should be" "done."
<del>IBARS.ME.AREQ.SHEE</del>	5-Notice	[node]IID [node]Map-resolver filtered map-request from [chars].	-	-	-
<del>IBARS.ME.AREQ.SHEE</del>	5-Notice	[node]IID [node]Map-resolver filtered map-request from [chars].	-	-	-
<del>IBARS.ME.AREQ.SHEE</del>	5-Notice	[node]IID [node]Map-resolver [chars] is [chars].	No route to reach map-resolver hence map-cache will not get resolved.	-	"Ensure ITR has connectivity to map-resolver."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MAPRESMAPRES</del>	5-Notice	[node]IID [node]Map-resolver [chars] is [chars].	No route to reach map-resolver hence map-cache will not get resolved.	-	"Ensure ITR has connectivity to map-resolver."
<del>MAPRESMAPRES</del>	5-Notice	Map request received for EID[chars] but map server does not	This message is to alert the user to the fact that a map request for an EID prefix is received by the map server and it doesn't have reachability to any ITR or ETR that registered this prefix so it cannot provide a useable locator to complete the EID-to-locator mapping.	-	"Normally this should not happen but if this "condition persists it shows a connectivity problem " between the map server and locators connected to the " network."
<del>MAPRESMAPRES</del>	5-Notice	Map request received for EID[chars] but map server does not	This message is to alert the user to the fact that a map request for an EID prefix is received by the map server and it doesn't have reachability to any ITR or ETR that registered this prefix so it cannot provide a useable locator to complete the EID-to-locator mapping.	-	"Normally this should not happen but if this "condition persists it shows a connectivity problem " between the map server and locators connected to the " network."
<del>MAPRESMAPRES</del>	5-Notice	[node]IID [node]Map-server [chars][chars] is [chars].	No route to reach map-server so local EID database prefix will not get registered.	-	"Ensure ETR has connectivity to map-server."
<del>MAPRESMAPRES</del>	5-Notice	[node]IID [node]Map-server [chars][chars] is [chars].	No route to reach map-server so local EID database prefix will not get registered.	-	"Ensure ETR has connectivity to map-server."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>MAPSERVLOC</del>	5-Notice	[node]IID [node]Site [chars] Allowed locator mismatch in map-register	The map-register contains RLOC that is not in the site's allowed locator list.	-	"Ensure map-server has the registering RLOCs " "added to the site's allowed locator list."
<del>MAPSERVLOC</del>	5-Notice	[node]IID [node]Site [chars] Allowed locator mismatch in map-register	The map-register contains RLOC that is not in the site's allowed locator list.	-	"Ensure map-server has the registering RLOCs " "added to the site's allowed locator list."
<del>MAPSERVLOC</del>	5-Notice	[node]IID [node]Site [chars] Failed to authenticate map-register for	Map-server failed to authenticate map-register for EID prefix. This is potentially caused by different shared keys configured on ETR and map-server.	-	"Ensure ETR and map-server have the same " "configured shared key."
<del>MAPSERVLOC</del>	5-Notice	[node]IID [node]Site [chars] Failed to authenticate map-register for	Map-server failed to authenticate map-register for EID prefix. This is potentially caused by different shared keys configured on ETR and map-server.	-	"Ensure ETR and map-server have the same " "configured shared key."
<del>MAPSERVLOC</del>	5-Notice	[node]IID [node]No site configuration to accept	No site is configured to accept registration for EID prefix.	-	"Configure EID prefix in map-server site to " "enable registration."
<del>MAPSERVLOC</del>	5-Notice	[node]IID [node]No site configuration to accept	No site is configured to accept registration for EID prefix.	-	"Configure EID prefix in map-server site to " "enable registration."
<del>PROXYETR</del>	5-Notice	[node]IID [node]Proxy ETR [chars] is [chars].	No route to reach proxy ETR so traffic drop is expected.	-	"Ensure router has connectivity to proxy ETR."
<del>PROXYETR</del>	5-Notice	[node]IID [node]Proxy ETR [chars] is [chars].	No route to reach proxy ETR so traffic drop is expected.	-	"Ensure router has connectivity to proxy ETR."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ISSO</del> _SWICHOVR_TIMEOUT	5-Notice	LISP SSO switchover timeout expired	LISP is running in the Hot Standby mode and after switchover RIB did not converge in 3 minutes	-	"BGP has many routes to process with " "as RIB has many routes ensure all of them " "were processed."
<del>ISSO</del> _SWICHOVR_TIMEOUT	5-Notice	LISP SSO switchover timeout expired	LISP is running in the Hot Standby mode and after switchover RIB did not converge in 3 minutes	-	"BGP has many routes to process with " "as RIB has many routes ensure all of them " "were processed."
<del>ISSO</del> _DDT_BAD_XIR_NONCE	6-Information	DDT resolver received two Map-Requests from [chars] for different EID prefixes but with the same nonce.	An xTR issuing LISP Map-Requests includes a nonce value in each request. The xTR must use a different nonce value for each Map-Request for a new EID prefix. The identified xTR has sent us two Map-Requests each for a different EID prefix and they both carried the same nonce value. When querying the DDT hierarchy duplicate nonce values prevent the DDT resolver from associating received Map-Referral messages with the correct request. To protect against this problem the DDT resolver has dropped the second of the two received requests.	-	"Contact the operator of the ITR that is issuing " "the Map-Requests so that they can fix the problem " "by upgrading their system."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>DDT-BAD_XIR_NONCE</del>	6-Information	DDT resolver received two Map-Requests from [chars] for different EID prefixes but with the same nonce.	An xTR issuing LISP Map-Requests includes a nonce value in each request. The xTR must use a different nonce value for each Map-Request for a new EID prefix. The identified xTR has sent us two Map-Requests each for a different EID prefix and they both carried the same nonce value. When querying the DDT hierarchy duplicate nonce values prevent the DDT resolver from associating received Map-Referral messages with the correct request. To protect against this problem the DDT resolver has dropped the second of the two received requests.	-	"Contact the operator of the ITR that is issuing " "the Map-Requests so that they can fix the problem " "by upgrading their system."
<del>BASE_AIR_EXPIRED</del>	6-Information	[node]IID [node]Map-Server site [chars] all registrations expired	-	-	-
<del>BASE_AIR_EXPIRED</del>	6-Information	[node]IID [node]Map-Server site [chars] all registrations expired	-	-	-
LLC-2-UNEXPECT	2-Critical	LLC2: [chars] UNEXPECTED EVENT	An internal software error was found. A software component is trying\n\ to use LLC2 structures that do not exist.	-	"Record the configuration and any information that would be useful in\n\ recreating the error and call your technical support representative."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LLDP4-LLDP_NEW_ENTRY	4-Warning	Neighbor record not committed - malloc failure	LLDP entry creation failed	ethernet-lldp	"Run memory diagnostics"
LLIST-3-OFFLIST	3-Error	[chars] from 0x[hec] 0x[hec] not on list	An internal inconsistency was detected when an attempt was made to\n\n remove an item from a list not on the list.	tag-switch	"Copy the message exactly as it appears and report it to your technical\n\n service representative."
LLIST-3-OFFLIST	3-Error	[chars] from 0x[hec] 0x[hec] not on list	Duplicate Radius mapping received from crypto. Internal error	cws-xe	"This message is for informational purposed only"
LLIST-3-OFFLIST	3-Error	[chars] from 0x[hec] 0x[hec] not on list	TXTHREAD API returned a perror.	tag-switch	"Copy the message exactly as it appears and report it to your technical\n\n service representative."
LLIST-3-ONLIST	3-Error	[chars] to 0x[hec] 0x[hec] on list	An internal inconsistency was detected when an attempt was made to\n\n add an item to a list already on the list.	tag-switch	"Copy the message exactly as it appears and report it to your technical\n\n service representative."
LLIST-3-ONLIST	3-Error	[chars] to 0x[hec] 0x[hec] on list	An internal inconsistency was detected when an attempt was made to\n\n add an item to a list already on the list.	tag-switch	"Copy the message exactly as it appears and report it to your technical\n\n service representative."
LLIST-3-ONLIST	3-Error	[chars] to 0x[hec] 0x[hec] on list	An internal inconsistency was detected when an attempt was made to\n\n add an item to a list already on the list.	tag-switch	"Copy the message exactly as it appears and report it to your technical\n\n service representative."
IOSXE-1-ALERT	1-Alert	iosxe-fwdmgr	APs connected exceed the permanent licenses available by %d.	The number of APs connected is greater than the number of permanent licenses.	Purchase adder licenses to add to your existing permanent licenses.

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IMBRU_LICENSE_EXCEED	1-Alert	iosxe-fwdmgr	AP-count license usage has exceeded the available AP-count by %d.	AP-count license usage has exceeded the available AP-count.	Remove the excess APs from the controller.
IMBRU_LICENSE_EVAL_EXP	1-Alert	iosxe-fwdmgr	Evaluation period of [chars] license expired %d days ago. Purchase a permanent license.	The evaluation license has expired.	Purchase a permanent license.
IMBRU_LICENSE_EXCESS_APIC	1-Alert	iosxe-fwdmgr	Total AP-count licenses available have exceeded the maximum supported AP-count by %d.	The number of AP-count licenses available is greater than the maximum number of supported AP-count.	The extra AP-count licenses can be moved to another controller.
IMBRU_LICENSE_MISMATCH	1-Alert	iosxe-fwdmgr	The current stack does not support the applied AP License Count. Reconnect a Catalyst 5760 SKU running valid AP License Count within 90 days.	AIR-CT5760-HA-K9 does not support the same licensing as AIR-CT5760-HA-K9. So an AIR-CT5760-HA-K9 SKU is needed in the stack to support this licensing.	Reconnect a Catalyst 5760 SKU running valid AP License Count within 90 days.
IMBRU_LICENSE_RTU_DISABLED	1-Alert	iosxe-fwdmgr	Cannot proceed. Right-to-use Licensing is disabled. Switch is in Smart Licensing mode.	RTU functionality is disabled when switch in SL mode.	Enable RTU licensing with CLI: no license smart enable.
IMBRU_LICENSE_SKU_MISMATCH	1-Alert	iosxe-fwdmgr	Both the switches in the stack are AIR-CT5760-HA-K9 SKUs. Replace one of the switches with another Catalyst 5760 SKU running valid AP License Count	Two AIR-CT5760-HA-K9 SKUs are not supposed to stack.	Replace the license mismatch switch with a Catalyst 5760 SKU running valid AP License Count.
IMBRU_LICENSE_SUB_TERM_EXP	1-Alert	iosxe-fwdmgr	Subscription term period of [chars] license expired %d days ago. Please renew your license.	The subscription license has expired.	Renew your subscription license.

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IMBRI</del> UICENSAFILEERR	3-Error	iosxe-fwdmgr	%s: License file update failed. Reapply the configuration.	Failed to update the license file.	Reapply the configuration.
<del>IMBRI</del> UICENSERADER	3-Error	iosxe-fwdmgr	%s: License file read failed.	Failed to read the license file.	Reapply the configuration.
<del>IMBRI</del> UICENSEVALWARN	4-Warning	iosxe-fwdmgr	Evaluation period of[chars] license is about to expire in %d days. Purchase a permanent license.	The evaluation license is about to expire.	Purchase a permanent license.
<del>IMBRI</del> UICENSERMWARN	4-Warning	iosxe-fwdmgr	Subscription term period of[chars] license is about to expire in %d days. Please renew your license.	The subscription license is about to expire.	Renew your subscription license.
<del>IMBRI</del> UICENSEAPADD	6-Information	iosxe-fwdmgr	%d adder AP-count licenses are added	AP-count licenses have been added.	More APs can be supported.
<del>IMBRI</del> UICENSEAPDEL	6-Information	iosxe-fwdmgr	%d adder AP-count licenses are removed.	AP-count licenses have been removed.	Fewer APs are supported.
<del>IMBRI</del> UICENSESMARTENABLERU	6-Information	iosxe-fwdmgr	%s: Right-to-use Licensing is disabled. Switch is in Smart Licensing mode.	User enables Smart Licensing.	Request image license license if needed.
<del>IMBRI</del> UICENSESMARTDISABLERU	6-Information	iosxe-fwdmgr	%s: Right-to-use Licensing is enabled. Switch is in RTU mode.	User configures RTU licensing by disabling Smart Licensing.	Configure image license and ap count license if needed.
<del>IMBRI</del> UICENSFACTORYERR	6-Information	iosxe-fwdmgr	Factory Default License File[chars] on[chars].	An error occurred when trying to create the factory default file.	Fix the issue and try again.

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IMBRUENSLCUMACH	6-Information	iosxe-fwdmgr	Switch #%d: Current IOSd runs on[chars] license while RTU active license is[chars]. Please configure RTU license to current IOSd license.	When customer switches license mode from Smart Licensing to RTU Licensing	-
IMBRUENSLCFACT	6-Information	iosxe-fwdmgr	%s license is activated successfully on[chars].	The license level is activated.	Reboot the switch to invoke the activated license.
IMBRUENSLCACMD	6-Information	iosxe-fwdmgr	%s license was already activated.	The license level was already activated.	Reboot the switch to invoke the activated license.
IMBRUENSLCFCFNE	6-Information	iosxe-fwdmgr	%s reboot license level changed from[chars] to[chars]. Reboot the switch to invoke the new license level.	Reboot license level has been changed.	Reboot the switch to invoke the activated license level.
IMBRUENSLCUIACER	6-Information	iosxe-fwdmgr	EULA for[chars] license has been cleared on[chars].	License level has been deactivated.	The end user license agreement (EULA) needs to be accepted while activating this license level.
IMBRUENSLCVALCPM	6-Information	iosxe-fwdmgr	License level upgraded from[chars][chars] to[chars];[chars] license is in-use without reboot	A license has been upgraded to a permanent or subscription license. A reboot is NOT required for the new license level to be effective.	tac_details "Evaluation or subscription License has been upgraded to subscription or
IMBRUENSLCCEXED	6-Information	iosxe-fwdmgr	%s evaluation license has expired; you cannot activate it again.	You cannot use an expired evaluatoin license.	Purchase a permanent license level or activate another license level.
IMBRUENSLCUMGNAD	6-Information	iosxe-fwdmgr	Switch #%d: The license boot level string is invalid. Boot up with the highest activated license.	The license boot level string is invalid. The RTU highest activated license is used.	Use 'license boot level' to configure a valid license level

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IMBRLICENSE</del> IMBRLICENSE	6-Information	iosxe-fwdmgr	Switch %d has an incompatible license level. Activate a compatible license on the switch so that the switch can join the stack.	The added switch has an incompatible license level.	Activate a new license and reboot the switch.
<del>IMBRLICENSE</del> IMBRLICENSE	6-Information	iosxe-fwdmgr	%s license is not active on[chars]; therefore	-	-
<del>IMBRLICENSE</del> IMBRLICENSE	6-Information	iosxe-fwdmgr	Switch %d has an incompatible platform level. Activate a compatible platform on the switch so that the switch can join the stack.	The added switch has an incompatible platform level.	Run in compatible scaled mode and reboot the switch.
<del>IMBRLICENSE</del> IMBRLICENSE	0-Emergency	iosxe-csl	Failed to translate a location to a chasfs object name because[chars]	"The license manager failed to translate a location to a chasfs object name."	"In most cases
<del>IMBRLICENSE</del> IMBRLICENSE	0-Emergency	iosxe-csl	Failed to create chassis filesystem object[chars] because[chars]	"The hardware failed to create a chassis filesystem object."	"In most cases
<del>IMBRLICENSE</del> IMBRLICENSE	0-Emergency	iosxe-csl	Expected chassis filesystem object[chars] not present.	"A chassis filesystem object expected to be present is not. This could be due to a software defect or filesystem failure."	"In most cases
<del>IMBRLICENSE</del> IMBRLICENSE	0-Emergency	iosxe-csl	Failed to watch chassis filesystem object[chars] because[chars]	"A chassis filesystem object was not watched because of the reason stated in the error message."	"In most cases

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IMR0CHASSIS_PROPERTY_CREATE	0-Emergency	iosxe-csl	Failed to create chassis filesystem object[chars] property[chars] because[chars]	"A chassis filesystem property was not properly created."	"In most cases
IMR0CHASSIS_PROPERTY_GET	0-Emergency	iosxe-csl	Failed to read chassis filesystem object[chars] property[chars] because[chars]	"A chassis filesystem property was not properly read by the system."	"In most cases
IMR0CHASSIS_PROPERTY_GET_RESET	0-Emergency	iosxe-csl	Expected chassis filesystem object[chars] property[chars] not present.	"A chassis filesystem object property expected to be present is not. This could be due to a software defect or filesystem failure."	"In most cases
IMR0CHASSIS_PROPERTY_SET	0-Emergency	iosxe-csl	Failed to write chassis filesystem object[chars] property[chars] because[chars]	"A chassis filesystem property failed to write."	"In most cases
IMRPOCHASSIS_STATUS	0-Emergency	iosxe-csl	Failed to get chassis hardware status because[chars]	"The system failed to get the chassis hardware status."	"Note the time of the error message and examine the logs for CPLD driver or hardware errors. If the logs provide information about a correctable problem
IMRPOCHASSIS_TYPE	0-Emergency	iosxe-csl	The chassis type[chars] is invalid.	"The chassis type is invalid. This could be due to a hardware defect	-
IMRPOEVENT_LIBRARY	0-Emergency	iosxe-csl	An event facility initialization or maintenance function failed because[chars]	"An event facility initialization or maintenance function failed. This could be due to a software defect or system resource exhaustion."	"In most cases

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IMRPOINVALID_ARGUMENT	0-Emergency	iosxe-csl	A system function was given an invalid argument.	"A system function was given an invalid argument. This is due to a software defect."	"In most cases
IMRPOIPC_CONNECTION_FAILED	0-Emergency	iosxe-csl	IPC connection to the active RP failed because[chars]	"IPC connection to the active RP failed. This could be due to a software defect or system resource exhaustion."	"In most cases
IMRPOIPC_CONNECTION_INVALID	0-Emergency	iosxe-csl	An IPC connection has invalid state.	"An IPC connection has an invalid state. This could be due to a software defect or system resource exhaustion."	"In most cases
IMRPOIPC_INITIALIZATION_FAILED	0-Emergency	iosxe-csl	IPC initialization failed because[chars]	"IPC initialization failed. This could be due to a software defect or system resource exhaustion."	"In most cases
IMRPOMESSAGE_REGISTER_FAILED	0-Emergency	iosxe-csl	Failed to register with active RP because[chars]	"The active RP failed to register."	"In most cases
IMRPOMESSAGE_RELAY_FAILED	0-Emergency	iosxe-csl	Failed to relay a message because[chars]	"Failed to relay a message. This could be due to a software defect or system resource exhaustion."	"In most cases
IMRPOMESSAGE_RESPONSE_INVALID	0-Emergency	iosxe-csl	An invalid message response was received because[chars]	"An invalid message response was received. This could be due to a software defect or system resource exhaustion."	"In most cases
IMRPOMQIPC_ADVANCE_FAILED	0-Emergency	iosxe-csl	Failed to advance MQIPC queue because[chars]	"The MQIPC initialization failed."	"In most cases

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IMRPMQIPCNIALIZAION	0-Emergency	iosxe-csl	MQIPC initialization failed because[chars]	"MQIPC initialization failed. This could be due to a software defect or system resource exhaustion."	"In most cases
IMRP0PEER_TABLE	0-Emergency	iosxe-csl	A peer table initialization or maintenance function failed because[chars]	"A peer table initialization or maintenance function failed. This could be due to a software defect or system resource exhaustion."	"In most cases
IMRPLAFCMFIAMTYME	0-Emergency	iosxe-csl	The platform family type[chars] is invalid.	"The platform family type is invalid. This could be due to a hardware defect	-
IMRP0RESOLVE_FRU	0-Emergency	iosxe-csl	Failed to determine[chars] card because[chars]	"The router failed to determine a FRU state."	"In most cases
IMRPSRVCISNIALIZAION	0-Emergency	iosxe-csl	Failed to initialize general application services because[chars]	"The system failed to initialize application services."	"In most cases
IMRPSIGNALNIALIZAION	0-Emergency	iosxe-csl	Failed to initialize signals because[chars]	"The system failed to initialize signals."	"In most cases
IMRP0SLOT_INVALID	0-Emergency	iosxe-csl	A card absolute slot number cannot be determined for this chassis type	"An absolute slot number is invalid. This could be due to a software defect or incorrect IDPROM content."	"Note the time of the error message and examine the logs for IDPROM or software errors. If the logs provide information about a correctable problem
IMRPSLOTISNIALIZAION	0-Emergency	iosxe-csl	No format	"The system failed to initialize the chassis slot information."	"Note the time of the error message and examine the logs for IDPROM or software errors. If the logs provide information about a correctable problem



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>LMR3QUIPEER_CREATE</del>	0-Emergency	iosxe-csl	Failed to create user interface peer.	"The system failed to create a user interface peer."	"In most cases
<del>LMR3CHASSISFSOY</del>	3-Error	iosxe-csl	Failed to destroy chassis filesystem object[chars] because[chars]	"A chassis filesystem object that should have been destroyed was not destroyed."	"In most cases
<del>LMR3CHASSISPROPSOY</del>	3-Error	iosxe-csl	Failed to destroy chassis filesystem property[chars]/%s because[chars]	"A chassis filesystem property that should have been destroyed was not destroyed."	"In most cases
<del>LMR3LICENSESERVICE</del>	3-Error	iosxe-csl	Failed to setup the licensing proxy service	"License Manager failed to set itself up as a proxy for licensable features."	"Collect the output of the error message
<del>LMR3PEER_INVALID</del>	3-Error	iosxe-csl	A peer table entry has invalid state.	"A peer table entry has an invalid state. This could be due to a software defect or system resource exhaustion."	"In most cases
<del>LMR3RTU_UNINITIALIZED</del>	3-Error	iosxe-csl	RTU not yet initialized: stack enabled %d	"License manager has not initialized RTU	-
<del>LMR3THROUGHPUTLICENSEFAILED</del>	3-Error	iosxe-csl	Throughput license look-up failed due to '%s'	"This message is to notify the user that a license look-up did not succeed because license manager process could not be contacted. This is a rare case but is due to either a crashed license daemon(licensed) or it encountered an internal error."	"No user action is necessary. However

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LMRP-3-UDI_AUTH	3-Error	iosxe-csl	Quack Unique Device Identifier authentication failed	"This chassis seems to be compromised or tampered with. UDI burned on to the Quack chip and the one read from chassis EEPROM do not match. It can also be a case of either EEPROM or Quack device failure. More details about which specific field failed to match are logged in license daemon log file (licensed_R0.log)."	"User immediately needs to contact Cisco support. This device appears to be tampered with or is a counterfeit device or had a system failure."
IMR3-3-THROUGHPUTLICENSE	6-Information	iosxe-csl	Throughput license[chars]	-	-
LNMC-3-BADCLSI	3-Error	[chars] primitive not valid for lnm [chars] [chars]	A LAN network manager system error occurred.	-	LOG_STD_ACTION
LNMC-3-BADCLSI CNF	3-Error	[chars] Invalid confirm [chars] [chars]	A LAN network manager system error occurred.	-	LOG_STD_ACTION
INMC3BADCLSDATALEN	3-Error	[chars] Bad data len = [dec] [chars]	A LAN network manager system error occurred.	-	LOG_STD_ACTION
INMC3BADCLSHDRLEN	3-Error	[chars] Bad header len = 0x[hec] [chars]	A LAN network manager system error occurred.	-	LOG_STD_ACTION
INMC3BADCLSIDTYPE	3-Error	[chars] Invalid ID type = 0x[hec] [chars]	A LAN network manager system error occurred.	-	LOG_SID_ACTION_ERR
LNMC-3-BADCLSIIND	3-Error	[chars] Invalid indication [chars] [chars]	A LAN network manager system error occurred.	-	LOG_STD_ACTION
INMC3BADCLSRMITYE	3-Error	[chars] Invalid primitive type = 0x[hec] [chars]	A LAN network manager system error occurred.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LNMC-3-BADCLSIRET	3-Error	[chars] Invalid ret code 0x[hec] [chars] [chars]	A LAN network manager system error occurred.	-	LOG_STD_ACTION
LNMC-3-BADCLISAP	3-Error	[chars] Bad clsi SAP id = [hec] [chars]	A LAN network manager system error occurred.	-	LOG_STD_ACTION
<del>LNMC-3-BADCLSIRET</del>	3-Error	ewlc-ap	AP SW update[chars]	AP Software Update logging	AP software update failed. ISSU image upgrade or SMU patching could be aborted. The user needs to initiate ISSU upgrade/SMU patch again. If the error occurred during manual operation
<del>LNMC-3-BADCLSIRET</del>	5-Notice	ewlc-ap	Loadbalancer Log :[chars]	Generic loadbalancer message	-
<del>LNMC-3-BADCLSIRET</del>	5-Notice	ewlc-ap	Loadbalancer Log :[chars]	Generic loadbalancer message	-
<del>LNMC-3-BADCLSIRET</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>LNMC-3-BADCLSIRET</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>LNMC-3-BADCLSIRET</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>LNMC-3-BADCLSIRET</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>LNMC-3-BADCLSIRET</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>LNMC-3-BADCLSIRET</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
LOGGER-3-ASSERT	3-Error	failure at [node]X[chars][node][chars]	-	-	-
LOGGER-3-IPC_INIT	3-Error	failure	Logger client proxy IPC registration failed.	cpp-ucode	LOG_STD_ACTION
<del>LOGGER-3-ASSERT</del>	3-Error	failure	An unknown message was received by the logger client proxy.	cpp-ucode	LOG_STD_ACTION
LOGGER-3-TEST1	3-Error	Non rate limited message test	-	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
LOGGER-3-TEST1	3-Error	Non rate limited message test	-	-	-
LOGGER-3-TEST2	3-Error	Rate limited message test	-	-	-
LOGGER-3-TEST2	3-Error	Rate limited message test	-	-	-
LOGGER-6-DROPPED	6-Information	[node]messages	Due to a lack of available buffers one or more log messages were dropped.	cpp-ucode	LOG_STD_ACTION
LOGGER-6-IPC_ALLOC	6-Information	failure	Logger client IPC alloc failed messages were droppped.	cpp-ucode	LOG_STD_ACTION
LOGGER-6-IPC_SEND	6-Information	failure: [chars]	Logger client IPC send failed messages were dropped.	cpp-ucode	LOG_STD_ACTION
<del>LOGGER-6-IPCS_FAILURE</del>	2-Critical	Logging Redirect ISSU client failed to get buffer for message. Error: [dec] [chars]	The Logging Redirect ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	logging-redirect	"show logging and show checkpoint client"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LOGNGREDIRECTERR	2-Critical	Logging Redirect ISSU client failed to get buffer for message. Error: [dec] [chars]	The Logging Redirect ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	logging-redirect	"show logging and show checkpoint client"
LOGNGREDIRECTERR	2-Critical	Logging Redirect ISSU client initialization failed to [chars]. Error: [dec] [chars]	The Logging Redirect ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	logging-redirect	LOG_STD_ACTION
LOGNGREDIRECTERR	2-Critical	Logging Redirect ISSU client initialization failed to [chars]. Error: [dec] [chars]	The Logging Redirect ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	logging-redirect	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>LOGN_REDIRECT_ISSU_NEG_FAIL</del>	2-Critical	Logging Redirect ISSU client failed to send negotiation message. Error: [dec] [chars]	The Logging Redirect ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	logging-redirect	"show logging and show checkpoint client"
<del>LOGN_REDIRECT_ISSU_NEG_FAIL</del>	2-Critical	Logging Redirect ISSU client failed to send negotiation message. Error: [dec] [chars]	The Logging Redirect ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	logging-redirect	"show logging and show checkpoint client"
<del>LOGN_REDIRECT_ISSU_NEGO</del>	2-Critical	Logging Redirect ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The Logging Redirect ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	logging-redirect	"show issu session <client_id> and "show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>LOGG_REDIRECT_ISSU_NKGO</del>	2-Critical	Logging Redirect ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The Logging Redirect ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	logging-redirect	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>LOGG_REDIRECT_ISSU_RCRN</del>	2-Critical	Logging Redirect ISSU client failed to register session information. Error: [dec] [chars]	The Logging Redirect ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	logging-redirect	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>LOGG_REDIRECT_ISSU_RCRN</del>	2-Critical	Logging Redirect ISSU client failed to register session information. Error: [dec] [chars]	The Logging Redirect ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	logging-redirect	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>LOGG_REDIRECT_ISSU_MLSDN</del>	3-Error	Logging Redirect ISSU client does not have a valid registered session.	The Logging Redirect ISSU client does not have a valid registered session.	logging-redirect	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>LOGN_REDIRECT_ISSU_MAL_SESSION</del>	3-Error	Logging Redirect ISSU client does not have a valid registered session.	The Logging Redirect ISSU client does not have a valid registered session.	logging-redirect	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>LOGN_REDIRECT_ISSU_MFCICK</del>	3-Error	Logging Redirect ISSU client Message Type [dec] is not compatible	The Logging Redirect ISSU client received an incompatible message from the peer device. The message cannot be processed.	logging-redirect	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>LOGN_REDIRECT_ISSU_MFCICK</del>	3-Error	Logging Redirect ISSU client Message Type [dec] is not compatible	The Logging Redirect ISSU client received an incompatible message from the peer device. The message cannot be processed.	logging-redirect	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>LOGN_REDIRECT_ISSU_MFCSE</del>	3-Error	Logging Redirect ISSU client failed to get the MTU for Message Type [dec] . Error: [dec] [chars]	The Logging Redirect ISSU client failed to calculate the MTU for the specified message. The Logging Redirect ISSU client is not able to send the message to the standby device.	logging-redirect	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>LOGN_REDIRECT_ISSU_MFCSE</del>	3-Error	Logging Redirect ISSU client failed to get the MTU for Message Type [dec] . Error: [dec] [chars]	The Logging Redirect ISSU client failed to calculate the MTU for the specified message. The Logging Redirect ISSU client is not able to send the message to the standby device.	logging-redirect	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>LOGG_REDIRECT_ISSU_UNREG_N</del>	3-Error	Logging Redirect ISSU client failed to unregister session information. Error: [dec] [chars]	The Logging Redirect ISSU client failed to unregister session information.	logging-redirect	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>LOGG_REDIRECT_ISSU_UNREG_N</del>	3-Error	Logging Redirect ISSU client failed to unregister session information. Error: [dec] [chars]	The Logging Redirect ISSU client failed to unregister session information.	logging-redirect	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>LOGG_REDIRECT_ISSU_TRANSFORMAL</del>	3-Error	Logging Redirect ISSU client [chars] transform failed for Message Type [dec] . Error: [dec] [chars]	The Logging Redirect ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the Logging Redirect state between the active device and the standby device is not identical.	logging-redirect	"show issu session <client_id> and " "show issu negotiated version <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LOGCHDCISRSNOML	3-Error	Logging Redirect ISSU client [chars] transform failed for Message Type [dec] . Error: [dec] [chars]	The Logging Redirect ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the Logging Redirect state between the active device and the standby device is not identical.	logging-redirect	"show issu session <client_id> and " "show issu negotiated version <session_id>"
LOGCOMNYAUIHLS	3-Error	Too many Login Authentication failures have occurred in the last one minute on the line [dec].	A large number of authentication failures greater than the configured limit have occurred in the last one	securitykeyword:autosec	"Make sure it is not by any malicious attempt to gain" " access to the device"
LOGDEICERRDSABLE	4-Warning	loopdetect frame sent on [chars] is received on [chars] err-disabling [chars]	-	-	-
LOGDEICNADHWDB	4-Warning	invalid hwidb for src_mac [enet]	Unable to translate the source macaddress in the loopdetect frame to a valid interface	loopdetect	LOGSIDSHTECHACION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LOOPDETECT4SYSLOG	4-Warning	loopdetect frame sent on [chars] is received on [chars] loopdetection on port [chars]	This is a defensive measure that will put the interface in err-disable state when it detects a loop in the current or connected switch. A recovery will be attempted after the configured retry time default 5 minutes if auto recovery is enabled.	loopdetect	LOGS_IDSHTTECH_ACTION
LORAWAN_PIM_ERR	3-Error	LORAWAN PIM requires Network-Advantage license to be installed.	LORAWAN PIM requires Network-Advantage license.	-	"Please install Network-Advantage license and set the license boot level to be Network-Advantage before a reload."
LORAWAN_PIM_ERR	3-Error	[chars]	Resource dynamically allocated are synced to standby.\ Due to error mentioned sync failed.\n\ So standby won't be having same database as active	asr900-tdm-combo	-
LORAWAN_PIM_WARN	4-Warning	[chars]	Cem programming is not completed	asr900-tdm-combo	CRS_AIRMS_WARN_ACTION
LORAWAN_PIM_INFO	6-Information	[chars]	Cem programming completed	asr900-tdm-combo	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LPD-3-MANYLF	3-Error	Line [node]packet has too many newlines to convert	An internal buffer did not have enough room to add all the necessary carriage returns to a packet of LPD data destined for a printer configured with a newline-convert command. This message is unlikely to occur with a file containing valid data.	-	"Check the file being printed to see whether it contains valid printable data."
IRE_CPE3INVALIDMODE	3-Error	\nCPE on interface [chars] is in invalid mode [chars].	-	fw-hawaii	"Use the command \"show controllers lre cpe mfg \" \" to verify that the CPE Model Number string is \" correct. Use the command \"hw-module slot <slot> \" lre upgrade remote \" to ensure that the CPE has \" the latest supported firmware. If the CPE's Model \" Number and firmware are correct use the interface \" configuration command \"shutdown\" followed \" by \"no shutdown\" to force the switch to re-read \" CPE information. If the problem persists contact \" your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LRE_CPE3INVALIDPATCH	3-Error	\nCPE on interface [chars] has invalid LRE firmware.	The LRE firmware header does not have a valid signature or the header information on the specified firmware is inconsistent with the contents of the firmware	fw-hawaii	"Upgrade the firmware on the CPE to the latest " "supported one by using the command " "\hw-module slot <slot> upgrade lre remote\"."
LRE_CPE3INVALIDPHY	3-Error	\nCPE on interface [chars] has an unsupported Ethernet PHY.	The Ethernet PHY device on the CPE attached to the interface specified in the error message is not supported. This error occurs when the switch cannot recognize the PHY identifier of the PHY devices	fw-hawaii	"Verify that the CPE is a Cisco-supported one. " "Use the command \"show controllers lre cpe \" \"mfg\" to verify that the CPE Model Number \"string is correctly set. If the IOS version and \" \"CPE model number look correct issue the interface \" \"configuration command \"shutdown\" followed by \" \"no shutdown\" to force the switch to read the \" \"PHY identifier again. As a last resort power cycle \" \"the CPE. If the error persists contact your \" \"technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IRE_CPE3NOVERCKSUM	3-Error	\nCould not fetch CPE firmware version and checksum on interface [chars].	The system could not obtain the CPE firmware version and checksum. If the CPE has the latest firmware and the CPE Model Number is correct the most likely cause for this error is that the LRE link between the switch and the CPE is of poor quality.	fw-hawaii	"Use the command \"show controllers lre cpe mfg \" \" to verify that the CPE Model Number string is \" \" correctly set for this CPE. Use the command \" \"hw-module slot <slot> lre upgrade remote\" to \" \" ensure that the CPE has the latest firmware. \" \" Use the interface configuration command \"shutdown\" \" \" followed by \"no shutdown\" to force the switch \" \" to re-fetch the CPE firmware version and checksum. \" \" As a last resort power cycle the CPE. If the \" \" problem persists contact your technical support \" \" representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IRE_CPE3UNKNOWNMDEL	3-Error	\nCPE has unrecognizable model number [chars] on interface [chars]	The model number string in the CPE does not match a known CPE model number.	fw-hawaii	"Use the \"show controllers lre cpe mfg\" command " "to examine the Model Number of the CPE. " "Verify that the Model Number is a Cisco-supported " "one. Use the interface configuration command " "\"shutdown\" followed by a \"no shutdown\" to " "force the switch to re-read the CPE Model Number. " "If the error message persists record the output " "of the previously used show command and report the " "problem to your technical support representative."
IRE_CPE3WRONGAPVR	3-Error	\nCPE on interface [chars] reported unsupported version of application firmware [chars].\nMinimum application firmware version needed [chars]	Each CPE requires a currently-supported application firmware version for it to function correctly. This CPE has a application firmware version that predates the earliest supported version.	fw-hawaii	"Application firmware is not currently used " "on the CPE. This error message is for future use."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IRE_CPE3WRONGBOOTFW	3-Error	\nCPE on interface [chars] reported unsupported version of bootloader firmware [chars].\nMinimum bootloader firmware version needed [chars]	Each CPE requires a currently-supported bootloader firmware version for it to function correctly. This CPE has a bootloader firmware version that predates the earliest supported version.	fw-hawaii	"Upgrade the bootloader firmware on the CPE to " "a recent version that supports the current " "requirements by using the command \"hw-module " "slot <slot> lre upgrade remote\". If the " "CPE firmware upgrade does not solve the problem " "force the switch to re-read the bootloader " "firmware version by issuing the interface " "configuration command \"shutdown\" followed " "by the command \"no shutdown\". As a last " "resort power cycle the CPE. If the problem " "persists contact your technical support " "representative."
IRE_CPE3WRONGPATCH	3-Error	\nCPE on interface [chars] has wrong patch version [hec].\nPatch version [hec] or higher is needed for this CPE.	Each CPE requires a currently-supported patch version for it to function. This CPE has a patch version that predates the earliest supported version. This condition might occur because the switch was upgraded with the latest Cisco IOS Software image but the CPE firmware has not been upgraded.	fw-hawaii	"Upgrade the patch on the CPE to the latest " "supported version by using the command " "\"hw-module slot <slot> upgrade lre remote\""



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LRE_CPESSNCHANGED	5-Notice	\nCPE unit on interface [chars] changed.	The CPE system serial number changed. This condition usually means that the CPE unit on this interface was replaced.	fw-hawaii	"No action is required."
LRE_LINK3PROFILEFAILURE	3-Error	Interface [chars] profile [chars] failure	The interface specified in the error message did not achieve link with attached profile.	-	"If the link failure was unexpected confirm the profile settings " "for the interface."
LRE_LINK3UPDOWN	3-Error	Interface [chars] changed state to [chars]	The interface hardware either has become active came up	-	"If the state change was unexpected confirm the configuration " "settings for the interface."
LRE_LINK4HEALTHMON	4-Warning	Interface [chars] had crossed certain monitored thresholds	The link status monitor for the interface specified in the error messages has detected conditions that have crossed the configured thresholds.	-	"Enter the <CmdBold>show controllers lre link monitor<NoCmdBold> command to obtain more information on this error. If the change in operating conditions was unexpected confirm the configuration settings for the interface."
LRE_LOG7/LRE_LOGGING	7-Debug	LRE Log:Interface [chars]: State: [chars] Event: [chars] Data: [chars].	The system has changed its state. The error message text provides more information on the nature of the change.	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IREUPGRADELOCALFAILURE	2-Critical	The system failed to load the firmware for local PHY controller:[dec]	An internal system error has occurred while loading the firmware for a local PHY controller.	-	"Power cycle the switch. If this message persists " "copy the message exactly as it occurs on the " "console or in the system log contact your " "Cisco technical support representative and " "provide the representative with the gathered " "information."
IREUPGRADESYSTEM	3-Error	Upgrade module failed to initialize	The LRE Upgrade module failed to initialize	-	LOG_STD_ACTION
IREUPGRADELOCALFAILURE	3-Error	Upgrade of local controller [chars] failed	LRE upgrade is unable to download firmware to a local controller	-	LOG_STD_ACTION
IREUPGRADENORESOURCE	4-Warning	[chars]	The LRE Upgrade module cannot locate a required resource	-	"Report this message to your service representative"
IREUPGRADEHIBERNATE	4-Warning	Upgrade on [chars] terminated	The CPE was disconnected or changed in the middle of an upgrade.	-	"Verify that the CPE currently connected to the link requires an upgrade."
LSA-3-MPLS-TE-PCALC	3-Error	IRRMGHLAGTRACBACK	-	-	-
LSA-3-MPLS-TE-PCALC	3-Error	IRRMGHLAGTRACBACK	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ISDCENLAKHANDIBRR	2-Critical	Client=[dec] Msg type=[dec] Error=[chars]	LSD Client API message handler error encountered	mpls-mfi	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this "condition has been previously reported and resolved in a "later release. If not gather the output of <CmdBold>show version<NoCmdBold> " "and <CmdBold>show running-config<NoCmdBold> and contact your Cisco technical "support representative."
ISDCENLAKHANDIBRR	2-Critical	Client=[dec] Msg type=[dec] Error=[chars]	LSD Client API message handler error encountered	mpls-mfi	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this "condition has been previously reported and resolved in a "later release. If not gather the output of <CmdBold>show version<NoCmdBold> " "and <CmdBold>show running-config<NoCmdBold> and contact your Cisco technical "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ISD_CLIENT2XDREXEC	2-Critical	[chars] [dec]	Illegal code execution in XDR path	mpls-mfi	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this "condition has been previously reported and resolved in a "later release. If not gather the output of <CmdBold>show version<NoCmdBold> " "and <CmdBold>show running-config<NoCmdBold> and contact your Cisco technical "support representative."
ISD_CLIENT2XDREXEC	2-Critical	[chars] [dec]	Illegal code execution in XDR path	mpls-mfi	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this "condition has been previously reported and resolved in a "later release. If not gather the output of <CmdBold>show version<NoCmdBold> " "and <CmdBold>show running-config<NoCmdBold> and contact your Cisco technical "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LSD_CLIENT2XDREXEC2	2-Critical	[chars] [hec] [hec]	Illegal code execution in XDR path	mpls-mfi	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this " "condition has been previously reported and resolved in a " "later release. If not gather the output of <CmdBold>show version<NoCmdBold> " "and <CmdBold>show running-config<NoCmdBold> and contact your Cisco technical " "support representative."
LSD_CLIENT2XDREXEC2	2-Critical	[chars] [hec] [hec]	Illegal code execution in XDR path	mpls-mfi	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this " "condition has been previously reported and resolved in a " "later release. If not gather the output of <CmdBold>show version<NoCmdBold> " "and <CmdBold>show running-config<NoCmdBold> and contact your Cisco technical " "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ISD_CLIENT3CLIENTAPI	3-Error	Client API error: [chars] [dec]	Unexpected Client API error	mpls-mfi	"Refer to the Bug Navigator at www.cisco.com to see if this " "condition has been previously reported and resolved in a " "later release. If not gather the output of <CmdBold>show version<NoCmdBold> " "and <CmdBold>show running-config<NoCmdBold> and contact your Cisco technical " "support representative."
ISD_CLIENT3CLIENTAPI	3-Error	Client API error: [chars] [dec]	Unexpected Client API error	mpls-mfi	"Refer to the Bug Navigator at www.cisco.com to see if this " "condition has been previously reported and resolved in a " "later release. If not gather the output of <CmdBold>show version<NoCmdBold> " "and <CmdBold>show running-config<NoCmdBold> and contact your Cisco technical " "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ISDCLEN3NALD_VAR	3-Error	[chars]	Function received invalid parameters	mpls-mfi	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this " "condition has been previously reported and resolved in a " "later release. If not gather the output of <CmdBold>show version<NoCmdBold> " "and <CmdBold>show running-config<NoCmdBold> and contact your Cisco technical " "support representative."
ISDCLEN3NALD_VAR	3-Error	[chars]	Function received invalid parameters	mpls-mfi	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this " "condition has been previously reported and resolved in a " "later release. If not gather the output of <CmdBold>show version<NoCmdBold> " "and <CmdBold>show running-config<NoCmdBold> and contact your Cisco technical " "support representative."
ISDCLEN3NALD_VAR	3-Error	Enum for [chars] is not ISSU-compliant: [chars]	The given enumeration is not ISSU-compliant for the reason given. Unpredictable behaviour will result when interoperating with different IOS versions.	mpls-mfi	"This requires a code fix before the image can be shipped or ISSU will be " "broken."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ISDCIENISSUMERRR	3-Error	Enum for [chars] is not ISSU-compliant: [chars]	The given enumeration is not ISSU-compliant for the reason given. Unpredictable behaviour will result when interoperating with different IOS versions.	mpls-mfi	"This requires a code fix before the image can be shipped or ISSU will be "broken."
ISDCIENISSUMGCONV	3-Error	[chars] [dec] [dec]	Could not convert received message type to known message	mpls-mfi	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this "condition has been previously reported and resolved in a "later release. If not gather the output of <CmdBold>show version<NoCmdBold> " "and <CmdBold>show running-config<NoCmdBold> and contact your Cisco technical "support representative."
ISDCIENISSUMGCONV	3-Error	[chars] [dec] [dec]	Could not convert received message type to known message	mpls-mfi	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this "condition has been previously reported and resolved in a "later release. If not gather the output of <CmdBold>show version<NoCmdBold> " "and <CmdBold>show running-config<NoCmdBold> and contact your Cisco technical "support representative."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LSD_CLIENT3ISSU_REG	3-Error	ISSU client [chars] [dec] entity [dec] failed ISSU registration: [chars]	ISSU negotiation failed for this XDR client.	mpls-mfi	"This error indicates a coding problem. It is an error that will occur" "every time this image is run and requires a code change to fix it."
LSD_CLIENT3ISSU_REG	3-Error	ISSU client [chars] [dec] entity [dec] failed ISSU registration: [chars]	ISSU negotiation failed for this XDR client.	mpls-mfi	"This error indicates a coding problem. It is an error that will occur" "every time this image is run and requires a code change to fix it."
LSD_CLIENT3PCHUNK2	3-Error	[chars]: [chars] [hec] [hec]	Parameterized Chunk Manager error occurred	mpls-mfi	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this " "condition has been previously reported and resolved in a " "later release. If not gather the output of <CmdBold>show version<NoCmdBold> " "<CmdBold>show running-config<NoCmdBold> and <CmdBold>show process memory<NoCmdBold> " "and contact your Cisco technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ISD_CLIENT-3-CHUNK2	3-Error	[chars]: [chars] [hec] [hec]	Parameterized Chunk Manager error occurred	mpls-mfi	"Refer to the Bug Navigator at www.cisco.com to see if this " "condition has been previously reported and resolved in a " "later release. If not gather the output of <CmdBold>show version<NoCmdBold> " "<CmdBold>show running-config<NoCmdBold> and <CmdBold>show process memory<NoCmdBold> " "and contact your Cisco technical support representative."
ISD_CLIENT-3-UTIL2	3-Error	[chars]: [hec] [hec]	MFI Utilities error occurred	mpls-mfi	"Refer to the Bug Navigator at www.cisco.com to see if this " "condition has been previously reported and resolved in a " "later release. If not gather the output of <CmdBold>show version<NoCmdBold> " "and <CmdBold>show running-config<NoCmdBold> and contact your Cisco technical " "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LSD_CLIENT-3-UTIL2	3-Error	[chars]: [hec] [hec]	MFI Utilities error occurred	mpls-mfi	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this " "condition has been previously reported and resolved in a " "later release. If not gather the output of <CmdBold>show version<NoCmdBold> " "and <CmdBold>show running-config<NoCmdBold> and contact your Cisco technical " "support representative."
LSD_HA-2-RESOURCE	2-Critical	[chars]	System resource error ocured	mpls-mfi	LOG_SIDREDUCE_ACTION
LSD_HA-2-RESOURCE	2-Critical	[chars]	System resource error ocured	mpls-mfi	LOG_SIDREDUCE_ACTION
LSD_HA-2-RF	2-Critical	[chars][dec]	RF related error	mpls-mfi	LOG_STD_ACTION
LSD_HA-2-RF	2-Critical	[chars][dec]	RF related error	mpls-mfi	LOG_STD_ACTION
LSD_HA-3-GENERAL	3-Error	[chars]	Function received invalid parameters	mpls-mfi	LOG_STD_ACTION
LSD_HA-3-GENERAL	3-Error	[chars]	Function received invalid parameters	mpls-mfi	LOG_STD_ACTION
LSD_HA-3-INVALID_VAR	3-Error	[chars]	Function received invalid parameters	mpls-mfi	LOG_STD_ACTION
LSD_HA-3-INVALID_VAR	3-Error	[chars]	Function received invalid parameters	mpls-mfi	LOG_STD_ACTION
LSD_HA-3-LABEL_RANGE_DB	3-Error	[chars]	Error happen in label range db	mpls-mfi	LOG_STD_ACTION
LSD_HA-3-LABEL_RANGE_DB	3-Error	[chars]	Error happen in label range db	mpls-mfi	LOG_STD_ACTION
LSD_HA-3-UNSENT_MSG_DB	3-Error	[chars]	Error happen in unsent msg db	mpls-mfi	LOG_STD_ACTION
LSD_HA-3-UNSENT_MSG_DB	3-Error	[chars]	Error happen in unsent msg db	mpls-mfi	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
LSD_HA-4-CF	4-Warning	[chars][dec]	CF related error	mpls-mfi	LOG_STD_ACTION
LSD_HA-4-CF	4-Warning	[chars][dec]	CF related error	mpls-mfi	LOG_STD_ACTION
LSD-2-APP_NOTSUPP	2-Critical	[chars] interface does not support app [chars]	Interface does not support app	mpls-mfi	LOG_STD_ACTION
LSD-2-APP_NOTSUPP	2-Critical	[chars] interface does not support app [chars]	Interface does not support app	mpls-mfi	LOG_STD_ACTION
LSD-2-AVL	2-Critical	[chars] [hec]	AVL tree operation error	mpls-mfi	LOG_STD_ACTION
LSD-2-AVL	2-Critical	[chars] [hec]	AVL tree operation error	mpls-mfi	LOG_STD_ACTION
LSD-2-FPIHANDLER	2-Critical	[chars] [hec]	FPI Handler error	mpls-mfi	LOG_STD_ACTION
LSD-2-FPIHANDLER	2-Critical	[chars] [hec]	FPI Handler error	mpls-mfi	LOG_STD_ACTION
LSD-2-INVALID_VAR	2-Critical	[chars]	Function received invalid parameters	mpls-mfi	LOG_STD_ACTION
LSD-2-INVALID_VAR	2-Critical	[chars]	Function received invalid parameters	mpls-mfi	LOG_STD_ACTION
LSD-2-INVALID_VAR2	2-Critical	[chars] 0x[hec] 0x[hec]	Function received invalid parameters	mpls-mfi	LOG_STD_ACTION
LSD-2-INVALID_VAR2	2-Critical	[chars] 0x[hec] 0x[hec]	Function received invalid parameters	mpls-mfi	LOG_STD_ACTION
LSD-2-RESOURCE	2-Critical	[chars]	System resource error occurred	mpls-mfi	LOG_STD_ACTION
LSD-2-RESOURCE	2-Critical	[chars]	System resource error occurred	mpls-mfi	LOG_STD_ACTION
LSD-2-TESTAPP2	2-Critical	Test app error: [chars]: [hec] [hec]	Test application error	mpls-mfi	LOG_STD_ACTION
LSD-2-TESTAPP2	2-Critical	Test app error: [chars]: [hec] [hec]	Test application error	mpls-mfi	LOG_STD_ACTION
LSD-3-APPMGR	3-Error	[chars] 0x[hec]	App Manager error	mpls-mfi	LOG_STD_ACTION
LSD-3-APPMGR	3-Error	[chars] 0x[hec]	App Manager error	mpls-mfi	LOG_STD_ACTION
LSD-3-BADEXEC	3-Error	Unexpected Code Execution: [chars] [dec]	Unexpected Code Execution	mpls-mfi	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LSD-3-BADEXEC	3-Error	Unexpected Code Execution: [chars] [dec]	Unexpected Code Execution	mpls-mfi	LOG_STD_ACTION
LSD-3-CHUNKMGR	3-Error	chunk mgr: [chars] 0x[hec]	Chunk manager error	mpls-mfi	LOG_STD_ACTION
LSD-3-CHUNKMGR	3-Error	chunk mgr: [chars] 0x[hec]	Chunk manager error	mpls-mfi	LOG_STD_ACTION
LSD-3-CLIENT_CONN	3-Error	[chars]	Client connection error	mpls-mfi	LOG_STD_ACTION
LSD-3-CLIENT_CONN	3-Error	[chars]	Client connection error	mpls-mfi	LOG_STD_ACTION
LSD-3-CLIENT_CONN2	3-Error	[chars] [hec] [hec]	Client connection error	mpls-mfi	LOG_STD_ACTION
LSD-3-CLIENT_CONN2	3-Error	[chars] [hec] [hec]	Client connection error	mpls-mfi	LOG_STD_ACTION
LSD-3-DEVILCGBADSOURCE	3-Error	Illegal log event source: [dec]	Illegal event found in log buffer	mpls-mfi	LOG_STD_ACTION
LSD-3-DEVILCGBADSOURCE	3-Error	Illegal log event source: [dec]	Illegal event found in log buffer	mpls-mfi	LOG_STD_ACTION
LSD-3-INTF_DB	3-Error	[chars]	interface db error	mpls-mfi	LOG_STD_ACTION
LSD-3-INTF_DB	3-Error	[chars]	interface db error	mpls-mfi	LOG_STD_ACTION
LSD-3-INTF_DB2	3-Error	[chars] [hec] [hec]	interface db error	mpls-mfi	LOG_STD_ACTION
LSD-3-INTF_DB2	3-Error	[chars] [hec] [hec]	interface db error	mpls-mfi	LOG_STD_ACTION
LSD-3-INVALID_PROC_EVT	3-Error	Unexpected process event [dec] for pid [dec]	The LSD component received an unexpected process event notification for the process with the specified ID	mpls-mfi	LOG_STD_ACTION
LSD-3-INVALID_PROC_EVT	3-Error	Unexpected process event [dec] for pid [dec]	The LSD component received an unexpected process event notification for the process with the specified ID	mpls-mfi	LOG_STD_ACTION
LSD-3-LABEL	3-Error	[chars][dec]	label operation error	mpls-mfi	LOG_STD_ACTION
LSD-3-LABEL	3-Error	[chars][dec]	label operation error	mpls-mfi	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LSD3LABEL_TBL_ERR	3-Error	Failed to create new label table due to [chars]	Label space is not carved properly. This is likely due to platform capabilities.	mpls-mfi	"Check platform capabilities to make sure max label values are set correctly."
LSD3LABEL_TBL_ERR	3-Error	Failed to create new label table due to [chars]	Label space is not carved properly. This is likely due to platform capabilities.	mpls-mfi	"Check platform capabilities to make sure max label values are set correctly."
LSD-3-LABEL2	3-Error	[chars] [hec] [hec]	label error	mpls-mfi	LOG_STD_ACTION
LSD-3-LABEL2	3-Error	[chars] [hec] [hec]	label error	mpls-mfi	LOG_STD_ACTION
LSD3MULTISERVREQ	3-Error	Multiple outstanding service requests: [dec] [dec]	Server request attempted with one already outstanding	mpls-mfi	LOG_STD_ACTION
LSD3MULTISERVREQ	3-Error	Multiple outstanding service requests: [dec] [dec]	Server request attempted with one already outstanding	mpls-mfi	LOG_STD_ACTION
LSD-3-OS_NOTIFY	3-Error	Process id [dec] [chars] error code [dec]	LSD was unable to notify the operating system about unregistration	mpls-mfi	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this condition " "has been previously reported and resolved in a later release. If not " "gather the output of <CmdBold>show version<NoCmd Bold> " "<CmdBold>show running-config<NoCmd Bold> " "<CmdBold>show mpls infrastructure lsd apps<NoCmdBold> and contact " "your Cisco technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LSD-3-OS_NOTIFY	3-Error	Process id [dec] [chars] error code [dec]	LSD was unable to notify the operating system about unregistration	mpls-mfi	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this condition " "has been previously reported and resolved in a later release. If not " "gather the output of <CmdBold>show version<NoCmd Bold> " "<CmdBold>show running-config<NoCmd Bold> " "<CmdBold>show mpls infrastructure lsd apps<NoCmdBold> and contact " "your Cisco technical support representative."
ISDUILABEL_RESV_ERROR	3-Error	[chars] Platform-outlabels:[dec] prim:[dec] application-outlabels:[dec]	-	-	-
ISDUILABEL_RESV_ERROR	3-Error	[chars] Platform-outlabels:[dec] prim:[dec] application-outlabels:[dec]	-	-	-
LSD-3-REWMGR	3-Error	Rewrite Manager: [chars] 0x[hec]	Rewrite Manager error	mpls-mfi	LOG_STD_ACTION
LSD-3-REWMGR	3-Error	Rewrite Manager: [chars] 0x[hec]	Rewrite Manager error	mpls-mfi	LOG_STD_ACTION
LSD-3-REWMGR2	3-Error	[chars] 0x[node]x 0x[node]x	Rewrite lookup failed due to FPI inconsistency	mpls-mfi	LOG_STD_ACTION
LSD-3-REWMGR2	3-Error	[chars] 0x[node]x 0x[node]x	Rewrite lookup failed due to FPI inconsistency	mpls-mfi	LOG_STD_ACTION
LSD3UPDATELISIMGR2	3-Error	[chars] [dec] [dec]	General error	mpls-mfi	LOG_STD_ACTION
LSD3UPDATELISIMGR2	3-Error	[chars] [dec] [dec]	General error	mpls-mfi	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ISD3UDAPIHLSIMGREXEC	3-Error	Illegal exec: [chars] [hec]	Illegal code execution	mpls-mfi	LOG_STD_ACTION
ISD3UDAPIHLSIMGREXEC	3-Error	Illegal exec: [chars] [hec]	Illegal code execution	mpls-mfi	LOG_STD_ACTION
LSD-4-BADAPI	4-Warning	[chars] from [chars]	LSD recieved message with invalid parameters	mpls-mfi	LOG_STD_ACTION
LSD-4-BADAPI	4-Warning	[chars] from [chars]	LSD recieved message with invalid parameters	mpls-mfi	LOG_STD_ACTION
ISD4HWRSOURCEEXHAUSED	4-Warning	Hardware resource exhausted on [chars] of type [dec]	The platform has run out of hardware resources.	mpls-mfi	"Reduce the mpls configuration."
ISD4HWRSOURCEEXHAUSED	4-Warning	Hardware resource exhausted on [chars] of type [dec]	The platform has run out of hardware resources.	mpls-mfi	"Reduce the mpls configuration."
ISD4INVALIDVAR_WARN	4-Warning	[chars]	Function received invalid parameters	mpls-mfi	LOG_STD_ACTION
ISD4INVALIDVAR_WARN	4-Warning	[chars]	Function received invalid parameters	mpls-mfi	LOG_STD_ACTION
ISD4LABEL_RESOURCE	4-Warning	label range [dec]-[dec] exhausted	MPLS application is trying to allocate more labels than configuration will allow	mpls-mfi	LOG_STD_ACTION
ISD4LABEL_RESOURCE	4-Warning	label range [dec]-[dec] exhausted	MPLS application is trying to allocate more labels than configuration will allow	mpls-mfi	LOG_STD_ACTION
ISD4LABELFREETO	4-Warning	requested free timeout [node]ms by [chars] limited to: [node]ms	MPLS application label free timeout exceed max allowed	mpls-mfi	LOG_STD_ACTION
ISD4LABELFREETO	4-Warning	requested free timeout [node]ms by [chars] limited to: [node]ms	MPLS application label free timeout exceed max allowed	mpls-mfi	LOG_STD_ACTION





Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ISBDCNDRQISEMSEHM</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>ISBDCNDGNEMSEHM</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>ISBDCNDGNEMSEHM</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>ISBDCDRQISEMSEHM</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>ISBDCDRQISEMSEHM</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>ISPBADCHDMHLSIEIM</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>ISPBADCHDMHLSIEIM</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>ISBVCNDRQISEMSEHM</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>ISBVCNDRQISEMSEHM</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>ISBVCNDRQISEMSEHM</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>ISBVCNDRQISEMSEHM</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>ISBVCNDRQISEMSEHM</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
LSP_VIF-2CHUNK_ERR	2-Critical	Error initializing LSP_VIF chunks	Internal error	-	LOG_SID_NO_ACTION
LSP_VIF-2CHUNK_ERR	2-Critical	Error initializing LSP_VIF chunks	Internal error	-	LOG_SID_NO_ACTION
LSP_VIF-2RADIX_ERR	2-Critical	Error initializing RADIX tree	Internal error	-	LOG_SID_NO_ACTION
LSP_VIF-2RADIX_ERR	2-Critical	Error initializing RADIX tree	Internal error	-	LOG_SID_NO_ACTION
LSP-5-MPLS_TE	5-Notice	ERRMSG_NOFLAGS	-	-	-
LSP-5-MPLS_TE	5-Notice	ERRMSG_NOFLAGS	-	-	-
LSPREJECT4MPLS_TE	4-Warning	ERRMSG_NOFLAGS	-	-	-
LSPREJECT4MPLS_TE	4-Warning	ERRMSG_NOFLAGS	-	-	-
ISVCOMUNKNOWNRC	3-Error	Unexpected oce return code	Comm module - unexpected oce return code encountered	mpls-oam	LOG_STD_ACTION
ISVCOMUNKNOWNRC	3-Error	Unexpected oce return code	Comm module - unexpected oce return code encountered	mpls-oam	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LSPV3COMM_UNKNOWN_RC	3-Error	Unexpected oce return code	Comm module - unexpected oce return code encountered	mpls-oam	LOG_STD_ACTION
LSPV3COMM_UNKNOWN_RC	3-Error	Unexpected oce return code	Comm module - unexpected oce return code encountered	mpls-oam	LOG_STD_ACTION
LSPV3COMM_UNKNOWN_RC	3-Error	Unexpected oce return code	Comm module - unexpected oce return code encountered	mpls-oam	LOG_STD_ACTION
LSPV3IP_ECHO_REQUEST	3-Error	MPLS-TP Echo request unsupported	MPLS-TP echo request was received. Ignoring as MPLS-TP is not supported on this platform	mpls-oam	LOG_STD_ACTION
LSPV3IP_ECHO_REQUEST	3-Error	MPLS-TP Echo request unsupported	MPLS-TP echo request was received. Ignoring as MPLS-TP is not supported on this platform	mpls-oam	LOG_STD_ACTION
LSPV3IP_ECHO_REQUEST	3-Error	MPLS-TP Echo request unsupported	MPLS-TP echo request was received. Ignoring as MPLS-TP is not supported on this platform	mpls-oam	LOG_STD_ACTION
LSPV3IP_ECHO_REQUEST	3-Error	MPLS-TP Echo request unsupported	MPLS-TP echo request was received. Ignoring as MPLS-TP is not supported on this platform	mpls-oam	LOG_STD_ACTION
LSPV3IP_ECHO_REQUEST	3-Error	MPLS-TP Echo request unsupported	MPLS-TP echo request was received. Ignoring as MPLS-TP is not supported on this platform	mpls-oam	LOG_STD_ACTION
LSSOINTERNAL_PANIC	0-Emergency	[chars]	A Panic Condition.	-	""

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LSS1INTERNAL_ALERT	1-Alert	[chars]	A condition that should be corrected immediately.	-	""
LSS-1-SDM	1-Alert	[chars] [chars]	LSS SDM Alert - protocol region reached limit. Cannot accept\n anymore entries. Need to reconfigure protocol regions and\n reload	Switching Database Manager	"Reconfigure SDM region sizes and reload"
LSS2INTERNAL_CRITICAL	2-Critical	[chars]	Critical Conditions	-	""
LSS3CHANNELSTUCK	3-Error	[chars] channel [dec] [chars] is stuck.\n This port has stuck [dec] times since last boot.\n	Informational	-	"If portstuck reload is not enabled manually reload the interface or \n\ OIR the card."
LSS3CONN_EMPTY_STATUS	3-Error	Conn empty detected [chars].\n This port has had conn empty problems [dec] times \n since last boot\n	Informational	-	"If portstuck reload is not enabled manually reload the interface or \n\ OIR the card."
LSS3CONN_PKT_STATUS	3-Error	[chars] [chars]	Informational	-	""
LSS-3-CONN_STATUS	3-Error	[chars] [chars]	Informational	-	""
LSS3INTERNAL_ERROR	3-Error	[chars]	Errors	-	""
LSS-3-PORTSTUCK	3-Error	Interface [chars] is portstuck\n This port has stuck [dec] times since last boot.\n	Informational	-	"If portstuck reload is not enabled manually reload the interface or \n\ OIR the card"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
LSS3PORTSTUCK_LIMIT	3-Error	This port has exceeded the port-stuck/\n conn-empty limit of [dec] as configured by the epc\n portstuck-reload-count command. This port will remain\n in init state until a OIR or user initiated download\n is done.\n		-	""
LSS4HARDWARE_WARNING	4-Warning	<del>*****</del> \n ATM Router ModuleARM not supported with ASP hardware	Cat8510 ASP hardware with version less than 6.0 doesnot support ATM Router ModulesARM	-	"Upgrade ASP hardware version to atleast 6.0 with FC-PFQ card. "
LSS-4-INTERFACE	4-Warning	Interface [chars] [chars]	Per interface Warning	-	""
LSS4INTERNAL_WARNING	4-Warning	[chars]	Warning	-	""
LSS-4-LSIPC	4-Warning	[chars] [dec]	LSIPC warning - LSIPC is timing out. uCode on that interface may\n\n not be responding	E-PAMuCode	"Possibly E-PAM is not responding"
LSS-4-MACIPC	4-Warning	[chars] [dec]	MAC Learn/Age IPC warning - MAC Learn or Age IPC dropped.\n\n The IOS bridge table and the L2 Cam entries are inconsistant	cat2948g-bridging	"Do clear bridge"
LSS6INTERNAL_EVENT	6-Information	[chars]	Informational	-	""
LSS7INTERNAL_ASSERT	7-Debug	[chars]: [chars] Assertion Failure - File [chars] Line [dec]	Assertion	-	""
LSS-7-LEAFNULL	7-Debug	NULL leaf_p: vpi [dec] vci [dec]	LSS IFCB2IDB Alert	-	""
LSS-7-VC_IDB	7-Debug	Interface: [chars]	LSS VC_IDB Alert	-	""

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
LSS-7-VC2LEG	7-Debug	VC to LEG translation failure: vpi [dec] vci [dec]	LSS VC2LEG Alert	-	""
LTC2978-4-CML_FAULT	4-Warning	Communication Fault is reported by LTC2978. [chars]	LTC2978 reported Communication Fault	cmts-platform	"Copy the error message exactly as it appears and report it to your" " technical support"
LTC2978-4-CLEAR_FAILURES	4-Warning	Tried [dec] times to read transfer status after clearing log for 2978-[dec] and the read was unsuccessful	Log clear didn't work for LTC2978	cmts-platform	"Copy the error message exactly as it appears and report it to your" " technical support"
LTC2978-4-RSCD_FAILURES	4-Warning	Tried [dec] times to read log data after log restore for 2978-[dec] and the read was unsuccessful	Fatal Recoverable Raven interrupt	cmts-platform	"Copy the error message exactly as it appears and report it to your" " technical support"
LTC2978-4-LTC2978_ALERT	4-Warning	LTC2978power fault monitor open drain alert for device #[dec]	Interrupt from LTC2978	cmts-platform	"Copy the error message exactly as it appears and report it to your" " technical support"
LTC2978-4-VIN_FAULT	4-Warning	Input Voltage Fault is reported by LTC2978. [chars]	LTC2978 reported Input Voltage Fault	cmts-platform	"Copy the error message exactly as it appears and report it to your" " technical support"
LTC2978-4-VOUT_FAULT	4-Warning	Output Voltage Fault is reported by LTC2978. [chars]	LTC2978 reported Output Voltage Fault	cmts-platform	"Copy the error message exactly as it appears and report it to your" " technical support"
LTC2978-5-POWER_FAILURE	5-Notice	Power failure happened in previous power cycle. Check OBFL logs for details.	LTC2978 recorded power failure in previous power cycle.	cmts-platform	"Copy the error message exactly as it appears and report it to your" " technical support"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IOS_XE_PLATFORM_FAULT	5-Notice	Temperature Fault is reported by LTC2978. [chars]	LTC2978 reported Temperature Fault. [chars]	cmts-platform	"Copy the error message exactly as it appears and report it to your" " technical support along with the temperature values reported by MAX1668" " using test cable envm temp dump [1 2 3] command on LC console"
LUA_VM2_INITIALIZATION	2-Critical	iosxe-shellmgr	Cannot initialize the Lua Virtual Machine	The Lua Virtual Machine is a critical component of the shell-manager process. It is used to render responses to user commands. If this component cannot be initialized then the shell-manager will be unable to process any commands directed at the IOS-XE daemons.	The shell-manager process could not be started. Check the trace log files for more details as to why the virtual machine failed to initialize correctly. This may be an out of memory condition so rebooting the chassis may resolve the problem.
M32X-1-AR_TIMEOUT	1-Alert	M32X controller [dec] channel 0x[hec]: No Reponse from device. Action Request Timeout	The Action Request for a particular has failed after retry.	-	LOG_SID_NO_ACTION
M32X-1-DWNLDCKSM	1-Alert	M32X: Download checksum error sent = 0x[hec] received = 0x[hec]	The download of the internal microcode to the M32X failed to\n\n checksum correctly. This usually indicates a hardware failure of\n\n the M32X.	-	"Perform a power cycle. " LOG_SID_RECUR_ACTION
M32X-1-DWNLDLFL	1-Alert	M32X down load failed.	The M32X trunk card failed. It could not download its \n\n operational microcode.	-	"Perform a power cycle. " LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
M32X-1-INITFAIL	1-Alert	M32X slot [dec]: Init Failed at [chars]	The M32x trunk card failed to complete hardware\n\n initialization.	-	LOG_STD_ACTION
M32X-1-NOTCMPLT	1-Alert	M32X download failed to complete.	The M32X trunk card has failed. It could not download its\n\n operational microcode.	-	LOG_STD_ACTION
M32X-1-NOTREADY	1-Alert	Not ready for download.	The M32X trunk card did not respond when commanded to\n\n download its operational microcode.	-	"Perform a power cycle. " LOG_SID_RECUR_ACTION
M32X-1-STARTFAIL	1-Alert	[chars]: Channel enable failed	A software or hardware error occurred. The M32X trunk card\n\n is not responding to commands used to initialize it.	-	LOG_STD_ACTION
M32X-1-STOPFAIL	1-Alert	[chars]: Channel disable failed	A software or hardware error occurred. The M32X trunk card\n\n failed to respond to a request to disable an interface.	-	LOG_STD_ACTION
M32X-3-MBXREAD	3-Error	M32X: Stale msg in [chars] - mbx0:[node] mbx1:[node] mbx2:[node]	The M32X has not responded to a message within a specified time.	-	LOG_STD_ACTION
M32X-3-NOTM32X	3-Error	Device reported [hex]	A hardware error occurred involving the PCI interface for\n\n an M32X trunk card.	-	"If it is an M32X trunk card then this is due to a malfunction.\n\n Or another PCI device may have been mistaken for an M32X. " LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
M32X-3-PANIC	3-Error	M32X: Exception [dec] trace [dec]	A software or hardware error has occurred in the M32X trunk card.	-	LOG_STD_ACTION
M32X-3-TOOSMALL	3-Error	M32X: [chars] - packet was less than two bytes	An output packet was detected that was smaller than the minimum\n\n allowable datagram size. An error in another driver or an error in \n\n the system software probably triggered this error message.	-	LOG_STD_ACTION
M32X-5-REMLOOP	5-Notice	M32X controller [dec] channel [dec]: remote loopback [chars] [chars]	The interface entered or exited a remote loopback.	-	LOG_STD_NO_ACTION
MAB-5-FAIL	5-Notice	Authentication failed for client [chars] on Interface [chars]	Authentication was unsuccessful.	-	LOG_STD_NO_ACTION
MAB-5-FAIL	5-Notice	Authentication failed for client [chars] on Interface [chars]	Authentication was unsuccessful.	-	LOG_STD_NO_ACTION
MAB-5-FAIL	5-Notice	polaris-smd	"Authentication failed for client (%s) with reason (%s) on Interface[chars] AuditSessionID[chars]"	"MAB Authentication was unsuccessful."	"No action is required."
MAB-5-FAIL	5-Notice	polaris-smd	"Authentication failed for client (%s) with reason (%s) on Interface[chars] AuditSessionID[chars]"	"MAB Authentication was unsuccessful."	"No action is required."
MAB-5-SUCCESS	5-Notice	Authentication successful for client [chars] on Interface [chars]	Authentication was successful.	-	LOG_STD_NO_ACTION
MAB-5-SUCCESS	5-Notice	Authentication successful for client [chars] on Interface [chars]	Authentication was successful.	-	LOG_STD_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MAB-5-SUCCESS	5-Notice	polaris-smd	"Authentication successful for client (%s) on Interface[chars] AuditSessionID[chars]"	"MAB Authentication was successful."	"No action is required."
MAB-5-SUCCESS	5-Notice	polaris-smd	"Authentication successful for client (%s) on Interface[chars] AuditSessionID[chars]"	"MAB Authentication was successful."	"No action is required."
MAC_LIM4PORT_DRCP	4-Warning	[chars] with Configured limit [node] has currently [node] entries	The Number of entries for the port has gone below or\n is equal to the allowed number	12	"Depends of the Network admin"
MAC_LIM4PORT_ENFORCE	4-Warning	Enforcing limit on [chars] with Configured limit [node]	The Number of entries for the port has exceeded the\n allowed number and the enforce to limit action is configured	12	"Depends of the Network admin"
MAC_LIM4PORT_EXCHD	4-Warning	[chars] with configured limit [node] has currently [node] entries	The Number of entries for the port has exceeded the\n allowed number	12	"Depends of the Network admin"
MAC_LIM4VLAN_DRCP	4-Warning	Vlan [dec] with configured limit [node] has currently [node] entries	The Number of entries for a vlan has gone below or\n is equal to the allowed number	12	"Depends of the Network admin"
MAC_LIM4VLAN_ENFORCE	4-Warning	Enforcing limit on Vlan [dec] with configured limit [node]	The Number of entries for a vlan has exceeded the\n allowed number and the enforce to limit action is configured	12	"Depends of the Network admin"
MAC_LIM4VLAN_EXCHD	4-Warning	Vlan [dec] with configured limit [node] has currently [node] entries	The Number of entries for a vlan has exceeded the\n allowed number	12	"Depends of the Network admin"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MAC_MOVE-4-NOTIF	4-Warning	Host [enet] in vlan [dec] is flapping between port [chars] and port [chars]	The system has found the specified host moving between the specified ports.	cat6000-l2	"Check the network for possible loops."
MACDB-3-ERROR	3-Error	Internal error [chars]	An internal software error occurred.	fhrp:macdb	LOG_STD_ACTION
MACDB-3-ERROR	3-Error	Internal error [chars]	An internal software error occurred.	fhrp:macdb	LOG_STD_ACTION
MACDB-4-WARN	4-Warning	Internal warning [chars]	An internal software warning occurred.	fhrp:macdb	LOG_STD_ACTION
MACDB-4-WARN	4-Warning	Internal warning [chars]	An internal software warning occurred.	fhrp:macdb	LOG_STD_ACTION
MACDB-6-INFO	6-Information	Internal info [chars]	An internal software information message occurred.	fhrp:macdb	LOG_STD_ACTION
MACDB-6-INFO	6-Information	Internal info [chars]	An internal software information message occurred.	fhrp:macdb	LOG_STD_ACTION
MACDB-3-ERROR	3-Error	Attempt to move [enet] from [[chars]] to [[chars]]	The MAC address specified in the system message is currently learned on the first ethernet service instance specified in the system message. An ethernet frame with the same MAC address has now been encountered on the second ethernet service instance. This is a violation of MAC Security policy.	ether-infra	"If the MAC address has to be permitted to be re-learned on the second " "service instance remove the address from the list of addresses " "permitted on the first service instance if applicable and clear the "

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>MSCOADDRSRLEARN</del>	3-Error	Attempt to move [enet] from [[chars]] to [[chars]]	The MAC address specified in the system message is currently learned on the first ethernet service instance specified in the system message. An ethernet frame with the same MAC address has now been encountered on the second ethernet service instance. This is a violation of MAC Security policy.	ether-infra	"If the MAC address has to be permitted to be re-learned on the second " "service instance remove the address from the list of addresses " "permitted on the first service instance if applicable and clear the "
<del>MSCOADDRSUSLND</del>	3-Error	Attempt to learn denied address [enet] on [chars]. Service instance will be shutdown.	The ethernet service instance specified in the system message has been configured for shutdown-mode MAC Security and has been configured to deny the MAC address specified in the system message. A frame was received from this denied MAC address. The address has not been learnt and additionally the service instance has been shutdown.	ether-infra	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MCSG0ADNSHINSIM</del>	3-Error	Attempt to learn denied address [enet] on [chars]. Service instance will be shutdown.	The ethernet service instance specified in the system message has been configured for shutdown-mode MAC Security and has been configured to deny the MAC address specified in the system message. A frame was received from this denied MAC address. The address has not been learnt and additionally the service instance has been shutdown.	ether-infra	-
<del>MCSG0ADNSHINSIM</del>	3-Error	Attempt to learn [enet] on [chars] caused configured service instance limit [node]to be exceeded. Service instance will be shutdown.	-	-	-
<del>MCSG0ADNSHINSIM</del>	3-Error	Attempt to learn [enet] on [chars] caused configured service instance limit [node]to be exceeded. Service instance will be shutdown.	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MACSEC</del> ADNSURLEARN	3-Error	Attempt to move [enet] from [[chars]] to [[chars]] shutting down the latter	The MAC address specified in the system message is currently learned on the first ethernet service instance specified in the system message. An ethernet frame with the same MAC address has now been encountered on the second ethernet service instance. This is a violation of MAC Security policy and as a result the second service instance will be shut down.	ether-infra	"If the MAC address has to be permitted to be re-learned on the second " "service instance remove the address from the list of addresses " "permitted on the first service instance if applicable and clear the "
<del>MACSEC</del> ADNSURLEARN	3-Error	Attempt to move [enet] from [[chars]] to [[chars]] shutting down the latter	The MAC address specified in the system message is currently learned on the first ethernet service instance specified in the system message. An ethernet frame with the same MAC address has now been encountered on the second ethernet service instance. This is a violation of MAC Security policy and as a result the second service instance will be shut down.	ether-infra	"If the MAC address has to be permitted to be re-learned on the second " "service instance remove the address from the list of addresses " "permitted on the first service instance if applicable and clear the "
<del>MACSEC</del> EMIU_OVRSE	4-Warning	MACsec enabled interface [chars] IP MTU can't be more than [dec]	User config IP MTU size over MACsec enabled interface allows.	-	"Reconfigure IP MTU base on the suggested range."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MACSEC4RX_SC_EXCHD	4-Warning	RX SCI [node]x : TX SCI [node]x : vport [dec] : secy vport [dec]\n	Multiple In Late Packets Received.	-	"No action required normal operation."
MACSEC4TX_SC_EXCHD	4-Warning	TX SCI [node]x : vport [dec]\n	TX SC exceeds hardware limit.	-	"No action required normal operation."
MACSEC4ADNSRBLIMIT	4-Warning	Attempt to learn [enet] on [chars] caused configured bridge-domain limit [node]to be exceeded.	The bridge-domain specified in the system message is not allowed to learn addresses beyond the limit specified in the system message. A service instance belonging to this bridge-domain received a frame with unknown source MAC address and if this address is learnt it would cause the bridge-domain limit to be exceeded. The address has not been learnt.	ether-infra	-
MACSEC4ADNSRBLIMIT	4-Warning	Attempt to learn [enet] on [chars] caused configured bridge-domain limit [node]to be exceeded.	The bridge-domain specified in the system message is not allowed to learn addresses beyond the limit specified in the system message. A service instance belonging to this bridge-domain received a frame with unknown source MAC address and if this address is learnt it would cause the bridge-domain limit to be exceeded. The address has not been learnt.	ether-infra	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>MSC0AD-RSRSLEND</del>	4-Warning	Attempt to learn denied address [enet] on [chars].	The ethernet service instance specified in the system message has been configured for restrict-mode MAC Security and has been configured to deny the MAC address specified in the system message. A frame was received from this denied MAC address. The address has not been learnt.	ether-infra	-
<del>MSC0AD-RSRSLEND</del>	4-Warning	Attempt to learn denied address [enet] on [chars].	The ethernet service instance specified in the system message has been configured for restrict-mode MAC Security and has been configured to deny the MAC address specified in the system message. A frame was received from this denied MAC address. The address has not been learnt.	ether-infra	-



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MCSADNRSRSIM	4-Warning	Attempt to learn [enet] on [chars] caused configured service instance limit [node]to be exceeded.	The ethernet service instance specified in the system message has been configured for restrict-mode MAC Security and is not allowed to learn addresses beyond the limit specified in the system message. This service instance received a frame with unknown source MAC address and if this address is learnt it would cause the limit to be exceeded. The address has not been learnt.	ether-infra	-
MCSADNRSRSIM	4-Warning	Attempt to learn [enet] on [chars] caused configured service instance limit [node]to be exceeded.	The ethernet service instance specified in the system message has been configured for restrict-mode MAC Security and is not allowed to learn addresses beyond the limit specified in the system message. This service instance received a frame with unknown source MAC address and if this address is learnt it would cause the limit to be exceeded. The address has not been learnt.	ether-infra	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>MS00ADRSFSSCIM</del>	4-Warning	Attempt to learn [enet] on [chars] caused system limit [node]to be exceeded.	It is not allowed to learn addresses beyond the system limit that allows number of permitted + sticky addresses to be configured in the system. A service instance received a frame with unknown source MAC address and if this address is learnt it would cause the system limit to be exceeded. The address has not been learnt.	ether-infra	-
<del>MS00ADRSFSSCIM</del>	4-Warning	Attempt to learn [enet] on [chars] caused system limit [node]to be exceeded.	It is not allowed to learn addresses beyond the system limit that allows number of permitted + sticky addresses to be configured in the system. A service instance received a frame with unknown source MAC address and if this address is learnt it would cause the system limit to be exceeded. The address has not been learnt.	ether-infra	-
<del>MS00ADRSFSSCIM</del>	4-Warning	Attempt to learn [enet] on [chars] caused system limit [node]to be exceeded.	It is not allowed to learn addresses beyond the system limit. A service instance received a frame with unknown source MAC address and if this address is learnt it would cause the system limit to be exceeded. The address has not been learnt.	ether-infra	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MACSEC6ADNRSRSM	4-Warning	Attempt to learn [enet] on [chars] caused system limit [node]to be exceeded.	It is not allowed to learn addresses beyond the system limit. A service instance received a frame with unknown source MAC address and if this address is learnt it would cause the system limit to be exceeded. The address has not been learnt.	ether-infra	-
MACSEC5IXSAEXP	5-Notice	TX SCI [node]x : AN [dec] TX SA PN about to expire.\n	TX SA PN about to expire. Send a request to MKA to perform a SAK Rekey for the given TX SCI and AN.	-	"No action required normal operation."
MACSEC3UNSUPPORTEDSUP	5-Notice	MACsec is not supported on supervisor HW version [dec] in slot [dec]	This log indicates that Macsec is not supported on a given port	coresw-macsec	LOG_SID_NO_ACTION
MACSEC6CREATE_RX_SC	6-Information	[chars] RX SCI [node]x : TX SCI [node]x : vport [dec] : secy vport [dec]\n	MKA request MACsec PD to create a RX SC on the given RX SCI and vport.	-	"No action required normal operation."
MACSEC6CREATE_TX_SC	6-Information	[chars] TX SCI [node]x : vport [dec]\n	MKA request MACsec PD to create a TX SC on the given TX SCI and vport.	-	"No action required normal operation."
MACSEC6DEL_RX_SA	6-Information	[chars] RX SCI [node]x : vport [dec] : an [dec]\n	MKA request MACsec PD to delete a RX SA on the given RX SCI vport and an.	-	"No action required normal operation."
MACSEC6DEL_RX_SC	6-Information	[chars] RX SCI [node]x : vport [dec]\n	MKA request MACsec PD to delete a RX SC on the given RX SCI and vport.	-	"No action required normal operation."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MACSEC6-DEL_TX_SC	6-Information	[chars] TX SCI [node]x : vport [dec]\n	MKA request MACsec PD to delete a TX SC on the given TX SCI and vport.	-	"No action required normal operation."
MACSEC6-INSTALL_RX_SA	6-Information	[chars] RX SCI [node]x : vport [dec] : an [dec] : secy_vport [dec]\n	MKA request MACsec PD to install a RX SA on the given RX SCI vport and an.	-	"No action required normal operation."
MACSEC6-INSTALL_TX_SA	6-Information	[chars] TX SCI [node]x : vport [dec] : an [dec] : next_pn 0x[hec]\n	MKA request MACsec PD to install a TX SA on the given TX SCI vport and an.	-	"No action required normal operation."
MACSEC6-POST_FAIL	6-Information	[chars] Power-On-System-Test failure in Trial No.[dec]\n	MACSEC power-on-system-test failed	-	"No action required normal operation."
MACSEC6-POST_SUCC	6-Information	[chars] Power-On-System-Test success in Trial No.[dec]\n	MACSEC power-on-system-test successful	-	"No action required normal operation."
MAILBOX3-BADCHKSUM	3-Error	Checksum failed. Expected = 0x[node]x calculated = 0x[node]x. Ignoring PDU.	A hardware or software error occurred.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
MAILBOX3-BADECHO	3-Error	Echo-response did not match echo-request!	-	-	"Confirm the router module installation. Make sure the software\n\ revision on the management module and the router module carrier card is\n\ up-to-date. If the error persists call your technical support\n\ representative for assistance."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MAILBOX-3-BADPDU	3-Error	PDU of type [chars] received. Invalid or unsupported. Ignoring.	-	-	"Informational message only. No action required."
MAILBOX-3-INITFAIL	3-Error	Mailbox initialization failure. [chars] Mailbox offline.	A catastrophic failure involving the initialization of the\n administrative mailbox occurred. The mailbox will be taken offline and\n remain in that state until a router module reset or a system reload\n occurs At that time initialization will again be attempted. Note that\n the functionality of the router that is its ability to receive and\n forward packets is not affected by this error.	-	"Confirm the router module installation. Make sure the software\n revision on the management module and the router module carrier card is\n up-to-date. If the error persists call your technicalsupport\n representative for assistance."
MAILBOX-3-NOECHO	3-Error	Echo-request timed out. No response received. Mailbox offline.	An ECHO_RESPONSE was not received in the appropriate time after the\n generation of an ECHO_REQUEST. This failure only occurs during mailbox\n initialization and indicates a problem between the communication path\n of the router module and its carrier card.	-	"Confirm the router module installation. Make sure the software\n revision on the management module and the router module carrier card is\n up-to-date. If the error persists call your technical support\n representative for assistance."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MAILBOX-3-OFFLINE	3-Error	[chars] mailbox is offline. Interrupt ignored.	This message is generated when an attempt is made by the management\n\n module to communicate with an offline mailbox. When it appears it\n\n indicates a problem exists between the perceived state of the mailbox\n\n from the router's side versus the management module's side.	-	"Issue a system-wide reset on the management module. If the error\n\n persists call your technical support representative for assistance."
MAILBOX-3-TIMEOUT	3-Error	Intra-PDU timeout occurred on [chars] mailbox data.	A timeout occurred while sending or receiving the characters of a\n\n protocol data unit PDU. The entire PDU will be ignored.	-	"Informational message only. No action required"
MAILBOX-6-INITOK	6-Information	Mailbox initialization successful.	This message is generated after a router reload to indicate the\n\n mailbox was successfully initialized.	-	"Informational message only. No action required."
MAILBOX-7-MBOXDEBUG	7-Debug	[chars]	This message header is paired with general debugging messages used to\n\n provide information about the functionality of the mailbox. To enable\n\n mailbox debugging issue the command debug mailbox.	-	"Advisory message only. No action required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MAILBOX-7-ONLINE	7-Debug	[chars] mailbox coming online.	This message is generated only when mailbox debugging is enabled. It provides information about the state of each incoming or outgoing mailbox.	-	"Advisory message only. No action required."
MAILBOX-7-READ	7-Debug	Reading 0x[node]x from carrier.	This message is generated only when mailbox debugging is enabled. It provides very low-level information about the incoming mailbox data stream.	-	"Advisory message only. No action required."
MAILBOX-7-WRITE	7-Debug	Writing 0x[node]x to carrier.	This message is generated only when mailbox debugging is enabled. It provides very low-level information about the outgoing mailbox data stream.	-	"Advisory message only. No action required."
<del>MNNTIAHEMSTIEHA</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>MNNTIAHEMSTIEHA</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
MALLOC-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
MALLOC-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
MAT_LIMIT4DROPPED	4-Warning	bdomain [dec] with configured limit [node] has currently [node] entries	The Number of mac entries for a bdomain has gone below or is equal to the allowed number	12	"Depends of the Network admin"
MAT_LIMIT4EXCEEDED	4-Warning	bdomain [dec] with configured limit [node] has currently [node] entries	The Number of mac entries for a bdomain has exceeded the allowed number	12	"Depends of the Network admin"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MATMCFQUEUEOVRMT	4-Warning	MATM CF dropped message type [dec] as queue limit has reached	MATM checkpoint client could not send some messages because\n\n an internal queue was full. Mac address table on the standby\n\n might not be in sync and can impact behavior upon switchover.	mac_addresses	LOGSIDSHTTEHACION
MATM_ISSU-3-BUFFER	3-Error	MATM ISSU client failed to get buffer for message error [dec]	MATM ISSU client failed to get buffer for building\n\n a negotiation message. Hence it can send the negotiation\n\n message to the standby unit. When there is a problem in\n\n the negotiaton the standby unit can not be brought up.	mac_addresses	"show logging and show checkpoint client"
MATM_ISSU_CAPNADSE	3-Error	MATM ISSU client capability list is empty.	The MATM ISSU client capability exchange list size\n\n is invalid.	mac_addresses	"show issu capability entries <Client_ID>"
MATM_ISSU_CAPINCMBE	3-Error	MATM ISSU client capability exchange result incompatible.	The MATM ISSU client capability exchange has negotiated\n\n as incompatible with the peer.	mac_addresses	"show issu negotiated capability <Session_ID>"
MATM_ISSU-3-CAPABILITY	3-Error	MATM ISSU client [chars]	MATM ISSU client observed an error during capability\n\n negotiation. When this error happens there is a mismatch\n\n between the client capability between the active and\n\n standby unit.	mac_addresses	"show issu capability entries <client_id> and \n\n show issu session <client_id> and \n\n show issu negotiated capability <session_id>"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MATM_ISSU-3-INIT	3-Error	MATM ISSU client initialization failed at [chars] error [chars]	MATM ISSU client could not be initialized this will cause catastrophic failure when ISSU upgrade or downgrade is performed.	mac_addresses	LOGS_IDSHTTECH_ACTION
MATM_ISSU-3-MSG_NOT_COMPATIBLE	3-Error	MATM ISSU client message [dec] is not compatible	MATM ISSU client received an incompatible message from the peer unit. Since the message is not compatible it can be processed by this unit	mac_addresses	"show issu message group <client_id> and show issu session <client_id> and show issu negotiated version <session_id>"
MATM_ISSU-3-MSG_SIZE	3-Error	MATM ISSU client failed to get the message size for message [dec]	MATM ISSU client failed to calculate message size for the message specified. The MATM ISSU client will not be able to send message to the standby unit.	mac_addresses	"show issu message group <client_id> and show issu session <client_id> and show issu negotiated version <session_id>"
MATM_ISSU-3-POLICY	3-Error	MATM ISSU client message type [dec] is [chars]	MATM ISSU client received a message type which it does not support. The policy is applied to make the session compatible.	mac_addresses	"show issu session <client_id>"
MATM_ISSU-3-SEND_FAILED	3-Error	MATM ISSU client failed to send a negotiation message error [dec]	MATM ISSU client could not send a session negotiation message to the peer. When there is a problem in the negotiation the standby unit can not be brought up.	mac_addresses	"show logging and show checkpoint client"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MATM_ISSU-3-SESSION	3-Error	MATM ISSU client [chars]	MATM ISSU client observed an error during a session\n\n negotiation with the peer unit. When there is a problem\n\n with the session the standby unit can not be brought up.	mac_addresses	"show issu capability entries <client_id> and \n\n show issu session <client_id> and \n\n show issu negotiated capability <session_id>"
MATM_ISSU-3-UNREG	3-Error	MATM ISSU client failed to unregister session information. Error: [dec] [chars]	The MATM ISSU client failed to unregister session information.	mac_addresses	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
MATM_ISSU-3-TRANSFORM	3-Error	MATM ISSU client [chars] transform failed error [chars]	MATM ISSU client could not transform the message.\n\n If the transmit transformation failed it means that the\n\n checkpoint message can not be sent to the standby unit.\n\n If the receive transformation failed it means that the\n\n checkpoint message can not be applied on the standby\n\n unit. In both cases the MATM state will not\n\n be identical with the active unit.	mac_addresses	"show issu session <client_id> and \n\n show issu negotiated version <session_id>"
MAXMSGSIZE-4-LDP	4-Warning	ERRMSG_LIMIT_SLOW*15	-	-	-
MAXMSGSIZE-4-LDP	4-Warning	ERRMSG_LIMIT_SLOW*15	-	-	-
BOXDRGIA-3-BADPAR	3-Error	event 0x[hec]	Deregistration of handler function for a mailbox event failed due to a bad parameter.	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MBXCHGALNOHANDIR</del>	3-Error	event 0x[hec] handler 0x[hec]	Deregistration of handler function for a mailbox event failed because no handler was registered for the event.	cpp-ucode	LOG_STD_ACTION
<del>MBXCHANDIRORREN</del>	3-Error	events 0x[hec] bad bit number %u	Mailbox event is pending but no handler is registered for event.	cpp-ucode	LOG_STD_ACTION
<del>MBXCHANDIRORREN</del>	3-Error	-	-	-	-
<del>MBXCHGALBADPARM</del>	3-Error	event 0x[hec] handler 0x[hec]	Registration of handler function for a mailbox event failed due to a bad parameter.	cpp-ucode	LOG_STD_ACTION
<del>MBXCHGALHANDIRSS</del>	3-Error	event 0x[hec] handler 0x[hec]	Registration of handler function for a mailbox event failed because a handler is already registered for the event.	cpp-ucode	LOG_STD_ACTION
<del>MAIRMSBMSAIDBLCH</del>	3-Error	ewlc-multicast	DB Mismatch:[chars]	Previous joins and leaves have corrupted the database.	LOG_STD_ACTION
<del>MAIRMSBMSAIDBLCH</del>	3-Error	ewlc-multicast	Client %0X%0X%0X%0X%0X%0X multicast data is NULL.	Internal multicast database client entry should contain multicast data when a multicast join request comes from below service layer	LOG_STD_ACTION
<del>MAIRMSBMSAIDBLCH</del>	3-Error	ewlc-multicast	Client %0X%0X%0X%0X%0X%0X does not exist in internal database.	internal multicast database must contain the client entry when a multicast join request comes from below service layer	LOG_STD_ACTION
<del>MAIRMSBMSAIDBLCH</del>	3-Error	ewlc-multicast	(S	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MSHRMSEBAMACOR</del>	3-Error	ewlc-multicast	Mismatch between two database while[chars] mgid = %d client mac = %02%02%02%02%02%0X	Two different databases have different values for the client. Multicast functionality will be affected due to mismatch of database values.	LOG_STD_ACTION
<del>MSHRMSEBADIAMD</del>	3-Error	ewlc-multicast	Deletion of mgid %d from internal multicast databases failed	Mgid entry deletion from the internal database fails	LOG_STD_ACTION
<del>MSHRMSEBACUAMD</del>	3-Error	ewlc-multicast	%s for client %02%02%02%02%02%0X multicast group[chars]	-	-
<del>MSHRMSEBACSEMD</del>	3-Error	ewlc-multicast	insertion of mgid into database failed for some unknown reason - for source[chars] - group[chars] - vlan %d	Internal multicast database corrupted.	LOG_STD_ACTION
<del>MSHRMSEBACSMATH</del>	3-Error	ewlc-multicast	%s IP Value already inserted for mgid %d mismatches. saved value[chars] expected[chars]	the IP of the stored database and incoming database mismatches	LOG_STD_ACTION
<del>MSHRMSEBACSHK</del>	3-Error	ewlc-multicast	Mgid %d client tree destroy in internal multicast database failed	Mgid client tree destroy in internal database failed	LOG_STD_ACTION
<del>MSHRMSEBACSHMA</del>	3-Error	ewlc-multicast	Mgid %d client tree walk in internal multicast database failed	Mgid client tree walk in internal database failed	LOG_STD_ACTION
<del>MSHRMSEBACDSMATH</del>	3-Error	ewlc-multicast	There is some data mismatch between two databases for mgid %d.	some database in multicast code is having unexpected null data	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MOM/MOM/MOM</del>	4-Warning	ewlc-multicast	Multicast-over-Multicast (wireless multicast <ipv4Addr>/ipv6 <ipv6Addr>) is not configured on Multicast-over-Multicast Only platform. Wireless multicast will not work until MOM is configured	Wireless multicast is configured without MOM on MOM-Only platform	LOG_STD_ACTION
<del>MOM/MOM/MOM</del>	6-Information	ewlc-multicast	Capwap multicast mode[chars][chars]. IPv4 [%s:%s] and IPv6 [%s:%s] with Wireless multicast status[chars].[chars]	Wireless capwap multicast mode changed	LOG_STD_ACTION
<del>MOM/MOM/MOM</del>	3-Error	Error initialising class-map of type multicast-flows.	Could not register the component related to the class-map of type \n\ multicast-flows to the string database.	ipmulticast	"LOG_STD_ACTION"
<del>MOM/MOM/MOM</del>	3-Error	Error initialising class-map of type multicast-flows.	Could not register the component related to the class-map of type \n\ multicast-flows to the string database.	ipmulticast	"LOG_STD_ACTION"
<del>MOM/MOM/MOM</del>	3-Error	Non MLRE friendly FIA on interface [chars]	Unexpected flowlock id following feature execution	cpp-ucode	LOG_STD_ACTION
<del>MOM/MOM/MOM</del>	3-Error	[chars]	m-cast replication failure for PA described packet.	cpp-ucode	LOG_STD_ACTION
<del>MOM/MOM/MOM</del>	3-Error	[chars] %i	m-cast replication failure due to a bad Multicast Gather parameter.	cpp-ucode	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MCASIREDD3ACKQMSG	3-Error	Failed attempt to enqueue sync message type [node]in confirmation queue	An attempt to link a new sync message into the sync message confirmation queue failed. This indicates corruption of the linkage within the queue. It is not possible to track message confirmation or to initiate a recovery action if confirmation is not received.	-	LOGSIDSHTECHACTION
MCASIREDD3ACKQMSG	3-Error	Failed attempt to enqueue sync message type [node]in confirmation queue	An attempt to link a new sync message into the sync message confirmation queue failed. This indicates corruption of the linkage within the queue. It is not possible to track message confirmation or to initiate a recovery action if confirmation is not received.	-	LOGSIDSHTECHACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MCASIRERBACKLNQMSG	3-Error	Failed to remove sync request type [node]from pending ACK queue	An attempt failed to unlink a completed sync request from the queue for requests awaiting confirmation of receipt from the standby RP. This indicates corruption of the linkage within the pending acknowledgement queue. False timeout error messages and memory leakage are likely. Loss of standby RP sync is possible.	-	LOG_SIDSH_TECH_ACTION
MCASIRERBACKLNQMSG	3-Error	Failed to remove sync request type [node]from pending ACK queue	An attempt failed to unlink a completed sync request from the queue for requests awaiting confirmation of receipt from the standby RP. This indicates corruption of the linkage within the pending acknowledgement queue. False timeout error messages and memory leakage are likely. Loss of standby RP sync is possible.	-	LOG_SIDSH_TECH_ACTION
MCASIRERBAF_NULL_RM	3-Error	NULL parameter specified for setting PIM HA address family [node]context.	A function handling a PIM NSF state machine transition specified an invalid NULL address for one or more pointers to PIM NSF	-	LOG_SIDSH_TECH_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MCASIRERRAFNULLIRM	3-Error	NULL parameter specified for setting PIM HA address family [node]context.	A function handling a PIM NSF state machine transition specified an invalid NULL address for one or more pointers to PIM NSF	-	LOGS_IDSHTECH_ACTION
MCASIRERRBALCSYNCTYP	3-Error	Attempt to allocate sync request for invalid sync type %u	The sync data type specified by the function attempting to perform a sync operation is not a valid type. No sync operation can be performed.	-	LOGS_IDSHTECH_ACTION
MCASIRERRBALCSYNCTYP	3-Error	Attempt to allocate sync request for invalid sync type %u	The sync data type specified by the function attempting to perform a sync operation is not a valid type. No sync operation can be performed.	-	LOGS_IDSHTECH_ACTION
MCASIRERRBALOCCAP_TLV	3-Error	Failed attempt to allocate memory for [chars] client capability TLV	The callback function responsible for creating an ISSU capability type TLV list was unable to allocate memory to hold the TLV list. Capability negotiation can not proceed.	-	LOGS_IDSHTECH_ACTION
MCASIRERRBALOCCAP_TLV	3-Error	Failed attempt to allocate memory for [chars] client capability TLV	The callback function responsible for creating an ISSU capability type TLV list was unable to allocate memory to hold the TLV list. Capability negotiation can not proceed.	-	LOGS_IDSHTECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MCASIREDB3ALLOCMG	3-Error	Sync message buffer allocation failed for sync info type %u	An attempt to allocate a buffer for sync message transmission failed. Loss of sync on the standby RP is likely.	-	LOG_SIDSH_TECH_ACTION " Attempt standby RP synchronization by reloading " "the standby RP. "
MCASIREDB3ALLOCMG	3-Error	Sync message buffer allocation failed for sync info type %u	An attempt to allocate a buffer for sync message transmission failed. Loss of sync on the standby RP is likely.	-	LOG_SIDSH_TECH_ACTION " Attempt standby RP synchronization by reloading " "the standby RP. "
MCASIREDBAD_ADDR_TME	3-Error	Invalid Address Type [node]for PIM SSO handling.	An IP multicast SSO function received an invalid Address Type input parameter. Syncing of the affected database type to the standby RP can not be completed.	-	LOG_SIDSH_TECH_ACTION
MCASIREDBAD_ADDR_TME	3-Error	Invalid Address Type [node]for PIM SSO handling.	An IP multicast SSO function received an invalid Address Type input parameter. Syncing of the affected database type to the standby RP can not be completed.	-	LOG_SIDSH_TECH_ACTION
MCASIREDBAD_AF	3-Error	Invalid Address Family [node]for PIM SSO handling.	An IP multicast SSO function received an invalid Address Family input parameter. A subsequent timeout error and routing convergence delay is likely.	-	LOG_SIDSH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MCASTRED3BAD_AF	3-Error	Invalid Address Family [node]for PIM SSO handling.	An IP multicast SSO function received an invalid Address Family input parameter. A subsequent timeout error and routing convergence delay is likely.	-	LOGS_IDSHTTECH_ACTION
MCASTRED3BAD_DBG_RM	3-Error	Invalid parameter value in multicast redundancy debug command handling.	An invalid NULL or out of bounds value was specified in a call	-	LOGS_IDSHTTECH_ACTION
MCASTRED3BAD_DBG_RM	3-Error	Invalid parameter value in multicast redundancy debug command handling.	An invalid NULL or out of bounds value was specified in a call	-	LOGS_IDSHTTECH_ACTION
MCASTRED3BAD_EVENT_ME	3-Error	Defrd sync event type [dec] is invalid.	An invalid value was specified in a call to handle events which deferred sync elements are waiting for. The value is greater than <b>IMSNCWAITCRENIMAX</b>	-	LOGS_IDSHTTECH_ACTION
MCASTRED3BAD_EVENT_ME	3-Error	Defrd sync event type [dec] is invalid.	An invalid value was specified in a call to handle events which deferred sync elements are waiting for. The value is greater than <b>IMSNCWAITCRENIMAX</b>	-	LOGS_IDSHTTECH_ACTION
MCASTRED3BAD_SYNC_ME	3-Error	PIM sync type [dec] is invalid or too large.	An out of bounds value was specified in a call to set or get pim sync type bit array. The value is either greater than <b>PIM_SYNC_TYPE_MAX</b> or greater than the length of the bit array.	-	LOGS_IDSHTTECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MCASIRERRBADSYNCTIME	3-Error	PIM sync type [dec] is invalid or too large.	An out of bounds value was specified in a call to set or get pim sync type bit array. The value is either greater than PIM_SYNC_TYPE_MAX or greater than the length of the bit array.	-	LOG_SIDSH_TCH_ACTION
MCASIRERR3BLKNBOOL	3-Error	Failed to create [chars] watched boolean for bulk sync	An attempt to create a watched boolean to monitor bulk sync of state information to the standby RP has failed. It is not possible to verify successful completion of the bulk sync operation.	-	LOG_SIDSH_TCH_ACTION
MCASIRERR3BLKNBOOL	3-Error	Failed to create [chars] watched boolean for bulk sync	An attempt to create a watched boolean to monitor bulk sync of state information to the standby RP has failed. It is not possible to verify successful completion of the bulk sync operation.	-	LOG_SIDSH_TCH_ACTION
MCASIRERR3BLKNFUNC	3-Error	No bulk sync function defined for sync type %u	There is no function defined for bulk synchroning of database information of this type. It is possible that some required information may not be synced to the standby RP.	-	LOG_SIDSH_TCH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MASREB</del> MCA5IRE3BLKNCUNC	3-Error	No bulk sync function defined for sync type %u	There is no function defined for bulk syncing of database information of this type. It is possible that some required information may not be synced to the standby RP.	-	LOG_SIDSH_TECH_ACTION
<del>MASREB</del> MASREB MCA5IRE3BLKNCUNC	3-Error	Skipping sending of bulk sync completion message to peer: Incompatible message type.	The message code designated for peer RP confirmation of bulk sync completion was not recognized by the ISSU infrastructure as a compatible PIM HA message type. Although PIM bulk sync may have succeeded bulk sync confirmation is not possible.	-	LOG_SIDSH_TECH_ACTION
<del>MASREB</del> MASREB MCA5IRE3BLKNCUNC	3-Error	Skipping sending of bulk sync completion message to peer: Incompatible message type.	The message code designated for peer RP confirmation of bulk sync completion was not recognized by the ISSU infrastructure as a compatible PIM HA message type. Although PIM bulk sync may have succeeded bulk sync confirmation is not possible.	-	LOG_SIDSH_TECH_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>MCASREDBULKQIME</del>	3-Error	ISSU xmit transform failed for bulk send complete message.	ISSU transformation failed on the message used for peer RP confirmation of bulk sync completion. Although PIM bulk sync may have succeeded bulk sync confirmation is not possible.	-	LOG_SIDSH_TECH_ACTION
<del>MCASREDBULKQIME</del>	3-Error	ISSU xmit transform failed for bulk send complete message.	ISSU transformation failed on the message used for peer RP confirmation of bulk sync completion. Although PIM bulk sync may have succeeded bulk sync confirmation is not possible.	-	LOG_SIDSH_TECH_ACTION
<del>MCASREDBULKQIME</del>	3-Error	Timeout sending bulk sync requests to standby	The maximum wait time has expired for transmission of enqueued bulk sync messages to the standby RP. It is possible that not all required sync messages have been successfully sent.	-	LOG_SIDSH_TECH_ACTION
<del>MCASREDBULKQIME</del>	3-Error	Timeout sending bulk sync requests to standby	The maximum wait time has expired for transmission of enqueued bulk sync messages to the standby RP. It is possible that not all required sync messages have been successfully sent.	-	LOG_SIDSH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MSRLEAPROCNILCX	3-Error	NULL client context for ISSU capability TLV processing.	The callback function responsible for processing a capability type TLV was invoked by the ISSU infrastructure with a NULL client context. Capability negotiation can not proceed.	-	LOGSIDSHTTECHACI0N
MSRLEAPROCNILCX	3-Error	NULL client context for ISSU capability TLV processing.	The callback function responsible for processing a capability type TLV was invoked by the ISSU infrastructure with a NULL client context. Capability negotiation can not proceed.	-	LOGSIDSHTTECHACI0N
MSRLEAPROCNILCX	3-Error	NULL client context for ISSU capability TLV setup.	The callback function responsible for creating a capability type TLV was invoked by the ISSU infrastructure with a NULL client context. Capability negotiation can not proceed.	-	LOGSIDSHTTECHACI0N
MSRLEAPROCNILCX	3-Error	NULL client context for ISSU capability TLV setup.	The callback function responsible for creating a capability type TLV was invoked by the ISSU infrastructure with a NULL client context. Capability negotiation can not proceed.	-	LOGSIDSHTTECHACI0N
MSRLEDRABDAF	3-Error	Invalid Address Family for PIM NSF data driven event replay completion.	Notification for completion of MFIB data driven event DDE	-	LOGSIDSHTTECHACI0N





Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MCASIREDBECCDHUNC	3-Error	No decode function exists for sync data type %u	There is no function defined for handling sync data of the specified type. No sync action is possible on the standby RP for the sync message that specified this data type.	-	LOGSIDSHTECHACTION
MCASIREDBECCDHUNC	3-Error	No decode function exists for sync data type %u	There is no function defined for handling sync data of the specified type. No sync action is possible on the standby RP for the sync message that specified this data type.	-	LOGSIDSHTECHACTION
MCASIREDBECCDENUL	3-Error	No message buffer specified for standby sync of database type [node]or unsupported address type.	A function was invoked to perform a database sync operation on the standby RP but the caller did not specify the address of the sync message containing the information required for performing the sync operation. Or the address type is unsupported. The sync operation for this database entity type can not proceed.	-	LOGSIDSHTECHACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>MCA</del> SIRED <del>B</del> DCDENLL	3-Error	No message buffer specified for standby sync of database type [node]or unsupported address type.	A function was invoked to perform a database sync operation on the standby RP but the caller did not specify the address of the sync message containing the information required for performing the sync operation. Or the address type is unsupported. The sync operation for this database entity type can not proceed.	-	LOG_SIDSH_TCH_ACTION
<del>MCA</del> SIRED <del>B</del> RSNCAURE	3-Error	Sync failure in standby defer sync operation.	An element which was scheduled to be synched later has failed to sync either upon arrival of the event it was waiting for or it has waited in the deferred sync queue for more than 1 minute.	-	LOG_SIDSH_TCH_ACTION
<del>MCA</del> SIRED <del>B</del> RSNCAURE	3-Error	Sync failure in standby defer sync operation.	An element which was scheduled to be synched later has failed to sync either upon arrival of the event it was waiting for or it has waited in the deferred sync queue for more than 1 minute.	-	LOG_SIDSH_TCH_ACTION
<del>MCA</del> SIRED <del>B</del> DNLLREQ	3-Error	No sync request specified in sync request deletion attempt.	In a call to delete a sync request entry the caller failed to specify the location of the sync request to be deleted. A memory leak is likely.	-	LOG_SIDSH_TCH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MCASIREDBEHNLREQ	3-Error	No sync request specified in sync request deletion attempt.	In a call to delete a sync request entry the caller failed to specify the location of the sync request to be deleted. A memory leak is likely.	-	LOGSIDSHTTECHACTION
MCASIREDBEHSYNCTYP	3-Error	Attempt to delete sync request for invalid sync type %u	The sync data type specified by the function attempting to delete a sync request is not a valid type. The sync request can not be deleted. A memory leak is likely.	-	LOGSIDSHTTECHACTION
MCASIREDBEHSYNCTYP	3-Error	Attempt to delete sync request for invalid sync type %u	The sync data type specified by the function attempting to delete a sync request is not a valid type. The sync request can not be deleted. A memory leak is likely.	-	LOGSIDSHTTECHACTION
MCASIREDBDUPENQLE	3-Error	This element is already in queue.	The element is already in queue. The current logic does not allow this to happen. Please investigate why the element is in queue.	-	LOGSIDSHTTECHACTION
MCASIREDBDUPENQLE	3-Error	This element is already in queue.	The element is already in queue. The current logic does not allow this to happen. Please investigate why the element is in queue.	-	LOGSIDSHTTECHACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MASRELEMPYCAPROP</del>	3-Error	Empty capability group for [chars] ISSU client capability TLV setup.	The callback function responsible for creating an ISSU capability type TLV found that the count of capability entries in its client context table was zero. Capability negotiation can not proceed.	-	LOG_SIDSH_TECH_ACTION
<del>MASRELEMPYCAPROP</del>	3-Error	Empty capability group for [chars] ISSU client capability TLV setup.	The callback function responsible for creating an ISSU capability type TLV found that the count of capability entries in its client context table was zero. Capability negotiation can not proceed.	-	LOG_SIDSH_TECH_ACTION
<del>MASRELEMPYCAPROP</del>	3-Error	Empty capability table for ISSU capability TLV setup.	The callback function responsible for creating a capability type TLV was invoked by the ISSU infrastructure with a capability table containing no capability types. Capability negotiation can not proceed.	-	LOG_SIDSH_TECH_ACTION
<del>MASRELEMPYCAPROP</del>	3-Error	Empty capability table for ISSU capability TLV setup.	The callback function responsible for creating a capability type TLV was invoked by the ISSU infrastructure with a capability table containing no capability types. Capability negotiation can not proceed.	-	LOG_SIDSH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MCASIREEMPTYUNCAL	3-Error	The default empty function [chars] is called.	The default empty function called the real function seems have not been hooked up yet. This happens when function called before function hooked up.	-	LOG_SIDSH_TECH_ACTION
MCASIREEMPTYUNCAL	3-Error	The default empty function [chars] is called.	The default empty function called the real function seems have not been hooked up yet. This happens when function called before function hooked up.	-	LOG_SIDSH_TECH_ACTION
MCASIREDB3EOXBADRC	3-Error	Invalid completion code [node]for sync message transmission type %u	An undefined completion code was specified for end of sync message transmission handling. Memory leakage false timeouts and other subsequent errors may result.	-	LOG_SIDSH_TECH_ACTION
MCASIREDB3EOXBADRC	3-Error	Invalid completion code [node]for sync message transmission type %u	An undefined completion code was specified for end of sync message transmission handling. Memory leakage false timeouts and other subsequent errors may result.	-	LOG_SIDSH_TECH_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MCASIREDB3EOXNOREQ	3-Error	End of sync message transmission: no sync request specified	End of sync message transmission handling was invoked with no sync request specified. Cleanup for successful transmission can not proceed. Retry for unsuccessful transmission can not proceed. Memory leakage is likely and loss of sync on the standby RP is possible.	-	LOG_SIDSH_TECH_ACTION
MCASIREDB3EOXNOREQ	3-Error	End of sync message transmission: no sync request specified	End of sync message transmission handling was invoked with no sync request specified. Cleanup for successful transmission can not proceed. Retry for unsuccessful transmission can not proceed. Memory leakage is likely and loss of sync on the standby RP is possible.	-	LOG_SIDSH_TECH_ACTION
MCASIREDB3INDULLENT	3-Error	No target specified for sync entity search.	In a call to invoke a search for a database entity requiring synching to the standby RP the caller failed to specify a descriptor for the entity to be synched. The sync operation entity can not proceed.	-	LOG_SIDSH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MCASIREDBINDUENT	3-Error	No target specified for sync entity search.	In a call to invoke a search for a database entity requiring synching to the standby RP the caller failed to specify a descriptor for the entity to be synched. The sync operation entity can not proceed.	-	LOGSIDSHTECHACIION
MCASIREDBFMIFUNC	3-Error	No sync message format function defined for sync type %u	No function is defined to create a sync messages for this type of database information. Loss of sync on the standby RP is likely.	-	LOGSIDSHTECHACIION
MCASIREDBFMIFUNC	3-Error	No sync message format function defined for sync type %u	No function is defined to create a sync messages for this type of database information. Loss of sync on the standby RP is likely.	-	LOGSIDSHTECHACIION
MCASIREDBMIGENCBF	3-Error	No message buffer specified for generic sync message info	A function was invoked to store generic sync message information into an outgoing message buffer but the caller did not specify the outgoing message buffer address. The sync operation for this database entity type can not proceed.	-	LOGSIDSHTECHACIION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MCASTRD3FMIGNOBF	3-Error	No message buffer specified for generic sync message info	A function was invoked to store generic sync message information into an outgoing message buffer but the caller did not specify the outgoing message buffer address. The sync operation for this database entity type can not proceed.	-	LOG_SIDSH_TECH_ACTION
MCASTRD3FMIMSG	3-Error	Failed to format a sync message for sync type %u	An attempt to format create a sync message has failed. The	-	LOG_SIDSH_TECH_ACTION
MCASTRD3FMIMSG	3-Error	Failed to format a sync message for sync type %u	An attempt to format create a sync message has failed. The	-	LOG_SIDSH_TECH_ACTION
MCASTRD3FMILLRM	3-Error	Missing parameters in sync message format request for data type %u	A function was invoked to store sync message information into an outgoing message buffer but the caller failed to specify either the location of the search key for the the database entity to be synched or the address of the outgoing message buffer The sync operation for this database entity type can not proceed.	-	LOG_SIDSH_TECH_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MCASTRED3MINUHRM	3-Error	Missing parameters in sync message format request for data type %u	A function was invoked to store sync message information into an outgoing message buffer but the caller failed to specify either the location of the search key for the the database entity to be synched or the address of the outgoing message buffer The sync operation for this database entity type can not proceed.	-	LOGSIDSHTTECHACTION
MCASTRED3HASHNQ	3-Error	Failed attempt to enqueue sync request type [node]in hash table	An attempt to link a new sync request into the sync request hash table failed. This indicates corruption of the linkage within the hash table. The sync operation can not proceed.	-	LOGSIDSHTTECHACTION
MCASTRED3HASHNQ	3-Error	Failed attempt to enqueue sync request type [node]in hash table	An attempt to link a new sync request into the sync request hash table failed. This indicates corruption of the linkage within the hash table. The sync operation can not proceed.	-	LOGSIDSHTTECHACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MCASTHDRSNOTABLE	3-Error	No table for tableid 0x[hec] specified for multicast NSF holdoff release.	A table ID for which no table exists was specified as an input to a function registered for releasing of a multicast NSF holdoff lock. If the calling client has a real holdoff extension request pending for some table the lock will not be released until the holdoff failsafe timer expires. This could delay completion of multicast reconvergence following an RP failover.	-	LOGSIDSHTTECHACTION
MCASTHDRSNOTABLE	3-Error	No table for tableid 0x[hec] specified for multicast NSF holdoff release.	A table ID for which no table exists was specified as an input to a function registered for releasing of a multicast NSF holdoff lock. If the calling client has a real holdoff extension request pending for some table the lock will not be released until the holdoff failsafe timer expires. This could delay completion of multicast reconvergence following an RP failover.	-	LOGSIDSHTTECHACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MCASIRERRHPBADTYPE	3-Error	Invalid helper type [node]specified for [chars] PIM sync helper registration.	The PIM sync infrastructure specified an invalid helper type in a call to a pim sync helper registration function. No PIM sync helper functions can be registered for this helper type for this address family. As a result PIM SSO functionality will be impaired for this address family.	-	LOG_SID_SH_TECH_ACTION
MCASIRERRHPBADTYPE	3-Error	Invalid helper type [node]specified for [chars] PIM sync helper registration.	The PIM sync infrastructure specified an invalid helper type in a call to a pim sync helper registration function. No PIM sync helper functions can be registered for this helper type for this address family. As a result PIM SSO functionality will be impaired for this address family.	-	LOG_SID_SH_TECH_ACTION
MCASIRERRHPNULLRM	3-Error	NULL parameter specified for [chars] PIM sync helper registration.	The PIM sync infrastructure specified one or more NULL pointers to the output parameters in a call to a pim sync helper registration function. No PIM sync helper functions can be registered for this address family. As a result no PIM SSO functionality can be provided for this address family.	-	LOG_SID_SH_TECH_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MCASIRERRHPNULLRM	3-Error	NULL parameter specified for [chars] PIM sync helper registration.	The PIM sync infrastructure specified one or more NULL pointers to the output parameters in a call to a pim sync helper registration function. No PIM sync helper functions can be registered for this address family. As a result no PIM SSO functionality can be provided for this address family.	-	LOG_SIDSH_TCH_ACTION
MCASIRERRHPNULLRG	3-Error	NULL list registered for PIM sync helper functions.	In a request to register helper functions for the owner of one or more PIM sync databases a NULL value was specified for the list of functions to be registered. PIM sync operations may be inhibited for the affected database types.	-	LOG_SIDSH_TCH_ACTION
MCASIRERRHPNULLRG	3-Error	NULL list registered for PIM sync helper functions.	In a request to register helper functions for the owner of one or more PIM sync databases a NULL value was specified for the list of functions to be registered. PIM sync operations may be inhibited for the affected database types.	-	LOG_SIDSH_TCH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MCASIRLDHPRG_CUNT	3-Error	Invalid count [node]specified for PIM sync helper registration.	In a request to register helper functions for the owner of one or more PIM sync databases an invalid value was specified for the count of functions to be registered. PIM sync operations may be inhibited for the affected database types.	-	LOGS_IDSHTECH_ACTION
MCASIRLDHPRG_CUNT	3-Error	Invalid count [node]specified for PIM sync helper registration.	In a request to register helper functions for the owner of one or more PIM sync databases an invalid value was specified for the count of functions to be registered. PIM sync operations may be inhibited for the affected database types.	-	LOGS_IDSHTECH_ACTION
MCASIRLDHPRG_SYNC_TME	3-Error	Invalid sync type [node]specified for PIM sync helper registration.	In a request to register helper functions for the owner of one or more PIM sync databases an invalid value was specified for the sync database type of at least one of the functions to be registered. PIM sync operations may be inhibited for the affected database types.	-	LOGS_IDSHTECH_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MCASIRDDHPREGTYPE	3-Error	Invalid sync type [node]specified for PIM sync helper registration.	In a request to register helper functions for the owner of one or more PIM sync databases an invalid value was specified for the sync database type of at least one of the functions to be registered. PIM sync operations may be inhibited for the affected database types.	-	LOG_SIDSHTTECH_ACTION
MCASIRDDHPREGTYPE	3-Error	Invalid type [node]specified for PIM sync helper registration.	In a request to register helper functions for the owner of one or more PIM sync databases an invalid value was specified for the helper function type of the functions to be registered. PIM sync operations may be inhibited for the affected database types.	-	LOG_SIDSHTTECH_ACTION
MCASIRDDHPREGTYPE	3-Error	Invalid type [node]specified for PIM sync helper registration.	In a request to register helper functions for the owner of one or more PIM sync databases an invalid value was specified for the helper function type of the functions to be registered. PIM sync operations may be inhibited for the affected database types.	-	LOG_SIDSHTTECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MCSIRLHOLDFAILSAE</del>	3-Error	[chars] PIM NSF failsafe timer expired. Holding client mask = 0x[hec]	One or more clients requested extension of the PIM NSF holdoff period but did not release the holdoff within the maximum allowed time interval. PIM is forcing termination of the NSF holdoff period and resumption of normal flow of multicast routing information but one or more clients may not be ready to resume normal operation.	-	LOGS_IDS_H_TECH_ACTION
<del>MCSIRLHOLDFAILSAE</del>	3-Error	[chars] PIM NSF failsafe timer expired. Holding client mask = 0x[hec]	One or more clients requested extension of the PIM NSF holdoff period but did not release the holdoff within the maximum allowed time interval. PIM is forcing termination of the NSF holdoff period and resumption of normal flow of multicast routing information but one or more clients may not be ready to resume normal operation.	-	LOGS_IDS_H_TECH_ACTION
MCSIREDB3NINBOOL	3-Error	Failed to create [chars] watched boolean during multicast redundancy initialization	An attempt to create a watched boolean during multicast PIM	-	LOGS_IDS_H_TECH_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MCASIREDBNINOCBOOL	3-Error	Failed to create [chars] watched boolean during multicast redundancy initialization	An attempt to create a watched boolean during multicast PIM	-	LOG_SIDSH_TECH_ACTION
MCASIREDBNINOCQUEUE	3-Error	Failed to create [chars] watched queue during multicast redundancy initialization	An attempt to create a watched queue during multicast PIM	-	LOG_SIDSH_TECH_ACTION
MCASIREDBNINOCQUEUE	3-Error	Failed to create [chars] watched queue during multicast redundancy initialization	An attempt to create a watched queue during multicast PIM	-	LOG_SIDSH_TECH_ACTION
MCASIREDBNCKPTMSG	3-Error	Received invalid CF message. client = [node] entity = [node] type = %u	An invalid Checkpoint Facility message was received by the PIM HA checkpoint client. The message can not be processed. A possible loss of database synchronization between the primary and standby RPs is possible.	-	LOG_SIDSH_TECH_ACTION
MCASIREDBNCKPTMSG	3-Error	Received invalid CF message. client = [node] entity = [node] type = %u	An invalid Checkpoint Facility message was received by the PIM HA checkpoint client. The message can not be processed. A possible loss of database synchronization between the primary and standby RPs is possible.	-	LOG_SIDSH_TECH_ACTION



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MCASIRERRINVPORTTYPE	3-Error	Invalid communication port identifier [node]specified for ISSU port up/down handling	The communication port identifier specified for PIM ISSU transport up/down handling has an undefined value. PIM ISSU communication port up/down handling can not proceed. PIM ISSU functionality may be impaired or lost.	-	LOGSIDSHTTECHACTION
MCASIRERRINVPORTTYPE	3-Error	Invalid communication port identifier [node]specified for ISSU port up/down handling	The communication port identifier specified for PIM ISSU transport up/down handling has an undefined value. PIM ISSU communication port up/down handling can not proceed. PIM ISSU functionality may be impaired or lost.	-	LOGSIDSHTTECHACTION
MCASIRERRINVPORTTYPE	3-Error	Invalid capability table for [chars] client ISSU capability TLV setup.	The callback function responsible for creating a capability type TLV was invoked by the ISSU infrastructure with a capability table that did not match any of the registered entries for this client. Capability negotiation can not proceed.	-	LOGSIDSHTTECHACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MCASREINVA_CAP_PSE_ABE	3-Error	Invalid capability table for [chars] client ISSU capability TLV setup.	The callback function responsible for creating a capability type TLV was invoked by the ISSU infrastructure with a capability table that did not match any of the registered entries for this client. Capability negotiation can not proceed.	-	LOG_SIDSH_TECH_ACTION
MCASIREDBNSYNCTYP	3-Error	Attempt to initiate sync request for invalid sync type	The sync data type specified by the function attempting to initiate a sync operation is not a valid type. No sync operation can be performed.	-	LOG_SIDSH_TECH_ACTION
MCASIREDBNSYNCTYP	3-Error	Attempt to initiate sync request for invalid sync type	The sync data type specified by the function attempting to initiate a sync operation is not a valid type. No sync operation can be performed.	-	LOG_SIDSH_TECH_ACTION
MCASIREDBNS_EMPTY_TLV	3-Error	Empty TLV list received for ISSU [chars] client capability processing	The callback function responsible for processing an ISSU capability type TLV list received an empty TLV list. Capability negotiation can not proceed.	-	LOG_SIDSH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MCASIRL <del>ISSU</del> _EMPTY_TLV	3-Error	Empty TLV list received for ISSU [chars] client capability processing	The callback function responsible for processing an ISSU capability type TLV list received an empty TLV list. Capability negotiation can not proceed.	-	LOG_SID_SH_TECH_ACTION
MCASIRL <del>ISSU</del> _ROCCAP_ME	3-Error	Invalid capability type found in [chars] client capability entry.	The callback function responsible for processing an ISSU capability type TLV list encountered a capability type for which no handling is available. Capability negotiation can not proceed.	-	LOG_SID_SH_TECH_ACTION
MCASIRL <del>ISSU</del> _ROCCAP_ME	3-Error	Invalid capability type found in [chars] client capability entry.	The callback function responsible for processing an ISSU capability type TLV list encountered a capability type for which no handling is available. Capability negotiation can not proceed.	-	LOG_SID_SH_TECH_ACTION
MCASIRL <del>ISSU</del> _TLV_INSERT	3-Error	Failed to insert entry in ISSU capability TLV list for [chars] client	The callback function responsible for creating an ISSU capability type TLV list encountered a failure when attempting to insert an entry into a TLV list. Capability negotiation can not proceed.	-	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MCASIREDB3ISSU_TLVINSERT	3-Error	Failed to insert entry in ISSU capability TLV list for [chars] client	The callback function responsible for creating an ISSU capability type TLV list encountered a failure when attempting to insert an entry into a TLV list. Capability negotiation can not proceed.	-	LOG_SIDSH_TECH_ACTION
MCASIREDB3LOCFUNC	3-Error	No database entity search function defined for sync type %u	A function was invoked to store sync message information into an outgoing message buffer but no function exists for locating a database entry of the specified type. The sync operation for this database entity type can not proceed.	-	LOG_SIDSH_TECH_ACTION
MCASIREDB3LOCFUNC	3-Error	No database entity search function defined for sync type %u	A function was invoked to store sync message information into an outgoing message buffer but no function exists for locating a database entry of the specified type. The sync operation for this database entity type can not proceed.	-	LOG_SIDSH_TECH_ACTION
MCASIREDB3LOCCLIENT	3-Error	No destination specified in search for sync entity of type %u	A function was invoked to search for a database entity of the specified type. The caller failed to specify a destination for storing the search result. The sync operation for this database entity type can not proceed.	-	LOG_SIDSH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MCASIREDBLCONULLENT	3-Error	No destination specified in search for sync entity of type %u	A function was invoked to search for a database entity of the specified type. The caller failed to specify a destination for storing the search result. The sync operation for this database entity type can not proceed.	-	LOG_SIDSH_TECH_ACTION
MCASIREDBLCONULHND	3-Error	No search handle specified in search for sync entity of type %u	A function was invoked to search for a database entity of the specified type. The caller failed to specify a search handle key	-	LOG_SIDSH_TECH_ACTION
MCASIREDBLCONULHND	3-Error	No search handle specified in search for sync entity of type %u	A function was invoked to search for a database entity of the specified type. The caller failed to specify a search handle key	-	LOG_SIDSH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MCASIRERR3MCAC_COST	3-Error	Deleted mCAC reservation cost for [chars] [chars] if_number [node]	The accumulated total source or group cost for the affected mCAC reservation DB should always be the greater than the cost of any reservation within the database. This logic error means that the accounting is incorrect. As a result the amount of bandwidth initially reserved for multicast state previously admitted by the current mCAC configuration may be incorrect following an RP failover. This may lead to some disruption of multicast traffic following an RP failover.	-	LOG_SIDSHTTECH_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MCA5IREDBMCA_COST	3-Error	Deleted mCAC reservation cost for [chars] [chars] if_number [node]	The accumulated total source or group cost for the affected mCAC reservation DB should always be the greater than the cost of any reservation within the database. This logic error means that the accounting is incorrect. As a result the amount of bandwidth initially reserved for multicast state previously admitted by the current mCAC configuration may be incorrect following an RP failover. This may lead to some disruption of multicast traffic following an RP failover.	-	LOGS_IDSHTTECH_ACTION
MCA5REACDEALNDB	3-Error	Failed to find IDB for mCAC [chars] reservation DB delete. AF = [node] Reason: [chars]	Lookup of the IDB for the specified input parameters failed either because of an invalid input parameter or incorrect/missing entries in tables used for the lookup. The requested DB delete operation can not proceed. Extraneous mCAC reservations may exist temporarily following an RP failover.	-	LOGS_IDSHTTECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MASIR</del> <del>DB</del> <del>MCAC</del> <del>NO</del> <del>IDB</del>	3-Error	Failed to find IDB for mCAC [chars] reservation DB delete. AF = [node] Reason: [chars]	Lookup of the IDB for the specified input parameters failed either because of an invalid input parameter or incorrect/missing entries in tables used for the lookup. The requested DB delete operation can not proceed. Extraneous mCAC reservations may exist temporarily following an RP failover.	-	LOGSIDSHTECHACION
<del>MASIR</del> <del>DB</del> <del>MCAC</del> <del>NO</del> <del>IDB</del>	3-Error	No IDB for if_number [node]in mCAC reservation sync attempt for SG [chars] [chars]	-	-	-
<del>MASIR</del> <del>DB</del> <del>MCAC</del> <del>NO</del> <del>IDB</del>	3-Error	No IDB for if_number [node]in mCAC reservation sync attempt for SG [chars] [chars]	-	-	-



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MCSRLMCRADLE	3-Error	Failed to delete radix tree node for mCAC reservation [chars] DB. Address [chars] Mask [chars]	During handling of an mCAC reservation database element deletion an attempt to delete the affected element from the mCAC reservation database radix tree failed. As a result the amount of bandwidth initially reserved for multicast state previously admitted by the current mCAC configuration may be incorrect following an RP failover. This may lead to some disruption of multicast traffic following an RP failover.	-	LOGSIDSHTCHACI0N
MCSRLMCRADLE	3-Error	Failed to delete radix tree node for mCAC reservation [chars] DB. Address [chars] Mask [chars]	During handling of an mCAC reservation database element deletion an attempt to delete the affected element from the mCAC reservation database radix tree failed. As a result the amount of bandwidth initially reserved for multicast state previously admitted by the current mCAC configuration may be incorrect following an RP failover. This may lead to some disruption of multicast traffic following an RP failover.	-	LOGSIDSHTCHACI0N

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MCASIRERRM3CACRADKNI	3-Error	Failed to update radix tree for mCAC reservation [chars] DB for [chars] [chars] mCAC reservation on interface number %u	-	-	-
MCASIRERRM3CACRADKNI	3-Error	Failed to update radix tree for mCAC reservation [chars] DB for [chars] [chars] mCAC reservation on interface number %u	-	-	-
MCASIRERRM3CAC_SEQ	3-Error	Missing standby mCAC configuration for [chars] [chars] mCAC	During handling of an mCAC reservation sync request on the standby RP the corresponding mCAC limit configuration was not found. This is probably a result of a sequencing problem between synching of multicast configuration information and synching of dynamic state information. As a result the amount of bandwidth initially reserved for multicast state previously admitted by the current mCAC configuration may be incorrect following an RP failover. This may lead to some disruption of multicast traffic following an RP failover.	-	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MCASTRED3MCAC_SEQ	3-Error	Missing standby mCAC configuration for [chars] [chars] mCAC	During handling of an mCAC reservation sync request on the standby RP the corresponding mCAC limit configuration was not found. This is probably a result of a sequencing problem between synching of multicast configuration information and synching of dynamic state information. As a result the amount of bandwidth initially reserved for multicast state previously admitted by the current mCAC configuration may be incorrect following an RP failover. This may lead to some disruption of multicast traffic following an RP failover.	-	LOGS_IDSHTECH_ACTION
MCASTRED3MDT_RECV_DECAP	3-Error	Invalid operation type [node]specified for an MDT data receive decap message.	The sync operation type specified in a message to sync MDT data group receive decapsulation information was not a defined type for this message. The requested action can not be performed.	-	LOGS_IDSHTECH_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>MCASIR</del> MDRVCANCP	3-Error	Invalid operation type [node]specified for an MDT data receive decap message.	The sync operation type specified in a message to sync MDT data group receive decapsulation information was not a defined type for this message. The requested action can not be performed.	-	LOG_SIDSH_TECH_ACTION
<del>MCASIR</del> MDT_NOMDB	3-Error	Failed to find or create an MDB during MDT data send group [chars] sync for group [node]source [node]MVRF [chars]	The standby RP could not create the MDB required for building an MDT data group send entry. Interruption of MVPN data flow is possible if an RP failover occurs.	-	LOG_SIDSH_TECH_ACTION
<del>MCASIR</del> MDT_NOMDB	3-Error	Failed to find or create an MDB during MDT data send group [chars] sync for group [node]source [node]MVRF [chars]	The standby RP could not create the MDB required for building an MDT data group send entry. Interruption of MVPN data flow is possible if an RP failover occurs.	-	LOG_SIDSH_TECH_ACTION
<del>MCASIR</del> MDT_NOSDCRP	3-Error	Failed to create an MDT send group entry during MDT data send group sync for group [node]source [node]MVRF [chars]	The standby RP could not create the specified MDT data group send entry. Interruption of MVPN data flow is possible if an RP failover occurs.	-	LOG_SIDSH_TECH_ACTION
<del>MCASIR</del> MDT_NOSDCRP	3-Error	Failed to create an MDT send group entry during MDT data send group sync for group [node]source [node]MVRF [chars]	The standby RP could not create the specified MDT data group send entry. Interruption of MVPN data flow is possible if an RP failover occurs.	-	LOG_SIDSH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MSRMBUPKECAF</del>	3-Error	Invalid Address Family for PIM pending mrrib update check	Registry service invocation to check for pending PIM mrrib updates specified an invalid Address Family. The check can not be completed. Some pending updates may not be handled correctly resulting in delayed multicast re-convergence.	-	LOGSIDSHTCHACI0N
<del>MSRMBUPKECAF</del>	3-Error	Invalid Address Family for PIM pending mrrib update check	Registry service invocation to check for pending PIM mrrib updates specified an invalid Address Family. The check can not be completed. Some pending updates may not be handled correctly resulting in delayed multicast re-convergence.	-	LOGSIDSHTCHACI0N
<del>MSRMBUPNULABE</del>	3-Error	NULL table pointer specified for MRIB update notification.	A NULL table address was specified in a function call to notify the PIM HA process that all pending updates have been read for a given multicast routing table. The process will attempt to continue with RP switchover handling despite this error.	-	LOGSIDSHTCHACI0N

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MCASTRED3MSGHDL	3-Error	NULL table pointer specified for MRIB update notification.	A NULL table address was specified in a function call to notify the PIM HA process that all pending updates have been read for a given multicast routing table. The process will attempt to continue with RP switchover handling despite this error.	-	LOG_SIDSHTECH_ACTION
MCASTRED3MSGHDL	3-Error	Could not obtain sync handle for completed sync message type [node]%u	-	-	-
MCASTRED3MSGHDL	3-Error	Could not obtain sync handle for completed sync message type [node]%u	-	-	-
MCASTRED3MSGNREQ	3-Error	Could not find sync request for completed sync message type %u	The sync request corresponding to a completed sync message could not be determined. Memory leakage false timeouts and other subsequent errors may result.	-	LOG_SIDSHTECH_ACTION
MCASTRED3MSGNREQ	3-Error	Could not find sync request for completed sync message type %u	The sync request corresponding to a completed sync message could not be determined. Memory leakage false timeouts and other subsequent errors may result.	-	LOG_SIDSHTECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MCASIREDAVCSQNUM	3-Error	Out of order sequence number in received sync message for sync data type [node]received epoch/seq [node][node]expected [node]%u	The sequence number specified in a sync message received by the standby RP is not the expected sequence number for the next received sync message. Some sync messages may have been lost.	-	LOGSIDSHTTECHACION " Attempt standby RP synchronization by reloading " "the standby RP. "
MCASIREDAVCSQNUM	3-Error	Out of order sequence number in received sync message for sync data type [node]received epoch/seq [node][node]expected [node]%u	The sequence number specified in a sync message received by the standby RP is not the expected sequence number for the next received sync message. Some sync messages may have been lost.	-	LOGSIDSHTTECHACION " Attempt standby RP synchronization by reloading " "the standby RP. "
MCASIREDAVVRNAME	3-Error	MVRF lookup for VRF [chars] failed.	An MVRF lookup failed for a VRF name known to be associated with an existing MVRF table. This indicates incorrect setup of search parameters. A PIM data synch operation has been aborted.	-	LOGSIDSHTTECHACION
MCASIREDAVVRNAME	3-Error	MVRF lookup for VRF [chars] failed.	An MVRF lookup failed for a VRF name known to be associated with an existing MVRF table. This indicates incorrect setup of search parameters. A PIM data synch operation has been aborted.	-	LOGSIDSHTTECHACION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MCASIREDBMVF_TBLID	3-Error	MVRF lookup for tableid [node]failed.	An MVRF lookup failed for a table ID known to be associated with an existing MVRF table. This indicates incorrect setup of search parameters. A PIM data synch operation has been aborted.	-	LOG_SIDSH_TECH_ACTION
MCASIREDBMVF_TBLID	3-Error	MVRF lookup for tableid [node]failed.	An MVRF lookup failed for a table ID known to be associated with an existing MVRF table. This indicates incorrect setup of search parameters. A PIM data synch operation has been aborted.	-	LOG_SIDSH_TECH_ACTION
MCASIREDBNCOMCNV	3-Error	Invalid negotiation status for [chars] client message	ISSU infrastructure evaluation of a received message for this client failed to identify the message as a negotiation message or a user message. The message can not be processed.	-	LOG_SIDSH_TECH_ACTION
MCASIREDBNCOMCNV	3-Error	Invalid negotiation status for [chars] client message	ISSU infrastructure evaluation of a received message for this client failed to identify the message as a negotiation message or a user message. The message can not be processed.	-	LOG_SIDSH_TECH_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MCASIRLNDRCONCSYC	3-Error	The Service Reflect Rule is being synced before Config sync is done.	The Service Reflect Rule sync handled by Mcast HA requires Config sync to have already happened. Since the config sync has not yet happened we are ignoring the Service Reflect Rule sync.	-	LOGS_IDSHTECH_ACTION
MCASIRLNDRCONCSYC	3-Error	The Service Reflect Rule is being synced before Config sync is done.	The Service Reflect Rule sync handled by Mcast HA requires Config sync to have already happened. Since the config sync has not yet happened we are ignoring the Service Reflect Rule sync.	-	LOGS_IDSHTECH_ACTION
MCASIREDBNCSYNCARG	3-Error	NULL argument pointer specified for PIM data sync type [node]	A function was invoked to sync PIM information but the caller did not provide a valid data pointer. The sync operation for this database entity type can not proceed.	-	LOGS_IDSHTECH_ACTION
MCASIREDBNCSYNCARG	3-Error	NULL argument pointer specified for PIM data sync type [node]	A function was invoked to sync PIM information but the caller did not provide a valid data pointer. The sync operation for this database entity type can not proceed.	-	LOGS_IDSHTECH_ACTION
MCASIREDBNCSYNCARG	3-Error	Invalid [chars] address family PIM redundancy control block.	During initialization of PIM redundancy control blocks an invalid NULL value was provided for one of the address family	-	LOGS_IDSHTECH_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MCASIRED3NULLMREDCB	3-Error	Invalid [chars] address family PIM redundancy control block.	During initialization of PIM redundancy control blocks an invalid NULL value was provided for one of the address family	-	LOG_SIDSH_TECH_ACTION
MCASIRED3RMLLOOKUP	3-Error	PIM RP mapping range lookup for VRF [chars] range [chars]/[dec] failed.	A PIM RP mapping range lookup failed for a range that is known to exist. This indicates incorrect setup of search parameters. A PIM data synch operation has been aborted.	-	LOG_SIDSH_TECH_ACTION
MCASIRED3RMLLOOKUP	3-Error	PIM RP mapping range lookup for VRF [chars] range [chars]/[dec] failed.	A PIM RP mapping range lookup failed for a range that is known to exist. This indicates incorrect setup of search parameters. A PIM data synch operation has been aborted.	-	LOG_SIDSH_TECH_ACTION
MCASIRED3RCVNCDATA	3-Error	No data pointer returned for received checkpoint message	On reception of a checkpoint message at the standby RP an attempt to obtain the location of the data for the message returned a NULL pointer. No message contents are available for this message.	-	LOG_SIDSH_TECH_ACTION " Attempt standby RP synchronization by reloading " "the standby RP. "
MCASIRED3RCVNCDATA	3-Error	No data pointer returned for received checkpoint message	On reception of a checkpoint message at the standby RP an attempt to obtain the location of the data for the message returned a NULL pointer. No message contents are available for this message.	-	LOG_SIDSH_TECH_ACTION " Attempt standby RP synchronization by reloading " "the standby RP. "

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MCASIREDBRDF_NO_IDB	3-Error	No IDB for if_number [node] in Bidir RP DF sync attempt for RP address [node]	The IDB if_number specified in a function call to trigger synching of Bidir RP DF information does not map to any existing IDB. The sync operation can not proceed. The DF information may no longer be correct following an RP failover.	-	LOGS_IDSHTCH_ACTION
MCASIREDBRDF_NO_IDB	3-Error	No IDB for if_number [node] in Bidir RP DF sync attempt for RP address [node]	The IDB if_number specified in a function call to trigger synching of Bidir RP DF information does not map to any existing IDB. The sync operation can not proceed. The DF information may no longer be correct following an RP failover.	-	LOGS_IDSHTCH_ACTION
MCASIREDBRDF_NULL_IDB	3-Error	NULL IDB pointer in Bidir RP DF sync attempt for RP address [node]	A NULL IDB address was specified in a function call to trigger synching of Bidir RP DF information. The DF information may no longer be correct following an RP failover.	-	LOGS_IDSHTCH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MCASIRE3RDFNULLDB	3-Error	NULL IDB pointer in Bidir RP DF sync attempt for RP address [node]	A NULL IDB address was specified in a function call to trigger syncing of Bidir RP DF information. The DF information may no longer be correct following an RP failover.	-	LOGSIDSHTECHACTION
MCASIRE3RIRYLIMIT	3-Error	Retry limit reached for sync type %u	The maximum allowable number or transmission retries has failed for a database entity of this type. The retry can not be executed. The standby RP may no longer be synchronized with the active RP.	-	LOGSIDSHTECHACTION " Attempt standby RP synchronization by reloading " "the standby RP. "
MCASIRE3RIRYLIMIT	3-Error	Retry limit reached for sync type %u	The maximum allowable number or transmission retries has failed for a database entity of this type. The retry can not be executed. The standby RP may no longer be synchronized with the active RP.	-	LOGSIDSHTECHACTION " Attempt standby RP synchronization by reloading " "the standby RP. "
MCASIRE3RIRYNOREQ	3-Error	Sync retry requested with no sync request specified	Retry for transmission of a sync message was requested but no sync request information was specified. The retry can not be executed. The standby RP may no longer be synchronized with the active RP.	-	LOGSIDSHTECHACTION " Attempt standby RP synchronization by reloading " "the standby RP. "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MCASTRED3RIPNCREQ	3-Error	Sync retry requested with no sync request specified	Retry for transmission of a sync message was requested but no sync request information was specified. The retry can not be executed. The standby RP may no longer be synchronized with the active RP.	-	LOGSIDSHTECHACI " Attempt standby RP synchronization by reloading " "the standby RP. "
MCASTRED3SEARCHLOC	3-Error	Conflicting results for database search during a sync operation for sync type %u	The function invoked to search for a database entity of the specified type provided a search return code that is inconsistent with the information returned by the search. Information that should be available was not provided. The sync operation	-	LOGSIDSHTECHACI
MCASTRED3SEARCHLOC	3-Error	Conflicting results for database search during a sync operation for sync type %u	The function invoked to search for a database entity of the specified type provided a search return code that is inconsistent with the information returned by the search. Information that should be available was not provided. The sync operation	-	LOGSIDSHTECHACI
MCASTRED3SNDMSG	3-Error	Failed to send a sync message for sync type %u	An attempt to send a sync message has failed. The message transmission will be automatically retried.	-	LOGSIDSHTECHACI

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MCASTRED3SNDMSG	3-Error	Failed to send a sync message for sync type %u	An attempt to send a sync message has failed. The message transmission will be automatically retried.	-	LOG_SIDSH_TECH_ACTION
MCASTRED3SNDNCDATA	3-Error	No data pointer provided in checkpoint message to be sent.	After allocation of a checkpoint message buffer in the primary RP an attempt to obtain the location of the data for the message returned a NULL pointer. The message can not be sent. Loss of standby sync is likely.	-	LOG_SIDSH_TECH_ACTION
MCASTRED3SNDNCDATA	3-Error	No data pointer provided in checkpoint message to be sent.	After allocation of a checkpoint message buffer in the primary RP an attempt to obtain the location of the data for the message returned a NULL pointer. The message can not be sent. Loss of standby sync is likely.	-	LOG_SIDSH_TECH_ACTION
MCASTRED3SNDNCDATA	3-Error	Managed timer wakeup received by the PIM HA process with no expired timers.	The PIM HA process received a wakeup for managed timer expiration but the API to obtain the first expired timer returned a NULL pointer. The timer expiration can not be handled. Possible loss of state synchronization between the primary and standby RP may occur.	-	LOG_SIDSH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MCSRLPDMCDMBXP	3-Error	Managed timer wakeup received by the PIM HA process with no expired timers.	The PIM HA process received a wakeup for managed timer expiration but the API to obtain the first expired timer returned a NULL pointer. The timer expiration can not be handled. Possible loss of state synchronization between the primary and standby RP may occur.	-	LOG_SID_SH_TECH_ACTION
MCSRLSNCRQORFN	3-Error	Orphaned queue links found in sync request hash table search for sync type %u	An attempt to find a matching entry for a new sync request in the sync request hash table failed because of corruption of the linkage within the hash table. The sync operation can not proceed.	-	LOG_SID_SH_TECH_ACTION
MCSRLSNCRQORFN	3-Error	Orphaned queue links found in sync request hash table search for sync type %u	An attempt to find a matching entry for a new sync request in the sync request hash table failed because of corruption of the linkage within the hash table. The sync operation can not proceed.	-	LOG_SID_SH_TECH_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<b>MCASIRLSYNCLIRM</b>	3-Error	Missing parameters in sync message format or decode request for data type %u	For a function invoked to execute a sync update on the standby RP the caller failed to specify a valid pointer for holding the result of a search for the database information to be updated. The sync operation for this database entity type can not proceed.	-	LOG_SIDSH_TECH_ACTION
<b>MCASIRLSYNCLIRM</b>	3-Error	Missing parameters in sync message format or decode request for data type %u	For a function invoked to execute a sync update on the standby RP the caller failed to specify a valid pointer for holding the result of a search for the database information to be updated. The sync operation for this database entity type can not proceed.	-	LOG_SIDSH_TECH_ACTION
<b>MCASIRLBNALCPNE</b>	3-Error	Invalid capability type found in [chars] client capability entry.	The callback function responsible for creating an ISSU capability type TLV list encountered a capability type for which no handling is available. Capability negotiation can not proceed.	-	LOG_SIDSH_TECH_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MCSREDAENALCAPME	3-Error	Invalid capability type found in [chars] client capability entry.	The callback function responsible for creating an ISSU capability type TLV list encountered a capability type for which no handling is available. Capability negotiation can not proceed.	-	LOGSIDSHTTECHACIION
MCSIREDBIUNSYNCMG	3-Error	Received invalid termination message for mvrf[node]while	Confirmation has failed for standby RP reception of an MDT tunnel message. This message is needed to provide the standby RP with MDT tunnel sync information required for creation of the MDT tunnel on the standby RP.	-	LOGSIDSHTTECHACIION " Attempt standby RP synchronization by reloading " "the standby RP. "
MCSIREDBIUNSYNCMG	3-Error	Received invalid termination message for mvrf[node]while	Confirmation has failed for standby RP reception of an MDT tunnel message. This message is needed to provide the standby RP with MDT tunnel sync information required for creation of the MDT tunnel on the standby RP.	-	LOGSIDSHTTECHACIION " Attempt standby RP synchronization by reloading " "the standby RP. "
MCSIREDBIUNSYNCRV	3-Error	[chars] failure in reception of MDT tunnel sync information for mvrf [chars] on the standby RP.	Confirmation has failed for standby RP reception of an MDT tunnel message. This message is needed to provide the standby RP with MDT tunnel sync information required for creation of the MDT tunnel on the standby RP.	-	LOGSIDSHTTECHACIION " Attempt standby RP synchronization by reloading " "the standby RP. "

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MCASIREDBUNSYNCRV	3-Error	[chars] failure in reception of MDT tunnel sync information for mvrf [chars] on the standby RP.	Confirmation has failed for standby RP reception of an MDT tunnel message. This message is needed to provide the standby RP with MDT tunnel sync information required for creation of the MDT tunnel on the standby RP.	-	LOGS_IDSHTTECH_ACTION " Attempt standby RP synchronization by reloading " "the standby RP. "
MCASIREDBUNSYNCIME	3-Error	Timeout waiting for confirmation of mdt tunnel sync for mvrf[node][chars]	-	-	-
MCASIREDBUNSYNCIME	3-Error	Timeout waiting for confirmation of mdt tunnel sync for mvrf[node][chars]	-	-	-
MCASIREDBUNSYNCMI	3-Error	Failed to transmit sync MDT tunnel information for mvrf [chars] to the standby RP.	An IPC transmission attempt has failed to send an IPC message to provide the standby RP with MDT tunnel sync information required for creation of the MDT tunnel on the standby RP.	-	LOGS_IDSHTTECH_ACTION " Attempt standby RP synchronization by reloading " "the standby RP. "
MCASIREDBUNSYNCMI	3-Error	Failed to transmit sync MDT tunnel information for mvrf [chars] to the standby RP.	An IPC transmission attempt has failed to send an IPC message to provide the standby RP with MDT tunnel sync information required for creation of the MDT tunnel on the standby RP.	-	LOGS_IDSHTTECH_ACTION " Attempt standby RP synchronization by reloading " "the standby RP. "

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>MC</del> <del>SR</del> <del>UC</del> <del>ST</del> <del>CON</del> <del>SBY</del>	3-Error	Spurious unicast convergence notification received on standby RP for table [chars].	Unicast convergence notification was erroneously signalled on the standby RP for the specified multicast table or VRF. This convergence notification is being ignored.	-	LOGSIDSHTTECHACION
<del>MC</del> <del>SR</del> <del>UC</del> <del>ST</del> <del>CON</del> <del>SBY</del>	3-Error	Spurious unicast convergence notification received on standby RP for table [chars].	Unicast convergence notification was erroneously signalled on the standby RP for the specified multicast table or VRF. This convergence notification is being ignored.	-	LOGSIDSHTTECHACION
<del>MC</del> <del>SR</del> <del>UNK</del> <del>OWN</del> <del>CON</del> <del>AF</del>	3-Error	Failed to determine converged address family for topoid 0x[hec]	On reception of unicast convergence notification for a specified routing table the PIM HA process attempted to obtain the address family ID AFI for the converged table. This attempt received a	-	LOGSIDSHTTECHACION
<del>MC</del> <del>SR</del> <del>UNK</del> <del>OWN</del> <del>CON</del> <del>AF</del>	3-Error	Failed to determine converged address family for topoid 0x[hec]	On reception of unicast convergence notification for a specified routing table the PIM HA process attempted to obtain the address family ID AFI for the converged table. This attempt received a	-	LOGSIDSHTTECHACION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>MCSIRLWAIQRHAN</del>	3-Error	Orphaned queue links found in the [hec] MVRF wait queue.	An attempt to perform state transition handling for MVRFs in this queue failed because of queue corruption or because one or more queue link entries did not specify the address of the corresponding MVRF. Multicast route convergence following an RP failover may be delayed or impaired.	-	LOGSIDSHTTECHACION
<del>MCSIRLWAIQRHAN</del>	3-Error	Orphaned queue links found in the [hec] MVRF wait queue.	An attempt to perform state transition handling for MVRFs in this queue failed because of queue corruption or because one or more queue link entries did not specify the address of the corresponding MVRF. Multicast route convergence following an RP failover may be delayed or impaired.	-	LOGSIDSHTTECHACION
<del>MASNDUOCAMRMS</del>	3-Error	[chars] : Out of tcam space. Current Tcam Count is [dec]	Number of IPv4 mcast routes installed exceeded supported scale	firmware	"Please reduce the number of IPv4 mcast routes " "configured to supported scale"
<del>MASNDUOCAMRMS</del>	3-Error	[chars] : Out of tcam space. Current Tcam Count is [dec]	Number of IPv4 mcast routes installed exceeded supported scale	firmware	"Please reduce the number of IPv4 mcast routes " "configured to supported scale"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MCMV6UOFLAMPACS</del>	3-Error	Out of tcam space	Number of IPv4 mcast routes installed exceeded supported scale	firmware	"Please reduce the number of IPv4 mcast routes " "configured to supported scale"
<del>MCMV6UOFLAMPACS</del>	3-Error	[chars]: Out of tcam space. Current v6MC Count: [dec]	Number of IPv6 mcast routes installed exceeded supported scale	firmware	"Please reduce the number of IPv6 mcast routes " "configured to supported scale"
<del>MCMV6UOFLAMPACS</del>	3-Error	[chars]: Out of tcam space. Current v6MC Count: [dec]	Number of IPv6 mcast routes installed exceeded supported scale	firmware	"Please reduce the number of IPv6 mcast routes " "configured to supported scale"
<del>MCMV6UOFLAMPACS</del>	3-Error	Out of tcam space	Number of IPv6 mcast routes installed exceeded supported scale	firmware	"Please reduce the number of IPv6 mcast routes " "configured to supported scale"
<del>MCPSSASERRCNFLD</del>	0-Emergency	INVALID	Assertion failed:[chars]	"An internal state consistency check failed. Correct operation cannot be guaranteed	-
<del>MCRP_DAIERR_DISABLE</del>	4-Warning	DAI detected error on [chars] putting [chars] to err-disable	Dynamic ARP inspection has detected an error condition because ARP packets have exceeded the configured rate or burst	dai	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MCT1E1-2-CMD_DROP	2-Critical	[chars] cmd: [dec] arg0: [dec] arg1: [dec] arg2: [dec] arg3: [dec] vc: [dec] reason: [chars]	The SPA driver dropped a configuration command. One or more interfaces or controllers associated with the SPA may not be configured correctly.	-	"Please check the configuration of the interfaces and controllers " "and correct the configuration if necessary. If the condition persists " "copy the error message exactly as it appears and report it to your " "technical support representative. Please also supply a " "<CmdBold>show tech-support<NoCmdBold> at that time."
MCT1E1-2-EV_DROP	2-Critical	[chars] cmd: [dec] arg0: [dec] arg1: [dec] arg2: [dec] arg3: [dec] reason [chars]	The SPA driver dropped an event notification command. Counters or line protocols for one or more interfaces or controllers may be incorrect.	-	"Please restart any interfaces or controllers that are down. " "If the condition persists copy the error message exactly as " "it appears and report it to your technical support representative. " "Please also supply a <CmdBold>show tech-support<NoCmdBold> at that " "time."
MCT1E1-3-AUTODNR	3-Error	[chars] failed for slot [dec] bay [dec] err [dec]	AUTODNR/USNDNR process has failed. The SPA and SIP are out of synchronization. This condition indicates a software error.	spa-ser-te1	LOG_STD_ACTION
MCT1E1-3-BAD_SIZE_ERR	3-Error	[chars]: [dec] [chars] events on HDLC Controller were encountered. The SPA is being Restarted.	The SPA driver detected an error event on the HDLC controller.	-	CTE1_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MCTE13BATCH_CMD_INVALID	3-Error	[chars]: Invalid tag value [dec] at index [dec].	The SPA driver detected invalid tag value in a batch command.	spa-ser-te1	"The SPA driver has detected invalid command format from RP. " "If the ports on the SPA are not operating as expected power down and " "reset the indicated SPA card. " CTE1_STD_ACTION
MCTE13BERT_OPERATION_ERR	3-Error	[chars]: BERT operation error on interface [chars] - [chars].	The SPA reported failure during BERT operation. The current BERT operation will be terminated but the affected interface might not be operational if that is the case try to 'shutdown' and then 'no shutdown' the interface to recover from this failure.	spa-ser-te1	"If manual 'shutdown' and then 'no shutdown' of the interface does " "not restore the operation then SPA will need to be reloaded to " "recover from this failure state."
MCTE13BERT_STOP_ERR	3-Error	[chars]: Failed to stop BERT operation on interface [chars] - [chars].	The SPA failed to stop the BERT operation on the indicated interface. The interface might not be functional after this event if that is the case try to 'shutdown' and then 'no shutdown' the interface to recover from this failure.	spa-ser-te1	"If manual 'shutdown' and then 'no shutdown' of the interface does " "not restore the operation then SPA will need to be reloaded to " "recover from this failure state."
MCTE13CMD_FAILED	3-Error	[chars]: Failed to send command '[chars]' to SPA - [chars].	The SPA driver could not successfully send a cmd to firmware.	spa-ser-te1	"The SPA driver has detected a command failure. " "If the ports on the SPA are not operating as expected power down and " "reset the indicated SPA card. " CTE1_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MC1E13COR_MEM_ERR	3-Error	[chars]: [dec] correctable [chars] memory errors encountered.	The SPA driver detected a correctable memory error on the SPA card.	-	"The SPA has encountered a correctable memory error on the SPA card. " "The error has been corrected and normal processing should continue. " "The hexadecimal memory address of the most recent error is specified " "in the message text on the console or in the system log. " CTE1_STD_ACTION
MC1E13FGA_CNIR_ERR	3-Error	[chars]: [dec] [chars] errors encountered.	-	-	-
MC1E13FRMR_CLKFAIL	3-Error	[chars]: Framer input clock failure detected CTCLK = [chars]CTIVE LREFCLK = [chars]CTIVE SREFCLK = [chars]CTIVE ctelk count [node]lrefclk count [node]srefclk count %u	The SPA driver detected failure of one or more input clocks to the framer chip. The T1/E1 Ports may not operate as expected.	-	"The SPA driver has detected input clock failures on the framer chip. " "If the ports on the SPA are not operating as expected power down and " "reset the indicated SPA card. " CTE1_STD_ACTION
MC1E13HDLC_CIRL_ERR	3-Error	[chars]: [dec] [chars] events on HDLC Controller were encountered.	The SPA driver detected an error event on the HDLC Controller.	-	"The SPA driver has encountered an error event on the SPA card. " CTE1_STD_ACTION
MCT1E1-3-INITFAIL	3-Error	MCT1E1 bay [dec] Init Failed at [chars] - line [dec] arg [hec]	The SPA failed to complete hardware initialization.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MCTELOOP_UNSUPPORTED	3-Error	[chars]: [chars] on port [dec]/[dec]/[dec] and it is not supported on SPA.	The SPA driver received 'loopback payload' request from the remote device on the SPA card. SPA does not support loopback payload.	-	"The SPA driver has received 'loopback payload' request from the remote " "device on the SPA card. SPA does not support loopback payload. " "The remote request is ignored. Please unconfigure the command on the " "remote device. "
MCTELOOPBACK_CONFIG_ERR	3-Error	[chars]: Loop [chars] configuration error on controller [chars] - [chars][chars].	The SPA reported failure during setting of loop up/down operation. The current loopback will be terminated but the affected controller might not be operational if that is the case try to 'shutdown' and then 'no shutdown' the controller to recover from this failure.	spa-ser-te1	"If manual 'shutdown' and then 'no shutdown' of the controller does " "not restore the operation then SPA will need to be reloaded to " "recover from this failure state."
MCTEERRPROC_PROCESS	3-Error	[chars]: periodic process error [chars].	The SPA driver detected an error with periodic processing routine.	spa-ser-te1	"The SPA driver has detected problem with periodic routine. " "If the ports on the SPA are not operating as expected power down and " "reset the indicated SPA card. " CTE1_STD_ACTION
MCTEERRQUEUE_FATAL	3-Error	[chars]: Could not suspend message [dec] or command [dec] queue	-	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MCTIE13-SPA_HW_ERR	3-Error	[chars]: [chars] Hardware error was encountered.	The SPA driver detected a Hardware error condition on the SPA card. This might result in improper operation.	-	"The SPA driver has encountered a Hardware error on the SPA's SPI4 bus." "Please power down and reseal the indicated SPA card." " CTE1_STD_ACTION
MCTIE13-TIMEOUT	3-Error	[chars]: [chars] failed: [dec] state: [dec] ml_id: [dec] progress: [dec]	Linkrec is stuck at non ready. This condition indicates a software error.	spa-ser-te1	LOG_STD_ACTION
MCTIE3-UNCORMEMERR	3-Error	[chars]: [dec] uncorrectable [chars] memory errors encountered.	The SPA driver detected an uncorrectable memory error condition on the SPA card. Packet corruption may result.	-	"The SPA driver has encountered an uncorrectable memory error on the SPA " "card. The hexadecimal memory address of the most recent error is " "specified in the message text on the console or in the system log. " "Please power down and reseal the indicated SPA card. " CTE1_STD_ACTION
MCTIE3-UNCORPARITYERR	3-Error	[chars]: [dec] [chars] parity errors encountered.	The SPA driver detected an uncorrectable parity error condition on the SPA card. Packet corruption may result.	-	"Please power down and reseal the indicated SPA card." " CTE1_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MDNS_HA_ISSU3BUFFER	3-Error	mDNS HA ISSU client failed to get buffer for message error [dec]	mDNS HA ISSU client failed to get buffer for building\n a negotiation message. Hence it can send the negotiation\n message to the standby unit. When there is a problem in\n the negotiaiton the standby unit can not be brought up.	dns	"show logging and show checkpoint client"
MDNS_HA_ISSU3BUFFER	3-Error	mDNS HA ISSU client failed to get buffer for message error [dec]	mDNS HA ISSU client failed to get buffer for building\n a negotiation message. Hence it can send the negotiation\n message to the standby unit. When there is a problem in\n the negotiaiton the standby unit can not be brought up.	dns	"show logging and show checkpoint client"
MDNS_HA_ISSU_CAPNADSE	3-Error	mDNS HA ISSU client capability list is empty.	The BG3K OIR ISSU client capability exchange list size\n is invalid.	dns	"show issu capability entries <Client_ID>"
MDNS_HA_ISSU_CAPNADSE	3-Error	mDNS HA ISSU client capability list is empty.	The BG3K OIR ISSU client capability exchange list size\n is invalid.	dns	"show issu capability entries <Client_ID>"
MDNS_HA_ISSU_CAPNADSE	3-Error	mDNS HA ISSU client capability exchange result incompatible.	The mDNS HA ISSU client capability exchange has negotiated\n as incompatible with the peer.	dns	"show issu negotiated capability <Session_ID>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MNSHA_ISSU_COMPAT	3-Error	mDNS HA ISSU client capability exchange result incompatible.	The mDNS HA ISSU client capability exchange has negotiated\n\ as incompatible with the peer.	dns	"show issu negotiated capability <Session_ID>"
MNSHA_ISSU_CAPABILITY	3-Error	mDNS HA ISSU client [chars]	mDNS HA ISSU client observed an error during capability\n\ negotiation. When this error happens there is a mismatch\n\ between the client capability between the active and\n\ standby unit.	dns	"show issu capability entries <client_id> and\n\ show issu session <client_id> and\n\ show issu negotiated capability <session_id>"
MNSHA_ISSU_CAPABILITY	3-Error	mDNS HA ISSU client [chars]	mDNS HA ISSU client observed an error during capability\n\ negotiation. When this error happens there is a mismatch\n\ between the client capability between the active and\n\ standby unit.	dns	"show issu capability entries <client_id> and\n\ show issu session <client_id> and\n\ show issu negotiated capability <session_id>"
MDNS_HA_ISSU-3-INT	3-Error	mDNS HA ISSU client initialization failed at [chars] error [chars]	mDNS HA ISSU client could not be initialized this will\n\ cause catastrophic failure when ISSU upgrade or downgrade\n\ is performed.	dns	LOG_SIDSHTTECH_ACTION
MDNS_HA_ISSU-3-INT	3-Error	mDNS HA ISSU client initialization failed at [chars] error [chars]	mDNS HA ISSU client could not be initialized this will\n\ cause catastrophic failure when ISSU upgrade or downgrade\n\ is performed.	dns	LOG_SIDSHTTECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MDNS_HA_ISSU3MSGNOTCK	3-Error	mDNS HA ISSU client message [dec] is not compatible	mDNS HA ISSU client received an incompatible message from the peer unit. Since the message is not compatible it can be processed by this unit	dns	"show issu message group <client_id> and show issu session <client_id> and show issu negotiated version <session_id>"
MDNS_HA_ISSU3MSGNOTCK	3-Error	mDNS HA ISSU client message [dec] is not compatible	mDNS HA ISSU client received an incompatible message from the peer unit. Since the message is not compatible it can be processed by this unit	dns	"show issu message group <client_id> and show issu session <client_id> and show issu negotiated version <session_id>"
MDNS_HA_ISSU3MSG_SIZE	3-Error	mDNS HA ISSU client failed to get the message size for message [dec]	mDNS HA ISSU client failed to calculate message size for the message specified. The mDNS HA ISSU client will not be able to send message to the standby unit.	dns	"show issu message group <client_id> and show issu session <client_id> and show issu negotiated version <session_id>"
MDNS_HA_ISSU3MSG_SIZE	3-Error	mDNS HA ISSU client failed to get the message size for message [dec]	mDNS HA ISSU client failed to calculate message size for the message specified. The mDNS HA ISSU client will not be able to send message to the standby unit.	dns	"show issu message group <client_id> and show issu session <client_id> and show issu negotiated version <session_id>"
MDNS_HA_ISSU3POLICY	3-Error	mDNS HA ISSU client message type [dec] is [chars]	mDNS HA ISSU client received an message type which it does not support. The policy is applied to make the session compatible.	dns	"show issu session <client_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MDNS_HA_ISSU3POLICY	3-Error	mDNS HA ISSU client message type [dec] is [chars]	mDNS HA ISSU client received an message type which it\n\ does not support. The policy is applied to make the session\n\ compatible.	dns	"show issu session <client_id>"
MDNS_HA_ISSU3SENDFAILED	3-Error	mDNS HA ISSU client failed to send a negotiation message error [dec]	mDNS HA ISSU client could not send a session negotiation\n\ message to the peer. When there is a problem in the\n\ negotiation the standby unit can not be brought up.	dns	"show logging and show checkpoint client"
MDNS_HA_ISSU3SENDFAILED	3-Error	mDNS HA ISSU client failed to send a negotiation message error [dec]	mDNS HA ISSU client could not send a session negotiation\n\ message to the peer. When there is a problem in the\n\ negotiation the standby unit can not be brought up.	dns	"show logging and show checkpoint client"
MDNS_HA_ISSU3SESSION	3-Error	mDNS HA ISSU client [chars]	mDNS HA ISSU client observed an error during a session\n\ negotiation with the peer unit. When there is a problem\n\ with the session the standby unit can not be brought up.	dns	"show issu capability entries <client_id> and\n\ show issu session <client_id> and\n\ show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MDNS_HA_ISSU_SESSION	3-Error	mDNS HA ISSU client [chars]	mDNS HA ISSU client observed an error during a session\n\n negotiation with the peer unit. When there is a problem\n\n with the session the standby unit can not be brought up.	dns	"show issu capability entries <client_id> and\n\n show issu session <client_id> and\n\n show issu negotiated capability <session_id>"
MDNS_HA_ISSU_UNREG	3-Error	mDNS HA ISSU client failed to unregister session information. Error: [dec] [chars]	The mDNS HA ISSU client failed to unregister session information.	dns	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
MDNS_HA_ISSU_UNREG	3-Error	mDNS HA ISSU client failed to unregister session information. Error: [dec] [chars]	The mDNS HA ISSU client failed to unregister session information.	dns	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
MDNS_HA_ISSU_TRANSFORM	3-Error	mDNS HA ISSU client [chars] transform failed error [chars]	mDNS HA ISSU client could not transform the message.\n\n If the transmit transformation failed it means that the\n\n checkpoint message can not be sent to the standby unit.\n\n If the receive transformation failed it means that the\n\n checkpoint message can not be applied on the standby\n\n unit. In both cases the mDNS HA state will not\n\n be identical with the active unit.	dns	"show issu session <client_id> and\n\n show issu negotiated version <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MNSHAISSUBTRANSFORM	3-Error	mDNS HA ISSU client [chars] transform failed error [chars]	mDNS HA ISSU client could not transform the message.\n If the transmit transformation failed it means that the\n checkpoint message can not be sent to the standby unit.\n If the receive transformation failed it means that the\n checkpoint message can not be applied on the standby\n unit. In both cases the mDNS HA state will not\n be indential with the active unit.	dns	"show issu session <client_id> and\n show issu negotiated version <session_id>"
MNSROXY3APIALMNS	3-Error	[chars] API failed	An error occurred while calling the APIs.	mDNS	LOG_STD_ACTION
MNSROXY3APIALMNS	3-Error	[chars] API failed	An error occurred while calling the APIs.	mDNS	LOG_STD_ACTION
MNSROXY3APIALMNS	3-Error	[chars] API failed	An error occurred while calling the APIs.	mDNS	LOG_STD_ACTION
MNSROXY3APIALMNS	3-Error	[chars] API failed	An error occurred while calling the APIs.	mDNS	LOG_STD_ACTION
MNSROX3HUNKMEMOAL	3-Error	Chunk memory allocation failed	Chunk memory allocation failed for Cache element	mDNS	LOG_STD_ACTION
MNSROX3HUNKMEMOAL	3-Error	Chunk memory allocation failed	Chunk memory allocation failed for Cache element	mDNS	LOG_STD_ACTION
MNSROX3HUNKMEMOAL	3-Error	Chunk memory allocation failed	Chunk memory allocation failed for Cache element	mDNS	LOG_STD_ACTION



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>MDSRXX</del> CHUNKMEMOVL	3-Error	Chunk memory allocation failed	Chunk memory allocation failed for Cache element	mDNS	LOG_STD_ACTION
<del>MDSRXX</del> INITMNSIAL	3-Error	[chars] Initialisation failure.	An internal error occurred during mDNS initialisation.	mDNS	LOG_STD_ACTION
<del>MDSRXX</del> INITMNSIAL	3-Error	[chars] Initialisation failure.	An internal error occurred during mDNS initialisation.	mDNS	LOG_STD_ACTION
<del>MDSRXX</del> NULLCONEXIDMDS	3-Error	Encountered a NULL context for the ID %u	NULL context for the ID passed in id_to_ptr.	mDNS	LOG_STD_ACTION
<del>MDSRXX</del> NULLCONEXIDMDS	3-Error	Encountered a NULL context for the ID %u	NULL context for the ID passed in id_to_ptr.	mDNS	LOG_STD_ACTION
<del>MDSRXX</del> NULLCONEXIDMDS	3-Error	Encountered a NULL context for the ID %u	NULL context for the ID passed in id_to_ptr.	mDNS	LOG_STD_ACTION
<del>MDSRXX</del> NULLCONEXIDMDS	3-Error	Encountered a NULL context for the ID %u	NULL context for the ID passed in id_to_ptr.	mDNS	LOG_STD_ACTION
<del>MDSRXX</del> IOSAPI[MNS]	3-Error	IOS API [chars] failed	Encountered an error while calling the API.	mDNS	LOG_STD_ACTION
<del>MDSRXX</del> IOSAPI[MNS]	3-Error	IOS API [chars] failed	Encountered an error while calling the API.	mDNS	LOG_STD_ACTION
<del>MDSRXX</del> IOSAPI[MNS]	3-Error	IOS API [chars] failed	Encountered an error while calling the API.	mDNS	LOG_STD_ACTION
<del>MDSRXX</del> IOSAPI[MNS]	3-Error	IOS API [chars] failed	Encountered an error while calling the API.	mDNS	LOG_STD_ACTION
<del>MDSRXX</del> UDPRESERVEDMDS	3-Error	[chars] Initialisation failure.	UDP Port 5353 Already reserved. Please disable the feature which uses 5353 and And Try Again.	mDNS	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>MDSPOX3P3HSRE</del> MDS	3-Error	[chars] Initialisation failure.	UDP Port 5353 Already reserved. Please disable the feature which uses 5353 and And Try Again.	mDNS	LOG_STD_ACTION
<del>MDSPOX3P3HSRE</del> MDS	3-Error	[chars] Initialisation failure.	UDP Port 5353 Already reserved. Please disable the feature which uses 5353 and And Try Again.	mDNS	LOG_STD_ACTION
<del>MDSPOX3P3HSRE</del> MDS	3-Error	[chars] Initialisation failure.	UDP Port 5353 Already reserved. Please disable the feature which uses 5353 and And Try Again.	mDNS	LOG_STD_ACTION
<del>MDSPOX3P3HSRE</del> MDS	3-Error	[chars] Initialisation failure.	UDP Port 5353 Already reserved. Please disable the feature which uses 5353 and And Try Again.	mDNS	LOG_STD_ACTION
<del>MDSPOX3P3HSRE</del> MDS	3-Error	SDG agent connectivity to DNAC upstream controller [chars] is [chars]	This message gives the connection state change between SDG agent and DNAC	mDNS	LOG_STD_ACTION
<del>MDSPOX3P3HSRE</del> MDS	3-Error	SDG agent connectivity to DNAC upstream controller [chars] is [chars]	This message gives the connection state change between SDG agent and DNAC	mDNS	LOG_STD_ACTION
<del>MDSPOX3P3HSRE</del> MDS	3-Error	SDG agent lost connectivity to Service-Peer:[chars]/[dec]	SDG agent lost connectivity to Service-Peer. Please fix the connectivity issue between Service-Peer and SDG agent.	mDNS	LOG_STD_ACTION
<del>MDSPOX3P3HSRE</del> MDS	3-Error	SDG agent lost connectivity to Service-Peer:[chars]/[dec]	SDG agent lost connectivity to Service-Peer. Please fix the connectivity issue between Service-Peer and SDG agent.	mDNS	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MDSPOXERRCONMDS	3-Error	Service-Peer lost connectivity to SDG agent.	Service-Peer lost connectivity to SDG agent. Please fix the connectivity issue between Service-Peer and SDG agent.	mDNS	LOG_STD_ACTION
MDSPOXERRCONMDS	3-Error	Service-Peer lost connectivity to SDG agent.	Service-Peer lost connectivity to SDG agent. Please fix the connectivity issue between Service-Peer and SDG agent.	mDNS	LOG_STD_ACTION
MDSPOXERRSVCHEMDS	3-Error	Static Service: [chars]	Encountered an error while processing Static Service.	mDNS	LOG_STD_ACTION
MDSPOXERRSVCHEMDS	3-Error	Static Service: [chars]	Encountered an error while processing Static Service.	mDNS	LOG_STD_ACTION
MDSPOXWARNUNDESMDG	4-Warning	mDNS gateway: [chars]	mDNS gateway under SVI is not optimal as it floods the network move to mDNS gateway configuration under VLAN config	mDNS	LOG_STD_ACTION
MDSPOXWARNUNDESMDG	4-Warning	mDNS gateway: [chars]	mDNS gateway under SVI is not optimal as it floods the network move to mDNS gateway configuration under VLAN config	mDNS	LOG_STD_ACTION
MDSPOXWARNUNDESMDG	4-Warning	mDNS gateway: [chars]	service routing CLI will be deprecated soon. Plan to move to mDNS-sd gateway CLI globally and under vlan configuration	mDNS	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MDR_SM_LC3-ABORT	3-Error	MDR state machine is aborted due to '[chars]'	MDR state machine is aborted due to an unrecoverable error. Any MDR operation will likely result in the resetting of this line card	mdr-sm	MDR_SM_LOG_SID_ACTION
MDR_SM_LC3-DSMATCH	3-Error	Client ID mismatch during progression on client: [dec] expecting [dec]	DSMATCH_EXPLANATION	mdr-sm	MDR_SM_LOG_SID_ACTION
MDR_SM_LC3-DSMATCH	3-Error	Client ID mismatch during progression on client: [dec] expecting [dec]	DSMATCH_EXPLANATION	mdr-sm	MDR_SM_LOG_SID_ACTION
MDR_SM_LC3-DSMATCH	3-Error	Client ID mismatch during progression on client: [dec] expecting [dec]	DSMATCH_EXPLANATION	mdr-sm	MDR_SM_LOG_SID_ACTION
MDR_SM_LC3-INIT_FAIL	3-Error	Initialisation error '[chars]'	During MDR SM initialisation an error has occurred that has rendered the MDR SM inoperable. an MDR operation will likely result in the resetting of this line card	mdr-sm	MDR_SM_LOG_SID_ACTION
MDR_SM_LC3-INIT_FAIL	3-Error	Initialisation error '[chars]'	During MDR SM initialisation an error has occurred that has rendered the MDR SM inoperable. an MDR operation will likely result in the resetting of this line card	mdr-sm	MDR_SM_LOG_SID_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MDR_SM_LC3INIT_FAIL	3-Error	Initialisation error '[chars]'	During MDR SM initialisation an error has occurred that has rendered the MDR SM inoperable. an MDR operation will likely result in the resetting of this line card	mdr-sm	MDRSMLOGSIDACTION
MDRSMIC3NAIDEMENT	3-Error	MDR SM LC received an unexpected event [chars] in state [chars]	NAIDEMENTEXPLANION	mdr-sm	MDRSMLOGSIDACTION
MDRSMIC3NAIDEMENT	3-Error	MDR SM LC received an unexpected event [chars] in state [chars]	NAIDEMENTEXPLANION	mdr-sm	MDRSMLOGSIDACTION
MDRSMIC3NAIDEMENT	3-Error	MDR SM LC received an unexpected event [chars] in state [chars]	NAIDEMENTEXPLANION	mdr-sm	MDRSMLOGSIDACTION
MDRSMIC3REVENQUEUE	3-Error	The event queue is full for MDR SM MDR SM will abort	NOREVENQUEUEEXPLANION	mdr-sm	MDRSMLOGSIDACTION
MDRSMIC3REVENQUEUE	3-Error	The event queue is full for MDR SM MDR SM will abort	NOREVENQUEUEEXPLANION	mdr-sm	MDRSMLOGSIDACTION
MDRSMIC3REVENQUEUE	3-Error	The event queue is full for MDR SM MDR SM will abort	NOREVENQUEUEEXPLANION	mdr-sm	MDRSMLOGSIDACTION
MDRSMIC3NOIFY_TMOUT	3-Error	Notification timeout for client [chars][dec] in state [chars]	During MDR SM state transition the notification timer expired for the client. Any MDR operation will likely result in the resetting of this line card	mdr-sm	MDRSMLOGSIDACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MDRSMIGNOIFYTMOUT	3-Error	Notification timeout for client [chars][dec] in state [chars]	During MDR SM state transition the notification timer expired for the client. Any MDR operation will likely result in the resetting of this line card	mdr-sm	MDRSMILOGSIDACTION
MDRSMIGNOIFYTMOUT	3-Error	Notification timeout for client [chars][dec] in state [chars]	During MDR SM state transition the notification timer expired for the client. Any MDR operation will likely result in the resetting of this line card	mdr-sm	MDRSMILOGSIDACTION
MDR_SM_IC3SEMWAIT	3-Error	MDR state machine waiting for semaphore[chars] acquired by pid[dec]	SEMWAIT_EXPLANATION	mdr-sm	MDRSMILOGSIDACTION
MDR_SM_IC3SEMWAIT	3-Error	MDR state machine waiting for semaphore[chars] acquired by pid[dec]	SEMWAIT_EXPLANATION	mdr-sm	MDRSMILOGSIDACTION
MDR_SM_IC3SEMWAIT	3-Error	MDR state machine waiting for semaphore[chars] acquired by pid[dec]	SEMWAIT_EXPLANATION	mdr-sm	MDRSMILOGSIDACTION
MDRSMIGSTATUSNAID	3-Error	Client [chars] [dec] returned an unexpected status code [dec]	STATUSNAIDEXPLANATION	mdr-sm	MDRSMILOGSIDACTION
MDRSMIGSTATUSNAID	3-Error	Client [chars] [dec] returned an unexpected status code [dec]	STATUSNAIDEXPLANATION	mdr-sm	MDRSMILOGSIDACTION
MDRSMIGSTATUSNAID	3-Error	Client [chars] [dec] returned an unexpected status code [dec]	STATUSNAIDEXPLANATION	mdr-sm	MDRSMILOGSIDACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MDSM@ABKTCMCFME</del>	4-Warning	MDR SM LC client [chars] [dec] spent too much time [dec] msec in \	<del>ABKTCMCFMEPAN</del>	mdr-sm	<del>MDSMLOGSIDACION</del>
<del>MDSM@ABKTCMCFME</del>	4-Warning	MDR SM LC client [chars] [dec] spent too much time [dec] msec in \	<del>ABKTCMCFMEPAN</del>	mdr-sm	<del>MDSMLOGSIDACION</del>
<del>MDSM@ABKTCMCFME</del>	4-Warning	MDR SM LC client [chars] [dec] spent too much time [dec] msec in \	<del>ABKTCMCFMEPAN</del>	mdr-sm	<del>MDSMLOGSIDACION</del>
<del>MDSM@PROXYMOUT</del>	3-Error	Notification timeout on MDR [chars] state machine for the remote client '[chars]'	MDR SM Proxy master is unable to communicate with its slave. It did not get any answer to the notification on the slave. An error has occurred that has rendered the MDR SM inoperable. An MDR operation will likely result in the resetting of all Line Cards.	mdr-sm	LOG_STD_ACTION
<del>MDSM@PROXYMOUT</del>	3-Error	Notification timeout on MDR [chars] state machine for the remote client '[chars]'	MDR SM Proxy master is unable to communicate with its slave. It did not get any answer to the notification on the slave. An error has occurred that has rendered the MDR SM inoperable. An MDR operation will likely result in the resetting of all Line Cards.	mdr-sm	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MDRSMRXY3CIFYMOUT	3-Error	Notification timeout on MDR [chars] state machine for the remote client '[chars]'	MDR SM Proxy master is unable to communicate with its slave. It did not get any answer to the notification on the slave. An error has occurred that has rendered the MDR SM inoperable. An MDR operation will likely result in the resetting of all Line Cards.	mdr-sm	LOG_STD_ACTION
MDRSMRXY3CIFYMOUT	4-Warning	MDR SM Slot [dec] client [dec] spent too much time [dec] msec in \	MDR SM Slot [dec] client [dec] spent too much time [dec] msec in \	mdr-sm	MDRSMLOGSIDACTION
MDRSMRXY3CIFYMOUT	4-Warning	MDR SM Slot [dec] client [dec] spent too much time [dec] msec in \	MDR SM Slot [dec] client [dec] spent too much time [dec] msec in \	mdr-sm	MDRSMLOGSIDACTION
MDRSMRXY3CIFYMOUT	4-Warning	MDR SM Slot [dec] client [dec] spent too much time [dec] msec in \	MDR SM Slot [dec] client [dec] spent too much time [dec] msec in \	mdr-sm	MDRSMLOGSIDACTION
MDRSMRXY3CIFYMOUT	4-Warning	MDR SM SYS client [dec] spent too much time [dec] msec in \	MDR SM SYS client [dec] spent too much time [dec] msec in \	mdr-sm	MDRSMLOGSIDACTION
MDRSMRXY3CIFYMOUT	4-Warning	MDR SM SYS client [dec] spent too much time [dec] msec in \	MDR SM SYS client [dec] spent too much time [dec] msec in \	mdr-sm	MDRSMLOGSIDACTION
MDRSMRXY3CIFYMOUT	4-Warning	MDR SM SYS client [dec] spent too much time [dec] msec in \	MDR SM SYS client [dec] spent too much time [dec] msec in \	mdr-sm	MDRSMLOGSIDACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MDR_SM-3-INIT_FAIL	3-Error	Initialisation error '[chars]'	During MDR SM initialisation an error has occurred that has rendered the MDR SM inoperable. an MDR operation will likely result in the resetting of all Line Cards.	mdr-sm	MRS_MLOG_SID_ACI
MDR_SM-3-INIT_FAIL	3-Error	Initialisation error '[chars]'	During MDR SM initialisation an error has occurred that has rendered the MDR SM inoperable. an MDR operation will likely result in the resetting of all Line Cards.	mdr-sm	MRS_MLOG_SID_ACI
MDR_SM-3-INIT_FAIL	3-Error	Initialisation error '[chars]'	During MDR SM initialisation an error has occurred that has rendered the MDR SM inoperable. an MDR operation will likely result in the resetting of all Line Cards.	mdr-sm	MRS_MLOG_SID_ACI
MRS_MLOG_SID_ACI	3-Error	Can not find the data associated to client ID [dec] for slot [dec]	CLIENT_ID_EXPLANATION	mdr-sm	MRS_MLOG_SID_ACI
MRS_MLOG_SID_ACI	3-Error	Can not find the data associated to client ID [dec] for slot [dec]	CLIENT_ID_EXPLANATION	mdr-sm	MRS_MLOG_SID_ACI
MRS_MLOG_SID_ACI	3-Error	Can not find the data associated to client ID [dec] for slot [dec]	CLIENT_ID_EXPLANATION	mdr-sm	MRS_MLOG_SID_ACI
MRS_MLOG_SID_ACI	3-Error	Client [dec] returned an invalid status code on slot [dec]	CLIENT_ID_EXPLANATION	mdr-sm	MRS_MLOG_SID_ACI

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>MDRSMCICNINENAD</del>	3-Error	Client [dec] returned an invalid status code on slot [dec]	<del>CNINENADEXPLANIN</del>	mdr-sm	<del>MDRSMLOGSIDACION</del>
<del>MDRSMCICNINENAD</del>	3-Error	Client [dec] returned an invalid status code on slot [dec]	<del>CNINENADEXPLANIN</del>	mdr-sm	<del>MDRSMLOGSIDACION</del>
<del>MDRSMCICBENTIMOUT</del>	3-Error	MDR slot state machine [dec] did not receive the SLOT_UP event from the linecard	Slot MDR SM did not get an expected event form the linecard. This error has rendered this slot MDR SM inoperable	mdr-sm	<del>MDRSMLOGSIDACION</del>
<del>MDRSMCICBENTIMOUT</del>	3-Error	MDR slot state machine [dec] did not receive the SLOT_UP event from the linecard	Slot MDR SM did not get an expected event form the linecard. This error has rendered this slot MDR SM inoperable	mdr-sm	<del>MDRSMLOGSIDACION</del>
<del>MDRSMCICBENTIMOUT</del>	3-Error	MDR slot state machine [dec] did not receive the SLOT_UP event from the linecard	Slot MDR SM did not get an expected event form the linecard. This error has rendered this slot MDR SM inoperable	mdr-sm	<del>MDRSMLOGSIDACION</del>
<del>MDRSMCICIDMVMACH</del>	3-Error	Client ID mismatch for slot [dec] during progression [chars] on client: [dec] expecting [dec]	<del>IDMVMACHEXPLANIN</del>	mdr-sm	<del>MDRSMLOGSIDACION</del>
<del>MDRSMCICIDMVMACH</del>	3-Error	Client ID mismatch for slot [dec] during progression [chars] on client: [dec] expecting [dec]	<del>IDMVMACHEXPLANIN</del>	mdr-sm	<del>MDRSMLOGSIDACION</del>
<del>MDRSMCICIDMVMACH</del>	3-Error	Client ID mismatch for slot [dec] during progression [chars] on client: [dec] expecting [dec]	<del>IDMVMACHEXPLANIN</del>	mdr-sm	<del>MDRSMLOGSIDACION</del>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MRSMDR_SLOTNAID_ARG	3-Error	Process is unable to get his slot number	MDR State Machine creates one process per slot \ supporting MDR. In that case the process is \ unable to get his slot.	mdr-sm	MDRSMLOGSIDACTION
MRSMDR_SLOTNAID_ARG	3-Error	Process is unable to get his slot number	MDR State Machine creates one process per slot \ supporting MDR. In that case the process is \ unable to get his slot.	mdr-sm	MDRSMLOGSIDACTION
MRSMDR_SLOTNAID_ARG	3-Error	Process is unable to get his slot number	MDR State Machine creates one process per slot \ supporting MDR. In that case the process is \ unable to get his slot.	mdr-sm	MDRSMLOGSIDACTION
MRSMDR_SLOTNAID_EVENT	3-Error	Slot [dec] received an unexpected event [chars] in state [chars]	NAID_EVENT_EXPLANATION	mdr-sm	MDRSMLOGSIDACTION
MRSMDR_SLOTNAID_EVENT	3-Error	Slot [dec] received an unexpected event [chars] in state [chars]	NAID_EVENT_EXPLANATION	mdr-sm	MDRSMLOGSIDACTION
MRSMDR_SLOTNAID_EVENT	3-Error	Slot [dec] received an unexpected event [chars] in state [chars]	NAID_EVENT_EXPLANATION	mdr-sm	MDRSMLOGSIDACTION
MRSMDR_SLOTNAID_EVENT_QUEUE	3-Error	The event queue is full for MDR Slot SM [dec] MDR Slot SM [dec] will abort	NAID_EVENT_QUEUE_EXPLANATION	mdr-sm	MDRSMLOGSIDACTION
MRSMDR_SLOTNAID_EVENT_QUEUE	3-Error	The event queue is full for MDR Slot SM [dec] MDR Slot SM [dec] will abort	NAID_EVENT_QUEUE_EXPLANATION	mdr-sm	MDRSMLOGSIDACTION
MRSMDR_SLOTNAID_EVENT_QUEUE	3-Error	The event queue is full for MDR Slot SM [dec] MDR Slot SM [dec] will abort	NAID_EVENT_QUEUE_EXPLANATION	mdr-sm	MDRSMLOGSIDACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MDSM#ICNCFSNB#AE</del>	3-Error	Failed to notify Standby for MDR slot state machine [dec]	<del>NOFSNDB#AE#EXPLAN</del>	mdr-sm	MDRSMLOGSIDACTION
<del>MDSM#ICNCFSNB#AE</del>	3-Error	Failed to notify Standby for MDR slot state machine [dec]	<del>NOFSNDB#AE#EXPLAN</del>	mdr-sm	MDRSMLOGSIDACTION
<del>MDSM#ICNCFSNB#AE</del>	3-Error	Failed to notify Standby for MDR slot state machine [dec]	<del>NOFSNDB#AE#EXPLAN</del>	mdr-sm	MDRSMLOGSIDACTION
<del>MDSM#ICNCFIMOUT</del>	3-Error	Notification timeout on MDR slot state machine [dec] for the local client [chars] [dec] in state [chars]	<del>NOFYIMOUT#EXPLAN</del>	mdr-sm	MDRSMLOGSIDACTION
<del>MDSM#ICNCFIMOUT</del>	3-Error	Notification timeout on MDR slot state machine [dec] for the local client [chars] [dec] in state [chars]	<del>NOFYIMOUT#EXPLAN</del>	mdr-sm	MDRSMLOGSIDACTION
<del>MDSM#ICNCFIMOUT</del>	3-Error	Notification timeout on MDR slot state machine [dec] for the local client [chars] [dec] in state [chars]	<del>NOFYIMOUT#EXPLAN</del>	mdr-sm	MDRSMLOGSIDACTION
<del>MDSM#ICNCFSAUSNAD</del>	3-Error	Client [chars] [dec] on slot [dec] returned an unexpected status code [dec]	<del>SFAUSNADE#EXPLAN</del>	mdr-sm	MDRSMLOGSIDACTION
<del>MDSM#ICNCFSAUSNAD</del>	3-Error	Client [chars] [dec] on slot [dec] returned an unexpected status code [dec]	<del>SFAUSNADE#EXPLAN</del>	mdr-sm	MDRSMLOGSIDACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MRS_MISCIUSNAID	3-Error	Client [chars] [dec] on slot [dec] returned an unexpected status code [dec]	USNAIDEXPLANION	mdr-sm	MRS_MISCIUSNAID
MRS_MISCIENDRROR	3-Error	Can not find the data associated to client ID [dec]	CIENDRROREXPLANION	mdr-sm	MRS_MISCIENDRROR
MRS_MISCIENDRROR	3-Error	Can not find the data associated to client ID [dec]	CIENDRROREXPLANION	mdr-sm	MRS_MISCIENDRROR
MRS_MISCIENDRROR	3-Error	Can not find the data associated to client ID [dec]	CIENDRROREXPLANION	mdr-sm	MRS_MISCIENDRROR
MRS_MISCONINENAD	3-Error	Client [dec] returned an invalid status code	CONINENADEXPLANION	mdr-sm	MRS_MISCONINENAD
MRS_MISCONINENAD	3-Error	Client [dec] returned an invalid status code	CONINENADEXPLANION	mdr-sm	MRS_MISCONINENAD
MRS_MISCONINENAD	3-Error	Client [dec] returned an invalid status code	CONINENADEXPLANION	mdr-sm	MRS_MISCONINENAD
MRS_MISSDMVAICH	3-Error	Client ID mismatch during progression [chars] on client: [dec] expecting [dec]	DMVAICHEXPLANION	mdr-sm	MRS_MISSDMVAICH
MRS_MISSDMVAICH	3-Error	Client ID mismatch during progression [chars] on client: [dec] expecting [dec]	DMVAICHEXPLANION	mdr-sm	MRS_MISSDMVAICH
MRS_MISSDMVAICH	3-Error	Client ID mismatch during progression [chars] on client: [dec] expecting [dec]	DMVAICHEXPLANION	mdr-sm	MRS_MISSDMVAICH
MRS_MISNAIDEMNT	3-Error	Received an unexpected event [chars] in state [chars]	NAIDEMNTEXPLANION	mdr-sm	MRS_MISNAIDEMNT

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MDR_SYSNADEVENT	3-Error	Received an unexpected event [chars] in state [chars]	NADEVENTEXPLAN	mdr-sm	MDR_SMILOGSIDACION
MDR_SYSNADEVENT	3-Error	Received an unexpected event [chars] in state [chars]	NADEVENTEXPLAN	mdr-sm	MDR_SMILOGSIDACION
MDR_SSCREVENQUE	3-Error	The event queue is full for MDR System SM MDR SM will abort	SCREVENQUEEXPLAN	mdr-sm	MDR_SMILOGSIDACION
MDR_SSCREVENQUE	3-Error	The event queue is full for MDR System SM MDR SM will abort	SCREVENQUEEXPLAN	mdr-sm	MDR_SMILOGSIDACION
MDR_SSCREVENQUE	3-Error	The event queue is full for MDR System SM MDR SM will abort	SCREVENQUEEXPLAN	mdr-sm	MDR_SMILOGSIDACION
MDR_SSCFNSNDMAIL	3-Error	Failed to notify Standby for MDR system state machine Client [chars] [dec] in state [chars]	SCFNSNDMAILEXPLAN	mdr-sm	MDR_SMILOGSIDACION
MDR_SSCFNSNDMAIL	3-Error	Failed to notify Standby for MDR system state machine Client [chars] [dec] in state [chars]	SCFNSNDMAILEXPLAN	mdr-sm	MDR_SMILOGSIDACION
MDR_SSCFNSNDMAIL	3-Error	Failed to notify Standby for MDR system state machine Client [chars] [dec] in state [chars]	SCFNSNDMAILEXPLAN	mdr-sm	MDR_SMILOGSIDACION
MDR_SSNIFYMOUT	3-Error	Notification timeout on MDR system state machine for the local client [chars] [dec] in state [chars]	SNIFYMOUTEXPLAN	mdr-sm	MDR_SMILOGSIDACION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MDRSMSSNOIFY_TMOUT	3-Error	Notification timeout on MDR system state machine for the local client [chars] [dec] in state [chars]	NOIFY_TMOUT_EXPLANATION	mdr-sm	MDRSMLOGSIDACTION
MDRSMSSNOIFY_TMOUT	3-Error	Notification timeout on MDR system state machine for the local client [chars] [dec] in state [chars]	NOIFY_TMOUT_EXPLANATION	mdr-sm	MDRSMLOGSIDACTION
MDRSMSSSAUSNAD	3-Error	Client [chars] [dec] returned an unexpected status code [dec]	SAUSNAID_EXPLANATION	mdr-sm	MDRSMLOGSIDACTION
MDRSMSSSAUSNAD	3-Error	Client [chars] [dec] returned an unexpected status code [dec]	SAUSNAID_EXPLANATION	mdr-sm	MDRSMLOGSIDACTION
MDRSMSSSAUSNAD	3-Error	Client [chars] [dec] returned an unexpected status code [dec]	SAUSNAID_EXPLANATION	mdr-sm	MDRSMLOGSIDACTION
MDRSM4QUIESCE_FAIL	4-Warning	Quiesce watchdog timer expired continuing with MDR	At switchover on the old Active RP the MDR SM enters the Quiesce state. While this is occurring the reload of the old Active is blocked which in effect blocks the switchover from taking place. Therefore to prevent a loss of service due to a bug in the MDR SM or one of its clients a watchdog timer ensures that we won't stay in this state for too long.	mdr-sm	MDRSMLOGSIDACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MDR_SM4QIESCE_FAIL	4-Warning	Quiesce watchdog timer expired continuing with MDR	At switchover on the old Active RP the MDR SM enters the Quiesce state. While this is occurring the reload of the old Active is blocked which in effect blocks the switchover from taking place. Therefore to prevent a loss of service due to a bug in the MDR SM or one of its clients a watchdog timer ensures that we won't stay in this state for too long.	mdr-sm	MDRSMLOGSIDACTION
MDR_SM4QIESCE_FAIL	4-Warning	Quiesce watchdog timer expired continuing with MDR	At switchover on the old Active RP the MDR SM enters the Quiesce state. While this is occurring the reload of the old Active is blocked which in effect blocks the switchover from taking place. Therefore to prevent a loss of service due to a bug in the MDR SM or one of its clients a watchdog timer ensures that we won't stay in this state for too long.	mdr-sm	MDRSMLOGSIDACTION
MDRSMCCLIENTTIME	4-Warning	MDR SM Slot [dec] client [chars] [dec] spent too much time [dec] msec in \	CLIENTTIMEEXHAUSTED	mdr-sm	MDRSMLOGSIDACTION
MDRSMCCLIENTTIME	4-Warning	MDR SM Slot [dec] client [chars] [dec] spent too much time [dec] msec in \	CLIENTTIMEEXHAUSTED	mdr-sm	MDRSMLOGSIDACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MDR_SM4UNBLOCK_RF</del>	4-Warning	MDR SM Slot [dec] client [chars] [dec] spent too much time [dec] msec in \	<del>MDR SM Slot [dec] client [chars] [dec] spent too much time [dec] msec in \</del>	mdr-sm	<del>MDR SM LOG SID ACTION</del>
<del>MDR_SM4UNBLOCK_RF</del>	4-Warning	MDR SM SYS client [chars] [dec] spent too much time [dec] msec in \	<del>MDR SM SYS client [chars] [dec] spent too much time [dec] msec in \</del>	mdr-sm	<del>MDR SM LOG SID ACTION</del>
<del>MDR_SM4UNBLOCK_RF</del>	4-Warning	MDR SM SYS client [chars] [dec] spent too much time [dec] msec in \	<del>MDR SM SYS client [chars] [dec] spent too much time [dec] msec in \</del>	mdr-sm	<del>MDR SM LOG SID ACTION</del>
<del>MDR_SM4UNBLOCK_RF</del>	4-Warning	MDR SM SYS client [chars] [dec] spent too much time [dec] msec in \	<del>MDR SM SYS client [chars] [dec] spent too much time [dec] msec in \</del>	mdr-sm	<del>MDR SM LOG SID ACTION</del>
MDR_SM4UNBLOCK_RF	4-Warning	MDR SM aborted continuing RF Progression [dec]	The MDR State Machine aborts due to a bug in the MDR State Machine or one of its clients. The RF progression was blocked it will be unblocked to allow the standby to boot	mdr-sm	MDR SM LOG SID ACTION
MDR_SM4UNBLOCK_RF	4-Warning	MDR SM aborted continuing RF Progression [dec]	The MDR State Machine aborts due to a bug in the MDR State Machine or one of its clients. The RF progression was blocked it will be unblocked to allow the standby to boot	mdr-sm	MDR SM LOG SID ACTION
MDR_SM4UNBLOCK_RF	4-Warning	MDR SM aborted continuing RF Progression [dec]	The MDR State Machine aborts due to a bug in the MDR State Machine or one of its clients. The RF progression was blocked it will be unblocked to allow the standby to boot	mdr-sm	MDR SM LOG SID ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MDR3NO_ACTIVE_ESP	3-Error	iosxe-binos-utils	No active ESP was found when initiating Minimal Disruptive Restart	"An unexpected error has occurred where no active ESP was found to continue forwarding traffic during the Minimal Disruptive Restart. All requested linecards and or modules were reset as normal."	"Review the IOSd
MDR3NO_SPAS_IN_SIP	3-Error	iosxe-binos-utils	No Minimal Disruptive Restart compatible SPAs found in[chars]	"An unexpected error has occurred where the specified linecard that was to undergo Minimal Disruptive Restart did not contain any compatible SPAs. This linecard was reset as normal."	"Review the IOSd
MDR3NODE_ISSU_SP_WAIT	3-Error	iosxe-binos-utils	Could not wait for[chars] to complete Minimal Disruptive Restart	"An unexpected error has occurred where the specified linecard was performing a Minimal Disruptive Restart using node ISSU	-
MDR3NODE_ISSU_SPA_WAIT	3-Error	iosxe-binos-utils	Could not wait for[chars] in[chars] to complete Minimal Disruptive Restart	"An unexpected error has occurred where the specified module was performing a Minimal Disruptive Restart using node ISSU	-
MDR3READ_COMPAT_NO	3-Error	iosxe-binos-utils	Failed to read valid Minimal Disruptive Restart compatibility information for[chars]	"An unexpected error has occurred where either modules in or the specified linecard itself	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MDR3READ_SIP_RESET	3-Error	iosxe-binos-utils	Failed to read a valid Minimal Disruptive Restart reset value for[chars]	"An unexpected error has occurred where either modules in or the specified linecard itself	-
MDR3RESTART_FAILED	3-Error	iosxe-binos-utils	Failed to perform Minimal Disruptive Restart on[chars]	"An unexpected error has occurred where the specified linecard or module failed to undergo a Minimal Disruptive Restart. This linecard or module was reset as normal."	"Review the IOSd
MDR3-SIP_OFFLINE	3-Error	iosxe-binos-utils	%s is not online to perform Minimal Disruptive Restart	"An unexpected error has occurred where the specified linecard was to undergo Minimal Disruptive Restart however the linecard was not found to be online. The linecard was reset as normal."	"Review the IOSd
MDR3SOFTWARE_TRANSFER	3-Error	iosxe-binos-utils	Failed to receive upgrade software for[chars]	"An unexpected error has occurred where the specified linecard was to undergo Minimal Disruptive Restart however the linecard was not able to receive the upgrade software prior to commencing Minimal Disruptive Restart. The linecard was reset as normal."	"Review the IOSd

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MDR3SPA_BAY_INVALID	3-Error	iosxe-binos-utils	Could not perform Minimal Disruptive Restart on invalid[chars] in[chars]	"An unexpected error has occurred where the specified module was to undergo Minimal Disruptive Restart however the module was invalid."	"Review the IOSd
MDR3SPA_IS_NOT_READY	3-Error	iosxe-binos-utils	%s in[chars] is not ready to perform Minimal Disruptive Restart	"An unexpected error has occurred where the specified module was to undergo Minimal Disruptive Restart however the module was not found to be ready. The module was reset as normal."	"Review the IOSd
MDR3SPA_NOT_FOUND	3-Error	iosxe-binos-utils	%s in[chars] could not be found to perform Minimal Disruptive Restart	"An unexpected error has occurred where the specified module was to undergo Minimal Disruptive Restart however the module was not found. The module was reset as normal."	"Review the IOSd
MDR-3-SPA_OFFLINE	3-Error	iosxe-binos-utils	%s in[chars] is not online to perform Minimal Disruptive Restart	"An unexpected error has occurred where the specified module was to undergo Minimal Disruptive Restart however the module was not found to be online. The module was reset as normal."	"Review the IOSd

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MDR5SPA_TYEMISMATCH	3-Error	iosxe-binos-utils	Could not perform Minimal Disruptive Restart on[chars] in[chars] due to a SPA type mismatch	"An unexpected error has occurred where the specified module was to undergo Minimal Disruptive Restart however the module's SPA type was found to be different to what was expected. The module was reset as normal."	"Review the IOSd
MDR5SPA_WASNOTREADY	3-Error	iosxe-binos-utils	%s in[chars] was not ready to perform Minimal Disruptive Restart	"An unexpected error has occurred where the specified module was to undergo Minimal Disruptive Restart however the module was not found to be ready at the time it was checked. The module was reset was normal."	"Review the IOSd
MDR5CARD_RESTART	5-Notice	iosxe-binos-utils	Minimal Disruptive Restart[chars] to acquire provisioned software	"The FRU specified was not running the currently provisioned software	-
MDR5SP_UNSUPPORIED	5-Notice	iosxe-binos-utils	%s does not support Minimal Disruptive Restart	"The linecard specified was restarted during an Minimal Disruptive Restart	-
MDR5SPA_UNSUPPORIED	5-Notice	iosxe-binos-utils	%s does not support Minimal Disruptive Restart	"The module specified was restarted during an Minimal Disruptive Restart	-
MDS-2-INIT	2-Critical	Error initializing MDS structures	An error has occurred when the system tried to initialize MDS structures	-	LOG_SIDSH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MDS2LC_FAILED_IP_ACK	2-Critical	RP failed in getting Ack for IPC message of size [dec] to LC in slot [dec] with sequence [dec] error = [chars]	The Route Processor has failed in getting IPC acknowledgement	-	LOGSIDSHTTECHACTION
MDS2LC_FAILED_IP_OPEN	2-Critical	LC in slot [dec] failed to open IPC port to RP error = [chars]	The linecard has failed to open IPC port towards the Route Processor	-	LOGSIDSHTTECHACTION
MDS2LC_FAILED_IP_READY	2-Critical	LC in slot [dec] failed to send LC ready to RP error = [chars]	The linecard has failed to send Ready message to the Route Processor	-	LOGSIDSHTTECHACTION
MDS-2-LC_INIT	2-Critical	Error initializing linecard	System resources could not be allocated on the linecard	-	LOGSIDSHTTECHACTION
MDS2CNADHWIDBINDEX	2-Critical	Invalid if_index for HWIDB [chars]	Invalid if_index for HWIDB	-	LOGSIDSHTTECHACTION
MDS2CNADHWIDBQSIZE	2-Critical	Invalid Q count value	Invalid Q count value	-	LOGSIDSHTTECHACTION
MDS2CNADHWIDBINDEX	2-Critical	Invalid input if_index 0x[hec] for HWIDB [chars]	The input hardware IDB interface index is invalid	-	LOGSIDSHTTECHACTION
MDS2CNADHWIDBINDEXNUM	2-Critical	Invalid input if_num 0x[hec] for SWIDB [chars]	The input software IDB interface number is invalid	-	LOGSIDSHTTECHACTION
MDS2CNADMROUTEMSG	2-Critical	Unknown message [node]received from RP	Unrecognized route event has been sent down from the Route Processor	-	LOGSIDSHTTECHACTION
MDS2LC_INVALID_MSG	2-Critical	Unknown IPC type [node]received from RP	Unrecognized message type has been sent down from the Route Processor	-	LOGSIDSHTTECHACTION
MDS2LC_INVALID_SIZE	2-Critical	Invalid IPC size [node]received from RP	Unrecognized IPC size has been sent down from the Route Processor	-	LOGSIDSHTTECHACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MDS1CNWDSWBIFNUM	2-Critical	Invalid if_num for SWIDB [chars]	Invalid if_num for SWIDB	-	LOG_SIDSH_TECH_ACTION
MDS1CNWDSMBOQSE	2-Critical	Invalid Q count value	Invalid Q count value	-	LOG_SIDSH_TECH_ACTION
MDS2LC_NOIPCBUFFER	2-Critical	No IPC buffers available for messages to be sent to the RP	The system has run out of buffers for IPC	-	LOG_SIDSH_TECH_ACTION
MDS2LC_SPDLISCORR	2-Critical	SPD list corrupted	The list of Selective Packet Discard is corrupted	-	LOG_SIDSH_TECH_ACTION
MDS2LWUPDENILMRF	2-Critical	LC received swidb update for if_number [hec] [chars] tableid [hec].	The linecard received a software IDB update from the Route Processor specifying a multicast VRF table ID for which no multicast VRF exists in the linecard.	-	LOG_SIDSH_TECH_ACTION
MDS-2-RP	2-Critical	[chars]	The Route Processor either cannot allocate memory or it has missing data	-	LOG_SIDSH_TECH_ACTION
MDS2RPALDIPCRAIE	2-Critical	RP failed in creating IPC port error = [chars]	The Route Processor failed to create MDS Interprocess Communications port	-	LOG_SIDSH_TECH_ACTION
MDS2RPVCICRRSE	2-Critical	RP received oversized IPC size = [dec] type = [dec]	The Route Processor has received oversized IPC message from the linecard	-	LOG_SIDSH_TECH_ACTION
MDS3RUIECUNT_ZERO	3-Error	Multicast route count reached zero	The running count of multicast routes reached zero when it should be non-zero.	-	"An error in maintaining the multicast route count has occurred." LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MDS4-ROUTE LIMIT	4-Warning	Current count of [node] exceeds multicast route-limit of [dec]	The number of multicast routes exceeds the configured maximum allowed. New routes cannot be added unless the configuration is changed.	-	"If multicast traffic is of any priority among the traffic carried by this router then use the 'ip multicast route-limit' command to increase the number of multicast routes. Otherwise no action is required."
MDS4-ROUTE LIMIT ATTEMPT	4-Warning	Attempt to exceed multicast route-limit of [dec]	The number of multicast routes equals the configured maximum allowed. New routes cannot be added unless the configuration is changed.	-	"If multicast traffic is of any priority among the traffic carried by this router then use the 'ip multicast route-limit' command to increase the number of multicast routes. Otherwise no action is required."
MDCONNSTATECHANGED	6-Information	polaris-mdt-infra	"Connection state changed (id[chars] -[chars]):[chars]"	"The connection state has been changed."	"Notification for connection state changed. No action required."
MDSUBSCRIPTION EXCEEDED	4-Warning	polaris-mdt-infra	"Active subscription limit exceeded (stream[chars])"	-	-
MDSUBSCRIPTION FAILED	4-Warning	polaris-mdt-infra	"Subscription creation failed (stream[chars])"	-	-
MDSUBSCRIPTION FAILED	4-Warning	polaris-mdt-infra	"Subscription creation failed (stream[chars])"	-	-
MDSUBSCRIPTION FAILED	4-Warning	polaris-mdt-infra	"Subscription creation failed (stream[chars])"	-	-
MDSUBSCRIPTION RESUMED	4-Warning	polaris-mdt-infra	"Subscription resumed (stream[chars])"	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MDS_BKPD_MFNAD</del>	4-Warning	polaris-mdt-infra	"Subscription terminated (stream[chars]	-	-
<del>MDS_BKPD_MFNAD</del>	4-Warning	polaris-mdt-infra	"Subscription creation failed (stream[chars]	-	-
<del>MVPN_BGP_LEAF_CHUNK_ERR</del>	2-Critical	Error initializing MVPN BGP Leaf AD Update chunk	Chunk memory for MVPN BGP Leaf AD Update cannot be initialized	-	LOG_SID_NO_ACTION
<del>MVPN_BGP_LEAF_CHUNK_ERR</del>	2-Critical	Error initializing MVPN BGP Leaf AD Update chunk	Chunk memory for MVPN BGP Leaf AD Update cannot be initialized	-	LOG_SID_NO_ACTION
<del>MVPN_BGP_UPDATE_CHUNK_ERR</del>	2-Critical	Error initializing MVPN BGP Update chunk	Chunk memory for MVPN BGP Update cannot be initialized	-	LOG_SID_NO_ACTION
<del>MVPN_BGP_UPDATE_CHUNK_ERR</del>	2-Critical	Error initializing MVPN BGP Update chunk	Chunk memory for MVPN BGP Update cannot be initialized	-	LOG_SID_NO_ACTION
<del>MVPN_PE_CHUNK_ERR</del>	2-Critical	Error initializing MVPN PE chunk	Chunk memory for MVPN PE cannot be initialized	-	LOG_SID_NO_ACTION
<del>MVPN_PE_CHUNK_ERR</del>	2-Critical	Error initializing MVPN PE chunk	Chunk memory for MVPN PE cannot be initialized	-	LOG_SID_NO_ACTION
<del>MVPN_REPL_CHUNK_ERR</del>	2-Critical	Error initializing MVPN repl db chunks	Error initializing MVPN repl db chunks	-	LOG_SID_NO_ACTION
<del>MVPN_REPL_CHUNK_ERR</del>	2-Critical	Error initializing MVPN repl db chunks	Error initializing MVPN repl db chunks	-	LOG_SID_NO_ACTION
<del>MVPN_REPL_BRANCH_ERR</del>	2-Critical	Error initializing MVPN replication branch radix tree	Internal error	-	LOG_SID_NO_ACTION
<del>MVPN_REPL_BRANCH_ERR</del>	2-Critical	Error initializing MVPN replication branch radix tree	Internal error	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MDEF2LSPVIF_CREATE_FAIL	2-Critical	[chars] - LSPVIF creation for PE [chars] failed.	The creation of LSPVIF for a remote PE for strong RPF check has failed.	mcast-mvpn	LOG_STD_ACTION
MDEF2LSPVIF_CREATE_FAIL	2-Critical	[chars] - LSPVIF creation for PE [chars] failed.	The creation of LSPVIF for a remote PE for strong RPF check has failed.	mcast-mvpn	LOG_STD_ACTION
MDEF2IDB_ID_INIT_FAIL	2-Critical	[chars] - Failed initializing tdb id.	Internal identification number of MVPN tdb cannot be initialized.	mcast-mvpn	LOG_STD_ACTION
MDEF2IDB_ID_INIT_FAIL	2-Critical	[chars] - Failed initializing tdb id.	Internal identification number of MVPN tdb cannot be initialized.	mcast-mvpn	LOG_STD_ACTION
MDEF2IDB_ID_MSMATCH	2-Critical	[chars] - Mismatch between current tdb id [node]and synced id [node]	Internal identification number of MVPN tdb is mismatched with synced id.	mcast-mvpn	LOG_STD_ACTION
MDEF2IDB_ID_MSMATCH	2-Critical	[chars] - Mismatch between current tdb id [node]and synced id [node]	Internal identification number of MVPN tdb is mismatched with synced id.	mcast-mvpn	LOG_STD_ACTION
MDEF2AIOC_SHOW_ENTRY	3-Error	Attempt to allocate show entry for invalid show type %u	The show data type specified by the function attempting to perform a show operation is not a valid type. The show operation can not be performed.	-	LOG_STD_ACTION
MDEF2AIOC_SHOW_ENTRY	3-Error	Attempt to allocate show entry for invalid show type %u	The show data type specified by the function attempting to perform a show operation is not a valid type. The show operation can not be performed.	-	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MDT-3-LPBACK_CONV	3-Error	Loopback Conversion Failed.	Installation of required MVPN forwarding interfaces may have \n\ failed for one or more MDT groups.	-	LOG_STD_ACTION
MDT-3-LPBACK_CONV	3-Error	Loopback Conversion Failed.	Installation of required MVPN forwarding interfaces may have \n\ failed for one or more MDT groups.	-	LOG_STD_ACTION
MDT-3-NO_CORE_TDB	3-Error	No core table descriptor block for MVPN address family [chars]	MVPN configuration commands can not be executed because \n\ there are is no MVPN core table for the specified address family.	-	LOG_STD_ACTION
MDT-3-NO_CORE_TDB	3-Error	No core table descriptor block for MVPN address family [chars]	MVPN configuration commands can not be executed because \n\ there are is no MVPN core table for the specified address family.	-	LOG_STD_ACTION
MDT-3-NODETAIL	3-Error	Missing detail information	The detailed information requested for the currently executing \n\ show command was not collected as required. The show command \n\ processing is aborted.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MDT-3-NODETAIL	3-Error	Missing detail information	The detailed information requested for the currently executing \n\ show command was not collected as required. The show command \n\ processing is aborted.	-	LOG_STD_ACTION
MDT-3-NOPDB	3-Error	No protocol descriptor block for MVPN protocol type %u	MVPN configuration commands can not be executed because \n\ there are no functions registered for handling this command \n\ address family.	-	LOG_STD_ACTION
MDT-3-NOPDB	3-Error	No protocol descriptor block for MVPN protocol type %u	MVPN configuration commands can not be executed because \n\ there are no functions registered for handling this command \n\ address family.	-	LOG_STD_ACTION
MDT-3-POOL_GROUP	3-Error	Failed attempt to find MDT group [chars] in pool for mvrf [chars]	An attempt to allocate an MDT data pool entry on a standby RP using an MDT data group address previously allocated on the active RP has failed. The specified group address does not exist in the group address pool for this MVRF on the standby RP. MVPN traffic may be impeded for this MVRF following an RP failover.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MDT-3-POOL_GROUP	3-Error	Failed attempt to find MDT group [chars] in pool for mvrf [chars]	An attempt to allocate an MDT data pool entry on a standby RP using an MDT data group address previously allocated on the active RP has failed. The specified group address does not exist in the group address pool for this MVRF on the standby RP. MVPN traffic may be impeded for this MVRF following an RP failover.	-	LOG_STD_ACTION
MDT3SHUTDOWN_ERR	3-Error	Error in [chars] : [chars]	Internal error	mcast-vpn	LOG_SID_RECUR_ACTION
MDT3SHUTDOWN_ERR	3-Error	Error in [chars] : [chars]	Internal error	mcast-vpn	LOG_SID_RECUR_ACTION
MDT-3-WAVL_INIT_FAIL	3-Error	Failed initializing [chars] wavl tree.	wavl_init failed.	mcast-mvpn	LOG_STD_ACTION
MDT-3-WAVL_INIT_FAIL	3-Error	Failed initializing [chars] wavl tree.	wavl_init failed.	mcast-mvpn	LOG_STD_ACTION
MDT-4-LBSRC	4-Warning	MDT [chars] uses source address [node] from a non-loopback interface	The local peering interface used to set up MDT tunnel is not a loopback Interface. This may cause blackholes if the interface is in the outgoing list of the MDT group.	-	"Change the configuration of bgp update-source and use a loopback\n" "interface as the local peering interface"
MDT-4-LBSRC	4-Warning	MDT [chars] uses source address [node] from a non-loopback interface	The local peering interface used to set up MDT tunnel is not a loopback Interface. This may cause blackholes if the interface is in the outgoing list of the MDT group.	-	"Change the configuration of bgp update-source and use a loopback\n" "interface as the local peering interface"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MVPN_ROUTE_LIMIT	4-Warning	MVPN update caused attempt to exceed multicast route-limit of [dec]	The number of multicast routes equals the configured maximum allowed.\n\n A new multicast route creation request that was triggered by an\n\n MVPN BGP/PIM update from a peering PE router by an MVPN\n\n configuration action on this router or by an MDT default/data\n\n transition on this router could not be added. No new routes can\n\n be added unless the configuration is changed.	-	"If multicast traffic is of any priority among the traffic carried\n\n by this router then use the 'ip multicast route-limit' command to\n\n increase the number of multicast routes.\n\n Otherwise no action is required."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MDT4MNOUHEMTAEMT	4-Warning	MVPN update caused attempt to exceed multicast route-limit of [dec]	The number of multicast routes equals the configured maximum allowed.\n A new multicast route creation request that was triggered by an\n MVPN BGP/PIM update from a peering PE router by an MVPN\n configuration action on this router or by an MDT default/data\n transition on this router could not be added. No new routes can\n be added unless the configuration is changed.	-	"If multicast traffic is of any priority among the traffic carried\n by this router then use the 'ip multicast route-limit' command to\n increase the number of multicast routes.\n Otherwise no action is required."
MDT4NO_GROUP_LINK	4-Warning	MDT entry [chars]:[node]i linked by source but not linked by group	-	-	-
MDT4NO_GROUP_LINK	4-Warning	MDT entry [chars]:[node]i linked by source but not linked by group	-	-	-
MDT4-NO_TDB_PDB	4-Warning	No protocol descriptor block for TDB at 0x[hec]: [chars] failed	The operation can not be executed because the MVPN table is not \n fully initialized	-	LOG_STD_ACTION
MDT4-NO_TDB_PDB	4-Warning	No protocol descriptor block for TDB at 0x[hec]: [chars] failed	The operation can not be executed because the MVPN table is not \n fully initialized	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MDT-4PIM_TDB_TRANS	4-Warning	MVPN TDB to [chars] translation failed for AF [chars]	The operation can not be executed because a NULL or incorrect \n\ MVPN table was specified.	-	LOG_STD_ACTION
MDT-4PIM_TDB_TRANS	4-Warning	MVPN TDB to [chars] translation failed for AF [chars]	The operation can not be executed because a NULL or incorrect \n\ MVPN table was specified.	-	LOG_STD_ACTION
MDT-4RD_CONFLICT	4-Warning	MDT entry [chars]:[node]i received an update for RD [chars]	-	-	-
MDT-4RD_CONFLICT	4-Warning	MDT entry [chars]:[node]i received an update for RD [chars]	-	-	-
MDT-4TDB_WALK_ERR	4-Warning	Error Walking list of TDB's	Walk of all pim tdb's associated with a given pim pdb cannot be completed	-	LOG_STD_NO_ACTION
MDT-4TDB_WALK_ERR	4-Warning	Error Walking list of TDB's	Walk of all pim tdb's associated with a given pim pdb cannot be completed	-	LOG_STD_NO_ACTION
MDT-4DAI_RD_CONFLICT	4-Warning	MDT entry [chars]:[node]i received an update for RD [chars]	-	-	-
MDT-4DAI_RD_CONFLICT	4-Warning	MDT entry [chars]:[node]i received an update for RD [chars]	-	-	-
MDT-4-VRFSRC	4-Warning	The source interface of the MDT tunnels [chars] is not in the global table	The local peering interface must not be an interface in a VRF.	-	"Change the configuration of bgp update-source and use a loopback\n" "interface in the global table"

<del>Facility-Severity-Mnemonic</del>	<del>Severity-Meaning</del>	<del>Message</del>	<del>Message-Explanation</del>	<del>Component</del>	<del>Recommended-Action</del>
MDT-4-VRFSRC	4-Warning	The source interface of the MDT tunnels [chars] is not in the global table	The local peering interface must not be an interface in a VRF.	-	"Change the configuration of bgp update-source and use a loopback\n" "interface in the global table"
<del>MDT-5-DATA_MDT_REUSED</del>	5-Notice	Data MDT [chars] is reused	A data MDT group can be reused by a particular host that sources\n\ user traffic in an VPN if all pre-defined data MDT groups are used	-	LOG_SID_NO_ACTION
<del>MDT-5-DATA_MDT_REUSED</del>	5-Notice	Data MDT [chars] is reused	A data MDT group can be reused by a particular host that sources\n\ user traffic in an VPN if all pre-defined data MDT groups are used	-	LOG_SID_NO_ACTION
MDT-5-IDB_ID_NOT_INIT	5-Notice	[chars] - tdb id not initialized.	Internal identification number of MVPN tdb is not initialized.	-	LOG_SID_NO_ACTION
<del>MDT-5-IDB_ID_NOT_INIT</del>	5-Notice	[chars] - tdb id not initialized.	Internal identification number of MVPN tdb is not initialized.	-	LOG_SID_NO_ACTION
<del>MRC-2-NSR/RCYCL</del>	2-Critical	ewcap-image	Failed to synchronize configuration to EWC-capable APs on the network	Failed to synchronize configuration to EWC-capable APs on the network	A switchover to the standby followed by reconfiguration is recommended.
<del>MRC-6-NSR/RCYCL</del>	6-Information	ewcap-image	AP Event: Controller Image Download is successful	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MEDIATRACE3-INFR	3-Error	Initiator Error: [chars]	An internal error in initiator event processing has occurred.	mediatrace	"This may be a transient error condition. If the " "problem persists contact your Cisco technical " "support representative."
MEDIATRACE3-INFR	3-Error	Initiator Error: [chars]	An internal error in initiator event processing has occurred.	mediatrace	"This may be a transient error condition. If the " "problem persists contact your Cisco technical " "support representative."
MEDIATRACE3-PRCHEDB	3-Error	Operation failure in profile DB	Profile DB operation failed.	mediatrace	"Contact your Cisco technical support " "representative."
MEDIATRACE3-PRCHEDB	3-Error	Operation failure in profile DB	Profile DB operation failed.	mediatrace	"Contact your Cisco technical support " "representative."
MEDIATRACE3-SES_IAMP	3-Error	session = [dec]: reason = [chars]	An error occurred while Mediatrace application was trying to initiate a session send a data fetch request or terminate the session.	mediatrace	"Contact your Cisco technical support " "representative."
MEDIATRACE3-SES_IAMP	3-Error	session = [dec]: reason = [chars]	An error occurred while Mediatrace application was trying to initiate a session send a data fetch request or terminate the session.	mediatrace	"Contact your Cisco technical support " "representative."
MEDIATRACE3-SES_SOFT	3-Error	session = [dec]: reason = [chars]	Session failure due to some Mediatrace internal software error.	mediatrace	"Contact your Cisco technical support " "representative."
MEDIATRACE3-SES_SOFT	3-Error	session = [dec]: reason = [chars]	Session failure due to some Mediatrace internal software error.	mediatrace	"Contact your Cisco technical support " "representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MDRACERDHMRVPHD</del>	3-Error	Response delivery to target IP [chars] failed for global	This message is seen when IAMP or RSVP reported problem in sending response for Responder.	mediatrace	"Turn on 'debug iamp error' to see more details on what IAMP layer is "complaining."
<del>MDRACERDHMRVPHD</del>	3-Error	Response delivery to target IP [chars] failed for global	This message is seen when IAMP or RSVP reported problem in sending response for Responder.	mediatrace	"Turn on 'debug iamp error' to see more details on what IAMP layer is "complaining."
<del>MDRACERDHMRVPHD</del>	3-Error	Request with global session id [node] was dropped because	The maximum number of Responder sessions has been exceeded and there is no more sessions available for new periodical requests. This request was dropped.	mediatrace	"Assess the router resource to see if it can take on more "sessions as more sessions can take away some CPU and memory from "the system. If it's OK to increase the max sessions for the "local node then use the `mediatrace responder max-sessions' CLI "to increase the local Responder's max sessions. As a good practice "keep session life cycle shorter so to share the sessions."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MDRACRQDUMQAND</del>	3-Error	Request with global session id [node]was dropped because	The maximum number of Responder sessions has been exceeded and there is no more sessions available for new periodical requests. This request was dropped.	mediatrace	"Assess the router resource to see if it can take on more " "sessions as more sessions can take away some CPU and memory from " "the system. If it's OK to increase the max sessions for the " "local node then use the `mediatrace responder max-sessions' CLI " "to increase the local Responder's max sessionis. As a good practice " "keep session life cycle shorter so to share the sessions."
<del>MDRACRQDUMQAND</del>	3-Error	Request with duplicated global session id [node]was detected from	There should not be 2 concurrent sessions with identical global session id from the same Initiator node. If found it's an error condition.	mediatrace	"To help resolve this error condition capture the " "output of `show run all   sec mediatrace' and send it to " "Cisco Technical Support."
<del>MDRACRQDUMQAND</del>	3-Error	Request with duplicated global session id [node]was detected from	There should not be 2 concurrent sessions with identical global session id from the same Initiator node. If found it's an error condition.	mediatrace	"To help resolve this error condition capture the " "output of `show run all   sec mediatrace' and send it to " "Cisco Technical Support."
<del>MDRACRQDUMQAND</del>	3-Error	memory allocation of session object failed for [chars] for	Before a request can be processed a session object needs to be allocated first. This message reports that such malloc failed due to the system is momentarily short of memory.	mediatrace	"Check system memory situation and do minor tunings at various " "feature CLIs so to reduce memory demand level."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MEMTRACE_SESSION_ALLOC_FAILED	3-Error	memory allocation of session object failed for [chars] for	Before a request can be processed a session object needs to be allocated first. This message reports that such malloc failed due to the system is momentarily short of memory.	mediatrace	"Check system memory situation and do minor tunings at various " "feature CLIs so to reduce memory demand level."
MEMTRACE_SESSION_FORCE	3-Error	User issued a forced shutdown. All Mediatrace Responder sessions are removed.	Only user can issue the 'no mediatrace responder force' CLI. This is a non-graceful shutdown of Mediatrace sessions. All sessions are purged when this message is seen.	mediatrace	"Only when some inconsistency in session count is observed between " "Mediatrace Responder and VM or when the local node is under " "stress and need to remove all Mediatrace sessions."
MEMTRACE_SESSION_FORCE	3-Error	User issued a forced shutdown. All Mediatrace Responder sessions are removed.	Only user can issue the 'no mediatrace responder force' CLI. This is a non-graceful shutdown of Mediatrace sessions. All sessions are purged when this message is seen.	mediatrace	"Only when some inconsistency in session count is observed between " "Mediatrace Responder and VM or when the local node is under " "stress and need to remove all Mediatrace sessions."
MEMTRACE_SESSION_REMOVE_FAILED	3-Error	failed to remove a session with global session id [node]from queue	This message indicates that there is a problem in removing the concerned session from the session queue. This is very rare.	mediatrace	"Do nothing. If this message is seen more than once then user can " "'no mediatrace responder force' CLI to purge the session queue."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MDRCSSEMOHAI</del>	3-Error	failed to remove a session with global session id [node]from queue	This message indicates that there is a problem in removing the concerned session from the session queue. This is very rare.	mediatrace	"Do nothing. If this message is seen more than once then user can " "`no mediatrace responder force' CLI to purge the session queue."
<del>MDRCSSENAICQAD</del>	3-Error	memory allocation of servlet object failed for global session id %u	Before a request can be processed a servlet memory object needs to be allocated first. This message reports that such memory allocation failed because the system is momentarily short of memory.	mediatrace	"Check system memory situation and do minor tunings at various " "feature CLIs so to reduce memory demand level."
<del>MDRCSSENAICQAD</del>	3-Error	memory allocation of servlet object failed for global session id %u	Before a request can be processed a servlet memory object needs to be allocated first. This message reports that such memory allocation failed because the system is momentarily short of memory.	mediatrace	"Check system memory situation and do minor tunings at various " "feature CLIs so to reduce memory demand level."
<del>MDRCSMCOMSRMG</del>	3-Error	'snmp-server community public ro' is not configured or access is denied. session id [node]	This informational message logs availability transitions in the Service Assurance Agent probes. This messages appears when the <CmdBold>ip sla logging trap<NoCmdBold> command is entered	rspi-time-rptr	"If this message is not necessary enter the " "<CmdBold>no ip sla logging trap<NoCmdBold> command to disable " "logging. Otherwise no action is required"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MDRCSMCOMRMG</del>	3-Error	'snmp-server community public ro' is not configured or access is denied. session id [node]	This informational message logs availability transitions in the Service Assurance Agent probes. This messages appears when the <CmdBold>ip sla logging trap<NoCmdBold> command is entered	rsps-time-rptr	"If this message is not necessary enter the " " <b>no ip sla logging trap</b> <NoCmdBold> command to disable " "logging. Otherwise no action is required"
<del>MDIARACE4ISSRESART</del>	4-Warning	session = [dec]: [chars]	A condition affecting normal Mediatrace session operation detected. Session needs to be restarted.	mediatrace	"Reschedule the session identified by giving " "no mediatrace schedule command followed by " "mediatrace schedule command."
<del>MDIARACE4ISSRESART</del>	4-Warning	session = [dec]: [chars]	A condition affecting normal Mediatrace session operation detected. Session needs to be restarted.	mediatrace	"Reschedule the session identified by giving " "no mediatrace schedule command followed by " "mediatrace schedule command."
<del>MDIARACE4REMPYREQ</del>	4-Warning	request has empty payload.	For unknown reason a request is received with empty payload.	mediatrace	"Do nothing. This is a very rare but harmless event."
<del>MDIARACE4REMPYREQ</del>	4-Warning	request has empty payload.	For unknown reason a request is received with empty payload.	mediatrace	"Do nothing. This is a very rare but harmless event."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>MDRRCRRNFDAMENG</del>	4-Warning	Dampening IAMP event [chars] received for global session id [node]	To prevent path flip flop and cause unnecessary stop and re-start on monitoring objects any same subsequent route change or interface change event is subject to a dampening timer before required actions are taken by Responder for the impacted sessions. During the dampening window same kind of event notice will be ignored.	mediatrace	"Start from using RSVP related CLI to troubleshoot why flip flop on " "a route is happening."
<del>MDRRCRRNFDAMENG</del>	4-Warning	Dampening IAMP event [chars] received for global session id [node]	To prevent path flip flop and cause unnecessary stop and re-start on monitoring objects any same subsequent route change or interface change event is subject to a dampening timer before required actions are taken by Responder for the impacted sessions. During the dampening window same kind of event notice will be ignored.	mediatrace	"Start from using RSVP related CLI to troubleshoot why flip flop on " "a route is happening."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MEDIATRACE_RCNIF_EVENT	4-Warning	IAMP event [chars] is received for [chars].	When RSVP-TP layer detects a route change or interface change for the local node IAMP relays the notice as <del>EVENT_MER_CLOCAL</del> or <del>EVENT_MEF_CHANGE</del> notice to Responder. Responder will search all impacted sessions to stop and re-start the monitoring.	mediatrace	"Do nothing. This message is emitted when detecting a rare RSVP "product behavior. Mediatrace is designed to handle this notice."
MEDIATRACE_RCNIF_EVENT	4-Warning	IAMP event [chars] is received for [chars].	When RSVP-TP layer detects a route change or interface change for the local node IAMP relays the notice as <del>EVENT_MER_CLOCAL</del> or <del>EVENT_MEF_CHANGE</del> notice to Responder. Responder will search all impacted sessions to stop and re-start the monitoring.	mediatrace	"Do nothing. This message is emitted when detecting a rare RSVP "product behavior. Mediatrace is designed to handle this notice."
MEDIATRACE_SESSION_START	5-Notice	Local-ID = [dec] Global-ID = [dec] [chars]	A new mediatrace session is scheduled.	mediatrace	"This is notification of Mediatrace session start "no action is required."
MEDIATRACE_SESSION_START	5-Notice	Local-ID = [dec] Global-ID = [dec] [chars]	A new mediatrace session is scheduled.	mediatrace	"This is notification of Mediatrace session start "no action is required."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>ME</del> DIATRACE_SESSION_DOWN	5-Notice	Responder received a SESSION_DOWN event for [chars]	When Initiator removes a configured session via IAMP it informs RSVP to tear down the session object and hence SESSION_DOWN notice is propagated down the path to all Responders.	mediatrace	"Do nothing. This is part of normal behavior."
<del>ME</del> DIATRACE_SESSION_DOWN	5-Notice	Responder received a SESSION_DOWN event for [chars]	When Initiator removes a configured session via IAMP it informs RSVP to tear down the session object and hence SESSION_DOWN notice is propagated down the path to all Responders.	mediatrace	"Do nothing. This is part of normal behavior."
<del>ME</del> DIATRACE_SESSION_EVENT	6-Information	session = [dec]: ignored event: [dec]	This is informational. The ignored event number is printed.	mediatrace	"Do nothing."
<del>ME</del> DIATRACE_SESSION_EVENT	6-Information	session = [dec]: ignored event: [dec]	This is informational. The ignored event number is printed.	mediatrace	"Do nothing."
<del>ME</del> DIATRACE_SESSION_CREATED	6-Information	New periodical session with global session id [node]is added.	This message is produced when a new periodical session is configured for a new request with specified global session id.	mediatrace	"Do nothing."
<del>ME</del> DIATRACE_SESSION_CREATED	6-Information	New periodical session with global session id [node]is added.	This message is produced when a new periodical session is configured for a new request with specified global session id.	mediatrace	"Do nothing."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MEDIASUCCESS</del>	6-Information	No more active sessions at the moment. DVMC API was called to purge all Mediatrace sessions.	This is only an informational message. This message is produced after informing DVMC that there is no more active sessions in Mediatrace Responder.	mediatrace	"Do nothing."
<del>MEDIASUCCESS</del>	6-Information	No more active sessions at the moment. DVMC API was called to purge all Mediatrace sessions.	This is only an informational message. This message is produced after informing DVMC that there is no more active sessions in Mediatrace Responder.	mediatrace	"Do nothing."
<del>MEDIASUCCESS</del>	6-Information	A transient session of [chars] with global session id [node]successfully	This is an informational syslog message for reporting that an one-shot transient request sessions is successfully removed.	mediatrace	"Do nothing."
<del>MEDIASUCCESS</del>	6-Information	A transient session of [chars] with global session id [node]successfully	This is an informational syslog message for reporting that an one-shot transient request sessions is successfully removed.	mediatrace	"Do nothing."
MEM_BLK2CTXERROR	2-Critical	The context information 0x[node] is not valid.	An application to the memory block manager has passed \n\ either a context pointer that is not valid.	memblkmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MEM_BLK2CTXERROR	2-Critical	The context information 0x[node] is not valid.	An application to the memory block manager has passed \n\ either a context pointer that is not valid.	memblkmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
MEM_BLK2MEMERRR	2-Critical	Memory block 0x[node] is not valid.	An application to the memory block manager has passed \n\ a memory block that is not valid.	memblkmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
MEM_BLK2MEMERRR	2-Critical	Memory block 0x[node] is not valid.	An application to the memory block manager has passed \n\ a memory block that is not valid.	memblkmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
MEM_BLK2MEMERRR	2-Critical	Memory block 0x[node] has already been freed.	An application to the memory block manager has attempted \n\ to free or lock a memory block that is not allocated.	memblkmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
MEM_BLK2MEMERRR	2-Critical	Memory block 0x[node] has already been freed.	An application to the memory block manager has attempted \n\ to free or lock a memory block that is not allocated.	memblkmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MEMBLKMEMORDAIBROR</del>	2-Critical	The memory block manager has detected an ordinal error.\n\n Memory block 0x[node] has an ordinal of 0x[node] and a size of 0x[node].\n\n Its corresponding lower sibling memory block 0x[node] has \n\n an ordinal of 0x[node] and a size of 0x[node].	The lower sibling ordinal should be equal to the \n\n difference between the higher sibling's ordinal and \n\n size.	memblkmgr	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
<del>MEMBLKMEMORDAIBROR</del>	2-Critical	The memory block manager has detected an ordinal error.\n\n Memory block 0x[node] has an ordinal of 0x[node] and a size of 0x[node].\n\n Its corresponding lower sibling memory block 0x[node] has \n\n an ordinal of 0x[node] and a size of 0x[node].	The lower sibling ordinal should be equal to the \n\n difference between the higher sibling's ordinal and \n\n size.	memblkmgr	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
<del>MEMBLKMEMWBKIBROR</del>	2-Critical	An attempt to coalesce memory block 0x[node] with its \n\n sibling memory block 0x[node] has failed because the sibling\n\n block is not valid.	An attempt to coalesce two memory blocks\n\n has failed because a memory block is not valid.	memblkmgr	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
<del>MEMBLKMEMWBKIBROR</del>	2-Critical	An attempt to coalesce memory block 0x[node] with its \n\n sibling memory block 0x[node] has failed because the sibling\n\n block is not valid.	An attempt to coalesce two memory blocks\n\n has failed because a memory block is not valid.	memblkmgr	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MEM_ECC-2-MALLOC	2-Critical	Attempt to malloc [dec] bytes for the ECC error log failed.\n ECC errors will only be reported and not recorded.\n	Malloc for the ECC error log failed. If system has only 32Mbytes of memory an upgrade would be advisable or is recommended.	-	LOG_STD_ACTION
MEM_ECC-2-MBE	2-Critical	Multiple bit error detected at 0x[node]x	A multi-bit uncorrectable error was detected on a CPU read from DRAM.	-	LOG_STD_ACTION
MEM_ECC-2-MBE_RMW	2-Critical	Multiple bit error detected\nat 0x[node]x on a read-modify-write cycle	A multi-bit uncorrectable error was detected during a read-modify- write cycle on a CPU read from DRAM for a non 8-byte access.	-	LOG_STD_ACTION
MEM_ECC-2-PARITY	2-Critical	Parity error on CPU write to address: 0x[node]x	Bad parity on data was detected by the ECC Ctrl during a CPU write operation.	-	LOG_STD_ACTION
MEM_ECC-2-PARITY_INFO	2-Critical	Parity error was detected on the \nfollowing bytes of a double word: [chars] [chars] [chars]	Indicates which bytes of a 64 bit word had bad parity that caused the ECC Ctrl to generated an interrupt.	-	LOG_STD_ACTION
MEM_ECC-3-BADADDR_MBE	3-Error	Invalid MBE dram address: 0x[node]x latched by ECC Ctrl	The address latched by the ECC Ctrl when detecting an MBE is not a valid dram address. This kind of an error is not one that the ECC Ctrl shouldn't report under its normal operating conditions and when it does it most probably indicates a malfunctioning ECC Ctrl that needs replacement.	-	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MEMC3BADDR_MBE	3-Error	Invalid MBE dram address: 0x[node]x latched by ECC Ctrl\n during a RMW cycle	The address latched by the ECC Ctrl when detecting an MBE during a Read-Modify-Write cycle isn't a valid dram address. This kind of an error is not one that the ECC Ctrl shouldn't report under its normal operating conditions and when it does it most probably indicates a malfunctioning ECC Ctrl that needs replacement.	-	LOG_STD_ACTION
MEMC3BADDR_SBE	3-Error	Invalid SBE dram address: 0x[node]x latched by ECC Ctrl	The address latched by the ECC Ctrl when detecting a SBE is not a valid dram address. This kind of an error is not one that the ECC Ctrl shouldn't report under its normal operating conditions and when it does it most probably indicates a malfunctioning ECC Ctrl that needs replacement.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MEM_ECC3ADDR_SBE_RM_W	3-Error	Invalid SBE dram address: 0x[node]x latched by ECC Ctrl\n during a RMW cycle	The address latched by the ECC Ctrl when detecting an SBE during a Read-Modify-Write cycle isn't a valid dram address. This kind of an error is not one that the ECC Ctrl shouldn't report under its normal operating conditions and when it does it most probably indicates a malfunctioning ECC Ctrl that needs replacement.	-	LOG_STD_ACTION
MEM_ECC-3-SBE	3-Error	Single bit error detected and corrected at 0x[node]x	A single-bit correctable error was detected on a read from DRAM. 'show ecc' can be used to dump Single-bit errors logged thus far.	-	LOG_STD_ACTION
MEM_ECC3SBE_HARD	3-Error	Single bit *hard* error detected at 0x[node]x	A single-bit uncorrectable error [hard error] was detected on a CPU read from DRAM. 'show ecc' will dump the Single-bit errors logged thus far and will also indicate detected hard error address locations.	-	"Monitor system through 'show ecc' and replace DRAM if too many such errors."
MEM_ECC3SBE_LIMIT	3-Error	Single bit error detected and corrected\nat 0x[node]x	A single-bit correctable error was detected on a CPU read from DRAM.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MEM_ECC3SBE_RMW	3-Error	Single bit error detected and corrected at\n0x[node]x on a read-modify-write cycle	A single-bit correctable error was detected on during a read-modify- write cycle on a CPU read from DRAM for a non 8-byte access. 'show ecc' can be used to dump Single-bit errors logged thus far.	-	LOG_STD_ACTION
MEM_ECC3SBE_RMW_HARD	3-Error	Single bit *hard* error detected at\n0x[node]x on a read-modify-write cycle	A single-bit uncorrectable hard error was detected during a read-modify- write cycle on a CPU read from DRAM for a non 8-byte access. <CmdBold>show ecc<noCmdBold> can be used to dump Single-bit errors logged thus far.	rspgsr-diags	"Monitor system through <CmdBold>show ecc<noCmdBold> and replace DRAM" " if too many such errors occur."
MEM_ECC3SBE_RMW_IMI	3-Error	Single bit error detected and corrected at 0x[node]x on a read-modify-write cycle	A single-bit correctable error was detected on during a read-modify- write cycle on a CPU read from DRAM for a non 8-byte access. 'show ecc' can be used to dump Single-bit errors logged thus far.	-	LOG_STD_ACTION
MEM_ECC3SYNDROME	3-Error	8-bit Syndrome for the detected Multi-bit error: 0x[hec]	The 8-bit syndrome for detected Multi-bit error. This value does not indicate the exact positions of the bits in error but can be used to approximate their positions.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MEMECSYNDROMESE	3-Error	8-bit Syndrome for the detected Single-bit error: 0x[hec]	The 8-bit syndrome for detected single-bit error. This value does not indicate the exact positions of the bits in error but can be used to approximate their positions.	-	LOG_STD_ACTION
MEMECSYNDROMESEM	3-Error	8-bit Syndrome for the detected Single-bit error: 0x[hec]	The 8-bit syndrome for detected single-bit error. This value does not indicate the exact positions of the bits in error but can be used to approximate their positions.	-	LOG_STD_ACTION
MEMCPDRAM_POOL_CREATE	2-Critical	return code [dec]	Creation of public DRAM memory pool failed.	cpp-ucode	LOG_STD_ACTION
MEMCPDRAM_POOL_CREATE	2-Critical	pool exists	Request to create public DRAM memory pool failed because pool already exists.	cpp-ucode	LOG_STD_ACTION
MEMCPDRAM_POOL_CREATE	2-Critical	pool exists	Request to create public SRAM memory pool failed because pool already exists.	cpp-ucode	LOG_STD_ACTION
MEMCPDRAM_POOL_CORRUPT	2-Critical	pool handle 0x[hec] addr 0x5x magic value 0x[hec] ref cnt %u	Memory element has been corrupted.	cpp-ucode	LOG_STD_ACTION
MEMCPDRAM_POOL_CORRUPT	2-Critical	pool handle 0x[hec] magic value 0x[hec]	Memory pool data structure has been corrupted.	cpp-ucode	LOG_STD_ACTION
MEMCPDRAM_POOL_CREATE	2-Critical	return code [dec]	Creation of public SRAM memory pool failed.	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MEMCRDSEFPARMERR	3-Error	pool handle 0x[hec]	Request to delete memory pool failed due to bad parameter value.	cpp-ucode	LOG_STD_ACTION
MEMCRDSEFPARMERR	3-Error	pool handle 0x[hec] addr 0x[hec]	Memory deallocation request failed due to bad parameter value.	cpp-ucode	LOG_STD_ACTION
MEMCRLOCKMAXREFCNT	3-Error	pool handle 0x[hec] addr 0x[hec]	Request to lock memory pool element failed due to reference count for element already being at the maximum value.	cpp-ucode	LOG_STD_ACTION
MEMCRLOCKPARMERR	3-Error	pool handle 0x[hec] addr 0x[hec]	Request to lock memory pool element failed due to bad parameter value.	cpp-ucode	LOG_STD_ACTION
MEMCRMALLOCNOEMM	3-Error	pool handle 0x[hec] size %u	Memory pool allocation request failed due to insufficient memory being available.	cpp-ucode	LOG_STD_ACTION
MEMCRMALLOCPARMERR	3-Error	pool handle 0x[hec] size %u	Memory allocation request failed due to bad parameter value.	cpp-ucode	LOG_STD_ACTION
MEMCRMEMEXCEEDMAX	3-Error	memory pool exceeds maximum [dec] bytes allowed.	An attempt was made to allocate a buffer from the specified memory pool which has reached its maximum limit	-	LOG_STD_ACTION
MEMCRMEMRNAD	3-Error	The Memory Management code encounters an invalid parameter.	It appears that the Memory Management code has received an invalid parameter from its caller.	-	"Copy the error message exactly as it appears and report it to your technical support representative."
MEMCRMEMRNOEMM	3-Error	Out of memory	System out of memory.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MEMPOOL_APPEND_ERR	3-Error	pool handle 0x[hex] addr 0x[hex] size %u	Append of additional memory to pool failed due to bad parameter value.	cpp-ucode	LOG_STD_ACTION
MEMPOOL_CREATE_ERR	3-Error	addr 0x[hex] size %u	Creation of memory pool failed due to bad parameter value.	cpp-ucode	LOG_STD_ACTION
MEMPOOL_STATS_ERR	3-Error	pool handle 0x[hex] stats addr 0x[hex]	Read of memory pool statistics failed due to bad parameter value.	cpp-ucode	LOG_STD_ACTION
MEMPOOL_IPC_ALLOC_ERR	3-Error	-	Allocation of IPC packet failed.	cpp-ucode	LOG_STD_ACTION
MEMPOOL_IPC_SEND_ERR	3-Error	[chars]	Could not send IPC request for more memory.	cpp-ucode	LOG_STD_ACTION
MEM2MPLS_TE_PCALC	2-Critical	ERRMSG_HAG_TRACEBACK	-	-	-
MEM2MPLS_TE_PCALC	2-Critical	ERRMSG_HAG_TRACEBACK	-	-	-
MEMPOOL-3-IPC	3-Error	[chars] [chars]	An IPC error has occurred on polling the Enhanced MempoolMIB	-	"Copy the error message exactly as it appears on the\n\ console or in the system log contact your Cisco technical support\n\ representative and provide the representative with the gathered\n\ information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MEMSCAN-2-BSSREG	2-Critical	Parity error0x[hec] found in imagebss region	A parity error was found in the BSS region of memory.	mem	"Schedule a reboot of the system to clear memory AS SOON AS POSSIBLE. If this parity error is touched in normal operation of the router the router will crash. If more parity errors are found at this address after the reboot replace the DRAM in the router or the processor board."
MEMSCAN-2-BSSREG	2-Critical	Parity error0x[hec] found in imagebss region	A parity error was found in the BSS region of memory.	mem	"Schedule a reboot of the system to clear memory AS SOON AS POSSIBLE. If this parity error is touched in normal operation of the router the router will crash. If more parity errors are found at this address after the reboot replace the DRAM in the router or the processor board."
MEMSCAN-2-DATAREG	2-Critical	Parity error0x[hec] found in imagedata region	A parity error was found in the data region of memory.	mem	"Schedule a reboot of the system to clear memory AS SOON AS POSSIBLE. If this parity error is touched in normal operation of the router the router will crash. If more parity errors are found at this address after the reboot replace the DRAM in the router or the processor board."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MEMSCAN2-DATAREG	2-Critical	Parity error0x[hec] found in imagedata region	A parity error was found in the data region of memory.	mem	"Schedule a reboot of the system to clear memory AS SOON AS POSSIBLE. If this parity error is touched in normal operation of the router the router will crash. If more parity errors are found at this address after the reboot replace the DRAM in the router or the processor board."
MEMSCAN2-TEXTREG	2-Critical	Parity error0x[hec] found in imagetext region	A parity error was found in the text region of memory.	mem	"Schedule a reboot of the system to clear memory AS SOON AS POSSIBLE. If this parity error is touched in normal operation of the router the router will crash. If more parity errors are found at this address after the reboot replace the DRAM in the router or the processor board."
MEMSCAN2-TEXTREG	2-Critical	Parity error0x[hec] found in imagetext region	A parity error was found in the text region of memory.	mem	"Schedule a reboot of the system to clear memory AS SOON AS POSSIBLE. If this parity error is touched in normal operation of the router the router will crash. If more parity errors are found at this address after the reboot replace the DRAM in the router or the processor board."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MEMSCAN-3-DUPERR	3-Error	Another parity error0x[hec] found in bolck0x[hec]. Not scrubed	Multiple errors have been found in a meory block.	mem	"Schedule a reboot of the system to clear memory AS SOON AS POSSIBLE. If this parity error is touched in normal operation of the router the router will crash. If more parity errors are found at this address after the reboot replace the DRAM in the router or the processor board."
MEMSCAN-3-DUPERR	3-Error	Another parity error0x[hec] found in bolck0x[hec]. Not scrubed	Multiple errors have been found in a meory block.	mem	"Schedule a reboot of the system to clear memory AS SOON AS POSSIBLE. If this parity error is touched in normal operation of the router the router will crash. If more parity errors are found at this address after the reboot replace the DRAM in the router or the processor board."
MEMSCAN-3-INHEAD	3-Error	Parity error0x[hec] found in block header	A parity error has been found in a critical field of a block header.	mem	"Schedule a reboot of the system to clear memory AS SOON AS POSSIBLE. If this parity error is touched in normal operation of the router the router will crash. If more parity errors are found at this address after the reboot replace the DRAM in the router or the processor board."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MEMSCAN-3-INHEAD	3-Error	Parity error0x[hec] found in block header	A parity error has been found in a critical field of a block header.	mem	"Schedule a reboot of the system to clear memory AS SOON AS POSSIBLE. If this parity error is touched in normal operation of the router the router will crash. If more parity errors are found at this address after the reboot replace the DRAM in the router or the processor board."
MEMSCAN-3-INPREV	3-Error	Parity error0x[hec] found in block field **previous	A parity error has been found in a critical field of a block header.	mem	"Schedule a reboot of the system to clear memory AS SOON AS POSSIBLE. If this parity error is touched in normal operation of the router the router will crash. If more parity errors are found at this address after the reboot replace the DRAM in the router or the processor board."
MEMSCAN-3-INPREV	3-Error	Parity error0x[hec] found in block field **previous	A parity error has been found in a critical field of a block header.	mem	"Schedule a reboot of the system to clear memory AS SOON AS POSSIBLE. If this parity error is touched in normal operation of the router the router will crash. If more parity errors are found at this address after the reboot replace the DRAM in the router or the processor board."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MEMSCAN-3-INUSE	3-Error	Parity error0x[hec] found in busy block0x[hec]	A parity error has been found in a busy block which cannot be scrubbed nor moved to the bad list.	mem	"Schedule a reboot of the system to clear memory AS SOON AS POSSIBLE. If this parity error is touched in normal operation of the router the router will crash. If more parity errors are found at this address after the reboot replace the DRAM in the router or the processor board."
MEMSCAN-3-INUSE	3-Error	Parity error0x[hec] found in busy block0x[hec]	A parity error has been found in a busy block which cannot be scrubbed nor moved to the bad list.	mem	"Schedule a reboot of the system to clear memory AS SOON AS POSSIBLE. If this parity error is touched in normal operation of the router the router will crash. If more parity errors are found at this address after the reboot replace the DRAM in the router or the processor board."
MEMSCAN-3-NOHEAD	3-Error	No block header for parity error0x[hec] until 0x[hec]	A parity error has been found for an address which has no block header	mem	"Schedule a reboot of the system to clear memory AS SOON AS POSSIBLE. If this parity error is touched in normal operation of the router the router will crash. If more parity errors are found at this address after the reboot replace the DRAM in the router or the processor board."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MEMSCAN3NOHEAD	3-Error	No block header for parity error0x[hec] until 0x[hec]	A parity error has been found for an address which has no block header	mem	"Schedule a reboot of the system to clear memory AS SOON AS POSSIBLE. If this parity error is touched in normal operation of the router the router will crash. If more parity errors are found at this address after the reboot replace the DRAM in the router or the processor board."
MEMSCAN3UNKNOWN	3-Error	Parity error0x[hec] found in otherunknown region	A parity error was found in other region of memory.	mem	"Schedule a reboot of the system to clear memory AS SOON AS POSSIBLE. If this parity error is touched in normal operation of the router the router will crash. If more parity errors are found at this address after the reboot replace the DRAM in the router or the processor board."
MEMSCAN3UNKNOWN	3-Error	Parity error0x[hec] found in otherunknown region	A parity error was found in other region of memory.	mem	"Schedule a reboot of the system to clear memory AS SOON AS POSSIBLE. If this parity error is touched in normal operation of the router the router will crash. If more parity errors are found at this address after the reboot replace the DRAM in the router or the processor board."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MEMSCAN-6-LINKED	6-Information	Error0x[hec] block0x[hec] linked size [dec]	A parity error was found in a free block which could not be scrubbed. The Free block has been moved to a bad list so that it cannot be used again.	mem	"Schedule a reboot of the system to clear memory. If more parity errors are found at this address after the reboot replace the DRAM in the router or the processor board."
MEMSCAN-6-LINKED	6-Information	Error0x[hec] block0x[hec] linked size [dec]	A parity error was found in a free block which could not be scrubbed. The Free block has been moved to a bad list so that it cannot be used again.	mem	"Schedule a reboot of the system to clear memory. If more parity errors are found at this address after the reboot replace the DRAM in the router or the processor board."
MEMSCAN-6-SCRUBED	6-Information	Parity error0x[hec] scrubbed multiple times	Multiple parity errors found at this address.	mem	"Take down router and replace DRAM"
MEMSCAN-6-SCRUBED	6-Information	Parity error0x[hec] scrubbed multiple times	Multiple parity errors found at this address.	mem	"Take down router and replace DRAM"
MEMSCAN-6-SCRUBED	6-Information	Parity error0x[hec] scrubbed	Memory parity error found and scrubbed.	mem	"None"
MEMSCAN-6-SCRUBED	6-Information	Parity error0x[hec] scrubbed	Memory parity error found and scrubbed.	mem	"None"
MEMSCAN-6-SPLIT	6-Information	Error0x[hec] block0x[hec] split bad block0x[hec] linked size 0x[hec]	A parity error was found in a free block which could not be scrubbed. The free block has been fragmented and the fragment with the parity error has been moved to a dead list so that it cannot be used again.	mem	"Schedule a reboot of the system to clear memory. If more parity errors are found at this address after the reboot replace the DRAM in the router or the processor board."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MEMSCAN-6-SPLIT	6-Information	Error0x[hec] block0x[hec] split bad block0x[hec] linked size 0x[hec]	A parity error was found in a free block which could not be scrubbed. The free block has been fragmented and the fragment with the parity error has been moved to a dead list so that it cannot be used again.	mem	"Schedule a reboot of the system to clear memory. If more parity errors are found at this address after the reboot replace the DRAM in the router or the processor board."
<del>MERAKI5-MERAKI_ID</del>	5-Notice	[chars]	Failed to enable service meraki connect.	-	"No action required. Informational message"
MERAKI5-MAC_ADDR	5-Notice	Meraki MAC: [sub][sub][sub][sub][sub][sub]	Received MAC from Meraki dashboard.	-	"No action required. Informational message"
MERAKI5-MERAKI_ID	5-Notice	Meraki ID: [chars]	Meraki ID obtained from Meraki dashboard.	-	"No action required. Informational message"
<del>MERAKI5-MERAKI_ID</del>	5-Notice	Failed to register the switch [dec]	The switch has failed to register with Meraki Dashboard.	-	"No action required. Informational message"
<del>MERAKI5-MERAKI_ID</del>	5-Notice	Switch [dec] has been succesfully registered.	The switch has been succesfully registered with Meraki Dashboard.	-	"No action required. Informational message"
<del>MERAKI5-MERAKI_ID</del>	3-Error	iosxe-binos-utils	%% Error:[chars]	Improper arguments or config	Arguments to be changed
<del>MERAKI5-MERAKI_ID</del>	6-Information	iosxe-binos-utils	%% Info:[chars]	Info level logs	
<del>MERAKI5-MERAKI_ID</del>	3-Error	iosxe-binos-utils	%% Error:[chars]	Failed to Disconnect AP for Mesh config changes	Reboot the AP for the mesh configs to be applied
<del>MERAKI5-MERAKI_ID</del>	3-Error	iosxe-binos-utils	%% Error:[chars]	Failed to reboot AP for Mesh config changes	Reboot the AP for the mesh configs to be applied
<del>MERAKI5-MERAKI_ID</del>	3-Error	iosxe-binos-utils	%% Error:[chars]	Improper arguments or config	Arguments to be changed

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MEPMDMERRMERRMSG</del>	3-Error	iosxe-binos-utils	%% Error:[chars]	Mesh profile change for AP did not get Applied	Reboot the AP for the mesh configs to be applied
<del>MEPMDMERRMERRMSG</del>	4-Warning	iosxe-binos-utils	DCA interval is too long. Configure it to 10min to make sure algorithm will run	The DCA algorithm might not run during that channel update period	Configure DCA interval to a 10min period to make sure that the algorithm will run
METOPT_DH-ALARM	1-Alert	[chars]:[chars]	The specified alarm has occurred or cleared	-	"The recommended action is to repair the source of the alarm."
<del>MEOPTDINTERNALERROR</del>	3-Error	[chars][dec]:[chars]	The Metro Optical CDL defect indication subsystem encountered\n an internal software error. The error message contains text\n useful to identify the nature of the problem.	-	<del>LOGSIDSHTTECHACION</del>
<del>MEOPTDREPROGRAMERROR</del>	3-Error	[chars]\n	The Metro Optical Reprogram driver encountered\n an error. The error message contains text\n useful to identify the nature of the problem.	Reprogram	"Retry the reprogram of the card. If the reprogram fails again remove the card and reinsert it. If the card does not come up save the console log and contact Cisco TAC for further assistance."
<del>MEOPTDINTERNALERROR</del>	3-Error	[chars][dec]:[chars] [dec]	The Metro Optical Transponder driver subsystem encountered\n an internal software error. The error message contains text\n useful to identify the nature of the problem.	Xponder	"Please verify whether the Interface exists in the\n system. If the card is OIR'ed or EOIR is done then we will see\n such NULL strings in the system.Ensure that the interface exists in\n the system"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MEIOPT2FABRCRIFAL	2-Critical	Port Fail event received from [chars] switch card on fabric port associated with interface [chars]\n	Fabric Port Failed due to some problem\n	-	LOG_STD_ACTION
MEIOPT2NOMEMORY	2-Critical	No memory available for [chars]	An attempt at memory allocation failed.	-	"Try these actions to remedy the problem:\n\n\n Add memory.\n\n\n Disable some features.\n\n\n Apply filtering to decrease the size of system data structures - the\n\n routing table for example.\n\n\n In general reduce other system activities to ease memory demands. If\n\n conditions warrant upgrade to a larger memory configuration."
MEIOPT2NOBUFR	2-Critical	No packet buffer available for [chars] interface to send this packet to higher layer	An attempt to allocate packet buffer failed.	-	"Try these actions to remedy the problem:\n\n\n Reload the system.\n\n\n Perform a CPU switchover if you\n\n have a redundant CPU system"
MEIOPT2ZEROLEN_MSG	2-Critical	Zero length while [chars] linecard. Datalen [dec]\n	Due to some internal error a zero length transaction is being made from/to the Line card	-	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MECPIDROM_MISMATCH	3-Error	Mismatch in backplane IDPROM [chars]: Active-side=[dec] Sby-side=[dec]	There are two backplane IDPROMS. Each is readable by one of the two redundant CPUs. Most IDPROM fields should be programmed by manufacturing to contain identical information. Only the first mismatched field is shown. Use a CLI show command to see additional mismatches.	-	LOG_SIDSH_TECH_ACTION
MECPIDROM_STRING_MISMATCH	3-Error	Mismatch in backplane IDPROM [chars]: Active-side=[chars] Sby-side=[chars]	There are two backplane IDPROMS. Each is readable by one of the two redundant CPUs. Most IDPROM fields should be programmed by manufacturing to contain identical information. Only the first mismatched string is shown. Use a CLI show command to see additional mismatches.	-	LOG_SIDSH_TECH_ACTION
METOPT-3-NOACK	3-Error	Access to [chars] temperature sensor failed	Accesses to chassis temperature sensor failed.	-	LOG_SIDSH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
METOPT-3-NOMAC	3-Error	Can't allocate MAC address for interface [node]%u	MAC address allocation failed because of an incorrect slot and port combination which exceeds the maximum available hardware	man-optical-sw	"Check whether all the available MAC addresses for the system have been allocated" "Make sure that this address is unique or specify MAC addresses for commands such as novell routing that allow the use of this address as a default.\n" LOG_STD_ACTION
MEIOPT-3-UNEXP_INIR	3-Error	Interrupt [chars] not expected masking off	An interrupt of a certain type was signalled but the \n interrupt handler for this type of interrupt is not yet installed.	-	"This problem should be self-correcting but indicates either\n a hardware or a software defect. If it's a hardware defect\n further problems are to be expected. If it's a software\n problem certain types of error and alarm conditions may be\n left undetected. \n Copy the error message exactly as it appears and report it to your\n technical support representative."
METOPT-4-COOKIE	4-Warning	Corrupt or missing MAC address cookie using random base [enet]\n	The contents of MAC address EEPROM are invalid. The system is providing random MAC addresses	man-optical-sw	"show rpm eeprom" "\n" LOG_SID_RECUR_ACTION
METOPT-4-NOCPUVER	4-Warning	Invalid CPU ID assuming revision 1	The CPU ID could not be read from EEPROM.\n This is probably due to a hardware failure.	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MEIOPT6DI_ASSERTED	6-Information	CDL Defect Indication: [chars] Asserted on interface [chars]\n	This message indicates some CDL Defect \n\ Indication bits were Asserted on this interface \n	-	"Closely monitor CDL Defect Indication Status \n\ if Defect Indication was asserted"
MEIOPT6DI_CLEARED	6-Information	CDL Defect Indication: [chars] cleared on interface [chars]\n	This message indicates CDL Defect \n\ Indication Status Changed\n	-	LOG_SID_NO_ACTION
METS-2-INITFAIL	2-Critical	Can't start analysis	The requested operation failed due to lack of resource maybe temporarily	analysis	"Reduce system resource/memory usage and retry for the commands."
METS-2-INITFAIL	2-Critical	Can't start analysis	The requested operation failed due to lack of resource maybe temporarily	analysis	"Reduce system resource/memory usage and retry for the commands."
METS3-BADMETHOD	3-Error	Cannot process [chars] method %u	A method list function encountered a method list that was unknown\n\ or could not be handled.	analysis	LOG_STD_ACTION
METS3-BADMETHOD	3-Error	Cannot process [chars] method %u	A method list function encountered a method list that was unknown\n\ or could not be handled.	analysis	LOG_STD_ACTION
METS-3-NOREGION	3-Error	No region found: [chars]	Resource failure: No region found.	analysis	LOG_STD_ACTION
METS-3-NOREGION	3-Error	No region found: [chars]	Resource failure: No region found.	analysis	LOG_STD_ACTION
METS-3-NULLPOOL	3-Error	Can't process null pool: [chars]	Resource failure: Null pool in the region	analysis	LOG_STD_ACTION
METS-3-NULLPOOL	3-Error	Can't process null pool: [chars]	Resource failure: Null pool in the region	analysis	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MIBLK3DEEMIA	3-Error	Label [dec] in table [dec] [chars] [chars]	The MFI Label Broker could not honor a request to immediately handle the process restart of the application indicated. It will try to handle it in the background	mpls-mfi	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this condition " "has been previously reported and resolved in a later release. If not " "gather the output of <CmdBold>show version<NoCmdBold> " "<CmdBold>show running-config<NoCmdBold> and " "<CmdBold>show mpls infrastructure label-broker ldm<NoCmdBold>" " this latter command is present only when " " <CmdBold>service internal<NoCmdBold> is enabled and contact your Cisco"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MI LABEL_BROKER_ERROR	3-Error	Label [dec] in table [dec] [chars] [chars]	The MFI Label Broker could not honor a request to immediately handle the process restart of the application indicated. It will try to handle it in the background	mpls-mfi	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this condition " "has been previously reported and resolved in a later release. If not " "gather the output of <CmdBold>show version<NoCmd Bold> " "<CmdBold>show running-config<NoCmd Bold> and " "<CmdBold>show mpls infrastructure label-broker ldm<NoCmdBold>" " this latter command is present only when" " <CmdBold>service internal<NoCmdBold> is enabled and contact your Cisco"
MI LABEL_BROKER_ERROR	3-Error	[chars]	An MPLS application is registering multiple times with the label broker.	mpls-mfi	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this condition " "has been previously reported and resolved in a later release. If not " "gather the output of <CmdBold>show version<NoCmd Bold> and " "<CmdBold>show running-config<NoCmd Bold> and contact your Cisco technical " "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MI</del> <del>AL</del> <del>BO</del> <del>ER</del> <del>URG</del> <del>DM</del>	3-Error	[chars]	An MPLS application is registering multiple times with the label broker.	mpls-mfi	"Refer to the Bug Navigator at www.cisco.com to see if this condition " "has been previously reported and resolved in a later release. If not " "gather the output of <CmdBold>show version<NoCmd Bold> and " "<CmdBold>show running-config<NoCmd Bold> and contact your Cisco technical " "support representative."
<del>MI</del> <del>AL</del> <del>BO</del> <del>ER</del> <del>URG</del> <del>DM</del>	3-Error	application [chars]	-	mpls-mfi	"Refer to the Bug Navigator at www.cisco.com to see if this condition " "has been previously reported and resolved in a later release. If not " "gather the output of <CmdBold>show version<NoCmd Bold> and " "<CmdBold>show running-config<NoCmd Bold> and contact your Cisco technical " "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MFIL</del> MFIL	3-Error	application [chars]	-	mpls-mfi	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this condition " "has been previously reported and resolved in a later release. If not " "gather the output of <CmdBold>show version<NoCmd Bold> and " "<CmdBold>show running-config<NoCmd Bold> and contact your Cisco technical " "support representative."
<del>MFIL</del> MFIL	3-Error	[dec]	The MFI Label Broker received a request to allocate an invalid label.	mpls-mfi	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this condition " "has been previously reported and resolved in a later release. If not " "gather the output of <CmdBold>show version<NoCmd Bold> and " "<CmdBold>show running-config<NoCmd Bold> and contact your Cisco technical " "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ML</del> <del>BL</del> <del>BRK</del> <del>IN</del> <del>VL</del> <del>BL</del>	3-Error	[dec]	The MFI Label Broker received a request to allocate an invalid label.	mpls-mfi	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this condition " "has been previously reported and resolved in a later release. If not " "gather the output of <CmdBold>show version<NoCmd Bold> and " "<CmdBold>show running-config<NoCmd Bold> and contact your Cisco technical " "support representative."
<del>ML</del> <del>BL</del> <del>BRK</del> <del>IN</del> <del>VL</del> <del>DM</del>	3-Error	[dec]	The MFI Label Broker received a unregistration request from an invalid	mpls-mfi	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this condition " "has been previously reported and resolved in a later release. If not " "gather the output of <CmdBold>show version<NoCmd Bold> and " "<CmdBold>show running-config<NoCmd Bold> and contact your Cisco technical " "support representative."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MFI LABEL BROKER INVALID	3-Error	[dec]	The MFI Label Broker received a unregistration request from an invalid	mpls-mfi	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this condition " "has been previously reported and resolved in a later release. If not " "gather the output of <CmdBold>show version<NoCmd Bold> and " "<CmdBold>show running-config<NoCmd Bold> and contact your Cisco technical " "support representative."
MFI LABEL BROKER INVALID PARAM	3-Error	[chars]	The MFI Label Broker received an invalid parameter in a request to allocate or free a local label.	mpls-mfi	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this condition " "has been previously reported and resolved in a later release. If not " "gather the output of <CmdBold>show version<NoCmd Bold> and " "<CmdBold>show running-config<NoCmd Bold> and contact your Cisco technical " "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MIL</del> <del>AB</del> <del>LR</del> <del>CK</del> <del>ERR</del> <del>AD</del> <del>PRM</del>	3-Error	[chars]	The MFI Label Broker received an invalid parameter in a request to allocate or free a local label.	mpls-mfi	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this condition " "has been previously reported and resolved in a later release. If not " "gather the output of <CmdBold>show version<NoCmd Bold> and " "<CmdBold>show running-config<NoCmd Bold> and contact your Cisco technical " "support representative."
<del>MIL</del> <del>AB</del> <del>LR</del> <del>CK</del> <del>ERR</del> <del>AD</del> <del>DD</del>	3-Error	LDM[dec] PID[dec]	The MFI Label Broker received a registration request with invalid PID.	mpls-mfi	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this condition " "has been previously reported and resolved in a later release. If not " "gather the output of <CmdBold>show version<NoCmd Bold> and " "<CmdBold>show running-config<NoCmd Bold> and contact your Cisco technical " "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MLABEL_BROKER_INVALID</del>	3-Error	LDM[dec] PID[dec]	The MFI Label Broker received a registration request with invalid PID.	mpls-mfi	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this condition " "has been previously reported and resolved in a later release. If not " "gather the output of <CmdBold>show version<NoCmd Bold> and " "<CmdBold>show running-config<NoCmd Bold> and contact your Cisco technical " "support representative."
<del>MLABEL_BROKER_INVALID</del>	3-Error	[chars][dec][chars][dec]	The MFI Label Broker received an invalid process event from the IOS-on-Neutrino infrastructure.	mpls-mfi	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this condition " "has been previously reported and resolved in a later release. If not " "gather the output of <CmdBold>show version<NoCmd Bold> and " "<CmdBold>show running-config<NoCmd Bold> and contact your Cisco technical " "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MALPROTO</del>	3-Error	[chars][dec][chars][dec]	The MFI Label Broker received an invalid process event from the IOS-on-Neutrino infrastructure.	mpls-mfi	"Refer to the Bug Navigator at www.cisco.com to see if this condition " "has been previously reported and resolved in a later release. If not " "gather the output of <CmdBold>show version<NoCmd Bold> and " "<CmdBold>show running-config<NoCmd Bold> and contact your Cisco technical " "support representative."
<del>MALPROTO</del>	3-Error	Label [dec] in table [dec] for [chars]	The MFI Label Broker was unable to program the label in question for the mentioned FEC.	mpls-mfi	"Refer to the Bug Navigator at www.cisco.com to see if this condition " "has been previously reported and resolved in a later release. If not " "gather the output of <CmdBold>show version<NoCmd Bold> " "<CmdBold>show running-config<NoCmd Bold> " "<CmdBold>show mpls forwarding-table internal<NoCmdBold> and contact " "your Cisco technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MLABELCONF</del>	3-Error	Label [dec] in table [dec] for [chars]	The MFI Label Broker was unable to program the label in question for the mentioned FEC.	mpls-mfi	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this condition " "has been previously reported and resolved in a later release. If not " "gather the output of <CmdBold>show version<NoCmd Bold> " "<CmdBold>show running-config<NoCmd Bold> " "<CmdBold>show mpls forwarding-table internal<NoCmdBold> and contact " "your Cisco technical support representative."
<del>MLABELCONF</del>	3-Error	Label [dec] in table [dec] [chars] [chars] [p/bm [dec]/0x[hec]]ldm request info: [chars]	The MFI Label Broker received a request to bind the label to a prefix but the label is already bound to another prefix.	mpls-mfi	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this condition " "has been previously reported and resolved in a later release. If not " "gather the output of <CmdBold>show version<NoCmd Bold> " "<CmdBold>show running-config<NoCmd Bold> and " "<CmdBold>show mpls forwarding-table<NoCmdBold> and contact your Cisco" " technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MFI_LABEL_BROKER_MFI_END	3-Error	Label [dec] in table [dec] [chars] [chars] [p/bm [dec]/0x[hec]]ldm request info: [chars]	The MFI Label Broker received a request to bind the label to a prefix but the label is already bound to another prefix.	mpls-mfi	"Refer to the Bug Navigator at www.cisco.com to see if this condition " "has been previously reported and resolved in a later release. If not " "gather the output of <CmdBold>show version<NoCmd Bold> " "<CmdBold>show running-config<NoCmd Bold> and " "<CmdBold>show mpls forwarding-table<NoCmd Bold> and contact your Cisco" " technical support representative."
MFI_LABEL_BROKER_MFI_END	3-Error	[chars] Label [dec] in table [dec] [chars] 0x[hec]	The MFI Label Broker encountered a situation where there is no currently active label for applications to use for the FEC indicated.	mpls-mfi	"Refer to the Bug Navigator at www.cisco.com to see if this condition " "has been previously reported and resolved in a later release. If not " "gather the output of <CmdBold>show version<NoCmd Bold> " "<CmdBold>show running-config<NoCmd Bold> " "<CmdBold>show mpls forwarding-table internal<NoCmd Bold> and contact " "your Cisco technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MFI_LABEL_NO_ACTIVE_LABEL	3-Error	[chars] Label [dec] in table [dec] [chars] 0x[hec]	The MFI Label Broker encountered a situation where there is no currently active label for applications to use for the FEC indicated.	mpls-mfi	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this condition " "has been previously reported and resolved in a later release. If not " "gather the output of <CmdBold>show version<NoCmd Bold> " "<CmdBold>show running-config<NoCmd Bold> " "<CmdBold>show mpls forwarding-table internal<NoCmdBold> and contact " "your Cisco technical support representative."
MFI_LABEL_BROKER_NULL_KEY	3-Error		The MFI Label Broker received a null key pointer	mpls-mfi	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this condition " "has been previously reported and resolved in a later release. If not " "gather the output of <CmdBold>show version<NoCmd Bold> and " "<CmdBold>show running-config<NoCmd Bold> and contact your Cisco technical " "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MIL/BL/BCK/B/NUL/KEY	3-Error		The MFI Label Broker received a null key pointer	mpls-mfi	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this condition " "has been previously reported and resolved in a later release. If not " "gather the output of <CmdBold>show version<NoCmd Bold> and " "<CmdBold>show running-config<NoCmd Bold> and contact your Cisco technical " "support representative."
MIL/BL/BCK/B/CS/NOIFY	3-Error	Process id [dec] [chars] error code [dec]	The MFI Label Broker was unable to notify the operating system about unregistration of the specified process.	mpls-mfi	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this condition " "has been previously reported and resolved in a later release. If not " "gather the output of <CmdBold>show version<NoCmd Bold> " "<CmdBold>show running-config<NoCmd Bold> " "<CmdBold>show mpls infrastructure label-broker ldm<NoCmdBold> and contact " "your Cisco technical support representative."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MPLS-LABEL-BROKER-UNNOTIFY	3-Error	Process id [dec] [chars] error code [dec]	The MFI Label Broker was unable to notify the operating system about unregistration of the specified process.	mpls-mfi	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this condition " "has been previously reported and resolved in a later release. If not " "gather the output of <CmdBold>show version<NoCmd Bold> " "<CmdBold>show running-config<NoCmd Bold> " "<CmdBold>show mpls infrastructure label-broker ldm<NoCmdBold> and contact " "your Cisco technical support representative."
MPLS-LABEL-BROKER-UNREGIDM	3-Error	[chars]	An MPLS application requested label broker services without registering first.	mpls-mfi	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this condition " "has been previously reported and resolved in a later release. If not " "gather the output of <CmdBold>show version<NoCmd Bold> and " "<CmdBold>show running-config<NoCmd Bold> and contact your Cisco technical " "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MPLS-3-ERR-UNREGDM	3-Error	[chars]	An MPLS application requested label broker services without registering first.	mpls-mfi	"Refer to the Bug Navigator at www.cisco.com to see if this condition " "has been previously reported and resolved in a later release. If not " "gather the output of <CmdBold>show version<NoCmd Bold> and " "<CmdBold>show running-config<NoCmd Bold> and contact your Cisco technical " "support representative."
MFI-3-ERR-READUPDATE	3-Error	Read update reply message from RP has bad size: [dec]	read update message does not match the read message parse result	mpls-mfi	LOG_STD_ACTION
MFI-3-ERR-READUPDATE	3-Error	Read update reply message from RP has bad size: [dec]	read update message does not match the read message parse result	mpls-mfi	LOG_STD_ACTION
MFI-3-CLIENT_INTF	3-Error	[chars]: [hec] [hec]	Client Interface	mpls-mfi	LOG_STD_ACTION
MFI-3-CLIENT_INTF	3-Error	[chars]: [hec] [hec]	Client Interface	mpls-mfi	LOG_STD_ACTION
MFI-3-EVTLOGCAPTURE	3-Error	Event Logger Capture Error [dec] [dec]	Failure during Event Logger capture	mpls-mfi	LOG_STD_ACTION
MFI-3-EVTLOGCAPTURE	3-Error	Event Logger Capture Error [dec] [dec]	Failure during Event Logger capture	mpls-mfi	LOG_STD_ACTION
MFI-3-EVTLOGCLIENT	3-Error	Invalid client [dec]	Invalid client accessed the Event Logger	mpls-mfi	LOG_STD_ACTION
MFI-3-EVTLOGCLIENT	3-Error	Invalid client [dec]	Invalid client accessed the Event Logger	mpls-mfi	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MFI3EVILOGCONTROL	3-Error	[chars]: [dec]	General Event Logger Controller error	mpls-mfi	LOG_STD_ACTION
MFI3EVILOGCONTROL	3-Error	[chars]: [dec]	General Event Logger Controller error	mpls-mfi	LOG_STD_ACTION
MFI3EVILOGREGISTER	3-Error	Event Logger Registration Error [dec] [dec] [dec]	Failure during Event Logger client registration	mpls-mfi	LOG_STD_ACTION
MFI3EVILOGREGISTER	3-Error	Event Logger Registration Error [dec] [dec] [dec]	Failure during Event Logger client registration	mpls-mfi	LOG_STD_ACTION
MFI-3-LCPULSE	3-Error	LC pulse failed: [chars] [dec]	LC pulse request operation failed	mpls-mfi	LOG_STD_ACTION
MFI-3-LCPULSE	3-Error	LC pulse failed: [chars] [dec]	LC pulse request operation failed	mpls-mfi	LOG_STD_ACTION
MFI-3-MFICOMM	3-Error	[chars]	MFI General Communication Module	mpls-mfi	LOG_STD_ACTION
MFI-3-MFICOMM	3-Error	[chars]	MFI General Communication Module	mpls-mfi	LOG_STD_ACTION
MFI-3-MFICOMM2	3-Error	[chars]: [hec] [hec]	MFI General Communication Module	mpls-mfi	LOG_STD_ACTION
MFI-3-MFICOMM2	3-Error	[chars]: [hec] [hec]	MFI General Communication Module	mpls-mfi	LOG_STD_ACTION
MFI-3-MFICOMM3	3-Error	[chars]: [hec] [hec] [hec]	MFI General Communication Module	mpls-mfi	LOG_STD_ACTION
MFI-3-MFICOMM3	3-Error	[chars]: [hec] [hec] [hec]	MFI General Communication Module	mpls-mfi	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MFI-3-MPLS_MTU_SET	3-Error	[chars] [dec] [chars] [chars] [chars] [dec][chars]	Most drivers will be able to support baby giants and will gracefully drop packets that are too large. Certain drivers will have packet forwarding problems including data corruption.	mpls-mfi	"Please increase the interface mtu on all routers connected " "to this interface to the needed mtu size using <Cmd>mtu <Nm> <Cmd> bytes <Nm> command. "
MFI-3-MPLS_MTU_SET	3-Error	[chars] [dec] [chars] [chars] [chars] [dec][chars]	Most drivers will be able to support baby giants and will gracefully drop packets that are too large. Certain drivers will have packet forwarding problems including data corruption.	mpls-mfi	"Please increase the interface mtu on all routers connected " "to this interface to the needed mtu size using <Cmd>mtu <Nm> <Cmd> bytes <Nm> command. "
MFI-3-PNDMSGMGR	3-Error	[chars] [chars] [dec] [dec] [dec]	Only one outstanding request is allowed from same process	mpls-mfi	LOG_STD_ACTION
MFI-3-PNDMSGMGR	3-Error	[chars] [chars] [dec] [dec] [dec]	Only one outstanding request is allowed from same process	mpls-mfi	LOG_STD_ACTION
MFI-3-REDISTMGR	3-Error	Redistribution Manager: [chars] [hec]	Redistribution Manager error	mpls-mfi	LOG_STD_ACTION
MFI-3-REDISTMGR	3-Error	Redistribution Manager: [chars] [hec]	Redistribution Manager error	mpls-mfi	LOG_STD_ACTION
MFI-3-REDISTMGR2	3-Error	Redistribution Manager: [chars] [hec] [hec]	Redistribution Manager error	mpls-mfi	LOG_STD_ACTION
MFI-3-REDISTMGR2	3-Error	Redistribution Manager: [chars] [hec] [hec]	Redistribution Manager error	mpls-mfi	LOG_STD_ACTION
MFI-3-REPLYMSGSIZE	3-Error	Reply message is too large: [chars]: [dec]	read update message won't fit into xdr buffer	mpls-mfi	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MFI-3-REPLYMSGSIZE	3-Error	Reply message is too large: [chars]: [dec]	read update message won't fit into xdr buffer	mpls-mfi	LOG_STD_ACTION
MFI4MFCOMM_WARN_1	4-Warning	[chars]: [hec]	MFI General Communication Module	mpls-mfi	LOG_STD_ACTION
MFI4MFCOMM_WARN_1	4-Warning	[chars]: [hec]	MFI General Communication Module	mpls-mfi	LOG_STD_ACTION
MFI-4-NOCLIENTREQ	4-Warning	[chars] [chars]: [dec] [dec] [dec]	Client reply could not find an outstanding request	mpls-mfi	LOG_STD_ACTION
MFI-4-NOCLIENTREQ	4-Warning	[chars] [chars]: [dec] [dec] [dec]	Client reply could not find an outstanding request	mpls-mfi	LOG_STD_ACTION
MFI-4-REDISTMGR3	4-Warning	Redistribution Manager: [chars] [hec]	Redistribution Manager error	mpls-mfi	LOG_STD_ACTION
MFI-4-REDISTMGR3	4-Warning	Redistribution Manager: [chars] [hec]	Redistribution Manager error	mpls-mfi	LOG_STD_ACTION
MFB_DB3LEAKED_TABLE	3-Error	[node][node][chars] as [node] entries [node] ioitems	-	-	-
MFB_DB3LEAKED_TABLE	3-Error	[node][node][chars] as [node] entries [node] ioitems	-	-	-
MFB_DB3LEAKED_TABLE	3-Error	[node][node][chars] as [node] entries [node] ioitems	-	-	-
MFB_DB3LEAKED_TABLE	3-Error	[node][node][chars] as [node] entries [node] ioitems	-	-	-
MFB_DB3LEAKED_TABLE	3-Error	[node][node] due to discard failure	-	-	-
MFB_DB3LEAKED_TABLE	3-Error	[node][node] due to discard failure	-	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>MB_DB6</del> NAID_TBLID	6-Information	Table [node][node][chars] : [chars]	An internal software error occurred.	-	LOG_STD_ACTION
<del>MB_DB6</del> NAID_TBLID	6-Information	Table [node][node][chars] : [chars]	An internal software error occurred.	-	LOG_STD_ACTION
<del>MB_DB6</del> MOHRR_ERRCR	6-Information	[chars]	An MoFRR internal error occurred.	-	LOG_STD_ACTION
<del>MB_DB6</del> MOHRR_ERRCR	6-Information	[chars]	An MoFRR internal error occurred.	-	LOG_STD_ACTION
<del>MB_IC3</del> MBBADM_GME	3-Error	An IPC message was received with an incorrect type [dec].	-	-	-
<del>MB_IC3</del> MBBADM_GME	3-Error	An IPC message was received with an incorrect type [dec].	-	-	-
<del>MB_IC3</del> MBCREA_IPRIALD	3-Error	Failed to create local IPC port error = [chars]	An IPC port could not be created. This may prevent MFIB statistics being gathered from one or more linecards.	-	LOG_SIDSH_TECH_ACTION
<del>MB_IC3</del> MBCREA_IPRIALD	3-Error	Failed to create local IPC port error = [chars]	An IPC port could not be created. This may prevent MFIB statistics being gathered from one or more linecards.	-	LOG_SIDSH_TECH_ACTION
<del>MB_IC3</del> MBICAIEDRACK	3-Error	RP did not receive Ack for IPC message of type = [dec] error = [chars]	The Route Processor did not receive and acknowledgement for an IPC message that was sent to a linecard.	-	LOG_SIDSH_TECH_ACTION
<del>MB_IC3</del> MBICAIEDRACK	3-Error	RP did not receive Ack for IPC message of type = [dec] error = [chars]	The Route Processor did not receive and acknowledgement for an IPC message that was sent to a linecard.	-	LOG_SIDSH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MBICMBICAIIDCON	3-Error	LC in slot [dec] failed to open IPC port to RP error = [chars].	The linecard has failed to open IPC port towards the Route Processor. No MFIB statistics will be collected from this line card as a result.	-	LOG_SID_SH_TECH_ACTION
MBICMBICAIIDCON	3-Error	LC in slot [dec] failed to open IPC port to RP error = [chars].	The linecard has failed to open IPC port towards the Route Processor. No MFIB statistics will be collected from this line card as a result.	-	LOG_SID_SH_TECH_ACTION
MBICMBICNOIPCESS	3-Error	The LC failed to create a required process.	The linecard failed to create a process required to manage linecard IPC connections to the RP. No MFIB statistics will be collected from this linecards	-	LOG_SID_SH_TECH_ACTION
MBICMBICNOIPCESS	3-Error	The LC failed to create a required process.	The linecard failed to create a process required to manage linecard IPC connections to the RP. No MFIB statistics will be collected from this linecards	-	LOG_SID_SH_TECH_ACTION
MBICMBICREADYCIC	3-Error	LC failed tp allocate IPC buffer to send LC ready slot = [dec]	The linecard failed to allocate and IPC buffer for the Ready message. MFIB statistics will not be gathered from this linecard.	-	LOG_SID_REDUCE_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>MBIC</del> MBICREADY_NOC	3-Error	LC failed tp allocate IPC buffer to send LC ready slot = [dec]	The linecard failed to allocate and IPC buffer for the Ready message. MFIB statistics will not be gathered from this linecard.	-	LOG_SIDSH_TECH_ACTION
<del>MBIC</del> MBICREG_FAIL	3-Error	LC failed to register IPC port: [chars]	The route processor could not register its IPC port. No MFIB statistics will be gathered from linecards.	-	LOG_SIDSH_TECH_ACTION
<del>MBIC</del> MBICREG_FAIL	3-Error	LC failed to register IPC port: [chars]	The route processor could not register its IPC port. No MFIB statistics will be gathered from linecards.	-	LOG_SIDSH_TECH_ACTION
<del>MBIC</del> MBICSEND_READY	3-Error	LC in slot [dec] failed to send LC Ready MSG to RP error = [chars].	The linecard has failed to send a Ready message to the Route Processor. No MFIB statistics will be collected from this linecard.	-	LOG_SIDSH_TECH_ACTION
<del>MBIC</del> MBICSEND_READY	3-Error	LC in slot [dec] failed to send LC Ready MSG to RP error = [chars].	The linecard has failed to send a Ready message to the Route Processor. No MFIB statistics will be collected from this linecard.	-	LOG_SIDSH_TECH_ACTION
<del>MBIC</del> MBICRCV_FAIL	3-Error	An IPC message was received with an error status: [chars].	An IPC message was received but could not be processed due to an IPC error condition.	-	LOG_SIDSH_TECH_ACTION
<del>MBIC</del> MBICRCV_FAIL	3-Error	An IPC message was received with an error status: [chars].	An IPC message was received but could not be processed due to an IPC error condition.	-	LOG_SIDSH_TECH_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MRGMBRPALEBDCSC	3-Error	RP failed to send IPC message to linecard in slot [dec].	The Route Processor could not send an IPC message to a linecard because the slot number is incorrect.	-	LOG_SID_SH_TECH_ACTION
MRGMBRPALEBDCSC	3-Error	RP failed to send IPC message to linecard in slot [dec].	The Route Processor could not send an IPC message to a linecard because the slot number is incorrect.	-	LOG_SID_SH_TECH_ACTION
MRGMBRPALEDCAK	3-Error	LC did not receive Ack for IPC message of size = [dec] type = [dec] error = [chars].	The linecard did not receive an acknowledgement for an IPC message it sent to the Route Processor.	-	LOG_SID_SH_TECH_ACTION
MRGMBRPALEDCAK	3-Error	LC did not receive Ack for IPC message of size = [dec] type = [dec] error = [chars].	The linecard did not receive an acknowledgement for an IPC message it sent to the Route Processor.	-	LOG_SID_SH_TECH_ACTION
MRGMBRPALEDCSND	3-Error	IPC message for stats or rates failed code = [dec]	Sending of IPC message for stats or rates failed possibly because of congestion. Stats or rates values may be temporarily affected.	-	LOG_SID_RECUR_ACTION
MRGMBRPALEDCSND	3-Error	IPC message for stats or rates failed code = [dec]	Sending of IPC message for stats or rates failed possibly because of congestion. Stats or rates values may be temporarily affected.	-	LOG_SID_RECUR_ACTION
MRGMBRPALEDCRNO	3-Error	RP failed to create linecard IPC port info structure slot = [dec]	The Route Processor has failed to create an IPC port for distributed statistics collection	-	LOG_SID_SH_TECH_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>MBRMBRHALDCRNO</del>	3-Error	RP failed to create linecard IPC port info structure slot = [dec]	The Route Processor has failed to create an IPC port for distributed statistics collection	-	LOG_SIDSH_TECH_ACTION
<del>MBRMBRHALDCRNO</del>	3-Error	RP failed to open an IPC port for communication with the linecard in slot [dec].	The Route Processor has failed to open an IPC port for distributed statistics collection.	-	LOG_SIDSH_TECH_ACTION
<del>MBRMBRHALDCRNO</del>	3-Error	RP failed to open an IPC port for communication with the linecard in slot [dec].	The Route Processor has failed to open an IPC port for distributed statistics collection.	-	LOG_SIDSH_TECH_ACTION
<del>MBRMBRPNMEMORY</del>	3-Error	The RP failed to allocate an internal data structure.	The Route Processor failed to allocate memory required to managed linecard IPC connections. No MFIB statistics will be collected from linecards.	-	LOG_SIDSH_TECH_ACTION
<del>MBRMBRPNMEMORY</del>	3-Error	The RP failed to allocate an internal data structure.	The Route Processor failed to allocate memory required to managed linecard IPC connections. No MFIB statistics will be collected from linecards.	-	LOG_SIDSH_TECH_ACTION
<del>MBRMBRPNPROCESS</del>	3-Error	The RP failed to create a required process.	The Route Processor failed to create a process required to manage linecard IPC connections. No MFIB statistics will be collected from linecards.	-	LOG_SIDSH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MBRC</del> MBRPNORCSS	3-Error	The RP failed to create a required process.	The Route Processor failed to create a process required to manage linecard IPC connections. No MFIB statistics will be collected from linecards.	-	LOGSIDSHTTECHACI0N
<del>MBRC</del> MBRPRGIAL	3-Error	RP failed to register IPC port: [chars]	The route processor could not register its IPC port. No MFIB statistics will be gathered from linecards.	-	LOGSIDSHTTECHACI0N
<del>MBRC</del> MBRPRGIAL	3-Error	RP failed to register IPC port: [chars]	The route processor could not register its IPC port. No MFIB statistics will be gathered from linecards.	-	LOGSIDSHTTECHACI0N
<del>MBRC</del> MBUNRCONELMG	4-Warning	An IPC message was received with an unrecognised subtype [dec]	-	-	-
<del>MBRC</del> MBUNRCONELMG	4-Warning	An IPC message was received with an unrecognised subtype [dec]	-	-	-
<del>MBRC</del> MBIADCONDIND	3-Error	For [chars] [node][[chars]/[chars]] in table [node][node][chars]	-	-	-
<del>MBRC</del> MBIADCONDIND	3-Error	For [chars] [node][[chars]/[chars]] in table [node][node][chars]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MBM</del> BAIDCONDI <del>CK</del>	3-Error	Failure code [node]on attempt to lock connid 0x[hec] for interface [chars] of entry [chars] in table ID 0x[hec]. Actual connid is 0x[hec]	Failed to acquire an MFIB lock for a connection ID on the standby RP or on an LC. Forwarding for the affected multicast flow may be affected after an RP failover.	-	LOGSIDSHTTECHACTION
<del>MBM</del> BAIDCONDI <del>CK</del>	3-Error	Failure code [node]on attempt to lock connid 0x[hec] for interface [chars] of entry [chars] in table ID 0x[hec]. Actual connid is 0x[hec]	Failed to acquire an MFIB lock for a connection ID on the standby RP or on an LC. Forwarding for the affected multicast flow may be affected after an RP failover.	-	LOGSIDSHTTECHACTION
<del>MBM</del> BAIDCONDR <del>SRE</del>	3-Error	For [chars] [node][[chars]/[chars]] in table [node][node][chars]	-	-	-
<del>MBM</del> BAIDCONDR <del>SRE</del>	3-Error	For [chars] [node][[chars]/[chars]] in table [node][node][chars]	-	-	-
<del>MBM</del> BAIDENIR <del>CRÆ</del>	3-Error	For [chars] in table [node][node][chars]	-	-	-
<del>MBM</del> BAIDENIR <del>CRÆ</del>	3-Error	For [chars] in table [node][node][chars]	-	-	-
<del>MBM</del> BAIDENIR <del>CRÆ</del>	3-Error	For [chars] in table [node][node][chars] with [chars][node]	-	-	-
<del>MBM</del> BAIDENIR <del>CRÆ</del>	3-Error	For [chars] in table [node][node][chars] with [chars][node]	-	-	-
<del>MBM</del> BAIDDEM <del>CRÆ</del>	3-Error	For [chars] [chars] in table [node][node][chars]	-	-	-
<del>MBM</del> BAIDDEM <del>CRÆ</del>	3-Error	For [chars] [chars] in table [node][node][chars]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MBMRBAIDDIEMFCST</del>	3-Error	For [chars] [chars] in table [node][node][chars] with [chars][node]	-	-	-
<del>MBMRBAIDDIEMFCST</del>	3-Error	For [chars] [chars] in table [node][node][chars] with [chars][node]	-	-	-
<del>MBMRBAIDTABEHTR</del>	3-Error	In table [node][node][chars] with [chars][node]	The MFIB failed to configure an MRIB connection.	-	LOGSIDSHTECHACTION
<del>MBMRBAIDTABEHTR</del>	3-Error	In table [node][node][chars] with [chars][node]	The MFIB failed to configure an MRIB connection.	-	LOGSIDSHTECHACTION
<del>MBMRBAIDTABEQCN</del>	3-Error	In table [node][node][chars] with [chars][node]	An MFIB table failed to connect to the MRIB	-	LOGSIDSHTECHACTION
<del>MBMRBAIDTABEQCN</del>	3-Error	In table [node][node][chars] with [chars][node]	An MFIB table failed to connect to the MRIB	-	LOGSIDSHTECHACTION
<del>MBMRBAIDTABERCSR</del>	3-Error	In table [node][node][chars] with [chars][node]	An MFIB table failed to register with the MRIB	-	LOGSIDSHTECHACTION
<del>MBMRBAIDTABERCSR</del>	3-Error	In table [node][node][chars] with [chars][node]	An MFIB table failed to register with the MRIB	-	LOGSIDSHTECHACTION
<del>MBMRBAIDTABEUNBD</del>	3-Error	In table [node][node][chars] with [chars][node]	An MFIB table failed to disconnect from the MRIB	-	LOGSIDSHTECHACTION
<del>MBMRBAIDTABEUNBD</del>	3-Error	In table [node][node][chars] with [chars][node]	An MFIB table failed to disconnect from the MRIB	-	LOGSIDSHTECHACTION
<del>MBMRBAIDWREIND</del>	3-Error	For [chars] [node][[chars]/[chars]] in table [node][node][chars]	-	-	-
<del>MBMRBAIDWREIND</del>	3-Error	For [chars] [node][[chars]/[chars]] in table [node][node][chars]	-	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MBM <del>BA</del> LDWR <del>E</del> N <del>UM</del> BR	3-Error	For [chars] [node][[chars]/[chars]] in table [node][node][chars]	-	-	-
MBM <del>BA</del> LDWR <del>E</del> N <del>UM</del> BR	3-Error	For [chars] [node][[chars]/[chars]] in table [node][node][chars]	-	-	-
MBM <del>BE</del> NE <del>VE</del> N <del>UI</del> F <del>ND</del>	3-Error	For [chars] [chars] in table [node][node][chars]	-	-	-
MBM <del>BE</del> NE <del>VE</del> N <del>UI</del> F <del>ND</del>	3-Error	For [chars] [chars] in table [node][node][chars]	-	-	-
MBM <del>BE</del> CM <del>N</del> <del>UI</del> F <del>ND</del>	3-Error	For [chars] in table [node][node][chars]	-	-	-
MBM <del>BE</del> CM <del>N</del> <del>UI</del> F <del>ND</del>	3-Error	For [chars] in table [node][node][chars]	-	-	-
MBM <del>RE</del> BA <del>LE</del> MESS <del>A</del> GE	3-Error	In table [node][node][chars] : [chars]	MFIB has encountered an error while processing a message sent by MRIB.	-	LOG_SIDSH_TECH_ACTION
MBM <del>RE</del> BA <del>LE</del> MESS <del>A</del> GE	3-Error	In table [node][node][chars] : [chars]	MFIB has encountered an error while processing a message sent by MRIB.	-	LOG_SIDSH_TECH_ACTION
MBM <del>RE</del> BA <del>LE</del> UD <del>A</del> E	3-Error	In table [node][node][chars] : [chars]	MFIB has encountered an error while processing an MRIB database update.	-	LOG_SIDSH_TECH_ACTION
MBM <del>RE</del> BA <del>LE</del> UD <del>A</del> E	3-Error	In table [node][node][chars] : [chars]	MFIB has encountered an error while processing an MRIB database update.	-	LOG_SIDSH_TECH_ACTION
MBM <del>IR</del> RE <del>NO</del> T <del>T</del> O <del>O</del> L <del>O</del> G	3-Error	[chars] [node][dec]	An internal software error occurred.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MBPF3ANNOTOOLOG	3-Error	[chars] [node][dec]	An internal software error occurred.	-	LOG_STD_ACTION
MBPF3ABCKRURNVAD	3-Error	[chars]. [node][node]%p	An internal software error occurred.	-	LOG_STD_ACTION
MBPF3ABCKRURNVAD	3-Error	[chars]. [node][node]%p	An internal software error occurred.	-	LOG_STD_ACTION
MBPF3ENR/HANDEBAD	3-Error	[chars]. %p	An internal software error occurred.	-	LOG_STD_ACTION
MBPF3ENR/HANDEBAD	3-Error	[chars]. %p	An internal software error occurred.	-	LOG_STD_ACTION
MBPF3ENR/LOCKIAL	3-Error	[chars]. [chars] entry [node][chars] [[node][node][chars]]	-	-	-
MBPF3ENR/LOCKIAL	3-Error	[chars]. [chars] entry [node][chars] [[node][node][chars]]	-	-	-
MBPF3ENR/UNCKIAL	3-Error	[chars]. [chars] entry [node][chars] [[node][node][chars]]	-	-	-
MBPF3ENR/UNCKIAL	3-Error	[chars]. [chars] entry [node][chars] [[node][node][chars]]	-	-	-
MBPF3ANDECONSRANT	3-Error	[chars] %p	An internal software error occurred.	-	LOG_STD_ACTION
MBPF3ANDECONSRANT	3-Error	[chars] %p	An internal software error occurred.	-	LOG_STD_ACTION
MBPF3OEMDURCAFEAD	3-Error	[chars] ioitem [chars] [chars] [[node][node]/[chars]]	-	-	-
MBPF3OEMDURCAFEAD	3-Error	[chars] ioitem [chars] [chars] [[node][node]/[chars]]	-	-	-
MBPF3OEM/HANDEBAD	3-Error	[chars]. %p	An internal software error occurred.	-	LOG_STD_ACTION
MBPF3OEM/HANDEBAD	3-Error	[chars]. %p	An internal software error occurred.	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MBFI30IEMLOCK_FAL	3-Error	[chars]. [chars] ioitem [node][chars] [chars] [[node][node][chars]]	-	-	-
MBFI30IEMLOCK_FAL	3-Error	[chars]. [chars] ioitem [node][chars] [chars] [[node][node][chars]]	-	-	-
MBFI30IEMUNCK_FAL	3-Error	[chars]. [chars] ioitem [node][chars] [chars] [[node][node][chars]]	-	-	-
MBFI30IEMUNCK_FAL	3-Error	[chars]. [chars] ioitem [node][chars] [chars] [[node][node][chars]]	-	-	-
MFIB_PLTF-3-SBINIT	3-Error	Error initializing [chars] subblock data structure. [chars]	Initialization of the specified subblock data structure could not be accomplished.	-	LOG_STD_ACTION
MFIB_PLTF-3-SBINIT	3-Error	Error initializing [chars] subblock data structure. [chars]	Initialization of the specified subblock data structure could not be accomplished.	-	LOG_STD_ACTION
MBFI30IABEHNDEBD	3-Error	[chars]. %p	An internal software error occurred.	-	LOG_STD_ACTION
MBFI30IABEHNDEBD	3-Error	[chars]. %p	An internal software error occurred.	-	LOG_STD_ACTION
MBFI30IABLELOCK_FAL	3-Error	[chars]. [chars] table [node][node][node][chars]	-	-	-
MBFI30IABLELOCK_FAL	3-Error	[chars]. [chars] table [node][node][node][chars]	-	-	-
MBFI30IABLEUNCK_FAL	3-Error	[chars]. [chars] table [node][node][node][chars]	-	-	-
MBFI30IABLEUNCK_FAL	3-Error	[chars]. [chars] table [node][node][node][chars]	-	-	-
MBFI30IABRASCNMEMOV	3-Error	[dec] [dec]	Failed to allocate memory for platform transaction.	-	LOG_SID_REDUCE_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MBPERRASCDNMEMORY</del>	3-Error	[dec] [dec]	Failed to allocate memory for platform transaction.	-	LOG_SID_REDUCE_ACTION
<del>MBPERRDAESEMEMORY</del>	3-Error	[chars] [node]-> [chars] [[node][node][chars]]	Failed to allocate memory for platform transaction.	-	LOG_SID_REDUCE_ACTION
<del>MBPERRDAESEMEMORY</del>	3-Error	[chars] [node]-> [chars] [[node][node][chars]]	Failed to allocate memory for platform transaction.	-	LOG_SID_REDUCE_ACTION
<del>MBPERRDSSRCHROR</del>	3-Error	ISSU client [chars] [dec] entity [dec] failed ISSU registration: [chars]	An internal software error occurred.	-	LOG_STD_ACTION
<del>MBPERRDSSRCHROR</del>	3-Error	ISSU client [chars] [dec] entity [dec] failed ISSU registration: [chars]	An internal software error occurred.	-	LOG_STD_ACTION
<del>MBPERRNDURCAEAD</del>	7-Debug	[chars] entry [chars] [[node][node][chars]]	-	-	-
<del>MBPERRNDURCAEAD</del>	7-Debug	[chars] entry [chars] [[node][node][chars]]	-	-	-
<del>MBPERRSNAIDREEMUX</del>	3-Error	Hardware stats destructor failed to create watched boolean	Hardware stats failed to create a mutex when deleting a hardware stats structure.	-	LOG_SID_SH_TECH_ACTION
<del>MBPERRSNAIDREEMUX</del>	3-Error	Hardware stats destructor failed to create watched boolean	Hardware stats failed to create a mutex when deleting a hardware stats structure.	-	LOG_SID_SH_TECH_ACTION
<del>MBPERRSNAIDCEMUX</del>	3-Error	Hardware stats destructor failed to push event list	Hardware stats failed to hold a mutex when deleting a hardware stats structure.	-	LOG_SID_SH_TECH_ACTION
<del>MBPERRSNAIDCEMUX</del>	3-Error	Hardware stats destructor failed to push event list	Hardware stats failed to hold a mutex when deleting a hardware stats structure.	-	LOG_SID_SH_TECH_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>MSFMBSASCALDCHMSG</del>	3-Error	Linecard failed allocating ipc message buffer	The Linecard failed in allocating buffer for sending statistics	-	LOG_SIDSHTTECH_ACTION
<del>MSFMBSASCALDCHMSG</del>	3-Error	Linecard failed allocating ipc message buffer	The Linecard failed in allocating buffer for sending statistics	-	LOG_SIDSHTTECH_ACTION
<del>MSFMBSASCALDCHMSG</del>	3-Error	Linecard failed in sending msg to the Route Processor error = [chars]	The Linecard has failed in sending statistics message to the Route Processor	-	LOG_SIDSHTTECH_ACTION
<del>MSFMBSASCALDCHMSG</del>	3-Error	Linecard failed in sending msg to the Route Processor error = [chars]	The Linecard has failed in sending statistics message to the Route Processor	-	LOG_SIDSHTTECH_ACTION
<del>MSFMBSASCMLDCHMSG</del>	3-Error	Linecard failed to return counters message buffer too small.	The Linecard has failed to return counters because the minimum message size exceeds the maximum IPC buffer size.	-	LOG_SIDSHTTECH_ACTION
<del>MSFMBSASCMLDCHMSG</del>	3-Error	Linecard failed to return counters message buffer too small.	The Linecard has failed to return counters because the minimum message size exceeds the maximum IPC buffer size.	-	LOG_SIDSHTTECH_ACTION
<del>MSFMBSASRALDCHMSG</del>	3-Error	RP failed allocating ipc message buffer for linecard slot = [dec]	The Route Processor failed in allocating buffer for getting linecard statistics	-	LOG_SIDSHTTECH_ACTION
<del>MSFMBSASRALDCHMSG</del>	3-Error	RP failed allocating ipc message buffer for linecard slot = [dec]	The Route Processor failed in allocating buffer for getting linecard statistics	-	LOG_SIDSHTTECH_ACTION
<del>MSFMBSASRALDCHMSG</del>	3-Error	RP received reply with error status from linecard slot = [dec]	The Route Processor has received reply with error in statistics message from a linecard	-	LOG_SIDSHTTECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MFIB-3-STATERRMSG</del>	3-Error	RP received reply with error status from linecard slot = [dec]	The Route Processor has received reply with error in statistics message from a linecard	-	LOG_SIDSH_TECH_ACTION
<del>MFIB-3-STATERRMSG</del>	3-Error	RP failed in sending ipc msg to the linecard slot = [dec] error = [chars]	The Route Processor has failed in sending a statistics message to the Linecard	-	LOG_SIDSH_TECH_ACTION
<del>MFIB-3-STATERRMSG</del>	3-Error	RP failed in sending ipc msg to the linecard slot = [dec] error = [chars]	The Route Processor has failed in sending a statistics message to the Linecard	-	LOG_SIDSH_TECH_ACTION
MFIB-2-NOMEMORY	2-Critical	Out of memory for IP multicast MFIB. Used: [node] Free: [node]	Insufficient memory for the IP multicast forwarding\n\n information base. Multicast packets may not be properly\n\n routed.	-	LOG_SIDSH_TECH_ACTION
MFIB-2-NOMEMORY	2-Critical	Out of memory for IP multicast MFIB. Used: [node] Free: [node]	Insufficient memory for the IP multicast forwarding\n\n information base. Multicast packets may not be properly\n\n routed.	-	LOG_SIDSH_TECH_ACTION
MFIB-3-ADJ_GSB_INIT	3-Error	-	Could not initialise the adjacency GSB memory pool	-	LOG_SIDSH_TECH_ACTION
MFIB-3-ADJ_GSB_INIT	3-Error	-	Could not initialise the adjacency GSB memory pool	-	LOG_SIDSH_TECH_ACTION
<del>MFIB-3-ADJ_GSB_REGISTER</del>	3-Error	-	Could not register an adjacency GSB identifier	-	LOG_SIDSH_TECH_ACTION
<del>MFIB-3-ADJ_GSB_REGISTER</del>	3-Error	-	Could not register an adjacency GSB identifier	-	LOG_SIDSH_TECH_ACTION
<del>MFIB-3-OCE_CREATE_FAILED</del>	3-Error	Decap OCE creation failed for [chars]	An internal software error occurred.	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>MFIB3-OCE_CREATE_FAILED</del>	3-Error	Decap OCE creation failed for [chars]	An internal software error occurred.	-	LOG_STD_ACTION
MFIB3-ILLEGALARGS	3-Error	Illegal arguments - [chars]	An internal software error occurred.	-	LOG_STD_ACTION
MFIB3-ILLEGALARGS	3-Error	Illegal arguments - [chars]	An internal software error occurred.	-	LOG_STD_ACTION
<del>MFIB3-MBCTXIDPFEXCEED</del>	3-Error	-	MFIB has exceeded maximum number of switching contexts	-	LOG_SIDSHTTECH_ACTION
<del>MFIB3-MBCTXIDPFEXCEED</del>	3-Error	-	MFIB has exceeded maximum number of switching contexts	-	LOG_SIDSHTTECH_ACTION
MFIB3-MRIB_PROCESS	3-Error	[chars][chars]	The MFIB process which interfaces with the MRIB failed to start. The MFIB will be unusable.	-	LOG_SIDSHTTECH_ACTION
MFIB3-MRIB_PROCESS	3-Error	[chars][chars]	The MFIB process which interfaces with the MRIB failed to start. The MFIB will be unusable.	-	LOG_SIDSHTTECH_ACTION
MFIB-3-SBINIT	3-Error	Error initializing [chars] subblock data structure. [chars]	Initialization of the specified subblock data structure could not be accomplished.	-	LOG_STD_ACTION
MFIB-3-SBINIT	3-Error	Error initializing [chars] subblock data structure. [chars]	Initialization of the specified subblock data structure could not be accomplished.	-	LOG_STD_ACTION
MFIB3SR_ADJ_GSB_INT	3-Error	-	Could not initialise the SR adjacency GSB memory pool	-	LOG_SIDSHTTECH_ACTION
MFIB3SR_ADJ_GSB_INT	3-Error	-	Could not initialise the SR adjacency GSB memory pool	-	LOG_SIDSHTTECH_ACTION
<del>MFIB3SR_ADJ_GSB_REGISTER</del>	3-Error	-	Could not register an SR adjacency GSB identifier	-	LOG_SIDSHTTECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MFIB</del> ADICBSREGISTER	3-Error	-	Could not register an SR adjacency GSB identifier	-	LOG_SIDSH_TECH_ACTION
<del>MFIB</del> ADINCRRECTAD	3-Error	A different MFIB Service Reflect adj is being added	A different SR adjacency subblock is being added to the \ adjacency without first removing the existing one. This \ indicates that SR forwarding may no longer work correctly	-	LOG_SIDSH_TECH_ACTION
<del>MFIB</del> ADINCRRECTAD	3-Error	A different MFIB Service Reflect adj is being added	A different SR adjacency subblock is being added to the \ adjacency without first removing the existing one. This \ indicates that SR forwarding may no longer work correctly	-	LOG_SIDSH_TECH_ACTION
<del>MFIB</del> ADINCRRECTAD	3-Error	Lookup or allocation of MFIB wire failed	Lookup or allocation of MFIB wire failed	-	LOG_STD_ACTION
<del>MFIB</del> ADINCRRECTAD	3-Error	Lookup or allocation of MFIB wire failed	Lookup or allocation of MFIB wire failed	-	LOG_STD_ACTION
<del>MFIB</del> ADINCRRECTAD	6-Information	[dec] at [chars]	MFIB attempted to exceed maximum number of replicated packet header buffers	-	LOG_SIDSH_TECH_ACTION
<del>MFIB</del> ADINCRRECTAD	6-Information	[dec] at [chars]	MFIB attempted to exceed maximum number of replicated packet header buffers	-	LOG_SIDSH_TECH_ACTION
<del>MFIB</del> ADINCRRECTAD	6-Information	-	MFIB has failed in an attempt to retrieve a particular type of memory. The MFIB will continue using another memory area	-	LOG_SIDSH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MFIBPROC_FAILURE</del>	6-Information	-	MFIB has failed in an attempt to retrieve a particular type of memory. The MFIB will continue using another memory area	-	LOG_SID_SH_TECH_ACTION
MFIB6PAK_TOO_SHORT	6-Information	Packet too short from [chars] datagram size [dec] tl [dec]	The MFIB failed to set offset within packet	-	LOG_SID_SH_TECH_ACTION
<del>MFIB6PAK_TOO_SHORT</del>	6-Information	Packet too short from [chars] datagram size [dec] tl [dec]	The MFIB failed to set offset within packet	-	LOG_SID_SH_TECH_ACTION
MFIB6PAK_TTL_ONE_V4	6-Information	IPV4 Multicast Packet received with ttl <= 1	An IP non-linklocal multicast packet received with ttl 1	-	LOG_SID_NO_ACTION
<del>MFIB6PAK_TTL_ONE_V4</del>	6-Information	IPV4 Multicast Packet received with ttl <= 1	An IP non-linklocal multicast packet received with ttl 1	-	LOG_SID_NO_ACTION
MFIB6PAK_TTL_ONE_V6	6-Information	IPV6 Multicast Packet received with ttl <= 1	An IPv6 non-linklocal multicast packet received \ with ttl 1	-	LOG_SID_NO_ACTION
<del>MFIB6PAK_TTL_ONE_V6</del>	6-Information	IPV6 Multicast Packet received with ttl <= 1	An IPv6 non-linklocal multicast packet received \ with ttl 1	-	LOG_SID_NO_ACTION
MFIBERROR-3-MPLS_TE	3-Error	<del>RRMGMHLAG_TRACEBACK</del>	-	-	-
<del>MFIBERROR-3-MPLS_TE</del>	3-Error	<del>RRMGMHLAG_TRACEBACK</del>	-	-	-
MCCPREFRF_REG_FAILED	3-Error	RF registration for the MGCP RF client failed with return code %u	The MGCP RF client failed to register properly with RF. This should not occur and should be reported.	mgcp-redundancy	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MGCPR3RFREGFAILED	3-Error	RF registration for the MGCP RF client failed with return code %u	The MGCP RF client failed to register properly with RF. This should not occur and should be reported.	mgcp-redundancy	LOG_STD_ACTION
MGCPR3SENDMGFAILED	3-Error	The MGCP RF client failed to send a message to the peer system op %u	The MGCP RF client could not send a message to the peer Standby or Active system and bulk synchronization may not be complete.	mgcp-redundancy	LOG_STD_ACTION
MGCPR3SENDMGFAILED	3-Error	The MGCP RF client failed to send a message to the peer system op %u	The MGCP RF client could not send a message to the peer Standby or Active system and bulk synchronization may not be complete.	mgcp-redundancy	LOG_STD_ACTION
MGCPR2INTERNAL_CRITICAL	2-Critical	[chars]	The MGCP subsystem encountered an internal software\n\n error. The error message contains text which can be used\n\n to help identify the nature of the problem.	-	LOG_SIDSH_TECH_ACTION
MGCPR2INTERNAL_CRITICAL	2-Critical	[chars]	The MGCP subsystem encountered an internal software\n\n error. The error message contains text which can be used\n\n to help identify the nature of the problem.	-	LOG_SIDSH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MCCP3INTERNAL_ERROR	3-Error	[chars]	The MGCP subsystem encountered an internal software\n\n error. The error message contains text which can be used\n\n to help identify the nature of the problem.	-	LOG_SID_SH_TECH_ACTION
MCCP3INTERNAL_ERROR	3-Error	[chars]	The MGCP subsystem encountered an internal software\n\n error. The error message contains text which can be used\n\n to help identify the nature of the problem.	-	LOG_SID_SH_TECH_ACTION
MCCP4INTERNAL_WARNING	4-Warning	[chars]	The MGCP subsystem encountered an internal software\n\n error. The error message contains text which can be used\n\n to help identify the nature of the problem.	-	LOG_SID_SH_TECH_ACTION
MCCP4INTERNAL_WARNING	4-Warning	[chars]	The MGCP subsystem encountered an internal software\n\n error. The error message contains text which can be used\n\n to help identify the nature of the problem.	-	LOG_SID_SH_TECH_ACTION
MIC-2-RF_REG_FAIL	2-Critical	Failed to register with RF status [node]	The MIC failed to register with RF.	-	LOG_SID_NO_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MIC-2-RF_REG_FAIL	2-Critical	Failed to register with RF status [node]	The MIC failed to register with RF.	-	LOG_STD_NO_ACTION
MIC3NAIDCLIENTTYPE	3-Error	Caller specified invalid MIC client type [node]	The MIC client type is out of range.	-	LOG_STD_NO_ACTION
MIC3NAIDCLIENTTYPE	3-Error	Caller specified invalid MIC client type [node]	The MIC client type is out of range.	-	LOG_STD_NO_ACTION
MICA-1-BOOTFLASH	1-Alert	[chars]	MICA modem FIRMWARE download file is not found in BOOTFLASH.	as	"Record the reason at the end of the message and report the problem."
MICA-1-BRDCRASHED	1-Alert	Slot [dec] MICA Board Crashed Going to Recover	A MICA modem board has crashed. The router will automatically\n\ restart and reload it.	as	LOG_SID_RECUR_ACTION
MICA-1-BRDINITFAIL	1-Alert	Slot [dec] MICA Board Init Failed : [chars]	A MICA modem board has failed to reset and initialize.	as	LOG_SID_RECUR_ACTION
MICA-3-BADIMAGE	3-Error	Cannot download version [chars] on module [dec]	The block information that is necessary to download modem firmware\n\ was missing for the indicated firmware version.	-	LOG_STD_ACTION
MICA-3-BADMODEM	3-Error	Modem [dec] went bad	Run-time checks for modem health determined that the indicated modem\n\ was no longer functional due to a hardware or software error.	-	LOG_SID_RECUR_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MICA-3-BADMODENUM	3-Error	Error: Trying to access an invalid modem [dec]	The requested operation could not be accomplished because of a bad modem number. Call your technical support representative for assistance	modem-management	LOG_STD_ACTION
MICA-3-BADMODULE	3-Error	Module in socket [dec] is of unknown type board-id=[dec]	The modem module in the socket indicated by the message is\n\n inappropriate for the modem card it is on.	-	LOG_SID_SH_TECH_ACTION
MICA-3-BADMSG	3-Error	Bad msg from modem[dec]/[dec]: opcode/arg = 0x[hec]/0x[hec]	A message received from the modem was not expected by the driver.\n\n If the hardware is newer than the software this could mean a\n\n new response cannot be handled. Otherwise it is possible that\n\n data corruption has occurred in the hardware.	as	LOG_SID_SH_TECH_ACTION
MICA-3-BADPARAM	3-Error	Modem [dec]: [chars] while handling [chars].	The modem state machine received a bad parameter as indicated\n\n by the error message.	-	LOG_SID_RECUR_ACTION
MICA-3-BADRXCOUNT	3-Error	Bad count from modem [dec]: count = [dec]	A message was received from the indicated modem which had an\n\n illegal count .	-	LOG_SID_RECUR_ACTION
MICA-3-BADRXOPCODE	3-Error	Bad mail message opcode from modem [dec]: opcode = 0x[hec]	A message was received from the indicated modem which had an\n\n illegal opcode.	-	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MICA-3-BADTXOPCODE	3-Error	Bad tx mail message opcode = 0x[hec]	A message was attempted to be transmitted to the indicated\n\n modem which had an illegal opcode.	-	LOG_SID_RECUR_ACTION
MICA-3-BOARD_DL_FAIL	3-Error	Slot [dec] Boardware download failed because of [chars] all modems are marked bad	-	as	"Try powercycling the router. " LOG_SID_RECUR_ACTION
MICA-3-CONTIGUOUS	3-Error	Contiguous packet sent for transmit	A software error occurred resulting in an unexpected packet being\n\n set up for transmission and the packet was dropped.	-	LOG_SID_RECUR_ACTION
MICA-3-CRASH	3-Error	Runtime error on MICA module [dec] Hex [dec]	A software error occurred on the modem firmware executing on the\n\n indicated modem module.	-	LOG_STD_ACTION
MICA-3-INBANDUNKNOWN_OPCODE	3-Error	Inband message with unknown opcode received from modem [dec] -- payload 0x[hec] 0x[hec] 0x[hec] 0x[hec] 0x[hec] 0x[hec]	An inband message with unknown opcode was received from the \n\n indicated modem	-	LOG_SID_RECUR_ACTION
MICA-3-INBANDNAK	3-Error	Inband NAK from modem [dec] -- payload 0x[hec] 0x[hec] 0x[hec] 0x[hec] 0x[hec] 0x[hec]	A inband message sent to the indicated modem was rejected.	-	LOG_SID_RECUR_ACTION
MICA-3-INBANDNAK	3-Error	Inband NAK from modem [dec]/[dec]: opcode = 0x[hec]	A inband message sent to the indicated modem was rejected.	as	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MICA-3-INVALID_PARAM	3-Error	Mica sent invalid stack address or length MICA module [dec] addr 0x[hec] length [dec]	Runtime error occurred on MICA MICA sent invalid stack address or \n\ length.	-	LOG_STD_ACTION
MICA-3-MODEMBAD	3-Error	Modem number [dec]/[dec] is bad Error code is [hec]	Message from the MICA modem driver indicates that the modem is bad.	as	LOG_STD_ACTION
MICA-3-NAK	3-Error	NAK from modem [dec] in state [dec] -- payload 0x[hec]	A message sent to the indicated modem was rejected.	-	LOG_SID_RECUR_ACTION
MICA-3-NOBOARDWARE	3-Error	Boardware is not bundled in this IOS image	-	as	LOG_STD_ACTION
MICA-3-NOBUF	3-Error	No msg buffer for Modem[dec]/[dec] in [chars]:[dec]	The MICA software was unable to allocate a packet buffer. The system\n\ may be out of memory.	as	LOG_SID_SHIIECH_ACTION
MICA-3-NOENTRIES	3-Error	Exhausted [chars] DMA entries for module [dec]	-	-	LOG_SID_RECUR_ACTION
MICA-3-NOIDB	3-Error	No IDB structure for modem [dec]	A software structure was found in an unexpected state during\n\ run-time for the indicated modem.	-	LOG_STD_ACTION
MICA-3-NOMAILELEMENTS	3-Error	Exhausted free mail elements for modem_num [dec]. Current use: [dec]	The software structures that are used to receive and transmit\n\ messages from the MICA modems were temporarily exhausted.	-	LOG_SID_RECUR_ACTION
MICA-3-NOMEMORY	3-Error	MGRACEBACKGROSS	-	-	-
MICA-3-NOMEMORY	3-Error	MGRACEBACKGROSS	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MICA-3-NOPPPCTX	3-Error	No PPP context structure for modem [dec]	A software structure was found in an unexpected state during\n\ run-time for the indicated modem.	-	LOG_STD_ACTION
MICA-3-NORXPAK	3-Error	Static receive paktype unavailable	A software structure was found in an unexpected state during\n\ run-time for the indicated modem.	-	LOG_STD_ACTION
MICA-3-NOTPLX	3-Error	Bad vendor id from PLX 9060SD -- value was 0x[hec]	A hardware error occurred involving the PCI interface chip.	-	LOG_STD_ACTION
MICA-3-NOTTY	3-Error	No TTY structure for modem [dec]	A software structure was found in an unexpected state during\n\ run-time for the indicated modem.	-	LOG_STD_ACTION
MICA-3-PORTWARE	3-Error	Bad version [chars] portware: [chars]	Modem firmware of the indicated version bundled into the modem \n\ card image did not pass the sanity tests done to verify a \n\ firmware image.	-	LOG_STD_ACTION
MICA-3-PWDNLDTO	3-Error	Portware download timed out for module [dec]	The diagnostic message that is expected back from a MICA modem\n\ after successful download and initialization of the modem firmware\n\ was never received.	-	LOG_STD_ACTION
MICA-3-RCR	3-Error	Slot [dec] Looking for [hec] but reading [hec]	The MICA driver timed out waiting for a specific response.	as	LOG_SIDRECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MICA-3-RESTART	3-Error	Attempting restart of modem module [dec]	The indicated modem module suffered a run-time error and had to \n\ be reset and an attempt is now being made to restart the modem \n\ module.	-	LOG_SID_NO_ACTION
MICA-3-TXDESLIMIT	3-Error	Packet descriptor count [dec] exceeds transmit ring size	The packet to be transmitted needed more descriptors than are\n\ available on the transmit ring and the packet was dropped.	-	LOG_SID_RECUR_ACTION
MICA-3-UNEXPEVT	3-Error	Modem[dec]/[dec] Unexpected Event: [chars] in [chars]	An error was reported from the modem hardware which was not\n\ expected by the driver.	as	"The seriousness of this problem has not been determined.\n\ If the determination is not obvious from the error message\n\ provided from the device follow these instructions: " LOG_STD_ACTION
MICA-3-UNKNINBAND	3-Error	Unknown inband msg from modem [dec]/[dec]: opcode = 0x[hec]	An unknown inband message is received from the indicated modem.	as	LOG_SID_RECUR_ACTION
MICA-4-DCCHANRESET	4-Warning	OOB comand in Slot[dec] took too long to complete. Reseting port	The OOB port was locked because a command took too long\n\ to complete. The port was recovered by resetting internal\n\ datastructures.	as	"If there are frequent occurances of this event\n\ turn on debug modem oob for the slot and report\n\ the problem with these logs"
MICA-4-PWL_HENOTFOUND	4-Warning	Slot [dec] Module numbers [chars] are running default IOS image file [chars] not found in flash	-	as	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MICA5-BOARDWARE_RUNNING	5-Notice	Slot [dec] is running boardware version [chars][chars][chars][chars]	This is a status message to indicate the successful start-up of the on-board software boardware on one MICA modem port.	as	LOG_SID_NO_ACTION
MICA5-MODEM_RECOVERY	5-Notice	Modem [dec]/[dec] is being recovered by [chars]	Modem is consecutively failing to Connect so being recovered	as	"None"
MICA5-MODEM_RECOVERY_FAIL	5-Notice	Modem [dec]/[dec] recovery failed: [chars]	Modem recovery failed	as	"None"
MICA5-UNKNOWNMODEM	5-Notice	Unknown modem module in Slot [dec] - Modem Module [dec]	A MICA modem module has an uninitialized cookie. This can be due to a manufacturing error or more likely it is due to a problem on the modem module itself.	as	"Please seek a replacement for this modem module. For some reason this module no longer is able to identify itself" LOG_SID_NO_ACTION
MICA-6-INIT	6-Information	Modem module [dec] initialized	The indicated modem module was successfully initialized.	-	LOG_SID_NO_ACTION
MK5-1-BADRING	1-Alert	msgtxt_badringsize	An internal software error occurred.	-	"If either of these messages recur call your technical support representative for assistance."
MK5-1-INITFAIL	1-Alert	msgtxt_initfail	The hardware failed to initialize correctly.	-	"Repair or replace the controller."
MK5-1-INITNOPPRIM	1-Alert	Unit [dec] initialization failure - No CSRI_PPRM_INIT_CONF csr1 = 0x[node]x	The hardware failed to initialize correctly.	-	"Repair or replace the controller."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MK5-1-INITUERR	1-Alert	Unit [dec] initialization CSR1_UERR failure csr1=0x[node]x	The hardware failed to initialize correctly.	-	"Repair or replace the controller."
MK5-1-MEMERR	1-Alert	msgtxt_memoryerror	A network serial interface detected a hardware problem.	-	"Repair or replace the controller."
MK5-1-NOMEMORY	1-Alert	msgtxt_nomemory	The requested operation could not be accomplished because of a low memory condition.	-	"Reduce other system activity to ease memory demands. If conditions warrant upgrade to a larger memory configuration."
MK5-3-OUTENCAP	3-Error	Unit [dec] bad output packet encapsulation: 0x[hec]	An internal software error occurred.	-	"If either of these messages recur call your technical support representative for assistance."
MK5-3-PLOSTERR	3-Error	Unit [dec] provider primitive lost csr0=0x[node]x csr1=0x[node]x	A network serial interface detected a hardware problem.	-	"Repair or replace the controller."
MK5-3-PPRIMERR	3-Error	Unit [dec] unexpected provider primitive csr0=0x[node]x csr1=0x[node]x	A network serial interface detected a hardware problem.	-	"Repair or replace the controller."
MK5-3-SPURPRIMERR	3-Error	Unit [dec] spurious provider primitive interrupt csr0=0x[node]x csr1=0x[node]x	A network serial interface detected a hardware problem.	-	"Repair or replace the controller."
MK5-3-UPRIMERR	3-Error	Unit [dec] user primitive error csr0=0x[node]x csr1=0x[node]x	A network serial interface detected a hardware problem.	-	"Repair or replace the controller."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MK5-5-LINEFLAP	5-Notice	Unit [dec] excessive modem control changes	Too many modem control interrupts have been received. The port was\n\ disabled to prevent excessive use of the CPU.	-	"Check the cable on the serial port."
<del>MKA3CAK_DERIVE_FAILURE</del>	3-Error	[chars] : [node]Unable to derive CAK for RxSCI [chars] AuditSessionID [chars]	Internal failure - MKA failed to derive the Connectivity Association Key CAK from the received MSK through EAP	mka	"`debug mka trace` and `debug mka error` may help " "to diagnose the problem internal failure."
<del>MKA3CAK_DERIVE_FAILURE</del>	3-Error	[chars] : [node]Unable to derive CAK for RxSCI [chars] AuditSessionID [chars]	Internal failure - MKA failed to derive the Connectivity Association Key CAK from the received MSK through EAP	mka	"`debug mka trace` and `debug mka error` may help " "to diagnose the problem internal failure."
<del>MKA3CKN_DERIVE_FAILURE</del>	3-Error	[chars] : [node]Unable to derive CKN for RxSCI [chars] AuditSessionID [chars]	Internal failure - MKA failed to derive the Connectivity Association Key Name CKN from the received EAP	mka	"`debug mka trace` and `debug mka error` may help " "to diagnose the problem internal failure."
<del>MKA3CKN_DERIVE_FAILURE</del>	3-Error	[chars] : [node]Unable to derive CKN for RxSCI [chars] AuditSessionID [chars]	Internal failure - MKA failed to derive the Connectivity Association Key Name CKN from the received EAP	mka	"`debug mka trace` and `debug mka error` may help " "to diagnose the problem internal failure."
<del>MKA3DNEAUFMGR_HANDLE</del>	3-Error	[chars] Received a new SESSION_START request with Auth-Mgr Handle	MKA received a SESSION_START request from the IOS Authentication Manager Auth-Mgr with an Auth-Mgr Handle	mka	"File a defect for the dot1x-ios component."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MKA</del> <del>DIAG</del> <del>AUTH</del> <del>MG</del> <del>HANDLE</del>	3-Error	[chars] Received a new SESSION_START request with Auth-Mgr Handle	MKA received a SESSION_START request from the IOS Authentication Manager Auth-Mgr with an Auth-Mgr Handle	mka	"File a defect for the dot1x-ios component."
<del>MKA</del> <del>IS</del> <del>KEY</del> <del>GEN</del> <del>FAILURE</del>	3-Error	[chars] : [node]Unable to generate MACsec Hash Key AN [node]for RxSCI [chars]	Internal failure - MKA failed to generate the MACsec Hash Key for the MKA Session with the given RxSCI Audit Session ID and CKN. The Hash Key is used by MACsec to authenticate frames i.e. provide integrity checking support and is installed in the Rx/Tx	mka	"`debug mka trace` and `debug mka error` may help " "to diagnose the problem internal failure."
<del>MKA</del> <del>IS</del> <del>KEY</del> <del>GEN</del> <del>FAILURE</del>	3-Error	[chars] : [node]Unable to generate MACsec Hash Key AN [node]for RxSCI [chars]	Internal failure - MKA failed to generate the MACsec Hash Key for the MKA Session with the given RxSCI Audit Session ID and CKN. The Hash Key is used by MACsec to authenticate frames i.e. provide integrity checking support and is installed in the Rx/Tx	mka	"`debug mka trace` and `debug mka error` may help " "to diagnose the problem internal failure."
<del>MKA</del> <del>IS</del> <del>CK</del> <del>DER</del> <del>FAILURE</del>	3-Error	[chars] : [node]Unable to derive ICK for RxSCI [chars] AuditSessionID [chars]	Internal failure - MKA failed to derive the Integrity Check Value ICV Key ICK from the derived CAK & CKN	mka	"`debug mka trace` and `debug mka error` may help " "to diagnose the problem internal failure."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MKA3ICK_DERIVE_FAILURE	3-Error	[chars] : [node]Unable to derive ICK for RxSCI [chars] AuditSessionID [chars]	Internal failure - MKA failed to derive the Integrity Check Value ICV Key ICK from the derived CAK & CKN	mka	"`debug mka trace` and `debug mka error` may help " "to diagnose the problem internal failure."
MKA3INTERNAL_ERR	3-Error	[chars] : [node]Internal MKA Error - failed to [chars] for RxSCI [chars]	The MKA Session identified by the given RxSCI Audit Session ID and CKN encountered an internal error specified by the given action.	mka	"Provide the traceback and if possible " "`debug mka trace` and `debug mka error` output " "internal error."
MKA3INTERNAL_ERR	3-Error	[chars] : [node]Internal MKA Error - failed to [chars] for RxSCI [chars]	The MKA Session identified by the given RxSCI Audit Session ID and CKN encountered an internal error specified by the given action.	mka	"Provide the traceback and if possible " "`debug mka trace` and `debug mka error` output " "internal error."
<del>MKA3ANNOUNCE_PARAMSET</del>	3-Error	[chars] : [node]Announcement Paramter Set was invalid in a MKPDU for	MKA failed to process the Announcement Parameter Set of a received MKPDU.	mka	"No action required internal error."
<del>MKA3ANNOUNCE_PARAMSET</del>	3-Error	[chars] : [node]Announcement Paramter Set was invalid in a MKPDU for	MKA failed to process the Announcement Parameter Set of a received MKPDU.	mka	"No action required internal error."
<del>MKA3ANNOUNCE_PARAMSET</del>	3-Error	[chars] : [node]Basic Paramter Set was invalid in a MKPDU for	MKA failed to process the Basic Parameter Set of a received MKPDU.	mka	"No action required internal error."
<del>MKA3ANNOUNCE_PARAMSET</del>	3-Error	[chars] : [node]Basic Paramter Set was invalid in a MKPDU for	MKA failed to process the Basic Parameter Set of a received MKPDU.	mka	"No action required internal error."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MKA-3-INVALID_CA	3-Error	CA entry not found while [chars].	MKA was unable to find the CA entry during the indicated action. This is an internal error.	mka	"Provide the traceback and if possible " ``debug mka trace` and `debug mka error` output " "internal error."
MKA-3-INVALID_CA	3-Error	CA entry not found while [chars].	MKA was unable to find the CA entry during the indicated action. This is an internal error.	mka	"Provide the traceback and if possible " ``debug mka trace` and `debug mka error` output " "internal error."
MKA-3-INVALID_CAK	3-Error	[chars] : [node]CAK was invalid while [chars] for RxSCI [chars]	The MKA Session identified by the given RxSCI Audit Session ID and CKN failed to perform the indicated action because of an invalid CAK i.e. zero CAK.	mka	"Provide the traceback and if possible " ``debug mka trace` and `debug mka error` output " "internal error."
MKA-3-INVALID_CAK	3-Error	[chars] : [node]CAK was invalid while [chars] for RxSCI [chars]	The MKA Session identified by the given RxSCI Audit Session ID and CKN failed to perform the indicated action because of an invalid CAK i.e. zero CAK.	mka	"Provide the traceback and if possible " ``debug mka trace` and `debug mka error` output " "internal error."
MKA-3-INVALID_CKN	3-Error	[chars] : [node]CKN was invalid while [chars] for RxSCI [chars]	The MKA Session identified by the given RxSCI and Audit Session ID failed to perform the indicated action because of an invalid CKN i.e. zero CKN.	mka	"Provide the traceback and if possible " ``debug mka trace` and `debug mka error` output " "internal error."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MKA-3-INVALID_CKN	3-Error	[chars] : [node]CKN was invalid while [chars] for RxSCI [chars]	The MKA Session identified by the given RxSCI and Audit Session ID failed to perform the indicated action because of an invalid CKN i.e. zero CKN.	mka	"Provide the traceback and if possible " " "debug mka trace` and `debug mka error` output " "internal error."
<del>MKA-3-INVALID_SAK_PARAMSET</del>	3-Error	[chars] : [node]Distributed SAK Paramter Set was invalid in a MKPDU	MKA failed to process the Distributed SAK Parameter Set of a received MKPDU.	mka	"No action required internal error."
<del>MKA-3-INVALID_SAK_PARAMSET</del>	3-Error	[chars] : [node]Distributed SAK Paramter Set was invalid in a MKPDU	MKA failed to process the Distributed SAK Parameter Set of a received MKPDU.	mka	"No action required internal error."
<del>MKA-3-INVALID_PARAMSET</del>	3-Error	[chars] : [node]Unknown Parameter Set in a MKPDU for RxSCI [chars]	MKA Session failed to process an Unknown Parameter Set of a received MKPDU.	mka	"No action required internal error."
<del>MKA-3-INVALID_PARAMSET</del>	3-Error	[chars] : [node]Unknown Parameter Set in a MKPDU for RxSCI [chars]	MKA Session failed to process an Unknown Parameter Set of a received MKPDU.	mka	"No action required internal error."
<del>MKA-3-INVALID_PEERLIST_PARAMSET</del>	3-Error	[chars] : [node]Peer List Paramter Set was invalid in a MKPDU for	MKA failed to process the SAK-Use Parameter Set of a received MKPDU.	mka	"No action required internal error."
<del>MKA-3-INVALID_PEERLIST_PARAMSET</del>	3-Error	[chars] : [node]Peer List Paramter Set was invalid in a MKPDU for	MKA failed to process the SAK-Use Parameter Set of a received MKPDU.	mka	"No action required internal error."
<del>MKA-3-INVALID_SAK_USE_PARAMSET</del>	3-Error	[chars] : [node]SAK-Use Paramter Set was invalid in a MKPDU for	MKA failed to process the SAK-Use Parameter Set of a received MKPDU.	mka	"No action required internal error."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MKA3INVALID_PARAMSET	3-Error	[chars] : [node]SAK-Use Paramter Set was invalid in a MKPDU for	MKA failed to process the SAK-Use Parameter Set of a received MKPDU.	mka	"No action required internal error."
MKA3INVALID_SESSION	3-Error	MKA Session entry not found while [chars].	MKA was unable to find the MKA Session entry during the indicated action. This is an internal error.	mka	"Provide the traceback and if possible " ``debug mka trace` and `debug mka error` output " "internal error."
MKA3INVALID_SESSION	3-Error	MKA Session entry not found while [chars].	MKA was unable to find the MKA Session entry during the indicated action. This is an internal error.	mka	"Provide the traceback and if possible " ``debug mka trace` and `debug mka error` output " "internal error."
MKA-3-INVALID_VP	3-Error	VP entry not found while [chars].	MKA was unable to find the VP entry during the indicated action. This is an internal error.	mka	"Provide the traceback and if possible " ``debug mka trace` and `debug mka error` output " "internal error."
MKA-3-INVALID_VP	3-Error	VP entry not found while [chars].	MKA was unable to find the VP entry during the indicated action. This is an internal error.	mka	"Provide the traceback and if possible " ``debug mka trace` and `debug mka error` output " "internal error."
MKA3KEK_DERIVE_FAILURE	3-Error	[chars] : [node]Unable to derive KEK for RxSCI [chars] AuditSessionID [chars]	Internal failure - MKA failed to derive the Key Encrypting Key KEK from the derived CAK & CKN	mka	"`debug mka trace` and `debug mka error` may help " "to diagnose the problem internal failure."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MKA <del>IK</del> <u>KEK</u> <del>DERIVE</del> <u>FAILURE</u>	3-Error	[chars] : [node]Unable to derive KEK for RxSCI [chars] AuditSessionID [chars]	Internal failure - MKA failed to derive the Key Encrypting Key KEK from the derived CAK & CKN	mka	"` debug mka trace` and ` debug mka error` may help " "to diagnose the problem internal failure."
MKA <del>IK</del> <u>ICV</u> <del>VERIFY</del> <u>FAILURE</u>	3-Error	[chars] : [node]ICV Verification of a MKPDU failed for RxSCI [chars]	The ICV Verification failed of MKPDU received for the MKA Session Identified by the given RxSCI Audit Session ID and CKN failed. The reason for the same could be the following: - The CAK is misconfigured on the RxSCI in case of PSK\n - The MKPDU data is tampered during transmission.	mka	"Check the configured CAK on RxSCI" "To validate MKPDU data tampering `debug mka " "{ packet }` at both side may help to diagnose " "the problem."
MKA <del>IK</del> <u>ICV</u> <del>VERIFY</del> <u>FAILURE</u>	3-Error	[chars] : [node]ICV Verification of a MKPDU failed for RxSCI [chars]	The ICV Verification failed of MKPDU received for the MKA Session Identified by the given RxSCI Audit Session ID and CKN failed. The reason for the same could be the following: - The CAK is misconfigured on the RxSCI in case of PSK\n - The MKPDU data is tampered during transmission.	mka	"Check the configured CAK on RxSCI" "To validate MKPDU data tampering `debug mka " "{ packet }` at both side may help to diagnose " "the problem."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MKA_MKPDU_VALIDATION_FAILURE	3-Error	[chars] : [node]Validation of a MKPDU failed for RxSCI [chars]	A MKPDU received for the MKA Session identified by the give RxSCI Audit Session ID and CKN failed one or more of the following validation checks: - MKPDU Integrity - Packet length reported equals actual packet length - Valid CKN Algorithm Agility - ICV Verification - Correct paramset order & existence of MKA payloads - MI verification if peers exist - MN verification if peers exist.	mka	"`debug mka { packet   trace   error }` may help to " "diagnose the problem. Also any packet traces and " "captures may help too internal failure."
MKA_MKPDU_VALIDATION_FAILURE	3-Error	[chars] : [node]Validation of a MKPDU failed for RxSCI [chars]	A MKPDU received for the MKA Session identified by the give RxSCI Audit Session ID and CKN failed one or more of the following validation checks: - MKPDU Integrity - Packet length reported equals actual packet length - Valid CKN Algorithm Agility - ICV Verification - Correct paramset order & existence of MKA payloads - MI verification if peers exist - MN verification if peers exist.	mka	"`debug mka { packet   trace   error }` may help to " "diagnose the problem. Also any packet traces and " "captures may help too internal failure."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MKA_SAK_CIPHER_MISMATCH</del>	3-Error	[chars] : [node]Received [chars] cipher it is not configured	The received cipher is not configured or supported	mka	"If received cipher is supported change configuration " "at receive side or change cipher at KS to include " "the supported cipher"
<del>MKA_SAK_CIPHER_MISMATCH</del>	3-Error	[chars] : [node]Received [chars] cipher it is not configured	The received cipher is not configured or supported	mka	"If received cipher is supported change configuration " "at receive side or change cipher at KS to include " "the supported cipher"
<del>MKA_SAK_CNTR_FAILURE</del>	3-Error	[chars] : [node]Unable to generate SAK AN [node]KN [node]for RxSCI [chars]	Internal failure - MKA failed to generate the Secure Association Key SAK from the derived CAK & given Key	mka	"`debug mka trace` and `debug mka error` may help " "to diagnose the problem internal failure."
<del>MKA_SAK_CNTR_FAILURE</del>	3-Error	[chars] : [node]Unable to generate SAK AN [node]KN [node]for RxSCI [chars]	Internal failure - MKA failed to generate the Secure Association Key SAK from the derived CAK & given Key	mka	"`debug mka trace` and `debug mka error` may help " "to diagnose the problem internal failure."
<del>MKA_SAK_LATEST_AN_IN_USE</del>	3-Error	[chars] : [node]Peer Latest AN [node]is not in USE	The Peer Latest AN is not in USE while processing SAK USE Paramset of MKPDU received for the MKA Session Identified by the given RxSCI Audit Session ID and CKN . The reason for the same could be the following: - The last Generated SAK has been dropped due to drops in the network	mka	"Check the drops in the network"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MKA</del> KSLASANNONE	3-Error	[chars] : [node]Peer Latest AN [node]is not in USE	The Peer Latest AN is not in USE while processing SAK USE Paramset of MKPDU received for the MKA Session Identified by the given RxSCI Audit Session ID and CKN . The reason for the same could be the following: - The last Generated SAK has been dropped due to drops in the network	mka	"Check the drops in the network"
<del>MKA</del> KSLASKNMCH	3-Error	[chars] : [node]Peer Latest KN [node]does not match with Latest Local KN [node]	The Peer Latest KN does not match with KS Latest KN while processing SAK USE Paramset of MKPDU received for the MKA Session Identified by the given RxSCI Audit Session ID and CKN . The reason for the same could be the following: - The last Generated SAK has been dropped due to drops in the network	mka	"Check the drops in the network"
<del>MKA</del> KSLASKNMCH	3-Error	[chars] : [node]Peer Latest KN [node]does not match with Latest Local KN [node]	The Peer Latest KN does not match with KS Latest KN while processing SAK USE Paramset of MKPDU received for the MKA Session Identified by the given RxSCI Audit Session ID and CKN . The reason for the same could be the following: - The last Generated SAK has been dropped due to drops in the network	mka	"Check the drops in the network"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MKA</del> <del>UNEXPECTED_MESSAGE</del>	3-Error	Received unexpected message during MKA HA process	Undefined message event encountered.	mka	"No action required internal error."
<del>MKA</del> <del>UNEXPECTED_MESSAGE</del>	3-Error	Received unexpected message during MKA HA process	Undefined message event encountered.	mka	"No action required internal error."
<del>MKA</del> <del>ADM</del> <del>MACSEC_CAPABILITY</del>	4-Warning	[chars] : [node]Terminating MKA Session because no peers had the	MKA Session was terminated because no peers in the CA had a high enough MACsec Capability value set in MKPDUs received to use SAKs distributed by this Key Server. The required minimum MACsec Capability is dictated by the configured MACsec options.	mka	"Check the MACsec Capability of the peers' hardware " "or lower the requirements for MACsec Capability by " "changing the MACsec configuration for this " "interface."
<del>MKA</del> <del>ADM</del> <del>MACSEC_CAPABILITY</del>	4-Warning	[chars] : [node]Terminating MKA Session because no peers had the	MKA Session was terminated because no peers in the CA had a high enough MACsec Capability value set in MKPDUs received to use SAKs distributed by this Key Server. The required minimum MACsec Capability is dictated by the configured MACsec options.	mka	"Check the MACsec Capability of the peers' hardware " "or lower the requirements for MACsec Capability by " "changing the MACsec configuration for this " "interface."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MKA</del> <del>KE</del> <del>PAIR</del> <del>TIME</del> <del>OUT</del>	4-Warning	[chars] : [node]Peer has stopped sending MKPDUs for RxSCI [chars]	For a Pairwise CA i.e. one peer MKA has not received a MKPDU from its Live Peer for at least 6 seconds so the MKA Session will be terminated. If this is a Group CA i.e. multiple peers MKA has not received a MKPDU from	mka	"Check connection to peer and if peer is still up " "and responding. Also check for MKPDU Validation " "Failures."
<del>MKA</del> <del>KE</del> <del>PAIR</del> <del>TIME</del> <del>OUT</del>	4-Warning	[chars] : [node]Peer has stopped sending MKPDUs for RxSCI [chars]	For a Pairwise CA i.e. one peer MKA has not received a MKPDU from its Live Peer for at least 6 seconds so the MKA Session will be terminated. If this is a Group CA i.e. multiple peers MKA has not received a MKPDU from	mka	"Check connection to peer and if peer is still up " "and responding. Also check for MKPDU Validation " "Failures."
<del>MKA</del> <del>MAC</del> <del>SEC</del> <del>OPEN</del> <del>MATCH</del>	4-Warning	[chars] : [node]Lower strength MKA-cipher than macsec-cipher for RxSCI [chars]	Higher strength Macsec Cipher is configured than the MKA cipher. This is not recommended from a security purpose.	mka	"Review the MKA cipher config and the macsec cipher " "config and ensure that the MKA cipher is either of " "the same or higher strength than macsec cipher"
<del>MKA</del> <del>MAC</del> <del>SEC</del> <del>OPEN</del> <del>MATCH</del>	4-Warning	[chars] : [node]Lower strength MKA-cipher than macsec-cipher for RxSCI [chars]	Higher strength Macsec Cipher is configured than the MKA cipher. This is not recommended from a security purpose.	mka	"Review the MKA cipher config and the macsec cipher " "config and ensure that the MKA cipher is either of " "the same or higher strength than macsec cipher"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MKA4SAK_TRANSMIT	4-Warning	[chars] : [node]Installing new TxSA AN [node]but not all peers have	For a Pairwise CA i.e. one peer MKA acting as the Key Server has distributed a SAK for use in MACsec to a peer with the minimum required MACsec Capability but has not received a SAK-Use payload back from the peer indicating that the peer is receiving using the newly distributed SAK withing 6 seconds MKA Life Time so MKA will go	mka	"Check connection to peers & for any MKPDU " "Validation errors. Also check the MKA/MACsec " "implementation on the peers' systems."
MKA4SAK_TRANSMIT	4-Warning	[chars] : [node]Installing new TxSA AN [node]but not all peers have	For a Pairwise CA i.e. one peer MKA acting as the Key Server has distributed a SAK for use in MACsec to a peer with the minimum required MACsec Capability but has not received a SAK-Use payload back from the peer indicating that the peer is receiving using the newly distributed SAK withing 6 seconds MKA Life Time so MKA will go	mka	"Check connection to peers & for any MKPDU " "Validation errors. Also check the MKA/MACsec " "implementation on the peers' systems."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MKA_SESSION_UNSECURED	4-Warning	[chars] : [node]MKA Session was stopped by [chars] and not secured for RxSCI [chars]	The MKA Session identified by the RxSCI Audit Session ID and CKN given was unable to be secured before being terminated. Possible reasons include no MACsec support on the specified interface invalid MACsec configuration for the specified interface the peer identified by the given RxSCI not having enough MACsec Capability Network drops indicating MKPDU loss and keepalive timeout or other internal failure prior to the establishment of Rx/Tx Secure Channels and installation of Rx/Tx Secure Associations in MACsec.	mka	"If the MKA Session should have been secured check " "for other MKA system logs that indicate the reason " "for not being secured. Check MACsec support on " "the interface & peer MACsec configuration and " "connectivity. `debug mka trace` and " "`debug mka error` may help to diagnose the " "problem."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MKA-5-SESSION_UNSECURED	4-Warning	[chars] : [node]MKA Session was stopped by [chars] and not secured for RxSCI [chars]	The MKA Session identified by the RxSCI Audit Session ID and CKN given was unable to be secured before being terminated. Possible reasons include no MACsec support on the specified interface invalid MACsec configuration for the specified interface the peer identified by the given RxSCI not having enough MACsec Capability Network drops indicating MKPDU loss and keepalive timeout or other internal failure prior to the establishment of Rx/Tx Secure Channels and installation of Rx/Tx Secure Associations in MACsec.	mka	"If the MKA Session should have been secured check " "for other MKA system logs that indicate the reason " "for not being secured. Check MACsec support on " "the interface & peer MACsec configuration and " "connectivity. `debug mka trace` and " " `debug mka error` may help to diagnose the " "problem."
MKA-5-CAK_REKEY	5-Notice	[chars] : [node]MKA Session is beginning a CAK Rekey [chars] for RxSCI [chars]	MKA has received a request to perform a CAK Rekey for the MKA Session identified by the given RxSCI Audit Session ID and CKN. A new key is available either from keychain infra or Authentication manager new MSK & EAP Session ID received from EAP Authentication	mka	"No action required normal operation."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MKA-5-CAK_REKEY	5-Notice	[chars] : [node]MKA Session is beginning a CAK Rekey [chars] for RxSCI [chars]	MKA has received a request to perform a CAK Rekey for the MKA Session identified by the given RxSCI Audit Session ID and CKN. A new key is available either from keychain infra or Authentication manager new MSK & EAP Session ID received from EAP Authentication	mka	"No action required normal operation."
MKA-5-SESSION_SECURED	5-Notice	[chars] : [node]MKA Session was secured for RxSCI [chars]	MKA was able to secure the MKA Session identified by the Audit Session ID & CKN given with the peer identified by the RxSCI given. SESSION_SECURED happens in a successful response to a SESSION_START from the IOS Authentication Manager only after MACsec Secure Channels and Secure Associations have been installed and enabled for both Rx and Tx.	mka	"No action required normal operation."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MKA <del>SESSION_SECURED</del>	5-Notice	[chars] : [node]MKA Session was secured for RxSCI [chars]	MKA was able to secure the MKA Session identified by the Audit Session ID & CKN given with the peer identified by the RxSCI given. SESSION_SECURED happens in a successful response to a SESSION_START from the IOS Authentication Manager only after MACsec Secure Channels and Secure Associations have been installed and enabled for both Rx and Tx.	mka	"No action required normal operation."
MKA <del>SESSION_SECURED_FALLBACK</del>	5-Notice	[chars] : [node]MKA Session was secured with the fallback CA for RxSCI [chars]	MKA was able to secure the MKA Session identified by the Audit Session ID & CKN given with the peer identified by the RxSCI given. SESSION_SECURED happens in a successful response to a SESSION_START from the IOS Authentication Manager only after MACsec Secure Channels and Secure Associations have been installed and enabled for both Rx and Tx.	mka	"No action required normal operation."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MKA-5-SESSION_SECURED_FALLBACK	5-Notice	[chars] : [node]MKA Session was secured with the fallback CA for RxSCI [chars]	MKA was able to secure the MKA Session identified by the Audit Session ID & CKN given with the peer identified by the RxSCI given. SESSION_SECURED happens in a successful response to a SESSION_START from the IOS Authentication Manager only after MACsec Secure Channels and Secure Associations have been installed and enabled for both Rx and Tx.	mka	"No action required normal operation."
MKA-5-SESSION_START	5-Notice	[chars] : [node]MKA Session started for RxSCI [chars] AuditSessionID [chars]	The IOS Authentication Manager has requested for MKA to begin a new MKA Session for a peer that has successfully authenticated with the RxSCI and Audit Session ID given. MKA will begin initialization and setup by creating a new Virtual Port for the given interface & Virtual Port ID. Also all keying information specific to the MSK and EAP Session ID received will be derived.	mka	"No action required normal operation."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MKA-5-SESSION_START	5-Notice	[chars] : [node]MKA Session started for RxSCI [chars] AuditSessionID [chars]	The IOS Authentication Manager has requested for MKA to begin a new MKA Session for a peer that has successfully authenticated with the RxSCI and Audit Session ID given. MKA will begin initialization and setup by creating a new Virtual Port for the given interface & Virtual Port ID. Also all keying information specific to the MSK and EAP Session ID received will be derived.	mka	"No action required normal operation."
MKA-5-SESSION_STOP	5-Notice	[chars] : [node]MKA Session stopped by [chars] for RxSCI [chars] AuditSessionID [chars]	After being secured the MKA Session identified by the RxSCI Audit Session ID and CKN given was ended or terminated. Possible reasons include using the `clear auth sess` or `clear mka {all   sess}` command keepalive timeout reauth failure or other internal failure.	mka	"If the MKA Session was not supposed to terminate " "check the command history or other system logs " "to find out the specific termination reason. " "`debug mka trace` and `debug mka error` may help " "diagnose the problem if the MKA Session was not " "supposed to terminate. Otherwise no action " "required normal operation."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MKA-5SESSION_STOP	5-Notice	[chars] : [node]MKA Session stopped by [chars] for RxSCI [chars] AuditSessionID [chars]	After being secured the MKA Session identified by the RxSCI Audit Session ID and CKN given was ended or terminated. Possible reasons include using the `clear auth sess` or `clear mka {all   sess}` command keepalive timeout reauth failure or other internal failure.	mka	"If the MKA Session was not supposed to terminate " "check the command history or other system logs " "to find out the specific termination reason. " "`debug mka trace` and `debug mka error` may help " "diagnose the problem if the MKA Session was not " "supposed to terminate. Otherwise no action " "required normal operation."
MKA-6CAK_REKEY_SUCCESS	6-Information	[chars] : [node]MKA Session CAK rekey is successful for RxSCI [chars]	MKA was able to Rekey the MKA Session identified by the Audit Session ID & CKN given for the peer identified by the RxSCI given successfully. CAK_REKEY_SUCCESS happens in a successful response to a SESSION_REAUTH from the IOS Authentication manager only after the MKA Session has seamlessly switched to a new CAK/SAK after rekeying the CAK & SAK.	mka	"No action required normal operation."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MKA-6-CAK_REKEY_SUCCESS	6-Information	[chars] : [node]MKA Session CAK rekey is successful for RxSCI [chars]	MKA was able to Rekey the MKA Session identified by the Audit Session ID & CKN given for the peer identified by the RxSCI given successfully. CAK_REKEY_SUCCESS happens in a successful response to a SESSION_REAUTH from the IOS Authentication manager only after the MKA Session has seamlessly switched to a new CAK/SAK after rekeying the CAK & SAK.	mka	"No action required normal operation."
MKA-6-SAK_REKEY	6-Information	[chars] : [node]MKA Session is beginning a SAK Rekey	MKA has received a request to perform a SAK Rekey for the MKA Session identified by the given RxSCI Audit Session ID and CKN. The current Latest Association Number AN and Key Number KN correspond to the	mka	"No action required normal operation."
MKA-6-SAK_REKEY	6-Information	[chars] : [node]MKA Session is beginning a SAK Rekey	MKA has received a request to perform a SAK Rekey for the MKA Session identified by the given RxSCI Audit Session ID and CKN. The current Latest Association Number AN and Key Number KN correspond to the	mka	"No action required normal operation."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MKA_SAK_REKEY_KN_MACH	6-Information	[chars] : [node]MKA Session is beginning a SAK Rekey as the KN Mismatched	MKA KS has received a request to perform a SAK Rekey for the MKA Session identified by the given RxSCI Audit Session ID and CKN. The current Latest Association Number AN and Key Number KN correspond to the	mka	"No action required normal operation."
MKA_SAK_REKEY_KN_MACH	6-Information	[chars] : [node]MKA Session is beginning a SAK Rekey as the KN Mismatched	MKA KS has received a request to perform a SAK Rekey for the MKA Session identified by the given RxSCI Audit Session ID and CKN. The current Latest Association Number AN and Key Number KN correspond to the	mka	"No action required normal operation."
MKA_SAK_REKEY_SUCCESS	6-Information	[chars] : [node]MKA Session successfully completed a SAK Rekey	MKA has successfully performed a SAK Rekey for the MKA Session identified by the given RxSCI Audit Session ID and CKN. The new Latest Association Number AN and Key Number KN correspond to the new Rx/Tx	mka	"No action required normal operation."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MKA_SAK_REKEY_SUCCESS	6-Information	[chars] : [node]MKA Session successfully completed a SAK Rekey	MKA has successfully performed a SAK Rekey for the MKA Session identified by the given RxSCI Audit Session ID and CKN. The new Latest Association Number AN and Key Number KN correspond to the new Rx/Tx	mka	"No action required normal operation."
MDROENIERNAL_ERR	3-Error	[chars]	Internal error	ipmulticast	LOG_SID_RECUR_ACTION
MDROENIERNAL_ERR	3-Error	[chars]	Internal error	ipmulticast	LOG_SID_RECUR_ACTION
MLD_PROT3PAK_ERR	3-Error	An internal error occured while processing a packet queue	Managed queue event received without a packet. Internal Error	ipmulticast	LOG_SID_RECUR_ACTION
MLD_PROT3PAK_ERR	3-Error	An internal error occured while processing a packet queue	Managed queue event received without a packet. Internal Error	ipmulticast	LOG_SID_RECUR_ACTION
MDROESHUTDOWNERR	3-Error	Error in [chars] : [chars]	Internal error	ipmulticast	LOG_SID_RECUR_ACTION
MDROESHUTDOWNERR	3-Error	Error in [chars] : [chars]	Internal error	ipmulticast	LOG_SID_RECUR_ACTION
MDROESTARTUPERR	3-Error	Unable to start to MLD process	Internal error	ipmulticast	LOG_SID_RECUR_ACTION
MDROESTARTUPERR	3-Error	Unable to start to MLD process	Internal error	ipmulticast	LOG_SID_RECUR_ACTION
MLD_PROT3TABLE_ERR	3-Error	[chars]	Errors related to IGMP table creation and management	ipmulticast	LOG_SID_RECUR_ACTION
MLD_PROT3TABLE_ERR	3-Error	[chars]	Errors related to IGMP table creation and management	ipmulticast	LOG_SID_RECUR_ACTION
MDROF4IMIT_REACHED	4-Warning	State limit reached report on [chars] ignored for [chars]	MLD report ignored because state limit was reached.	ipmulticast	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MDPROT4MREACHD	4-Warning	State limit reached report on [chars] ignored for [chars]	MLD report ignored because state limit was reached.	ipmulticast	LOG_SID_NO_ACTION
MDPROT4SNDRESUMNO	4-Warning	Returning from resuming suspended IGMP/MLD context.	A loop in IGMP/MLD code was temporarily suspended to avoid hogging the CPU. When it was time to resume the loop the system was unable to do so. Possible reasons for this are that a VRF was deleted or an interface was deleted while the loop was suspended.	ipmulticast	LOG_SID_NO_ACTION
MDPROT4SNDRESUMNO	4-Warning	Returning from resuming suspended IGMP/MLD context.	A loop in IGMP/MLD code was temporarily suspended to avoid hogging the CPU. When it was time to resume the loop the system was unable to do so. Possible reasons for this are that a VRF was deleted or an interface was deleted while the loop was suspended.	ipmulticast	LOG_SID_NO_ACTION
MDPROT6IDB_ENABLE	6-Information	Interface [chars] does not support multicast not enabled	IGMP/MLD not enabled on an interface that does not support mcast	ipmulticast	LOG_SID_NO_ACTION
MDPROT6IDB_ENABLE	6-Information	Interface [chars] does not support multicast not enabled	IGMP/MLD not enabled on an interface that does not support mcast	ipmulticast	LOG_SID_NO_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MDSNOOP_ISSU2ERR	2-Critical	MLD Snooping ISSU client failed to get buffer for message. Error: [dec] [chars]	The MLD Snooping ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	mld-snooping	"show logging and show checkpoint client"
MDSNOOP_ISSU2ERR	2-Critical	MLD Snooping ISSU client failed to get buffer for message. Error: [dec] [chars]	The MLD Snooping ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	mld-snooping	"show logging and show checkpoint client"
MLD_SNOOP_ISSU2INIT	2-Critical	MLD Snooping ISSU client initialization failed to [chars]. Error: [dec] [chars]	The MLD Snooping ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	mld-snooping	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MLD_SNOOP_ISSU2INT	2-Critical	MLD Snooping ISSU client initialization failed to [chars]. Error: [dec] [chars]	The MLD Snooping ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	mld-snooping	LOG_STD_ACTION
<del>MLD_SNOOP_ISSU2INT</del>	2-Critical	MLD Snooping ISSU client failed to send negotiation message. Error: [dec] [chars]	The MLD Snooping ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	mld-snooping	"show logging and show checkpoint client"
<del>MLD_SNOOP_ISSU2INT</del>	2-Critical	MLD Snooping ISSU client failed to send negotiation message. Error: [dec] [chars]	The MLD Snooping ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	mld-snooping	"show logging and show checkpoint client"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MDSNOOP_ISSU_NGO</del>	2-Critical	MLD Snooping ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The MLD Snooping ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	mld-snooping	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>MDSNOOP_ISSU_NGO</del>	2-Critical	MLD Snooping ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The MLD Snooping ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	mld-snooping	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>MDSNOOP_ISSU_HGRV</del>	2-Critical	MLD Snooping ISSU client failed to register session information. Error: [dec] [chars]	The MLD Snooping ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	mld-snooping	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MDSNOOP_ISSU_RCVY	2-Critical	MLD Snooping ISSU client failed to register session information. Error: [dec] [chars]	The MLD Snooping ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	mld-snooping	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
MDSNOOP_ISSU_SON	3-Error	MLD Snooping ISSU client does not have a valid registered session.	The MLD Snooping ISSU client does not have a valid registered session.	mld-snooping	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
MDSNOOP_ISSU_SON	3-Error	MLD Snooping ISSU client does not have a valid registered session.	The MLD Snooping ISSU client does not have a valid registered session.	mld-snooping	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
MDSNOOP_ISSU_MGNOCK	3-Error	MLD Snooping ISSU client 'Message Type [dec]' is not compatible	The MLD Snooping ISSU client received an incompatible message from the peer device. The message cannot be processed.	mld-snooping	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
MDSNOOP_ISSU_MGNOCK	3-Error	MLD Snooping ISSU client 'Message Type [dec]' is not compatible	The MLD Snooping ISSU client received an incompatible message from the peer device. The message cannot be processed.	mld-snooping	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MDSNOOPISSEMSGSE</del>	3-Error	MLD Snooping ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The MLD Snooping ISSU client failed to calculate the MTU for the specified message. The MLD Snooping ISSU client is not able to send the message to the standby device.	mld-snooping	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>MDSNOOPISSEMSGSE</del>	3-Error	MLD Snooping ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The MLD Snooping ISSU client failed to calculate the MTU for the specified message. The MLD Snooping ISSU client is not able to send the message to the standby device.	mld-snooping	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>MDSNOOPISSEMSGSE</del>	3-Error	MLD Snooping ISSU client failed to unregister session information. Error: [dec] [chars]	The MLD Snooping ISSU client failed to unregister session information.	mld-snooping	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>MDSNOOPISSEMSGSE</del>	3-Error	MLD Snooping ISSU client failed to unregister session information. Error: [dec] [chars]	The MLD Snooping ISSU client failed to unregister session information.	mld-snooping	"show issu session <client_id> and " "show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MLD_SNOOPING_TRANSFORM_FAIL</del>	3-Error	MLD Snooping ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The MLD Snooping ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the MLD Snooping state between the active device and the standby device is not identical.	mld-snooping	"show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>MLD_SNOOPING_TRANSFORM_FAIL</del>	3-Error	MLD Snooping ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The MLD Snooping ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the MLD Snooping state between the active device and the standby device is not identical.	mld-snooping	"show issu session <client_id> and " "show issu negotiated version <session_id>"
MLDP-2-CHUNK_ERR	2-Critical	Error initializing MLDP db chunks	Error initializing MLDP db chunks	-	LOG_SID_NO_ACTION
MLDP-2-CHUNK_ERR	2-Critical	Error initializing MLDP db chunks	Error initializing MLDP db chunks	-	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MLDP2FEC_CHUNK_ERR	2-Critical	Error initializing MLDP FEC chunks	Error initializing MLDP FEC chunks	-	LOG_SID_NO_ACTION
MLDP2FEC_CHUNK_ERR	2-Critical	Error initializing MLDP FEC chunks	Error initializing MLDP FEC chunks	-	LOG_SID_NO_ACTION
MLDP-2-FEC_ERR	2-Critical	Error the FEC size is too large	The FEC size is too large	-	LOG_SID_NO_ACTION
MLDP-2-FEC_ERR	2-Critical	Error the FEC size is too large	The FEC size is too large	-	LOG_SID_NO_ACTION
MLDP2FEC_NIF_ERR	2-Critical	Error initializing MLDP FEC notifier	Error initializing MLDP FEC notifier	-	LOG_SID_NO_ACTION
MLDP2FEC_NIF_ERR	2-Critical	Error initializing MLDP FEC notifier	Error initializing MLDP FEC notifier	-	LOG_SID_NO_ACTION
MLDP2FEC_TBL_ERR	2-Critical	Error initializing MLDP FEC tbl	Error initializing MLDP FEC tbl	-	LOG_SID_NO_ACTION
MLDP2FEC_TBL_ERR	2-Critical	Error initializing MLDP FEC tbl	Error initializing MLDP FEC tbl	-	LOG_SID_NO_ACTION
MLDP2FILTER_CHUNK_ERR	2-Critical	Error initializing MLDP filter chunks	Error initializing MLDP filter chunks	-	LOG_SID_NO_ACTION
MLDP2FILTER_CHUNK_ERR	2-Critical	Error initializing MLDP filter chunks	Error initializing MLDP filter chunks	-	LOG_SID_NO_ACTION
MLDP2FILTER_NIF_ERR	2-Critical	Error registering MLDP filter FEC notifier	Error registering MLDP filter FEC notifier	-	LOG_SID_NO_ACTION
MLDP2FILTER_NIF_ERR	2-Critical	Error registering MLDP filter FEC notifier	Error registering MLDP filter FEC notifier	-	LOG_SID_NO_ACTION
MLDP2FILTER_TBL_ERR	2-Critical	Error initializing MLDP filter tbl	Error initializing MLDP filter tbl	-	LOG_SID_NO_ACTION
MLDP2FILTER_TBL_ERR	2-Critical	Error initializing MLDP filter tbl	Error initializing MLDP filter tbl	-	LOG_SID_NO_ACTION
MLDP2HA_INSERT_ERR	2-Critical	Error inserting node into MLDP HA radix tree	Error inserting node into MLDP HA radix tree	-	LOG_SID_NO_ACTION
MLDP2HA_INSERT_ERR	2-Critical	Error inserting node into MLDP HA radix tree	Error inserting node into MLDP HA radix tree	-	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MLDP-2ID_RESERVE_ERR	2-Critical	Error reserving id for mldp database	Error reserving id for mldp database	-	LOG_SID_NO_ACTION
MLDP-2ID_RESERVE_ERR	2-Critical	Error reserving id for mldp database	Error reserving id for mldp database	-	LOG_SID_NO_ACTION
MLDP-2INTERNAL_ERR	2-Critical	Internal mLDP error	Internal error	-	LOG_SID_NO_ACTION
MLDP-2INTERNAL_ERR	2-Critical	Internal mLDP error	Internal error	-	LOG_SID_NO_ACTION
MLDP-2MRIB_PROCESS_ERR	2-Critical	Error initializing MLDP MRIB process	Can't start the MLDP MRIB process	-	LOG_SID_NO_ACTION
MLDP-2MRIB_PROCESS_ERR	2-Critical	Error initializing MLDP MRIB process	Can't start the MLDP MRIB process	-	LOG_SID_NO_ACTION
MLDP-2-PEER_ERR	2-Critical	Received attached address [node]but there is no LDP peer	Internal error	-	LOG_SID_NO_ACTION
MLDP-2-PEER_ERR	2-Critical	Received attached address [node]but there is no LDP peer	Internal error	-	LOG_SID_NO_ACTION
MLDP-2PEER_NOT_FOUND	2-Critical	Peer doesn't exist while syncing to standby	Peer doesn't exist while syncing to standby	-	LOG_SID_NO_ACTION
MLDP-2PEER_NOT_FOUND	2-Critical	Peer doesn't exist while syncing to standby	Peer doesn't exist while syncing to standby	-	LOG_SID_NO_ACTION
MLDP-2PROCESS_ERR	2-Critical	Error initializing MLDP process	Can't start the MLDP process	-	LOG_SID_NO_ACTION
MLDP-2PROCESS_ERR	2-Critical	Error initializing MLDP process	Can't start the MLDP process	-	LOG_SID_NO_ACTION
MLDP-2RADX_BRANCH_ERR	2-Critical	Error initializing MLDP BRANCH radix tree	Internal error	-	LOG_SID_NO_ACTION
MLDP-2RADX_BRANCH_ERR	2-Critical	Error initializing MLDP BRANCH radix tree	Internal error	-	LOG_SID_NO_ACTION
MLDP-2RADIX_DB_ERR	2-Critical	Error initializing MLDP DB radix tree	Error initializing MLDP_DB radix tree	-	LOG_SID_NO_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MLDP2RADIX_DB_ERR	2-Critical	Error initializing MLDP DB radix tree	Error initializing MLDP_DB radix tree	-	LOG_STD_NO_ACTION
MLDP2ROOT_NOT_FOUND	2-Critical	Root doesn't exist while syncing to standby.	Root doesn't exist while syncing to standby	-	LOG_STD_NO_ACTION
MLDP2ROOT_NOT_FOUND	2-Critical	Root doesn't exist while syncing to standby.	Root doesn't exist while syncing to standby	-	LOG_STD_NO_ACTION
MLDP4BRANCH_DEL_PENDING	4-Warning	[chars] tree with LSM ID: [node] has both IPv4 and IPv6 del_pending set	An mLDP database entry has both the IPv4 and IPv6 del_pending \n\ flags set to TRUE -- This is an inconsistent state	-	LOG_STD_ACTION
MLDP4BRANCH_DEL_PENDING	4-Warning	[chars] tree with LSM ID: [node] has both IPv4 and IPv6 del_pending set	An mLDP database entry has both the IPv4 and IPv6 del_pending \n\ flags set to TRUE -- This is an inconsistent state	-	LOG_STD_ACTION
MLDP4RW_GET_NOIF_FAIL	4-Warning	mLDP failed to get information from the unicast RIB -- RIB Error Code - 0x[hec]	prefix from the RIB due to some reason.	mldp	LOG_STD_ACTION
MLDP4RW_GET_NOIF_FAIL	4-Warning	mLDP failed to get information from the unicast RIB -- RIB Error Code - 0x[hec]	prefix from the RIB due to some reason.	mldp	LOG_STD_ACTION
MLDP4RW_REGISTER_FAIL	4-Warning	mLDP failed to register to the unicast RIB	routing update in the network.	mldp	LOG_STD_ACTION
MLDP4RW_REGISTER_FAIL	4-Warning	mLDP failed to register to the unicast RIB	routing update in the network.	mldp	LOG_STD_ACTION
MLDP4RW_TRACK_PARTIAL	4-Warning	mLDP failed to start tracking a prefix in the unicast RIB	in the RIB due to some reason.	mldp	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MLDAPW_TRACK_START_FAIL	4-Warning	mLDP failed to start tracking a prefix in the unicast RIB	in the RIB due to some reason.	mldp	LOG_STD_ACTION
MLDAPW_TRACK_STOP_FAIL	4-Warning	mLDP failed to stop tracking a prefix in the unicast RIB	in the RIB due to some reason.	mldp	LOG_STD_ACTION
MLDAPW_TRACK_STOP_FAIL	4-Warning	mLDP failed to stop tracking a prefix in the unicast RIB	in the RIB due to some reason.	mldp	LOG_STD_ACTION
MLDAPW_UNREGISTER_FAIL	4-Warning	mLDP failed to un-register to the unicast RIB	or Route-watch process due to some reason.	mldp	LOG_STD_ACTION
MLDAPW_UNREGISTER_FAIL	4-Warning	mLDP failed to un-register to the unicast RIB	or Route-watch process due to some reason.	mldp	LOG_STD_ACTION
MLDAP5_ADD_BRANCH	5-Notice	[chars] Root: [node]Add [chars] branch [chars] [chars]	Logging of changes to mLDP branch	-	LOG_SID_NO_ACTION
MLDAP5_ADD_BRANCH	5-Notice	[chars] Root: [node]Add [chars] branch [chars] [chars]	Logging of changes to mLDP branch	-	LOG_SID_NO_ACTION
MLDAP5_DELETE_BRANCH	5-Notice	[chars] Root: [node]Delete [chars] branch [chars] [chars]	Logging of changes to mLDP branch	-	LOG_SID_NO_ACTION
MLDAP5_DELETE_BRANCH	5-Notice	[chars] Root: [node]Delete [chars] branch [chars] [chars]	Logging of changes to mLDP branch	-	LOG_SID_NO_ACTION
MLDAP5_MODIFY_BRANCH	5-Notice	[chars] Root: [node]Modify [chars] branch [chars] [chars]	Logging of changes to mLDP branch	-	LOG_SID_NO_ACTION
MLDAP5_MODIFY_BRANCH	5-Notice	[chars] Root: [node]Modify [chars] branch [chars] [chars]	Logging of changes to mLDP branch	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MLDP-5-MODIFY_NBR	5-Notice	[chars] Root: [node]Modify [chars] entry peer [chars] [chars]	Logging of changes to mLDP entry peer	-	LOG_SID_NO_ACTION
MLDP-5-MODIFY_NBR	5-Notice	[chars] Root: [node]Modify [chars] entry peer [chars] [chars]	Logging of changes to mLDP entry peer	-	LOG_SID_NO_ACTION
MLDP-5-ROUTING_LOOP	5-Notice	There is a routing loop for this root.	There is a routing loop for this root	-	LOG_SID_NO_ACTION
MLDP-5-ROUTING_LOOP	5-Notice	There is a routing loop for this root.	There is a routing loop for this root	-	LOG_SID_NO_ACTION
MLDP-7-MLDP_PATH_LIST_FULL	7-Debug	MLDP Path list is full for peer [chars]. Skipping the new path entry Address [node] Interface [chars]	MLDP Path list is at the maximum limit. Discarding the new path entry. Not adding the new MLDP path since there are already enough paths for this peer	-	LOG_SID_NO_ACTION
MLDP-7-MLDP_PATH_LIST_FULL	7-Debug	MLDP Path list is full for peer [chars]. Skipping the new path entry Address [node] Interface [chars]	MLDP Path list is at the maximum limit. Discarding the new path entry. Not adding the new MLDP path since there are already enough paths for this peer	-	LOG_SID_NO_ACTION
MLDP-3-MLDP_PATH_LIST_FULL	3-Error	Error deleting routing topology scope [dec] information from routing database	This condition occurs when the information about a routing topology scope in the routing database gets corrupted and does not fully match with the expected information of the routing topology to be deleted.	l2rib	"Consider reconfiguring the routing topology scope. " "If the error persists reload the router "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MBMIBLZRCNDEFCAN</del>	3-Error	Error deleting private network [dec] information from routing database	This occurs when the information about a private network in the routing database gets corrupted and does not fully match with the expected information of the private network to be deleted.	l2rib	"Consider reconfiguring the private network. If "the error persists reload the router"
<del>MBMIBLZRCNDEFCAN</del>	4-Warning	A routing database client id [dec] failed to complete route repopulation: Layer [dec] sub address family [dec] and routing client instances [dec]	Routing database client did not complete route repopulation within the allotted amount of time after a system failover.	ether-infra	"Contact TAC for further investigation of this " issue and provide them with the following logs: "show mlrib layer2 log event all show mlrib layer2 " log error all show mlrib layer2 log trace all " show mlrib common log event all show mlrib " common log error all and show logging "
<del>MBMIBLZRCNDEFCAN</del>	4-Warning	A routing database client id [dec] failed to complete route repopulation: Layer [dec] sub address family [dec] and routing client instances [dec]	Routing database client did not complete route repopulation within the allotted amount of time after a system failover.	asr1k-igmpsn	"Contact TAC for further investigation of this " issue and provide them with the following logs: "show mlrib layer2 log event all show mlrib layer2 " log error all show mlrib layer2 log trace all " show mlrib common log event all show mlrib " common log error all and show logging "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MRIBRUIBFDALXIED</del>	4-Warning	A routing database client id [dec] failed to complete route repopulation: Layer [dec] sub address family [dec] and routing client instances [dec]	Routing database client did not complete route repopulation within the allotted amount of time after a system failover.	isis	"Contact TAC for further investigation of this " "issue and provide them with the following logs: " "show mlrib layer2 log event all show mlrib layer2 " "log error all show mlrib layer2 log trace all " "show mlrib common log event all show mlrib " "common log error all and show logging "
<del>MRIBRUIBFDALXIED</del>	4-Warning	A routing database client id [dec] failed to complete route repopulation: Layer [dec] sub address family [dec] and routing client instances [dec]	Routing database client did not complete route repopulation within the allotted amount of time after a system failover.	ios-otv-app	"Contact TAC for further investigation of this " "issue and provide them with the following logs: " "show mlrib layer2 log event all show mlrib layer2 " "log error all show mlrib layer2 log trace all " "show mlrib common log event all show mlrib " "common log error all and show logging "
<del>MRIBRUIBFDALXIED</del>	4-Warning	All routing database client failed to complete route repopulation	None of the routing database client completed route repopulation within the allotted amount of time after a system failover.	l2rib	"Contact TAC for further investigation of this " "issue and provide them with the following logs: " "show mlrib layer2 log event all show mlrib layer2 " "log error all show mlrib layer2 log trace all " "show mlrib common log event all show mlrib " "common log error all and show logging "

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>MSR</del> <u>ROUTE</u> <u>FW</u> <u>MR</u> <u>REACH</u>	4-Warning	Route system [dec] has reached its high water mark of [dec]	The number of routes installed in a routing database has exceeded a threshold. This condition indicates a high density of routes within this system.	-	"Consider balancing some destinations using " "additional routing devices"
<del>MSR</del> <u>ROUTE</u> <u>FW</u> <u>MR</u> <u>REACH</u>	4-Warning	Routing system [dec] has reached its maximum route capacity of [dec]	The number of routes installed in a routing system has exceeded a preset limit. This condition indicates a high density of routes within this system. No more routes can be installed within this system until the number goes below high water mark of 95[node]f preset limit	-	"Consider balancing some destinations using " "additional routing devices"
<del>MSR</del> <u>ROUTE</u> <u>FW</u> <u>MR</u> <u>REACH</u>	4-Warning	Route topology scope [dec] has reached its high water mark of [dec]	The number of routes installed in a routing topology scope has exceeded a threshold. This condition indicates a high density of routes within this routing topology scope.	-	"Consider routing some destination via other " "route topology scopes"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MIPICRYOEMRACHD</del>	4-Warning	Route topology scope [dec] has reached its maximum route capacity of [dec]	The number of routes installed in a route scope topology has exceeded a preset limit. This condition indicates a high density of routes within this scope. No more routes can be installed within this scope until the number goes below high water mark of 95[node]f preset limit	-	"Consider routing some destination via other " "route topology scopes"
<del>MIRREDAIPFVORCON</del>	6-Information	A notification was sent preemptively for the private network [dec] and client id [dec]	This condition occurs when the client experiences a large number of notifications	-	-
<del>MIRREDANSPFVORCON</del>	6-Information	A notification was sent preemptively for the private network [dec] and client id [node]fter redundancy switchover	This condition occurs when the client experiences a large number of notifications	-	-
MLSM-2-IPC_ERROR	2-Critical	MMLS: IPC failure detected between RP and SP	This can happen when EOBC channel is too busy or NMP is too busy so that draco side does not get response even after few retries by IPC layer.	cat6000	"Under some stressful condition when communication between RP and SP side can not be maintained this message will be printed. MMLS will keep trying to recover from situation by sending message to SP. The restart message to SP has exponential back off upto 160 second"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MSM6CONG_MISMATCH	6-Information	Multicast hardware switching config mis-match between RP and NMP. It is likely to be disabled on the NMP	MLS multicast hardware switching has been enabled on the RP but likely disabled on the NMP	cat6000	"Correct the mis-config by enabling IGMP snooping and MMLS on the NMP"
MSM6CONG_MISMATCH	6-Information	Multicast hardware switching mismatch recovered from earlier config mis-match	MMLS Config mismatch between RP and SP recovered from mismatch. The MLS multicast hardware switching is likely to be enabled on the NMP	cat6000-mmls	"Modify the network config such that hardware resource limitation is not hit and ensure that sg or *g entry is installed."
MSM6ERR_RECORED	6-Information	MMLS: Communication channel between RP and SP recovered from failure	Communication between RP and SP recovered from earlier IPC / SCP failure. MMLS will install HW switched entries on backoff timer expiration. The backoff time is min10 sec * # of times error occurred^2 160	cat6000	"Note the difference between the time the error occurred to the current message. It indicates the time when no HW switched entries existed in the switch"
MSM6GLC_SCP_FAILURE	6-Information	NMP encountered internal communication failure for [node]i[dec]	This message happens SP was not able to update CEF tables on atleast one of the EARLs on Linecards.	cat6000-mmls	"Under some condition SP was not able to communicate with Linecard to update the multicast-CEF table. And this causes inconsistency in the CEF table among different line cards. This shortcut is deleted so that inconsistent state is purged. And this flow will get software forwarded."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MLSM-6-MFD_COUNT_ERR	6-Information	MFD Count error : [node]i[dec] first mfd: [dec]vlan extra RPF-MFD	This message happens when there are multiple MFD in hardware switched state.	cat6000-mmls	"This is just a informative message. If there are to many packets going to CPU the MTU on the interfaces should be changed appropriately to take advantage of hardware replication."
MSM-6-MTUSUPPRED	6-Information	Outgoing interfaces with MTU less than the RPF interface will be multicast replicated to in software		cat6000-mmls	"This is just a informative message. If there are to many packets going to CPU the MTU on the interfaces should be changed appropriately to take advantage of hardware replication."
MLSM-6-MLSM_PMS	6-Information	MMLS: MLSM is suspending the caller process [chars]	This message is to remind the user that MLSM is suspending the caller process. This happens when the MLSM routines are called from PIM/Mwheel context and MLSM routines does an process suspend	cat6000-mmls	"When MLSM suspends the caller process there is a possibility of data corruption for the data handled by the caller process"
MSM-6-MSESSNO	6-Information	MMLS: Please make sure no multicast traffic is going through egress incapable line cards when system is operating in egress mode	This message is to remind the user that there should be no multicast traffic going through egress incapable line cards while the system is operating in egress replication mode.	cat6000	"Check to see if there are any egress incapable line cards in the system. If there are egress incapable line cards make sure that there is no multicast traffic going through these cards"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>MSM</del> MSI <u>G</u> <u>C</u> <u>Y</u> <u>N</u> <u>E</u> <u>R</u> <u>E</u> <u>D</u>	6-Information	MMLS: Legacy Linecard Inserted Egress Replication Mode will be disabled	Egress Replication is not supported with Legacy Cards system will transition to Ingress Mode please note that the transition will cause temporary loss of traffic	cat6000	"If the system is required to operate in Egress Replication Mode the Legacy linecard should be removed"
<del>MSM</del> MSM <u>D</u> <u>E</u> <u>C</u> <u>H</u> <u>A</u> <u>N</u> <u>C</u> <u>E</u>	6-Information	MMLS: Replication Mode Changed to [chars] mode [chars]	When auto detection of replication mode is enabled the system will transition to ingress mode when an egress incapable linecard is inserted. The system will transition back to egress mode when the last egress incapable linecard is removed	cat6000	"Transition between ingress and egress mode will cause temporary loss of traffic to prevent this use the command mls ip replication-mode ingress"
<del>MSM</del> MS <u>N</u> <u>C</u> <u>E</u> <u>S</u> <u>S</u> <u>I</u> <u>O</u> <u>N</u> <u>S</u>	6-Information	MMLS: Egress Local feature is NOT applicable in Ingress mode	When the system transitions from Egress replication mode to ingress the Egress Local feature will become non-applicable even if the Egress Local feature is enabled.	cat6000	"This is only to inform the user that Egress Local feature is not applicable in Ingress mode. If the Egress Local feature is required actions need to be taken to restore the system replication mode to egress"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MSM#VLAN_INSTALL_FAILURE	6-Information	Unable to locate secondary-vlan for [node]i[dec]	This message happens when RP was not able to determine the secondary vlan for the source in secondary vlan. After finite retries RP gives up installing the shortcut in hardware. This can happen when a new flow is installed or when there is a RPF change. In such situations flow will be software switched.	cat6000-mmls	"Make sure ARP table is populated for sources in secondary vlan by explicitly 'ping'ing the source and the ARP table should contain the primary as well as secondary vlan information. To enable creation of hardware shortcut do a 'clear ip mroute <group> <source>' for the specific flow."
MLSM-6-SCP_ERROR	6-Information	MMLS: SCP failure detected between RP and SP	This can happen when EOBC channel is too busy or NMP is too busy so that draco side does not get response even after few retries by ICC layer.	cat6000	"Under some stressful condition when communication between RP and SP side can not be maintained this message will be printed. MMLS will keep trying to recover from situation by sending message to SP. The restart message to SP has exponential back off upto 160 second"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MSM6SMNSIAL_FAILURE	6-Information	interface/mask entry installation failed on [node][dec] vlan[dec]	This message happens when Interface/mask entry to punt directly connected sources to the router could not be installed in HW-CEF table. This happens system is running out of available CEF entries. In this situation there might be blackholing of traffic for the directly connected sources on this interface	cat6000-mmls	"Modify the network config such that hardware resource limitation is not hit and ensure that interface/mask entry is installed."
<del>MMCRMMCRNERR_ALERT</del>	3-Error	[chars]	<del>MMCRNERR_ALERT</del>	-	LOG_SID_RECUR_ACTION
<del>MMCRMMCRNERR_ALERT</del>	3-Error	[chars]	<del>MMCRNERR_ALERT</del>	-	LOG_SID_RECUR_ACTION
<del>MMCRMMCRNERR_ALERT</del>	3-Error	ewlc-mobility	Could not delete an AP from the AP list.	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION
<del>MMCRMMCRNERR_ALERT</del>	3-Error	ewlc-mobility	Received an invalid ap-list-update from[chars]. Entries: %d	-	-
<del>MMCRMMCRNERR_ALERT</del>	3-Error	ewlc-mobility	%s message received is missing payload[chars]	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION
<del>MMCRMMCRNERR_ALERT</del>	4-Warning	ewlc-mobility	Unable to create an ApList entry for AP %d. ApList table is full	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION
<del>MMCRMMCRNERR_ALERT</del>	0-Emergency	ewlc-mobility	%s task could not be started. The system will be rebooted	LOG_EXPL_SYSERR	The mobility services failed to start correctly
<del>MMCRMMCRNERR_ALERT</del>	0-Emergency	ewlc-mobility	%s: msg revd failed	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION
<del>MMCRMMCRNERR_ALERT</del>	0-Emergency	ewlc-mobility	%s: queue creation failed	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MMRAC00BYSCPAHE</del>	1-Alert	ewlc-mobility	Unable to create mobility state for user[chars]	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION
<del>MMRAC00SRNCAIOWE</del>	1-Alert	ewlc-mobility	Unable to allow user[chars] into the system.[chars]	Unable to allow the user into the system for the reported reason	LOG_SID_NO_ACTION
<del>MMINRA00GNTPAHE</del>	2-Critical	ewlc-mobility	Error while initializing mobility daemon.[chars]	Error while initializing mobility daemon	If this error is seen
<del>MMRAC00BFAICPAHE</del>	3-Error	ewlc-mobility	Failed to allocate memory for[chars]	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION
<del>MMRAC00BFAICPAHE</del>	3-Error	ewlc-mobility	Failed to deallocate memory for[chars]	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION
<del>MMRAC00FDWVCPAHE</del>	3-Error	ewlc-mobility	Failed to send a config download[chars] packet to %u.%u.%u.%u	Failed to send a configdownload packet	LOG_SID_RECUR_ACTION
<del>MMRAC00RAMEPAHE</del>	3-Error	ewlc-mobility	%0x%0x%0x%0x%0x%0x Unable to send[chars] to[chars].	Unable to send a mobility packet	LOG_SID_RECUR_ACTION
<del>MMRAC00MADRKCPD</del>	3-Error	ewlc-mobility	%0x%0x%0x%0x%0x%0x Unable to send[chars] to[chars].	Unable to send a mobility packet	LOG_SID_RECUR_ACTION
<del>MMRAC00SACDIAHBR</del>	3-Error	ewlc-mobility	%0x%0x%0x%0x%0x%0x Cannot allocate[chars] for[chars]	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION
<del>MMRAC00SACDILRR</del>	3-Error	ewlc-mobility	%0x%0x%0x%0x%0x%0x Cannot build[chars] for[chars]. Reason:[chars]	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION
<del>MMRAC00SACDILRR</del>	3-Error	ewlc-mobility	%0x%0x%0x%0x%0x%0x Failed to build[chars]:[chars]	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MMRUCSFCACRDR	3-Error	ewlc-mobility	%0x%0x%0x%0x%0x%0x%0x%0x cannot decode mobility payload/s for[chars]. Reason:[chars]	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION
MMRUCSFCACRDR	3-Error	ewlc-mobility	%0x%0x%0x%0x%0x%0x%0x%0x cannot encode mobility payload/s for[chars]. Reason:[chars]	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION
MMRUCSFCACRDR	3-Error	ewlc-mobility	%0x%0x%0x%0x%0x%0x%0x%0x Cannot process[chars] for[chars]. Reason:[chars]	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION
MMRUCSFCACRDR	3-Error	ewlc-mobility	%0x%0x%0x%0x%0x%0x%0x%0x received is missing payload[chars]	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION
MMRUCSFCACRDR	3-Error	ewlc-mobility	%0x%0x%0x%0x%0x%0x%0x%0x Unable to process the received mobility message[chars] from[chars]. reason:[chars]	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION
MMRUCSFCACRDR	3-Error	ewlc-mobility	Pkt group name hash:[chars] Peer group name hash:[chars][chars]. reason:[chars]	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION
MMRUCSFCACRDR	3-Error	ewlc-mobility	Pkt MAC: %0x%0x%0x%0x%0x%0x Peer MAC: %0x%0x%0x%0x%0x%0x reason:[chars]	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION
MMRUCSFCACRDR	3-Error	ewlc-mobility	Timer error: failed to[chars]	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION
MMRUCSFCACRDR	3-Error	ewlc-mobility	Unable to receive mobility message[chars] from[chars]. reason:[chars]	Unable to receive a mobility packet	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MMNRAICGSEND_AHD	3-Error	ewlc-mobility	%D%D%D%D%D%D% Unable to send[chars] to[chars]. Reason:[chars].	Unable to send a mobility packet	LOG_SID_RECUR_ACTION
MMRACMOUTGOUSERR	4-Warning	ewlc-mobility	Invalid outgoing msg	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION
MMNRAICGSEND_AHD	7-Debug	ewlc-mobility	The payload size has exceeded the limit.[chars]	Available buffer cannot hold IPV6 NDP pkt payload.	LOG_SID_NO_ACTION
MMRACMFOUNDERR	7-Debug	ewlc-mobility	%D%D%D%D%D%D% Unable to process the received mobility message[chars] from[chars]. reason:[chars]	LOG_SID_NO_ACTION	LOG_SID_NO_ACTION
MMRACMFOUNDERR	2-Critical	ewlc-mobility	90%% (%d) of maximum supported number of joined client %d exceeded	Exceeded 90% of maximum supported client join limit	LOG_SID_NO_ACTION
MMRACMFOUNDERR	2-Critical	ewlc-mobility	Maximum supported number of joined clients %d exceeded	Maximum supported number of joined clients exceeded.	LOG_SID_NO_ACTION
MMRACMFOUNDERR	3-Error	ewlc-guest	Anchor:[chars]. client mac: %D%D%D%D%D%D%	Anchor has detected and error.	LOG_SID_RECUR_ACTION
MMRACMFOUNDERR	3-Error	ewlc-mobility	Failed to allocate memory for[chars]	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION
MMRACMFOUNDERR	3-Error	ewlc-mobility	Failed to deallocate memory for[chars]	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION
MMRACMFOUNDERR	3-Error	ewlc-mobility	%. Encountered memory error	-	-
MMRACMFOUNDERR	3-Error	ewlc-mobility	%D%D%D%D%D%D% Cannot allocate[chars] for[chars]	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION
MMRACMFOUNDERR	3-Error	ewlc-mobility	%D%D%D%D%D%D% Cannot build[chars] for[chars]. Reason:[chars]	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MMIOBMACDIFERRR	3-Error	ewlc-mobility	%D%D%D%D%D%D%Dx Failed to build[chars]:[chars]	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION
MMIOBMACDCEERRR	3-Error	ewlc-mobility	%D%D%D%D%D%D%Dx cannot encode mobility payload/s for[chars]. Reason:[chars]	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION
MMIOBMACDCEERRR	3-Error	ewlc-mobility	%D%D%D%D%D%D%Dx Cannot process[chars] for[chars]. Reason:[chars]	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION
MMIOBMACDCEERRR	3-Error	ewlc-mobility	%D%D%D%D%D%D%Dx received is missing payload[chars]	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION
MMIOBMACDCEERRR	3-Error	ewlc-mobility	%s Timer:[chars]	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION
MMIOBMACDCEERRR	4-Warning	ewlc-mobility	Failed to allocate memory for[chars]	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION
MMIOBMACDCEERRR	4-Warning	ewlc-mobility	MAC: %D%D%D%D%D%D%Dx All retries of[chars] (XID: %d) to[chars] have been exhausted	All retries for packet are exhausted	LOG_STD_ACTION
MMIOBMACDCEERRR	6-Information	ewlc-guest	Anchor:[chars]. client mac: %D%D%D%D%D%D%Dx	Anchor has detected a protocol issue and recovered.	LOG_SID_NO_ACTION
MMIOBMACDCEERRR	6-Information	ewlc-mobility	Maximum number of Clients on wlan[chars] with Limit: %d Reached	Maximum number of Clients per wlan Join Limit Reached.	LOG_SID_NO_ACTION
MMIOBMACDCEERRR	6-Information	ewlc-mobility	Maximum number of Client Join Limit: %d Reached	Maximum number of Client Join Limit Reached.	LOG_SID_NO_ACTION
MMIOBMACDCEERRR	6-Information	ewlc-guest	Export Anchor not responding	-	-
MMIOBMACDCEERRR	6-Information	ewlc-mobility	Client limit reached on[chars]. Denied client mac: %D%D%D%D%D%D%Dx	Client limit reached on wlan on anchor.	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MNDHCORNFHNDN</del>	7-Debug	ewlc-guest	<del>MNDHCORNFHNDN</del> All Export-Anchors are down.	All Export-Anchors are down.	If this message occurs
<del>MNDHCORNFHNDN</del>	7-Debug	ewlc-mobility	The payload size has exceeded the limit.[chars]	Available buffer cannot hold IPV6 NDP pkt payload.	LOG_SID_NO_ACTION
<del>MNDHCORNFHNDN</del>	0-Emergency	ewlc-mobility	Error in[chars] while setting local mobility group multicast IP address %u.%u.%u.%u. Please disable mobility multicast-mode if this error continues	Mobility is unable to use multicast for messaging	LOG_SID_RECUR_ACTION
<del>MNDHCORNFHNDN</del>	1-Alert	ewlc-guest	All Export-Anchors are down	All Export-Anchors are down on WLAN	If this message occurs
<del>MNDHCORNFHNDN</del>	3-Error	ewlc-mobility	Failed to allocate memory for[chars]	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION
<del>MNDHCORNFHNDN</del>	3-Error	ewlc-mobility	Failed to deallocate memory for[chars]	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION
<del>MNDHCORNFHNDN</del>	3-Error	ewlc-mobility	Failed to register callback for interface changes	LOG_EXPL_SYSERR	LOG_STD_ACTION
<del>MNDHCORNFHNDN</del>	3-Error	ewlc-mobility	Received an invalid Nonce-update from[chars].[chars].	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION
<del>MNDHCORNFHNDN</del>	3-Error	ewlc-mobility	Received PMK-delete from[chars] with no Station address TLV.	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION
<del>MNDHCORNFHNDN</del>	3-Error	ewlc-mobility	Received an invalid PMK-update from[chars].[chars].	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION
<del>MNDHCORNFHNDN</del>	3-Error	ewlc-mobility	Could not add Mobility Member. Reason:[chars]	-	-
<del>MNDHCORNFHNDN</del>	3-Error	ewlc-mobility	Could not delete Mobility Member. Reason:[chars]	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MMNDICSMREUPFAD	3-Error	ewlc-mobility	Could not update Mobility Member. Reason:[chars]	-	-
MMNDICSMACDERRR	3-Error	ewlc-mobility	%s message received is missing payload[chars]	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION
MMNDICSMACRDEERR	3-Error	ewlc-mobility	Unable to send multicast mobility message.[chars]	Mobility is unable to use multicast for messaging	LOG_SID_RECUR_ACTION
MMNDICGPHRPFAD	3-Error	ewlc-mobility	Mobility ping to[chars] rejected.[chars]	Mobility ping rejected	Please check the ping command issued
MMNDICGPHRDKRON	3-Error	ewlc-mobility	Mobility ping to[chars] rejected.[chars]	Mobility ping version unknown	Please check if the controllers in the mobility list can interOp and
MMNDICGPHRDPHD	3-Error	ewlc-mobility	Drop[chars] ping from[chars].[chars]	Mobility ping response Dropped	LOG_SID_NO_ACTION
MMNDICGPHRDNFAD	3-Error	ewlc-mobility	Failed to send a[chars] ping to[chars] . Reason:[chars].	Failed to send a ping	Please check mobility configuration to see if it needs correction
MMNDICGPHRDNFADS	3-Error	ewlc-mobility	Mobility group local multicast address has invalid setting: %u.%u.%u.%u. Resetting it to 0.0.0.0 and disabling mobility multicast	Mobility multicast group address configuration was found invalid. It may have been corrupted during config transfer	Configure the address again by using cmd: config mobility multicast-mode enable multicast_address
MMNDICGPHRDNFAD	3-Error	ewlc-mobility	Failed to[chars] a socket.[chars]	A Socket operation is failed	LOG_STD_ACTION
MMNDICGPHRDNFAD	3-Error	ewlc-mobility	Failed to[chars] a socket. Reason:[chars].	A Socket operation is failed. Multicast mode will not work for mobility	Try setting the local group multicast address again. If the same error is seen
MMNDICGPHRDNFAD	3-Error	ewlc-mobility	Peer IP conflicts with system IP[chars]	Peer Ip is conflicting with System Management Ip.	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MMNDHOCNSEMMAC	3-Error	ewlc-mobility	Member[chars] is configured with a MAC that conflicts with system mobility MAC address (%d:%d:%d:%d:%d:%d)	Peer MAC is conflicting with System Mobility MAC.	LOG_STD_ACTION
MMNDHOCISNSAKA	4-Warning	ewlc-mobility	%s handshake failed for[chars] HB is down	-	-
MMNDHOCMBRDDR	4-Warning	ewlc-mobility	Error adding Mobility member to heartbeat list (IP:[chars])	LOG_EXPL_SYSERR	LOG_STD_ACTION
MMNDHOCMBRDRR	4-Warning	ewlc-mobility	Error adding Mobility member to heartbeat list (MAC: %d:%d:%d:%d:%d:%d)	-	-
MMNDHOCMBRHRR	4-Warning	ewlc-mobility	Error deleting Mobility member from heartbeat list (IP:[chars])	LOG_EXPL_SYSERR	LOG_STD_ACTION
MMNDHOCMBRHRR	4-Warning	ewlc-mobility	Error deleting Mobility member from heartbeat list (MAC: %d:%d:%d:%d:%d:%d)	-	-
MMNDHOCMBRPRR	4-Warning	ewlc-mobility	Error updating Mobility member IP in heartbeat list (MAC: %d:%d:%d:%d:%d:%d)	-	-
MMNDHOCMBRDWN	4-Warning	ewlc-mobility	%s path to mobility member[chars] is DOWN	A path to mobility member is DOWN	If this message occurs
MMNDHOCMUAED	4-Warning	ewlc-mobility	Capwap path MTU discovery error:[chars]	Mobility path MTU discovery failure	LOG_SIDRECUR_ACTION
MMNDHOCMUSIAED	4-Warning	ewlc-mobility	Failed to set path MTU to fast path for peer IP:[chars]	LOG_EXPL_SYSERR	LOG_SIDRECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MNDICGEMBRADD</del>	5-Notice	ewlc-mobility	Mobility[chars] tunnel to peer[chars] changed state to[chars]	Mobility tunnel state change message.	LOG_STD_ACTION
<del>MNDICGEMBRADD</del>	6-Information	ewlc-mobility	Updating Mobility member IP in heartbeat list (MAC: %d:%d:%d:%d:%d:%d)	-	-
<del>MNDICGEMBRADD</del>	6-Information	ewlc-mobility	Adding Mobility member (IP:[chars]:[chars])	LOG_EXPL_SYSINFO	LOG_SID_NO_ACTION
<del>MNDICGEMBRADD</del>	6-Information	ewlc-mobility	Deleting Mobility member (IP: [chars])	LOG_EXPL_SYSINFO	LOG_SID_NO_ACTION
<del>MNDICGEMBRUP</del>	6-Information	ewlc-mobility	%s path to mobility member[chars] is UP	A path to mobility member is UP	LOG_SID_NO_ACTION
<del>MNDICGEMBRUP</del>	6-Information	ewlc-mobility	Updating Mobility member (IP:[chars]:[chars])	LOG_EXPL_SYSINFO	LOG_SID_NO_ACTION
<del>MNDICGEMBRUP</del>	6-Information	ewlc-guest	Export Anchor back off condition cleared (AnchorIP:[chars])	LOG_EXPL_SYSINFO	LOG_SID_NO_ACTION
<del>MNDICGEMBRUP</del>	6-Information	ewlc-mobility	Deleted ping receiver entry (%s) from heartbeat list for WLAN (%d)	LOG_EXPL_SYSINFO	LOG_SID_NO_ACTION
<del>MNDICGEMBRUP</del>	6-Information	ewlc-mobility	Setting[chars] multicast group[chars] on the mobility sockets.	Multicast group membership was set on the socket.	LOG_SID_NO_ACTION
<del>MNDICGEMBRUP</del>	3-Error	Metric Mediation Agent fails to registerate with Conditional Debugging.	Metric Mediation Agent fails to registerate with Conditional Debugging infra.	asr1k-avc	LOG_STD_ACTION
MMA_DP-3-INIT	3-Error	Error during initialization error [chars]	Error happened during initialization of MMA Data plane	media-mon	LOG_STD_ACTION
MMA_DP-3-INIT	3-Error	Error during initialization error [chars]	Error happened during initialization of MMA Data plane	media-mon	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MMA_DP-3-LIST	3-Error	Failed to [chars] list [chars]	A list operation failed. This could be caused by memory corruption	media-mon	LOG_STD_ACTION
MMA_DP-3-LIST	3-Error	Failed to [chars] list [chars]	A list operation failed. This could be caused by memory corruption	media-mon	LOG_STD_ACTION
MMA_DP-3-MEM	3-Error	Memory [chars] failed - [chars]	Memory creation failed during the initialization	media-mon	LOG_STD_ACTION
MMA_DP-3-MEM	3-Error	Memory [chars] failed - [chars]	Memory creation failed during the initialization	media-mon	LOG_STD_ACTION
MMA_DP3-TEMPLATE	3-Error	Create flow template error [chars]	Error happened during creating MMA PD flow def template	media-mon	LOG_STD_ACTION
MMA_DP3-TEMPLATE	3-Error	Create flow template error [chars]	Error happened during creating MMA PD flow def template	media-mon	LOG_STD_ACTION
MMA-2-IPC_INIT	2-Critical	IPC message handler registration failure rc %u	Registering an IPC message handler for the MMA feature failed. This will cause the feature to not function.	qfp-mma	"This is normally a software issue. " "The consequences are that the MMA feature will not function. " LOG_STD_ACTION
MMA3CACHEOVERFLOW	3-Error	The number of flows has exceeded 95[node]of the configured size monitor [chars] please increase cache size\n	This is warning message if the flow size exceeds the maximum value	media-mon	LOG_STD_ACTION
MMA3CACHEOVERFLOW	3-Error	The number of flows has exceeded 95[node]of the configured size monitor [chars] please increase cache size\n	This is warning message if the flow size exceeds the maximum value	media-mon	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MMA3CHUNKCREATE	3-Error	Failed to chunk create memory for [chars]	Unable to chunk create memory chunk	media-mon	LOG_STD_ACTION
MMA3CHUNKCREATE	3-Error	Failed to chunk create memory for [chars]	Unable to chunk create memory chunk	media-mon	LOG_STD_ACTION
MMA3CHUNKDESIROY	3-Error	Failed to chunk destroy memory for [chars]	Unable to chunk destroy memory chunk	media-mon	LOG_STD_ACTION
MMA3CHUNKDESIROY	3-Error	Failed to chunk destroy memory for [chars]	Unable to chunk destroy memory chunk	media-mon	LOG_STD_ACTION
MMA3CHUNKMALLOC	3-Error	Failed to malloc chunk memory for [chars]	Unable to malloc memory chunk malloc failed	media-mon	LOG_STD_ACTION
MMA3CHUNKMALLOC	3-Error	Failed to malloc chunk memory for [chars]	Unable to malloc memory chunk malloc failed	media-mon	LOG_STD_ACTION
MMA-3-DB	3-Error	[chars]	Error during managing MMA database	media-mon	LOG_STD_ACTION
MMA-3-DB	3-Error	[chars]	Error during managing MMA database	media-mon	LOG_STD_ACTION
MMA-3-FIELD	3-Error	[chars]	Error during initializing a field	media-mon	LOG_STD_ACTION
MMA-3-FIELD	3-Error	[chars]	Error during initializing a field	media-mon	LOG_STD_ACTION
MMA3FLOW_EXCEED	3-Error	The number of flows has exceeded 95[node]of the configured maximum flow. [chars]\n	This is warning message if the flow size exceeds the maximum value	media-mon	LOG_STD_ACTION
MMA3FLOW_EXCEED	3-Error	The number of flows has exceeded 95[node]of the configured maximum flow. [chars]\n	This is warning message if the flow size exceeds the maximum value	media-mon	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MMA3FLOW_NEXCHD	3-Error	The number of flows is below 85[node]of the configured maximum flow. [chars]\n	This is info message if the flow size falls below the maximum value	media-mon	LOG_STD_ACTION
MMA3FLOW_NEXCHD	3-Error	The number of flows is below 85[node]of the configured maximum flow. [chars]\n	This is info message if the flow size falls below the maximum value	media-mon	LOG_STD_ACTION
MMA3INV_ACTION_OBI	3-Error	action object is not valid - [chars]	This is an internal error the saved action object info is corrupted	media-mon	LOG_STD_ACTION
MMA3INV_ACTION_OBI	3-Error	action object is not valid - [chars]	This is an internal error the saved action object info is corrupted	media-mon	LOG_STD_ACTION
MMA-3-INV_ARG	3-Error	The argument is not valid - [chars]	An internal error occurred. The argument for an internal API is not valid	media-mon	LOG_STD_ACTION
MMA-3-INV_ARG	3-Error	The argument is not valid - [chars]	An internal error occurred. The argument for an internal API is not valid	media-mon	LOG_STD_ACTION
MMA3INV_COMMON_PTR	3-Error	The common monitor pointer is invalid	An internal error occurred. The common monitor pointer saved in the performance-monitor monitor is NULL	media-mon	LOG_STD_ACTION
MMA3INV_COMMON_PTR	3-Error	The common monitor pointer is invalid	An internal error occurred. The common monitor pointer saved in the performance-monitor monitor is NULL	media-mon	LOG_STD_ACTION
MMA-3-INV_DB_OBI	3-Error	Internal error mma db pointer invalid	No valid pointer to mma db	media-mon	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MMA-3-INV_DB_OBJ	3-Error	Internal error mma db pointer invalid	No valid pointer to mma db	media-mon	LOG_STD_ACTION
MMA-3-INV_MONITOR	3-Error	The flow monitor pointer is invalid	An internal error occurred. The performance-monitor monitor pointer saved in the common monitor is NULL	media-mon	LOG_STD_ACTION
MMA-3-INV_MONITOR	3-Error	The flow monitor pointer is invalid	An internal error occurred. The performance-monitor monitor pointer saved in the common monitor is NULL	media-mon	LOG_STD_ACTION
MMA-3-INV_MONITOR_TYPE	3-Error	The monitor type [dec] is invalid	An internal error occurred. The monitor type is out of the range	media-mon	LOG_STD_ACTION
MMA-3-INV_MONITOR_TYPE	3-Error	The monitor type [dec] is invalid	An internal error occurred. The monitor type is out of the range	media-mon	LOG_STD_ACTION
MMA-3-INV_REACT	3-Error	react is not valid - [chars]	This is an internal error the saved react info is corrupted	media-mon	LOG_STD_ACTION
MMA-3-INV_REACT	3-Error	react is not valid - [chars]	This is an internal error the saved react info is corrupted	media-mon	LOG_STD_ACTION
MMA-3-IPC_NORES	3-Error	No space for the IPC reply size %u	For a request from upper MMA software stack layers it was not possible to allocate space for a reply for the specified size. The consequence of this could be a stuck binding that cannot be established etc. In rare cases this could also affect other operations such as feature activation.	qfp-mma	"This is normally a software issue. " LOG_SID_RECUR_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MMA-3-IPC_OPEN_REPLY	3-Error	IPC Open Reply failed request %u	For a request from upper MMA software stack layers it was not possible to open the reply buffer. The consequence of this could be a stuck binding that cannot be established etc. In rare cases this could also affect other operations such as feature activation.	qfp-mma	"This is normally a software issue. " LOG_STD_RECUR_ACTION
MMA-3-LIST	3-Error	Failed to [chars] list [chars]	A list operation failed. This could be caused by memory corruption	media-mon	LOG_STD_ACTION
MMA-3-LIST	3-Error	Failed to [chars] list [chars]	A list operation failed. This could be caused by memory corruption	media-mon	LOG_STD_ACTION
MMA-3-MCOL	3-Error	[chars]	Error during collecting metrics in MMA PI	media-mon	LOG_STD_ACTION
MMA-3-MCOL	3-Error	[chars]	Error during collecting metrics in MMA PI	media-mon	LOG_STD_ACTION
MMA-3-MEM	3-Error	Memory [chars] failed - [chars]	Memory creation failed during the initialization	media-mon	LOG_STD_ACTION
MMA-3-MEM	3-Error	Memory [chars] failed - [chars]	Memory creation failed during the initialization	media-mon	LOG_STD_ACTION
MMA-3-NULLFLOW	3-Error	A flow does not exist	An internal error occurred. Try to access a null flow	media-mon	LOG_STD_ACTION
MMA-3-NULLFLOW	3-Error	A flow does not exist	An internal error occurred. Try to access a null flow	media-mon	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MMA-3-NULLHIST	3-Error	A history bucket does not exist	An internal error occurred. Try to access a null history	media-mon	LOG_STD_ACTION
MMA-3-NULLHIST	3-Error	A history bucket does not exist	An internal error occurred. Try to access a null history	media-mon	LOG_STD_ACTION
MMA-3-PARSER	3-Error	[chars]	Error during register parser or parsing CLI	media-mon	LOG_STD_ACTION
MMA-3-PARSER	3-Error	[chars]	Error during register parser or parsing CLI	media-mon	LOG_STD_ACTION
MMA-3-PROV	3-Error	[chars]	A fatal error happened during provision	media-mon	LOG_STD_ACTION
MMA-3-PROV	3-Error	[chars]	A fatal error happened during provision	media-mon	LOG_STD_ACTION
MMA-3-RM_SET	3-Error	[chars]	An error happened during setting of Resource Manager event	media-mon	LOG_STD_ACTION
MMA-3-RM_SET	3-Error	[chars]	An error happened during setting of Resource Manager event	media-mon	LOG_STD_ACTION
MFCBFLANCRTRR	2-Critical	ewlc-mobility	WLAN Error :[chars]	Critical issue seen with WLAN config. Make a note of any recent changes made to the network or the device configuration which may have triggered this and proceed to the suggested action.	Copy the error message exactly as it appears on the console or in the system log. Open a case with the Technical Assistance Center via the Internet <a href="http://www.cisco.com">http://www.cisco.com</a>
MFCBFLAICFAD	3-Error	ewlc-mobility	Failed to allocate memory for[chars]	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION
MFCBFLAICFAD	3-Error	ewlc-mobility	Failed to deallocate memory for[chars]	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MMIOBSPACDIOERRR</del>	3-Error	ewlc-mobility	%D%D%D%D%D%D%D% Cannot allocate[chars] for[chars]	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION
<del>MMIOBSPACBIDERRR</del>	3-Error	ewlc-mobility	%D%D%D%D%D%D%D% Cannot build[chars] for[chars]. Reason:[chars]	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION
<del>MMIOBSPACDIOERRR</del>	3-Error	ewlc-mobility	%D%D%D%D%D%D%D% Failed to build[chars]:[chars]	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION
<del>MMIOBSPACDIOERRR</del>	3-Error	ewlc-mobility	%D%D%D%D%D%D%D% Cannot process[chars] for[chars]. Reason:[chars]	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION
<del>MMIOBSPACDIOERRR</del>	3-Error	ewlc-mobility	%D%D%D%D%D%D%D% [chars] received is missing payload[chars]	LOG_EXPL_SYSERR	LOG_SID_RECUR_ACTION
<del>MMIOBSPACDIOERRR</del>	4-Warning	ewlc-guest	Export anchor required but internal error occurred (e.g.: out of resources)	-	-
<del>MMIOBSPACDIOERRR</del>	4-Warning	ewlc-guest	Export anchor required but config is incorrect	-	-
<del>MMIOBSPACDIOERRR</del>	7-Debug	ewlc-mobility	The payload size has exceeded the limit.[chars]	Available buffer cannot hold IPV6 NDP pkt payload.	LOG_SID_NO_ACTION
MMODEISSUGETBUHR	2-Critical	MMODE ISSU client failed to get buffer for message. Error: [dec] [chars]	MMODE ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	polaris-gir	"show logging and show checkpoint client"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MMODE_ISSU-2-INIT	2-Critical	MMODE ISSU client initialization failed to [chars]. Error: [dec] [chars]	The MMODE ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	polaris-gir	LOG_STD_ACTION
MMODE_ISSU-2-NEG_FAIL	2-Critical	MMODE ISSU client failed to send negotiation message. Error: [dec] [chars]	The MMODE ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	polaris-gir	"show logging and show checkpoint client"
MMODE_ISSU-2-REG_FAIL	2-Critical	MMODE ISSU client failed to register arbitrate callback. Error: [dec] [chars]	The MMODE ISSU client failed to register arbitrate callback. If a problem occurs with the callback registration the standby device cannot be brought up properly.	polaris-gir	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MMODE_ISSU_SESSION</del>	2-Critical	MMODE ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The MMODE ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	polaris-gir	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>MMODE_ISSU_SESSION</del>	2-Critical	MMODE ISSU client failed to register session information. Error: [dec] [chars]	The MMODE ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	polaris-gir	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>MMODE_ISSU_CAPABILITY</del>	3-Error	MMODE ISSU client: invalid capability list	MMODE ISSU client observed an error during capability negotiaiton. When this error happens there is a mismatch in the client capability between the active and standby unit.	polaris-gir	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>MMODE_ISSU_VALID_SESSION</del>	3-Error	MMODE ISSU client does not have a valid registered session.	The MMODE ISSU client does not have a valid registered session.	polaris-gir	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>MMODE_ISSU</del> MSGNOTCK	3-Error	MMODE ISSU client 'Message Type [dec]' is not compatible	The MMODE ISSU client received an incompatible message from the peer device. The message cannot be processed.	polaris-gir	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>MMODE_ISSU</del> 3MSG_SIZE	3-Error	MMODE ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The MMODE ISSU client failed to calculate the MTU for the specified message. The MMODE ISSU client is not able to send the message to the standby device.	polaris-gir	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>MMODE_ISSU</del> POLYNTSUPD	3-Error	MMODE ISSU client does not support Message Type [dec]	MMODE ISSU client received an message type which it does not support. The policy is applied to make the session incompatible.	polaris-gir	"show issu session <client_id>"
<del>MMODE_ISSU</del> RECD_CAPBLY	3-Error	MMODE ISSU client rejected capability '[chars]'	MMODE ISSU client rejected a capability during negotiaiton. When this error happens there is a mismatch in the client capability between the active and standby unit.	polaris-gir	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>MMODE_ISSU</del> REJC_CAPBLY	3-Error	MMODE ISSU client rejecting capability '[chars]'	MMODE ISSU client is rejecting a capability during negotiaiton. When this error happens there is a mismatch in the client capability between the active and standby unit.	polaris-gir	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>MMODE_ISSU_UNREG</del>	3-Error	MMODE ISSU client failed to unregister session information. Error: [dec] [chars]	The MMODE ISSU client failed to unregister session information.	polaris-gir	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>MMODE_ISSU_TRANSFORM</del>	3-Error	MMODE ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The MMODE ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the MMODE state between the active device and the standby device is not identical.	polaris-gir	"show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>MMODE_ISSU_SEND</del>	3-Error	Maintenance failed to [chars] class [chars] due to timeout	This message will be seen if client fails to finish transition.	polaris-gir	"Use Show system mode maintenance clients to \n find which clients failed."
<del>MMODE_ISSU_RETURN</del>	3-Error	Maintenance failed to [chars] client [chars]	This message will be seen if client returns nack.	polaris-gir	-
<del>MMODE_ISSU_CLIENT</del>	6-Information	Maintenance client [chars] not found	This message will be seen if client listed in template sequence\n but not registered.	polaris-gir	-
<del>MMODE_ISSU_RETURN</del>	6-Information	Maintenance [chars] complete for [chars]	This message will be seen if client completes transition.	polaris-gir	-
<del>MMODE_ISSU_START</del>	6-Information	Maintenance [chars] start for [chars]	This message will be seen if client starts transition.	polaris-gir	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MN</del> <del>MODE</del> <del>MODE</del> <del>NR</del> <del>NR</del> <del>IED</del>	6-Information	System is in Normal Mode	This message will be seen if system comes out of maintenance\n\n successfully by operator issued command or maintenance window is over.	-	-
<del>MN</del> <del>MODE</del> <del>MODE</del> <del>IA</del> <del>IA</del> <del>IED</del>	6-Information	System is in Maintenance	This message will be seen if maintenance mode intitiated\n\n by operator is successful.	-	-
<del>MN</del> <del>MODE</del> <del>NR</del> <del>NR</del> <del>NR</del> <del>NR</del> <del>IED</del>	6-Information	Generating current snapshot 'before_maintenance'	This message will be seen for a snapshot created before entering mmode.	polaris-gir	-
<del>MN</del> <del>MODE</del> <del>NR</del> <del>NR</del> <del>NR</del> <del>NR</del> <del>IED</del>	6-Information	Generating current snapshot 'after_maintenance' \n\nPlease use 'show system snapshots compare before_maintenance after_maintenance' to check the health of the system	This message will be seen for a snapshot created before exiting mmode.	polaris-gir	-
MN_SPA_PIP3BITS_CLOCK	3-Error	[chars] : SPA bits transmit clock has encountered error : 0x[hec] .\n	Error message regarding BITS transmit clock failure	spa-synce-all	"OIR the SPA if the error is consistent"
MN_SPA_PIP3MINUPDOWN	3-Error	GMII Links are [chars] and [chars] for ports 1 and 2 respectively on the SPA.	Error Message: GMII link status has changed on the SPA.	spa-synce-all	"OIR the SPA to recover from the error."
MN_SPA_PIP3SEMAHOG	3-Error	SEMAHOG by SPA [chars] Process holding Sema is [chars]	SEMAPHORE LOCK ERROR	spa-synce-all	" Remove the config which caused this"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MNSPA_PTP_CLOCK_MODE	4-Warning	SPA [dec]/[dec] is working in PTP SLAVE or Boundary mode external clock on BITS port would be PTP recovered clock	Info regarding external clock in PTP slave mode	spa-synce-all	"No further action required. This is an\n\nINFORMATION message not an error Message."
MNSPA_PTP_CONFIG_CHANGE	6-Information	Change in ToP configuration on [dec]/[dec]. This will result \n\n into Termination of all existing PTP sessions on [dec]/[dec].	To take effect of new/changed configuration require \n\n restart of PTP session	spa-synce-all	"No further action required. This is an\n\nINFORMATION message not an error Message."
MNSPA_PTP_STATUS_CHANGE	6-Information	Recovered clock in [dec]/[dec] status changed to [chars]	Recovered clock status change info	spa-synce-all	"No further action required. This is an\n\nINFORMATION message not an error Message."
MOBILITY Daemon FAILED	2-Critical	ewlc-mobility	Error while initializing mobility daemon.[chars]	Error while initializing mobility daemon	If this error is seen
MODEM_HSI_CONTROL	7-Debug	\n[chars]: Control Reply: 0x[node]x[node]x	This is a tracing message indicating a reply to a control message\n\n was received.	-	LOG_SID_DBG_ACTION
MODEM_HSI_CALLNUM	7-Debug	\n[chars]: ISDN incoming called number: [chars]	This is a tracing message indicating the number of the ISDN\n\n line receiving a call.	-	LOG_SID_DBG_ACTION
MODEM_HSI_CALLNUM	7-Debug	\n[chars]: ISDN incoming caller number: [chars]	This is a tracing message indicating the number of an incoming\n\n ISDN caller.	-	LOG_SID_DBG_ACTION
MODEM_HSI_CALLNUM	7-Debug	\n[chars]: ISDN outgoing called number: [chars]	This is a tracing message indicating a dialed ISDN number.	-	LOG_SID_DBG_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MDM_HSMCADBG_EVT	7-Debug	\n[chars]: [chars]:	This is a tracing message indicating a host debug event reported by\n the specified MICA modem.	-	LOG_SID_DBG_ACTION
MDM_HSMADYNM_EVT	7-Debug	\n[chars]: [chars]: [chars]	This is a tracing message indicating a dynamic event reported by\n the specified MICA modem.	-	LOG_SID_DBG_ACTION
MDM_HSMENDCON_EVT	7-Debug	\n[chars]: [chars]: [chars]	This is a tracing message indicating an end-connection event\n from the specified MICA modem.	-	LOG_SID_DBG_ACTION
MDM_HSMCALEAD_EVT	7-Debug	\n[chars]: [chars]: [chars] [chars] [chars] [chars]	This is a tracing message indicating a lead event reported by\n the specified MICA modem.	-	LOG_SID_DBG_ACTION
MDM_HSMCACOSE_EVT	7-Debug	\n[chars]: [chars] \n[node] Cause: [chars]	This is a tracing message indicating an out-of-service event\n from the specified MICA modem.	-	LOG_SID_DBG_ACTION
MDM_HSMCASRUP_EVT	7-Debug	\n[chars]: [chars] [chars]. \n[node] Modem firmware = [dec].[dec].[dec].[dec]	This is a tracing message indicating successful startup of the\n specified MICA modem.	-	LOG_SID_DBG_ACTION
MDM_HSMCASAF_EVT	7-Debug	\n[chars]: [chars] \n[node] State: [chars]	This is a tracing message indicating a state event reported by\n the specified MICA modem.	-	LOG_SID_DBG_ACTION
MDM_HSMCASACE_EVT	7-Debug	\n[chars]: [chars]: [chars]	This is a tracing message indicating a static event reported by\n the specified MICA modem.	-	LOG_SID_DBG_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MODEM_HSF7MCAUSEVT	7-Debug	\n[chars]: [chars]: [chars]. \n[node] Modem firmware = [dec].[dec].[dec].[dec]	This is a tracing message indicating a status event reported by\n\n the specified MICA modem.	-	LOG_SID_DBG_ACTION
MODEM_HSF7COLANWOG	7-Debug	\n[chars]: Modem Analog signal event: TX = [dec] RX = [dec] Signal to noise = [dec]	This is a tracing message indicating a change in analog signal\n\n status.	-	LOG_SID_DBG_ACTION
MODEM_HSF7COLCALLRD	7-Debug	\n[chars]: Caller ID event: [chars]	This is a tracing message indicating caller ID data received.	-	LOG_SID_DBG_ACTION
MODEM_HSF7COLCONN1	7-Debug	\n[chars]: Connection event: TX/RX Speed = [node][node]Modulation = [chars]	This is a tracing message indicating establishment of a connection.	-	LOG_SID_DBG_ACTION
MODEM_HSF7COLCONN2	7-Debug	\n Direction = [chars] Protocol = [chars] Compression = [chars]	This is a continuation of the connection state tracing message.	-	LOG_SID_DBG_ACTION
MODEM_HSF7COLCONXUDE	7-Debug	\n[chars]: Connection update event: TX/RX Speed = [node][node]Modulation = [chars]	This is a tracing message indicating a connection state change.	-	LOG_SID_DBG_ACTION
MODEM_HSF7COLDIR	7-Debug	\n[chars]: DTR event: [chars]	This is a tracing message indicating a change in the DTR signal.	-	LOG_SID_DBG_ACTION
MODEM_HSF7COLEND1	7-Debug	\n[chars]: End connection event: Retransmits for MNP block TX/RX = [dec]/[dec]	This is a tracing message indicating end-of-connection status.	-	LOG_SID_DBG_ACTION
MODEM_HSF7COLEND2	7-Debug	\n Duration = [dec].[node]2d.[node]2d Number of TX/RX char = [dec]/[dec]	This is a continuation of the end-of-transmission status message.	-	LOG_SID_DBG_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MDEM_HSI7COL_END3	7-Debug	\n Local Disc Reason = [chars] Remote Disc Reason = [chars]	This is another continuation of the end-of-transmission status\n\n message.	-	LOG_SID_DBG_ACTION
MDEM_HSI7COL_HRCR	7-Debug	\n[chars]: Polling protocol error event: 0x[node]x	This is a tracing message indicating a polling protocol error.	-	LOG_SID_DBG_ACTION
MDEM_HSI7COL_EVTLOS	7-Debug	\n[chars]: Status event lost: 0x[node]x	This is a tracing message indicating a polling event was lost.	-	LOG_SID_DBG_ACTION
MDEM_HSI7COL_NACT	7-Debug	\n[chars]: Modem Activity event: [chars]	This is a tracing message indicating a change in data activity\n\n status.	-	LOG_SID_DBG_ACTION
MDEM_HSI7COL_MDSAE	7-Debug	\n[chars]: Modem State event: [chars]	This is a tracing message indicating a modem state change.	-	LOG_SID_DBG_ACTION
MDEM_HSI7COL_NORSP	7-Debug	\n[chars]: No poll response event: 0x[node]x	This is a tracing message indicating that no response was received\n\n to a poll.	-	LOG_SID_DBG_ACTION
MDEM_HSI7COL_HDNE	7-Debug	\n[chars]: Phone number event: [chars]	This is a tracing message indicating a phone number being dialed.	-	LOG_SID_DBG_ACTION
MDEM_HSI7COL_PROGSS	7-Debug	\n[chars]: Call Progress event: [chars]	This is a tracing message indicating status of a call in progress.	-	LOG_SID_DBG_ACTION
MDEM_HSI7COL_RS2E	7-Debug	\n[chars]: RS232 event: [chars][chars] [chars][chars] [chars][chars] [chars][chars] [chars][chars] [chars][chars]	This is a tracing message indicating RS232 events.	-	LOG_SID_DBG_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MODEM_HSI7COL_TXRX	7-Debug	\n[chars]: TX/RX event: TXD=[chars] RXD=[chars]	This is a tracing message indicating transmit and receive events.	-	LOG_SID_DBG_ACTION
MODEM_HSI7COL_UNKNOWN	7-Debug	\n[chars]: Unknown or lost event 0x[node]x	This is a tracing message indicating that the modem event history\n\n contained an unrecognized event. One or more events may be missing\n\n from the trace.	-	"This could be caused by insufficient space to store the modem\n\n history. If these events are desirable a possible remedy is to\n\n shorten the number of events recorded between history dumps. " LOG_SID_REDUCE_ACTION
MODEM_HSI7STARTUP	7-Debug	\n[chars]: Startup Response: [chars]. \nModem boot firmware = [dec].[dec].[dec] [dec].[dec].[dec]	This is a tracing message indicating successful startup of the\n\n specified modem.	-	LOG_SID_DBG_ACTION
MODEM_HSI7TRACEHDR	7-Debug	\n\n[chars] Modem [chars] Events Log:	This is the initial message for the trace of the specified modem.\n\n The modem's stored trace messages will follow.	-	LOG_SID_DBG_ACTION
MODEM_HSI7TRACEERR	7-Debug	\n[chars]: Error in events log	This is a tracing message indicating a formatting error in the\n\n modem event history. One or more events may be missing from\n\n the trace.	-	LOG_SID_DBG_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MODEM_NV5-FLEXIBLE	5-Notice	[chars]	This message type is created for all those messages which have simple ASCII text and does not take any parameter. Message tells what the problem is.	as	LOG_STD_ACTION
MODEM-I-BADEVENT	1-Alert	Invalid modem management [chars] event 0x[node]x for modem[chars]	The modem management facility received an unrecognized event.	-	LOG_STD_ACTION
MODEM-H-BADMODEM	1-Alert	Modem [chars] failed [chars]	A software or hardware problem has been detected on a modem. The specific modem and reason are listed in the message.	-	LOG_STD_ACTION
MODEM-I-DL_FAIL	1-Alert	Firmware download failed for slot [dec] module_mask [hec]	The modem modules did not send back an Initialized message after the download.	-	LOG_STD_ACTION
MODEM-I-DL_FAIL_BADREQ	1-Alert	Item to be freed is in queues [chars]. Slot [dec] module_mask 0x[hec]	The attempt to free the dnld info structure was aborted.	-	LOG_STD_ACTION
MODEM-I-DL_FAIL_HEXERR	1-Alert	Firmware download failed for slot [dec] module_mask 0x[hec] due to file transfer error	The download of a portware file to the modem card over DSIP as part of a modem firmware upgrade attempt timed out and failed to complete successfully	-	"LOG_STD_ACTION"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MODEMHDL_LOSS_FAIL	1-Alert	Firmware download failure for slot [dec] module [dec]	The portware download for the module was previously deferred\n\n but when later ready to be performed the information needed\n\n for the download had been lost	-	""
MODEMHDL_PROC_FAIL	1-Alert	Portware download process creation failed		-	"LOG_STD_ACTION"
MODEM_BADMODEMNUM	3-Error	Error: Trying to access an invalid modem [dec]	The requested operation could not be accomplished because of a bad modem number. Call your technical support representative for assistance	modem-management	LOG_STD_ACTION
MODEM_CREATE_FAIL	3-Error	Unable to create modem infos for slot [dec]	During OIR of this board the modem infos attempted to be created but failed due to lack of memory	-	"If this message is seen then save the output of show memory showing\n\n the amount of processor and IO memory usage only along with show\n\n version and call your technical support representative for\n\n assistance."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MDM</del> MDMERRCTMEM	3-Error	Error -- Unable to allocate memory to startup modem board in slot [dec]	Running out of memory during modem board startup.	-	"If this message is seen then save the output of show memory showing\n\n the amount of processor and IO memory usage only along with show\n\n version and call your technical support representative for\n\n assistance."
MDMERRPWNLDPROC	3-Error	Portware download manager process start-up failed	The attempt to start up the portware download manager process at\n\n initialization time failed and so portware download requests cannot\n\n be handled.	-	LOG_STD_ACTION
<del>MDM</del> MDMERRSSTATEV	3-Error	Error -- status state machine received unexpected event=[dec] for modem[chars]	The modem management subsystem's status-polling state machine\n\n received an undefined event for or from the specified modem.	-	LOG_STD_ACTION
<del>MDM</del> MDMERRSSTATEE	3-Error	Error -- status state machine in unknown state=[dec] for modem[chars]	The modem management subsystem's status-polling state machine\n\n for the specified modem entered an undefined state.	-	LOG_STD_ACTION



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MODEM4-B2BABORT	4-Warning	Modems [chars] and [chars] back-to-back test: aborted	This is a tracing message indicating a back-to-back test\n\n failed between the two specified MICA modems.	-	"Perform more back to back tests by pairing the failed modems with\n\n other modems to determine which modem is bad. Check the failed\n\n modems again after performing a power cycle. " LOG_SID_RECUR_ACTION
MODEM4-BADMODEMS	4-Warning	Modems [chars] and [chars] failed back-to-back test: [chars]	The two modems reported in the message failed a back-to-back test.\n\n At least one of them has failed.	-	"Perform more back to back tests by pairing the failed modems with\n\n other modems to determine which modem is bad. Check the failed\n\n modems again after performing a power cycle. " LOG_SID_RECUR_ACTION
MODEM4-NO_TIME_FOR_DC	4-Warning	Warning -- Not enough time to process DC session		-	LOG_SID_RECUR_ACTION
MODEM5-B2BCONNECT	5-Notice	Modems [chars] and [chars] connected in back-to-back test: [chars]	A back to back test connection has been made between the selected\n\n modems. The test is still in progress.	-	LOG_SID_NO_ACTION
MODEM-5-B2BINIT	5-Notice	Auto Back-to-Back test initiated by [chars]	This is a tracing message indicating an automatic back-to-back\n\n test was initiated by the specified MICA modem.	-	LOG_SID_DBG_ACTION
MODEM5-B2BMODEMS	5-Notice	Modems [chars] and [chars] completed back-to-back test: success/packets = [dec]/[dec]	The reported modems have passed the back to back test without any\n\n errors.	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MODEM-5-CONFIG	5-Notice	Configurations \fast-answer\ and \country [chars]\ conflict.\n Configuration \fast-answer\ disabled.	The fast-answer configuration conflicts with the country setting.\n\ The country was given priority and fast-answer was disabled.	-	LOG_SID_NO_ACTION
MODEM-5-DL_GOOD	5-Notice	Modem [chars] completed firmware download: [chars]	The specified modem has succeeded downloading its internal microcode.	-	LOG_SID_NO_ACTION
MODEM-5-DL_START	5-Notice	Modem [chars] started firmware download	The specified modem has begun downloading its internal microcode.	-	LOG_SID_NO_ACTION
MODEM5MODEM_OK	5-Notice	Modem [chars] passed the test	Tests on the specified modem were successful.	-	LOG_SID_NO_ACTION
<del>MODEM5MODEM_RECOVERY</del>	5-Notice	Modem [chars] [chars]	Modem recovery has been triggered. Configured action will\n\ take place on given modem	-	""
<del>MODEM5MODEM_RECOVERY_DL</del>	5-Notice	Slot [dec] Module [dec]: [chars]	Module download information	-	""
<del>MODEM5MODEM_RECOVERY_PROG</del>	5-Notice	[chars]	Modem Recovery Process information	-	""
<del>MODEM5MODEM_RECOVERY_RECORD</del>	3-Error	[chars]	Record Generated Exceeded Syslog Capability	port-mgmt	LOG_SID_NO_ACTION
<del>MODEM5MODEM_RECOVERY_RECORD_FAIL</del>	3-Error	[chars]	The Recovery Download Maintenance messages cannot be sent.	port-mgmt	LOG_STD_ACTION
<del>MODEM5MODEM_RECOVERY_RECORD_VERBOSE</del>	6-Information	[chars]	Terse Modem Call Failed Record	port-mgmt	LOG_SID_NO_ACTION
<del>MODEM5MODEM_RECOVERY_RECORD_VERBOSE_FAIL</del>	6-Information	[chars]	Terse Modem Call Record	port-mgmt	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MODULES_AEMD_TIMEOUT	3-Error	Timeout waiting for modules to come on-line.	One or more modules can not come on-line.	esg-chassismgr	
MODULES_AEMD_TIMEOUT	6-Information	All modules are now on-line.	All modules are now on-line.	IR8340_COMPONENT	
MONITOR3VARREST_FAIL	3-Error	ROM monitor variable restoration of \[chars]\ failed.	The new ROM monitor variable could not be written to memory and the\n\ ROM monitor variable could not be restored to its original value.	high-rommon	"Copy the error message exactly as it appears on the console or in the\n\ system log. Issue the <CmdBold>show tech-support<NoCmdBold> and\n\ <CmdBold>show bootvar<NoCmdBold> commands to gather data that may help\n\ identify the nature of the error. If you cannot determine the nature\n\ of the error from the error message text or from the <CmdBold>show\n\ tech-support<NoCmdBold> and <CmdBold>show bootvar<NoCmdBold> command\n\ output contact your Cisco technical support representative and\n\ provide the representative with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MONITOR3-VARSETFAIL	3-Error	ROM monitor variable set of \[chars] failed.	The system could not set a ROM Monitor variable. This condition typically occurs when no ROM monitor memory is available to save the variable. The ROM monitor memory is most likely already filled with configuration commands.	high-rommon	"Enter the <CmdBold>show bootvar<NoCmdBold> command and check the output to see if there is anything unusual with the system. Try to reduce the number of configuration boot commands."
MONITOR3-VPN_EVENT	3-Error	ipsec : [chars] : [dec] events	Crypto failure count hits limit. This message is just a warning not an error.	cpp-ucode	LOG_STD_ACTION
MISADSBMISADGENRL	3-Error	[chars]	mpls adj sb error message	mpls-mfi	LOG_STD_ACTION
MISADSBMISADGENRL	3-Error	[chars]	mpls adj sb error message	mpls-mfi	LOG_STD_ACTION
MISADSBMISADSECMP	4-Warning	[chars] - slot [chars]	MPLS ADJ ECMP not supported on Peers	mpls-mfi	LOG_STD_ACTION
MISADSBMISADSECMP	4-Warning	[chars] - slot [chars]	MPLS ADJ ECMP not supported on Peers	mpls-mfi	LOG_STD_ACTION
MISADSBMULTILABELSACK	4-Warning	[chars] - slot [chars]	Multi-Label Stack not supported on Peers	mpls-mfi	LOG_STD_ACTION
MISADSBMULTILABELSACK	4-Warning	[chars] - slot [chars]	Multi-Label Stack not supported on Peers	mpls-mfi	LOG_STD_ACTION
MISADSBNOBACKUPNIF	4-Warning	[chars] - ifnum [dec]	Backup interface cannot be programmed	mpls-mfi	LOG_STD_ACTION
MISADSBNOBACKUPNIF	4-Warning	[chars] - ifnum [dec]	Backup interface cannot be programmed	mpls-mfi	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MPLS_DBM3-IPR-UCMR	4-Warning	[chars] - adj 0x[hec] sb 0x[hec]	MFI adj or adj_sb error during path protection cutover	mpls-mfi	LOG_STD_ACTION
MPLS_DBM3-IPR-UCMR	4-Warning	[chars] - adj 0x[hec] sb 0x[hec]	MFI adj or adj_sb error during path protection cutover	mpls-mfi	LOG_STD_ACTION
MPLS_DBM3-MCHD-CPH	4-Warning	[chars] - adj 0x[hec]	MFI adj_sb uses unmatched protect lsp from CEF adj parent	mpls-mfi	LOG_STD_ACTION
MPLS_DBM3-MCHD-CPH	4-Warning	[chars] - adj 0x[hec]	MFI adj_sb uses unmatched protect lsp from CEF adj parent	mpls-mfi	LOG_STD_ACTION
MPLS_IPRM3-FCM-ERR	2-Critical	Allocation of mpls throttle [chars] memory failed	Allocation of memory resource use by mpls throttle fail	cpp-ucode	LOG_STD_ACTION
MPLS_IPRM-3-DB	3-Error	[chars]	There is an inconsistency in the information required to request labels from or to process labels received from an IP label distribution module	mpls-iprm	LOG_STD_ACTION
MPLS_IPRM-3-DB	3-Error	[chars]	-	-	-
MPLS_IPRM3-DB_PATH	3-Error	[chars]	There is an inconsistency in the information about a prefix path required to request labels from or to process labels received from an IP label distribution module	mpls-iprm	LOG_STD_ACTION
MPLS_IPRM3-DB_PATH	3-Error	[chars]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MPLSRM3DBINDG_DEC	3-Error	[chars]	There is an inconsistency in the information about a temporarily deferred action required to populate MPLS forwarding data structures for a prefix	mpls-iprm	LOG_STD_ACTION
MPLSRM3DBINDG_DEC	3-Error	[chars]	-	-	-
MPLSRM3DB_TABLE	3-Error	[chars]	There is an inconsistency in the information about a vrf tableid	mpls-iprm	LOG_STD_ACTION
MPLSRM3DB_TABLE	3-Error	[chars]	-	-	-
MPLSRM3DB_TRANS	3-Error	[chars]	There is an inconsistency in the information about an ongoing transaction required to populate MPLS forwarding data structures for a prefix	mpls-iprm	LOG_STD_ACTION
MPLSRM3DB_TRANS	3-Error	[chars]	-	-	-
MPLSRM3INTERNAL	3-Error	[chars]	An operation required for proper operation of the IP rewrite manager has failed.	mpls-iprm	"LOG_STD_ACTION"
MPLSRM3INTERNAL	3-Error	[chars]	-	-	-
MPLSRM3INHLABL_DEL	3-Error	[chars]	An attempt to delete MPLS forwarding information for the specified prefix has failed.	mpls-iprm	LOG_STD_ACTION
MPLSRM3INHLABL_DEL	3-Error	[chars]	-	-	-
MPLSRM3INHLABL_GET	3-Error	[chars]	An attempt to access MPLS forwarding information for the specified prefix has failed.	mpls-iprm	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MPLS_IPRM-3- <del>WALK</del> SET	3-Error	[chars]	-	-	-
MPLS_IPRM-3- <del>WALK</del> UD	3-Error	[chars]	An attempt to update MPLS forwarding information for the specified prefix has failed.	mpls-iprm	LOG_STD_ACTION
MPLS_IPRM-3- <del>WALK</del> UD	3-Error	[chars]	-	-	-
MPLS_IPRM-3-WALK	3-Error	[chars]	A request by an IP label distribution module e.g. LDP BGP to walk	mpls-iprm	LOG_STD_ACTION
MPLS_IPRM-3-WALK	3-Error	[chars]	-	-	-
MPLS_LABELSCHANGED	5-Notice	[chars] min/max label: [node]%u	The MPLS label range has changed. This message is to notify the NMS of changes.	-	LOG_STD_ACTION
MPLS_LABELSCHANGED	5-Notice	[chars] min/max label: [node]%u	The MPLS label range has changed. This message is to notify the NMS of changes.	-	LOG_STD_ACTION
MPLS_PACKET_FORWARDABLE	3-Error	MPLS [chars] forwarding path disabled	MPLS forwarding plane disabled	mpls-mfi	"This log entry is informational only."
MPLS_PACKET_FORWARDABLE	3-Error	MPLS [chars] forwarding path disabled	MPLS forwarding plane disabled	mpls-mfi	"This log entry is informational only."
MPLS_PACKET_FORWARDABLE	3-Error	MPLS [chars] forwarding path reenabled	MPLS forwarding plane reenabled	mpls-mfi	"This log entry is informational only."
MPLS_PACKET_FORWARDABLE	3-Error	MPLS [chars] forwarding path reenabled	MPLS forwarding plane reenabled	mpls-mfi	"This log entry is informational only."
MPLS_PACKET_LABELCACHE	3-Error	[chars] [dec]/[dec]	label cache error	mpls-mfi	LOG_STD_ACTION
MPLS_PACKET_LABELCACHE	3-Error	[chars] [dec]/[dec]	label cache error	mpls-mfi	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MPLS_PACKET3WRONGDB	3-Error	MPLS packet input sub interface hwidb [chars] does not match with	Internal software error occurred	mpls-mfi	LOG_STD_ACTION
MPLS_PACKET3WRONGDB	3-Error	MPLS packet input sub interface hwidb [chars] does not match with	Internal software error occurred	mpls-mfi	LOG_STD_ACTION
MPLS_PACKET4NCLHDSB	4-Warning	MPLS packet received on non MPLS enabled interface [chars] L3 type 0x[node]x label {[dec] [dec] [dec] [dec]}	MPLS packets received on an interface are being dropped as the interface is not setup to handle MPLS. This message may be seen when a mpls application is disabled on a interface and should go away when the upstream neighbor has reprogrammed its cef/mpls entries.	mpls-mfi	"If a MPLS application has just be disabled and traffic is flowing" "then the message is expected and should be ignored." "If the message recurs in steady state the operator should monitor" "the network for attacks and report the occurrence to Cisco."
MPLS_PACKET4NCLHDSB	4-Warning	MPLS packet received on non MPLS enabled interface [chars] L3 type 0x[node]x label {[dec] [dec] [dec] [dec]}	MPLS packets received on an interface are being dropped as the interface is not setup to handle MPLS. This message may be seen when a mpls application is disabled on a interface and should go away when the upstream neighbor has reprogrammed its cef/mpls entries.	mpls-mfi	"If a MPLS application has just be disabled and traffic is flowing" "then the message is expected and should be ignored." "If the message recurs in steady state the operator should monitor" "the network for attacks and report the occurrence to Cisco."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MPLS_REVERT_MISMATCH	5-Notice	Tunnel-tp[node]revertive behaviour mismatch: local is [chars] but remote is [chars]	The local revertive mode for the indicated MPLS-TP tunnel interface mismatches with the remote revertive mode. Local and remote revertive modes are provided.	-	"Examine the local and remote revertive modes and configure the remote " "revertive mode to the local revertive mode."
MPLS_REVERT_MISMATCH	5-Notice	Tunnel-tp[node]revertive behaviour mismatch: local is [chars] but remote is [chars]	The local revertive mode for the indicated MPLS-TP tunnel interface mismatches with the remote revertive mode. Local and remote revertive modes are provided.	-	"Examine the local and remote revertive modes and configure the remote " "revertive mode to the local revertive mode."
MPLS_PROTECT_MISMATCH	5-Notice	Tunnel-tp[node]type mismatch local-type: [chars] remote-type: [chars]	The local protection type on the indicated MPLS-TP tunnel interface mismatches with the remote protection type. Local and remote protection types are provided.	-	"Examine the local and remote protection types and configure the remote " "protection type to the local protection type."
MPLS_PROTECT_MISMATCH	5-Notice	Tunnel-tp[node]type mismatch local-type: [chars] remote-type: [chars]	The local protection type on the indicated MPLS-TP tunnel interface mismatches with the remote protection type. Local and remote protection types are provided.	-	"Examine the local and remote protection types and configure the remote " "protection type to the local protection type."
MPLS_AO_UNLOCK_ON	3-Error	Unexpected data structure access. [chars] unlocks with count [node]but expected [node][node]failure[chars].	MPLS_AO_UNLOCK_ON	mpls-te	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MSEACUUNLOCKCONT</del>	3-Error	Unexpected data structure access. [chars] unlocks with count [node]but expected [node][node]failure[chars].	<del>MSEACUUNLOCKCONT</del>	mpls-te	LOG_STD_ACTION
<del>MSEACUUNLOCKCONT</del>	3-Error	Unexpected data structure access. [chars] unlocks with count [node]but expected [node][node]failure[chars].	<del>MSEACUUNLOCKCONT</del>	mpls-te	LOG_STD_ACTION
<del>MSEACUUNLOCKDUBE</del>	3-Error	Unexpected data structure access. Non-zero lock count [node]when [chars] locks [node]failure[chars].	<del>MSEACUUNLOCKDUBE</del>	mpls-te	LOG_STD_ACTION
<del>MSEACUUNLOCKDUBE</del>	3-Error	Unexpected data structure access. Non-zero lock count [node]when [chars] locks [node]failure[chars].	<del>MSEACUUNLOCKDUBE</del>	mpls-te	LOG_STD_ACTION
<del>MSEACUUNLOCKDUBE</del>	3-Error	Unexpected data structure access. Non-zero lock count [node]when [chars] locks [node]failure[chars].	<del>MSEACUUNLOCKDUBE</del>	mpls-te	LOG_STD_ACTION
<del>MSEACUUNLOCKDUBE</del>	3-Error	Unexpected data structure access. Non-zero lock count [node]when [chars] locks [node]failure[chars].	<del>MSEACUUNLOCKDUBE</del>	mpls-te	LOG_STD_ACTION
<del>MSEACUUNLOCKZERO</del>	3-Error	Unexpected data structure access. [chars] unlocks with count [node]but not locked [node]failure[chars].	<del>MSEACUUNLOCKZERO</del>	mpls-te	LOG_STD_ACTION
<del>MSEACUUNLOCKZERO</del>	3-Error	Unexpected data structure access. [chars] unlocks with count [node]but not locked [node]failure[chars].	<del>MSEACUUNLOCKZERO</del>	mpls-te	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MISEAUCUNLOCKZBO</del>	3-Error	Unexpected data structure access. [chars] unlocks with count [node]but not locked [node]failure[chars].	<del>MISEAUCUNLOCKZBO</del>	mpls-te	LOG_STD_ACTION
<del>MISEAUCUNLOCKZBO</del>	4-Warning	[chars]	Conflicting MPLS TE auto-tunnel configuration	mpls-te	"Re-check auto-tunnel configuration for P2P Primary Backup and Mesh" "make sure tunnel-id range are not overlapped."
<del>MISEAUCUNLOCKZBO</del>	4-Warning	[chars]	Conflicting MPLS TE auto-tunnel configuration	mpls-te	"Re-check auto-tunnel configuration for P2P Primary Backup and Mesh" "make sure tunnel-id range are not overlapped."
<del>MISEAUCUNLOCKZBO</del>	4-Warning	[chars]	Conflicting MPLS TE auto-tunnel configuration	mpls-te	"Re-check auto-tunnel configuration for P2P Primary Backup and Mesh" "make sure tunnel-id range are not overlapped."
<del>MISEAUCUNLOCKZBO</del>	4-Warning	Removing existing auto tunnels may have failed.[chars][chars] <del>MISEAUCUNLOCKZBO</del> Use \show running-config\ to confirm expected configuration. Repeat CLI configuration as needed.	The MPLS Traffic Engineering Auto-Tunnel software detected a possible \ problem removing existing automatic tunnels. It may be necessary to \ repeat the CLI action that caused the removal and reconfiguration of\ automatic tunnels.	mpls-te	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MSEAUJUN4MOMIAL</del>	4-Warning	Removing existing auto tunnels may have failed.[chars][chars] <del>MSEAUJUN4MOMIAL</del> Use \show running-config\ to confirm expected configuration. Repeat CLI configuration as needed.	The MPLS Traffic Engineering Auto-Tunnel software detected a possible \ problem removing existing automatic tunnels. It may be necessary to \ repeat the CLI action that caused the removal and reconfiguration of \ automatic tunnels.	mpls-te	LOG_STD_ACTION
<del>MSEAUJUN4MOMIAL</del>	4-Warning	Removing existing auto tunnels may have failed.[chars][chars] <del>MSEAUJUN4MOMIAL</del> Use \show running-config\ to confirm expected configuration. Repeat CLI configuration as needed.	The MPLS Traffic Engineering Auto-Tunnel software detected a possible \ problem removing existing automatic tunnels. It may be necessary to \ repeat the CLI action that caused the removal and reconfiguration of \ automatic tunnels.	mpls-te	LOG_STD_ACTION
<del>MSEADBCUM4EVIDEIE</del>	5-Notice	Failed to delete hwidb for Auto-Template [dec] index [dec]	Deletion of Auto-Template interface failed.	mpls-te	LOG_STD_ACTION
<del>MSEADBCUM4EVIDEIE</del>	5-Notice	Failed to delete hwidb for Auto-Template [dec] index [dec]	Deletion of Auto-Template interface failed.	mpls-te	LOG_STD_ACTION
<del>MSEADBCUM4EVIDEIE</del>	5-Notice	Failed to delete hwidb for Auto-Template [dec] index [dec]	Deletion of Auto-Template interface failed.	mpls-te	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MSEIHAFCRSEIAD</del>	3-Error	Failed to register with CF	system may be low on memory	mpls-te	"Verify system memory availability. Then deconfigure \n" "graceful restart full-mode and configure it again. \n" "This will attempt to re-start the RSVP HA process and \n" "re-register with CF"
<del>MSEIHAFCRSEIAD</del>	3-Error	Failed to register with CF	system may be low on memory	mpls-te	"Verify system memory availability. Then deconfigure \n" "graceful restart full-mode and configure it again. \n" "This will attempt to re-start the RSVP HA process and \n" "re-register with CF"
<del>MSEIHAFCRSEIAD</del>	3-Error	Failed to register with CF	system may be low on memory	mpls-te	"Verify system memory availability. Then deconfigure \n" "graceful restart full-mode and configure it again. \n" "This will attempt to re-start the RSVP HA process and \n" "re-register with CF"
<del>MSEIHAFCRSEIAD</del>	3-Error	Failed to add RSVP HA to CLI	system may be low on memory	mpls-te	"Verify system memory availability. Then deconfigure \n" "graceful restart full-mode and configure it again. \n" "This will attempt to re-start the RSVP HA process and \n" "re-register with CF"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MHS E HA CLI ADD F A E D	3-Error	Failed to add RSVP HA to CLI	system may be low on memory	mpls-te	"Verify system memory availability. Then deconfigure \n" "graceful restart full-mode and configure it again. \n" "This will attempt to re-start the RSVP HA process and \n" "re-register with CF"
MHS E HA CLI ADD F A E D	3-Error	Failed to add RSVP HA to CLI	system may be low on memory	mpls-te	"Verify system memory availability. Then deconfigure \n" "graceful restart full-mode and configure it again. \n" "This will attempt to re-start the RSVP HA process and \n" "re-register with CF"
MHS E HA DB INIT F A E D	3-Error	Database init failed	system may be low on memory	mpls-te	"Verify system memory availability. Then deconfigure \n" "graceful restart full-mode and configure it again. \n" "This will attempt to re-start the RSVP HA process and \n" "re-register with CF"
MHS E HA DB INIT F A E D	3-Error	Database init failed	system may be low on memory	mpls-te	"Verify system memory availability. Then deconfigure \n" "graceful restart full-mode and configure it again. \n" "This will attempt to re-start the RSVP HA process and \n" "re-register with CF"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MSEH_A3CBN1_AID	3-Error	Database init failed	system may be low on memory	mpls-te	"Verify system memory availability. Then deconfigure \n" "graceful restart full-mode and configure it again. \n" "This will attempt to re-start the RSVP HA process and \n" "re-register with CF"
MSEH_A3CBN1_AID	3-Error	Failed to move a database entry to [chars] tree	An attempt to move a data entry from one wavl tree to another wavl tree failed	mpls-te	"This error should never happen under normal " "operation and indicates an internal error. " "Open a ddtS"
MSEH_A3CBN1_AID	3-Error	Failed to move a database entry to [chars] tree	An attempt to move a data entry from one wavl tree to another wavl tree failed	mpls-te	"This error should never happen under normal " "operation and indicates an internal error. " "Open a ddtS"
MSEH_A3CBN1_AID	3-Error	Failed to move a database entry to [chars] tree	An attempt to move a data entry from one wavl tree to another wavl tree failed	mpls-te	"This error should never happen under normal " "operation and indicates an internal error. " "Open a ddtS"
MSEH_A3CBN1_AID	3-Error	In Service Software Upgrade ISSU Init failed	system may be low on memory	mpls-te	"Verify system memory availability. Then deconfigure \n" "graceful restart full-mode and configure it again. \n" "This will attempt to re-start the RSVP HA process and \n" "re-register with CF"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MISSTEHASUNIFALD	3-Error	In Service Software Upgrade ISSU Init failed	system may be low on memory	mpls-te	"Verify system memory availability. Then deconfigure \n" "graceful restart full-mode and configure it again. \n" "This will attempt to re-start the RSVP HA process and \n" "re-register with CF"
MISSTEHASUNIFALD	3-Error	In Service Software Upgrade ISSU Init failed	system may be low on memory	mpls-te	"Verify system memory availability. Then deconfigure \n" "graceful restart full-mode and configure it again. \n" "This will attempt to re-start the RSVP HA process and \n" "re-register with CF"
MISSTEHASUNIFALD	3-Error	Item size [node]bigger than default CF buffer [node]supported by	A database entry cannot be sent to the standby because the database entry doesn't fit in a CF maximum size buffer allowed by the platform.	mpls-te	"This error indicates a problem with design in " "handling platform dependent restrictions. " "Open a ddts"
MISSTEHASUNIFALD	3-Error	Item size [node]bigger than default CF buffer [node]supported by	A database entry cannot be sent to the standby because the database entry doesn't fit in a CF maximum size buffer allowed by the platform.	mpls-te	"This error indicates a problem with design in " "handling platform dependent restrictions. " "Open a ddts"
MISSTEHASUNIFALD	3-Error	Item size [node]bigger than default CF buffer [node]supported by	A database entry cannot be sent to the standby because the database entry doesn't fit in a CF maximum size buffer allowed by the platform.	mpls-te	"This error indicates a problem with design in " "handling platform dependent restrictions. " "Open a ddts"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MSEIHA</del> <u>MANNI</u> <del>AI</del> <u>ED</u>	3-Error	Main init failed	system may be low on memory	mpls-te	"Verify system memory availability. Then deconfigure \n" "graceful restart full-mode and configure it again. \n" "This will attempt to re-start the RSVP HA process and \n" "re-register with CF"
<del>MSEIHA</del> <u>MANNI</u> <del>AI</del> <u>ED</u>	3-Error	Main init failed	system may be low on memory	mpls-te	"Verify system memory availability. Then deconfigure \n" "graceful restart full-mode and configure it again. \n" "This will attempt to re-start the RSVP HA process and \n" "re-register with CF"
<del>MSEIHA</del> <u>MANNI</u> <del>AI</del> <u>ED</u>	3-Error	Main init failed	system may be low on memory	mpls-te	"Verify system memory availability. Then deconfigure \n" "graceful restart full-mode and configure it again. \n" "This will attempt to re-start the RSVP HA process and \n" "re-register with CF"
<del>MSEIHA</del> <u>MANNI</u> <del>AI</del> <u>ED</u>	3-Error	Message Manager init failed	system may be low on memory	mpls-te	"Verify system memory availability. Then deconfigure \n" "graceful restart full-mode and configure it again. \n" "This will attempt to re-start the RSVP HA process and \n" "re-register with CF"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>MSEH-AMGRNIALD</del>	3-Error	Message Manager init failed	system may be low on memory	mpls-te	"Verify system memory availability. Then deconfigure \n" "graceful restart full-mode and configure it again. \n" "This will attempt to re-start the RSVP HA process and \n" "re-register with CF"
<del>MSEH-AMGRNIALD</del>	3-Error	Message Manager init failed	system may be low on memory	mpls-te	"Verify system memory availability. Then deconfigure \n" "graceful restart full-mode and configure it again. \n" "This will attempt to re-start the RSVP HA process and \n" "re-register with CF"
<del>MSEH-PROCSRAHALD</del>	3-Error	Failed to create RSVP HA process	system may be low on memory	mpls-te	"Verify system memory availability. Then deconfigure \n" "graceful restart full-mode and configure it again. \n" "This will attempt to re-start the RSVP HA process"
<del>MSEH-PROCSRAHALD</del>	3-Error	Failed to create RSVP HA process	system may be low on memory	mpls-te	"Verify system memory availability. Then deconfigure \n" "graceful restart full-mode and configure it again. \n" "This will attempt to re-start the RSVP HA process"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MPLS-ERR-3-RESERVED	3-Error	Failed to create RSVP HA process	system may be low on memory	mpls-te	"Verify system memory availability. Then deconfigure \n" "graceful restart full-mode and configure it again. \n" "This will attempt to re-start the RSVP HA process"
MPLS-ERR-3-PROCESS_KILL	3-Error	Killing RSVP HA process	system may be low on memory. Failed to create RSVP HA \n services	mpls-te	LOG_SID_NO_ACTION
MPLS-ERR-3-PROCESS_KILL	3-Error	Killing RSVP HA process	system may be low on memory. Failed to create RSVP HA \n services	mpls-te	LOG_SID_NO_ACTION
MPLS-ERR-3-PROCESS_KILL	3-Error	Killing RSVP HA process	system may be low on memory. Failed to create RSVP HA \n services	mpls-te	LOG_SID_NO_ACTION
MPLS-ERR-3-RESERVED	3-Error	Failed to register with RF	system may be low on memory	mpls-te	"Verify system memory availability. Then deconfigure \n" "graceful restart full-mode and configure it again. \n" "This will attempt to re-start the RSVP HA process and \n" "re-register with CF"
MPLS-ERR-3-RESERVED	3-Error	Failed to register with RF	system may be low on memory	mpls-te	"Verify system memory availability. Then deconfigure \n" "graceful restart full-mode and configure it again. \n" "This will attempt to re-start the RSVP HA process and \n" "re-register with CF"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MSEI <del>HA</del> RFUNCSERIAL	3-Error	Failed to register with RF	system may be low on memory	mpls-te	"Verify system memory availability. Then deconfigure \n" "graceful restart full-mode and configure it again. \n" "This will attempt to re-start the RSVP HA process and \n" "re-register with CF"
MSEI <del>HA</del> RFUNCSERIAL	3-Error	Failed to unregister with RF	RSVP HA client may not have registered with RF	mpls-te	LOG_SID_NO_ACTION
MSEI <del>HA</del> RFUNCSERIAL	3-Error	Failed to unregister with RF	RSVP HA client may not have registered with RF	mpls-te	LOG_SID_NO_ACTION
MSEI <del>HA</del> RFUNCSERIAL	3-Error	Failed to unregister with RF	RSVP HA client may not have registered with RF	mpls-te	LOG_SID_NO_ACTION
MSEI <del>HA</del> SSOUNS <del>UR</del> IED	3-Error	Attempt to init RSVP HA subsystem when TE SSO not supported	RSVP TE SSO is included in image that doesn't support SSO	mpls-te	"This error indicates a problem with design in. " "Open a ddts"
MSEI <del>HA</del> SSOUNS <del>UR</del> IED	3-Error	Attempt to init RSVP HA subsystem when TE SSO not supported	RSVP TE SSO is included in image that doesn't support SSO	mpls-te	"This error indicates a problem with design in. " "Open a ddts"
MSEI <del>HA</del> SSOUNS <del>UR</del> IED	3-Error	Attempt to init RSVP HA subsystem when TE SSO not supported	RSVP TE SSO is included in image that doesn't support SSO	mpls-te	"This error indicates a problem with design in. " "Open a ddts"
MSEI <del>TE</del> LMCOSSENCY	3-Error	[chars]: [chars] [chars] [chars]	An action attempted by the MPLS TE Link Management implementation encountered an unexpected condition	mpls-te	"Copy the message exactly as it appears and report it to your " "technical service representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MPLS_TELM_CONSISNCY	3-Error	[chars]: [chars] [chars] [chars]	An action attempted by the MPLS TE Link Management implementation encountered an unexpected condition	mpls-te	"Copy the message exactly as it appears and report it to your " "technical service representative."
MPLS_TELM_CONSISNCY	3-Error	[chars]: [chars] [chars] [chars]	An action attempted by the MPLS TE Link Management implementation encountered an unexpected condition	mpls-te	"Copy the message exactly as it appears and report it to your " "technical service representative."
MPLS_TELM_CONSISNCY	3-Error	Interface [chars]: GMPLS [chars] labels unsupported	The indicated interface is unable to provide labels of the indicated type.	mpls-te	LOG_SID_SH_TECH_ACTION
MPLS_TELM_CONSISNCY	3-Error	Interface [chars]: GMPLS [chars] labels unsupported	The indicated interface is unable to provide labels of the indicated type.	mpls-te	LOG_SID_SH_TECH_ACTION
MPLS_TELM_CONSISNCY	3-Error	Interface [chars]: GMPLS [chars] labels unsupported	The indicated interface is unable to provide labels of the indicated type.	mpls-te	LOG_SID_SH_TECH_ACTION
MPLS_TELM_INVALID_LSP	3-Error	A valid LSP must be present for [chars]	A valid LSP is required for this action. This is not a typical occurrence.	mpls-te	LOG_SID_NO_ACTION
MPLS_TELM_INVALID_LSP	3-Error	A valid LSP must be present for [chars]	A valid LSP is required for this action. This is not a typical occurrence.	mpls-te	LOG_SID_NO_ACTION
MPLS_TELM_INVALID_LSP	3-Error	A valid LSP must be present for [chars]	A valid LSP is required for this action. This is not a typical occurrence.	mpls-te	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MSEMSBCECODGNE	3-Error	LSP [chars] requesting Encoding Type [[chars]] that is unsupported on interface [chars].	The indicated TE LSP routed on the indicated interface requested an Encoding Type that is unsupported on the interface. The requested value appears in the Generalized Label Request.	mpls-te	

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
					<p>"Verify that the head end originating the TE LSP has a Generalized " "Label Request that is specifying an Encoding Type acceptable to the " "interface in question. If not alter the head end configuration " "to request an LSP with an appropriate value or cause the LSP " "to be routed on a different interface. " "If this problem still persists copy the error message exactly as " "it appears on the console or in the system log. Please perform " "a search of the Bug Toolkit " BUG_TOOLKIT ". If you need additional " "assistance open a case with the Technical Assistance Center via " "the Internet " TAC_CASE_OPEN " or contact your Cisco technical " "support representative. Please provide the output of " "&lt;cmdBold&gt;show tech-support&lt;/cmdBold&gt; and a topology diagram " "showing the hops in the LSP marking each hop with the " "vendor/software</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
					and identify which hop is the IOS device issuing "the error message."



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MISHMABAENCONE	3-Error	LSP [chars] requesting Encoding Type [[chars]] that is unsupported on interface [chars].	The indicated TE LSP routed on the indicated interface requested an Encoding Type that is unsupported on the interface. The requested value appears in the Generalized Label Request.	mpls-te	

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
					<p>"Verify that the head end originating the TE LSP has a Generalized "Label Request that is specifying an Encoding Type acceptable to the "interface in question. If not alter the head end configuration "to request an LSP with an appropriate value or cause the LSP "to be routed on a different interface. "If this problem still persists copy the error message exactly as "it appears on the console or in the system log. Please perform "a search of the Bug Toolkit "BUG_TOOLKIT ". If you need additional "assistance open a case with the Technical Assistance Center via "the Internet "TAC_CASE_OPEN " or contact your Cisco technical "support representative. Please provide the output of "<code>&lt;cmdBold&gt;show tech-support&lt;/cmdBold&gt;</code> and a topology diagram "showing the hops in the LSP marking each hop with the "vendor/software</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
					and identify which hop is the IOS device issuing "the error message."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MSEMSBCECODGNE	3-Error	LSP [chars] requesting Encoding Type [[chars]] that is unsupported on interface [chars].	The indicated TE LSP routed on the indicated interface requested an Encoding Type that is unsupported on the interface. The requested value appears in the Generalized Label Request.	mpls-te	

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
					<p>"Verify that the head end originating the TE LSP has a Generalized " "Label Request that is specifying an Encoding Type acceptable to the " "interface in question. If not alter the head end configuration " "to request an LSP with an appropriate value or cause the LSP " "to be routed on a different interface. " "If this problem still persists copy the error message exactly as " "it appears on the console or in the system log. Please perform " "a search of the Bug Toolkit " BUG_TOOLKIT ". If you need additional " "assistance open a case with the Technical Assistance Center via " "the Internet " TAC_CASE_OPEN " or contact your Cisco technical " "support representative. Please provide the output of " "&lt;cmdBold&gt;show tech-support&lt;/cmdBold&gt; and a topology diagram " "showing the hops in the LSP marking each hop with the " "vendor/software</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
					and identify which hop is the IOS device issuing "the error message."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MSHA-BL-ERR-3-ERR	3-Error	[chars]: LSP requests encoding type unsupported or invalid	The indicated TE LSP routed on the indicated interface requested a Switching Type that is unsupported on the interface. The requested value appears in the Generalized Label Request.	mpls-te	

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
					<p>"Verify that the head end originating the TE LSP has a Generalized " "Label Request that is specifying a Switching Type acceptable to the " "interface in question. If not alter the head end configuration " "to request an LSP with an appropriate value or cause the LSP " "to be routed on a different interface. " "If this problem still persists copy the error message exactly as " "it appears on the console or in the system log. Please perform " "a search of the Bug Toolkit " BUG_TOOLKIT ". If you need additional " "assistance open a case with the Technical Assistance Center via " "the Internet " TAC_CASE_OPEN " or contact your Cisco technical " "support representative. Please provide the output of " "&lt;cmdBold&gt;show tech-support&lt;/cmdBold&gt; and a topology diagram " "showing the hops in the LSP marking each hop with the " "vendor/software</p>



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
					and identify which hop is the IOS device issuing "the error message."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MSHMPBCONNREQSD</del>	3-Error	[chars]: LSP requests encoding type unsupported or invalid	The indicated TE LSP routed on the indicated interface requested a Switching Type that is unsupported on the interface. The requested value appears in the Generalized Label Request.	mpls-te	

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
					<p>"Verify that the head end originating the TE LSP has a Generalized " "Label Request that is specifying a Switching Type acceptable to the " "interface in question. If not alter the head end configuration " "to request an LSP with an appropriate value or cause the LSP " "to be routed on a different interface. " "If this problem still persists copy the error message exactly as " "it appears on the console or in the system log. Please perform " "a search of the Bug Toolkit " BUG_TOOLKIT ". If you need additional " "assistance open a case with the Technical Assistance Center via " "the Internet " TAC_CASE_OPEN " or contact your Cisco technical " "support representative. Please provide the output of " "&lt;cmdBold&gt;show tech-support&lt;/cmdBold&gt; and a topology diagram " "showing the hops in the LSP marking each hop with the " "vendor/software</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
					and identify which hop is the IOS device issuing "the error message."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MSPABFCOINPQSE	3-Error	[chars]: LSP requests encoding type unsupported or invalid	The indicated TE LSP routed on the indicated interface requested a Switching Type that is unsupported on the interface. The requested value appears in the Generalized Label Request.	mpls-te	

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
					<p>"Verify that the head end originating the TE LSP has a Generalized " "Label Request that is specifying a Switching Type acceptable to the " "interface in question. If not alter the head end configuration " "to request an LSP with an appropriate value or cause the LSP " "to be routed on a different interface. " "If this problem still persists copy the error message exactly as " "it appears on the console or in the system log. Please perform " "a search of the Bug Toolkit " BUG_TOOLKIT ". If you need additional " "assistance open a case with the Technical Assistance Center via " "the Internet " TAC_CASE_OPEN " or contact your Cisco technical " "support representative. Please provide the output of " "&lt;cmdBold&gt;show tech-support&lt;/cmdBold&gt; and a topology diagram " "showing the hops in the LSP marking each hop with the " "vendor/software</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
					and identify which hop is the IOS device issuing " "the error message."
MPLS-TE-LSP-BAD-GID	3-Error	LSP [chars] requesting G-PID [[chars]] that is unsupported on interface [chars][chars].	The indicated TE LSP routed on the indicated interface requested a Generalized Payload Identifier unsupported on the	mpls-te	"Verify that the head end originating the TE LSP has a " "Label Request that is specifying a PID acceptable to the " "interface in question. If not one possibility is to alter the " "head end configuration to request an LSP with an appropriate value. " "Alternatively if this error is generated at the penultimate hop of " "an LSP where the endpoint is advertising an implicit-null label " "penultimate hop popping is in use alter the endpoint to "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MHS_IEM_BSP_BAD_GHD	3-Error	LSP [chars] requesting G-PID [[chars]] that is unsupported on interface [chars][chars].	The indicated TE LSP routed on the indicated interface requested a Generalized Payload Identifier unsupported on the	mpls-te	"Verify that the head end originating the TE LSP has a " "Label Request that is specifying a PID acceptable to the " "interface in question. If not one possibility is to alter the " "head end configuration to request an LSP with an appropriate value. " "Alternatively if this error is generated at the penultimate hop of " "an LSP where the endpoint is advertising an implicit-null label " "penultimate hop popping is in use alter the endpoint to "



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MISFEIMLSPBADGHD	3-Error	LSP [chars] requesting G-PID [[chars]] that is unsupported on interface [chars][chars].	The indicated TE LSP routed on the indicated interface requested a Generalized Payload Identifier unsupported on the	mpls-te	"Verify that the head end originating the TE LSP has a "Label Request that is specifying a PID acceptable to the "interface in question. If not one possibility is to alter the "head end configuration to request an LSP with an appropriate value. "Alternatively if this error is generated at the penultimate hop of "an LSP where the endpoint is advertising an implicit-null label "penultimate hop popping is in use alter the endpoint to "
MISFEIMLSPBADGHD	3-Error	[chars]: LSP requests G-PID unsupported or invalid	-	-	-
MISFEIMLSPBADGHD	3-Error	[chars]: LSP requests G-PID unsupported or invalid	-	-	-
MISFEIMLSPBADGHD	3-Error	[chars]: LSP requests G-PID unsupported or invalid	-	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MSEMSB/SWITCH/NE	3-Error	LSP [chars] requesting Switching Type [[chars]] that is unsupported on interface [chars].	The indicated TE LSP routed on the indicated interface requested a Switching Type that is unsupported on the interface. The requested value appears in the Generalized Label Request.	mpls-te	

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
					<p>"Verify that the head end originating the TE LSP has a Generalized " "Label Request that is specifying a Switching Type acceptable to the " "interface in question. If not alter the head end configuration " "to request an LSP with an appropriate value or cause the LSP " "to be routed on a different interface. " "If this problem still persists copy the error message exactly as " "it appears on the console or in the system log. Please perform " "a search of the Bug Toolkit " BUG_TOOLKIT ". If you need additional " "assistance open a case with the Technical Assistance Center via " "the Internet " TAC_CASE_OPEN " or contact your Cisco technical " "support representative. Please provide the output of " "&lt;cmdBold&gt;show tech-support&lt;/cmdBold&gt; and a topology diagram " "showing the hops in the LSP marking each hop with the " "vendor/software</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
					and identify which hop is the IOS device issuing "the error message."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MISHM3ERRSWCHGME	3-Error	LSP [chars] requesting Switching Type [[chars]] that is unsupported on interface [chars].	The indicated TE LSP routed on the indicated interface requested a Switching Type that is unsupported on the interface. The requested value appears in the Generalized Label Request.	mpls-te	

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
					<p>"Verify that the head end originating the TE LSP has a Generalized "Label Request that is specifying a Switching Type acceptable to the "interface in question. If not alter the head end configuration "to request an LSP with an appropriate value or cause the LSP "to be routed on a different interface. "If this problem still persists copy the error message exactly as "it appears on the console or in the system log. Please perform "a search of the Bug Toolkit "BUG_TOOLKIT ". If you need additional "assistance open a case with the Technical Assistance Center via "the Internet "TAC_CASE_OPEN " or contact your Cisco technical "support representative. Please provide the output of "<code>&lt;cmd&gt;show tech-support&lt;/cmd&gt;</code> and a topology diagram "showing the hops in the LSP marking each hop with the "vendor/software</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
					and identify which hop is the IOS device issuing "the error message."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MSEMSBDCSWITCHGNE	3-Error	LSP [chars] requesting Switching Type [[chars]] that is unsupported on interface [chars].	The indicated TE LSP routed on the indicated interface requested a Switching Type that is unsupported on the interface. The requested value appears in the Generalized Label Request.	mpls-te	



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
					<p>"Verify that the head end originating the TE LSP has a Generalized " "Label Request that is specifying a Switching Type acceptable to the " "interface in question. If not alter the head end configuration " "to request an LSP with an appropriate value or cause the LSP " "to be routed on a different interface. " "If this problem still persists copy the error message exactly as " "it appears on the console or in the system log. Please perform " "a search of the Bug Toolkit " BUG_TOOLKIT ". If you need additional " "assistance open a case with the Technical Assistance Center via " "the Internet " TAC_CASE_OPEN " or contact your Cisco technical " "support representative. Please provide the output of " "&lt;cmdBold&gt;show tech-support&lt;/cmdBold&gt; and a topology diagram " "showing the hops in the LSP marking each hop with the " "vendor/software</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
					and identify which hop is the IOS device issuing "the error message."
<del>MSEIEMPLSWICNREQISE</del>	3-Error	[chars]: LSP requests switching type [[chars]] unsupported on link [[chars]]	-	-	-
<del>MSEIEMPLSWICNREQISE</del>	3-Error	[chars]: LSP requests switching type [[chars]] unsupported on link [[chars]]	-	-	-
<del>MSEIEMPLSWICNREQISE</del>	3-Error	[chars]: LSP requests switching type [[chars]] unsupported on link [[chars]]	-	-	-
MSEIEMPLCLRCONIES	5-Notice	Clear MPLS TE Link Management counters by [chars]	The MPLS TE Link Management counters have been cleared	mpls-te	LOG_SID_NO_ACTION
MSEIEMPLCLRCONIES	5-Notice	Clear MPLS TE Link Management counters by [chars]	The MPLS TE Link Management counters have been cleared	mpls-te	LOG_SID_NO_ACTION
MSEIEMPLCLRCONIES	5-Notice	Clear MPLS TE Link Management counters by [chars]	The MPLS TE Link Management counters have been cleared	mpls-te	LOG_SID_NO_ACTION
<del>MSEIEMPLRSEQEIBRC</del>	3-Error	Error occurred during TE NSR resequence	An unrecoverable error occurred during TE NSR resequence of state	mpls-te	"Disable and then reenable TE NSR functionality and "open a DDTs"
<del>MSEIEMPLRSEQEIBRC</del>	3-Error	Error occurred during TE NSR resequence	An unrecoverable error occurred during TE NSR resequence of state	mpls-te	"Disable and then reenable TE NSR functionality and "open a DDTs"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MSEIENRSEQNCHRR</del>	3-Error	Error occurred during TE NSR resequence	An unrecoverable error occurred during TE NSR resequence of state	mpls-te	"Disable and then reenable TE NSR functionality and "open a DDTS"
<del>MSEIENRSEQNCHRR</del>	2-Critical	[chars] [chars] [chars]	Two nodes have the same stable ip address	mpls-te	"Find the system that has the duplicate ip address and configure a "different one"
<del>MSEIENRSEQNCHRR</del>	2-Critical	[chars] [chars] [chars]	Two nodes have the same stable ip address	mpls-te	"Find the system that has the duplicate ip address and configure a "different one"
<del>MSEIENRSEQNCHRR</del>	2-Critical	[chars] [chars] [chars]	Two nodes have the same stable ip address	mpls-te	"Find the system that has the duplicate ip address and configure a "different one"
<del>MSEIENRSEQNCHRR</del>	2-Critical	[chars] [chars] [chars]	Two nodes have the same stable router id	mpls-te	"Find the system that has the duplicate router id and configure a "different one"
<del>MSEIENRSEQNCHRR</del>	2-Critical	[chars] [chars] [chars]	Two nodes have the same stable router id	mpls-te	"Find the system that has the duplicate router id and configure a "different one"
<del>MSEIENRSEQNCHRR</del>	2-Critical	[chars] [chars] [chars]	Two nodes have the same stable router id	mpls-te	"Find the system that has the duplicate router id and configure a "different one"
<del>MSEIENRSEQNCHRR</del>	2-Critical	Router id [chars] received from [chars] in fragment [node]	Received Router ID in multiple fragments	mpls-te	"Locate the problem router and contact your Cisco "technical support representative for assistance."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>MSEPCAGNDRRQMET</del>	2-Critical	Router id [chars] received from [chars] in fragment [node]	Received Router ID in multiple fragments	mpls-te	"Locate the problem router and contact your Cisco " "technical support representative for assistance."
<del>MSEPCAGNDRRQMET</del>	2-Critical	Router id [chars] received from [chars] in fragment [node]	Received Router ID in multiple fragments	mpls-te	"Locate the problem router and contact your Cisco " "technical support representative for assistance."
MSEPCAGNDRRD	2-Critical	Invalid router id [chars] received from [chars] in fragment [node]	Received an Invalid Router LSA. LSA should not contain a Router id of zero. The cause of this problem may be misconfiguration memory corruption or unexpected behaviour on a router	mpls-te	"Locate the problem router and check the configuration. " "To determine what is causing this problem call " "your Cisco technical support representative for assistance."
MSEPCAGNDRRD	2-Critical	Invalid router id [chars] received from [chars] in fragment [node]	Received an Invalid Router LSA. LSA should not contain a Router id of zero. The cause of this problem may be misconfiguration memory corruption or unexpected behaviour on a router	mpls-te	"Locate the problem router and check the configuration. " "To determine what is causing this problem call " "your Cisco technical support representative for assistance."
MSEPCAGNDRRD	2-Critical	Invalid router id [chars] received from [chars] in fragment [node]	Received an Invalid Router LSA. LSA should not contain a Router id of zero. The cause of this problem may be misconfiguration memory corruption or unexpected behaviour on a router	mpls-te	"Locate the problem router and check the configuration. " "To determine what is causing this problem call " "your Cisco technical support representative for assistance."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MPLS_TE_PCALC2MEM	2-Critical	[chars] [dec]	A failure at an attempt to alloc memory was detected	mpls-te	LOG_STD_ACTION
MPLS_TE_PCALC2MEM	2-Critical	[chars] [dec]	A failure at an attempt to alloc memory was detected	mpls-te	LOG_STD_ACTION
MPLS_TE_PCALC2MEM	2-Critical	[chars] [dec]	A failure at an attempt to alloc memory was detected	mpls-te	LOG_STD_ACTION
MPLS_TE_PCALC3INT	3-Error	[chars]	An internal inconsistency was detected during MPLS TE path calculation initialization such as an attempt was made to initialize the MPLS TE path calculation system_id before the system_id size is known.	mpls-te	LOG_STD_ACTION
MPLS_TE_PCALC3INT	3-Error	[chars]	An internal inconsistency was detected during MPLS TE path calculation initialization such as an attempt was made to initialize the MPLS TE path calculation system_id before the system_id size is known.	mpls-te	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MPLS_TE_PCALC3INT	3-Error	[chars]	An internal inconsistency was detected during MPLS TE path calculation initialization such as an attempt was made to initialize the MPLS TE path calculation system id before the system_id size is known.	mpls-te	LOG_STD_ACTION
MPLS_TE_PCALC3LSA	3-Error	[chars] [chars]	An internal inconsistency was detected when an attempt was made to establish handle received lsa for MPLS TE topology database.	mpls-te	LOG_STD_ACTION
MPLS_TE_PCALC3LSA	3-Error	[chars] [chars]	An internal inconsistency was detected when an attempt was made to establish handle received lsa for MPLS TE topology database.	mpls-te	LOG_STD_ACTION
MPLS_TE_PCALC3LSA	3-Error	[chars] [chars]	An internal inconsistency was detected when an attempt was made to establish handle received lsa for MPLS TE topology database.	mpls-te	LOG_STD_ACTION
MPLS_TE_PCALC3PAIH	3-Error	[chars]	An internal inconsistency was detected when an attempt was made to establish an MPLS TE tunnel using the MPLS TE path calculation subsystem.	mpls-te	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MPLS_TE_FCALC3PATH	3-Error	[chars]	An internal inconsistency was detected when an attempt was made to establish an MPLS TE tunnel using the MPLS TE path calculation subsystem.	mpls-te	LOG_STD_ACTION
MPLS_TE_FCALC3PATH	3-Error	[chars]	An internal inconsistency was detected when an attempt was made to establish an MPLS TE tunnel using the MPLS TE path calculation subsystem.	mpls-te	LOG_STD_ACTION
MPLS_TE2ADJ_WALK_ERR	2-Critical	[chars]	Error during bundle adjacency walk	mpls-te	LOG_STD_ACTION
MPLS_TE2ADJ_WALK_ERR	2-Critical	[chars]	Error during bundle adjacency walk	mpls-te	LOG_STD_ACTION
MPLS_TE2ADJ_WALK_ERR	2-Critical	[chars]	Error during bundle adjacency walk	mpls-te	LOG_STD_ACTION
MPLS_TE2BUNDLE_INSERT	2-Critical	[chars] [chars]	Request for inserting a traffic engineering tunnel bundle failed.	mpls-te	LOG_STD_ACTION
MPLS_TE2BUNDLE_INSERT	2-Critical	[chars] [chars]	Request for inserting a traffic engineering tunnel bundle failed.	mpls-te	LOG_STD_ACTION
MPLS_TE2BUNDLE_INSERT	2-Critical	[chars] [chars]	Request for inserting a traffic engineering tunnel bundle failed.	mpls-te	LOG_STD_ACTION
MPLS_TE2UNSUPP_LINK_TYPE	2-Critical	[chars]	Unsupported link type	mpls-te	LOG_STD_ACTION
MPLS_TE2UNSUPP_LINK_TYPE	2-Critical	[chars]	Unsupported link type	mpls-te	LOG_STD_ACTION
MPLS_TE2UNSUPP_LINK_TYPE	2-Critical	[chars]	Unsupported link type	mpls-te	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MPLS_TE3CONSSIENCY	3-Error	[chars]: [chars] [chars] [chars]	An action attempted by the traffic engineering tunnel implementation encountered an unexpected condition	mpls-te	"Copy the message exactly as it appears and report it to your " "technical service representative."
MPLS_TE3CONSSIENCY	3-Error	[chars]: [chars] [chars] [chars]	An action attempted by the traffic engineering tunnel implementation encountered an unexpected condition	mpls-te	"Copy the message exactly as it appears and report it to your " "technical service representative."
MPLS_TE3CONSSIENCY	3-Error	[chars]: [chars] [chars] [chars]	An action attempted by the traffic engineering tunnel implementation encountered an unexpected condition	mpls-te	"Copy the message exactly as it appears and report it to your " "technical service representative."
MPLS_TE3MFIERROR	3-Error	[chars]: [chars] [chars]	A traffic engineering request to the label switching database encountered an unexpected condition	mpls-te	"Copy the message exactly as it appears and report it to your " "technical service representative."
MPLS_TE3MFIERROR	3-Error	[chars]: [chars] [chars]	A traffic engineering request to the label switching database encountered an unexpected condition	mpls-te	"Copy the message exactly as it appears and report it to your " "technical service representative."
MPLS_TE3MFIERROR	3-Error	[chars]: [chars] [chars]	A traffic engineering request to the label switching database encountered an unexpected condition	mpls-te	"Copy the message exactly as it appears and report it to your " "technical service representative."
MPLS_TE3HNSIFDOWN	3-Error	[chars]'s LSP interface [chars] did not come up after [node]msecs	The underlying interface for a tunnel LSP did not come up although the tunnel itself is up.	mpls-te	"See if the underlying interface is physically connected."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MPLS_TE3HYSNIFDOWN	3-Error	[chars]'s LSP interface [chars] did not come up after [node]msecs	The underlying interface for a tunnel LSP did not come up although the tunnel itself is up.	mpls-te	"See if the underlying interface is physically connected."
MPLS_TE3HYSNIFDOWN	3-Error	[chars]'s LSP interface [chars] did not come up after [node]msecs	The underlying interface for a tunnel LSP did not come up although the tunnel itself is up.	mpls-te	"See if the underlying interface is physically connected."
MPLS_TE3SIGNALERRNT	3-Error	Signaller unable to [chars]register RSVP [chars]	A message handler used by the signaller to receive events or requests from RSVP could not be installed or removed.	mpls-te	"Copy and save the message. If possible re-start " "the TSP tunnel signalling process by issuing the " "no tag-switching tsp-tunnels command followed by " "the tag-switching tsp-tunnels command. If the " "message continues to occur even after re-starting " "the signalling process several times then contact " "your technical support representative for " "assistance."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MPLS_TE3-SIGNALERRNT	3-Error	Signaller unable to [chars]register RSVP [chars]	A message handler used by the signaller to receive events or requests from RSVP could not be installed or removed.	mpls-te	"Copy and save the message. If possible re-start " "the TSP tunnel signalling process by issuing the " "no tag-switching tsp-tunnels command followed by " "the tag-switching tsp-tunnels command. If the " "message continues to occur even after re-starting " "the signalling process several times then contact " "your technical support representative for " "assistance."
MPLS_TE3-SIGNALERRNT	3-Error	Signaller unable to [chars]register RSVP [chars]	A message handler used by the signaller to receive events or requests from RSVP could not be installed or removed.	mpls-te	"Copy and save the message. If possible re-start " "the TSP tunnel signalling process by issuing the " "no tag-switching tsp-tunnels command followed by " "the tag-switching tsp-tunnels command. If the " "message continues to occur even after re-starting " "the signalling process several times then contact " "your technical support representative for " "assistance."
MPLS_TE3-TUNNELKILL	3-Error	Tunnel removal attempt by [chars] failed for tunnel [chars]: [chars]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MPLS_TE3-TUNNELKILL	3-Error	Tunnel removal attempt by [chars] failed for tunnel [chars]: [chars]	-	-	-
MPLS_TE3-TUNNELKILL	3-Error	Tunnel removal attempt by [chars] failed for tunnel [chars]: [chars]	-	-	-
MPLS_TE4-CONFLICT_BRCFG	4-Warning	[chars]	Conflicting bidirectional association configuration	mpls-te	"Re-check tunnel configuration and make sure destination of tunnel" "is properly set and the bidirectional association is unique against" "all tunnels."
MPLS_TE4-CONFLICT_BRCFG	4-Warning	[chars]	Conflicting bidirectional association configuration	mpls-te	"Re-check tunnel configuration and make sure destination of tunnel" "is properly set and the bidirectional association is unique against" "all tunnels."
MPLS_TE4-CONFLICT_BRCFG	4-Warning	[chars]	Conflicting bidirectional association configuration	mpls-te	"Re-check tunnel configuration and make sure destination of tunnel" "is properly set and the bidirectional association is unique against" "all tunnels."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MPLS_TE4LSPREJECT	4-Warning	LSP [chars] rejected: matching passive TE tunnel [chars]	An RSVP Path message for an LSP for a tunnel was rejected with a PathErr message due to the absence of a properly configured MPLS passive tunnel interface which is administratively up.	mpls-te	"Create and/or properly configure an MPLS passive tunnel interface " "which will match the rejected LSP and ensure that it is " "administratively up or modify the tunnel interface configuration " "at the head end of the tunnel."
MPLS_TE4LSPREJECT	4-Warning	LSP [chars] rejected: matching passive TE tunnel [chars]	An RSVP Path message for an LSP for a tunnel was rejected with a PathErr message due to the absence of a properly configured MPLS passive tunnel interface which is administratively up.	mpls-te	"Create and/or properly configure an MPLS passive tunnel interface " "which will match the rejected LSP and ensure that it is " "administratively up or modify the tunnel interface configuration " "at the head end of the tunnel."
MPLS_TE4LSPREJECT	4-Warning	LSP [chars] rejected: matching passive TE tunnel [chars]	An RSVP Path message for an LSP for a tunnel was rejected with a PathErr message due to the absence of a properly configured MPLS passive tunnel interface which is administratively up.	mpls-te	"Create and/or properly configure an MPLS passive tunnel interface " "which will match the rejected LSP and ensure that it is " "administratively up or modify the tunnel interface configuration " "at the head end of the tunnel."
MPLS_TE4CPRIORALID	4-Warning	LSP TID:[dec] LID:[dec] wasn't reported to the PCE server	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MPLS_TE-4-CP-PC-RT-ALD	4-Warning	LSP TID:[dec] LID:[dec] wasn't reported to the PCE server	-	-	-
MPLS_TE-4-CP-PC-RT-ALD	4-Warning	LSP TID:[dec] LID:[dec] wasn't reported to the PCE server	-	-	-
MPLS_TE-4-CP-PC-RT-ALD	4-Warning	Unable to request path for LSP TID:[dec] LID:[dec] from PCE server	-	-	-
MPLS_TE-4-CP-PC-RT-ALD	4-Warning	Unable to request path for LSP TID:[dec] LID:[dec] from PCE server	-	-	-
MPLS_TE-4-CP-PC-RT-ALD	4-Warning	Unable to request path for LSP TID:[dec] LID:[dec] from PCE server	-	-	-
MPLS_TE-5-FRR	5-Notice	[chars]	An informational traffic engineering tunnel trap was generated for an MPLS Fast-Reroute event.	mpls-te	"Copy the message exactly as it appears and report it to your " "technical service representative."
MPLS_TE-5-FRR	5-Notice	[chars]	An informational traffic engineering tunnel trap was generated for an MPLS Fast-Reroute event.	mpls-te	"Copy the message exactly as it appears and report it to your " "technical service representative."
MPLS_TE-5-FRR	5-Notice	[chars]	An informational traffic engineering tunnel trap was generated for an MPLS Fast-Reroute event.	mpls-te	"Copy the message exactly as it appears and report it to your " "technical service representative."
MPLS_TE-5-LSP	5-Notice	[chars]	An informational traffic engineering tunnel trap was generated for an LSP event.	mpls-te	"Copy the message exactly as it appears and report it to your " "technical service representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MPLS_TE-5-LSP	5-Notice	[chars]	An informational traffic engineering tunnel trap was generated for an LSP event.	mpls-te	"Copy the message exactly as it appears and report it to your " "technical service representative."
MPLS_TE-5-LSP	5-Notice	[chars]	An informational traffic engineering tunnel trap was generated for an LSP event.	mpls-te	"Copy the message exactly as it appears and report it to your " "technical service representative."
MPLS_TE-5-TUN	5-Notice	[chars]	An informational traffic engineering tunnel trap was generated for a Tunnel event.	mpls-te	"Copy the message exactly as it appears and report it to your " "technical service representative."
MPLS_TE-5-TUN	5-Notice	[chars]	An informational traffic engineering tunnel trap was generated for a Tunnel event.	mpls-te	"Copy the message exactly as it appears and report it to your " "technical service representative."
MPLS_TE-5-TUN	5-Notice	[chars]	An informational traffic engineering tunnel trap was generated for a Tunnel event.	mpls-te	"Copy the message exactly as it appears and report it to your " "technical service representative."
<del>MPLS_TP-3-CPCHG</del>	3-Error	Bandiwdth pool available to MPLS-TP has changed	Bandwidth pool available to MPLS-TP has changed. This is either due to the removal of a link or changing to the pool through CLI configuration	mpls-tp	LOG_STD_ACTION
<del>MPLS_TP-3-CPCHG</del>	3-Error	Bandiwdth pool available to MPLS-TP has changed	Bandwidth pool available to MPLS-TP has changed. This is either due to the removal of a link or changing to the pool through CLI configuration	mpls-tp	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MPLS_TP_LINK_CHANGED	5-Notice	Link [node]interface [chars] next-hop [chars] [chars]	The configuration of the MPLS-TP link has changed. This message is to notify the NMS of changes.	-	LOG_STD_ACTION
MPLS_TP_LINK_CHANGED	5-Notice	Link [node]interface [chars] next-hop [chars] [chars]	The configuration of the MPLS-TP link has changed. This message is to notify the NMS of changes.	-	LOG_STD_ACTION
MPLS_TP_LSP_FSM_ERROR	3-Error	LSP FSM Error occurred. Received event:[chars] in state:[chars]	An erroneous event was received by the TP LSP. This is an error internal to MPLS-TP	mpls-tp	LOG_STD_ACTION
MPLS_TP_LSP_FSM_ERROR	3-Error	LSP FSM Error occurred. Received event:[chars] in state:[chars]	An erroneous event was received by the TP LSP. This is an error internal to MPLS-TP	mpls-tp	LOG_STD_ACTION
MPLS_TP_LSP_UPDOWN	3-Error	[chars] LSP [chars] is [chars][chars][chars]	The indicated MPLS-TP LSP has gone up or down. If the LSP went down the failure condition and the fault source information is provided.	-	"Examine the failure condition and source information to determine why " "the LSP went down."
MPLS_TP_LSP_UPDOWN	3-Error	[chars] LSP [chars] is [chars][chars][chars]	The indicated MPLS-TP LSP has gone up or down. If the LSP went down the failure condition and the fault source information is provided.	-	"Examine the failure condition and source information to determine why " "the LSP went down."
MPLS_TP_LINK_CHANGED	5-Notice	LSP [chars] is [chars]	The configuration of the MPLS-TP midpoint LSP has changed. This message is to notify the NMS of changes.	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MPLSPKONCHANGED	5-Notice	LSP [chars] is [chars]	The configuration of the MPLS-TP midpoint LSP has changed. This message is to notify the NMS of changes.	-	LOG_STD_ACTION
MPLS_IP_LSPSLOCKOUT	5-Notice	[chars] LSP [chars] [chars] lockout state	The indicated LSP has entered or exited lockout state due to administrative action at one endpoint	-	LOG_STD_ACTION
MPLS_IP_LSPSLOCKOUT	5-Notice	[chars] LSP [chars] [chars] lockout state	The indicated LSP has entered or exited lockout state due to administrative action at one endpoint	-	LOG_STD_ACTION
MPLS_IP_MEMNO_MEM	3-Error	Could not allocate memory for MPLS-TP context	Could not allocate memory for MPLS-TP context. This is an internal issue to MPLS-TP	mpls-tp	LOG_STD_ACTION
MPLS_IP_MEMNO_MEM	3-Error	Could not allocate memory for MPLS-TP context	Could not allocate memory for MPLS-TP context. This is an internal issue to MPLS-TP	mpls-tp	LOG_STD_ACTION
MPLS_IP_PROG_CREATE_FAIL	3-Error	[chars] [chars] [dec]	Could not create MPLS-TP process. This is an internal issue to MPLS-TP	mpls-tp	LOG_STD_ACTION
MPLS_IP_PROG_CREATE_FAIL	3-Error	[chars] [chars] [dec]	Could not create MPLS-TP process. This is an internal issue to MPLS-TP	mpls-tp	LOG_STD_ACTION
MPLS_IP_PROG_UNKNOWN_EVENT	3-Error	Received unknown event: Major:[dec] Minor:[dec]	An unknown event was posted to the MPLS-TP queue. This is an internal issue to MPLS-TP.	mpls-tp	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MPLS_TP-3-UNKNOWN</del>	3-Error	Received unknown event: Major:[dec] Minor:[dec]	An unknown event was posted to the MPLS-TP queue. This is an internal issue to MPLS-TP.	mpls-tp	LOG_STD_ACTION
<del>MPLS_TP-3-UNKNOWN</del>	3-Error	Received unknown message:[dec]	An unknown message was posted to the MPLS-TP process. This is an internal issue to MPLS-TP	mpls-tp	LOG_STD_ACTION
<del>MPLS_TP-3-UNKNOWN</del>	3-Error	Received unknown message:[dec]	An unknown message was posted to the MPLS-TP process. This is an internal issue to MPLS-TP	mpls-tp	LOG_STD_ACTION
<del>MPLS_TP-3-UNKNOWN</del>	3-Error	Unknown timer type expired:[dec]	An unknown MPLS-TP timer type expired. This is an issue internal to MPLS-TP	mpls-tp	LOG_STD_ACTION
<del>MPLS_TP-3-UNKNOWN</del>	3-Error	Unknown timer type expired:[dec]	An unknown MPLS-TP timer type expired. This is an issue internal to MPLS-TP	mpls-tp	LOG_STD_ACTION
MPLS_TP-3-UPDOWN	3-Error	Tunnel-tp[node]changed state to [chars]	The MPLS-TP tunnel-tp interface changed state.	-	"If the state change was unexpected confirm the configuration settings " "and those of other LSRs along the tunnel LSPs."
MPLS_TP-3-UPDOWN	3-Error	Tunnel-tp[node]changed state to [chars]	The MPLS-TP tunnel-tp interface changed state.	-	"If the state change was unexpected confirm the configuration settings " "and those of other LSRs along the tunnel LSPs."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MPLS_TPCONGCHANGED	5-Notice	Tunnel-tp[node]is [chars]	The configuration of the tunnel-tp interface has changed. This message is to notify the NMS of changes.	-	LOG_STD_ACTION
MPLS_TPCONGCHANGED	5-Notice	Tunnel-tp[node]is [chars]	The configuration of the tunnel-tp interface has changed. This message is to notify the NMS of changes.	-	LOG_STD_ACTION
MPLS_TPSPREMPTION	5-Notice	Tunnel-tp[node]PSC Event: [chars] preempted PSC State: [chars] new PSC State: [chars]	The indicated PSC event on the tunnel interface has preempted the indicated psc event which is of lower priority. This message is to notify the NMS of changes.	-	LOG_STD_ACTION
MPLS_TPSPREMPTION	5-Notice	Tunnel-tp[node]PSC Event: [chars] preempted PSC State: [chars] new PSC State: [chars]	The indicated PSC event on the tunnel interface has preempted the indicated psc event which is of lower priority. This message is to notify the NMS of changes.	-	LOG_STD_ACTION
MPLS_TPREUNDANCY	5-Notice	Tunnel-tp[node]switched to [chars] LSP as active	The MPLS-TP tunnel-tp interface has changed the LSP over which it data traffic is carried possibly due to a fault or administrative action or to restore traffic to the working-LSP after LSP recovery.	-	"If this change is unexpected examine LSP messages to determine " "if a fault or other failure has occurred or is this is due to " "a lockout condition or configuration change."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MPLS_TP5REDUNDANCY	5-Notice	Tunnel-tp[node]switched to [chars] LSP as active	The MPLS-TP tunnel-tp interface has changed the LSP over which it data traffic is carried possibly due to a fault or administrative action or to restore traffic to the working-LSP after LSP recovery.	-	"If this change is unexpected examine LSP messages to determine " "if a fault or other failure has occurred or is this is due to " "a lockout condition or configuration change."
MPLSVNHA3CFENROR	3-Error	[chars]	MPLS VPN HA client CF related general error.	mpls-vpn	LOG_STD_ACTION
MPLSVNHA3CFENROR	3-Error	[chars]	MPLS VPN HA client CF related general error.	mpls-vpn	LOG_STD_ACTION
MPLSVNHA3CLNIREG	3-Error	[chars]	MPLS VPN HA failed to register to CF.	mpls-vpn	LOG_STD_ACTION
MPLSVNHA3CLNIREG	3-Error	[chars]	MPLS VPN HA failed to register to CF.	mpls-vpn	LOG_STD_ACTION
MPLSVNHA3DBORRION	3-Error	[chars] RD [chars] [node][dec] label [dec]	MPLS VPN HA Checkpoint database operation error.	mpls-vpn	LOG_STD_ACTION
MPLSVNHA3DBORRION	3-Error	[chars] RD [chars] [node][dec] label [dec]	MPLS VPN HA Checkpoint database operation error.	mpls-vpn	LOG_STD_ACTION
MPLSVNHA3SZMVMACH	3-Error	Label table size [dec] mismatch get label tableid failed.	MPLS VPN HA Label Table size mismatch.	mpls-vpn	LOG_STD_ACTION
MPLSVNHA3SZMVMACH	3-Error	Label table size [dec] mismatch get label tableid failed.	MPLS VPN HA Label Table size mismatch.	mpls-vpn	LOG_STD_ACTION
MPLSVNHA7LABHIRE	7-Debug	[chars] [dec]	MPLS VPN Label Manager failed to free label.	mpls-vpn	LOG_STD_ACTION
MPLSVNHA7LABHIRE	7-Debug	[chars] [dec]	MPLS VPN Label Manager failed to free label.	mpls-vpn	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MPLS_VPN_HA_MALLOC_FAIL	7-Debug	[chars]	MPLS VPN HA failed to allocate memory	mpls-vpn	LOG_STD_ACTION
MPLS_VPN_HA_MALLOC_FAIL	7-Debug	[chars]	MPLS VPN HA failed to allocate memory	mpls-vpn	LOG_STD_ACTION
MPLS_VPN_HA_TXMIF_FAIL	7-Debug	[chars] message seq no [dec] current seq no [dec]	MPLS VPN Label Manager failed to deliver a message	mpls-vpn	LOG_STD_ACTION
MPLS_VPN_HA_TXMIF_FAIL	7-Debug	[chars] message seq no [dec] current seq no [dec]	MPLS VPN Label Manager failed to deliver a message	mpls-vpn	LOG_STD_ACTION
MPLS_VPN_ISSUBCF_ERR	3-Error	[chars] 0x[hec]	MPLS VPN ISSU client CF related error.	mpls-vpn	LOG_STD_ACTION
MPLS_VPN_ISSUBCF_ERR	3-Error	[chars] 0x[hec]	MPLS VPN ISSU client CF related error.	mpls-vpn	LOG_STD_ACTION
MPLS_VPN_ISSUBGENERR	3-Error	[chars]	MPLS VPN ISSU client general error.	mpls-vpn	LOG_STD_ACTION
MPLS_VPN_ISSUBGENERR	3-Error	[chars]	MPLS VPN ISSU client general error.	mpls-vpn	LOG_STD_ACTION
MPLS_VPN_ISSUBSURCFERR	3-Error	[chars] [chars]	MPLS VPN ISSU client ISSU infra related error.	mpls-vpn	LOG_STD_ACTION
MPLS_VPN_ISSUBSURCFERR	3-Error	[chars] [chars]	MPLS VPN ISSU client ISSU infra related error.	mpls-vpn	LOG_STD_ACTION
MPLS_VPN_BDI_UNSUPPORTED	3-Error	FRR not enabled on [chars]. Unsupported EFP and trunk EFP count [dec]. Supported 1	LFA FRR support on ASR903 for BDI interface is available with just one EFP or trunk EFP	asr903-mpls	"shutdown the BDI interface. Remove all the " " EFPs/TEFPs under the BDI. Create just one EFP or TEFP." " no shutdown the BDI interface"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MIS</del> <del>FRR</del> <del>BDI</del> <del>UNS</del> <del>SUP</del> <del>CR</del> <del>IED</del>	3-Error	FRR not enabled on [chars]. Unsupported EFP and trunk EFP count [dec]. Supported 1	LFA FRR support on ASR903 for BDI interface is available with just one EFP or trunk EFP	asr903-mpls	"shutdown the BDI interface. Remove all the " " EFPs/TEFPs under the BDI. Create just one EFP or TEFP." " no shutdown the BDI interface"
<del>MIS</del> <del>FRR</del> <del>BDI</del> <del>UNS</del> <del>SUP</del> <del>CR</del> <del>IED</del>	3-Error	FRR not enabled on [chars]. Unsupported EFP and trunk EFP count [dec]. Supported 1	LFA FRR support on ASR903 for BDI interface is available with just one EFP or trunk EFP	asr903-mpls	"shutdown the BDI interface. Remove all the " " EFPs/TEFPs under the BDI. Create just one EFP or TEFP." " no shutdown the BDI interface"
<del>MIS</del> <del>MAX</del> <del>PW</del> <del>EXCH</del> <del>ED</del>	3-Error	Number of PW's exceeded supported limit [dec]	Number of empls intd labels exceeded supported scale	firmware	"Please reduce the number of PW's to supported scale"
<del>MIS</del> <del>MAX</del> <del>PW</del> <del>EXCH</del> <del>ED</del>	3-Error	Number of PW's exceeded supported limit [dec]	Number of empls intd labels exceeded supported scale	firmware	"Please reduce the number of PW's to supported scale"
<del>MIS</del> <del>MAX</del> <del>PW</del> <del>EXCH</del> <del>ED</del>	3-Error	Number of PW's exceeded supported limit [dec]	Number of PW's exceeded supported scale	rsp2-mpls	"Please reduce the number of PW's to supported scale"
<del>MIS</del> <del>MAX</del> <del>ROUT</del> <del>PW</del> <del>EXCH</del> <del>ED</del>	3-Error	Number of Routed PW's exceeded supported limit [dec]	Number of Routed PW's exceeded supported scale	rsp2-mpls	"Please reduce the number of " "Routed PW's to supported scale"
<del>MIS</del> <del>MAX</del> <del>ROUT</del> <del>PW</del> <del>EXCH</del> <del>ED</del>	3-Error	Number of Routed PW's exceeded supported limit [dec]	Number of Routed PW exceeded supported scale	firmware	"Please reduce the number of Routed PW's to " "supported scale"
<del>MIS</del> <del>MS</del> <del>MU</del> <del>A</del> <del>IO</del> <del>C</del> <del>F</del> <del>A</del>	3-Error	Out of resource to allocate mpls mtu	mpls mtu exceeded supported scale	asr903-mpls	"Please reduce the number of mpls mtu configured values" "to supported scale"
<del>MIS</del> <del>MS</del> <del>MU</del> <del>A</del> <del>IO</del> <del>C</del> <del>F</del> <del>A</del>	3-Error	Out of resource to allocate mpls mtu	mpls mtu exceeded supported scale	asr903-mpls	"Please reduce the number of mpls mtu configured values" "to supported scale"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MISASMSMU_ALLOCAL	3-Error	Out of resource to allocate mpls mtu	mpls mtu exceeded supported scale	asr903-mpls	"Please reduce the number of mpls mtu configured values" "to supported scale"
MISMSISIAELABEL	3-Error	Stale Label : [node]Neither Allocated nor Deallocated	Stale Label Neither Allocated nor Deallocated	rsp2-mpls	"Don't collect the stats for this instance"
MISOUTOFLABELSPACE	3-Error	Out of resource to create labels	Number of empls intd labels exceeded supported scale	firmware	"Please reduce the number of empls intd labels to " "supported scale"
MISOUTOFLABELSPACE	3-Error	Out of resource to create labels	Number of empls intd labels exceeded supported scale	firmware	"Please reduce the number of empls intd labels to " "supported scale"
MISOUTOFLABELSPACE	3-Error	Out of resource to create labels	Number of empls intd labels exceeded supported scale	rsp2-mpls	"Please reduce the number of empls intd labels to " "supported scale"
MISOUTOFLABELSPACE	3-Error	Out of resource to create labels	Number of empls 3d labels exceeded supported scale	firmware	"Please reduce the number of empls 3d labels to " "supported scale"
MISOUTOFLABELSPACE	3-Error	Out of resource to create labels	Number of empls 3d labels exceeded supported scale	firmware	"Please reduce the number of empls 3d labels to " "supported scale"
MISOUTOFLABELSPACE	3-Error	Out of resource to create labels	Number of empls 3d labels exceeded supported scale	rsp2-mpls	"Please reduce the number of empls 3d labels to " "supported scale"
MISPORTLEARNINGENABLE	3-Error	Default lif learning enable issue on lif 0x[hec] intf [chars]	Learning set/unset in port and default lif	dominica-mpls	"Please enable/disable mpls ip "
MISPORTLEARNINGENABLE	3-Error	Default lif learning enable issue on lif 0x[hec] intf [chars]	Learning set/unset in port and default lif	rsp3-mpls	"Please enable/disable mpls ip "
MISPORTLEARNINGENABLE	3-Error	Port Learning enable issue on port [chars]	Learning set/unset in port and default lif	dominica-mpls	"Please enable/disable mpls ip on port"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MPLSIFL3LEARNINGENABLE	3-Error	Port Learning enable issue on port [chars]	Learning set/unset in port and default lif	rsp3-mpls	"Please enable/disable mpls ip on port"
MPLSIFBDIUNSUPPORTED	4-Warning	BGP PIC not enabled on [chars]: [chars]	Hardware could not be programmed for BGP PIC support on BDI interface	asr903-mpls	"Collect the logs and contact Cisco TAC"
MPLSIFBDIUNSUPPORTED	4-Warning	BGP PIC not enabled on [chars]: [chars]	Hardware could not be programmed for BGP PIC support on BDI interface	asr903-mpls	"Collect the logs and contact Cisco TAC"
MPLSIFMIB3GENERAL	3-Error	[chars]	Probable memory corruption of mpls layer subblock -- cause unknown.	mpls-mib	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MPLS-MFI-CHUNK-MGR	3-Error	[chars] [hect]	MPLS MFI Static Application chunk manager error has occurred.	mpls-mfi	<p>"Problem may be due to a low memory condition on the device. " "Check system memory and minimum memory requirements for this " "release and configuration and add memory if required. If " "memory appears to be sufficient and problem persists refer " "to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this condition " "has been previously reported and resolved in a later release. " "If not gather the output of &lt;CmdBold&gt;show process memory&lt;NoCmdBold&gt; &lt;CmdBold&gt;show " "version&lt;NoCmdBold&gt; and &lt;CmdBold&gt;show running-config&lt;NoCmdBold&gt; and contact your Cisco " "technical support representative."</p>



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MPLS-MFI-CHUNK-MGR	3-Error	[chars] [hec]	MPLS MFI Static Application chunk manager error has occurred.	mpls-mfi	"Problem may be due to a low memory condition on the device. " "Check system memory and minimum memory requirements for this " "release and configuration and add memory if required. If " "memory appears to be sufficient and problem persists refer " "to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this condition " "has been previously reported and resolved in a later release. " "If not gather the output of <CmdBold>show process memory<NoCmdBold> <CmdBold>show " "version<NoCmdBold> and <CmdBold>show running-config<NoCmdBold> and contact your Cisco " "technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MPLS-MFI-3-APP-ERR	3-Error	[chars]	MPLS MFI Static Application function call return error	mpls-mfi	"Refer to the Bug Navigator at www.cisco.com to see if this "condition has been previously reported and resolved in a "later release. If not gather the output of <CmdBold>show version<NoCmdBold> " "and <CmdBold>show running-config<NoCmdBold> and contact your Cisco technical "support representative."
MPLS-MFI-3-APP-ERR	3-Error	[chars]	MPLS MFI Static Application function call return error	mpls-mfi	"Refer to the Bug Navigator at www.cisco.com to see if this "condition has been previously reported and resolved in a "later release. If not gather the output of <CmdBold>show version<NoCmdBold> " "and <CmdBold>show running-config<NoCmdBold> and contact your Cisco technical "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MPLS-MFI-3-NADRAMS	3-Error	[chars] [dec]	Unexpected MPLS MFI Static Application parameter error	mpls-mfi	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this "condition has been previously reported and resolved in a "later release. If not gather the output of <CmdBold>show version<NoCmdBold> " "and <CmdBold>show running-config<NoCmdBold> and contact your Cisco technical "support representative."
MPLS-MFI-3-NADRAMS	3-Error	[chars] [dec]	Unexpected MPLS MFI Static Application parameter error	mpls-mfi	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this "condition has been previously reported and resolved in a "later release. If not gather the output of <CmdBold>show version<NoCmdBold> " "and <CmdBold>show running-config<NoCmdBold> and contact your Cisco technical "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MPLS/3/ERR/CDPAH	3-Error	[chars]	Unexpected MPLS MFI Static Application code path error	mpls-mfi	"Refer to the Bug Navigator at www.cisco.com to see if this " "condition has been previously reported and resolved in a " "later release. If not gather the output of <CmdBold>show version<NoCmdBold> " "and <CmdBold>show running-config<NoCmdBold> and contact your Cisco technical " "support representative."
MPLS/3/ERR/CDPAH	3-Error	[chars]	Unexpected MPLS MFI Static Application code path error	mpls-mfi	"Refer to the Bug Navigator at www.cisco.com to see if this " "condition has been previously reported and resolved in a " "later release. If not gather the output of <CmdBold>show version<NoCmdBold> " "and <CmdBold>show running-config<NoCmdBold> and contact your Cisco technical " "support representative."
MPLS/3/ERR/PROXRQ	3-Error	Unauthorized proxy request - dropping packet	MPLS-OAM proxy echo request was received. It was unauthorized and hence dropped.	mpls-oam	LOG_STD_ACTION
MPLS/3/ERR/PROXRQ	3-Error	Unauthorized proxy request - dropping packet	MPLS-OAM proxy echo request was received. It was unauthorized and hence dropped.	mpls-oam	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MIS</del> OAM UNAUTH PROXRQ	3-Error	Unauthorized proxy request - dropping packet	MPLS-OAM proxy echo request was received. It was unauthorized and hence dropped.	mpls-oam	LOG_STD_ACTION
<del>MIS</del> OAM UNAUTH PROXRQ	3-Error	Unauthorized proxy request - dropping packet	MPLS-OAM proxy echo request was received. It was unauthorized and hence dropped.	mpls-oam	LOG_STD_ACTION
<del>MIS</del> OAM UNAUTH PROXRQ	3-Error	Unauthorized proxy request - dropping packet	MPLS-OAM proxy echo request was received. It was unauthorized and hence dropped.	mpls-oam	LOG_STD_ACTION
<del>MIS</del> OAM WALK CONSUMED	3-Error	[chars]	FWD RPLC Module - Walk packet unexpectedly consumed in MPLS OAM software. This should not affect overall system performance.	mpls-oam	LOG_STD_ACTION
<del>MIS</del> OAM WALK CONSUMED	3-Error	[chars]	FWD RPLC Module - Walk packet unexpectedly consumed in MPLS OAM software. This should not affect overall system performance.	mpls-oam	LOG_STD_ACTION
<del>MIS</del> OAM WALK CONSUMED	3-Error	[chars]	FWD RPLC Module - Walk packet unexpectedly consumed in MPLS OAM software. This should not affect overall system performance.	mpls-oam	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MPLSOAMWALK_CONSUMD	3-Error	[chars]	FWD RPLC Module - Walk packet unexpectedly consumed in MPLS OAM software. This should not affect overall system performance.	mpls-oam	LOG_STD_ACTION
MPLSOAMWALK_CONSUMD	3-Error	[chars]	FWD RPLC Module - Walk packet unexpectedly consumed in MPLS OAM software. This should not affect overall system performance.	mpls-oam	LOG_STD_ACTION
MPLSOAMEXDR_COMM	3-Error	[chars]:0x[hec] 0x[hec]	XDR Comm module - Unexpected RP/LC XDR condition encountered in MPLS OAM software. This may result in MPLS OAM FIB sub-blocks becoming out of synchronization between RP and LC. This should not affect overall system.	mpls-oam	LOG_STD_ACTION
MPLSOAMEXDR_COMM	3-Error	[chars]:0x[hec] 0x[hec]	XDR Comm module - Unexpected RP/LC XDR condition encountered in MPLS OAM software. This may result in MPLS OAM FIB sub-blocks becoming out of synchronization between RP and LC. This should not affect overall system.	mpls-oam	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MPLSOAM3XDR_COMM	3-Error	[chars]:0x[hec] 0x[hec]	XDR Comm module - Unexpected RP/LC XDR condition encountered in MPLS OAM software. This may result in MPLS OAM FIB sub-blocks becoming out of synchronization between RP and LC. This should not affect overall system.	mpls-oam	LOG_STD_ACTION
MPLSOAM3XDR_COMM	3-Error	[chars]:0x[hec] 0x[hec]	XDR Comm module - Unexpected RP/LC XDR condition encountered in MPLS OAM software. This may result in MPLS OAM FIB sub-blocks becoming out of synchronization between RP and LC. This should not affect overall system.	mpls-oam	LOG_STD_ACTION
MPLSOAM3XDR_COMM	3-Error	[chars]:0x[hec] 0x[hec]	XDR Comm module - Unexpected RP/LC XDR condition encountered in MPLS OAM software. This may result in MPLS OAM FIB sub-blocks becoming out of synchronization between RP and LC. This should not affect overall system.	mpls-oam	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MISCONFMBADIF_AU <b>T</b>	3-Error	[chars] if_name:[chars] local_label: [node]	Adjacency fault occurred for this interface with local label	mpls-oam	LOG_STD_ACTION
MISCONFMBADIF_AU <b>T</b>	3-Error	[chars] if_name:[chars] local_label: [node]	Adjacency fault occurred for this interface with local label	mpls-oam	LOG_STD_ACTION
MISCONFMBADIF_AU <b>T</b>	3-Error	[chars] if_name:[chars] local_label: [node]	Adjacency fault occurred for this interface with local label	mpls-oam	LOG_STD_ACTION
MISCONFMBADIF_AU <b>T</b>	3-Error	[chars] if_name:[chars] local_label: [node]	Adjacency fault occurred for this interface with local label	mpls-oam	LOG_STD_ACTION
MISCONFMBADIF_AU <b>T</b>	3-Error	[chars] if_name:[chars] local_label: [node]	Adjacency fault occurred for this interface with local label	mpls-oam	LOG_STD_ACTION
MISCONFMBDPM_AU <b>T</b>	3-Error	[chars]: [node]Retcode: [dec] Reason: [chars]	DPM fault occurred for prefix with return code and Reason for fault	mpls-oam	LOG_STD_ACTION
MISCONFMBDPM_AU <b>T</b>	3-Error	[chars]: [node]Retcode: [dec] Reason: [chars]	DPM fault occurred for prefix with return code and Reason for fault	mpls-oam	LOG_STD_ACTION
MISCONFMBDPM_AU <b>T</b>	3-Error	[chars]: [node]Retcode: [dec] Reason: [chars]	DPM fault occurred for prefix with return code and Reason for fault	mpls-oam	LOG_STD_ACTION
MISCONFMBDPM_AU <b>T</b>	3-Error	[chars]: [node]Retcode: [dec] Reason: [chars]	DPM fault occurred for prefix with return code and Reason for fault	mpls-oam	LOG_STD_ACTION
MISCONFMBDPM_AU <b>T</b>	3-Error	[chars]: [node]Retcode: [dec] Reason: [chars]	DPM fault occurred for prefix with return code and Reason for fault	mpls-oam	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MISCONF</del> <del>EM</del> <del>FAULT</del>	3-Error	[chars]: [node]Ups: [node]Downs: [node]Retcode: [dec] Reason: [chars]	DPM fault occurred for prefix with upstream downstream return code and Reason for fault	mpls-oam	LOG_STD_ACTION
<del>MISCONF</del> <del>EM</del> <del>FAULT</del>	3-Error	[chars]: [node]Ups: [node]Downs: [node]Retcode: [dec] Reason: [chars]	DPM fault occurred for prefix with upstream downstream return code and Reason for fault	mpls-oam	LOG_STD_ACTION
<del>MISCONF</del> <del>EM</del> <del>FAULT</del>	3-Error	[chars]: [node]Ups: [node]Downs: [node]Retcode: [dec] Reason: [chars]	DPM fault occurred for prefix with upstream downstream return code and Reason for fault	mpls-oam	LOG_STD_ACTION
<del>MISCONF</del> <del>EM</del> <del>FAULT</del>	3-Error	[chars]: [node]Ups: [node]Downs: [node]Retcode: [dec] Reason: [chars]	DPM fault occurred for prefix with upstream downstream return code and Reason for fault	mpls-oam	LOG_STD_ACTION
<del>MISCONF</del> <del>EM</del> <del>FAULT</del>	3-Error	[chars]: [node]Ups: [node]Downs: [node]Retcode: [dec] Reason: [chars]	DPM fault occurred for prefix with upstream downstream return code and Reason for fault	mpls-oam	LOG_STD_ACTION
<del>MISCONF</del> <del>EM</del> <del>FAULT</del>	3-Error	-	MPLS OAM Daemon Initialization failed. [chars] explains the reason for the failure.	SYSLOGDOC_NO_DDTS	SYSLOGDOC_NO_ACTION
<del>MISCONF</del> <del>EM</del> <del>FAULT</del>	3-Error	-	MPLS OAM Daemon Initialization failed. [chars] explains the reason for the failure.	SYSLOGDOC_NO_DDTS	SYSLOGDOC_NO_ACTION
<del>MISCONF</del> <del>EM</del> <del>FAULT</del>	3-Error	-	MPLS_LSPV Service Disabled	SRVNAME_MPLS_OAM	SYSLOGDOC_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MISOMDMMEM_FAULTAL	3-Error	-	MPLS_LSPV Service Disabled	SRVNAME_MPLS_OAM	SYSLOGDOC_NO_ACTION
MISOMDMMEM_FAULTAL	3-Error	-	MPLS_LSPV Service nabled	SRVNAME_MPLS_OAM	SYSLOGDOC_NO_ACTION
MISOMDMMEM_FAULTAL	3-Error	-	MPLS_LSPV Service nabled	SRVNAME_MPLS_OAM	SYSLOGDOC_NO_ACTION
MISOMDMMEM_FAULTDOWN	3-Error	[chars]: [node]Nexthop: [node]Retcode: [dec] Reason: [chars]	DPM fault occurred for prefix with downstream return code and Reason for fault	mpls-oam	LOG_STD_ACTION
MISOMDMMEM_FAULTDOWN	3-Error	[chars]: [node]Nexthop: [node]Retcode: [dec] Reason: [chars]	DPM fault occurred for prefix with downstream return code and Reason for fault	mpls-oam	LOG_STD_ACTION
MISOMDMMEM_FAULTDOWN	3-Error	[chars]: [node]Nexthop: [node]Retcode: [dec] Reason: [chars]	DPM fault occurred for prefix with downstream return code and Reason for fault	mpls-oam	LOG_STD_ACTION
MISOMDMMEM_FAULTDOWN	3-Error	[chars]: [node]Nexthop: [node]Retcode: [dec] Reason: [chars]	DPM fault occurred for prefix with downstream return code and Reason for fault	mpls-oam	LOG_STD_ACTION
MISOMDMMEM_FAULTDOWN	3-Error	[chars]: [node]Nexthop: [node]Retcode: [dec] Reason: [chars]	DPM fault occurred for prefix with downstream return code and Reason for fault	mpls-oam	LOG_STD_ACTION
MISOMDMMEM_FAULTUP	3-Error	[chars]: [node]Nexthop: [node]Retcode: [dec] Reason: [chars]	DPM fault occurred for prefix with upstream return code and Reason for fault	mpls-oam	LOG_STD_ACTION
MISOMDMMEM_FAULTUP	3-Error	[chars]: [node]Nexthop: [node]Retcode: [dec] Reason: [chars]	DPM fault occurred for prefix with upstream return code and Reason for fault	mpls-oam	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MPLSOAMDM/DPM_FAULT_UP	3-Error	[chars]: [node]Nextthop: [node]Retcode: [dec] Reason: [chars]	DPM fault occurred for prefix with upstream return code and Reason for fault	mpls-oam	LOG_STD_ACTION
MPLSOAMDM/DPM_FAULT_UP	3-Error	[chars]: [node]Nextthop: [node]Retcode: [dec] Reason: [chars]	DPM fault occurred for prefix with upstream return code and Reason for fault	mpls-oam	LOG_STD_ACTION
MPLSOAMDM/DPM_FAULT_UP	3-Error	[chars]: [node]Nextthop: [node]Retcode: [dec] Reason: [chars]	DPM fault occurred for prefix with upstream return code and Reason for fault	mpls-oam	LOG_STD_ACTION
MPLSOAMDM/BFX_FAULT	3-Error	[chars]: [node]downstream: [node]upstream: %i	Prefix fault occurred for prefix with downstream and upstream address	mpls-oam	LOG_STD_ACTION
MPLSOAMDM/BFX_FAULT	3-Error	[chars]: [node]downstream: [node]upstream: %i	Prefix fault occurred for prefix with downstream and upstream address	mpls-oam	LOG_STD_ACTION
MPLSOAMDM/BFX_FAULT	3-Error	[chars]: [node]downstream: [node]upstream: %i	Prefix fault occurred for prefix with downstream and upstream address	mpls-oam	LOG_STD_ACTION
MPLSOAMDM/BFX_FAULT	3-Error	[chars]: [node]downstream: [node]upstream: %i	Prefix fault occurred for prefix with downstream and upstream address	mpls-oam	LOG_STD_ACTION
MPLSOAMDM/BFX_FAULT	3-Error	[chars]: [node]downstream: [node]upstream: %i	Prefix fault occurred for prefix with downstream and upstream address	mpls-oam	LOG_STD_ACTION
MPOA-3-MPC_ERROR	3-Error	[chars]	A software error has occurred in the multiprotocol-over-ATM client MPC software.	-	LOG_SIDSHTECH_ACTION
MPOA-3-MPOA_ERROR	3-Error	[chars]	A software error has occurred in the multiprotocol-over-ATM subsystem.	-	LOG_SIDSHTECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MPOA-3-MPS_ERROR	3-Error	[chars]	\n\n A software error has occurred in the multiprotocol-over-ATM server MPS software.	-	LOG_SID_SH_TECH_ACTION
MPOA-4-MPC_WARNING	4-Warning	[chars]	This is a non-fatal warning from the multiprotocol-over-ATM client MPC software probably the result of an incorrect	-	"Try to determine if a configuration or operator " "error has caused this warning." LOG_SID_RECUR_ACTION
MPOA-4-MPS_WARNING	4-Warning	[chars]	This is a non-fatal warning from the multiprotocol-over-ATM server MPS software probably the result of an incorrect	-	"Try to determine if a configuration or operator " "error has caused this warning." LOG_SID_RECUR_ACTION
MPOA-5-UPDOWN	5-Notice	[chars]	A multiprotocol-over-ATM entity was brought up or down. This is only a status message.	-	LOG_SID_NO_ACTION
MPOA-6-MPC_INFORMATION	6-Information	[chars]	This is a multiprotocol-over-ATM client MPC	-	LOG_SID_NO_ACTION
MPOA-6-MPS_INFORMATION	6-Information	[chars]	This is a multiprotocol-over-ATM server MPS	-	LOG_SID_NO_ACTION
MRIB_API-3-ASYNC_ERR	3-Error	Asynchronous error: [chars]. errno 0x[hec]	An unhandled asynchronous error occurred in the MRIB API	ipmulticast	LOG_STD_ACTION
MRIB_API-3-ASYNC_ERR	3-Error	Asynchronous error: [chars]. errno 0x[hec]	An unhandled asynchronous error occurred in the MRIB API	ipmulticast	LOG_STD_ACTION
MRIB_API-3-CORRPT	3-Error	Corrupted update: [chars]	A corrupted update was received from the MRIB by the MRIB API	ipmulticast	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MRIB_API-3-CORRPT	3-Error	Corrupted update: [chars]	A corrupted update was received from the MRIB by the MRIB API	ipmulticast	LOG_STD_ACTION
MRIB_API-3-REG_FAIL	3-Error	Server unexpected error: [chars]	An internal error occurred in a registry call from the MRIB API	ipmulticast	LOG_STD_ACTION
MRIB_API-3-REG_FAIL	3-Error	Server unexpected error: [chars]	An internal error occurred in a registry call from the MRIB API	ipmulticast	LOG_STD_ACTION
MRIB_API-7-ASYNC_WAR	7-Debug	Warning: [chars]	A recoverable error condition occurred in the MRIB API	ipmulticast	LOG_SID_NO_ACTION
MRIB_API-7-ASYNC_WAR	7-Debug	Warning: [chars]	A recoverable error condition occurred in the MRIB API	ipmulticast	LOG_SID_NO_ACTION
<del>MRIB_IPC-2-INTERNAL</del>	2-Critical	The unrecoverable error \[chars]\ occurred in the MRIB-IPC subsystem.	An unrecoverable error occurred restart the MRIB subsystem.	ipmulticast	<del>LOG_SID_SH_TECH_ACTION</del>
<del>MRIB_IPC-2-INTERNAL</del>	2-Critical	The unrecoverable error \[chars]\ occurred in the MRIB-IPC subsystem.	An unrecoverable error occurred restart the MRIB subsystem.	ipmulticast	<del>LOG_SID_SH_TECH_ACTION</del>
<del>MRIB_IPC-2-INTERNAL</del>	2-Critical	LC failed allocating IPC buffer which may lead to data loss or inconsistent MFIB states slot = [dec]	The Linecard has failed in allocating interprocessor communication buffer.	ipmulticast	<del>LOG_SID_REDUCE_ACTION</del>
<del>MRIB_IPC-2-INTERNAL</del>	2-Critical	LC failed allocating IPC buffer which may lead to data loss or inconsistent MFIB states slot = [dec]	The Linecard has failed in allocating interprocessor communication buffer.	ipmulticast	<del>LOG_SID_REDUCE_ACTION</del>

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>MBRXA/RIC/ALD/MP</del>	2-Critical	LC failed in mapping interface number [dec]	The linecard failed in mapping an interface from the global representation to the local one	ipmulticast	LOG_SIDSH_TECH_ACTION
<del>MBRXA/RIC/ALD/MP</del>	2-Critical	LC failed in mapping interface number [dec]	The linecard failed in mapping an interface from the global representation to the local one	ipmulticast	LOG_SIDSH_TECH_ACTION
<del>MBRXA/RIC/D/CH/ME</del>	2-Critical	LC in slot [dec] failed to connect to RP due to missing table name.	The linecard could not instigate a connection to the RP for this instance as it was not supplied a table name.	ipmulticast	LOG_SIDSH_TECH_ACTION
<del>MBRXA/RIC/D/CH/ME</del>	2-Critical	LC in slot [dec] failed to connect to RP due to missing table name.	The linecard could not instigate a connection to the RP for this instance as it was not supplied a table name.	ipmulticast	LOG_SIDSH_TECH_ACTION
<del>MBRXA/RIC/D/CH/L</del>	2-Critical	LC in slot [dec] failed to send an RPC fetch request to the RP: [chars]	The linecard attempted to read mroute updates from the route processor but the RPC request failed. The linecard MFIB state may now be inconsistent or frozen.	ipmulticast	LOG_SIDSH_TECH_ACTION
<del>MBRXA/RIC/D/CH/L</del>	2-Critical	LC in slot [dec] failed to send an RPC fetch request to the RP: [chars]	The linecard attempted to read mroute updates from the route processor but the RPC request failed. The linecard MFIB state may now be inconsistent or frozen.	ipmulticast	LOG_SIDSH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MRIBX2MRIBNOEND</del>	2-Critical	LC in slot [dec] attempted to contact the RP without having opened the connection first	The linecard called an MRIB API that required the connection with the MRIB in the RP to be opened but no connection had been established.	ipmulticast	LOGSIDSHTTECHACION
<del>MRIBX2MRIBNOEND</del>	2-Critical	LC in slot [dec] attempted to contact the RP without having opened the connection first	The linecard called an MRIB API that required the connection with the MRIB in the RP to be opened but no connection had been established.	ipmulticast	LOGSIDSHTTECHACION
<del>MRIBX2MRIBUPNOED</del>	2-Critical	LC in slot [dec] ignored one or more mroute updates	The linecard ignored one or more mroute updates because the buffer containing them failed a sanity check. The linecard MFIB state may now be inconsistent.	ipmulticast	LOGSIDSHTTECHACION
<del>MRIBX2MRIBUPNOED</del>	2-Critical	LC in slot [dec] ignored one or more mroute updates	The linecard ignored one or more mroute updates because the buffer containing them failed a sanity check. The linecard MFIB state may now be inconsistent.	ipmulticast	LOGSIDSHTTECHACION
<del>MRIBX2MRIBRPCAID</del>	2-Critical	The Route Processor failed to create a required process.	The Route Processor could not create the MRIB RP proxy process. Distributed multicast will not be started on this system.	ipmulticast	LOGSIDSHTTECHACION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>MRIBX/ERR/RC/AD</del>	2-Critical	The Route Processor failed to create a required process.	The Route Processor could not create the MRIB RP proxy process. Distributed multicast will not be started on this system.	ipmulticast	LOG_SIDSHTECH_ACTION
<del>MRIBX/ERR/RC/IC</del>	2-Critical	RP failed allocating IPC buffer which may lead to data loss or inconsistent MFIB states	The Route Processor has failed in allocating interprocessor communication buffer.	ipmulticast	LOG_SIDSHTECH_ACTION
<del>MRIBX/ERR/RC/IC</del>	2-Critical	RP failed allocating IPC buffer which may lead to data loss or inconsistent MFIB states	The Route Processor has failed in allocating interprocessor communication buffer.	ipmulticast	LOG_SIDSHTECH_ACTION
<del>MRIBX/ERR/RC/IMP</del>	2-Critical	RP failed in mapping interface	The route processor failed in mapping an interface from the global representation to the local one or vice-versa	ipmulticast	LOG_SIDSHTECH_ACTION
<del>MRIBX/ERR/RC/IMP</del>	2-Critical	RP failed in mapping interface	The route processor failed in mapping an interface from the global representation to the local one or vice-versa	ipmulticast	LOG_SIDSHTECH_ACTION
<del>MRIBX/ERR/RC/IE</del>	2-Critical	RP failed in creating IPC port error = [chars]	The Route Processor failed to create MFIB Interprocess Communications port	ipmulticast	LOG_SIDSHTECH_ACTION
<del>MRIBX/ERR/RC/IE</del>	2-Critical	RP failed in creating IPC port error = [chars]	The Route Processor failed to create MFIB Interprocess Communications port	ipmulticast	LOG_SIDSHTECH_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MRPX</del> <del>MRIB</del> <del>LC</del> <del>PNF</del>	2-Critical	RP failed in creating linecard port info for distributed mode slot = [dec]	The Route Processor has failed in creating linecard port info for distributed mode	ipmulticast	LOGSIDSHTTECHACI0N
<del>MRPX</del> <del>MRIB</del> <del>LC</del> <del>PNF</del>	2-Critical	RP failed in creating linecard port info for distributed mode slot = [dec]	The Route Processor has failed in creating linecard port info for distributed mode	ipmulticast	LOGSIDSHTTECHACI0N
<del>MRPX</del> <del>MRIB</del> <del>LC</del> <del>PNF</del>	3-Error	LC in slot [dec] failed to create a required process. Verify MRIB updates are being distributed to this LC.	The linecard could not create a process to perform delayed IPC initialization. The MFIB will not be started on this linecard.	ipmulticast	LOGSIDSHTTECHACI0N
<del>MRPX</del> <del>MRIB</del> <del>LC</del> <del>PNF</del>	3-Error	LC in slot [dec] failed to create a required process. Verify MRIB updates are being distributed to this LC.	The linecard could not create a process to perform delayed IPC initialization. The MFIB will not be started on this linecard.	ipmulticast	LOGSIDSHTTECHACI0N
<del>MRPX</del> <del>MRIB</del> <del>LC</del> <del>PNF</del>	3-Error	LC in slot [dec] failed to open IPC port to RP error = [chars]. Verify MRIB updates are being distributed to this LC.	The linecard has failed to open IPC port towards the Route Processor	ipmulticast	LOGSIDSHTTECHACI0N
<del>MRPX</del> <del>MRIB</del> <del>LC</del> <del>PNF</del>	3-Error	LC in slot [dec] failed to open IPC port to RP error = [chars]. Verify MRIB updates are being distributed to this LC.	The linecard has failed to open IPC port towards the Route Processor	ipmulticast	LOGSIDSHTTECHACI0N
<del>MRPX</del> <del>MRIB</del> <del>LC</del> <del>PNF</del>	3-Error	LC in slot [dec] failed to send LC ready to RP error = [chars]. Verify MRIB updates are being distributed to this LC.	The linecard has failed to send Ready message to the Route Processor	ipmulticast	LOGSIDSHTTECHACI0N

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>MRIBXMRIBLCPN</del>	3-Error	LC in slot [dec] failed to send LC ready to RP error = [chars]. Verify MRIB updates are being distributed to this LC.	The linecard has failed to send Ready message to the Route Processor	ipmulticast	LOG_SID_SH_TECH_ACTION
<del>MRIBXMRIBLCPN</del>	3-Error	LC in slot [dec] failed allocating IPC buffer to send LC ready Verify MRIB updates are being distributed to this LC.	The Linecard has failed in allocating interprocessor communication buffer to send the ready message.	ipmulticast	LOG_SID_REDUCE_ACTION
<del>MRIBXMRIBLCPN</del>	3-Error	LC in slot [dec] failed allocating IPC buffer to send LC ready Verify MRIB updates are being distributed to this LC.	The Linecard has failed in allocating interprocessor communication buffer to send the ready message.	ipmulticast	LOG_SID_REDUCE_ACTION
<del>MRIBXMRIBLCPN</del>	3-Error	RP failed in opening linecard port info for distributed mode slot = [dec]. Verify MRIB updates are being distributed to this LC.	The Route Processor has failed in opening linecard port info for distributed mode	ipmulticast	LOG_SID_SH_TECH_ACTION
<del>MRIBXMRIBLCPN</del>	3-Error	RP failed in opening linecard port info for distributed mode slot = [dec]. Verify MRIB updates are being distributed to this LC.	The Route Processor has failed in opening linecard port info for distributed mode	ipmulticast	LOG_SID_SH_TECH_ACTION
<del>MRIBXMRIBLCPN</del>	4-Warning	LC CCB : \[chars]\ close deferred	MRIB LC connection to MFIB close attempted while MRIB update fetch in progress connection close deferred.	ipmulticast	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MRIB-2-CLOSEDEFER</del>	4-Warning	LC CCB : \[chars]\ close deferred	MRIB LC connection to MFIB close attempted while MRIB update fetch in progress connection close deferred.	ipmulticast	LOG_SID_SH_TECH_ACTION
<del>MRIB-2-CLOSEDEFER</del>	4-Warning	LC CCB : \[chars]\ close deferred	MRIB LC connection to MFIB close attempted while MRIB update write in progress connection close deferred.	ipmulticast	LOG_SID_SH_TECH_ACTION
<del>MRIB-2-CLOSEDEFER</del>	4-Warning	LC CCB : \[chars]\ close deferred	MRIB LC connection to MFIB close attempted while MRIB update write in progress connection close deferred.	ipmulticast	LOG_SID_SH_TECH_ACTION
MRIB-2-NOMEMORY	2-Critical	No memory for [chars] in [chars]	The requested operation could not be accomplished because of a low\n\ memory condition.	ipmulticast	LOG_SID_REDUCE_ACTION
MRIB-2-NOMEMORY	2-Critical	No memory for [chars] in [chars]	The requested operation could not be accomplished because of a low\n\ memory condition.	ipmulticast	LOG_SID_REDUCE_ACTION
<del>MRIB-2-NOMEMORY</del>	3-Error	Update-Set fatal allocation error [chars]	Allocation of memory failed during the processing of an Update-Set. This failure may result in database inconsistency.	-	LOG_SID_REDUCE_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MRIB3-UPDATESET_FATAL	3-Error	Update-Set fatal allocation error [chars]	Allocation of memory failed during the processing of an Update-Set. This failure may result in database inconsistency.	-	LOG_STD_ACTION
MRIB3-GENCOMMERR	3-Error	Communication error: [chars] [chars] in [chars]	A Inter Process Communication error occurred.	ipmulticast	LOG_STD_ACTION
MRIB3-GENCOMMERR	3-Error	Communication error: [chars] [chars] in [chars]	A Inter Process Communication error occurred.	ipmulticast	LOG_STD_ACTION
MRIB3-GENINITFAIL	3-Error	Initialization failed: [chars] [chars]	An unrecoverable error occurred at system initialization time.	ipmulticast	LOG_STD_ACTION
MRIB3-GENINITFAIL	3-Error	Initialization failed: [chars] [chars]	An unrecoverable error occurred at system initialization time.	ipmulticast	LOG_STD_ACTION
MRIB3-INTERNALERR	3-Error	Internal error: [chars] in [chars] line [dec] [chars]	An internal software error occurred.	ipmulticast	LOG_STD_ACTION
MRIB3-INTERNALERR	3-Error	Internal error: [chars] in [chars] line [dec] [chars]	An internal software error occurred.	ipmulticast	LOG_STD_ACTION
MRIB3-MSG_RECV_FATAL	3-Error	Allocation of memory failed for an incoming message	Allocation of memory failed during the processing of an incoming message. This failure may have unpredictable results.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MRIB3MSGNOEMEMFAIL	3-Error	Allocation of memory failed for an incoming message	Allocation of memory failed during the processing of an incoming message. This failure may have unpredictable results.	-	LOG_SID_REDUCE_ACTION
MRIB3REDUCEDFUNCT	3-Error	Initialization of \[chars]\ functionality failed	The initialization of a functionality failed. This component might still operate without the functionality.	ipmulticast	LOG_SID_REDUCE_ACTION
MRIB3REDUCEDFUNCT	3-Error	Initialization of \[chars]\ functionality failed	The initialization of a functionality failed. This component might still operate without the functionality.	ipmulticast	LOG_SID_REDUCE_ACTION
MRIB4BNDL_ID_INUSE	4-Warning	An old Update-Set ID is still in use [hec]	While allocating Update-Set IDs the MRIB found an old ID still in use. This could be due to a programming error.	ipmulticast	LOG_SID_SH_TECH_ACTION
MRIB4BNDL_ID_INUSE	4-Warning	An old Update-Set ID is still in use [hec]	While allocating Update-Set IDs the MRIB found an old ID still in use. This could be due to a programming error.	ipmulticast	LOG_SID_SH_TECH_ACTION
MRIB-4-BNDL_MSG	4-Warning	Update-Set invalid message [chars]	An invalid message was received during the processing of an Update-Set.	ipmulticast	LOG_SID_SH_TECH_ACTION
MRIB-4-BNDL_MSG	4-Warning	Update-Set invalid message [chars]	An invalid message was received during the processing of an Update-Set.	ipmulticast	LOG_SID_SH_TECH_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MRIB4BNDL_NOMEM	4-Warning	Update-Set allocation error [chars]	Allocation of memory failed during the processing of an Update-Set. This failure may result in inefficient processing of route-updates.	ipmulticast	LOG_SID_REDUCE_ACTION
MRIB4BNDL_NOMEM	4-Warning	Update-Set allocation error [chars]	Allocation of memory failed during the processing of an Update-Set. This failure may result in inefficient processing of route-updates.	ipmulticast	LOG_SID_REDUCE_ACTION
MRIB-4-DEBUGERR	4-Warning	Debugging error: [chars] in [chars] line [dec] [chars]	An error related to the debugging subsystem occurred.	ipmulticast	LOG_SID_SH_TECH_ACTION
MRIB-4-DEBUGERR	4-Warning	Debugging error: [chars] in [chars] line [dec] [chars]	An error related to the debugging subsystem occurred.	ipmulticast	LOG_SID_SH_TECH_ACTION
MRIB4FILTRVIOLERR	4-Warning	Filter violation error: conn [dec] [chars]:[chars] in [chars]	A client tried to modify a route attribute not owned by it.	ipmulticast	LOG_SID_SH_TECH_ACTION
MRIB4FILTRVIOLERR	4-Warning	Filter violation error: conn [dec] [chars]:[chars] in [chars]	A client tried to modify a route attribute not owned by it.	ipmulticast	LOG_SID_SH_TECH_ACTION
MRIB4INCORRECTPARS	4-Warning	Illegal parameter in function call [chars] in [chars]	An externally accessible function has been called with illegal\n parameters. the parameters has been casted to an acceptable value.	ipmulticast	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MRIB4INCORRECTPARS	4-Warning	Illegal parameter in function call [chars] in [chars]	An externally accessible function has been called with illegal\n\ parameters. the parameters has been casted to an acceptable value.	ipmulticast	LOG_SID_SH_TECH_ACTION
MRIB4NOMEMORYW	4-Warning	No memory for [chars] in [chars]. Handling: [chars]	The requested operation could not be accomplished because of a low\n\ memory condition but the problem has ben handled locally.	ipmulticast	LOG_SID_REDUCE_ACTION
MRIB4NOMEMORYW	4-Warning	No memory for [chars] in [chars]. Handling: [chars]	The requested operation could not be accomplished because of a low\n\ memory condition but the problem has ben handled locally.	ipmulticast	LOG_SID_REDUCE_ACTION
MROUTE2RADIXINIT	2-Critical	Error initializing IP multicast radix for [node]	Insufficient memory is available to initialize the IP multicast\n\ routing table.	-	LOG_SID_SH_TECH_ACTION
MROUTE2RADIXINIT	2-Critical	Error initializing IP multicast radix for [node]	Insufficient memory is available to initialize the IP multicast\n\ routing table.	-	LOG_SID_SH_TECH_ACTION
MROUTE2TCO_WAVLNI	2-Critical	Error initializing IP multicast wavl handler for [node]	Insufficient memory is available to initialize the IP multicast\n\ multi-topology routing table.	-	LOG_SID_SH_TECH_ACTION
MROUTE2TCO_WAVLNI	2-Critical	Error initializing IP multicast wavl handler for [node]	Insufficient memory is available to initialize the IP multicast\n\ multi-topology routing table.	-	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MR</del> IGMP_AEPROCESSR	3-Error	IGMP process is not up yet	An error occurred accessing IGMP process watched queue	ipmulticast	"An error in accessing IGMP process watched queue." LOG_STD_ACTION
<del>MR</del> IGMP_AEPROCESSR	3-Error	IGMP process is not up yet	An error occurred accessing IGMP process watched queue	ipmulticast	"An error in accessing IGMP process watched queue." LOG_STD_ACTION
<del>MR</del> IGMP_NOTFOUND	3-Error	IGMP group [node]to delete from interface [chars] not found	The group to be deleted from the interface could not be found in the\n\nIGMP cache.	-	"An inconsistency in maintaining the IGMP cache occurred." LOG_STD_ACTION
<del>MR</del> IGMP_NOTFOUND	3-Error	IGMP group [node]to delete from interface [chars] not found	The group to be deleted from the interface could not be found in the\n\nIGMP cache.	-	"An inconsistency in maintaining the IGMP cache occurred." LOG_STD_ACTION
<del>MR</del> IGMP_TWHLNERR	3-Error	Error trying to initialize the IGMP timer wheel	An error occurred intializing a timer twheel	-	"An error in maintaining the timer wheel occurred." LOG_STD_ACTION
<del>MR</del> IGMP_TWHLNERR	3-Error	Error trying to initialize the IGMP timer wheel	An error occurred intializing a timer twheel	-	"An error in maintaining the timer wheel occurred." LOG_STD_ACTION
<del>MR</del> IGMP_WALERR	3-Error	IGMP wavl [chars] failed for group [node]in interface [chars]	The addition/deletion of igmp group in wavl tree failed.	igmp	"Collect 'show tech ipmulticast' output." LOG_STD_ACTION
<del>MR</del> IGMP_WALERR	3-Error	IGMP wavl [chars] failed for group [node]in interface [chars]	The addition/deletion of igmp group in wavl tree failed.	igmp	"Collect 'show tech ipmulticast' output." LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MROUTE3MDB_QLE_ERR	3-Error	Interface [chars] not in [node]%i	This is an error condition. The midb has the highest expiration timer but is not in the mdb->midb	-	"An error in maintaining the multicast route table occurred." LOG_STD_ACTION
MROUTE3MDB_QLE_ERR	3-Error	Interface [chars] not in [node]%i	This is an error condition. The midb has the highest expiration timer but is not in the mdb->midb	-	"An error in maintaining the multicast route table occurred." LOG_STD_ACTION
MROUTE3NO_PIM_NBR	3-Error	There is no PIM neighbor on this IDB: [chars]	Probably PIM is not configured correctly on this interface or on interfaces of the nexthop routers.	-	"Check PIM configurations on local and neighbor routers." LOG_STD_ACTION
MROUTE3NO_PIM_NBR	3-Error	There is no PIM neighbor on this IDB: [chars]	Probably PIM is not configured correctly on this interface or on interfaces of the nexthop routers.	-	"Check PIM configurations on local and neighbor routers." LOG_STD_ACTION
MROUTE3ONMDB_QLE_ERR	3-Error	*G or SG being deleted for group [node]does not exist in the	An error occurred due to which the gdb or mdb being deleted does not \n\ exist in it's respective cache	-	"An error has occurred in maintaining mdb." LOG_STD_ACTION
MROUTE3ONMDB_QLE_ERR	3-Error	*G or SG being deleted for group [node]does not exist in the	An error occurred due to which the gdb or mdb being deleted does not \n\ exist in it's respective cache	-	"An error has occurred in maintaining mdb." LOG_STD_ACTION
MROUTE3CURROUTE_DEPTH	3-Error	Recursive route lookup has reached its max depth for: %i	Recursive route lookup has a pre-defined depth limit and it has been reached.	-	"If possible reduce rounds of next hop lookup needed for the network address in question." LOG_STD_ACTION
MROUTE3CURROUTE_DEPTH	3-Error	Recursive route lookup has reached its max depth for: %i	Recursive route lookup has a pre-defined depth limit and it has been reached.	-	"If possible reduce rounds of next hop lookup needed for the network address in question." LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MROUTE</del> RCOUNT_ZRO	3-Error	Multicast route count reached zero	The running count of multicast routes reached zero when it \n\ should be non-zero.	-	"An error in maintaining the multicast route count occurred." LOG_STD_ACTION
<del>MROUTE</del> RCOUNT_ZRO	3-Error	Multicast route count reached zero	The running count of multicast routes reached zero when it \n\ should be non-zero.	-	"An error in maintaining the multicast route count occurred." LOG_STD_ACTION
<del>MROUTE</del> WHELDLAY_ERR	3-Error	Exceeded maximum delay [dec] ms requested: [dec]	Because of the way the timer wheel works there is a maximum delay defined. If we try to schedule a function with a higher delay we still schedule it using the maximum delay possible	-	"An error in maintaining the timer wheel occurred." LOG_STD_ACTION
<del>MROUTE</del> WHELDLAY_ERR	3-Error	Exceeded maximum delay [dec] ms requested: [dec]	Because of the way the timer wheel works there is a maximum delay defined. If we try to schedule a function with a higher delay we still schedule it using the maximum delay possible	-	"An error in maintaining the timer wheel occurred." LOG_STD_ACTION
<del>MROUTE</del> E3TWHEEL_ERR	3-Error	Timer wheel internal error	Timer wheel internal error	-	"An error in maintaining the timer wheel occurred." LOG_STD_ACTION
<del>MROUTE</del> E3TWHEEL_ERR	3-Error	Timer wheel internal error	Timer wheel internal error	-	"An error in maintaining the timer wheel occurred." LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MROUTE3WHEEL_NIERR	3-Error	Trying to re-initialize an already initialized timer wheel	An error occurred intializing a timer twheel	-	"An error in maintaining the timer wheel occurred." LOG_STD_ACTION
MROUTE3WHEEL_NIERR	3-Error	Trying to re-initialize an already initialized timer wheel	An error occurred intializing a timer twheel	-	"An error in maintaining the timer wheel occurred." LOG_STD_ACTION
MROUTE3WHEEL_NERR	3-Error	An error occurred after inserting or executing a timer wheel event	An error occurred after inserting or executing a timer wheel event	-	"An error in maintaining the timer wheel occurred." LOG_STD_ACTION
MROUTE3WHEEL_NERR	3-Error	An error occurred after inserting or executing a timer wheel event	An error occurred after inserting or executing a timer wheel event	-	"An error in maintaining the timer wheel occurred." LOG_STD_ACTION
MROUTE3WHEEL_NIERR	3-Error	Timer wheel error at interrupt level [dec]	Timer wheel internal error	-	"An error in maintaining the timer wheel occurred." LOG_STD_ACTION
MROUTE3WHEEL_NIERR	3-Error	Timer wheel error at interrupt level [dec]	Timer wheel internal error	-	"An error in maintaining the timer wheel occurred." LOG_STD_ACTION
MROUTE3WHEEL_SCIERR	3-Error	Timer wheel event:[hec] slot:[dec] func:[hec] unequal to exec slot: [dec]	Timer wheel event has inconsistent slot number	-	"Clear ip mroute *" LOG_STD_ACTION
MROUTE3WHEEL_SCIERR	3-Error	Timer wheel event:[hec] slot:[dec] func:[hec] unequal to exec slot: [dec]	Timer wheel event has inconsistent slot number	-	"Clear ip mroute *" LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MROUTE-3-WAVLINT	3-Error	Could not initialize WAVL tree for [node]i	When the WAVL tree can not be initialized we can't search for midbs\n\ so there is no reason to keep the mdb around.	-	"An error in initializing the multicast routing occurred." LOG_STD_ACTION
MROUTE-3-WAVLINT	3-Error	Could not initialize WAVL tree for [node]i	When the WAVL tree can not be initialized we can't search for midbs\n\ so there is no reason to keep the mdb around.	-	"An error in initializing the multicast routing occurred." LOG_STD_ACTION
MROUTE-4-SENDTABID	4-Warning	PIM detected inconsistency in table-id information on [chars].	PIM detected that the interface tableid is not the same as the value\n\ maintained by the multicast code	mcast-vpn	"LOG_STD_ACTION"
MROUTE-4-SENDTABID	4-Warning	PIM detected inconsistency in table-id information on [chars].	PIM detected that the interface tableid is not the same as the value\n\ maintained by the multicast code	mcast-vpn	"LOG_STD_ACTION"
MROUTE-4-IPMC_NA_IDS_B	4-Warning	Unexpected access to IP Multicast interface subblock field	IOS attempts to access the value of an IP Multicast interface field\n\ whose interface subblock is not yet created.	-	"An inconsistency accessing an IP Multicast interface subblock occurred." LOG_STD_ACTION
MROUTE-4-IPMC_NA_IDS_B	4-Warning	Unexpected access to IP Multicast interface subblock field	IOS attempts to access the value of an IP Multicast interface field\n\ whose interface subblock is not yet created.	-	"An inconsistency accessing an IP Multicast interface subblock occurred." LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MROUTE4MROUTEHMIT	4-Warning	Exceeded multicast limit for group [node]source [node]on interface [chars]	The allowed number of multicast routes having the incoming or outgoing\n\ interface reached the limit specified by a configured access-list.\n\ New routes cannot be added unless the interface configuration is changed.	-	"If multicast traffic over the interface is of any priority\n\ among the traffic carried by this router then use the 'ip multicast limit'\n\ interface command to increase the number of multicast routes.\n\ Otherwise no action is required.\n\ Use 'debug ip mroute limit' and/or 'show ip multicast limit'\n\ to find exactly which multicast interface limit was exceeded."
MROUTE4MROUTEHMIT	4-Warning	Exceeded multicast limit for group [node]source [node]on interface [chars]	The allowed number of multicast routes having the incoming or outgoing\n\ interface reached the limit specified by a configured access-list.\n\ New routes cannot be added unless the interface configuration is changed.	-	"If multicast traffic over the interface is of any priority\n\ among the traffic carried by this router then use the 'ip multicast limit'\n\ interface command to increase the number of multicast routes.\n\ Otherwise no action is required.\n\ Use 'debug ip mroute limit' and/or 'show ip multicast limit'\n\ to find exactly which multicast interface limit was exceeded."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MROUTE4MIUMSMATCH	4-Warning	WARNING: With IP multicast enabled interfaces which transmit traffic from larger to smaller MTU interfaces may not be hardware switched due to fragmentation. A degradation in performance may occur.	WARNING: With IP multicast enabled interfaces which transmit traffic from larger to smaller MTU interfaces may not be hardware switched due to fragmentation. A degradation in performance may occur.	-	"Set MTU values on all interfaces to be identical. "
MROUTE4MIUMSMATCH	4-Warning	WARNING: With IP multicast enabled interfaces which transmit traffic from larger to smaller MTU interfaces may not be hardware switched due to fragmentation. A degradation in performance may occur.	WARNING: With IP multicast enabled interfaces which transmit traffic from larger to smaller MTU interfaces may not be hardware switched due to fragmentation. A degradation in performance may occur.	-	"Set MTU values on all interfaces to be identical. "
MROUTE4RADXDELETE	4-Warning	Error trying to delete multicast route entry [node][dec] for [node] expected [hex] got [hex]	An error in the multicast routing table occurred. A route could not be deleted from the routing table.	-	"Execute a clear ip mroute command. Determine whether the router is low on memory. " LOG_SID_RECUR_ACTION
MROUTE4RADXDELETE	4-Warning	Error trying to delete multicast route entry [node][dec] for [node] expected [hex] got [hex]	An error in the multicast routing table occurred. A route could not be deleted from the routing table.	-	"Execute a clear ip mroute command. Determine whether the router is low on memory. " LOG_SID_RECUR_ACTION
MROUTE4RADXINSERT	4-Warning	Error trying to add multicast route entry [node][dec] for [node] expected [hex] got [hex]	An error in the multicast routing table occurred. A route could not be inserted in to the routing table.	-	"Execute a clear ip mroute command. Determine whether the router is low on memory. " LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MROUTE4RADIXINSERT	4-Warning	Error trying to add multicast route entry [node][dec] for [node] expected [hex] got [hex]	An error in the multicast routing table occurred. A route could not be\n\n inserted in to the routing table.	-	"Execute a clear ip mroute command. Determine whether the router is low\n\n on memory. " LOG_SID_RECUR_ACTION
MROUTE4RCSR_SOURCE_CFG	4-Warning	Removing pim register source configuration for [chars]	The register source interface was deleted had its IP address removed or its vrf forwarding changed.	-	"No action required just check 'ip pim register-source' configuration." LOG_STD_ACTION
MROUTE4RCSR_SOURCE_CFG	4-Warning	Removing pim register source configuration for [chars]	The register source interface was deleted had its IP address removed or its vrf forwarding changed.	-	"No action required just check 'ip pim register-source' configuration." LOG_STD_ACTION
MROUTE4ROUTE_LIMIT	4-Warning	Current count of [node]exceeds multicast route-limit of [dec]	The number of multicast routes equals the configured maximum allowed.\n\n New routes cannot be added unless the configuration is changed.	-	"If multicast traffic is of any priority among the traffic carried\n\n by this router then use the 'ip multicast route-limit' command to\n\n increase the number of multicast routes.\n\n Otherwise no action is required."
MROUTE4ROUTE_LIMIT	4-Warning	Current count of [node]exceeds multicast route-limit of [dec]	The number of multicast routes equals the configured maximum allowed.\n\n New routes cannot be added unless the configuration is changed.	-	"If multicast traffic is of any priority among the traffic carried\n\n by this router then use the 'ip multicast route-limit' command to\n\n increase the number of multicast routes.\n\n Otherwise no action is required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MROUTE_MCAST_LIMIT	4-Warning	Attempt to exceed multicast route-limit of [dec]	The number of multicast routes equals the configured maximum allowed.\n\n New routes cannot be added unless the configuration is changed.	-	"If multicast traffic is of any priority among the traffic carried\n\n by this router then use the 'ip multicast route-limit' command to\n\n increase the number of multicast routes.\n\n Otherwise no action is required."
MROUTE_MCAST_LIMIT	4-Warning	Attempt to exceed multicast route-limit of [dec]	The number of multicast routes equals the configured maximum allowed.\n\n New routes cannot be added unless the configuration is changed.	-	"If multicast traffic is of any priority among the traffic carried\n\n by this router then use the 'ip multicast route-limit' command to\n\n increase the number of multicast routes.\n\n Otherwise no action is required."
MROUTE_MCAST_WARN	4-Warning	multicast route-limit warning curr [node]threshold %u	-	-	-
MROUTE_MCAST_WARN	4-Warning	multicast route-limit warning curr [node]threshold %u	-	-	-
MROUTE_SNMP_RADIX_ERR	4-Warning	Failed to [chars] snmp node [chars] snmp radix tree for multicast group * [node]	An error occurred while adding or deleting snmp node in snmp \n\n radix tree when mroute is created or deleted.	-	"An error in adding or deleting snmp node in snmp radix tree \n\n occurred." LOG_STD_ACTION
MROUTE_SNMP_RADIX_ERR	4-Warning	Failed to [chars] snmp node [chars] snmp radix tree for multicast group * [node]	An error occurred while adding or deleting snmp node in snmp \n\n radix tree when mroute is created or deleted.	-	"An error in adding or deleting snmp node in snmp radix tree \n\n occurred." LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MROUTE-WHEELDELAY	6-Information	Exceeded maximum delay [dec] ms requested: [dec]	Because of the way the timer wheel works there is a maximum delay defined. If we try to schedule a function with a higher delay we still schedule it using the maximum delay possible minus a small delay offset.	-	"A timer with large delay was requested. Check if a large igmp query-interval" " is set. Some timers may refresh periodically to allow for the large delay.\n\" LOG_SID_NO_ACTION
MROUTE-WHEELDELAY	6-Information	Exceeded maximum delay [dec] ms requested: [dec]	Because of the way the timer wheel works there is a maximum delay defined. If we try to schedule a function with a higher delay we still schedule it using the maximum delay possible minus a small delay offset.	-	"A timer with large delay was requested. Check if a large igmp query-interval" " is set. Some timers may refresh periodically to allow for the large delay.\n\" LOG_SID_NO_ACTION
MROUTE-MVRF_NOEXIST	6-Information	MRT[dec] MVRF does not exist	-	-	-
MROUTE-MVRF_NOEXIST	6-Information	MRT[dec] MVRF does not exist	-	-	-
MRP-2-RINGFAULT	2-Critical	Ring [dec]: The MRP ring is now in FAULT state	The MRP ring is in FAULT state. This typically happens if a link or node in the ring goes down.	accsw-layer2	"Determine the location of the fault and restore " "connectivity. The ring should resume functioning " "automatically"
MRP-2-RINGFAULT	2-Critical	Ring [dec]: The MRP ring is now in FAULT state	The MRP ring is in FAULT state. This typically happens if a link or node in the ring goes down.	accsw-layer2	"Determine the location of the fault and restore " "connectivity. The ring should resume functioning " "automatically"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MRP-3-RINGERROR	3-Error	Miscabling detected Port [chars] does not belong to the MRP ring [dec].	The MRP ring is in FAULT state. This happens when a cable is wrongly connected on another ring	petra-mrp	"Check the wiring and re-connect the cables again. " "Enable recovery of the err-disabled port using" "'errdisable recovery cause mrp-miscabling'."
<del>MRP-6-RINGINFORM</del>	6-Information	MRP \mode manager\ is deprecated executing \mode auto-manager\ instead.	MRP mode manager is no longer supported and is replaced by mode auto-manager.	accsw-layer2	"This is an informational message. The device is " "functioning as expected."
<del>MRP-6-RINGINFORM</del>	6-Information	MRP \mode manager\ is deprecated executing \mode auto-manager\ instead.	MRP mode manager is no longer supported and is replaced by mode auto-manager.	accsw-layer2	"This is an informational message. The device is " "functioning as expected."
MRP-6-RINGNORMAL	6-Information	Ring [dec]: The MRP ring is now in NORMAL state [chars] is Blocked	The state of the MRP ring has changed to NORMAL.	accsw-layer2	"This is an informational message. The device is " "functioning as expected."
MRP-6-RINGNORMAL	6-Information	Ring [dec]: The MRP ring is now in NORMAL state [chars] is Blocked	The state of the MRP ring has changed to NORMAL.	accsw-layer2	"This is an informational message. The device is " "functioning as expected."
<del>MRP-6-RINGNORMAL</del>	6-Information	Ring [dec]: The MRP ring is now in NORMAL state	The state of the MRP ring has changed to NORMAL.	accsw-layer2	"This is an informational message. The device is " "functioning as expected."
<del>MRP-6-RINGNORMAL</del>	6-Information	Ring [dec]: The MRP ring is now in NORMAL state	The state of the MRP ring has changed to NORMAL.	accsw-layer2	"This is an informational message. The device is " "functioning as expected."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MSDP-4-PKT_TOO_BIG	4-Warning	Message size violation on [node]byte packet from [node]discarded	A message larger than the maximum MSDP message size was received. \n\n There is also a possibility that this is an internal error.	-	"show version"
MSDP-4-PKT_TOO_BIG	4-Warning	Message size violation on [node]byte packet from [node]discarded	A message larger than the maximum MSDP message size was received. \n\n There is also a possibility that this is an internal error.	-	"show version"
MSDP-4-SA_LIMIT	4-Warning	SA from peer [node]RP [node]for [node][node]exceeded sa-limit of [dec]	-	-	-
MSDP-4-SA_LIMIT	4-Warning	SA from peer [node]RP [node]for [node][node]exceeded sa-limit of [dec]	-	-	-
MSDP-5-PEER_IS_SELF	5-Notice	Peering with self %i	-	-	-
MSDP-5-PEER_IS_SELF	5-Notice	Peering with self %i	-	-	-
MSDP-5-PEER_UPDOWN	5-Notice	Session to peer [node]going [chars]	Session to peer going up or down	-	"Determine whether the router is low on memory."
MSDP-5-PEER_UPDOWN	5-Notice	Session to peer [node]going [chars]	Session to peer going up or down	-	"Determine whether the router is low on memory."
ngACCESS_SESSION_TRACE	3-Error	Initialization failed with code: [dec]	Failed to initialize access-session trace.	dot1x-ios	LOG_SID_NO_ACTION
ngACCESS_SESSION_TRACE	3-Error	Initialization failed with code: [dec]	Failed to initialize access-session trace.	dot1x-ios	LOG_SID_NO_ACTION
ngACCESS_SESSION_TRACE	3-Error	Component [chars] registration failed. Error code: [dec]	Component failed to register with access-session trace	dot1x-ios	LOG_SID_NO_ACTION
ngACCESS_SESSION_TRACE	3-Error	Component [chars] registration failed. Error code: [dec]	Component failed to register with access-session trace	dot1x-ios	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MGHOC</del> MGHOCREAE	2-Critical	[chars]: Bad parameter to message fifo create [chars] = 0x[node]x	Failed to create message fifo invalid memory size or other parameter.	cpp-ucode	LOG_STD_ACTION
<del>MGMRNIA</del> MGMRNIA	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>MGMRNIA</del> MGMRNIA	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>MSP</del> MSP	3-Error	[chars] 0x[hec] 0x[hec] 0x[hec] [chars]	Tranceiver analyze failed	gsr-oc3_12-pos-spa	"Remove the tranceiver module and insert a valid module " "with rate that is supported on the SPA."
MSP_ISSU2GET_BUFFER	2-Critical	MSP ISSU client failed to get buffer for message. Error: [dec] [chars]	The MSP ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	msi-proxy	"show logging and show checkpoint client"
MSP_ISSU2GET_BUFFER	2-Critical	MSP ISSU client failed to get buffer for message. Error: [dec] [chars]	The MSP ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	msi-proxy	"show logging and show checkpoint client"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MSP_ISSU-2-INIT	2-Critical	MSP ISSU client initialization failed to [chars]. Error: [dec] [chars]	The MSP ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	msi-proxy	LOG_STD_ACTION
MSP_ISSU-2-INIT	2-Critical	MSP ISSU client initialization failed to [chars]. Error: [dec] [chars]	The MSP ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	msi-proxy	LOG_STD_ACTION
MSP_ISSU-2-INIT	2-Critical	MSP ISSU client failed to send negotiation message. Error: [dec] [chars]	The MSP ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	msi-proxy	"show logging and show checkpoint client"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MSP_ISSU_SESSION_NEGO_FAILED	2-Critical	MSP ISSU client failed to send negotiation message. Error: [dec] [chars]	The MSP ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	msi-proxy	"show logging and show checkpoint client"
MSP_ISSU_SESSION_NEGO	2-Critical	MSP ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The MSP ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	msi-proxy	"show issu session <client_id> and "show issu negotiated capability <session_id>"
MSP_ISSU_SESSION_NEGO	2-Critical	MSP ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The MSP ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	msi-proxy	"show issu session <client_id> and "show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MSP_ISSU_SESSION_REGISTER</del>	2-Critical	MSP ISSU client failed to register session information. Error: [dec] [chars]	The MSP ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	msi-proxy	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>MSP_ISSU_SESSION_REGISTER</del>	2-Critical	MSP ISSU client failed to register session information. Error: [dec] [chars]	The MSP ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	msi-proxy	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>MSP_ISSU_CAPABILITY_SIZE</del>	3-Error	MSP ISSU client capability list is empty.	The MSP ISSU client capability exchange list size is invalid.	msi-proxy	"show issu capability entires <Client_ID>"
<del>MSP_ISSU_CAPABILITY_SIZE</del>	3-Error	MSP ISSU client capability list is empty.	The MSP ISSU client capability exchange list size is invalid.	msi-proxy	"show issu capability entires <Client_ID>"
<del>MSP_ISSU_CAPABILITY_EXCHANGE</del>	3-Error	MSP ISSU client capability exchange result incompatible.	The MSP ISSU client capability exchange have negotiated as incompatible with the peer.	msi-proxy	"show issu negotiated capability <Session_ID>"
<del>MSP_ISSU_CAPABILITY_EXCHANGE</del>	3-Error	MSP ISSU client capability exchange result incompatible.	The MSP ISSU client capability exchange have negotiated as incompatible with the peer.	msi-proxy	"show issu negotiated capability <Session_ID>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MSP_ISSU_NVALD_SESSION	3-Error	MSP ISSU client does not have a valid registered session.	The MSP ISSU client does not have a valid registered session.	msi-proxy	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
MSP_ISSU_NVALD_SESSION	3-Error	MSP ISSU client does not have a valid registered session.	The MSP ISSU client does not have a valid registered session.	msi-proxy	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>MSP_ISSU_NCOMP_PEER_VER</del>	3-Error	'Message Type [dec]' is not supported by MSP ISSU client at peer	The MSP ISSU client at the peer supervisor is not compatible for this message type. The MSP client will be marked as incompatible with the peer.	msi-proxy	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>MSP_ISSU_NCOMP_PEER_VER</del>	3-Error	'Message Type [dec]' is not supported by MSP ISSU client at peer	The MSP ISSU client at the peer supervisor is not compatible for this message type. The MSP client will be marked as incompatible with the peer.	msi-proxy	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
MSP_ISSU_MSG_NOT_OK	3-Error	MSP ISSU client 'Message Type [dec]' is not compatible	The MSP ISSU client received an incompatible message from the peer device. The message cannot be processed.	msi-proxy	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MSP_ISSU3MSG_NOT_OK	3-Error	MSP ISSU client 'Message Type [dec]' is not compatible	The MSP ISSU client received an incompatible message from the peer device. The message cannot be processed.	msi-proxy	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
MSP_ISSU3MSG_SIZE	3-Error	MSP ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The MSP ISSU client failed to calculate the MTU for the specified message. The MSP ISSU client is not able to send the message to the standby device.	msi-proxy	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
MSP_ISSU3MSG_SIZE	3-Error	MSP ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The MSP ISSU client failed to calculate the MTU for the specified message. The MSP ISSU client is not able to send the message to the standby device.	msi-proxy	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
MSP_ISSU3UNRCSTR	3-Error	MSP ISSU client failed to unregister session information. Error: [dec] [chars]	The MSP ISSU client failed to unregister session information.	msi-proxy	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
MSP_ISSU3UNRCSTR	3-Error	MSP ISSU client failed to unregister session information. Error: [dec] [chars]	The MSP ISSU client failed to unregister session information.	msi-proxy	"show issu session <client_id> and " "show issu negotiated capability <session_id>"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MSP ISSU TRANSFORM FAL	3-Error	MSP ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The MSP ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the MSP state between the active device and the standby device is not identical.	msi-proxy	"show issu session <client_id> and " "show issu negotiated version <session_id>"
MSP ISSU TRANSFORM FAL	3-Error	MSP ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The MSP ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the MSP state between the active device and the standby device is not identical.	msi-proxy	"show issu session <client_id> and " "show issu negotiated version <session_id>"
MSP MSH BAD_CONFIG	1-Alert	MSPI-bad configuration [chars]	A configuration error was detected.	-	"Add or fix the Dial Peer configuration"
MSP MSH BAD_CONFIG	1-Alert	MSPI-bad configuration [chars]	A configuration error was detected.	-	"Add or fix the Dial Peer configuration"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MSPI-1-NOMEMORY	1-Alert	msgtxt_nomemory	The requested operation could not be accomplished because of a low\n\n memory condition.	-	"Reduce other system activity to ease memory demands. If conditions\n\n warrant upgrade to a larger memory configuration."
MSPI-1-NOMEMORY	1-Alert	msgtxt_nomemory	The requested operation could not be accomplished because of a low\n\n memory condition.	-	"Reduce other system activity to ease memory demands. If conditions\n\n warrant upgrade to a larger memory configuration."
<del>MSPI-2-BAD_CONTEXT</del>	2-Critical	MSPI-bad context pointer [chars]	A bad context pointer was passed.	-	LOG_SID_RECUR_ACTION
<del>MSPI-2-BAD_CONTEXT</del>	2-Critical	MSPI-bad context pointer [chars]	A bad context pointer was passed.	-	LOG_SID_RECUR_ACTION
<del>MSPI-2-INTERNAL_ERROR</del>	2-Critical	MSPI-Internal software error cid=[dec] [chars]	An internal software error occurred. This would happen when the IOS software runs into any null pointer invalid state or event or other failed operation	-	LOG_SID_RECUR_ACTION
<del>MSPI-2-INTERNAL_ERROR</del>	2-Critical	MSPI-Internal software error cid=[dec] [chars]	An internal software error occurred. This would happen when the IOS software runs into any null pointer invalid state or event or other failed operation	-	LOG_SID_RECUR_ACTION
<del>MSPI-4-BAD_MESSAGE</del>	4-Warning	MSPI- Bad message received: [chars]	An unexpected message was received.	-	LOG_SID_RECUR_ACTION
<del>MSPI-4-BAD_MESSAGE</del>	4-Warning	MSPI- Bad message received: [chars]	An unexpected message was received.	-	LOG_SID_RECUR_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MSPI-4-MSPI_NO_SMTP	4-Warning	MSPI- Can't connect to the SMTP server cid=[dec] [chars]	No connection was created to the specified SMTP server.	-	"Please use the following commands to collect the information: show call active " "voice show call active fax show call history voice show call history fax " "debug mspi send debug mspi receive or debug fax mspi all"
MSPI-4-MSPI_NO_SMTP	4-Warning	MSPI- Can't connect to the SMTP server cid=[dec] [chars]	No connection was created to the specified SMTP server.	-	"Please use the following commands to collect the information: show call active " "voice show call active fax show call history voice show call history fax " "debug mspi send debug mspi receive or debug fax mspi all"
MSPI-4-MSPI_NO_MIPSEND	4-Warning	MSPI- Could not\n\send data to the SMTP server cid=[dec] [chars]	A connection was made to the SMTP server but no data can be sent.	-	"Please use the following commands to collect the information on why no data " "can be sent: show call active voice show call active fax show call history " "voice show call history fax debug mta send all debug mta receive all or " "debug fax mta all"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MSMSPINOSMIPSEND</del>	4-Warning	MSPI- Could not\n\nsend data to the SMTP server cid=[dec] [chars]	A connection was made to the SMTP server but no data can be sent.	-	"Please use the following commands to collect the information on why no data " "can be sent: show call active voice show call active fax show call history " "voice show call history fax debug mta send all debug mta receive all or " "debug fax mta all"
<del>MSMSPINOCONCIED</del>	4-Warning	SMTP- failed [chars] [dec]	A connection attempt to a remote mail server was not successful.\n\n This unexpected behavior.	-	LOG_SID_NO_ACTION
<del>MSMSPINOCONCIED</del>	4-Warning	SMTP- failed [chars] [dec]	A connection attempt to a remote mail server was not successful.\n\n This unexpected behavior.	-	LOG_SID_NO_ACTION
MSPI-6-SMTP_OPEN	6-Information	SMTP- opening [chars] [dec]	A connection attempt ...	-	LOG_SID_NO_ACTION
MSPI-6-SMTP_OPEN	6-Information	SMTP- opening [chars] [dec]	A connection attempt ...	-	LOG_SID_NO_ACTION
<del>MRACGCHUNKCREATEA</del>	3-Error	-	Chunk create failed. MS RPC ALG will not be able to finish initialization.	cpp-ucode	LOG_STD_ACTION
<del>MRACGDATAERROR</del>	3-Error	-	Error during L7 data creation.	cpp-ucode	LOG_STD_ACTION
<del>MIREMIRECORRUPILEAF</del>	4-Warning	[node][dec] - [chars]	An internal software error occurred.	-	LOG_STD_ACTION
<del>MIREMIRELEAFCHAL</del>	4-Warning	[node][dec] - [chars]	An internal software error occurred.	-	LOG_STD_ACTION
<del>MIREMIRESIGNODER</del>	4-Warning	0x[hec] - [chars]	An internal software error occurred.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MIRIE4PLACEALOC	4-Warning	Failed to allocate place holder	An internal software error occurred.	-	LOG_STD_ACTION
MTS_BIND-3-L2VPN	3-Error	ERRMSG_NOFLAGS	-	-	-
MTS_BIND-3-L2VPN	3-Error	ERRMSG_NOFLAGS	-	-	-
MTS_DROP-3-L2VPN	3-Error	ERRMSG_NOFLAGS	-	-	-
MTS_DROP-3-L2VPN	3-Error	ERRMSG_NOFLAGS	-	-	-
MTS_DROP-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
MTS_DROP-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
MTS_Q-3-L2VPN	3-Error	ERRMSG_NOFLAGS	-	-	-
MTS_Q-3-L2VPN	3-Error	ERRMSG_NOFLAGS	-	-	-
MTS_RECV-3-L2VPN	3-Error	ERRMSG_NOFLAGS	-	-	-
MTS_RECV-3-L2VPN	3-Error	ERRMSG_NOFLAGS	-	-	-
MTS_RECV-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
MTS_RECV-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
MTS_REG-3-L2VPN	3-Error	ERRMSG_NOFLAGS	-	-	-
MTS_REG-3-L2VPN	3-Error	ERRMSG_NOFLAGS	-	-	-
MTS_SEND-3-L2VPN	3-Error	ERRMSG_NOFLAGS	-	-	-
MTS_SEND-3-L2VPN	3-Error	ERRMSG_NOFLAGS	-	-	-
MISUNKNOWNMSGIDP	6-Information	ERRMSG_NOFLAGS	-	-	-
MISUNKNOWNMSGIDP	6-Information	ERRMSG_NOFLAGS	-	-	-
MUESLIX-I-CLOCKRATE	1-Alert	[chars]:Link is brought [chars] due to clock rate change threshold configured = [node]received clock rate = %u	The received clock rate is changed from below the threshold\n\n configured to above or vice versa..	pas-serial	"Check the received clock rate from the provider end if the clock rate falls below the threshold configured"
MUESLIX-I-DWNLDLFL	1-Alert	Mueslix microcode down load failed.	The Mueslix serial hardware failed. Hardware could not download \n\n microcode into mueslix chip.	mid-serial	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MUESLIX-1-DWNLDL	1-Alert	Mx serial bay [dec]: PA down load failed	The Mx serial hardware failed. It could not download its \n\ operational microcode.	pas-serial	"Try to reseal the PA properly in the system slots. If the error\n\ still happens then verify for the hardware failure including \n\ the 7200 chassis in case of 7200 or vip in case of RSP and the PA \n\ as this error will come only if there is a failure in hardware."
MUESLIX-FAILURE_CAUSE	1-Alert	[chars]: [chars][chars]: 0x[node]x 0x[node]x	Pull the info from the port adaptor to show what error caused\n\ the STOPFAIL/STARFAIL problem.	pas-serial	"Enable 'debug serial mueslix' debug command. Then collect the \n\ 'show tech' and 'show log' information and send them \n\ to the technical support representative. After that you can \n\ disable the 'debug serial mueslix' command."
MUESLIX-1-HALT	1-Alert	Mx serial: [chars] TPU halted: cause 0x[node] status 0x[node]x shadow 0x[node]x	The Mx serial firmware is not in sync with the driver.	pas-serial	"This conditions will clear by itself. Enable 'debug serial mueslix' \n\ debug command. Then collect the 'show tech' and 'show log' \n\ information and send them to the DE team or CSE team. After \n\ that you can disable the 'debug serial mueslix' command."
MUESLIX-1-INITFAIL	1-Alert	MUESLIX slot [dec]: Init Failed at [chars]	The Mueslix serial board failed to complete hardware \n\ initialization.	mid-serial	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MUESLIX-1-INITFAIL	1-Alert	Mx serial bay [dec] Init Failed at [chars]	The Mx serial port adaptor failed to complete hardware \n\ initialization.	pas-serial	"Try to reseal the PA properly in the system slots. If the error\n\ still happens then verify for the hardware failure including \n\ the 7200 chasis in case of 7200 or vip in case of 7500 and the PA \n\ as this error will come only if there is a failure in hardware."
MUESLIX-1-STARIFAIL	1-Alert	[chars]: Start Failed at [chars]	The Mueslix serial interface is not responding to commands used to \n\ initialize it.	mid-serial	LOG_STD_ACTION
MUESLIX-1-STARIFAIL	1-Alert	Mx serial [chars] Start Failed at [chars]	A software or hardware error occurred. The Mx microcode is not\n\ responding to the enable command used to restart the serial interface	pas-serial	"Enable 'debug serial mueslix' debug command. Then collect the \n\ 'show tech' and 'show log' information and send them \n\ to the DE team or CSE team. After that you can disable the \n\ 'debug serial mueslix' command."
MUESLIX-1-STOPFAIL	1-Alert	[chars]: Stop Failed at [chars]	The Mueslix serial board failed to respond to a request to \n\ disable an interface.	mid-serial	LOG_STD_ACTION



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MUESLIX-1-STOPFAIL	1-Alert	Mx serial [chars] Stop Failed at [chars]	A software or hardware error occurred. The Mx microcode is not\n\n responding to the disable command used to stop the serial port.	pas-serial	"Enable 'debug serial mueslix' debug command. Then collect the \n\n 'show tech' and 'show log' information and send them \n\n to the technical support representative. After that you can \n\n disable the 'debug serial mueslix' command."
MUESLIX-3-DISCOVER	3-Error	Mx serial bay [dec]: Interface found: [dec]	The system couldn't able to recognize all the Mueslix devices\n\n that are there on the system	pas-serial	"Try to reseal the PA properly in the system slots. If the error\n\n is still happening then verify for the hardware failure including \n\n the 7200 chasis in case of 7200 or vip in case of RSP and the PA \n\n as this error will come only if there is a failure in hardware."
MUESLIX-3-ERROR	3-Error	[chars]	General error information.	-	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MUESLIX-3-NOI MUESLIX	3-Error	Mx serial bay [dec]: Device reported [hex]	The system hardware failed. A non-Mx serial device pointed at the\n Mx serial software.	pas-serial	"Check the system configuration for the failure in the bay number \n that is reported in the error message. If it is not a mueslix \n based PA then contact the appropriate component to which that PA \n belongs. If it is a mueslix based PA then try to reseal the PA \n once again and if the error still comes then collect the 'show tech' \n and 'show log' information at the time of this problem and send it\n to the technical support representative"
MUESLIX-3-OWNERR	3-Error	[dec] packet buffer pak=0x[hec]	A software or hardware error occurred. The Mx serial driver detected\n that the transmit ring is in an inconsistent and unrecoverable state.	pas-serial	"Enable 'debug serial mueslix' debug command. Then collect the \n 'show tech' and 'show log' information and send them \n to the DE team or CSE team. After that you can disable the \n 'debug serial mueslix' command."
MUESLIX-3-OWNERR	3-Error	Unit [dec] buffer ownership error pak = 0x[hec]	The Mueslix serial driver detected that the transmit ring is in an \n inconsistent state.	mid-serial	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MUESLX4DEF_SUBRAIE	4-Warning	[chars] [chars]	User has changed the dsu bandwidth using DS3 remote\n\ management commands. This won't change the user configured dsu bandwidth	pas-serial	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
MVR_ISSU2GET_BUFFER	2-Critical	MVR ISSU client failed to get buffer for message. Error: [dec] [chars]	The allocation of explicit-tracking entries is bounded to avoid\n\ the IGMP/MLD snooping hogs the system resources	igmp/mldsnooping	"Disable and re-enable L2 multicast snooping on the VLAN."
MVR_ISSU2GET_BUFFER	2-Critical	MVR ISSU client failed to get buffer for message. Error: [dec] [chars]	The MVR ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	mvr	"show logging and show checkpoint client"
MVR_ISSU-2-INIT	2-Critical	MVR ISSU client initialization failed to [chars]. Error: [dec] [chars]	The MVR ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	mvr	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
MVR_ISSU-2-INIT	2-Critical	MVR ISSU client initialization failed to [chars]. Error: [dec] [chars]	The MVR ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	mvr	LOG_STD_ACTION
<del>MVR_ISSU-2-INIT</del>	2-Critical	MVR ISSU client failed to send negotiation message. Error: [dec] [chars]	The MVR ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	mvr	"show logging and show checkpoint client"
<del>MVR_ISSU-2-INIT</del>	2-Critical	MVR ISSU client failed to send negotiation message. Error: [dec] [chars]	The MVR ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	mvr	"show logging and show checkpoint client"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MVR_ISSU_SESSION_NEGO	2-Critical	MVR ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The MVR ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	mvr	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
MVR_ISSU_SESSION_NEGO	2-Critical	MVR ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The MVR ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	mvr	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
MVR_ISSU_SESSION_REGISRV	2-Critical	MVR ISSU client failed to register session information. Error: [dec] [chars]	The MVR ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	mvr	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MVR_ISSU_SESSION_RECV_ERR	2-Critical	MVR ISSU client failed to register session information. Error: [dec] [chars]	The MVR ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	mvr	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
MVR_ISSU_INVALID_SESSION	3-Error	MVR ISSU client does not have a valid registered session.	The MVR ISSU client does not have a valid registered session.	mvr	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
MVR_ISSU_INVALID_SESSION	3-Error	MVR ISSU client does not have a valid registered session.	The MVR ISSU client does not have a valid registered session.	mvr	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
MVR_ISSU_BMSG_NOT_CHK	3-Error	MVR ISSU client 'Message Type [dec]' is not compatible	The MVR ISSU client received an incompatible message from the peer device. The message cannot be processed.	mvr	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
MVR_ISSU_BMSG_NOT_CHK	3-Error	MVR ISSU client 'Message Type [dec]' is not compatible	The MVR ISSU client received an incompatible message from the peer device. The message cannot be processed.	mvr	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MVR_ISSU-3-MSG_SIZE	3-Error	MVR ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The MVR ISSU client failed to calculate the MTU for the specified message. The MVR ISSU client is not able to send the message to the standby device.	mvr	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
MVR_ISSU-3-MSG_SIZE	3-Error	MVR ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The MVR ISSU client failed to calculate the MTU for the specified message. The MVR ISSU client is not able to send the message to the standby device.	mvr	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>MVR_ISSU-3-UNREG_SIRV</del>	3-Error	MVR ISSU client failed to unregister session information. Error: [dec] [chars]	The MVR ISSU client failed to unregister session information.	mvr	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>MVR_ISSU-3-UNREG_SIRV</del>	3-Error	MVR ISSU client failed to unregister session information. Error: [dec] [chars]	The MVR ISSU client failed to unregister session information.	mvr	"show issu session <client_id> and " "show issu negotiated capability <session_id>"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<b>MVR_ISSU_TRANSFORM_FAIL</b>	3-Error	MVR ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The MVR ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the MVR state between the active device and the standby device is not identical.	mvr	"show issu session <client_id> and " "show issu negotiated version <session_id>"
<b>MVR_ISSU_TRANSFORM_FAIL</b>	3-Error	MVR ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The MVR ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the MVR state between the active device and the standby device is not identical.	mvr	"show issu session <client_id> and " "show issu negotiated version <session_id>"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MVRP/3/CMC/RC/ALD	3-Error	Unable to reserve needed MAC match register - cannot run MVRP on interfaces of slot [dec] [chars]	MVRP attempted to reserve a MAC match register for the slot indicated and there is no dedicated register or programmable register available. MVRP cannot be activated on interfaced of this card.	mvrp	"Either conflicting protocols that use the MAC " "match register must be disabled or a different " "card type that supports MVRP must be used."
MVRP/6/SEC/RC/INCT	6-Information	Failed to enable MVRP on [chars] because conflicting feature [chars] is enabled on the interface	MVRP failed to be enabled on the given interface because of conflicting features. For instance unknown unicast flooding blockingUUFb and MVRP	mvrp	LOG_SID_NO_ACTION
MVRP/6/SEC/RC/LEARN	6-Information	MAC learning on VLAN [chars] is [chars]	MVRP detects network topology change dynamically. If only two MVRP ports are forwarding and not pruned in a VLAN MVRP will disable MAC learning on that VLAN so as to save room in the MAC table which is limited and system-wide resource. This is an informative message. No action needs to be taken.	mvrp	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MVRP_MACLEARN_FAILED	6-Information	Failed to [chars] MAC learning on VLAN [chars]	MVRP failed to enable or disable MAC learning on the given VLANs. This is probably due to the fact that MAC learning had already been configured by administrator. Use <CmdBold>show mac-address-table learning<NoCmdBold> to check.	mvrp	LOG_SID_NO_ACTION
MVRP_ISSU_GET_BUFFER	2-Critical	MVRP ISSU client failed to get buffer for message. Error: [dec] [chars]	The MVRP ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	mvrp	"show logging and show checkpoint client"
MVRP_ISSU-2-INIT	2-Critical	MVRP ISSU client initialization failed to [chars]. Error: [dec] [chars]	The MVRP ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	mvrp	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MVRP_ISSU_NEGO_FAIL</del>	2-Critical	MVRP ISSU client failed to send negotiation message. Error: [dec] [chars]	The MVRP ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	mvrp	"show logging and show checkpoint client"
<del>MVRP_ISSU_SESSION_NEGO</del>	2-Critical	MVRP ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The MVRP ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	mvrp	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>MVRP_ISSU_SESSION_REGISTER</del>	2-Critical	MVRP ISSU client failed to register session information. Error: [dec] [chars]	The MVRP ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	mvrp	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>MVRP_ISSU_INVALID_SESSION</del>	3-Error	MVRP ISSU client does not have a valid registered session.	The MVRP ISSU client does not have a valid registered session.	mvrp	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MVRP_ISSU3MSG_NOTCK	3-Error	MVRP ISSU client 'Message Type [dec]' is not compatible	The MVRP ISSU client received an incompatible message from the peer device. The message cannot be processed.	mvrp	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
MVRP_ISSU3MSG_SIZE	3-Error	MVRP ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The MVRP ISSU client failed to calculate the MTU for the specified message. The MVRP ISSU client is not able to send the message to the standby device.	mvrp	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
MVRP_ISSU3UNREG	3-Error	MVRP ISSU client failed to unregister session information. Error: [dec] [chars]	The MVRP ISSU client failed to unregister session information.	mvrp	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
MVRP_ISSU3TRANSFORMAL	3-Error	MVRP ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The MVRP ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the MVRP state between the active device and the standby device is not identical.	mvrp	"show issu session <client_id> and " "show issu negotiated version <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MVRP3ADDRCSRV_FAILED	3-Error	MVRP subsystem fails to add callback function [chars]	Other subsystem must have mistakenly add its own callback functions. This syslog is for debugging purpose.	mvrp	LOG_STD_NO_ACTION
MVRP3ENABLE_FAILED	3-Error	MVRP can't be enabled because [chars]	MVRP can't be enabled for some reason.	mvrp	"Action may be taken according to the given " "reason. If for instance the problem is " "due to lack of memory the user should " "add more memory to his system."
MVRP3HA_INIT_FAILED	3-Error	MVRP High Availability subsystem fails to be initialized and hence MVRP won't support HA stateful switchover.	Either MVRP CF client or MVRP RF client fails to be initialized.	mvrp	"Enter the " "<CmdBold>show redundancy clients<NoCmdBold> " "and <CmdBold>show checkpoint clients<NoCmdBold> to " "find out which client is not initialized."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MVRP3SUBSYSNFI_FAILED	3-Error	MVRP subsystem failed in initialization[chars] and MVRP won't	This is extremely unlikely to occur on a customer device. If it does occur the cause is most likely due to the lack of memory so the software failed to create data structures. User should see many	mvrp	"Most likely the system has crashed by then " "if the problem is due to lack of memory. " "If the system miraculously came up then" "user can run <CmdBold>show memory summary" " <NoCmdBold> to check the memory usage. " "Please contact the TAC with the output of " " <CmdBold>show memory summary<NoCmdBold> " " <CmdBold>show version<NoCmdBold> and " " <CmdBold>show run<NoCmdBold> and the " "associated syslog messages from the time " "of the problem."
MVRP6MODECHANGE	6-Information	The operating mode is changed to [chars] mode on interface [chars].	As a result of protocol negotiation the operating mode changed to the specified mode on the specified interface.	mvrp	LOG_SID_NO_ACTION
MX-3-BADFEAT	3-Error	[chars]: [dec]	Software detected the use of an invalid feature enumeration which may be the result of incompatible software versions on different system components.	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MX-3-BADMAGIC	3-Error	[chars]: [node]x in [hec]	A data structure inconsistency was detected in a buffer header perhaps as the result of memory corruption. A buffer has been dropped because of this resulting in a memory leak and potential system unreliability.	cpp-ucode	"Please report the problem Cisco technical support along with the " "text of the error message. " "If the system becomes unstable restarting or reloading the affected " "component should correct the instability."
MX-3-BADPOOL	3-Error	[chars]: %u	Software detected the use of an invalid pool index which may be the result of incompatible software versions on different system components.	cpp-ucode	LOG_STD_ACTION
MX-3-BADSTART	3-Error	[chars]: [hec] current [hec] size %u	A software error was detected during an attempt to increase the size of an external memory region.	cpp-ucode	LOG_STD_ACTION
MX-3-CARVE	3-Error	[chars]: size [node]too small	A software error resulted in an attempt to create buffers in an area of memory that was too small.	cpp-ucode	LOG_STD_ACTION
MX-3-INITBUFHDR	3-Error	[chars]: mgmt memory allocation failure size %u	insufficient mgmt memory provided for initialization of the external memory manager which will cause features that manage packets in multiple pieces or that directly export data not to work properly.	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
MX-3-MAXPOOLS	3-Error	too low	A source code inconsistency was detected.	cpp-ucode	"Increase the number of pools allowed."
MX-3-RESIZE	3-Error	[chars]: non-contiguous resize: orig [hec]/[hec] new [hec]/[hec]	A software error was detected during a resize operation on the specified memory region.	cpp-ucode	LOG_STD_ACTION
MX-3-SUBBRGNINDX	3-Error	[chars]: Subregion Index allocation failure	Unable to obtain a sub region index so unable add sw managed memory	cpp-ucode	LOG_STD_ACTION
MX-6-NOBUFHDR	6-Information	[chars]	An attempt to add buffers within a memory region failed.	cpp-ucode	LOG_STD_ACTION
MX-6-NOMEM	6-Information	[chars] bufhdr allocation failure	An attempt to allocate memory failed. This could cause features that manage packets in multiple pieces or that directly export data not to work properly in some cases.	cpp-ucode	LOG_STD_ACTION
<del>_NEWAPPNAME_AMGHR</del>	3-Error	[chars]	Error Messages	pagent	"try debug command"
<del>_NEWAPPNAME_AMGNF</del>	6-Information	[chars]	Program information	-	-
<del>_NEWAPPNAME_AMGDBG</del>	7-Debug	[chars]	Debug Messages	-	-
NAT-3-ALLOC_FAIL	3-Error	data 0x[hec]	A request exceeded for memory allocation failed	cpp-ucode	LOG_STD_ACTION
NACHUNK_IDSMATCH	3-Error	id [node]not found	The chunk ID provided by the client doesn't match any of the available chunk IDs. Hence a valid chunk could not be found for the given chunk ID.	cpp-ucode	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NAT-3-DP_REL_FAIL	3-Error	DP REL FAIL retry count [dec] exceeded max	The dp release fail due to too many retry on freeing session chunk	cpp-ucode	LOG_STD_ACTION
NAT3DYNMAP_ADD_FAIL	3-Error	[chars]	The add of a dynamic mapping failed. This will generally mean that the IOS configuration is now out of sync with the data plane. The mapping should be removed and then re-added to try to get things back in sync.	cpp-ucode	LOG_STD_ACTION
NAT3DYNMAP_UPDATE_FAIL	3-Error	rc [dec]	The add or update of a dynamic pat mapping failed with the associated return code. This will generally mean that the IOS configuration is now out of sync with the data plane. The mapping should be removed from the configuration to try to get things back in sync.	cpp-ucode	LOG_STD_ACTION
NAT-3-EMPTY_CHUNK	3-Error	id %p	The memory provided by the client to the datapath initialization is NULL	cpp-ucode	LOG_STD_ACTION
NAT3HA_BULK_SYNC_FAIL	3-Error	flags 0x[hec] rg [dec]	There was a failure such that NAT Bulk Sync did not occur	cpp-ucode	LOG_STD_ACTION
NAT3ACU_INACTIVE_ADDR	3-Error	addr [char]i port [hec]	The standby NAT could not allocate the address requested by the active	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>NAT3ACUINDNOCREAFEND</del>	3-Error	idomain [dec] orig adr [hec] port [hec] trans adr [hec] port [hec] vrf [hec] prot [hec] rg [dec]	Standby could not create the bind indicated by the HA message	cpp-ucode	LOG_STD_ACTION
<del>NAT3ACUINDNOCREAFESS</del>	3-Error	in_orig adr [hec] port [hec] out_trans adr [hec] port [hec] vrf [hec] prot [hec] cook [node]u rg [dec]	Standby could not create the session indicated by the HA message	cpp-ucode	LOG_STD_ACTION
<del>NAT3ACUINDNOCINDROL</del>	3-Error	pool_id [dec]	The standby NAT could find the pool indicated by the active	cpp-ucode	LOG_STD_ACTION
<del>NAT3ACUINDNOCINDRSS</del>	3-Error	in_orig adr [hec] port [hec] out_trans adr [hec] port [hec] vrf [hec] prot [hec] cook [hec] [hec]	Standby could not find the matching session indicated by the HA message	cpp-ucode	LOG_STD_ACTION
<del>NAT3ACUINDNOCINDRPREN</del>	3-Error	in_orig adr [hec] port [hec] out_trans adr [hec] port [hec] vrf [hec] prot [hec] cook [node]u	-	cpp-ucode	LOG_STD_ACTION
<del>NAT3HANAIMDNRGRCD</del>	3-Error	invalid value [dec] opcode 0x[hec] version 0x[hec]	Standby received an invalid NAT HA message	cpp-ucode	LOG_STD_ACTION
NAT3HA_INVALID_STATE	3-Error	state [dec]	An invalid HA state was received from the HA infrastructure.	cpp-ucode	LOG_STD_ACTION
NAT-3-HA_NO_BUF	3-Error	-	There was not enough memory to send the HA record	cpp-ucode	LOG_STD_ACTION
<del>NAT3ASNDYCRDBAID</del>	3-Error	rc=[dec]	Standby failed trying to clear databased with indicated return code	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NAT3HSL_ALLOC_FAIL	3-Error	[chars]	High Speed logging memory allocation failed. When this happens the event\n will not be exported to the collector. This indicates a temporary \n condition when the system runs low on memory. The failure does not have \n any effects on the operation of NAT \n	cpp-ucode	LOG_STD_ACTION
NAT3MAPING_CRITICAL	3-Error	refcount [dec]	The mapping reference count is below zero. This indicates that the reference count incrementing and decrementing operations are out of sync	cpp-ucode	LOG_STD_ACTION
NAT3HSL_ADD_FAIL	3-Error	-	The attempt to turn on NAT HSL for a vrfid [dec] failed. Please remove configuration and try again.\n	cpp-ucode	LOG_STD_ACTION
NAT3POOL_ADD_FAIL	3-Error	pool-id [dec] rc [dec]	A request from the active to process a clear translation failed.\n Please retry.\n	cpp-ucode	LOG_STD_ACTION
NAT3RMAP_OP_FAIL	3-Error	Routemap hash table not set up attempted [chars]	-	-	-
NAT3SHOW_LIMIT_FAIL	3-Error	unable to show [node]entries from bucket %u	This is an information message which occurs when NAT is unable to show all address binds due to an internal error. Please try operation again.	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NAT3SHOW_TRANS_FAIL	3-Error	unable to show [dec] entries from bucket %u	Unable to show some entries from session database. If using verbose try using non-verbose. Otherwise situation is likely to be temporary. Or it may be wise to do 'clear ip nat trans *' as a very odd session distribution has occurred.\n	cpp-ucode	LOG_STD_ACTION
NAT3SIAICMAP_ADD_FAIL	3-Error	local addr [char]i global addr [char]i [chars]	This is an information message which occurs when NAT is configured and a frame is dropped due to the default maximum entries limit. Starting with release 5 XNE NAT will use a default max-entries in the data plane based on the ESP type. This will not show in the configuration and is overridden by any user configuration of 'ip nat trans max-entries <value>'. The purpose of the default data plane limit is to protect the box from memory exhaustion which could occur if no limit is enforced.	cpp-ucode	LOG_STD_ACTION
NAT3SIAICMAP_ADD_FAIL	3-Error	local addr [char]i global addr [char]i [chars] [char]i [char]i	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>NAT</del> ALL_HOST_MAX_ENTRIES	4-Warning	all-host maximum limit of [dec] reached for [chars].	This message indicates that maximum limit for all-host entries was reached.	cpp-ucode	-
<del>NAT</del> ALL_VRF_MAX_ENTRIES	4-Warning	all-vrf maximum limit of [dec] reached for [dec].	This message indicates that maximum limit for all-vrf entries was reached.	cpp-ucode	-
<del>NAT</del> CRCHDDLBNDAID	4-Warning	Unable to find bind to forcibly delete	This is an information message which occurs when NAT is unable to find a bind even though IOS thinks the bind exists. Please try other methods of clearing transaction.	cpp-ucode	-
<del>NAT</del> ANADMCMRCD	4-Warning	invalid version [dec]	Standby received an invalid NAT HA message	cpp-ucode	LOG_STD_ACTION
<del>NAT</del> PER_HOST_MAX_ENTRIES	4-Warning	per-host maximum limit of [dec] reached for [chars].	This message indicates that maximum limit for per-host entries was reached.	cpp-ucode	-
<del>NAT</del> PER_TENANT_MAX_ENTRIES	4-Warning	per-tenant maximum limit of [dec] reached for [dec].	This message indicates that an address could not be allocated from a pool because there were no free addresses in the pool at that time.	cpp-ucode	-
<del>NAT</del> PER_VRF_MAX_ENTRIES	4-Warning	per-vrf maximum limit of [dec] reached for [dec].	This message indicates that maximum limit for per-vrf entries was reached.	cpp-ucode	-
<del>NAT</del> SEQ_DELTA_LIST_CORRUPT	4-Warning	Sequence Delta list tail pointer null in error	For unknown reasons sequence delta list tail pointer is null	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NAT64-CLEAR_TRANSACTION	6-Information	-	The requested clear failed because the transaction was in use. Some clear commands support a 'forced' keyword which allows you to override this.	cpp-ucode	LOG_STD_ACTION
NAT64-LOG_TRANSLATION	6-Information	[chars] Translation [chars] [char]i:[dec] [char]i:[dec] [char]i:[dec] [char]i:[dec] [dec]	A translation was created as a result of either a configuration or traffic flowing through the NAT subsystem	cpp-ucode	"This message is for debugging purposes only and gets logged only when logging is turned on"
NAT64-NON_PAT_TRANSLATION	6-Information	Non-PATable translation for [chars]: on pool [dec] orig_ip [char]i trans_ip [char]i alg_type [dec][chars] input intf [chars] mapping id [dec] created by pkt:	This message indicates that an address could not be allocated from a pool for a specific client address because there were no free addresses in the pool at that time.	cpp-ucode	-
NAT64-POOL_WATERMARK_HIGH	6-Information	[chars] High watermark reached for pool [dec]	This message indicates that pool usage has crossed its high watermark. Pool may exhaust soon.	-	-
NAT64-POOL_WATERMARK_LOW	6-Information	[chars] Low watermark reached for pool [dec]	This message indicates that pool usage has crossed its low watermark. Pool should have enough address.	cpp-ucode	-
NAT64-3-API_FAILED	3-Error	NULL	A call to the API of another component has indicated an error.	nat64	LOG_STD_ACTION
NAT64-3-BAD_MAGIC	3-Error	Invalid magic number[node]0x	An internal data structure is corrupt.	nat64	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NAT64-3-CHUNK_ID_MISMATCH	3-Error	id [node]not found	The chunk ID provided by the client doesn't match any of the available chunk IDs. Hence a valid chunk could not be found for the given chunk ID.	cpp-ucode	LOG_STD_ACTION
NAT64-3-CLEAR_TRANSACTION	3-Error	-	The requested clear failed because the transaction was in use. Some clear commands support a 'forced' keyword which allows you to override this.	cpp-ucode	LOG_STD_ACTION
NAT64-3-EEXIST	3-Error	NULL	An item unexpectedly exists already.	nat64	LOG_STD_ACTION
NAT64-3-EINVAL	3-Error	NULL	An unexpected input value to a function was incorrect	nat64	LOG_STD_ACTION
NAT64-3-EMPTY_CHUNK	3-Error	id %u	The memory provided by the client to the datapath initialization is NULL	cpp-ucode	LOG_STD_ACTION
NAT64-3-ENOENT	3-Error	NULL	A lookup failed unexpectedly.	nat64	LOG_STD_ACTION
NAT64-3-ENOMEM	3-Error	Memory allocation failed	A attempt to allocae memory has failed.	nat64	LOG_STD_ACTION
NAT64-3-HA_BULK_SYNC_FAIL	3-Error	flags 0x[hec] rg [dec]	There was a failure such that NAT64 Bulk Sync did not occur	cpp-ucode	LOG_STD_ACTION
NAT64-3-HA_INVALID_OPCODE	3-Error	invalid value [dec] opcode 0x[hec] version 0x[hec]	Standby received an invalid NAT64 HA message	cpp-ucode	LOG_STD_ACTION
NAT64-3-HA_INVALID_STATE	3-Error	state [dec]	An invalid HA state was received from the HA infrastructure.	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NAT64-3-INIT_FAILED	3-Error	An initialization failed rc[chars]	-	-	-
NAT64-3-INIT_FAILED	3-Error	refcount [dec]	A request from the active to process a clear translation failed.\n Please retry.\n	cpp-ucode	LOG_STD_ACTION
NAT64-3-POOL_ADEFL	3-Error	pool-id [dec] rc [dec]	This message indicates that an address could not be allocated from a pool because there were no free addresses in the pool at that time.	cpp-ucode	LOG_STD_ACTION
NAT64-3-REGISTRY_RC	3-Error	A NAT64 registry call failed with rc[chars]	The return code from a NAT64 registry call indicates an\n error.	nat64	LOG_STD_ACTION
NAT64-3-RUNAWAY_LOOP	3-Error	NULL	A loop has exceeded the expected number of iterations.	nat64	LOG_STD_ACTION
NAT64-3-UNINITIALIZED	3-Error	NAT64 feature is not properly initialized	A function call was made when the system was not properly\n initialized.	nat64	LOG_STD_ACTION
NAT64-4-STATIC_MAP_ADEFL	4-Warning	[chars] v4 addr [char]i v6 addr [char]I [chars]	An add of a static NAT64 mapping failed due to listed reason.\n This mapping will be in the IOS configuration but is not active\n in the data plane. It is recommended to remove the mapping\n from the configuration\n	cpp-ucode	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NAT64-ALIAS_NOT_FOUND	5-Notice	Unable to find alias address[node]table_id%u	An attempt was made to remove an IP alias for a NAT64 address and the alias does not exist. This is a notification that such an event happened and should not have any functional impact. This could happen under heavy load if for example a previous best effort message to add the alias was dropped.	nat64	LOG_STD_ACTION
NAT64-DEFAULT_MAX_ENTRIES	6-Information	default max entries value [dec]	This is an information message which occurs when NAT is configured and a frame is dropped due to the default maximum entries limit. Starting with release 5 XNE NAT will use a default max-entries in the data plane based on the ESP type. This will not show in the configuration and is overridden by any user configuration of 'ip nat trans max-entries <value>'. The purpose of the default data plane limit is to protect the box from memory exhaustion which could occur if no limit is enforced.	cpp-ucode	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NAT64-HA-FCR-TMOUT	6-Information	Bulk sync is flow controlled by [chars]	The bulk synchronization of the NAT64 configuration to the standby RP has encountered a flow control condition which has effected a timeout awaiting the condition to clear. This will result in a reload of the standby RP to allow the bulk synchronization to restart.	nat64	LOG_STD_ACTION
NAT64-HA-PEER_READY	6-Information	NULL	The synchronization attempt for the message has determined that the transport has lost communication with its peer. This is a normal situation which indicates that the standby route-processor is currently out of service implying a simplex redundancy mode.	-	-
NAT64-HA_RELOAD	6-Information	Reloading [chars] reason[chars]	A synchronization attempt between the active and standby RP peers has failed with the reason indicated. The standby peer is reloaded in an attempt to resynchronize when operating in a stateful redundant mode.	nat64	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NAT64-RELOAD_DISABLED	6-Information	Standby reload has been disabled NAT64 RP state is out of sync and the standby should be reloaded manually	The active and standby RPs are out of sync and the standby RP would have been reloaded but this reload was suppressed based on the configured environment.	nat64	LOG_STD_ACTION
NAT64-6-LOOPV4	6-Information	src IP [char]i dest IP [char]i	IPv4 packet has been dropped due to looping inside of NAT64. See recommended action	cpp-ucode	"There are 2 most likely items that should be checked for this error:\n" "1 check that none of the NAT64 interfaces are disabled\n"
NAT64-6-LOOPV6	6-Information	src IP [char]I dest IP [char]I	IPv6 packet has been dropped due to looping inside of NAT64. See recommended action	cpp-ucode	"There are 2 most likely items that should be checked for this error:\n" "1 check that none of the NAT64 interfaces are shutdown "
NAT64-6-MAP_E	6-Information	NULL	An unexpected input value to a function was incorrect	nat64	LOG_STD_ACTION
NAT64-SHOW_TRANS_FAIL	6-Information	unable to show [dec] entries from bucket %	Unable to show some entries from session/bind database. If using verbose try using non-verbose. Otherwise situation is likely to be temporary. Or it may be wise to do 'clear ip nat trans *' as a very odd session distribution has occurred.\n	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NAT66-UDP_CSUM_MIS	6-Information	source IP [char]i dest IP [char]i source port [dec] dest port [dec]	A first fragment of an IPv4 UDP packet with 0 checksum has been dropped	cpp-ucode	LOG_STD_ACTION
NAT66-ADDRESS_IN_USE	3-Error	[node]is already in use.	The IPv6 address is already in use.	nat66	LOG_STD_ACTION
NAT66-3-API_FAILED	3-Error	NULL	A call to the API of another component has indicated an\n\ error.	nat66	LOG_STD_ACTION
NAT66-3-BAD_MAGIC	3-Error	Invalid magic number[node]0x	An internal data structure is corrupt.	nat66	LOG_STD_ACTION
NAT66-3-EEXIST	3-Error	NULL	An item unexpectedly exists already.	nat66	LOG_STD_ACTION
NAT66-3-EINVAL	3-Error	NULL	An unexpected input value to a function was incorrect	nat66	LOG_STD_ACTION
NAT66-3-ENOENT	3-Error	NULL	A lookup failed unexpectedly.	nat66	LOG_STD_ACTION
NAT66-3-ENOMEM	3-Error	Memory allocation failed	A attempt to allocae memory has failed.	nat66	LOG_STD_ACTION
NAT66-3-INIT_FAILED	3-Error	An initialization failed rc[chars]	-	-	-
NAT66-3-NAT66_REGISTRY_RC	3-Error	A NAT66 registry call failed with rc[chars]	The return code from a NAT66 registry call indicates an\n\ error.	nat66	LOG_STD_ACTION
NAT66-3-RUNAWAY_LOOP	3-Error	NULL	A loop has exceeded the expected number of iterations.	nat66	LOG_STD_ACTION
NAT66-3-UNINITIALIZED	3-Error	NAT66 feature is not properly initialized	A function call was made when the system was not properly\n\ initialized.	nat66	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NATMIB_HELPER_NOT_CREATED	3-Error	NATMIB Helper Process not created - NAT MIB will not work properly	Attempt to start NATMIB Helper Process failed when the natmib subsystem was initialised.	snmp	"The NATMIB Helper process was not created possibly due to lack of memory. If you want to use the NATMIB reconfigure the box so that less memory is used by other features or add more memory to the system. Reload the box after reconfiguring."
NBAR_HA5NBAR_INFO	5-Notice	[chars]	-	-	-
NBAR_HA5NBAR_INFO	5-Notice	[chars]	-	-	-
NBAR_LINK_NEXT_CORRUPTED	1-Alert	link->next not NULL when allocated. link->next = [chars]\n	An attempt was made to get a link from the free bucket which is pointing to another resource. Links within the free bucket should be NULL therefore this link is corrupted and should not be used	high-ipqos	"Configure the router with the <b>ip nbar resources</b> to allocate a larger initial pool of resources."
NBAR_LINK_NEXT_CORRUPTED	1-Alert	link->next not NULL when allocated. link->next = [chars]\n	An attempt was made to get a link from the free bucket which is pointing to another resource. Links within the free bucket should be NULL therefore this link is corrupted and should not be used	high-ipqos	"Configure the router with the <b>ip nbar resources</b> to allocate a larger initial pool of resources."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>NBARLINKRECORRUPTED</del>	1-Alert	link->prev not NULL when allocated. link->prev = [chars]\n	An attempt was made to get a link from the free bucket\n\ which is pointing to another resource. Links within\n\ the free bucket should be NULL therefore this link is corrupted and\n\ should not be used	high-ipqos	"Configure the router with the <CmdBold>ip nbar resources\n\ <noCmdBold> to allocate a larger initial pool of resources."
<del>NBARLINKRECORRUPTED</del>	1-Alert	link->prev not NULL when allocated. link->prev = [chars]\n	An attempt was made to get a link from the free bucket\n\ which is pointing to another resource. Links within\n\ the free bucket should be NULL therefore this link is corrupted and\n\ should not be used	high-ipqos	"Configure the router with the <CmdBold>ip nbar resources\n\ <noCmdBold> to allocate a larger initial pool of resources."
<del>NBARMAXMEMORUSED</del>	1-Alert	Reached maximum amount of memory allocated for stile\n	This platform allows NBAR to use a limited amount of memory for\n\ classification and that amount has been used up because of high \n\ traffic conditions.\n	high-ipqos	"Increase amount of memory in router.\n"
<del>NBARMAXMEMORUSED</del>	1-Alert	Reached maximum amount of memory allocated for stile\n	This platform allows NBAR to use a limited amount of memory for\n\ classification and that amount has been used up because of high \n\ traffic conditions.\n	high-ipqos	"Increase amount of memory in router.\n"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>NBAR</del> NODESIZE_MISMATCH	1-Alert	Nodes size mismatch between parsing and sending:[chars] \n	Failure during the distribution of NBAR graph nodes from the route processor to the linecards. Failure is related to node size changes between parsing and sending phase	high-ipqos	"Disable nbar protocols"
<del>NBAR</del> NODESIZE_MISMATCH	1-Alert	Nodes size mismatch between parsing and sending:[chars] \n	Failure during the distribution of NBAR graph nodes from the route processor to the linecards. Failure is related to node size changes between parsing and sending phase	high-ipqos	"Disable nbar protocols"
<del>NBAR</del> HEURISTIC_DATAILED	2-Critical	Failure in the heuristic subsystem of NBAR: [chars]	Failure during the distribution of NBAR heuristic data structures\n\n from the route processor to the linecards.	high-ipqos	"Disable heuristic protocols"
<del>NBAR</del> HEURISTIC_DATAILED	2-Critical	Failure in the heuristic subsystem of NBAR: [chars]	Failure during the distribution of NBAR heuristic data structures\n\n from the route processor to the linecards.	high-ipqos	"Disable heuristic protocols"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
NBAR-2-NOMEMORY	2-Critical	No memory available for [chars]	An attempt at memory allocation failed.	high-ipqos	"Try these actions to remedy the problem:\n\n Add memory.\n\n Disable some features.\n\n Apply filtering to decrease the size of system data structures - the\n routing table for example.\n\n In general reduce other system activities to ease memory demands. If\n conditions warrant upgrade to a larger memory configuration."
NBAR-2-NOMEMORY	2-Critical	No memory available for [chars]	An attempt at memory allocation failed.	high-ipqos	"Try these actions to remedy the problem:\n\n Add memory.\n\n Disable some features.\n\n Apply filtering to decrease the size of system data structures - the\n routing table for example.\n\n In general reduce other system activities to ease memory demands. If\n conditions warrant upgrade to a larger memory configuration."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NBAR-2-NOSTATEMEM	2-Critical	Memory for maintaining state used up	NBAR uses memory to maintain state information about stateful\n flows. There is a maximum limit on how much memory NBAR can use\n for this purpose and this limit has been reached.	high-ipqos	"Increase memory on platform"
NBAR-2-NOSTATEMEM	2-Critical	Memory for maintaining state used up	NBAR uses memory to maintain state information about stateful\n flows. There is a maximum limit on how much memory NBAR can use\n for this purpose and this limit has been reached.	high-ipqos	"Increase memory on platform"
NBAR-2-RMNAIDCONFG	2-Critical	NBAR resource manager : too many buckets [dec]	-	-	-
NBAR-2-RMNAIDCONFG	2-Critical	NBAR resource manager : too many buckets [dec]	-	-	-
NBAR-2-RMNCRESOURCE	2-Critical	NBAR resources exhausted	In order to save stateful information on protocols NBAR must\n use dynamic resources. These resources have been exhausted.	high-ipqos	"Configure the router with the <b>ip nbar resources</b> \n\n to allocate a larger initial pool of resources.\n The default number of initial resources is 10000. Also try\n\n configuring a shorter max-idle time."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NBAR2RMNCRSOURCE	2-Critical	NBAR resources exhausted	In order to save stateful information on protocols NBAR must use dynamic resources. These resources have been exhausted.	high-ipqos	"Configure the router with the <CmdBold>ip nbar resources\n\ <noCmdBold> to allocate a larger initial pool of resources.\n\ The default number of initial resources is 10000. Also try\n\ configuring a shorter max-idle time."
NBAR3CACHE_SYNC_ERR	3-Error	[chars]	-	-	-
NBAR3CACHE_SYNC_ERR	3-Error	[chars]	-	-	-
NBAR3PACK_UPDATE_FAIL	3-Error	failed to copy file \[chars]\	NBAR protocol-pack Auto-Update failed to update the PPACK file	nbar	"Check PPack auto-update server address"
NBAR3PACK_UPDATE_FAIL	3-Error	failed to copy file \[chars]\	NBAR protocol-pack Auto-Update failed to update the PPACK file	nbar	"Check PPack auto-update server address"
NBAR3PACK_UPDATE_VERIFY_FAIL	3-Error	failed to verify file \[chars]\	NBAR protocol-pack Auto-Update failed to verify file validity	nbar	"Check PPack auto-update server address"
NBAR3PACK_UPDATE_VERIFY_FAIL	3-Error	failed to verify file \[chars]\	NBAR protocol-pack Auto-Update failed to verify file validity	nbar	"Check PPack auto-update server address"
NBAR3PACK_UPDATE_GENERIC_ERR	3-Error	Generic PP_UPDATE Error: \[chars]\	NBAR protocol-pack Auto-Update error	nbar	"None"
NBAR3PACK_UPDATE_GENERIC_ERR	3-Error	Generic PP_UPDATE Error: \[chars]\	NBAR protocol-pack Auto-Update error	nbar	"None"
NBAR4CSDM_ERR_WARNING	4-Warning	[chars]	-	-	-
NBAR4CSDM_ERR_WARNING	4-Warning	[chars]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>NBARCSDMCAEPPWARNG</del>	4-Warning	[chars]	-	-	-
<del>NBARCSDMCAEPPWARNG</del>	4-Warning	[chars]	-	-	-
NBARCACHESYNC_WARN	4-Warning	[chars]	-	-	-
NBARCACHESYNC_WARN	4-Warning	[chars]	-	-	-
NBARCUPDHCENR_WARNG	4-Warning	Generic PP_UPDATE Warning: \[chars]\	NBAR protocol-pack Auto-Update warning	nbar	"None"
<del>NBARCUPDHCENR_WARNG</del>	4-Warning	Generic PP_UPDATE Warning: \[chars]\	NBAR protocol-pack Auto-Update warning	nbar	"None"
NBAR4SILE_MAX_HD_NIF	4-Warning	NBAR protocol-discovery is enabled on maximum number of interfaces [dec] supported by this platform	This platform allows NBAR to enable protocol-discovery on a limited number of interfaces and that limit has reached.	nbar	"Need to disable protocol-discovery from an interface to enable " "protocol-discovery on any new interface."
NBAR4SILE_MAX_HD_NIF	4-Warning	NBAR protocol-discovery is enabled on maximum number of interfaces [dec] supported by this platform	This platform allows NBAR to enable protocol-discovery on a limited number of interfaces and that limit has reached.	nbar	"Need to disable protocol-discovery from an interface to enable " "protocol-discovery on any new interface."
NBARCUPDHCPCSCS	5-Notice	successfully copied file \[chars]\	NBAR protocol-pack Auto-Update successfully updated the PPACK file	-	"No action required. Informational message"
<del>NBARCUPDHCPCSCS</del>	5-Notice	successfully copied file \[chars]\	NBAR protocol-pack Auto-Update successfully updated the PPACK file	-	"No action required. Informational message"
NBAR6CACHE_SYNC_NO	6-Information	[chars]	-	-	-
NBAR6CACHE_SYNC_NO	6-Information	[chars]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>NBAR-6-INFO-PROT_PCK</del>	6-Information	[chars] is successfully loaded as an Inactive Protocol Pack	The NBAR Engine Version of the protocol pack is either less than the Minimum Backward Compatible Engine Version or is greater than the NBAR Engine Version of the image and therefore it will be loaded as an Inactive Protocol Pack	nbar	"Since the protocol pack is loaded as an Inactive Protocol Pack" "signatures in this pack will not be available for any classification." "To use the protocol pack upgrade/downgrade to an image " "which is compatible with the NBAR Engine Version of the " "protocol pack."
<del>NBAR-6-INFO-PROT_PCK</del>	6-Information	[chars] is successfully loaded as an Inactive Protocol Pack	The NBAR Engine Version of the protocol pack is either less than the Minimum Backward Compatible Engine Version or is greater than the NBAR Engine Version of the image and therefore it will be loaded as an Inactive Protocol Pack	nbar	"Since the protocol pack is loaded as an Inactive Protocol Pack" "signatures in this pack will not be available for any classification." "To use the protocol pack upgrade/downgrade to an image " "which is compatible with the NBAR Engine Version of the " "protocol pack."
NBAR-6-PDL_ERRORS	6-Information	PDL parsing error: [chars]	Unable to parse PDL issue in syntax	nbar	"PL need to fine tune or modify PDL."
NBAR-6-PDL_ERRORS	6-Information	PDL parsing error: [chars]	Unable to parse PDL issue in syntax	nbar	"PL need to fine tune or modify PDL."
<del>NBAR-6-INFO-PORT_MAP</del>	6-Information	[chars] command will be deprecated soon.\n\n In future it will not be necessary to configure port-map on a Protocol to create a new\n\n Custom protocol onto the same well known port.	In future releases it will not be necessary to configure\n\n port-map on a Protocol to create a new Custom protocol onto\n\n the same well known port. Port-map command will be\n\n deprecated in future releases.	nbar	"No action required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>NBAR</del> PPMAPDEPRECATION	6-Information	[chars] command will be deprecated soon.\n\n In future it will not be necessary to configure port-map on a Protocol to create a new\n\n Custom protocol onto the same well known port.	In future releases it will not be necessary to configure\n\n port-map on a Protocol to create a new Custom protocol onto\n\n the same well known port. Port-map command will be\n\n deprecated in future releases.	nbar	"No action required."
<del>NBAR</del> PPUPDATESUCCESS	6-Information	successfully verified file \[chars]\	NBAR protocol-pack Auto-Update successfully checked file validity	-	"No action required. Informational message"
<del>NBAR</del> PPUPDATESUCCESS	6-Information	successfully verified file \[chars]\	NBAR protocol-pack Auto-Update successfully checked file validity	-	"No action required. Informational message"
<del>NBAR</del> PPUPDATEGENERIC	6-Information	Generic PP_UPDATE Information: \[chars]\	NBAR protocol-pack Auto-Update information	-	"None"
<del>NBAR</del> PPUPDATEGENERIC	6-Information	Generic PP_UPDATE Information: \[chars]\	NBAR protocol-pack Auto-Update information	-	"None"
<del>NBAR</del> PPUPDATEFAILED	6-Information	failed to delete previous PP file \[chars]\	NBAR protocol-pack Auto-Update failed to delete the previously loaded protocol pack	nbar	"Check if previous ppack still exists and if the disk is write protected"
<del>NBAR</del> PPUPDATEFAILED	6-Information	failed to delete previous PP file \[chars]\	NBAR protocol-pack Auto-Update failed to delete the previously loaded protocol pack	nbar	"Check if previous ppack still exists and if the disk is write protected"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>NBAR</del> <del>OP</del> <del>RM</del> <del>PL</del> <del>ES</del> <del>CS</del>	6-Information	successfully deleted previous PP file \[chars]\	NBAR protocol-pack Auto-Update successfully deleted the previously loaded protocol pack	-	"No action required. Informational message"
<del>NBAR</del> <del>OP</del> <del>RM</del> <del>PL</del> <del>ES</del> <del>CS</del>	6-Information	successfully deleted previous PP file \[chars]\	NBAR protocol-pack Auto-Update successfully deleted the previously loaded protocol pack	-	"No action required. Informational message"
NBRCHG-5-LDP	5-Notice	ERRMSG_NOFLAGS	-	-	-
NBRCHG-5-LDP	5-Notice	ERRMSG_NOFLAGS	-	-	-
<del>NCS</del> <del>4</del> <del>2</del> <del>0</del> <del>0</del> <del>_</del> <del>PT</del> <del>P</del> <del>_</del> <del>MSG</del> <del>_</del> <del>DIS</del> <del>P</del> <del>A</del> <del>C</del> <del>H</del>	3-Error	Unable to dispatch received TDL message from PTP daemon	An unexpected condition has occurred while IOS was trying to dispatch a TDL message received from PTP daemon.	ncs4200-ptp	LOG_STD_ACTION
<del>NCS</del> <del>4</del> <del>2</del> <del>0</del> <del>0</del> <del>_</del> <del>PT</del> <del>P</del> <del>_</del> <del>MSG</del> <del>_</del> <del>INIT</del> <del>_</del> <del>FAIL</del>	3-Error	Failed to initialize required PTP resource: [chars]	During the initialization of the resources required by PTP a failure occurred. This has prevented PTP from being activated.	ncs4200-ptp	LOG_STD_ACTION
<del>NS</del> <del>A</del> <del>M</del> <del>B</del> <del>A</del> <del>_</del> <del>NO</del> <del>FL</del> <del>AG</del> <del>S</del>	3-Error	total active atm vc per ATM SPA reached limitation of [dec]	total number of active atm vc per ATM SPA has reached max limit	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>NSMDFMINSERIED</del>	3-Error	[chars] - [chars] in bay [dec]	A different IM type has been inserted in the bay which previously had another IM type. If the interfaces were set to default before swap the IM will boot up fine. If not IM will goto Out-of-service state. Kindly insert the previous IM type use hw-module subslot 0/x default and then proceed with the IM swap. If not might need to reload the box for recovery	-	-
<del>NSMBCNCOMPABLE</del>	3-Error	[chars]-[dec]	P1D and onwards Cu IM.... is not backward compatible with P1A/P1B/P1C Cu IM use the same build of Cu IM or reload the router to use the new build.	-	-
<del>NSM#INVALIDMADN</del>	3-Error	[chars] is not allowed in bay [dec] can be supported only in bays [chars]	The inserted IM is not supported in the specified subslot given the combination of existing IMs in the chassis.	-	-
<del>NSM#INVALIDMODE</del>	3-Error	[chars] with mode [chars] is not allowed in bay [dec] can be supported only in bays [chars]	The inserted IM is not supported in the specified subslot given the combination of existing IMs in the chassis.	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>NCSPUNBUNSLPDRIB</del>	3-Error	This Interface Module is not supported in subslot [dec]	The inserted IM is not supported in the specified subslot. Kindly check the supported slots for the IM type.	-	-
<del>NCSPUNBUNSLPDRIM</del>	3-Error	This Interface Module is not supported in [chars] platform	The inserted IM is not supported in the specified platform	-	-
<del>NCSPUNBUNSLPDRIB</del>	3-Error	Interface [chars] is not supported in subslot [dec] by the [chars] module	The Interface specified in the error message is not supported in the specified Subslot by the version of the operating system currently running on the system.	-	-
<del>NCSPUNBUNSLPDRIB</del>	3-Error	Failed to allocate a csb	Can't allocate a csb when generating punt err log	ncs4206-cfc	LOG_STD_ACTION
<del>NCSPUNBUNSLPDRIB</del>	3-Error	Failed to allocate a tty	Can't allocate a TTY when generating punt err log	ncs4206-cfc	LOG_STD_ACTION
<del>NCSPUNBUNSLPDRIB</del>	3-Error	Failed to open file: [chars]	Failed to open file when generating punt err log	ncs4206-cfc	LOG_STD_ACTION
<del>NCSPUNBUNSLPDRIB</del>	3-Error	Write to file Id [dec] failed [dec] bytes expected [dec] bytes	Write to file failed when generating punt err log	ncs4206-cfc	LOG_STD_ACTION
<del>NCSPUNBUNSLPDRIB</del>	4-Warning	Failed to close file with descriptor: [dec]	Closing of file failed when generating punt err log	ncs4206-cfc	LOG_STD_ACTION
<del>NCSPUNBUNSLPDRIB</del>	4-Warning	Failed to get file name	Could not form a file name when generating punt err log	ncs4206-cfc	LOG_STD_ACTION
<del>NCSPUNBUNSLPDRIB</del>	4-Warning	Invalid file descriptor: [dec]	Invalid file descriptor was found when generating punt err log	ncs4206-cfc	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>NSCIP/NKIP/ERR/ERRM</del>	4-Warning	Invalid parameter: [chars]	Invalid parameter was passed when generating punt err log	ncs4206-cfc	LOG_STD_ACTION
NDBMAN-5-ACTIVE	5-Notice	ddmi-infra	"All data providers active."	"All data providers active."	"Informational only. No action required."
NDBMAN-5-ACTIVE	5-Notice	ddmi-infra	"All data providers active."	"All data providers active."	"Informational only. No action required."
NDBMAN-5-RESET	5-Notice	ddmi-infra	"A data provider has stopped."	"At least one data provider has stopped."	"Informational only. No action required."
NDBMAN-5-RESET	5-Notice	ddmi-infra	"A data provider has stopped."	"At least one data provider has stopped."	"Informational only. No action required."
<del>NBDCIRANCE/ERR/ERRM</del>	4-Warning	ddmi-infra	Double (%1\$s) with value (%2\$lf) is out-of-range (-%3\$d to %3\$d)	-	-
<del>NBDCIRANCE/ERR/ERRM</del>	4-Warning	ddmi-infra	Double (%1\$s) with value (%2\$lf) is out-of-range (-%3\$d to %3\$d)	-	-
<del>NBDCIRANCE/ERR/ERRM</del>	5-Notice	ewlc-ap	AP neighborhood based algorithm applied. %d number of APs have been load-balanced across WNCd instances.	RF based AP neighborhood algorithm is applied	If this message occurs
<del>NBDCIRANCE/ERR/ERRM</del>	5-Notice	ewlc-ap	AP clustering and WNCd assignment algorithm completed. %d number of AP neighborhoods formed and ready to load-balance across WNCd instances.	RF based AP clustering formation is done and sub-neighborhoods have been allocated the WNCd instances	If this message occurs

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>NET_SVC4APNEIGHCD</del>	5-Notice	ewlc-ap	Starting AP clustering and WNCD assignment algorithm. Total number of APs collected for calculation: %d.	Notification to start the neighborhood calculation	If this message occurs
<del>NET_SVC4APNEIGHCD</del>	5-Notice	ewlc-ap	RRM based AP neighborhood algorithm cannot be started within 1 hour of system boot on calendar profile timer expiry event.	Calendar profile start timer expiry event is ignored	If this message occurs
<del>NET_SVC4APNEIGHCD</del>	5-Notice	ewlc-ap	RF based AP neighborhood load-balancing is not applicable to this platform. Please unconfigure calendar profile from ap neighborhood global configuration.	Calendar profile timer event callback handling error	If this message occurs
NET_SVR4UNEXPECTED	4-Warning	Unexpected error: [chars]	An unexpected error occurred while performing a services timer operation	slb	LOG_SID_RECUR_ACTION
NET_SERV4WARNING	4-Warning	Unexpected condition: [chars]	An unexpected condition was detected while performing a services timer\n\ operation	slb	LOG_SID_RECUR_ACTION
<del>NET_SVC4ESMC</del>	3-Error	Failed to create ESMC event.	Failed to create an ESMC event to be queued.	sync-e	LOG_SID_NO_ACTION
<del>NET_SVC4ESMC</del>	3-Error	Failed to create ESMC event.	Failed to create an ESMC event to be queued.	sync-e	LOG_SID_NO_ACTION
<del>NET_SVC4ESMC</del>	3-Error	Failed to enqueue ESMC event.	Failed to add an ESMC event to the event queue.	sync-e	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>NETESMCENQUEUEFAIL</del>	3-Error	Failed to enqueue ESMC event.	Failed to add an ESMC event to the event queue.	sync-e	LOG_STD_NO_ACTION
<del>NETESMCENQUEUEFAIL</del>	3-Error	Failed to allocate memory for ESMC event queue.	Failed to allocate memory for the ESMC event queue.	sync-e	LOG_STD_NO_ACTION
<del>NETESMCENQUEUEFAIL</del>	3-Error	Failed to allocate memory for ESMC event queue.	Failed to allocate memory for the ESMC event queue.	sync-e	LOG_STD_NO_ACTION
<del>NETESMCENQUEUEFAIL</del>	3-Error	Failed to initialize ESMC event queue.	Failed to initialize the ESMC event queue.	sync-e	LOG_STD_NO_ACTION
<del>NETESMCENQUEUEFAIL</del>	3-Error	Failed to initialize ESMC event queue.	Failed to initialize the ESMC event queue.	sync-e	LOG_STD_NO_ACTION
NETCLK-4-FAIL	4-Warning	The Network Clock protocol has encountered the error: [chars].	The protocol has run into a failure condition. The reason should be given in the parenthesis.	sync-e	"show network-clock synchronization and " "show network-clock synchronization detail and " "show module"
NETCLK-4-FAIL	4-Warning	The Network Clock protocol has encountered the error: [chars].	The protocol has run into a failure condition. The reason should be given in the parenthesis.	sync-e	"show network-clock synchronization and " "show network-clock synchronization detail and " "show module"
<del>NETCLKNETCLK_CMD_FAIL</del>	4-Warning	NULL	This message indicates that a network clock command from RP to IOS-SR or SPAs has failed	asr1k-iosd-infra	"show logging and show network-clocks"
NETCLK-4-PD_REG	4-Warning	[chars] [dec]	The platform has failed to provide the protocol one of the mandatory functions.	sync-e	LOG_STD_ACTION

<del>Facility</del> Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NETCLK-4-PD_REG	4-Warning	[chars] [dec]	The platform has failed to provide the protocol one of the mandatory functions.	sync-e	LOG_STD_ACTION
<del>NETCLK</del> NETCLK_CHANGE	5-Notice	Network clock source transitioned from priority [dec] [chars] to priority [dec] [chars]\n	This notice indicates a change in the clock source.	asr1k-iosd-infra	"No action required."
<del>NETCLK</del> NETCLK_MODE_CHANGE	5-Notice	Network clock source not available. The network clock has changed to [chars]\n	-	asr1k-iosd-infra	"No action required"
<del>NETCLK</del> NETCLK_PHASE_LOST	5-Notice	Network clock source not available. Phase-lost on clock priority [dec] [chars]\n	-	asr1k-iosd-infra	"No action required"
NETCLK6ALL_SRC_REM	6-Information	All synchronization sources have been removed from [chars] selection process.	All synchronization sources are removed from synchronization source selection processes i.e. T0 or selection process per T4.	sync-e	LOG_SID_NO_ACTION
NETCLK6ALL_SRC_REM	6-Information	All synchronization sources have been removed from [chars] selection process.	All synchronization sources are removed from synchronization source selection processes i.e. T0 or selection process per T4.	sync-e	LOG_SID_NO_ACTION
<del>NETCLK</del> NETCLK_INTERNAL_SELECTED	6-Information	System Internal synchronization source is selected.	System Internal synchronization source Internal is selected as all other nominated synchronization source are not valid for Synchronization selection process.	sync-e	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NETCLK6INT_SYNC_SRC	6-Information	System Internal synchronization source is selected.	System Internal synchronization source Internal is selected as all other nominated synchronization source are not valid for Synchronization selection process.	sync-e	LOG_SID_NO_ACTION
NETCLK-6-INV_QL	6-Information	invalid QL [chars] received for [chars] on network option [chars].	The platform has notify RP the clock quality of an input source. But the value appears to be invalid based on the current configured network option.	sync-e	LOG_SID_NO_ACTION
NETCLK-6-INV_QL	6-Information	invalid QL [chars] received for [chars] on network option [chars].	The platform has notify RP the clock quality of an input source. But the value appears to be invalid based on the current configured network option.	sync-e	LOG_SID_NO_ACTION
NETCLK6QL_CHANGE	6-Information	Input QL for [chars] is [chars]	The input QL used for a network-clock input changed	sync-e	LOG_SID_NO_ACTION
NETCLK6QL_CHANGE	6-Information	Input QL for [chars] is [chars]	The input QL used for a network-clock input changed	sync-e	LOG_SID_NO_ACTION
NETCLK6SEL_CLOCK_SRC	6-Information	Synchronization source [chars][chars] is selected by selection process T0	Synchronization source selection process has selected source q receive clock to synchronize the system and generate T0transmit SEC clock. T0 clock is used as TX clock on all	sync-e	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NETCLK-6-SL_CLOCK_SRC	6-Information	Synchronization source [chars][chars] is selected by selection process T0	Synchronization source selection process has selected source q receive clock to synchronize the system and generate T0transmit SEC clock. T0 clock is used as TX clock on all	sync-e	LOG_SID_NO_ACTION
NETCLK-6-T4_CLOCK_SRC	6-Information	Synchronization source [chars] is selected by selection process to synchronize the system and generate T4[chars] output[chars]	Synchronization source selection process for T4external interface	sync-e	LOG_SID_NO_ACTION
NETCLK-6-T4_CLOCK_SRC	6-Information	Synchronization source [chars] is selected by selection process to synchronize the system and generate T4[chars] output[chars]	Synchronization source selection process for T4external interface	sync-e	LOG_SID_NO_ACTION
NETCLK-6-SRC_ADD	6-Information	Synchronization source [chars] is added to [chars] selection process.	Synchronization source is added to synchronization source selection processes i.e. T0 or selection process per T4.	sync-e	LOG_SID_NO_ACTION
NETCLK-6-SRC_ADD	6-Information	Synchronization source [chars] is added to [chars] selection process.	Synchronization source is added to synchronization source selection processes i.e. T0 or selection process per T4.	sync-e	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NETCLK-6-SRC_REM	6-Information	Synchronization source [chars] is removed from [chars] selection process.	Synchronization source is removed from synchronization source selection processes i.e. T0 or selection process per T4.	sync-e	LOG_SID_NO_ACTION
NETCLK-6-SRC_REM	6-Information	Synchronization source [chars] is removed from [chars] selection process.	Synchronization source is removed from synchronization source selection processes i.e. T0 or selection process per T4.	sync-e	LOG_SID_NO_ACTION
NETCLK-6-SRC_UPD	6-Information	Synchronization source [chars] status [chars] is posted to all selection process.	Synchronization source status event is updated to synchronization	sync-e	LOG_SID_NO_ACTION
NETCLK-6-SRC_UPD	6-Information	Synchronization source [chars] status [chars] is posted to all selection process.	Synchronization source status event is updated to synchronization	sync-e	LOG_SID_NO_ACTION
NETCONF-3-MEMORY	3-Error	[chars]	Netconf subsystem has experienced a problem getting the required\n\ memory to complete this operation.	netconf	"Check system memory for other memory allocation errors and contact\n\ Technical support for problem resolution. In the absence of IOS errors\n\ upgrading the memory in the network device may be required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NETCONF-3-MEMORY	3-Error	[chars]	Netconf subsystem has experienced a problem getting the required memory to complete this operation.	netconf	"Check system memory for other memory allocation errors and contact Technical support for problem resolution. In the absence of IOS errors upgrading the memory in the network device may be required."
<del>NETFLOW-4-CONFLICT</del>	4-Warning	Netflow-Lite monitor configuration is not compatible with connector type on interface [chars] [chars]	A new interface connector type has been detected it is not compatible with the netflow-lite monitor configuration on the original interface. The conflicting netflow-lite monitor configuration will be removed no user action is required.	netflow-lite	LOG_SID_NO_ACTION
<del>NETCLK-4-SYNC_FAILURE</del>	4-Warning	Active network clock source [chars] priority [dec] failure	This warning message indicates that there has been a failure of active clock source	PI-netclk	"No action required"
<del>NETCLK-6-SYNC_SUCCESS</del>	6-Information	Active network clock source is [chars] priority [dec]	This indicates the presence of an active network clock along with its priority	PI-netclk	"This is an informational message only no action required."
<del>NETPHY-3-LOCKUP</del>	3-Error	Repeated phy lockup seen on [chars]. Interface will be shut down.	Phy lockup was detected too many times in a row. Interface is shutdown to avoid continuous link flapping.	firmware	"To re-enable interface issue 'shutdown' followed " "by 'no shutdown' command in interface " "configuration mode."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>NETWORK</del> NSHLS/ACORUP	6-Information	Transmit lock up is detected in [chars]. This port is administratively down.	When the PHY is powered on and off the MAC cycles from Gigabit to 100 and the port might lock up and stop sending packets. The PHY refers to the physical layer device on the switch which sends and receives optical signals and provides framing and line integrity.	hardware	"Shut down the port by using the shutdown interface configuration " "command and bring it back up by using the no shutdown interface " "configuration command"
<del>NETWORK</del> REAUTH/ENIYAL	3-Error	A checkpointing entity [chars] operation failed rc=[dec]	An internal operation that is associated with checkpointing failed. The return code that is specified in the message output identifies the type of failure. The failure most likely occurred because of a software error. The system state between the active and standby units might not be properly synchronized.	ha-idb-sync	"Issue 'show checkpoint entities' and " "'show checkpoint clients' to " "determine the problem"
<del>NETWORK</del> REAUTH/ENIYAL	3-Error	A checkpointing entity [chars] operation failed rc=[dec]	An internal operation that is associated with checkpointing failed. The return code that is specified in the message output identifies the type of failure. The failure most likely occurred because of a software error. The system state between the active and standby units might not be properly synchronized.	ha-idb-sync	"Issue 'show checkpoint entities' and " "'show checkpoint clients' to " "determine the problem"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>ORACLE</del> ORACLE	3-Error	Failed to register with [chars] rc=[dec]	A redundancy client could not be registered. An internal failure associated with client registration occurred in the run-time module specified in the message output. The return code that is specified in the message output identifies the type of failure that was detected. The failure most likely occurred because of a software error. The system state between the active and standby units might not be properly synchronized.	ha-idb-sync	LOGS_IDSHTTECH_ACTION
<del>ORACLE</del> ORACLE	3-Error	Failed to register with [chars] rc=[dec]	A redundancy client could not be registered. An internal failure associated with client registration occurred in the run-time module specified in the message output. The return code that is specified in the message output identifies the type of failure that was detected. The failure most likely occurred because of a software error. The system state between the active and standby units might not be properly synchronized.	ha-idb-sync	LOGS_IDSHTTECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>NRVOKR/ALICOD/ALIC</del>	3-Error	Cannot decode data descriptor for [chars] descriptor type=[chars]	An internal data descriptor could not be decoded for synchronization for the interface or controller in the run-time module specified in the message output. The failure most likely occurred because of a software error. The descriptor type specified in the message output identifies the type of descriptor the failure occurred with. The system state between the active and standby units might not be properly synchronized.	ha-idb-sync	"show redundancy idb-sync-history"
<del>NRVOKR/ALICOD/ALIC</del>	3-Error	Cannot decode data descriptor for [chars] descriptor type=[chars]	An internal data descriptor could not be decoded for synchronization for the interface or controller in the run-time module specified in the message output. The failure most likely occurred because of a software error. The descriptor type specified in the message output identifies the type of descriptor the failure occurred with. The system state between the active and standby units might not be properly synchronized.	ha-idb-sync	"show redundancy idb-sync-history"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HA-3-ERR</del>	3-Error	Failed to send [chars] message to active for [chars] [chars]	The specified synchronization message which is an internal IPC message could not be sent to the active unit in the specified run-time module. The failure most likely occurred because of a software error. Additional details on the nature of the error are specified in the message text on the console or in the system log. The system state between the active and standby units might not be properly synchronized.	ha-idb-sync	LOGSIDSHTTECHACTION
<del>HA-3-ERR</del>	3-Error	Failed to send [chars] message to active for [chars] [chars]	The specified synchronization message which is an internal IPC message could not be sent to the active unit in the specified run-time module. The failure most likely occurred because of a software error. Additional details on the nature of the error are specified in the message text on the console or in the system log. The system state between the active and standby units might not be properly synchronized.	ha-idb-sync	LOGSIDSHTTECHACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HA-ERR-3-100</del>	3-Error	Failed to send [chars] message to standby for [chars] rc=[dec]	The specified synchronization message which is an internal IPC message could not be sent to the standby unit in the specified run-time module. The failure most likely occurred because of a software error. The numeric error code in the message output identifies the type of failure. The system state between the active and standby units might not be properly synchronized.	ha-idb-sync	LOGSIDSHTTECHACI0N
<del>HA-ERR-3-100</del>	3-Error	Failed to send [chars] message to standby for [chars] rc=[dec]	The specified synchronization message which is an internal IPC message could not be sent to the standby unit in the specified run-time module. The failure most likely occurred because of a software error. The numeric error code in the message output identifies the type of failure. The system state between the active and standby units might not be properly synchronized.	ha-idb-sync	LOGSIDSHTTECHACI0N

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HA-DB-ERR-3-RC</del>	3-Error	Invalid checkpointing status code received rc=[dec]	An invalid checkpoint status code has been detected. An internal status code that is associated with checkpointing was found to be invalid. The return code that is specified in the message output identifies the invalid code that was detected. The failure most likely occurred because of a software error. The system state between the active and standby units might not be properly synchronized.	ha-idb-sync	LOGSIDSHTTECHACION
<del>HA-DB-ERR-3-RC</del>	3-Error	Invalid checkpointing status code received rc=[dec]	An invalid checkpoint status code has been detected. An internal status code that is associated with checkpointing was found to be invalid. The return code that is specified in the message output identifies the invalid code that was detected. The failure most likely occurred because of a software error. The system state between the active and standby units might not be properly synchronized.	ha-idb-sync	LOGSIDSHTTECHACION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>NETWORK</del> INVALID_CHARS	3-Error	Invalid [chars] message received	A message that is used for state synchronization was not received correctly. An internal data structure for a message could not be retrieved. The failure most likely occurred because of a software error. The system state between the active and standby units might not be properly synchronized.	ha-idb-sync	LOGS_IDSHTCHACI0N
<del>NETWORK</del> INVALID_CHARS	3-Error	Invalid [chars] message received	A message that is used for state synchronization was not received correctly. An internal data structure for a message could not be retrieved. The failure most likely occurred because of a software error. The system state between the active and standby units might not be properly synchronized.	ha-idb-sync	LOGS_IDSHTCHACI0N

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ISSU</del> NHOKEALMNTMD	3-Error	The ISSU message MTU is invalid: [chars]	A message buffer size that is used for state synchronization was found to be invalid. An internal data structure for a message could not be retrieved. The failure most likely occurred because of a software error. Additional details on the nature of the error are specified in the message text on the console or in the system log. The system state between the active and standby units might not be properly synchronized.	ha-idb-sync	LOGSIDSHTTECHACI0N
<del>ISSU</del> NHOKEALMNTMD	3-Error	The ISSU message MTU is invalid: [chars]	A message buffer size that is used for state synchronization was found to be invalid. An internal data structure for a message could not be retrieved. The failure most likely occurred because of a software error. Additional details on the nature of the error are specified in the message text on the console or in the system log. The system state between the active and standby units might not be properly synchronized.	ha-idb-sync	LOGSIDSHTTECHACI0N



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ORACLE</del> ORACLE	3-Error	The active and standby ISSU message types are incompatible	A message that is used for state synchronization is deemed to be incompatible. An internal data structure for a message could not be retrieved. The failure most likely occurred because of a software error. The system state between the active and standby units might not be properly synchronized.	ha-idb-sync	LOGS_IDSHTCH ACTION
<del>ORACLE</del> ORACLE	3-Error	The active and standby ISSU message types are incompatible	A message that is used for state synchronization is deemed to be incompatible. An internal data structure for a message could not be retrieved. The failure most likely occurred because of a software error. The system state between the active and standby units might not be properly synchronized.	ha-idb-sync	LOGS_IDSHTCH ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>NETWORK</del> <del>ERROR</del> <del>CRSNO</del>	3-Error	Failed to register ISSU session information: [chars]	The system failed to register the ISSU session information required to complete version exchange between the active and standby units. The failure most likely occurred because of a software error. Additional details on the nature of the error are specified in the message text on the console or in the system log. The system state between the active and standby units might not be properly synchronized.	ha-idb-sync	<del>LOG</del> <del>SID</del> <del>SH</del> <del>TECH</del> <del>ACTION</del>
<del>NETWORK</del> <del>ERROR</del> <del>CRSNO</del>	3-Error	Failed to register ISSU session information: [chars]	The system failed to register the ISSU session information required to complete version exchange between the active and standby units. The failure most likely occurred because of a software error. Additional details on the nature of the error are specified in the message text on the console or in the system log. The system state between the active and standby units might not be properly synchronized.	ha-idb-sync	<del>LOG</del> <del>SID</del> <del>SH</del> <del>TECH</del> <del>ACTION</del>

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>NETWORK</del> <u>ISS</u>	3-Error	Failed to start ISSU session: [chars]	The system failed to start the ISSU negotiation session required to complete version exchange between the active and standby units. The failure most likely occurred because of a software error. Additional details on the nature of the error are specified in the message text on the console or in the system log. The system state between the active and standby units might not be properly synchronized.	ha-idb-sync	<u>LOG</u> <u>SID</u> <u>SH</u> <u>TECH</u> <u>ACTION</u>
<del>NETWORK</del> <u>ISS</u>	3-Error	Failed to start ISSU session: [chars]	The system failed to start the ISSU negotiation session required to complete version exchange between the active and standby units. The failure most likely occurred because of a software error. Additional details on the nature of the error are specified in the message text on the console or in the system log. The system state between the active and standby units might not be properly synchronized.	ha-idb-sync	<u>LOG</u> <u>SID</u> <u>SH</u> <u>TECH</u> <u>ACTION</u>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NWOKEAURSNOML	3-Error	The ISSU message [chars] transformation failed: [chars]	A message that is used for state synchronization could not be transformed correctly. An internal data structure for a message could not be retrieved. The failure most likely occurred because of a software error. Additional details on the nature of the error are specified in the message text on the console or in the system log. The system state between the active and standby units might not be properly synchronized.	ha-idb-sync	LOGSIDSHTTECHACION
NWOKEAURSNOML	3-Error	The ISSU message [chars] transformation failed: [chars]	A message that is used for state synchronization could not be transformed correctly. An internal data structure for a message could not be retrieved. The failure most likely occurred because of a software error. Additional details on the nature of the error are specified in the message text on the console or in the system log. The system state between the active and standby units might not be properly synchronized.	ha-idb-sync	LOGSIDSHTTECHACION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>NETWORK</del> <u>ORA</u> <del>UNREG</del> <u>ISSNO</u>	3-Error	Failed to register ISSU session information: [chars]	The system failed to unregister the ISSU session information required to complete version exchange between the active and standby units. The failure most likely occurred because of a software error. Additional details on the nature of the error are specified in the message text on the console or in the system log. The system state between the active and standby units might not be properly synchronized.	ha-idb-sync	<u>LOG</u> <u>SID</u> <u>S</u> <u>H</u> <u>T</u> <u>E</u> <u>C</u> <u>H</u> <u>A</u> <u>C</u> <u>I</u> <u>O</u> <u>N</u>
<del>NETWORK</del> <u>ORA</u> <del>UNREG</del> <u>ISSNO</u>	3-Error	Failed to register ISSU session information: [chars]	The system failed to unregister the ISSU session information required to complete version exchange between the active and standby units. The failure most likely occurred because of a software error. Additional details on the nature of the error are specified in the message text on the console or in the system log. The system state between the active and standby units might not be properly synchronized.	ha-idb-sync	<u>LOG</u> <u>SID</u> <u>S</u> <u>H</u> <u>T</u> <u>E</u> <u>C</u> <u>H</u> <u>A</u> <u>C</u> <u>I</u> <u>O</u> <u>N</u>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NIVOKRE/NOCHKP/ERR	3-Error	No checkpointing buffer for [chars] rc=[dec]	A message data buffer that is used for state synchronization could not be obtained. An internal data structure could not be allocated for synchronization in the run-time module specified in the message output. The return code that is specified in the message output identifies the type of failure. The failure most likely occurred because of a software error or a lack of system memory. The system state between the active and standby units might not be properly synchronized.	ha-idb-sync	"If you determine that this condition was caused by " "a lack of system memory reduce system activity to " "ease memory demands or if conditions warrant upgrade " "to a larger memory configuration. Otherwise " LOG_SIDSHTCHACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>NETWORK/NOCHKPBUF</del>	3-Error	No checkpointing buffer for [chars] rc=[dec]	A message data buffer that is used for state synchronization could not be obtained. An internal data structure could not be allocated for synchronization in the run-time module specified in the message output. The return code that is specified in the message output identifies the type of failure. The failure most likely occurred because of a software error or a lack of system memory. The system state between the active and standby units might not be properly synchronized.	ha-idb-sync	"If you determine that this condition was caused by " "a lack of system memory reduce system activity to " "ease memory demands or if conditions warrant upgrade " "to a larger memory configuration. Otherwise " LOGSIDSHTTECHACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>NETWORK-INFO-CHUR</del>	3-Error	No message buffer for [chars]	A message data buffer that is used for state synchronization could not be obtained. An internal data structure could not be allocated for synchronization in the run-time module specified in the message output. The failure most likely occurred because of a software error or a lack of system memory. The system state between the active and standby units might not be properly synchronized.	ha-idb-sync	"If you determine that this condition was caused by " "a lack of system memory reduce system activity to " "ease memory demands or if conditions warrant upgrade " "to a larger memory configuration. Otherwise " <u>LOGSIDSHTTECHACTION</u>
<del>NETWORK-INFO-CHUR</del>	3-Error	No message buffer for [chars]	A message data buffer that is used for state synchronization could not be obtained. An internal data structure could not be allocated for synchronization in the run-time module specified in the message output. The failure most likely occurred because of a software error or a lack of system memory. The system state between the active and standby units might not be properly synchronized.	ha-idb-sync	"If you determine that this condition was caused by " "a lack of system memory reduce system activity to " "ease memory demands or if conditions warrant upgrade " "to a larger memory configuration. Otherwise " <u>LOGSIDSHTTECHACTION</u>



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NETWORK_RESOURCES	3-Error	[chars]	A run-time module could not obtain the resources that are required to complete a task. The failure most likely occurred because of a software error or a lack of system memory. Additional details on the nature of the error are specified in the message text on the console or in the system log. The system state between the active and standby units might not be properly synchronized.	ha-idb-sync	"If you determine that this condition was caused by " "a lack of system memory reduce system activity to " "ease memory demands or if conditions warrant upgrade " "to a larger memory configuration. Otherwise " LOGS_IDSHTTECH ACTION
NETWORK_RESOURCES	3-Error	[chars]	A run-time module could not obtain the resources that are required to complete a task. The failure most likely occurred because of a software error or a lack of system memory. Additional details on the nature of the error are specified in the message text on the console or in the system log. The system state between the active and standby units might not be properly synchronized.	ha-idb-sync	"If you determine that this condition was caused by " "a lack of system memory reduce system activity to " "ease memory demands or if conditions warrant upgrade " "to a larger memory configuration. Otherwise " LOGS_IDSHTTECH ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HWDRK_IDB_TRANS_PENDING</del>	6-Information	Switchover terminated with [dec] transitions pending after there was no transition activity for [dec] seconds	The system terminated the switchover idb transitioning phase with a number of idb transitions still pending because no switchover related IDB transitions were logged during the specified time interval. Some connected routes may experience a temporary loss of traffic.	ha-idb-sync	LOG_SID_NO_ACTION
<del>HWDRK_IDB_TRANS_PENDING</del>	6-Information	Switchover terminated with [dec] transitions pending after there was no transition activity for [dec] seconds	The system terminated the switchover idb transitioning phase with a number of idb transitions still pending because no switchover related IDB transitions were logged during the specified time interval. Some connected routes may experience a temporary loss of traffic.	ha-idb-sync	LOG_SID_NO_ACTION
NG3K_OIR_ISSU3BUHHR	3-Error	NG3K OIR ISSU client failed to get buffer for message error [dec]	NG3K OIR ISSU client failed to get buffer for building\n\n a negotiation message. Hence it can send the negotiation\n\n message to the standby unit. When there is a problem in\n\n the negotiaiton the standby unit can not be brought up.	platform-ha	"show logging and show checkpoint client"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NG3K_OIR_ISSU_CAPNADSE	3-Error	NG3K OIR ISSU client capability list is empty.	The BG3K OIR ISSU client capability exchange list size\n\n is invalid.	platform-ha	"show issu capability entries <Client_ID>"
NG3K_OIR_ISSU_CAPNOCMABE	3-Error	NG3K OIR ISSU client capability exchange result incompatible.	The NG3K OIR ISSU client capability exchange has negotiated\n\n as incompatible with the peer.	platform-ha	"show issu negotiated capability <Session_ID>"
NG3K_OIR_ISSU_CAPABILITY	3-Error	NG3K OIR ISSU client [chars]	NG3K OIR ISSU client observed an error during capability\n\n negotiation. When this error happens there is a mismatch\n\n between the client capability between the active and\n\n standby unit.	platform-ha	"show issu capability entries <client_id> and\n\n show issu session <client_id> and\n\n show issu negotiated capability <session_id>"
NG3K_OIR_ISSU3-INIT	3-Error	NG3K OIR ISSU client initialization failed at [chars] error [chars]	NG3K OIR ISSU client could not be initialized this will\n\n cause catastrophic failure when ISSU upgrade or downgrade\n\n is performed.	platform-ha	LOGSIDSHTECHACIION
NG3K_OIR_ISSU_MSGNOTCK	3-Error	NG3K OIR ISSU client message [dec] is not compatible	NG3K OIR ISSU client received an incompatible message\n\n from the peer unit. Since the message is not compatible\n\n it can be processed by this unit	platform-ha	"show issu message group <client_id> and\n\n show issu session <client_id> and\n\n show issu negotiated version <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NG3K_OIR_ISSU3MSG_SIZE	3-Error	NG3K OIR ISSU client failed to get the message size for message [dec]	NG3K OIR ISSU client failed to calculate message size for the message specified. The NG3K OIR ISSU client will not be able to send message to the standby unit.	platform-ha	"show issu message group <client_id> and show issu session <client_id> and show issu negotiated version <session_id>"
NG3K_OIR_ISSU3POLICY	3-Error	NG3K OIR ISSU client message type [dec] is [chars]	NG3K OIR ISSU client received a message type which it does not support. The policy is applied to make the session compatible.	platform-ha	"show issu session <client_id>"
NG3K_OIR_ISSU3SEND_FAILED	3-Error	NG3K OIR ISSU client failed to send a negotiation message error [dec]	NG3K OIR ISSU client could not send a session negotiation message to the peer. When there is a problem in the negotiation the standby unit can not be brought up.	platform-ha	"show logging and show checkpoint client"
NG3K_OIR_ISSU3SESSION	3-Error	NG3K OIR ISSU client [chars]	NG3K OIR ISSU client observed an error during a session negotiation with the peer unit. When there is a problem with the session the standby unit can not be brought up.	platform-ha	"show issu capability entries <client_id> and show issu session <client_id> and show issu negotiated capability <session_id>"
NG3K_OIR_ISSU3UNREGISTRY	3-Error	NG3K OIR ISSU client failed to unregister session information. Error: [dec] [chars]	The NG3K OIR ISSU client failed to unregister session information.	platform-ha	"show issu session <client_id> and " "show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NG3K_OIR_ISSU_TRANSFORM	3-Error	NG3K OIR ISSU client [chars] transform failed error [chars]	NG3K OIR ISSU client could not transform the message.\n\n If the transmit transformation failed it means that the\n\n checkpoint message can not be sent to the standby unit.\n\n If the receive transformation failed it means that the\n\n checkpoint message can not be applied on the standby\n\n unit. In both cases the NG3K OIR state will not\n\n be identical with the active unit.	platform-ha	"show issu session <client_id> and\n\n show issu negotiated version <session_id>"
NG3K_OIR_BULK_SYNC	3-Error	[chars]	Bulk sync failure the reason for the failure will be provided in the string	platform-ha	"Copy the error message exactly as it appears. Copy down the system's\n\n configuration along with any other relevant information. Contact your\n\n technical support representative for assistance."
NG3K_OIR_OPEN_FAILURE	3-Error	File [chars] open failed	File Open failed	platform-ha	LOGS_IDS_H_TCH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NGK_OR3ADMGR_CMD	3-Error	Invalid [chars] message received	A message that is used for state synchronization was not received correctly. An internal data structure for a message could not be retrieved. The failure most likely occurred because of a software error. The system state between the active and standby units might not be properly synchronized.	platform-ha	LOG_SID_SH_TECH_ACTION
NGK_OR3MAC_FAILURE	3-Error	Mac Failure	NULL MAC	platform-ha	LOG_SID_SH_TECH_ACTION
NGK_OR3MALLOC_FAILURE	3-Error	[chars]	Failed to allocated memory for a structure or event	platform-ha	LOG_SID_SH_TECH_ACTION
NGK_OR3OIR_FAILURE	3-Error	Message:[chars]Error:[dec]	OIR failures due to various reasons	platform-ha	LOG_SID_SH_TECH_ACTION
NGK_OR3REG_FAILURE	3-Error	Message:[chars]Error:[dec]	Registration Failure	platform-ha	LOG_SID_SH_TECH_ACTION
NGMDCBH5DISABLED	5-Notice	[chars] Onboard Failure Logging disabled on slot [dec]	Onboard Failure Logging has been disabled	obfl	LOG_SID_NO_ACTION
NGWC_HC_ISSUBUFR	3-Error	NGWC FEC ISSU client failed to get buffer for message error [dec]	NGWC FEC ISSU client failed to get buffer for building\n a negotiation message. Hence it can send the negotiation\n message to the standby unit. When there is a problem in\n the negotiaiton the standby unit can not be brought up.	platform-ha	"show logging and show checkpoint client"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NGWC_FEC_ISSU_CAPNADSE	3-Error	NGWC FEC ISSU client capability list is empty.	The NGWC FEC ISSU client capability exchange list size\n\n is invalid.	platform-ha	"show issu capability entries <Client_ID>"
NGWC_FEC_ISSU_INCOMPBE	3-Error	NGWC FEC ISSU client capability exchange result incompatible.	The NGWC FEC ISSU client capability exchange has negotiated\n\n as incompatible with the peer.	platform-ha	"show issu negotiated capability <Session_ID>"
NGWC_FEC_ISSU_CAPABILITY	3-Error	NGWC FEC ISSU client [chars]	NGWC FEC ISSU client observed an error during capability\n\n negotiation. When this error happens there is a mismatch\n\n between the client capability between the active and\n\n standby unit.	platform-ha	"show issu capability entries <client_id> and\n\n show issu session <client_id> and\n\n show issu negotiated capability <session_id>"
NGWC_FEC_ISSU3-INIT	3-Error	NGWC FEC ISSU client initialization failed at [chars] error [chars]	NGWC FEC ISSU client could not be initialized this will\n\n cause catastrophic failure when ISSU upgrade or downgrade\n\n is performed.	platform-ha	LOGSIDSHTECHACIION
NGWC_FEC_ISSU_MGNOTCK	3-Error	NGWC FEC ISSU client message [dec] is not compatible	NGWC FEC ISSU client received an incompatible message\n\n from the peer unit. Since the message is not compatible\n\n it can be processed by this unit	platform-ha	"show issu message group <client_id> and\n\n show issu session <client_id> and\n\n show issu negotiated version <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NGWC_FEC_ISSU3MSG_SIZE	3-Error	NGWC FEC ISSU client failed to get the message size for message [dec]	NGWC FEC ISSU client failed to calculate message size for the message specified. The NGWC FEC ISSU client will not be able to send message to the standby unit.	platform-ha	"show issu message group <client_id> and\n show issu session <client_id> and\n show issu negotiated version <session_id>"
NGWC_FEC_ISSU3POLICY	3-Error	NGWC FEC ISSU client message type [dec] is [chars]	NGWC FEC ISSU client received an message type which it does not support. The policy is applied to make the session compatible.	platform-ha	"show issu session <client_id>"
NGWC_FEC_ISSU3SEND_FAILD	3-Error	NGWC FEC ISSU client failed to send a negotiation message error [dec]	NGWC FEC ISSU client could not send a session negotiation message to the peer. When there is a problem in the negotiation the standby unit can not be brought up.	platform-ha	"show logging and show checkpoint client"
NGWC_FEC_ISSU3SESSION	3-Error	NGWC FEC ISSU client [chars]	NGWC FEC ISSU client observed an error during a session negotiation with the peer unit. When there is a problem with the session the standby unit can not be brought up.	platform-ha	"show issu capability entries <client_id> and\n show issu session <client_id> and\n show issu negotiated capability <session_id>"
NGWC_FEC_ISSU3UNREG_IV	3-Error	NGWC FEC ISSU client failed to unregister session information. Error: [dec] [chars]	The NGWC FEC ISSU client failed to unregister session information.	platform-ha	"show issu session <client_id> and " "show issu negotiated capability <session_id>"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NGWC_FEC_ISS_TRANSFORM	3-Error	NGWC FEC ISSU client [chars] transform failed error [chars]	NGWC FEC ISSU client could not transform the message.\n\n If the transmit transformation failed it means that the\n\n checkpoint message can not be sent to the standby unit.\n\n If the receive transformation failed it means that the\n\n checkpoint message can not be applied on the standby\n\n unit. In both cases the NGWC FEC state will not\n\n be identical with the active unit.	platform-ha	"show issu session <client_id> and\n\n show issu negotiated version <session_id>"
NGWC_FEC3BULK_SYNC	3-Error	[chars]	Bulk sync failure the reason for the failure will be provided in the string	platform-ha	"Copy the error message exactly as it appears. Copy down the system's\n\n configuration along with any other relevant information. Contact your\n\n technical support representative for assistance."
NGWC_FEC_OPEN_FAILURE	3-Error	File [chars] open failed	File Open failed	platform-ha	LOGS_IDS_H_TCH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>NGWC_HG3MADM_CRCMD</del>	3-Error	Invalid [chars] message received	A message that is used for state synchronization was not received correctly. An internal data structure for a message could not be retrieved. The failure most likely occurred because of a software error. The system state between the active and standby units might not be properly synchronized.	platform-ha	LOG_SIDSH_TECH_ACTION
NGWC_HG3MAC_FAILURE	3-Error	Mac Failure	NULL MAC	platform-ha	LOG_SIDSH_TECH_ACTION
NGWC_HG3MALLOC_FAILURE	3-Error	[chars]	Failed to allocated memory for a structure or event	platform-ha	LOG_SIDSH_TECH_ACTION
NGWC_HG3OR_FAILURE	3-Error	Message:[chars]Error:[dec]	NGWC FEC failures due to various reasons	platform-ha	LOG_SIDSH_TECH_ACTION
NGWC_HG3REG_FAILURE	3-Error	Message:[chars]Error:[dec]	Registration Failure	platform-ha	LOG_SIDSH_TECH_ACTION
<del>NGWC_HG3SVTI_NUM_LIMIT</del>	3-Error	Maximum number of SVTI reached. IPSec configuration [chars]. Number of IPv4 SVTI [dec] Number of IPv6 SVTI [dec]	Maximum number of SVTI supported for IPv4 is 480 and IPv6 is 240	accsw-p-ipsec	"show crypto eli all"
<del>NGWC_HG3SVTI_UNSUPPORTED</del>	3-Error	This configuration is not supported on [chars]	This operation is not supported on the system	accsw-p-security	"show platform"
<del>NGWC_HG3SVTI_UNSUPPORTED_MIXED_STACKING</del>	3-Error	IPSEC datapath is not supported as mixed stacking was detected. Reload is required when stacking is changed to unmixed	This operation is not supported on mixed stacking	accsw-p-security	"show platform"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NGWC_IP_ISSU_P_SECURITY	4-Warning	Mixed stacking is detected. [chars] for IPSEC	IPSEC feature is not supported on mixed stacking system	accsw-p-security	"show platform"
NGWC_IP_ISSU_BUFFER	3-Error	Platform Inline Power ISSU client failed to get buffer for message error [dec]	Platform Inline Power ISSU client failed to get buffer for building a negotiation message. Hence it can send the negotiation message to the standby unit. When there is a problem in the negotiation the standby unit can not be brought up.	platform-ha	"show logging and show checkpoint client"
NGWC_IP_ISSU_CAPABILITY	3-Error	Platform Inline Power ISSU client capability list is empty.	The Platform Inline Power ISSU client capability exchange list size is invalid.	platform-ha	"show issu capability entries <Client_ID>"
NGWC_IP_ISSU_CAPABILITY	3-Error	Platform Inline Power ISSU client capability exchange result incompatible.	The Platform Inline Power ISSU client capability exchange has negotiated as incompatible with the peer.	platform-ha	"show issu negotiated capability <Session_ID>"
NGWC_IP_ISSU_CAPABILITY	3-Error	Platform Inline Power ISSU client [chars]	Platform Inline Power ISSU client observed an error during capability negotiation. When this error happens there is a mismatch between the client capability between the active and standby unit.	platform-ha	"show issu capability entries <client_id> and show issu session <client_id> and show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NGWC_ILP_ISSU-3-INT	3-Error	Platform Inline Power ISSU client initialization failed at [chars] error [chars]	Platform Inline Power ISSU client could not be initialized this will cause catastrophic failure when ISSU upgrade or downgrade is performed.	platform-ha	LOGS_IDSHTECH_ACTION
NGWC_IPSUBMSGNOTCK	3-Error	Platform Inline Power ISSU client message [dec] is not compatible	Platform Inline Power ISSU client received an incompatible message from the peer unit. Since the message is not compatible it can be processed by this unit	platform-ha	"show issu message group <client_id> and show issu session <client_id> and show issu negotiated version <session_id>"
NGWC_IPSUBMSG_SIZE	3-Error	Platform Inline Power ISSU client failed to get the message size for message [dec]	Platform Inline Power ISSU client failed to calculate message size for the message specified. The Platform Inline Power ISSU client will not be able to send message to the standby unit.	platform-ha	"show issu message group <client_id> and show issu session <client_id> and show issu negotiated version <session_id>"
NGWC_ILP_ISSU-3-POLICY	3-Error	Platform Inline Power ISSU client message type [dec] is [chars]	Platform Inline Power ISSU client received a message type which it does not support. The policy is applied to make the session compatible.	platform-ha	"show issu session <client_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NGWC_IP_ISSU_SEND_FAILED	3-Error	Platform Inline Power ISSU client failed to send a negotiation message error [dec]	Platform Inline Power ISSU client could not send a session negotiation\n\n message to the peer. When there is a problem in the\n\n negotiation the standby unit can not be brought up.	platform-ha	"show logging and show checkpoint client"
NGWC_IP_ISSU_SESSION	3-Error	Platform Inline Power ISSU client [chars]	Platform Inline Power ISSU client observed an error during a session\n\n negotiation with the peer unit. When there is a problem\n\n with the session the standby unit can not be brought up.	platform-ha	"show issu capability entries <client_id> and\n\n show issu session <client_id> and\n\n show issu negotiated capability <session_id>"
NGWC_IP_ISSU_UNREGISTER	3-Error	Platform Inline Power ISSU client failed to unregister session information. Error: [dec] [chars]	The Platform Inline Power ISSU client failed to unregister session information.	platform-ha	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
NGWC_IP_ISSU_TRANSFORM	3-Error	Platform Inline Power ISSU client [chars] transform failed error [chars]	Platform Inline Power ISSU client could not transform the message.\n\n If the transmit transformation failed it means that the\n\n checkpoint message can not be sent to the standby unit.\n\n If the receive transformation failed it means that the\n\n checkpoint message can not be applied on the standby\n\n unit. In both cases the Platform Inline Power state will not\n\n be identical with the active unit.	platform-ha	"show issu session <client_id> and\n\n show issu negotiated version <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>NGWC_MACSEC_NAD_HSEC</del>	3-Error	HSEC license not present: MACsec cleartag configuration is rejected	HSEC license needs to be present on the system	bigbang-macsec	"show platform"
<del>NGWC_MACSEC_NAUTH_HSEC</del>	3-Error	[chars]	SWO with MACsec cleartag but HSEC unauth	bigbang-macsec	"show platform"
<del>NGWC_OBFL_DISABLED</del>	5-Notice	[chars] Onboard Failure Logging disabled on switch [dec]	Onboard Failure Logging has been disabled	obfl	LOG_SID_NO_ACTION
<del>NGVSWT_HOVRM_CPU_WARN</del>	3-Error	Alarm: Critical CPU utilization over [dec][node]system may fail.	Switch may fail due to extremely high CPU utilization.	polaris-platform	"Try to lower the CPU load"
<del>NGVSWT_HOVRM_MEM_WARN</del>	3-Error	Alarm: Critical memory utilization over [dec][node]system may fail.	Switch may fail due to extremely high memory utilization.	polaris-platform	"Try to lower the memory load"
<del>NGVSWT_HOVRM_PERF_WARN</del>	3-Error	High CPU utilization over [dec][node]system performance may be degraded.	Switch performance may be degraded due to high CPU utilization.	polaris-platform	"Try to lower the CPU load"
<del>NGVSWT_HOVRM_MEM_WARN</del>	3-Error	Warning: Memory utilization over [dec][node] system performance may be degraded.	Switch performance may be degraded due to high memory utilization.	polaris-platform	"Try to lower the memory load"
<del>NGVSWT_HOVRM_CPU_WARN</del>	3-Error	Normal CPU utilization under [dec][node]system is normal.	CPU utilization is in normal range.	polaris-platform	LOG_SID_NO_ACTION
<del>NGVSWT_HOVRM_MEM_WARN</del>	3-Error	Normal memory utilization under [dec][node]system is normal.	Memory utilization is in normal range.	polaris-platform	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>NWCU_SBCN016N0DND</del>	3-Error	Switch [dec]: Firmware download failed	USB Console firmware download failed. There will be no USB console connectivity.	firmware	"Please re-execute the command to download the firmware." LOG_SID_RECUR_ACTION
<del>NWCU_SBCN016N0DND</del>	5-Notice	Switch [dec]: Firmware download already in progress	Only one download may be running at a time	-	"Wait for the original download to complete " "and print a status message"
<del>NWCU_SBCN016N0DND</del>	6-Information	Switch [dec]: Console media-type forced to RJ45	Console media type is forced to RJ45 by system configuration.	-	"No action is necessary"
<del>NWCU_SBCN016N0DND</del>	6-Information	Switch [dec]: Console media-type changed to default	Media type change requested was invalid	-	LOG_SID_NO_ACTION
<del>NWCU_SBCN016N0DND</del>	6-Information	Switch [dec]: Console media-type USB inactivity timeout disabled	Console media type is forced to RJ45 by system configuration.	-	"No action is necessary"
<del>NWCU_SBCN016N0DND</del>	6-Information	Switch [dec]: Console media-type USB configured for inactivity timeout of [dec] minutes	Console media type is forced to RJ45 by system configuration.	-	"No action is necessary"
<del>NWCU_SBCN016N0DND</del>	6-Information	Switch [dec]: Console media-type USB disabled due to inactivity media-type reverted to RJ45.	Console media type is forced to RJ45 by system configuration.	-	"No action is necessary"
<del>NWCU_SBCN016N0DND</del>	6-Information	Switch [dec]: Console media-type is RJ45.	The USB console is not active.	-	"No action is necessary"
<del>NWCU_SBCN016N0DND</del>	6-Information	Switch [dec]: Console media-type is USB.	The USB console is currently active.	-	"No action is necessary"
<del>NWCU_SBCN016N0DND</del>	6-Information	Switch [dec]: Firmware download successful	This is for information purposes only. The download is successful and no action needs to be taken.	firmware	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NWCUSB_CONSOLE_INSERT	6-Information	Switch [dec]: USB cable inserted. Console media-type USB is in effect	USB console cable inserted	-	LOG_SID_NO_ACTION
NWCUSB_CONSOLE_REMOVE	6-Information	Switch [dec]: USB cable removed. Console media-type RJ45 is in effect	USB console cable inserted	-	LOG_SID_NO_ACTION
NHRP3CACHE_FAILURE	3-Error	Failed to cache [chars] packet - [chars][dec]	Caching of information from NHRP packet failed.	nhrp	LOG_STD_ACTION
NHRP3CACHE_FAILURE	3-Error	Failed to cache [chars] packet - [chars][dec]	Caching of information from NHRP packet failed.	nhrp	LOG_STD_ACTION
NHRP-3-PAKERROR	3-Error	Received [chars] from [chars] code: [chars][dec] trigger src: [chars]	Received an error notification packet indicating that the last packet the system sent was bad or not understood by the recipient.	nhrp	LOG_STD_ACTION
NHRP-3-PAKERROR	3-Error	Received [chars] from [chars] code: [chars][dec] trigger src: [chars]	Received an error notification packet indicating that the last packet the system sent was bad or not understood by the recipient.	nhrp	LOG_STD_ACTION
NHRP-3-PAKREPLY	3-Error	Receive [chars] packet with error - [chars][dec]	An NHS rejects or fails to serve our request packet.	nhrp	LOG_STD_ACTION
NHRP-3-PAKREPLY	3-Error	Receive [chars] packet with error - [chars][dec]	An NHS rejects or fails to serve our request packet.	nhrp	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>NHRP-QOSPOLICY_APPLIED</del>	3-Error	Failed to apply QoS policy [chars] mapped to NHRP group [chars] on interface [chars] to tunnel [chars] due to [chars]	The application of QoS policy to tunnel failed. The failure could be due to internal error or policy installation failure. Policy installation can fail if the policy configuration is not supported for a tunnel.	nhrp	LOG_STD_ACTION
<del>NHRP-QOSPOLICY_APPLIED</del>	3-Error	Failed to apply QoS policy [chars] mapped to NHRP group [chars] on interface [chars] to tunnel [chars] due to [chars]	The application of QoS policy to tunnel failed. The failure could be due to internal error or policy installation failure. Policy installation can fail if the policy configuration is not supported for a tunnel.	nhrp	LOG_STD_ACTION
NHRP-3-TIMERLOOP	3-Error	Timer process looping [dec][dec][dec][dec][dec][dec]	-	-	-
NHRP-3-TIMERLOOP	3-Error	Timer process looping [dec][dec][dec][dec][dec][dec]	-	-	-
<del>NHRP-RACE_CONDITION</del>	3-Error	[chars]	nhrp trace event type is invalid	nhrp	LOG_STD_ACTION
<del>NHRP-RACE_CONDITION</del>	3-Error	[chars]	nhrp trace event type is invalid	nhrp	LOG_STD_ACTION
<del>NHRP-ROUTE_LOOKUP_FAILED</del>	4-Warning	Route lookup failed reached maximum recursive depth [dec]	The ECMP recursive look up reached the maximum depth	nhrp	LOG_STD_ACTION
<del>NHRP-ROUTE_LOOKUP_FAILED</del>	4-Warning	Route lookup failed reached maximum recursive depth [dec]	The ECMP recursive look up reached the maximum depth	nhrp	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>NHRP-4-IMPORT</del>	4-Warning	BGP AS specified in router nhrp import config is not running or not configured yet. Configuring router bgp with AS number [dec]	BGP AS number specified in import command of NHRP is not yet configured	nhrp	LOG_STD_ACTION
<del>NHRP-4-IMPORT</del>	4-Warning	BGP AS specified in router nhrp import config is not running or not configured yet. Configuring router bgp with AS number [dec]	BGP AS number specified in import command of NHRP is not yet configured	nhrp	LOG_STD_ACTION
NHRP-4-QUOTA	4-Warning	Max-send quota of [node]kts/[node]ec. exceeded on [chars].	Quota for sending NHRP packets on the interface exceeds the limit.	nhrp	LOG_STD_ACTION
NHRP-4-QUOTA	4-Warning	Max-send quota of [node]kts/[node]ec. exceeded on [chars].	Quota for sending NHRP packets on the interface exceeds the limit.	nhrp	LOG_STD_ACTION
<del>NHRP-UNREACHABLE</del>	5-Notice	Nexthop address [chars] for [chars]/[node] is not routable	The nexthop address for a shortcut is not routable	nhrp	"If this is not a transient routing change check the " " routing design/config to make sure that the nexthop" " corresponding to the shortcut has a covering route!"
<del>NHRP-UNREACHABLE</del>	5-Notice	Nexthop address [chars] for [chars]/[node] is not routable	The nexthop address for a shortcut is not routable	nhrp	"If this is not a transient routing change check the " " routing design/config to make sure that the nexthop" " corresponding to the shortcut has a covering route!"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NHRP-5-NO_ROUTE	5-Notice	Not installing NHO for [chars]/[dec] due to the presence of an authoritatively learnt nexthop [chars] on [chars]	NHO was not installed because of an already existing route entry	nhrp	LOG_STD_ACTION
NHRP-5-NO_ROUTE	5-Notice	Not installing NHO for [chars]/[dec] due to the presence of an authoritatively learnt nexthop [chars] on [chars]	NHO was not installed because of an already existing route entry	nhrp	LOG_STD_ACTION
<del>NHRP-6-NBMA_FLAP</del>	6-Information	[chars] is flapping as NBMA [chars] of overlay ip [chars] not same as the previous NBMA [chars]	NHRP tunnel is flapping as NBMA address of the tunnel interface is changed. This could be error that multiple devices are trying to register with same overlay ip address.	nhrp	LOG_STD_ACTION
<del>NHRP-6-NBMA_FLAP</del>	6-Information	[chars] is flapping as NBMA [chars] of overlay ip [chars] not same as the previous NBMA [chars]	NHRP tunnel is flapping as NBMA address of the tunnel interface is changed. This could be error that multiple devices are trying to register with same overlay ip address.	nhrp	LOG_STD_ACTION
<del>NHRP-3-INVALID</del>	3-Error	Setting tree to Invalid State @ - [dec]	NHRP SNMP agent tree is not behaving as expected.	nhrp	LOG_STD_ACTION
<del>NHRP-3-INVALID</del>	3-Error	Setting tree to Invalid State @ - [dec]	NHRP SNMP agent tree is not behaving as expected.	nhrp	LOG_STD_ACTION
<del>NHRP-5-RECOVERD</del>	5-Notice	Tree recovered fromInvalid State @ - [dec]	NHRP SNMP agent tree is not behaving as expected.	nhrp	LOG_STD_ACTION
<del>NHRP-5-RECOVERD</del>	5-Notice	Tree recovered fromInvalid State @ - [dec]	NHRP SNMP agent tree is not behaving as expected.	nhrp	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NICKEL10G3N10GERRD	3-Error	[chars]: [chars] - [dec]	Nickel10g non-fatal generic error	ubr10k-sw	"LOG_STD_ACTION"
NICKEL10G3N10GERRDD	3-Error	[chars]: [chars] - [dec] [dec]	Nickel10g non-fatal error	ubr10k-sw	"LOG_STD_ACTION"
NICKEL10G3N10GERRREVT	3-Error	[chars] - ERR EVENT [chars] port [dec]	Non fatal errors occurred on Nickel10g	ubr10k-sw	"LOG_STD_ACTION"
NICKEL10G3N10GERRRS	3-Error	[chars]	Nickel10g non-fatal generic error	ubr10k-sw	"LOG_STD_ACTION"
NICKEL10G3N10GERRSEND	3-Error	[chars] - ERR EVENT [chars] port [dec] reporting to PRE	Fatal errors occurred on Nickel10g reported to PRE	ubr10k-sw	"LOG_STD_ACTION"
NICKEL10G3N10GERRSSUSPEND	3-Error	Too many Nickel10g ERR EVENTS [dec] suspending reporting	Too many errors reported on Nickel10g	ubr10k-sw	"LOG_STD_ACTION"
NICKEL10G3N10GERRFIBNR	3-Error	FIB is not Running reporting it to PRE	FIB is not in RUNNING state report to PRE for further action	ubr10k-sw	"LOG_STD_ACTION"
NICKEL10G3N10GINVIRB	3-Error	[chars]	Invalid Ironbus mode [dec] defaulting to QUAD	ubr10k-sw	"LOG_STD_ACTION"
NICKEL10G3N10GNOIUP	3-Error	N10G is not operationally up	Nickel10g is not operationally up	ubr10k-sw	"LOG_STD_ACTION"
NICKEL10G3N10GERRMISMATCH	3-Error	PRE-A/B mismatch in N10G - driver:[dec] fpga:[dec]	PRE-A/B mismatch in N10G driver	ubr10k-sw	"LOG_STD_ACTION"
NICKEL10G3N10GERRSPEIFAIL	3-Error	N10G-Waxbill SPI link is out of sync	-	ubr10k-sw	"LOG_STD_ACTION"
NIM_XXD3DISK_ERROR	3-Error	iosxe-chassismgr	Error detected on disk %d in module[chars] in subslot %d/%d.[chars].	"Disk error detected in the SPA (NIM-SSD/NIM-HDD). Refer to comment for details."	"Back-up any data and replace the disk."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NMXXD3DISK_REMOVAL	3-Error	iosxe-chassismgr	One or more disks in SPA (%s) in subslot %d/%d can not be detected. Please power down this SPA and insert disk(s).	"Disks have been removed from SPA"	"Power down the SPA"
NMXXD3DISK_MONICR	5-Notice	iosxe-chassismgr	Disk %d in module[chars] in subslot %d/%d is detected but monitoring is not available.	"Monitoring of disk in SPA (NIM-SSD/NIM-HDD) is unavailable."	"Add a database file with monitoring information for this disk model and manufacturer."
NIM-2-BADNIMREV	2-Critical	Unsupported version of [chars] NIM in slot [dec] Version 0x[hec]\n	-	-	"Upgrade the NIM to the proper level."
NIM-2-BADSLOT	2-Critical	Illegal reference to non-existent slot [dec]\n	An internal software error occurred.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
NIM-2-BADSUBUNIT	2-Critical	Illegal reference to non-existent subunit [dec] in slot [dec]\n	An internal software error occurred.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
NIM-2-DEADICHAINQ	2-Critical	Attempted to manipulate uninitialized ichainQ in [chars]\n	A software or hardware error occurred.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
NIM-2-LOSTICHAINQ	2-Critical	Couldn't find idb 0x[hec] in ichainQ in [chars]\n	A software or hardware error occurred.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NIM2-NOHWADDRESS	2-Critical	All hardware addresses have been allocated - maximum of [dec]\n	An internal software error occurred.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
NIM-2-UNSUPNIM	2-Critical	Unsupported [chars] NIM in slot [dec]\n	The indicated NIM is not supported on this platform.	-	"Remove the NIM."
<del>NMSP-CM-DB-LOCKED</del>	3-Error	ewlc-nmsp	NMSP client application is expected to acquire lock for NMSP local database before calling NMSP API:[chars]	Locking sequence for the DB's is defined in this application. The locking order of DB's needs to be followed as per the application set order	-
<del>NMSP-CM-DB-CONFIG</del>	3-Error	ewlc-nmsp	nmspd cloud service config error:[chars]	Configuration error prevented successful connection to CMX cloud service.	Check configuration of cmx cloud service
<del>NMSP-CM-DB-VERIFY</del>	3-Error	ewlc-nmsp	nmspd HTTPS error:[chars]	Peer verification of CMX cloud service failed.	Check that server certificate can be verified by root CA certificates in trustpool of crypto PKI.
<del>NMSP-CM-DB-VERIFY</del>	3-Error	ewlc-nmsp	nmspd TLS certificate error:[chars]	Error validating TLS certificate for incoming CMX connection	Check that certificates and SHA2 key are properly setup on eWLC. Contact TAC if issue persists.
<del>NMSP-CM-DB-VERIFY</del>	3-Error	ewlc-nmsp	nmspd TLS disconnection:[chars]	Remote CMX connection over TLS protocol had been dropped.	Check connectivity with CMX
<del>NMSP-CM-DB-VERIFY</del>	3-Error	ewlc-nmsp	nmspd internal error occured when handling TLS connection:[chars]	Internal eWLC error prevented successful establishment of CMX connection over TLS protocol	Check availability of the system resources of the eWLC controller: memory

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>NMPSICOMPHIENANCE</del>	5-Notice	ewlc-nmsp	nmspd HTTPS error:[chars]	Peer verification of CMX cloud service failed.	Check that server certificate can be verified by root CA certificates in trustpool of crypto PKI.
<del>NMPSICOMPHIENANCE</del>	5-Notice	ewlc-nmsp	nmspd HTTPS error:[chars]	Peer verification of CMX cloud service failed.	Check that server certificate can be verified by root CA certificates in trustpool of crypto PKI.
<del>NMPSICOMPSI_NOIE</del>	5-Notice	ewlc-nmsp	nmspd TLS disconnection:[chars]	Remote CMX connection over TLS protocol had been dropped.	Check connectivity with CMX
NOEVENT3-TENSRFSM	3-Error	ERRMSG_NOFLAGS	-	-	-
NOEVENT3-TENSRFSM	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>NOEMEMLSIEEXTWDG</del>	2-Critical	ERRMSG_NOFLAGS	-	-	-
<del>NOEMEMLSIEEXTWDG</del>	2-Critical	ERRMSG_NOFLAGS	-	-	-
<del>NOEMEMLSIESYS</del>	2-Critical	ERRMSG_NOFLAGS	-	-	-
<del>NOEMEMLSIESYS</del>	2-Critical	ERRMSG_NOFLAGS	-	-	-
NOPROCID3-TENSRFSM	3-Error	ERRMSG_NOFLAGS	-	-	-
NOPROCID3-TENSRFSM	3-Error	ERRMSG_NOFLAGS	-	-	-
NOTIFY_BUFFER3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
NOTIFY_BUFFER3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>NP108PHIENANCE</del>	2-Critical	DFC in slot [dec] does not have three NP108s!	DFC does not have three NP108s which is an illegal configuration	-	LOG_STD_ACTION
NP_BS-3-CRC_FAIL	3-Error	NextPort Module [dec]/[dec]/[dec] failed firmware image validation	NextPort BootStrap and Crash Monitor detected an a failed NextPort firmware CRC validation	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NP_BS-3-INITSYS	3-Error	[chars]	Failed NextPort BootStrap and Crash Monitor Initialization.	-	LOG_STD_ACTION
NP_BS-3-INVALID_FW	3-Error	Invalid NextPort Firmware for [dec]/[dec]/[dec]	NextPort BootStrap and Crash Monitor detected an invalid NextPort firmware	-	LOG_STD_ACTION
NP_BS-3-INVALID_IDT	3-Error	NextPort Module [dec]/[dec]/[dec] detected an invalid IDT	NextPort BootStrap and Crash Monitor detected an invalid IDT	-	LOG_STD_ACTION
NP_BS-3-INVALID_MC_POST	3-Error	NextPort Module [dec]/[dec]/[dec] detected a module POST failure 0x[hec]	NextPort BootStrap and Crash Monitor detected an a module POST failure	-	LOG_STD_ACTION
NP_BS-3-MEM_TEST_FAIL	3-Error	NextPort Module [dec]/[dec]/[dec] memory test failed	NextPort BootStrap and Crash Monitor detected a failed NextPort module memory test	-	LOG_STD_ACTION
NP_BS-3-MODULE_ACCESS_ERR	3-Error	Failed to access NextPort module [dec]/[dec]/[dec] crash info	NextPort BootStrap and Crash Monitor failed to access\n\ crash information	-	LOG_SID_NO_ACTION
NP_BS-3-NO_KEEPALIVE	3-Error	NextPort module [dec]/[dec]/[dec] failed to respond to keepalive message	NextPort BootStrap and Crash Monitor detected a module failed to\n\ respond to keepalive message	-	LOG_SID_NO_ACTION
NP_BS-3-NO_SCH_MODULE	3-Error	[chars] nonexistent NP module [dec]/[dec]/[dec]	NextPort BootStrap and Crash Monitor detected an internal database error	-	LOG_SID_NO_ACTION
NP_BS-3-NOMEM	3-Error	[chars]	NextPort BootStrap and Crash Monitor Could not allocate memory \n\ for internal module database	-	LOG_SID_NO_ACTION







Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NP_CLIENT-3-INTF	3-Error	[chars] [chars] on [chars] - [chars] if_number=[dec]	Interface NP Client detected an error.	SP2_CLIENT_DDIS_COMP	"Record the output from the following commands:\n\n\ <Bulleted>par</Bulleted>show tech <NoBulleted>\n\ <Bulleted>par</Bulleted>show log <NoBulleted>\n\n\ <Body><par>Provide this information to your technical support\n\ representative."
NP_CLIENT-3-MAXEXCEED	3-Error	NP Client Max Services Exceeded - [chars]: [chars] [chars]	The maximum number NP Client services have been exceeded.	SP2_CLIENT_DDIS_COMP	"Change the configuration to reduce the number of services configured.\n\n If the error persists record the output\n\ from the following commands:\n\n\ <Bulleted>par</Bulleted>show tech <NoBulleted>\n\ <Bulleted>par</Bulleted>show log <NoBulleted>\n\n\ <Body><par>Provide this information to your technical support\n\ representative."
NP_CLIENT-3-METADATA	3-Error	[chars] failed: [chars] [[chars]] [chars]	Processing of the Metadata for the specified Network\n\ Processor failed. The specified Network Processor will \n\ fail to operate.	SP2_CLIENT_DDIS_COMP	"Try to reload the Network Processor microcode.\n\n If the error persists record the output\n\ from the following commands:\n\n\ <Bulleted>par</Bulleted>show tech <NoBulleted>\n\ <Bulleted>par</Bulleted>show log <NoBulleted>\n\n\ <Body><par>Provide this information to your technical support\n\ representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NP_CLIENT-3-NOMEM	3-Error	Memory Allocation Failure - [chars]: [chars] [chars]	NP Client could not allocate required memory\n\n needed to service one or more Network Processors.	SP2_CLIENT_DDJS_COMP	"This error may indicate that more memory \n\n must be installed on the affected card \n\n or platform in order to service all the\n\n features and related entities enabled via \n\n the configuration.\n\n \n\n Try to reload the IOS image on the affected \n\n card or platform.\n\n If the error persists record the output\n\n from the following commands:\n\n\n\n <del><ul style='list-style-type: none; padding-left: 0; margin: 0;'><li><strong>show tech</strong></li><li><strong>show log</strong></li></ul></del><Body><par>Provide this information to your technical support\n\n representative."
NP_CLIENT-3-NOIFOUND	3-Error	NP Client Software Element Not Found - [chars]: [chars] [chars]	The NP Client could not locate a required software element.	SP2_CLIENT_DDJS_COMP	"Try to reload the IOS image on the affected \n\n card or platform.\n\n\n\n If the error persists record the output\n\n from the following commands:\n\n\n\n <del><ul style='list-style-type: none; padding-left: 0; margin: 0;'><li><strong>show tech</strong></li><li><strong>show log</strong></li></ul></del><Body><par>Provide this information to your technical support\n\n representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NP_CLIENT-3-NOTSUP	3-Error	NP Client Feature Not Supported - [chars]: [chars] [chars]	The NP Client does not support the specified feature.	SP2_CLIENT_DDIS_COMP	"Verify that the correct IOS image is loaded on the affected \n\ card or platform for the configured features.\n\ If the error persists record the output\n\ from the following commands:\n\n\ <del>Bullet</del><del>par</del><del>Bold</del>show tech <del>NoBold</del>\n\ <del>Bullet</del><del>par</del><del>Bold</del>show log <del>NoBold</del>\n\n\ <del>Body</del><del>par</del>Provide this information to your technical support\n\ representative."
NP_CLIENT-3-UNKNOWN	3-Error	NP Client Unsupported NP - [chars]: [chars] [chars]	NP Client detected an unsupported NP.	SP2_CLIENT_DDIS_COMP	"Verify that the correct IOS image is loaded on the affected \n\ card or platform for the configured features.\n\ If the error persists record the output\n\ from the following commands:\n\n\n\ <del>Bullet</del><del>par</del><del>Bold</del>show tech <del>NoBold</del>\n\ <del>Bullet</del><del>par</del><del>Bold</del>show log <del>NoBold</del>\n\n\ <del>Body</del><del>par</del>Provide this information to your technical support\n\ representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NP_CLIENT3UNEXPECTED	3-Error	NP Client Unexpected - [chars]: [chars] [chars] [dec] [dec]	NP Client unexpected error condition.	SP2_CLIENT_DDJS_COMP	"Record the output from the following commands:\n\n\ <Bulleted> show tech </Bulleted>\n\ <Bulleted> show log </Bulleted>\n\n\ <Body> Provide this information to your technical support\n\n representative."
NP_EST-3-MSG_ERR	3-Error	[chars]	EST detected an internal error	-	LOG_SID_NO_ACTION
NP_EST6CIRL_NAK_RSP	6-Information	[chars]	EST Control No-Acknowledge Notification is sent to IOS to convey additional debug data regarding a NAK that occurred on the Control Queue	-	LOG_SID_NO_ACTION
NP_EST6DIAG_POST_NIF	6-Information	[chars]	EST Diagnostic/POST Notification is sent to IOS to convey additional information about the power-on self-test or a diagnostic test result	-	LOG_SID_NO_ACTION
NP_EST6RUNTIME_ERR_NIF	6-Information	[chars]	EST Run-time Error Notification is sent to IOS to convey additional debug data that may help to identify the cause of the error	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NPMD0NOMDUELEMENTS	0-Emergency	Cannot bring up the module [dec]/[dec]/[dec] due to lack of module elements	NextPort Modem Driver cannot allocate an important data structure called\n\n module element which is necessary to bring up the module. This should\n\n not normally happen and possibly indicates an error condition	async_drivers	LOG_STD_ACTION
NP_MD0NO_SUCH_LINE	0-Emergency	Attempt to [chars] a data channel on the unexisting line [dec]/[dec]	An internal software error occurred that probably resulted in corrupted\n\n modem database	as	LOG_STD_ACTION
NPMD0NOSUCHMODEM	0-Emergency	Attempt to [chars] a data channel on the unexisting modem [dec]/[dec]	An internal software error occurred that probably resulted in corrupted\n\n modem database	as	LOG_STD_ACTION
NP_MD0NO_SUCH_SLOT	0-Emergency	Slot [dec] is not present in the system	An internal software error occurred that possibly resulted in corrupted\n\n slot database.	as	LOG_STD_ACTION
NP_MD0NOHWIDBS	0-Emergency	Cannot allocate interface Async[dec]/[node]d	Allocation of interface structure failed. Either there is not\n\n enough memory or the maximum number of interfaces was exceeded	as	LOG_STD_ACTION
NP_MD0NOMEMORY	0-Emergency	Cannot allocate [dec] bytes of memory for [chars]	The system failed to allocate an important data structure due\n\n to the lack of memory	as	"show mem"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
NP_MD-0-NOPAKS	0-Emergency	TTY [chars]: Cannot allocate [chars]	An important buffer cannot be allocated due to the shortage of packet\n\n memory.	as	LOG_STD_ACTION
NP_MD-0-NOTTYS	0-Emergency	Cannot allocate TTY[dec] [dec]/[node]d	Allocation of TTY structure failed. Either there is not enough memory\n\n or the TTY number is too big	as	LOG_STD_ACTION
<del>NP_MD-0-CLAREADYPRESENT</del>	0-Emergency	Slot [dec] is already present in the system	An internal software error occurred that possibly resulted in corrupted\n\n slot database.	as	LOG_STD_ACTION
<del>NP_MD-1-UNKNOWN_SPC_CHAR</del>	1-Alert	TTY [chars]: Attempt to set an unknown special character type [dec]	NextPort Modem Driver received a request for hardware detection of an\n\n unknown type of a special character due to an internal software error	as	LOG_STD_ACTION
NP_MD-3-BADENCAP	3-Error	Unknown encapsulation [dec] on interface [chars]	A software error occurred resulting in an unknown encapsulation\n\n type on the interface specified by the error message.	as	LOG_STD_ACTION
NP_MD-3-CONTIGUOUS	3-Error	Contiguous packet sent for transmit	A software error occurred resulting in an unexpected packet being\n\n set up for transmission and the packet was dropped by the NextPort\n\n Modem Driver	as	LOG_SID_RECUR_ACTION
<del>NP_MD-3-TOO_MANY_BUFFERS</del>	3-Error	Too many buffers [dec] rxd for port [dec]	NextPort Module sent more buffers than is allowed for this channel	as	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>NPMD</del> DATAQUEUESENDAL	3-Error	Could not send to data queue for port [dec] inflight tx buffers [dec]	NextPort Modem Driver could not send buffer to Interface driver	as	LOG_STD_ACTION
<del>NPMD</del> MODEM_SLOT_CREATE_FAIL	3-Error	Modem slot structure for slot [dec] could not be created	NextPort modem driver could not create the modem slot structure which is required for modem services of this card	as	LOG_STD_ACTION
<del>NPMD</del> NO_SEED_BUFFER	3-Error	No buffer to seed data queue for module [dec]/[dec]/[dec]	NextPort Modem Driver could not obtain a buffer whilst trying to seed the module data queue. Due to packet memory shortage	as	LOG_STD_ACTION
NP_MD-3-NOTXPAK	3-Error	Static transmit paktype unavailable	A software structure was found in an unexpected state during run-time for the indicated modem.	as	LOG_STD_ACTION
NP_MD-3-NULL_PTR	3-Error	[chars] is NULL in [chars] for port [dec]	Unexpected NULL pointer at specified location	as	LOG_STD_ACTION
<del>NPMD</del> RETURN_DATA_BUFFER_FAIL	3-Error	Failed to return data buffer for port [dec]	Call to NextPort Interface Driver to replenish data buffer for this channel failed	as	LOG_STD_ACTION
<del>NPMD</del> SEED_BUFFER_FAIL	3-Error	Could not seed data queue for module [dec]/[dec]/[dec]	NextPort Modem Driver could not seed the data queue with buffers	as	LOG_STD_ACTION
<del>NPMD</del> INBAND_MESSAGE_FAIL	3-Error	Failed to send inband message for TTY [chars]	Call to send inband message on data queue failed	as	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NPMD3QUEUE_EMPTY	3-Error	TTY [chars]: No buffers available to set up the transmit queue	A software error occurred resulting in an invalid state for the\n\n RTS modem signal	as	LOG_STD_ACTION
NPMDUNKNOWNINBAND	3-Error	TTY [chars]: Unknown NextPort in-band message msg_id [node]x received	NextPort Modem driver received an unknown message from a NextPort module.\n\nThis can happen if new firmware is used with an obsolete version of IOS	as	LOG_STD_ACTION
NPMD6MODULE_DOWN	6-Information	NextPort module [dec]/[dec]/[dec] down	NextPort Modem Driver detected a module going down	-	LOG_SID_NO_ACTION
NP_MD6MODULE_UP	6-Information	NextPort module [dec]/[dec]/[dec] up	NextPort Modem Driver detected a module coming up	-	LOG_SID_NO_ACTION
NPMD6SLOT_INSERTED	6-Information	Slot [dec] [dec] ports max inserted	NextPort Modem driver detected a slot being inserted in the system.\n\n During the startup all slots that are present in the system are treated\n\n as being inserted	-	LOG_SID_NO_ACTION
NPMD6SLOT_REMOVED	6-Information	Slot [dec] removed	Slot has been removed from the system	-	LOG_SID_NO_ACTION
NPMD6CONR_CODE_FAILURE	3-Error	Module country code failure [dec]/[dec]/[dec]	NextPort Module Manager failed to set the country code	-	LOG_STD_ACTION
NPMD6DATA_Q_FAILED	3-Error	Failed to create Data Q for NP module [dec]/[dec]/[dec]	NextPort Module Manager failed to create Data Queue	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>NPM3</del> INVALID_ACK_RSP	3-Error	Unsupported module ACK response [dec]/[dec]/[dec]: msg len = [dec] session ID = [dec] msg tag = [dec] msg ID = [dec] cmd msg ID = [dec] result code = [dec]	NextPort Module Manager received an unsupported message response	-	LOG_STD_ACTION
<del>NPM3</del> INVALID_ADDRESS	3-Error	Invalid NP_ADDRESS [dec]/[dec]/[dec]/[dec] - [chars]	NextPort Module Manager detected invalid NP_ADDRESS	-	LOG_STD_ACTION
NP_MM3INVALID_RSP	3-Error	Unsupported module response [dec]/[dec]/[dec]: msg len = [dec] session ID = [dec] msg tag = [dec] msg ID = [dec]	NextPort Module Manager received an unsupported message response	-	LOG_STD_ACTION
NP_MM3INVALID_STATE	3-Error	Invalid NP module state[chars] [dec]/[dec]/[dec] - [chars]	NextPort Module Manager detected invalid NP module state	-	LOG_STD_ACTION
NP_MM3MEM_ERR	3-Error	Failed to allocate control message buffer for NP module [dec]/[dec]/[dec] - [chars]	NextPort Module Manager failed to allocate control message buffer	-	LOG_STD_ACTION
<del>NPM3</del> MODULE_CRASH	3-Error	Module Crash detected [dec]/[dec]/[dec]: state = [dec] cause code = [dec]	NextPort Module Manager detected a crashed module	-	LOG_STD_ACTION
<del>NPM3</del> RESTART_EXCHD	3-Error	Module exceeded restart threshold [dec]/[dec]/[dec]	NextPort Module exceeded the restart threshold	-	LOG_STD_ACTION
NP_MM3RUNTIME_ERR	3-Error	Module Run Time Error [dec]/[dec]/[dec] : recovery = 0x[hec] error = 0x[hec]	NextPort Module Manager received a module run time error	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NP_MM3SEND_FAILED	3-Error	Failed to send [chars] message to NP module [dec]/[dec]/[dec]	NextPort Module Manager failed to send control message	-	LOG_STD_ACTION
NP_TB3CPONEFORMAT	3-Error	Format of cp tone failed for tone-id [dec] port [dec]/[dec]	Formatting of the call processing tone message to the nextport module\n\n failed	-	LOG_STD_ACTION
NP_SPE_DS3NOMEMORY	3-Error	Cannot allocate [dec] bytes of memory for [chars]	The system failed to allocate an important data structure due\n\n to the lack of memory	-	"show mem"
NP_SPE_DS3SEINDNFAL	3-Error	SPE [dec]/[dec]/[dec]: [chars]	SPE download code failed - download aborted	-	LOG_SID_NO_ACTION
NP_SPE_DS3SEINDNFAL	3-Error	[chars]	SPE download code failed to initialise - SPE download will fail	-	LOG_SID_NO_ACTION
NP_SSM0NOMEMORY	0-Emergency	Cannot allocate [dec] bytes of memory for [chars]	The system failed to allocate an important data structure due\n\n to the lack of memory	as	"show mem"
NP_SSM6INVALID_HANDLE	3-Error	SSM[dec]/[dec]: Invalid Session/Service Instance Handle	Session and Service Manager Received failed to obtain its instance\n\n handle for the slot/port	-	LOG_SID_NO_ACTION
NP_SSM3INVALID_MSG	3-Error	SSM: Invalid Session/Service Message ID = 0x[hec]	Session and Service Manager Received an invalid message from the\n\n NextPort Message Dispatcher	-	LOG_SID_NO_ACTION
NP_SSM6RUNTIME_ERROR	3-Error	SSM[dec]/[dec]: Session Runtime Error Code = [dec] Recovery Action = [dec]	Session and Service Manager Received a Runtime Error for the slot\n\n and port	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NP_SSM6_NULL_SSM_INFO	6-Information	NULL SSM Info Handle for slot [dec] port [dec]	NextPort Session and Service Manager failed to obtain a control information handle for the indicated slot and port numbers	-	LOG_STD_ACTION
NP_SSM6_NULL_VDEV_COMMON	6-Information	NULL Vdev Common Handle for slot [dec] port [dec]	NextPort Session and Service Manager failed to obtain a Voice Device Information handle for the indicated slot and port numbers	-	LOG_STD_ACTION
NP_UCODE3_INVALID_FILE	3-Error	NP microcode [chars] for device [chars] is invalid [chars]	The file containing the microcode for an NP is not specified\n\ or not accessible. This could be due to an invalid configuration\n\ or because the microcode is missing in this image.	vsp-mid	LOG_STD_ACTION
NP_CTRL_POOL_CREATE_FAILED	3-Error	Control buffer pool could not be created	NextPort driver could not create the control buffer pool required for tx and rx of NP control messages	as	LOG_STD_ACTION
NP-3-MODNOTEXIST	3-Error	Slot [dec] DFC [dec] Module [dec] not exist.	No Virtual Console opens for this module.	as	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
NP-3-NAKRSP	3-Error	NAK Response Received - command 0x[hec] result code 0x[hec] msg id 0x[hec] session id 0x[hec] msg tag 0x[hec]	A NAK response was sent by the NextPort module.	as	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NP-3-NOTMSGID	3-Error	Message Id [hec] not supported.	The Nextport does not supported this control message id.	as	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
NP-3-QUEUEFULL	3-Error	[chars] queue is full for Slot [dec] DFC [dec] Module [dec].	TX queue is full for this module.	as	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
NP-3-RESET_DFC	3-Error	DFC Reset-Cleared Failed - DFC [dec]	DFC Reset-Cleared Failed	as	LOG_STD_ACTION
NTI-3-AGENT_ERR	3-Error	[chars] Notifying platform about AGENT ERROR [chars] AGENT EP ID 0x[hec] for EP ID 0x[hec] EP type [chars] EP group [chars]	An NTI AGENT error has occurred	nti	LOG_STD_ACTION
NTI-3-AGENT_ERR	3-Error	[chars] Notifying platform about AGENT ERROR [chars] AGENT EP ID 0x[hec] for EP ID 0x[hec] EP type [chars] EP group [chars]	An NTI AGENT error has occurred	nti	LOG_STD_ACTION
<del>NTI-3-CLIENT_ERR</del>	3-Error	[chars] Client #[dec] - [chars] has NOT registered for platform EP type [chars]	A Client has not registered for a platform EP type	nti	LOG_STD_ACTION
<del>NTI-3-CLIENT_ERR</del>	3-Error	[chars] Client #[dec] - [chars] has NOT registered for platform EP type [chars]	A Client has not registered for a platform EP type	nti	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NTISSU_AGENTLIST_ALLOC	3-Error	Failed to allocate agent bitlist for endpoint 0x[hec]	NTI ISSU failed to allocate the agents bitlist for an endpoint. The endpoint will most likely be reset.	nti	LOG_STD_ACTION
NTISSU_AGENTLIST_ALLOC	3-Error	Failed to allocate agent bitlist for endpoint 0x[hec]	NTI ISSU failed to allocate the agents bitlist for an endpoint. The endpoint will most likely be reset.	nti	LOG_STD_ACTION
NTISSU_DUMMY_NEGO_FAILED	3-Error	Failed to send a dummy nego msg to endpoint 0x[hec]	NTI ISSU failed to send a dummy negotiation message to trigger negotiation on the peer. The endpoint will most likely be reset.	nti	LOG_STD_ACTION
NTISSU_DUMMY_NEGO_FAILED	3-Error	Failed to send a dummy nego msg to endpoint 0x[hec]	NTI ISSU failed to send a dummy negotiation message to trigger negotiation on the peer. The endpoint will most likely be reset.	nti	LOG_STD_ACTION
NTISSU_EXISTING_SESSION	3-Error	Session already exists for ep 0x[hec]	NTI ISSU session already exists for endpoint. The endpoint will most likely be reset.	nti	LOG_STD_ACTION
NTISSU_EXISTING_SESSION	3-Error	Session already exists for ep 0x[hec]	NTI ISSU session already exists for endpoint. The endpoint will most likely be reset.	nti	LOG_STD_ACTION
NTISSU_INVALID_MEDMAN	3-Error	Invalid MEDMan data	MEDMan Multiple Endpoint Data Manager data is invalid. The endpoint will most likely be reset.	nti	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>NI</del> ISSU_INVALID_MEDMAN	3-Error	Invalid MEDMan data	MEDMan Multiple Endpoint Data Manager data is invalid. The endpoint will most likely be reset.	nti	LOG_STD_ACTION
<del>NI</del> ISSU_INVALID_MG_IRAS	3-Error	NTI ISSU transformation function got an invalid message in argument	NTI ISSU transformation function got an invalid message in argument. The message can't be transformed and won't be processed.	nti	LOG_STD_ACTION
<del>NI</del> ISSU_INVALID_MG_IRAS	3-Error	NTI ISSU transformation function got an invalid message in argument	NTI ISSU transformation function got an invalid message in argument. The message can't be transformed and won't be processed.	nti	LOG_STD_ACTION
NTI3-ISSU_INVALID_RC	3-Error	Invalid ISSU rc argument for endpoint 0x[hec]	NTI ISSU got an invalid ISSU return code argument. ISSU negotiation will fail the endpoint will most likely be reset.	nti	LOG_STD_ACTION
NTI3-ISSU_INVALID_RC	3-Error	Invalid ISSU rc argument for endpoint 0x[hec]	NTI ISSU got an invalid ISSU return code argument. ISSU negotiation will fail the endpoint will most likely be reset.	nti	LOG_STD_ACTION
<del>NI</del> ISSU_INVALID_RC_VDMG	3-Error	NTI ISSU received an invalid message for transformation from endpoint 0x[hec]	NTI ISSU received an invalid message for transformation. The message can't be processed.	nti	LOG_STD_ACTION



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
NIBSSU_NVALDRCVDMG	3-Error	NTI ISSU received an invalid message for transformation from endpoint 0x[hec]	NTI ISSU received an invalid message for transformation. The message can't be processed.	nti	LOG_STD_ACTION
NIBSSU_NVALDSESSON	3-Error	Invalid session for ep 0x[hec]	NTI ISSU session is invalid for endpoint. The endpoint will most likely be reset.	nti	LOG_STD_ACTION
NIBSSU_NVALDSESSON	3-Error	Invalid session for ep 0x[hec]	NTI ISSU session is invalid for endpoint. The endpoint will most likely be reset.	nti	LOG_STD_ACTION
NIBSSU_MEDMAN_CREATE	3-Error	Failed to create MEDMan data for endpoint 0x[hec]	NTI ISSU failed to create MEDMan data for an endpoint. Negotiation can't be done the endpoint will most likely be reset.	nti	LOG_STD_ACTION
NIBSSU_MEDMAN_CREATE	3-Error	Failed to create MEDMan data for endpoint 0x[hec]	NTI ISSU failed to create MEDMan data for an endpoint. Negotiation can't be done the endpoint will most likely be reset.	nti	LOG_STD_ACTION
NIBSSU_MEDMAN_GET	3-Error	Failed to get MEDMan data for endpoint 0x[hec] [chars]	NTI ISSU failed to retrieve MEDMan data for an endpoint. ISSU negotiation will failed with this endpoint and it will most likely be reset.	nti	LOG_STD_ACTION
NIBSSU_MEDMAN_GET	3-Error	Failed to get MEDMan data for endpoint 0x[hec] [chars]	NTI ISSU failed to retrieve MEDMan data for an endpoint. ISSU negotiation will failed with this endpoint and it will most likely be reset.	nti	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>NTI</del> 3- <del>ISSU</del> _MIU_FAILED	3-Error	NTI ISSU failed to get MTU for message type [dec] [chars]	NTI ISSU failed to get the message MTU for transformation. The message can't be sent.	nti	LOG_STD_ACTION
<del>NTI</del> 3- <del>ISSU</del> _MIU_FAILED	3-Error	NTI ISSU failed to get MTU for message type [dec] [chars]	NTI ISSU failed to get the message MTU for transformation. The message can't be sent.	nti	LOG_STD_ACTION
<del>NTI</del> 3- <del>ISSU</del> _NGO_ALREADY_STARTED	3-Error	NTI ISSU negotiation already started endpoint 0x[hec]	Tried to start the NTI ISSU negotiation but it started already. The endpoint will most likely be reset.	nti	LOG_STD_ACTION
<del>NTI</del> 3- <del>ISSU</del> _NGO_ALREADY_STARTED	3-Error	NTI ISSU negotiation already started endpoint 0x[hec]	Tried to start the NTI ISSU negotiation but it started already. The endpoint will most likely be reset.	nti	LOG_STD_ACTION
<del>NTI</del> 3- <del>ISSU</del> _NGO_ASYNC_ERROR	3-Error	Async error during nego with 0x[hec] [chars]	NTI ISSU got an asynchronous error during negotiation with an endpoint. The endpoint will most likely be reset.	nti	LOG_STD_ACTION
<del>NTI</del> 3- <del>ISSU</del> _NGO_ASYNC_ERROR	3-Error	Async error during nego with 0x[hec] [chars]	NTI ISSU got an asynchronous error during negotiation with an endpoint. The endpoint will most likely be reset.	nti	LOG_STD_ACTION
<del>NTI</del> 3- <del>ISSU</del> _NGO_INCOMPATIBLE	3-Error	Negotiation incompatible for endpoint 0x[hec]	NTI ISSU was incompatible for this endpoint. The endpoint will most likely be reset.	nti	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>NTI3-UNCOMPATIBLE</del>	3-Error	Negotiation incompatible for endpoint 0x[hec]	NTI ISSU was incompatible for this endpoint. The endpoint will most likely be reset.	nti	LOG_STD_ACTION
NTI3-ISSU_NOT_INIT	3-Error	NTI ISSU is not initialized endpoint 0x[hec].	NTI ISSU is not initialized. The endpoint will most likely be reset.	nti	LOG_STD_ACTION
NTI3-ISSU_NOT_INIT	3-Error	NTI ISSU is not initialized endpoint 0x[hec].	NTI ISSU is not initialized. The endpoint will most likely be reset.	nti	LOG_STD_ACTION
<del>NTI3-TRANSPORT_NGO_HCK</del>	3-Error	NTI ISSU failed to get an platform transport nego message	NTI ISSU failed to get an platform transport nego message. The endpoint will most likely be reset.	nti	LOG_STD_ACTION
<del>NTI3-TRANSPORT_NGO_HCK</del>	3-Error	NTI ISSU failed to get an platform transport nego message	NTI ISSU failed to get an platform transport nego message. The endpoint will most likely be reset.	nti	LOG_STD_ACTION
<del>NTI3-TRANSPORT_NGO_HCK</del>	3-Error	NTI ISSU failed to send an platform transport nego message to 0x[hec]	NTI ISSU failed to send a negotiation message using the platform transport. The endpoint will most likely be reset.	nti	LOG_STD_ACTION
<del>NTI3-TRANSPORT_NGO_HCK</del>	3-Error	NTI ISSU failed to send an platform transport nego message to 0x[hec]	NTI ISSU failed to send a negotiation message using the platform transport. The endpoint will most likely be reset.	nti	LOG_STD_ACTION
NTI3-ISSU_RCV_FAILED	3-Error	NTI ISSU failed to transform message type [dec] for receive from 0x[hec] [chars]	NTI ISSU failed to transform the message for receive. The message can't be processed.	nti	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
NTI-3-ISSU_RCV_FAILED	3-Error	NTI ISSU failed to transform message type [dec] for receive from 0x[hec] [chars]	NTI ISSU failed to transform the message for receive. The message can't be processed.	nti	LOG_STD_ACTION
<del>NTI-3-ISSU_RCV_FAILED</del>	3-Error	NTI ISSU negotiation not done when received a message from 0x[hec]	NTI ISSU not done when received a message. The message can't be processed.	nti	LOG_STD_ACTION
<del>NTI-3-ISSU_RCV_FAILED</del>	3-Error	NTI ISSU negotiation not done when received a message from 0x[hec]	NTI ISSU not done when received a message. The message can't be processed.	nti	LOG_STD_ACTION
<del>NTI-3-ISSU_RCV_FAILED</del>	3-Error	NTI ISSU failed to transform received message from 0x[hec]	NTI ISSU failed to transform a received message. The message can't be processed.	nti	LOG_STD_ACTION
<del>NTI-3-ISSU_RCV_FAILED</del>	3-Error	NTI ISSU failed to transform received message from 0x[hec]	NTI ISSU failed to transform a received message. The message can't be processed.	nti	LOG_STD_ACTION
<del>NTI-3-ISSU_RCV_FAILED</del>	3-Error	NTI ISSU received an unknown message type [dec] from 0x[hec]	NTI ISSU received a message whose type is unknown. The message can't be processed.	nti	LOG_STD_ACTION
<del>NTI-3-ISSU_RCV_FAILED</del>	3-Error	NTI ISSU received an unknown message type [dec] from 0x[hec]	NTI ISSU received a message whose type is unknown. The message can't be processed.	nti	LOG_STD_ACTION
NTI-3-ISSU_REG_ADD	3-Error	NTI ISSU failed to hook to the registry [chars]	NTI ISSU failed to hook to a registry. This endpoint will most likely be reset.	nti	LOG_STD_ACTION
NTI-3-ISSU_REG_ADD	3-Error	NTI ISSU failed to hook to the registry [chars]	NTI ISSU failed to hook to a registry. This endpoint will most likely be reset.	nti	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>NTISSU</del> _RGRCMENCMSG	3-Error	NTI ISSU failed call the platform receive nego message registry	NTI ISSU failed to call the platform receive nego message registry. The endpoint will most likely be reset.	nti	LOG_STD_ACTION
<del>NTISSU</del> _RGRCMENCMSG	3-Error	NTI ISSU failed call the platform receive nego message registry	NTI ISSU failed to call the platform receive nego message registry. The endpoint will most likely be reset.	nti	LOG_STD_ACTION
<del>NTISSU</del> _RGNCNCONDONE	3-Error	NTI ISSU negotiation not done when getting a trigger from 0x[hec]	NTI ISSU negotiation should have been done when getting a trigger from this endpoint. The trigger will be ignored	nti	LOG_STD_ACTION
<del>NTISSU</del> _RGNCNCONDONE	3-Error	NTI ISSU negotiation not done when getting a trigger from 0x[hec]	NTI ISSU negotiation should have been done when getting a trigger from this endpoint. The trigger will be ignored	nti	LOG_STD_ACTION
<del>NTISSU</del> _UNKNOWNMGTYPE	3-Error	NTI ISSU got an unknown message type: [dec]	NTI ISSU got an unknown message type when trying to get the message MTU. The message can't be sent.	nti	LOG_STD_ACTION
<del>NTISSU</del> _UNKNOWNMGTYPE	3-Error	NTI ISSU got an unknown message type: [dec]	NTI ISSU got an unknown message type when trying to get the message MTU. The message can't be sent.	nti	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NTI3-ISSU_XMIT_FAILED	3-Error	NTI ISSU failed to transform message type [dec] for transmit to 0x[hec] [chars]	NTI ISSU failed to transform the message for transmit. The message can't be sent.	nti	LOG_STD_ACTION
NTI3-ISSU_XMIT_FAILED	3-Error	NTI ISSU failed to transform message type [dec] for transmit to 0x[hec] [chars]	NTI ISSU failed to transform the message for transmit. The message can't be sent.	nti	LOG_STD_ACTION
NBIRG_ABORT_ALL_CLIENTS	3-Error	[chars] Aborting trigger processing for all clients as requested by the platform EP ID 0x[hec] trigger type [chars] trigger group [chars]	Trigger processing has been aborted for all clients due to a platform request	nti	LOG_STD_ACTION
NBIRG_ABORT_ALL_CLIENTS	3-Error	[chars] Aborting trigger processing for all clients as requested by the platform EP ID 0x[hec] trigger type [chars] trigger group [chars]	Trigger processing has been aborted for all clients due to a platform request	nti	LOG_STD_ACTION
NBIRG_CLIENT_NOT_IN_LIST	3-Error	[chars] Cannot trigger NTI client [dec] for this EP: could not find client	Could not Trigger NTI Client for an EP as it is not in the list	nti	LOG_STD_ACTION
NBIRG_CLIENT_NOT_IN_LIST	3-Error	[chars] Cannot trigger NTI client [dec] for this EP: could not find client	Could not Trigger NTI Client for an EP as it is not in the list	nti	LOG_STD_ACTION
NTI3-TRIG_PROCESSING	3-Error	[chars] Trigger processing ERROR for client #[dec] - [chars] EP ID 0x[hec] trigger	An NTI Trigger Processing Error has occurred	nti	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NTP3-TRIG_PROCESSING	3-Error	[chars] Trigger processing ERROR for client #[dec] - [chars] EP ID 0x[hec] trigger	An NTP Trigger Processing Error has occurred	nti	LOG_STD_ACTION
NTP-4-PEERUNREACH	4-Warning	Peer [node] is unreachable	The NTP peer is unreachable.	-	"Check network connection to the peer and if NTP is running on the peer."
NTP-4-PEERUNREACH	4-Warning	Peer [node] is unreachable	The NTP peer is unreachable.	-	"Check network connection to the peer and if NTP is running on the peer."
NTP-4-UNSYNC	4-Warning	NTP sync is lost	NTP synchronization to its peer is lost.	-	"Check network connection to the peer if NTP is running on the peer\n\n if the peer itself is synchronized to a stable time source and if NTP\n\n packets from the peer have passed validity tests specified in the\n\n RFC1305 etc."
NTP-4-UNSYNC	4-Warning	NTP sync is lost	NTP synchronization to its peer is lost.	-	"Check network connection to the peer if NTP is running on the peer\n\n if the peer itself is synchronized to a stable time source and if NTP\n\n packets from the peer have passed validity tests specified in the\n\n RFC1305 etc."
NTP-4-V6DISABLED	4-Warning	IPv6 is not running on interface [chars]. Cannot send NTP message.	Some NTP IPv6 specific commands are configured on an\n\n interface on which IPv6 is not running	-	"Enable IPv6 on the interface"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NTP-4-V6DISABLED	4-Warning	IPv6 is not running on interface [chars]. Cannot send NTP message.	Some NTP IPv6 specific commands are configured on an interface on which IPv6 is not running	-	"Enable IPv6 on the interface"
NTP-5-PEERSYNC	5-Notice	NTP synced to peer %i	NTP has synchronized the local clock to a new peer.	-	LOG_SID_NO_ACTION
NTP-5-PEERSYNC	5-Notice	NTP synced to peer %i	NTP has synchronized the local clock to a new peer.	-	LOG_SID_NO_ACTION
NTP-6-PEERREACH	6-Information	Peer [node] is reachable	The NTP peer is reachable.	-	LOG_SID_NO_ACTION
NTP-6-PEERREACH	6-Information	Peer [node] is reachable	The NTP peer is reachable.	-	LOG_SID_NO_ACTION
NTP-6-RESTART	6-Information	NTP process starts	NTP process has just started or re-started.	-	LOG_SID_NO_ACTION
NTP-6-RESTART	6-Information	NTP process starts	NTP process has just started or re-started.	-	LOG_SID_NO_ACTION
NTP-6-STOP	6-Information	NTP process stops	NTP is disabled.	-	"Check if NTP is disabled by administrator purposely."
NTP-6-STOP	6-Information	NTP process stops	NTP is disabled.	-	"Check if NTP is disabled by administrator purposely."
NULLMACHINE	3-Error	ERRMSG_NOFLAGS	-	-	-
NULLMACHINE	3-Error	ERRMSG_NOFLAGS	-	-	-



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
Nullsbfor[chars]	The hwidb subblock is NULL	c7600-sip-200	"This is a internal software error. Decode the " "traceback and get the output of <CmdBold>show " "running<NoCmdBold> " "and <CmdBold>show tech<NoCmdBold> details."	-	-
NWPI_PROXY2IPC_INT	2-Critical	IPC message handler registration failure rc %u	Registering an IPC message handler for the NWPI feature failed. This will cause the feature to not function.	NWPI_COMP_NAME	"This is normally a software issue. " "The consequences are that the NWPI feature will not function. " LOG_STD_ACTION
<del>NWPI_PROXY_IPC_EXTEND</del>	3-Error	QFP NWPI Proxy IPC Domain mem extend failed	Extending memory failed.	NWPI_COMP_NAME	LOG_STD_ACTION
<del>NWPI_PROXY_IPC_REQ</del>	3-Error	QFP NWPI Proxy IPC Domain mem req failed	Requesting more memory failed.	NWPI_COMP_NAME	LOG_STD_ACTION
<del>NWPI_PROXY_IPC_ALLOC</del>	3-Error	CPP NWPI Proxy [chars] message lost due to message buffer allocation failure.	Proxy internal software error. QFP NWPI Proxy message processing detected a message buffer allocation failure. The message is lost as the result of this condition.	NWPI_COMP_NAME	"This is normally a software issue. " LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
NWPI_PROXY3IPC_NORES	3-Error	No space for the IPC reply size %u	For a request from upper NWPI software stack layers it was not possible to allocate space for a reply for the specified size. The consequence of this could be a stuck monitor that cannot be established etc. In rare cases this could also affect other operations such as feature activation.	NWPI_COMP_NAME	"This is normally a software issue. " LOG_SID_RECUR_ACTION
NWPI_PROXY3COPENREPLY	3-Error	IPC Open Reply failed request %u	For a request from upper NWPI software stack layers it was not possible to open the reply buffer. The consequence of this could be a stuck monitor that cannot be established etc. In rare cases this could also affect other operations such as feature activation.	NWPI_COMP_NAME	"This is normally a software issue. " LOG_SID_RECUR_ACTION
NWPI_PROXY3CSNDFAILD	3-Error	QFP NWPI Proxy [chars] message lost due to message sent failure result: [dec].	Cisco internal software error. QFP NWPI Proxy message processing detected a message sent failure. The message is lost as the result of this condition.	NWPI_COMP_NAME	"This is normally a software issue. " LOG_SID_RECUR_ACTION
NWPI_PROXY4NADMVLEN	4-Warning	QFP NPWI Proxy IPC invalid length [dec]:[dec] len [dec] flags 0x[hec] source [dec]	Cisco internal software error. QFP NPWI Proxy received invalid IPC message length from control plane. This message will be ignored.	NWPI_COMP_NAME	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OBFLRMVGHICREAHAL	5-Notice	OBFL [chars] App failed to open/create file [chars] . Errno = [dec]	The file O_CREATE operation failed	obfl	LOG_SID_NO_ACTION
OBFLRMVGHISFATAL	5-Notice	OBFL [chars] App failed to fstat file [chars] . Errno = [dec]	The file fstat operation failed	obfl	LOG_SID_NO_ACTION
OBFLRMVGHISLHAL	5-Notice	OBFL [chars] App failed to Lseek file [chars] . Errno = [dec]	The file lseek operation failed	obfl	LOG_SID_NO_ACTION
OBFLRMVGHIMNHAL	5-Notice	OBFL [chars] App failed to set coalesce min free	Failed to set coalesce min free value	obfl	LOG_SID_NO_ACTION
OBFLRMVGHIOENAL	5-Notice	OBFL [chars] App failed to open file [chars] . Errno = [dec]	The file open operation failed	obfl	LOG_SID_NO_ACTION
OBFLRMVGHIREADAL	5-Notice	OBFL [chars] App read failure on file [chars] . Errno = [dec]	The file read operation failed	obfl	LOG_SID_NO_ACTION
OBFLRMVGHISHMAL	5-Notice	OBFL [chars] App: history file is exceedingly small	The history file for this app has been detected to be very small	obfl	LOG_SID_NO_ACTION
OBFL3BFLASHINTERR	3-Error	Failed to initialize the PRE5 OBFL storage device.	PRE5 OBFL storage device init failed.	cr10k5	LOG_STD_ACTION
OBFL-5-DISABLED	5-Notice	Onboard Failure Logging disabled	Onboard Failure Logging has been disabled	obfl	LOG_SID_NO_ACTION
OBFL6CHSENSORACCESS	6-Information	PRE5 OBFL: [chars] sensor access failure for sensor [chars]ID:[dec]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OBFL#OBFLSICRACCESS	6-Information	PRE5 OBFL: [chars] operation on OBFL storage failed OBFL address: 0x[node]num bytes: [dec]	PRE5 OBFL flash access error.	cr10k5	LOG_STD_ACTION
OBIGROUP3CLASSMAP	3-Error	Failed to perform classmap filter [chars] operation	Operation to modify classmap filter has failed.	asr1k-cts	LOG_STD_ACTION
OBIGROUP3CREATEFAIL	3-Error	Failed to create/initialize internal data structures	Operation to create/initialize internal data structures has failed.	asr1k-cts	LOG_STD_ACTION
OBJGROUP-3-QFAIL	3-Error	Failed to perform queue operation [chars]	Operation to perform processing on internal queue has failed.	asr1k-cts	LOG_STD_ACTION
OBIGROUP4BADCHILD	4-Warning	Object-group [chars] has bad child [chars]	Object-group has reference to invalid child object-group	asr1k-cts	LOG_STD_ACTION
OBIGROUP4BADCLASSMAP	4-Warning	Internal match structure points to invalid class-map [chars]	Object-group has reference to invalid child object-group	asr1k-cts	LOG_STD_ACTION
OBIGROUP4BADMATCH	4-Warning	Invalid internal match structure in class-map [chars] type %u	Object-group has reference to invalid match	asr1k-cts	LOG_STD_ACTION
OBJGROUP-4-BADOG	4-Warning	Reference to non-existent object-group [chars]	Internal structure references non-existent object-group	asr1k-cts	LOG_STD_ACTION
OBIGROUP4BADREFCNT	4-Warning	Bad reference counter classmap [chars] sgtid [node]filter %u	Reference counter value indicates database inconsistency.	asr1k-cts	LOG_STD_ACTION
OBJGROUP-4-EINVAL	4-Warning	Unexpected input value	An unexpected input value to a function was incorrect	asr1k-cts	LOG_STD_ACTION
OBIGROUP4INVALIDCMD	4-Warning	Invalid subcommand %u	Attempt to configure invalid subcommand	asr1k-cts	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OBGRUP4INVALIDHTER	4-Warning	Invalid filter type [node]for classmap '[chars]'	Filter type for match statement was unknown/invalid.	asr1k-cts	LOG_STD_ACTION
OBGRUP4COMANSGT	4-Warning	Exceeded maximum allowed SGT's [node]in a class-map group-object	Local domain pattern length cannot exceed 100 for DSA.	xe-opendns-conn	"This message is for informational purposed only"
OC3SIM1CCHOSTERR	CHOCX controller or channel memory allocation failure	c7600-sip-200	"This is a internal software error. Decode the " "traceback. Enable <CmdBold>debug hw-module subslot " "<slot>/<bay> oir plugin<NoCmdBold> when the problem " "is happening. Check Bug Toolkit before calling the " "TAC. When calling the TAC please provide the above" "information along with output of <CmdBold>show " "logging<NoCmdBold> and the output of <CmdBold>show " "tech<NoCmdBold> details."	-	-
OCFWARDINGASRUPAHR	2-Critical	FRR OCE node protection error no backup label	No backup label available for FRR when node protection is invoked	cpp-ucode	LOG_STD_ACTION
OCFWARDINGASRSPHR	2-Critical	Illegal FRR OCE state - FRR OCE state = [dec]	Invalid FRR OCE state	cpp-ucode	LOG_STD_ACTION
OCFWARDINGASILCAHR	2-Critical	ILLEGAL OCE - unexpected oce	This object should not be seen by the forwarding code	cpp-ucode	LOG_STD_ACTION
OCFWARDINGASOINKPHR	2-Critical	LINKTYPE ERROR OCE - Linktype error in oce	Link type not supported in OCE	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OCEWRMNGASCFVHR</del>	3-Error	IPv6 not supported dropping packet	IPV6 over MPLS not supported	cpp-ucode	LOG_STD_ACTION
<del>OCEWRMNGASCFEAD</del>	3-Error	hash table not initialized	OCE adjacency id handle hash table not initialized	cpp-ucode	LOG_STD_ACTION
<del>OCEWRMNGASCFBHR</del>	3-Error	OCE Bundle unsupported link error [chars] 0x[hex]	OCE Bundle unsupported link error	cpp-ucode	LOG_STD_ACTION
<del>OCEWRMNGASCFCHR</del>	3-Error	OCE chain error dropping packet	OCE chain pointer contain an error	cpp-ucode	LOG_STD_ACTION
<del>OCEWRMNGASCFDHR</del>	3-Error	OCE Choice unsupported link error [chars] 0x[hex]	OCE Choice unsupported link error	cpp-ucode	LOG_STD_ACTION
<del>OCEWRMNGASCFEHR</del>	3-Error	OCE counter stack exceed	OCE counter exceed the allocated stack size	cpp-ucode	LOG_STD_ACTION
<del>OCEWRMNGASCFEAD</del>	3-Error	unexpected subtype	OCE adjacency id - unknown fixup subtype	cpp-ucode	LOG_STD_ACTION
<del>OCEWRMNGASCFEAD</del>	3-Error	[chars]	MPLS label cache was invalid failed to handle exception	mpls-mfi	LOG_STD_ACTION
<del>OCEWRMNGASCFEAD</del>	3-Error	[chars]	MPLS label cache was invalid failed to handle exception	mpls-mfi	LOG_STD_ACTION
<del>OCEWRMNGASCFEAD</del>	3-Error	[chars] [dec]	Resource Failure: [chars] [dec]	mpls-mfi	LOG_STD_ACTION
<del>OCEWRMNGASCFEAD</del>	3-Error	[chars] [dec]	Resource Failure: [chars] [dec]	mpls-mfi	LOG_STD_ACTION
<del>OCEWRMNGASCFEAD</del>	3-Error	Try to decrease zero refcount for [chars] oce %p	Attempt to decrease the refcount of oce when it is already zero	OCE_DDIS_COMPONENT	LOG_STD_ACTION
<del>OCEWRMNGASCFEAD</del>	3-Error	Try to decrease zero refcount for [chars] oce %p	Attempt to decrease the refcount of oce when it is already zero	OCE_DDIS_COMPONENT	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OCEXCHDOCECONIRIM</del>	3-Error	Exceeded OCE push counter limit funct:[node]counter:%p	-	-	-
<del>OCEXCHDOCECONIRIM</del>	3-Error	Exceeded OCE push counter limit funct:[node]counter:%p	-	-	-
OCE-3-GENERAL	3-Error	[chars]	An internal software error occurred.	OCE_DDIS_COMPONENT	LOG_STD_ACTION
OCE-3-GENERAL	3-Error	[chars]	An internal software error occurred.	OCE_DDIS_COMPONENT	LOG_STD_ACTION
<del>OENRUPUMLASIOK</del>	3-Error	Try to remove last lock for [chars] oce [node]at interrupt	Attempt to delete oce while not at process level	OCE_DDIS_COMPONENT	LOG_STD_ACTION
<del>OENRUPUMLASIOK</del>	3-Error	Try to remove last lock for [chars] oce [node]at interrupt	Attempt to delete oce while not at process level	OCE_DDIS_COMPONENT	LOG_STD_ACTION
OCE-3-LOOP	3-Error	A loop in the OCE chain has been detected at: [chars][[node]	A loop in the OCE chain has been detected	OCE_DDIS_COMPONENT	LOG_STD_ACTION
OCE-3-LOOP	3-Error	A loop in the OCE chain has been detected at: [chars][[node]	A loop in the OCE chain has been detected	OCE_DDIS_COMPONENT	LOG_STD_ACTION
<del>OEMSGHANDERSVCE</del>	3-Error	Missing handler for '[chars]' function	An internal API request has been ignored because it was unexpected	OCE_DDIS_COMPONENT	LOG_STD_ACTION
<del>OEMSGHANDERSVCE</del>	3-Error	Missing handler for '[chars]' function	An internal API request has been ignored because it was unexpected	OCE_DDIS_COMPONENT	LOG_STD_ACTION
<del>OEMSGHANDERSVCE</del>	3-Error	Missing handler for '[chars]' function for type [chars]	An internal API request has been ignored because it was unexpected	OCE_DDIS_COMPONENT	LOG_STD_ACTION
<del>OEMSGHANDERSVCE</del>	3-Error	Missing handler for '[chars]' function for type [chars]	An internal API request has been ignored because it was unexpected	OCE_DDIS_COMPONENT	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OCE3OCEBYAPMCON</del>	3-Error	Target OCE [node]changed to [node]by apply function %p	An internal disposition counter measure request has been ignored because it was unexpected	OCE_DDIS_COMPONENT	LOG_STD_ACTION
<del>OCE3OCEBYAPMCON</del>	3-Error	Target OCE [node]changed to [node]by apply function %p	An internal disposition counter measure request has been ignored because it was unexpected	OCE_DDIS_COMPONENT	LOG_STD_ACTION
OCE3OCESET_WRONGPAH	3-Error	Attempting to add an oce to the set contributed by path/list [node][node]while set set belongs to %p	Failed to enqueue a unlock for an oce this may lead to a memory leak	OCE_DDIS_COMPONENT	LOG_STD_ACTION
OCE3OCESET_WRONGPAH	3-Error	Attempting to add an oce to the set contributed by path/list [node][node]while set set belongs to %p	Failed to enqueue a unlock for an oce this may lead to a memory leak	OCE_DDIS_COMPONENT	LOG_STD_ACTION
OCE3-OCEDEPDUMP	3-Error	[chars]	An error condition triggered display of oce dependents	OCE_DDIS_COMPONENT	LOG_STD_ACTION
OCE3-OCEDEPDUMP	3-Error	[chars]	An error condition triggered display of oce dependents	OCE_DDIS_COMPONENT	LOG_STD_ACTION
OCE3QUEUE_UNLOCK	3-Error	Failed to [chars] unlock[chars] for [chars] oce %p	Failed to enqueue a unlock for an oce this may lead to a memory leak	OCE_DDIS_COMPONENT	LOG_STD_ACTION
OCE3QUEUE_UNLOCK	3-Error	Failed to [chars] unlock[chars] for [chars] oce %p	Failed to enqueue a unlock for an oce this may lead to a memory leak	OCE_DDIS_COMPONENT	LOG_STD_ACTION
OCE3UNINITIALIZEDVECTOR	3-Error	Improperly initialized [chars] vector in [chars] OCE bundle [node] packet dropped	An OCE bundle vector was improperly initialized	OCE_DDIS_COMPONENT	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OCEUNINITIALIZED_VECTOR</del>	3-Error	Improperly initialized [chars] vector in [chars] OCE bundle [node] packet dropped	An OCE bundle vector was improperly initialized	OCEDDIS_COMPONENT	LOG_STD_ACTION
<del>OCCVWARNCVMWARNIN</del>	4-Warning	WARNING: [chars]	Warning message generated by Cavium hardware related to alignment issues	cpp-ucode	LOG_STD_ACTION
<del>OCCVWARNCVMWARNIN</del>	4-Warning	WARNING: [chars]	Warning message generated by Cavium hardware	cpp-ucode	LOG_STD_ACTION
<del>OCDDBNIBRNAL_ERR</del>	3-Error	[chars]	<del>OCDNIBREXPLANION</del>	ribinfra	<del>LOGSIDRECUR_ACTION</del>
<del>OCDDBNIBRNAL_ERR</del>	3-Error	[chars]	<del>OCDNIBREXPLANION</del>	ribinfra	<del>LOGSIDRECUR_ACTION</del>
<del>ODMERRCDMERRCDM</del>	3-Error	iosxe-p-db	Client (%s/%u) table [%s/%s] registration DB [%s] is not found in server configuration	ODM client is registering its monitored TDL database tables to ODM server daemon. But ODM server daemon doesn't have requested (consolidated) database information.	LOG_STD_ACTION
<del>ODMERRCDMERRCDM</del>	3-Error	iosxe-p-db	Client (%s/%u) table [%s/%s] registration table is not found in server DB [%s] configuration	ODM client is registering its monitored TDL database tables to ODM server daemon. But ODM server daemon doesn't have requested table information in consolidated database.	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ODM3CPU_TEST_FAIL</del>	4-Warning	iosxe-p-db	Client (%s/%u) table [%s/%s] registration table configuration (0x%x) mis-matched with server configuration (0x%x)	ODM client is registering its monitored TDL database tables to ODM server daemon. But ODM table configuration is not matched between client and server.	LOG_STD_ACTION
ODM3CPU_TEST_FAIL	3-Error	CPU card[chars] [chars] Failed	Online diagnostic test failed for this CPU	-	LOG_STD_ACTION
ODM3DIAG_DISABLE	3-Error	Online Diags disabled for all slots without specific config	Online Diagnostic tests were disabled for all slots except those with specific config	-	LOG_STD_ACTION
ODM3DIAG_ENABLE	3-Error	Online Diags enabled for all slots without specific config	Online Diagnostic tests were enabled for all slots except those with specific config	-	LOG_STD_ACTION
ODM3LC_DIAGS_DISABLED	3-Error	Slot [dec] after [dec] Failures	Online diagnostic tests were disabled because of \n\ multiple failures	-	LOG_STD_ACTION
ODM3LC_TEST_FAIL	3-Error	Slot [dec] [chars] [chars] Failed	Online diagnostic test failed for the card	-	LOG_STD_ACTION
ODM3HR_NCOMPABLE	3-Error	Online Diags Peer Version is different	Version of the peer Online Diagnostics Manager is different	-	LOG_STD_ACTION
ODM3SC_DIAGS_DISABLED	3-Error	Slot [dec] Subcard [dec] after [dec] Failures	Online diagnostic tests were disabled because of \n\ multiple failures	-	LOG_STD_ACTION
ODM3SC_TEST_FAIL	3-Error	Slot [dec] Subcard [dec][chars] [chars] Failed	Online diagnostic test failed for the subcard	-	LOG_STD_ACTION
OER_BR-1-ALERT	1-Alert	NULL	-	oer	""

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OER_BR-1-ALERT	1-Alert	NULL	-	oer	""
OER_BR-3-ERROR	3-Error	NULL	-	oer	""
OER_BR-3-ERROR	3-Error	NULL	-	oer	""
<del>OER_BR-3-INTERNAL_ERROR</del>	3-Error	[chars]:[chars]	-	PfR	""
<del>OER_BR-3-INTERNAL_ERROR</del>	3-Error	[chars]:[chars]	-	PfR	""
OER_BR-4-WARNING	4-Warning	NULL	-	oer	""
OER_BR-4-WARNING	4-Warning	NULL	-	oer	""
OER_BR-5-NOTICE	5-Notice	NULL	-	oer	""
OER_BR-5-NOTICE	5-Notice	NULL	-	oer	""
OER_BR-6-INFO	6-Information	NULL	-	oer	""
OER_BR-6-INFO	6-Information	NULL	-	oer	""
OER_MC-0-EMERG	0-Emergency	NULL	-	oer	""
OER_MC-0-EMERG	0-Emergency	NULL	-	oer	""
OER_MC-1-ALERT	1-Alert	NULL	-	oer	""
OER_MC-1-ALERT	1-Alert	NULL	-	oer	""
OER_MC-3-ERROR	3-Error	NULL	-	oer	""
OER_MC-3-ERROR	3-Error	NULL	-	oer	""
OER_MC-4-WARNING	4-Warning	NULL	-	oer	""
OER_MC-4-WARNING	4-Warning	NULL	-	oer	""
OER_MC-5-NOTICE	5-Notice	NULL	-	oer	""
OER_MC-5-NOTICE	5-Notice	NULL	-	oer	""
OER_MC-6-INFO	6-Information	NULL	-	oer	""
OER_MC-6-INFO	6-Information	NULL	-	oer	""
<del>OER_MC-2-CRITICAL</del>	2-Critical	Error initializing OER TT Flow BR cache	Initialization of the OER TT Flow BR cache could not be accomplished because of a low memory condition.	-	"Reduce other system activity to ease memory demands. If conditions " "warrant upgrade to a larger memory configuration."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRITICAL</del> <del>CRITICAL</del> <del>CRITICAL</del>	2-Critical	Error initializing OER TT Flow BR cache	Initialization of the OER TT Flow BR cache could not be accomplished because of a low memory condition.	-	"Reduce other system activity to ease memory demands. If conditions " "warrant upgrade to a larger memory configuration."
<del>CRITICAL</del> <del>CRITICAL</del> <del>CRITICAL</del>	2-Critical	Error initializing OER TT Flow BR Export queue	Initialization of the OER TT Flow BR export queue could not be accomplished because of a low memory condition.	-	"Reduce other system activity to ease memory demands. If conditions " "warrant upgrade to a larger memory configuration."
<del>CRITICAL</del> <del>CRITICAL</del> <del>CRITICAL</del>	2-Critical	Error initializing OER TT Flow BR Export queue	Initialization of the OER TT Flow BR export queue could not be accomplished because of a low memory condition.	-	"Reduce other system activity to ease memory demands. If conditions " "warrant upgrade to a larger memory configuration."
<del>CRITICAL</del> <del>CRITICAL</del> <del>CRITICAL</del>	4-Warning	Error exporting [chars]	flows to RP	-	LOG_SID_DBG_ACTION
<del>CRITICAL</del> <del>CRITICAL</del> <del>CRITICAL</del>	4-Warning	Error exporting [chars]	flows to RP	-	LOG_SID_DBG_ACTION
OFP-3-ASSERT	3-Error	[chars]	OpenFlow Agent has experienced an internal software problem.	openflow-agent	LOG_STD_ACTION
OFP-3-ASSERT	3-Error	[chars]	OpenFlow Agent has experienced an internal software problem.	openflow-agent	LOG_STD_ACTION
OFP-3-ERR	3-Error	[chars]	OpenFlow Agent has experienced an internal software problem.	openflow-agent	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OFP-3-ERR	3-Error	[chars]	OpenFlow Agent has experienced an internal software problem.	openflow-agent	LOG_STD_ACTION
OFP-4-WARN	4-Warning	[chars]	OpenFlow Agent warning information action may be required.	openflow-agent	LOG_STD_ACTION
OFP-4-WARN	4-Warning	[chars]	OpenFlow Agent warning information action may be required.	openflow-agent	LOG_STD_ACTION
OFP-5-CONFIG	5-Notice	[chars]	OpenFlow Agent information usually configuration command.	openflow-agent	"None"
OFP-5-CONFIG	5-Notice	[chars]	OpenFlow Agent information usually configuration command.	openflow-agent	"None"
OFP-6-INFO	6-Information	[chars]	OpenFlow Agent information action may not be required.	openflow-agent	"None"
OFP-6-INFO	6-Information	[chars]	OpenFlow Agent information action may not be required.	openflow-agent	"None"
OIR-3-BADFPGAIMG	3-Error	Controller in slot [dec] does not have a valid FPGA image	Invalid FPGA image in slot\n	-	"Contact customer support."
OIR-3-BADIDPROM	3-Error	IDPROM in slot [dec] not properly programmed	IDPROM is not programmed correctly	-	"Contact customer support."
OIR-3-CRASH	3-Error	The module in slot [dec] has crashed	The module in the slot indicated has crashed and will be rebooted by\n the supervisor.	-	"Collect the crashinfo file from the crashed module and contact\n support."
OIR-3-DEACTIVATED	3-Error	Slot [dec] [chars] [dec]: subcard [dec] deactivated	Deactivated subcard in a slot	-	""

Family-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OIR-3-DETECT	3-Error	Detected [chars] in slot [dec]	Type of card detected in slot\n	-	""
<del>OIR-3-INVALID_LRC_COMBINATION</del>	3-Error	Invalid alert combination received with lrc version [dec] src version [dec]	Invalid LRC alert combination\n	-	""
<del>OIR-3-INVALID_LRC_FORMAT</del>	3-Error	Invalid LRC alert format received from slot [dec] format [hex]	Invalid LRC alert format\n	-	""
<del>OIR-3-INVALID_OIR_TYPE</del>	3-Error	Invalid operation on slot [dec] op_type [hex]	Invalid operation type from SRC/LRC\n	-	""
<del>OIR-3-LINE_CARD_NOT_READY</del>	3-Error	Line card in slot [dec] not becoming ready after OIR	After OIR Line is not becoming ready\n	-	"Contact customer support."
OIR-3-LONGSTALL	3-Error	Long bus stall [node]ms check for improperly seated cards	An online insertion or removal of an interface processor card has stalled the backplane bus for longer duration than expected.	-	"Make sure all interface processor cards are inserted or removed. " LOG_SID_ACTION_ERR
<del>OIR-3-OSC_SUBCARD_INSERT</del>	3-Error	Slot [dec] [chars] [dec]: subcard [dec] inserted	OSC Subcard detected in slot\n	-	""
<del>OIR-3-OSC_SUBCARD_REMOVE</del>	3-Error	Slot [dec] [chars] [dec]: subcard [dec] removed	OSC Subcard removed from slot	-	""
<del>OIR-3-PSM_SUBCARD_INSERT</del>	3-Error	Slot [dec] [chars] [dec]: subcard [dec] inserted	PSM Subcard detected in slot\n	-	""
<del>OIR-3-PSM_SUBCARD_REMOVE</del>	3-Error	Slot [dec] [chars] [dec]: subcard [dec] removed	PSM Subcard removed from slot	-	""
OIR-3-REMOVE	3-Error	Removed [chars] in slot [dec]	Type of card removed from slot	-	""

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OR3RF_REGSIRIN_FAILED	3-Error	OIR Client failed to register with RF	Due to some error OIR Client Failed to register with the RF	-	"Contact customer support."
OIR-3-SEATED	3-Error	Insert/removal failed for slot [dec] check card seating	The OIR facility detected an incorrectly seated card\n causing the insertion or removal of this card to fail.	-	"Reseat the card in the indicated slot."
OIR-3-SUBCARD_BAD	3-Error	Slot [dec] [chars] [dec]: subcard [dec] does not meet operating specifications	Subcard does not meet operating specifications	-	"Contact customer support."
OR3SUBCARD_BADIDROM	3-Error	Slot [dec] [chars] [dec]: subcard [dec] IDPROM not programmed correctly	IDPROM is not programmed correctly	-	"Contact customer support."
OR3SUBCARD_BADPORT	3-Error	Slot [dec] [chars] [dec]: subcard [dec] did not initialize correctly	Subcard did not initialize correctly	-	"Contact customer support."
OIR3SUBCARD_DEACT	3-Error	Slot [dec]: [[chars] [dec]] subcards deactivated	Deactivated subcards in a slot	-	""
OIR-3-SUBCARD_DISC	3-Error	Slot [dec]: [[chars] [dec]] subcards discovery	Discovered subcards in a slot	-	""
OR3SUBCARD_SCANERR	3-Error	Error in scanning subcards in slot [dec]	Error in scanning subcards\n	-	""
OIR3SUBCARDDETECT	3-Error	Slot [dec] [chars] [dec]: subcard [dec] inserted	Type of card detected in slot\n	-	""
OR3SUBCARDREMOVE	3-Error	Slot [dec] [chars] [dec]: subcard [dec] removed	Type of card removed from slot	-	""
OIR-3-XCVRDETECT	3-Error	Slot [dec] Subcard [dec] port [dec]: line transceiver inserted	Type of card detected in slot\n	-	""

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OIR-3-XCVRREMOVE	3-Error	Slot [dec] Subcard [dec] port [dec]: line transceiver removed	Type of card removed from slot	-	""
OIR-4-NOEOIR	4-Warning	[chars] [chars] version [node][node]not capable of EOIR	-	-	"Try to restrict insertion or removal of this card to times when a\n\ CBUS complex restart will be least disruptive.\n\ Or upgrade the card to the latest revision which supports EOIR."
OIR-6-INSCARD	6-Information	Card inserted in slot [dec] interfaces administratively shut down	The OIR facility detected a newly inserted processor. The interfaces associated with that processor are operational but will be shut down until they are configured by the user. If any interfaces of that type were previously configured they will be restored to their previous state.	-	LOG_SID_NO_ACTION
OIR-6-REMCARD	6-Information	Card removed from slot [dec] interfaces disabled	The OIR facility detected the removal of a processor from the slot number specified in the error message. The interfaces on that processor will be administratively shut down and marked as removed. The routing table will be flushed of any routes through the removed interfaces.	-	LOG_SID_NO_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OIRLIB-4-NOTRACE	4-Warning	OIR-LIB trace initialization failed[dec]	-	-	
OIRLIB-4-NOTRACE	4-Warning	OIR-LIB trace initialization failed[dec]	-	-	
OLM-3-LMPNONBR	3-Error	Internal error: Couldn't find neighbor while [chars]	An LMP processing that requires to access information about the neighbor has found that no such neighbor exists. This could be due to internal error.	ocp	"Turn on generic and packet level debugging using "the command debug ip lmp and gather LMP configuration using the "command show ip olm and gather the displayed information and "contact Cisco technical assistance."
OLM-3-LMPSDMISMATCH	3-Error	Service Discovery: Attribute [chars] incompatible with neighbor [chars]	Specified service attribute does not match with neighbor. The neighbor and/or the local node may not be properly configured.	ocp	""
OLM-3-LMPSPORIFAILED	3-Error	Service Discovery: Attributes for port [chars] incompatible with nbr [chars]	Port-level service attribute does not match with those of the neighbor. The neighbor and/or the local node may not be properly configured.	ocp	""
OLM-3-LMPSENDFAIL	3-Error	Failed to send LMP msg to [chars]	-	ocp	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OLM-5-LMPMSGSEQ	5-Notice	LMP [chars] msg id [node]not 1+%u	An LMP message has been received with message id that is not sequential within the Control channel or TE Link. This situation is not caused by the known cases that cause message id sequence to be broken including local node reboot neighbor node reboot and neighbor retransmission	ocp	"Enter the show ip olm stat command when this " "problem occurs and gather the information displayed and call the " "Cisco technical assistance."
OLM-5-LMPNONBRI	5-Notice	No such neighbor to assign	An internal consistency error has been encountered during the said processing.	ocp	LOG_STD_ACTION
OLM-5-LMPUNKSRC	5-Notice	LMP rcvd msg from unknown src ip 0x[node]link %	An LMP message has been received with invalid TLV length. This suggests that we have a broken LMP implementation on the sending neighbor.	ocp	"Locate the sending neighbor and turn on packet " "level debugging using the debug ip lmp packets command. On seeing " "an ill-formed LMP packet gather displayed information and contact " "the Cisco technical assistance."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OLM-5LSUMBADTEL	5-Notice	Invalid TE Link ID [node]in Link Summary message	This is generally caused by race conditions wherein an LMP message is received from a neighbor before the first control channel goes UP [locally]. This conditions usually happens when a node reboots.	ocp	"If the problem persists even after the node has " "completed initialization enter sho ip olm command to find the LMP " "configuration and use the debug ip lmp packets and debug ip lmp " "generic command to gather additional context type information and " "call Cisco technical assistance."
OLM-5LSUMMISMATCH	5-Notice	Link Summary parameter[chars] mismatch	An LMP message has been received with invalid message type. This suggests that we have a broken LMP implementation on the sending neighbor	ocp	"Locate the sending neighbor and turn on packet " "level debugging using the debug ip lmp packets command. On seeing " "an ill-formed LMP packet gather displayed information and contact " "the Cisco technical assistance."
OMP-3-ERR-SEARCHIAL	3-Error	Topo-id 0x[hec] - instance PDB search failure.	instance PDB search failure	cedge-routing	LOGSIDSHTTECHACION
OMP-3-ERR-SEARCHIAL	3-Error	Topo-id 0x[hec] - instance PDB search failure.	instance PDB search failure	cedge-routing	LOGSIDSHTTECHACION
OMP-3-ERR-SDWANMCAST	3-Error	Multicast messages [node]joins and [node]prunes dropped due to no OMP	SDWAN Multicast *G or SG messages were received from an	cedge-routing	"This can occur during transient conditions and " "should not be indicative of a failure unless " "there is also an SDWAN multicast outage."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>OMPENMCASINODEFL</del>	3-Error	Multicast messages [node]joins and [node]prunes dropped due to no OMP	SDWAN Multicast *G or SG messages were received from an	cedge-routing	"This can occur during transient conditions and " "should not be indicative of a failure unless " "there is also an SDWAN multicast outage."
<del>OMPENMCASINOREFL</del>	3-Error	No replicator selected for VPN-[node]d	SDWAN Multicast is configured but a reachable multicast replicator is not available.	-	"Assure an SDWAN multicast replicator is " "configured and reachable."
<del>OMPENMCASINOREFL</del>	3-Error	No replicator selected for VPN-[node]d	SDWAN Multicast is configured but a reachable multicast replicator is not available.	-	"Assure an SDWAN multicast replicator is " "configured and reachable."
<del>OMPENMCASIRLADFL</del>	3-Error	Topo-id: 0x[hec] - SDWAN multicast replicator [node]addition failed.	Intenal error - SDWAN multicast replicator could not be added.	cedge-routing	LOGSIDSHTTECHACION
<del>OMPENMCASIRLADFL</del>	3-Error	Topo-id: 0x[hec] - SDWAN multicast replicator [node]addition failed.	Intenal error - SDWAN multicast replicator could not be added.	cedge-routing	LOGSIDSHTTECHACION
<del>OMPENMCASIRPDEEFL</del>	3-Error	Topo-id: 0x[hec] - SDWAN multicast replicator [node]deletion failed.	Internal error -SDWAN multicast replicator could not be deleted.	cedge-routing	LOGSIDSHTTECHACION
<del>OMPENMCASIRPDEEFL</del>	3-Error	Topo-id: 0x[hec] - SDWAN multicast replicator [node]deletion failed.	Internal error -SDWAN multicast replicator could not be deleted.	cedge-routing	LOGSIDSHTTECHACION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OPCFBASSIOMMATH</del>	3-Error	Multicast spt-only [chars]abled locally and [chars]abled on SDWAN router [node]in VPN-[node]d	SDWAN Multicast spt-only mode must be configured consistently for all SDWAN multicast routers in the VPN. Failure to do will prevent Any Source Multicast ASM from functioning properly.	-	"Assure an SDWAN multicast spt-only mode is " "configured consistently."
<del>OPCFBASSIOMMATH</del>	3-Error	Multicast spt-only [chars]abled locally and [chars]abled on SDWAN router [node]in VPN-[node]d	SDWAN Multicast spt-only mode must be configured consistently for all SDWAN multicast routers in the VPN. Failure to do will prevent Any Source Multicast ASM from functioning properly.	-	"Assure an SDWAN multicast spt-only mode is " "configured consistently."
<del>OPCFBMEANINIA</del>	3-Error	Multi-Tenant initialization failure	SDWAN Multi-Tenant capability couldn't be initialized	-	"Examine other log messages to " "determine the reason for the failure."
<del>OPCFBMEANINIA</del>	3-Error	Multi-Tenant initialization failure	SDWAN Multi-Tenant capability couldn't be initialized	-	"Examine other log messages to " "determine the reason for the failure."
<del>OPCFBMEANTFOOD</del>	3-Error	Multi-Tenant tenant ID [node]not found on [chars]	SDWAN Multi-Tenant tenant not found in specified situation	cedge-routing	LOGSIDSHTECHACIION
<del>OPCFBMEANTFOOD</del>	3-Error	Multi-Tenant tenant ID [node]not found on [chars]	SDWAN Multi-Tenant tenant not found in specified situation	cedge-routing	LOGSIDSHTECHACIION
<del>OPCFBREDIEEAL</del>	3-Error	Topo-id 0x[hec] - Tree deletion failure for [chars].	Internal error - AVL tree deletion for specified object failed.	cedge-routing	LOGSIDSHTECHACIION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
OMPACNBREDEFIAL	3-Error	Topo-id 0x[hec] - Tree deletion failure for [chars].	Internal error - AVL tree deletion for specified object failed.	cedge-routing	LOG_SIDSH_TECH_ACTION
OMPACNBRENSRIAL	3-Error	Topo-id 0x[hec] - Tree insertion failure for [chars].	Internal error - AVL tree insertion for specified object failed.	cedge-routing	LOG_SIDSH_TECH_ACTION
OMPACNBRENSRIAL	3-Error	Topo-id 0x[hec] - Tree insertion failure for [chars].	Internal error - AVL tree insertion for specified object failed.	cedge-routing	LOG_SIDSH_TECH_ACTION
OMPACNBANCONMIAL	3-Error	Topo-id 0x[hec] - VPN Conversion failure for [chars].	Internal error - Topology to VPN conversion failure for specified object.	cedge-routing	LOG_SIDSH_TECH_ACTION
OMPACNBANCONMIAL	3-Error	Topo-id 0x[hec] - VPN Conversion failure for [chars].	Internal error - Topology to VPN conversion failure for specified object.	cedge-routing	LOG_SIDSH_TECH_ACTION
OMPACNBANNOIIOND	3-Error	Topo-id 0x[hec] - VPN for [chars] topo-id not found.	Internal error - VPN for the specified object's topology should exist but doesn't.	cedge-routing	LOG_SIDSH_TECH_ACTION
OMPACNBANNOIIOND	3-Error	Topo-id 0x[hec] - VPN for [chars] topo-id not found.	Internal error - VPN for the specified object's topology should exist but doesn't.	cedge-routing	LOG_SIDSH_TECH_ACTION
OMPACNBASINONNOIF	4-Warning	Topo-id 0x[hec] - [chars] C-Multicast route count off for SDWAN router [node] joins: [node]prunes: %u	SDWAN multicast count of active joins is off as it should never be negative.	cedge-routing	"This can occur during transient conditions and " "should not be indicative of a failure unless " "there is also an SDWAN multicast outage."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OPNEMASINCONOF	4-Warning	Topo-id 0x[hex] - [chars] C-Multicast route count off for SDWAN router [node] joins: [node]prunes: %u	SDWAN multicast count of active joins is off as it should never be negative.	cedge-routing	"This can occur during transient conditions and " "should not be indicative of a failure unless " "there is also an SDWAN multicast outage."
ONP_BASE3AUIHERR	3-Error	[[chars]]: Authentication/authorization failed. [chars]	The session authentication has failed	onep	"Check user's credentials are matched against the AAA/local " "users configured on the Netwk Element."
ONP_BASE3AUIHERR	3-Error	[[chars]]: Authentication/authorization failed. [chars]	The session authentication has failed	onep	"Check user's credentials are matched against the AAA/local " "users configured on the Netwk Element."
ONP_BASE3BUSY_ERR	3-Error	[[chars]]: The requested resource is currently busy. [chars].	The usage of the resource has exceeded the configured threshold value	onep	"Check the current resource usage and configured resource threshold." " cpu threshold rising <value> falling <value> interval <seconds>" "Retry the operation if resource usage is below the threshold."
ONP_BASE3BUSY_ERR	3-Error	[[chars]]: The requested resource is currently busy. [chars].	The usage of the resource has exceeded the configured threshold value	onep	"Check the current resource usage and configured resource threshold." " cpu threshold rising <value> falling <value> interval <seconds>" "Retry the operation if resource usage is below the threshold."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ONP_BASED_DISABLED_ERR	3-Error	[[chars]]: [chars] is disabled.	The requested service set is in disabled state. All the service requests for that service set will be rejected.	onep	"Make sure the service set is enabled. " "onep " " service set <name>"
ONP_BASED_DISABLED_ERR	3-Error	[[chars]]: [chars] is disabled.	The requested service set is in disabled state. All the service requests for that service set will be rejected.	onep	"Make sure the service set is enabled. " "onep " " service set <name>"
ONP_BASED_ULCAE_ERR	3-Error	[[chars]]: Requested entity [chars] already exists.	The connection request to the network element already exists	onep	"Make sure the uniqueness of the application name." "One session per application is allowed on a network element."
ONP_BASED_ULCAE_ERR	3-Error	[[chars]]: Requested entity [chars] already exists.	The connection request to the network element already exists	onep	"Make sure the uniqueness of the application name." "One session per application is allowed on a network element."
ONP_BASED_SESSION_ERR	3-Error	[[chars]]: ONEP session maximum is exceeded. [chars].	The application session has exceeded the configured maximum	onep	"Check the configured session maximum value and adjust accordingly." ">session max <value>" "Retry the session establishment or adjust the configured session maximum."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ONEP_BASE3SESSION_ERR	3-Error	[[chars]]: ONEP session maximum is exceeded. [chars].	The application session has exceeded the configured maximum	onep	"Check the configured session maximum value and adjust accordingly." ">session max <value>" "Retry the session establishment or adjust the configured session maximum."
ONEP_BASE3STARTUP_ERR	3-Error	[[chars]]: Start up ONEP failed. [chars].	Fail to start ONEP due to error	onep	"Check transport is configured correctly or reboot the device"
ONEP_BASE3STARTUP_ERR	3-Error	[[chars]]: Start up ONEP failed. [chars].	Fail to start ONEP due to error	onep	"Check transport is configured correctly or reboot the device"
ONEP_BASE3VERSION_ERR	3-Error	[[chars]]: ONE-P version incompatible between client and network element. [chars]	The ONE-P client service set version is incompatible with the one installed on the network element	onep	"Make sure the version running on the client side is compatible " "with the one installed on the network element "
ONEP_BASE3VERSION_ERR	3-Error	[[chars]]: ONE-P version incompatible between client and network element. [chars]	The ONE-P client service set version is incompatible with the one installed on the network element	onep	"Make sure the version running on the client side is compatible " "with the one installed on the network element "
ONEP_BASE3TRANSPORT_WARN	4-Warning	[[chars]]: Clear text transport being enabled. This is not recommended for production environment. [chars]	Clear text transport being enabled. This is not recommended for production environment.	onep	"Please configure secure transport such as TLS."
ONEP_BASE3TRANSPORT_WARN	4-Warning	[[chars]]: Clear text transport being enabled. This is not recommended for production environment. [chars]	Clear text transport being enabled. This is not recommended for production environment.	onep	"Please configure secure transport such as TLS."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ONEP_BASE6CONNECT	6-Information	[[chars]]: ONEP session [chars] has connected.	A new ONEP session has been established with network element.	onep	"No action is required if this is an authorized session."
ONEP_BASE6CONNECT	6-Information	[[chars]]: ONEP session [chars] has connected.	A new ONEP session has been established with network element.	onep	"No action is required if this is an authorized session."
ONEP_BASE6DISCONNECT	6-Information	[[chars]]: ONEP session [chars]	ONEP session has been disconnected. A disconnect can happen when application has finished execution or there was a problem during execution including issue with network transport. If reconnect timer is configured Network Element will wait for application to reconnect within configured time before cleaning up session resources.	onep	"No action is required if it is a expected disconnected. If reconnect" " timer is configured session will wait for application to attempt" " reconnect request" "Use show tech-support onep to collect logs from Network Element"
ONEP_BASE6DISCONNECT	6-Information	[[chars]]: ONEP session [chars]	ONEP session has been disconnected. A disconnect can happen when application has finished execution or there was a problem during execution including issue with network transport. If reconnect timer is configured Network Element will wait for application to reconnect within configured time before cleaning up session resources.	onep	"No action is required if it is a expected disconnected. If reconnect" " timer is configured session will wait for application to attempt" " reconnect request" "Use show tech-support onep to collect logs from Network Element"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ONEP_BASE6HISTORY	6-Information	[chars]	This syslog message is used to display onePK history messages when the 'history syslog' onep command is enabled.	onep	"No action is required. Use 'no history syslog' at the onep " "configuration prompt to turn off this logging if desired."
ONEP_BASE6HISTORY	6-Information	[chars]	This syslog message is used to display onePK history messages when the 'history syslog' onep command is enabled.	onep	"No action is required. Use 'no history syslog' at the onep " "configuration prompt to turn off this logging if desired."
ONEP_BASE6RECONNECT	6-Information	[[chars]]: ONEP session [chars] has reconnected.	ONEP session has been reconnected after being disconnected temporarily. This disconnect can happen due to intermittent network connectivity issues.	onep	"No action is required if this is an authorized session."
ONEP_BASE6RECONNECT	6-Information	[[chars]]: ONEP session [chars] has reconnected.	ONEP session has been reconnected after being disconnected temporarily. This disconnect can happen due to intermittent network connectivity issues.	onep	"No action is required if this is an authorized session."
ONEP_BASE6SS_DISABLED	6-Information	ONEP: [chars]	The service set has been set to a disabled state. All service requests for that service set will be rejected.	onep	"If the disablement was intentional no action is required." "If not then enable the service set:" "onep " " service set <name>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ONEP_BASE6SS_DISABLED	6-Information	ONEP: [chars]	The service set has been set to a disabled state. All service requests for that service set will be rejected.	onep	"If the disablement was intentional no action is required." "If not then enable the service set:" "onep " " service set <name>"
ONEP_BASE6SS_ENABLED	6-Information	ONEP: [chars]	The service set has been set to an enabled state. The features of the service set will be available for use.	onep	"If the enablement was intentional no action is required."
ONEP_BASE6SS_ENABLED	6-Information	ONEP: [chars]	The service set has been set to an enabled state. The features of the service set will be available for use.	onep	"If the enablement was intentional no action is required."
ONEP_LISP_DISABLED_ERR	3-Error	[[chars]]: [chars] is disabled.	The requested service set is in disabled state. All the service requests for that service set will be rejected.	onep	"Make sure the service set is enabled. " "onep " " service set lisp"
ONEP_LISP_DISABLED_ERR	3-Error	[[chars]]: [chars] is disabled.	The requested service set is in disabled state. All the service requests for that service set will be rejected.	onep	"Make sure the service set is enabled. " "onep " " service set lisp"
ONEP_LISP_DISABLED_ERR	3-Error	-	A new ONEP session has been established with network element.	SRVNAME_ONEP	"No action is required if this is an authorized session."
ONEP_LISP_DISABLED_ERR	3-Error	-	A new ONEP session has been established with network element.	SRVNAME_ONEP	"No action is required if this is an authorized session."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ONEP183DSABLED_ERR	3-Error	-	Administrator has disabled ONEP feature while application sessions were active. All active sessions have been terminated. To enable ONEP again use '\feature onep\' command in configuration mode.	SRVNAME_ONEP	"No action is required if this was deliberate operation. To enable " "ONEP again use '\feature onep\' command in configuration mode."
ONEP183DSABLED_ERR	3-Error	-	Administrator has disabled ONEP feature while application sessions were active. All active sessions have been terminated. To enable ONEP again use '\feature onep\' command in configuration mode.	SRVNAME_ONEP	"No action is required if this was deliberate operation. To enable " "ONEP again use '\feature onep\' command in configuration mode."
ONEP183DSABLED_ERR	3-Error	-	Clear text transport being enabled. This is not recommended for production environment.	SRVNAME_ONEP	"Please configure secure transport such as TLS."
ONEP183DSABLED_ERR	3-Error	-	Clear text transport being enabled. This is not recommended for production environment.	SRVNAME_ONEP	"Please configure secure transport such as TLS."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ONEP_IP3_DISABLED_ERR	3-Error	-	ONEP session has been disconnected. A disconnect can happen when application has finished execution or there was a problem during execution including issue with network transport. If reconnect timer is configured Network Element will wait for application to reconnect within configured time before cleaning up session resources.	SRVNAME_ONEP	"No action is required if it is a expected disconnected. " "Use show tech-support onep to collect logs from Network Element"
ONEP_IP3_DISABLED_ERR	3-Error	-	ONEP session has been disconnected. A disconnect can happen when application has finished execution or there was a problem during execution including issue with network transport. If reconnect timer is configured Network Element will wait for application to reconnect within configured time before cleaning up session resources.	SRVNAME_ONEP	"No action is required if it is a expected disconnected. " "Use show tech-support onep to collect logs from Network Element"
ONEP_IP3_DISABLED_ERR	3-Error	-	ONEP session has been reconnected after being disconnected temporarily. This disconnect can happen due to intermittent network connectivity issues.	SRVNAME_ONEP	"No action is required if this is an authorized session."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ONEP1S3DSABLED_ERR	3-Error	-	ONEP session has been reconnected after being disconnected temporarily. This disconnect can happen due to intermittent network connectivity issues.	SRVNAME_ONEP	"No action is required if this is an authorized session."
ONEP1S3DSABLED_ERR	3-Error	-	The connection request to the network element already exists	SRVNAME_ONEP	"Make sure the uniqueness of the application name." "One session per application is allowed on a network element."
ONEP1S3DSABLED_ERR	3-Error	-	The connection request to the network element already exists	SRVNAME_ONEP	"Make sure the uniqueness of the application name." "One session per application is allowed on a network element."
ONEP1S3DSABLED_ERR	3-Error	-	The Network Element and Persistent Storage for the running-config are out of sync. If no other error has occurred the Network Element configuration will take precedence.	SRVNAME_ONEP	"Try reconfiguring the item possibly using the [no] form to restore " "a default value if a new one doesn't take. The 'show running-config' " "command should be used to see if this error persists."
ONEP1S3DSABLED_ERR	3-Error	-	The Network Element and Persistent Storage for the running-config are out of sync. If no other error has occurred the Network Element configuration will take precedence.	SRVNAME_ONEP	"Try reconfiguring the item possibly using the [no] form to restore " "a default value if a new one doesn't take. The 'show running-config' " "command should be used to see if this error persists."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ONEP1P3DISABLED_ERR	3-Error	-	The Network Element and Persistent Storage for the running-config are out of sync. If no other error has occurred the Network Element configuration will take precedence.	SRVNAME_ONEP	"Try reconfiguring the item possibly using the [no] form to restore " "a default value if a new one doesn't take. The 'show running-config' " "command should be used to see if this error persists."
ONEP1P3DISABLED_ERR	3-Error	-	The Network Element and Persistent Storage for the running-config are out of sync. If no other error has occurred the Network Element configuration will take precedence.	SRVNAME_ONEP	"Try reconfiguring the item possibly using the [no] form to restore " "a default value if a new one doesn't take. The 'show running-config' " "command should be used to see if this error persists."
ONEP1P3DISABLED_ERR	3-Error	-	The ONE-P client service set version is incompatible with the one installed on the network element	SRVNAME_ONEP	"Make sure the version running on the client side is compatible " "with the one installed on the network element "
ONEP1P3DISABLED_ERR	3-Error	-	The ONE-P client service set version is incompatible with the one installed on the network element	SRVNAME_ONEP	"Make sure the version running on the client side is compatible " "with the one installed on the network element "



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ONEP_ISS3DISABLED_ERR	3-Error	-	The Onepsync ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	SRVNAME_ONEP	LOG_STD_ACTION
ONEP_ISS3DISABLED_ERR	3-Error	-	The Onepsync ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	SRVNAME_ONEP	LOG_STD_ACTION
ONEP_ISS3DISABLED_ERR	3-Error	-	The Onepsync ISSU client does not have a valid registered session.	SRVNAME_ONEP	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
ONEP_ISS3DISABLED_ERR	3-Error	-	The Onepsync ISSU client does not have a valid registered session.	SRVNAME_ONEP	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ONEP_ISSU_DISABLED_ERR	3-Error	-	The Onepsync ISSU client failed to calculate the MTU for the specified message. The Onepsync ISSU client is not able to send the message to the standby device.	SRVNAME_ONEP	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
ONEP_ISSU_DISABLED_ERR	3-Error	-	The Onepsync ISSU client failed to calculate the MTU for the specified message. The Onepsync ISSU client is not able to send the message to the standby device.	SRVNAME_ONEP	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
ONEP_ISSU_DISABLED_ERR	3-Error	-	The Onepsync ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	SRVNAME_ONEP	"show logging and show checkpoint client"
ONEP_ISSU_DISABLED_ERR	3-Error	-	The Onepsync ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	SRVNAME_ONEP	"show logging and show checkpoint client"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ONP1S3DSABLED_ERR	3-Error	-	The Onepsync ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	SRVNAME_ONEP	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
ONP1S3DSABLED_ERR	3-Error	-	The Onepsync ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	SRVNAME_ONEP	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
ONP1S3DSABLED_ERR	3-Error	-	The Onepsync ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	SRVNAME_ONEP	"show logging and show checkpoint client"
ONP1S3DSABLED_ERR	3-Error	-	The Onepsync ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	SRVNAME_ONEP	"show logging and show checkpoint client"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ONEP_ISS_DISABLED_ERR	3-Error	-	The Onepsync ISSU client failed to start session negotiation. If a problem occurs with the ISSU session start the standby device cannot be brought up properly.	SRVNAME_ONEP	"show issu session <client_id>"
ONEP_ISS_DISABLED_ERR	3-Error	-	The Onepsync ISSU client failed to start session negotiation. If a problem occurs with the ISSU session start the standby device cannot be brought up properly.	SRVNAME_ONEP	"show issu session <client_id>"
ONEP_ISS_DISABLED_ERR	3-Error	-	The Onepsync ISSU client failed to unregister session information.	SRVNAME_ONEP	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
ONEP_ISS_DISABLED_ERR	3-Error	-	The Onepsync ISSU client failed to unregister session information.	SRVNAME_ONEP	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
ONEP_ISS_DISABLED_ERR	3-Error	-	The Onepsync ISSU client received an incompatible message from the peer device. The message cannot be processed.	SRVNAME_ONEP	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
ONEP_ISS_DISABLED_ERR	3-Error	-	The Onepsync ISSU client received an incompatible message from the peer device. The message cannot be processed.	SRVNAME_ONEP	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ONEP_LISP3_DSABLED_ERR	3-Error	-	The requested service set is in disabled state. All the service requests for that service set will be rejected.	SRVNAME_ONEP	"Make sure the service set is enabled. " "connectedapps " " service set <name>"
ONEP_LISP3_DSABLED_ERR	3-Error	-	The requested service set is in disabled state. All the service requests for that service set will be rejected.	SRVNAME_ONEP	"Make sure the service set is enabled. " "connectedapps " " service set <name>"
ONEP_LISP3_DSABLED_ERR	3-Error	-	The requested service set is in disabled state. All the service requests for that service set will be rejected.	SRVNAME_ONEP	"Make sure the service set is enabled. " "connectedapps " " service set lisp"
ONEP_LISP3_DSABLED_ERR	3-Error	-	The requested service set is in disabled state. All the service requests for that service set will be rejected.	SRVNAME_ONEP	"Make sure the service set is enabled. " "connectedapps " " service set lisp"
ONEP_LISP3_DSABLED_ERR	3-Error	-	The service set has been set to a disabled state. All service requests for that service set will be rejected.	SRVNAME_ONEP	"If the disablement was intentional no action is required." "If not then enable the service set:" "onep " " service set <name>"
ONEP_LISP3_DSABLED_ERR	3-Error	-	The service set has been set to a disabled state. All service requests for that service set will be rejected.	SRVNAME_ONEP	"If the disablement was intentional no action is required." "If not then enable the service set:" "onep " " service set <name>"
ONEP_LISP3_DSABLED_ERR	3-Error	-	The service set has been set to an enabled state. The features of the service set will be available for use.	SRVNAME_ONEP	"If the enablement was intentional no action is required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ONEP1P3DISABLED_ERR	3-Error	-	The service set has been set to an enabled state. The features of the service set will be available for use.	SRVNAME_ONEP	"If the enablement was intentional no action is required."
ONEP1P3DISABLED_ERR	3-Error	-	The session authentication has failed	SRVNAME_ONEP	"Check user's credentials are matched against the AAA/local " "users configured on the Netwk Element."
ONEP1P3DISABLED_ERR	3-Error	-	The session authentication has failed	SRVNAME_ONEP	"Check user's credentials are matched against the AAA/local " "users configured on the Netwk Element."
ONEP1P3DISABLED_ERR	3-Error	-	The usage of the resource has exceeded the configured threshold value	SRVNAME_ONEP	"Check the current resource usage and configured resource threshold." " cpu threshold rising <value> falling <value> interval <seconds>" "Retry the operation if resource usage is below the threshold."
ONEP1P3DISABLED_ERR	3-Error	-	The usage of the resource has exceeded the configured threshold value	SRVNAME_ONEP	"Check the current resource usage and configured resource threshold." " cpu threshold rising <value> falling <value> interval <seconds>" "Retry the operation if resource usage is below the threshold."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ONEP_HIST_DISABLED_ERR	3-Error	-	This syslog message is used to display onePK history messages when the 'history syslog' onep command is enabled.	SRVNAME_ONEP	"No action is required. Use 'no history syslog' at the onep " "configuration prompt to turn off this logging if desired."
ONEP_HIST_DISABLED_ERR	3-Error	-	This syslog message is used to display onePK history messages when the 'history syslog' onep command is enabled.	SRVNAME_ONEP	"No action is required. Use 'no history syslog' at the onep " "configuration prompt to turn off this logging if desired."
ONEP_SYNC_ISSU_GET_BUF_ERR	2-Critical	Onepsync ISSU client failed to get buffer for message. Error: [dec] [chars]	The Onepsync ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	onep	"show logging and show checkpoint client"
ONEP_SYNC_ISSU_GET_BUF_ERR	2-Critical	Onepsync ISSU client failed to get buffer for message. Error: [dec] [chars]	The Onepsync ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	onep	"show logging and show checkpoint client"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ONEPSYNC_ISSU2-INT	2-Critical	Onepsync ISSU client initialization failed to [chars]. Error: [dec] [chars]	The Onepsync ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	onep	LOG_STD_ACTION
ONEPSYNC_ISSU2-INT	2-Critical	Onepsync ISSU client initialization failed to [chars]. Error: [dec] [chars]	The Onepsync ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	onep	LOG_STD_ACTION
ONEPSYNC_ISSU2-INT	2-Critical	Onepsync ISSU client failed to send negotiation message. Error: [dec] [chars]	The Onepsync ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	onep	"show logging and show checkpoint client"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ONEP_SYNC_ISSU_CLIENT</del>	2-Critical	Onepsync ISSU client failed to send negotiation message. Error: [dec] [chars]	The Onepsync ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	onep	"show logging and show checkpoint client"
<del>ONEP_ISSU_SESSION_START</del>	2-Critical	Failed to start Onepsync ISSU session negotiation. Error: [dec] [chars]	The Onepsync ISSU client failed to start session negotiation. If a problem occurs with the ISSU session start the standby device cannot be brought up properly.	onep	"show issu session <client_id>"
<del>ONEP_ISSU_SESSION_START</del>	2-Critical	Failed to start Onepsync ISSU session negotiation. Error: [dec] [chars]	The Onepsync ISSU client failed to start session negotiation. If a problem occurs with the ISSU session start the standby device cannot be brought up properly.	onep	"show issu session <client_id>"
<del>ONEP_ISSU_SESSION_REGISTER</del>	2-Critical	Onepsync ISSU client failed to register session information. Error: [dec] [chars]	The Onepsync ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	onep	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ONPSYNC_ISSU_NREGINFOV	2-Critical	Onepsync ISSU client failed to register session information. Error: [dec] [chars]	The Onepsync ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	onep	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
ONPSYNC_ISSU_NVALIDSSON	3-Error	Onepsync ISSU client does not have a valid registered session.	The Onepsync ISSU client does not have a valid registered session.	onep	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
ONPSYNC_ISSU_NVALIDSSON	3-Error	Onepsync ISSU client does not have a valid registered session.	The Onepsync ISSU client does not have a valid registered session.	onep	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
ONPSYNC_ISSU_NMGNOTICK	3-Error	Onepsync ISSU client 'Message Type [dec]' is not compatible	The Onepsync ISSU client received an incompatible message from the peer device. The message cannot be processed.	onep	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
ONPSYNC_ISSU_NMGNOTICK	3-Error	Onepsync ISSU client 'Message Type [dec]' is not compatible	The Onepsync ISSU client received an incompatible message from the peer device. The message cannot be processed.	onep	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ONEPSYNC_ISSU_MG_SIZE	3-Error	Onepsync ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The Onepsync ISSU client failed to calculate the MTU for the specified message. The Onepsync ISSU client is not able to send the message to the standby device.	onep	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
ONEPSYNC_ISSU_MG_SIZE	3-Error	Onepsync ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The Onepsync ISSU client failed to calculate the MTU for the specified message. The Onepsync ISSU client is not able to send the message to the standby device.	onep	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
ONEPSYNC_ISSU_UNREG	3-Error	Onepsync ISSU client failed to unregister session information. Error: [dec] [chars]	The Onepsync ISSU client failed to unregister session information.	onep	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
ONEPSYNC_ISSU_UNREG	3-Error	Onepsync ISSU client failed to unregister session information. Error: [dec] [chars]	The Onepsync ISSU client failed to unregister session information.	onep	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
COMMNO_MEMORY_RESET	0-Emergency	iosxe-binos-utils	The system is completely out of available memory. The board will be reset.	"The system has exhausted all available memory and the hardware component will be reset."	"Review other messages related to low memory states and see if those messages contain any information about an issue that can be addressed. If this problem persists
COMMNO_MEMORY_AAL	3-Error	iosxe-binos-utils	The system is very low on available memory. Operations will begin to fail.	"The system has exhausted all available memory. It is not possible to continue stable operation."	"The system has exhausted all available memory and stable operation is no longer possible."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OPENDNS_CPROVBLE</del>	2-Critical	UMBRELLA - Failed to register IPC message handler result code [node]	QFP Umbrella feature failed to register an IPC message handler for communication with control plane. This will cause the feature not to function.	OPENDNS_COMP_NAME	LOG_STD_ACTION
<del>OPENDNS_CPROVBLE</del>	3-Error	UMBRELLA - Failed to get [node]bytes space for IPC reply message	QFP Umbrella feature detected buffer allocation failure while sending reply to a message from another layer of Umbrella feature's software stack.	OPENDNS_COMP_NAME	LOG_STD_ACTION
<del>OPENDNS_CPROVBLE</del>	3-Error	-	Umbrella Conditional Debugging Registration failed.	OPENDNS_COMP_NAME	LOG_STD_ACTION
<del>OPENDNS_CPROVBLE</del>	3-Error	UMBRELLA - Received an invalid length IPC message	QFP Umbrella feature received an incorrect length of IPC message from another layer of Umbrella feature's software stack m_enum [dec] m_subtype [dec] m_len [dec] m_flags 0x[hec] m_source [dec].	OPENDNS_COMP_NAME	LOG_STD_ACTION
<del>OPENDNS_CPROVBLE</del>	3-Error	UMBRELLA - Failed to send IPC message result code [dec]	QFP Umbrella feature failed to send IPC message to another layer of Umbrella feature's software stack.	OPENDNS_COMP_NAME	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OPENDNS_CPY_ERR</del>	3-Error	UMBRELLA - Failed to open reply message part of IPC packet	QFP Umbrella feature failed to open message part of IPC packet while sending a reply to another layer of Umbrella feature's software stack.	OPENDNS_COMP_NAME	LOG_STD_ACTION
<del>OPENDNS_CPY_KO</del>	3-Error	UMBRELLA - Received an unknown type code [node]IPC message	QFP Umbrella feature received an unknown message from another layer of Umbrella feature's software stack.	OPENDNS_COMP_NAME	LOG_SID_RECUR_ACTION
<del>OPALARM_HH_ALARM</del>	3-Error	High Alarm Threshold for [chars] on port [chars] [chars]	High alarm threshold was exceeded.	-	LOG_STD_ACTION
<del>OPALARM_HH_WARN</del>	3-Error	High Warning Threshold for [chars] on port [chars] [chars]	High warning threshold was exceeded.	-	LOG_STD_ACTION
<del>OPALARM_LO_ALARM</del>	3-Error	Low Alarm Threshold for [chars] on port [chars] [chars]	Low alarm threshold was exceeded.	-	LOG_STD_ACTION
<del>OPALARM_LO_WARN</del>	3-Error	Low Warning Threshold for [chars] on port [chars] [chars]	Low warning threshold was exceeded.	-	LOG_STD_ACTION
OPTICAL_IF-1-ALARM	1-Alert	[chars] [chars]: [chars]	The specified Alarm has been declared or cleared	-	"Recommended action is to repair the source of the alarm."
<del>OPICAL_INTERNAL_ERROR</del>	3-Error	[chars]	The metopt subsystem encountered an internal software error. The error message contains text which can be used to help identify the nature of the problem.	-	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OPICAL_MONICR4-ALHD	4-Warning	[chars] [chars]	Monitoring cannot be turned on for rate specified with current h/w version.	-	LOG_STD_ACTION
OSC-3-DCDI	3-Error	INVALID	<del>DATA CORRUPTION</del> Software has detected that some internal data structures may be corrupt. This may lead to unpredictable device operation@Copy the error message exactly as it appears on the console or in the in the system log	-	-
OSCP3-INTERNAL_ERROR	3-Error	[chars] [hec]	An internal software error occurred. The message contains more\n\n information that can be used to identify the problem.	-	LOG_STD_ACTION
OSCP4-BADPACKET	4-Warning	Invalid pkt: [chars] [dec] [dec]	An invalid packet was received from a network peer.	-	"Check the originating device for a cause of the corrupted\n\n packets."
OSCP4-CONFIG_ERROR	4-Warning	Configuration Error: [chars]	This message indicates a configuration error in the OSCP subsystem.\n\n The message will display more specific information about the\n\n cause of problem.	-	"Change the configuration to correct the error."
OSCP-7-DEBUG	7-Debug	[chars]	This is an informational message only. It is used by Cisco\n\n for testing.	-	"Informational messages can be disabled by changing logging level."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSMUTINK</del> PROCESSAL	3-Error	Process creation failed for [chars]	A Process has failed to be created. The probable cause of this condition is that the system is low on memory.	<del>OSMUTINK</del> HOCTH03	"Reduce other system activity to ease memory demands. If conditions" " warrant upgrade to a larger memory configuration."
<del>OSMUTINK</del> BUNDEERR	4-Warning	Bundle[chars] is not distributed	The Bundle specified in the error message is not associated with the OSM.	<del>OSMUTINK</del> HOCTH03	LOGSIDSHTECHACI0N
<del>OSMUTINK</del> BUNDENIL	4-Warning	Unexpected bundle missing in [chars] searching for [chars]	A software error has occurred.	<del>OSMUTINK</del> HOCTH03	LOGSIDSHTECHACI0N
<del>OSMUTINK</del> BUNDEEC	4-Warning	[chars] for vc [dec] and if_index [dec]	A software error has occurred while a bundle was being provisioned.	<del>OSMUTINK</del> HOCTH03	LOGSIDSHTECHACI0N
<del>OSMUTINK</del> DBNUL	4-Warning	Unexpected hwidb missing in [chars]	A software error has occurred.	<del>OSMUTINK</del> HOCTH03	LOGSIDSHTECHACI0N
<del>OSMUTINK</del> PNOREADY	4-Warning	Bundle process on the line card is not ready to handle message of type [dec]	Bundle is being deleted on the line card due to <CmdBold>ip cef disable<CmdBold> command and is not ready to process other messages. The most likely cause of this condition is that CEF was disabled and enabled in a very quick succession.	<del>OSMUTINK</del> HOCTH03	"Reset the line card."
<del>OSMUTINK</del> MLINKNIL	4-Warning	Unexpected mlp link missing in [chars]	A software error has occurred.	<del>OSMUTINK</del> HOCTH03	LOGSIDSHTECHACI0N
<del>OSMUTINK</del> MLIBNIL	4-Warning	Unexpected subblock missing for [chars]	A software error has occurred.	<del>OSMUTINK</del> HOCTH03	LOGSIDSHTECHACI0N

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSM</del> MULTILINKNUMINS	4-Warning	The bundle had an unexpected number of links[dec] in [chars]	A software error has occurred.	<del>OSM</del> CT3 Bundle#HOZHO3	LOGSIDSHTIEHACION
<del>OSM</del> MULTILINKQUEUEBND	4-Warning	Not able to queue the bundle [chars] Num. of bundles [dec]	A software error has occurred while a bundle was being inserted in queue.	<del>OSM</del> CT3 Bundle#HOZHO3	LOGSIDSHTIEHACION
<del>OSM</del> MULTILINKUNDEXTED	5-Notice	Bundle[chars] cannot be associated with link[chars] max [dec]	The number of bundles has been exceeded for the group belonging to the link. The bundle specified in the error message will not work in distributed mode. If the line card is CT3 OSM-CT3 line card then ports 1-12 belong to one group. If the	<del>OSM</del> CT3 Bundle#HOZHO3	"Remove the multilink interface that is causing this condition."
<del>OSM</del> MULTILINKSICERRCR	5-Notice	Cannot set up this bundle link-- [chars] to bundle [chars]\nreason:[chars]\n	The bundle link could not be set up. A configuration of resource limit has been reached. The bundle may be forced to become inactive go down. If the line card is a CT3 line card OSM-CT3 line card	<del>OSM</del> CT3 Bundle#HOZHO3	"Ensure that all links belong to the same group and slot. Check" " the number of links in the bundle and number of bundles in the" " group. After the configuration has been corrected enter the" " <CmdBold>shutdown</CmdBold> and <CmdBold>no shutdown</CmdBold>" " comands on the multilink interface to shut down and restart" " the interface."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPF_NSR2-ISSU_INIT	2-Critical	ISSU client initialization failed to [chars] error: [dec] [chars]	The OSPF ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	ospf	LOG_STD_ACTION
OSPF_NSR2-ISSU_INIT	2-Critical	ISSU client initialization failed to [chars] error: [dec] [chars]	The OSPF ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	ospf	LOG_STD_ACTION
OSPF_NSR3CF_ADDCLIENT	3-Error	Error adding OSPF checkpoint client: [chars]	OSPF was not able to register as a client of the checkpoint facility	ospf	show tech-support ospf
OSPF_NSR3CF_ADDCLIENT	3-Error	Error adding OSPF checkpoint client: [chars]	OSPF was not able to register as a client of the checkpoint facility	ospf	show tech-support ospf
OSPF_NSR3CF_NOMEM	3-Error	Unable to allocate checkpoint buffer: [chars]	NSR operation may be degraded to a lack of memory.	ospf	show tech-support ospf
OSPF_NSR3CF_NOMEM	3-Error	Unable to allocate checkpoint buffer: [chars]	NSR operation may be degraded to a lack of memory.	ospf	show tech-support ospf

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
OSPF_NSR3CF_NOMSG	3-Error	No space in checkpoint buffer	NSR operation may be degraded to a lack of memory.	ospf	show tech-support ospf
OSPF_NSR3CF_NOMSG	3-Error	No space in checkpoint buffer	NSR operation may be degraded to a lack of memory.	ospf	show tech-support ospf
OSPF_NSR3CHKPT_MSG	3-Error	Invalid checkpoint message: [chars] [chars]	NSR will not operate due to an error in a checkpoint message.	ospf	show tech-support ospf
OSPF_NSR3CHKPT_MSG	3-Error	Invalid checkpoint message: [chars] [chars]	NSR will not operate due to an error in a checkpoint message.	ospf	show tech-support ospf
OSPF_NSR3ISSU_MSG_SIZE	3-Error	OSPF[chars] ISSU client failed to get the MTU for message type [chars] [node]	The OSPF ISSU client failed to calculate the MTU for the specified message. The OSPF ISSU client is not able to send the message to the standby device.	ospf	"show issu message group <client_id> and "show issu session <client_id> and "show issu negotiated version <session_id>"
OSPF_NSR3ISSU_MSG_SIZE	3-Error	OSPF[chars] ISSU client failed to get the MTU for message type [chars] [node]	The OSPF ISSU client failed to calculate the MTU for the specified message. The OSPF ISSU client is not able to send the message to the standby device.	ospf	"show issu message group <client_id> and "show issu session <client_id> and "show issu negotiated version <session_id>"
OSPF_NSR3ISSU_UNREG_CSR	3-Error	OSPF[chars] ISSU client failed to unregister session information error: [dec] [chars]	The OSPF ISSU client failed to unregister session information.	ospf	"show issu session <client_id> and "show issu negotiated capability <session_id>"
OSPF_NSR3ISSU_UNREG_CSR	3-Error	OSPF[chars] ISSU client failed to unregister session information error: [dec] [chars]	The OSPF ISSU client failed to unregister session information.	ospf	"show issu session <client_id> and "show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPF[chars] ISSU client [chars] transform failed for message type [dec] [chars]: [dec] [chars]	3-Error	OSPF[chars] ISSU client [chars] transform failed for message type [dec] [chars]: [dec] [chars]	The OSPF ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the Archive state between the active device and the standby device is not identical.	ospf	"show issu session <client_id> and " "show issu negotiated version <session_id>"
OSPF[chars] ISSU client [chars] transform failed for message type [dec] [chars]: [dec] [chars]	3-Error	OSPF[chars] ISSU client [chars] transform failed for message type [dec] [chars]: [dec] [chars]	The OSPF ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the Archive state between the active device and the standby device is not identical.	ospf	"show issu session <client_id> and " "show issu negotiated version <session_id>"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>OSPF-1-OSPF_MAX_LSA</del>	1-Alert	Maximum number of non self-generated LSA has been exceeded \ospf [dec]\ - configured max: [dec] current: [dec] LSAs	Maximum number of non self-generated LSA has been exceeded	ospf	"Check if some router in the network is " "generating large number of LSAs as a result " "of misconfiguration"
<del>OSPF-1-OSPF_MAX_LSA</del>	1-Alert	Maximum number of non self-generated LSA has been exceeded \ospf [dec]\ - configured max: [dec] current: [dec] LSAs	Maximum number of non self-generated LSA has been exceeded	ospf	"Check if some router in the network is " "generating large number of LSAs as a result " "of misconfiguration"
<del>OSPF-1-OSPF_REDIS_MAX_PFX</del>	1-Alert	Redistribution prefix limit has been reached \[chars]\ - configured max: [dec] current: [dec] prefixes	We have reached the maximum number of redistributed prefixes	ospf	"Check if redistribution of large number of " "prefixes is desired and has not been configured by mistake"
<del>OSPF-1-OSPF_REDIS_MAX_PFX</del>	1-Alert	Redistribution prefix limit has been reached \[chars]\ - configured max: [dec] current: [dec] prefixes	We have reached the maximum number of redistributed prefixes	ospf	"Check if redistribution of large number of " "prefixes is desired and has not been configured by mistake"
<del>OSPF-1-OSPF_MAX_LSA_IGNORE</del>	2-Critical	Max-lsa ignore count exceeded in process [dec] - Staying in ignore state. Clear OSPF process to recover. Ignore count cfg: [dec] cur: [dec]	When the OSPF adjacencies are brought up if the number of LSA's exceeds the max-lsa even after the configured ignore count times then OSPF will stay in permanent ignore state and clear is required to bring back the adjacencies.	ospf	"Check if some router in the network is generating large number of " "LSAs as a result of misconfiguration."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPF-MAX_LSA_IGNORE	2-Critical	Max-lsa ignore count exceeded in process [dec] - Staying in ignore state. Clear OSPF process to recover. Ignore count cfg: [dec] cur: [dec]	When the OSPF adjacencies are brought up if the number of LSA's exceeds the max-lsa even after the configured ignore count times then OSPF will stay in permanent ignore state and clear is required to bring back the adjacencies.	ospf	"Check if some router in the network is generating large number of " "LSAs as a result of misconfiguration."
OSPF3BAD_LSA_BUILD	3-Error	OSPF-[dec]: Bad build request for LSA type [dec] LSID [node]mask %i	LSA was not originated due to internal software error	ospf	show tech-support ospf
OSPF3BAD_LSA_BUILD	3-Error	OSPF-[dec]: Bad build request for LSA type [dec] LSID [node]mask %i	LSA was not originated due to internal software error	ospf	show tech-support ospf
OSPF-3-CF_NOMEM	3-Error	Unable to allocate checkpoint buffer: [chars]	NSR operation may be degraded to a lack of memory.	ospf	show tech-support ospf
OSPF-3-CF_NOMEM	3-Error	Unable to allocate checkpoint buffer: [chars]	NSR operation may be degraded to a lack of memory.	ospf	show tech-support ospf
OSPF-3-CF_NOMSG	3-Error	No space in checkpoint buffer	NSR operation may be degraded to a lack of memory.	ospf	show tech-support ospf
OSPF-3-CF_NOMSG	3-Error	No space in checkpoint buffer	NSR operation may be degraded to a lack of memory.	ospf	show tech-support ospf
OSPF-3-CONFIGNR_ALLOC_FAIL	3-Error	Could not find or allocate neighbor %i	An internal error occurred.	ospf	LOG_STD_ACTION
OSPF-3-CONFIGNR_ALLOC_FAIL	3-Error	Could not find or allocate neighbor %i	An internal error occurred.	ospf	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPF3CFG_OSPF_FAILED	3-Error	Only [dec] OSPF process is allowed	The limit of number of allowed OSPF instances has reached	ospf	"Don't configure more than allowed instances"
OSPF3CFG_OSPF_FAILED	3-Error	Only [dec] OSPF process is allowed	The limit of number of allowed OSPF instances has reached	ospf	"Don't configure more than allowed instances"
<del>OSPF3CHKPTBDCODE_FAIL</del>	3-Error	Interface cannot be decoded for NSR: [chars]	Adjacency and interface information for an interface cannot be checkpointed due to an interface decoding error.	ospf	"Please verify that this interface type is supported for NSR in " "this release. If so report the problem to the TAC."
<del>OSPF3CHKPTBDCODE_FAIL</del>	3-Error	Interface cannot be decoded for NSR: [chars]	Adjacency and interface information for an interface cannot be checkpointed due to an interface decoding error.	ospf	"Please verify that this interface type is supported for NSR in " "this release. If so report the problem to the TAC."
<del>OSPF3CHKPTBENCODE_FAIL</del>	3-Error	Interface [chars] cannot be encoded for NSR	Adjacency and interface information learned from this interface cannot be checkpointed due to an interface encoding error.	ospf	"Please verify that this interface type is supported for NSR in " "this release. If so report the problem to the TAC."
<del>OSPF3CHKPTBENCODE_FAIL</del>	3-Error	Interface [chars] cannot be encoded for NSR	Adjacency and interface information learned from this interface cannot be checkpointed due to an interface encoding error.	ospf	"Please verify that this interface type is supported for NSR in " "this release. If so report the problem to the TAC."
OSPF-3-CHKPT_MSG	3-Error	Invalid checkpoint message: [chars] [chars]	NSR will not operate due to an error in a checkpoint message.	ospf	show tech-support ospf
OSPF-3-CHKPT_MSG	3-Error	Invalid checkpoint message: [chars] [chars]	NSR will not operate due to an error in a checkpoint message.	ospf	show tech-support ospf

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>OSPF3</del> CHKPT_MSG_LOST	3-Error	Checkpoint message lost	NSR will not operate due to a dropped checkpoint message.	ospf	show tech-support ospf
<del>OSPF3</del> CHKPT_MSG_LOST	3-Error	Checkpoint message lost	NSR will not operate due to a dropped checkpoint message.	ospf	show tech-support ospf
<del>OSPF3</del> CHKPT_NOMEM	3-Error	Unable to allocate checkpoint queue entry	NSR will not operate due to a failure communicating with the standby.	ospf	show tech-support ospf
<del>OSPF3</del> CHKPT_NOMEM	3-Error	Unable to allocate checkpoint queue entry	NSR will not operate due to a failure communicating with the standby.	ospf	show tech-support ospf
<del>OSPF3</del> CHKPT_SEND_FAIL	3-Error	Checkpoint message send failed: [chars]	NSR will not operate due to a failure communicating with the standby.	ospf	show tech-support ospf
<del>OSPF3</del> CHKPT_SEND_FAIL	3-Error	Checkpoint message send failed: [chars]	NSR will not operate due to a failure communicating with the standby.	ospf	show tech-support ospf
<del>OSPF3</del> CHKPT_STAUS_LOST	3-Error	Checkpoint status lost	NSR will not operate due to a missing checkpoint status message.	ospf	show tech-support ospf
<del>OSPF3</del> CHKPT_STAUS_LOST	3-Error	Checkpoint status lost	NSR will not operate due to a missing checkpoint status message.	ospf	show tech-support ospf
<del>OSPF3</del> CHKPT_SBY_LSDNAD	3-Error	Standby link-state database validation failed expected/found count: [node][node]checksum: 0x[node]x/0x[node]x	NSR will not operate due to an error on the standby.	ospf	show tech-support ospf

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSPFCHKPTSIBYISDNAD</del>	3-Error	Standby link-state database validation failed expected/found count: [node][node]chksum: 0x[node]x/0x[node]x	NSR will not operate due to an error on the standby.	ospf	show tech-support ospf
<del>OSPFCHKPTSIBYNLSABUFR</del>	3-Error	Standby synchronization error: no LSA buffer	NSR will not operate due to an internal error.	ospf	show tech-support ospf
<del>OSPFCHKPTSIBYNLSABUFR</del>	3-Error	Standby synchronization error: no LSA buffer	NSR will not operate due to an internal error.	ospf	show tech-support ospf
<del>OSPFCHKPTSIBYNLSAB</del>	3-Error	Standby synchronization error: could not add lsa type [dec]	NSR will not operate due to an internal error.	ospf	show tech-support ospf
<del>OSPFCHKPTSIBYNLSAB</del>	3-Error	Standby synchronization error: could not add lsa type [dec]	NSR will not operate due to an internal error.	ospf	show tech-support ospf
<del>OSPFCHKPTSIBYNONER</del>	3-Error	Standby synchronization error: could not find neighbor [chars] [node]%i	NSR will not operate due to an internal error.	ospf	show tech-support ospf
<del>OSPFCHKPTSIBYNONER</del>	3-Error	Standby synchronization error: could not find neighbor [chars] [node]%i	NSR will not operate due to an internal error.	ospf	show tech-support ospf
<del>OSPFCHKPTSIBYNONERF</del>	3-Error	Standby synchronization error: interface not attached to add neighbor [chars] [node]%i	NSR will not operate due to an internal error.	ospf	show tech-support ospf
<del>OSPFCHKPTSIBYNONERF</del>	3-Error	Standby synchronization error: interface not attached to add neighbor [chars] [node]%i	NSR will not operate due to an internal error.	ospf	show tech-support ospf



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSPF-3-SIBY_SYNC_LOST</del>	3-Error	Standby synchronization lost for OSPF-[dec] was: [chars]	Synchronization between the active and standby OSPF has been lost.	ospf	show tech-support ospf
<del>OSPF-3-SIBY_SYNC_LOST</del>	3-Error	Standby synchronization lost for OSPF-[dec] was: [chars]	Synchronization between the active and standby OSPF has been lost.	ospf	show tech-support ospf
OSPF-3-DBEXIST	3-Error	area [chars] lsid [node]mask [node]type [dec]	OSPF is trying to add existing LSA to the database.	ospf	LOG_SID_SH_TECH_ACTION
OSPF-3-DBEXIST	3-Error	area [chars] lsid [node]mask [node]type [dec]	OSPF is trying to add existing LSA to the database.	ospf	LOG_SID_SH_TECH_ACTION
<del>OSPF-3-INT_ATTACHED_TO_MORE_THAN_ONE_AREA</del>	3-Error	Interface [chars] is attached to more than one area	The interface is on the interface list for an area other than the one which the interface links to.	ospf	LOG_SID_SH_TECH_ACTION
<del>OSPF-3-INT_ATTACHED_TO_MORE_THAN_ONE_AREA</del>	3-Error	Interface [chars] is attached to more than one area	The interface is on the interface list for an area other than the one which the interface links to.	ospf	LOG_SID_SH_TECH_ACTION
OSPF-3-INT_INIT_FAILED	3-Error	Init failed for interface [chars] [chars].	The interface initialization failed. Possible reasons: 1 The area to which the interface is being attached is being	ospf	"Remove the configuration command that covers the interface " "and then try it again. " LOG_SID_RECUR_ACTION
OSPF-3-INT_INIT_FAILED	3-Error	Init failed for interface [chars] [chars].	The interface initialization failed. Possible reasons: 1 The area to which the interface is being attached is being	ospf	"Remove the configuration command that covers the interface " "and then try it again. " LOG_SID_RECUR_ACTION
OSPF-3-INTERNALERR	3-Error	Internal error: [chars]	An internal software error occurred.	ospf	LOG_STD_ACTION
OSPF-3-INTERNALERR	3-Error	Internal error: [chars]	An internal software error occurred.	ospf	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPF3ISSU_NEGOTIATION	3-Error	ISSU negotiation[chars] error: [dec] [chars]	The OSPF ISSU session could not complete negotiation. This failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	ospf	LOG_STD_ACTION
OSPF3ISSU_NEGOTIATION	3-Error	ISSU negotiation[chars] error: [dec] [chars]	The OSPF ISSU session could not complete negotiation. This failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	ospf	LOG_STD_ACTION
OSPF-3-LSA_LEN	3-Error	Area [chars] router-LSA of length [dec] bytes plus update overhead bytes is too large to flood.	The router tried to build a router-LSA which is larger than the huge system buffer size or the OSPF protocol imposed maximum.	ospf	"If the reported total length LSA size plus " "overhead is larger than the huge system "
OSPF-3-LSA_LEN	3-Error	Area [chars] router-LSA of length [dec] bytes plus update overhead bytes is too large to flood.	The router tried to build a router-LSA which is larger than the huge system buffer size or the OSPF protocol imposed maximum.	ospf	"If the reported total length LSA size plus " "overhead is larger than the huge system "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPF-3-NO_SNMP_INDEX	3-Error	Interface [chars] does not have an SNMP MIB ifIndex and has been disabled	The OSPF process has been configured to use the SNMP MIB ifIndex value for the interface IDs. However the ifIndex is not set on this interface so the interface can not be enabled.	ospf	"Unconfigure interface-id snmp-if-index for this OSPF process"
OSPF-3-NO_SNMP_INDEX	3-Error	Interface [chars] does not have an SNMP MIB ifIndex and has been disabled	The OSPF process has been configured to use the SNMP MIB ifIndex value for the interface IDs. However the ifIndex is not set on this interface so the interface can not be enabled.	ospf	"Unconfigure interface-id snmp-if-index for this OSPF process"
OSPF-3-NOBACKBONE	3-Error	Flagged as being an ABR without a backbone area	The router was flagged as an Area Border Router ABR without backbone	ospf	"Restart the OSPF process."
OSPF-3-NOBACKBONE	3-Error	Flagged as being an ABR without a backbone area	The router was flagged as an Area Border Router ABR without backbone	ospf	"Restart the OSPF process."
OSPF-3-NOSELF	3-Error	[chars] iterface [chars] interface state [dec]	An internal error occurred.	ospf	LOG_SIDS_H_TECH_ACTION
OSPF-3-NOSELF	3-Error	[chars] iterface [chars] interface state [dec]	An internal error occurred.	ospf	LOG_SIDS_H_TECH_ACTION
OSPF-3-NOSTART	3-Error	Unable to start OSPF: [chars]	An internal software error occurred.	ospf	LOG_STD_ACTION
OSPF-3-NOSTART	3-Error	Unable to start OSPF: [chars]	An internal software error occurred.	ospf	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
OSPF-3-NSR_FAILED	3-Error	NSR can not recover checkpointed data for process [dec]	An NSR failover could not be performed because OSPF on the standby was not synchronized	ospf	show tech-support ospf
OSPF-3-NSR_FAILED	3-Error	NSR can not recover checkpointed data for process [dec]	An NSR failover could not be performed because OSPF on the standby was not synchronized	ospf	show tech-support ospf
OSPF-3-RECONF_VL	3-Error	OSPF process [dec] is changing router-id. Reconfigure virtual link neighbors with our new router-id	OSPF process is being reset and it is going to select a new router-id. This will bring down all virtual links. To make them work again virtual link configuration needs to be changed on all virtual link neighbors.	ospf	"Change virtual link configuration on all the virtual link " "neighbors to reflect our new router-id."
OSPF-3-RECONF_VL	3-Error	OSPF process [dec] is changing router-id. Reconfigure virtual link neighbors with our new router-id	OSPF process is being reset and it is going to select a new router-id. This will bring down all virtual links. To make them work again virtual link configuration needs to be changed on all virtual link neighbors.	ospf	"Change virtual link configuration on all the virtual link " "neighbors to reflect our new router-id."
OSPF3UNKNOWNSTATE	3-Error	Reached unknown state in neighbor state machine	An internal software error in this router has resulted in an invalid neighbor state during database exchange.	ospf	LOG_SIDSH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPF3UNKNOWNSTATE	3-Error	Reached unknown state in neighbor state machine	An internal software error in this router has resulted in an invalid neighbor state during database exchange.	ospf	LOGS_IDSHTECH_ACTION
OSPF4AREA_ALLOC_FAIL	4-Warning	Can not allocate memory for area structure	An internal error occurred.	ospf	LOGS_IDSHTECH_ACTION
OSPF4AREA_ALLOC_FAIL	4-Warning	Can not allocate memory for area structure	An internal error occurred.	ospf	LOGS_IDSHTECH_ACTION
OSPF4ASBR_WITHOUT_AD_AREA	4-Warning	Router is currently an ASBR while having only one area which is a stub area	An ASBR must be attached to an area which can carry AS External or NSSA LSAs	ospf	"Make the area to which the router is attached into an NSSA or " "regular area."
OSPF4ASBR_WITHOUT_AD_AREA	4-Warning	Router is currently an ASBR while having only one area which is a stub area	An ASBR must be attached to an area which can carry AS External or NSSA LSAs	ospf	"Make the area to which the router is attached into an NSSA or " "regular area."
OSPF4BADIPLENGTH	4-Warning	Datagram packet length [dec] is less than total length in IP packet header [dec] from [node][chars]	The system received an OSPF packet with a datagram packet length inconsistent with the size of the total length in IP packet header This indicates an error in the sender of the packet.	ospf	LOGS_IDSHTECH_ACTION
OSPF4BADIPLENGTH	4-Warning	Datagram packet length [dec] is less than total length in IP packet header [dec] from [node][chars]	The system received an OSPF packet with a datagram packet length inconsistent with the size of the total length in IP packet header This indicates an error in the sender of the packet.	ospf	LOGS_IDSHTECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPF-4-BADLENGTH	4-Warning	Invalid length [dec] in OSPF packet type [dec] from [node]ID [node][chars]	The system received an OSPF packet with a length field of less than normal header size or inconsistent with the size of the IP packet in which it arrived. This indicates an error in the sender of the packet.	ospf	LOG_SIDSHTTECH_ACIION
OSPF-4-BADLENGTH	4-Warning	Invalid length [dec] in OSPF packet type [dec] from [node]ID [node][chars]	The system received an OSPF packet with a length field of less than normal header size or inconsistent with the size of the IP packet in which it arrived. This indicates an error in the sender of the packet.	ospf	LOG_SIDSHTTECH_ACIION
OSPF-4-BADLSAMASK	4-Warning	Bad LSA mask: Type [dec] LSID [node]Mask [node]from [node]\n NOTE: This route will not be installed in the routing table.	The router received an LSA with an invalid LSA mask. The cause is likely due to wrong configuration from the LSA originator.	ospf	"Find the originating router of this LSA with bad mask correct " "any misconfiguration of this LSA's network. For further debugging " "call your Cisco technical support representative for assistance."
OSPF-4-BADLSAMASK	4-Warning	Bad LSA mask: Type [dec] LSID [node]Mask [node]from [node]\n NOTE: This route will not be installed in the routing table.	The router received an LSA with an invalid LSA mask. The cause is likely due to wrong configuration from the LSA originator.	ospf	"Find the originating router of this LSA with bad mask correct " "any misconfiguration of this LSA's network. For further debugging " "call your Cisco technical support representative for assistance."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPF-4-BADLSATYPE	4-Warning	Invalid lsa: [chars] Type [dec] Length [dec] LSID [node]from [node][node][chars]	The router received an LSA with invalid data. LSA contains invalid LSA type wrong checksum or wrong length. The cause is either memory corruption or unexpected behavior on a router.	ospf	"From a neighboring address locate the problem router. " "1 Collect a running configuration of the router by entering the"
OSPF-4-BADLSATYPE	4-Warning	Invalid lsa: [chars] Type [dec] Length [dec] LSID [node]from [node][node][chars]	The router received an LSA with invalid data. LSA contains invalid LSA type wrong checksum or wrong length. The cause is either memory corruption or unexpected behavior on a router.	ospf	"From a neighboring address locate the problem router. " "1 Collect a running configuration of the router by entering the"
OSPF-4-UNKNOWN_STATUS	4-Warning	Unknown checkpoint status: [dec]	An internal error occurred.	ospf	show tech-support ospf
OSPF-4-UNKNOWN_STATUS	4-Warning	Unknown checkpoint status: [dec]	An internal error occurred.	ospf	show tech-support ospf
OSPF-4-CONFIG_ON_NBMA	4-Warning	[chars] Configured neighbor [node]- Ignore incompatible configured options use default. Allowed options on NBMA interfaces are poll-interval and priority	The configured neighbor was found on a NBMA network and either the cost or database-filter option was configured. These options are only allowed on point-to-multipoint type networks.	ospf	"Check the configuration options for the neighbor command and correct " "the options or the network type for the neighbor's interface."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSPF_NBR_DEF_CONFIG_NBMA</del>	4-Warning	[chars] Configured neighbor [node]- Ignore incompatible configured options use default. Allowed options on NBMA interfaces are poll-interval and priority	The configured neighbor was found on a NBMA network and either the cost or database-filter option was configured. These options are only allowed on point-to-multipoint type networks.	ospf	"Check the configuration options for the neighbor command and correct " "the options or the network type for the neighbor's interface."
<del>OSPF_NBR_DEF_CONFIG_P2MP</del>	4-Warning	[chars] Configured neighbor [node]- Ignore incompatible configured options use default. Allowed options on P2MP interfaces are cost and database-filter	The configured neighbor was found on a point-to-multipoint network and either the poll-interval or priority option was configured. These options are only allowed on NBMA type networks.	ospf	"Check the configuration options for the neighbor command and correct " "the options or the network type for the neighbor's interface."
<del>OSPF_NBR_DEF_CONFIG_P2MP</del>	4-Warning	[chars] Configured neighbor [node]- Ignore incompatible configured options use default. Allowed options on P2MP interfaces are cost and database-filter	The configured neighbor was found on a point-to-multipoint network and either the poll-interval or priority option was configured. These options are only allowed on NBMA type networks.	ospf	"Check the configuration options for the neighbor command and correct " "the options or the network type for the neighbor's interface."
<del>OSPF_NBR_NAD_NET_ME</del>	4-Warning	Can not use configured neighbor [node]on [chars]. Neighbor command only allowed on NBMA and P2MP networks	The configured neighbor was found on a network for which the network type was neither NBMA nor point-to-multipoint	ospf	LOG_SID_NO_ACTION
<del>OSPF_NBR_NAD_NET_ME</del>	4-Warning	Can not use configured neighbor [node]on [chars]. Neighbor command only allowed on NBMA and P2MP networks	The configured neighbor was found on a network for which the network type was neither NBMA nor point-to-multipoint	ospf	LOG_SID_NO_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSPF_NBR_NAD_ON_NBMA</del>	4-Warning	Can not use configured neighbor [node]on [chars] for topology [chars]. Neighbor command only allowed on P2MP network for non-base topology	The configured neighbor was found on a NBMA network for a non-base topology. Neighbor can not be configured under this topology.	ospf	"Check the configuration for the neighbor command and correct it" "or change the network type for the neighbor's interface."
<del>OSPF_NBR_NAD_ON_NBMA</del>	4-Warning	Can not use configured neighbor [node]on [chars] for topology [chars]. Neighbor command only allowed on P2MP network for non-base topology	The configured neighbor was found on a NBMA network for a non-base topology. Neighbor can not be configured under this topology.	ospf	"Check the configuration for the neighbor command and correct it" "or change the network type for the neighbor's interface."
<del>OSPF_NBR_NAD_ON_P2MP</del>	4-Warning	Can not use configured neighbor [node]on [chars]. Cost or database-filter is required	The configured neighbor was found on a point-to-multipoint broadcast network. Either the cost or database-filter option needs to be configured.	ospf	"Check the configuration options for the neighbor command and correct " "the options or the network type for the neighbor's interface."
<del>OSPF_NBR_NAD_ON_P2MP</del>	4-Warning	Can not use configured neighbor [node]on [chars]. Cost or database-filter is required	The configured neighbor was found on a point-to-multipoint broadcast network. Either the cost or database-filter option needs to be configured.	ospf	"Check the configuration options for the neighbor command and correct " "the options or the network type for the neighbor's interface."
<del>OSPF_NBR_NAD_ON_P2MP</del>	4-Warning	Can not use configured neighbor [node]on [chars] for topology [chars]. Neighbor needs to be configured under base topology	The configured neighbor was found on a point-to-multipoint non-broadcast network for a non-base topology. Neighbor needs to be configured under base topology.	ospf	"Check the configuration options for the neighbor command and correct " "the options or the network type for the neighbor's interface."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>OSPF4CHKPT_MSG_SEQ</del>	4-Warning	Can not use configured neighbor [node] on [chars] for topology [chars]. Neighbor needs to be configured under base topology	The configured neighbor was found on a point-to-multipoint non-broadcast network for a non-base topology. Neighbor needs to be configured under base topology.	ospf	"Check the configuration options for the neighbor command and correct " "the options or the network type for the neighbor's interface."
OSPF4CHKPT_MSG_SEQ	4-Warning	Invalid checkpoint message sequence number: received [dec] expected [dec]	NSR has detected a duplicate checkpoint message.	ospf	show tech-support ospf
OSPF4CHKPT_MSG_SEQ	4-Warning	Invalid checkpoint message sequence number: received [dec] expected [dec]	NSR has detected a duplicate checkpoint message.	ospf	show tech-support ospf
<del>OSPF4CHKPT_UNKNOWN_TME</del>	4-Warning	Invalid checkpoint message type: [dec]	An internal error occurred.	ospf	show tech-support ospf
OSPF4CHKPT_UNKNOWN_TME	4-Warning	Invalid checkpoint message type: [dec]	An internal error occurred.	ospf	show tech-support ospf

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPF4CONFLICTING_LSAD	4-Warning	Process [dec] area [chars]: LSA origination prevented by LSA with same LSID but a different mask\n Existing Type [dec] LSA: LSID [node]m\n New Destination: [node]m	An LSA origination was prevented by a conflict with an existing\n LSA with the same LSID but a different mask. The algorithm in\n RFC 2328 Appendix E is used to resolve conflicts when multiple\n LSAs with the same prefix and differing masks are advertised.\n When using this algorithm and host routes are advertised there\n are situations where conflict resolution is impossible and either\n the host route or the conflicting prefix is not advertised.	ospf	"Locate the prefix that is not advertised and the conflicting prefix\n" "using <CmdBold>show ip route<NoCmdBold> and " "<CmdBold>show ip ospf database<NoCmdBold>\n" "Decide which route or prefix is more important to advertise and take\n" "steps to prevent advertising the conflicting route or prefix.\n" "If you cannot determine the nature of the error from the collected\n\ information contact your Cisco technical support representative\n\ and provide the representative with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPF4CONFLICTING_LSAD	4-Warning	Process [dec] area [chars]: LSA origination prevented by LSA with same LSID but a different mask\n Existing Type [dec] LSA: LSID [node]m\n New Destination: [node]m	An LSA origination was prevented by a conflict with an existing\n LSA with the same LSID but a different mask. The algorithm in\n RFC 2328 Appendix E is used to resolve conflicts when multiple\n LSAs with the same prefix and differing masks are advertised.\n When using this algorithm and host routes are advertised there\n are situations where conflict resolution is impossible and either\n the host route or the conflicting prefix is not advertised.	ospf	"Locate the prefix that is not advertised and the conflicting prefix\n" "using <CmdBold>show ip route<NoCmdBold> and " "<CmdBold>show ip ospf database<NoCmdBold>\n" "Decide which route or prefix is more important to advertise and take\n" "steps to prevent advertising the conflicting route or prefix.\n" "If you cannot determine the nature of the error from the collected\n\ information contact your Cisco technical support representative\n\ and provide the representative with the gathered information."
OSPF4DUP_RTRID_AREA	4-Warning	Detected router with duplicate router ID [node]in area [chars]	OSPF has detected a router in the area that has the same router ID as this routing process. Duplicate router IDs may result in network instability causing some destinations to be unreachable.	ospf	"The OSPF router ID should be unique. Make sure all routers in the " "area have unique router ID."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPF-4DUP_RIRID_AREA	4-Warning	Detected router with duplicate router ID [node]in area [chars]	OSPF has detected a router in the area that has the same router ID as this routing process. Duplicate router IDs may result in network instability causing some destinations to be unreachable.	ospf	"The OSPF router ID should be unique. Make sure all routers in the " "area have unique router ID."
OSPF-4DUP_RIRID_NBR	4-Warning	OSPF detected duplicate router-id [node]from [node]on interface [chars]	OSPF has received hello packet from a neighbor that has the same router ID as this routing process. A full adjacency cannot be established.	ospf	"The OSPF router ID should be unique. Change the router ID of the " "neighbor."
OSPF-4DUP_RIRID_NBR	4-Warning	OSPF detected duplicate router-id [node]from [node]on interface [chars]	OSPF has received hello packet from a neighbor that has the same router ID as this routing process. A full adjacency cannot be established.	ospf	"The OSPF router ID should be unique. Change the router ID of the " "neighbor."
OSPF-4-ERRRCV	4-Warning	Received invalid packet: [chars] from [node][chars]	An invalid OSPF packet was received. Details are included in the error message. The cause might be a misconfigured OSPF or an internal error in the sender.	ospf	"Check the OSPF configuration of the receiver and the sender for " "inconsistency."
OSPF-4-ERRRCV	4-Warning	Received invalid packet: [chars] from [node][chars]	An invalid OSPF packet was received. Details are included in the error message. The cause might be a misconfigured OSPF or an internal error in the sender.	ospf	"Check the OSPF configuration of the receiver and the sender for " "inconsistency."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
OSPF-4-FLOOD_WAR	4-Warning	Process [dec] [chars] LSA ID [node]type-[dec] adv-rtr [node]in area [chars]	Router is extensively re-originating or flushing the LSA reported by this error message	ospf	

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
					<p>"If this router is flushing the network LSA it means the " "router received a network LSA whose LSA ID conflicts with " "the IP address of one of the router's interfaces and flushed " "the LSA out of the network. For OSPF to function correctly " "the IP addresses of transit networks must be unique. "</p> <p>"Conflicting routers are the router reporting this error " "message and the router with the OSPF router ID reported as " "adv-rtr in this message. " "If this router is re-originating an LSA highly probably some " "other router is flushing this LSA out of the network. Find " "that router and avoid the conflict. Conflict for type-2 LSA " "may be due to duplicate LSA ID for type-5 LSA it may be " "duplicate router-id on the router reporting this error message" " and on the routers connected to the different area." "In an unstable network this message may also warn of " "extensive re-origination of LSA for some other</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
					reason. " "Contact your Cisco technical support representative " "to investigate such a case."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPF-4-FLOOD_WAR	4-Warning	Process [dec] [chars] LSA ID [node]type-[dec] adv-rtr [node]in area [chars]	Router is extensively re-originating or flushing the LSA reported by this error message	ospf	

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
					<p>"If this router is flushing the network LSA it means the " "router received a network LSA whose LSA ID conflicts with " "the IP address of one of the router's interfaces and flushed " "the LSA out of the network. For OSPF to function correctly " "the IP addresses of transit networks must be unique. " "Conflicting routers are the router reporting this error " "message and the router with the OSPF router ID reported as " "adv-rtr in this message. " "If this router is re-originating an LSA highly probably some " "other router is flushing this LSA out of the network. Find " "that router and avoid the conflict. Conflict for type-2 LSA " "may be due to duplicate LSA ID for type-5 LSA it may be " "duplicate router-id on the router reporting this error message" " and on the routers connected to the different area." "In an unstable network this message may also warn of " "extensive re-origination of LSA for some other</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
					reason. " "Contact your Cisco technical support representative " "to investigate such a case."
OSPF4INV_LSA_BLD_HLG	4-Warning	Invalid build flag [hec] for LSA [node]type [dec]	An internal error occurred.	ospf	LOGSIDSHTTECHACTION
OSPF4INV_LSA_BLD_HLG	4-Warning	Invalid build flag [hec] for LSA [node]type [dec]	An internal error occurred.	ospf	LOGSIDSHTTECHACTION
OSPF4INVALID_METRIC	4-Warning	OSPF-[dec] Area [chars]: Router [node]originating invalid type [dec] LSA ID [node]Metric [dec] on Link ID [node]Link Type [dec]	The router indicated in this message has originated an LSA with invalid metric. If this is an router LSA and link metric is zero there's a risk of routing loops and traffic loss in the network	ospf	"Configure valid metric for given LSA type and link type on " "the router originating reported LSA"
OSPF4INVALID_METRIC	4-Warning	OSPF-[dec] Area [chars]: Router [node]originating invalid type [dec] LSA ID [node]Metric [dec] on Link ID [node]Link Type [dec]	The router indicated in this message has originated an LSA with invalid metric. If this is an router LSA and link metric is zero there's a risk of routing loops and traffic loss in the network	ospf	"Configure valid metric for given LSA type and link type on " "the router originating reported LSA"
OSPF4INVALIDKCKEYID	4-Warning	Key ID [node]in key chain [chars] is invalid	They Key ID configured in the key chain is out of range for OSPF. This may happen because the key chain allows Key ID values outside of the range which is acceptable for OSPF.	ospf	"Configure a new security association with a Key ID that is in " "the range 1-255"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPF-4INVALIDKKEYID	4-Warning	Key ID [node]in key chain [chars] is invalid	They Key ID configured in the key chain is out of range for OSPF. This may happen because the key chain allows Key ID values outside of the range which is acceptable for OSPF.	ospf	"Configure a new security association with a Key ID that is in " "the range 1-255"
OSPF-4INVALIDKNAME	4-Warning	Key chain name [chars] on [chars] is invalid	The key-chain name configured under OSPF interface does not match global key chain configuration.	ospf	"Fix configuration. Either remove ospf authentication command " "or configure key chain in global configuration mode."
OSPF-4INVALIDKNAME	4-Warning	Key chain name [chars] on [chars] is invalid	The key-chain name configured under OSPF interface does not match global key chain configuration.	ospf	"Fix configuration. Either remove ospf authentication command " "or configure key chain in global configuration mode."
OSPF-4INVALIDKEY	4-Warning	Key ID [node][chars]on interface [chars]	The ID is not found in the configured key chain	ospf	"Configure a new security association with the Key ID"
OSPF-4INVALIDKEY	4-Warning	Key ID [node][chars]on interface [chars]	The ID is not found in the configured key chain	ospf	"Configure a new security association with the Key ID"
OSPF-4MAXLSAIGNOREENIER	4-Warning	Max LSA exceeded in process [dec]. Adjacencies will be kept down for ignore time of [node] minutes. Ignore count cfg: [dec] cur: [dec]	When the non-self-generated LSAs exceed the configured max-limit then the adjacencies are brought down.	ospf	"Check if some router in the network is generating " "large number of LSAs as a result of misconfiguration."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPF4MAXLSAEXCEED	4-Warning	Max LSA exceeded in process [dec]. Adjacencies will be kept down for ignore time of [node] minutes. Ignore count cfg: [dec] cur: [dec]	When the non-self-generated LSAs exceed the configured max-limit then the adjacencies are brought down.	ospf	"Check if some router in the network is generating " "large number of LSAs as a result of misconfiguration."
OSPF4NETTYEMSMACH	4-Warning	Received Hello from [node]on [chars] indicating a potential \n\ network type mismatch	OSPF received hello packet from a neighbor which has a non-zero \n\ value in the DR or BDR field but this router is configured as \n\ point-to-point on this interface. This indicates a network type \n\ mismatch.	-	"The network type must be configured the same for all devices \n\ attached to the same link."
OSPF4NETTYEMSMACH	4-Warning	Received Hello from [node]on [chars] indicating a potential \n\ network type mismatch	OSPF received hello packet from a neighbor which has a non-zero \n\ value in the DR or BDR field but this router is configured as \n\ point-to-point on this interface. This indicates a network type \n\ mismatch.	-	"The network type must be configured the same for all devices \n\ attached to the same link."
OSPF4NOADDRESSCNT	4-Warning	No IP address for interface [chars]	Interface is not point-to-point and is unnumbered	ospf	"Change interface type or give the interface an IP address"
OSPF4NOADDRESSCNT	4-Warning	No IP address for interface [chars]	Interface is not point-to-point and is unnumbered	ospf	"Change interface type or give the interface an IP address"
OSPF4NO_OUTPUTQ	4-Warning	Packet not written to the output queue	An internal error occurred.	ospf	LOGSIDSHTTECHACIION
OSPF4NO_OUTPUTQ	4-Warning	Packet not written to the output queue	An internal error occurred.	ospf	LOGSIDSHTTECHACIION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
OSPF-4-NONEIGHBOR	4-Warning	Received [chars] from unknown neighbor %i	OSPF hello database description or database request packet was received but the router could not identify the sender.	ospf	"This situation should correct itself." LOG_SID_RECUR_ACTION
OSPF-4-NONEIGHBOR	4-Warning	Received [chars] from unknown neighbor %i	OSPF hello database description or database request packet was received but the router could not identify the sender.	ospf	"This situation should correct itself." LOG_SID_RECUR_ACTION
OSPF-4-NORTRID	4-Warning	OSPF process [dec] failed to allocate unique router-id and cannot start	OSPF failed while attempting to allocate a unique router-id from the IP addresses of its interfaces.	ospf	"Ensure that at least one interface is active up and has a valid IP "
OSPF-4-NORTRID	4-Warning	OSPF process [dec] failed to allocate unique router-id and cannot start	OSPF failed while attempting to allocate a unique router-id from the IP addresses of its interfaces.	ospf	"Ensure that at least one interface is active up and has a valid IP "
OSPF-4-NOVALIDKEY	4-Warning	No valid authentication [chars]key is available on interface [chars]	-	ospf	"Configure a new key"
OSPF-4-NOVALIDKEY	4-Warning	No valid authentication [chars]key is available on interface [chars]	-	ospf	"Configure a new key"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPF-4-NSSA_NO_FA	4-Warning	OSPF process [node]lacks forwarding address for type 7 LSA [node] in NSSA [chars] - P-bit cleared	There is no viable forwarding address in the NSSA area. Hence the P-bit must be cleared and the type 7 LSA will not be translated to a type 5 LSA by the NSSA translator. Refer to RFC 3101.	ospf	"Configure at least one interface in the NSSA with "an advertised IP address. A loopback is preferable "since advertisement will not be dependent on the "underlying layer 2 state."
OSPF-4-NSSA_NO_FA	4-Warning	OSPF process [node]lacks forwarding address for type 7 LSA [node] in NSSA [chars] - P-bit cleared	There is no viable forwarding address in the NSSA area. Hence the P-bit must be cleared and the type 7 LSA will not be translated to a type 5 LSA by the NSSA translator. Refer to RFC 3101.	ospf	"Configure at least one interface in the NSSA with "an advertised IP address. A loopback is preferable "since advertisement will not be dependent on the "underlying layer 2 state."
OSPF4NULL_LINKAGE	4-Warning	Doubly linked list linkage is NULL	An internal error occurred.	ospf	LOGSIDSHTTECHACIION
OSPF4NULL_LINKAGE	4-Warning	Doubly linked list linkage is NULL	An internal error occurred.	ospf	LOGSIDSHTTECHACIION
OSPF4NULL_REV_LINKAGE	4-Warning	Doubly linked list prev linkage is NULL [hec]	An internal error occurred.	ospf	LOGSIDSHTTECHACIION
OSPF4NULL_REV_LINKAGE	4-Warning	Doubly linked list prev linkage is NULL [hec]	An internal error occurred.	ospf	LOGSIDSHTTECHACIION
OSPF4OSPF_MAX_LSA_THR	4-Warning	Threshold for maximum number of non self-generated LSA has been reached \ospf [dec]\ - [dec][node]configured : [dec][node]LSAs [dec]	Threshold for maximum number of non self-generated LSA has been reached	ospf	"Check if some router in the network is "generating large number of LSAs as a result "of misconfiguration"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPF4OSF_MAX_LSA_THR	4-Warning	Threshold for maximum number of non self-generated LSA has been reached \ospf [dec] \ - [dec][node]configured : [dec][node]LSAs [dec]	Threshold for maximum number of non self-generated LSA has been reached	ospf	"Check if some router in the network is " "generating large number of LSAs as a result " "of misconfiguration"
OSPF4OSF_REDIS_THR_PFX	4-Warning	Threshold for maximum number of redistributed prefix has been reached \ospf [dec] \ - [dec][node]configured: [dec][node]prefixes [dec]	We have reached the threshold level of number of redistributed prefixes	ospf	"Check if redistribution of large number of prefixes " "is desired and has not been configured by mistake"
OSPF4OSF_REDIS_THR_PFX	4-Warning	Threshold for maximum number of redistributed prefix has been reached \ospf [dec] \ - [dec][node]configured: [dec][node]prefixes [dec]	We have reached the threshold level of number of redistributed prefixes	ospf	"Check if redistribution of large number of prefixes " "is desired and has not been configured by mistake"
OSPF4RIRID_IN_USE	4-Warning	Router-ID [node]is in use by ospf process [dec]	Attempted to assign a Router ID which is in use by another process	ospf	"Configure another Router ID for one of the " "processes."
OSPF4RIRID_IN_USE	4-Warning	Router-ID [node]is in use by ospf process [dec]	Attempted to assign a Router ID which is in use by another process	ospf	"Configure another Router ID for one of the " "processes."
OSPF4SR_APP_GET_ATTR_FAIL	4-Warning	[chars] failed to get SR attributes from SR_APP with error [dec]	OSPF process failed to get SR attributes.	ospf	"Reconfigure segment routing attributes."
OSPF4SR_APP_GET_ATTR_FAIL	4-Warning	[chars] failed to get SR attributes from SR_APP with error [dec]	OSPF process failed to get SR attributes.	ospf	"Reconfigure segment routing attributes."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPF-4SR_APP_REG_FAIL	4-Warning	[chars] failed to register with SR_APP with error [dec]	OSPF process registration with SR APP failed.	ospf	"Reconfigure segment routing and Restart OSPF process."
OSPF-4SR_APP_REG_FAIL	4-Warning	[chars] failed to register with SR_APP with error [dec]	OSPF process registration with SR APP failed.	ospf	"Reconfigure segment routing and Restart OSPF process."
OSPF-4SR_MFI_REG_FAIL	4-Warning	[chars] failed to register with MFI with error [dec]	Disable/Re-Enable segment-routnig in this OSPF Process.	ospf	"Disable/Re-Enable segment-routing in this OSPF process."
OSPF-4SR_MFI_REG_FAIL	4-Warning	[chars] failed to register with MFI with error [dec]	Disable/Re-Enable segment-routnig in this OSPF Process.	ospf	"Disable/Re-Enable segment-routing in this OSPF process."
OSPF-4UNREC_TIMER	4-Warning	Unrecognized timer [dec] in OSPF [chars]	An internal error occurred.	ospf	LOG_SID_SH_TECH_ACTION
OSPF-4UNREC_TIMER	4-Warning	Unrecognized timer [dec] in OSPF [chars]	An internal error occurred.	ospf	LOG_SID_SH_TECH_ACTION
<del>OSPF-4VIRTUAL_NON_BACKBONE</del>	4-Warning	Virtual link information found in non-backbone area: [chars]	An internal software error has caused this router to generate a Router LSA that has a virtual link in a non-backbone area.	ospf	LOG_SID_SH_TECH_ACTION
<del>OSPF-4VIRTUAL_NON_BACKBONE</del>	4-Warning	Virtual link information found in non-backbone area: [chars]	An internal software error has caused this router to generate a Router LSA that has a virtual link in a non-backbone area.	ospf	LOG_SID_SH_TECH_ACTION
OSPF-5-ADJCHG	5-Notice	Process [dec] Nbr [node] on [chars] from [chars] to [chars] [chars]	An OSPF neighbor has changed state. The message describes the change and the reason for it. This message appears only if the <del>&lt;adjacency-nbr&gt;</del> command is configured for the OSPF process.	ospf	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPF-5-ADJCHG	5-Notice	Process [dec] Nbr [node] on [chars] from [chars] to [chars] [chars]	An OSPF neighbor has changed state. The message describes the change and the reason for it. This message appears only if the <del>&lt;Debugging&gt;</del> <del>&lt;Nbr&gt;</del> command is configured for the OSPF process.	ospf	LOG_SID_NO_ACTION
OSPF-5-EXPIREDKEY	5-Notice	Packet [chars] on interface [chars] with expired Key ID [node]	The Key ID in use has a lifetime and the system time is not within that lifetime	ospf	"Configure a new key"
OSPF-5-EXPIREDKEY	5-Notice	Packet [chars] on interface [chars] with expired Key ID [node]	The Key ID in use has a lifetime and the system time is not within that lifetime	ospf	"Configure a new key"
OSPF-5-LASTKEYEXP	5-Notice	The last key has expired for interface [chars] packets sent using last valid key.	None of the security associations have a lifetime that include the current system time.	ospf	"Configure a new security association or alter the lifetime of a " "current security association"
OSPF-5-LASTKEYEXP	5-Notice	The last key has expired for interface [chars] packets sent using last valid key.	None of the security associations have a lifetime that include the current system time.	ospf	"Configure a new security association or alter the lifetime of a " "current security association"
OSPF-5-NOCRYPTOALG	5-Notice	Key ID [node] in key chain [chars] does not have a cryptographic algorithm	OSPF has been configured to use cryptographic authentication however an algorithm has not been configured	ospf	"Configure a cryptographic-algorithm for the security association"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPF-5-NOCRYPTOALG	5-Notice	Key ID [node]in key chain [chars] does not have a cryptographic algorithm	OSPF has been configured to use cryptographic authentication however an algorithm has not been configured	ospf	"Configure a cryptographic-algorithm for the security association"
OSPF-5-NOKEY	5-Notice	Key ID [node]in key chain [chars] does not have a key	OSPF has been configured to use cryptographic authentication however an key password has not been configured	ospf	"Configure a key for the security association"
OSPF-5-NOKEY	5-Notice	Key ID [node]in key chain [chars] does not have a key	OSPF has been configured to use cryptographic authentication however an key password has not been configured	ospf	"Configure a key for the security association"
<del>OSPF-5-NOKEY</del>	5-Notice	Recovered from Redistribution limit-hit scenario on \ospf [dec]\ prefix count is less than threshold - [dec][node]configured: [dec][node]	We have recovered from redistributed prefix limit scenario	ospf	"No action required. This is an informational message " "for recovering from an issue"
<del>OSPF-5-NOKEY</del>	5-Notice	Recovered from Redistribution limit-hit scenario on \ospf [dec]\ prefix count is less than threshold - [dec][node]configured: [dec][node]	We have recovered from redistributed prefix limit scenario	ospf	"No action required. This is an informational message " "for recovering from an issue"
OSPF-6-AREACHG	6-Information	[node]m changed from area [chars] to area [chars]	An OSPF configuration change has caused a network range to change areas.	ospf	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPF-6-AREACHG	6-Information	[node]m changed from area [chars] to area [chars]	An OSPF configuration change has caused a network range to change areas.	ospf	LOG_SID_NO_ACTION
OSPF6BAD_LSA_COUNT	6-Information	OSPF-[dec] Area [chars]: LSA ID [node]Type [dec] Adv-rtr [node]LSA counter [chars]	An internal error has been self corrected. There's no operational impact related to this error message.	ospf	show tech-support ospf
OSPF6BAD_LSA_COUNT	6-Information	OSPF-[dec] Area [chars]: LSA ID [node]Type [dec] Adv-rtr [node]LSA counter [chars]	An internal error has been self corrected. There's no operational impact related to this error message.	ospf	show tech-support ospf
OSPF-6-BADCHKSUM	6-Information	Checksum Failure in database in area [chars]\n Link State Id [node]Old Checksum [hex] New Checksum [hex]\n	OSPF has detected a checksum error in the database due to memory corruption.	ospf	"Restart OSPF process."
OSPF-6-BADCHKSUM	6-Information	Checksum Failure in database in area [chars]\n Link State Id [node]Old Checksum [hex] New Checksum [hex]\n	OSPF has detected a checksum error in the database due to memory corruption.	ospf	"Restart OSPF process."
OSPF-6-DFT_OPT	6-Information	Protocol timers for fast convergence are [chars].	Routing-default-optimize state	ospf	LOG_STD_ACTION
OSPF-6-DFT_OPT	6-Information	Protocol timers for fast convergence are [chars].	Routing-default-optimize state	ospf	LOG_STD_ACTION
OSPF-6-DISTLS_DUPID	6-Information	OSPF-[dec] is already using Link state distribution instance [node] Please configure a unique value	Link state distribution instance-id should be unique across all OSPF instances	ospf	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPF-6-DISTLS_DUPID	6-Information	OSPF-[dec] is already using Link state distribution instance [node] Please configure a unique value	Link state distribution instance-id should be unique across all OSPF instances	ospf	LOG_STD_NO_ACTION
<del>OSPF-6-RB_WRONG_REF_CNT</del>	6-Information	[chars] Invalid reference count for [chars]	Negative database reference count	ospf	show tech-support ospf
<del>OSPF-6-RB_WRONG_REF_CNT</del>	6-Information	[chars] Invalid reference count for [chars]	Negative database reference count	ospf	show tech-support ospf
<del>OSPF-6-MAX_LSA_INCREMENT</del>	6-Information	Max-lsa ignore timed out in process [dec]. Adjacencies will be brought up by accepting and sending hellos. Ignore count cfg: [dec] cur [dec]	After ignore time OSPF will bring up the adjacencies by sending and accepting Hello packets. If the LSA count exceeds the max-limit again then the adjacencies will be brought down.	ospf	"Check if some router in the network is generating " "large number of LSAs as a result of misconfiguration."
<del>OSPF-6-MAX_LSA_INCREMENT</del>	6-Information	Max-lsa ignore timed out in process [dec]. Adjacencies will be brought up by accepting and sending hellos. Ignore count cfg: [dec] cur [dec]	After ignore time OSPF will bring up the adjacencies by sending and accepting Hello packets. If the LSA count exceeds the max-limit again then the adjacencies will be brought down.	ospf	"Check if some router in the network is generating " "large number of LSAs as a result of misconfiguration."
<del>OSPF-6-MAX_LSA_RIR_NO</del>	6-Information	Top [dec] LSA contributor in process [dec]. RTR:[node]Total:[dec] Type3:[dec] Type5:[dec] Type7:[dec] Type10:[dec] Type11:[dec] Others:[dec]	When number of non self originated LSAs exceeds the configured threshold or max-lsa value LSA count information from top 5 contributors are displayed	ospf	"Check if given routers in the network are " "generating large number of LSAs as a result of misconfiguration."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPF-6-MAX_LSA_RTR_NO	6-Information	Top [dec] LSA contributor in process [dec]. RTR:[node]Total:[dec] Type3:[dec] Type5:[dec] Type7:[dec] Type10:[dec] Type11:[dec] Others:[dec]	When number of non self originated LSAs exceeds the configured threshold or max-lsa value LSA count information from top 5 contributors are displayed	ospf	"Check if given routers in the network are "generating large number of LSAs as a result of misconfiguration."
OSPF-6-MODECHG	6-Information	Base topology enabled on interface [chars] attached to MTR compatible mode area [chars]	OSPF Interfaces attached to MTR compatible OSPF areas require the base topology to be enabled	ospf	LOG_SID_NO_ACTION
OSPF-6-MODECHG	6-Information	Base topology enabled on interface [chars] attached to MTR compatible mode area [chars]	OSPF Interfaces attached to MTR compatible OSPF areas require the base topology to be enabled	ospf	LOG_SID_NO_ACTION
OSPF-6-NEW_RTRID	6-Information	New router-id will take effect immediately. If OSPF adjacencies are UP for OSPF-[dec] they will be reset.	router-id has been changed	-	LOG_SID_NO_ACTION
OSPF-6-NEW_RTRID	6-Information	New router-id will take effect immediately. If OSPF adjacencies are UP for OSPF-[dec] they will be reset.	router-id has been changed	-	LOG_SID_NO_ACTION
OSPF-6-NSF_COMPLETE	6-Information	OSPF-[dec] NSF completed	NSF completed notification	ospf	LOG_SID_NO_ACTION
OSPF-6-NSF_COMPLETE	6-Information	OSPF-[dec] NSF completed	NSF completed notification	ospf	LOG_SID_NO_ACTION
OSPF-6-NSF_START	6-Information	OSPF-[dec] NSF started	NSF start notification	ospf	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPF-6-NSF_START	6-Information	OSPF-[dec] NSF started	NSF start notification	ospf	LOG_SID_NO_ACTION
OSPF-6-NSF_TERMINATE	6-Information	OSPF-[dec] NSF terminated	NSF terminated notification	ospf	LOG_SID_NO_ACTION
OSPF-6-NSF_TERMINATE	6-Information	OSPF-[dec] NSF terminated	NSF terminated notification	ospf	LOG_SID_NO_ACTION
OSPF-6-PROC_REMOVED_INT	6-Information	OSPF process [dec] removed from interface [chars]	The OSPF process was removed from the interface due to IP VRF removal.	ospf	LOG_SID_NO_ACTION
OSPF-6-PROC_REMOVED_INT	6-Information	OSPF process [dec] removed from interface [chars]	The OSPF process was removed from the interface due to IP VRF removal.	ospf	LOG_SID_NO_ACTION
OSPF-6-REFR_WRONG_REF_CNT	6-Information	OSPF-[dec] Invalid reference count for %i	Negative database reference count	ospf	show tech-support ospf
OSPF-6-REFR_WRONG_REF_CNT	6-Information	OSPF-[dec] Invalid reference count for %i	Negative database reference count	ospf	show tech-support ospf
OSPF-6-SRMS_DB_FREE	6-Information	[chars] LSA [dec]/[node][node]freed while linked to srms entry [node][dec] range %u	OSPF process free LSA which is still linked to SRMS. \n Necessary actions has been taken and message has no functional impact	ospf	"Contact your Cisco technical support representative."
OSPF-6-SRMS_DB_FREE	6-Information	[chars] LSA [dec]/[node][node]freed while linked to srms entry [node][dec] range %u	OSPF process free LSA which is still linked to SRMS. \n Necessary actions has been taken and message has no functional impact	ospf	"Contact your Cisco technical support representative."
OSPF-6-UNREC_VRTN_INT_TYPE	6-Information	Unrecognized virtual interface [chars]. Treat it as loopback stub route	The virtual interface type was not recognized by OSPF so it will be treated as a loopback interface stub route.	ospf	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPF6UNRECVRTN_TYIE	6-Information	Unrecognized virtual interface [chars]. Treat it as loopback stub route	The virtual interface type was not recognized by OSPF so it will be treated as a loopback interface stub route.	ospf	LOG_SID_NO_ACTION
OSPF6ZERO_BANDWDIHI	6-Information	interface [chars] has zero bandwidth	The interface has reported its bandwidth as zero.	ospf	LOG_SID_NO_ACTION
OSPF6ZERO_BANDWDIHI	6-Information	interface [chars] has zero bandwidth	The interface has reported its bandwidth as zero.	ospf	LOG_SID_NO_ACTION
OSPF31MAX_LSA_LIM	1-Alert	[chars] Maximum number of non self-generated LSA has been exceeded - configured max: [dec] current: [dec] LSAs	Maximum number of non self-generated LSA has been exceeded	ospf	"Check if some router in the network is generating large number of " "LSAs as a result of misconfiguration"
OSPF31MAX_LSA_LIM	1-Alert	[chars] Maximum number of non self-generated LSA has been exceeded - configured max: [dec] current: [dec] LSAs	Maximum number of non self-generated LSA has been exceeded	ospf	"Check if some router in the network is generating large number of " "LSAs as a result of misconfiguration"
OSPF31REDST_PREFIX_MAX	1-Alert	Redistribution prefix limit has been reached \[chars]\ - configured max: [dec] current: [dec] prefixes	We have reached the maximum number of redistributed prefixes	ospf	"Check if redistribution of large number of " "prefixes is desired and has not been configured by mistake"
OSPF31REDST_PREFIX_MAX	1-Alert	Redistribution prefix limit has been reached \[chars]\ - configured max: [dec] current: [dec] prefixes	We have reached the maximum number of redistributed prefixes	ospf	"Check if redistribution of large number of " "prefixes is desired and has not been configured by mistake"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSPF</del> MAXLSA_IGNORE	2-Critical	Max-lsa ignore count exceeded in process [dec] - Staying in ignore state. Clear OSPF process to recover. Ignore count cfg: [dec] cur: [dec]	When the OSPF adjacencies bring up after max-lsa exceeds the configured ignore count times then OSPF will stay in ignore state itself and Clear is required to bring back the adjacencies	ospf	"Check if some router in the network is generating large number of " "LSAs as a result of misconfiguration."
<del>OSPF</del> MAXLSA_IGNORE	2-Critical	Max-lsa ignore count exceeded in process [dec] - Staying in ignore state. Clear OSPF process to recover. Ignore count cfg: [dec] cur: [dec]	When the OSPF adjacencies bring up after max-lsa exceeds the configured ignore count times then OSPF will stay in ignore state itself and Clear is required to bring back the adjacencies	ospf	"Check if some router in the network is generating large number of " "LSAs as a result of misconfiguration."
OSPFv3-3-CF_NOMEM	3-Error	Unable to allocate checkpoint buffer: [chars]	NSR operation may be degraded to a lack of memory.	ospf	show tech-support ospfv3
OSPFv3-3-CF_NOMEM	3-Error	Unable to allocate checkpoint buffer: [chars]	NSR operation may be degraded to a lack of memory.	ospf	show tech-support ospfv3
OSPFv3-3-CF_NOMSG	3-Error	No space in checkpoint buffer	NSR operation may be degraded to a lack of memory.	ospf	show tech-support ospfv3
OSPFv3-3-CF_NOMSG	3-Error	No space in checkpoint buffer	NSR operation may be degraded to a lack of memory.	ospf	show tech-support ospfv3
<del>OSPF</del> IGNR_ALLOC_FAIL	3-Error	[chars] Could not allocate or find the neighbor	An internal error occurred.	ospf	LOG_STD_ACTION
<del>OSPF</del> IGNR_ALLOC_FAIL	3-Error	[chars] Could not allocate or find the neighbor	An internal error occurred.	ospf	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSPFv3CFG_OSPF_FAILED</del>	3-Error	Only [dec] OSPFv3 process is allowed	The maximum number of OSPFv3 instances permitted for this IOS image has been reached	-	"Upgrade to an unrestricted IOS image"
<del>OSPFv3CFG_OSPF_FAILED</del>	3-Error	Only [dec] OSPFv3 process is allowed	The maximum number of OSPFv3 instances permitted for this IOS image has been reached	-	"Upgrade to an unrestricted IOS image"
<del>OSPFv3CHKPTB_ENCODE_FAIL</del>	3-Error	Interface cannot be decoded for NSR: [chars]	Adjacency and interface information for an interface cannot be checkpointed due to an interface decoding error.	ospf	"Please verify that this interface type is supported for NSR in " "this release. If so report the problem to the TAC."
<del>OSPFv3CHKPTB_ENCODE_FAIL</del>	3-Error	Interface cannot be decoded for NSR: [chars]	Adjacency and interface information for an interface cannot be checkpointed due to an interface decoding error.	ospf	"Please verify that this interface type is supported for NSR in " "this release. If so report the problem to the TAC."
<del>OSPFv3CHKPTB_ENCODE_FAIL</del>	3-Error	Interface [chars] cannot be encoded for NSR	Adjacency and interface information learned from this interface cannot be checkpointed due to an interface encoding error.	ospf	"Please verify that this interface type is supported for NSR in " "this release. If so report the problem to the TAC."
<del>OSPFv3CHKPTB_ENCODE_FAIL</del>	3-Error	Interface [chars] cannot be encoded for NSR	Adjacency and interface information learned from this interface cannot be checkpointed due to an interface encoding error.	ospf	"Please verify that this interface type is supported for NSR in " "this release. If so report the problem to the TAC."
OSPFv3-3-CHKPT_MSG	3-Error	Invalid checkpoint message: [chars] [chars]	NSR will not operate due to an error in a checkpoint message.	ospf	show tech-support ospfv3
OSPFv3-3-CHKPT_MSG	3-Error	Invalid checkpoint message: [chars] [chars]	NSR will not operate due to an error in a checkpoint message.	ospf	show tech-support ospfv3

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSPF</del> 33CHKPT_MSG_LOST	3-Error	Checkpoint message lost	NSR will not operate due to a dropped checkpoint message.	ospf	show tech-support ospfv3
<del>OSPF</del> 33CHKPT_MSG_LOST	3-Error	Checkpoint message lost	NSR will not operate due to a dropped checkpoint message.	ospf	show tech-support ospfv3
<del>OSPF</del> 33CHKPT_NOMEM	3-Error	Unable to allocate checkpoint queue entry	NSR will not operate due to a failure communicating with the standby.	ospf	show tech-support ospfv3
<del>OSPF</del> 33CHKPT_NOMEM	3-Error	Unable to allocate checkpoint queue entry	NSR will not operate due to a failure communicating with the standby.	ospf	show tech-support ospfv3
<del>OSPF</del> 33CHKPT_SEND_FAIL	3-Error	Checkpoint message send failed: [chars]	NSR will not operate due to a failure communicating with the standby.	ospf	show tech-support ospfv3
<del>OSPF</del> 33CHKPT_SEND_FAIL	3-Error	Checkpoint message send failed: [chars]	NSR will not operate due to a failure communicating with the standby.	ospf	show tech-support ospfv3
<del>OSPF</del> 33CHKPT_STAUS_LOST	3-Error	Checkpoint status lost	NSR will not operate due to a missing checkpoint status message.	ospf	show tech-support ospfv3
<del>OSPF</del> 33CHKPT_STAUS_LOST	3-Error	Checkpoint status lost	NSR will not operate due to a missing checkpoint status message.	ospf	show tech-support ospfv3
<del>OSPF</del> 33CHKPT_STBY_LINK_STATE_VALIDATION_FAILED	3-Error	Standby link-state database validation failed expected/found count: [node][node]checksum: 0x[node]x/0x[node]x	NSR will not operate due to an error on the standby.	ospf	show tech-support ospfv3

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSPF3CHKPTSIBYISDNAD</del>	3-Error	Standby link-state database validation failed expected/found count: [node][node]chksum: 0x[node]x/0x[node]x	NSR will not operate due to an error on the standby.	ospf	show tech-support ospfv3
<del>OSPF3KPTSIBY_NLSA_B_HJR</del>	3-Error	Standby synchronization error: no LSA buffer	NSR will not operate due to an internal error.	ospf	show tech-support ospfv3
<del>OSPF3KPTSIBY_NLSA_B_HJR</del>	3-Error	Standby synchronization error: no LSA buffer	NSR will not operate due to an internal error.	ospf	show tech-support ospfv3
<del>OSPF3CHKPTSIBY_NLSA_B</del>	3-Error	Standby synchronization error: could not add lsa type [dec]	NSR will not operate due to an internal error.	ospf	show tech-support ospfv3
<del>OSPF3CHKPTSIBY_NLSA_B</del>	3-Error	Standby synchronization error: could not add lsa type [dec]	NSR will not operate due to an internal error.	ospf	show tech-support ospfv3
<del>OSPF3CHKPTSIBY_NON_R</del>	3-Error	Standby synchronization error: could not find neighbor [chars] [node]%P	NSR will not operate due to an internal error.	ospf	show tech-support ospfv3
<del>OSPF3CHKPTSIBY_NON_R</del>	3-Error	Standby synchronization error: could not find neighbor [chars] [node]%P	NSR will not operate due to an internal error.	ospf	show tech-support ospfv3
<del>OSPF3CHKPTSIBY_SN_CICF</del>	3-Error	Standby synchronization lost for OSPFv3-[dec] AFI [chars] VRF [chars] was: [chars]	Synchronization between the active and standby OSPFv3 has been lost.	ospf	show tech-support ospfv3
<del>OSPF3CHKPTSIBY_SN_CICF</del>	3-Error	Standby synchronization lost for OSPFv3-[dec] AFI [chars] VRF [chars] was: [chars]	Synchronization between the active and standby OSPFv3 has been lost.	ospf	show tech-support ospfv3

Code-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPFv3-3-DBEXIST	3-Error	[chars] DB already exist : area [chars] lsid [node]adv [node]type 0x[hec]	OSPF has a problem locating the LSA which could lead to a memory leak.	ospf	LOG_SID_SH_TECH_ACTION
OSPFv3-3-DBEXIST	3-Error	[chars] DB already exist : area [chars] lsid [node]adv [node]type 0x[hec]	OSPF has a problem locating the LSA which could lead to a memory leak.	ospf	LOG_SID_SH_TECH_ACTION
OSPFv3-3-INIT_IDB	3-Error	OSPF is enabled on [chars] during idb initialization	An internal error occurred.	-	LOG_SID_SH_TECH_ACTION
OSPFv3-3-INIT_IDB	3-Error	OSPF is enabled on [chars] during idb initialization	An internal error occurred.	-	LOG_SID_SH_TECH_ACTION
<del>OSPFv3-3-INIT_IDB</del>	3-Error	[chars] Interface [chars] is attached to more than one area	The interface is on the interface list for an area other than the one which the interface links to.	ospf	LOG_SID_SH_TECH_ACTION
<del>OSPFv3-3-INIT_IDB</del>	3-Error	[chars] Interface [chars] is attached to more than one area	The interface is on the interface list for an area other than the one which the interface links to.	ospf	LOG_SID_SH_TECH_ACTION
OSPFv3-3-INT_INIT_FAILED	3-Error	[chars] Init failed for interface [chars] [chars].	The interface initialization failed. Possible reasons: 1 The area to which the interface is being attached is being	ospf	"Remove the configuration command that covers the interface " "and then try it again. " LOG_SID_RECUR_ACTION
OSPFv3-3-INT_INIT_FAILED	3-Error	[chars] Init failed for interface [chars] [chars].	The interface initialization failed. Possible reasons: 1 The area to which the interface is being attached is being	ospf	"Remove the configuration command that covers the interface " "and then try it again. " LOG_SID_RECUR_ACTION
OSPFv3-3-INTERNALERR	3-Error	[chars] Internal error: [chars] [chars]	An internal software error occurred.	-	LOG_STD_ACTION
OSPFv3-3-INTERNALERR	3-Error	[chars] Internal error: [chars] [chars]	An internal software error occurred.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSPF3</del> INVALID_ENCR_KEY	3-Error	Invalid encrypted key [chars].	The specified encrypted key is not valid.	-	"Either specify a cleartext key and enter the <CmdBold>service " <del>password-encryption</del> <CmdBdt> command for encryption or ensure " "that the specified encrypted key is valid. If the specified " "encrypted key is not valid an error message will be displayed " "during system configuration."
<del>OSPF3</del> INVALID_ENCR_KEY	3-Error	Invalid encrypted key [chars].	The specified encrypted key is not valid.	-	"Either specify a cleartext key and enter the <CmdBold>service " <del>password-encryption</del> <CmdBdt> command for encryption or ensure " "that the specified encrypted key is valid. If the specified " "encrypted key is not valid an error message will be displayed " "during system configuration."
<del>OSPF3</del> IPSEC_POLICY_AREA	3-Error	service password-encryption is not supported as IPSEC encryption policy SPI [node]with AES-CBC 256bit is configured under OSPFv3 area [chars]	Check if any OSPFv3 ipsec policy with AES-CBC 256bit encryption type configured under ospfv3 area	-	"Unconfigure OSPFv3 ipsec policy with AES-CBC 256bit encryption type " "from ospfv3 area"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSPFV3_IPSEC_POLICY_ERROR</del>	3-Error	service password-encryption is not supported as IPSEC encryption policy SPI [node]with AES-CBC 256bit is configured under OSPFv3 area [chars]	Check if any OSPFv3 ipsec policy with AES-CBC 256bit encryption type configured under ospfv3 area	-	"Unconfigure OSPFv3 ipsec policy with AES-CBC 256bit encryption type " "from ospfv3 area"
<del>OSPFV3_IPSEC_POLICY_ERROR</del>	3-Error	service password-encryption is not supported as IPSEC encryption policy SPI [node]with AES-CBC 256bit is configured under interface [chars]	Check if any OSPFv3 ipsec policy with AES-CBC 256bit encryption type configured under an interface	-	"Unconfigure OSPFv3 ipsec policy with AES-CBC 256bit encryption type " "from interface"
<del>OSPFV3_IPSEC_POLICY_ERROR</del>	3-Error	service password-encryption is not supported as IPSEC encryption policy SPI [node]with AES-CBC 256bit is configured under interface [chars]	Check if any OSPFv3 ipsec policy with AES-CBC 256bit encryption type configured under an interface	-	"Unconfigure OSPFv3 ipsec policy with AES-CBC 256bit encryption type " "from interface"
<del>OSPFV3_IPSEC_POLICY_ERROR</del>	3-Error	[chars] Unable to close secure socket with SPI [node]on interface [chars]	An IPsec API error occurred. This message indicates an internal error	-	LOG_SID_RECUR_ACTION
<del>OSPFV3_IPSEC_POLICY_ERROR</del>	3-Error	[chars] Unable to close secure socket with SPI [node]on interface [chars]	An IPsec API error occurred. This message indicates an internal error	-	LOG_SID_RECUR_ACTION
<del>OSPFV3_IPSEC_POLICY_ERROR</del>	3-Error	[chars] [chars] error occured when attempting to create an IPsec policy for SPI %u	An IPsec API error occurred. This message indicates an internal error	-	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSPFSEC</del> _ <del>ERR</del> _ <del>MG</del> _ <del>ABORT</del>	3-Error	[chars] [chars] error occurred when attempting to create an IPsec policy for SPI %u	An IPsec API error occurred. This message indicates an internal error	-	LOG_SID_SH_TIECH_ACTION
<del>OSPFSEC</del> _ <del>ERR</del> _ <del>MG</del> _ <del>ABORT</del>	3-Error	[chars] IPsec sent a [chars] message [chars] to OSPFv3 for interface [chars]. Recovery aborted	An internal software error has occurred. The maximum number of recovery attempts have been exceeded.	-	LOG_SID_SH_TIECH_ACTION
<del>OSPFSEC</del> _ <del>ERR</del> _ <del>MG</del> _ <del>ABORT</del>	3-Error	[chars] IPsec sent a [chars] message [chars] to OSPFv3 for interface [chars]. Recovery aborted	An internal software error has occurred. The maximum number of recovery attempts have been exceeded.	-	LOG_SID_SH_TIECH_ACTION
<del>OSPFSEC</del> _ <del>ERR</del> _ <del>MG</del> _ <del>RETRY</del>	3-Error	[chars] IPsec sent a [chars] message [chars] to OSPFv3 for interface [chars]. Recovery attempt [dec]	An internal error occurred. The system is attempting to re-open the secure socket.	-	"The system is attempting to recover. No action needs to be taken."
<del>OSPFSEC</del> _ <del>ERR</del> _ <del>MG</del> _ <del>RETRY</del>	3-Error	[chars] IPsec sent a [chars] message [chars] to OSPFv3 for interface [chars]. Recovery attempt [dec]	An internal error occurred. The system is attempting to re-open the secure socket.	-	"The system is attempting to recover. No action needs to be taken."
<del>OSPFSEC</del> _ <del>ERR</del> _ <del>CNTRL</del> _ <del>ERR</del>	3-Error	IPsec reported a GENERAL ERROR: message [chars] count [dec]	An internal error occurred.	-	LOG_SID_SH_TIECH_ACTION
<del>OSPFSEC</del> _ <del>ERR</del> _ <del>CNTRL</del> _ <del>ERR</del>	3-Error	IPsec reported a GENERAL ERROR: message [chars] count [dec]	An internal error occurred.	-	LOG_SID_SH_TIECH_ACTION
<del>OSPFSEC</del> _ <del>ERR</del> _ <del>MY</del> _ <del>ALREADY</del> _ <del>USED</del>	3-Error	[chars] SPI [node] is already in use with ospf	An attempt was made to use a SPI that has already been used.	-	"Choose a different SPI"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSPF</del> <u>OSPF</u> <u>CRCY</u> <u>ALREADY</u> <u>EXIST</u>	3-Error	[chars] SPI [node]is already in use with ospf	An attempt was made to use a SPI that has already been used.	-	"Choose a different SPI"
<del>OSPF</del> <u>OSPF</u> <u>CRCY</u> <u>INVALID</u> <u>KEY</u> <u>LEN</u>	3-Error	[chars] The key length used with SPI [node]is not valid	The key length was incorrect.	-	"Choose a valid IPsec key. An IPsec authentication key must be " "32MD5 or 40SHA-1 hexadecimal digits long."
<del>OSPF</del> <u>OSPF</u> <u>CRCY</u> <u>INVALID</u> <u>KEY</u> <u>LEN</u>	3-Error	[chars] The key length used with SPI [node]is not valid	The key length was incorrect.	-	"Choose a valid IPsec key. An IPsec authentication key must be " "32MD5 or 40SHA-1 hexadecimal digits long."
<del>OSPF</del> <u>OSPF</u> <u>CRCY</u> <u>NOT</u> <u>EXIST</u>	3-Error	SPI [node]is not being used by ospf process [chars].	An attempt was made to unconfigure a SPI that is not being used with OSPFv3.	-	"Enter a show command to see which SPIs are used by OSPFv3"
<del>OSPF</del> <u>OSPF</u> <u>CRCY</u> <u>NOT</u> <u>EXIST</u>	3-Error	SPI [node]is not being used by ospf process [chars].	An attempt was made to unconfigure a SPI that is not being used with OSPFv3.	-	"Enter a show command to see which SPIs are used by OSPFv3"
<del>OSPF</del> <u>OSPF</u> <u>CRCY</u> <u>SH</u> <u>IN</u> <u>USE</u>	3-Error	[chars] SPI [node]is already in use by a process other than ospf	An attempt was made to use a SPI that has already been used.	-	"Choose a different SPI. Enter the <CmdBold>show crypto ipv6 " "ipsec sa<NoCmdBold> command to view a list of SPIs that are " "already being used."
<del>OSPF</del> <u>OSPF</u> <u>CRCY</u> <u>SH</u> <u>IN</u> <u>USE</u>	3-Error	[chars] SPI [node]is already in use by a process other than ospf	An attempt was made to use a SPI that has already been used.	-	"Choose a different SPI. Enter the <CmdBold>show crypto ipv6 " "ipsec sa<NoCmdBold> command to view a list of SPIs that are " "already being used."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSPF3SEC</del> _POLICY_SIRLUSE	3-Error	[chars] [chars] is already configured with SPI [node]	An attempt was made to use a SPI that has already been used	-	"Unconfigure the SPI first or choose a different one."
<del>OSPF3SEC</del> _POLICY_SIRLUSE	3-Error	[chars] [chars] is already configured with SPI [node]	An attempt was made to use a SPI that has already been used	-	"Unconfigure the SPI first or choose a different one."
<del>OSPF3SEC</del> _POLICY_SILNUSE	3-Error	[chars] The policy for SPI [node] could not be removed because it is in use.	An attempt was made to remove the policy for the indicated SPI but the policy was still being used by a secure socket.	-	LOG_SID_NO_ACTION
<del>OSPF3SEC</del> _POLICY_SILNUSE	3-Error	[chars] The policy for SPI [node] could not be removed because it is in use.	An attempt was made to remove the policy for the indicated SPI but the policy was still being used by a secure socket.	-	LOG_SID_NO_ACTION
<del>OSPF3SEC</del> _CRCSIRCLIENT	3-Error	OSPFv3 was unable to register with IPsec	An internal error occurred.	-	LOG_SID_SH_TECH_ACTION
<del>OSPF3SEC</del> _CRCSIRCLIENT	3-Error	OSPFv3 was unable to register with IPsec	An internal error occurred.	-	LOG_SID_SH_TECH_ACTION
<del>OSPF3SEC</del> _EMO_POLICY_BRCR	3-Error	[chars] [chars] error occurred when attempting to remove the IPsec policy with SPI %u	An IPsec API error occurred. This message indicates an internal error	-	LOG_SID_RECUR_ACTION
<del>OSPF3SEC</del> _EMO_POLICY_BRCR	3-Error	[chars] [chars] error occurred when attempting to remove the IPsec policy with SPI %u	An IPsec API error occurred. This message indicates an internal error	-	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPF3ISSU_NEGOTIATION	3-Error	ISSU negotiation[chars] error: [dec] [chars]	The OSPFv3 ISSU session could not complete negotiation. This failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	ospf	LOG_STD_ACTION
OSPF3ISSU_NEGOTIATION	3-Error	ISSU negotiation[chars] error: [dec] [chars]	The OSPFv3 ISSU session could not complete negotiation. This failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	ospf	LOG_STD_ACTION
OSPF3NO_SNMP_INDEX	3-Error	Interface [chars] does not have an SNMP MIB ifIndex and has been disabled	The OSPF process has been configured to use the SNMP MIB ifIndex\n\n value for the interface IDs. However the ifIndex is not set on this\n\n interface so the interface can not be enabled.	-	"Unconfigure interface-id snmp-if-index for this OSPF process"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPFv3-3-NO_SNP_INDEX	3-Error	Interface [chars] does not have an SNMP MIB ifIndex and has been disabled	The OSPF process has been configured to use the SNMP MIB ifIndex\n\ valuefor the interface IDs. However the ifIndex is not set on this\n\ interface so the interface can not be enabled.	-	"Unconfigure interface-id snmp-if-index for this OSPF process"
OSPFv3-3-NOBACKBONE	3-Error	[chars] Flagged as being an ABR without a backbone area	-	-	"Restart the OSPF process."
OSPFv3-3-NOBACKBONE	3-Error	[chars] Flagged as being an ABR without a backbone area	-	-	"Restart the OSPF process."
OSPFv3-3-NOSTART	3-Error	Unable to start process: [chars]	An internal software error occurred.	ospf	LOG_STD_ACTION
OSPFv3-3-NOSTART	3-Error	Unable to start process: [chars]	An internal software error occurred.	ospf	LOG_STD_ACTION
OSPFv3-3-NSR_FAILED	3-Error	NSR can not recover checkpointed data for process [dec]	An NSR failover could not be performed because OSPFv3 on the standby was not synchronized	ospf	show tech-support ospfv3
OSPFv3-3-NSR_FAILED	3-Error	NSR can not recover checkpointed data for process [dec]	An NSR failover could not be performed because OSPFv3 on the standby was not synchronized	ospf	show tech-support ospfv3

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPFv3-3-RECONF_VL	3-Error	Process [chars] is changing router-id. Reconfigure virtual link neighbors with our new router-id	OSPF process is being reset and it is going to select a new router-id. This will bring down all virtual links. To make them work again virtual link configuration needs to be changed on all virtual link neighbors.	-	"Change virtual link configuration on all the virtual link " "neighbors to reflect our new router-id."
OSPFv3-3-RECONF_VL	3-Error	Process [chars] is changing router-id. Reconfigure virtual link neighbors with our new router-id	OSPF process is being reset and it is going to select a new router-id. This will bring down all virtual links. To make them work again virtual link configuration needs to be changed on all virtual link neighbors.	-	"Change virtual link configuration on all the virtual link " "neighbors to reflect our new router-id."
<del>OSPFv3-3-RECONF_VL</del>	3-Error	service password-encryption is enabled OSPFv3 AES-CBC 256bit key encryption configuration is not supported	AES-CBC 256bit encryption type is not supported when service password encryption is enabled	-	"configure OSPFv3 ipsec policy with encryption type other than " "AES-CBC 256bit type"
<del>OSPFv3-3-RECONF_VL</del>	3-Error	service password-encryption is enabled OSPFv3 AES-CBC 256bit key encryption configuration is not supported	AES-CBC 256bit encryption type is not supported when service password encryption is enabled	-	"configure OSPFv3 ipsec policy with encryption type other than " "AES-CBC 256bit type"
OSPFv3-4-AREA_MISMATCH	4-Warning	[chars] Received packet with incorrect area from [node][chars] area [node] packet area %i	An OSPF packet was received with an area ID in its header which does not match the area of this interface.	-	"Check the OSPF configuration of the receiver and the sender " "for inconsistency."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPFv3/4AREA_MISMATCH	4-Warning	[chars] Received packet with incorrect area from [node][chars] area [node] packet area %i	An OSPF packet was received with an area ID in its header which does not match the area of this interface.	-	"Check the OSPF configuration of the receiver and the sender " "for inconsistency."
OSPFv3/4ASBR_WITHOUT_AREA	4-Warning	Router [chars] is currently an ASBR while having only one area which is a stub area	An ASBR must be attached to an area which can carry AS External or NSSA LSAs	ospf	"Make the area to which the router is attached into an NSSA " "or regular area."
OSPFv3/4ASBR_WITHOUT_AREA	4-Warning	Router [chars] is currently an ASBR while having only one area which is a stub area	An ASBR must be attached to an area which can carry AS External or NSSA LSAs	ospf	"Make the area to which the router is attached into an NSSA " "or regular area."
OSPFv3/4BADLENGTH	4-Warning	[chars] Invalid length [dec] in [chars] OSPF packet type [dec] from [node]ID [node][chars]	-	-	-
OSPFv3/4BADLENGTH	4-Warning	[chars] Invalid length [dec] in [chars] OSPF packet type [dec] from [node]ID [node][chars]	-	-	-
OSPFv3/4BADLSATYPE	4-Warning	[chars] Invalid lsa: [chars]: Type 0x[hec] Length 0x[hec] LSID [node]from [node] [node][chars]	The router received an LSA with invalid data. LSA contains invalid LSA type wrong checksum or wrong length. The cause is either memory corruption or unexpected behavior on a router.	-	"From a neighboring address locate the problem router.\n" "1 Collect a running configuration of the router by entering the"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPFv3-4BADLSATYPE	4-Warning	[chars] Invalid lsa: [chars]: Type 0x[hec] Length 0x[hec] LSID [node]from [node] [node][chars]	The router received an LSA with invalid data. LSA contains invalid LSA type wrong checksum or wrong length. The cause is either memory corruption or unexpected behavior on a router.	-	"From a neighboring address locate the problem router.\n" "1 Collect a running configuration of the router by entering the"
OSPFv3-4UNKNOWNSTATUS	4-Warning	Unknown checkpoint status: [dec]	An internal error occurred.	ospf	show tech-support ospfv3
OSPFv3-4UNKNOWNSTATUS	4-Warning	Unknown checkpoint status: [dec]	An internal error occurred.	ospf	show tech-support ospfv3
OSPFv3-4CHKPT_MSG_SEQ	4-Warning	Invalid checkpoint message sequence number: received [dec] expected [dec]	NSR has detected a duplicate checkpoint message.	ospf	show tech-support ospfv3
OSPFv3-4CHKPT_MSG_SEQ	4-Warning	Invalid checkpoint message sequence number: received [dec] expected [dec]	NSR has detected a duplicate checkpoint message.	ospf	show tech-support ospfv3
OSPFv3-4CHKPT_UNKNOWN_TYPE	4-Warning	Invalid checkpoint message type: [dec]	An internal error occurred.	ospf	show tech-support ospfv3
OSPFv3-4CHKPT_UNKNOWN_TYPE	4-Warning	Invalid checkpoint message type: [dec]	An internal error occurred.	ospf	show tech-support ospfv3
OSPFv3-4DB_NOT_FOUND	4-Warning	[chars] Can't find LSA database type [hec] area [chars] interface [chars]	An internal error occurred.	ospf	LOG_SID_SH_TECH_ACTION
OSPFv3-4DB_NOT_FOUND	4-Warning	[chars] Can't find LSA database type [hec] area [chars] interface [chars]	An internal error occurred.	ospf	LOG_SID_SH_TECH_ACTION
OSPFv3-4DBD_ALLOC_FAIL	4-Warning	[chars] Could not allocate DBD packet	An internal error occurred.	ospf	LOG_SID_SH_TECH_ACTION
OSPFv3-4DBD_ALLOC_FAIL	4-Warning	[chars] Could not allocate DBD packet	An internal error occurred.	ospf	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPFv34DUP_RIRID_AREA	4-Warning	[chars] Detected router with duplicate router ID [node]in area [chars]	OSPF received hello packet from a neighbor which has the same\n\n router-id as this routing process. A full adjacency cannot be \n\n established.	-	"OSPF router-id should be unique. Change the neighbors router-id"
OSPFv34DUP_RIRID_AREA	4-Warning	[chars] Detected router with duplicate router ID [node]in area [chars]	OSPF received hello packet from a neighbor which has the same\n\n router-id as this routing process. A full adjacency cannot be \n\n established.	-	"OSPF router-id should be unique. Change the neighbors router-id"
OSPFv34DUP_RIRID_NBR	4-Warning	[chars] detected duplicate router-id [node]from [node]on interface [chars]	-	-	-
OSPFv34DUP_RIRID_NBR	4-Warning	[chars] detected duplicate router-id [node]from [node]on interface [chars]	-	-	-
OSPFv3-4-ERRRCV	4-Warning	[chars] Received invalid packet: [chars] from [node][chars]	An invalid OSPF packet was received. Details are included in the error\n\n message. The cause might be a misconfigured OSPF or an internal error\n\n in the sender.	-	"Check the OSPF configuration of the receiver and the sender for\n\n inconsistency."
OSPFv3-4-ERRRCV	4-Warning	[chars] Received invalid packet: [chars] from [node][chars]	An invalid OSPF packet was received. Details are included in the error\n\n message. The cause might be a misconfigured OSPF or an internal error\n\n in the sender.	-	"Check the OSPF configuration of the receiver and the sender for\n\n inconsistency."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPF34INVALID_BLD_HLG	4-Warning	[chars] Invalid build flag [hec] for LSA [node]type 0x[hec]	An internal error occurred.	ospf	LOGS_IDS_H_TECH_ACTION
OSPF34INVALID_BLD_HLG	4-Warning	[chars] Invalid build flag [hec] for LSA [node]type 0x[hec]	An internal error occurred.	ospf	LOGS_IDS_H_TECH_ACTION
OSPF34INVALID_METRIC	4-Warning	[chars] Area [chars]: Router [node]originating invalid type 0x[hec] LSA ID [node]Metric [dec] on Link ID [dec] Link Type [dec]	The router indicated in this message has originated an LSA with invalid metric. If this is an router LSA and link metric is zero there's a risk of routing loops and traffic loss in the network	ospf	"Configure valid metric for given LSA type and link type on " "the router originating reported LSA"
OSPF34INVALID_METRIC	4-Warning	[chars] Area [chars]: Router [node]originating invalid type 0x[hec] LSA ID [node]Metric [dec] on Link ID [dec] Link Type [dec]	The router indicated in this message has originated an LSA with invalid metric. If this is an router LSA and link metric is zero there's a risk of routing loops and traffic loss in the network	ospf	"Configure valid metric for given LSA type and link type on " "the router originating reported LSA"
OSPF34INVALID_KEY_ID	4-Warning	Key ID [node]in key chain [chars] is invalid	They Key ID configured in the key chain is out of range for OSPF. This may happen because the key chain allows Key ID values outside of the range which is acceptable for OSPFv3.	ospf	"Configure a new security association with a Key ID that is in " "the range 1-65535"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPFv34INVALIDKEYID	4-Warning	Key ID [node]in key chain [chars] is invalid	They Key ID configured in the key chain is out of range for OSPF. This may happen because the key chain allows Key ID values outside of the range which is acceptable for OSPFv3.	ospf	"Configure a new security association with a Key ID that is in " "the range 1-65535"
OSPFv34INVALIDKNAME	4-Warning	Key chain name [chars] is invalid	The key-chain name configured under OSPF interface does not match global key chain configuration.	ospf	"Fix configuration. Either remove ospf authentication command " "or configure key chain in global configuration mode."
OSPFv34INVALIDKNAME	4-Warning	Key chain name [chars] is invalid	The key-chain name configured under OSPF interface does not match global key chain configuration.	ospf	"Fix configuration. Either remove ospf authentication command " "or configure key chain in global configuration mode."
OSPFv34INVALIDSAID	4-Warning	SA ID '0' [chars]on interface [chars]	The SA ID '0' is considered invalid	ospf	"Configure a new security association with the valid Key ID"
OSPFv34INVALIDSAID	4-Warning	SA ID '0' [chars]on interface [chars]	The SA ID '0' is considered invalid	ospf	"Configure a new security association with the valid Key ID"
OSPFv34MANET_VRMS_MACH	4-Warning	Non-standard MANet implementation detected on neighbor %i	An OSPF packet was received with LLS data but without a Type 1 Extended Options and Flags TLV indicating an older MANet implementation.	-	"Check the version of software running on the neighbor."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPF3MANET_VERNMACH	4-Warning	Non-standard MANet implementation detected on neighbor %i	An OSPF packet was received with LLS data but without a Type 1 Extended Options and Flags TLV indicating an older MANet implementation.	-	"Check the version of software running on the neighbor."
OSPF3MAXLSACNCFENIR	4-Warning	Max LSA exceeded in process [dec]. Adjacencies will be kept down for ignore time of [node] minutes. Ignore count cfg: [dec] cur: [dec]	When the non-self-generated LSAs exceed the configured max-limit then the adjacencies are brought down.	ospf	"Check if some router in the network is generating " "large number of LSAs as a result of misconfiguration."
OSPF3MAXLSACNCFENIR	4-Warning	Max LSA exceeded in process [dec]. Adjacencies will be kept down for ignore time of [node] minutes. Ignore count cfg: [dec] cur: [dec]	When the non-self-generated LSAs exceed the configured max-limit then the adjacencies are brought down.	ospf	"Check if some router in the network is generating " "large number of LSAs as a result of misconfiguration."
OSPF34MAX_LSA_THR	4-Warning	[chars] Threshold for maximum number of non self-generated LSA has been reached - [dec][node]configured : [dec][node]LSAs [dec] configured max: [dec]	Threshold for maximum number of non self-generated LSA has been reached	ospf	"Check if some router in the network is generating large number of " "LSAs as a result of misconfiguration"
OSPF34MAX_LSA_THR	4-Warning	[chars] Threshold for maximum number of non self-generated LSA has been reached - [dec][node]configured : [dec][node]LSAs [dec] configured max: [dec]	Threshold for maximum number of non self-generated LSA has been reached	ospf	"Check if some router in the network is generating large number of " "LSAs as a result of misconfiguration"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPF3-NETTYPE_MISMATCH	4-Warning	Received Hello from [node] on [chars] indicating a potential \n\ network type mismatch	OSPF received hello packet from a neighbor which has a non-zero \n\ value in the DR or BDR field but this router is configured as \n\ point-to-point on this interface. This indicates a network type \n\ mismatch.	-	"The network type must be configured the same for all devices \n\ attached to the same link."
OSPF3-NETTYPE_MISMATCH	4-Warning	Received Hello from [node] on [chars] indicating a potential \n\ network type mismatch	OSPF received hello packet from a neighbor which has a non-zero \n\ value in the DR or BDR field but this router is configured as \n\ point-to-point on this interface. This indicates a network type \n\ mismatch.	-	"The network type must be configured the same for all devices \n\ attached to the same link."
OSPF3-NOGLOBAL_ADDR	4-Warning	[chars] Could not select a global IPv6 address. Virtual links require at least one global IPv6 address.	A virtual link was configured. For the virtual link to function a global IPv6 address must be available. However no global IPv6 address could be found on the router.	ospf	"Configure a global IPv6 address on an interface on this router."
OSPF3-NOGLOBAL_ADDR	4-Warning	[chars] Could not select a global IPv6 address. Virtual links require at least one global IPv6 address.	A virtual link was configured. For the virtual link to function a global IPv6 address must be available. However no global IPv6 address could be found on the router.	ospf	"Configure a global IPv6 address on an interface on this router."
OSPF3-NO_OUTPUTQ	4-Warning	[chars] Packet not written to the output queue	An internal error occurred.	ospf	LOG_SIDSHTTECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPF34NO_OUTPUTQ	4-Warning	[chars] Packet not written to the output queue	An internal error occurred.	ospf	LOG_SID_SH_TECH_ACTION
OSPF34NONEIGHBOR	4-Warning	[chars] Received [chars] from unknown neighbor %i	OSPF hello database description or database request packet was\n\n received but the router could not identify the sender.	-	"This situation should correct itself." LOG_SID_RECUR_ACTION
OSPF34NONEIGHBOR	4-Warning	[chars] Received [chars] from unknown neighbor %i	OSPF hello database description or database request packet was\n\n received but the router could not identify the sender.	-	"This situation should correct itself." LOG_SID_RECUR_ACTION
OSPFv3-4-NORTRID	4-Warning	Process [chars] could not pick a router-id please configure manually	OSPFv3 failed while attempting to allocate a router ID from the IP\n\n address of one of its interfaces.	-	"Ensure that at least one interface is active up and has a valid IP "
OSPFv3-4-NORTRID	4-Warning	Process [chars] could not pick a router-id please configure manually	OSPFv3 failed while attempting to allocate a router ID from the IP\n\n address of one of its interfaces.	-	"Ensure that at least one interface is active up and has a valid IP "
OSPF34NOVALIDKEY	4-Warning	No valid authentication key under key-chain [chars]	-	ospf	"Configure a new key"
OSPF34NOVALIDKEY	4-Warning	No valid authentication key under key-chain [chars]	-	ospf	"Configure a new key"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPFv3-4NSSA_NO_FA	4-Warning	[chars] Process lacks forwarding address for type 7 LSA [node] in NSSA [chars] - P-bit cleared	There is no viable forwarding address in the NSSA area. Hence the P-bit must be cleared and the type 7 LSA will not be translated to a type 5 LSA by the NSSA translator. Refer to RFC 3101.	ospf	"Configure at least one interface in the NSSA with " "an advertised IPv4 for IPv4 address family or IPv6 global "
OSPFv3-4NSSA_NO_FA	4-Warning	[chars] Process lacks forwarding address for type 7 LSA [node] in NSSA [chars] - P-bit cleared	There is no viable forwarding address in the NSSA area. Hence the P-bit must be cleared and the type 7 LSA will not be translated to a type 5 LSA by the NSSA translator. Refer to RFC 3101.	ospf	"Configure at least one interface in the NSSA with " "an advertised IPv4 for IPv4 address family or IPv6 global "
OSPFv3-4REDIST_PFX_THR	4-Warning	[chars] Threshold for maximum number of redistributed prefix has been reached - [dec][node]configured : [dec][node]prefixes [dec] configured max: [dec]	We have reached the threshold level of number of redistributed prefixes	ospf	"Check if redistribution of large number of prefixes " "is desired and has not been configured by mistake"
OSPFv3-4REDIST_PFX_THR	4-Warning	[chars] Threshold for maximum number of redistributed prefix has been reached - [dec][node]configured : [dec][node]prefixes [dec] configured max: [dec]	We have reached the threshold level of number of redistributed prefixes	ospf	"Check if redistribution of large number of prefixes " "is desired and has not been configured by mistake"
OSPFv3-4UNREC_TIMER	4-Warning	[chars] Unrecognized timer [dec] in OSPF [chars]	An internal error occurred.	ospf	LOG_SIDSHTTECH_ACIION
OSPFv3-4UNREC_TIMER	4-Warning	[chars] Unrecognized timer [dec] in OSPF [chars]	An internal error occurred.	ospf	LOG_SIDSHTTECH_ACIION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSPFV3-4-NOBACKBONE</del>	4-Warning	[chars] Virtual link information found in non-backbone area: [chars]	An internal error occurred.	-	LOG_SID_SH_TECH_ACTION
<del>OSPFV3-4-NOBACKBONE</del>	4-Warning	[chars] Virtual link information found in non-backbone area: [chars]	An internal error occurred.	-	LOG_SID_SH_TECH_ACTION
OSPFv3-5-ADJCHG	5-Notice	Process [dec][chars][chars] Nbr [node]on [chars] from [chars] to [chars] [chars]	An OSPF neighbor has changed state. The message describes \n\ the change and the reason for it. This message appears only \n\ if the <del>Bit [chars] [chars] Nbr</del> command is\n\ configured for the OSPF process.	-	LOG_SID_NO_ACTION
OSPFv3-5-ADJCHG	5-Notice	Process [dec][chars][chars] Nbr [node]on [chars] from [chars] to [chars] [chars]	An OSPF neighbor has changed state. The message describes \n\ the change and the reason for it. This message appears only \n\ if the <del>Bit [chars] [chars] Nbr</del> command is\n\ configured for the OSPF process.	-	LOG_SID_NO_ACTION
OSPFv3-5-EXPIREDKEY	5-Notice	Packet [chars] on interface [chars] with expired Key ID [node]	The Key ID in use has a lifetime and the system time is not within that lifetime	ospf	"Configure a new key"
OSPFv3-5-EXPIREDKEY	5-Notice	Packet [chars] on interface [chars] with expired Key ID [node]	The Key ID in use has a lifetime and the system time is not within that lifetime	ospf	"Configure a new key"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPFv3-5-INVALIDSA DATA	5-Notice	Key chain [chars] key [node] Data not valid to [chars] packet on [chars]	OSPFv3 has been configured to use cryptographic authentication using key-chain configuration option. SA data are not however completely valid and can not be used to authenticate sent packet or verify received received packet	ospf	"Verify global key chain configuration. Is it configured with " "key ID and algorithm supported by OSPFv3 and is key string specified?"
OSPFv3-5-INVALIDSA DATA	5-Notice	Key chain [chars] key [node] Data not valid to [chars] packet on [chars]	OSPFv3 has been configured to use cryptographic authentication using key-chain configuration option. SA data are not however completely valid and can not be used to authenticate sent packet or verify received received packet	ospf	"Verify global key chain configuration. Is it configured with " "key ID and algorithm supported by OSPFv3 and is key string specified?"
OSPFv3-5-LASTKEYEXP	5-Notice	The last key has expired in key-chain [chars].	None of the security associations have a lifetime that include the current system time.	ospf	"Configure a new security association or alter the lifetime of a " "current security association"
OSPFv3-5-LASTKEYEXP	5-Notice	The last key has expired in key-chain [chars].	None of the security associations have a lifetime that include the current system time.	ospf	"Configure a new security association or alter the lifetime of a " "current security association"
OSPFv3-5-NOCRYPTOALG	5-Notice	Key ID [node]in key chain [chars] does not have a valid cryptographic algorithm	OSPF has been configured to use cryptographic authentication however an algorithm has not been configured	ospf	"Configure a cryptographic-algorithm for the security association"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSPF35NCRYPTOALG</del>	5-Notice	Key ID [node]in key chain [chars] does not have a valid cryptographic algorithm	OSPF has been configured to use cryptographic authentication however an algorithm has not been configured	ospf	"Configure a cryptographic-algorithm for the security association"
OSPFv3-5-NOKEY	5-Notice	Key ID [node]in key chain [chars] does not have a key	OSPF has been configured to use cryptographic authentication however an key password has not been configured	ospf	"Configure a key for the security association"
OSPFv3-5-NOKEY	5-Notice	Key ID [node]in key chain [chars] does not have a key	OSPF has been configured to use cryptographic authentication however an key password has not been configured	ospf	"Configure a key for the security association"
<del>OSPFv3-5-NOKEY</del>	5-Notice	Recovered from Redistribution limit-hit scenario on \[chars]\ prefix count is less than threshold - [dec][node]configured: [dec][node]prefixes [dec]	We have recovered from redistributed prefix limit scenario	ospf	"No action required. This is an informational message " "for recovering from an issue"
<del>OSPFv3-5-NOKEY</del>	5-Notice	Recovered from Redistribution limit-hit scenario on \[chars]\ prefix count is less than threshold - [dec][node]configured: [dec][node]prefixes [dec]	We have recovered from redistributed prefix limit scenario	ospf	"No action required. This is an informational message " "for recovering from an issue"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPFv3-6BADCHKSUM	6-Information	[chars] Checksum Failure in database in area [chars]: LSA Type [hec] Link State Id [node]Old Checksum [hex] New Checksum [hex]\n	OSPF has detected a checksum error in the database due to memory\n\ corruption.	-	"Restart OSPF process."
OSPFv3-6BADCHKSUM	6-Information	[chars] Checksum Failure in database in area [chars]: LSA Type [hec] Link State Id [node]Old Checksum [hex] New Checksum [hex]\n	OSPF has detected a checksum error in the database due to memory\n\ corruption.	-	"Restart OSPF process."
OSPFv3-6-DFT_OPT	6-Information	Protocol timers for fast convergence are [chars].	Routing-default-optimize state	ospf	LOG_STD_ACTION
OSPFv3-6-DFT_OPT	6-Information	Protocol timers for fast convergence are [chars].	Routing-default-optimize state	ospf	LOG_STD_ACTION
<del>OSPFv3-6-RTT_OPT</del>	6-Information	[chars] will be deprecated	The value will be deprecated in a future version	ospf	"Refer to current command reference"
<del>OSPFv3-6-RTT_OPT</del>	6-Information	[chars] will be deprecated	The value will be deprecated in a future version	ospf	"Refer to current command reference"
<del>OSPFv3-6-MAX_LSA_IGNORE</del>	6-Information	Max-lsa ignore timed out in process [dec]. Adjacencies will be brought up by accepting and sending hellos. Ignore count cfg: [dec] cur: [dec]	After ignore time OSPF will bring up the adjacencies by sending and accepting Hello packets. If the LSA count exceeds the max-limit again then the adjacencies will be brought down.	ospf	"Check if some router in the network is generating " "large number of LSAs as a result of misconfiguration."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPFv3-6-MAX_LSA_IGNORE_TIME	6-Information	Max-lsa ignore timed out in process [dec]. Adjacencies will be brought up by accepting and sending hellos. Ignore count cfg: [dec] cur: [dec]	After ignore time OSPF will bring up the adjacencies by sending and accepting Hello packets. If the LSA count exceeds the max-limit again then the adjacencies will be brought down.	ospf	"Check if some router in the network is generating " "large number of LSAs as a result of misconfiguration."
OSPFv3-6-MAX_LSA_RTR_NO	6-Information	Top [dec] LSA contributor in process [dec]. RTR:[node]Total:[dec] Type3:[dec] Type5:[dec] Type7:[dec] Others:[dec]	When the number of non self originated LSAs exceeds the configured threshold or max-lsa value LSA count information from top 5 contributors are displayed	ospf	"Check if given routers in the network are " "generating large number of LSAs as a result of misconfiguration."
OSPFv3-6-MAX_LSA_RTR_NO	6-Information	Top [dec] LSA contributor in process [dec]. RTR:[node]Total:[dec] Type3:[dec] Type5:[dec] Type7:[dec] Others:[dec]	When the number of non self originated LSAs exceeds the configured threshold or max-lsa value LSA count information from top 5 contributors are displayed	ospf	"Check if given routers in the network are " "generating large number of LSAs as a result of misconfiguration."
OSPFv3-6-NEW_RTRID	6-Information	New router-id will take effect immediately. If OSPF adjacencies are UP for [chars] they will be reset	router-id has been changed	-	LOG_SID_NO_ACTION
OSPFv3-6-NEW_RTRID	6-Information	New router-id will take effect immediately. If OSPF adjacencies are UP for [chars] they will be reset	router-id has been changed	-	LOG_SID_NO_ACTION
OSPFv3-6-NSF_COMPLETE	6-Information	OSPFv3-[dec] NSF completed	NSF completed notification	ospf	LOG_SID_NO_ACTION
OSPFv3-6-NSF_COMPLETE	6-Information	OSPFv3-[dec] NSF completed	NSF completed notification	ospf	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OSPFv3-6-NSF_START	6-Information	OSPFv3-[dec] NSF started	NSF start notification	ospf	LOG_SID_NO_ACTION
OSPFv3-6-NSF_START	6-Information	OSPFv3-[dec] NSF started	NSF start notification	ospf	LOG_SID_NO_ACTION
OSPFv3-6-NSF_TERMINATE	6-Information	OSPFv3-[dec] NSF terminated	NSF terminated notification	ospf	LOG_SID_NO_ACTION
OSPFv3-6-NSF_TERMINATE	6-Information	OSPFv3-[dec] NSF terminated	NSF terminated notification	ospf	LOG_SID_NO_ACTION
OSPFv3-6-NSF_SHUTDOWN_COMPLETE	6-Information	[chars] Shutdown completed	OSPFv3 process has finished the shutdown procedure.	-	LOG_SID_NO_ACTION
OSPFv3-6-NSF_SHUTDOWN_COMPLETE	6-Information	[chars] Shutdown completed	OSPFv3 process has finished the shutdown procedure.	-	LOG_SID_NO_ACTION
OSPFv3-6-NSF_SHUTDOWN_START	6-Information	[chars] Shutdown started	OSPFv3 process has started the shutdown procedure. Another message will be logged when it completes.	-	"Wait for shutdown to complete."
OSPFv3-6-NSF_SHUTDOWN_START	6-Information	[chars] Shutdown started	OSPFv3 process has started the shutdown procedure. Another message will be logged when it completes.	-	"Wait for shutdown to complete."
OSPFv3-6-NSF_UNEXPECTED_MESSAGE	6-Information	OSPFv3 has received an unexpected message: [node] / [node]	OSPFv3 has received an unexpected interprocess message.	-	LOG_SID_SH_TECH_ACTION
OSPFv3-6-NSF_UNEXPECTED_MESSAGE	6-Information	OSPFv3 has received an unexpected message: [node] / [node]	OSPFv3 has received an unexpected interprocess message.	-	LOG_SID_SH_TECH_ACTION
OSPFv3-6-NSF_INTERNAL_CALLBACK	6-Information	IPv4 process call ignored.	An internal error occurred.	ospf	LOG_STD_ACTION
OSPFv3-6-NSF_INTERNAL_CALLBACK	6-Information	IPv4 process call ignored.	An internal error occurred.	ospf	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSPF3</del> UNRECVRNTTYPE	6-Information	Unrecognized virtual interface [chars]. Treat it as loopback stub route	The virtual interface type was not recognized by OSPFv3 so it will be treated as a loopback interface stub route.	ospf	LOG_SID_NO_ACTION
<del>OSPF3</del> UNRECVRNTTYPE	6-Information	Unrecognized virtual interface [chars]. Treat it as loopback stub route	The virtual interface type was not recognized by OSPFv3 so it will be treated as a loopback interface stub route.	ospf	LOG_SID_NO_ACTION
<del>OSPF3</del> ZEROBANDWDI	6-Information	[chars] interface [chars] has zero bandwidth	The interface reports its bandwidth as zero.	-	LOG_SID_NO_ACTION
<del>OSPF3</del> ZEROBANDWDI	6-Information	[chars] interface [chars] has zero bandwidth	The interface reports its bandwidth as zero.	-	LOG_SID_NO_ACTION
<del>ONM3</del> ONSNASCREAFAIL	3-Error	stats for interface index [dec] could not be created with status [dec]	-	snmp-otn	"Copy the error message exactly as it appears and report it\n\ to your technical support representative."
<del>ONM3</del> ONSNBAIHEAFAIL	3-Error	stats for interface index [dec] could not be created with status [dec]	-	snmp-otn	"Copy the error message exactly as it appears and report it\n\ to your technical support representative."
<del>ONM3</del> ONSNASDLEFAIL	3-Error	stats for interface index [dec] could not be deleted with status [dec]	-	snmp-otn	"Copy the error message exactly as it appears and report it\n\ to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OTV_APP_NAD_CLIENT_REG	3-Error	OTV was unable to register with RIB	This is an RIB error triggered when an OTV Application routine tried to register as a client with MLRIB.	ios-otv-app	"This error message likely indicates an internal IOS " "software issue. As a result the internal state of " "the device may now be incorrect and one should " "reboot the device. If this continues use the " "Cisco software defect search tool to " "determine if this issue has been " "fixed in a later software release. If no defect is " "found then please contact your Cisco technical " "support representative and provide the " "representative with the exact error message seen " "as well as the version of IOS being used."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OTV/INTERNAL/EE/MAC/00	3-Error	otv mac flood [enet] was not deleted from the RIB the return code was [hec]	This is a RIB error which was triggered when an OTV Application routine tried to delete a route to the data base.	ios-otv-app	"This error message likely indicates an internal IOS "software issue. As a result the internal state of "the device may now be incorrect and one should "reconfigure otv mac flood and try deleting it. If "this error continues use the Cisco software defect "search tool to determine if this issue has been "fixed in a later software release. If no "defect is found then please contact your "Cisco technical support representative and "provide the representative with the exact error "message seen as well as the version of IOS being "used."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OTV-INTERNAL-ERR	3-Error	An OTV Application routine was called by an invalid thread	This is an internal error triggered when an OTV Application routine is called incorrectly.	ios-otv-app	"This error message likely indicates an internal IOS " "software issue. As a result the internal state of " "the device may now be incorrect and a reboot of the " "device should be performed. Use the Cisco software " "defect search tool to determine if this issue has " "been fixed in a later software release. If no " "defect is found then please contact your Cisco " "technical support representative and provide the " "representative with the exact error message seen " "as well as the version of IOS being used."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OTV/INTERNAL/CS/MAPPING	3-Error	OTV was unable to process ISIS mapping received	This is an ISIS error triggered when an ISIS tries to send an invalid mapping to OTV.	ios-otv-app	"This error message likely indicates an internal IOS "software issue. As a result the internal state of "the device may now be incorrect and one should "reboot the device. If this continues use the "Cisco software defect search tool to "determine if this issue has been "fixed in a later software release. If no defect is "found then please contact your Cisco technical "support representative and provide the "representative with the exact error message seen "as well as the version of IOS being used."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OTV-3-ERR	3-Error	OTV was unable to register for route redistribution	This is a RIB error which was triggered when an OTV Application routine tried to send a redistribution request.	ios-otv-app	"This error message likely indicates an internal IOS "software issue. As a result the internal state of "the device may now be incorrect and one should "reconfigure the overlay. If this continues "use the Cisco software defect search tool "to determine if this issue has been "fixed in a later software release. If no defect is "found then please contact your Cisco technical "support representative and provide the "representative with the exact error message seen "as well as the version of IOS being used."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OTV-3-ERR-OTV-3-ERR-OTV-3-ERR	3-Error	otv mac flood [enet] was not added to the RIB the return code was [hec]	This is a RIB error which was triggered when an OTV Application routine tried to add a route to the data base.	ios-otv-app	"This error message likely indicates an internal IOS " "software issue. As a result the internal state of " "the device may now be incorrect and one should " "reconfigure otv mac flood. If this error continues " "to occur use the Cisco software defect search " "tool to determine if this issue has been " "fixed in a later software release. If no defect is " "found then please contact your Cisco technical " "support representative and provide the " "representative with the exact error message seen " "as well as the version of IOS being used."
OUNIC-4-APIERR	4-Warning	[chars][chars]: [chars]	RSVP API routine return error	ocp	"Copy the error message exactly as it appears and " "report it to your technical support representative."
OUNIC-4-PORTERR	4-Warning	failed getting local_port_id for: neighbor [node]remote_port_id=[dec]	An LMP state machine has encountered an event that is not legal or allowed in the current state.	ocp	"Write down the state and the event and " "call your Cisco technical support representative for assistance "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
OUNIC-4-QERR	4-Warning	[chars]	IOS OS API routine return error	ocp	"Copy the error message exactly as it appears and " "report it to your technical support representative."

## P to T

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PKIPXPKOYNALMD</del>	2-Critical	[dec]	Could not initialize IPC handler.	cpp-ucode	LOG_STD_ACTION
<del>PKIPXPKEXBEMMD</del>	3-Error	[dec]	Initialization of extended packet memory failed.	cpp-ucode	LOG_STD_ACTION
<del>PKIPXPKOYNALMD</del>	3-Error	[dec]:[dec] len [dec] flags 0x[hec] source [dec]	Invalid length for IPC message.	cpp-ucode	LOG_STD_ACTION
<del>PKIPXPKXPBEMMD</del>	3-Error	[dec]	Extending of packet buffer header memory failed.	cpp-ucode	LOG_STD_ACTION
<del>PKIPXPKXPBEMMD</del>	3-Error	[dec]	Initialization of packet buffer header memory failed.	cpp-ucode	LOG_STD_ACTION
<del>PKIPXPKXPBEMMD</del>	3-Error	[dec]	Extending of extended packet memory failed.	cpp-ucode	LOG_STD_ACTION
<del>PKIPXPKXCHMMD</del>	3-Error	[dec]	Extending of segmented packet dlist memory failed.	cpp-ucode	LOG_STD_ACTION
<del>PKIPXPKXCHMMD</del>	3-Error	[dec]	Initialization of segmented packet dlist memory failed.	cpp-ucode	LOG_STD_ACTION
<del>PKIPXPKUNKONSE</del>	4-Warning	[dec]	Unknown IPC message detected.	cpp-ucode	LOG_STD_ACTION
<del>PKIPADLSIRCAUE</del>	3-Error	[chars]	An invalid memory chunk magic was detected in a memory chunk element	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PA_KBADMEMREQAID</del>	3-Error		Failure occurred when attempting to request segmented packet memory.	cpp-ucode	LOG_STD_ACTION
<del>PA_KBAMSTDUPAURE</del>	3-Error	[chars]	PA M-Cast replication failed to allocate duplicate the requisite PA structures.	cpp-ucode	LOG_STD_ACTION
<del>PA_KBAMSCPMALOCFAURE</del>	3-Error	[chars]	PA M-Cast replication failed to allocate required GPM.	cpp-ucode	LOG_STD_ACTION
<del>PA_KBAMSRPDESCOHEL</del>	3-Error	[chars]	PA M-Cast Gather descriptor list exceeded limit of 255 entries.	cpp-ucode	LOG_STD_ACTION
<del>PA_KI3PA_PUT_FAILURE</del>	3-Error	[chars]	The PA API layer failed to complete a requested WRITE into pkt memory.	cpp-ucode	LOG_STD_ACTION
<del>PA_KI3PA_PUT_FAILURE</del>	3-Error	[chars] 0x[hec]	PA vFR callback input args error.	cpp-ucode	LOG_STD_ACTION
<del>PA_KBADSTAIOCAID</del>	5-Notice		Could not allocate segmented packet list header.	cpp-ucode	LOG_STD_ACTION
PA-0-RUPTCONFLICT	0-Emergency	Conflict detected when trying to install [chars] interrupt handler bay [dec].	An attempt was made to register an interrupt handler for\n either a non existent port adaptor or the wrong interrupt\n priority level.	-	LOG_STD_ACTION
PA-2-BADDAT	2-Critical	PA interface data incorrect [hex]	Incorrect PA interface data found	-	LOG_STD_ACTION
PA-2-BADIDB	2-Critical	PA interface idb incorrect [hex]	The port adapter system control block PASCB data structure	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PA-2-BADINTERFACE	2-Critical	Out of range PCI Port Adaptor interface [dec] on bay [dec]	The software specified an out-of-range port adapter interface.	-	LOG_STD_ACTION
PA-2-BADPA	2-Critical	PA interface pa incorrect [hex]	Incorrect PA interface specified	-	LOG_STD_ACTION
PA-2-BADPA2	2-Critical	PA null adapter [hex]	Null PA interface specified	-	LOG_STD_ACTION
PA-2-BADPABAY	2-Critical	Out of range PCI Port Adaptor bay [dec]	The software specified an out-of-range port adapter bay.	-	LOG_STD_ACTION
PA-2-BADPASCB	2-Critical	PA interface pascb incorrect [hex]	The port adapter system control block PASCB data structure was	-	LOG_STD_ACTION
PA-2-BADPINST	2-Critical	PA interface port_inst incorrect [hex]	Failure to access port instance internal data	-	LOG_STD_ACTION
PA-2-BADVCONT	2-Critical	PA interface vcont incorrect [hex]	Incorrect VC interface specified	-	LOG_STD_ACTION
PA-2-ILLEGALPA	2-Critical	Illegal Port Adaptor type [dec] in bay [dec] of [chars].	The port adapter is not supported by the controller to which it is plugged into.	-	"Remove the port adapter and return the controller to its original "configuration."
<del>PA-2-INCORRECTBRIDGE</del>	2-Critical	Bad default register[hec] setting[hec] in PA bridge	The software is unable to configure certain settings for the port adapter protocol control information bridge in the specified bay.	-	LOG_STD_ACTION
PA-2-PABRIDGE	2-Critical	Failed to config bridge for PA [dec]	The system side PCI bridge for this PA failed initialization.\n\n The PA will not be operational because of this.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PA-2-PARECUR	2-Critical	Recursive loop while getting the daughtercard info for PA type [dec]	While getting the daughter card info for the chassismib the platform snmp code goes into an infinite loop.	-	LOG_STD_ACTION
PA-2-QOVERFLOW	2-Critical	PA queue overflow cmd [hex]		-	LOG_STD_ACTION
PA-2-UNDEFIO	2-Critical	Unsupported I/O Controller type [dec] in I/O Bay.	The software does not have a driver for the port adapter type in the specified bay.	-	"Make sure the image you are running is supposed to support this card. " "Newer I/O Controllers will only work with the -kboot- image. " LOG_SID_RECUR_ACTION
PA-2-UNDEFPA	2-Critical	Undefined Port Adaptor type [dec] in bay [dec]	The software does not have a driver for the port adapter type in the specified bay.	-	"Make sure the image you are running is supposed to support this card. " "Check that the card is properly seated. " LOG_SID_RECUR_ACTION
PA-2-UNDEFPABRIDGE	2-Critical	Unsupported Port Adaptor Bridge [hex] in bay [dec]	The software does not have a driver for that port adapter protocol control information bridge in the specified bay.	-	LOG_STD_ACTION
PA-3-BRINGUPFAIL	3-Error	port adapter in bay [[dec]] failed to reset.	An attempt to reset and initialize the port adapter timed out.	-	LOG_SID_SH_TECH_ACTION
PA-3-CONFIG	3-Error	Recommended port adapter configuration exceeded	The total bandwidth of fast and medium bandwidth port adapters\n\n exceed the rated capacity of this system.	-	"Refer to the configuration guidelines for the maximum allowed\n\n high and medium bandwidth port adapters for the system."
PA-3-DEACTIVATED	3-Error	port adapter in bay [[dec]] powered off.	The port adapter is being powered off.	-	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PA-3-IMPROPER_INSERT	3-Error	Improper insertion for slot [dec]. Remove and then re-insert the PA	PCI Activation of PA has failed thus the PA is deactivated\n\n and must be removed and then re-inserted.	-	"Remove and then re-insert the PA firmly into the slot."
PA-3-NOTSUPPORTED	3-Error	PA in slot[dec] [chars] is not supported on this [chars]	This port adaptor is not supported on this chassis/cpucard.	-	LOG_STD_ACTION
PA-3-PACREATE	3-Error	Unable to create driver for Port Adaptor type [dec] in bay [dec]	Possible memory shortage or adaptor hardware error	-	LOG_STD_ACTION
PA-3-REVNOISUPPORTED	3-Error	PA in slot[dec] [chars] requires base h/w revision of [dec].[dec]	A newer hardware revision of the port adaptor is required for\n\n functional operation on this chassis.	-	LOG_STD_ACTION
PA-3-SLOTNOSUPPORTED	3-Error	This PA type [chars] is not supported in slot[dec] of this [chars]	This port adaptor is not supported on this slot of this chassis/cpucard.	-	LOG_STD_ACTION
PA-4-IMPROPER_REMOVAL	4-Warning	Improper removal for slot [dec].	PA was inserted and then removed while being initialised.	-	"After an insertion the PA should be pulled out only after the\n\n initialisation is complete. If there is any traffic running\n\n through the router the initialisation can take up to 30 seconds"
PA-4-PCIVALID	4-Warning	PCI activation failed bay [dec] 0x[hec]	The system received an invalid PCI signal from the port adapter.\n\n This is probably due to a hardware failure.	-	LOG_STD_ACTION



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
PAC3-LIST_CREATE_FAIL	3-Error	LIST creation for instance failed.	This is a system problem. Probable cause: low resources in the system. Free up some memory.	-	LOG_STD_ACTION
PAC3-LIST_CREATE_FAIL	3-Error	LIST creation for instance failed.	This is a system problem. Probable cause: low resources in the system. Free up some memory.	-	LOG_STD_ACTION
PAC3-SYNC_ERROR	3-Error	cannot [chars] sync data: [chars] [dec] [dec]	Unable to send sync data on active RP or receive and process sync data on standby RP. QoS policy accounting may not work correctly after switch-over.	qos	LOG_STD_ACTION
PAC3-SYNC_ERROR	3-Error	cannot [chars] sync data: [chars] [dec] [dec]	Unable to send sync data on active RP or receive and process sync data on standby RP. QoS policy accounting may not work correctly after switch-over.	qos	LOG_STD_ACTION
PAC3-WAVL_INIT_FAIL	3-Error	WAVL initialization for [chars] failed.	This is a system problem. Probable cause: low resources in the system. Free up some memory.	-	LOG_STD_ACTION
PAC3-WAVL_INIT_FAIL	3-Error	WAVL initialization for [chars] failed.	This is a system problem. Probable cause: low resources in the system. Free up some memory.	-	LOG_STD_ACTION
<del>PAC3-SPRT_PACKET_FAIL</del>	3-Error	Particle packet duplication attempted on non-particle packet\n	Duplication of packet with particles routine is called\n\n without the packet containing particles.	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>PACKET2PARTDUP</del>	3-Error	Particle packet duplication attempted on non-particle packet\n	Duplication of packet with particles routine is called\n\n without the packet containing particles.	packetmgr	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
<del>PACKET2ACCESSERROR</del>	2-Critical	Client process [node] attempted to access packet [hec] owned by process [node]	A packet manager client can only access and modify packets that have been assigned to its process	packetmgr	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
<del>PACKET2ACCESSERROR</del>	2-Critical	Client process [node] attempted to access packet [hec] owned by process [node]	A packet manager client can only access and modify packets that have been assigned to its process	packetmgr	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
<del>PACKET2BLOCKERROR</del>	2-Critical	Client process [node] has packet 0x[node] the buffer 0x[node] has been corrupted.	Data has been written past the end of the previous \n\n buffer causing memory to be corrupted.	packetmgr	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
<del>PACKET2BLOCKERROR</del>	2-Critical	Client process [node] has packet 0x[node] the buffer 0x[node] has been corrupted.	Data has been written past the end of the previous \n\n buffer causing memory to be corrupted.	packetmgr	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
<del>PACKET2CHANCREATEFAIL</del>	2-Critical	Packet server fails to create a channel and event manager error: [chars]	Packet server fails to create an event manager and \n\n channel. Clients will be unable to connect to packet \n\n server and packet server will be unable to send and \n\n receive messages.	packetmgr	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PACKET2CHANCREAFATAL	2-Critical	Packet server fails to create a channel and event manager error: [chars]	Packet server fails to create an event manager and \n\n channel. Clients will be unable to connect to packet \n\n server and packet server will be unable to send and \n\n receive messages.	packetmgr	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
PACKET2CHUNKCREAFATAL	2-Critical	chunk_create for [chars] pool failed	The packet manager encountered a chunk creation failure\n\n while creating the packet header chunk	packetmgr	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
PACKET2CHUNKCREAFATAL	2-Critical	chunk_create for [chars] pool failed	The packet manager encountered a chunk creation failure\n\n while creating the packet header chunk	packetmgr	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
PACKET2CONNECTFAIL	2-Critical	Client process [node] failed to connect to Packet Manager reason [chars]	-	-	-
PACKET2CONNECTFAIL	2-Critical	Client process [node] failed to connect to Packet Manager reason [chars]	-	-	-
PACKET2CTXERROR	2-Critical	The context information 0x[node] is not valid.	An application to the memory block manager has passed\n\n either a context pointer that is not valid.	packetmgr	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
PACKET2CTXERROR	2-Critical	The context information 0x[node] is not valid.	An application to the memory block manager has passed\n\n either a context pointer that is not valid.	packetmgr	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
PACKET2DEQUEUEFAIL	2-Critical	Fail to remove client [node] from pak_client_list at [chars]	Can not remove the client from client list queue. \n\ This may cause the client fail to reconnect to packet \n\ server	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
PACKET2DEQUEUEFAIL	2-Critical	Fail to remove client [node] from pak_client_list at [chars]	Can not remove the client from client list queue. \n\ This may cause the client fail to reconnect to packet \n\ server	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
PACKET2ENQUEUEFAIL	2-Critical	Fail to insert client [node] into pak_client_list at [chars]	Mutex operation failed in the packet server	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
PACKET2ENQUEUEFAIL	2-Critical	Fail to insert client [node] into pak_client_list at [chars]	Mutex operation failed in the packet server	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
PACKET2EVENTATTACHFAIL	2-Critical	event attach failure	The packet subsystem encountered an error when \n\ registering for synchronous or asynchronous events.	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
PACKET2EVENTATTACHFAIL	2-Critical	event attach failure	The packet subsystem encountered an error when \n\ registering for synchronous or asynchronous events.	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
PACKET2EVENTBLOCKFAIL	2-Critical	event_block failure	event block error was encountered when blocking for external events	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
PACKETEVENTBLOCKAL	2-Critical	event_block failure	event block error was encountered when blocking for external events	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
PACKETEVENTXALCAL	2-Critical	event_context_alloc failure	Failed while allocating the event context	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
PACKETEVENTXALCAL	2-Critical	event_context_alloc failure	Failed while allocating the event context	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
PACKETGETNAMESAL	2-Critical	failed to get node name in pakman server init	packet manager server unable to retrieve the hostname for node/linecard	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
PACKETGETNAMESAL	2-Critical	failed to get node name in pakman server init	packet manager server unable to retrieve the hostname for node/linecard	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
PACKETHDRPOOLINITAL	2-Critical	Packet header pool init failed	Failed to initialize the packet pool headers	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
PACKETHDRPOOLINITAL	2-Critical	Packet header pool init failed	Failed to initialize the packet pool headers	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>PACKETMEMBLKERRR</del>	2-Critical	Memory block 0x[node] is not valid.	An application to the memory block manager has passed\n\n a memory block that is not valid.	packetmgr	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
<del>PACKETMEMBLKERRR</del>	2-Critical	Memory block 0x[node] is not valid.	An application to the memory block manager has passed\n\n a memory block that is not valid.	packetmgr	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
<del>PACKETMEMRERRR</del>	2-Critical	Memory block 0x[node] has already been freed.	An application to the memory block manager has attempted\n\n to free or lock a memory block that is not allocated.	packetmgr	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
<del>PACKETMEMRERRR</del>	2-Critical	Memory block 0x[node] has already been freed.	An application to the memory block manager has attempted\n\n to free or lock a memory block that is not allocated.	packetmgr	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
<del>PACKETMEMORDERRR</del>	2-Critical	The memory block manager has detected an ordinal error.\n\n Memory block 0x[node] has an ordinal of 0x[node] and a size of 0x[node].\n\n Its corresponding lower sibling memory block 0x[node] has\n\n an ordinal of 0x[node] and a size of 0x[node].	The lower sibling ordinal should be equal to the\n\n difference between the higher sibling's ordinal and\n\n size.	packetmgr	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PACKE</del> MEMORNAIERROR	2-Critical	The memory block manager has detected an ordinal error.\n\n Memory block 0x[node] has an ordinal of 0x[node] and a size of 0x[node].\n\n Its corresponding lower sibling memory block 0x[node] has\n\n an ordinal of 0x[node] and a size of 0x[node].	The lower sibling ordinal should be equal to the\n\n difference between the higher sibling's ordinal and\n\n size.	packetmgr	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
<del>PACKE</del> MEMIMWNBKERROR	2-Critical	An attempt to coalesce memory block 0x[node] with its\n\n sibling memory block 0x[node] has failed because the sibling\n\n block is not valid.	An attempt to coalesce two memory blocks\n\n has failed because a memory block is not valid.	packetmgr	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
<del>PACKE</del> MEMIMWNBKERROR	2-Critical	An attempt to coalesce memory block 0x[node] with its\n\n sibling memory block 0x[node] has failed because the sibling\n\n block is not valid.	An attempt to coalesce two memory blocks\n\n has failed because a memory block is not valid.	packetmgr	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
<del>PACKE</del> ENXIBLOCKERROR	2-Critical	The next block after buffer 0x[node] packet 0x[node] has been corrupted.	-	-	-
<del>PACKE</del> ENXIBLOCKERROR	2-Critical	The next block after buffer 0x[node] packet 0x[node] has been corrupted.	-	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>PACKETPTHREADCREATEFAIL</del>	2-Critical	pthread create fail in pakman while creating the [chars] thread	packet manager server unable to create a new thread	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
<del>PACKETPTHREADCREATEFAIL</del>	2-Critical	pthread create fail in pakman while creating the [chars] thread	packet manager server unable to create a new thread	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
<del>PACKETPTHREADMUTEXFAIL</del>	2-Critical	pthread_mutex_init failed on packet mutex. Reason : [chars]	The packet manager failed to initialize the global mutex	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
<del>PACKETPTHREADMUTEXFAIL</del>	2-Critical	pthread_mutex_init failed on packet mutex. Reason : [chars]	The packet manager failed to initialize the global mutex	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
<del>PACKET2RDZONERROR</del>	2-Critical	Client process [node] has packet 0x[node] the buffer 0x[node] \n\ has been overrun.	Data has been written past the end of the buffer causing\n\ memory to be corrupted.	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
<del>PACKET2RDZONERROR</del>	2-Critical	Client process [node] has packet 0x[node] the buffer 0x[node] \n\ has been overrun.	Data has been written past the end of the buffer causing\n\ memory to be corrupted.	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
<del>PACKET2SHMCREATEFAIL</del>	2-Critical	Error in creating the shared buffer mem: [chars]	Fatal error encountered while creating shared packet buffers	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PACKET2SHMCREATEFAIL	2-Critical	Error in creating the shared buffer mem: [chars]	Fatal error encountered while creating shared packet buffers	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
PACKET2SHMCTLFAIL	2-Critical	Error in shm_ctl: [chars]	Fatal error encountered while doing the shm_ctl operations on the shared packet memory	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
PACKET2SHMCTLFAIL	2-Critical	Error in shm_ctl: [chars]	Fatal error encountered while doing the shm_ctl operations on the shared packet memory	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
PACKET3-BLKDUMP	3-Error	[chars]	This is just to report general messages in the memory\n\ management code.	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
PACKET3-BLKDUMP	3-Error	[chars]	This is just to report general messages in the memory\n\ management code.	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
PACKET3CLNIDISCONN	3-Error	Handling disconnect for client [dec] [chars]\n	-	-	-
PACKET3CLNIDISCONN	3-Error	Handling disconnect for client [dec] [chars]\n	-	-	-
PACKET3CORRUPTPKHDR	3-Error	Corruption in packet header [hec] pid [dec] magic [hec] buffer [hec] caller_pc [hec]\n	The packet header has become corrupted.	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
PACKETCORRUPIPAKHDR	3-Error	Corruption in packet header [hec] pid [dec] magic [hec] buffer [hec] caller_pc [hec]\n	The packet header has become corrupted.	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
PACKETCORRUPIPAKPOOL	3-Error	[chars] Pool [hec] corrupted magic [hec]\n	The packet pool has failed a consistency check as it \n\ has got corrupted.	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
PACKETCORRUPIPAKPOOL	3-Error	[chars] Pool [hec] corrupted magic [hec]\n	The packet pool has failed a consistency check as it \n\ has got corrupted.	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
PACKET3ERRPAKHDR	3-Error	Not able to fix corruption in packet header [hec] pid = [dec]\n	There has been a corruption in the packet header memory\n\ and it cannot be fixed.	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
PACKET3ERRPAKHDR	3-Error	Not able to fix corruption in packet header [hec] pid = [dec]\n	There has been a corruption in the packet header memory\n\ and it cannot be fixed.	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
PACKET3NUCUNTIERROR	3-Error	Packet: [node]with linktype:[dec] being punted from process: [node] to process: [node] with out decrementing the input_qcount	An attempt was made to punt the packet from one process\n\ to another with the input queue flag set. This means that\n\ the input_qcount was not decremented on the interface \n\ where the packet was received. This will lead to input\n\ queue throttling on that interface	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PACKET</del> PACKETINPUTCOUNTERROR	3-Error	Packet: [node]with linktype:[dec] being punted from process: [node] to process: [node] with out decrementing the input_qcount	An attempt was made to punt the packet from one process\n\ to another with the input queue flag set. This means that\n\ the input_qcount was not decremented on the interface \n\ where the packet was received. This will lead to input\n\ queue throttling on that interface	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
PACKET-3-INITFAIL	3-Error	Packet server initialization failed. Reason : [chars]	The packet subsystem was not able to initialize properly	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
PACKET-3-INITFAIL	3-Error	Packet server initialization failed. Reason : [chars]	The packet subsystem was not able to initialize properly	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
PACKET-3-INITWARNING	3-Error	Warning[chars] while initializing the packet process	-	-	-
PACKET-3-INITWARNING	3-Error	Warning[chars] while initializing the packet process	-	-	-
<del>PACKET</del> PACKETHDRUMP	3-Error	[chars]	This is just to report general packet header messages.	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PACKETPACKETHDRDUMP	3-Error	[chars]	This is just to report general packet header messages.	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
PACKETPAK_NUIQERRR	3-Error	Packet: [node]in process: [node] has PAK_INPUTQ set incorrectly	A packet outside the iosbase has the input queue \n\ flag set. This means that a packet was punted from \n\ the iosbase to another ION process without decrementing \n\ the input queue count	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
PACKETPAK_NUIQERRR	3-Error	Packet: [node]in process: [node] has PAK_INPUTQ set incorrectly	A packet outside the iosbase has the input queue \n\ flag set. This means that a packet was punted from \n\ the iosbase to another ION process without decrementing \n\ the input queue count	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
PACKETRECOVERBLK	3-Error	\nBLOCK 0x[hec] IS SUCESSFULLY RECOVERED AFTER CORRUPTION\n	Corruption was detected in a memory block and it \n\ was posible to recover the block successfully.	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
PACKETRECOVERBLK	3-Error	\nBLOCK 0x[hec] IS SUCESSFULLY RECOVERED AFTER CORRUPTION\n	Corruption was detected in a memory block and it \n\ was posible to recover the block successfully.	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
PACKETREFCOUNIERRR	3-Error	Bad reference count in packet: [node]refcount: [dec].	An attempt was made to free a packet that\n\ has already been freed	packetmgr	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PACKET3RRCOUNTERRR	3-Error	Bad reference count in packet: [node]refcount: [dec].	An attempt was made to free a packet that\n\n has already been freed	packetmgr	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
PACKET3RENISHMEM	3-Error	Restarting [chars] to reinitialize shared memory because of memory corruption\n\n	There has been a memory corruption. Restart the \n\n client to reinitialise shared memory.	packetmgr	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
PACKET3RENISHMEM	3-Error	Restarting [chars] to reinitialize shared memory because of memory corruption\n\n	There has been a memory corruption. Restart the \n\n client to reinitialise shared memory.	packetmgr	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
PACKET3RESTARTFAIL	3-Error	Packet server restart failed. Reason : [chars]	The packet subsystem was not able to restart properly	packetmgr	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
PACKET3RESTARTFAIL	3-Error	Packet server restart failed. Reason : [chars]	The packet subsystem was not able to restart properly	packetmgr	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
PACTRAC3BIG_SERIAL	3-Error	serial number [node]exceeds configured packets %u	A packet serial number was encountered that was larger than than the configured number of packets being traced.	iosxe-pactrac	LOGSID_PACTRAC_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PACIRAC3INVALID_PARM	3-Error	encountered invalid parameter	An invalid parameter was encountered during packet-trace processing.	iosxe-pactrac	"Copy the error message exactly as it appears on the console or in the ""system log. Research and attempt to resolve the error using the ""Output Interpreter "" OUTPUT_INTERPRETER ". Also perform a ""search of the Bug Toolkit "" BUG_TOOLKIT ". If you still require ""assistance open a case with the Technical Assistance Center via the ""Internet "" TAC_CASE_OPEN " or contact your Cisco technical support ""representative and provide the representative with the gathered information."
PACIRAC3NUM_WRIIES	3-Error	attempt to write [node]bytes of path data for id %u	The serial number could not be returned to the serial number pool because the pool is full most likely because a serial number has been returned multiple times.	iosxe-pactrac	LOG_SID_PACIRAC_ACTION
PACIRAC3POOL_FULL	3-Error	unable to return serial number [node]to pool	The serial number could not be returned to the serial number pool because the pool is full most likely because a serial number has been returned multiple times.	iosxe-pactrac	LOG_SID_PACIRAC_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
PAD-2-INTR	2-Critical	[chars] called at interrupt level [hec]	An internal software error occurred.	-	"If this message recurs copy the error message exactly as it\n\ appears and report it to your technical support representative."
PAD-2-PUTSETUP	2-Critical	Tty[node]buffer already setup	An internal software error occurred.	-	"If this message recurs copy the error message exactly as it\n\ appears and report it to your technical support representative."
PAD-3-GETLINE	3-Error	Tty[node]bad return code [dec] from x3_getline	An internal software error occurred.	-	"If this message recurs copy the error message exactly as it\n\ appears and report it to your technical support representative."
<del>PAPDU_ACMRECOVERY</del>	1-Alert	PAGP running on [chars] triggered dual-active recovery: active id [enet] received expected [enet] Switch is in recovery mode	Pagp detected dual-active scenario on specified interface and caused switch to go into recovery mode.	cat6k-vs-infra	LOG_SID_NO_ACTION
<del>PAPDU_ACMRECOVERY</del>	1-Alert	PAGP running on [chars] triggered dual-active recovery: active id [enet] received expected [enet]	Pagp detected dual-active scenario on specified interface and caused switch to go into recovery mode.	cat6k-vs-infra	LOG_SID_NO_ACTION
<del>PAPDU_ACMADIVL</del>	3-Error	Too few bytes for [chars] TLV in PAGP reqd. [dec] got [dec] on port [chars]	-	-	-
<del>PAPDU_ACMADIVL</del>	3-Error	Too few bytes for [chars] TLV in PAGP reqd. [dec] got [dec] on port [chars]	-	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>PCFDA/CN6DCR/HAED</del>	3-Error	Unable to create \[chars]\	Unable to create the specified managed object	cat6k-vs-infra	LOG_SID_NO_ACTION
<del>PCFDA/CN6DCR/HAED</del>	3-Error	Unable to create \[chars]\	Unable to create the specified managed object	cat6k-vs-infra	LOG_SID_NO_ACTION
<del>PCFDA/CN6DCR/HAED</del>	3-Error	Unable to create process \[chars]\	Unable to create the specified process	cat6k-vs-infra	LOG_SID_NO_ACTION
<del>PCFDA/CN6DCR/HAED</del>	3-Error	Unable to create process \[chars]\	Unable to create the specified process	cat6k-vs-infra	LOG_SID_NO_ACTION
<del>PCFDA/CN6DCR/RGR</del>	3-Error	PAGP running on [chars] has detected a switchover or possible dual-active situation on the neighbor virtual switch. Informing virtual switches of active id change: new id [enet] old id [enet]	Pagp received new active id on specified interface indicating virtual switches are in a dual-active scenario. Interface is informing virtual switches of this which will cause one switch to go into recovery mode.	cat6k-vs-infra	LOG_SID_NO_ACTION
<del>PCFDA/CN6DCR/RGR</del>	3-Error	PAGP running on [chars] informing virtual switches of dual-active: new active id [enet] old id [enet]	Pagp received new active id on specified interface indicating virtual switches are in a dual-active scenario. Interface is informing virtual switches of this which will cause one switch to go into recovery mode.	cat6k-vs-infra	LOG_SID_NO_ACTION
<del>PCFDA/CN6DCR/ADIR</del>	3-Error	Failure in adding to [chars] registry	Could not add a function to the registry	cat6k-vs-infra	LOG_SID_NO_ACTION
<del>PCFDA/CN6DCR/ADIR</del>	3-Error	Failure in adding to [chars] registry	Could not add a function to the registry	cat6k-vs-infra	LOG_SID_NO_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PCDA/CM/CC/GRP	4-Warning	Port [chars] channel group not present while [chars]	Extraction of the channel group from a link has failed but is expected to be present. This should not occur and may affect functionality depending on where it occurred.	cat6k-vs-infra	"This message should not be seen under normal operation. " "If it is appearing it is an indication of a software bug. " "Enter the commands:\n" "<CMDBOLD>show switch virtual dual-active summary</CMDBOLD>\n" "<CMDBOLD>show switch virtual dual-active pagp</CMDBOLD>\n" "Retrieve the PAgP packet contents by entering the commands:\n " "<CMDBOLD>debug condition interface <NIF></CMDBOLD>\n" "<CMDBOLD>debug pagp packet</CMDBOLD>\n" "and " LOGSIDSHTTECHACTON

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PCHDA_CMA_CCH_GRP	4-Warning	Port [chars] channel group not present while [chars]	Extraction of the channel group from a link has failed but is expected to be present. This should not occur and may affect functionality depending on where it occurred.	cat6k-vs-infra	"This message should not be seen under normal operation. " "If it is appearing it is an indication of a software bug. " "Enter the commands:\n" "<CmdBold>show switch virtual dual-active summary<NoCmdBold>\n" "<CmdBold>show switch virtual dual-active pagp<NoCmdBold>\n" "Retrieve the PAgP packet contents by entering the commands:\n " "<CmdBold>debug condition interface <intfc><NoCmdBold>\n" "<CmdBold>debug pagp packet<NoCmdBold>\n" "and " LOG_SID_SH_TECH_ACTION
PAPSWITCH_ISSU_CLIENT_BUFFER	2-Critical	PAGP SWITCH ISSU client failed to get buffer for message. Error: [dec] [chars]	PAGP SWITCH ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	L2	"show logging and show checkpoint client"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PAGP_SWITCH_ISSU2NT	2-Critical	PAGP SWITCH ISSU client initialization failed to [chars]. Error: [dec] [chars]	The PAGP SWITCH ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	L2	LOG_STD_ACTION
PAGP_SWITCH_ISSU2NOAID	2-Critical	PAGP SWITCH ISSU client failed to send negotiation message. Error: [dec] [chars]	The PAGP SWITCH ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	L2	"show logging and show checkpoint client"
PAGP_SWITCH_ISSU2NARB	2-Critical	PAGP SWITCH ISSU client failed to register arbitrate callback. Error: [dec] [chars]	The PAGP SWITCH ISSU client failed to register arbitrate callback. If a problem occurs with the callback registration the standby device cannot be brought up properly.	L2	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PAGP_SWITCH_ISSU_SESSION</del>	2-Critical	PAGP SWITCH ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The PAGP SWITCH ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	L2	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>PAGP_SWITCH_ISSU_REGISTER</del>	2-Critical	PAGP SWITCH ISSU client failed to register session information. Error: [dec] [chars]	The PAGP SWITCH ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	L2	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>PAGP_SWITCH_ISSU_INVALID_CAPABILITY</del>	3-Error	PAGP SWITCH ISSU client: invalid capability list	PAGP SWITCH ISSU client observed an error during capability negotiaiton. When this error happens there is a mismatch in the client capability between the active and standby unit.	L2	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>PAGP_SWITCH_ISSU_INVALID_SESSION</del>	3-Error	PAGP SWITCH ISSU client does not have a valid registered session.	The PAGP SWITCH ISSU client does not have a valid registered session.	L2	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>PAGP SWITCH ISSU MSG NOT COMP</del>	3-Error	PAGP SWITCH ISSU client 'Message Type [dec]' is not compatible	The PAGP SWITCH ISSU client received an incompatible message from the peer device. The message cannot be processed.	L2	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>PAGP SWITCH ISSU MSG SIZE</del>	3-Error	PAGP SWITCH ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The PAGP SWITCH ISSU client failed to calculate the MTU for the specified message. The PAGP SWITCH ISSU client is not able to send the message to the standby device.	L2	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>PAGP SWITCH ISSU POLICY NOT SUPP</del>	3-Error	PAGP SWITCH ISSU client does not support Message Type [dec]	PAGP SWITCH ISSU client received an message type which it does not support. The policy is applied to make the session incompatible.	L2	"show issu session <client_id>"
<del>PAGP SWITCH ISSU CAPABILITY</del>	3-Error	PAGP SWITCH ISSU client rejected capability '[chars]'	PAGP SWITCH ISSU client rejected a capability during negotiaiton. When this error happens there is a mismatch in the client capability between the active and standby unit.	L2	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>PAGP SWITCH ISSU CAPABILITY</del>	3-Error	PAGP SWITCH ISSU client rejecting capability '[chars]'	PAGP SWITCH ISSU client is rejecting a capability during negotiaiton. When this error happens there is a mismatch in the client capability between the active and standby unit.	L2	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>PAGP_SWITCH_ISSU_UNREG</del>	3-Error	PAGP SWITCH ISSU client failed to unregister session information. Error: [dec] [chars]	The PAGP SWITCH ISSU client failed to unregister session information.	L2	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>PAGP_SWITCH_TRANSFORM</del>	3-Error	PAGP SWITCH ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The PAGP SWITCH ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the PAGP SWITCH state between the active device and the standby device is not identical.	L2	"show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>PAGP_FLOW_DB_INSUFFICIENT_MEMORY</del>	4-Warning	Allocation of flow database failed due to insufficient memory - [dec] MB. Please increase the memory otherwise the stateful features will not work correctly.	The allocation of flow database failed as there is not enough memory allocated to the system. The memory needs to be increased for stateful features to work correctly	isr9k-dp	"Increase the system memory."
<del>PAGP_AUTHENTICATION_SUCCESS</del>	3-Error	iosxe-binos-utils	Error setting user in application environment:[chars]	"The user has successfully authenticated	-
<del>PAGP_AUTHENTICATION_PROMPT_READ</del>	3-Error	iosxe-binos-utils	Error reading[chars] prompt:[chars]	"The authentication module was unable to read the specified prompt file. The default prompt will be used."	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PANGEA_QOSDFIBMAP	3-Error	From and To type should be same except if to type is traffic-class discard-class or qos-group for tablemap	From and To type should be same except if to type is traffic-class discard-class or qos-group for tablemap	pangea-qos	"show policy-map"
PANGEA_QOSMPLS	3-Error	[chars] [chars]	The Leaba platform does not support MPLS or L2 COS filter with other filters	pangea-qos	"show policy-map"
PARSE_RC3RCD_NIERRUPT	3-Error	[chars]	An internal software error occurred.	parser	LOG_STD_ACTION
PARSE_RC3RCD_NIERRUPT	3-Error	[chars]	An internal software error occurred.	parser	LOG_STD_ACTION
PARSE_RC3RCD_NIERRUPT	3-Error	[chars]	An internal software error occurred.	parser	LOG_STD_ACTION
PARSE_RC3RCD_NIERRUPT	3-Error	-	An internal software error occurred.	parser	LOG_STD_ACTION
PARSE_RC3RCD_NIERRUPT	3-Error	-	An internal software error occurred.	parser	LOG_STD_ACTION
PARSE_RC3RCD_NIERRUPT	3-Error	-	An internal software error occurred.	parser	LOG_STD_ACTION
PARSE_RC3RCD_NIERRUPT	3-Error	-	An internal software error occurred.	parser	LOG_STD_ACTION
PARSE_RC3RCD_NIERRUPT	3-Error	-	An internal software error occurred.	parser	LOG_STD_ACTION
PARSE_RC3RCD_NIERRUPT	3-Error	-	An internal software error occurred.	parser	LOG_STD_ACTION
PARSE_RC3RCD_NIERRUPT	3-Error	-	An internal software error occurred.	parser	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PARSER3RCLV RANGE</del>	3-Error	Parser Return Code level range error [dec]	An internal software error occurred.	-	"Copy the error message exactly as it appears. Copy down the system's\n\ configuration along with any other relevant information. Contact your\n\ technical support representative for assistance."
<del>PARSER3RCLV RANGE</del>	3-Error	Parser Return Code level range error [dec]	An internal software error occurred.	-	"Copy the error message exactly as it appears. Copy down the system's\n\ configuration along with any other relevant information. Contact your\n\ technical support representative for assistance."
<del>PARSER3RCLV RANGE</del>	3-Error	Parser Return Code level range error [dec]	An internal software error occurred.	-	"Copy the error message exactly as it appears. Copy down the system's\n\ configuration along with any other relevant information. Contact your\n\ technical support representative for assistance."
<del>PARSER3RCLV RANGE</del>	3-Error	Parser Return Code level range error [dec]	An internal software error occurred.	-	"Copy the error message exactly as it appears. Copy down the system's\n\ configuration along with any other relevant information. Contact your\n\ technical support representative for assistance."
<del>PARSER3RCLV RANGE</del>	3-Error	[chars] had value %u	An out-of-range parameter was passed to an internal API.	parser	LOG_STD_ACTION
<del>PARSER3RCLV RANGE</del>	3-Error	[chars] had value %u	An out-of-range parameter was passed to an internal API.	parser	LOG_STD_ACTION
<del>PARSER3RCLV RANGE</del>	3-Error	[chars] had value %u	An out-of-range parameter was passed to an internal API.	parser	LOG_STD_ACTION



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>PARSERCS_BCODERNC</del>	3-Error	Parser Return Code state range error [dec]	An internal software error occurred.	-	"Copy the error message exactly as it appears. Copy down the system's\n\ configuration along with any other relevant information. Contact your\n\ technical support representative for assistance."
<del>PARSERCS_BCODERNC</del>	3-Error	Parser Return Code state range error [dec]	An internal software error occurred.	-	"Copy the error message exactly as it appears. Copy down the system's\n\ configuration along with any other relevant information. Contact your\n\ technical support representative for assistance."
<del>PARSERCS_BCODERNC</del>	3-Error	Parser Return Code state range error [dec]	An internal software error occurred.	-	"Copy the error message exactly as it appears. Copy down the system's\n\ configuration along with any other relevant information. Contact your\n\ technical support representative for assistance."
<del>PARSERC_UNRECOGNERR</del>	3-Error	error value `[dec]' is not currently mapped	An unrecognized error was caught and remapped.	parser	LOG_STD_ACTION
<del>PARSERC_UNRECOGNERR</del>	3-Error	error value `[dec]' is not currently mapped	An unrecognized error was caught and remapped.	parser	LOG_STD_ACTION
<del>PARSERC_UNRECOGNERR</del>	3-Error	error value `[dec]' is not currently mapped	An unrecognized error was caught and remapped.	parser	LOG_STD_ACTION
<del>PARSERC_NONCOMPLIANCE</del>	4-Warning	`[chars]'	An internal software error occurred.	parser	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PARSER-4-RCNONCOMBINE	4-Warning	`[chars]'	An internal software error occurred.	parser	LOG_STD_ACTION
PARSER-4-RCNONCOMBINE	4-Warning	`[chars]'	An internal software error occurred.	parser	LOG_STD_ACTION
PARSE_RC6PRC_DISABLE	6-Information	Parser PRC Feature Disabled	Parser PRC Feature Disabled	parser	"LOG_SID_NO_ACTION"
PARSE_RC6PRC_DISABLE	6-Information	Parser PRC Feature Disabled	Parser PRC Feature Disabled	parser	"LOG_SID_NO_ACTION"
PARSE_RC6PRC_ENABLE	6-Information	Parser PRC Feature Enabled. PRC logs are displayed for configuration commands alone	Parser PRC Feature Enabled. PRC logs are displayed for configuration commands alone	parser	"LOG_SID_NO_ACTION"
PARSE_RC6PRC_ENABLE	6-Information	Parser PRC Feature Enabled. PRC logs are displayed for configuration commands alone	Parser PRC Feature Enabled. PRC logs are displayed for configuration commands alone	parser	"LOG_SID_NO_ACTION"
PARSER-2-INTIDISABLE	2-Critical	Interrupts disabled in mode [chars] by command '[chars]'	A hardware or software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
PARSER-2-INTIDISABLE	2-Critical	Interrupts disabled in mode [chars] by command '[chars]'	A hardware or software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
PARSER-3-AFSFAIL	3-Error	[chars] for command serialization failed.	This message indicates that the event required for command serialization has failed.	-	-
PARSER-3-AFSFAIL	3-Error	[chars] for command serialization failed.	This message indicates that the event required for command serialization has failed.	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
PARSER-3-BADLINK	3-Error	bad link point %p	Software attempted to perform an invalid parser operation.	-	"Copy the error message exactly as it appears. Execute a show version " "command and copy the displayed information. Contact your technical " "support representative."
PARSER-3-BADLINK	3-Error	bad link point %p	Software attempted to perform an invalid parser operation.	-	"Copy the error message exactly as it appears. Execute a show version " "command and copy the displayed information. Contact your technical " "support representative."
PARSER-3-BADSUBCMD	3-Error	Unrecognized subcommand [dec] in [chars] command '[chars]'	The parser failed an internal software check.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
PARSER-3-BADSUBCMD	3-Error	Unrecognized subcommand [dec] in [chars] command '[chars]'	The parser failed an internal software check.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
PARSER-3-CONFIG_INITIALIZED	3-Error	Initialization of the Config Log CLI failed.	Config Log CLI commands may not be accessible and hence the Config Logger may not be accessible via the IOS CLI.	-	"Copy the error message exactly as it appears. Execute a show version " "command and copy the displayed information. Contact your technical support " "representative with this information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PARSERCLOGCLIFAILED	3-Error	Initialization of the Config Log CLI failed.	Config Log CLI commands may not be accessible and hence the Config Logger may not be accessible via the IOS CLI.	-	"Copy the error message exactly as it appears. Execute a show version " "command and copy the displayed information. Contact your technical support " "representative with this information."
PARSERCLOGEMPTYCMD	3-Error	User:[chars]	The user specified entered an empty command for which a log attempt was made. Normally empty commands will not be logged.	-	"Copy the error message exactly as it appears. Execute a show version " "command and copy the displayed information. Execute a \"show cfglog " "user <username listed above> xml detailed\". Contact your technical " "support representative."
PARSERCLOGEMPTYCMD	3-Error	User:[chars]	The user specified entered an empty command for which a log attempt was made. Normally empty commands will not be logged.	-	"Copy the error message exactly as it appears. Execute a show version " "command and copy the displayed information. Execute a \"show cfglog " "user <username listed above> xml detailed\". Contact your technical " "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PARSER</del> CFGLOG_CONSIST	3-Error	User:[chars] command:[chars]	When logging a command entered on the CLI the Config Logger detected an inconsistency in the log. This inconsistency may result in a failure to log the command.	-	"Copy the error message exactly as it appears. Execute a show version " "command and copy the displayed information. Determine if possible "
<del>PARSER</del> CFGLOG_CONSIST	3-Error	User:[chars] command:[chars]	When logging a command entered on the CLI the Config Logger detected an inconsistency in the log. This inconsistency may result in a failure to log the command.	-	"Copy the error message exactly as it appears. Execute a show version " "command and copy the displayed information. Determine if possible "
<del>PARSER</del> CFGLOG_INITALED	3-Error	Initialization of the Config Log subsystem failed.	During initialization one or more queues/data structures essential to the config logger could not be set up. As a result the config logger will not be available for use.	-	"Copy the error message exactly as it appears. Execute a show version " "command and copy the displayed information. Contact your technical support " "representative with this information."
<del>PARSER</del> CFGLOG_INITALED	3-Error	Initialization of the Config Log subsystem failed.	During initialization one or more queues/data structures essential to the config logger could not be set up. As a result the config logger will not be available for use.	-	"Copy the error message exactly as it appears. Execute a show version " "command and copy the displayed information. Contact your technical support " "representative with this information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PARSER3CFGLOG_NMEM	3-Error	User:[chars] [chars]	The command that was entered could not be logged because of a lack of memory. It is possible that the system logger syslog can allocate	-	"Attempt to free up memory on the router by stopping nonessential " "processes or unused features that may be running. Once sufficient " "memory is available this message will no longer appear."
PARSER3CFGLOG_NMEM	3-Error	User:[chars] [chars]	The command that was entered could not be logged because of a lack of memory. It is possible that the system logger syslog can allocate	-	"Attempt to free up memory on the router by stopping nonessential " "processes or unused features that may be running. Once sufficient " "memory is available this message will no longer appear."
PARSER3CFGLOG_NUSER	3-Error	Command:[chars]	Could not determine the user when logging the above command. Hence it could not be saved in the config log.	-	"Copy the error message exactly as it appears. Execute a show version " "command and copy the displayed information. Determine if possible "
PARSER3CFGLOG_NUSER	3-Error	Command:[chars]	Could not determine the user when logging the above command. Hence it could not be saved in the config log.	-	"Copy the error message exactly as it appears. Execute a show version " "command and copy the displayed information. Determine if possible "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PKSEC</del> COESIAFCMME	3-Error	Configuration logger persistency: Applying config command '[chars]' failed. result '[dec]'.	When applying the command to the running configuration the parser returned an error.	-	" Parser encountered an error when the command is applied " " to the running configuration during reload. Verify no " " other process locks the configuration mode during this " " time. The parser could be locked by the HA or SNMP or by " " some other process."
<del>PKSEC</del> COESIAFCMME	3-Error	Configuration logger persistency: Applying config command '[chars]' failed. result '[dec]'.	When applying the command to the running configuration the parser returned an error.	-	" Parser encountered an error when the command is applied " " to the running configuration during reload. Verify no " " other process locks the configuration mode during this " " time. The parser could be locked by the HA or SNMP or by " " some other process."
<del>PKSEC</del> COESIDCFMME	3-Error	Configuration logger persistency: opening persist db failed. File '[chars]'.	The file open for writing/reading persisted commands failed.	-	"Check for the file system availability. The file system " " might have got corrupted. Try formatting the file system."
<del>PKSEC</del> COESIDCFMME	3-Error	Configuration logger persistency: opening persist db failed. File '[chars]'.	The file open for writing/reading persisted commands failed.	-	"Check for the file system availability. The file system " " might have got corrupted. Try formatting the file system."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PASRC</del> LOG_PERS_HISS_UL	3-Error	Configuration logger persistency: Add command to persistent db failed. File system '[chars]' full.	When logging a command entered on the CLI into the configuration logger persistent database the Config Logger persistency detected zero bytes free in the file system.	-	"Check the space available in the filesystem displayed reported. " "Use 'dir <filesystemname>:' to find out the bytes free. " "Clear out some space for the configuration logger persistency " "feature to continue store the config commands logged in to the " "persistent database."
<del>PASRC</del> LOG_PERS_HISS_UL	3-Error	Configuration logger persistency: Add command to persistent db failed. File system '[chars]' full.	When logging a command entered on the CLI into the configuration logger persistent database the Config Logger persistency detected zero bytes free in the file system.	-	"Check the space available in the filesystem displayed reported. " "Use 'dir <filesystemname>:' to find out the bytes free. " "Clear out some space for the configuration logger persistency " "feature to continue store the config commands logged in to the " "persistent database."
<del>PASRC</del> LOG_PURCHALD	3-Error	Purge config log failed.	Failed to purge some of the config log entries	-	"Copy the error message exactly as it appears. Execute a show version " "command and copy the displayed information. Contact your technical support " "representative with this information."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PARSR3CLOGRCHALD</del>	3-Error	Purge config log failed.	Failed to purge some of the config log entries	-	"Copy the error message exactly as it appears. Execute a show version " "command and copy the displayed information. Contact your technical support " "representative with this information."
<del>PARSR3CLOGRSEALD</del>	3-Error	Could not resize the config logger to new size:[dec]	Due to an internal error a request to resize the config log was not carried out. Apart from a failure to resize there should be no change in the behavior of the config logger.	-	"Copy the error message exactly as it appears. Execute a show version " "command and copy the displayed information. Contact your technical support " "representative with this information."
<del>PARSR3CLOGRSEALD</del>	3-Error	Could not resize the config logger to new size:[dec]	Due to an internal error a request to resize the config log was not carried out. Apart from a failure to resize there should be no change in the behavior of the config logger.	-	"Copy the error message exactly as it appears. Execute a show version " "command and copy the displayed information. Contact your technical support " "representative with this information."
<del>PARSR3CLOGSESSIONR</del>	3-Error	Could not delete config log session:[dec] for user:[chars].	When a user logged out the Config Logger was unable to clean up information about the user's login session. The result might be a memory leak or inability to add new commands to the Config Log.	-	"Copy the error message exactly as it appears. Execute a show version " "command and copy the displayed information. Contact your technical support " "representative with this information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PARSER-3-CLOGSESSIONR	3-Error	Could not delete config log session:[dec] for user:[chars].	When a user logged out the Config Logger was unable to clean up information about the user's login session. The result might be a memory leak or inability to add new commands to the Config Log.	-	"Copy the error message exactly as it appears. Execute a show version " "command and copy the displayed information. Contact your technical support " "representative with this information."
PARSER-3-CREATEINT	3-Error	Can't create any more subinterfaces	The parser failed an internal software check.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
PARSER-3-CREATEINT	3-Error	Can't create any more subinterfaces	The parser failed an internal software check.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
PARSER-3-CSLFAIL	3-Error	Semaphore creation for configuration session lock failed	This message indicates that the semaphore required for configuration session locking has failed.	-	-
PARSER-3-CSLFAIL	3-Error	Semaphore creation for configuration session lock failed	This message indicates that the semaphore required for configuration session locking has failed.	-	-
PARSER-3-NOLINK	3-Error	no link_point[dec] in the [chars] [chars] command chain	The parser failed an internal software check.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
PARSER-3-NOLINK	3-Error	no link_point[dec] in the [chars] [chars] command chain	The parser failed an internal software check.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
<del>PARSER-3-PCMLError</del>	3-Error	compile of regular expression failed: \[chars]\	Unrecoverable error while parsing	-	"Ensure that the system is not low on memory."
<del>PARSER-3-PCMLError</del>	3-Error	compile of regular expression failed: \[chars]\	Unrecoverable error while parsing	-	"Ensure that the system is not low on memory."
PARSER-3-URLOPENFAIL	3-Error	cannot open file for redirection '[chars]'	The destination URL for the redirection cannot be opened for writing.	-	"Check for proper Uniform Resource Locator syntax and for write " "permission. Also check for free space and retry"
PARSER-3-URLOPENFAIL	3-Error	cannot open file for redirection '[chars]'	The destination URL for the redirection cannot be opened for writing.	-	"Check for proper Uniform Resource Locator syntax and for write " "permission. Also check for free space and retry"
PARSER-3-WMLFAIL	3-Error	Semaphore creation for write memory lock failed	This message indicates that the semaphore required for write memory locking has failed.	-	-
PARSER-3-WMLFAIL	3-Error	Semaphore creation for write memory lock failed	This message indicates that the semaphore required for write memory locking has failed.	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
PARSER-4-BADCFG	4-Warning	Unexpected end of configuration file.\n	This message occurs when a configuration is read from the Trivial File Transfer Protocol TFTP server or nonvolatile RAM NVRAM and the end	-	"Make sure the configuration is good then execute either a copy " "running-config startup-config command to write the good configuration " "to NVRAM or a copy running-config tftp command to write to a network " "TFTP server."
PARSER-4-BADCFG	4-Warning	Unexpected end of configuration file.\n	This message occurs when a configuration is read from the Trivial File Transfer Protocol TFTP server or nonvolatile RAM NVRAM and the end	-	"Make sure the configuration is good then execute either a copy " "running-config startup-config command to write the good configuration " "to NVRAM or a copy running-config tftp command to write to a network " "TFTP server."
PARSER-4-BADRANGE	4-Warning	Bad range <[dec]-[dec]> for command '[chars]'	A software or hardware error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
PARSER-4-BADRANGE	4-Warning	Bad range <[dec]-[dec]> for command '[chars]'	A software or hardware error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
PARSER-4-BADRANGE	4-Warning	Bad range <[node]-[node]> for command '[chars]'	A software or hardware error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PARSER4-RANCHOLOG	4-Warning	Bad range <[node]-[node]> for command '[chars]'	A software or hardware error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
PARSER4-INVLDLINE	4-Warning	Invalid line in NV generation: [node]n	The parser failed an internal software check.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
PARSER4-INVLDLINE	4-Warning	Invalid line in NV generation: [node]n	The parser failed an internal software check.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
PARSER4-INVLDNVGEN	4-Warning	Invalid function called in NVGEN of '[chars]'	An error occurred.	-	"Copy the error message exactly as it appears. Execute a show version " "command and copy the displayed information. Contact your technical " "support representative."
PARSER4-INVLDNVGEN	4-Warning	Invalid function called in NVGEN of '[chars]'	An error occurred.	-	"Copy the error message exactly as it appears. Execute a show version " "command and copy the displayed information. Contact your technical " "support representative."
PARSER4-INVLDSYNIX	4-Warning	Syntax cleanup list updated while not syntax checking. \nFuncPtr / Context [chars]	Functions were mistakenly called there may be more than listed	-	"show version"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
PARSER4INVLDSYNTAX	4-Warning	Syntax cleanup list updated while not syntax checking. \nFuncPtr / Context [chars]	Functions were mistakenly called there may be more than listed	-	"show version"
PARSER4LINKPOINT	4-Warning	Parser reached link_point	The parser failed an internal software check.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
PARSER4LINKPOINT	4-Warning	Parser reached link_point	The parser failed an internal software check.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
PARSER4MULFUNCS	4-Warning	unknown test in test_multiple_funcs '[chars]'	The parser failed an internal software check.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
PARSER4MULFUNCS	4-Warning	unknown test in test_multiple_funcs '[chars]'	The parser failed an internal software check.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
PARSER4MULTIPLEIFS	4-Warning	interface_action: multiple ifs present when unit_only set	The parser failed an internal software check.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
PARSER4MULTIPLEIFS	4-Warning	interface_action: multiple ifs present when unit_only set	The parser failed an internal software check.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PARSER-4-NUMHELP	4-Warning	general_number_short_help: Invalid [chars] number flag	The parser failed an internal software check.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
PARSER-4-NUMHELP	4-Warning	general_number_short_help: Invalid [chars] number flag	The parser failed an internal software check.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
PARSER-4-NVGEN	4-Warning	nvgen_token called but csb->nvgen not set	The parser failed an internal software check.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
PARSER-4-NVGEN	4-Warning	nvgen_token called but csb->nvgen not set	The parser failed an internal software check.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
PARSER-4-PROTOADDR	4-Warning	protoaddr_action: Unknown link_type [dec]	The parser failed an internal software check.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
PARSER-4-PROTOADDR	4-Warning	protoaddr_action: Unknown link_type [dec]	The parser failed an internal software check.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
PARSER-4-SHELL_SYNTAX	4-Warning	Shell function: [chars]: Syntax Error: [chars]	There is a syntax error in the Shell script.	parser	"Users are recommended to correct it in the script."
PARSER-4-SHELL_SYNTAX	4-Warning	Shell function: [chars]: Syntax Error: [chars]	There is a syntax error in the Shell script.	parser	"Users are recommended to correct it in the script."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PARSR</del> CFGLOGGCHMD	5-Notice	User:[chars] logged command:[chars]	The config logger which logs every CLI command has an option to log messages to syslog - whenever a CLI command is executed this message is printed.	-	"This message DOES NOT denote any error condition. It is a part of the "normal operation of the parser and config logger. If you do not wish " "to see this syslog message type \"no cfglog send to syslog\"."
<del>PARSR</del> CFGLOGGCHMD	5-Notice	User:[chars] logged command:[chars]	The config logger which logs every CLI command has an option to log messages to syslog - whenever a CLI command is executed this message is printed.	-	"This message DOES NOT denote any error condition. It is a part of the "normal operation of the parser and config logger. If you do not wish " "to see this syslog message type \"no cfglog send to syslog\"."
<del>PARSR</del> CFG_PERS_AP_ON_RLOD	5-Notice	Apply persisted config cmds on reload switched off	The switch that controls the persisted commands applied during reload is set to OFF.	-	"Verify the rommon variable 'logpersistreload' value from rommon" " prompt. This variable might have been intentionally set to OFF."
<del>PARSR</del> CFG_PERS_AP_ON_RLOD	5-Notice	Apply persisted config cmds on reload switched off	The switch that controls the persisted commands applied during reload is set to OFF.	-	"Verify the rommon variable 'logpersistreload' value from rommon" " prompt. This variable might have been intentionally set to OFF."
<del>PARSR</del> CFG_PERS_HEIMT	5-Notice	Configuration logger persistency contains [dec] commands in [chars] file.	Configuration logger persistency has persisted more commands. Time to do write memory to save all the persisted commands to the startup-config file.	parser	"This is a notification message to remind the user to do" " write memory or copy running-config startup-config."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PARSECLOGPERSHEIM</del>	5-Notice	Configuration logger persistency contains [dec] commands in [chars] file.	Configuration logger persistency has persisted more commands. Time to do write memory to save all the persisted commands to the startup-config file.	parser	"This is a notification message to remind the user to do" " write memory or copy running-config startup-config."
<del>PARSECLOGPERSDOWN</del>	5-Notice	Configuration logger persistency is enabled but is operationally down	When Configuration logger persistency is enabled it is operationally down. It becomes operationally up at the next write memory or copy running-config startup-config operation.	parser	"Please do write memory or copy running-config startup-config" " to make the feature operationally up. Otherwise the" " commands will not be persisted."
<del>PARSECLOGPERSDOWN</del>	5-Notice	Configuration logger persistency is enabled but is operationally down	When Configuration logger persistency is enabled it is operationally down. It becomes operationally up at the next write memory or copy running-config startup-config operation.	parser	"Please do write memory or copy running-config startup-config" " to make the feature operationally up. Otherwise the" " commands will not be persisted."
<del>PARSECLOGPERSORUP</del>	5-Notice	Configuration logger persistency is operationally up	When Configuration logger persistency is enabled it becomes operationally up after the next write memory operation to start persisting commands.	parser	"This is a notification message only. No action is required."
<del>PARSECLOGPERSORUP</del>	5-Notice	Configuration logger persistency is operationally up	When Configuration logger persistency is enabled it becomes operationally up after the next write memory operation to start persisting commands.	parser	"This is a notification message only. No action is required."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
PARSER-5-HIDDEN	5-Notice	Warning!!! '[chars]' is a hidden command. Use of this command is not recommended/supported and will be removed in future.	This message indicates the current cli is hidden command.	-	-
PARSER-5-HIDDEN	5-Notice	Warning!!! '[chars]' is a hidden command. Use of this command is not recommended/supported and will be removed in future.	This message indicates the current cli is hidden command.	-	-
PARSER-5-INTERNAL	5-Notice	Warning!!! '[chars]' is an internal command. Use of this command is not recommended/supported.	This message indicates the current cli is an internal command.	-	-
PARSER-5-INTERNAL	5-Notice	Warning!!! '[chars]' is an internal command. Use of this command is not recommended/supported.	This message indicates the current cli is an internal command.	-	-
PARSER-6-CLIHOG	6-Information	This command by [chars] will not be serialized anymore.	This message indicates that the command execution might be either time consuming or processing large data structures. Attention required by the CLI owners to set PARSE_DONT_FLAG and protect their data structure else ignore.	-	"Please contact the Command Owner to take corrective action."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PARSER-6-CLIHOG	6-Information	This command by [chars] will not be serialized anymore.	This message indicates that the command execution might be either time consuming or processing large data structures. Attention required by the CLI owners to set PARSE_DONT_FLAG and protect their data structure else ignore.	-	"Please contact the Command Owner to take corrective action."
<del>PARSER@CSLOCKCLEARD</del>	6-Information	Configuration session lock is cleared by process '[dec]' user '[chars]' from terminal '[dec]'	Configuration session lock was forcibly released as per the request by either the terminal user or an application or on timeout.	parser	"This is a notification message only. No action is required."
<del>PARSER@CSLOCKCLEARD</del>	6-Information	Configuration session lock is cleared by process '[dec]' user '[chars]' from terminal '[dec]'	Configuration session lock was forcibly released as per the request by either the terminal user or an application or on timeout.	parser	"This is a notification message only. No action is required."
<del>PARSER@CSLOCKTIMEOUT</del>	6-Information	Configuration session lock acquired by application '[chars]' / process '[dec]' is being used for long time.	Configuration session lock has been acquired and timed out. The lock should be made available for requesting process.	parser	"This is a notification message in case of manually acquired lock " " by 'configure terminal lock' command. " "A defect can be filed if any other application is blocking it".
<del>PARSER@CSLOCKTIMEOUT</del>	6-Information	Configuration session lock acquired by application '[chars]' / process '[dec]' is being used for long time.	Configuration session lock has been acquired and timed out. The lock should be made available for requesting process.	parser	"This is a notification message in case of manually acquired lock " " by 'configure terminal lock' command. " "A defect can be filed if any other application is blocking it".

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
PARSER-6LI_VIEW_INT	6-Information	LI-View initialised.	You have successfully initialised LI-View.	-	""
PARSER-6LI_VIEW_INT	6-Information	LI-View initialised.	You have successfully initialised LI-View.	-	""
PARSER-6WMLRETRY	6-Information	Write memory lock currently held by pid '[dec]' automatic retry.	This message indicates that the semaphore required for write memory locking has timed out.	-	-
PARSER-6WMLRETRY	6-Information	Write memory lock currently held by pid '[dec]' automatic retry.	This message indicates that the semaphore required for write memory locking has timed out.	-	-
<del>PSWD-FU-INVALID_PSWD</del>	5-Notice	[chars] [chars] Failed authentication	The credential did not match the configured value when authentication	passwd	"No action required"
<del>PSWD-FU-INVALID_PSWD</del>	5-Notice	[chars] [chars] Failed authentication	The credential did not match the configured value when authentication	passwd	"No action required"
<del>PSWD-FU-INVALID_PSWD</del>	5-Notice	[chars] [chars] Failed authentication	The credential did not match the configured value when authentication	passwd	"No action required"
<del>PSWD-FU-INVALID_PSWD</del>	5-Notice	[chars] [chars] Failed authentication	The credential did not match the configured value when authentication	passwd	"No action required"
<del>PSWD-FU-LIFETIME_EXCEED</del>	5-Notice	[chars] [chars] credential lifetime has expired	The credential has exceeded the configured lifetime	passwd	"No action required"
<del>PSWD-FU-LIFETIME_EXCEED</del>	5-Notice	[chars] [chars] credential lifetime has expired	The credential has exceeded the configured lifetime	passwd	"No action required"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>PSWD</del> <u>FW</u> <del>HE</del> <u>ME</u> <del>EX</del> <u>CD</u>	5-Notice	[chars] [chars] credential lifetime has expired	The credential has exceeded the configured lifetime	passwd	"No action required"
<del>PSWD</del> <u>FW</u> <del>HE</del> <u>ME</u> <del>EX</del> <u>CD</u>	5-Notice	[chars] [chars] credential lifetime has expired	The credential has exceeded the configured lifetime	passwd	"No action required"
<del>PSWD</del> <u>FW</u> <del>HE</del> <u>EX</u> <u>PI</u> <del>NO<u>FI</u></del>	5-Notice	[chars] [chars] The credential is about to expiry	The credential is within to pre-expireinterval change the credential expires	passwd	"No action required"
<del>PSWD</del> <u>FW</u> <del>HE</del> <u>EX</u> <u>PI</u> <del>NO<u>FI</u></del>	5-Notice	[chars] [chars] The credential is about to expiry	The credential is within to pre-expireinterval change the credential expires	passwd	"No action required"
<del>PSWD</del> <u>FW</u> <del>HE</del> <u>EX</u> <u>PI</u> <del>NO<u>FI</u></del>	5-Notice	[chars] [chars] The credential is about to expiry	The credential is within to pre-expireinterval change the credential expires	passwd	"No action required"
<del>PSWD</del> <u>FW</u> <del>HE</del> <u>EX</u> <u>PI</u> <del>NO<u>FI</u></del>	5-Notice	[chars] [chars] The credential is about to expiry	The credential is within to pre-expireinterval change the credential expires	passwd	"No action required"
<del>PSWD</del> <u>FW</u> <del>HE</del> <u>EX</u> <u>PI</u> <del>NO<u>FI</u></del>	5-Notice	[chars] [chars] The credential is about to expiry	The credential is within to pre-expireinterval change the credential expires	passwd	"No action required"
<del>PSWD</del> <u>FW</u> <del>HE</del> <u>FA</u> <u>IL</u> <u>RE</u> <u>AD</u> <u>U</u> <u>RE</u>	5-Notice	[chars] [chars] number of allowed dauthentication failure exceeded	The number of authentication failures the allowed interval exceeded the configured value	passwd	"No action required"
<del>PSWD</del> <u>FW</u> <del>HE</del> <u>FA</u> <u>IL</u> <u>RE</u> <u>AD</u> <u>U</u> <u>RE</u>	5-Notice	[chars] [chars] number of allowed dauthentication failure exceeded	The number of authentication failures the allowed interval exceeded the configured value	passwd	"No action required"
<del>PSWD</del> <u>FW</u> <del>HE</del> <u>FA</u> <u>IL</u> <u>RE</u> <u>AD</u> <u>U</u> <u>RE</u>	5-Notice	[chars] [chars] number of allowed dauthentication failure exceeded	The number of authentication failures the allowed interval exceeded the configured value	passwd	"No action required"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>PSWDAUTHREATHAUE</del>	5-Notice	[chars] [chars] number of allowed dauthentication failure exceeded	The number of authentication failures the allowed interval exceeded the configured value	passwd	"No action required"
<del>PSWDECOMPLEXHAUE</del>	5-Notice	[chars] [chars] credential has failed the complexty check	The credential may not be as secure since it has failed the complexity check	passwd	"No action required"
<del>PSWDECOMPLEXHAUE</del>	5-Notice	[chars] [chars] credential has failed the complexty check	The credential may not be as secure since it has failed the complexity check	passwd	"No action required"
<del>PSWDECOMPLEXHAUE</del>	5-Notice	[chars] [chars] credential has failed the complexty check	The credential may not be as secure since it has failed the complexity check	passwd	"No action required"
<del>PSWDECOMPLEXHAUE</del>	5-Notice	[chars] [chars] credential has failed the complexty check	The credential may not be as secure since it has failed the complexity check	passwd	"No action required"
<del>PSWDEMSVRCNCHXEM</del>	5-Notice	[chars] [chars] the number of changes allowed has been exceeded	The number of credential changes has exceed the configured number and interval	passwd	"No action required"
<del>PSWDEMSVRCNCHXEM</del>	5-Notice	[chars] [chars] the number of changes allowed has been exceeded	The number of credential changes has exceed the configured number and interval	passwd	"No action required"
<del>PSWDEMSVRCNCHXEM</del>	5-Notice	[chars] [chars] the number of changes allowed has been exceeded	This command syntax has been deprecated.	passwd	"Please use the new syntax and update your saved configuration if needed."
<del>PSWDEMSVRCNCHXEM</del>	5-Notice	[chars] [chars] the number of changes allowed has been exceeded	This command syntax has been deprecated.	passwd	"Please use the new syntax and update your saved configuration if needed."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PATHCHANNEL_MISMATCH	3-Error	Channel mismatch between [chars] and [chars]	Channel mismatch when creating patch.	-	LOG_STD_ACTION
PATH_VEC-4-LDP	4-Warning	ERRMSG_LIMIT_SLOW*15	-	-	-
PATH_VEC-4-LDP	4-Warning	ERRMSG_LIMIT_SLOW*15	-	-	-
PATH3MPLS_TE_PCALC	3-Error	ERRMSG_HAG_TRACEBACK	-	-	-
PATH3MPLS_TE_PCALC	3-Error	ERRMSG_HAG_TRACEBACK	-	-	-
Path[chars] changed to [chars]	A Sonet high order path changed its state.	c7600-sip-200	"This is a internal software error. Decode the " "traceback and get the output of <CmdBold>show " "controller sonet<NoCmdBold>. Look into this " "output to see if there are any alarms being " "reported at the path level. Check Bug Toolkit " "before calling the TAC. When calling the TAC " "please provide the above information along with " "the output of <CmdBold>show tech<NoCmdBold> " "details"	-	-
PATHMGR-2-IPC_INIT	2-Critical	IPC message handler registration failure rc %u	Registering an IPC message handler for the PATHMGR feature failed. This will cause the feature to not function.	qfp-pathmgr	"This is normally a software issue. " "The consequences are that the PATHMGR feature will not function. " LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PATHMGR-3-IPC_NORES	3-Error	No space for the IPC reply size %u	For a request from upper PATHMGR software stack layers it was not possible to allocate space for a reply for the specified size. The consequence of this could be a stuck monitor that cannot be established etc. In rare cases this could also affect other operations such as feature activation.	qfp-pathmgr	"This is normally a software issue. " LOG_SID_RECUR_ACTION
PATHMGR-3-IPC_OPEN_REPLY	3-Error	IPC Open Reply failed request %u	For a request from upper PATHMGR software stack layers it was not possible to open the reply buffer. The consequence of this could be a stuck monitor that cannot be established etc. In rare cases this could also affect other operations such as feature activation.	qfp-pathmgr	"This is normally a software issue. " LOG_SID_RECUR_ACTION
PBR-2-NO_RMAP	2-Critical	Cannot create PBR data structures for route-map [chars]	The PBR manager could not allocate the data structures needed to describe a route-map being used for policy routing. Probably caused by lack of available memory.	firmware	"Use a less complicated configuration that " "requires less memory."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PBR-3-INSTALL_FAIL	3-Error	Policy route-map [chars] not installed in hardware	The PBR manager was unable to install the complete route-map in the hardware so this will have to be applied in software. This requires the packets to be forwarded by the CPU.	firmware	"Reconfigure the route-map to use a simpler " " configuration. Use the same route-map on " "multiple interfaces if possible"
PBR-3-MERGE_FAIL	3-Error	[chars] ACL merge error [dec] on route-map [chars]	The PBR manager could not complete the merge of the configured route-map into a form suitable for loading into the hardware. The most likely cause is specifying an ACL that is too large or too complex for the system to handle.	firmware	"Try specifying a smaller and less complicated " "configuration."
PBR-3-NO_LABEL	3-Error	Cannot allocate label for route-map [chars]	The PBR manager could not allocate a label for this route-map. This means that the hardware cannot be programmed to implement policy routing. There is a limit of 247 labels for policy routing	firmware	"Use a less complicated configuration that " "allows label sharing. Use the same route-maps on multiple interfaces if possible"
PBR-3-PBR_CLASSIFY_FAIL	3-Error	Dataplane classification error for interface [chars]	Cisco internal software error. The dataplane was unable to complete processing of a route map due to a classification failure. This is likely due to a data initialization error	cpp-ucodekeyword:pbr	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HBRUNSUPPORTED_RMAP	3-Error	Route-map [chars] not supported for Policy-Based Routing	The route-map attached to an interface for policy routing contains an action that is not supported on this platform. This is a hardware limitation.	hardware	"Reconfigure the route-map. Use only 'permit' " "entries and 'set ip next-hop' action in the " "route-map."
HBRUNSUPPORTED_ACTION	4-Warning	Set action in sequence [dec] of route-map [chars] supported by forwarding to CPU	The route-map attached to an interface for policy routing contains an action that is not supported in hardware since it contains a 'set interface' 'set ip default next-hop' 'set default interface' or or 'set ip df' actions. This requires the packets to be forwarded by the CPU.	firmware	"Reconfigure the route-map. Use only 'set ip " "next-hop' in the route-map if possible."
PBR4RETRY_INSTALL	4-Warning	Route-map [chars] installed in hardware upon retry	The PBR manager was able to fit the complete configuration into the hardware. One or more route-maps had previously not been loaded because of lack of space.	firmware	LOG_STD_NO_ACTION
HBRUNMEMINIT_FAIL	3-Error	[chars]	Failure occurred when attempting to create memory resource	cpp-ucode	LOG_STD_ACTION
HBRUNMEMREQ_FAIL	3-Error	-	Failure occurred when attempting to request extended packet memory.	cpp-ucode	LOG_STD_ACTION
HBRUNMEMCORRUPT	3-Error	[hec] [hec]	Memory corruption detected while freeing extended packet memory	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>BUFBFS_HDRAMCVTAL</del>	3-Error	[chars]	An attempt to convert a shared DRAM buffer to non-shared failed.	cpp-ucode	LOG_STD_ACTION
PCE-5-PCE_ERR_RX	5-Notice	PCEP peer [chars] sent PCErr message - type: [node]value: %u	PCErr message was received from peer	-	"Verify PCEP protocol operation"
PCE-5-PCE_ERR_RX	5-Notice	PCEP peer [chars] sent PCErr message - type: [node]value: %u	PCErr message was received from peer	-	"Verify PCEP protocol operation"
PCE-5-PCE_STATE	5-Notice	Connection to PCE server:[chars] [chars]	The connection to PCE server changed state.	-	"If the state change was unexpected check connectivity and state of the PCE server"
PCE-5-PCE_STATE	5-Notice	Connection to PCE server:[chars] [chars]	The connection to PCE server changed state.	-	"If the state change was unexpected check connectivity and state of the PCE server"
PCIE-3-PCIE_NODEV	3-Error	PRE5 did not find the correct PCIE device ID is 0x[hec]!	PRE5 did not find correct PCIE devices.	cr10k5	"Copy the error message exactly as it appears and report it to your " "technical support representative."
<del>RMPCTRMNNPCSPD</del>	3-Error	The channel/group type of ds0 [node]is not supported by PCM Tracer.	Can't execute this command on the ds0 number specified.	<del>RMPCRDSCMNT</del>	"Refer to the user guide for the channel/group type PCM Tracer " "supports."
<del>RMPCTRMNOACTAL</del>	3-Error	No active calls to trace.	PCM Tracer can be applied only on active calls.	<del>RMPCRDSCMNT</del>	"Make sure there is an active call before starting the PCM Tracer."
<del>RMPCTRMNOAURDN</del>	3-Error	No capture duration configured.	Capture duration is required for starting the PCM Tracer.	<del>RMPCRDSCMNT</del>	"Configure capture duration before starting the PCM Tracer."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>RMTRACR</del> RMTRACR <del>CM</del> CAU <del>ED</del> DM	3-Error	No capture-tdm configured under profile [node]	Capture-tdm is required for starting the PCM Tracer.	<del>RMTRACR</del> RMTRACR <del>DISC</del> MONENT	"Configure capture-tdm before starting the PCM Tracer."
<del>RMTRACR</del> RMTRACR <del>CM</del> NO <del>DE</del> SI	3-Error	No PCM Tracer capture destination configured.	Capture destination is required for starting the PCM Tracer.	<del>RMTRACR</del> RMTRACR <del>DISC</del> MONENT	"Configure capture destination before starting the PCM Tracer."
<del>RMTRACR</del> RMTRACR <del>CM</del> NO <del>PR</del> OIE	3-Error	No PCM Tracer profile configured.	Capture profile is required for starting the PCM Tracer.	<del>RMTRACR</del> RMTRACR <del>DISC</del> MONENT	"Configure capture profile before starting the PCM Tracer."
<del>RMTRACR</del> RMTRACR <del>CM</del> NO <del>SL</del> OT	3-Error	PCM Tracer is not supported on slot [node]	Can't execute this command on the slot number specified.	<del>RMTRACR</del> RMTRACR <del>DISC</del> MONENT	"Refer to the user guide for which slot PCM Tracer is supported on."
<del>RMTRACR</del> RMTRACR <del>CM</del> RU <del>NN</del> ING	3-Error	A PCM Tracer session is currently running.	Can't execute this command since there is a PCM Tracer running now.	<del>RMTRACR</del> RMTRACR <del>DISC</del> MONENT	"Make sure there is no PCM Tracer session running before execute this "command."
<del>PCMTRACR</del> PCMTRACR <del>CM</del> ST <del>AR</del> T	6-Information	Starting PCM Trace on channel under profile [dec]	-	-	-
<del>PCMTRACR</del> PCMTRACR <del>CM</del> ST <del>OP</del>	6-Information	Stopping PCM Trace on channel under profile [dec]	-	-	-
<del>PCMTRACR</del> PCMTRACR <del>CM</del> ST <del>OP</del> AL	6-Information	Fail to Stop PCM Trace on channel under profile [dec]	-	-	-
<del>RMTRACR</del> RMTRACR <del>CM</del> ST <del>OP</del> ING	6-Information	Stop PCM capture	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PCMCIAFS3-RESETEERR	3-Error	PCMCIA disk [dec] [chars]	PCMCIA disk could not be reset while the system is initiated reload. This will cause a transient disk error disk timeout error when the ROMMON initialization code tries to reads the DIB. This is a transient error and the system will be able to access the disk and continue normal operation.	-	LOG_STD_NO_ACTION
PCMCIAFS4-DIS_FCK_ERR	4-Warning	Error while running fck on the file [chars].	Fck is running in a loop while walking through the cluster chain of a file and has aborted.	ata-fileSystem	LOG_STD_DIS_FCK_ERR
PCMCIAFS5-DIS_CLOSE_ERR	5-Notice	Error during close of the file [chars]. [chars]	An error occurred during a file close operation.	-	"Enter the <CmdBd> fix <NoCmdBd> <CmdArg> filesystem prefix:<NoCmdArg> " "command to check and attempt to repair the disk. If this does not " "fix the problem format the disk."
PCMCIAFS5-DIBERR	5-Notice	[dec] [chars]	The system cannot boot a image from the PCMCIA Flash disk because the Device Information Block is different. The Flash disk can be read by the router but will require formatting by the router before an image can be booted from it.	-	"Follow any instructions provided in the error " "message. Before storing a image in the Flash disk " "and trying to boot from this device enter the " "format command to format the flash disk from the " "router. Then copy the desired image to the Flash " "disk and then boot from this device."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>DM#POLY_CFG_FAIL</del>	3-Error	Policy Config Failed for Policy id [dec]. [chars]	Trying to configure/program wrong Policy	-	"Reconfigure the Policy"
<del>DM#POLY_DEL_FAIL</del>	3-Error	Policy Delete Failed for Policy id [dec]	Trying to delete wrong Policy	-	"Unconfigure the Policy again"
<del>DM#POLY_SYNTAX_FAIL</del>	3-Error	Policy Syntax Failed for Policy id [dec]. [chars]	Trying to configure/program Policy with wrong syntax	-	"Reconfigure the Policy with correct syntax"
<del>DM#SRVCE_CFG_FAIL</del>	3-Error	Service Config Failed for Service id [dec]. [chars]	Trying to configure/program wrong Service	-	"Reconfigure the Service"
<del>DM#SRVCE_DEL_FAIL</del>	3-Error	Service Delete Failed for Service id [dec]	Trying to delete wrong Service	-	"Unconfigure the Service again"
<del>DM#SRVCE_SYNTAX_FAIL</del>	3-Error	Service Syntax Failed for Service id [dec]. [chars]	Trying to configure/program Service with wrong syntax	-	"Reconfigure the Service with correct syntax"
PDPS5PWR_SRC_DISC	5-Notice	Change in Power Source [chars] Available	New Power sources auxilliary or uplinks is discovered	pdpse	LOG_SID_NO_ACTION
<del>PD#PDU_PROXY_INIT_FAIL</del>	2-Critical	QFP PDU_SESS Proxy IPC interface initialization failure result: [dec].	Cisco internal software error. QFP PDU_SESS Proxy initialization detected that the IPC interface initialization failed. QFP PDU_SESS proxy will not be functional while this condition exists.	<del>qfp_pdu_sess</del> keyword <del>qfp_pdu_sess</del>	LOG_STD_ACTION
<del>PD#PDU_IPSMEM_FAIL</del>	3-Error	PDU_SESS IPC subtype: [dec]	Extending memory failed.	<del>qfp_pdu_sess</del> keyword <del>qfp_pdu_sess</del>	LOG_STD_ACTION
<del>PD#PDU_IPSMEM_FAIL</del>	3-Error	PDU_SESS IPC subtype: [dec]	Requesting more memory failed.	<del>qfp_pdu_sess</del> keyword <del>qfp_pdu_sess</del>	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PDU_SSPROXY_BADMSG</del>	3-Error	QFP PDU_SESS Proxy received bad length message type [dec]	Cisco internal software error. QFP PDU_SESS Proxy received a corrupted message from control plane. This message will be ignored.	<del>qfp_pdu_sesskeywordpdu_sess</del>	LOG_STD_ACTION
<del>PDU_SSPROXY_ALLOCFAIL</del>	3-Error	QFP PDU_SESS Proxy [chars] message lost due to message buffer allocation failure.	Cisco internal software error. QFP PDU_SESS Proxy message processing detected a message buffer allocation failure. The message is lost as the result of this condition.	<del>qfp_pdu_sesskeywordpdu_sess</del>	LOG_STD_ACTION
<del>PDU_SSPROXY_SENTFAIL</del>	3-Error	QFP PDU_SESS Proxy [chars] message lost due to message sent failure result: [dec].	Cisco internal software error. QFP PDU_SESS Proxy message processing detected a message sent failure. The message is lost as the result of this condition.	<del>qfp_pdu_sesskeywordpdu_sess</del>	LOG_STD_ACTION
<del>PDU_SSPROXY_NULLMSG</del>	3-Error	QFP PDU_SESS Proxy received null message	Cisco internal software error. QFP PDU_SESS Proxy received an null message from control plane. This message will be ignored.	<del>qfp_pdu_sesskeywordpdu_sess</del>	LOG_STD_ACTION
<del>PDU_SSPROXY_INVALIDMSG</del>	4-Warning	QFP PDU_SESS Proxy received invalid message type [dec]	Cisco internal software error. QFP PDU_SESS Proxy received an invalid message from control plane. This message will be ignored.	<del>qfp_pdu_sesskeywordpdu_sess</del>	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PPDU_SESS</del> <del>PPDU_SESS</del> <del>PPDU_SESS</del>	4-Warning	QFP PDU_SESS Proxy IPC invalid length [dec]:[dec] len [dec] flags 0x[hec] source [dec]	Cisco internal software error. QFP PDU_SESS Proxy received invalid IPC message length from control plane. This message will be ignored.	<del>qfpdu_sess</del> <del>qfpdu_sess</del> <del>qfpdu_sess</del>	LOG_STD_ACTION
<del>IOSXE_BINS_UTILS</del> <del>IOSXE_BINS_UTILS</del> <del>IOSXE_BINS_UTILS</del>	5-Notice	iosxe-bins-utils	ADD event:[chars]	Reports an important HA peer (a.k.a. standby) selection ADD event	LOG_SID_NO_ACTION
<del>IOSXE_BINS_UTILS</del> <del>IOSXE_BINS_UTILS</del> <del>IOSXE_BINS_UTILS</del>	5-Notice	iosxe-bins-utils	Preferred master event:[chars]	Reports an important HA peer (a.k.a. standby) selection preferred master event	LOG_SID_NO_ACTION
<del>IOSXE_BINS_UTILS</del> <del>IOSXE_BINS_UTILS</del> <del>IOSXE_BINS_UTILS</del>	5-Notice	iosxe-bins-utils	REMOVE event:[chars]	Reports an important HA peer (a.k.a. standby) selection REMOVE event	LOG_SID_NO_ACTION
<del>IOSXE_BINS_UTILS</del> <del>IOSXE_BINS_UTILS</del> <del>IOSXE_BINS_UTILS</del>	5-Notice	iosxe-bins-utils	SELECT event:[chars]	Reports an important HA peer (a.k.a. standby) selection SELECT event	LOG_SID_NO_ACTION
PEERSM-3-LCON	3-Error	ERRMSG_NOFLAGS	-	-	-
PEERSM-3-LCON	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>PERF_MEASURE</del> <del>PERF_MEASURE</del> <del>PERF_MEASURE</del>	3-Error	<del>PERF_MEASURE</del> \\nWARNING: PTP License is not yet activated. \\nPlease configure 'license feature ptp'\\n		-	LOG_STD_ACTION
PERF_MEASURE-CRIT-ERR	2-Critical	The Perf Measure protocol has encountered the critical error: [chars].	The protocol has run into a critical error. The reason should be given in the brackets.	perf-measure	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PERF_MEASURE_CRIT_ERR	2-Critical	The Perf Measure protocol has encountered the critical error: [chars].	The protocol has run into a critical error. The reason should be given in the brackets.	perf-measure	LOG_STD_ACTION
PERF_MEASURE_CRIT_ERR	2-Critical	PERF MEASURE ISSU client failed to get buffer for message. Error: [dec] [chars]	The PERF MEASURE ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	perf-measure	"show logging and show checkpoint client"
PERF_MEASURE_CRIT_ERR	2-Critical	PERF MEASURE ISSU client failed to get buffer for message. Error: [dec] [chars]	The PERF MEASURE ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	perf-measure	"show logging and show checkpoint client"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
PERF_MEASURE-2-INT	2-Critical	PERF MEASURE ISSU client initialization failed to [chars]. Error: [dec] [chars]	The PERF MEASURE ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	perf-measure	LOG_STD_ACTION
PERF_MEASURE-2-INT	2-Critical	PERF MEASURE ISSU client initialization failed to [chars]. Error: [dec] [chars]	The PERF MEASURE ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	perf-measure	LOG_STD_ACTION
<del>PERF_MEASURE-2-INT</del> PERF_MEASURE-2-INT	2-Critical	PERF MEASURE ISSU client failed to send negotiation message. Error: [dec] [chars]	The PERF MEASURE ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	perf-measure	"show logging and show checkpoint client"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PERF MEASURE ISSU</del>	2-Critical	PERF MEASURE ISSU client failed to send negotiation message. Error: [dec] [chars]	The PERF MEASURE ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	perf-measure	"show logging and show checkpoint client"
<del>PERF MEASURE ISSU</del>	2-Critical	PERF MEASURE ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The PERF MEASURE ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	perf-measure	"show issu session <client_id> and "show issu negotiated capability <session_id>"
<del>PERF MEASURE ISSU</del>	2-Critical	PERF MEASURE ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The PERF MEASURE ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	perf-measure	"show issu session <client_id> and "show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PERF_MEASURE_ISSU_NRCG_SRV</del>	2-Critical	PERF MEASURE ISSU client failed to register session information. Error: [dec] [chars]	The PERF MEASURE ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	perf-measure	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>PERF_MEASURE_ISSU_NRCG_SRV</del>	2-Critical	PERF MEASURE ISSU client failed to register session information. Error: [dec] [chars]	The PERF MEASURE ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	perf-measure	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>PERF_MEASURE_ISSU_NAD_ISSN</del>	3-Error	PERF MEASURE ISSU client does not have a valid registered session.	The PERF MEASURE ISSU client does not have a valid registered session.	perf-measure	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>PERF_MEASURE_ISSU_NAD_ISSN</del>	3-Error	PERF MEASURE ISSU client does not have a valid registered session.	The PERF MEASURE ISSU client does not have a valid registered session.	perf-measure	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>PERF_MEASURE_ISSU_MG_SE</del>	3-Error	PERF MEASURE ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The PERF MEASURE ISSU client failed to calculate the MTU for the specified message. The PERF MEASURE ISSU client is not able to send the message to the standby device.	perf-measure	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PERF MEASURE MSG SIZE</del>	3-Error	PERF MEASURE ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The PERF MEASURE ISSU client failed to calculate the MTU for the specified message. The PERF MEASURE ISSU client is not able to send the message to the standby device.	perf-measure	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>PERF MEASURE UNREG SV</del>	3-Error	PERF MEASURE ISSU client failed to unregister session information. Error: [dec] [chars]	The PERF MEASURE ISSU client failed to unregister session information.	perf-measure	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>PERF MEASURE UNREG SV</del>	3-Error	PERF MEASURE ISSU client failed to unregister session information. Error: [dec] [chars]	The PERF MEASURE ISSU client failed to unregister session information.	perf-measure	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>PERF MEASURE TRANSFORM</del>	3-Error	PERF MEASURE ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The PERF MEASURE ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the PERF MEASURE state between the active device and the standby device is not identical.	perf-measure	"show issu session <client_id> and " "show issu negotiated version <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PERF_MEASURE_TRANSFORM_FAIL	3-Error	PERF MEASURE ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The PERF MEASURE ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the PERF MEASURE state between the active device and the standby device is not identical.	perf-measure	"show issu session <client_id> and "show issu negotiated version <session_id>"
PERF_MEASURE_ISSU_COMPATIBLE	4-Warning	\perf-measure-issu-compat returned FALSE	The compatibility checking has failed	perf-measure	LOG_SIDSH_TIEH_ACTION
PERF_MEASURE_ISSU_COMPATIBLE	4-Warning	\perf-measure-issu-compat returned FALSE	The compatibility checking has failed	perf-measure	LOG_SIDSH_TIEH_ACTION
PERF_MON_ASYNC3INIT	3-Error	[chars]	Failure during perf-mon async initialization	media-mon	LOG_STD_ACTION
PERF_MON_ASYNC3INIT	3-Error	[chars]	Failure during perf-mon async initialization	media-mon	LOG_STD_ACTION
PERF_MON_ASYNC3LIST	3-Error	Failed to [chars] list [chars]	A list operation failed. This could be caused by memory corruption	media-mon	LOG_STD_ACTION
PERF_MON_ASYNC3LIST	3-Error	Failed to [chars] list [chars]	A list operation failed. This could be caused by memory corruption	media-mon	LOG_STD_ACTION
PERF_MON_ASYNC3MEM	3-Error	Memory [chars] failed - [chars]	Memory creation failed during the initialization	media-mon	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PERF_MON_ASYNC3MEM	3-Error	Memory [chars] failed - [chars]	Memory creation failed during the initialization	media-mon	LOG_STD_ACTION
PERF_MON_MENG3INI	3-Error	[chars]	Failure during perf-mon data plane initialization	media-mon	LOG_STD_ACTION
PERF_MON_MENG3INI	3-Error	[chars]	Failure during perf-mon data plane initialization	media-mon	LOG_STD_ACTION
PERF_MON_MENG3LIST	3-Error	Failed to [chars] list [chars]	A list operation failed. This could be caused by memory corruption	media-mon	LOG_STD_ACTION
PERF_MON_MENG3LIST	3-Error	Failed to [chars] list [chars]	A list operation failed. This could be caused by memory corruption	media-mon	LOG_STD_ACTION
PERF_MON_MENG3MEM	3-Error	Memory [chars] failed - [chars]	Memory operation failure	media-mon	LOG_STD_ACTION
PERF_MON_MENG3MEM	3-Error	Memory [chars] failed - [chars]	Memory operation failure	media-mon	LOG_STD_ACTION
PERF_MON_TCA3MRCLEAR	0-Emergency	TCA CLEAR. \nDetailed info: [dash][dash][dash][dash][dash]	A threshold crossing alarm is cleared. The alarm severity is EMERGENT.	media-mon	LOG_SID_NO_ACTION
PERF_MON_TCA3MRCLEAR	0-Emergency	TCA CLEAR. \nDetailed info: [dash][dash][dash][dash][dash]	A threshold crossing alarm is cleared. The alarm severity is EMERGENT.	media-mon	LOG_SID_NO_ACTION
PERF_MON_TCA3MRCSET	0-Emergency	TCA RAISE. \nDetailed info: [dash][dash][dash][dash][dash]	A threshold crossing alarm is raised. The alarm severity is EMERGENT. system is unusable.	media-mon	LOG_SID_NO_ACTION
PERF_MON_TCA3MRCSET	0-Emergency	TCA RAISE. \nDetailed info: [dash][dash][dash][dash][dash]	A threshold crossing alarm is raised. The alarm severity is EMERGENT. system is unusable.	media-mon	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
HRF_MON_REACHALRCLEAR	1-Alert	TCA CLEAR. \nDetailed info: [das][das][das][das][dash]	A threshold crossing alarm is cleared. The alarm severity is ALERT.	media-mon	LOG_SID_NO_ACTION
HRF_MON_REACHALRCLEAR	1-Alert	TCA CLEAR. \nDetailed info: [das][das][das][das][dash]	A threshold crossing alarm is cleared. The alarm severity is ALERT.	media-mon	LOG_SID_NO_ACTION
HRF_MON_REACHALRISET	1-Alert	TCA RAISE. \nDetailed info: [das][das][das][das][dash]	A threshold crossing alarm is raised. The alarm severity is ALERT.	media-mon	LOG_SID_NO_ACTION
HRF_MON_REACHALRISET	1-Alert	TCA RAISE. \nDetailed info: [das][das][das][das][dash]	A threshold crossing alarm is raised. The alarm severity is ALERT.	media-mon	LOG_SID_NO_ACTION
HRF_MON_REACHCRICLEAR	2-Critical	TCA CLEAR. \nDetailed info: [das][das][das][das][dash]	A threshold crossing alarm is cleared. The alarm severity is CRITICAL.	media-mon	LOG_SID_NO_ACTION
HRF_MON_REACHCRICLEAR	2-Critical	TCA CLEAR. \nDetailed info: [das][das][das][das][dash]	A threshold crossing alarm is cleared. The alarm severity is CRITICAL.	media-mon	LOG_SID_NO_ACTION
HRF_MON_REACHCRICRISET	2-Critical	TCA RAISE. \nDetailed info: [das][das][das][das][dash]	A threshold crossing alarm is raised. The alarm severity is CRITICAL.	media-mon	LOG_SID_NO_ACTION
HRF_MON_REACHCRICRISET	2-Critical	TCA RAISE. \nDetailed info: [das][das][das][das][dash]	A threshold crossing alarm is raised. The alarm severity is CRITICAL.	media-mon	LOG_SID_NO_ACTION
HRF_MON_REACHINFOCLEAR	2-Critical	TCA CLEAR. \nDetailed info: [das][das][das][das][dash]	A threshold crossing alarm is cleared. The alarm severity is INFO.	media-mon	LOG_SID_NO_ACTION
HRF_MON_REACHINFOCLEAR	2-Critical	TCA CLEAR. \nDetailed info: [das][das][das][das][dash]	A threshold crossing alarm is cleared. The alarm severity is INFO.	media-mon	LOG_SID_NO_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HRF_MON_REACHNOET	2-Critical	TCA RAISE. \nDetailed info: [das][das][das][das][dash]	A threshold crossing alarm is raised. The alarm severity is INFO.	media-mon	LOG_SID_NO_ACTION
HRF_MON_REACHNOET	2-Critical	TCA RAISE. \nDetailed info: [das][das][das][das][dash]	A threshold crossing alarm is raised. The alarm severity is INFO.	media-mon	LOG_SID_NO_ACTION
HRF_MON_REACHRCLEAR	3-Error	TCA CLEAR. \nDetailed info: [das][das][das][das][dash]	A threshold crossing alarm is cleared. The alarm severity is ERROR	media-mon	LOG_SID_NO_ACTION
HRF_MON_REACHRCLEAR	3-Error	TCA CLEAR. \nDetailed info: [das][das][das][das][dash]	A threshold crossing alarm is cleared. The alarm severity is ERROR	media-mon	LOG_SID_NO_ACTION
HRF_MON_REACHERRSET	3-Error	TCA RAISE. \nDetailed info: [das][das][das][das][dash]	A threshold crossing alarm is raised. The alarm severity is ERROR	media-mon	LOG_SID_NO_ACTION
HRF_MON_REACHERRSET	3-Error	TCA RAISE. \nDetailed info: [das][das][das][das][dash]	A threshold crossing alarm is raised. The alarm severity is ERROR	media-mon	LOG_SID_NO_ACTION
HRF_MON_CHUNKCREATE	3-Error	Failed to chunk create memory for [chars]	Unable to chunk create memory chunk	media-mon	LOG_STD_ACTION
HRF_MON_CHUNKCREATE	3-Error	Failed to chunk create memory for [chars]	Unable to chunk create memory chunk	media-mon	LOG_STD_ACTION
HRF_MON_CHUNKDESTROY	3-Error	Failed to chunk destroy memory for [chars]	Unable to chunk destroy memory chunk	media-mon	LOG_STD_ACTION
HRF_MON_CHUNKDESTROY	3-Error	Failed to chunk destroy memory for [chars]	Unable to chunk destroy memory chunk	media-mon	LOG_STD_ACTION
HRF_MON_CHUNKMALLOC	3-Error	Failed to malloc chunk memory for [chars]	Unable to malloc memory chunk malloc failed	media-mon	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HRF_MON3CHUNKMALLOC	3-Error	Failed to malloc chunk memory for [chars]	Unable to malloc memory chunk malloc failed	media-mon	LOG_STD_ACTION
HRF_MON3DEFRECCREATE	3-Error	Creation of default-record [chars] failed - reason [chars]	Failed to create system defined default flow-records	media-mon	LOG_STD_ACTION
HRF_MON3DEFRECCREATE	3-Error	Creation of default-record [chars] failed - reason [chars]	Failed to create system defined default flow-records	media-mon	LOG_STD_ACTION
PERF_MON-3-LIST	3-Error	Failed to [chars] list [chars]	A list operation failed. This could be caused by memory corruption	media-mon	LOG_STD_ACTION
PERF_MON-3-LIST	3-Error	Failed to [chars] list [chars]	A list operation failed. This could be caused by memory corruption	media-mon	LOG_STD_ACTION
PERF_MON-3-MEM	3-Error	Memory [chars] failed - [chars]	Memory creation failed during the initialization	media-mon	LOG_STD_ACTION
PERF_MON-3-MEM	3-Error	Memory [chars] failed - [chars]	Memory creation failed during the initialization	media-mon	LOG_STD_ACTION
PERF_MON-3-PARSER	3-Error	[chars]	Parser failure. This could due to invalid command or corrupted csb	media-mon	LOG_STD_ACTION
PERF_MON-3-PARSER	3-Error	[chars]	Parser failure. This could due to invalid command or corrupted csb	media-mon	LOG_STD_ACTION
HRF_MON3RECSETKEY	3-Error	Adding key fields for default-record [chars] failed - reason [chars]	Failed to add key fields for defined default flow-records	media-mon	LOG_STD_ACTION
HRF_MON3RECSETKEY	3-Error	Adding key fields for default-record [chars] failed - reason [chars]	Failed to add key fields for defined default flow-records	media-mon	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HRF_MON3RECSEINKEY</del>	3-Error	Adding non-key fields for [chars] default-record failed - reason [chars]	Failed to add non-key fields for defined default flow-records	media-mon	LOG_STD_ACTION
<del>HRF_MON3RECSEINKEY</del>	3-Error	Adding non-key fields for [chars] default-record failed - reason [chars]	Failed to add non-key fields for defined default flow-records	media-mon	LOG_STD_ACTION
<del>HRF_MON3RECSEIPROP</del>	3-Error	Setting property for [chars] default-record failed - reason [chars]	Failed to set properties for system defined default flow-records	media-mon	LOG_STD_ACTION
<del>HRF_MON3RECSEIPROP</del>	3-Error	Setting property for [chars] default-record failed - reason [chars]	Failed to set properties for system defined default flow-records	media-mon	LOG_STD_ACTION
<del>HRF_RAICHNRACHUNKNI</del>	3-Error	Chunk is not initialized - [chars]	Chunk memory is not created or failed to be created	media-mon	LOG_STD_ACTION
<del>HRF_RAICHNRACHUNKNI</del>	3-Error	Chunk is not initialized - [chars]	Chunk memory is not created or failed to be created	media-mon	LOG_STD_ACTION
<del>HRF_RAICHNRACHUNCAE</del>	3-Error	Failed to chunk create memory for [chars]	Unable to chunk create memory chunk	media-mon	LOG_STD_ACTION
<del>HRF_RAICHNRACHUNCAE</del>	3-Error	Failed to chunk create memory for [chars]	Unable to chunk create memory chunk	media-mon	LOG_STD_ACTION
<del>HRF_RAICHNRACHUNKSFO</del>	3-Error	Failed to chunk destroy memory for [chars]	Unable to chunk destroy memory chunk	media-mon	LOG_STD_ACTION
<del>HRF_RAICHNRACHUNKSFO</del>	3-Error	Failed to chunk destroy memory for [chars]	Unable to chunk destroy memory chunk	media-mon	LOG_STD_ACTION
<del>HRF_RAICHNRACHUNKMALLOC</del>	3-Error	Failed to malloc chunk memory for [chars]	Unable to malloc memory chunk malloc failed	media-mon	LOG_STD_ACTION
<del>HRF_RAICHNRACHUNKMALLOC</del>	3-Error	Failed to malloc chunk memory for [chars]	Unable to malloc memory chunk malloc failed	media-mon	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HF_FRAHCNRAICOMVALE	3-Error	Conversion failed - [chars]	Conversion from one format to another has failed	media-mon	LOG_STD_ACTION
HF_FRAHCNRAICOMVALE	3-Error	Conversion failed - [chars]	Conversion from one format to another has failed	media-mon	LOG_STD_ACTION
HF_FRAHCNRAIDIRCREAE	3-Error	Creation of default-record [chars] failed - reason [chars]	Failed to create system defined default flow-records	media-mon	LOG_STD_ACTION
HF_FRAHCNRAIDIRCREAE	3-Error	Creation of default-record [chars] failed - reason [chars]	Failed to create system defined default flow-records	media-mon	LOG_STD_ACTION
HF_FRAHCNRAIEXPATR	3-Error	Failed to set flow attribute for exporter - [chars]	An error occurred when setting flow attribute use to transform match and collect metrics to export message	media-mon	LOG_STD_ACTION
HF_FRAHCNRAIEXPATR	3-Error	Failed to set flow attribute for exporter - [chars]	An error occurred when setting flow attribute use to transform match and collect metrics to export message	media-mon	LOG_STD_ACTION
HF_FRAHCNRAIDFNCFY	3-Error	Failed to register PD flow definition [chars]	The flow def received from ME or PD is NULL	media-mon	LOG_STD_ACTION
HF_FRAHCNRAIDFNCFY	3-Error	Failed to register PD flow definition [chars]	The flow def received from ME or PD is NULL	media-mon	LOG_STD_ACTION
HF_FRAHCNRAIDFTEMP	3-Error	Invalid flow definition template - [chars]	The template was not initialized during system initialization	media-mon	LOG_STD_ACTION
HF_FRAHCNRAIDFTEMP	3-Error	Invalid flow definition template - [chars]	The template was not initialized during system initialization	media-mon	LOG_STD_ACTION
HF_FRAHCNRAIHELDNA	3-Error	Enable fnf field [chars] failed - [chars]	Failed to enable a field for use with a config	media-mon	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>MF_RAHCNRAHLDNA</del>	3-Error	Enable fnf field [chars] failed - [chars]	Failed to enable a field for use with a config	media-mon	LOG_STD_ACTION
<del>MF_RAHCNRAFLOWEXCD</del>	3-Error	The number of flows has exceeded 95[node]of the configured maximum flow. [chars]\n	This is warning message if the flow size exceeds the maximum value	media-mon	LOG_STD_ACTION
<del>MF_RAHCNRAFLOWEXCD</del>	3-Error	The number of flows has exceeded 95[node]of the configured maximum flow. [chars]\n	This is warning message if the flow size exceeds the maximum value	media-mon	LOG_STD_ACTION
<del>MF_RAHCNRAFLOWEXCD</del>	3-Error	The number of flows is below 85[node]of the configured maximum flow. [chars]\n	This is info message if the flow size falls below the maximum value	media-mon	LOG_STD_ACTION
<del>MF_RAHCNRAFLOWEXCD</del>	3-Error	The number of flows is below 85[node]of the configured maximum flow. [chars]\n	This is info message if the flow size falls below the maximum value	media-mon	LOG_STD_ACTION
<del>MF_RAHCNRAFPASNA</del>	3-Error	Enable flow monitor parser failed - [chars]	Failed to enable performance monitor typed monitor	media-mon	LOG_STD_ACTION
<del>MF_RAHCNRAFPASNA</del>	3-Error	Enable flow monitor parser failed - [chars]	Failed to enable performance monitor typed monitor	media-mon	LOG_STD_ACTION
<del>MF_RAHCNRAINVARG</del>	3-Error	The argument is not valid - [chars]	An internal error occurred. The argument for an internal API is not valid	media-mon	LOG_STD_ACTION
<del>MF_RAHCNRAINVARG</del>	3-Error	The argument is not valid - [chars]	An internal error occurred. The argument for an internal API is not valid	media-mon	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>HR_FRAHCNRAVCOMMONDR</del>	3-Error	The common monitor ptr is invalid	An internal error occurred. The common monitor ptr saved in the performance-monitor monitor is NULL	media-mon	LOG_STD_ACTION
<del>HR_FRAHCNRAVCOMMONDR</del>	3-Error	The common monitor ptr is invalid	An internal error occurred. The common monitor ptr saved in the performance-monitor monitor is NULL	media-mon	LOG_STD_ACTION
<del>HR_FRAHCNRAVMONCRNE</del>	3-Error	The monitor type [dec] is invalid	An internal error occurred. The monitor type is out of the range	media-mon	LOG_STD_ACTION
<del>HR_FRAHCNRAVMONCRNE</del>	3-Error	The monitor type [dec] is invalid	An internal error occurred. The monitor type is out of the range	media-mon	LOG_STD_ACTION
<del>HR_FRAHCNRAVPOCYMP</del>	3-Error	The retrieved policy map is invalide - [chars]	An internal error occurred. The policy map saved in csb is invalid	media-mon	LOG_STD_ACTION
<del>HR_FRAHCNRAVPOCYMP</del>	3-Error	The retrieved policy map is invalide - [chars]	An internal error occurred. The policy map saved in csb is invalid	media-mon	LOG_STD_ACTION
<del>HR_FRAHCNRAVREACT</del>	3-Error	react is not valid - [chars]	This is an internal error the saved react info is corrupted	media-mon	LOG_STD_ACTION
<del>HR_FRAHCNRAVREACT</del>	3-Error	react is not valid - [chars]	This is an internal error the saved react info is corrupted	media-mon	LOG_STD_ACTION
<del>HR_FRAHCNRAVRFCEI</del>	3-Error	A target object does not exist - [chars]	An internal error occurred. Try to access a null target obj	media-mon	LOG_STD_ACTION
<del>HR_FRAHCNRAVRFCEI</del>	3-Error	A target object does not exist - [chars]	An internal error occurred. Try to access a null target obj	media-mon	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>HF_IRAHCNRA3N CMD</del>	3-Error	Invalid cmd type [dec] to [chars]	This is an internal error the command type is invalid	media-mon	LOG_STD_ACTION
<del>HF_IRAHCNRA3N CMD</del>	3-Error	Invalid cmd type [dec] to [chars]	This is an internal error the command type is invalid	media-mon	LOG_STD_ACTION
<del>HF_IRAHCNRA3N CRT</del>	3-Error	Invalid react criteria [dec] to [chars]	This is an internal error the saved react criteria is corrupted	media-mon	LOG_STD_ACTION
<del>HF_IRAHCNRA3N CRT</del>	3-Error	Invalid react criteria [dec] to [chars]	This is an internal error the saved react criteria is corrupted	media-mon	LOG_STD_ACTION
<del>HF_IRAHCNRA3N MLDME</del>	3-Error	Enable fnf field [dec] failed - invalid field type	Failed to enable a field for use with a config	media-mon	LOG_STD_ACTION
<del>HF_IRAHCNRA3N MLDME</del>	3-Error	Enable fnf field [dec] failed - invalid field type	Failed to enable a field for use with a config	media-mon	LOG_STD_ACTION
<del>HF_IRAHCNRA3N MDE</del>	3-Error	Invalid performance-monitor configuration mode	This is an internal error the configuration sub mode is invalid	media-mon	LOG_STD_ACTION
<del>HF_IRAHCNRA3N MDE</del>	3-Error	Invalid performance-monitor configuration mode	This is an internal error the configuration sub mode is invalid	media-mon	LOG_STD_ACTION
<del>HF_IRAHCNRA3N MONCR</del>	3-Error	The flow monitor pointer is invalid	An internal error occurred. The performance-monitor monitor pointer saved in the common monitor is NULL	media-mon	LOG_STD_ACTION
<del>HF_IRAHCNRA3N MONCR</del>	3-Error	The flow monitor pointer is invalid	An internal error occurred. The performance-monitor monitor pointer saved in the common monitor is NULL	media-mon	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>HRFRACNRA</del> MEMLEAK	3-Error	Memory leak detected - [chars]	A memory leak is detected during media-mon memory handling	media-mon	LOG_STD_ACTION
<del>HRFRACNRA</del> MEMLEAK	3-Error	Memory leak detected - [chars]	A memory leak is detected during media-mon memory handling	media-mon	LOG_STD_ACTION
<del>HRFRACNRA</del> MMODDP	3-Error	A mmon_obj already exists for policy [chars] class [chars]\n	A mmon obj already exists in the MMON DB under the same policy and class for CLASS_ADD	media-mon	LOG_STD_ACTION
<del>HRFRACNRA</del> MMODDP	3-Error	A mmon_obj already exists for policy [chars] class [chars]\n	A mmon obj already exists in the MMON DB under the same policy and class for CLASS_ADD	media-mon	LOG_STD_ACTION
<del>HRFRACNRA</del> MMODNV	3-Error	A mmon_obj does not exist for policy [chars] class [chars]\n	Unable to find an existing mmon obj for event CLASS_REMOVE and CLASS_MODIFY	media-mon	LOG_STD_ACTION
<del>HRFRACNRA</del> MMODNV	3-Error	A mmon_obj does not exist for policy [chars] class [chars]\n	Unable to find an existing mmon obj for event CLASS_REMOVE and CLASS_MODIFY	media-mon	LOG_STD_ACTION
<del>HRFRACNRA</del> MONCREAE	3-Error	Failed to create Monitor at Metering layer. Error - [chars]	Failed to create monitor at Metering layer for this policy. The error code provides the reason for failure. No statistics will be collected.	media-mon	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>REF_RAI_CNRA_MNCRDIE</del>	3-Error	Failed to create Monitor at Metering layer. Error - [chars]	Failed to create monitor at Metering layer for this policy. The error code provides the reason for failure. No statistics will be collected.	media-mon	LOG_STD_ACTION
<del>REF_RAI_CNRA_MNCRDIE</del>	3-Error	Failed to delete Monitor at Metering layer. Error - [chars]	Failed to delete monitor at Metering layer for this policy. The error code provides the reason for failure.	media-mon	LOG_STD_ACTION
<del>REF_RAI_CNRA_MNCRDIE</del>	3-Error	Failed to delete Monitor at Metering layer. Error - [chars]	Failed to delete monitor at Metering layer for this policy. The error code provides the reason for failure.	media-mon	LOG_STD_ACTION
<del>REF_RAI_CNRA_MNCRSNC</del>	3-Error	Out of sync - [chars]	This is an internal error the reference count in flow monitor reached negative	media-mon	LOG_STD_ACTION
<del>REF_RAI_CNRA_MNCRSNC</del>	3-Error	Out of sync - [chars]	This is an internal error the reference count in flow monitor reached negative	media-mon	LOG_STD_ACTION
<del>REF_RAI_CNRA_MNCRMOB</del>	3-Error	Internal error target has no parent mmon object	None valid pointer to mmon obj found in tgt obj for CLASS_REMOVE	media-mon	LOG_STD_ACTION
<del>REF_RAI_CNRA_MNCRMOB</del>	3-Error	Internal error target has no parent mmon object	None valid pointer to mmon obj found in tgt obj for CLASS_REMOVE	media-mon	LOG_STD_ACTION
<del>REF_RAI_CNRA_MNLIHOW</del>	3-Error	A flow does not exist	An internal error occurred. Try to access a null flow	media-mon	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>HR_FRAHCNRA3NULLFLOW</del>	3-Error	A flow does not exist	An internal error occurred. Try to access a null flow	media-mon	LOG_STD_ACTION
<del>HR_FRAHCNRA3NULLHST</del>	3-Error	A history bucket does not exist	An internal error occurred. Try to access a null history	media-mon	LOG_STD_ACTION
<del>HR_FRAHCNRA3NULLHST</del>	3-Error	A history bucket does not exist	An internal error occurred. Try to access a null history	media-mon	LOG_STD_ACTION
<del>HR_FRAHCNRA3RCUMG</del>	3-Error	Failed to process received record - [chars]	Failure during the process of handling the received fnf record	media-mon	LOG_STD_ACTION
<del>HR_FRAHCNRA3RCUMG</del>	3-Error	Failed to process received record - [chars]	Failure during the process of handling the received fnf record	media-mon	LOG_STD_ACTION
<del>HR_FRAHCNRA3RCSEKEY</del>	3-Error	Adding key fields for default-record [chars] failed - reason [chars]	Failed to add key fields for defined default flow-records	media-mon	LOG_STD_ACTION
<del>HR_FRAHCNRA3RCSEKEY</del>	3-Error	Adding key fields for default-record [chars] failed - reason [chars]	Failed to add key fields for defined default flow-records	media-mon	LOG_STD_ACTION
<del>HR_FRAHCNRA3RCSENOKEY</del>	3-Error	Adding non-key fieds for [chars] default-record failed - reason [chars]	Failed to add non-key fields for defined default flow-records	media-mon	LOG_STD_ACTION
<del>HR_FRAHCNRA3RCSENOKEY</del>	3-Error	Adding non-key fieds for [chars] default-record failed - reason [chars]	Failed to add non-key fields for defined default flow-records	media-mon	LOG_STD_ACTION
<del>HR_FRAHCNRA3RCSEIRP</del>	3-Error	Setting property for [chars] default-record failed - reason [chars]	Failed to set properties for system defined default flow-records	media-mon	LOG_STD_ACTION
<del>HR_FRAHCNRA3RCSEIRP</del>	3-Error	Setting property for [chars] default-record failed - reason [chars]	Failed to set properties for system defined default flow-records	media-mon	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HRF_IRAHC_NRA3MODE</del>	3-Error	Failed to reset csb vars	Reset of the csb vars failed due to lack of memory	media-mon	LOG_STD_ACTION
<del>HRF_IRAHC_NRA3MODE</del>	3-Error	Failed to reset csb vars	Reset of the csb vars failed due to lack of memory	media-mon	LOG_STD_ACTION
<del>HRF_IRAHC_NRA3BINK</del>	3-Error	sib member [node]with [node]error [chars]	Failed to link two sibling members in the MMON PD	media-mon	LOG_STD_ACTION
<del>HRF_IRAHC_NRA3BINK</del>	3-Error	sib member [node]with [node]error [chars]	Failed to link two sibling members in the MMON PD	media-mon	LOG_STD_ACTION
<del>HRF_IRAHC_NRA3BUNK</del>	3-Error	sib member [node]from [node]error [chars]	Failed to unlink two sibling members in the MMON PD	media-mon	LOG_STD_ACTION
<del>HRF_IRAHC_NRA3BUNK</del>	3-Error	sib member [node]from [node]error [chars]	Failed to unlink two sibling members in the MMON PD	media-mon	LOG_STD_ACTION
<del>HRF_IRAHC_MER3NIAL</del>	3-Error	Metering engine initialization fail - [chars]\n	An internal error occurred. Unable to initialize the performance monitor metering engine	media-mon	LOG_STD_ACTION
<del>HRF_IRAHC_MER3NIAL</del>	3-Error	Metering engine initialization fail - [chars]\n	An internal error occurred. Unable to initialize the performance monitor metering engine	media-mon	LOG_STD_ACTION
<del>HRF_IRAHC_MER3OUND</del>	3-Error	Failed to unbind monitor from target. Error - [chars]	Failed to unbind monitor at Metering layer for this target. The error code provides the reason for failure.	media-mon	LOG_STD_ACTION
<del>HRF_IRAHC_MER3OUND</del>	3-Error	Failed to unbind monitor from target. Error - [chars]	Failed to unbind monitor at Metering layer for this target. The error code provides the reason for failure.	media-mon	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HR_FAULT_REACHEMRCLEAR	0-Emergency	TCA CLEAR. \nDetailed info: [das][das][das][das][dash]	A threshold crossing alarm is cleared. The alarm severity is EMERGENT.	media-mon	LOG_SID_NO_ACTION
HR_FAULT_REACHEMRCLEAR	0-Emergency	TCA CLEAR. \nDetailed info: [das][das][das][das][dash]	A threshold crossing alarm is cleared. The alarm severity is EMERGENT.	media-mon	LOG_SID_NO_ACTION
HR_FAULT_REACHEMRCSET	0-Emergency	TCA RAISE. \nDetailed info: [das][das][das][das][dash]	A threshold crossing alarm is raised. The alarm severity is EMERGENT. system is unusable.	media-mon	LOG_SID_NO_ACTION
HR_FAULT_REACHEMRCSET	0-Emergency	TCA RAISE. \nDetailed info: [das][das][das][das][dash]	A threshold crossing alarm is raised. The alarm severity is EMERGENT. system is unusable.	media-mon	LOG_SID_NO_ACTION
HR_FAULT_REACHAIRCLEAR	1-Alert	TCA CLEAR. \nDetailed info: [das][das][das][das][dash]	A threshold crossing alarm is cleared. The alarm severity is ALERT.	media-mon	LOG_SID_NO_ACTION
HR_FAULT_REACHAIRCLEAR	1-Alert	TCA CLEAR. \nDetailed info: [das][das][das][das][dash]	A threshold crossing alarm is cleared. The alarm severity is ALERT.	media-mon	LOG_SID_NO_ACTION
HR_FAULT_REACHAIRCSET	1-Alert	TCA RAISE. \nDetailed info: [das][das][das][das][dash]	A threshold crossing alarm is raised. The alarm severity is ALERT.	media-mon	LOG_SID_NO_ACTION
HR_FAULT_REACHAIRCSET	1-Alert	TCA RAISE. \nDetailed info: [das][das][das][das][dash]	A threshold crossing alarm is raised. The alarm severity is ALERT.	media-mon	LOG_SID_NO_ACTION
HR_FAULT_REACHCRICLEAR	2-Critical	TCA CLEAR. \nDetailed info: [das][das][das][das][dash]	A threshold crossing alarm is cleared. The alarm severity is CRITICAL.	media-mon	LOG_SID_NO_ACTION
HR_FAULT_REACHCRICLEAR	2-Critical	TCA CLEAR. \nDetailed info: [das][das][das][das][dash]	A threshold crossing alarm is cleared. The alarm severity is CRITICAL.	media-mon	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HF_TRAHCREACLRSET	2-Critical	TCA RAISE. \nDetailed info: [das][das][das][das][dash]	A threshold crossing alarm is raised. The alarm severity is CRITICAL.	media-mon	LOG_SID_NO_ACTION
HF_TRAHCREACLRSET	2-Critical	TCA RAISE. \nDetailed info: [das][das][das][das][dash]	A threshold crossing alarm is raised. The alarm severity is CRITICAL.	media-mon	LOG_SID_NO_ACTION
HF_TRAHCREACNCLR	2-Critical	TCA CLEAR. \nDetailed info: [das][das][das][das][dash]	A threshold crossing alarm is cleared. The alarm severity is INFO.	media-mon	LOG_SID_NO_ACTION
HF_TRAHCREACNCLR	2-Critical	TCA CLEAR. \nDetailed info: [das][das][das][das][dash]	A threshold crossing alarm is cleared. The alarm severity is INFO.	media-mon	LOG_SID_NO_ACTION
HF_TRAHCREACNCRSET	2-Critical	TCA RAISE. \nDetailed info: [das][das][das][das][dash]	A threshold crossing alarm is raised. The alarm severity is INFO.	media-mon	LOG_SID_NO_ACTION
HF_TRAHCREACNCRSET	2-Critical	TCA RAISE. \nDetailed info: [das][das][das][das][dash]	A threshold crossing alarm is raised. The alarm severity is INFO.	media-mon	LOG_SID_NO_ACTION
HF_TRAHCREACBRCLR	3-Error	TCA CLEAR. \nDetailed info: [das][das][das][das][dash]	A threshold crossing alarm is cleared. The alarm severity is ERROR	media-mon	LOG_SID_NO_ACTION
HF_TRAHCREACBRCLR	3-Error	TCA CLEAR. \nDetailed info: [das][das][das][das][dash]	A threshold crossing alarm is cleared. The alarm severity is ERROR	media-mon	LOG_SID_NO_ACTION
HF_TRAHCREACBRSET	3-Error	TCA RAISE. \nDetailed info: [das][das][das][das][dash]	A threshold crossing alarm is raised. The alarm severity is ERROR	media-mon	LOG_SID_NO_ACTION
HF_TRAHCREACBRSET	3-Error	TCA RAISE. \nDetailed info: [das][das][das][das][dash]	A threshold crossing alarm is raised. The alarm severity is ERROR	media-mon	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
FEIRA_MSP_CEF3NOFB	3-Error	FIB entry is null	An unexpected condition has occurred which is due to the absence of\n a FIB entry structure.	petra-fwdmgr	"show ip cef"
FEIRA_MSP_CEF3NOIBD	3-Error	FIB interface is null	An unexpected condition has occurred which is due to the absence of\n a FIB interface structure.	petra-fwdmgr	"show ip cef"
FEIRA_MSP_CEF3NOISUNT	3-Error	FIB push counter is null	An unexpected condition has occurred which is due to the absence of\n a FIB push counter structure.	petra-fwdmgr	"show ip cef"
FEIRA_MSP_CEF3NOIBSB	3-Error	FIB SB entry is null	An unexpected condition has occurred which is due to the absence of\n a FIB SB entry structure.	petra-fwdmgr	"show ip cef"
FEIRA_MSP_CEF3NOIBTABE	3-Error	FIB table is null	An unexpected condition has occurred which is due to the absence of\n a FIB table structure.	petra-fwdmgr	"show ip cef"
FEIRA_MSP_CEF4UDSISR	4-Warning	Update CEF statistics error	An unexpected condition has occurred when updating cef statistics	petra-fwdmgr	LOG_STD_ACTION
PF-4-MEM_UNAVAIL	4-Warning	Memory was not available to perform the protocol filtering action	Protocol filtering is unable to operate because of a lack of memory	-	"Reduce other system activity to ease memory demands. If conditions\n warrant upgrade to a larger memory configuration."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PF-4-PROC_START_ERR	4-Warning	Protocol filtering unable to start	The protocol filtering process was unable to be created for unknown reasons.	-	"Start protocol filtering again in case the condition was transient. If this still fails reload the device"
PF-4-UNKN_ERR	4-Warning	An unknown operational error occurred	Protocol filtering is unable to operate because an internal operation generated an error which was not expected to ever happen	-	"Because of the unexpected nature of the problem the only recommended action is to reload the device"
PF-5-SPANDSTOFF	5-Notice	Protocol filtering disabled on interface [chars] because it is a span destination	Protocol filtering does not operate on span destination. The protocol filtering configuration stays with the span destination port but it has no effect and does not appear when you show all non-default protocol filters.	-	-
PF-5-TRUNKPFOFF	5-Notice	Protocol filtering disabled on interface [chars] because it is a trunk	Protocol filtering does not operate on trunks. The protocol filtering configuration stays with the trunk port but it has no effect and does not appear when you show all non-default protocol filters.	-	-
HNI-1-CONFG_SYNC_FAIL	1-Alert	Sync'ing the [chars] configuration to the standby Router failed.	CONFG_SYNC_FAIL	cat6000-ha	CONFG_SYNC_FAIL_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PFINIT-1-CONFSYNC_FAIL</del>	1-Alert	Sync'ing the [chars] configuration to the standby Router FAILED the file may be already locked by a command like: show config. Will attempt to sync [dec] more time[chars]	<del>CONFSYNC_FAIL</del>	cat6000-ha	<del>CONFSYNC_FAIL</del>
PFINIT-2-EOBC	2-Critical	[chars]	The PF subsystem could not send IPC bootstrap messages to RP.	cat6000-ha	LOG_SIDSHTTECH_ACTION
PFINIT-2-IPCREINIT	2-Critical	Unable to reinitialize IPC	The PF subsystem could not reinitialize IPC.	cat6000-ha	LOG_SIDSHTTECH_ACTION
PFINIT-2-IPCSEAT	2-Critical	Unable to add/remove IPC seats for [chars]	The PF subsystem could not add/remove IPC seats.	cat6000-ha	LOG_SIDSHTTECH_ACTION
PFINIT-2-NOMEM	2-Critical	No memory available for [chars]	The PF subsystem could not obtain the memory it needed.	cat6000-ha	LOG_SIDSHTTECH_ACTION
PFINIT-5-CONFIG_SYNC	5-Notice	Sync'ing the [chars] configuration to the standby Router.	The configuration has been successfully synced to the standby Router	cat6000-ha	"This is an informational message. No action is required."
<del>PFINIT-5-CONFIG_SYNC_UNSUPPORTED</del>	5-Notice	Sync'ing the [chars] configuration to the standby Router is not supported.	<del>CONFIG_SYNC_UNSUPPORTED</del>	cat6000-ha	<del>CONFSYNC_FAIL</del>
PFINIT-6-PROC_MAX	6-Information	Process-max-value changed from [dec] to [dec] millisecs	Informational messages regarding change in Process-max-value	-	-
PFR_BR-1-ALERT	1-Alert	[chars]	-	pfr	""
PFR_BR-1-ALERT	1-Alert	[chars]	-	pfr	""
<del>HRBR3-INTERNAL_ERROR</del>	3-Error	[chars]:[chars]	-	pfr	""



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HR_BR3</del> INTERNAL_ERROR	3-Error	[chars]:[chars]	-	pfr	""
PFR_BR-4-WARNING	4-Warning	[chars]	-	pfr	""
PFR_BR-4-WARNING	4-Warning	[chars]	-	pfr	""
<del>HR_BR5</del> STATUS_CHANGE	5-Notice	[chars]	-	pfr	""
<del>HR_BR5</del> STATUS_CHANGE	5-Notice	[chars]	-	pfr	""
<del>HR_BR5</del> MC_STATUS_CHANGE	5-Notice	MC [chars] is [chars]	-	pfr	""
<del>HR_BR5</del> MC_STATUS_CHANGE	5-Notice	MC [chars] is [chars]	-	pfr	""
PFR_MC-1-ALERT	1-Alert	[chars]	-	pfr	""
PFR_MC-1-ALERT	1-Alert	[chars]	-	pfr	""
<del>HR_MC3</del> INTERNAL_ERROR	3-Error	[chars]:[chars]	-	pfr	""
<del>HR_MC3</del> INTERNAL_ERROR	3-Error	[chars]:[chars]	-	pfr	""
<del>HR_MC3</del> BRSONN_MATCH	3-Error	[chars]	-	pfr	""
<del>HR_MC3</del> BRSONN_MATCH	3-Error	[chars]	-	pfr	""
PFR_MC-3-WARNING	3-Error	[chars]	-	pfr	""
PFR_MC-3-WARNING	3-Error	[chars]	-	pfr	""
<del>HR_MC5</del> STATUS_CHANGE	5-Notice	BR [chars] [chars]	-	pfr	""
<del>HR_MC5</del> STATUS_CHANGE	5-Notice	BR [chars] [chars]	-	pfr	""
<del>HR_MC5</del> COST_MN_MAION	5-Notice	[chars]	-	pfr	""
<del>HR_MC5</del> COST_MN_MAION	5-Notice	[chars]	-	pfr	""
<del>HR_MC5</del> EXOR_STATUS_CHANGE	5-Notice	[chars]	-	pfr	""
<del>HR_MC5</del> EXOR_STATUS_CHANGE	5-Notice	[chars]	-	pfr	""
<del>HR_MC5</del> BR_STATUS_CHANGE	5-Notice	BR [chars] [chars] IF [chars] [chars]	-	pfr	""
<del>HR_MC5</del> BR_STATUS_CHANGE	5-Notice	BR [chars] [chars] IF [chars] [chars]	-	pfr	""
<del>HR_MC5</del> MC_STATUS_CHANGE	5-Notice	MC is [chars]	-	pfr	""
<del>HR_MC5</del> MC_STATUS_CHANGE	5-Notice	MC is [chars]	-	pfr	""
PFR_MC-5-OOP_LINK	5-Notice	[chars]	-	pfr	""
PFR_MC-5-OOP_LINK	5-Notice	[chars]	-	pfr	""

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HRMCSRSIUSCHANCE</del>	5-Notice	[chars]	-	pfr	""
<del>HRMCSRSIUSCHANCE</del>	5-Notice	[chars]	-	pfr	""
<del>HRMCSROUTE_EVENT</del>	5-Notice	[chars]	-	pfr	""
<del>HRMCSROUTE_EVENT</del>	5-Notice	[chars]	-	pfr	""
<del>HRMCSICPTAKERSIUS</del>	5-Notice	[chars]	-	pfr	""
<del>HRMCSICPTAKERSIUS</del>	5-Notice	[chars]	-	pfr	""
<del>HRMCSOCPACIMEMDE</del>	6-Information	[chars]	-	pfr	""
<del>HRMCSOCPACIMEMDE</del>	6-Information	[chars]	-	pfr	""
<del>HRMCSOCPASSMEMDE</del>	6-Information	[chars]	-	pfr	""
<del>HRMCSOCPASSMEMDE</del>	6-Information	[chars]	-	pfr	""
<del>HRMCSROUTEEMNTNO</del>	6-Information	[chars]	-	pfr	""
<del>HRMCSROUTEEMNTNO</del>	6-Information	[chars]	-	pfr	""
PG_TCP-3-MSG_ERR	3-Error	[chars]	Error Messages	pagent	"try debug command"
PG_TCP-6-MSG_INF	6-Information	[chars]	Program information	-	-
PG_TCP-7-MSG_DBG	7-Debug	[chars]	Debug Messages	-	-
<del>RENMC3AALOCERR</del>	2-Critical	Unable to allocate IPC message	-	-	-
<del>RENMC3RAERGER</del>	2-Critical	Unable to create Pagent IPC Registry	-	-	-
<del>RENMC3WDFALOCERR</del>	2-Critical	Unable to allocate hwidb_pg structure	-	-	-
<del>RENMC3BBSCHAFERR</del>	2-Critical	Unable to create SVIP IDB list	-	-	-
<del>RENMC3NOHANDIRERR</del>	2-Critical	No handler found for IPC code [node]	-	-	-
<del>RENMC3AKALOCERR</del>	2-Critical	Unable to allocate download packet structure	-	-	-
<del>RENMC3AKDVAALOCERR</del>	2-Critical	Unable to allocate download packet data	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RENMSGFASTCOUNTER	2-Critical	Unable to stop/start Pageant fastcount	-	-	-
RENMSGFILTERALLOCERR	2-Critical	Unable to allocate pg_filter_list structure	-	-	-
RENMSGIPREPLYALLOCERR	2-Critical	Unable to allocate IPC message for end of replay	-	-	-
RENMSGIPREPLYALLOCERR	2-Critical	Unable to allocate IPC message for reply	-	-	-
RENMSGIPCPORTERR	2-Critical	Unable to create Pageant IPC port	-	-	-
RENMSGPORTLOCERR	2-Critical	Unable to locate [chars] port during registration	-	-	-
RENMSGPORTOPENERR	2-Critical	Unable to open port: [chars]	-	-	-
RENMSGPORTSENDER	2-Critical	Unable to send message	-	-	-
RENMSGSELECTALLOC	2-Critical	Allocate download selection [node]	-	-	-
RENMSGSELECTALLOCERR	2-Critical	Unable to allocate select context structure	-	-	-
RENMSGSELECTDATAALLOCERR	2-Critical	Unable to allocate download selection data	-	-	-
RENMSGSELECTPACKALLOCERR	2-Critical	Unable to allocate download selection packet structure	-	-	-
RENMSGSELECTRCVERR	2-Critical	Received unexpected selection packet	-	-	-
RENMSGSEQALLOCERR	2-Critical	Unable to allocate sequence storage	-	-	-
RENMSGSEQUENCELIST	2-Critical	[chars]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PGM3EXP_TSI_ERR</del>	2-Critical	Unable to allocate VIP transmit pak	-	-	-
PGM3EXP_TSI_SQN_ERR	3-Error	Expiring TSI [chars] has retransmit state	An expiring PGM TSI has unexpired retransmit state. This can only occur due to an internal error or due to unfreeable memory.	ipmulticast	LOG_SID_REDUCE_ACTION LOG_SID_RECUR_ACTION
PGM3EXP_TSI_SQN_ERR	3-Error	Expiring TSI [chars] has retransmit state	An expiring PGM TSI has unexpired retransmit state. This can only occur due to an internal error or due to unfreeable memory.	ipmulticast	LOG_SID_REDUCE_ACTION LOG_SID_RECUR_ACTION
PGM3PAK_ALLOC_ERR	3-Error	Failed to allocate buffer for [chars]	-	-	LOG_SID_REDUCE_ACTION
PGM3PAK_ALLOC_ERR	3-Error	Failed to allocate buffer for [chars]	-	-	LOG_SID_REDUCE_ACTION
<del>PGM3RIX_SIAE_ALLOC_ERR</del>	3-Error	Failed to allocate [chars] state	Resources memory for retransmit state are exhausted. Manually clear all retransmit state	-	-
<del>PGM3RIX_SIAE_ALLOC_ERR</del>	3-Error	Failed to allocate [chars] state	Resources memory for retransmit state are exhausted. Manually clear all retransmit state	-	-
<del>PGM3RIX_SIAE_FREE_ERR</del>	3-Error	Failed to free [chars] state	Resources memory for retransmit state are not serviceable.	ipmulticast	-
<del>PGM3RIX_SIAE_FREE_ERR</del>	3-Error	Failed to free [chars] state	Resources memory for retransmit state are not serviceable.	ipmulticast	-
PGM-6-ADDR_ERR	6-Information	Invalid [chars] address [node]in [chars]	Received the packet with invalid address.	-	LOG_SID_NO_ACTION

<del>Facility</del> Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PGM-6-ADDR_ERR	6-Information	Invalid [chars] address [node]in [chars]	Received the packet with invalid address.	-	LOG_SID_NO_ACTION
PGM-6PAK_IIF_FIXUP	6-Information	Pak for [node]received on [node]fixed input interface	A PGM packet was recieved on an interface other than the one it was\n\ addressed to.	-	LOG_SID_NO_ACTION
PGM-6PAK_IIF_FIXUP	6-Information	Pak for [node]received on [node]fixed input interface	A PGM packet was recieved on an interface other than the one it was\n\ addressed to.	-	LOG_SID_NO_ACTION
<del>PGM-6PAK_MALFORMED_ERR</del>	6-Information	Malformed packet: [chars]	A PGM packet did not pass the internal sanity check.	-	LOG_SID_NO_ACTION
<del>PGM-6PAK_MALFORMED_ERR</del>	6-Information	Malformed packet: [chars]	A PGM packet did not pass the internal sanity check.	-	LOG_SID_NO_ACTION
PGM-6-QUEUE_FULL	6-Information	Serviced full queue of PGM packets.	The PGM process is busy either because of excessive retransmit\n\ state or because of excessive traffic.	-	LOG_SID_REDUCE_ACTION
PGM-6-QUEUE_FULL	6-Information	Serviced full queue of PGM packets.	The PGM process is busy either because of excessive retransmit\n\ state or because of excessive traffic.	-	LOG_SID_REDUCE_ACTION
<del>PGM-6TSI_GROUP_CHANGE</del>	6-Information	TSI group changed from [node]to %i	A PGM SPM advertising a new group for the TSI was processed.	-	LOG_SID_NO_ACTION
<del>PGM-6TSI_GROUP_CHANGE</del>	6-Information	TSI group changed from [node]to %i	A PGM SPM advertising a new group for the TSI was processed.	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PGM6ISSOURCECHANGE</del>	6-Information	TSI source changed from [node]to %i	A PGM SPM advertising a new source for the TSI was processed.	-	LOG_SID_NO_ACTION
<del>PGM6ISSOURCECHANGE</del>	6-Information	TSI source changed from [node]to %i	A PGM SPM advertising a new source for the TSI was processed.	-	LOG_SID_NO_ACTION
<del>PGM2FCM2G2ALLOCERR</del>	2-Critical	Unable to allocate message packet to SECONDARY [node]	-	-	-
<del>PGM2FCM2G2HANDLER</del>	2-Critical	Error handling IPC message from SECONDARY processor.	-	-	-
<del>PGM2FCM2G2SECONDARY</del>	2-Critical	Unable to open IPC port to SECONDARY slot [node]: [chars].	-	-	-
<del>PGM2FCM2G2IMDBG</del>	2-Critical	[chars]	-	-	-
<del>PGM2PKTS2K2SAILOCERR</del>	2-Critical	PKTS could not allocate message packet to SECONDARY [node]	-	-	-
<del>PGM2PKTS2K2CONF2R2V2AICERR</del>	2-Critical	PKTS could not allocate count reply message.	-	-	-
<del>PGM2R2V2M2R2V2AICERR</del>	2-Critical	Unable to create RVT-PRIMARY port.	-	-	-
HY4BADIRANSCEIVER	4-Warning	An inappropriate transceiver has been inserted in interface [chars].	An inappropriate transceiver is inserted at the interface specified in the error message. This transceiver should not be used in this system.	firmware	"Remove the specified transceiver. If this "transceiver was purchased from Cisco please contact " "Cisco TAC to get the transceiver replaced."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HY4CHECK_SUM_FAILED	4-Warning	SFP EEPROM data check sum failed for SFP interface [chars]	The SFP was identified as a Cisco SFP but the system was unable to read vendor-data information to verify its correctness.	firmware	"Remove and reinsert the SFP. If it fails " "again in the same way the SFP may be defective."
HY4EXCESSIVE_ERRORS	4-Warning	Excessive FCS data or idle word errors found on interface [chars]	The system has detected excessive FCS data word or idle word errors on the specified interface.	firmware	"Issue the <CmdBold>show interface<noCmdBold> " "command on the specified interface and check for CRC and " "other input errors. If errors are excessive issue the " "<CmdBold>shut<noCmdBold> command followed by the " "<CmdBold>no shut<noCmdBold> command to reset the interface."
PHY4MODULE_DUP	4-Warning	SFPs in [chars] and in [chars] have duplicate vendor-id and serial numbers	The SFP was identified as a Cisco SFP but its vendor ID and serial number match that of another SFP on the system.	firmware	LOG_STD_ACTION
HY4SFP_NOT_SUPPORTED	4-Warning	The SFP in [chars] is not supported	This SFP type is not supported on this switch.	firmware	LOG_STD_ACTION
HY4SFPPLUS_NOT_SUPPORTED	4-Warning	The SFP PLUS in [chars] is not supported	This SFP PLUS type is not supported on this switch.	firmware	LOG_STD_ACTION
HY4UNSUPPORTED_CARRIER	4-Warning	Unsupported SFP carrier module found in [chars]	The SFP carrier module was identified as an unsupported non-Cisco SFP carrier module.	firmware	"Remove the unsupported SFP and procure a " "supported module"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HM_NI3FIRERRANSCEMR	4-Warning	Unsupported transceiver found in [chars]	The module was identified as an unsupported non-Cisco transceiver.	firmware	LOG_STD_ACTION
HHSNIFDOWN3MHS3IE	3-Error	ERRMSG_NOFLAGS	-	-	-
HHSNIFDOWN3MHS3IE	3-Error	ERRMSG_NOFLAGS	-	-	-
PIM_PROT3IDB_CREATE	3-Error	Interface Manager error - [chars] in [chars] : [chars]	Internal error	ipmulticast	LOG_SID_RECUR_ACTION
PIM_PROT3IDB_CREATE	3-Error	Interface Manager error - [chars] in [chars] : [chars]	Internal error	ipmulticast	LOG_SID_RECUR_ACTION
HM_PROT3INTERNAL_ERR	3-Error	[chars]	Internal error	ipmulticast	LOG_SID_RECUR_ACTION
HM_PROT3INTERNAL_ERR	3-Error	[chars]	Internal error	ipmulticast	LOG_SID_RECUR_ACTION
PIM_PROT3LIST_ERR	3-Error	List error in [chars] : [chars]	Internal error	ipmulticast	LOG_SID_RECUR_ACTION
PIM_PROT3LIST_ERR	3-Error	List error in [chars] : [chars]	Internal error	ipmulticast	LOG_SID_RECUR_ACTION
HM_PROT3MSG_SEND_ERR	3-Error	[chars]	An internal error occurred while trying to send a message. Events scheduled to happen on reception of the message like deletion of the pim tunnel idb may not take place.	ipmulticast	LOG_SID_RECUR_ACTION
HM_PROT3MSG_SEND_ERR	3-Error	[chars]	An internal error occurred while trying to send a message. Events scheduled to happen on reception of the message like deletion of the pim tunnel idb may not take place.	ipmulticast	LOG_SID_RECUR_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PIM_PROT-3-NULL_UNIT	3-Error	NULL input pointer parameter for getting register tunnel unit	A NULL input parameter was specified in a function call to obtain the register tunnel IDB unit number associated with a rendezvous point IP address. The register tunnel for this rendezvous point can not be allocated.	ipmulticast	LOG_SID_RECUR_ACTION
PIM_PROT-3-NULL_UNIT	3-Error	NULL input pointer parameter for getting register tunnel unit	A NULL input parameter was specified in a function call to obtain the register tunnel IDB unit number associated with a rendezvous point IP address. The register tunnel for this rendezvous point can not be allocated.	ipmulticast	LOG_SID_RECUR_ACTION
PIM_PROT-3-PAK_ERR	3-Error	An internal error occured while processing a packet queue	Managed queue event received without a packet. Internal Error	ipmulticast	LOG_SID_RECUR_ACTION
PIM_PROT-3-PAK_ERR	3-Error	An internal error occured while processing a packet queue	Managed queue event received without a packet. Internal Error	ipmulticast	LOG_SID_RECUR_ACTION
HM_PROT-3-PROIOCL_ERR	3-Error	[chars] - [chars] : [chars]	Internal error	ipmulticast	LOG_SID_RECUR_ACTION
HM_PROT-3-PROIOCL_ERR	3-Error	[chars] - [chars] : [chars]	Internal error	ipmulticast	LOG_SID_RECUR_ACTION
PIM_PROT-3-RP_INIT	3-Error	[chars] in [chars] : [chars]	Internal error	ipmulticast	LOG_SID_RECUR_ACTION
PIM_PROT-3-RP_INIT	3-Error	[chars] in [chars] : [chars]	Internal error	ipmulticast	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HMPROESHUTDOWN_ERR	3-Error	Error in [chars] : [chars]	Internal error	ipmulticast	LOG_SID_RECUR_ACTION
HMPROESHUTDOWN_ERR	3-Error	Error in [chars] : [chars]	Internal error	ipmulticast	LOG_SID_RECUR_ACTION
HMPROESRCUPDATE_ERR	3-Error	Error in [chars] : [chars]	Internal error	ipmulticast	LOG_SID_RECUR_ACTION
HMPROESRCUPDATE_ERR	3-Error	Error in [chars] : [chars]	Internal error	ipmulticast	LOG_SID_RECUR_ACTION
PIM_PROT3-TABLE_ERR	3-Error	[chars]	Errors related to PIM table creation and management	ipmulticast	LOG_SID_RECUR_ACTION
PIM_PROT3-TABLE_ERR	3-Error	[chars]	Errors related to PIM table creation and management	ipmulticast	LOG_SID_RECUR_ACTION
PIM_PROT3-WAVL_INIT	3-Error	[chars]	Error initializing the ole WAVL tree	ipmulticast	LOG_SID_RECUR_ACTION
PIM_PROT3-WAVL_INIT	3-Error	[chars]	Error initializing the ole WAVL tree	ipmulticast	LOG_SID_RECUR_ACTION
HMPROF4MRCUIELIMIT	4-Warning	Current count of [node]exceeds multicast route-limit of [dec]	The number of multicast routes equals the configured maximum allowed.\n\n New routes cannot be added unless the configuration is changed.	-	"If multicast traffic is of any priority among the traffic carried\n\n by this router then use the 'ipv6 multicast route-limit' command to\n\n increase the number of multicast routes.\n\n Otherwise no action is required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IMRCMROUTEHMIT</del>	4-Warning	Current count of [node]exceeds multicast route-limit of [dec]	The number of multicast routes equals the configured maximum allowed.\n\n New routes cannot be added unless the configuration is changed.	-	"If multicast traffic is of any priority among the traffic carried\n\n by this router then use the 'ipv6 multicast route-limit' command to\n\n increase the number of multicast routes.\n\n Otherwise no action is required."
<del>IMRCMROUTEHMIT</del>	4-Warning	Attempt to exceed multicast route-limit of [dec]	The number of multicast routes equals the configured maximum allowed.\n\n New routes cannot be added unless the configuration is changed.	-	"If multicast traffic is of any priority among the traffic carried\n\n by this router then use the 'ipv6 multicast route-limit' command to\n\n increase the number of multicast routes.\n\n Otherwise no action is required."
<del>IMRCMROUTEHMIT</del>	4-Warning	Attempt to exceed multicast route-limit of [dec]	The number of multicast routes equals the configured maximum allowed.\n\n New routes cannot be added unless the configuration is changed.	-	"If multicast traffic is of any priority among the traffic carried\n\n by this router then use the 'ipv6 multicast route-limit' command to\n\n increase the number of multicast routes.\n\n Otherwise no action is required."
<del>IMRCMROUTEHWARNG</del>	4-Warning	multicast route-limit warning curr [node]threshold %u	-	-	-
<del>IMRCMROUTEHWARNG</del>	4-Warning	multicast route-limit warning curr [node]threshold %u	-	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>IMPROTOCL</del> WRNG	4-Warning	[chars] - [chars] [chars] : [chars]	Internal protocol inconsistency warning	ipmulticast	LOG_SID_NO_ACTION
<del>IMPROTOCL</del> WRNG	4-Warning	[chars] - [chars] [chars] : [chars]	Internal protocol inconsistency warning	ipmulticast	LOG_SID_NO_ACTION
<del>IMPROTOCL</del> WRNG	4-Warning	Resumed the process/loop but found nothing to be done.	A loop in PIM code was temporarily suspended to avoid hogging the CPU. When it was time to resume the loop the system found nothing to do so. Possible reasons for this are that a VRF was deleted or an interface was deleted while the loop was suspended. This message is for informational purposes only	ipmulticast	LOG_SID_NO_ACTION
<del>IMPROTOCL</del> WRNG	4-Warning	Resumed the process/loop but found nothing to be done.	A loop in PIM code was temporarily suspended to avoid hogging the CPU. When it was time to resume the loop the system found nothing to do so. Possible reasons for this are that a VRF was deleted or an interface was deleted while the loop was suspended. This message is for informational purposes only	ipmulticast	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IPMS_PDRS_WARNING</del>	4-Warning	Failed to resume suspended PIM context.	A loop in PIM code was temporarily suspended to avoid hogging the CPU. When it was time to resume the loop the system was unable to do so. Possible reasons for this are that a VRF was deleted or an interface was deleted while the loop was suspended.	ipmulticast	LOG_STD_NO_ACTION
<del>IPMS_PDRS_WARNING</del>	4-Warning	Failed to resume suspended PIM context.	A loop in PIM code was temporarily suspended to avoid hogging the CPU. When it was time to resume the loop the system was unable to do so. Possible reasons for this are that a VRF was deleted or an interface was deleted while the loop was suspended.	ipmulticast	LOG_STD_NO_ACTION
IPM_PROTO6DB_ENABLE	6-Information	Interface [chars] does not support multicast not enabled	PIM not enabled on an interface that does not support mcast	ipmulticast	LOG_STD_NO_ACTION
IPM_PROTO6DB_ENABLE	6-Information	Interface [chars] does not support multicast not enabled	PIM not enabled on an interface that does not support mcast	ipmulticast	LOG_STD_NO_ACTION
IPM_TUNNELGROUP_ENABLE	3-Error	Tunnel Groups: [chars]: [chars]	The tunnel group component encountered an internal software error	ip-tunnels	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<b>IMRG_TUNDBROU_ELE</b>	3-Error	Tunnel Groups: [chars]: [chars]	The tunnel group component encountered an internal software error	ip-tunnels	LOG_STD_ACTION
<b>IMRG_TUNPOLCYMAP</b>	3-Error	Lookup of rate-limit policymap failed for vrf [chars].	When the ip pim register-rate-limit CLI command is entered a rate-limiting policy-map is created. This policy-map is attached to each register tunnel by configuring an output service policy on the tunnel. A policy-map lookup is therefore performed whenever the register-rate-limit command is enabled or disabled. This message is logged as a result of a lookup failure.	ipmulticast	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>IMRGTUNPOLICYMAP</del>	3-Error	Lookup of rate-limit policymap failed for vrf [chars].	When the ip pim register-rate-limit CLI command is entered a rate-limiting policy-map is created. This policy-map is attached to each register tunnel by configuring an output service policy on the tunnel. A policy-map lookup is therefore performed whenever the register-rate-limit command is enabled or disabled. This message is logged as a result of a lookup failure.	ipmulticast	LOG_SID_SH_TECH_ACTION
<del>IMRGTUNRNULINO</del>	3-Error	Register tunnel [chars] has null tinfo.	Unable to dereference tunnel information.	ipmulticast	LOG_SID_DBG_ACTION
<del>IMRGTUNRNULINO</del>	3-Error	Register tunnel [chars] has null tinfo.	Unable to dereference tunnel information.	ipmulticast	LOG_SID_DBG_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IPMGUNSRMCHPOLYFAUE</del>	3-Error	Failed to configure service policy on register tunnel.	When the ip pim register-rate-limit CLI command is entered a rate-limiting policy-map is created. This policy-map is attached to each register tunnel by configuring an output service policy on the tunnel. This message is logged as a result of a failure to configure an output service policy on a register tunnel. This failure may be due to lack of temporary resources but it may also be caused by platform restrictions on overlapping QoS configurations such as simultaneously having a service policy on a tunnel and on the real interface associated with the tunnel.	ipmulticast	LOG_SIDSH_TECH_ACTION



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>IPMGUNSERVCLIAUE</del>	3-Error	Failed to configure service policy on register tunnel.	When the ip pim register-rate-limit CLI command is entered a rate-limiting policy-map is created. This policy-map is attached to each register tunnel by configuring an output service policy on the tunnel. This message is logged as a result of a failure to configure an output service policy on a register tunnel. This failure may be due to lack of temporary resources but it may also be caused by platform restrictions on overlapping QoS configurations such as simultaneously having a service policy on a tunnel and on the real interface associated with the tunnel.	ipmulticast	LOGSIDSHTTECHACION
<del>IPMGUNSERVCLDRSPK</del>	3-Error	Unexpected tunnel transport: [node]	An unexpected tunnel transport was detected. The location where the value was detected and the execution path that lead to it may be obtained from the traceback included in this message.	ipmulticast	LOGSIDSHTTECHACION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IPMGUNEXCDRSPN</del>	3-Error	Unexpected tunnel transport: [node]	An unexpected tunnel transport was detected. The location where the value was detected and the execution path that lead to it may be obtained from the traceback included in this message.	ipmulticast	LOG_SIDSHTECH_ACTION
<del>IPMGUNUNMERR</del>	3-Error	Failed to set un-numbered interface for [chars] [chars]	-	-	-
<del>IPMGUNUNMERR</del>	3-Error	Failed to set un-numbered interface for [chars] [chars]	-	-	-
<del>IPMGUNUNMRSEY</del>	6-Information	Failed to set un-numbered interface for [chars] [chars]	-	-	-
<del>IPMGUNUNMRSEY</del>	6-Information	Failed to set un-numbered interface for [chars] [chars]	-	-	-
PIM-I-INVALID_RP_REG	1-Alert	Received Register from router [node]for group [node][node]not willing to be RP	A PIM router received a register message from another PIM router that\n thinks it is the rendezvous point. If the router is not configured for\n another rendezvous point it will not accept the register message.	-	"Configure all leaf routers first-hop routers to multicast sources\n"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PIM1-INVALID_RP_REG	1-Alert	Received Register from router [node]for group [node][node]not willing to be RP	A PIM router received a register message from another PIM router that\n thinks it is the rendezvous point. If the router is not configured for\n another rendezvous point it will not accept the register message.	-	"Configure all leaf routers first-hop routers to multicast sources\n"
PIM3SR_INTERVAL_SETTING_ERR	1-Alert	Incompatible SR interval from [node]on [chars] [dec] != [dec]	-	-	-
PIM3SR_INTERVAL_SETTING_ERR	1-Alert	Incompatible SR interval from [node]on [chars] [dec] != [dec]	-	-	-
PIM3MVRF_NULL_PRM	3-Error	Null parameter specified for MVRF lookup.	A function to perform an mvrf lookup by name detected a NULL input parameter. The intended action can not proceed.	-	LOG_SID_SH_TECH_ACTION
PIM3MVRF_NULL_PRM	3-Error	Null parameter specified for MVRF lookup.	A function to perform an mvrf lookup by name detected a NULL input parameter. The intended action can not proceed.	-	LOG_SID_SH_TECH_ACTION
PIM3MIFINDSMRPNRM	3-Error	Invalid parameter passed while walking the autorp cache to find a group-to-rp mapping for Sparse RP [node] parameter: 0x[hec]	An invalid parameter was specified while walking the\n autorp cache to find a Sparse RP match.	-	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HMBPMIFNDSMRPNRM	3-Error	Invalid parameter passed while walking the autorp cache to find a group-to-rp mapping for Sparse RP [node] parameter: 0x[hec]	An invalid parameter was specified while walking the\n\ autorp cache to find a Sparse RP match.	-	LOG_SID_SH_TECH_ACTION
HMBRTENIRY_HASNORP	3-Error	A request has been issued to remove a PIM register tunnel from multicast entry [chars] [node]but this entry has no RP address.	This condition is an indication that the entry's RP address was reset before first removing the register tunnel. This can cause a memory leak because the RP address is the key for looking up the tunnel whose removal has been requested. Without the RP we cannot find the tunnel and decrement its reference count.	-	LOG_SID_DBG_ACTION
HMBRTENIRY_HASNORP	3-Error	A request has been issued to remove a PIM register tunnel from multicast entry [chars] [node]but this entry has no RP address.	This condition is an indication that the entry's RP address was reset before first removing the register tunnel. This can cause a memory leak because the RP address is the key for looking up the tunnel whose removal has been requested. Without the RP we cannot find the tunnel and decrement its reference count.	-	LOG_SID_DBG_ACTION
HMBRT_INVALID_MODE	3-Error	Invalid register tunnel mode [node]	The only valid register tunnel mode values are TUN_MODE_PMENCIPv4 and TUN_MODE_PMDCCIPv4	-	LOG_SID_DBG_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PIM3PRT_INVALID_MODE	3-Error	Invalid register tunnel mode [node]	The only valid register tunnel mode values are TUN_MODE_PIM_ENC_IPV4 and TUN_MODE_PIM_DEC_IPV4	-	LOG_SID_SH_TECH_ACTION
PIM3REGTUNDECREATE	3-Error	Tunnel IDB creation for a PIM register [chars] tunnel for RP [node] failed for vrf [chars].	An attempt to create a tunnel IDB for use with a PIM register tunnel has failed. The encapsulation or decapsulation tunnel can not be created.	-	LOG_SID_SH_TECH_ACTION
PIM3REGTUNDECREATE	3-Error	Tunnel IDB creation for a PIM register [chars] tunnel for RP [node] failed for vrf [chars].	An attempt to create a tunnel IDB for use with a PIM register tunnel has failed. The encapsulation or decapsulation tunnel can not be created.	-	LOG_SID_SH_TECH_ACTION
PIM3REGTUNDBMVRF	3-Error	Failed to find the mvrf associated with IDB [chars]	An attempt to determine the multicast vrf associated with the specified IDB failed. The required update of PIM register tunnel IDB information can not proceed.	-	LOG_SID_SH_TECH_ACTION
PIM3REGTUNDBMVRF	3-Error	Failed to find the mvrf associated with IDB [chars]	An attempt to determine the multicast vrf associated with the specified IDB failed. The required update of PIM register tunnel IDB information can not proceed.	-	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PIM3-REGTUNMDBFLG	3-Error	Register tunnel MDB client flag allocation failed.	An attempt to allocate a client flag position for use in tracking the number of mroutes using each PIM register tunnel has failed. Register tunnels can be allocated but can not deleted.	-	LOG_SIDSH_TECH_ACTION
PIM3-REGTUNMDBFLG	3-Error	Register tunnel MDB client flag allocation failed.	An attempt to allocate a client flag position for use in tracking the number of mroutes using each PIM register tunnel has failed. Register tunnels can be allocated but can not deleted.	-	LOG_SIDSH_TECH_ACTION
PIM3-REGTUNMISSING	3-Error	[chars] register tunnel entry for RP [node]missing from tunnel list	Deletion of a PIM register tunnel entry from a PIM register tunnel queue failed because the register tunnel entry wasn't found in the register tunnel list.	-	LOG_SIDSH_TECH_ACTION
PIM3-REGTUNMISSING	3-Error	[chars] register tunnel entry for RP [node]missing from tunnel list	Deletion of a PIM register tunnel entry from a PIM register tunnel queue failed because the register tunnel entry wasn't found in the register tunnel list.	-	LOG_SIDSH_TECH_ACTION
PIM3-REGTUNMVRF	3-Error	NULL mvrf specified in PIM register tunnel creation request for RP %i	An NULL mvrf was specified for creation of a PIM register tunnel associated with the specified RP. The register tunnel can not be created.	-	LOG_SIDSH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PIM-3-REGTUNMVRF	3-Error	NULL mvrf specified in PIM register tunnel creation request for RP %i	An NULL mvrf was specified for creation of a PIM register tunnel associated with the specified RP. The register tunnel can not be created.	-	LOG_SID_SH_TECH_ACTION
PIM-3-REGTUNNOIDB	3-Error	No register tunnel IDB found for RP [node] Can't execute pending delete	During an attempt to delete a register tunnel interface that is currently in use for at least one mroute olist entry the register tunnel entry did not specify a tunnel interface. The register tunnel interface can not be deleted.	-	LOG_SID_SH_TECH_ACTION
PIM-3-REGTUNNOIDB	3-Error	No register tunnel IDB found for RP [node] Can't execute pending delete	During an attempt to delete a register tunnel interface that is currently in use for at least one mroute olist entry the register tunnel entry did not specify a tunnel interface. The register tunnel interface can not be deleted.	-	LOG_SID_SH_TECH_ACTION
PIM-3-REGTUNPRQ	3-Error	Process enqueue for [chars] register tunnel creation failed for RP [node]	An attempt to enqueue a request for PIM register tunnel IDB creation failed probably because of a lack of resources. The	-	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PIM-3-REGTUNPRQ	3-Error	Process enqueue for [chars] register tunnel creation failed for RP [node]	An attempt to enqueue a request for PIM register tunnel IDB\n creation failed probably because of a lack of resources. The\n	-	LOG_SIDSH_TIECH_ACTION
PIM-3-REGTUNQLINK	3-Error	Corrupted PIM register [chars] tunnel queue links. Can't add RP %i	Insertion of a new PIM register tunnel entry into a PIM register\n tunnel queue failed. The encapsulation or decapsulation tunnel can\n not be created.	-	LOG_SIDSH_TIECH_ACTION
PIM-3-REGTUNQLINK	3-Error	Corrupted PIM register [chars] tunnel queue links. Can't add RP %i	Insertion of a new PIM register tunnel entry into a PIM register\n tunnel queue failed. The encapsulation or decapsulation tunnel can\n not be created.	-	LOG_SIDSH_TIECH_ACTION
PIM-3-REGTUNRP	3-Error	NULL RP pointer specified for PIM register tunnel creation.	The caller passed a NULL pointer instead of providing a valid \n pointer to the RP cache entry for which register tunnel creation\n was requested. The encapsulation or decapsulation tunnel can not\n be created.	-	LOG_SIDSH_TIECH_ACTION
PIM-3-REGTUNRP	3-Error	NULL RP pointer specified for PIM register tunnel creation.	The caller passed a NULL pointer instead of providing a valid \n pointer to the RP cache entry for which register tunnel creation\n was requested. The encapsulation or decapsulation tunnel can not\n be created.	-	LOG_SIDSH_TIECH_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PIM3REGIUNRPMAPMRF	3-Error	NULL mvrf specified in RP mapping notification for RP %i	An NULL mvrf was specified when a PIM RP mapping notification\n\n was made.	-	LOGSIDSHTTECHACIION
PIM3REGIUNRPMAPMRF	3-Error	NULL mvrf specified in RP mapping notification for RP %i	An NULL mvrf was specified when a PIM RP mapping notification\n\n was made.	-	LOGSIDSHTTECHACIION
PIM3REGTUNSETSRC	3-Error	Failed to set PIM [chars] register tunnel IDB source for RP %i	An attempt to set the tunnel source address of a PIM register tunnel\n for the specified RP has failed. The encapsulation or decapsulation\n tunnel can not be created.	-	LOGSIDSHTTECHACIION
PIM3REGTUNSETSRC	3-Error	Failed to set PIM [chars] register tunnel IDB source for RP %i	An attempt to set the tunnel source address of a PIM register tunnel\n for the specified RP has failed. The encapsulation or decapsulation\n tunnel can not be created.	-	LOGSIDSHTTECHACIION
PIM3REGTUNUPMRF	3-Error	NULL mvrf specified in PIM register tunnel entry for RP %i	An NULL mvrf was specified for the PIM register tunnel associated \n\n with the specified RP.\n\n The register tunnel can not be used for registration.	-	LOGSIDSHTTECHACIION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PIM3-REGTUNUPMVRF	3-Error	NULL mvrf specified in PIM register tunnel entry for RP %i	An NULL mvrf was specified for the PIM register tunnel associated \n\n\ with the specified RP.\n\n\ The register tunnel can not be used for registration.	-	LOG_SIDSH_TECH_ACTION
PIM3-RPDF_NULL_PRM	3-Error	Null parameter specified for Bidir RP DF creation.	A function to create a Bidir RP DF entry detected a NULL input parameter. The RP DF entry can not be created.	-	LOG_SIDSH_TECH_ACTION
PIM3-RPDF_NULL_PRM	3-Error	Null parameter specified for Bidir RP DF creation.	A function to create a Bidir RP DF entry detected a NULL input parameter. The RP DF entry can not be created.	-	LOG_SIDSH_TECH_ACTION
PIM3-RPNOREGTUN	3-Error	For multicast route [node][node]no register tunnel found	During an attempt to install a register tunnel interface for a\n new SG multicast route a search in the PIM register encapsulation\n tunnel list failed to find the tunnel entry for the corresponding\n RP. The register tunnel interface can not be added to the multicast\n route.	-	LOG_SIDSH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PIM3-RPNOREGTUN	3-Error	For multicast route [node][node]no register tunnel found	During an attempt to install a register tunnel interface for a new SG multicast route a search in the PIM register encapsulation tunnel list failed to find the tunnel entry for the corresponding RP. The register tunnel interface can not be added to the multicast route.	-	LOGS_IDSHTTECH_ACTION
PIM3-RPNOREGTUNIDB	3-Error	For multicast route [node][node]no register tunnel IDB found	During an attempt to install or uninstall a register tunnel interface for an SG multicast route the register tunnel entry for the corresponding RP did not specify a tunnel interface. The register tunnel interface can not be added to or removed from the multicast route.	-	LOGS_IDSHTTECH_ACTION
PIM3-RPNOREGTUNIDB	3-Error	For multicast route [node][node]no register tunnel IDB found	During an attempt to install or uninstall a register tunnel interface for an SG multicast route the register tunnel entry for the corresponding RP did not specify a tunnel interface. The register tunnel interface can not be added to or removed from the multicast route.	-	LOGS_IDSHTTECH_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>PIM3-SM-TM-ERR-CHK</del>	3-Error	Managed timer wakeup received by the PIM register tunnel creation process with no expired timers.	The PIM register tunnel creation process received a wakeup for managed timer expiration but the API to obtain the first expired timer returned a NULL pointer. The timer expiration can not be handled. Possible loss of PIM register tunnel functionality including failure of PIM Sparse Mode registration for some multicast groups may occur as a result.	-	LOG_SIDSH_TECH_ACTION
<del>PIM3-SM-TM-ERR-CHK</del>	3-Error	Managed timer wakeup received by the PIM register tunnel creation process with no expired timers.	The PIM register tunnel creation process received a wakeup for managed timer expiration but the API to obtain the first expired timer returned a NULL pointer. The timer expiration can not be handled. Possible loss of PIM register tunnel functionality including failure of PIM Sparse Mode registration for some multicast groups may occur as a result.	-	LOG_SIDSH_TECH_ACTION
PIM3-TWHEEL_INT_ERR	3-Error	Unable to create PIM timer wheel	An error occurred initializing the PIM timer twheel	-	"An error in maintaining the PIM timer wheel occurred." LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PIM3TWHEEL_INT_ERR	3-Error	Unable to create PIM timer wheel	An error occurred intializing the PIM timer twheel	-	"An error in maintaining the PIM timer wheel occurred." LOG_STD_ACTION
<del>PIM3TWHEEL_INT_ERR</del>	3-Error	PIM [dec] A mismatch of the S-PMSI pointer [node] [node]cached in the mdb [node]%	-	-	-
<del>PIM3TWHEEL_INT_ERR</del>	3-Error	PIM [dec] A mismatch of the S-PMSI pointer [node] [node]cached in the mdb [node]%	-	-	-
PMBUPD_RR_NULL_RM	3-Error	Null parameter specified for Bidir RP route update.	A function to perform an update of Bidir RP route information detected a NULL input parameter. The update can not proceed.	-	LOG_SIDSH_TECH_ACTION
<del>PMBUPD_RR_NULL_RM</del>	3-Error	Null parameter specified for Bidir RP route update.	A function to perform an update of Bidir RP route information detected a NULL input parameter. The update can not proceed.	-	LOG_SIDSH_TECH_ACTION
<del>PMDIRCAID_HLO_TIV</del>	4-Warning	Deprecated PIM Hello Option TLV [dec] [chars] from [node][chars]	-	-	-
<del>PMDIRCAID_HLO_TIV</del>	4-Warning	Deprecated PIM Hello Option TLV [dec] [chars] from [node][chars]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HM4EXIRANET_INVALID_RP	4-Warning	Register flag not cleared for extranet [chars] entry [chars][node]i	PIM router received a Register-stop in the overlay VRF for an extranet source\n entry and trying to clear the Register flag but the chained extranet entry's\n RP address is not same as the extranet source mroute entry.	-	"Make sure the RP address for a given group is same in all the VRFs that\n" "participate in extranet."
HM4EXIRANET_INVALID_RP	4-Warning	Register flag not cleared for extranet [chars] entry [chars][node]i	PIM router received a Register-stop in the overlay VRF for an extranet source\n entry and trying to clear the Register flag but the chained extranet entry's\n RP address is not same as the extranet source mroute entry.	-	"Make sure the RP address for a given group is same in all the VRFs that\n" "participate in extranet."
HM4INVALID_RCV_RLOC	4-Warning	Invalid Receiver RLOC address family	Invalid Receiver RLOC address family	ipmulticast	LOG_SID_NO_ACTION
HM4INVALID_RCV_RLOC	4-Warning	Invalid Receiver RLOC address family	Invalid Receiver RLOC address family	ipmulticast	LOG_SID_NO_ACTION
PIM4INVALID_SRC_REG	4-Warning	Received Register from [node]for [node][node]not willing to be RP	-	-	-
PIM4INVALID_SRC_REG	4-Warning	Received Register from [node]for [node][node]not willing to be RP	-	-	-
PIM-4-NO_INPUT	4-Warning	PIM packet without input interface received from [node]for %i	An unexpected PIM packet without input interface was received.	ipmulticast	"Consider taking note of source and destination present in syslog." LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PIM-4-NO_INPUT	4-Warning	PIM packet without input interface received from [node]for %i	An unexpected PIM packet without input interface was received.	ipmulticast	"Consider taking note of source and destination present in syslog." LOG_STD_ACTION
<del>PIM-4-NO_INPUT</del>	4-Warning	PIM Dense Mode is not recommended and needs to be replaced with PIM Sparse Mode	PIM Dense Mode is not recommended and needs to be replaced with PIM Sparse Mode.	-	"Configure PIM Sparse Mode"
<del>PIM-4-NO_INPUT</del>	4-Warning	PIM Dense Mode is not recommended and needs to be replaced with PIM Sparse Mode	PIM Dense Mode is not recommended and needs to be replaced with PIM Sparse Mode.	-	"Configure PIM Sparse Mode"
PIM4-PIM_INVALID_SB	4-Warning	Unexpected access to PIM interface subblock field	IOS attempts to access the value of a PIM interface field\n\ whose interface subblock is not yet created	-	"An inconsistency accessing a PIM interface subblock occurred." LOG_STD_ACTION
PIM4-PIM_INVALID_SB	4-Warning	Unexpected access to PIM interface subblock field	IOS attempts to access the value of a PIM interface field\n\ whose interface subblock is not yet created	-	"An inconsistency accessing a PIM interface subblock occurred." LOG_STD_ACTION
<del>PIM-4-NO_INPUT</del>	4-Warning	Receiver RLOC ATTR should be present for PIM J/P with LISP transport	Receiver RLOC ATTR should be present for PIM J/P with LISP transport	ipmulticast	LOG_SID_NO_ACTION
<del>PIM-4-NO_INPUT</del>	4-Warning	Receiver RLOC ATTR should be present for PIM J/P with LISP transport	Receiver RLOC ATTR should be present for PIM J/P with LISP transport	ipmulticast	LOG_SID_NO_ACTION
PIM-4-REGTUNNOSRC	4-Warning	Some register encap tunnels may not have routable source addresses.	Repeated attempts to adjust register encap tunnel source were running over time and some tunnels may not have been adjusted.	-	LOG_SID_SHI_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PIM4REGTUNNOSRC	4-Warning	Some register encap tunnels may not have routable source addresses.	Repeated attempts to adjust register encap tunnel source were running over time and some tunnels may not have been adjusted.	-	LOG_SID_SH_TECH_ACTION
PIM4RP_NOT_LOCAL	4-Warning	Received * [node]Join from [node]for invalid RP [node] SDWAN SPT-only is	A downstream PIM router sent a join message for the shared tree with a rendezvous point IP which is not local. In SDWAN spt-only networks it is expected that the cEdge is the chosen RP.	-	"Make sure the cEdge is the chosen RP and If PIM BSR is running " "use appropriate BSR configurations to make cEdge as the elected RP if there" "is a contention."
PIM4RP_NOT_LOCAL	4-Warning	Received * [node]Join from [node]for invalid RP [node] SDWAN SPT-only is	A downstream PIM router sent a join message for the shared tree with a rendezvous point IP which is not local. In SDWAN spt-only networks it is expected that the cEdge is the chosen RP.	-	"Make sure the cEdge is the chosen RP and If PIM BSR is running " "use appropriate BSR configurations to make cEdge as the elected RP if there" "is a contention."
<del>PIM4RSP_AIR_CIRSET</del>	4-Warning	Transport ATTR should be present for PIM J/P with LISP transport	Transport ATTR should be present for PIM J/P with LISP transport.	ipmulticast	LOG_SID_NO_ACTION
<del>PIM4RSP_AIR_CIRSET</del>	4-Warning	Transport ATTR should be present for PIM J/P with LISP transport	Transport ATTR should be present for PIM J/P with LISP transport.	ipmulticast	LOG_SID_NO_ACTION
<del>PIM4RSP_REDIE_TRANSPORT</del>	4-Warning	Unsupported LISP transport	Unsupported LISP transport	ipmulticast	LOG_SID_NO_ACTION
<del>PIM4RSP_REDIE_TRANSPORT</del>	4-Warning	Unsupported LISP transport	Unsupported LISP transport	ipmulticast	LOG_SID_NO_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PIM-5-DRCHG	5-Notice	DR change from neighbor [node]to [node]on interface [chars]	A PIM neighbor is the new DR on an interface	-	LOG_SID_NO_ACTION
PIM-5-DRCHG	5-Notice	DR change from neighbor [node]to [node]on interface [chars]	A PIM neighbor is the new DR on an interface	-	LOG_SID_NO_ACTION
PIM-5-NBRCHG	5-Notice	neighbor [node][chars] on interface [chars] [chars]	A PIM neighbor has gone UP or DOWN on an interface	-	LOG_SID_NO_ACTION
PIM-5-NBRCHG	5-Notice	neighbor [node][chars] on interface [chars] [chars]	A PIM neighbor has gone UP or DOWN on an interface	-	LOG_SID_NO_ACTION
PIM-5-PROXY	5-Notice	Deny proxy for [node][node]from neighbor %i	Deny PIM Proxy from neighbor	-	LOG_SID_NO_ACTION
PIM-5-PROXY	5-Notice	Deny proxy for [node][node]from neighbor %i	Deny PIM Proxy from neighbor	-	LOG_SID_NO_ACTION
PIM6INVALID_RP_JOIN	6-Information	Received * [node]Join from [node]for invalid RP %i	A downstream PIM router sent a join message for the shared tree which\n this router does not want to accept. This behavior indicates that this\n router will let only downstream routers join to a specific rendezvous\n point.	-	"Configure all downstream leaf routers to join to the RP that is\n" "allowed by upstream routers toward the validated rendezvous point."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PIM6INVALID_RP_JOIN	6-Information	Received * [node]Join from [node]for invalid RP %i	A downstream PIM router sent a join message for the shared tree which\n this router does not want to accept. This behavior indicates that this\n router will let only downstream routers join to a specific rendezvous\n point.	-	"Configure all downstream leaf routers to join to the RP that is\n" "allowed by upstream routers toward the validated rendezvous point."
PIM6REGTUNNOIDEL	6-Information	Some register [chars] tunnels may not have been deleted.	Maintanance activity to delete unused register tunnels was running over time and some tunnels may not have been deleted.	-	LOG_SID_SH_TIE_H_ACTION
PIM6REGTUNNOIDEL	6-Information	Some register [chars] tunnels may not have been deleted.	Maintanance activity to delete unused register tunnels was running over time and some tunnels may not have been deleted.	-	LOG_SID_SH_TIE_H_ACTION
PIMP-2-NOMEM	2-Critical	No memory available for [chars]	Process interrupt mask profiler subsystem could not obtain the memory it needed.	os	"Copy the message exactly as it appears and report it " "your technical support representative."
PIMP-2-NOMEM	2-Critical	No memory available for [chars]	Process interrupt mask profiler subsystem could not obtain the memory it needed.	os	"Copy the message exactly as it appears and report it " "your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PKHCERT_EXPIRY_ALERT</del>	1-Alert	[chars] Certificate belonging to trustpoint [chars] will expire in [node]Days [node]hours [node]mins [node]secs at [chars]. \n Issuer-name : [chars] \n Subject-name : [chars] \n Serial-number: [chars] \n Auto-Renewal : [chars]	Alert to indicate that certificate will expire in less than one week.	pki	"If auto-enrol feature is not configured re-enrol the certificate " "manually. Else check if any issues with auto-enrol."
<del>PKHCERT_EXPIRY_ALERT</del>	1-Alert	[chars] Certificate belonging to trustpoint [chars] will expire in [node]Days [node]hours [node]mins [node]secs at [chars]. \n Issuer-name : [chars] \n Subject-name : [chars] \n Serial-number: [chars] \n Auto-Renewal : [chars]	Alert to indicate that certificate will expire in less than one week.	pki	"If auto-enrol feature is not configured re-enrol the certificate " "manually. Else check if any issues with auto-enrol."
<del>PKCASHMRCRTEXPRD</del>	2-Critical	[chars] server certitfcate expired. Cannot enable [chars] server	CA server certificate expired.	pki	"Reconfigure CA server"
<del>PKCASHMRCRTEXPRD</del>	2-Critical	[chars] server certitfcate expired. Cannot enable [chars] server	CA server certificate expired.	pki	"Reconfigure CA server"
<del>PKCASHMRLBLTTOLOG</del>	2-Critical	[chars] server name too long. Reconfigure server with name less than 13 characters.	CA server name too long.	pki	"Reconfigure CA server with less than 13 characters"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PKI2SMRLABLTOO LONG</del>	2-Critical	[chars] server name too long. Reconfigure server with name less than 13 characters.	CA server name too long.	pki	"Reconfigure CA server with less than 13 characters"
<del>PKI2SMRTPNOTPRESENT</del>	2-Critical	[chars] server's Trustpoint not available. Check for the trustpoint config.	CA server's Trustpoint not available.	pki	"Check for CA server and Trustpoint configuration presence"
<del>PKI2SMRTPNOTPRESENT</del>	2-Critical	[chars] server's Trustpoint not available. Check for the trustpoint config.	CA server's Trustpoint not available.	pki	"Check for CA server and Trustpoint configuration presence"
PKI2CERT_ENROLL_FAIL	2-Critical	Certificate enrollment failed for trustpoint [chars]. \n Reason : [chars]	Certificate enroll encounter fatal error	pki	"Contact the CA administrator."
PKI2CERT_ENROLL_FAIL	2-Critical	Certificate enrollment failed for trustpoint [chars]. \n Reason : [chars]	Certificate enroll encounter fatal error	pki	"Contact the CA administrator."
PKI2CERT_RENEW_FAIL	2-Critical	Certificate renewal failed for trustpoint [chars] \n Reason : [chars]	Certificate enroll encounter fatal error	pki	"Contact the CA administrator."
PKI2CERT_RENEW_FAIL	2-Critical	Certificate renewal failed for trustpoint [chars] \n Reason : [chars]	Certificate enroll encounter fatal error	pki	"Contact the CA administrator."
<del>PKI2RSHADOWSALLAL</del>	2-Critical	[chars].	Shadow CA/ID certificate installation failed.	pki	"Check for the reason for failure and perform necessary steps"
<del>PKI2RSHADOWSALLAL</del>	2-Critical	[chars].	Shadow CA/ID certificate installation failed.	pki	"Check for the reason for failure and perform necessary steps"
PKI2CS_CERT_EXPIRED	2-Critical	Certificate server [chars] CA certificate expired. Regenerate CA certificate manually.	CS certificate expired.	pki	"Regenerate CS certificate."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
PKI2CS_CERT_EXPIRED	2-Critical	Certificate server [chars] CA certificate expired. Regenerate CA certificate manually.	CS certificate expired.	pki	"Regenerate CS certificate."
PKI2CS_CERT_GEN_FAIL	2-Critical	Certificate server [chars] CA certificate generation failed. Regenerate CA certificate manually.	Certificate Server disabled.	pki	"Regenerate CS certificate."
PKI2CS_CERT_GEN_FAIL	2-Critical	Certificate server [chars] CA certificate generation failed. Regenerate CA certificate manually.	Certificate Server disabled.	pki	"Regenerate CS certificate."
PKI2CS_CERT_INVALID	2-Critical	Certificate server [chars] CA certificate invalid. Regenerate CA certificate manually.	CS certificate invalid.	pki	"Regenerate CS certificate."
PKI2CS_CERT_INVALID	2-Critical	Certificate server [chars] CA certificate invalid. Regenerate CA certificate manually.	CS certificate invalid.	pki	"Regenerate CS certificate."
PKI2CS_CERT_NOT_PRESENT	2-Critical	Certificate server [chars]'s certificate not present.	Certificate server certificate not present	pki	"Regenerate CS certificate."
PKI2CS_CERT_NOT_PRESENT	2-Critical	Certificate server [chars]'s certificate not present.	Certificate server certificate not present	pki	"Regenerate CS certificate."
PKI2CS_ISSUER_NAME_AID	2-Critical	Invalid issuer_name in CS [chars] configuration	Invalid issuer-name in Certificate Server	pki	"Check certificate server configuration and re-configure."
PKI2CS_ISSUER_NAME_AID	2-Critical	Invalid issuer_name in CS [chars] configuration	Invalid issuer-name in Certificate Server	pki	"Check certificate server configuration and re-configure."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>PKI</del> CS_ROLLOVER_FAIL	2-Critical	CS Rollover failed. \n Reason : [chars]	Rollover failed for certificate server	pki	"Critical error on rollover." "Certificate Server has to be re-enabled."
<del>PKI</del> CS_ROLLOVER_FAIL	2-Critical	CS Rollover failed. \n Reason : [chars]	Rollover failed for certificate server	pki	"Critical error on rollover." "Certificate Server has to be re-enabled."
<del>PKI</del> CS_SUBJECT_NAME_FAIL	2-Critical	Extracting subject name from Server certificate failed	Extraction of subject failed	pki	"Regenerate CS certificate."
<del>PKI</del> CS_SUBJECT_NAME_FAIL	2-Critical	Extracting subject name from Server certificate failed	Extraction of subject failed	pki	"Regenerate CS certificate."
<del>PKI</del> MEM_ALLOC_FAIL	2-Critical	Memory allocation failure. Number of bytes requested : [dec]	Memory allocation failed	pki	"Check memory left on the device"
<del>PKI</del> MEM_ALLOC_FAIL	2-Critical	Memory allocation failure. Number of bytes requested : [dec]	Memory allocation failed	pki	"Check memory left on the device"
<del>PKI</del> NON_AUTH_TIME_CLOCK	2-Critical	PKI functions can not be initialized until an authoritative time source like NTP can be obtained.	System clock is not valid. Update the system clock to start with PKI timers	pki	"System clock must be configured/Updated."
<del>PKI</del> NON_AUTH_TIME_CLOCK	2-Critical	PKI functions can not be initialized until an authoritative time source like NTP can be obtained.	System clock is not valid. Update the system clock to start with PKI timers	pki	"System clock must be configured/Updated."
<del>PKI</del> NON_AUTH_TIME_CLOCK_CA	2-Critical	CA server cannot be enabled due to non-authoritative system clock. Configure clock/Sync with NTP server.	System clock is not valid. Update the system clock to start CA server	pki	"System clock must be configured/Updated."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PKI2-AUTOCERTERR</del>	2-Critical	CA server cannot be enabled due to non-authoritative system clock. Configure clock/Sync with NTP server.	System clock is not valid. Update the system clock to start CA server	pki	"System clock must be configured/Updated."
PKI2-PKI_EVENT_LOG	2-Critical	PKI Event : [chars]	PKI Event for both success/failure.	pki	"Informational message only. No action needed."
PKI2-PKI_EVENT_LOG	2-Critical	PKI Event : [chars]	PKI Event for both success/failure.	pki	"Informational message only. No action needed."
<del>PKI2-MRKEYNOTPRESENT</del>	2-Critical	Not able to find CS [chars]'s keypair label [chars]. Check whether keypair [chars] is available on device	CA server's key-pair not available.	pki	"Check for key-pair presence"
<del>PKI2-MRKEYNOTPRESENT</del>	2-Critical	Not able to find CS [chars]'s keypair label [chars]. Check whether keypair [chars] is available on device	CA server's key-pair not available.	pki	"Check for key-pair presence"
<del>PKI2-MRTRIPCREATEFAIL</del>	2-Critical	Not able to create [chars] server's Trustpoint. Check for CA server config's.	CA server's Trustpoint not created.	pki	"Check for CA server and Trustpoint configuration presence"
<del>PKI2-MRTRIPCREATEFAIL</del>	2-Critical	Not able to create [chars] server's Trustpoint. Check for CA server config's.	CA server's Trustpoint not created.	pki	"Check for CA server and Trustpoint configuration presence"
PKI3-AUTOCERTERR	3-Error	Auto Certificate reenrollment failed. Cannot retry	Automatic certificate re-enrollment failed. The router clock may not be set correctly. If the router has a certificate it may be expired.	pki	"Check router clock is set correctly" "Make sure the router's cert has not expired"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
PKI3-AUTOCERTERR	3-Error	Auto Certificate reenrollment failed. Cannot retry	Automatic certificate re-enrollment failed. The router clock may not be set correctly. If the router has a certificate it may be expired.	pki	"Check router clock is set correctly" "Make sure the router's cert has not expired"
PKI3-CERT_ROLLOVER	3-Error	Renew/Shadow event has failed for trustpoint : [chars] \n Reason : [chars]	Renew/Shadow event failed.	pki	"Perform manual renewal of certificate to avoid certificate expiry."
PKI3-CERT_ROLLOVER	3-Error	Renew/Shadow event has failed for trustpoint : [chars] \n Reason : [chars]	Renew/Shadow event failed.	pki	"Perform manual renewal of certificate to avoid certificate expiry."
PKI3-CERTCHAIN_INVALID	3-Error	Certificate chain validation has failed.	The certificate is not valid	pki	"Check the system clock to see if its set correctly"
PKI3-CERTCHAIN_INVALID	3-Error	Certificate chain validation has failed.	The certificate is not valid	pki	"Check the system clock to see if its set correctly"
PKI3-CERTCHAIN_EXPIRED	3-Error	Certificate chain validation has failed. The certificate SN: [chars] has expired.	The certificate validity period indicates that this certificate has expired	pki	"Check the system clock to see if its set correctly"
PKI3-CERTCHAIN_EXPIRED	3-Error	Certificate chain validation has failed. The certificate SN: [chars] has expired.	The certificate validity period indicates that this certificate has expired	pki	"Check the system clock to see if its set correctly"
PKI3-CERTCHAIN_NOT_YET_VALID	3-Error	Certificate chain validation has failed. The certificate SN: [chars] is not yet valid	The certificate validity period indicates that this certificate is not yet valid	pki	"Check the system clock to see if its set correctly"
PKI3-CERTCHAIN_NOT_YET_VALID	3-Error	Certificate chain validation has failed. The certificate SN: [chars] is not yet valid	The certificate validity period indicates that this certificate is not yet valid	pki	"Check the system clock to see if its set correctly"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PKI-CERTCHAIN_UNAUTH</del>	3-Error	Certificate chain validation has failed. Unauthorized	The certificate is valid but not authorized	pki	"Check the system clock to see if its set correctly"
<del>PKI-CERTCHAIN_UNAUTH</del>	3-Error	Certificate chain validation has failed. Unauthorized	The certificate is valid but not authorized	pki	"Check the system clock to see if its set correctly"
PKI-CERTCHAIN_REVOKED	3-Error	Certificate chain validation has failed. The certificate SN: [chars] is revoked	The certificate has been revoked by the CA administrator.	pki	"Check the status contact the CA administrator"
PKI-CERTCHAIN_REVOKED	3-Error	Certificate chain validation has failed. The certificate SN: [chars] is revoked	The certificate has been revoked by the CA administrator.	pki	"Check the status contact the CA administrator"
PKI-3-CERTPENDERR	3-Error	Failed to receive pending certificate during enrollment	The router's cert remains in a pending state after the maximum number of retries to enroll.	pki	"Contact the CA administrator. Then retry the enrollment."
PKI-3-CERTPENDERR	3-Error	Failed to receive pending certificate during enrollment	The router's cert remains in a pending state after the maximum number of retries to enroll.	pki	"Contact the CA administrator. Then retry the enrollment."
PKI-3-CERTRETFAIL	3-Error	Certificate enrollment failed.	Certificate enrollment transaction failed due to internal error.	-	"Contact CE."
PKI-3-CERTRETFAIL	3-Error	Certificate enrollment failed.	Certificate enrollment transaction failed due to internal error.	-	"Contact CE."
PKI-3-CRL_FETCH_FAIL	3-Error	CRL fetch for trustpoint [chars] failed \n Reason : [chars]	The CRL fetch returned something other than success.	pki	"Check the CRL manually to see it is correct. " "To see interaction between IOS and the CRL-server " "please turn on <CmdBold>debug crypto pki " "transactions</CmdBold>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PKI3-CRL_FETCH_FAIL	3-Error	CRL fetch for trustpoint [chars] failed \n Reason : [chars]	The CRL fetch returned something other than success.	pki	"Check the CRL manually to see it is correct. " "To see interaction between IOS and the CRL-server " "please turn on <CmdBold>debug crypto pki " " <del>transactions&lt;NoCmdBold&gt;</del> "
PKI3-CRL_HTTP_FAIL	3-Error	CRL Request over http for trustpoint [chars] failed. \n Reason : [chars]	Receival of CA certificate failed	pki	"CA cert download failed"
PKI3-CRL_HTTP_FAIL	3-Error	CRL Request over http for trustpoint [chars] failed. \n Reason : [chars]	Receival of CA certificate failed	pki	"CA cert download failed"
PKI3-CRL_INSERT_FAIL	3-Error	CRL download for trustpoint \[chars] has been discarded. \n Reason : [chars] \n Status : [dec] \n Status String : [chars]	Inserting and/or verifying the CRL failed. If the trustpoint revocation-check includes the keyword 'none' the transaction will succeed. If revocation- checking is not optional the transaction will fail.	pki	"Check the CRL manually to see it is correct. " "To see interaction between IOS and the CRL-server " "please turn on <CmdBold>debug crypto pki " " <del>transactions&lt;NoCmdBold&gt;</del> "
PKI3-CRL_INSERT_FAIL	3-Error	CRL download for trustpoint \[chars] has been discarded. \n Reason : [chars] \n Status : [dec] \n Status String : [chars]	Inserting and/or verifying the CRL failed. If the trustpoint revocation-check includes the keyword 'none' the transaction will succeed. If revocation- checking is not optional the transaction will fail.	pki	"Check the CRL manually to see it is correct. " "To see interaction between IOS and the CRL-server " "please turn on <CmdBold>debug crypto pki " " <del>transactions&lt;NoCmdBold&gt;</del> "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PKB3CS_CRIT_STORAGE	3-Error	Critical certificate server storage [chars] is inaccessible server disabled.	Critical certificate server storage is inaccessible server disabled.	-	"Make storage accessible or re-configure the storage location"
PKB3CS_CRIT_STORAGE	3-Error	Critical certificate server storage [chars] is inaccessible server disabled.	Critical certificate server storage is inaccessible server disabled.	-	"Make storage accessible or re-configure the storage location"
PKCSROLLOVER_TRIGGER	3-Error	CS Rollover event has been triggered for server [chars]	Rollover triggered for certificate server	pki	"Informational message only. No action needed."
PKCSROLLOVER_TRIGGER	3-Error	CS Rollover event has been triggered for server [chars]	Rollover triggered for certificate server	pki	"Informational message only. No action needed."
PKCS12_COMPLIANCE_FAIL	3-Error	The signature algorithm [chars] is non compliant	The signature algorithm is non compliant	pki	"Signature algorithm not supported. Use stronger hash algorithm"
PKCS12_COMPLIANCE_FAIL	3-Error	The signature algorithm [chars] is non compliant	The signature algorithm is non compliant	pki	"Signature algorithm not supported. Use stronger hash algorithm"
PKI3-ENROLL_PKCS12	3-Error	Trustpoint [chars] configured as pkcs12 enrollment. SCEP enrollment not supported	Change the trustpoint configuration to point to enrollment-url	pki	"TP configuraiton need to be verified."
PKI3-ENROLL_PKCS12	3-Error	Trustpoint [chars] configured as pkcs12 enrollment. SCEP enrollment not supported	Change the trustpoint configuration to point to enrollment-url	pki	"TP configuraiton need to be verified."
PKI3GET_CERT_INITIAL	3-Error	Failed with GetCertInitial for trustpoint [chars] \n Reason : [chars]	GetCertInitial encounter fatal error	pki	"Contact the CA administrator."
PKI3GET_CERT_INITIAL	3-Error	Failed with GetCertInitial for trustpoint [chars] \n Reason : [chars]	GetCertInitial encounter fatal error	pki	"Contact the CA administrator."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
PKI-3-GETCARACERT	3-Error	Failed to receive RA/CA certificates.	Encountered failure when parsing and processing CA/RA certificates	-	"Check the status contact the CA administrator"
PKI-3-GETCARACERT	3-Error	Failed to receive RA/CA certificates.	Encountered failure when parsing and processing CA/RA certificates	-	"Check the status contact the CA administrator"
<del>PKI-3-HOSTNAME_RESOLVE_ERR</del>	3-Error	Failed to resolve HOSTNAME/IPADDRESS : [chars]	Unable to resolve hostname/ip-address	pki	"Check network connectivity"
<del>PKI-3-HOSTNAME_RESOLVE_ERR</del>	3-Error	Failed to resolve HOSTNAME/IPADDRESS : [chars]	Unable to resolve hostname/ip-address	pki	"Check network connectivity"
PKI-3-INVALID_INPUT	3-Error	The input to the parser command is not correct	The input to the parser command is not correct	-	"Repeat the command."
PKI-3-INVALID_INPUT	3-Error	The input to the parser command is not correct	The input to the parser command is not correct	-	"Repeat the command."
PKI-3-INVALIDCACERT	3-Error	Failed to process CA certificate.	Failed to process the ca certificate received from ca server.	pki	"Use parser command "cr ca auth" and try again."
PKI-3-INVALIDCACERT	3-Error	Failed to process CA certificate.	Failed to process the ca certificate received from ca server.	pki	"Use parser command "cr ca auth" and try again."
<del>PKI-3-ISSUERNAME_NOT_BER</del>	3-Error	Issuer name is not BER	Issuer name is not BER. Check issuer-name	pki	"Check issuer-name present/configured"
<del>PKI-3-ISSUERNAME_NOT_BER</del>	3-Error	Issuer name is not BER	Issuer name is not BER. Check issuer-name	pki	"Check issuer-name present/configured"
<del>PKI-3-KEY_CMP_MISMATCH</del>	3-Error	Key in the certificate and stored key does not match for Trustpoint-[chars].	Public key in the certificate is not the same as the stored key.	-	"Make sure that the certificate public key and stored public key are the same."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PKKEY_CMP_MISMATCH	3-Error	Key in the certificate and stored key does not match for Trustpoint-[chars].	Public key in the certificate is not the same as the stored key.	-	"Make sure that the certificate public key and stored public key are the same."
RMUTUALYEXCLSMCFG	3-Error	'grant auto tp <> and grant auto tp-list <> are mutually exclusive config. \n And cannot be configured at same time. Delete one and then \n configure another.	CLI configuration failed	-	"Issue \"no grant auto tp-list\" command to configure \"grant auto tp\" Or \"Issue \"no grant auto trustpoint\" command to configure \"grant auto tp-list.\""
RMUTUALYEXCLSMCFG	3-Error	'grant auto tp <> and grant auto tp-list <> are mutually exclusive config. \n And cannot be configured at same time. Delete one and then \n configure another.	CLI configuration failed	-	"Issue \"no grant auto tp-list\" command to configure \"grant auto tp\" Or \"Issue \"no grant auto trustpoint\" command to configure \"grant auto tp-list.\""
PKOCSP_CONTENT_MISMATCH	3-Error	ocsp content mismatch	Expected content not matched with formed content	pki	"Check ocsp request"
PKOCSP_CONTENT_MISMATCH	3-Error	ocsp content mismatch	Expected content not matched with formed content	pki	"Check ocsp request"
PKB3OCSP_FETCH_FAIL	3-Error	OCSP fetch failed. \n Reason : [chars]	OCSP Fetch failed	pki	"Enable socket/tcp debugs to check connectivity with ocsp server"
PKB3OCSP_FETCH_FAIL	3-Error	OCSP fetch failed. \n Reason : [chars]	OCSP Fetch failed	pki	"Enable socket/tcp debugs to check connectivity with ocsp server"
PKB3OCSP_RESPONSE_FAIL	3-Error	OCSP response from [chars] has been discarded. \n Reason : [chars]	OCSP response parse failed	pki	"Check OCSP response"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PKIOCS_RESPONSE_FAIL	3-Error	OCSP response from [chars] has been discarded. \n Reason : [chars]	OCSP response parse failed	pki	"Check OCSP response"
PKIOCS_RESPONSE_STATUS	3-Error	OCSP response status failed \n Reason : [chars]	OCSP response status failed	pki	" Check the ocsip request or ocsip server configurations "
PKIOCS_RESPONSE_STATUS	3-Error	OCSP response status failed \n Reason : [chars]	OCSP response status failed	pki	" Check the ocsip request or ocsip server configurations "
PKIPKCS2_IMPORT_FAILURE	3-Error	PKCS #12 import failed for trustpoint: [chars]. Reason: [chars]	A PKCS #12 import got failed	pki	"No action required. Informational message"
PKIPKCS2_IMPORT_FAILURE	3-Error	PKCS #12 import failed for trustpoint: [chars]. Reason: [chars]	A PKCS #12 import got failed	pki	"No action required. Informational message"
PKI-3-POLLCACERT	3-Error	Polling CA certificate .....	Polling ca certificate.	-	"Check if CA or ldap server is online."
PKI-3-POLLCACERT	3-Error	Polling CA certificate .....	Polling ca certificate.	-	"Check if CA or ldap server is online."
PKI-3-POLLRACERT	3-Error	Polling RA certificate .....	Polling ra certificate.	-	"Check if CA or ldap server is online."
PKI-3-POLLRACERT	3-Error	Polling RA certificate .....	Polling ra certificate.	-	"Check if CA or ldap server is online."
PKI-3-POLLROUTERCERT	3-Error	Polling Router certificate for [chars] .....	Polling router certificate.	-	"Check if CA or ldap server is online."
PKI-3-POLLROUTERCERT	3-Error	Polling Router certificate for [chars] .....	Polling router certificate.	-	"Check if CA or ldap server is online."
PKI-3-QUERY_KEY	3-Error	Querying key pair failed.	Querying public key/private key using subject name failed	-	"Resubmit enrollment request. Check the subject name."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PKI-3-QUERY_KEY	3-Error	Querying key pair failed.	Querying public key/private key using subject name failed	-	"Resubmit enrollment request. Check the subject name."
PKI-3-QUERYCACERT	3-Error	Failed to query CA certificate.	Failed to query ca certificate from ca server.	-	"Use parser command "cr ca auth" and try again."
PKI-3-QUERYCACERT	3-Error	Failed to query CA certificate.	Failed to query ca certificate from ca server.	-	"Use parser command "cr ca auth" and try again."
<del>PKI-3-SET_VRF_FAIL</del>	3-Error	Failed to set VRF : [chars] to socket interface	Failed to set VRF to socket	pki	"Check configured VRF for trustpoint and set VRF"
<del>PKI-3-SET_VRF_FAIL</del>	3-Error	Failed to set VRF : [chars] to socket interface	Failed to set VRF to socket	pki	"Check configured VRF for trustpoint and set VRF"
<del>PKI-3-SET_SOCKET_OPTION_FAIL</del>	3-Error	Failed to set socket option. Option : [chars]	Failed to set socket option	pki	"Enable socket debugs"
<del>PKI-3-SET_SOCKET_OPTION_FAIL</del>	3-Error	Failed to set socket option. Option : [chars]	Failed to set socket option	pki	"Enable socket debugs"
<del>PKI-3-SET_SOURCE_INTERFACE_FAIL</del>	3-Error	Failed to set source interface for [chars] ip address	Failed to set source interface	pki	"Check configured source interface for trustpoint"
<del>PKI-3-SET_SOURCE_INTERFACE_FAIL</del>	3-Error	Failed to set source interface for [chars] ip address	Failed to set source interface	pki	"Check configured source interface for trustpoint"
PKI-3-SET_VRF_FAIL	3-Error	Failed to set VRF : [chars]. VRF not configured	Failed to set VRF	pki	"Check configured VRF for trustpoint and set VRF"
PKI-3-SET_VRF_FAIL	3-Error	Failed to set VRF : [chars]. VRF not configured	Failed to set VRF	pki	"Check configured VRF for trustpoint and set VRF"
<del>PKI-3-BIND_SOCKET_FAIL</del>	3-Error	Failed to bind the socket due to source interface ip : [chars]	Failed to bind socket with source interface	pki	"Check configured source interface for trustpoint"
<del>PKI-3-BIND_SOCKET_FAIL</del>	3-Error	Failed to bind the socket due to source interface ip : [chars]	Failed to bind socket with source interface	pki	"Check configured source interface for trustpoint"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PK</del> SOCKET_CONNECT_FAIL	3-Error	Failed to connect to socket	Failed to connect socket	pki	"Enable socket debugs"
<del>PK</del> SOCKET_CONNECT_FAIL	3-Error	Failed to connect to socket	Failed to connect socket	pki	"Enable socket debugs"
PKI-3-SOCKET_OPEN	3-Error	Failed to open socket.	The failure is caused by socket open	pki	"Check tcp/socket debugging message"
PKI-3-SOCKET_OPEN	3-Error	Failed to open socket.	The failure is caused by socket open	pki	"Check tcp/socket debugging message"
PKI-3-SOCKETSEND	3-Error	Failed to send out message to CA server.	The failure is caused by http transaction.	-	"Check http connection to the CA server"
PKI-3-SOCKETSEND	3-Error	Failed to send out message to CA server.	The failure is caused by http transaction.	-	"Check http connection to the CA server"
<del>PK</del> SUBJECT_NAME_NOT_BER	3-Error	Subject name is not BER	Subject name is not BER. Check subject-name	pki	"Check subject-name present/configured"
<del>PK</del> SUBJECT_NAME_NOT_BER	3-Error	Subject name is not BER	Subject name is not BER. Check subject-name	pki	"Check subject-name present/configured"
<del>PK</del> SUDI_INSTALL_FAILURE	3-Error	[chars] for label: [chars]	SUDI certificate installation failed	pki	"No action required. Informational message"
<del>PK</del> SUDI_INSTALL_FAILURE	3-Error	[chars] for label: [chars]	SUDI certificate installation failed	pki	"No action required. Informational message"
<del>PK</del> SPNCA_CERT_INSTALL_FAILURE	3-Error	CA certificate installation failed for trustpoint:[chars]. Reason: [chars]	CA certificate installation failed	pki	"No action required. Informational message"
<del>PK</del> SPNCA_CERT_INSTALL_FAILURE	3-Error	CA certificate installation failed for trustpoint:[chars]. Reason: [chars]	CA certificate installation failed	pki	"No action required. Informational message"
<del>PK</del> SPNROUTER_CERT_INSTALL_FAILURE	3-Error	Router certificate installation failed for trustpoint: [chars].	Router certificate installation failed	pki	"No action required. Informational message"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PK3NONROUTECERTINSTALL</del>	3-Error	Router certificate installation failed for trustpoint: [chars].	Router certificate installation failed	pki	"No action required. Informational message"
<del>PK3UNUSABLEKEY_USAGE</del>	3-Error	Key-usage type '[chars]' for cert with serial number [chars] is not usable.	The given key-usage type is not usable by IOS. If seen during an import operation this will likely cause the import to fail. Acceptable key-usage types should include Key-encipherment and/or digital-signature. Other key-usage types may be present but will be ignored.	-	"Recreate the certificate with Key-encipherment "digital-signature or both."
<del>PK3UNUSABLEKEY_USAGE</del>	3-Error	Key-usage type '[chars]' for cert with serial number [chars] is not usable.	The given key-usage type is not usable by IOS. If seen during an import operation this will likely cause the import to fail. Acceptable key-usage types should include Key-encipherment and/or digital-signature. Other key-usage types may be present but will be ignored.	-	"Recreate the certificate with Key-encipherment "digital-signature or both."
PK4AUTOCERTIFALWARN	4-Warning	Certificate reenrollment failed. Delaying before retry	Automatic certificate re-enrollment failed. The router will retry in 6 hours or less depending on the expiration time of the router's certificate. Caution - Router's Certificate may expire soon.	pki	"Contact the CA administrator. The router will retry."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PK4AUTCERTFAILWARN	4-Warning	Certificate reenrollment failed. Delaying before retry	Automatic certificate re-enrollment failed. The router will retry in 6 hours or less depending on the expiration time of the router's certificate. Caution - Router's Certificate may expire soon.	pki	"Contact the CA administrator. The router will retry."
PK4CERTENROLL_CANCEL	4-Warning	Enrollment cancelled for trustpoint : [chars]	Certificate enroll cancelled by user	pki	"Contact the CA administrator."
PK4CERTENROLL_CANCEL	4-Warning	Enrollment cancelled for trustpoint : [chars]	Certificate enroll cancelled by user	pki	"Contact the CA administrator."
PK4CERTENROLL_RETRY_FAIL	4-Warning	Certificate reenrollment has failed after [dec] attempts	Automatic certificate re-enrollment failed. Caution - Router's Certificate may expire soon.	pki	"Contact the CA administrator. Enrollment failed."
PK4CERTENROLL_RETRY_FAIL	4-Warning	Certificate reenrollment has failed after [dec] attempts	Automatic certificate re-enrollment failed. Caution - Router's Certificate may expire soon.	pki	"Contact the CA administrator. Enrollment failed."
PK4CERT_EXPIRY_WARNING	4-Warning	[chars] Certificate belonging to trustpoint [chars] will expire in [node]Days [node]hours [node]mins [node]secs at [chars]. \n Issuer-name : [chars] \n Subject-name : [chars] \n Serial-number: [chars] \n Auto-Renewal : [chars]	Warning to indicate that certificate is expiring soon.	pki	"If auto-enrol feature is not configured re-enrol the certificate " manually. Else check if any issues with auto-enrol."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PKICRTE_XPRY_WARNNG	4-Warning	[chars] Certificate belonging to trustpoint [chars] will expire in [node]Days [node]hours [node]mins [node]secs at [chars]. \n Issuer-name : [chars] \n Subject-name : [chars] \n Serial-number: [chars] \n Auto-Renewal : [chars]	Warning to indicate that certificate is expiring soon.	pki	"If auto-enrol feature is not configured re-enrol the certificate " manually. Else check if any issues with auto-enrol."
PKICRCAEN_VADSUBCT	4-Warning	Certificate has a missing or invalid subject name.	The certificate subject name attribute must be present and not empty OR The certificate subject alt name extension must be present and include at least one entry.	pki	"Examine the offending certificate and re-issue it with a proper subject name."
PKICRCAEN_VADSUBCT	4-Warning	Certificate has a missing or invalid subject name.	The certificate subject name attribute must be present and not empty OR The certificate subject alt name extension must be present and include at least one entry.	pki	"Examine the offending certificate and re-issue it with a proper subject name."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
PKI4CRL_LDAP_QUERY	4-Warning	An attempt to retrieve the CRL from [chars] using LDAP has failed	An LDAP query was made to acquire the certificate revocation list but the LDAP server did not respond with the requested information. This is a warning that only applies to the Distribution Point listed. It does not necessarily reflect the overall success or failure of CRL acquisition since a prior or subsequent retrieval of the CRL may have succeeded.	pki	"Check that the LDAP server is reachable and online." "Verify that the CRL is at the requested location"
PKI4CRL_LDAP_QUERY	4-Warning	An attempt to retrieve the CRL from [chars] using LDAP has failed	An LDAP query was made to acquire the certificate revocation list but the LDAP server did not respond with the requested information. This is a warning that only applies to the Distribution Point listed. It does not necessarily reflect the overall success or failure of CRL acquisition since a prior or subsequent retrieval of the CRL may have succeeded.	pki	"Check that the LDAP server is reachable and online." "Verify that the CRL is at the requested location"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PKI4CRLHTPEICFAIL	4-Warning	CRL Request for trustpoint \[chars]\ returned [dec] [chars]	The CRL fetch returned something other than success. If the trustpoint revocation-check includes the keyword 'none' the transaction will succeed. If revocation- checking is not optional the transaction will fail.	pki	"Verify that the CRL is at the location specified " "in the Certificate and that the server is " "operational. To see interaction between IOS and " "the CRL-server please turn on <CmdBold>debug " "crypto pki transactions<NoCmdBold>"
PKI4CRLHTPEICFAIL	4-Warning	CRL Request for trustpoint \[chars]\ returned [dec] [chars]	The CRL fetch returned something other than success. If the trustpoint revocation-check includes the keyword 'none' the transaction will succeed. If revocation- checking is not optional the transaction will fail.	pki	"Verify that the CRL is at the location specified " "in the Certificate and that the server is " "operational. To see interaction between IOS and " "the CRL-server please turn on <CmdBold>debug " "crypto pki transactions<NoCmdBold>"
INSUBN/AUTOCAFAIL	4-Warning	A rollover request for a subordinate CA certificate cannot be auto granted.	A rollover request for a subordinate CA certificate cannot be authorized and the configured auto grant policy will be ignored. This request will be added to the CS server request queue but will need to be manually granted	pki	"Insure that the peer's current sub CA cert is valid."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>PKSCRNATOCERRULE</del>	4-Warning	A rollover request for a subordinate CA certificate cannot be auto granted.	A rollover request for a subordinate CA certificate cannot be authorized and the configured auto grant policy will be ignored. This request will be added to the CS server request queue but will need to be manually granted	pki	"Insure that the peer's current sub CA cert is valid."
<del>PK4CS_PUBLISH_STORAGE</del>	4-Warning	Publish certificate server storage [chars] is inaccessible.	Publish certificate server storage is inaccessible.	-	"Make storage accessible or re-configure the storage location"
<del>PK4CS_PUBLISH_STORAGE</del>	4-Warning	Publish certificate server storage [chars] is inaccessible.	Publish certificate server storage is inaccessible.	-	"Make storage accessible or re-configure the storage location"
<del>PKSDCOMPKEYSEWRNG</del>	4-Warning	The key size [dec] is a weak key size [chars] [chars] and will be deprecated	The size of the key is short and weak	pki	"The weak key suport will be removed.Use a key that has a size of 2048 bits or greater"
<del>PKSDCOMPKEYSEWRNG</del>	4-Warning	The key size [dec] is a weak key size [chars] [chars] and will be deprecated	The size of the key is short and weak	pki	"The weak key suport will be removed.Use a key that has a size of 2048 bits or greater"
<del>PKSDCOMPKEYSEWRNG</del>	4-Warning	The signature algorithm [chars] is a weak algorithm [chars] [chars] and will be deprecated	The signature algorithm is weak algoritm	pki	"Signature algorithm support will be removed. Use a stronger hash algorithm"
<del>PKSDCOMPKEYSEWRNG</del>	4-Warning	The signature algorithm [chars] is a weak algorithm [chars] [chars] and will be deprecated	The signature algorithm is weak algoritm	pki	"Signature algorithm support will be removed. Use a stronger hash algorithm"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PKI4-HTTPREDIRECT	4-Warning	Maximum Redirection limit of [dec] exceeded trying to retrieve URL [chars]	While fetching a document via http there were too many redirections and the operation has aborted. If the trustpoint revocation-check includes the keyword 'none' the transaction will succeed. If revocation- checking is not optional the transaction will fail.	pki	"Verify that the CRL is at the location specified " "in the Certificate and that the server is " "operational. To see interaction between IOS and " "the CRL-server please turn on <CmdBold>debug " "crypto pki transactions<NoCmdBold>"
PKI4-HTTPREDIRECT	4-Warning	Maximum Redirection limit of [dec] exceeded trying to retrieve URL [chars]	While fetching a document via http there were too many redirections and the operation has aborted. If the trustpoint revocation-check includes the keyword 'none' the transaction will succeed. If revocation- checking is not optional the transaction will fail.	pki	"Verify that the CRL is at the location specified " "in the Certificate and that the server is " "operational. To see interaction between IOS and " "the CRL-server please turn on <CmdBold>debug " "crypto pki transactions<NoCmdBold>"
PKI4-NOAUTOSAVE	4-Warning	Configuration was modified. Issue \write memory\ to save new certificate	Auto-Enroll has obtained a new router key pair and certificate. However the running configuration was previously modified.	-	"Issue the \"write memory\" command to save the new certificates and keys."
PKI4-NOAUTOSAVE	4-Warning	Configuration was modified. Issue \write memory\ to save new certificate	Auto-Enroll has obtained a new router key pair and certificate. However the running configuration was previously modified.	-	"Issue the \"write memory\" command to save the new certificates and keys."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>PKI4NCONFIAUTOSAVE</del>	4-Warning	Configuration was modified. Issue \write memory\ to save new IOS PKI configuration	IOS PKI APIs have generated new PKI configuration. However the running configuration was previously modified.	-	"Issue the \"write memory\" command to save the new PKI configuration."
<del>PKI4NCONFIAUTOSAVE</del>	4-Warning	Configuration was modified. Issue \write memory\ to save new IOS PKI configuration	IOS PKI APIs have generated new PKI configuration. However the running configuration was previously modified.	-	"Issue the \"write memory\" command to save the new PKI configuration."
<del>PKI4NCSHADOWAUTOSAVE</del>	4-Warning	Configuration was modified. Issue \write memory\ to save new IOS CA certificate	IOS CA Rollover has generated a shadow CA key pair and certificate. However the running configuration was previously modified.	-	"Issue the \"write memory\" command to save the new certificates and keys."
<del>PKI4NCSHADOWAUTOSAVE</del>	4-Warning	Configuration was modified. Issue \write memory\ to save new IOS CA certificate	IOS CA Rollover has generated a shadow CA key pair and certificate. However the running configuration was previously modified.	-	"Issue the \"write memory\" command to save the new certificates and keys."
<del>PKI4OCSP_SERVER_VALIDATE</del>	4-Warning	The OCSP Server [chars]: responder certificate validation failed	The OCSP server responder certificate validation failed	pki	"Check if the configured OCSP server responder certificate"
<del>PKI4OCSP_SERVER_VALIDATE</del>	4-Warning	The OCSP Server [chars]: responder certificate validation failed	The OCSP server responder certificate validation failed	pki	"Check if the configured OCSP server responder certificate"
<del>PKI4OCSP_SERVER_NO_RESP</del>	4-Warning	The OCSP Server URL [chars] is not reachable or not responding	The OCSP server is not reachable or is not responding to the OCSP request	pki	"Check if the OCSP server is reachable and is receiving the OCSP request"
<del>PKI4OCSP_SERVER_NO_RESP</del>	4-Warning	The OCSP Server URL [chars] is not reachable or not responding	The OCSP server is not reachable or is not responding to the OCSP request	pki	"Check if the OCSP server is reachable and is receiving the OCSP request"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IK4OCSP_SVR_RSP_CMP</del>	4-Warning	The OCSP Server [chars]: error:responder certificate is peer certificate	The OCSP responder certificate is peer certificate	pki	"Check if the configured OCSP server and responder OCSP server is same or not"
<del>IK4OCSP_SVR_RSP_CMP</del>	4-Warning	The OCSP Server [chars]: error:responder certificate is peer certificate	The OCSP responder certificate is peer certificate	pki	"Check if the configured OCSP server and responder OCSP server is same or not"
<del>IK4OCSP_SVR_RSP_DCODE</del>	4-Warning	The OCSP Server [chars]: failed to decode OCSP response data	The OCSP response data decoding is failing	pki	"Check if the configured OCSP server response data"
<del>IK4OCSP_SVR_RSP_DCODE</del>	4-Warning	The OCSP Server [chars]: failed to decode OCSP response data	The OCSP response data decoding is failing	pki	"Check if the configured OCSP server response data"
<del>IK4OCSP_SVR_RSP_DCODE_A</del>	4-Warning	The OCSP Server [chars]: failed to decode OCSP response basic data	The OCSP response data decoding is failing	pki	"Check if the configured OCSP server response data"
<del>IK4OCSP_SVR_RSP_DCODE_A</del>	4-Warning	The OCSP Server [chars]: failed to decode OCSP response basic data	The OCSP response data decoding is failing	pki	"Check if the configured OCSP server response data"
<del>IK4OCSP_SVR_RSP_SCN</del>	4-Warning	The OCSP Server [chars]: error:responder invalid signature algorithm	The OCSP responder has differnt signature algorithm	pki	"Check if the configured and responder OCSP server ""same signature algorithm or not"
<del>IK4OCSP_SVR_RSP_SCN</del>	4-Warning	The OCSP Server [chars]: error:responder invalid signature algorithm	The OCSP responder has differnt signature algorithm	pki	"Check if the configured and responder OCSP server ""same signature algorithm or not"
<del>IK4OCSP_SVR_RSP_VERIFY</del>	4-Warning	The OCSP Server [chars]: failed to verify OCSP response	The OCSP response verification failed	pki	"Check if the configured OCSP server response"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>PKOCSPSRVRESPVRFY</del>	4-Warning	The OCSP Server [chars]: failed to verify OCSP response	The OCSP response verification failed	pki	"Check if the configured OCSP server response"
<del>PKROUTERCRT_EXPIRED</del>	4-Warning	Router certificate expired cannot re-enroll/retry for enrollment/re-enroll	Cannot re-enroll/retry for enroll/re-enroll. Caution - Router's Certificate has expired.	pki	"Enroll the router manually."
<del>PKROUTERCRT_EXPIRED</del>	4-Warning	Router certificate expired cannot re-enroll/retry for enrollment/re-enroll	Cannot re-enroll/retry for enroll/re-enroll. Caution - Router's Certificate has expired.	pki	"Enroll the router manually."
<del>PKSRPOLACUPLD_DISABLED</del>	4-Warning	Auto-trustpool update is disabled.	One of the certificates in the trustpool will expire soon. An attempt to download a new trustpool bundle cannot be attempted since a bundle location is not configured	pki	"Either configure the bundle location in the trustpool policy or manually update the " "trustpool bundle."
<del>PKSRPOLACUPLD_DISABLED</del>	4-Warning	Auto-trustpool update is disabled.	One of the certificates in the trustpool will expire soon. An attempt to download a new trustpool bundle cannot be attempted since a bundle location is not configured	pki	"Either configure the bundle location in the trustpool policy or manually update the " "trustpool bundle."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>TRUSTPOOL_CERTIFICATE</del>	4-Warning	Downloaded Trustpool certificates present prior to image upgrade should be re-downloaded. Issue 'crypto pki trustpool import url <url>' to re-download the certificates.	Downloaded Trustpool certificates present prior to image upgrade should be re-downloaded	pki	"Before image upgrade clean all the downloaded trustpool certificates. Import them again after image upgrade."
<del>TRUSTPOOL_CERTIFICATE</del>	4-Warning	Downloaded Trustpool certificates present prior to image upgrade should be re-downloaded. Issue 'crypto pki trustpool import url <url>' to re-download the certificates.	Downloaded Trustpool certificates present prior to image upgrade should be re-downloaded	pki	"Before image upgrade clean all the downloaded trustpool certificates. Import them again after image upgrade."
<del>TRUSTPOOL_DOWNLOAD</del>	4-Warning	Trustpool download requires [node]u bytes available free storage [node]u bytes is insufficient	Trustpool download failed Free space in nvrn is not sufficient to store Trustpool Certificates. Change the Trustpool policy for its storage	pki	"Change the storage policy for Trustpool"
<del>TRUSTPOOL_DOWNLOAD</del>	4-Warning	Trustpool download requires [node]u bytes available free storage [node]u bytes is insufficient	Trustpool download failed Free space in nvrn is not sufficient to store Trustpool Certificates. Change the Trustpool policy for its storage	pki	"Change the storage policy for Trustpool"
<del>TRUSTPOOL_DOWNLOAD</del>	4-Warning	Trustpool Download failed	Failed to download the trustpool bundle	pki	"Enable debugs and obtain the reason for failure"
<del>TRUSTPOOL_DOWNLOAD</del>	4-Warning	Trustpool Download failed	Failed to download the trustpool bundle	pki	"Enable debugs and obtain the reason for failure"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>PKISPOLEXPADWRNG</del>	4-Warning	The Trustpool will expire in [chars].	One of the certificates in the trustpool will expire soon. If a bundle location is configured an auto update will be attempted at predetermined intervals.	pki	"If a bundle location is configured in the trustpool policy no further action is required. Otherwise" "manual update of trustpool bundle may be needed."
<del>PKISPOLEXPADWRNG</del>	4-Warning	The Trustpool will expire in [chars].	One of the certificates in the trustpool will expire soon. If a bundle location is configured an auto update will be attempted at predetermined intervals.	pki	"If a bundle location is configured in the trustpool policy no further action is required. Otherwise" "manual update of trustpool bundle may be needed."
PKISCRTENROLL_RETRY	5-Notice	Certificate reenrollment has failed and retry will happen for [dec] attempts	Automatic certificate re-enrollment failed. We are printing a consolidated message for the maximum number of retry attempts. The router will continue to retry depending on the expiration time of the router's certificate. The retry attempts will be either 999 default or as specified	pki	"Contact the CA administrator. The router will retry."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PKISCRT_ENROLL_RETRY	5-Notice	Certificate reenrollment has failed and retry will happen for [dec] attempts	Automatic certificate re-enrollment failed. We are printing a consolidated message for the maximum number of retry attempts. The router will continue to retry depending on the expiration time of the router's certificate. The retry attempts will be either 999 default or as specified	pki	"Contact the CA administrator. The router will retry."
PKIAUTHORITIME_CLOCK	6-Information	The system clock has been set.	System clock is valid.	pki	"No action. Informational message."
PKIAUTHORITIME_CLOCK	6-Information	The system clock has been set.	System clock is valid.	pki	"No action. Informational message."
PKI6-AUTOCERTFAIL	6-Information	Certificate reenrollment failed. Delaying before retry	Automatic certificate enrollment or re-enrollment failed The router will retry in 6 hours or less depending on the expiration time of the router's certificate.	pki	"Contact the CA administrator."
PKI6-AUTOCERTFAIL	6-Information	Certificate reenrollment failed. Delaying before retry	Automatic certificate enrollment or re-enrollment failed The router will retry in 6 hours or less depending on the expiration time of the router's certificate.	pki	"Contact the CA administrator."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PKI</del> AUTOENROLL_KEYLOCKED	6-Information	Auto-enroll failed - RSA keypair is locked	Auto-enroll attempted to generate a new RSA keypair. However the existing RSA keypair is locked so auto-enroll cannot proceed	-	"Auto-enroll will retry the enrollment request" "Make sure the existing RSA keypair is unlocked before the next retry"
<del>PKI</del> AUTOENROLL_KEYLOCKED	6-Information	Auto-enroll failed - RSA keypair is locked	Auto-enroll attempted to generate a new RSA keypair. However the existing RSA keypair is locked so auto-enroll cannot proceed	-	"Auto-enroll will retry the enrollment request" "Make sure the existing RSA keypair is unlocked before the next retry"
PKI-6-AUTOSAVE	6-Information	Running configuration saved to NVRAM	Auto-Enroll has obtained a new router key pair and certificate and has done an automatic \write memory\ to save them.	-	"No action required. Informational message"
PKI-6-AUTOSAVE	6-Information	Running configuration saved to NVRAM	Auto-Enroll has obtained a new router key pair and certificate and has done an automatic \write memory\ to save them.	-	"No action required. Informational message"
<del>PKI</del> CERT_ENROLL_AUTO	6-Information	Auto initial enrollment for trustpoint [chars]	Trustpoint enrollment happening automatically.	pki	"No action required. Informational message"
<del>PKI</del> CERT_ENROLL_AUTO	6-Information	Auto initial enrollment for trustpoint [chars]	Trustpoint enrollment happening automatically.	pki	"No action required. Informational message"
<del>PKI</del> CERT_ENROLL_MANUAL	6-Information	Manual enrollment for trustpoint [chars]	Trustpoint enrollment triggered manually	pki	"No action required. Informational message"
<del>PKI</del> CERT_ENROLL_MANUAL	6-Information	Manual enrollment for trustpoint [chars]	Trustpoint enrollment triggered manually	pki	"No action required. Informational message"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PKI6-CERT_INSTALL	6-Information	[chars] \n Trustpoint : [chars] \n Issuer-name : [chars] \n Subject-name : [chars] \n Serial-number: [chars] \n End-date : [chars]	A previous certificate enrollment request was received by the Certificate Authority. It has issued the certificate and sent back a copy	pki	"Informational message only. No action required."
PKI6-CERT_INSTALL	6-Information	[chars] \n Trustpoint : [chars] \n Issuer-name : [chars] \n Subject-name : [chars] \n Serial-number: [chars] \n End-date : [chars]	A previous certificate enrollment request was received by the Certificate Authority. It has issued the certificate and sent back a copy	pki	"Informational message only. No action required."
PKI6-CERT_REENROLL	6-Information	Re-enrollment for trustpoint [chars]	Trustpoint re-enrollment triggered manually	pki	"No action required. Informational message"
PKI6-CERT_REENROLL	6-Information	Re-enrollment for trustpoint [chars]	Trustpoint re-enrollment triggered manually	pki	"No action required. Informational message"
PKI6-CERT_RENEW_AUTO	6-Information	Auto renewing router certificate of trustpoint [chars]	Trustpoint certificate will expire soon and is being automatically renewed	-	"No action required. Informational message"
PKI6-CERT_RENEW_AUTO	6-Information	Auto renewing router certificate of trustpoint [chars]	Trustpoint certificate will expire soon and is being automatically renewed	-	"No action required. Informational message"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>PK</del> CERTROLLOMR_ACIME	6-Information	A rollover ID certificate has been activated under trustpoint [chars] replacing the previous ID certificate. \n Issuer-name : [chars] \n Subject-name : [chars] \n Serial-number: [chars] \n End-date : [chars]	Rollover ID certificate active	pki	"No action needed. Informational message only"
<del>PK</del> CERTROLLOMR_ACIME	6-Information	A rollover ID certificate has been activated under trustpoint [chars] replacing the previous ID certificate. \n Issuer-name : [chars] \n Subject-name : [chars] \n Serial-number: [chars] \n End-date : [chars]	Rollover ID certificate active	pki	"No action needed. Informational message only"
<del>PK</del> CERTSHADOW_ACIME	6-Information	[chars] \n Issuer-name : [chars] \n Subject-name : [chars] \n Serial-number: [chars] \n End-date : [chars]	Shadow CA/ID certificate has been activated.	pki	"No action needed. Informational message only"
<del>PK</del> CERTSHADOW_ACIME	6-Information	[chars] \n Issuer-name : [chars] \n Subject-name : [chars] \n Serial-number: [chars] \n End-date : [chars]	Shadow CA/ID certificate has been activated.	pki	"No action needed. Informational message only"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PKI-CERTSHADOWNSIAL</del>	6-Information	[chars] \n Issuer-name : [chars] \n Subject-name : [chars] \n Serial-number: [chars] \n End-date : [chars]	Shadow CA/ID certificate has been installed.	pki	"No action needed. Informational message only"
<del>PKI-CERTSHADOWNSIAL</del>	6-Information	[chars] \n Issuer-name : [chars] \n Subject-name : [chars] \n Serial-number: [chars] \n End-date : [chars]	Shadow CA/ID certificate has been installed.	pki	"No action needed. Informational message only"
PKI-6-CERTIFSRECV	6-Information	Could not receive router's Certificate from file system.	The router's certificate could not be received from file system.	pki	"Verify the enrollment URL and that the router is able to" "read from the file system."
PKI-6-CERTIFSRECV	6-Information	Could not receive router's Certificate from file system.	The router's certificate could not be received from file system.	pki	"Verify the enrollment URL and that the router is able to" "read from the file system."
PKI-6-CERTIFSEND	6-Information	Could not send Certificate enrollment request to file system.	The certificate enrollment request could not be sent to file system.	pki	"Verify the enrollment URL and that the router is able to" "write to the file system."
PKI-6-CERTIFSEND	6-Information	Could not send Certificate enrollment request to file system.	The certificate enrollment request could not be sent to file system.	pki	"Verify the enrollment URL and that the router is able to" "write to the file system."
PKI-6-CERTPENDING	6-Information	Enter manual authentication ...	CA server want to manually authenticate the router.	-	"Follow a manual authentication procedure."
PKI-6-CERTPENDING	6-Information	Enter manual authentication ...	CA server want to manually authenticate the router.	-	"Follow a manual authentication procedure."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
PKI-6-CERTREJECT	6-Information	[chars]	A previous certificate enrollment request was received by the Certificate Authority. It has rejected the enrollment request.	pki	"Contact the Certificate Authority administrator."
PKI-6-CERTREJECT	6-Information	[chars]	A previous certificate enrollment request was received by the Certificate Authority. It has rejected the enrollment request.	pki	"Contact the Certificate Authority administrator."
PKI-6-CERTRENEWMANUAL	6-Information	Please renew the router certificate for trustpoint [chars]	Trustpoint certificate will expire soon and should be renewed	-	"Obtain a new certificate from the Certificate Authority"
PKI-6-CERTRENEWMANUAL	6-Information	Please renew the router certificate for trustpoint [chars]	Trustpoint certificate will expire soon and should be renewed	-	"Obtain a new certificate from the Certificate Authority"
PKI-6-CONFIGAUTOSAVE	6-Information	Running configuration saved to NVRAM	IOS PKI APIs have generated new PKI configuration and has done an automatic \write memory\ to save them.	-	"No action required. Informational message"
PKI-6-CONFIGAUTOSAVE	6-Information	Running configuration saved to NVRAM	IOS PKI APIs have generated new PKI configuration and has done an automatic \write memory\ to save them.	-	"No action required. Informational message"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PKI6CRLHITHEICRDR</del>	6-Information	CRL Request for trustpoint \[chars]\ returned [dec] [chars] -> [chars]	The CRL fetch returned a redirect directive. This need not be an error if the file exists at the redirected location.	pki	"If no other errors are seen then the CRL was " "fetched from the new location and no action is " "necessary. To see interaction between IOS and " "the CRL-server please turn on <CmdBold>debug " "crypto pki transactions<NoCmdBold>"
<del>PKI6CRLHITHEICRDR</del>	6-Information	CRL Request for trustpoint \[chars]\ returned [dec] [chars] -> [chars]	The CRL fetch returned a redirect directive. This need not be an error if the file exists at the redirected location.	pki	"If no other errors are seen then the CRL was " "fetched from the new location and no action is " "necessary. To see interaction between IOS and " "the CRL-server please turn on <CmdBold>debug " "crypto pki transactions<NoCmdBold>"
PKI-6-CS_DELETE	6-Information	Certificate Server is deleted.	Certificate Server is deleted.	-	"No action required. Informational message."
PKI-6-CS_DELETE	6-Information	Certificate Server is deleted.	Certificate Server is deleted.	-	"No action required. Informational message."
<del>PKI6CS_DELETE_TP_KEY</del>	6-Information	Trustpoint and key deleted.	Trustpoint and key used by the Certificate Server are deleted.	-	"No action required. Informational message."
<del>PKI6CS_DELETE_TP_KEY</del>	6-Information	Trustpoint and key deleted.	Trustpoint and key used by the Certificate Server are deleted.	-	"No action required. Informational message."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
PKI-6-CS_DISABLED	6-Information	Certificate server now disabled. \n Reason : [chars]	Certificate server now disabled.	-	"No action required. Informational message."
PKI-6-CS_DISABLED	6-Information	Certificate server now disabled. \n Reason : [chars]	Certificate server now disabled.	-	"No action required. Informational message."
PKI-6-CS_ENABLED	6-Information	Certificate server now enabled.	Certificate server now enabled.	-	"No action required. Informational message."
PKI-6-CS_ENABLED	6-Information	Certificate server now enabled.	Certificate server now enabled.	-	"No action required. Informational message."
PKI6CS_GRANT_AUTO	6-Information	All enrollment requests will be automatically granted.	All enrollment requests will be automatically granted.	-	"No action required. Informational message."
PKI6CS_GRANT_AUTO	6-Information	All enrollment requests will be automatically granted.	All enrollment requests will be automatically granted.	-	"No action required. Informational message."
<del>PKI6CS_GRANT_AUTO_CRT</del>	6-Information	All rollover subordinate CA cert requests will be automatically granted.	All rollover subordinate CA cert requests will be automatically granted.	-	"No action required. Informational message."
<del>PKI6CS_GRANT_AUTO_CRT</del>	6-Information	All rollover subordinate CA cert requests will be automatically granted.	All rollover subordinate CA cert requests will be automatically granted.	-	"No action required. Informational message."
<del>PKI6CS_GRANT_AUTO_RA</del>	6-Information	Enrollment requests coming from known RAs will be automatically granted.	Enrollment requests coming from known RAs will be automatically granted.	-	"No action required. Informational message."
<del>PKI6CS_GRANT_AUTO_RA</del>	6-Information	Enrollment requests coming from known RAs will be automatically granted.	Enrollment requests coming from known RAs will be automatically granted.	-	"No action required. Informational message."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PKCSRANT_AIORACRT	6-Information	All rollover RA cert requests will be automatically granted.	All rollover RA cert requests will be automatically granted.	-	"No action required. Informational message."
PKCSRANT_AIORACRT	6-Information	All rollover RA cert requests will be automatically granted.	All rollover RA cert requests will be automatically granted.	-	"No action required. Informational message."
PKI6CS_REJECT_AUTO	6-Information	All enrollment requests will be automatically rejected.	All enrollment requests will be automatically rejected.	-	"No action required. Informational message."
PKI6CS_REJECT_AUTO	6-Information	All enrollment requests will be automatically rejected.	All enrollment requests will be automatically rejected.	-	"No action required. Informational message."
PKCSRCLLOVR_ACIME	6-Information	[chars] Rollover certificate has been activated for [chars] replacing the previous [Sub/RA]CA certificate \n Issuer-name : [chars] \n Subject-name : [chars] \n Serial-number: [chars] \n End-date : [chars]	Rollover certificate activated	pki	"Informational message only. No action needed."
PKCSRCLLOVR_ACIME	6-Information	[chars] Rollover certificate has been activated for [chars] replacing the previous [Sub/RA]CA certificate \n Issuer-name : [chars] \n Subject-name : [chars] \n Serial-number: [chars] \n End-date : [chars]	Rollover certificate activated	pki	"Informational message only. No action needed."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>PKCSROLIOMRAIABLE</del>	6-Information	[Sub/RA]CS Rollover certificate has been generated for [chars] and it will be activated at [chars] \n Issuer-name : [chars] \n Subject-name : [chars] \n Serial-number: [chars] \n End-date : [chars]	Rollover certificate generated	pki	"Informational message only. No action needed."
<del>PKCSROLIOMRAIABLE</del>	6-Information	[Sub/RA]CS Rollover certificate has been generated for [chars] and it will be activated at [chars] \n Issuer-name : [chars] \n Subject-name : [chars] \n Serial-number: [chars] \n End-date : [chars]	Rollover certificate generated	pki	"Informational message only. No action needed."
PKI6CSR_FINGERPRINT	6-Information	\n CSR Fingerprint MD5 : [chars] \n CSR Fingerprint SHA1: [chars] \n CSR Fingerprint SHA2: [chars]	Fingerprint display	pki	"Information message"
PKI6CSR_FINGERPRINT	6-Information	\n CSR Fingerprint MD5 : [chars] \n CSR Fingerprint SHA1: [chars] \n CSR Fingerprint SHA2: [chars]	Fingerprint display	pki	"Information message"
<del>PKCSRINCRNUNCND</del>	6-Information	\n CSR Fingerprint MD5 unsigned : [chars]	Fingerprint display	pki	"Information message"
<del>PKCSRINCRNUNCND</del>	6-Information	\n CSR Fingerprint MD5 unsigned : [chars]	Fingerprint display	pki	"Information message"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PKI6</del> OCDSA_CRT_WIHSHA1	6-Information	User has accepted the security implication of using lesser hash strengthSHA1 for the Elliptic Curve Key present in the certificate	The SHA1 hash algorithm is not recommended for use with the elliptic curve key in this certificate. It is recommended that SHA2 or stronger hash algorithm be used.	pki	"Informational message only. No action required."
<del>PKI6</del> OCDSA_CRT_WIHSHA1	6-Information	User has accepted the security implication of using lesser hash strengthSHA1 for the Elliptic Curve Key present in the certificate	The SHA1 hash algorithm is not recommended for use with the elliptic curve key in this certificate. It is recommended that SHA2 or stronger hash algorithm be used.	pki	"Informational message only. No action required."
PKI6FINGERPRINT_EXEC	6-Information	Using fingerprint provided from exec CLI to authenticate the CA for Trustpoint-[chars] with fingerprint-[chars]	Fingerprint has been provided through exec CLI	-	"Notifying that exec CLI was used to provide the fingerprint." "It is possible that the CA fingerprint is different than configured fingerprint"
PKI6FINGERPRINT_EXEC	6-Information	Using fingerprint provided from exec CLI to authenticate the CA for Trustpoint-[chars] with fingerprint-[chars]	Fingerprint has been provided through exec CLI	-	"Notifying that exec CLI was used to provide the fingerprint." "It is possible that the CA fingerprint is different than configured fingerprint"
PKI6OCSP_SUCCESS	6-Information	OCSP response from [chars] has been successfully processed for \n certificate : [chars] \n Serial-number: [chars] \n Result : [chars]	OCSP response successfully processed.	pki	"Informational message only. No action needed."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PKI-6-OCSP_SUCCESS	6-Information	OCSP response from [chars] has been successfully processed for \n certificate : [chars] \n Serial-number: [chars] \n Result : [chars]	OCSP response successfully processed.	pki	"Informational message only. No action needed."
<del>PKI-6-OCSP_SUCCESS</del> PKCS2_EXPORT_SUCCESS	6-Information	PKCS #12 Export from trustpoint [chars] was successfully Exported.	A PKCS #12 has been generated and successfully exported.	-	"No action required. Informational message"
<del>PKI-6-OCSP_SUCCESS</del> PKCS2_EXPORT_SUCCESS	6-Information	PKCS #12 Export from trustpoint [chars] was successfully Exported.	A PKCS #12 has been generated and successfully exported.	-	"No action required. Informational message"
<del>PKI-6-OCSP_SUCCESS</del> PKCS2_IMPORT_SUCCESS	6-Information	PKCS #12 import in to trustpoint [chars] successfully imported.	A PKCS #12 has been successfully imported.	-	"No action required. Informational message"
<del>PKI-6-OCSP_SUCCESS</del> PKCS2_IMPORT_SUCCESS	6-Information	PKCS #12 import in to trustpoint [chars] successfully imported.	A PKCS #12 has been successfully imported.	-	"No action required. Informational message"
<del>PKI-6-OCSP_SUCCESS</del> PKI-6-CRL_DOWNLOADED	6-Information	CRL download successful. \n Trustpoint : [chars] \n CDP-URL : [chars] \n Issuer : [chars]	CRL is downloaded and successfully inserted in the database. Notification for the same is sent to applications registered.	pki	"Informational message only. No action required."
<del>PKI-6-OCSP_SUCCESS</del> PKI-6-CRL_DOWNLOADED	6-Information	CRL download successful. \n Trustpoint : [chars] \n CDP-URL : [chars] \n Issuer : [chars]	CRL is downloaded and successfully inserted in the database. Notification for the same is sent to applications registered.	pki	"Informational message only. No action required."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PKI6SHADOWAUTOSAVE	6-Information	Running configuration saved to NVRAM	IOS CA Rollover has generated a shadow CA key pair and certificate and has done an automatic \write memory\ to save them.	-	"No action required. Informational message"
PKI6SHADOWAUTOSAVE	6-Information	Running configuration saved to NVRAM	IOS CA Rollover has generated a shadow CA key pair and certificate and has done an automatic \write memory\ to save them.	-	"No action required. Informational message"
PKI6SLA_TRUSTPOINT_CHANGE	6-Information	Attempting to override SLA Trustpoint. \n The current running SLA trustpoint config will be retained \n Config-Replace errors corresponding to SLA TrustPoint may be \n ignored.	PKI Event for both success/failure.	pki	"Informational message only. No action needed."
PKI6SLA_TRUSTPOINT_CHANGE	6-Information	Attempting to override SLA Trustpoint. \n The current running SLA trustpoint config will be retained \n Config-Replace errors corresponding to SLA TrustPoint may be \n ignored.	PKI Event for both success/failure.	pki	"Informational message only. No action needed."
PKI-6-SUDI_INFO	6-Information	PKI: [chars]	Information about SUDI	pki	"No action required. Informational message"
PKI-6-SUDI_INFO	6-Information	PKI: [chars]	Information about SUDI	pki	"No action required. Informational message"
PKI-6-SUDI_INFO	6-Information	-	DCM_CLI_DP Service Disabled	SRVNAME_DCM_CLI_DP	SYSLOGDOC_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PKI-6-SUDI_INFO	6-Information	-	DCM_CLI_DP Service nabled	SRVNAME_DCM_CLI_DP	SYSLOGDOC_NO_ACTION
PKI-6-SUDI_INFO	6-Information	-	DCM_CORE Service Disabled	SRVNAME_DCM_CORE	SYSLOGDOC_NO_ACTION
PKI-6-SUDI_INFO	6-Information	-	DCM_CORE Service nabled	SRVNAME_DCM_CORE	SYSLOGDOC_NO_ACTION
PKI-6-SUDI_INFO	6-Information	-	DCM_SNMP_DP Service Disabled	SRVNAME_DCM_SNMP_DP	SYSLOGDOC_NO_ACTION
PKI-6-SUDI_INFO	6-Information	-	DCM_SNMP_DP Service nabled	SRVNAME_DCM_SNMP_DP	SYSLOGDOC_NO_ACTION
PKI-6-TRUSTPOINT_CREATE	6-Information	Trustpoint: [chars] created successfully	Trustpoint creation is successful	pki	"No action required. Informational message"
PKI-6-TRUSTPOINT_CREATE	6-Information	Trustpoint: [chars] created successfully	Trustpoint creation is successful	pki	"No action required. Informational message"
PKI-6-TRUSTPOINT_DELETE	6-Information	Trustpoint: [chars] deleted successfully	Trustpoint deletion is successful	pki	"No action required. Informational message"
PKI-6-TRUSTPOINT_DELETE	6-Information	Trustpoint: [chars] deleted successfully	Trustpoint deletion is successful	pki	"No action required. Informational message"
PKI-6-TRUSTPOOL_AUTO_UPDATE	6-Information	Auto-trustpool update in progress from [chars].	One of the certificates in the trustpool will expire soon. An attmpt to download a new trustpool bundle is in progress	pki	"Since an url has been configured that identifies the location to aquire the trustpool bundle " "then no action is required."
PKI-6-TRUSTPOOL_AUTO_UPDATE	6-Information	Auto-trustpool update in progress from [chars].	One of the certificates in the trustpool will expire soon. An attmpt to download a new trustpool bundle is in progress	pki	"Since an url has been configured that identifies the location to aquire the trustpool bundle " "then no action is required."
PKI-6-TRUSTPOOL_DOWNLOAD_SUCCESS	6-Information	Trustpool Download is successful	Trustpool Download is successful	pki	"No action required. Informational message"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PKI</del> SPD_DWN_SUCCESS	6-Information	Trustpool Download is successful	Trustpool Download is successful	pki	"No action required. Informational message"
PKT_MANP3ALLOC_FAIL	3-Error	retcode %u	A critical failure occurred when trying to obtain packet memory	cpp-ucode	LOG_STD_ACTION
<del>PKI</del> PROXYMEM_HANDLER	1-Alert	[node][node]%u	Could not add memory to memory pool	cpp-ucode	LOG_STD_ACTION
<del>PKI</del> PROXYMEM_HANDLER	1-Alert	[chars] [node][node]%u	IPC failed and could not return memory	cpp-ucode	LOG_STD_ACTION
<del>PKI</del> PROXY_IPC_FAILED	2-Critical	[chars]	Packet logger proxy IPC handler could not be initialized.	cpp-ucode	LOG_STD_ACTION
<del>PKI</del> PROXY_IPC_SEND_FAILED	3-Error	[chars] [chars]	Transmission of an IPC message by the packet logger failed. ACL and stats lost.	cpp-ucode	LOG_STD_ACTION
<del>PKI</del> PROXY_IPC_BAD_SUBTYPE	3-Error	[dec]	Invalid subtype was passed to packet logger proxy IPC handler.	cpp-ucode	LOG_STD_ACTION
<del>PKI</del> PROXY_IPC_ALLOC_FAILED	3-Error	[chars]	Allocation of an IPC packet buffer by the packet logger proxy failed.	cpp-ucode	LOG_STD_ACTION
<del>PKI</del> PROXY_IPC_SEND_FAILED	3-Error	[chars] [chars]	Transmission of an IPC message by the packet logger proxy failed.	cpp-ucode	LOG_STD_ACTION
<del>PKI</del> PROXY_IPC_ALLOC_FAILED	4-Warning	[chars]	Allocation of an IPC packet buffer by the packet logger failed.	cpp-ucode	LOG_STD_ACTION
PKILOG4PROXY_DUP_IPC	4-Warning	[chars]	Duplicate initialization IPC message received for user [dec] client id [dec].	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IPICPROXYNADUSERX</del>	4-Warning	[node]%u	IPC message contained invalid user index for client id.	cpp-ucode	LOG_STD_ACTION
<del>IPICPROXYNADMLEN</del>	4-Warning	[dec]:[dec] len [dec] flags 0x[hec] source [dec]	Invalid IPC message length.	cpp-ucode	LOG_STD_ACTION
<del>IPACMCEADMDNAD</del>	2-Critical	Secure UDI validation failed. [chars]	Secure UDI validation for the chassis failed. The router failed to authenticate itself	iosxe-chassismgr	LOG_STD_ACTION
<del>IPACMROBROCMSCHE</del>	3-Error	Failed to send Breakout command to hardware.	A messages that was sent to the hardware module was not delivered correctly. The failure most likely occurred because of incorrect switch number or non-existing breakout port number specified or a software communication error.	iosxe-iosd-infra	LOG_STD_ACTION
<del>PLAIFRMCPABLIY4CAL</del>	4-Warning	Fatal Initialization Error - [chars]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
<del>PLAIFRMCPABLIY4INT</del>	4-Warning	Fatal Initialization Error - [chars]	An internal software error occurred.	-	LOG_SID_SHTECH_ACTION
<del>IPACMCEADMDNAD</del>	3-Error	\n C2950 BIST failed for memory [chars] count [dec]\n	During the Power-On Self Test the Built-In memory test on the internal chip memories has failed. This could be due to an ASIC defect.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HAFCM_CASB_NI_AURE</del>	3-Error	\nAsic driver initialization has failed\n	One of the ASIC initialization steps has failed. This could be a failure in the PCI configuration setup I2C initialization Build-in self test on the internal chip memories or other miscellaneous initialization steps due to a hardware defect.	-	LOG_STD_ACTION
<del>HAFCM_CASB_NI_AURE</del>	3-Error	\n Unable to initialize the external packet memory \n	During the switch driver initialization there was an error in the external packet memory initialization. This could be a defect in the ASIC or in the external SDRAM.	-	LOG_STD_ACTION
<del>HAFCM_CASB_NI_AURE</del>	3-Error	\n GBP currently FULL or UNAVAILABLE.	During the switch driver initialization an error has been detected in the external packet memory. This could be a defect in the ASIC or in the external SDRAM.	-	LOG_STD_ACTION
<del>HAFCM_CASB_NI_AURE</del>	3-Error	\n Invalid copy [dec] for table [chars]\n	This message means that there was an attempt to read or write an invalid copy of the switch internal memory. This is a recoverable error but should not happen.	-	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PACK_CABM_IDX_FAIL	3-Error	\n Invalid index [dec] for table [chars]\n	This message means that there was an attempt to access an invalid index of the switch internal memory. This is a recoverable error but should not happen.	-	LOG_SID_RECUR_ACTION
PACK_CABM_INIT_FAIL	3-Error	\n The switch memory resources could not be allocated for [chars] initialization failed	During the switch driver initialization driver-related memory resources could not be allocated. This could be a hardware defect.	-	LOG_STD_ACTION
PACK_CABM_READ_FAIL	3-Error	\n Read memory failed for memory [chars] at index [dec]\n	An attempt to read a valid location in the internal chip memory was failed. This could be due to a hardware defect.	-	LOG_SID_RECUR_ACTION
PACK_CABM_WRITE_FAIL	3-Error	\n Write memory failed for memory [chars] at index [dec]\n	An attempt to write to a location in the internal chip memory was failed. This might be caused by writing to an invalid memory location or a defect in the hardware.	-	LOG_SID_RECUR_ACTION
PACK_CABM_PHY_FAIL	3-Error	\n Unable to read PHY register at addr [hec] for phy id [hec]\n	This message means that there was a failure to read from or write to a PHY register on the switch. This could be caused by a defect in the MII/GMII interface of the switch.	-	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HAFCM_CASRCIND_AURE</del>	3-Error	\n The number of ASICs expected were [dec] PCI bus scan found [dec]\n	During the switch driver initialization incorrect number of ASICs were found on the PCI bus or no ASICs with a correct PCI value was found. This could be caused by a system PCI bus defect or incompatible software version running on the switch.	-	LOG_STD_ACTION
<del>HAFCM_CASRCIND_AURE</del>	3-Error	\n The PCI address space initialization failed	During the switch driver initialization the PCI address space for the ASIC could not be initialized. This could be a system PCI-bus-related issue.	-	LOG_STD_ACTION
<del>HAFCM_CASRCIND_AURE</del>	3-Error	\n PCI address space test failed Wrote 0x[hec] read 0x[hec] re-read 0x[hec]\n	During the Power-On Self Test it is found that the PCI address space for the ASIC has not been mapped correctly. This could be a system PCI-bus-related issue.	-	LOG_STD_ACTION
<del>HAFCM_CASRCIND_AURE</del>	3-Error	\n Register read failed for register [chars] in [chars]\n	An attempt to read a valid location in the internal chip register failed. This could be due to a hardware defect.	-	LOG_SID_RECUR_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>PACM_CASG_WFH_ALE</del>	3-Error	\n Register write failed for register [chars] in [chars]\n	An attempt to write to a location in the internal chip register failed. This might be cause by writing to a invalid register location or a defect in the hardware.	-	LOG_SID_RECUR_ACTION
<del>PACM_CASG_FNC_ALE</del>	3-Error	\n S-channel operation timeout for opcode [chars]\n	This message means that there was a failure to read or write to an ASIC register or a memory location because of an ASIC internal bus failure.	-	LOG_SID_RECUR_ACTION
<del>PACM_CASG_FRK_ALE</del>	3-Error	\n S-channel operation read register failure at addr [hec]\n	This message means that there was a failure to read a ASIC register which might be caused by an invalid register address or an internal bus failure.	-	LOG_SID_RECUR_ACTION
<del>PACM_CASG_SMC_ALE</del>	3-Error	\n The board information could not be read correctly initialization failed	During switch driver initialization there was a failure to read the system board information. This could be a hardware problem.	-	LOG_STD_ACTION
<del>PACM_CASG_SPC_ALE</del>	3-Error	[chars] [chars] [chars] [chars]	The port is not operating the startup selftest has failed	-	LOG_STD_ACTION
<del>PEN_NRM_AOC_ALE</del>	1-Alert	Alarm asserted on switch [dec] : [chars]	Error condition detected on external alarm contact	hardware	LOG_STD_ACTION
<del>PEN_NRM_AOC_ALE</del>	1-Alert	Alarm asserted: [chars]	Error condition detected on external alarm contact	hardware	LOG_STD_ACTION
<del>PEN_NRM_AOC_ALE</del>	1-Alert	Alarm cleared on switch [dec] : [chars]	Error condition cleared on external alarm contact	hardware	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>RACMENVRAAOKULR</del>	1-Alert	Alarm cleared: [chars]	Error condition cleared on external alarm contact	hardware	LOG_STD_ACTION
<del>RACMENVRAPSACCESS</del>	1-Alert	[chars]	RPS communication error detected	firmware	LOG_STD_ACTION
<del>RACMENVPSBCRCHNO</del>	1-Alert	[chars] [dec]	This event indicates RPS is backoff power from port	hardware	LOG_STD_ACTION
<del>RACMENVPSBCRCHNO</del>	1-Alert	[chars] [dec]	This event indicates RPS is backing up power to port	hardware	LOG_STD_ACTION
<del>RACMENVRAPSANFID</del>	1-Alert	[chars]	RPS fan failure detected	hardware	"Disconnect any switches connected to the RPS and " "replace the fan immediately"
<del>RACMENVPSORCURN</del>	1-Alert	[chars]	RPS overcurrent condition detected	hardware	"Unplug the switches that are being backed off"
<del>RACMENVRAPSANFID</del>	1-Alert	RPS power supply [chars] fan failure detected	RPS power supply fan failure has been detected	hardware	"Disconnect any switches connected to the RPS and " "replace the power supply immediately"
<del>RACMENVRAPSMACH</del>	1-Alert	[chars]	Power supplies inserted in RPS are incompatible	firmware	"Remove either one of the power supplies or " "insert compatible power supplies"
<del>RACMENVPSMAJUY</del>	1-Alert	[chars] signal on RPS power supply [chars] is faulty	The specified power supply of RPS has faulty signal	hardware	LOG_STD_ACTION
<del>RACMENVPSHEMCHA</del>	1-Alert	RPS power supply [chars] temperature has reached critical threshold	The power supply inside RPS has reached the critical threshold. RPS cannot function normally	hardware	"The external temperature is very high." " Reduce the temperature in the room immediately"
<del>RACMENVRASSANBY</del>	1-Alert	[chars]	Faulty RPS detected	firmware	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PLATFORM_RPS_POWER_BAD	1-Alert	[chars]	RPS system power changed state to bad. It may not provide backup	hardware	"Check the power supplies in RPS. If fault " "persists replace the power supply"
PLATFORM_RPS_POWER_GOOD	1-Alert	[chars]	RPS system power changed state to good	hardware	'LOG_SID_NO_ACTION'
PLATFORM_RPS_TEMP_CRITICAL	1-Alert	RPS temperature has reached critical threshold	The temperature sensor value inside RPS has reached the critical threshold. RPS cannot function normally	hardware	"The external temperature is very high." " Reduce the temperature in the room immediately"
PLATFORM_RPS_TEMP_WARNING	2-Critical	RPS temperature has reached warning threshold	The temperature sensor value inside RPS has reached the warning threshold. RPS can function normally until the temperature reaches the critical threshold	hardware	"The external temperature is high." " Reduce the temperature in the room"
PLATFORM_RPS_BACKOFF_FAIL	3-Error	[chars]	RPS is continuing to backup switch even though switch issued a command to backoff	firmware	LOG_SID_NO_ACTION
PLATFORM_RPS_STATE_STANDBY	3-Error	[chars]	RPS has changed state to standby. It will no longer backup the switch	hardware	'LOG_SID_NO_ACTION'
PLATFORM_RPS_FAIL_BACKUP	3-Error	[chars]	RPS error condition detected	firmware	"This problem could be transient. If fault " "persists remove and reconnect the switch"
PLATFORM_RPS_TEMP_NORMAL	5-Notice	RPS temperature is within the acceptable limit	The temperature sensor value inside RPS is within the normal limit	hardware	LOG_SID_NO_ACTION
PLATFORM_ENV-6RPS	6-Information	Redundant Power SupplyRPS [chars]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HAIFORMENVRPS_NO	6-Information	Redundant Power Supply [chars]	Related info about RPS	firmware	LOG_SID_NO_ACTION
HAIFORMENVRPS_PSE	6-Information	Redundant Power SupplyRPS [chars]	Redundant Power Supply RPS changed state	firmware	LOG_SID_NO_ACTION
HAIFORMENVRPS_INSERTED	6-Information	[chars]	Power supply inserted in RPS	hardware	'LOG_SID_NO_ACTION'
HAIFORMENVRPS_REMOVED	6-Information	[chars]	Power supply removed from RPS	hardware	'LOG_SID_NO_ACTION'
HAIFORMENVRPS_PDA	5-Notice	ERSPAN Session: Configurable MTU size supported is 344 Default value is 9000	ERSPAN Session: Configurable MTU size supported is 344 Default value is 9000	bigbang-l2	LOG_STD_ACTION
HAIFORMENVRPS_INIT_FAILED	3-Error	Failed to initialize QEMU chassis Interface	Failed to init QEMU chassis interface with platform	QEMUDDISCOMPONENT	LOG_STD_ACTION
HAIFORMENVRPS_CREATE_FAILED	3-Error	Failed to create process for rsf deinit	Failed to create a process	QEMUDDISCOMPONENT	LOG_STD_ACTION
HAIFORMENVRPS_REGISTER_FAILED	3-Error	Failed to register with the OIR Library	Failed to register with the OIR Library	QEMUDDISCOMPONENT	LOG_STD_ACTION
HAIFORMENVRPS_CREATE_OIR_FAILED	3-Error	Failed to create OIR process during init	Failed to create process to do OIR init	QEMUDDISCOMPONENT	LOG_STD_ACTION
HAIFORMENVRPS_REQUEST_PEER_RELOAD_FAILED	3-Error	Failed to send message to platform to request a peer reload	Unable to send a message to the platform	QEMUDDISCOMPONENT	LOG_STD_ACTION
HAIFORMENVRPS_REGISTER_RF_FAILED	3-Error	Failed to register with RF rc = [dec]	Failed to register with RF during system initialization	QEMUDDISCOMPONENT	LOG_STD_ACTION
HAIFORMENVRPS_GET_SLOT_ID_FAILED	3-Error	Failed to get the slot ID from OIR Library	Failed to get the slot ID from OIR Library	QEMUDDISCOMPONENT	LOG_STD_ACTION
HAIFORMENVRPS_INIT_QEMU_FAILED	3-Error	Unable to initialize QEMU chassis SPI client	Failed to init QEMU chassis SPI client	QEMUDDISCOMPONENT	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HAIFORMHASPNOTREADY	3-Error	SPI is not ready cannot communicate with platform	Unable to communicate to the platform as SPI is not ready	QEMUDDISCOMPONENT	LOG_STD_ACTION
HAIFORMHASPNOTCREAE	3-Error	Failed to create SPI process during init	Failed to create process to do SPI init	QEMUDDISCOMPONENT	LOG_STD_ACTION
HAIFORMHASPNOTFALLBACK	3-Error	Redundancy mode fallback to SSO is not supported	Cannot fallback to redundancy mode SSO	QEMUDDISCOMPONENT	LOG_STD_ACTION
HAIFORMHASPTRACEINT	3-Error	Cannot allocate the trace buffer for [chars]	Standby switch is being booted in the indicated fallback mode. Additional entries in log will indicate the reason for this action.	QEMUDDISCOMPONENT	LOG_SID_NO_ACTION
HAIFORMHASPWATCHBOLEAN	3-Error	Failed to create watched boolean during init	Failed to allocate memory for watched boolean	QEMUDDISCOMPONENT	LOG_STD_ACTION
HAIFORMHASPWATCHBOLEANACT	3-Error	Failed to create watched boolean during init	Failed to allocate memory for watched boolean	QEMUDDISCOMPONENT	LOG_STD_ACTION
HAIFORMHASPWATCHRELOAD	4-Warning	Reloading the Standby due to [chars] [chars]	Application on the Active has requested a reload of the Standby.	QEMUDDISCOMPONENT	LOG_STD_ACTION
HAIFORMHASPWATCHRELOADERR	4-Warning	Failed to reload the Standby due to [chars] [chars]	-	QEMUDDISCOMPONENT	LOG_STD_ACTION
HAIFORMHASPWATCHRELOADSHELF	4-Warning	Reloading the shelf due to [chars] [chars]	Application on the Active has requested a reload of the shelf.	QEMUDDISCOMPONENT	LOG_STD_ACTION
HAIFORMHASPWATCHRELOADSHELFERR	4-Warning	Failed to reload the shelf due to [chars] [chars]	-	QEMUDDISCOMPONENT	LOG_STD_ACTION
HAIFORMHASPWATCHRELOADMODE	6-Information	[chars] supervisor initializing for [chars] mode	Informational message regarding the redundancy mode of the supervisor	QEMUDDISCOMPONENT	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PAFCRMEFC</del> CSHROR	3-Error	[chars] [chars] [chars] [chars]	The port fcs error threshold max has reached	-	LOG_STD_ACTION
<del>PAFCRMEFC</del> RLINKFAIT	3-Error	[chars] [chars] [chars] [chars]	The port link is not coming up the startup selftest has failed	-	LOG_STD_ACTION
<del>PAFCRMEFC</del> PNICWRMG	3-Error	[chars] [chars] [chars] [chars]	The port is not forwarding the startup selftest has failed	-	LOG_STD_ACTION
<del>PAFCRMEFC</del> PNICWRMG	3-Error	[chars] [chars] [chars] [chars]	The port is not operating the startup selftest has failed	-	LOG_STD_ACTION
<del>PAFCRMEFC</del> PLASERN	5-Notice	Port link fast-retraining has happened for [chars]	The port link fast-retraining has happened for [chars]	-	LOG_SID_NO_ACTION
<del>PAFCRMEFC</del> CSHROR	3-Error	[chars] [chars] [chars] [chars]	The port fcs error threshold max has reached	-	LOG_STD_ACTION
<del>PAFCRMEFC</del> RLINKFAIT	3-Error	[chars] [chars] [chars] [chars]	The port link is not coming up the startup selftest has failed	-	LOG_STD_ACTION
<del>PAFCRMEFC</del> PNICWRMG	3-Error	[chars] [chars] [chars] [chars]	The port is not forwarding the startup selftest has failed	-	LOG_STD_ACTION
<del>PAFCRMEFC</del> PNICWRMG	3-Error	[chars] [chars] [chars] [chars]	The port is not operating the startup selftest has failed	-	LOG_STD_ACTION
<del>PAFCRMEFC</del> PLASERN	5-Notice	Port link fast-retraining has happened for [chars]	The port link fast-retraining has happened for [chars]	-	LOG_SID_NO_ACTION
<del>PAFCRMEFC</del> SEU	5-Notice	Port SEU Cable discharge event on [chars]. Firmware Download in progress.	Port SEU Cable discharge event on [chars]. Firmware download in progress.	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PLATFORMFWDL</del>	5-Notice	Port SEU Cable discharge event on [chars]. Firmware download failed.	Port SEU Cable discharge event on [chars]. Firmware download failed.	-	LOG_SID_NO_ACTION
<del>PLATFORMFWCS</del>	5-Notice	Port SEU Cable discharge event on [chars]. Firmware download successful.	Port SEU Cable discharge event on [chars]. Firmware download successful.	-	LOG_SID_NO_ACTION
<del>PLATFORMIINT</del>	5-Notice	IOS thread interrupt event [dec].	IOS thread process interrupt event	asr1k-iosd-infra	LOG_STD_ACTION
<del>PLATFORMISRY</del>	5-Notice	[[dec]][dec] [[dec]:[dec] [[dec]->[dec]] ra[ 1* 0x[hec] 1* 0x[hec] ]	IOS thread process interrupt history	asr1k-iosd-infra	LOG_STD_ACTION
<del>PLATFORMILEL</del>	5-Notice	IOS thread interrupt level [dec] replaced by [dec]	An invalid IOS thread interrupt level was used	asr1k-iosd-infra	LOG_STD_ACTION
<del>PLATFORMISL</del>	5-Notice	IOS thread interrupt limit not set	IOS failed to retrieve interrupt limit	iosxe-iosd-infra	LOG_STD_ACTION
<del>PLATFORMIIM</del>	5-Notice	IOS thread disabled interrupt for Total: [node]msec utime: [node]msec stime: [node]msec.	IOS thread process disabled interrupt too long	Respective Platform Component	LOG_STD_ACTION
<del>PLATFORMITHE</del>	5-Notice	IOS thread blocked due to SYSTEM LEVEL ISSUE for Total: [node]msec utime: [node]msec stime: [node]msec. [chars]	IOS thread needs to disable interrupt to protect its critical section of the code. But when it locks up the interrupt for too long due to SYSTEM LEVEL ISSUE causing high stime display interrupt over limit warning traceback	Respective Platform Component	LOG_STD_ACTION
<del>PLATFORMIMCY</del>	5-Notice	IOS thread disabled interrupt for [node]msec.	IOS thread process disabled interrupt too long for platforms not supporting syspage	Respective Platform Component	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PACR_IPSEC_HCNM_DHIC</del>	3-Error	HSEC license not present: IPsec [chars] configuration is rejected	HSEC license needs to be present on the system	accsw-p-security	"show platform"
<del>PACR_IPSEC_HCNM_DHIC</del>	3-Error	[chars]	SWO with IPSEC but HSEC unauth	accsw-p-security	"show platform"
<del>PACR_MATM_INVALID_SPI</del>	3-Error	MATM received invalid SPI message.	A messages that was to be received from the hardware module was not received correctly. Mac address learning/ageing might be impacted as a result. The failure most likely occurred because of a software communication error.	firmware	LOG_SID_SH_TECH_ACTION
<del>PACR_MATM_INVALID_SPI</del>	3-Error	MATM received invalid SPI message.	A messages that was to be received from the hardware module was not received correctly. Mac address learning/ageing might be impacted as a result. The failure most likely occurred because of a software communication error.	firmware	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>FAIRMACHIOSEFY</del>	4-Warning	MATM consistency checker found mac table to be [chars] on slot [dec]	MATM consistency checker has received a ACK/NACK from hardware.If the hardware returned NACKthe software and hardware tables are found to be inconsistent. Consistency checker will try to recover from the inconsistent state	firmware	LOG_SID_SH_TECH_ACTION
<del>FAIRMACHIOSEFY</del>	4-Warning	MATM dropped [chars] messages as queue limit has reached.	Messages received from the hardware module were not processed because an internal queue was full. Mac address learning/aging might be impacted as a result.	firmware	LOG_SID_SH_TECH_ACTION
<del>FAIRMACHIOSEFY</del>	4-Warning	MATM dropped [chars] messages as queue limit has reached.	Messages received from the hardware module were not processed because an internal queue was full. Mac address learning/aging might be impacted as a result.	firmware	LOG_SID_SH_TECH_ACTION
<del>FAIRMACDEHELE</del>	5-Notice	HW MAC address table resource is full <del>subject subject subject</del> is not added.	The limit of MAC address count of ASIC hardware is reached	-	LOG_SID_NO_ACTION
FAIRMPSHIFCAL	0-Emergency	SPI-FC Failure while sending PM SPI msg[chars]. If:[chars] Msg Type:[chars] Targets: 0x[node]spi-fc ec: [dec]	SPI-FC infra failed to service SPI msg transmit. Possibility coding error error code would help to know the reason for failure	firmware	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PLATFORM_PM_HSC_FAIL	1-Alert	[chars]	Resource allocation failed. May need to reboot the system	firmware	LOG_STD_ACTION
PLATFORM_PM_SHC_FAIL	1-Alert	SPI connect call failed. Slot: [dec] SPI RH: 0x[node] error code: [dec]	Failure is due to SPI. System cannot function reliably further. Reboot may help	firmware	LOG_STD_ACTION
PLATFORM_PM_SW_TIMEOUT	2-Critical	PM wait for ack timed out: req_id [dec] dest slots:0x[node]ack pending from slots 0x[hex]	Time out happened while waiting for ack from driver process Possible reasons: \n1. SPI IPC communication failure	firmware	LOG_STD_ACTION
PLATFORM_PM_HW_TIMEOUT	2-Critical	PM wait for ack timed out: If [chars] dest slots:0x[node]pending acks from boxes 0x[hex]	Time out happened while waiting for ack from driver process Possible reasons: \n1. SPI IPC communication failure	firmware	LOG_STD_ACTION
PLATFORM_PM_INVALID_ID	2-Critical	Invalid IIF Id: 0x[node]6llX assigned to if:[chars]	Port has invalid IIF Id assigned and hence SPI message to driver process FED can fail leaving system in unstable	firmware	LOG_STD_ACTION
PLATFORM_PM_HW_IDB	2-Critical	IDB does not exist	HWIDB does not exist during SPAN configuration This would be due to IDB creation issue Please collect history of actions performed before hitting this error for further investigations.	firmware	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
PLATFORM_PM2NOIDB	2-Critical	No IDB exists for IIF id: 0x[node]6llX	IIF Id received in PM SPI msg from driver process FED is invalid and hence conversion to IDB fails. This would be due to interfaces deleted by the time IOSd receives the msgs. Please collect history of actions performed before hitting this error for further investigations.	firmware	LOG_STD_ACTION
PLATFORM_P2DMCSIA	2-Critical	Add multicast group member failed. Group Handle: 0x[node] remote handle: 0x[node]error code:[dec]	SPI module problem. New handle is not added into multicast group handle. None of PM msgs would go to new switch driver process. Reboot newly added switch	firmware	LOG_STD_ACTION
PLATFORM_P2CHN_NDY	2-Critical	PM-SPI channel not ready yet slot: [dec]	PM SPI channel not ready for communication yet. Use CLI 'show platform pm spi-info' to check channel status. If message seen during bootup it indicates system trying to send SPI msgs too early bootup. Missed SPI messages will be lost and system may be in unstable state. Need to reboot to recover from the current state Note: Slot:0 indicates multicast SPI channel	firmware	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PLATFORM_PM5SNDAL	2-Critical	PM SPI msg send failed. If:[chars] Msg Type:[chars] Targets: 0x[node]ec: [dec]	SPI msg send failed on PM SPI channel. Please look at error code ec and check if destination switch	firmware	LOG_STD_ACTION
<del>PLATFORM_PM5SNDAL</del>	3-Error	Collisions at [chars] exceed threshold. Considered as loop-back.	The collisions at a half-duplex port exceed the threshold and the port is considered as loop-back.	firmware	LOG_SID_NO_ACTION
PLATFORM_PM5SNDAL	3-Error	Unable to configure hardware to [chars] host access on [chars]. Port may not behave as expected.	The system was unable to configure the hardware to set the requested host access policy. There may be insufficient TCAM resources available.	firmware	"Stop all traffic issue clear mac-address-table " "dynamic and remove and re-issue the command that failed."
<del>PLATFORM_PM5SNDAL</del>	3-Error	Loop-back detected on [chars].	Loop-back may be caused accidentally by \ plugging in a balun cable to the port.	firmware	"Check the cables. If a balun cable is connected and the " "loopback condition is desired no action is required. " "Otherwise connect the correct cable and bring the port up."
PLATFORM_PM5SNDAL	5-Notice	Port Mode: [dec] is not supported type for If:[chars]	Unsupported port mode or invalid config.	firmware	LOG_STD_ACTION
PLATFORM_PM5NOFC	5-Notice	Port cookie pc does not exist for If: [chars]	Failed to get PM port_data subblock from IDB. Possible reason would be IDB is not supported by PM. If error is seen during bootup and if interfaces is PM supported it indicates trying to get PD prior to PM init completion	firmware	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
PLATFORM_PM5NOPD	5-Notice	No Port data PD exists for If: [chars]	Failed to get PM port_data subblock from IDB. Possible reason would be IDB is not supported by PM. If error is seen during bootup and if interfaces is PM supported it indicates trying to get PD prior to PM init completion	firmware	LOG_STD_ACTION
<del>PLATFORM_CALLBACK</del>	5-Notice	UDLD OIR Callback is invoked ahead of sys init complete	UDLD OIR Callback is invoked too early.	accsw-ha-infra	LOG_STD_ACTION
<del>PLATFORM_PMDOIRSENT</del>	5-Notice	No Port data PD exists	Port data does not exist. This should not happen. If this error is seen during switchover there is a likely race condition in creation/deletion of port data.	firmware	LOG_STD_ACTION
<del>PLATFORM_UNKNOWNREQ</del>	5-Notice	Ack received for unknown request from driver process FED.	Ack from driver process is received for the request id which is not in wait queue. This would be due to delayed ack after time out at IOSd.	firmware	LOG_STD_ACTION
<del>PLATFORM_SFP_MODULE</del>	6-Information	Warning: SFP module inserted in to the interface [chars] differs from the previously inserted one. The port's [chars] configuration will be set to the default.	A different SFP module has been inserted in the available slot. Previous configured duplex/speed will be set to default.	firmware	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>FAIFORM</del> DOWNSHIFT	6-Information	Experienced Channel Quality Impairment on interface [chars] Downshifting Speed to [chars]	Speed Downshift Detected.	firmware	LOG_SID_NO_ACTION
<del>FAIFRM</del> FRULINKINSRD	6-Information	[chars] uplink module inserted in the switch [dec] slot [dec]	A FRULink module has been inserted in the available slot.	firmware	LOG_SID_NO_ACTION
<del>FAIFRM</del> FRULINKREMOED	6-Information	[chars] uplink module removed from switch [dec] slot [dec]	The FRULink module inserted in the available slot has been removed.	firmware	LOG_SID_NO_ACTION
<del>FAIFRM</del> FRULINKUNRSRD	6-Information	Unsupported FRU module inserted in slot [dec]	The FRULink module inserted in the available slot is not supported.	firmware	LOG_SID_NO_ACTION
<del>FAIFRM</del> FRULINKUNREMOED	6-Information	Unsupported FRU module removed from slot [dec]	The FRULink module removed from the slot is not supported.	firmware	LOG_SID_NO_ACTION
<del>FAIFRM</del> MODIERRSRD	6-Information	The inserted SFP module with interface name [chars] is not supported	The SFP module inserted in the available slot has been removed.	firmware	LOG_SID_NO_ACTION
<del>FAIFRM</del> MODIERINSRD	6-Information	SFP module inserted with interface name [chars]	The SFP module has been inserted in the available slot.	firmware	LOG_SID_NO_ACTION
<del>FAIFRM</del> MODIERREMOED	6-Information	SFP module with interface name [chars] removed	The SFP module inserted in the available slot has been removed.	firmware	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>HA</del> FORM_SEC2NHMDB	2-Critical	Software module for [chars] received null HWIDB.	The security component received null HWIDB. This could be due to IDB creation issue. Please collect history of actions performed before hitting this error for further investigations.	accsw-security	LOG_STD_ACTION
<del>HA</del> FORM_SEC2NOIDB	2-Critical	Software module for [chars] received null SWIDB.	The security component received null SWIDB. This could be due to interfaces deleted by the time the function gets called. Please collect history of actions performed before hitting this error for further investigations.	accsw-security	LOG_STD_ACTION
<del>HA</del> FORM_SEC6SGACHI	6-Information	list [chars] [chars] [chars] [node]dec]-> [node]dec] SGT [dec] DGT [dec]	A packet matching the log criteria for the given sg access list was detected.	accsw-security	LOG_SID_NO_ACTION
<del>HA</del> FORM_CMDMNRNG	3-Error	The command [[chars]] should not be configured on a stack of switches	A command that is supported for standalone switches only was entered on a stack of switches.	firmware	"Either remove this command from the configuration " "save startup configuration and reload the stack OR " "remove all other stack members from the stack."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PLATFMSPANNOCPDATA</del>	5-Notice	SPAN data not available during reconciliation	SPAN data not available after switchover for reconciliation. Use CLI 'show monitor' 'show platform monitor-fed' to check if the configuration is intact after switchover. This is not expected please log a defect message seen during bootup it indicates system trying	firmware	LOG_STD_ACTION
<del>PLATFMSPOWERADUPLY</del>	3-Error	Invalid power stack topology observed by switch [dec]. [chars]	Power stack topology is invalid. The switch is forced to operate in standalone mode	firmware	LOG_STD_ACTION
<del>PLATFMSACKWRREP</del>	4-Warning	Switch [dec] experienced a BISP event	Switch experienced a Built-in Self Protection event	firmware	"This is a notification message only." " No action is required."
<del>PLATFMSPOWERINDD</del>	4-Warning	Switch [dec]'s neighbor experienced a major BISP event	Switch's neighbor experienced a major Built-in Self-Protection event which caused the switch to shutdown	firmware	"This is a notification message only." " No action is required."
<del>PLATFMSPOWERPOEPI</del>	4-Warning	Switch [dec] experienced a PoE over-current BISP event	Switch experienced a PoE over-current Built-in Self-Protection event	firmware	"This is a notification message only." " No action is required."
<del>PLATFMSPOWERPOEPI</del>	4-Warning	Switch [dec] experienced a port BISP event	Switch experienced a port Built-in Self-Protection event which affected PoE	firmware	"This is a notification message only." " No action is required."
<del>PLATFMSPOWERPOEPI</del>	4-Warning	Switch [dec] experienced a short-circuit BISP event on port 1	Switch experienced a short-circuit Built-in Self-Protection event on port 1	firmware	"This is a notification message only." " No action is required."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>PACN_STACKOVERCUR</del>	4-Warning	Switch [dec] experienced a short-circuit BISP event on port 2	Switch experienced a short-circuit Built-in Self-Protection event on port 2	firmware	"This is a notification message only." " No action is required."
<del>PACN_STACKOVERCURREN</del>	4-Warning	Switch [dec] stack power cable 1 inward current is over the limit	Switch's stack power cable 1 inward current is over the limit of 40 Amperes. Please add a power supply to the switch	firmware	LOG_STD_ACTION
<del>PACN_STACKOVERCURRENT</del>	4-Warning	Switch [dec] stack power cable 1 outward current is over the limit	Switch's stack power cable 1 outward current is over the limit of 40 Amperes. Please move a power supply out of the switch	firmware	LOG_STD_ACTION
<del>PACN_STACKOVERCURREN</del>	4-Warning	Switch [dec] stack power cable 2 inward current is over the limit	Switch's stack power cable 2 inward current is over the limit of 40 Amperes. Please add a power supply to the switch	firmware	LOG_STD_ACTION
<del>PACN_STACKOVERCURRENT</del>	4-Warning	Switch [dec] stack power cable 2 outward current is over the limit	Switch's stack power cable 2 outward current is over the limit of 40 Amperes. Please move a power supply out of the switch	firmware	LOG_STD_ACTION
<del>PACN_STACKOVERSET</del>	4-Warning	Switch [dec] experienced a graceful load shed event	Switch had to shed loads based on a SOC condition	firmware	LOG_STD_ACTION
<del>PACN_STACKOVERCURREN</del>	4-Warning	Switch [dec] stack power current is high warning	Switch's stack power current is high and a power supply failure may result in switch to get disconnect from power stack	firmware	LOG_STD_ACTION



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>PACN_PSCKOVBHSEVENT</del>	4-Warning	Switch [dec] experienced an immediate load shed event	Switch had to shed loads based on a PS_FAIL condition	firmware	LOG_STD_ACTION
<del>PACN_PSCKOVBHSEVENT</del>	4-Warning	Switch [dec]'s power stack does not have enough power	Switch's power stack does not have enough power to bring up all the switches in that power stack	firmware	LOG_STD_ACTION
<del>PACN_PSCKOVBHSEVENT</del>	4-Warning	Switch [dec]'s neighbor switch experienced a BISP event	A neighbor switch experienced a Built-in Self Protection event	firmware	"This is a notification message only." " No action is required."
<del>PACN_PSCKOVBHSEVENT</del>	4-Warning	Switch [dec]'s neighbor switch experienced a graceful load shed event	A neighbor switch had to shed loads based on a SOC condition	firmware	LOG_STD_ACTION
<del>PACN_PSCKOVBHSEVENT</del>	4-Warning	Switch [dec]'s neighbor switch experienced an immediate load shed event	A neighbor switch had to shed loads based on a PS_FAIL condition	firmware	LOG_STD_ACTION
<del>PACN_PSCKOVBHSEVENT</del>	4-Warning	Switch [dec]'s neighbor switch experienced a system ring load shed event	A neighbor switch had to shed loads based on loss of a system	firmware	LOG_STD_ACTION
<del>PACN_PSCKOVBHSEVENT</del>	4-Warning	Switch [dec]'s neighbor switch experienced a system star load shed event	A neighbor switch had to shed loads based on loss of a system	firmware	LOG_STD_ACTION
<del>PACN_PSCKOVBHSEVENT</del>	4-Warning	Switch [dec]'s neighbor switch experienced an under voltage load shed event	A neighbor switch had to shed loads based on an under voltage condition	firmware	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>PACM_SPCPOWERBUDGET</del>	4-Warning	Switch [dec] power budget is at least 1000W greater than its local supplies	Switch's power budget is more than 1000W above its power supplies rated power output. Please insert a power supply in this system	firmware	LOG_STD_ACTION
<del>PACM_SPCPOWERBUDGET</del>	4-Warning	Switch [dec] power budget is at least 2000W greater than its local supplies	Switch's power budget is more than 2000W above its power supplies rated power output. Please insert a power supply in this system	firmware	LOG_STD_ACTION
<del>PACM_SPCPOWERCONFLICT</del>	4-Warning	Switch [dec]'s power stack has conflicting power priorities	Switch's power priorities are conflicting with power priorities of another switch in the power stack	firmware	LOG_STD_ACTION
<del>PACM_SPCPOWERDUALCS</del>	4-Warning	Switch [dec]'s power stack lost redundancy and is now operating in power sharing mode	Power stack that this switch is part of has lost redundancy and is now operating in power sharing mode	firmware	LOG_STD_ACTION
<del>PACM_SPCPOWERSEVENT</del>	4-Warning	Switch [dec] experienced a system ring load shed event	Switch had to shed loads based on loss of a system	firmware	LOG_STD_ACTION
<del>PACM_SPCPOWERSEVENT</del>	4-Warning	Switch [dec] experienced a system star load shed event	Switch had to shed loads based on loss of a system	firmware	LOG_STD_ACTION
<del>PACM_SPCPOWERMNRCS</del>	4-Warning	Switch [dec]: Too many errors seen on port [chars]	Too many errors are seen on switch's stack power port 1/2	firmware	"This is a notification message only." " No action is required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PACR/SACPOWER/BLADES</del>	4-Warning	Switch [dec]'s power stack has unbalanced power supplies	Switch's power stack has a switch with multiple power supplies while another switch in the same power stack has no power supplies	firmware	LOG_STD_ACTION
<del>PACR/SACPOWER/BUDGET</del>	4-Warning	Switch [dec] does not have sufficient power budget	Switch's power budget is less than minimum required switch budget	firmware	LOG_STD_ACTION
<del>PACR/SACPOWER/BOKE</del>	4-Warning	Switch [dec] experienced an under voltage condition	Switch had an under voltage condition on last boot up /shutdown	firmware	LOG_STD_ACTION
<del>PACR/SACPOWER/BSMEN</del>	4-Warning	Switch [dec] experienced an under voltage load shed event	Switch had to shed loads based on an under voltage condition	firmware	LOG_STD_ACTION
<del>PACR/SACPOWER/MSMCH</del>	4-Warning	Major version mismatch in stack power protocol message on switch [dec]	Major version mismatch in stack power protocol message is observed on switch [dec]	firmware	"This is a notification message only." " No action is required."
<del>PACR/SACPOWER/PLVEN</del>	6-Information	Switch [dec] stack power cable [chars] [chars]	Switch's stack power cable 1/2 is inserted/removed	firmware	"This is a notification message only." " No action is required."
<del>PACR/SACPOWER/PLVEN</del>	6-Information	Switch [dec] stack power protocol is up on cable [chars]	Switch's stack power cable 1/2 is now able to share power	firmware	"This is a notification message only." " No action is required."
<del>PACR/SSNO/HWENTROPY</del>	3-Error	No hardware entropy file found	No hardware entropy file was found after waiting for over 500 seconds	-	"Collect trace logs from the cmand tams and tamd " "processes to search for the reason behind this"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PLATFORM_SYS4IPSEC	4-Warning	Feature Mismatched on stack. IPSEC is configured on the stack but newly inserted switch [dec] does not support IPSEC. Please remove the new switch.	This is a warning message for the user. A feature mismatched in IPSEC. IPSEC is configured on the stack but newly inserted switch does not support IPSEC. Please remove the newly inserted switch.	-	"Remove newly inserted switch."
PLATFORM_SYS4SDM	4-Warning	Unsupported template detected and default template has been loaded	This is a warning message for the user. An unsupported template was configured on the system and the default template has been loaded.	-	"This is a notification message only. " "No action is required."
PLATFORM_SYS6UPIME	6-Information	Time taken to initialize system = [node]d seconds	This is an informational message for the user. This provides the time taken for the system to initialize on boot. The time is actually the time taken by system to finish initialization after kernel Linux is booted	-	"This is a notification message only. " "No action is required."
<del>PLATFORM_SYS4IPSEC</del>	2-Critical	Secure UDI validation failed. [chars]	Memory allocated is not enough	iosxe-mibs	LOG_STD_ACTION
<del>PLATFORM_SYS4IPSEC</del>	1-Alert	Switch [dec]: [chars]	Faulty fansFRU fan or PS fan detected	hardware	"Replace the faulty fans and then turn on the system"
<del>PLATFORM_SYS4IPSEC</del>	1-Alert	Switch [dec]: System fan [dec] disabled. Airflow direction for this fan should be [chars]	FRU fan disabled because majority of fans have different airflow than this fan	hardware	"Fan disabled because of airflow direction. Replace the fan that has airflow consistent with other fans in the system"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PACM_FIRM_FAN_FAIL</del>	1-Alert	Switch [dec]: System fan [dec] failed	Fan failed	firmware	"Replace the fan."
<del>PACM_FIRM_FAN_FAIL</del>	1-Alert	Switch [dec]: System fan [dec] faulty or removed	Fan in non-functional mode	firmware	"Need an action"
<del>PACM_FIRM_FAN_FAIL</del>	1-Alert	Switch [dec]: System fan [dec] inserted or recovered	Fan in functional mode	firmware	LOG_SID_NO_ACTION
<del>PACM_FIRM_FAN_FAIL</del>	1-Alert	Switch [dec]: Too few working fan trays exist and the switch will overheat. If this situation is not resolved by installing [dec] fan trays in a [chars] airflow direction the switch will power down in [dec] minutes	Insufficient fan trays in the system	hardware	"Insert fan."
<del>PACM_FIRM_FAN_FAIL</del>	1-Alert	Switch [dec]: System fan [dec] not present	Fan not present	firmware	"Insert fan."
<del>PACM_FIRM_FAN_FAIL</del>	1-Alert	Switch [dec]: Temperature measurement not functioning. Condition may be transient.	Temperature not detected by IOS	firmware	"Check that fans are working. Check 'show env temperature' command output. If condition persists contact TAC."
<del>PACM_FIRM_FAN_FAIL</del>	2-Critical	Switch [dec]: [chars]	The chassis inside temperature exceeds the max temperature threshold and will be shut down immediately.	-	-
<del>PACM_FIRM_FAN_FAIL</del>	2-Critical	Switch [dec]: [chars]	The chassis inside temperature is below the min temperature threshold and will be shut down immediately.	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HAICRM_FIRM_NOSCUMAE</del>	2-Critical	Switch [dec]: [chars]	The chasfs property for violation second is not present.	-	-
<del>HAICRM_FIRM_NSCREMP</del>	3-Error	Switch [dec]: [chars]	The chassis inside temperature exceeds the max temperature threshold	-	-
<del>HAICRM_FIRM_NSDREMP</del>	3-Error	Switch [dec]: [chars]	The chassis inside temperature is below the min temperature threshold	-	-
<del>HAICRM_FIRM_NSCROBEP</del>	4-Warning	Switch [dec]: [chars]	The chassis inside temperature exceeds the configured threshold\n but less or equal to the max inside temperature	-	-
<del>HAICRM_FIRM_NGRUNCR</del>	6-Information	Switch [dec]: System fan [dec] [chars]	System fan inserted or removed	firmware	LOG_SID_NO_ACTION
<del>HAICRM_FIRM_NGRUNCRV</del>	6-Information	Switch [dec]: System fan [dec] recovered to normal status	Fan recovered	firmware	LOG_SID_NO_ACTION
<del>HAICRM_FIRM_NGEMOVL</del>	6-Information	Switch [dec]: temperature is within the normal limit.	The temperature sensor value is within the normal limit	hardware	LOG_SID_NO_ACTION
<del>HAICRM_MDUEN_SRIED</del>	0-Emergency	[chars] module inserted\n	-	SPARROW_COMPONENT	-
<del>HAICRM_MDUER_MOVED</del>	0-Emergency	[chars] module removed\n	-	-	-
<del>HAICRM_MOPN_SRIED</del>	0-Emergency	[chars] pin inserted\n	-	-	-
<del>HAICRM_MOPN_REMOVED</del>	0-Emergency	[chars] pin removed\n	-	-	-
<del>HAICRM_MSCLO_SRIED</del>	0-Emergency	[chars] cover/module inserted\n	-	-	-
<del>HAICRM_MSCLO_REMOVED</del>	0-Emergency	[chars] cover/module removed\n	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PLATFORM-I-NOSPACE	1-Alert	[chars] : no space alarm assert	bootflash memory exhausted Delete the old file from boot flash to create space	-	LOG_STD_NO_ACTION
<del>PLATFORM-I-NOSPACE</del> PLATFORM-BCUP-NVRM-CRNL	3-Error	Failed to open backup nvram - [chars].	The backup nvram device could not be opened.	iosxe-binos-ha	LOG_STD_ACTION
<del>PLATFORM-BCUP-NVRM-CRNL</del> PLATFORM-BCUP-NVRM-ERRL	3-Error	Failed to read backup nvram - [chars].	The backup nvram contents could not be read.	iosxe-binos-ha	LOG_STD_ACTION
<del>PLATFORM-BCUP-NVRM-ERRL</del> PLATFORM-BCUP-NVRM-WRFL	3-Error	Failed to write backup nvram - [chars].	Couldn't write into the backup nvram device.	iosxe-binos-ha	LOG_STD_ACTION
<del>PLATFORM-BCUP-NVRM-WRFL</del> PLATFORM-ELEMENT-CRICAL	3-Error	iosxe-shellmgr	%s:[chars] value[chars][chars] critical level[chars]	The Shell Manager monitors the health of each board and emits an error message when a value has passed a critical level.	Reduce static and dynamic loads on the system by reducing the number of elements in the configuration or by limiting the capacity for dynamic services.
<del>PLATFORM-ELEMENT-CRICAL</del> PLATFORM-ELEMENT-MISC-CRICAL	3-Error	iosxe-shellmgr	%s: TMPFS value %u%% above critical level %u%%	The Shell Manager monitors the tmpfs usage of each board and emits an error message when a value has passed warning level. The critical level is computed based on total DRAM memory. Currently the critical level is 50% of total DRAM memory	Emit syslog message with current tmpfs usage

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PLATFORM_TMPFS_WNG	3-Error	iosxe-shellmgr	%s: TMPFS value %u%% above warning level %u%%	The Shell Manager monitors the tmpfs usage of each board and emits an error message when a value has passed warning level. The warning level is computed based on total DRAM memory. Currently the warning level is 40% of total DRAM memory	Emit syslog message with current tmpfs usage
PLATFORM_INTF_MODE	3-Error	Front-panel ethernet mode configuration is not in sync with INTF_MODE rommon variable value. Please use 'write' command and reboot to fix this. 10G ports will work in default TE mode in this current boot	Front-panel ethernet mode configuration is not in sync with INTF_MODE rommon variable value. INTF_MODE rommon variable could have been over-written. Please use 'write' command and reboot to fix this. 10G ports will work in default TE mode in this current boot	-	LOG_STD_ACTION
PLATFORM_GEC_NMAC	3-Error	Can't allocate MAC address for port-channel interface %u	MAC address allocation failed for the port-channel interface specified in the message. This may happen if the port-channel interface exceeds the maximum number of supported port-channel interfaces.	iosxe-iosd-infra	LOG_STD_ACTION
PLATFORM_HA_KPA_FAIL	3-Error	RP HA Keepalive failure [chars]	Standby RP reports missing keepalives from Active. This is indicative of an IPC problem between peer IOSd processes	iosxe-binos-ha	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HAIFORMBHASIAUS_FAIL</del>	3-Error	RP switchover [chars] count %u	RP switchover failed to reach active state. The RP will be reset. This is indicative of a IPC problem between IOSd and CMRP	iosxe-binos-ha	"Make sure system achieves full redundant state " "after the RP reset. If not reload entire system"
<del>HAIFORMVENO_BASEMAC</del>	3-Error	Can't retrieve base MAC address	Base MAC address determination failed at system start.	-	LOG_STD_ACTION
<del>PLATFORM3-NOMAC</del>	3-Error	Can't allocate MAC address for interface [node]%u	MAC address allocation failed because of an incorrect slot and\n\ port combination which exceeds the maximum available hardware.	-	LOG_STD_ACTION
<del>HAIFORMVENOMAC_NIF</del>	3-Error	Failed to allocate MAC address for interface [chars]	MAC address allocation failed for logical interface specified in the message.	-	LOG_STD_ACTION
<del>HAIFORMVENRAM_OPEN_FAIL</del>	3-Error	Failed to open nvram - [chars].	The nvram device could not be opened.	iosxe-binos-ha	LOG_STD_ACTION
<del>HAIFORMVENRAM_READ_FAIL</del>	3-Error	Failed to read nvram - [chars].	The nvram contents could not be read.	iosxe-binos-ha	LOG_STD_ACTION
<del>HAIFORMVENRAM_WRITE_FAIL</del>	3-Error	Failed to write nvram - [chars].	Couldn't write into the nvram device.	iosxe-binos-ha	LOG_STD_ACTION
<del>HAIFORMVEREDMODE_FAIL</del>	3-Error	Redundancy mode: [chars] rc [dec]	Redundancy mode change could not be processed. This is indicative of a IPC problem between IOSd and the peer platform process.	iosxe-binos-ha	"Make sure system achieves full redundant state." "If not reload entire system"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HAIFORMBREFROG_FAL	3-Error	Progression completion notification to chassis management failed [chars]	Could not notify the completion of the RF progression to the chassis management process. The system will potentially not be in a fully redundant state.	iosxe-binos-ha	LOG_STD_ACTION
HAIFORMBREFLOADHER	3-Error	Reload peer notification to chassis management failed [chars]	Could not notify Reload Peer to the chassis management process. The Standby peer could not be reloaded by the Active. The system will potentially not be in a fully redundant state.	iosxe-binos-ha	"Reload peer instance using the available CLI " "commands. If system does not achieve full " "Standby status after that the system must " "be reloaded"
HAIFORMBEOVAR_NOSET	4-Warning	Boot variable is not set. Leaving it blank	-	-	-
HAIFORMBEOVAR_TOO_SMALL	4-Warning	Boot variable buffer too small. Leaving it blank	Boot variable either does not exist or buffer is too small. Not able to set boot variable. Ignoring it.	asr1k-chassismgr	LOG_SID_NO_ACTION
HAIFORMHELEMENT_WARN	4-Warning	iosxe-shellmgr	%s:[chars] value[chars][chars] warning level[chars].[chars]	The Shell Manager monitors the health of each board and emits a warning message when a value has passed a critical level.	Reduce static and dynamic loads on the system by reducing the number of elements in the configuration or by limiting the capacity for dynamic services.
HAIFORMHASTATUS_WARN	4-Warning	RP HA status warning [chars]	Standby RP reports peer not present event. This is indicative of a IPC problem between IOSd and CMRP	iosxe-binos-ha	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PLATFORM4LOWSPACE	4-Warning	[chars] : low space alarm assert	bootflash memory is very low Delete the old file from boot flash to create space	-	LOG_SID_NO_ACTION
PLATFORM4MEMBLOW	4-Warning	Mac table has reached the maximum limit.Features dependent on Mac table may have an impact.	Mac Table is full and no space available for new mac address addition. MATM learning and dependent feature functionality may be impacted.	petra-l2	"Make some space available in Mac Table" " to restore mac learning functions."
PLATFORM4MEMOR&SIZE	4-Warning	Active and Standby memory configuration differ by more than 1 GB. Active = [node]dKB Standby = [node]dKB	The memory configuration on both the Supervisor is different by more than 1GB. Some of the functionality which is high availability aware and dependent on the memory like IOX will be impacted.	-	"Please upgrade/downgrade memory configuration on " "both the Supervisor to match the size"
PLATFORM4RELOADSANDBY	4-Warning	[chars] reload requested by [chars]. Reason [chars]	Unexpected configuration or states mismatch between Active and Standby RPs. Reloading Standby to synchronize the configuration or states.	iosxe-binos-ha	"None. This is expected behavior."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HAIFORMSDM_TEMPLAE	4-Warning	Mismatch in SDM templates configured on Active [chars] and Standby [chars]	The SDM template configured on the two Supervisors are different. Different SDM template would enable different sets of features on the active and standby supervisors. Table sizes configured for the common features may be different. These features will not function properly on switchover from one supervisor to another.	-	"Please configure the same SDM template on both Supervisors using " 'sdm prefer <template>' configuration command followed by a reload. " Supervisors should be brought to hot-standby state and the SDM " template configured such that the template gets applied to both " the supervisors. Supervisors can also be brought up as standalone " and SDM template configured on them one at a time followed by a " reload."
HAIFORMSAS_COLLECTION	4-Warning	Reducing statistics collection interval for SPA [chars] will impact the RP control plane	MIB statistics for HW counters are sent from CC to RP every 10 seconds by default changing the timer through CLI to send more often will increase RP CPU utilization and result in sending more IPC messages between CC and RP	iosxe-spa-infra	LOG_SID_NO_ACTION
HAIFORMCONGR_RECOVERY	5-Notice	IOS Configuration recovery is in progress.	-	-	LOG_SID_NO_ACTION
HAIFORMSHALF_DUPLEX	5-Notice	half duplex operation discovered on [chars] with [chars] [chars]	The interface is found to operate in half duplex	petra-platform	LOG_STD_ACTION
HAIFORMLOWSPACE_ALARM	5-Notice	[chars] : low space alarm deassert	bootflash memory	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HAIFORMSRESE</del> BUTTON	5-Notice	Reset Button pressed during boot up.	-	IIOT_COMPONENT	LOG_STD_NO_ACTION
<del>HAIFORMSRESE</del> ICARD	5-Notice	iosxe-binops-utils	%s reset to acquire provisioned software	"The linecard specified was not running the currently provisioned software	-
<del>PACKTRANSRECE</del> SMD	5-Notice	Slot=[dec] Port=[dec]: SFP EEPROM data check sum failed	The SFP was identified as a Cisco SFP but the system was unable to read vendor-data information to verify its correctness.	petra-platform	"Remove and reinsert the SFP. If it fails " "again in the same way the SFP may be defective."
<del>PACKTRANSRECE</del> TICAL	5-Notice	Slot=[dec] Port=[dec]: SFP Security check failed	-	-	-
<del>PACKTRANSRECE</del> UNSUPP	5-Notice	Slot=[dec] Port=[dec]: Unsupported transceiver found	The module was identified as an unsupported non-Cisco transceiver.	petra-platform	LOG_STD_ACTION
<del>PACKTRANSRECE</del> UNSUPP	5-Notice	Slot=[dec] Port=[dec]: Unsupported transceiver for the port found	This SFP type is not supported on this port.	petra-platform	LOG_STD_ACTION
<del>PACKTRANSRECE</del> UNSUPP	5-Notice	Slot=[dec] Port=[dec]: Unsupported transceiver for the switch found	This SFP type is not supported on this switch.	petra-platform	LOG_STD_ACTION
<del>HAIFORMSRESE</del> ICARD	5-Notice	Slot=[dec] Port=[dec]: Transceiver has been inserted	-	-	-
<del>HAIFORMSRESE</del> ICARD	5-Notice	Slot=[dec] Port=[dec]: Transceiver has been removed	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PLATFORM6EVENT_LOG	6-Information	[chars]	An entry from the internal event log at reload on the standby RP. This is informational.	-	LOG_SID_NO_ACTION
PLATFORM6HASIAIUS	6-Information	RP switchover [chars]	RP switchover events received by platform code.	-	LOG_SID_NO_ACTION
PLATFORM6HASIAUSDEAL	6-Information	RP switchover [chars] count %u	RP switchover events received by platform code.	-	LOG_SID_NO_ACTION
PLATFORM6RFIRGSSUCCESS	6-Information	RF state [chars]	A marker to illuminate when the standby reaches a terminal state.	iosxe-binos-ha	LOG_NO_ACTION
PLATFORM6SBNIDELAY	6-Information	RF progression will be suspended due to standby initialization delay configuration setting. Standby initialization will resume after [node]seconds	An informational message about the standby initialization delay configuration. RF progression will be delayed for the configured value. Bulk-sync and other progression events will not happen until after the configured delay value	-	LOG_SID_NO_ACTION
PLATFORM6SBNIDELAYEND	6-Information	RF progression delay timer expired. Standby initialization will now continue	An informational message about the standby initialization delay configuration. RF progression will now continue since configured delay has expired	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PAFCR6</del> SDM_TEMPLAESNC	6-Information	Detected Standby supervisor with different [chars] SDM template	A mismatch detected in SDM template configuration between Active and standby supervisors. However IOS automatically pushed the SDM template configured on Active Supervisor to Standby to avoid functionality or scale mismatch between Active and Standby supervisors.	-	LOG_STD_NO_ACTION
<del>PAFCR6</del> MDM_TEMPLMACH	6-Information	Warning: The management interface is different between active and standby.	The management interface has been configured differently between active and the standby switch	-	LOG_STD_NO_ACTION
<del>HMCR3</del> USER_PIM_QOSAL	3-Error	A software error while configuring the [chars] on slot [dec]	This error happens when IOS fails to send messages to configure the per slot qos parameters in forwarding plane	iosxe-qos	LOG_STD_ACTION
<del>HOCRR3</del> MCBFCUHR	3-Error	Unable to acquire a BIPC buffer for sending messages.	A message was to be sent by IOS but no BIPC buffer was available. The message to be sent has been discarded and the associated operation failed.	iosxe-plog	LOG_STD_ACTION
<del>HOCRR3</del> MCBFCUHR	3-Error	Error when receiving TDL error message: [chars]	An unexpected condition in which IOS has received an error during TDL message processing from the Proxy Logger.	iosxe-plog	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
HOCDEP4KIDPACHRSE	3-Error	Received TDL error message is larger than supported size :[dec]	A TDL message larger than supported has been received and partial message of that is displayed.	iosxe-plog	LOG_STD_ACTION
HOCDEP4KIDPACHNUL	3-Error	Received NULL TDL message	An unexpected condition in which IOS has received a NULL TDL message for the Proxy Logger.	iosxe-plog	LOG_STD_ACTION
HOCDEP4KIDPACHDHD	3-Error	Invalid ermmsg field '[chars]' received from the Proxy Logger error [dec]	An error message received from the Proxy Logger is missing a required field.	iosxe-plog	LOG_STD_ACTION
HOCDEP4KIDPACHDISP	4-Warning	Unable to dispatch received TDL message '[chars]' from Proxy Logger. LUID: [chars]	An unexpected condition has occurred while IOS is trying to dispatch to the TDL message handler functions for received TDL messages from Proxy Logger.	iosxe-plog	LOG_STD_ACTION
HTDBG_SCRIPTS_DIR_FAIL	3-Error	Failed to create [chars] directory in [chars] filesystem with [chars] error	Failed to create platform_debug_scripts directory\n\n bootflash	asr900-layer2-rsp3	"Ensure bootflash has sufficient space\n\n verify integrity of the bootflash"
HTDBG_SCRIPTS_FILE_FAIL	3-Error	Failed to create [chars] file with [chars] error	Failed to create platform_debug_scripts file\n\n bootflash	asr900-layer2-rsp3	"Ensure bootflash has sufficient space\n\n verify integrity of the bootflash"
HTDBG_SCRIPTS_INVALID_DB	3-Error	Retrieved IDB from parser is invalid	Failed to write data into the tcl debug script file	asr900-layer2-rsp3	"Contact Cisco TAC\n"
HTDBG_SCRIPTS_WRITE_FAIL	3-Error	Failed to write [dec] bytes in [chars] file	Failed to write data into the tcl debug script file	asr900-layer2-rsp3	"Ensure bootflash has sufficient space\n\n verify integrity of the bootflash"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PM_AGENT2PMA_DOWN	2-Critical	PMA is Down.\n	PMA is Down.	pathmgr	LOG_SID_NO_ACTION
PM_AGENT2PMA_DOWN	2-Critical	PMA is Down.\n	PMA is Down.	pathmgr	LOG_SID_NO_ACTION
PM_AGENT3ESON_DOWN	3-Error	\n	Eson is Down.	pathmgr	LOG_SID_NO_ACTION
PM_AGENT3ESON_DOWN	3-Error	\n	Eson is Down.	pathmgr	LOG_SID_NO_ACTION
PM_AGENT3ESON_UP	3-Error	\n	Eson is Up.	pathmgr	LOG_SID_NO_ACTION
PM_AGENT3ESON_UP	3-Error	\n	Eson is Up.	pathmgr	LOG_SID_NO_ACTION
PM_AGENT3HOP_CHANNEL_FAILURE	3-Error	PMA_HOP_ID : [node] PMA_DEST_SITE_ID : [node] PMA_REMOTE_IF_ID : [node] PMA_LOCAL_IF_ID : [node] PMA_DSCP : [dec]\n	A Hop Channel failed to be added.	pathmgr	LOG_SID_NO_ACTION
PM_AGENT3HOP_CHANNEL_FAILURE	3-Error	PMA_HOP_ID : [node] PMA_DEST_SITE_ID : [node] PMA_REMOTE_IF_ID : [node] PMA_LOCAL_IF_ID : [node] PMA_DSCP : [dec]\n	A Hop Channel failed to be added.	pathmgr	LOG_SID_NO_ACTION
PM_AGENT3LOCK_FAIL	3-Error	Can't lock pathmgr database: [chars]	Access to pathmgr data is protected by a locking mechanism. An operation tried to read or write provisioning data but was unable to get control of the lock.	pathmgr	"Any Cisco iwan-router or iwan related configuration" "or show commands that you were attempting to " "run may not have succeeded. Please try the operation again.\n\n" "Contact support if this message is seen frequently."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
PM_AGENT3LOCK_FAIL	3-Error	Can't lock pathmgr database: [chars]	Access to pathmgr data is protected by a locking mechanism. An operation tried to read or write provisioning data but was unable to get control of the lock.	pathmgr	"Any Cisco iwan-router or iwan related configuration" "or show commands that you were attempting to " "run may not have succeeded. Please try the operation again.\n\n" "Contact support if this message is seen frequently."
IMAGENLOCKRELEASE_FAIL	3-Error	Can't release the lock of pathmgr database: [chars]	Access to pathmgr data is protected by a locking mechanism. An operation tried to release the acquired read or write lock but was unable to.	pathmgr	"Any Cisco iwan-router or iwan related configuration" "or show commands that you were attempting to " "run may not have succeeded. Please try the operation again.\n\n" "Contact support if this message is seen frequently."
IMAGENLOCKRELEASE_FAIL	3-Error	Can't release the lock of pathmgr database: [chars]	Access to pathmgr data is protected by a locking mechanism. An operation tried to release the acquired read or write lock but was unable to.	pathmgr	"Any Cisco iwan-router or iwan related configuration" "or show commands that you were attempting to " "run may not have succeeded. Please try the operation again.\n\n" "Contact support if this message is seen frequently."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MACGENSERKADDR</del>	3-Error	[chars] PMA_INSTANCE_ID : [dec] PMA_PFX_ADDR : [chars] PMA_PFX_MSK_LEN : [dec] PMA_PFX_FLAG : [chars]\n	A Site Prefix is not Added Because of Error.	pathmgr	LOG_SID_NO_ACTION
<del>MACGENSERKADDR</del>	3-Error	[chars] PMA_INSTANCE_ID : [dec] PMA_PFX_ADDR : [chars] PMA_PFX_MSK_LEN : [dec] PMA_PFX_FLAG : [chars]\n	A Site Prefix is not Added Because of Error.	pathmgr	LOG_SID_NO_ACTION
<del>MACGENCADUPERR</del>	3-Error	TC Add/Update has Error: [chars] PMA_TC_ID :[dec] PMA_SRC_ADDR :[chars] PMA_DST_ADDR :[chars] PMA_DSCP :[dec] //PMA_APP_ID :[dec] //PMA_SPI :[dec] PMA_IS_INTNET :[dec]\n	A Traffic Class is not Added because of Error.	pathmgr	LOG_SID_NO_ACTION
<del>MACGENCADUPERR</del>	3-Error	TC Add/Update has Error: [chars] PMA_TC_ID :[dec] PMA_SRC_ADDR :[chars] PMA_DST_ADDR :[chars] PMA_DSCP :[dec] //PMA_APP_ID :[dec] //PMA_SPI :[dec] PMA_IS_INTNET :[dec]\n	A Traffic Class is not Added because of Error.	pathmgr	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>PMACENBSASALSCNCE</del>	5-Notice	[chars] PMA_PMCS_ADDR : [chars]\n	HA Status has Changed.	pathmgr	LOG_SID_NO_ACTION
<del>PMACENBSASALSCNCE</del>	5-Notice	[chars] PMA_PMCS_ADDR : [chars]\n	HA Status has Changed.	pathmgr	LOG_SID_NO_ACTION
<del>PMACENBOPCHNSALSTG</del>	5-Notice	PMA_HOP_ID : [node] PMA_DEST_SITE_ID : [node] PMA_REMOTE_IF_ID : [node] PMA_LOCAL_IF_ID : [node] PMA_DSCP : [dec] PMA_TX_STATE : [chars] PMA_RX_STATE : [chars]\n	Hop Channel Reachablity Status Changed.	pathmgr	LOG_SID_NO_ACTION
<del>PMACENBOPCHNSALSTG</del>	5-Notice	PMA_HOP_ID : [node] PMA_DEST_SITE_ID : [node] PMA_REMOTE_IF_ID : [node] PMA_LOCAL_IF_ID : [node] PMA_DSCP : [dec] PMA_TX_STATE : [chars] PMA_RX_STATE : [chars]\n	Hop Channel Reachablity Status Changed.	pathmgr	LOG_SID_NO_ACTION
<del>PMACENBOPCHNUPAE</del>	5-Notice	PMA_HOP_ID : [node] PMA_DEST_SITE_ID : [node] PMA_REMOTE_IF_ID : [node] PMA_LOCAL_IF_ID : [node] PMA_DSCP : [dec]\n	A Hop Channel was Updated.	pathmgr	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PM_AGENT5HOP_CHAN_UPDATE</del>	5-Notice	PMA_HOP_ID : [node] PMA_DEST_SITE_ID : [node] PMA_REMOTE_IF_ID : [node] PMA_LOCAL_IF_ID : [node] PMA_DSCP : [dec]\n	A Hop Channel was Updated.	pathmgr	LOG_SID_NO_ACTION
<del>PM_AGENT5HOP_CHAN_UPDATE</del>	5-Notice	PMA_HOP_ID : [node] PMA_DEST_SITE_ID : [node] PMA_REMOTE_IF_ID : [node] PMA_LOCAL_IF_ID : [node] PMA_DSCP : [dec]\n	A Hop Channel failed to be updated.	pathmgr	LOG_SID_NO_ACTION
<del>PM_AGENT5HOP_CHAN_UPDATE</del>	5-Notice	PMA_HOP_ID : [node] PMA_DEST_SITE_ID : [node] PMA_REMOTE_IF_ID : [node] PMA_LOCAL_IF_ID : [node] PMA_DSCP : [dec]\n	A Hop Channel failed to be updated.	pathmgr	LOG_SID_NO_ACTION
PM_AGENT5PMA_UP	5-Notice	PMA is Up.\n	PMA is Up.	pathmgr	LOG_SID_NO_ACTION
PM_AGENT5PMA_UP	5-Notice	PMA is Up.\n	PMA is Up.	pathmgr	LOG_SID_NO_ACTION
<del>PM_AGENT5RLOC_DEREGISTER</del>	5-Notice	PMA_INTERFACE_ID : [node]\n	An Rloc was Deregistered.	pathmgr	LOG_SID_NO_ACTION
<del>PM_AGENT5RLOC_DEREGISTER</del>	5-Notice	PMA_INTERFACE_ID : [node]\n	An Rloc was Deregistered.	pathmgr	LOG_SID_NO_ACTION
PM_AGENT5RLOC_DOWN	5-Notice	PMA_INTERFACE_ID : [node]\n	An Rloc went Down.	pathmgr	LOG_SID_NO_ACTION
PM_AGENT5RLOC_DOWN	5-Notice	PMA_INTERFACE_ID : [node]\n	An Rloc went Down.	pathmgr	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PM_AGEN</del> 5RLOC_IP_ADDR_CHG	5-Notice	PMA_INTERFACE_ID : [node] PMA_IF_ADDRESS : [chars]\n	An Rloc IP Address has Changed.	pathmgr	LOG_SID_NO_ACTION
<del>PM_AGEN</del> 5RLOC_IP_ADDR_CHG	5-Notice	PMA_INTERFACE_ID : [node] PMA_IF_ADDRESS : [chars]\n	An Rloc IP Address has Changed.	pathmgr	LOG_SID_NO_ACTION
<del>PM_AGEN</del> 5RLOC_PROP_CHG	5-Notice	PMA_INTERFACE_ID : [node] PMA_ESON_STATE : [chars]\n	An Rloc Property has Changed.	pathmgr	LOG_SID_NO_ACTION
<del>PM_AGEN</del> 5RLOC_PROP_CHG	5-Notice	PMA_INTERFACE_ID : [node] PMA_ESON_STATE : [chars]\n	An Rloc Property has Changed.	pathmgr	LOG_SID_NO_ACTION
<del>PM_AGEN</del> 5RLOC_REGISTER	5-Notice	PMA_INTERFACE_ID : [node]\n	An Rloc was Registered.	pathmgr	LOG_SID_NO_ACTION
<del>PM_AGEN</del> 5RLOC_REGISTER	5-Notice	PMA_INTERFACE_ID : [node]\n	An Rloc was Registered.	pathmgr	LOG_SID_NO_ACTION
PM_AGENT-5RLOC_UP	5-Notice	PMA_INTERFACE_ID : [node]\n	An Rloc came Up.	pathmgr	LOG_SID_NO_ACTION
PM_AGENT-5RLOC_UP	5-Notice	PMA_INTERFACE_ID : [node]\n	An Rloc came Up.	pathmgr	LOG_SID_NO_ACTION
<del>PM_AGEN</del> 5SITE_PREFIX_UPDATE	5-Notice	PMA_TABLE_ID : [dec] PMA_INSTANCE_ID : [dec] PMA_PFX_ADDR : [chars] PMA_PFX_MSK_LEN : [dec] PMA_PFX_FLAG : [chars]\n	A Site Prefix is Updated.	pathmgr	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PM_AGEN5SITE_PFX_UPDATE	5-Notice	PMA_TABLE_ID : [dec] PMA_INSTANCE_ID :[dec] PMA_PFX_ADDR :[chars] PMA_PFX_MSK_LEN :[dec] PMA_PFX_FLAG : [chars]\n	A Site Prefix is Updated.	pathmgr	LOG_SID_NO_ACTION
PM_AGEN5TC_UPDATE	5-Notice	PMA_TC_ID :[dec] PMA_SRC_ADDR :[chars] PMA_DST_ADDR :[chars] PMA_DSCP :[dec] //PMA_APP_ID :[dec] //PMA_SPI :[dec] PMA_OLD_PATH_COUNT :[dec] PMA_NEW_PATH_COUNT :[dec] PMA_IS_INTNET :[dec]\n	A Path change is made.	pathmgr	LOG_SID_NO_ACTION
PM_AGEN5TC_UPDATE	5-Notice	PMA_TC_ID :[dec] PMA_SRC_ADDR :[chars] PMA_DST_ADDR :[chars] PMA_DSCP :[dec] //PMA_APP_ID :[dec] //PMA_SPI :[dec] PMA_OLD_PATH_COUNT :[dec] PMA_NEW_PATH_COUNT :[dec] PMA_IS_INTNET :[dec]\n	A Path change is made.	pathmgr	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PM_AGENT-5-TCP_DOWN	5-Notice	TCP EVENT. PMA_SITE_ID :[dec] PMA_TENANT_ID :[dec] PMA_DVC_ID :[dec] PMA_TCP_STATUS :[chars] PMA_PMCS_ADDR :[chars]\n	TCP is Down.	pathmgr	LOG_SID_NO_ACTION
PM_AGENT-5-TCP_DOWN	5-Notice	TCP EVENT. PMA_SITE_ID :[dec] PMA_TENANT_ID :[dec] PMA_DVC_ID :[dec] PMA_TCP_STATUS :[chars] PMA_PMCS_ADDR :[chars]\n	TCP is Down.	pathmgr	LOG_SID_NO_ACTION
PM_AGENT-5-TCP_UP	5-Notice	TCP EVENT. PMA_SITE_ID :[dec] PMA_TENANT_ID :[dec] PMA_DVC_ID :[dec] PMA_TCP_STATUS :[chars] PMA_PMCS_ADDR :[chars]\n	TCP is Up.	pathmgr	LOG_SID_NO_ACTION
PM_AGENT-5-TCP_UP	5-Notice	TCP EVENT. PMA_SITE_ID :[dec] PMA_TENANT_ID :[dec] PMA_DVC_ID :[dec] PMA_TCP_STATUS :[chars] PMA_PMCS_ADDR :[chars]\n	TCP is Up.	pathmgr	LOG_SID_NO_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IMAENR4HOPCHANADD	6-Information	PMA_HOP_ID : [node] PMA_DEST_SITE_ID : [node] PMA_REMOTE_IF_ID : [node] PMA_LOCAL_IF_ID : [node] PMA_DSCP : [dec]\n	A Hop Channel was Added.	pathmgr	LOG_SID_NO_ACTION
IMAENR4HOPCHANADD	6-Information	PMA_HOP_ID : [node] PMA_DEST_SITE_ID : [node] PMA_REMOTE_IF_ID : [node] PMA_LOCAL_IF_ID : [node] PMA_DSCP : [dec]\n	A Hop Channel was Added.	pathmgr	LOG_SID_NO_ACTION
IMAENR4HOPCHNDIEE	6-Information	PMA_HOP_ID : [node] PMA_DEST_SITE_ID : [node] PMA_REMOTE_IF_ID : [node] PMA_LOCAL_IF_ID : [node] PMA_DSCP : [dec]\n	A Hop Channel was Deleted.	pathmgr	LOG_SID_NO_ACTION
IMAENR4HOPCHNDIEE	6-Information	PMA_HOP_ID : [node] PMA_DEST_SITE_ID : [node] PMA_REMOTE_IF_ID : [node] PMA_LOCAL_IF_ID : [node] PMA_DSCP : [dec]\n	A Hop Channel was Deleted.	pathmgr	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PMA_HOP_CHANNEL_DELETED</del>	6-Information	PMA_HOP_ID : [node] PMA_DEST_SITE_ID : [node] PMA_REMOTE_IF_ID : [node] PMA_LOCAL_IF_ID : [node] PMA_DSCP : [dec]\n	A Hop Channel failed to be deleted.	pathmgr	LOG_SID_NO_ACTION
<del>PMA_HOP_CHANNEL_DELETED</del>	6-Information	PMA_HOP_ID : [node] PMA_DEST_SITE_ID : [node] PMA_REMOTE_IF_ID : [node] PMA_LOCAL_IF_ID : [node] PMA_DSCP : [dec]\n	A Hop Channel failed to be deleted.	pathmgr	LOG_SID_NO_ACTION
<del>PMA_DEST_PREFIX_ADDED</del>	7-Debug	PMA_TABLE_ID : [dec] PMA_INSTANCE_ID : [dec] PMA_PFX_ADDR : [chars] PMA_PFX_MSK_LEN : [dec] PMA_PFX_FLAG : [chars]\n	A Dst Prefix to SiteID is Added.	pathmgr	LOG_SID_NO_ACTION
<del>PMA_DEST_PREFIX_ADDED</del>	7-Debug	PMA_TABLE_ID : [dec] PMA_INSTANCE_ID : [dec] PMA_PFX_ADDR : [chars] PMA_PFX_MSK_LEN : [dec] PMA_PFX_FLAG : [chars]\n	A Dst Prefix to SiteID is Added.	pathmgr	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>MACENRIRKOSIEDEE</del>	7-Debug	PMA_TABLE_ID : [dec] PMA_INSTANCE_ID : [dec] PMA_PFX_ADDR : [chars] PMA_PFX_MSK_LEN : [dec]\n	A Dst Prefix to SiteID is Deleted.	pathmgr	LOG_SID_NO_ACTION
<del>MACENRIRKOSIEDEE</del>	7-Debug	PMA_TABLE_ID : [dec] PMA_INSTANCE_ID : [dec] PMA_PFX_ADDR : [chars] PMA_PFX_MSK_LEN : [dec]\n	A Dst Prefix to SiteID is Deleted.	pathmgr	LOG_SID_NO_ACTION
<del>MACENRIRKOSIEUDE</del>	7-Debug	PMA_TABLE_ID : [dec] PMA_INSTANCE_ID : [dec] PMA_PFX_ADDR : [chars] PMA_PFX_MSK_LEN : [dec] PMA_PFX_FLAG : [chars]\n	A Dst Prefix to SiteID is Updated.	pathmgr	LOG_SID_NO_ACTION
<del>MACENRIRKOSIEUDE</del>	7-Debug	PMA_TABLE_ID : [dec] PMA_INSTANCE_ID : [dec] PMA_PFX_ADDR : [chars] PMA_PFX_MSK_LEN : [dec] PMA_PFX_FLAG : [chars]\n	A Dst Prefix to SiteID is Updated.	pathmgr	LOG_SID_NO_ACTION
<del>MACENRISIERHXADD</del>	7-Debug	PMA_TABLE_ID : [dec] PMA_INSTANCE_ID : [dec] PMA_PFX_ADDR : [chars] PMA_PFX_MSK_LEN : [dec] PMA_PFX_FLAG : [chars]\n	A Site Prefix is Added.	pathmgr	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
IMAGENETSIERHXADD	7-Debug	PMA_TABLE_ID : [dec] PMA_INSTANCE_ID : [dec] PMA_PFX_ADDR : [chars] PMA_PFX_MSK_LEN : [dec] PMA_PFX_FLAG : [chars]\n	A Site Prefix is Added.	pathmgr	LOG_SID_NO_ACTION
IMAGENETSIERHXDEL	7-Debug	PMA_TABLE_ID : [dec] PMA_INSTANCE_ID : [dec] PMA_PFX_ADDR : [chars] PMA_PFX_MSK_LEN : [dec] PMA_PFX_FLAG : [chars]\n	A Site Prefix is Deleted.	pathmgr	LOG_SID_NO_ACTION
IMAGENETSIERHXDEL	7-Debug	PMA_TABLE_ID : [dec] PMA_INSTANCE_ID : [dec] PMA_PFX_ADDR : [chars] PMA_PFX_MSK_LEN : [dec] PMA_PFX_FLAG : [chars]\n	A Site Prefix is Deleted.	pathmgr	LOG_SID_NO_ACTION
IMAGENETSIETONHAD	7-Debug	PMA_DEST_SITE_ID : [dec] PMA_HOP_ID : [dec]PMA_HOP_ID : [dec]\n	A SiteID to NextHop is Added.	pathmgr	LOG_SID_NO_ACTION
IMAGENETSIETONHAD	7-Debug	PMA_DEST_SITE_ID : [dec] PMA_HOP_ID : [dec]PMA_HOP_ID : [dec]\n	A SiteID to NextHop is Added.	pathmgr	LOG_SID_NO_ACTION
IMAGENETSIETONHDEL	7-Debug	PMA_DEST_SITE_ID : [dec] PMA_HOP_ID : [dec]PMA_HOP_ID : [dec]\n	A SiteID to NextHop is Deleted.	pathmgr	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PM_AGENT-7-TC_ADD	7-Debug	PMA_DEST_SITE_ID : [dec] PMA_HOP_ID : [dec] PMA_HOP_ID : [dec]\n	A SiteID to NextHop is Deleted.	pathmgr	LOG_SID_NO_ACTION
PM_AGENT-7-TC_ADD	7-Debug	PMA_DEST_SITE_ID : [dec] PMA_HOP_ID : [dec] PMA_HOP_ID : [dec]\n	A SiteID to NextHop is Updated.	pathmgr	LOG_SID_NO_ACTION
PM_AGENT-7-TC_ADD	7-Debug	PMA_DEST_SITE_ID : [dec] PMA_HOP_ID : [dec] PMA_HOP_ID : [dec]\n	A SiteID to NextHop is Updated.	pathmgr	LOG_SID_NO_ACTION
PM_AGENT-7-TC_ADD	7-Debug	PMA_TC_ID : [dec] PMA_SRC_ADDR : [chars] PMA_DST_ADDR : [chars] PMA_DSCP : [dec] //PMA_APP_ID : [dec] //PMA_SPI : [dec] PMA_IS_INTERNET : [dec]\n	A Traffic Class is Added.	pathmgr	LOG_SID_NO_ACTION
PM_AGENT-7-TC_ADD	7-Debug	PMA_TC_ID : [dec] PMA_SRC_ADDR : [chars] PMA_DST_ADDR : [chars] PMA_DSCP : [dec] //PMA_APP_ID : [dec] //PMA_SPI : [dec] PMA_IS_INTERNET : [dec]\n	A Traffic Class is Added.	pathmgr	LOG_SID_NO_ACTION
PM_AGENT-7-TC_AGE_OUT	7-Debug	PMA_TC_ID : [dec] PMA_SRC_PFX : [chars] PMA_DST_PFX : [chars] PMA_DSCP : [dec]\n	A Traffic Class is Aged Out.	pathmgr	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PM_AGENT-7-TC_AGE_OUT	7-Debug	PMA_TC_ID :[dec] PMA_SRC_PFX :[chars] PMA_DST_PFX :[chars] PMA_DSCP :[dec]n	A Traffic Class is Aged Out.	pathmgr	LOG_SID_NO_ACTION
PM_AGENT-7-TC_DELETE	7-Debug	PMA_TC_ID :[dec] PMA_SRC_ADDR :[chars] PMA_DST_ADDR :[chars] PMA_DSCP :[dec] //PMA_APP_ID :[dec] //PMA_SPI :[dec] PMA_IS_INTNET :[dec]n	A Traffic Class is Deleted.	pathmgr	LOG_SID_NO_ACTION
PM_AGENT-7-TC_DELETE	7-Debug	PMA_TC_ID :[dec] PMA_SRC_ADDR :[chars] PMA_DST_ADDR :[chars] PMA_DSCP :[dec] //PMA_APP_ID :[dec] //PMA_SPI :[dec] PMA_IS_INTNET :[dec]n	A Traffic Class is Deleted.	pathmgr	LOG_SID_NO_ACTION
PM_AGENT-7-TC_REQ	7-Debug	PMA_SRC_ADDR :[chars] PMA_DST_ADDR :[chars] PMA_DSCP :[dec] //PMA_APP_ID :[dec] //PMA_SPI :[dec] PMA_IS_INTNET :[dec]n	A Traffic Class is Requested.	pathmgr	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PM_AGENT-7-TC_REQ	7-Debug	PMA_SRC_ADDR :[chars] PMA_DST_ADDR :[chars] PMA_DSCP :[dec] //PMA_APP_ID :[dec] //PMA_SPI :[dec] PMA_IS_INTNET :[dec]\n	A Traffic Class is Requested.	pathmgr	LOG_SID_NO_ACTION
PM_AGENT-7-TEST	7-Debug	[chars]	-	-	-
PM_AGENT-7-TEST	7-Debug	[chars]	-	-	-
PM_ISSU-3-BUFFER	3-Error	Port Manager ISSU client failed to get buffer for message error [dec]	Port Manager ISSU client failed to get buffer for building\n a negotiation message. Hence it can send the negotiation\n message to the standby unit. When there is a problem in\n the negotiaton the standby unit can not be brought up.	pm	"show logging and show checkpoint client"
PMISSUBCAPINVALID_SIZE	3-Error	Port Manager ISSU client capability list is empty.	The Port Manager ISSU client capability exchange list size\n is invalid.	pm	"show issu capability entries <Client_ID>"
PMISSUBCAPINCOMPATIBLE	3-Error	Port Manager ISSU client capability exchange result incompatible.	The Port Manager ISSU client capability exchange has negotiated\n as incompatible with the peer.	pm	"show issu negotiated capability <Session_ID>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PM_ISSU-3-CAPABILITY	3-Error	Port Manager ISSU client [chars]	Port Manager ISSU client observed an error during capability\n\n negotiation. When this error happens there is a mismatch\n\n between the client capability between the active and\n\n standby unit.	pm	"show issu capability entries <client_id> and \n\n show issu session <client_id> and \n\n show issu negotiated capability <session_id>"
PM_ISSU-3-INIT	3-Error	Port Manager ISSU client initialization failed at [chars] error [chars]	Port Manager ISSU client could not be initialized this will\n\n cause catastrophic failure when ISSU upgrade or downgrade\n\n is performed.	pm	LOGSIDSHTTECHACTION
PM_ISSU-3-MSG_NOT_OK	3-Error	Port Manager ISSU client message [dec] is not compatible	Port Manager ISSU client received an incompatible message\n\n from the peer unit. Since the message is not compatible\n\n it can be processed by this unit	pm	"show issu message group <client_id> and\n\n show issu session <client_id> and \n\n show issu negotiated version <session_id>"
PM_ISSU-3-MSG_SIZE	3-Error	Port Manager ISSU client failed to get the message size for message [dec]	Port Manager ISSU client failed to calculate message size\n\n for the message specified. The PM ISSU client will not\n\n be able to send message to the standby unit.	pm	"show issu message group <client_id> and\n\n show issu session <client_id> and \n\n show issu negotiated version <session_id>"
PM_ISSU-3-POLICY	3-Error	Port Manager ISSU client message type [dec] is [chars]	Port Manager ISSU client received an message type which it\n\n does not support. The policy is applied to make the session\n\n compatible.	pm	"show issu session <client_id>"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PM_ISSU3-SEND_FAILED	3-Error	Port Manager ISSU client failed to send a negotiation message error [dec]	Port Manager ISSU client could not send a session negotiation\n\n message to the peer. When there is a problem in the \n\n negotiation the standby unit can not be brought up.	pm	"show logging and show checkpoint client"
PM_ISSU3-SESSION	3-Error	Port Manager ISSU client [chars]	Port Manager ISSU client observed an error during a session\n\n negotiation with the peer unit. When there is a problem\n\n with the session the standby unit can not be brought up.	pm	"show issu capability entries <client_id> and \n\n show issu session <client_id> and \n\n show issu negotiated capability <session_id>"
PM_ISSU3-SESSION_UNREGISTER	3-Error	Port Manager ISSU client failed to unregister session information. Error: [dec] [chars]	The Port Manager ISSU client failed to unregister session information.	pm	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
PM_ISSU3-TRANSFORM	3-Error	Port Manager ISSU client [chars] transform failed error [chars]	Port Manager ISSU client could not transform the message.\n\n If the transmit transformation failed it means that the\n\n checkpoint message can not be sent to the standby unit.\n\n If the receive transformation failed it means that the\n\n checkpoint message can not be applied on the standby\n\n unit. In both cases the Port Manager state will not\n\n be identical with the active unit.	pm	"show issu session <client_id> and \n\n show issu negotiated version <session_id>"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>PMODEMISMCALINUM</del>	7-Debug	\n[chars]: ISDN incoming called number: [chars]	This is a tracing message indicating the number of the ISDN\n\n line receiving a call.	-	LOG_SID_DBG_ACTION
<del>PMODEMISMCALINUM</del>	7-Debug	\n[chars]: ISDN incoming caller number: [chars]	This is a tracing message indicating the number of an incoming\n\n ISDN caller.	-	LOG_SID_DBG_ACTION
<del>PMODEMISMCALINUM</del>	7-Debug	\n[chars]: ISDN outgoing called number: [chars]	This is a tracing message indicating a dialed ISDN number.	-	LOG_SID_DBG_ACTION
<del>PMODEMISMCALINUM</del>	7-Debug	\n[chars]: [chars] \n[chars]	This is a tracing message indicating a dynamic event reported by\n\n the specified modem.	-	LOG_SID_DBG_ACTION
<del>PMODEMISMCALINUM</del>	7-Debug	\n[chars]: [chars] \n[chars]	This is a tracing message indicating an end-connection event\n\n from the specified modem.	-	LOG_SID_DBG_ACTION
<del>PMODEMISMCALINUM</del>	7-Debug	\n[chars]: [chars] \n[chars]	This is a tracing message indicating a link rate event reported by\n\n the specified modem.	-	LOG_SID_DBG_ACTION
<del>PMODEMISMCALINUM</del>	7-Debug	\n[chars]: [chars] \n[node] State: [chars]	This is a tracing message indicating a state event reported by\n\n the specified modem.	-	LOG_SID_DBG_ACTION
<del>PMODEMISMCALINUM</del>	7-Debug	\n[chars]: [chars] \n[chars]	This is a tracing message indicating a static event reported by\n\n the specified modem.	-	LOG_SID_DBG_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>RMODEM</del> <del>TRACE</del> <del>EVENT</del>	7-Debug	\n[chars]: [chars] [chars]	This is a tracing message indicating a link rate event reported by\n\n the specified modem.	-	LOG_SID_DBG_ACTION
<del>RMODEM</del> <del>TRACE</del> <del>HDR</del>	7-Debug	\n\nModem [chars] Events Log:	This is the initial message for the trace of the specified modem.\n\n The modem's stored trace messages will follow.	-	LOG_SID_DBG_ACTION
<del>RMODEM</del> <del>UNKNOWN</del> <del>EVENT</del>	7-Debug	\n[chars]: Error in events log	This is a tracing message indicating a formatting error in the\n\n modem event history. One or more events may be missing from\n\n the trace.	-	LOG_SID_DBG_ACTION
<del>RMODEM</del> <del>UNKNOWN</del> <del>EVENT</del>	7-Debug	\n[chars]: Error in events log	This is a tracing message indicating a formatting error in the\n\n modem event history. One or more events may be missing from\n\n the trace.	-	LOG_SID_DBG_ACTION
<del>RMODEM</del> <del>MAN</del> <del>EVENT</del>	1-Alert	Invalid modem management [chars] event 0x[node]x for modem[chars]	The modem management facility received an unrecognize event.	-	LOG_STD_ACTION
<del>RMODEM</del> <del>MAN</del> <del>MODEM</del>	1-Alert	Modem [chars] failed [chars]	A software or hardware problem has been detected on a modem.\n\n The specific modem and reason are listed in the message.	-	LOG_STD_ACTION
<del>RMODEM</del> <del>MAN</del> <del>INITIAL</del>	1-Alert	Initialization failed.	Modem maintenance facility initialization failed.	-	"Disable Autotest Poweron test and avoid manual back-2-back test." LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>MMODEM</del> <del>NE</del> <del>REPORT</del>	4-Warning	Modems [chars] and [chars] back-to-back test: aborted	This is a tracing message indicating a back-to-back test\n\n failed between the two specified MICA modems.	-	"Perform more back to back tests by pairing the failed modems with\n\n other modems to determine which modem is bad. Check the failed\n\n modems again after performing a power cycle. " LOG_SID_RECUR_ACTION
<del>MMODEM</del> <del>NE</del> <del>MODEM</del>	4-Warning	Modems [chars] and [chars] failed back-to-back test: [chars]	The two modems reported in the message failed a back-to-back test.\n\n At least one of them has failed.	-	"Perform more back to back tests by pairing the failed modems with\n\n other modems to determine which modem is bad. Check the failed\n\n modems again after performing a power cycle. " LOG_SID_RECUR_ACTION
<del>MMODEM</del> <del>NE</del> <del>CONNECT</del>	5-Notice	Modems [chars] and [chars] connected in back-to-back test: [chars]	A back to back test connection has been made between the selected\n\n modems. The test is still in progress.	-	LOG_SID_NO_ACTION
<del>MMODEM</del> <del>NE</del> <del>SENT</del>	5-Notice	Auto Back-to-Back test initiated by [chars]	This is a tracing message indicating an automatic back-to-back\n\n test was initiated by the specified MICA modem.	-	LOG_SID_DBG_ACTION
<del>MMODEM</del> <del>NE</del> <del>MODEM</del>	5-Notice	Modems [chars] and [chars] completed back-to-back test:	The reported modems have passed the back to back test without any\n\n errors.	-	LOG_SID_NO_ACTION
<del>MMODEM</del> <del>NE</del> <del>MODEM</del> <del>CK</del>	5-Notice	Modem [chars] passed the test	Tests on the specified modem were successful.	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PM_PVLAN_ISSU3BUFR	3-Error	Private Vlan ISSU client failed to get buffer for message error [dec]	Private Vlan ISSU client failed to get buffer for building a negotiation message. Hence it can send the negotiation message to the standby unit. When there is a problem in the negotiation the standby unit can not be brought up.	c7600-12	"show logging and show checkpoint client"
PM_PVLAN_ISSU3CAPBLTY	3-Error	Private Vlan ISSU client [chars]	Private Vlan ISSU client observed an error during capability negotiation. When this error happens there is a mismatch between the client capability between the active and standby unit.	c7600-12	"show issu capability entries <client_id> and show issu session <client_id> and show issu negotiated capability <session_id>"
PM_PVLAN_ISSU3INIT	3-Error	pm_pvlan Client Name ISSU client initialization failed at [chars] error [chars]	pm_pvlan Client Name ISSU client could not be initialized this will cause catastrophic failure when ISSU upgrade or downgrade is performed.	c7600-12	LOGSIDSHTRECHACTION
PM_PVLAN_ISSU3MGNOTCK	3-Error	Private Vlan ISSU client message [dec] is not compatible	Private Vlan ISSU client received an incompatible message from the peer unit. Since the message is not compatible it can be processed by this unit	c7600-12	"show issu message group <client_id> and show issu session <client_id> and show issu negotiated version <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PMPLAN_ISSUMSGSIZE	3-Error	Private Vlan ISSU client failed to get the message size for message [dec]	Private Vlan ISSU client failed to calculate message size for the message specified. The OIR ISSU client will not be able to send message to the standby unit.	c7600-I2	"show issu message group <client_id> and \n show issu session <client_id> and \n show issu negotiated version <session_id>"
PMPLAN_ISSUPOLICY	3-Error	Private Vlan ISSU client message type [dec] is [chars]	Private Vlan ISSU client received an message type which it does not support. The policy is applied to make the session compatible.	c7600-I2	"show issu session <client_id>"
PMPLAN_ISSUSENDFAILD	3-Error	Private Vlan ISSU client failed to send a negotiation message error [dec]	Private Vlan ISSU client could not send a session negotiation message to the peer. When there is a problem in the negotiation the standby unit can not be brought up.	c7600-I2	"show logging and show checkpoint client"
PMPLAN_ISSUSSESSION	3-Error	Private Vlan ISSU client [chars]	Private Vlan ISSU client observed an error during a session negotiation with the peer unit. When there is a problem with the session the standby unit can not be brought up.	c7600-I2	"show issu capability entries <client_id> and \n show issu session <client_id> and \n show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PM-PVLAN_ISSU_TRANSFORM	3-Error	Private Vlan ISSU client [chars] transform failed error [chars]	Private Vlan ISSU client could not transform the message.\n\n If the transmit transformation failed it means that the\n\n checkpoint message can not be sent to the standby unit.\n\n If the receive transformation failed it means that the\n\n checkpoint message can not be applied on the standby\n\n unit. In both cases the pm_pvlan Client Name state will not\n\n be identical with the active unit.	c7600-12	"show issu session <client_id> and \n\n show issu negotiated version <session_id>"
PM-INCONSISTENT_PORTS	1-Alert	Inconsistent HW/SW port state for [chars]. Please shut/no shut the interface	The hardware and software port state has become inconsistent.	pm	"Enter the <del>&lt;CmdBold&gt;shut&lt;/CmdBold&gt;</del> command followed by the\n\n <CmdBold>no shutdown</CmdBold> command on the interface specified in\n\n the message."
PM-2-LOW_SP_MEM	2-Critical	Switch process available memory is less than [dec] bytes	Switch Processor available memory dropped to a low level. Possibly\n\n too many Layer 2 VLANs are configured in the system.	pm	"Removed features from the system to reduce memory usage."
PM-2-NOMEM	2-Critical	Not enough memory available for [chars]	The Port Manager subsystem could not obtain the memory it needed.	pm	LOGS_IDSHTIHCACION
PM-2-VLAN_ADD	2-Critical	Failed to add VLAN [dec] - [chars].	Failed in adding VLAN to VTP. The reason is stated in the string.	pm	LOGS_IDSHTIHCACION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PM3ERR_INCOMP_PORT	3-Error	[dec]/[dec] is set to inactive because [dec]/[dec] is a [chars] port	Private host port can't be configured with trunk private promiscuous and span destination port on the same coil.	-	"Try to configure the incompatible ports on different coils."
PM3INTERNALERROR	3-Error	Port Manager Internal Software Error [chars]: [chars]: [dec]: [chars]	There is an internal software error encountered in the IOS Port Manager.	pm	LOG_STD_ACTION
PM4-BAD_APP_ID	4-Warning	an invalid application id [dec] was detected	An invalid request was detected by the Port Manager.	pm	LOG_SIDSHTTECH_ACTION
PM4-BAD_APP_REQ	4-Warning	an invalid [chars] request by the '[chars]' application was detected	An invalid request was detected by the Port Manager.	pm	LOG_SIDSHTTECH_ACTION
PM4BAD_CARD_COOKIE	4-Warning	an invalid card cookie was detected	An invalid request was detected by the Port Manager.	pm	LOG_SIDSHTTECH_ACTION
PM4BAD_CARD_SLOT	4-Warning	an invalid card slot [dec] was detected	An invalid request was detected by the Port Manager.	pm	LOG_SIDSHTTECH_ACTION
PM4-BAD_COOKIE	4-Warning	[chars] was detected	An invalid request was detected by the Port Manager.	pm	LOG_SIDSHTTECH_ACTION
PM4BAD_HA_ENTRY_EVENT	4-Warning	Invalid Host access entry event [dec] is received	Host access table is entry event is not any of add/delete/update event	pm	LOG_SIDSHTTECH_ACTION
PM4BAD_PORT_COOKIE	4-Warning	an invalid port cookie was detected	An invalid request was detected by the Port Manager.	pm	LOG_SIDSHTTECH_ACTION
PM4BAD_PORT_NUMBER	4-Warning	an invalid port number [dec] was detected	An invalid request was detected by the Port Manager.	pm	LOG_SIDSHTTECH_ACTION
PM4BAD_VLAN_COOKIE	4-Warning	an invalid vlan cookie was detected	An invalid request was detected by the Port Manager.	pm	LOG_SIDSHTTECH_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PM-4-BAD_VLAN_ID	4-Warning	an invalid vlan id [dec] was detected	An invalid request was detected by the Port Manager.	pm	LOGS_IDSHTTECH_ACTION
<del>PMCMCFG_UNSUPPORTED</del>	4-Warning	Port [chars] is etherchannel member port and not supported on [chars] SPAN session as source ports. Removal and Reconfiguration of SPAN session needed	Etherchannel Member ports are not supported as Local SPAN source	bigbang-l2	"Remove existing SPAN session and Reconfiguration needed"
<del>PMCMCFG_UNSUPPORTED</del>	4-Warning	Port [chars] is etherchannel member port and not supported on SPAN session as destination port. Removal and Reconfiguration of SPAN session needed	Etherchannel Member ports are not supported as Local SPAN destination	bigbang-l2	"Remove existing SPAN session and Reconfiguration needed"
PM-4-ERR_DISABLE	4-Warning	[chars] error detected on [chars] putting [chars] in err-disable state	This is a defensive measure that will put the interface in err-disable state when it detects a mis-configuration or mis-behavior . A recovery will be attempted after the configured retry time default 5 minutes.	pm	LOGS_IDSHTTECH_ACTION
PM4ERR_DISABLE_VP	4-Warning	[chars] error detected on [chars] vlan [dec]. Putting in err-disable state.	This is a defensive measure that will put the virtual port i.e. the port-vlan pair in err-disable state when it detects a mis-configuration or	pm	LOGS_IDSHTTECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PM-4-ERR_RECOVER	4-Warning	Attempting to recover from [chars] err-disable state on [chars]	This is an attempt to bring the interface back after taking it down to\n\ err-disable state	pm	LOG_SIDSH_TECH_ACTION
PM4ERR_RECOVER_VP	4-Warning	Attempting to recover from [chars] err-disable state on [chars] vlan [dec].	This is an attempt to bring the virtual port back after taking it down to err-disable state	pm	LOG_SIDSH_TECH_ACTION
PM4EXT_VLAN_INUSE	4-Warning	VLAN [dec] currently in use by [chars]	Port Manager failed to allocate the VLAN for external use as the VLAN\n\ is currently occupied by another feature	pm	-
PM4EXT_VLAN_NOT_AVAIL	4-Warning	VLAN [dec] not available in Port Manager	Port Manager failed to allocate the requested VLAN.\n\ The VLAN is either used as an internal VLAN by other features or the\n\ maximum allowed extended VLANs are already configured.	pm	"Try a different VLAN on the device if the limit on maximum allowed\n\ extended VLANs is not yet reached."
PM-4-INACTIVE	4-Warning	putting [chars] in inactive state because [chars]	The Port Manager has been blocked from creating a virtual port for the switch port and VLAN causing the port to be in an inactive state. The reason for this condition is specified in the error message.	pm	LOG_SIDSH_TECH_ACTION
PM-4-INT_FAILUP	4-Warning	[chars] failed to come up. No internal VLAN available	Port Manager failed to allocate internal VLAN and thus the interface\n\ cannot come up.	pm	"Remove extended range VLAN to free up resources."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PM4INT_VLAN_NOI <del>VAL</del>	4-Warning	Failed to allocate internal VLAN in Port Manager	Port Manager failed to find any available internal VLAN	pm	"Delete some extened range VLANs created by users or remove some features\n\ that require internal VLAN allocation e.g. routed port"
PM4 <del>INT_VLAN_NOI</del> HOST_ACCESS <del>NR</del>	4-Warning	Invalid Host access entry type [dec] is received	Host access entry should be one of configured/dynamic type	pm	LOG_SID <del>SH</del> TECH <del>ACI</del> ON
PM-4-LIMITS	4-Warning	The number of vlan-port instances on [chars] exceeded the recommended limit of [dec]	-	-	"Reduce the number of trunks and VLANs configured in the module " "or switch specified in the error message. Keep the virtual port " "VLAN port count below the recommended limit specified in " "the configuration documentation. Enter the <CmdBold>show " "interface trunk<NoCmdBold> command to see the total number of trunks " "and VLANs."
PM4MPLS_MIU_EC_CFG	4-Warning	MPLS MTU size [dec] is not supported by one or more ports in channel [chars].	Port Manager on Standby discovered that the port state has been \n\ inconsistent for more that 1 second. Inconsistent ports are reactivated\n\ on switchover you will see PORT_BOUNCED message.	pm	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PM4MPLSMTU_PRT_CFG	4-Warning	MPLS MTU size [dec] is not supported by port [chars].	The MPLS MTU size configured on the port is larger than the maximum MTU size that can be supported by this port. As a result large packets can be dropped.	pm	"Reduce the MPLS MTU size."
PM4NO_SUBBLOCK	4-Warning	No PM subblock found for [chars]	Failed to find PM subblock for this interface.	pm	LOG_SID_SH_TECH_ACTION
PM4PORT_BOUNCED	4-Warning	Port [chars] was bounced by [chars].	The Port Manager needed to perform a reactivation of a port in the link down state during a switchover. A port is only reactivated when the port data structures lack consistency between the active and standby supervisors. Active ports in the link down state were returned to the link up state by the reactivation event.	pm	LOG_SID_NO_ACTION
PM4PORT_CONSISTENT	4-Warning	Port [chars] consistency has been restored IDB state: [chars].	Port Manager on Standby discovered that port state became consistent again.	pm	LOG_SID_NO_ACTION
PM4PLAN_TYPE_CFG_ERR	4-Warning	Failed to set VLAN [dec] to a [chars] VLAN	Platform failed to set private vlan type.	pm	LOG_SID_SH_TECH_ACTION
PM4TOO_MANY_APP	4-Warning	application '[chars]' exceeded registration limit	An invalid request was detected by the Port Manager.	pm	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PM4-UNKNOWN_HOST_ACCESS	4-Warning	Invalid Host access value [dec] is received	Host access table is being accesses with an invalalid host access value	pm	LOG_SID_SH_TECH_ACTION
PM-4-VMPS_CFG	4-Warning	Dynamic access VLAN [dec] same as voice vlan on [chars].	Access VLAN on VMPS server is set to same VLAN as voice VLAN on the\n port.	pm	"Access VLAN assignment on VMPS server should be different from voice\n VLAN."
PM-6-CABLE_TEST	6-Information	TDR test started on interface [chars]	-	pm	LOG_SID_NO_ACTION
PM-6-EXT_VLAN_ADDITION	6-Information	Extended VLAN is not allowed to be configured in VTP CLIENT mode.	This message will only be seen if you try to configure an extended\n VLAN while the switch is in VTP client mode. The configuration will\n fail and will not be written to the runnning configuration file but\n otherwise switch performance and features will be unaffected.	pm	"This is an informational message only no further action is required.\n If you need to configure an extended VLAN you must configure the switch\n to leave VTP client mode."
PM-0-PROCESS_NOTIFICATION	0-Emergency	iosxe-chassismgr	The process lifecycle notification component failed because[chars]	"The process lifecycle notification component failed	-
PM-0-PROCFAILCRIT	0-Emergency	iosxe-chassismgr	A critical process[chars] has failed (rc %d)	"A process important to the functioning of the router has failed."	"Note the time of the message and investigate the error message logs to learn more about the problem. If the problem persists
PM-3-PROC_BAD_COMMAND	3-Error	iosxe-chassismgr	Non-existent executable or bad library used for process[chars]	"The executable file used for the process is missing or a dependent library is bad"	"Make sure that the named executable is present and dependent libraries are good"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PMAN3-PROC_BAD_EXECUTABLE	3-Error	iosxe-chassismgr	Bad executable or permission problem with process[chars]	"The executable file used for the process is bad or has permission problem"	"Make sure that the named executable is replaced with correct executable"
PMAN3-PROC_EMPTY_EXECUTABLE	3-Error	iosxe-chassismgr	Empty executable used for process[chars]	"The executable file used for the process is empty"	"Make sure that the named executable is of non-zero size"
PMAN3-PROC_RESTART_COUNT_EXCEEDED	3-Error	iosxe-chassismgr	The process[chars] restart count (%d) has exceeded the configured limit (%d)	"The process was restarted many times and has exceeded the configured limit."	"This message will appear with other messages related to the process. Check the other messages to determine the reason for the failures and see if corrective action can be taken. If the problem persists
PMAN3-PROC_FAIL	3-Error	iosxe-chassismgr	The process[chars] has failed (rc %d)	"The process has failed as the result of an error."	"This message will appear with other messages related to the process. Check the other messages to determine the reason for the failures and see if corrective action can be taken. If the problem persists
PMAN3-PROC_FATAL_IGNORE	3-Error	iosxe-chassismgr	%s process exits and failures are being ignored due to debug settings. Normal router functionality will be affected. Critical router functions like RP switchover	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PMAN-3-PROCFailOPT	3-Error	iosxe-chassismgr	An optional process[chars] has failed (rc %d)	"A process that does not affect the forwarding of traffic has failed."	"Note the time of the message and investigate the kernel error message logs to learn more about the problem. Although traffic will still be forwarded after receiving this message
PMAN-3-PROCHLDDOWN	3-Error	iosxe-chassismgr	The process[chars] has been helddown (rc %d)	"The process was restarted too many times with repeated failures and has been placed in the holddown state."	"This message will appear with other messages related to the process. Check the other messages to determine the reason for the failures and see if corrective action can be taken. If the problem persists
PMAN-3-RELOAD_IGNORED	3-Error	iosxe-chassismgr	All[chars]/%d reloads are being ignored. This is being done for debugging purposes and will be changed at a later time to allow the reload. Critical router functions like RP switchover	-	-
PMAN-3-RELOAD_RP	3-Error	iosxe-chassismgr	Reloading:[chars]	"The RP is being reloaded"	"Make sure this is not due to an error condition. If it is due to an error condition
PMAN-3-RELOAD_READY	3-Error	iosxe-chassismgr	Reloading:[chars]	"The RP is being reloaded since there is no ready standby instance"	"Make sure this is not due to an error condition"
PMAN-3-RELOAD_SYSTEM	3-Error	iosxe-chassismgr	Reloading:[chars]	"The system is being reloaded"	"Make sure this is not due to an error condition. If it is due to an error condition

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PMAN-3-RPSWITCH	3-Error	iosxe-chassismgr	RP switch initiated. Critical process[chars] has failed (rc %d)	"A RP switchover has been initiated due to a critical fault"	"Make sure this is not due to an error condition. If it is due to an error condition"
PMAN-5-EXITACTION	5-Notice	iosxe-chassismgr	Process manager is exiting:[chars]	"The process manager is exiting"	"Make sure this is not due to an error condition. If it is due to an error condition"
PMAN-6-PROC_PATCH	6-Information	iosxe-chassismgr	Process[chars] restarted to apply/remove a patch	"Process will be relaunched to apply/remove a patch"	"No user action is necessary. This message is provided for informational purposes only."
PMAN-6-PROCSHUT	6-Information	iosxe-chassismgr	The process[chars] has shutdown	"The process has gracefully shutdown."	"No user action is necessary. This message is provided for informational purposes only."
PMAN-6-PROCSTART	6-Information	iosxe-chassismgr	The process[chars] has started	"The process has launched and is operating properly."	"No user action is necessary. This message is provided for informational purposes only."
PMAN-6-PROCSTATELESS	6-Information	iosxe-chassismgr	The process[chars] is restarting stateless	"The process has requested a stateless restart."	"No user action is necessary. This message is provided for informational purposes only."
PMDWDM-4-TCA	4-Warning	[chars]: [chars] [chars] [chars] value [node]d threshold [node]d [chars]	The specified PM FEC TCA has been declared or released	g709-dwdm	"Recommended action is to repair the source of the alarm."
PMIPv6-TUNNELDELETE	5-Notice	Deleting the Proxy Mobile IPv6 tunnel [chars]	The PMIPv6 tunnel is being deleted.	mipv6	"If you suspect this condition contact technical support representative with the output of show tech"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PMIPv6-5-TUNNELDELETE	5-Notice	Deleting the Proxy Mobile IPv6 tunnel [chars]	The PMIPv6 tunnel is being deleted.	mipv6	"If you suspect this condition contact technical\n\n support representative with the output of show tech"
PMIPv6-5-TUNNELUP	5-Notice	Bringing up the Proxy Mobile IPv6 tunnel [chars]	The PMIPv6 tunnel is being deleted.	mipv6	"If you suspect this condition contact technical\n\n support representative with the output of show tech"
PMIPv6-5-TUNNELUP	5-Notice	Bringing up the Proxy Mobile IPv6 tunnel [chars]	The PMIPv6 tunnel is being deleted.	mipv6	"If you suspect this condition contact technical\n\n support representative with the output of show tech"
PMOD-3-MSG_ERR	3-Error	[chars]	Error Messages	pagent	"try debug command"
PMOD-6-MSG_INF	6-Information	[chars]	Program information	-	-
PMOD-7-MSG_DBG	7-Debug	[chars]	Debug Messages	-	-
PNNI-2-FLOOD_ERROR	2-Critical	[chars]	-	-	-
PNNI-2-INTERNAL_NUMBER	2-Critical	Empty Internal Number Stack: [chars]	An internal software error has occurred.	-	LOG_SID_SH_TECH_ACTION
PNNI-2-SPF_ERROR	2-Critical	Tent List Overflow in [chars]	An internal software error occurred.	-	LOG_STD_ACTION
PNNI-3-INTERNAL_ERROR	3-Error	[chars][chars] [hec]	An internal software error occurred. The message contains more information that can be used to identify the problem.	-	LOG_STD_ACTION
PNNI-3-INVALID_MEM	3-Error	Bad address of [chars] [hex] please collect \show atm pnni trace error\	An internal software error occurred.	-	"Use \"show atm pnni trace error\" to collect more information. " LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PNNI4-ADDRESS_EXIST	4-Warning	Address derived from the switch's prefix by soft PVC manager [chars] clashes with existing address in prefix table	An PVC port address assignment has collided with an existing address. An address that would have been assigned by this switch has already been assigned by another.	-	"If possible assign a new MAC address to the peer system that caused the assignment collision."
PNNI4-ATM_SYS_ERROR	4-Warning	Error: [chars]	The PM SPE State Machine has run out of event memory.	port-mgmt	LOG_STD_ACTION
PNNI4-BADPACKET	4-Warning	Invalid [chars] pkt: [chars] [dec] [dec]	An invalid packet was received from a network peer.	-	"Check the originating device for a cause of the corrupted packets."
PNNI4-BADROUTERREQ	4-Warning	Bad Request from Signaling [hec]	A source routing request by another network host was corrupted.	-	"Check the originating system for a cause of the problem."
PNNI4-CONFIG_ERROR	4-Warning	Configuration Error: [chars]	This message indicates a configuration error in the PNNI subsystem. The message will display more specific information about the cause of problem.	-	"Change the configuration to correct the error."
PNNI4-DUPLICATE_NODE_ID	4-Warning	[chars] [chars] for node [dec] [chars]	An internal software error occurred.	-	LOG_STD_ACTION
PNNI-6-INFO	6-Information	[chars]	This is an informational message only.	-	"Informational messages can be disabled by changing logging level."
PNNI-7-DEBUG	7-Debug	[chars]	This is an informational message only. It is used by Cisco for testing.	-	"Informational messages can be disabled by changing logging level."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>P</del> <del>P</del> <del>C</del> <del>C</del> <del>O</del> <del>D</del> <del>E</del> <del>A</del> <del>U</del> <del>T</del> <del>H</del> <del>M</del> <del>I</del> <del>T</del> <del>M</del> <del>D</del> <del>E</del> <del>T</del> <del>E</del> <del>C</del> <del>T</del> <del>E</del> <del>D</del>	3-Error	CCO device auth potential MITM detected Server profile [chars]	device auth originating from CCO but profile not pointing to CCO	pnpa	LOG_SID_NO_ACTION
<del>P</del> <del>P</del> <del>C</del> <del>C</del> <del>O</del> <del>D</del> <del>E</del> <del>A</del> <del>U</del> <del>T</del> <del>H</del> <del>M</del> <del>I</del> <del>T</del> <del>M</del> <del>D</del> <del>E</del> <del>T</del> <del>E</del> <del>C</del> <del>T</del> <del>E</del> <del>D</del>	3-Error	CCO device auth potential MITM detected Server profile [chars]	device auth originating from CCO but profile not pointing to CCO	pnpa	LOG_SID_NO_ACTION
<del>P</del> <del>P</del> <del>C</del> <del>C</del> <del>O</del> <del>S</del> <del>E</del> <del>R</del> <del>V</del> <del>E</del> <del>R</del> <del>U</del> <del>N</del> <del>C</del> <del>O</del> <del>N</del> <del>F</del> <del>I</del> <del>G</del> <del>U</del> <del>R</del> <del>E</del> <del>D</del>	3-Error	CCO Server profile [chars] unconfigured [dec]/[dec] by [chars]	CCO Server profile unconfigured	pnpa	LOG_SID_NO_ACTION
<del>P</del> <del>P</del> <del>C</del> <del>C</del> <del>O</del> <del>S</del> <del>E</del> <del>R</del> <del>V</del> <del>E</del> <del>R</del> <del>U</del> <del>N</del> <del>C</del> <del>O</del> <del>N</del> <del>F</del> <del>I</del> <del>G</del> <del>U</del> <del>R</del> <del>E</del> <del>D</del>	3-Error	CCO Server profile [chars] unconfigured [dec]/[dec] by [chars]	CCO Server profile unconfigured	pnpa	LOG_SID_NO_ACTION
<del>P</del> <del>P</del> <del>C</del> <del>C</del> <del>O</del> <del>S</del> <del>E</del> <del>R</del> <del>V</del> <del>E</del> <del>R</del> <del>U</del> <del>N</del> <del>R</del> <del>E</del> <del>S</del> <del>O</del> <del>L</del> <del>V</del> <del>E</del> <del>D</del>	3-Error	CCO server [chars] can't be resolved [dec]/[dec] by [chars]	CCO server can't be resolved	pnpa	LOG_SID_NO_ACTION
<del>P</del> <del>P</del> <del>C</del> <del>C</del> <del>O</del> <del>S</del> <del>E</del> <del>R</del> <del>V</del> <del>E</del> <del>R</del> <del>U</del> <del>N</del> <del>R</del> <del>E</del> <del>S</del> <del>O</del> <del>L</del> <del>V</del> <del>E</del> <del>D</del>	3-Error	CCO server [chars] can't be resolved [dec]/[dec] by [chars]	CCO server can't be resolved	pnpa	LOG_SID_NO_ACTION
<del>P</del> <del>P</del> <del>C</del> <del>C</del> <del>O</del> <del>E</del> <del>A</del> <del>R</del> <del>C</del> <del>H</del> <del>I</del> <del>V</del> <del>E</del> <del>S</del> <del>I</del> <del>S</del> <del>P</del> <del>E</del> <del>D</del>	3-Error	PnP config archive not supported [dec]/[dec] on this platform yet [chars]	PnP config archive not supported on this platform yet	pnpa	LOG_SID_NO_ACTION
<del>P</del> <del>P</del> <del>C</del> <del>C</del> <del>O</del> <del>E</del> <del>A</del> <del>R</del> <del>C</del> <del>H</del> <del>I</del> <del>V</del> <del>E</del> <del>S</del> <del>I</del> <del>S</del> <del>P</del> <del>E</del> <del>D</del>	3-Error	PnP config archive not supported [dec]/[dec] on this platform yet [chars]	PnP config archive not supported on this platform yet	pnpa	LOG_SID_NO_ACTION
<del>P</del> <del>P</del> <del>C</del> <del>C</del> <del>O</del> <del>N</del> <del>G</del> <del>R</del> <del>O</del> <del>L</del> <del>L</del> <del>B</del> <del>A</del> <del>C</del> <del>K</del>	3-Error	Config [chars] rollback [dec]/[dec] reason [chars] by [chars]	Config rollback	pnpa	LOG_SID_NO_ACTION
<del>P</del> <del>P</del> <del>C</del> <del>C</del> <del>O</del> <del>N</del> <del>G</del> <del>R</del> <del>O</del> <del>L</del> <del>L</del> <del>B</del> <del>A</del> <del>C</del> <del>K</del>	3-Error	Config [chars] rollback [dec]/[dec] reason [chars] by [chars]	Config rollback	pnpa	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PnPConfigRollbackNotSupported</del>	3-Error	PnP config rollback not supported [dec]/[dec] on this platform yet [chars]	PnP config rollback not supported on this platform yet	pnpa	LOG_SID_NO_ACTION
<del>PnPConfigRollbackNotSupported</del>	3-Error	PnP config rollback not supported [dec]/[dec] on this platform yet [chars]	PnP config rollback not supported on this platform yet	pnpa	LOG_SID_NO_ACTION
<del>PnPInvalidPnPOption</del>	3-Error	DHCP invalid-PnP option [chars] on interface [chars] notified [dec]/[dec] by [chars]	DHCP invalid-PnP option notified	pnpa	LOG_SID_NO_ACTION
<del>PnPInvalidPnPOption</del>	3-Error	DHCP invalid-PnP option [chars] on interface [chars] notified [dec]/[dec] by [chars]	DHCP invalid-PnP option notified	pnpa	LOG_SID_NO_ACTION
<del>PnPDomainNotFound</del>	3-Error	Domain name not found [dec]/[dec] on [chars] by [chars]	Domain name not found	pnpa	LOG_SID_NO_ACTION
<del>PnPDomainNotFound</del>	3-Error	Domain name not found [dec]/[dec] on [chars] by [chars]	Domain name not found	pnpa	LOG_SID_NO_ACTION
<del>PnPFileCopyFailed</del>	3-Error	File copied to [chars] failed [dec]/[dec] err=[dec] [[chars]] bps=[dec] [dec] bytes in [dec] ms by [chars]	File copied failed	pnpa	LOG_SID_NO_ACTION
<del>PnPFileCopyFailed</del>	3-Error	File copied to [chars] failed [dec]/[dec] err=[dec] [[chars]] bps=[dec] [dec] bytes in [dec] ms by [chars]	File copied failed	pnpa	LOG_SID_NO_ACTION
<del>PnPHTTPTimeout</del>	3-Error	PnP HTTP timed out [dec]/[dec] on connection to PnP server [chars]	PnP HTTP timed out on connection to PnP server	pnpa	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PnP</del> PnP_HTTP_TIMED_OUT	3-Error	PnP HTTP timed out [dec]/[dec] on connection to PnP server [chars]	PnP HTTP timed out on connection to PnP server	pnpa	LOG_SID_NO_ACTION
<del>PnP</del> PnP_IMAGE_INSTALL_FAILED	3-Error	Image [chars] install failed [dec]/[dec] by [chars]	Image install failed	pnpa	LOG_SID_NO_ACTION
<del>PnP</del> PnP_IMAGE_INSTALL_FAILED	3-Error	Image [chars] install failed [dec]/[dec] by [chars]	Image install failed	pnpa	LOG_SID_NO_ACTION
<del>PnP</del> PnP_INTERFACE_DOWN_NOTIFY	3-Error	Interface [chars] still-down notified [dec]/[dec] by [chars]	Interface still-down notified	pnpa	LOG_SID_NO_ACTION
<del>PnP</del> PnP_INTERFACE_DOWN_NOTIFY	3-Error	Interface [chars] still-down notified [dec]/[dec] by [chars]	Interface still-down notified	pnpa	LOG_SID_NO_ACTION
<del>PnP</del> PnP_SDWAN_ZTP_SERVER_CANNOT_BE_RESOLVED	3-Error	SDWAN ZTP server [chars] can't be resolved on domain [chars] on interface [chars]	SDWAN ZTP server can't be resolved	pnpa	LOG_SID_NO_ACTION
<del>PnP</del> PnP_SDWAN_ZTP_SERVER_CANNOT_BE_RESOLVED	3-Error	SDWAN ZTP server [chars] can't be resolved on domain [chars] on interface [chars]	SDWAN ZTP server can't be resolved	pnpa	LOG_SID_NO_ACTION
<del>PnP</del> PnP_SERVER_CANNOT_BE_RESOLVED	3-Error	PnP server [chars] can't be resolved [dec]/[dec] on interface [chars] by [chars]	PnP server can't be resolved	pnpa	LOG_SID_NO_ACTION
<del>PnP</del> PnP_SERVER_CANNOT_BE_RESOLVED	3-Error	PnP server [chars] can't be resolved [dec]/[dec] on interface [chars] by [chars]	PnP server can't be resolved	pnpa	LOG_SID_NO_ACTION
<del>PnP</del> PnP_SERVER_STILL_UNREACHABLE_NOTIFY	3-Error	PnP Server still-unreachable notified [dec]/[dec] by [chars]	PnP Server still-unreachable notified	pnpa	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PnP</del> UNREACHABLE	3-Error	PnP Server still-unreachable notified [dec]/[dec] by [chars]	PnP Server still-unreachable notified	pnpa	LOG_SID_NO_ACTION
<del>PnP</del> SUNESLOWNOE	3-Error	TLS-Tunnel [chars] still-down notified [dec]/[dec] by [chars]	TLS-Tunnel still-down notified	pnpa	LOG_SID_NO_ACTION
<del>PnP</del> SUNESLOWNOE	3-Error	TLS-Tunnel [chars] still-down notified [dec]/[dec] by [chars]	TLS-Tunnel still-down notified	pnpa	LOG_SID_NO_ACTION
<del>PnP</del> TRUSTPOINTROLLBACK	3-Error	Trustpoint [chars] rollback [dec]/[dec] reason [chars] by [chars]	Trustpoint rollback	pnpa	LOG_SID_NO_ACTION
<del>PnP</del> TRUSTPOINTROLLBACK	3-Error	Trustpoint [chars] rollback [dec]/[dec] reason [chars] by [chars]	Trustpoint rollback	pnpa	LOG_SID_NO_ACTION
<del>PnP</del> UNABLETOCOPYFILE	3-Error	Unable to copy from [chars] to [chars]. Error [chars]	The file transfer operation failed.	pnpa	"Check that the source file exists and the file can be accessed " "from the device that tries to access that file." "Also check that the URL for both source and destination " " are correct."
<del>PnP</del> UNABLETOCOPYFILE	3-Error	Unable to copy from [chars] to [chars]. Error [chars]	The file transfer operation failed.	pnpa	"Check that the source file exists and the file can be accessed " "from the device that tries to access that file." "Also check that the URL for both source and destination " " are correct."
<del>PnP</del> HTTP_CONNECTED	6-Information	PnP Discovery connected to PnP server [chars]	PnP Discovery is now connected to PnP server	pnpa	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PNP</del> 6HTTP_CONNECTED	6-Information	PnP Discovery connected to PnP server [chars]	PnP Discovery is now connected to PnP server	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> 6HTTP_CONNECTING	6-Information	PnP Discovery trying to connect to PnP server [chars]	PnP Discovery is trying to connect to PnP server	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> 6HTTP_CONNECTING	6-Information	PnP Discovery trying to connect to PnP server [chars]	PnP Discovery is trying to connect to PnP server	pnpa	LOG_SID_NO_ACTION
PNP-6NAPP_CONFIG	6-Information	Command configured: [chars]	PnP Discovery profile is now configured	pnpa	LOG_SID_NO_ACTION
PNP-6NAPP_CONFIG	6-Information	Command configured: [chars]	PnP Discovery profile is now configured	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> 6PNP_4G_CONFIG_FAILED	6-Information	PnP 4G Dialer configuration failed after [dec] times	PnP trying to configure 4G Dialer on a cellular interface but failed	-	LOG_SID_NO_ACTION
<del>PNP</del> 6PNP_4G_CONFIG_FAILED	6-Information	PnP 4G Dialer configuration failed after [dec] times	PnP trying to configure 4G Dialer on a cellular interface but failed	-	LOG_SID_NO_ACTION
<del>PNP</del> 6PNP_BACKOFF_EXCESS_WARN_LIM	6-Information	Requested PnP Backoff time [dec] exceeds warning limit [dec] in seconds	PnP Backoff time exceeds warning limit	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> 6PNP_BACKOFF_EXCESS_WARN_LIM	6-Information	Requested PnP Backoff time [dec] exceeds warning limit [dec] in seconds	PnP Backoff time exceeds warning limit	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> 6PNP_BACKOFF_NOW	6-Information	PnP Backoff now for [dec] seconds requested [dec]/[dec] by [chars]	PnP Backoff time	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> 6PNP_BACKOFF_NOW	6-Information	PnP Backoff now for [dec] seconds requested [dec]/[dec] by [chars]	PnP Backoff time	pnpa	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PNP</del> PNP_BACKOFF_TERMINATE	6-Information	PnP Backoff termination requested [dec]/[dec] by [chars]	PnP Backoff termination	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> PNP_BACKOFF_TERMINATE	6-Information	PnP Backoff termination requested [dec]/[dec] by [chars]	PnP Backoff termination	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> PNP_BEST_UDI_UPDATE	6-Information	Best UDI [[chars]] identified via [chars]	Best UDI is identified	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> PNP_BEST_UDI_UPDATE	6-Information	Best UDI [[chars]] identified via [chars]	Best UDI is identified	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> PNP_CCO_SERVER_IP_RESOLVED	6-Information	CCO server [chars] resolved to ip [chars] by [chars]	CCO server ip resolved	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> PNP_CCO_SERVER_IP_RESOLVED	6-Information	CCO server [chars] resolved to ip [chars] by [chars]	CCO server ip resolved	pnpa	LOG_SID_NO_ACTION
PNP6PNP_CDP_FAILED	6-Information	Failed to identify Device UDI for CDP [dec]/[dec]	Failed to identify Device UDI for CDP	pnpa	LOG_SID_NO_ACTION
PNP6PNP_CDP_FAILED	6-Information	Failed to identify Device UDI for CDP [dec]/[dec]	Failed to identify Device UDI for CDP	pnpa	LOG_SID_NO_ACTION
PNP6PNP_CDP_UPDATE	6-Information	Device UDI [[chars]] identified for CDP	Device UDI is identified for CDP	pnpa	LOG_SID_NO_ACTION
PNP6PNP_CDP_UPDATE	6-Information	Device UDI [[chars]] identified for CDP	Device UDI is identified for CDP	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> PNP_CONFIG_REGISTER_IGNORE_STARTUP_CONFIG_IS_SET_PNP_WON'T_WORK	6-Information	Config register ignore startup config is set PNP won't work	Config register ignore startup config is set PNP won't work	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> PNP_CONFIG_REGISTER_IGNORE_STARTUP_CONFIG_IS_SET_PNP_WON'T_WORK	6-Information	Config register ignore startup config is set PNP won't work	Config register ignore startup config is set PNP won't work	pnpa	LOG_SID_NO_ACTION



<del>Facility-Severity-Mnemonic</del>	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PNP_CNFG_ARCHVE</del>	6-Information	Config [chars] archive [dec]/[dec] by [chars]	Config archive	pnpa	LOG_SID_NO_ACTION
<del>PNP_CNFG_ARCHVE</del>	6-Information	Config [chars] archive [dec]/[dec] by [chars]	Config archive	pnpa	LOG_SID_NO_ACTION
<del>PNP_DHCP_WHNCID</del>	6-Information	DHCP option [chars] on interface [chars] disabled when notified [dec]/[dec] by [chars]	DHCP option disabled when notified	pnpa	LOG_SID_NO_ACTION
<del>PNP_DHCP_WHNCID</del>	6-Information	DHCP option [chars] on interface [chars] disabled when notified [dec]/[dec] by [chars]	DHCP option disabled when notified	pnpa	LOG_SID_NO_ACTION
<del>PNP_DP_NP_NDNCID</del>	6-Information	DHCP non-PnP option [chars] on interface [chars] notified [dec]/[dec] by [chars]	DHCP non-PnP option notified	pnpa	LOG_SID_NO_ACTION
<del>PNP_DP_NP_NDNCID</del>	6-Information	DHCP non-PnP option [chars] on interface [chars] notified [dec]/[dec] by [chars]	DHCP non-PnP option notified	pnpa	LOG_SID_NO_ACTION
<del>PNP_DP_VL_NDNCID</del>	6-Information	DHCP valid-PnP option [chars] on interface [chars] notified [dec]/[dec] by [chars]	DHCP valid-PnP option notified	pnpa	LOG_SID_NO_ACTION
<del>PNP_DP_VL_NDNCID</del>	6-Information	DHCP valid-PnP option [chars] on interface [chars] notified [dec]/[dec] by [chars]	DHCP valid-PnP option notified	pnpa	LOG_SID_NO_ACTION
<del>PNP_KOIR_ABRNCLI</del>	6-Information	PnP Discovery abort on CLI input	PnP Discovery abort on CLI input	pnpa	LOG_SID_NO_ACTION
<del>PNP_KOIR_ABRNCLI</del>	6-Information	PnP Discovery abort on CLI input	PnP Discovery abort on CLI input	pnpa	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>PnPDISCOVER/ABORT/DAEMON</del>	6-Information	PnP Discovery abort on vdaemon input	PnP Discovery has aborted on vdaemon input	pnpa	LOG_SID_NO_ACTION
<del>PnPDISCOVER/ABORT/DAEMON</del>	6-Information	PnP Discovery abort on vdaemon input	PnP Discovery has aborted on vdaemon input	pnpa	LOG_SID_NO_ACTION
<del>PnPDISCOVER/ABORT/NEASRP</del>	6-Information	PnP Discovery abort on Viptela startup config	PnP Discovery abort on Viptela startup config	pnpa	LOG_SID_NO_ACTION
<del>PnPDISCOVER/ABORT/NEASRP</del>	6-Information	PnP Discovery abort on Viptela startup config	PnP Discovery abort on Viptela startup config	pnpa	LOG_SID_NO_ACTION
<del>PnPDISCOVERY/DONE</del>	6-Information	PnP Discovery done successfully [chars] profile [chars] via [chars] [chars]	PnP Discovery done successfully	pnpa	LOG_SID_NO_ACTION
<del>PnPDISCOVERY/DONE</del>	6-Information	PnP Discovery done successfully [chars] profile [chars] via [chars] [chars]	PnP Discovery done successfully	pnpa	LOG_SID_NO_ACTION
<del>PnPDISCOVERY/NOTRUNNING</del>	6-Information	PNP Discovery is not running	PNP Discovery is not running	pnpa	LOG_SID_NO_ACTION
<del>PnPDISCOVERY/NOTRUNNING</del>	6-Information	PNP Discovery is not running	PNP Discovery is not running	pnpa	LOG_SID_NO_ACTION
<del>PnPDISCOVERY/STARTED</del>	6-Information	PnP Discovery started	PnP Discovery started	pnpa	LOG_SID_NO_ACTION
<del>PnPDISCOVERY/STARTED</del>	6-Information	PnP Discovery started	PnP Discovery started	pnpa	LOG_SID_NO_ACTION
<del>PnPDISCOVERY/STOPPED</del>	6-Information	PnP Discovery stopped [chars]	PnP Discovery stopped	pnpa	LOG_SID_NO_ACTION
<del>PnPDISCOVERY/STOPPED</del>	6-Information	PnP Discovery stopped [chars]	PnP Discovery stopped	pnpa	LOG_SID_NO_ACTION
<del>PnPDISCOVERY/STOPPING</del>	6-Information	Stopping PnP Discovery. Please do not interrupt	Stopping PnP Discovery	pnpa	LOG_SID_NO_ACTION
<del>PnPDISCOVERY/STOPPING</del>	6-Information	Stopping PnP Discovery. Please do not interrupt	Stopping PnP Discovery	pnpa	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PNPDRVICOSWANRGR</del>	6-Information	PnP Discovery waiting for SDWAN Trigger	PnP Discovery waiting for SDWAN Trigger	pnpa	LOG_SID_NO_ACTION
<del>PNPDRVICOSWANRGR</del>	6-Information	PnP Discovery waiting for SDWAN Trigger	PnP Discovery waiting for SDWAN Trigger	pnpa	LOG_SID_NO_ACTION
<del>PNPNDNSSRMRSET</del>	6-Information	DNS server [chars] set by [chars]	DNS server set	pnpa	LOG_SID_NO_ACTION
<del>PNPNDNSSRMRSET</del>	6-Information	DNS server [chars] set by [chars]	DNS server set	pnpa	LOG_SID_NO_ACTION
<del>PNPNDOMANNAMESET</del>	6-Information	Domain name [chars] set on [chars] by [chars]	Domain name set	pnpa	LOG_SID_NO_ACTION
<del>PNPNDOMANNAMESET</del>	6-Information	Domain name [chars] set on [chars] by [chars]	Domain name set	pnpa	LOG_SID_NO_ACTION
<del>PNPHECOPYDONE</del>	6-Information	File copied to [chars] done [dec]/[dec] bps=[dec] [dec] bytes in [dec] ms by [chars]	File copied done	pnpa	LOG_SID_NO_ACTION
<del>PNPHECOPYDONE</del>	6-Information	File copied to [chars] done [dec]/[dec] bps=[dec] [dec] bytes in [dec] ms by [chars]	File copied done	pnpa	LOG_SID_NO_ACTION
<del>PNPCCODULIUDAE</del>	6-Information	Good UDI [[chars]] identified via [chars]	Gest UDI is identified	pnpa	LOG_SID_NO_ACTION
<del>PNPCCODULIUDAE</del>	6-Information	Good UDI [[chars]] identified via [chars]	Gest UDI is identified	pnpa	LOG_SID_NO_ACTION
<del>PNPISLABFDDBNDSCDE</del>	6-Information	PNP Image install aborted due to Bundle mode needs Install mode	PNP Image install aborted due to Bundle mode needs Install mode	pnpa	LOG_SID_NO_ACTION
<del>PNPISLABFDDBNDSCDE</del>	6-Information	PNP Image install aborted due to Bundle mode needs Install mode	PNP Image install aborted due to Bundle mode needs Install mode	pnpa	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PNP_IMAGE_INSTALL_ABORT</del>	6-Information	PNP Image install aborted due to Manual boot needs Auto boot	PNP Image install aborted due to Manual boot needs Auto boot	pnpa	LOG_SID_NO_ACTION
<del>PNP_IMAGE_INSTALL_ABORT</del>	6-Information	PNP Image install aborted due to Manual boot needs Auto boot	PNP Image install aborted due to Manual boot needs Auto boot	pnpa	LOG_SID_NO_ACTION
<del>PNP_IMAGE_RELOAD_SCHEDULED</del>	6-Information	Image [chars] installed with reload scheduled [dec]/[dec] by [chars]	Image installed with reload scheduled	pnpa	LOG_SID_NO_ACTION
<del>PNP_IMAGE_RELOAD_SCHEDULED</del>	6-Information	Image [chars] installed with reload scheduled [dec]/[dec] by [chars]	Image installed with reload scheduled	pnpa	LOG_SID_NO_ACTION
<del>PNP_IMAGE_RELOAD_WITHOUT_RELOAD</del>	6-Information	Image [chars] installed without reload [dec]/[dec] by [chars]	Image installed without reload	pnpa	LOG_SID_NO_ACTION
<del>PNP_IMAGE_RELOAD_WITHOUT_RELOAD</del>	6-Information	Image [chars] installed without reload [dec]/[dec] by [chars]	Image installed without reload	pnpa	LOG_SID_NO_ACTION
<del>PNP_IPV4_RESOLVED_BY_INTERFACE</del>	6-Information	IPv4 resolved on interface [chars] by [chars]	IPv4 resolved on interface	pnpa	LOG_SID_NO_ACTION
<del>PNP_IPV4_RESOLVED_BY_INTERFACE</del>	6-Information	IPv4 resolved on interface [chars] by [chars]	IPv4 resolved on interface	pnpa	LOG_SID_NO_ACTION
<del>PNP_IPV6_RESOLVED_BY_INTERFACE</del>	6-Information	IPv6 resolved on interface [chars] by [chars]	IPv6 resolved on interface	pnpa	LOG_SID_NO_ACTION
<del>PNP_IPV6_RESOLVED_BY_INTERFACE</del>	6-Information	IPv6 resolved on interface [chars] by [chars]	IPv6 resolved on interface	pnpa	LOG_SID_NO_ACTION
<del>PNP_LOCATION_TAG_CHANGED</del>	6-Information	PnP Location Tag Changed [chars]	PnP Location Tag changed	pnpa	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PnPLOC</del> <del>IN</del> <del>TAG</del> <del>CH</del> <del>NG</del>	6-Information	PnP Location Tag Changed [chars]	PnP Location Tag changed	pnpa	LOG_SID_NO_ACTION
<del>PnPLOC</del> <del>IN</del> <del>TAG</del> <del>RM</del> <del>OV</del>	6-Information	PnP Location Tag Removed	PnP Location Tag removed	pnpa	LOG_SID_NO_ACTION
<del>PnPLOC</del> <del>IN</del> <del>TAG</del> <del>RM</del> <del>OV</del>	6-Information	PnP Location Tag Removed	PnP Location Tag removed	pnpa	LOG_SID_NO_ACTION
<del>PnPMDE</del> <del>CH</del> <del>ANG</del> <del>E</del> <del>AI</del> <del>D</del>	6-Information	Mode change failed. Use CLI to change mode	Mode change failed	pnpa	LOG_SID_NO_ACTION
<del>PnPMDE</del> <del>CH</del> <del>ANG</del> <del>E</del> <del>AI</del> <del>D</del>	6-Information	Mode change failed. Use CLI to change mode	Mode change failed	pnpa	LOG_SID_NO_ACTION
<del>PnPMDE</del> <del>CH</del> <del>ANG</del> <del>PR</del> <del>OG</del> <del>RS</del>	6-Information	Mode change in progress	Mode change in progress	pnpa	LOG_SID_NO_ACTION
<del>PnPMDE</del> <del>CH</del> <del>ANG</del> <del>PR</del> <del>OG</del> <del>RS</del>	6-Information	Mode change in progress	Mode change in progress	pnpa	LOG_SID_NO_ACTION
<del>PnPMDE</del> <del>CH</del> <del>ANG</del> <del>C</del> <del>H</del> <del>E</del> <del>C</del> <del>K</del>	6-Information	Mode change successful device will reload now	Mode change successful device will reload now	pnpa	LOG_SID_NO_ACTION
<del>PnPMDE</del> <del>CH</del> <del>ANG</del> <del>C</del> <del>H</del> <del>E</del> <del>C</del> <del>K</del>	6-Information	Mode change successful device will reload now	Mode change successful device will reload now	pnpa	LOG_SID_NO_ACTION
<del>PnPMON</del> <del>CR</del> <del>AC</del> <del>IO</del> <del>N</del> <del>D</del> <del>O</del> <del>N</del> <del>E</del>	6-Information	PnP Monitor action #[dec] [chars] done for watched event [chars] notified by [chars] at [chars] reason [chars]	PnP Monitor action done for watched event	-	LOG_SID_NO_ACTION
<del>PnPMON</del> <del>CR</del> <del>AC</del> <del>IO</del> <del>N</del> <del>D</del> <del>O</del> <del>N</del> <del>E</del>	6-Information	PnP Monitor action #[dec] [chars] done for watched event [chars] notified by [chars] at [chars] reason [chars]	PnP Monitor action done for watched event	-	LOG_SID_NO_ACTION
<del>PnPMON</del> <del>CR</del> <del>AC</del> <del>IO</del> <del>N</del> <del>A</del> <del>I</del> <del>L</del> <del>E</del> <del>D</del>	6-Information	PnP Monitor action #[dec] [chars] failed for watched event [chars] notified by [chars] at [chars] reason [chars]	PnP Monitor action failed for watched event	-	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>PnPMONCRACIN_AID</del>	6-Information	PnP Monitor action #[dec] [chars] failed for watched event [chars] notified by [chars] at [chars] reason [chars]	PnP Monitor action failed for watched event	-	LOG_SID_NO_ACTION
<del>PnPMONCRMENTOED</del>	6-Information	PnP Monitor event #[dec] [chars] notified by [chars] at [chars] reason [chars]	PnP Monitor received event notification	-	LOG_SID_NO_ACTION
<del>PnPMONCRMENTOED</del>	6-Information	PnP Monitor event #[dec] [chars] notified by [chars] at [chars] reason [chars]	PnP Monitor received event notification	-	LOG_SID_NO_ACTION
<del>PnPMONCRMENTOES</del>	6-Information	PnP Monitor event #[dec] [chars] notified by [chars] at [chars] reason [chars] progress [dec]%%	PnP Monitor received event notification with progress percentage	-	LOG_SID_NO_ACTION
<del>PnPMONCRMENTOES</del>	6-Information	PnP Monitor event #[dec] [chars] notified by [chars] at [chars] reason [chars] progress [dec]%%	PnP Monitor received event notification with progress percentage	-	LOG_SID_NO_ACTION
<del>PnPMONCRWCHL_BID</del>	6-Information	PnP Monitor event [chars] watch [chars] disabled [dec]/[dec] by [chars]	PnP Monitor watch disabled	pnpa	LOG_SID_NO_ACTION
<del>PnPMONCRWCHL_BID</del>	6-Information	PnP Monitor event [chars] watch [chars] disabled [dec]/[dec] by [chars]	PnP Monitor watch disabled	pnpa	LOG_SID_NO_ACTION
<del>PnPMONCRWCHL_EBD</del>	6-Information	PnP Monitor event [chars] watch [chars] enabled [dec]/[dec] by [chars]	PnP Monitor watch enabled	pnpa	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PNP</del> MONITOR_WATCH_ENABLED	6-Information	PnP Monitor event [chars] watch [chars] enabled [dec]/[dec] by [chars]	PnP Monitor watch enabled	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> PROFILE_CREATED	6-Information	PnP profile [chars] created [dec]/[dec] by [chars]	PnP profile created	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> PROFILE_CREATED	6-Information	PnP profile [chars] created [dec]/[dec] by [chars]	PnP profile created	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> PROFILE_DELETED	6-Information	PnP profile [chars] deleted [dec]/[dec] by [chars]	PnP profile created	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> PROFILE_DELETED	6-Information	PnP profile [chars] deleted [dec]/[dec] by [chars]	PnP profile created	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> PROVISION_DONE	6-Information	PnP Provision done successfully [chars]	PnP Provision done successfully	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> PROVISION_DONE	6-Information	PnP Provision done successfully [chars]	PnP Provision done successfully	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> PROVISION_STATE_NOTIFIED	6-Information	PnP Provision state notified [chars]	PnP Provision state notified	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> PROVISION_STATE_NOTIFIED	6-Information	PnP Provision state notified [chars]	PnP Provision state notified	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> PYTHON_SCRIPT_DONE	6-Information	Python script [chars] done [dec]/[dec] via [chars] by [chars]	Python script done	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> PYTHON_SCRIPT_DONE	6-Information	Python script [chars] done [dec]/[dec] via [chars] by [chars]	Python script done	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> REDIRECTION_DONE	6-Information	PnP Redirection done [dec] by [chars]	PnP Redirection done	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> REDIRECTION_DONE	6-Information	PnP Redirection done [dec] by [chars]	PnP Redirection done	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> RELOAD_REASON_ENCODED	6-Information	Reload reason [chars]-[chars] encoded [dec]/[dec] by [chars]	Reload reason encoded	pnpa	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PNP</del> PNLOADNOENCODED	6-Information	Reload reason [chars]-[chars] encoded [dec]/[dec] by [chars]	Reload reason encoded	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> PNLOADNOSTOPPED	6-Information	Reload reason [chars]-[chars] stopped by [chars]	Reload reason stopped	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> PNLOADNOSTOPPED	6-Information	Reload reason [chars]-[chars] stopped by [chars]	Reload reason stopped	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> PNP_RESET_DONE	6-Information	PnP reset done	PnP reset successful	-	LOG_SID_NO_ACTION
<del>PNP</del> PNP_RESET_DONE	6-Information	PnP reset done	PnP reset successful	-	LOG_SID_NO_ACTION
<del>PNP</del> PNP_RESET_FAILED	6-Information	Having problem with PnP reset. Try it later.	Failed to do PnP reset	-	LOG_SID_NO_ACTION
<del>PNP</del> PNP_RESET_FAILED	6-Information	Having problem with PnP reset. Try it later.	Failed to do PnP reset	-	LOG_SID_NO_ACTION
<del>PNP</del> PNP_SAVE_TCH_SUMMARY	6-Information	Saving PnP tech summary [chars]... Please wait. Do not interrupt.	PnP saving tech summary to default disk	-	LOG_SID_NO_ACTION
<del>PNP</del> PNP_SAVE_TCH_SUMMARY	6-Information	Saving PnP tech summary [chars]... Please wait. Do not interrupt.	PnP saving tech summary to default disk	-	LOG_SID_NO_ACTION
<del>PNP</del> PNP_SCRIPT_STARTED	6-Information	Script [chars] started [dec]/[dec] via [chars] by [chars]	Script started	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> PNP_SCRIPT_STARTED	6-Information	Script [chars] started [dec]/[dec] via [chars] by [chars]	Script started	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> PNP_SDWAN_READY	6-Information	PnP SDWAN ready [dec] notified by [chars]	PnP SDWAN ready	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> PNP_SDWAN_READY	6-Information	PnP SDWAN ready [dec] notified by [chars]	PnP SDWAN ready	pnpa	LOG_SID_NO_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PNP</del> PNP_SDWAN_STARTED	6-Information	PnP SDWAN started [dec] via [chars] by [chars]	PnP SDWAN started	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> PNP_SDWAN_STARTED	6-Information	PnP SDWAN started [dec] via [chars] by [chars]	PnP SDWAN started	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> PNP_SDWAN_STOPPED	6-Information	PnP SDWAN stopped [dec] reason [chars] by [chars]	PnP SDWAN stopped	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> PNP_SDWAN_STOPPED	6-Information	PnP SDWAN stopped [dec] reason [chars] by [chars]	PnP SDWAN stopped	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> PNP_SERVER_IP_RESOLVED	6-Information	PnP server [chars] resolved to ip [chars] on interface [chars] by [chars]	PnP server ip resolved	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> PNP_SERVER_IP_RESOLVED	6-Information	PnP server [chars] resolved to ip [chars] on interface [chars] by [chars]	PnP server ip resolved	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> PNP_SUDI_UPDATE	6-Information	Device SUDI [[chars]] identified	Device SUDI is identified	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> PNP_SUDI_UPDATE	6-Information	Device SUDI [[chars]] identified	Device SUDI is identified	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> PNP_TCL_SCRIPT_DONE	6-Information	TCL script [chars] done [dec]/[dec] via [chars] by [chars]	TCL script done	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> PNP_TCL_SCRIPT_DONE	6-Information	TCL script [chars] done [dec]/[dec] via [chars] by [chars]	TCL script done	pnpa	LOG_SID_NO_ACTION
<del>PNP</del> PNP_TEC_SUMMARY_ELAPSED	6-Information	Having problems saving PnP tech summary [chars] elapsed time: [dec] seconds.	Failed to save PnP tech summary to default disk	pnpa	"Make sure that the default disk has reasonable free space." " Also never interrupt the PnP tech summary saving in any way e.g." " enable the device console or change any device config or resource."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PnPICEMMRNEXSAE</del>	6-Information	Having problems saving PnP tech summary [chars] elapsed time: [dec] seconds.	Failed to save PnP tech summary to default disk	pnpa	"Make sure that the default disk has reasonable free space." " Also never interrupt the PnP tech summary saving in any way e.g." " enable the device console or change any device config or resource."
<del>PnPICEMMRNEXSADK</del>	6-Information	PnP tech summary [chars] saved successfully elapsed time: [dec] seconds.	PnP tech summary saved to default disk successfully	-	LOG_SID_NO_ACTION
<del>PnPICEMMRNEXSADK</del>	6-Information	PnP tech summary [chars] saved successfully elapsed time: [dec] seconds.	PnP tech summary saved to default disk successfully	-	LOG_SID_NO_ACTION
<del>PnPICEMMRNEXSADK</del>	6-Information	PnP tech summary [chars] saved with alarm [dec]/[dec] elapsed time: [dec] seconds.	PnP tech summary saved to default disk successfully but with some issues	pnpa	"Make sure that all disks can be recursively listed in resonably short time." " Also never interrupt the PnP tech summary saving in any way e.g." " enable the device console or change any device config or resource."
<del>PnPICEMMRNEXSADK</del>	6-Information	PnP tech summary [chars] saved with alarm [dec]/[dec] elapsed time: [dec] seconds.	PnP tech summary saved to default disk successfully but with some issues	pnpa	"Make sure that all disks can be recursively listed in resonably short time." " Also never interrupt the PnP tech summary saving in any way e.g." " enable the device console or change any device config or resource."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PNPISUNNDOWNNOED</del>	6-Information	TLS-Tunnel [chars] down notified [dec]/[dec] by [chars]	TLS-Tunnel down notified	pnpa	LOG_SID_NO_ACTION
<del>PNPISUNNDOWNNOED</del>	6-Information	TLS-Tunnel [chars] down notified [dec]/[dec] by [chars]	TLS-Tunnel down notified	pnpa	LOG_SID_NO_ACTION
<del>PNPISUNNUPNOED</del>	6-Information	TLS-Tunnel [chars] up notified [dec]/[dec] by [chars]	TLS-Tunnel down notified	pnpa	LOG_SID_NO_ACTION
<del>PNPISUNNUPNOED</del>	6-Information	TLS-Tunnel [chars] up notified [dec]/[dec] by [chars]	TLS-Tunnel down notified	pnpa	LOG_SID_NO_ACTION
<del>PNPISUNNSAILED</del>	6-Information	Trustpoint [chars] installed from [chars] by [chars]	Trustpoint installed	pnpa	LOG_SID_NO_ACTION
<del>PNPISUNNSAILED</del>	6-Information	Trustpoint [chars] installed from [chars] by [chars]	Trustpoint installed	pnpa	LOG_SID_NO_ACTION
<del>PNPISUNNSAILED</del>	6-Information	Trustpool installed from [chars] by [chars]	Trustpool installed	pnpa	LOG_SID_NO_ACTION
<del>PNPISUNNSAILED</del>	6-Information	Trustpool installed from [chars] by [chars]	Trustpool installed	pnpa	LOG_SID_NO_ACTION
PNP6PROFILE_CONFIG	6-Information	PnP Discovery profile [chars] configured	PnP Discovery profile is now configured	pnpa	LOG_SID_NO_ACTION
PNP6PROFILE_CONFIG	6-Information	PnP Discovery profile [chars] configured	PnP Discovery profile is now configured	pnpa	LOG_SID_NO_ACTION
PNP6XMP_CONNECTED	6-Information	PnP Discovery connected to PnP server [chars] port [dec]	PnP Discovery is now connected to PnP server	pnpa	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PnP</del> MP_CONNECTED	6-Information	PnP Discovery connected to PnP server [chars] port [dec]	PnP Discovery is now connected to PnP server	pnpa	LOG_SID_NO_ACTION
<del>PnP</del> MP_CONNECTING	6-Information	PnP Discovery trying to connect to PnP server [chars] port [dec]	PnP Discovery is trying to connect to PnP server	-	LOG_SID_NO_ACTION
<del>PnP</del> MP_CONNECTING	6-Information	PnP Discovery trying to connect to PnP server [chars] port [dec]	PnP Discovery is trying to connect to PnP server	-	LOG_SID_NO_ACTION
POLICY_API-3-SBINT	3-Error	Error initializing [chars] subblock data structure. [chars]	Initialization of the specified subblock data structure could not be accomplished.	-	-
<del>POLICY_API</del> POLICYDNCIR	4-Warning	Dynamic policy on intf:[chars] cleared. Static policy in use.	A dynamic policy was overriding the static policy.\n\n The dynamic policy has been cleared the static policy\n\n is now in effect.	-	"No action required."
<del>POLICY_API</del> POLICYOBRDE	4-Warning	Dynamic policy overriding static on intf:[chars]	Static policy and dynamic policy are configured on the\n\n interface. The dynamic policy will override the static\n\n policy.	-	"Remove the static policy config if desired."
<del>POLICY_API</del> POLICYSAICIR	4-Warning	Static policy on intf:[chars] cleared. Dynamic policy in use.	A dynamic policy was overriding the static policy.\n\n Static policy has been cleared.	-	"No action required."
<del>POLICY_MANAGER</del> INITFAILURE	2-Critical	Init failure: [chars]	A problem occurred in the Policy Manager during initialization	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>POLYMANAGEREVENTS</del>	2-Critical	Event pool depleted: [chars]	The event pool has been depleted. There are no free buffers to process event	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
<del>POLYMANAGERINVALID</del>	3-Error	Invalid action	An invalid Policy Manager action was detected.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
<del>POLYMANAGERINVALID</del>	3-Error	A call to Policy Manager is made with invalid parameters	A call to Policy Manager was made with one or more invalid parameters	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
<del>POLYMANAGERINVALID</del>	3-Error	Invalid event severity 0x[hec]	The event that was received by the Policy Manager contained an invalid severity and was therefore not processed.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
<del>POLYMANAGERID</del>	3-Error	No more Policy IDs available	There are no more Policy IDs that can be allocated. The effect of this is that Policy Manager policies can no longer be created.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
<del>POLYMANAGERINVALID</del>	3-Error	NULL action routine invoked	The Policy Manager attempted to invoke an action which was NULL	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>POCYMANAGER</del> POLICYMANAGER	3-Error	Policy Manager routine called prior to initialization	The Policy Manager component was called prior to initialization. This could result in vital information being lost.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
<del>POP3CHUNK</del> POP3CHUNK	3-Error	-	POP3 code has detected a cleartext logon attempt in the inspected POP3 connection while secure-login is configured. This command has been rejected.	cpp-ucode	"This message is for informational purposed only but may indicate" "a security problem."
<del>PPNP10G</del> PPNP10G	2-Critical	front panel 10G port init error: PHY ready not received within [node]u seconds	front panel 10G interface init failure due to timeout	cpp-ucode	LOG_STD_ACTION
<del>PSSECURE</del> PSSECURE	2-Critical	Security violation occurred caused by MAC address [enet] on port [chars].	An unauthorized device attempted to connect on a secure port. The MAC address of the unauthorized device and the secure port are specified in the error message.	PortSecurity	"Determine the device that attempted to connect on the secure port." "Notify your network system administrator of this condition."
<del>PSSECURE</del> PSSECURE	2-Critical	Security violation on allowlist port [chars] due to MAC address [enet] on VLAN [node]u16. Program MAC drop and block the traffic.	An unauthorized device attempted to connect on a secure allowlist port. The MAC address of the unauthorized device secure port and vlan are specified in the error message.	PortSecurity	"Determine the device that attempted to connect " "on the secure allowlist port." "Notify your network system administrator " "of this condition."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PKSECUR</del> ADMACOE	2-Critical	Security violation occurred caused by MAC address [enet] on port [chars] attempting to access port [chars].	An authorized device attempted to move between secure ports. The MAC address of the device and the affected secure ports are specified in the error message.	PortSecurity	"Determine the device that attempted to move between secure ports." "Notify your network system administrator of this condition."
<del>PKSECUR</del> ADLAN	2-Critical	Security violation on port [chars] due to MAC address [enet] on VLAN [dec]	An unauthorized device attempted to connect on a secure trunk port. The MAC address of the unauthorized device and the secure trunk and VLAN are specified in the error message.	PortSecurity	"Determine the device that attempted to connect via the secure trunk " "port. Notify your network system administrator of this condition."
<del>PKSECUR</del> ADRADDAL	6-Information	Address <[node][enet]> could not be added to [chars] due to [chars].	In some rare cases MAC addresses are learnt before all software modules finished initialization and fully functional. In such cases this address may not be known to all modules in the system.	PortSecurity	LOG_SID_NO_ACTION
<del>PKSECUR</del> ADREMOVED	6-Information	Address <[node][enet]> exists on port [chars]. It has been removed from port [chars].	A routed port has changed to a switched port. An address stored in the previous switched port configuration is now in conflict and has been deleted.	PortSecurity	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PORTSECURITYADDRESREMOVED</del>	6-Information	Maximum system secure address count reached. Some secure addresses configured on port [chars] removed.	Some configured and sticky MAC addresses on the specified port were removed from the configuration. The number of secure addresses that the system supports was exceeded. This condition occurs only during hot swapping or port-mode changes for example when the port is converted from a L3 to a L2 port.	-	-
<del>PORTSECURITYVLANFULL</del>	6-Information	Vlan [node]on port [chars] has reached its limit. Address [enet] has been removed.	The voice VLAN has become the same as the access VLAN but the number of addresses allowed on the access VLAN has been reached so the address has been deleted.	PortSecurity	LOG_SID_NO_ACTION
<del>PORTSECURITYVLANREMOVED</del>	6-Information	VLAN [node]is no longer allowed on port [chars]. Its port security configuration has been removed.	A configured VLAN has been excluded either due to port mode change or allowed VLAN list change and is removed from the configuration.	PortSecurity	LOG_SID_NO_ACTION
PORT-6-NULL_OBJ	6-Information	Port object [chars] is unavailable.	Information about this port could not be retrieved. The port may not exist.	-	LOG_SID_NO_ACTION
PORT6PORT_RECOVERY	6-Information	[chars] [chars]	Recovery has been triggered. Configured action will take place on \n\ the port	-	LOG_SID_NO_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PORT6</del> SESSION_RECOVERY	6-Information	[chars] [chars] [dec]	Session recovery has an invalid cause code	-	LOG_SID_NO_ACTION
<del>PORT6</del> SMPORT_CLEARED	6-Information	[chars]	The ports will be reset and any active calls on these ports will be terminated	-	LOG_SID_NO_ACTION
<del>ROSSA_HRM</del> C2_MISMATCH	3-Error	The software [node]and hardware [node]copy of sonet c2 is detected to	During Minimal Disruptive Restart the software and hardware copy of the sonet C2 parameter is found to be different. This indicates an error and the SPA will be reset as normal and will impact traffic.	spa-pos-all	"Open a case with Cisco Technical Assistance Center for further "assistance."
<del>ROSSA_HRM</del> CRC_MISMATCH	3-Error	The software [dec] and hardware [dec] copy of crc is detected to be	During Minimal Disruptive Restart the software and hardware copy of the crc parameter is found to be different. This indicates an error and the SPA will be reset as normal and will impact traffic.	spa-pos-all	"Open a case with Cisco Technical Assistance Center for further "assistance."
<del>ROSSA_HRM</del> FRAMING_MISMATCH	3-Error	The software [dec] and hardware [dec] copy of framing is detected to be	During Minimal Disruptive Restart the software and hardware copy of the framing parameter is found to be different. This indicates an error and the SPA will be reset as normal and will impact traffic.	spa-pos-all	"Open a case with Cisco Technical Assistance Center for further "assistance."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>IOSPAIR/RC/BACK/MACH</del>	3-Error	The software [dec] and hardware [dec] copy of loopback is detected	During Minimal Disruptive Restart the software and hardware copy of the loopback parameter is found to be different. This indicates an error and the SPA will be reset as normal and will impact traffic.	spa-pos-all	"Open a case with Cisco Technical Assistance Center for further "assistance."
<del>IOSPAIR/RC/MTU/MACH</del>	3-Error	The software [dec] and hardware [dec] copy of mtu is detected to be	During Minimal Disruptive Restart the software and hardware copy of the mtu is found to be different. This indicates an error and the SPA will be reset as normal and will impact traffic.	spa-pos-all	"Open a case with Cisco Technical Assistance Center for further "assistance."
<del>IOSPAIR/RC/NULL/DEV/CS</del>	3-Error	-	Pointer to framer device object is NULL.	spa-pos-all	LOGSIDSHTTECHACION
<del>IOSPAIR/RC/CONC/FAURE</del>	3-Error	Framer reconciliation failure for SPA in [node][node]during Minimal Disruptive Restart.	During Minimal Disruptive Restart the framer reconciliation error has occured. This indicates an error and the SPA will be reset as normal and will impact traffic.	spa-pos-all	"Open a case with Cisco Technical Assistance Center for further "assistance."
<del>IOSPAIR/RC/CONC/FAURE</del>	3-Error	Framer reconfiguration failed for SPA in [node][node] with error [dec] during Minimal Disruptive Restart.	During Minimal Disruptive Restart the framer reconfig error has occured. This indicates an error and the SPA will be reset as normal and will impact traffic.	spa-pos-all	"Open a case with Cisco Technical Assistance Center for further "assistance."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IOSPAIR/RES/ALUE</del>	3-Error	Framer restart failed for SPA in [node][node]with error [dec] during Minimal Disruptive Restart.	During Minimal Disruptive Restart framer restart error has occurred. This indicates an error and the SPA will be reset as normal and will impact traffic.	spa-pos-all	"Open a case with Cisco Technical Assistance Center for further "assistance."
<del>IOSPAIR/RES/SMACH</del>	3-Error	The software [node]and hardware [node]copy of sonet S1S0 is detected	During Minimal Disruptive Restart the software and hardware copy of the sonet S1S0 parameter is found to be different. This indicates an error and the SPA will be reset as normal and will impact traffic.	spa-pos-all	"Open a case with Cisco Technical Assistance Center for further "assistance."
<del>IOSPAIR/RES/SMACH</del>	3-Error	The software [dec] and hardware [dec] copy of scrambling is detected	During Minimal Disruptive Restart the software and hardware copy of the scrambling parameter is found to be different. This indicates an error and the SPA will be reset as normal and will impact traffic.	spa-pos-all	"Open a case with Cisco Technical Assistance Center for further "assistance."
<del>IOSPAIR/RES/SMACH</del>	3-Error	The software [node]and hardware [node]copy of transmit-delay is	During Minimal Disruptive Restart the software and hardware copy of the transmit delay parameter is found to be different. This indicates an error and the SPA will be reset as normal and will impact traffic.	spa-pos-all	"Open a case with Cisco Technical Assistance Center for further "assistance."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IOS_SAS4#RCONG1AURE</del>	3-Error	SPI4 reconfiguration failed for SPA in [node][node]with error [dec] during Minimal Disruptive Restart.	During Minimal Disruptive Restart the spi4 reconfig error has ocured. This indicates an error and the SPA will be reset as normal and will impact traffic.	spa-pos-all	"Open a case with Cisco Technical Assistance Center for further "assistance."
<del>IOS_SAS4#RSTART1AURE</del>	3-Error	SPI4 restart failed for SPA in [node][node]with error [dec] during Minimal Disruptive Restart.	During Minimal Disruptive Restart spi4 restart error has ocured. This indicates an error and the SPA will be reset as normal and will impact traffic.	spa-pos-all	"Open a case with Cisco Technical Assistance Center for further "assistance."
<del>IOSX_DEDK3HPAGE_MN</del>	3-Error	[dec]MB does not meet [dec]MB minimum memory reservation. Performance may be impacted.	Cisco internal software error. The dataplane was unable to allocate the minimum number of hugepages. This could be caused by insufficient reservation or hugepages being consumed by other processes.	cpp-ucode	LOG_STD_ACTION
<del>IOSX_DEDK3NUMANDES</del>	3-Error	Expected 1 CPU socket detected [dec]. Performance may be impacted.	Virtual machine configuration issue. The dataplane detected multiple NUMA nodes. This is caused by the guest configuration of the hyper-visor.	cpp-ucode	LOG_STD_ACTION
<del>IOSX_DEDK3MPOCCURED</del>	4-Warning	alignment fixup @ PC=0x[hec] #hits=[dec] fault addr 0x[hec]	A misalignment was handled by a fixup signal handler	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
POXIN-4-POCCURD	4-Warning	alignment fixup @ PC=0x[node]x #hits=[dec] fault addr 0x[node]x BT=[chars]	A misalignment was handled by a fixup signal handler	-	-
POXIN-3-MBFRDUCE	3-Error	Failed to allocate [dec] packet buffers. Reduced to [dec].	Cisco internal software error. The dataplane was unable to allocate the maximum number of packet buffers. This is likely due to memory fragmentation condition.	cpp-ucode	LOG_STD_ACTION
POSLC-1-INITFAIL	1-Alert	POSLC[dec]/[dec] initialization timeout failure	LC POS ASIC and framer initialization failed	poslc	"Copy the error message exactly as it appears on the \n\ console or in the system log. If you cannot determine \n\ the nature of the error from the error message text \n\ call your Cisco technical support representative and \n\ provide the \n\ representative with the gathered information."
POSLC-3-4302	3-Error	Runaway Skystone 4302 framer [dec] Tx [chars] counter byte=[dec] pkt=[dec].	4302 hardware errors	poslc	"Copy the error message exactly as it appears on the console \n\ or in the system log. Call your Cisco technical support \n\ representative and provide the representative \n\ with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
POSLC-3-APS	3-Error	APS[dec] [chars]	RP deadman timer expired on LC LC is sending LAIS to far end	poslc	"Copy the error message exactly as it appears on the console \n\ or in the system log. Call your Cisco technical support \n\ representative and provide the representative \n\ with the gathered information."
POSLC-3-BMAENG	3-Error	[chars] POS [chars] [chars][chars]. src=0x[hec] det1=0x[hec] det2=0x[hec]	POS BMA engine hardware errors	poslc	-
POSLC-3-BMAPAR	3-Error	[chars] POS [chars]. BMA_DATA[30]=0x[hec] src=0x[hec] det1=0x[hec] det2=0x[hec]	Parity error occurred on POS asic BMA engine	poslc	-
POSLC-3-CORRUPT	3-Error	[chars]	A NULL SERIAL or SONET subblock retrieved while trying to fetch SERIAL or SONET subblock	poslcosm-pos	LOG_STD_ACTION
POSLC-3-HWERROR	3-Error	[chars]	The Optical Services Module has encountered a hardware error.	poslc	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
POSLC-3-LINKBADEV1	3-Error	Unexpected event woke up LC POS link process.	LC POS link report process receives an unexpected event	poslc	"Copy the error message exactly as it appears on the \n\ console or in the system log. Issue the show subsys \n\ command to gather data that may provide information\n\ to determine the nature of the error. If you cannot \n\ determine the nature of the error from the error \n\ message text or from the show subsys output call your\n\ Cisco technical support representative and provide the \n\ representative with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
POSLC-3-LINKNOPRC	3-Error	POSLC lcpos_add_process: Unable to create \n\ lcpos_link_report process	LC POS link report process can not be created	poslc	"Copy the error message exactly as it appears on the \n\ console or in the system log. Issue the show subsys \n\ command to gather data that may provide information\n\ to determine the nature of the error. If you cannot \n\ determine the nature of the error from the error \n\ message text or from the show subsys output call your\n\ Cisco technical support representative and provide the \n\ representative with the gathered information."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
POSLC-3-LINKPROC	3-Error	POSLC lcpo_link_report process: Could not get argument	LC POS link report process stops working	poslc	"Copy the error message exactly as it appears on the \n\ console or in the system log. Issue the show subsys show\n\ memory summary commands to gather data that may provide \n\ information to determine the nature of the error. If you \n\ cannot determine the nature of the error from the error \n\ message text or from the show subsys show memory summary \n\ output call your Cisco technical support representative \n\ and provide the representative with the gathered \n\ information."
POSLC-3-POSENG	3-Error	[chars] POS [chars]. [chars] port [dec]. src=0x[hec] det1=0x[hec] det2=0x[hec]	POS engine hardware errors	poslc	-
POSLC-3-PROCESS_CRAIHAL	3-Error	[chars]	The PoS line card could not create a process required for its operation. This condition might be caused by a resource being unavailable.	poslc	LOG_STD_ACTION
POSLC-3-PROCESS_TIMEREVENT	3-Error	[chars]	An unexpected process timer event occurred in the Optical Services Module.	poslc	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
POSLC-3-RXPOSTO	3-Error	POSLC[dec]/[dec] RX POS engine shutdown failed	The software is trying to shutdown the Rx POS engine. POS\n engine refuses to shutdown the software timeout	poslc	-
POSLC-3-SOP	3-Error	[chars] SOP. source=0x[hec] halt_minor0=0x[hec]	SOP hardware errors	poslc	-
POSLC-3-SRAMPAR	3-Error	[chars] POS [chars]. [chars]=0x[hec][chars]. src=0x[hec] det1=0x[hec] det2=0x[hec]	Parity error occurred on POS asic SRAM	poslc	-
POSLC-3-TXPOSTO	3-Error	POSLC[dec]/[dec] TX POS engine shutdown failed	The software is trying to shutdown the Tx POS engine. POS \n engine refuses to shutdown the software timeout	poslc	-
<del>POSLC-3-UNEXP</del>	3-Error	[chars]	An unexpected process event occurred in the Optical Services Module.	poslc	LOG_STD_ACTION
<del>POSLC-3-UNKNOWN</del>	3-Error	[chars]	An unknown controller condition was detected by the PoS line card while the controller was being analyzed.	poslc	LOG_STD_ACTION
<del>POWERSUPPLYA</del>	3-Error	Power supply A is not functioning	Power supply A is present but not functioning	hardware	LOG_STD_ACTION
<del>POWERSUPPLYA</del>	3-Error	Power supply A is not functioning	Power supply A is present but not functioning	hardware	LOG_STD_ACTION
<del>POWERSUPPLYB</del>	3-Error	Power supply B is not functioning	Power supply B is present but not functioning	hardware	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>POWER_ISSU_PWRBIAL</del>	3-Error	Power supply B is not functioning	Power supply B is present but not functioning	hardware	LOG_STD_ACTION
<del>POWER_ISSU_PWRBIAL</del>	3-Error	Power supply [chars] is not functioning	Power supply is present but not functioning	hardware	LOG_STD_ACTION
<del>POWER_ISSU_PWRBIAL</del>	3-Error	Power supply [dec] is not functioning for switch [dec]	Power supply is present but not functioning	hardware	LOG_STD_ACTION
<del>POWER_ISSU_PWRACK</del>	5-Notice	Power supply A is functioning	Power supply A is supplying power	hardware	LOG_SID_NO_ACTION
<del>POWER_ISSU_PWRACK</del>	5-Notice	Power supply A is functioning	Power supply A is supplying power	hardware	LOG_SID_NO_ACTION
<del>POWER_ISSU_PWRBCK</del>	5-Notice	Power supply B is functioning	Power supply B is supplying power	hardware	LOG_SID_NO_ACTION
<del>POWER_ISSU_PWRBCK</del>	5-Notice	Power supply B is functioning	Power supply B is supplying power	hardware	LOG_SID_NO_ACTION
<del>POWER_ISSU_PWRCK</del>	5-Notice	Power supply [chars] is functioning	Power supply is supplying power	hardware	LOG_SID_NO_ACTION
<del>POWER_ISSU_PWRCK</del>	5-Notice	Power supply [dec] is functioning for switch [dec]	Power supply is supplying power	hardware	LOG_SID_NO_ACTION
<del>POWER_ISSU_CAPNADSE</del>	3-Error	Powernet ISSU client capability list is empty.	The Powernet ISSU client capability exchange list size is invalid.	powernet	"show issu capability entries <Client_ID>"
<del>POWER_ISSU_CAPNADSE</del>	3-Error	Powernet ISSU client capability list is empty.	The Powernet ISSU client capability exchange list size is invalid.	powernet	"show issu capability entries <Client_ID>"
<del>POWER_ISSU_CAPNADSE</del>	3-Error	Powernet ISSU client capability exchange result incompatible.	The Powernet ISSU client capability exchange has negotiated as incompatible with the peer.	powernet	"show issu negotiated capability <Session_ID>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>POWNET_ISSU_CAPABILE</del>	3-Error	Powernet ISSU client capability exchange result incompatible.	The Powernet ISSU client capability exchange has negotiated as incompatible with the peer.	powernet	"show issu negotiated capability <Session_ID>"
POWNET_ISSU_CAPABILIY	3-Error	Powernet ISSU client [chars]	Powernet ISSU client observed an error during capability negotiation. When this error happens there is a mismatch between the client capability between the active and standby unit.	powernet	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
POWNET_ISSU_CAPABILIY	3-Error	Powernet ISSU client [chars]	Powernet ISSU client observed an error during capability negotiation. When this error happens there is a mismatch between the client capability between the active and standby unit.	powernet	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
POWNET_ISSU_GET_BUFFER	3-Error	EnergyWise ISSU client failed to get buffer for message. Error: [dec] [chars]	EnergyWise ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiaton the standby device cannot be brought up properly.	powernet	"show logging and show checkpoint client"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
POWERNET_ISSU3CETBUHR	3-Error	EnergyWise ISSU client failed to get buffer for message. Error: [dec] [chars]	EnergyWise ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiaiton the standby device cannot be brought up properly.	powernet	"show logging and show checkpoint client"
POWERNET_ISSU3INIT	3-Error	EnergyWise ISSU client initialization failed to [chars]. Error: [dec] [chars]	EnergyWise ISSU client could not be initialilzed. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	powernet	LOGSIDSHTTECHACION
POWERNET_ISSU3INIT	3-Error	EnergyWise ISSU client initialization failed to [chars]. Error: [dec] [chars]	EnergyWise ISSU client could not be initialilzed. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	powernet	LOGSIDSHTTECHACION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
POWRNET_ISSUAD_ISSN	3-Error	EnergyWise ISSU client does not have a valid registered session.	EnergyWise ISSU client does not have a valid registered session.	powernet	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
POWRNET_ISSUAD_ISSN	3-Error	EnergyWise ISSU client does not have a valid registered session.	EnergyWise ISSU client does not have a valid registered session.	powernet	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
POWRNET_ISSUMG_NOCK	3-Error	EnergyWise ISSU client 'Message Type [dec]' is not compatible	EnergyWise ISSU client received an incompatible message from the peer device. The message cannot be processed.	powernet	"show issu message group <client_id> and" "show issu session <client_id> and" "show issu negotiated version <session_id>"
POWRNET_ISSUMG_NOCK	3-Error	EnergyWise ISSU client 'Message Type [dec]' is not compatible	EnergyWise ISSU client received an incompatible message from the peer device. The message cannot be processed.	powernet	"show issu message group <client_id> and" "show issu session <client_id> and" "show issu negotiated version <session_id>"
POWRNET_ISSUMG_SE	3-Error	EnergyWise ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	EnergyWise ISSU client failed to calculate the MTU for the specified message. The EnergyWise ISSU client is not able to send the message to the standby device.	powernet	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>POWERNET_ISSU_MG_SIZE</del>	3-Error	EnergyWise ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	EnergyWise ISSU client failed to calculate the MTU for the specified message. The EnergyWise ISSU client is not able to send the message to the standby device.	powernet	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>POWERNET_ISSU_NGO_AID</del>	3-Error	EnergyWise ISSU client failed to send negotiation message. Error: [dec] [chars]	EnergyWise ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device can not be brought up properly.	powernet	"show logging and show checkpoint client"
<del>POWERNET_ISSU_NGO_AID</del>	3-Error	EnergyWise ISSU client failed to send negotiation message. Error: [dec] [chars]	EnergyWise ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device can not be brought up properly.	powernet	"show logging and show checkpoint client"
<del>POWERNET_ISSU_NGO</del>	3-Error	EnergyWise ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The EnergyWise ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	powernet	"show issu session <client_id> and " "show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>POWER_ISSU_NCO</del>	3-Error	EnergyWise ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The EnergyWise ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	powernet	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>POWER_ISSU_NCO</del>	3-Error	EnergyWise ISSU client failed to register session information. Error: [dec] [chars]	EnergyWise ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	powernet	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>POWER_ISSU_NCO</del>	3-Error	EnergyWise ISSU client failed to register session information. Error: [dec] [chars]	EnergyWise ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	powernet	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>POWER_ISSU_NCO</del>	3-Error	EnergyWise ISSU client failed to unregister session information. Error: [dec] [chars]	EnergyWise ISSU client failed to unregister session information.	powernet	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>POWER_ISSU_NCO</del>	3-Error	EnergyWise ISSU client failed to unregister session information. Error: [dec] [chars]	EnergyWise ISSU client failed to unregister session information.	powernet	"show issu session <client_id> and " "show issu negotiated capability <session_id>"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>POWR1220_ISSU_TRANSFORM_FAIL</del>	3-Error	EnergyWise ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	EnergyWise ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the EnergyWise state between the active device and the standby device is not identical.	powernet	"show issu session <client_id> and" "show issu negotiated version <session_id>"
<del>POWR1220_ISSU_TRANSFORM_FAIL</del>	3-Error	EnergyWise ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	EnergyWise ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the EnergyWise state between the active device and the standby device is not identical.	powernet	"show issu session <client_id> and" "show issu negotiated version <session_id>"
<del>POWR1220_ISSU_TRANSFORM_FAIL</del>	4-Warning	POWR1220 is not responding. The device is [chars]	POWR1220 device is not responding	cmts-platform	"Copy the error message exactly as it appears and report it to your" " technical support"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
POWR1220-SEQUENCING_FAILURE	4-Warning	POWR1220 sequencing failure happened. The device is [chars] and register values are reg 0x03 0x[node]x reg 0x04 0x[node]x reg 0x05 0x[node]x reg 0x07 0x[node]x reg 0x08 0x[node]x	POWR1220 device registers do now show correct values	cmts-platform	"Copy the error message exactly as it appears and report it to your" " technical support"
PPCP-3-LOCK	3-Error	Can't lock policy provisioning database: [chars]	Access to stored class-maps policy-maps service-policies and related data is protected by a locking mechanism. An operation tried to read or write provisioning data but was unable to get control of the lock.	qos-internal	"Any Cisco Class-based Policy Provisioning Language configuration " "or show commands that you were attempting to " "run may not have succeeded. Please try the operation again.\n\n" "Contact support if this message is seen frequently."
PPCP-3-LOCK	3-Error	Can't lock policy provisioning database: [chars]	Access to stored class-maps policy-maps service-policies and related data is protected by a locking mechanism. An operation tried to read or write provisioning data but was unable to get control of the lock.	qos-internal	"Any Cisco Class-based Policy Provisioning Language configuration " "or show commands that you were attempting to " "run may not have succeeded. Please try the operation again.\n\n" "Contact support if this message is seen frequently."
PPCP-6-WAVL	6-Information	\n[chars] is not successful	The specified classmap or policymap insertion or removal was not successful. This is an internal software error.\n	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PPCP-6-WAVL	6-Information	\n[chars] is not successful	The specified classmap or policymap insertion or removal was not successful. This is an internal software error.\n	-	LOG_STD_ACTION
PPM_REQ_FAILED3L2MN	3-Error	ERRMSG_NOFLAGS	-	-	-
PPM_REQ_FAILED3L2MN	3-Error	ERRMSG_NOFLAGS	-	-	-
PPP3MLPFSREENTERED	3-Error	Multilink fastsend reentered bundle [chars] [chars] packet discarded	-	-	-
PPP3MLPFSREENTERED	3-Error	Multilink fastsend reentered bundle [chars] [chars] packet discarded	-	-	-
PPP-4-IPXNET	4-Warning	mismatched IPX network numbers. Ours = [hec] theirs = [hec]	The two ends of a serial link have different IPX network numbers.	-	"Confirm the configuration of both devices."
PPP-4-IPXNET	4-Warning	mismatched IPX network numbers. Ours = [hec] theirs = [hec]	The two ends of a serial link have different IPX network numbers.	-	"Confirm the configuration of both devices."
PPP-4-NOAPPOINT	4-Warning	MLP Bundle [chars] not appointed	Multilink PPP Bundle was not appointed. Most likely caused by\n\n no memory available	-	"Log show memory summary output. Then analyze output to find\n\n possible memory leak"
PPP-4-NOAPPOINT	4-Warning	MLP Bundle [chars] not appointed	Multilink PPP Bundle was not appointed. Most likely caused by\n\n no memory available	-	"Log show memory summary output. Then analyze output to find\n\n possible memory leak"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PPP-4-NOMAC	4-Warning	Lex ncp: no free Lex interface found with MAC address [enet]	This message indicates that a LAN Extender interface could not be found with the specified MAC address when bringing up a LAN Extender link. This is a configuration error.	-	"Refer to the documentation on configuring a LAN Extender Interface."
PPP-4-NOMAC	4-Warning	Lex ncp: no free Lex interface found with MAC address [enet]	This message indicates that a LAN Extender interface could not be found with the specified MAC address when bringing up a LAN Extender link. This is a configuration error.	-	"Refer to the documentation on configuring a LAN Extender Interface."
HFCEIA3GLOBAL_ERROR	3-Error	PPPoE IA internal error [chars]	A software sanity check failed in the PPPoE IA process as described in the output. This happens when the PPPoE IA feature receives a packet with an invalid source interface or source VLAN. PPPoE IA drops the packet but is otherwise unaffected.	cat4000-me-sw	"Issue the show running-config show pppoe intermediate-agent info " "and debug pppoe intermediate-agent command to gather more data " "about the error. If necessary contact Cisco technical support " "to help solve the problem."

Facility-Security-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PPPoE_IA_INTERFACE_ERROR	3-Error	PPPoE IA internal error Interface [chars] : [chars]	A software sanity check failed on an interface in the PPPoE IA process. This message is displayed if PPPoE IA received a packet it shouldn't according to the configuration. PPPoE IA drops the packet but is otherwise unaffected.	cat4000-me-sw	"Issue the show running-config show pppoe intermediate-agent info " "and debug pppoe intermediate-agent command to gather more data " "about the error. If necessary contact Cisco technical support " "to help solve the problem."
PPPoE_IA_RATE_WARNING	4-Warning	PPPoE IA received [dec] PPPoE packets on interface [chars]	PPPoE IA detected a PPPoE packet rate limit violation on the specified interface. The interface will be error disabled.	cat4000-me-sw	LOG_SID_NO_ACTION " To recover the disabled interface use the " "errdisable recovery cause pppoe-ia-rate-limit command"
PPPoE_IA_QUEUE_FULL	4-Warning	Fail to enqueue PPPoE packet into processing queue: [chars] the queue is probably full and packet will be dropped.	PPPoE packets are being received at a much higher rate than PPPoE IA process can handle them. These unhandled PPPoE packets will be dropped to prevent a possible denial of service attack.	cat4000-me-sw	LOG_SID_NO_ACTION
PPPoE_IA_RATE_EXCEEDED	4-Warning	The interface [chars] is receiving more than the threshold set	PPPoE packets are being received at a much higher rate than the specified threshold.	cat4000-me-sw	LOG_SID_NO_ACTION
PPPoE_IA_SUSPICIOUS_PORT	5-Notice	[chars] drop message on untrusted port message type: [chars] MAC sa: [enet]	PPPoE IA detected types of PPPoE messages that are not allowed on the untrusted interface. A host may be trying to act as a PPPoE server.	cat4000-me-sw	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
HROTFSMBCHUNKCREAE	3-Error	chunk create failed	chunk create failed	g709-dwdm	LOG_STD_ACTION
HROTFSMBCREAE_FAIL	3-Error	creation failed : [chars]	creation failed	g709-dwdm	LOG_STD_ACTION
HROTFSMBMALLOCFAL	3-Error	malloc failed : [chars]	malloc failed	g709-dwdm	LOG_STD_ACTION
HROTFSMBCALTRANSIENT	3-Error	All events could not be processed in transit queue	All events could not be processed in transit queue	g709-dwdm	LOG_STD_ACTION
HROTFSMBCTRANSIENT	3-Error	Invalid event [dec] while processing transit event queue	Invalid event while processing transit event queue	g709-dwdm	LOG_STD_ACTION
HROTFSMBSMINDNOIAL	4-Warning	Could not find element if_number [dec] in FSM list	Could not find element in FSM list	g709-dwdm	LOG_STD_ACTION
HROT3TRGCHUNKCREAE	3-Error	chunk create failed	chunk create failed	g709-dwdm	LOG_STD_ACTION
HROT3TRGNADCLIENTYE	3-Error	Invalid client type [dec] from xdr	invalid client type from xdr	g709-dwdm	LOG_STD_ACTION
HROT3TRGSSUCMPAL	3-Error	L3 trigger xdr priority msg not issu compatible	L3 trigger xdr priority msg not issu compatible	g709-dwdm	LOG_STD_ACTION
HROT3TRGMALLOCFAL	3-Error	malloc failed: [chars]	malloc failed	g709-dwdm	LOG_STD_ACTION
PQ3_FE-1-INITFAILP	1-Alert	PQ3/FE[dec]/[dec] Init failed at [chars]	The FE could not allocate a I/O buffer pool.	-	"Clear the interface. If the message recurs call your\n\ technical support representative for assistance."
PQ3_FE-1-MACADDRFAIL	1-Alert	PQ3/FE[dec]/[dec] Unable to set the Mac-address for the interface	The FEC could not set the mac address of the interface.	-	"Clear the interface. If the message recurs call your\n\ technical support representative for assistance."
PQ3_FE-1-SHOWFAIL	1-Alert	PQ3/FE[dec]/[dec] Memory error at [chars]	The FEC could not allocate memory to display controller.	-	"Clear the interface. If the message recurs call your\n\ technical support representative for assistance."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PQ3_FE-2-NOISL	2-Critical	Interface [chars] does not support ISL	The interface cannot be configured as an ISL trunk.	-	"Check the configuration."
PQ3_FE-3-OVERFLO	3-Error	PQ3/FE[dec]/[dec] Receive overflow	While receiving a frame the controller chip's local buffer transmitted insufficient data because data could not be transferred to DRAM fast enough to keep pace with its input rate. Normally such a problem is temporary depending on transient peak loads within the system.	-	"The system should recover. No action is required."
PQ3_FE-3-UNDERFLO	3-Error	PQ3/FE[dec]/[dec] Transmit underflow	While transmitting a frame the controller chip's local buffer received insufficient data because data could not be transferred to the chip fast enough to keep pace with its output rate. Normally such a problem is temporary depending on transient peak loads within the system.	-	"The system should recover. No action is required."
PQ3_FE-4-BABBLE	4-Warning	PQ3/FE[dec]/[dec] Babble error CSR[dec]=0x[node]x	The transmitter has been on the channel longer than the time taken to transmit the largest frame.	-	"The system should recover. No action is required."
PQ3_FE-5-EXECOLL	5-Notice	PQ3/FE[dec]/[dec] Excessive collision	Excessive collisions occurred on the Fast Ethernet interface.	-	"No action is required."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
PQ3_FE-5-LATECOLL	5-Notice	PQ3/FE[dec]/[dec] Late collision	Late collisions occurred on the Fast Ethernet interface.	-	"If the interface is Fast Ethernet verify that both peers are in the same duplex mode. No action is required."
PQ3_FE-5-LOSTCARR	5-Notice	PQ3/FE[dec]/[dec] Lost carrier. Transceiver problem?	The cable and/or transceiver is not connected.	-	"Connect the cable and/or transceiver."
PQ3_TSEC-1-INITFAIL	1-Alert	PQ3/FE[dec] Init failed CSR[dec]=0x[node]x	The software failed to initialize/restart an Ethernet/Fast Ethernet interface.	-	"Clear the interface. If the message recurs call your technical support representative for assistance."
PQ3_TSEC-1-INITFAILP	1-Alert	PQ3/FE[dec] Init failed at [chars]	The FEC could not allocate a I/O buffer pool.	-	"Clear the interface. If the message recurs call your technical support representative for assistance."
PQ3_TSEC-1-MEMERR	1-Alert	PQ3/FE[dec] Memory error CSR[dec]=0x[node]x	The interface could not access system resources for a long time. This problem may occur under very heavy loads.	-	"The system should recover. No action is required. If the message recurs call your technical support representative for assistance."
PQ3_TSEC-1-SHOWFAIL	1-Alert	PQ3/FE[dec] Memory error at [chars]	The FEC could not allocate memory to display controller.	-	"Clear the interface. If the message recurs call your technical support representative for assistance."
PQ3_TSEC-2-NOISL	2-Critical	Interface [chars] does not support ISL	The interface cannot be configured as an ISL trunk.	-	"Check the configuration."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PQ3_TSEC3-OVERFLO	3-Error	PQ3/FE[dec] Receive overflow	While receiving a frame the controller chip's local buffer\n\ transmitted insufficient data because data could not be transferred to\n\ DRAM fast enough to keep pace with its input rate. Normally such a\n\ problem is temporary depending on transient peak loads within the\n\ system.	-	"The system should recover. No action is required."
PQ3_TSEC3-OWNERR	3-Error	PQ3/FE[dec] Buffer ownership error pak=0x[hec]	The software detected an error in descriptor ownership.	-	"Try a later version of the software. If the message " "recurs call your technical support representative " "for assistance."
PQ3_TSEC3-UNDERFLO	3-Error	PQ3/FE[dec] Transmit underflow	While transmitting a frame the controller chip's local buffer\n\ received insufficient data because data could not be transferred to the\n\ chip fast enough to keep pace with its output rate. Normally such a\n\ problem is temporary depending on transient peak loads within the\n\ system.	-	"The system should recover. No action is required."
PQ3_TSEC4-BABBLE	4-Warning	PQ3/FE[dec] Babble error CSR[dec]=0x[node]x	The transmitter has been on the\n\ channel longer than the time taken to transmit the largest\n\ frame.	-	"The system should recover. No action is required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PQ3_TSEC-5-COLL	5-Notice	PQ3/FE[dec] Excessive collisions TDR=[dec] TRC=[dec].	-	-	-
PQ3_TSEC5EXCESSCOLL	5-Notice	PQ3/FE[dec] Excessive collision	Ethernet/Fast Ethernet is seeing multiple collisions. This\n\n may occur under heavy loads.	-	"The system should recover. No action is\n\n required."
PQ3_TSEC5LATECOLL	5-Notice	PQ3/FE[dec] Late collision	Late collisions occurred on the Ethernet/Fast Ethernet interface.	-	"If the interface is Fast Ethernet verify that both\n\n peers are in the same duplex mode. For regular\n\n Ethernet the system should recover. No action is\n\n required."
PQ3_TSEC5LOSTCARR	5-Notice	PQ3/FE[dec] Lost carrier. Transceiver problem?	The cable is not connected to the port.	-	"Connect the cable to the port."
PQUICC-1-BADHDXFSM	1-Alert	PQUICC[dec]/[dec] Unexpected HDX state [dec] event [dec]	A bad event was detected in the state machine for half duplex\n\n transmission/reception.	-	"Copy the error message exactly as it\n\n appears and report it to your technical support representative."
PQUICC-1-BADHDXFSM	1-Alert	PQUICC[dec]/[dec] Unexpected HDX state [dec] event [dec]	A bad event was detected in the state machine for half duplex\n\n transmission/reception.	-	"Copy the error message exactly as it\n\n appears and report it to your technical support representative."
PQUICC-1-CTSLOST	1-Alert	PQUICC[dec]/[dec] Clear to Send Lost	-	-	"Check the serial interface cable and/or communication equipment such\n\n as the channel service unit/data service unit CSU/DSU."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
PQUICC-1-CTSLOST	1-Alert	PQUICC[dec]/[dec] Clear to Send Lost	-	-	"Check the serial interface cable and/or communication equipment such as the channel service unit/data service unit CSU/DSU."
PQUICC-1-INITFAIL	1-Alert	PQUICC[dec]/[dec] SCC[dec] init failed	The software failed to initialize/restart a 1T serial card.	-	"Clear the serial interface. If the message recurs call your technical support representative for assistance."
PQUICC-1-INITFAIL	1-Alert	PQUICC[dec]/[dec] SCC[dec] init failed	The software failed to initialize/restart a 1T serial card.	-	"Clear the serial interface. If the message recurs call your technical support representative for assistance."
PQUICC-1-LINEFLAP	1-Alert	PQUICC[dec]/[dec] Excessive modem control changes	-	-	"Check the serial interface cable. The error can occur if the cable is disconnected or has come loose and is picking up noise. If the cable appears to be connected correctly check the equipment connected to the cable."
PQUICC-1-LINEFLAP	1-Alert	PQUICC[dec]/[dec] Excessive modem control changes	-	-	"Check the serial interface cable. The error can occur if the cable is disconnected or has come loose and is picking up noise. If the cable appears to be connected correctly check the equipment connected to the cable."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PQUICC-I-NOMEMORY	1-Alert	msgtxt_nomemory	The MPC860/PowerQUICC CPU was unable to access the memory it needs to carry out its functions. Here are some possible causes. The network is large requiring a lot of memory for routing tables and so on. The router configuration has many features enabled each of which require a certain amount of memory. A software error memory leak exists.	-	"Reduce system activity to ease the memory demand or upgrade to a larger memory configuration."
PQUICC-I-NOMEMORY	1-Alert	msgtxt_nomemory	The MPC860/PowerQUICC CPU was unable to access the memory it needs to carry out its functions. Here are some possible causes. The network is large requiring a lot of memory for routing tables and so on. The router configuration has many features enabled each of which require a certain amount of memory. A software error memory leak exists.	-	"Reduce system activity to ease the memory demand or upgrade to a larger memory configuration."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PQUICQMCGLOBALERRR	1-Alert	PQUICCC[dec]/[dec] Global error [hec] in QMC	One or more of the channels served by the QMC instance encountered\n\ transmitter underflow or receiver overflow or the QMC interrupt\n\ table overflowed. Normally such a problem is temporary depending on \n\ transient peak loads within the system.	-	"The system should recover. No action is required."
PQUICQMCGLOBALERRR	1-Alert	PQUICCC[dec]/[dec] Global error [hec] in QMC	One or more of the channels served by the QMC instance encountered\n\ transmitter underflow or receiver overflow or the QMC interrupt\n\ table overflowed. Normally such a problem is temporary depending on \n\ transient peak loads within the system.	-	"The system should recover. No action is required."
PQUICCC-1-TOOBIG	1-Alert	PQUICCC[dec]/[dec] packet too big packet size was [dec] bytes	A packet greater than the assigned MTU of this serial interface\n\ was queued up for transmission.	-	"The system should recover. No action is required.\n\ \n\ If the message recurs it may indicate an error\n\ related to data traffic patterns. Copy the error message exactly as it\n\ appears and report it to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PQUICC-1-TOOBIG	1-Alert	PQUICC[dec]/[dec] packet too big packet size was [dec] bytes	A packet greater than the assigned MTU of this serial interface\n\ was queued up for transmission.	-	"The system should recover. No action is required.\n\ \n\ If the message recurs it may indicate an error\n\ related to data traffic patterns. Copy the error message exactly as it\n\ appears and report it to your technical support representative."
PQUICC-1-TOOSMALL	1-Alert	PQUICC[dec]/[dec] packet was less than 2 bytes\nmsgdef_explanation A small packet	-	-	-
PQUICC-1-TOOSMALL	1-Alert	PQUICC[dec]/[dec] packet was less than 2 bytes\nmsgdef_explanation A small packet	-	-	-
PQUICC-1-UNDERFLO	1-Alert	PQUICC[dec]/[dec] Transmit underflow	While transmitting a frame the serial controller chip's local buffer\n\ received insufficient data because data could not be transferred to the\n\ chip fast enough to keep pace with its output rate. Normally such a\n\ problem is temporary depending on transient peak loads within the\n\ system.	-	"The system should recover. No action is required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PQUICC-1-UNDERFLO	1-Alert	PQUICC[dec]/[dec] Transmit underflow	While transmitting a frame the serial controller chip's local buffer received insufficient data because data could not be transferred to the chip fast enough to keep pace with its output rate. Normally such a problem is temporary depending on transient peak loads within the system.	-	"The system should recover. No action is required."
<del>PQUICUNEXPECTED_INTERRUPT</del>	1-Alert	PQUICC[dec] Unexpected modem-signal interrupt	The software did not expect to see a modem control signal change on this type of WIC card interface.	-	"Copy the error message exactly as it appears and report it to your technical support representative."
<del>PQUICUNEXPECTED_INTERRUPT</del>	1-Alert	PQUICC[dec] Unexpected modem-signal interrupt	The software did not expect to see a modem control signal change on this type of WIC card interface.	-	"Copy the error message exactly as it appears and report it to your technical support representative."
PQUICUNKNOWN_WIC	1-Alert	PQUICC[dec] WIC card has an unknown ID of 0x[hec]	The software does not recognize the type of WIC card plugged into the port module.	-	"Check the part number on the WIC card to verify that it is supported in the IOS release operational on the router or contact your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PQUICC-UNKNOWN_WIC	1-Alert	PQUICC[dec] WIC card has an unknown ID of 0x[hec]	The software does not recognize the type of WIC card plugged into the port module.	-	"Check the part number on the WIC card to verify that it is supported in the IOS release operational on the router or contact your technical support representative."
PQUICC-SUBRIED_CONG	1-Alert	Slot [dec] has an unsupported combination of ISDN WAN interface cards	It is not possible to support this type of BRI card in slot 1 along with another BRI card in slot 0.	-	"Remove one of the BRI cards from either slot."
PQUICC-SUBRIED_CONG	1-Alert	Slot [dec] has an unsupported combination of ISDN WAN interface cards	It is not possible to support this type of BRI card in slot 1 along with another BRI card in slot 0.	-	"Remove one of the BRI cards from either slot."
PQUICC-I-WRONG_SLOT	1-Alert	PQUICC[dec] BRI card in wrong slot1	The BRI card is not supported in WIC slot 0.	-	"Power down move the BRI card to the other WIC slot on the port module and reboot."
PQUICC-I-WRONG_SLOT	1-Alert	PQUICC[dec] BRI card in wrong slot1	The BRI card is not supported in WIC slot 0.	-	"Power down move the BRI card to the other WIC slot on the port module and reboot."
PQUICC-3-OWNERR	3-Error	msgtxt_ownerror	An internal software error occurred.	-	"Call your technical support representative to obtain a software upgrade."
PQUICC-3-OWNERR	3-Error	msgtxt_ownerror	An internal software error occurred.	-	"Call your technical support representative to obtain a software upgrade."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PQUIC3PULSNIERRPT	3-Error	Interface card in slot [dec] generated a spurious interrupt	Interface card on the router which is not supported by this image\n\ generated a spurious interrupt that can not be handled.	-	"No action is required. To avoid seeing this message in the future\n\ remove the unsupported card or use an image that supports it."
PQUIC3PULSNIERRPT	3-Error	Interface card in slot [dec] generated a spurious interrupt	Interface card on the router which is not supported by this image\n\ generated a spurious interrupt that can not be handled.	-	"No action is required. To avoid seeing this message in the future\n\ remove the unsupported card or use an image that supports it."
PQUIC3UNKNOWNCTXVCR	3-Error	PQUICC Unknown TX vector on port [dec]	An internal software error occurred.	-	"Copy the error message exactly as it\n\ appears and report it to your technical support representative."
PQUIC3UNKNOWNCTXVCR	3-Error	PQUICC Unknown TX vector on port [dec]	An internal software error occurred.	-	"Copy the error message exactly as it\n\ appears and report it to your technical support representative."
PQUIC3UNKNOWNSCCS	3-Error	PQUICC Incorrect SCC number	An internal software error occurred.	-	"Call your technical support representative to obtain a software\n\ upgrade."
PQUIC3UNKNOWNSCCS	3-Error	PQUICC Incorrect SCC number	An internal software error occurred.	-	"Call your technical support representative to obtain a software\n\ upgrade."
PQUIC3BADHDXFSM	1-Alert	PQUICC3[dec]/[dec] Unexpected HDX state [dec] event [dec]	A bad event was detected in the state machine for half duplex\n\ transmission/reception.	-	"Copy the error message exactly as it\n\ appears and report it to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
PQUICC3-1-CTSLOST	1-Alert	PQUICC3[dec]/[dec] Clear to Send Lost	-	-	"Check the serial interface cable and/or communication equipment such as the channel service unit/data service unit CSU/DSU."
PQUICC3-1-INITFAIL	1-Alert	PQUICC3[dec]/[dec] SCC[dec] init failed	The software failed to initialize/restart a 1T serial card.	-	"Clear the serial interface. If the message recurs call your technical support representative for assistance."
PQUICC3-1-LINEFLAP	1-Alert	PQUICC3[dec]/[dec] Excessive modem control changes	-	-	"Check the serial interface cable. The error can occur if the cable is disconnected or has come loose and is picking up noise. If the cable appears to be connected correctly check the equipment connected to the cable."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PQUICC3-I-NOMEMORY	1-Alert	msgtxt_nomemory	The MPC8500 PowerQUICC CPU was unable to access the memory it needs to carry out its functions. Here are some possible causes. The network is large requiring a lot of memory for routing tables and so on. The router configuration has many features enabled each of which require a certain amount of memory. A software error memory leak exists.	-	"Reduce system activity to ease the memory demand or upgrade to a larger memory configuration."
PQUICC3-QMC-GLOBAL_ERROR	1-Alert	PQUICC3[dec]/[dec] Global error [hec] in QMC	One or more of the channels served by the QMC instance encountered transmitter underflow or receiver overflow or the QMC interrupt table overflowed. Normally such a problem is temporary depending on transient peak loads within the system.	-	"The system should recover. No action is required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PQUICC3-1-TOOBIG	1-Alert	PQUICC3[dec]/[dec] packet too big packet size was [dec] bytes	A packet greater than the assigned MTU of this serial interface\n\n was queued up for transmission.	-	"The system should recover. No action is required.\n\n\n If the message recurs it may indicate an error\n\n related to data traffic patterns. Copy the error message exactly as it\n\n appears and report it to your technical support representative."
PQUICC3-1-TOOSMALL	1-Alert	PQUICC3[dec]/[dec] packet was less than 2 bytes\nmsgdef_explanation A small packet	-	-	-
PQUICC3-1-UNDERFLO	1-Alert	PQUICC3[dec]/[dec] Transmit underflow	While transmitting a frame the serial controller chip's local buffer\n\n received insufficient data because data could not be transferred to the\n\n chip fast enough to keep pace with its output rate. Normally such a\n\n problem is temporary depending on transient peak loads within the\n\n system.	-	"The system should recover. No action is required."
PQUICC3-1-UNEXPECTED_INTERRUPT	1-Alert	PQUICC3[dec] Unexpected modem-signal interrupt	The software did not expect to see a modem control signal change\n\n on this interface.	-	"Copy the error message exactly as it\n\n appears and report it to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PQUICC3-UNKNOWN_WIC	1-Alert	PQUICC3[dec] WIC card has an unknown ID of 0x[hec]	The software does not recognize the type of WIC card plugged into the port module.	-	"Check the part number on the WIC card to verify that it is supported in the IOS release operational on the router or contact your technical support representative."
PQUICC3-UNSUPPORTED_CONG	1-Alert	Slot [dec] has an unsupported combination of ISDN WAN interface cards	It is not possible to support this type of BRI card in slot 1 along with another BRI card in slot 0.	-	"Remove one of the BRI cards from either slot."
PQUICC3-WRONG_SLOT	1-Alert	PQUICC3[dec] BRI card in wrong slot1	The BRI card is not supported in WIC slot 0.	-	"Power down move the BRI card to the other WIC slot on the port module and reboot."
PQUICC3-3-DDR_ERR	3-Error	DDR [dec] [chars] error from memory	A soft-parity error from the memory has been detected. Normal system operation should continue	-	"If there is a regular or sustained occurrence of this message copy the error message exactly as it appears and report it to technical support representative."
PQUICC3-3-OWNERR	3-Error	msgtxt_ownerror	An internal software error occurred.	-	"Call your technical support representative to obtain a software upgrade."
PQUICC3-3-SPURIOUS_INTERRUPT	3-Error	Interface card in slot [dec] generated a spurious interrupt	Interface card on the router which is not supported by this image generated a spurious interrupt that can not be handled.	-	"No action is required. To avoid seeing this message in the future remove the unsupported card or use an image that supports it."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PQUICC3UNKNOWNSCCTRX</del>	3-Error	PQUICC3 Unknown TX vector on port [dec]	An internal software error occurred.	-	"Copy the error message exactly as it\n\ appears and report it to your technical support representative."
<del>PQUICC3UNKNOWNSCCS</del>	3-Error	PQUICC3 Incorrect SCC number	An internal software error occurred.	-	"Call your technical support representative to obtain a software\n\ upgrade."
<del>IOSXEUNREGISTEREDOPEN</del>	3-Error	iosxe-binos-utils	Unregistered request to dlopen library[chars]	The program is attempting to dynamically open a library that has not been explicitly listed on its list of dynamically opened libraries. This represents a potential security threat as well as creates potential run-time instabilities	File a DDTS against the listed program to register the library in question. If this was an unexpected call to dlopen then the source of the call should be root-caused and closed
<del>PROCESSRAEALMSEHA</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>PROCESSRAEALMSEHA</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>PROCESSKIL3MISIEHA</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>PROCESSKIL3MISIEHA</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
PROCESS-3-LCON	3-Error	ERRMSG_NOFLAGS	-	-	-
PROCESS-3-LCON	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>PROCESSRAEALMSEHA</del>	3-Error	Failed to create APSd [dec] handle	Failed to create message handle for APSd communication.	DDTS_COMPONENT	LOG_SIDSHTECH_ACTION
<del>PROCESSKIL3MISIEHA</del>	3-Error	Failed to initialize dispatch path for APSd slot[dec]	Failed to initialize dispatch path handle for APSd communication.	DDTS_COMPONENT	LOG_SIDSHTECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PROCDNDMNDH_AURE	3-Error	[chars] rc = [dec]	Failed to bind message handle for APSdcommunication.	DDTS_COMPONENT	LOG_SIDSH_TECH_ACTION
PROCDNULLDASRUCRE	3-Error	[chars]	A software error occured and driver is not able to retrieve the data structure mentioned in the message.	asr900-lotr-im	LOG_STD_ACTION
PROIECTION3NULL_PIR	3-Error	[chars]	Failed to initialize.	DDTS_COMPONENT	LOG_SIDSH_TECH_ACTION
PROIECTION3PPG_HWID	3-Error	group[dec] bay[dec] port[dec] prot_type[dec] msg[chars]	ppg hwid	DDTS_COMPONENT	LOG_SIDSH_TECH_ACTION
PROIECTION3RESP_FAIL	3-Error	msg[chars] retval0x[hec]	Failure response from APSd.	DDTS_COMPONENT	LOG_SIDSH_TECH_ACTION
PROIECTION3SEND_FAIL	3-Error	group[node]u type[dec] msg[chars] errcode[dec]	Failed to send message to APSd.	DDTS_COMPONENT	LOG_SIDSH_TECH_ACTION
PROIECTION3SENDAL_SHUT	3-Error	slot[dec] bay[dec] port[dec] vt[dec] sts[dec] type[dec] msg[chars] errcode[dec]	Failed to send shut message to APSd.	DDTS_COMPONENT	LOG_SIDSH_TECH_ACTION
PROIECTION3EUP_IDH_AURE	3-Error	Failed to set the alloc/free handler for APSd [dec] handle	Failed to set the alloc/free handler for APSd communication.	DDTS_COMPONENT	LOG_SIDSH_TECH_ACTION
PROIECTION4SEMAHOG	4-Warning	Process [dec] [chars] hogging [chars]! calling proc [dec] [chars]	-	-	-
HRP_MSG4ERP_VLANIAG	4-Warning	Warning: Please do not configure access mode for PRP interfaces with tagged supervision frames	Supervision frames will be tagged with vlan id after user configured vlan tag and vlan id access mode will cause confliction on traffic	iiot-sw-redundancy	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>PRP_MSG</del> PRP_VLANTAG	4-Warning	Warning: Please do not configure access mode for PRP interfaces with tagged supervision frames	Supervision frames will be tagged with vlan id after user configured vlan tag and vlan id access mode will cause confliction on traffic	petra-prp	-
<del>PRP_OVERSIZE</del> PRP_OVSZLAN	5-Notice	PRP channel [dec] PRP oversize packet warning is set on LAN [chars]	PRP Oversize flag is set.	iiot-sw-redundancy	LOG_SID_NO_ACTION
<del>PRP_WARN_LAN</del> PRP_WARN_LAN	5-Notice	PRP channel [dec] PRP LAN warning is set on LAN [chars]	PRP warning flag is set.	iiot-sw-redundancy	LOG_SID_NO_ACTION
<del>PRP_WRONG_LAN</del> PRP_WRONG_LAN	5-Notice	PRP channel [dec] LAN [chars] is connected to LAN [chars] on its peer	PRP port connected to wrong LAN on its peer.	iiot-sw-redundancy	LOG_SID_NO_ACTION
PRP-4-NOMEM	4-Warning	Not enough memory available for [chars]	The PRP could not obtain the memory it needed.	prp	LOG_SIDSHTTECH_ACTION
PRP-4-NOMEM	4-Warning	Not enough memory available for [chars]	The PRP could not obtain the memory it needed.	prp	LOG_SIDSHTTECH_ACTION
PRST_IFS-3-FILE	3-Error	persistent media IFS file error: [chars]	Persistent media module file system file error	-	LOG_STD_ACTION
PRST_IFS-3-FILEMEM	3-Error	No memory to update [chars]. Please free some space	There is no filesystem memory for the system to write an updated version of the persistent variable file.	-	"Please free space on the filesystem shown in the error message" " as soon as possible. This will involve deleting existing files" " and/or squeezing the filesystem if the filesystem requires it" " bootflash for example may require it."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PRST_IFS-3-GENERAL	3-Error	persistent media IFS general error: [chars]	Persistent media module file system general error	-	LOG_STD_ACTION
PRST_VBL-3-GENERAL	3-Error	Persistent general error: [chars]	Persistent variable general error	-	LOG_STD_ACTION
PRST_VBL-3-GENERAL	3-Error	Persistent general error: [chars]	Persistent variable general error	-	LOG_STD_ACTION
PRST_VBL-3-MEDIA	3-Error	Persistent media error: [chars]	Persistent variable error	-	LOG_STD_ACTION
PRST_VBL-3-MEDIA	3-Error	Persistent media error: [chars]	Persistent variable error	-	LOG_STD_ACTION
<del>PSD/DMI/CR/ERR</del>	3-Error	ddmi-infra	"PSD/DMI: Failed to create directory:[chars] (%s)"	"An error has occurred when attempting to create a directory."	"Log a message"
<del>PSD/DMI/DR/ERR</del>	3-Error	ddmi-infra	"PSD/DMI: Failed to delete directory:[chars] (%s)"	"An error has occurred when attempting to delete a directory."	"Log a message"
<del>PSD/DMI/CR/ERR</del>	3-Error	ddmi-infra	"PSD/DMI: Failed to create file:[chars] (%s)"	"An error has occurred when attempting to create a file."	"Log a message"
<del>PSD/DMI/DR/ERR</del>	3-Error	ddmi-infra	"PSD/DMI: Failed to delete file:[chars] (%s)"	"An error has occurred when attempting to delete a file."	"Log a message"
<del>PSD/SD/ROUT/ERR</del>	3-Error	cntrl-mng-rtg	"PSD/SD-ROUTING: Please configure netconf-yang to activate the sd-routing feature"	"SD-Routing depends upon DMI"	"Not applicable"
<del>PSD/DM/NOF/INFORM</del>	5-Notice	ddmi-infra	"PSD/DMI: netconf-yang server has been notified to start"	"A specific informational message from psd_mod"	"Not applicable"
<del>PSD/DM/NOF/INFORM</del>	5-Notice	ddmi-infra	"PSD/DMI: netconf-yang server has been notified to stop"	"A specific informational message from psd_mod"	"Not applicable"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>PSD/DM/NOF/RS/INF</del>	5-Notice	ddmi-infra	"PSD/DMI: netconf-yang and/or restconf will now be restarted"	-	-
<del>PSD/DM/NOF/RS/INF</del>	5-Notice	ddmi-infra	"PSD/DMI: restconf server has been notified to start"	"A specific informational message from psd_mod"	"Not applicable"
<del>PSD/DM/NOF/RS/INF</del>	5-Notice	ddmi-infra	"PSD/DMI: restconf server has been notified to stop"	"A specific informational message from psd_mod"	"Not applicable"
<del>PSD/DM/NOF/RS/INF</del>	5-Notice	ddmi-infra	"PSD/DMI:[chars]"	"An informational message from psd_mod"	"Not applicable"
<del>PSD/DM/NOF/RS/INF</del>	5-Notice	polaris-infra	"SYSTEM INTEGRITY: pistis daemon has been notified to start"	"A specific informational message from psd_mod"	"Not applicable"
<del>PSD/DM/NOF/RS/INF</del>	5-Notice	polaris-infra	"SYSTEM INTEGRITY: pistis daemon has been notified to stop"	"A specific informational message from psd_mod"	"Not applicable"
<del>PSD/SD/ROUTING/RS/INF</del>	5-Notice	cntrl-mng-rtg	"PSD/SD-ROUTING: SD-Routing server has been notified to start"	"A specific informational message from psd_mod"	"Not applicable"
<del>PSD/SD/ROUTING/RS/INF</del>	5-Notice	cntrl-mng-rtg	"PSD/SD-ROUTING: SD-Routing server has been notified to stop"	"A specific informational message from psd_mod"	"Not applicable"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PSECURE_ISSU-2-GET_BUFFER	2-Critical	Port Security ISSU client failed to get buffer for message. Error: [dec] [chars]	The Port Security ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	PortSecurity	"show logging and show checkpoint client"
PSECURE_ISSU-2-INIT	2-Critical	Port Security ISSU client initialization failed to [chars]. Error: [dec] [chars]	The Port Security ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	PortSecurity	LOG_STD_ACTION
PSECURE_ISSU-2-NEGOTIATE	2-Critical	Port Security ISSU client failed to send negotiation message. Error: [dec] [chars]	The Port Security ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	PortSecurity	"show logging and show checkpoint client"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ISSU_SESSION_NGO</del>	2-Critical	Port Security ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The Port Security ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	PortSecurity	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>ISSU_SESSION_REG</del>	2-Critical	Port Security ISSU client failed to register session information. Error: [dec] [chars]	The Port Security ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	PortSecurity	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>ISSU_INVALID_SESSION</del>	3-Error	Port Security ISSU client does not have a valid registered session.	The Port Security ISSU client does not have a valid registered session.	PortSecurity	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>ISSU_INVALID_MESSAGE</del>	3-Error	Port Security ISSU client Message Type [dec] is not compatible	The Port Security ISSU client received an incompatible message from the peer device. The message cannot be processed.	PortSecurity	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PSURE_ISSU3MSG_SIZE	3-Error	Port Security ISSU client failed to get the MTU for Message Type [dec] . Error: [dec] [chars]	The Port Security ISSU client failed to calculate the MTU for the specified message. The Port Security ISSU client is not able to send the message to the standby device.	PortSecurity	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
PSURE_ISSU3UNREG	3-Error	Port Security ISSU client failed to unregister session information. Error: [dec] [chars]	The Port Security ISSU client failed to unregister session information.	PortSecurity	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
PSURE_ISSU3TRANSFORM	3-Error	Port Security ISSU client [chars] transform failed for Message Type [dec] . Error: [dec] [chars]	The Port Security ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the Port Security state between the active device and the standby device is not identical.	PortSecurity	"show issu session <client_id> and " "show issu negotiated version <session_id>"
PSM3-BADLABELADD	3-Error	Cannot add label - [chars].	Unable to create label due to reason given.	mpls-psm	LOG_STD_ACTION
PSM3-BADLABELADD	3-Error	Cannot add label - [chars].	Unable to create label due to reason given.	mpls-psm	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PSM-3-CHUNK	3-Error	[chars]: [chars] [hec] [hec]	Parameterized Chunk Manager error occurred	mpls-psm	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this "condition has been previously reported and resolved in a "later release. If not gather the output of <CmdBold>show version<NoCmdBold> " "<CmdBold>show running-config<NoCmdBold> and <CmdBold>show process memory<NoCmdBold> " "and contact your Cisco technical support representative."
PSM-3-CHUNK	3-Error	[chars]: [chars] [hec] [hec]	Parameterized Chunk Manager error occurred	mpls-psm	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this "condition has been previously reported and resolved in a "later release. If not gather the output of <CmdBold>show version<NoCmdBold> " "<CmdBold>show running-config<NoCmdBold> and <CmdBold>show process memory<NoCmdBold> " "and contact your Cisco technical support representative."
PSM-3-INVALIDPARAM	3-Error	Invalid parameter - [chars]	Calling function has passed an invalid parameter.	mpls-psm	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PSM-3-INVALIDPARAM	3-Error	Invalid parameter - [chars]	Calling function has passed an invalid parameter.	mpls-psm	LOG_STD_ACTION
PSM-3-ISSU_REG	3-Error	ISSU client [chars] [dec] entity [dec] failed ISSU registration: [chars]	ISSU negotiation failed for this XDR client.	mpls-psm	"This error indicates a coding problem. It is an error that will occur" "every time this image is run and requires a code change to fix it."
PSM-3-ISSU_REG	3-Error	ISSU client [chars] [dec] entity [dec] failed ISSU registration: [chars]	ISSU negotiation failed for this XDR client.	mpls-psm	"This error indicates a coding problem. It is an error that will occur" "every time this image is run and requires a code change to fix it."
PSM-3-L2_PATH	3-Error	[chars] - path set 0x[hec][node]path [chars]	Internal error while processing layer 2 path.	mpls-psm	LOG_STD_ACTION
PSM-3-L2_PATH	3-Error	[chars] - path set 0x[hec][node]path [chars]	Internal error while processing layer 2 path.	mpls-psm	LOG_STD_ACTION
PSM-3-NONIPINFO	3-Error	Non-ip info: [chars]	An internal software error occurred.	mpls-psm	LOG_STD_ACTION
PSM-3-NONIPINFO	3-Error	Non-ip info: [chars]	An internal software error occurred.	mpls-psm	LOG_STD_ACTION
PSM-3-NOOCE	3-Error	Attempt to get labels from OCE failed - [chars].	Calling function has provided insufficient information to get labels.	mpls-psm	LOG_STD_ACTION
PSM-3-NOOCE	3-Error	Attempt to get labels from OCE failed - [chars].	Calling function has provided insufficient information to get labels.	mpls-psm	LOG_STD_ACTION
PSM-3-NORESOURCE	3-Error	[chars] [dec]	Resource Failure: [chars] [dec]	mpls-psm	LOG_STD_ACTION
PSM-3-NORESOURCE	3-Error	[chars] [dec]	Resource Failure: [chars] [dec]	mpls-psm	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
PT-3-BADRULEDELETE	3-Error	Error deleting ruleset [chars] [chars].	An internal software error occurred.	-	"If any of these messages recur call your technical support\n\n representative for assistance."
PT-3-BADRULEUNLOCK	3-Error	Invalid unlock on ruleset [chars] [chars].	An internal software error occurred.	-	"If any of these messages recur call your technical support\n\n representative for assistance."
PT-3-BADSCOOPERATION	3-Error	Invalid [chars] of subcommand [dec] on ruleset [chars].	An internal software error occurred.	-	"If any of these messages recur call your technical support\n\n representative for assistance."
PT-3-NOOPERATION	3-Error	No [chars] operation defined for [chars] parameter [chars].	An internal data consistency error has been detected.	-	"Call your technical support representative for assistance."
PT-3-PARAMRESULIERR	3-Error	PT ruleset [chars] protocol [chars] parameter [chars] parse error: [chars].	The final value of a ruleset's protocol/parameter string could not\n\n be decoded.	-	"Review the ruleset elements that set the parameter value to determine\n\n if they need to be modified to generate a valid result."
PT-3-PARAMRESULINVALD	3-Error	PT ruleset [chars] protocol [chars] parameter [chars] invalid: [chars].	A protocol parameter value generated by a ruleset was modified\n\n to be valid for protocol translation operation.	-	"Review the ruleset processing for the identified parameter to\n\n determine if it needs to be modified to generate a value that\n\n is for example within the range of values supported for PT."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PT-3-PT_HW_UNAVAIL	3-Error	Protocol Tunneling hardware resource not available. [chars]	Protocol tunneling could not be enabled because no redirect registers are available. Protocol Tunneling requires redirect registers	cat6000-12	"Disable any applications that uses redirect registers and try" "configuring the Protocol Tunneling again"
PT-3-PT_NO_SWSB	3-Error	Protocol Tunneling software subblock not found. [chars]	The software subblock that is used for protocol tunnelling could not be found for the port specified in the message text. Protocol tunnelling has been disabled on this port.	cat6000-12	LOG_STD_ACTION
PT-6-INVOPERATION	6-Information	An invalid [chars] operation defined for [chars] parameter [chars].	A parameter evaluation error was detected for the specified ruleset\n operation and line.	-	"Call your technical support representative for assistance."
PT-6-RULESETACCESS	6-Information	Ruleset [chars] refused an incoming connection due to the access-class.	An incoming connection attempt that was matched by a\n Protocol Translation ruleset has been refused because the source\n address failed the ruleset's configured access-class test.	-	"The network administrator may need to verify that the ruleset\n access-class configuration is appropriate."
PT-6-RULESETLIMIT	6-Information	Ruleset [chars] refused an incoming connection due to the max-user limit.	An incoming connection attempt that would normally be processed\n by a Protocol Translation ruleset has been refused because of the\n ruleset's configured max-user limit.	-	"The network administrator may need to verify that the ruleset\n max-user limit is appropriate."
PTCL-4-LDP	4-Warning	ERRMSG_NOFLAGS	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PTCL-4-LDP	4-Warning	ERRMSG_NOFLAGS	-	-	-
PTCLREAD-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
PTCLREAD-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
PTHREAD_CREATE32MN	3-Error	ERRMSG_NOFLAGS	-	-	-
PTHREAD_CREATE32MN	3-Error	ERRMSG_NOFLAGS	-	-	-
PTHREAD_EVENT_HANDLER	3-Error	iosxe-binos-utils	"Task[chars] has no[chars] event handler"	"The task specified has failed to install a handler for the specified event. This implies that the event has been dropped."	LOG_STD_ACTION
PTHREAD_SCHED_EMPTY	3-Error	iosxe-binos-utils	"Scheduler has no tasks available"	"The Pth scheduler has detected that there is no task available to run. This is an error condition for the process itself is a task."	LOG_STD_ACTION
PTHREAD_SCHED_OVERFLOW	3-Error	iosxe-binos-utils	"Scheduler has more than %d FDs"	"There are too many FDs for the Pth scheduler. This is an error condition for the process itself."	LOG_STD_ACTION
PTHREAD_STACK_OVERFLOW	3-Error	iosxe-binos-utils	"Task[chars] stack overflow"	"A Pth task has overflowed its stack. This has been detected by the Pth scheduler and reported."	LOG_STD_ACTION
PTHREAD_TIMER_THRASHING	3-Error	iosxe-binos-utils	"Timer[chars] is thrashing on[chars]"	"The Pth scheduler has detected that an event has remained on the ready queue after being notified of requiring processing."	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PIPUTIL_3TIMER_UPDATE	3-Error	iosxe-binos-utils	"Timer[chars] update of[chars] not updated %d"	"The attempt to update a watched timer has failed due to either the timer not existing or the inability to move the timer to its new position post update."	LOG_STD_ACTION
PIPPTP_CLOCK_SYNC_FAIL	3-Error	PTP Time Property Clock Synchronization Failure	PTP time property clock syntonization is FALSE	ptp	LOG_STD_ACTION
<del>PIPKN_MASTER_SELECTED</del>	4-Warning	slave clock port [chars] invalid master address [chars] is selected. Action is ignored because of the invalid master clock source.	A master source address is selected which is either invalid or non-existent in the current list of master source addresses.	ptp	LOG_STD_ACTION
<del>PIPKN_MASTER_SELECTED</del>	4-Warning	slave clock port [chars] invalid master address [chars] is selected. Action is ignored because of the invalid master clock source.	A master source address is selected which is either invalid or non-existent in the current list of master source addresses.	ptp	LOG_STD_ACTION
PIPPTP_CLOCK_CONFIG_CHG	4-Warning	PTP Clock configuration on domain:[dec] changed for profile [chars]. WARNING: Do a 'write memory' to retain them	Incoming PTP management message has updated the Precision Timing Protocol configurations Remember to do a write mem	iiot_rtr_timing	LOG_STD_ACTION
PIPPTP_CLOCK_MASTER_DETECT	4-Warning	Rogue master packets received on [chars]	Rogue PTP master detected	ptp	LOG_SID_NO_ACTION
PIPPTP_CLOCK_PARENT_CHANGE	5-Notice	[chars] [chars] [chars] [chars]	change in the ptp clock parent	ptp	LOG_STD_ACTION
PIPPTP_CLOCK_SYNC_FAILURE	5-Notice	[chars] [chars] [chars] [chars]	PTP clock sync failed	ptp	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PIPPIP_CLOCK_SYNC_CK	5-Notice	PTP Time Property Clock Synchronization Success	PTP time property clock syntonization is TRUE	ptp	LOG_SID_NO_ACTION
<del>PIPPRPSAENCSAE</del>	5-Notice	[chars] [chars] [chars] [chars]	ptp port state changed from passive slave to some other state	-	-
<del>PIPPRPSAENCSAE</del>	5-Notice	[chars] [chars] [chars] [chars]	ptp port state changed from slave to some other state	-	-
<del>PIPPRPSAENCSAE</del>	5-Notice	ptp port[chars] state changed from passive slave to some other state	ptp port state changed from slave to some other state	ptp	LOG_STD_ACTION
<del>PIPPRPSAENCSAE</del>	5-Notice	ptp port[chars] state changed from passive slave to slave	ptp port state changed from passive slave to slave	ptp	LOG_STD_ACTION
PIPPIP_CR_SIAESLAE	5-Notice	ptp port moved to slave state	ptp port state changed to slave	ptp	LOG_SID_NO_ACTION
<del>PIPPRPSAENCSAE</del>	5-Notice	ptp port[chars] state changed from slave to some other state	ptp port state changed from slave to some other state	ptp	LOG_STD_ACTION
<del>PIPPRPSAENCSAE</del>	5-Notice	ptp port[chars] state changed from slave to passive slave	ptp port state changed from slave to passive slave state	ptp	LOG_STD_ACTION
PIPKM_SIRPUSLIED	6-Information	slave clock port [chars] master address new:[chars] old:[chars]	A slave port may associate with multiple master port addresses. This message describes the address of the selected master port.	-	LOG_SID_NO_ACTION
PIPKM_SIRPUSLIED	6-Information	slave clock port [chars] master address new:[chars] old:[chars]	A slave port may associate with multiple master port addresses. This message describes the address of the selected master port.	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PTP</del> CLK_STATUS_UPDATE	6-Information	Slave clock status changed to [chars] : [chars].	Clock status update for the Precision Timing Protocol	ptp	LOG_SID_NO_ACTION
<del>PTP</del> CLK_STATUS_UPDATE	6-Information	Slave clock status changed to [chars] : [chars].	Clock status update for the Precision Timing Protocol	ptp	LOG_SID_NO_ACTION
<del>PTP</del> GRANDMASTER_CLOCK_CHANGE	6-Information	Old grandmaster clock identity: [chars] New grandmaster clock identity: [chars]	PTP grandmaster clock changed	ptp	LOG_SID_NO_ACTION
<del>PTP</del> GRANDMASTER_CLOCK_CHANGE_LOCAL	6-Information	Old grandmaster clock identity: [chars] New grandmaster clock identity: [chars] local system	PTP grandmaster clock changed	ptp	LOG_SID_NO_ACTION
<del>PTP</del> OT_CLK_STATUS_UPDATE	6-Information	[domain:[dec]] Clock status changed to [chars] : [chars].	Clock status update for the Precision Timing Protocol	iiot_rtr_timing	LOG_SID_NO_ACTION
<del>PTP</del> PARENT_CLOCK_CHANGE	6-Information	Old parent clock identity: [chars] port number: [dec] New parent clock identity: [chars] port number: [dec]	PTP parent clock changed	ptp	LOG_SID_NO_ACTION
<del>PTP</del> ROGUE_MASTER_CLEAR	6-Information	Stopped receiving rogue master packets on [chars]	No rogue PTP master detected	ptp	LOG_SID_NO_ACTION
<del>PTP</del> SYNCHRONIZATION_FAULT_EVENT	6-Information	PTP synchronization fault event on port [chars]	PTP servo detected an offset from master that is greater than the configured sync limit. PTP is attempting to resynchronize.	ptp	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>RUNINCEPUNCOMA</del>	3-Error	Version of local Ptransform \nclient [chars] is incompatible with remote version [chars].	The protocol versions of the local and remote clients are\n incompatible. These clients can not communicate with each\n other.	-	"Use 'show version' and 'show ptransform clients' to help\n verify that the software images are incompatible. Upgrade\n the software images on each unit to versions that are \n compatible. " LOG_SID_RECUR_ACTION
RUNINCEPUNCAEGERR	2-Critical	[chars] [chars] initialization failed	Initialization of Punt/Inject cause failed due to invalid configuration parameters	cpp-ucode	LOG_STD_ACTION
<del>RUNINCEPUNPOLYSKIPD</del>	3-Error	[chars] cause=[dec] output drop policy skipped	Output drop policy unexpected skipped on punt packet	cpp-ucode	LOG_STD_ACTION
RUNINCEPUNTABAE	4-Warning	Punted packets from the dataplane to the control-plane of type [chars] cause# [dec] [chars] - are no longer being dropped	-	-	-
RUNINCEPUNALBT	4-Warning	Punted packets from the dataplane to the control-plane of type [chars] cause# [dec] [chars] - are being dropped	-	-	-
<del>RUNINCEPUNPOLICER</del>	5-Notice	global punt policer drops packet from [chars]	drop punt packet by global punt policer	cpp-ucode	LOG_STD_ACTION
<del>RUNINCEPUNPOLICER</del>	5-Notice	punt policer drops packets cause: [chars] 0x[hec] from [chars] [chars]	-	-	-
<del>RUNINCEPUNPOLICER</del>	5-Notice	punt interface policer drop packet from [chars] cause [chars] 0x[hec]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>PW_STATUS5XCONNECT</del>	5-Notice	ERRMSG_NOFLAGS	-	-	-
<del>PW_STATUS5XCONNECT</del>	5-Notice	ERRMSG_NOFLAGS	-	-	-
<del>PW_STATUS5XCONNECT</del>	5-Notice	ERRMSG_NOFLAGS	-	-	-
<del>PW_STATUS5XCONNECT</del>	5-Notice	ERRMSG_NOFLAGS	-	-	-
<del>PW_WATCHER_SLOT_STARTUP</del>	3-Error	Portware Watcher detected a missing modem board startup message for slot [dec]. Resetting the slot	The slot did not send a startup msg after a given amount of retries\n\n requesting it. This can happen if after a router shelf reload the\n\n feature was not redownloaded with a new image and the NIP_MODEM_MNGR\n\n client's port was not reinitialised correctly and stayed closed. This\n\n should not be considered a critical problem by the customer as\n\n it should not affect the operation of the router.	-	"Copy the output of the message as well as a description of events\n\n leading up to the message and open a DDTS."
<del>PW_WATCHER_SLOT_DOWNLOAD</del>	6-Information	Portware Watcher detected an unregistered module download in slot [dec] module [dec].	This is an informational message indicating that the portware watcher\n\n process had not been initialised with the slot and module information\n\n to monitor the download. This in no way affects the operation of the\n\n module or the system in general and should not be considered a \n\n serious problem.	-	"Copy the output of the message as well as a description of events\n\n leading up to the message and open a DDTS."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PW3IPC_ALLOC_FAILED	3-Error	[chars]	Allocation of an IPC packet buffer by the pseudo wired feature failed.	cpp-ucode	LOG_STD_ACTION
PW3IPC_SEND_FAILED	3-Error	[chars]	Transmission of an IPC message by the pseudo wire feature failed.	cpp-ucode	LOG_STD_ACTION
PWD_SYNC2INITSYS	2-Critical	[chars]	A software error occurred during initialization of the Password Sync RF subsystem	-	"Check for sufficient processor memory." LOG_STD_ACTION
PWD_SYNC3INVALIDMSG	3-Error	Incorrectly formatted message 0x[hec] 0x[hec] received by [chars]	Inconsistent message data was received from the peer CPU possibly due to an incompatible image version.	-	LOG_STD_ACTION
PWD_SYNC3NO_BUFFER	3-Error	Unable to transmit message type [dec] from [chars]	A transmit error occurred while sending msg to other CPU due to non-availability of buffer	-	LOG_STD_ACTION
PWD_SYNC3SUBSYS_COMPAT	3-Error	Standby is missing the Password Sync subsystem hence Standby will not have password protection for the privileged mode.	Standby CPU software subsystem is older or missing. See message text for software subsystem type. May result in feature losses in the event of a switchover.	-	"May require a software upgrade on the Standby CPU. " LOG_STD_ACTION
PWD_SYNC3TRANSMIT_ERROR	3-Error	Unable to transmit message type [dec] from [chars]	A transmit error occurred while sending msg to other CPU due to msg translation	-	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
PWD_SYNC3UNKNOWN_MSG	3-Error	Unknown message type 0x[hec] received by [chars]	An unknown message type was received from the peer CPU possibly due to an incompatible image version.	-	LOG_STD_ACTION
PWD_SYNC5UNSUPP_MSG	5-Notice	Msgtype [chars] sent by [chars] unsupported by peer.	Peer responded that it didn't recognize a message sent by this CPU possibly due to a different image version.	-	"May require a software upgrade on the Standby CPU. " LOG_STD_ACTION
PWD_SYNC6SEMD_SYNC	6-Information	Console EXEC Timeout successfully synced to Standby	Active CPU successfully synced console exec timeout to Standby CPU	-	LOG_SID_NO_ACTION
PWD_SYNC6SYNC_MSG	6-Information	Successfully Synced [chars] Password.	Active CPU successfully synced the password to Standby CPU	-	LOG_SID_NO_ACTION
PWD-4-LDP	4-Warning	ERRMSG_NOFLAGS	-	-	-
PWD-4-LDP	4-Warning	ERRMSG_NOFLAGS	-	-	-
PWDCFG-5-LDP	5-Notice	ERRMSG_NOFLAGS	-	-	-
PWDCFG-5-LDP	5-Notice	ERRMSG_NOFLAGS	-	-	-
PWDKEYIRUNC5LDP	5-Notice	ERRMSG_NOFLAGS	-	-	-
PWDKEYIRUNC5LDP	5-Notice	ERRMSG_NOFLAGS	-	-	-
PWDRO-5-LDP	5-Notice	ERRMSG_NOFLAGS	-	-	-
PWDRO-5-LDP	5-Notice	ERRMSG_NOFLAGS	-	-	-
QA-3-ALLOC	3-Error	[chars]	This is a software error.	-	"Copy the error message exactly as it appears. Also copy the output of show version and show cont cbus. Contact your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
QA-3-DIAG	3-Error	NULL	This is a diagnostic message.	-	"This message appears after a QA error and contains diagnostic information regarding that error. Copy the original QA error message and all the following QA diagnostic error messages exactly as they appear. Also copy the output of show version and show cont cbus. Contact your technical support representative."
QAIM2ASDATA_READ	2-Critical	Cannot read TCAM associated data	Possibly bad hardware	hardware	LOG_STD_ACTION
QAIM2ASDATA_WRITE	2-Critical	Cannot write TCAM associated data	Possibly bad hardware	hardware	LOG_STD_ACTION
QAIM2-TCAM_READ	2-Critical	Cannot read TCAM	Possibly bad hardware	hardware	LOG_STD_ACTION
QAIM2-TCAM_WRITE	2-Critical	Cannot write the TCAM	Possibly bad hardware	hardware	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QBM_QBM_CONSISY	3-Error	QBM internal error: [chars]	An action attempted by the QoS Bandwidth Manager implementation encountered an unexpected software condition	qbm	"Search the Bug Toolkit " BUG_TOOLKIT " for existing bugs and " "upgrade the software if necessary. If there is still a " "problem copy the error message exactly as it appears on the " "console or in the system log. Issue the <CmdBold>show qbm " "client<NoCmdBold> <CmdBold>show qbm pool<NoCmdBold> " "<CmdBold>show running<NoCmdBold> and <CmdBold>show version" "<NoCmdBold> commands to gather data which may help identify " "the nature of the error. Then open a case with the Technical " "Assistance Center via the Internet " TAC_CASE_OPEN " or " "contact your Cisco technical support representative and " "provide the representative with the gathered information."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
QEM-3-DISCOVER	3-Error	Found [chars] switch processors	The QEM driver found either no switch processors or more than one. Exactly one is the only supported configuration.	-	"Make sure there is only one switch processor."
<del>QEM-3-OSD-REPAIR</del>	3-Error	Cannot create member-link. Aggregate QoS configuraton entry already exists. This can happen if we directly modify channel-group number of a member-link. Remove the old channel-group re-apply the new one is required.	Member-link creation will fail because we don't support aggregate QoS config re-use.	-	LOG_SID_NO_ACTION
<del>QEM-3-CONCER</del>	3-Error	Cannot apply VLAN encap configuration if main interface is configured for xconnect port-forwarding. Check configuration of [chars] remove any xconnect port-forwarding configuration and reapply VLAN encap configuration.	A main interface set in xconnect port-forwarding mode will reject VLAN encap configurations.	-	LOG_SID_NO_ACTION
<del>QEM-4-MEM-CER</del>	4-Warning	Netflow and Flexible Netflow configuration is using [node]Iu64 bytes	Configured Netflow and Flexible Netflow records are now using less than the recomended maximum of total DRAM.	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QFNFMU64MWRN	4-Warning	Netflow and Flexible Netflow configuration is using [node]Ju64 bytes	Configured Netflow and Flexible Netflow records are using more than the recommended maximum of total DRAM.	-	LOG_STD_NO_ACTION
QFMBQSSCRATCHOVAL	2-Critical	QFP BQS Scratch area too small for MLP feature usage size: [dec] need: [dec].	Cisco internal software error. QFP MLP initialization detected that the BQS scratch memory area is insufficient for MLP usage. The MLP Bundle interfaces will not be functional while this condition exists.	qfp-mlpppkeyword:none	LOG_STD_ACTION
QFMPROXYICNIFAILD	2-Critical	QFP MLP Proxy IPC interface initialization failure result: [dec].	Cisco internal software error. QFP MLP initialization detected that the Proxy IPC interface initialization failed. The MLP Bundle interfaces will not be functional while this condition exists.	qfp-mlpppkeyword:none	LOG_STD_ACTION
QFMEARLYRXCLEANUP	3-Error	QFP MLP Early Receive cleanup error [chars]	Cisco internal software error. Multilink Early Receive cleanup could not be performed due to indicated error. This could cause possible QFP memory leak.	qfp-mlpppkeyword:none	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QFPMLP3EARLY_RX_INT	3-Error	QFP MLP Early Receive initialization error [chars]	Cisco internal software error. Multilink Early Receive initialization could not be performed due to indicated error. This could cause possible lost MLP encapsulated packets during member link/bundle bringup and possibly cause the failure to complete member link/bundle initialization.	qfp-mlpppkeyword:none	LOG_STD_ACTION
QFPMLP3IN_PROXY_MSG	3-Error	QFP MLP Proxy received invalid Message ID [dec]	Cisco internal software error. QFP MLP Proxy received an invalid Message ID. This message will be ignored.	qfp-mlpppkeyword:none	LOG_STD_ACTION
QFPMLP3MCMP_NAD_RX_CLASS	3-Error	MLP MCMP suspension class ID [dec] received from the peer	Possible error on the peer device with PPP Multilink Multiclass MCMP. Received MLP packet contained a MCMP suspension class ID	qfp-mlpppkeyword:none	LOG_STD_ACTION
QFPMLP3QOS_ENC_CAP_SEQ_ERR	3-Error	MLP QoS encap-sequence [dec] must be less than the number	User software configuration mismatch with PPP Multilink Multiclass MCMP. User needs to either reduce the highest encap-sequence in	qfp-mlpppkeyword:none	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>QPMMLINKBUNDLE</del>	3-Error	MLP Link Add/Update received with invalid EVSI indication for Member Link: [chars] Bundle: [chars]	Either the user attempted to mix broadband and non-broadband member links on the same bundle or an internal error has occurred processing a configuration update.	qfp-mlpppkeyword:none	LOG_STD_ACTION
<del>QPMMLINKBUNDLE</del>	3-Error	QFP MLP Proxy [chars] [chars] invalid Bundle state [chars] [dec] for	Cisco internal software error. Multilink Idle-Link transition could not be made due invalid Bundle state at the time of the request. The associated MLP Bundle interface may not be fully functional as a result of this condition.	qfp-mlpppkeyword:none	LOG_STD_ACTION
<del>QPMMLINKBUNDLE</del>	3-Error	QFP MLP Proxy [chars] [chars] duplicate Link ID [dec] for interface [chars]	Cisco internal software error. QFP MLP Proxy message Link Add could not be processed for the indicated interface due use of a given Link ID on multiple member links within the same MLP Bundle. The associated MLP Bundle interface may not be fully functional as a result of this condition.	qfp-mlpppkeyword:none	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QFP_MLP_PROXY_INVALID_RX_BUFFER_LIMIT	3-Error	QFP MLP Proxy [chars] [chars] indicated an invalid Rx buffer limit	Cisco internal software error. QFP MLP was provided a invalid Rx buffer limit value. The associated MLP Bundle interface may not be fully functional as a result of this condition.	qfp-mlpppkeyword:none	LOG_STD_ACTION
QFP_MLP_PROXY_INVALID_BUNDLE_STATE	3-Error	QFP MLP Proxy [chars] [chars] invalid Bundle state [chars] [dec] for	Cisco internal software error. QFP MLP Proxy message could not be processed due to the MLP Bundle being in an incorrect state to accept the message. The associated MLP Bundle interface may not be fully functional as a result of this condition.	qfp-mlpppkeyword:none	LOG_STD_ACTION
QFP_MLP_PROXY_INVALID_CLASS_INFO	3-Error	QFP MLP Proxy [chars] [chars] invalid Class Info Base: 0x[node]x Num: [dec]	Cisco internal software error. QFP MLP Proxy message contained invalid MLP Class information. The associated MLP Bundle interface may not be fully functional as a result of this condition.	qfp-mlpppkeyword:none	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QFPMLP_PROXY_INVALID_LINK_ID	3-Error	QFP MLP Proxy [chars] [chars] invalid Link ID [dec] for interface [chars]	Cisco internal software error. QFP MLP Proxy message Link Add could not be processed for the indicated interface due to an invalid Link ID. The associated MLP Bundle interface may not be fully functional as a result of this condition.	qfp-mlpppkeyword:none	LOG_STD_ACTION
QFPMLP_PROXY_INVALID_LINK_STATE	3-Error	QFP MLP Proxy [chars] [chars] invalid Link state [chars] [dec] for	Cisco internal software error. QFP MLP Proxy message could not be processed due to the MLP Link being in an incorrect state to accept the message. The associated MLP Bundle interface may not be fully functional as a result of this condition.	qfp-mlpppkeyword:none	LOG_STD_ACTION
QFPMLP_PROXY_INVALID_FRAGMENT	3-Error	QFP MLP Proxy [chars] [chars] indicated an invalid lost fragment	Cisco internal software error. QFP MLP was provided a invalid lost fragment timeout value. The associated MLP Bundle interface may not be fully functional as a result of this condition.	qfp-mlpppkeyword:none	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QFPMLP_PROXY_MRRU	3-Error	QFP MLP Proxy [chars] [chars] invalid MRRU [dec] for interface [chars]	Cisco internal software error. QFP MLP Proxy message contained an invalid MLP Bundle MRRU. The associated MLP Bundle interface may not be fully functional as a result of this condition. Possible workaround is to reduce the interface mtu on the Multilink bundle interface on both ends of the connection to 9216 or less and then shut/no shut the Multilink bundle interface to force renegotiation of the MLP MRRU.	qfp-mlppkeyword:none	LOG_STD_ACTION
QFPMLP_PROXY_INVALID	3-Error	QFP MLP Proxy [chars] [chars] invalid Rx/Tx interface value [dec] for	Cisco internal software error. QFP MLP Proxy was unable to complete the requested MLP Bundle state change or configuration update due to an invalid interface Rx/Tx designation in the proxy request. The associated MLP Bundle interface may not be fully functional as a result of this condition.	qfp-mlppkeyword:none	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>QFMPROXYNSUBVID</del>	3-Error	QFP MLP Proxy [chars] [chars] invalid Sub-Device ID [dec] for interface [chars]	Cisco internal software error. QFP MLP Proxy message Bundle Add could not be processed for the indicated interface due to an invalid Sub-Device ID. The associated MLP Bundle interface may not be fully functional as a result of this condition.	qfp-mlpppkeyword:none	LOG_STD_ACTION
<del>QFMPROXYLINKRCE</del>	3-Error	QFP MLP Proxy [chars] [chars] indicated an invalid Tx Link optimal	Cisco internal software error. QFP MLP Proxy message contained invalid Tx Link optimal fragment size information. The associated MLP Member Link and/or Bundle interface may not be fully functional as a result of this condition.	qfp-mlpppkeyword:none	LOG_STD_ACTION
<del>QFMPROXYLINKWGT</del>	3-Error	QFP MLP Proxy [chars] [chars] indicated an invalid Tx Link weight	Cisco internal software error. QFP MLP Proxy message contained invalid Tx Link weight information. The associated MLP Member Link and/or Bundle interface may not be fully functional as a result of this condition.	qfp-mlpppkeyword:none	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QFP_MLP_PROXY_ALLOC_FAIL	3-Error	QFP MLP Proxy [chars] response lost due to buffer allocation	Cisco internal software error. QFP MLP Proxy message processing detected a IPC buffer allocation failure during response processing. The associated MLP interface may not be fully functional as a result of this condition.	qfp-mlpppkeyword:none	LOG_STD_ACTION
QFP_MLP_MULTILINK_TRANSITION	3-Error	QFP MLP Proxy [chars] [chars] invalid Link state [chars] [dec] for	Cisco internal software error. Multilink Idle-Link transition could not be made due invalid Link state at the time of the request to convert the link to an Idle-Link. The associated MLP Bundle interface may not be fully functional as a result of this condition.	qfp-mlpppkeyword:none	LOG_STD_ACTION
QFP_MLP_MULTILINK_TRANSITION	3-Error	QFP MLP Proxy [chars] [chars] invalid Link state [chars] [dec] for	Cisco internal software error. Multilink Idle-Link transition could not be made due invalid Link state at the time of the request to convert the Idle-Link to an active link. The associated MLP Bundle interface may not be fully functional as a result of this condition.	qfp-mlpppkeyword:none	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>QFPM</del> PROXYNULLBNDE	3-Error	QFP MLP Proxy [chars] [chars] NULL Bundle sub-block for interface [dec]	Cisco internal software error. QFP MLP Proxy was unable to complete the requested MLP Bundle state change or configuration update due to an invalid or uninitialized Bundle sub-block. The associated MLP Bundle interface may not be fully functional as a result of this condition.	qfp-mlpppkeyword:none	LOG_STD_ACTION
<del>QFPM</del> PROXYNULLINK	3-Error	QFP MLP Proxy [chars] [chars] NULL Member Link sub-block for	Cisco internal software error. QFP MLP Proxy was unable to complete the requested MLP Member Link state change or configuration update due to an invalid or uninitialized Member Link sub-block. The associated MLP Member Link interface may not be fully functional as a result of this condition.	qfp-mlpppkeyword:none	LOG_STD_ACTION
<del>QFPM</del> PROXYNULLERR	3-Error	QFP MLP Proxy [chars] SID Update Complete w/o Preceding Lock	Cisco internal software error. QFP MLP Proxy message processing detected a Bundle Schedule SID update sequence error. One or more interface schedules could have been affected.	qfp-mlpppkeyword:none	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QFP_MLP4PROXY_UPDATE_LOCKS	3-Error	QFP MLP Proxy [chars] Multiple SID Update Locks to same interface	Cisco internal software error. QFP MLP Proxy message processing detected a Bundle Schedule SID update sequence error. One or more interface schedules could have been affected.	qfp-mlppkeyword:none	LOG_STD_ACTION
QFP_MLP4PROXY_IPC_ALLOC_FAIL	4-Warning	QFP MLP Proxy [chars] response lost due to buffer allocation	Cisco internal software error. QFP MLP Proxy message processing detected a IPC buffer allocation failure during proxy response processing. The associated MLP functionality may not be fully functional as a result of this condition.	qfp-mlppkeyword:none	LOG_STD_ACTION
QFP_MLP4PROXY_SYNC	4-Warning	QFP MLP Proxy [chars] [chars] Bundle/Link sync issue with interface [chars]	Cisco internal software error. QFP MLP Proxy message processing detected a Bundle-Link state synchronization abnormality. This condition should be cosmetic. Full context of the message will aid in problem isolation.	qfp-mlppkeyword:none	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>QPM4XBNDEHOWEDOF</del>	4-Warning	QFP MLP Tx Bundle [chars] flowed OFF for an abnormal duration due to one or more congested member links Ticks: [dec]	Possible Cisco internal software or hardware error. QFP MLP Tx processing detected that a MLP Bundle interface was flowed off for an extended period of time due to a congested member link queue. The associated MLP Bundle interface may not be fully functional as a result of this condition.	qfp-mlpppkeyword:none	LOG_STD_ACTION
<del>QPM4XBNDEHOWEDON</del>	4-Warning	QFP MLP Tx Bundle [chars] flowed ON after being flowed OFF for an abnormal duration Ticks: [dec]	Possible Cisco internal software or hardware error. QFP MLP Tx processing detected that a MLP Bundle interface was flowed off for an extended period of time due to a congested member link queue. The associated MLP Bundle interface may not be fully functional as a result of this condition.	qfp-mlpppkeyword:none	LOG_STD_ACTION
<del>QPM4XBNDEILOOP</del>	4-Warning	QFP detected re-entry into MLP Tx Bundle [chars].	-	-	-
<del>QPB4ACMIFUNAD</del>	3-Error	Throughput setting [chars]/[chars] [node]Iu64 is invalid	The throughput property is invalid. The forwarding engine cannot operate without a valid throughput.	qfp-driver	LOGSIDDISACTDEALS

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<u>QFP</u> <u>AB</u> <u>AF</u> <u>COM</u> <u>IF</u> <u>FN</u> <u>AD</u>	3-Error	Throughput setting [chars]/[chars] [node]Iu64 is invalid	The throughput property is invalid. The forwarding engine cannot operate without a valid throughput.	qfp-driver	LOG_SIDDIS_TACDEALS
<u>QFP</u> <u>AB</u> <u>AF</u> <u>COM</u> <u>IF</u> <u>FN</u> <u>AD</u>	3-Error	Throughput setting [chars]/[chars] [node]Iu64 is invalid	The throughput property is invalid. The forwarding engine cannot operate without a valid throughput.	qfp-driver	LOG_SIDDIS_TACDEALS
<u>QFP</u> <u>AB</u> <u>AF</u> <u>COM</u> <u>IF</u> <u>MSG</u>	3-Error	Throughput setting [chars]/[chars] is missing	The throughput property is missing. The forwarding engine cannot operate without a valid throughput.	qfp-driver	LOG_SIDDIS_TACDEALS
<u>QFP</u> <u>AB</u> <u>AF</u> <u>COM</u> <u>IF</u> <u>MSG</u>	3-Error	Throughput setting [chars]/[chars] is missing	The throughput property is missing. The forwarding engine cannot operate without a valid throughput.	qfp-driver	LOG_SIDDIS_TACDEALS
<u>QFP</u> <u>AB</u> <u>AF</u> <u>COM</u> <u>IF</u> <u>MSG</u>	3-Error	Throughput setting [chars]/[chars] is missing	The throughput property is missing. The forwarding engine cannot operate without a valid throughput.	qfp-driver	LOG_SIDDIS_TACDEALS
<u>QFP</u> <u>UN</u> <u>MODE</u> <u>CONF</u> <u>ERR</u>	3-Error	Detected unsupported tunnel mode [chars] configuration.	An unsupported tunnel mode has been configured.	-	LOG_SID_NO_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QPCONFIGCONFERR	3-Error	Cannot configure xconnect port-forwarding on [chars] if there are subinterfaces present with VLAN encaps. Remove all subinterface configurations before configuring xconnect port-forwarding.	A main interface cannot be configured for xconnect port-forwarding if subinterfaces with VLAN encaps are present.	-	LOG_SID_NO_ACTION
QFPOOR3-CRITICAL	2-Critical	QFP [dec] [chars] at [dec] percent exceeds critical level [dec]	A QFP resource has dropped below a critical level.	-	LOG_SID_NO_ACTION
QFPOOR-4-LOWRSRC	4-Warning	QFP [dec] [chars] resource low - [dec] depleted	A QFP resource has dropped below a critical level.	-	LOG_SID_NO_ACTION
QFPOOR3-WARNING	4-Warning	QFP [dec] [chars] at [dec] percent exceeds warning level [dec]	A QFP resource has dropped below a critical level.	-	LOG_SID_NO_ACTION
QFPOOR-4-EXMEM_USR	4-Warning	EXMEM_USER: [chars] Allocations: [node]Bytes-Alloc: [node]Bytes-Total: %u	TOP QFP Exmem user when resource has dropped below a critical level.	-	LOG_SID_NO_ACTION
QFPOOR-5-RSRC	5-Notice	QFP [dec] [chars] resource recovered - [dec] depleted	A QFP resource has recovered from the critical level.	-	LOG_SID_NO_ACTION
QFPOOR5-RSRC_PERCENT	5-Notice	QFP [dec] [chars] resource recovered - [dec] percent depleted	A QFP resource has recovered from the critical level.	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QFP[chars] UNEXP_CHPREV	4-Warning	QFP[node][node]chip [chars] reported unexpected revision 0x[node] using [node][node]instead	The named chip making up part of the QFP engine reported an unexpected chip revision. The system continued running assuming a default revision.	qfp-driver	"Monitor the QFP forwarding engine for stability and performance issues." "If you notice anything unusual copy the error message " "exactly as it appears on the console or in the system log. " "Research and attempt to resolve the error using the Output " "Interpreter " OUTPUT_INTERPRETER ". Also perform a search of the Bug " "Toolkit " "BUG_TOOLKIT ". If you still require assistance open a case with" " the Technical Assistance Center via the Internet " "TAC_CASE_OPEN " or " "contact your Cisco technical support representative and provide the " "representative with the gathered information."
QLLC-3-BAD_XID	3-Error	Sna configuration error for [enet]: Lan device is PU2.1 X.25 device is PU2.0 XID Format 1	-	-	"Check the revision levels on the external equipment and\n\n upgrade them if necessary."
QLLC-3-BADOPCODE	3-Error	Opcode [chars] is invalid	Either remote source-route bridging or local acknowledgment is\n\n configured incorrectly.	-	"Verify that remote source-route bridging and local acknowledgment are\n\n configured correctly."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QLLC3BADQLLCSTATE	3-Error	Bad qlc state - [chars]	An invalid QLLC primitive was detected.	-	"Verify that the partner QLLC device is configured correctly."
QLLC3BADRSRBCODE	3-Error	Bad opcode [node]x from [enet] to [enet]	Either remote source-route bridging is incorrectly configured or the\n\n other RSRB device is down.	-	"Verify that remote source-route bridging is configured correctly with\n\n the right version of the IOS software."
QLLC-3-BADSTATE	3-Error	Bad qlc state - [chars] - [enet]	An invalid LLC primitive was detected.	-	"Verify that the Token Ring ports and any participating LAN devices are\n\n configured correctly."
QLLC3BADSTATEEVENT	3-Error	Bad qlc state - [chars] event - [chars] macaddr - [enet]	The LLC primitive specified placed the router in an invalid state.	-	"Verify that the Token Ring ports and any participating LAN devices are\n\n configured correctly."
QLLC-3-DIFFPRTR	3-Error	[enet] - Different partner - originally [enet] - now [enet]	The partner for this QLLC virtual MAC address does not match the MAC\n\n address that was defined with the qlc partner command.	-	"Verify that the qlc partner statement in the configuration file is\n\n correct."
QLLC-3-GENERRMSG	3-Error	[chars]	The text string provided with this error message describes the\n\n specific QLLC problem.	-	"Follow the instructions that appear with the error message. Copy the\n\n error message exactly as it appears and report it to your technical\n\n support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QLLC-3-IFRAME	3-Error	[chars]	An I-Frame was discarded due to network congestion.	-	"Verify that the LAN is not beaconing and that it is not in a congested state. Copy the error message exactly as it appears and report it to your technical support representative."
QLLC-3-NCALL_CFG	3-Error	Incoming call: No QLLC Service Access Point Configured for x.25 subaddress [chars]	A remote X.25 device is calling the router for QLLC service using a subaddress that was not configured by the X.25 routing facility. The subaddress was not configured for QLLC service.	-	"Correct the QLLC configuration. Configure only the subaddress on the QLLC service not the complete X.121 address that the remote X.25 device uses."
QLLC-3-NCALL_NO_PARTNER	3-Error	Incoming call: No partner Mac Address configured - X.25 subaddress [chars]	There is an incoming call but a connection cannot be initiated to a partner since no partner is configured in a qllc dlsw command for QLLC/DLSw+ only.	-	"Configure a partner for the incoming calling such as using the 'qllc dlsw partner' command."
QLLC-3-NO_QLLC_BUFFER	3-Error	lnx_remove_macaddr_hash did not find target lnx	The qllc srb command was not defined for this interface.	-	"Add a valid qllc srb statement for this serial interface."
QLLC-3-NO_QLLC_BUFFER	3-Error	M bit Reassembly failed - couldn't allocate a packet	The router ran out of memory to allocate buffers.	-	"Make sure that the router configuration is adequate for the service expected of it. You might want to tune the buffer pools or upgrade to a larger router. At the very least you will need more memory."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QLLC-3-NO_QSR	3-Error	No QLLC Service Access Points defined	No QLLC services have been configured even though the router will accept incoming calls for QLLC.	-	"Configure the QLLC service required."
QLLC3NO_RESOURCE	3-Error	Incoming Call: Insufficient resources available	This message is reporting insufficient system memory.	-	"Upgrade the memory."
QLLC-3-NOLLC2	3-Error	Unable to open an llc2 session	An LLC2 session could not be established with the destination MAC address.	-	"Verify that the qlc partner statement in the configuration file is correct and that the partner is on the desired LAN."
QLLC-3-NOMACADDR	3-Error	No lnx entry for macaddr [enet]	No virtual MAC address was defined for this interface.	-	"Define the virtual MAC address using either the x25 map qlc or the x25 pvc qlc command."
QLLC-3-NOMEM	3-Error	Not enough memory available	There is not enough memory in the system to complete this request.	-	"Add more memory to the router. Otherwise reduce the configuration or the load on the router."
QLLC-3-NONULLXID	3-Error	Couldn't make null xid - [enet] -[enet]	An attempt to create an IEEE XID failed.	-	"Verify that the qlc partner statement in the configuration file is correct and that the partner is on the desired LAN."
QLLC-3-NOPAKENQ	3-Error	Pak enqueue failed	A packet was not sent to the LAN.	-	"Verify that the LAN partner is configured correctly and that the partner is on the desired LAN."
QLLC-3-NOXID2	3-Error	Couldn't make xid - [enet] -[enet]	The QLLC XID could not be forwarded to the LAN.	-	"Verify that the qlc partner and the qlc xid commands are correct."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QLLC-3-NULLPTR	3-Error	[chars] ptr is null	The specified structure was not configured.	-	"Confirm the configuration commands for the structure."
QLLC3PARINR_MSMATCH	3-Error	Outgoing call: Partner Mac Address [enet] doesn't match configured partner [enet]		-	"Correct the QLLC configuration to match the right partner."
QLLC3QLLCMAP_ERR	3-Error	Incoming call: QLLC map entry not found	A software error in the router code occurred.	-	"Copy the error message exactly as it appears and report it to your technical support representative."
QLLC-4-NOQLLC	4-Warning	Unable to open qlc session current state is [chars]	A QLLC session could not be established.	-	"Verify that the qlc partner and the qlc xid commands are correct."
QM4ACIDNOTSUPPORTED	4-Warning	Action is not supported in policymap [chars]	This message means that an action other than the set trust and police policy-map class configuration commands was configured in a policy map. This is a hardware limitation.	hardware	"Configure only the supported actions of set trust and police when in "policy-map class configuration mode."
QM4CLASSNOTSUPPORTED	4-Warning	Classification is not supported in classmap [chars]	This message means the an unsupported match class-map configuration command was configured in a policy map and attached to an egress interface or that more than one match command was configured. This is a hardware limitation.	hardware	"Reconfigure the class map or the policy map. Use only the match ip dscp dscp-list "class-map configuration command in a policy map that is attached to an egress "interface. Only one match per class map is supported."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QM4HARDWARE_LIMITED	4-Warning	Hardware limitation has reached for policymap [chars]	The policy map configuration has exceeded the limitation of the hardware. You configured more QoS ACL entries than the number specified in the Switch Database Management sdm template.	hardware	"Reconfigure the class map or the policy map and reduce the number of QoS ACLs."
QM4MATCH_NOT_SUPPORTED	4-Warning	Match type is not supported in classmap [chars]	match ACL match ip dscp and match ip precedence are the match types that are supported	firmware	-
QM4NOT_SUPPORTED	4-Warning	Action '[chars]' is not supported for a policymap attached to output side.	This message means that a set or trust policy-map class configuration command was configured in a policy map and attached to an egress interface. A warning message is logged and the actions do not take affect. This is a hardware limitation.	hardware	"Do not configure a set or trust policy-map class configuration command in a " "policy map and attach it to an egress interface. These policy-map actions " "are supported only on ingress interfaces."
QM4POLICERS_LIMITED	4-Warning	Number of policers has exceeded hardware limitation for policymap [chars]	The policy map configuration has exceeded the limitation of the hardware. You configured more policers in a policy map by using the police or police aggregate policy-map class configuration command	hardware	"Reconfigure the class map or the policy map and reduce the number of policers."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QPOLNGRNCISIPED	4-Warning	Policer configuration has exceeded hardware limitation for policymap [chars]	The policy map configuration has exceeded the limitation of the hardware. You configured a larger policing rate or burst size in a policy map by using the police or police aggregate policy-map class configuration command than supported.	hardware	"Reconfigure the class map or the policy map and reduce the policing rate or " "burst size."
QPOLNENRACQSDN	4-Warning	Unexpected internal QoS condition.	This message means that an unexpected internal QoS condition has occurred. QoS debug may be enabled to obtain more information in case the condition recurs.	firmware	LOG_STD_ACTION
QSCIDRCAHSCMQE	4-Warning	Custom Queue list on interface has been deprecated. Use equivalent MQC bandwidth command	The issued interface custom queue list command has been deprecated by the MQC commands.\n	-	"Configure a policy with bandwidth and attach to " "the interface\n"
QSCIDRCAHFRQLE	4-Warning	Fair Queue on interface has been deprecated. Use equivalent MQC fair-queue command	The issued interface fair queue command has been deprecated by the MQC commands.\n	-	"Configure a policy with fair-queue and attach to " "the interface\n"
QSCIDRCAHADMSPE	4-Warning	frame relay adaptive-shaping has been deprecated. Use equivalent MQC priority command	The issued interface shape command has been deprecated by the MQC commands.\n	-	"Configure a policy with shape and attach to " "the interface\n"
QSCIDRCAHBCRCS	4-Warning	Frame relay bc command has been deprecated. Use equivalent MQC priority command	The issued frame-relay bc command has been deprecated by the MQC commands.\n	-	-



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QOS_CIR_CIR_CIR_CIR	4-Warning	Frame relay cir command has been deprecated. Use equivalent MQC priority command	The issued frame-relay cir command has been deprecated by the MQC commands.\n	-	-
QOS_CIR_CIR_CIR_CIR	4-Warning	Frame relay be command has been deprecated. Use equivalent MQC priority command	The issued frame-relay be command has been deprecated by the MQC commands.\n	-	-
QOS_CIR_CIR_CIR_CIR	4-Warning	frame relay ip rtp priority has been deprecated. Use equivalent MQC priority command	The issued frame-relay interface ip rtp priority command has been deprecated by the MQC commands.\n	-	"Configure a policy with priority and attach to " "the interface\n"
QOS_CIR_CIR_CIR_CIR	4-Warning	frame relay congestion threshold de command has been deprecated. Use equivalent MQC priority command	The issued frame-relay congestion threshold de has been deprecated by the MQC commands.\n	-	"Configure a policy with MQC and attach to the interface\n"
QOS_CIR_CIR_CIR_CIR	4-Warning	frame relay congestion threshold ecn command has been deprecated. Use equivalent MQC priority command	The issued frame-relay congestion threshold ecn has been deprecated by the MQC commands.\n	-	"Configure a policy with MQC and attach to the interface\n"
QOS_CIR_CIR_CIR_CIR	4-Warning	frame relay fecn-adapt command has been deprecated. Use equivalent MQC priority command	The issued frame-relay fecn-adapt command has been deprecated by the MQC commands.\n	-	"Configure a policy with MQC and attach to the interface\n"
QOS_CIR_CIR_CIR_CIR	4-Warning	frame relay custom-queue-list command has been deprecated. Use equivalent MQC bandwidth command	The issued frame-relay custome-queue command has been deprecated by the MQC commands.\n	-	"Configure a policy with bandwidth and attach to " "the interface\n"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>QOSCLDRCAIFRQCIFR</del>	4-Warning	frame relay fair-queue command has been deprecated. Use equivalent MQC fair-queue command	The issued frame-relay fair-queue command has been deprecated by the MQC commands.\n	-	"Configure a policy with fair-queue and attach to " "the interface\n"
<del>QOSCLDRCAIFRQIFR</del>	4-Warning	frame relay priority-group command has been deprecated. Use equivalent MQC priority command	The issued frame-relay priority-group command has been deprecated by the MQC commands.\n	-	"Configure a policy with priority and attach to " "the interface\n"
<del>QOSCLDRCAIFRPRIO</del>	4-Warning	ip rtp priority command on interface has been deprecated. Use equivalent MQC priority command	The issued interface ip rtp priority command has been deprecated by the MQC commands.\n	-	"Configure a policy with priority and attach to " "the interface\n"
<del>QOSCLDRCAIFRPRISV</del>	4-Warning	ip rtp reserve command on interface has been deprecated. Use equivalent MQC reserve command. For further information please consult Product Bulletin 580832 Legacy QoS CLI Commands Deprecation	The issued interface ip rtp reserve command has been deprecated by the MQC commands.\n	-	"Configure a policy with reserve and attach to " "the interface\n"
<del>QOSCLDRCAIFRRESERVE</del>	4-Warning	max-reserved-bandwidth on interface has been deprecated	The issued max-reserved-bandwidth command has been deprecated by the MQC bandwidth command.\n	-	"Configure a policy with bandwidth and attach to " "the interface\n"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>QOSCLDRCAEIPRIPYLS</del>	4-Warning	priority-list global config mode CLI has been deprecated. Use equivalent MQC priority command. For further information please consult Product Bulletin 580832 Legacy QoS CLI Commands Deprecation	The issued global config mode priority-list command has been deprecated by the MQC commands.\n	-	-
<del>QOSCLDRCAEIPRIPYLS</del>	4-Warning	Priority Queue on interface has been deprecated. Use equivalent MQC priority command	The issued interface priority-group command has been deprecated by the MQC commands.\n	-	"Configure a policy with priority and attach to " "the interface\n"
<del>QOSCLDRCAEIPRIPYLS</del>	4-Warning	queue-list global config mode CLI has been deprecated. Use equivalent MQC priority command. For further information please consult Product Bulletin 580832 Legacy QoS CLI Commands Deprecation	The issued global config mode queue-list command has been deprecated by the MQC commands.\n	-	-
<del>QOSCLDRCAEIPRIPYLS</del>	4-Warning	Random detect on interface has been deprecated. Use equivalent MQC random-detect command	The issued interface random detect command has been deprecated by the MQC commands.\n	-	-
<del>QOSCLDRCAEIPRIPYLS</del>	4-Warning	Random detect group command has been deprecated	The issued random detect group command has been deprecated by the MQC commands.\n	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSCDIRCAEIRAFCSAE</del>	4-Warning	Traffic shape on interface has been deprecated. Use equivalent MQC traffic-shape command	The issued interface traffic shape command has been deprecated by the MQC commands.\n	-	"Configure a policy with traffic-shape and attach to " "the interface\n"
<del>OSRMSQENPTVSTIA</del>	3-Error	ewlc-qos	ERROR: Failed to install policy:[chars] for Client: %D%D%D%D%D%D%D on AP:[chars] with status:[chars]	Client policy install on AP failed.	LOG_STD_ACTION
<del>OSRMSQENPTVSTIA</del>	3-Error	ewlc-qos	ERROR: For Client mac %D%D%D%D%D%D%D	-	-
<del>OSRMSQENPTVSTIA</del>	3-Error	ewlc-qos	ERROR: Failed to uninstall policy:[chars] for Client: %D%D%D%D%D%D%D on AP:[chars] with status:[chars]	Client policy unbind operation on AP failed.	LOG_STD_ACTION
<del>OSRMSQENPTVSTIA</del>	3-Error	ewlc-qos	ERROR: Unable to allocate resources for QoS Policy Content DB	Internal Error. Unable to allocate resources for QoS Policy Content DB	LOG_STD_ACTION
<del>OSRMSQENPTVSTIA</del>	3-Error	ewlc-client	ERROR: Failed to get dot11 client record for Client: %D%D%D%D%D%D%D	QoS get function for dot11 client record failed.	LOG_STD_ACTION
<del>OSRMSQENPTVSTIA</del>	3-Error	ewlc-qos	ERROR: Policy[chars] is invalid in[chars] direction for vapid:%d	QoS policy validation failed. Policy will not be installed	LOG_STD_ACTION
<del>OSRMSQENPTVSTIA</del>	3-Error	ewlc-qos	Error: Failed to allocate memory[chars]	An internal error occurred due to which memory allocation failed	LOG_STD_ACTION
<del>OSRMSQENPTVSTIA</del>	3-Error	ewlc-qos	ERROR: Unable to modify QoS Policy due to Reason:%s	Internal Error. Unable to modify QoS Policy Content in DB	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CRM/MS/ERR/CHRON</del>	3-Error	ewlc-qos	Blacklisting client %d/%d/%d/%d/%d/%d Error installing client QoS policy:[chars] in[chars] direction.	Failure occurred while installing QoS client policy. Client will be deleted.	LOG_STD_ACTION
<del>CRM/MS/ERR/CHRON</del>	3-Error	ewlc-qos	%d policy maps sent to AP[chars]	-	-
<del>CRM/MS/ERR/CHRON</del>	3-Error	ewlc-qos	ERROR: Policy[chars] in[chars] direction for vapid:%d has no content	QoS policy validation failed. Policy will not be installed	LOG_STD_ACTION
<del>CRM/MS/ERR/CHRON</del>	3-Error	ewlc-qos	ERROR: Policy[chars] is invalid in[chars] direction for vapid:%d. Once the policy is modified	-	-
<del>CRM/MS/ERR/CHRON</del>	3-Error	ewlc-qos	ERROR: Failed to bind SSID policy on AP:[chars] for wlan: %u	-	-
<del>CRM/MS/ERR/CHRON</del>	3-Error	ewlc-qos	ERROR: Failed to unbind SSID policy on AP:[chars] for wlan: %u	-	-
<del>CRM/MS/INF/CHRON</del>	6-Information	ewlc-qos	Deleting AP %d/%d/%d/%d/%d/%d because BSSID record sync for slotId %d wlan_id %d pm_dir[chars] failed	QoS BSSID record sync pre-switchover failed. Hence deleting the AP.	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QOS-3-ESTABLISH_FAIL	3-Error	Fail-over of dynamic interface [chars] failed\n	Dynamic interface has changed its route out of different physical interface and queueing can not set-up data-structures for that new physical interface\n	qos	"One possibility is that new physical interface already has " "service-policy or some other dynamic interface already has " "queueing data-structures associated with that physical interface " "and conjunction of such service-policies are not allowed. " "Remove one or the other service-policy in that case. If that is " "not the case then contact technical support\n"
QOS-3-BADXDRSLOT	3-Error	Invalid XDR slot. Type/len/slot [dec]/[dec]/[chars]. XDR at 0x[node]x	Configured extended burst size is less than the Rate. It is considered to be illegal and has been reset based on the Rate.\n	qos	"This is an informational message only." "No action is required.\n"
QOS-3-BLT_INDEX	3-Error	Failed to assign index for target/policy/class/action [node][node][node][chars]	The configuration of queueing has resulted in the failure to generate an internal unique identifier which represents the queue. This is an internal software error.	qos	LOG_STD_ACTION
QOS-3-BURST_BC_ERR	3-Error	Burst Bc increased to [dec] bytes\n	If Burst BC is less than the default burst size then Burst Bc is increased to AF_DEFAULT_BURST\n	-	"This is informational message. No action is required\n"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QoSCAC_ALLOC_FAILED	3-Error	QoS CAC: failed to allocate a cft flow object for interface [chars] srcIP=[char]i dstIP=[char]i srcPort=[dec] dstPort=[dec] L4Prot=[dec] num flows=[dec]	Cisco internal software error. The dataplane was unable to complete the CAC processing for a flow. This is likely due to processing more flows than CAC's scale limit	cpp-ucodekeyword:qos	LOG_STD_ACTION
QoSCAC_ATTACH_FAILED	3-Error	QoS CAC: failed to attach cft flow object for interface [chars] srcIP=[char]i dstIP=[char]i srcPort=[dec] dstPort=[dec] L4Prot=[dec] num flows=[dec]	Cisco internal software error. The dataplane was unable to complete the CAC processing for a flow. This is likely due to a CFT data initialization error	cpp-ucodekeyword:qos	LOG_STD_ACTION
QoSCAC_EXPORT_RECORD_PKT	3-Error	Dropped a packet for QoS CAC when exporting flow records via HSL to the control plane	Cisco internal software error. The dataplane dropped one or more packets containing QoS CAC export records. This is likely due to over-driving the punt/hsl messaging channel.	asr1k-qoskeyword:none	LOG_STD_ACTION
QoSCAC_EXPORT_RECORD	3-Error	Dropped a flow record for QoS CAC CAC ID [hex] when attempting	Cisco internal software error. The dataplane dropped one or more flow records for QoS CAC. This is likely due to buffer allocation error and over-driving the punt/hsl messaging channel.	asr1k-qoskeyword:none	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QOS_CAC_FLOW_CREATE_FAILED	3-Error	QoS CAC: failed to create a flow in the cft for interface [chars] srcIP=[char]i dstIP=[char]i srcPort=[dec] dstPort=[dec] L3Prot=[dec] L4Prot=[dec]	Cisco internal software error. The dataplane was unable to complete the CAC processing for a flow. This is likely due to processing more flows than the CFT's scale limit	cpp-ucodekeyword:qos	LOG_STD_ACTION
QOS_CAC_FLOW_LOCK_FAILED	3-Error	QoS CAC: failed to get a flow lock for interface [chars] srcIP=[char]i dstIP=[char]i srcPort=[dec] dstPort=[dec] L3Prot=[dec] L4Prot=[dec]	Cisco internal software error. The dataplane was unable to complete the CAC processing for a flow. This is likely due to a CFT data initialization error	cpp-ucodekeyword:qos	LOG_STD_ACTION
QOS_CAC_FLOW_REPORT_FAILED	3-Error	QoS CAC: failed to report flow for interface [chars] srcIP=[char]i dstIP=[char]i srcPort=[dec] dstPort=[dec] L3Prot=[dec] L4Prot=[dec]	Cisco internal software error. The dataplane was unable to complete the CAC processing for a flow. This is likely due to a data initialization error	cpp-ucodekeyword:qos	LOG_STD_ACTION
QOS_CAC_PROXY_MGFL	3-Error	Failure when handling QoS CAC proxy message [chars]	-	-	-
QOS-3-CFGERR	3-Error	interface [chars]: configuration failed\n	Enough memory is not available to configure feature\n	high-ipqos	"It is not possible to configure issued command feature unless "



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QOS3COEX_NOT_ALLWD	3-Error	queueing policy at session cannot co-exist with service policy at sub-interface/pvc\n	There already may be user-defined flat policy or hierarchical policy at the sub-interface/pvc. With existing of such policy no queueing policy is allowed on session\n	qos	"Remove the policy attached to the sub-interface/pvc before attaching " "a new policy to a session\n"
QOS3COLLISION_COUNT	3-Error	[chars] mismatch count %u	The specified type of collision has detected that although there are no collisions present the count of such indicates otherwise. This is an internal software error.	qos	LOG_STD_ACTION
QOS3COLLISION_DELETE	3-Error	[chars] unable to remove index [node]X	The specified type of collision is unable to removed the specified index. This is an internal software error.	qos	LOG_STD_ACTION
QOS3COLLISION_TYPE	3-Error	Type [node]is invalid for collision [chars]	The specified type of collision is an invalid value which indicates that there is no support for the generation of an internal identifier. This is an internal software error.	qos	LOG_STD_ACTION
QOS-3-DETACH	3-Error	Failed to detach [chars] [chars] service policy	The specified type of service policy has failed to detach itself from the attachment point indicated. The service policy will remain attached although repeated attempts to remove such should fail in a similar manner.	c3pl	"show policy-map [type] " "<attachment point>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QOS-3-DETACH	3-Error	Failed to detach [chars] [chars] service policy	The specified type of service policy has failed to detach itself from the attachment point indicated. The service policy will remain attached although repeated attempts to remove such should fail in a similar manner.	c3pl	"show policy-map [type] " "<attachment point>"
<del>QOS_CAC_FLOW_OBJ_FAIL</del>	3-Error	QoS CAC: failed to retrieve the CAC flow object for interface [chars] srcIP=[char]i dstIP=[char]i srcPort=[dec] dstPort=[dec] L3Prot=[dec] L4Prot=[dec]	Cisco internal software error. The dataplane was unable to complete the CAC processing for a flow. This is likely due to processing more flows than the CFT's scale limit	cpp-ucodekeyword:qos	LOG_STD_ACTION
<del>QOS_CFG_CAC_NO_FAIL</del>	3-Error	QoS CAC: failed to retrieve the CAC config for interface [chars] srcIP=[char]i dstIP=[char]i srcPort=[dec] dstPort=[dec] L3Prot=[dec] L4Prot=[dec]	Cisco internal software error. The dataplane was unable to complete the CAC processing for a flow. This is likely due to a data initialization error	cpp-ucodekeyword:qos	LOG_STD_ACTION
QOS3-HA_BULK_SYNC	3-Error	[chars] Failure in completing bulk sync\n	QoS configuration can't be synced to the standby\n	-	"Contact your Cisco technical support representative.\n"
<del>QOS_BULK_SYNC_TIMEOUT</del>	3-Error	[chars] Failure in completing bulk sync before timeout\n	The interface bandwidth is more than the total bandwidth that is required for QoS policy on this interface.\n	-	"There is no user action required.\n"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
QOSHA_COLLISION_AID	3-Error	Received collision table of type %u	The specified type of collision is an invalid value which indicates that the message received on the standby RP contains erroneous data. This is an internal software error which should result in a reload of the standby RP so that the bulk sync of configuration can be sent once more by the active RP.	qos	LOG_STD_ACTION
QOS3HA_COLLISION_SIZE	3-Error	Received [chars] message total/unit [node][node][chars]	The specified type of collision table has been determined to contain a discrepancy between the total message size and the individual table unit that is being decoded on the standby RP. This is an internal software error which should result in a reload of the standby RP so that the bulk sync of configuration can be sent once more by the active RP.	qos	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QOS3-HA_COLLISION_STRING	3-Error	Received [chars] message length [node]for string [chars]	The specified type of collision table contains an individual unit within the message which has an incorrectly encoded string which is used to represent the collision which is being synced from the active RP. This is an internal software error which should result in a reload of the standby RP so that the bulk sync of configuration can be sent once more by the active RP.	qos	LOG_STD_ACTION
QOS3-HA_GET_ARG_NUM	3-Error	[chars] Failure in getting event identification\n	QoS configuration can't be synced to the standby\n	-	"Contact your Cisco technical support representative.\n"
QOS3-HA_MISMATCH	3-Error	Bulk sync failed for [chars] collisions space available [node]buffer %u	A synchronization attempt between the active and standby RP peers has failed due to the detection of a mismatch in the source and destination sizes of a buffer used in the transport of the collision information to the standby RP. This is an internal software error.	qos	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QOS3HQF_FEA_API_FAIL	3-Error	Feature processing API returned NULL pak with INCOMPLETE flag\n	HQF calls feature processing API to get the next packet from the feature for example Frame-relay fragmentation. The API returns conflicting flags with NULL packet.\n	qos	"Check if the system resources e.g. packet buffers are exhausted." "Contact technical support\n"
QOS-3-HQF_QID_ERR	3-Error	Maximum number of QoS queues [dec] reached.\n	The system has run out of QoS queue identifiers and cannot allocate any more until existing queues are freed up.\n	-	"Existing QoS configurations will need to be removed to free up" "more queue identifiers. For example remove existing QoS " "service-policy configurations or modify policy-map templates to " "have fewer queueing actions.\n"
QOS-3-HQFNOPAK	3-Error	interface [chars]: pak_reparent failed\n	pak_reparent has been invoked and failed.\n	-	"Collect show buffer and show policy interface output and send " "to technical support\n"
QOS3HQFPAKREQUEUE	3-Error	interface [chars]: pak_requeue_head has been invoked\n	pak_requeue_head function has been invoked on a packet.	qos	"Collect show buffer and show policy interface output and send " "to technical support\n"
QOS-3-HQFPOOLERR	3-Error	interface [chars]: failed to allocate hqf particle\n	The HQF particle pool is empty. It cannot process a router generated packet\n	-	"Collect show buffer and show policy interface output and send " "to technical support\n"
QOS-3-INDEX_DELETE	3-Error	[chars] unable to remove index [node]X	The specified entity is unable to removed the specified index. This is an internal software error.	qos	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QOS-3-INDEX_EXISTS	3-Error	[chars] attempt to add index [node]X [chars]	The specified entity is unable to add an entry due to the detection of an existing entry with the same index or name. This is an internal software error.	qos	"show cce cp id [collisions]"
<del>QOS-3-INVALID_GROUP_MEMBER</del>	3-Error	Dropped a flow from ATM interface [chars] due to invalid <code>oup_member_uidb_config</code>	Cisco internal software error. Fail to get QOS config from ATM input interface due to invalid <code>group_member_uidb_config</code>	cpp-ucodekeyword:qos	LOG_STD_ACTION
<del>QOS-3-INVALID_QUEUE_NO</del>	3-Error	Drop policy given an invalid scheduling queue/wred [node]%u	Cisco internal software error. The dataplane was unable to complete enqueueing a packet. This is likely due to a data initialization error	cpp-ucodekeyword:qos	LOG_STD_ACTION
<del>QOS-3-INVALID_CAC_INFO</del>	3-Error	QoS CAC: failed to get the CAC packet info for interface [chars] srcIP=[char]i dstIP=[char]i srcPort=[dec] dstPort=[dec] L3Prot=[dec] L4Prot=[dec]	Cisco internal software error. The dataplane was unable to complete the CAC processing for a packet. This is likely due to a data initialization error	cpp-ucodekeyword:qos	LOG_STD_ACTION
<del>QOS-3-INVALID_CLASS_QD</del>	3-Error	Class Queuing error for interface [chars] qid [dec]	Cisco internal software error. The dataplane was unable to complete enqueueing a packet. This is likely due to a data initialization error	cpp-ucodekeyword:qos	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QOSNADDEFLT_BHR	3-Error	Queuing error for interface [chars]	Cisco internal software error. The dataplane was unable to complete enqueueing a packet. This is likely due to a data initialization error	cpp-ucodekeyword:qos	LOG_STD_ACTION
QOSNADDEFLT_QD	3-Error	Default Queuing error for interface [chars] qid [dec]	Cisco internal software error. The dataplane was unable to complete enqueueing a packet. This is likely due to a data initialization error	cpp-ucodekeyword:qos	LOG_STD_ACTION
QOSNADHREXPC_LASD	3-Error	Invalid export class ID detected	Cisco internal software error. The dataplane was unable to complete a hierarchy export on a packet. This is likely due to a data initialization error	cpp-ucodekeyword:qos	LOG_STD_ACTION
QOSNADHREXPC_CN	3-Error	Invalid export count [hec] detected	Cisco internal software error. The dataplane was unable to complete a hierarchy export on a packet. This is likely due to a data initialization error	cpp-ucodekeyword:qos	LOG_STD_ACTION
QOSNADMARRSASNO	3-Error	Invalid address [hec] detected	Cisco internal software error. The dataplane was unable to complete a statistics update on a packet. This is likely due to a data initialization error	cpp-ucodekeyword:qos	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QOS3-INVALID_PLTYPE	3-Error	No entry found for pltype : [node]in global service_policy_queue during service-policy deletion.\n	No entry was found for a pltype when un-queue of a service-policy from global service_policy_queue was undergoing. This will result in freeing a service-policy without un-queuing it from global service_policy_queue.	c3pl	"Need to figure out why there was no entry found for a pltype" " in the global service_policy_queue when passed with a " " service-policy while deletion. check the traceback for" " details"
QOS3-INVALID_PLTYPE	3-Error	No entry found for pltype : [node]in global service_policy_queue during service-policy deletion.\n	No entry was found for a pltype when un-queue of a service-policy from global service_policy_queue was undergoing. This will result in freeing a service-policy without un-queuing it from global service_policy_queue.	c3pl	"Need to figure out why there was no entry found for a pltype" " in the global service_policy_queue when passed with a " " service-policy while deletion. check the traceback for" " details"
QOS3-INVALID_POLICY	3-Error	queueing policy at session/tunnel can co-exist only with \ class-default shaping policy at sub-interface/pvc\n	There already may be user-defined flat policy or hierarchical policy at the sub-interface/pvc. With existing of such policy no queueing policy is allowed on session\n	qos	"Make sub-interface/pvc based policy just one level policy with only " " class-default\n"
QOS3-INVALID_Q_ADDRESS	3-Error	Invalid Queue address for interface [chars] qaddr [hec]	Cisco internal software error. The dataplane was unable to complete enqueueing a packet. This is likely due to a data initialization error	cpp-ucodekeyword:qos	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QOS-3-INVALID_QID	3-Error	Queuing error for interface [chars] qid [dec] wred [hec]	Cisco internal software error. The dataplane was unable to complete enqueueing a packet. This is likely due to a data initialization error	cpp-ucodekeyword:qos	LOG_STD_ACTION
QOS3INVALID_STAT_QID	3-Error	Stat Queuing error for interface [chars] qid [dec]	Cisco internal software error. The dataplane was unable to complete enqueueing a packet. This is likely due to a data initialization error	cpp-ucodekeyword:qos	LOG_STD_ACTION
QOS3INVALID_STATS_INFO	3-Error	Invalid address [hec] detected	Cisco internal software error. The dataplane was unable to complete enqueueing a packet. This is likely due to a data initialization error	cpp-ucodekeyword:qos	LOG_STD_ACTION
QOS3INVALID_WRED_ADDR	3-Error	Wred threshold address is invalid addr [dec]	Cisco internal software error. The dataplane was unable to complete enqueueing a packet. This is likely due to a data initialization error	cpp-ucodekeyword:qos	LOG_STD_ACTION
QOS-3-ISSU_COMP	3-Error	Failed to exchange capability with peer	The attempt to negotiate version capabilities and the exchange of the peer support has failed. This indicates that QoS is unable to support a redundant operation with the standby RP peer.	qos	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QOSISSU_GTP_CFG_ENHANCE	3-Error	GTP-AIC configuration has been detected which is totally different with peer. Delete all GTP-AIC related config to proceed with ISSU/ISSD. After ISSU/ISSD done config GTP-AIC again.\n	PEER GTP-AIC configuration would be messed up.	c3pl	"Manually remove all GTP-AIC configuration and reinitiate " "ISSU/ISSD. \n"
QOSISSU_GTP_CFG_ENHANCE	3-Error	GTP-AIC configuration has been detected which is totally different with peer. Delete all GTP-AIC related config to proceed with ISSU/ISSD. After ISSU/ISSD done config GTP-AIC again.\n	PEER GTP-AIC configuration would be messed up.	c3pl	"Manually remove all GTP-AIC configuration and reinitiate " "ISSU/ISSD. \n"
QOSLAYER_IDX_NAID	3-Error	Layer index [dec] is invalid it exceeded the max limit [dec] at this layer [dec]\n	The system limit on the number of entries in a layer has been reached.\n	qos	"This is an informational message only. No action is required.\n"
QOS3MAN_SUB_POLICY	3-Error	FR fragmentation is not supported with interface or sub-interface based policies \n	On Cisco 7500 series routers Frame Relay fragmentation is not supported when service policies are configured on the interface or subinterfaces.	-	"Remove the service policy configuration under the interface " "or subinterfaces and reissue either the class command from " "Frame-Relay DLCI interface configuration mode or the " "frame-relay fragment command from map-class configuration " "mode. \n"

Family-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QOSMULTIINTERFACES	3-Error	Load-sharing mode has changed. \ Queuing functionality may not be supported after this.\n	Dynamic interface has changed its route out of different physical interface. It might resolve into multiple interfaces for queuing. HQF functionality will get affected.\n	qos	"Likely scenario is that CEF is returning multiple paths " "across different interfaces. For those tunnels " "which has queuing features need unique out-going interface " "to resolve queuing hierarchy. " "Common instance is per-prefix load-balancing to per-destination. " "Need to remove offending configurations. " "May also need reload to get the queuing in working state\n"
QOSPOLICECLASSIFYAL	3-Error	Color aware policer classification error for interface [chars]	Cisco internal software error. The dataplane was unable to complete processing of a service policy due to a classification failure on a color aware policer class. This is likely due to a data initialization error	cpp-ucodekeyword:qos	LOG_STD_ACTION
QOSPOLICEAL_ADDRESSN	3-Error	dataplane policer error for input interface [chars] [hec] [hec] [hec] [hec] [hec]	Cisco internal software error. The dataplane was unable to complete processing of a service policy due to a policer failure. This is likely due to a data initialization error	cpp-ucodekeyword:qos	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QOSPOLICE_FAIL_OUT	3-Error	dataplane policer error for output interface [chars] [hec] [hec] [hec] [hec] [hec]	Cisco internal software error. The dataplane was unable to complete processing of a service policy due to a policer failure. This is likely due to a data initialization error	cpp-ucodekeyword:qos	LOG_STD_ACTION
QOSQOS_CLASSIFY_FAIL	3-Error	dataplane classification error for interface [chars]	Cisco internal software error. The dataplane was unable to complete processing of a service policy due to a classification failure. This is likely due to a data initialization error	cpp-ucodekeyword:qos	LOG_STD_ACTION
QOSQOS_CLASSIFY_FAIL_CEN	3-Error	dataplane classification error for input interface [chars] [hec] [hec] [hec] [hec]	Cisco internal software error. The dataplane was unable to complete processing of a service policy due to a classification failure. This is likely due to a data initialization error	cpp-ucodekeyword:qos	LOG_STD_ACTION
QOSQOS_CLASSIFY_FAIL_OUT	3-Error	dataplane classification error for output interface [chars] [hec] [hec] [hec] [hec]	Cisco internal software error. The dataplane was unable to complete processing of a service policy due to a classification failure. This is likely due to a data initialization error	cpp-ucodekeyword:qos	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QOS3-CLASSIFY_CHDN	3-Error	child dataplane classification error for input interface [chars]	Cisco internal software error. The dataplane was unable to complete processing of a service policy due to a classification failure. This is likely due to a data initialization error	cpp-ucodekeyword:qos	LOG_STD_ACTION
QOS3-CLASSIFY_CHDOUT	3-Error	child dataplane classification error for output interface [chars]	Cisco internal software error. The dataplane was unable to complete processing of a service policy due to a classification failure. This is likely due to a data initialization error	cpp-ucodekeyword:qos	LOG_STD_ACTION
QOS3-SESSION_FAIL_OVR	3-Error	Fail-over of dynamic SA session to interface [chars] failed\n	Dynamic SA session has changed its route out of different physical interface and queueing can not set-up data-structures for that new physical interface\n	qos	"One possibility is that new physical interface already has " "service-policy with queueing configured" "Remove the other service-policy in that case. If that is " "not the case then contact technical support\n"
QOS3-TARGET_INDEX	3-Error	[chars] [chars] service policy attachment failed to assign index	The configuration of a service policy has resulted in the failure to generate an internal unique identifier which represents the attachment point target of the associated policy map. This is an	c3pl	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QOS-3-TARGET_INDEX	3-Error	[chars] [chars] service policy attachment failed to assign index	The configuration of a service policy has resulted in the failure to generate an internal unique identifier which represents the attachment point target of the associated policy map. This is an	c3pl	LOG_STD_ACTION
QOS-3-UNASSIGNED	3-Error	A [chars] event resulted in an unassigned index for [chars] [chars]	-	-	-
QOS-3-UNASSIGNED	3-Error	A [chars] event resulted in an unassigned index for [chars] [chars]	-	-	-
QOS-3-VALD_DEFAULT_QD	3-Error	Using Default Queue for interface [chars] qid [dec]	Cisco internal software error. The dataplane was unable to complete enqueueing a packet. This is likely due to a data initialization error	cpp-ucodekeyword:qos	LOG_STD_ACTION
QOS-3-VIEMP_MAIN_ERR	3-Error	Attaching a service policy to a PPP/PPPoE virtual-access interface is not allowed when another policy is already attached to the main interface to which the PPP/PPPoE virtual-access interface is bound.\n	Attaching a service policy to a PPP/PPPoE virtual-access interface is not allowed when another policy is already attached to the main interface to which the PPP/PPPoE virtual-access interface is bound.\n	qos	"Remove the policy attached to the main interface before attaching " "a new policy to a PPP/PPPoE virtual-access interface\n"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QOS3-VEEMP_MLP_ERR	3-Error	A service policy cannot be attached to a PPP virtual-access interface when ppp multilink is enabled. A service policy can be attached to a ppp multilink bundle interface only.\n	A service policy attached to a virtual-template is usually copied to associated virtual-access interfaces. However if such a virtual-access interface joins a multilink ppp bundle the policy is not attached to the virtual-access interface.\n	qos	"This is informational message. No action is required\n"
QOS3-VEEMP_SUB_ERR	3-Error	Attaching a service policy to a PPP/PPPoE virtual-access interface is not allowed when another policy is already attached to the subinterface to which the PPP/PPPoE virtual-access interface is bound.\n	Attaching a service policy to a PPP/PPPoE virtual-access interface is not allowed when another policy is already attached to the subinterface to which the PPP/PPPoE virtual-access interface is bound.\n	qos	"Remove the policy attached to the subinterface before attaching " "a new policy to a PPP/PPPoE virtual-access interface\n"
QOS3-VEEMP_VC_ERR	3-Error	Attaching a service policy to a PPP/PPPoE virtual-access interface is not allowed when another policy is already attached to the vc/pvc to which the PPP/PPPoE virtual-access interface is bound.\n	Attaching a service policy to a PPP/PPPoE virtual-access interface is not allowed when another policy is already attached to the vc/pvc to which the PPP/PPPoE virtual-access interface is bound.\n	qos	"Remove the policy attached to the vc/pvc before attaching " "a new policy to a PPP/PPPoE virtual-access interface\n"
QOS-3-XDRLEN	3-Error	Invalid XDR length. Type [dec][chars]. XDR/buffer len [dec]/[dec]	An internal software error occurred\n	qos	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QOS-4-DYN_SUSPEND	4-Warning	Queueing hierarchy move failed on [chars] suspending policy.	A forwarding path change has moved the given queue to a new port where its QoS queuing policy cannot be satisfied. This is likely due to a conflicting policy or insufficient bandwidth on the new port or simply that a new port has not yet been calculated. The policy has thus been temporarily suspended.	-	LOG_STD_ACTION
QOS-4-FO_IN_USE	4-Warning	Releasing feature object with reference count [dec]	This is an internal software error. A QoS policy feature object has a stale reference.	qos	"If the message recurs try to isolate the traffic conditions which " "trigger the message and contact technical support. Provide the output " "from the show tech-support and show policy-map interface commands."
<del>QOS-4-QUEUE_LIMIT</del>	4-Warning	The hold-queue value is less than the sum of queue-limit values. \n	The hold-queue value is less than the queue-limit configured. This will lead to no-buffer drops instead of tail drops	qos	"The hold-queue value should be properly adjusted to prevent " "no-buffer drops."
QOS-4-INVALIDBW	4-Warning	interface [chars]: Not enough bandwidth to configure service-policy\n	The issued interface bandwidth is less than the total bandwidth that is required for QoS policy on this interface.\n	-	"There is no user action required.\n"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QOS4CSASMSGDROPHD	4-Warning	QoS statistics update message dropped due to [chars]\n	Changes to QoS counters are sent periodically from linecards to the route processor. One of these statistics update messages was discarded because it was inconsistent or because the route processor ran out of message buffers. The packet and bytes counters for a single service-policy may be underreported by show commands and SNMP queries.\n	qos	"This is an informational message only." "No action is required.\n"
QOS4HOLD_QUEUE_EXE	4-Warning	The sum of all queue-limit value is greater than the hold-queue value. \n	The hold-queue value is less than the queue-limit configured. This will lead to no-buffer drops instead of tail drops	qos	"The hold-queue value should be properly adjusted to prevent " "no-buffer drops."
QOS4SERV_FRAG_POLICY	4-Warning	\nservice-policy [chars] can't be attached without corresponding service-fragment policy on appropriate target first	For a fragment policy that is being installed check if parent targets have relevant service-fragment class installed. If not then we can not allow fragment policy installation.\n	c3pl	"Check the parent target to add relevant service-fragment class.\n"
QOS4SERV_FRAG_POLICY	4-Warning	\nservice-policy [chars] can't be attached without corresponding service-fragment policy on appropriate target first	For a fragment policy that is being installed check if parent targets have relevant service-fragment class installed. If not then we can not allow fragment policy installation.\n	c3pl	"Check the parent target to add relevant service-fragment class.\n"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>QOSWREDQMTOUOSFC</del>	4-Warning	On interface [chars] user-defined wred max threshold higher than default queue-limit \n	The user defined random-detect is greater than the default queue-limit for this interface. Some of the random-detect configurations will not function properly due to this anomaly. \n	qos	"No action required this is user configured behavior and " "user should change the configured random-detect value if this " "message if of concern to them.\n"
QOS-6-ACTIVATE	6-Information	Activating service policy [chars] on [chars] in [chars] direction	The interface bandwidth is more than the total bandwidth that is required for QoS policy on this interface.\n	-	"There is no user action required.\n"
QOS6ACTIVATE_NOHW	6-Information	\nActivating service policy [chars] in [chars] direction	-	-	-
<del>QOSADAPIMEQOSDISABLED</del>	6-Information	Adaptive QoS functionality is disabled. Shaper is reset to upper-bound	Multiple and consecutive reports from peer are not received. This leads to an assumption that the peer has gone away.	qos	"Removal and re-application of policy may be required to re-enable " "the adaptive QoS functionality"
QOS6COLLISION_MAX	6-Information	Maximum number of collision entries [node]reached	The system limit on the number of collision entries used in assigning unique identifiers for policy and class maps et al. has been reached. This indicates that no further configuration of entities which require additional generation of a unique identifier will be possible.	qos	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QOS-6-DYN_INSTALL	6-Information	Installing suspended policy on [chars].	IOS is restoring a previously suspended policy.	qos	LOG_STD_ACTION
QOS6NON_AGG_WRED	6-Information	ATM SPA doesn't support true non-aggregate WRED. All non-specified dscp/prec values will be aggregated in default WRED profile	ATM SPA has limited hardware capability which is not enough to support traditional WRED. ATM SPA would support 'limited' non-aggregate WRED for the specified dscp/prec values maximum of 6	-	"There is no user action required.\n"
QOS6POLICY_INST_FAILED	6-Information	Service policy installation failed on [chars]. [chars]. policy:[chars] dir:[chars] ptype:[chars] ctype:[chars]\n	Service policy could not be installed\n	c3pl	"This is an informational message only." "No action is required.\n"
QOS6POLICY_INST_FAILED	6-Information	Service policy installation failed on [chars]. [chars]. policy:[chars] dir:[chars] ptype:[chars] ctype:[chars]\n	Service policy could not be installed\n	c3pl	"This is an informational message only." "No action is required.\n"
QOS6POLICY_REM_FAILED	6-Information	Service policy remove failed on [chars] policy:[chars] dir:[chars] ptype:[chars] ctype:[chars]\n	Service policy could not be removed\n	c3pl	"This is an informational message only." "No action is required.\n"
QOS6POLICY_REM_FAILED	6-Information	Service policy remove failed on [chars] policy:[chars] dir:[chars] ptype:[chars] ctype:[chars]\n	Service policy could not be removed\n	c3pl	"This is an informational message only." "No action is required.\n"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QOS6RADIO_MULTIREM	6-Information	Remove [chars] policy before removing policy from [chars]\n	-	-	-
QOS-6-RELOAD	6-Information	[chars] reloading [chars]	A synchronization attempt between the active and standby RP peers has failed with the reason indicated. The standby peer is reloaded in an attempt to resynchronize when operating in a stateful redundant mode.	qos	LOG_STD_ACTION
QOS-6-SUSPEND	6-Information	Suspending service policy [chars] on [chars] in [chars] direction	The interface bandwidth is less than the total bandwidth that is required for QoS policy on this interface.\n	c3pl	"There is no user action required.\n"
QOS-6-SUSPEND	6-Information	Suspending service policy [chars] on [chars] in [chars] direction	The interface bandwidth is less than the total bandwidth that is required for QoS policy on this interface.\n	c3pl	"There is no user action required.\n"
QOS6ASICRAMMGL	3-Error	Fails to program the ASIC for policymap [chars]	Can not access to HW successfully.	firmware	LOG_STD_ACTION
QOS6ASICRAMMGL	3-Error	Fails to program the ASIC for policymap [chars]	Can not access to HW successfully.	firmware	LOG_STD_ACTION
QOS6ASICRAMMGL	3-Error	Fails to program the ASIC for policymap [chars]	Can not access to HW successfully.	firmware	LOG_STD_ACTION
QOS6BANDWIDTHERR	3-Error	Bandwidth in one of the children class is greater than input bandwidth	Children class's bandwidth should not be greater	firmware	"Either increase input value or decrease erring one"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>QSMCBANDWFCHLERR</del>	3-Error	Bandwidth in one of the children class is greater than input bandwidth	Children class's bandwidth should not be greater	firmware	"Either increase input value or decrease erring one"
<del>QSMCBANDWFCHLERR</del>	3-Error	Bandwidth in one of the children class is greater than input bandwidth	Children class's bandwidth should not be greater	firmware	"Either increase input value or decrease erring one"
<del>QSMCBANDWFHMLERR</del>	3-Error	Bandwidth command not acceptable at interface level	Hardware does not support bandwidth at physical level	firmware	"Do not apply bandwidth command at interface " "level policy"
<del>QSMCBANDWFHMLERR</del>	3-Error	Bandwidth command not acceptable at interface level	Hardware does not support bandwidth at physical level	firmware	"Do not apply bandwidth command at interface " "level policy"
<del>QSMCBANDWFHMLERR</del>	3-Error	Bandwidth command not acceptable at interface level	Hardware does not support bandwidth at physical level	firmware	"Do not apply bandwidth command at interface " "level policy"
<del>QSMCBANDWFOBSERR</del>	3-Error	Bandwidth oversubscribed in the interface	Sum of committed bandwidth at a particular level exceeds the sum total of interface's max bandwidth	firmware	"Reduce the committed bandwidth to be less than " "interface's max bandwidth"
<del>QSMCBANDWFOBSERR</del>	3-Error	Bandwidth oversubscribed in the interface	Sum of committed bandwidth at a particular level exceeds the sum total of interface's max bandwidth	firmware	"Reduce the committed bandwidth to be less than " "interface's max bandwidth"
<del>QSMCBANDWFOBSERR</del>	3-Error	Bandwidth oversubscribed in the interface	Sum of committed bandwidth at a particular level exceeds the sum total of interface's max bandwidth	firmware	"Reduce the committed bandwidth to be less than " "interface's max bandwidth"
<del>QSMCBANDWFPERR</del>	3-Error	Sum of bandwidths is greater than parent class's bandwidth	Total bandwidth of the classes at the same level exceeds the parent class's bandwidth	firmware	"Reduce the bandwidth value"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>QSMCBNDWDF_PEN_HERR</del>	3-Error	Sum of bandwidths is greater than parent class's bandwidth	Total bandwidth of the classes at the same level exceeds the parent class's bandwidth	firmware	"Reduce the bandwidth value"
<del>QSMCBNDWDF_PEN_HERR</del>	3-Error	Sum of bandwidths is greater than parent class's bandwidth	Total bandwidth of the classes at the same level exceeds the parent class's bandwidth	firmware	"Reduce the bandwidth value"
<del>QSMCBNDWDF_PEN_SAPIR</del>	3-Error	Sum of bandwidths is greater than parent class's shapePIR	Total bandwidth of the classes at the same level exceeds the parent class's shapePIR value	firmware	"Reduce the bandwidth value"
<del>QSMCBNDWDF_PEN_SAPIR</del>	3-Error	Sum of bandwidths is greater than parent class's shapePIR	Total bandwidth of the classes at the same level exceeds the parent class's shapePIR value	firmware	"Reduce the bandwidth value"
<del>QSMCBNDWDF_PEN_SAPIR</del>	3-Error	Sum of bandwidths is greater than parent class's shapePIR	Total bandwidth of the classes at the same level exceeds the parent class's shapePIR value	firmware	"Reduce the bandwidth value"
<del>QSMCBNDWDF_S_APIR</del>	3-Error	Bandwidth configured is greater than shapePIR of the class	Bandwidth should not be greater than shape value	firmware	"Reduce the bandwidth value to less than" " class's shapePIR value"
<del>QSMCBNDWDF_S_APIR</del>	3-Error	Bandwidth configured is greater than shapePIR of the class	Bandwidth should not be greater than shape value	firmware	"Reduce the bandwidth value to less than" " class's shapePIR value"
<del>QSMCBNDWDF_S_APIR</del>	3-Error	Bandwidth configured is greater than shapePIR of the class	Bandwidth should not be greater than shape value	firmware	"Reduce the bandwidth value to less than" " class's shapePIR value"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>QMCRHPSHAERSFCDN</del>	3-Error	EFP policies cannot have shape command at physical level and more than one logical level classes	Since the HW does not support four level hierarchy EFP policies sit in pseudo level between Physical and Logical level	firmware	"Either remove vlan hierarchy in the EFP policy or" " do not configure shape command at physical level"
<del>QMCRHPSHAERSFCDN</del>	3-Error	EFP policies cannot have shape command at physical level and more than one logical level classes	Since the HW does not support four level hierarchy EFP policies sit in pseudo level between Physical and Logical level	firmware	"Either remove vlan hierarchy in the EFP policy or" " do not configure shape command at physical level"
<del>QMCRHPSHAERSFCDN</del>	3-Error	EFP policies cannot have shape command at physical level and more than one logical level classes	Since the HW does not support four level hierarchy EFP policies sit in pseudo level between Physical and Logical level	firmware	"Either remove vlan hierarchy in the EFP policy or" " do not configure shape command at physical level"
<del>QMCRSARKREXASE</del>	3-Error	Egress marking profiles have exceeded the maximum number [dec]	No free egress cos marking profile to accommodate the request	firmware	"Change config to reuse the existing profiles"
<del>QMCRSARKREXASE</del>	3-Error	Egress marking profiles have exceeded the maximum number [dec]	No free egress cos marking profile to accommodate the request	firmware	"Change config to reuse the existing profiles"
<del>QMCRICQOXIEXHDD</del>	3-Error	Maximum Egress QoSContexts consumed in the Bridge-Domain	Number of Egress QoS vlan matches exceeds the maximum allowed in the Bridge-Domain	firmware	"Reduce the number of Egress QoS vlan" " matches in the Bridge-Domain and try again"
<del>QMCRICQOXIEXHDD</del>	3-Error	Maximum Egress QoSContexts consumed in the Bridge-Domain	Number of Egress QoS vlan matches exceeds the maximum allowed in the Bridge-Domain	firmware	"Reduce the number of Egress QoS vlan" " matches in the Bridge-Domain and try again"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>QMCRBQOSXTEXHED</del>	3-Error	Maximum Egress QosContexts consumed in the Bridge-Domain	Number of Egress QoS vlan matches exceeds the maximum allowed in the Bridge-Domain	firmware	"Reduce the number of Egress QoS vlan" matches in the Bridge-Domain and try again"
<del>QMCRBSAIPREXASE</del>	3-Error	Ingress marking profiles have exceeded the maximum number [dec]	No free ingress cos marking profile to accommodate the request	firmware	"Change config to reuse the existing profiles"
<del>QMCRBSAIPREXASE</del>	3-Error	Ingress marking profiles have exceeded the maximum number [dec]	No free ingress cos marking profile to accommodate the request	firmware	"Change config to reuse the existing profiles"
<del>QMCRBFSQIINDEXED</del>	3-Error	Internal Error in resource allocation	The system is running out of qos-handle to support specified policy-map.	firmware	""
<del>QMCRBFSQIINDEXED</del>	3-Error	Internal Error in resource allocation	The system is running out of qos-handle to support specified policy-map.	firmware	""
<del>QMCRBFSQIINDEXED</del>	3-Error	Internal Error in resource allocation	The system is running out of qos-handle to support specified policy-map.	firmware	""
<del>QMCRBFSQPIEXHED</del>	3-Error	Internal Error in resource allocation	The system is running out of qos-profiled to support the specified policy-map.	firmware	""
<del>QMCRBFSQPIEXHED</del>	3-Error	Internal Error in resource allocation	The system is running out of qos-profiled to support the specified policy-map.	firmware	""



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>QOSRESQSPRHEXHEE</del>	3-Error	Internal Error in resource allocation	The system is running out of qos-profiled to support the specified policy-map.	firmware	""
<del>QOSRESQSPRHEXHEE</del>	3-Error	Ingress Exp and qos-group marking profiles have exceeded the maximum number [dec]	No free ingress qos-group marking profile to accommodate the request	firmware	"Change config to reuse the existing profiles"
<del>QOSRESQSPRHEXHEE</del>	3-Error	Ingress Exp and qos-group marking profiles have exceeded the maximum number [dec]	No free ingress qos-group marking profile to accommodate the request	firmware	"Change config to reuse the existing profiles"
<del>QSMR4PATNQCNCIT</del>	3-Error	NEQ L4 operation not supported	Trying to configure NEQ operation.	firmware	"Remove QOS ACL configured on interface."
<del>QSMR4PATNQCNCIT</del>	3-Error	Port ranger is already allocated to ACL on this interface.\n QoS policy configuration failed. Remove QoS command from interface[chars]	ACL configured on this interface uses Port ranger. Remove ACL configuration apply QoS first and then configure ACL	firmware	"Remove ACL configured on interface."
<del>QSMR4PATNQCNCIT</del>	3-Error	Port ranger resource reserved for ACL exhausted port expansion used [chars]	Port ranger is shared between ACL and v6 QOS ACL. ACL reservation exhausted	firmware	"Remove ACL configuration or increase reservation through ROMMON variable" " QOSRANRESOURCE"
<del>QSMR4PATNQCNCIT</del>	3-Error	Port range entry on this interface has exceeded maximum permitted 8 operations further 14 match ACE will be ignored[chars]	Interface already has maximum permitted 8 14 operations	firmware	"Configure only 8 14 match ACE per interface"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>QSMCR4QOSPRCNCT</del>	3-Error	Port ranger is allocated to QOS on this interface port expansion used for configured ACL [chars]	IPv6 QOS configured on this interface uses Port ranger	firmware	"Remove IPv6 QOS configured on interface."
<del>QSMCRQOSRNDXASE</del>	3-Error	Port ranger resource reserved for QOS exhausted. policy configuration failed \nRemove other IPv6 QOS configuration or increase reservation through ROMMON [chars]	Port ranger is shared between ACL and v6 QOS ACL. QOS reservation exhausted	firmware	"Remove other IPv6 QOS ACL configuration or increase reservation through ROMMON" " <del>QOSRANCERESURE</del>
<del>QSMCR3LABL_EXHAUST</del>	3-Error	Internal Error in resource allocation	The system is running out of QoS label to support the number of traffic classes in all attached policy-maps.	firmware	"Reduce the number of distinctive class-maps matches " "or 'set' actions in attached policy-maps"
<del>QSMCR3LABL_EXHAUST</del>	3-Error	Internal Error in resource allocation	The system is running out of QoS label to support the number of traffic classes in all attached policy-maps.	firmware	"Reduce the number of distinctive class-maps matches " "or 'set' actions in attached policy-maps"
<del>QSMCR3LABL_EXHAUST</del>	3-Error	Internal Error in resource allocation	The system is running out of QoS label to support the number of traffic classes in all attached policy-maps.	firmware	"Reduce the number of distinctive class-maps matches " "or 'set' actions in attached policy-maps"
<del>QSMCRQASDRXASE</del>	3-Error	Logical level queuing resource exhausted [chars]	Maximum resources used	firmware	"Free up unused logical level classes"
<del>QSMCRQASDRXASE</del>	3-Error	Logical level queuing resource exhausted [chars]	Maximum resources used	firmware	"Free up unused logical level classes"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OS-CR-CP-RES-ERR</del>	3-Error	Logical level queuing resource exhausted [chars]	Maximum resources used	firmware	"Free up unused logical level classes"
<del>OS-CR-INS-PEX-ERR</del>	3-Error	Invalid policy-map detected during interface speed change	Shape value in policy exceeds port speed	firmware	"Configure lesser shape value which will not " "exceed interface speed"
<del>OS-CR-INS-PEX-ERR</del>	3-Error	Invalid policy-map detected during interface speed change	Shape value in policy exceeds port speed	firmware	"Configure lesser shape value which will not " "exceed interface speed"
<del>OS-CR-INS-PEX-ERR</del>	3-Error	Invalid policy-map detected during interface speed change	Shape value in policy exceeds port speed	firmware	"Configure lesser shape value which will not " "exceed interface speed"
<del>OS-CR-RR-CP-RES-ERR</del>	3-Error	Out of marking profiles to execute command	No free marking profile to accommodate the request	firmware	"Change config to reuse the existing profiles"
<del>OS-CR-RR-CP-RES-ERR</del>	3-Error	Out of marking profiles to execute command	No free marking profile to accommodate the request	firmware	"Change config to reuse the existing profiles"
<del>OS-CR-QM-CL-ERR</del>	3-Error	Exceeding the maximum queue-limit commands per class	Trying to exceed the maximum queue-limit commands allowed per class	firmware	"Try reducing queue-limit commands under the class"
<del>OS-CR-QM-CL-ERR</del>	3-Error	Exceeding the maximum queue-limit commands per class	Trying to exceed the maximum queue-limit commands allowed per class	firmware	"Try reducing queue-limit commands under the class"
<del>OS-CR-QM-CL-ERR</del>	3-Error	Exceeding the maximum queue-limit commands per class	Trying to exceed the maximum queue-limit commands allowed per class	firmware	"Try reducing queue-limit commands under the class"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>OSMCRQDQDANSHED</del>	3-Error	Exceeding the maximum qualified queue-limit commands per class	Trying to exceed the maximum qualified queue-limit commands allowed per class	firmware	"Try reducing qualified queue-limit commands " "under the class"
<del>OSMCRQDQDANSHED</del>	3-Error	Exceeding the maximum qualified queue-limit commands per class	Trying to exceed the maximum qualified queue-limit commands allowed per class	firmware	"Try reducing qualified queue-limit commands " "under the class"
<del>OSMCRQDQDANSHED</del>	3-Error	Exceeding the maximum qualified queue-limit commands per class	Trying to exceed the maximum qualified queue-limit commands allowed per class	firmware	"Try reducing qualified queue-limit commands " "under the class"
<del>OSMCRQDQDANSHED</del>	3-Error	Exceeding the maximum qualified queue-limit commands per class	Trying to exceed the maximum qualified queue-limit commands allowed per class	firmware	"Try reducing qualified queue-limit commands " "under the class"
OSMCRQDQDANSHED	3-Error	Out of TCAM/LPM resources to execute command	Lack of TCAM/LPM resources due to higher resource requirements	firmware	"Change config to reduce tcam entry usage"
OSMCRQDQDANSHED	3-Error	Out of tcam resources to execute command	Lack of tcam resources due to higher tcam resource requirements	firmware	"Change config to reduce tcam entry usage"
OSMCRQDQDANSHED	3-Error	Out of tcam resources to execute command	Lack of tcam resources due to higher tcam resource requirements	firmware	"Change config to reduce tcam entry usage"
OSMCRQDQDANSHED	3-Error	Fails to program HW policer	Can not access to HW successfully.	firmware	""
OSMCRQDQDANSHED	3-Error	Fails to program HW policer	Can not access to HW successfully.	firmware	""
OSMCRQDQDANSHED	3-Error	Fails to program HW policer	Can not access to HW successfully.	firmware	""

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>QSMCR3RCHCONF_ERR</del>	3-Error	Port channel [dec] configuration still exists at the hardware level. Please re-execute the CLI after ensuring that there is no Port-Channel configuration at the hardware.	Port-channel is still not removed completely from hardware. Wait till platform config is removed and then reapply	rsp3-qos	"Wait till Port-channel is properly removed from " "hardware and then proceed with the configuration of platform CLI ."
<del>QSMCR3RCHYEM_ERR</del>	3-Error	Priority command not acceptable at interface level	Hardware does not support priority at physical level	firmware	"Do not apply bandwidth command at interface " "level policy"
<del>QSMCR3RCHYEM_ERR</del>	3-Error	Priority command not acceptable at interface level	Hardware does not support priority at physical level	firmware	"Do not apply bandwidth command at interface " "level policy"
<del>QSMCR3RCHYEM_ERR</del>	3-Error	Priority command not acceptable at interface level	Hardware does not support priority at physical level	firmware	"Do not apply bandwidth command at interface " "level policy"
<del>QSMCR3RCHLE_EXHAUST</del>	3-Error	No free scheduler profiles available in hardware	With the new configuration there is no free profile available in the HW this could be because of dissimilar profiles configured at the same hierarchy level	firmware	"Change the config value to closest existing config"
<del>QSMCR3RCHLE_EXHAUST</del>	3-Error	No free scheduler profiles available in hardware	With the new configuration there is no free profile available in the HW this could be because of dissimilar profiles configured at the same hierarchy level	firmware	"Change the config value to closest existing config"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>QOSRMPROFILES_EXHAUST</del>	3-Error	No free scheduler profiles available in hardware	With the new configuration there is no free profile available in the HW this could be because of dissimilar profiles configured at the same hierarchy level	firmware	"Change the config value to closest existing config"
<del>QOSRMPROFILES_EXHAUST</del>	3-Error	Out of rm profiles to execute command	No free RM profile to accommodate the request	firmware	"Change config to reduce or reuse RM profiles"
<del>QOSRMPROFILES_EXHAUST</del>	3-Error	Out of rm profiles to execute command	No free RM profile to accommodate the request	firmware	"Change config to reduce or reuse RM profiles"
<del>QOSRMPROFILES_EXHAUST</del>	3-Error	Out of rm profiles to execute command	No free RM profile to accommodate the request	firmware	"Change config to reduce or reuse RM profiles"
<del>QOSACLCONF_POLICY</del>	3-Error	The configured protocol is not supported in QoS policy	Configured protocol is not supported for QoS Policy. Traffic will be matched with alternative clas-maps/class-default	firmware	" Unconfigure the ACE with unsupported protocol" " detach and re-attach the policy"
<del>QOSACLCONF_POLICY</del>	3-Error	The configured protocol is not supported in QoS policy	Configured protocol is not supported for QoS Policy. Traffic will be matched with alternative clas-maps/class-default	firmware	" Unconfigure the ACE with unsupported protocol" " detach and re-attach the policy"
<del>QOSACLCONF_POLICY</del>	3-Error	The configured protocol is not supported in QoS policy	Configured protocol is not supported for QoS Policy. Traffic will be matched with alternative clas-maps/class-default	firmware	" Unconfigure the ACE with unsupported protocol" " detach and re-attach the policy"
<del>QOSQMLIMIT_LEAF_CLASSES</del>	3-Error	Qlimit command not supported in non-leaf classes	Trying to configure qlimit in a non leaf class	firmware	"Configure qlimit only in leaf classes"
<del>QOSQMLIMIT_LEAF_CLASSES</del>	3-Error	Qlimit command not supported in non-leaf classes	Trying to configure qlimit in a non leaf class	firmware	"Configure qlimit only in leaf classes"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>QSMRQLIMIT_ERR</del>	3-Error	Qlimit command not supported in non-leaf classes	Trying to configure qlimit in a non leaf class	firmware	"Configure qlimit only in leaf classes"
<del>QSMRQLIMIT_ERR</del>	3-Error	Qlimit value is out of range	Trying to configure a qlimit value outside the supported range	firmware	"Configure qlimit value within supported range"
<del>QSMRQLIMIT_ERR</del>	3-Error	Qlimit value is out of range	Trying to configure a qlimit value outside the supported range	firmware	"Configure qlimit value within supported range"
<del>QSMRQLIMIT_ERR</del>	3-Error	Qlimit value is out of range	Trying to configure a qlimit value outside the supported range	firmware	"Configure qlimit value within supported range"
<del>QSMRQPOLY_ERR</del>	3-Error	policy-map applied on [chars] is in error condition	The policy-map applied on the printed target may not work or the stats for that target will not work.	rsp3-qos	"Collect the uea_mgr logs"
<del>QSMRQPOLY_ERR</del>	3-Error	policy-map applied on [chars] is in error condition	The policy-map applied on the printed target may not work or the stats for that target will not work.	rsp3-qos	"Collect the uea_mgr logs"
<del>QSMRQQUEUE_EXHAUSTED</del>	3-Error	Class level queuing resource exhausted [chars]	Maximum resources used	firmware	"Free up unused class level classes"
<del>QSMRQQUEUE_EXHAUSTED</del>	3-Error	Class level queuing resource exhausted [chars]	Maximum resources used	firmware	"Free up unused class level classes"
<del>QSMRQQUEUE_EXHAUSTED</del>	3-Error	Class level queuing resource exhausted [chars]	Maximum resources used	firmware	"Free up unused class level classes"
<del>QSMRQQUEUE_FLUSH_FAILED</del>	3-Error	Queue-Flush not successful	Scheduler unable to flush the queue	firmware	"Remove any shape configuration for the queue"

<b>Family-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>COMCRQLEFLSHIAD</del>	3-Error	Queue-Flush not successful	Scheduler unable to flush the queue	firmware	"Remove any shape configuration for the queue"
<del>COMCRQLEFLSHIAD</del>	3-Error	Queue-Flush not successful	Scheduler unable to flush the queue	firmware	"Remove any shape configuration for the queue"
<del>COMCFEDHPORMMCA</del>	3-Error	Fails to program HW scheduler	Can not access to HW successfully.	firmware	""
<del>COMCFEDHPORMMCA</del>	3-Error	Fails to program HW scheduler	Can not access to HW successfully.	firmware	""
<del>COMCFEDHPORMMCA</del>	3-Error	Fails to program HW scheduler	Can not access to HW successfully.	firmware	""
<del>COMCBANDWTRSHR</del>	3-Error	Shape - Bandwidth-percent values inconsistent in the hierarchy calculated bandwidth will exceed shape	Because of this new shape command Bandwidth percent configured in one of children class will get more value than its manually configured shape. Please note that bandwidth percent is calculated from parent's shapePIR	firmware	"Either configure higher shape value or " " reduce violating bandwidth-percent value"
<del>COMCBANDWTRSHR</del>	3-Error	Shape - Bandwidth-percent values inconsistent in the hierarchy calculated bandwidth will exceed shape	Because of this new shape command Bandwidth percent configured in one of children class will get more value than its manually configured shape. Please note that bandwidth percent is calculated from parent's shapePIR	firmware	"Either configure higher shape value or " " reduce violating bandwidth-percent value"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>QCMRSHAPENDVTFERRR</del>	3-Error	Shape - Bandwidth-percent values inconsistent in the hierarchy calculated bandwidth will exceed shape	Because of this new shape command Bandwidth percent configured in one of children class will get more value than its manually configured shape. Please note that bandwidth percent is calculated from parent's shapePIR	firmware	"Either configure higher shape value or " " reduce violating bandwidth-percent value"
<del>QCMRSHAPENDVTFERRR</del>	3-Error	Bandwidth in one of the children class is greater than input shape value	Children class's bandwidth should not be higher than input	firmware	"Either increase input value or decrease erring one"
<del>QCMRSHAPENDVTFERRR</del>	3-Error	Bandwidth in one of the children class is greater than input shape value	Children class's bandwidth should not be higher than input	firmware	"Either increase input value or decrease erring one"
<del>QCMRSHAPENDVTFERRR</del>	3-Error	Bandwidth in one of the children class is greater than input shape value	Children class's bandwidth should not be higher than input	firmware	"Either increase input value or decrease erring one"
<del>QCMRSHAECHDERRR</del>	3-Error	One of children class's shape config is higher	Children class's shape should not be higher than current	firmware	"Either increase input value or decrease erring one"
<del>QCMRSHAECHDERRR</del>	3-Error	One of children class's shape config is higher	Children class's shape should not be higher than current	firmware	"Either increase input value or decrease erring one"
<del>QCMRSHAECHDERRR</del>	3-Error	One of children class's shape config is higher	Children class's shape should not be higher than current	firmware	"Either increase input value or decrease erring one"
<del>QCMRSHAEPAENERRR</del>	3-Error	Shape value is greater than parent class's shape or interface's speed	Parent class's shape value cannot be smaller than current	firmware	"Configure shape value lesser than parent class's" " shape or interface's speed"
<del>QCMRSHAEPAENERRR</del>	3-Error	Shape value is greater than parent class's shape or interface's speed	Parent class's shape value cannot be smaller than current	firmware	"Configure shape value lesser than parent class's" " shape or interface's speed"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>COMCRS</del> AE_PENTRCR	3-Error	Shape value is greater than parent class's shape or interface's speed	Parent class's shape value cannot be smaller than current	firmware	"Configure shape value lesser than parent class's" "shape or interface's speed"
<del>COMCRS</del> AE_UNDRLOW	3-Error	New shape/speed value is less than the total bandwidth configured in the interface	Shape/speed configured is less than the total bandwidth configured in the interface	firmware	"Increase the shape/speed value or reduce " "the bandwidth configured in the child classes"
<del>COMCRS</del> AE_UNDRLOW	3-Error	New shape/speed value is less than the total bandwidth configured in the interface	Shape/speed configured is less than the total bandwidth configured in the interface	firmware	"Increase the shape/speed value or reduce " "the bandwidth configured in the child classes"
<del>COMCRS</del> AE_UNDRLOW	3-Error	New shape/speed value is less than the total bandwidth configured in the interface	Shape/speed configured is less than the total bandwidth configured in the interface	firmware	"Increase the shape/speed value or reduce " "the bandwidth configured in the child classes"
<del>COMCRS</del> ABEM_PENHLSI	3-Error	Internal Error in resource allocation	The system is running out of table-map resources	-	"Reduce the number of distinctive class-map " "matches in attached policy-maps"
<del>COMCRS</del> ICAM_EXHAUSN	3-Error	Internal Error in resource allocation	The system is running out of TCAM entries to support the number of traffic classes in the policy-map. The maximum number of TCAM entries is platform dependent.	firmware	"Reduce the number of classes in attached policy-maps"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>QSM3TCAMEXHAUSION</del>	3-Error	Internal Error in resource allocation	The system is running out of TCAM entries to support the number of traffic classes in the policy-map. The maximum number of TCAM entries is platform dependent.	firmware	"Reduce the number of classes in attached policy-maps"
<del>QSM3TCAMEXHAUSION</del>	3-Error	Internal Error in resource allocation	The system is running out of TCAM entries to support the number of traffic classes in the policy-map. The maximum number of TCAM entries is platform dependent.	firmware	"Reduce the number of classes in attached policy-maps"
<del>QSM3TCAMFORMMGA</del>	3-Error	Fails to program TCAM for policymap [chars]	Can not access to HW successfully.	firmware	LOG_STD_ACTION
<del>QSM3TCAMFORMMGA</del>	3-Error	Fails to program TCAM for policymap [chars]	Can not access to HW successfully.	firmware	LOG_STD_ACTION
<del>QSM3TCAMFORMMGA</del>	3-Error	Fails to program TCAM for policymap [chars]	Can not access to HW successfully.	firmware	LOG_STD_ACTION
<del>QSM3QOSHCYUSPDE</del>	3-Error	Only two-level hierarchy is supported on TDM/OC3/OC12 interfaces	Unsupported QoS hierarchy on TDM/OC3/OC12 interfaces	firmware	"Change config to reduce to two-level policy"
<del>QSM3QOSHCYUSPDE</del>	3-Error	Only two-level hierarchy is supported on TDM/OC3/OC12 interfaces	Unsupported QoS hierarchy on TDM/OC3/OC12 interfaces	firmware	"Change config to reduce to two-level policy"
<del>QSM3QOSHCYUSPDE</del>	3-Error	Only two-level hierarchy is supported on TDM/OC3/OC12 interfaces	Unsupported QoS hierarchy on TDM/OC3/OC12 interfaces	firmware	"Change config to reduce to two-level policy"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>QSMCRNSIPREDHIES</del>	3-Error	Installed Policy-map has filters which are not supported. Detach re-configure and attach the policy	Policy-map has filters which are not supported	firmware	"Change config to use only supported filters" " detach and re-attach the policy"
<del>QSMCRNSIPREDQMUNS</del>	3-Error	Qlimit unit other than usec & byte is not supported	Trying to configure a qlimit unit other than bytes or usec	firmware	"Configure qlimit in terms of bytes or usec"
<del>QSMCRNSIPREDQMUNS</del>	3-Error	Qlimit unit other than usec & byte is not supported	Trying to configure a qlimit unit other than bytes or usec	firmware	"Configure qlimit in terms of bytes or usec"
<del>QSMCRNSIPREDQMUNS</del>	3-Error	Qlimit unit other than usec & byte is not supported	Trying to configure a qlimit unit other than bytes or usec	firmware	"Configure qlimit in terms of bytes or usec"
<del>QSMCRGAGPIEXHICFW</del>	4-Warning	Number of output child policer's are more than the block size. Configure the block size accordingly [chars]	The system is running out of policers to support the specified policy-maps.	firmware	"Reduce the number of policer usage in attached input policy-maps. "
<del>QSMCRGAGPIEXHICFW</del>	4-Warning	Output Parent policer block size can't be allocated configuration has exceeded hardware limitation for policymap [chars]	The system is running out of policers to support the specified policy-maps.	firmware	"Reduce the number of policer usage in attached input policy-maps. "
<del>QSMCRPSHEDIEXHICFW</del>	4-Warning	[chars] has exceeded the hardware limitation	The system is running out of output queues to support the specified policy-map.	firmware	"Remove the EFPs from the interfaces"
<del>QSMCRPSHEDIEXHICFW</del>	4-Warning	[chars] has exceeded the hardware limitation	The system is running out of output queues to support the specified policy-map.	firmware	"Remove the EFPs from the interfaces"
<del>QSMCRDRESREXHEED</del>	4-Warning	[chars] has exceeded its maximum number : [dec]	Max number of FLOW ID allocation has reached	firmware	"reduce the number of flow id allocation for the interface"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>CSMCFRFRDREXCHED</del>	4-Warning	[chars] has exceeded its maximum number : [dec]	Max number of FLOW ID allocation has reached	firmware	"reduce the number of flow id allocation for the interface"
<del>CSMCFRFRDREXCHED</del>	4-Warning	The policy-map [chars] is detached due to the event [chars].	The attached policy-map becomes invalid due to the change of the port speed.	firmware	"Change the shaping/bandwidth of the output policy-map and re-attach to the interface ."
<del>CSMCFRFRDREXCHED</del>	4-Warning	The policy-map [chars] is detached due to the event [chars].	The attached policy-map becomes invalid due to the change of the port speed.	firmware	"Change the shaping/bandwidth of the output policy-map and re-attach to the interface ."
<del>CSMCFRFRDREXCHED</del>	4-Warning	The policy-map [chars] is detached due to the event [chars].	The attached policy-map becomes invalid due to the change of the port speed.	firmware	"Change the shaping/bandwidth of the output policy-map and re-attach to the interface ."
<del>CSMCFRFRDREXCHGW</del>	4-Warning	Policer configuration has exceeded hardware limitation for policymap [chars]	The system is running out of policers to support the specified policy-maps.	firmware	"Reduce the number of policer usage in attached input policy-maps. "
<del>CSMCFRFRDREXCHGW</del>	4-Warning	Policer configuration has exceeded hardware limitation for policymap [chars]	The system is running out of policers to support the specified policy-maps.	firmware	"Reduce the number of policer usage in attached input policy-maps. "
<del>CSMCFRFRDREXCHGW</del>	4-Warning	Policer configuration has exceeded hardware limitation for policymap [chars]	The system is running out of policers to support the specified policy-maps.	firmware	"Reduce the number of policer usage in attached input policy-maps. "
<del>CSMCFRFRDREXCHED</del>	4-Warning	Policer profiles have exceeded the maximum number [dec]	Max number for Qos policer profiles has reached	firmware	"Reduce the number of policer usage in attached input policy-maps. "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>QSMCRPOLICEP_EXCEED</del>	4-Warning	Policer profiles have exceeded the maximum number [dec]	Max number for Qos policer profiles has reached	firmware	"Reduce the number of policer usage in attached input policy-maps. "
<del>QSMCRQUEUE_EXCEED_HW</del>	4-Warning	Number of queues has exceeded the hardware limitation for VOQs	The system is running out of output queues to support the specified policy-map.	firmware	"Remove the EFPs from the interfaces"
<del>QSMCRQUEUE_EXCEED_HW</del>	4-Warning	Number of queues has exceeded the hardware limitation for VOQs	The system is running out of output queues to support the specified policy-map.	firmware	"Remove the EFPs from the interfaces"
<del>QSMCRQUEUE_EXCEED_HW</del>	4-Warning	Queue configuration has exceeded hardware limitation for policymap [chars]	The system is running out of output queues to support the specified policy-map.	firmware	"Reduce the number of the traffic classes in attached output policy-maps."
QSMGR4STATISTICS_FAIL	4-Warning	Internal Error in reading statistics	Can not access to HW to read statistics successfully.	firmware	LOG_STD_ACTION
QSMGR4STATISTICS_FAIL	4-Warning	Internal Error in reading statistics	Can not access to HW to read statistics successfully.	firmware	LOG_STD_ACTION
QSMGR4STATISTICS_FAIL	4-Warning	Internal Error in reading statistics	Can not access to HW to read statistics successfully.	firmware	LOG_STD_ACTION
<del>QSMCRVOQCONNECTOR_EXCEED_HW</del>	4-Warning	Number of VOQ connectors has exceeded the hardware limitation for [chars] in asic id : [dec]	The system is running out of output queues to support the specified policy-map.	firmware	"Remove the EFPs from the interfaces"
<del>QSMCRVOQCONNECTOR_EXCEED_HW</del>	4-Warning	Number of VOQ connectors has exceeded the hardware limitation for [chars] in asic id : [dec]	The system is running out of output queues to support the specified policy-map.	firmware	"Remove the EFPs from the interfaces"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QUCC_ASYNC3CISLOST	3-Error	Unit [dec] Clear to Send Lost	-	-	"Check the serial interface cable and/or communication equipment such as the channel service unit/data service unit CSU/DSU."
QUCC_ETHERINITFAIL	1-Alert	msgtxt_initfail	A software or hardware error occurred.	-	"Copy the error message exactly as it appears and report it to your technical support representative."
QUCC_ETHERLOSCARR	1-Alert	Unit [dec] lost carrier. Transceiver problem?	The Ethernet 10BaseT cable is unplugged.	-	"Connect the 10BaseT Ethernet cable."
QUCC_ETHERUNDERFLOW	3-Error	Unit [dec] underflow error	While transmitting a frame the Ethernet controller chip's local buffer received insufficient data because data could not be transferred to the chip fast enough to keep pace with its output rate. Normally such a problem is temporary depending on transient peak loads within the system.	-	"The system should recover. No action is required. If the problem recurs it indicates a hardware error that might be related to data traffic patterns. Copy the error message exactly as it appears and report it to your technical support representative."
QUCC_ETHER5COLL	5-Notice	Unit [dec] excessive collisions. Retry limit [dec] exceeded	An Ethernet cable is broken or unterminated.	-	"Check cables for proper connections termination and so on."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QUICC_EIHER5HBEAT	5-Notice	Unit [dec] heartbeat check failure	The Ethernet cable might be too long or there could be too many repeaters such that the delay from one end to the other is too long. The Ethernet cable might be overloaded with too many users.	-	"Verify that your Ethernet cable is the correct length and that you do not have too many repeaters in use. If these are not the problem try removing hosts from the Ethernet segment to reduce the load."
QUICC_EIHER5LATECOLL	5-Notice	Unit [dec] late collision error	The Ethernet cable might be too long or there could be too many repeaters such that the delay from one end to the other is too long. The Ethernet cable might be overloaded with too many users.	-	"Verify that your Ethernet cable is the correct length and that you do not have too many repeaters in use. If these are not the problem try removing hosts from the Ethernet segment to reduce the load."
QUICC_SERIAL3INITFAIL	1-Alert	msgtxt_initfail	The serial interface controller of the QUICC chip could not be initialized or started for operation. There is probably a hardware problem.	-	"Power cycle the system. If the error reoccurs replace the unit."
QUICC_SERIAL3CISLOST	3-Error	Unit [dec] Clear to Send Lost	-	-	"Check the serial interface cable and or communication equipment such as the channel service unit/data service unit CSU/DSU."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QUCC_SERIAL3UNDRFLOW	3-Error	Unit [dec] underflow error	While transmitting a frame the serial controller chip's local buffer received insufficient data because data could not be transferred to the chip fast enough to keep pace with its output rate. Normally such a problem is temporary depending on transient peak loads within the system.	-	"The system should recover. No action is required. If the problem reoccurs it indicates a hardware error that might be related to data traffic patterns. Copy the error message exactly as it appears and report it to your technical support representative."
QUCC_SERIAL5UNHFLAP	5-Notice	Unit [dec] excessive modem control changes	-	-	"Check the serial interface cable. The error can occur if the cable is disconnected or has come loose and is picking up noise. If the cable appears to be connected correctly check the equipment connected to the cable."
QUCC_SERIAL5LCSICARR	5-Notice	Unit [dec] carrier detect signal lost during message reception	-	-	"Check the serial interface cable. The error can occur if the cable is disconnected."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
QUICC-1-NOMEMORY	1-Alert	msgtxt_nomemory	The MC68360/QUICC CPU was unable to access the memory it needs to carry out its functions. Here are some possible causes. The network is large requiring a lot of memory for routing tables and so on. The router configuration has many features enabled each of which require a certain amount of memory. A software error memory leak exists.	-	"Reduce system activity to ease the memory demand or upgrade to a larger memory configuration."
QUICC-3-OWNERR	3-Error	msgtxt_ownerror	An internal software error occurred.	-	"Call your technical support representative to obtain a software upgrade."
QUICC-3-UCODEREV_UNKN	3-Error	Unknown microcode revision number: [dec]	The MC68360/QUICC CPU was running an unexpected version of microcode. This could be possible if a new version of the QUICC chip was released or if a very old version was used in the manufacturing process. This could also occur if a new version of microcode was released to fix any bugs	-	"A decrease in performance might occur for any async interfaces running PPP. Call your technical support representative if this is an issue."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
R4K_MP-3-CRASHED	3-Error	CPU [dec] has now crashed a total of [dec] times.	The indicated CPU crashed and has been restarted.	msw	LOG_STD_ACTION
RKM5DHGAECEJBF	5-Notice	Delegated call to 0x[hec] failed out of buffers	An RPC call to the indicated function failed.	msw	LOG_STD_ACTION
RAC-3-RACIPL	3-Error	DHCP is already running on interface [chars]	The interface already has a DHCP originated address via some other system mechanism	-	"Verify the system configuration"
RAC-3-RACNOIPL	3-Error	Can not find lease information for interface [chars]	Internal error - DHCP lease information is missing for the interface	-	"Report the problem and how it can be reproduced to Cisco TAC"
RAC-3-RACNOQ	3-Error	Can't create RAC work queue	Internal error - probable cause is insufficient memory resources	-	"Check available memory."
RADIAN2IL_SYNC_ERR	2-Critical	[chars] Radian IL sync/align error [chars]	Radian IL sync or align error with Cobalt4 IL	cmts-platform-infr	LOG_STD_ACTION
RADIAN3CMIC_FAIL	3-Error	Radian [dec] CMIC register [chars] fail for [chars] rc = [dec]	Radian CMIC register read or write operation failure	cmts-platform-infr	LOGSIDSHTECH_ACTION
RADIAN3IL_INTR_ERR	3-Error	Radian slot/unit [dec]/[dec] IL ERR INTR: [chars]	Radian IL ERROR interrupt occurs	cmts-platform-infr	LOG_STD_ACTION
RADIAN3INIT_FAIL	3-Error	[chars] for slot: [dec] unit: [dec] rc: [dec]	Radian init failure	cmts-platform-infr	LOG_STD_ACTION
RADIAN3MMU_INTR_ERR	3-Error	Radian slot/unit [dec]/[dec] MMU ERR INTR: [chars]	Radian MMU ERROR interrupt occurs	cmts-platform-infr	LOG_STD_ACTION
RADIAN3PE_INTR_ERR	3-Error	Radian slot/unit [dec]/[dec] PE ERR INTR: [chars]	Radian PreEnqueue ERROR interrupt occurs	cmts-platform-infr	LOG_STD_ACTION
RADIAN3SCHAN_FAIL	3-Error	Radian [dec] SCHAN [chars] fail for [chars] rc = [dec]	Radian S-Channel read or write operation failure	cmts-platform-infr	LOGSIDSHTECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RADIAN5VLI_ACCESS_ERR	3-Error	VLI Err: [chars]	Radian VLI access error	cmts-platform-infr	LOG_STD_ACTION
RADIAN5VLI_SWITCHOVER_TIMEOUT	3-Error	Haba VLI switchover: wait [chars] timeout	Haba switchover timeout	cmts-platform-infr	LOG_STD_ACTION
RADIAN5IL_NIR_MSG	5-Notice	Radian slot/unit [dec]/[dec] IL INTR: [chars]	Radian IL minor ERROR interrupt occurs	cmts-platform-infr	LOG_STD_ACTION
RADIAN5MMU_NIR_MSG	5-Notice	Radian slot/unit [dec]/[dec] MMU INTR: [chars]	Radian MMU minor ERROR interrupt occurs	cmts-platform-infr	LOG_STD_ACTION
RADIAN5PDO_NIR_MSG	5-Notice	Radian slot/unit [dec]/[dec] PDO INTR: [chars]	Radian PostDequeue minor ERROR0 interrupt occurs	cmts-platform-infr	LOG_STD_ACTION
RADIAN5PD1_NIR_MSG	5-Notice	Radian slot/unit [dec]/[dec] PD1 INTR: [chars]	Radian PostDequeue minor ERROR1 interrupt occurs	cmts-platform-infr	LOG_STD_ACTION
RADIAN5PE_NIR_MSG	5-Notice	Radian slot/unit [dec]/[dec] PE INTR: [chars]	Radian PE minor ERROR interrupt occurs	cmts-platform-infr	LOG_STD_ACTION
RADIAN5VLI_SWITCHOVER_MSG	5-Notice	Haba VLI switchover: [chars] in [node]s	Haba switchover message	cmts-platform-infr	LOG_STD_ACTION
RADIAN5XLPORT_NIR_MSG	5-Notice	Radian slot/unit [dec]/[dec] XLPORT INTR: [chars]	Radian XLPORT minor ERROR interrupt occurs	cmts-platform-infr	LOG_STD_ACTION
RADIO2RF_OVERIEMP	2-Critical	Radio[dec]/0 ODU [dec]: over temperature [chars]	Most likely cause is hardware failure or solar heating	ubr-radiop2p-hw	"Keep the RF ODU cool"
RADIO3SELF_TEST_FAILED	3-Error	Radio[dec]/0 failed self-test	Most likely a hardware failure	ubr-radiop2p-hw	"Call tech support"
RADIO4BAD_IF_PIC	4-Warning	Radio[dec]/0 bad IF PIC version [dec] on IDU	Most likely a hardware configuration oversight	ubr-radiop2p-hw	"Call tech support"
RADIO4BAD_RF_PIC	4-Warning	Radio[dec]/0 bad RF PIC version [dec] on ODU [dec]	Most likely a hardware configuration oversight	ubr-radiop2p-hw	"Call tech support"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RADIO4CHECKSUM_ERR	4-Warning	Radio[dec]/0 radio phy eeprom \[chars]\ checksum stored:0x[node]x calculated:0x[node]x	Most likely cause is Shut or No Shut command	ubr7200	"Enter the No Shut command"
RADIO4DSPHPI_TIMEOUT	4-Warning	Radio[dec]/0 HPI timeout while attempting to access DSP \[chars]\	A DSP on the RADIO line card was not granting access to its memory. Most likely cause is a DSP firmware internal error.	ubr7200	LOG_STD_ACTION
RADIO4DSPINDERR	4-Warning	Radio[dec]/0 Error processing indication from DSP \[chars]\ [chars]:[dec]	A DSP on the RADIO line card generated an indication message that could not be processed. This can happen when the router is operating under severe traffic load.	ubr7200	LOG_STD_ACTION
RADIO4DSPSPURRESP	4-Warning	Radio[dec]/0 spurious DSP response from \[chars]: [node]x [node]x [node]x [node]x [node]x [node]x	A DSP on the RADIO line card generated a response message unexpectedly. This can happen when the router is operating under severe traffic load.	ubr7200	LOG_STD_ACTION
RADIO4DSPULOFLOW	4-Warning	Radio[dec]/0 uplink message queue overflow reported by DSP \[chars]\	At least one DSP-to-router message was lost due to that DSP's uplink queue being full. This can happen when many thresholds are being triggered or expiring at the same time.	ubr7200	"Change thresholds and/or reduce histogram/timeline usage to lower the load on the system"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
RADIO4#FGADONE#LOW	4-Warning	Radio[dec]/0 DONE pin on FPGA \[chars]\ did not assert after downloading	The DONE pin of a FPGA device on the RADIO line card did not assert after the downloading of the device. This probably indicates an existing or developing hardware failure.	ubr7200	LOG_STD_ACTION
RADIO4#FGANIP#HIGH	4-Warning	Radio[dec]/0 INIT pin on FPGA \[chars]\ asserted during downloading	The INIT pin of a FPGA device on the RADIO line card asserted midway through the downloading of the device. Most likely cause is corrupted FPGA image.	ubr7200	LOG_STD_ACTION
RADIO4#FGANIP#LOW	4-Warning	Radio[dec]/0 INIT pin on FPGA \[chars]\ not asserted when PROG pin asserted	The INIT pin of a FPGA device on the RADIO line card did not assert when the PROG pin was asserted. This indicates either a faulty FPGA device or software problem resetting it.	ubr7200	LOG_STD_ACTION
RADIO-4-IF_COMM	4-Warning	Radio[dec]/0 IDU IF internal serial communication error - [chars]	Most likely cause is a loose IF baby board	ubr-radiop2p-hw	"Replace hardware"
RADIO-4-IF_OSC	4-Warning	Radio[dec]/0 Internal [chars] Oscillator out of Lock [chars]	Most likely cause is vibration or hardware failure	ubr-radiop2p-hw	"Replace internal card"
RADIO#NEWRF#FROM	4-Warning	Radio[dec]/0 Unsupported IF PIC major eeprom version [node]on IDU	IOS should be upgraded to support the new eeprom	ubr-radiop2p-sw	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RADIO4NEWER_RF_EEPROM	4-Warning	Radio[dec]/0 Unsupported RF PIC major eeprom version [node]on ODU [dec]	LOG_STD_ACTION	ubr-radiop2p-sw	"Call tech support - upgrade IOS"
RADIO4NO_HWCAP_HHD	4-Warning	Radio[dec]/0 could not find HW Capabilities field in IDPROM	Most likely cause is an improperly-programmed IDPROM	ubr7200	"Have the IDPROM on the linecard reprogrammed"
RADIO4-NO_IMAGE	4-Warning	[chars][dec]/[dec] Chip \[chars]: failed to find image given current configuration	Most likely configured to use external files	ubr-radiop2p-sw	"Change configuration to use internal files"
RADIO4-PHY_REQ	4-Warning	Radio[dec]/0 link synchronization [chars].	Most likely cause loose ODU cable	ubr7200	"Check all cables"
RADIO4PHY_SYNC_FAIL	4-Warning	Radio[dec]/0 link synchronization [chars].	Most likely cause loose ODU cable	ubr7200	"Check all cables"
RADIO4PHY_SYNC_OK	4-Warning	Radio[dec]/0 link synchronization acquired.	Most likely cause is No Shut command	ubr7200	"None"
RADIO4PHY_SYNC_RECK	4-Warning	Radio[dec]/0 link synchronization re-acquired.	Most likely cause is No Shut command on remote end	ubr7200	"None"
RADIO4-RF_AGC	4-Warning	Radio[dec]/0 ODU [dec] max transmitter power exceeded [chars]	Most likely cause is hardware failure	ubr-radiop2p-hw	"Replace RF ODU"
RADIO4RF_ANTIENNA	4-Warning	Radio[dec]/0 ODU [dec] is [chars]	Most likely cause is a disconnected cable	ubr-radiop2p-hw	"Check or replace cable from UBR to the Out Door Unit"
RADIO4-RF_COMM	4-Warning	Radio[dec]/0 ODU [dec] serial communication error - [chars]	Most likely cause is a disconnected cable	ubr-radiop2p-hw	"Check or replace cable from UBR to the Out Door Unit"
RADIO4-RF_OSC	4-Warning	Radio[dec]/0 ODU [dec] [chars] Oscillator out of Lock [chars]	Most likely cause is vibration or hardware failure	ubr-radiop2p-hw	"Replace electronics on Out Door Unit"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RADIO-4-RF_TEMP	4-Warning	Radio[dec]/0 ODU [dec]: temperature is [dec] degrees C threshold is [dec] degrees C	Most likely cause is hardware failure or solar heating	ubr-radiop2p-hw	"Keep the RF ODU cool"
RADIO-4-RF_VOLT	4-Warning	Radio[dec]/0 ODU [dec]: supply voltage out of range [chars]	Most likely cause is hardware failure	ubr-radiop2p-hw	"Replace RF ODU"
RADIO5CLEAR_METRICS	5-Notice	Radio[dec]/0 link metrics cleared	User requested the link metrics be cleared	ubr7200	"none"
RADIO-5-CONFIG_HW	5-Notice	Radio[dec]/0 hardware does not support requested configuration: [chars]	Most likely cause is incorrect configuration	ubr-radiop2p-sw	"Change the configuration to match the hardware"
RADIO5CONFIG_MISMATCH	5-Notice	Radio[dec]/0 invalid or inconsistent configuration requested [chars]	Most likely cause is the ARQ settings are not supported by the current radio channel parameters	ubr7200	"Change ARQ settings to allowed values given the current radio channel parameters. You can use the radio arq reset command to do this."
RADIO5IMAGE_BAD_CRC	5-Notice	[chars][dec]/[dec] detected a bad CRC while downloading image \[chars]\ to chip \[chars]\	Most likely a protocol error while downloading	ubr-radiop2p-sw	-
RADIO5IMAGE_TIMEOUT	5-Notice	[chars][dec]/[dec] timeout trying to open image \[chars]\ for chip \[chars]\	Most likely a protocol error while opening	ubr-radiop2p-sw	-
RADIO5LOCAL_IN_SYNC	5-Notice	Radio[dec]/0 Link synchronization acquired.	Phy layer successfully acquired link.	ubr7200	"None"
RADIO5LOCAL_NO_CW	5-Notice	Radio[dec]/0 Still trying to establish link validate codeword.	Most likely cause remote system is not transmitting on correct frequency	ubr7200	"No Shut remote system"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RADIOLOCAL_NO_FREQ	5-Notice	Radio[dec]/0 Still trying to establish link frequency sync.	Most likely cause remote system is not transmitting on correct frequency	ubr7200	"No Shut remote system"
RADIOLOCAL_NO_SYNC	5-Notice	Radio[dec]/0 Still trying to establish link timing sync.	Most likely cause remote system is not transmitting.	ubr7200	"No Shut remote system"
RADIOLOCAL_NO_TRANSMI	5-Notice	Radio[dec]/0 ODU safety interlock is preventing transmission. Check ODU and cables. [chars]	Most likely cause cable not attached ODU overheated	ubr7200	"Check ODU cable"
RADIOLOCAL_NO_VITERBI	5-Notice	Radio[dec]/0 Still trying to establish link viterbi sync.	Most likely cause remote system is not transmitting on correct frequency	ubr7200	"No Shut remote system"
RADIO5MEIRCS_THRESH	5-Notice	Radio[dec]/0 [chars] per [chars] threshold met[dec]>=[dec]	Most likely cause is a mis-aligned antenna	ubr7200	"Re-align the antennas"
RADIO5-PHY_RETRY	5-Notice	Radio[dec]/0 event [node]s in state [node]s	Most likely cause incorrect configuration	ubr7200	"Review configuration and hardware capabilities"
RADIO5PHY_SYNC_LOST	5-Notice	Radio[dec]/0 Lost link. Check remote transmitter.	Most likely cause remote system is not transmitting.	ubr7200	"No Shut remote system"
RADIO5REMOTE_LOST_SYNC	5-Notice	Radio[dec]/0 Remote end reports: [chars]	Most likely cause cable not attached ODU overheated	ubr7200	"Check ODU cables"
RADIO5REMOTE_NO_SYNC	5-Notice	Radio[dec]/0 Remote end reports: Unable to acquire link synchronization.	Most likely cause cable not attached ODU overheated	ubr7200	"Check ODU cables"
RADIO5-THRESHOLD	5-Notice	Radio[dec]/0 [chars] [chars] threshold crossed ODU [dec]	Most likely cause is a user defined threshold	ubr7200	"none"
RADIO5IMAGE_NOT_FOUND	6-Information	[chars][dec]/[dec] could not find image \[chars]\ for chip \[chars]\	Most likely a typo when set the url of the image	ubr-radiop2p-sw	"Try again"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RADIOSELFTESTSUCCESS	6-Information	Radio[dec]/0 self-test successful	Passed a self-diagnostic	ubr-radiop2p-hw	"This is a good thing"
<del>RADIUSSECRETLEASE</del>	3-Error	polaris-aaa	%s : Dynamic socket pool limit reached Max : %d	All Source ports are exhausted	LOG_STD_ACTION
<del>RADIUSSECRETLEASEEND</del>	3-Error	polaris-aaa	%s : Dynamic socket pool limit is still at Maximum %d after clean up	All Source port are exhausted even after cleanup	LOG_STD_ACTION
<del>RADIUSSECRETBOFLOW</del>	3-Error	polaris-aaa	Radius I/O buffer has overflowed for[chars] with length %d	An unusually large number of RADIUS attributes has caused AAA to overflow its RADIUS I/O buffer.	LOG_STD_ACTION
<del>RADIUSSECRETPARSE</del>	3-Error	polaris-aaa	Radius Parse FAIL due to op decode/bad packet	When Radius Parse response op decode/bad packet	LOG_STD_ACTION
<del>RADIUSSECRETSTART</del>	3-Error	polaris-aaa	Failed to start radius timer.	Radius timer failed to start	LOG_STD_ACTION
<del>RADIUSSECRETSTOP</del>	3-Error	polaris-aaa	Failed to stop radius timer.	Radius timer failed to stop	LOG_STD_ACTION
<del>RADIUSSECRETDEF</del>	3-Error	polaris-aaa	Key definition ignored.	The user is attempting to store either a corrupted shared secret or memory allocation failed during secret definition. Any existing shared secret will be preserved.	LOG_STD_ACTION
<del>RADIUSSECRETUDP</del>	3-Error	polaris-aaa	Cannot open UDP socket for service[chars]	The router is unable to open a socket for UDP communications by the indicated service. Most of the time another service might be using the same port.	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>RADIUS</del> <del>SC</del> <del>ERR</del>	6-Information	polaris-aaa	Group[chars]: No active radius servers found. Id %d.	This error message occurs when all the servers configured in a server group are found to be unresponsive.	LOG_STD_NO_ACTION
<del>RADIUS</del> <del>SC</del> <del>ERR</del>	6-Information	polaris-aaa	Unable to process attribute list.	The attribute list is syntactically incorrect.	LOG_STD_NO_ACTION
<del>RADIUS</del> <del>SC</del> <del>ERR</del>	6-Information	polaris-aaa	Invalid packet posted to RADIUS.	Radius not able to process a packet as it is invalid	LOG_STD_NO_ACTION
<del>RADIUS</del> <del>SC</del> <del>ERR</del>	6-Information	polaris-aaa	RADIUS server[chars]:%u	-	-
<del>RADIUS</del> <del>SC</del> <del>ERR</del>	6-Information	polaris-aaa	RADIUS server[chars]:%u	-	-
<del>RADIUS</del> <del>ALL</del> <del>ERR</del>	3-Error	Group [chars]: No active radius servers found. Id [dec].	This error message occurs when all the servers configured in a server group are found to be unresponsive.	aaa	"Check the network connectivity to the RADIUS " "servers and check that the servers are running."
<del>RADIUS</del> <del>ALL</del> <del>ERR</del>	3-Error	Group [chars]: No active radius servers found. Id [dec].	This error message occurs when all the servers configured in a server group are found to be unresponsive.	aaa	"Check the network connectivity to the RADIUS " "servers and check that the servers are running."
<del>RADIUS</del> <del>BU</del> <del>ERR</del>	3-Error	Radius I/O buffer has overflowed	The given server is not on the global public servers list. This is an internal consistency error	aaa	LOG_STD_ACTION
<del>RADIUS</del> <del>BU</del> <del>ERR</del>	3-Error	Radius I/O buffer has overflowed	The given server is not on the global public servers list. This is an internal consistency error	aaa	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>RALSCANNOPEN_SOCKET</del>	3-Error	Cannot open UDP socket for service [chars]	The router is unable to open a socket for UDP communications by the indicated service. Most of the time another service might be using the same port.	aaa	"Check your configuration to make sure that no " "other services are using the same port. " "If not able to debug the issue enter <CmdBold>show " <del>"<b>running-config</b>&lt;/CmdBold&gt;</del> and contact your technical " "support representative for assistance."
<del>RALSCANNOPEN_SOCKET</del>	3-Error	Cannot open UDP socket for service [chars]	The router is unable to open a socket for UDP communications by the indicated service. Most of the time another service might be using the same port.	aaa	"Check your configuration to make sure that no " "other services are using the same port. " "If not able to debug the issue enter <CmdBold>show " <del>"<b>running-config</b>&lt;/CmdBold&gt;</del> and contact your technical " "support representative for assistance."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RADIUSCORRUPTIONEXT	3-Error	Bad Magic pattern in [chars]:0x[hec] magic:0x[hec]!	The magic pattern imprinted on the internal hash table data structures in RADIUS subsystem is missing and indicates memory corruption. The memory is getting overwritten by a misbehaving process. The traceback and the process information is generated to the result of the error.	aaa	"Check bug toolkit on Cisco web-site to look for a " "bug that has symptoms similar to the one occurred. " "If there is no entry for the problem you faced " "collect the system message text exactly as it " "appears on the console or in the system log. " "Enter <CmdBold>show tech-support<NoCmdBold> " "command contact your technical support " "representative and provide the representative " "with the gathered information."
RADIUSCORRUPTIONEXT	3-Error	Bad Magic pattern in [chars]:0x[hec] magic:0x[hec]!	The magic pattern imprinted on the internal hash table data structures in RADIUS subsystem is missing and indicates memory corruption. The memory is getting overwritten by a misbehaving process. The traceback and the process information is generated to the result of the error.	aaa	"Check bug toolkit on Cisco web-site to look for a " "bug that has symptoms similar to the one occurred. " "If there is no entry for the problem you faced " "collect the system message text exactly as it " "appears on the console or in the system log. " "Enter <CmdBold>show tech-support<NoCmdBold> " "command contact your technical support " "representative and provide the representative " "with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RADIUS3-DATAERROR	3-Error	Warning: [chars]	The given data passed into the Radius subsystem is considered invalid and may result in loss of attributes.	aaa	"Please collect traceback and contact your technical " "support representative."
RADIUS3-DATAERROR	3-Error	Warning: [chars]	The given data passed into the Radius subsystem is considered invalid and may result in loss of attributes.	aaa	"Please collect traceback and contact your technical " "support representative."
RADIUS3-FORKFAIL	3-Error	Failed to fork process for [chars].	Quite likely we ran out of memory. Other explanations are possible.	aaa	"If this message recurs enter <CmdBold>show " " <del>techsupport</del> <NoCmdBold> command and call your " "technical support representative for assistance."
RADIUS3-FORKFAIL	3-Error	Failed to fork process for [chars].	Quite likely we ran out of memory. Other explanations are possible.	aaa	"If this message recurs enter <CmdBold>show " " <del>techsupport</del> <NoCmdBold> command and call your " "technical support representative for assistance."
RADIUS3-FORMAILONG	3-Error	Format string too long. Maximum allowed length is [dec].	The user is attempting to configure a format string with a prefix that is too long.	aaa	"Enter a shorter string to configure."
RADIUS3-FORMAILONG	3-Error	Format string too long. Maximum allowed length is [dec].	The user is attempting to configure a format string with a prefix that is too long.	aaa	"Enter a shorter string to configure."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RADIUS-3-IDENTFAIL	3-Error	Saving of unique accounting ident aborted. Configuration has been modified.	The configuration has been modified. We can not save the unique accounting IDENT to nvram. The message is to inform the user that the saving of unique accounting ident is aborted due to the change in configuration.	aaa	"Save the configuration and try again. If the error persists " "Enter <CmdBold>show <del>tech-support</del> <NoCmdBold> contact your Cisco " "technical support representative and provide the representative " "with the gathered information for assistance."
RADIUS-3-IDENTFAIL	3-Error	Saving of unique accounting ident aborted. Configuration has been modified.	The configuration has been modified. We can not save the unique accounting IDENT to nvram. The message is to inform the user that the saving of unique accounting ident is aborted due to the change in configuration.	aaa	"Save the configuration and try again. If the error persists " "Enter <CmdBold>show <del>tech-support</del> <NoCmdBold> contact your Cisco " "technical support representative and provide the representative " "with the gathered information for assistance."
RADIUS3INVALID_PACKET	3-Error	Invalid packet posted to RADIUS.	Radius not able to process a packet as it in invalid	aaa	LOG_SID_NO_ACTION
RADIUS3INVALID_PACKET	3-Error	Invalid packet posted to RADIUS.	Radius not able to process a packet as it in invalid	aaa	LOG_SID_NO_ACTION
RADIUS3INVALIDFORMAT	3-Error	Invalid Nas Port Format: [chars] [chars]	The user is attempting to configure an incorrect format string.	aaa	"Enter a 32 character string using supported " "characters only."
RADIUS3INVALIDFORMAT	3-Error	Invalid Nas Port Format: [chars] [chars]	The user is attempting to configure an incorrect format string.	aaa	"Enter a 32 character string using supported " "characters only."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>RADIUS4FIBSENDFAILED</del>	3-Error	Radius ipv4 send failed due to FIB error. Error code: [dec].	Radius not able to send udp packets as fib failed	aaa	LOG_SID_NO_ACTION
<del>RADIUS4FIBSENDFAILED</del>	3-Error	Radius ipv4 send failed due to FIB error. Error code: [dec].	Radius not able to send udp packets as fib failed	aaa	LOG_SID_NO_ACTION
<del>RADIUS3MALLOCFAILED</del>	3-Error	Insufficient memory : [chars].	Memory allocation failed due to insufficient memory	aaa	LOG_SID_NO_ACTION
<del>RADIUS3MALLOCFAILED</del>	3-Error	Insufficient memory : [chars].	Memory allocation failed due to insufficient memory	aaa	LOG_SID_NO_ACTION
<del>RADSOCCUNGRSPOE</del>	3-Error	Accounting message [chars] for session [node] failed to receive Accounting Response.	Maximum number of retransmissions is exceeded. The network is not accessible or the RADIUS server is down.	aaa	"Check the network connectivity to the RADIUS " servers and check that the servers are running. " "If not able to debug the issue enter <CmdBold>show " <del>"luring conf- No CmdBol</del> and contact your technical " "support representative for assistance."
<del>RADSOCCUNGRSPOE</del>	3-Error	Accounting message [chars] for session [node] failed to receive Accounting Response.	Maximum number of retransmissions is exceeded. The network is not accessible or the RADIUS server is down.	aaa	"Check the network connectivity to the RADIUS " servers and check that the servers are running. " "If not able to debug the issue enter <CmdBold>show " <del>"luring conf- No CmdBol</del> and contact your technical " "support representative for assistance."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RADIUS3-NOATTRLIST	3-Error	No attribute-list passed through parser.	An internal error has occurred. The reason could be hardware or software. The error appears when no attribute list is passed through the parser.	aaa	LOG_STD_ACTION
RADIUS3-NOATTRLIST	3-Error	No attribute-list passed through parser.	An internal error has occurred. The reason could be hardware or software. The error appears when no attribute list is passed through the parser.	aaa	LOG_STD_ACTION
RADIUS3-NOHOSTNAME	3-Error	Failed to retrieve my hostname.	Could not find the router's hostname. A hostname needs to be defined since it determines the RADIUS profile we will retrieve.	aaa	"Define a hostname on the router's config. " "Refer to the hostname configuration section " "of IOS documentation."
RADIUS3-NOHOSTNAME	3-Error	Failed to retrieve my hostname.	Could not find the router's hostname. A hostname needs to be defined since it determines the RADIUS profile we will retrieve.	aaa	"Define a hostname on the router's config. " "Refer to the hostname configuration section " "of IOS documentation."
RADIUS3-NOSERVERS	3-Error	No Radius hosts configured or no valid server present in the server group [chars]	RADIUS is attempting to send a request but there are no hosts configured to which the request is send.	aaa	"Configure a host with the 'radius-server' command " "providing the IP address of the server. Refer to " "the radius-server host configuration section of IOS " "documentation."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RADIUS-3-NOSEVERERS	3-Error	No Radius hosts configured or no valid server present in the server group [chars]	RADIUS is attempting to send a request but there are no hosts configured to which the request is send.	aaa	"Configure a host with the 'radius-server' command " "providing the IP address of the server. Refer to " "the radius-server host configuration section of IOS " "documentation."
RADIUS-3-OVERRUN	3-Error	Insufficient buffer space [dec] for string value.	This error occurs due to the insufficient memory allocated to the buffer. The condition could be caused by a software less likely by a hardware. The traceback and process information is generated due to this condition.	aaa	"If the error re-occurs check bug toolkit on Cisco web-site " "to look for a bug that has symptoms similar to the " "one occurred. If there is no entry for the problem " "you faced collect the system message text exactly " "as it appears on the console or in the system log. " "Enter <CmdBold>show tech-support</NoCmdBold> and contact" "your technical support representative and provide the " "representative with all the information gathered."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RADIUS-3-OVERRUN	3-Error	Insufficient buffer space [dec] for string value.	This error occurs due to the insufficient memory allocated to the buffer. The condition could be caused by a software less likely by a hardware. The traceback and process information is generated due to this condition.	aaa	"If the error re-occurs check bug toolkit on Cisco web-site " "to look for a bug that has symptoms similar to the " "one occurred. If there is no entry for the problem " "you faced collect the system message text exactly " "as it appears on the console or in the system log. " "Enter <CmdBold>show tech-support<NoCmdBold> and contact" "your technical support representative and provide the " "representative with all the information gathered."
<del>RADIUS-3-SECRET-DEFINITION-FAILED</del>	3-Error	Key definition ignored.	The user is attempting to store either a corrupted shared secret or memory allocation failed during secret definition. Any existing shared secret will be preserved.	aaa	"Configure a proper secret. Refer to the " "shared secret configuration section for " "RADIUS servers in IOS documentation."
<del>RADIUS-3-SECRET-DEFINITION-FAILED</del>	3-Error	Key definition ignored.	The user is attempting to store either a corrupted shared secret or memory allocation failed during secret definition. Any existing shared secret will be preserved.	aaa	"Configure a proper secret. Refer to the " "shared secret configuration section for " "RADIUS servers in IOS documentation."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>RADIUS</del> SRMRYEMVACH	3-Error	Servers [chars] and [chars] in server group '[chars]' are of different types.	All the servers in a server group should either be of type standard or non-standard.	aaa	"Enter <CmdBold>show running-config</CmdBold> " "command and make sure all the RADIUS servers in " "the server group printed above are of the same " "type - either standard or non-standard."
<del>RADIUS</del> SRMRYEMVACH	3-Error	Servers [chars] and [chars] in server group '[chars]' are of different types.	All the servers in a server group should either be of type standard or non-standard.	aaa	"Enter <CmdBold>show running-config</CmdBold> " "command and make sure all the RADIUS servers in " "the server group printed above are of the same " "type - either standard or non-standard."
<del>RADIUS</del> SRMRYEMVACH	3-Error	Warning: Unable to allocate port [dec]	Unable to allocate a certain port will not have the full range of source ports. This is not supposed to happen contact support.	aaa	"Contact support"
<del>RADIUS</del> SRMRYEMVACH	3-Error	Warning: Unable to allocate port [dec]	Unable to allocate a certain port will not have the full range of source ports. This is not supposed to happen contact support.	aaa	"Contact support"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RADIUS3UNKNOWNAPI	3-Error	Unknown API type [dec]	RADIUS code has been invoked using an unknown API type. This is the result of a bug in the RADIUS subsystem.	aaa	"Check bug toolkit on Cisco web-site to look for a " "bug which has symptoms similar to the one occurred. " "If there is no entry for the problem you faced " "Please collect traceback and contact your" "technical support representative."
RADIUS3UNKNOWNAPI	3-Error	Unknown API type [dec]	RADIUS code has been invoked using an unknown API type. This is the result of a bug in the RADIUS subsystem.	aaa	"Check bug toolkit on Cisco web-site to look for a " "bug which has symptoms similar to the one occurred. " "If there is no entry for the problem you faced " "Please collect traceback and contact your" "technical support representative."
RADIUS3ZEROATTRLEN	3-Error	Radius attr [dec] len 0	An internal error has occurred	aaa	LOG_STD_ACTION
RADIUS3ZEROATTRLEN	3-Error	Radius attr [dec] len 0	An internal error has occurred	aaa	LOG_STD_ACTION
RADIUS4BADATTRLIST	4-Warning	Unable to process attribute list.	The attribute list is syntactically incorrect.	aaa	"Please specify the attribute list as a comma-" "delimited string of integers between 1 and 255."
RADIUS4BADATTRLIST	4-Warning	Unable to process attribute list.	The attribute list is syntactically incorrect.	aaa	"Please specify the attribute list as a comma-" "delimited string of integers between 1 and 255."
RADIUS4NOATTRSIDEF	4-Warning	Warning: Attribute list [chars] is not defined.	The given attribute list is not defined.	aaa	"Please define the attribute list as soon as " "possible."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RADIUS4NOATTRLSIDDEF	4-Warning	Warning: Attribute list [chars] is not defined.	The given attribute list is not defined.	aaa	"Please define the attribute list as soon as " "possible."
RADIUS4NOPUBLICSERV	4-Warning	Warning: No servers were found in the public server list.	The given server is not on the global public servers list. This is an internal consistency error.	aaa	LOG_STD_ACTION
RADIUS4NOPUBLICSERV	4-Warning	Warning: No servers were found in the public server list.	The given server is not on the global public servers list. This is an internal consistency error.	aaa	LOG_STD_ACTION
RADIUS-4-NOSERV	4-Warning	Warning: Server [chars]:[dec][dec] is not defined.	The given server is not globally defined please define it.	aaa	"Please define the server. Refer to the " "server configuration section of IOS documentation."
RADIUS-4-NOSERV	4-Warning	Warning: Server [chars]:[dec][dec] is not defined.	The given server is not globally defined please define it.	aaa	"Please define the server. Refer to the " "server configuration section of IOS documentation."
RADIUS4NOSERVNAME	4-Warning	Warning: Server [chars] is not defined.	The given server name is not globally defined please define it.	aaa	"Please define the server. Refer to the " "new server name configuration section of IOS documentation."
RADIUS4NOSERVNAME	4-Warning	Warning: Server [chars] is not defined.	The given server name is not globally defined please define it.	aaa	"Please define the server. Refer to the " "new server name configuration section of IOS documentation."
RADIUS4RADIUS_ALIVE	4-Warning	RADIUS server [chars]:[node]u is being marked alive.	A RADIUS server that previously was not responding has responded to a new request or the deadtimer has expired.	aaa	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RADIUS4RADIUS_ALIVE	4-Warning	RADIUS server [chars]:[node]u is being marked alive.	A RADIUS server that previously was not responding has responded to a new request or the deadtimer has expired.	aaa	LOG_STD_NO_ACTION
RADIUS4RADIUS_DEAD	4-Warning	RADIUS server [chars]:[node]u is not responding.	The server might not be available to serve request. server has not responded to repeated requests.	aaa	"Check for the connectivity to server. " "Check if the RADIUS server is still active. " "If not able to debug the issue enter <CmdBold>show " <del>"tuning conf" &lt;/CmdBold&gt;</del> and contact your technical " "support representative for assistance."
RADIUS4RADIUS_DEAD	4-Warning	RADIUS server [chars]:[node]u is not responding.	The server might not be available to serve request. server has not responded to repeated requests.	aaa	"Check for the connectivity to server. " "Check if the RADIUS server is still active. " "If not able to debug the issue enter <CmdBold>show " <del>"tuning conf" &lt;/CmdBold&gt;</del> and contact your technical " "support representative for assistance."
RADIUS-4-SERVREF	4-Warning	Warning: Server [chars]:[dec][dec] is still referenced by server group.	The server being removed is still referenced by a server group. This message appears when server configuration is removed but in a server group it still exists.	aaa	"Please dereference the server from the server group " "as soon as possible. Refer to server group configuration " "section in IOS documentation."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RADIUS-4-SERVREF	4-Warning	Warning: Server [chars]:[dec][dec] is still referenced by server group.	The server being removed is still referenced by a server group. This message appears when server configuration is removed but in a server group it still exists.	aaa	"Please dereference the server from the server group " "as soon as possible. Refer to server group configuration " "section in IOS documentation."
RADIUS4SERVRENAME	4-Warning	Warning: Server [chars] is still referenced by server group.	The server being removed is still referenced by a server group. This message appears when server configuration is removed but in a server group it still exists.	aaa	"Please dereference the server from the " "server group as soon as possible. " "Refer to server group configuration " "section in IOS documentation."
RADIUS4SERVRENAME	4-Warning	Warning: Server [chars] is still referenced by server group.	The server being removed is still referenced by a server group. This message appears when server configuration is removed but in a server group it still exists.	aaa	"Please dereference the server from the " "server group as soon as possible. " "Refer to server group configuration " "section in IOS documentation."
RADIUSDISCONNECTHR	6-Information	Negotiated Cipher is [chars]	Negotiated Cipher during RADSEC HS SUCCESS	aaa	LOG_SID_NO_ACTION
RADIUSDISCONNECTHR	6-Information	Negotiated Cipher is [chars]	Negotiated Cipher during RADSEC HS SUCCESS	aaa	LOG_SID_NO_ACTION
RADIUSDISSESSIONCLOSED	6-Information	RADSEC DTLS connection closed with peer [chars]	RADSEC DTLS connection closed	-	LOG_SID_NO_ACTION
RADIUSDISSESSIONCLOSED	6-Information	RADSEC DTLS connection closed with peer [chars]	RADSEC DTLS connection closed	-	LOG_SID_NO_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>RADIUS6-DISABLED</del>	6-Information	RADSEC DTLS connection established with peer [chars]	DTLS session established message after RADSEC HS SUCCESS	-	LOG_SID_NO_ACTION
<del>RADIUS6-DISABLED</del>	6-Information	RADSEC DTLS connection established with peer [chars]	DTLS session established message after RADSEC HS SUCCESS	-	LOG_SID_NO_ACTION
RADIUS6-GETPOOLS	6-Information	Retrieving IP-Pools via user [chars]	Getting initial IP-Pool definitions from RADIUS using the given user's profile.	aaa	"No action required."
RADIUS6-GETPOOLS	6-Information	Retrieving IP-Pools via user [chars]	Getting initial IP-Pool definitions from RADIUS using the given user's profile.	aaa	"No action required."
RADIUS6-GETROUTES	6-Information	Retrieving static routes in user [chars]	Getting initial static routes from RADIUS using the given user's profile.	aaa	"No action required. The message is "informatory in nature and tells that it is getting the "static routes based on user's profile."
RADIUS6-GETROUTES	6-Information	Retrieving static routes in user [chars]	Getting initial static routes from RADIUS using the given user's profile.	aaa	"No action required. The message is "informatory in nature and tells that it is getting the "static routes based on user's profile."
RADIUS6-IDENTSAVE	6-Information	Saving config with new acct ident in nvrnm.	Saving an accounting ident in nvrnm. The message is informatory.	aaa	"No action required."
RADIUS6-IDENTSAVE	6-Information	Saving config with new acct ident in nvrnm.	Saving an accounting ident in nvrnm. The message is informatory.	aaa	"No action required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>RADIUS6SERVERDEAD</del>	6-Information	Group [chars]: Marked alive as Radius server [chars]:[dec][dec] configured.	RADIUS server is now configured in the server group which was previously marked dead.	aaa	"No action required. The message is informatory" "in nature and tells that the dead server is now" "configured and up."
<del>RADIUS6SERVERDEAD</del>	6-Information	Group [chars]: Marked alive as Radius server [chars]:[dec][dec] configured.	RADIUS server is now configured in the server group which was previously marked dead.	aaa	"No action required. The message is informatory" "in nature and tells that the dead server is now" "configured and up."
RADIUS6SERVERALIVE	6-Information	Group [chars]: Radius server [chars]:[dec][dec] is responding again previously dead.	A RADIUS server which previously was dead has started responding again.	aaa	"No action required. This message is " "informatory in nature and tells that the server " "has come up and running."
RADIUS6SERVERALIVE	6-Information	Group [chars]: Radius server [chars]:[dec][dec] is responding again previously dead.	A RADIUS server which previously was dead has started responding again.	aaa	"No action required. This message is " "informatory in nature and tells that the server " "has come up and running."
<del>RADIUS6TLSSESSIONCLOSED</del>	6-Information	RADSEC TLS connection closed with peer [chars]	RADSEC TLS connection closed	-	LOG_SID_NO_ACTION
<del>RADIUS6TLSSESSIONCLOSED</del>	6-Information	RADSEC TLS connection closed with peer [chars]	RADSEC TLS connection closed	-	LOG_SID_NO_ACTION
<del>RADIUS6TLSSESSIONESTABLISHED</del>	6-Information	RADSEC TLS connection established with peer [chars]	TLS session established message after RADSEC HS SUCCESS	-	LOG_SID_NO_ACTION
<del>RADIUS6TLSSESSIONESTABLISHED</del>	6-Information	RADSEC TLS connection established with peer [chars]	TLS session established message after RADSEC HS SUCCESS	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RADIX-2-INIT	2-Critical	No memory for radix initialization: [chars]	The system ran out of memory during initialization. This should only occur if an image is too large for the existing dynamic memory.	mem	"Use a smaller subset image or upgrade hardware."
RADIX-2-INIT	2-Critical	No memory for radix initialization: [chars]	The system ran out of memory during initialization. This should only occur if an image is too large for the existing dynamic memory.	mem	"Use a smaller subset image or upgrade hardware."
RADIX-3-ADDMASK	3-Error	Error adding mask entry [chars]	A software or hardware error occurred.	Obtain from traceback code	"Copy the error message exactly as it appears and report it to your technical support representative."
RADIX-3-ADDMASK	3-Error	Error adding mask entry [chars]	A software or hardware error occurred.	Obtain from traceback code	"Copy the error message exactly as it appears and report it to your technical support representative."
RADIX-3-BADTREE	3-Error	Invalid pointer to head of tree 0x[hec]	A software programming error occurred.	Obtain from traceback code	"Copy the error message exactly as it appears and report it to your technical support representative."
RADIX-3-BADTREE	3-Error	Invalid pointer to head of tree 0x[hec]	A software programming error occurred.	Obtain from traceback code	"Copy the error message exactly as it appears and report it to your technical support representative."
RADIX-3-DELETE	3-Error	Error deleting trie entry [chars]	A software programming error occurred.	Obtain from traceback code	"Copy the error message exactly as it appears and report it to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RADIX-3-DELETE	3-Error	Error deleting trie entry [chars]	A software programming error occurred.	Obtainfromtracebackdecode	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
RADIX-3-NOMEMORY	3-Error	No memory available [chars]	The system is out of memory.	mem	"Try one of these actions to correct the problem:\n\n Reduce the number of routes accepted by this router.\n\n Upgrade hardware.\n\n Use a smaller subset image on run-from-RAM platforms."
RADIX-3-NOMEMORY	3-Error	No memory available [chars]	The system is out of memory.	mem	"Try one of these actions to correct the problem:\n\n Reduce the number of routes accepted by this router.\n\n Upgrade hardware.\n\n Use a smaller subset image on run-from-RAM platforms."
RADIX-4-ORPHAN	4-Warning	Orphaned mask [hex] refcount=[dec] at [hex] next=[hex]	A software error occurred.	Obtainfromtracebackdecode	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
RADIX-4-ORPHAN	4-Warning	Orphaned mask [hex] refcount=[dec] at [hex] next=[hex]	A software error occurred.	Obtainfromtracebackdecode	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
RADIXTREE-3-LCON	3-Error	ERRMSG_NOFLAGS	-	-	-
RADIXTREE-3-LCON	3-Error	ERRMSG_NOFLAGS	-	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>RADPROXY</del> -3-INIT	3-Error	Initialisation failure [chars]	An internal error occurred during RP initialisation.	aaa-protocol	LOG_STD_ACTION
<del>RADPROXY</del> -3-INIT	3-Error	Initialisation failure [chars]	An internal error occurred during RP initialisation.	aaa-protocol	LOG_STD_ACTION
<del>RADPROXY</del> INVALID_EVENT	3-Error	Received invalid RP event [chars] in state [chars]	An internal RP error occurred.	aaa-protocol	LOG_STD_ACTION
<del>RADPROXY</del> INVALID_EVENT	3-Error	Received invalid RP event [chars] in state [chars]	An internal RP error occurred.	aaa-protocol	LOG_STD_ACTION
<del>RADPROXY</del> INVALID_STATE	3-Error	Encountered an invalid RP state [dec] in [chars]	An internal RP error occurred.	aaa-protocol	LOG_STD_ACTION
<del>RADPROXY</del> INVALID_STATE	3-Error	Encountered an invalid RP state [dec] in [chars]	An internal RP error occurred.	aaa-protocol	LOG_STD_ACTION
<del>RADPROXY</del> INVALID_MAC	3-Error	Received invalid MAC [chars] in [chars] from [node]with NAS-IP %i	Error occurred on receiving a invalid MAC	aaa-protocol	LOG_STD_ACTION
<del>RADPROXY</del> INVALID_MAC	3-Error	Received invalid MAC [chars] in [chars] from [node]with NAS-IP %i	Error occurred on receiving a invalid MAC	aaa-protocol	LOG_STD_ACTION
<del>RADPROXY</del> MEMORY_CORRUPT	3-Error	RP Memory magic corrupted	RP memory magic corrupted	aaa-protocol	LOG_STD_ACTION
<del>RADPROXY</del> MEMORY_CORRUPT	3-Error	RP Memory magic corrupted	RP memory magic corrupted	aaa-protocol	LOG_STD_ACTION
<del>RADPROXY</del> MEMORY_LOW	3-Error	Memory low in RP terminating session	System memory is running low.	aaa-protocol	LOG_STD_ACTION
<del>RADPROXY</del> MEMORY_LOW	3-Error	Memory low in RP terminating session	System memory is running low.	aaa-protocol	LOG_STD_ACTION
<del>RADPROXY</del> NULL_CONTEXT	3-Error	Encountered a NULL RP context in [chars]	Encountered a NULL context in RP.	aaa-protocol	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>RADSEC</del> NULLCONTEXT	3-Error	Encountered a NULL RP context in [chars]	Encountered a NULL context in RP.	aaa-protocol	LOG_STD_ACTION
<del>RADSEC</del> RUCO_MLADN	3-Error	RP encountered fatal protocol violation	Unrecoverable protocol error	aaa-protocol	LOG_STD_ACTION
<del>RADSEC</del> RUCO_MLADN	3-Error	RP encountered fatal protocol violation	Unrecoverable protocol error	aaa-protocol	LOG_STD_ACTION
<del>RADSEC</del> REPLAY	3-Error	ewlc-qos	DTLS replay attack for hostname:[chars]	Detected DTLS replay attack	LOG_STD_ACTION
<del>RADSEC</del> RESESSION	3-Error	ewlc-qos	User ID:[chars] Failure to establish a DTLS session with RadSec server	-	-
<del>RADSEC</del> REVALIDATE	3-Error	ewlc-qos	RADSEC server certificate validation failed with server[chars]	RADSEC server certificate validation failed	LOG_STD_ACTION
<del>RADSEC</del> REVALIDATE	3-Error	ewlc-qos	RADSEC server identity check failed with server[chars]	RADSEC server identity Check failed	LOG_STD_ACTION
<del>RADSEC</del> RESESSION	3-Error	ewlc-qos	User ID:[chars] Failure to establish a TLS session with RadSec server	-	-
<del>RADSEC</del> RENEGOTIATE	6-Information	ewlc-qos	Negotiated Cipher is[chars]	Negotiated Cipher during RADSEC HS SUCCESS	LOG_STD_ACTION
<del>RADSEC</del> RECONNECT	6-Information	ewlc-qos	RADSEC DTLS connection closed with peer[chars]	RADSEC DTLS connection closed	LOG_STD_ACTION
<del>RADSEC</del> RECONNECT	6-Information	ewlc-qos	RADSEC DTLS connection established with peer[chars]	DTLS session established message after RADSEC HS SUCCESS	LOG_STD_ACTION
<del>RADSEC</del> RECONNECT	6-Information	ewlc-qos	RADSEC TLS connection closed with peer[chars]	RADSEC TLS connection closed	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>RAI/INITSYS/SUCC</del>	6-Information	ewlc-qos	RADSEC TLS connection established with peer[chars]	TLS session established message after RADSEC HS SUCCESS	LOG_STD_ACTION
RAI-1-INITSYS	1-Alert	[chars]	The specific message text is supplied by the RAI Subsystem. This indicates an initialization failure. When this occurs RAI is not operational.	voice-sip	LOG_STD_ACTION
RAI-1-INITSYS	1-Alert	[chars]	The specific message text is supplied by the RAI Subsystem. This indicates an initialization failure. When this occurs RAI is not operational.	voice-sip	LOG_STD_ACTION
<del>RAVEN/FATAL_ERP_ERROR</del>	3-Error	erp_mst_cfg 0x[hec] erp_mst_err_phase 0x[hec] erp_mst_err_addr 0x[hec]	Fatal Raven ERP interrupt	cmts-platform	"Copy the error message exactly as it appears and report it to your" " technical support"
<del>RAVEN/FATAL_ICLB_ERROR</del>	3-Error	cap_reg 0x[hec] cap_data 0x[hec] cap_access 0x[hec] [chars] transaction	Fatal Unrecoverable Local Bus error	cmts-platform	"Copy the error message exactly as it appears and report it to your" " technical support"
<del>RAVEN/FATAL_RECOVERABLE_ICLB_ERROR</del>	3-Error	cap_reg 0x[hec] cap_data 0x[hec] cap_access 0x[hec] [chars] transaction	Fatal Recoverable Local Bus error	cmts-platform	"Copy the error message exactly as it appears and report it to your" " technical support"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>RAVEN#HCDRAM_CERR</del>	3-Error	err_rec_addr 0x[hec] err_rec_data3 0x[hec] err_rec_data2 0x[hec]\n err_rec_data1 0x[hec] err_rec_data0 0x[hec] err_rec_ecc 0x[hec]	High Priority Raven Single Error Upset interrupt	cmts-platform	"Copy the error message exactly as it appears and report it to your" " technical support"
<del>RAVEN#UNLOCK_EVENT</del>	3-Error	[chars] unlock	Low Priority Raven interrupt	cmts-platform	"Copy the error message exactly as it appears and report it to your" " technical support"
RAVEN#ISS_LOAD_EVENT	4-Warning	[chars] event	RLDRAM interrupt	cmts-platform	"Copy the error message exactly as it appears and report it to your" " technical support"
RAVEN#ISS_MISMATCH_EVENT	4-Warning	[chars] event	TSS Mismatch interrupt	cmts-platform	"Copy the error message exactly as it appears and report it to your" " technical support"
RAVEN#ISS_PARITY_EVENT	4-Warning	[chars] event	TSS Parity interrupt	cmts-platform	"Copy the error message exactly as it appears and report it to your" " technical support"
<del>RAVEN#PLL_UNLOCK_EVENT</del>	5-Notice	[chars] unlock	Expected PLL unlock	cmts-platform	"If this event appears after/close to TCC reload it is expected." "Otherwise copy the error message exactly as it appears and report" " it to your technical support"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>RAWCKET</del> INTCONCD	3-Error	raw-socket tcp client [chars]/[dec] connected on tty [chars]	-	wolfeisland-sw	"This is an informational message only. It occurs\n\n in no shut operation"
<del>RAWCKET</del> INTCONCD	3-Error	raw-socket tcp client [chars]/[dec] disconnected on tty [chars]	-	wolfeisland-sw	"This is an informational message only. It occurs\n\n in shut operation"
RAWCKET3FPGA_FAIL	3-Error	tty [dec] : Failed to set [chars] in FPGA	The software failed to configure FPGA for serialim\n\n it could be a temporary condition.	wolfeisland-sw	"Retry CLI command" LOG_STD_ACTION
RAWCKET3INT_FAIL	3-Error	Rawsocket failed to start a process	Rawsocket failed to start a process.	wolfeisland-sw	LOG_STD_ACTION
RAWCKET3MALLOC_FAIL	3-Error	Rawsocket malloc error for tty line data structure	Rawsocket failed to allocate memory for tty line.	wolfeisland-sw	LOG_STD_ACTION
RAWCKET3NULL_IDB	3-Error	NULL hardware IDB	An internal software error occurred. \n\n It could be a temporary condition.	wolfeisland-sw	"Log DDTS if condition is persistent" LOG_STD_ACTION
RAWCKET3NULL_NULL	3-Error	NULL Inputs	An internal software error occurred. \n\n It could be a temporary condition.	wolfeisland-sw	"Log DDTS if condition is persistent" LOG_STD_ACTION
RAWCKET3NULL_TTY	3-Error	NULL tty line	An internal software error occurred. \n\n It could be a temporary condition.	wolfeisland-sw	"Log DDTS if condition is persistent" LOG_STD_ACTION
<del>RAWCKET</del> INTREMOVED	6-Information	tty [dec] : raw-socket tcp clients removed	-	wolfeisland-sw	"This is an informational message only. It occurs\n\n in normal operation"
<del>RAWCKET</del> INTREMOVED	6-Information	tty [dec] : raw-socket tcp server removed	The raw-socket tcp server is removed when \n\n certain configuration changed.	wolfeisland-sw	"This is an informational message only. It occurs\n\n in normal operation"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RAWK06XIKIDKAD	6-Information	discarded [dec] bytes on socket [dec] write error [dec] from tty [dec]	The raw-socket tcp session tx packet dropped	wolfeisland-sw	"This is an informational message only. Need exam\n\n network capacity"
RBM-0-RBM_EMERG	0-Emergency	[chars]	RBM_INTERNAL_ERROR	RBM_DDISECOMPONENT	LOG_STD_ACTION
RBM-0-RBM_EMERG	0-Emergency	[chars]	RBM_INTERNAL_ERROR	RBM_DDISECOMPONENT	LOG_STD_ACTION
RBM-1-RBM_ALERT	1-Alert	[chars]	RBM_INTERNAL_ERROR	RBM_DDISECOMPONENT	LOG_STD_ACTION
RBM-1-RBM_ALERT	1-Alert	[chars]	RBM_INTERNAL_ERROR	RBM_DDISECOMPONENT	LOG_STD_ACTION
RBM-2-RBM_CRIT	2-Critical	[chars]	RBM_INTERNAL_ERROR	RBM_DDISECOMPONENT	LOG_STD_ACTION
RBM-2-RBM_CRIT	2-Critical	[chars]	RBM_INTERNAL_ERROR	RBM_DDISECOMPONENT	LOG_STD_ACTION
RBM-3-RBM_ERR	3-Error	[chars]	RBM_INTERNAL_ERROR	RBM_DDISECOMPONENT	LOG_STD_ACTION
RBM-3-RBM_ERR	3-Error	[chars]	RBM_INTERNAL_ERROR	RBM_DDISECOMPONENT	LOG_STD_ACTION
RBM-3-RBM_PARSE_ACE	3-Error	Could not parse command for adding ACE '[chars]' to [chars] Role-Based Access List '[chars]'	An error occurred while attempting to add an ACE to a Role-Based Access List. The ACE syntax is most likely incompatible with the type of RBACL.	RBM_DDISECOMPONENT	"Verify the syntax of the ACEs of the RBACL in ACS and the IP protocol versions the RBACL" " applies to." " RBACL ACE syntax could be verified by manually configuring IP/IPv6 RBACL on the system" " within config-bad/config-ipv6bad configuration mode respectively."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RBM3RBM_PARSE_ACE	3-Error	Could not parse command for adding ACE '[chars]' to [chars] Role-Based Access List '[chars]'	An error occurred while attempting to add an ACE to a Role-Based Access List. The ACE syntax is most likely incompatible with the type of RBACL.	RBM_DDJS_COMPONENT	"Verify the syntax of the ACEs of the RBACL in ACS and the IP protocol versions the RBACL" " applies to." " RBACL ACE syntax could be verified by manually configuring IP/IPv6 RBACL on the system" " within config/aaa/config/aaa configuration mode respectively."
RBM3RBM_PARSE_CMD	3-Error	Could not parse command. See command output and errors below \n[chars]	An error occurred while attempting to parse command. Look for command output and parser errors below this message.	RBM_DDJS_COMPONENT	"Follow the recommended action of the additional error messages that follow this message".
RBM3RBM_PARSE_CMD	3-Error	Could not parse command. See command output and errors below \n[chars]	An error occurred while attempting to parse command. Look for command output and parser errors below this message.	RBM_DDJS_COMPONENT	"Follow the recommended action of the additional error messages that follow this message".

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
REMBREM_PARSE_RBACL	3-Error	Could not parse command for creating [chars] Role-Based Access List '[chars]'\n\t'[chars]'	An error occurred while attempting to create Role-Based Access List	RBMDDIS_COMPONENT	"This error could occur when TrustSec attempts to install RBACL it has acquired from ACS" " while configuration mode is locked exclusively. TrustSec will retry this operation and" " should eventually succeed once configuration mode is no longer locked. If the error occurs" " when the configuration mode is not locked or if the RBACL does not get installed after" " the configuration mode lock is released LOG_STD_ACTION
REMBREM_PARSE_RBACL	3-Error	Could not parse command for creating [chars] Role-Based Access List '[chars]'\n\t'[chars]'	An error occurred while attempting to create Role-Based Access List	RBMDDIS_COMPONENT	"This error could occur when TrustSec attempts to install RBACL it has acquired from ACS" " while configuration mode is locked exclusively. TrustSec will retry this operation and" " should eventually succeed once configuration mode is no longer locked. If the error occurs" " when the configuration mode is not locked or if the RBACL does not get installed after" " the configuration mode lock is released LOG_STD_ACTION
REMB4REM_WARNING	4-Warning	[chars]	REMB_INTERNAL_ERROR	RBMDDIS_COMPONENT	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RBM4-RBM_WARNING	4-Warning	[chars]	RBM_INTERNAL_ERROR	RBM_DDJS_COMPONENT	LOG_STD_ACTION
RBM-5-RBM_NOTICE	5-Notice	[chars]	Normal but significant conditions	RBM_DDJS_COMPONENT	LOG_STD_ACTION
RBM-5-RBM_NOTICE	5-Notice	[chars]	Normal but significant conditions	RBM_DDJS_COMPONENT	LOG_STD_ACTION
RBM-6-RBM_INFO	6-Information	[chars]	Informational messages	RBM_DDJS_COMPONENT	LOG_SID_NO_ACTION
RBM-6-RBM_INFO	6-Information	[chars]	Informational messages	RBM_DDJS_COMPONENT	LOG_SID_NO_ACTION
RBM-6-SGACLHIT	6-Information	ingress_interface='[chars]' sgacl_name='[chars]' action='[chars]' protocol='[chars]' src-vrf='[chars]' src-ip='[node]' src-port='[dec]' dest-vrf='[chars]' dest-ip='[node]' dest-port='[dec]' sgt='[dec]' dgt='[dec]' logging_interval='[node]'	A packet matching the log criteria for the given sg access list was \ detected.	-	LOG_SID_NO_ACTION
RBM-6-SGACLHIT	6-Information	ingress_interface='[chars]' sgacl_name='[chars]' action='[chars]' protocol='[chars]' src-vrf='[chars]' src-ip='[node]' src-port='[dec]' dest-vrf='[chars]' dest-ip='[node]' dest-port='[dec]' sgt='[dec]' dgt='[dec]' logging_interval='[node]'	A packet matching the log criteria for the given sg access list was \ detected.	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RBM-6-SGACLHIT_V6	6-Information	ingress_interface=[chars] sgacl_name=[chars] action=[chars] protocol=[chars] src-vrf=[chars] src-ip=[node] src-port=[dec] dest-vrf=[chars] dest-ip=[node] dest-port=[dec] sgt=[dec] dgt=[dec] logging_interval=[dec]R6	A IPv6 packet matching the log criteria for the given sg access list \ was detected.	-	LOG_SID_NO_ACTION
RBM-6-SGACLHIT_V6	6-Information	ingress_interface=[chars] sgacl_name=[chars] action=[chars] protocol=[chars] src-vrf=[chars] src-ip=[node] src-port=[dec] dest-vrf=[chars] dest-ip=[node] dest-port=[dec] sgt=[dec] dgt=[dec] logging_interval=[dec]R6	A IPv6 packet matching the log criteria for the given sg access list \ was detected.	-	LOG_SID_NO_ACTION
RBM-7-RBM_ASSERT	7-Debug	Assertion Failure [chars] @[chars]:[dec] : [chars]	RBM_INTERNAL_ERROR	RBMDDISCOMPONENT	LOG_STD_ACTION
RBM-7-RBM_ASSERT	7-Debug	Assertion Failure [chars] @[chars]:[dec] : [chars]	RBM_INTERNAL_ERROR	RBMDDISCOMPONENT	LOG_STD_ACTION
RCMDALGCHUNKCREATE	3-Error	-	Chunk create failed. RCMD ALG will not be able to finish initialization.	cpp-ucode	LOG_STD_ACTION
RCMDALGCOMPHELMEN	3-Error	rcvd:[hec] expect:[hec]	Incompatible HA Message Length. RCMD ALG will reject sync data.	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RCMD4RCMPBEHAVED	3-Error	rcvd:[hec] expect:[hec]	Incompatible HA Version. RCMD ALG will reject sync data.	cpp-ucode	LOG_STD_ACTION
RCMD4RCRCHAVK	3-Error	rcvd:[hec] expect:[hec]	Incorrect HA MAGIC. RCMD ALG will reject sync data.	cpp-ucode	LOG_STD_ACTION
RCMD4RCNADHACRDE	3-Error	rcvd:[hec] expect:[hec]	Invalid HA opcode. RCMD ALG will reject sync data.	cpp-ucode	LOG_STD_ACTION
RCMD4RC7DACAERROR	3-Error	-	Error during L7 data creation.	cpp-ucode	LOG_STD_ACTION
RCMD4RC8KTMANPIAL	3-Error	-	Packet manipulation failed. Packet will be dropped.	cpp-ucode	LOG_STD_ACTION
RCMD4RCMDDNSFAIL	4-Warning	DNS hostname/ip address mismatch. [chars] unknown to DNS	The IP address for an incoming remd request is not registered with\n\n DNS.	-	"Add the IP address to DNS."
RCMD4RCPATTEMPIED	4-Warning	Remote copy from [chars] at [chars] denied	An attempt was made to connect to a router through RCP but the router\n\n was not configured as an RCP server.	-	"Configure an RCP server."
RCMD4RSHATEMPIED	4-Warning	Remote shell from [chars] at [chars] denied	An attempt was made to connect to a router through rsh but the router\n\n was not configured as an rsh server.	-	"Configure an rsh server."
RE-4COMPILE_FAILED	4-Warning	Compile failed on pattern number [dec] - states [dec] - [chars]	Triggers when RE memory cannot be allocated.	ids	"This message indicates that space for the\n\n specified RE cannot be allocated due to memory limitations."
RECONNECT-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
RECONNECT-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
RECOVERY3ATOM_HA	3-Error	ERRMSG_NOFLAGS	-	-	-
RECOVERY3ATOM_HA	3-Error	ERRMSG_NOFLAGS	-	-	-
RED_MODE3CAP_REG	3-Error	Red Mode cap reg failed: reason [dec]	The capabilities of the Red Mode ISSU could not be registered.	ha-red-mode-client	"show issu capability <arguments>"
RED_MODE3CAP_REG	3-Error	Red Mode cap reg failed: reason [dec]	The capabilities of the Red Mode ISSU could not be registered.	ha-red-mode-client	"show issu capability <arguments>"
REDMODE3CAPENTRY_REG	3-Error	Red Mode Cap Entry [dec] for Entity [dec] Registration failed [chars]	A capability entry could not be registered for the Red Mode ISSU.	ha-red-mode-client	"show issu capability entries"
REDMODE3CAPENTRY_REG	3-Error	Red Mode Cap Entry [dec] for Entity [dec] Registration failed [chars]	A capability entry could not be registered for the Red Mode ISSU.	ha-red-mode-client	"show issu capability entries"
REDMODE3CAPGROUP_REG	3-Error	Red Mode Cap Group [dec] for Entity [dec] Registration failed [chars]	A capability group could not be registered for the Red Mode ISSU.	ha-red-mode-client	"show capability groups"
REDMODE3CAPGROUP_REG	3-Error	Red Mode Cap Group [dec] for Entity [dec] Registration failed [chars]	A capability group could not be registered for the Red Mode ISSU.	ha-red-mode-client	"show capability groups"
REDMODE3CAPTYPE_REG	3-Error	Red Mode Cap Type for Entity [dec] Registration failed [chars]	A capability type could not be registered for the Red Mode ISSU.	ha-red-mode-client	"show issu capability types"
REDMODE3CAPTYPE_REG	3-Error	Red Mode Cap Type for Entity [dec] Registration failed [chars]	A capability type could not be registered for the Red Mode ISSU.	ha-red-mode-client	"show issu capability types"
REDMODE3CLIENT_REG	3-Error	Red Mode Client [dec] Registration failed [chars]	The Red Mode ISSU client could not be registered.	ha-red-mode-client	"show issu clients"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RED_MODE3CLIENT_REG	3-Error	Red Mode Client [dec] Registration failed [chars]	The Red Mode ISSU client could not be registered.	ha-red-mode-client	"show issu clients"
RED_MODE3CLIENT_REG	3-Error	Red Mode ISSU client [dec] Client registration failed. [chars]	The Red Mode ISSU client could not be registered during system initialization.	ha-red-mode-client	"show issu clients"
RED_MODE3CLIENT_REG	3-Error	Red Mode ISSU client [dec] Client registration failed. [chars]	The Red Mode ISSU client could not be registered during system initialization.	ha-red-mode-client	"show issu clients"
RED_MODE3LAADRCSER	3-Error	Delayed registration could not be completed succesfully Operand = [dec]	The delayed registration operation for the RF-proxy clients could not complete successfully.	ha-red-mode-client	LOG_STD_ACTION
RED_MODE3LAADRCSER	3-Error	Delayed registration could not be completed succesfully Operand = [dec]	The delayed registration operation for the RF-proxy clients could not complete successfully.	ha-red-mode-client	LOG_STD_ACTION
RED_MODE3ENTITY_REG	3-Error	Red Mode Entity [dec] Registration failed [chars]	The Red Mode ISSU entity could not be registered.	ha-red-mode-client	"show issu entities"
RED_MODE3ENTITY_REG	3-Error	Red Mode Entity [dec] Registration failed [chars]	The Red Mode ISSU entity could not be registered.	ha-red-mode-client	"show issu entities"
RED_MODE3GET_BUFFER	3-Error	Red Mode ISSU session [dec] failed to get buffer	Red Mode ISSU failed to get a buffer	ha-red-mode-client	"show issu fsm"
RED_MODE3GET_BUFFER	3-Error	Red Mode ISSU session [dec] failed to get buffer	Red Mode ISSU failed to get a buffer	ha-red-mode-client	"show issu fsm"
RED_MODE3NADRDOMAIN	3-Error	Invalid RF domain [dec] [ [chars] ]	Invalid RF domain value	ha-red-mode-client	-
RED_MODE3NADRDOMAIN	3-Error	Invalid RF domain [dec] [ [chars] ]	Invalid RF domain value	ha-red-mode-client	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RED_MODE3IPC_AGENT	3-Error	[chars] [ [chars] ]	Failure in the Red Mode IPC agent	ha-red-mode-client	-
RED_MODE3IPC_AGENT	3-Error	[chars] [ [chars] ]	Failure in the Red Mode IPC agent	ha-red-mode-client	-
<del>RED_MODE3IPC_AGENT</del>	3-Error	One or more ISSU base clients are incompatible fallback to RPR	incompatible ISSU base client cause red_mode to fallback to RPR	-	"Check the console log for the name and ID of incompatible ISSU BASE " "clients"
<del>RED_MODE3IPC_AGENT</del>	3-Error	One or more ISSU base clients are incompatible fallback to RPR	incompatible ISSU base client cause red_mode to fallback to RPR	-	"Check the console log for the name and ID of incompatible ISSU BASE " "clients"
RED_MODE3ISSUNCOIACN	3-Error	[chars] [ [chars] ]	Failure in the Red Mode Client	ha-red-mode-client	-
RED_MODE3ISSUNCOIACN	3-Error	[chars] [ [chars] ]	Failure in the Red Mode Client	ha-red-mode-client	-
<del>RED_MODE3ISSUNCOIACN</del>	3-Error	Failed to reset peer image to be compatible	Failed to reset peer image to be compatible after standby come back up to RPR	ha-red-mode-client	"This message is normally seen in conjunction with an ISSU module error " "message. Please examine the associated ISSU message for the reason for " "failure and action to take."
<del>RED_MODE3ISSUNCOIACN</del>	3-Error	Failed to reset peer image to be compatible	Failed to reset peer image to be compatible after standby come back up to RPR	ha-red-mode-client	"This message is normally seen in conjunction with an ISSU module error " "message. Please examine the associated ISSU message for the reason for " "failure and action to take."
<del>RED_MODE3ISSUNCOIACN</del>	3-Error	Failed to set base client incompatibility	Failed to set base client incompatibility	-	"Check the console log for the name and ID of incompatible ISSU BASE " "clients"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RED_MODE3ISSUEINCOMP	3-Error	Failed to set base client incompatibility	Failed to set base client incompatibility	-	"Check the console log for the name and ID of incompatible ISSU BASE "clients"
RED_MODE3MSG_DATAPIR	3-Error	Red Mode Client [dec] get msg dataptr failed. Error = [dec]	The Red Mode ISSU client could not obtain a message data pointer.	ha-red-mode-client	"show issu fsm"
RED_MODE3MSG_DATAPIR	3-Error	Red Mode Client [dec] get msg dataptr failed. Error = [dec]	The Red Mode ISSU client could not obtain a message data pointer.	ha-red-mode-client	"show issu fsm"
RED_MODE3MSG_MIU	3-Error	Red Mode Client [dec] get msg mtu failed. Error = [dec]	The Red Mode ISSU client could not obtain message size.	ha-red-mode-client	"show issu fsm"
RED_MODE3MSG_MIU	3-Error	Red Mode Client [dec] get msg mtu failed. Error = [dec]	The Red Mode ISSU client could not obtain message size.	ha-red-mode-client	"show issu fsm"
RED_MODE3MSG_REG	3-Error	Red Mode msg reg failed: reason [dec]	Messages for the Red Mode ISSU could not be registered.	ha-red-mode-client	"show issu message <arguments>"
RED_MODE3MSG_REG	3-Error	Red Mode msg reg failed: reason [dec]	Messages for the Red Mode ISSU could not be registered.	ha-red-mode-client	"show issu message <arguments>"
RED_MODE3MSG_SEND	3-Error	Red Mode ISSU client for session [dec] failed to send message. Error Code = [chars]	The Red Mode ISSU client could not send a negotiation message to a peer.	ha-red-mode-client	"show issu fsm"
RED_MODE3MSG_SEND	3-Error	Red Mode ISSU client for session [dec] failed to send message. Error Code = [chars]	The Red Mode ISSU client could not send a negotiation message to a peer.	ha-red-mode-client	"show issu fsm"
RED_MODE3MSG_GROU_PRCG	3-Error	Red Mode Msg Group [dec] for Entity [dec] Registration failed [chars]	The message group for the Red Mode ISSU could not be registered.	ha-red-mode-client	"show issu message groups"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>REDMODE</del> MSGGRP_REG	3-Error	Red Mode Msg Group [dec] for Entity [dec] Registration failed [chars]	The message group for the Red Mode ISSU could not be registered.	ha-red-mode-client	"show issu message groups"
<del>REDMODE</del> MSGTYPE_REG	3-Error	Red Mode Msg Type for Entity [dec] Registration failed [chars]	The message type for the Red Mode ISSU could not be registered.	ha-red-mode-client	"show issu message types"
<del>REDMODE</del> MSGTYPE_REG	3-Error	Red Mode Msg Type for Entity [dec] Registration failed [chars]	The message type for the Red Mode ISSU could not be registered.	ha-red-mode-client	"show issu message types"
<del>REDMODE</del> NO_DEREG_SIR	3-Error	Could not deregister plugin for redundancy mode [chars]	At system initialisation the plugin that describes the capabilities of this redundancy mode could not be deregistered with the redundancy mode client.	ha-red-mode-client	LOG_STD_ACTION
<del>REDMODE</del> NO_DEREG_SIR	3-Error	Could not deregister plugin for redundancy mode [chars]	At system initialisation the plugin that describes the capabilities of this redundancy mode could not be deregistered with the redundancy mode client.	ha-red-mode-client	LOG_STD_ACTION
<del>REDMODE</del> NO_REG_SIR	3-Error	Could not register plugin for redundancy mode [chars]	At system initialisation the plugin that describes the capabilities of this redundancy mode could not be registered with the redundancy mode client. This redundancy mode may not be available as an option from the parser.	ha-red-mode-client	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>REDMODE</del> NO_REGISTER	3-Error	Could not register plugin for redundancy mode [chars]	At system initialisation the plugin that describes the capabilities of this redundancy mode could not be registered with the redundancy mode client. This redundancy mode may not be available as an option from the parser.	ha-red-mode-client	LOG_STD_ACTION
<del>REDMODE</del> REGISTER_IN_DOMAIN	3-Error	Could not register plugin for redundancy mode [chars] in domain [dec]	At system initialisation the plugin that describes the capabilities of this redundancy mode could not be registered with the redundancy mode client in the given domain. This redundancy mode may not be available as an option from the parser.	ha-red-mode-client	LOG_STD_ACTION
<del>REDMODE</del> REGISTER_IN_DOMAIN	3-Error	Could not register plugin for redundancy mode [chars] in domain [dec]	At system initialisation the plugin that describes the capabilities of this redundancy mode could not be registered with the redundancy mode client in the given domain. This redundancy mode may not be available as an option from the parser.	ha-red-mode-client	LOG_STD_ACTION
<del>REDMODE</del> ISSU_MESSAGE_TYPE	3-Error	Red Mode ISSU msg type [dec] is not ok	Red Mode ISSU message type has not negotiated correctly	ha-red-mode-client	"show message types <Client_ID>"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>REDMODEMSGCHK</del>	3-Error	Red Mode ISSU msg type [dec] is not ok	Red Mode ISSU message type has not negotiated correctly	ha-red-mode-client	"show message types <Client_ID>"
<del>REDMODESNEGHE</del>	3-Error	Red Mode ISSU start nego session failed [chars]	The Red Mode ISSU could not start its negotiation process.	ha-red-mode-client	"show issu fsm"
<del>REDMODESNEGHE</del>	3-Error	Red Mode ISSU start nego session failed [chars]	The Red Mode ISSU could not start its negotiation process.	ha-red-mode-client	"show issu fsm"
<del>REDMODEFORMA</del>	3-Error	Red Mode ISSU [chars] transformation failed [chars]	The transformation operation for the Red Mode ISSU message has failed.	ha-red-mode-client	"show issu fsm and show issu sessions"
<del>REDMODEFORMA</del>	3-Error	Red Mode ISSU [chars] transformation failed [chars]	The transformation operation for the Red Mode ISSU message has failed.	ha-red-mode-client	"show issu fsm and show issu sessions"
<del>REDMODESHICTMDE</del>	3-Error	The mode change to [dec] was unsuccessful rc = [dec] force = [dec] caller = [dec]	The specified mode change operation did not complete successfully.	ha-red-mode-client	LOG_STD_ACTION
<del>REDMODESHICTMDE</del>	3-Error	The mode change to [dec] was unsuccessful rc = [dec] force = [dec] caller = [dec]	The specified mode change operation did not complete successfully.	ha-red-mode-client	LOG_STD_ACTION
<del>REDMODESESSIONREG</del>	3-Error	Red Mode session for Entity [dec] Registration failed [chars]	The Red Mode ISSU session could not be registered.	ha-red-mode-client	"show issu sessions"
<del>REDMODESESSIONREG</del>	3-Error	Red Mode session for Entity [dec] Registration failed [chars]	The Red Mode ISSU session could not be registered.	ha-red-mode-client	"show issu sessions"
<del>REDMODESESSIONUNREG</del>	3-Error	Red Mode session [dec] Un-Registration failed [chars]	The Red Mode ISSU session could not be unregistered.	ha-red-mode-client	"show issu sessions"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>REDMODE</del> ISSUNREG	3-Error	Red Mode session [dec] Un-Registration failed [chars]	The Red Mode ISSU session could not be unregistered.	ha-red-mode-client	"show issu sessions"
<del>REDMODE</del> NO <del>MDENCI</del>	4-Warning	Redundancy mode not defined in configuration. Please add to configuratio\n\n	The redundancy mode is usually defined at the top of the configuration. Until the redundancy mode is read or the end of the configuration is encountered the system will not allow the peer RSC to continue booting. Therefore if the system has to wait until the end of the configuration to discover that the default redundancy mode should be used then system booting times will be extended by the time taken for the RSC to read its configuration.	ha-red-mode-client	"Explicitly write the configuration to NVRAM so that the redundancy mode " "is discovered at an early stage."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
REDMODE4NOMDENCII	4-Warning	Redundancy mode not defined in configuration. Please add to configuratio\n\n	The redundancy mode is usually defined at the top of the configuration. Until the redundancy mode is read or the end of the configuration is encountered the system will not allow the peer RSC to continue booting. Therefore if the system has to wait until the end of the configuration to discover that the default redundancy mode should be used then system booting times will be extended by the time taken for the RSC to read its configuration.	ha-red-mode-client	"Explicitly write the configuration to NVRAM so that the redundancy mode " "is discovered at an early stage."
REDMODE4PROC_CREATE	4-Warning	Red Mode process could not be created	The red mode process could not be created red mode changes may result in IPC hogs.	ha-red-mode-client	LOG_STD_ACTION
REDMODE4PROC_CREATE	4-Warning	Red Mode process could not be created	The red mode process could not be created red mode changes may result in IPC hogs.	ha-red-mode-client	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>RDM</del> <del>DRPL</del> <del>S</del> <del>DIRCAD</del>	4-Warning	<pre> \n ***** * Warning The redundancy mode RPR+ is being deprecated *\n * and will be removed in future releases. Please change *\n * mode to SSO: *\n * redundancy *\n * mode sso *\n ***** </pre>	RPR+ being deprecated	ha-red-mode-client	"Please change mode to SSO"
<del>RDM</del> <del>DRPL</del> <del>S</del> <del>DIRCAD</del>	4-Warning	<pre> \n ***** * Warning The redundancy mode RPR+ is being deprecated *\n * and will be removed in future releases. Please change *\n * mode to SSO: *\n * redundancy *\n * mode sso *\n ***** </pre>	RPR+ being deprecated	ha-red-mode-client	"Please change mode to SSO"
<del>REDUNDANCY</del> <del>INVALID</del> <del>UNIT</del> <del>DESIGN</del>	3-Error	An invalid redundancy designation [chars] has been detected.	The redundancy utility assigns each system a unit designation of either an Active Unit Standby Unit or Other Unit and this designation was found to be invalid in the run-time module associated with the system traceback message. This condition most likely occurred because of a software error. The message text provides more information on the specific nature of the error.	ehsa	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
REDUNDANCY-2-IPC	2-Critical	[chars] [chars]	-	ehsa	"Copy the error message exactly as it appears. Copy down the system's\n\ configuration along with any other relevant information. Contact your\n\ technical support representative for assistance."
REDUNDANCY-3-CONGSYNC	3-Error	[chars]	A REDUNDANCY config sync error occurred. The details about\n\ what was attempted and what went wrong will be printed.	ehsa	"Copy the error message exactly as it appears. Copy down the system's\n\ configuration along with any other relevant information. Contact your\n\ technical support representative for assistance."
REDUNDANCY-3-HISSU	3-Error	[chars] failed with error code [ [chars] ]	An ISSU related REDUNDANCY error occurred. The details about\n\ what was attempted and what went wrong will be printed.	ehsa	"Copy the error message exactly as it appears. Copy down the system's\n\ configuration along with any other relevant information. Contact your\n\ technical support representative for assistance."
REDUNDANCY-3-FSM	3-Error	[chars]	-	ehsa	"Copy the error message exactly as it appears. Copy down the system's\n\ configuration along with any other relevant information. Contact your\n\ technical support representative for assistance."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>REDUNDANCY3SMERROR</del>	3-Error	[chars] Error Code: [dec]	-	ehsa	"Copy the error message exactly as it appears. Copy down the system's\n\n configuration along with any other relevant information. Contact your\n\n technical support representative for assistance."
<del>REDUNDANCY3GENERAL</del>	3-Error	[chars]	A REDUNDANCY error occurred. The details about\n\n what was attempted and what went wrong will be printed.	ehsa	"Copy the error message exactly as it appears. Copy down the system's\n\n configuration along with any other relevant information. Contact your\n\n technical support representative for assistance."
<del>REDUNDANCY3MEMORY_DF</del>	3-Error	WARNING nonsymmetrical configuration:\n\n Active has [dec]K Standby has [dec]K\n	The redundant RPs have different memory configurations.	ehsa	"The configuration is allowed but discouraged."
<del>REDUNDANCY3PEERMONITOR</del>	3-Error	[chars]	A REDUNDANCY Peer Monitor error occurred. The details about\n\n what was attempted and what went wrong will be printed.	ehsa	"Copy the error message exactly as it appears. Copy down the system's\n\n configuration along with any other relevant information. Contact your\n\n technical support representative for assistance."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>REDUNDANCY</del> REDUNDANCY_ALARMS	3-Error	[chars]	A REDUNDANCY Alarm assertions error occurred. The details about\n what was attempted and what went wrong will be printed.	ehsa	"Copy the error message exactly as it appears. Copy down the system's\n configuration along with any other relevant information. Contact your\n technical support representative for assistance."
<del>REDUNDANCY</del> REDUNDANCY_STANDBY_FAULT	3-Error	Standby processor fault [chars]	The standby processor is no longer available.	ehsa	"Copy the error message exactly as it appears. Copy down the system's\n configuration along with any other relevant information. Contact your\n technical support representative for assistance."
<del>REDUNDANCY</del> REDUNDANCY_SWITCHOVER	3-Error	RP switchover [chars]	A REDUNDANCY switchover has occurred.	ehsa	"Copy the error message exactly as it appears. Copy down the system's\n configuration along with any other relevant information. Contact your\n technical support representative for assistance."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>REDUNDANCY</del> REDUNDANCY	4-Warning	Resetting peer [chars] because it did not respond to verification of HA role.	The Standby peer has reloaded itself to correct a configuration mismatch between the Active and the Standby. The Standby has detected that it is missing configuration for a line card. This has most likely happened because the Standby was reloaded prior to the new card being inserted.	ehsa	LOG_SID_NO_ACTION
<del>REDUNDANCY</del> REDUNDANCY	4-Warning	Reloading the Standby [chars]	The Active has sent a reload IPC request to the Standby peer. If the reload is not successful then the Standby will be power cycled instead.	ehsa	LOG_STD_ACTION
<del>REDUNDANCY</del> REDUNDANCY	5-Notice	[chars] [chars][chars][dec]\n	A REDUNDANCY Peer Monitor event occurred and reported. The report should\n\n help to find out the reason for a switch-over.	ehsa	"Copy the error message exactly as it appears. Copy down the system's\n\n configuration along with any other relevant information. Contact your\n\n technical support representative for assistance."
<del>REDUNDANCY</del> REDUNDANCY	5-Notice	ERRMSG_NOFLAGS	-	-	-
<del>REDUNDANCY</del> REDUNDANCY	5-Notice	ERRMSG_NOFLAGS	-	-	-
<del>REDUNDANCY</del> REDUNDANCY	6-Information	Time taken to switchover = [dec] milliseconds	This is how long the Standby peer took to become Active after a failure of the existing Active.	ehsa	LOG_SID_NO_ACTION
REG_COMP-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
REG_COMP-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>REG_ALARMSEXTIWDG</del>	2-Critical	ERRMSG_NOFLAGS	-	-	-
<del>REG_ALARMSEXTIWDG</del>	2-Critical	ERRMSG_NOFLAGS	-	-	-
REGISTRATION_FAIL3LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
REGISTRATION_FAIL3LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>REG_ALARMFLAG_DEADLOCK</del>	2-Critical	Registry call to [chars] timed out due to deadlock	-	remote-registry	"Copy the error message exactly as it appears and report it\n\ to your technical support representative."
<del>REG_ALARMFLAG_DEADLOCK</del>	2-Critical	Registry call to [chars] timed out due to deadlock	-	remote-registry	"Copy the error message exactly as it appears and report it\n\ to your technical support representative."
<del>REG_ALARMPARSE_ERROR</del>	2-Critical	[chars]: Could not parse notification [chars] : error/no. of items = [dec]	-	remote-registry	"Copy the error message exactly as it appears and report it\n\ to your technical support representative."
<del>REG_ALARMPARSE_ERROR</del>	2-Critical	[chars]: Could not parse notification [chars] : error/no. of items = [dec]	-	remote-registry	"Copy the error message exactly as it appears and report it\n\ to your technical support representative."
<del>REG_ALARMFASTCASE_OUT_OF_BOUNDS</del>	3-Error	Attempt made in [chars] to register with out of bounds key.	In FASTCASE registry the key has to be smaller than the size specified when the registry was created. This message indicates that an attempt was made to register with a key out of bounds.	-	"Copy the error message exactly as it appears and report it " "to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>REGISTRY-3-OUTOUBOUNDS</del>	3-Error	Attempt made in [chars] to register with out of bounds key.	In FASTCASE registry the key has to be smaller than the size specified when the registry was created. This message indicates that an attempt was made to register with a key out of bounds.	-	"Copy the error message exactly as it appears and report it " "to your technical support representative."
<del>REGISTRY-3-OUTOUBOUNDS</del>	3-Error	iosxe-binos-utils	"Attempt made in[chars] to register with out of bounds key"	"In the FASTCASE registry the key has to be smaller than the size specified when the registry was created. This message indicates that an attempt was made to register with a key which is out of bounds."	LOG_STD_ACTION
REGISTRY-3-LCON	3-Error	ERRMSG_NOFLAGS	-	-	-
REGISTRY-3-LCON	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>REGISTRY-3-REG_FLAG_ERR</del>	3-Error	Invalid combination of registry flag and scheduler control : [chars]	When process blocking has been disabled either using\n\n raise_interrupt_level or assign_blocking disabled a remote registry\n\n with flags <del>REG_FLAG_DISABLE_REMOTE_REGISTRY</del> has been invoked.	remote-registry	"Copy the error message exactly as it appears and report it\n\n to your technical support representative."
<del>REGISTRY-3-REG_FLAG_ERR</del>	3-Error	Invalid combination of registry flag and scheduler control : [chars]	When process blocking has been disabled either using\n\n raise_interrupt_level or assign_blocking disabled a remote registry\n\n with flags <del>REG_FLAG_DISABLE_REMOTE_REGISTRY</del> has been invoked.	remote-registry	"Copy the error message exactly as it appears and report it\n\n to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
REGISTRY-3-REG_SUSPEND	3-Error	Registry of type SUSPEND called when suspends are not allowed.	When process blocking has been disabled either using\n\nraise_interrupt_level or assign_blocking_disabled\n\na remote registry of type SUSPEND has been invoked.	remote-registry	"Copy the error message exactly as it appears and report it\n\n to your technical support representative."
REGISTRY-3-REG_SUSPEND	3-Error	Registry of type SUSPEND called when suspends are not allowed.	When process blocking has been disabled either using\n\nraise_interrupt_level or assign_blocking_disabled\n\na remote registry of type SUSPEND has been invoked.	remote-registry	"Copy the error message exactly as it appears and report it\n\n to your technical support representative."
REGISTRY-3-REG_XDR	3-Error	[chars]	There was an error while marshalling a parameter to a remote\n\n inter-process registry call	remote-registry	"Copy the error message exactly as it appears and report it\n\n to your technical support representative."
REGISTRY-3-REG_XDR	3-Error	[chars]	There was an error while marshalling a parameter to a remote\n\n inter-process registry call	remote-registry	"Copy the error message exactly as it appears and report it\n\n to your technical support representative."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>RCSIR4</del> IOSLISTOVERRIDE	3-Error	Attempt made to overwrite a set sequence function [chars]	A single function can be set as a callback for a specified \n\ sequence number for a sequenced list registry. \n\ This message indicates that an attempt to set a new callback has \n\ failed because a callback function has already been set for this \n\ sequence number.	-	"Copy the error message exactly as it appears and report it\n\ to your technical support representative."
<del>RCSIR4</del> IOSLISTOVERRIDE	3-Error	Attempt made to overwrite a set sequence function [chars]	A single function can be set as a callback for a specified \n\ sequence number for a sequenced list registry. \n\ This message indicates that an attempt to set a new callback has \n\ failed because a callback function has already been set for this \n\ sequence number.	-	"Copy the error message exactly as it appears and report it\n\ to your technical support representative."
<del>RCSIR4</del> IOSLISTOVERRIDE	3-Error	iosxe-binos-utils	"Attempt to overwrite a set sequence function (%s)"	"A single function can be set as a callback for a specified sequence number for a sequenced list registry. This message indicates that an attempt to set a new callback has failed because a callback function has already been set for this sequence number."	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RCRFSUBCHKOMWRIE	3-Error	Attempt made to overwrite a set stub function in [chars].	A single function can be set as a callback for when a stub w/ check\n\n registry is invoked. This message indicates that an attempt to\n\n set a new callback has failed because a callback function\n\n has already been set.	-	"Copy the error message exactly as it appears and report it\n\n to your technical support representative."
RCRFSUBCHKOMWRIE	3-Error	Attempt made to overwrite a set stub function in [chars].	A single function can be set as a callback for when a stub w/ check\n\n registry is invoked. This message indicates that an attempt to\n\n set a new callback has failed because a callback function\n\n has already been set.	-	"Copy the error message exactly as it appears and report it\n\n to your technical support representative."
RCRFSUBCHKOMWRIE	3-Error	iosxe-binos-utils	"Attempt made to overwrite a set stub function in[chars]"	"A single function can be set as a callback for when a stub with check registry is invoked. This message indicates that an attempt to set a new callback has failed because a callback function has already been set."	LOG_STD_ACTION
REMIF-3-BADCMD	3-Error	[node]from %i	-	-	""
REMIF-3-CLOSED	3-Error	[chars] has released [chars]	-	-	""
REMIF-3-DUOPEN	3-Error	[chars] is already open by [chars]	-	-	""
REMIF-3-IFNONE	3-Error	[chars] does not exist. Requested by [chars]	-	-	""

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
REMIF-3-INITSYS	3-Error	[chars]	Failed to create remif_udp_process	-	""
REMIF-3-IQUEUE	3-Error	input on [chars]	-	-	""
REMIF-3-NOMEM	3-Error	No available memory for [chars]	-	-	""
REMIF-3-NOSOCKET	3-Error	Unable to open UDP input socket	The requested operation could not be accomplished because of a possible low memory condition.	-	-
REMIF-3-OPEN	3-Error	[chars] now owns [chars]	-	-	""
REMIF-3-OQUEUE	3-Error	output on [chars]	-	-	""
REMIF-3-TCPERR	3-Error	TCP error status [dec]	-	-	""
REMOIE_TTY2NOMEM	2-Critical	Malloc failure for remote-tty [chars] data-structure	Unable to allocate memory for remote-tty data-structure.\n\nRemote-tty component will not be able to function properly.	remote-tty	"show memory summary"
REMOIE_TTY2NOMEM	2-Critical	Malloc failure for remote-tty [chars] data-structure	Unable to allocate memory for remote-tty data-structure.\n\nRemote-tty component will not be able to function properly.	remote-tty	"show memory summary"
REMOEAMISEAUIJN	4-Warning	ERRMSG_NOFLAGS	-	-	-
REMOEAMISEAUIJN	4-Warning	ERRMSG_NOFLAGS	-	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
REP_ISSU-3-BUFFER	3-Error	REP ISSU client failed to get buffer for message error [dec]	REP ISSU client failed to get buffer for building a negotiation message. Hence it can send the negotiation message to the standby unit. When there is a problem in the negotiation the standby unit can not be brought up.	rep	"show logging and show checkpoint client"
REP_ISSU-3-CAPABILITY	3-Error	REP ISSU client [chars]	REP ISSU client observed an error during capability negotiation. When this error happens there is a mismatch between the client capability between the active and standby unit.	rep	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
REP_ISSU-3-INIT	3-Error	REP ISSU client initialization failed at [chars] error [chars]	REP ISSU client could not be initialized this will cause catastrophic failure when ISSU upgrade or downgrade is performed.	rep	LOGS_IDSHTTECHACION
REP_ISSU-3-MSG_NOT_OK	3-Error	REP ISSU client message [dec] is not compatible	REP ISSU client received an incompatible message from the peer unit. Since the message is not compatible it can be processed by this unit	rep	"show issu message group <client_id> and" "show issu session <client_id> and" "show issu negotiated version <session_id>"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
REP_ISSU-3-MSG_SIZE	3-Error	REP ISSU client failed to get the message size for message [dec]	REP ISSU client failed to calculate message size for the message specified. The REP ISSU client will not be able to send message to the standby unit.	rep	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
REP_ISSU-3-POLICY	3-Error	REP ISSU client message type [dec] is [chars]	REP ISSU client received an message type which it does not support. The policy is applied to make the session compatible.	rep	"show issu session <client_id>"
REP_ISSU-3-SEND_FAILED	3-Error	REP ISSU client failed to send a negotiation message error [dec]	REP ISSU client could not send a session negotiation message to the peer. When there is a problem in the negotiation the standby unit can not be brought up.	rep	"show logging and show checkpoint client"
REP_ISSU-3-SESSION	3-Error	REP ISSU client [chars]	REP ISSU client observed an error during a session negotiation with the peer unit. When there is a problem with the session the standby unit can not be brought up.	rep	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
REP_ISSU-3-UNREGISTER	3-Error	REP ISSU client failed to unregister session information. Error: [dec] [chars]	The REP ISSU client failed to unregister session information.	rep	"show issu session <client_id> and " "show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
REP_ISSU3-TRANSFORM	3-Error	REP ISSU client [chars] transform failed error [chars]	REP ISSU client could not transform the message. If the transmit transformation failed it means that the checkpoint message can not be sent to the standby unit. If the receive transformation failed it means that the checkpoint message can not be applied on the standby unit. In both cases the Port Manager state will not be identical with the active unit.	rep	"show issu session <client_id> and" "show issu negotiated version <session_id>"
REP-3-NOPPPROC	3-Error	Failed to create REP LSL Fast Hello Process	-	rep	-
REP5-EDGEMISCONFIG	5-Notice	Invalid topology. More than two edge ports configured for segment [dec]	-	rep	LOG_STD_ACTION
REP-3-REP-CONF-RED	5-Notice	Interface [chars] is REP configured with Segment-id [dec]	Interface [chars] is REP configured with Segment-id [dec]	-	LOG_SID_NO_ACTION
REP-3-SEGMENT-DM-MACH	5-Notice	CDP TLV Segment-id for interface [chars] is [dec]	CDP TLV Segment-id for interface [chars] is [dec]	-	LOG_SID_NO_ACTION
REP-3-REP-CONF-RED	3-Error	[chars] [dec]	LSM Replicated packets may not be forwarded.	OCE-DDIS-COMPONENT	LOG_STD_ACTION
REP-3-REP-CONF-RED	3-Error	[chars] [dec]	LSM Replicated packets may not be forwarded.	OCE-DDIS-COMPONENT	LOG_STD_ACTION
REP-3-REP-CONF-RED	6-Information	Packet too short datagram size [dec] tl [dec]	An IP packet which is too short was received	OCE-DDIS-COMPONENT	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>REQGRP-3-IPCTXERR</del> REQGRP-3-IPCTXERR	6-Information	Packet too short datagram size [dec] tl [dec]	An IP packet which is too short was received	OCEDDIS_COMPONENT	LOG_STD_ACTION
REQGRP-3-DSPTCHQ	3-Error	[chars]	Disptach IPC queue initialization failure.	ubr10k-sw	LOG_STD_ACTION
REQGRP-3-DSPTCHQ	3-Error	[chars]	Disptach IPC queue initialization failure.	ubr10k-sw	LOG_STD_ACTION
REQGRP-3-ENQFAIL	3-Error	enqueue failed! queue:[chars] size:[dec]	process enqueue failed.	ubr10k-sw	LOG_STD_ACTION
REQGRP-3-ENQFAIL	3-Error	enqueue failed! queue:[chars] size:[dec]	process enqueue failed.	ubr10k-sw	LOG_STD_ACTION
REQGRP-3-IPCTXERR	3-Error	IPC send failure: version=V1 msg=[dec] error=[chars] slot [node]%u	-	-	-
REQGRP-3-IPCTXERR	3-Error	IPC send failure: version=V1 msg=[dec] error=[chars] slot [node]%u	-	-	-
REQGRP-3-NBLKENQFAIL	3-Error	[chars] slot [node]%u	-	-	-
REQGRP-3-NBLKENQFAIL	3-Error	[chars] slot [node]%u	-	-	-
REQGRP-3-NBLKQ	3-Error	[chars]	Nonblocking IPC queue initialization failure.	ubr10k-sw	LOG_STD_ACTION
REQGRP-3-NBLKQ	3-Error	[chars]	Nonblocking IPC queue initialization failure.	ubr10k-sw	LOG_STD_ACTION
REQGRP-3-NORESP	3-Error	No response generated for IPC request [node]slot [node][node] [chars]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
REQGRP-3-NORESP	3-Error	No response generated for IPC request [node]slot [node][node] [chars]	-	-	-
REQGRP-3-NOSESSION	3-Error	Unable to create client object for client [node]entity [node]slot [node][node] [chars]	-	-	-
REQGRP-3-NOSESSION	3-Error	Unable to create client object for client [node]entity [node]slot [node][node] [chars]	-	-	-
REQGRP-3-REQOP	3-Error	IPC request/response [node]slot [node][node] [chars]	Operational errors while processing an IPC Request.	ubr10k-sw	LOG_STD_ACTION
REQGRP-3-REQOP	3-Error	IPC request/response [node]slot [node][node] [chars]	Operational errors while processing an IPC Request.	ubr10k-sw	LOG_STD_ACTION
REQGRP-3-RPCREQ	3-Error	RPC blocked message for client [node]entity [node]slot[node][node] [chars]	-	-	-
REQGRP-3-RPCREQ	3-Error	RPC blocked message for client [node]entity [node]slot[node][node] [chars]	-	-	-
REQGRP-3-SYSCALL	3-Error	System call for command [node]slot[node][node]: [chars] Cause: [chars]	-	-	-
REQGRP-3-SYSCALL	3-Error	System call for command [node]slot[node][node]: [chars] Cause: [chars]	-	-	-



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
REQGRP-3-UNKCONN	3-Error	Unknow connection state [dec] from callback for client [node]entity [node]slot [node]%u	-	-	-
REQGRP-3-UNKCONN	3-Error	Unknow connection state [dec] from callback for client [node]entity [node]slot [node]%u	-	-	-
REQGRP-4-PCWATERMARK	4-Warning	The size of request queue for slot[dec]/[dec] service type [dec] has exceed the high watermark [dec]	Several unblocked IPC message are pending in the request queue to get the ack. If the pending message are increasing it may result in the Memory leak.	ubr10k-sw	LOG_STD_ACTION
REQGRP-4-PCWATERMARK	4-Warning	The size of request queue for slot[dec]/[dec] service type [dec] has exceed the high watermark [dec]	Several unblocked IPC message are pending in the request queue to get the ack. If the pending message are increasing it may result in the Memory leak.	ubr10k-sw	LOG_STD_ACTION
REQGRP-6-CORRUPTIPC	6-Information	Corrupted IPC slot = [dec]/[dec] received at Cable[dec]/[dec]	Some code has clobbered the IPC message	ubr10k-sw	LOG_STD_ACTION
REQGRP-6-CORRUPTIPC	6-Information	Corrupted IPC slot = [dec]/[dec] received at Cable[dec]/[dec]	Some code has clobbered the IPC message	ubr10k-sw	LOG_STD_ACTION
REQGRP-6-NONBLKVTQFUL	6-Information	Nonblocking IPC event queue full [dec] events	-	-	-
REQGRP-6-NONBLKVTQFUL	6-Information	Nonblocking IPC event queue full [dec] events	-	-	-
REQGRP-6-UNKLCREQ	6-Information	Received unknown IPC request [dec] from [dec]/[dec]	-	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
REQGRP-6-UNKLCREQ	6-Information	Received unknown IPC request [dec] from [dec]/[dec]	-	-	-
REQGRP-6-UNKVER	6-Information	Received IPC with unsupported version [dec]	-	-	-
REQGRP-6-UNKVER	6-Information	Received IPC with unsupported version [dec]	-	-	-
RESEIMGR-3-NOMEM	3-Error	Failed to allocate memory to add ID [dec] to table	Reset Manager was unable to allocate memory to add the unique ID and process name to its table. If this process is restarted on the Active system the Standby system may not be reset due to this error.	resetmgr	"show tech"
RESEIMGR-3-NOMEM	3-Error	Failed to allocate memory to add ID [dec] to table	Reset Manager was unable to allocate memory to add the unique ID and process name to its table. If this process is restarted on the Active system the Standby system may not be reset due to this error.	resetmgr	"show tech"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RESETMGR-3-RESET	3-Error	Reset Manager has reset the system due to '[chars]' process restart	Reset Manager stores a set of IDs each one of these IDs uniquely identify a process on the system. If one of these monitored processes is restarted the Standby unit will be reset so that the versioning infrastructure can renegotiate. This is not a software fault the Standby system is being forced to reset by the Reset Manager.	resetmgr	LOG_SID_NO_ACTION
RESETMGR-3-RESET	3-Error	Reset Manager has reset the system due to '[chars]' process restart	Reset Manager stores a set of IDs each one of these IDs uniquely identify a process on the system. If one of these monitored processes is restarted the Standby unit will be reset so that the versioning infrastructure can renegotiate. This is not a software fault the Standby system is being forced to reset by the Reset Manager.	resetmgr	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>RSEMCRISE</del> RSEMCRISE_UNKNOWN	3-Error	A restarted process could not be identified by its Job ID the Reset Manager has reset the Standby system.	Reset Manager stores a set of IDs each one of these IDs uniquely identifies a process on the system. A process was restarted but it could not be uniquely identified via it Job ID. It is possible that the restarted process was being monitored by the Reset Manager but since we cannot be sure the Standby system is being reset. This is most likely due to a software fault on the system.	resetmgr	LOG_SID_NO_ACTION
<del>RSEMCRISE</del> RSEMCRISE_UNKNOWN	3-Error	A restarted process could not be identified by its Job ID the Reset Manager has reset the Standby system.	Reset Manager stores a set of IDs each one of these IDs uniquely identifies a process on the system. A process was restarted but it could not be uniquely identified via it Job ID. It is possible that the restarted process was being monitored by the Reset Manager but since we cannot be sure the Standby system is being reset. This is most likely due to a software fault on the system.	resetmgr	LOG_SID_NO_ACTION
<del>RSEMCRISE</del> RSEMCRISE_CRDICKOP	3-Error	Failed to get the job ID of the Reset Manger IOS blob from SysMgr	Reset Manager was unable to get it's job ID same as IOS blob from	resetmgr	"show tech"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>RESMGRS_CRODICOUP</del>	3-Error	Failed to get the job ID of the Reset Manger IOS blob from SysMgr	Reset Manager was unable to get it's job ID same as IOS blob from	resetmgr	"show tech"
<del>RESMGRS_CRODICOUP</del>	4-Warning	Failed to lookup process name from SysMgr job ID = [dec]	Reset Manager was unable to get the name of the process with the specified job ID from SysMgr. This is a SysMgr error however the system can continue to operate normally as the process name is only used for reference purposes.	resetmgr	"show tech"
<del>RESMGRS_CRODICOUP</del>	4-Warning	Failed to lookup process name from SysMgr job ID = [dec]	Reset Manager was unable to get the name of the process with the specified job ID from SysMgr. This is a SysMgr error however the system can continue to operate normally as the process name is only used for reference purposes.	resetmgr	"show tech"
RESTART_SHUTDOWN4DP	4-Warning	ERRMSG_NOFLAGS	-	-	-
RESTART_SHUTDOWN4DP	4-Warning	ERRMSG_NOFLAGS	-	-	-
RF_ISSU-3-CAP_REG	3-Error	RF cap reg on domain [dec] failed: reason [dec]	The capabilities of the RF ISSU could not be registered.	ha-issu-infra	"show issu capability <arguments>"
RF_ISSU-3-CAP_REG	3-Error	RF cap reg on domain [dec] failed: reason [dec]	The capabilities of the RF ISSU could not be registered.	ha-issu-infra	"show issu capability <arguments>"
RF_ISSU-3-CAP_REG	3-Error	RF cap reg on domain [dec] failed: reason [dec]	The capabilities of the RF ISSU could not be registered.	ha-issu-infra	"show issu capability <arguments>"
RF_ISSU-3-CAP_REG	3-Error	RF cap reg on domain [dec] failed: reason [dec]	The capabilities of the RF ISSU could not be registered.	ha-issu-infra	"show issu capability <arguments>"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
RF_ISSU3CAPENTRY_REG	3-Error	RF Cap Entry [dec] for Entity [dec] domain [dec] Registration failed	A capability entry could not be registered for the RF ISSU.	ha-issu-infra	"show issu capability entries"
RF_ISSU3CAPENTRY_REG	3-Error	RF Cap Entry [dec] for Entity [dec] domain [dec] Registration failed	A capability entry could not be registered for the RF ISSU.	ha-issu-infra	"show issu capability entries"
RF_ISSU3CAPENTRY_REG	3-Error	RF Cap Entry [dec] for Entity [dec] domain [dec] Registration failed	A capability entry could not be registered for the RF ISSU.	ha-issu-infra	"show issu capability entries"
RF_ISSU3CAPENTRY_REG	3-Error	RF Cap Entry [dec] for Entity [dec] domain [dec] Registration failed	A capability entry could not be registered for the RF ISSU.	ha-issu-infra	"show issu capability entries"
RF_ISSU3CAPGROUP_REG	3-Error	RF Cap Group [dec] for Entity [dec] domain [dec] Registration failed	A capability group could not be registered for the RF ISSU.	ha-issu-infra	"show capability groups"
RF_ISSU3CAPGROUP_REG	3-Error	RF Cap Group [dec] for Entity [dec] domain [dec] Registration failed	A capability group could not be registered for the RF ISSU.	ha-issu-infra	"show capability groups"
RF_ISSU3CAPGROUP_REG	3-Error	RF Cap Group [dec] for Entity [dec] domain [dec] Registration failed	A capability group could not be registered for the RF ISSU.	ha-issu-infra	"show capability groups"
RF_ISSU3CAPGROUP_REG	3-Error	RF Cap Group [dec] for Entity [dec] domain [dec] Registration failed	A capability group could not be registered for the RF ISSU.	ha-issu-infra	"show capability groups"
RF_ISSU3CAPTYPE_REG	3-Error	RF Cap Type for Entity [dec] domain [dec] Registration failed	A capability type could not be registered for the RF ISSU.	ha-issu-infra	"show issu capability types"
RF_ISSU3CAPTYPE_REG	3-Error	RF Cap Type for Entity [dec] domain [dec] Registration failed	A capability type could not be registered for the RF ISSU.	ha-issu-infra	"show issu capability types"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
RF_ISSU3CAPTYPE_REG	3-Error	RF Cap Type for Entity [dec] domain [dec] Registration failed	A capability type could not be registered for the RF ISSU.	ha-issu-infra	"show issu capability types"
RF_ISSU3CAPTYPE_REG	3-Error	RF Cap Type for Entity [dec] domain [dec] Registration failed	A capability type could not be registered for the RF ISSU.	ha-issu-infra	"show issu capability types"
RF_ISSU3CLIENT_REG	3-Error	RF Client [dec] Registration failed	The RF ISSU client could not be registered.	ha-issu-infra	"show issu clients"
RF_ISSU3CLIENT_REG	3-Error	RF Client [dec] Registration failed	The RF ISSU client could not be registered.	ha-issu-infra	"show issu clients"
RF_ISSU3CLIENT_REG	3-Error	RF Client [dec] Registration failed	The RF ISSU client could not be registered.	ha-issu-infra	"show issu clients"
RF_ISSU3CLIENT_REG	3-Error	RF Client [dec] Registration failed	The RF ISSU client could not be registered.	ha-issu-infra	"show issu clients"
RF_ISSU3CLIENT_REG_FAILED	3-Error	RF ISSU client [dec] domain [dec] Client registration failed. [chars]	The RF ISSU client could not be registered during system initialization.	ha-issu-infra	"show issu clients"
RF_ISSU3CLIENT_REG_FAILED	3-Error	RF ISSU client [dec] domain [dec] Client registration failed. [chars]	The RF ISSU client could not be registered during system initialization.	ha-issu-infra	"show issu clients"
RF_ISSU3CLIENT_REG_FAILED	3-Error	RF ISSU client [dec] domain [dec] Client registration failed. [chars]	The RF ISSU client could not be registered during system initialization.	ha-issu-infra	"show issu clients"
RF_ISSU3CLIENT_REG_FAILED	3-Error	RF ISSU client [dec] domain [dec] Client registration failed. [chars]	The RF ISSU client could not be registered during system initialization.	ha-issu-infra	"show issu clients"
RF_ISSU3ENTITY_REG	3-Error	RF Entity [dec] domain [dec] Registration failed	The RF ISSU entity could not be registered.	ha-issu-infra	"show issu entities"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RF_ISSU3-ENTITY_REG	3-Error	RF Entity [dec] domain [dec] Registration failed	The RF ISSU entity could not be registered.	ha-issu-infra	"show issu entities"
RF_ISSU3-ENTITY_REG	3-Error	RF Entity [dec] domain [dec] Registration failed	The RF ISSU entity could not be registered.	ha-issu-infra	"show issu entities"
RF_ISSU3-ENTITY_REG	3-Error	RF Entity [dec] domain [dec] Registration failed	The RF ISSU entity could not be registered.	ha-issu-infra	"show issu entities"
RF_ISSU3-GET_BUFFER	3-Error	RF ISSU session [dec] domain [dec] failed to get buffer	RF ISSU failed to get a buffer	ha-issu-infra	"show issu fsm"
RF_ISSU3-GET_BUFFER	3-Error	RF ISSU session [dec] domain [dec] failed to get buffer	RF ISSU failed to get a buffer	ha-issu-infra	"show issu fsm"
RF_ISSU3-GET_BUFFER	3-Error	RF ISSU session [dec] domain [dec] failed to get buffer	RF ISSU failed to get a buffer	ha-issu-infra	"show issu fsm"
RF_ISSU3-GET_BUFFER	3-Error	RF ISSU session [dec] domain [dec] failed to get buffer	RF ISSU failed to get a buffer	ha-issu-infra	"show issu fsm"
RF_ISSU3-INVALID_SESSION	3-Error	RF ISSU client on domain [dec] does not have a valid registered session.	The RF ISSU client does not have a valid registered session.	ha-issu-infra	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
RF_ISSU3-INVALID_SESSION	3-Error	RF ISSU client on domain [dec] does not have a valid registered session.	The RF ISSU client does not have a valid registered session.	ha-issu-infra	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
RF_ISSU3-INVALID_SESSION	3-Error	RF ISSU client on domain [dec] does not have a valid registered session.	The RF ISSU client does not have a valid registered session.	ha-issu-infra	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RF_ISSU3NALD_SESSION	3-Error	RF ISSU client on domain [dec] does not have a valid registered session.	The RF ISSU client does not have a valid registered session.	ha-issu-infra	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
RF_ISSU3MSGBADHRS	3-Error	Inbound ISSU message routed through RF on domain [dec]	RF has received an invalid ISSU message which will not be processed.	redundancy-rf	"show redundancy history reverse"
RF_ISSU3MSGBADHRS	3-Error	Inbound ISSU message routed through RF on domain [dec]	RF has received an invalid ISSU message which will not be processed.	redundancy-rf	"show redundancy history reverse"
RF_ISSU3MSGBADHRS	3-Error	Inbound ISSU message routed through RF on domain [dec]	RF has received an invalid ISSU message which will not be processed.	redundancy-rf	"show redundancy history reverse"
RF_ISSU3MSGBADHRS	3-Error	Inbound ISSU message routed through RF on domain [dec]	RF has received an invalid ISSU message which will not be processed.	redundancy-rf	"show redundancy history reverse"
RF_ISSU3MSG_DATAPIR	3-Error	RF Client [dec] domain [dec] get msg dataptr failed. Error = [dec]	The RF ISSU client could not obtain a message data pointer.	ha-issu-infra	"show issu fsm"
RF_ISSU3MSG_DATAPIR	3-Error	RF Client [dec] domain [dec] get msg dataptr failed. Error = [dec]	The RF ISSU client could not obtain a message data pointer.	ha-issu-infra	"show issu fsm"
RF_ISSU3MSG_DATAPIR	3-Error	RF Client [dec] domain [dec] get msg dataptr failed. Error = [dec]	The RF ISSU client could not obtain a message data pointer.	ha-issu-infra	"show issu fsm"
RF_ISSU3MSG_DATAPIR	3-Error	RF Client [dec] domain [dec] get msg dataptr failed. Error = [dec]	The RF ISSU client could not obtain a message data pointer.	ha-issu-infra	"show issu fsm"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
RF_ISSU-3-MSG_MTU	3-Error	RF Client [dec] domain [dec] get msg mtu failed. Error = [dec]	The RF ISSU client could not obtain message size.	ha-issu-infra	"show issu fsm"
RF_ISSU-3-MSG_MTU	3-Error	RF Client [dec] domain [dec] get msg mtu failed. Error = [dec]	The RF ISSU client could not obtain message size.	ha-issu-infra	"show issu fsm"
RF_ISSU-3-MSG_MTU	3-Error	RF Client [dec] domain [dec] get msg mtu failed. Error = [dec]	The RF ISSU client could not obtain message size.	ha-issu-infra	"show issu fsm"
RF_ISSU-3-MSG_MTU	3-Error	RF Client [dec] domain [dec] get msg mtu failed. Error = [dec]	The RF ISSU client could not obtain message size.	ha-issu-infra	"show issu fsm"
RF_ISSU-3-MSG_REG	3-Error	RF msg reg on domain [dec] failed: reason [dec]	Messages for the RF ISSU could not be registered.	ha-issu-infra	"show issu message <arguments>"
RF_ISSU-3-MSG_REG	3-Error	RF msg reg on domain [dec] failed: reason [dec]	Messages for the RF ISSU could not be registered.	ha-issu-infra	"show issu message <arguments>"
RF_ISSU-3-MSG_REG	3-Error	RF msg reg on domain [dec] failed: reason [dec]	Messages for the RF ISSU could not be registered.	ha-issu-infra	"show issu message <arguments>"
RF_ISSU-3-MSG_REG	3-Error	RF msg reg on domain [dec] failed: reason [dec]	Messages for the RF ISSU could not be registered.	ha-issu-infra	"show issu message <arguments>"
RF_ISSU-3-MSG_SEND	3-Error	RF ISSU client for session [dec] domain [dec] failed to send message	The RF ISSU client could not send a negotiation message to a peer.	ha-issu-infra	"show issu fsm"
RF_ISSU-3-MSG_SEND	3-Error	RF ISSU client for session [dec] domain [dec] failed to send message	The RF ISSU client could not send a negotiation message to a peer.	ha-issu-infra	"show issu fsm"
RF_ISSU-3-MSG_SEND	3-Error	RF ISSU client for session [dec] domain [dec] failed to send message	The RF ISSU client could not send a negotiation message to a peer.	ha-issu-infra	"show issu fsm"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RF_ISSU3MSG_SEND	3-Error	RF ISSU client for session [dec] domain [dec] failed to send message	The RF ISSU client could not send a negotiation message to a peer.	ha-issu-infra	"show issu fsm"
RF_ISSU3MSGGROUP_REG	3-Error	RF Msg Group [dec] for Entity [dec] domain [dec] Registration failed	The message group for the RF ISSU could not be registered.	ha-issu-infra	"show issu message groups"
RF_ISSU3MSGGROUP_REG	3-Error	RF Msg Group [dec] for Entity [dec] domain [dec] Registration failed	The message group for the RF ISSU could not be registered.	ha-issu-infra	"show issu message groups"
RF_ISSU3MSGGROUP_REG	3-Error	RF Msg Group [dec] for Entity [dec] domain [dec] Registration failed	The message group for the RF ISSU could not be registered.	ha-issu-infra	"show issu message groups"
RF_ISSU3MSGGROUP_REG	3-Error	RF Msg Group [dec] for Entity [dec] domain [dec] Registration failed	The message group for the RF ISSU could not be registered.	ha-issu-infra	"show issu message groups"
RF_ISSU3MSGTYPE_REG	3-Error	RF Msg Type for Entity [dec] domain [dec] Registration failed	The message type for the RF ISSU could not be registered.	ha-issu-infra	"show issu message types"
RF_ISSU3MSGTYPE_REG	3-Error	RF Msg Type for Entity [dec] domain [dec] Registration failed	The message type for the RF ISSU could not be registered.	ha-issu-infra	"show issu message types"
RF_ISSU3MSGTYPE_REG	3-Error	RF Msg Type for Entity [dec] domain [dec] Registration failed	The message type for the RF ISSU could not be registered.	ha-issu-infra	"show issu message types"
RF_ISSU3MSGTYPE_REG	3-Error	RF Msg Type for Entity [dec] domain [dec] Registration failed	The message type for the RF ISSU could not be registered.	ha-issu-infra	"show issu message types"
RF_ISSU3CAPNAIDSZ	3-Error	RF ISSU client capability list on domain [dec] is empty.	RF ISSU capability list size is invalid	ha-issu-infra	"show issu capability entires <Client_ID>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RF_ISSU_RF_CAP_NALD_SE	3-Error	RF ISSU client capability list on domain [dec] is empty.	RF ISSU capability list size is invalid	ha-issu-infra	"show issu capability entires <Client_ID>"
RF_ISSU_RF_CAP_NALD_SE	3-Error	RF ISSU client capability list on domain [dec] is empty.	RF ISSU capability list size is invalid	ha-issu-infra	"show issu capability entires <Client_ID>"
RF_ISSU_RF_CAP_NALD_SE	3-Error	RF ISSU client capability list on domain [dec] is empty.	RF ISSU capability list size is invalid	ha-issu-infra	"show issu capability entires <Client_ID>"
RF_ISSU_RF_CAPRESU_INCOMP	3-Error	RF ISSU client capability exchange on domain [dec] result incompatible.	RF ISSU capabilities have negotiated incompatible	ha-issu-infra	"show issu negotiated capability <Session_ID>"
RF_ISSU_RF_CAPRESU_INCOMP	3-Error	RF ISSU client capability exchange on domain [dec] result incompatible.	RF ISSU capabilities have negotiated incompatible	ha-issu-infra	"show issu negotiated capability <Session_ID>"
RF_ISSU_RF_CAPRESU_INCOMP	3-Error	RF ISSU client capability exchange on domain [dec] result incompatible.	RF ISSU capabilities have negotiated incompatible	ha-issu-infra	"show issu negotiated capability <Session_ID>"
RF_ISSU_RF_CAPRESU_INCOMP	3-Error	RF ISSU client capability exchange on domain [dec] result incompatible.	RF ISSU capabilities have negotiated incompatible	ha-issu-infra	"show issu negotiated capability <Session_ID>"
RF_ISSU_RF_MEG_NOT_OK	3-Error	RF ISSU msg type [dec] for client [dec] on domain [dec] is not ok	RF ISSU message type has not negotiated correctly	ha-issu-infra	"show message types <Client_ID>"
RF_ISSU_RF_MEG_NOT_OK	3-Error	RF ISSU msg type [dec] for client [dec] on domain [dec] is not ok	RF ISSU message type has not negotiated correctly	ha-issu-infra	"show message types <Client_ID>"
RF_ISSU_RF_MEG_NOT_OK	3-Error	RF ISSU msg type [dec] for client [dec] on domain [dec] is not ok	RF ISSU message type has not negotiated correctly	ha-issu-infra	"show message types <Client_ID>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RF_ISSU3RFMSGNOTOK	3-Error	RF ISSU msg type [dec] for client [dec] on domain [dec] is not ok	RF ISSU message type has not negotiated correctly	ha-issu-infra	"show message types <Client_ID>"
RF_ISSU3SESSION_REG	3-Error	RF session for Entity [dec] domain [dec] Registration failed	The RF ISSU session could not be registered.	ha-issu-infra	"show issu sessions"
RF_ISSU3SESSION_REG	3-Error	RF session for Entity [dec] domain [dec] Registration failed	The RF ISSU session could not be registered.	ha-issu-infra	"show issu sessions"
RF_ISSU3SESSION_REG	3-Error	RF session for Entity [dec] domain [dec] Registration failed	The RF ISSU session could not be registered.	ha-issu-infra	"show issu sessions"
RF_ISSU3SESSION_REG	3-Error	RF session for Entity [dec] domain [dec] Registration failed	The RF ISSU session could not be registered.	ha-issu-infra	"show issu sessions"
RF_ISSU3SESSION_UNREG	3-Error	RF session [dec] domain [dec] Un-Registration failed	The RF ISSU session could not be unregistered.	ha-issu-infra	"show issu sessions"
RF_ISSU3SESSION_UNREG	3-Error	RF session [dec] domain [dec] Un-Registration failed	The RF ISSU session could not be unregistered.	ha-issu-infra	"show issu sessions"
RF_ISSU3SESSION_UNREG	3-Error	RF session [dec] domain [dec] Un-Registration failed	The RF ISSU session could not be unregistered.	ha-issu-infra	"show issu sessions"
RF_ISSU3SESSION_UNREG	3-Error	RF session [dec] domain [dec] Un-Registration failed	The RF ISSU session could not be unregistered.	ha-issu-infra	"show issu sessions"
<del>ERRSERIALMSEIFA</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>ERRSERIALMSEIFA</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>RUNRSERIALMSEIFA</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>RUNRSERIALMSEIFA</del>	3-Error	ERRMSG_NOFLAGS	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RF4-SYSTEM_INTEGRITY	1-Alert	[chars]	An automatic switch of activity occurred when it had been disabled.	CPU	LOG_STD_ACTION
RF3-COMMUNICATION	3-Error	Communication with the peer CPU has been [chars]	The status of the peer CPU communication path has changed	CPU	LOG_STD_ACTION
RF-3-IPC_PORT	3-Error	Unable to [chars] [chars] <[chars]>	Not able to initialize the RF IPC port to the peer CPU.	CPU	LOG_NO_ACTION
RF3-MALLOC_FAILURE	3-Error	[chars]	Memory allocation failure	redundancy-rf	"Gather redundancy-ha_mgr log and send it to TAC"
RF3-MALLOC_FAILURE	3-Error	[chars]	Memory allocation failure	redundancy-rf	"Gather redundancy-ha_mgr log and send it to TAC"
RF3MSG_SEND_FAILURE	3-Error	[chars]	Message send between internal RF modules failed.	redundancy-rf	"Gather redundancy-ha_mgr log and send it to TAC"
RF3MSG_SEND_FAILURE	3-Error	[chars]	Message send between internal RF modules failed.	redundancy-rf	"Gather redundancy-ha_mgr log and send it to TAC"
RF-3-NOTIF_TID	3-Error	Notification timer extended for the wrong client cur-client=[dec] req-client=[dec]	The current RF client has attempted to extend the RF notification timer using a client ID other than its own. This is an internal software error. The message text on the console or in the system log contains the error details such as the current client ID number and the requested client ID number.	redundancy-rf	"show redundancy history"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RF-3-NOTIF_TID	3-Error	Notification timer extended for the wrong client cur-client=[dec] req-client=[dec]	The current RF client has attempted to extend the RF notification timer using a client ID other than its own. This is an internal software error. The message text on the console or in the system log contains the error details such as the current client ID number and the requested client ID number.	redundancy-rf	"show redundancy history"
RF-3-NOTIF_TMO	3-Error	Notification timer Expired for RF Client: [chars][dec]	As part of the progression the client had previously indicated to RF that it has work to do by returning RF_OK but it did not complete the work or respond to RF within the notification time.	redundancy-rf	"show redundancy history"
RF-3-NOTIF_TMO	3-Error	Notification timer Expired for RF Client: [chars][dec]	As part of the progression the client had previously indicated to RF that it has work to do by returning RF_OK but it did not complete the work or respond to RF within the notification time.	redundancy-rf	"show redundancy history"
RF-3-SIMPLEX_MODE	3-Error	The peer CPU has been lost	The peer CPU absence has been detected	CPU	LOG_STD_ACTION

<del>Facility</del> Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RF3STANDBY_RELOAD	3-Error	The standby CPU is being reset because [chars]	See the reported error message for the reason that the peer CPU was reset. This allows recovery from an indeterminate Standby state.	CPU	LOG_STD_ACTION
RF-5-RF_RELOAD	5-Notice	[chars]. Reason: [chars]	RF has invoked a reload.	redundancy-rf	"show redundancy history reload"
RF-5-RF_RELOAD	5-Notice	[chars]. Reason: [chars]	RF has invoked a reload.	redundancy-rf	"show redundancy history reload"
RF5RF_TERMINAL_STATE	5-Notice	Terminal state reached for [chars]	RF has reached a terminal state for the operating mode.	-	"This is a notification message only. No action is required."
RF5RF_TERMINAL_STATE	5-Notice	Terminal state reached for [chars]	RF has reached a terminal state for the operating mode.	-	"This is a notification message only. No action is required."
RF-5-SEND_FAIL	5-Notice	RF client progression send failure for reason [chars]	RF has failed to send a client progression to the standby client.	redundancy-rf	"show redundancy history"
RF-5-SEND_FAIL	5-Notice	RF client progression send failure for reason [chars]	RF has failed to send a client progression to the standby client.	redundancy-rf	"show redundancy history"
RF-6-DUPLEX_MODE	6-Information	The peer CPU has been detected	The peer CPU has been detected	CPU	LOG_STD_ACTION
RF-6-INHIBIT_SWITCH	6-Information	Redundancy client [chars] [chars] manual switchover	A redundancy client has changed the ability to manually cause a switch of activity.	CPU	LOG_NO_ACTION
<del>RF6DCA_CHANNEL_EMPTY</del>	4-Warning	ewlc-rrm	The DCA Channel list is empty for rf profile[chars]	DCA Channel list is empty It affects Channel Assignment to AP	Please add channels to DCA List
<del>RF6MULTI_BSSID_INVALID</del>	4-Warning	ewlc-rrm	Invalid Multi bssid profile[chars]	-	-



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>RFSK3-CAPENTRY_REG</del>	4-Warning	ewlc-rrm	WARNING: RF Profile[chars] - Deleting channel %d from remove channel list	-	-
RFPROXY-2-INIT	2-Critical	Initialization failed	The RF Proxy subsystem failed during its \n\ initialization	c7600-ha	LOGSIDSHTECHACION
RFPROXY-2-NOMEM	2-Critical	No memory available	The RF Proxy subsystem could not obtain the memory \n\ it needed	c7600-ha	LOGSIDSHTECHACION
RFPROXY-2-RPC	2-Critical	RPC message failure	The RF Proxy could not send an RPC message.	c7600-ha	-
RFS3-CAPENTRY_REG	3-Error	RFS Cap Entry [dec] for Entity [dec] Registration failed	RFS ISSU Cap Entry registration failed	-	"Enter the following commands: show issu capability entries and copy " "the error and send it to TAC. TAC team can contact the file-systems " "team to check why this capability entry failed to register"
RFS3-CAPGROUP_REG	3-Error	RFS Cap Group [dec] for Entity [dec] Registration failed	RFS ISSU Cap Group registration failed	-	"Enter the following commands: show issu capability groups and copy " "the error and send it to TAC. TAC team can contact the file-systems " "team to check why this capability group failed to register"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
RFS-3-CAPTYPE_REG	3-Error	RFS Cap Type for Entity [dec] Registration failed	RFS ISSU Cap Type registration failed	-	"Enter the following commands: 'show issu capability types' and copy " "the error and send it to TAC. TAC team can contact the file-systems " "team to check why this capability type failed to register"
RFS-3-CLIENT_REG	3-Error	RFS Client [dec] Registration failed	RFS ISSU client registration failed	-	"Enter the following command:'show issu client' and " "copy the error and send it to TAC. TAC team can contact the " "file-systems team to check why no uid with this value found " "registered in ISSU Database"
RFSCLIENT_SESSION_REG	3-Error	RFS ISSU client shared msg session for entity [dec] registration failed	RFS ISSU client shared msg session registration failed	-	"Enter the following commands: show issu sessions and copy the error " "and send it to TAC. TAC team can contact the file-systems team to " "check why this shared message session failed to register"
RFSCLIENT_SESSION_UNREG	3-Error	RFS session [dec] Un-Registration failed	RFS ISSU client session un-registration failed	-	"Enter the following commands: show issu sessions and copy the error " "and send it to TAC. TAC team can contact the file-systems team to " "check why this client session failed to un-register"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RFS3CREATE_CLIENT_PORT	3-Error	RFS create client port [chars] failed	RFS ISSU create client port failed	-	"Enter the following commands: show ipc port and copy the error and " "send it to TAC. TAC team can contact the file-systems team to check " "why this ipc port could not be created"
RFS3CREATE_SERVER_PORT	3-Error	RFS create server port [chars] failed	RFS ISSU create server port failed	-	"Enter the following commands: show ipc port and copy the error and " "send it to TAC. TAC team can contact the file-systems team to check " "why this ipc port could not be created"
RFS-3-ENTITY_REG	3-Error	RFS Entity [dec] Registration failed	RFS ISSU entity failed to register with ISSU	-	"Enter the following command:'show issu entities' " "and copy the error and send it to TAC. TAC team can contact the " "file-systems team to check why this entity failed to register"
RFS3IPC_GET_BUFFER	3-Error	RFS issu ipc get buffer failed	RFS ISSU ipc get buffer failed	-	"Enter the following commands:'show proc mem' or 'show buffs' to " "check if memory or buffer is full. shutdown unused tasks or reset " "cards usually can recover those memory leak problem. Copy the error " "and send it to TAC if those actions do not help."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
RFS-3-LOCATE_PORT	3-Error	RFS locates port [chars] failed	RFS ISSU locates port failed	-	"Enter the following commands: show ipc port and copy the error and " "send it to TAC. TAC team can contact the file-systems team to check " "why this ipc port could not be located"
RFSMSG_GETNCOVER	3-Error	RFS Client [dec] get msg negotiated version failed. Error = [dec]	RFS ISSU client get msg negotiated version failed	-	"Enter the following commands: show issu fsm show issues and copy " "the error and send it to TAC. TAC team can contact the file-systems " "team to check why get message negotiated version failed"
RFS-3-MSG_INCOMP	3-Error	[chars]: msg_type [[dec]] under session [[dec]] is incompatible	The message types are incompatible under ISSU	-	"Enter the following command: \n\ show issu message types 110 \and copy the output and send it to TAC. TAC team can contact the \file-systems team to check why messages are incompatible"
RFS-3-MSG_MTU	3-Error	RFS Client [dec] get msg mtu failed. Error = [dec]	RFS ISSU client get msg mtu failed	-	"Enter the following commands: show issu fsm show issues and copy " "the error and send it to TAC. TAC team can contact the file-systems " "team to check why get message mtu failed"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RFS-3-MSG_RCV	3-Error	RFS Client [dec] on session [dec] to seat [0x[hec]] failed receive	RFS ISSU client receive msg failed	-	"Enter the following commands:show issu sessions and copy the error " "and send it to TAC. TAC team can contact the file-systems team to " "check why receive message for this client failed"
RFS-3-MSG_XMIT	3-Error	RFS Client [dec] on session [dec] to seat [0x[hec]] failed send	RFS ISSU client send msg failed	-	"Enter the following commands:show issu sessions and copy the error " "and send it to TAC. TAC team can contact the file-systems team to " "check why send message for this client failed"
RFS3-MSGGROUP_REG	3-Error	RFS Msg Group [dec] for Entity [dec] Registration failed	RFS ISSU Msg Group registration failed	-	"Enter the following commands: 'show issu message groups' \and copy the error and send it to TAC. TAC team can contact the \file-systems team to check why this message group failed to register"
RFS3-MSGTYPE_REG	3-Error	RFS Msg Type for Entity [dec] Registration failed	RFS ISSU Msg Type registration failed	-	"Enter the following commands: " "'show issu entities' 'show issu message types' and copy the error " "and send it to TAC. TAC team can contact the file-systems team to " "check why this message types failed to register"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RFS-3-NEGO_COMP	3-Error	RFS nego is not compatible [dec]	RFS ISSU start shared nego session failed	-	"Enter the following commands: 'show issu sessions' and copy the " "error and send it to TAC. TAC team can contact the file-systems " "team to check why this client negotiation session is not compatible"
RFS3NEGO_SESSION_REG	3-Error	RFS nego session for Entity [dec] Registration failed	RFS ISSU shared nego session registration failed	-	"Enter the following commands: 'show issu sessions' 'show issu " "entities' and copy the error and send it to TAC. TAC team can " "contact the file-systems team to check why this client negotiation " "session failed to register"
RFS3NEGO_SESSION_UNREG	3-Error	RFS session [dec] Un-Registration failed	RFS ISSU shared nego session un-registration failed	-	"Enter the following commands: 'show issu sessions' and copy the " "error and send it to TAC. TAC team can contact the file-systems " "team to check why this client negotiation session failed to " "un-register"
RFS3OPEN_CLIENT_PORT	3-Error	RFS open client port [chars] failed. Reason:[chars]	RFS ISSU open client port failed	-	"Enter the following commands: show ipc port and copy the error and " "send it to TAC. TAC team can contact the file-systems team to check " "why this ipc port could not be opened"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RFS3OPEN_SERVER_PORT	3-Error	RFS open server port [chars] failed	RFS ISSU open server port failed	-	"Enter the following commands: show ipc port and copy the error and " "send it to TAC. TAC team can contact the file-systems team to check " "why this ipc port could not be opened"
RFSRCMENCOFAILED	3-Error	RFS receive nego message [node]failed	RFS ISSU receive nego message failed	-	"Enter the following commands: 'show issu session' and copy the error " "and send it to TAC. TAC team can contact the file-systems team to " "check why this client negotiation message failed"
RFSRCMENCONOTDONE	3-Error	RFS receive nego message is not done [dec]	RFS ISSU receive nego message is not done	-	"Enter the following commands: show issu session and copy the error " "and send it to TAC. TAC team can contact the file-systems team to " "check why this client negotiation failed to complete"
RFS-3-REG_PORT	3-Error	RFS reg port [dec] failed	RFS ISSU reg port failed	-	"Enter the following commands: show ipc port and copy the error and " "send it to TAC. TAC team can contact the file-systems team to check " "why this port failed to register"
RFSRFBOLCREATEERR	3-Error	[chars].	The RFS RF client has error in creating watched boolean.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RFS3RFS_ISSU_CLIENT_ENTITY_ID	3-Error	RFS ISSU couldnt find client/entity id in peer.	RFS ISSU couldnt find client/entity id in peer.	-	"Enter the following command:'show issu entities' " "and copy the error and send it to TAC. TAC team can contact the " "file-systems team to check why this client/entity id couldnt find " "in peer"
RFS3RFS_ISSU_NEGO_PROCESS	3-Error	RFS create rfs_issu_start_port watch boolean failed	RFS ISSU create nego process failed	-	"Enter the following commands:show proc mem and copy the error and " "send it to TAC. TAC team can contact the file-systems team to check " "why this watched boolean could not be created"
RFS3RFS_ISSU_START_PORT	3-Error	RFS create rfs_issu_start_port watch boolean failed	RFS ISSU create rfs_issu_start_port watch boolean failed	-	"Enter the following commands:show proc mem and copy the error and " "send it to TAC. TAC team can contact the file-systems team to check " "why this watched boolean could not be created"
RFS3RFS_ISSU_START_SESSION	3-Error	RFS create rfs_issu_start_session watch boolean failed	RFS ISSU create rfs_issu_start_session watch boolean failed	-	"Copy the error and send it to TAC. TAC team can contact the " "file-systems team to check why this ipc port could not be created"
RFS3RFS_RF_PROG_ERR	3-Error	Failed to send the bulk sync notification done. Error [dec].	The RFS RF client failed to send the final bulk sync \notification.	-	LOG_STD_ACTION
RFS3RFS_RF_PROG_NOTIFY_ERR	3-Error	[chars].	The RFS RF client has error in sending client \progression.	-	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RFSSENDNECOMESSAGE	3-Error	RFS send nego message [node]failed	RFS ISSU send nego message failed	-	"Enter the following commands: 'show issu session' and copy the error " "and send it to TAC. TAC team can contact the file-systems team to " "check why this client negotiation message failed"
RFSSTARTNEGOSESSION	3-Error	RFS nego [dec]:[dec] to [[chars]:0x[hec]] failed: [[chars]]	RFS ISSU start shared nego session failed	-	"Enter the following commands: 'show issu sessions' and copy the " "error and send it to TAC. TAC team can contact the file-systems " "team to check why this client negotiation session failed to start"
RFS3UNREG_ENTITY	3-Error	RFS ISSU Client unreg entity failed.	RFS ISSU client unreg entity failed	-	"Enter the following command:'show issu entities' " "and copy the error and send it to TAC. TAC team can contact the " "file-systems team to check why this entity failed to un-register"
RFSW-3-HELLO_FAIL	3-Error	Hello message failed between CMTS and RFSW. \nPlease check the connection between CMTS and RFSW.	Hello message between CMTS and RFGW failed.	cmts-redundancy	"Check the connection between CMTS and RFSW."
RFSW-3-LCSO_FAIL	3-Error	Receive a failed LCSO message from RFSW with sequence 0x[node]X.	LCSO command failed to execute in RFSW.	cmts-redundancy	"Check the switchcards state in RFSW."
RFSW-3-RELAY_FAIL	3-Error	Relay failed for RFSW.	The relay testing failed.	cmts-redundancy	"Check the connection between CMTS and RFSW."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RFSW6HELLO_ERROR	6-Information	The switchcard in RFSW for slot [dec] group [dec] is in error with the reason [chars].	The switchcards in RFSW is in erro	cmts-redundancy	"Check the switchcard state of RFSW"
RFSW6HELLO_PROTECT	6-Information	The protecting state in RFSW is wrong expect [dec] get [dec].	The protecting state in RFSW is wrong.	cmts-redundancy	"Disable and Enable the configure \\\"rfs switch auxport enable\\\"."
RG_AR-3-NOPEER	3-Error	Peer does not exist for RG ID = [dec] with error code = [dec]	-	-	-
RG_AR-3-NOPEER	3-Error	Peer does not exist for RG ID = [dec] with error code = [dec]	-	-	-
RG_AR-3-NOPROCESS	3-Error	Unable to create process for [chars].	Quite likely we ran out of memory. Other explanations are possible.	rg-infra	"If this message recurs. Check bug toolkit " "on Cisco website for the issue. If you didn't find " "one Enter <CmdBold>Show tech-support<NoCmdBold> " "command collect all the information and error " "message and report it to your technical support " "representative."
RG_AR-3-NOPROCESS	3-Error	Unable to create process for [chars].	Quite likely we ran out of memory. Other explanations are possible.	rg-infra	"If this message recurs. Check bug toolkit " "on Cisco website for the issue. If you didn't find " "one Enter <CmdBold>Show tech-support<NoCmdBold> " "command collect all the information and error " "message and report it to your technical support " "representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RG_FAULTIS3NOPROCESS	3-Error	Unable to create a new process for [chars].	Quite likely we ran out of memory. Other explanations are possible.	rg-infra	"If this message recurs. Check bug toolkit " "on Cisco website for the issue. If you didn't find " "one Enter <CmdBold>Show tech-support<NoCmdBold> " "command collect all the information and error " "message and report it to your technical support " "representative."
RG_FAULTIS3NOPROCESS	3-Error	Unable to create a new process for [chars].	Quite likely we ran out of memory. Other explanations are possible.	rg-infra	"If this message recurs. Check bug toolkit " "on Cisco website for the issue. If you didn't find " "one Enter <CmdBold>Show tech-support<NoCmdBold> " "command collect all the information and error " "message and report it to your technical support " "representative."
RG_FAULTIS6PRCHANGE	6-Information	RG Infra RG[[dec]] Priority update. new priority [[dec]] old priority [[dec]] [chars]	The runtime priority of the group was updated	rg-infra	"Look at rg_infra trace for the cause for priority change"
RG_FAULTIS6PRCHANGE	6-Information	RG Infra RG[[dec]] Priority update. new priority [[dec]] old priority [[dec]] [chars]	The runtime priority of the group was updated	rg-infra	"Look at rg_infra trace for the cause for priority change"
RG_FAULTIS6PRCHANGE	6-Information	RG Infra RG[[dec]] Priority configuration changed. New runtime priority:[[dec]]	The configured priority changed runtime priority was affected	rg-infra	"No action need to be taken"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RG_INFRA3PRIORITYCHANGE	6-Information	RG Infra RG[[dec]] Priority configuration changed. New runtime priority:[[dec]]	The configured priority changed runtime priority was affected	rg-infra	"No action need to be taken"
RG_MEDIA3INVALIDPLATFORM	3-Error	Unsupported Platform	The peer platform is unsupported as a RG-pair	rg-infra	"Only like platforms can be configured as a RG pair."
RG_MEDIA3INVALIDPLATFORM	3-Error	Unsupported Platform	The peer platform is unsupported as a RG-pair	rg-infra	"Only like platforms can be configured as a RG pair."
RG_MEDIA3NOPROCESS	3-Error	Unable to create process for [chars].	Quite likely we ran out of memory. Other explanations are possible.	rg-infra	"If this message recurs. Check bug toolkit " "on Cisco website for the issue. If you didn't find " "one Enter <CmdBold>Show techsupport<NoCmdBold> " "command collect all the information and error " "message and report it to your technical support " "representative."
RG_MEDIA3NOPROCESS	3-Error	Unable to create process for [chars].	Quite likely we ran out of memory. Other explanations are possible.	rg-infra	"If this message recurs. Check bug toolkit " "on Cisco website for the issue. If you didn't find " "one Enter <CmdBold>Show techsupport<NoCmdBold> " "command collect all the information and error " "message and report it to your technical support " "representative."
RG_MEDIA3NOSOCKET	3-Error	Unable to open socket	The system was unable to initialize an IP connection for RG Protocol	rg-infra	"Make sure that there is at least one interface configured to run " "IP."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RG_MEDIA3NOSOCKET	3-Error	Unable to open socket	The system was unable to initialize an IP connection for RG Protocol	rg-infra	"Make sure that there is at least one interface configured to run " "IP."
RG_MEDIA3IMREXPRED	3-Error	RG id [dec] Hello Timer Expired.	This router did not receive hello message from the peer within the configured hold time. This may result in a role change.	rg-infra	"Enter <CmdBold>show tech-support<NoCmdBold> " "<CmdBold>show history<NoCmdBold> commands collect " "all the information and error message and report it " "to your technical support representative."
RG_MEDIA3IMREXPRED	3-Error	RG id [dec] Hello Timer Expired.	This router did not receive hello message from the peer within the configured hold time. This may result in a role change.	rg-infra	"Enter <CmdBold>show tech-support<NoCmdBold> " "<CmdBold>show history<NoCmdBold> commands collect " "all the information and error message and report it " "to your technical support representative."
RG_MEDIA4BADSEQ	4-Warning	Group [dec]: Sequence number larger than expected - indicates packet loss	Sequence number expected from peer is too big this usually indicates packet loss	rg-infra	"Check for connectivity problems between the 2 peers."
RG_MEDIA4BADSEQ	4-Warning	Group [dec]: Sequence number larger than expected - indicates packet loss	Sequence number expected from peer is too big this usually indicates packet loss	rg-infra	"Check for connectivity problems between the 2 peers."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>RGPROC</del> CLNPROCESS	3-Error	Unable to create process for [chars].	Quite likely we ran out of memory. Other explanations are possible.	rg-infra	"If this message recurs. Check bug toolkit " "on Cisco website for the issue. If you didn't find " "one Enter <CmdBold>Show tech-support<NoCmdBold> " "command collect all the information and error " "message and report it to your technical support " "representative."
<del>RGPROC</del> CLNPROCESS	3-Error	Unable to create process for [chars].	Quite likely we ran out of memory. Other explanations are possible.	rg-infra	"If this message recurs. Check bug toolkit " "on Cisco website for the issue. If you didn't find " "one Enter <CmdBold>Show tech-support<NoCmdBold> " "command collect all the information and error " "message and report it to your technical support " "representative."
<del>RGPROC</del> BNMPCIDONE	3-Error	RG id [dec] unexpected Active peer %i	-	rg-infra	"If this is not a transient state check for connectivity problems " "or inconsistency of rg protocol timer configuration between " "the peers"
<del>RGPROC</del> BNMPCIDONE	3-Error	RG id [dec] unexpected Active peer %i	-	rg-infra	"If this is not a transient state check for connectivity problems " "or inconsistency of rg protocol timer configuration between " "the peers"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>RG_PROTOCOLS</del> STANDBY	4-Warning	RG id [dec] unexpected Standby peer %i	-	rg-infra	"If this is not a transient state check for connectivity problems " "or inconsistency of rg protocol timer configuration between " "the peers"
<del>RG_PROTOCOLS</del> STANDBY	4-Warning	RG id [dec] unexpected Standby peer %i	-	rg-infra	"If this is not a transient state check for connectivity problems " "or inconsistency of rg protocol timer configuration between " "the peers"
<del>RG_PROTOCOLS</del> ROLCHANGE	5-Notice	RG id [dec] role change from [chars] to [chars]	RG role Init/Standby/Active has been changed	rg-infra	LOG_SID_NO_ACTION
<del>RG_PROTOCOLS</del> ROLCHANGE	5-Notice	RG id [dec] role change from [chars] to [chars]	RG role Init/Standby/Active has been changed	rg-infra	LOG_SID_NO_ACTION
RG_TRANSURENCPROCESS	3-Error	Unable to create process for [chars].	Quite likely we ran out of memory. Other explanations are possible.	rg-infra	"If this message recurs. Check bug toolkit " "on Cisco website for the issue. If you didn't find " "one Enter <CmdBold>Show techsupport</NoCmdBold> " "command collect all the information and error " "message and report it to your technical support " "representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RG_TRANS3-NOPROCESS	3-Error	Unable to create process for [chars].	Quite likely we ran out of memory. Other explanations are possible.	rg-infra	"If this message recurs. Check bug toolkit " "on Cisco website for the issue. If you didn't find " "one Enter <CmdBold>Show tech-support<NoCmdBold> " "command collect all the information and error " "message and report it to your technical support " "representative."
RG_TRANS3-TRANSAL	3-Error	Negotiation failure with error code: [dec]	The query_status in msg is not RG_TRANS_SUCCESS	rg-infra	"Make sure that there are no configuration errors."
RG_TRANS3-TRANSAL	3-Error	Negotiation failure with error code: [dec]	The query_status in msg is not RG_TRANS_SUCCESS	rg-infra	"Make sure that there are no configuration errors."
RG_VP3-NOPROCESS	3-Error	Unable to create process for [chars].	Quite likely we ran out of memory. Other explanations are possible.	rg-infra	"If this message recurs. Check bug toolkit " "on Cisco website for the issue. If you didn't find " "one Enter <CmdBold>Show tech-support<NoCmdBold> " "command collect all the information and error " "message and report it to your technical support " "representative."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RG_VP-3-NOPROCESS	3-Error	Unable to create process for [chars].	Quite likely we ran out of memory. Other explanations are possible.	rg-infra	"If this message recurs. Check bug toolkit " "on Cisco website for the issue. If you didn't find " "one Enter <CmdBold>Show tech-support<NoCmdBold> " "command collect all the information and error " "message and report it to your technical support " "representative."
RG_VP-6-BULK_SYNC_DONE	6-Information	RG group [dec] BULK SYNC to standby complete.	Indicagtes Standby bulk sync complete	rg-infra	LOG_SID_NO_ACTION
RG_VP-6-BULK_SYNC_DONE	6-Information	RG group [dec] BULK SYNC to standby complete.	Indicagtes Standby bulk sync complete	rg-infra	LOG_SID_NO_ACTION
RG_VP-6-STANDBY_READY	6-Information	RG group [dec] Standby router is in SSO state	Indicates standby readiness	rg-infra	LOG_SID_NO_ACTION
RG_VP-6-STANDBY_READY	6-Information	RG group [dec] Standby router is in SSO state	Indicates standby readiness	rg-infra	LOG_SID_NO_ACTION
RG_VP-3-ROUTE_LIMIT_EXCEEDED	3-Error	tenantname:[chars] id:[dec] [chars] route limit exceeded: alarm_off	The number of routes in the tenant has reduced to be less than the configured route limit. New route can be added to the tenant	-	"no action required"
RG_VP-3-ROUTE_LIMIT_EXCEEDED	3-Error	tenantname:[chars] id:[dec] [chars] route limit exceeded: alarm_off	The number of routes in the tenant has reduced to be less than the configured route limit. New route can be added to the tenant	-	"no action required"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>HEINROUHMEXCEEDON</del>	3-Error	tenantname:[chars] id:[dec] [chars] route limit exceeded: alarm_on	The number of routes in the tenant has reached the configured route limit. No further routes will be added to the tenant	-	"Reduce the number of routes in the tenant " "or reconfigure the tenant route limit"
<del>HEINROUHMEXCEEDON</del>	3-Error	tenantname:[chars] id:[dec] [chars] route limit exceeded: alarm_on	The number of routes in the tenant has reached the configured route limit. No further routes will be added to the tenant	-	"Reduce the number of routes in the tenant " "or reconfigure the tenant route limit"
<del>HEINROUHMWARNCOF</del>	3-Error	tenantname:[chars] id:[dec] [chars] route limit warning threshold: alarm_off	The number of routes in the tenant has reduced to be less than the configured route limit warning threshold.	-	"no action required."
<del>HEINROUHMWARNCOF</del>	3-Error	tenantname:[chars] id:[dec] [chars] route limit warning threshold: alarm_off	The number of routes in the tenant has reduced to be less than the configured route limit warning threshold.	-	"no action required."
<del>HEINROUHMWARNCON</del>	3-Error	tenantname:[chars] id:[dec] [chars] route limit warning threshold: alarm_on	The number of routes in the tenant has reached the configured route limit warning threshold.	-	"Reduce the number of routes in the tenant " "or reconfigure the tenant route limit warning threshold"
<del>HEINROUHMWARNCON</del>	3-Error	tenantname:[chars] id:[dec] [chars] route limit warning threshold: alarm_on	The number of routes in the tenant has reached the configured route limit warning threshold.	-	"Reduce the number of routes in the tenant " "or reconfigure the tenant route limit warning threshold"
<del>HWCRS4VREACHABLE</del>	6-Information	ewlc-ha	Gateway reachable from Active	Gateway reachable from Active	limit fast
<del>HWCRS4VREACHABLENDY</del>	6-Information	ewlc-ha	Gateway reachable from Standby	Gateway reachable from Standby	limit fast

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HMCRISGWUNREACHACTIVE</del>	6-Information	ewlc-ha	Gateway not reachable from Active	Gateway not reachable from Active	limit fast
<del>HMCRISGWUNREACHSTANDBY</del>	6-Information	ewlc-ha	Gateway not reachable from Standby	Gateway not reachable from Standby	limit fast
<del>HMCRISACTIVERECOVERMODE</del>	6-Information	ewlc-ha	Going to Active(Recovery) from Active state	Going to Active(Recovery) From Active	limit fast
<del>HMCRISACTIVERECOVERHIGHCPU</del>	6-Information	ewlc-ha	High CPU utilisation on active or standby	-	-
<del>RFMCRISMRMINKDOWN</del>	6-Information	ewlc-ha	The RMI link is DOWN.	The redundancy mgmt intf link was down.	limit fast
<del>RFMCRISMRMINKUP</del>	6-Information	ewlc-ha	The RMI link is UP.	The redundancy mgmt intf link came up	limit fast
<del>HMCRISACTIVERECOVERSTANDBY</del>	6-Information	ewlc-ha	Going from Standby(Recovery) to Standby state	Going from Standby(Recovery) to Standby on GW reachable	limit fast
<del>HMCRISACTIVERECOVERSTANDBYUNREACH</del>	6-Information	ewlc-ha	Going from Standby to Standby(Recovery) state	Going from Standby to Standby(Recovery) on GW unreachable	limit fast
<del>HMCRISACTIVERECOVERSTANDBYUNREACHHIGHCPU</del>	6-Information	ewlc-ha	Going from Standby to Standby(Recovery) state	-	-
<del>HMCRISACTIVERECOVERACTIVE</del>	6-Information	ewlc-ha	Going from Standby(Recovery) to Active state	Going from Standby(Recovery) to Active on RP DOWN	limit fast
<del>RFMCRISMRPINKDOWN</del>	6-Information	ewlc-ha	Setting RP link status to DOWN	RP link status set to DOWN	limit fast
<del>RFMCRISMRPINKUP</del>	6-Information	ewlc-ha	The RP link is UP.	The redundancy port link came up	limit fast

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
RIP-3-NOSOCKET	3-Error	Unable to open socket	The requested operation could not be accomplished because of a low\n\n memory condition.	-	"Reduce other system activity to ease memory demands. If conditions\n\n warrant upgrade to a larger memory configuration."
RIP-3-NOSOCKET	3-Error	Unable to open socket	The requested operation could not be accomplished because of a low\n\n memory condition.	-	"Reduce other system activity to ease memory demands. If conditions\n\n warrant upgrade to a larger memory configuration."
RITE-5-ACTIVATE	5-Notice	Activated IP traffic export on interface [chars]	IP traffic export has been enabled on the specified interface	-	"None"
RITE-5-DEACTIVATE	5-Notice	Deactivated IP traffic export on interface [chars]	IP traffic export has been disabled on the specified interface	-	"None"
RITE-5-MODIFIED	5-Notice	Changed IP traffic export outbound interface from [chars] to [chars]	The outbound interface for IP traffic export has been changed	-	"None"
<del>RCS_POISSNULRECON</del>	3-Error	Redundancy configuration can not be NULL.	Redundancy configuration can not be NULL.	ha-issu-infra	"Copy the error and send it to TAC.\n\nTAC team can contact ISSU infrastructure team to check why redundancy configuration is NULL"
<del>RCS_POISSNULRECON</del>	3-Error	Redundancy configuration can not be NULL.	Redundancy configuration can not be NULL.	ha-issu-infra	"Copy the error and send it to TAC.\n\nTAC team can contact ISSU infrastructure team to check why redundancy configuration is NULL"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>RCS_ISSU_NULL_SLOTINDEX</del>	3-Error	slotindex can not be NULL.	slotindex can not be NULL.	ha-issu-infra	"Copy the error and send it to TAC.\nTAC team can contact ISSU infrastructure team to check why slotindex is NULL"
<del>RCS_ISSU_NULL_SLOTINDEX</del>	3-Error	slotindex can not be NULL.	slotindex can not be NULL.	ha-issu-infra	"Copy the error and send it to TAC.\nTAC team can contact ISSU infrastructure team to check why slotindex is NULL"
<del>RCS_ISSU_CHRCS_LHR</del>	3-Error	[chars]	An error occurred while executing Redundant LC ISSU CLI	ha-issu-infra	"Copy the error and send it to TAC.\nTAC team can contact ISSU infrastructure team to check why this error occurs"
<del>RCS_ISSU_CHRCS_LHR</del>	3-Error	[chars]	An error occurred while executing Redundant LC ISSU CLI	ha-issu-infra	"Copy the error and send it to TAC.\nTAC team can contact ISSU infrastructure team to check why this error occurs"
<del>RCS_ISSU_NULL_REDCNG</del>	3-Error	Redundancy configuration can not be NULL.	Redundancy configuration can not be NULL.	ha-issu-infra	"Copy the error and send it to TAC.\nTAC team can contact ISSU infrastructure team to check why redundancy configuration is NULL"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>RCS_ISSU_NULL_RECONG</del>	3-Error	Redundancy configuration can not be NULL.	Redundancy configuration can not be NULL.	ha-issu-infra	"Copy the error and send it to TAC.\n\nTAC team can contact ISSU infrastructure team to check why redundancy configuration is NULL"
<del>RCS_ISSU_RCS_UHR</del>	3-Error	[chars]	An error occurred while running the Redundant LC ISSU process	ha-issu-infra	"Copy the error and send it to TAC.\n\nTAC team can contact ISSU infrastructure team to check why this error occurs"
<del>RCS_ISSU_RCS_UHR</del>	3-Error	[chars]	An error occurred while running the Redundant LC ISSU process	ha-issu-infra	"Copy the error and send it to TAC.\n\nTAC team can contact ISSU infrastructure team to check why this error occurs"
<del>RCS_ISSU_RCS_MCS_MER</del>	3-Error	error processing [chars] event in [chars] state for LC [chars] terminating process	internal error in RLC ISSU event processing	ha-issu-infra	"Copy the error and send it to TAC.\n\nTAC team can contact ISSU infrastructure team to check why this error occurs"
<del>RCS_ISSU_RCS_MCS_MER</del>	3-Error	error processing [chars] event in [chars] state for LC [chars] terminating process	internal error in RLC ISSU event processing	ha-issu-infra	"Copy the error and send it to TAC.\n\nTAC team can contact ISSU infrastructure team to check why this error occurs"
<del>RCS_ISSU_RCS_NICS_MER</del>	3-Error	error processing [chars] event in [chars] state for LC [chars] terminating process	internal error in RLC ISSU event processing	ha-issu-infra	"Copy the error and send it to TAC.\n\nTAC team can contact ISSU infrastructure team to check why this error occurs"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>RCS_IP01SRCS_NICSMR</del>	3-Error	error processing [chars] event in [chars] state for LC [chars] terminating process	internal error in RLC ISSU event processing	ha-issu-infra	"Copy the error and send it to TAC.\nTAC team can contact ISSU infrastruture team to check why this error occurs"
<del>RCS_IP01SRCS_NICFBR</del>	3-Error	prepareversion error secondary LC not standby ready for LC [chars]	the secondary LC failed to become standby ready	ha-issu-infra	"Copy the error and send it to TAC.\nTAC team can contact ISSU infrastruture team to check why this error occurs"
<del>RCS_IP01SRCS_NICFBR</del>	3-Error	prepareversion error secondary LC not standby ready for LC [chars]	the secondary LC failed to become standby ready	ha-issu-infra	"Copy the error and send it to TAC.\nTAC team can contact ISSU infrastruture team to check why this error occurs"
<del>RCS_IP01SRCS_NICWCR</del>	3-Error	runversion error primary LC [chars] not standby ready	the primary LC is not ready for switchover	ha-issu-infra	"Copy the error and send it to TAC.\nTAC team can contact ISSU infrastruture team to check why this error occurs"
<del>RCS_IP01SRCS_NICWCR</del>	3-Error	runversion error primary LC [chars] not standby ready	the primary LC is not ready for switchover	ha-issu-infra	"Copy the error and send it to TAC.\nTAC team can contact ISSU infrastruture team to check why this error occurs"
<del>RCS_IP01SRCS_NOFR</del>	3-Error	LC ISSU is terminated for due to [chars] use '\n\issu linecard abortversion [chars]' to restore linecard to the original version if necessary	An error notification was received while running the \nRedundant LC ISSU process. The process is stopped	ha-issu-infra	"Copy the error and send it to TAC.\nTAC team can contact ISSU infrastruture team to check why this error occurs"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>RCS_ISSU</del> <del>ISSU</del> <del>ISSU</del> <del>NO</del> <del>HR</del>	3-Error	LC ISSU is terminated for due to [chars] use \n\issu linecard abortversion [chars]' to restore linecard to the original version if necessary	An error notification was received while running the \n\Redundant LC ISSU process. The process is stopped	ha-issu-infra	"Copy the error and send it to TAC.\n\TAC team can contact ISSU infrastructure team to check why this error occurs"
<del>RCS_ISSU</del> <del>ISSU</del> <del>ISSU</del> <del>RL</del> <del>CS</del> <del>MR</del>	3-Error	error processing [chars] event in [chars] state for LC idx [chars] terminating process	internal error in RLC ISSU event processing	ha-issu-infra	"Copy the error and send it to TAC.\n\TAC team can contact ISSU infrastructure team to check why this error occurs"
<del>RCS_ISSU</del> <del>ISSU</del> <del>ISSU</del> <del>RL</del> <del>CS</del> <del>MR</del>	3-Error	error processing [chars] event in [chars] state for LC idx [chars] terminating process	internal error in RLC ISSU event processing	ha-issu-infra	"Copy the error and send it to TAC.\n\TAC team can contact ISSU infrastructure team to check why this error occurs"
<del>RCS_ISSU</del> <del>ISSU</del> <del>ISSU</del> <del>CR</del> <del>MR</del> <del>ON</del>	4-Warning	Linecard [chars] and RP have different image versions	Linecard has different version of image than RP	ha-issu-infra	"Use RLC ISSU commands to change these\n\LCs' images to same version as RP"
<del>RCS_ISSU</del> <del>ISSU</del> <del>ISSU</del> <del>CR</del> <del>MR</del> <del>ON</del>	4-Warning	Linecard [chars] and RP have different image versions	Linecard has different version of image than RP	ha-issu-infra	"Use RLC ISSU commands to change these\n\LCs' images to same version as RP"
<del>RCS_ISSU</del> <del>ISSU</del> <del>ISSU</del> <del>MA</del> <del>CHR</del>	4-Warning	error loading LC image for LC [chars]	internal error in loading linecard image	ha-issu-infra	"Copy the error and send it to TAC.\n\TAC team can contact ISSU infrastructure team to check why this error occurs"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HCS</del> <del>INFO</del> <del>HCS</del> <del>MC</del> <del>HR</del>	4-Warning	error loading LC image for LC [chars]	internal error in loading linecard image	ha-issu-infra	"Copy the error and send it to TAC.\nTAC team can contact ISSU infrastructure team to check why this error occurs"
<del>HCS</del> <del>INFO</del> <del>MC</del> <del>HR</del>	4-Warning	LC ISSU is not finished please issue the next commands to complete LC ISSU	The steps to complete LC ISSU has not been fully carried\nout by the operator. The system is left in an intermediate state where some \nlinecards have been upgraded and others have not. This message is to remind\nthe operator that a significant amount of time has passed waiting for \nthe operator to enter the next LC ISSU command.	ha-issu-infra	"Enter the next LC ISSU command to continue with\nLC ISSU which includes commands to perform the operations of prepareversion \nloadversion runversion acceptversion commitversion or abortversion"
<del>HCS</del> <del>INFO</del> <del>MC</del> <del>HR</del>	4-Warning	LC ISSU is not finished please issue the next commands to complete LC ISSU	The steps to complete LC ISSU has not been fully carried\nout by the operator. The system is left in an intermediate state where some \nlinecards have been upgraded and others have not. This message is to remind\nthe operator that a significant amount of time has passed waiting for \nthe operator to enter the next LC ISSU command.	ha-issu-infra	"Enter the next LC ISSU command to continue with\nLC ISSU which includes commands to perform the operations of prepareversion \nloadversion runversion acceptversion commitversion or abortversion"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>RCS-URGENT-RCS-NOF</del>	5-Notice	[chars]	Linecard notification msg	ha-issu-infra	"No action needed"
<del>RCS-URGENT-RCS-NOF</del>	5-Notice	[chars]	Linecard notification msg	ha-issu-infra	"No action needed"
<del>RLDP-INFO-RLDP</del>	6-Information	iosxe-binos-utils	RLDP initiate[chars]	General ewlc RLDP initiate startup status	LOG_STD_ACTION
RLM-3-INIT	3-Error	rlm [dec]: [chars][chars].	RLM initialization operation fails.	-	LOG_STD_ACTION
RLM-4-LINK	4-Warning	rlm [dec]: [chars][chars].	A warning is given out for a particular RLM link.	-	LOG_SID_DBG_ACTION
RLM-4-NOBUF	4-Warning	rlm [dec]: cannot get packet buffer for [chars].	A rlm link cannot allocate a packet buffer.	-	LOG_SID_REDUCE_ACTION
RM-3-BADACCT	3-Error	Unknown Accounting type [dec] flag [dec].	Get either invalid accounting type or flag	resource-manager	LOG_STD_ACTION
RM-3-BADCALL	3-Error	Unexpected Call on [chars]. Current state is [dec].	A call came in on a line where we think we still have an active call.	resource-manager	LOG_STD_ACTION
RM-3-BADRG	3-Error	Bad state rg \[chars]: [dec]	An internal software error.	resource-manager	LOG_STD_ACTION
RM-3-BOUNDARY	3-Error	Memory boundary violation	An internal software error.	resource-manager	LOG_STD_ACTION
RM-3-NORESP	3-Error	No response-code from local RM	An internal software error.	resource-manager	LOG_STD_ACTION
RM-3-OUTOFBUFFS	3-Error	Out of buffers in RM event buffer queue	An internal software error.	resource-manager	LOG_STD_ACTION
RM-3-RGINFO	3-Error	[chars]: RG-info conversion failed [node]	An internal software error.	resource-manager	LOG_STD_ACTION
RM-3-WAVL	3-Error	Wavl error	An internal software error.	resource-manager	LOG_STD_ACTION
RM-3-ZEROVAL	3-Error	Uninitialized value being used	An internal software error.	resource-manager	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RMFD-3-ERR_LOG	3-Error	[chars]	RMFD Error has occurred	cbr-cmts-infra	LOG_SID_NO_ACTION
RMFD-4-WARN_LOG	4-Warning	[chars]	Relay warning message	cbr-cmts-infra	LOG_SID_NO_ACTION
RMFD-5-NOTICE_LOG	5-Notice	[chars]	Relay notice message	cbr-cmts-infra	LOG_SID_NO_ACTION
<del>RMFD-3-ERR_LOG</del>	3-Error	Out of tcam resources to execute command	Number of IPv4 routes installed exceeded supported scale	asr903-cfc	"Please reduce the number of IPv4 routes configured " "to supported scale. Clear the table to successfully" " reinstall all entries"
<del>RMFD-3-ERR_LOG</del>	3-Error	Out of tcam resources to execute command	Number of IPv4 routes installed exceeded supported scale	firmware	"Please reduce the number of IPv4 routes configured " "to supported scale"
<del>RMFD-3-ERR_LOG</del>	3-Error	Out of tcam resources to execute command	Number of IPv4 routes installed exceeded supported scale	firmware	"Please reduce the number of IPv4 routes configured " "to supported scale"
<del>RMFD-3-ERR_LOG</del>	3-Error	Out of tcam resources to execute command	Number of IPv6 routes installed exceeded supported scale	asr903-cfc	"Please reduce the number of IPv6 routes configured " "to supported scale. Clear the table to successfully" " reinstall all entries"
RMON-5-FALLINGTRAP	5-Notice	Falling threshold has been crossed because the value of [chars] has fallen below the falling-threshold value [dec]	A Falling Event will be generated. The value of the specified\n\ MIB object has fallen below the falling threshold value as\n\ configured by the <CmdBold>rmon alarm<NoCmdBold> command for\n\ the specified object	<del>Control Plane High Availability</del>	"Take appropriate action on the specified MIB object."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>RMON5HC</del> FALLINGTRAP	5-Notice	Falling trap is generated because the value of [chars] has fallen below\n\nthe falling-threshold hc value [node]u	A Falling Trap has been generated.The value of the specified\n\n MIB object has fallen below the falling threshold value as\n\n configured by the <CmdBold>rmon hc-alarms<NoCmdBold> command for\n\n the specified object	<del>Call the MIB object group</del>	"Take appropriate action on the specified MIB object."
<del>RMON5HC</del> RISINGTRAP	5-Notice	Rising trap is generated because the value of [chars] exceeded the\n\nrising-threshold hc value [node]u	A Rising Trap has been generated.The value of the specified\n\n MIB object has exceeded the rising threshold value as configured by\n\n the <CmdBold>rmon hc-alarms<NoCmdBold> command for the specified object	<del>Call the MIB object group</del>	"Take appropriate action on the specified object."
<del>RMON5</del> RISINGTRAP	5-Notice	Rising threshold has been crossed because the value of [chars] exceeded the rising-threshold value [dec]	A Rising Event will be generated.The value of the specified\n\n MIB object has exceeded the rising threshold value as configured by\n\n the <CmdBold>rmon alarm<NoCmdBold> command for the specified object	<del>Call the MIB object group</del>	"Take appropriate action on the specified object."
<del>ROHSSC</del> ADUCATION	6-Information	ewlc-wips	Adhoc rogue AP with MAC address[chars] has been automatically contained as per WPS policies.	Adhoc Rogue has been automatically contained	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ROGESSLOGAUCONINF</del>	6-Information	ewlc-wips	Auto-containment for adhoc rogue AP with MAC address[chars] has been stopped.	Adhoc Rogue auto-containment has been stopped	LOG_SID_NO_ACTION
<del>ROGESSLOGAUCONINF</del>	6-Information	ewlc-wips	Rogue AP with MAC address[chars] has been automatically contained as per WPS policies	Rogue AP has been auto-contained	LOG_SID_NO_ACTION
<del>ROGESSLOGAUCONINF</del>	6-Information	ewlc-wips	Automatic containment for rogue AP with MAC address[chars] has been cleared.	Rogue AP autocontainment has been stopped	LOG_SID_NO_ACTION
<del>ROGESSLOGAUCONINF</del>	6-Information	ewlc-wips	Managed AP[chars] with radio MAC[chars] slot %d is contained by another AP.	A managed AP is contained by another AP	LOG_SID_NO_ACTION
<del>ROGESSLOGAUCONINF</del>	6-Information	ewlc-wips	Managed AP[chars] with radio MAC[chars] slot %d is no longer contained by another AP.	A managed AP is no longer contained by another AP	LOG_SID_NO_ACTION
<del>ROGESSLOGAUCONINF</del>	6-Information	ewlc-wips	Rogue AP with MAC address[chars] has been contained due to rule[chars] with containment level %d	Rogue AP has been contained due to a rule match	LOG_SID_NO_ACTION
<del>ROGESSLOGAUCONINF</del>	6-Information	ewlc-wips	Potential Honeypot AP detected with Rogue AP MAC[chars] with SSID[chars] by AP with Radio MAC[chars]	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ROUESSC6/HONPCLER</del>	6-Information	ewlc-wips	Potential Honeypot AP MAC address[chars] is cleared. This Rogue AP is no longer advertising an SSID that is configured on this controller.	Potential Honeypot AP cleared	LOG_SID_NO_ACTION
<del>ROUESSC6/IMPSONAN</del>	6-Information	ewlc-wips	Impersonation of AP with Radio MAC[chars] using source MAC address[chars] has been detected by AP[chars] with Radio MAC[chars]	-	-
<del>ROUESSC6/NUMROEP</del>	6-Information	ewlc-wips	Rogue AP count for the system has reached the maximum limit of %d entries.	Rogue AP maximum scale has been reached	LOG_SID_NO_ACTION
<del>ROUESSC6/NUMROELER</del>	6-Information	ewlc-wips	Rogue AP count for the system is within the limit of %d entries.	Number of Rogue APs is below system limit	LOG_SID_NO_ACTION
<del>ROUESSC6/AVROELRP</del>	6-Information	ewlc-wips	The average number of Rogue APs per detecting AP radio has crossed the threshold of %d on AP[chars] with radio MAC[chars].	The average number of Rogue APs per detecting AP radio has crossed the threshold.	LOG_SID_NO_ACTION
<del>ROUESSC6/AVROELER</del>	6-Information	ewlc-wips	The average number of Rogue APs per detecting AP radio is below the threshold of %d on AP[chars] with radio MAC[chars].	The average number of Rogue APs per detecting AP radio is below the threshold.	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ROLES</del> SCG6IPASCPA	6-Information	ewlc-wips	RLDP failed with error code %d while trying to associate to Rogue AP[chars] using AP[chars] with Radio MAC[chars]	-	-
<del>ROLES</del> SCG6IFACIAD	6-Information	ewlc-wips	Rogue AP[chars] removed from Radio MAC[chars]	-	-
<del>ROLES</del> SCG6IFADHED	6-Information	ewlc-wips	Rogue AP[chars] detected on Radio MAC[chars]	-	-
<del>ROLES</del> SCG6IFADWIK	6-Information	ewlc-wips	Rogue AP with MAC address[chars] has been detected on the wired network.	A Rogue AP has been detected on the wired network	LOG_SID_NO_ACTION
<del>ROLES</del> SCG6IFADWIKR	6-Information	ewlc-wips	Rogue AP with MAC address[chars] is no longer on the wired network.	Rogue AP is not anymore on the wired network	LOG_SID_NO_ACTION
<del>ROLES</del> SCG6IFADHED	6-Information	ewlc-wips	Rogue client with MAC address[chars] has been detected by %d APs	-	-
<del>ROLES</del> SCG6IFADHED	6-Information	ewlc-wips	Rogue Client[chars] removed from Rogue AP[chars]	-	-
<del>ROLES</del> SCG6IFADHED	6-Information	ewlc-wips	Rogue Client count threshold exceeded for Rogue AP[chars] by client address[chars] detected by AP[chars]	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
ROLLBACK_ISSU_GET_BUFFER	2-Critical	Rollback ISSU client failed to get buffer for message. Error: [dec] [chars]	The Rollback ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	parser	"show logging and show checkpoint client"
ROLLBACK_ISSU_GET_BUFFER	2-Critical	Rollback ISSU client failed to get buffer for message. Error: [dec] [chars]	The Rollback ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	parser	"show logging and show checkpoint client"
ROLLBACK_ISSU2INIT	2-Critical	Rollback ISSU client initialization failed to [chars]. Error: [dec] [chars]	The Rollback ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	parser	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ROLLBACK_ISSU2INT	2-Critical	Rollback ISSU client initialization failed to [chars]. Error: [dec] [chars]	The Rollback ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	parser	LOG_STD_ACTION
<del>ROLLBACK_ISSU2INT</del>	2-Critical	Rollback ISSU client failed to send negotiation message. Error: [dec] [chars]	The Rollback ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	parser	"show logging and show checkpoint client"
<del>ROLLBACK_ISSU2INT</del>	2-Critical	Rollback ISSU client failed to send negotiation message. Error: [dec] [chars]	The Rollback ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	parser	"show logging and show checkpoint client"
<del>ROLLBACK_ISSU2INT</del>	2-Critical	Failed to start Rollback ISSU session negotiation. Error: [dec] [chars]	The Rollback ISSU client failed to start session negotiation. If a problem occurs with the ISSU session start the standby device cannot be brought up properly.	parser	"show issu session <client_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ROLLBACK_ISSU_NEGO_FAIL</del>	2-Critical	Failed to start Rollback ISSU session negotiation. Error: [dec] [chars]	The Rollback ISSU client failed to start session negotiation. If a problem occurs with the ISSU session start the standby device cannot be brought up properly.	parser	"show issu session <client_id>"
<del>ROLLBACK_ISSU_REG_FAIL</del>	2-Critical	Rollback ISSU client failed to register session information. Error: [dec] [chars]	The Rollback ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	parser	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>ROLLBACK_ISSU_REG_FAIL</del>	2-Critical	Rollback ISSU client failed to register session information. Error: [dec] [chars]	The Rollback ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	parser	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>ROLLBACK_ISSU_VALID_SESSION</del>	3-Error	Rollback ISSU client does not have a valid registered session.	The Rollback ISSU client does not have a valid registered session.	parser	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>ROLLBACK_ISSU_VALID_SESSION</del>	3-Error	Rollback ISSU client does not have a valid registered session.	The Rollback ISSU client does not have a valid registered session.	parser	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"

<del>Facility-Severity-Mnemonic</del>	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ROLLBACK_ISSU_MG_NOCK</del>	3-Error	Rollback ISSU client 'Message Type [dec]' is not compatible	The Rollback ISSU client received an incompatible message from the peer device. The message cannot be processed.	parser	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>ROLLBACK_ISSU_MG_NOCK</del>	3-Error	Rollback ISSU client 'Message Type [dec]' is not compatible	The Rollback ISSU client received an incompatible message from the peer device. The message cannot be processed.	parser	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>ROLLBACK_ISSU_MG_SIZE</del>	3-Error	Rollback ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The Rollback ISSU client failed to calculate the MTU for the specified message. The Rollback ISSU client is not able to send the message to the standby device.	parser	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>ROLLBACK_ISSU_MG_SIZE</del>	3-Error	Rollback ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The Rollback ISSU client failed to calculate the MTU for the specified message. The Rollback ISSU client is not able to send the message to the standby device.	parser	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>ROLLBACK_ISSU_UNREG_NV</del>	3-Error	Rollback ISSU client failed to unregister session information. Error: [dec] [chars]	The Rollback ISSU client failed to unregister session information.	parser	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>ROLLBACK_ISSU_UNREG_NV</del>	3-Error	Rollback ISSU client failed to unregister session information. Error: [dec] [chars]	The Rollback ISSU client failed to unregister session information.	parser	"show issu session <client_id> and " "show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ROLLBACKISSU TRANSFORMAL	3-Error	Rollback ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The Rollback ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the Rollback state between the active device and the standby device is not identical.	parser	"show issu session <client_id> and " "show issu negotiated version <session_id>"
ROLLBACKISSU TRANSFORMAL	3-Error	Rollback ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The Rollback ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the Rollback state between the active device and the standby device is not identical.	parser	"show issu session <client_id> and " "show issu negotiated version <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>ROUTE</del> MP3-NOMEMORY	2-Critical	Alloc fail for route-map ipc buffer	Unable to malloc a buffer to send route-map configuration down to linecards.	-	"Enter a show chunks command and report the output along with" " this error message to your technical support representative."
<del>ROUTE</del> MP3-NAMETAG	2-Critical	The length of route map name tag is too long	The length of route map name tag is too long for IPC. The receiver has a 256 character long limit on route map name tag	-	"Use a route map name tag with the length of 256 or less characters"
<del>ROUTE</del> MP3-TRACKOBJECT	4-Warning	can't track this type of object	Route maps only support STATE type track objects. This object is not a STATE object	routemap	"Reconfigure the track object to make it a STATE object."
<del>ROUTE</del> MP3-TRACKOBJECT	4-Warning	can't track this type of object	Route maps only support STATE type track objects. This object is not a STATE object	routemap	"Reconfigure the track object to make it a STATE object."
RP_MLP-3-ADJ_FAIL	3-Error	Adjacency walk for [chars] failed	Adjacency update for the specified multilink interface failed.	vipmlp	"Reset the multilink interface by entering the " " <del>CmdBold</del> shutdown" <del>NoCmdBold</del> command and then " "the <del>CmdBold</del> no shutdown <del>NoCmdBold</del> command on the interface. " "If traffic does not resume please collect the output of " " <del>CmdBold</del> show adjacency internal <del>NoCmdBold</del> and " " <del>CmdBold</del> show cef interface internal <del>NoCmdBold</del> . " LOGS_ID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RP_MLP3_CFG_FAILED	3-Error	Config send to IM failed reason[dec]	Configuration send to IM failed	uea-im-tdm	""
RP_MP3_NCM_AIBLINK	3-Error	The current config cannot be supported as link[chars] [chars] for bundle [chars]	When using multilink 1 All the links should be from the same port.	-	" Please modify the config as not to violate the restrictions"
RP_MP3_NCM_AIBLINK	3-Error	The current config cannot be supported as link[chars] [chars] for bundle [chars]	When using multilink 1 All the links should be from the same port.	uea-im-tdm	" Please modify the config as not to violate the restrictions"
RP_MP3_NCM_AIBLINK	3-Error	Multilink interface supported range is 1-65535. Removing Multilink.	Multilink interface should be within 1-65535 else it is not supported	vipmlp	"Configure Multilink interface in the following range:1-65535"
RP_MP3_NCM_AIBLINK	3-Error	Policy map configs will be removed from interface [chars] as it is not supported.	Interface has unsupported service policy configurations	-	"Configure a valid Service Policy under the interface"
RP_MP3_NCM_AIBLINK	3-Error	The current config cannot be supported as [chars] for [chars]	When using multilink 1 The maximum number of links in the bundle and number of bundles	-	" Please modify the config as not to violate the restrictions"
RP_MP3_NCM_AIBLINK	3-Error	The current config cannot be supported as [chars] for [chars]	When using multilink 1 The maximum number of links in the bundle and number of bundles	uea-im-tdm	" Please modify the config as not to violate the restrictions"
RP_MP3_NCM_AIBLINK	4-Warning	Bad way of removing member link now perform 'no shut' on both sides of Multilink	If member link has to be removed from multilink bundle first\n\ remove the multilink configuration from the member link and\n\ then perform no channel-group command on the controller.	-	"If the member link is removed from the multilink bundle using\n\ "no channel-group" command perform "no shut" on both sides\n\ of the multilink interface to make it work."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RP_MLP4BADLINKDCONG	4-Warning	Bad way of removing member link now perform 'no shut' on both sides of Multilink	If member link has to be removed from multilink bundle first\n\n remove the multilink configuration from the member link and\n\n then perform no channel-group command on the controller.	uea-im-tdm	"If the member link is removed from the multilink bundle using\n\n "no channel-group" command perform "no shut" on both sides\n\n of the multilink interface to make it work."
RP_MLP4CHANGEQUEUING	4-Warning	Change the queueing on the distributed multilink interface [chars] to FCFS	When using multilink interface in distributed mode the queueing should be FCFS Please remove weighted fair or priority queueing.	-	" Please shut the multilink interface and unconfigure fair or priority" " queueing and then unshut the multilink interface"
RP_MLP4DIFAIRPOLICY	4-Warning	priority service policy aabsent with DLFioATM on ATM SPA on Bundle [chars]	A priority service policy is needed for DLFioATM on ATM-SPA to be able to do LFI on this interface.	-	"Please configure a priority service policy on the virtual template " "interface to enable the ATM SPA to do LFI."
RP_MLP4DIFLINKSUPPORT	4-Warning	Only ONE link should be configured for dLFI bundle!!	Trying to configure more than ONE link for dLFI bundle interface\n\n which is not supported by dLFioFR and dLFioATM.	-	""
RP_MLP4DMLPSCONFIGLINK	4-Warning	Links across linecards or dCEF disabled giving control to RP	Trying to add links to a bundle which are spread across linecards \n\n DMLP cant support this so giving control of bundle to RP.	-	""
RP_MLP4NODISTMLP	4-Warning	Failure downloading MLP bundle [chars] to the LC [dec]	The bundle is configured to be distributed but for some reasons \n\n we cannot download the MLP config to the LCd.	-	""

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RP_MP4PANOSLPCRIED	4-Warning	Adding Link from unsupported PA cant add giving control to RP	Trying to add links to a bundle from a PA which is not supported\n\ by DMLP so giving control of bundle to RP.	-	""
RP_MLP5LEGACYCARD	5-Notice	Link[chars] added Bundle[chars] may not be distributed	Link speed mismatch with other member links of the bundle. If this link become active bundle will not work in distributed mode	-	""
RP_MLP5LINKSPEEDMISMATCH	5-Notice	Link[chars] added Bundle[chars] may not be distributed	Link speed mismatch with other member links of the bundle. If this link become active bundle will not work in distributed mode	-	""
RP_MLP5LINKSPEEDMISMATCH	5-Notice	Link[chars] cannot be added to Bundle[chars]	Link speed mismatch with other member links of the bundle.	-	""
RP_MLP5SLOTSMISMATCH	5-Notice	Link[chars] cannot be added to Bundle[chars] as [chars]	Link should be on same slot as other member links of Bundle. If this link become active bundle will not work in distributed mode	-	""
RP_MLP5SLOTSMISMATCH	5-Notice	Link[chars] cannot be added to Bundle[chars] as [chars]	Link should be on same slot as other member links of Bundle.	-	""
RP_MLP5SPAWARNING	5-Notice	could not add link for bundle [chars] as [chars]	A link was added to the bundle but it is not on the same bay as other member links of the bundle.	-	"Ensure that when a link is added to a bundle " "that it is on the same bay as the other member " "links of the bundle in order to have the MLP "



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RP_MLP5SPAWARNING	5-Notice	Feature support switching to LC based software for [chars] as [chars]	A link was added to the bundle but it is not on the same bay as other member links of the bundle. The specified link that is not on the same bay has become active and the bundle has been switched to line card-based software support rather than the hardware mode that is supported on FREEDM.	-	"Ensure that when a link is added to a bundle " "that it is on the same bay as the other member " "links of the bundle in order to have the MLP " "bundle in hardware mode supported on FREEDM."
RP_MLP6BAYMISMATCH	6-Information	Bay number in message [dec] received [chars] greater than max number [dec]	Bay number in the message received exceeded max number of bays	uea-im-tdm	LOG_SID_RECUR_ACTION
RP_MLP6BAYLINKADD	6-Information	Link [chars] added to [chars] belongs to a different bay	Links added to the bundle must all belong to the same bay	uea-im-tdm	LOG_SID_RECUR_ACTION
RPA-3-FLEXIBLE	3-Error	[chars]	This message type is created for all those messages which\n\n have simple ASCII text and does not take any parameter.\n\n Message tells what the problem is.	resource-grp-mgr	LOG_STD_ACTION
RPA-3-NO_CAS_ENTRY	3-Error	CAS Entry does not exist for slot: [dec] ctrl:[dec] channel:[dec]	CAS entry does not exist for the given controller and channel.	resource-grp-mgr	LOG_STD_ACTION
RPA-3-UNKNOWN_MSG	3-Error	Unknown message type [dec] enqueued to RPA CAS Process	A message type which is not known to RPA CAS process is\n\n enqueued to it's queue.	resource-grp-mgr	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RPC-3-AUTH	3-Error	RPC missing authentication	marshal_new_auth cannot authenticate	rpc	LOG_SID_NO_ACTION
RPC-3-AUTH	3-Error	RPC missing authentication	marshal_new_auth cannot authenticate	rpc	LOG_SID_NO_ACTION
RPC-3-CACHEPERROR	3-Error	RPC cache perror: [chars]	RPC Cache perror	rpc	LOG_SID_NO_ACTION
RPC-3-CACHEPERROR	3-Error	RPC cache perror: [chars]	RPC Cache perror	rpc	LOG_SID_NO_ACTION
RPC-3-CLNTPERROR	3-Error	RPC client perror: [chars]	RPC Client perror	rpc	LOG_SID_NO_ACTION
RPC-3-CLNTPERROR	3-Error	RPC client perror: [chars]	RPC Client perror	rpc	LOG_SID_NO_ACTION
RPC-3-IOCTL	3-Error	RPC ioctl failed	get_myaddress: ioctl failed	rpc	LOG_SID_NO_ACTION
RPC-3-IOCTL	3-Error	RPC ioctl failed	get_myaddress: ioctl failed	rpc	LOG_SID_NO_ACTION
RPC-3-LSEEK	3-Error	RPC lseek called on a socket	pxdrec_getpos: This shouldn't happen	rpc	LOG_SID_NO_ACTION
RPC-3-LSEEK	3-Error	RPC lseek called on a socket	pxdrec_getpos: This shouldn't happen	rpc	LOG_SID_NO_ACTION
RPC-3-MALLOC	3-Error	RPC malloc failed	malloc returned NULL	rpc	LOG_SID_NO_ACTION
RPC-3-MALLOC	3-Error	RPC malloc failed	malloc returned NULL	rpc	LOG_SID_NO_ACTION
RPC-3-RECVFROM	3-Error	RPC recvfrom failed	pmap_rmt: recvfrom failed: cannot receive broadcast message	rpc	LOG_SID_NO_ACTION
RPC-3-RECVFROM	3-Error	RPC recvfrom failed	pmap_rmt: recvfrom failed: cannot receive broadcast message	rpc	LOG_SID_NO_ACTION
RPC-3-SELECT	3-Error	RPC select failed	RPC: cannot call select	rpc	LOG_SID_NO_ACTION
RPC-3-SELECT	3-Error	RPC select failed	RPC: cannot call select	rpc	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
RPC-3-SENDTO	3-Error	RPC sendto failed	pmap_rmt: sendto failed: cannot send broadcast message	rpc	LOG_SID_NO_ACTION
RPC-3-SENDTO	3-Error	RPC sendto failed	pmap_rmt: sendto failed: cannot send broadcast message	rpc	LOG_SID_NO_ACTION
RPC-3-SETSOCKOPT	3-Error	RPC setsockopt failed	pmap_rmt: setsockopt failed	rpc	LOG_SID_NO_ACTION
RPC-3-SETSOCKOPT	3-Error	RPC setsockopt failed	pmap_rmt: setsockopt failed	rpc	LOG_SID_NO_ACTION
RPC-3-SOCKET	3-Error	RPC can't create socket	RPC cannot create a socket	rpc	LOG_SID_NO_ACTION
RPC-3-SOCKET	3-Error	RPC can't create socket	RPC cannot create a socket	rpc	LOG_SID_NO_ACTION
RPC-3-SOCKNAME	3-Error	RPC can't call getsockname	svc_create cannot call getsockname	rpc	LOG_SID_NO_ACTION
RPC-3-SOCKNAME	3-Error	RPC can't call getsockname	svc_create cannot call getsockname	rpc	LOG_SID_NO_ACTION
RPC-3-XDRCALLHDR	3-Error	RPC fatal header serialization error	clnt_raw - Fatal header serialization error	rpc	LOG_SID_NO_ACTION
RPC-3-XDRCALLHDR	3-Error	RPC fatal header serialization error	clnt_raw - Fatal header serialization error	rpc	LOG_SID_NO_ACTION
RPF-4-RADIXINIT	4-Warning	Error initializing the MVRF select radix tree	An internal software error occurred.	mcast-vpn	LOG_SID_SH_TECH_ACTION
RPF-4-RADIXINIT	4-Warning	Error initializing the MVRF select radix tree	An internal software error occurred.	mcast-vpn	LOG_SID_SH_TECH_ACTION
RPF-4-RADIXINSERT	4-Warning	Error inserting a new entry into the MVRF select radix tree	An internal software error occurred.	mcast-vpn	LOG_SID_SH_TECH_ACTION
RPF-4-RADIXINSERT	4-Warning	Error inserting a new entry into the MVRF select radix tree	An internal software error occurred.	mcast-vpn	LOG_SID_SH_TECH_ACTION
RPHY_DB-3-DB_HOG	3-Error	MSG_TRACEBACK   MSG_PROCESS	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RPHY_DB3NEST_LOCK	3-Error	MSG_TRACEBACK   MSG_PROCESS	-	-	-
RPHY_DB3UNEXPECTED	3-Error	MSG_TRACEBACK   MSG_PROCESS	-	-	-
RPHY_DB4DB_STARVE	4-Warning	Waiting [chars] lock of <[chars]> for [node]ms	The IOSd process was waiting for the DB lock for too long	rphy-infra	LOG_STD_ACTION
RPL3-CHUNK_ERROR	3-Error	[chars]	This Error message would be encountered when trying to 1. access chunk or chunk element when they are not valid. 2. lock failure on chunk element.	rpl	LOG_STD_ACTION
RPL3-CHUNK_ERROR	3-Error	[chars]	This Error message would be encountered when trying to 1. access chunk or chunk element when they are not valid. 2. lock failure on chunk element.	rpl	LOG_STD_ACTION
RPL3-CONFIG_ERROR	3-Error	RPL [chars] configuration failed: [chars] [chars] code [dec]	This Error message would be encountered when trying to configure rpl through api.	rpl	LOG_STD_ACTION
RPL3-CONFIG_ERROR	3-Error	RPL [chars] configuration failed: [chars] [chars] code [dec]	This Error message would be encountered when trying to configure rpl through api.	rpl	LOG_STD_ACTION
RPL3-MALFORMEDMSG	3-Error	Malformed [chars] received from: %P	This Error message would be encountered if a malformed RPL Control message is received	-	"Informational"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RPL3MALFORMEDMSG	3-Error	Malformed [chars] received from: %P	This Error message would be encountered if a malformed RPL Control message is received	-	"Informational"
RPS3DCOUTPUTVOLTFAIL	3-Error	System detected Redundant Power System DC Output Voltage failure condition.	The Redundant Power System experienced a DC Output Voltage failure condition in one of the power supplies.	-	"One of the DC outputs has failed on the Redundant Power Supply. For 3600 and 2600 Redundant Power supplies "DC Status" LED on the front of the Power Supply will identify which DC output has failed. For 5300 Redundant Power Supply "DC OK" LED on the front of the Power Supply will identify which DC output has failed. When there is a DC failure you need to replace the Redundant Power Supply."
RPS3DCOUTPUTVOLTOK	3-Error	Redundant Power System DC Output Voltage condition is now normal	The Redundant Power System DC Output Voltage is normal.	-	"This is an informational message only. No action is required."
RPS-3-FANFAIL	3-Error	System detected Redundant Power System FAN FAIL condition.	The Redundant Power System experienced a Fan failure condition.	-	"One of the fans has failed and you should replace the Redundant Power Supply."
RPS-3-FANOK	3-Error	Redundant Power System FAN condition is now normal.	The Redundant Power System FAN is now normal.	-	"The Redundant Power Supply previously detected fan failure condition which has now cleared."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RPS-3-INPUTVOLTIFAIL	3-Error	System detected Redundant Power System Input Voltage failure condition.	The Redundant Power System experienced an Input Voltage failure in one of the power supplies.	-	"One of the AC or DC inputs has failed on the Redundant Power Supply. For 3600 and 2600 Redundant Power supplies "AC Input" LED on the front of the Power Supply will identify which AC input has failed. For 5300 AC<->DC Redundant Power Supply "AC OK" LED on the front of the Power Supply will identify which AC input has failed. For 5300 DC<->DC Redundant Power Supply "DC Input" LED on the front of the Power Supply will identify which DC input has failed. Make sure that the AC/DC circuit in your building is operational verify that the power cord is plugged into the Redundant Power Supply and make sure that the AC/DC power switch on the Redundant Power Supply is on."
RPS-3-INPUTVOLTOK	3-Error	Redundant Power System Input Voltage condition is now normal	The Redundant Power System Input Voltage is normal.	-	"This is an informational message only. No action is required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RPS-3-OVERTEMP_OK	3-Error	System temperature is now normal.	The system is operating at a normal temperature.	-	"The system previously detected an over temperature condition\n\n which has now cleared. This is most likely due to high ambient \n\ temperature where the router is located."
RPS-3-OVERVOLT	3-Error	Redundant Power System detected OVERVOLTAGE condition.	The Redundant Power System detected OVERVOLTAGE condition.	-	"The Redundant Power System detected an over voltage condition."
RPS-3-RPSOK	3-Error	Redundant Power System is now normal	The Redundant Power System experienced multiple failures. This is a \n\ critical condition	-	"There are multiple failures on the Redundant Power Supply.\n\ Examine the LEDs on the front of the Redundant Power Supply to \n\ find out which failures it has."
RPS-3-THERMAL	3-Error	System detected Redundant Power System THERMAL FAIL condition.	The Redundant Power System experienced either a Fan failure\n\ or an Over Temperature condition.	-	"For 3600 and 2600 Redundant Power supplies look at the "FAN" and \n\ "TEMP" LEDs on the front of Power Supply. If the "FAN" LED is amber \n\ one of the fans has failed and you should replace the Redundant Power \n\ Supply. If the "TEMP" LED is amber the ambient temperature is too \n\ high. For 5300 RPS unit this message is displayed when the ambient\n\ temperature is too high."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RPS-3-THERMOK	3-Error	Redundant Power System THERMAL condition is now normal.	The Redundant Power System THERMAL is now normal.	-	"The Redundant Power Supply previously detected an over temperature \n\ condition which has now cleared. This is most likely due to high \n\ ambient temperature where the Redundant Power Supply is located. \n\ A Redundant Power System thermal failure can also be caused by a \n\ fan failure in the Redundant Power Supply."
RPS-3-VOLTOK	3-Error	Redundant Power System VOLTAGE is now normal.	The Redundant Power System voltage is now normal.	-	"The Redundant Power System previously detected an over voltage \n\ condition which has now cleared."
<del>RRM_CEN_AEDM_CREATE</del>	0-Emergency	ewlc-rrm	RRM failed to create[chars] timer	Failed to create timer	LOG_STD_ACTION
<del>RRM_CEN_BCHDNVRF</del>	3-Error	ewlc-rrm	Coverage message received profile from[chars]	CHD message was received for a radio which has a non existent RF Profile Configured.	Can be seen during configuration changes
<del>RRM_CEN_EMC_EXCHR</del>	3-Error	ewlc-rrm	%% Error: AP[chars] MAC: %d-%d-%d-%d-%d-%d Slot-id %d -[chars]	Improper arguments or config	Arguments to be changed
<del>RRM_CEN_AIRC_BCHD</del>	3-Error	ewlc-rrm	Coverage profile violation on[chars] AP %d-%d-%d-%d-%d-%d Slot: %d Failed client count: %d Total client count: %d	Coverage profile violation	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RRMCIENB1A1D1N1R1O1E	3-Error	ewlc-rrm	Interference profile violation on[chars] AP %d-%d-%d-%d-%d-%d-%d Slot: %d Interference in percentage: %d On channel: %d	Interference profile violation	LOG_STD_ACTION
RRMCIENB1A1D1O1R1O1E	3-Error	ewlc-rrm	Load profile violation on[chars] AP %d-%d-%d-%d-%d-%d-%d Slot: %d Channel load in percentage: %d Number of stations: %d	Load profile violation	LOG_STD_ACTION
RRMCIENB1A1D1N1O1E	3-Error	ewlc-rrm	Noise profile violation on[chars] AP %d-%d-%d-%d-%d-%d-%d Slot: %d Noise: %d dBm On channel: %d	Noise profile violation	LOG_STD_ACTION
RRMCIENB1A1C1O1N1G1S1Y1N1C	3-Error	ewlc-rrm	RRM HA Config tables not yet synced:[chars]	Some critical RRM configuration was found to be missing	-
RRMCIENB1R1M1A1P1D1B1E1R1	3-Error	ewlc-rrm	Unable to find AP %d-%d-%d-%d-%d-%d-%d entry in the database	-	-
RRMCIENB1R1M1A1P1N1S1O1I	3-Error	ewlc-rrm	Invalid slot number %d for AP %d-%d-%d-%d-%d-%d-%d could not process[chars]	AP included wrong slot number	LOG_STD_ACTION
RRMCIENB1R1M1A1P1E1B1R1	3-Error	ewlc-rrm	Unable to find AP %d-%d-%d-%d-%d-%d-%d slot %d[chars] entry in the database	-	-
RRMCIENB1R1M1C1H1A1N1N1E1L	3-Error	ewlc-rrm	RRM Channel Config Notification: Radio Role is AUTO. So	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>RRM_CENERRM_CONG</del>	3-Error	ewlc-rrm	RRM Config Notification:[chars]	Some critical RRM configuration still not populated.	If the message appears persistently
<del>RRM_CENERRM_COV</del>	5-Notice	ewlc-rrm	Coverage profile recovery on[chars] AP %d/%d/%d/%d/%d/%d Slot: %d	Coverage profile recovery	LOG_SID_NO_ACTION
<del>RRM_CENERRM_INT</del>	5-Notice	ewlc-rrm	Interference profile recovery on[chars] AP %d/%d/%d/%d/%d/%d Slot: %d	Interference profile recovery	LOG_SID_NO_ACTION
<del>RRM_CENERRM_NOI</del>	5-Notice	ewlc-rrm	Noise profile recovery on[chars] AP %d/%d/%d/%d/%d/%d Slot: %d	Noise profile recovery	LOG_SID_NO_ACTION
<del>RRM_CENERRM_CNCFG</del>	5-Notice	ewlc-rrm	AP[chars] slot %d[chars] is deferred	-	-
<del>RRM_CENERRM_CNCHNL</del>	5-Notice	ewlc-rrm	RRM Channel Config Notification: Non-PSC channel %d is configured for 6 GHz radio on slot %d	-	-
<del>RRM_CENERRM_SWCH_PCP</del>	6-Information	ewlc-afc-rrm	6GHZ Power mode switch from LPI to SP AP %d/%d/%d/%d/%d/%d Slot: %d Channel: %d Channel Width: %d	6GHZ Power mode switch from LPI to SP	LOG_SID_NO_ACTION
<del>RRM_CENERRM_SWCH_SCP</del>	6-Information	ewlc-afc-rrm	6GHZ Power mode switch from SP to LPI AP %d/%d/%d/%d/%d/%d Slot: %d Channel: %d Channel Width: %d	6GHZ Power mode switch from SP to LPI	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>RM_CENRMSILOCPOIE</del>	6-Information	ewlc-rrm	Load profile recovery on[chars] AP %d/%d/%d/%d/%d/%d Slot: %d	Load profile recovery	LOG_STD_NO_ACTION
<del>RM_CENRMSILOCPOIE</del>	3-Error	ewlc-rrm	Error encountered:[chars]	Invalid slot identifier is found while processing RRM packet	Please report the error to technical support representative
<del>RM_CENRMSILOCPOIE</del>	5-Notice	ewlc-rrm	WLC:[chars] having duplicate IP: %d.%d.%d.%d detected while processing RRM pkt. IP address of the conflicting WLC:[chars] should be changed immediately to avoid impact on RRM functionality	"Another WLC in the rf-network is having duplicate IP	-
<del>RM_CENRMSILOCPOIE</del>	0-Emergency	ewlc-rrm	RRM failed to create[chars] timer	Failed to create timer	LOG_STD_ACTION
<del>RM_CENRMSILOCPOIE</del>	3-Error	ewlc-rrm	%% Error:[chars]	Improper arguments or config	Arguments to be changed
<del>RM_CENRMSILOCPOIE</del>	3-Error	iosxe-binos-utils	Error in[chars]	General ewlc Error Message.	LOG_STD_ACTION
<del>RM_CENRMSILOCPOIE</del>	3-Error	ewlc-rrm	RRM HA Config tables not yet synced:[chars]	Some critical RRM configuration was found to be missing	-
<del>RM_CENRMSILOCPOIE</del>	3-Error	ewlc-rrm	Unable to register with platform to get Management IP Address Change Notification - error %d.	Unable to register with platform to get Management Interface IP Address Change Notification.	LOG_STD_ACTION
<del>RM_CENRMSILOCPOIE</del>	3-Error	ewlc-rrm	Unable to register with platform to receive packets - error %d	Unable to register with platform to receive packets	LOG_STD_ACTION
<del>RM_CENRMSILOCPOIE</del>	3-Error	ewlc-rrm	IPC Failure:[chars]	Failed to find IPC endpoint for AP	If the message appears persistently

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RRM_UTIL6INVALIDCHANNEL	4-Warning	ewlc-rrm	Warning: Update of the channel list caused invalid pair in DCA list for[chars] band	Invalid channel configuration	LOG_SID_NO_ACTION
RRM_UTIL6SETCHANNEL	6-Information	ewlc-rrm	Set channel on cell %d to [chars] chanwidth %d to reduce co-channel interference from %d to %d Reason[chars]	Set channel to reduce co-channel interference	LOG_SID_NO_ACTION
RRM_UTIL6SETCHANNELDUAL	6-Information	ewlc-rrm	Set channel[chars] for AP %d on dual band radio slot: %d due to[chars]	Set channel because of Dualband Radio Role/band change	LOG_SID_NO_ACTION
RRM_UTIL6SETCHANNELD	6-Information	ewlc-rrm	Set channel on cell %d to [chars] due to Air Quality violation reason[chars]	Set channel because of Air Quality Violation	Investigate the cause of bad air quality on the channel and eliminate if possible
RRM_UTIL6SETCHANNELNONOPT	6-Information	ewlc-rrm	No format	Set channel on user input (non-optimal)	LOG_SID_NO_ACTION
RRM_UTIL6SETCHANNELWIDTH	6-Information	ewlc-rrm	Set channel width on 802.11a for AP %d failed 160MHz channel width supported only for 4x4 antenna mode	Channel width configuration change	LOG_SID_NO_ACTION
RRM_UTIL6SETTXPOWER	6-Information	ewlc-rrm	Tx power changed from %d to %d for AP %d slot %d band[chars] due to[chars]	Set transmit power	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RRM_U16_DAECHANNEL	6-Information	ewlc-rrm	Set channel on[chars] AP %d/%d/%d/%d/%d/%d/%d/%d to[chars] by configuration change due to[chars]	Channel configuration change	LOG_SID_NO_ACTION
RRM_U16_DAEPOWER	6-Information	ewlc-rrm	Tx power changed from %d to %d for AP %d/%d/%d/%d/%d/%d/%d/%d slot %d band[chars] due to[chars]	Transmit power configuration change	LOG_SID_NO_ACTION
RS_IDM3_IDM3BACKPLANECLASH	3-Error	Clash in usage for TDM backplane timeslot [dec]	The TDM backplane timeslot to be allocated is already in use	as5800	"Check the split dial-shelf settings on both router shelves for conflicting setting"
RS_IDM3_IDM3BADARG	3-Error	A TDM function is used with a bad argument: [chars]	An internal software error has occurred. A TDM function was called with invalid arguments and could not be processed. The invalid arguments are specified at the end of this error message along with any other useful data.	as5800	"Enter the <CmdBold>debug tdm<NoCmdBold> command. If the problem " "recurs copy the error message the trace message and surrounding debug text " "exactly as they appear on the console or in the system log call your Cisco " "technical support representative and provide the representative with " "the gathered information."
RS_IDM3_IDM3CONFLICT	3-Error	TDM split user setting are in conflict: my RS [chars] = [dec] other RS [chars] = [dec]	The user setting for tdm split on this router shelf is in conflict with the setting on the other router More backplane DS0 are in use than 2048 DS0	as5800	"Set the other router dial-shelf split backplane-ds0 to non conflicting setting"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RSDM#BIDMEXIENDCLASH	3-Error	TDM extended split on Router shelf Clashes to my [chars] other [chars] extended backplane ds0	The number of extended backplane ds0 for this router clashes with the other router shelf	as5800	""
RSDM#BIDMIEGCLASH	3-Error	TDM legacy split on Router shelf Clashes to my [dec] other [dec] legacy backplane ds0	The number of legacy backplane ds0 for this router clashes with the other router shelf	as5800	""
RSDM#BIDMNOTSHIIPAR	3-Error	TDM split user setting are not matched pairs my RS [chars] = [dec] ds0 expected other RS [chars] = [dec] ds0 actual other RS [chars] = [dec] ds0	The user setting for tdm split on this router shelf is not compatible with the setting on the other router	as5800	"Set the other router dial-shelf split backplane-ds0 to above setting"
RSDM#BIDMRDCEIDMSIT	3-Error	TDM split on [chars] Router shelf Reduced to [dec] backplane ds0	The number of backplane ds0 for this router has been forced lower	as5800	""
RSDM#BIDMUNKNOWNSTATE	3-Error	TDM backplane timeslot [dec] is in an unknown state	The TDM backplane timeslot specified is in an unknown state	as5800	"Check the split dial-shelf settings on both router shelves for conflicting setting"
RSDM#BIDMNOISLISTCREAIED	3-Error	\ [chars]: Cannot create interface-based rsc list.	This failure is due to the list create operation.	ios-mem	"Please check the memory at the moment."
RSDM#BIDMNOISLISTCREAIED	3-Error	\ [chars]: Cannot create interface-based rsc list.	This failure is due to the list create operation.	ios-mem	"Please check the memory at the moment."
RSDM#BIDMNOISUCHINTERFACE	3-Error	\ [chars]: The interface doesn't exist	The interface for resource measurement doesn't exist at the time of the operation.	call-treatment	"Check the configuration to see if that interface is there"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RCM#NOSUCHINTERFACE	3-Error	\ [chars]: The interface doesn't exist	The interface for resource measurement doesn't exist at the time of the operation.	call-treatment	"Check the configuration to see if that interface is there"
RM#ALREADYRUNNING	5-Notice	\ One test is already running.	there is already one test running at the same time.	call-treatment	"Please wait for the completeness of the running test before starting " "another test. "
RM#ALREADYRUNNING	5-Notice	\ One test is already running.	there is already one test running at the same time.	call-treatment	"Please wait for the completeness of the running test before starting " "another test. "
RP#ISSU#MG#IND#ERR#CR	2-Critical	[chars]	This is a critical error message about an error that has occurred in Image Predownload while performing the ISSU operations in the system. A message of this type indicates that a failure has occurred during image predownload to VIP while performing an ISSU upgrade.	issu-7500	"Copy the notice exactly as it appears. Check both the active system and " "standby system for messages. Call your technical support representative " "for assistance."
RP#ISSU#MG#RCV#ERR#CR	2-Critical	[chars]	This is a critical error message about an error that has occurred in Image Predownload while performing the ISSU operations in the system. A message of this type indicates that a failure has occurred during receiving the VIP image on the active RP while performing an ISSU upgrade.	issu-7500	"Copy the notice exactly as it appears. Check both the active system and " "standby system for messages. Call your technical support representative " "for assistance."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RSP_ISSU2IMGSEND_ERROR	2-Critical	[chars]	This is a critical error message about an error that has occurred in Image Predownload while performing the ISSU operations in the system. A message of this type indicates that a failure has occurred during sending the VIP image from standby RP while performing an ISSU upgrade.	issu-7500	"Copy the notice exactly as it appears. Check both the active system and "standby system for messages. Call your technical support representative "for assistance."
RSP_ISSU2IPC_ERROR	2-Critical	[chars]	This is a critical error message about an error that has occurred in IPC communication while performing the ISSU operations in the system. A message of this type indicates that a failure has occurred during IPC communication while performing an ISSU upgrade.	issu-7500	"Copy the notice exactly as it appears. Check both the active system and "standby system for messages. Collect the output of "<CmdBold>show ipc status<NoCmdBold>. Call your technical support "representative for assistance and provide him with the information "collected. "



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RSP_ISSU1CRCHEERROR	2-Critical	Failed to open \[chars]\ port. Reason=[chars]	This is a critical error message about an error that has occurred in IPC communication while performing the ISSU operations in the system. A message of this type indicates that a failure has occurred during opening an IPC port while performing an ISSU upgrade.	issu-7500	"Copy the notice exactly as it appears. Check both the active system and "standby system for messages. Collect the output of " <CmdBold>show ipc ports<NoCmdBold>. Call your technical support "representative for assistance and provide him with the information "collected. "
RSP_ISSU2PCSENDERROR	2-Critical	Failed to send ISSU IPC message [dec]	This is a critical error message about an error that has occurred in IPC communication while performing the ISSU operations in the system. A message of this type indicates that a failure has occurred during sending an IPC message while performing an ISSU upgrade.	issu-7500	"Copy the notice exactly as it appears. Check both the active system and "standby system for messages. Call your technical support representative "for assistance."
RSP_ISSU3GET_BUFFER	3-Error	[chars] ISSU Client session [dec] failed to get buffer	RSP HA ISSU Client failed to get a buffer	issu-7500	LOG_SID_REDUCE_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RSP_ISSU3ISSU_CCB_FAIL	3-Error	[chars] [dec]	RSP ISSU CCB Playback System Error. There was a Playback Error encountered in the CCB Playback on the Standby.	issu-7500	"Copy the message exactly as it appears. Check both the active system " "and standby system for messages. Get the output with <CmdBold>debug " "issu <del>playback</del><NoCmdBold> enabled and then call your technical " "support representative for assistance."
RSP_ISSU3MSG_MTU	3-Error	[chars] ISSU Client [dec] get message MTU failed for message [dec].	RSP HA ISSU Client get message MTU Maximum Transmission Unit failed	issu-7500	LOG_STD_ACTION
RSP_ISSU3MSG_NOT_OK	3-Error	[chars] ISSU Client [dec] message type [dec] is not ok	RSP HA ISSU Client message type has not negotiated correctly	issu-7500	show issu message types <Client_ID>
RSP_ISSU3MSG_SEND	3-Error	[chars] ISSU Client session [dec] failed to send message	RSP HA ISSU Client failed to send negotiation message to peer	issu-7500	LOG_STD_ACTION
RSP_ISSU3RCV_XFORM_FAIL	3-Error	[chars] ISSU Client receive transformation has failed for message [dec]	RSP HA ISSU Client message receive side transformation has failed	issu-7500	LOG_STD_ACTION
RSP_ISSU3SESSION_REG	3-Error	[chars] ISSU Client session [dec] registration failed	RSP HA ISSU Client session registration failed	issu-7500	show issu sessions <Client_ID>
RSP_ISSU3SESSION_UNREG	3-Error	[chars] ISSU Client session [dec] un-registration failed	RSP HA ISSU Client session un-registration failed	issu-7500	show issu sessions <Client_ID>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RSP_ISSU_VIP_MDR_FAILED	3-Error	Slot [dec] has failed to complete MDR.	This message indicates a problem with minimal disruptive restart functionality on the VIP. The specified slot failed to complete MDR because of a checksum error or an internal crash.	issu-7500	"Verify if the card in the specified slot supports "MDR. Verify that the card is inserted properly. "If condition persists gather the output of "<CmdBold>show tech-support</CmdBold>. Contact your "technical support representative with the gathered"information. "
RSP_ISSU_VIP_MDR_START	3-Error	Slot [dec] Couldnt start MDR.	This is an error message regarding the VIP minimal disruptive restart functionality. This message indicates that given slot has failed to start MDR.	issu-7500	"please verify whether the card in the slot supports "MDR and whether it is inserted properly in the box. "Collect the output of <CmdBold>show tech-support</CmdBold> "and please call your technical support representative "for assistance. "
RSP_ISSU_VIP_MALLOC_FAIL	3-Error	[chars] ISSU Client malloc [dec] has failed	RSP HA ISSU Client cannot allocate memory for the data to be transformed and sent across to the peer. Most likely a resource problem within the system.	issu-7500	LOG_SID_REDUCE_ACTION
RSP_ISSU_VIP_TRANSFORM_FAIL	3-Error	[chars] ISSU Client transmit transformation has failed for message [dec]	RSP HA ISSU Client message transmit side transformation has failed	issu-7500	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
RSP_ISSU4ISSU_NO_QUIESCE	4-Warning	linecard in slot [dec] is not ISSU quiesced.	This is an informative message regarding the VIP minimal disruptive restart functionality. This error message indicates that the line card specified in the given slot will get reset during the ISSU process and there will be extended downtime during the upgrade process.	issu-7500	"Please verify whether the line card in the given slot supports " "minimal disruptive restart as per the feature navigator tool. " "If it doesnt then no action is required. Otherwise " "please call your technical support representative " "for assistance. "
RSP_ISSU4LC_RESET	4-Warning	linecard in slot [dec] will be reset during MDR	This is an informative message regarding the VIP minimal disruptive restart functionality. This error message indicates that the line card specified in the given slot will get reset during the ISSU process and there will be extended downtime during the upgrade process.	issu-7500	"Please verify whether the line card in the given slot supports " "minimal disruptive restart as per the feature navigator tool. " "If it doesnt then no action is required. Otherwise " "please call your technical support representative " "for assistance. "
RSP_ISSU4MDR_ABORTED	5-Notice	MDR Image download has been aborted.	This is an informative message regarding the VIP minimal disruptive restart functionality. This message indicates that MDR image download has been aborted.	issu-7500	"If you did not abort the download process gather the " "system messages that preceded this message to help " "the TAC representative diagnose the system condition. "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RPS_ISS_MGND_CMBEIE	5-Notice	Slot [dec] has received MDR image successfully	This is an informative message regarding the VIP minimal disruptive restart functionality. This message indicates that the line card specified in the given slot has completed image download.	issu-7500	"The system is behaving normally. No action is required."
RPS_ISS_MGND_DDONE	5-Notice	Image Download process complete.	This is an informative message regarding the VIP minimal disruptive restart functionality. This message indicates that the image predownload process has been completed.	issu-7500	"The system is behaving normally. No action is required."
RPS_ISS_MGND_STARTED	5-Notice	MDR Image download has started.	This is an informative message regarding the VIP minimal disruptive restart functionality. This message indicates that MDR image download has started.	issu-7500	"The system is behaving normally. No action is required."
RPS_ISS_MGRCV_DONE	5-Notice	Image has been received completely from standby.	This is an informative message regarding the VIP minimal disruptive restart functionality. This message indicates that the image receive from standby RSP has been completed.	issu-7500	"The system is behaving normally. No action is required."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
RSP_ISSU_IMG_SEND_DONE	5-Notice	Image Send to Active RP is complete	This is an informative message regarding the VIP minimal disruptive restart functionality. This message indicates that the image send to active RSP has been completed.	issu-7500	"The system is behaving normally. No action is required."
RSP_ISSU_MDR_ABORTED	5-Notice	MDR has aborted on slot [dec].	This is an informative message regarding the VIP minimal disruptive restart functionality. This message indicates that given slot has aborted MDR preparations. This could have happened if the user has initiated a abortversion command.	issu-7500	"If you did not abort the download process gather the " "system messages that preceded this message to help " "the TAC representative diagnose the system condition. "
RSP_ISSU_MDR_FINISHED	5-Notice	Slot [dec] has finished doing MDR.	This is an informative message regarding the VIP minimal disruptive restart functionality. This message indicates that given slot has finished MDR successfully.	issu-7500	"The system is behaving normally. No action is required."
RSP_ISSU_MDR_READY	5-Notice	Slot [dec] is ISSU quiesced and ready to do MDR.	This is an informative message regarding the VIP minimal disruptive restart functionality. This message indicates that given slot has finished ISSU quiesce and is ready to perform MDR.	issu-7500	"The system is behaving normally. No action is required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RSP_ISSU6VPMRSTARTED	5-Notice	Slot [dec] has started doing MDR.	This is an informative message regarding the VIP minimal disruptive restart functionality. This message indicates that given slot has started MDR successfully.	issu-7500	"The system is behaving normally. No action is required."
RSP_ISSU6ISSU_QUIESCED	6-Information	Slot [dec] is ISSU quiesced and it will be performing MDR	The line card in the specified slot has been prepared for minimal disruptive restart. The card will be performing a minimal disruptive restart when a switchover occurs.	issu-7500	"The system is behaving normally. No action is required."
RSP-2-BADCACHE	2-Critical	Overrun detected.\nEnd of MEMD buffer : 0x[hec]\nEnd of datagram : 0x[hec]\n bufhdr [hec]: [node]x [node]x [node]x [node]x\n Flushing Processor Cache	A packet was processed that was greater in size than the maximum possible MTU size or an illegal buffer header data area was found.	-	"Copy the error message exactly as it appears on the console or in the system log enter the show tech-support and show logging commands contact your Cisco technical support representative and provide the representative with the gathered information."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
RSP-2-NOMEMORY	2-Critical	No memory available for [chars]	An attempt at memory allocation failed.	-	"Try these actions to remedy the problem: Add memory. Disable some features. Apply filtering to decrease the size of system data structures - the routing table for example. In general reduce other system activities to ease memory demands. If conditions warrant upgrade to a larger memory configuration."
RSP-2-QADIAG	2-Critical	QA Diagnostic [chars] error at [node]8x	An error occurred during an attempt to access the RSP.	-	"Copy the error message exactly as it appears on the console or in the system log enter the show tech-support and show logging commands contact your Cisco technical support representative and provide the representative with the gathered information."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RSP-2-QAERROR	2-Critical	[chars] error [chars] at addr [node]x [chars]\n	While the system was attempting to process a hardware queue an error was detected by the QA ASIC. The error could be either a zero link error or a reuse error. A zero link error is caused by an attempt to place in the hardware queue a buffer header with an address of 0x0. A reuse error occurs when the QA ASIC detects or attempts to place in the hardware queue a buffer header that is the same as another buffer header in another hardware queue.\n Either of these errors can occur because of a software or hardware problem with the RSP or a line card.	-	"Run the show logging command and see that whether any parity errors were recorded just before the QAERROR error message was received. If any parity error was recorded before the QAERROR a hardware error has occurred. Copy the error message exactly as it appears on the console or in the system log contact your Cisco technical support representative and provide the representative with the gathered information. If no parity error was recorded and the problem recurs enter the show tech-support and show logging commands contact your Cisco technical support representative and provide the representative with the output of the commands."

Family-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RSP-2-STALL	2-Critical	partially inserted or removed IPs on cyBus%u	The RSP detected a stall condition of cbus. Most likely a board is not fully seated in the chassis. A less likely possibility is a hardware problem with the RSP or backplane.	-	"Try reseating the boards. Call your technical support representative for assistance if this message persists."
RSP-3-ACCERROR	3-Error	[chars] acc [node]x had bad value [dec]	An incorrect value has been written on an accumulator.	-	"Copy the error message exactly as it appears and report it to your technical support representative. A micro reload can correct the error condition as a workaround."
RSP-3-BADBUFHDR	3-Error	[chars] address [hec]	A software or hardware error occurred.	-	"Copy the error message exactly as it appears and report it to your technical support representative."
RSP-3-BADHWREV	3-Error	[chars] slot [node]has wrong hardware revision [node]%u	The hardware in the indicated slot needs to be upgraded for operation with the RSP.	-	"Upgrade the board."
RSP-3-BADTURBOCMG	3-Error	Bad Turbo IPC msg [chars]: msg=[hex] lastmsg=[hex] hdrsize=[hex] size=[hex]	An error was discovered in an IPC message.	-	LOG_STD_ACTION
RSP-3-BENGAL	3-Error	Bengal error. [chars]	System controller Bengal has reported an error/event	RSP	"Read error reports. SBE are generally not fatal. Most others are"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RSP-3-ERROR	3-Error	NULL	An internal software error has occurred. The exact nature of the problem is described in the error message.	-	"Copy the error message exactly as it appears on the console or in the system log contact your Cisco technical support representative and provide the representative with the gathered information."
RSP-3-FOREVER	3-Error	cmd [node]to [chars] slot [node]took [node]usecs done [hec]	A command from the RSP to an IP took longer for the system to process than expected. This condition may be caused by a heavily loaded CPU.	-	"If this error recurs copy the error message exactly as it appears on the console or in the system log enter the show tech-support and show logging commands contact your Cisco technical support representative and provide the representative with the gathered information."
RSP-3-IDPROM	3-Error	Bad or missing ID EEPROM controller type %u	The ID EEPROM on the RSP is missing or bad.	-	"This message indicates a manufacturing error. Report this error to your technical support representative."
RSP-3-INVQPTR	3-Error	queue=[hex] bufhdr [hec]:\n [node]x [node]x [node]x	A software or hardware error occurred.	-	"Copy the error message exactly as it appears and report it to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
RSP-3-INVVRTN	3-Error	Invalid return queue\n next=[hex] hwidb=[hex] type=[hex]\n queue_ptr=[hex] bufhdr_offset=[hex] id=[dec] bcast_id=[dec]\n bufhdr [hec]: [node]x [node]x [node]x [node]x	A software or hardware error occurred.	-	"Copy the error message exactly as it appears and report it to your technical support representative."
RSP3-INVRLNBCASIID	3-Error	Invalid return queue bcast_id=[dec]\n bufhdr [hec]: [node]x [node]x [node]x [node]x	A software or hardware error occurred.	-	"Copy the error message exactly as it appears and report it to your technical support representative."
RSP-3-IP_PANIC	3-Error	Panic: [chars] [node]x [node]x [node]x [node]x	The status message handler for the interface processor has detected that the firmware for the interface processor has experienced a critical condition. The name of the affected interface and the first four words of the status message buffer will be displayed along with the message for diagnostics	-	"Copy the error message exactly as it appears on the console or in the system log enter the show tech-support and show logging commands contact your Cisco technical support representative and provide the representative with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RSP-3-IPC	3-Error	[chars] [chars]	An IPC error has occurred. The exact nature of the problem is described in the error message.	-	"Copy the router configuration along with any other relevant information. Copy the error message exactly as it appears on the console or in the system log contact your Cisco technical support representative and provide the representative with the gathered information."
RSP-3-LOVEGIANT	3-Error	Card [chars] wants [dec] byte love letters but only got [dec] bytes	An inconsistency between the microcode and the system code was detected.	-	"Report this error to your technical support representative."
RSP-3-LOVENOTE	3-Error	[hec] corrupt: [node]x [node]x [node]x [node]x	The event handler at the RSP has detected a status update message from an interface processor but the field in the status message that identifies the associated interface processor is not valid. This condition indicates that the status message is corrupted. This error could occur because of a hardware or a software problem. The address of the status message buffer and the first four words of the message will be displayed for diagnostic purposes.	-	"Copy the error message exactly as it appears on the console or in the system log enter the show tech-support and show logging commands contact your Cisco technical support representative and provide the representative with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RSP-3-MSDOG	3-Error	Master/slave watchdog timed out	While handling the interrupts from the DBUS FPGA the RSP has detected that the timeout bit in the interrupt status register has been set. This condition indicates that the master RSP no longer controls the CBUS and DBUS. The slave may become active during this time. So the rest of the interrupt handler will not be processed.\n This behavior could be the result of either a hardware or a software problem.	-	"Copy the error message exactly as it appears. If this problem recurs copy down the router's configuration along with any other relevant information such as the output of show tech-support and show logging commands. Contact your Cisco technical support representative for assistance and provide him with all the gathered information."

Fault-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RSP-3-MSFIX	3-Error	Fixing [chars] by setting to default [chars]	<p>The characters shown can be either on the slave RSP setting or on the master RSP setting. The ROM monitor default slave RSP setting is not synchronized with the system configuration file specifications. During bootup the system image detects the mismatch and modifies the ROM monitor setting to conform with these specifications. This mismatch most likely occurred because a new RSP was being installed and booted in a high system availability HSA environment.</p> <p>Using the show version or show boot command</p>	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RSP-3-MSVERS	3-Error	Master has m/s version [dec] slave has m/s version [dec]	The master and slave are running incompatible software versions with regards to the master/slave exchange process.	-	"If the slave image global configuration is used to override the default slave image from the bundle then the slave image is incompatible. Update either the master or slave image to ensure the two are compatible. If the slave is running the image from the bundle execute and record the output of show version show running-config and show controller cbus commands. Report this information and the error message to your technical support representative."
RSP-3-NOIDB	3-Error	bad vc [node]on [chars]	A chennelized interface driver received a packet on an unconfigured channel.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative along with the output of " "show tech-support! "
RSP-3-NOMAC	3-Error	Can't allocate MAC address for interface [node]%u	No MAC address was available for allocation to the specified interface.	-	"Report this error to your technical support representative."
RSP-3-NORELOAD	3-Error	reload command not allowed on standby RSP	The <del>&lt;CmdBold&gt;reload&lt;/CmdBold&gt;</del> command in exec mode is not allowed on thestandby RSP	rsp	"Enter the <del>&lt;CmdBold&gt;slave reload&lt;/CmdBold&gt;</del> command in exec mode."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RSP-3-NORESTART	3-Error	[chars]: unable to schedule restart for output queue	A software or hardware error occurred.	-	"Copy the error message exactly as it appears and report it to your technical support representative."
RSP-3-NOSTART	3-Error	No microcode for [chars] card slot %u	No microcode is defined or available for the specified card.	-	"Reconfigure the card to specify an existing microcode file."
RSP-3-PA_INIT	3-Error	Malloc to [chars] failed for slot [dec] bay [dec]	The information structure for the port adapter could not be created. The interfaces on the specified port adapter might no longer be functional. A possible reason for this is a memory allocation failure involving the port adapter. This can occur as a result of insufficient hardware memory or a memory leak.	rsp	"Please confirm that the recommended amount of memory is installed " "for the platform. If memory is adequate please get the output of " " <b>show process memory</b> over time to determine the " "process using increased memory. As an immediate possible solution " "please attempt to reseat the line card. If this condition persists " <u>LOGSIDSHTICTION</u>
RSP-3-RESTART	3-Error	NULL	The cBus buffer memory has been reset and reallocated. The exact nature of the problem is described in the error message.	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RSP3SLAVE_NVRAM_BUSY	3-Error	Slave NVRAM is temporarily busy	Another process is temporarily locking the slave config.	-	"Retry the command that caused the error message. If the error message recurs check for other execs via the show users command. If you know that there are no other users locking the slave nvram then contact your technical support representative for assistance."
RSP3SLAVECHANGE	3-Error	Slave changed state from [chars] to [chars]	The slave RSP has undergone a hardware state change. Both the old state and new state are shown. Possible states are nonparticipant slave master unplugged Possible state changes indicated by the above message are any to unplugged unplugged to nonparticipant or slave nonparticipant to slave slave to nonparticipant Any other combination is unexpected.	-	-
RSP3SLAVECOPYFAILED	3-Error	Copy of [chars] failed [chars].		-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RSP-3-SLAVEMASTER	3-Error	Slave stole mastership	The master RSP has detected that the slave RSP configuration was changed from slave to master. The old master RSP will reload and become the slave RSP allowing the new master RSP take over. This behavior indicates a software or hardware error.	-	"Copy the router configuration along with any other relevant information. Copy the error message exactly as it appears on the console or in the system log enter the show tech-support and show logging commands contact your Cisco technical support representative and provide the representative with the gathered information."
RSP-3-XBUFHDR	3-Error	corrupt bufhdr [hec]: [node]x [node]x [node]x [node]x	A miscommunication occurred between the RSP and an IP.	-	"Copy the error message exactly as it appears on the console or in the system log enter the show tech-support and show logging commands contact your Cisco technical support representative and provide the representative with the gathered information."
RSP-4-COOKIE	4-Warning	Corrupt or missing MAC address cookie\n using random base [enet]	This message indicates the part containing the MAC addresses allocated to this chassis could not be accessed or was found to be corrupt either due to a hardware problem or manufacturing problem.	-	"Report this error to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RSP-4-CRASHINFO	4-Warning	Error saving crashinfo for slot [dec]. Reason: [chars]	A VIP crashinfo file has not been saved due to the indicated reason.	rsp	"If the reason indicates <CmdBold>Out of space" "<NoCmdBold> the bootflash may not have sufficient memory " "to save the crashinfo file. Otherwise open a case with " "the Technical Assistance Center via the Internet at " " <a href="http://tools.cisco.com/itd/doc/ciscotool">www.tools.cisco.com</a> " "or contact your Cisco technical support representative " "and provide the representative with the information you " "have gathered. Attach the following information to your " "case in non-zipped plain-text .txt format: the output "
RSP4DCEFSWICHENABLE	4-Warning	DCEF switching should be enabled on member links of [chars]	DCEF should be enabled for Multilink interfaces if required.	-	"Go to the multilink interface configuration mode using the <CmdBold>interface multilink multilink# <noCmdBold> command and then enable DCEF on the interface using <CmdBold> ip route-cache distributed<noCmdBold> as per your requirement"
RSP4EMPTY_VIPBAYS	4-Warning	VIP in slot [dec] was empty and was disabled	The system failed to copy the specified file to the standbyRSP.	rsp	"Ensure that the standby RSP exists and has enoughmemory for the file."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RSP-4-HSA_MEM	4-Warning	size mismatch master [node]B slave [node]B	Memory size mismatch between Master & Slave RSP.	-	"Configure both Master and Slave RSPs to have an equal amount of memory."
RSP-4-HSA_MINMEM	4-Warning	[node]B required for HSA	HSA requires a minimum of 24mb of memory.	-	"Upgrade your system to meet minimum memory requirements for HSA."
RSP-4-RSPDRAM	4-Warning	Insufficient DRAM to adequately run this IOS version. [dec]M is recommended.	The quantity of RSP DRAM is below the recommended amount.	-	"Add DRAM."
RSP-4-SLAVENOUPDATE	4-Warning	Slave configuration not updated for [chars].	The configuration on the slave cannot be synced with the master.	-	"Ensure that 'slave auto-sync config' is configured and that the slave is active"
RSP-4-SLAVETIME	4-Warning	[chars]	Report this error to your technical support representative.	-	-
RSP-5-SLAVEUP	5-Notice	Slave changed to state Running Buffer memory state : [chars]	This is an informational message to indicate that the slave RSP has started running the slave RSP image. This message after the router boots or after the slave reload global configuration command is issued on the master RSP.	-	"No action required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RSP-6-TXSTUCK	6-Information	Txacc of Interface [chars] is at [dec][node]of its txlimit	The specified interface has a low txacc value. This might be a transient condition and harmless if it occurs in periods of high packet traffic. If it occurs more than once in periods of relatively moderate traffic it could indicate a problem Distributed packet switching might be disrupted as a result of this condition.	RSP	"If the message recurs during periods of relatively" "moderate traffic this might indicate disruption" "in distributed packet switching. If such a disruption" "occurs use a <CmdBold>microcode reload<NoCmdBold> to" "recover. Open a case with the Technical Assistance Center" "via the Internet at" <a href="http://www.cisco.com/cgi-bin/stock/ops">www.cisco.com/cgi-bin/stock/ops</a> "or contact your Cisco technical support representative" "and provide the representative with the information you" "have gathered. Attach the following information to your" "case in non-zipped plain-text .txt format: the output"
RSRB3BADVERSIONFST	3-Error	FSTin: [chars]: version mismatch mine [dec] theirs [dec]	The remote end of a direct serial peer is running the wrong version of\n the system software. Either the local end the remote end or both are\n not up to date.	-	"Call your technical support representative for an update."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RSRB-3-BADVERSIONIF	3-Error	IFin: [chars]: version mismatch mine [dec] theirs [dec]	The remote end of a direct serial peer is running the wrong version of the system software. Either the local end the remote end or both are not up to date.	-	"Call your technical support representative for an update."
RSRB-3-BADVERSIONICP	3-Error	[chars]: [dec]/[node] version mismatch mine [dec] theirs [dec]	The remote end of a TCP remote peer is running the wrong version of the system software. Either the local end the remote end or both are not up to date.	-	"Call your technical support representative for an update."
RSRB-3-FSTERR	3-Error	[chars]: [chars]: [node]op [hec] len [dec] trn [dec]	The remote end of a direct serial RSRB connection detected a configuration problem or traffic that is not recognized by the configuration.	-	"Examine the configuration on both sides of the serial connection for possible problems. Examine the traffic being offered for propagation with respect to the configuration. The destination target ring is denoted by the value of trn."
RSRB-3-HDRNOVRP	3-Error	Peer [node]HDR no vrp	An internal software error occurred.	-	"If any of these messages recur call your technical support representative for assistance."
RSRB-3-HDRVRP	3-Error	Peer [dec]/[node]HDR vrp state wrong [dec]	An internal software error occurred.	-	"If any of these messages recur call your technical support representative for assistance."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RSRB-3-IFERR	3-Error	[chars]: [chars]: [chars] op [hec] len [dec] trn [dec]	The remote end of a direct serial RSRB connection detected a\n\ configuration problem or traffic that is not recognized by the\n\ configuration.	-	"Examine the configuration on both sides of the serial connection for\n\ possible problems. Examine the traffic being offered for propagation\n\ with respect to the configuration. The destination target ring is\n\ denoted by the value of trn."
RSRB-3-NOMEMORY	3-Error	Unit [dec] no memory for [chars]	The requested operation could not be accomplished because of a low\n\ memory condition.	-	"Reduce other system activity to ease memory demands. If conditions\n\ warrant upgrade to a larger memory configuration."
RSRB-3-NOTREM	3-Error	Null idb and not remote	An internal software error occurred.	-	"If any of these messages recur call your technical support\n\ representative for assistance."
RSRB-3-SENDPUNTFST	3-Error	[chars]: sent [chars] to [chars]	The local end of a direct serial RSRB connection detected a\n\ configuration problem or traffic that is not recognized by the\n\ configuration.	-	"Examine the configuration on both sides of the serial connection for\n\ possible problems. Examine the traffic being offered for propagation\n\ with respect to the configuration."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RSRB-3-SENDPUNTIF	3-Error	[chars]: sent [chars] to [chars]	The local end of a direct serial RSRB connection detected a\n configuration problem or traffic that is not recognized by the\n configuration.	-	"Examine the configuration on both sides of the serial connection for\n possible problems. Examine the traffic being offered for propagation\n with respect to the configuration."
RSRB-4-BADLEN	4-Warning	Peer [chars] [chars] bad length [dec] trn [dec]	An internal software error occurred.	-	"If either message recurs call your technical support representative\n for assistance."
RSRB-4-BADLENIP	4-Warning	Peer [dec]/[node][chars] bad length [dec] trn [dec]	An internal software error occurred.	-	"If either message recurs call your technical support representative\n for assistance."
RSRB-4-BADVRE	4-Warning	Bad vre type	An internal software error occurred.	-	"If any of these messages recur call your technical support\n representative for assistance."
RSRB-4-CONIPST	4-Warning	Peer [dec]/[node]CONN illegal state [dec]	An internal software error occurred.	-	"If any of these messages recur call your technical support\n representative for assistance."
RSRB4CONNILLSTATE	4-Warning	Peer [chars] CONN illegal state [dec]	An internal software error occurred.	-	"If any of these messages recur call your technical support\n representative for assistance."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RSRB-4-CONNSTAT	4-Warning	Peer [chars] IFin bad connection state [dec]	An internal software error occurred.	-	"If any of these messages recur call your technical support\n\n representative for assistance."
RSRB-4-HDRRECV	4-Warning	Peer [dec]/[node]HDR recv state invalid not empty [dec]	An internal software error occurred.	-	"If any of these messages recur call your technical support\n\n representative for assistance."
RSRB-4-ILLPEER	4-Warning	Peer [chars] [[node]8x] illegal state [dec]	An internal software error occurred.	-	"If either of these messages recur call your technical support\n\n representative for assistance."
RSRB-4-LOCAL	4-Warning	Unit [dec] local/vring set simultaneously vrn [dec]	An internal software error occurred.	-	"If either of these messages recur call your technical support\n\n representative for assistance."
RSRB-4-OPTNULL	4-Warning	Remopened and t NULL	An internal software error occurred.	-	"If any of these messages recur call your technical support\n\n representative for assistance."
RSRB-4-PEERSTAT	4-Warning	Peer [chars] wrong state [dec]	An internal software error occurred.	-	"If any of these messages recur call your technical support\n\n representative for assistance."
RSRB-4-RNGXFAIL	4-Warning	Ring exchange failure resetting peer: [chars]	The RSRB peer initiation logic failed due to a memory shortage or\n\n congestion condition.	-	"The problem should clear and the peers should re-open without operator\n\n intervention."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RSVP_SYNC_ISSU2GETBUFR	2-Critical	RSVP_SYNC ISSU client failed to get buffer for message. Error: [dec] [chars]	The RSVP_SYNC ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	rsvp-sync	"show logging and show checkpoint client"
RSVP_SYNC_ISSU2INIT	2-Critical	RSVP_SYNC ISSU client initialization failed to [chars]. Error: [dec] [chars]	The RSVP_SYNC ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	rsvp-sync	LOG_STD_ACTION
RSVP_SYNC_ISSU2NEGOT	2-Critical	RSVP_SYNC ISSU client failed to send negotiation message. Error: [dec] [chars]	The RSVP_SYNC ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	rsvp-sync	"show logging and show checkpoint client"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>RSVP_SYNC_ISSU_NGO</del>	2-Critical	RSVP_SYNC ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The RSVP_SYNC ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	rsvp-sync	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>RSVP_SYNC_ISSU_NREG</del>	2-Critical	RSVP_SYNC ISSU client failed to register session information. Error: [dec] [chars]	The RSVP_SYNC ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	rsvp-sync	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>RSVP_SYNC_ISSU_CAPNADSE</del>	3-Error	RSVP_SYNC ISSU client capability list is empty.	The RSVP_SYNC ISSU client capability exchange list size is invalid.	rsvp-sync	"show issu capability entires <Client_ID>"
<del>RSVP_SYNC_ISSU_CAPINCMPBE</del>	3-Error	RSVP_SYNC ISSU client capability exchange result incompatible.	The RSVP_SYNC ISSU client capability exchange have negotiated as incompatible with the peer.	rsvp-sync	"show issu negotiated capability <Session_ID>"
<del>RSVP_SYNC_ISSU_VALIDSESSN</del>	3-Error	RSVP_SYNC ISSU client does not have a valid registered session.	The RSVP_SYNC ISSU client does not have a valid registered session.	rsvp-sync	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>RSVP_SYNC_ISSU_MVPR</del>	3-Error	'Message Type [dec]' is not supported by RSVP_SYNC ISSU client at peer	The RSVP_SYNC ISSU client at the peer supervisor is not compatible for this message type. The RSVP_SYNC client will be marked as incompatible with the peer.	rsvp-sync	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>RSVP_SYNC_ISSU_MGNOCK</del>	3-Error	RSVP_SYNC ISSU client 'Message Type [dec]' is not compatible	The RSVP_SYNC ISSU client received an incompatible message from the peer device. The message cannot be processed.	rsvp-sync	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>RSVP_SYNC_ISSU_MGSE</del>	3-Error	RSVP_SYNC ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The RSVP_SYNC ISSU client failed to calculate the MTU for the specified message. The RSVP_SYNC ISSU client is not able to send the message to the standby device.	rsvp-sync	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>RSVP_SYNC_ISSU_MGRV</del>	3-Error	RSVP_SYNC ISSU client failed to unregister session information. Error: [dec] [chars]	The RSVP_SYNC ISSU client failed to unregister session information.	rsvp-sync	"show issu session <client_id> and " "show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RSVP_SYNC_ISSU	3-Error	RSVP_SYNC ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The RSVP_SYNC ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the RSVP_SYNC state between the active device and the standby device is not identical.	rsvp-sync	"show issu session <client_id> and " "show issu negotiated version <session_id>"
RSVP_AUTH_KEYS	1-Alert	No valid keys left for %i	The router attempted to use a key in an RSVP key chain but discovered that all the keys in the chain have expired and no other per-neighbor or per-interface keys are available for the specified neighbor. The router will continue to use the last key in the chain rather than revert to an unauthentication condition. However the specified neighbor router may start discarding RSVP messages at that point and reservations with that neighbor may eventually time out.	rsvp	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>RSVP</del> RSVP_KEY_CHAIN_EXPIRED	2-Critical	All the keys in chain [chars] have expired - please update the key chain now	The router attempted to use a key in an RSVP key chain but discovered that all the keys in the chain have expired. The router will attempt to find another suitable key. If no other suitable per-neighbor key can be found the router will attempt to use key chain configured for [chars]. <del>to find another suitable per-neighbor key can be found the router will attempt to use key chain configured for [chars].</del> Update the key chain by updating the text and expiration time	-	-
RSVPBADMSG_TIMER	3-Error	Inconsistent RSVP reliable message timer	An error was encountered during validation of the objects in an RSVP message received by the router.	rsvp	LOG_BAD_RSVP_MESSAGE_ACTION LOG_SID_RSVP_ACTION
<del>RSVP</del> RSVP_CHALLENGE_FAILED	3-Error	[chars] message from [node]discarded - challenge failed for key ID [node]	The router sent an RSVP message to challenge the untrusted source to compute a secure hash on a random piece of data and return the hash with the same data but the source did not return the expected data. RSVP discarded the response because the untrusted source may be unsuccessfully attempting an RSVP challenge response replay attack.	rsvp	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>RSVP</del> RSVP	3-Error	[chars] message from [node]discarded - incorrect message digest	The router received an RSVP message that contained a different secure\n\ hash from the one computed by the router. RSVP discarded the message\n\ because the message may have come from an untrusted source.	rsvp	"Check the configuration on the router and the sending system to make\n\ sure they are using the correct security key and secure hash algorithm."
<del>RSVP</del> RSVP	3-Error	[chars] message from [node]discarded - authentication seq #[node]u is a duplicate	The router received an RSVP message with an authentication sequence\n\ number that has already been seen. RSVP discarded the message because an\n\ untrusted source may be unsuccessfully attempting an RSVP message\n\ from [node]u. If you can verify that the source is trusted	-	-
<del>RSVP</del> RSVP	3-Error	[chars] message from [node]discarded: no security association for [node]- no RSVP security key configured or no memory left.	The router received an RSVP message that contained a secure hash but\n\ dropped the message because the router was not able to create a security\n\ association for the sending system.	rsvp	"Check the configuration on the router to make sure that RSVP has access\n\ to a security key for the sending system. If such a key is configured\n\ then check to see if the router has run out of memory."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>RSVP</del> <u>RSVP</u> <del>CRD</del> <u>CRD</u> <del>FWN</del>	3-Error	[chars] message from [node]discarded - seq #[node]u outside authentication window	The router received an RSVP message whose authentication sequence number\n\n is less than the lower limit of the out-of-order window. RSVP discarded\n\n the message because an untrusted source may be\n\n <del>using the command</del> using the command\n\n It is possible that a trusted source is sending a burst of reordered\n\n RSVP messages that is too large for the authentication window size. If\n\n you can verify that the source is trusted and its messages are being sent\n\n in large reordered bursts	-	-
<del>RSVP</del> <u>RSVP</u> <del>CHKSUM</del>	3-Error	RSVP Message had a bad checksum: [dec] foo: [dec]	The router received an RSVP message with the checksum field incorrectly\n\n set. Bad checksums would most likely be caused by packet corruption\n\n\n\n outside RSVP. Be aware that corruption reported by RSVP might also be\n\n\n affecting other protocols on the router and might explain other\n\n\n unexpected non-RSVP protocol behavior. Please attempt to track down the\n\n\n source of the corruption.	rsvp	<u>LOG_BAD_RSVP_MSG_ACTION</u> <u>LOG_SID_RSVP_ACTION</u>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RSVP-3-ERR-LEN	3-Error	Received a bad RSVP message num objs: [dec] obj len: [dec] msg_len: [dec]	An error was encountered during validation of the objects in an RSVP \n\n message received by the router. The number of objects in the RSVP message \n\n was found to be greater than the maximum expected number or the size of\n\n an object was found to be smaller than the minimum expected size.	rsvp	LOG_BAD_RSVP_MSG_ACTION LOG_SID_RSVP_ACTION
RSVP-3-ERR-TYPE	3-Error	RSVP Message had a bad type: [dec]	The router received an incorrect RSVP message.	rsvp	"Copy the error message exactly as it appears on the console\n\n or in the system log. Issue the <CmdBold>show tech-support rsvp\n\n <NoCmdBold> command to gather data which may help identify the\n\n nature of the error. Then send this information to your Cisco\n\n technical support representative."
RSVP-3-ERR-VER	3-Error	RSVP Message had a bad version: [dec]	The router received an RSVP message with the version field set to an\n\n unexpected value.	rsvp	LOG_BAD_RSVP_MSG_ACTION LOG_SID_RSVP_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RSVP-3-CONSISTENCY	3-Error	[chars]: [chars] [chars] [chars]	An action attempted by the rsvp implementation encountered an unexpected condition	rsvp	"Copy the error message exactly as it appears on the console or in the system log. Issue the <b>show tech-support rsvp</b> command to gather data which may help identify the nature of the error. Then send this information to your Cisco technical support representative."
RSVP-3-IP_HDR	3-Error	[node]x [node]x [node]x [node]x [node]x [node]x [node]x [node]x	This is an auxiliary message to several packet-related messages. It displays the contents of 8 32-bit words immediately following the start of the IPv4/v6 header in hex format. To decode the information in the IPv4 and IPv6 headers please refer to RFCs 791 and 2460.	rsvp	"Decode the information in the IPv4 and IPv6 headers to determine the source of the RSVP message."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RSVP-3-MSG_1	3-Error	[node]x [node]x [node]x [node]x [node]x [node]x [node]x [node]x	This is an auxiliary message to several packet-related messages. It displays the contents of the first 8 32-bit words immediately following the start of the RSVP header in hex format. To decode the information in the RSVP header please refer to RFC 2205.	rsvp	"If you need additional information about the packet then turn on <CmdBold>debug ip rsvp dump-messages <msg type> [hex]<NoCmdBold> and try to capture the bad message. If you use the hex version of this command you can convert it to pcap format with the offline tool text2pcap and then view the contents with another offline tool such as ethereal."
RSVP-3-MSG_2	3-Error	[node]x [node]x [node]x [node]x [node]x [node]x [node]x [node]x	This is an auxiliary message to several packet-related messages. It displays the contents of the next 8 32-bit words following those that are printed by the MSG_1 message above in hex format. To decode the information in these 32-bit words please refer to RFC 2205.	rsvp	"If you need additional information about the packet then turn on <CmdBold>debug ip rsvp dump-messages <msg type> [hex]<NoCmdBold> and try to capture the bad message. If you use the hex version of this command you can convert it to pcap format with the offline tool text2pcap and then view the contents with another offline tool such as ethereal."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RSVP/RSVP/RECOVERY	3-Error	RSVP calculated Recovery Time is longer than TE Rewrite Hold-Time registered with LSD. Some LSPs may not be recovered.	TE registered a maximum cutover time with the LSD that is less than the time it may actually take to recover all LSPs. As a result more than usual traffic loss may occur on some LSPs during recovery	rsvp	"Make note of the number of Checkpointed LSPs in the RSVP HA database by issuing the command <b>show ip rsvp high-availability database internal</b> . This number likely exceeds the hard defined limit of the number of recoverable LSPs. Provide this information to Cisco technical support representative."
RSVP/RSVP/RECOVERY	3-Error	No response to challenge issued to [node]for key ID [node]	The router sent an RSVP message to challenge the untrusted source to compute a secure hash on a random piece of data and return the hash with the same data but the source did not reply. The source may have crashed or lost its network connection. However it is also possible that the source was unsuccessfully attempting to reply. <del>reply command</del> If you can verify that the source is trusted	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>RSVP</del> RSVP_MISMATCH	3-Error	[chars] message from [node]discarded - authentication algorithm mismatch	The router received an RSVP message from a source that required\n\n authentication but the received message was using the wrong\n\n authentication algorithm.	rsvp	"Issue a <CmdBold>show ip rsvp authentication detail <source><NoCmdBold>\n\n command on the router to display the expected algorithm type. Then find\n\n the source and change its configuration to match."
<del>RSVP</del> RSVP_DUPLICATE_KEY	4-Warning	Key chains [chars] and [chars] contain duplicate key ID %u	An attempt is being made to add a new key identifier to a key chain in\n\n the router configuration but RSVP detected that this identifier is found\n\n in another key chain already assigned to RSVP. Since key identifiers must\n\n be unique across all the key chains used by RSVP RSVP will not use the\n\n keys with this identifier in all such key chains. This could cause RSVP\n\n authentication to fail in some cases.	rsvp	"Update the listed key chains so they use different key identifiers."
<del>RSVP</del> RSVP_CLEAR_COUNTERS	5-Notice	Clear RSVP message counters by [chars]	The RSVP message counters have been cleared	rsvp	LOG_SID_NO_ACTION
<del>RSVP</del> RSVP_NO_MATCH_DHP	5-Notice	Received PATH [node][node]>[node][node]-	The interface id in the HOP object does not match any of this node's interfaces.	rsvp	"Verify the configuration."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RSVP/TKY/ACL/CHG	5-Notice	Key chain [chars] [chars] for [node]because ACL \[chars]\ [chars]		rsvp	"If the ACL change unexpectedly caused authentication to be disabled\n or enabled for one or more RSVP neighbors undo the ACL change so that\n RSVP authentication is not impacted."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
			<p>The ACL specified in the message text associates the key chain specified in the message text with a set of RSVP neighbors. RSVP uses the specified key chain to authenticate each RSVP message exchanged with that set of RSVP neighbors after the association is configured. Subsequently the specified ACL has been reconfigured such that the key chain association is no longer valid for one or more RSVP neighbors in the set. This causes RSVP to search the configuration for another suitable key chain to use with those neighbors. If no such key chain is found RSVP will no longer be able to provide authentication for messages exchanged with those RSVP neighbors. This causes RSVP to discard RSVP messages from that set of neighbors. Because this may ultimately lead to loss of RSVP functionality with those neighbors RSVP generates this system message.</p>		



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
			This system\n\n message may also be generated if the ACL is subsequently changed so that\n\n it re-associates RSVP neighbors with the specified key chain. If RSVP is\n\n not using another key chain for the set of RSVP neighbors specified by\n\n the ACL RSVP will begin using the specified key chain to exchange\n\n authenticated RSVP messages with that set of RSVP neighbors potentially\n\n restoring RSVP functionality with those neighbors.		
RSMPT_HONKEY_EXPI	5-Notice	Key ID [node]in chain [chars] has expired	-	-	-
RTMGR-3-GENERAL	3-Error	[chars]	An internal software error occurred.	RIMCRDISCOMPONENT	LOG_SID_RECUR_ACTION
RTMGR-3-GENERAL	3-Error	[chars]	An internal software error occurred.	RIMCRDISCOMPONENT	LOG_SID_RECUR_ACTION
RIMCR3COAFENABERR	3-Error	Failed to enable AF base topology [chars] error [chars]	An internal software error occurred.	RIMCRDISCOMPONENT	LOG_SID_RECUR_ACTION
RIMCR3COAFENABERR	3-Error	Failed to enable AF base topology [chars] error [chars]	An internal software error occurred.	RIMCRDISCOMPONENT	LOG_SID_RECUR_ACTION
RIMGR3TOPO_AF_CIX	3-Error	Topology address-family [chars] context block is NULL.	An internal software error occurred.	RIMCRDISCOMPONENT	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RIMGR3TOPO_AFI_CIX	3-Error	Topology address-family [chars] context block is NULL.	An internal software error occurred.	RIMGRDDISCOMPONENT	LOG_SID_RECUR_ACTION
RIMGR3TOPO_CACHEDIRR	3-Error	[chars]	cached topo entry creation failure	RIMGRDDISCOMPONENT	LOG_STD_ACTION
RIMGR3TOPO_CACHEDIRR	3-Error	[chars]	cached topo entry creation failure	RIMGRDDISCOMPONENT	LOG_STD_ACTION
RIMGR3TOPO_CACHEERRR	3-Error	[chars]	cached topo failure	RIMGRDDISCOMPONENT	LOG_STD_ACTION
RIMGR3TOPO_CACHEERRR	3-Error	[chars]	cached topo failure	RIMGRDDISCOMPONENT	LOG_STD_ACTION
RIMGR3TOPO_CACHENERRR	3-Error	[chars]	cached topo initialization failure	RIMGRDDISCOMPONENT	LOG_STD_ACTION
RIMGR3TOPO_CACHENERRR	3-Error	[chars]	cached topo initialization failure	RIMGRDDISCOMPONENT	LOG_STD_ACTION
RIMGR3TOPO_HALOCKMFTD	3-Error	Acquired a HA lock on an iVRF topology[chars]	Topology HA lock shouldn't be applied in an iVRF topology	RIMGRDDISCOMPONENT	LOG_STD_ACTION
RIMGR3TOPO_HALOCKMFTD	3-Error	Acquired a HA lock on an iVRF topology[chars]	Topology HA lock shouldn't be applied in an iVRF topology	RIMGRDDISCOMPONENT	LOG_STD_ACTION
RIMGR3TOPO_NIF_CIX	3-Error	Interface [chars] address-family [chars] topology context is NULL or the function [chars] is not set	An internal software error occurred.	RIMGRDDISCOMPONENT	LOG_SID_RECUR_ACTION
RIMGR3TOPO_NIF_CIX	3-Error	Interface [chars] address-family [chars] topology context is NULL or the function [chars] is not set	An internal software error occurred.	RIMGRDDISCOMPONENT	LOG_SID_RECUR_ACTION
RIMGR3TOPO_NIFN_VRFD	3-Error	Interface [chars] with invalid vrfid 0x[hec]	An internal software error occurred.	RIMGRDDISCOMPONENT	LOG_SID_RECUR_ACTION
RIMGR3TOPO_NIFN_VRFD	3-Error	Interface [chars] with invalid vrfid 0x[hec]	An internal software error occurred.	RIMGRDDISCOMPONENT	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RIMCR3COMCASBSERR	3-Error	Failed to create the base mcast topology in vrf [chars] with error [chars]	An internal software error occurred.	RIMCRDISCOMPONENT	LOG_SID_RECUR_ACTION
RIMCR3COMCASBSERR	3-Error	Failed to create the base mcast topology in vrf [chars] with error [chars]	An internal software error occurred.	RIMCRDISCOMPONENT	LOG_SID_RECUR_ACTION
RIMCR3COMCRHCOCNERR	3-Error	Failed to get lock count for topology[chars]	Topology lock manager get lock count failure	RIMCRDISCOMPONENT	LOG_STD_ACTION
RIMCR3COMCRHCOCNERR	3-Error	Failed to get lock count for topology[chars]	Topology lock manager get lock count failure	RIMCRDISCOMPONENT	LOG_STD_ACTION
RIMCR3COMCRMRNERR	3-Error	[chars] manager init failure	Topology lock manager initialization failure	RIMCRDISCOMPONENT	LOG_STD_ACTION
RIMCR3COMCRMRNERR	3-Error	[chars] manager init failure	Topology lock manager initialization failure	RIMCRDISCOMPONENT	LOG_STD_ACTION
RIMCR3COMCRPESNERR	3-Error	Topology process init failed due to [chars]	Topology process initialization failed	RIMCRDISCOMPONENT	LOG_STD_ACTION
RIMCR3COMCRPESNERR	3-Error	Topology process init failed due to [chars]	Topology process initialization failed	RIMCRDISCOMPONENT	LOG_STD_ACTION
RIMCR3COMCRSUBDEERR	3-Error	Unexpected transition from parser submode '[chars]'	An error occurred while parsing the topology command	RIMCRDISCOMPONENT	LOG_STD_ACTION
RIMCR3COMCRSUBDEERR	3-Error	Unexpected transition from parser submode '[chars]'	An error occurred while parsing the topology command	RIMCRDISCOMPONENT	LOG_STD_ACTION
RIMCR3COMCR3CFSYNERR	3-Error	Failed to duplicate active topology on standby rc=[dec] id [hec] [chars]	An internal software error occurred.	RIMCRDISCOMPONENT	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RIMGR3-TOPO_SYNC_ERR	3-Error	Failed to duplicate active topology on standby rc=[dec] id [hec] [chars]	An internal software error occurred.	RIMGRDDISCOMPONENT	LOG_SID_RECUR_ACTION
RIMGR3-TOPO_UNSUPPORTED_AFI	3-Error	Attempt to enable unsupported AFI 0x[hex]	An internal software error occurred.	RIMGRDDISCOMPONENT	LOG_SID_RECUR_ACTION
RIMGR3-TOPO_UNSUPPORTED_AFI	3-Error	Attempt to enable unsupported AFI 0x[hex]	An internal software error occurred.	RIMGRDDISCOMPONENT	LOG_SID_RECUR_ACTION
RIMGR3-TOPO_UNSUPPORTED_AFI	3-Error	Topology API [chars] is unsupported due to [chars]	Topology API is unavailable	RIMGRDDISCOMPONENT	LOG_STD_ACTION
RIMGR3-TOPO_UNSUPPORTED_AFI	3-Error	Topology API [chars] is unsupported due to [chars]	Topology API is unavailable	RIMGRDDISCOMPONENT	LOG_STD_ACTION
RIMGR3-TOPO_VRF_ERR	3-Error	Topology [chars] address-family [chars] has no VRF entry	An internal software error occurred.	RIMGRDDISCOMPONENT	LOG_SID_RECUR_ACTION
RIMGR3-TOPO_VRF_ERR	3-Error	Topology [chars] address-family [chars] has no VRF entry	An internal software error occurred.	RIMGRDDISCOMPONENT	LOG_SID_RECUR_ACTION
RIMGR3-UNLOCK_ERR	3-Error	Attempt to unlock active topology '[chars]' in VRF [chars] [chars]	An internal software error occurred.	RIMGRDDISCOMPONENT	LOG_SID_RECUR_ACTION
RIMGR3-UNLOCK_ERR	3-Error	Attempt to unlock active topology '[chars]' in VRF [chars] [chars]	An internal software error occurred.	RIMGRDDISCOMPONENT	LOG_SID_RECUR_ACTION
RTMGR-3-VRF_ERR	3-Error	Topology VRF [chars] creation error	An internal software error occurred.	RIMGRDDISCOMPONENT	LOG_SID_RECUR_ACTION
RTMGR-3-VRF_ERR	3-Error	Topology VRF [chars] creation error	An internal software error occurred.	RIMGRDDISCOMPONENT	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RTREE-3-ALLOC_FAIL	3-Error	aux [hec]	A Radix Tree request has caused an out of memory condition	cpp-ucode	LOG_STD_ACTION
RSAPCHUNKCREATEFL	3-Error	-	Chunk create failed. RTSP ALG will not be able to finish initialization.	cpp-ucode	LOG_STD_ACTION
RSAPCREATE_CALLBACK	3-Error	-	Missing L7 data during imprecise channel creation callback.	cpp-ucode	LOG_STD_ACTION
RSAPCOMABLE_HA_LEN	3-Error	rcvd:[hec] expect:[hec]	Incompatible HA Message Length. RTSP ALG will reject sync data.	cpp-ucode	LOG_STD_ACTION
RSAPCOMABLE_HA_VER	3-Error	rcvd:[hec] expect:[hec]	Incompatible HA Version. RTSP ALG will reject sync data.	cpp-ucode	LOG_STD_ACTION
RSAPGNORCII_HA_MAGIC	3-Error	rcvd:[hec] expect:[hec]	Incorrect HA MAGIC. RTSP ALG will reject sync data.	cpp-ucode	LOG_STD_ACTION
RSAPGNAD_HA_OPCODE	3-Error	rcvd:[hec] expect:[hec]	Invalid HA opcode. RTSP ALG will reject sync data.	cpp-ucode	LOG_STD_ACTION
RSAPG7DATA_CREATE_ERROR	3-Error	-	Error during L7 data creation.	cpp-ucode	LOG_STD_ACTION
RSAPGWRITEBACK_ERROR	3-Error	-	Error during writeback.	cpp-ucode	LOG_STD_ACTION
RTT-3-AUTO	3-Error	Error: [chars]	An error occurred while generating IPSLAs Auto operation.	rsps-time-rptr	"Please check the configuration and try again"
RTT-3-AUTO	3-Error	Error: [chars]	An error occurred while generating IPSLAs Auto operation.	rsps-time-rptr	"Please check the configuration and try again"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
RIT-3-EPNOTIFYFAILED	3-Error	event type = [chars] client = [chars] reason = [chars]	Notification for specified type to specified IPSLAs Event Publisher client failed	rsps-time-rptr	"This maybe transient system error and the "notification may work next time. Take the action " " as suggested by the identified client for loss " " of notification."
RIT-3-EPNOTIFYFAILED	3-Error	event type = [chars] client = [chars] reason = [chars]	Notification for specified type to specified IPSLAs Event Publisher client failed	rsps-time-rptr	"This maybe transient system error and the "notification may work next time. Take the action " " as suggested by the identified client for loss " " of notification."
RIT-3-EPSTARTERROR	3-Error	Failed to start IPSLAs Event Publisher	IPSLAs is unable to start a new process for Event Publisher. Reaction Alert notifications will not work.	rsps-time-rptr	<u>LOG_SID_REDUCE_ACTION</u>
RIT-3-EPSTARTERROR	3-Error	Failed to start IPSLAs Event Publisher	IPSLAs is unable to start a new process for Event Publisher. Reaction Alert notifications will not work.	rsps-time-rptr	<u>LOG_SID_REDUCE_ACTION</u>
RIT-3-EPURFTYPE	3-Error	IPSLAs EventPublisher: Unknown reaction filter type for client [chars]	IPSLAs Event Publisher encountered unknown filter type while sending the reaction alert to specified client Reaction Alert notifications may continue to work for same and other clients.	rsps-time-rptr	<u>LOG_SID_REDUCE_ACTION</u>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RTT-3-EPURFTYPE	3-Error	IPSLAs EventPublisher: Unknown reaction filter type for client [chars]	IPSLAs Event Publisher encountered unknown filter type while sending the reaction alert to specified client Reaction Alert notifications may continue to work for same and other clients.	rsps-time-rptr	LOG_SID_REDUCE_ACTION
RTT-3-IPSLA_AQM	3-Error	[chars]: [chars]	This message indicates software error in IPSLA auto qos monitor feature.	rsps_time_rptr	"Contact your Cisco technical support representative."
RTT-3-IPSLA_AQM	3-Error	[chars]: [chars]	This message indicates software error in IPSLA auto qos monitor feature.	rsps_time_rptr	"Contact your Cisco technical support representative."
RTT-3-IPSLAINITFAIL	3-Error	IP SLAs: Failed to initialize IP SLAs functionality will not work	IP SLAs failed to initialize. This condition is caused by either a timer wheel timer functionality init that failed or a process that could not be created. A likely cause of this condition is that sufficient memory is not available to complete the task.	rsps-time-rptr	"Search for resolved software issues using the Bug " "Toolkit at " <a href="http://www.cisco.com/cgi-bin/tablelookup.pl?table=&amp;table=bug">http://www.cisco.com/cgi-bin/tablelookup.pl?table=&amp;table=bug</a> LOG_SID_REDUCE_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RIT3IPSLANINITIALIZEFAIL	3-Error	IP SLAs: Failed to initialize IP SLAs functionality will not work	IP SLAs failed to initialize. This condition is caused by either a timer wheel timer functionality init that failed or a process that could not be created. A likely cause of this condition is that sufficient memory is not available to complete the task.	rsps-time-rptr	"Search for resolved software issues using the Bug " "Toolkit at " " <a href="http://www.cisco.com/cgi-bin/tablelookup.pl?table=/table/log_sid_reduce_action">http://www.cisco.com/cgi-bin/tablelookup.pl?table=/table/log_sid_reduce_action</a> "
RIT3IPSLANEGATIVEVALUE	3-Error	IP SLAs[dec]: Negative Value for [chars]	IP SLAs statistics has generated an error message.	rsps-time-rptr	"Contact your Cisco technical support " "representative"
RIT3IPSLANEGATIVEVALUE	3-Error	IP SLAs[dec]: Negative Value for [chars]	IP SLAs statistics has generated an error message.	rsps-time-rptr	"Contact your Cisco technical support " "representative"
RIT3IPSLANOPROCESS	3-Error	IP SLAs: Cannot create a new process	IP SLAs is unable to start a new process and may not be running.	rsps-time-rptr	LOG_SID_REDUCE_ACTION
RIT3IPSLANOPROCESS	3-Error	IP SLAs: Cannot create a new process	IP SLAs is unable to start a new process and may not be running.	rsps-time-rptr	LOG_SID_REDUCE_ACTION
RIT3IPSLARCBNOIFOUND	3-Error	IP SLAs: Error deleting the probe	Trying to delete a probe which does not exist	rsps-time-rptr	"Contact your Cisco technical support " "representative"
RIT3IPSLARCBNOIFOUND	3-Error	IP SLAs: Error deleting the probe	Trying to delete a probe which does not exist	rsps-time-rptr	"Contact your Cisco technical support " "representative"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IPSLA</del> RESPICRNUSE	3-Error	IP SLA Responder: tcp: [chars] - [dec] Port already in use.	IP SLA Responder is unable to bind the socket as the port specified in the port enable control message is already in use by other application.	sla	"This message indicates that the port configured." "in the udp-jitter operation targeting this Responder is already in use " "and it is recommended to reconfigure the tcp operation with a " "different port number."
<del>IPSLA</del> RESPICRNUSE	3-Error	IP SLA Responder: tcp: [chars] - [dec] Port already in use.	IP SLA Responder is unable to bind the socket as the port specified in the port enable control message is already in use by other application.	sla	"This message indicates that the port configured." "in the udp-jitter operation targeting this Responder is already in use " "and it is recommended to reconfigure the tcp operation with a " "different port number."
<del>IPSLA</del> RESPUDRNUSE	3-Error	IP SLA Responder: udp: [chars] - [dec] Port already in use.	IP SLA Responder is unable to bind the socket as the port specified in the port enable control message is already in use by other application.	sla	"This message indicates that the port configured." "in the udp-jitter operation targeting this Responder is already in use " "and it is recommended to reconfigure the udp operation with a " "different port number."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RT3SLASLPDRINUSE	3-Error	IP SLA Responder: udp: [chars] - [dec] Port already in use.	IP SLA Responder is unable to bind the socket as the port specified in the port enable control message is already in use by other application.	sla	"This message indicates that the port configured." "in the udp-jitter operation targetting this Responder is already in use " "and it is recommended to reconfigure the udp operation with a " "different port number."
RT3SLARESEQNIFAL	3-Error	IP SLAs responder initialization failed	The IP SLAs responder initialization failed to initialize event queue. Because of this failure the IP SLAs probes on other routers for which this router acts as responder will not work.	rsps_time_rptr	"Contact your Cisco technical support representative."
RT3SLARESEQNIFAL	3-Error	IP SLAs responder initialization failed	The IP SLAs responder initialization failed to initialize event queue. Because of this failure the IP SLAs probes on other routers for which this router acts as responder will not work.	rsps_time_rptr	"Contact your Cisco technical support representative."
RT3SLARESPWNIFAL	3-Error	IP SLAs responder initialization failed	-	-	-
RT3SLARESPWNIFAL	3-Error	IP SLAs responder initialization failed	-	-	-
RT3SLARIPAPNIFAL	3-Error	IP SLAs rtp operation application process initialization failed	The IP SLAs rtp operation application process failed to initialize. Because of this failure the IP SLAs rtp operations will not work.	rsps_time_rptr	"Contact your Cisco technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RIT3IPSLARIPINITIALED	3-Error	IP SLAs rtp operation application process initialization failed	The IP SLAs rtp operation application process failed to initialize. Because of this failure the IP SLAs rtp operations will not work.	rsps_time_rptr	"Contact your Cisco technical support representative."
RIT3IPSLAITHRESHOLD	3-Error	IP SLAs[dec]: Threshold [chars] for [chars]	This informational message logs threshold violations in the Service Assurance Agent probes. This messages appears when the <CmdBold>ip sla logging trap<NoCmdBold> command is entered	rsps-time-rptr	"If this message is not necessary enter the " "<CmdBold>no ip sla logging trap<NoCmdBold> command to disable " "logging. Otherwise no action is required"
RIT3IPSLAITHRESHOLD	3-Error	IP SLAs[dec]: Threshold [chars] for [chars]	This informational message logs threshold violations in the Service Assurance Agent probes. This messages appears when the <CmdBold>ip sla logging trap<NoCmdBold> command is entered	rsps-time-rptr	"If this message is not necessary enter the " "<CmdBold>no ip sla logging trap<NoCmdBold> command to disable " "logging. Otherwise no action is required"
RIT3IPSLATWINTIFAIL	3-Error	IP SLAs: Generic Timer wheel timer functionality failed to initialize	IP SLAs could not initialize the timer wheel.	rsps-time-rptr	"Search for resolved software issues using the Bug " "Toolkit at " " <a href="http://www.cisco.com/cgi-bin/tabletools/LOGSIDREUC ACTION">http://www.cisco.com/cgi-bin/tabletools/LOGSIDREUC ACTION</a> "
RIT3IPSLATWINTIFAIL	3-Error	IP SLAs: Generic Timer wheel timer functionality failed to initialize	IP SLAs could not initialize the timer wheel.	rsps-time-rptr	"Search for resolved software issues using the Bug " "Toolkit at " " <a href="http://www.cisco.com/cgi-bin/tabletools/LOGSIDREUC ACTION">http://www.cisco.com/cgi-bin/tabletools/LOGSIDREUC ACTION</a> "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RTT-3-REACNOIFY-ALD	3-Error	entry number = [dec] reason = [chars]	IPSLAs Reaction condition was met for specified operation and one or more IPSLAs Event Publisher clients have registered interest for this condition but the notification for this occurrence failed.	rsps-time-rptr	"These maybe transient system errors and the " "notification may work next time. Use show ip sla" " event-publisher command to see which clients are " " registered and take action recommended by them."
RTT-3-REACNOIFY-ALD	3-Error	entry number = [dec] reason = [chars]	IPSLAs Reaction condition was met for specified operation and one or more IPSLAs Event Publisher clients have registered interest for this condition but the notification for this occurrence failed.	rsps-time-rptr	"These maybe transient system errors and the " "notification may work next time. Use show ip sla" " event-publisher command to see which clients are " " registered and take action recommended by them."
RTT-3-SAAMPLS	3-Error	IP SLA Monitor[dec]: MPLS [chars] Probe [chars] [chars] for destination-address	This informational message logs violations in the Service Assurance Agent probes. This messages appears when the <CmdBold>ip sla logging trap<NoCmdBold> command is entered	rsps_time_rptr	"If this message is not necessary enter the " "<CmdBold>no ip sla logging trap<NoCmdBold> command to disable logging. " "Otherwise no action is required"
RTT-3-SAAMPLS	3-Error	IP SLA Monitor[dec]: MPLS [chars] Probe [chars] [chars] for destination-address	This informational message logs violations in the Service Assurance Agent probes. This messages appears when the <CmdBold>ip sla logging trap<NoCmdBold> command is entered	rsps_time_rptr	"If this message is not necessary enter the " "<CmdBold>no ip sla logging trap<NoCmdBold> command to disable logging. " "Otherwise no action is required"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RIT-3-XOS_XDM_ERR	3-Error	IP SLAs: Cannot create a new xdm instance	IP SLAs is unable to start a new xdm instance and may not be running.	sla	"This message indicates that the system is running "out of xdm instance and the IPSLAs configured after this message "may fail. So do not configure any probe after this syslog"
RIT-3-XOS_XDM_ERR	3-Error	IP SLAs: Cannot create a new xdm instance	IP SLAs is unable to start a new xdm instance and may not be running.	sla	"This message indicates that the system is running "out of xdm instance and the IPSLAs configured after this message "may fail. So do not configure any probe after this syslog"
RTT-4-AUTOAPI	4-Warning	IPSLAs Auto CFG ERR: [chars][chars][chars]	An error occurred while configuring IPSLAs Auto parameters. Some or all of your configurations may not have been unset	rsps-time-rptr	"Please check the configuration and try again"
RTT-4-AUTOAPI	4-Warning	IPSLAs Auto CFG ERR: [chars][chars][chars]	An error occurred while configuring IPSLAs Auto parameters. Some or all of your configurations may not have been unset	rsps-time-rptr	"Please check the configuration and try again"
RIT-4-AUTOAPIOPER	4-Warning	IPSLAs Auto CFG ERR: [chars][chars][dec][chars]	An error occurred while configuring IPSLAs Auto parameters. Some or all of your configurations may not have been unset	rsps-time-rptr	"Please check the configuration and try again"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RTT-4-AUTOAPIOPER	4-Warning	IPSLAs Auto CFG ERR: [chars][chars][dec] [chars]	An error occurred while configuring IPSLAs Auto parameters. Some or all of your configurations may not have been unset	rsps-time-rptr	"Please check the configuration and try again"
RTT-4-AUTOMEM	4-Warning	IPSLAs Auto MEM ERR: [chars][chars] [chars]	IPSLAs Auto feature failed during memory allocation	rsps-time-rptr	"These maybe transient errors please try again"
RTT-4-AUTOMEM	4-Warning	IPSLAs Auto MEM ERR: [chars][chars] [chars]	IPSLAs Auto feature failed during memory allocation	rsps-time-rptr	"These maybe transient errors please try again"
RTT-4-DuplicateEvent	4-Warning	IP SLAs [dec]: Duplicate event received. Event number [dec]	IP SLAs process has received a duplicate event	rsps-time-rptr	"This is only a warning message. If this recurs " "enter the command <CmdBold>show ip sla configuration</CmdBld> and " "copy the output of the command. Copy the message as it appears on " "the console or in the system log contact your Cisco technical " "support representative and provide the representative with the " "gathered information along with information about the application " "that is configuring and polling the Service Assurance Agent probes."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RTT-4-DuplicateEvent	4-Warning	IP SLAs [dec]: Duplicate event received. Event number [dec]	IP SLAs process has received a duplicate event	rsps-time-rptr	"This is only a warning message. If this recurs " "enter the command <CmdBld>show ip sla configuration<NoCmdBld> and " "copy the output of the command. Copy the message as it appears on " "the console or in the system log contact your Cisco technical " "support representative and provide the representative with the " "gathered information along with information about the application " "that is configuring and polling the Service Assurance Agent probes."
RTT-4-EPAPI	4-Warning	IPSLAs EP API: [chars] api failed client = [chars] reason = [chars]	IPSLAs Event Publisher API failed for reason identified	rsps-time-rptr	"The error code is reported to API client. Take " "the action recommended by the client identified."
RTT-4-EPAPI	4-Warning	IPSLAs EP API: [chars] api failed client = [chars] reason = [chars]	IPSLAs Event Publisher API failed for reason identified	rsps-time-rptr	"The error code is reported to API client. Take " "the action recommended by the client identified."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RTT-4-EPINIT	4-Warning	IPSLAs Event Publisher Init Failed. Reason = [chars]	IPSLAs Event Publisher Initialization failed. The system will try to recover by doing the initialization tasks when first client subscribes to IPSLAs events.	rsps-time-rptr	LOG_SID_REDUCE_ACTION
RTT-4-EPINIT	4-Warning	IPSLAs Event Publisher Init Failed. Reason = [chars]	IPSLAs Event Publisher Initialization failed. The system will try to recover by doing the initialization tasks when first client subscribes to IPSLAs events.	rsps-time-rptr	LOG_SID_REDUCE_ACTION
RTT-4-INVALIDSRCIPADDR	4-Warning	Possible invalid src IP address [node]configured.	This message appears when no source IP address is found on the host matching the one specified by the user	rsps_time_rptr	"Unconfigure the probe and reconfigure with " "valid source IP address"
RTT-4-INVALIDSRCIPADDR	4-Warning	Possible invalid src IP address [node]configured.	This message appears when no source IP address is found on the host matching the one specified by the user	rsps_time_rptr	"Unconfigure the probe and reconfigure with " "valid source IP address"
RTT-4-INVALIDSPOKEIPADDR	4-Warning	IP SLAs end point discovery authentication failure for spoke [node]	The IP SLAs responder initialization failed to initialize timerwheel. Because of this failure the IP SLAs probes on other routers for which this router acts as responder will not work.	rsps_time_rptr	"Contact your Cisco technical support representative."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>RT4SLAUCLOCKAUTH</del>	4-Warning	IP SLAs end point discovery authentication failure for spoke [node]	The IP SLAs responder initialization failed to initialize timerwheel. Because of this failure the IP SLAs probes on other routers for which this router acts as responder will not work.	rsps_time_rptr	"Contact your Cisco technical support representative."
<del>RT4SLACLOCKNOISE</del>	4-Warning	IP SLAs Probes could not be	One or more IP SLAs probes could not be scheduled because system clock is not set.	rsps_time_rptr	"Ensure that the system clock is functional by using Network Time " "Protocol or another mechanism."
<del>RT4SLACLOCKNOISE</del>	4-Warning	IP SLAs Probes could not be	One or more IP SLAs probes could not be scheduled because system clock is not set.	rsps_time_rptr	"Ensure that the system clock is functional by using Network Time " "Protocol or another mechanism."
<del>RT4SLAENDONIDRCSER</del>	4-Warning	IP SLAs end point de-registered by hub [node]	-	-	-
<del>RT4SLAENDONIDRCSER</del>	4-Warning	IP SLAs end point de-registered by hub [node]	-	-	-
<del>RT4SLASCHEDCONFAL</del>	4-Warning	IP SLAs Probe [dec]: [chars]	The IP SLAs probe could not be scheduled. Either the configured starting time has already occurred or the starting time is invalid.	rsps_time_rptr	"Reschedule the failed probe with a valid start time."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RTT-IPSLA-SCHED-CONFAL	4-Warning	IP SLAs Probe [dec]: [chars]	The IP SLAs probe could not be scheduled. Either the configured starting time has already occurred or the starting time is invalid.	rsps_time_rptr	"Reschedule the failed probe with a valid start time."
RTT-4-OPER_CLOSE	4-Warning	condition [chars] entry number = [dec]	This message logs connection loss condition in the IPSLAs operations. This message is enabled when the <CmdBold>ip sla monitor logging trap<NoCmdBold> command is entered	rsps_time_rptr	"Ensure the the destination for the IPSLAs " "operation is reachable. Also ensure that the IPSLAs responder " "operation is configured on the destination. If you do not want " "to log these messages for IPSLA operations enter the " "<CmdBold>no ip sla monitor logging trap<NoCmdBold> command to " "disable logging."
RTT-4-OPER_CLOSE	4-Warning	condition [chars] entry number = [dec]	This message logs connection loss condition in the IPSLAs operations. This message is enabled when the <CmdBold>ip sla monitor logging trap<NoCmdBold> command is entered	rsps_time_rptr	"Ensure the the destination for the IPSLAs " "operation is reachable. Also ensure that the IPSLAs responder " "operation is configured on the destination. If you do not want " "to log these messages for IPSLA operations enter the " "<CmdBold>no ip sla monitor logging trap<NoCmdBold> command to " "disable logging."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RIT4OPER_PROTOERR	4-Warning	Entry number = [dec] Protocol Specific Error [chars] specific code = [dec]	This message logs protocol specific error condition in the IPSLAs operations. This message is enabled when the <CmdBold>ip sla logging traps<NoCmdBold> command is entered	sla	"Ensure that the destination for the IPSLAs " "operation is reachable. Also ensure that the IPSLA responder " "operation is configured on the destination. If you do not want " "to log these messages for IPSLAs operations enter the " "<CmdBold>no ip sla logging traps<NoCmdBold> command to " "disable the logging"
RIT4OPER_PROTOERR	4-Warning	Entry number = [dec] Protocol Specific Error [chars] specific code = [dec]	This message logs protocol specific error condition in the IPSLAs operations. This message is enabled when the <CmdBold>ip sla logging traps<NoCmdBold> command is entered	sla	"Ensure that the destination for the IPSLAs " "operation is reachable. Also ensure that the IPSLA responder " "operation is configured on the destination. If you do not want " "to log these messages for IPSLAs operations enter the " "<CmdBold>no ip sla logging traps<NoCmdBold> command to " "disable the logging"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RIT4-OPER_TIMEOUT	4-Warning	condition [chars] entry number = [dec]	This message logs timeout condition in the IPSLAs operations. This message is enabled when the <CmdBold>ip sla monitor logging trap<NoCmdBold> command is entered	rsps_time_rptr	"Ensure that the destination for the IPSLAs " "operation is reachable. If you do not want to log these messages for " "IPSLAs operations enter the " "<CmdBold>no ip sla monitor logging trap<NoCmdBold> command to " "disable the logging"
RIT4-OPER_TIMEOUT	4-Warning	condition [chars] entry number = [dec]	This message logs timeout condition in the IPSLAs operations. This message is enabled when the <CmdBold>ip sla monitor logging trap<NoCmdBold> command is entered	rsps_time_rptr	"Ensure that the destination for the IPSLAs " "operation is reachable. If you do not want to log these messages for " "IPSLAs operations enter the " "<CmdBold>no ip sla monitor logging trap<NoCmdBold> command to " "disable the logging"
RIT4-REACTIPARIAEVENT	4-Warning	entry number = [dec] missing data = [chars]	IPSLAs Reaction Event is missing some interesting data	rsps-time-rptr	"This could be because of IPSLAs software error. " "Please collect show ip sla config output and " "report issue to TAC"
RIT4-REACTIPARIAEVENT	4-Warning	entry number = [dec] missing data = [chars]	IPSLAs Reaction Event is missing some interesting data	rsps-time-rptr	"This could be because of IPSLAs software error. " "Please collect show ip sla config output and " "report issue to TAC"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>RPLSACRSHEDCNCFAL</del>	4-Warning	Group Schedule Entry [dec]: [chars]	The probes could not be group scheduled. Either the configured starting time has already occurred or the starting time is invalid.	rsps_time_rptr	"Reschedule the group scheduling entry with a valid start time."
<del>RPLSACRSHEDCNCFAL</del>	4-Warning	Group Schedule Entry [dec]: [chars]	The probes could not be group scheduled. Either the configured starting time has already occurred or the starting time is invalid.	rsps_time_rptr	"Reschedule the group scheduling entry with a valid start time."
<del>RPLSASCHEDCNCFAL</del>	4-Warning	IP SLA Monitor Probe [dec]: [chars]	The IP SLA Monitor probe could not be scheduled. Either the configured starting time has already occurred or the starting time is invalid.	rsps_time_rptr	"Reschedule the failed probe with a valid start time."
<del>RPLSASCHEDCNCFAL</del>	4-Warning	IP SLA Monitor Probe [dec]: [chars]	The IP SLA Monitor probe could not be scheduled. Either the configured starting time has already occurred or the starting time is invalid.	rsps_time_rptr	"Reschedule the failed probe with a valid start time."
RUDP-3-INIT	3-Error	rudp [dec]: [chars][chars].	RUDP initialization operation fails.	-	LOG_STD_ACTION
RUDP-4-LINK	4-Warning	rudp [dec]: [chars][chars].	A warning is given out for a particular RUDP link.	-	LOG_SID_DBG_ACTION
RUDP-4-NOBUF	4-Warning	rudp [dec]: cannot get packet buffer for [chars].	A rudp link cannot allocate a packet buffer.	-	LOG_SID_REDUCE_ACTION
<del>RULECN#EMCCNERR</del>	3-Error	iosxe-binos-utils	Error in[chars]	General Wireless LAN Controller Error Message.	LOG_STD_ACTION
<del>RULECN#EMCCNERR</del>	3-Error	iosxe-binos-utils	Error in[chars]	Rule regular expression error	Recreate regular expression correctly

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>RULE_ENGINE_PRIORITY_OVERRIDE</del>	4-Warning	iosxe-binos-utils	Warning:[chars]	rule_engine priorities are overridden	-
<del>RXP_MANAGER_BADEND</del>	3-Error	illegal bind [node]%u	illegal bind operation	-	"Refer to the Bug Navigator at www.cisco.com to see if this " "condition has been previously reported and resolved in a " "later release. If not gather the output of <CmdBold>show version<NoCmdBold> " "and <CmdBold>show running-config<NoCmdBold> and contact your Cisco technical " "support representative."
<del>RXP_MANAGER_BADINDEX</del>	3-Error	bad index value: [chars] [dec]	index value outside array limits	-	"Refer to the Bug Navigator at www.cisco.com to see if this " "condition has been previously reported and resolved in a " "later release. If not gather the output of <CmdBold>show version<NoCmdBold> " "and <CmdBold>show running-config<NoCmdBold> and contact your Cisco technical " "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RPMANAGER3BADTYPE	3-Error	[chars] [dec]	illegal type	-	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this "condition has been previously reported and resolved in a "later release. If not gather the output of <CmdBold>show version<NoCmdBold> " "and <CmdBold>show running-config<NoCmdBold> and contact your Cisco technical "support representative."
RPMANAGER3BADUNBD	3-Error	illegal unbind [node]%u	illegal bind operation	-	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this "condition has been previously reported and resolved in a "later release. If not gather the output of <CmdBold>show version<NoCmdBold> " "and <CmdBold>show running-config<NoCmdBold> and contact your Cisco technical "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RXP_MANAGER3BADVAL	3-Error	unexpected value: [chars] [dec]	unexpected value encountered	-	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this "condition has been previously reported and resolved in a "later release. If not gather the output of <CmdBold>show version<NoCmdBold> " "and <CmdBold>show running-config<NoCmdBold> and contact your Cisco technical "support representative."
RXP_MANAGER3DEFVEC	3-Error	default vectors used: [chars]	default vector used	-	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this "condition has been previously reported and resolved in a "later release. If not gather the output of <CmdBold>show version<NoCmdBold> " "and <CmdBold>show running-config<NoCmdBold> and contact your Cisco technical "support representative."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RXP_MANAGER3 NULLPTR	3-Error	[chars] 0x[hec]	null pointer	-	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this "condition has been previously reported and resolved in a "later release. If not gather the output of <CmdBold>show version<NoCmdBold> " "and <CmdBold>show running-config<NoCmdBold> and contact your Cisco technical "support representative."
RXP_MANAGER3 REFCOUNT	3-Error	bad refcnt: [chars] 0x[hec]	bad reference count	-	"Refer to the Bug Navigator at <a href="http://www.cisco.com">www.cisco.com</a> to see if this "condition has been previously reported and resolved in a "later release. If not gather the output of <CmdBold>show version<NoCmdBold> " "and <CmdBold>show running-config<NoCmdBold> and contact your Cisco technical "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
RXP_MANAGER3UNINT	3-Error	[chars] %u	uninitialized data structure	-	"Refer to the Bug Navigator at www.cisco.com to see if this " "condition has been previously reported and resolved in a " "later release. If not gather the output of <CmdBold>show version<NoCmdBold> " "and <CmdBold>show running-config<NoCmdBold> and contact your Cisco technical " "support representative."
SADB4IRE_CORRUPTED	4-Warning	SADB : AVL Tree got corrupted	SADB's one of the AVL Trees got corrupted	edge-policy	LOG_SID_NO_ACTION
SADB4IRE_CORRUPTED	4-Warning	SADB : AVL Tree got corrupted	SADB's one of the AVL Trees got corrupted	edge-policy	LOG_SID_NO_ACTION
SANTANA3DS_JIB_ERROR	3-Error	DS JIB Santana FPGA Error detected and corrected	DS JIB Santana FPGA Error corrected	cmts-infra	"Contact TAC to collect debug log from the linecard"
SASL-2-FORKFAIL	2-Critical	Cannot fork process [chars]	Attempted to fork a process and failed.	sasl	LOG_STD_ACTION
SASL-2-INITFAIL	2-Critical	Initialization failed - [chars]	SASL component initialization failed.	sasl	LOG_STD_ACTION
SBC4G4DE_CFG_FAILURE	3-Error	An SBC DBE configuration failure has occurred.	SBC has been unable to apply its DBE configuration.	sbc-comp	"Attempt to manually reconfigure the SBC DBE. " LOG_STD_ACTION
SBC4G4DE_CFG_FAILURE	3-Error	An SBC DBE configuration failure has occurred.	SBC has been unable to apply its DBE configuration.	sbc-comp	"Attempt to manually reconfigure the SBC DBE. " LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SECURITY-MEDIA_V4	3-Error	IPv4 addresses deleted [node][node]VRF '[chars]'	One or more IPv4 addresses of an SBC interface were removed while the SBC was still active. Please remove the media addresses/pools later manually. If the media addresses/pools were associated with a VRF then it will be necessary to remove the media addresses/pools by unconfiguring the SBC.	sbc-comp	-
SECURITY-MEDIA_V4	3-Error	IPv4 addresses deleted [node][node]VRF '[chars]'	One or more IPv4 addresses of an SBC interface were removed while the SBC was still active. Please remove the media addresses/pools later manually. If the media addresses/pools were associated with a VRF then it will be necessary to remove the media addresses/pools by unconfiguring the SBC.	sbc-comp	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SBC_CFG_MEDI_NOT_DEL_V6</del>	3-Error	IPv6 addresses deleted [node][node]VRF '[chars]'	One or more IPv6 addresses of an SBC interface were removed while the SBC was still active. Please remove the media addresses/pools later manually. If the media addresses/pools were associated with a VRF then it will be necessary to remove the media addresses/pools by unconfiguring the SBC.	sbc-comp	-
<del>SBC_CFG_MEDI_NOT_DEL_V6</del>	3-Error	IPv6 addresses deleted [node][node]VRF '[chars]'	One or more IPv6 addresses of an SBC interface were removed while the SBC was still active. Please remove the media addresses/pools later manually. If the media addresses/pools were associated with a VRF then it will be necessary to remove the media addresses/pools by unconfiguring the SBC.	sbc-comp	-
<del>SBC_CFG_SBC_NOT_CONFIG</del>	3-Error	SBC is not configured. VOIP LI configuration request failed	Since SBC is not configured the VOIP LI request is rejected. First configure SBC and then VOIP LI requests will be processed.	sbc-comp	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SBC_CFG_SBC_NOT_CONFIG</del>	3-Error	SBC is not configured. VOIP LI configuration request failed	Since SBC is not configured the VOIP LI request is rejected. First configure SBC and then VOIP LI requests will be processed.	sbc-comp	-
<del>SBC_CFG_SBC_NOT_CONFIG</del>	3-Error	Delayed ServiceChange failed.	SBC has failed to send the delayed ServiceChange message at boot.	sbc-comp	"Ensure that the SBC configuration is valid " "and perform a manual SBC Activation."
<del>SBC_CFG_SBC_NOT_CONFIG</del>	3-Error	Delayed ServiceChange failed.	SBC has failed to send the delayed ServiceChange message at boot.	sbc-comp	"Ensure that the SBC configuration is valid " "and perform a manual SBC Activation."
<del>SBC_CFG_BLACKLIST_BLOCKED</del>	4-Warning	Source [chars]: blacklisted blocked reason: [chars]	The source is blacklisted.	sbc-comp	-
<del>SBC_CFG_BLACKLIST_BLOCKED</del>	4-Warning	Source [chars]: blacklisted blocked reason: [chars]	The source is blacklisted.	sbc-comp	-
<del>SBC_CFG_BLACKLIST_CLEARED</del>	4-Warning	Source [chars]: cleared blacklist event or alert reason: [chars]	A blacklist event or alert is cleared.	sbc-comp	-
<del>SBC_CFG_BLACKLIST_CLEARED</del>	4-Warning	Source [chars]: cleared blacklist event or alert reason: [chars]	A blacklist event or alert is cleared.	sbc-comp	-
<del>SBC_CFG_BLACKLIST_CRITICAL</del>	4-Warning	Source [chars]: critical blacklist alert reason: [chars]	A critical blacklist alert has been generated.	sbc-comp	-
<del>SBC_CFG_BLACKLIST_CRITICAL</del>	4-Warning	Source [chars]: critical blacklist alert reason: [chars]	A critical blacklist alert has been generated.	sbc-comp	-
<del>SBC_CFG_BLACKLIST_MAJOR</del>	4-Warning	Source [chars]: major blacklist alert reason: [chars]	A major blacklist alert has been generated.	sbc-comp	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SBCCFG</del> BLACKLIST_MAJR	4-Warning	Source [chars]: major blacklist alert reason: [chars]	A major blacklist alert has been generated.	sbc-comp	-
<del>SBCCFG</del> BLACKLIST_MNCR	4-Warning	Source [chars]: minor blacklist alert reason: [chars]	A minor blacklist alert has been generated.	sbc-comp	-
<del>SBCCFG</del> BLACKLIST_MNCR	4-Warning	Source [chars]: minor blacklist alert reason: [chars]	A minor blacklist alert has been generated.	sbc-comp	-
<del>SBCCFG</del> INCRD_BOOT	4-Warning	Failed to delay ServiceChange.	SBC has failed to start a timer for delaying a ServiceChange message at boot. The ServiceChange message will be sent out without a delay.	sbc-comp	"Ensure that SBC has been fully Activated and " "that all requested pinholes have been established. " LOG_STD_ACTION
<del>SBCCFG</del> INCRD_BOOT	4-Warning	Failed to delay ServiceChange.	SBC has failed to start a timer for delaying a ServiceChange message at boot. The ServiceChange message will be sent out without a delay.	sbc-comp	"Ensure that SBC has been fully Activated and " "that all requested pinholes have been established. " LOG_STD_ACTION
<del>SBCCFG</del> INCRD_BOOT	6-Information	Delay [chars].	SBC has been configured to delay sending a ServiceChange message at boot. Upon the delay timer expiring the ServiceChange message will be sent.	sbc-comp	"This message is for informational purposes only. " "A ServiceChange message will be sent out once the " "delay timer expires."
<del>SBCCFG</del> INCRD_BOOT	6-Information	Delay [chars].	SBC has been configured to delay sending a ServiceChange message at boot. Upon the delay timer expiring the ServiceChange message will be sent.	sbc-comp	"This message is for informational purposes only. " "A ServiceChange message will be sent out once the " "delay timer expires."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SBC_COMP_MEMORY_ALERT	3-Error	SBC memory congestion level has changed from [chars] to [chars].\n Usage: [dec] of [dec] bytes.	SBC has reported a processor memory change.	sbc-comp	-
SBC_COMP_MEMORY_ALERT	3-Error	SBC memory congestion level has changed from [chars] to [chars].\n Usage: [dec] of [dec] bytes.	SBC has reported a processor memory change.	sbc-comp	-
SBC_COMP_MEMORY_REJ	3-Error	SBC is rejecting new INVITES due to memory congestion state.\n Usage: [dec] of [dec] bytes.	SBC has reported a rejected a new call due to memory state.	sbc-comp	-
SBC_COMP_MEMORY_REJ	3-Error	SBC is rejecting new INVITES due to memory congestion state.\n Usage: [dec] of [dec] bytes.	SBC has reported a rejected a new call due to memory state.	sbc-comp	-
SBC_HA3CONFIG_SYNC	3-Error	SBC failed to cache SBC config of size [dec].	The SBC module was unable to successfully cache the SBC config on the Standby. The Standby will be unable to write SBC config to NVRAM.	sbc-ha	LOG_STD_ACTION
SBC_HA3HOLDPROGSSION	3-Error	SBC RF failed to start the progression holding process.	The SBC module was unable to successfully start the RF progression holding process. RF progression will resume immediately but if a switchover occurs immediately after the system reaches the Standby Hot redundancy state then some SBC calls may be lost.	sbc-ha	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SBC_HA3-ILT_PROC_CREATE	3-Error	SBC ILT process creation failed.	The SBC module was unable to successfully create an SBC process. SBC will not be able to operate in a stateful mode.	sbc-ha	LOG_STD_ACTION
SBC_HA3-ILT_REGISTRATION	3-Error	SBC ILT registration failed.	The SBC module was unable to successfully register for communication with the peer unit. SBC will not be able to operate in a stateful mode.	sbc-ha	LOG_STD_ACTION
SBC_HA-3-ILT_STUB	3-Error	SBC ILT Stub process creation failed.	The SBC module was unable to successfully create the ILT Stub process. SBC will not be able to operate in a stateful mode.	sbc-ha	LOG_STD_ACTION
SBC_HA-3-INTERNAL	3-Error	An internal SBC HA error has been encountered[chars].	An internal error has been encountered.	sbc-ha	LOG_STD_ACTION
SBC_HA-3-IPC_INIT	3-Error	SBC IPC failed to initialise [chars].	The SBC IPC module was unable to successfully initialise. SBC may not be able to operate in a stateful mode.	sbc-ha	LOG_STD_ACTION
SBC_HA-3-IPC_RMI_INIT	3-Error	SBC IPC failed to register with RMI [chars].	The SBC IPC module was unable to successfully register with the Resource Manager. SBC may not be able to operate in a stateful mode.	sbc-ha	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SBC_HA-3-IPC_SEND	3-Error	SBC IPC message send failed error [chars].	The SBC module was unable to successfully send a message to its peer. SBC will not be able to operate in a stateful mode.	sbc-ha	LOG_STD_ACTION
<del>SBC_ISS_CAPNR_REGRADN</del>	3-Error	SBC Cap Entry [dec] for Entity [dec] Registration failed [chars].	A capability entry could not be registered for SBC ISSU. SBC will not be able to operate in a stateful mode.	sbc-ha	"show issu capability entries"
<del>SBC_ISS_CAPGRP_REGRADN</del>	3-Error	SBC Cap Group [dec] for Entity [dec] Registration failed [chars].	A capability group could not be registered for SBC ISSU. SBC will not be able to operate in a stateful mode.	sbc-ha	"show capability groups"
<del>SBC_ISS_CAPTYR_REGRADN</del>	3-Error	SBC Cap Type for Entity [dec] Registration failed [chars].	A capability type could not be registered for SBC ISSU. SBC will not be able to operate in a stateful mode.	sbc-ha	"show issu capability types"
<del>SBC_ISS_CLIENT_REGRADN</del>	3-Error	SBC Client [dec] Registration failed [chars].	The SBC module was unable to successfully register with the ISSU infrastructure. SBC will not be able to operate in a stateful mode.	sbc-ha	"show issu clients"
<del>SBC_ISS_ENTITY_REGRADN</del>	3-Error	SBC Entity [dec] Registration failed [chars].	The SBC ISSU entity could not be registered. SBC will not be able to operate in a stateful mode.	sbc-ha	"show issu entities"
SBC_HA3ISSU_MSG_MIU	3-Error	SBC Client [dec] get msg mtu failed. Error = [dec].	The SBC ISSU client could not obtain a message of the required size.	sbc-ha	"show issu fsm"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SBC_HA_ISSU_MGRD_REGISTRATION</del>	3-Error	SBC Msg Group [dec] for Entity [dec] Registration failed [chars].	The message group for SBC ISSU could not be registered. SBC will not be able to operate in a stateful mode.	sbc-ha	"show issu message groups"
<del>SBC_HA_ISSU_MTYPE_REGISTRATION</del>	3-Error	SBC Msg Type for Entity [dec] Registration failed [chars].	The message type for SBC ISSU could not be registered. SBC will not be able to operate in a stateful mode.	sbc-ha	"show issu message types"
<del>SBC_HA_ISSU_NEGOTIATION</del>	3-Error	SBC ISSU negotiation failed.	The SBC module was unable to successfully negotiate with its peer. SBC will not be able to operate in a stateful mode.	sbc-ha	LOG_STD_ACTION
<del>SBC_HA_ISSU_REGISTRATION</del>	3-Error	SBC ISSU failed to register.	The SBC module was unable to successfully register with the ISSU infrastructure. SBC will not be able to operate in a stateful mode.	sbcha	LOG_STD_ACTION
<del>SBC_HA_ISSU_SESSION_REGISTRATION</del>	3-Error	SBC session for Entity [dec] Registration failed [chars].	The SBC ISSU session could not be registered. SBC will not be able to operate in a stateful mode.	sbc-ha	"show issu sessions"
<del>SBC_HA_ISSU_START_NEGOTIATION</del>	3-Error	SBC ISSU negotiation failed to start [chars].	The SBC module was unable to successfully start negotiation with its peer. SBC will not be able to operate in a stateful mode.	sbc-ha	"show issu fsm"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SBC_HA3ISSU_TRANSFORM	3-Error	SBC ISSU [chars] transformation failed [chars].	The transformation operation for an SBC ISSU message has failed.	sbc-ha	"show issu fsm and show issu sessions"
SBC_HA3LARGE_IPMSG	3-Error	SBC failed to receive large sync message of size [dec].	The SBC module was unable to successfully receive a large sync message on the Standby. The Standby will be will not have an identical dynamic state as the Active.	sbc-ha	LOG_NO_ACTION
SBC_HA3LARGE_IPMSGAL	3-Error	SBC failed to send large sync message of size [dec].	The SBC module was unable to successfully send a large sync message to the Standby because this version of the Standby does not support large messages. The Standby will be will not have an identical dynamic state as the Active.	sbc-ha	LOG_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SBC_HA_LARGE_IS_UNSUPPORTED	3-Error	The current version of the SBC Standby does not support the syncing of large SBC contexts	The current version of the SBC Standby does not support the syncing of large SBC contexts. A context that contains 24 or more media and signaling flows is a large context. It is rare to have such a large context and thus ISSU compatibility has been permitted even though this difference in support exists. Normal SBC High Availability synchronization will continue to operate successfully as long as no contexts contain more than 24 signaling or media flows. Context information beyond 24 flows will not be replicated and thus on RP switchover the Active RP will not have information about all the contexts	sbc-ha	LOG_STD_ACTION
SBC_HA_NO_SYNC_PROCESS	3-Error	SBC RF failed to start the config sync process.	The SBC module was unable to successfully start the configuration sync process. The Standby will be unable to fully initialise.	sbc-ha	LOG_STD_ACTION
SBC_HA_RF_CONFIG_SYNC	3-Error	SBC RF will not be able to synchronise SBC configuration to the Standby. Failure cause: [chars].	The SBC module will not be able to synchronise the SBC config to the Standby. The Standby will be unable to write SBC config to NVRAM.	sbc-ha	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SCHAS3RFPROGRESSION</del>	3-Error	SBC RF failed to resume RF progression at state [chars].	The SBC module was unable to successfully resume RF progression at the noted state. The Standby will be unable to fully initialise.	sbc-ha	LOG_STD_ACTION
<del>SCHAS3RFREGISTRATION</del>	3-Error	SBC RF failed to register	The SBC module was unable to successfully register with the RF infrastructure. SBC will not be able to operate in a stateful mode.	sbc-ha	LOG_STD_ACTION
<del>SCHAS3RFEXTENSION</del>	3-Error	SBC RF progression extension timer expired.	The SBC module's RF progression extension timer expired. RF progression will resume but if a switchover occurs immediately after the system reaches the Standby Hot redundancy state then some SBC calls may be lost.	sbc-ha	LOG_STD_ACTION
<del>SCHAS3SBCBBRESTART</del>	3-Error	SBC restart has taken longer than expected.\n The SBC will be restarted but may require a \n shut/no shut of the redundancy group in order to\n return to stateful HA with the active router.\n	SBC process restart timedout may require manual intervention.	sbc-ha	"Shut/No shut the standby redundancy group associated with the SBC." LOG_STD_ACTION
<del>SCHAS3CACENHANCEMNT</del>	3-Error	SBC has detected cac enhancement feature configured\n which may have branch cli \n OR cac-scope adjacency accountcli \n	Peer SBC does not support cac enhancement feature configuration.	sbc-ha	"Manually remove cac enhancement feature configuration " "and reinitiate ISSU." LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<b>SBCASBCODENWKCG</b>	3-Error	SBC has detected codec configuration which is\n not supported on the peer. SBC cannot proceed as HA client.\n Remove all newly entered codec configuration to proceed\n with ISSU/ISSD.\n	Peer SBC does not support codec preference variant or interwork configuration.	sbc-ha	"Manually remove newly added codec configuration and" "reinitiate ISSU." "LOG_STD_ACTION
<b>SBCASBCDNLALRUCG</b>	3-Error	SBC has detected blacklist entries configured\n which have reason na-policy-failure\n OR minor major critical alerts which is not supported on the peer.\n SBC cannot proceed as HA client.\n Remove all blacklist entries with this reason or any alerts\n configuration to proceed with ISSU/ISSD.\n	Peer SBC does not support blacklist reason na-policy-failure or blacklist alerts configuration.	sbc-ha	"Manually remove blacklist reason na-policy-failure and " "minor major or critical alerts configuration " "and reinitiate ISSU." "LOG_STD_ACTION
<b>SBCASBCDNAMCODECG</b>	3-Error	SBC has detected Dynamic Codec configuration which is\n not supported on the peer. SBC cannot proceed as HA client.\n Remove all codec configuration to proceed with ISSU/ISSD.\n	Peer SBC does not support Dynamic Codec configuration.	sbc-ha	"Manually remove Dynamic Codec configuration and reinitiate" " ISSU." "LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SBC</del> <u>SBC</u> <del>HEX</del> <u>HEX</u> <del>MDR</del> <u>MDR</u> <del>CFG</del> <u>CFG</u>	3-Error	SBC has detected\nflexible media routing configuration. This feature is not supported \n on the peer. SBC cannot proceed as HA client. Remove all \n flexible media routing config from the configuration to proceed with \n ISSU/ISSD.\n	Peer SBC does not support flexible media routing configuration.	sbc-ha	"Manually remove flexible media routing from configuration " "and reinitiate ISSU." LOG_STD_ACTION
<del>SBC</del> <u>SBC</u> <del>HA</del> <u>HA<del>ADM</del><u>ADM</u><del>CFG</del><u>CFG</u></u>	3-Error	SBC has detected\nan admin-domain configuration. This feature is not supported \n on the peer. SBC cannot proceed as HA client. Remove all \n admin-domain submodes from the configuration to proceed with \n ISSU/ISSD.\n	Peer SBC does not support admin-domain configuration.	sbc-ha	"Manually remove the admin-domain submodes from configuration " "and reinitiate ISSU." LOG_STD_ACTION
<del>SBC</del> <u>SBC</u> <del>HA</del> <u>HA<del>CAC</del><u>CAC</u><del>CFG</del><u>CFG</u></u>	3-Error	SBC has detected\naveraging-period 2 cac configuration. Averaging-period 2 is not\n supported on the peer. SBC cannot proceed as HA client. Remove the\n cac-policy-set averaging-period 2 configuration to proceed with\n ISSU/ISSD.\n	Peer SBC does not support averaging-period 2 cac configuration.	sbc-ha	"Manually remove the cac-policy-set averaging-period 2 configuration " "and reinitiate ISSU." LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SBC-HA-CAC-RATE-LOG</del>	3-Error	SBC has detected\n cac-policy-set rate limit configuration for averaging-period 2.\n Averaging-period 2 is not supported on the peer. SBC cannot proceed\n as HA client. Remove the cac-policy-set rate limit configuration \n for averaging-period 2 to proceed with ISSU/ISSD.\n	Peer SBC does not support cac rate limit configuration for averaging-period 2.	sbc-ha	"Manually remove the rate limit commands for averaging-period 2 found " "within the cac-policy-set entry and reinitiate ISSU." LOG_STD_ACTION
<del>SBC-HA-CAC-PRV-SVC-LOG</del>	3-Error	SBC has detected\n cac-policy-set privacy-service configuration for a cac entry.\n This enhancement is not supported on the peer. SBC cannot proceed\n as HA client. Remove the cac-policy-set privacy-service related \n configuration to proceed with ISSU/ISSD.\n	Peer SBC does not support cac-policy-set privacy-service configuration for a cac entry.	sbc-ha	"Manually remove the privacy-service related commands configured " "within the cac-policy-set entry and reinitiate ISSU." LOG_STD_ACTION
<del>SBC-HA-CAL-ON-ACG</del>	3-Error	SBC has detected\n first-outbound-na-table configured within a call-policy-set.\n This command is not supported on the peer. SBC cannot proceed\n as HA client. Remove all first-outbound-na-table configuration\n to proceed with ISSU/ISSD.\n	Peer SBC does not support first-outbound-na-table configuration within a call-policy-set.	sbc-ha	"Manually remove the first-outbound-na-table configuration " "and reinitiate ISSU." LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SCHASBCFAPRTAGGIG	3-Error	SBC has detected an port tag configuration. This feature is not supported on the peer. SBC cannot proceed as HA client. Remove all port tag from the configuration to proceed with ISSU/ISSD.	Peer SBC does not support port tag configuration.	sbc-ha	"Manually remove the port tag from configuration " "and reinitiate ISSU." LOG_STD_ACTION
SCHASBCMPNADISRCIG	3-Error	SBC has detected number analysis entries that have edit-src actions which are not supported on the peer. Remove all edit-src actions from all number analysis entries to proceed with ISSU/D	Peer SBC does not support edit-src actions in number analysis entries.	sbc-ha	"Manually remove edit-src actions from " "all number analysis entries and reinitiate " "ISSU. " LOG_STD_ACTION
SCHASBCMPNAREXREGIG	3-Error	SBC has detected number analysis entries that match on text addresses which are not supported on the peer. Remove all regex number analysis entries to proceed with ISSU/D	Peer SBC does not support regex number analysis entries.	sbc-ha	"Manually remove regex number analysis entries" " and reinitiate ISSU. " LOG_STD_ACTION
SCHASBCMPNASCANONIG	3-Error	SBC has detected na-src-name-anonymous number analysis tables which are not supported on the peer. Remove all na-src-name-anonymous number analysis tables to proceed with ISSU/D	Peer SBC does not support na-src-name-anonymous number analysis tables.	sbc-ha	"Manually remove all na-src-name-anonymous number" " analysis tables and reinitiate ISSU. " LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SBC_HA3SBC_MS_RF_CFG	3-Error	SBC has detected ims rf configured. SBC cannot proceed now.\n Remove all ims rf config to proceed with ISSU/ISSD.\n	Peer SBC does not support ims rf configuration.	sbc-ha	"Manually remove ims rf configuration and reinitiate ISSU." LOG_STD_ACTION
SBC_HA3SBC_IPV6_CFG	3-Error	SBC has detected configuration/dynamic state [chars] which is	Peer SBC does not support IPv6.	sbc-ha	"Manually remove IPv6 configuration and reinitiate " "ISSU. " LOG_STD_ACTION
SBC_HA3SBC_LRU_CFG	3-Error	SBC has detected LRU configured\n SBC cannot proceed now.\n Remove all LRU CONFIG to proceed with ISSU/ISSD.\n	Peer SBC does not support LRU configuration.	sbc-ha	"Manually remove LRU configuration " "and reinitiate ISSU." LOG_STD_ACTION
<del>SBC_HA3SBC_MEDIA_CFG</del>	3-Error	SBC has detected media address preserve init-negotiation configured\n SBC cannot proceed now.\n Remove all media address preserve init-negotiation config to proceed with ISSU/ISSD.\n	Peer SBC does not support media address preserve init-negotiation configuration.	sbc-ha	"Manually remove media address preserve init-negotiation configuration " "and reinitiate ISSU." LOG_STD_ACTION
<del>SBC_HA3SBC_MEDIA_BYPASS_CFG</del>	3-Error	SBC has detected media bypass auto-nat-tag-gen configured\n SBC cannot proceed now.\n Remove all media bypass auto-nat-tag-gen config to proceed with ISSU/ISSD.\n	Peer SBC does not support media bypass auto-nat-tag-gen configuration.	sbc-ha	"Manually remove media bypass auto-nat-tag-gen configuration " "and reinitiate ISSU." LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SBC3SECMSCHLNCFG	3-Error	SBC has detected message editing configured\n which may have \sip editor_type editor\n OR parameter-editor OR header-editor OR method-editor OR body-editor\n OR option-editor which is not supported on the peer.\n SBC cannot proceed as HA client.\n Remove all message editing config to proceed with ISSU/ISSD.\n	Peer SBC does not support message editing configuration.	sbc-ha	"Manually remove message editing configuration " "and reinitiate ISSU." LOG_STD_ACTION
SBC3SECMSMBCFG	3-Error	SBC has detected Multi SBC Media Bypass configuration which is not supported on the peer.\n SBC cannot proceed as HA client.\n Remove all Multi SBC Media Bypass configuration to proceed \n with ISSU/ISSD.\n	Peer SBC does not support Multi SBC Media Bypass configuration.	sbc-ha	"Manually remove Multi SBC Media Bypass configuration " "and reinitiate ISSU." LOG_STD_ACTION
SBC3SECQSDMRCADCFG	3-Error	SBC has detected qos demarcation configured\n which may have statistics threshold \n OR g107a factor OR cal_moscqe OR g107 bpl OR g107 ie\n OR qos trap configured which is not supported on the peer.\n SBC cannot proceed as HA client.\n Remove all qos demarcation config to proceed with ISSU/ISSD.\n	Peer SBC does not support qos demarcation configuration.	sbc-ha	"Manually remove qos demarcation configuration " "and reinitiate ISSU." LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SBC_HA_SBC_RG_NO_CLIENT	3-Error	SBC was unable to register the RG Client with the RG\n infrastructure for inter-chassis HA.\n	SBC will not be able to support inter-chassis HA.	sbc-ha	LOG_NO_ACTION
SBC_HA_SBC_RG_NO_PROCESS	3-Error	SBC was unable to start a process used by the RG client\n	SBC will not be able to support inter-chassis HA.	sbc-ha	LOG_NO_ACTION
SBC_HA_SBC_RG_NO_SOCKET	3-Error	SBC was unable to open a socket for the RG client\n	SBC will not be able to support inter-chassis HA.	sbc-ha	LOG_NO_ACTION
SBC_HA_SBC_RG_NO_TRANSPORT	3-Error	SBC was unable to register a transport with the RG\n infrastructure for inter-chassis HA.\n	SBC will not be able to support inter-chassis HA.	sbc-ha	LOG_NO_ACTION
SBC_HA_SBC_RG_NO_VRF	3-Error	SBC VRF mismatch between active and standby please add [chars]	SBC may fail to fully support SSO	sbc-ha	LOG_NO_ACTION
SBC_HA_SBC_RG_SOCKET_FAILURE	3-Error	SBC lost connection with RG peer socket failure [chars] len=[dec]\n	SBC HA may be disabled until peer connection is established.	sbc-ha	LOG_NO_ACTION
SBC_HA_SBC_RG_VRF_NOT_USED	3-Error	VRF is used by SBC add back or remove from active please add [chars]	SBC may fail to fully support SSO	sbc-ha	LOG_NO_ACTION
SBC_HA_SBC_SDP_EDITING_CFG	3-Error	SBC has detected sdp editing configured\n which may have script-set OR active-script-set\n OR \test script-set on any adjacency\n configured \n which is not supported on the peer.\n SBC cannot proceed as HA client.\n Remove all sdp editing config to proceed with ISSU/ISSD.\n	Peer SBC does not support sdp editing configuration.	sbc-ha	"Manually remove sdp editing configuration " "and reinitiate ISSU." LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SBC_SIPS_H323_INWK_CFG</del>	3-Error	SBC has detected SIPS-H323 Interworking configured\n which may have trusted H323 Adjacencies or secure calls\n configured which is not supported on the peer.\n SBC cannot proceed as HA client.\n Remove all SIPS-H323 Interworking config to proceed with ISSU/ISSD.\n	Peer SBC does not support SIPS-H323 Interworking configuration.	sbc-ha	"Manually remove SIPS-H323 Interworking configuration " "and reinitiate ISSU." LOG_STD_ACTION
<del>SBC_SUBSCRIBER_CFG</del>	3-Error	SBC has detected subscriber tcp configured\n which may have subscriber tcp incoming-only configured\n which is not supported on the peer.\n SBC cannot proceed as HA client.\n Remove all subscriber tcp config to proceed with ISSU/ISSD.\n	Peer SBC does not support subscriber tcp configuration.	sbc-ha	"Manually remove subscriber tcp configuration " "and reinitiate ISSU." LOG_STD_ACTION
<del>SBC_VIA_PASSTHRU_CFG</del>	3-Error	SBC has detected Via Passthrough configured\n SBC cannot proceed now.\n Remove all Via Passthrough CONFIG to proceed with ISSU/ISSD.\n	Peer SBC does not support Via Passthrough configuration.	sbc-ha	"Manually remove Via Passthrough configuration " "and reinitiate ISSU." LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SBC_HA_SBC_XML_BILLING_CFG	3-Error	SBC has detected Xml Billing configuration which is not supported on the peer. SBC cannot proceed as HA client. Remove all xml billing configuration to proceed with ISSU/ISSD.	Peer SBC does not support Xml Billing configuration.	sbc-ha	"Manually remove Xml Billing configuration and reinitiate" " ISSU. " LOG_STD_ACTION
SBC_HA_WATCH_PROGRESSION	3-Error	SBC RF failed to create progression watch points.	The SBC module was unable to successfully create the RF progression watch points. RF progression will not be suspended at bulk synchronisation time so some SBC calls may be lost if a switchover occurs immediately after the system reaches the Standby Hot redundancy state.	sbc-ha	LOG_STD_ACTION
SBC_HA_ISSU_GET_BUFFER	4-Warning	SBC ISSU session failed to get buffer.	The SBC ISSU client failed to get a buffer. Some High-Availability SBC information may be missing from the peer.	sbc-ha	"show processes memory"
SBC_MPS3-ENQUEUEFAIL	3-Error	Enqueue of TDL message failed [chars].	-	-	-
SBC_MPS3-INITFAIL	3-Error	SBC module initialisation failure: [chars].	An unexpected condition has occurred which resulted in the module being unable to initialise.	asr1k-sbc	LOG_STD_ACTION
SBC_MPS3-INTERNAL	3-Error	An internal IOSd SBC error has been encountered[chars].	An internal error has been encountered.	asr1k-sbc	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SCMPSMAX_RESOURCES	3-Error	The maximum resource limit has been reached.	The system was asked to allocate more resources but the maximum\n\n resource limit had already been reached	asr1k-sbc	LOG_STD_ACTION
SCMPSNEXCHD_TMOUT	3-Error	An unexpected timeout has been encountered by SBC [chars].	A timeout was experienced by the IOSd SBC subsystem but no such\n\n timeout should have occurred. The system will ignore the timeout and\n\n continue operating.	asr1k-sbc	LOG_STD_ACTION
SCMPSMPF_CAPABILITIES	4-Warning	SBC MPF Capabilities handling failure.	SBC has been unable to properly prepare a Media Packet Forwarding capabilities message. SBC may not be able to support select functionality such as transcoding or SRTP.	asr1k-sbc	LOG_STD_ACTION
SCMPSMPF_SRTP_CAPABILITIES	4-Warning	Unable to set SRTP capabilities	SBC made an attempt to set the platform capabilities with respect to its handling of SRTP streams and was not successful. SRTP streams will not be handled through the SBC.	asr1k-sbc	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SBCMSNEWMPF_CAPABILITIES</del>	4-Warning	New SBC MPF Capabilities handling failure.	SBC has received a new set of Media Packet Forwarding capabilities from the associated Forwarding Processor that are inconsistent with those already in use. SBC was unable to process these new capabilities online and will automatically restart.	asr1k-sbc	LOG_STD_ACTION
<del>SBCMSRSCODEMPF_CAPABILITIES</del>	4-Warning	Transcoding SBC MPF Capabilities handling failure.	SBC has been unable to prepare a transcoding supported Media Packet Forwarding capabilities message. SBC will not be able to support transcoding functionality.	asr1k-sbc	LOG_STD_ACTION
<del>SBCMSUNEXPECTED_PKT</del>	4-Warning	An unexpected packet for call [dec] has been received by SBC.	A packet been received by SBC for the noted call but the call was not in a correct state to handle it. The system will ignore the packet and continue operating.	asr1k-sbc	LOG_STD_ACTION
<del>SBCMSDEACTIVATE_ORP</del>	6-Information	SBC deactivate response is considered lost.	The response for SBC deactivate can get lost due to FP startup or switchover while deactivation is in progress.	asr1k-sbc	"SBC can be activated now if needed."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SBCM3-DEACTIVER_DONE	6-Information	SBC deactivate is complete.	SBC deactivation can take a while. This happens when SBC deactivation is done in the presence of a lot calls with deactivation-mode set to abort. SBC deactivate is now complete.	asr1k-sbc	"SBC can be safely activated now if needed."
SBCMSG_NEXPTCHD_IDL	6-Information	An unexpected message [chars] has been received by SBC while in the	An internal message has been received by SBC but it was not expecting\n that message at that particular time. The system will ignore the\n message and continue operation.	asr1k-sbc	LOG_STD_ACTION
SBC_SPF-3-ENQUEFAIL	3-Error	Enqueue of TDL message failed [chars].	-	-	-
SBC_SPF-3-INTERNAL	3-Error	An internal IOSd SBC error has been encountered[chars].	An internal error has been encountered.	iosxe-sbc	LOG_STD_ACTION
SBC_SPF-3-NOT_FOUND	3-Error	An unsolicited message has been received by SBC [chars] %u	-	-	-
SBC-2-IPC_INIT	2-Critical	IPC message handler registration failure rc %u	Registering an IPC message handler for the SBC feature failed. This will cause the feature not to function. The function	cpp-sbc	"This is normally a software issue. " "The consequences are that the SBC feature will not function. " LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SBC-3-FEAT_DOWN	3-Error	Invalid request [chars] while feature down call id %u	While the feature was not active an invalid request was received from another layer of the SBC software stack for the specified call ID. Some requests do not have an associated call ID. For them the displayed call ID is zero.	cpp-sbc	"This is a software issue. The consequences " "could be limited to only one or a few calls. " LOG_SID_RECUR_ACTION
SBC-3-FEAT_UP	3-Error	Invalid request [chars] while feature up	While the feature was active an invalid request was received from another layer of the SBC software stack.	cpp-sbc	"This is a software issue. " "There are no consequences as this can only have been an Init request " "while the feature was already active. " LOG_SID_RECUR_ACTION
SBC-3-IPC_NORES	3-Error	No space for the IPC reply size %u	For a request from upper SBC software stack layers it was not possible to allocate space for a reply for the specified size. The consequence of this could be a stuck call that cannot be established etc. In rare cases this could also affect other operations such as feature activation deactivation modification High-Availability switchover operations.	cpp-sbc	"This is normally a software issue. " LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SBC3-IPC_OPEN_REPLY	3-Error	IPC Open Reply failed request %u	For a request from upper SBC software stack layers it was not possible to open the reply buffer. The consequence of this could be a stuck call that cannot be established etc. In rare cases this could also affect other operations such as feature activation deactivation modification High-Availability switchover operations.	cpp-sbc	"This is normally a software issue. " LOG_SID_RECUR_ACTION
SBC3MEM_INT_FAILED	3-Error	Allocation of [chars] memory failed for SBC	SBC Initialization of channel pool failed.	cpp-sbc	LOG_STD_ACTION
SBC-3-NO_RES	3-Error	[chars] resource not available for the [chars] request call id %u	The specified software resource was not available or could not be located for the specified request from upper SBC software stack layers for the specified call ID.	cpp-sbc	"This is a software issue. The consequences " "are that the specified request could not be performed. " LOG_SID_RECUR_ACTION
SBC3RPLCAN_FAILED	3-Error	Register to Generic Packet Replication failed for SBC	SBC Initialization of packet replication registration failed.	cpp-sbc	LOG_STD_ACTION
SBC3SSL_API_REG_FAILED	3-Error	QFP SBC Websocket register to SSL library failed	Cisco internal software error. QFP SBC WS feature initialization detected that the SSL library registration failed. QFP SBC WS will not be functional while this condition exists.	cpp-sbc	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SCCP3XCVR_BAD_ID_HW	3-Error	Failed identification test in [dec]/[dec]/[dec].	The Transceiver in the specified port has failed authentication.	spa-infra	LOG_STD_ACTION
SCCP3CHUNK_CREATE_FAIL	3-Error	-	Chunk create failed. SCCP ALG will not be able to finish initialization.	cpp-ucode	LOG_STD_ACTION
SCCP3COMBABLE_HA_SYNC_IN	3-Error	rcvd:[hec] expect:[hec]	Incompatible HA Message Length. SCCP ALG will reject sync data.	cpp-ucode	LOG_STD_ACTION
SCCP3COMBABLE_HA_VERSION	3-Error	rcvd:[hec] expect:[hec]	Incompatible HA Version. SCCP ALG will reject sync data.	cpp-ucode	LOG_STD_ACTION
SCCP3CORRECT_HA_MAGIC	3-Error	rcvd:[hec] expect:[hec]	Incorrect HA MAGIC. SCCP ALG will reject sync data.	cpp-ucode	LOG_STD_ACTION
SCCP3INVALID_HA_OPCODE	3-Error	rcvd:[hec] expect:[hec]	Invalid HA opcode. SCCP ALG will reject sync data.	cpp-ucode	LOG_STD_ACTION
SCCP-0-PANIC	0-Emergency	[chars]	Unrecoverable Internal Panic	sccp	LOG_STD_ACTION
SCCP-1-ALERT	1-Alert	[chars]	A condition that should be corrected immediately.	sccp	LOG_STD_ACTION
SCCP-2-CRITICAL	2-Critical	[chars]	Critical Conditions	sccp	LOG_STD_ACTION
SCCP-3-ERROR	3-Error	[chars]	Errors	sccp	LOG_STD_ACTION
SCCP-4-WARNING	4-Warning	[chars]	Warning	sccp	LOG_STD_ACTION
SCCP-5-NOTICE	5-Notice	[chars]	Notice	sccp	LOG_STD_ACTION
SCCP-6-INFO	6-Information	[chars]	Informational	sccp	LOG_SID_NO_ACTION
SCHED_TEST2EXITHOOK	2-Critical	Exit routine invoked for process [chars].	-	-	-
SCHED_TEST6ERRMSG	6-Information	This errmsg should print correctly.	-	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SCHED-2-ATTRCMD	2-Critical	Attempt to [chars] attribute [chars] on process [dec].	Each process has various public and private attributes associated with it. This message indicates that an attempt was made to set or get a private attribute belonging to another process.	-	LOG_STD_ACTION
SCHED-2-ATTRCMD	2-Critical	Attempt to [chars] attribute [chars] on process [dec].	Each process has various public and private attributes associated with it. This message indicates that an attempt was made to set or get a private attribute belonging to another process.	-	LOG_STD_ACTION
SCHED-2-ATTRVALUE	2-Critical	Attempt to set bad [chars] value [hec] on process [dec]	Each process has various attributes associated with it. This message indicates that an attempt was made to set the specified attribute to an invalid value.	-	"Copy the error message exactly as it appears and report it " "to your technical support representative."
SCHED-2-ATTRVALUE	2-Critical	Attempt to set bad [chars] value [hec] on process [dec]	Each process has various attributes associated with it. This message indicates that an attempt was made to set the specified attribute to an invalid value.	-	"Copy the error message exactly as it appears and report it " "to your technical support representative."
SCHED-2-EDISMSCRIT	2-Critical	Critical/high priority process [chars] may not dismiss.	Scheduler was running for a long time and so caused the system to reset	os	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SCHED-2-EDISMSCRIT	2-Critical	Critical/high priority process [chars] may not dismiss.	Scheduler was running for a long time and so caused the system to reset	os	LOG_SID_RECUR_ACTION
SCHED-2-MESSAGE	2-Critical	Key [chars] does not match key [chars] of process [dec] in process_send_message request	An attempt was made to send a message to a process. The key associated with that process did not match the key in the message. This usually means an incorrect process id was used in the send message request.	<del>DriverPolicyValidation</del>	-
SCHED-2-MESSAGE	2-Critical	Key [chars] does not match key [chars] of process [dec] in process_send_message request	An attempt was made to send a message to a process. The key associated with that process did not match the key in the message. This usually means an incorrect process id was used in the send message request.	<del>DriverPolicyValidation</del>	-
SCHED-2-NOATTR	2-Critical	Attempt to [chars] unknown process attribute [dec].	Each process has various attributes associated with it. This message indicates that an attempt was made to set or get a nonexistent process attribute.	-	LOG_STD_ACTION
SCHED-2-NOATTR	2-Critical	Attempt to [chars] unknown process attribute [dec].	Each process has various attributes associated with it. This message indicates that an attempt was made to set or get a nonexistent process attribute.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SCHED2NOIWATCHIMER	2-Critical	[chars] timer [hec] not being watched.	A process can register to be notified when various events occur in the\n\n router. This message indicates that an attempt was made to deregister a \n\n timer expiration event that is not currently registered.	-	"Copy the error message exactly as it appears and report it\n\n to your technical support representative."
SCHED2NOIWATCHIMER	2-Critical	[chars] timer [hec] not being watched.	A process can register to be notified when various events occur in the\n\n router. This message indicates that an attempt was made to deregister a \n\n timer expiration event that is not currently registered.	-	"Copy the error message exactly as it appears and report it\n\n to your technical support representative."
SCHED2QUEUEEMPTY	2-Critical	Attempt to delete non-empty watched queue [chars] address [hec].	A process can register to be notified when various events occur in the\n\n router. This message indicates that an attempt was made to destroy a queue that\n\n still contained items. These items are lost and not returned to free\n\n memory.	-	"Copy the error message exactly as it appears and report it\n\n to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SCHED2SEMUNLOCK	2-Critical	Attempt to delete non-empty watched queue [chars] address [hec].	A process can register to be notified when various events occur in the\n\n router. This message indicates that an attempt was made to destroy a queue that\n\n still contained items. These items are lost and not returned to free\n\n memory.	-	"Copy the error message exactly as it appears and report it\n\n to your technical support representative."
SCHED2SEMUNLOCKED	2-Critical	[chars] attempted to unlock an unlocked semaphore	Some sections of code use semaphores to protect critical sections of\n\n software. This message indicates that an attempt was made to unlock a\n\n semaphore that was not locked.	-	"Copy the error message exactly as it appears and report it\n\n to your technical support representative."
SCHED2SEMUNLOCKED	2-Critical	[chars] attempted to unlock an unlocked semaphore	Some sections of code use semaphores to protect critical sections of\n\n software. This message indicates that an attempt was made to unlock a\n\n semaphore that was not locked.	-	"Copy the error message exactly as it appears and report it\n\n to your technical support representative."
SCHED2SEMUNLOCK	2-Critical	[chars] attempted to unlock semaphore owned by [chars] PID: [dec].	-	-	-
SCHED2SEMUNLOCK	2-Critical	[chars] attempted to unlock semaphore owned by [chars] PID: [dec].	-	-	-



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SCHED2SEIHIGHORCRIT	2-Critical	Attempt to set [chars] priority on process [dec] [chars]	Each process executes at a specified priority level. Higher priority\n\n processes must use the new scheduler primitives while lower priority\n\n processes can use primitives from either the new or old scheduler.\n\n This message indicates that an attempt was made to set the specified priority too\n\n high for a process using old scheduler primitives.	-	"Copy the error message exactly as it appears and report it\n\n to your technical support representative."
SCHED2SEIHIGHORCRIT	2-Critical	Attempt to set [chars] priority on process [dec] [chars]	Each process executes at a specified priority level. Higher priority\n\n processes must use the new scheduler primitives while lower priority\n\n processes can use primitives from either the new or old scheduler.\n\n This message indicates that an attempt was made to set the specified priority too\n\n high for a process using old scheduler primitives.	-	"Copy the error message exactly as it appears and report it\n\n to your technical support representative."
SCHED-3-CORRUPT	3-Error	Scheduler '[chars]' corrupted by process [chars] expected [hec] found [hec]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SCHED-3-CORRUPT	3-Error	Scheduler '[chars]' corrupted by process [chars] expected [hec] found [hec]	-	-	-
SCHED3NISETWAKEUP	3-Error	Invalid scheduler action [chars] at interrupt level	This message indicates that a <code>process_set_wakeup_reasons</code> was attempted from an interrupt handler.	-	"If this message recurs call your technical support representative for "assistance."
SCHED3NISETWAKEUP	3-Error	Invalid scheduler action [chars] at interrupt level	This message indicates that a <code>process_set_wakeup_reasons</code> was attempted from an interrupt handler.	-	"If this message recurs call your technical support representative for "assistance."
SCHED3LOSTWAKEUP	3-Error	Wakeup information for process [chars] lost maj [hec] min [hec].	A process can register to be notified when various events occur in the router. This message indicates that an event for the specified process was lost and that the system might not be functioning correctly.	-	-
SCHED3LOSTWAKEUP	3-Error	Wakeup information for process [chars] lost maj [hec] min [hec].	A process can register to be notified when various events occur in the router. This message indicates that an event for the specified process was lost and that the system might not be functioning correctly.	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SCHED-3-PAGEZERO	3-Error	Low memory modified by [chars] [hex] = [hex]	In all Cisco products the first 256 bytes of memory are unused and are off limits. Newer platforms have hardware to immediately trap reads or writes to this area. Older platforms periodically check this memory. This message appears only on older platforms and indicates that this off-limits memory area was modified.	-	"Copy the error message exactly as it appears and report it to your technical support representative."
SCHED-3-PAGEZERO	3-Error	Low memory modified by [chars] [hex] = [hex]	In all Cisco products the first 256 bytes of memory are unused and are off limits. Newer platforms have hardware to immediately trap reads or writes to this area. Older platforms periodically check this memory. This message appears only on older platforms and indicates that this off-limits memory area was modified.	-	"Copy the error message exactly as it appears and report it to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SCHED-3-PRIORITY	3-Error	Illegal priority [dec] specified for process [chars].	Each process executes at a specified priority level. Higher priority\n\n processes must use the new scheduler primitives while lower priority\n\n processes can use primitives from either the new or old scheduler.\n\n This message indicates that an attempt was made to set the specified process \n\n to a priority level that is not allowed for the type of scheduler\n\n primitives used.	-	"Copy the error message exactly as it appears and report it\n\n to your technical support representative."
SCHED-3-PRIORITY	3-Error	Illegal priority [dec] specified for process [chars].	Each process executes at a specified priority level. Higher priority\n\n processes must use the new scheduler primitives while lower priority\n\n processes can use primitives from either the new or old scheduler.\n\n This message indicates that an attempt was made to set the specified process \n\n to a priority level that is not allowed for the type of scheduler\n\n primitives used.	-	"Copy the error message exactly as it appears and report it\n\n to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SCHED-3-SEMLOCKED	3-Error	[chars] attempted to lock a semaphore already locked by itself	Some sections of code use semaphores to protect critical sections of software. This message indicates that an attempt was made to lock a semaphore that was already locked.	-	"Copy the error message exactly as it appears and report it " "to your technical support representative."
SCHED-3-SEMLOCKED	3-Error	[chars] attempted to lock a semaphore already locked by itself	Some sections of code use semaphores to protect critical sections of software. This message indicates that an attempt was made to lock a semaphore that was already locked.	-	"Copy the error message exactly as it appears and report it " "to your technical support representative."
SCHED-3-STACKSIZE	3-Error	Illegal stack size [dec] specified for process [chars].	Each process has its own stack space which must be one of several predefined sizes. This message indicates that an attempt was made to specify an illegal stack size.	-	-
SCHED-3-STACKSIZE	3-Error	Illegal stack size [dec] specified for process [chars].	Each process has its own stack space which must be one of several predefined sizes. This message indicates that an attempt was made to specify an illegal stack size.	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SCHED3STILLWATCHING	3-Error	Process still watching [chars] [chars]	A process can register to be notified when various events occur in the\n\n router. This message indicates that a process destroyed a set of\n\n events without first individually removing each event in the set.	-	"Copy the error message exactly as it appears and report it\n\n to your technical support representative."
SCHED3STILLWATCHING	3-Error	Process still watching [chars] [chars]	A process can register to be notified when various events occur in the\n\n router. This message indicates that a process destroyed a set of\n\n events without first individually removing each event in the set.	-	"Copy the error message exactly as it appears and report it\n\n to your technical support representative."
SCHED3STILLWATCHINGT	3-Error	Process still watching [chars] timer [hec]	A process can register to be notified when various events occur in the\n\n router. This message indicates that a process destroyed a set of\n\n events without first individually removing each event in the set.	-	"Copy the error message exactly as it appears and report it\n\n to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SCHED3STILLWATCHINGT	3-Error	Process still watching [chars] timer [hec]	A process can register to be notified when various events occur in the\n\n router. This message indicates that a process destroyed a set of\n\n events without first individually removing each event in the set.	-	"Copy the error message exactly as it appears and report it\n\n to your technical support representative."
SCHED3STUCKMIMR	3-Error	Sleep with expired managed timer [hec] time [node]a [node] ago.	A process can register to be notified when various events occur. This message indicates that a registered timer has expired and its value is unchanged after the process has received control twice.	-	-
SCHED3STUCKMIMR	3-Error	Sleep with expired managed timer [hec] time [node]a [node] ago.	A process can register to be notified when various events occur. This message indicates that a registered timer has expired and its value is unchanged after the process has received control twice.	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SCHED-3-STUCKTMR	3-Error	Sleep with expired timer [hec] time [node]a [node] ago.	A process can register to be notified when various events occur. This message indicates that a registered timer has expired and its value is unchanged after the process has received control twice.	-	-
SCHED-3-STUCKTMR	3-Error	Sleep with expired timer [hec] time [node]a [node] ago.	A process can register to be notified when various events occur. This message indicates that a registered timer has expired and its value is unchanged after the process has received control twice.	-	-
SCHED-3-THRASHING	3-Error	Process thrashing on watched [chars].	A process can register to be notified when various events occur. This message indicates that the indicated process relinquished control 50 consecutive times and there were still outstanding events to be processed.	-	-



<del>Facility</del> Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SCHED-3-THRASHING	3-Error	Process thrashing on watched [chars].	A process can register to be notified when various events occur. This message indicates that the indicated process relinquished control 50 consecutive times and there were still outstanding events to be processed.	-	-
<del>SCHED-3-THRASHING</del>	3-Error	Process received unknown event maj [hec] min [hec].	A process can register to be notified when various events occur in the\n router. This message indicates that a process received an event it\n did not know how to handle.	-	"Copy the error message exactly as it appears and report it\n to your technical support representative."
<del>SCHED-3-THRASHING</del>	3-Error	Process received unknown event maj [hec] min [hec].	A process can register to be notified when various events occur in the\n router. This message indicates that a process received an event it\n did not know how to handle.	-	"Copy the error message exactly as it appears and report it\n to your technical support representative."
<del>SCHED-3-THRASHING</del>	3-Error	Unknown message [hec] received ptr arg [hec] num arg [hec].	A process can register to be notified when various events occur in the\n router. This message indicates that a process received a message from\n another process that it does not know how to handle.	-	"Copy the error message exactly as it appears and report it\n to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SCHEDUNEXPCIDMESSAGE</del>	3-Error	Unknown message [hec] received ptr arg [hec] num arg [hec].	A process can register to be notified when various events occur in the\n\n router. This message indicates that a process received a message from\n\n another process that it does not know how to handle.	-	"Copy the error message exactly as it appears and report it\n\n to your technical support representative."
<del>SCHEDUNEXPCIDQUEUE</del>	3-Error	Queue event for unknown queue index [dec].	A process can register to be notified when various events occur in the\n\n router. This message indicates that a process received a queuing\n\n event for an unknown queue.	-	"Copy the error message exactly as it appears and report it\n\n to your technical support representative."
<del>SCHEDUNEXPCIDQUEUE</del>	3-Error	Queue event for unknown queue index [dec].	A process can register to be notified when various events occur in the\n\n router. This message indicates that a process received a queuing\n\n event for an unknown queue.	-	"Copy the error message exactly as it appears and report it\n\n to your technical support representative."
<del>SCHEDUNEXPCIDTIMER</del>	3-Error	Unknown timer expiration timer = [hec] type [dec].	A process can register to be notified when various events occur in the\n\n router. This message indicates that a process received a timer\n\n expiration event for an unknown timer.	-	"Copy the error message exactly as it appears and report it\n\n to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SCHEDUNEXHCHETIMER</del>	3-Error	Unknown timer expiration timer = [hec] type [dec].	A process can register to be notified when various events occur in the\n\n router. This message indicates that a process received a timer\n\n expiration event for an unknown timer.	-	"Copy the error message exactly as it appears and report it\n\n to your technical support representative."
<del>SCHEDNOPREMPT_CIXI</del>	4-Warning	[chars] is preempting [chars] without preemption context. Preemption is [chars] and [chars]. preempted_process_epc = 0x%p	This message indicates that the IOS scheduler is preparing to schedule a preemptive process but the preempted process does not have a preemption context allocated to it.	-	-
<del>SCHEDNOPREMPT_CIXI</del>	4-Warning	[chars] is preempting [chars] without preemption context. Preemption is [chars] and [chars]. preempted_process_epc = 0x%p	This message indicates that the IOS scheduler is preparing to schedule a preemptive process but the preempted process does not have a preemption context allocated to it.	-	-
SCHED4PROCESSTIME	4-Warning	Invalid argument [dec] msec for process_set_schedtime	This message indicates that there was an attempt to change the maximum time a process can run per scheduling to an invalid value. The value should range between 20msec to 200msec	<del>Debugging and Troubleshooting</del>	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SCHED4PROCESSTIME	4-Warning	Invalid argument [dec] msec for process_set_schedtime	This message indicates that there was an attempt to change the maximum time a process can run per scheduling to an invalid value. The value should range between 20msec to 200msec	<del>Developmental Software</del>	-
<del>SCHED5PREEMPTION</del>	5-Notice	Detected interrupts being disabled in preemption handler. schedflag = [dec] forkx = [chars] preempted process = [chars]	This message indicates that the interrupt enable bit is unexpectedly found to be disabled in preemption handler before servicing the ready to run preemptive processes.	-	"If this message recurs just report it your technical support " "representative. However the functionality is not impacted. "
<del>SCHED5PREEMPTION</del>	5-Notice	Detected interrupts being disabled in preemption handler. schedflag = [dec] forkx = [chars] preempted process = [chars]	This message indicates that the interrupt enable bit is unexpectedly found to be disabled in preemption handler before servicing the ready to run preemptive processes.	-	"If this message recurs just report it your technical support " "representative. However the functionality is not impacted. "
SCHED-7-WATCH	7-Debug	Attempt to [chars] uninitialized watched [chars] address [hec].	A processes can register to be notified when various events occur. This message indicates that an attempt was made to register for an event without first creating the data structure for that event.	-	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SCHED-7-WATCH	7-Debug	Attempt to [chars] uninitialized watched [chars] address [hec].	A processes can register to be notified when various events occur. This message indicates that an attempt was made to register for an event without first creating the data structure for that event.	-	LOG_SID_RECUR_ACTION
<del>SCDSER_HOCTAIBRCR</del>	0-Emergency	asr1k-infra-intrnl	Reloading[chars] due critical event[hex] in block[chars]/%d of serial bridge %d	"A critical serial bridge I/O event has occurred."	"The system automatically reloads the hardware component experiencing the error. If the problem persists
<del>SCDSER_HOCTAIBRCR</del>	0-Emergency	asr1k-infra-intrnl	Reloading[chars] due to critically high serial bridge error rate.	"A Serial Bridge has experienced a persistently high error rate. The condition is serious and the card must be reloaded. This could be due to a hardware or software driver defect."	"Copy the message exactly as it appears on the console or in the system log
<del>SCDSER_HOCTAIBRCR</del>	0-Emergency	asr1k-infra-intrnl	Kernel Module failed in [chars]	"A Serial Bridge has experienced a Init failure. The condition is serious and the card must be reloaded. This could be due to a hardware or software driver defect."	"Copy the message exactly as it appears on the console or in the system log
<del>SCDSER_HOCTAIBRCR</del>	2-Critical	asr1k-ether-lc	LEDA FPGA version does not meet minimum required version.[chars]	"LEDA FPGA minimum version requirement not met."	"Copy the message exactly as it appears on the console or in the system log

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SCOP</del> <del>SE</del> <del>BI</del> <del>CO</del> <del>NET</del>	5-Notice	asr1k-infra-intrnl	Block[chars]/%d of serial bridge %d had I/O event[hex]	"A serial bridge I/O event has occurred. This event is not serious but is logged for diagnostic purposes."	"No user action is required."
<del>SCOP</del> <del>SE</del> <del>BI</del> <del>CO</del> <del>NET</del>	5-Notice	asr1k-infra-intrnl	The[chars] event rate of%llu has exceeded the threshold of%llu on serial bridge %d interconnect %d	"A Serial Bridge has experienced a high event rate. This condition is not considered serious	-
SCP-3-BADVLAN	3-Error	Rx'd VLAN [dec] opcode 0x[hec] from the NMP which is not configured.	The NMP sent a config command for an unconfigured VLAN interface.	-	"Configure VLAN interface."
SCP-3-NOPROC	3-Error	Cannot create SCP process.	Insufficient internal resource available to create queue.	-	"Check available memory capacity on router."
SCP-3-NOQUEUE	3-Error	Cannot create SCP Rx/Tx queue.	Insufficient internal resource available to create queue.	-	"Check available memory capacity on router."
SCP-3-UNKMSG	3-Error	Unknown SCP message opcode 0x[hec] received.	The remote peer sent an SCP message we don't know about.	-	"Check software compatibility between peers."
<del>SCRIPT</del> <del>SA</del> <del>SCRIPT</del> <del>AI</del> <del>D</del>	3-Error	Script execution failed: [chars]	The script file execution encountered an error and failed.	script_install	"This message indicates an internal error in preparing the " "execution of the script. Usually another message with more " "details of the kind of failure is printed on the console. " "Please collect these details and forward to your Cisco " "technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SCRIPTS</del> <del>SCRIPT</del> <del>FAILED</del>	3-Error	Script execution failed: [chars]	The script file execution encountered an error and failed.	script_install	"This message indicates an internal error in preparing the " "execution of the script. Usually another message with more " "details of the kind of failure is printed on the console. " "Please collect these details and forward to your Cisco " "technical support representative."
<del>SCRIPTS</del> <del>SCRIPT</del> <del>INVALID</del>	3-Error	Script file format invalid: [chars]	The system was able to access and open the script file but file format doesn't contain the expected preamble or the filename doesn't contain the expected extension. The script execution failed as a result of this error.	script_install	"Ensure that the script file contains the expected preamble " "in order for it to be accepted as a sinitalation script."
<del>SCRIPTS</del> <del>SCRIPT</del> <del>INVALID</del>	3-Error	Script file format invalid: [chars]	The system was able to access and open the script file but file format doesn't contain the expected preamble or the filename doesn't contain the expected extension. The script execution failed as a result of this error.	script_install	"Ensure that the script file contains the expected preamble " "in order for it to be accepted as a sinitalation script."
<del>SCRIPTS</del> <del>SCRIPT</del> <del>UNABLE</del> <del>OPEN</del>	3-Error	Unable to open file [chars]	The script file cannot be opened.	script_install	"Check that the script location exists and the file can be accessed " "from the device that tries to access that file for execution." "this is most likely a setup issue."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SRINSAISBRUNAECHADIE</del>	3-Error	Unable to open file [chars]	The script file cannot be opened.	script_install	"Check that the script location exists and the file can be accessed " "from the device that tries to access that file for execution." "this is most likely a setup issue."
<del>SRINSAISBRUNAECHADIE</del>	3-Error	Unable to read the file [chars]	The script file cannot be read.	script_install	"Check that the script file can be read. " "This checking can be done independent of the device that is trying " "read this file."
<del>SRINSAISBRUNAECHADIE</del>	3-Error	Unable to read the file [chars]	The script file cannot be read.	script_install	"Check that the script file can be read. " "This checking can be done independent of the device that is trying " "read this file."
<del>SRINSAISBRUNAECHADIE</del>	3-Error	File is not a script file or not containing ASCII text: [chars]	The script file seems to contain non-ascii text or non-script text.	script_install	"The specified file has to be a script file e.g. TCL script file. " "Check the file URL that it points to a script file."
<del>SRINSAISBRUNAECHADIE</del>	3-Error	File is not a script file or not containing ASCII text: [chars]	The script file seems to contain non-ascii text or non-script text.	script_install	"The specified file has to be a script file e.g. TCL script file. " "Check the file URL that it points to a script file."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SCVIF2DB_ALLOC_FAIL	2-Critical	SCVIF pair db allocation failed	SCVIF pair database error. Memory chunk creation for SCVIF pair database has failed.	service-controller	"Check for accurate memory management. " "Perform memory leak checks " "and look for memory corruption causes. " "Execute 'show proc memory' command."
SCVIF2DB_ALLOC_FAIL	2-Critical	SCVIF pair db allocation failed	SCVIF pair database error. Memory chunk creation for SCVIF pair database has failed.	service-controller	"Check for accurate memory management. " "Perform memory leak checks " "and look for memory corruption causes. " "Execute 'show proc memory' command."
SCVIF2DB_DELETE_FAIL	2-Critical	SCVIF pair db entry delete for interface [chars] failed	SCVIF pair database error. Removal of entry from SCVIF database has failed.	service-controller	"Check for accurate memory management. " "Perform memory leak checks " "look for mamory corruption causes and " "check for correct database management. " "Execute 'show proc memory' command. " "
SCVIF2DB_DELETE_FAIL	2-Critical	SCVIF pair db entry delete for interface [chars] failed	SCVIF pair database error. Removal of entry from SCVIF database has failed.	service-controller	"Check for accurate memory management. " "Perform memory leak checks " "look for mamory corruption causes and " "check for correct database management. " "Execute 'show proc memory' command. " "

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SCVIF2DB_DESIROY_FAIL	2-Critical	SCVIF pair database destroy failed	SCVIF pair database error. Memory chunk destroy has failed for SCVIF pair database.	service-controller	"Check for accurate memory management. " "Perform memory leak checks " "and look for memory corruption causes. " "Execute show proc memory command."
SCVIF2DB_DESIROY_FAIL	2-Critical	SCVIF pair database destroy failed	SCVIF pair database error. Memory chunk destroy has failed for SCVIF pair database.	service-controller	"Check for accurate memory management. " "Perform memory leak checks " "and look for memory corruption causes. " "Execute show proc memory command."
SCVIF2DB_ENTRY_ALLOC_FAIL	2-Critical	SCVIF pair db entry allocation for interface [chars] failed	SCVIF pair database error. Memory chunk allocation for SCVIF pair database entry has failed.	service-controller	"Check for accurate memory management. " "Perform memory leak checks and " "look for memory corruption causes. " "Execute 'show proc memory' command."
SCVIF2DB_ENTRY_ALLOC_FAIL	2-Critical	SCVIF pair db entry allocation for interface [chars] failed	SCVIF pair database error. Memory chunk allocation for SCVIF pair database entry has failed.	service-controller	"Check for accurate memory management. " "Perform memory leak checks and " "look for memory corruption causes. " "Execute 'show proc memory' command."
SCVIF2DB_ENTRY_FREE_FAIL	2-Critical	SCVIF pair entry free failed	SCVIF pair database error. Memory chunk free of SCVIF pair database entry has failed.	service-controller	"Check for accurate memory management. " "Perform memory leak checks " "and look for memory corruption causes. " "Execute 'show proc memory' command."

<del>Facility-Severity-Mnemonic</del>	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SCVIF2DB_ENTRY_FREE_FAIL</del>	2-Critical	SCVIF pair entry free failed	SCVIF pair database error. Memory chunk free of SCVIF pair database entry has failed.	service-controller	"Check for accurate memory management. " "Perform memory leak checks " "and look for memory corruption causes. " "Execute 'show proc memory' command."
<del>SCVIF2DB_INSERT_FAIL</del>	2-Critical	SCVIF pair db entry add for interface [chars] failed	SCVIF pair database error. Insertion of a new entry into SCVIF pair database has failed.	service-controller	"Check for accurate memory management. " "Perform memory leak checks " "look for memory corruption causes " "verify correct database management. " "Execute 'show proc memory' command."
<del>SCVIF2DB_INSERT_FAIL</del>	2-Critical	SCVIF pair db entry add for interface [chars] failed	SCVIF pair database error. Insertion of a new entry into SCVIF pair database has failed.	service-controller	"Check for accurate memory management. " "Perform memory leak checks " "look for memory corruption causes " "verify correct database management. " "Execute 'show proc memory' command."
<del>SDB_UPDATE-2-LDP</del>	2-Critical	ERRMSG_NOFLAGS	-	-	-
<del>SDB_UPDATE-2-LDP</del>	2-Critical	ERRMSG_NOFLAGS	-	-	-
<del>SFLASH#EMCE#DISABLED</del>	1-Alert	SDFlash device disabled	SDFlash device is disabled from the system. Please enable it for correct operation of the switch.	-	LOG_STD_ACTION
<del>SFLASH#EMCE#ENABLED</del>	6-Information	SDFlash device enabled	SDFlash device is enabled in the system.	-	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SDH-4-SNCP	4-Warning	Protection-Group [node][chars] [chars]	There has been a protection switch on the protection group	-	"None - normal situation"
SDLC-2-ILLEGSTATE	2-Critical	[chars] illegal state for addr [node]x [chars][dec]	An internal SDLC state violation was detected.	-	LOG_SIDSHTTECH_ACTION
SDLC-2-NOMEMORY	2-Critical	No memory available: [chars]	The requested operation failed because of a low memory condition.	-	"Reduce other system activity to ease memory demands. If conditions\n\n warrant upgrade to a larger memory configuration."
SDLC-2-NOPOINTER	2-Critical	AW_SDLC_SEC with no sdllc_llc pointer.	An error condition occurred during SDLLC initiation.	-	"No action is required. The SDLLC session will restart without operator\n\n intervention."
SDLC-3-CONFIGERR	3-Error	[chars] addr [node]x Sent SNRM received SNRM. Check link station roles.	A hardware or software error occurred.	-	LOG_STD_ACTION
SDLC-3-DLU_ERROR	3-Error	[chars] DLU failed to close station [node]x before re-opening [chars]/[chars]	A hardware or software error occurred.	-	LOG_STD_ACTION
SDLC-3-NOINPIDB	3-Error	Input idb not set	This is a software error. A frame was given to the SDLC handler to\n\n process but the interface on which the frame arrived is not known.	-	LOG_SIDSHTTECH_ACTION
SDLC-3-NULLPK	3-Error	Interface [chars] NULL packet ptr rvr [dec] vs [dec] vr [dec]	An internal software error occurred in the router's SDLC processing\n\n system.	-	LOG_SIDSHTTECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SDLC-4-BADFRAME	4-Warning	[chars] Received bad SDLC [chars]frame address [node]x control [node]	A hardware or software error occurred.	-	LOG_STD_ACTION
SDLC-4-CTRLBAD	4-Warning	Interface [chars] Invalid control field	A bad SDLC frame was received.	-	"If this message recurs check the SDLC serial line and the devices\n\n attached to it."
SDLC-4-DROPPED	4-Warning	Dropped SDLC packet from SDLC hold queue	An SDLC frame had to be dropped from the output hold queue usually\n\n because of excessive congestion on the output link.	-	"If this message occurs frequently determine why your SDLC link is\n\n being overloaded with data and resolve the cause typically by either\n\n increasing bandwidth to your SDLC line or reducing the load on your\n\n link."
SDLC-4-FRAMEERR	4-Warning	Interface [chars] Frame error: CF [hex] VS [dec] [chars] VR [dec] Reason [hex]	A FRMR frame was received. This can be due to a noisy serial line an\n\n overloaded SDLC device or corrupted data.	-	"If this message recurs service the serial line and the devices\n\n attached to it."
SDLC-4-INFOBAD	4-Warning	Interface [chars] Info field not permitted	A bad SDLC frame was received.	-	"If this message recurs check the SDLC serial line and the\n\n devices attached to it."
SDLC-4-INVLDGRPCFG	4-Warning	Interface [chars] ignoring group-poll mismatch UPOLL [node]x	A hardware or software error occurred.	-	LOG_STD_ACTION
SDLC-4-INVNR	4-Warning	Interface [chars] Invalid NR value	A bad SDLC frame was received.	-	"If this message recurs check the SDLC serial line and the\n\n devices attached to it."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SDLC-4-NITOOBIG	4-Warning	Interface [chars] N1 too large	An information frame was received from the other end of the SDLC link\n\n that was larger than allowed with the N1 parameter on this link.	-	"Either increase the value of the N1 parameter for this interface on\n\n the router or reduce the size of the maximum information frame sent by\n\n the other end of the link."
SDLC-4-NOUA	4-Warning	[chars] addr [node]x received command [node]x in response to SNRM expected UA	The router received a frame other than a UA in response to a SNRM.	-	"Check the end station to see if the SNA stack is up and running."
SDLC-4-SDLC_ERR	4-Warning	SDLC_ERROR with no poll	A protocol error was detected on a secondary station but FRMR could\n\n not be sent because the station did not own the poll bit. This message\n\n indicates either poor line conditions or a faulty SDLC\n\n implementation.	-	"If this message recurs run traces on the SDLC line. Copy the error\n\n message exactly as it appears and report it to your technical support\n\n representative."
SDLC4XID_NOMATCH	4-Warning	[chars] XID mismatch for [node]x. CONNECTION REJECTED	-	-	"This is a security feature. Additional information is displayed to\n\n help trace the source of the rejected XID. If the message is\n\n undesirable simply remove the XID statement from the router\n\n configuration."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SDLC-5-INVL DGRPOLL	5-Notice	Interface [chars] not configured for group-poll frame received [node]x	An unnumbered poll UP was received with the wrong group poll frame command. Make sure the group poll address configured on the router matches the one configured in the physical unit macro	-	-
SDLC-6-XID_DISPLAY	6-Information	sa [enet] da [enet] ss [hec] ds [hec] [node] [node] [node] [node]	This message supplies the information for the received and rejected \n\ XID.	-	"See the 'SDLC6XID_NOMATCH' error message."
SDLC-6-XID_FORMAT	6-Information	Unsupported XID format received format [dec]	-	-	"See the 'SDLC6XID_NOMATCH' error message."
SDLLC-5-ACT_LINK	5-Notice	SDLLC: [chars] LINK address [node]x ACTIVATED: [chars]	An SDLLC media conversion session was activated.	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SDLLC-5-DACT_LINK	5-Notice	SDLLC: [chars] LINK address [node]x DEACTIVATED: [chars]	An SDLLC media conversion session was deactivated. If deactivation is\n\n a result of an error condition this message will include a reason.	-	"If the message does not include a description of an error the\n\n deactivation was normal and the message is for information only. If the\n\n message does include a description of an error begin problem analysis.\n\n Determine whether session loss is related to LLC2 timers by issuing the\n\n debug llc2-err command. If the problem is related to LLC2 timers\n\n consider using SDLLC with the local acknowledgment feature. Copy the\n\n error message exactly as it appears and report it to your technical\n\n support representative."
SDP3CONFIG_PIR_ERROR	3-Error	Received invalid config pointer from application. Unable to process.	The SDP library application has an invalid configuration pointer. The SDP library is therefore unable to handle the request that it received. The configuration of the application will not be as expected and SDP parsing errors may result even for valid SDPs.	voice-sdp	LOG_STD_ACTION



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SDP3CNFG_PIR_ERROR	3-Error	Received invalid config pointer from application. Unable to process.	The SDP library application has an invalid configuration pointer. The SDP library is therefore unable to handle the request that it received. The configuration of the application will not be as expected and SDP parsing errors may result even for valid SDPs.	voice-sdp	LOG_STD_ACTION
SDP3CNFG_PIR_ERROR	3-Error	Received invalid config pointer from application. Unable to process.	The SDP library application has an invalid configuration pointer. The SDP library is therefore unable to handle the request that it received. The configuration of the application will not be as expected and SDP parsing errors may result even for valid SDPs.	voice-sdp	LOG_STD_ACTION
SDP-3-INTERNAL	3-Error	[chars]	An internal software error has occurred.	voice-sdp	LOG_SIDSH_TECH_ACTION
SDP-3-INTERNAL	3-Error	[chars]	An internal software error has occurred.	voice-sdp	LOG_SIDSH_TECH_ACTION
SDP-3-INTERNAL	3-Error	[chars]	An internal software error has occurred.	voice-sdp	LOG_SIDSH_TECH_ACTION
SDP3SDP_PIR_ERROR	3-Error	Received invalid SDP pointer from application. Unable to process.	The SDP library application has an invalid SDP pointer. The SDP library is therefore unable to handle the request that it received. SDP parsing or build errors may result.	voice-sdp	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SDP3-SDP_PTR_ERROR	3-Error	Received invalid SDP pointer from application. Unable to process.	The SDP library application has an invalid SDP pointer. The SDP library is therefore unable to handle the request that it received. SDP parsing or build errors may result.	voice-sdp	LOG_STD_ACTION
SDP3-SDP_PTR_ERROR	3-Error	Received invalid SDP pointer from application. Unable to process.	The SDP library application has an invalid SDP pointer. The SDP library is therefore unable to handle the request that it received. SDP parsing or build errors may result.	voice-sdp	LOG_STD_ACTION
SDVT-2-IPC_FAILURE	2-Critical	SDVT-IPC message [chars] handler failed rc %u	An IPC message handler for the SDVT feature failed. This will cause the feature to not function.	cedge-appqoe	LOG_STD_ACTION
SDVT-2-IPC_INT_FAILED	2-Critical	SDVT-IPC message handler registration failure rc %u	Registering an IPC message handler for the SDVT feature failed. This will cause the feature to not function.	cedge-appqoe	LOG_STD_ACTION
SDVT-2-HEALTH_CHANGE	2-Critical	Service node [char]i changed state from [chars] => [chars] [node]for channel [chars]	Service node has changed health status\n	cpp-ucode	LOG_STD_ACTION
SDVT-2-HEALTH_DOWN	2-Critical	Service node [char]i is down for channel [chars]. Current Health: [chars] Previous Health: [chars]	Service node has changed status to Down\n	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SDVT-3-FEAT_DOWN	3-Error	SDVT-Invalid request [chars] [node]while feature is down	While the feature was not active an invalid request was received from another layer of the SDVT software stack.	cedge-appqoe	LOG_SID_RECUR_ACTION
SDVT-3-IPC_INVALID_MSG	3-Error	SDVT-Invalid request %u	We received an invalid message from another layer of the SDVT software stack.	cedge-appqoe	LOG_SID_RECUR_ACTION
SDVT-3-IPC_INVALID_IPC_LEN	3-Error	SDVT-Invalid IPC length [dec]:[dec] len [dec] flags 0x[hec] source [dec]	Invalid IPC message length	cedge-appqoe	LOG_STD_ACTION
SDVT-3-IPC_NORES	3-Error	SDVT-No space for the IPC reply size [node]request %u	For a request from upper SDVT software stack layers it was not possible to allocate space for a reply for the specified size.	cedge-appqoe	LOG_SID_RECUR_ACTION
SDVT-3-IPC_OPEN_REPLY	3-Error	SDVT-IPC Open Reply failed request %u	For a request from upper SDVT software stack layers it was not possible to open the reply buffer.	cedge-appqoe	"This is normally a software issue." LOG_SID_RECUR_ACTION
SDVT-3-IPC_SEND_FAILED	3-Error	SDVT-IPC [chars] [node]send failed %u	IPC message send failure	cedge-appqoe	LOG_STD_ACTION
SDVT-3-COND_DEBUG_FAILED	3-Error	Failed to initialize Conditional Debugging for SDVT	A non-fatal error occurred when attempting to Register/Initialize\n conditional debugging.	qfp-ucode	LOG_STD_ACTION
SDVT-5-SDVT_HEALTH_UP	5-Notice	Service node [char]i is up for channel [chars]. Current Health: [chars] Previous Health: [chars]	Service node has changed status to Green\n	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SDWAN</del> MAN_TUN_ID	3-Error	Auto-tunnel ID is running out now	All the vxlan auto-tunnel ID through the tunnel range was used no more id available	SDVXLAN_COMPONENT	"If the auto-tunnel ID is running out " "will need to config the auto-tunnel range to expand it"
<del>SDWAN</del> PROXY_INIT	2-Critical	QFP SDWAN Proxy IPC interface initialization failure result: [dec].	Cisco internal software error. QFP SDWAN Proxy initialization detected that the IPC interface initialization failed. QFP SDWAN proxy will not be functional while this condition exists.	qfp-sdwankeyword:sdwan	LOG_STD_ACTION
<del>SDWAN</del> PROXY_INIT	2-Critical	SDWAN - Failed to register IPC message handler result code [node]	QFP SDWAN feature failed to register an IPC message handler for communication with control plane. This will cause the feature not to function.	SDWAN_COMP_NAME	LOG_STD_ACTION
<del>SDWAN</del> PROXY_BDMG	3-Error	QFP SDWAN Proxy received bad length message type [dec]	Cisco internal software error. QFP SDWAN Proxy received a corrupted message from control plane. This message will be ignored.	qfp-sdwankeyword:sdwan	LOG_STD_ACTION
<del>SDWAN</del> PROXY_ALLOC	3-Error	QFP SDWAN Proxy [chars] message lost due to message buffer allocation failure.	Cisco internal software error. QFP SDWAN Proxy message processing detected a message buffer allocation failure. The message is lost as the result of this condition.	qfp-sdwankeyword:sdwan	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SWAN_PROXY_FAILED</del>	3-Error	QFP SDWAN Proxy [chars] message lost due to message sent failure result: [dec].	Cisco internal software error. QFP SDWAN Proxy message processing detected a message sent failure. The message is lost as the result of this condition.	qfp-sdwankeywords:sdwan	LOG_STD_ACTION
<del>SWAN_IPC_MEM_ERR</del>	3-Error	SDWAN IPC subtype: [dec]	Extending memory failed.	qfp-sdwankeywords:sdwan	LOG_STD_ACTION
<del>SWAN_IPC_MEM_ERR</del>	3-Error	SDWAN IPC subtype: [dec]	Requesting more memory failed.	qfp-sdwankeywords:sdwan	LOG_STD_ACTION
<del>SWAN_IPC_ERR</del>	3-Error	SDWAN - Failed to get [node]bytes space for IPC reply message	QFP ET-Analytics feature detected buffer allocation failure while sending reply to a message from another layer of SDWAN feature's software stack.	SDWAN_COMP_NAME	LOG_STD_ACTION
<del>SWAN_IPC_ERR</del>	3-Error	-	SDWAN Conditional Debugging Registration failed.	SDWAN_COMP_NAME	LOG_STD_ACTION
<del>SWAN_IPC_ERR</del>	3-Error	SDWAN - Received an invalid length IPC message	QFP SDWAN feature received an incorrect length of IPC message from another layer of SDWAN feature's software stack m_enum [dec] m_subtype [dec] m_len [dec] m_flags 0x[hec] m_source [dec].	SDWAN_COMP_NAME	LOG_STD_ACTION
<del>SWAN_IPC_ERR</del>	3-Error	SDWAN - Failed to send IPC message result code [dec]	QFP SDWAN feature failed to send IPC message to another layer of SDWAN feature's software stack.	SDWAN_COMP_NAME	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SDWANCOMPERR</del>	3-Error	SDWAN - Failed to open reply message part of IPC packet	QFP SDWAN feature failed to open message part of IPC packet while sending a reply to another layer of SDWAN feature's software stack.	SDWAN_COMP_NAME	LOG_STD_ACTION
<del>SDWANCOMPERR</del>	3-Error	SDWAN - Received an unknown type code [node]IPC message	QFP SDWAN feature received an unknown message from another layer of SDWAN feature's software stack.	SDWAN_COMP_NAME	LOG_STD_ACTION
<del>SDWANCOMPERR</del>	3-Error	-	SDWAN HSL add destination failed.	cpp-ucode	LOG_STD_ACTION
<del>SDWANCOMPERR</del>	3-Error	-	SDWAN HSL bind failed.	cpp-ucode	LOG_STD_ACTION
<del>SDWANCOMPERR</del>	3-Error	[dec]	SDWAN HSL bind template failed at given index.	cpp-ucode	LOG_STD_ACTION
<del>SDWANCOMPERR</del>	3-Error	-	SDWAN HSL creation failed.	cpp-ucode	LOG_STD_ACTION
<del>SDWANCOMPERR</del>	3-Error	-	SDWAN HSL enable failed.	cpp-ucode	LOG_STD_ACTION
<del>SDWANCOMPERR</del>	3-Error	-	SDWAN HSL modify configuration failed. Currently only support rec_timeout	cpp_ucode	LOG_STD_ACTION
<del>SDWANCOMPERR</del>	3-Error	-	SDWAN HSL modify destination failed.	cpp_ucode	LOG_STD_ACTION
<del>SDWANCOMPERR</del>	3-Error	-	SDWAN HSL pre send handler registration failed.	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SDWAN_PROXY_INVALID_MSG</del>	4-Warning	QFP SDWAN Proxy received invalid message type [dec]	Cisco internal software error. QFP SDWAN Proxy received an invalid message from control plane. This message will be ignored.	qfp-sdwankeywords:sdwan	LOG_STD_ACTION
<del>SDWAN_PROXY_INVALID_IP_LEN</del>	4-Warning	QFP SDWAN Proxy IPC invalid length [dec]:[dec] len [dec] flags 0x[hec] source [dec]	Cisco internal software error. QFP SDWAN Proxy received invalid IPC message length from control plane. This message will be ignored.	qfp-sdwankeywords:sdwan	LOG_STD_ACTION
<del>SDWAN_PROXY_INVALID_IP_LEN</del>	4-Warning	[dec]:[dec] len [dec] flags 0x[hec] source [dec]	Invalid SDWAN IPC message length.	cpp-ucode	LOG_STD_ACTION
SEC_LOGIN_QUEUE_MODE_ON	1-Alert	Still timeleft for watching failures is [node] secs [user: [chars]] [Source: [chars]] [localport: [node] [Reason: [chars]] [ACL: [chars]] at [chars]	Quiet Mode is ON. No request for connection is accepted other than allowed by the Access List if configured for the blocking period. Else an implicity *deny all* login's will be in force	os	"As all the requests from other sources are blocked check ACL and add" "any source addr. if needed."
SEC_LOGIN_QUEUE_MODE_ON	1-Alert	Still timeleft for watching failures is [node] secs [user: [chars]] [Source: [chars]] [localport: [node] [Reason: [chars]] [ACL: [chars]] at [chars]	Quiet Mode is ON. No request for connection is accepted other than allowed by the Access List if configured for the blocking period. Else an implicity *deny all* login's will be in force	os	"As all the requests from other sources are blocked check ACL and add" "any source addr. if needed."
SEC_LOGIN3INIT_FAILED	3-Error	Secure Login Initialization failed. [chars]	Initialization of Secure Login Subsystem failed	os	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SEC_LOGIN3INT_FAILED	3-Error	Secure Login Initialization failed. [chars]	Initialization of Secure Login Subsystem failed	os	-
SEC_LOGIN4LOGN_FAILED	4-Warning	Login failed [user: [chars]] [Source: [chars]] [localport: [node]] [Reason: [chars]] at [chars]	Invalid User Name or Password is given from terminal.	os	"A notification to indicate that login failed"
SEC_LOGIN4LOGN_FAILED	4-Warning	Login failed [user: [chars]] [Source: [chars]] [localport: [node]] [Reason: [chars]] at [chars]	Invalid User Name or Password is given from terminal.	os	"A notification to indicate that login failed"
SEC_LOGINWEB_LOGIN_FAILED	4-Warning	Login failed [user: [chars]] [Source: [chars]] [Reason: [chars]] at [chars]	Invalid User Name or Password is given from terminal for WEBUI.	os	"A notification to indicate that WEBUI login failed"
SEC_LOGINWEB_LOGIN_FAILED	4-Warning	Login failed [user: [chars]] [Source: [chars]] [Reason: [chars]] at [chars]	Invalid User Name or Password is given from terminal for WEBUI.	os	"A notification to indicate that WEBUI login failed"
SEC_LOGIN5LOGN_SUCCESS	5-Notice	Login Success [user: [chars]] [Source: [chars]] [localport: [node]] at [chars]	A successful login happened with the device.	os	"A notification that login succeeded."
SEC_LOGIN5LOGN_SUCCESS	5-Notice	Login Success [user: [chars]] [Source: [chars]] [localport: [node]] at [chars]	A successful login happened with the device.	os	"A notification that login succeeded."
SEC_LOGIN5QUETMDEOF	5-Notice	Quiet Mode is OFF because [chars] at [chars]	Quiet Mode is OFF. Router now operates in normal connection processing mode	os	"A notification that the device now operates in "normal connection processing mode and the reason why it switched "mode is also indicated with the notification."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SEC10N</del> QUIETMODEOFF	5-Notice	Quiet Mode is OFF because [chars] at [chars]	Quiet Mode is OFF. Router now operates in normal connection processing mode	os	"A notification that the device now operates in " "normal connection processing mode and the reason why it switched " "mode is also indicated with the notification."
<del>SEC10N</del> MBECONSUCCESS	5-Notice	Login Success [user: [chars]] [Source: [chars]] at [chars]	A successful login happened with the device.	os	"A notification that login succeeded."
<del>SEC10N</del> MBECONSUCCESS	5-Notice	Login Success [user: [chars]] [Source: [chars]] at [chars]	A successful login happened with the device.	os	"A notification that login succeeded."
SEC-2-NOOPT	2-Critical	Box secured no option on internal packet	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
SEC-2-NOTSEC	2-Critical	First opt in tcb not BASIC security	An internal software error occurred.	-	"If this message recurs contact your technical support\n\n representative."
SEC-2-SECINS	2-Critical	Security opt in tcb not SECINSERT	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
SEC-3-NOMAX	3-Error	No default for NLESO defined	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
<del>SEC4S</del> HELFCTRLRIELOPT	4-Warning	malformed option on v[rode][cha][cha][cha][dec] len [dec] [chars]	A packet containing shelf controller telnet options was malformed. Options were ignored or truncated.	-	LOG_SID_NO_ACTION
SEC-4-TOOMANY	4-Warning	Box secured too many options on internal packet	No room for all desired IP header options. Packet discarded.	-	"Configure for fewer IP header options."
SEC-6IPACCESSLOGDP	6-Information	list [chars] [chars] [chars] [node][chars]-> [node][dec]/[dec] [node]u packet[chars] [chars]	A packet matching the log criteria for the given access list was\n\n detected.	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SEC-6-IPACCESSLOGNP	6-Information	list [chars] [chars] [dec] [node][chars]-> [node][node]u packet[chars] [chars]	A packet matching the log criteria for the given access list was\n\ detected.	-	LOG_SID_NO_ACTION
SEC-6-IPACCESSLOGP	6-Information	list [chars] [chars] [chars] [node]dec [chars]-> [node]dec [node]u packet[chars] [chars]	A packet matching the log criteria for the given access list was\n\ detected.	-	LOG_SID_NO_ACTION
SEC-6-IPACCESSLOGRL	6-Information	access-list logging rate-limited or missed [dec] packet[chars]	Some packet matching logs were missed because the access list log \n\nmessages were rate-limited or no access list log buffers were available.	-	LOG_SID_NO_ACTION
SEC-6-IPACCESSLOGRP	6-Information	list [chars] [chars] [chars] [node][chars]-> [node][node]u packet[chars] [chars]	A packet matching the log criteria for the given access list was\n\detected.	-	LOG_SID_NO_ACTION
SEC-6-IPACCESSLOGS	6-Information	list [chars] [chars] [node][node]u packet[chars] [chars]	A packet matching the log criteria for the given access list was\n\ detected.	-	LOG_SID_NO_ACTION
SED-3-SED_ERR	3-Error	SED cmd error [chars]	This shows SED command script execution error	asr1k-iosd-infra	LOG_SID_NO_ACTION
SEND-5-LCON	5-Notice	ERRMSG_NOFLAGS	-	-	-
SEND-5-LCON	5-Notice	ERRMSG_NOFLAGS	-	-	-
SENSORMGR3NOMEM	3-Error	Sensor manger failed to allocate memory : [chars]	The sensor manager was not able to add a new threshold node to its database.	sensor-mgr	"TBD"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SEP-3-MEMORY	3-Error	[chars]	Sep subsystem has experienced a problem getting the required memory to complete this operation.	sep	"Check system memory for other memory allocation errors and contact Technical support for problem resolution. In the absence of IOS errors upgrading the memory in the network device may be required."
SEP-3-MEMORY	3-Error	[chars]	Sep subsystem has experienced a problem getting the required memory to complete this operation.	sep	"Check system memory for other memory allocation errors and contact Technical support for problem resolution. In the absence of IOS errors upgrading the memory in the network device may be required."
<del>SQOSYNCFIELDLN</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>SQOSYNCFIELDLN</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>SERDES</del> SRDES_CRCA_ERR	3-Error	asr1k-infra-intrnl	Critical error in FRU when	"A critical error was occurred. The condition is serious and the card must be reloaded. This could be due to bad or unknown hardware (chassis or modules). Chassis Manager could also initialize the Serdes library with incorrect input parameters."	"Copy the message exactly as it appears on the console or in the system log. Collect the output of show platform
SRDES5SERDES_NOICE	5-Notice	asr1k-infra-intrnl	from FRU	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SERIAL_INH\CLOCKRAIE	1-Alert	[chars]:Link has been brought [chars] due to clock rate change threshold configured = [node]received clock rate = %u	The received clock rate is changed from below the threshold\n\ configured to above or vice versa..	spa-4t	"Check the received clock rate from the provider end and the " " clockrate threshold configuration if the clock rate goes" " below the threshold configured interface is brought down"
SERIAL_INH\CLOCKRAIE	1-Alert	[chars]:Link has been brought [chars] due to clock rate change threshold configured = [node]received clock rate = %u	The received clock rate is changed from below the threshold\n\ configured to above or vice versa..	spa-4t	"Check the received clock rate from the provider end and the " "clockrate threshold configuration if the clock rate goes " "below the threshold configured interface is brought down"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SERIAL_12NI-3SPA_ERR	3-Error	SPA [dec]/[dec]: [chars] was encountered. Intr status: 0x[hec]\n	The SPA driver detected a Hardware error condition on the SPA card. This might result in improper operation.	-	

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
					<p>"The SPA driver has encountered a Hardware error on the SPA's SPI4 bus.</p> <p>" "Please power down and reseal the indicated SPA card.</p> <p>" "If the condition persists copy the error message exactly as " "it appears. Next research and attempt to resolve the issue using " "the SPA hardware troubleshooting documentation as well as the tools " "and utilities provided at " "<a href="http://www.cisco.com/800/81">http://www.cisco.com/800/81</a></p> <p>If you still " "require assistance open a case with the Technical Assistance Center " "via the Internet at " TAC_CASE_OPEN " or contact your Cisco technical support representative and provide " "the representative with the information you have gathered. Be sure to " "attach to your case the output of the</p> <pre>&lt;CmdBold&gt;show logging&lt;NoCmdBold&gt; " "&lt;CmdBold&gt;show monitor event-log spa all&lt;NoCmdBold&gt; and " "&lt;CmdBold&gt;show tech-support&lt;NoCmdBold&gt;</pre>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
					<p>commands your troubleshooting "logs and the specific error message."</p>
SERIAL_DN3SPI4_HW_ERR	3-Error	SPA [dec]/[dec]: [chars] was encountered.\n	The SPA driver detected a Hardware error condition on the SPA card. This might result in improper operation.	-	<p>"The SPA driver has encountered a Hardware error on the SPA's SPI4 bus." "Please power down and reseal the indicated SPA card. " "If the condition persists copy the error message exactly as " "it appears. Next research and attempt to resolve the issue using " "the SPA hardware troubleshooting documentation as well as the tools " "and utilities provided at " <a href="http://www.cisco.com/itd/tdsp/tdsp.html">http://www.cisco.com/itd/tdsp/tdsp.html</a> If you still " "require assistance open a case with the Technical Assistance Center " "via the Internet at " <a href="http://www.cisco.com/itd/tdsp/tdsp.html">http://www.cisco.com/itd/tdsp/tdsp.html</a> or contact " "your Cisco technical support representative. Be sure to provide the " "the information you have gathered and a 'show tech-support' to " "your support representative or attach it to your case in non-zipped " "plain text format .txt."</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SERIAL_12NI3SW_ERR	3-Error	[chars]: A software error was encountered at [chars]: [chars]\n	The SPA driver detected a software error condition on the SPA card. This might result in improper operation.	-	<p>"The SPA driver has encountered a software error."</p> <p>"Please power down and reseal the indicated SPA card.</p> <p>" "Copy the error message exactly as it appears and" "open a case with the Technical Assistance Center " "via the Internet at "</p> <p><a href="http://www.cisco.com">http://www.cisco.com</a> or contact " "your Cisco technical support representative. Be sure to provide the "</p> <p>"the information you have gathered and a 'show tech-support' to " "your support representative or attach it to your case in non-zipped "</p> <p>"plain text format .txt."</p>



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SERIAL_12NI-3-SW_ERR	3-Error	[chars]: A software error was encountered at [chars]: [chars]\n	The SPA driver detected a software error condition on the SPA card. This might result in improper operation.	spa-4t	"The SPA driver has encountered a software error." "Please power down and reseal the indicated SPA card." "Copy the error message exactly as it appears and "open a case with the Technical Assistance Center "via the Internet at "TAC_CASE_OPEN" or contact your Cisco technical support representative and provide "the representative with the information you have gathered. Be sure to "attach to your case the output of the <CmdBold>show logging<NoCmdBold> " "<CmdBold>show monitor event-log spa all<NoCmdBold> and " "<CmdBold>show tech-support<NoCmdBold> commands your troubleshooting "logs and the specific error message."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SERIAL_I2NI-3SW_ERR_1	3-Error	[chars]: A software error was encountered at [chars]: [chars] 0x[hec]\n	The SPA driver detected a software error condition on the SPA card. This might result in improper operation.	-	<p>"The SPA driver has encountered a software error."</p> <p>"Please power down and reseal the indicated SPA card.</p> <p>" "Copy the error message exactly as it appears and" "open a case with the Technical Assistance Center " "via the Internet at "</p> <p><a href="http://www.cisco.com/techsupport">http://www.cisco.com/techsupport</a></p> <p>or contact " "your Cisco technical support representative. Be sure to provide the "</p> <p>"the information you have gathered and a 'show tech-support' to " "your support representative or attach it to your case in non-zipped "</p> <p>"plain text format .txt."</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SERIAL_12N13SW_ERR_1	3-Error	[chars]: A software error was encountered at [chars]: [chars] 0x[hec]\n	The SPA driver detected a software error condition on the SPA card. This might result in improper operation.	spa-4t	"The SPA driver has encountered a software error." "Please power down and reseal the indicated SPA card." "Copy the error message exactly as it appears and "open a case with the Technical Assistance Center "via the Internet at "TAC_CASE_OPEN" or contact your Cisco technical support representative and provide "the representative with the information you have gathered. Be sure to "attach to your case the output of the <CmdBold>show logging<NoCmdBold> " "<CmdBold>show monitor event-log spa all<NoCmdBold> and " "<CmdBold>show tech-support<NoCmdBold> commands your troubleshooting "logs and the specific error message."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SERIAL_I2NI-3SW_ERR_2	3-Error	[chars]: A software error was encountered at [chars]: [chars] 0x[hec]/0x[hec]\n	The SPA driver detected a software error condition on the SPA card. This might result in improper operation.	spa-4t	"The SPA driver has encountered a software error." "Please power down and reseal the indicated SPA card." "Copy the error message exactly as it appears and "open a case with the Technical Assistance Center " via the Internet at " TAC_CASE_OPEN " or contact your Cisco technical support representative and provide " the representative with the information you have gathered. Be sure to "attach to your case the output of the <CmdBold>show logging<NoCmdBold> " "<CmdBold>show monitor event-log spa all<NoCmdBold> and " "<CmdBold>show tech-support<NoCmdBold> commands your troubleshooting " logs and the specific error message."
SERIAL_MBANALYZEFAILURE	3-Error	Failed to analyze object for slot [node][node]spa_type [node] [chars].	Failed to analyze an Interface Module object.	wolfeisland-sw	LOGSIDSHTTECHACTION
SERIAL_MCREATIONFAILURE	3-Error	Failed to create object for slot [node][node]spa_type [node]	Failed to create an Interface Module object.	wolfeisland-sw	LOGSIDSHTTECHACTION

<del>Facility-Severity-Mnemonic</del>	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SERIAL_M3PLUGN_INT</del>	3-Error	Plugin init failed for slot [node][node] Action: [chars].	Plugin init failed UEA	wolfeisland-sw	LOGSIDSHTTECHACI0N
<del>SERIAL_M3PLUGN_START</del>	3-Error	Plugin start failed for slot [node][node] Action: [chars]	Pointer to a UEA object is NULL.	wolfeisland-sw	LOGSIDSHTTECHACI0N
<del>SMRCDCKSNCEADRO</del>	3-Error	bad request - [chars] - from client - [chars]	An internal software error occurred.	os	"If this message recurs copy it exactly as it appears and report\n\ it to your technical support representative."
<del>SMRCDCKSNCEADRO</del>	3-Error	bad request - [chars] - from client - [chars]	An internal software error occurred.	os	"If this message recurs copy it exactly as it appears and report\n\ it to your technical support representative."
<del>SMRCDCKSNCEABOL</del>	3-Error	watched boolean creation failure. bool [chars]	An internal software error occurred.	os	"If this message recurs copy it exactly as it appears and report\n\ it to your technical support representative."
<del>SMRCDCKSNCEABOL</del>	3-Error	watched boolean creation failure. bool [chars]	An internal software error occurred.	os	"If this message recurs copy it exactly as it appears and report\n\ it to your technical support representative."
<del>SMRCDCKSNCEABAE</del>	3-Error	list creation failure	An internal software error occurred.	os	"If this message recurs copy it exactly as it appears and report\n\ it to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SIMRDI</del> OSKSN333KREAE	3-Error	list creation failure	An internal software error occurred.	os	"If this message recurs copy it exactly as it appears and report\n\n it to your technical support representative."
<del>SIMRDI</del> OSKSN333KREAE	3-Error	could not locate port [chars]	An internal software error occurred.	os	"If this message recurs copy it exactly as it appears and report\n\n it to your technical support representative."
<del>SIMRDI</del> OSKSN333KREAE	3-Error	could not locate port [chars]	An internal software error occurred.	os	"If this message recurs copy it exactly as it appears and report\n\n it to your technical support representative."
<del>SIMRDI</del> OSKSN333KREAE	3-Error	cannot create port [chars] due to [chars]	An internal software error occurred.	os	"If this message recurs copy it exactly as it appears and report\n\n it to your technical support representative."
<del>SIMRDI</del> OSKSN333KREAE	3-Error	cannot create port [chars] due to [chars]	An internal software error occurred.	os	"If this message recurs copy it exactly as it appears and report\n\n it to your technical support representative."
<del>SIMRDI</del> OSKSN333KREAE	3-Error	cannot open port [chars] due to [chars]	An internal software error occurred.	os	"If this message recurs copy it exactly as it appears and report\n\n it to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>S</del> <del>M</del> <del>R</del> <del>C</del> <del>L</del> <del>O</del> <del>K</del> <del>S</del> <del>_</del> <del>S</del> <del>E</del> <del>R</del> <del>V</del> <del>I</del> <del>T</del> <del>I</del> <del>O</del> <del>N</del>	3-Error	cannot open port [chars] due to [chars]	An internal software error occurred.	os	"If this message recurs copy it exactly as it appears and report\n\n it to your technical support representative."
<del>S</del> <del>M</del> <del>R</del> <del>C</del> <del>L</del> <del>O</del> <del>K</del> <del>S</del> <del>_</del> <del>S</del> <del>E</del> <del>R</del> <del>V</del> <del>I</del> <del>T</del> <del>I</del> <del>O</del> <del>N</del>	3-Error	cannot register port [chars] due to [chars]	An internal software error occurred.	os	"If this message recurs copy it exactly as it appears and report\n\n it to your technical support representative."
<del>S</del> <del>M</del> <del>R</del> <del>C</del> <del>L</del> <del>O</del> <del>K</del> <del>S</del> <del>_</del> <del>S</del> <del>E</del> <del>R</del> <del>V</del> <del>I</del> <del>T</del> <del>I</del> <del>O</del> <del>N</del>	3-Error	cannot register port [chars] due to [chars]	An internal software error occurred.	os	"If this message recurs copy it exactly as it appears and report\n\n it to your technical support representative."
<del>S</del> <del>M</del> <del>E</del> <del>C</del> <del>H</del> <del>A</del> <del>I</del> <del>N</del> <del>G</del> <del>_</del> <del>A</del> <del>L</del> <del>L</del> <del>O</del> <del>C</del> <del>A</del> <del>T</del> <del>I</del> <del>O</del> <del>N</del> <del>_</del> <del>F</del> <del>A</del> <del>I</del> <del>L</del> <del>U</del> <del>R</del> <del>E</del>	3-Error	Allocation of [chars] memory failed for Service Chaining feature	Allocation of memory by the Service Chaining feature microcode failed. The name of the memory chunk is specified in the message. This indicates a software failure	iosxe-servicechain	LOG_STD_ACTION
<del>S</del> <del>M</del> <del>E</del> <del>C</del> <del>H</del> <del>A</del> <del>I</del> <del>N</del> <del>G</del> <del>_</del> <del>R</del> <del>E</del> <del>P</del> <del>L</del> <del>I</del> <del>C</del> <del>A</del> <del>T</del> <del>I</del> <del>O</del> <del>N</del> <del>_</del> <del>F</del> <del>A</del> <del>I</del> <del>L</del> <del>U</del> <del>R</del> <del>E</del>	3-Error	Failed to register with generic packet replication for Service Chaining feature	Service Chaining initialization of packet replication registration failed.	iosxe-servicechain	LOG_STD_ACTION
<del>S</del> <del>M</del> <del>E</del> <del>C</del> <del>O</del> <del>N</del> <del>T</del> <del>R</del> <del>O</del> <del>L</del> <del>L</del> <del>E</del> <del>R</del> <del>_</del> <del>B</del> <del>U</del> <del>L</del> <del>K</del> <del>_</del> <del>S</del> <del>Y</del> <del>N</del> <del>C</del> <del>_</del> <del>F</del> <del>A</del> <del>I</del> <del>L</del> <del>U</del> <del>R</del> <del>E</del>	3-Error	rg [dec]	There was a failure such that service controller bulk sync did not occur	service-controller	LOG_STD_ACTION
<del>S</del> <del>M</del> <del>E</del> <del>C</del> <del>O</del> <del>N</del> <del>T</del> <del>R</del> <del>O</del> <del>L</del> <del>L</del> <del>E</del> <del>R</del> <del>_</del> <del>I</del> <del>N</del> <del>V</del> <del>A</del> <del>L</del> <del>I</del> <del>D</del> <del>_</del> <del>S</del> <del>T</del> <del>A</del> <del>T</del> <del>E</del> <del>_</del> <del>F</del> <del>A</del> <del>I</del> <del>L</del> <del>U</del> <del>R</del> <del>E</del>	3-Error	state [dec]	An invalid HA state was received from the HA infrastructure.	service-controller	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SMCROBKCREANERR</del>	3-Error	An error is detected when creating Service Group [node][chars]	An error was detected when creating a service group. The failure most likely occurred because of a software error.	ether-infra	"Please copy the error message exactly as it appears and report it " "to your technical support representative."
<del>SMCROBKDELEERR</del>	3-Error	An error is detected when deleting Service Group [node][chars]	An error was detected when deleting a service group. The failure most likely occurred because of the group is not configured or a software error.	ether-infra	"If the group is configured please copy the error message exactly " "as it appears and report it to your technical support " "representative."
<del>SMCROBKERRAERR</del>	3-Error	Service Group detected an internal error [chars] %u	An internal error was detected by the service group software.	ether-infra	"Please copy the error message exactly as it appears and report it " "to your technical support representative."
<del>SMCROBKCRSMIAD</del>	3-Error	Service Group IPC message transmission failure [chars]	An error was detected when transmitting an IPC message between route processor and linecard. The failure most likely occurred because of a software error. The message output identifies the type of error that occurred.	ether-infra	"This could be a transient error. If this error persists " "copy the error message exactly as it appears and report it " "to your technical support representative."
<del>SMCROBKCRSMIAD</del>	0-Emergency	Unit [chars] - failed to create data structures used for module-access	The CSU/DSU driver failed to allocate memory for its data structures.\n\n This is a catastrophic error. The system has crashed.	low-serial	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SRCEMODULEFWALRE</del>	0-Emergency	Unit [chars] - failed to download properly	The CSU/DSU driver detected a checksum error while downloading WIC firmware.	low-serial	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
<del>SRCEMODULELDRWALRE</del>	3-Error	Unit [chars] - WARNING - Loopdown of remote unit failed	A remote CSU is looping pings/test patterns back to the system. This\n\ error could be triggered if the user disabled loopbacks on the remote\n\ CSU after placing the remote CSU into remote loopback.	low-serial	"Execute a clear command on the remote CSU."
<del>SRCEMODULEACCERRR</del>	4-Warning	Unit [chars] reports register access error - [chars]	This message indicates that the T1 module supplied a bad register\n\ address. It might be due to having a new version of the module\n\ operating with an old Cisco IOS software image.	low-serial	"Update the Cisco IOS software image on the system. If this does not\n\ solve the problem copy the error message exactly as it appears and\n\ report it to your technical support representative."
<del>SRCEMODULEALARMARE</del>	4-Warning	Unit [chars] - Could not access alarm status - disabling alarm processing	The system issued an alarm interrupt but could not read the alarm\n\ status register from the module. This caused the system to disable\n\ alarm processing.	low-serial	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
<del>SRCEMODULEBADIME</del>	4-Warning	Unit [chars] - reports incompatible module type [dec] against router hw detect	A register read request returned an identity for a module which was\n\ not the same as the identity reported by the router hardware pinout.	low-serial	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SRM_MODULE_COMMAND_FAIL	4-Warning	Unit [chars] not ready/responding after register [dec] access command issued	The system did not receive a ready signal within the allotted time\n\n after writing to the command register.	low-serial	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
SRM_MODULE_BYTE_MOT	4-Warning	Unit [chars] - timed out while [chars] byte [dec] of [dec] length register [dec]	The module took more than two seconds to respond between bytes.	low-serial	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
SRM_MODULE_NOT_READY	4-Warning	Unit [chars] not ready for register access	The module was waiting for a ready status before executing a\n\n read/write request. The system reported a not ready status for 5\n\n seconds. This caused the module to terminate the read/write request.	low-serial	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
SRM_MODULE_OLD_IMAGE	4-Warning	Unit [chars] - router image older than module version - access errors may be seen	The Cisco IOS software image does not recognize the PROM software\n\n version number on the module. The system displays this message if the\n\n PROM has been upgraded to a new version but the Cisco IOS software\n\n image has not been upgraded.	low-serial	"Upgrade the Cisco IOS software image."
SRM_MODULE_REPAIR_RESET	4-Warning	Unit [chars] - giving up after [dec] repeated resets couldn't bring module up again	The software issued several clear service-module requests to the\n\n module. The module did not respond to these requests.	low-serial	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SNM</del> MODULECLOCK	4-Warning	Unit [chars] - module request overload - lock access timeout	The system employs a Cisco IOS scheduler semaphore object to ensure mutually exclusive access across software threads to the CSU/DSU. This message indicates that a thread had to wait for more than 5 seconds on this semaphore.	low-serial	"Copy the error message exactly as it appears and report it to your technical support representative."
<del>SNM</del> MODULESFAURE	4-Warning	Unit [chars] - failed to create reset process - non-default module configuration may be lost	To execute a reset the Cisco IOS software needs to initiate a separate process. The Cisco IOS software did not have sufficient memory to create this separate process. The module came up in an initialized state with the default configuration. The user defined configuration may have been lost.	low-serial	"Copy the error message exactly as it appears and report it to your technical support representative."
<del>SNM</del> MODULEKNOWALM	4-Warning	Unit [chars] reports unknown network alarms - alarm status reg = [hec]	A recent version of the module operating with an old Cisco IOS software image did not recognize an alarm condition.	low-serial	"Update the Cisco IOS software image on the system. If this does not solve the problem copy the error message exactly as it appears and report it to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SRC</del> MODULENOREADY	4-Warning	Unit [chars] not ready for next command	The module was waiting for the current request to be processed\n\ before sending the next request. The current request has been in progress\n\ for more than 3 seconds.	low-serial	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
<del>SRC</del> MODULENOPOWER	5-Notice	Unit [chars] - Remote loopback test cancelled	A hardware or software error occurred.	low-serial	"Copy the error message exactly as it appears and report it to your\n\ technical support representative for assistance."
<del>SRC</del> MODULELOOPBACK	5-Notice	Unit [chars] - Loopup of remote unit failed	This notification message indicates that the loopback on the remote\n\ unit failed. The failure may indicate that the network connection is\n\ broken or that loopbacks are disabled at the other side.	low-serial	"Check that the router is connected to the network. Enable "loopbacks"\n\ on the remote unit. If the problem persists copy the error message\n\ exactly as it appears and report it to your technical support\n\ representative."
<del>SRC</del> MODULELOOPBACK	5-Notice	Unit [chars] - Remote unit placed in loopback	This notification message indicates that the user executed a loopback\n\ command on the remote unit. The remote unit is now in loopback.	low-serial	"No action is required."
<del>SRC</del> MODULERESET	5-Notice	Reset of Unit [chars] issued	This message indicates that the module was reset.	low-serial	"No action is required."
<del>SRC</del> SNADOWNRESP	0-Emergency	iosxe-binos-utils	Error using service handle %p - invalid ownership (%p	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SERVICES-2-NOINIT	2-Critical	iosxe-binos-utils	Error initializing services:[chars]	"An application failed to initialize the core services library. The application will not be able to communicate with other modules on the system."	LOG_SID_RECUR_ACTION
SERVICES-2-NOACTIVE	2-Critical	iosxe-binos-utils	Error resolving active FRU:[chars]	"An application was not able to determine the active FRU. The application was likely started incorrectly."	LOG_SID_RECUR_ACTION
SERVICES-2-NOLOCAL	2-Critical	iosxe-binos-utils	Error resolving local FRU:[chars]	"An application was not able to determine its local FRU. The application was likely started incorrectly."	LOG_SID_RECUR_ACTION
SERVICES-2-NOSTANDBY	2-Critical	iosxe-binos-utils	Error resolving standby FRU:[chars]	"An application was not able to determine the standby FRU. The application was likely started incorrectly."	LOG_SID_RECUR_ACTION
SERVICES-3-NOCHASFS	3-Error	iosxe-binos-utils	Thread %p has no global chasfs context	"A multi-thread application is trying to incorrectly use the services library. Applications must follow thread confinement strategy with the services library. Each thread of the application must initialize private managed context of the service library."	"Copy the error message
SSONMGR-0-CONFIGCORRUPT	0-Emergency	polaris-smd	"Checksummed interface configuration corruption detected."	"Interface configuration field was modified unexpectedly."	"No action is required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SESSION_MGR_CONFIG_CORRUPT	0-Emergency	polaris-smd	"Checksummed interface configuration corruption detected."	"Interface configuration field was modified unexpectedly."	"No action is required."
SESSION_MGR_CONFIG_ERROR	4-Warning	polaris-smd	"Component ID %d not registered."	"Component ID %d not registered."	"No action is required."
SESSION_MGR_CONFIG_ERROR	4-Warning	polaris-smd	"Component ID %d not registered."	"Component ID %d not registered."	"No action is required."
SESSION_MGR_CONFIG_MOVE	4-Warning	polaris-smd	"%s MAC address (%s) from[chars] to[chars]"	"Move while not authenticated on old IDB"	"No action is required."
SESSION_MGR_CONFIG_MOVE	4-Warning	polaris-smd	"%s MAC address (%s) from[chars] to[chars]"	"Move while not authenticated on old IDB"	"No action is required."
SESSION_MGR-5-FAIL	5-Notice	polaris-smd	"Authorization failed or unapplied for client (%s) on Interface[chars] AuditSessionID[chars]"	"Authorization was unsuccessful."	"Authorization was unsuccessful for the client. Collect the smd logs and system console logs"
SESSION_MGR-5-FAIL	5-Notice	polaris-smd	"Authorization failed or unapplied for client (%s) on Interface[chars] AuditSessionID[chars]"	"Authorization was unsuccessful."	"Authorization was unsuccessful for the client. Collect the smd logs and system console logs"
SESSION_MGR_CONFIG_MOVE	5-Notice	polaris-smd	"MAC address (%s) moved from Interface[chars] to Interface[chars] AuditSessionID[chars]"	"Client has moved to a new interface without logging off on the previous one."	"No action is required."
SESSION_MGR_CONFIG_MOVE	5-Notice	polaris-smd	"MAC address (%s) moved from Interface[chars] to Interface[chars] AuditSessionID[chars]"	"Client has moved to a new interface without logging off on the previous one."	"No action is required."
SESSION_MGR_CONFIG_REPLACE	5-Notice	polaris-smd	"MAC address (%s) on Interface[chars] is replaced by MAC (%s) AuditSessionID[chars]"	"A new client has triggered a violation causing an existing client to be replaced"	"No action is required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SESSION_MGR&MACREPLACE	5-Notice	polaris-smd	"MAC address (%s) on Interface[chars] is replaced by MAC (%s) AuditSessionID[chars]"	"A new client has triggered a violation causing an existing client to be replaced"	"No action is required."
SESSION_MGR&SECURITYVIOLN	5-Notice	polaris-smd	"Security violation on the interface[chars]"	-	-
SESSION_MGR&SECURITYVIOLN	5-Notice	polaris-smd	"Security violation on the interface[chars]"	-	-
SESSION_MGR&5START	5-Notice	polaris-smd	"Starting '%s' for client (%s) on Interface[chars] AuditSessionID[chars]"	"Starting an authentication method"	"Message notification informing about the session manager client is being started to authenticate the endpoint attached to the interface"
SESSION_MGR&5START	5-Notice	polaris-smd	"Starting '%s' for client (%s) on Interface[chars] AuditSessionID[chars]"	"Starting an authentication method"	"Message notification informing about the session manager client is being started to authenticate the endpoint attached to the interface"
SESSION_MGR&5SUCCESS	5-Notice	polaris-smd	"Authorization succeeded for client (%s) on Interface[chars] AuditSessionID[chars]"	"Authorization was successful."	"Client connected to the switch has been successfully authorized by the session manager framework"
SESSION_MGR&5SUCCESS	5-Notice	polaris-smd	"Authorization succeeded for client (%s) on Interface[chars] AuditSessionID[chars]"	"Authorization was successful."	"Client connected to the switch has been successfully authorized by the session manager framework"
SESSION_MGR&VLANASSGN	5-Notice	polaris-smd	"VLAN %d assigned to Interface[chars] AuditSessionID[chars]"	"VLAN assignment to an interface for the session"	"No action is required."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SESSION_MGR/SMANASSGN</del>	5-Notice	polaris-smd	"VLAN %d assigned to Interface[chars] AuditSessionID[chars]"	"VLAN assignment to an interface for the session"	"No action is required."
<del>SESSION_MGR/SMEMPHOS</del>	7-Debug	polaris-smd	"Exhausted all authentication methods for client (%s) on Interface[chars] AuditSessionID[chars]"	"All available authentication methods have been tried"	"No action is required."
<del>SESSION_MGR/SMEMPHOS</del>	7-Debug	polaris-smd	"Exhausted all authentication methods for client (%s) on Interface[chars] AuditSessionID[chars]"	"All available authentication methods have been tried"	"No action is required."
SESSION_MGR/STOPPING	7-Debug	polaris-smd	"Stopping[chars] for client[chars] on Interface[chars] AuditSessionID[chars]"	"Stopping the current authentication method"	"No action is required."
SESSION_MGR/STOPPING	7-Debug	polaris-smd	"Stopping[chars] for client[chars] on Interface[chars] AuditSessionID[chars]"	"Stopping the current authentication method"	"No action is required."
SFF8472/INTERNAL_ERROR	3-Error	[chars]	The SFF8472 floating point subsystem encountered an internal\n software error. The error message contains text which can be used\n to help identify the nature of the problem.	-	LOG_SIDSHTECH_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SFF8472-2-NOMEM	2-Critical	Not enough memory available for [chars]	There has been a threshold violation as specified in the message.\n\n If the violation has occurred only during bootup/OIR/link up/down\n\n you may ignore the message. Otherwise the violations in optical\n\n tx/rx power are most likely due to incompatible/defective\n\n optical components or too long/short optical cables. It may also\n\n be due to faulty transceiver.	-	LOGS_IDSHTTECH_ACTION
SFF8472-3-INTERNAL_ERROR	3-Error	[chars]	The SFF8472 subsystem encountered an internal software\n\n error. The error message contains text which can be used\n\n to help identify the nature of the problem.	-	LOGS_IDSHTTECH_ACTION
SFF8472-3-READ_ERROR	3-Error	[chars]	There was an error reading digital optical monitoring information\n\n from the transceiver at the specified interface.	-	"Please try removing and reinserting the transceiver.\n\n If it still does not work please replace the transceiver."
SFF8472-3-UNKNOWN_EVENT	3-Error	Process received unknown event maj [hec] min [hec].	A process can register to be notified when various events occur in the\n\n router. This message indicates that a process received an event it\n\n did not know how to handle.	-	"Copy the error message exactly as it appears and report it\n\n to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SF</del> <u>SECURITY4DUPLICATE</u> <del>ESN</del>	4-Warning	SFP interface [chars] has the same serial number as another SFP interface	The SFP was identified as a Cisco SFP but its serial number matches that of another interface on the system.	firmware	"Cisco SFPs are assigned unique serial numbers. " "Verify that the SFP " "was obtained from Cisco or a supported vendor"
<del>SF</del> <u>SECURITY4DM</u> <del>BMATCH</del>	4-Warning	Identification check failed for SFP interface [chars]	The SFP was identified as a Cisco SFP but the system was unable to verify its identity	firmware	"Check the list of supported SFPs for this version " "of the system software. An upgrade may be required " "for newer SFPs. Otherwise verify that the SFP " "was obtained from Cisco or a supported vendor"
<del>SF</del> <u>SECURITY4SFP</u> <del>NIERR</del>	4-Warning	Internal error occurred in setup for SFP interface [chars]	The system could not allocate resources or had some other problem in the setup for the specified SFP interface.	firmware	"Reload the system. If the problem persists " "contact TAC."
<del>SF</del> <u>SECURITY4UNRECOGNIZED</u> <del>VENDOR</del>	4-Warning	SFP interface [chars] manufactured by an unrecognized vendor	The SFP was identified as a Cisco SFP but the system was unable to match its manufacturer with one on the known list of Cisco SFP vendors	firmware	"Check the list of supported SFPs for this version " "of the system software. An upgrade may be required " "for newer SFPs."
<del>SF</del> <u>SECURITY4NDA</u> <del>PCR</del> <del>ERR</del>	4-Warning	SFP interface [chars] has bad crc	The SFP was identified as a Cisco SFP but it does not have valid crc in the eeprom data.	firmware	"Check the list of supported SFPs for this version " "of the system software. An upgrade may be required " "for newer SFPs. Even if unrecognized the SFP " "may still operate properly perhaps with limited " "functionality."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SFP3EEPROM_DUP_ERR	3-Error	SFP on ports [chars] and [chars] have duplicate serial numbers	The GBIC/SFP was identified as a Cisco GBIC but its vendor id and serial number match that of another GBIC on the system.	-	"Report to Cisco tech support."
SFP3NOT_COMPATIBLE	3-Error	Detected for SFP module in [chars] module disabled	The SFP module for the interface specified in the error message is not compatible with the interface. As a result of the error the module is disabled.	-	"Replace the module with a compatible SFP."
SFP3NOT_SUPPORTED	3-Error	Detected for SFP module in [chars] module disabled	The SFP module for the interface specified in the error message is not a cisco supported module. As a result of the error the module is disabled.	-	"Replace the module with a cisco supported SFP."
SFP3SFP_UNINITIALIZED	3-Error	[chars] SFP inserted in port [dec] error status [dec]	SFP inserted initialization failed	cmnts-platform	"If not expected copy the error message exactly as it " "appears and report it to your technical support"
SFP-3-SW_ERR	3-Error	SFP Driver error: [chars] sfp [dec] errcode [dec]	Internal error in SFP driver	-	"Copy the error message exactly as it appears and report it to your" " technical support"
SFP-3-SW_I2C_ERR	3-Error	SFP Driver i2c error: [chars] sfp [dec] addr 0x[hec] errcode [dec]	i2c Access error to SFP device	cmnts-platform	"Copy the error message exactly as it appears and report it to your" " technical support"
SFP4EEPROM_CRC_ERR	4-Warning	EEPROM checksum error for SFP in [chars]	The SFP in the port specified in the error message has invalid EEPROM data.	-	"Remove the SFP from the specified port."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SFP4EEPROM_READ_ERR	4-Warning	Error in reading SFP serial ID in [chars]	Error when reading SFP type from EEPROM	-	"Please remove SFP from this Port"
SFP4EEPROM_SECURITY_ERR	4-Warning	SFP in [chars] failed security check	The SFP in the port specified in the error message has invalid EEPROM data.	-	"Remove the SFP from the specified port."
SFP-4-REMOVED	4-Warning	SFP module removed from [chars]	The online insertion and removal OIR facility detected the	-	LOG_SID_NO_ACTION
SFP-5-SFP_MISSING	5-Notice	[chars] SFP missing from port [dec]	SFP removed	cmts-platform	"If not expected copy the error message exactly as it " "appears and report it to your technical support"
SFP-5-SFP_OK	5-Notice	[chars] SFP inserted in port [dec]	SFP inserted	-	"If not expected copy the error message exactly as it" " appears and report it to your technical support"
SFP-6-INSERTED	6-Information	SFP module inserted in [chars]	The online insertion and removal OIR facility detected a	-	LOG_SID_NO_ACTION
SGBP-1-AUTHFAILED	1-Alert	Member [chars] failed authentication	This message is generated only when SGBP hellos or errors\n debugging is enabled. This indicates that an attempted\n peer connection ended in authentication failure. A peer may be\n misconfigured. Or this could indicate an attempted security\n breach.	-	"Check if the peer is correctly configured.\n If there is a chance your network is under attack obtain\n knowledgeable assistance. " LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SGBP-1-DIFFERENT	1-Alert	Rcv [chars]'s addr [node]is different from the hello's addr %i	The internally-configured address for an SGBP member does not match the address of the host that tried to authenticate as that member. The configuration is incorrect on either this system or the other member - they must agree.	-	"Determine which configuration is in error and fix it."
SGBP-1-DUPLICATE	1-Alert	Rcv Duplicate bundle [chars] is found on member [chars]	This message is generated only when SGBP hellos or errors debugging is enabled. This indicates that a duplicate bundle was received from the same peer more than once. The duplicate was discarded.	-	LOG_SID_RECUR_AION
SGBP-1-MISSCONF	1-Alert	Possible misconfigured member [chars] using %i	This message is generated only when SGBP hellos or error debugging is enabled. This indicates a configuration error. Either this router has an incorrect IP address listed for the peer or the peer is using an incorrect IP address.	-	"Find and correct the configuraton error."
SGBP-1-NOTAUTH	1-Alert	Rcv Connection request by non-authenticated member [chars]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SGBP-UNKNOWNHELLO	1-Alert	Rcv Hello message from non-group member using %i	This message is generated only when SGBP hellos or error\n debugging is enabled. An SGBP Hello message was received\n from a host that is not a member of the SGBP group\n and discarded.	-	-
SGBP-3-INVALID	3-Error	MQ message with [chars]	This message is generated only when SGBP error debugging is\n enabled. An invalid message was received and discarded.	-	"This probably indicates an error in network media or\n a peer which is generating erroneous packets."
SGBP-3-INVALIDADDR	3-Error	Stack group [chars] IP address %i	The current configuration does not allow a local IP address to be \n configured using <cmdBold>sgbp member <address>\n using a local IP address.	sgbp	"Do not configure <cmdBold>sgbp member <address>\n using a local IP address."
SGBP-3-INVALIDB	3-Error	[chars] for bundle \\'[chars]\' -- [chars]	An internal software error has occurred.	-	LOG_STD_ACTION
SGBP-3-INVFIELD	3-Error	[chars] field type [hex] has [chars] [dec] expected [dec]	This message indicates that an SGBP request from a peer\n contained invalid or corrupt data.	-	"Check the peer equipment or network media for any problems."
SGBP-3-PEERERROR	3-Error	Peer [node][chars] during \\'PB [chars]\' state for bundle [chars]	An internal software error has occurred.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SGBP-3-UNEXP	3-Error	MQ [chars] from [node]for query [dec]:[dec] bundle [chars] bid [dec] state [chars]	This message is generated only when SGBP error debugging is\n\n enabled. The SGBP connection has entered an unexpected state\n\n possibly due to a software error.	-	LOG_STD_ACTION
SGBP-3-UNKNOWN	3-Error	[node]not known	This message is generated only when SGBP error debugging is\n\n enabled. An SGBP connection was attempted by a host which was\n\n not recognized as a peer. The connection was not accepted.	-	"Depending on the network topology and firewalling SGBP connection\n\n attempts from a non-peer host could indicate probing and attempts to\n\n breach security. If there is a chance your network is under\n\n attack obtain knowledgeable assistance. " LOG_STD_ACTION
SGBP3UNKNOWNEVENT	3-Error	Event [hex] from peer at %i	This message is generated only when SGBP error debugging is\n\n enabled. An invalid event occurred which probably\n\n indicates an internal software error.	-	"LOG_STD_ACTION"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SGBP3-UNKNOWNPEER	3-Error	Event [hex] from peer at %i	This message is generated only when SGBP error debugging is\n\n enabled. An SGBP event came from a network host which was not\n\n recognizable as an SGBP peer. The event was discarded.	-	"Check if a network media error could have corrupted the address\n\n or if peer equipment is malfunctioning to generate corrupted\n\n packets.\n\n Depending on the network topology and firewalling SGBP packets\n\n from a non-peer host could indicate probing and attempts to\n\n breach security. If there is a chance your network is under\n\n attack obtain knowledgeable assistance. " LOG_STD_ACTION
SGBP-5-ARRIVING	5-Notice	New peer event for member [chars]	This message is generated only when SGBP event debugging is\n\n enabled. An SGBP peer joined the group.	-	LOG_SID_NO_ACTION
SGBP-5-LEAVING	5-Notice	Member [chars] leaving group [chars]	This message is generated only when SGBP event debugging is\n\n enabled. An SGBP peer has left the group.	-	LOG_SID_NO_ACTION
SGBP-5-SHUTDOWN	5-Notice	[chars]	This message is generated only when SGBP event debugging is\n\n enabled. A process involved in SGBP was terminated\n\n upon completion of its work.	-	LOG_SID_NO_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SGBP-5-STARTUP	5-Notice	[chars]	This message is generated only when SGBP event debugging is\n enabled. An process involved in SGBP was started.	-	LOG_SID_NO_ACTION
SGBP-7-ACTIVE	7-Debug	Member [chars] State -> Active	This message is generated only when SGBP errors or events\n debugging is enabled. This indicates that a link to another\n SGBP member has completed the interactions to set it up and is\n now entering the active state.	-	LOG_SID_NO_ACTION
SGBP-7-AUTHOK	7-Debug	Member [chars] State -> AuthOK	This message is generated only when SGBP errors or events\n debugging is enabled. A message was received from another SGBP\n member indicating that an authentication attempt to that member\n succeeded.	-	LOG_SID_NO_ACTION
SGBP-7-CANCEL	7-Debug	Local query #[dec]:[dec] for bundle [chars]	This message is generated only when SGBP query debugging is\n enabled. It provides information about queries in progress.	-	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SGBP-7-CHALLENGE	7-Debug	Send Hello Challenge to [chars] group [chars]	This message is generated only when SGBP hellos debugging\n is enabled. This indicates that an authentication challenge\n was sent to a peer.	-	LOG_SID_NO_ACTION
SGBP-7-CHALLENGED	7-Debug	Rcv Hello Challenge message from member [chars] using %i	This message is generated only when SGBP hellos debugging\n is enabled. This indicates that an authentication challenge\n was received from a peer.	-	LOG_SID_NO_ACTION
SGBP-7-CLOSE	7-Debug	Closing pipe for member [chars]	This message is generated only when SGBP event debugging is\n enabled. An interprocess communication link was closed.	-	LOG_SID_NO_ACTION
SGBP-7-DONE	7-Debug	Query #[dec] for bundle [chars] count [dec] master is [chars]	This message is generated only when SGBP event debugging is\n enabled. It indicates that a peer timed out while closing a\n query. The connection has been dropped.	-	"Check the peer equipment and network media for problems."
SGBP-7-DUPL	7-Debug	Duplicate local query #[dec] for [chars] count [dec] ourbid [dec]	This message is generated only when SGBP query debugging is\n enabled. It provides information about queries in progress.	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SGBP-7-EQUAL	7-Debug	[dec] equal highest bids randomly select bid# [dec]	This message is generated only when SGBP query debugging is\n\n enabled. It provides information about queries in progress.	-	LOG_SID_NO_ACTION
SGBP-7-HANGUP	7-Debug	I am a forward-only member can't forward bundle [chars] hangup	This message is generated only when SGBP query event and/or\n\n error debugging is enabled. This indicates a routine change of\n\n role for the router in its SGBP interactions with its peers.	-	LOG_SID_NO_ACTION
SGBP-7-KEEPALIVE	7-Debug	Sending Keepalive to [chars] retry=[dec]	This message is generated only when SGBP hellos debugging is enabled.\n\n It indicates that a keepalive message was send to an SGBP member.	-	LOG_SID_NO_ACTION
SGBP-7-KEEPALIVE_TIMEOUT	7-Debug	Keepalive timeout on [chars]	This message is generated only when SGBP hellos debugging is enabled.\n\n It indicates that keepalive messages were not answered so the pipe\n\n to an SGBP member has been closed.	-	LOG_SID_NO_ACTION
SGBP-7-MQ	7-Debug	[chars] [hex] for query [dec]:[dec] bundle [chars] bid [dec] len [dec]	This message is generated only when SGBP error debugging is\n\n enabled. This message indicates that an SGBP query has been\n\n received.	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SGBP-7-MQB	7-Debug	\tBundle: [chars]\tState: [chars]\tOurBid: [node]d	This message is part of a list of debug states displayed at the\n\n request of the operator.	-	LOG_SID_NO_ACTION
SGBP-7-NEWL	7-Debug	Local query #[dec] for [chars] count [dec] ourbid [dec]	This message is generated only when SGBP query debugging is\n\n enabled. It provides information about queries in progress.	-	LOG_SID_NO_ACTION
SGBP-7-NEWP	7-Debug	Peer query #[dec] for [chars] count [dec] peerbid [dec] ourbid [dec]	This message is generated only when SGBP query debugging is\n\n enabled. It provides information about queries in progress.	-	LOG_SID_NO_ACTION
SGBP-7-NORESP	7-Debug	Failed to respond to [chars] group [chars] may not have password	An authentication challenge was received but there was no\n\n information available to respond to it. This probably\n\n indicates a configuration error a missing password.	-	"Refer to the documentation to configure a username\n\n with the same name as the SGBP group."
SGBP-7-PB	7-Debug	\t[node]\tState: [chars]\tBid: [node]d Retry: [dec]	This message is part of a list of debug states displayed at the\n\n request of the operator.	-	LOG_SID_NO_ACTION
SGBP-7-RCVD	7-Debug	MQ [chars] from [node]for query [dec]:[dec] bundle [chars] bid [dec] prot[chars]	This message is generated only when SGBP message debugging is\n\n enabled. It indicates that an SGBP packet was received.	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SGBP-7-RCVINFO	7-Debug	Received Info Addr = [node]Reference = [hex]	This message is generated only when SGBP hellos debugging is enabled.\n\n It indicates that data was received by a listener process.	-	LOG_SID_NO_ACTION
SGBP-7-RESPONSE	7-Debug	Send Hello Response to [chars] group [chars]	This message is generated only when SGBP hellos debugging\n\n is enabled. This indicates that a response to an authentication\n\n challenge was sent to a peer.	-	LOG_SID_NO_ACTION
SGBP-7-RESPONSED	7-Debug	Rcv Hello Response message from member [chars] using %i	This message is generated only when SGBP hellos debugging\n\n is enabled. This indicates that a response to an authentication\n\n challenge was received from a peer.	-	LOG_SID_NO_ACTION
SGBP-7-SENDAUTHOK	7-Debug	Send Hello Authentication OK to member [chars] using %i	This message is generated only when SGBP hellos debugging is enabled.\n\n A message was send or re-sent to another SGBP member indicating\n\n that an authentication attempt from that member succeeded.	-	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SGBP-7-SENDINFO	7-Debug	Send Info Addr to [chars]	This message is generated only when SGBP hellos debugging is enabled.\n\n It indicates that data was sent by the listener process in response\n\n to received data.	-	LOG_SID_NO_ACTION
SGBP-7-SENT	7-Debug	MQ [chars] to [node]for query [dec]:[dec] bundle [chars] bid [dec] prot[chars] len [dec]	This message is generated only when SGBP message debugging is\n\n enabled. It indicates that an SGBP packet was sent.	-	LOG_SID_NO_ACTION
SGBP-7-WAITINFO	7-Debug	Member [chars] State -> WaitInfo	-	-	-
<del>SGCP</del> INTERNAL_CRITICAL	2-Critical	[chars]	The SGCP subsystem encountered an internal software\n\n error. The error message contains text which can be used\n\n to help identify the nature of the problem.	-	LOG_SID_SH_TECH_ACTION
<del>SGCP</del> INTERNAL_CRITICAL	2-Critical	[chars]	The SGCP subsystem encountered an internal software\n\n error. The error message contains text which can be used\n\n to help identify the nature of the problem.	-	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SGCP3INTERNAL_ERROR	3-Error	[chars]	The SGCP subsystem encountered an internal software\n\n error. The error message contains text which can be used\n\n to help identify the nature of the problem.	-	LOG_SID_SH_TECH_ACTION
SGCP3INTERNAL_ERROR	3-Error	[chars]	The SGCP subsystem encountered an internal software\n\n error. The error message contains text which can be used\n\n to help identify the nature of the problem.	-	LOG_SID_SH_TECH_ACTION
SGCP4INTERNAL_WARNING	4-Warning	[chars]	The SGCP subsystem encountered an internal software\n\n error. The error message contains text which can be used\n\n to help identify the nature of the problem.	-	LOG_SID_SH_TECH_ACTION
SGCP4INTERNAL_WARNING	4-Warning	[chars]	The SGCP subsystem encountered an internal software\n\n error. The error message contains text which can be used\n\n to help identify the nature of the problem.	-	LOG_SID_SH_TECH_ACTION
SGMPACL_NAME_TOO_LONG	3-Error	The pacl name [chars]-[chars] is too long it exceeds the maximum length	Too many acl entries have made the pacl name exceed the maximum supported length	policy	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SM</del> POLICY_CIX_ACTIVE	3-Error	Active policy context [node]has bad magic [node]	The magic number in the active policy context is wrong.	policy	LOG_STD_ACTION
<del>SM</del> POLICY_CIX_BOND	3-Error	Policy context [node]has bad magic [node]	The magic number in the policy context is wrong.	policy	LOG_STD_ACTION
<del>SM</del> POLICY_RULE_CONFIG_ERR	3-Error	Service [chars] is configured incorrectly	In policy rule the service is configured incorrectly then a service-failed event will be thrown.	policy	LOG_STD_ACTION
SHDSL-1-EFM_BOND	1-Alert	[chars] CPE-CO configuration mismatch detected for link:[dec].	If CPE is configured in efm bonding and CO is configured in plain 2wire then link will come-up in plain 2-wire. Since CPE is configured in efm bonding CPE will ignore link up event	-	"Correct either CPE or CO's configuration"
SHDSL-1-FWDNLD	1-Alert	[chars] [chars].	An attempt to download firmware for SHDSL card failed. This interface cannot be used.	-	LOG_STD_ACTION
SHDSL-1-INFO	1-Alert	SHDSL[dec]/[dec]/[dec]: [chars].	Info on SHDSL card.	-	LOG_STD_ACTION
SHDSL-1-INIT	1-Alert	SHDSL[dec]/[dec]/[dec]: [chars].	An attempt to initialize the SHDSL NIM failed. This module cannot be used	-	LOG_STD_ACTION
SHDSL-1-NGIO_DROP	1-Alert	Command dropped since phy re-init is in progress.	If ngio_drop_messages is set then the messages are dropped in host	-	"Wait till the phy reinit is complete"
SHDSL-1-TCLAYER	1-Alert	SHDSL[dec]/[dec]/[dec]: [chars] [dec].	if CPE-CO modeATM/EFM configuration is improper	-	"Change the modeATM to EFM or EFM to ATMconfiguration"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SHDSL3-EFM_FRAME_SIZE	3-Error	[chars] [chars].	An attempt to change the maximum frame size in EFM bonding scenario has failed.	-	LOG_STD_ACTION
SHDSL-3-FIRMWARE	3-Error	[chars] [chars]	Error occurred in the SHDSL module firmware.	-	LOG_STD_ACTION
SHDSL-3-NOMEM	3-Error	SHDSL [chars] malloc failed : out of memory	The router does not have enough memory installed to run this SHDSL feature	-	LOG_STD_ACTION
SHDSL3-PHY_FW_DOWNLOAD	3-Error	[chars] [chars] could be incomplete or corrupted or not present in [chars]	Error occurred in the SHDSL Phy firmware download.	-	"Use correct firmware package file"
SHDSL-4-ERRORINT	4-Warning	Error interrupt: [chars] received	A spurious event happened for the SHDSL card.	-	LOG_STD_ACTION
SHDSL-5-DYING_GASP	5-Notice	Power failure at CPE detected at link no [dec].	CPE has gone down because of power failure.	-	LOG_SID_NO_ACTION
SHDSL-6-DSLGROUPDOWN	6-Information	[chars] dsl-group [dec] state changed to [chars].	DSL Group state is changed.	-	LOG_SID_NO_ACTION
SHDSL-6-EFM_ACT_LINK_CHANGE	6-Information	[chars] EFM Group [dec] has [dec] active links active link bitmap is [hex].	Active Links were added or removed from the Group changing its bandwidth.	-	LOG_SID_NO_ACTION
SHDSL-6-EFM_LINK_CHANGE	6-Information	[chars] EFM Link[dec] bandwidth is changed.	SHDSL link is trained to a different rate EFM bonding group.	-	LOG_SID_NO_ACTION
SHDSL-6-PHY_FW_DOWNLOAD	6-Information	[chars] [chars] [chars]	Info about status of SHDSL Phy firmware download.	-	LOG_SID_NO_ACTION
SHDSL-3-INTERNAL_SOCKET_OPEN	3-Error	socket open failed	An internal software error occurred.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SHLF5AUTH_FAILED</del>	5-Notice	MD5 digest does not match SDP packet received from [node]rejected	A SDP hello packet was received from shelf which is not trusted.	-	"Either specify the correct SDP password and/or destination on the\n\n shelf from which this message was received"
<del>SHLFHLOPROCESSSTART</del>	6-Information	Shelf hello process has started.	This is an informational message only. An internal system controller\n\n process was started.	-	"Informational messages can be disabled by changing logging level."
<del>SHLFHLOPROCESSSTOP</del>	6-Information	Shelf hello process has been stopped.	This is an informational message only. An internal system controller\n\n process completed its work.	-	"Informational messages can be disabled by changing logging level."
<del>SHLFCNTRLRISABLED</del>	6-Information	Configured via system controller located at %i	This is an informational message only. Configuration information\n\n was received from a system controller.	-	"Informational messages can be disabled by changing logging level."
<del>SHLFCNTRLRSTANDBY</del>	2-Critical	Failed to copy the shell init file [chars] to standby	If the shell init file is not copied to standby the shell init file CLI will not be applied to maintain the consistency between active and standby.	parser	"Try manually copy a file to standby to see if it's" " a filesystem issue. It could be a space issue in the" " standby disk"
<del>SHLFCNTRLRSTANDBY</del>	2-Critical	Failed to copy the shell init file [chars] to standby	If the shell init file is not copied to standby the shell init file CLI will not be applied to maintain the consistency between active and standby.	parser	"Try manually copy a file to standby to see if it's" " a filesystem issue. It could be a space issue in the" " standby disk"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SHELL_ISSU2GET_BUFFER	2-Critical	Shell ISSU client failed to get buffer for message. Error: [dec] [chars]	The Shell ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	parser	"show logging and show checkpoint client"
SHELL_ISSU2GET_BUFFER	2-Critical	Shell ISSU client failed to get buffer for message. Error: [dec] [chars]	The Shell ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	parser	"show logging and show checkpoint client"
SHELL_ISSU-2-INIT	2-Critical	Shell ISSU client initialization failed to [chars]. Error: [dec] [chars]	The Shell ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	parser	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SHELL_ISSU-2-INIT	2-Critical	Shell ISSU client initialization failed to [chars]. Error: [dec] [chars]	The Shell ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	parser	LOG_STD_ACTION
<del>SHELL_ISSU-2-INIT</del>	2-Critical	Failed to add trigger to the re-apply queue. Trigger: [chars] Env: [chars]	Triggers that failed to get applied during ISSU must be saved and then re-applied after ISSU completes.	parser	"Manually re-apply the trigger after ISSU completes"
<del>SHELL_ISSU-2-INIT</del>	2-Critical	Failed to add trigger to the re-apply queue. Trigger: [chars] Env: [chars]	Triggers that failed to get applied during ISSU must be saved and then re-applied after ISSU completes.	parser	"Manually re-apply the trigger after ISSU completes"
SHELL_ISSU-2-INIT	2-Critical	Shell ISSU client failed to send negotiation message. Error: [dec] [chars]	The Shell ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	parser	"show logging and show checkpoint client"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SHL</del> <del>ISS</del> <del>ND</del> <del>NEG</del> <del>AHD</del>	2-Critical	Shell ISSU client failed to send negotiation message. Error: [dec] [chars]	The Shell ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	parser	"show logging and show checkpoint client"
<del>SHL</del> <del>ISS</del> <del>ON</del> <del>NEG</del> <del>ASRT</del>	2-Critical	Failed to start Shell ISSU session negotiation. Error: [dec] [chars]	The Shell ISSU client failed to start session negotiation. If a problem occurs with the ISSU session start the standby device cannot be brought up properly.	parser	"show issu session <client_id>"
<del>SHL</del> <del>ISS</del> <del>ON</del> <del>NEG</del> <del>ASRT</del>	2-Critical	Failed to start Shell ISSU session negotiation. Error: [dec] [chars]	The Shell ISSU client failed to start session negotiation. If a problem occurs with the ISSU session start the standby device cannot be brought up properly.	parser	"show issu session <client_id>"
<del>SHL</del> <del>ISS</del> <del>ON</del> <del>REG</del> <del>CSRV</del>	2-Critical	Shell ISSU client failed to register session information. Error: [dec] [chars]	The Shell ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	parser	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SHL_ISSN_RECV	2-Critical	Shell ISSU client failed to register session information. Error: [dec] [chars]	The Shell ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	parser	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
SHL_ISSN_WD_SESSION	3-Error	Shell ISSU client does not have a valid registered session.	The Shell ISSU client does not have a valid registered session.	parser	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
SHL_ISSN_WD_SESSION	3-Error	Shell ISSU client does not have a valid registered session.	The Shell ISSU client does not have a valid registered session.	parser	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
SHL_ISSMSG_NOTCK	3-Error	Shell ISSU client 'Message Type [dec]' is not compatible	The Shell ISSU client received an incompatible message from the peer device. The message cannot be processed.	parser	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
SHL_ISSMSG_NOTCK	3-Error	Shell ISSU client 'Message Type [dec]' is not compatible	The Shell ISSU client received an incompatible message from the peer device. The message cannot be processed.	parser	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SHELL_ISSU3MSG_SIZE	3-Error	Shell ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The Shell ISSU client failed to calculate the MTU for the specified message. The Shell ISSU client is not able to send the message to the standby device.	parser	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
SHELL_ISSU3MSG_SIZE	3-Error	Shell ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The Shell ISSU client failed to calculate the MTU for the specified message. The Shell ISSU client is not able to send the message to the standby device.	parser	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
SHELL_ISSU3UNREG_SRV	3-Error	Shell ISSU client failed to unregister session information. Error: [dec] [chars]	The Shell ISSU client failed to unregister session information.	parser	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
SHELL_ISSU3UNREG_SRV	3-Error	Shell ISSU client failed to unregister session information. Error: [dec] [chars]	The Shell ISSU client failed to unregister session information.	parser	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
SHMWN3FREE_FAILURE	3-Error	Failure while freeing memory in function [chars]	An attempt was made to free memory that has already been freed or is not within the address space of the current process	OS	"LOG_STD_ACTION "
SHMWN3FREE_FAILURE	3-Error	Failure while freeing memory in function [chars]	An attempt was made to free memory that has already been freed or is not within the address space of the current process	OS	"LOG_STD_ACTION "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SHMWN6</del> AIOC_FAILURE	6-Information	Insufficient memory	There was a failure while returning physical memory to the system	OS	"LOG_STD_ACTION"
<del>SHMWN6</del> AIOC_FAILURE	6-Information	Insufficient memory	There was a failure while returning physical memory to the system	OS	"LOG_STD_ACTION"
<del>SHMWN6</del> CORE_NOT_ENABLED	6-Information	In function [chars] The core has not been enabled to get more physical memory	The core has not been enabled	OS	"LOG_STD_ACTION"
<del>SHMWN6</del> CORE_NOT_ENABLED	6-Information	In function [chars] The core has not been enabled to get more physical memory	The core has not been enabled	OS	"LOG_STD_ACTION"
<del>SHMWN6</del> EXCHD_MAX_SIZE	6-Information	In function [chars] The requested memory size exceeded the window size	The memory requested in this window exceeded the window size	OS	"LOG_STD_ACTION"
<del>SHMWN6</del> EXCHD_MAX_SIZE	6-Information	In function [chars] The requested memory size exceeded the window size	The memory requested in this window exceeded the window size	OS	"LOG_STD_ACTION"
<del>SHMWN6</del> EXCHD_MAX_USERS	6-Information	In function [chars] The maximum number of users for a shared window has been exceeded	The maximum number of users for a shared window has been exceeded	OS	"LOG_STD_ACTION"
<del>SHMWN6</del> EXCHD_MAX_USERS	6-Information	In function [chars] The maximum number of users for a shared window has been exceeded	The maximum number of users for a shared window has been exceeded	OS	"LOG_STD_ACTION"
<del>SHMWN6</del> INCONSISTENCY	6-Information	Inconsistent state in window	Inconsistent state in window	OS	"LOG_STD_ACTION"
<del>SHMWN6</del> INCONSISTENCY	6-Information	Inconsistent state in window	Inconsistent state in window	OS	"LOG_STD_ACTION"



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SMMN6</del> INVALID_ARCS	6-Information	One or more invalid arguments have been passed to the function [chars]	One or more invalid arguments have been passed to the shared memory api's	OS	"LOG_STD_ACTION"
<del>SMMN6</del> INVALID_ARCS	6-Information	One or more invalid arguments have been passed to the function [chars]	One or more invalid arguments have been passed to the shared memory api's	OS	"LOG_STD_ACTION"
<del>SMMN6</del> INVALID_PARAM	6-Information	An invalid parameter has been passed to the function [chars]	One or more invalid parameters have been passed to the shared memory api's	OS	"LOG_STD_ACTION"
<del>SMMN6</del> INVALID_PARAM	6-Information	An invalid parameter has been passed to the function [chars]	One or more invalid parameters have been passed to the shared memory api's	OS	"LOG_STD_ACTION"
<del>SMMN6</del> WINDOW_EXCEED	6-Information	In function [chars] process has exceeded the maximum number of windows that can be opened by it	Exceeded maximum number of windows that can be opened by a process	OS	"LOG_STD_ACTION"
<del>SMMN6</del> WINDOW_EXCEED	6-Information	In function [chars] process has exceeded the maximum number of windows that can be opened by it	Exceeded maximum number of windows that can be opened by a process	OS	"LOG_STD_ACTION"
<del>SMMN6</del> MEM_COLLISION	6-Information	In function [chars] the requested memory space collides with the memory space of other windows	Memory space collision	OS	"LOG_STD_ACTION"
<del>SMMN6</del> MEM_COLLISION	6-Information	In function [chars] the requested memory space collides with the memory space of other windows	Memory space collision	OS	"LOG_STD_ACTION"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SHMNS</del> 6MUIEX_ERRCR	6-Information	An internal mutex error has occured in the function [chars]	An error has been encountered in the locking or unlocking of the shared memory mutex	OS	"LOG_STD_ACTION"
<del>SHMNS</del> 6MUIEX_ERRCR	6-Information	An internal mutex error has occured in the function [chars]	An error has been encountered in the locking or unlocking of the shared memory mutex	OS	"LOG_STD_ACTION"
<del>SHMNS</del> 6NOT_SUPRIED	6-Information	The option passed to function [chars] is not supported	This option is not supported	OS	"LOG_STD_ACTION"
<del>SHMNS</del> 6NOT_SUPRIED	6-Information	The option passed to function [chars] is not supported	This option is not supported	OS	"LOG_STD_ACTION"
<del>SHMNS</del> 6FRAM_EXCRKED	6-Information	An internal mutex error has been encountered in function [chars]	A process which has obtained the access mutex has not released it as yet	OS	"LOG_STD_ACTION"
<del>SHMNS</del> 6FRAM_EXCRKED	6-Information	An internal mutex error has been encountered in function [chars]	A process which has obtained the access mutex has not released it as yet	OS	"LOG_STD_ACTION"
<del>SHMNS</del> 6FRAM_EXCRKED	6-Information	An internal mutex error has been encountered in function [chars]	An internal mutex error has been enountered	OS	"LOG_STD_ACTION"
<del>SHMNS</del> 6FRAM_EXCRKED	6-Information	An internal mutex error has been encountered in function [chars]	An internal mutex error has been enountered	OS	"LOG_STD_ACTION"
<del>SHMNS</del> 6SHMEM_FAILRE	6-Information	The function [chars] Could not access shared memory	Could not access shared memory	OS	"LOG_STD_ACTION"
<del>SHMNS</del> 6SHMEM_FAILRE	6-Information	The function [chars] Could not access shared memory	Could not access shared memory	OS	"LOG_STD_ACTION"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SMWNS</del> LOCKCREAFD	6-Information	The lock creation for the shared memory failed in function [chars]	Lock creation for the shared memory failed	OS	"LOG_STD_ACTION"
<del>SMWNS</del> LOCKCREAFD	6-Information	The lock creation for the shared memory failed in function [chars]	Lock creation for the shared memory failed	OS	"LOG_STD_ACTION"
<del>SMWNS</del> SLOCKFALD	6-Information	In function [chars] The process was unable to lock the shared memory against other processes	The process was unable to lock the shared memory against other users	OS	"LOG_STD_ACTION"
<del>SMWNS</del> SLOCKFALD	6-Information	In function [chars] The process was unable to lock the shared memory against other processes	The process was unable to lock the shared memory against other users	OS	"LOG_STD_ACTION"
<del>SMWNS</del> SUNOCKFALD	6-Information	In function [chars] The process was unable to unlock the shared memory	The shared memory could not be unlocked due to an internal error	OS	"LOG_STD_ACTION"
<del>SMWNS</del> SUNOCKFALD	6-Information	In function [chars] The process was unable to unlock the shared memory	The shared memory could not be unlocked due to an internal error	OS	"LOG_STD_ACTION"
<del>SMWNS</del> VRTMPFALRE	6-Information	In function [chars] Could not reserve virtual memory	Could not reserve virtual memory	OS	"LOG_STD_ACTION"
<del>SMWNS</del> VRTMPFALRE	6-Information	In function [chars] Could not reserve virtual memory	Could not reserve virtual memory	OS	"LOG_STD_ACTION"
<del>SMWNS</del> WEXHEEMXPOIS	6-Information	The maximum number of pools has been exceeded in function [chars]	The maximum number of pools has been exceeded	OS	"LOG_STD_ACTION"
<del>SMWNS</del> WEXHEEMXPOIS	6-Information	The maximum number of pools has been exceeded in function [chars]	The maximum number of pools has been exceeded	OS	"LOG_STD_ACTION"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SHMMN#HSMAPFAILURE	7-Debug	In function [chars] Failed to map physical memory	Failed to map physical memory	OS	"LOG_STD_ACTION"
SHMMN#HSMAPFAILURE	7-Debug	In function [chars] Failed to map physical memory	Failed to map physical memory	OS	"LOG_STD_ACTION"
SHMMN7UNLNK_ERRCR	7-Debug	An internal error occurred while unlinking in function [chars]	An internal error occurred while unlinking	OS	"LOG_STD_ACTION"
SHMMN7UNLNK_ERRCR	7-Debug	An internal error occurred while unlinking in function [chars]	An internal error occurred while unlinking	OS	"LOG_STD_ACTION"
SHUTDOWNREQUEST_AIDP	6-Information	ERRMSG_NOFLAGS	-	-	-
SHUTDOWNREQUEST_AIDP	6-Information	ERRMSG_NOFLAGS	-	-	-
SHUTDOWNREQUEST_AIDM	3-Error	ERRMSG_NOFLAGS	-	-	-
SHUTDOWNREQUEST_AIDM	3-Error	ERRMSG_NOFLAGS	-	-	-
SHUTDOWN-6L2VPN	6-Information	ERRMSG_NOFLAGS	-	-	-
SHUTDOWN-6L2VPN	6-Information	ERRMSG_NOFLAGS	-	-	-
SBYTE0ADDRESS_TRAP	0-Emergency	Address trap: [dec] occurred on physical address: 0x[node]x at EPC: 0x[hec] ERR_EPC: 0x[hec]	A previously defined address trap has occurred.	debug	"Copy the error message exactly as it appears and report it to your technical support representative."
SBYTE0MISDIRECT_INTERRUPT	0-Emergency	A misdirected interrupt occurred with int_mask: 0x[hec]	A misdirected interrupt occurred.	debug	"Copy the error message exactly as it appears and report it to your technical support representative."

<del>Facility</del> -Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SBYTE0NCRICABECCR</del>	0-Emergency	An uncorrectable ECC error has occurred A_BUS_L2_ERRORS: 0x[node]x A_BUS_MEMIO_ERRORS 0x[node]x A_SCD_BUS_ERR_STATUS 0x[node]x	An uncorrectable ECC error has occurred.	debug	"Copy the error message exactly as it appears and report it to your technical support representative."
<del>SBYTE2SB_MAC_FATAL</del>	2-Critical	Fatal Error on mac [dec] 0x[node]6llx	A fatal error occurred on a MAC interface	procyon	LOG_STD_ACTION
<del>SBYTE3CORICABECCR</del>	3-Error	A correctable ECC error has occurred A_BUS_L2_ERRORS: 0x[node]x A_BUS_MEMIO_ERRORS 0x[node]x A_SCD_BUS_ERR_STATUS 0x[node]x	A correctable ECC error has occurred.	debug	"Copy the error message exactly as it appears and report it to your technical support representative."
<del>SBYTE3SB_MAC_ERROR</del>	3-Error	Unrecognized error on mac [dec] 0x[node]6llx	Unrecognized error on MAC interface	procyon	LOG_STD_ACTION
<del>SBYTE3SB_RX_HO_OREL</del>	3-Error	RX FIFO overflow on mac [dec] count: [node]d	-	-	-
<del>SBYTE3SB_RX_HO_UNDR</del>	3-Error	RX FIFO underflow on mac [dec] count: [node]d	-	-	-
<del>SBYTE3SB_SPURIOUS_INT</del>	3-Error	Spurious interrupt level [dec]	A spurious interrupt was received	procyon	LOG_STD_ACTION
<del>SBYTE3SB_TX_HO_OREL</del>	3-Error	TX FIFO overflow on mac [dec] count: [node]d	-	-	-
<del>SBYTE3SB_TX_HO_UNDR</del>	3-Error	TX FIFO underflow on mac [dec] count: [node]d	-	-	-
<del>SBYTE3SB_UNEXICEDNT</del>	3-Error	Unexpected interrupt at level [dec] 0x[node]6llx	An unexpected interrupt was received	procyon	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SBYTE3</del> SB_UNINITIALIZED_INT	3-Error	Uninitialized interrupt 0x[node]6llx	An uninitialized interrupt was received	procyon	LOG_STD_ACTION
<del>SBYTE4</del> SB_EXCESS_COLL	4-Warning	Excessive collisions on mac [dec] count: [node]d	-	-	-
<del>SBYTE4</del> SB_LATE_COLL	4-Warning	Late collision on mac [dec] count: [node]d	-	-	-
<del>SBYTE5</del> SB_OUT_OF_RX_RXCH0	5-Notice	Out of RX descriptors on mac [dec] - channel 0 count: [node]d	-	-	-
<del>SBYTE5</del> SB_OUT_OF_RX_RXCH1	5-Notice	Out of RX descriptors on mac [dec] - channel 1 count: [node]d	-	-	-
<del>SBYTE6</del> SB_RMON_OVFL	6-Information	RMON register [dec] overflow on mac [dec]	An RMON statistics register has been wrapped around	procyon	LOG_SID_NO_ACTION
SIGNAL_OCE-3-SOCE	3-Error	Failed to [chars] signal oce [chars][chars]	An internal software error occurred.	OCE_DDIS_COMPONENT	LOG_STD_ACTION
SIGNAL_OCE-3-SOCE	3-Error	Failed to [chars] signal oce [chars][chars]	An internal software error occurred.	OCE_DDIS_COMPONENT	LOG_STD_ACTION
<del>SIGNAL_OCE3</del> ERRNO_AID	3-Error	Failed to [chars] subblock on [chars]	An internal software error occurred.	OCE_DDIS_COMPONENT	LOG_STD_ACTION
<del>SIGNAL_OCE3</del> ERRNO_AID	3-Error	Failed to [chars] subblock on [chars]	An internal software error occurred.	OCE_DDIS_COMPONENT	LOG_STD_ACTION
SIGNAL-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
SIGNAL-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>SNALLERRNI3</del> MPLS_TE	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>SNALLERRNI3</del> MPLS_TE	3-Error	ERRMSG_NOFLAGS	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SIGNATURE_ABORT_OHR	3-Error	[node]net]RROR: Aborting [chars].	The system is aborting the specified operation because it failed to verify a valid signature in the image file.	security	"Attempt to restart the operation by using an image file " "with a valid signature. A valid signature ensures the " "integrity of the image."
SIGNATURE_CONTINUE_OHR	3-Error	[node]net]RROR: Continuing Operation [chars] in spite of failure.	Although the system failed to verify a valid signature in the image file the user decided to continue the specified operation. A valid signature ensures the integrity of the image.	security	
SIGNATURE_DELETE_FAILED	3-Error	[node]net]RROR: Unable to auto delete file [chars]. Remove file manually	The specified Cisco IOS Software image file contains an invalid signature but automatic deletion of the file has failed. A valid signature ensures the integrity of the image.	security	"Delete the file by entering the <Cmd>delete</Cmd> command."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SGNATURE3NOT_VALID</del>	3-Error	[node]net]RROR: Not able to process Signature in [chars].	An unknown error occurred when the system attempted to process the signature in the specified image file. A valid signature ensures the integrity of the image.	security	"Do not use this file. The file might be corrupted or " "modified. Attempt to copy the file again or download " "the file again from the http://www.cisco.com page before " "copying it. If you continue to get this error message " "open a case with the Technical Assistance Center via the " "Internet at " " <a href="http://www.cisco.com">http://www.cisco.com</a> " "contact your Cisco technical support representative with the " "information you have gathered."
SGNATURE3NOT_VALID	3-Error	[node]net]RROR: Signature not valid for file [chars].	The specified Cisco IOS Software image has an invalid signature. A valid signature ensures the integrity of the image.	security	"Do not use this file. The file might be corrupted or " "modified. Attempt to copy the file again or download " "the file again from the http://www.cisco.com page before " "copying it. If you continue to get this error message " "open a case with the Technical Assistance Center via the " "Internet at " " <a href="http://www.cisco.com">http://www.cisco.com</a> " "contact your Cisco technical support representative with the " "information you have gathered."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SGNAIURE4NOTPRESENT	4-Warning	[node]ARNING: Signature not found in file [chars].	The specified image file does not have a signature. Only Cisco IOS Software images in Executable and Linkable format are signed. Releases that do not support the image verification feature do not contain a signature in the image file. If you enter <del>CmDd> <del>N</del> <del>CmDd> <del>CmDd> <del>N</del> <del>CmDd> or <del>CmDd> <del>N</del> <del>CmDd> command and the specified file is not a Cisco IOS Software image in Executable and Linkable format or of an earlier release the system displays this warning message because the file does not have a signature. A valid signature ensures the integrity of the image.	security	\ " to see if the image that you are " using supports the image verification feature."
SGNAIURE4UNKNOWN	4-Warning	[node]ARNING: Found unknown signature type 0x[hec] in file [chars]\n Skipping the signature.	If the desired image belongs to a later release than the running image the desired image might have a newer signature type. A valid signature ensures the integrity of the image.	security	\ " to see if a signature of the type " " specified was added."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SIGSM-1-BAD_VAR_ERR	1-Alert	Out of range variable index [dec] [chars]	There is a fault in a default template or the user has provided a custom template that refers to a variable that is outside the range of cas-custom variables	as	LOG_STD_ACTION
SIGSM-1-EVENT_ERR	1-Alert	Unexpected event	An error in the signalling state machine	as	LOG_STD_ACTION
SIGSM-NO_TEMPLATE_ERR	1-Alert	No static template found for slot [dec] port [dec] with parameters provided	The sigsm could not find a matching static template with the same parameters as the controller being used	cas	LOG_STD_ACTION
SIGSM-3-NOMEMORY	3-Error	<del>MGTRACBACK_PROCS</del>	-	-	-
SIP_ALG_CHUNK_CREATE_FAIL	3-Error	-	Chunk create failed. SIP ALG will not be able to finish initialization.	cpp-ucode	LOG_STD_ACTION
SIP_ALG_CREATE_CALLBACK_ERR	3-Error	-	Missing L7 data during imprecise channel creation callback.	cpp-ucode	LOG_STD_ACTION
SIP_ALG_CREATE_CALLBACK_ERR	3-Error	-	Error during L7 data creation.	cpp-ucode	LOG_STD_ACTION
SIP_ALG_WRITEBACK_ERR	3-Error	-	Error during writeback.	cpp-ucode	LOG_STD_ACTION
SIP-2-LISTEN_SOCKET	2-Critical	Failed to open listen socket for ip_addr=[chars] port=[node]vrf=[chars] transport=[chars] tenant=[dec]	There is a failure while opening a listen socket	voice-sip	LOG_STD_ACTION
SIP-2-LISTEN_SOCKET	2-Critical	Failed to open listen socket for ip_addr=[chars] port=[node]vrf=[chars] transport=[chars] tenant=[dec]	There is a failure while opening a listen socket	voice-sip	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SIP2-SILENT_DISCARD	2-Critical	Silent Discard [chars]	Request received from Untrusted Host.	voice-sip	"Block the request from untrusted host at network layer"
SIP2-SILENT_DISCARD	2-Critical	Silent Discard [chars]	Request received from Untrusted Host.	voice-sip	"Block the request from untrusted host at network layer"
<del>SIP2-TLS_HANDSHAKE_FAILED</del>	2-Critical	[chars]	TLS handshake failed	voice-sip	LOG_STD_ACTION
<del>SIP2-TLS_HANDSHAKE_FAILED</del>	2-Critical	[chars]	TLS handshake failed	voice-sip	LOG_STD_ACTION
SIP-3-BADPAIR	3-Error	Unexpected [chars] [dec] [chars] in state [dec] [chars] substate [dec] [chars]	The SIP state machine has encountered an error while processing an event or timer.	voice-sip	LOG_SIP_SHELL_ACTION
SIP-3-BADPAIR	3-Error	Unexpected [chars] [dec] [chars] in state [dec] [chars] substate [dec] [chars]	The SIP state machine has encountered an error while processing an event or timer.	voice-sip	LOG_SIP_SHELL_ACTION
SIP-3-CONSTRUCT	3-Error	Error encountered while trying to construct a \[dec] [chars]\ [chars] message	An error was encountered while attempting to construct a SIP request or response message. If malloc errors were also seen then that is most likely the root of the problem. If no memory allocation errors have occurred then this may be an internal problem.	voice-sip	"If there were memory allocation errors at the" "same time as this error then this error can be ignored. Otherwise: " LOG_SIP_SHELL_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SIP-3-CONSTRUCT	3-Error	Error encountered while trying to construct a \[dec] [chars]\ [chars] message	An error was encountered while attempting to construct a SIP request or response message. If malloc errors were also seen then that is most likely the root of the problem. If no memory allocation errors have occurred then this may be an internal problem.	voice-sip	"If there were memory allocation errors at the" "same time as this error then this error can be ignored. Otherwise: " LOG_SIDSHTTECH_ACTION
SIP-3-CPUCAC	3-Error	Call rejected due to CAC based on CPU usage sent response [dec]	CPU usage CAC has rejected the call due to configured cpu-avg cpu-5sec threshold being exceeded.	voice-sip	LOG_SIDSHTTECH_ACTION
SIP-3-CPUCAC	3-Error	Call rejected due to CAC based on CPU usage sent response [dec]	CPU usage CAC has rejected the call due to configured cpu-avg cpu-5sec threshold being exceeded.	voice-sip	LOG_SIDSHTTECH_ACTION
SIP-3-DIALPEERBWCAC	3-Error	Calling number [chars] called number [chars] dial-peer [dec] used bandwidth [dec] available bandwidth [dec] requested bandwidth [dec] call state [chars]	Bandwidth CAC has rejected the call/media renegotiation due to configured dial-peer bandwidth threshold being exceeded	voice-sip	LOG_SIDSHTTECH_ACTION
SIP-3-DIALPEERBWCAC	3-Error	Calling number [chars] called number [chars] dial-peer [dec] used bandwidth [dec] available bandwidth [dec] requested bandwidth [dec] call state [chars]	Bandwidth CAC has rejected the call/media renegotiation due to configured dial-peer bandwidth threshold being exceeded	voice-sip	LOG_SIDSHTTECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SIP-3-DIGITEND	3-Error	Missing digit end event for \"[chars]\" for call ID [chars]	A digit begin event was detected without a matching digit end. This is most likely an internal error which is self correcting the NOTIFY for the digit has been transmitted.	voice-sip	LOG_STD_ACTION
SIP-3-DIGITEND	3-Error	Missing digit end event for \"[chars]\" for call ID [chars]	A digit begin event was detected without a matching digit end. This is most likely an internal error which is self correcting the NOTIFY for the digit has been transmitted.	voice-sip	LOG_STD_ACTION
SIP-3-DIGITQFULL	3-Error	Unable to queue DTMF digit. Queue full. size: [dec]	A request to queue a DTMF digit was rejected because the DTMF queue is full. A 5xx server error has been returned. This error may indicate that a flood of DTMF digit requests from an external SIP application for a specific call has been recieved in a very short period of time.	voice-sip	LOG_STD_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SIP-3-DIGITQFULL	3-Error	Unable to queue DTMF digit. Queue full. size: [dec]	A request to queue a DTMF digit was rejected because the DTMF queue is full. A 5xx server error has been returned. This error may indicate that a flood of DTMF digit requests from an external SIP application for a specific call has been received in a very short period of time.	voice-sip	LOG_SID_NO_ACTION
SIP-3-FORKING_CODEEC	3-Error	No forking codecs configured for dial-peer [dec] the forked m-lines will be rejected. Forking codecs are [chars]	Media forking requests which arrive in an INVITE message are identified by multiple media lines m-lines in the SDP. Each media line defines a	voice-sip	"Modify the dial-peer configuration to include one " "of the forking codecs listed using either the codec command or the " "voice-class codec command."
SIP-3-FORKING_CODEEC	3-Error	No forking codecs configured for dial-peer [dec] the forked m-lines will be rejected. Forking codecs are [chars]	Media forking requests which arrive in an INVITE message are identified by multiple media lines m-lines in the SDP. Each media line defines a	voice-sip	"Modify the dial-peer configuration to include one " "of the forking codecs listed using either the codec command or the " "voice-class codec command."
SIP-3-HTTP	3-Error	[chars]	Didn't recv 200 OK for HTTP Req	voice-sip	LOG_STD_ACTION
SIP-3-HTTP	3-Error	[chars]	Didn't recv 200 OK for HTTP Req	voice-sip	LOG_STD_ACTION
SIP-3-INSV_ERROR	3-Error	Error encountered while trying to bring the SIP component into service	During bootup of the gateway each of the Service Provider Interfaces SPIs are brought into service. The SIP SPI creates several processes	voice-sip	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SIP-3-INSV_ERROR	3-Error	Error encountered while trying to bring the SIP component into service	During bootup of the gateway each of the Service Provider Interfaces SPIs are brought into service. The SIP SPI creates several processes	voice-sip	LOG_SID_RECUR_ACTION
SIP-3-INTBWCAC	3-Error	Calling number [chars] called number [chars] dial-peer [dec] interface [chars] used bandwidth [dec] available bandwidth [dec] requested bandwidth [dec] call state [chars]	Bandwidth CAC has rejected the call/media renegotiation due to configured interface bandwidth threshold being exceeded.	voice-sip	LOG_SID_SH_TECH_ACTION
SIP-3-INTBWCAC	3-Error	Calling number [chars] called number [chars] dial-peer [dec] interface [chars] used bandwidth [dec] available bandwidth [dec] requested bandwidth [dec] call state [chars]	Bandwidth CAC has rejected the call/media renegotiation due to configured interface bandwidth threshold being exceeded.	voice-sip	LOG_SID_SH_TECH_ACTION
SIP-3-INTCALLCAC	3-Error	Call rejected due to CAC based on number of calls on the interface sent response [dec]	Interface-calls CAC has rejected the call due to configured int-calls threshold being exceeded.	voice-sip	LOG_SID_SH_TECH_ACTION
SIP-3-INTCALLCAC	3-Error	Call rejected due to CAC based on number of calls on the interface sent response [dec]	Interface-calls CAC has rejected the call due to configured int-calls threshold being exceeded.	voice-sip	LOG_SID_SH_TECH_ACTION
SIP-3-INTERNAL	3-Error	[chars]	-	-	-
SIP-3-INTERNAL	3-Error	[chars]	-	-	-
SIP-3-INVALID	3-Error	Invalid [chars] [dec]	An internal software error has occurred.	voice-sip	LOG_SID_SH_TECH_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SIP-3-INVALID	3-Error	Invalid [chars] [dec]	An internal software error has occurred.	voice-sip	LOGS_IDSHTTECHACION
SIP-3-LIST_ERROR	3-Error	Unable to create list for [chars]	Failure to create a list generally indicates that the router is out of memory either due to a memory leak or insufficient memory. If the error was generated soon after a reload its more likely that the router doesn't have enough memory. If the router has been running for a while a memory leak is more likely. The SIP component is not properly initialized and SIP calls may not complete properly.	voice-sip	show process memory
SIP-3-LIST_ERROR	3-Error	Unable to create list for [chars]	Failure to create a list generally indicates that the router is out of memory either due to a memory leak or insufficient memory. If the error was generated soon after a reload its more likely that the router doesn't have enough memory. If the router has been running for a while a memory leak is more likely. The SIP component is not properly initialized and SIP calls may not complete properly.	voice-sip	show process memory



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SIP-3-MAXCONNCAC	3-Error	Call rejected due to CAC based on maximum number of connections on dial-peer [dec] sent response [dec]	Maximum number of connections CAC has rejected the call due to configured max-conn threshold being exceeded.	voice-sip	LOG_SIDSH_TECH_ACTION
SIP-3-MAXCONNCAC	3-Error	Call rejected due to CAC based on maximum number of connections on dial-peer [dec] sent response [dec]	Maximum number of connections CAC has rejected the call due to configured max-conn threshold being exceeded.	voice-sip	LOG_SIDSH_TECH_ACTION
SIP-3-MEMCAC	3-Error	Call rejected due to CAC based on Memory usage sent response [dec]	Memory usage CAC has rejected the call due to configured <del>io-memory-threshold</del> memory-threshold being exceeded.	voice-sip	LOG_SIDSH_TECH_ACTION
SIP-3-MEMCAC	3-Error	Call rejected due to CAC based on Memory usage sent response [dec]	Memory usage CAC has rejected the call due to configured <del>io-memory-threshold</del> memory-threshold being exceeded.	voice-sip	LOG_SIDSH_TECH_ACTION
SIP-3-NOGETSTRUCT	3-Error	No data structure passed to MIB API subsystem.	The SNMP Agent MIB subsystem for this MIB did not pass any data structure to the MIB API subsystem for the proper retrieval of the requested object data. Processing of the GET operation cannot continue.	voice-sip	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SIP-3-NOGETSTRUCT	3-Error	No data structure passed to MIB API subsystem.	The SNMP Agent MIB subsystem for this MIB did not pass any data structure to the MIB API subsystem for the proper retrieval of the requested object data. Processing of the GET operation cannot continue.	voice-sip	LOG_STD_ACTION
SIP-3-NOMATCH	3-Error	Unable to find matching CCB for ccCallID [dec]	An internal error was encountered while trying to match a call ID with a call control block	voice-sip	LOG_SIDSHTTECH_ACTION
SIP-3-NOMATCH	3-Error	Unable to find matching CCB for ccCallID [dec]	An internal error was encountered while trying to match a call ID with a call control block	voice-sip	LOG_SIDSHTTECH_ACTION
SIP-3-NORESOURCE	3-Error	No resources for [chars]	An error was encountered while trying to obtain memory resources for an internal queue or table. If malloc errors were also seen then that is most likely the root of the problem. If no memory allocation errors have occurred then this may be an internal problem.	voice-sip	"If there were memory allocation errors at the" "same time as this error then this error can be ignored. Otherwise: " LOG_SIDSHTTECH_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SIP-3-NORESOURCE	3-Error	No resources for [chars]	An error was encountered while trying to obtain memory resources for an internal queue or table. If malloc errors were also seen then that is most likely the root of the problem. If no memory allocation errors have occurred then this may be an internal problem.	voice-sip	"If there were memory allocation errors at the" "same time as this error then this error can be ignored. Otherwise: " LOG_STD_ACTION
SIP-3-NOSETDATA	3-Error	No SET data passed to MIB API subsystem.	The SNMP Agent MIB subsystem for this MIB did not pass any data to the MIB API subsystem for the proper assignment of values to the internal data structures of the object. Processing of the SET operation cannot continue.	voice-sip	LOG_STD_ACTION
SIP-3-NOSETDATA	3-Error	No SET data passed to MIB API subsystem.	The SNMP Agent MIB subsystem for this MIB did not pass any data to the MIB API subsystem for the proper assignment of values to the internal data structures of the object. Processing of the SET operation cannot continue.	voice-sip	LOG_STD_ACTION
<del>SPASSWDKEYFLD</del>	3-Error	Failed to encrypt type 6 password after master key change. Password [chars] will become unusable	Type 6 password encryption failed after master key change	voice-sip	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SIP-PASSWORD_KEY_FAIL</del>	3-Error	Failed to encrypt type 6 password after master key change. Password [chars] will become unusable	Type 6 password encryption failed after master key change	voice-sip	LOG_STD_ACTION
SIP-3-PTIME	3-Error	Unsupported Ptime value [dec] using minimum Ptime value of [dec] on CallID [dec] Codec=[chars]	Unsupported Ptime value negotiated	voice-sip	LOG_SIP_SHTECH_ACTION
SIP-3-PTIME	3-Error	Unsupported Ptime value [dec] using minimum Ptime value of [dec] on CallID [dec] Codec=[chars]	Unsupported Ptime value negotiated	voice-sip	LOG_SIP_SHTECH_ACTION
SIP-3-QUEUE_ERROR	3-Error	Unable to enqueue event [chars] [dec] to a process watched queue. Current size: [dec] max size: [dec]	-	-	-
SIP-3-QUEUE_ERROR	3-Error	Unable to enqueue event [chars] [dec] to a process watched queue. Current size: [dec] max size: [dec]	-	-	-
SIP-3-STREAM_SERVICE	3-Error	[node][chars]	SIP Trunk Registration status	voice-sip	LOG_SIP_SHTECH_ACTION
SIP-3-STREAM_SERVICE	3-Error	[node][chars]	SIP Trunk Registration status	voice-sip	LOG_SIP_SHTECH_ACTION
SIP-3-TOTCALLCAC	3-Error	Call rejected due to CAC based on Total-calls sent response [dec]	Total-calls CAC has rejected the call due to configured total-calls threshold being exceeded.	voice-sip	LOG_SIP_SHTECH_ACTION
SIP-3-TOTCALLCAC	3-Error	Call rejected due to CAC based on Total-calls sent response [dec]	Total-calls CAC has rejected the call due to configured total-calls threshold being exceeded.	voice-sip	LOG_SIP_SHTECH_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SIP-3-UNKNOWNOBJ	3-Error	MIB object [chars].[dec] is not known by MIB API subsystem.	The MIB object specified in the SNMP GET PDU has been correctly identified by the SNMP Agent infrastructure but was not correctly identified by the subsystem responsible for the MIB. Processing of the GET operation cannot continue. The SNMP Agent infrastructure and subsystem responsible for the MIB under normal conditions will always be synchronized to the same set of MIB objects that is the same version of the MIB. This condition indicates	voice-sip	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SIP-3-UNKNOWNOBJ	3-Error	MIB object [chars].[dec] is not known by MIB API subsystem.	The MIB object specified in the SNMP GET PDU has been correctly identified by the SNMP Agent infrastructure but was not correctly identified by the subsystem responsible for the MIB. Processing of the GET operation cannot continue. The SNMP Agent infrastructure and subsystem responsible for the MIB under normal conditions will always be synchronized to the same set of MIB objects that is the same version of the MIB. This condition indicates	voice-sip	LOG_STD_ACTION
SIP-3-UNSUPPORTED	3-Error	[chars]	An internal software error has occurred.	voice-sip	LOG_SIDSHTTECH_ACTION
SIP-3-UNSUPPORTED	3-Error	[chars]	An internal software error has occurred.	voice-sip	LOG_SIDSHTTECH_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SIP-4-MAXSDP	4-Warning	SIP message sent with maximum SDP.	An SIP protocol message containing the maximum allowable SDP size has been sent. If the desired SDP was greater than the maximum size limit the SDP has been truncated at the limit. If the desired SDP was equal to the maximum size limit no truncation has occurred. This warning may indicate that an SIP request containing an unusually large SDP has been received from an external SIP application for a specific call resulting in an SIP response with the maximum SDP.	voice-sip	LOG_STD_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SIP-4-MAXSDP	4-Warning	SIP message sent with maximum SDP.	An SIP protocol message containing the maximum allowable SDP size has been sent. If the desired SDP was greater than the maximum size limit the SDP has been truncated at the limit. If the desired SDP was equal to the maximum size limit no truncation has occurred. This warning may indicate that an SIP request containing an unusually large SDP has been received from an external SIP application for a specific call resulting in an SIP response with the maximum SDP.	voice-sip	LOG_SID_NO_ACTION
<del>SP4</del> WEAK_PASSWORD_TYPE	4-Warning	Command has been added to the configuration using a type [node]password. However type [node]passwords will soon be deprecated. Migrate to a supported password type %u	Password encryption type deprecated. New password type to be used	voice-sip	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SP</del> WEAK_PASSWORD_TYPE	4-Warning	Command has been added to the configuration using a type [node]password. However type [node]passwords will soon be deprecated. Migrate to a supported password type %u	Password encryption type deprecated. New password type to be used	voice-sip	LOG_STD_ACTION
<del>SP</del> 5-BIND_LINE_STATUS	5-Notice	bind line proto status	Informational message on bind line proto	voice-sip	LOG_SID_NO_ACTION
<del>SP</del> 5-BIND_LINE_STATUS	5-Notice	bind line proto status	Informational message on bind line proto	voice-sip	LOG_SID_NO_ACTION
<del>SP</del> 5-DIALPEER_STATUS	5-Notice	VoIP dial-Peer <[dec]> is [chars]	VoIP dial-peer's operational status is changed	voice-sip	"If the dial-peer status is busyout the session target configured " "under the dial-peer is not reachable"
<del>SP</del> 5-DIALPEER_STATUS	5-Notice	VoIP dial-Peer <[dec]> is [chars]	VoIP dial-peer's operational status is changed	voice-sip	"If the dial-peer status is busyout the session target configured " "under the dial-peer is not reachable"
<del>SE</del> EVENT_TRACE_PATH_ERR	5-Notice	Event Trace Dump PATH \[chars] not accesible. Verify credentials directory path and network connectivity. Correct the Error and reconfigure Dump-file	Event Trace Dump-file Location not accessible	ipipgw	"Correct the accesibility Error and reconfigure"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SEVENTRACEPATHERR</del>	5-Notice	Event Trace Dump PATH \[chars]\ not accessible. Verify credentials directory path and network connectivity. Correct the Error and reconfigure Dump-file	Event Trace Dump-file Location not accessible	ipipgw	"Correct the accesibility Error and reconfigure"
SIP-5-LICENSING	5-Notice	[chars]	SIP Service for Eval license status	voice-sip	LOG_STD_ACTION
SIP-5-LICENSING	5-Notice	[chars]	SIP Service for Eval license status	voice-sip	LOG_STD_ACTION
SIP-5-REPORTING	5-Notice	Reported use of [dec] CUBE_T_VGW TDM-SIP sessions	VGW entitlement status	voice-sip	LOG_STD_ACTION
SIP-5-REPORTING	5-Notice	Reported use of [dec] CUBE_T_VGW TDM-SIP sessions	VGW entitlement status	voice-sip	LOG_STD_ACTION
<del>SIP5-TLS_CONNECTION</del>	5-Notice	[chars]	TLS connection is successful or failed	voice-sip	<del>LOG_SIDSH_TECH_ACTION</del>
<del>SIP5-TLS_CONNECTION</del>	5-Notice	[chars]	TLS connection is successful or failed	voice-sip	<del>LOG_SIDSH_TECH_ACTION</del>
SIP-6-IGNORE	6-Information	Unexpected [chars] [dec] [chars] in state [dec] [chars] substate [dec] [chars]	The SIP state machine has encountered an error while processing an event or timer.	voice-sip	<del>LOG_SIDSH_TECH_ACTION</del>
SIP-6-IGNORE	6-Information	Unexpected [chars] [dec] [chars] in state [dec] [chars] substate [dec] [chars]	The SIP state machine has encountered an error while processing an event or timer.	voice-sip	<del>LOG_SIDSH_TECH_ACTION</del>
<del>LONGDURCALLEDICED</del>	6-Information	Long Duration Call is detected [chars]\n	The call is active for configured duration of long call	voice-sip	LOG_STD_ACTION
<del>LONGDURCALLEDICED</del>	6-Information	Long Duration Call is detected [chars]\n	The call is active for configured duration of long call	voice-sip	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SIPSPA-3BAD_IFCOMTYPE	3-Error	Bad ifcom message type=%u	The Route Processor passed down a message that the software was not prepared to handle.	c7600-sip-common	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SIPSPA-3-BADCMD	3-Error	[chars]: Unsupported command [dec] arg0=[hex] arg1=[hex] arg2=[hex]	The Route Processor passed down a command that the software was not prepared to handle.	c7600-sip-common	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SIPSPA-3-BADINT	3-Error	Attempted to access HWIDB for port %u	The Linecard attempted to access the HWIDB associated with a non-existent port.	c7600-sip-common	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SIPSPA-3-CMDNOINT	3-Error	HWIDB Null for command [dec] arg=[hex]	The Route Processor passed down a command that the software was unprepared to handle.	c7600-sip-common	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SIPSPA-3DEVICE_ERROR	3-Error	subSlot [dec] spatype 0x[hec]. Device error: [chars]	An error related to a device on the SPA is detected.	SIP_DDTS_COMP	LOG_STD_ACTION
SIPSPA-3EFC_CHAN_ERR	3-Error	EFC error - interface [chars] vc [dec] anyphy [dec] err_code [dec] : [chars]	Failed to configure efc channel/parameters	SIP_DDTS_COMP	"Seach for resolved software issues using the Bug " "Toolkit at <a href="http://www.cisco.com/bugtools">http://www.cisco.com/bugtools</a> " "If you still require assistance " LOG_STD_ACTION
SIPSPA-3FCI_NOT_SET	3-Error	Bay [dec]: [chars]: FCI type not set	An FCI type of zero was detected	c7600-sip-common	LOG_STD_ACTION
SIPSPA-3HWIDB_FAILURE	3-Error	Creation: port [dec] vc [dec]	Failed to create a hwidb.	SIP_DDTS_COMP	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SIPSPA-3-INVALID_ANYPHY	3-Error	Bay [dec] - Invalid anyphy number [node]for vc [dec]	Interface has invalid anyphy number	spa-ser-common	"Search for resolved software issues using the Bug " "Toolkit at <a href="http://www.cisco.com/cgi-bin/tabletools/bugs">http://www.cisco.com/cgi-bin/tabletools/bugs</a> " "If you still require assistance open a case with the Technical Assistance " "Center via the Internet at " " <a href="http://www.cisco.com/cgi-bin/tabletools/contacts">http://www.cisco.com/cgi-bin/tabletools/contacts</a> or contact " "your Cisco technical support representative. Be sure to provide the " "the information you have gathered and a 'show tech-support' to " "your support representative or attach it to your case in non-zipped " "plain text format .txt."
SIPSPA-3-IPCALLOCFAIL	3-Error	Failed to allocate IPC buffer [chars]	The Linecard failed to allocate a buffer for communication with the Route Processor.	c7600-sip-common	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SIPSPA-3-IPCSENFFAIL	3-Error	Failed to send IPC message [chars]	The Linecard failed to send a message to the Route Processor.	c7600-sip-common	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SIPSPA-3-ISR_RC_ERROR	3-Error	ISR return code out of range. rc=[dec]	The ISR error return code is out of range.	SIP_DDTS_COMP	LOGSIDSHTTECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SIPSPA-3-LINKREC_ERROR	3-Error	Link record error - Bay [dec] vc [dec] error code [dec]	Error processing link record structure	spa-ser-common	"Search for resolved software issues using the Bug " "Toolkit at <a href="http://www.cisco.com/cgi-bin/tablelookup.pl?table=/tablebuginfo">http://www.cisco.com/cgi-bin/tablelookup.pl?table=/tablebuginfo</a> " "If you still require assistance open a case with the Technical Assistance " "Center via the Internet at " " <a href="http://www.cisco.com/techsupport">http://www.cisco.com/techsupport</a> or contact " "your Cisco technical support representative. Be sure to provide the " "the information you have gathered and a 'show tech-support' to " "your support representative or attach it to your case in non-zipped " "plain text format .txt."
SIPSPA-3-MESSAGE_ERROR	3-Error	Bay [dec]: [chars]	An unexpected error has occurred.	SIP_DDTS_COMP	"Search for resolved software issues using the Bug " "Toolkit at <a href="http://www.cisco.com/cgi-bin/tablelookup.pl?table=/tablebuginfo">http://www.cisco.com/cgi-bin/tablelookup.pl?table=/tablebuginfo</a> " "If you still require assistance " LOG_STD_ACTION
SIPSPA-3-MSGTOOBIG	3-Error	Message length exceeds max [node]bytes	The Linecard attempted to send too large a message to the Route Processor.	c7600-sip-common	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SIPSPA-3-NODISPATCH	3-Error	Dispatch vector Null cmd=[dec] dintf=[dec]	No command dispatch vector was found for the specified interface.	c7600-sip-common	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SIPSPA-3-POWER	3-Error	Bay [dec] 12V power is [chars]	SPA 12V power fault indicator	SIP_DDTS_COMP	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPA</del> SONET_CLOCK_FAILED	3-Error	SPA Sonet clock has failed status = 0x[node]x	The SPA SONET clock has failed. SPAs that rely on the SPA SONET clock for proper operation such as POS and ATM will be affected.	c7600-sip-common	"If the SPA Sonet clock does not recover perform an "OIR." LOG_SID_RECUR_ACTION
<del>SPA</del> SONET_CLOCK_RECOVERED	3-Error	SPA Sonet clock has recovered status = 0x[node]x	SPA Sonet clock has recovered	c7600-sip-common	LOG_SID_NO_ACTION
<del>SPA</del> SPI4_CONFIG_FAILURE	3-Error	Bay [dec] spi4 configuration failure error [dec]	Failed to configure SPI4 interface	SIP_DDTS_COMP	"Search for resolved software issues using the Bug " "Toolkit at <del>http://www.cisco.com/cgi-bin/tabletools/generic_bug.cgi?table=65353&amp;prod=IOS</del> " "If you still require assistance " LOG_STD_ACTION
<del>SPA</del> SPI4_INIT_FAILURE	3-Error	Bay [dec] initialization failure	Failed to create SPI4 subblock	SIP_DDTS_COMP	"Search for resolved software issues using the Bug " "Toolkit at <del>http://www.cisco.com/cgi-bin/tabletools/generic_bug.cgi?table=65353&amp;prod=IOS</del> " "If you still require assistance " LOG_STD_ACTION
<del>SPA</del> MAX_BANDWIDTH	4-Warning	Total SPA bandwidth exceeds line card capacity of [node] Mbps	The total bandwidth of SPAs exceeds the rated capacity of this line card.	SIP_DDTS_COMP	"Refer to the line card guidelines for the maximum allowed" "aggregated SPA bandwidth for the line card"
<del>SPA</del> MAX_BANDWIDTH_INS	4-Warning	Total SPA bandwidth exceeds line card capacity installed combination of SPA interfaces is not supported	The total bandwidth of SPAs exceeds the rated capacity of this line card.	SIP_DDTS_COMP	"Refer to the line card guidelines for the maximum allowed" "aggregated SPA bandwidth for the line card"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SIPSPA-4-SPABUS	4-Warning	Bay [dec] [chars] failed. s[full]r[full]p[full]f[full]0[c] data=0x[hec] parity=0x[hec] deadman=%u	SPABUS has reported an error.	SIP_DDTS_COMP	LOG_STD_ACTION
SIPSPA-4-SPABUS2	4-Warning	Bay [dec] [chars] failed. s[full]r[full]p[full]f[full]0[c] addr=0x[hec] data=0x[hec] parity=0x[hec] deadman=%u	SPABUS has reported an error.	SIP_DDTS_COMP	LOG_STD_ACTION
SIPSPA6PORTIMEXCEED	4-Warning	SPI port limit exceeded [chars] in [chars] has been powered down.	The total number of SPI ports required exceeds the capacity of this line card.	SIP_DDTS_COMP	"Refer to the line card guidelines for SPA combinations supported" "by this line card"
SIPSPA6ERRORRECOVER	6-Information	A Hardware or Software error occurred on [chars]. Reason : [chars] Automatic Error recovery initiated. No further intervention required.	An error occurred in one of the devices recovery would be attempted. If recovery succeeds no further messages would be logged and no intervention would be required.	c7600-sip-common	LOG_SID_RECUR_ACTION
SIPSPA-6-OIR	6-Information	Bay [dec] [chars] changed to [chars]	SPA OIR Sequence	SIP_DDTS_COMP	LOG_SID_NO_ACTION
SISF_ISSU2GET_BUFFER	2-Critical	Sisf ISSU client failed to get buffer for message. Error: [dec] [chars]	The Sisf ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	ipv6	"show logging and show checkpoint client"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SISF_ISSU2-GET_BUFFER	2-Critical	Sisf ISSU client failed to get buffer for message. Error: [dec] [chars]	The Sisf ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	ipv6	"show logging and show checkpoint client"
SISF_ISSU-2-INIT	2-Critical	Sisf ISSU client initialization failed to [chars]. Error: [dec] [chars]	The Sisf ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	ipv6	LOG_STD_ACTION
SISF_ISSU-2-INIT	2-Critical	Sisf ISSU client initialization failed to [chars]. Error: [dec] [chars]	The Sisf ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	ipv6	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SF_ISSU2SENDNCOFAILED	2-Critical	Sisf ISSU client failed to send negotiation message. Error: [dec] [chars]	The Sisf ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	ipv6	"show logging and show checkpoint client"
SF_ISSU2SENDNCOFAILED	2-Critical	Sisf ISSU client failed to send negotiation message. Error: [dec] [chars]	The Sisf ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	ipv6	"show logging and show checkpoint client"
SF_ISSU2SESSION_NEGO	2-Critical	Sisf ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The Sisf ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	ipv6	"show issu session <client_id> and " "show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SISF_ISSU_SESSION_NEGO	2-Critical	Sisf ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The Sisf ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	ipv6	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
SISF_ISSU_SESSION_REGISRY	2-Critical	Sisf ISSU client failed to register session information. Error: [dec] [chars]	The Sisf ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	ipv6	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
SISF_ISSU_SESSION_REGISRY	2-Critical	Sisf ISSU client failed to register session information. Error: [dec] [chars]	The Sisf ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	ipv6	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
SISF_ISSU_CAP_NALD_SIZE	3-Error	SISF ISSU client capability list is empty.	The SISF ISSU client capability exchange list size is invalid.	ipv6	"show issu capability entires <Client_ID>"
SISF_ISSU_CAP_NALD_SIZE	3-Error	SISF ISSU client capability list is empty.	The SISF ISSU client capability exchange list size is invalid.	ipv6	"show issu capability entires <Client_ID>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SSF_ISSU_CAPNOTCOMPATIBLE</del>	3-Error	Sisf ISSU client capability exchange result incompatible.	The Sisf ISSU client capability exchange have negotiated as incompatible with the peer.	ipv6	"show issu negotiated capability <Session_ID>"
<del>SSF_ISSU_CAPNOTCOMPATIBLE</del>	3-Error	Sisf ISSU client capability exchange result incompatible.	The Sisf ISSU client capability exchange have negotiated as incompatible with the peer.	ipv6	"show issu negotiated capability <Session_ID>"
SSF_ISSU_BNVALD_SESSION	3-Error	Sisf ISSU client does not have a valid registered session.	The Sisf ISSU client does not have a valid registered session.	ipv6	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
SSF_ISSU_BNVALD_SESSION	3-Error	Sisf ISSU client does not have a valid registered session.	The Sisf ISSU client does not have a valid registered session.	ipv6	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
SSF_ISSU_3MSG_NOT_OK	3-Error	Sisf ISSU client 'Message Type [dec]' is not compatible	The Sisf ISSU client received an incompatible message from the peer device. The message cannot be processed.	ipv6	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
SSF_ISSU_3MSG_NOT_OK	3-Error	Sisf ISSU client 'Message Type [dec]' is not compatible	The Sisf ISSU client received an incompatible message from the peer device. The message cannot be processed.	ipv6	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SISF_ISSU-3-MSG_SIZE	3-Error	Sisf ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The Sisf ISSU client failed to calculate the MTU for the specified message. The Sisf ISSU client is not able to send the message to the standby device.	ipv6	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
SISF_ISSU-3-MSG_SIZE	3-Error	Sisf ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The Sisf ISSU client failed to calculate the MTU for the specified message. The Sisf ISSU client is not able to send the message to the standby device.	ipv6	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>SISF_ISSU-3-UNREG_SIRY</del>	3-Error	Sisf ISSU client failed to unregister session information. Error: [dec] [chars]	The Sisf ISSU client failed to unregister session information.	ipv6	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>SISF_ISSU-3-UNREG_SIRY</del>	3-Error	Sisf ISSU client failed to unregister session information. Error: [dec] [chars]	The Sisf ISSU client failed to unregister session information.	ipv6	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>SISF_ISSU-3-TRANSFORM_FAIL</del>	3-Error	Sisf ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The Sisf ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the Sisf state between the active device and the standby device is not identical.	ipv6	"show issu session <client_id> and " "show issu negotiated version <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SF</del> ISSU <del>TRANSFORM</del> AL	3-Error	Sisf ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The Sisf ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the Sisf state between the active device and the standby device is not identical.	ipv6	"show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>SF</del> RCG <del>ERR</del> OR <del>IOUS</del> NC	4-Warning	Host mac-address [enet] ip-address [node]interface [chars]	An inconsistency has been detected in the IP device tracking table for this host between active and standby	ipv6	LOG_SID_NO_ACTION
<del>SF</del> RCG <del>ERR</del> OR <del>IOUS</del> NC	4-Warning	Host mac-address [enet] ip-address [node]interface [chars]	An inconsistency has been detected in the IP device tracking table for this host between active and standby	ipv6	LOG_SID_NO_ACTION
<del>SF</del> RCG <del>ERR</del> OR <del>IOUS</del> NC	4-Warning	-	-	-	-
<del>SF</del> RCG <del>ERR</del> OR <del>IOUS</del> NC	4-Warning	-	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SISF</del> SISF	4-Warning	-	A duplicate IP address has been detected IP theft and blocked This can be due to a configuration error on end-device an intentional IP theft or an IP movind too quickly	sisf	"If the existing entry is REACHABLE in the binding table and it moved to a new port \n\ consider reducing the REACHABLE timer \n\ otherwise it is either an attack or a configuration issue that must be resolved"
<del>SISF</del> SISF	4-Warning	-	A duplicate IP address has been detected IP theft and blocked This can be due to a configuration error on end-device an intentional IP theft or an IP movind too quickly	sisf	"If the existing entry is REACHABLE in the binding table and it moved to a new port \n\ consider reducing the REACHABLE timer \n\ otherwise it is either an attack or a configuration issue that must be resolved"
<del>SISF</del> SISF	4-Warning	-	A duplicate MAC address has been detected MAC theft and blocked This can be due to a configuration error on end-device an intentional MAC theft or MAC moving too quickly	SISF_COMP_NAME	"If the existing entry is REACHABLE in the binding table and it moved to a new port \n\ consider reducing the REACHABLE timer \n\ otherwise it is either an attack or a configuration issue that must be resolved"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SISF_WARN_0105C</del>	4-Warning	-	A duplicate MAC address has been detected MAC theft and blocked This can be due to a configuration error on end-device an intentional MAC theft or MAC moving too quickly	SISF_COMP_NAME	"If the existing entry is REACHABLE in the binding table and it moved to a new port \n\ consider reducing the REACHABLE timer \n\ otherwise it is either an attack or a configuration issue that must be resolved"
<del>SISF_WARN_0105C</del>	4-Warning	-	A duplicate MAC and IP address has been detected MAC_AND_IP theft and blocked This can be due to a configuration error on end-device an intentional MAC_AND_IP theft or MAC moving too quickly	SISF_COMP_NAME	"If the existing entry is REACHABLE in the binding table and it moved to a new port \n\ consider reducing the REACHABLE timer \n\ otherwise it is either an attack or a configuration issue that must be resolved"
<del>SISF_WARN_0105C</del>	4-Warning	-	A duplicate MAC and IP address has been detected MAC_AND_IP theft and blocked This can be due to a configuration error on end-device an intentional MAC_AND_IP theft or MAC moving too quickly	SISF_COMP_NAME	"If the existing entry is REACHABLE in the binding table and it moved to a new port \n\ consider reducing the REACHABLE timer \n\ otherwise it is either an attack or a configuration issue that must be resolved"
<del>SISF_WARN_0105C</del>	4-Warning	-	A PSS operation was performed	SISF_COMP_NAME	"This is an informationnal message"
<del>SISF_WARN_0105C</del>	4-Warning	-	A PSS operation was performed	SISF_COMP_NAME	"This is an informationnal message"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SISF_COMP_NAME</del>	4-Warning	-	An attempt to install an entry in the binding table was blocked. This can be due to a conflicting entry or maximum number of entries reached	SISF_COMP_NAME	"If the maximum table size is reached consider increasing it.\n\n If a conflicting entry already exist this maybe an attempt \n\n to steal address ownership. You should investigate which host\n\n is connected on the interface and wether it should be disconnected"
<del>SISF_COMP_NAME</del>	4-Warning	-	An attempt to install an entry in the binding table was blocked. This can be due to a conflicting entry or maximum number of entries reached	SISF_COMP_NAME	"If the maximum table size is reached consider increasing it.\n\n If a conflicting entry already exist this maybe an attempt \n\n to steal address ownership. You should investigate which host\n\n is connected on the interface and wether it should be disconnected"
<del>SISF_COMP_NAME</del>	4-Warning	-	An entry was changed in the binding table	SISF_COMP_NAME	"This is an informationnal message"
<del>SISF_COMP_NAME</del>	4-Warning	-	An entry was changed in the binding table	SISF_COMP_NAME	"This is an informationnal message"
<del>SISF_COMP_NAME</del>	4-Warning	-	An entry was created in the binding table	SISF_COMP_NAME	"This is an informationnal message"
<del>SISF_COMP_NAME</del>	4-Warning	-	An entry was created in the binding table	SISF_COMP_NAME	"This is an informationnal message"
<del>SISF_COMP_NAME</del>	4-Warning	-	An entry was created in the binding table	SISF_COMP_NAME	"This is an informationnal message"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SISF-3-INTERNAL</del>	4-Warning	-	An entry was created in the binding table	SISF_COMP_NAME	"This is an informational message"
<del>SISF-3-INTERNAL</del>	4-Warning	-	An error occurred during initialization	SISF_COMP_NAME	LOG_STD_ACTION
<del>SISF-3-INTERNAL</del>	4-Warning	-	An error occurred during initialization	SISF_COMP_NAME	LOG_STD_ACTION
<del>SISF-3-INTERNAL</del>	4-Warning	-	An internal software error occurred.	SISF_COMP_NAME	LOG_STD_ACTION
<del>SISF-3-INTERNAL</del>	4-Warning	-	An internal software error occurred.	SISF_COMP_NAME	LOG_STD_ACTION
<del>SISF-3-INTERNAL</del>	4-Warning	-	Reached 75[node]f maximum # addresses for the target	SISF_COMP_NAME	"A client is approaching red zone and might soon \n\ be blocked. The maximum value configured may be too low \n\ and you should consider increasing it. Or some of this client addresses are \n\ stale and you could clear them"
<del>SISF-3-INTERNAL</del>	4-Warning	-	Reached 75[node]f maximum # addresses for the target	SISF_COMP_NAME	"A client is approaching red zone and might soon \n\ be blocked. The maximum value configured may be too low \n\ and you should consider increasing it. Or some of this client addresses are \n\ stale and you could clear them"
SISF-3-INTERNAL	3-Error	Internal error [chars]	An internal software error occurred.	sisf	LOG_STD_ACTION
SISF-3-INTERNAL	3-Error	Internal error [chars]	An internal software error occurred.	sisf	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SISF-3-INTERNAL	3-Error	Internal error [chars]	An internal software error occurred.	sisf	LOG_STD_ACTION
SISF-4-BT_TIMER	4-Warning	BT Timer [chars]	Configured timer value is out of range defined for \n Wireless SISF	sisf	"Configure BT stale lifetimer between 300 and 86400 seconds \n\ and for other timers between 1 - 86400 seconds"
<del>SISF-DATA_GLEAN_NOTIFICATION</del>	4-Warning	No binding for [chars]	A data packet notification has been received because a snooping policy with the data glean option is configured and the Source address of the packet is not currently in the Binding Table.	sisf	-
<del>SISF-DATA_GLEAN_NOTIFICATION</del>	4-Warning	No binding for [chars]	A data packet notification has been received because a snooping policy with the data glean option is configured and the Source address of the packet is not currently in the Binding Table.	sisf	-
<del>SISF-DATA_GLEAN_NOTIFICATION</del>	4-Warning	No binding for [chars]	A data packet notification has been received because a snooping policy with the data glean option is configured and the Source address of the packet is not currently in the Binding Table.	sisf	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SSF4ENTRY_BLOCKED	4-Warning	Entry blocked [chars]	An attempt to install an entry in the IPv6 binding table was blocked. This can be due to a conflicting entry or maximum number of entries reached	sisf	"If the maximum table size is reached consider increasing it.\n\n If a conflicting entry already exist this maybe an attempt \n\n to steal address ownership. You should investigate which host\n\n is connected on the interface and wether it should be disconnected"
SSF4ENTRY_BLOCKED	4-Warning	Entry blocked [chars]	An attempt to install an entry in the mac-ip binding table was blocked. This can be due to a conflicting entry or maximum number of entries reached	sisf	"If the maximum table size is reached consider increasing it.\n\n If a conflicting entry already exist this maybe an attempt \n\n to steal address ownership. You should investigate which host\n\n is connected on the interface and wether it should be disconnected"
SSF4ENTRY_BLOCKED	4-Warning	Entry blocked [chars]	An attempt to install an entry in the mac-ip binding table was blocked. This can be due to a conflicting entry or maximum number of entries reached	sisf	"If the maximum table size is reached consider increasing it.\n\n If a conflicting entry already exist this maybe an attempt \n\n to steal address ownership. You should investigate which host\n\n is connected on the interface and wether it should be disconnected"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SISF4EXCESS_ARP_ACTIVITY	4-Warning	Excessive ARP activity [chars]	An excessive ARP activity detected for the client and it is brought down and added to exclusion list. This can be due to an issue in the end device software or an intentional ARP storm.	sisf	"take action to remediate the end device. If this is not done " "WLC will continue to exclude it."
SISF4EXCESS_ND_ACTIVITY	4-Warning	Excessive ND activity [chars]	An excessive ND activity detected for the client and it is brought down and added to exclusion list. This can be due to an issue in the end device software or an intentional ND storm.	sisf	"take action to remediate the end device. If this is not done " "WLC will continue to exclude it."
SISF-4-IP_THEFT	4-Warning	IP Theft [chars]	A duplicate IP address has been detected IP theft and blocked	sisf	"If the existing entry is REACHABLE in the binding table \n\ and it moved to a new port \n\ consider reducing the REACHABLE timer \n\ otherwise it is either an attack or a configuration \n\ issue that must be resolved"
SISF-4-IP_THEFT	4-Warning	IP Theft [chars]	A duplicate IP address has been detected IP theft and blocked This can be due to a configuration error on end-device an intentional IP theft or an IP movind too quickly	sisf	"If the existing entry is REACHABLE in the binding table and it moved to a new port \n\ consider reducing the REACHABLE timer \n\ otherwise it is either an attack or a configuration issue that must be resolved"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SISF-4-IP_THEFT	4-Warning	IP Theft [chars]	A duplicate IP address has been detected IP theft and blocked This can be due to a configuration error on end-device an intentional IP theft or an IP movind too quickly	sisf	"If the existing entry is REACHABLE in the binding table and it moved to a new port \n\ consider reducing the REACHABLE timer \n\ otherwise it is either an attack or a configuration issue that must be resolved"
<del>SISF</del> 4MAC_AND_IP_THEFT	4-Warning	MAC_AND_IP Theft [chars]	A duplicate MAC and IP address has been detected MAC_AND_IP theft and blocked This can be due to a configuration error on end-device an intentional MAC_AND_IP theft or MAC moving too quickly	sisf	"If the existing entry is REACHABLE in the binding table and it moved to a new port \n\ consider reducing the REACHABLE timer \n\ otherwise it is either an attack or a configuration issue that must be resolved"
<del>SISF</del> 4MAC_AND_IP_THEFT	4-Warning	MAC_AND_IP Theft [chars]	A duplicate MAC and IP address has been detected MAC_AND_IP theft and blocked This can be due to a configuration error on end-device an intentional MAC_AND_IP theft or MAC moving too quickly	sisf	"If the existing entry is REACHABLE in the binding table and it moved to a new port \n\ consider reducing the REACHABLE timer \n\ otherwise it is either an attack or a configuration issue that must be resolved"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SISF4-MAC_AND_IP_THEFT	4-Warning	MAC_AND_IP Theft [chars]	A duplicate MAC and IP address has been detected MAC_AND_IP theft and blocked	sisf	"If the existing entry is REACHABLE in the binding table \n\ and it moved to a new port \n\ consider reducing the REACHABLE timer \n\ otherwise it is either an attack or a configuration \n\ issue that must be resolved"
SISF-4-MAC_THEFT	4-Warning	MAC Theft [chars]	A duplicate MAC address has been detected MAC theft and blocked	sisf	"If the existing entry is REACHABLE in the binding table \n\ and it moved to a new port \n\ consider reducing the REACHABLE timer \n\ otherwise it is either an attack or a configuration \n\ issue that must be resolved"
SISF-4-MAC_THEFT	4-Warning	MAC Theft [chars]	A duplicate MAC address has been detected MAC theft and blocked This can be due to a configuration error on end-device an intentional MAC theft or MAC moving too quickly	sisf	"If the existing entry is REACHABLE in the binding table and it moved to a new port \n\ consider reducing the REACHABLE timer \n\ otherwise it is either an attack or a configuration issue that must be resolved"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SISF-4-MAC_THEFT	4-Warning	MAC Theft [chars]	A duplicate MAC address has been detected MAC theft and blocked This can be due to a configuration error on end-device an intentional MAC theft or MAC moving too quickly	sisf	"If the existing entry is REACHABLE in the binding table and it moved to a new port \n\ consider reducing the REACHABLE timer \n\ otherwise it is either an attack or a configuration issue that must be resolved"
SISF-4-PAK_DROP	4-Warning	Message dropped [chars]	A message was dropped because one of the IPv6 first-hop \n\ security features said so	sisf	"Look at the reason. It can either be a valid drop and that \n\ could go up to disconnect the host attached to the interface \n\ or the policy configured on this interface is too severed \n\ and should be amended"
SISF-4-PAK_DROP	4-Warning	Message dropped [chars]	A message was dropped because one of the IPv6 first-hop \n\ security features said so	sisf	"Look at the reason. It can either be a valid drop and the \n\ could go up to disconnect the host attached to the interface \n\ or the policy configured on this interface is too severed \n\ and should be amended"
SISF-4-PAK_DROP	4-Warning	Message dropped [chars]	A message was dropped because one of the IPv6 first-hop \n\ security features said so	sisf	"Look at the reason. It can either be a valid drop and the \n\ could go up to disconnect the host attached to the interface \n\ or the policy configured on this interface is too severed \n\ and should be amended"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SISF-4-PAK_DROP	4-Warning	Message dropped [chars]	-	-	-
SISF-4-PAK_DROP	4-Warning	Message dropped [chars]	-	-	-
<del>SISF-RANDOM_MAC_COLLISION</del>	4-Warning	Random MAC collision [chars]	Two devices with random MACs generated the same MAC address. \n\n The second device has been rejected.	sisf	"The second device will need to regenerate its random MAC."
<del>SISF-RANDOM_MAC_COLLISION</del>	4-Warning	Random MAC collision [chars]	Two devices with random MACs generated the same MAC address. \n\n The second device has been rejected.	sisf	"The second device will need to regenerate its random MAC."
<del>SISF-4-RESOLUTION_VETOED</del>	4-Warning	Resolution vetoed [chars]	-	ipv6	"A low rate of vetoed resolutions is not serious. \n\n If there is a high rate of vetos this might suggest that \n\n the link is under attack. Investigate the source of the \n\n packets driving these resolution requests"
<del>SISF-4-RESOLUTION_VETOED</del>	4-Warning	Resolution vetoed [chars]	-	ipv6	"A low rate of vetoed resolutions is not serious. \n\n If there is a high rate of vetos this might suggest that \n\n the link is under attack. Investigate the source of the \n\n packets driving these resolution requests"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SSF4RESOLUTION_VETO	4-Warning	Resolution vetoed [chars]	-	ipv6	"A low rate of vetoed resolutions is not serious. \n\ If there is a high rate of vetos this might suggest that \n\ the link is under attack. Investigate the source of the \n\ packets driving these resolution requests"
SSF6ENTRY_CHANGED	6-Information	Entry changed [chars]	An entry was changed in the binding table	sisf	"This is an informationnal message"
SSF6ENTRY_CHANGED	6-Information	Entry changed [chars]	An entry was changed in the binding table	sisf	"This is an informationnal message"
SSF6ENTRY_CHANGED	6-Information	Entry changed [chars]	An entry was changed in the binding table	sisf	"This is an informationnal message"
SSF6ENTRY_CREATED	6-Information	Entry created [chars]	An entry was created in the binding table	sisf	"This is an informationnal message"
SSF6ENTRY_CREATED	6-Information	Entry created [chars]	An entry was created in the binding table	sisf	"This is an informationnal message"
SSF6ENTRY_CREATED	6-Information	Entry created [chars]	An entry was created in the binding table	sisf	"This is an informationnal message"
SSF6ENTRY_DELETED	6-Information	Entry deleted [chars]	An entry was created in the binding table	sisf	"This is an informationnal message"
SSF6ENTRY_DELETED	6-Information	Entry deleted [chars]	An entry was created in the binding table	sisf	"This is an informationnal message"
SSF6ENTRY_DELETED	6-Information	Entry deleted [chars]	An entry was created in the binding table	sisf	"This is an informationnal message"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SSGENIR</del> _MAX_CRANCE	6-Information	Reaching 80[node]of max adr allowed per [chars]	Reached 80[node]f maximum # addresses for the target	sisf	"A client is approaching red zone and might soon \n\ be blocked. The maximum value configured may be too low \n\ and you should consider increasing it. \n\ Or some of this client addresses are \n\ stale and you could clear them"
<del>SSGENIR</del> _MAX_CRANCE	6-Information	Reaching 75[node]of max adr allowed per [chars]	Reached 75[node]f maximum # addresses for the target	sisf	"A client is approaching red zone and might soon \n\ be blocked. The maximum value configured may be too low \n\ and you should consider increasing it. Or some of this client addresses are \n\ stale and you could clear them"
<del>SSGENIR</del> _MAX_CRANCE	6-Information	Reaching 75[node]of max adr allowed per [chars]	Reached 75[node]f maximum # addresses for the target	sisf	"A client is approaching red zone and might soon \n\ be blocked. The maximum value configured may be too low \n\ and you should consider increasing it. Or some of this client addresses are \n\ stale and you could clear them"
<del>SKNN</del> MAN4KEYPADFAST	4-Warning	Keypad messages from the phone [dec] are too fast	The inter digit interval is too short. Each digit may not be processed properly	cme-callcontrol	"Please configure keypad-normalize for the phone"

<del>Facility-Severity-Mnemonic</del>	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SKNNMANKYPADFAST</del>	4-Warning	Keypad messages from the phone [dec] are too fast	The inter digit interval is too short. Each digit may not be processed properly	cme-callcontrol	"Please configure keypad-normalize for the phone"
<del>SKNNSECURESRVCONF</del>	3-Error	Can't initialize Secure Skinny server	Internal problems with initializing ports for the Secure Skinny server	ios-callmgr	"Make sure the Skinny secure server port is available on the local machine."
<del>SKNNSECURESRVCONF</del>	3-Error	Can't initialize Secure Skinny server	Internal problems with initializing ports for the Secure Skinny server	ios-callmgr	"Make sure the Skinny secure server port is available on the local machine."
<del>SKNNSECURESRVCONFMM</del>	3-Error	Can't initialize memory for Secure Skinny server	Insufficient Memory for Secure Skinny server	ios-callmgr	"Increase amount of available memory"
<del>SKNNSECURESRVCONFMM</del>	3-Error	Can't initialize memory for Secure Skinny server	Insufficient Memory for Secure Skinny server	ios-callmgr	"Increase amount of available memory"
<del>SKNNSECURESRVCONFROC</del>	3-Error	Could not start Skinny Secure Server	Internal Problem in process creation	ios-callmgr	"None"
<del>SKNNSECURESRVCONFROC</del>	3-Error	Could not start Skinny Secure Server	Internal Problem in process creation	ios-callmgr	"None"
<del>SKNNSECURESRVCONFROCS</del>	3-Error	Max Number of Skinny Secure Server sockets exceeded: too many IP phones	There are too many skinny Secure server clients requesting service	ios-callmgr	"Reduce number of Secure IP phones requesting service"
<del>SKNNSECURESRVCONFROCS</del>	3-Error	Max Number of Skinny Secure Server sockets exceeded: too many IP phones	There are too many skinny Secure server clients requesting service	ios-callmgr	"Reduce number of Secure IP phones requesting service"
<del>SKNNSECURESRVCONFROCS</del>	6-Information	Error encountered on release TLS signaling tunnels.	Error encountered on release TLS signaling tunnels.	xformers-csl	"Please install the Permanent license"
<del>SKNNSECURESRVCONFROCS</del>	6-Information	Error encountered on release TLS signaling tunnels.	Error encountered on release TLS signaling tunnels.	xformers-csl	"Please install the Permanent license"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SKNNSCURSER3NOFLIMIT</del>	6-Information	The TLS signaling tunnels usage exceeds the license limit.	The TLS signal tunnels usage exceeds the license limit.	xformers-csl	"Please install the Permanent license"
<del>SKNNSCURSER3NOFLIMIT</del>	6-Information	The TLS signaling tunnels usage exceeds the license limit.	The TLS signal tunnels usage exceeds the license limit.	xformers-csl	"Please install the Permanent license"
SKINNYSERVER3NOINIT	3-Error	Can't initialize Skinny server	Internal problems with initializing ports for the Skinny server	ios-callmgr	"Make sure the Skinny server port is available on the local machine."
SKINNYSERVER3NOINIT	3-Error	Can't initialize Skinny server	Internal problems with initializing ports for the Skinny server	ios-callmgr	"Make sure the Skinny server port is available on the local machine."
SKINNYSERVER3NOMEM	3-Error	Can't initialize memory for Skinny server	Insufficient Memory for Skinny server	ios-callmgr	"Increase amount of available memory"
SKINNYSERVER3NOMEM	3-Error	Can't initialize memory for Skinny server	Insufficient Memory for Skinny server	ios-callmgr	"Increase amount of available memory"
SKINNYSERVER3NOCKETS	3-Error	Max Number of Skinny Server sockets exceeded: too many IP phones	There are too many skinny server clients requesting service	ios-callmgr	"Reduce number of IP phones requesting service"
SKINNYSERVER3NOCKETS	3-Error	Max Number of Skinny Server sockets exceeded: too many IP phones	There are too many skinny server clients requesting service	ios-callmgr	"Reduce number of IP phones requesting service"
SLAB_ALLOC-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
SLAB_ALLOC-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
SLAB_CREATE-2-LDP	2-Critical	ERRMSG_NOFLAGS	-	-	-
SLAB_CREATE-2-LDP	2-Critical	ERRMSG_NOFLAGS	-	-	-
SLB_DFP-4-BAD_LEN	4-Warning	Agent [node][node]-Invalid message length - %u	Too many errors reading message header from SLB DFP Agent	slb	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SLB_DFP-4-BAD_MSG	4-Warning	Agent [node][node]- Unknown message type [node]vector %u	An unknown message type received from SLB DFP Agent	slb	"An unknown message can be caused by a connection " "error between DFP Manager and Agent. Try to restart DFP Agent by unconfiguring " "and reconfiguring it to see if it fixes the connection error."
SLB_DFP-4-BAD_SEND	4-Warning	Agent [node][node]- Send failed	An attempt to send a message to the SLB DFP Agent has failed.	slb	"Verify that the DFP Agent is reachable via " "ping or traceroute. Verify that the DFP Agent on the server is running." LOG_SID_RECUR_ACIION
SLB_DFP-4-BIG_MSG	4-Warning	Agent [node][node]- Message length [node]too big	A message from the SLB DFP Agent exceeds the allowable maximum size.	slb	"A message exceeding allowable maximum size can " "be caused by a connection error between DFP Manager and Agent. Try to " "restart DFP Agent by unconfiguring and reconfiguring it to see if it fixes "
SLB_DFP-4-BIG_VEC	4-Warning	Agent [node][node]- Message type [node]vector [node]too big	A message from the SLB DFP Agent exceeds the allowable maximum size.	slb	"A message exceeding allowable maximum size can " "be caused by a connection error between DFP Manager and Agent. Try to " "restart DFP Agent by unconfiguring and reconfiguring it to see if it fixes "

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SLB_DFP4CON_FAIL	4-Warning	Agent [node][node]- Socket_connect failed	Socket_connect to SLB DFP Agent failed	slb	LOG_SID_RECUR_ACTION
SLB_DFP4KEEP_ALV	4-Warning	Agent [node][node]- Have not received keep alive	The system has not received a keepalive message from the SLB DFP Agent.	slb	"Verify that the DFP Agent is reachable via " "ping or traceroute. Verify that the DFP Agent on the server is running." LOG_SID_RECUR_ACTION
SLB_DFP4NO_PARSE	4-Warning	Agent [node][node]- Could not parse message	Could not parse message from SLB DFP Agent	slb	LOG_SID_RECUR_ACTION
SLB_DFP4READ_ERR	4-Warning	Agent [node][node]- Too many read errors	Too many errors reading message header from SLB DFP Agent	slb	LOG_SID_RECUR_ACTION
SLB_DFP4RECONN_MCR	4-Warning	Manager [node]is reconnecting	The SLB Manager is reconnecting without disconnecting	slb	LOG_SID_RECUR_ACTION
SLB_DFP4SOCK_ERR	4-Warning	Agent [node][node]- Socket_recv error [dec]	Socket_recv error receiving message from SLB DFP Agent	slb	LOG_SID_RECUR_ACTION
SLB_DFP4SOCK_OPN	4-Warning	Agent [node][node]- Socket already open	The system tried to open Socket to SLB DFP Agent that is already open.	slb	"If the problem persists unconfigure and " "reconfigure SLB DFP. " LOG_SID_RECUR_ACTION
SLB_DFP4UKN_CON	4-Warning	Agent [node][node]- Unknown connection state %u	Unknown connection state processing SLB DFP timer	slb	LOG_SID_RECUR_ACTION
SLB_DFP4UNEXPECTED	4-Warning	Unexpected error: [chars]	An unexpected error occurred while performing SLB DFP operation	slb	LOG_SID_RECUR_ACTION
SLB_DFP4UNK_TYPE	4-Warning	Agent [node][node]- Unknown message type %u	Message from SLB DFP Agent has unknown type	slb	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SLB_KAP3-BIND_FAIL	3-Error	SLB Keep Alive Application Protocol Socket_bind failed for Port:[dec]	SLB Keep Alive Application Protocol process attempts to bind a socket port failed	slb	LOG_SID_RECUR_ACTION
SLB_KAP4UNEXPECTED	4-Warning	Unexpected error: [chars]	An unexpected error occurred while performing SLB Keep Alive Application Protocol operation	slb	LOG_SID_RECUR_ACTION
SLB-4-CF	4-Warning	Unexpected error: [chars]	An unexpected error occurred in SLB slave replication	slb	LOG_SID_RECUR_ACTION
SLB-4-CF_BULK	4-Warning	[chars]	An unexpected error occurred in SLB slave replication bulk sync	slb	LOG_SID_RECUR_ACTION
SLB-4-CF_IPC	4-Warning	Slave replication messages are creating a backlog in IPC. Some SLB objects may not be synchronized.	Due to IPC resource contention SLB was unable to replicate all objects.	slb	LOG_SID_RECUR_ACTION
SLB-4-CF_NUM	4-Warning	Unexpected error: [chars] [dec]	An unexpected error occurred in SLB slave replication	slb	LOG_SID_RECUR_ACTION
SLB-4-CF_RATE	4-Warning	Overrun of SLB's slave replication rate some SLB objects may not be synchronized.	Due to a high connection rate SLB was unable to replicate all objects.	slb	LOG_SID_RECUR_ACTION
SLB-4-IF_REMOVED	4-Warning	Access interface removed: [chars] [chars] being set to outofservice.	An interface being referenced in slb access configuration has been removed. The vserver or firewallfarms referencing this interface will brought outofservice.	slb	LOG_SID_RECUR_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SLB-4-PROBE	4-Warning	Probe [chars] for [node][node][chars]	An error occurred during SLB probe operation	slb	LOG_SID_REDUCE_ACTION
SLB-4-UNEXPECTED	4-Warning	Unexpected error: [chars]	An unexpected error occurred while performing SLB operation	slb	LOG_SID_RECUR_ACTION
SLB4VRF_REMOVED	4-Warning	Access VRF removed: [chars] [chars] being set to outofservice. Access VRF \n\ configuration has been removed.	An VRF being referenced in slb access configuration has been\n\ removed. The vserver or firewallfarms referencing this VRF will \n\ brought outofservice. The access VRF configuration will be removed.	slb	LOG_SID_RECUR_ACTION
SLB-6-REAL	6-Information	Real [chars] [chars] has changed state to [chars]	Informational message whenever a real server changes its state to/from OPERATIONAL: possible causes might be e.g. testing probe testing maxconns	slb	LOG_SID_NO_ACTION
SLBSCPU-3-BADTYPE	3-Error	Unknown type of indication [hec]	Microcode is sending bad indication type.	slb	LOG_SID_RECUR_ACTION
SLBSCPU3NOCFGDMLD	3-Error	Unable to request initial config download from main CPU.	After initialization SLB CPU requests main CPU to send configuration readfrom NVRAM. This message is generated when a failure occurs in communication.	slb	LOG_SID_RECUR_ACTION
SLBSCPU-3-NOPROC	3-Error	Cannot create SLB SCPU Process	Error occurred during initialization of SLB process on SLB CPU	slb	LOG_SID_RECUR_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SLBSCPU-3-NOREQ	3-Error	Failed to get request packet for ICC	Error occurred during communication between SLB CPU	slb	LOG_SID_RECUR_ACTION
SLBSCPU-3-NORESP	3-Error	Did not receive ICC response	Error occurred during communication between SLB CPU	slb	LOG_SID_RECUR_ACTION
SLBSCPU-6-CFGDWLD	6-Information	Request [dec] initial config download from main CPU.	After initialization SLB CPU requests main CPU to send configuration read from NVRAM. This message indicates a request was sent.	slb	""
SLIP-2-BADQUOTE	2-Critical	Impossible quoted character [hec]	This message indicates that the number of dynamically learned ARP entries complete or incomplete has exceeded a preconfigured threshold indicating a possible misconfiguration or DOS attack.	-	"First inspect the ARP entries on the affected interface. If they " "are valid entries either increase the configured log threshold or " "reconfigure the network to reduce ARP peers. " "If they are invalid entries there is a possible DOS attack " "on the system."
SLIP-2-BADSTATE	2-Critical	Impossible input state [hec]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
<del>SOFTICE1HWRE1ED</del>	3-Error	Failed to get [chars] hardware revision number in Slot [node]	Failed to get the board's revision number.	-	"Check module seating and module status. " "Re-insert the module. Contact TAC if this message is seen again."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SLOT_FD3GEIMR_FAILED	3-Error	Failed to get FPD version for FPD=[node]in Slot [node] [chars].	Failed to get FPD version due to either IPC problem or operation error. The card will be disabled.	-	"Check module seating and module status. " "Ensure compatibility among FPD and IOS by comparing output of command " <CmdBold>show hw-module slot fpd<NoCmdBold> with IOS Release Notes. " "Obtain IOS version by command <CmdBold>show version<NoCmdBold>."
SLOT_FPD3SUBBLOCK	3-Error	Failed to [chars] FPD subblock in Slot [node]	Failed to create delete or populate a FPD subblock due to operation error.	-	LOG_STD_ACTION
SLOT_FD3URGRADE_FAILED	3-Error	Failed to upgrade FPD for slot [dec] [chars].	The FPD image upgrade operation failed. The cause could be a wrong image file error in accessing fpga storage physical interrupt such as power failure or card removal. Depending on the slot type and error cause the card could be in an unusable state. Normally the system automatically reattempts the upgrade and shuts the card after repeated failures.	-	"Do not interrupt the system while an FPD " "upgrade is in progress. Obtain the matching FPD package. Refer " "to IOS Release Notes for more information on obtaining the correct " "FPD package for the card. Review the output of the RP FPD logs."
SLOT_FD4URGRADE_STATE	4-Warning	[chars] on slot [node]	Display the upgrade state	-	LOG_SID_RECUR_ACTION
SLOT_SYNC2INITSYS	2-Critical	[chars]	A software error occurred during initialization of the Interface Sync RF subsystem	-	"Check for sufficient processor memory." LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SLOT_SYNC3NALD_MG	3-Error	Incorrectly formatted message 0x[hec] 0x[hec] received by [chars]	Inconsistent message data was received from the peer CPU possibly due to an incompatible image version.	-	LOG_STD_ACTION
SLOT_SYNC3NO_BUFRR	3-Error	Unable to transmit message type [dec] from [chars]	A transmit error occurred while sending msg to other CPU due to non-availability of buffer	-	LOG_STD_ACTION
<del>SLOT_SYNC3SUBCARDON</del>	3-Error	Received a slot sync message with subcard count as [dec] for slot [dec]	A slot sync message with bad subcard count is being recvd	-	LOG_STD_ACTION
<del>SLOT_SYNC3SUBCARDON</del>	3-Error	Sending a slot sync message with subcard count as [dec] for slot [dec]	A slot sync message with bad subcard count is being sent	-	LOG_STD_ACTION
SLOT_SYNC3RANSM_THRR	3-Error	Unable to transmit message type [dec] from [chars]	A transmit error occurred while sending msg to other CPU due to msg translation	-	LOG_STD_ACTION
SLOT_SYNC3UNKNOWN_MG	3-Error	Unknown message type 0x[hec] received by [chars]	An unknown message type was received from the peer CPU possibly due to an incompatible image version.	-	LOG_STD_ACTION
SLOT_SYNC3UNSUPP_MG	5-Notice	Msgtype [chars] sent by [chars] unsupported by peer.	Peer responded that it didn't recognize a message sent by this CPU possibly due to a different image version.	-	"May require a software upgrade on the Standby CPU. " LOG_STD_ACTION
SLOT_DUMP3CORE_DUMP_THRR	3-Error	Core dump error slot [dec]: [chars]	An error occurred during a core dump of slot	-	"None."
SM_CREATE-2-LDP	2-Critical	ERRMSG_NOFLAGS	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SM_CREATE-2-LDP	2-Critical	ERRMSG_NOFLAGS	-	-	-
SM_INITIALIZATION_FAILED	2-Critical	polaris-infra	"Session Manager initialization for[chars] failed."	"Initialization of session manager process failed."	"Review SM logs taking note of the timestamp information to select specific information to review. Copy the message and other related information exactly as it appears on the console or in the system log."
SM-3-LDP	3-Error	ERRMSG_FLAG_TRACEBACK	-	-	-
SM-3-LDP	3-Error	ERRMSG_FLAG_TRACEBACK	-	-	-
SM-4-BADEVENT	4-Warning	Event '[chars]' is invalid for the current state '[chars]': [chars] [chars]	An attempt was made to post an event to a state machine that is invalid \ for the current state.	sm	LOG_SIDSHTTECH_ACTION
SM-4-BADEVENT	4-Warning	Event '[chars]' is invalid for the current state '[chars]': [chars] [chars]	An attempt was made to post an event to a state machine that is invalid \n\ for the current state.	sm	LOG_SIDSHTTECH_ACTION
SM-4-BADEVENT	4-Warning	Event '[chars]' is invalid for the current state '[chars]': [chars] [chars]	An attempt was made to post an event to a state machine that is invalid \n\ for the current state.	sm	LOG_SIDSHTTECH_ACTION
SM-4-BADEVENT	4-Warning	iosxe-binos-utils	Event '%s' is invalid for the current state '%s':[chars][chars]	"An attempt was made to post an event to a state machine that is invalid for the current state."	LOG_SIDSHTTECH_ACTION
SM-4-INIT	4-Warning	Internal error while initializing state machine '[chars]' state '[chars]': [chars]	An attempt was made to initialize an invalid state machine.	sm	LOG_SIDSHTTECH_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SM-4-INIT	4-Warning	Internal error while initializing state machine '[chars]' state '[chars]': [chars]	An attempt was made to initialize an invalid state machine.	sm	LOGSIDSHTTECHACI0N
SM-4-INIT	4-Warning	Internal error while initializing state machine '[chars]' state '[chars]': [chars]	An attempt was made to initialize an invalid state machine.	sm	LOGSIDSHTTECHACI0N
SM-4-INIT	4-Warning	iosxe-binos-utils	Internal error while initializing state machine '%s'	-	-
SM-4-PERSIST	4-Warning	Persistent event '[chars]' did not leave the current state '[chars]': [chars] [chars]	An attempt was made to post a persistent event to a state machine that \ would cause an infinite loop in the current state.	sm	LOGSIDSHTTECHACI0N
SM-4-PERSIST	4-Warning	Persistent event '[chars]' did not leave the current state '[chars]': [chars] [chars]	An attempt was made to post a persistent event to a state machine that\n would cause an infinite loop in the current state.	sm	LOGSIDSHTTECHACI0N
SM-4-PERSIST	4-Warning	Persistent event '[chars]' did not leave the current state '[chars]': [chars] [chars]	An attempt was made to post a persistent event to a state machine that\n would cause an infinite loop in the current state.	sm	LOGSIDSHTTECHACI0N
SM-4-PERSIST	4-Warning	iosxe-binos-utils	Persistent event '%s' did not leave the current state '%s':[chars][chars]	"An attempt was made to post a persistent event to a state machine that would cause an infinite loop in the current state."	LOGSIDSHTTECHACI0N

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SM-4-STOPPED	4-Warning	Event '[chars]' ignored because the state machine is stopped: [chars] [chars]	An attempted was made to post an event to a state machine that has \ already been stopped.	sm	LOG_SIDSHTTECH_ACTION
SM-4-STOPPED	4-Warning	Event '[chars]' ignored because the state machine is stopped: [chars] [chars]	An attempted was made to post an event to a state machine that has\n\ already been stopped.	sm	LOG_SIDSHTTECH_ACTION
SM-4-STOPPED	4-Warning	Event '[chars]' ignored because the state machine is stopped: [chars] [chars]	An attempted was made to post an event to a state machine that has\n\ already been stopped.	sm	LOG_SIDSHTTECH_ACTION
SM-4-STOPPED	4-Warning	iosxe-binos-utils	Event '%s' ignored because the state machine is stopped:[chars][chars]	"An attempted was made to post an event to a state machine that has already been stopped."	LOG_SIDSHTTECH_ACTION
SMAN2-NO_MEMORY	2-Critical	iosxe-shellmgr	Cannot allocate memory for an internal data structure	An out-of-memory condition occurred when attempting to create an internal data structure. The daemon encountering the problem will exit	-
SMAN2-TDL_MESSAGE	2-Critical	iosxe-shellmgr	Cannot construct an IPC message for library. The message name is[chars] and the reason is:[chars]	A problem occurred while constructing a type definition language (TDL) message or setting a field in a TDL message. If the problem occurred during construction of a TDL message	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>S/NR/PATCH/RY/MOUT</del>	3-Error	polaris-crdu	Failed to receive patch response from peer process[chars]	During patch operation the Shell Manager broadcasts a request to all affected processes (peers). If a peer does not respond in time then the patch process cannot be completed correctly	Check that the process(es) that failed to respond are still active and check their trace files for any potential errors that could prevent them from responding to a patch request in a timely manner
<del>S/NR/CLEAR/CRFT/REQ/IS/A</del>	3-Error	polaris-crft	CRFT clear counters request finished with one or more failures. Check tracelogs for further details.	After a request to clear CRFT counters if any program reports an error or fails to respond within the timeout period this message will be emitted.	Inspect btrace logs for information about which programs failed and why
<del>S/NR/COLLECT/CRFT/REQ/IS/A</del>	3-Error	polaris-crft	CRFT collection request finished with one or more failures. Check tracelogs for further details.	After a request to collect CRFT data if any program reports an error or fails to respond within the timeout period this message will be emitted.	Inspect btrace logs for information about which programs failed and why
<del>S/NR/EXPORT/CRFT/REQ/IS/A</del>	3-Error	polaris-crft	CRFT export request finished with one or more failures. Check tracelogs for further details.	After a request to export CRFT data if an error or failure during the export stage occurs this message will be emitted.	Inspect btrace logs for information about which operation failed and why
<del>S/NR/RELOAD/CRFT/REQ/IS/A</del>	3-Error	polaris-crft	CRFT reload request capture finished with one or more failures. Check tracelogs for further details.	After a request to capture CRFT data on reload if an error or failure during the reload stage occurs this message will be emitted.	Inspect btrace logs for information about which operation failed and why

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SMARUSIPREBCFHA</del>	3-Error	polaris-crft	CRFT remote requested using an unsupported remote path. Check tracelogs for further details.	After a request to remotely capture CRFT data an error or failure during the remote stage occurs this message will be emitted.	Inspect btrace logs for information about which operation failed and why
<del>SMARUSIPREBCFMA</del>	3-Error	polaris-crft	CRFT remote requested using an unsupported scheme. Check tracelogs for further details.	After a request to remotely capture CRFT data an error or failure during the remote archive stage occurs this message will be emitted.	Inspect btrace logs for information about which operation failed and why
<del>SMARUSIPREBCFHA</del>	3-Error	polaris-crft	No format	After a request to remotely capture CRFT data an error or failure during the remote archive stage occurs this message will be emitted.	Inspect btrace logs for information about which operation failed and why
<del>SMAN3NOCDLFILE</del>	3-Error	iosxe-shellmgr	Error initializing host info monitoring:[chars]	During initialization	-
<del>SMAN3SNORADFILE</del>	3-Error	iosxe-shellmgr	Error reading host info (%s):[chars]	During process startup and when changes occur	-
<del>SMAN3NVALDFCHFILE</del>	3-Error	iosxe-shellmgr	An upgrade or installation has produced an invalid messaging configuration file[chars]	-	-
SMAN3-NO_CDL_FILE	3-Error	iosxe-shellmgr	Could not access command definition file[chars]:[chars]	During initialization	-



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SANPLRENDERFAILURE</del>	3-Error	iosxe-shellmgr	Rendering error with[chars].%s. Transform is missing or invalid for data.	The Shell Manager process attempted to render a command response but the transformation failed due to an internal error. The failure may have been caused by a missing transform file or an included file cannot be found. The transformation may also fail if the data returned in the response is binary and has not been processed correctly. In this case	-
<del>SANPOLARISCRFTCS</del>	5-Notice	polaris-crft	CRFT clear counters completed successfully.	This message serves to inform the user of exactly when the clearcounters operation completes and they are no longer waiting for additional processes	tac_details "This is not a defect
<del>SANPOLARISCRFTCS</del>	5-Notice	polaris-crft	CRFT collection already in progress. Please try again later	CRFT collection is something that should happen infrequently so if there is already a collection request in progress we reject the incoming request and emit a message to the user informing them that their request is rejected.	Try the request again later if necessary

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SMANR3BACRHYCB</del>	5-Notice	polaris-crft	CRFT collection request not supported on peer[chars]	Some processes may not support CRFT collection for any of a number of reasons. This message serves to alert the user so that they do not go searching for CRFT stats for the process in question and determine an error has occurred when they cannot find them	None. Information only.
<del>SMANR3BACRHYCB</del>	5-Notice	polaris-crft	CRFT collection completed successfully.	This message serves to inform the user of exactly when the collection completes and they are no longer waiting for additional processes	tac_details "This is not a defect
<del>SMANR3BACRHYCB</del>	5-Notice	polaris-crft	CRFT export completed successfully.	This message serves to inform the user of exactly when the export operation completes and they are no longer waiting for additional output/feedback	tac_details "This is not a defect
<del>SMANR3BACRHYCB</del>	5-Notice	polaris-crft	CRFT reload collection completed successfully.	This message serves to inform the user of exactly when the export operation completes and they are no longer waiting for additional output/feedback	tac_details "This is not a defect
SMANR3BACRHYCB	3-Error	Incorrect command reply job id [node]u origin [chars] expecting [node]u	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SMANRP-3-CMDBUILD	3-Error	Interactive command directive [dec] of [dec] failed	In processing a CLI command one of the instructions returned through the Shell Manager could not be turned into an interactive command for remote execution.	iosxe-shellmgr	LOG_STD_ACTION
SMANRP-3-CMDCONNECT	3-Error	Connection to local interactive relay failed: [chars]	Connecting to the local relay for an interactive command failed due to the reason indicated in the error message.	iosxe-shellmgr	LOG_STD_ACTION
SMANRP-3-CMDSSEND	3-Error	Send interactive command to relay failed: [chars]	Sending the interactive command string to the local relay after the connection was established failed by the reason indicated in the error message.	iosxe-shellmgr	LOG_STD_ACTION
SMANRP-3-CMDICCLONG	3-Error	Interactive command too long	Instructions for command execution would result in creation of a command string that is beyond the maximum size.	iosxe-shellmgr	LOG_STD_ACTION
SMANRP-3-CMDINVALIDHANDLE	3-Error	Invalid connection handle [node]referenced during command execution.	The execution of a CLI command which must communicate with Shell Manager for command execution has referenced a connection handle that is invalid. The CLI command execution will have failed.	iosxe-shellmgr	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SMANRP3MSGBUHR	3-Error	Unable to acquire a BIPC buffer for sending messages.	A message was to be sent by IOS but no BIPC buffer was available. The message to be sent has been discarded and the associated operation failed.	iosxe-shellmgr	LOG_STD_ACTION
SMANRP3MSGCONRR	3-Error	Unable to register with the BIPC subsystem for connections to Shell Manager	IOS Shell Manager client code could not register with the BIPC communications infrastructure in order to establish a connection with the Shell Manager.	iosxe-shellmgr	LOG_STD_ACTION
SMANRP3MSGBPCERR	3-Error	Unable to process received BIPC messages from Shell Manager error: [chars]	An unexpected condition has occurred while IOS trying to process a received BIPC message from Shell Manager.	iosxe-shellmgr	LOG_STD_ACTION
SMANRP3MSGBLDERR	3-Error	Error [dec] building TDL message '[chars]' to send to the Shell Manager: [chars]	An unexpected condition has occurred while IOS is building a TDL message to send to the Shell Manager	iosxe-shellmgr	LOG_STD_ACTION
SMANRP3MSGCRFDERR	3-Error	Error sending CRFT capture on reload message.	IOS failed to successfully complete the CRFT reload archive operation.	polaris-crft	LOG_STD_ACTION
SMANRP3MSGDSPATCH	3-Error	Unable to dispatch received TDL message '[chars]' from Shell Manager. LUID: [chars]	An unexpected condition has occurred while IOS is trying to dispatch\n\ to the TDL message handler functions for received TDL messages from \n\ Shell Manager.	iosxe-shellmgr	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SMANRNP3MSGERR</del> SMANRNP3MSGERR	3-Error	Received NULL TDL message	An unexpected condition in which IOS has received a NULL TDL \n\ message from Shell Manager.	iosxe-shellmgr	LOG_STD_ACTION
<del>SMANRNP3MSGERR</del> SMANRNP3MSGERR	3-Error	Error queuing TDL message '[chars]' to send to the Shell Manager	An unexpected condition has occurred when IOS attempted to queue a TDL message to send to the Shell Manager	iosxe-shellmgr	LOG_STD_ACTION
<del>SMANRNP3MSGERR</del> SMANRNP3MSGERR	3-Error	Error [dec] handling a received TDL message '[chars]' from the Shell Manager: [chars]	An unexpected condition has occurred while IOS is processing a TDL message received from the Shell Manager	iosxe-shellmgr	LOG_STD_ACTION
<del>SMANRNP3MSGERR</del> SMANRNP3MSGERR	3-Error	Invalid field '[chars]' in TDL message '[chars]' received: value '[node]' from the Shell Manager	A message with an invalid field value was received from the Shell Manager	iosxe-shellmgr	LOG_STD_ACTION
<del>SMANRNP3MSGERR</del> SMANRNP3MSGERR	3-Error	Invalid field '[chars]' value '[chars]' in TDL message '[chars]' received from the Shell Manager	A message with an invalid field value was received from the Shell Manager	iosxe-shellmgr	LOG_STD_ACTION
<del>SMANRNP3MSGERR</del> SMANRNP3MSGERR	3-Error	Error '[dec]' marshaling TDL message '[chars]' to send to the Shell Manager	An unexpected condition has occurred while IOS is marshaling TDL message to send to the Shell Manager	iosxe-shellmgr	LOG_STD_ACTION
<del>SMANRNP3MSGERR</del> SMANRNP3MSGERR	3-Error	Missing field '[chars]' in TDL message '[chars]' received from the Shell Manager	A message missing a required field was received from the Shell Manager	iosxe-shellmgr	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SMANRSET_ACCESS_FAIL</del>	3-Error	Installing LIIN interface access control failed	This error happens when the Shell Manager shim failed to set the access control function for the LIIN possibly due to IOS out of memory or corruption. Interactive commands will not work.	iosxe-shellmgr	LOG_STD_ACTION
<del>SMANRNDIR_QUEUE_EMPTY</del>	3-Error	Dynamic command handler exited foreground process with non-empty queue	The dynamic command handler which dispatches commands to the shell manager has exited without proper cleanup.	iosxe-shellmgr	LOG_STD_ACTION
<del>SMANRSMAN_CONN_FAIL</del>	3-Error	Shell Manager client connection pool initialization failed: Unable to request creation of [node]of [node]connections.	The Shell Manager client has failed to create all of its connections to Shell Manager. Ability to execute some CLI commands will be severely restricted or non-existent.	iosxe-shellmgr	LOG_STD_ACTION
<del>SMANRSMAN_INIT_FAIL</del>	3-Error	Shell Manager client initialization failed: Unable to initialize messaging: [chars]	The Shell Manager client has failed to initialize the infrastructure for messaging with the Shell Manager. Ability to execute some CLI commands will be severely restricted or non-existent.	iosxe-shellmgr	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SMANRP6SMANNIWOAL	3-Error	Shell Manager client connection handler initialization failed: Unable to create [node]of [node]receiving queues.	The Shell Manager client has failed to create all of its receiving queues. Ability to execute some CLI commands will be severely restricted or non-existent.	iosxe-shellmgr	LOG_STD_ACTION
SMANRP6SMSTATUS	6-Information	Shell Manager is [chars]	The current status of Shell Manager.	-	LOG_SID_NO_ACTION
SMARTPLFORMERRR	2-Critical	Smart Licensing has encountered an internal software error. Contact TAC: [chars]	Smart Licensing Agent has encountered an internal Platform Problem. this indicates that the platform team did not properly implement Smart licensing on the device. The Platform Development Team needs to be contacted to get this problem addressed. This should never happen at a customer site	smart_agent	"The customer should contact TAC. The platform team needs to address this problem before release"
SMARTPLFORMERRR	2-Critical	Smart Licensing has encountered an internal software error. Contact TAC: [chars]	Smart Licensing Agent has encountered an internal Platform Problem. this indicates that the platform team did not properly implement Smart licensing on the device. The Platform Development Team needs to be contacted to get this problem addressed. This should never happen at a customer site	smart_agent	"The customer should contact TAC. The platform team needs to address this problem before release"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SMARTAGENTADMIN</del>	2-Critical	SmartAgent Admin Init Failed due to failure at XdmDispatchLoop in creating handle	This is an internal error During scheduler init when trying to create xdm handle it is failing!	smart_agent	CALL_TAC
<del>SMARTAGENTADMIN</del>	2-Critical	SmartAgent Admin Init Failed due to failure at XdmDispatchLoop in creating handle	This is an internal error During scheduler init when trying to create xdm handle it is failing!	smart_agent	CALL_TAC
<del>SMARTAGENTLIC</del>	3-Error	SA_NAME DeRegistration with CSSM_NAME failed: [chars]	Smart Licensing De-registration failed. This may have been caused due to a network connection failure to the CSSM_NAME . The local registration information on the device has been removed. The registration information on the CSSM_NAME has not been removed.	smart_agent	COMM_INFO
<del>SMARTAGENTLIC</del>	3-Error	SA_NAME DeRegistration with CSSM_NAME failed: [chars]	Smart Licensing De-registration failed. This may have been caused due to a network connection failure to the CSSM_NAME . The local registration information on the device has been removed. The registration information on the CSSM_NAME has not been removed.	smart_agent	COMM_INFO



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SMARTLICENTRGLAED	3-Error	SA_NAME Registration with the CSSM_NAME failed: [chars]	Smart Licensing registration failed. The included error string should give a more detailed reason for the failure. This may have been due to an invalid IDtoken or because the device is already registered	smart_agent	"If the id token was invalid it may be expired or" " you may be using an id token from the Smart Software Manager" " but you are registering with a satellite." " If the device is already registered you may use the force option to" " force the registration with a new id token. " COMM_INFO
SMARTLICENTRGLAED	3-Error	SA_NAME Registration with the CSSM_NAME failed: [chars]	Smart Licensing registration failed. The included error string should give a more detailed reason for the failure. This may have been due to an invalid IDtoken or because the device is already registered	smart_agent	"If the id token was invalid it may be expired or" " you may be using an id token from the Smart Software Manager" " but you are registering with a satellite." " If the device is already registered you may use the force option to" " force the registration with a new id token. " COMM_INFO
SMARTAPPHA_ADDISHF	3-Error	The Application is trying to add itself as its own Application HA peer.	When adding peer informations for an entitlement that supports attribute peerInfo contains same data as It's own HA attribute. This means that it tried to add itself as its own peer.	smart_agent	CALL_TAC

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SMART</del> HA_ADD_ISHF	3-Error	The Application is trying to add itself as its own Application HA peer.	When adding peer informations for an entitlement that supports attribute peerInfo contains same data as It's own HA attribute. This means that it tried to add itself as its own peer.	smart_agent	CALL_TAC
<del>SMART</del> ADUCLISNE	3-Error	The Application is trying set HA information for a duplicate instance.	When setting HA informations for an entitlement instance handle another instance is found with same	smart_agent	CALL_TAC
<del>SMART</del> ADUCLISNE	3-Error	The Application is trying set HA information for a duplicate instance.	When setting HA informations for an entitlement instance handle another instance is found with same	smart_agent	CALL_TAC
<del>SMART</del> ADUCLIDHR	3-Error	The Application HA Cluster already has a member with given identity. Use the 'show license usage' command to see the exact error.	When setting up peer information for an entitlement that supports attribute the given peer information already exists. This means one of the device may not be configured correctly or logics that suppose to remove peer information is not working correctly.	smart_agent	CALL_TAC

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SMARTAGENT</del>	3-Error	The Application HA Cluster already has a member with given identity. Use the 'show license usage' command to see the exact error.	When setting up peer information for an entitlement that supports attribute the given peer information already exists. This means one of the device may not be configured correctly or logics that suppose to remove peer information is not working correctly.	smart_agent	CALL_TAC
<del>SMARTAGENT</del>	3-Error	The Application HA Cluster did not have a member with given identity. Use the 'show license usage' command to see the exact error.	When removing peer information for an entitlement that supports attribute the given peer information does not exist. This means one of the device may not be configured correctly or logics that suppose to add/update peer information is not working correctly.	smart_agent	CALL_TAC
<del>SMARTAGENT</del>	3-Error	The Application HA Cluster did not have a member with given identity. Use the 'show license usage' command to see the exact error.	When removing peer information for an entitlement that supports attribute the given peer information does not exist. This means one of the device may not be configured correctly or logics that suppose to add/update peer information is not working correctly.	smart_agent	CALL_TAC

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SMARTAUTHRENEWALD	3-Error	Authorization renewal with the CSSM_NAME : [chars] for udi [chars]	The Authorization renew request failed. This will be sent every time an authorization attempt fails and once per week while in the failed state. An automatic retry will occur on the following schedule: If smart licensing is in the authorized state every 23 hours. If smart licensing is in the Out of Compliance state every 15 minutes for the first two hours then once every four hours after that. If smart licensing is in the authorization expired state then once every hour.	smart_agent	COMM_INFO

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SMARTLIC3RENEWLED	3-Error	Authorization renewal with the CSSM_NAME : [chars] for udi [chars]	The Authorization renew request failed. This will be sent every time an authorization attempt fails and once per week while in the failed state. An automatic retry will occur on the following schedule: If smart licensing is in the authorized state every 23 hours. If smart licensing is in the Out of Compliance state every 15 minutes for the first two hours then once every four hours after that. If smart licensing is in the authorization expired state then once every hour.	smart_agent	COMM_INFO
SMARTLIC3POLYNSALLIED	3-Error	The install of a new licensing authorization code has failed on [chars]: [chars].	An authorization code installation has failed in policy mode.	smart_agent	-
SMARTLIC3POLYNSALLIED	3-Error	The install of a new licensing authorization code has failed on [chars]: [chars].	An authorization code installation has failed in policy mode.	smart_agent	-
SMARTLIC3BADMODE	3-Error	An unknown mode was specified: [dec]	An invalid entitlement enforcement mode was received by the smart agent in the process of logging a syslog message. This is an internal error and should be reported to Cisco	smart_agent.	"This is a Smart Licensing internal error. Please report this to Cisco"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SMART_LIC3BAD_MODE	3-Error	An unknown mode was specified: [dec]	An invalid entitlement enforcement mode was received by the smart agent in the process of logging a syslog message. This is an internal error and should be reported to Cisco	smart_agent.	"This is a Smart Licensing internal error. Please report this to Cisco"
SMART_LIC3BAD_NOIF	3-Error	A bad notification type was specified: [dec]	This is an internal Smart Licensing error. Report it to Cisco TAC	smart_agent	CALL_TAC
SMART_LIC3BAD_NOIF	3-Error	A bad notification type was specified: [dec]	This is an internal Smart Licensing error. Report it to Cisco TAC	smart_agent	CALL_TAC
SMART_LIC3ERR_CERT_VALIDATION	3-Error	Certificate validation failed: [chars]	The ID certificate validation failed during a reboot registration or renewal. The included error message should give more information about the failure	smart_agent	-
SMART_LIC3ERR_CERT_VALIDATION	3-Error	Certificate validation failed: [chars]	The ID certificate validation failed during a reboot registration or renewal. The included error message should give more information about the failure	smart_agent	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SMARTIC3COMMFAILED</del>	3-Error	Communications failure with the [chars] : [chars]	The device communication with the CSSM_NAME or CSLU failed. This will be sent for every communications attempt that fails. Additionally it will be sent once per week until communications are restored.	smart_agent	COMM_INFO
<del>SMARTIC3COMMFAILED</del>	3-Error	Communications failure with the [chars] : [chars]	The device communication with the CSSM_NAME or CSLU failed. This will be sent for every communications attempt that fails. Additionally it will be sent once per week until communications are restored.	smart_agent	COMM_INFO
<del>SMARTIC3COMMFAILED</del>	3-Error	The smart agent for Licensing will now be disabled because the config was not saved before the reload	During Smart Agent initialization if the Smart Agent state is registered and the config with the smart license enabled flag was saved before the reboot then this means the config was not saved before the reload.	smart_agent	"save the configuration before reloading"
<del>SMARTIC3COMMFAILED</del>	3-Error	The smart agent for Licensing will now be disabled because the config was not saved before the reload	During Smart Agent initialization if the Smart Agent state is registered and the config with the smart license enabled flag was saved before the reboot then this means the config was not saved before the reload.	smart_agent	"save the configuration before reloading"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SMARTLICNGOUTOSNC	3-Error	Trusted Store Enable flag not in sync with System Configuration TS [chars] Config [chars]	Smart Licensing Configuration does not match the value of the enable flag in Trusted Store. This can happen if a configuration is copied onto the system and a reload occurs. If the new configuration does not contain the Smart Licensing Enable command the value in Trusted Store will not match.	smart_agent	"Apply the desired Smart Licensing Configuration Command and persist the configuration."
SMARTLICNGOUTOSNC	3-Error	Trusted Store Enable flag not in sync with System Configuration TS [chars] Config [chars]	Smart Licensing Configuration does not match the value of the enable flag in Trusted Store. This can happen if a configuration is copied onto the system and a reload occurs. If the new configuration does not contain the Smart Licensing Enable command the value in Trusted Store will not match.	smart_agent	"Apply the desired Smart Licensing Configuration Command and persist the configuration."
SMARTLICCONVRTAIED	3-Error	[chars] License conversion failed: [chars]	The conversion process failed. The reason for this is detailed in the message.	smart_agent	-
SMARTLICCONVRTAIED	3-Error	[chars] License conversion failed: [chars]	The conversion process failed. The reason for this is detailed in the message.	smart_agent	-



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SMARTICOMRTICAL</del>	3-Error	[chars] Failed to convert [chars]: [chars]	The traditional license specified failed the conversion process. The reason for this is detailed in the message.	smart_agent	-
<del>SMARTICOMRTICAL</del>	3-Error	[chars] Failed to convert [chars]: [chars]	The traditional license specified failed the conversion process. The reason for this is detailed in the message.	smart_agent	-
<del>SMARTICDEHCAIEDAH</del>	3-Error	The Deprecated function [chars] has been called.This call should be replaced by [chars]	This error indicates the platform team is using deprecated API functions. The platform code is calling a deprecated function. The code needs to be changed to call the new function	smart_agent	"Contact Cisco TAC.The platform team needs to address this problem before release"
<del>SMARTICDEHCAIEDAH</del>	3-Error	The Deprecated function [chars] has been called.This call should be replaced by [chars]	This error indicates the platform team is using deprecated API functions. The platform code is calling a deprecated function. The code needs to be changed to call the new function	smart_agent	"Contact Cisco TAC.The platform team needs to address this problem before release"
<del>SMARTICMERNVAIED</del>	3-Error	Entitlement authorization with CSSM_NAME failed: [chars]	The device has failed to communicate with Cisco to renew the entitlement authorization.	smart_agent	COMM_INFO
<del>SMARTICMERNVAIED</del>	3-Error	Entitlement authorization with CSSM_NAME failed: [chars]	The device has failed to communicate with Cisco to renew the entitlement authorization.	smart_agent	COMM_INFO

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SMARTIC3EVAL_EXPIRED	3-Error	Evaluation period expired	Your evaluation period has expired. Some features may restrict their usage. This will be sent once when the evaluation period expires.	smart_agent	"Customer needs to obtain a new ID token from the " CSSM_NAME " and register the device."
SMARTIC3EVAL_EXPIRED	3-Error	Evaluation period expired	Your evaluation period has expired. Some features may restrict their usage. This will be sent once when the evaluation period expires.	smart_agent	"Customer needs to obtain a new ID token from the " CSSM_NAME " and register the device."
SMARTIC3EVAL_EXPIRED_WRN	3-Error	Evaluation period expired on [chars]	The evaluation period expired at the time specified. This will be sent once per week after expiration if the product is not registered.	smart_agent	"Register this device with the " CSSM_NAME " before the evaluation period expires."
SMARTIC3EVAL_EXPIRED_WRN	3-Error	Evaluation period expired on [chars]	The evaluation period expired at the time specified. This will be sent once per week after expiration if the product is not registered.	smart_agent	"Register this device with the " CSSM_NAME " before the evaluation period expires."
SMARTIC3EVENTLOG_READ	3-Error	Reading from Event Log file \ failed	Can't get log or allocate enough space to return the log in a buffer	smart_agent	-
SMARTIC3EVENTLOG_READ	3-Error	Reading from Event Log file \ failed	Can't get log or allocate enough space to return the log in a buffer	smart_agent	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SMARTAGENTLOGWRITE</del>	3-Error	Writing to Event Log File failed	It is failure in writing EventLogFile. It is the first occurrence of the failure. Syslog will not be sent for subsequent failure for write of the same file	smart_agent	-
<del>SMARTAGENTLOGWRITE</del>	3-Error	Writing to Event Log File failed	It is failure in writing EventLogFile. It is the first occurrence of the failure. Syslog will not be sent for subsequent failure for write of the same file	smart_agent	-
<del>SMARTEXPORTFAILURE</del>	3-Error	The export authorization key request for [chars] failed: [chars]	The request for the export authorization key has failed. The export restricted feature that needs this key will not enable.	smart_agent	-
<del>SMARTEXPORTFAILURE</del>	3-Error	The export authorization key request for [chars] failed: [chars]	The request for the export authorization key has failed. The export restricted feature that needs this key will not enable.	smart_agent	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SMARTLICSNB0101SNC	3-Error	Smart Licensing agent on hot standby is out of sync with active Smart Licensing agent	Smart Licensing Agent on the hot standby failed to process the data necessary to stay in sync with the active agent. If a switch over occurs the the new active agent will not be in the same state as the current active agent Configuration does not match the value of the enable flag in Trusted store. This can happen if a configuration is copied onto the system and a reload occurs. If the new configuration does not contain the Smart Licensing Enable command the value in Trusted Store will not match.	smart_agent	"Ensure that the configuration is the same on both systems."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SMARTCSNDBOOTSYNC	3-Error	Smart Licensing agent on hot standby is out of sync with active Smart Licensing agent	Smart Licensing Agent on the hot standby failed to process the data necessary to stay in sync with the active agent. If a switch over occurs the the new active agent will not be in the same state as the current active agent Configuration does not match the value of the enable flag in Trusted store. This can happen if a configuration is copied onto the system and a reload occurs. If the new configuration does not contain the Smart Licensing Enable command the value in Trusted Store will not match.	smart_agent	"Ensure that the configuration is the same on both systems."
SMARTIDCERTEXPIRED	3-Error	Registration period has expired. Smart Licensing will transition to the unregistered state. Please re-register this product to correct the problem.	The current time is outside the valid registration period in the ID certificate. This could be caused by a change in the system clock or multiple communications failures with the CSSM_NAME	smart_agent	"Please check the Smart Call Home settings and "network connectivity to the "CSSM_NAME ". Also verify your system "clock is correct"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SMARTLICDCRTEXPRED	3-Error	Registration period has expired. Smart Licensing will transition to the unregistered state. Please re-register this product to correct the problem.	The current time is outside the valid registration period in the ID certificate. This could be caused by a change in the system clock or multiple communications failures with the CSSM_NAME	smart_agent	"Please check the Smart Call Home settings and "network connectivity to the "CSSM_NAME ". Also verify your system "clock is correct"
SMARTLICREXPIRING	3-Error	This device's registration will expire in [chars].	The registration for this device will expire at the specified time. This usually indicates a communications failure with the CSSM_NAME . This will be sent at the following interval prior to expiration: 60 days 30 days every week in the last 30 days every day in the last week every hour in the last day.	smart_agent	COMM_INFO
SMARTLICREXPIRING	3-Error	This device's registration will expire in [chars].	The registration for this device will expire at the specified time. This usually indicates a communications failure with the CSSM_NAME . This will be sent at the following interval prior to expiration: 60 days 30 days every week in the last 30 days every day in the last week every hour in the last day.	smart_agent	COMM_INFO

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SMARTICRRNBMVAD	3-Error	Automatic registration renewal failed: [chars]	The automatic ID certificate registration renewal failed.	smart_agent	COMM_INFO
SMARTICRRNBMVAD	3-Error	Automatic registration renewal failed: [chars]	The automatic ID certificate registration renewal failed.	smart_agent	COMM_INFO
SMARTICRRNVCISAD	3-Error	ID certificate start date not reached yet	The device registration failed. The ID Certificate start date is later than the device current time.	smart_agent	"Please adjust your device clock to be correct " "and retry the registration again."
SMARTICRRNVCISAD	3-Error	ID certificate start date not reached yet	The device registration failed. The ID Certificate start date is later than the device current time.	smart_agent	"Please adjust your device clock to be correct " "and retry the registration again."
SMARTICRRSNBMACH	3-Error	The Import data signature mismatch for [chars].	The import data signature does not match with the data input	smart_agent	"Needs to to check if this is a authorized" " source of data."
SMARTICRRSNBMACH	3-Error	The Import data signature mismatch for [chars].	The import data signature does not match with the data input	smart_agent	"Needs to to check if this is a authorized" " source of data."
SMARTICNADROESIAE	3-Error	The current role is not allowed to move to the new role: Current [chars] New [chars]	From the last HA role event we can only move to certain roles. The device has moved to a role which the Smart Agent cannot follow.	smart_agent	"Report this problem to Cisco"
SMARTICNADROESIAE	3-Error	The current role is not allowed to move to the new role: Current [chars] New [chars]	From the last HA role event we can only move to certain roles. The device has moved to a role which the Smart Agent cannot follow.	smart_agent	"Report this problem to Cisco"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SMART_IC3INVALID_TAG	3-Error	The entitlement tag is invalid: [chars]	The entitlement tag for a license is not defined in the CSSM_NAME . This is a Cisco internal problem and should be reported to Cisco.	smart_agent	"report this error to Cisco"
SMART_IC3INVALID_TAG	3-Error	The entitlement tag is invalid: [chars]	The entitlement tag for a license is not defined in the CSSM_NAME . This is a Cisco internal problem and should be reported to Cisco.	smart_agent	"report this error to Cisco"
SMART_IC3NOTAUTHORIZED	3-Error	The entitlement [chars] is Not Authorized to be used. Reason: [chars]	The customer is using a license that they are not authorized to use.	smart_agent	"Customer needs to go to the smart licensing portal " "to view their entitlements to figure out why they are not authorized " "to use this license."
SMART_IC3NOTAUTHORIZED	3-Error	The entitlement [chars] is Not Authorized to be used. Reason: [chars]	The customer is using a license that they are not authorized to use.	smart_agent	"Customer needs to go to the smart licensing portal " "to view their entitlements to figure out why they are not authorized " "to use this license."
SMART_IC3OUTOFCOMPLIANCE	3-Error	One or more entitlements are out of compliance	The customer is using a license that they have not purchased or they are using more licenses than they have purchased. Sent once when the Out Of compliance state is detected. Sent once per week after that until corrected.	smart_agent	"Customer needs to go to the smart licensing portal " "to view their entitlements to figure out why they are out of compliance."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SMARTLICOUTCOMPLIANCE	3-Error	One or more entitlements are out of compliance	The customer is using a license that they have not purchased or they are using more licenses than they have purchased. Sent once when the Out Of compliance state is detected. Sent once per week after that until corrected.	smart_agent	"Customer needs to go to the smart licensing portal " "to view their entitlements to figure out why they are out of compliance."
SMARTLICCONFUOSNC	3-Error	Trusted Store PLR Enable flag not in sync with System Configuration TS [chars] Config [chars]	Smart Licensing Configuration does not match the value of the PLR enable flag in Trusted Store. This can happen if a configuration is copied onto the system and a reload occurs. If the new configuration does not contain the Smart Licensing Enable command the value in Trusted Store will not match.	smart_agent	"Apply the desired Smart Licensing PLR Configuration Command and persist the configuration."
SMARTLICCONFUOSNC	3-Error	Trusted Store PLR Enable flag not in sync with System Configuration TS [chars] Config [chars]	Smart Licensing Configuration does not match the value of the PLR enable flag in Trusted Store. This can happen if a configuration is copied onto the system and a reload occurs. If the new configuration does not contain the Smart Licensing Enable command the value in Trusted Store will not match.	smart_agent	"Apply the desired Smart Licensing PLR Configuration Command and persist the configuration."
SMARTLICPOLYNSALFIED	3-Error	The install of a new licensing policy has failed:[chars]	A Policy code installation failed in policy mode.	smart_agent	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SMARTLICPOLYNSALLAID</del>	3-Error	The install of a new licensing policy has failed:[chars]	A Policy code installation failed in policy mode.	smart_agent	-
<del>SMARTLICRELOCPCNE</del>	3-Error	Smart Licensing registration has expired because the system time was \changed outside the validity period of the registration period. The agent will transition to the un-registered state\ in 60 minutes.	The system clock has been changed so that it is now outside the valid registration \period. If the clock is reset to a value inside the registration validity period \within one hour smart licensing will continue function normally. If the clock is \not reset the device will become un-registered and a new id token will need to be \obtained to re-register the device. The registration validity period is defined by \the start and end date in the id certificate. use 'show license tech support' to get the id \certificate information.	smart_agent	"Set the system clock back to the correct date and time"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>S_A_R_I_C_E_M_I_D_P_A_C_H_C_O_D_E</del>	3-Error	Smart Licensing registration has expired because the system time was \changed outside the validity period of the registration period. The agent will transition to the un-registered state\ in 60 minutes.	The system clock has been changed so that it is now outside the valid registration \period. If the clock is reset to a value inside the registration validity period \within one hour smart licensing will continue function normally. If the clock is \not reset the device will become un-registered and a new id token will need to be \obtained to re-register the device. The registration validity period is defined by \the start and end date in the id certificate. use 'show license tech support' to get the id \certificate information.	smart_agent	"Set the system clock back to the correct date and time"
<del>S_A_R_I_C_E_M_I_D_P_A_C_H_C_O_D_E</del>	3-Error	Duplicate authorization code found in meta file for one device in HA stack for use [chars].	The customer is using a meta file which contains Duplicate authorization code for one device in HA stack	smart_agent	"Customer needs to use a meta file which contains " "only one authorized code for each device in HA stack"
<del>S_A_R_I_C_E_M_I_D_P_A_C_H_C_O_D_E</del>	3-Error	Duplicate authorization code found in meta file for one device in HA stack for use [chars].	The customer is using a meta file which contains Duplicate authorization code for one device in HA stack	smart_agent	"Customer needs to use a meta file which contains " "only one authorized code for each device in HA stack"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SMARTLicensing</del>	3-Error	Unable to generate authorization return code for [chars].	Smart Licensing is unable to generate an authorization return code. The reservation authorization code has been removed from the system. To return the license to the smart account please contact TAC.	smart_agent	CALL_TAC
<del>SMARTLicensing</del>	3-Error	Unable to generate authorization return code for [chars].	Smart Licensing is unable to generate an authorization return code. The reservation authorization code has been removed from the system. To return the license to the smart account please contact TAC.	smart_agent	CALL_TAC
<del>SMARTLicensing</del>	3-Error	No authorization code found in meta file which matches with any udi in stack.	The customer is using a meta file which does not contain any authorized code for this HA stack	smart_agent	"Customer needs to use a meta file which contains " "authorized codes for this HA stack"
<del>SMARTLicensing</del>	3-Error	No authorization code found in meta file which matches with any udi in stack.	The customer is using a meta file which does not contain any authorized code for this HA stack	smart_agent	"Customer needs to use a meta file which contains " "authorized codes for this HA stack"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SMARTAGENT_FAILURE	3-Error	The license reservation information on the active and standby does not match. Licensing HA will not work properly: [chars]	In HA configuration if there is any mismatch in reservation configuration between the nodes this notification is to be send. The values to be compared for determining mismatch between nodes are - reservation enable state reservation version reservation type authorization code validation status and export enable status. If the standby takes over as active you will not have the same licenses available and your device may not work properly.	smart_agent	"Change reservation configuration in either/both " "the nodes to match each other"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SMART_AGENT</del>	3-Error	The license reservation information on the active and standby does not match. Licensing HA will not work properly: [chars]	In HA configuration if there is any mismatch in reservation configuration between the nodes this notification is to be send. The values to be compared for determining mismatch between nodes are - reservation enable state reservation version reservation type authorization code validation status and export enable status. If the standby takes over as active you will not have the same licenses available and your device may not work properly.	smart_agent	"Change reservation configuration in either/both " "the nodes to match each other"
<del>SMART_AGENT</del>	3-Error	Certificate Mismatch: \Development [chars] Certificate being used with a Production Root Certificate. \Use the \test license smart dev-cert enable\ CLI to set the DEV root cert.	The Production Root Certificate is being used with \Development certificates.	smart_agent	"Please activate the Development Root Certificate \from the CLI. ie. \test license smart dev-cert enable\''"
<del>SMART_AGENT</del>	3-Error	Certificate Mismatch: \Development [chars] Certificate being used with a Production Root Certificate. \Use the \test license smart dev-cert enable\ CLI to set the DEV root cert.	The Production Root Certificate is being used with \Development certificates.	smart_agent	"Please activate the Development Root Certificate \from the CLI. ie. \test license smart dev-cert enable\''"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SMART_CRM_MISMATCH</del>	3-Error	Certificate type mismatch. Development Root Certificate is being used with Production certificates.	The Development Root Certificate is being used with Production certificates. Someone used a test command to set the Development root certificate but the systems is connected to the production CSSM	smart_agent	"Use the test command to reset the certificate."
<del>SMART_CRM_MISMATCH</del>	3-Error	Certificate type mismatch. Development Root Certificate is being used with Production certificates.	The Development Root Certificate is being used with Production certificates. Someone used a test command to set the Development root certificate but the systems is connected to the production CSSM	smart_agent	"Use the test command to reset the certificate."
<del>SMART_CR_INSTALL_FAIL</del>	3-Error	The install of a new licensing trust code has failed on [chars]: [chars].	Trust Code Installation failed on the device in policy mode.	smart_agent	-
<del>SMART_CR_INSTALL_FAIL</del>	3-Error	The install of a new licensing trust code has failed on [chars]: [chars].	Trust Code Installation failed on the device in policy mode.	smart_agent	-
SMART_CU_UTILY_EXPIRED	3-Error	SA_NAME Utility certificate has expired.	SA_NAME utility certificate has expired. This means that the registration period has expired. Smart Licensing will transition to the unregistered state. Please re-register this product to correct the problem.	smart_agent	"Please check the communications settings and "network connectivity to the "CSSM_NAME " or satellite." "Also verify your system clock is correct"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SMART_LICENSE_EXPIRED	3-Error	SA_NAME Utility certificate has expired.	SA_NAME utility certificate has expired. This means that the registration period has expired. Smart Licensing will transition to the unregistered state. Please re-register this product to correct the problem.	smart_agent	"Please check the communications settings and "network connectivity to the "CSSM_NAME " or satellite." "Also verify your system clock is correct"
SMART_LICENSE_RENEW_FAILED	3-Error	SA_NAME Utility certificate renewal failed	SA_NAME Utility cert renew failed this will occur once per day until the renewal is successful or the current certificate expires	smart_agent	"Please check the communications settings and "network connectivity to the "CSSM_NAME " or satellite." "Also verify your system clock is correct"
SMART_LICENSE_RENEW_FAILED	3-Error	SA_NAME Utility certificate renewal failed	SA_NAME Utility cert renew failed this will occur once per day until the renewal is successful or the current certificate expires	smart_agent	"Please check the communications settings and "network connectivity to the "CSSM_NAME " or satellite." "Also verify your system clock is correct"
SMART_LICENSE_REPORT_FAILED	3-Error	SA_NAME Utility has failed to send usage Report	Smart licensing failed to send a usage report because of a network error.	smart_agent	"Please check the communications settings and "network connectivity to the "CSSM_NAME " or satellite."
SMART_LICENSE_REPORT_FAILED	3-Error	SA_NAME Utility has failed to send usage Report	Smart licensing failed to send a usage report because of a network error.	smart_agent	"Please check the communications settings and "network connectivity to the "CSSM_NAME " or satellite."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SMARTLICNGNOISAD</del>	4-Warning	Smart Licensing configuration has not been saved	This is only an informational message to the customer to remind them to save the configuration	smart_agent	"save the configuration"
<del>SMARTLICNGNOISAD</del>	4-Warning	Smart Licensing configuration has not been saved	This is only an informational message to the customer to remind them to save the configuration	smart_agent	"save the configuration"
<del>SMARTLWLEWRNG</del>	4-Warning	Evaluation period will expire in [chars].	The device is using the evaluation period which will expire in the specified time. This will be sent at the following intervals prior to expiration: 60 days 30 days every week in the last 30 days every day in the last week every hour in the last day.	smart_agent	"Register this device with the " CSSM_NAME " before the evaluation period expires."
<del>SMARTLWLEWRNG</del>	4-Warning	Evaluation period will expire in [chars].	The device is using the evaluation period which will expire in the specified time. This will be sent at the following intervals prior to expiration: 60 days 30 days every week in the last 30 days every day in the last week every hour in the last day.	smart_agent	"Register this device with the " CSSM_NAME " before the evaluation period expires."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SMARTAGENT</del> SMARTAGENT	4-Warning	The satellite this device is connected to is an older version that does not support export authorization keys.	The satellite this device is connected to is an older version that does not support export authorization keys and a request for an export authorization key has been made.	smart_agent	"Either update the satellite to the latest version" " that supports export authorization keys or change the URL on this" " device to point to a different satellite."
<del>SMARTAGENT</del> SMARTAGENT	4-Warning	The satellite this device is connected to is an older version that does not support export authorization keys.	The satellite this device is connected to is an older version that does not support export authorization keys and a request for an export authorization key has been made.	smart_agent	"Either update the satellite to the latest version" " that supports export authorization keys or change the URL on this" " device to point to a different satellite."
<del>SMARTAGENT</del> SMARTAGENT	4-Warning	The handle attribute version between two devices are different. [chars]	The devices inside a cluster do not have the same operational capability. This is not an issue if all devices use only the functionality that is supported by all members of a stack or cluster. However it's a good practice to have have all devices in a stack or cluster use the same software version.	smart_agent	"Ensure that all devices in the stack or cluster" "are using the same version of the software."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SMART_AGENT_MISMATCH</del>	4-Warning	The handle attribute version between two devices are different. [chars]	The devices inside a cluster do not have the same operational capability. This is not an issue if all devices use only the functionality that is supported by all members of a stack or cluster. However it's a good practice to have have all devices in a stack or cluster use the same software version.	smart_agent	"Ensure that all devices in the stack or cluster " "are using the same version of the software."
SMART_IC4N_OVERAGE	4-Warning	One or more entitlements are in overage	This is for information only. No action is necessary. The customer is still in compliance and within the overage amount as specified in their contract.	smart_agent	-
SMART_IC4N_OVERAGE	4-Warning	One or more entitlements are in overage	This is for information only. No action is necessary. The customer is still in compliance and within the overage amount as specified in their contract.	smart_agent	-
<del>SMART_ONPREM_UNSUPPORTED</del>	4-Warning	SA_NAME CSSM OnPrem is down rev and does not support the enhanced policy and usage reporting mode.	SA_NAME The CSSM OnPrem that this product instance is connected to is down rev and does not support the enhanced policy and usage reporting mode.	smart_agent	" Upgrade the OnPrem."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SMARTAGENTCSSM	4-Warning	SA_NAME CSSM OnPrem is down rev and does not support the enhanced policy and usage reporting mode.	SA_NAME The CSSM OnPrem that this product instance is connected to is down rev and does not support the enhanced policy and usage reporting mode.	smart_agent	" Upgrade the OnPrem."
SMARTAGENTCSSM	4-Warning	[chars] License Reservation process must be completed with the 'license smart reservation install' command. Reservation started on [chars]	A reservation request is in progress. This will be sent every day until a reservation authorization code is installed.	smart_agent	"Customer needs to get a reservation authorization " "code from the " CSSM_NAME " and install it on " "the device"
SMARTAGENTCSSM	4-Warning	[chars] License Reservation process must be completed with the 'license smart reservation install' command. Reservation started on [chars]	A reservation request is in progress. This will be sent every day until a reservation authorization code is installed.	smart_agent	"Customer needs to get a reservation authorization " "code from the " CSSM_NAME " and install it on " "the device"
SMARTAGENTUTIL	4-Warning	SA_NAME Smart transport is not configured for utility reporting	SA_NAME Utility is enabled and we have a subscription but Smart transport is not configured.	smart_agent	"Enable and configure the smart transport"
SMARTAGENTUTIL	4-Warning	SA_NAME Smart transport is not configured for utility reporting	SA_NAME Utility is enabled and we have a subscription but Smart transport is not configured.	smart_agent	"Enable and configure the smart transport"
SMARTAGENTUTIL	4-Warning	SA_NAME Utility URL setting does not match the FQDN in the utility certificate.	SA_NAME Smart licensing url setting must match the FQDN embedded in the utility certificate	smart_agent	" Get a new utility certificate from Cisco."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>S/ARI/UTILITY_QDN_MISMATCH</del>	4-Warning	SA_NAME Utility URL setting does not match the FQDN in the utility certificate.	SA_NAME Smart licensing url setting must match the FQDN embedded in the utility certificate	smart_agent	" Get a new utility certificate from Cisco."
<del>S/ARI/UTILITY_SUBSCRIPTION</del>	4-Warning	SA_NAME Entitlement is in use without subscription Id.	SA_NAME If an entitlement is in use for which there is no subscription ID an SLP RUM report will be generated without a subscription id.	smart_agent	-
<del>S/ARI/UTILITY_SUBSCRIPTION</del>	4-Warning	SA_NAME Entitlement is in use without subscription Id.	SA_NAME If an entitlement is in use for which there is no subscription ID an SLP RUM report will be generated without a subscription id.	smart_agent	-
<del>S/ARI/UTILITY_TRANSPORT</del>	4-Warning	SA_NAME Smart transport or cslu transport is not configured for utility reporting	SA_NAME Utility is enabled and we have a subscription but Smart or cslu transport is not configured.	smart_agent	"Enable and configure the smart or cslu transport"
<del>S/ARI/UTILITY_TRANSPORT</del>	4-Warning	SA_NAME Smart transport or cslu transport is not configured for utility reporting	SA_NAME Utility is enabled and we have a subscription but Smart or cslu transport is not configured.	smart_agent	"Enable and configure the smart or cslu transport"
<del>S/ARI/UTILITY_TRUSTCODE</del>	4-Warning	SA_NAME Trust should be established before the device communicates with CSSM if utility is enabled and transport is set to smart.	SA_NAME Utility is enabled and transport is set to smart or cslu then there should be trust code before communicating with CSSM.	smart_agent	"Establish the trust with CSSM before sending the usage report"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SMART_CUITY_TRUST_CODE</del>	4-Warning	SA_NAME Trust should be established before the device communicates with CSSM if utility is enabled and transport is set to smart.	SA_NAME Utility is enabled and transport is set to smart or csu then there should be trust code before communicating with CSSM.	smart_agent	"Establish the trust with CSSM before sending the usage report"
<del>SMART_CUITY_AUTH_EXPIRED</del>	5-Notice	Authorization period expired	The device has not communicated with the CSSM_NAME for 90 days and the device has not automatically renewed the entitlement authorizations. Some features may restrict functionality. This will be sent at the time of expiration and once per week until communications is restored or the registration period expires.	smart_agent	COMM_INFO
<del>SMART_CUITY_AUTH_EXPIRED</del>	5-Notice	Authorization period expired	The device has not communicated with the CSSM_NAME for 90 days and the device has not automatically renewed the entitlement authorizations. Some features may restrict functionality. This will be sent at the time of expiration and once per week until communications is restored or the registration period expires.	smart_agent	COMM_INFO

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SMARTLICCOMMINTALED</del>	5-Notice	Failed to initialize communications with the CSSM_NAME : [chars]	Smart Licensing could not initialize communication with the CSSM_NAME	smart_agent	COMM_INFO
<del>SMARTLICCOMMINTALED</del>	5-Notice	Failed to initialize communications with the CSSM_NAME : [chars]	Smart Licensing could not initialize communication with the CSSM_NAME	smart_agent	COMM_INFO
<del>SMARTLICCOMMRESORCD</del>	5-Notice	Communications with [chars] restored	Smart Agent communication with the CSSM_NAME or CSLU has been restored.	smart_agent	-
<del>SMARTLICCOMMRESORCD</del>	5-Notice	Communications with [chars] restored	Smart Agent communication with the CSSM_NAME or CSLU has been restored.	smart_agent	-
<del>SMARTLICENDPONTRESET</del>	5-Notice	End Point list reset	Complete list of End Points has to be reported to CSSM. Agent has just initiated Authorization request after registration	smart_agent	"Complete end point list for all the licenses has " "to be reported by the product instance."
<del>SMARTLICENDPONTRESET</del>	5-Notice	End Point list reset	Complete list of End Points has to be reported to CSSM. Agent has just initiated Authorization request after registration	smart_agent	"Complete end point list for all the licenses has " "to be reported by the product instance."
<del>SMARTLICSEVAL_START</del>	5-Notice	Entering evaluation period	The device is not registered with the CSSM_NAME and is using licenses. A total of 90 days of evaluation period will be available.	smart_agent	"Register this device with the " CSSM_NAME "using an ID token"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SMART_LICSEVAL_START</del>	5-Notice	Entering evaluation period	The device is not registered with the CSSM_NAME and is using licenses. A total of 90 days of evaluation period will be available.	smart_agent	"Register this device with the " CSSM_NAME "using an ID token"
<del>SMART_LICNCOMPLIANCE</del>	5-Notice	All entitlements and licenses in use on this device are authorized	All customer requested entitlements are authorized by Cisco licensing services.	smart_agent	-
<del>SMART_LICNCOMPLIANCE</del>	5-Notice	All entitlements and licenses in use on this device are authorized	All customer requested entitlements are authorized by Cisco licensing services.	smart_agent	-
<del>SMART_LICSRNCOMPLIANCE</del>	5-Notice	The entitlement [chars] in use on this device is authorized	The customer has requested for an entitlement that they are authorized to use.	smart_agent	-
<del>SMART_LICSRNCOMPLIANCE</del>	5-Notice	The entitlement [chars] in use on this device is authorized	The customer has requested for an entitlement that they are authorized to use.	smart_agent	-
<del>SMART_LICSEMCLOCKCHANGED</del>	5-Notice	SA_NAME System clock has been changed	The system clock has changed and the SA_NAME has updated its internal timers	smart_agent	-
<del>SMART_LICSEMCLOCKCHANGED</del>	5-Notice	SA_NAME System clock has been changed	The system clock has changed and the SA_NAME has updated its internal timers	smart_agent	-
<del>SMART_LICUTILITYRENEWSUCCESS</del>	5-Notice	SA_NAME Utility certificate renewal successful	-	smart_agent	-
<del>SMART_LICUTILITYRENEWSUCCESS</del>	5-Notice	SA_NAME Utility certificate renewal successful	-	smart_agent	-



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SMARTLIC6AGENTREADY</del>	6-Information	Smart Agent is already Deregistered with the CSSM.	Smart Licensing has already de-registered with Cisco.	smart_agent	-
<del>SMARTLIC6AGENTREADY</del>	6-Information	Smart Agent is already Deregistered with the CSSM.	Smart Licensing has already de-registered with Cisco.	smart_agent	-
<del>SMARTLIC6AGENTREADY</del>	6-Information	This device is already registered with the CSSM_NAME .	Smart Licensing on this device has already registered with the CSSM_NAME	smart_agent	"Use the force option when registering or " "remove this device from your virtual account on the " CSSM_NAME
<del>SMARTLIC6AGENTREADY</del>	6-Information	This device is already registered with the CSSM_NAME .	Smart Licensing on this device has already registered with the CSSM_NAME	smart_agent	"Use the force option when registering or " "remove this device from your virtual account on the " CSSM_NAME
<del>SMARTLIC6AGENTREADY</del>	6-Information	SA_NAME De-registration with the CSSM_NAME was successful	Smart Licensing de-registration successful.	smart_agent	-
<del>SMARTLIC6AGENTREADY</del>	6-Information	SA_NAME De-registration with the CSSM_NAME was successful	Smart Licensing de-registration successful.	smart_agent	-
<del>SMARTLIC6AGENTREADY</del>	6-Information	SA_NAME is enabled	SA_NAME is enabled and ready to process licensing requests.	smart_agent	-
<del>SMARTLIC6AGENTREADY</del>	6-Information	SA_NAME is enabled	SA_NAME is enabled and ready to process licensing requests.	smart_agent	-
<del>SMARTLIC6AGENTREADY</del>	6-Information	SA_NAME is initialized	SA_NAME is fully initialized and ready for use.	smart_agent	-
<del>SMARTLIC6AGENTREADY</del>	6-Information	SA_NAME is initialized	SA_NAME is fully initialized and ready for use.	smart_agent	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SMARTLICENSESUCCESS</del>	6-Information	SA_NAME Registration successful. udi [chars]	Smart Licensing registration was successful.	smart_agent	-
<del>SMARTLICENSESUCCESS</del>	6-Information	SA_NAME Registration successful. udi [chars]	Smart Licensing registration was successful.	smart_agent	-
<del>SMARTLICENSESUCCESS</del>	6-Information	Authorization renewal successful. State=[chars] for udi [chars]	The automatic authorization renewal was successful	smart_agent	-
<del>SMARTLICENSESUCCESS</del>	6-Information	Authorization renewal successful. State=[chars] for udi [chars]	The automatic authorization renewal was successful	smart_agent	-
<del>SMARTLICENSESUCCESS</del>	6-Information	A new licensing authorization code was successfully installed on [chars]	An authorization code was successfully installed in policy mode.	smart_agent	-
<del>SMARTLICENSESUCCESS</del>	6-Information	A new licensing authorization code was successfully installed on [chars]	An authorization code was successfully installed in policy mode.	smart_agent	-
<del>SMARTLICENSESUCCESS</del>	6-Information	A licensing authorization code has been removed from [chars].	A licensing authorization code has been removed.	smart_agent	-
<del>SMARTLICENSESUCCESS</del>	6-Information	A licensing authorization code has been removed from [chars].	A licensing authorization code has been removed.	smart_agent	-
<del>SMARTLICENSESUCCESS</del>	6-Information	[chars] Smart License Conversion successful	A license conversion has already been done for the UDI specified. Only one conversion process is allowed.	smart_agent	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SMARTCONVERTALREADY</del>	6-Information	[chars] Smart License Conversion successful	A license conversion has already been done for the UDI specified. Only one conversion process is allowed.	smart_agent	-
<del>SMARTCONVERTALREADY</del>	6-Information	[chars] License [chars] has been converted to [chars] with a count of [dec]	The traditional license specified has been previously been converted to a smart license and has previously been deposited into the customers smart account.	smart_agent	-
<del>SMARTCONVERTALREADY</del>	6-Information	[chars] License [chars] has been converted to [chars] with a count of [dec]	The traditional license specified has been previously been converted to a smart license and has previously been deposited into the customers smart account.	smart_agent	-
<del>SMARTCONVERTSUCCESS</del>	6-Information	[chars] License [chars] has been converted to [chars] with a count of [dec]	The traditional license specified has been converted to a smart license and has been deposited into the customers smart account.	smart_agent	-
<del>SMARTCONVERTSUCCESS</del>	6-Information	[chars] License [chars] has been converted to [chars] with a count of [dec]	The traditional license specified has been converted to a smart license and has been deposited into the customers smart account.	smart_agent	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SMART_LIC6CONVERTSTART	6-Information	Smart License Conversion has started	The smart agent for licensing has initiated the conversion process to convert traditional licenses to smart licenses and to deposit those licenses into the customers smart account.	smart_agent	-
SMART_LIC6CONVERTSTART	6-Information	Smart License Conversion has started	The smart agent for licensing has initiated the conversion process to convert traditional licenses to smart licenses and to deposit those licenses into the customers smart account.	smart_agent	-
SMART_LIC6CONVERTSUCCESS	6-Information	[chars] Smart License Conversion successful	The entire license conversion process was successful. All licenses have been deposited into the customer's smart account.	smart_agent	-
SMART_LIC6CONVERTSUCCESS	6-Information	[chars] Smart License Conversion successful	The entire license conversion process was successful. All licenses have been deposited into the customer's smart account.	smart_agent	-
SMART_LIC6DISABLED	6-Information	SA_NAME disabled	Smart Licensing has been disabled by the customer	smart_agent	-
SMART_LIC6DISABLED	6-Information	SA_NAME disabled	Smart Licensing has been disabled by the customer	smart_agent	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>S_AgentEntRenVCS</del>	6-Information	Entitlement authorization renewal with CSSM_NAME successful	Authorization renewal request is successful.	smart_agent	-
<del>S_AgentEntRenVCS</del>	6-Information	Entitlement authorization renewal with CSSM_NAME successful	Authorization renewal request is successful.	smart_agent	-
<del>S_AgentExpConFID</del>	6-Information	Usage of export controlled features is [chars]	This tells the customer if usage of export controlled features or a particular feature is allowed or not allowed	smart_agent	-
<del>S_AgentExpConFID</del>	6-Information	Usage of export controlled features is [chars]	This tells the customer if usage of export controlled features or a particular feature is allowed or not allowed	smart_agent	-
<del>S_AgentExpAmbMCH</del>	6-Information	The export authorization key information on the active and standby does not match. Licensing HA will not work properly: [chars]	The standby or members to not have the export authorization keys for all the same features as the active has. If the standby takes over as active you will not have the same licenses available and your device may not work properly.	smart_agent	"Get proper export authorization keys on all nodes" " using the 'license smart export request all' command. Use the" " 'license show status' command to see the export status of all" " standby or member devices."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SMARTAGENTHA_MISMATCH</del>	6-Information	The export authorization key information on the active and standby does not match. Licensing HA will not work properly: [chars]	The standby or members to not have the export authorization keys for all the same features as the active has. If the standby takes over as active you will not have the same licenses available and your device may not work properly.	smart_agent	"Get proper export authorization keys on all nodes" " using the 'license smart export request all' command. Use the" " 'license show status' command to see the export status of all" " standby or member devices."
<del>SMARTAGENTHA_ROLE_CHANGED</del>	6-Information	Smart Agent HA chassis role changed to [chars].	Smart Agent chassis role on HA has been changed to either active or standby.	smart_agent	-
<del>SMARTAGENTHA_ROLE_CHANGED</del>	6-Information	Smart Agent HA chassis role changed to [chars].	Smart Agent chassis role on HA has been changed to either active or standby.	smart_agent	-
<del>SMARTAGENTHA_ROLE_CHANGED</del>	6-Information	Smart Agent HA role changed to [chars].	Smart Agent role on HA RP has been changed to either active or standby.	smart_agent	-
<del>SMARTAGENTHA_ROLE_CHANGED</del>	6-Information	Smart Agent HA role changed to [chars].	Smart Agent role on HA RP has been changed to either active or standby.	smart_agent	-
<del>SMARTAGENTHA_MISMATCH</del>	6-Information	The host name has been changed to match a field in the device identifier UDI.	The host name has been changed to match a field in the device identifier UDI. Since the device identifier is sent to Cisco this may bypass your host name privacy settings. You can view the device identifier with the command \show license udi\.	smart_agent	"Change the host name so it does not include any fields in the device identifier."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SMART@CNVMTHEUD</del>	6-Information	The host name has been changed to match a field in the device identifier UDI.	The host name has been changed to match a field in the device identifier UDI. Since the device identifier is sent to Cisco this may bypass your host name privacy settings. You can view the device identifier with the command \show license udi\.	smart_agent	"Change the host name so it does not include any fields in the device identifier."
<del>SMART@CRNRWSS</del>	6-Information	Automatic registration renewal successful	Customer ID certificate has been renewed successfully	smart_agent	-
<del>SMART@CRNRWSS</del>	6-Information	Automatic registration renewal successful	Customer ID certificate has been renewed successfully	smart_agent	-
<del>SMART@PLRBLNCOM</del>	6-Information	Permanent License Reservation has been disabled. Please reboot the system to initialize Smart Licensing communications with Cisco.	During bootup Smart Licensing communications is not initialized if Permanent License Reservation PLR is enabled. To enable Smart Licensing	smart_agent	"reboot the system"
<del>SMART@PLRBLNCOM</del>	6-Information	Permanent License Reservation has been disabled. Please reboot the system to initialize Smart Licensing communications with Cisco.	During bootup Smart Licensing communications is not initialized if Permanent License Reservation PLR is enabled. To enable Smart Licensing	smart_agent	"reboot the system"
<del>SMART@POLYSALS_CCS</del>	6-Information	A new licensing policy was successfully installed	A Policy code was successfully installed in policy mode.	smart_agent	-
<del>SMART@POLYSALS_CCS</del>	6-Information	A new licensing policy was successfully installed	A Policy code was successfully installed in policy mode.	smart_agent	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SMART_USAGE_REQUIRED</del>	6-Information	A Usage report acknowledgement will be required in [dec] days.	Sent to inform the customer that RUM reporting to Cisco will be required	smart_agent	-
<del>SMART_USAGE_REQUIRED</del>	6-Information	A Usage report acknowledgement will be required in [dec] days.	Sent to inform the customer that RUM reporting to Cisco will be required	smart_agent	-
<del>SMART_RES_Authorization</del>	6-Information	Same Reservation Authorization Code already installed for UDI: [chars].	A list of reservation authorization codes is being installed. One of the authorization codes is in the list twice and has already been installed.	smart_agent	-
<del>SMART_RES_Authorization</del>	6-Information	Same Reservation Authorization Code already installed for UDI: [chars].	A list of reservation authorization codes is being installed. One of the authorization codes is in the list twice and has already been installed.	smart_agent	-
<del>SMART_RES_Authorization</del>	6-Information	Failed to validate the [chars] Reservation Authorization Code for udi [chars]. Changing to the unregistered state.	The reservation authorization code that was installed is not valid on this device.	smart_agent	"Get a new reservation authorization code and install it."
<del>SMART_RES_Authorization</del>	6-Information	Failed to validate the [chars] Reservation Authorization Code for udi [chars]. Changing to the unregistered state.	The reservation authorization code that was installed is not valid on this device.	smart_agent	"Get a new reservation authorization code and install it."
<del>SMART_RES_Authorization</del>	6-Information	License Reservation request canceled for udi [chars]. Smart Agent is now unregistered.	Sent when the customer cancels a reservation request by using the reservation cancel command	smart_agent	-



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SMARTLCSMFCANCELLED</del>	6-Information	License Reservation request canceled for udi [chars]. Smart Agent is now unregistered.	Sent when the customer cancels a reservation request by using the reservation cancel command	smart_agent	-
<del>SMARTLCSMFMATCH</del>	6-Information	The reserved licenses on the active and standby do not match. Use the 'show license status' command to see the exact error.	The Licenses reserved using the Specified License Reservation SLR feature in Smart Licensing and installed on the	smart_agent	"Ensure that the reservation authorization codes " "installed on all HA systems are for the same licenses. "
<del>SMARTLCSMFMATCH</del>	6-Information	The reserved licenses on the active and standby do not match. Use the 'show license status' command to see the exact error.	The Licenses reserved using the Specified License Reservation SLR feature in Smart Licensing and installed on the	smart_agent	"Ensure that the reservation authorization codes " "installed on all HA systems are for the same licenses. "
<del>SMARTLCSMRETURNED</del>	6-Information	[chars] License Reservation returned for udi [chars]. Smart Agent is now unregistered.	The reservatio authorization code has been returned. This will cause Smart Licensing to transition back to the un-registered state and start consuming the evaluation period.	smart_agent	-
<del>SMARTLCSMRETURNED</del>	6-Information	[chars] License Reservation returned for udi [chars]. Smart Agent is now unregistered.	The reservatio authorization code has been returned. This will cause Smart Licensing to transition back to the un-registered state and start consuming the evaluation period.	smart_agent	-
<del>SMARTLCSMINSALLD</del>	6-Information	[chars] License Reservation Authorization code installed for udi [chars]	A reservation authorization code was successfully installed.	smart_agent	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SMART_AGENT_LICENSED</del>	6-Information	[chars] License Reservation Authorization code installed for udi [chars]	A reservation authorization code was successfully installed.	smart_agent	-
<del>SMART_AGENT_THIRDPartyMODE</del>	6-Information	SA_NAME is out of Thirdparty Mode	SA_NAME is out of thirdparty mode and has stopped collecting and processing RUM reports	smart_agent.	-
<del>SMART_AGENT_THIRDPartyMODE</del>	6-Information	SA_NAME is out of Thirdparty Mode	SA_NAME is out of thirdparty mode and has stopped collecting and processing RUM reports	smart_agent.	-
<del>SMART_AGENT_THIRDPartyMODE</del>	6-Information	SA_NAME is in Thirdparty Mode	SA_NAME is in thirdparty mode and ready to collect and process RUM reports	smart_agent	-
<del>SMART_AGENT_THIRDPartyMODE</del>	6-Information	SA_NAME is in Thirdparty Mode	SA_NAME is in thirdparty mode and ready to collect and process RUM reports	smart_agent	-
<del>SMART_AGENT_TRUST_CODE_SUCCESS</del>	6-Information	A new licensing trust code was successfully installed on [chars].	Trust Code Installation Success on the device in policy mode.	smart_agent	-
<del>SMART_AGENT_TRUST_CODE_SUCCESS</del>	6-Information	A new licensing trust code was successfully installed on [chars].	Trust Code Installation Success on the device in policy mode.	smart_agent	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SMARTLOG.SACENACK	6-Information	A Usage report acknowledgement has not been received in the last [dec] days.	Once usage reports are transferred from the product to the CSLU they will be then sent to the CSSM and an ACK returned. The CSLU will send the ACK back to the product instance. If the ACK is not received in the needed amount of time this syslog will be displayed. This syslog will be sent once per week until the ACK is received.	smart_agent	-
SMARTLOG.SACENACK	6-Information	A Usage report acknowledgement has not been received in the last [dec] days.	Once usage reports are transferred from the product to the CSLU they will be then sent to the CSSM and an ACK returned. The CSLU will send the ACK back to the product instance. If the ACK is not received in the needed amount of time this syslog will be displayed. This syslog will be sent once per week until the ACK is received.	smart_agent	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SMART_CGILITY_NOACK	6-Information	A Usage report acknowledgement has not been received in the last [dec] days.	Once usage reports are transferred from the product to the CSLU they will be then sent to the CSSM and an ACK returned. The CSLU will send the ACK back to the product instance. If the ACK is not received in the needed amount of time this syslog will be displayed. This syslog will be sent once per week until the ACK is received.	smart_agent	-
SMART_CGILITY_NOACK	6-Information	A Usage report acknowledgement has not been received in the last [dec] days.	Once usage reports are transferred from the product to the CSLU they will be then sent to the CSSM and an ACK returned. The CSLU will send the ACK back to the product instance. If the ACK is not received in the needed amount of time this syslog will be displayed. This syslog will be sent once per week until the ACK is received.	smart_agent	-
SMART_CGILITY_STARTED	6-Information	SA_NAME Utility has started sending usage reports	SA_NAME utility has been enabled to the point where we are sending usage reports	smart_agent	-
SMART_CGILITY_STARTED	6-Information	SA_NAME Utility has started sending usage reports	SA_NAME utility has been enabled to the point where we are sending usage reports	smart_agent	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SMART_AGENT_USAGE_STOPPED</del>	6-Information	SA_NAME Utility has stopped sending usage reports: [chars]	SA_NAME Utility is not available and no longer sending usage reports.	smart_agent	-
<del>SMART_AGENT_USAGE_STOPPED</del>	6-Information	SA_NAME Utility has stopped sending usage reports: [chars]	SA_NAME Utility is not available and no longer sending usage reports.	smart_agent	-
<del>SMART_AGENT_TIMER_RESET</del>	7-Debug	Daily job timer reset	This message is used only for testing and does not indicate an error	smart_agent	-
<del>SMART_AGENT_TIMER_RESET</del>	7-Debug	Daily job timer reset	This message is used only for testing and does not indicate an error	smart_agent	-
SMC-2-BAD_ID_HW	2-Critical	Failed Identification Test in [chars] [[dec]/[dec]]\n\n The module in [chars] in this router may not be a genuine \n\ Cisco product. Cisco warranties and support programs only\n\ apply to genuine Cisco products. If Cisco determines that\n\ your insertion of non-Cisco memory WIC cards AIM cards \n\ Network Modules SPA cards GBICs or other modules into a \n\ Cisco product is the cause of a support issue Cisco may \n\ deny support under your warranty or under a Cisco support \n\ program such as SmartNet.\n\n	Hardware in the specified location could not be identified as \n\ a genuine Cisco product	c2800	"Contact TAC" LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SMC-2-FAILED_ID_HW	2-Critical	Failed Identification Test in [chars] [[dec]/[dec]]\n	There was a problem while identifying Hardware in the specified\n\ location.	c2800	"Contact TAC" LOG_SID_RECUR_ACTION
SMC-2-PROTO_HW	2-Critical	Module [chars] is a registered proto-type for Cisco Lab	Hardware in the specified location is a proto-type module that came\n\ from a Cisco Lab	c2800	"Contact TAC" LOG_SID_RECUR_ACTION
SMF4INVALID_ACTION	4-Warning	failed to create SMF entry for [enet] on [chars] with result [node]x	An internal software error occurred.	-	LOG_STD_ACTION
SMRP-2-ASSERTFAILED	2-Critical	SMRP assertion failed: [chars]	The software detected an inconsistency. This is considered a serious\n\ error. The router attempts to continue but SMRP processing may be\n\ impaired.	-	"Copy the error message exactly as it appears noting any SMRP problems\n\ that you are experiencing and report it to your technical support\n\ representative."
SMRP-5-NEIGHBORDOWN	5-Notice	[chars]: SMRP neighbor down - [chars]	SMRP cannot be started on an interface that is running\n\ pre-FDDITalk.	-	"Use FDDITalk on the FDDI ring if possible."
SMRP-5-PORTDOWN	5-Notice	[chars]: SMRP port down - [chars]	An SMRP port is down and is no longer operational.	-	"Notification message only. No action required."
SMRP-6-NEIGHBORUP	6-Information	[chars]: SMRP neighbor up - [chars]	A neighboring SMRP router has appeared.	-	"Notification message only. No action required."
SMRP-6-PORTUP	6-Information	[chars]: SMRP port up - [chars]	An SMRP port has come up.	-	"Notification message only. No action required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SMRP-7-DEBUGMSG	7-Debug	SMRP Debug: [chars]	This message is generated by some debug commands to provide additional\n\n information about conditions in SMRP.	-	"If you are experiencing problems in SMRP these messages should be\n\n provided along with any other information in a report to your\n\n technical support representative."
<del>SMTPCFCHECKFAIL</del>	3-Error	-	Triggers on an invalid SMTP command in the SMTP connection. This message indicates that a suspicious violation was detected that may be an attack to the mail server system.	cpp-ucode	"This is unusual traffic and may warrant investigation."
SNAPSHOT-2BADSTATE	2-Critical	Bad state for Snapshot block [chars][[dec]] location [dec]	An internal software error occurred.	-	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
<del>SNAPSHOT-2COMMANDERS</del>	2-Critical	Exceeded maximum dialer interfaces to watch. Ignoring [chars]	Snapshot is being used over more than 100 DDR interfaces.	-	"Do not use snapshot over more than 100 DDR interfaces."
<del>SMPB_KSA-3MEMORY</del>	3-Error	Memory not available for [chars] for [chars]	Data Collection or Transfer could not be successfully carried out because of lack of memory.	dcm	LOG_SID_REDUCE_ACTION
<del>SMPB_KSA-3MEMORY</del>	3-Error	Memory not available for [chars] for [chars]	Data Collection or Transfer could not be successfully carried out because of lack of memory.	dcm	LOG_SID_REDUCE_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SMB</del> <u>IS</u> <del>FILE</del> <u>NO</u> <del>MEMORY</del>	3-Error	Memory not available for [chars] for [chars]	Data Collection or Transfer could not be successfully carried out because of lack of memory.	snmp	<del>LOG</del> <u>SID</u> <del>REDUCE</del> <u>ACTION</u>
<del>SMB</del> <u>IS</u> <del>FILE</del> <u>WRITE</u> <del>FAILED</del>	3-Error	File Write failed for the remote file [chars]	Username or password specified in the error message might not have the required privileges to write a file to the network management station specified in the error message or the destination directory specified in the error message is invalid.	snmp	"Ensure that the user name and password in the network " "management station address has the necessary privileges " "to write to the destination directory."
<del>SMB</del> <u>IS</u> <del>FILE</del> <u>WRITE</u> <del>FAILED</del>	3-Error	File Write failed for the remote file [chars]	Username or password specified in the error message might\n\n not have the required privileges to write a file to the \n\n network management station specified in the error message\n\n or the destination directory specified in the error message\n\n is invalid.	dcm	"Ensure that the user name and password in the network \n\n management station address has the necessary privileges \n\n to write to the destination directory."
<del>SMB</del> <u>IS</u> <del>FILE</del> <u>WRITE</u> <del>FAILED</del>	3-Error	File Write failed for the remote file [chars]	Username or password specified in the error message might\n\n not have the required privileges to write a file to the \n\n network management station specified in the error message\n\n or the destination directory specified in the error message\n\n is invalid.	dcm	"Ensure that the user name and password in the network \n\n management station address has the necessary privileges \n\n to write to the destination directory."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SMPLKSPACSMALBHR</del>	3-Error	Buffer size is insufficient to accommodate even the header part for [chars]	The buffer size is insufficient to accommodate the header for the bulk data file. The header contains the schema definitions of all the configured schemas.	snmp	"Increase the maximum buffer size using the " " <del>Ctrl+Buffsize+NCtrl</del> size-of-buffer command " "where size-of-buffer is the increased buffer size."
<del>SMPLKSPACSMALBHR</del>	3-Error	Buffer size is insufficient to accommodate even the header part for [chars]	The buffer size is insufficient to accommodate the header \n\ for the bulk data file. The header contains the schema \n\ definitions of all the configured schemas.	dcm	"Increase the maximum buffer size using the \n\ <del>Ctrl+Buffsize+NCtrl</del> size-of-buffer command \n\ where size-of-buffer is the increased buffer size."
<del>SMPLKSPACSMALBHR</del>	3-Error	Buffer size is insufficient to accommodate even the header part for [chars]	The buffer size is insufficient to accommodate the header \n\ for the bulk data file. The header contains the schema \n\ definitions of all the configured schemas.	dcm	"Increase the maximum buffer size using the \n\ <del>Ctrl+Buffsize+NCtrl</del> size-of-buffer command \n\ where size-of-buffer is the increased buffer size."
<del>SMPLKSPACSMALBHR</del>	4-Warning	Buffer size too small to accommodate data for one collection interval for [chars]	The bulk data file is too large for the configured buffer size for a single transfer interval. Data collection will continue in another new buffer of the configured size and the collected buffer will be transferred to the configured destination.	snmp	"Increase the maximum buffer size using the " " <del>Ctrl+Buffsize+NCtrl</del> size-of-buffer command " "where size-of-buffer is the increased buffer size."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SMB</del> <del>IS</del> <del>SM</del> <del>BU</del> <del>FF</del> <del>ER</del> <del>OVER</del>	4-Warning	Buffer size too small to accommodate data for one collection\n\n interval for [chars]	The bulk data file is too large for the configured buffer \n\ size for a single transfer interval. Data collection will \n\ continue in another new buffer of the configured size and \n\ the collected buffer will be transferred to the configured \n\ destination.	dcm	"Increase the maximum buffer size using the \n\ <del>&lt;Ctrl&gt;+&lt;BuffSize&gt;+&lt;Ctrl&gt;</del> size-of-buffer command \n\ where size-of-buffer is the increased buffer size."
<del>SMB</del> <del>IS</del> <del>SM</del> <del>BU</del> <del>FF</del> <del>ER</del> <del>OVER</del>	4-Warning	Buffer size too small to accommodate data for one collection\n\n interval for [chars]	The bulk data file is too large for the configured buffer \n\ size for a single transfer interval. Data collection will \n\ continue in another new buffer of the configured size and \n\ the collected buffer will be transferred to the configured \n\ destination.	dcm	"Increase the maximum buffer size using the \n\ <del>&lt;Ctrl&gt;+&lt;BuffSize&gt;+&lt;Ctrl&gt;</del> size-of-buffer command \n\ where size-of-buffer is the increased buffer size."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SMBULKSNMPUNREACH</del>	4-Warning	Primary network management station is unreachable for [chars]	The Collected Bulk data file could not be successfully transferred to the primary network management station address specified in the error message. This condition can occur because the primary network management address is not configured or the configured primary network management station address is unreachable. If a secondary network management station address is configured the collected bulk data file will be sent to the secondary network management station address.	snmp	"Ensure that the primary network management station address " "is configured. If the primary network management station " "address is configured check the connectivity to the " "destination indicated by the primary network management " " station address specified in the error message."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SMBLKSPR_UNREACH	4-Warning	Primary network management station is unreachable for [chars]	The Collected Bulk data file could not be successfully \n\ transferred to the primary network management station address\n\ specified in the error message. This condition can occur \n\ because the primary network management address is not \n\ configured or the configured primary network management \n\ station address is unreachable. If a secondary network \n\ management station address is configured the collected bulk \n\ data file will be sent to the secondary network management \n\ station address.	dcm	"Ensure that the primary network management station address \n\ is configured. If the primary network management station \n\ address is configured check the connectivity to the\n\ destination indicated by the primary network management\n\ station address specified in the error message."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SMBULKSPURUNREACH</del>	4-Warning	Primary network management station is unreachable for [chars]	The Collected Bulk data file could not be successfully \n\ transferred to the primary network management station address\n\ specified in the error message. This condition can occur \n\ because the primary network management address is not \n\ configured or the configured primary network management \n\ station address is unreachable. If a secondary network \n\ management station address is configured the collected bulk \n\ data file will be sent to the secondary network management \n\ station address.	dcm	"Ensure that the primary network management station address \n\ is configured. If the primary network management station \n\ address is configured check the connectivity to the\n\ destination indicated by the primary network management\n\ station address specified in the error message."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SNMPSECURUNECAE</del>	4-Warning	Secondary network management station is unreachable for [chars]	The collected bulk data file could not be successfully transferred to the secondary network management station address destination specified in the error message. This condition can occur because the secondary network management station address is not configured or the configured secondary network management station address is unreachable. If a retention interval is not configured the bulk data file will be immediately deleted. If a retention interval is configured retries will be attempted for the configured number of times.	snmp	"Check the connectivity to destination indicated by secondary " "network management station address indicated in the error " "message"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SMBRSNRCURUNREACH</del>	4-Warning	Secondary network management station is unreachable for [chars]	The collected bulk data file could not be successfully \n\ transferred to the secondary network management station \n\ address destination specified in the error message. This \n\ condition can occur because the secondary network management \n\ station address is not configured or the configured secondary\n\ network management station address is unreachable. If a \n\ retention interval is not configured the bulk data file \n\ will be immediately deleted. If a retention interval is \n\ configured retries will be attempted for the configured \n\ number of times.	dcm	"Check the connectivity to destination indicated by secondary\n\ network management station address indicated in the error\n\ message"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SNMP_FILL-3-LDP</del>	4-Warning	Secondary network management station is unreachable for [chars]	The collected bulk data file could not be successfully \n\ transferred to the secondary network management station \n\ address destination specified in the error message. This \n\ condition can occur because the secondary network management \n\ station address is not configured or the configured secondary\n\ network management station address is unreachable. If a \n\ retention interval is not configured the bulk data file \n\ will be immediately deleted. If a retention interval is \n\ configured retries will be attempted for the configured \n\ number of times.	dcm	"Check the connectivity to destination indicated by secondary\n\ network management station address indicated in the error\n\ message"
<del>SNMP_EXMPLD_OBSE</del>	3-Error	Multi Topology un-aware component is accessing a non base topology [chars] topoid [dec]	A software component that is not multi topology aware is\n\ accessing a non base topology. When this happens the result\n\ is unpredictable.	<del>SNMP_EXMPLD_OBSE</del>	"Copy the error message exactly as it appears and report it\n\ to your technical support representative."
SNMP_FILL-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
SNMP_FILL-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SNMP</del> PTHREAD_MUTEX_FAIL	2-Critical	pthread_mutex_init failed on snmp mutex. Reason : [chars]	The snmp subagent failed to initialize the global mutex	ion	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
<del>SNMP</del> ION3MIBSMIB_FAIL	3-Error	IF-MIB could not attach/create shared memory region	The IF-MIB maintains a part of its data structure in shared\n\ memory. In the process of <del>creating/attaching/initializing</del> this shared memory region a failure was detected.	<del>Report it to your technical support representative.</del>	"Copy the error message exactly as it appears and report it\n\ to your technical support representative."
<del>SNMP</del> ION3MIB_REG_FAIL	3-Error	MIB could not be registered with master agent	When a MIB is loaded in ION the OIDs are registered with the\n\ master agent. A failure was detected in this registration\n\ process	<del>Report it to your technical support representative.</del>	"Copy the error message exactly as it appears and report it\n\ to your technical support representative."
<del>SNMP</del> GR3BADAGE_TIMER	3-Error	Unexpected age timer found on session [node]	An internal timer was found running when it should not have been.	snmp	"Copy the error message exactly as it appears and report it to your\n\ technical support representative. Disable the SNMP manager via\n\ the no snmp-server manager command. Then re-enable it via the\n\ snmp-server manager command. This should effectively reset all of\n\ the internal structures."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SNMP_MGR-3-BADINFORM</del>	3-Error	Unknown inform transport type: [chars]	This SNMP inform destination uses an unknown transport type.\n\n Inform notifications cannot be sent to this destination.	snmp	"Copy the error message and the output from 'show techsupport' exactly\n\n as it appears and report it to your technical support representative."
SNMP_MGR-3-BADOP	3-Error	Unknown operation code %u	An SNMP PDU delivered to the SNMP manager contains an unknown\n\n operation code.	snmp	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
<del>SNMP_MGR-3-BADPDU</del>	3-Error	Received unknown PDU type: %u	The SNMP manager was delivered a PDU of an unknown type.	snmp	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
<del>SNMP_MGR-3-BADPDU</del>	3-Error	Unknown transport type: %u	The SNMP manager was delivered a PDU from an unknown transport type.	snmp	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
<del>SNMP_MGR-3-BADPDU</del>	3-Error	Corrupted use counter found on session [node]	A cached SNMP session structure appears to have been corrupted.	snmp	"Copy the error message exactly as it appears and report it to your\n\n technical support representative. Disable the SNMP manager via\n\n the no snmp-server manager command. Then re-enable it via the\n\n snmp-server manager command. This should effectively reset all of\n\n the internal structures."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SNMPMGR3MSNGHOST	3-Error	Cannot locate information on SNMP informs host: %i	A table entry for the mentioned SNMP informs destination cannot be found. As a result inform notifications will not be sent to this destination.	snmp	"Run the 'show snmp host' and 'show snmp' commands. Copy the error message and output from the show commands exactly as they appear and report it to your technical support representative. Deleting and re-adding the informs destination via the 'snmp-server host' configuration command may clear the condition. Otherwise reloading the system may be necessary."
SNMPMGR3MSNGHOSIP6	3-Error	Cannot locate information on SNMP informs host: %P	A table entry for the mentioned SNMP informs destination cannot be found. As a result inform notifications will not be sent to this destination.	snmp	"Run the 'show snmp host' and 'show snmp' commands. Copy the error message and output from the show commands exactly as they appear and report it to your technical support representative. Deleting and re-adding the informs destination via the 'snmp-server host' configuration command may clear the condition. Otherwise reloading the system may be necessary."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SNMP_MGR3-NOPROC	3-Error	Failed to create SNMP Manager process	The SNMP manager process was unable to initialize. This is most likely due to a lack of memory.	snmp	"Copy the error message exactly as it appears and report it to your technical support representative. Use the show memory command to examine the amount of available memory. If free memory is low you may need to reconfigure and/or reload the system."
SNMP_MGR3-RESHDROP	3-Error	Insufficient memory to handle response to request id %u	An SNMP response PDU was received but there was not enough memory available in order to cache the response and return it to the original requesting IOS application.	snmp	"If this was only a transient problem the original SNMP request will likely be resent another SNMP response will be returned and delivered to the original requesting IOS application. If this message repeats then you will need to free up some memory in order for the SNMP manager to function. Use show memory to verify whether available memory is low. You may need to reconfigure and/or reload the system in order to free up some memory. Otherwise you can disable the SNMP manager functionality via the no snmp-server manager command."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SNMP_MGR_BAD_SESSION	3-Error	Attempt to destroy session [node] that is still in use	An attempt was made to remove a cached SNMP session structure\n\n however it appears that the session is still in use and therefore\n\n should not be removed.	snmp	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
SNMP_MGR_BAD_AUTH	4-Warning	Unsupported SNMP authorization type: %u	An unknown SNMP authorization type was found. This may result in\n\n the inability of the SNMP manager functionality to correctly send\n\n and/or receive SNMP messages to/from a particular SNMP agent.	snmp	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
SNMP_MGR_BAD_RESPONSE	4-Warning	Unknown response status code: %u	The SNMP Manager process received an internal response with an\n\n unknown status code.	snmp	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
SNMP_MGR_EMPTY_QUEUE	4-Warning	Input queue is empty	The SNMP Manager process was notified that it needs to process\n\n it's input queue. But when the queue was examined it was found\n\n to be empty.	snmp	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SNMP_MGR4NOCANCEL	4-Warning	Unable to cancel a previously sent inform request.	The number of unacknowledged inform requests in-flight has reached the configured maximum limit. In order to make available resources for sending out a new inform request one of these older inform requests must be cancelled. The algorithm used to choose the most appropriate inform to cancel has failed to choose any. The new inform that was to be sent will be dropped instead.	snmp	"Copy the error message exactly as it appears and report it to your technical support representative."
SNMP_MGR4NOIENABLED	4-Warning	SNMP Manager not enabled requested by [chars]	An IOS application is attempting to make use of the SNMP manager's services. However the SNMP manager functionality has not been enabled.	-	"If you wish to enable the SNMP manager services you may do so via the 'snmp-server manager' config command. Otherwise the IOS application that is requesting these services is given in the message. Disable or reconfigure this application such that it no longer tries to make SNMP manager requests."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SNMP_MIB_ISSU_GET_BUFFER	2-Critical	SNMP MIB ISSU client failed to get buffer for message. Error: [dec] [chars]	The SNMP MIB ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	snmp	"show logging and show checkpoint client"
SNMP_MIB_ISSU2_INIT	2-Critical	SNMP MIB ISSU client initialization failed to [chars]. Error: [dec] [chars]	The SNMP MIB ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	snmp	LOG_STD_ACTION
SNMP_MIB_ISSU_SEND_NEGO_MSG	2-Critical	SNMP MIB ISSU client failed to send negotiation message. Error: [dec] [chars]	The SNMP MIB ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	snmp	"show logging and show checkpoint client"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SNMP_MIB_ISSU_NGO	2-Critical	SNMP MIB ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The SNMP MIB ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	snmp	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
SNMP_MIB_ISSU_NCR	2-Critical	SNMP MIB ISSU client failed to register session information. Error: [dec] [chars]	The SNMP MIB ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	snmp	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
SNMP_MIB_ISSU_CAPNADSE	3-Error	SNMP MIB ISSU client capability list is empty.	The SNMP MIB ISSU client capability exchange list size is invalid.	snmp	"show issu capability entires <Client_ID>"
SNMP_MIB_ISSU_CAPINCOMP	3-Error	SNMP MIB ISSU client capability exchange result incompatible.	The SNMP MIB ISSU client capability exchange have negotiated as incompatible with the peer.	snmp	"show issu negotiated capability <Session_ID>"
SNMP_MIB_ISSU_NADSESN	3-Error	SNMP MIB ISSU client does not have a valid registered session.	The SNMP MIB ISSU client does not have a valid registered session.	snmp	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SNPMIBISSU</del> MSGNOTCK	3-Error	SNMP MIB ISSU client 'Message Type [dec]' is not compatible	The SNMP MIB ISSU client received an incompatible message from the peer device. The message cannot be processed.	snmp	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>SNPMIBISSU</del> MSGSIZE	3-Error	SNMP MIB ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The SNMP MIB ISSU client failed to calculate the MTU for the specified message. The SNMP MIB ISSU client is not able to send the message to the standby device.	snmp	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>SNPMIBISSU</del> UNREGSE	3-Error	SNMP MIB ISSU client failed to unregister session information. Error: [dec] [chars]	The SNMP MIB ISSU client failed to unregister session information.	snmp	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>SNPMIBISSU</del> TRANSFORMAL	3-Error	SNMP MIB ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The SNMP MIB ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the SNMP MIB state between the active device and the standby device is not identical.	snmp	"show issu session <client_id> and " "show issu negotiated version <session_id>"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SNMP-3-AUTHFAIL	3-Error	Authentication failure for SNMP req from host %i	An SNMP request was sent to this host which was not properly\n\ authenticated.	none	"Make sure that the community/user name used in the SNMP req\n\ has been configured on the router."
SNMP-3-AUTHFAILPV6	3-Error	Authentication failure for SNMP request from host %P	An SNMP request was sent by this host which was not properly\n\ authenticated.	none	"Make sure that the community/user name used in the SNMP req\n\ has been configured on the router."
SNMP-3-BADINDEXABLE	3-Error	The file nvrpm:ifIndex-table is corrupt.	The file is not in the expected format.	snmp	"If possible please delete the file."
SNMP-3-BADOID	3-Error	Attempt to generate an invalid object identifier	A valid object identifier must contain at least two subidentifiers.\n\ An attempt was made to generate an object identifier whose size\n\ was less than two.	<del>None</del> <del>snmp</del> <del>DDSDS</del>	"Copy the error message exactly as it appears and report it\n\ to your technical support representative."
SNMP-3-BADVALUE	3-Error	Maximum number of index supported is 20	An SNMP trap contains some number of MIB objects and the size\n\ of the instance identifier for these objects is restricted. This\n\ message indicates that an attempt was made to generate an SNMP\n\ trap containing a MIB object whose size exceeded this limit.	snmp	"Copy the error message exactly as it appears and report it\n\ to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SNMP-3-CPUHOG	3-Error	Processing [chars] of [chars]	SNMP took too much time processing a request.	<del>ifIndex-table</del> <del>ifIndex</del> <del>ifDescr</del> <del>ifName</del> <del>ifPhys</del> <del>ifType</del> <del>ifMib</del> <del>ifAlias</del> <del>ifNumber</del> <del>ifIndex</del> <del>ifDescr</del> <del>ifName</del> <del>ifPhys</del> <del>ifType</del> <del>ifMib</del> <del>ifAlias</del> <del>ifNumber</del>	"If feasible use the <bold>debug snmp packet</nobold> command to determine the\n\n contents of the SNMP request that is causing the message. Copy the\n\n error message exactly as it appears and report it along with any\n\n debug output to your technical support representative."
SNMP-3-DUPLCIEINDEX	3-Error	[chars] has [dec] duplicate ifIndices.	ifIndex-table file is corrupt. Ignoring duplicate entries.	snmp	"If ifIndex-table is not needed please delete the file from nvram."
SNMP-3-DUPREGNERR	3-Error	Attempt for dupe regn with SNMP IM by driver having ifIndex [dec] and ifDescr [chars]	Driver is attempting to register an idb with the interface manager while there is already an interface with the same ifIndex and ifDescr BUT different idb registered. This would lead into the problem that interface counters shown by snmp would not work properly for this particular interface.	Component of the driver	"Fix the duplicate registration in driver level."
SNMP-3-DUPREGNWNG	3-Error	Attempt for dupe regn with SNMP IM by driver having ifIndex [dec] and ifDescr [chars]	Driver is attempting to register the same idb with the interface manager while it's already registered. This is just a warning message and handled by snmp.	Component of the driver	"Fix the duplicate registration in driver level."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SNMP3-DYNSYNCFAIL	3-Error	Snmp Dynamic Sync Failed for [chars] = [chars]	One of the SNMP MIB Dynamic Syncsync of Snmp SET to standby failed.	<del>File: /etc/snmp/snmpd.conf</del>	"Copy the error message exactly as it appears and report it\n to your technical support representative."
SNMP3-FILEOPENFAILED	3-Error	Could not open [chars].	The ifIndex-table is not accesible and hence the facility for ifindex persistence may not be available.	snmp	"Please debug using the debug ifs file command."
SNMP3-FILESTATFAILED	3-Error	Could not get information for file [chars].	The ifIndex-table is not accesible and hence the facility for ifindex persistence may not be available.	snmp	"Please debug using the debug ifs file command."
<del>SNMP3-INDEXTABLECOMRSAD</del>	3-Error	The file nvram:ifIndex-table.gz could not be decompressed.	There is either insufficient memory to compress it or the nvram space is insufficient or some other reason.	snmp	"If possible please delete the file."
<del>SNMP3-INDEXTABLEINVCORMS</del>	3-Error	ifIndex-table is present in two formats.	Both nvram:ifIndex-table and nvram:ifIndex-table.gz are present.	snmp	"No action is necessary."
<del>SNMP3-CORRUPTNVRAM</del>	3-Error	Size should be > 0 but it is [dec].	There is some initialization problem in software.	snmp	"Ideally you should never see this message. If you do please report it at the earliest convenience."
SNMP3-INPUT_QUEUE_ERR	3-Error	Packet dropped due to input queue full	Snmp packet dropped due to input queue full error	snmp	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SNMP-3-INTERRUPT_CALL_ERR	3-Error	[chars] function cannot be called from interrupt handler	This message indicates that a call has been made to the function from \n\ an interrupt handler. This is not permitted because it will fail and \n\ device will reboot down the stack in malloc call.	snmp	"If this messages recurs copy it exactly as it appears and report\n\ it to your technical support representative."
SNMP-3-ISSU_ERR	3-Error	[chars]	Error happens when doing ISSU Versioning Operation	snmp	"Report this message to technical support"
SNMP-3-LICENSE_CHECK_FAILURE	3-Error	Bad OID License check failure while executing snmp-server view [chars] [chars] [chars]	This message indicates that snmp-server view command for a TAP MIB has failed as a result of missing License requirements.	-	"Please re-add the missing/failed configuration " "adhering to the License requirement to avoid inconsistency " "in the configuration."
SNMP-3-MAXTRAP_EXCEEDED	3-Error	Maximum number of traps exceeded the maximum allowed in the current sync-message to STANDBY	This message indicates the number of SNMP traps defined exceeded the maximum we can accomodate in a checkpoint sync-message. You the developer need to increase <code>SNMP_SYNC_BITMAP_MAX</code> to a higher value. Please check <code>smci_rf_status_event</code> for further details.	snmp	"Developers will never see this error message."
SNMP-3-NON_POSITIVE_INDEX	3-Error	[chars] has [dec] non-positive ifIndices.	ifIndex-table file has some invalid entries that have non-positive\n\ ifIndex values. Ignoring invalid entries.	snmp	"If ifIndex-table is not needed please delete the file from nvram."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SNMP-3-SYNCFAIL	3-Error	SNMP MIB Sync Failure: [chars]	One of the SNMP MIB Sync to standby failed.	<del>Trap-3-Error-3-DS</del>	"Copy the error message exactly as it appears and report it\n\ to your technical support representative."
SNMP-3-COMANYINDEXES	3-Error	Some ifindices might not be persisted.	There are too many ifindices and the system is unable to persist all of them.	snmp	"Most likely this is a system limitation and there is no workaround."
SNMP-3-TRAPBLOCK	3-Error	Attempt to generate SNMP trap from a process with blocking disabled	During processing a process with blocking disabled attempted to\n\ generate an SNMP trap which would block. This is not allowed.	<del>Trap-3-Error-3-DS</del>	"Copy the error message exactly as it appears and report it\n\ to your technical support representative."
SNMP-3-TRAPINTR	3-Error	Attempt to generate SNMP trap from interrupt level	During the processing of an interrupt the code attempted to\n\ generate an SNMP trap. This is not allowed.	<del>Trap-3-Error-3-DS</del>	"Copy the error message exactly as it appears and report it\n\ to your technical support representative."
SNMP-3-COMMWARN	4-Warning	Authentication protocol md5 support will be deprecated in future	Authentication protocol support MD5 will be removed for SNMPV3 user creation in SNMP in future	snmp	"Notification message only. No action required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SNMP-4-HIGHCPU	4-Warning	Process exceeds [dec]ms threshold [dec]ms IOS quantum for [chars] of [chars]--result [chars]	SNMP took more than the warning threshold processing a var-binding.	<del>Debug, High CPU, High CPU</del>	"If feasible use the <bold>debug snmp packet</nobold> command to determine the\n\n contents of the SNMP request that is causing the message. Copy the\n\n error message exactly as it appears and report it along with any\n\n debug output to your technical support representative. Some MIB \n\n objects require a relatively large amount of time to process. \n\n MIB objects in the multi-variable-binding are processed one by one. \n\n If possible MIB objects appearing in this message should NOT be \n\n retrieved using multi-variable-binding SNMP PDUs."
<del>SNMP-4-INTERNAL_ERROR</del>	4-Warning	An internal error occurred in ifindex persistence code.	There is an unexpected internal error in ifindex persistence software.	snmp	""
SNMP-4-NOENGINEID	4-Warning	Remote snmpEngineID for [node]not found when creating user: [chars]	-	snmp	"\n\n Configure the remote snmpEngineID and reconfigure the user.\n\n If the problem persists copy the error message exactly as it\n\n appears and report it to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SNMP4NOENGINEIDV6	4-Warning	Remote snmpEngineID for [node]not found when creating user: [chars]	-	snmp	"Configure the remote snmpEngineID and reconfigure the user.\n\n If the problem persists copy the error message exactly as it\n\n appears and report it to your technical support representative."
SNMP-4-NOFLASH	4-Warning	Reading snmpEngineBoots from flash failed	An attempt to read the snmpEngineBoots file from flash failed.\n\n Most likely this means that the flash card does not exist on\n\n the router. This message should appear only when the router is\n\n reloaded.	snmp	"\n\n Check if installing a flash card makes the message go away.\n\n If a flash card exists already it may be full. Try erasing\n\n flash and reloading the router. If after these steps the problem\n\n persists copy the error message exactly as it appears and report\n\n it to your technical support representative."
SNMP4PROTOCOLSWAN	4-Warning	Privacy protocol [chars] support will be deprecated in future	Privacy protocol support DES and 3DES will be removed for SNMPV3 user creation in future	snmp	"Notification message only. No action required."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SNMP-4-TRAPDROP	4-Warning	[chars]	An attempt was made to generate an SNMP trap but the trap\n could not be sent because of the reason given in this message.\n Most likely this message means that the SNMP traps process is\n not running.	snmp	"Copy the error message exactly as it appears and report it\n to your technical support representative. Use the <bold>show process<nobold>\n command to determine whether the SNMP traps process is running.\n If it is not running reload the system. If after reloading\n the SNMP traps process is still not running there may not be\n enough memory for it to run."
SNMP5CHASSISALARM	5-Notice	Chassis Alarm Trap: tmpAlarm[chars] minorAlarm[chars] and/or majorAlarm[chars]	This message shows the SNMP agent sends out the Chassis Alarm On/Off Traps to the engine ID of the remote agent or SNMP manager because the corresponding chassis alarm is on/off.	snmp	""
SNMP-5-COLDSTART	5-Notice	SNMP agent on host [chars] is undergoing a cold start	The snmp server underwent a coldstart.	none	"Notification message only. No action required."
SNMP-5-LINK_DOWN	5-Notice	LinkDown:Interface [chars] changed state to down	The state of the Interface is changed to down.	none	""

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SNMP-5-LINK_UP	5-Notice	LinkUp:Interface [chars] changed state to up	SNMP agent generated view length greater than that allowed by definition so the view name was truncated to fit the defined maximum view name length.	snmp	"Make sure your trap group and view names are setup appropriately. " "You can override with 'snmp-server group' command. Notify Cisco " "that this needs to be fixed."
SNMP5MODULERESET	5-Notice	[chars] object has been set to 'reset' for [chars]=[dec] from IP address [chars].	The SNMP server has reset a module.	none	"Notification message only. No action required."
SNMP5MODULETRAP	5-Notice	Module [dec] [[chars]] Trap	This message shows the SNMP agent sends out the Module Up/Down Traps to the engine ID of the remote agent or SNMP manager because the corresponding module is up/down.	snmp	""
SNMP5SNMPSETBLOCKED	5-Notice	SNMP SET Operation is blocked on STANDBY	This message indicates that on a platform where standby monitoring is enabled SET would be blocked to avoid any config changes on the device from the user.	none	"Do not execute SET on standby "
SNMP-5-WARMSTART	5-Notice	SNMP agent on host [chars] is undergoing a warm start	The snmp server underwent a warmstart.	none	"Notification message only. No action required."
SNMP5AUTHPROCCMD5	6-Information	Authentication protocol md5 support will be deprecated in future	Authentication protocol support MD5 will be removed for SNMPV3 user creation in SNMP in future	snmp	"Notification message only. No action required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SNMP-INFO-OCCLUDES	6-Information	Privacy protocol [chars] support will be deprecated in future	Privacy protocol support DES and 3DES will be removed for SNMPV3 user creation in future	snmp	"Notification message only. No action required."
SNP_RP-3-ADD_FILTER	3-Error	Error in adding filter to list: [chars]	An unexpected condition has occurred while IOS is trying to add a new filter to the list of traps to be forwarded to the DMI subsystem	polaris-dmi-infra	LOG_STD_ACTION
SNP_RP-3-SNMP_TRAP_SEND	3-Error	Error in forwarding SNMP trap to confd: [chars]	An unexpected condition has occurred while IOS is trying to forward an SNMP trap to the DMI subsystem	polaris-dmi-infra	LOG_STD_ACTION
SNP_RP-3-UPDATE_FILTERS	3-Error	Error in retrieving trap filter list: [chars]	The number of trap filters that can be configured in the cisco-ia YANG model is limited. Please check the limit in the model and reduce the number of trap filters configured.	polaris-dmi-infra	LOG_STD_ACTION
SNP_RP-3-UPDATE_FILTERS	3-Error	Error in updating trap filter list: [chars]	An unexpected condition has occurred while IOS is trying to update the list of trap filters from the cisco-ia model	polaris-dmi-infra	LOG_STD_ACTION
SNP_RP-3-UPDATE_PROCESS	3-Error	Error in creating cisco-ia update process	Could not create IOS process to update the cisco-ia model	polaris-dmi-infra	LOG_STD_ACTION
SNP_RP-3-ALARM_TIMER	3-Error	[chars]	Alarm timer monitor process creation failed	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SONET-3-APSCOMM	3-Error	[chars]: [chars]	APS errors related to failure of working-protect communication	-	LOG_STD_ACTION
SONE3APSCOMCHANGE	3-Error	[chars]: Link to [chars] channel reverts to PGP protocol version [dec]	APS has reverted to a different version of the PGP protocol between working and protect routers.	-	"None - information only."
SONET3APSCOMMEST	3-Error	[chars]: Link to [chars] channel established - PGP protocol version [dec]	APS has established connectivity between working and protect routers.	-	"None - information only."
SONET3APSCOMMLOST	3-Error	[chars]: Link to [chars] channel lost	Connectivity between Working and Protect has been lost. APS operation can continue in degraded mode.	-	"Restore connectivity between working and protect routers."
SONET-3-APSEVENT	3-Error	[chars]: APS event type error: event [dec] undefined	APS software has malfunctioned	-	LOG_STD_ACTION
SONE3APSHOLDIME	3-Error	[chars]: [chars]	Messages issued by HA APS when PGP holdtime is adjusted	-	"None - information only."
SONET-3-APSNCHN	3-Error	APS Local request [dec] has no corresponding channel number	APS software has malfunctioned.	-	LOG_STD_ACTION
SONET-3-APSNINIFC	3-Error	APS No interfaces available for IP connection	APS requires an out-of-band path for inter-router communication.	-	"Configure an out-of-band path for inter-router APS "communication"
SONE3APSYNCDARY	3-Error	[dec]/[dec]: No hwidb	New secondary RP unable to find device descriptor block corresponding to slot/unit specified by primary RP.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SONET-3-BADAUTH	3-Error	[chars]: APS Bad authentication from %i	APS software has detected unauthorized message.	-	"This message could result from improper configuration " "unauthorized access or packet corruption." LOG_STD_ACTION
SONET-3-BADTCA	3-Error	TCA signal [dec] is invalid	TCA software has malfunctioned.	-	LOG_SIDDISTACTDEALS
SONET-3-BADTCATH	3-Error	TCA threshold [node]is not supported	The specific TCA threshold is not supported	-	LOG_SIDDISTACTDEALS
SONET-3-DELAYTIMER	3-Error	[chars]	Delay timer creation failure	-	LOG_SIDDISTACTDEALS
SONET-3-MISVER	3-Error	[chars]: APS version mismatch.\n\t WARNING: Loss of Working-Protect link can deselect both\n\t protect and working interfaces. [chars] router requires\n\t software upgrade for full protection.	APS software has detected that either the working or protect router requires software upgrade. APS operation can continue prior to the upgrade.	-	"Upgrade specified router."
SONET-3-NOBUFFER	3-Error	No buffer available for sending APS message	No data buffer was available for sending APS message.	-	LOG_SID_RECUR_ACTION
SONET-3-NOSOCKET	3-Error	Unable to open socket	APS system unable to open a socket for communication purposes	-	LOG_STD_ACTION
SONET-4-ALARM	4-Warning	[chars]: [chars] [chars]	The specified SONET Alarm has been declared or released.	-	"Recommended action is to repair the source of the alarm."
SONET-4-APSM	4-Warning	[chars]: APS mode mismatch - [chars]	There has been a unidirectional/bidirectional mismatch detected by the APS system	-	"It is recommended that the router configuration match the " "provisioned circuit."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SONET-4-UPSR	4-Warning	Protection-Group [node][chars] [chars]	There has been a protection switch on the protection group	-	"None - normal situation"
SONET-6-APSMANPRO	6-Information	Manual APS switchover initiated for [chars]	APS manual switchover is initiated	-	"None - normal situation."
SONET-6-APSREFL	6-Information	[chars]: Remote reflection of APS status now [chars]	APS software has detected a change in the reflected local APS status	-	"None - normal situation."
SONET-6-APSREMSWI	6-Information	[chars]: Remote APS status now [chars]	APS software has detected a change in the APS status of the remote interface	-	"None - normal situation."
SONETMIB3-NULLPIR	3-Error	NULL pointer at step = [dec]	Attempted to initialize ifAlias for VT using a NULL pointer.	-	"LOG_SID_NO_ACTION"
SONETMIB3-OUTOFCBND	3-Error	Out of bound values p1=[dec] p2=[dec] e1=[dec]	Invalid values used while determining the ifAlias	-	"LOG_SID_NO_ACTION"
SONETMIB-1-DELETE	1-Alert	could not delete interface if_index=[dec]	The specified interface was not successfully dequeued.	-	LOG_SID_NO_ACTION
SONETMIB-1-LOSTUPDATE	1-Alert	Lost raw stats update for if_index=[dec]	-	-	""
SONETMIB-1-MALLOCNEW	1-Alert	Malloc failed for new interface=[dec]	Unable to allocate enough memory to create SONET MIB structure\n\n for new interface.	-	LOG_SID_NO_ACTION
SONETMIB-3-NULLCFGPIR	3-Error	NULL SONET MIB config pointer if_index=[dec]	Attempted to initialize the SONET MIB using a NULL pointer.	-	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
SP-5-LDP	5-Notice	ERRMSG_NOFLAGS	-	-	-
SP-5-LDP	5-Notice	ERRMSG_NOFLAGS	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_BILBO3EULA_ERR	3-Error	<pre> ***** \\nWARNING: SPA ATM License is not yet activated. \\n Please configure 'license feature atm'\\n and accept the EULA to activate the license. \\n ***** </pre>	EULA is not accepted for the license	ios-licensing-atg	LOG_STD_ACTION
SPA_BILBO3DXIK_PRR	3-Error	Failed to retrieve datapath identifier for interface [chars]	The SPA driver is not able to retrieve the datapath identifier for the interface specified in the message. This indicates a software error.	asr900-lotr-im	LOG_SID_NO_ACTION
SPA_BILBO3D_ALLOC_ERR	3-Error	failed to allocate ID for TDM IM	Failed to allocate ID for TDM IM.	asr900-lotr-im	LOG_STD_ACTION
SPA_BILBO3D_ID_INIT	3-Error	failed to initialize TDM IM ID table	Failed to initialize TDM IM ID table.	asr900-lotr-im	LOG_STD_ACTION
SPA_BILBO3D_ENQUEUE_ERR	3-Error	[chars]	Failed to enqueue a message.	asr900-lotr-im	LOG_STD_ACTION
SPA_BILBO3D_NULL_STR_ERR	3-Error	[chars]	A software error occurred and SPA driver is not able to retrieve the data structure mentioned in the message.	asr900-lotr-im	LOG_STD_ACTION
SPA_BILBO3D_NULL_SPA_PTR	3-Error	-	The pointer to an SPA value is of a null value.	spa-bilbot3-ds3	LOG_SID_SHI_ACTION
SPA_BILBO3D_PROCESS_FAIL	3-Error	process creation failed for [chars]	The Periodic one second process creation failed. This indicates a software error.	asr900-lotr-im	LOG_STD_ACTION
SPA_BILBO3D_TDL_SEND_FAIL	3-Error	common_str_empty_str	Failed to send TDL message.	asr900-lotr-im	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPABCONFERRDDAA	3-Error	common_str_empty_str	A software error occurred and SPA driver encountered unsupported data mentioned in the message	asr900-lotr-im	LOG_STD_ACTION
SPABCMANDNZRO	3-Error	VLAN identifier is not zero before allocation for interface [chars]	The SPA driver is seeing non zero VLAN identifier before allocating new vlan identifier for the interface specified in the message. This indicates a software error.	asr900-lotr-im	LOG_SID_NO_ACTION
SPA_CCB3CMD_T0CEARY	3-Error	[chars]: host command [dec] received before handler ready.	Host command comes before handler is initialized	-	LOG_SID_SH_TECH_ACTION
SPA_CCB3CMD_T0CEARY	3-Error	[chars]: host command [dec] received before handler ready.	Host command comes before handler is initialized	-	LOG_SID_SH_TECH_ACTION
SPA_CCB3CMD_T0CEARY	3-Error	[chars]: host command [dec] received before handler ready.	Host command comes before handler is initialized	-	LOG_SID_SH_TECH_ACTION
SPA_CCB3CMDFAIL_0ARG	3-Error	[chars]: host command [dec] error: [chars].	A command from host failed to execute for the given reason.	-	LOG_SID_SH_TECH_ACTION
SPA_CCB3CMDFAIL_0ARG	3-Error	[chars]: host command [dec] error: [chars].	A command from host failed to execute for the given reason.	-	LOG_SID_SH_TECH_ACTION
SPA_CCB3CMDFAIL_0ARG	3-Error	[chars]: host command [dec] error: [chars].	A command from host failed to execute for the given reason.	-	LOG_SID_SH_TECH_ACTION
SPA_CCB3CMDFAIL_1ARG	3-Error	[chars]: host command [dec] arg0=[dec] error: [chars].	A CCB command failed to execute for the given reason.	-	LOG_SID_SH_TECH_ACTION



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SPA_CCB3CMDFAL_1ARG	3-Error	[chars]: host command [dec]arg0=[dec] error: [chars].	A CCB command failed to execute for the given reason.	-	LOGSIDSHTTECHACTION
SPA_CCB3CMDFAL_1ARG	3-Error	[chars]: host command [dec]arg0=[dec] error: [chars].	A CCB command failed to execute for the given reason.	-	LOGSIDSHTTECHACTION
SPA_CCB3CMDFAL_2ARG	3-Error	[chars]: host command [dec]arg0=[dec] arg1=[dec] error: [chars].	A command from host failed to execute for the given reason.	-	LOGSIDSHTTECHACTION
SPA_CCB3CMDFAL_2ARG	3-Error	[chars]: host command [dec]arg0=[dec] arg1=[dec] error: [chars].	A command from host failed to execute for the given reason.	-	LOGSIDSHTTECHACTION
SPA_CCB3CMDFAL_2ARG	3-Error	[chars]: host command [dec]arg0=[dec] arg1=[dec] error: [chars].	A command from host failed to execute for the given reason.	-	LOGSIDSHTTECHACTION
SPA_CCB3CMDFAL_3ARG	3-Error	[chars]: host command [dec]arg0=[dec] arg1=[dec] arg2=[dec] error: [chars].	A command from host failed to execute for the given reason.	-	LOGSIDSHTTECHACTION
SPA_CCB3CMDFAL_3ARG	3-Error	[chars]: host command [dec]arg0=[dec] arg1=[dec] arg2=[dec] error: [chars].	A command from host failed to execute for the given reason.	-	LOGSIDSHTTECHACTION
SPA_CCB3CMDFAL_3ARG	3-Error	[chars]: host command [dec]arg0=[dec] arg1=[dec] arg2=[dec] error: [chars].	A command from host failed to execute for the given reason.	-	LOGSIDSHTTECHACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SPA_CCB3ENQUEUE_FAIL	3-Error	[chars]: host command [dec] failed to enqueue.	An error occurred while the SPA console was attempting to enqueue a host command to command queue.	-	LOG_SIDSHTTECH_ACTION
SPA_CCB3ENQUEUE_FAIL	3-Error	[chars]: host command [dec] failed to enqueue.	An error occurred while the SPA console was attempting to enqueue a host command to command queue.	-	LOG_SIDSHTTECH_ACTION
SPA_CCB3ENQUEUE_FAIL	3-Error	[chars]: host command [dec] failed to enqueue.	An error occurred while the SPA console was attempting to enqueue a host command to command queue.	-	LOG_SIDSHTTECH_ACTION
SPA_CCB3IF_CONFIG	3-Error	[chars]: IF_CONFIG type [dec] failed.	Interface configuration type not valid for SPA card.	-	LOG_SIDSHTTECH_ACTION
SPA_CCB3IF_CONFIG	3-Error	[chars]: IF_CONFIG type [dec] failed.	Interface configuration type not valid for SPA card.	-	LOG_SIDSHTTECH_ACTION
SPA_CCB3IF_CONFIG	3-Error	[chars]: IF_CONFIG type [dec] failed.	Interface configuration type not valid for SPA card.	-	LOG_SIDSHTTECH_ACTION
SPA_CCB4BADENCAP	4-Warning	[chars]: Unknown encapsulation command [dec].	An invalid encapsulation command is received by SPA. This is a software error.	-	LOG_SIDSHTTECH_ACTION
SPA_CCB4BADENCAP	4-Warning	[chars]: Unknown encapsulation command [dec].	An invalid encapsulation command is received by SPA. This is a software error.	-	LOG_SIDSHTTECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_CCB4BADENCAP	4-Warning	[chars]: Unknown encapsulation command [dec].	An invalid encapsulation command is received by SPA. This is a software error.	-	LOG_STD_ACTION
SPACHOCDS3AUCDNR	3-Error	[chars] failed for slot [dec] bay [dec]	AUTODNR/USNDNR process has failed. The SPA and SIP are out of synchronization. This condition indicates a software error.	<del>SPACHOCDS3AUCDNR</del>	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPACHOCDSXBADSEERR	3-Error	SPA [dec]/[dec]: [dec] [chars] events on HDLC Controller were encountered. The SPA is being restarted.\n	The SPA driver detected an error event on the HDLC controller.	SPA	"The SPA driver has encountered an error event on the SPA card. " "If the condition persists copy the error message exactly as " "it appears. Next research and attempt to resolve the issue using " "the SPA hardware troubleshooting documentation as well as the tools " "and utilities provided at " <a href="http://www.cisco.com/techcenter/ospa/errata.html">http://www.cisco.com/techcenter/ospa/errata.html</a> If you still " "require assistance open a case with the Technical Assistance Center " "via the Internet at " <a href="http://www.cisco.com/techcenter/ospa/errata.html">http://www.cisco.com/techcenter/ospa/errata.html</a> or contact " "your Cisco technical support representative. Be sure to provide the " "the information you have gathered and a <CnBilchappNCnBilch> " "to your support representative or attach it to your case in non-zipped " "plain text format .txt."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPACDSXCRMEMBR	3-Error	SPA [dec]/[dec]: [dec] correctable [chars] memory errors encountered.\n	The SPA driver detected a correctable memory error on the SPA card.	SPACDSXCRMEMBR	

Fault-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
					<p>"The SPA has encountered a correctable memory error on the SPA card. " "The error has been corrected and normal processing should continue. " "The hexadecimal memory address of the most recent error is specified " "in the message text on the console or in the system log. " "If the condition persists or other errors are indicated for the SPA " "copy the error message exactly as it appears. Then power down and " "reseat the indicated SPA card. Next research and attempt " "to resolve the issue using the SPA hardware troubleshooting " "documentation as well as the tools and utilities provided at "</p> <p><a href="http://www.cisco.com/errata">http://www.cisco.com/errata</a> If you still " "require assistance open a case with the Technical Assistance Center " "via the Internet at "</p> <p><a href="http://www.cisco.com/errata">http://www.cisco.com/errata</a> or contact " "your Cisco technical support representative. Be sure to provide the " "the information you have gathered and a</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
					<Ctrl>[char]</Ctrl> " "to your support representative or attach it to your case in non-zipped " "plain text format .txt."
SPACHDS4DXIK_PRR	3-Error	Failed to retrieve datapath identifier for interface [chars]	The SPA driver is not able to retrieve the datapath identifier for the interface specified in the message. This indicates a software error.	asr900-tdm-combo	LOG_SID_NO_ACTION
SPACHDS4HCERR	3-Error	EFC ERROR: [chars] - [chars] %u	The SPA Extended Flow Control encountered an error	asr900-tdm-combo	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPACHDSNHDCCFLRR</del>	3-Error	SPA [dec]/[dec]: [dec] [chars] events on HDLC Controller were encountered.	The SPA driver detected an error event on the HDLC Controller.	<del>sp8013-3-err-380HCSIM</del>	"The SPA driver has encountered an error event on the SPA card. " "If the condition persists copy the error message exactly as " "it appears. Next research and attempt to resolve the issue using " "the SPA hardware troubleshooting documentation as well as the tools " "and utilities provided at " <del>http://www.cisco.com/tech/</del> If you still " "require assistance open a case with the Technical Assistance Center " "via the Internet at " <del>http://www.cisco.com/tech/</del> or contact " "your Cisco technical support representative. Be sure to provide the " "the information you have gathered and a <C:\Bld\sp8013-3-err-380HCSIM> "to your support representative or attach it to your case in non-zipped " "plain text format .txt."
<del>SPACHDSNINWDFME</del>	3-Error	Invalid SPA type [dec] on [chars]. Port Number = [dec].	The software can not recognize the interface type	<del>sp8013-3-err-380HCSIM</del>	LOG_STD_ACTION
<del>SPACHDSNINWDFINDEX</del>	3-Error	Invalid interface index [dec] on slot/bay:[dec]/[dec]. Min. Index = [dec]. MAx. Index = [dec].	The index is not valid for the interface specified in the error message.	<del>sp8013-3-err-380HCSIM</del>	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SACHCDSLNK_TBLERR	3-Error	[chars]: Could not create link table error [dec]	Error creating link record table. Interfaces may not come up / pass traffic.	switch	<p>"If the ports on the SPA are not operating as expected power down and" "reseat the indicated SPA card. " "If the error messages persists copy the error message exactly as " "it appears. Next research and attempt to resolve the issue using " "the SPA hardware troubleshooting documentation as well as the tools " "and utilities provided at " "<a href="http://www.cisco.com/itd/td/td.html">http://www.cisco.com/itd/td/td.html</a> If you still " "require assistance open a case with the Technical Assistance Center " "via the Internet at " "<a href="http://www.cisco.com/itd/td/td.html">http://www.cisco.com/itd/td/td.html</a> or contact " "your Cisco technical support representative. Be sure to provide the " "the information you have gathered and a &lt;Code&gt; " "to your support representative or attach it to your case in non-zipped " "plain text format .txt."</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPCH0330</del> EROR3BCK	3-Error	The [chars] subblock named [chars] was not removed	IDB sub-blocks could not be removed during the unprovisioning of a channel. This condition indicates a software error.	<del>asr900-dsx-cp</del> 3RHC3M	LOG_STD_ACTION
<del>SPCH0331</del> NULL3RRCUE	3-Error	Failed to create [chars] on slot/bay:[dec]/[dec]. Port Number = [dec].	The software resource can not be allocated for this hardware	<del>asr900-dsx-cp</del> 3RHC3M	LOG_STD_ACTION
<del>SPCH0332</del> NULL3RPR	3-Error	-	The pointer to an SPA value is of a null value.	<del>asr900-dsx-cp</del> 3RHC3M	LOG_SIDSHTTECH_ACTION
<del>SPCH0333</del> NULL3RPR	3-Error	[chars]	Pointer to virtual SPA object is NULL in card prot grp.	asr900-dsx-cp	LOG_SIDSHTTECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPA_CDS_9000_PROCESS</del>	3-Error	[chars]: periodic process error [chars].	The SPA driver detected an error with the periodic processing routine.	spa-ser-te1	"If the ports on the SPA are not operating as expected take it out of " "service by issuing command <CmdBold>hw-module subplot " <CmdBold>hw-module subplot " <CmdBold>stop<NoCmdBold> " "followed by <CmdBold>hw-module subplot " <CmdBold>hw-module subplot " <CmdBold>start<NoCmdBold> for " "the indicated SPA card. If the error messages persists copy the error " "message exactly as it appears. Next research and attempt to resolve the " "issue using the SPA hardware troubleshooting documentation as well as " "the tools and utilities provided at " <a href="http://www.cisco.com/Support/Tools">http://www.cisco.com/Support/Tools</a> If you still " "require assistance open a case with the Technical Assistance Center " "via the Internet at " <a href="http://www.cisco.com/Support/Tools">http://www.cisco.com/Support/Tools</a> or contact " "your Cisco technical support representative."
<del>SPA_CDS_9000_PROCESS</del>	3-Error	process creation failed in [chars] spa type [chars] for [chars]	The Periodic one second process creation failed. This indicates a software error.	asr900-tdm-combo	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_CHOCDSXSEM/HOG	3-Error	SPA on [chars]: Semaphore Hog was encountered.Hogged by process [chars]\n	The semaphore used by the IPC communication between host and the SPA was hogged by one process. This behavior would cause other processes fail to send commands down to the SPA. This might result improper operation.	-	"Please first stop all the traffic on the SPA and then " "reload the configuration by doing shut/no shut on " "the controllers. If the problem persists please power cycle the SPA. " "If the condition persists copy the error message exactly as " "it appears. Next research and attempt to resolve the issue using " "the SPA hardware troubleshooting documentation as well as the Bug Toolkit " "on the Cisco web-site. If you still " "require assistance open a case with the Technical Assistance Center " "via the Internet at " " <a href="http://www.cisco.com/it/askts/askts.html">http://www.cisco.com/it/askts/askts.html</a> or contact " "your Cisco technical support representative. Be sure to provide the " "the information you have gathered and a <Code>Bug Report</Code> " "to your support representative or attach it to your case in non-zipped " "plain text format .txt."
SPACLSM/HUR	3-Error	SPA command [chars] return error %u	The SPA returned an error status for a host command	spac	LOGSIDSHT/TECH/ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPACHCDSPACMSNDER	3-Error	Failed to send [chars] command to SPA	The host failed to send a command to SPA	spachcdspacmsndr	LOGSIDSHTTECHACTION
SPACHCDSPASWERR	3-Error	SPA on [chars]: [chars] Software error was encountered.\n	The SPA driver detected a Software error condition on the SPA card. This might result improper operation.	-	"The SPA driver has encountered a Software error. " "Please first reload the configuration by doing shut/no shut on " "the controllers. If the problem persists please power cycle the SPA. " "If the condition persists copy the error message exactly as " "it appears. Next research and attempt to resolve the issue using " "the Bug Toolkit on the Cisco web-site. If you still " "require assistance open a case with the Technical Assistance Center " "via the Internet at " <a href="http://www.cisco.com/techsupport">http://www.cisco.com/techsupport</a> or contact " "your Cisco technical support representative. Be sure to provide the " "the information you have gathered and a <del>CnBldtappm!CnBldt</del> " "to your support representative or attach it to your case in non-zipped " "plain text format .txt."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPAHCDCS#HWERR	3-Error	SPA on [chars]: [chars] Hardware error was encountered.\n	The SPA driver detected a Hardware error condition on the SPA card. This might result in improper operation.	-	<p>"The SPA driver has encountered a Hardware error on the SPA's SPI4 bus.</p> <p>" "Please power down and reseal the indicated SPA card.</p> <p>" "If the condition persists copy the error message exactly as " "it appears. Next research and attempt to resolve the issue using " "the SPA hardware troubleshooting documentation as well as the tools " "and utilities provided at " "<a href="http://www.cisco.com/113376.html">http://www.cisco.com/113376.html</a></p> <p>If you still " "require assistance open a case with the Technical Assistance Center " "via the Internet at " "<a href="http://www.cisco.com/113376.html">http://www.cisco.com/113376.html</a></p> <p>or contact " "your Cisco technical support representative. Be sure to provide the " "the information you have gathered and a &lt;Code&gt; or contact " "your support representative or attach it to your case in non-zipped " "plain text format .txt."</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SACHCDX310GRRR</del>	3-Error	Interface [chars] T3 [node]T1 [node]config command error cmd [node]arg [node]retval %u	A command sent from the system to a linecard has failed.	<del>psd31038HCSM</del>	LOGSIDSHTCHACIDN
<del>SACHCDX310GRRR</del>	3-Error	Interface [chars] T3 [node]config command error cmd [node]arg [node]retval %u	A command sent from the system to a linecard has failed.	<del>psd31038HCSM</del>	LOGSIDSHTCHACIDN

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPA [dec] UNCORRECTABLE</del>	3-Error	SPA [dec]/[dec]: [dec] uncorrectable [chars] memory errors encountered.\n	The SPA driver detected an uncorrectable memory error condition on the SPA card. Packet corruption may result.	<del>spa [dec] UNCORRECTABLE</del>	



Fault-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
					<p>"The SPA driver has encountered an uncorrectable memory error on the SPA " "card. The hexadecimal memory address of the most recent error is " "specified in the message text on the console or in the system log. " "Please power down and reseat the indicated SPA card. " "If the condition persists copy the error message exactly as " "it appears. Next research and attempt to resolve the issue using " "the SPA hardware troubleshooting documentation as well as the tools " "and utilities provided at " "<a href="http://www.cisco.com/techsupport">http://www.cisco.com/techsupport</a> If you still " "require assistance open a case with the Technical Assistance Center " "via the Internet at " "<a href="http://www.cisco.com/techsupport">http://www.cisco.com/techsupport</a> or contact " "your Cisco technical support representative. Be sure to provide the " "the information you have gathered and a <a href="mailto:BugReport_NG@cs.com">Bug Report NG</a> " "to your support representative or attach it to your case in non-zipped " "plain text format</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
					.txt."
SPA [dec]/[dec]: [dec] [chars] parity errors encountered.\n	3-Error	SPA [dec]/[dec]: [dec] [chars] parity errors encountered.\n	The SPA driver detected an uncorrectable parity error condition on the SPA card. Packet corruption may result.	spa [dec]/[dec]	"Please power down and reseal the indicated SPA card. " "If the condition persists copy the error message exactly as " "it appears. Next research and attempt to resolve the issue using " "the SPA hardware troubleshooting documentation as well as the tools " "and utilities provided at " " <a href="http://www.cisco.com/techcenter/psd">http://www.cisco.com/techcenter/psd</a> If you still " "require assistance open a case with the Technical Assistance Center " "via the Internet at " " <a href="http://www.cisco.com/techcenter/psd">http://www.cisco.com/techcenter/psd</a> or contact " "your Cisco technical support representative. Be sure to provide the " "the information you have gathered and a <Code> " "to your support representative or attach it to your case in non-zipped " "plain text format .txt."
Unknown [chars] command received on slot/bay:[dec]/[dec]. Command Type = [dec]	3-Error	Unknown [chars] command received on slot/bay:[dec]/[dec]. Command Type = [dec]	An unknown command was received by the SPA card carrier	spa [dec]/[dec]	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SACHCDSXACGHROR</del>	3-Error	Interface [chars] config command error cmd [node]arg [node]retval %u	A command sent from the system to a linecard has failed.	<del>asr900-3g-ms</del> asr900-3g-ms	"This is an internal software error. Decode the " "traceback and get the output of the <CmdBold>show " "logging<NoCmdBold> command on RP and SIP and check " "if there are any errors being reported. Try to " "recreate the problem to see if there is a " "consistant method to recreate. Check the Bug " "Toolkit before contacting TAC. When contacting TAC " "provide the above information along with the " "output of the <CmdBold>show tech-support<NoCmdBold> " "command."
<del>SACHCDSXUNPROVAL</del>	4-Warning	Interface [chars] unprovisioning failed: [chars]	The system failed to respond to an unprovisioning command. A hidden VLAN could not be deleted within a 2 second timeout window. This condition may be caused by a system that is too busy or by a FIB IPC failure. The line card driver code will attempt to delete the hidden VLAN.	<del>asr900-3g-ms</del> asr900-3g-ms	"If processing continues normally no action is required. If " "system operation is adversely affected " LOG_STD_ACTION
<del>SACHCDSXCHN_GRPAD</del>	5-Notice	Channel Group created on the interface [chars]\n	Channel Group created on the serial interface.	asr900-3g-ms	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SACHOCXCHNCPDEL	5-Notice	Channel Group delete from the interface [chars]\n	Channel Group deleted from the serial interface.	asr900-3g-ms	LOG_STD_ACTION
SACHOCXCWRP4AICFAL	1-Alert	OC3/STM1 [dec]/[dec] [chars] allocation failure	CHOCX controller or channel memory allocation failure	c7600-sip-200	"This is a internal software error. Decode the " "traceback. Enable <CmdBold>debug hw-module subslot " "<slot>/<bay> oir plugin<NoCmdBold> when the problem " "is happening. Check Bug Toolkit before calling the " "TAC. When calling the TAC please provide the above" "information along with output of <CmdBold>show " "logging<NoCmdBold> and the output of <CmdBold>show " "tech<NoCmdBold> details."
SACHOCXCWRP4ASCDAL	3-Error	Failed to send APS command [hec] to [chars] retcode [hec]	APS command sending failed	c7600-sip-200	"This is a internal software error. If this " "error happened while configuring APS try " "reconfiguring the interface. If the error " "persists or occurred during normal operation " "decode the traceback and " LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SACHOCXWRRCORRUPT</del>	3-Error	Corrupt configuration unsupported [chars] [node]encountered	The OC3/STM1 RP driver running configuration is corrupt	c7600-sip-200	"This is a internal software error. Decode the " "traceback and get the output of <CmdBold>show " "running-config<NoCmdBd>. Check Bug Toolkit " "before calling the TAC. When calling the TAC " "please provide the above information along with " "the output of <CmdBold>show tech<NoCmdBold> " "details"
<del>SACHOCXWRRCORRUPT</del>	3-Error	Error in handling FRR: [chars] [chars] [hec] [hec]	Error in FRR processing	c7600-sip-common	"This is a internal software error. If this " "error happened while configuring FRR try " "reconfiguring the interface. If the error " "persists or occurred during normal operation " "decode the traceback and " LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SACHOCXWRP</del> SACHOCXWRPNULLSBLOCK	3-Error	Null ssb for [chars]	The hwidb subblock is NULL	c7600-sip-200	"This is a internal software error. Decode the " "traceback and get the output of <CmdBold>show " "running<NoCmdBold> Check Bug Toolkit " "before calling the TAC. When calling the TAC " "please provide the above information along with " "the output of <CmdBold>show running<NoCmdBold> " "and <CmdBold>show tech<NoCmdBold> details."
<del>SACHOCXWRP</del> SACHOCXWRPPLCNER	3-Error	[chars]	The RP plugin encountered an error during one of the Plugin calls	c7600-sip-200	"This is a internal software error. Decode the " "traceback. Enable <CmdBold>debug hw-module subslot " "<slot>/<bay> oir plugin<NoCmdBold> when the problem " "is happening. Check Bug Toolkit before calling the " "TAC. When calling the TAC please provide the above " "information along with the output of <CmdBold>show " "logging<NoCmdBold> and the output of <CmdBold>show " "tech<NoCmdBold> details."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SACHOCXWRP</del> IMOUT	3-Error	Interface [chars]: [chars]	The CHOCX RP driver queries the LC for SONET information the LC didn't reply.	c7600-sip-200	"This is a internal software error. Decode the " "traceback. Enable <CmdBold>debug hw-module subslot " "<slot>/<bay> command<NoCmdBold>. Check Bug Toolkit " "before calling the TAC. When calling the TAC " "please provide the above information along with the " "output of <CmdBold>show logging<NoCmdBold> and the " "output of <CmdBold>show tech<NoCmdBold; details."
<del>SACHOCXWRP</del> ESUBRAE	5-Notice	[chars] [chars]	Remote subrate configuration changed	c7600-sip-200	"Inform the network operator that subrate " "configuration changed by remote end"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SACHOCXWRPFDOWN	5-Notice	Path [chars] changed state to [chars]	A Sonet high order path changed its state.	c7600-sip-200	"This is a internal software error. Decode the " "traceback and get the output of <CmdBold>show " "controller sonet<NoCmdBold>. Look into this " "output to see if there are any alarms being " "reported at the path level. Check Bug Toolkit " "before calling the TAC. When calling the TAC " "please provide the above information along with " "the output of <CmdBold>show tech<NoCmdBold> " "details"
SACHOCXWRSDOWN	5-Notice	T3 [chars] changed state to [chars]	A T3 within STS1 changed its state.	c7600-sip-200	"This is a internal software error. Decode the " "traceback and get the output of <CmdBold>show " "controller sonet<NoCmdBold>. Look into this " "output to see if there are any alarms being " "reported at the T3 level. Check Bug Toolkit " "before calling the TAC. When calling the TAC " "please provide the above information along with " "the output of <CmdBold>show tech<NoCmdBold> " "details"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SACHOCXMRBAICQAL</del>	1-Alert	OC3/STM1 [dec]/[dec] [chars] allocation failure	CHOCX controller or channel memory allocation failure	asr1k-spa-chstm1	"This is a internal software error. Decode the " "traceback. Enable <CmdBold>debug hw-module subslot " "<slot>/<bay> oir plugin<NoCmdBold> when the problem " "is happening. Check Bug Toolkit before calling the " "TAC. When calling the TAC please provide the above" "information along with output of <CmdBold>show " "logging<NoCmdBold> and the output of <CmdBold>show " "tech<NoCmdBold> details."
<del>SACHOCXMRBAICQAL</del>	3-Error	Failed to send APS command [hec] to [chars] retcode [hec]	APS command sending failed	asr1k-spa-chstm1	"This is a internal software error. If this " "error happened while configuring APS try " "reconfiguring the interface. If the error " "persists or occurred during normal operation " "decode the traceback and " LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPACHOCXMCRR</del> CORRUPT	3-Error	Corrupt configuration unsupported [chars] [node]encountered	The OC3/STM1 RP driver running configuration is corrupt	asr1k-spa-chstm1	"This is a internal software error. Decode the " "traceback and get the output of <CmdBold>show " "running-config<NoCmdBold>. Check Bug Toolkit " "before calling the TAC. When calling the TAC " "please provide the above information along with " "the output of <CmdBold>show tech<NoCmdBold> " "details"
<del>SPACHOCXMCRR</del> FRRERR	3-Error	Error in handling FRR: [chars] [chars] [hec] [hec]	Error in FRR processing	asr1k-spa-chstm1	"This is a internal software error. If this " "error happened while configuring FRR try " "reconfiguring the interface. If the error " "persists or occurred during normal operation " "decode the traceback and " LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SACHOCXMRPNULLSBLOCK</del>	3-Error	Null ssb for [chars]	The hwidb subblock is NULL	asr1k-spa-chstm1	"This is a internal software error. Decode the " "traceback and get the output of <CmdBold>show " "running<NoCmdBold>. Check Bug Toolkit " "before calling the TAC. When calling the TAC " "please provide the above information along with " "the output of <CmdBold>show running<NoCmdBold> " "and <CmdBold>show tech<NoCmdBold> details."
<del>SACHOCXMRPNULLERR</del>	3-Error	[chars]	The RP plugin encountered an error during one of the Plugin calls	asr1k-spa-chstm1	"This is a internal software error. Decode the " "traceback. Enable <CmdBold>debug hw-module subslot " "<slot>/<bay> oir plugin<NoCmdBold> when the problem " "is happening. Check Bug Toolkit before calling the " "TAC. When calling the TAC please provide the above " "information along with the output of <CmdBold>show " "logging<NoCmdBold> and the output of <CmdBold>show " "tech<NoCmdBold> details."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SACHOCXMRP3IMOUT	3-Error	Interface [chars]: [chars]	The CHOCX RP driver queries the LC for SONET information the LC didn't reply.	asr1k-spa-chstm1	"This is a internal software error. Decode the " "traceback. Enable <CmdBold>debug hw-module subslot " "<slot>/<bay> command<NoCmdBold>. Check Bug Toolkit " "before calling the TAC. When calling the TAC " "please provide the above information along with the " "output of <CmdBold>show logging<NoCmdBold> and the " "output of <CmdBold>show tech<NoCmdBold> details."
SACHOCXMRP3IBAE	5-Notice	[chars] [chars]	Remote subrate configuration changed	asr1k-spa-chstm1	"Inform the network operator that subrate " "configuration changed by remote end"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SACHCXMPRAHUPDOWN</del>	5-Notice	Path [chars] changed state to [chars]	A Sonet high order path changed its state.	asr1k-spa-chstm1	"This is a internal software error. Decode the " "traceback and get the output of <CmdBold>show " "controller sonet<NoCmdBold>. Look into this " "output to see if there are any alarms being " "reported at the path level. Check Bug Toolkit " "before calling the TAC. When calling the TAC " "please provide the above information along with " "the output of <CmdBold>show tech<NoCmdBold> " "details"
<del>SACHCXMPRESUBDOWN</del>	5-Notice	T3 [chars] changed state to [chars]	A T3 within STS1 changed its state.	asr1k-spa-chstm1	"This is a internal software error. Decode the " "traceback and get the output of <CmdBold>show " "controller sonet<NoCmdBold>. Look into this " "output to see if there are any alarms being " "reported at the T3 level. Check Bug Toolkit " "before calling the TAC. When calling the TAC " "please provide the above information along with " "the output of <CmdBold>show tech<NoCmdBold> " "details"
<del>SACHCXWRAIICAL</del>	1-Alert	-	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SACHCXWREASCDIAL	3-Error	-	-	-	-
SACHCXWREACORRUPT	3-Error	-	-	-	-
SACHCXWREERRRRCR	3-Error	-	-	-	-
SACHCXWREBUSIBOOK	3-Error	-	-	-	-
SACHCXWREPLCNER	3-Error	[chars]	The RP plugin encountered an error during one of the Plugin calls	c7600-sip-200	"This is a internal software error. Decode the " "traceback. Enable <CmdBold>debug hw-module subslot " "<slot>/<bay> oir plugin<NoCmdBold> when the problem " "is happening. Check Bug Toolkit before calling the " "TAC. When calling the TAC please provide the above " "information along with the output of <CmdBold>show " "logging<NoCmdBold> and the output of <CmdBold>show " "tech<NoCmdBold> details."
SACHCXWRESIMCUT	3-Error	-	-	-	-
SACHCXWREDSBRAE	5-Notice	[chars] [chars]	Remote subrate configuration changed	c7600-sip-200	"Inform the network operator that subrate " "configuration changed by remote end"
SACHCXWREAFUDOWN	5-Notice	-	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPA_CHOCX3RESBU</del> SPA_CHOCX3RESBU	5-Notice	T3 [chars] changed state to [chars]	A T3 within STS1 changed its state.	c7600-sip-200	"This is a internal software error. Decode the " "traceback and get the output of <CmdBold>show " "controller sonet<NoCmdBold>. Look into this " "output to see if there are any alarms being " "reported at the T3 level. Check Bug Toolkit " "before calling the TAC. When calling the TAC " "please provide the above information along with " "the output of <CmdBold>show tech<NoCmdBold> " "details"
<del>SPCOC3OXA</del> SPCOC3OXA	3-Error	failed to get [chars] namestring	Error in retrieving namestring of a specified Controller/IDB	asr900-tdm-combo	"This is a internal software error. If the error persists or occurred " "during normal operation decode the traceback and " LOG_STD_ACTION
<del>SPA_CHOCX3CORRUPT</del> SPA_CHOCX3CORRUPT	3-Error	Corrupt configuration unsupported [chars] [node]encountered	The OC3/STM1 RP driver running configuration is corrupted.	spa-choc3-ds0	<del>SPCOC3OXA</del> SPCOC3OXA
<del>SPA_CHOCX3CREATE_FAL</del> SPA_CHOCX3CREATE_FAL	3-Error	Failed to create [chars] : slot/bay:[dec]/[dec]	The channelized SPA controller descriptor block creation failed. Check the amount of available system memory.	spa-choc3-ds0	LOGSIDSHTTECHACION
<del>SPA_CHOCX3ERROR</del> SPA_CHOCX3ERROR	3-Error	Failed to create for [chars] : slot/bay:[dec]/[dec]	The channelized SPA controller encountered an error.	spa-choc3-ds0	"Check the memory availabe in system and " LOGSIDSHTTECHACION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPA_CHOCX3FATAL_ERROR</del>	3-Error	Fatal error for [chars] : slot/bay:[dec]/[dec]	The channelized SPA controller encountered a fatal error.	spa-choc3-ds0	<del>LOG_STD_ACTION</del>
<del>SPA_CHOCX3FRR_ERROR</del>	3-Error	Error in handling FRR: [chars] [chars] [hec] [hec]	Error in FRR processing.	spa-choc3-ds0	"This is a internal software error. If this error happened while " "configuring FRR try reconfiguring the interface. If the error " "persists or occurred during normal operation decode the traceback " "and " LOG_STD_ACTION
<del>SPA_CHOCX3NIFC_FAILED</del>	3-Error	Channel provisioning failed for [chars]	Channel could not be provisioned on SPA for this interface interface corresoponding to that channel has been moved to down state. If this interface was provisioned using the user interface then it may not appear in the interface list.	spa-choc3-ds0	<del>LOG_STD_ACTION</del>
<del>SPA_CHOCX3INVALID_SPA_TYPE</del>	3-Error	Invalid SPA type : slot/bay:[dec]/[dec] spa_type=[dec].	The channelized SPA type cannot be recognized by the version of Cisco IOS software currently running on the system.	spa-choc3-ds0	"Upgrade your system to a version of Cisco IOS software that supports " "this SPA type."
<del>SPA_CHOCX3-NULL</del>	3-Error	[chars]	The NULL pointer was detected when getting the data structure.	spa-choc3-ds0	<del>LOG_STD_ACTION</del>
<del>SPA_CHOCX3NULL_INSTANCE</del>	3-Error	Null [chars] instance for [chars] : slot/bay:[dec]/[dec]	The instance pointer is NULL when getting data structure.	spa-choc3-ds0	<del>LOG_STD_ACTION</del>



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPA_CHOCX3-NULLSUBBLOCK</del>	3-Error	Null ssb for [chars]	The hwidb subblock is NULL.	spa-choc3-ds0	<del>SPA_CHOCX3-AS-VER-CDN</del>
<del>SPA_CHOCX3-RETURNERROR</del>	3-Error	Return error for [chars]: return_value=[dec]	Return error code received.	spa-choc3-ds0	<del>SPA_CHOCX3-AS-VER-CDN</del>
<del>SPA_CHOCX3-SONET_ALARM_PROC</del>	3-Error	[chars] Error has occurred while processing in the sonet alarm-proc	Either free/create of the memory failed in SONET alarm proc	-	-
<del>SPA_CHOCX3-UNKNOWN_OPTION</del>	3-Error	Received unknown [chars]: option=[dec]	Unknown option received.	spa-choc3-ds0	<del>SPA_CHOCX3-AS-VER-CDN</del>
<del>SPA_CHOCX3-XPUNSUPP</del>	3-Error	[dec]/[dec]/[dec]: [chars] detected/inserted is not supported	Unsupported XFP has been detected or inserted in a port in Channelized SPA.	spa-choc3-ds0	"Remove the unsupported XFP/SFP and replace it with supported one."
<del>SPA_CHOCX3-EMCONWARNING</del>	5-Notice	With Scaled CEM recommended value of LDP discovery timeout is 180 seconds before SSO. Current Scale: [dec]	User Recommendation	-	-
<del>SPA_CHOCX3-DEF_SUBRAIE</del>	5-Notice	[chars] [chars]	Remote subrate configuration changed.	spa-choc3-ds0	"Inform the network operator that subrate configuration was changed " "by remote end."
<del>SPA_CHOCX3-SONET_ALARM</del>	6-Information	[chars] [chars] [chars] [chars] [chars]	This message is generated whenever a sonet alarm is	-	LOG_STD_NO_ACTION
<del>SPA_CHOCX3-6-XP_OK</del>	6-Information	[dec]/[dec]/[dec]: [chars] detected/inserted	XFP has been detected or inserted in a port in Channelized SPA.	spa-choc3-ds0	"This is a information message no action required"
<del>SPA_CHOCX3-6-XP_REMOVED</del>	6-Information	[dec]/[dec]/[dec]	XFP removed from a port in Channelized SPA	spa-choc3-ds0	"This is a information message no action required"
<del>SPA_CONSOLE-BADETACH</del>	3-Error	SPA console session detach failed with IPC error [chars].	A failure occurred when attempting to detach SPA console subsystem.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_CONSOLE3BADDETACH	3-Error	SPA console session detach failed with IPC error [chars].	A failure occurred when attempting to detach SPA console subsystem.	-	LOG_STD_ACTION
SPA_CONSOLE3BADDETACH	3-Error	SPA console session detach failed with IPC error [chars].	A failure occurred when attempting to detach SPA console subsystem.	-	LOG_STD_ACTION
SPA_CONSOLE3INITFAIL	3-Error	[chars]: SPA console initialization error: [chars].	A failure occurred during initialization of the SPA console subsystem. The SPA console may not be functioning.	-	LOG_STD_ACTION
SPA_CONSOLE3INITFAIL	3-Error	[chars]: SPA console initialization error: [chars].	A failure occurred during initialization of the SPA console subsystem. The SPA console may not be functioning.	-	LOG_STD_ACTION
SPA_CONSOLE3INITFAIL	3-Error	[chars]: SPA console initialization error: [chars].	A failure occurred during initialization of the SPA console subsystem. The SPA console may not be functioning.	-	LOG_STD_ACTION
SPA_CONSOLE3INITFAIL	3-Error	[chars]: SPA console initialization error: [chars].	A failure occurred during initialization of the SPA console subsystem. The SPA console may not be functioning.	-	LOG_STD_ACTION
SPA_CONSOLE3NO_DRIVER	3-Error	[chars]: VCON_SPACP: Driver not ready.	SPA sent a message before SIP was fully initialized.	c7600-ssc-600	LOG_SID_RECUR_ACTION
SPA_CONSOLE3NO_DRIVER	3-Error	[chars]: VCON_SPACP: Driver not ready.	SPA sent a message before SIP was fully initialized.	c7600-ssc-600	LOG_SID_RECUR_ACTION
SPA_CONSOLE3NO_DRIVER	3-Error	[chars]: VCON_SPACP: Driver not ready.	SPA sent a message before SIP was fully initialized.	c7600-ssc-600	LOG_SID_RECUR_ACTION
SPA_CONSOLE3NOBUF	3-Error	No packet buffer available for sending SPA console messages	An error occurred while the SPA console was attempting to acquire a packet buffer from the IPC buffer pool.	-	show ipc status

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_CONSOLE3NOBUF	3-Error	No packet buffer available for sending SPA console messages	An error occurred while the SPA console was attempting to acquire a packet buffer from the IPC buffer pool.	-	show ipc status
SPA_CONSOLE3NOBUF	3-Error	No packet buffer available for sending SPA console messages	An error occurred while the SPA console was attempting to acquire a packet buffer from the IPC buffer pool.	-	show ipc status
SPA_CONSOLE3XBUSPARAM	3-Error	[chars]: VCON_SPACP: Invalid SPA bus parameters.	There was an error receiving a message from SPA.	c7600-ssc-600	LOG_SID_RECUR_ACTION
SPA_CONSOLE3XBUSPARAM	3-Error	[chars]: VCON_SPACP: Invalid SPA bus parameters.	There was an error receiving a message from SPA.	c7600-ssc-600	LOG_SID_RECUR_ACTION
SPA_CONSOLE3XBUSPARAM	3-Error	[chars]: VCON_SPACP: Invalid SPA bus parameters.	There was an error receiving a message from SPA.	c7600-ssc-600	LOG_SID_RECUR_ACTION
SPA_CONSOLE3XBUSPARAM	3-Error	[chars]: VCON_SPACP: Invalid SPA bus parameters.	There was an error sending a message to SPA.	c7600-ssc-600	LOG_SID_RECUR_ACTION
SPA_CONSOLE3XBUSPARAM	3-Error	[chars]: VCON_SPACP: Invalid SPA bus parameters.	There was an error sending a message to SPA.	c7600-ssc-600	LOG_SID_RECUR_ACTION
SPA_CONSOLE3XBUSPARAM	3-Error	[chars]: VCON_SPACP: Invalid SPA bus parameters.	There was an error sending a message to SPA.	c7600-ssc-600	LOG_SID_RECUR_ACTION
SPA_CONSOLE5SCANIGET	5-Notice	Cannot get SPA client IPC port	SPA console sub-block is not initialized properly.	-	LOG_STD_ACTION
SPA_CONSOLE5SCANIGET	5-Notice	Cannot get SPA client IPC port	SPA console sub-block is not initialized properly.	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SPA_CONSOLE\$CANIGET	5-Notice	Cannot get SPA client IPC port	SPA console sub-block is not initialized properly.	-	LOG_STD_ACTION
SPA_CONSOLE\$CANISEND	5-Notice	Cannot send SPA console messages.	An error occurred while a SPA console message was being sent via the IPC. This condition might result in a malfunction in the operation of the IPC.	-	show ipc status
SPA_CONSOLE\$CANISEND	5-Notice	Cannot send SPA console messages.	An error occurred while a SPA console message was being sent via the IPC. This condition might result in a malfunction in the operation of the IPC.	-	show ipc status
SPA_CONSOLE\$CANISEND	5-Notice	Cannot send SPA console messages.	An error occurred while a SPA console message was being sent via the IPC. This condition might result in a malfunction in the operation of the IPC.	-	show ipc status
SPA_CONSOLE\$CANISET	5-Notice	Cannot set SPA client IPC port.	SPA console sub-block is not initialized properly.	-	LOG_STD_ACTION
SPA_CONSOLE\$CANISET	5-Notice	Cannot set SPA client IPC port.	SPA console sub-block is not initialized properly.	-	LOG_STD_ACTION
SPA_CONSOLE\$CANISET	5-Notice	Cannot set SPA client IPC port.	SPA console sub-block is not initialized properly.	-	LOG_STD_ACTION
SPA_CONSOLE\$QUEUEFULL	5-Notice	Queue holding SPA console messages is full current console packet will be dropped	An error occurred while the SPA console was Queueing a packet for transmission. Some console data may be lost	-	show ipc status

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_CONSOLE_QUEUE_FULL	5-Notice	Queue holding SPA console messages is full current console packet will be dropped	An error occurred while the SPA console was Queueing a packet for transmission. Some console data may be lost	-	show ipc status
SPA_CONSOLE_QUEUE_FULL	5-Notice	Queue holding SPA console messages is full current console packet will be dropped	An error occurred while the SPA console was Queueing a packet for transmission. Some console data may be lost	-	show ipc status
SPA_CT3_INVALID_SPA_TYPE	3-Error	Invalid SPA type : slot/bay:[dec]/[dec] spa_type=[dec].	The Channelized T3 SPA type cannot be recognized by the version of Cisco IOS software currently running on the system.	spa-ct3-ds0	"Upgrade your system to the latest version of Cisco " "IOS software in your release train. If you require " "further assistance " LOG_STD_ACTION
SPA_CT3_PROCESS_FAIL	3-Error	process creation failed for [chars]	A command could not be processed because of a process creation failure.	spa-ct3-ds0	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPA</del> <del>CT3</del> <del>DEF</del> <del>SUBRA</del> <del>TE</del> <del>ERR</del>	3-Error	[chars]: Failed to download the subrate FPGA image.	The indicated SPA was not able to download the subrate FPGA image during card initialization sequence. The image might be corrupted and the system will try to recover from this error by upgrading the image.	spa-ct3-ds0	"If the system cannot recover from this error automatically after a few " "attempts it will power-off the affected SPA. In this case copy the " "error message exactly as it appears and gather the output of the " " <del>CmdBold</del> >show hw-module subslot<NoCmdBold> <CmdBold>upgrade " " <del>CmdBold</del> <NoCmdBold> and <CmdBold>show hw-module subslot<NoCmdBold> " " <del>CmdAg</del> <NoCmdAg> " " <del>CmdBold</del> <NoCmdBold> commands then " "contact your technical support representative with the gathered " "information."
SPA_CT3DEF_SUBRA	5-Notice	[chars] [chars]	Remote subrate configuration changed	spa-ct3-ds0	"Inform the network operator that subrate " "configuration changed by remote end"
<del>SPA</del> <del>INFRA</del> <del>ERR</del>	3-Error	[chars] [chars] - A packet gap error has occurred	The data bus interface on this line card is experiencing a hardware-related issue. No loss of data or data corruption should occur. Packets should continue to be forwarded.	spa-infra	SPI4_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SPA_DAB_PACKET_ERROR</del>	3-Error	[chars] [chars] - A packet gap error has occurred	The data bus interface on this line card is experiencing a hardware-related issue. No loss of data or data corruption should occur. Packets should continue to be forwarded.	spa-infra	SPI4_STD_ACTION
<del>SPA_DAB_PACKET_ERROR</del>	3-Error	[chars] [chars] - A packet gap error has occurred	The data bus interface on this line card is experiencing a hardware-related issue. No loss of data or data corruption should occur. Packets should continue to be forwarded.	spa-infra	SPI4_STD_ACTION
<del>SPA_DAB_SMB_CHAN_NUM</del>	3-Error	[chars] [chars] - An error condition on the SPA data bus has occurred.	An error condition on the SPA data bus has occurred. This condition can be caused by a software fault only.	spa-infra	<del>SPA_BUGTOOLKIT_ACTION</del>
<del>SPA_DAB_SMB_CHAN_NUM</del>	3-Error	[chars] [chars] - An error condition on the SPA data bus has occurred.	An error condition on the SPA data bus has occurred. This condition can be caused by a software fault only.	spa-infra	<del>SPA_BUGTOOLKIT_ACTION</del>
<del>SPA_DAB_SMB_CHAN_NUM</del>	3-Error	[chars] [chars] - An error condition on the SPA data bus has occurred.	An error condition on the SPA data bus has occurred. This condition can be caused by a software fault only.	spa-infra	<del>SPA_BUGTOOLKIT_ACTION</del>

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SPA</del> <del>BS</del> <del>SP</del> <del>BC</del> <del>NR</del> <del>WOD</del>	3-Error	[chars] [chars] - An error condition on the data bus between the SPA and the SIP has occurred.	An error condition on the data bus between the SPA and the SIP has occurred. Symptoms of this error include data corruption and/or a short duration of data loss. In addition the interface may lock up.	spa-infra	SPI4_STD_ACTION
<del>SPA</del> <del>BS</del> <del>SP</del> <del>BC</del> <del>NR</del> <del>WOD</del>	3-Error	[chars] [chars] - An error condition on the data bus between the SPA and the SIP has occurred.	An error condition on the data bus between the SPA and the SIP has occurred. Symptoms of this error include data corruption and/or a short duration of data loss. In addition the interface may lock up.	spa-infra	SPI4_STD_ACTION
<del>SPA</del> <del>BS</del> <del>SP</del> <del>BC</del> <del>NR</del> <del>WOD</del>	3-Error	[chars] [chars] - An error condition on the data bus between the SPA and the SIP has occurred.	An error condition on the data bus between the SPA and the SIP has occurred. Symptoms of this error include data corruption and/or a short duration of data loss. In addition the interface may lock up.	spa-infra	SPI4_STD_ACTION
<del>SPA</del> <del>BS</del> <del>SP</del> <del>CA</del> <del>END</del> <del>RIEN</del>	3-Error	[chars] [chars] - An error condition on the data bus between the SPA and the SIP has occurred.	An error condition on the data bus between the SPA and the SIP has occurred. This condition results from a software fault.	spa-infra	<del>SP4</del> <del>BUG</del> <del>TOOLKIT</del> <del>ACTION</del>



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SPA_DAB_SIP_CALENDAR_LEN</del>	3-Error	[chars] [chars] - An error condition on the data bus between the SPA and the SIP has occurred.	An error condition on the data bus between the SPA and the SIP has occurred. This condition results from a software fault.	spa-infra	<del>SPI4_BUG_TOOLKIT_ACTION</del>
<del>SPA_DAB_SIP_CALENDAR_LEN</del>	3-Error	[chars] [chars] - An error condition on the data bus between the SPA and the SIP has occurred.	An error condition on the data bus between the SPA and the SIP has occurred. This condition results from a software fault.	spa-infra	<del>SPI4_BUG_TOOLKIT_ACTION</del>
<del>SPA_DAB_SIP_REL_WD_NODM</del>	3-Error	[chars] [chars] - An error condition on the data bus between the SPA and the SIP has occurred.	This message points to an error condition on the SPA data bus. Symptoms of this error include data corruption and/or a short duration of data loss.	spa-infra	SPI4_STD_ACTION
<del>SPA_DAB_SIP_REL_WD_NODM</del>	3-Error	[chars] [chars] - An error condition on the data bus between the SPA and the SIP has occurred.	This message points to an error condition on the SPA data bus. Symptoms of this error include data corruption and/or a short duration of data loss.	spa-infra	SPI4_STD_ACTION
<del>SPA_DAB_SIP_REL_WD_NODM</del>	3-Error	[chars] [chars] - An error condition on the data bus between the SPA and the SIP has occurred.	This message points to an error condition on the SPA data bus. Symptoms of this error include data corruption and/or a short duration of data loss.	spa-infra	SPI4_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SPA</del> <del>VB</del> <del>SPH</del> <del>CS</del> <del>SA</del> <del>SB</del> <del>S</del>	3-Error	[chars] [chars] - FIFO status bus out of frame condition has occurred.	The data bus interface on this line card is experiencing a hardware-related issue. When this condition is occurring the interface will be down and/or not forward any traffic.	spa-infra	SPI4_STD_ACTION
<del>SPA</del> <del>VB</del> <del>SPH</del> <del>CS</del> <del>SA</del> <del>SB</del> <del>S</del>	3-Error	[chars] [chars] - FIFO status bus out of frame condition has occurred.	The data bus interface on this line card is experiencing a hardware-related issue. When this condition is occurring the interface will be down and/or not forward any traffic.	spa-infra	SPI4_STD_ACTION
<del>SPA</del> <del>VB</del> <del>SPH</del> <del>CS</del> <del>SA</del> <del>SB</del> <del>S</del>	3-Error	[chars] [chars] - FIFO status bus out of frame condition has occurred.	The data bus interface on this line card is experiencing a hardware-related issue. When this condition is occurring the interface will be down and/or not forward any traffic.	spa-infra	SPI4_STD_ACTION
<del>SPA</del> <del>VB</del> <del>SPH</del> <del>CS</del> <del>SA</del> <del>SB</del> <del>S</del>	3-Error	[chars] [chars] - A data bus out of frame error condition has occurred	An error has occurred on the data bus between the SPA and the SIP. When this condition is occurring the interface will be down and/or not forward any traffic.	spa-infra	"Power down and reseal the card. " SPI4_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPADABUSOUTOFRAME</del>	3-Error	[chars] [chars] - A data bus out of frame error condition has occurred	An error has occurred on the data bus between the SPA and the SIP. When this condition is occurring the interface will be down and/or not forward any traffic.	spa-infra	"Power down and reseal the card. " SPI4_STD_ACTION
<del>SPADABUSOUTOFRAME</del>	3-Error	[chars] [chars] - A data bus out of frame error condition has occurred	An error has occurred on the data bus between the SPA and the SIP. When this condition is occurring the interface will be down and/or not forward any traffic.	spa-infra	"Power down and reseal the card. " SPI4_STD_ACTION
<del>SPADABUSHSQENCE</del>	3-Error	[chars] [chars] - A sequence error has occurred.	A sequence error has occurred on the data bus between the SPA and the SIP. When this condition is occurring a short duration of packet loss may be noticed. This condition may indicate a developing hardware failure. This error should occur very infrequently during normal operation and should not occur when no changes are made to the configuration.	spa-infra	SPI4_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SPA_DABUSH_SEQUENCE</del>	3-Error	[chars] [chars] - A sequence error has occurred.	A sequence error has occurred on the data bus between the SPA and the SIP. When this condition is occurring a short duration of packet loss may be noticed. This condition may indicate a developing hardware failure. This error should occur very infrequently during normal operation and should not occur when no changes are made to the configuration.	spa-infra	SPI4_STD_ACTION
<del>SPA_DABUSH_SEQUENCE</del>	3-Error	[chars] [chars] - A sequence error has occurred.	A sequence error has occurred on the data bus between the SPA and the SIP. When this condition is occurring a short duration of packet loss may be noticed. This condition may indicate a developing hardware failure. This error should occur very infrequently during normal operation and should not occur when no changes are made to the configuration.	spa-infra	SPI4_STD_ACTION
<del>SPA_DABUSH_SEQUENCE_P2</del>	3-Error	[chars] [chars] - A single DIP 2 parity error on the FIFO status bus has occurred.	The data bus interface on this line card is experiencing a hardware-related issue. Some packets may be dropped.	spa-infra	SPI4_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SPA_DAB_SINCE_DIP4</del>	3-Error	[chars] [chars] - A single DIP 2 parity error on the FIFO status bus has occurred.	The data bus interface on this line card is experiencing a hardware-related issue. Some packets may be dropped.	spa-infra	SPI4_STD_ACTION
<del>SPA_DAB_SINCE_DIP4</del>	3-Error	[chars] [chars] - A single DIP 2 parity error on the FIFO status bus has occurred.	The data bus interface on this line card is experiencing a hardware-related issue. Some packets may be dropped.	spa-infra	SPI4_STD_ACTION
<del>SPA_DAB_SINCE_DIP4</del>	3-Error	[chars] [chars] - A single DIP4 parity error has occurred on the data bus.	A single parity error has occurred on the data bus between the SPA and the SIP. When this condition is occurring a short duration of packet loss and/or symptoms resulting from data corruption may occur. This condition may indicate a developing hardware failure. This error should occur very infrequently during normal operation and should not occur when no changes are made to the configuration.	spa-infra	"Power down and reseal the interface card. " SPI4_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SADVBS</del> <del>SINCE</del> <del>DIP4</del> <del>PARITY</del>	3-Error	[chars] [chars] - A single DIP4 parity error has occurred on the data bus.	A single parity error has occurred on the data bus between the SPA and the SIP. When this condition is occurring a short duration of packet loss and/or symptoms resulting from data corruption may occur. This condition may indicate a developing hardware failure. This error should occur very infrequently during normal operation and should not occur when no changes are made to the configuration.	spa-infra	"Power down and reseal the interface card. " SPI4_STD_ACTION
<del>SADVBS</del> <del>SINCE</del> <del>DIP4</del> <del>PARITY</del>	3-Error	[chars] [chars] - A single DIP4 parity error has occurred on the data bus.	A single parity error has occurred on the data bus between the SPA and the SIP. When this condition is occurring a short duration of packet loss and/or symptoms resulting from data corruption may occur. This condition may indicate a developing hardware failure. This error should occur very infrequently during normal operation and should not occur when no changes are made to the configuration.	spa-infra	"Power down and reseal the interface card. " SPI4_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SPADAB</del> <del>SINK</del> <del>OVERFLOW</del>	3-Error	[chars] [chars] - An error condition on the data bus between the SPA and the SIP has occurred.	An error condition on the data bus between the SPA and the SIP has occurred. Possible causes include misconfiguration of Maxburst parameters incorrect FIFO sizing or FIFO threshold settings.	spa-infra	<del>SPA</del> <del>BUG</del> <del>TOOLKIT</del> <del>ACTION</del>
<del>SPADAB</del> <del>SINK</del> <del>OVERFLOW</del>	3-Error	[chars] [chars] - An error condition on the data bus between the SPA and the SIP has occurred.	An error condition on the data bus between the SPA and the SIP has occurred. Possible causes include misconfiguration of Maxburst parameters incorrect FIFO sizing or FIFO threshold settings.	spa-infra	<del>SPA</del> <del>BUG</del> <del>TOOLKIT</del> <del>ACTION</del>
<del>SPADAB</del> <del>SINK</del> <del>OVERFLOW</del>	3-Error	[chars] [chars] - An error condition on the data bus between the SPA and the SIP has occurred.	An error condition on the data bus between the SPA and the SIP has occurred. Possible causes include misconfiguration of Maxburst parameters incorrect FIFO sizing or FIFO threshold settings.	spa-infra	<del>SPA</del> <del>BUG</del> <del>TOOLKIT</del> <del>ACTION</del>
<del>SPADAB</del> <del>SINK</del> <del>UNDERUN</del>	3-Error	[chars] [chars] - An error condition on the data bus between the SPA and the SIP has occurred.	An error condition on the data bus between the SPA and the SIP has occurred. Possible causes include misconfiguration of Maxburst parameters incorrect FIFO sizing or FIFO threshold settings.	spa-infra	<del>SPA</del> <del>BUG</del> <del>TOOLKIT</del> <del>ACTION</del>

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SADYBSSE</del> <u>SKIFUNDRUN</u>	3-Error	[chars] [chars] - An error condition on the data bus between the SPA and the SIP has occurred.	An error condition on the data bus between the SPA and the SIP has occurred. Possible causes include misconfiguration of Maxburst parameters incorrect FIFO sizing or FIFO threshold settings.	spa-infra	<del>SPI4</del> <u>BUGIOLKIT_ACTION</u>
<del>SADYBSSE</del> <u>SKIFUNDRUN</u>	3-Error	[chars] [chars] - An error condition on the data bus between the SPA and the SIP has occurred.	An error condition on the data bus between the SPA and the SIP has occurred. Possible causes include misconfiguration of Maxburst parameters incorrect FIFO sizing or FIFO threshold settings.	spa-infra	<del>SPI4</del> <u>BUGIOLKIT_ACTION</u>
<del>SADYBSSE</del> <u>UNACNDRST</u>	3-Error	[chars] [chars] - An error on the data bus has occurred.	In normal situation transitions from the Data Burst state to payload control or idle control are possible only on integer multiples of 8 cycles or upon end of packet. This error could happen if the MW bit flips on the bus with coincidental good dip4 or due to a misbehaving source.	spa-infra	"Power down and reset the card. " <u>SPI4_STD_ACTION</u>



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPA_DBSMUNACNDBUS</del>	3-Error	[chars] [chars] - An error on the data bus has occurred.	In normal situation transitions from the Data Burst state to payload control or idle control are possible only on integer multiples of 8 cycles or upon end of packet. This error could happen if the MW bit flips on the bus with coincidental good dip4 or due to a misbehaving source.	spa-infra	"Power down and reseal the card. " SPI4_STD_ACTION
<del>SPA_DBSMUNACNDBUS</del>	3-Error	[chars] [chars] - An error on the data bus has occurred.	In normal situation transitions from the Data Burst state to payload control or idle control are possible only on integer multiples of 8 cycles or upon end of packet. This error could happen if the MW bit flips on the bus with coincidental good dip4 or due to a misbehaving source.	spa-infra	"Power down and reseal the card. " SPI4_STD_ACTION
<del>SPA_DNEIHOR3D_INT</del>	3-Error	Failed to retrieve datapath identifier for interface [chars]	The SPA driver is not able to retrieve the datapath identifier for the interface specified in the message. This indicates a software error.	asr900-lotr-im	LOG_STD_NO_ACTION
<del>SPA_DNEIHOR3D_INT</del>	3-Error	failed to allocate ID for TDM IM	Failed to allocate ID for TDM IM.	asr900-lotr-im	LOG_STD_ACTION
<del>SPA_DNEIHOR3D_INT</del>	3-Error	failed to initialize TDM IM ID table	Failed to initialize TDM IM ID table.	asr900-lotr-im	LOG_STD_ACTION
<del>SPA_DNEIHOR3D_INT</del>	3-Error	[chars]	Failed to enqueue a message.	asr900-lotr-im	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPA_DNRFBUILD</del> SRCE	3-Error	[chars]	A software error occurred and SPA driver is not able to retrieve the data structure mentioned in the message.	asr900-lotr-im	LOG_STD_ACTION
<del>SPA_DNRFB</del> PROCESSAL	3-Error	process creation failed for [chars]	The Periodic one second process creation failed. This indicates a software error.	asr900-lotr-im	LOG_STD_ACTION
<del>SPA_DNRFB</del> SENDAL	3-Error	common_str_empty_str	Failed to send TDL message.	asr900-lotr-im	LOG_STD_ACTION
<del>SPA_DNRFB</del> NSIPREDIA	3-Error	common_str_empty_str	A software error occurred and SPA driver encountered unsupported data mentioned in the message	asr900-lotr-im	LOG_STD_ACTION
<del>SPA_DNRFB</del> LANIDNMO	3-Error	VLAN identifier is not zero before allocation for interface [chars]	The SPA driver is seeing non zero VLAN identifier before allocating new vlan identifier for the interface specified in the message. This indicates a software error.	asr900-lotr-im	LOG_STD_NO_ACTION
<del>SPA_DSRMB</del> DSPALARM	3-Error	Received alarm indication from dsp [dec]/[dec]/[dec].	Operational error detected in DSP.	spa-dsp	"Reload the SPA card and if the problem persists " LOG_STD_ACTION
<del>SPA_DSRMB</del> DSPALARMNO	3-Error	[chars]	DSP Alarm Data	spa-dsp	"Reload the SPA card and if the problem persists " LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_DSPRM3INSUFFICIENT	3-Error	Insufficient memory for [chars]	Insufficient memory for SPA-DSP DSPRM operation	spa-dsp	"Enter the <CmdBold>show memory summary</NoCmdBold> command to attempt to\n\n determine the cause of the error. " LOG_SID_REDUCE_ACTION
SPA_DSPRM5RESTART	5-Notice	DSP [dec]/[dec]/[dec] is restarted	DSP device restarted	-	LOG_SID_NO_ACTION
SPA_DSPRM5UPDOWN	5-Notice	DSP [dec]/[dec]/[dec] is [chars]	DSP device changed state up/down	-	LOG_SID_NO_ACTION
SPA_EEPROM#FIELDNOTFOUND	3-Error	[chars]: Failed to find content of field type 0x[hec] with data size = [dec] bytes. The EEPROM might require an update.	System failed to find the content of the indicated field type from the SPA EEPROM. The format of the EEPROM of the indicated SPA might not be up to date.	spa-infra	SPA_EEPROM_DEBUG_ACTION
SPA_EEPROM#FIELDNOTFOUND	3-Error	[chars]: Failed to find content of field type 0x[hec] with data size = [dec] bytes. The EEPROM might require an update.	System failed to find the content of the indicated field type from the SPA EEPROM. The format of the EEPROM of the indicated SPA might not be up to date.	spa-infra	SPA_EEPROM_DEBUG_ACTION
SPA_EEPROM#FIELDNOTFOUND	3-Error	[chars]: Failed to find content of field type 0x[hec] with data size = [dec] bytes. The EEPROM might require an update.	System failed to find the content of the indicated field type from the SPA EEPROM. The format of the EEPROM of the indicated SPA might not be up to date.	spa-infra	SPA_EEPROM_DEBUG_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SPA_HR0M#EIDN0TIOND</del>	3-Error	[chars]: Failed to find content of field type 0x[hec] with data size = [dec] bytes. The EEPROM might require an update.	System failed to find the content of the indicated field type from the SPA EEPROM. The format of the EEPROM of the indicated SPA might not be up to date.	spa-infra	<del>SPA_HR0M#SIDB_GACION</del>
<del>SPA_HR0M#FORMA_HRCR</del>	3-Error	[chars]: [chars]. The EEPROM might require an update.	A format error has been detected in the EEPROM of the indicated SPA. The type of error is indicated in the error message.	spa-infra	<del>SPA_HR0M#SIDB_GACION</del>
<del>SPA_HR0M#FORMA_HRCR</del>	3-Error	[chars]: [chars]. The EEPROM might require an update.	A format error has been detected in the EEPROM of the indicated SPA. The type of error is indicated in the error message.	spa-infra	<del>SPA_HR0M#SIDB_GACION</del>
<del>SPA_HR0M#FORMA_HRCR</del>	3-Error	[chars]: [chars]. The EEPROM might require an update.	A format error has been detected in the EEPROM of the indicated SPA. The type of error is indicated in the error message.	spa-infra	<del>SPA_HR0M#SIDB_GACION</del>
<del>SPA_HR0M#FORMA_HRCR</del>	3-Error	[chars]: [chars]. The EEPROM might require an update.	A format error has been detected in the EEPROM of the indicated SPA. The type of error is indicated in the error message.	spa-infra	<del>SPA_HR0M#SIDB_GACION</del>
<del>SPA_HR0M#FORMA_HRCR</del>	3-Error	[chars]: [chars]. The EEPROM might require an update.	A format error has been detected in the EEPROM of the indicated SPA. The type of error is indicated in the error message.	spa-infra	<del>SPA_HR0M#SIDB_GACION</del>
<del>SPA_HR0M#READ_FALED</del>	3-Error	Failed to read the EEPROM content of [chars] in [chars] offset=0x[hec] num_byte=%u	System failed to read the EEPROM content of the indicated SPA with the specified offset value and number of bytes to read.	-	<del>SPA_HR0M#SIDB_GACION</del>

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<b>SA_EEPROM_READ_FAILED</b>	3-Error	Failed to read the EEPROM content of [chars] in [chars] offset=0x[hec] num_byte=%u	System failed to read the EEPROM content of the indicated SPA with the specified offset value and number of bytes to read.	-	<b>SA_EEPROM_DEBUG_ACTION</b>
<b>SA_EEPROM_READ_FAILED</b>	3-Error	Failed to read the EEPROM content of [chars] in [chars] offset=0x[hec] num_byte=%u	System failed to read the EEPROM content of the indicated SPA with the specified offset value and number of bytes to read.	-	<b>SA_EEPROM_DEBUG_ACTION</b>
<b>SA_EEPROM_READ_FAILED</b>	3-Error	Failed to read the EEPROM content of [chars] in [chars] offset=0x[hec] num_byte=%u	System failed to read the EEPROM content of the indicated SPA with the specified offset value and number of bytes to read.	-	<b>SA_EEPROM_DEBUG_ACTION</b>
<b>SA_EEPROM_RPC_FAILED</b>	3-Error	Failed to send RPC message to [chars] EEPROM of [chars] in [chars] - [chars]	System failed to send a RPC message to read/write the EEPROM of the indicated SPA. The cause of the error condition is shown in the error message.	-	<b>SA_EEPROM_SOURCE_ACTION</b>
<b>SA_EEPROM_RPC_FAILED</b>	3-Error	Failed to send RPC message to [chars] EEPROM of [chars] in [chars] - [chars]	System failed to send a RPC message to read/write the EEPROM of the indicated SPA. The cause of the error condition is shown in the error message.	-	<b>SA_EEPROM_SOURCE_ACTION</b>
<b>SA_EEPROM_RPC_FAILED</b>	3-Error	Failed to send RPC message to [chars] EEPROM of [chars] in [chars] - [chars]	System failed to send a RPC message to read/write the EEPROM of the indicated SPA. The cause of the error condition is shown in the error message.	-	<b>SA_EEPROM_SOURCE_ACTION</b>

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<u>SPA_HHRCMBRPC_FAILED</u>	3-Error	Failed to send RPC message to [chars] EEPROM of [chars] in [chars] - [chars]	System failed to send a RPC message to read/write the EEPROM of the indicated SPA. The cause of the error condition is shown in the error message.	-	<u>SPA_HHRCMSDRSOURCEACTN</u>
<u>SPA_HHRCMBRPC_FAILED</u>	3-Error	[chars]: Failed to [chars] the EEPROM write protect mode on [chars].	System failed to enable/disable the write protect mode for SPA EEPROM on the indicated device. This might happen if the device were busy performing other tasks.	-	<u>SPA_HHRCMSDEBUGACTN</u>
<u>SPA_HHRCMBRPC_FAILED</u>	3-Error	[chars]: Failed to [chars] the EEPROM write protect mode on [chars].	System failed to enable/disable the write protect mode for SPA EEPROM on the indicated device. This might happen if the device were busy performing other tasks.	-	<u>SPA_HHRCMSDEBUGACTN</u>
<u>SPA_HHRCMBRPC_FAILED</u>	3-Error	[chars]: Failed to [chars] the EEPROM write protect mode on [chars].	System failed to enable/disable the write protect mode for SPA EEPROM on the indicated device. This might happen if the device were busy performing other tasks.	-	<u>SPA_HHRCMSDEBUGACTN</u>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_EEPROM_WRITE_FAILED	3-Error	[chars]: Failed to [chars] the EEPROM write protect mode on [chars].	System failed to enable/disable the write protect mode for SPA EEPROM on the indicated device. This might happen if the device were busy performing other tasks.	-	SPA_EEPROM_DEBUG_ACTION
SPA_EEPROM_SW_ERROR	3-Error	NULL	-	spa-infra	LOG_STD_ACTION
SPA_EEPROM_SW_ERROR	3-Error	NULL	-	spa-infra	LOG_STD_ACTION
SPA_EEPROM_SW_ERROR	3-Error	NULL	-	spa-infra	LOG_STD_ACTION
SPA_EEPROM_SW_ERROR	3-Error	NULL	-	spa-infra	LOG_STD_ACTION
SPA_EEPROM_WRITE_FAILED	3-Error	Failed to write the EEPROM content for [chars] in [chars] offset=0x[hec] num_byte=%u	System failed to write data into the EEPROM of the indicated SPA with the specified offset value and number of bytes to write.	-	SPA_EEPROM_DEBUG_ACTION
SPA_EEPROM_WRITE_FAILED	3-Error	Failed to write the EEPROM content for [chars] in [chars] offset=0x[hec] num_byte=%u	System failed to write data into the EEPROM of the indicated SPA with the specified offset value and number of bytes to write.	-	SPA_EEPROM_DEBUG_ACTION
SPA_EEPROM_WRITE_FAILED	3-Error	Failed to write the EEPROM content for [chars] in [chars] offset=0x[hec] num_byte=%u	System failed to write data into the EEPROM of the indicated SPA with the specified offset value and number of bytes to write.	-	SPA_EEPROM_DEBUG_ACTION
SPA_EEPROM_WRITE_FAILED	3-Error	Failed to write the EEPROM content for [chars] in [chars] offset=0x[hec] num_byte=%u	System failed to write data into the EEPROM of the indicated SPA with the specified offset value and number of bytes to write.	-	SPA_EEPROM_DEBUG_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA EEPROM CANNOT UPDATE	4-Warning	[chars]: EEPROM data cannot be updated at this moment because the SPA is not in service.	The EEPROM update operation cannot be performed because the indicated SPA could have been in \out of service\ state \admin down\ state or is trying to get initialized.	spa-infra	<p>"Retry the operation when the SPA is in service. The operational status "</p> <p>"of the SPA can be checked with the</p> <p>&lt;CmdBold&gt;show hw-module subslot"</p> <p>"&lt;NoCmdBold&gt;</p> <p>&lt;CmdAg&gt;show hw-module subslot</p> <p>&lt;CmdBold&gt; or &lt;NoCmdBold&gt;</p> <p>" "command. If the SPA is shown in \out of service\ state correct the " indicated problem before the retry to update EEPROM. If the state shown " "is in \admin down\ re-enable the SPA with &lt;CmdBold&gt;no hw-module "</p> <p>"subslot&lt;NoCmdBold&gt;</p> <p>&lt;CmdAg&gt;show hw-module subslot</p> <p>&lt;CmdBold&gt;shutdown"</p> <p>"&lt;NoCmdBold&gt; command."</p>



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SAEPPROMCANNOTUPDATE	4-Warning	[chars]: EEPROM data cannot be updated at this moment because the SPA is not in service.	The EEPROM update operation cannot be performed because the indicated SPA could have been in \out of service\ state \admin down\ state or is trying to get initialized.	spa-infra	"Retry the operation when the SPA is in service. The operational status " "of the SPA can be checked with the <CmdBold>show hw-module subslot" "<NoCmdBold> <CmdAg> <NoCmdAg> <CmdBdt> <NoCmdBdt> " "command. If the SPA is shown in \"out of service\" state correct the " "indicated problem before the retry to update EEPROM. If the state shown " "is in \"admin down\" re-enable the SPA with <CmdBold>no hw-module " "subslot<NoCmdBold> <CmdAg> <NoCmdAg> <CmdBdt> <NoCmdBdt> <CmdBold>shutdown" "<NoCmdBold> command."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPAEEPROMCANNOTUPDATE	4-Warning	[chars]: EEPROM data cannot be updated at this moment because the SPA is not in service.	The EEPROM update operation cannot be performed because the indicated SPA could have been in \out of service\ state \admin down\ state or is trying to get initialized.	spa-infra	"Retry the operation when the SPA is in service. The operational status " "of the SPA can be checked with the <CmdBold>show hw-module subslot" "<NoCmdBold> <CmdAg>show hw-module <CmdAg> <CmdBold> or <CmdAg> " "command. If the SPA is shown in \out of service\" state correct the " "indicated problem before the retry to update EEPROM. If the state shown " "is in \admin down\" re-enable the SPA with <CmdBold>no hw-module " "subslot<NoCmdBold> <CmdAg>show hw-module <CmdAg> <CmdBold>shutdown" "<NoCmdBold> command."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPA</del> EEPROMCANNOTUPDATE	4-Warning	[chars]: EEPROM data cannot be updated at this moment because the SPA is not in service.	The EEPROM update operation cannot be performed because the indicated SPA could have been in \out of service\ state \admin down\ state or is trying to get initialized.	spa-infra	"Retry the operation when the SPA is in service. The operational status " "of the SPA can be checked with the <CmdBold>show hw-module subslot" "<NoCmdBold> " <CmdAg> <NoCmdAg> " "command. If the SPA is shown in \"out of service\" state correct the " "indicated problem before the retry to update EEPROM. If the state shown " "is in \"admin down\" re-enable the SPA with <CmdBold>no hw-module " "subslot<NoCmdBold> " <CmdAg> <NoCmdAg> " "command." "
<del>SPA</del> EEPROMDATA_TRUNCATED	4-Warning	[chars]: Data will be truncated for field type 0x[hec] - size [node]bytes too	The provided data to be written into the indicated field type of SPA EEPROM is too big and the data will be truncated in order to fit into the allowed space.	spa-infra	"Retry the operation again with a data size that will fit into the " "indicated size for the field type."
<del>SPA</del> EEPROMDATA_TRUNCATED	4-Warning	[chars]: Data will be truncated for field type 0x[hec] - size [node]bytes too	The provided data to be written into the indicated field type of SPA EEPROM is too big and the data will be truncated in order to fit into the allowed space.	spa-infra	"Retry the operation again with a data size that will fit into the " "indicated size for the field type."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPA_HBROM4DATA_TRUNCATED</del>	4-Warning	[chars]: Data will be truncated for field type 0x[hec] - size [node]bytes too	The provided data to be written into the indicated field type of SPA EEPROM is too big and the data will be truncated in order to fit into the allowed space.	spa-infra	"Retry the operation again with a data size that will fit into the " "indicated size for the field type."
<del>SPA_HBROM4DATA_TRUNCATED</del>	4-Warning	[chars]: Data will be truncated for field type 0x[hec] - size [node]bytes too	The provided data to be written into the indicated field type of SPA EEPROM is too big and the data will be truncated in order to fit into the allowed space.	spa-infra	"Retry the operation again with a data size that will fit into the " "indicated size for the field type."
<del>SPA_HBORON3CORRUPT</del>	3-Error	Corrupt configuration unsupported [chars] [node]encountered	The OC3/STM1 RP driver running configuration is corrupted.	asr900-tdm-combo	<del>SPA_HBORON3CORRUPT</del>
<del>SPA_HBORON3CREATE_FAIL</del>	3-Error	Failed to create [chars] : slot/bay:[dec]/[dec]	The channelized SPA controller descriptor block creation failed. Check the amount of available system memory.	asr900-tdm-combo	LOG_SIDSHTTECH_ACTION
<del>SPA_HBORON3DCC_FAILURE</del>	3-Error	Failed to retrieve DCC info for [dec]/[dec]/[dec]	\n The DCC info could not be retrieved	asr900-tdm-combo	<del>SPA_HBORON3CORRUPT</del>
<del>SPA_HBORON3ERROR</del>	3-Error	Failed to create for [chars] : slot/bay:[dec]/[dec]	The 1Z 8S SPA/IM controller encountered an error.	asr900-tdm-combo	"Check the memory available in system and " LOG_SIDSHTTECH_ACTION
<del>SPA_HBORON3FATAL_ERROR</del>	3-Error	Fatal error for [chars] : slot/bay:[dec]/[dec]	The channelized SPA controller encountered a fatal error.	asr900-tdm-combo	LOG_SIDSHTTECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPA_HL</del> BCRON3ERR_ERROR	3-Error	Error in handling FRR: [chars] [chars] [hec] [hec]	Error in FRR processing.	asr900-tdm-combo	"This is a internal software error. If this error happened while " "configuring FRR try reconfiguring the interface. If the error " "persists or occurred during normal operation decode the traceback " "and " LOG_STD_ACTION
<del>SPA_HL</del> BCRON3NIFC_FAILED	3-Error	Channel provisioning failed for [chars]	Channel could not be provisioned on SPA for this interface interface corresoponding to that channel has been moved to down state. If this interface was provisoned using the user interface then it may not appear in the interface list.	asr900-tdm-combo	<del>SPA_HL</del> BCRON3ASVRBCADN
<del>SPA_HL</del> BCRON3NADM_MAXVC	3-Error	for[chars]	invalid max vc for IM	asr900-tdm-combo	LOG_STD_ACTION
<del>SPA_HL</del> BCRON3NADSPA_TYPE	3-Error	Invalid SPA type : slot/bay:[dec]/[dec] spa_type=[dec].	The channelized SPA type cannot be recognized by the version of Cisco IOS software currently running on the system.	asr900-tdm-combo	"Upgrade your system to a version of Cisco IOS software that supports " "this SPA type."
SPA_HLBCRON3NULL	3-Error	[chars]	The NULL pointer was detected when getting the data structure.	asr900-tdm-combo	<del>SPA_HL</del> BCRON3ASVRBCADN
<del>SPA_HL</del> BCRON3NULL_CDB	3-Error	payload CDB is NULL for [dec]/[dec]/[dec]	The payload cdb for the port is Null.	asr900-tdm-combo	<del>SPA_HL</del> BCRON3ASVRBCADN
<del>SPA_HL</del> BCRON3NULL_ETH_BLOCK	3-Error	Ethernet subblock is null for [dec]/[dec]	The ethernet subblock is NULL	asr900-tdm-combo	<del>SPA_HL</del> BCRON3ASVRBCADN

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPAHBRON</del> NULLSANCE	3-Error	Null [chars] instance for slot/bay/port[dec]/[dec]/[dec]	The instance pointer is NULL when getting data structure.	asr900-tdm-combo	<del>SPAHBRON</del> ASVBRACON
<del>SPAHBRON</del> NULLPLSCDB	3-Error	Optic CDB is NULL for [dec]/[dec]/[dec]	The optics cdb for the port is Null.	asr900-tdm-combo	<del>SPAHBRON</del> ASVBRACON
<del>SPAHBRON</del> NULLPLSHWDB	3-Error	Optic HWIDB is NULL for [dec]/[dec]/[dec]	The optics hwidb for the port is Null.	asr900-tdm-combo	<del>SPAHBRON</del> ASVBRACON
<del>SPAHBRON</del> NULLSPAIR	3-Error	-	Pointer to a SPA object is NULL.	asr900-tdm-combo	LOGSIDSHTTECHACION
<del>SPAHBRON</del> NULLSUBCK	3-Error	Null ssb for [chars]	The hwidb subblock is NULL.	asr900-tdm-combo	<del>SPAHBRON</del> ASVBRACON
<del>SPAHBRON</del> NULLVCNST	3-Error	for[chars]	Pointer to VC INST is NULL.	asr900-tdm-combo	LOGSIDSHTTECHACION
<del>SPAHBRON</del> RETURNERR	3-Error	Return error for [chars]: return_value=[dec]	Return error code received.	asr900-tdm-combo	<del>SPAHBRON</del> ASVBRACON
<del>SPAHBRON</del> UNKNOWNOPIDN	3-Error	Received unknown [chars]: option=[dec]	Unknown option received.	asr900-tdm-combo	<del>SPAHBRON</del> ASVBRACON
<del>SPAHBRON</del> DEFSUBRAIE	5-Notice	[chars] [chars]	Remote subrate configuration changed.	asr900-tdm-combo	"Inform the network operator that subrate configuration was changed " "by remote end."
<del>SPAHBRON</del> SPAMDES	5-Notice	spa_mode of [dec]/[dec] is [chars]	\n spa_mode is	asr900-tdm-combo	<del>SPAHBRON</del> ASVBRACON
SPA_ELBRON6XFP_OK	6-Information	[dec]/[dec]/[dec]: [chars] detected/inserted	XFP has been detected or inserted in a port in Channelized SPA.	asr900-tdm-combo	"This is a information message no action required"
SPA_EOMER3CORRUPT	3-Error	Corrupt configuration unsupported [chars] [node]encountered	The OC3/STM1 RP driver running configuration is corrupted.	asr900-tdm-combo	<del>SPAHBRON</del> ASVBRACON

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_EOMER3CREATE_FAIL	3-Error	Failed to create [chars] : slot/bay:[dec]/[dec]	The channelized SPA controller descriptor block creation failed. Check the amount of available system memory.	asr900-tdm-combo	LOG_STD_ACTION
SPA_EOMER3DCC_FAILURE	3-Error	Failed to retrieve DCC info for [dec]/[dec]/[dec]	\n The DCC info could not be retrieved	asr900-tdm-combo	<del>SPA_EOMER3ASVRACDN</del>
SPA_EOMER3-ERROR	3-Error	Failed to create for [chars] : slot/bay:[dec]/[dec]	The SPA/IM controller encountered an error.	asr900-tdm-combo	"Check the memory available in system and " LOG_STD_ACTION
SPA_EOMER3FATAL_ERROR	3-Error	Fatal error for [chars] : slot/bay:[dec]/[dec]	The channelized SPA controller encountered a fatal error.	asr900-tdm-combo	LOG_STD_ACTION
SPA_EOMER3FRR_ERROR	3-Error	Error in handling FRR: [chars] [chars] [hec] [hec]	Error in FRR processing.	asr900-tdm-combo	"This is an internal software error. If this error happened while " "configuring FRR try reconfiguring the interface. If the error " "persists or occurred during normal operation decode the traceback " "and " LOG_STD_ACTION
SPA_EOMER3NIC_FAILED	3-Error	Channel provisioning failed for [chars]	Channel could not be provisioned on SPA for this interface interface corresponding to that channel has been moved to down state. If this interface was provisioned using the user interface then it may not appear in the interface list.	asr900-tdm-combo	<del>SPA_EOMER3ASVRACDN</del>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPA_EOMER3</del> INVALID_MAX_VC	3-Error	for[chars]	invalid max vc for IM	asr900-tdm-combo	LOG_SIDSH_TECH_ACTION
<del>SPA_EOMER3</del> INVALID_SPA_TYPE	3-Error	Invalid SPA type : slot/bay:[dec]/[dec] spa_type=[dec].	The channelized SPA type cannot be recognized by the version of Cisco IOS software currently running on the system.	asr900-tdm-combo	"Upgrade your system to a version of Cisco IOS software that supports " "this SPA type."
SPA_EOMER3-NULL	3-Error	[chars]	The NULL pointer was detected when getting the data structure.	asr900-tdm-combo	<del>SPA_EOMER3</del> DEBUG_ACTION
<del>SPA_EOMER3</del> NULL_CDB	3-Error	payload CDB is NULL for [dec]/[dec]/[dec]	The payload cdb for the port is Null.	asr900-tdm-combo	<del>SPA_EOMER3</del> ASUB_BLOCK_ACTION
<del>SPA_EOMER3</del> NULL_ASRCUE	3-Error	[chars]	A software error occured and SPA driver is not able to retrieve the data structure mentioned in the message.	asr900-lotr-im	LOG_STD_ACTION
<del>SPA_EOMER3</del> NULL_ETH_BLOCK	3-Error	Ethernet subblock is null for [dec]/[dec]	The ethernet subblock is NULL	asr900-tdm-combo	<del>SPA_EOMER3</del> ASUB_BLOCK_ACTION
<del>SPA_EOMER3</del> NULL_INSTANCE	3-Error	Null [chars] instance for slot/bay/port[dec]/[dec]/[dec]	The instance pointer is NULL when getting data structure.	asr900-tdm-combo	<del>SPA_EOMER3</del> ASUB_BLOCK_ACTION
<del>SPA_EOMER3</del> NULL_OPTICS_CDB	3-Error	Optic CDB is NULL for [dec]/[dec]/[dec]	The optics cdb for the port is Null.	asr900-tdm-combo	<del>SPA_EOMER3</del> ASUB_BLOCK_ACTION
<del>SPA_EOMER3</del> NULL_OPTICS_HWIDB	3-Error	Optic HWIDB is NULL for [dec]/[dec]/[dec]	The optics hwidb for the port is Null.	asr900-tdm-combo	<del>SPA_EOMER3</del> ASUB_BLOCK_ACTION
<del>SPA_EOMER3</del> NULL_SPA_PIR	3-Error	-	Pointer to a SPA object is NULL.	asr900-tdm-combo	LOG_SIDSH_TECH_ACTION
<del>SPA_EOMER3</del> NULL_SSB_BLOCK	3-Error	Null ssb for [chars]	The hwidb subblock is NULL.	asr900-tdm-combo	<del>SPA_EOMER3</del> ASUB_BLOCK_ACTION
<del>SPA_EOMER3</del> NULL_VC_INST	3-Error	for[chars]	Pointer to VC INST is NULL.	asr900-tdm-combo	LOG_SIDSH_TECH_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_OMB3RETURN_ERROR	3-Error	Return error for [chars]: return_value=[dec]	Return error code received.	asr900-tdm-combo	SPA_OMB3RETURN_ERROR
SPA_OMB3UNKNOWN_OPTION	3-Error	Received unknown [chars]: option=[dec]	Unknown option received.	asr900-tdm-combo	SPA_OMB3RETURN_ERROR
SPA_OMB3DEF_SUBRAIE	5-Notice	[chars] [chars]	Remote subrate configuration changed.	asr900-tdm-combo	"Inform the network operator that subrate configuration was changed " "by remote end."
SPA_EOWYN3CORRUPT	3-Error	Corrupt configuration unsupported [chars] [node]encountered	The OC3/STM1 RP driver running configuration is corrupted.	asr900-tdm-combo	SPA_EOWYN3CORRUPT
SPA_EOWYN3CREATE_FAIL	3-Error	Failed to create [chars] : slot/bay:[dec]/[dec]	The channelized SPA controller descriptor block creation failed. Check the amount of available system memory.	asr900-tdm-combo	LOGS_IDSHTTECH_ACTION
SPA_EOWYN3DCC_FAILURE	3-Error	Failed to retrieve DCC info for [dec]/[dec]/[dec]	\n The DCC info could not be retrieved	asr900-tdm-combo	SPA_EOWYN3RETURN_ERROR
SPA_EOWYN3ERROR	3-Error	Failed to create for [chars] : slot/bay:[dec]/[dec]	The 1Z 8S SPA/IM controller encountered an error.	asr900-tdm-combo	"Check the memory available in system and " LOGS_IDSHTTECH_ACTION
SPA_EOWYN3FATAL_ERROR	3-Error	Fatal error for [chars] : slot/bay:[dec]/[dec]	The channelized SPA controller encountered a fatal error.	asr900-tdm-combo	LOGS_IDSHTTECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_EOWYN3FRR_ERRCR	3-Error	Error in handling FRR: [chars] [chars] [hec] [hec]	Error in FRR processing.	asr900-tdm-combo	"This is a internal software error. If this error happened while " "configuring FRR try reconfiguring the interface. If the error " "persists or occurred during normal operation decode the traceback " "and " LOG_STD_ACTION
SPA_EOWYN3NIC_FAILED	3-Error	Channel provisioning failed for [chars]	Channel could not be provisioned on SPA for this interface interface corresponding to that channel has been moved to down state. If this interface was provisioned using the user interface then it may not appear in the interface list.	asr900-tdm-combo	<del>SPA_EOWYN3NIC_FAILED</del>
SPA_EOWYN3VADM_MAXVC	3-Error	for[chars]	invalid max vc for IM	asr900-tdm-combo	LOG_STD_ACTION
SPA_EOWYN3VADM_SPA_TYPE	3-Error	Invalid SPA type : slot/bay:[dec]/[dec] spa_type=[dec].	The channelized SPA type cannot be recognized by the version of Cisco IOS software currently running on the system.	asr900-tdm-combo	"Upgrade your system to a version of Cisco IOS software that supports " "this SPA type."
SPA_EOWYN3-NULL	3-Error	[chars]	The NULL pointer was detected when getting the data structure.	asr900-tdm-combo	<del>SPA_EOWYN3-NULL</del>
SPA_EOWYN3NULL_CDB	3-Error	payload CDB is NULL for [dec]/[dec]/[dec]	The payload cdb for the port is Null.	asr900-tdm-combo	<del>SPA_EOWYN3NULL_CDB</del>
SPA_EOWYN3NULL_ETH_BLOCK	3-Error	Ethernet subblock is null for [dec]/[dec]	The ethernet subblock is NULL	asr900-tdm-combo	<del>SPA_EOWYN3NULL_ETH_BLOCK</del>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPA_FOWYN6</del> NULL_INSTANCE	3-Error	Null [chars] instance for slot/bay/port[dec]/[dec]/[dec]	The instance pointer is NULL when getting data structure.	asr900-tdm-combo	<del>SPA_FOWYN6</del> ASVBRACD
<del>SPA_FOWYN6</del> NULL_OPT_CDB	3-Error	Optic CDB is NULL for [dec]/[dec]/[dec]	The optics cdb for the port is Null.	asr900-tdm-combo	<del>SPA_FOWYN6</del> ASVBRACD
<del>SPA_FOWYN6</del> NULL_OPT_HWIDB	3-Error	Optic HWIDB is NULL for [dec]/[dec]/[dec]	The optics hwidb for the port is Null.	asr900-tdm-combo	<del>SPA_FOWYN6</del> ASVBRACD
<del>SPA_FOWYN6</del> NULL_SPA_PIR	3-Error	-	Pointer to a SPA object is NULL.	asr900-tdm-combo	LOGSIDSHTTECHACI0N
<del>SPA_FOWYN6</del> NULL_SSBLOCK	3-Error	Null ssb for [chars]	The hwidb subblock is NULL.	asr900-tdm-combo	<del>SPA_FOWYN6</del> ASVBRACD
<del>SPA_FOWYN6</del> NULL_VCINST	3-Error	for[chars]	Pointer to VC INST is NULL.	asr900-tdm-combo	LOGSIDSHTTECHACI0N
<del>SPA_FOWYN6</del> RETURN_ERROR	3-Error	Return error for [chars]: return_value=[dec]	Return error code received.	asr900-tdm-combo	<del>SPA_FOWYN6</del> ASVBRACD
<del>SPA_FOWYN6</del> UNKNOWN_OPTION	3-Error	Received unknown [chars]: option=[dec]	Unknown option received.	asr900-tdm-combo	<del>SPA_FOWYN6</del> ASVBRACD
<del>SPA_FOWYN6</del> DEF_SUBRAIE	5-Notice	[chars] [chars]	Remote subrate configuration changed.	asr900-tdm-combo	"Inform the network operator that subrate configuration was changed " "by remote end."
<del>SPA_FOWYN6</del> SPA_MODE_IS	5-Notice	spa_mode of [dec]/[dec] is [chars]	\n spa_mode is	asr900-tdm-combo	<del>SPA_FOWYN6</del> ASVBRACD
SPA_FOWYN6_XFP_OK	6-Information	[dec]/[dec]/[dec]: [chars] detected/inserted	XFP has been detected or inserted in a port in Channelized SPA.	asr900-tdm-combo	"This is a information message no action required"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPCERRM01ERRM01ERR</del>	3-Error	NULL	The module driver detected a software error condition on the module card. This might result in improper operation.	lebowski-o2	<p>"The module driver has encountered a software error. Power down and " "reset the indicated module card. If the problem persists copy the " "error message exactly as it appears in the console and open a case " "with the Technical Assistance Center via the Internet at " TAC_CASE_OPEN " or contact your " "Cisco technical support representative and provide the representative " "with the information you have gathered. Be sure to attach to your case " "the output of the</p> <pre> &lt;CmdBold&gt;show logging&lt;/NoCmdBold&gt; " "&lt;CmdBold&gt;show monitor event-trace spa all&lt;/NoCmdBold&gt; and " "&lt;CmdBold&gt;show tech-support&lt;/NoCmdBold&gt; commands your troubleshooting " "logs and the specific error message." </pre>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_ETHER-1-ALLOCFAIL	1-Alert	Subslot [dec]/[dec] [chars] allocation failure [chars]	The router has failed to allocate sufficient memory for a software module\n\n on the Ethernet SPA located in the specified subslot. The error message\n\n indicates the modular services card slot the SPA subslot the SPA type and\n\n the name of the software module.	spa-eth-fe	"Perform OIR of the SPA located in the specified subslot. Before removing\n\n the SPA enter the <CmdBold>hw-module subslot stop<NoCmdBold> command.\n\n Remove the SPA wait 5 seconds and reinsert the SPA into the MSC. Enter\n\n the <CmdBold>show memory summary<NoCmdBold> command to attempt to\n\n determine the cause of the error. Reduce system activity to reduce memory\n\n demands. If conditions warrant upgrade to a larger memory configuration.\n\n If you require further assistance " LOG_SID_REDUCE_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_ETHER-3-HW_ERROR	3-Error	Subslot [dec]/[dec] [chars] Hardware device error [chars] detected reactivating	An internal hardware device error has occurred on the Ethernet SPA. The error message indicates the modular services card slot the SPA subslot the SPA type and the name of the hardware device. The SPA has been deactivated and reactivated to resolve the problem. If the error occurs more than five times within an hour no further attempts to reactivate the SPA will be made. This message is likely due to an unrecoverable hardware failure	spa-eth-fe	"Perform OIR of the SPA located in the specified subslot. Before removing the SPA enter the <CmdBold>hw-module subslot stop<NoCmdBold> command. Remove the SPA wait 5 seconds and reinsert the SPA into the MSC. If the problem persists copy the error message text exactly as it appears on the console or in the system log enter the <CmdBold>show diag<NoCmdBold> command contact your Cisco technical support representative and provide the representative with the gathered information."
SPA_ETHER-3-INITFAIL	3-Error	Subslot [dec]/[dec] [chars] initialization failure [chars]	The initialization of an internal device on the Ethernet SPA in the specified subslot has failed. The error message indicates the modular services card slot the SPA subslot the SPA type and the name of the device that failed to initialize. The message also provides the interface name and other details about the error.	spa-eth-fe	"Copy the error message text exactly as it appears on the console or in the system log enter the <CmdBold>show techsupport<NoCmdBold> command contact your Cisco technical support representative and provide the representative with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_EIHER3INVALID_PORT	3-Error	Subslot [dec]/[dec] [chars] Incorrect port number [dec] specified for SPA	An internal error has been encountered by the Ethernet software driver for\n\ the SPA. The error message indicates the modular services card slot the\n\ SPA subslot the SPA type and the invalid interface port number. This\n\ problem is caused by a software caveat.	spa-eth-fe	"Copy the error message text exactly as it appears on the console or in the\n\ system log enter the <CmdBold>show tech-support<NoCmdBold> command\n\ contact your Cisco technical support representative and provide the\n\ representative with the gathered information."
SPA_EIHER3SEND_MSG	3-Error	Subslot [dec]/[dec] [chars] Failed to notify driver process about a line state change in one of the SPA interfaces	A line state change has occurred on one of the interface ports on the\n\ Ethernet SPA. The error message indicates the modular services card slot\n\ the SPA subslot and the SPA type. Information to identify which interface\n\ port is affected on the SPA is not available. The affected interface might\n\ not function properly.	spa-eth-fe	"Perform OIR of the SPA located in the specified subslot. Before removing\n\ the SPA enter the <CmdBold>hw-module subslot stop<NoCmdBold> command.\n\ Remove the SPA wait 5 seconds and reinsert the SPA into the MSC. Enter\n\ the <CmdBold>show memory summary<NoCmdBold> command to attempt to\n\ determine the cause of the error. Reduce system activity to reduce memory\n\ demands. If conditions warrant upgrade to a larger memory configuration.\n\ If you require further assistance " LOGS_IDREDUCE_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_ETH3SFP_LOAD	3-Error	[chars] [chars] initialization failure [chars]	The pluggable transceiver module SFP on the Ethernet SPA could not be	spa-eth-ge-2	"Try re-inserting the pluggable transceiver module SFP again into the "
SPA_ETH3SFP_SEC_FAIL	3-Error	[chars] [chars] initialization failure [chars]	The pluggable transceiver module SFP on the Ethernet SPA could not	spa-eth-ge-2	"Try replacing the pluggable transceiver module SFP with a Cisco "
SPA_ETH3SFP_NOTNSYNC	3-Error	Subslot [dec]/[dec] [chars] SPI4 internal interface is not synchronized with the\n\n modular services card for the SPA located in the specified subslot.	The SPI4 internal path between the modular services card and the SPA is\n\n not synchronized. The error message indicates the modular services card\n\n slot the SPA subslot and the SPA type. This error indicates that either\n\n the SPA is not properly inserted into the MSC or a hardware failure has\n\n occurred on the SPA.	spa-eth-fe	"Perform OIR of the SPA located in the specified subslot. Before removing\n\n the SPA enter the <CmdBold>hw-module subslot stop<NoCmdBold> command.\n\n Remove the SPA wait 5 seconds and reinsert the SPA into the MSC. If the\n\n problem persists copy the error message text exactly as it appears on the\n\n console or in the system log enter the <CmdBold>show\n\n tech-support<NoCmdBold> command contact your Cisco technical support\n\n representative and provide the representative with the gathered\n\n information."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPAETHTCAMACCESSFAILURE	3-Error	Subslot [dec]/[dec] [chars] Failure in accessing the TCAM device [chars] status = 0x[hec]	Access to the TCAM device on the SPA has failed. The error message\n\n indicates the modular services card slot the SPA subslot and the SPA type.\n\n This error indicates a hardware failure.	spa-eth-fe	"Perform OIR of the SPA located in the specified subslot. Before removing\n\n the SPA enter the <CmdBold>hw-module subslot stop<NoCmdBold> command.\n\n Remove the SPA wait 5 seconds and reinsert the SPA into the MSC. If the\n\n problem persists copy the error message text exactly as it appears on the\n\n console or in the system log enter the <CmdBold>show\n\n tech-support<NoCmdBold> command contact your Cisco technical support\n\n representative and provide the representative with the gathered\n\n information."
SPAETHTCAMSTRUCTUREFAILURE	3-Error	Subslot [dec]/[dec] [chars] Failed to create the TCAM management instance status = 0x[hec]	The SPA failed to create the internal data structure needed to manage TCAM\n\n entries. The error message indicates the modular services card slot the\n\n SPA subslot and the SPA type. This error indicates a software caveat.	spa-eth-fe	"Copy the error message text exactly as it appears on the console or in the\n\n system log enter the <CmdBold>show tech-support<NoCmdBold> command\n\n contact your Cisco technical support representative and provide the\n\n representative with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPHBMCDRECSLE</del>	3-Error	Subslot [dec]/[dec] [chars] Failure in accessing the TCAM destination MAC address table [chars]	Access to the TCAM destination MAC address table for the SPA interface\n\ failed. The error message indicates the modular services card slot the\n\ SPA subslot the SPA type and the affected interface number. This error\n\ indicates either a software caveat or a hardware failure.	spa-eth-fe	"Perform OIR of the SPA located in the specified subslot. Before removing\n\ the SPA enter the <CmdBold>hw-module subslot stop<NoCmdBold> command.\n\ Remove the SPA wait 5 seconds and reinsert the SPA into the MSC. If the\n\ problem persists copy the error message text exactly as it appears on the\n\ console or in the system log enter the <CmdBold>show\n\ <del>tech-support</del> <NoCmdBold> command contact your Cisco technical support\n\ representative and provide the representative with the gathered\n\ information."
<del>SPHBMCDRECSLE</del>	3-Error	Subslot [dec]/[dec] [chars] Destination MAC address filter table is invalid for interface [dec]	The internal data structure used by the SPA for managing the destination\n\ MAC address filtering for an interface port is invalid. This error message\n\ indicates the modular services card slot the SPA subslot the SPA type and\n\ the interface port. This error indicates a software caveat.	spa-eth-fe	"Copy the error message text exactly as it appears on the console or in the\n\ system log enter the <CmdBold>show <del>tech-support</del> <NoCmdBold> command\n\ contact your Cisco technical support representative and provide the\n\ representative with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPETHCAMNFECSHUE</del>	3-Error	Subslot [dec]/[dec] [chars] Failure in accessing the TCAM VLAN address table [chars]	Access to the TCAM VLAN table for the SPA failed. The error message\n\ indicates the modular services card slot the SPA subslot the SPA type and\n\ the affected interface. This error indicates either a software caveat or a\n\ hardware failure.	spa-eth-fe	"Perform OIR of the SPA located in the specified subslot. Before removing\n\ the SPA enter the <CmdBold>hw-module subslot stop<NoCmdBold> command.\n\ Remove the SPA wait 5 seconds and reinsert the SPA into the MSC. If the\n\ problem persists copy the error message text exactly as it appears on the\n\ console or in the system log enter the <CmdBold>show\n\ <del>tech-support</del> <NoCmdBold> command contact your Cisco technical support\n\ representative and provide the representative with the gathered\n\ information."
<del>SPETHCAMNFEHND</del>	3-Error	Subslot [dec]/[dec] [chars] VLAN filter table is invalid for interface [dec]	The internal data structure used by the SPA to manage the VLAN filtering\n\ is invalid. The SPA supports a separate VLAN table per interface. The\n\ error message indicates the modular services card slot the SPA subslot\n\ the SPA type and the affected interface. This error indicates a software\n\ caveat.	spa-eth-fe	"Copy the error message text exactly as it appears on the console or in the\n\ system log enter the <CmdBold>show <del>tech-support</del> <NoCmdBold> command\n\ contact your Cisco technical support representative and provide the\n\ representative with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_ETH_BAY_NOTIFICATION	4-Warning	Subslot [dec]/[dec] [chars] Failed to get the bay information	Unable to retrieve a software data structure for the subslot. The error\n\n message indicates the modular services card slot the affected subslot and\n\n the SPA type. This error indicates a software caveat.	spa-eth-fe	"Copy the error message text exactly as it appears on the console or in the\n\n system log enter the <CmdBold>show tech-support</NoCmdBold> command\n\n contact your Cisco technical support representative and provide the\n\n representative with the gathered information."
SPA_ETH_IOS_PROCESS	4-Warning	Subslot [dec]/[dec] [chars] creation of [chars] process failed	The creation of an IOS process to manage the SPA failed. The error message\n\n indicates the modular services card slot the SPA subslot the SPA type and\n\n the name of the process. This error message will be accompanied by an IOS\n\n error message that will give more information about the cause for this\n\n failure.	spa-eth-fe	"Enter the <CmdBold>show memory summary</NoCmdBold> command to attempt to\n\n determine the cause of the error. Reduce system activity to reduce memory\n\n demands. If conditions warrant upgrade to a larger memory configuration.\n\n If you require further assistance " LOGS_ID_REDUCE_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<u>SP</u> <u>ETHCAM</u> <u>MDA</u> <u>FE</u> <u>UL</u>	4-Warning	Subslot [dec]/[dec] [chars] Destination MAC address filter table is full for interface [dec] MAC address = [enet] mask = [enet]	The TCAM destination MAC address table for an interface on the SPA is full. The SPA supports a separate MAC table per interface. The error message indicates the modular services card slot the SPA subslot the SPA type the affected interface and the MAC address. The specified MAC address will not be added to the TCAM table.	spa-eth-fe	"Try to remove some of the registered MAC addresses for the interface by changing the interface configuration. To verify the MAC addresses currently in use by an interface enter the <CmdBold>show controllers<NoCmdBold> command."
<u>SP</u> <u>ETHCAM</u> <u>N</u> <u>A</u> <u>FE</u> <u>UL</u>	4-Warning	Subslot [dec]/[dec] [chars] VLAN filter table is full for interface [dec] VLAN identifier = [dec]	The TCAM VLAN filter table for an interface on the SPA is full. The SPA supports a separate VLAN table per interface. The error message indicates the modular services card slot the SPA subslot the SPA type the affected interface and the VLAN entry that failed. The specified VLAN identifier will not be added to the TCAM table.	-	"Try to remove some of the registered VLANs for the interface by changing the interface configuration. To verify the VLAN IDs currently in use by an interface enter the <CmdBold>show controllers<NoCmdBold> command."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPAFRM</del> SPAFRM	4-Warning	Subslot [dec]/[dec] [chars] Failed to read current temperature from sensor [dec] status = 0x[hec]	The current temperature reading on the SPA cannot be determined. The error message indicates the modular services card slot the SPA subslot and the SPA type. This error indicates a hardware failure.	spa-eth-fe	"Perform OIR of the SPA located in the specified subslot. Before removing the SPA enter the <CmdBold>hw-module subslot stop<NoCmdBold> command. Remove the SPA wait 5 seconds and reinsert the SPA into the MSC. If the problem persists copy the error message text exactly as it appears on the console or in the system log enter the <CmdBold>show tech-support<NoCmdBold> command contact your Cisco technical support representative and provide the representative with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPAEETHFEADIAL	4-Warning	Subslot [dec]/[dec] [chars] Failed to read the current voltage for [chars] supply	The current voltage reading for the SPA voltage supply cannot be\n\ndetermined. The error message indicates the modular services card slot\n\ the SPA subslot the SPA type and the identification of the voltage supply.\n\ This error indicates a hardware failure.	spa-eth-fe	"Perform OIR of the SPA located in the specified subslot. Before removing\n\ the SPA enter the <CmdBold>hw-module subslot stop<NoCmdBold> command.\n\ Remove the SPA wait 5 seconds and reinsert the SPA into the MSC. If the\n\ problem persists copy the error message text exactly as it appears on the\n\ console or in the system log enter the <CmdBold>show\n\ tech-support<NoCmdBold> command contact your Cisco technical support\n\ representative and provide the representative with the gathered\n\ information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPFICAMNAHRC3ED</del>	6-Information	Subslot [dec]/[dec] [chars] TCAM VLAN filter table is full disabling VLAN filtering for interface [dec]	VLAN filtering for the specified interface has been disabled because the VLAN table is full. This means that the SPA will transmit frames destined for any VLAN ID to the route processor. The SPA supports a separate VLAN table per interface. The error message indicates the modular services card slot the SPA subslot the SPA type and the affected interface.	spa-eth-fe	"To verify the VLAN IDs that are currently in use by an interface enter " "the <CmdBold>show controllers<NoCmdBold> command. You can remove " "some of the existing VLANs from the interface configuration to " "reactivate VLAN filtering on the indicated interface."
<del>SPFICAMNAHRC3ED</del>	6-Information	Subslot [dec]/[dec] [chars] Enabling VLAN filtering for interface [dec]	VLAN filtering for the specified interface is enabled. The SPA supports a separate VLAN table per interface. The error message indicates the modular services card slot the SPA subslot the SPA type and the affected interface.	spa-eth-fe	"VLAN filtering has been reactivated and the VLAN table is no longer " "full. This means that the SPA will transmit frames to the route " "processor only for those VLAN IDs configured on the specified interface." "To verify the VLAN IDs that are currently in use by an interface " "enter the <CmdBold>show controllers<NoCmdBold> command."
<del>SPFICAMNAHRC3ED</del>	2-Critical	SPA : [chars] at bay [dec] is not supported with fan [chars]	-	-	-



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_FPD2PWR_NO_OK	2-Critical	SPA POWER OK signal is not asserted for [chars] in [chars] for FPD upgrade.	The check for SPA POWER OK signal assertion failed. This might indicate a HW problem with the SPA.	spa-infra-fpd	"Contact your Cisco technical support " "representative to have the SPA replaced."
SPA_FPD2PWR_NO_OK	2-Critical	SPA POWER OK signal is not asserted for [chars] in [chars] for FPD upgrade.	The check for SPA POWER OK signal assertion failed. This might indicate a HW problem with the SPA.	spa-infra-fpd	"Contact your Cisco technical support " "representative to have the SPA replaced."
<del>SPA_ADM106X_EEPROM_READ_ERR</del>	3-Error	[chars]: Failed to read the content of ADM106x [chars] EEPROM section - [chars]	The read operation to ADM106x is performed through C2W serial interface from SPA carrier card the indicated failure might be caused by busy C2W serial interface.	spa-infra-fpd	"Retry the same operation again later. If the " "problem persists remove the configuration of the SPA before trying " "again the operation."
<del>SPA_ADM106X_EEPROM_READ_ERR</del>	3-Error	[chars]: Failed to read the content of ADM106x [chars] EEPROM section - [chars]	The read operation to ADM106x is performed through C2W serial interface from SPA carrier card the indicated failure might be caused by busy C2W serial interface.	spa-infra-fpd	"Retry the same operation again later. If the " "problem persists remove the configuration of the SPA before trying " "again the operation."
<del>SPA_ADM106X_EEPROM_WRITE_ERR</del>	3-Error	[chars]: Verification of write operation failed in ADM106x [chars] EEPROM section for address 0x[hec] - read value '0x[hec]' expected value '0x[hec]'.	The verification of the write operation has found a mismatch on the EEPROM data. The problem might be an indication of aging effect on the device that cannot longer hold written data.	spa-infra-fpd	"Retry the upgrade operation again later. If the " "problem persists replace the SPA."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPAADM06EPRMVFERR</del>	3-Error	[chars]: Verification of write operation failed in ADM106x [chars] EEPROM section for address 0x[hec] - read value '0x[hec]' expected value '0x[hec]'.	The verification of the write operation has found a mismatch on the EEPROM data. The problem might be an indication of aging effect on the device that cannot longer hold written data.	spa-infra-fpd	"Retry the upgrade operation again later. If the " "problem persists replace the SPA."
<del>SPAADM06EPRMVFERR</del>	3-Error	[chars]: Failed to write new configuration into ADM106x [chars] EEPROM section - [chars]	The write operation to ADM106x is performed through C2W serial interface from SPA carrier card the indicated failure might be caused by busy C2W serial interface.	spa-infra-fpd	"Retry the upgrade operation again later. If the " "problem persists remove the configuration of the SPA before trying " "again the upgrade operation."
<del>SPAADM06EPRMVFERR</del>	3-Error	[chars]: Failed to write new configuration into ADM106x [chars] EEPROM section - [chars]	The write operation to ADM106x is performed through C2W serial interface from SPA carrier card the indicated failure might be caused by busy C2W serial interface.	spa-infra-fpd	"Retry the upgrade operation again later. If the " "problem persists remove the configuration of the SPA before trying " "again the upgrade operation."
<del>SPAADM06EPRMVFERR</del>	3-Error	[chars]: Failed to read version info from ADM106x device - [chars]	The read operation to ADM106x is performed through C2W serial interface from SPA carrier card the indicated failure might be caused by busy C2W serial interface.	spa-infra-fpd	"Try to reload the SPA with <CmdBold>hw-module subslot<NoCmdBold> " <CmdBold>#<NoCmdBold> <CmdBold>#<NoCmdBold> command " "to correct the failure. If problem persists move the SPA to another " "bay of the carrier card."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_ADM106_READ_ERROR	3-Error	[chars]: Failed to read version info from ADM106x device - [chars]	The read operation to ADM106x is performed through C2W serial interface from SPA carrier card the indicated failure might be caused by busy C2W serial interface.	spa-infra-fpd	"Try to reload the SPA with <CmdBold>hw-module subslot<NoCmdBold> " "<CmdBold>#1#<NoCmdAg <CmdBold>#<NoCmdBd command " "to correct the failure. If problem persists move the SPA to another " "bay of the carrier card."
SPA_FPD3GEIMR_FAILED	3-Error	[chars]: Failed to get FPD version for \[chars]\ ID=[dec]: [chars].	Failed to get FPD version due to either IPC problem or operation error. The card will be disabled.	spa-infra-fpd	"Check SPA seating and SPA status. " "Ensure compatibility among FPD IOS and possible SPA " "firmware by comparing output of command " "<CmdBold>show hw-module subslot fpd<NoCmdBold> with IOS " "Release Notes. Obtain IOS version by command " "<CmdBold>show version<NoCmdBold>."
SPA_FPD3GEIMR_FAILED	3-Error	[chars]: Failed to get FPD version for \[chars]\ ID=[dec]: [chars].	Failed to get FPD version due to either IPC problem or operation error. The card will be disabled.	spa-infra-fpd	"Check SPA seating and SPA status. " "Ensure compatibility among FPD IOS and possible SPA " "firmware by comparing output of command " "<CmdBold>show hw-module subslot fpd<NoCmdBold> with IOS " "Release Notes. Obtain IOS version by command " "<CmdBold>show version<NoCmdBold>."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_HD3EX_PARS_ERRCR	3-Error	NULL	-	spa-infra-fpd	LOG_STD_ACTION
SPA_HD3EX_PARS_ERRCR	3-Error	NULL	-	spa-infra-fpd	LOG_STD_ACTION
SPA_FPD-3JTAG_ERR	3-Error	[chars]: Failed to program a [chars] FPD image file. Error code 0x[node]x.	While attempting to program a SPA FPGA via JTAG bus an error occurs. It could be caused by an outdated carrier card FPGA or SPA connection. It may also flag an internal software error.	spa-infra-fpd	"Retry the upgrade after reseating SPA. " "Verify carrier card FPGA is current. Copy exact the error " "message and report to TAC."
SPA_FPD-3JTAG_ERR	3-Error	[chars]: Failed to program a [chars] FPD image file. Error code 0x[node]x.	While attempting to program a SPA FPGA via JTAG bus an error occurs. It could be caused by an outdated carrier card FPGA or SPA connection. It may also flag an internal software error.	spa-infra-fpd	"Retry the upgrade after reseating SPA. " "Verify carrier card FPGA is current. Copy exact the error " "message and report to TAC."
SPA_HD3PWR_CH_FAILED	3-Error	Failed to power-off [chars] in [chars] for FPD offline upgrade within [dec] seconds.	The power-off operation of the indicated SPA failed within the number of specified seconds. This might indicate that the time used to wait for SPA to power-off is not long enough which can happen if the SPA has a lot of interfaces configured.	spa-infra-fpd	"Retry the upgrade operation again later. If the " "problem persists remove the configuration of the SPA before trying " "again the upgrade operation."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_FPDPWR_OFF_FAILED	3-Error	Failed to power-off [chars] in [chars] for FPD offline upgrade within [dec] seconds.	The power-off operation of the indicated SPA failed within the number of specified seconds. This might indicate that the time used to wait for SPA to power-off is not long enough which can happen if the SPA has a lot of interfaces configured.	spa-infra-fpd	"Retry the upgrade operation again later. If the " "problem persists remove the configuration of the SPA before trying " "again the upgrade operation."
SPA_SMM65CONFWRITE_ERROR	3-Error	[chars]: Failed to write new configuration into SMM665 device.	The write operation to SMM665 is performed through C2W serial interface from SPA carrier card the indicated failure might be caused by busy C2W serial interface.	spa-infra-fpd	"Retry the upgrade operation again later. If the " "problem persists remove the configuration of the SPA before trying " "again the upgrade operation."
SPA_SMM65CONFWRITE_ERROR	3-Error	[chars]: Failed to write new configuration into SMM665 device.	The write operation to SMM665 is performed through C2W serial interface from SPA carrier card the indicated failure might be caused by busy C2W serial interface.	spa-infra-fpd	"Retry the upgrade operation again later. If the " "problem persists remove the configuration of the SPA before trying " "again the upgrade operation."
SPA_FPD3-SW_ERROR	3-Error	NULL	-	spa-infra-fpd	LOG_STD_ACTION
SPA_FPD3-SW_ERROR	3-Error	NULL	-	spa-infra-fpd	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_HDSURGRADE_FAILED	3-Error	[chars]: Failed to upgrade FPD [chars].	The FPD image upgrade operation failed. This error is specific to the SPA. The cause could be a wrong image file error in accessing fpga storage physical interrupt such as power failure or card removal. Depending on SPA type and error cause the card could be in an unusable status. Normally the system automatically reattempts the upgrade and shuts the card after repeated failures.	spa-infra-fpd	"Do not interrupt the system while an FPD " "upgrade is in progress. Obtain the matching FPD package. Refer " "to IOS Release Notes for more information on obtaining the correct " "FPD package for the SPA. Review the output of the RP FPD logs."
SPA_HDSURGRADE_FAILED	3-Error	[chars]: Failed to upgrade FPD [chars].	The FPD image upgrade operation failed. This error is specific to the SPA. The cause could be a wrong image file error in accessing fpga storage physical interrupt such as power failure or card removal. Depending on SPA type and error cause the card could be in an unusable status. Normally the system automatically reattempts the upgrade and shuts the card after repeated failures.	spa-infra-fpd	"Do not interrupt the system while an FPD " "upgrade is in progress. Obtain the matching FPD package. Refer " "to IOS Release Notes for more information on obtaining the correct " "FPD package for the SPA. Review the output of the RP FPD logs."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_FD_UPGRADE_ABORTED	4-Warning	[chars]: Upgrade aborted for \[chars]\ ID=[dec] - [chars]	The upgrade operation for the FPD image was aborted because the provided image cannot be used by the driver to perform the image programming operation.	spa-infra-fpd	"Make sure that the provide FPD image package for " "the FPD upgrade operation is a valid one for the Cisco IOS release in " "use. This can be verified with the <CmdBold>show upgrade fpd package " "default<NoCmdBold> command to display the required FPD image package " "version for the IOS image."
SPA_FD_UPGRADE_ABORTED	4-Warning	[chars]: Upgrade aborted for \[chars]\ ID=[dec] - [chars]	The upgrade operation for the FPD image was aborted because the provided image cannot be used by the driver to perform the image programming operation.	spa-infra-fpd	"Make sure that the provide FPD image package for " "the FPD upgrade operation is a valid one for the Cisco IOS release in " "use. This can be verified with the <CmdBold>show upgrade fpd package " "default<NoCmdBold> command to display the required FPD image package " "version for the IOS image."
SPA_FD_IMG_CORRUPTION	6-Information	[chars]: FPD image corruption detected for \[chars]\ ID=[dec] forcing upgrade	The software detected corruption on a FPD image and it is triggering the FPD automatic upgrade mechanism to correct the problem.	spa-infra-fpd	"No Action is required."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SPA_HDIMG_CORRUPTION	6-Information	[chars]: FPD image corruption detected for \[chars]\ ID=[dec] forcing upgrade	The software detected corruption on a FPD image and it is triggering the FPD automatic upgrade mechanism to correct the problem.	spa-infra-fpd	"No Action is required."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPACEDWDMERROR	3-Error	[chars]	SPA driver detected an error in the DWDM init routine	spa-eth-10ge	"The SPA driver has detected problem with DWDM init routine." "If the ports on the SPA are not operating as expected power down and" "reseat the indicated SPA card. " "If the error messages persists copy the error message exactly as " "it appears. Next research and attempt to resolve the issue using " "the SPA hardware troubleshooting documentation as well as the tools " "and utilities provided at " <a href="http://www.cisco.com/114000011">http://www.cisco.com/114000011</a> If you still " "require assistance open a case with the Technical Assistance Center " "via the Internet at " <a href="http://www.cisco.com/114000011">http://www.cisco.com/114000011</a> or contact " "your Cisco technical support representative. Be sure to provide the " "the information you have gathered and a 'show tech-support' to " "your support representative or attach it to your case in non-zipped " "plain text format .txt."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SPA</del> DWDM#A100CAED	3-Error	[chars]	The SPA driver detected a memory error on the SPA card	spa-eth-10ge	"Reload the card and if the problem " "persists call the TAC"
<del>SPA</del> DWDM#NULLSR0UE	3-Error	[chars] [dec] [dec]	The SPA driver detected NULL data during DWDM initialization	spa-eth-10ge	"Reload the SPA card and if the problem " "persists contact your technical support representative"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPCEDWDMPLNCTICKED	3-Error	[chars] not locked after \ [dec] retries [hex]	The SPA driver failed to initialize the PLL	spa-eth-10ge	<p>"The SPA driver has detected problem with DWDM init routine." "If the ports on the SPA are not operating as expected power down and" "reset the indicated SPA card. " "If the error messages persists copy the error message exactly as " "it appears. Next research and attempt to resolve the issue using " "the SPA hardware troubleshooting documentation as well as the tools " "and utilities provided at "</p> <p><a href="http://www.cisco.com/144/144.html">http://www.cisco.com/144/144.html</a></p> <p>If you still " "require assistance open a case with the Technical Assistance Center " "via the Internet at "</p> <p><a href="http://www.cisco.com/144/144.html">http://www.cisco.com/144/144.html</a></p> <p>or contact " "your Cisco technical support representative. Be sure to provide the " "the information you have gathered and a 'show tech-support' to " "your support representative or attach it to your case in non-zipped " "plain text format .txt."</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_CEDWDM_SFP_DETECT	3-Error	[chars]	The SPA driver did not detect a Cu-SFP for the port	spa-eth-10ge	"Please plugin a CISCO compliant SFP in the " "corresponding port and retry the command"
SPA_GE_DWDM_BUT2_SPA	3-Error	[chars]	The SPA driver did not detect a UT2 transponder module	spa-eth-10ge	"Check if the SPA is a DWDM SPA before " "executing the command"
SPA_HA3BADSMICHOMR	3-Error	[chars]: Invalid HA event detected: [chars]	HA switch over event comes before finishing inialization.	-	LOG_SID_SH_TECH_ACTION
SPA_HA3BADSMICHOMR	3-Error	[chars]: Invalid HA event detected: [chars]	HA switch over event comes before finishing inialization.	-	LOG_SID_SH_TECH_ACTION
SPA_HA3BADSMICHOMR	3-Error	[chars]: Invalid HA event detected: [chars]	HA switch over event comes before finishing inialization.	-	LOG_SID_SH_TECH_ACTION
SPA_IPSEC3-BOOT_FAIL	3-Error	[chars]: [chars].	The SPA failed to boot up for the specified reason	spa-ipsec-2g	LOG_SID_RECUR_ACTION
SPA_IPSEC3-BRDTYPE	3-Error	Incorrect jacket card board type [dec] detected.	Board type does not belong to either C7600-SSC-400 or C7600-SSC-600	spa-ipsec-2g	'LOG_SID_RECUR_ACTION'
SPA_IPSEC3-OVERRIDE	3-Error	[chars]: Overriding bundled firmware with ssc[node][chars].	Used specified file instead of bundled file. This is a debugging feature.	spa-ipsec-2g	LOG_SID_NO_ACTION
SPA_IPSEC3-PROC_FAIL	3-Error	[chars]: [chars] Process creation failed.	Can not allocate memory for specified process.	spa-ipsec-2g	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_IPSEC-3-PWRCYCLE	3-Error	SPA [dec]/[dec] is being power-cycled	The SPA has stopped responding to keep-alive polling from carrier card. The SPA has been power-cycled.	spa-ipsec-2g	"Once the SPA is back online retrieve the crashdump data that " "was saved on the Bootflash of the supervisor." LOG_SID_RECUR_ACTION
SPA_IPSEC-3-SKIP_SPI	3-Error	[chars]: Skipping SPI Init.	SPI Initialization will be skipped. This is a debugging feature.	ws-ipsec-3	LOG_SID_NO_ACTION
SPA_IPSEC-3-SPA_BUS	3-Error	[chars]: SPA Bus timeout.	DS1844 potentiometer initialization failed. It indicates a hardware failure	gsr-oc3_12-pos-spa	"Change the hardware or copy the error message exactly as it " "appears and report it to your technical support representative."
SPA_INM2-REMEXCEED	2-Critical	Interface [chars] noise exceeded above removal threshold	Noise on the link has exceeded above the threshold value configured for link removal	-	"This link requires administrative attention"
SPA_INM2-REMEXCD/STINK	2-Critical	Interface [chars] Last link in bundle noise exceeded above removal threshold	Noise on the link has exceeded above the threshold value configured for link removal. However this link is the last link in the multilink bundle and it is not removed from the service.	-	"This link requires administrative attention"
SPA_INM2-REMFAILED	2-Critical	Interface [chars] failed to remove link from bundle	Noise on the link has exceeded above the threshold value configured for link removal. However this link is not removed from the MLP bundle	-	"No Action required"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SPA_INM2REIMPROVE</del>	2-Critical	Interface [chars] noise improved below removal threshold	Noise on the link has improved and is below the threshold value configured for link removal	-	"No Action required"
SPA_INM2-REMOVE	2-Critical	Interface [chars] removed from bundle. Noise exceeded above remove threshold	Noise on the link has crossed the threshold value configured for link removal. This link is taken out of the MLP bundle. This is critical status for the link. This link is under monitoring state and will be added to the bundle again when the noise level is below the configured value.	-	"This link requires administrative attention"
SPA_INM2-RESTORE	2-Critical	Interface [chars] restored to bundle. Noise improved below removal threshold	Noise on the link has improved below the threshold value configured for link removal. This link is restored back to MLP bundle.	-	"No action required"
<del>SPA_INM2RESICRHALED</del>	2-Critical	Interface [chars] failed to restore link to the bundle	Noise on the link has improved and is below the threshold value configured for link removal. However the link restore back to the MLP bundle failed	-	"No Action required"
SPA_INM3-GENEVENT	3-Error	[chars]	An Error has occurred in the link noise monitoring	-	"Copy the error message exactly as it appears " "and report it to your technical support representative"
<del>SPA_INM3-AWAREXCHD</del>	3-Error	Interface [chars] noise exceeded above major warning threshold	Noise on the link has exceeded above the threshold value configured for major warning level	-	"This link requires administrative attention"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPA_INM5-MAJWARNPROE</del>	3-Error	Interface [chars] noise improved below major warning threshold	Noise on the link has improved and is below the threshold value configured for major warning level	-	"No action required"
<del>SPA_INM5-MINWARNEXCD</del>	3-Error	Interface [chars] noise exceeded above minor warning threshold	Noise on the link has exceeded above the threshold value configured for minor warning level	-	"This link requires administrative attention"
<del>SPA_INM5-MINWARNPROE</del>	3-Error	Interface [chars] noise improved below minor warning threshold	Noise on the link has improved and is below the threshold value configured for minor warning level	-	"No action required"
SPA_LNM5-DISABLED	5-Notice	Interface [chars] noise monitoring disabled for [chars]	Link Noise Monitoring has been disabled on the specified T1/E1 interface	-	"This is an information message to" "notify that Link Noise Monitoring has been disabled on the T1/E1 link." "No user action is required."
SPA_LNM5-ENABLED	5-Notice	Interface [chars] noise monitoring enabled for [chars]	Link Noise Monitoring has been enabled on the specified T1/E1 interface	-	"This is an information message to" "notify that Link Noise Monitoring has been enabled on the T1/E1 link." "No user action is required."
SPA_LOTR3-CORRUPT	3-Error	Corrupt configuration unsupported [chars] [node]encountered	The OC3/STM1 RP driver running configuration is corrupted.	asr900-tdm-combo	<del>LOGSIDSHTRECHACDN</del>
SPA_LOTR3-CREAIIE_FAIL	3-Error	Failed to create [chars] : slot/bay:[dec]/[dec]	The channelized SPA controller descriptor block creation failed. Check the amount of available system memory.	asr900-tdm-combo	LOGSIDSHTRECHACDN

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_LOIR3DCC_FAILURE	3-Error	Failed to retrieve DCC info for [dec]/[dec]/[dec]	\n The DCC info could not be retrieved	asr900-tdm-combo	<del>SPACRNERASMBRACDN</del>
SPA_LOTR-3-ERROR	3-Error	Failed to create for [chars] : slot/bay:[dec]/[dec]	The 1Z 8S SPA/IM controller encountered an error.	asr900-tdm-combo	"Check the memory available in system and " LOGSIDSHTTECH_ACTION
SPA_LOIR3FATAL_ERROR	3-Error	Fatal error for [chars] : slot/bay:[dec]/[dec]	The channelized SPA controller encountered a fatal error.	asr900-tdm-combo	LOGSIDSHTTECH_ACTION
SPA_LOIR3FRR_ERROR	3-Error	Error in handling FRR: [chars] [chars] [hec] [hec]	Error in FRR processing.	asr900-tdm-combo	"This is a internal software error. If this error happened while " "configuring FRR try reconfiguring the interface. If the error " "persists or occurred during normal operation decode the traceback " "and " LOG_STD_ACTION
SPA_LOIR3NIFC_FAILED	3-Error	Channel provisioning failed for [chars]	Channel could not be provisioned on SPA for this interface interface corresopnding to that channel has been moved to down state. If this interface was provisoned using the user interface then it may not appear in the interface list.	asr900-tdm-combo	<del>SPACRNERASMBRACDN</del>
SPA_LOIR3INVALID_MAX_VC	3-Error	for[chars]	invalid max vc for IM	asr900-tdm-combo	LOGSIDSHTTECH_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPA_LOIR3</del> INVALIDSPA_TME	3-Error	Invalid SPA type : slot/bay:[dec]/[dec] spa_type=[dec].	The channelized SPA type cannot be recognized by the version of Cisco IOS software currently running on the system.	asr900-tdm-combo	"Upgrade your system to a version of Cisco IOS software that supports " "this SPA type."
SPA_LOTR3-NULL	3-Error	[chars]	The NULL pointer was detected when getting the data structure.	asr900-tdm-combo	<del>SPA_LOTR3</del> NULL_CDB
<del>SPA_LOTR3</del> NULL_CDB	3-Error	payload CDB is NULL for [dec]/[dec]/[dec]	The payload cdb for the port is Null.	asr900-tdm-combo	<del>SPA_LOTR3</del> NULL_CDB
<del>SPA_LOTR3</del> NULL_ETHSUBBLOCK	3-Error	Ethernet subblock is null for [dec]/[dec]	The ethernet subblock is NULL	asr900-tdm-combo	<del>SPA_LOTR3</del> NULL_ETHSUBBLOCK
<del>SPA_LOTR3</del> NULL_INSTANCE	3-Error	Null [chars] instance for slot/bay/port[dec]/[dec]/[dec]	The instance pointer is NULL when getting data structure.	asr900-tdm-combo	<del>SPA_LOTR3</del> NULL_INSTANCE
<del>SPA_LOTR3</del> NULL_OPTICS_CDB	3-Error	Optic CDB is NULL for [dec]/[dec]/[dec]	The optics cdb for the port is Null.	asr900-tdm-combo	<del>SPA_LOTR3</del> NULL_OPTICS_CDB
<del>SPA_LOTR3</del> NULL_OPTICS_HWIDB	3-Error	Optic HWIDB is NULL for [dec]/[dec]/[dec]	The optics hwidb for the port is Null.	asr900-tdm-combo	<del>SPA_LOTR3</del> NULL_OPTICS_HWIDB
<del>SPA_LOTR3</del> NULL_SPA_PIR	3-Error	-	Pointer to a SPA object is NULL.	asr900-tdm-combo	LOG_SID_SH_TECH_ACTION
<del>SPA_LOTR3</del> NULL_SUBBLOCK	3-Error	Null ssb for [chars]	The hwidb subblock is NULL.	asr900-tdm-combo	<del>SPA_LOTR3</del> NULL_SUBBLOCK
<del>SPA_LOTR3</del> NULL_VC_INST	3-Error	for[chars]	Pointer to VC INST is NULL.	asr900-tdm-combo	LOG_SID_SH_TECH_ACTION
<del>SPA_LOTR3</del> RETURN_ERROR	3-Error	Return error for [chars]: return_value=[dec]	Return error code received.	asr900-tdm-combo	<del>SPA_LOTR3</del> RETURN_ERROR
<del>SPA_LOTR3</del> UNKNOWN_OPTION	3-Error	Received unknown [chars]: option=[dec]	Unknown option received.	asr900-tdm-combo	<del>SPA_LOTR3</del> UNKNOWN_OPTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_LOIR5DEF_SUBRAIE	5-Notice	[chars] [chars]	Remote subrate configuration changed.	asr900-tdm-combo	"Inform the network operator that subrate configuration was changed " "by remote end."
SPA_LOIR5SPA_MODE_IS	5-Notice	spa_mode of [dec]/[dec] is [chars]	\n spa_mode is	asr900-tdm-combo	<del>LOG_SIDSH_TECH_ACTION</del>
SPA_LOTR-6-XFP_OK	6-Information	[dec]/[dec]/[dec]: [chars] detected/inserted	XFP has been detected or inserted in a port in Channelized SPA.	asr900-tdm-combo	"This is a information message no action required"
SPA_MIB4DATA_LEN	4-Warning	[chars]: MIB message lengths mismatch[chars] expecting [dec] bytes receiving [dec].	MIB updates expect more data than received.	spa-ser-infra	LOG_SIDSH_TECH_ACTION
SPA_MIB4DATA_LEN	4-Warning	[chars]: MIB message lengths mismatch[chars] expecting [dec] bytes receiving [dec].	MIB updates expect more data than received.	spa-ser-infra	LOG_SIDSH_TECH_ACTION
SPA_MIB4DATA_LEN	4-Warning	[chars]: MIB message lengths mismatch[chars] expecting [dec] bytes receiving [dec].	MIB updates expect more data than received.	spa-ser-infra	LOG_SIDSH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_NAM3NAM_SW_ERR	3-Error	NULL	The SPA driver detected a software error condition on the SPA card. This might result in improper operation.	spa-nam	"The SPA driver has encountered a software error." "Please power down and reseal the indicated SPA card." "Copy the error message exactly as it appears and "open a case with the Technical Assistance Center "via the Internet at "TAC_CASE_OPEN" or contact your Cisco technical support representative and provide "the representative with the information you have gathered. Be sure to "attach to your case the output of the <CmdBold>show logging<NoCmdBold> " "<CmdBold>show monitor event-log spa all<NoCmdBold> and " "<CmdBold>show tech-support<NoCmdBold> commands your troubleshooting "logs and the specific error message."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SANCOEHRNBSWR	3-Error	NULL	The module driver detected a software error condition on the module card. This might result in improper operation.	lebowski-o2	"The module driver has encountered a software error." "Please power down and reseal the indicated module card. " "Copy the error message exactly as it appears and " "open a case with the Technical Assistance Center " "via the Internet at " TAC_CASE_OPEN " or contact your Cisco technical support representative and provide " "the representative with the information you have gathered. Be sure to " "attach to your case the output of the <CmdBold>show logging<NoCmdBold> " "<CmdBold>show monitor event-log module all<NoCmdBold> and " "<CmdBold>show tech-support<NoCmdBold> commands your troubleshooting " "logs and the specific error message."
SANCOEAPMGEMR	0-Emergency	NULL	The application running on the service module has encountered an emergency error.	canisng-xe	UCSEAPMGSIDACION
SANCOEAPMGAIR	1-Alert	NULL	The application running on the service module has issued an alert.	canisng-xe	UCSEAPMGSIDACION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SANUCSE3APMGRIT	2-Critical	NULL	The application running on the service module has encountered a critical error.	canisng-xe	UCSE_APMGR_SID_ACTION
SANUCSE3CONGALD	2-Critical	UCSE Module [chars] \[chars]\ configuration failed	The indicated configuration for the UCSE Module interface has failed.	canisng-xe	LOG_SID_RECUR_ACTION
SANUCSE3APMGRER	3-Error	NULL	The application running on the service module has encountered an error.	canisng-xe	UCSE_APMGR_SID_ACTION
SANUCSE3APRRESR	3-Error	Application on UCSE Module [chars] has failed and requested a UCSE Module reset.	The application running on the service module failed and as a result the UCSE Module will be restarted in order to recover from the communication failure with host.	canisng-xe	LOG_SID_NO_ACTION
SANUCSE3APSTAUS	3-Error	Application on UCSE Module [chars] is [chars]	The Application running on the service module has changed state.	canisng-xe	LOG_SID_NO_ACTION

Family-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPANGLUCSE3HWERR	3-Error	[chars]: A Hardware device error was detected by [chars] trying to recover the module by reload.	An internal hardware device error has occurred on the module. The error message indicates the slot the module slot the module type and the name of the hardware device. The module has been deactivated and reactivated to resolve the problem. If the error occurs more than five times within an hour no further attempts to reactivate the module will be made. This message is likely due to an unrecoverable hardware failure.	canisng-xe	"Perform OIR of the module located in the specified subslot. Before" " removing the module enter the <CmdBold>hw-module subslot" " stop<NoCmdBold> command. Remove the module wait 5 seconds and" " reinsert the module into the slot. If the problem persists copy " "the error message text exactly as it appears on the console or in " "the system log enter the <CmdBold>show diag <NoCmdBold> command " "contact your Cisco technical support representative and provide the " "representative with the gathered information."
SPANGLUCMERRMTH	3-Error	UCSE [chars] is using incorrect NGIO message version expected version = [dec] current version = [dec]. Please update	UCSE SW is running with a software version that doesn't use the same NGIO message header version. This could happen if the wrong version of the software package for the module was installed in the system.	canisng-xe	"Find the appropriate software package for the module based on the " "Cisco IOS software version that the system is running. Follow the " "installation documentation that corresponds to your software version " "and platform to properly install the software package and correct the " "problem."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SP</del> UCSE[PASSWORD]RESET	3-Error	UCSE Module [chars] password reset [chars][chars]	The password reset of the service module failed or is not supported.	canisng-xe	LOG_SID_RECUR_ACTION
<del>SP</del> UCSE[RESE]RESET	3-Error	UCSE Module [chars] will be reset to recover from failure [chars].	The module is restarting to recover from the communication failure with host.	canisng-xe	LOG_SID_NO_ACTION
<del>SP</del> UCSE[SHUTDOWN]AID	3-Error	UCSE Module [chars] shutdown failed to be executed.	The UCSE Module did not yet respond to the shutdown request. This is probably due to a bug.	canisng-xe	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPAN0USE3PACUHR	3-Error	[chars]: module CPU HW errors: [chars]	An internal hardware device error has occurred on the module CPU. The error message indicates the modular card slot the module subslot the module type and the name of the hardware device. The module has been deactivated and reactivated to resolve the problem. If the error occurs more than five times within an hour no further attempts to reactivate the module will be made. This message is likely due to an unrecoverable hardware failure	canisng-xe	"If the module does not recover automatically perform OIR of the module " "located in the specified subslot. Before removing the module enter the " "<CmdBold>hw-module subslot stop<NoCmdBold> command. Remove the module " "wait 5 seconds and reinsert the module into the slot. If the problem " "persists copy the error message text exactly as it appears on the " "console or in the system log enter the <CmdBold>show tech-support" " "<NoCmdBold> command contact your Cisco technical support representative " "and provide the representative with the gathered information."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPANGLUCSE3SWERR	3-Error	NULL	The module driver detected a software error condition on the module card. This might result in improper operation.	canisng-xe	"The module driver has encountered a software error." "Please power down and reseal the indicated module card. " "Copy the error message exactly as it appears and " "open a case with the Technical Assistance Center " "via the Internet at " TAC_CASE_OPEN " or contact your Cisco technical support representative and provide " "the representative with the information you have gathered. Be sure to " "attach to your case the output of the <CmdBold>show logging<NoCmdBold> " "<CmdBold>show monitor event-log module all<NoCmdBold> and " "<CmdBold>show tech-support<NoCmdBold> commands your troubleshooting " "logs and the specific error message."
SPANGLUCSE4PMGWARN	4-Warning	NULL	The application running on the service module has issued a warning message.	canisng-xe	UCSE4PMGWSIDACTN

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SANUCSEBPIAORNO</del>	4-Warning	UCSE Module [chars] platform information not received correctly.	The platform and service module hardware information was not received correctly.	canisng-xe	LOG_SID_RECUR_ACTION
<del>SANUCSEBPMGNLE</del>	5-Notice	NULL	The application running on the service module has issued a notice.	canisng-xe	"Refer to the software application documentation for more information."
<del>SANUCSEBPPSWOD</del>	5-Notice	UCSE Module [chars] password changed to '[chars]'.	The password of the service module was changed.	canisng-xe	LOG_SID_NO_ACTION
<del>SANUCSEBPSCEEXP</del>	5-Notice	UCSE Module [chars] \ ucse ext ip address\ restored.	The UCSE Module external IP address was restored after the system verified that the interface IP address changed. There are certain configuration requirements for the UCSE Module IP address and the default gateway IP address with the module interface IP address. The system has verified these requirements and restored the external IP address.	canisng-xe	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SANUCSE</del> RESIOREP	5-Notice	UCSE Module [chars] \UCSE Module ip address\ restored.	The UCSE Module IP address was restored after the system verified that the interface IP address changed. There are certain configuration requirements for the service-engine IP address and the default gateway IP address with the module interface IP address. The system has verified these requirements and restored the IP address.	canisng-xe	LOG_SID_NO_ACTION
<del>SANUCSE</del> SCDDDFW	5-Notice	UCSE Module [chars] \UCSE ip default-gateway\ restored.	The UCSE Module default gateway IP address was restored after the system verified that the interface IP address was changed. There are certain configuration requirements for the UCSE Module IP address and the default gateway IP address with the module interface IP address. The system has verified that the IP address for the UCSE Module IP default gateway is still on the same subnet as the UCSE Module IP address and therefore the default-gateway configuration is restored.	canisng-xe	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SANUCSE</del> SHUTDOWNBTN	5-Notice	UCSE Module [chars] shutdown button was pressed and shutdown initiated.	The Shutdown button on the module was pressed and shutdown initiated.	canisng-xe	LOG_SID_NO_ACTION
<del>SANUCSE</del> SHUTDOWNDE	5-Notice	UCSE Module [chars] shutdown complete	The shutdown of the UCSE Module was completed.	canisng-xe	LOG_SID_NO_ACTION
<del>SANUCSE</del> SHUTDOWNCIDE	5-Notice	UCSE Module [chars] shutdown was not done in a proper fashion: Reseating the module may corrupt the hard disk.	The module was not properly shutdown before removal of the module. This could result in the corruption of the hard disk on the module.	canisng-xe	LOG_SID_NO_ACTION
<del>SANUCSE</del> NONTRHDECV	5-Notice	UCSE Module [chars] UCSE ip default-gateway\ unconfigured.	The UCSE Module default gateway IP is unconfigured as interface IP address changed.	canisng-xe	LOG_SID_NO_ACTION
<del>SANUCSE</del> NONTRHEXP	5-Notice	UCSE Module [chars] UCSE Module ext ip address\ unconfigured.	The UCSE Module external IP address is unconfigured as interface IP address changed.	canisng-xe	LOG_SID_NO_ACTION
<del>SANUCSE</del> NONTRHLP	5-Notice	UCSE Module [chars] UCSE Module ip address\ unconfigured.	The UCSE Module IP address is unconfigured as interface IP address changed.	canisng-xe	LOG_SID_NO_ACTION
<del>SANUCSE</del> APMGNO	6-Information	NULL	The application running on the service module has issued a informational message.	canisng-xe	"Refer to the software application documentation for more information."
<del>SANUCSE</del> APMGDBG	7-Debug	NULL	The application running on the service module has displayed a debug message.	canisng-xe	"Refer to the software application documentation for more information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_OBFL-3APP_CONTEXT	3-Error	SPA OBFL Application Context is NULL	The SPA Callback routine doesnt have valid OBFL Application context	spa-obfl	LOG_STD_ACTION
SPA_OBFL-3APP_ENABLE	3-Error	[chars]: Failed to enable the [chars] application with OBFL INFRA	SPA Failed to register the application with OBFL INFRA	spa-obfl	LOG_STD_ACTION
SPA_OBFL-3APPLICATION	3-Error	SPA OBFL [chars] Application initialization failed for [chars]	The SPA could not initialize OBFL Application	spa-obfl	LOG_STD_ACTION
SPA_OBFL-3BAY_FAILED	3-Error	[chars]: Failed to get the bay slot [dec] bay [dec]	Getting the SPA structure is failed for the slot/bay combination.	spa-obfl	LOG_STD_ACTION
SPA_OBFL-3DEV_ADDR	3-Error	[chars]: SPA Blackbox EEPROM base address is NULL	SPA specific code returned NULL for Blackbox EEPROM base address	spa-obfl	LOG_STD_ACTION
SPA_OBFL-3DEV_DISABLE	3-Error	[chars]: Failed to disable the SPA OBFL Device	Failed to disable the SPA OBFL device during OIR	spa-obfl	LOG_STD_ACTION
SPA_OBFL-3DEV_ENABLE	3-Error	[chars]: Failed to enable the SPA OBFL device	SPA OBFL failed to register the device with OBFL Infra	spa-obfl	LOG_STD_ACTION
SPA_OBFL-3EEPROM_FAILED	3-Error	[chars]: Failed to read the [chars] from EEPROM	Failed to read the particular details from SPA IDPROM.	spa-obfl	LOG_STD_ACTION
SPA_OBFL-3ENV_ENQUEUE	3-Error	[chars]: Failed to enqueue the Enviornment event	SPA OBFL Failed to enqueue the enviornment event to OBFL Infra.	spa-obfl	LOG_STD_ACTION
SPA_OBFL-3ENV_FVT_FAILED	3-Error	[chars]: Enviornment Function Vector table is empty for [chars] monitoring	Failed to get the enviornment vector table for the SPA	spa-obfl	LOG_STD_ACTION
SPA_OBFL-3ENV_UDI	3-Error	[chars]: SPA OBFL Enviornment UDI structure is NULL	OBFL Enviornment UDI structure is NULL for the SPA	spa-obfl	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_OBFL3ERASE_FAILED	3-Error	[chars]: Failed to erase the Blackbox EEPROM Address 0x[hec] offset 0x[hec] size 0x[hec]	Erasing the Blackbox EEPROM failed.	spa-obfl	LOG_STD_ACTION
SPA_OBFL3ERRMSG_REG	3-Error	[chars]: Failed to register Errmsg Facility	Failed to register the SPA OBFL errmsg facility with OBFL Infra	spa-obfl	LOG_STD_ACTION
SPA_OBFL3MALLOC_FAILED	3-Error	[chars]: Failed to allocate memory for [chars]	Failed to allocate mememory for the SPA OBFL feature	spa-obfl	LOG_STD_ACTION
SPA_OBFL3OBFL_DEVINFO	3-Error	SPA OBFL Devinfo is NULL	The SPA Callback routine doesnt have valid OBFL Devinfo	spa-obfl	LOG_STD_ACTION
SPA_OBFL3PLATFORM_VECTOR	3-Error	SPA OBFL Platform Vector Function is NULL	The SPA doesnt have platform vector function	spa-obfl	LOG_STD_ACTION
SPA_OBFL3READ_FAILED	3-Error	[chars]: Failed to read the Blackbox EEPROM Address 0x[hec] offset 0x[hec] size 0x[hec]	Reading the Blackbox EEPROM failed.	spa-obfl	LOG_STD_ACTION
SPA_OBFL3READ_SENSORS	3-Error	[chars]: Failed to read the [chars] from sensor [dec]	Failed to read the enviornment sensors	spa-obfl	LOG_STD_ACTION
SPA_OBFL3RESET_REASON	3-Error	[chars]: Failed to get the SPA reset reason from RP due to IPC [chars].	SPA OBFL failed to get the SPA reset reason from RP.	spa-obfl	LOG_STD_ACTION
SPA_OBFL3SIZE_TOO_BIG	3-Error	Size + Offset is beyond EEPROM boundary. Offset 0x[hec] size 0x[hec]	The SPA Callback routine doesnt have valid EEPROM read/write bytes	spa-obfl	LOG_STD_ACTION
SPA_OBFL3SPA_PLUGIN_FOUND	3-Error	SPA Plugin failed slot [dec] bay [dec]	Getting the SPA Plugin structure is failed.	spa-obfl	LOG_STD_ACTION
SPA_OBFL3SPA_OBFL_INFO	3-Error	[chars]: Failed to get the SPA OBFL [chars] info	Failed to get the SPA OBFL info structure	spa-obfl	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPA_OBL3OIMTBL_FAILED</del>	3-Error	[chars]: Failed to get the voltage limit table	Failed to get voltage limit table for the SPA	spa-obfl	LOG_STD_ACTION
<del>SPA_OBL3WRITE_FAILED</del>	3-Error	[chars]: Failed to write the Blackbox EEPROM Address 0x[hec] offset 0x[hec] size 0x[hec]	Writing to Blackbox EEPROM failed.	spa-obfl	LOG_STD_ACTION
<del>SPASPECINCRSA_MA</del>	2-Critical	SPA [chars] in subslot 0/[dec] state transitioned to [chars].	The state transitioned to out of service \ autonomous and mismatch. An improper equipment \ is provisioned or inserted in the bay.	asr900-csl	LOG_SID_NO_ACTION
<del>SPASPECINCRSA_MA</del>	2-Critical	SPA N/A in subslot 0/[dec] state transitioned to [chars].	The state transitioned to out of service \ autonomous management - mismatch and maintenance \ because the entity has been manually removed from \ service for a maintenance activity. Also the card \ may be inserted in the wrong slot.	asr900-csl	LOG_SID_NO_ACTION
<del>SPASPECINCRSA_MA</del>	2-Critical	SPA [chars] in subslot 0/[dec] state transitioned to [chars].	-	asr900-csl	LOG_SID_NO_ACTION
<del>SPASPECINCRSA_MA</del>	6-Information	SPA [chars] in subslot 0/[dec] state transitioned to [chars].	The state is in empty since the subslot is \ neither provisioned nor is it phsically \ populated with any interface module.	asr900-csl	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SPASAECHANGESNR</del>	6-Information	SPA [chars] in subslot 0/[dec] state transitioned to [chars].	The state transitioned to in-service and \ normal. It is fully operational and shall \ provide provisioned functions.	asr900-csl	LOG_SID_NO_ACTION
<del>SPASAECHANGESAULT</del>	6-Information	SPA [chars] in subslot 0/[dec] state transitioned to [chars].	The state transitioned to out of service \ autonomous - fault condition.	asr900-csl	LOG_SID_NO_ACTION
<del>SPASAECHANGESASVD</del>	6-Information	SPA [chars] in subslot 0/[dec] state transitioned to [chars].	The state transitioned to out of service \ autonomous and software download.	asr900-csl	LOG_SID_NO_ACTION
<del>SPASAECHANGESASUQ</del>	6-Information	SPA N/A in subslot 0/[dec] state transitioned to [chars].	The state transitioned to out of service autonomous \ because the card is not physically present.	asr900-csl	LOG_SID_NO_ACTION
<del>SPASAECHANGESASUMNT</del>	6-Information	SPA [chars] in subslot 0/[dec] state transitioned to [chars].	The state transitioned to out of service \ autonomous management - unequipped and \ unassigned because the card is neither \ physically present nor provisioned in the database.	asr900-csl	LOG_SID_NO_ACTION
<del>SPASAECHANGESASVMT</del>	6-Information	SPA [chars] in subslot 0/[dec] state transitioned to [chars].	The state transitioned to out of service \ autonomous - software download and maintenance. \ The entity had been manually removed from \ for a maintenance activity.	asr900-csl	LOG_SID_NO_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPAS_TCHN60SUMALS</del>	6-Information	SPA [chars] in subslot 0/[dec] state transitioned to [chars].	The state transitioned to out of service \ autonomous management - unassigned because \ the card is not provisioned in the database.	asr900-csl	LOG_SID_NO_ACTION
<del>SPAS_TCHN60SUMLMT</del>	6-Information	SPA [chars] in subslot 0/[dec] state transitioned to [chars].	The state transitioned to out of service \ autonomous - unequipped and maintenance. \ The card is not physically present. The entity \ has been manually removed from service for a \ maintenance activity.	asr900-csl	LOG_SID_NO_ACTION
<del>SPAS_TCHN60SUMMT</del>	6-Information	SPA [chars] in subslot 0/[dec] state transitioned to [chars].	The state transitioned to out of service \ management. The entity had been manually \ removed from service for a maintenance activity \ but still performs its provisioned functions.	asr900-csl	LOG_SID_NO_ACTION
SPA_OIR-2-INITFAIL	2-Critical	SPA OIR initialization error	A failure occurred during the SPA OIR subsystem startup. SPA OIR is not functional for the RP or line card that generated the message.	-	LOG_SID_REDUCE_ACTION
SPA_OIR-2-INITFAIL	2-Critical	SPA OIR initialization error	A failure occurred during the SPA OIR subsystem startup. SPA OIR is not functional for the RP or line card that generated the message.	-	LOG_SID_REDUCE_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SPA_OIR-2-INITFAIL	2-Critical	SPA OIR initialization error	A failure occurred during the SPA OIR subsystem startup. SPA OIR is not functional for the RP or line card that generated the message.	-	LOG_SID_REDUCE_ACTION
SPA_OIR-2-INITFAIL	2-Critical	SPA OIR initialization error	A failure occurred during the SPA OIR subsystem startup. SPA OIR is not functional for the RP or line card that generated the message.	-	LOG_SID_REDUCE_ACTION
SPA_OIR-2-SUBSLOTINITFAIL	2-Critical	SPA OIR initialization error for [chars]	A failure occurred during the SPA OIR subsystem startup. SPA OIR is not functional for the slot or subslot specified in the error message	-	LOG_SID_REDUCE_ACTION
SPA_OIR-2-SUBSLOTINITFAIL	2-Critical	SPA OIR initialization error for [chars]	A failure occurred during the SPA OIR subsystem startup. SPA OIR is not functional for the slot or subslot specified in the error message	-	LOG_SID_REDUCE_ACTION
SPA_OIR-2-SUBSLOTINITFAIL	2-Critical	SPA OIR initialization error for [chars]	A failure occurred during the SPA OIR subsystem startup. SPA OIR is not functional for the slot or subslot specified in the error message	-	LOG_SID_REDUCE_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SPA_OIR2SUBSLOTINITIAL	2-Critical	SPA OIR initialization error for [chars]	A failure occurred during the SPA OIR subsystem startup. SPA OIR is not functional for the slot or subslot specified in the error message	-	LOG_SID_REDUCE_ACTION
SPA_OIR-3-CMD_ATTR	3-Error	[chars]: Unexpected command identifier %u	An unexpected command identifier was detected when processing command related to a SPA OIR. The command was not processed. This is most likely due to a software problem.	spa-infra	SPA_OIR_STD_ACTION
SPA_OIR-3-CMD_ATTR	3-Error	[chars]: Unexpected command identifier %u	An unexpected command identifier was detected when processing command related to a SPA OIR. The command was not processed. This is most likely due to a software problem.	spa-infra	SPA_OIR_STD_ACTION
SPA_OIR-3-CMD_ATTR	3-Error	[chars]: Unexpected command identifier %u	An unexpected command identifier was detected when processing command related to a SPA OIR. The command was not processed. This is most likely due to a software problem.	spa-infra	SPA_OIR_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SPA_OIR-3-CMD_ATTR	3-Error	[chars]: Unexpected command identifier %u	An unexpected command identifier was detected when processing command related to a SPA OIR. The command was not processed. This is most likely due to a software problem.	spa-infra	SPA_OIR_STD_ACTION
SPA_OIR-3-CORRUPTMENT	3-Error	[chars]	Corruption was detected within a SPA OIR event for the subslot specified in the error message. When this error occurs the system attempts automatic recovery by reloading the SPA. This condition could be caused by a software firmware or hardware problem but a firmware or software problem is more likely. For distributed platforms SPA OIR events are transported over different media depending on the platform for example c12000 uses the MBUS. An unlikely cause of this error is that an event message	-	SPA_OIR_STD_ACTION

Fault-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_OR3CORRUPT_EVENT	3-Error	[chars]	Corruption was detected within a SPA OIR event for the subslot specified in the error message. When this error occurs the system attempts automatic recovery by reloading the SPA. This condition could be caused by a software firmware or hardware problem but a firmware or software problem is more likely. For distributed platforms SPA OIR events are transported over different media depending on the platform for example c12000 uses the MBUS. An unlikely cause of this error is that an event message	-	SACRAUTORCOMB/ACDN

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SPA_OIR3CORRUPT_EVENT	3-Error	[chars]	Corruption was detected within a SPA OIR event for the subslot specified in the error message. When this error occurs the system attempts automatic recovery by reloading the SPA. This condition could be caused by a software firmware or hardware problem but a firmware or software problem is more likely. For distributed platforms SPA OIR events are transported over different media depending on the platform for example c12000 uses the MBUS. An unlikely cause of this error is that an event message	-	SPORAUTORCOMBIN_AIDN

Fault-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_OR3CORRUPT_EVENT	3-Error	[chars]	Corruption was detected within a SPA OIR event for the subslot specified in the error message. When this error occurs the system attempts automatic recovery by reloading the SPA. This condition could be caused by a software firmware or hardware problem but a firmware or software problem is more likely. For distributed platforms SPA OIR events are transported over different media depending on the platform for example c12000 uses the MBUS. An unlikely cause of this error is that an event message	-	SPA_RAUTORCOMB/ACDN

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA OIR event data error - [chars]%u	3-Error	SPA OIR event data error - [chars]%u	Invalid data was detected within a SPA OIR event. The SPA OIR state machines may not reflect the state of the hardware. The problem only affects one SPA but the SPA cannot be determined from the context where the error was detected. This condition could be caused by software or hardware problem but a software problem is more likely. For distributed platforms SPA OIR messages are transported over different media depending on the platform for example c12000 uses the MBUS. An unlikely cause of this error is that an event message	spa-infra	"Check the system log for other messages that may help determine " which SPA is affected. " SACRENTDAIRRCR



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_OIR_EVENT_DATA_ERROR	3-Error	SPA OIR event data error - [chars]%u	Invalid data was detected within a SPA OIR event. The SPA OIR state machines may not reflect the state of the hardware. The problem only affects one SPA but the SPA cannot be determined from the context where the error was detected. This condition could be caused by software or hardware problem but a software problem is more likely. For distributed platforms SPA OIR messages are transported over different media depending on the platform for example c12000 uses the MBUS. An unlikely cause of this error is that an event message	spa-infra	"Check the system log for other messages that may help determine " "which SPA is affected. " <del>SPA_OIR_EVENT_DATA_ERROR</del>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_OIR_EVENT_DATA_ERROR	3-Error	SPA OIR event data error - [chars]%u	Invalid data was detected within a SPA OIR event. The SPA OIR state machines may not reflect the state of the hardware. The problem only affects one SPA but the SPA cannot be determined from the context where the error was detected. This condition could be caused by software or hardware problem but a software problem is more likely. For distributed platforms SPA OIR messages are transported over different media depending on the platform for example c12000 uses the MBUS. An unlikely cause of this error is that an event message	spa-infra	"Check the system log for other messages that may help determine " "which SPA is affected. " <del>SACRENTCOMBYAION</del>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPA_OIR_EVENT_DATA_ERROR</del>	3-Error	SPA OIR event data error - [chars]%u	Invalid data was detected within a SPA OIR event. The SPA OIR state machines may not reflect the state of the hardware. The problem only affects one SPA but the SPA cannot be determined from the context where the error was detected. This condition could be caused by software or hardware problem but a software problem is more likely. For distributed platforms SPA OIR messages are transported over different media depending on the platform for example c12000 uses the MBUS. An unlikely cause of this error is that an event message	spa-infra	"Check the system log for other messages that may help determine " which SPA is affected. " <del>SPA_OIR_EVENT_RECOVER_ACTION</del>
<del>SPA_OIR_EVENT_HANDLING</del>	3-Error	[chars]: [chars]0x[hec]	A data structure error was detected when handling a SPA OIR event for the SPA in the slot or subslot specified in the error message. The SPA OIR state machines may not reflect the state of the hardware. This condition is most likely due to a software problem.	spa-infra	SPA_OIR_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SPA_OIR_EVENT_HANDLING	3-Error	[chars]: [chars]0x[hec]	A data structure error was detected when handling a SPA OIR event for the SPA in the slot or subslot specified in the error message. The SPA OIR state machines may not reflect the state of the hardware. This condition is most likely due to a software problem.	spa-infra	SPA_OIR_SID_ACTION
SPA_OIR_EVENT_HANDLING	3-Error	[chars]: [chars]0x[hec]	A data structure error was detected when handling a SPA OIR event for the SPA in the slot or subslot specified in the error message. The SPA OIR state machines may not reflect the state of the hardware. This condition is most likely due to a software problem.	spa-infra	SPA_OIR_SID_ACTION
SPA_OIR_EVENT_HANDLING	3-Error	[chars]: [chars]0x[hec]	A data structure error was detected when handling a SPA OIR event for the SPA in the slot or subslot specified in the error message. The SPA OIR state machines may not reflect the state of the hardware. This condition is most likely due to a software problem.	spa-infra	SPA_OIR_SID_ACTION

Fault-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_OR3EVENT_TIMEOUT	3-Error	[chars]: Timeout waiting for SPA OIR event	A timeout occurred for the subslot specified in the error message while waiting for a SPA OIR event. The SPA did not complete initialization. When this error occurs the system attempts automatic recovery by reloading the SPA. This condition could be caused by software or hardware problem but a software problem is more likely. For distributed platforms SPA OIR event are transported over different media depending on the platform for example c12000 uses the MBUS. An unlikely cause of this error is that an event message	-	SACRAUIORCOMB/ADN

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SPA_OIR3EVENT_TIMEOUT	3-Error	[chars]: Timeout waiting for SPA OIR event	A timeout occurred for the subslot specified in the error message while waiting for a SPA OIR event. The SPA did not complete initialization. When this error occurs the system attempts automatic recovery by reloading the SPA. This condition could be caused by software or hardware problem but a software problem is more likely. For distributed platforms SPA OIR event are transported over different media depending on the platform for example c12000 uses the MBUS. An unlikely cause of this error is that an event message	-	SPORAUTORCOMBINATION

Fault-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_OIR3EVENT_TIMEOUT	3-Error	[chars]: Timeout waiting for SPA OIR event	A timeout occurred for the subslot specified in the error message while waiting for a SPA OIR event. The SPA did not complete initialization. When this error occurs the system attempts automatic recovery by reloading the SPA. This condition could be caused by software or hardware problem but a software problem is more likely. For distributed platforms SPA OIR event are transported over different media depending on the platform for example c12000 uses the MBUS. An unlikely cause of this error is that an event message	-	SACRAUIORCOMB/ADN

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SPA_OIR3EVENT_TIMEOUT	3-Error	[chars]: Timeout waiting for SPA OIR event	A timeout occurred for the subslot specified in the error message while waiting for a SPA OIR event. The SPA did not complete initialization. When this error occurs the system attempts automatic recovery by reloading the SPA. This condition could be caused by software or hardware problem but a software problem is more likely. For distributed platforms SPA OIR event are transported over different media depending on the platform for example c12000 uses the MBUS. An unlikely cause of this error is that an event message	-	SPORAUTORCOMBINATION



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SPA_CR3FW_NT_TIMEOUT	3-Error	[chars]	A timeout occurred for the subslot specified in the error message while waiting for SPA hardware to initialize. The SPA did not complete initialization. When this error occurs the system attempts automatic recovery by reloading the SPA. This condition could be caused by a software firmware or hardware problem but a firmware or hardware problem is more likely.	-	SPA_CR3FW_NT_TIMEOUT
SPA_CR3FW_NT_TIMEOUT	3-Error	[chars]	A timeout occurred for the subslot specified in the error message while waiting for SPA hardware to initialize. The SPA did not complete initialization. When this error occurs the system attempts automatic recovery by reloading the SPA. This condition could be caused by a software firmware or hardware problem but a firmware or hardware problem is more likely.	-	SPA_CR3FW_NT_TIMEOUT

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SPA_OR3HWNTIMEOUT	3-Error	[chars]	A timeout occurred for the subslot specified in the error message while waiting for SPA hardware to initialize. The SPA did not complete initialization. When this error occurs the system attempts automatic recovery by reloading the SPA. This condition could be caused by a software firmware or hardware problem but a firmware or hardware problem is more likely.	-	SPACRAUCORCOMRYACDN
SPA_OR3HWNTIMEOUT	3-Error	[chars]	A timeout occurred for the subslot specified in the error message while waiting for SPA hardware to initialize. The SPA did not complete initialization. When this error occurs the system attempts automatic recovery by reloading the SPA. This condition could be caused by a software firmware or hardware problem but a firmware or hardware problem is more likely.	-	SPACRAUCORCOMRYACDN

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPCRHWGNLDESRID</del>	3-Error	[chars]	The SPA was not brought up because the SPA bay is in an admin down state. The SPA bay will appear as <del>&lt;CmdBold&gt;no hw-module-NCmdBd</del> <target spa> <del>&lt;CmdBold&gt;no hw-module-NCmdBd</del> in the running configuration.	-	"Use the <CmdBold>no hw-module-NCmdBd <target spa> " <del>&lt;CmdBold&gt;no hw-module-NCmdBd</del> command to administratively enable " "the SPA bay."
<del>SPCRHWGNLDESRID</del>	3-Error	[chars]	The SPA was not brought up because the SPA bay is in an admin down state. The SPA bay will appear as <del>&lt;CmdBold&gt;no hw-module-NCmdBd</del> <target spa> <del>&lt;CmdBold&gt;no hw-module-NCmdBd</del> in the running configuration.	-	"Use the <CmdBold>no hw-module-NCmdBd <target spa> " <del>&lt;CmdBold&gt;no hw-module-NCmdBd</del> command to administratively enable " "the SPA bay."
<del>SPCRHWGNLDESRID</del>	3-Error	[chars]	The SPA was not brought up because the SPA bay is in an admin down state. The SPA bay will appear as <del>&lt;CmdBold&gt;no hw-module-NCmdBd</del> <target spa> <del>&lt;CmdBold&gt;no hw-module-NCmdBd</del> in the running configuration.	-	"Use the <CmdBold>no hw-module-NCmdBd <target spa> " <del>&lt;CmdBold&gt;no hw-module-NCmdBd</del> command to administratively enable " "the SPA bay."
<del>SPCRHWGNLDESRID</del>	3-Error	[chars]	The SPA was not brought up because the SPA bay is in an admin down state. The SPA bay will appear as <del>&lt;CmdBold&gt;no hw-module-NCmdBd</del> <target spa> <del>&lt;CmdBold&gt;no hw-module-NCmdBd</del> in the running configuration.	-	"Use the <CmdBold>no hw-module-NCmdBd <target spa> " <del>&lt;CmdBold&gt;no hw-module-NCmdBd</del> command to administratively enable " "the SPA bay."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SPA_OR3INVALID_EVENT	3-Error	[chars]: Invalid [chars] event received when SPA is undergoing Minimal Disruptive Restart	An unexpected event was detected when the SPA was was undergoing Minimal Disruptive Restart. This condition is most likely a software problem. The SPA will be reset as normal and this will impact traffic.	spa-infra	<del>SPA_OR3INVALID_EVENT</del>
SPA_OR3INVALID_EVENT	3-Error	[chars]: Invalid [chars] event received when SPA is undergoing Minimal Disruptive Restart	An unexpected event was detected when the SPA was was undergoing Minimal Disruptive Restart. This condition is most likely a software problem. The SPA will be reset as normal and this will impact traffic.	spa-infra	<del>SPA_OR3INVALID_EVENT</del>
SPA_OR3INVALID_EVENT	3-Error	[chars]: Invalid [chars] event received when SPA is undergoing Minimal Disruptive Restart	An unexpected event was detected when the SPA was was undergoing Minimal Disruptive Restart. This condition is most likely a software problem. The SPA will be reset as normal and this will impact traffic.	spa-infra	<del>SPA_OR3INVALID_EVENT</del>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_OIR/MESSAGE_ERROR	3-Error	[chars]: SPA OIR event message error - [chars]%u	An error was detected in a SPA OIR event message for the SPA in the slot or subslot specified in the error message. The SPA OIR state machines may not reflect the state of the hardware for this SPA. This condition could be caused by software or hardware problem but a software problem is more likely. For distributed platforms SPA OIR messages are transported over different media depending on the platform for example c12000 uses the MBUS. An unlikely cause of this error is that an event message	spa-infra	SACR/ENTR/COMB/CDN

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_OIR3MESSAGE_ERRCR	3-Error	[chars]: SPA OIR event message error - [chars]%u	An error was detected in a SPA OIR event message for the SPA in the slot or subslot specified in the error message. The SPA OIR state machines may not reflect the state of the hardware for this SPA. This condition could be caused by software or hardware problem but a software problem is more likely. For distributed platforms SPA OIR messages are transported over different media depending on the platform for example c12000 uses the MBUS. An unlikely cause of this error is that an event message	spa-infra	SPACRBMNRCOMBYAIDN

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_OIR_MESSAGE_ERROR	3-Error	[chars]: SPA OIR event message error - [chars]%u	An error was detected in a SPA OIR event message for the SPA in the slot or subslot specified in the error message. The SPA OIR state machines may not reflect the state of the hardware for this SPA. This condition could be caused by software or hardware problem but a software problem is more likely. For distributed platforms SPA OIR messages are transported over different media depending on the platform for example c12000 uses the MBUS. An unlikely cause of this error is that an event message	spa-infra	SACR/ENR/COMB/CDN

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_OIR3MESSAGE_ERRCR	3-Error	[chars]: SPA OIR event message error - [chars]%u	An error was detected in a SPA OIR event message for the SPA in the slot or subslot specified in the error message. The SPA OIR state machines may not reflect the state of the hardware for this SPA. This condition could be caused by software or hardware problem but a software problem is more likely. For distributed platforms SPA OIR messages are transported over different media depending on the platform for example c12000 uses the MBUS. An unlikely cause of this error is that an event message	spa-infra	SPA_OIR3MESSAGE_ERRCR



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_OIR3OUT_OF_SYNC	3-Error	[chars]: failure code 0x[hex]	The software SPA OIR state did not match the hardware state for the subslot in the error message. When this error occurs the system attempts automatic recovery by reloading the SPA. This condition is expected if a SPA is reloading when an RP switchover occurs. Otherwise this condition could be caused by a software firmware or hardware problem but a firmware or software problem is more likely. This condition could also be caused by a rare interaction between SPA and its SIP.	-	<del>SACRAUTORECOVERY/CDN</del>

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SPA_OIR3OUT_OF_SYNC	3-Error	[chars]: failure code 0x[hex]	The software SPA OIR state did not match the hardware state for the subslot in the error message. When this error occurs the system attempts automatic recovery by reloading the SPA. This condition is expected if a SPA is reloading when an RP switchover occurs. Otherwise this condition could be caused by a software firmware or hardware problem but a firmware or software problem is more likely. This condition could also be caused by a rare interaction between SPA and its SIP.	-	SPACRATORCOMBIN

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_OIR3OUT_OF_SYNC	3-Error	[chars]: failure code 0x[hex]	The software SPA OIR state did not match the hardware state for the subslot in the error message. When this error occurs the system attempts automatic recovery by reloading the SPA. This condition is expected if a SPA is reloading when an RP switchover occurs. Otherwise this condition could be caused by a software firmware or hardware problem but a firmware or software problem is more likely. This condition could also be caused by a rare interaction between SPA and its SIP.	-	<del>SACRAUTORECOVERY/CDN</del>

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<u>SPA_OIR3OUT_OF_SYNC</u>	3-Error	[chars]: failure code 0x[hec]	The software SPA OIR state did not match the hardware state for the subslot in the error message. When this error occurs the system attempts automatic recovery by reloading the SPA. This condition is expected if a SPA is reloading when an RP switchover occurs. Otherwise this condition could be caused by a software firmware or hardware problem but a firmware or software problem is more likely. This condition could also be caused by a rare interaction between SPA and its SIP.	-	<u>SPACRATORCOMRYACDN</u>
<u>SPACR3OISEVENTERRR</u>	3-Error	[chars]: event %u	A SPA OIR event message was not enqueued for the SPA in the slot or subslot specified in the error message. The SPA OIR state machines may not reflect the state of the hardware for this SPA. This condition is most likely due to a software problem.	spa-infra	<u>SPACR3OISEVENTERRR</u>

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SACR3OSEVENTERR</del>	3-Error	[chars]: event %u	A SPA OIR event message was not enqueued for the SPA in the slot or subslot specified in the error message. The SPA OIR state machines may not reflect the state of the hardware for this SPA. This condition is most likely due to a software problem.	spa-infra	<del>SACREVENTRCMB/ACDN</del>
<del>SACR3OSEVENTERR</del>	3-Error	[chars]: event %u	A SPA OIR event message was not enqueued for the SPA in the slot or subslot specified in the error message. The SPA OIR state machines may not reflect the state of the hardware for this SPA. This condition is most likely due to a software problem.	spa-infra	<del>SACREVENTRCMB/ACDN</del>
<del>SACR3OSEVENTERR</del>	3-Error	[chars]: event %u	A SPA OIR event message was not enqueued for the SPA in the slot or subslot specified in the error message. The SPA OIR state machines may not reflect the state of the hardware for this SPA. This condition is most likely due to a software problem.	spa-infra	<del>SACREVENTRCMB/ACDN</del>

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SPACR3RECOVERY_RELOAD	3-Error	[chars]: Attempting recovery by reloading SPA	The OIR facility attempted automatic recovery by reloading the SPA in the subslot specified in the error message. Look for other error messages related to this SPA subslot to determine the failure that triggered the automatic recovery.	-	LOG_SID_NO_ACTION
SPACR3RECOVERY_RELOAD	3-Error	[chars]: Attempting recovery by reloading SPA	The OIR facility attempted automatic recovery by reloading the SPA in the subslot specified in the error message. Look for other error messages related to this SPA subslot to determine the failure that triggered the automatic recovery.	-	LOG_SID_NO_ACTION
SPACR3RECOVERY_RELOAD	3-Error	[chars]: Attempting recovery by reloading SPA	The OIR facility attempted automatic recovery by reloading the SPA in the subslot specified in the error message. Look for other error messages related to this SPA subslot to determine the failure that triggered the automatic recovery.	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPA_CR</del> RECOVERY_LOAD	3-Error	[chars]: Attempting recovery by reloading SPA	The OIR facility attempted automatic recovery by reloading the SPA in the subslot specified in the error message. Look for other error messages related to this SPA subslot to determine the failure that triggered the automatic recovery.	-	LOG_STD_NO_ACTION
<del>SPA_CR</del> SPA_POWERED_OFF	3-Error	[chars]: SPA [chars] powered off after [node]failures within [node]seconds	The SPA was powered off because it failed too often. This condition may be caused by a software firmware or hardware error.	-	"Look for other error messages related to this SPA subslot to " "determine root cause of the failure." " <del>SPA_CR</del> RECOVERY_LOAD
<del>SPA_CR</del> SPA_POWERED_OFF	3-Error	[chars]: SPA [chars] powered off after [node]failures within [node]seconds	The SPA was powered off because it failed too often. This condition may be caused by a software firmware or hardware error.	-	"Look for other error messages related to this SPA subslot to " "determine root cause of the failure." " <del>SPA_CR</del> RECOVERY_LOAD
<del>SPA_CR</del> SPA_POWERED_OFF	3-Error	[chars]: SPA [chars] powered off after [node]failures within [node]seconds	The SPA was powered off because it failed too often. This condition may be caused by a software firmware or hardware error.	-	"Look for other error messages related to this SPA subslot to " "determine root cause of the failure." " <del>SPA_CR</del> RECOVERY_LOAD
<del>SPA_CR</del> SPA_POWERED_OFF	3-Error	[chars]: SPA [chars] powered off after [node]failures within [node]seconds	The SPA was powered off because it failed too often. This condition may be caused by a software firmware or hardware error.	-	"Look for other error messages related to this SPA subslot to " "determine root cause of the failure." " <del>SPA_CR</del> RECOVERY_LOAD

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SPA_OR3SWNI_TIMEOUT	3-Error	[chars]: SPA initialization not completed	A timeout occurred for the subslot specified in the error message while waiting for SPA software driver to initialize the SPA. The SPA did not complete initialization. When this error occurs the system attempts automatic recovery by reloading the SPA. This condition could be caused by software firmware or hardware problem but a software or firmware problem is more likely.	-	"Check for other messages reported for further insight. " "Hardware replacement should not occur first occurrence. " "Before requesting hardware replacement review troubleshooting logs " "with a Cisco technical support representative. " <u>SPACR4UORCOMRYACDN</u>
SPA_OR3SWNI_TIMEOUT	3-Error	[chars]: SPA initialization not completed	A timeout occurred for the subslot specified in the error message while waiting for SPA software driver to initialize the SPA. The SPA did not complete initialization. When this error occurs the system attempts automatic recovery by reloading the SPA. This condition could be caused by software firmware or hardware problem but a software or firmware problem is more likely.	-	"Check for other messages reported for further insight. " "Hardware replacement should not occur first occurrence. " "Before requesting hardware replacement review troubleshooting logs " "with a Cisco technical support representative. " <u>SPACR4UORCOMRYACDN</u>



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_CR3SW_NI_TIMEOUT	3-Error	[chars]: SPA initialization not completed	A timeout occurred for the subslot specified in the error message while waiting for SPA software driver to initialize the SPA. The SPA did not complete initialization. When this error occurs the system attempts automatic recovery by reloading the SPA. This condition could be caused by software firmware or hardware problem but a software or firmware problem is more likely.	-	"Check for other messages reported for further insight. " "Hardware replacement should not occur first occurrence. " "Before requesting hardware replacement review troubleshooting logs " "with a Cisco technical support representative. " <u>SPACR3SW_NI_TIMEOUT</u>
SPA_CR3SW_NI_TIMEOUT	3-Error	[chars]: SPA initialization not completed	A timeout occurred for the subslot specified in the error message while waiting for SPA software driver to initialize the SPA. The SPA did not complete initialization. When this error occurs the system attempts automatic recovery by reloading the SPA. This condition could be caused by software firmware or hardware problem but a software or firmware problem is more likely.	-	"Check for other messages reported for further insight. " "Hardware replacement should not occur first occurrence. " "Before requesting hardware replacement review troubleshooting logs " "with a Cisco technical support representative. " <u>SPACR3SW_NI_TIMEOUT</u>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA OIR UNEXPECTED EVENT	3-Error	[chars]: SPA OIR unexpected event%u	An unexpected SPA OIR event was detected for the SPA in the slot or subslot specified in the error message. The SPA OIR state machines may not reflect the state of the hardware for this SPA. This condition could be caused by software or hardware problem but a software problem is more likely. For distributed platforms SPA OIR messages are transported over different media depending on the platform for example c12000 uses the MBUS. An unlikely cause of this error is that an event message	spa-infra	SPA OIR UNEXPECTED EVENT

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_OIR_EXCEPTION	3-Error	[chars]: SPA OIR unexpected event%u	An unexpected SPA OIR event was detected for the SPA in the slot or subslot specified in the error message. The SPA OIR state machines may not reflect the state of the hardware for this SPA. This condition could be caused by software or hardware problem but a software problem is more likely. For distributed platforms SPA OIR messages are transported over different media depending on the platform for example c12000 uses the MBUS. An unlikely cause of this error is that an event message	spa-infra	SPA_OIR_EXCEPTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_OIR_EXCEEDED_EVENT	3-Error	[chars]: SPA OIR unexpected event%u	An unexpected SPA OIR event was detected for the SPA in the slot or subslot specified in the error message. The SPA OIR state machines may not reflect the state of the hardware for this SPA. This condition could be caused by software or hardware problem but a software problem is more likely. For distributed platforms SPA OIR messages are transported over different media depending on the platform for example c12000 uses the MBUS. An unlikely cause of this error is that an event message	spa-infra	SPA_OIR_EXCEEDED_EVENT

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SACR3UNEXHCIDEVENT	3-Error	[chars]: SPA OIR unexpected event%u	An unexpected SPA OIR event was detected for the SPA in the slot or subslot specified in the error message. The SPA OIR state machines may not reflect the state of the hardware for this SPA. This condition could be caused by software or hardware problem but a software problem is more likely. For distributed platforms SPA OIR messages are transported over different media depending on the platform for example c12000 uses the MBUS. An unlikely cause of this error is that an event message	spa-infra	SACR3UNEXHCIDEVENT

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPACRATORCOMB/ACTN	3-Error	[chars]: SPA [chars] unexpected recovery action[node]for fail code 0x[hec]	An error occurred while processing a failure message for the SPA in the slot or subslot number specified in the error message. The recovery action to be taken after a SPA failure is determined by calling a SPA driver function. This message indicates that the SPA driver function returned an invalid recovery action. After this message was issued the SPA was reloaded in an attempt to recover. The SPA driver most likely returned an invalid recovery action because of a software problem.	-	SPACRATORCOMB/ACTN

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SACRAJTORCOMB/ADN</del>	3-Error	[chars]: SPA [chars] unexpected recovery action[node]for fail code 0x[hec]	An error occurred while processing a failure message for the SPA in the slot or subslot number specified in the error message. The recovery action to be taken after a SPA failure is determined by calling a SPA driver function. This message indicates that the SPA driver function returned an invalid recovery action. After this message was issued the SPA was reloaded in an attempt to recover. The SPA driver most likely returned an invalid recovery action because of a software problem.	-	<del>SACRAJTORCOMB/ADN</del>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPACRATORCOMB/ACTN	3-Error	[chars]: SPA [chars] unexpected recovery action[node]for fail code 0x[hec]	An error occurred while processing a failure message for the SPA in the slot or subslot number specified in the error message. The recovery action to be taken after a SPA failure is determined by calling a SPA driver function. This message indicates that the SPA driver function returned an invalid recovery action. After this message was issued the SPA was reloaded in an attempt to recover. The SPA driver most likely returned an invalid recovery action because of a software problem.	-	SPACRATORCOMB/ACTN



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SACRAUIORCOMB/ADN</del>	3-Error	[chars]: SPA [chars] unexpected recovery action[node]for fail code 0x[hec]	An error occurred while processing a failure message for the SPA in the slot or subslot number specified in the error message. The recovery action to be taken after a SPA failure is determined by calling a SPA driver function. This message indicates that the SPA driver function returned an invalid recovery action. After this message was issued the SPA was reloaded in an attempt to recover. The SPA driver most likely returned an invalid recovery action because of a software problem.	-	<del>SACRAUIORCOMB/ADN</del>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_OR3UNRECOGNIZED	3-Error	The SPA of type 0x[node]in [chars] is not recognized	The type of the SPA in the specified subslot is not recognized by the operating system. The operating system might not support this SPA type on this platform or the SPA type identification stored on the SPA is invalid.	-	"Ensure that the system is running a version of the operating " "system that supports the SPA type specified in the error " "message on this platform. If the correct operating system " "version is in use copy the error message exactly as it " "appears on the console or in the system log contact your " "Cisco technical support representative and provide the " "representative with the gathered information. Include the " "information about the SPA type found on the front of the " "SPA."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_CR3UNRECOGNIZED	3-Error	The SPA of type 0x[node]in [chars] is not recognized	The type of the SPA in the specified subslot is not recognized by the operating system. The operating system might not support this SPA type on this platform or the SPA type identification stored on the SPA is invalid.	-	"Ensure that the system is running a version of the operating " "system that supports the SPA type specified in the error " "message on this platform. If the correct operating system " "version is in use copy the error message exactly as it " "appears on the console or in the system log contact your " "Cisco technical support representative and provide the " "representative with the gathered information. Include the " "information about the SPA type found on the front of the " "SPA."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_OR3UNRECOGNIZED	3-Error	The SPA of type 0x[node]in [chars] is not recognized	The type of the SPA in the specified subslot is not recognized by the operating system. The operating system might not support this SPA type on this platform or the SPA type identification stored on the SPA is invalid.	-	"Ensure that the system is running a version of the operating " "system that supports the SPA type specified in the error " "message on this platform. If the correct operating system " "version is in use copy the error message exactly as it " "appears on the console or in the system log contact your " "Cisco technical support representative and provide the " "representative with the gathered information. Include the " "information about the SPA type found on the front of the " "SPA."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_CR3UNRECOGNIZED	3-Error	The SPA of type 0x[node]in [chars] is not recognized	The type of the SPA in the specified subslot is not recognized by the operating system. The operating system might not support this SPA type on this platform or the SPA type identification stored on the SPA is invalid.	-	"Ensure that the system is running a version of the operating " "system that supports the SPA type specified in the error " "message on this platform. If the correct operating system " "version is in use copy the error message exactly as it " "appears on the console or in the system log contact your " "Cisco technical support representative and provide the " "representative with the gathered information. Include the " "information about the SPA type found on the front of the " "SPA."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_OR3UNSUPPORTED	3-Error	The [chars] in [chars] is not supported by the [chars] module	The SPA in the subslot specified in the error message is not supported in the specified SIP by the version of the operating system currently running on the system. The SPA type may be supported by another SIP or by a later operating system release.	-	"Ensure that the SIP specified in the error " "message supports the specified SPA type. Ensure that the " "operating system release supports the SPA type in the SIP. " "It may be necessary to upgrade your system to " "the latest operating system release in your release train or " "it may be necessary to use a different SIP type. If " "the SPA type specified in the error message does not match the " "interface types or numbers shown on the front of the SPA copy " "the error message exactly as it appears on the console or in " "the system log contact your Cisco technical support " "representative and provide the representative with the " "gathered information. Include information regarding the SPA " "type found on the front of the SPA."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_OIR3UNSUPPORTED	3-Error	The [chars] in [chars] is not supported by the [chars] module	The SPA in the subslot specified in the error message is not supported in the specified SIP by the version of the operating system currently running on the system. The SPA type may be supported by another SIP or by a later operating system release.	-	"Ensure that the SIP specified in the error " "message supports the specified SPA type. Ensure that the " "operating system release supports the SPA type in the SIP. " "It may be necessary to upgrade your system to " "the latest operating system release in your release train or " "it may be necessary to use a different SIP type. If " "the SPA type specified in the error message does not match the " "interface types or numbers shown on the front of the SPA copy " "the error message exactly as it appears on the console or in " "the system log contact your Cisco technical support " "representative and provide the representative with the " "gathered information. Include information regarding the SPA " "type found on the front of the SPA."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_OR3UNSUPPORTED	3-Error	The [chars] in [chars] is not supported by the [chars] module	The SPA in the subslot specified in the error message is not supported in the specified SIP by the version of the operating system currently running on the system. The SPA type may be supported by another SIP or by a later operating system release.	-	"Ensure that the SIP specified in the error " "message supports the specified SPA type. Ensure that the " "operating system release supports the SPA type in the SIP. " "It may be necessary to upgrade your system to " "the latest operating system release in your release train or " "it may be necessary to use a different SIP type. If " "the SPA type specified in the error message does not match the " "interface types or numbers shown on the front of the SPA copy " "the error message exactly as it appears on the console or in " "the system log contact your Cisco technical support " "representative and provide the representative with the " "gathered information. Include information regarding the SPA " "type found on the front of the SPA."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_OIR3UNSUPPORTED	3-Error	The [chars] in [chars] is not supported by the [chars] module	The SPA in the subslot specified in the error message is not supported in the specified SIP by the version of the operating system currently running on the system. The SPA type may be supported by another SIP or by a later operating system release.	-	"Ensure that the SIP specified in the error " "message supports the specified SPA type. Ensure that the " "operating system release supports the SPA type in the SIP. " "It may be necessary to upgrade your system to " "the latest operating system release in your release train or " "it may be necessary to use a different SIP type. If " "the SPA type specified in the error message does not match the " "interface types or numbers shown on the front of the SPA copy " "the error message exactly as it appears on the console or in " "the system log contact your Cisco technical support " "representative and provide the representative with the " "gathered information. Include information regarding the SPA " "type found on the front of the SPA."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SPA_OIR-6-INSCARD	6-Information	Card inserted in [chars]	The OIR facility detected a newly inserted SPA. The interfaces associated with that SPA are operational but will be shut down until they are configured by the user. If any interfaces of that type were previously configured they will be restored to their previous state.	-	LOG_SID_NO_ACTION
SPA_OIR-6-INSCARD	6-Information	Card inserted in [chars]	The OIR facility detected a newly inserted SPA. The interfaces associated with that SPA are operational but will be shut down until they are configured by the user. If any interfaces of that type were previously configured they will be restored to their previous state.	-	LOG_SID_NO_ACTION
SPA_OIR-6-INSCARD	6-Information	Card inserted in [chars]	The OIR facility detected a newly inserted SPA. The interfaces associated with that SPA are operational but will be shut down until they are configured by the user. If any interfaces of that type were previously configured they will be restored to their previous state.	-	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SPA_OIR-6-INSCARD	6-Information	Card inserted in [chars]	The OIR facility detected a newly inserted SPA. The interfaces associated with that SPA are operational but will be shut down until they are configured by the user. If any interfaces of that type were previously configured they will be restored to their previous state.	-	LOG_SID_NO_ACTION
SPA_OIR6OFFLINECARD	6-Information	SPA [chars] offline in [chars]	The OIR facility detected the state change to offline for the SPA in the slot or subslot number specified in the message.	-	LOG_SID_NO_ACTION
SPA_OIR6OFFLINECARD	6-Information	SPA [chars] offline in [chars]	The OIR facility detected the state change to offline for the SPA in the slot or subslot number specified in the message.	-	LOG_SID_NO_ACTION
SPA_OIR6OFFLINECARD	6-Information	SPA [chars] offline in [chars]	The OIR facility detected the state change to offline for the SPA in the slot or subslot number specified in the message.	-	LOG_SID_NO_ACTION
SPA_OIR6OFFLINECARD	6-Information	SPA [chars] offline in [chars]	The OIR facility detected the state change to offline for the SPA in the slot or subslot number specified in the message.	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_OIR:6ONLINECARD	6-Information	SPA [chars] online in [chars]	The OIR facility detected the state change to online for the SPA in the slot or subslot number specified in the message.	-	LOG_SID_NO_ACTION
SPA_OIR:6ONLINECARD	6-Information	SPA [chars] online in [chars]	The OIR facility detected the state change to online for the SPA in the slot or subslot number specified in the message.	-	LOG_SID_NO_ACTION
SPA_OIR:6ONLINECARD	6-Information	SPA [chars] online in [chars]	The OIR facility detected the state change to online for the SPA in the slot or subslot number specified in the message.	-	LOG_SID_NO_ACTION
SPA_OIR:6ONLINECARD	6-Information	SPA [chars] online in [chars]	The OIR facility detected the state change to online for the SPA in the slot or subslot number specified in the message.	-	LOG_SID_NO_ACTION
SPACR:6CONG:MATCH	6-Information	[chars]: Inserted SPA type does not match preconfigured SPA type. Configuration updated	This message reports a mismatch between the inserted SPA type and the preconfigured SPA type on platforms that support pre-configuration. The inserted SPA replaces the preconfigured SPA.	-	"Check the configuration with the <CmdBold>show run<NoCmdBold> command. " "If you would like to revert to the preconfigured type remove the SPA " "and then update the configuration from a backup"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPACONFIGMACH</del>	6-Information	[chars]: Inserted SPA type does not match preconfigured SPA type. Configuration updated	This message reports a mismatch between the inserted SPA type and the preconfigured SPA type on platforms that support pre-configuration. The inserted SPA replaces the preconfigured SPA.	-	"Check the configuration with the <CmdBold>show run<NoCmdBold> command. " "If you would like to revert to the preconfigured type remove the SPA " "and then update the configuration from a backup"
<del>SPACONFIGMACH</del>	6-Information	[chars]: Inserted SPA type does not match preconfigured SPA type. Configuration updated	This message reports a mismatch between the inserted SPA type and the preconfigured SPA type on platforms that support pre-configuration. The inserted SPA replaces the preconfigured SPA.	-	"Check the configuration with the <CmdBold>show run<NoCmdBold> command. " "If you would like to revert to the preconfigured type remove the SPA " "and then update the configuration from a backup"
<del>SPACONFIGMACH</del>	6-Information	[chars]: Inserted SPA type does not match preconfigured SPA type. Configuration updated	This message reports a mismatch between the inserted SPA type and the preconfigured SPA type on platforms that support pre-configuration. The inserted SPA replaces the preconfigured SPA.	-	"Check the configuration with the <CmdBold>show run<NoCmdBold> command. " "If you would like to revert to the preconfigured type remove the SPA " "and then update the configuration from a backup"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SPA_OIR-6-REMCARD	6-Information	Card removed from [chars] interfaces disabled	The OIR facility detected the removal of a SPA from the slot or subslot number specified in the error message. The interfaces on that SPA will be administratively shut down and marked as removed. The routing table will be flushed of any routes through the removed interfaces.	-	LOG_SID_NO_ACTION
SPA_OIR-6-REMCARD	6-Information	Card removed from [chars] interfaces disabled	The OIR facility detected the removal of a SPA from the slot or subslot number specified in the error message. The interfaces on that SPA will be administratively shut down and marked as removed. The routing table will be flushed of any routes through the removed interfaces.	-	LOG_SID_NO_ACTION
SPA_OIR-6-REMCARD	6-Information	Card removed from [chars] interfaces disabled	The OIR facility detected the removal of a SPA from the slot or subslot number specified in the error message. The interfaces on that SPA will be administratively shut down and marked as removed. The routing table will be flushed of any routes through the removed interfaces.	-	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SPA_OIR-6-REMCARD	6-Information	Card removed from [chars] interfaces disabled	The OIR facility detected the removal of a SPA from the slot or subslot number specified in the error message. The interfaces on that SPA will be administratively shut down and marked as removed. The routing table will be flushed of any routes through the removed interfaces.	-	LOG_STD_NO_ACTION
SPA_PLIM-3-ERRMSG	3-Error	[chars] [chars]	The error message in parentheses was logged by the SPA.	-	SPA_SID_SH_TECH_ACTION
SPA_PLIM-3-ERRMSG	3-Error	[chars] [chars]	The error message in parentheses was logged by the SPA.	-	SPA_SID_SH_TECH_ACTION
SPA_PLIM-3-ERRMSG	3-Error	[chars] [chars]	The error message in parentheses was logged by the SPA.	-	SPA_SID_SH_TECH_ACTION
SPA_PLIM3FATALERROR	3-Error	SPA in slot [dec] bay [dec] experienced a fatal error [chars] and is being reset.	A fatal error was encountered during SPA operation. The SPA may be restarted.	-	"If the error is not observed more than once it might be " "a one off event and the SPA needs to be monitored. " "If the issue occurs repeatedly " LOG_STD_ACTION
SPA_PLIM3FATALERROR	3-Error	SPA in slot [dec] bay [dec] experienced a fatal error [chars] and is being reset.	A fatal error was encountered during SPA operation. The SPA may be restarted.	-	"If the error is not observed more than once it might be " "a one off event and the SPA needs to be monitored. " "If the issue occurs repeatedly " LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_HLM3FATALERROR	3-Error	SPA in slot [dec] bay [dec] experienced a fatal error [chars] and is being reset.	A fatal error was encountered during SPA operation. The SPA may be restarted.	-	"If the error is not observed more than once it might be " "a one off event and the SPA needs to be monitored. " "If the issue occurs repeatedly " LOG_STD_ACTION
SPA_HLM3E_NOSICRED	3-Error	NULL	This error is seen when storing a file for a SPA to router removable flash failed. The partial file is removed from router removable flash.	spa-ser-infra	"If the error message occurs repeatedly " LOG_STD_ACTION
SPA_HLM3E_NOSICRED	3-Error	NULL	This error is seen when storing a file for a SPA to router removable flash failed. The partial file is removed from router removable flash.	spa-ser-infra	"If the error message occurs repeatedly " LOG_STD_ACTION
SPA_HLM3E_NOSICRED	3-Error	NULL	This error is seen when storing a file for a SPA to router removable flash failed. The partial file is removed from router removable flash.	spa-ser-infra	"If the error message occurs repeatedly " LOG_STD_ACTION
SPA_HLM3E_CREATE_FATAL	3-Error	NULL	Check router and make sure it has installed removable flash card or disk e.g. <CmdAg>#0-N<CmdAg> <CmdAg>#1-N<CmdAg> <CmdAg>#0-N<CmdAg> etc.. If the flash is present make sure	spa-ser-infra	"Check router removable disk and make sure it has empty " "storage space. If the flash disk is short of space remove some files from " "the flash. If the message occurs repeatedly " LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPA_HM3HLCREAFAL</del>	3-Error	NULL	Check router and make sure it has installed removable flash card or disk e.g. <del>CmAg-dk-NCmAg</del> <del>CmAg-dk-NCmAg</del> <del>CmAg-dk-NCmAg</del> etc.. If the flash is present make sure	spa-ser-infra	"Check router removable disk and make sure it has empty " "storage space. If the flash disk is short of space remove some files from " "the flash. If the message occurs repeatedly " LOG_STD_ACTION
<del>SPA_HM3HLCREAFAL</del>	3-Error	NULL	Check router and make sure it has installed removable flash card or disk e.g. <del>CmAg-dk-NCmAg</del> <del>CmAg-dk-NCmAg</del> <del>CmAg-dk-NCmAg</del> etc.. If the flash is present make sure	spa-ser-infra	"Check router removable disk and make sure it has empty " "storage space. If the flash disk is short of space remove some files from " "the flash. If the message occurs repeatedly " LOG_STD_ACTION
<del>SPA_HM3HFORWARDAL</del>	3-Error	[chars] failed to transfer a file from SPA to router flash due to IPC [chars].	A file transfer failed due to IPC errors. The file has not been stored in the flash.	spa-ser-infra	"Check flash disk for empty storage space. If it " "is short of space remove some files from the flash. If the message " "occurs repeatedly " LOG_STD_ACTION
<del>SPA_HM3HFORWARDAL</del>	3-Error	[chars] failed to transfer a file from SPA to router flash due to IPC [chars].	A file transfer failed due to IPC errors. The file has not been stored in the flash.	spa-ser-infra	"Check flash disk for empty storage space. If it " "is short of space remove some files from the flash. If the message " "occurs repeatedly " LOG_STD_ACTION
<del>SPA_HM3HFORWARDAL</del>	3-Error	[chars] failed to transfer a file from SPA to router flash due to IPC [chars].	A file transfer failed due to IPC errors. The file has not been stored in the flash.	spa-ser-infra	"Check flash disk for empty storage space. If it " "is short of space remove some files from the flash. If the message " "occurs repeatedly " LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SPA_PLM3FW_RELOAD	3-Error	[chars] is being reloaded due to firmware/application exception.	Firmware application failed at SPA. The SPA is being reloaded to recover its operational state.	spa-ser-infra	"Collect the application core file from flash. Core file name is " "shown in the preceding message with timestamp."
SPA_PLM3FW_RELOAD	3-Error	[chars] is being reloaded due to firmware/application exception.	Firmware application failed at SPA. The SPA is being reloaded to recover its operational state.	spa-ser-infra	"Collect the application core file from flash. Core file name is " "shown in the preceding message with timestamp."
SPA_PLM3FW_RELOAD	3-Error	[chars] is being reloaded due to firmware/application exception.	Firmware application failed at SPA. The SPA is being reloaded to recover its operational state.	spa-ser-infra	"Collect the application core file from flash. Core file name is " "shown in the preceding message with timestamp."
SPA_PLM3HEARTBEAT	3-Error	[chars] has experienced an heartbeat failure. Current Sequence [node]Received Sequence [node]Time since last keep [dec]ms.	The IPC communication between local CPU and host in the specified slot indicated in the message is not functional. The IPC module will be restarted. Following which communication might be re-established. If the problem persists the SPA will be reset.	-	"If the system continues running normally no action is required. " "If this message recurs or system behaves abnormally please " "collect the logs from the systemRP/SIP. Capture the output of "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_PLIM-3-HEARTBEAT	3-Error	[chars] has experienced an heartbeat failure. Current Sequence [node]Received Sequence [node]Time since last keep [dec]ms.	The IPC communication between local CPU and host in the specified slot indicated in the message is not functional. The IPC module will be restarted. Following which communication might be re-established. If the problem persists the SPA will be reset.	-	"If the system continues running normally no action is required. " "If this message recurs or system behaves abnormally please " "collect the logs from the systemRP/SIP. Capture the output of "
SPA_PLIM-3-HEARTBEAT	3-Error	[chars] has experienced an heartbeat failure. Current Sequence [node]Received Sequence [node]Time since last keep [dec]ms.	The IPC communication between local CPU and host in the specified slot indicated in the message is not functional. The IPC module will be restarted. Following which communication might be re-established. If the problem persists the SPA will be reset.	-	"If the system continues running normally no action is required. " "If this message recurs or system behaves abnormally please " "collect the logs from the systemRP/SIP. Capture the output of "
SPA_PLIM-3-INIT_PORT	3-Error	[chars] PLIM client IPC port has not been initialized.	-	spa-ser-infra	show ipc status
SPA_PLIM-3-INIT_PORT	3-Error	[chars] PLIM client IPC port has not been initialized.	-	spa-ser-infra	show ipc status
SPA_PLIM-3-INIT_PORT	3-Error	[chars] PLIM client IPC port has not been initialized.	-	spa-ser-infra	show ipc status

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SPA_PLIM3-INITFAIL	3-Error	[chars] has failed initialization because SPA [chars].	A failure occurred during the SPA initialization. SPA is not functional and may be restarted by RP or SIP.	-	"If the SIP or RP successfully initialized the SPA " "no action is required. If the SPA was not successfully " "initialized " LOG_STD_ACTION
SPA_PLIM3-INITFAIL	3-Error	[chars] has failed initialization because SPA [chars].	A failure occurred during the SPA initialization. SPA is not functional and may be restarted by RP or SIP.	-	"If the SIP or RP successfully initialized the SPA " "no action is required. If the SPA was not successfully " "initialized " LOG_STD_ACTION
SPA_PLIM3-INITFAIL	3-Error	[chars] has failed initialization because SPA [chars].	A failure occurred during the SPA initialization. SPA is not functional and may be restarted by RP or SIP.	-	"If the SIP or RP successfully initialized the SPA " "no action is required. If the SPA was not successfully " "initialized " LOG_STD_ACTION
SPA_PLIM3SW_ERROR	3-Error	NULL	-	spa-ser-infra	LOG_STD_ACTION
SPA_PLIM3SW_ERROR	3-Error	NULL	-	spa-ser-infra	LOG_STD_ACTION
SPA_PLIM3SW_ERROR	3-Error	NULL	-	spa-ser-infra	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_PLIM4EXCEPTION	4-Warning	[chars] has experienced an exception: [chars]. Writing SPA crash dump information to [chars].	The local CPU in the specified slot indicated in the message has experienced the exception condition. The process that caused the exception might have been restarted. If an exception core dump was created core dump is stored in the SIP flash if available.	-	"If the system continues running normally no action is required. "If this message recurs or system behaves abnormally please "collect the crash dump file from SIP flash capture the output of "the <CmdBold>show hw-module slot/subslot tech-support-NoCmdBold> " "command and open a case with the Technical Assistance Center via " <a href="http://www.cisco.com/techassist">http://www.cisco.com/techassist</a>
SPA_PLIM4EXCEPTION	4-Warning	[chars] has experienced an exception: [chars]. Writing SPA crash dump information to [chars].	The local CPU in the specified slot indicated in the message has experienced the exception condition. The process that caused the exception might have been restarted. If an exception core dump was created core dump is stored in the SIP flash if available.	-	"If the system continues running normally no action is required. "If this message recurs or system behaves abnormally please "collect the crash dump file from SIP flash capture the output of "the <CmdBold>show hw-module slot/subslot tech-support-NoCmdBold> " "command and open a case with the Technical Assistance Center via " <a href="http://www.cisco.com/techassist">http://www.cisco.com/techassist</a>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_PLIM4EXCEPTION	4-Warning	[chars] has experienced an exception: [chars]. Writing SPA crash dump information to [chars].	The local CPU in the specified slot indicated in the message has experienced the exception condition. The process that caused the exception might have been restarted. If an exception core dump was created core dump is stored in the SIP flash if available.	-	"If the system continues running normally no action is required. " "If this message recurs or system behaves abnormally please " "collect the crash dump file from SIP flash capture the output of " "the <CmdBold>show hw-module slot/subslot tech-support</CmdBold> " "command and open a case with the Technical Assistance Center via " " <a href="http://www.cisco.com/techassist">http://www.cisco.com/techassist</a> "
SPA_PLIM4SBE_ECC	4-Warning	[chars] reports [dec] SBE occurrence at [dec] addresses	SPA has reported single bit correctable ECC errors.	spa-ser-infra	"The log shows more than 1 SBE has occurred. " "SBEs are correctable memory problems. It will not affect router operation." "Excessive occurrences indicate potential memory defections. Standard " "action is to watch at first occurrence and replace at the first chance " "when recurs."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_PLIM4-SBE_ECC	4-Warning	[chars] reports [dec] SBE occurrence at [dec] addresses	SPA has reproted single bit correctable ECC errors.	spa-ser-infra	"The log shows more than 1 SBE has occurred. " "SBEs are correctable memory problems. It will not affect router operation." "Excessive occurrences indicate potential memory defections. Standard " "action is to watch at first occurrence and replace at the first chance " "when recurs."
SPA_PLIM4-SBE_ECC	4-Warning	[chars] reports [dec] SBE occurrence at [dec] addresses	SPA has reproted single bit correctable ECC errors.	spa-ser-infra	"The log shows more than 1 SBE has occurred. " "SBEs are correctable memory problems. It will not affect router operation." "Excessive occurrences indicate potential memory defections. Standard " "action is to watch at first occurrence and replace at the first chance " "when recurs."
SPA_HM4SBE_OVERFLOW	4-Warning	[chars] SBE table[dec] elements overflows.	SPA has reproted more unique single bit correctable ECC errors than the platform defined internal table can hold.	spa-ser-infra	"Replace the fault memory chip at the earliest " "chance. SBEs are correctable memory problems. It will not affect router " "operation. Excessive occurrences indicate potential memory defections."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SPA_HLM4SBE_OVERFLOW	4-Warning	[chars] SBE table[dec] elements overflows.	SPA has reported more unique single bit correctable ECC errors than the platform defined internal table can hold.	spa-ser-infra	"Replace the fault memory chip at the earliest " "chance. SBEs are correctable memory problems. It will not affect router " "operation. Excessive occurrences indicate potential memory defections."
SPA_HLM4SBE_OVERFLOW	4-Warning	[chars] SBE table[dec] elements overflows.	SPA has reported more unique single bit correctable ECC errors than the platform defined internal table can hold.	spa-ser-infra	"Replace the fault memory chip at the earliest " "chance. SBEs are correctable memory problems. It will not affect router " "operation. Excessive occurrences indicate potential memory defections."
SPA_HLM5RECEMNGHLE	5-Notice	Receiving [chars] from [chars] and storing to [chars].	SPA has sent a file syslog or core dump to RP and	-	LOG_SID_DBG_ACTION
SPA_HLM5RECEMNGHLE	5-Notice	Receiving [chars] from [chars] and storing to [chars].	SPA has sent a file syslog or core dump to RP and	-	LOG_SID_DBG_ACTION
SPA_HLM5RECEMNGHLE	5-Notice	Receiving [chars] from [chars] and storing to [chars].	SPA has sent a file syslog or core dump to RP and	-	LOG_SID_DBG_ACTION
SPA_PLUGIN3ALLOC_ERR	3-Error	[chars]: Failed to allocate memory	Failed to allocate the required memory for the data	spa-infra	show ipc status
SPA_PLUGIN3ALLOC_ERR	3-Error	[chars]: Failed to allocate memory	Failed to allocate the required memory for the data	spa-infra	show ipc status
SPA_PLUGIN3ALLOC_ERR	3-Error	[chars]: Failed to allocate memory	Failed to allocate the required memory for the data	spa-infra	show ipc status



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SPA_HLCN3AUXC2W_CREATE	3-Error	[chars]: Device auxiliary C2W creation failed.	Can not allocate memory for auxiliary C2W structure.	-	LOG_SID_REDUCE_ACTION
SPA_HLCN3AUXC2W_CREATE	3-Error	[chars]: Device auxiliary C2W creation failed.	Can not allocate memory for auxiliary C2W structure.	-	LOG_SID_REDUCE_ACTION
SPA_HLCN3AUXC2W_CREATE	3-Error	[chars]: Device auxiliary C2W creation failed.	Can not allocate memory for auxiliary C2W structure.	-	LOG_SID_REDUCE_ACTION
SPA_HLCN3EHROM_READ	3-Error	[chars]: Error reading EEPROM.	Can not read EEPROM content. It indicates either a not properly seated SPA or a hardware failure	-	SPA_SID_RESEAT_ACTION
SPA_HLCN3EHROM_READ	3-Error	[chars]: Error reading EEPROM.	Can not read EEPROM content. It indicates either a not properly seated SPA or a hardware failure	-	SPA_SID_RESEAT_ACTION
SPA_HLCN3EHROM_READ	3-Error	[chars]: Error reading EEPROM.	Can not read EEPROM content. It indicates either a not properly seated SPA or a hardware failure	-	SPA_SID_RESEAT_ACTION
SPA_HLCN3HC_NOISYNC	3-Error	[chars]: Can not synchronize EFC bus.	Extended flow control between modular services card and SPA is not synchronized. SPA is shut down. It indicates either a not properly seated SPA a hardware failure or an outdated ROMMON/FPGA image.	-	SPA_SID_RESEAT_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SPA_PLUGIN3EFCNOISYNC	3-Error	[chars]: Can not synchronize EFC bus.	Extended flow control between modular services card and SPA is not synchronized. SPA is shut down. It indicates either a not properly seated SPA a hardware failure or an outdated ROMMON/FPGA image.	-	SPA_SID_RESEAT_ACTION
SPA_PLUGIN3EFCNOISYNC	3-Error	[chars]: Can not synchronize EFC bus.	Extended flow control between modular services card and SPA is not synchronized. SPA is shut down. It indicates either a not properly seated SPA a hardware failure or an outdated ROMMON/FPGA image.	-	SPA_SID_RESEAT_ACTION
SPA_PLUGIN3ENV_INIT	3-Error	[chars]: Environment monitoring initialization failed.	-	-	LOG_SID_SH_TECH_ACTION
SPA_PLUGIN3ENV_INIT	3-Error	[chars]: Environment monitoring initialization failed.	-	-	LOG_SID_SH_TECH_ACTION
SPA_PLUGIN3ENV_INIT	3-Error	[chars]: Environment monitoring initialization failed.	-	-	LOG_SID_SH_TECH_ACTION
SPA_PLUGIN3EXCEPTION	3-Error	[chars]: Exception with cause [dec].	One of SPA software components crashes.	spa-ser-infra	LOG_SID_SH_TECH_ACTION
SPA_PLUGIN3EXCEPTION	3-Error	[chars]: Exception with cause [dec].	One of SPA software components crashes.	spa-ser-infra	LOG_SID_SH_TECH_ACTION
SPA_PLUGIN3EXCEPTION	3-Error	[chars]: Exception with cause [dec].	One of SPA software components crashes.	spa-ser-infra	LOG_SID_SH_TECH_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SPA_PLUGIN3-FAILED	3-Error	[chars]: Plugin initialization failed.	Plugin initialization can fail for many reasons. Preceding messages may state the cause.	spa-ser-infra	LOG_SID_SH_TECH_ACTION
SPA_PLUGIN3-FAILED	3-Error	[chars]: Plugin initialization failed.	Plugin initialization can fail for many reasons. Preceding messages may state the cause.	spa-ser-infra	LOG_SID_SH_TECH_ACTION
SPA_PLUGIN3-FAILED	3-Error	[chars]: Plugin initialization failed.	Plugin initialization can fail for many reasons. Preceding messages may state the cause.	spa-ser-infra	LOG_SID_SH_TECH_ACTION
SPA_PLUGIN3FILE_ERROR	3-Error	[chars]: Error accessing file [chars].	Specified file is not found lack of permission out of space or other file system/device errors.	spa-ser-infra	LOG_SID_SH_TECH_ACTION
SPA_PLUGIN3FILE_ERROR	3-Error	[chars]: Error accessing file [chars].	Specified file is not found lack of permission out of space or other file system/device errors.	spa-ser-infra	LOG_SID_SH_TECH_ACTION
SPA_PLUGIN3FILE_ERROR	3-Error	[chars]: Error accessing file [chars].	Specified file is not found lack of permission out of space or other file system/device errors.	spa-ser-infra	LOG_SID_SH_TECH_ACTION
SPA_PLUGIN3FILE_TRANSFER	3-Error	[chars]: Failed to transfer file to or from SPA.	Failed to transfer a file to or from SPA. It might be caused by lack of memory on SPA or jacket card IPC failures improperly seated SPA or other errors.	spa-ser-infra	SPA_SID_RESET_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SPA_HLCSFILE_TRANSFER</del>	3-Error	[chars]: Failed to transfer file to or from SPA.	Failed to transfer a file to or from SPA. It might be caused by lack of memory on SPA or jacket card IPC failures improperly seated SPA or other errors.	spa-ser-infra	SPA_SID_RESEAT_ACTION
<del>SPA_HLCSFILE_TRANSFER</del>	3-Error	[chars]: Failed to transfer file to or from SPA.	Failed to transfer a file to or from SPA. It might be caused by lack of memory on SPA or jacket card IPC failures improperly seated SPA or other errors.	spa-ser-infra	SPA_SID_RESEAT_ACTION
<del>SPA_FIRMWARE_DOWNLOAD</del>	3-Error	[chars]: Firmware application download failed.	Failed to download application image to SPA. It may be caused by either lack of memory on SPA IPC failures improperly seated SPA or other download errors.	spa-ser-infra	SPA_SID_RESEAT_ACTION
<del>SPA_FIRMWARE_DOWNLOAD</del>	3-Error	[chars]: Firmware application download failed.	Failed to download application image to SPA. It may be caused by either lack of memory on SPA IPC failures improperly seated SPA or other download errors.	spa-ser-infra	SPA_SID_RESEAT_ACTION
<del>SPA_FIRMWARE_DOWNLOAD</del>	3-Error	[chars]: Firmware application download failed.	Failed to download application image to SPA. It may be caused by either lack of memory on SPA IPC failures improperly seated SPA or other download errors.	spa-ser-infra	SPA_SID_RESEAT_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<u>S</u> <u>P</u> <u>A</u> <u>L</u> <u>C</u> <u>N</u> <u>R</u> <u>M</u> <u>W</u> <u>A</u> <u>R</u> <u>E</u> <u>A</u> <u>P</u> <u>S</u> <u>S</u> <u>A</u> <u>R</u> <u>P</u>	3-Error	[chars]: Firmware application startup failed. SPA status0x[node]x host status0x[node]x	Can not start application image downloaded to SPA. Possible causes might be either bad image on SIP flash disk hardware failure or outdated FPGA and/or ROMMON image.	spa-ser-infra	LOG_SID_SH_TECH_ACTION
<u>S</u> <u>P</u> <u>A</u> <u>L</u> <u>C</u> <u>N</u> <u>R</u> <u>M</u> <u>W</u> <u>A</u> <u>R</u> <u>E</u> <u>A</u> <u>P</u> <u>S</u> <u>S</u> <u>A</u> <u>R</u> <u>P</u>	3-Error	[chars]: Firmware application startup failed. SPA status0x[node]x host status0x[node]x	Can not start application image downloaded to SPA. Possible causes might be either bad image on SIP flash disk hardware failure or outdated FPGA and/or ROMMON image.	spa-ser-infra	LOG_SID_SH_TECH_ACTION
<u>S</u> <u>P</u> <u>A</u> <u>L</u> <u>C</u> <u>N</u> <u>R</u> <u>M</u> <u>W</u> <u>A</u> <u>R</u> <u>E</u> <u>A</u> <u>P</u> <u>S</u> <u>S</u> <u>A</u> <u>R</u> <u>P</u>	3-Error	[chars]: Firmware application startup failed. SPA status0x[node]x host status0x[node]x	Can not start application image downloaded to SPA. Possible causes might be either bad image on SIP flash disk hardware failure or outdated FPGA and/or ROMMON image.	spa-ser-infra	LOG_SID_SH_TECH_ACTION
<u>S</u> <u>P</u> <u>A</u> <u>L</u> <u>C</u> <u>N</u> <u>R</u> <u>M</u> <u>W</u> <u>A</u> <u>R</u> <u>E</u> <u>B</u> <u>D</u> <u>M</u> <u>C</u> <u>E</u>	3-Error	[chars]: Firmware file [chars] read failed.	Firmware image pointed by the path is not valid.	spa-ser-infra	LOG_STD_ACTION
<u>S</u> <u>P</u> <u>A</u> <u>L</u> <u>C</u> <u>N</u> <u>R</u> <u>M</u> <u>W</u> <u>A</u> <u>R</u> <u>E</u> <u>B</u> <u>D</u> <u>M</u> <u>C</u> <u>E</u>	3-Error	[chars]: Firmware file [chars] read failed.	Firmware image pointed by the path is not valid.	spa-ser-infra	LOG_STD_ACTION
<u>S</u> <u>P</u> <u>A</u> <u>L</u> <u>C</u> <u>N</u> <u>R</u> <u>M</u> <u>W</u> <u>A</u> <u>R</u> <u>E</u> <u>B</u> <u>D</u> <u>M</u> <u>C</u> <u>E</u>	3-Error	[chars]: Firmware file [chars] read failed.	Firmware image pointed by the path is not valid.	spa-ser-infra	LOG_STD_ACTION
<u>S</u> <u>P</u> <u>A</u> <u>L</u> <u>C</u> <u>N</u> <u>R</u> <u>M</u> <u>W</u> <u>A</u> <u>R</u> <u>E</u> <u>B</u> <u>D</u> <u>M</u> <u>C</u> <u>H</u>	3-Error	[chars]: Invalid firmware file path [chars].	Specified firmware file path is invalid. This is a software error.	spa-ser-infra	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SPA_LCNRMWRE_BADPATH</del>	3-Error	[chars]: Invalid firmware file path [chars].	Specified fireware file path is invalid. This is a software error.	spa-ser-infra	LOG_STD_ACTION
<del>SPA_LCNRMWRE_BADPATH</del>	3-Error	[chars]: Invalid firmware file path [chars].	Specified fireware file path is invalid. This is a software error.	spa-ser-infra	LOG_STD_ACTION
<del>SPA_LCNRMWRE_DOWNLOAD</del>	3-Error	[chars]: Firmware download failed.	Failed to download firmware image to SPA. It is caused by either lack of memory on SPA IPC failures improperly seated SPA or other download errors.	spa-ser-infra	SPA_SID_RESEAT_ACTION
<del>SPA_LCNRMWRE_DOWNLOAD</del>	3-Error	[chars]: Firmware download failed.	Failed to download firmware image to SPA. It is caused by either lack of memory on SPA IPC failures improperly seated SPA or other download errors.	spa-ser-infra	SPA_SID_RESEAT_ACTION
<del>SPA_LCNRMWRE_DOWNLOAD</del>	3-Error	[chars]: Firmware download failed.	Failed to download firmware image to SPA. It is caused by either lack of memory on SPA IPC failures improperly seated SPA or other download errors.	spa-ser-infra	SPA_SID_RESEAT_ACTION
<del>SPA_LCNRMWRE_MEMORY</del>	3-Error	[chars]: Insufficient memory for firmware file [chars] size [dec].	Can not allocate memory for firmware image for downloading to SPA.	spa-ser-infra	LOG_SID_REDUCE_ACTION
<del>SPA_LCNRMWRE_MEMORY</del>	3-Error	[chars]: Insufficient memory for firmware file [chars] size [dec].	Can not allocate memory for firmware image for downloading to SPA.	spa-ser-infra	LOG_SID_REDUCE_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPA_UCN_FIRMWARE_MEMORY</del>	3-Error	[chars]: Insufficient memory for firmware file [chars] size [dec].	Can not allocate memory for firmware image for downloading to SPA.	spa-ser-infra	LOG_SID_REDUCE_ACTION
<del>SPA_UCN_FIRMWARE_STARTUP</del>	3-Error	[chars]: Firmware startup failed. SPA status0x[node]x host status0x[node]x	Can not start Firmware image downloaded to SPA. Possible causes are either bad image on SIP flash disk hardware failures or outdated FPGA and/or ROMMON image.	spa-ser-infra	LOG_SID_SH_TECH_ACTION
<del>SPA_UCN_FIRMWARE_STARTUP</del>	3-Error	[chars]: Firmware startup failed. SPA status0x[node]x host status0x[node]x	Can not start Firmware image downloaded to SPA. Possible causes are either bad image on SIP flash disk hardware failures or outdated FPGA and/or ROMMON image.	spa-ser-infra	LOG_SID_SH_TECH_ACTION
<del>SPA_UCN_FIRMWARE_STARTUP</del>	3-Error	[chars]: Firmware startup failed. SPA status0x[node]x host status0x[node]x	Can not start Firmware image downloaded to SPA. Possible causes are either bad image on SIP flash disk hardware failures or outdated FPGA and/or ROMMON image.	spa-ser-infra	LOG_SID_SH_TECH_ACTION
<del>SPA_UCN_IOPFGA_CREATE</del>	3-Error	[chars]: Device IOFPGA creation failed.	Can not allocate memory for IOFPGA structure.	-	LOG_SID_REDUCE_ACTION
<del>SPA_UCN_IOPFGA_CREATE</del>	3-Error	[chars]: Device IOFPGA creation failed.	Can not allocate memory for IOFPGA structure.	-	LOG_SID_REDUCE_ACTION
<del>SPA_UCN_IOPFGA_CREATE</del>	3-Error	[chars]: Device IOFPGA creation failed.	Can not allocate memory for IOFPGA structure.	-	LOG_SID_REDUCE_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SPA_PLUGIN3-NOPLIM	3-Error	[chars]: No PLIM subblock.	Invalid pointer was passed in. Can not dereference PLIM subblock pointer. Internal error.	spa-ser-infra	LOG_SID_SH_TECH_ACTION
SPA_PLUGIN3-NOPLIM	3-Error	[chars]: No PLIM subblock.	Invalid pointer was passed in. Can not dereference PLIM subblock pointer. Internal error.	spa-ser-infra	LOG_SID_SH_TECH_ACTION
SPA_PLUGIN3-NOPLIM	3-Error	[chars]: No PLIM subblock.	Invalid pointer was passed in. Can not dereference PLIM subblock pointer. Internal error.	spa-ser-infra	LOG_SID_SH_TECH_ACTION
SPA_PLUGIN3-NOPORT	3-Error	[chars]: Failed to open IPC port.	PLIM client IPC port has not been initialized.	spa-ser-infra	show ipc status
SPA_PLUGIN3-NOPORT	3-Error	[chars]: Failed to open IPC port.	PLIM client IPC port has not been initialized.	spa-ser-infra	show ipc status
SPA_PLUGIN3-NOPORT	3-Error	[chars]: Failed to open IPC port.	PLIM client IPC port has not been initialized.	spa-ser-infra	show ipc status
SPA_PLUGIN3-NULL_SPA_PIR	3-Error	-	Pointer to a SPA object is NULL.	spa-infra	LOG_SID_SH_TECH_ACTION
SPA_PLUGIN3-NULL_SPA_PIR	3-Error	-	Pointer to a SPA object is NULL.	spa-infra	LOG_SID_SH_TECH_ACTION
SPA_PLUGIN3-NULL_SPA_PIR	3-Error	-	Pointer to a SPA object is NULL.	spa-infra	LOG_SID_SH_TECH_ACTION
SPA_PLUGIN3-PLIM_CREATE	3-Error	[chars]: PLIM subblock creation failed.	Can not allocate memory for PLIM structure.	spa-ser-infra	LOG_SID_REDUCE_ACTION
SPA_PLUGIN3-PLIM_CREATE	3-Error	[chars]: PLIM subblock creation failed.	Can not allocate memory for PLIM structure.	spa-ser-infra	LOG_SID_REDUCE_ACTION
SPA_PLUGIN3-PLIM_CREATE	3-Error	[chars]: PLIM subblock creation failed.	Can not allocate memory for PLIM structure.	spa-ser-infra	LOG_SID_REDUCE_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_PLUGIN3EXHAUSED	3-Error	[chars]: plugin initialization failedretries exhausted.	One or more critical conditions happened that prevented plugin initialization from moving forward after designated number of retries. Preceding messages may indicated failure cause.	-	LOGS_IDSHTTECH_ACTION
SPA_PLUGIN3EXHAUSED	3-Error	[chars]: plugin initialization failedretries exhausted.	One or more critical conditions happened that prevented plugin initialization from moving forward after designated number of retries. Preceding messages may indicated failure cause.	-	LOGS_IDSHTTECH_ACTION
SPA_PLUGIN3EXHAUSED	3-Error	[chars]: plugin initialization failedretries exhausted.	One or more critical conditions happened that prevented plugin initialization from moving forward after designated number of retries. Preceding messages may indicated failure cause.	-	LOGS_IDSHTTECH_ACTION
SPA_PLUGIN3ROMMON	3-Error	[chars]: ROMMON reports error. SPA status0x[node]x host status0x[node]x.	ROMMON has reported a fatal condition during boot up. It may be caused by outdated ROMMON/FPGA images or defected hardware.	spa-ser-infra	LOGS_IDSHTTECH_ACTION
SPA_PLUGIN3ROMMON	3-Error	[chars]: ROMMON reports error. SPA status0x[node]x host status0x[node]x.	ROMMON has reported a fatal condition during boot up. It may be caused by outdated ROMMON/FPGA images or defected hardware.	spa-ser-infra	LOGS_IDSHTTECH_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SPA_PLUGIN3ROMMON	3-Error	[chars]: ROMMON reports error. SPA status0x[node]x host status0x[node]x.	ROMMON has reported a fatal condition during boot up. It may be caused by outdated ROMMON/FPGA images or defected hardware.	spa-ser-infra	LOG_SID_SH_TECH_ACTION
SPA_PLUGIN3SPI4_CONFIG	3-Error	[chars]: Can not configure host side SPI4 profile.	SPI4 configuration from modular services card failed. It indicates either lack of system memory a hardware failure or an outdated ROMMON/FPGA image.	-	LOG_SID_SH_TECH_ACTION
SPA_PLUGIN3SPI4_CONFIG	3-Error	[chars]: Can not configure host side SPI4 profile.	SPI4 configuration from modular services card failed. It indicates either lack of system memory a hardware failure or an outdated ROMMON/FPGA image.	-	LOG_SID_SH_TECH_ACTION
SPA_PLUGIN3SPI4_CONFIG	3-Error	[chars]: Can not configure host side SPI4 profile.	SPI4 configuration from modular services card failed. It indicates either lack of system memory a hardware failure or an outdated ROMMON/FPGA image.	-	LOG_SID_SH_TECH_ACTION
SPA_PLUGIN3SPI4_CREATE	3-Error	[chars]: Device SPI4 creation failed.	Can not allocate memory for SPI4 structure.	spa-ser-infra	LOG_SID_REDUCE_ACTION
SPA_PLUGIN3SPI4_CREATE	3-Error	[chars]: Device SPI4 creation failed.	Can not allocate memory for SPI4 structure.	spa-ser-infra	LOG_SID_REDUCE_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SPA_PLUGIN3SPI4_CREATE	3-Error	[chars]: Device SPI4 creation failed.	Can not allocate memory for SPI4 structure.	spa-ser-infra	LOG_SID_REDUCE_ACTION
SPA_PLUGIN3SPI4_INIT	3-Error	[chars]: SPI4 initializaion failed.	-	-	LOG_SID_SH_TECH_ACTION
SPA_PLUGIN3SPI4_INIT	3-Error	[chars]: SPI4 initializaion failed.	-	-	LOG_SID_SH_TECH_ACTION
SPA_PLUGIN3SPI4_INIT	3-Error	[chars]: SPI4 initializaion failed.	-	-	LOG_SID_SH_TECH_ACTION
SPA_PLUGIN3SPI4_NOISYNC	3-Error	[chars]: Can not synchronize SPI4 bus.	SPI4 bus between modular services card and SPA is not synchronized. It indicates either a not properly seated SPA a hardware failure or an outdated ROMMON/FPGA image.	-	SPA_SID_RESEAT_ACTION
SPA_PLUGIN3SPI4_NOISYNC	3-Error	[chars]: Can not synchronize SPI4 bus.	SPI4 bus between modular services card and SPA is not synchronized. It indicates either a not properly seated SPA a hardware failure or an outdated ROMMON/FPGA image.	-	SPA_SID_RESEAT_ACTION
SPA_PLUGIN3SPI4_NOISYNC	3-Error	[chars]: Can not synchronize SPI4 bus.	SPI4 bus between modular services card and SPA is not synchronized. It indicates either a not properly seated SPA a hardware failure or an outdated ROMMON/FPGA image.	-	SPA_SID_RESEAT_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SPA_PLUGIN3SPI4_SEICB	3-Error	[chars]: IPC SPI4 set callback failedstatus [dec].	Can not setup a callback function for SPI4 bus. It might be caused by improperly seated SPA outdated or a hardware failure.	spa-ser-infra	SPA_SID_RESEAT_ACTION
SPA_PLUGIN3SPI4_SEICB	3-Error	[chars]: IPC SPI4 set callback failedstatus [dec].	Can not setup a callback function for SPI4 bus. It might be caused by improperly seated SPA outdated or a hardware failure.	spa-ser-infra	SPA_SID_RESEAT_ACTION
SPA_PLUGIN3SPI4_SEICB	3-Error	[chars]: IPC SPI4 set callback failedstatus [dec].	Can not setup a callback function for SPI4 bus. It might be caused by improperly seated SPA outdated or a hardware failure.	spa-ser-infra	SPA_SID_RESEAT_ACTION
SPA_PLUGIN3SPI4_SEICBPORT	3-Error	[chars]: IPC SPI4 set callback failederror: [dec] for port [dec].	Can not setup a callback function for SPI4 bus for the specified interface port. It might be caused by improperly seated SPA outdated ROMMON/FPGA or a hardware failure.	spa-ser-infra	SPA_SID_RESEAT_ACTION
SPA_PLUGIN3SPI4_SEICBPORT	3-Error	[chars]: IPC SPI4 set callback failederror: [dec] for port [dec].	Can not setup a callback function for SPI4 bus for the specified interface port. It might be caused by improperly seated SPA outdated ROMMON/FPGA or a hardware failure.	spa-ser-infra	SPA_SID_RESEAT_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_PLUGIN_SPI4_CBPORT	3-Error	[chars]: IPC SPI4 set callback failederror: [dec] for port [dec].	Can not setup a callback function for SPI4 bus for the specified interface port. It might be caused by improperly seated SPA outdated ROMMON/FPGA or a hardware failure.	spa-ser-infra	SPA_SID_RESEAT_ACTION
SPA_PLUGIN_UART_CREATE	3-Error	[chars]: Device UART creation failed.	Can not allocate memory for UART structure.	spa-ser-infra	LOG_SID_REDUCE_ACTION
SPA_PLUGIN_UART_CREATE	3-Error	[chars]: Device UART creation failed.	Can not allocate memory for UART structure.	spa-ser-infra	LOG_SID_REDUCE_ACTION
SPA_PLUGIN_UART_CREATE	3-Error	[chars]: Device UART creation failed.	Can not allocate memory for UART structure.	spa-ser-infra	LOG_SID_REDUCE_ACTION
SPA_PLUGIN4_LED_CREATE	4-Warning	[chars]: LED driver initialization failed.	Can not allocate memory for LED structure.	-	LOG_SID_REDUCE_ACTION
SPA_PLUGIN4_LED_CREATE	4-Warning	[chars]: LED driver initialization failed.	Can not allocate memory for LED structure.	-	LOG_SID_REDUCE_ACTION
SPA_PLUGIN4_LED_CREATE	4-Warning	[chars]: LED driver initialization failed.	Can not allocate memory for LED structure.	-	LOG_SID_REDUCE_ACTION
SPA_PLUGIN4_LED_READ	4-Warning	[chars]: LED read failed for port [dec] status [dec].	Can not read LED register values. It indicates either a not properly seated SPA or a hardware failure	-	SPA_SID_RESEAT_ACTION
SPA_PLUGIN4_LED_READ	4-Warning	[chars]: LED read failed for port [dec] status [dec].	Can not read LED register values. It indicates either a not properly seated SPA or a hardware failure	-	SPA_SID_RESEAT_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SPA_PLUGIN4LED_READ	4-Warning	[chars]: LED read failed for port [dec] status [dec].	Can not read LED register values. It indicates either a not properly seated SPA or a hardware failure	-	SPA_SID_RESEAT_ACTION
SPA_PLUGIN4LED_WRITE	4-Warning	[chars]: LED write failed for port [dec] status [dec].	Can not write to LED register. It indicates either a not properly seated SPA or a hardware failure	-	SPA_SID_RESEAT_ACTION
SPA_PLUGIN4LED_WRITE	4-Warning	[chars]: LED write failed for port [dec] status [dec].	Can not write to LED register. It indicates either a not properly seated SPA or a hardware failure	-	SPA_SID_RESEAT_ACTION
SPA_PLUGIN4LED_WRITE	4-Warning	[chars]: LED write failed for port [dec] status [dec].	Can not write to LED register. It indicates either a not properly seated SPA or a hardware failure	-	SPA_SID_RESEAT_ACTION
SPA_PLUGIN6EFC_SYNC	6-Information	[chars]: EFC bus synchronization achieved.	Extended flow control between modular services card and SPA is synchronized.	-	"None. Information only."
SPA_PLUGIN6EFC_SYNC	6-Information	[chars]: EFC bus synchronization achieved.	Extended flow control between modular services card and SPA is synchronized.	-	"None. Information only."
SPA_PLUGIN6EFC_SYNC	6-Information	[chars]: EFC bus synchronization achieved.	Extended flow control between modular services card and SPA is synchronized.	-	"None. Information only."
SPA_PLUGIN6FW_DOWNLOADING	6-Information	[chars]: Downloading SPA firmware application [chars]...	Downloading SPA firmware application .	-	"None. Information only."
SPA_PLUGIN6FW_DOWNLOADING	6-Information	[chars]: Downloading SPA firmware application [chars]...	Downloading SPA firmware application .	-	"None. Information only."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPA_CMR_FW_DOWNLOADG</del>	6-Information	[chars]: Downloading SPA firmware application [chars]...	Downloading SPA firmware application .	-	"None. Information only."
<del>SPA_CMR_FW_DOWNLOADG</del>	6-Information	[chars]: Downloading SPA firmware [chars]...	Downloading SPA firmware.	-	"None. Information only."
<del>SPA_CMR_FW_DOWNLOADG</del>	6-Information	[chars]: Downloading SPA firmware [chars]...	Downloading SPA firmware.	-	"None. Information only."
<del>SPA_CMR_FW_DOWNLOADG</del>	6-Information	[chars]: Downloading SPA firmware [chars]...	Downloading SPA firmware.	-	"None. Information only."
SPA_PLUGIN6SPI4_SYNC	6-Information	[chars]: SPI4 bus synchronization achieved.	SPI4 bus between modular services card and SPA is synchronized.	-	"None. Information only."
SPA_PLUGIN6SPI4_SYNC	6-Information	[chars]: SPI4 bus synchronization achieved.	SPI4 bus between modular services card and SPA is synchronized.	-	"None. Information only."
SPA_PLUGIN6SPI4_SYNC	6-Information	[chars]: SPI4 bus synchronization achieved.	SPI4 bus between modular services card and SPA is synchronized.	-	"None. Information only."
SPA_SE3AHL_BOOT_ERR	3-Error	[chars]: Application boot error detected [chars] with error [chars] error code = 0x[hec].	Service SPA application error was detected during booting of the SPA.	spa-butler-all	<del>BTERRAHLBOOTERR</del>
SPA_SE3AHL_BOOT_TIMEOUT	3-Error	[chars]: Timeout booting application image.	Initialization of service SPA timed out during booting of the sipspawmak9 sub-package. The system will attempt to reload the SPA to recover from the failure.	spa-butler-all	<del>BTERRAHLBOOTERR</del>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPASUB/3/DBGMOE	3-Error	Service engine [chars] has been booted in bootflash debug mode. This is an engineering use only mode and some or all of the SPA functions could be disabled.	The SPA was booted with <CmdBold>test hw-module subslot<NoCmdBold> <CmdBold>[chars]<NoCmdBold> <CmdBold>bootflash debug enable<NoCmdBold> configured. Disable this mode and reload the SPA for normal SPA operation.	spa-butler-all	LOG_SID_NO_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA4CHKSPA4CONNCR	3-Error	[chars]: SPI4 error was detected during bootup automatic reload operation will be attempted for recovering the SPA. Please make sure that the SPA is secured properly in the SIP slot.	SPI4 error has occurred during SPA bootup. The SPA has been deactivated and reactivated to resolve the problem. If the error occurs more than five times within an hour no further attempts to reactivate the SPA will be made. This message is likely due to bad connection of the SPA connector with the SIP slot.	spa-butler-all	"Pull out and reinsert the SPA to make secure connection " "with the SIP slot. Before removing the SPA make sure to stop the SPA " "by entering the <CmdBold>hw-module subslot<NoCmdBold> <CmdArg>slot#/" "subslot#<NoCmdArg> <CmdBold>sp<NoCmdBld command. Remove the SPA " "wait 5 seconds and reinsert the SPA into the SIP. If the problem " "persists check for physical damage in the connector of both SPA and " "SIP. If no damage is visible then copy the error message exactly as it " "appears and gather the output from the <CmdBold>show hw-module subslot" "<NoCmdBold> <CmdArg>num<NoCmdArg> <CmdBold>sp<NoCmdBld " "command from the SIP console then contact your Cisco technical support " "representative with the gathered information."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<b>SPA_SELF_CHECKING_DISK</b>	3-Error	[chars]: Disk is being checked because of previous unclean shutdown of the SPA or mount count limit reached. Boot time will take longer because of this operation e.g. 5 to 7 minute for a 250GB disk.	Checking of the disk file system is being performed to correct any error due to unclean shutdown of the SPA. Make sure that the SPA is properly shutdown before removing it from the system to prevent file system corruption.	spa-butler-all	LOG_SID_NO_ACTION
<b>SPA_DEFAULT_BOOT_MOT</b>	3-Error	[chars]: Timeout booting the default application image will attempt to boot the helper image.	Initialization of service SPA timed out during booting of the default application image the system will attempt to recover from the failure by trying to boot the helper image.	spa-butler-all	LOG_SID_NO_ACTION
<b>SPA_DISK_CHECK_ERROR</b>	3-Error	[chars]: Disk file system check error detected manual execution of disk checking operation will be required to correct this problem. The SPA will continue operating with reduced disk space.	An error was detected during automatic checking operation of disk file system integrity. The affected disk partition won't be mounted and this will prevent the SPA from operating under normal conditions. The ability to store error logging on the disk might not be available and any debugging information could be lost after a SPA reload. Performance of the SPA might also get affected because of the reduced memory storage.	spa-butler-all	<del>BUTLER_KISROS_ACTION</del>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA <del>DISK</del> CHKNGMOUT	3-Error	[chars]: Timeout checking the disk after more than [dec] seconds. Another attempt to check the disk will be done after the SPA reload.	The disk checking operation has not completed in the expected time frame. To recover from possible disk checking failure the SPA will be reloaded to allow a retry of the disk checking operation.	spa-butler-all	<a href="#">BUTLER_KISBROS_DACD</a>
SPA <del>DISK</del> MOUNTERRR	3-Error	[chars]: Disk mount error detected manual execution of disk checking operation might be required to correct this problem. The SPA will continue operating with reduced disk space.	Error were detected during mounting operation of disk partition. The affected disk partition won't be mounted this will prevent the SPA from operating at normal condition. Capability to store error logging on the disk might not be available and any debugging information could be lost after SPA reload. Performance of the SPA might also get affected because of the reduced memory storage.	spa-butler-all	<a href="#">BUTLER_KISBROS_DACD</a>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_DISK_NOT_PRESENT	3-Error	[chars]: Cannot detect the presence of disk drive on the SPA. Please check for loose cable connection to the drive. The SPA will continue operating without the disk.	The disk was not detected by the SPA during bootup and this will prevent the SPA from operating under normal conditions. The ability to store error logging on the disk will not be available and any debugging information will be lost after a SPA reload. Performance of the SPA might also get affected because of reduced memory storage.	spa-butler-all	<del>BTBKSPHROSDCN</del>
SPA_DISK_UNFORMATTED	3-Error	[chars]: The disk drive on the SPA it is not formatted. The SPA cannot use an unformatted disk. Please follow instructions in the Cisco IOS installation and configuration guide to perform the manual format operation. The SPA will continue operating without the disk.	The disk was not formatted and this will prevent the SPA from operating under normal conditions. The ability to store error logging on the disk will not be available and any debugging information will be lost after a SPA reload. Performance of the SPA might also get affected because of the reduced memory storage.	spa-butler-all	"Follow the instructions on the Cisco IOS installation and configuration "guide to format the disk drive to correct this problem."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_E1K_UNKNOWN_STA_E	3-Error	[chars]: The disk drive on the SPA is in a unknown operational state. Check for a loose cable connection to the drive. The SPA will continue operating without the disk.	The disk was in an unknown operational state during SPA bootup and this will prevent the SPA from operating under normal conditions. The ability to store error logging on the disk will not be available and any debugging information will be lost after a SPA reload. Performance of the SPA might also get affected because of the reduced memory storage.	spa-butler-all	BUTLER_MBRORS_DACDN
SPA_E13HELPER_BOOT_ERR	3-Error	[chars]: Helper image boot error detected [chars] error code = 0x[hec].	Service SPA helper image error was detected during booting of the SPA.	spa-butler-all	LOG_SID_NO_ACTION
SPA_E13MAINTENANCE_MODE	3-Error	Service engine [chars] has been booted in maintenance mode. This is an engineering use only mode and some or all of the SPA functions could be disabled.	The SPA was booted with <CmdBold>test hw-module subslot<NoCmdBold> <CmdAg> slot#<NoCmdAg> <CmdBold> maintenance mode enable<NoCmdBold> configured. Disable this mode and reload the SPA for normal SPA operation	spa-butler-all	LOG_SID_NO_ACTION
SPA_E13MEM_CRUBST_ERR	3-Error	[chars]: CPU BIST failure detected with error [chars] error code = 0x[hec].	The service SPA CPU Build-In Self Test BIST to check memory used	-	BUTLER_MBRORS_DACDN
SPA_E13MEM_INIT_ERR	3-Error	[chars]: memory init failure occurred [chars] with error [chars] error code = 0x[hec].	The service SPA memory initialization procedure failed.	-	BUTLER_MBRORS_DACDN

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<b>SPA-ROMMON-BOOT-ERR</b>	3-Error	[chars]: ROMMON boot error detected [chars] - [chars]	Service SPA ROMMON error was detected during booting of the SPA. The system will attempt to reload the SPA to recover from the failure.	spa-butler-all	<b>BT-<u>ROMMON</u>-<u>ERR</u>-<u>SD</u>-<u>CON</u></b>
<b>SPA-ROMMON-BOT-TMOT</b>	3-Error	[chars]: Timeout booting ROMMON image in [chars] state [chars] - [chars]	Initialization of service SPA timed out during booting of the ROMMON image the system will now attempt to reload the SPA to recover from the failure.	spa-butler-all	<b>BT-<u>ROMMON</u>-<u>ERR</u>-<u>SD</u>-<u>CON</u></b>
<b>SPA-ROMMON-BOT-RCMOT</b>	3-Error	[chars]: ROMMON boot failed recovering ROMMON image with backup copy.	A service SPA ROMMON error was detected during booting of the SPA. An attempt to re-program the ROMMON image will be performed to recover from this failure. This problem could have been caused by a previous interruption of the ROMMON FPD upgrade operation.	spa-butler-all	<b>LOG_SID_NO_ACTION</b>
<b>SPA-ROMMON-SIN-CMOT</b>	3-Error	[chars]: Timeout getting SPI4 sync from ROMMON	Initialization of the service SPA timed out after failing to get SPI4 sync. The system will attempt to reload the SPA to recover from the failure.	spa-butler-all	<b>BT-<u>ROMMON</u>-<u>ERR</u>-<u>SD</u>-<u>CON</u></b>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_SKIPPED_DISK_MOUNT	3-Error	[chars]: Disk mounting operation has been skipped for manual disk repair operation. Please follow the procedures on hardware configuration guide on how to enter into service engine console to continue with the disk repair operation.	The SPA was configured to not mount the disk after a reload operation. This is the initial step to prepare the SPA for manual disk repair operation.	spa-butler-all	LOG_STD_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_SE1-3-SW_ERR	3-Error	NULL	The SPA driver detected a software error condition on the SPA card. This might result in improper operation.	spa-butler-all	<p>"The SPA driver has encountered a software error. Power down and reseal " "the indicated SPA card. If the problem persists copy the error message " "exactly as it appears on the console and open a case with the Technical " "Assistance Center via the Internet at " TAC_CASE_OPEN " or contact your " "Cisco technical support representative and provide the representative " "with the information you have gathered. Be sure to attach to your case " "the output of the</p> <pre> &lt;CmdBold&gt;show logging&lt;/NoCmdBold&gt; " "&lt;CmdBold&gt;show monitor event-log spa all&lt;/NoCmdBold&gt; and " "&lt;CmdBold&gt;show tech-support&lt;/NoCmdBold&gt; commands your troubleshooting " "logs and the specific error message." </pre>



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_SE3SYSINT_FAILURE	3-Error	[chars]: System init failure was detected during bootup - [chars]. SPA will be disabled because of this failure.	A failure was detected during system bootup of the SPA. The SPA has been deactivated because of the problem.	spa-butler-all	"Copy the error message exactly as it appears on the console and gather " "the output from the <CmdBold>show hw-module subslot<NoCmdBold> <CmdArg>" "bay_num<NoCmdArg> <CmdArg>" "show boot command from the " "SIP console. Contact your Cisco technical support representative with " "the gathered information."
SPA_SE5BOOTING_DEFAULT_APL	5-Notice	[chars]: booting the default application image.	The service SPA is booting the default application image from disk.	spa-butler-all	LOG_SID_NO_ACTION
SPA_SE5BOOTING_HELPER	5-Notice	[chars]: booting the helper image.	The service SPA is booting the helper image from bootflash.	spa-butler-all	LOG_SID_NO_ACTION
SPA_SE5BOOTING_HOST_IMAGE	5-Notice	[chars]: booting application image downloaded from host.	The service SPA is booting the default application image from disk.	spa-butler-all	LOG_SID_NO_ACTION
SPA_SE5NO_APL_IN_DSK	5-Notice	[chars]: no application image was found in disk drive.	The disk driver in service SPA doesn't have a valid application image.	spa-butler-all	LOG_SID_NO_ACTION
SPA_SE5NO_VALID_PARTITION	5-Notice	[chars]: no valid partition was found in disk drive [chars] error code = 0x[hec].	The disk driver in service SPA doesn't have valid partition.	spa-butler-all	"Follow the instructions on the Cisco IOS installation and configuration " "guide to format the disk drive to correct this problem."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<u>SPSRMMDXIK_PRR</u>	3-Error	Failed to retrieve datapath identifier for interface [chars]	The SPA driver is not able to retrieve the datapath identifier for the interface specified in the message. This indicates a software error.	wolfeisland-sw	LOG_SID_NO_ACTION
<u>SPSRMIMEXHDD</u>	3-Error	The system supports a maximum of two serial Interface Modules. Additional modules will not be operational. Check the output of 'show platform' for details.	Failed to create tty.	wolfeisland-sw	LOG_STD_ACTION
<u>SPSRMFWLDRX</u>	3-Error	[chars] doesn't support different tx speed [dec] and rx speed [dec]	The software does not support different tx speed and rx speed	wolfeisland-sw	"Configure the tx speed and rx speed to be equivalent."
<u>SPSRMCEQURR</u>	3-Error	[chars]	Failed to enqueue a message.	wolfeisland-sw	LOG_STD_ACTION
<u>SPSRMNULLSRCUE</u>	3-Error	NULL pointer detected: [chars]	A software error occurred and SPA driver is not able to retrieve the data structure mentioned in the message.	wolfeisland-sw	LOG_STD_ACTION
<u>SPSRMPROCESSAL</u>	3-Error	process creation failed for [chars]	The Periodic one second process creation failed. This indicates a software error.	wolfeisland-sw	LOG_STD_ACTION
<u>SPSRMFSBCKALCAL</u>	3-Error	Failed to create serial subblock at : [chars]: [chars]\n	Failed to create serial subblock	wolfeisland-sw	LOG_STD_ACTION
<u>SPSRMBIDSENDIAL</u>	3-Error	[chars]	Failed to send TDL message.	wolfeisland-sw	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPAS</del> UNKNOWNENCAP	3-Error	unknown encap type [dec] in serial pak handler	A software error occured and SPA driver encountered unknown encapsulation mentioned in the message	wolfeisland-sw	LOG_STD_ACTION
<del>SPAS</del> MUNSUPPORTEDDATA	3-Error	common_str_empty_str	A software error occured and SPA driver encountered unsupported data mentioned in the message	wolfeisland-sw	LOG_STD_ACTION
<del>SPAS</del> MUNSUPPORTEDSPATYPE	3-Error	Unsupported spa type: %u	Failed to create an interface hwidb.	wolfeisland-sw	LOG_STD_ACTION
<del>SPAS</del> MALANONZERO	3-Error	VLAN identifier is not zero before allocation for interface [chars]	The SPA driver is seeing non zero VLAN identifier before allocating new vlan identifier for the interface specified in the message. This indicates a software error.	wolfeisland-sw	LOG_SID_NO_ACTION
<del>SPAS</del> SENONAPMGEEMR	0-Emergency	NULL	The application running on the service SPA has encountered an emergency error.	spa-butler-all	SE_APP_MSG_SID_ACTION
<del>SPAS</del> SENONAPMGEALRT	1-Alert	NULL	The application running on the service SPA has issued an alert.	spa-butler-all	SE_APP_MSG_SID_ACTION
<del>SPAS</del> SENONAPMGECRIT	2-Critical	NULL	The application running on the service SPA has encountered a critical error.	spa-butler-all	SE_APP_MSG_SID_ACTION
<del>SPAS</del> SENONAPMGEFIED	2-Critical	Service Engine [chars] \[chars]\ configuration failed	The indicated configuration for the service-engine interface has failed.	spa-butler-all	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPAS_CSENCN3APMCHR	3-Error	NULL	The application running on the service SPA has encountered an error.	spa-butler-all	SE_APP_MG_SID_ACTION
SPAS_CSENCN3APRSET	3-Error	Application on service engine [chars] has failed and requested a service engine reset.	The application running on the service SPA failed and as a result the service engine will be restarted in order to recover from the communication failure with host.	spa-butler-all	LOG_SID_NO_ACTION
SPAS_CSENCN3APSTATUS	3-Error	Application on service engine [chars] is [chars]	The Application running on the service SPA has changed state.	spa-butler-all	LOG_SID_NO_ACTION
SPAS_CSENCN3HWERR	3-Error	[chars]: A Hardware device error was detected by [chars] trying to recover the SPA by reload.	An internal hardware device error has occurred on the services SPA. The error message indicates the SIP slot the SPA subslot the SPA type and the name of the hardware device. The SPA has been deactivated and reactivated to resolve the problem. If the error occurs more than five times within an hour no further attempts to reactivate the SPA will be made. This message is likely due to an unrecoverable hardware failure.	spa-butler-all	"Perform OIR of the SPA located in the specified subslot. Before removing " "the SPA enter the <CmdBold>hw-module subslot stop<NoCmdBold> command. " "Remove the SPA wait 5 seconds and reinsert the SPA into the SIP. If " "the problem persists copy the error message text exactly as it appears " "on the console or in the system log enter the <CmdBold>show diag" "<NoCmdBold> command contact your Cisco technical support representative " "and provide the representative with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPASRCSENGPSPWDSET</del>	3-Error	Service Engine [chars] password reset [chars][chars]	The password reset of the service SPA failed or is not supported.	spa-butler-all	LOG_SID_RECUR_ACTION
<del>SPRCSENGRMSGMISMATCH</del>	3-Error	Service Engine [chars] is using incorrect RBCP message version expected version = [dec] current version = [dec]. Please update	The service engine is running with a software version that doesn't use the same RBCP message header version. This could happen if the wrong version of the software package for the SPA was installed in the system.	spa-butler-all	"Find the appropriate software package for the SPA based on the " "Cisco IOS software version that the system is running. Follow the " "installation documentation that corresponds to your software version " "and platform to properly install the software package and correct the " "problem."
<del>SPASRCSENGRESERSET</del>	3-Error	Service engine [chars] will be reset to recover from failure [chars].	The service SPA is restarting to recover from the communication failure with host.	spa-butler-all	LOG_SID_NO_ACTION
<del>SPASRCSENGSHUTDOWN</del>	3-Error	Service Engine [chars] shutdown failed to be executed.	The service engine did not yet respond to the shutdown request. This is probably due to a bug.	spa-butler-all	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA%CPU%ERR	3-Error	[chars]: SPA CPU HW errors: [chars]	An internal hardware device error has occurred on the Services SPA CPU. The error message indicates the modular services card slot the SPA subslot the SPA type and the name of the hardware device. The SPA has been deactivated and reactivated to resolve the problem. If the error occurs more than five times within an hour no further attempts to reactivate the SPA will be made. This message is likely due to an unrecoverable hardware failure	spa-butler-all	"If the SPA does not recover automatically perform OIR of the SPA " "located in the specified subslot. Before removing the SPA enter the " <CmdBold>hw-module subslot stop<NoCmdBold> command. Remove the SPA " "wait 5 seconds and reinsert the SPA into the SIP. If the problem " "persists copy the error message text exactly as it appears on the " "console or in the system log enter the <CmdBold>show tech-support" " <NoCmdBold> command contact your Cisco technical support representative " "and provide the representative with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_SVCSENGENESWERR	3-Error	NULL	The SPA driver detected a software error condition on the SPA card. This might result in improper operation.	spa-butler-all	"The SPA driver has encountered a software error." "Please power down and reseal the indicated SPA card." "Copy the error message exactly as it appears and "open a case with the Technical Assistance Center " via the Internet at " TAC_CASE_OPEN " or contact your Cisco technical support representative and provide " the representative with the information you have gathered. Be sure to " attach to your case the output of the <CmdBold>show logging<NoCmdBold> " "<CmdBold>show monitor event-log spa all<NoCmdBold> and " "<CmdBold>show tech-support<NoCmdBold> commands your troubleshooting " logs and the specific error message."
SPA_SVCSENGENESWERR	4-Warning	NULL	The application running on the service SPA has issued a warning message.	spa-butler-all	SEAPMSG_SID_AICION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SPRCSENBDAACMO</del>	4-Warning	Service Engine [chars] platform information not received correctly.	The platform and service SPA hardware information was not received correctly.	spa-butler-all	LOG_SID_RECUR_ACTION
<del>SPRCSENBSPMNOIE</del>	5-Notice	NULL	The application running on the service SPA has issued a notice.	spa-butler-all	"Refer to the software application documentation for more information."
<del>SPRCSENBSPSWOD</del>	5-Notice	Service Engine [chars] password changed to '[chars]'.	The password of the service SPA was changed.	spa-butler-all	LOG_SID_NO_ACTION
<del>SPRCSENBSPREXIP</del>	5-Notice	Service Engine [chars] \service-engine ext ip address\ restored.	The service-engine external IP address was restored after the system verified that the interface IP address changed. There are certain configuration requirements for the service-engine IP address and the default gateway IP address with the SPA interface IP address. The system has verified these requirements and restored the external IP address.	spa-butler-all	LOG_SID_NO_ACTION



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SPAS</del> SENGNBSICREP	5-Notice	Service Engine [chars] \service-engine ip address\ restored.	The service-engine IP address was restored after the system verified that the interface IP address changed. There are certain configuration requirements for the service-engine IP address and the default gateway IP address with the SPA interface IP address. The system has verified these requirements and restored the IP address.	spa-butler-all	LOG_SID_NO_ACTION
<del>SPAS</del> SENGNBSICREDCW	5-Notice	Service Engine [chars] \service-engine ip default-gateway\ restored.	The service-engine default gateway IP address was restored after the system verified that the interface IP address was changed. There are certain configuration requirements for the service-engine IP address and the default gateway IP address with the SPA interface IP address. The system has verified that the IP address for the service-engine IP default gateway is still on the same subnet as the service-engine IP address and therefore the default-gateway configuration is restored.	spa-butler-all	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SAPRSENGSHUTDOWNBTN</del>	5-Notice	Service engine [chars] shutdown button was pressed shutdown initiated.	The Shutdown button on the SPA was pressed and shutdown initiated.	spa-butler-all	LOG_SID_NO_ACTION
<del>SAPRSENGSHUTDOWNDE</del>	5-Notice	Service engine [chars] shutdown complete	The shutdown of the service engine was completed.	spa-butler-all	LOG_SID_NO_ACTION
<del>SAPRSENGSHUTDOWNIDE</del>	5-Notice	Service Engine [chars] shutdown was not done in a proper fashion: Reseating the SPA may corrupt the hard disk.	The SPA was not properly shutdown before removal of the SPA. This could result in the corruption of the hard disk on the SPA.	spa-butler-all	LOG_SID_NO_ACTION
<del>SAPRSENGSHUTDOWNICV</del>	5-Notice	Service Engine [chars] \service-engine ip default-gateway\ unconfigured.	The service-engine default gateway IP is unconfigured as interface IP address changed.	spa-butler-all	LOG_SID_NO_ACTION
<del>SAPRSENGSHUTDOWNEXP</del>	5-Notice	Service Engine [chars] \service-engine ext ip address\ unconfigured.	The service-engine external IP address is unconfigured as interface IP address changed.	spa-butler-all	LOG_SID_NO_ACTION
<del>SAPRSENGSHUTDOWNIRP</del>	5-Notice	Service Engine [chars] \service-engine ip address\ unconfigured.	The service-engine IP address is unconfigured as interface IP address changed.	spa-butler-all	LOG_SID_NO_ACTION
<del>SAPRSENGSHUTDOWNPGNO</del>	6-Information	NULL	The application running on the service SPA has issued a informational message.	spa-butler-all	"Refer to the software application documentation for more information."
<del>SAPRSENGSHUTDOWNPDBG</del>	7-Debug	NULL	The application running on the service SPA has displayed a debug message.	spa-butler-all	"Refer to the software application documentation for more information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_SER-3-RCSEFWERR	3-Error	NULL	The SPA driver detected a software error condition on the SPA card. This might result in improper operation.	spa-butler-all	"The SPA driver has encountered a software error. Power down and reseal " "the indicated SPA card. If the problem persists copy the error message " "exactly as it appears in the console and open a case with the Technical " "Assistance Center via the Internet at " TAC_CASE_OPEN " or contact your " "Cisco technical support representative and provide the representative " "with the information you have gathered. Be sure to attach to your case " "the output of the <CmdBold>show logging<NoCmdBold> " "<CmdBold>show monitor event-log spa all<NoCmdBold> and " "<CmdBold>show tech-support<NoCmdBold> commands your troubleshooting " "logs and the specific error message."
SPA_T3E3-3-LOVEFAIL	3-Error	[chars]: failed to send [chars] love letter	A love letter status or configuration message could not be sent.	spa-ser-t3e3	LOGS_IDSH_TECH_ACIION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SPA_T3E3-3-MSGERR	3-Error	Illegal message type [dec] received for Interface [chars]	An unknown message was received by RP.	spa-ser-t3e3	LOG_SIDSHTTECH_ACTION
SPA_T3E3-3-NO_SSB	3-Error	[chars]: Failed to get serial subblock.	Serial subblock pointer is NULL. Internal software error.	spa-ser-t3e3	LOG_SIDSHTTECH_ACTION
SPA_T3E3-3-SSBINIT	3-Error	[chars]: Fail to initialize serial IDB	Most common reason is lack of system memory. Earlier messages might indicate memory allocation failures.	spa-ser-t3e3	LOG_SIDSHTTECH_ACTION
<del>SPA_T3E3-3-NO_SSB</del>	3-Error	[chars] Programming [chars] subrate FPGA failed. The FPGA image is corrupted. FPD upgrade has been attempted. SPA is shut.	The indicated subrate FPGA image is corrupted even after FPD upgrade. The SPA is disabled until this problem is corrected.	spa-ser-t3e3	"Verify the correctness of the FPD Image Package. Note that the FPD " "Image Package used in the upgrade should match the running Cisco IOS " "release. This can be verified by the use of <CmdBold>show upgrade " "fpd package default<NoCmdBold> command."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPA_T3E3</del> SPA_T3E3	4-Warning	[chars] Programming [chars] subrate FPGA failed. The FPGA image is corrupted. One upgrade attempt is made.	The indicated subrate FPGA image is corrupted and programming of FPGA failed. One upgrade attempt will be made to recover from the failure.	-	"Automatically upgrade the subrate FPGA image uses default FPD " "Image Package. The package should match the running Cisco IOS " "release. This can be verified by the use of <CmdBold>show upgrade " "fpd package default<NoCmdBold> command. If subrate FPGA failure " "persists after upgrade SPA is disabled. Ensure the package file " "is intact."
SPA_T3E3-5-BERT	5-Notice	Interface [chars] BERT [chars]	The spa t3e3 driver processed a BERT task.	spa-ser-t3e3	"None this is just a notification upon completion of a BERT task."
SPA_T3E3DEF_SUBRAIE	5-Notice	[chars] [chars]	Remote subrate configuration changed	spa-ser-t3e3	"Inform the network operator that subrate configuration changed by\n\ remote end"
<del>SPA_T3E3</del> SPA_T3E3	5-Notice	[chars]: Unable to enqueue message to T3E3 SPA process	The T3E3 SPA process message queue is full.	-	"Copy the error message exactly as it appears collect the output " "of 'show tech-support' command immediately and report it to your " "technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPA_T3E3MSG_QUEUE_ERR</del>	5-Notice	[chars]: T3E3 process message queue not initialized.	The T3E3 process message queue is not ready.	-	"Copy the error message exactly as it appears collect the output " "of 'show tech-support' command immediately and report it to your " "technical support representative."
<del>SPA_T3E3MSG_UNEXPECTED_ERR</del>	5-Notice	[chars]: Unexpected SPA message [dec].	SPA has been removed but still there are outstanding events.	-	"If the CPU utilization is high try to reduce the CPU utilization"
<del>SPA_TDMIM3ATMIF_CREATE</del>	3-Error	ATM interface creation on [chars] controller failed	ATM interface creation on a controller failed. This indicates a software error.	uea-im-tdm	LOG_STD_ACTION
<del>SPA_TDMIM3LICENSE_ACTIVATION_ERR</del>	3-Error	\nATM License is not yet activated. \nPlease configure 'license feature atm' \nand accept the EULA to activate the license.\n	Failed to start ATM services as feature license is not installed or activated	uea-im-tdm	LOG_STD_ACTION
<del>SPA_TDMIM3DHXIKL_PER</del>	3-Error	Failed to retrieve datapath identifier for interface [chars]	The SPA driver is not able to retrieve the datapath identifier for the interface specified in the message. This indicates a software error.	uea-im-tdm	LOG_SID_NO_ACTION
<del>SPA_TDMIM3DALLOC_ERR</del>	3-Error	failed to allocate ID for TDM IM	Failed to allocate ID for TDM IM.	uea-im-tdm	LOG_STD_ACTION
SPA_TDMIM3ID_INIT	3-Error	failed to initialize TDM IM ID table	Failed to initialize TDM IM ID table.	uea-im-tdm	LOG_STD_ACTION
<del>SPA_TDMIM3ENQUEUE_ERR</del>	3-Error	[chars]	Failed to enqueue a message.	uea-im-tdm	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SPA_IDM_NUL_DATA_STRUC</del>	3-Error	[chars]	A software error occurred and SPA driver is not able to retrieve the data structure mentioned in the message.	uea-im-tdm	LOG_STD_ACTION
<del>SPA_IDM_MBR_PROCESS_FAIL</del>	3-Error	process creation failed for [chars]	The Periodic one second process creation failed. This indicates a software error.	uea-im-tdm	LOG_STD_ACTION
<del>SPA_IDM_MBR_TDL_SEND_FAIL</del>	3-Error	common_str_empty_str	Failed to send TDL message.	uea-im-tdm	LOG_STD_ACTION
<del>SPA_IDM_MBR_UNSUPPORTED_DATA</del>	3-Error	common_str_empty_str	A software error occurred and SPA driver encountered unsupported data mentioned in the message	uea-im-tdm	LOG_STD_ACTION
<del>SPA_IDM_MBR_VLAN_ID_ZERO</del>	3-Error	VLAN identifier is not zero before allocation for interface [chars]	The SPA driver is seeing non zero VLAN identifier before allocating new vlan identifier for the interface specified in the message. This indicates a software error.	uea-im-tdm	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPAUCSEI3UCSEFSWERR	3-Error	NULL	The module driver detected a software error condition on the module card. This might result in improper operation.	canisng-xe	<p>"The module driver has encountered a software error. Power down and " "reset the indicated module card. If the problem persists copy the " "error message exactly as it appears in the console and open a case " "with the Technical Assistance Center via the Internet at " TAC_CASE_OPEN " or contact your " "Cisco technical support representative and provide the representative " "with the information you have gathered. Be sure to attach to your case " "the output of the</p> <pre> &lt;CmdBold&gt;show logging&lt;/NoCmdBold&gt; " "&lt;CmdBold&gt;show monitor event-trace spa all&lt;/NoCmdBold&gt; and " "&lt;CmdBold&gt;show tech-support&lt;/NoCmdBold&gt; commands your troubleshooting " "logs and the specific error message." </pre>



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA_WMA3WMA_SW_ERR	3-Error	NULL	The SPA driver detected a software error condition on the SPA card. This might result in improper operation.	spa-wma	"The SPA driver has encountered a software error." "Please power down and reseal the indicated SPA card." "Copy the error message exactly as it appears and "open a case with the Technical Assistance Center " via the Internet at " TAC_CASE_OPEN " or contact your Cisco technical support representative and provide " the representative with the information you have gathered. Be sure to " attach to your case the output of the <CmdBold>show logging<NoCmdBold> " "<CmdBold>show monitor event-log spa all<NoCmdBold> and " "<CmdBold>show tech-support<NoCmdBold> commands your troubleshooting " logs and the specific error message."
SPA0TEMP_SHUTDOWN	0-Emergency	[chars] temperature too high on sensor [node][dec]C. SPA has been shut down.	MSG_SPA_TEMP_HGH_EXP The SPA has been shut down.	-	MSG_SPA_TEMP_HGH_ACI0N
SPA0TEMP_SHUTDOWN	0-Emergency	[chars] temperature too high on sensor [node][dec]C. SPA has been shut down.	MSG_SPA_TEMP_HGH_EXP The SPA has been shut down.	-	MSG_SPA_TEMP_HGH_ACI0N

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SPA0TEMP_SHUTDOWN	0-Emergency	[chars] temperature too high on sensor [node][dec]C. SPA has been shut down.	MGSPA_TEMP_HGHEXP The SPA has been shut down.	-	MGSPA_TEMP_HG_HACION
SPA0TEMP_SHUTDOWN_OR	0-Emergency	[chars] slot/bay [dec]/[dec] temperature too high on sensor [node][dec]C	MGSPA_TEMP_HGHEXP SPA shutdown has been overridden by configuration	-	MGSPA_TEMP_HG_HACION
SPA0TEMP_SHUTDOWN_OR	0-Emergency	[chars] temperature too high on sensor [node][dec]C but shutdown has been	MGSPA_TEMP_HGHEXP SPA shutdown has been overridden by configuration	-	MGSPA_TEMP_HG_HACION
SPA0TEMP_SHUTDOWN_OR	0-Emergency	[chars] temperature too high on sensor [node][dec]C but shutdown has been	MGSPA_TEMP_HGHEXP SPA shutdown has been overridden by configuration	-	MGSPA_TEMP_HG_HACION
SPA0TEMP_SHUTDOWN_OR	0-Emergency	[chars] temperature too high on sensor [node][dec]C but shutdown has been	MGSPA_TEMP_HGHEXP SPA shutdown has been overridden by configuration	-	MGSPA_TEMP_HG_HACION
SPA0VOLT_SHUTDOWN	0-Emergency	[chars] voltage out of operating range. Nominal [dec]mV value [dec]mV.	MGSPA_VOLT_EXP_COMMON The SPA has been shut down to prevent component damage.	-	"Replace the SPA immediately. " "Record the associated messages and return the SPA for service."
SPA0VOLT_SHUTDOWN	0-Emergency	[chars] voltage out of operating range. Nominal [dec]mV value [dec]mV.	MGSPA_VOLT_EXP_COMMON The SPA has been shut down to prevent component damage.	-	"Replace the SPA immediately. " "Record the associated messages and return the SPA for service."
SPA0VOLT_SHUTDOWN	0-Emergency	[chars] voltage out of operating range. Nominal [dec]mV value [dec]mV.	MGSPA_VOLT_EXP_COMMON The SPA has been shut down to prevent component damage.	-	"Replace the SPA immediately. " "Record the associated messages and return the SPA for service."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA0VOLT_SHUTDOWN	0-Emergency	[chars] voltage out of operating range. Nominal [dec]mV value [dec]mV.	MCSA0VOLT_COMMON The SPA has been shut down to prevent component damage.	-	"Replace the SPA immediately. " "Record the associated messages and return the SPA for service."
SPA1AUTHENTICATION_FAIL	1-Alert	IM authentication failed for slot/bay [dec]/[dec]	This Module may not have been manufactured by Cisco or with Cisco's authorization. This product may contain software that was copied in violation of Cisco's license terms. If your use of this product is the cause of a support issue Cisco may deny operation of the product support under your warranty or under a Cisco technical support program such as Smartnet. Please contact Cisco's Technical Assistance Center for more information.	iomd-infra	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SPA</del> <u>BAUTHENTIC</u> <del>ION</del> <u>AL</u>	1-Alert	Module daughter board authentication failed for slot/bay/board [dec]/[dec]/[dec]	This daughter board may not have been manufactured by Cisco or with Cisco's authorization. This product may contain software that was copied in violation of Cisco's license terms. If your use of this product is the cause of a support issue Cisco may deny operation of the product support under your warranty or under a Cisco technical support program such as Smartnet. Please contact Cisco's Technical Assistance Center for more information.	esg-io-infra	LOG_STD_ACTION
<del>SPA</del> <u>BRN</u> <u>RAM</u> <u>MEM</u> <u>OR</u> <u>Y</u> <u>L</u>	2-Critical	CELBRNFPGA Multi Bit Error in RAM memory for slot/bay [dec]/[dec] Fatal failure. Reloading the IM	Soft errors are unintended changes to the values stored in SRAM, " configuration memory of FPGA caused by ionizing radiation. Please refer "Soft Error Mitigation Controller," product guide PG036 for more information. Please contact Cisco's Technical Assistance Center for more information.	spa-infra	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SP2-TEMP_CRITICAL	2-Critical	CEM FPGA Multi Bit Error in RAM memory for slot/bay [dec]/[dec] Fatal failure. Reloading the IM	Soft errors are unintended changes to the values stored in SRAM, which are configuration memory of FPGA caused by ionizing radiation. Please refer to the Soft Error Mitigation Controller, in the product guide PG036 for more information. Please contact Cisco's Technical Assistance Center for more information.	spa-infra	LOG_STD_ACTION
SP2-TEMP_CRITICAL	2-Critical	IO FPGA Multi Bit Error in RAM memory for slot/bay [dec]/[dec] Fatal failure. Reloading the IM	Soft errors are unintended changes to the values stored in SRAM, which are configuration memory of FPGA caused by ionizing radiation. Please refer to the Soft Error Mitigation Controller, in the product guide PG036 for more information. Please contact Cisco's Technical Assistance Center for more information.	spa-infra	LOG_STD_ACTION
SPA-2-TEMP_CRITICAL	2-Critical	[chars] slot/bay [dec]/[dec] temperature too high on sensor [node][dec]C.	MSG_SPA_TEMP_HGH_EXP Please correct immediately.	-	MSG_SPA_TEMP_HGH_ACTION
SPA-2-TEMP_CRITICAL	2-Critical	[chars] temperature too high on sensor [node][dec]C.	MSG_SPA_TEMP_HGH_EXP Please correct immediately.	-	MSG_SPA_TEMP_HGH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPA-2-TEMP_CRITICAL	2-Critical	[chars] temperature too high on sensor [node][dec]C.	MGSPA_TEMP_HIGH_EXP Please correct immediately.	-	MGSPA_TEMP_HIGH_ACTION
SPA-2-TEMP_CRITICAL	2-Critical	[chars] temperature too high on sensor [node][dec]C.	MGSPA_TEMP_HIGH_EXP Please correct immediately.	-	MGSPA_TEMP_HIGH_ACTION
SPA-2-VOLT_CRITICAL	2-Critical	[chars] voltage outside of nominal range. Nominal [dec]mV value[dec]mV	MGSPA_VOLT_EXP_COMMON	-	MGSPA_VOLT_SHUTDOWN_ACTION
SPA-2-VOLT_CRITICAL	2-Critical	[chars] voltage outside of nominal range. Nominal [dec]mV value[dec]mV	MGSPA_VOLT_EXP_COMMON	-	MGSPA_VOLT_SHUTDOWN_ACTION
SPA-2-VOLT_CRITICAL	2-Critical	[chars] voltage outside of nominal range. Nominal [dec]mV value[dec]mV	MGSPA_VOLT_EXP_COMMON	-	MGSPA_VOLT_SHUTDOWN_ACTION
SPA-2-VOLT_CRITICAL	2-Critical	[chars] voltage outside of nominal range. Nominal [dec]mV value[dec]mV	MGSPA_VOLT_EXP_COMMON	-	MGSPA_VOLT_SHUTDOWN_ACTION
SPA-VOLT_SHUTDOWN_OR	2-Critical	[chars] voltage outside of operating range. Nominal [dec]mV value[dec]mV.	MGSPA_VOLT_EXP_COMMON	-	MGSPA_VOLT_SHUTDOWN_ACTION
SPA-VOLT_SHUTDOWN_OR	2-Critical	[chars] voltage outside of operating range. Nominal [dec]mV value[dec]mV.	MGSPA_VOLT_EXP_COMMON	-	MGSPA_VOLT_SHUTDOWN_ACTION
SPA-VOLT_SHUTDOWN_OR	2-Critical	[chars] voltage outside of operating range. Nominal [dec]mV value[dec]mV.	MGSPA_VOLT_EXP_COMMON	-	MGSPA_VOLT_SHUTDOWN_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SPA-VOLTSHUTDOWNOR	2-Critical	[chars] voltage outside of operating range. Nominal [dec]mV value[dec]mV.	MCSA_VOLT_EX_COMMON	-	MCSA_VOLT_EX_HELP
SPA-3-BAD_FCITYPE	3-Error	[chars]: Illegal FCI type [dec].	An invalid FCI type is passed to SPA. This is a software error.	-	LOG_SID_SH_TECH_ACTION
SPA-3-BAD_FCITYPE	3-Error	[chars]: Illegal FCI type [dec].	An invalid FCI type is passed to SPA. This is a software error.	-	LOG_SID_SH_TECH_ACTION
SPA-3-BAD_FCITYPE	3-Error	[chars]: Illegal FCI type [dec].	An invalid FCI type is passed to SPA. This is a software error.	-	LOG_SID_SH_TECH_ACTION
SPA-3-BAD_FCITYPE	3-Error	[chars]: Illegal FCI type [dec].	An invalid FCI type is passed to SPA. This is a software error.	-	LOG_SID_SH_TECH_ACTION
SPA-3-ENTITY_INITFAIL	3-Error	SPA entity initialization error	A failure occurred during the SPA entity management subsystem startup. Entity management is not enabled.	spa-infra	LOG_SID_REDUCE_ACTION
SPA-3-ENTITY_INITFAIL	3-Error	SPA entity initialization error	A failure occurred during the SPA entity management subsystem startup. Entity management is not enabled.	spa-infra	LOG_SID_REDUCE_ACTION
SPA-3-ENTITY_INITFAIL	3-Error	SPA entity initialization error	A failure occurred during the SPA entity management subsystem startup. Entity management is not enabled.	spa-infra	LOG_SID_REDUCE_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SPA3-ENTITY_INITFAIL	3-Error	SPA entity initialization error	A failure occurred during the SPA entity management subsystem startup. Entity management is not enabled.	spa-infra	LOG_SID_REDUCE_ACTION
SPA3-ENVMON_INITFAIL	3-Error	SPA environmental monitoring initialization error	A failure occurred during the SPA environmental monitoring subsystem startup. Environmental monitoring is not enabled.	spa-infra	LOG_SID_REDUCE_ACTION
SPA3-ENVMON_INITFAIL	3-Error	SPA environmental monitoring initialization error	A failure occurred during the SPA environmental monitoring subsystem startup. Environmental monitoring is not enabled.	spa-infra	LOG_SID_REDUCE_ACTION
SPA3-ENVMON_INITFAIL	3-Error	SPA environmental monitoring initialization error	A failure occurred during the SPA environmental monitoring subsystem startup. Environmental monitoring is not enabled.	spa-infra	LOG_SID_REDUCE_ACTION
SPA3-ENVMON_INITFAIL	3-Error	SPA environmental monitoring initialization error	A failure occurred during the SPA environmental monitoring subsystem startup. Environmental monitoring is not enabled.	spa-infra	LOG_SID_REDUCE_ACTION
SPA3-ENVMON_INITFAIL	3-Error	SPA environmental monitoring initialization error	A failure occurred during the SPA environmental monitoring subsystem startup. Environmental monitoring is not enabled.	spa-infra	LOG_SID_REDUCE_ACTION
<del>SPA3-ENVMON_INITFAIL</del>	3-Error	Environmental monitoring is not enabled for [chars]	The indicated SPA has not registered any sensors with the environmental monitoring system.	-	LOG_SID_SHUT_DOWN_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPA-MON-NOT-MONICRD</del>	3-Error	Environmental monitoring is not enabled for [chars]	The indicated SPA has not registered any sensors with the environmental monitoring system.	-	LOG_SID_SH_TECH_ACTION
<del>SPA-MON-NOT-MONICRD</del>	3-Error	Environmental monitoring is not enabled for [chars]	The indicated SPA has not registered any sensors with the environmental monitoring system.	-	LOG_SID_SH_TECH_ACTION
<del>SPA-MON-NOT-MONICRD</del>	3-Error	Environmental monitoring is not enabled for [chars]	The indicated SPA has not registered any sensors with the environmental monitoring system.	-	LOG_SID_SH_TECH_ACTION
SPA-3-INITFAIL	3-Error	Initialization error	A failure occurred during the initialization.	spa-infra	LOG_SID_REDUCE_ACTION
SPA-3-INITFAIL	3-Error	Initialization error	A failure occurred during the initialization.	spa-infra	LOG_SID_REDUCE_ACTION
SPA-3-INITFAIL	3-Error	Initialization error	A failure occurred during the initialization.	spa-infra	LOG_SID_REDUCE_ACTION
SPA-3-INITFAIL	3-Error	Initialization error	A failure occurred during the initialization.	spa-infra	LOG_SID_REDUCE_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SPA3MSG_PARSE_FAILURE	3-Error	Failed to parse incoming message from [chars]	An incoming control message from an IO module failed to get parsed and as a result failed to get handled by the control process running on the host platform. This error message could occur when the software running on the module is incompatible with the host. A solution is to update the module software with a version that is the same or compatible with	seetacdetails	LOG_STD_ACTION
SPA-3-SW_ERROR	3-Error	NULL	-	spa-infra	LOG_STD_ACTION
SPA-3-SW_ERROR	3-Error	NULL	-	spa-infra	LOG_STD_ACTION
SPA-3-SW_ERROR	3-Error	NULL	-	spa-infra	LOG_STD_ACTION
SPA-3-SW_ERROR	3-Error	NULL	-	spa-infra	LOG_STD_ACTION
SPA3TEMP_SHUTDOWN	3-Error	[chars] slot/bay [dec]/[dec] temperature too high on sensor [node][dec]C.	MESGSPATEMPHIGHEXP The SPA has been shut down.	-	MESGSPATEMPHIGHACION
SPA4POWER_WARNING	4-Warning	[chars] power consumption [dec] Watts is higher than typical max value of [dec] Watts.	SPA power consumption is higher than the typical max value. Component reliability and data integrity may be compromised.	-	"Check for the total power available for the system. If "there is sufficient power availabe this condition may not have " "any adverse affects."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SPA4POWER_WARNING	4-Warning	[chars] power consumption [dec] Watts is higher than typical max value of [dec] Watts.	SPA power consumption is higher than the typical max value. Component reliability and data integrity may be compromised.	-	"Check for the total power available for the system. If "there is sufficient power available this condition may not have "any adverse affects."
SPA4POWER_WARNING	4-Warning	[chars] power consumption [dec] Watts is higher than typical max value of [dec] Watts.	SPA power consumption is higher than the typical max value. Component reliability and data integrity may be compromised.	-	"Check for the total power available for the system. If "there is sufficient power available this condition may not have "any adverse affects."
SPA4POWER_WARNING	4-Warning	[chars] power consumption [dec] Watts is higher than typical max value of [dec] Watts.	SPA power consumption is higher than the typical max value. Component reliability and data integrity may be compromised.	-	"Check for the total power available for the system. If "there is sufficient power available this condition may not have "any adverse affects."
SPA4TEMP_SHUTDOWN_FATAL	4-Warning	[chars] temperature too high on sensor [node][dec]C. SPA has been shut down.	MESG_SPA_TEMP_HGH_EXP The SPA has been shut down.	-	MESG_SPA_TEMP_HGH_ACTION
SPA4TEMP_WARNING	4-Warning	[chars] slot/bay [dec]/[dec] temperature too high on sensor [node][dec]C.	MESG_SPA_TEMP_HGH_EXP	-	MESG_SPA_TEMP_HGH_ACTION
SPA4TEMP_WARNING	4-Warning	[chars] temperature too high on sensor [node][dec]C.	MESG_SPA_TEMP_HGH_EXP	-	MESG_SPA_TEMP_HGH_ACTION
SPA4TEMP_WARNING	4-Warning	[chars] temperature too high on sensor [node][dec]C.	MESG_SPA_TEMP_HGH_EXP	-	MESG_SPA_TEMP_HGH_ACTION
SPA4TEMP_WARNING	4-Warning	[chars] temperature too high on sensor [node][dec]C.	MESG_SPA_TEMP_HGH_EXP	-	MESG_SPA_TEMP_HGH_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SPA4TEMP_WARNLOW	4-Warning	[chars] temperature too low on sensor [node][dec]C.	SPA temperature too low. Component reliability and data integrity may be compromised.	-	"Raise the ambient temperature if it is too low. If there is no " "issue with the ambient temperature then the SPA temperature sensor has " "likely failed. If there are no data errors this warning can be " "ignored."
SPA4TEMP_WARNLOW	4-Warning	[chars] temperature too low on sensor [node][dec]C.	SPA temperature too low. Component reliability and data integrity may be compromised.	-	"Raise the ambient temperature if it is too low. If there is no " "issue with the ambient temperature then the SPA temperature sensor has " "likely failed. If there are no data errors this warning can be " "ignored."
SPA4TEMP_WARNLOW	4-Warning	[chars] temperature too low on sensor [node][dec]C.	SPA temperature too low. Component reliability and data integrity may be compromised.	-	"Raise the ambient temperature if it is too low. If there is no " "issue with the ambient temperature then the SPA temperature sensor has " "likely failed. If there are no data errors this warning can be " "ignored."
SPA4TEMP_WARNLOW	4-Warning	[chars] temperature too low on sensor [node][dec]C.	SPA temperature too low. Component reliability and data integrity may be compromised.	-	"Raise the ambient temperature if it is too low. If there is no " "issue with the ambient temperature then the SPA temperature sensor has " "likely failed. If there are no data errors this warning can be " "ignored."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPA01SHUTDOWNNOVAL</del>	4-Warning	[chars] voltage out of operating range. Nominal [dec]mV value [dec]mV.	<del>MCSA01EXP0000N</del> The SPA has been shut down to prevent component damage.	-	"Replace the SPA immediately. " "Record the associated messages and return the SPA for service."
<del>CELBRNFBEMM00VAL</del>	5-Notice	CELBRNFBEMM00VAL Single Bit Error in RAM memory for slot/bay [dec]/[dec] Auto Recovering the failure.	Soft errors are unintended changes to the values stored in SRAM,Ãs configuration memory of FPGA caused by ionizing radiation. Please refer ,ÃSoft Error Mitigation Controller,Ã product guide PG036 for more information. Please contact Cisco's Technical Assistance Center for more information.	spa-infra	LOG_STD_ACTION
<del>CEMFBEMM00VAL</del>	5-Notice	CEMFBEMM00VAL Single Bit Error in RAM memory for slot/bay [dec]/[dec] Auto Recovering the failure.	Soft errors are unintended changes to the values stored in SRAM,Ãs configuration memory of FPGA caused by ionizing radiation. Please refer ,ÃSoft Error Mitigation Controller,Ã product guide PG036 for more information. Please contact Cisco's Technical Assistance Center for more information.	spa-infra	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPACASEMEMORYAL	5-Notice	IOFPGA Single Bit Error in RAM memory for slot/bay [dec]/[dec] Auto Recovering the failure.	Soft errors are unintended changes to the values stored in SRAM, "Soft configuration memory of FPGA caused by ionizing radiation. Please refer "Soft Error Mitigation Controller," product guide PG036 for more information. Please contact Cisco's Technical Assistance Center for more information.	spa-infra	LOG_STD_ACTION
SPACP-3-BUFFER	3-Error	[chars]: Failed to allocate buffer for SPACP message.	Can not allocate memory for SPACP message.	spa-ipsec-2g	LOG_SID_RECUR_ACTION
SPACP-3-CREATE	3-Error	[chars]: SPA Bus Device creation failed.	Can not allocate memory for SPA Bus structure.	spa-ipsec-2g	LOG_SID_RECUR_ACTION
SPACP-3-INIT	3-Error	[chars]: Failed to initialize SPACP. [chars].	SPACP messaging could not be initialized because of the reason specific in the message text.	spa-ipsec-2g	LOG_SID_RECUR_ACTION
SPACP-3-OPCODE	3-Error	[chars]: SPACP opcode 0x[node]x unknown.	Received an unexpected message from the SPA.	spa-ipsec-2g	LOG_SID_RECUR_ACTION
SPACP-3-SEND	3-Error	[chars]: Failed to send SPACP message.	Failed to send a message to the SPA.	spa-ipsec-2g	LOG_SID_RECUR_ACTION
SPAN3-MEM_UNAVAIL	3-Error	Memory was not available to perform the SPAN operation	Unable to perform a SPAN operation because of a lack of memory	-	"Reduce other system activity to ease memory demands. If conditions\n warrant upgrade to a larger memory configuration."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPANREDR_HW_UNAVAIL	3-Error	Redirect hardware resource not available [chars]	The system could not allocate resource for redirecting BPDUs. A possible cause of this condition is that all available redirect registers in PFC are used by other features.	cat6000-12	"Free up a redirect register in PFC by unconfiguring features " "that use redirect registers and retry allowing BPDUs for " "SPAN servicemodules. If Protocol Tunneling is configured " "on any ports then remove Protocol Tunneling configuration " "from all ports to free up one redirect register."
SPANSESS_HW_UNAVAIL	3-Error	SPAN hardware resource not available [chars]	The system could not allocate a SPAN hardware resource for the feature specified in the error message. A possible cause of this condition is that all available SPAN source sessions are already in use. The system can be configured with a maximum of two SPAN source sessions or one RSPAN source session	-	"Remove one of the existing SPAN or RSPAN source sessions " "and retry the operation."
SPAN-3-UNKN_ERR	3-Error	An internal error occurred during a SPAN operation.	SPAN detected an error in its internal operation.	-	"The error might be transient in which case trying the SPAN operation\n\ again might be successful. If this fails the switch might need to be\n\ reloaded for the desired operation to complete."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPAN3UNKN_ERR_PORT	3-Error	An internal error occurred when configuring SPAN on port [chars]	SPAN detected an error in its internal operation.	-	"The error might be transient in which case trying the SPAN operation again might be successful. If this fails the switch might need to be reloaded for the desired operation to complete."
SPAN5ERSPAN_AD_TUNNEL	5-Notice	ERSPAN Destination behind a tunnel. Shutting down session [dec]	The next hop to the IP Address specified as the ERSPAN destination lies behind a tunnel. This configuration is not supported. ERSPAN session is shut down when such configuration is detected	cat6000-12	"Specify another IP address as the ERSPAN destination which does not have tunnel as the next-hop adjacency."
SPAN5PKTCAP_START	5-Notice	Packet capture session [dec] started	Packet capture is activated by user or after the scheduled time	cat6000-12	"Stop the capture when it is not required. You can change the rate of packets reaching CPU for capturing by configuring the rate-limit value in the monitor session type capture config mode. Protocol packets may get dropped if the capture traffic rate is high."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPAN-5-PKTCAP_STOP	5-Notice	Packet capture session [dec] ended [chars] [dec] packets captured	Packet capture is stopped. This will happen if the capture buffer is full or if user stops the capture or if capture timeout happens.	cat6000-12	"Packet capture is stopped. You can export the capture buffer using " "the 'monitor capture <id> export buffer <url>' command. Buffer can " "be displayed on the console also. Delete the capture session if it " "is no longer required."
<del>SPAN-6-EGRESS</del>	6-Information	Span Egress HW Replication Mode Change Detected. Current replication mode for session [chars] is [chars]	When auto detection of egress span replication mode is enabled the system will transition any available sessions to centralized mode when an distributed egress span incapable linecard is inserted. The system will transition back the available sessions to distributed egress span mode when the last distributed egress span incapable linecard is removed	7600-12	"To prevent a session switching back to distributed egress span" "modeuse the command monitor session egress replication-mode" "centralized"
<del>SPAN-7-UPLINK</del>	7-Debug	[chars] [chars] moved to Forwarding UplinkFast.	-	-	-
<del>SPAN-2-PLAT</del>	2-Critical	Platform limit of [dec] STP instances exceeded. No instance created for [chars] port [chars].	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SNREVA</del> <del>BLAD</del> <del>CR</del> <del>AD</del>	3-Error	Subsystem [chars] fails to add callback function [chars]	Other subsystem must have mistakenly add its own callback functions. This syslog is for debugging purpose.	stp	LOG_SID_NO_ACTION
<del>SNREMA</del> <del>SW</del> <del>MS</del> <del>NE</del>	2-Critical	Platform limit of [dec] STP instances exceeded. No instance created for [chars] port [chars].	-	-	-
<del>SNREB</del> <del>CK</del> <del>BD</del> <del>GU</del> <del>AD</del>	2-Critical	Received BPDU from bridge [enet] on port [chars] with BPDU Guard enabled. Disabling port.	A BPDU was received in the interface specified in the error message that has the spanning tree BPDU Guard feature enabled. As a result the interface was administratively shut down.	pvst	"Either remove the device sending BPDUs or disable the BPDU Guard " "feature. The BPDU Guard feature can be locally configured on the " "interface or globally configured on all ports that have portfast " " enabled. After the conflict has been resolved reenable the " "interface by entering the <CmdBold>no shutdown<NoCmdBold> command " "in interface configuration mode."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SNR</del> ERRBLOCK_PDU_GADMP	2-Critical	Received BPDU on port [chars] vlan [dec] with BPDU Guard enabled. Disabling vlan.	A BPDU was received on the interface and vlan specified in the error message. The spanning tree BPDU Guard feature was enabled and configured to shutdown the vlan. As a result the vlan was placed in the error-disabled state.	pvst	"Either remove the device sending BPDUs or disable the BPDU Guard " "feature. The BPDU Guard feature can be locally configured on the " "interface or globally configured on all ports that have portfast " "enabled. After the conflict has been resolved reenable the " "interface/vlan by entering the <CmdBold>clear errdisable</NoCmdBold> " "command."
<del>SNR</del> ERRBLOCK_PVID_LOCAL	2-Critical	Blocking [chars] on [chars]. Inconsistent local vlan.	The spanning tree port associate with the listed spanning tree instance and interface will be held in spanning tree blocking state until the Port VLAN ID PVID inconsistency is resolved. The listed spanning tree	pvst	"Verify that the configuration of the native VLAN id is consistent " "on the interfaces on each end of the 802.1Q trunk connection. " "Once corrected spanning tree will automatically unblock the interfaces " "as appropriate."
<del>SNR</del> ERRBLOCK_PVID_PEER	2-Critical	Blocking [chars] on [chars]. Inconsistent peer vlan.	The spanning tree port associate with the listed spanning tree instance and interface will be held in spanning tree blocking state until the port VLAN Id PVID inconsistency is resolved. The listed spanning tree	pvst	"Verify that the configuration of the native VLAN id is consistent " "on the interfaces on each end of the 802.1Q trunk connection. " "Once corrected spanning tree will automatically unblock the interfaces " "as appropriate."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPANREASS_CHK</del>	2-Critical	Bridge Assurance blocking port [chars][chars].	BPDUs were not received from a neighboring switch on the interface that has spanning tree Bridge Assurance configured. As a result the interface was moved to the spanning tree Blocking state	cosmos	"Either disable Bridge Assurance configuration on the interface or " "make sure that the interface is connected to a L2 switch/bridge device"
<del>SPANREASS_CHK</del>	2-Critical	Bridge Assurance unblocking port [chars][chars].	The interface listed in the message has been restored to normal spanning tree state after receiving BPDUs from the neighboring L2 switch/bridge	stp	LOG_SID_NO_ACTION
<del>SPANRE2CHL_MISCFG</del>	2-Critical	Detected loop due to etherchannel misconfiguration of [chars] [chars]	A loop caused the misconfiguration of a channel group has been detected. An example of such a misconfiguration would be where the ports on one side of the etherchannel either aren't configured to be in the channel or failed to bundle for some reason while the other side has successfully bundled the ports into the etherchannel	stp	"Determine which local ports are involved using the command " " <b>show interfaces status</b> <del>er-disabled</del> <b>&lt;noCmdBold&gt;</b> and then check " "etherchannel configuration on the remote device using the command " " <b>show etherchannel summary</b> <del>&lt;noCmdBold&gt;</del> on the remote device. " "Once the configuration is corrected do " " <b>shutdown</b> / no <del>shutdown</del> <del>&lt;noCmdBold&gt;</del> on the associated " "port-channel interface."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SNRREPLAORLADBOOK</del>	2-Critical	Loop guard blocking port [chars] on [chars].	The spanning tree message age timer has expired because and no BPDUs were received from the designated bridge. Since this condition could be caused by an unidirectional link failure the interface is put into blocking state and marked as loop guard inconsistent in order to prevent possible loops from being created	loopguard	-
<del>SNRREPLAORLADBOOK</del>	2-Critical	Loop guard [chars] on port [chars].	The spanning tree loopguard configuration for the listed interface has been changed. If enabled the interface will be put into blocking state and marked as loopguard inconsistent when the message age timer expires because no BPDU were received from the designated bridge. This feature is mainly used to detect unidirectional links	loopguard	"Verify that this is the desired configuration for the listed interface." "Correct it if this is not the desired configuration otherwise no further " "action is required."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SPAN</del> LOOPGUARDUNBLOCK	2-Critical	Loop guard unblocking port [chars] on [chars].	The listed interface has received a BPDU and therefore if the inconsistency was due to an unidirectional link failure now the problem is not there anymore. The loop guard inconsistency is cleared for the interface which is taken out of the blocking state if appropriate.	loopguard	LOG_SID_NO_ACTION
SPANTRREE-2-NOMEM	2-Critical	Memory Allocation Failure - [chars]: [chars]	The system could not allocate the memory that is required for the STP feature. This condition might indicate that more memory must be installed on the system.	stp	show tech-support and show logging
<del>SPAN</del> TRREE-2-NOMEM	2-Critical	PVST+ peer detected on port [chars]	PVST+ BPDUs are detected on the listed interface when MSTP PVST+	stp	"Please make sure the PVST+ switch is removed from the network or " "enable the MSTP PVST Simulation feature."
<del>SPAN</del> TRREE-2-NOMEM	2-Critical	Unblocking port [chars]	The listed interface is no longer receiving the PVST+ BPDUs. The inconsistency is cleared and the interface returns to normal operation.	stp	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPANTREE-2PVSTSM-FAL	2-Critical	Blocking [chars] port [chars]: Inconsistent [chars] PVST BPDU received on VLAN [dec] claiming root [dec]:[enet]	When a MST switch is connected to a PVST+ switch the CIST MST00	stp	"When STP is converging after a new switch or switch port is added" "to the topology this condition may happen transiently. The port" "unblocks automatically in such cases. If the port remains blocked" "identify the root bridge as reported in the message and configure" "a worse or better priority for the VLAN spanning tree consistent" "with the CIST role on the port of the MST switch. There could be more" "inconsistencies than the message indicates and the port will" "not recover until all such inconsistencies are cleared." "If you cannot determine which other VLANs have inconsistencies disable" "and reenable the port. This message will appear again and specify another" "VLAN with inconsistencies to be fixed. Repeat this process until all" "inconsistencies on all VLANs are cleared."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPANIRF2PVSSIM_OK	2-Critical	PVST Simulation inconsistency cleared on port [chars].	The listed interface is no longer receiving PVST BPDUs advertising an information inconsistent with the CIST port information. The PVST Simulation Inconsistency is cleared and the interface returns to normal operation	stp	LOG_SID_NO_ACTION
SPANIRF2QONQTRK	2-Critical	Received 802.1Q BPDU on non 802.1Q trunk [chars] [chars].	The listed interface on which a SSTP BPDU was received was in trunk mode but not using 802.1Q encapsulation.	pvst	"Verify that the configuration and operational state of the listed " "interface and that of the interface to which it is connected have " "the same mode access vs trunk. If mode is trunk verify the same "
SPANIRF2RCV_BAD_TLV	2-Critical	Received SSTP BPDU with bad TLV on [chars] [chars].	The list interface received a SSTP BPDU that was missing the VLAN id tag. The BPDU is discarded.	pvst	LOG_SID_RECUR_ACTION
SPANIRF2RCV_PVDERR	2-Critical	Received BPDU with inconsistent peer vlan id [dec] on [chars] [chars].	The listed interface received a SSTP BPDU that is tagged with a VLAN id that does not match the VLAN id on which the BPDU was received. This occurs when the native VLAN is not consistently configured on both ends of a 802.1Q trunk.	pvst	"Verify that the configuration of the native VLAN id is consistent " "on the interfaces on each end of the 802.1Q trunk connection. " "Once corrected spanning tree will automatically unblock the interfaces " "as appropriate."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SNTR</del> ROOTGUARD_BLOCK	2-Critical	Received a superior STP BPDU from bridge [enet]. Root guard blocking port [chars] on [chars].	A BPDU was received on the listed interface which advertizes a superior spanning tree root bridge to that currently in use. The interface is put into blocking state and marked as root guard inconsistent in order to prevent a suboptimal spanning tree topology to form.	rootguard	"Issue the <CmdBold>show spanning-tree inconsistent-ports</CmdBol> " "command to review the list of interfaces with root guard inconsistencies." "Determine why devices connected to the listed ports are sending " "BPDUs with a superior root bridge and take action to prevent further " "occurrences. Once the bogus BPDUs have been stopped the interfaces will " "automatically recover and resume normal operation." "Make sure that it is appropriate to have root guard enabled on the " "interface."
<del>SNTR</del> ROOTGUARD_ERR	2-Critical	Root guard [chars] on port [chars].	The spanning tree root guard configuration for the listed interface has been changed. If enabled any BPDU received on this interface which advertizes a superior spanning tree root bridge to that already in use will cause the interface to be put into blocking state and marked as root guard inconsistent.	rootguard	"Verify that this is the desired configuration for the listed interface." "Correct it if this is not the desired configuration otherwise no further " "action is required."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SPANREPROG</del> <u>ADUNBK</u>	2-Critical	Root guard unblocking port [chars] on [chars].	The listed interface is no longer receiving BPDUs advertizing a superior root bridge. The root guard inconsistency is cleared for the interface and then it is taken out of the blocking state if appropriate.	rootguard	LOG_SID_NO_ACTION
<del>SPANREPROG</del> <u>CONSIP</u>	2-Critical	Unblocking [chars] on [chars]. Port consistency restored.	The Port VLAN ID and/or Port Type inconsistencies have been resolved and spanning tree will now unblock the listed interface of the listed spanning tree instance as appropriate.	pvst	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPANREB</del> ADPORN_MSE	3-Error	Rejected an attempt to set the port number field size to [dec] bits valid range is [dec] to [dec] bits.	The spanning tree port identifier is a 16 bit wide field that is by default divided evenly between port priority and port number each sub field being 8 bits wide. This allows the port number field to represent port numbers between 1 and 255. However on systems with greater than 255 ports the size of port number portion of the port id must be increased to support the greater number of ports. This is done by the STP subsystem at system init time since the maximum number of ports on a particular platform will not change. This error would only occur due to an error in the platform specific code which caused it to request more or less	stp	"show version"
<del>SPANREB</del> ARNOUNRIDE	3-Error	[chars]: Portfast disabled reverting to bidirectional mode	Because UCP is for edge ports only portfast must be configured. This message is typically seen when spanning-tree portfast is enabled on a port then authentication control-direction is set to inbound unidirectional and then	stp	"Re-enable portfast on the edge port. This will re-enable unidirectional authentication control."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SPANIRERR3RSTFLOOD	3-Error	[chars] disabled.- received BPDU src mac [enet]	The source MAC address contained in a BPDU received on the listed interface matches the MAC address assigned to that interface This indicates the possibility that a port is looped back to itself possibly due to a diagnostic cable being plugged in. The interface will be administratively shutdown.	stp	"Check the interface configuration and any cable plugged into the " "interface. Once problem resolved re-enable interface by doing a " "no shutdown in the interface configuration."
SPANIRERR3PRESID_NCH	3-Error	pre-standard MST interaction not configured [chars]. Please configure:	The switch has received a pre-standard MST BPDU on a port that is not configured for pre-standard MST BPDU transmission. The switch will automatically adjust its mode of operation on this port and will start sending pre-standard BPDUs. However this auto-detection of pre-standard neighbors is not 100[node]ccurate and it is recommended to configure explicitly the port for pre-standard MST BPDU transmission. This warning message will only be display once.	stp	"Configure 'spanning-tree mst pre-standard' on all the ports" "that are connected to switches running Cisco's pre-standard version " "of MST. It is recommended to migrate all the switches in the network to" "the IEEE standard MST version when it is possible."
SPANIRERR4BDU_DELAY_RX	4-Warning	Port [chars] is experiencing RX bpdud delays	The port is experiencing delay in receiving BPDUs	stp	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPANIRE4</del> BPDUDELAYTX	4-Warning	Port [chars] is experiencing TX bpdu delays	The port is experiencing delay in transmitting BPDUs	stp	LOG_STD_NO_ACTION
<del>SPANIRE3</del> PRNCFORWARDG	4-Warning	[chars] [chars] [chars] [chars]	The port is not forwarding packets i.e it is not in a forwarding state	-	LOG_STD_ACTION
<del>SPANIRE5</del> EXTENDEDSYSID	5-Notice	Extended SysId [chars] for type [chars]	The extended system id feature has either enabled or disabled for the given type of spanning tree. If enabled the spanning tree instance identifier is stored in the lower portion of the bridge id priority field and this will cause the allowed values for the bridge priority to be limited to the range of 0 to 61440 in increments of 4096. If disabled the bridge id priority field consists entirely of the configured priority but some spanning tree features may not be available on a given platform i.e. 4096 vlan support. On some	stp	LOG_STD_NO_ACTION
<del>SPANIRE5</del> ROOTCHANGE	5-Notice	Root Changed for [chars] [dec]: New Root Port is [chars]. New Root Mac Address is [enet]	The Root has changed for an instance of spanning tree	stp	LOG_STD_NO_ACTION
<del>SPANIRE5</del> 5TOPOTRAP	5-Notice	Topology Change Trap for [chars] [dec]	A trap has been generated to indicate the change in topology	stp	LOG_STD_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SPANTR</del> EE6PORT_STATE	6-Information	Port [chars] instance [dec] moving from [chars] to [chars]	The Spanning-Tree port has changed state.	cosmos	LOG_SID_NO_ACTION
<del>SPANTR</del> CRADAL_VLANS	6-Information	[chars] added to all Vlans	The interface has been added to all Vlans	stp	LOG_SID_NO_ACTION
<del>SPANTR</del> CRDLAL_VLANS	6-Information	[chars] deleted from all Vlans	The interface has been deleted from all Vlans	stp	LOG_SID_NO_ACTION
<del>SPANTR</del> ELOCK_PORTTYPE	7-Debug	Blocking [chars] on [chars]. Inconsistent port type.	The listed interface is being held in spanning tree blocking state until the port type inconsistency is resolved.	pvst	"Verify that the configuration and operational state of the listed " "interface and that of the interface to which it is connected have " "the same mode access vs trunk. If mode is trunk verify the same "
<del>SPANTR</del> CRIDL_SUCCESS	7-Debug	[chars] deleted from Vlan [dec]	The interface has been deleted from Vlan	stp	LOG_SID_NO_ACTION
<del>SPANTR</del> CRVNONTRUNK	7-Debug	Received 802.1Q BPDU on non trunk [chars] [chars].	A SSTP BPDU was received on the listed interface that was not operationally a trunk.	pvst	"Verify that the configuration and operational state of the listed " "interface and that of the interface to which it is connected have " "the same mode access vs trunk. If mode is trunk verify the same "
SPARC-3-DOWN	3-Error	SPARC process is not responding [chars]	Failed to init calltracker record table.	CallTracker	"Disable calltracker first [no calltracker enable] enable it again."
<del>SPARC</del> MISCARDUPDOWN	2-Critical	Card [chars] in bay [dec]/[dec]/[dec] is [chars].	Card up/down	cmts-vpa	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPAWBCMIS4HWNTI</del> FALED	3-Error	Error while initializing wideband group interface [chars]	Wideband group interface initialization error	cmts-vpa	LOG_STD_ACTION
<del>SPAWBCMIS3NALDDA</del> IA	3-Error	Invalid information [chars] received by wideband software routine	Wideband SPA software module was passed invalid information	cmts-vpa	LOG_STD_ACTION
<del>SPAWCMIS4P</del> INTERNAL	3-Error	The SPA was unable to process/handle the received data	Wideband SPA was unable to process/handle the received data	cmts-vpa	LOG_STD_ACTION
<del>SPAWCMIS4P</del> INCOMP	4-Warning	[chars] the incompatible [chars] SFP removed from port [dec]	SFP incompatible removed	-	-
<del>SPAWCMIS4P</del> INCOMP	4-Warning	[chars] [chars] SFP inserted in port [dec] incompatible with [chars] mode	SFP incompatible with current mode	-	-
<del>SPAWCMIS4P</del> INTERNAL	4-Warning	[chars] [chars] SFP inserted in port [dec]. \n\nNOTE: This type of SFP is not officially supported. You configured \service \internal\ so enabled for lab test. \nIf this is not your intent please \disable the configuration and oir the SFP.	SFP not supported officially.	-	-
<del>SPAWCMIS4P</del> LINK_LOST	4-Warning	[chars] port [dec] link changed state to down	Link status is down on SPA SFP	cmts-vpa	LOG_STD_ACTION
<del>SPAWCMIS4P</del> LINK_OK	4-Warning	[chars] port [dec] link changed state to up	Link status is up on SPA SFP	cmts-vpa	LOG_STD_ACTION
<del>SPAWCMIS4P</del> MISSNG	4-Warning	[chars] [chars] SFP missing from port [dec]	SFP missing from SPA	cmts-vpa	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SPAWBCMIS</del> SPNCSIPURIED	4-Warning	[chars] [chars] SFP inserted in port [dec] is not supported and disabled	SFP is not supported and disabled.	cmts-vpa	LOG_STD_ACTION
SPAWBCMIS4-SFP_OK	4-Warning	[chars] [chars] SFP inserted in port [dec]	SFP inserted into the SPA	cmts-vpa	LOG_STD_ACTION
<del>SPAWBCMIS</del> SPUNNIAIED	4-Warning	[chars] [chars] SFP inserted in port [dec] failed initialization	SFP initialization failed	cmts-vpa	LOG_STD_ACTION
<del>SPAWBCMIS</del> SWICHOMRRI	5-Notice	primary portport 0 will be active for [chars]	TenGigaEth link is being restored for primary port	cmts-vpa	"if not expected check secondary port in SPA"
<del>SPAWBCMIS</del> SWICHOMRSC	5-Notice	secondary portport 1 will be active for [chars]	TenGigaEth link is lost for primary port	cmts-vpa	"if not expected check secondary port in SPA"
<del>SPE3PM</del> CRCSIRAIORIER	3-Error	Failed to register [chars] with Modem Service Manager	Port Management failed to register with Modem Service Manager.	-	LOG_SID_NO_ACTION
SPE3-PM_DB_NO_MEM	3-Error	Failed to allocate [chars] for slot [dec]	Port Management failed to allocate memory to create slot object.	-	LOG_SID_NO_ACTION
<del>SPE3-PM</del> DIRCINDMQUIER	3-Error	Failed to find the response buffer for modem [chars] command	Modem direct query responses could not find buffer to send data to router shelf.	-	LOG_SID_NO_ACTION
<del>SPE3-PM</del> SOTNOMDUIIS	3-Error	Database reported 0 modules for slot [dec]	The card in this slot should contain multiple modules. However the database indicates that there are none.	-	LOG_SID_NO_ACTION
SPE-3-SM_CRASHED	3-Error	SPE [chars] crashed	The firmware running on the SPE aborted.	-	LOG_SID_NO_ACTION
<del>SPE3-PM</del> DOWNLOADED	3-Error	SPE [chars] is BAD - [chars].	The SPE failed to download and it will be marked BAD.	-	LOG_SID_NO_ACTION



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SPE3-SM_POST_FAILED	3-Error	SPE [chars] is BAD.	The SPE failed the POST and it will be marked BAD.	-	LOG_SID_NO_ACTION
SPE3-SM_RESPONSE_NO_MEM	3-Error	SPE SM out of response buffers	The PM SPE State Machine has run out of response event memroy.	port-mgmt	LOG_STD_ACTION
SPE-3-ST_API_ERR	3-Error	PM failed to create [chars].	Port Management failed to initialize the CSM event processing component.	-	LOG_STD_ACTION
SPE3-ST_EVENT_NO_MEM	3-Error	PM ST failed to create [chars].	Port Management failed to allocate dynamic chunk memory for event logging.	port-mgmt	LOG_STD_ACTION
SPE4-SPE_ACT_SESS_WARN	4-Warning	Active session count = [dec]. Country code not set	Country code cannot be set on a system with active sessions.	-	LOG_SID_NO_ACTION
SPE4-SPE_CONFIG_WARN	4-Warning	Country Code Trunk card mismatch for.	A Country Code was configured that may not work with the trunk Card.	-	LOG_SID_NO_ACTION
SPE-6-NULL_OBJ	6-Information	SPE object [chars] is unavailable.	Information about this SPE could not be retrieved. The SPE may not exist.	-	LOG_SID_NO_ACTION
SPE-6-SM_BUSIEDOUT	6-Information	SPE [chars] busiedoutmaintenance will be allowed	The SPE is taken out of service temporarily. Maintenance activities can still be performed.	-	LOG_SID_NO_ACTION
SPE-6-SM_CLEARED	6-Information	SPE [chars] Cleared	The SPE will be re-downloaded with the configured firmware.	-	LOG_SID_NO_ACTION
SPE6-SM_DHR_DOWNLOAD	6-Information	SPE [chars] : Firmware download deferred	Firmware download for the SPE is postponed due to active calls.	-	LOG_SID_NO_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SR3SR_LB_CREATE_ERR	3-Error	Error Creating SR LB start [dec] end [dec]	Error creating sr lb	ribinfra	LOG_SID_RECUR_ACTION
SR3SR_POLICY_UNLOCK	3-Error	Try to decrease zero refcount for policy %p	Attempt to decrease the refcount of policy when it is already zero.	-	LOG_STD_ACTION
SR3SR_POLICY_UNLOCK	3-Error	Try to decrease zero refcount for policy %p	Attempt to decrease the refcount of policy when it is already zero.	-	LOG_STD_ACTION
SR3SR_POLICY_UNLOCK_ERR	3-Error	Policy reference decrease on freed policy	Policy reference decrease on freed policy need to investigate	sr-policy-mgr	"This error message need to be reported and addressed by IOS XE SR team"
SR3SR_POLICY_UNLOCK_ERR	3-Error	Policy reference decrease on freed policy	Policy reference decrease on freed policy need to investigate	sr-policy-mgr	"This error message need to be reported and addressed by IOS XE SR team"
SR3SR_POLICY_UNLOCK_NORQ	3-Error	Policy ref decreased to 0 without explicit destroy	Policy reference decreased to 0 without explicit destroy need to investigate	sr-policy-mgr	"This error message need to be reported and addressed by IOS XE SR team"
SR3SR_POLICY_UNLOCK_NORQ	3-Error	Policy ref decreased to 0 without explicit destroy	Policy reference decreased to 0 without explicit destroy need to investigate	sr-policy-mgr	"This error message need to be reported and addressed by IOS XE SR team"
SR3SR_POLICY_REF_DBG_MAX	4-Warning	Policy ref log max entries [node]reached	Policy reference debug log max entries reached need to enlarge depth or optimize code	sr-policy-mgr	"This error message need to be reported and addressed by IOS XE SR team with show segment-routing traffic-eng policy all internal output"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SR</del> SR_POLICY_REFDBG_MAX	4-Warning	Policy ref log max entries [node]reached	Policy reference debug log max entries reached need to enlarge depth or optimize code	sr-policy-mgr	"This error message need to be reported and addressed by IOS XE SR team with show segment-routing traffic-eng policy all internal output"
<del>SR</del> SR_POLICY_UPDOWN	5-Notice	POLICY [chars] [chars]	A policy has either come up or gone down.The message describes the change for it.	sr-policy-mgr	" This informational message normally appears as a policy go up or down"
<del>SR</del> SR_POLICY_UPDOWN	5-Notice	POLICY [chars] [chars]	A policy has either come up or gone down.The message describes the change for it.	sr-policy-mgr	" This informational message normally appears as a policy go up or down"
<del>SR</del> SR_POLICY_UPDOWN	5-Notice	POLICY [chars] [chars]	A policy has either come up or gone down.The message describes the change for it.	sr	" This informational message normally appears as a policy go up or down"
<del>SR</del> SR_POLICY_UPDOWN	5-Notice	POLICY [chars] [chars]	A policy has either come up or gone down.The message describes the change for it.	sr	" This informational message normally appears as a policy go up or down"
<del>SR</del> SR_LABEL_RANGE_LOG	6-Information	Segment Routing MPLS [chars]	Segment Routing MPLS Label Range Insufficient	ribinfra	LOG_SID_RECUR_ACTION
<del>SR</del> SR_LABEL_RANGE_LOG	6-Information	Segment Routing MPLS [chars]	Segment Routing MPLS Label Range Insufficient	ribinfra	LOG_SID_RECUR_ACTION
SR-6-SR_STATE_LOG	6-Information	Segment Routing MPLS [chars]	Segment Routing MPLS State	ribinfra	LOG_SID_RECUR_ACTION
SR-6-SR_STATE_LOG	6-Information	Segment Routing MPLS [chars]	Segment Routing MPLS State	ribinfra	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SRC3-AFOVEN_ERROR	3-Error	Attempt to enable [chars] protection autofailover on interface [chars] when port status is [hec]	Software attempt at enabling autofailover port status is not good	-	LOG_STD_ACTION
SRC3LC_APS_NIF_FAULT	3-Error	SRC detected a APS interface fault for line card in slot [dec]	SRC detected a APS interface fault	-	LOG_STD_ACTION
SRC3LC_APSNIFNIF_FAULT	3-Error	SRC-LRC APS interface could not be initialized for line card in slot [dec]	SRC detected a APS interface fault	-	LOG_STD_ACTION
SRC3LC_APS_TIMEOUT	3-Error	SRC detected keep alive timeout on APS interface for slot [dec]	SRC detected a APS keep alive timeout fault	-	LOG_STD_ACTION
SRC3LC_CMI_NIF_FAULT	3-Error	SRC detected a CMI interface fault for line card in slot [dec]	SRC detected a CMI interface fault	-	LOG_STD_ACTION
SRC3LC_CMI_TIMEOUT	3-Error	SRC detected keep alive timeout on CMI interface for slot [dec]	SRC detected a CMI keep alive timeout fault	-	LOG_STD_ACTION
SRC3LC_REG_READ_FAIL	3-Error	Register read failed for slot [dec] addr 0x[hec] due to [chars]	SRC unable to read line card register	-	LOG_STD_ACTION
SRC3LC_REG_WRITE_FAIL	3-Error	Register write failed for slot [dec] addr 0x[hec] due to [chars]	SRC unable to write line card register	-	LOG_STD_ACTION
SCPAP <del>P</del> INTERNAL_CRITICAL	2-Critical	[chars]	-	-	LOG_SIDSH_TECH_ACTION
SCPAP <del>P</del> INTERNAL_ERROR	3-Error	[chars]	-	-	LOG_SIDSH_TECH_ACTION
SCPAP <del>P</del> INTERNAL_WARNING	4-Warning	[chars]	-	-	LOG_SIDSH_TECH_ACTION
SCPAP <del>P</del> DNSQUEUEFAILED	6-Information	Failed to create DNS message watched queue\n	Failed to create DNS message watched queue.	ios-voice	"Check the size of free memory to make sure there is enough memory."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SRCP</del> SRCP_PROCESS_READ_FAILED	6-Information	Cannot create SRCP application process\n	Failed to create the SRCP application process.	ios-voice	"Check the size of free memory to make sure there is enough memory."
<del>SRCP</del> SRCP_SOCKET_OPEN_FAILED	6-Information	Failed to open UDP port for SRCP\n	Failed to open UDP port for the SRCP process.	ios-voice	"Check if any other application use the same UDP port number 2427."
<del>SRCP</del> SRCP_SYS_QUEUE_FAILED	6-Information	Failed to create SRCP system message watched queue\n	Failed to create SRCP system message watched queue.	ios-voice	"Check the size of free memory to make sure there is enough memory."
<del>SRP</del> SRP_WRAP_PROCESS_LOCKED	1-Alert	[chars] The wrap/unwrap state-change process is locked	A wrap/unwrap state change process has not come to an end on time.	-	"If message is periodic issue a \"shut\" and \"no shut\" on the interface."
SRP3-DUP_MAC_ADDR	3-Error	[chars] : Duplicate mac addresses in topology	The topology contains 1 or more duplicate mac addresses	-	"Identify duplicate address and correct configuration."
SRP3-FALSE_VAL_ALARM	3-Error	[chars] - error in [chars]	FALSE value returned. Some features/commands may not work properly	srp	"Please Contact Cisco Systems TAC support"
SRP3-NULL_P_ALARM	3-Error	Dereferencing NULL pointer [chars] in [chars]	NULL pointer error condition exists. Some features/commands may not work properly	srp	"Please Contact Cisco Systems TAC support"
SRP3-RING_ID_ERROR	3-Error	[chars] : Rx side [chars] Tx side of fiber originates on side [chars]	The fiber on the specified side is remotely connected \nto the wrong side	-	"Verify that each side A is connected to side B" "\nand each side B is connected to side A."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SRP3SNGLE_NODE_TOPO	3-Error	[chars] : Single node in topology	The topology discovery resulted in a single node being found	-	"This can be due to duplicated mac addresses." "\nIdentify mac address of interface and ensure it is not" "\nduplicated on other nodes." "\nIf the node is in loopback disregard this message."
SRP4-ALARM	4-Warning	[chars] Side [chars] [chars]	A physical line error condition exists on the indicated network	srp	"Diagnose and repair the physical error"
SRP4-RAC_ALARM	4-Warning	[chars] Side [chars] [chars]	A physical error condition detected at the indicated RAC	srp	"Diagnose and repair the physical error"
SRP4SRR_STATE_CHANGE	4-Warning	[chars] SRR usage changed [chars]	SRR ring usage is changed using Inner Outer or Both rings.	-	"Diagnose the cause of the ring usage change."
SRP4SRR_VER_MISMATCH	4-Warning	[chars] SRR version mismatch detected.	Different SRR version received from other nodes.	-	"Update the IOS image on all nodes of the ring to the same SRR version"
SRP4WRAP_STATE_CHANGE	4-Warning	[chars] [chars] on side [chars] [chars]	The specified side of the interface is wrapped or unwrapped.	-	"Diagnose the cause of the wrap."
SRPMB3FALSE_VAL_ALARM	3-Error	[chars] - error in [chars]	FALSE value returned. Some features/commands may not work properly	srpmib	"Please Contact Cisco Systems TAC support"
SRPMB3NULL_P_ALARM	3-Error	Dereferencing NULL pointer [chars] in [chars]	NULL pointer error condition exists. Some feature/command may not work properly	srpmib	"Please Contact Cisco Systems TAC support"
SRV6_HB3DISPATCH_OCE	3-Error	Failed to [chars] SRv6 dispatch oce [chars][chars]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SRV6_FIB3DISPATCH_OCE	3-Error	Failed to [chars] SRv6 dispatch oce [chars][chars]	-	-	-
SRV6_FIB-3-DM	3-Error	Failed to [chars] SRv6 FIB Dispatch Manager [chars] [chars]	-	-	-
SRV6_FIB-3-DM	3-Error	Failed to [chars] SRv6 FIB Dispatch Manager [chars] [chars]	-	-	-
SRV6_FIB3ENCAP_INT	3-Error	Unable to initialize: [chars] [dec]	-	-	-
SRV6_FIB3ENCAP_INT	3-Error	Unable to initialize: [chars] [dec]	-	-	-
SRV6_FIB3ENCAP_MGR	3-Error	[chars] [chars]: [chars] [dec]	-	-	-
SRV6_FIB3ENCAP_MGR	3-Error	[chars] [chars]: [chars] [dec]	-	-	-
SRV6_FIB3ENCAP_OCE	3-Error	[chars] for OCE [node][dec] with parent [chars]	-	-	-
SRV6_FIB3ENCAP_OCE	3-Error	[chars] for OCE [node][dec] with parent [chars]	-	-	-
SRV6_FIB-3-END_OCE	3-Error	Failed to [chars] SRv6 end oce [chars][chars]	An internal software error occurred.	CFCSR6_MGDDISCOMP	LOG_STD_ACTION
SRV6_FIB-3-END_OCE	3-Error	Failed to [chars] SRv6 end oce [chars][chars]	An internal software error occurred.	CFCSR6_MGDDISCOMP	LOG_STD_ACTION
SRV6_FIB-3-LOCAL_SID	3-Error	Failed to [chars] for local SID [chars]	An internal software error occurred affecting SRv6 FIB Policies.	CFCSR6_MGDDISCOMP	LOG_STD_ACTION
SRV6_FIB-3-LOCAL_SID	3-Error	Failed to [chars] for local SID [chars]	An internal software error occurred affecting SRv6 FIB Policies.	CFCSR6_MGDDISCOMP	LOG_STD_ACTION



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SRV6_FIB-3-PAK_HNDL	3-Error	Failed to [chars] SRv6 packet handler [chars][chars]	-	-	-
SRV6_FIB-3-PAK_HNDL	3-Error	Failed to [chars] SRv6 packet handler [chars][chars]	-	-	-
SRV6_FIB-3-POLICY	3-Error	Failed to [chars] for Policy [node][chars]:[chars]	-	-	-
SRV6_FIB-3-POLICY	3-Error	Failed to [chars] for Policy [node][chars]:[chars]	-	-	-
SRV6_FIB-3-VPN_SID	3-Error	Failed to [chars] for VPN SID on [chars] path [chars]	-	-	-
SRV6_FIB-3-VPN_SID	3-Error	Failed to [chars] for VPN SID on [chars] path [chars]	-	-	-
SRV6_FB5ENCAP_MODE	5-Notice	Encapsulation mode set to [chars]	SRv6 infrastructure is changing how it performs encapsulation.	GCSRV6MGDDISCOMP	LOG_STD_ACTION
SRV6_FB5ENCAP_MODE	5-Notice	Encapsulation mode set to [chars]	SRv6 infrastructure is changing how it performs encapsulation.	GCSRV6MGDDISCOMP	LOG_STD_ACTION
SRW-7BAD_SRW_DATA	7-Debug	Bad SRW data [node]x	An internal software error occurred.	ribinfra	LOG_SID_RECUR_ACTION
SRW-7BAD_SRW_MAGIC	7-Debug	Bad SRW magic [node]x @ [node]x	An internal software error occurred.	ribinfra	LOG_SID_RECUR_ACTION
SRW-7-SRW_ERROR	7-Debug	[chars]: [hec] [hec] [dec] [dec] [dec] [dec] [hec]	An internal software error occurred.	ribinfra	LOG_SID_RECUR_ACTION
SRW-7-SRW_ERROR2	7-Debug	[chars]: [hec] [hec] [dec] [dec] [dec] [dec] [hec] [hec] [hec] [hec] [dec]	An internal software error occurred.	ribinfra	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SRW-7-SRW_ERROR3	7-Debug	[chars]: [hec] [hec] [dec] [dec] [dec] [dec] [hec] [hec] [hec] [dec] [hec] [dec]	An internal software error occurred.	ribinfra	LOG_SID_RECUR_ACTION
SS2INITIALIZATION_FAILED	2-Critical	polaris-infra	"Initialization of [chars] failed for IOx Secure Storage"	"Initialization of IOx Secure storage process failed."	"Review ioxss logs taking note of the timestamp information to select specific information to review. Copy the message and other related information exactly as it appears on the console or in the system log."
SSE-2-BOGUSEQ	2-Critical	SSE bogus equal branch [hex] [hex] [dec] [hec]	An internal inconsistency in the data structures used by the SSE occurred.	-	LOG_SID_SH_TECH_ACTION
SSE-2-HUNG	2-Critical	SSE hung -- [chars]	The SSE is hung.	-	"Reboot the SSE."
SSE-2-HWFAILURE	2-Critical	SSE hardware failure -- [chars] code [hex]	A hardware error occurred indicating an unexpected condition on the silicon switch processor SSP board.	-	"It might be necessary to replace the SSP. " LOG_SID_SH_TECH_ACTION
SSE-2-MEMERROR	2-Critical	SSE memory failure address [hex] expected [hex] got [hex]	A hardware error occurred indicating memory failure on the silicon switch processor SSP board.	-	"It might be necessary to replace the SSP. " LOG_SID_SH_TECH_ACTION
SSE-2-NESTADDR	2-Critical	SSE nested addresses detected protocol [dec] %i	An internal inconsistency in the data structures used by the SSE occurred.	-	LOG_SID_SH_TECH_ACTION
SSE-2-NOMATCH	2-Critical	SSE delete didn't end at a match node type [chars] value [dec] address [node]bytecount [dec] high [dec] state [dec]	An internal inconsistency in the data structures used by the SSE occurred.	-	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SSE-2-NOMEMORY	2-Critical	No memory available for [chars]	An operation could not be accomplished because of a low memory condition.	-	"Reduce other system activity to ease memory demands. If conditions warrant upgrade to a larger memory configuration."
SSE-2-NOTZERO	2-Critical	program memory does not start at zero	A hardware error occurred indicating an unexpected condition on the silicon switch processor SSP board.	-	"It might be necessary to replace the SSP. " LOGS_IDSHTTECH_ACTION
SSE-2-SWFAILURE	2-Critical	SSE software failure -- [chars] [hex]	A software failure occurred.	-	LOGS_IDSHTTECH_ACTION
SSE-3-BADMEMORY	3-Error	SSE memory failure detected orig [hex] [hex] tested [hex] [hex]	A memory error occurred.	-	LOGS_IDSHTTECH_ACTION
SSE-3-COMPERR	3-Error	SSE compilation failure -- [chars]	A software failure occurred.	-	LOGS_IDSHTTECH_ACTION
SSFP_TPOP4CONF_ADD	4-Warning	TPoP SSFP is Configured \ on interface [chars]\n	TPoP SSFP is Configured	-	"None - normal situation"
SSFP_TPOP4CONF_DEL	4-Warning	TPoP SSFP is Unconfigured on \ interface [chars]\n	TPoP SSFP is Unconfigured	-	"None - normal situation"
SSFP_TPOP4CONFERR_ADD	4-Warning	Failed to Configure TPoP \ on interface [chars]\n	Failed to configure TPoP	-	"None - normal situation"
SSFP_TPOP4CONFERR_DEL	4-Warning	Failed to Unconfigure TPoP \ on interface [chars]\n	Failed to unconfigure TPoP	-	"None - normal situation"
SSFP_TPOP4CONF_EXIST	4-Warning	Port Type is already \ configured on this interface [chars].\n \ [node]remove the existing TPoP configuration and try again.\n	TPoP configuration is already present.	-	"None - normal situation"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SSFP_VCoP4CONF_ADD	4-Warning	VCoP SSFP is Configured \ on interface [chars]\n	VCoP SSFP is Configured	-	"None - normal situation"
SSFP_VCoP4CONF_DEL	4-Warning	VCoP SSFP is Unconfigured on \ interface [chars]\n	VCoP SSFP is Unconfigured	-	"None - normal situation"
SSFP_VCoP4CONF_ERR_ADD	4-Warning	Failed to Configure VCoP \ on interface [chars]\n	Failed to configure VCoP	-	"None - normal situation"
SSFP_VCoP4CONF_ERR_DEL	4-Warning	Failed to Unconfigure VCoP \ on interface [chars]\n	Failed to unconfigure VCoP	-	"None - normal situation"
SSFP_VCoP4CONF_EXIST	4-Warning	Port Type is already \ configured on this interface [chars].\n \ [node]remove the existing VCoP configuration and try again.\n	VCoP configuration is already present.	-	"None - normal situation"
SSFP_VCoP4DEV_INS	4-Warning	VCoP SSFP is Inserted into [chars]\n	VCoP SSFP is Inserted	-	"None - normal situation"
SSFP_VCoP4DEV_REM	4-Warning	VCoP SSFP is Removed from [chars]\n	VCoP SSFP is Removed	-	"None - normal situation"
SFPBACKWARDINCOMPABLE	3-Error	Upgrade failed for Smart SFP in bay [dec] port [dec] PP backward incompatible with Titan	Smart SFP upgrade fail notification. This is a software error.	-	LOG_SIDSHTTECH_ACTION
SFP_CN_NOT_MANAGEABLE	3-Error	Upgrade failed for Smart SFP in bay [dec] port [dec] CN not manageable	Smart SFP upgrade fail notification. This is a software error.	-	LOG_SIDSHTTECH_ACTION
SFPD3UPGRADE_FAILED	3-Error	Upgrade failed for Smart SFP in bay [dec] port [dec]	Smart SFP upgrade fail notification. This is a software error.	-	LOG_SIDSHTTECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SSFD6NOCONTENTCHANGE	6-Information	Skipping upgrade for for Smart SFP in bay [dec] port [dec] Smart SFP already running same version	Smart SFP upgrade fail notification. This is a software error.	-	LOGSIDSHTTECHACTION
SSFD6NOTDISCOVERED	6-Information	Skipping upgrade for Smart SFP in bay [dec] port [dec] discovery incomplete	Smart SFP upgrade fail notification. This could be a software/Hardware error.	-	LOGSIDSHTTECHACTION
SSFD6NOCPSPWRCMD	6-Information	Skipping CLI command as smart SFP upgrade already in progress Retry once upgrade completed	Skipping SFP software version command during upgradation. This is not a software error.	-	LOGSIDSHTTECHACTION
SSFD6UPGRADECOMPLETE	6-Information	Upgrade for Smart SFP in bay [dec] port [dec] complete	Smart SFP upgrade complete notification. This is not a software error.	-	LOGSIDSHTTECHACTION
SSFD6UPGRADEINPROGRESS	6-Information	Skipping upgrade for for Smart SFP in bay [dec] port [dec] Smart SFP upgrade already in progress	Smart SFP upgrade fail notification. This is not a software error.	-	LOGSIDSHTTECHACTION
SSFD6UPGRADEREQUIRED	6-Information	PP version Upgrade required for Smart SFP in bay [dec] port [dec]. Use 'upgrade hw-programmable sfp slot <logical-slot> bay <bay-number> port <port-number>' cli for upgrade	Smart SFP upgrade fail notification. This is not a software error.	-	LOGSIDSHTTECHACTION
SSFD6UPGRADESTARTED	6-Information	Upgrade started for Smart SFP in bay [dec] port [dec]	Smart SFP upgrade start notification. This is not a software error.	-	LOGSIDSHTTECHACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SSH3-AUTH_MEIH_ERR	3-Error	Server does not support password or keyboard-interactive authentication	No common supported authentication methods exist	-	-
SSH3-AUTH_MEIH_ERR	3-Error	Server does not support password or keyboard-interactive authentication	No common supported authentication methods exist	-	-
SSH3-BAD_PACK_LEN	3-Error	Bad packet length [dec]	Bad packet length packet decompose failed	ssh	LOG_STD_ACTION
SSH3-BAD_PACK_LEN	3-Error	Bad packet length [dec]	Bad packet length packet decompose failed	ssh	LOG_STD_ACTION
SSH3-BIG_NUM_BIG	3-Error	Big num error: Cannot handle big num of size %u	Key operations tried to retrieve a big num of too large a value	ssh	LOG_STD_ACTION
SSH3-BIG_NUM_BIG	3-Error	Big num error: Cannot handle big num of size %u	Key operations tried to retrieve a big num of too large a value	ssh	LOG_STD_ACTION
SSH3-BUFF_GET_FAIL	3-Error	Tried to get more bytes than in SSH Buffer	Tried to retrieve more data than actually present in the buffer	ssh	LOG_STD_ACTION
SSH3-BUFF_GET_FAIL	3-Error	Tried to get more bytes than in SSH Buffer	Tried to retrieve more data than actually present in the buffer	ssh	LOG_STD_ACTION
SSH3-BUFF_LEN_EXCD	3-Error	Buffer Length exceeded	Tried to allocate or append a buffer beyond its maximum length	ssh	LOG_STD_ACTION
SSH3-BUFF_LEN_EXCD	3-Error	Buffer Length exceeded	Tried to allocate or append a buffer beyond its maximum length	ssh	LOG_STD_ACTION
SSH3-CIPH_INIT_FAIL	3-Error	Cipher initialization failed	Cipher initialization failed failed to set new keys	ssh	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SSH-3-CIPH_INIT_FAIL	3-Error	Cipher initialization failed	Cipher initialization failed failed to set new keys	ssh	LOG_STD_ACTION
SSH-BDH_EX_RANGE_OUT	3-Error	Server has chosen DH group size which is not in range [dec] !< [dec] !< [dec] DH Group Exchange key negotiation failed	Server must choose DH group size which falls between client sent min/max	ssh	"If this message recurs contact your technical support representative."
SSH-BDH_EX_RANGE_OUT	3-Error	Server has chosen DH group size which is not in range [dec] !< [dec] !< [dec] DH Group Exchange key negotiation failed	Server must choose DH group size which falls between client sent min/max	ssh	"If this message recurs contact your technical support representative."
SSH-3-DH_RANGE_FAIL	3-Error	Client DH key range mismatch with [chars] configured DH key on server	DH Range mismatch with min/max configured DH key on server DH negotiation failed	ssh	LOG_STD_ACTION
SSH-3-DH_RANGE_FAIL	3-Error	Client DH key range mismatch with [chars] configured DH key on server	DH Range mismatch with min/max configured DH key on server DH negotiation failed	ssh	LOG_STD_ACTION
SSH-3-DH_SECRET_FAIL	3-Error	DH shared secret computation failed status [dec]	DH secret value computation failed this is required in DH negotiation cannot move on hence aborting	ssh	LOG_STD_ACTION
SSH-3-DH_SECRET_FAIL	3-Error	DH shared secret computation failed status [dec]	DH secret value computation failed this is required in DH negotiation cannot move on hence aborting	ssh	LOG_STD_ACTION
SSH-3-DH_SIZE	3-Error	DH public key size > DH group key size%u	DH negotiation failed due to size mismatch between public key size and group size	ssh	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SSH-3-DH_SIZE	3-Error	DH public key size > DH group key size%u	DH negotiation failed due to size mismatch between public key size and group size	ssh	LOG_STD_ACTION
SSH3ECDSA_SGN_FAIL	3-Error	Signature [chars] failed status [dec]	ECDSA Signature verification failed	ssh	LOG_STD_ACTION
SSH3ECDSA_SGN_FAIL	3-Error	Signature [chars] failed status [dec]	ECDSA Signature verification failed	ssh	LOG_STD_ACTION
SSH3-HOSTKEY_FAIL	3-Error	Cannot load hostkey	Hostkey load has failed causing dh key negotiations to fail	ssh	LOG_STD_ACTION
SSH3-HOSTKEY_FAIL	3-Error	Cannot load hostkey	Hostkey load has failed causing dh key negotiations to fail	ssh	LOG_STD_ACTION
SSH3-IDLE_TIMEOUT	3-Error	Idle timeout due to no response from the remote machine	No response from the remote machine	ssh	LOG_STD_ACTION
SSH3-IDLE_TIMEOUT	3-Error	Idle timeout due to no response from the remote machine	No response from the remote machine	ssh	LOG_STD_ACTION
SSH-3-INCOMP_DH	3-Error	Incompatible DH Proposal from Server	Incompatible DH proposal received from server cannot proceed	ssh	LOG_STD_ACTION
SSH-3-INCOMP_DH	3-Error	Incompatible DH Proposal from Server	Incompatible DH proposal received from server cannot proceed	ssh	LOG_STD_ACTION
SSH-3-INV_CONN	3-Error	Invalid Connection Block	Invalid Connection Block	ssh	LOG_STD_ACTION
SSH-3-INV_CONN	3-Error	Invalid Connection Block	Invalid Connection Block	ssh	LOG_STD_ACTION
SSH-3-INV_MOD	3-Error	Invalid modulus length	Invalid modulus length	-	-
SSH-3-INV_MOD	3-Error	Invalid modulus length	Invalid modulus length	-	-



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SSH-3-KEX_NOT_SUPP	3-Error	Unsupported key exchange method: [dec]	The key exchange type proposed is not supported by IOS SSH. Kindly check the SSH settings to verify the group used.	ssh	"Kindly check the SSH settings to verify the " "key exchange method used. Or contact your technical support " "representative for any help"
SSH-3-KEX_NOT_SUPP	3-Error	Unsupported key exchange method: [dec]	The key exchange type proposed is not supported by IOS SSH. Kindly check the SSH settings to verify the group used.	ssh	"Kindly check the SSH settings to verify the " "key exchange method used. Or contact your technical support " "representative for any help"
SSH-3-KEX_SHORT	3-Error	Kex proposal too short	Key exchange failed as the kex proposal was too short	ssh	LOG_STD_ACTION
SSH-3-KEX_SHORT	3-Error	Kex proposal too short	Key exchange failed as the kex proposal was too short	ssh	LOG_STD_ACTION
SSH-3-KEY_GEN_FAIL	3-Error	DH key generation failed. Status [dec]	DH key generation failed	ssh	LOG_STD_ACTION
SSH-3-KEY_GEN_FAIL	3-Error	DH key generation failed. Status [dec]	DH key generation failed	ssh	LOG_STD_ACTION
SSH-3-KEYPAIR	3-Error	Attempt to generate server keys failed - error code: [chars]	Server RSA key-pair could not be generated.	ssh	"If this message recurs contact your technical support representative."
SSH-3-KEYPAIR	3-Error	Attempt to generate server keys failed - error code: [chars]	Server RSA key-pair could not be generated.	ssh	"If this message recurs contact your technical support representative."
SSH-3-LOCAL_RST	3-Error	Local Reset happened due to line termination/disconnection	Line termination or request for a disconnection	ssh	LOG_STD_ACTION
SSH-3-LOCAL_RST	3-Error	Local Reset happened due to line termination/disconnection	Line termination or request for a disconnection	ssh	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SSH-3-NO_CHANNEL	3-Error	Non-existent channel [dec]	Non-existent channel id received	ssh	LOG_STD_ACTION
SSH-3-NO_CHANNEL	3-Error	Non-existent channel [dec]	Non-existent channel id received	ssh	LOG_STD_ACTION
SSH-3-NO_DH_GRP	3-Error	Non Standard DH Group aborting key exchange	Non standard DH group sent hence aborting key exchange kindly verify your SSH parameters	ssh	"Kindly check the SSH settings to check the key " "exchange group used. Or contact your technical " "support representative for further help"
SSH-3-NO_DH_GRP	3-Error	Non Standard DH Group aborting key exchange	Non standard DH group sent hence aborting key exchange kindly verify your SSH parameters	ssh	"Kindly check the SSH settings to check the key " "exchange group used. Or contact your technical " "support representative for further help"
SSH-3-NO_KEX	3-Error	No Kex cannot rekey	Rekey failed failed to get kex information	ssh	LOG_STD_ACTION
SSH-3-NO_KEX	3-Error	No Kex cannot rekey	Rekey failed failed to get kex information	ssh	LOG_STD_ACTION
SSH-3-NO_MATCH	3-Error	No matching [chars] found: client [chars] server [chars]	The specified entity cipher or mac or comp algo etc was not found please check the corresponding parameter and try again	ssh	"If you believe you are incorrectly receiving this " "message please contact your " "technical support representative"
SSH-3-NO_MATCH	3-Error	No matching [chars] found: client [chars] server [chars]	The specified entity cipher or mac or comp algo etc was not found please check the corresponding parameter and try again	ssh	"If you believe you are incorrectly receiving this " "message please contact your " "technical support representative"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SSH-3-NO_USERAUTH	3-Error	No auth method configured for SSH [chars]. Incoming connection from [chars] tty = [dec] dropped	At least one auth method should be configured for SSH server	ssh	"Please configure at least one auth method. " "If this message recurs contact your technical support representative."
SSH-3-NO_USERAUTH	3-Error	No auth method configured for SSH [chars]. Incoming connection from [chars] tty = [dec] dropped	At least one auth method should be configured for SSH server	ssh	"Please configure at least one auth method. " "If this message recurs contact your technical support representative."
SSH-3-NOMEMORY	3-Error	Memory allocation failed.	A Malloc has failed during SSH execution	ssh	"System seems to be running low on memory if this " "message recurs please contact your technical " "support representative"
SSH-3-NOMEMORY	3-Error	Memory allocation failed.	A Malloc has failed during SSH execution	ssh	"System seems to be running low on memory if this " "message recurs please contact your technical " "support representative"
SSH-3-NOT_SUPP	3-Error	Matching [chars] not supported: [chars]	The specified entity cipher or mac or comp algo etc is not supported by IOS SSH	ssh	"If you believe you are incorrectly receiving " "this message please contact " "your technical support representative"
SSH-3-NOT_SUPP	3-Error	Matching [chars] not supported: [chars]	The specified entity cipher or mac or comp algo etc is not supported by IOS SSH	ssh	"If you believe you are incorrectly receiving " "this message please contact " "your technical support representative"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SSH3-PACK_CORR_PAD	3-Error	Corrupted padlen [dec] on input	Packet with corrupted padd length received causing packet decompose to fail	ssh	LOG_STD_ACTION
SSH3-PACK_CORR_PAD	3-Error	Corrupted padlen [dec] on input	Packet with corrupted padd length received causing packet decompose to fail	ssh	LOG_STD_ACTION
SSH3-PACK_NIEG_ERRCR	3-Error	Packet integrity error [dec] bytes remaining from [chars]	Packet error incorrect amount of data received	ssh	LOG_STD_ACTION
SSH3-PACK_NIEG_ERRCR	3-Error	Packet integrity error [dec] bytes remaining from [chars]	Packet error incorrect amount of data received	ssh	LOG_STD_ACTION
SSH3-PACK_PADD_ERR	3-Error	Padding error: needed [dec] bytes block size [dec] bytes mod= [dec]	Padding error packet decompose failed	ssh	LOG_STD_ACTION
SSH3-PACK_PADD_ERR	3-Error	Padding error: needed [dec] bytes block size [dec] bytes mod= [dec]	Padding error packet decompose failed	ssh	LOG_STD_ACTION
SSH3-PACK_SND_FAIL	3-Error	Packet send failed	A packet send failed within ssh code	ssh	LOG_STD_ERROR
SSH3-PACK_SND_FAIL	3-Error	Packet send failed	A packet send failed within ssh code	ssh	LOG_STD_ERROR
SSH-3-PRIVATEKEY	3-Error	Unable to retrieve RSA private key for [chars]	RSA private key does not exist or is corrupted.	ssh	"If this message recurs contact your technical support representative."
SSH-3-PRIVATEKEY	3-Error	Unable to retrieve RSA private key for [chars]	RSA private key does not exist or is corrupted.	ssh	"If this message recurs contact your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SSH3PROC_MISMATCH	3-Error	SSH [chars] Incorrect process waiting for event. Process name: [chars]	An incorrect process has entered ssh wait for event ideally only SSH Process on the server or Exec process on the client are allowed to wait for event through ssh	ssh	"No action necessary - informational message"
SSH3PROC_MISMATCH	3-Error	SSH [chars] Incorrect process waiting for event. Process name: [chars]	An incorrect process has entered ssh wait for event ideally only SSH Process on the server or Exec process on the client are allowed to wait for event through ssh	ssh	"No action necessary - informational message"
SSHBRANDOM_GEN_FAIL	3-Error	Unable to generate random number	Random number generation error	ssh	"If this message recurs contact your technical support representative."
SSHBRANDOM_GEN_FAIL	3-Error	Unable to generate random number	Random number generation error	ssh	"If this message recurs contact your technical support representative."
SSH3-RSA_SIGN_FAIL	3-Error	Signature [chars] failed status [dec]	RSA Signature creation/verification failed	ssh	LOG_STD_ACTION
SSH3-RSA_SIGN_FAIL	3-Error	Signature [chars] failed status [dec]	RSA Signature creation/verification failed	ssh	LOG_STD_ACTION
SSH3-SER_NOT_DEF	3-Error	ServerHostKey not defined in SSH Server Database	Server Host key is not present in SSH Server Database causing host key verification to fail	ssh	LOG_STD_ACTION
SSH3-SER_NOT_DEF	3-Error	ServerHostKey not defined in SSH Server Database	Server Host key is not present in SSH Server Database causing host key verification to fail	ssh	LOG_STD_ACTION
SSH3-SER_VAL_FAIL	3-Error	ServerHostKey Validation failed. Key Mismatch	ServerHostKey Validation failed. Key Mismatch	ssh	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SSH-3-SER_VAL_FAIL	3-Error	ServerHostKey Validation failed. Key Mismatch	ServerHostKey Validation failed. Key Mismatch	ssh	LOG_STD_ACTION
<del>SSH-3-SER_VAL_FAIL</del>	3-Error	Server does not support/Configured with '[chars]' Authentication method	No common supported authentication methods exist	ssh	LOG_STD_ACTION
<del>SSH-3-SER_VAL_FAIL</del>	3-Error	Server does not support/Configured with '[chars]' Authentication method	No common supported authentication methods exist	ssh	LOG_STD_ACTION
<del>SSH-3-SER_VAL_FAIL</del>	3-Error	SSH RSA Key Size compliance violation detected. The usage of keys smaller than [dec] bits are deprecated now as notified.	As notified earlier Smaller key size are deprecated.	ssh	"Revise your key configuration to avoid " "service impact."
<del>SSH-3-SER_VAL_FAIL</del>	3-Error	SSH RSA Key Size compliance violation detected. The usage of keys smaller than [dec] bits are deprecated now as notified.	As notified earlier Smaller key size are deprecated.	ssh	"Revise your key configuration to avoid " "service impact."
SSH-3-STRING_NULL	3-Error	Tried to append NULL string to buffer	A function tried to append a NULL string to buffer or packet which shouldn't happen	ssh	LOG_STD_ACTION
SSH-3-STRING_NULL	3-Error	Tried to append NULL string to buffer	A function tried to append a NULL string to buffer or packet which shouldn't happen	ssh	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SSH-4-DEATTACK	4-Warning	CRC-32 compensation attack detected src [node]dst [node]attack thwarted. Connection is closed.	CRC-32 compensation vulnerability allows an attacker to execute arbitrary commands on the SSH server or otherwise subvert an encrypted SSH channel with arbitrary data. for more information on this attack see <a href="http://www.cve.com/ssh">http://www.cve.com/ssh</a>	ssh	"No action necessary - attack has been thwarted"
SSH-4-DEATTACK	4-Warning	CRC-32 compensation attack detected src [node]dst [node]attack thwarted. Connection is closed.	CRC-32 compensation vulnerability allows an attacker to execute arbitrary commands on the SSH server or otherwise subvert an encrypted SSH channel with arbitrary data. for more information on this attack see <a href="http://www.cve.com/ssh">http://www.cve.com/ssh</a>	ssh	"No action necessary - attack has been thwarted"
<del>SSH-4-DEATTACK</del>	4-Warning	SSH RSA Key Size compliance violation detected. Kindly note that the usage of keys smaller than [dec] bits is not recommended for SSH 2.0. Please revise your key configuration accordingly to avoid service impact.	SSH user is hereby warned about the the RSA key size that is currently employed and is advised to effect the required configuration changes to avoid the possibility of service impact in the future.	ssh	"This is an informational message and can be " "dismissed. At the same time it is highly recommended that the user " "makes required configuration changes at the earliest to avoid service " "impacts upon software upgrades."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SSH-5-SSH_CLOSE</del>	4-Warning	SSH RSA Key Size compliance violation detected. Kindly note that the usage of keys smaller than [dec] bits is not recommended for SSH 2.0. Please revise your key configuration accordingly to avoid service impact.	SSH user is hereby warned about the the RSA key size that is currently employed and is advised to effect the required configuration changes to avoid the possibility of service impact in the future.	ssh	"This is an informational message and can be " "dismissed. At the same time it is highly recommended that the user " "makes required configuration changes at the earliest to avoid service " "impacts upon software upgrades."
<del>SSH-5-UNEXPECTEDMSG</del>	4-Warning	Unexpected message type has arrived. Terminating the connection from [chars]	SSH Session closure warning on receiving an inappropriate message from the peer	ssh	"If this message recurs contact your technical support representative."
<del>SSH-5-UNEXPECTEDMSG</del>	4-Warning	Unexpected message type has arrived. Terminating the connection from [chars]	SSH Session closure warning on receiving an inappropriate message from the peer	ssh	"If this message recurs contact your technical support representative."
SSH-5-DISABLED	5-Notice	SSH [dec].[dec] has been disabled	The SSH protocol has been disabled for connections	ssh	"No action necessary - informational message"
SSH-5-DISABLED	5-Notice	SSH [dec].[dec] has been disabled	The SSH protocol has been disabled for connections	ssh	"No action necessary - informational message"
SSH-5-ENABLED	5-Notice	SSH [dec].[dec] has been enabled	The SSH protocol has been enabled for connections	ssh	"No action necessary - informational message"
SSH-5-ENABLED	5-Notice	SSH [dec].[dec] has been enabled	The SSH protocol has been enabled for connections	ssh	"No action necessary - informational message"
SSH-5-SSH_CLOSE	5-Notice	SSH Session from [chars] tty = [dec] for user '[chars]'	The SSH Session closure information	ssh	"No action necessary - informational message"
SSH-5-SSH_CLOSE	5-Notice	SSH Session from [chars] tty = [dec] for user '[chars]'	The SSH Session closure information	ssh	"No action necessary - informational message"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SIOMINVDIHFPSKAG</del>	5-Notice	SSH Host-key Algorithm compliance violation detected. Kindly note that weaker Host-key Algorithm '[chars]' is being deprecated it will be obsolete in the upcoming releases. Please configure more stronger Host-Key algorithms to avoid service impact.	SSH user is hereby informed about the impending deprecation of public key algorithm that is currently employed and is advised to effect the required configuration changes to avoid the possibility of service impact in the future.	ssh	"This is an informational message and can be " "dismissed. At the same time it is highly recommended that the user " "makes required configuration changes at the earliest to avoid service " "impacts upon software upgrades."
<del>SIOMINVDIHFPSKAG</del>	5-Notice	SSH Host-key Algorithm compliance violation detected. Kindly note that weaker Host-key Algorithm '[chars]' is being deprecated it will be obsolete in the upcoming releases. Please configure more stronger Host-Key algorithms to avoid service impact.	SSH user is hereby informed about the impending deprecation of public key algorithm that is currently employed and is advised to effect the required configuration changes to avoid the possibility of service impact in the future.	ssh	"This is an informational message and can be " "dismissed. At the same time it is highly recommended that the user " "makes required configuration changes at the earliest to avoid service " "impacts upon software upgrades."
<del>SIOMINVDIHFPSKAG</del>	5-Notice	SSH Public-key Algorithm compliance violation detected. Kindly note that weaker Public-key Algorithm '[chars]' is being deprecated it will be obsolete in the upcoming releases. Please configure more stronger PK algorithms to avoid service impact.	SSH user is hereby informed about the impending deprecation of public key algorithm that is currently employed and is advised to effect the required configuration changes to avoid the possibility of service impact in the future.	ssh	"This is an informational message and can be " "dismissed. At the same time it is highly recommended that the user " "makes required configuration changes at the earliest to avoid service " "impacts upon software upgrades."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SSH</del> <del>COM</del> <del>INFO</del> <del>DEF</del> <del>CRIT</del>	5-Notice	SSH Public-key Algorithm compliance violation detected. Kindly note that weaker Public-key Algorithm '[chars]' is being deprecated it will be obsolete in the upcoming releases. Please configure more stronger PK algorithms to avoid service impact.	SSH user is hereby informed about the impending deprecation of public key algorithm that is currently employed and is advised to effect the required configuration changes to avoid the possibility of service impact in the future.	ssh	"This is an informational message and can be " "dismissed. At the same time it is highly recommended that the user " "makes required configuration changes at the earliest to avoid service " "impacts upon software upgrades."
<del>SSH</del> <del>COM</del> <del>INFO</del> <del>DEF</del> <del>CRIT</del>	5-Notice	SSH Encryption Algorithm compliance violation detected. Cisco recommends against 3DES because of strength attack surface and interoperability concerns. Kindly note that the usage of Algorithm type '[chars]' will be obsolete in the upcoming releases. Please configure alternate encryption algorithms to avoid service impact.	SSH user is hereby informed about the impending deprecation of the encryption algorithm that is currently employed and is advised to effect the required configuration changes to avoid the possibility of service impact in the future.	ssh	"This is an informational message and can be " "dismissed. At the same time it is highly recommended that the user " "makes required configuration changes at the earliest to avoid service " "impacts upon software upgrades."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SSH</del> <del>COM</del> <del>NEED</del> <del>ERR</del> <del>CR</del> <del>AG</del>	5-Notice	SSH Encryption Algorithm compliance violation detected. Cisco recommends against 3DES because of strength attack surface and interoperability concerns. Kindly note that the usage of Algorithm type '[chars]' will be obsolete in the upcoming releases. Please configure alternate encryption algorithms to avoid service impact.	SSH user is hereby informed about the impending deprecation of the encryption algorithm that is currently employed and is advised to effect the required configuration changes to avoid the possibility of service impact in the future.	ssh	"This is an informational message and can be " "dismissed. At the same time it is highly recommended that the user " "makes required configuration changes at the earliest to avoid service " "impacts upon software upgrades."
<del>SSH</del> <del>COM</del> <del>NEED</del> <del>ERR</del> <del>CR</del> <del>AG</del>	5-Notice	SSH Host-key Algorithm compliance violation detected. Kindly note that weaker Host-key Algorithm '[chars]' will be disabled by-default in the upcoming releases. Please configure more stronger Host-Key algorithms to avoid service impact.	SSH user is hereby informed about the impending removal of host key algorithm from default HK list that is currently employed and is advised to effect the required configuration changes to avoid the possibility of service impact in the future.	ssh	"This is an informational message and can be " "dismissed. At the same time it is highly recommended that the user " "makes required configuration changes at the earliest to avoid service " "impacts upon software upgrades."
<del>SSH</del> <del>COM</del> <del>NEED</del> <del>ERR</del> <del>CR</del> <del>AG</del>	5-Notice	SSH Host-key Algorithm compliance violation detected. Kindly note that weaker Host-key Algorithm '[chars]' will be disabled by-default in the upcoming releases. Please configure more stronger Host-Key algorithms to avoid service impact.	SSH user is hereby informed about the impending removal of host key algorithm from default HK list that is currently employed and is advised to effect the required configuration changes to avoid the possibility of service impact in the future.	ssh	"This is an informational message and can be " "dismissed. At the same time it is highly recommended that the user " "makes required configuration changes at the earliest to avoid service " "impacts upon software upgrades."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SSH-COMMON-DKACG</del>	5-Notice	SSH Public-key Algorithm compliance violation detected. Kindly note that weaker Public-key Algorithm '[chars]' will be disabled by-default in the upcoming releases. Please configure more stronger PK algorithms to avoid service impact.	SSH user is hereby informed about the impending removal of public key algorithm from default PK list that is currently employed and is advised to effect the required configuration changes to avoid the possibility of service impact in the future.	ssh	"This is an informational message and can be " "dismissed. At the same time it is highly recommended that the user " "makes required configuration changes at the earliest to avoid service " "impacts upon software upgrades."
<del>SSH-COMMON-DKACG</del>	5-Notice	SSH Public-key Algorithm compliance violation detected. Kindly note that weaker Public-key Algorithm '[chars]' will be disabled by-default in the upcoming releases. Please configure more stronger PK algorithms to avoid service impact.	SSH user is hereby informed about the impending removal of public key algorithm from default PK list that is currently employed and is advised to effect the required configuration changes to avoid the possibility of service impact in the future.	ssh	"This is an informational message and can be " "dismissed. At the same time it is highly recommended that the user " "makes required configuration changes at the earliest to avoid service " "impacts upon software upgrades."
SSH-5-SSH_SESSION	5-Notice	SSH Session request from [chars] tty = [dec] using crypto cipher '[chars]' [chars]	The SSH session request information	ssh	"No action necessary - informational message"
SSH-5-SSH_SESSION	5-Notice	SSH Session request from [chars] tty = [dec] using crypto cipher '[chars]' [chars]	The SSH session request information	ssh	"No action necessary - informational message"
SSH5-SSH_USERAUTH	5-Notice	User '[chars]' authentication for SSH Session from [chars] tty = [dec]	The SSH user authentication status information	ssh	"No action necessary - informational message"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SSH-5-SSH_USERAUTH	5-Notice	User '[chars]' authentication for SSH Session from [chars] tty = [dec]	The SSH user authentication status information	ssh	"No action necessary - informational message"
SSH-5-SSH2_CLOSE	5-Notice	SSH2 Session from [chars] tty = [dec] for user '[chars]'	The SSH Session closure information	ssh	"No action necessary - informational message"
SSH-5-SSH2_CLOSE	5-Notice	SSH2 Session from [chars] tty = [dec] for user '[chars]'	The SSH Session closure information	ssh	"No action necessary - informational message"
SSH-5-SSH2_SESSION	5-Notice	SSH2 Session request from [chars] tty = [dec] using crypto cipher '[chars]' hmac '[chars]' [chars]	The SSH session request information	ssh	"No action necessary - informational message"
SSH-5-SSH2_SESSION	5-Notice	SSH2 Session request from [chars] tty = [dec] using crypto cipher '[chars]' hmac '[chars]' [chars]	The SSH session request information	ssh	"No action necessary - informational message"
SSH-5-SSH2_USERAUTH	5-Notice	User '[chars]' authentication for SSH2 Session from [chars] tty = [dec]	The SSH user authentication status information	ssh	"No action necessary - informational message"
SSH-5-SSH2_USERAUTH	5-Notice	User '[chars]' authentication for SSH2 Session from [chars] tty = [dec]	The SSH user authentication status information	ssh	"No action necessary - informational message"
SSL-3-CHDRB_OVERFLOW	3-Error	QFP SSL record header buffer overflow	Cisco internal software error. QFP SSL record processing detected header buffer overflow condition. The SSL connection will not be functional while this condition exists.	qfp-sslkeyword:none	LOG_STD_ACTION

<del>Facility</del> Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SSL-3-SSL_STUB	3-Error	QFP SSL [chars] feature executes stub entry in [chars] direction	Cisco internal software error. QFP SSL feature stub entry got executed. The packet will be dropped.	qfp-sslkeyword:none	LOG_STD_ACTION
<del>SIMCRN2</del> <del>AS</del> <del>SYMMETRIC</del> <del>KEY</del> <del>FAIL</del>	0-Emergency	iosxe-ssl	Asymmetric key failure:[chars].	"Asymmetric key failure."	"No action required - forwarding processor (ESP) rebooted automatically."
<del>SIMCRN2</del> <del>VS</del> <del>SERVER</del> <del>FAIL</del>	0-Emergency	iosxe-ssl	Virtual server context failure:[chars].	"Cryptographic coprocessor critical operation failed. Further data processing on ESP is halted"	"forwarding processor (ESP) is rebooted automatically. no action needed"
<del>SIMCRN2</del> <del>AS</del> <del>SYMMETRIC</del> <del>KEY</del> <del>FAIL</del>	0-Emergency	iosxe-ssl	Symmetric key failure:[chars].	"Symmetric key failure."	"No action required - forwarding processor (ESP) rebooted automatically."
<del>SIMCRN2</del> <del>CON</del> <del>TEXT</del> <del>FAIL</del>	3-Error	iosxe-ssl	Context failure:[chars].	"Coprocessor context operation failed due to resource limit"	"Monitoring required"
<del>SIMCRN2</del> <del>GA</del> <del>TEWAY</del> <del>UP</del> <del>DOWN</del>	5-Notice	iosxe-ssl	sslvpn gateway :[chars] changed state to[chars]	"sslvpn gateway changed state"	ACTION_NONE_REQUIRED
<del>SIMCRN2</del> <del>PRO</del> <del>X</del> <del>Y</del> <del>PRO</del> <del>X</del> <del>Y</del> <del>INIT</del> <del>IAL</del> <del>FAIL</del>	2-Critical	QFP SSLVPN Proxy IPC interface initialization failure result: [dec].	Cisco internal software error. QFP SSLVPN Proxy initialization detected that the IPC interface initialization failed. QFP SSLVPN proxy will not be functional while this condition exists.	qfp-sslkeyword:sslvpn	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SMN_PROXY_BADMSG</del>	3-Error	QFP SSLVPN Proxy received bad length message type [dec]	Cisco internal software error. QFP SSLVPN Proxy received a corrupted message from control plane. This message will be ignored.	qfp-sslkeyword:sslvpn	LOG_STD_ACTION
<del>SMN_PROXY_CRYPTO_FAIL</del>	3-Error	QFP SSLVPN Proxy failed to repleneish crypto context memory.	Cisco internal software error. QFP SSLVPN Proxy message processing detected leaking of crypto context memory condition. QFP SSLVPN will not be functional properly while this condition exist.	qfp-sslkeyword:sslvpn	LOG_STD_ACTION
<del>SMN_PROXY_INVALIDMSG</del>	3-Error	QFP SSLVPN Proxy received invalid message type [dec]	Cisco internal software error. QFP SSLVPN Proxy received an invalid message from control plane. This message will be ignored.	qfp-sslkeyword:sslvpn	LOG_STD_ACTION
<del>SMN_PROXY_ALLOC_FAIL</del>	3-Error	QFP SSLVPN Proxy [chars] message lost due to message buffer allocation failure.	Cisco internal software error. QFP SSLVPN Proxy message processing detected a message buffer allocation failure. The message is lost as the result of this condition.	qfp-sslkeyword:sslvpn	LOG_STD_ACTION
<del>SMN_PROXY_SEND_FAIL</del>	3-Error	QFP SSLVPN Proxy [chars] message lost due to message sent failure result: [dec].	Cisco internal software error. QFP SSLVPN Proxy message processing detected a message sent failure. The message is lost as the result of this condition.	qfp-sslkeyword:sslvpn	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SSLVPN</del> <del>PROXY</del> <del>SCM</del> <del>MEM</del> <del>ERR</del>	3-Error	QFP SSLVPN Proxy failed to repleneish SSL context memory.	Cisco internal software error. QFP SSLVPN Proxy message processing detected leaking of SSL context memory condition. QFP SSLVPN will not be functional properly while this condition exist.	qfp-sslkeyword:sslvpn	LOG_STD_ACTION
<del>SSLVPN</del> <del>PROXY</del> <del>HW</del> <del>CON</del> <del>DIR</del>	4-Warning	QFP SSLVPN Proxy failed to replenish hardware context handles.	Cisco internal software error. QFP SSLVPN Proxy message processing detected out-of-resource condition and cannot replenish hardware context handles. QFP SSLVPN will not be functional properly while this conidtion exist.	qfp-sslkeyword:sslvpn	LOG_STD_ACTION
<del>SSLVPN</del> <del>LICENSE</del> <del>EXPIRED</del>	1-Alert	IOS SSLVPN evaluation license has expired	IOS SSLVPN evaluation license has expired and a new license needs to be obtained. Existing user sessions will continue till they are closed and no new sessions will be allowed.	ssl-vpn	"Please visit <a href="http://www.cisco.com/go/sslvpn">http://www.cisco.com/go/sslvpn</a> for instructions on how " "to obtain a IOS SSLVPN license"
<del>SSLVPN</del> <del>LICENSE</del> <del>NO</del> <del>LICENSE</del>	3-Error	No valid license is available to use IOS SSLVPN service	IOS SSLVPN service is a licensed feature on this platform. It will not be functional until a valid license is installed.	ssl-vpn	"Please visit <a href="http://www.cisco.com/go/sslvpn">http://www.cisco.com/go/sslvpn</a> for instructions on how " "to obtain a IOS SSLVPN license"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SMNSMSSL_APL_REG_FAIL</del>	3-Error	QFP SSLVPN registers to SSL library failed	Cisco internal software error. QFP SSLVPN feature initialization detected that the SSL library registration failed. QFP SSLVPN will not be functional while this condition exists.	qfp-sslkeyword:sslvpn	LOG_STD_ACTION
<del>SMNSMSSL_CX_CLOSE_FAIL</del>	3-Error	QFP SSLVPN failed to close SSLVPN context: [[node]016llx] Close request reason: [chars]	Cisco internal software error. QFP SSLVPN feature failed to close an SSLVPN context.	qfp-sslkeyword:sslvpn	LOG_STD_ACTION
<del>SMNSMSSL_CX_RN_FAIL</del>	3-Error	QFP SSLVPN failed to send [chars] for context: [[node]016llx] to control plane	Cisco internal software error. QFP SSLVPN feature failed to send a message to control plane.	qfp-sslkeyword:sslvpn	LOG_STD_ACTION
<del>SMNSMSSL_CX_SOCKET_FAIL</del>	3-Error	QFP SSLVPN failed to [chars] socket [hec] [[chars]err [dec]]	Cisco internal software error. QFP SSLVPN feature failed to accomplish socket action.	qfp-sslkeyword:sslvpn	LOG_STD_ACTION
SSLVPN3-SSLVPN_STUB	3-Error	QFP SSLVPN [chars] feature executes stub entry in [chars] direction	Cisco internal software error. QFP SSLVPN feature stub entry got executed. The packet will be dropped.	qfp-sslkeyword:sslvpn	LOG_STD_ACTION
<del>SMNSMSSL_CX_TRANSMIT_FAIL</del>	3-Error	QFP SSLVPN stub function failed to transmit data message size: [dec].	-	-	-
<del>SMNSMSSL_CX_TIMER_FAIL</del>	3-Error	QFP SSLVPN feature leaks timing wheel memory	Cisco internal software error. QFP SSLVPN feature allocates unused timing wheel memory size: [dec]	qfp-sslkeyword:sslvpn	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SMPLS</del> CONEXES/AMT	4-Warning	License count of currently installed license exceeds the maximum supported sessions on this platform	License count of currently installed license exceeds the maximum supported sessions on this platform. Excess count will not be utilized.	ssl-vpn	"Please collect the output of show license detail command and "contact your technical support representative."
<del>SMPLS</del> REQS/NOTED	5-Notice	vw_ctx: [chars] vw_gw: [chars] remote_ip: [node] status: HTTP request without login cookie resource: [chars]	This message indicates that HTTP request doesn't have valid login cookie and is not authorized to access the resource	-	LOG_SID_NO_ACTION
<del>SMPLS</del> LOCN/AUTH/PAID	5-Notice	vw_ctx: [chars] vw_gw: [chars] remote_ip: [node] user_name: [chars] Failed to contact authentication server	This message indicates that user session is terminated due to reason indicated	-	LOG_SID_NO_ACTION
<del>SMPLS</del> LOCN/AUTH/PASD	5-Notice	vw_ctx: [chars] vw_gw: [chars] remote_ip: [node] user_name: [chars] Authentication successful user logged in	This message indicates that login authentication succeeded for user	-	LOG_SID_NO_ACTION
<del>SMPLS</del> SSL/TLS/CONNECT	5-Notice	vw_ctx: [chars] vw_gw: [chars] i_vrf: [dec] f_vrf: [dec] status: SSL/TLS connection successful with remote at [node][dec]	This message indicates that SSL/TLS handshake with peer was successful	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SSLVPN5SSL_TLS_ERROR	5-Notice	vw_ctx: [chars] vw_gw: [chars] i_vrf: [dec] f_vrf: [dec] status: SSL/TLS connection error with remote at [node][dec]	This message indicates that SSL/TLS connection has encountered error this normally means that either handshake failed or protocol error occurred during life-time of the connection	-	"Check certificate and trustpoint configuration in global config mode" "as well as under webvpn gateway"
<del>SSLVPN5SSL_TLS_ERROR</del>	5-Notice	vw_ctx: [chars] vw_gw: [chars] i_vrf [dec] f_vrf [dec] status:SSL/TLS connection error with remote at [char]A:[dec]	This message indicates that SSL/TLS connection has encountered error. This normally means that either handshake failed or protocol error occurred during life-time of the connection.	qfp-sslkeyword:sslvpn	LOG_STD_ACTION
<del>SSLVPN5SSL_TLS_ERROR</del>	5-Notice	[chars] [chars]	SSLVPN Manager error.	-	LOG_SID_NO_ACTION
SSLVPN-5-UPDOWN	5-Notice	sslvpn [chars] : [chars] changed state to [chars]	sslvpn service state changed.	-	LOG_SID_NO_ACTION
<del>SSLVPN5SSL_TLS_ERROR</del>	6-Information	Radius configured [chars] \[chars] does not exist	A Tunneling user has logged out from the given gateway/context	-	"The information is used to track user logout events. No" "action is required."
<del>SSLVPN5SSL_TLS_ERROR</del>	6-Information	All available SSLVPN session licenses are in use	All SSLVPN sessions available per current license are in use. Hence no additional user sessions can be allowed.	ssl-vpn	"To support more users additional license needs to be purchased. " "Please visit <a href="http://www.cisco.com/go/sslvpn">http://www.cisco.com/go/sslvpn</a> for instructions on how " "to obtain a IOS SSLVPN license"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SMP@DSABEIOG</del>	6-Information	Attribute length [dec] is longer than buffer size [dec]	This message indicates that the attribute configured on the Radius server is longer than the allocated buffer size and will be ignored.	-	"Reconfigure the radius attribute with the appropriate length"
<del>SMP@MEMNAPALNET</del>	6-Information	The request source ip: [node]destination ip : [node]from user [chars] is [chars] by ACL	This message indicates that a Single Sign On session creation failed for the user. Session creation can fail for various reasons such as DNS lookup failure timeouts and retry attempts exceeded	-	"The information is used to track Single Sign On events. No " action is required."
<del>SMP@MEMNAPALURL</del>	6-Information	The request scheme: [chars] host : [chars] port : [dec] path : [chars]	A request is matched with application ACL.	-	LOG_SID_NO_ACTION
<del>SMP@HREQNOTED</del>	5-Notice	iosxe-ssl	HTTP request without login cookie.[chars]\n	"This message indicates that HTTP request doesn't have valid login cookie and is not authorized to access the resource"	ACTION_NONE_REQUIRED
<del>SMP@CONAUTHAID</del>	5-Notice	iosxe-ssl	Failed to contact authentication server.[chars]\n	"Authentication server is unavailable because it is down or unreachable"	"Verify if routes are configured correctly to reach authentication and the server is configured correctly"
<del>SMP@CONAUTHPSD</del>	5-Notice	iosxe-ssl	Authentication successful	-	-
<del>SMP@CONAUTHRID</del>	5-Notice	iosxe-ssl	Failed to authenticate user credentials.[chars]\n	"Authentication server failed to validate credentials provided by the user to login under webvpn context"	"Check username and password configured on authentication server"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SSMCRSSL_CONNCTCK</del>	5-Notice	iosxe-ssl	SSL/TLS connection successful with client[chars]\n	"This message indicates that SSL/TLS handshake with peer was successful"	ACTION_NONE_REQUIRED
<del>SSMCRMAXUSRCONFD</del>	6-Information	iosxe-ssl	Login denied for user[chars]. Max users exceeded for context[chars]\n	"This message indicates that user was denied to login because the the max users for the context has been exceeded"	"Check the gateway configuration and reconfigure the maximum allowed users in the context"
<del>SSMCRGLOBALUSRCONFD</del>	6-Information	iosxe-ssl	Login denied for user[chars]. Global max users limit reached\n	"This message indicates that user was denied to login because the the max users limit reached"	ACTION_NONE_REQUIRED
<del>SSMCRSSL_SESSION_TERMINATE</del>	6-Information	iosxe-ssl	Session terminated.[chars]\n	"SSLVPN session was terminated"	ACTION_NONE_REQUIRED
<del>SSMCRERRMSG_NOFLGS</del>	3-Error	ERRMSG_NOFLGS	-	-	-
<del>SSMCRERRMSG_NOFLGS</del>	3-Error	ERRMSG_NOFLGS	-	-	-
<del>SSMCRDYNAMIC_SESSION_UPDATE_NOT_ALLOWED</del>	3-Error	[[dec]] Dynamic session updates not allowed on this [chars] session. It is an unsupported configuration.	Updates on these sessions not supported. This is an unsupported configuration.	sss	LOG_STD_ACTION
<del>SSMCRRESRESOURCE_OVERFLOW</del>	3-Error	Resource overflow	A fixed size system resource has been exceeded.	sss	LOG_STD_ACTION
<del>SSMCRINFO_COPY_VECTOR</del>	3-Error	info type has no copy vector [dec].	An internal SSS Manager error occurred.	sss	LOG_STD_ACTION
SSSMGR-3-INIT	3-Error	Initialisation failure [chars]	An internal SSS Manager error occurred.	sss	LOG_STD_ACTION
<del>SSMCRINVALID_SSS_MGR_STATE</del>	3-Error	Encountered an invalid SSS Mgr state [dec] in [chars]	An internal SSS Manager error occurred.	sss	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SSMGR</del> INVALID_NOTIME	3-Error	Received an INVALID info type value [dec].	An internal SSS Manager error occurred.	sss	LOG_STD_ACTION
<del>SSMGR</del> INVALID_SERVICE	3-Error	Received an INVALID service type [dec][chars].	-	-	-
<del>SSMGR</del> MEMORY_LOW	3-Error	Memory low [dec] times disconnecting session	Required memory is running low.	sss	LOG_STD_ACTION
<del>SSMGR</del> NULL_CONTEXT	3-Error	Encountered a NULL SSS Mgr context in [chars]	Encountered a NULL context in SSS Manager.	sss	LOG_STD_ACTION
<del>SSMGR</del> NULL_NOSTRING	3-Error	Received a NULL info string value.	An internal SSS Manager error occurred.	sss	LOG_STD_ACTION
<del>SSMGR</del> RESOURCE_OVERFLOW	3-Error	Resource overflow	A fixed size system resource has been exceeded.	sss	LOG_STD_ACTION
SSSMGR-3-SBINIT	3-Error	Error initializing [chars] subblock data structure. [chars]	Initialization of the specified subblock data structure could not be accomplished.	sss	LOG_STD_ACTION
<del>SSMGR</del> UNEXPECTED_MSG	3-Error	Encountered an unexpected message: [chars]	Encountered an unexpected message.	sss	LOG_STD_ACTION
<del>SSMGR</del> UNEXPECTED_SIP_NO	3-Error	Encountered an unexpected SIP info: [chars]	Encountered an unexpected SIP info.	sss	LOG_STD_ACTION
<del>SSMGR</del> UNSUPPORTED_CFG	3-Error	Unsupported configuration detected: [uid: [node] [chars]	Unsupported configuration detected.	sss	LOG_STD_ACTION
<del>SSMGR</del> RESOURCE_ABOVE_WM	4-Warning	Resource above watermark	A fixed size system resource is above watermark.	sss	LOG_STD_ACTION
<del>SSMGR</del> RESOURCE_FAILURE	5-Notice	Failed to procure [node] BroadBand licenses	-	sss	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SSMCRBESPROCENCS	5-Notice	Successfully procured [node] BroadBand licenses	-	sss	LOG_STD_ACTION
SSMCRBESRELFALE	5-Notice	Failed to release all BroadBand licenses	-	policy	LOG_STD_ACTION
SSMCRBESRELCS	5-Notice	Successfully released all BroadBand licenses	-	sss	LOG_STD_ACTION
SSMCRBESREQISNT	5-Notice	Broadband license request sent for [node] license with configured license count [node]	-	sss	LOG_STD_ACTION
SSMCRBESNOALWNSC	5-Notice	Interface-config not allowed at service config level ignoring	Interface-config attribute is not allowed while in a service profile. It is only supported in user profiles.	sss	"Remove interface-config attribute from the service profile and "reconfigure using a user profile."
SSMCRBESNOALWNOE	5-Notice	Unsupported configuration detected [chars]	The value of the specified configuration parameter was out of range. This is not considered an error as the value was adjusted to be within the supported range. Update the configuration source to a value within the supported range to avoid this message.	sss	LOG_SID_NO_ACTION
SPKMCRAALACMG	1-Alert	iosxe-fwdmgr	Dual Active Detection[chars]\n	Switch detected availability or unavailability of Dual Active Detection ports.	limit fast
SPACKMREHAMMACH	1-Alert	iosxe-fwdmgr	%s. The mis-match may caused by hardware failure or different EPA types.\n	The Standby EPA mismatch with Active EPA.	Need to make them match

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
STACKMGR-FATAL_ERR	1-Alert	iosxe-fwdmgr	Stack manager encountered an unrecoverable error. [chars]\n	"The stack manager process has encountered an unrecoverable error and the switch is being reloaded."	"Please ensure valid switch numbers are being used. If you still believe there is an error in the system
STACKMGR-ILCM_MISMATCH	1-Alert	iosxe-fwdmgr	License level is[chars] and needs to be upgraded to[chars] for Stackwise Virtual to function.\n	Current Licnese level on active switch does not support Stackwise Virtual.	Need to be upgraded to supported license level
STACKMGR-1-RELOAD	1-Alert	iosxe-fwdmgr	Reloading due to reason[chars]\n	The specified switch has received a reload request and is being reloaded.	limit fast
STACKMGR-RELOAD_REQUEST	1-Alert	iosxe-fwdmgr	Received reload request for[chars]	-	-
STACKMGR-STACK_MERGE_IGNORED	1-Alert	iosxe-fwdmgr	Stack Merge Ignored[chars]\n	Switch detected multiple Active switches. But stack-merge is being ignored.	limit fast
STACKMGR-SWICH_ADDED	4-Warning	iosxe-fwdmgr	%s %d has been added to the stack.\n	"The specified switch has been added to the stack."	"No action is required"
STACKMGR-SWICH_REMOVED	4-Warning	iosxe-fwdmgr	%s %d has been removed from the stack.\n	"The specified switch has been removed from the stack."	"No action is required"
STACKMGR-SET_ROLE_FAILED	5-Notice	iosxe-fwdmgr	Failed to Set[chars] Chassis %d chassis_role[chars]	"This is used to indicate that update to new role failed"	"This is a rare failure condition. Please reach out to TAC"
STACKMGR-FAST_RELOAD_DONE	5-Notice	accsw-p-fsu	Fast reload operation completed successfully on entire stack	"This is used to indicate that the fast reload on stack is complete."	"No action needed. This is not an error."
STACKMGR-ACTIVE_ELECTED	6-Information	iosxe-fwdmgr	%s %d has been elected ACTIVE.\n	"The specified switch has been elected active."	"No action is required"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
STACKMGR6ACTIVE_READY	6-Information	iosxe-fwdmgr	Active[chars] %d is ready.\n	"The active switch is ready."	"No action is required"
STACKMGR6CHASSIS_ADDED	6-Information	iosxe-fwdmgr	%s %d has been added to the stack.\n	"The specified chassis has been added to the stack."	"No action is required"
STACKMGR6CHASSIS_READY	6-Information	iosxe-fwdmgr	%s %d is ready.\n	"The specified chassis is ready."	"No action is required"
STACKMGR6CHASSIS_REMOVED	6-Information	iosxe-fwdmgr	%s %d has been removed from the stack.\n	"The specified chassis has been removed from the stack."	"No action is required"
STACKMGR6CHASSIS_REMOVED_KA	6-Information	iosxe-fwdmgr	%s %d has been removed from the stack due to keepalive failure. \n	"Chassis has been removed due to the keepalive failure."	"No action is required"
STACKMGR6DISC_DONE	6-Information	iosxe-fwdmgr	%s %d has finished stack discovery.\n	"The specified switch has completed stack discovery and is moving to the election phase."	"No action is required"
STACKMGR6DISC_START	6-Information	iosxe-fwdmgr	%s %d is starting stack discovery.\n	"The specified switch is starting stack discovery."	"No action is required"
STACKMGR6KA_MISSED	6-Information	iosxe-fwdmgr	Keepalive missed for %d times for[chars] %d \n	"Chassis has been removed due to the keepalive failure."	"No action is required"
STACKMGR6STACKLINK_CHANGE	6-Information	iosxe-fwdmgr	Stack port %d on[chars] %d is[chars]\n	The specified stack port has changed status.	limit unlimited
STACKMGR6STANDBY_ELECTED	6-Information	iosxe-fwdmgr	%s %d has been elected STANDBY.\n	"The specified switch has been elected standby."	"No action is required"
STACKMGR6SWITCH_READY	6-Information	iosxe-fwdmgr	%s %d is ready.\n	"The specified switch is ready."	"No action is required"
STARTTHREAD-1-LDP	1-Alert	ERRMSG_NOFLAGS	-	-	-
STARTTHREAD-1-LDP	1-Alert	ERRMSG_NOFLAGS	-	-	-
STATEFAILURE-3-1-LS-TEHA	3-Error	ERRMSG_NOFLAGS	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SIERRA_FAILURE_MISSTEPSHA</del>	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>SIERRA_WARNINGS_LINKDOWN</del>	4-Warning	NBAR number of [chars] has declined below its threshold links are available for [chars].	After NBAR was in links shortage the number of links has declined below its threshold. New traffic flows will be classified properly	qfp-nbar	LOG_SID_NO_ACTION
<del>SIERRA_WARNINGS_LINKDOWN</del>	4-Warning	NBAR number of [chars] threshold is reached can't allocate more memory for [chars].	Because of non-availability of flow links new traffic flows may not be classified properly	qfp-nbar	LOG_SID_NO_ACTION
<del>SIERRA_WARNINGS_LINKDOWN</del>	4-Warning	NBAR activation process has failed with errcode [dec].	Activation of NBAR has failed. the cause is provided through the error code from cerrno.h	qfp-nbar	LOG_SID_NO_ACTION
<del>SIERRA_WARNINGS_LINKDOWN</del>	4-Warning	An error occurred with errcode [dec].	An error occurred will not handle the messages wait for deactivate the cause is provided through the error code from cerrno.h	qfp-nbar	LOG_SID_NO_ACTION
<del>SIERRA_WARNINGS_LINKDOWN</del>	4-Warning	NBAR memory utilization has declined below its threshold memory is available for [chars].	After NBAR was in memory shortage memory utilization has declined below its threshold New traffic flows will be classified properly	qfp-nbar	LOG_STD_ACTION
<del>SIERRA_WARNINGS_LINKDOWN</del>	4-Warning	NBAR reached maximum configured memory utilization. Can't allocate more memory for [chars].	Because of NBAR memory shortage new flows may not be classified properly	qfp-nbar	LOG_STD_ACTION
<del>SIERRA_WARNINGS_LINKDOWN</del>	4-Warning	NBAR does not have enough memory to be activated.	System does not have enough free memory to allow activation of NBAR	qfp-nbar	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>STILE_PROXY3FC_NBAR</del>	4-Warning	System free memory has increased above its lower watermark memory is available for [chars].	After system memory was in shortage free memory has increased above its lower watermark New traffic flows will be classified properly	qfp-nbar	LOG_STD_ACTION
<del>STILE_PROXY3FC_NBAR</del>	4-Warning	System free memory has reached its lower watermark. Can't allocate more memory for [chars].	Because of system memory shortage new flows may not be classified properly	qfp-nbar	LOG_STD_ACTION
STILE_PROXY3FC_NRES	3-Error	No space for the IPC reply size %u	For a request from upper STILE software stack layers it was not possible to allocate space for a reply for the specified size. The consequence of this could be a stuck binding that cannot be established etc. In rare cases this could also affect other operations such as feature activation.	cpp-ucode	"This is normally a software issue. " LOG_STD_ACTION
STILE_PROXY3FC_NREHY	3-Error	IPC Open Reply failed request %u	For a request from upper STILE software stack layers it was not possible to open the reply buffer. The consequence of this could be a stuck binding that cannot be established etc. In rare cases this could also affect other operations such as feature activation.	cpp-ucode	"This is normally a software issue. " LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
STILE-3-CUNHAND	3-Error	type [dec]	An unknown message was received by the STILE Client Proxy.	cpp-ucode	LOG_STD_ACTION
STILE-3-IPCSEND	3-Error	IPC send msg for [chars] [dec] failed	IPC failed to reply	cpp-ucode	LOG_STD_ACTION
STILE-3-SINKMEM	3-Error	-	Increasing of stile slink pool failed.	cpp-ucode	LOG_STD_ACTION
STILE-3-SINKMEMREQ	3-Error	-	IPC Failure occurred when attempting to request more stile link memory.	cpp-ucode	LOG_STD_ACTION
STILE-3-NBAR_DEBUG	3-Error	[dec]	NBAR Conditional debugging registration failed.	-	
STILE-3-PDL_DEBUG	3-Error	Action action_print is supported only in pdl debug mode. Text = [chars] Value = 0x[hec]	print action output	cpp-ucode	LOG_STD_ACTION
STILE-3-VM_ERRORS	3-Error	STILE VM traceback with cause: *[chars]* please see FP log for more information	-	qfp-nbar	-
STILE-4-SINK_AICCP	4-Warning	Memory resources exhausted to configure custom/sub protocol	This message indicates that current user configuration could not be activated because of unavailability of memory resources. The NBAR cannot classify packets for this new protocol configured.	cpp-ucode	"The memory resource exhaustion is happening because too many port range based protocols are configured by the user. Recommended action is to avoid very large range of ports."
STILE-2-NBAR_SHUTDOWN	2-Critical	Storm control shut down [chars]	Excessive traffic has been detected on a port that has been configured to be shutdown if a storm event is detected.	-	"Once the source of the packet storm has been fixed reenabling the port using port configuration command."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
STORMCONTROL3FILTER	3-Error	A [chars] storm detected on [chars]. A packet filter action has been applied on the interface.	The amount of traffic detected on the interface exceeded the configured threshold values. The system is filtering excess traffic when packet is received. Packet traffic is not being forwarded by the system.	-	"Determine and fix the root cause of the excessive" "traffic on the interface."
STORMCONTROL3SHUTDOWN	3-Error	A packet storm was detected on [chars]. The interface has been disabled.	The amount of traffic detected on the interface exceeded the configured threshold values. Since the interface was configured to be shutdown if a packet storm event is detected it has been placed in error disable state.	-	"If automatic recovery is preferred the error disable recovery" "mechanism can be used. Determine and fix the root cause of" "the excessive traffic on the interface"
STORMCONTROL3TRAP	3-Error	A packet storm was detected on [chars]. Sending SNMP trap.	The amount of traffic detected on the interface exceeded the configured threshold values. Since the interface was configured to send SNMP trap if a packet storm event is detected it has generated the trap.	-	"Determine and fix the root cause of the excessive traffic on the" " interface."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SIORMCONTRLSABAIED	5-Notice	A [chars] storm abated on [chars]. Packet filter does not apply on the interface.	The amount of traffic on the interface is below the configured threshold values. The system is not filtering traffic when packet is received. Packet traffic is being forwarded by the system.	-	"No need further action"
SIP_ISSU2GET_BUFFER	2-Critical	STP ISSU client failed to get buffer for message. Error: [dec] [chars]	STP ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	L2	"show logging and show checkpoint client"
STP_ISSU-2-INIT	2-Critical	STP ISSU client initialization failed to [chars]. Error: [dec] [chars]	The STP ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	L2	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SIP_ISSU_SEND_NEGO_FAILD	2-Critical	STP ISSU client failed to send negotiation message. Error: [dec] [chars]	The STP ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	L2	"show logging and show checkpoint client"
SIP_ISSU_SESSION_ARBITRATE	2-Critical	STP ISSU client failed to register arbitrate callback. Error: [dec] [chars]	The STP ISSU client failed to register arbitrate callback. If a problem occurs with the callback registration the standby device cannot be brought up properly.	L2	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
SIP_ISSU_SESSION_NEGO	2-Critical	STP ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The STP ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	L2	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
SIP_ISSU_SESSION_RECEIVE	2-Critical	STP ISSU client failed to register session information. Error: [dec] [chars]	The STP ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	L2	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SIP_ISSU3-INVALID_CAPABILITY	3-Error	STP ISSU client: invalid capability list	STP ISSU client observed an error during capability negotiation. When this error happens there is a mismatch in the client capability between the active and standby unit.	L2	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
SIP_ISSU3-INVALID_SESSION	3-Error	STP ISSU client does not have a valid registered session.	STP ISSU client does not have a valid registered session.	L2	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
SIP_ISSU3-MSG_NOT_OK	3-Error	STP ISSU client 'Message Type [dec]' is not compatible	The STP ISSU client received an incompatible message from the peer device. The message cannot be processed.	L2	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
SIP_ISSU3-MSG_SIZE	3-Error	STP ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The STP ISSU client failed to calculate the MTU for the specified message. The STP ISSU client is not able to send the message to the standby device.	L2	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
SIP_ISSU3-POLICY_NOT_SUPPORTED	3-Error	STP ISSU client does not support Message Type [dec]	STP ISSU client received an message type which it does not support. The policy is applied to make the session incompatible.	L2	"show issu session <client_id>"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>STP_ISSU_REJCTCAPBLTY</del>	3-Error	STP ISSU client rejected capability '[chars]'	STP ISSU client rejected a capability during negotiaiton. When this error happens there is a mismatch in the client capability between the active and standby unit.	L2	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>STP_ISSU_REJCTCAPBLTY</del>	3-Error	STP ISSU client rejecting capability '[chars]'	STP ISSU client is rejecting a capability during negotiaiton. When this error happens there is a mismatch in the client capability between the active and standby unit.	L2	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>STP_ISSU_SESSION_UNREGSTRY</del>	3-Error	STP ISSU client failed to unregister session information. Error: [dec] [chars]	The STP ISSU client failed to unregister session information.	L2	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>STP_ISSU_TRANSFORM_FAIL</del>	3-Error	STP ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The STP ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the STP state between the active device and the standby device is not identical.	L2	"show issu session <client_id> and " "show issu negotiated version <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
STUN-2-NOBUF	2-Critical	Interface [chars] no buffer available to [chars]	A memory shortage existed at the time that the configuration command was issued. This condition is rare and under normal conditions temporary.	-	"Reconfigure the STUN group. If memory shortages persist call your "Cisco technical support representative for assistance."
STUN-2-NOMEMORY	2-Critical	No memory available: [chars]	The requested operation failed because of a low memory condition.	-	"Reduce other system activity to ease memory demands. If conditions "warrant upgrade to a larger memory configuration."
STUN-2-NOTGI	2-Critical	Please remove and redefine protocol group [dec]	An internal error occurred. The configuration is irregular.	-	"Remove and reconfigure the STUN protocol group. Record the "configuration and call your Cisco technical support "representative for assistance."
STUN-3-BADCONN	3-Error	CONN: bad connection [dec] peer: [chars]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
STUN-3-BADLENOP	3-Error	[chars]: bad len or unknown op op [dec] len [dec]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
STUN-3-BADMAGIC	3-Error	[chars]: wrong magic mine [hec] theirs [hec] [dec]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
STUN-3-BADMAGICTCP	3-Error	[chars]: peer [chars] wrong magic mine [hec] theirs [hec]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
STUN-3-BADPASSIVEOPEN	3-Error	passive open from [node]dec] -> [dec] failed	An internal software error occurred.	-	LOG_SID_RECUR_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
STUN-3-CONNILLSTATE	3-Error	CONN: Peer [chars] illegal state [dec]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
STUN-3-NOINPIDB	3-Error	Input idb not set	A software or hardware error occurred.	-	LOG_SID_SH_TECH_ACTION
STUN-3-SENDPUNT	3-Error	[chars]: sent [chars] to [chars]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
STUN-3-SENDPUNTCIP	3-Error	[chars]: sent [chars] to [[node]%i	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
STUN-4-DUPROUTE	4-Warning	Cannot define duplicate route on the\n\n same group	This route command is defined on another interface belonging to the same group. Cannot define duplicate route on the same group	-	"Consider defining a new group and moving this " "interface onto that group"
STUN-4-ERR	4-Warning	[chars]: [chars]: [chars] op [hec] len [dec]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
STUN-4-PEERSTATE	4-Warning	Peer [chars] wrong state [dec] [dec]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
STUN-6-CONNOPENFAIL	6-Information	CONN: peer [chars] open failed [chars] [[node]	An attempt to connect to a remote TCP STUN peer failed.	-	"Verify that the remote peer is accessible from this router that it is " "running software capable of supporting STUN and that it is configured " "correctly."
STUN-6-OPENED	6-Information	[chars]: peer [chars] opened [previous state [chars]]	A connection attempt to a remote peer completed successfully OPENED PASSIVE-OPEN or is in the process of being opened OPENING. This is	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
STUN-6-OPENING	6-Information	CONN: opening peer [chars] [dec]	A connection attempt to a remote peer completed successfully OPENED PASSIVE-OPEN or is in the process of being opened OPENING. This is	-	LOG_SID_NO_ACTION
STUN-6-PASSIVEOPEN	6-Information	passive open [node]dec -> [dec]	A connection attempt to a remote peer completed successfully OPENED PASSIVE-OPEN or is in the process of being opened OPENING. This is	-	LOG_SID_NO_ACTION
STUN-6-PEERSHUTDOWN	6-Information	shutting down peer [chars] on [chars]	A connection to a remote peer is being shut down. This is typically the result of user intervention in STUN reconfiguration or disabling. This is good expected behavior.	-	LOG_SID_NO_ACTION
STUN-6-RECONNECT	6-Information	PHDR: reconnect from peer [chars]	A remote peer reestablished a connection to this router.	-	LOG_SID_NO_ACTION
STUN-6-TCPFINI	6-Information	peer [chars] closed [previous state [chars]]	A remote peer closed a STUN connection with this router.	-	"Examine the other router to see why it closed this connection with " "this peer. This can be caused by normal events such as " "reconfiguration."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
STUN6-TCPPEERSHUT	6-Information	[chars] [chars] [node]dec	This route closed a STUN connection with a remote peer.	-	"Examine this router to see why it closed this connection with this " "peer. This can be caused by normal events such as " "reconfiguration."
SUBSYS2-BADCLASS	2-Critical	Bad subsystem class [dec] - ignoring subsystem	A software consistency check failed.	<del>Device-Subsys-2-Badclass</del>	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
SUBSYS2-BADCLASS	2-Critical	Bad subsystem class [dec] - ignoring subsystem	A software consistency check failed.	<del>Device-Subsys-2-Badclass</del>	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
SUBSYS2BADSEQUENCE	2-Critical	Subsystem [chars] has cross-class sequence for [chars]	A software or hardware error occurred.	<del>Device-Subsys-2-Badsequence</del>	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
SUBSYS2BADSEQUENCE	2-Critical	Subsystem [chars] has cross-class sequence for [chars]	A software or hardware error occurred.	<del>Device-Subsys-2-Badsequence</del>	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
SUBSYS2BADVERSION	2-Critical	Bad subsystem version number [dec] - ignoring subsystem	A software consistency check failed.	<del>Device-Subsys-2-Badversion</del>	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
SUBSYS2BADVERSION	2-Critical	Bad subsystem version number [dec] - ignoring subsystem	A software consistency check failed.	<del>Device-Subsys-2-Badversion</del>	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SUBSYS-2-MISMATCH	2-Critical	Kernel and subsystem version differ [dec].[dec] - ignoring subsystem	A software consistency check failed.	<del>Device subsystem</del>	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
SUBSYS-2-MISMATCH	2-Critical	Kernel and subsystem version differ [dec].[dec] - ignoring subsystem	A software consistency check failed.	<del>Device subsystem</del>	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
SUBSYS-2-NOTFOUND	2-Critical	Subsystem [chars] needs subsystem [chars] to start	A software consistency check failed.	<del>Device subsystem</del>	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
SUBSYS-2-NOTFOUND	2-Critical	Subsystem [chars] needs subsystem [chars] to start	A software consistency check failed.	<del>Device subsystem</del>	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
SUBSYS-2-RECURSION	2-Critical	Maximum sequence depth exceeded [dec] by [chars]	A software or hardware error occurred.	os	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
SUBSYS-2-RECURSION	2-Critical	Maximum sequence depth exceeded [dec] by [chars]	A software or hardware error occurred.	os	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SUBSYS3-NOAPIHOOK	3-Error	The API [chars] has no lookup hook for subsystems.	This process uses the named API but the process initialization\n\ code could not find the subsystem-initialization hook for this API.\n\ Process initialization cannot proceed without all hooks being present.	build	"Copy the error message exactly as it appears and report it\n\ to your technical support representative along with output from\n\ 'show tech'."
SUBSYS3-NOAPIHOOK	3-Error	The API [chars] has no lookup hook for subsystems.	This process uses the named API but the process initialization\n\ code could not find the subsystem-initialization hook for this API.\n\ Process initialization cannot proceed without all hooks being present.	build	"Copy the error message exactly as it appears and report it\n\ to your technical support representative along with output from\n\ 'show tech'."
SUBSYS3-PAGEZERO	3-Error	The [chars] class subsystem [chars] was being initialized.	In all Cisco products the first 256 bytes of memory is unused and off\n\ limits. Newer platforms have hardware to immediately trap reads or\n\ writes to this area. Older platforms periodically perform checks on\n\ this memory. This message appears only on older platforms and\n\ indicates that this off limits memory area was modified.	<del>Developmental message</del>	"Copy the error message exactly as it appears and report it\n\ to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SUBSYS3PAGEZERO	3-Error	The [chars] class subsystem [chars] was being initialized.	In all Cisco products the first 256 bytes of memory is unused and off\n\ limits. Newer platforms have hardware to immediately trap reads or\n\ writes to this area. Older platforms periodically perform checks on\n\ this memory. This message appears only on older platforms and\n\ indicates that this off limits memory area was modified.	<del>iosxe-binos-utils</del>	"Copy the error message exactly as it appears and report it\n\ to your technical support representative."
SUBSYS3SUBSYS_CLASS	3-Error	iosxe-binos-utils	"%s subsystem[chars] has class[chars]"	"The task has detected a subsystem which has an unsupported class in its header."	LOG_STD_ACTION
SUBSYS3SUBSYS_RECURSION	3-Error	iosxe-binos-utils	"%s subsystem[chars] maximum sequence depth %d exceeded"	"The task has detected that a subsystem upon insertion has exceeded the depth of insertion."	LOG_STD_ACTION
SUBSYS3SUBSYS_VERSION	3-Error	iosxe-binos-utils	"%s subsystem[chars] has unsupported version: %d"	"The task has detected a subsystem which has an unsupported version in its header."	LOG_STD_ACTION
SUBSYS3UNORDERED	3-Error	The subsys class [dec][chars] has no initialization order.	The specified class subsystem has an unknown initialization order.	os	"Copy the error message exactly as it appears and report it " "to your technical support representative along with output from " "'show tech'."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SUBSYS3-UNORDERED	3-Error	The subsys class [dec][chars] has no initialization order.	The specified class subsystem has an unknown initialization order.	os	"Copy the error message exactly as it appears and report it " "to your technical support representative along with output from " "'show tech'."
SUBSYS4-MALLOC	4-Warning	Class [chars] subsys [chars] bytes [node]malloc [dec]	This message is only for tracking malloc/free in a subsys init.	-	"For development debugging only."
SUBSYS4-MALLOC	4-Warning	Class [chars] subsys [chars] bytes [node]malloc [dec]	This message is only for tracking malloc/free in a subsys init.	-	"For development debugging only."
SUBSYS4-SUBSEQUENCE	6-Information	iosxe-binos-utils	"%s subsystem[chars] has cross class sequence for[chars]"	"The task has detected a subsystem which has an incorrect class for which it is being considered for."	LOG_STD_ACTION
SUBSYS4-UNORDERED	6-Information	iosxe-binos-utils	"Subsystem class %d (%s) has no order"	"The task has detected a class which has an unknown order upon initialization."	LOG_STD_ACTION
SDH-INTERNAL_ERROR	1-Alert	[chars]	Secure UDI encountered an internal error.	petra-platform	"If this occurs the switch failed to authenticate itself. " "Please contact Cisco's Technical Assistance Center for more " "information."
SDH-VALIDATION_ERROR	1-Alert	[chars]	[chars] Secure UDI validation failed.	petra-platform	"If this occurs the switch failed to authenticate itself. " "Please contact Cisco's Technical Assistance Center for more " "information."
SDH-VALIDATION_CHECK	5-Notice	[chars]	-	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SUNDRVALDATION_SUCCESS</del>	5-Notice	[chars]	-	-	-
<del>SUNDRRTIMING_KDPATCH</del>	3-Error	Unable to dispatch received TDL message from TIMING daemon	An unexpected condition has occurred while IOS was trying to dispatch a TDL message received from TIMING daemon.	iiot_rtr_timing	LOG_STD_ACTION
<del>SUNDRRTIMING_KDNIAL</del>	3-Error	Failed to initialize required TIMING resource: [chars]	During the initialization of the resources required by TIMING a failure occurred. This has prevented TIMING from being activated.	iiot_rtr_timing	LOG_STD_ACTION
<del>SUNDRRPC_CHUNK_CREATE</del>	3-Error	-	Chunk create failed. Sun RPC ALG will not be able to finish initialization.	cpp-ucode	LOG_STD_ACTION
<del>SUNDRRPC_L7_CREATE_ERROR</del>	3-Error	-	Error during L7 data creation.	cpp-ucode	LOG_STD_ACTION
SW_DA-1-DETECTION	1-Alert	detected dual-active condition[chars]	The specified dual-active method detected a dual-active scenario and caused switch to go into recovery mode.	dual-active	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SW_DA-1-RECOVERY	1-Alert	Dual-active condition detected: Starting recovery-mode all non-VSL interfaces have been shut down	A dual-active situation has occurred due to VSL going down. The VSL has become inactive and both chassis have taken over the role of the active virtual switch. To fix this condition the standby virtual switch has become active and taken control of the network. All non-VSL interfaces on the original active virtual switch will be errdisabled or shut down.	dual-active	"Attempt to determine the reason why VSL has gone down and " "correct it. Once VSL has been re-established the original " "active virtual switch will reload."
SWDA-VSL_RECOVERED	1-Alert	VSL has recovered during dual-active situation: Reloading switch [dec]	The VSL between the two active virtual switches in a dual-active situation has gone up. The virtual switch in recovery mode must be reloaded to re-enable all non-VSL interfaces which were shut down when the dual-active situation was first entered.	dual-active	LOG_SID_NO_ACTION
SWDA-3-REHYPERLED	3-Error	Unable to set recovery IP address on [chars]	The switch was unable to set IP address of management interface\n\ to the IP configured for recovery.	dual-active	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SW_DA3CAPURE_FAILED	3-Error	Unable to capture IP address configured on [chars]	The switch was unable to capture config of management interface\n\n as part of changing IP address on interface to the IP configured\n\n for recovery.	dual-active	LOG_SID_NO_ACTION
SW_DA3DCLEAR_FAILED	3-Error	Unable to clear IP address configured on [chars]	The switch was unable to clear IP address of management interface\n\n as part of changing IP address on interface to the IP configured\n\n for recovery.	dual-active	LOG_SID_NO_ACTION
SW_DA3DANIT_FAILED	3-Error	Unable to initialize dual-active detection/recovery \[chars]\	The switch was unable to setup dual-active detection/recovery system.\n\n The result is that dual-active detection/recovery may not work.	dual-active	LOG_SID_NO_ACTION
SW_DA3DAJOB_FAILED	3-Error	Unable to handle dual-active recovery : [chars]	The switch was unable to handle dual-active recovery job. This could\n\n be because the job handler does not exist or sending a message to\n\n the recovery job handler failed.	dual-active	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SW_DAI4OPAKS</del> DOWNED	3-Error	Unable to shutdown loopback interface : [chars] [chars]	The switch was unable to handle shutdown of loopback interface while\n\n the switch is in recovery mode. This could be because the job handler\n\n does not exist or sending a message to the job handler\n\n failed.	dual-active	LOG_SID_NO_ACTION
<del>SW_DAI4DR</del> RELOADFAILED	3-Error	Unable to reload the chassis : [chars]	The switch was unable to reload the chassis while\n\n the switch is in recovery mode. This could be because the job handler\n\n does not exist or sending a message to the job handler\n\n failed.	dual-active	LOG_SID_NO_ACTION
SW_DAI4ACL_DENY	4-Warning	[node] Invalid ARPs [chars] on [chars] vlan [dc][nu][ds][nu][ds][dn][C]	-	arp-inspection	LOG_SID_NO_ACTION
<del>SW_DAI4DHCP</del> SNOOPINGDENY	4-Warning	[node] Invalid ARPs [chars] on [chars] vlan [dc][nu][ds][nu][ds][dn][C]	The switch has received ARP packets considered invalid by ARP inspection.\n\n The packets are bogus and their presence may be an indication of\n\n man-in-the-middle attacks being attempted in the network. This message\n\n is logged when the senders ip and mac binding for the received vlan \n\n is not present in the dhcp snooping database.	arp-inspection	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SW_DAI4INVALID_ARP	4-Warning	[node] Invalid ARPs [chars] on [chars] vlan [dec] on [chars] [chars]	The switch has received ARP packets considered invalid by ARP inspection.\n\n The packets are bogus and they do not pass one or more of source mac or \n\n destination mac or IP validation checks or are otherwise invalid.	arp-inspection	LOG_SID_NO_ACTION
SW_DAI4BURST_EXCEED	4-Warning	[dec] packets received in [dec] seconds on [chars].	The switch has received the given number of ARP packets in the specified\n\n burst interval. The interface is errdisabled when the switch receives\n\n packets at a rate higher than the configured packet rate every second \n\n over the configured burst interval. The message is logged just before\n\n the interface is err-disabled and if the configured burst interval is\n\n more than a second.	arp-inspection	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SW_PKT_RATE_EXCEED</del>	4-Warning	[dec] packets received in [dec] milliseconds on [chars].	The switch has received the given number of ARP packets in the given duration on the given interface. This message is logged just before the port is err-disabled because of exceeded packet rate. And this message is logged when the burst interval is set to 1 second.	arp-inspection	LOT_SID_NO_ACTION
<del>SW_PKT_INVALID</del>	4-Warning	[node] Invalid ARP packets [[char]C]	The switch has received ARP packets considered invalid by ARP inspection. The packets are bogus and their presence may be an indication of man-in-the-middle attacks being attempted in the network. This message differs from other messages in that while the other can be used to provide as much information of the packet as possible this message is used as a catch all message when the rate of incoming packets exceed DAI logging rate.	arp-inspection	LOT_SID_NO_ACTION
SW_DAI6ACL_PERMIT	6-Information	[node] ARPs [chars] on [chars] vlan [dec] [dec] [dec] [dec] [dec] [dec]	The switch has received ARP packets that have been permitted as a result of ACL match.	arp-inspection	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SWD</del> ARP_PROBE_HRM	6-Information	[node] ARPs [chars] on [chars] vlan [dec] [chars] [chars] [chars]	This message is logged when an ARP packet with a sender IP address of 0.0.0.0 has been permitted. These packets are used as ARP probes by various network devices. These messages are not logged by default but only when arp-probe logging is enabled.	arp-inspection	LOG_SID_NO_ACTION
<del>SWD</del> DHCP_SNOOP_HRM	6-Information	[node] ARPs [chars] on [chars] vlan [dec] [chars] [chars] [chars]	The switch has received ARP packets that have been permitted as a result of senders IP and MAC address match against the dhcp snooping database for the received vlan.	arp-inspection	LOG_SID_NO_ACTION
<del>SW</del> MAC_UF_NAUT_MAC	4-Warning	Unauthenticated MAC [enet] on port [chars]	The switch has received an unauthenticated MAC address on the specified port.	mac-authentication	LOG_SID_NO_ACTION
<del>SW</del> MAC_UF_CLEAR_TABLE	5-Notice	MAC Authentication Table Cleared	MAC Authentication Table was cleared.	mac-authentication	LOG_SID_NO_ACTION
<del>SW</del> MAC_UF_MAC_AUTH_AD	5-Notice	MAC [enet] was authenticated	The switch has received a cli to authenticate a MAC.	mac-authentication	LOG_SID_NO_ACTION
<del>SW</del> MAC_UF_MAC_AUTH_DISA	5-Notice	MAC Authentication [chars]	MAC Authentication was just enabled/disabled	mac-authentication	LOG_SID_NO_ACTION
<del>SW</del> MIMV_MACHLAP_NOIF	4-Warning	Host [enet] in [chars] [dec] is flapping between port [chars] and port [chars]	The system has found the specified host moving between the specified ports.	-	"Check the network for possible loops."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SW_MGR3CMOENCF</del>	4-Warning	Host [enet] moving from Port [chars] to Port [chars] as wired entry not allowed	The system has found the specified host moving between the specified ports. The host transition from wireless to wired not allowed.	sw-matmmac-table	"Check that this move does not happen too often"
<del>SW_MGR3CMOENCF</del>	4-Warning	Host [enet] moving from Port [chars] to Port [chars] as wireless entry	The system has found the specified host moving between the specified ports. The host transitioned from wired to wireless.	-	"Check that this move does not happen too often"
SW_MGR3CM_ERROR	3-Error	Connection Manager Error - [chars].	A Segment Switch Connection Manager error occurred.	-	LOG_STD_ACTION
SW_MGR3CM_ERROR_CLASS	3-Error	Connection Manager Error: Class [chars]: - [chars].	A Segment Switch Connection Manager error occurred.	-	LOG_STD_ACTION
SW_MGR3CM_ERROR_FEATURE	3-Error	Connection Manager Feature Error: [chars] - [chars].	-	-	-
SW_MGR3CM_ERROR_FEATURE_CLASS	3-Error	Connection Manager Feature Error: Class [chars]: [chars] - [chars].	-	-	-
SW_MGR3FHM_ERROR	3-Error	SSM Feature Handler Manager Error - [chars].	A Feature Handler Manager error occurred.	-	LOG_STD_ACTION
SW_MGR3SM_INVALID_HANDLE	3-Error	Segment Manager Error - Invalid [chars] handle - [dec].	A Connection Manager error occurred due to a invalid handle.	-	LOG_STD_ACTION
SW_MGR3SM_INVALID_SEGMENT	3-Error	Segment Switch Manager Error - Invalid segment - [chars].	A Segment Switch Manager error occurred due to a invalid segment.	-	LOG_STD_ACTION
SW_MGR3SM_ERROR	3-Error	Segment Manager Error - [chars].	A Segment Manager error occurred.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SW_MGR3SSM_SEG_ISSU	3-Error	SSM Segment ISSU: [chars] not supported.	ISSU of this SSM Segment is not supported.	-	LOG_SID_NO_ACTION
SW_MGR3XDR_RECV_FAIL	3-Error	XDR failed to register [chars] client due to [chars]	Failure to register the said XDR client.	-	LOG_SID_NO_ACTION
SW_VLAN_ISSU_GET_BUFFER	2-Critical	Switch Vlan ISSU client failed to get buffer for message. Error: [dec] [chars]	The Switch Vlan ISSU client failed to get buffer space for building a negotiation message. A negotiation message cannot be sent to the standby device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	sw-vlan	"show logging and show checkpoint client"
SW_VLAN_ISSU-2-INT	2-Critical	Switch Vlan ISSU client initialization failed to [chars]. Error: [dec] [chars]	The Switch Vlan ISSU client could not be initialized. This initialization failure must be addressed before in-service software upgrade or downgrade can be performed successfully. If you do not address this failure there will be downtime during software upgrade or downgrade.	sw-vlan	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SW_VLAN_ISSU_NEGO_FAIL	2-Critical	Switch Vlan ISSU client failed to send negotiation message. Error: [dec] [chars]	The Switch Vlan ISSU client failed to send a session negotiation message to the peer device. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	sw-vlan	"show logging and show checkpoint client"
SW_VLAN_ISSU_SESSION_CO	2-Critical	Switch Vlan ISSU client encountered unexpected client nego_done. Error: [dec] [chars]	An ISSU-compliant client transitions through a series of internal states. The Switch Vlan ISSU client encountered a 'client negotiation done' state that was unexpected. If a problem occurs with the ISSU session negotiation the standby device cannot be brought up properly.	sw-vlan	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
SW_VLAN_ISSU_SESSION_CRY	2-Critical	Switch Vlan ISSU client failed to register session information. Error: [dec] [chars]	The Switch Vlan ISSU client failed to register session information. If a problem occurs with the ISSU session registration the standby device cannot be brought up properly.	sw-vlan	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
SW_VLAN_ISSU_CAPNADZE	3-Error	Switch Vlan ISSU client capability list is empty.	The Switch Vlan ISSU client capability exchange list size is invalid.	sw-vlan	"show issu capability entires <Client_ID>"
SW_VLAN_ISSU_CAPNOCMPBE	3-Error	Switch Vlan ISSU client capability exchange result incompatible.	The Switch Vlan ISSU client capability exchange have negotiated as incompatible with the peer.	sw-vlan	"show issu negotiated capability <Session_ID>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SW_VLAN</del> <del>ISSU</del> <del>CHG</del> <del>DOWN</del> <del>VTP</del>	3-Error	VTP version [dec] is configured in vlan.dat file. Device cannot be downgraded to an image that does not support this VTP version.	The VTP version is not saved in startup or running config. It is stored in vlan.dat file. If vlan.dat file content is copied from some other source or if the pre-requisites for 'VTP version 3' is removed from the system via CLI and then the system is re-started the effective VTP version differs from the one stored in the file.	sw-vlan	"Please use 'vtp version' CLI to re-configure VTP version."
<del>SW_VLAN</del> <del>ISSU</del> <del>AD</del> <del>SESS</del>	3-Error	Switch Vlan ISSU client does not have a valid registered session.	The Switch Vlan ISSU client does not have a valid registered session.	sw-vlan	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
<del>SW_VLAN</del> <del>ISSU</del> <del>CM</del> <del>HE</del> <del>VER</del>	3-Error	'Message Type [dec]' is not supported by Switch Vlan ISSU client at peer	The Switch Vlan ISSU client at the peer supervisor is not compatible for this message type. The Switch Vlan client will be marked as incompatible with the peer.	sw-vlan	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
<del>SW_VLAN</del> <del>ISSU</del> <del>MG</del> <del>NOT</del> <del>CK</del>	3-Error	Switch Vlan ISSU client 'Message Type [dec]' is not compatible	The Switch Vlan ISSU client received an incompatible message from the peer device. The message cannot be processed.	sw-vlan	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SW_VLAN_ISSU_MG_SIZE	3-Error	Switch Vlan ISSU client failed to get the MTU for Message Type [dec]. Error: [dec] [chars]	The Switch Vlan ISSU client failed to calculate the MTU for the specified message. The Switch Vlan ISSU client is not able to send the message to the standby device.	sw-vlan	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
SW_VLAN_ISSU_UNREG	3-Error	Switch Vlan ISSU client failed to unregister session information. Error: [dec] [chars]	The Switch Vlan ISSU client failed to unregister session information.	sw-vlan	"show issu session <client_id> and " "show issu negotiated capability <session_id>"
SW_VLAN_ISSU_TRANSFORM	3-Error	Switch Vlan ISSU client [chars] transform failed for 'Message Type [dec]'. Error: [dec] [chars]	The Switch Vlan ISSU client could not transform the specified message type. If the transmit transformation failed the checkpoint message was not sent to the standby device. If the receive transformation failed the checkpoint message was not applied on the standby device. In both cases the Switch Vlan state between the active device and the standby device is not identical.	sw-vlan	"show issu session <client_id> and " "show issu negotiated version <session_id>"
SW_VLAN_IIF_ALLOC_FAIL	3-Error	IIF_ID alloc failed for vlan [dec] due to memory allocation failure. Some features will not work.	The system is low on memory due to which IIF-ID allocation failed. This results in failure to apply polices such as QoS and Security acls on this vlan.	sw-vlan	LOGS_IDREDUCE_ACTION "Once memory is available shutdown the vlan and then unshut the vlan"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SW_VLAN3MCFGADN_AID	3-Error	IIF_ID registration failed for vlan [dec] due to memory allocation failure. Some features will not work. Vlan has been shutdown	SWC Sensor Registration failed!	-	"This message is for informational purposes only"
SW_VLAN3MALOC_FAIL	3-Error	Failed to allocate [dec] bytes	Memory allocation failed.	sw-vlan	LOG_SID_SH_TECH_ACTION
SW_VLAN3MCFGADN_AID	3-Error	VLAN Manager synchronization failure with Port Manager over [chars]	Due to lack of ready pool space the VLAN manager dropped a notification\n\n from the Port Manager as indicated by the message.	sw-vlanvtpm	LOG_STD_ACTION
SW_VLAN3MCFGADN_AID	3-Error	VTP protocol code internal error: [chars]	VTP protocol code encountered an unexpected error will processing\n\n configuration request packet or timer expiration.	sw-vlanvtp	LOG_SID_SH_TECH_ACTION
SW_VLAN3MCFGADN_AID	4-Warning	VLAN manager unexpectedly received a bad PM VLAN cookie from the Port\n\n Manager VLAN indicated: [dec]	The VLAN manager received an upcall from the Port Manager containing a\n\n VLAN cookie which translated to a bad VLAN number.	sw-vlanpm	LOG_SID_SH_TECH_ACTION
SW_VLAN3MCFGADN_AID	4-Warning	Failed to configure VLAN from startup-config. Fallback to use VLAN configuration file from non-volatile memory	VLAN software failed to use VLAN configuration from startup-config\n\n file. It will fallback to use the binary VLAN configuration file\n\n in non-volatile memory.	sw-vlan	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SW_VLAN_CFG_ERR</del>	4-Warning	VLAN configuration file contained incorrect verification word: 0x[hec]	The VLAN configuration file read by the VLAN manager did not begin with\n\ correct value which would indicate a valid VLAN configuration file. Thus\n\ it has been rejected.	sw-vlanifs	LOG_STD_ACTION
<del>SW_VLAN_CFG_ERR</del>	4-Warning	VLAN configuration file contained unknown file version: [dec]	The VLAN configuration file read by the VLAN manager contained an\n\ unrecognized file version number. This may indicate an attempt to\n\ regress to an older version of the VLAN manager software.	sw-vlanifs	LOG_STD_ACTION
<del>SW_VLAN_CFG_ERR</del>	4-Warning	VLAN configuration file contained incorrect domain name length: %u	The VLAN configuration file read by the VLAN manager did not contain a valid domain name length. Thus it has been rejected.	sw-vlanifs	"Please provision VTP domain name again"
<del>SW_VLAN_CFG_ERR</del>	4-Warning	VLAN configuration file contained incorrect VTP password length: %u	The VLAN configuration file read by the VLAN manager did not contain a valid VTP password length. Thus it has been rejected.	sw-vlanifs	"Please provision VTP password again"
<del>SW_VLAN_CFG_ERR</del>	4-Warning	Encountered incorrect VLAN timer active value: [chars]	Due to a software error a VLAN timer was detected active when it\n\ should have been inactive or inactive when it should have been active.	sw-vlanvtp	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SW_VLAN</del> SW_VLAN_INTERNAL_ERR	4-Warning	Extended VLAN manager received an internal error [dec] from [chars]: [chars]	An unexpected error code was received by the VLAN Manager from the \n\ extended VLAN configuration software.	sw-vlan	LOG_SID_SH_TECH_ACTION
<del>SW_VLAN</del> SW_VLAN_DB_ERR	4-Warning	Extended VLAN manager received bad data of type [chars]: value [dec] from \n\ function [chars]	Invalid data was received by the extended VLAN Manager from an extended\n\ VLAN configuration database routine.	sw-vlan	LOG_SID_SH_TECH_ACTION
SW_VLAN4FS_FAILURE	4-Warning	VLAN manager encountered file operation error: call = [chars] / file = [chars] / code = [dec] [chars] / bytes transferred = [dec]	The VLAN manager received an unexpected error return from a IOS file\n\ system call.	sw-vlanifs	LOG_STD_ACTION
<del>SW_VLAN</del> SW_VLAN_PM_COOKIE_ERR	4-Warning	VLAN manager unexpectedly received a null [chars] type cookie from the Port\n\ Manager data reference: [chars]	The VLAN manager queried the Port Manager for a reference cookie but\n\ received a NULL pointer instead.	sw-vlanpm	LOG_SID_SH_TECH_ACTION
<del>SW_VLAN</del> SW_VLAN_CFG_ERR	4-Warning	Failed to configure extended range VLAN from startup-config. Error [chars]	VLAN software failed to use extended VLAN configuration from\n\ startup-config file. All extended range VLANs configuration will be lost\n\ after system boot up.	sw-vlan	LOG_SID_NO_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SVLAN/MAN/CREATE/ERR	4-Warning	Failed to create VLANs [chars]: [chars]	The VLANs specified in the error message could not be created. The VLAN manager called an VLAN database routine to create one or more VLANs but the Port Manager failed the VLAN creation requests. A possible cause of this error is that the VLANs already exist in the Port Manager as internal VLANs.	sw-vlan	"Check the internal VLAN usage using 'show vlan internal usage' command. " "Unconfigure the feature which occupies the internal VLAN and retry " "the VLAN creation operation." LOGS_IDSHTTECH_ACTION
SVLAN/MAN/DATABASE	4-Warning	VLAN MANAGER received bad data of type [chars]: value [dec] from function [chars]	Invalid data was received by the VLAN MANAGER from a VLAN configuration database routine.	sw-vlan	LOGS_IDSHTTECH_ACTION
SVLAN/MAN/DATABASE	4-Warning	The [chars] VTP database of length [dec] cannot be supported by the system	The VTP database size is more than what the system can support.	sw-vlan	"Reduce the database size by decreasing the configuration parameters " "example reduce the size of vlan-names"
SVLAN/MAN/PHOOD/ERR	4-Warning	Primary server request failed\nPrimary server can only change once \n every [dec] seconds	VTP takeover packet received within takeover rate limit	sw-vlanvtp	LOGS_IDSHTTECH_ACTION
SVLAN/MAN/INTERNAL/ERR	4-Warning	VLAN manager received an internal error [dec] from vtp function [chars]: [chars]	An unexpected error code was received by the VLAN Manager from the VTP\n configuration software.	sw-vlanvtp	LOGS_IDSHTTECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SW_VLAN/INVALID_DB_DA	4-Warning	VLAN manager received bad data of type [chars]: value [dec] from vtp database\n\n function [chars]	Invalid data was received by the VLAN Manager from a VTP configuration\n\n database routine.	sw-vlanvtp	LOG_SID_SH_TECH_ACTION
SW_VLAN/INVALID_DB_DA	4-Warning	VLAN manager received bad data of type [chars]: value [dec] while being called\n\n to handle a [chars] event	Invalid data was received by the VLAN Manager from the VTP configuration\n\n software.	sw-vlanvtp	LOG_SID_SH_TECH_ACTION
SW_VLAN/VTP_MASTER_CFG	4-Warning	[enet] has become the primary server for the [chars] VTP feature	The primary server status has changed and the indicated device has become the primary server for the indicated VTP feature.	sw-vlan	LOG_SID_NO_ACTION
SW_VLAN/VTP_SEM_BUSY	4-Warning	VTP semaphore is unavailable for function [chars]. Semaphore locked by [chars]	The VTP database is currently locked by another task and is not available.\n\n Users should retry the operation sometime later.	sw-vlanvtp	LOG_SID_SH_TECH_ACTION
SW_VLAN/VTP_USER_CFG	4-Warning	VTP protocol user notification: [chars]	VTP protocol code encountered an unusual diagnostic situation which the\n\n user should be made aware of.	sw-vlanvtp	LOG_STD_ACTION
SW_VLAN/OLD_CONFIG_READ	6-Information	Old version [dec] VLAN configuration file detected and read OK. Version [dec]\n\n files will be written in the future.	VLAN software detected an old version of the VLAN configuration file\n\n format. It was able to interpret the file with no problems but will\n\n create files using the new format in the future.	sw-vlanvtp	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<b>SW_VLAN.DAT_CACHEES</b>	6-Information	Unexpected vlan.dat cache exists. Removing the cache and continuing the sync with new set.	vlan.dat file is synced to the STANDBY via one or more checkpoint message from ACTIVE. The sequence number for each such set of checkpoint messages starts with 1. These messages are cached at the STANDBY till the end-of-set indication is received. Here the STANDBY received a checkpoint message with a size that does not fit the size of cache specified in the checkpoint message with sequence number 1. Please report it to Customer Support.	sw-vlan	LOG_SID_SH_TECH_ACTION
<b>SW_VLAN.DOMN_NAME</b>	6-Information	VTP domain name changed to [chars].	The VTP domain name was changed through configuration to the name\n specified in the message. A management domain is the naming scope\n of a VLAN name. Each VLAN has a name that is unique within the\n management domain.	sw-vlanvtp	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SWLAN/VTPMODECHNGE	6-Information	VLAN manager changing device mode from [chars] to [chars].	Some switch devices must automatically change VTP device modes upon receipt of a VLAN configuration database containing more than a set number of VLANs depending on the device. This message indicates that such a spontaneous conversion has occurred what the previous mode was and what the current mode is.	sw-vlanvtp	LOG_SID_NO_ACTION
SWLAN/VTPPRUNGCHNGE	6-Information	VTP Operational Pruning [chars].	VTP operational pruning changed. This can happen due to admin pruning change VTP mode changes or VTP config propagation. 'show vtp status' output can be looked up to find the reason for this change.	sw-vlanvtp	"Check 'show vtp status' output to find the reason for this change." LOG_SID_NO_ACTION
SW56-1-INITSYS	1-Alert	[chars]	Failed SW56 Initialization. Most likely because lacking of memory	as	"The amount of memory available in the router may not be sufficient." LOG_STD_ACTION
SW56-3-ERR_MSGQ	3-Error	[chars]	Failed to send message to internal software process	as	LOG_STD_ACTION
SWCSWCHANITFAILRE	3-Error	Failed to register with RF rc = [dec]	Message HA message received from peer node	-	"This message is for informational purposes only"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SMICH_L2M_BALLOC_FAILED	3-Error	Allocation of [chars] memory failed for SWITCH_L2M feature in QFP	Allocation of memory by the QFP SWITCH_L2M feature microcode failed. The name of the memory chunk is specified in the message. This indicates a software failure	qfp-switch-infra	LOG_STD_ACTION
SMICH_L2M_BINT_FAILED	3-Error	Initialization of the SVI feature in QFP failed	Initialization of the SWITCH_L2M feature in the QFP failed. This indicates a software failure.	qfp-switch-infra	LOG_STD_ACTION
SMICH_L2M_PKT_REP_REG_FAILED	3-Error	Failed to register with generic packet replication for SWITCH_L2M feature in QFP	SWITCH_L2M initialization of packet replication registration failed.	qfp-switch-infra	LOG_STD_ACTION
SMICH_QSERV_TRUST_DETECT	5-Notice	[chars] detected on port [chars] port's configured trust state is now operational.	Trusted Boundary detected a device matching the trusted device setting for the port and so has modified the port's trust state.	-	LOG_SID_NO_ACTION
SMICH_QSERV_TRUST_LOST	5-Notice	[chars] no longer detected on port [chars] operational port trust state is now untrusted.	Trusted Boundary lost contact with a trusted device and so has set the port's trust state to untrusted.	-	LOG_SID_NO_ACTION
SMICH_SPAN_ISSU_BUFERR	3-Error	span switch ISSU client failed to get buffer for message error [dec]	span switch ISSU client failed to get buffer for building a negotiation message. Hence it can send the negotiation message to the standby unit. When there is a problem in the negotiation the standby unit can not be brought up.	c7600-l2	"show logging and show checkpoint client"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SWICH_SPAN_ISSU_CAPABILITY	3-Error	span switch ISSU client [chars]	span switch ISSU client observed an error during capability negotiation. When this error happens there is a mismatch between the client capability between the active and standby unit.	c7600-12	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
SWICH_SPAN_ISSU_INIT	3-Error	span switch ISSU client initialization failed at [chars] error [chars]	span switch ISSU client could not be initialized this will cause catastrophic failure when ISSU upgrade or downgrade is performed.	c7600-12	LOGS_IDSHTTECH_ACTION
SWICH_SPAN_ISSU_MSG_COMPAT	3-Error	span switch ISSU client message [dec] is not compatible	span switch ISSU client received an incompatible message from the peer unit. Since the message is not compatible it can be processed by this unit	c7600-12	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
SWICH_SPAN_ISSU_MSG_SIZE	3-Error	span switch ISSU client failed to get the message size for message [dec]	span switch ISSU client failed to calculate message size for the message specified. The span switch ISSU client will not be able to send message to the standby unit.	c7600-12	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
SWICH_SPAN_ISSU_POLICY	3-Error	span switch ISSU client message type [dec] is [chars]	span switch ISSU client received an message type which it does not support. The policy is applied to make the session compatible.	c7600-12	"show issu session <client_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SMICHSPANISL#END#AHD	3-Error	span switch ISSU client failed to send a negotiation message error [dec]	span switch ISSU client could not send a session negotiation message to the peer. When there is a problem in the negotiation the standby unit can not be brought up.	c7600-12	"show logging and show checkpoint client"
SMICHSPANISL#SESSION	3-Error	span switch ISSU client [chars]	span switch ISSU client observed an error during a session negotiation with the peer unit. When there is a problem with the session the standby unit can not be brought up.	c7600-12	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated " "capability <session_id>"
SMICHSPANISL#TRANSFORM	3-Error	span switch ISSU client [chars] transform failed error [chars]	span switch ISSU client could not transform the message. If the transmit transformation failed it means that the checkpoint message can not be sent to the standby unit. If the receive transformation failed it means that the checkpoint message can not be applied on the standby unit. In both cases the span switch state will not be identical with the active unit.	c7600-12	"show issu session <client_id> and " "show issu negotiated version <session_id>"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SWPORT</del> <del>IP</del> <del>MAC</del> <del>LEARN</del> <del>NO</del> <del>SSMT</del>	4-Warning	Attempt to learn a new MAC address on VLAN [dec] caused system limit [node]to be exceeded.	It is not allowed to learn addresses beyond the system limit. For the new unknown source MAC address from wired side and if learning this address would cause the system limit to be exceeded it won't be learnt	-	LOG_SID_NO_ACTION
<del>SWPORT</del> <del>IP</del> <del>PROXY</del> <del>INIT</del> <del>IED</del>	2-Critical	QFP SWPORT Proxy IPC interface initialization failure result: [dec].	Cisco internal software error. QFP SWPORT Proxy initialization detected that the IPC interface initialization failed. QFP SWPORT proxy will not be functional while this condition exists.	qfp-swportkeywords:swport	LOG_STD_ACTION
<del>SWPORT</del> <del>IP</del> <del>PROXY</del> <del>BD</del> <del>MSG</del>	3-Error	QFP SWPORT Proxy received bad length message type [dec]	Cisco internal software error. QFP SWPORT Proxy received a corrupted message from control plane. This message will be ignored.	qfp-swportkeywords:swport	LOG_STD_ACTION
<del>SWPORT</del> <del>IP</del> <del>PROXY</del> <del>AL</del> <del>Q</del> <del>ALD</del>	3-Error	QFP SWPORT Proxy [chars] message lost due to message buffer allocation failure.	Cisco internal software error. QFP SWPORT Proxy message processing detected a message buffer allocation failure. The message is lost as the result of this condition.	qfp-swportkeywords:swport	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SWPORT3-3-ERR_FAILED	3-Error	QFP SWPORT Proxy [chars] message lost due to message sent failure result: [dec].	Cisco internal software error. QFP SWPORT Proxy message processing detected a message sent failure. The message is lost as the result of this condition.	qfp-swportkeywords:swport	LOG_STD_ACTION
SWPORT3-3-ERR_FAILED	3-Error	SWPORT IPC subtype: [dec]	Extending memory failed.	qfp-swportkeywords:swport	LOG_STD_ACTION
SWPORT3-3-ERR_FAILED	3-Error	SWPORT IPC subtype: [dec]	Requesting more memory failed.	qfp-swportkeywords:swport	LOG_STD_ACTION
SWPORT3-4-ERR_FAILED	4-Warning	QFP SWPORT Proxy received invalid message type [dec]	Cisco internal software error. QFP SWPORT Proxy received an invalid message from control plane. This message will be ignored.	qfp-swportkeywords:swport	LOG_STD_ACTION
SWPORT3-4-ERR_FAILED	4-Warning	QFP SWPORT Proxy IPC invalid length [dec]:[dec] len [dec] flags 0x[hec] source [dec]	Cisco internal software error. QFP SWPORT Proxy received invalid IPC message length from control plane. This message will be ignored.	qfp-swportkeywords:swport	LOG_STD_ACTION
SWPORT3-3-ERR_FAILED	3-Error	Allocation of [chars] memory failed for SWPORT feature in QFP	Allocation of memory by the QFP SWPORT feature microcode failed. The name of the memory chunk is specified in the message. This indicates a software failure	qfp-swport	LOG_STD_ACTION
SWPORT3-3-ERR_FAILED	3-Error	Initialization of the SWPORT feature in QFP failed	Initialization of the SWPORT feature in the QFP failed. This indicates a software failure.	qfp-swport	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SWPREF4MAC_CONFLICT	4-Warning	Dynamic mac [node]X.[node]X.[node]X from [chars] conflict with [chars] please check the network topology and make sure there is no loop.	When eWLC receives a packet whose src MAC in the outer ethernet header \n is eWLC SVT's MAC or is a wireless client's MAC this warning message \n is printed	qfp-swport	"In most cases this warning message indicates a L2 loop connection \n" "in the network please check the network topology and make sure \n" "there is no loop"
<del>SWPREF4MAC_CONFLICT</del>	6-Information	CLOCK LOCK is [chars] for [chars] interface which is not selected as source to synchronize chassis.	INFORMATION Message: CLOCK LOCK is Cleared/Asserted for interface which is not configure as a source	spa-synce-all	"No further action required. This is source monitor " "INFORMATION message not an error Message."
SYS0USERLOG_EMERG	0-Emergency	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."
SYS0USERLOG_EMERG	0-Emergency	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS0USERLOG_EMERG	0-Emergency	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."
SYS0USERLOG_EMERG	0-Emergency	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."
SYS0USERLOG_EMERG	0-Emergency	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYSUSERLOG_EMERG	0-Emergency	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."
SYSUSERLOG_EMERG	0-Emergency	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."
SYS-1-CCA_SYS_ERR	1-Alert	CCA Detected System Error code = [dec]	CCA has detected a severe system software error. This condition is usually caused by one of the components using CCA or by the interaction among components using CCA.	os	LOG_STD_ACTION
SYS-1-CCA_SYS_ERR	1-Alert	CCA Detected System Error code = [dec]	CCA has detected a severe system software error. This condition is usually caused by one of the components using CCA or by the interaction among components using CCA.	os	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-1-CCA_SYS_ERR	1-Alert	CCA Detected System Error code = [dec]	CCA has detected a severe system software error. This condition is usually caused by one of the components using CCA or by the interaction among components using CCA.	os	LOG_STD_ACTION
SYS-1-CCA_SYS_ERR	1-Alert	CCA Detected System Error code = [dec]	CCA has detected a severe system software error. This condition is usually caused by one of the components using CCA or by the interaction among components using CCA.	os	LOG_STD_ACTION
SYS-1-CCA_SYS_ERR	1-Alert	CCA Detected System Error code = [dec]	CCA has detected a severe system software error. This condition is usually caused by one of the components using CCA or by the interaction among components using CCA.	os	LOG_STD_ACTION
SYS-1-CCA_SYS_ERR	1-Alert	CCA Detected System Error code = [dec]	CCA has detected a severe system software error. This condition is usually caused by one of the components using CCA or by the interaction among components using CCA.	os	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-1-CCA_SYS_ERR	1-Alert	CCA Detected System Error code = [dec]	CCA has detected a severe system software error. This condition is usually caused by one of the components using CCA or by the interaction among components using CCA.	os	LOG_STD_ACTION
<del>SYS-CPU-ALING-THRESHOD</del>	1-Alert	Threshold: [chars] CPU UtilizationTotal/Intr [dec][node][dec][node]	CPU usage has returned to normal after crossing over from a threshold of high usage. Any process that was disabled during the period of high CPU use can now be enabled.	-	"No action is required."
<del>SYS-CPU-ALING-THRESHOD</del>	1-Alert	Threshold: [chars] CPU UtilizationTotal/Intr [dec][node][dec][node]	CPU usage has returned to normal after crossing over from a threshold of high usage. Any process that was disabled during the period of high CPU use can now be enabled.	-	"No action is required."
<del>SYS-CPU-ALING-THRESHOD</del>	1-Alert	Threshold: [chars] CPU UtilizationTotal/Intr [dec][node][dec][node]	CPU usage has returned to normal after crossing over from a threshold of high usage. Any process that was disabled during the period of high CPU use can now be enabled.	-	"No action is required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SSCPUALINGIHRESHOD	1-Alert	Threshold: [chars] CPU UtilizationTotal/Intr [dec][node][dec][node]	CPU usage has returned to normal after crossing over from a threshold of high usage. Any process that was disabled during the period of high CPU use can now be enabled.	-	"No action is required."
SSCPUALINGIHRESHOD	1-Alert	Threshold: [chars] CPU UtilizationTotal/Intr [dec][node][dec][node]	CPU usage has returned to normal after crossing over from a threshold of high usage. Any process that was disabled during the period of high CPU use can now be enabled.	-	"No action is required."
SSCPUALINGIHRESHOD	1-Alert	Threshold: [chars] CPU UtilizationTotal/Intr [dec][node][dec][node]	CPU usage has returned to normal after crossing over from a threshold of high usage. Any process that was disabled during the period of high CPU use can now be enabled.	-	"No action is required."
SSCPUALINGIHRESHOD	1-Alert	Threshold: [chars] CPU UtilizationTotal/Intr [dec][node][dec][node]	CPU usage has returned to normal after crossing over from a threshold of high usage. Any process that was disabled during the period of high CPU use can now be enabled.	-	"No action is required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYSDIAGS-1-Alert	1-Alert	Threshold: [chars] CPU UtilizationTotal/Intr: [dec][node][dec][node]	The system is experiencing high CPU usage possibly from a process that is using too much CPU. This condition demands immediate attention or packets or calls may be dropped.	-	"Enter the <CmdBold>show processes CPU<NoCmdBold>" " command to determine the CPU hogging process" " that is causing this condition and if possible" " disable the activity that is causing the" " CPU hog condition so that CPU" " utilization is reduced."
SYSDIAGS-1-Alert	1-Alert	Threshold: [chars] CPU UtilizationTotal/Intr: [dec][node][dec][node]	The system is experiencing high CPU usage possibly from a process that is using too much CPU. This condition demands immediate attention or packets or calls may be dropped.	-	"Enter the <CmdBold>show processes CPU<NoCmdBold>" " command to determine the CPU hogging process" " that is causing this condition and if possible" " disable the activity that is causing the" " CPU hog condition so that CPU" " utilization is reduced."
SYSDIAGS-1-Alert	1-Alert	Threshold: [chars] CPU UtilizationTotal/Intr: [dec][node][dec][node]	The system is experiencing high CPU usage possibly from a process that is using too much CPU. This condition demands immediate attention or packets or calls may be dropped.	-	"Enter the <CmdBold>show processes CPU<NoCmdBold>" " command to determine the CPU hogging process" " that is causing this condition and if possible" " disable the activity that is causing the" " CPU hog condition so that CPU" " utilization is reduced."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYSCURSIHIGHRESHOLD	1-Alert	Threshold: [chars] CPU UtilizationTotal/Intr: [dec][node][dec][node]	The system is experiencing high CPU usage possibly from a process that is using too much CPU. This condition demands immediate attention or packets or calls may be dropped.	-	"Enter the <CmdBold>show processes CPU<NoCmdBold>" " command to determine the CPU hogging process" " that is causing this condition and if possible" " disable the activity that is causing the" " CPU hog condition so that CPU" " utilization is reduced."
SYSCURSIHIGHRESHOLD	1-Alert	Threshold: [chars] CPU UtilizationTotal/Intr: [dec][node][dec][node]	The system is experiencing high CPU usage possibly from a process that is using too much CPU. This condition demands immediate attention or packets or calls may be dropped.	-	"Enter the <CmdBold>show processes CPU<NoCmdBold>" " command to determine the CPU hogging process" " that is causing this condition and if possible" " disable the activity that is causing the" " CPU hog condition so that CPU" " utilization is reduced."
SYSCURSIHIGHRESHOLD	1-Alert	Threshold: [chars] CPU UtilizationTotal/Intr: [dec][node][dec][node]	The system is experiencing high CPU usage possibly from a process that is using too much CPU. This condition demands immediate attention or packets or calls may be dropped.	-	"Enter the <CmdBold>show processes CPU<NoCmdBold>" " command to determine the CPU hogging process" " that is causing this condition and if possible" " disable the activity that is causing the" " CPU hog condition so that CPU" " utilization is reduced."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYSICURNGIFRESHOLD	1-Alert	Threshold: [chars] CPU UtilizationTotal/Intr: [dec][node][dec][node]	The system is experiencing high CPU usage possibly from a process that is using too much CPU. This condition demands immediate attention or packets or calls may be dropped.	-	"Enter the <CmdBold>show processes CPU<NoCmdBold>" " command to determine the CPU hogging process" " that is causing this condition and if possible" " disable the activity that is causing the" " CPU hog condition so that CPU" " utilization is reduced."
SYS-IPAM_INIT_FAIL	1-Alert	IPAM Initialization Failure code = [dec]	IPAM has detected an initialization failure. This condition is\n\n usually caused by a software error during IPAM initialization.	ipam	LOG_STD_ACTION
SYS-IPAM_INIT_FAIL	1-Alert	IPAM Initialization Failure code = [dec]	IPAM has detected an initialization failure. This condition is\n\n usually caused by a software error during IPAM initialization.	ipam	LOG_STD_ACTION
SYSLOGNGHRSPEFUL	1-Alert	Logging persistent unconfigured as space is full. device-name: [chars] threshold-cap: [node]d free: [node]d	Automatically unconfigure logging persistent behaviour when there is no space left on the persistent storage.	syslog	"Common Criteria CC v.3.1 certification requirement force to halt "
SYSLOGNGHRSPEFUL	1-Alert	Logging persistent unconfigured as space is full. device-name: [chars] threshold-cap: [node]d free: [node]d	Automatically unconfigure logging persistent behaviour when there is no space left on the persistent storage.	syslog	"Common Criteria CC v.3.1 certification requirement force to halt "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SSLOGG_PERS_OLEXCEED</del>	1-Alert	Logging persistent unconfigured as threshold capacity is exceeded. device-name: [chars] threshold-cap: [node]d logging-persistent size: [node]d free: [node]d	Automatically unconfigure logging persistent behaviour when threshold capacity is exceeded on the persistent storage.	syslog	"Common Criteria CC v.3.1 certification requirement force to halt the"
<del>SSLOGG_PERS_OLEXCEED</del>	1-Alert	Logging persistent unconfigured as threshold capacity is exceeded. device-name: [chars] threshold-cap: [node]d logging-persistent size: [node]d free: [node]d	Automatically unconfigure logging persistent behaviour when threshold capacity is exceeded on the persistent storage.	syslog	"Common Criteria CC v.3.1 certification requirement force to halt the"
SYSHLOGGNG_WRITE_ERR	1-Alert	Logging persistent unconfigured as write error occur while writing to the persistent logging file [chars]	Automatically unconfigure logging persistent behaviour when write error occurs on the persistent storage.	syslog	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYSHLOGGNG_WRITE_ERR	1-Alert	Logging persistent unconfigured as write error occur while writing to the persistent logging file [chars]	Automatically unconfigure logging persistent behaviour when write error occurs on the persistent storage.	syslog	"Copy the error message exactly as it appears and report it to your " "technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-1-OVERTEMP	1-Alert	System detected OVERTEMPERATURE condition.\n Please resolve cooling problem immediately!\n	The environmental monitor detected a high-temperature condition.	none	"Make sure that the room temperature is not too high and that air flow " "to the card is not blocked. If this condition persists the " "environmental monitor might shut down the system. Call your technical " "support representative for assistance if necessary."
SYS-1-OVERTEMP	1-Alert	System detected OVERTEMPERATURE condition.\n Please resolve cooling problem immediately!\n	The environmental monitor detected a high-temperature condition.	none	"Make sure that the room temperature is not too high and that air flow " "to the card is not blocked. If this condition persists the " "environmental monitor might shut down the system. Call your technical " "support representative for assistance if necessary."
SYS-1-OVERTEMP	1-Alert	System detected OVERTEMPERATURE condition.\n Please resolve cooling problem immediately!\n	The environmental monitor detected a high-temperature condition.	none	"Make sure that the room temperature is not too high and that air flow " "to the card is not blocked. If this condition persists the " "environmental monitor might shut down the system. Call your technical " "support representative for assistance if necessary."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-1-OVERTEMP	1-Alert	System detected OVERTEMPERATURE condition.\n Please resolve cooling problem immediately!\n	The environmental monitor detected a high-temperature condition.	none	"Make sure that the room temperature is not too high and that air flow " "to the card is not blocked. If this condition persists the " "environmental monitor might shut down the system. Call your technical " "support representative for assistance if necessary."
SYS-1-OVERTEMP	1-Alert	System detected OVERTEMPERATURE condition.\n Please resolve cooling problem immediately!\n	The environmental monitor detected a high-temperature condition.	none	"Make sure that the room temperature is not too high and that air flow " "to the card is not blocked. If this condition persists the " "environmental monitor might shut down the system. Call your technical " "support representative for assistance if necessary."
SYS-1-OVERTEMP	1-Alert	System detected OVERTEMPERATURE condition.\n Please resolve cooling problem immediately!\n	The environmental monitor detected a high-temperature condition.	none	"Make sure that the room temperature is not too high and that air flow " "to the card is not blocked. If this condition persists the " "environmental monitor might shut down the system. Call your technical " "support representative for assistance if necessary."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-1-OVERTEMP	1-Alert	System detected OVERTEMPERATURE condition.\n Please resolve cooling problem immediately!\n	The environmental monitor detected a high-temperature condition.	none	"Make sure that the room temperature is not too high and that air flow " "to the card is not blocked. If this condition persists the " "environmental monitor might shut down the system. Call your technical " "support representative for assistance if necessary."
SYS-USERLOG_ALERT	1-Alert	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."
SYS-USERLOG_ALERT	1-Alert	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-USERLOG_ALERT	1-Alert	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."
SYS-USERLOG_ALERT	1-Alert	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."
SYS-USERLOG_ALERT	1-Alert	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-1-USERLOG_ALERT	1-Alert	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."
SYS-1-USERLOG_ALERT	1-Alert	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."
SYS-2-ALREADYFREE	2-Critical	Buffer [hec] already in free pool [chars]	A block of memory at the indicated location is corrupt and/or has been erroneously freed twice.	os	"If this message recurs copy it exactly as it appears and the output " "of 'show buffer address <number>' for the given address as well as " "'show buffer pool <name> dump' for the given pool. Report it to your " "technical support representative."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-ALREADYFREE	2-Critical	Buffer [hec] already in free pool [chars]	A block of memory at the indicated location is corrupt and/or has been erroneously freed twice.	os	"If this message recurs copy it exactly as it appears and the output " "of 'show buffer address <number>' for the given address as well as " "'show buffer pool <name> dump' for the given pool. Report it to your " "technical support representative."
SYS-2-ALREADYFREE	2-Critical	Buffer [hec] already in free pool [chars]	A block of memory at the indicated location is corrupt and/or has been erroneously freed twice.	os	"If this message recurs copy it exactly as it appears and the output " "of 'show buffer address <number>' for the given address as well as " "'show buffer pool <name> dump' for the given pool. Report it to your " "technical support representative."
SYS-2-ALREADYFREE	2-Critical	Buffer [hec] already in free pool [chars]	A block of memory at the indicated location is corrupt and/or has been erroneously freed twice.	os	"If this message recurs copy it exactly as it appears and the output " "of 'show buffer address <number>' for the given address as well as " "'show buffer pool <name> dump' for the given pool. Report it to your " "technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS2-ALREADYFREE	2-Critical	Buffer [hec] already in free pool [chars]	A block of memory at the indicated location is corrupt and/or has been erroneously freed twice.	os	"If this message recurs copy it exactly as it appears and the output " "of 'show buffer address <number>' for the given address as well as " "'show buffer pool <name> dump' for the given pool. Report it to your " "technical support representative."
SYS2-ALREADYFREE	2-Critical	Buffer [hec] already in free pool [chars]	A block of memory at the indicated location is corrupt and/or has been erroneously freed twice.	os	"If this message recurs copy it exactly as it appears and the output " "of 'show buffer address <number>' for the given address as well as " "'show buffer pool <name> dump' for the given pool. Report it to your " "technical support representative."
SYS2-ALREADYFREE	2-Critical	Buffer [hec] already in free pool [chars]	A block of memory at the indicated location is corrupt and/or has been erroneously freed twice.	os	"If this message recurs copy it exactly as it appears and the output " "of 'show buffer address <number>' for the given address as well as " "'show buffer pool <name> dump' for the given pool. Report it to your " "technical support representative."
SYS2-ASSERTION_FAILED	2-Critical	Assertion failed: \[chars]\	An internal state consistency check failed. Correct operation cannot be guaranteed and the system has been halted.	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS2ASSERTION_FAILED	2-Critical	Assertion failed: \[chars]\	An internal state consistency check failed. Correct operation cannot be guaranteed and the system has been halted.	-	LOG_STD_ACTION
SYS2ASSERTION_FAILED	2-Critical	Assertion failed: \[chars]\	An internal state consistency check failed. Correct operation cannot be guaranteed and the system has been halted.	-	LOG_STD_ACTION
SYS2ASSERTION_FAILED	2-Critical	Assertion failed: \[chars]\	An internal state consistency check failed. Correct operation cannot be guaranteed and the system has been halted.	-	LOG_STD_ACTION
SYS2ASSERTION_FAILED	2-Critical	Assertion failed: \[chars]\	An internal state consistency check failed. Correct operation cannot be guaranteed and the system has been halted.	-	LOG_STD_ACTION
SYS2ASSERTION_FAILED	2-Critical	Assertion failed: \[chars]\	An internal state consistency check failed. Correct operation cannot be guaranteed and the system has been halted.	-	LOG_STD_ACTION
SYS2ASSERTION_FAILED	2-Critical	Assertion failed: \[chars]\	An internal state consistency check failed. Correct operation cannot be guaranteed and the system has been halted.	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-BAD_BM_ARG	2-Critical	Invalid BM index boolean used as argument [dec]	An illegal boolean manager index argument was referenced	idb	"Copy the error message exactly as it appears and report it to" " your technical support representative."
SYS-2-BAD_BM_ARG	2-Critical	Invalid BM index boolean used as argument [dec]	An illegal boolean manager index argument was referenced	idb	"Copy the error message exactly as it appears and report it to" " your technical support representative."
SYS-2-BAD_BM_ARG	2-Critical	Invalid BM index boolean used as argument [dec]	An illegal boolean manager index argument was referenced	idb	"Copy the error message exactly as it appears and report it to" " your technical support representative."
SYS-2-BAD_BM_ARG	2-Critical	Invalid BM index boolean used as argument [dec]	An illegal boolean manager index argument was referenced	idb	"Copy the error message exactly as it appears and report it to" " your technical support representative."
SYS-2-BAD_BM_ARG	2-Critical	Invalid BM index boolean used as argument [dec]	An illegal boolean manager index argument was referenced	idb	"Copy the error message exactly as it appears and report it to" " your technical support representative."
SYS-2-BAD_BM_ARG	2-Critical	Invalid BM index boolean used as argument [dec]	An illegal boolean manager index argument was referenced	idb	"Copy the error message exactly as it appears and report it to" " your technical support representative."
SYS-2-BAD_BM_ARG	2-Critical	Invalid BM index boolean used as argument [dec]	An illegal boolean manager index argument was referenced	idb	"Copy the error message exactly as it appears and report it to" " your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS2BAD_BM_NAME	2-Critical	Invalid BM name	An illegal name string was registered with the BM	idb	"Copy the error message exactly as it appears and report it to" " your technical support representative."
SYS2BAD_BM_NAME	2-Critical	Invalid BM name	An illegal name string was registered with the BM	idb	"Copy the error message exactly as it appears and report it to" " your technical support representative."
SYS2BAD_BM_NAME	2-Critical	Invalid BM name	An illegal name string was registered with the BM	idb	"Copy the error message exactly as it appears and report it to" " your technical support representative."
SYS2BAD_BM_NAME	2-Critical	Invalid BM name	An illegal name string was registered with the BM	idb	"Copy the error message exactly as it appears and report it to" " your technical support representative."
SYS2BAD_BM_NAME	2-Critical	Invalid BM name	An illegal name string was registered with the BM	idb	"Copy the error message exactly as it appears and report it to" " your technical support representative."
SYS2BAD_BM_NAME	2-Critical	Invalid BM name	An illegal name string was registered with the BM	idb	"Copy the error message exactly as it appears and report it to" " your technical support representative."
SYS2BAD_BM_NAME	2-Critical	Invalid BM name	An illegal name string was registered with the BM	idb	"Copy the error message exactly as it appears and report it to" " your technical support representative."
SYS2BAD_BM_NAME	2-Critical	Invalid BM name	An illegal name string was registered with the BM	idb	"Copy the error message exactly as it appears and report it to" " your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS2BADALIGNMENT	2-Critical	Bad alignment : %u	System requests a alignment which is not a power of 2	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
SYS2BADALIGNMENT	2-Critical	Bad alignment : %u	System requests a alignment which is not a power of 2	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
SYS-2-BADBUFFER	2-Critical	Attempt to use [chars] buffer as [chars] ptr= [hec] pool= [hec]	A hardware or software error occurred. An inconsistency was encountered while processing a packet buffer.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information."
SYS-2-BADBUFFER	2-Critical	Attempt to use [chars] buffer as [chars] ptr= [hec] pool= [hec]	A hardware or software error occurred. An inconsistency was encountered while processing a packet buffer.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-BADBUFFER	2-Critical	Attempt to use [chars] buffer as [chars] ptr= [hec] pool= [hec]	A hardware or software error occurred. An inconsistency was encountered while processing a packet buffer.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information."
SYS-2-BADBUFFER	2-Critical	Attempt to use [chars] buffer as [chars] ptr= [hec] pool= [hec]	A hardware or software error occurred. An inconsistency was encountered while processing a packet buffer.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information."
SYS-2-BADBUFFER	2-Critical	Attempt to use [chars] buffer as [chars] ptr= [hec] pool= [hec]	A hardware or software error occurred. An inconsistency was encountered while processing a packet buffer.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-BADBUFFER	2-Critical	Attempt to use [chars] buffer as [chars] ptr= [hec] pool= [hec]	A hardware or software error occurred. An inconsistency was encountered while processing a packet buffer.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information."
SYS-2-BADBUFFER	2-Critical	Attempt to use [chars] buffer as [chars] ptr= [hec] pool= [hec]	A hardware or software error occurred. An inconsistency was encountered while processing a packet buffer.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-BADLIST	2-Critical	Regular expression access check with bad list [dec]	This message indicates that a pointer to an access list is invalid.	-	<p>"The event that caused this message to be issued should not " "have occurred. It can mean that one or more data structures " "have been overwritten. If this message recurs and you decide " "to report it to your technical representative you should " "copy the text of the message exactly as it appears and " "include the associated stack trace." "\n\n Since access list corruption may have occurred " "a technical representative should verify that access " "lists are functioning correctly."</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-BADLIST	2-Critical	Regular expression access check with bad list [dec]	This message indicates that a pointer to an access list is invalid.	-	<p>"The event that caused this message to be issued should not " "have occurred. It can mean that one or more data structures " "have been overwritten. If this message recurs and you decide " "to report it to your technical representative you should " "copy the text of the message exactly as it appears and " "include the associated stack trace." "\n\n Since access list corruption may have occurred " "a technical representative should verify that access " "lists are functioning corectly."</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-BADLIST	2-Critical	Regular expression access check with bad list [dec]	This message indicates that a pointer to an access list is invalid.	-	<p>"The event that caused this message to be issued should not " "have occurred. It can mean that one or more data structures " "have been overwritten. If this message recurs and you decide " "to report it to your technical representative you should " "copy the text of the message exactly as it appears and " "include the associated stack trace." "</p> <p>"\n\n Since access list corruption may have occurred " "a technical representative should verify that access " "lists are functioning correctly."</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-BADLIST	2-Critical	Regular expression access check with bad list [dec]	This message indicates that a pointer to an access list is invalid.	-	<p>"The event that caused this message to be issued should not " "have occurred. It can mean that one or more data structures " "have been overwritten. If this message recurs and you decide " "to report it to your technical representative you should " "copy the text of the message exactly as it appears and " "include the associated stack trace." "\n\n Since access list corruption may have occurred " "a technical representative should verify that access " "lists are functioning corectly."</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-BADLIST	2-Critical	Regular expression access check with bad list [dec]	This message indicates that a pointer to an access list is invalid.	-	<p>"The event that caused this message to be issued should not " "have occurred. It can mean that one or more data structures " "have been overwritten. If this message recurs and you decide " "to report it to your technical representative you should " "copy the text of the message exactly as it appears and " "include the associated stack trace." "\n\n Since access list corruption may have occurred " "a technical representative should verify that access " "lists are functioning correctly."</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-BADLIST	2-Critical	Regular expression access check with bad list [dec]	This message indicates that a pointer to an access list is invalid.	-	<p>"The event that caused this message to be issued should not " "have occurred. It can mean that one or more data structures " "have been overwritten. If this message recurs and you decide " "to report it to your technical representative you should " "copy the text of the message exactly as it appears and " "include the associated stack trace." "\n\n Since access list corruption may have occurred " "a technical representative should verify that access " "lists are functioning corectly."</p>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-BADLIST	2-Critical	Regular expression access check with bad list [dec]	This message indicates that a pointer to an access list is invalid.	-	"The event that caused this message to be issued should not " "have occurred. It can mean that one or more data structures " "have been overwritten. If this message recurs and you decide " "to report it to your technical representative you should " "copy the text of the message exactly as it appears and " "include the associated stack trace." "\n\n Since access list corruption may have occurred " "a technical representative should verify that access " "lists are functioning corectly."
SYS-2-BADPID	2-Critical	Bad pid [dec] for tty [t-line]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-BADPID	2-Critical	Bad pid [dec] for tty [t-line]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-BADPID	2-Critical	Bad pid [dec] for tty [t-line]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."

<b>Family-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-BADPID	2-Critical	Bad pid [dec] for tty [t-line]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-BADPID	2-Critical	Bad pid [dec] for tty [t-line]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-BADPID	2-Critical	Bad pid [dec] for tty [t-line]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-BADPID	2-Critical	Bad pid [dec] for tty [t-line]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-BADPOOL	2-Critical	Attempt to use buffer with corrupt pool pointer ptr= [hec] pool= [hec]	An memory management function attempted an operation that could not be performed due to invalid memory pool descriptors.	-	-
SYS-2-BADPOOL	2-Critical	Attempt to use buffer with corrupt pool pointer ptr= [hec] pool= [hec]	An memory management function attempted an operation that could not be performed due to invalid memory pool descriptors.	-	-



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-BADPOOL	2-Critical	Attempt to use buffer with corrupt pool pointer ptr= [hec] pool= [hec]	An memory management function attempted an operation that could not be performed due to invalid memory pool descriptors.	-	-
SYS-2-BADPOOL	2-Critical	Attempt to use buffer with corrupt pool pointer ptr= [hec] pool= [hec]	An memory management function attempted an operation that could not be performed due to invalid memory pool descriptors.	-	-
SYS-2-BADPOOL	2-Critical	Attempt to use buffer with corrupt pool pointer ptr= [hec] pool= [hec]	An memory management function attempted an operation that could not be performed due to invalid memory pool descriptors.	-	-
SYS-2-BADPOOL	2-Critical	Attempt to use buffer with corrupt pool pointer ptr= [hec] pool= [hec]	An memory management function attempted an operation that could not be performed due to invalid memory pool descriptors.	-	-
SYS-2-BADPOOL	2-Critical	Attempt to use buffer with corrupt pool pointer ptr= [hec] pool= [hec]	An memory management function attempted an operation that could not be performed due to invalid memory pool descriptors.	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS2BADPOOLMAGIC	2-Critical	Attempt to use pool pointer with corrupt header pool= [hec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS2BADPOOLMAGIC	2-Critical	Attempt to use pool pointer with corrupt header pool= [hec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS2BADPOOLMAGIC	2-Critical	Attempt to use pool pointer with corrupt header pool= [hec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS2BADPOOLMAGIC	2-Critical	Attempt to use pool pointer with corrupt header pool= [hec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS2BADPOOLMAGIC	2-Critical	Attempt to use pool pointer with corrupt header pool= [hec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS2BADPOOLMAGIC	2-Critical	Attempt to use pool pointer with corrupt header pool= [hec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS2BADPOOLMAGIC	2-Critical	Attempt to use pool pointer with corrupt header pool= [hec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS2BADPOOLMAGIC	2-Critical	Attempt to use pool pointer with corrupt header pool= [hec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-BADSHARE	2-Critical	Bad refcount in [chars] ptr=[hec] count=[hec]	A reference count is used to track the usage of many data structures. A function increments the count when it begins to use a structure and decrements it when it finishes. When the count becomes zero the data structure is freed. This message indicates that when the count was accessed it was found to be negative which means that the data structure will not be freed until the system is reloaded.	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-BADSHARE	2-Critical	Bad refcount in [chars] ptr=[hec] count=[hec]	A reference count is used to track the usage of many data structures. A function increments the count when it begins to use a structure and decrements it when it finishes. When the count becomes zero the data structure is freed. This message indicates that when the count was accessed it was found to be negative which means that the data structure will not be freed until the system is reloaded.	-	-
SYS-2-BADSHARE	2-Critical	Bad refcount in [chars] ptr=[hec] count=[hec]	A reference count is used to track the usage of many data structures. A function increments the count when it begins to use a structure and decrements it when it finishes. When the count becomes zero the data structure is freed. This message indicates that when the count was accessed it was found to be negative which means that the data structure will not be freed until the system is reloaded.	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-BADSHARE	2-Critical	Bad refcount in [chars] ptr=[hec] count=[hec]	A reference count is used to track the usage of many data structures. A function increments the count when it begins to use a structure and decrements it when it finishes. When the count becomes zero the data structure is freed. This message indicates that when the count was accessed it was found to be negative which means that the data structure will not be freed until the system is reloaded.	-	-
SYS-2-BADSHARE	2-Critical	Bad refcount in [chars] ptr=[hec] count=[hec]	A reference count is used to track the usage of many data structures. A function increments the count when it begins to use a structure and decrements it when it finishes. When the count becomes zero the data structure is freed. This message indicates that when the count was accessed it was found to be negative which means that the data structure will not be freed until the system is reloaded.	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-BADSHARE	2-Critical	Bad refcount in [chars] ptr=[hec] count=[hec]	A reference count is used to track the usage of many data structures. A function increments the count when it begins to use a structure and decrements it when it finishes. When the count becomes zero the data structure is freed. This message indicates that when the count was accessed it was found to be negative which means that the data structure will not be freed until the system is reloaded.	-	-
SYS-2-BADSHARE	2-Critical	Bad refcount in [chars] ptr=[hec] count=[hec]	A reference count is used to track the usage of many data structures. A function increments the count when it begins to use a structure and decrements it when it finishes. When the count becomes zero the data structure is freed. This message indicates that when the count was accessed it was found to be negative which means that the data structure will not be freed until the system is reloaded.	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-BADSTACK	2-Critical	Process [chars] has trashed stack old size [dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-BADSTACK	2-Critical	Process [chars] has trashed stack old size [dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-BADSTACK	2-Critical	Process [chars] has trashed stack old size [dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-BADSTACK	2-Critical	Process [chars] has trashed stack old size [dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-BADSTACK	2-Critical	Process [chars] has trashed stack old size [dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-BADSTACK	2-Critical	Process [chars] has trashed stack old size [dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-BADSTACK	2-Critical	Process [chars] has trashed stack old size [dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-BADSTACK	2-Critical	Process [chars] has trashed stack old size [dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-BLOCKHUNG	2-Critical	Task hung with blocking disabled value = 0x[hec].	The indicated process has exceeded the time limit for which it may relinquish control with blocking disabled.	[REDACTED]	"This message may be a result of high loads. If it recurs " "copy the text exactly as it appears and report it along " "with the associated stack trace to your technical support " "representative."
SYS-2-BLOCKHUNG	2-Critical	Task hung with blocking disabled value = 0x[hec].	The indicated process has exceeded the time limit for which it may relinquish control with blocking disabled.	[REDACTED]	"This message may be a result of high loads. If it recurs " "copy the text exactly as it appears and report it along " "with the associated stack trace to your technical support " "representative."
SYS-2-BLOCKHUNG	2-Critical	Task hung with blocking disabled value = 0x[hec].	The indicated process has exceeded the time limit for which it may relinquish control with blocking disabled.	[REDACTED]	"This message may be a result of high loads. If it recurs " "copy the text exactly as it appears and report it along " "with the associated stack trace to your technical support " "representative."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-BLOCKHUNG	2-Critical	Task hung with blocking disabled value = 0x[hec].	The indicated process has exceeded the time limit for which it may relinquish control with blocking disabled.	<del>File: [path], PID: [pid]</del>	"This message may be a result of high loads. If it recurs " "copy the text exactly as it appears and report it along " "with the associated stack trace to your technical support " "representative."
SYS-2-BLOCKHUNG	2-Critical	Task hung with blocking disabled value = 0x[hec].	The indicated process has exceeded the time limit for which it may relinquish control with blocking disabled.	<del>File: [path], PID: [pid]</del>	"This message may be a result of high loads. If it recurs " "copy the text exactly as it appears and report it along " "with the associated stack trace to your technical support " "representative."
SYS-2-BLOCKHUNG	2-Critical	Task hung with blocking disabled value = 0x[hec].	The indicated process has exceeded the time limit for which it may relinquish control with blocking disabled.	<del>File: [path], PID: [pid]</del>	"This message may be a result of high loads. If it recurs " "copy the text exactly as it appears and report it along " "with the associated stack trace to your technical support " "representative."
SYS-2-BLOCKHUNG	2-Critical	Task hung with blocking disabled value = 0x[hec].	The indicated process has exceeded the time limit for which it may relinquish control with blocking disabled.	<del>File: [path], PID: [pid]</del>	"This message may be a result of high loads. If it recurs " "copy the text exactly as it appears and report it along " "with the associated stack trace to your technical support " "representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-CCA_INT_ERR	2-Critical	CCA Detected Logic Error code = [dec]	CCA has detected a severe internal logic error. This condition is usually caused by one of the components using CCA or by the interaction among components using CCA.	os	LOG_STD_ACTION
SYS-2-CCA_INT_ERR	2-Critical	CCA Detected Logic Error code = [dec]	CCA has detected a severe internal logic error. This condition is usually caused by one of the components using CCA or by the interaction among components using CCA.	os	LOG_STD_ACTION
SYS-2-CCA_INT_ERR	2-Critical	CCA Detected Logic Error code = [dec]	CCA has detected a severe internal logic error. This condition is usually caused by one of the components using CCA or by the interaction among components using CCA.	os	LOG_STD_ACTION
SYS-2-CCA_INT_ERR	2-Critical	CCA Detected Logic Error code = [dec]	CCA has detected a severe internal logic error. This condition is usually caused by one of the components using CCA or by the interaction among components using CCA.	os	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-CCA_INT_ERR	2-Critical	CCA Detected Logic Error code = [dec]	CCA has detected a severe internal logic error. This condition is usually caused by one of the components using CCA or by the interaction among components using CCA.	os	LOG_STD_ACTION
SYS-2-CCA_INT_ERR	2-Critical	CCA Detected Logic Error code = [dec]	CCA has detected a severe internal logic error. This condition is usually caused by one of the components using CCA or by the interaction among components using CCA.	os	LOG_STD_ACTION
SYS-2-CCA_INT_ERR	2-Critical	CCA Detected Logic Error code = [dec]	CCA has detected a severe internal logic error. This condition is usually caused by one of the components using CCA or by the interaction among components using CCA.	os	LOG_STD_ACTION
SYS-2-CERF_ABORT	2-Critical	[chars]	This message is emitted when a cache error has occurred but an attempt to recover has been aborted	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-2-CERF_ABORT	2-Critical	[chars]	This message is emitted when a cache error has occurred but an attempt to recover has been aborted	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-CERF_ABORT	2-Critical	[chars]	This message is emitted when a cache error has occurred but an attempt to recover has been aborted	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-2-CERF_ABORT	2-Critical	[chars]	This message is emitted when a cache error has occurred but an attempt to recover has been aborted	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-2-CERF_ABORT	2-Critical	[chars]	This message is emitted when a cache error has occurred but an attempt to recover has been aborted	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-2-CERF_ABORT	2-Critical	[chars]	This message is emitted when a cache error has occurred but an attempt to recover has been aborted	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-2-CERF_ABORT	2-Critical	[chars]	This message is emitted when a cache error has occurred but an attempt to recover has been aborted	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS2CFORKBADFUNCT	2-Critical	Can't create process with start address = [hec]	An internal software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS2CFORKBADFUNCT	2-Critical	Can't create process with start address = [hec]	An internal software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS2CFORKBADFUNCT	2-Critical	Can't create process with start address = [hec]	An internal software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS2CFORKBADFUNCT	2-Critical	Can't create process with start address = [hec]	An internal software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS2CFORKBADFUNCT	2-Critical	Can't create process with start address = [hec]	An internal software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS2CFORKBADFUNCT	2-Critical	Can't create process with start address = [hec]	An internal software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS2CFORKBADFUNCT	2-Critical	Can't create process with start address = [hec]	An internal software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-2-CFORKLEV	2-Critical	Process creation of [chars] failed at level [dec].	An internal software error occurred.	<del>Device not present</del>	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-2-CFORKLEV	2-Critical	Process creation of [chars] failed at level [dec].	An internal software error occurred.	<del>Device not present</del>	"Copy the error message exactly as it appears and report it to your " "technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-CFORKLEV	2-Critical	Process creation of [chars] failed at level [dec].	An internal software error occurred.	<del>Device-Subsystem-Channel</del>	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-2-CFORKLEV	2-Critical	Process creation of [chars] failed at level [dec].	An internal software error occurred.	<del>Device-Subsystem-Channel</del>	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-2-CFORKLEV	2-Critical	Process creation of [chars] failed at level [dec].	An internal software error occurred.	<del>Device-Subsystem-Channel</del>	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-2-CFORKLEV	2-Critical	Process creation of [chars] failed at level [dec].	An internal software error occurred.	<del>Device-Subsystem-Channel</del>	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-2-CFORKLEV	2-Critical	Process creation of [chars] failed at level [dec].	An internal software error occurred.	<del>Device-Subsystem-Channel</del>	"Copy the error message exactly as it appears and report it to your " "technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-CFORKMEM	2-Critical	Process creation of [chars] failed no memory.	Insufficient memory was available to create a process either while trying to support additional features or due to a memory leak.	mem-suspect	"A memory leak may be the cause if the system has been running for a " "while without changing its configuration. If you suspect a leak then " "copy this message exactly as it appears and report it to your technical " "support representative. Otherwise ensure that more memory is available " "to support the additional features."
SYS-2-CFORKMEM	2-Critical	Process creation of [chars] failed no memory.	Insufficient memory was available to create a process either while trying to support additional features or due to a memory leak.	mem-suspect	"A memory leak may be the cause if the system has been running for a " "while without changing its configuration. If you suspect a leak then " "copy this message exactly as it appears and report it to your technical " "support representative. Otherwise ensure that more memory is available " "to support the additional features."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-CFORKMEM	2-Critical	Process creation of [chars] failed no memory.	Insufficient memory was available to create a process either while trying to support additional features or due to a memory leak.	mem-suspect	"A memory leak may be the cause if the system has been running for a " "while without changing its configuration. If you suspect a leak then " "copy this message exactly as it appears and report it to your technical " "support representative. Otherwise ensure that more memory is available " "to support the additional features."
SYS-2-CFORKMEM	2-Critical	Process creation of [chars] failed no memory.	Insufficient memory was available to create a process either while trying to support additional features or due to a memory leak.	mem-suspect	"A memory leak may be the cause if the system has been running for a " "while without changing its configuration. If you suspect a leak then " "copy this message exactly as it appears and report it to your technical " "support representative. Otherwise ensure that more memory is available " "to support the additional features."



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-CFORKMEM	2-Critical	Process creation of [chars] failed no memory.	Insufficient memory was available to create a process either while trying to support additional features or due to a memory leak.	mem-suspect	"A memory leak may be the cause if the system has been running for a " "while without changing its configuration. If you suspect a leak then " "copy this message exactly as it appears and report it to your technical " "support representative. Otherwise ensure that more memory is available " "to support the additional features."
SYS-2-CFORKMEM	2-Critical	Process creation of [chars] failed no memory.	Insufficient memory was available to create a process either while trying to support additional features or due to a memory leak.	mem-suspect	"A memory leak may be the cause if the system has been running for a " "while without changing its configuration. If you suspect a leak then " "copy this message exactly as it appears and report it to your technical " "support representative. Otherwise ensure that more memory is available " "to support the additional features."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-CFORKMEM	2-Critical	Process creation of [chars] failed no memory.	Insufficient memory was available to create a process either while trying to support additional features or due to a memory leak.	mem-suspect	"A memory leak may be the cause if the system has been running for a " "while without changing its configuration. If you suspect a leak then " "copy this message exactly as it appears and report it to your technical " "support representative. Otherwise ensure that more memory is available " "to support the additional features."
SYS-2-CHUNK_FAST	2-Critical	Chunk infra detected a system error. Error Type:[chars] Chunk[node]Flags:0x[hex] Name:[chars]	An internal error has occurred in chunk infra which forced a system crash. Contact cisco TAC with the exact error message and 'show tech-support' output.	mem	LOGSIDSHTTECHACTION
SYS-2-CHUNK_FAST	2-Critical	Chunk infra detected a system error. Error Type:[chars] Chunk[node]Flags:0x[hex] Name:[chars]	An internal error has occurred in chunk infra which forced a system crash. Contact cisco TAC with the exact error message and 'show tech-support' output.	mem	LOGSIDSHTTECHACTION
SYS-2-CHUNKBADLEISZE	2-Critical	Chunk element size is more than 64k for [chars]	Chunk manager cannot function properly with big chunk elements	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
SYS-2-CHUNKBADLEISZE	2-Critical	Chunk element size is more than 64k for [chars]	Chunk manager cannot function properly with big chunk elements	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS2CHUNKBADLESIZE	2-Critical	Chunk element size is more than 64k for [chars]	Chunk manager cannot function properly with big chunk elements	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
SYS2CHUNKBADLESIZE	2-Critical	Chunk element size is more than 64k for [chars]	Chunk manager cannot function properly with big chunk elements	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
SYS2CHUNKBADLESIZE	2-Critical	Chunk element size is more than 64k for [chars]	Chunk manager cannot function properly with big chunk elements	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
SYS2CHUNKBADLESIZE	2-Critical	Chunk element size is zero or more than 64k for [chars]size : [node]	Chunk manager cannot function properly with big chunk elements	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
SYS2CHUNKBADLESIZE	2-Critical	Chunk element size is zero or more than 64k for [chars]size : [node]	Chunk manager cannot function properly with big chunk elements	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SYSC</del> CHUNKBADREMACC	2-Critical	Bad free magic number in chunk header chunk [hec] data [hec] chunk_freemagic [hec]	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."
<del>SYSC</del> CHUNKBADREMACC	2-Critical	Bad free magic number in chunk header chunk [hec] data [hec] chunk_freemagic [hec]	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SSCHUNKBADREMACC	2-Critical	Bad free magic number in chunk header chunk [hec] data [hec] chunk_freemagic [hec]	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."
SSCHUNKBADREMACC	2-Critical	Bad free magic number in chunk header chunk [hec] data [hec] chunk_freemagic [hec]	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SYSC</del> CHUNKBADREMACC	2-Critical	Bad free magic number in chunk header chunk [hec] data [hec] chunk_freemagic [hec]	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."
<del>SYSC</del> CHUNKBADREMACC	2-Critical	Bad free magic number in chunk header chunk [hec] data [hec] chunk_freemagic [hec]	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS1CHUNKBADREMACC	2-Critical	Bad free magic number in chunk header chunk [hec] data [hec] chunk_freemagic [hec]	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."
SYS2CHUNKBADMAGIC	2-Critical	Bad magic number in chunk header chunk [hec] data [hec] chunkmagic [hec] chunk_freemagic [hec]	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS2CHUNKBADMAGIC	2-Critical	Bad magic number in chunk header chunk [hec] data [hec] chunkmagic [hec] chunk_freemagic [hec]	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."
SYS2CHUNKBADMAGIC	2-Critical	Bad magic number in chunk header chunk [hec] data [hec] chunkmagic [hec] chunk_freemagic [hec]	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS2CHUNKBADMAGIC	2-Critical	Bad magic number in chunk header chunk [hec] data [hec] chunkmagic [hec] chunk_freemagic [hec]	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."
SYS2CHUNKBADMAGIC	2-Critical	Bad magic number in chunk header chunk [hec] data [hec] chunkmagic [hec] chunk_freemagic [hec]	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS2CHUNKBADMAGIC	2-Critical	Bad magic number in chunk header chunk [hec] data [hec] chunkmagic [hec] chunk_freemagic [hec]	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."
SYS2CHUNKBADMAGIC	2-Critical	Bad magic number in chunk header chunk [hec] data [hec] chunkmagic [hec] chunk_freemagic [hec]	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."
SYS2CHUNKBADPOOLSIZE	2-Critical	Bad poolsize returned by the system : %u	System returns a non-optimal pool size. Need to change pool sizes	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SYSDCHUNKBADPOOLSZE</del>	2-Critical	Bad poolsize returned by the system : %u	System returns a non-optimal pool size. Need to change pool sizes	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
<del>SYSDCHUNKBADPOOLSZE</del>	2-Critical	Bad poolsize returned by the system : %u	System returns a non-optimal pool size. Need to change pool sizes	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
<del>SYSDCHUNKBADPOOLSZE</del>	2-Critical	Bad poolsize returned by the system : %u	System returns a non-optimal pool size. Need to change pool sizes	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
<del>SYSDCHUNKBADPOOLSZE</del>	2-Critical	Bad poolsize returned by the system : %u	System returns a non-optimal pool size. Need to change pool sizes	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
<del>SYSDCHUNKBADPOOLSZE</del>	2-Critical	Bad poolsize returned by the system : %u	System returns a non-optimal pool size. Need to change pool sizes	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
<del>SYSDCHUNKBADPOOLSZE</del>	2-Critical	Bad poolsize returned by the system : %u	System returns a non-optimal pool size. Need to change pool sizes	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYSCONKBADRECOUNT	2-Critical	Bad chunk reference count chunk [hec] data [hec] refcount [hec] alloc pc [hec].	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."
SYSCONKBADRECOUNT	2-Critical	Bad chunk reference count chunk [hec] data [hec] refcount [hec] alloc pc [hec].	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYSCONKBADREFCOUNT	2-Critical	Bad chunk reference count chunk [hec] data [hec] refcount [hec] alloc pc [hec].	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."
SYSCONKBADREFCOUNT	2-Critical	Bad chunk reference count chunk [hec] data [hec] refcount [hec] alloc pc [hec].	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYSCONKBADRECOUNT	2-Critical	Bad chunk reference count chunk [hec] data [hec] rfcoun [hec] alloc pc [hec].	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " " need to be reloaded manually."
SYSCONKBADRECOUNT	2-Critical	Bad chunk reference count chunk [hec] data [hec] rfcoun [hec] alloc pc [hec].	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " " need to be reloaded manually."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYSDCHKBADREFCOUNT	2-Critical	Bad chunk reference count chunk [hec] data [hec] refcount [hec] alloc pc [hec].	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SE</del> <del>HN</del> <del>BD</del> <del>CO</del> <del>CH</del> <del>NR</del>	2-Critical	Bad root chunk pointer in chunk header chunk 0x[hec] data 0x[hec] root chunk ptr 0x[hec]	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console or in " "the system log contact your Cisco technical support representative " "and provide the representative with the gathered information along " "with the ouput of the <CmdBold>show running-config</CmdBold> and " " <CmdBold>show tech-support</CmdBold> commands. " "Save any crashinfo or crashdump files. " "If the router has crashed and was not configured to reload " "automatically the router will need to be reloaded manually."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SSHND00CHUNKR	2-Critical	Bad root chunk pointer in chunk header chunk 0x[hec] data 0x[hec] root chunk ptr 0x[hec]	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console or in " "the system log contact your Cisco technical support representative " "and provide the representative with the gathered information along " "with the ouput of the <CmdBold>show running-config</CmdBold> and " " <CmdBold>show tech-support</CmdBold> commands. " "Save any crashinfo or crashdump files. " "If the router has crashed and was not configured to reload " "automatically the router will need to be reloaded manually."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS2-CHUNKBOUNDS	2-Critical	Could not find the sibling to allocate memory from. Chunk [chars] total free [dec] in use [dec].	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."
SYS2-CHUNKBOUNDS	2-Critical	Could not find the sibling to allocate memory from. Chunk [chars] total free [dec] in use [dec].	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS2CHUNKBOUNDS	2-Critical	Could not find the sibling to allocate memory from. Chunk [chars] total free [dec] inuse [dec].	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."
SYS2CHUNKBOUNDS	2-Critical	Could not find the sibling to allocate memory from. Chunk [chars] total free [dec] inuse [dec].	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS2-CHUNKBOUNDS	2-Critical	Could not find the sibling to allocate memory from. Chunk [chars] total free [dec] in use [dec].	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."
SYS2-CHUNKBOUNDS	2-Critical	Could not find the sibling to allocate memory from. Chunk [chars] total free [dec] in use [dec].	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS2CHUNKBOUNDS	2-Critical	Could not find the sibling to allocate memory from. Chunk [chars] total free [dec] inuse [dec].	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."
SYS2CHUNKBOUNDSB	2-Critical	Error noticed in the sibling of the chunk [chars] Chunk index : [dec] Chunk real max : [dec]	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS2CHUNKBOUNDSB	2-Critical	Error noticed in the sibling of the chunk [chars] Chunk index : [dec] Chunk real max : [dec]	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS2CHUNKBOUNDSB	2-Critical	Error noticed in the sibling of the chunk [chars] Chunk index : [dec] Chunk real max : [dec]	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS2CHUNKBOUNDSB	2-Critical	Error noticed in the sibling of the chunk [chars] Chunk index : [dec] Chunk real max : [dec]	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS2CHUNKBOUNDSB	2-Critical	Error noticed in the sibling of the chunk [chars] Chunk index : [dec] Chunk real max : [dec]	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS2CHUNKBOUNDSB	2-Critical	Error noticed in the sibling of the chunk 0x[hec] head_chunk 0x[hec] chunk name [chars] data 0x[hec] Chunk index : [dec] Chunk real max : [dec]	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS2CHUNKBOUNDSB	2-Critical	Error noticed in the sibling of the chunk 0x[hec] head_chunk 0x[hec] chunk name [chars] data 0x[hec] Chunk index : [dec] Chunk real max : [dec]	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS2CHUNKDELAYSIB	2-Critical	Error noticed in freeing up of delayed siblings for chunk [chars] 0x[hec]. Delayed sibling free queue size : [dec]	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
SYS2CHUNKDELAYSIB	2-Critical	Error noticed in freeing up of delayed siblings for chunk [chars] 0x[hec]. Delayed sibling free queue size : [dec]	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
SYS2CHUNKDOUBLEFREE	2-Critical	Attempt to free a free chunk element. Chunk : [node] Head Chunk : [node] Chunk Name : [chars] Data : [node] Alloc : [node] Dealloc : [node]	An attempt was made to free a chunk element which is already free.	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS2CHUNKDOUBLEFREE	2-Critical	Attempt to free a free chunk element. Chunk : [node] Head Chunk : [node] Chunk Name : [chars] Data : [node] Alloc : [node] Dealloc : [node]	An attempt was made to free a chunk element which is already free.	-	-
SYS2CHUNKEXPANDFAIL	2-Critical	Could not expand chunk pool for [chars]. No memory available	There is not enough processor memory left to grow this chunk pool.	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
SYS2CHUNKEXPANDFAIL	2-Critical	Could not expand chunk pool for [chars]. No memory available	There is not enough processor memory left to grow this chunk pool.	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
SYS2CHUNKEXPANDFAIL	2-Critical	Could not expand chunk pool for [chars]. No memory available	There is not enough processor memory left to grow this chunk pool.	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
SYS2CHUNKEXPANDFAIL	2-Critical	Could not expand chunk pool for [chars]. No memory available	There is not enough processor memory left to grow this chunk pool.	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
SYS2CHUNKEXPANDFAIL	2-Critical	Could not expand chunk pool for [chars]. No memory available	There is not enough processor memory left to grow this chunk pool.	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
SYS2CHUNKEXPANDFAIL	2-Critical	Could not expand chunk pool for [chars]. No memory available	There is not enough processor memory left to grow this chunk pool.	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
SYS2CHUNKEXPANDFAIL	2-Critical	Could not expand chunk pool for [chars]. No memory available	There is not enough processor memory left to grow this chunk pool.	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS2CHUNKEXPANFAIL	2-Critical	Could not expand chunk pool for [chars]. No memory available	There is not enough processor memory left to grow this chunk pool.	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
SYS-2-CHUNKFREE	2-Critical	Attempted to free nonchunk memory chunk [hec] data [hec].	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."
SYS-2-CHUNKFREE	2-Critical	Attempted to free nonchunk memory chunk [hec] data [hec].	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-CHUNKFREE	2-Critical	Attempted to free nonchunk memory chunk [hec] data [hec].	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."
SYS-2-CHUNKFREE	2-Critical	Attempted to free nonchunk memory chunk [hec] data [hec].	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-CHUNKFREE	2-Critical	Attempted to free nonchunk memory chunk [hec] data [hec].	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."
SYS-2-CHUNKFREE	2-Critical	Attempted to free nonchunk memory chunk [hec] data [hec].	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-CHUNKFREE	2-Critical	Attempted to free nonchunk memory chunk [hec] data [hec].	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."
SYS2CHUNKINCONSIS	2-Critical	Inconsistent counters for chunk : [chars] total free [dec]/[dec] total sibs [dec]/[dec] total alloc [dec]/[dec]	System returns a non-optimal pool size. Need to change pool sizes	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
SYS2CHUNKINCONSIS	2-Critical	Inconsistent counters for chunk : [chars] total free [dec]/[dec] total sibs [dec]/[dec] total alloc [dec]/[dec]	System returns a non-optimal pool size. Need to change pool sizes	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
SYS2CHUNKINCONSIS	2-Critical	Inconsistent counters for chunk : [chars] total free [dec]/[dec] total sibs [dec]/[dec] total alloc [dec]/[dec]	System returns a non-optimal pool size. Need to change pool sizes	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
SYS2CHUNKINCONSIS	2-Critical	Inconsistent counters for chunk : [chars] total free [dec]/[dec] total sibs [dec]/[dec] total alloc [dec]/[dec]	System returns a non-optimal pool size. Need to change pool sizes	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS2-CHUNKINCONSI	2-Critical	Inconsistent counters for chunk : [chars] total free [dec]/[dec] total sibs [dec]/[dec] total alloc [dec]/[dec]	System returns a non-optimal pool size. Need to change pool sizes	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
SYS2-CHUNKINCONSI	2-Critical	Inconsistent counters for chunk : [chars] total free [dec]/[dec] total sibs [dec]/[dec] total alloc [dec]/[dec]	System returns a non-optimal pool size. Need to change pool sizes	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
SYS2-CHUNKINCONSI	2-Critical	Inconsistent counters for chunk : [chars] total free [dec]/[dec] total sibs [dec]/[dec] total alloc [dec]/[dec]	System returns a non-optimal pool size. Need to change pool sizes	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
SYS2-CHUNKINVALIDHDR	2-Critical	Invalid chunk header type [dec] for chunk [hec] data [hec]	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS2CHUNKINVALIDHDR	2-Critical	Invalid chunk header type [dec] for chunk [hec] data [hec]	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."
SYS2CHUNKINVALIDHDR	2-Critical	Invalid chunk header type [dec] for chunk [hec] data [hec]	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS2CHUNKINVALIDHDR	2-Critical	Invalid chunk header type [dec] for chunk [hec] data [hec]	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."
SYS2CHUNKINVALIDHDR	2-Critical	Invalid chunk header type [dec] for chunk [hec] data [hec]	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS2CHUNKINVALIDHDR	2-Critical	Invalid chunk header type [dec] for chunk [hec] data [hec]	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."
SYS2CHUNKINVALIDHDR	2-Critical	Invalid chunk header type [dec] for chunk [hec] data [hec]	An inconsistency was detected while managing the chunk memory pool. The probability that this is a software error is close to 100 percent but there could be a hardware problem with memory.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."
SYS2CHUNKINVALIDOPR	2-Critical	[chars] Chunk : [node] Chunk Name : [chars] Flags : [node]	An operation intended for a type of chunk is used for a different type of chunk.	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS2CHUNKINVALIDOPR	2-Critical	[chars] Chunk : [node] Chunk Name : [chars] Flags : [node]	An operation intended for a type of chunk is used for a different type of chunk.	-	-
SYS2CHUNKNOMEMORY	2-Critical	* Could not allocate chunks for [chars]. No memory	* A software error occurred.	-	* "Copy the error message exactly as it appears and report it to " * "your technical support representative."
SYS2CHUNKNOMEMORY	2-Critical	* Could not allocate chunks for [chars]. No memory	* A software error occurred.	-	* "Copy the error message exactly as it appears and report it to " * "your technical support representative."
SYS2CHUNKNOMEMORY	2-Critical	* Could not allocate chunks for [chars]. No memory	* A software error occurred.	-	* "Copy the error message exactly as it appears and report it to " * "your technical support representative."
SYS2CHUNKNOMEMORY	2-Critical	* Could not allocate chunks for [chars]. No memory	* A software error occurred.	-	* "Copy the error message exactly as it appears and report it to " * "your technical support representative."
SYS2CHUNKNOMEMORY	2-Critical	* Could not allocate chunks for [chars]. No memory	* A software error occurred.	-	* "Copy the error message exactly as it appears and report it to " * "your technical support representative."
SYS2CHUNKNOMEMORY	2-Critical	* Could not allocate chunks for [chars]. No memory	* A software error occurred.	-	* "Copy the error message exactly as it appears and report it to " * "your technical support representative."
SYS2CHUNKNOMEMORY	2-Critical	* Could not allocate chunks for [chars]. No memory	* A software error occurred.	-	* "Copy the error message exactly as it appears and report it to " * "your technical support representative."



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS2CHUNKMEMORY	2-Critical	* Could not allocate chunks for [chars]. No memory	* A software error occurred.	-	* "Copy the error message exactly as it appears and report it to " * "your technical support representative."
SYS2CHUNKNOROOT	2-Critical	Root chunk need to be specified for [hec]	A software error occurred.	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
SYS2CHUNKNOROOT	2-Critical	Root chunk need to be specified for [hec]	A software error occurred.	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
SYS2CHUNKNOROOT	2-Critical	Root chunk need to be specified for [hec]	A software error occurred.	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
SYS2CHUNKNOROOT	2-Critical	Root chunk need to be specified for [hec]	A software error occurred.	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
SYS2CHUNKNOROOT	2-Critical	Root chunk need to be specified for [hec]	A software error occurred.	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
SYS2CHUNKNOROOT	2-Critical	Root chunk need to be specified for [hec]	A software error occurred.	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
SYS2CHUNKNOROOT	2-Critical	Root chunk need to be specified for [hec]	A software error occurred.	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS2-CHUNKNOROOT	2-Critical	Root chunk need to be specified for [hec]	A software error occurred.	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
SYS2-CHUNKPARTIAL	2-Critical	Attempted to destroy partially full chunk chunk [hec].	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS2-CHUNKPARTIAL	2-Critical	Attempted to destroy partially full chunk chunk [hec].	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS2-CHUNKPARTIAL	2-Critical	Attempted to destroy partially full chunk chunk 0x[hec] chunk name: \[chars]\.	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS2-CHUNKPARTIAL	2-Critical	Attempted to destroy partially full chunk chunk 0x[hec] chunk name: \[chars]\.	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS2-CHUNKPARTIAL	2-Critical	Attempted to destroy partially full chunk chunk 0x[hec] chunk name: \[chars]\.	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS2-CHUNKPARTIAL	2-Critical	Attempted to destroy partially full chunk chunk 0x[hec] chunk name: \[chars]\.	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS2-CHUNKPARTIAL	2-Critical	Attempted to destroy partially full chunk chunk 0x[hec] chunk name: \[chars].	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS2CHUNKSIBLINGDEST	2-Critical	Attempted to destroy a sibling chunk [hec] [chars].	-	-	-
SYS2CHUNKSIBLINGDEST	2-Critical	Attempted to destroy a sibling chunk [hec] [chars].	-	-	-
SYS2CHUNKSIBLINGDEST	2-Critical	Attempted to destroy a sibling chunk [hec] [chars].	-	-	-
SYS2CHUNKSIBLINGDEST	2-Critical	Attempted to destroy a sibling chunk [hec] [chars].	-	-	-
SYS2CHUNKSIBLINGDEST	2-Critical	Attempted to destroy a sibling chunk [hec] [chars].	-	-	-
SYS2CHUNKSIBLINGDEST	2-Critical	Attempted to destroy a sibling chunk [hec] [chars].	-	-	-
SYS2CHUNKSIBLINGDEST	2-Critical	Attempted to destroy a sibling chunk [hec] [chars].	-	-	-
SYS2CHUNKSIBLINGDEST	2-Critical	Attempted to destroy a sibling chunk [hec] [chars].	-	-	-
SYS2-CHUNKSIBLINGS	2-Critical	Attempted to destroy chunk with siblings chunk [hec].	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS2-CHUNKSIBLINGS	2-Critical	Attempted to destroy chunk with siblings chunk [hec].	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS2-CHUNKSIBLINGS	2-Critical	Attempted to destroy chunk with siblings chunk [hec].	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS2-CHUNKSIBLINGS	2-Critical	Attempted to destroy chunk with siblings chunk [hec].	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS2-CHUNKSIBLINGS	2-Critical	Attempted to destroy chunk with siblings chunk [hec].	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS2-CHUNKSIBLINGS	2-Critical	Attempted to destroy chunk with siblings chunk [hec].	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS2-CHUNKSIBLINGS	2-Critical	Attempted to destroy chunk with siblings chunk [hec].	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS2-CHUNKSIBLINGS	2-Critical	Attempted to destroy chunk with siblings chunk [hec].	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS2CONFIG_DOWNFAIL	2-Critical	Generated configuration not backward compatible	The router has been configured to generate nonvolatile memory using the commands of an older software version. The current configuration of the router contains a command that cannot be saved using only the older command set.	none	"Allow the router to save the configuration using the command set of " "the current software version or remove the commands that cannot be " "saved using the older command set."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS2CONFIG_DOWNFAL	2-Critical	Generated configuration not backward compatible	The router has been configured to generate nonvolatile memory using the commands of an older software version. The current configuration of the router contains a command that cannot be saved using only the older command set.	none	"Allow the router to save the configuration using the command set of " "the current software version or remove the commands that cannot be " "saved using the older command set."
SYS2CONFIG_DOWNFAL	2-Critical	Generated configuration not backward compatible	The router has been configured to generate nonvolatile memory using the commands of an older software version. The current configuration of the router contains a command that cannot be saved using only the older command set.	none	"Allow the router to save the configuration using the command set of " "the current software version or remove the commands that cannot be " "saved using the older command set."
SYS2CONFIG_DOWNFAL	2-Critical	Generated configuration not backward compatible	The router has been configured to generate nonvolatile memory using the commands of an older software version. The current configuration of the router contains a command that cannot be saved using only the older command set.	none	"Allow the router to save the configuration using the command set of " "the current software version or remove the commands that cannot be " "saved using the older command set."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS2CONFIG_DOWNFAIL	2-Critical	Generated configuration not backward compatible	The router has been configured to generate nonvolatile memory using the commands of an older software version. The current configuration of the router contains a command that cannot be saved using only the older command set.	none	"Allow the router to save the configuration using the command set of " "the current software version or remove the commands that cannot be " "saved using the older command set."
SYS2CONFIG_DOWNFAIL	2-Critical	Generated configuration not backward compatible	The router has been configured to generate nonvolatile memory using the commands of an older software version. The current configuration of the router contains a command that cannot be saved using only the older command set.	none	"Allow the router to save the configuration using the command set of " "the current software version or remove the commands that cannot be " "saved using the older command set."
SYS2CONFIG_DOWNFAIL	2-Critical	Generated configuration not backward compatible	The router has been configured to generate nonvolatile memory using the commands of an older software version. The current configuration of the router contains a command that cannot be saved using only the older command set.	none	"Allow the router to save the configuration using the command set of " "the current software version or remove the commands that cannot be " "saved using the older command set."
SYS-2-CZIP_ERROR	2-Critical	Error: [chars]	A software Error occurred while decompressing the Image. The actual error is within the string of the error message.	os	LOG_SIDSHTICTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-CZIP_ERROR	2-Critical	Error: [chars]	A software Error occurred while decompressing the Image. The actual error is within the string of the error message.	os	LOG_SIDSHTECHACTION
SYS2EXCEPTIONDUMP	2-Critical	System Crashed Writing Core....	The system has crashed because of an exception A core is being generated	-	LOG_STD_ACTION
SYS2EXCEPTIONDUMP	2-Critical	System Crashed Writing Core....	The system has crashed because of an exception A core is being generated	-	LOG_STD_ACTION
SYS2EXCEPTIONDUMP	2-Critical	System Crashed Writing Core....	The system has crashed because of an exception A core is being generated	-	LOG_STD_ACTION
SYS2EXCEPTIONDUMP	2-Critical	System Crashed Writing Core....	The system has crashed because of an exception A core is being generated	-	LOG_STD_ACTION
SYS2EXCEPTIONDUMP	2-Critical	System Crashed Writing Core....	The system has crashed because of an exception A core is being generated	-	LOG_STD_ACTION
SYS2EXCEPTIONDUMP	2-Critical	System Crashed Writing Core....	The system has crashed because of an exception A core is being generated	-	LOG_STD_ACTION
SYS2EXCEPTIONDUMP	2-Critical	System Crashed Writing Core....	The system has crashed because of an exception A core is being generated	-	LOG_STD_ACTION
SYS-2-EXMEMFREE	2-Critical	Free a non allocated ptr [hec] size [dec].	Trying to free a memory which not all of it marked as allocated.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-EXMEMFREE	2-Critical	Free a non allocated ptr [hec] size [dec].	Trying to free a memory which not all of it marked as allocated.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-2-EXMEMFREE	2-Critical	Free a non allocated ptr [hec] size [dec].	Trying to free a memory which not all of it marked as allocated.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-2-EXMEMFREE	2-Critical	Free a non allocated ptr [hec] size [dec].	Trying to free a memory which not all of it marked as allocated.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-2-EXMEMFREE	2-Critical	Free a non allocated ptr [hec] size [dec].	Trying to free a memory which not all of it marked as allocated.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-2-EXMEMFREE	2-Critical	Free a non allocated ptr [hec] size [dec].	Trying to free a memory which not all of it marked as allocated.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-2-EXMEMFREE	2-Critical	Free a non allocated ptr [hec] size [dec].	Trying to free a memory which not all of it marked as allocated.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-2-EXMEMINIT	2-Critical	EXMEM [dec]: [chars]	The requested external memory allocator failed to be initialized. reasons are not clear.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-EXMEMINIT	2-Critical	EXMEM [dec]: [chars]	The requested external memory allocator failed to be initialized. reasons are not clear.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-2-EXMEMINIT	2-Critical	EXMEM [dec]: [chars]	The requested external memory allocator failed to be initialized. reasons are not clear.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-2-EXMEMINIT	2-Critical	EXMEM [dec]: [chars]	The requested external memory allocator failed to be initialized. reasons are not clear.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-2-EXMEMINIT	2-Critical	EXMEM [dec]: [chars]	The requested external memory allocator failed to be initialized. reasons are not clear.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-2-EXMEMPARAM	2-Critical	Bad parameter [dec] when calling to the allocator utility	Illegal parameter is used when called to allocator. may represent data some corruption.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-2-EXMEMPARAM	2-Critical	Bad parameter [dec] when calling to the allocator utility	Illegal parameter is used when called to allocator. may represent data some corruption.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-2-EXMEMPARAM	2-Critical	Bad parameter [dec] when calling to the allocator utility	Illegal parameter is used when called to allocator. may represent data some corruption.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS2-EXMEMPARAM	2-Critical	Bad parameter [dec] when calling to the allocator utility	Illegal parameter is used when called to allocator. may represent data some corruption.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS2-EXMEMPARAM	2-Critical	Bad parameter [dec] when calling to the allocator utility	Illegal parameter is used when called to allocator. may represent data some corruption.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS2-EXMEMPARAM	2-Critical	Bad parameter [dec] when calling to the allocator utility	Illegal parameter is used when called to allocator. may represent data some corruption.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS2-EXMEMPARAM	2-Critical	Bad parameter [dec] when calling to the allocator utility	Illegal parameter is used when called to allocator. may represent data some corruption.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-2-FREEBAD	2-Critical	Attempted to free memory at [hec] not part of buffer pool	An attempt was made to free memory but the request could not be completed due to an invalid memory data structure	-	-
SYS-2-FREEBAD	2-Critical	Attempted to free memory at [hec] not part of buffer pool	An attempt was made to free memory but the request could not be completed due to an invalid memory data structure	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-FREEBAD	2-Critical	Attempted to free memory at [hec] not part of buffer pool	An attempt was made to free memory but the request could not be completed due to an invalid memory data structure	-	-
SYS-2-FREEBAD	2-Critical	Attempted to free memory at [hec] not part of buffer pool	An attempt was made to free memory but the request could not be completed due to an invalid memory data structure	-	-
SYS-2-FREEBAD	2-Critical	Attempted to free memory at [hec] not part of buffer pool	An attempt was made to free memory but the request could not be completed due to an invalid memory data structure	-	-
SYS-2-FREEBAD	2-Critical	Attempted to free memory at [hec] not part of buffer pool	An attempt was made to free memory but the request could not be completed due to an invalid memory data structure	-	-
SYS-2-FREEBAD	2-Critical	Attempted to free memory at [hec] not part of buffer pool	An attempt was made to free memory but the request could not be completed due to an invalid memory data structure	-	-
SYS-2-FREEFREE	2-Critical	Attempted to free unassigned memory at [node] alloc [node] dealloc [node]	An attempt was made to free memory at the indicated location. The memory could not be freed because it was not allocated.	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-FREEFREE	2-Critical	Attempted to free unassigned memory at [node] alloc [node] dealloc [node]	An attempt was made to free memory at the indicated location. The memory could not be freed because it was not allocated.	-	-
SYS-2-FREEFREE	2-Critical	Attempted to free unassigned memory at [node] alloc [node] dealloc [node]	An attempt was made to free memory at the indicated location. The memory could not be freed because it was not allocated.	-	-
SYS-2-FREEFREE	2-Critical	Attempted to free unassigned memory at [node] alloc [node] dealloc [node]	An attempt was made to free memory at the indicated location. The memory could not be freed because it was not allocated.	-	-
SYS-2-FREEFREE	2-Critical	Attempted to free unassigned memory at [node] alloc [node] dealloc [node]	An attempt was made to free memory at the indicated location. The memory could not be freed because it was not allocated.	-	-
SYS-2-FREEFREE	2-Critical	Attempted to free unassigned memory at [node] alloc [node] dealloc [node]	An attempt was made to free memory at the indicated location. The memory could not be freed because it was not allocated.	-	-
SYS-2-FREEFREE	2-Critical	Attempted to free unassigned memory at [node] alloc [node] dealloc [node]	An attempt was made to free memory at the indicated location. The memory could not be freed because it was not allocated.	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-GETBUF	2-Critical	Bad getbuffer bytes=[dec]	The software requested a buffer that is larger than the largest configured buffer size or it requested a negative-sized buffer.	XXXXXXXXXXXXXXXXXXXX	-
SYS-2-GETBUF	2-Critical	Bad getbuffer bytes=[dec]	The software requested a buffer that is larger than the largest configured buffer size or it requested a negative-sized buffer.	XXXXXXXXXXXXXXXXXXXX	-
SYS-2-GETBUF	2-Critical	Bad getbuffer bytes=[dec]	The software requested a buffer that is larger than the largest configured buffer size or it requested a negative-sized buffer.	XXXXXXXXXXXXXXXXXXXX	-
SYS-2-GETBUF	2-Critical	Bad getbuffer bytes=[dec]	The software requested a buffer that is larger than the largest configured buffer size or it requested a negative-sized buffer.	XXXXXXXXXXXXXXXXXXXX	-
SYS-2-GETBUF	2-Critical	Bad getbuffer bytes=[dec]	The software requested a buffer that is larger than the largest configured buffer size or it requested a negative-sized buffer.	XXXXXXXXXXXXXXXXXXXX	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-GETBUF	2-Critical	Bad getbuffer bytes= [dec]	The software requested a buffer that is larger than the largest configured buffer size or it requested a negative-sized buffer.	<del>XXXXXXXXXXXXXXXXXXXX</del>	-
SYS-2-GETBUF	2-Critical	Bad getbuffer bytes= [dec]	The software requested a buffer that is larger than the largest configured buffer size or it requested a negative-sized buffer.	<del>XXXXXXXXXXXXXXXXXXXX</del>	-
SYS-2-GETBUFFFAIL	2-Critical	[chars] buffer allocation [dec] bytes failed from [hex]	-	-	-
SYS-2-GETBUFFFAIL	2-Critical	[chars] buffer allocation [dec] bytes failed from [hex]	-	-	-
SYS-2-GETBUFFFAIL	2-Critical	[chars] buffer allocation [dec] bytes failed from [hex]	-	-	-
SYS-2-GETBUFFFAIL	2-Critical	[chars] buffer allocation [dec] bytes failed from [hex]	-	-	-
SYS-2-GETBUFFFAIL	2-Critical	[chars] buffer allocation [dec] bytes failed from [hex]	-	-	-
SYS-2-GETBUFFFAIL	2-Critical	[chars] buffer allocation [dec] bytes failed from [hex]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-GETBUFFFAIL	2-Critical	[chars] buffer allocation [dec] bytes failed from [hex]	-	-	-
SYS-2-IMMORTAL	2-Critical	Attempt to shut down management process [dec] [chars].	An attempt was made to shut down the specified management process. Management processes must not be shut down as long as the\n router remains up.	<del>File: [dec] [chars] [dec] [chars]</del>	-
SYS-2-IMMORTAL	2-Critical	Attempt to shut down management process [dec] [chars].	An attempt was made to shut down the specified management process. Management processes must not be shut down as long as the\n router remains up.	<del>File: [dec] [chars] [dec] [chars]</del>	-
SYS-2-IMMORTAL	2-Critical	Attempt to shut down management process [dec] [chars].	An attempt was made to shut down the specified management process. Management processes must not be shut down as long as the\n router remains up.	<del>File: [dec] [chars] [dec] [chars]</del>	-
SYS-2-IMMORTAL	2-Critical	Attempt to shut down management process [dec] [chars].	An attempt was made to shut down the specified management process. Management processes must not be shut down as long as the\n router remains up.	<del>File: [dec] [chars] [dec] [chars]</del>	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-IMMORTAL	2-Critical	Attempt to shut down management process [dec] [chars].	An attempt was made to shut down the specified management process. Management processes must not be shut down as long as the\n\n router remains up.	<del>Internal Security</del> -	
SYS-2-IMMORTAL	2-Critical	Attempt to shut down management process [dec] [chars].	An attempt was made to shut down the specified management\n\n process. Management processes must not be shut down as long as the\n\n router remains up.	<del>Internal Security</del> -	
SYS-2-IMMORTAL	2-Critical	Attempt to shut down management process [dec] [chars].	An attempt was made to shut down the specified management\n\n process. Management processes must not be shut down as long as the\n\n router remains up.	<del>Internal Security</del> -	
SYS-2-INLIST	2-Critical	Buffer in list ptr=[hec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-INLIST	2-Critical	Buffer in list ptr=[hec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-INLIST	2-Critical	Buffer in list ptr= [hec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-INLIST	2-Critical	Buffer in list ptr= [hec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-INLIST	2-Critical	Buffer in list ptr= [hec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-INLIST	2-Critical	Buffer in list ptr= [hec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-INLIST	2-Critical	Buffer in list ptr= [hec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-INLIST1	2-Critical	Buffer in list ptr= [hec] caller= [hec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-INLIST1	2-Critical	Buffer in list ptr= [hec] caller= [hec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-INLIST1	2-Critical	Buffer in list ptr= [hec] caller= [hec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-INLIST1	2-Critical	Buffer in list ptr= [hec] caller= [hec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-INLIST1	2-Critical	Buffer in list ptr= [hec] caller= [hec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-INLIST1	2-Critical	Buffer in list ptr= [hec] caller= [hec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-INLIST1	2-Critical	Buffer in list ptr= [hec] caller= [hec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-INPUT_GETBUF	2-Critical	Bad getbuffer bytes=[dec] for interface=[chars]	The software requested a buffer that is larger than the largest configured buffer size or it requested a negative-sized buffer.	IBM-4142-2-IBM-5611-105-0-0	LOG_STD_ACTION
SYS-2-INPUT_GETBUF	2-Critical	Bad getbuffer bytes=[dec] for interface=[chars]	The software requested a buffer that is larger than the largest configured buffer size or it requested a negative-sized buffer.	IBM-4142-2-IBM-5611-105-0-0	LOG_STD_ACTION
SYS-2-INPUT_GETBUF	2-Critical	Bad getbuffer bytes=[dec] for interface=[chars]	The software requested a buffer that is larger than the largest configured buffer size or it requested a negative-sized buffer.	IBM-4142-2-IBM-5611-105-0-0	LOG_STD_ACTION
SYS-2-INPUT_GETBUF	2-Critical	Bad getbuffer bytes=[dec] for interface=[chars]	The software requested a buffer that is larger than the largest configured buffer size or it requested a negative-sized buffer.	IBM-4142-2-IBM-5611-105-0-0	LOG_STD_ACTION
SYS-2-INPUT_GETBUF	2-Critical	Bad getbuffer bytes=[dec] for interface=[chars]	The software requested a buffer that is larger than the largest configured buffer size or it requested a negative-sized buffer.	IBM-4142-2-IBM-5611-105-0-0	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-INPUTQ	2-Critical	INPUTQ set but no IDB ptr=[hec]	This message is issued when an attempt is made to alter the input queue count for a packet that should not be counted.	-	-
SYS-2-INPUTQ	2-Critical	INPUTQ set but no IDB ptr=[hec]	This message is issued when an attempt is made to alter the input queue count for a packet that should not be counted.	-	-
SYS-2-INPUTQ	2-Critical	INPUTQ set but no IDB ptr=[hec]	This message is issued when an attempt is made to alter the input queue count for a packet that should not be counted.	-	-
SYS-2-INSCHED	2-Critical	[chars] within scheduler	-	<del>XXXXXXXXXXXXXXXXXXXX</del>	-
SYS-2-INSCHED	2-Critical	[chars] within scheduler	-	<del>XXXXXXXXXXXXXXXXXXXX</del>	-
SYS-2-INSCHED	2-Critical	[chars] within scheduler	-	<del>XXXXXXXXXXXXXXXXXXXX</del>	-
SYS-2-INSCHED	2-Critical	[chars] within scheduler	-	<del>XXXXXXXXXXXXXXXXXXXX</del>	-
SYS-2-INSCHED	2-Critical	[chars] within scheduler	-	<del>XXXXXXXXXXXXXXXXXXXX</del>	-
SYS-2-INSCHED	2-Critical	[chars] within scheduler	-	<del>XXXXXXXXXXXXXXXXXXXX</del>	-
SYS-2-INSCHED	2-Critical	[chars] within scheduler	-	<del>XXXXXXXXXXXXXXXXXXXX</del>	-
SYS-2-INTSCHED	2-Critical	'[chars]' at level [dec] [chars]	The scheduler was entered from an interrupt service routine ISR.	<del>XXXXXXXXXXXXXXXXXXXX</del>	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-INTSCHED	2-Critical	'[chars]' at level [dec] [chars]	The scheduler was entered from an interrupt service routine ISR.	<del>XXXXXXXXXXXXXXXXXXXX</del>	-
SYS-2-INTSCHED	2-Critical	'[chars]' at level [dec]	The scheduler was entered from an interrupt service routine ISR.	<del>XXXXXXXXXXXXXXXXXXXX</del>	-
SYS-2-INTSCHED	2-Critical	'[chars]' at level [dec]	The scheduler was entered from an interrupt service routine ISR.	<del>XXXXXXXXXXXXXXXXXXXX</del>	-
SYS-2-INTSCHED	2-Critical	'[chars]' at level [dec]	The scheduler was entered from an interrupt service routine ISR.	<del>XXXXXXXXXXXXXXXXXXXX</del>	-
SYS-2-INTSCHED	2-Critical	'[chars]' at level [dec]	The scheduler was entered from an interrupt service routine ISR.	<del>XXXXXXXXXXXXXXXXXXXX</del>	-
SYS-2-INTSCHED	2-Critical	'[chars]' at level [dec]	The scheduler was entered from an interrupt service routine ISR.	<del>XXXXXXXXXXXXXXXXXXXX</del>	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SSN <del>ALD</del> EAURE <del>INDEX</del>	2-Critical	Feature index [dec] is not within the defined feature array boundary.	An inconsistency was detected while looking up for feature index. It is software error because of wrong enumeration of feature index.	none	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."
SSN <del>ALD</del> EAURE <del>INDEX</del>	2-Critical	Feature index [dec] is not within the defined feature array boundary.	An inconsistency was detected while looking up for feature index. It is software error because of wrong enumeration of feature index.	none	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS2-LINEPROCDEAD	2-Critical	Killing process [chars] associated with line [dec]	A process associated with a tty line was killed by another process. The line may go dead	exec	"If this messages recurs copy it exactly as it appears " "and report it to your technical support representative."
SYS2-LINEPROCDEAD	2-Critical	Killing process [chars] associated with line [dec]	A process associated with a tty line was killed by another process. The line may go dead	exec	"If this messages recurs copy it exactly as it appears " "and report it to your technical support representative."
SYS2-LINEPROCDEAD	2-Critical	Killing process [chars] associated with line [dec]	A process associated with a tty line was killed by another process. The line may go dead	exec	"If this messages recurs copy it exactly as it appears " "and report it to your technical support representative."
SYS2-LINEPROCDEAD	2-Critical	Killing process [chars] associated with line [dec]	A process associated with a tty line was killed by another process. The line may go dead	exec	"If this messages recurs copy it exactly as it appears " "and report it to your technical support representative."
SYS2-LINEPROCDEAD	2-Critical	Killing process [chars] associated with line [dec]	A process associated with a tty line was killed by another process. The line may go dead	exec	"If this messages recurs copy it exactly as it appears " "and report it to your technical support representative."
SYS2-LINEPROCDEAD	2-Critical	Killing process [chars] associated with line [dec]	A process associated with a tty line was killed by another process. The line may go dead	exec	"If this messages recurs copy it exactly as it appears " "and report it to your technical support representative."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-LINEPROCDEAD	2-Critical	Killing process [chars] associated with line [dec]	A process associated with a tty line was killed by another process. The line may go dead	exec	"If this messages recurs copy it exactly as it appears " "and report it to your technical support representative."
SYS-2-LINKED	2-Critical	Bad [chars] of [hec] in queue [hec]	An internal software error occurred.	<del>File [chars] of [hec] in queue [hec]</del>	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-LINKED	2-Critical	Bad [chars] of [hec] in queue [hec]	An internal software error occurred.	<del>File [chars] of [hec] in queue [hec]</del>	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-LINKED	2-Critical	Bad [chars] of [hec] in queue [hec]	An internal software error occurred.	<del>File [chars] of [hec] in queue [hec]</del>	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-LINKED	2-Critical	Bad [chars] of [hec] in queue [hec]	An internal software error occurred.	<del>File [chars] of [hec] in queue [hec]</del>	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-LINKED	2-Critical	Bad [chars] of [hec] in queue [hec]	An internal software error occurred.	<del>File [chars] of [hec] in queue [hec]</del>	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."

Family-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-LINKED	2-Critical	Bad [chars] of [hec] in queue [hec]	An internal software error occurred.	<del>IP-01123-1-55-4-5D5-1</del>	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-LINKED	2-Critical	Bad [chars] of [hec] in queue [hec]	An internal software error occurred.	<del>IP-01123-1-55-4-5D5-1</del>	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-LOWMEMIO	2-Critical	Low-memory debug exception limit=[node]free=%u	The router is configured to crash when total available IO memory drops below a specified threshold. That threshold has been reached. This may have occurred due to a memory leak or from supporting additional features.	mem	"If you suspect a memory leak " "copy the message exactly as it appears and " "report it to your technical support representative. " "Otherwise you may need to add memory " "or reduce the number of features you are trying to " "support."
SYS-2-LOWMEMIO	2-Critical	Low-memory debug exception limit=[node]free=%u	The router is configured to crash when total available IO memory drops below a specified threshold. That threshold has been reached. This may have occurred due to a memory leak or from supporting additional features.	mem	"If you suspect a memory leak " "copy the message exactly as it appears and " "report it to your technical support representative. " "Otherwise you may need to add memory " "or reduce the number of features you are trying to " "support."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-LOWMEMIO	2-Critical	Low-memory debug exception limit=[node]free=%u	The router is configured to crash when total available IO memory drops below a specified threshold. That threshold has been reached. This may have occurred due to a memory leak or from supporting additional features.	mem	"If you suspect a memory leak " "copy the message exactly as it appears and " "report it to your technical support representative. " "Otherwise you may need to add memory " "or reduce the number of features you are trying to " "support."
SYS-2-LOWMEMIO	2-Critical	Low-memory debug exception limit=[node]free=%u	The router is configured to crash when total available IO memory drops below a specified threshold. That threshold has been reached. This may have occurred due to a memory leak or from supporting additional features.	mem	"If you suspect a memory leak " "copy the message exactly as it appears and " "report it to your technical support representative. " "Otherwise you may need to add memory " "or reduce the number of features you are trying to " "support."
SYS-2-LOWMEMIO	2-Critical	Low-memory debug exception limit=[node]free=%u	The router is configured to crash when total available IO memory drops below a specified threshold. That threshold has been reached. This may have occurred due to a memory leak or from supporting additional features.	mem	"If you suspect a memory leak " "copy the message exactly as it appears and " "report it to your technical support representative. " "Otherwise you may need to add memory " "or reduce the number of features you are trying to " "support."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-LOWMEMIO	2-Critical	Low-memory debug exception limit=[node]free=%u	The router is configured to crash when total available IO memory drops below a specified threshold. That threshold has been reached. This may have occurred due to a memory leak or from supporting additional features.	mem	"If you suspect a memory leak " "copy the message exactly as it appears and " "report it to your technical support representative. " "Otherwise you may need to add memory " "or reduce the number of features you are trying to " "support."
SYS-2-LOWMEMIO	2-Critical	Low-memory debug exception limit=[node]free=%u	The router is configured to crash when total available IO memory drops below a specified threshold. That threshold has been reached. This may have occurred due to a memory leak or from supporting additional features.	mem	"If you suspect a memory leak " "copy the message exactly as it appears and " "report it to your technical support representative. " "Otherwise you may need to add memory " "or reduce the number of features you are trying to " "support."
SYS-2-LOWMEMPROC	2-Critical	Low-memory debug exception limit=[node]free=%u	The router is configured to crash when total available processor memory drops below a specified threshold. That threshold has been reached. This may have occurred due to a memory leak or from supporting additional features.	mem	"If you suspect a memory leak copy the message exactly as it appears and " "report it to your technical support representative. Otherwise you may " "need to add memory or reduce the number of features you are trying to " "support."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS2-LOWMEMPROC	2-Critical	Low-memory debug exception limit=[node]free=%u	The router is configured to crash when total available processor memory drops below a specified threshold. That threshold has been reached. This may have occurred due to a memory leak or from supporting additional features.	mem	"If you suspect a memory leak copy the message exactly as it appears and " "report it to your technical support representative. Otherwise you may " "need to add memory or reduce the number of features you are trying to " "support."
SYS2-LOWMEMPROC	2-Critical	Low-memory debug exception limit=[node]free=%u	The router is configured to crash when total available processor memory drops below a specified threshold. That threshold has been reached. This may have occurred due to a memory leak or from supporting additional features.	mem	"If you suspect a memory leak copy the message exactly as it appears and " "report it to your technical support representative. Otherwise you may " "need to add memory or reduce the number of features you are trying to " "support."
SYS2-LOWMEMPROC	2-Critical	Low-memory debug exception limit=[node]free=%u	The router is configured to crash when total available processor memory drops below a specified threshold. That threshold has been reached. This may have occurred due to a memory leak or from supporting additional features.	mem	"If you suspect a memory leak copy the message exactly as it appears and " "report it to your technical support representative. Otherwise you may " "need to add memory or reduce the number of features you are trying to " "support."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-LOWMEMPROC	2-Critical	Low-memory debug exception limit=[node]free=%u	The router is configured to crash when total available processor memory drops below a specified threshold. That threshold has been reached. This may have occurred due to a memory leak or from supporting additional features.	mem	"If you suspect a memory leak copy the message exactly as it appears and " "report it to your technical support representative. Otherwise you may " "need to add memory or reduce the number of features you are trying to " "support."
SYS-2-LOWMEMPROC	2-Critical	Low-memory debug exception limit=[node]free=%u	The router is configured to crash when total available processor memory drops below a specified threshold. That threshold has been reached. This may have occurred due to a memory leak or from supporting additional features.	mem	"If you suspect a memory leak copy the message exactly as it appears and " "report it to your technical support representative. Otherwise you may " "need to add memory or reduce the number of features you are trying to " "support."
SYS-2-LOWMEMPROC	2-Critical	Low-memory debug exception limit=[node]free=%u	The router is configured to crash when total available processor memory drops below a specified threshold. That threshold has been reached. This may have occurred due to a memory leak or from supporting additional features.	mem	"If you suspect a memory leak copy the message exactly as it appears and " "report it to your technical support representative. Otherwise you may " "need to add memory or reduce the number of features you are trying to " "support."
SYS-2-MADVISEFAIL	2-Critical	Madvise failed memory at [hec].	An attempt was made to create secure mempool but it failed.	os	"This is a notification message only. No action is required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-MADVISEFAIL	2-Critical	Madvise failed memory at [hec].	An attempt was made to create secure mempool but it failed.	os	"This is a notification message only. No action is required."
SYS-2-MALLOCFAIL	2-Critical	Memory allocation of [node]bytes failed from [hex] alignment [dec] \n Pool: [chars] Free: [node]Cause: [chars] \nAlternate Pool: [chars] Free: [node] Cause: [chars] \n	The requested memory allocation is not available from the specified memory pool. The current system configuration network environment or possibly a software error may have exhausted or fragmented the router's memory.	mem-suspect	"If you suspect a software error copy the error message exactly as it " "appears on the console or in the system log contact your technical support" "representativeand provide the representative with the gathered information. " "Otherwise you may need to add more memory or reduce the number of " "features you are trying to support."
SYS-2-MALLOCFAIL	2-Critical	Memory allocation of [node]bytes failed from [hex] alignment [dec] \n Pool: [chars] Free: [node]Cause: [chars] \nAlternate Pool: [chars] Free: [node] Cause: [chars] \n	The requested memory allocation is not available from the specified memory pool. The current system configuration network environment or possibly a software error may have exhausted or fragmented the router's memory.	mem-suspect	"If you suspect a software error copy the error message exactly as it " "appears on the console or in the system log contact your technical support" "representativeand provide the representative with the gathered information. " "Otherwise you may need to add more memory or reduce the number of " "features you are trying to support."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-MALLOCFAIL	2-Critical	Memory allocation of [node]bytes failed from [hex] alignment [dec] \n Pool: [chars] Free: [node]Cause: [chars] \nAlternate Pool: [chars] Free: [node] Cause: [chars] \n	The requested memory allocation is not available from the specified memory pool. The current system configuration network environment or possibly a software error may have exhausted or fragmented the router's memory.	mem-suspect	"If you suspect a software error copy the error message exactly as it " "appears on the colsole or in the system log contact your technical support" "representativeand provide the representative with the gathered information. " "Otherwise you may need to add more memory or reduce the number of " "features you are trying to support."
SYS-2-MALLOCFAIL	2-Critical	Memory allocation of [node]bytes failed from [hex] alignment [dec] \n Pool: [chars] Free: [node]Cause: [chars] \nAlternate Pool: [chars] Free: [node] Cause: [chars] \n	The requested memory allocation is not available from the specified memory pool. The current system configuration network environment or possibly a software error may have exhausted or fragmented the router's memory.	mem-suspect	"If you suspect a software error copy the error message exactly as it " "appears on the colsole or in the system log contact your technical support" "representativeand provide the representative with the gathered information. " "Otherwise you may need to add more memory or reduce the number of " "features you are trying to support."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-MALLOCFAIL	2-Critical	Memory allocation of [node]bytes failed from [hex] alignment [dec] \n Pool: [chars] Free: [node]Cause: [chars] \nAlternate Pool: [chars] Free: [node] Cause: [chars] \n	The requested memory allocation is not available from the specified memory pool. The current system configuration network environment or possibly a software error may have exhausted or fragmented the router's memory.	mem-suspect	"If you suspect a software error copy the error message exactly as it " "appears on the colsole or in the system log contact your technical support" "representativeand provide the representative with the gathered information. " "Otherwise you may need to add more memory or reduce the number of " "features you are trying to support."
SYS-2-MALLOCFAIL	2-Critical	Memory allocation of [node]bytes failed from [hex] alignment [dec] \n Pool: [chars] Free: [node]Cause: [chars] \nAlternate Pool: [chars] Free: [node] Cause: [chars] \n	The requested memory allocation is not available from the specified memory pool. The current system configuration network environment or possibly a software error may have exhausted or fragmented the router's memory.	mem-suspect	"If you suspect a software error copy the error message exactly as it " "appears on the colsole or in the system log contact your technical support" "representativeand provide the representative with the gathered information. " "Otherwise you may need to add more memory or reduce the number of " "features you are trying to support."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-MALLOCFAIL	2-Critical	Memory allocation of [node]bytes failed from [hex] alignment [dec] \n Pool: [chars] Free: [node]Cause: [chars] \nAlternate Pool: [chars] Free: [node] Cause: [chars] \n	The requested memory allocation is not available from the specified memory pool. The current system configuration network environment or possibly a software error may have exhausted or fragmented the router's memory.	mem-suspect	"If you suspect a software error copy the error message exactly as it " "appears on the colsole or in the system log contact your technical support" "representativeand provide the representative with the gathered information. " "Otherwise you may need to add more memory or reduce the number of " "features you are trying to support."
<del>SYS-MAXDBMEXCEED</del>	2-Critical	BM bit allocation limit exceeded	The BM has exhausted all of the bits available for allocation	idb	"Copy the error message exactly as it appears and report it to" " your technical support representative."
<del>SYS-MAXDBMEXCEED</del>	2-Critical	BM bit allocation limit exceeded	The BM has exhausted all of the bits available for allocation	idb	"Copy the error message exactly as it appears and report it to" " your technical support representative."
<del>SYS-MAXDBMEXCEED</del>	2-Critical	BM bit allocation limit exceeded	The BM has exhausted all of the bits available for allocation	idb	"Copy the error message exactly as it appears and report it to" " your technical support representative."
<del>SYS-MAXDBMEXCEED</del>	2-Critical	BM bit allocation limit exceeded	The BM has exhausted all of the bits available for allocation	idb	"Copy the error message exactly as it appears and report it to" " your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SSMAXIDBEMEXCHDD</del>	2-Critical	BM bit allocation limit exceeded	The BM has exhausted all of the bits available for allocation	idb	"Copy the error message exactly as it appears and report it to" " your technical support representative."
<del>SSMAXIDBEMEXCHDD</del>	2-Critical	BM bit allocation limit exceeded	The BM has exhausted all of the bits available for allocation	idb	"Copy the error message exactly as it appears and report it to" " your technical support representative."
<del>SSMAXIDBEMEXCHDD</del>	2-Critical	BM bit allocation limit exceeded	The BM has exhausted all of the bits available for allocation	idb	"Copy the error message exactly as it appears and report it to" " your technical support representative."
SYS-2-MMAP	2-Critical	mmap failed for size [dec] bytes Caller PC 0x[hec] errno [dec]	Failed to allocate memory for the requested size. The memory could not be mapped because there is no memory.	-	-
SYS-2-MMAP	2-Critical	mmap failed for size [dec] bytes Caller PC 0x[hec] errno [dec]	Failed to allocate memory for the requested size. The memory could not be mapped because there is no memory.	-	-
SYS-2-MMAP	2-Critical	mmap failed for size [dec] bytes Caller PC 0x[hec] errno [dec]	Failed to allocate memory for the requested size. The memory could not be mapped because there is no memory.	-	-
SYS-2-MMAP	2-Critical	mmap failed for size [dec] bytes Caller PC 0x[hec] errno [dec]	Failed to allocate memory for the requested size. The memory could not be mapped because there is no memory.	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-MMAP	2-Critical	mmap failed for size [dec] bytes Caller PC 0x[hec] errno [dec]	Failed to allocate memory for the requested size. The memory could not be mapped because there is no memory.	-	-
SYS-2-MMAP	2-Critical	mmap failed for size [dec] bytes Caller PC 0x[hec] errno [dec]	Failed to allocate memory for the requested size. The memory could not be mapped because there is no memory.	-	-
SYS-2-MMAP	2-Critical	mmap failed for size [dec] bytes Caller PC 0x[hec] errno [dec]	Failed to allocate memory for the requested size. The memory could not be mapped because there is no memory.	-	-
SYS-2-MUNMAP	2-Critical	Could not return memory Neutrino via munmap at [node] size [dec] errno [dec]	Failed to unmap memory memory at the indicated location. The memory could not be unmapped because it was allocated via mmap.	-	-
SYS-2-MUNMAP	2-Critical	Could not return memory Neutrino via munmap at [node] size [dec] errno [dec]	Failed to unmap memory memory at the indicated location. The memory could not be unmapped because it was allocated via mmap.	-	-
SYS-2-MUNMAP	2-Critical	Could not return memory Neutrino via munmap at [node] size [dec] errno [dec]	Failed to unmap memory memory at the indicated location. The memory could not be unmapped because it was allocated via mmap.	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-MUNMAP	2-Critical	Could not return memory Neutrino via munmap at [node] size [dec] errno [dec]	Failed to unmap memory memory at the indicated location. The memory could not be unmapped because it was allocated via mmap.	-	-
SYS-2-MUNMAP	2-Critical	Could not return memory Neutrino via munmap at [node] size [dec] errno [dec]	Failed to unmap memory memory at the indicated location. The memory could not be unmapped because it was allocated via mmap.	-	-
SYS-2-MUNMAP	2-Critical	Could not return memory Neutrino via munmap at [node] size [dec] errno [dec]	Failed to unmap memory memory at the indicated location. The memory could not be unmapped because it was allocated via mmap.	-	-
SYS-2-MUNMAP	2-Critical	Could not return memory Neutrino via munmap at [node] size [dec] errno [dec]	Failed to unmap memory memory at the indicated location. The memory could not be unmapped because it was allocated via mmap.	-	-
SYS2MUTEXLOCKFAIL	2-Critical	pthread_mutex_lock failed for [chars]	The thread failed in pthread_mutex_lock while trying to acquire a mutex.	mem-suspect	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS2MUTEXLOCKFAIL	2-Critical	pthread_mutex_lock failed for [chars]	The thread failed in pthread_mutex_lock while trying to acquire a mutex.	mem-suspect	"Copy the error message exactly as it appears and report it to your " "technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS2MUTEXLOCKFAIL	2-Critical	pthread_mutex_lock failed for [chars]	The thread failed in pthread_mutex_lock while trying to acquire a mutex.	mem-suspect	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS2MUTEXLOCKFAIL	2-Critical	pthread_mutex_lock failed for [chars]	The thread failed in pthread_mutex_lock while trying to acquire a mutex.	mem-suspect	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS2MUTEXLOCKFAIL	2-Critical	pthread_mutex_lock failed for [chars]	The thread failed in pthread_mutex_lock while trying to acquire a mutex.	mem-suspect	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS2MUTEXLOCKFAIL	2-Critical	pthread_mutex_lock failed for [chars]	The thread failed in pthread_mutex_lock while trying to acquire a mutex.	mem-suspect	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS2MUTEXLOCKFAIL	2-Critical	pthread_mutex_lock failed for [chars]	The thread failed in pthread_mutex_lock while trying to acquire a mutex.	mem-suspect	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-2-NOBLOCK	2-Critical	[chars] with blocking disabled.	A process attempted to relinquish control with blocking disabled.	<del>mem-suspect</del>	-
SYS-2-NOBLOCK	2-Critical	[chars] with blocking disabled.	A process attempted to relinquish control with blocking disabled.	<del>mem-suspect</del>	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-NOBLOCK	2-Critical	[chars] with blocking disabled.	A process attempted to relinquish control with blocking disabled.	lib_414523_110D6_1	-
SYS-2-NOBLOCK	2-Critical	[chars] with blocking disabled.	A process attempted to relinquish control with blocking disabled.	lib_414523_110D6_1	-
SYS-2-NOBLOCK	2-Critical	[chars] with blocking disabled.	A process attempted to relinquish control with blocking disabled.	lib_414523_110D6_1	-
SYS-2-NOBLOCK	2-Critical	[chars] with blocking disabled.	A process attempted to relinquish control with blocking disabled.	lib_414523_110D6_1	-
SYS-2-NOBLOCK	2-Critical	[chars] with blocking disabled.	A process attempted to relinquish control with blocking disabled.	lib_414523_110D6_1	-
SYS-2-NOMEMFRGIO	2-Critical	Memory fragmentation check debug exception fragment size %u	The router is configured to crash when the largest available contiguous IO memory block drops below a specified threshold. That threshold has been reached. This may have occurred due to excessive memory thrashing or from supporting additional features.	mem	"If you suspect memory thrashing " "copy the message exactly as it appears " "and report it to your technical support representative. Otherwise " "you may need to add memory or reduce the number of features you are " "trying to support."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-NOMEMFRGIO	2-Critical	Memory fragmentation check debug exception fragment size %u	The router is configured to crash when the largest available contiguous IO memory block drops below a specified threshold. That threshold has been reached. This may have occurred due to excessive memory thrashing or from supporting additional features.	mem	"If you suspect memory thrashing " "copy the message exactly as it appears " "and report it to your technical support representative. Otherwise " "you may need to add memory or reduce the number of features you are " "trying to support."
SYS-2-NOMEMFRGIO	2-Critical	Memory fragmentation check debug exception fragment size %u	The router is configured to crash when the largest available contiguous IO memory block drops below a specified threshold. That threshold has been reached. This may have occurred due to excessive memory thrashing or from supporting additional features.	mem	"If you suspect memory thrashing " "copy the message exactly as it appears " "and report it to your technical support representative. Otherwise " "you may need to add memory or reduce the number of features you are " "trying to support."
SYS-2-NOMEMFRGIO	2-Critical	Memory fragmentation check debug exception fragment size %u	The router is configured to crash when the largest available contiguous IO memory block drops below a specified threshold. That threshold has been reached. This may have occurred due to excessive memory thrashing or from supporting additional features.	mem	"If you suspect memory thrashing " "copy the message exactly as it appears " "and report it to your technical support representative. Otherwise " "you may need to add memory or reduce the number of features you are " "trying to support."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-NOMEMFRGIO	2-Critical	Memory fragmentation check debug exception fragment size %u	The router is configured to crash when the largest available contiguous IO memory block drops below a specified threshold. That threshold has been reached. This may have occurred due to excessive memory thrashing or from supporting additional features.	mem	"If you suspect memory thrashing " "copy the message exactly as it appears " "and report it to your technical support representative. Otherwise " "you may need to add memory or reduce the number of features you are " "trying to support."
SYS-2-NOMEMFRGIO	2-Critical	Memory fragmentation check debug exception fragment size %u	The router is configured to crash when the largest available contiguous IO memory block drops below a specified threshold. That threshold has been reached. This may have occurred due to excessive memory thrashing or from supporting additional features.	mem	"If you suspect memory thrashing " "copy the message exactly as it appears " "and report it to your technical support representative. Otherwise " "you may need to add memory or reduce the number of features you are " "trying to support."
SYS-2-NOMEMFRGIO	2-Critical	Memory fragmentation check debug exception fragment size %u	The router is configured to crash when the largest available contiguous IO memory block drops below a specified threshold. That threshold has been reached. This may have occurred due to excessive memory thrashing or from supporting additional features.	mem	"If you suspect memory thrashing " "copy the message exactly as it appears " "and report it to your technical support representative. Otherwise " "you may need to add memory or reduce the number of features you are " "trying to support."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS2NOMEMFRGPROC	2-Critical	Memory fragmentation check debug exception fragment size %u	The router is configured to crash when the largest available contiguous processor memory block drops below a specified threshold. That threshold has been reached. This may have occurred due to excessive memory thrashing or from supporting additional features.	mem	"If you suspect memory thrashing copy the message exactly as it appears " "and report it to your technical support representative. Otherwise " "you may need to add memory or reduce the number of features you are " "trying to support."
SYS2NOMEMFRGPROC	2-Critical	Memory fragmentation check debug exception fragment size %u	The router is configured to crash when the largest available contiguous processor memory block drops below a specified threshold. That threshold has been reached. This may have occurred due to excessive memory thrashing or from supporting additional features.	mem	"If you suspect memory thrashing copy the message exactly as it appears " "and report it to your technical support representative. Otherwise " "you may need to add memory or reduce the number of features you are " "trying to support."
SYS2NOMEMFRGPROC	2-Critical	Memory fragmentation check debug exception fragment size %u	The router is configured to crash when the largest available contiguous processor memory block drops below a specified threshold. That threshold has been reached. This may have occurred due to excessive memory thrashing or from supporting additional features.	mem	"If you suspect memory thrashing copy the message exactly as it appears " "and report it to your technical support representative. Otherwise " "you may need to add memory or reduce the number of features you are " "trying to support."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS2NOMEMFRGPROC	2-Critical	Memory fragmentation check debug exception fragment size %u	The router is configured to crash when the largest available contiguous processor memory block drops below a specified threshold. That threshold has been reached. This may have occurred due to excessive memory thrashing or from supporting additional features.	mem	"If you suspect memory thrashing copy the message exactly as it appears " "and report it to your technical support representative. Otherwise " "you may need to add memory or reduce the number of features you are " "trying to support."
SYS2NOMEMFRGPROC	2-Critical	Memory fragmentation check debug exception fragment size %u	The router is configured to crash when the largest available contiguous processor memory block drops below a specified threshold. That threshold has been reached. This may have occurred due to excessive memory thrashing or from supporting additional features.	mem	"If you suspect memory thrashing copy the message exactly as it appears " "and report it to your technical support representative. Otherwise " "you may need to add memory or reduce the number of features you are " "trying to support."
SYS2NOMEMFRGPROC	2-Critical	Memory fragmentation check debug exception fragment size %u	The router is configured to crash when the largest available contiguous processor memory block drops below a specified threshold. That threshold has been reached. This may have occurred due to excessive memory thrashing or from supporting additional features.	mem	"If you suspect memory thrashing copy the message exactly as it appears " "and report it to your technical support representative. Otherwise " "you may need to add memory or reduce the number of features you are " "trying to support."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS2-NOMEMERGPROC	2-Critical	Memory fragmentation check debug exception fragment size %u	The router is configured to crash when the largest available contiguous processor memory block drops below a specified threshold. That threshold has been reached. This may have occurred due to excessive memory thrashing or from supporting additional features.	mem	"If you suspect memory thrashing copy the message exactly as it appears " "and report it to your technical support representative. Otherwise " "you may need to add memory or reduce the number of features you are " "trying to support."
SYS-2-NOMEMORY	2-Critical	No memory available for [chars] [dec]	An operation could not be accomplished because of a low-memory condition. The current system configuration network environment or possibly a software error might have exhausted or fragmented the router's memory.	mem-suspect	"Reduce other system activity to ease memory demands. If conditions " "warrant upgrade to a configuration that has more memory."
SYS-2-NOMEMORY	2-Critical	No memory available for [chars] [dec]	An operation could not be accomplished because of a low-memory condition. The current system configuration network environment or possibly a software error might have exhausted or fragmented the router's memory.	mem-suspect	"Reduce other system activity to ease memory demands. If conditions " "warrant upgrade to a configuration that has more memory."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-NOMEMORY	2-Critical	No memory available for [chars] [dec]	An operation could not be accomplished because of a low-memory condition. The current system configuration network environment or possibly a software error might have exhausted or fragmented the router's memory.	mem-suspect	"Reduce other system activity to ease memory demands. If conditions " "warrant upgrade to a configuration that has more memory."
SYS-2-NOMEMORY	2-Critical	No memory available for [chars] [dec]	An operation could not be accomplished because of a low-memory condition. The current system configuration network environment or possibly a software error might have exhausted or fragmented the router's memory.	mem-suspect	"Reduce other system activity to ease memory demands. If conditions " "warrant upgrade to a configuration that has more memory."
SYS-2-NOMEMORY	2-Critical	No memory available for [chars] [dec]	An operation could not be accomplished because of a low-memory condition. The current system configuration network environment or possibly a software error might have exhausted or fragmented the router's memory.	mem-suspect	"Reduce other system activity to ease memory demands. If conditions " "warrant upgrade to a configuration that has more memory."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-NOMEMORY	2-Critical	No memory available for [chars] [dec]	An operation could not be accomplished because of a low-memory condition. The current system configuration network environment or possibly a software error might have exhausted or fragmented the router's memory.	mem-suspect	"Reduce other system activity to ease memory demands. If conditions " "warrant upgrade to a configuration that has more memory."
SYS-2-NOMEMORY	2-Critical	No memory available for [chars] [dec]	An operation could not be accomplished because of a low-memory condition. The current system configuration network environment or possibly a software error might have exhausted or fragmented the router's memory.	mem-suspect	"Reduce other system activity to ease memory demands. If conditions " "warrant upgrade to a configuration that has more memory."
SYS-2-NOPROCESS	2-Critical	No such process [dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-NOPROCESS	2-Critical	No such process [dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-NOPROCESS	2-Critical	No such process [dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-NOPROCESS	2-Critical	No such process [dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-NOPROCESS	2-Critical	No such process [dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-NOPROCESS	2-Critical	No such process [dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-NOPROCESS	2-Critical	No such process [dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-NOPROCESS	2-Critical	No such process [dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-NOTDEAD	2-Critical	Killing process [chars] pid [dec] again	An internal software error occurred.	os-scheduler	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-NOTDEAD	2-Critical	Killing process [chars] pid [dec] again	An internal software error occurred.	os-scheduler	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-NOTDEAD	2-Critical	Killing process [chars] pid [dec] again	An internal software error occurred.	os-scheduler	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-NOTDEAD	2-Critical	Killing process [chars] pid [dec] again	An internal software error occurred.	os-scheduler	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-NOTDEAD	2-Critical	Killing process [chars] pid [dec] again	An internal software error occurred.	os-scheduler	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-NOTDEAD	2-Critical	Killing process [chars] pid [dec] again	An internal software error occurred.	os-scheduler	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-NOTDEAD	2-Critical	Killing process [chars] pid [dec] again	An internal software error occurred.	os-scheduler	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-NOTIOSTASK	2-Critical	[chars] from outside IOS task context	An IOS reschedule request was made from code that is not running in the context of an IOS task -- from an interrupt handler the scheduler itself or a service pthread within the IOS process.	<del>IOS (0x1740) (0x00)</del>	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-2-NOTIOSTASK	2-Critical	[chars] from outside IOS task context	An IOS reschedule request was made from code that is not running in the context of an IOS task -- from an interrupt handler the scheduler itself or a service pthread within the IOS process.	<del>IOS (0x1740) (0x00)</del>	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-2-NOTIOSTASK	2-Critical	[chars] from outside IOS task context	An IOS reschedule request was made from code that is not running in the context of an IOS task -- from an interrupt handler the scheduler itself or a service pthread within the IOS process.	<del>IOS (0x1740) (0x00)</del>	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-2-NOTIOSTASK	2-Critical	[chars] from outside IOS task context	An IOS reschedule request was made from code that is not running in the context of an IOS task -- from an interrupt handler the scheduler itself or a service pthread within the IOS process.	<del>IOS (0x1740) (0x00)</del>	"Copy the error message exactly as it appears and report it to your " "technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-NOTIOSTASK	2-Critical	[chars] from outside IOS task context	An IOS reschedule request was made from code that is not running in the context of an IOS task -- from an interrupt handler the scheduler itself or a service pthread within the IOS process.	<del>IBM Spectrum Scale</del>	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-2-NOTIOSTASK	2-Critical	[chars] from outside IOS task context	An IOS reschedule request was made from code that is not running in the context of an IOS task -- from an interrupt handler the scheduler itself or a service pthread within the IOS process.	<del>IBM Spectrum Scale</del>	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-2-NOTIOSTASK	2-Critical	[chars] from outside IOS task context	An IOS reschedule request was made from code that is not running in the context of an IOS task -- from an interrupt handler the scheduler itself or a service pthread within the IOS process.	<del>IBM Spectrum Scale</del>	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-2-NOTQ	2-Critical	[chars] didn't find [hec] in queue [hec]	An internal software error occurred.	<del>IBM Spectrum Scale</del>	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-NOTQ	2-Critical	[chars] didn't find [hec] in queue [hec]	An internal software error occurred.	IBM 4142 (S) 4142 (S) 4142 (S)	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-NOTQ	2-Critical	[chars] didn't find [hec] in queue [hec]	An internal software error occurred.	IBM 4142 (S) 4142 (S) 4142 (S)	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-NOTQ	2-Critical	[chars] didn't find [hec] in queue [hec]	An internal software error occurred.	IBM 4142 (S) 4142 (S) 4142 (S)	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-NOTQ	2-Critical	[chars] didn't find [hec] in queue [hec]	An internal software error occurred.	IBM 4142 (S) 4142 (S) 4142 (S)	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-NOTQ	2-Critical	[chars] didn't find [hec] in queue [hec]	An internal software error occurred.	IBM 4142 (S) 4142 (S) 4142 (S)	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-NOTQ	2-Critical	[chars] didn't find [hec] in queue [hec]	An internal software error occurred.	IBM 4142 (S) 4142 (S) 4142 (S)	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-NOTQ	2-Critical	[chars] didn't find [hec] in queue [hec]	An internal software error occurred.	IBM 4142 (S) 4142 (S) 4142 (S)	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-NULLCHUNK	2-Critical	[chars] operation on Null Chunk	Chunk manager cannot allocate memory from NULL chunks	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
SYS-2-NULLCHUNK	2-Critical	[chars] operation on Null Chunk	Chunk manager cannot allocate memory from NULL chunks	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
SYS-2-NULLCHUNK	2-Critical	Memory requested from Null Chunk	Chunk manager cannot allocate memory from NULL chunks	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
SYS-2-NULLCHUNK	2-Critical	Memory requested from Null Chunk	Chunk manager cannot allocate memory from NULL chunks	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
SYS-2-NULLCHUNK	2-Critical	Memory requested from Null Chunk	Chunk manager cannot allocate memory from NULL chunks	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
SYS-2-NULLCHUNK	2-Critical	Memory requested from Null Chunk	Chunk manager cannot allocate memory from NULL chunks	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
SYS-2-NULLCHUNK	2-Critical	Memory requested from Null Chunk	Chunk manager cannot allocate memory from NULL chunks	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-NV_BAD_PTR	2-Critical	Bad NVRAM pointer. NV Header values are nv: 0x[node].textbase: 0x[node].textsize: [dec] .magic: 0x[node].checksum: 0x[node].system_version: [dec] .textptr: 0x[node]v1_ptr: 0x[node].priv: 0x%p	-	nvram	LOGSIDSHTTECHACIION
SYS-2-NV_BAD_PTR	2-Critical	Bad NVRAM pointer. NV Header values are nv: 0x[node].textbase: 0x[node].textsize: [dec] .magic: 0x[node].checksum: 0x[node].system_version: [dec] .textptr: 0x[node]v1_ptr: 0x[node].priv: 0x%p	-	nvram	LOGSIDSHTTECHACIION
<del>SSPAKSUBBLOCK_ALREADY</del>	2-Critical	[dec]	This message indicates an error in attempting to allocate a pak subblock. A subblock was already associated with the packet.	-	-
<del>SSPAKSUBBLOCK_ALREADY</del>	2-Critical	[dec]	This message indicates an error in attempting to allocate a pak subblock. A subblock was already associated with the packet.	-	-
<del>SSPAKSUBBLOCK_ALREADY</del>	2-Critical	[dec]	This message indicates an error in attempting to allocate a pak subblock. A subblock was already associated with the packet.	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SS</del> PAKSUBBLOCK_ALREADY	2-Critical	[dec]	This message indicates an error in attempting to allocate a pak subblock. A subblock was already associated with the packet.	-	-
<del>SS</del> PAKSUBBLOCK_ALREADY	2-Critical	[dec]	This message indicates an error in attempting to allocate a pak subblock. A subblock was already associated with the packet.	-	-
<del>SS</del> PAKSUBBLOCK_ALREADY	2-Critical	[dec]	This message indicates an error in attempting to allocate a pak subblock. A subblock was already associated with the packet.	-	-
<del>SS</del> PAKSUBBLOCK_ALREADY	2-Critical	[dec]	This message indicates an error in attempting to allocate a pak subblock. A subblock was already associated with the packet.	-	-
<del>SS</del> PAKSUBBLOCK_BADSIZE	2-Critical	[dec]	This message indicates an error in attempting to allocate a pak subblock. The requested size is larger than the maximum registered subblock size.	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SSPAKSUBBLOCKBADSE</del>	2-Critical	[dec]	This message indicates an error in attempting to allocate a pak subblock. The requested size is larger than the maximum registered subblock size.	-	-
<del>SSPAKSUBBLOCKBADSE</del>	2-Critical	[dec]	This message indicates an error in attempting to allocate a pak subblock. The requested size is larger than the maximum registered subblock size.	-	-
<del>SSPAKSUBBLOCKBADSE</del>	2-Critical	[dec]	This message indicates an error in attempting to allocate a pak subblock. The requested size is larger than the maximum registered subblock size.	-	-
<del>SSPAKSUBBLOCKBADSE</del>	2-Critical	[dec]	This message indicates an error in attempting to allocate a pak subblock. The requested size is larger than the maximum registered subblock size.	-	-
<del>SSPAKSUBBLOCKBADSE</del>	2-Critical	[dec]	This message indicates an error in attempting to allocate a pak subblock. The requested size is larger than the maximum registered subblock size.	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SYS</del> PAK_SUBBLOCK_BADSIZE	2-Critical	[dec]	This message indicates an error in attempting to allocate a pak subblock. The requested size is larger than the maximum registered subblock size.	-	-
<del>SYS</del> PAK_SUBBLOCK_SIZE	2-Critical	[dec]	This message indicates an error in startup code to register a pak subblock size. An attempt was made to register a size after the subblock chunk pool had been initialized. This problem is caused by software initialization order.	-	-
<del>SYS</del> PAK_SUBBLOCK_SIZE	2-Critical	[dec]	This message indicates an error in startup code to register a pak subblock size. An attempt was made to register a size after the subblock chunk pool had been initialized. This problem is caused by software initialization order.	-	-



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SYSPAKSUBBLOCKSEIZE</del>	2-Critical	[dec]	This message indicates an error in startup code to register a pak subblock size. An attempt was made to register a size after the subblock chunk pool had been initialized. This problem is caused by software initialization order.	-	-
<del>SYSPAKSUBBLOCKSEIZE</del>	2-Critical	[dec]	This message indicates an error in startup code to register a pak subblock size. An attempt was made to register a size after the subblock chunk pool had been initialized. This problem is caused by software initialization order.	-	-
<del>SYSPAKSUBBLOCKSEIZE</del>	2-Critical	[dec]	This message indicates an error in startup code to register a pak subblock size. An attempt was made to register a size after the subblock chunk pool had been initialized. This problem is caused by software initialization order.	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SYSPAKSUBBLOCK_SIZE</del>	2-Critical	[dec]	This message indicates an error in startup code to register a pak subblock size. An attempt was made to register a size after the subblock chunk pool had been initialized. This problem is caused by software initialization order.	-	-
<del>SYSPAKSUBBLOCK_SIZE</del>	2-Critical	[dec]	This message indicates an error in startup code to register a pak subblock size. An attempt was made to register a size after the subblock chunk pool had been initialized. This problem is caused by software initialization order.	-	-
<del>SYSPRIVCFG_DECRYPT_FAIL</del>	2-Critical	[chars]	An error was encountered by the private config decryption	none	"Copy the error message exactly as it appears and report it to your " "technical support representative."
<del>SYSPRIVCFG_DECRYPT_FAIL</del>	2-Critical	[chars]	An error was encountered by the private config decryption	none	"Copy the error message exactly as it appears and report it to your " "technical support representative."
<del>SYSPRIVCFG_ENCRYPT_FAIL</del>	2-Critical	[chars]	An error was encountered by the private config encryption	none	"Copy the error message exactly as it appears and report it to your " "technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SSMCFGENPTAURE	2-Critical	[chars]	An error was encountered by the private config encryption	none	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-2-QCOUNT	2-Critical	Bad [chars] [hec] count [dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-QCOUNT	2-Critical	Bad [chars] [hec] count [dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-QCOUNT	2-Critical	Bad [chars] [hec] count [dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-QCOUNT	2-Critical	Bad [chars] [hec] count [dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-QCOUNT	2-Critical	Bad [chars] [hec] count [dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-QCOUNT	2-Critical	Bad [chars] [hec] count [dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-QCOUNT	2-Critical	Bad [chars] [hec] count [dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
<del>SRUNIMECAPBITYNOISE</del>	2-Critical	Capability value [chars] needed by Feature [chars] is not defined.\n	An inconsistency was detected while looking up for capability on which feature functionality depends upon. It is software error because platform/branch using the feature should provide a override value for feature capability .	none	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " " "need to be reloaded manually."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SSUNIMECAPBIYNOSET	2-Critical	Capability value [chars] needed by Feature [chars] is not defined.\n	An inconsistency was detected while looking up for capability on which feature functionality depends upon. It is software error because platform/branch using the feature should provide a override value for feature capability .	none	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."
SYS-2-SELFLINKED	2-Critical	Buffer [hec] linked to itself in free pool [chars]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-SELFLINKED	2-Critical	Buffer [hec] linked to itself in free pool [chars]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-SELFLINKED	2-Critical	Buffer [hec] linked to itself in free pool [chars]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-SELFLINKED	2-Critical	Buffer [hec] linked to itself in free pool [chars]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-SELFLINKED	2-Critical	Buffer [hec] linked to itself in free pool [chars]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-SELFLINKED	2-Critical	Buffer [hec] linked to itself in free pool [chars]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-SELFLINKED	2-Critical	Buffer [hec] linked to itself in free pool [chars]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-SEMSCHED	2-Critical	'[chars]'	The scheduler was entered with mempool semaphore held.	0-00000000-00000000-0000-0000	-
SYS-2-SEMSCHED	2-Critical	'[chars]'	The scheduler was entered with mempool semaphore held.	0-00000000-00000000-0000-0000	-
SYS-2-SHARED	2-Critical	Attempt to return buffer with sharecount [dec] ptr= [hec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-SHARED	2-Critical	Attempt to return buffer with sharecount [dec] ptr= [hec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-SHARED	2-Critical	Attempt to return buffer with sharecount [dec] ptr= [hec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-SHARED	2-Critical	Attempt to return buffer with sharecount [dec] ptr= [hec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-SHARED	2-Critical	Attempt to return buffer with sharecount [dec] ptr= [hec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-SHARED	2-Critical	Attempt to return buffer with sharecount [dec] ptr= [hec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-SHARED	2-Critical	Attempt to return buffer with sharecount [dec] ptr= [hec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-SHARED1	2-Critical	Attempt to return buffer with sharecount [dec] ptr= [hec] caller= [hec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-SHARED1	2-Critical	Attempt to return buffer with sharecount [dec] ptr= [hec] caller= [hec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-SHARED1	2-Critical	Attempt to return buffer with sharecount [dec] ptr= [hec] caller= [hec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-SHARED1	2-Critical	Attempt to return buffer with sharecount [dec] ptr= [hec] caller= [hec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-SHARED1	2-Critical	Attempt to return buffer with sharecount [dec] ptr= [hec] caller= [hec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-SHARED1	2-Critical	Attempt to return buffer with sharecount [dec] ptr= [hec] caller= [hec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-SHARED1	2-Critical	Attempt to return buffer with sharecount [dec] ptr= [hec] caller= [hec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-SHARED1	2-Critical	Attempt to return buffer with sharecount [dec] ptr= [hec] caller= [hec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-SIGNAL	2-Critical	Process aborted on invalid signal signal = [dec].	An attempt was made to send an invalid signal to another process.	-	"If this message occurs more than once report this message " "to your technical support representative."
SYS-2-SIGNAL	2-Critical	Process aborted on invalid signal signal = [dec].	An attempt was made to send an invalid signal to another process.	-	"If this message occurs more than once report this message " "to your technical support representative."
SYS-2-SIGNAL	2-Critical	Process aborted on invalid signal signal = [dec].	An attempt was made to send an invalid signal to another process.	-	"If this message occurs more than once report this message " "to your technical support representative."
SYS-2-SIGNAL	2-Critical	Process aborted on invalid signal signal = [dec].	An attempt was made to send an invalid signal to another process.	-	"If this message occurs more than once report this message " "to your technical support representative."
SYS-2-SIGNAL	2-Critical	Process aborted on invalid signal signal = [dec].	An attempt was made to send an invalid signal to another process.	-	"If this message occurs more than once report this message " "to your technical support representative."
SYS-2-SIGNAL	2-Critical	Process aborted on invalid signal signal = [dec].	An attempt was made to send an invalid signal to another process.	-	"If this message occurs more than once report this message " "to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-SIGNUM	2-Critical	Process aborted on invalid signal signum = [dec].	An attempt was made to send an invalid signal to another process.	-	"If this message occurs more than once report this message " "to your technical support representative."
SYS-2-SIGPENDING	2-Critical	Multiple Signals are sent to a process [dec]	An internal software error occurred.	os	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-SIGPENDING	2-Critical	Multiple Signals are sent to a process [dec]	An internal software error occurred.	os	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-SIGPENDING	2-Critical	Multiple Signals are sent to a process [dec]	An internal software error occurred.	os	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-SIGPENDING	2-Critical	Multiple Signals are sent to a process [dec]	An internal software error occurred.	os	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-SIGPENDING	2-Critical	Multiple Signals are sent to a process [dec]	An internal software error occurred.	os	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-SIGPENDING	2-Critical	Multiple Signals are sent to a process [dec]	An internal software error occurred.	os	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-SIGPENDING	2-Critical	Multiple Signals are sent to a process [dec]	An internal software error occurred.	os	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-SNMP0IDX	2-Critical	Attempt to [chars] snmpidb with if_index of 0	A software error occurred.	-	"Copy the message exactly as it appears and report it your technical " "support representative."
SYS-2-SNMP0IDX	2-Critical	Attempt to [chars] snmpidb with if_index of 0	A software error occurred.	-	"Copy the message exactly as it appears and report it your technical " "support representative."
SYS-2-SNMP0IDX	2-Critical	Attempt to [chars] snmpidb with if_index of 0	A software error occurred.	-	"Copy the message exactly as it appears and report it your technical " "support representative."
SYS-2-SNMP0IDX	2-Critical	Attempt to [chars] snmpidb with if_index of 0	A software error occurred.	-	"Copy the message exactly as it appears and report it your technical " "support representative."
SYS-2-SNMP0IDX	2-Critical	Attempt to [chars] snmpidb with if_index of 0	A software error occurred.	-	"Copy the message exactly as it appears and report it your technical " "support representative."
SYS-2-SNMP0IDX	2-Critical	Attempt to [chars] snmpidb with if_index of 0	A software error occurred.	-	"Copy the message exactly as it appears and report it your technical " "support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-SNMP0IDX	2-Critical	Attempt to [chars] snmpidb with if_index of 0	A software error occurred.	-	"Copy the message exactly as it appears and report it your technical " "support representative."
SYS-2-SPEC	2-Critical	Trying to set unknown special character [dec] to [dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-SPEC	2-Critical	Trying to set unknown special character [dec] to [dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-SPEC	2-Critical	Trying to set unknown special character [dec] to [dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-SPEC	2-Critical	Trying to set unknown special character [dec] to [dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-SPEC	2-Critical	Trying to set unknown special character [dec] to [dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-SPEC	2-Critical	Trying to set unknown special character [dec] to [dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-SPEC	2-Critical	Trying to set unknown special character [dec] to [dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-2-SYSMEMINFO	2-Critical	System Memory: [node]K total [node]K used [node]K free	This is an auxiliary message to several memory-related messages. It\n\ provides system memory information usage.	-	"This message provides additional information only. Copy the error \n\ message exactly as it appears and report it to your technical support \n\ representative as part of a previously printed error message."
SYS-2-SYSMEMINFO	2-Critical	System Memory: [node]K total [node]K used [node]K free	This is an auxiliary message to several memory-related messages. It\n\ provides system memory information usage.	-	"This message provides additional information only. Copy the error \n\ message exactly as it appears and report it to your technical support \n\ representative as part of a previously printed error message."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-SYSMEMINFO	2-Critical	System Memory: [node]K total [node]K used [node]K free	This is an auxiliary message to several memory-related messages. It\n\ provides system memory information usage.	-	"This message provides additional information only. Copy the error \n\ message exactly as it appears and report it to your technical support \n\ representative as part of a previously printed error message."
SYS-2-SYSMEMINFO	2-Critical	System Memory: [node]K total [node]K used [node]K free	This is an auxiliary message to several memory-related messages. It\n\ provides system memory information usage.	-	"This message provides additional information only. Copy the error \n\ message exactly as it appears and report it to your technical support \n\ representative as part of a previously printed error message."
SYS-2-SYSMEMINFO	2-Critical	System Memory: [node]K total [node]K used [node]K free	This is an auxiliary message to several memory-related messages. It\n\ provides system memory information usage.	-	"This message provides additional information only. Copy the error \n\ message exactly as it appears and report it to your technical support \n\ representative as part of a previously printed error message."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-SYSMEMINFO	2-Critical	System Memory: [node]K total [node]K used [node]K free	This is an auxiliary message to several memory-related messages. It\n\ provides system memory information usage.	-	"This message provides additional information only. Copy the error \n\ message exactly as it appears and report it to your technical support \n\ representative as part of a previously printed error message."
SYS-2-SYSMEMINFO	2-Critical	System Memory: [node]K total [node]K used [node]K free	This is an auxiliary message to several memory-related messages. It\n\ provides system memory information usage.	-	"This message provides additional information only. Copy the error \n\ message exactly as it appears and report it to your technical support \n\ representative as part of a previously printed error message."
SYS-2-USERLOG_CRIT	2-Critical	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only." "

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-USERLOG_CRIT	2-Critical	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only." "
SYS-2-USERLOG_CRIT	2-Critical	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only." "
SYS-2-USERLOG_CRIT	2-Critical	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only." "



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-2-USERLOG_CRIT	2-Critical	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only." "
SYS-2-USERLOG_CRIT	2-Critical	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only." "
SYS-2-USERLOG_CRIT	2-Critical	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only." "
SYS-2-WATCHDOG	2-Critical	Process aborted on watchdog timeout process = [chars].[chars]	The indicated process ran for too long without relinquishing control. The system killed it as a runaway process.	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-WATCHDOG	2-Critical	Process aborted on watchdog timeout process = [chars].[chars]	The indicated process ran for too long without relinquishing control. The system killed it as a runaway process.	-	-
SYS-2-WATCHDOG	2-Critical	Process aborted on watchdog timeout process = [chars].[chars]	The indicated process ran for too long without relinquishing control. The system killed it as a runaway process.	-	-
SYS-2-WATCHDOG	2-Critical	Process aborted on watchdog timeout process = [chars].[chars]	The indicated process ran for too long without relinquishing control. The system killed it as a runaway process.	-	-
SYS-2-WATCHDOG	2-Critical	Process aborted on watchdog timeout process = [chars].[chars]	The indicated process ran for too long without relinquishing control. The system killed it as a runaway process.	-	-
SYS-2-WATCHDOG	2-Critical	Process aborted on watchdog timeout process = [chars].[chars]	The indicated process ran for too long without relinquishing control. The system killed it as a runaway process.	-	-
SYS-2-WATCHDOG	2-Critical	Process aborted on watchdog timeout process = [chars].[chars]	The indicated process ran for too long without relinquishing control. The system killed it as a runaway process.	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-2-WRONGPOOL	2-Critical	Buffer [hec] found in pool [hec] should be in pool [hec]	A software error occurred.	-	"Copy the message exactly as it appears and report it your technical " "support representative."
SYS-2-WRONGPOOL	2-Critical	Buffer [hec] found in pool [hec] should be in pool [hec]	A software error occurred.	-	"Copy the message exactly as it appears and report it your technical " "support representative."
SYS-2-WRONGPOOL	2-Critical	Buffer [hec] found in pool [hec] should be in pool [hec]	A software error occurred.	-	"Copy the message exactly as it appears and report it your technical " "support representative."
SYS-2-WRONGPOOL	2-Critical	Buffer [hec] found in pool [hec] should be in pool [hec]	A software error occurred.	-	"Copy the message exactly as it appears and report it your technical " "support representative."
SYS-2-WRONGPOOL	2-Critical	Buffer [hec] found in pool [hec] should be in pool [hec]	A software error occurred.	-	"Copy the message exactly as it appears and report it your technical " "support representative."
SYS-2-WRONGPOOL	2-Critical	Buffer [hec] found in pool [hec] should be in pool [hec]	A software error occurred.	-	"Copy the message exactly as it appears and report it your technical " "support representative."
SYS-2-WRONGPOOL	2-Critical	Buffer [hec] found in pool [hec] should be in pool [hec]	A software error occurred.	-	"Copy the message exactly as it appears and report it your technical " "support representative."
SYS-2-WRONGPOOL	2-Critical	Buffer [hec] found in pool [hec] should be in pool [hec]	A software error occurred.	-	"Copy the message exactly as it appears and report it your technical " "support representative."
SYS-3-ABRUPTTERM	3-Error	Abrupt termination of tty session for [chars] [t-line]	An internal software error occurred.	os	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-3-ABRUPTTERM	3-Error	Abrupt termination of tty session for [chars] [t-line]	An internal software error occurred.	os	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-ABRUPTTERM	3-Error	Abrupt termination of tty session for [chars] [t-line]	An internal software error occurred.	os	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-ABRUPTTERM	3-Error	Abrupt termination of tty session for [chars] [t-line]	An internal software error occurred.	os	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-ABRUPTTERM	3-Error	Abrupt termination of tty session for [chars] [t-line]	An internal software error occurred.	os	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-ABRUPTTERM	3-Error	Abrupt termination of tty session for [chars] [t-line]	An internal software error occurred.	os	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-ABRUPTTERM	3-Error	Abrupt termination of tty session for [chars] [t-line]	An internal software error occurred.	os	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-ABRUPTTERM	3-Error	Abrupt termination of tty session for [chars] [t-line]	An internal software error occurred.	os	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS3BADGLIBBUFRE	3-Error	A glibc buffer is freed in IOS buffer blockmagic: 0x[hec] flags 0x[hec]	A software error occurred. A glibc buffer is freed into IOS buffer pool.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS3BADGLIBBUFRE	3-Error	A glibc buffer is freed in IOS buffer blockmagic: 0x[hec] flags 0x[hec]	A software error occurred. A glibc buffer is freed into IOS buffer pool.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS3-BAD_RESET	3-Error	Questionable reset of process [dec] on tty[node]n	A process was reset without giving it a chance to clean itself up.	exec	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS3-BAD_RESET	3-Error	Questionable reset of process [dec] on tty[node]n	A process was reset without giving it a chance to clean itself up.	exec	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS3-BAD_RESET	3-Error	Questionable reset of process [dec] on tty[node]n	A process was reset without giving it a chance to clean itself up.	exec	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS3-BAD_RESET	3-Error	Questionable reset of process [dec] on tty[node]n	A process was reset without giving it a chance to clean itself up.	exec	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS3-BAD_RESET	3-Error	Questionable reset of process [dec] on tty[node]n	A process was reset without giving it a chance to clean itself up.	exec	"Copy the error message exactly as it appears and report it to your " "technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-3-BAD_RESET	3-Error	Questionable reset of process [dec] on tty[node]n	A process was reset without giving it a chance to clean itself up.	exec	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-BAD_RESET	3-Error	Questionable reset of process [dec] on tty[node]n	A process was reset without giving it a chance to clean itself up.	exec	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS3BAD_TRIPCOUNT	3-Error	Traversed block count crossed the maximum possible count[dec]/[dec] in	A software error occurred. Value of tripcount has been zero or less which is harmful.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS3BAD_TRIPCOUNT	3-Error	Traversed block count crossed the maximum possible count[dec]/[dec] in	A software error occurred. Value of tripcount has been zero or less which is harmful.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-BADBLOCK	3-Error	Bad block pointer [hec]	A block of memory at the indicated location is corrupt. An internal check of memory block pointers indicates an inconsistency.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload then the router will " "need to reloaded manually."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-3-BADBLOCK	3-Error	Bad block pointer [hec]	A block of memory at the indicated location is corrupt. An internal check of memory block pointers indicates an inconsistency.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload then the router will " "need to reloaded manually."
SYS-3-BADBLOCK	3-Error	Bad block pointer [hec]	A block of memory at the indicated location is corrupt. An internal check of memory block pointers indicates an inconsistency.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to auotmatically reload then the router will " "need to reloaded manually."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-3-BADBLOCK	3-Error	Bad block pointer [hec]	A block of memory at the indicated location is corrupt. An internal check of memory block pointers indicates an inconsistency.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to autotmatically reload then the router will " "need to reloaded manually."
SYS-3-BADBLOCK	3-Error	Bad block pointer [hec]	A block of memory at the indicated location is corrupt. An internal check of memory block pointers indicates an inconsistency.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to autotmatically reload then the router will " "need to reloaded manually."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-3-BADBLOCK	3-Error	Bad block pointer [hec]	A block of memory at the indicated location is corrupt. An internal check of memory block pointers indicates an inconsistency.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to autotmatically reload then the router will " "need to reloaded manually."
SYS-3-BADBLOCK	3-Error	Bad block pointer [hec]	A block of memory at the indicated location is corrupt. An internal check of memory block pointers indicates an inconsistency.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to autotmatically reload then the router will " "need to reloaded manually."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-3-BADDISP	3-Error	Bad disposal code [hec] in [chars]	An invalid status code has been passed to a buffer deletion routine. The buffer will be correctly returned to the free pool but will not be correctly counted in the per-protocol statistics.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-BADDISP	3-Error	Bad disposal code [hec] in [chars]	An invalid status code has been passed to a buffer deletion routine. The buffer will be correctly returned to the free pool but will not be correctly counted in the per-protocol statistics.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-BADDISP	3-Error	Bad disposal code [hec] in [chars]	An invalid status code has been passed to a buffer deletion routine. The buffer will be correctly returned to the free pool but will not be correctly counted in the per-protocol statistics.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-BADDISP	3-Error	Bad disposal code [hec] in [chars]	An invalid status code has been passed to a buffer deletion routine. The buffer will be correctly returned to the free pool but will not be correctly counted in the per-protocol statistics.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-3-BADDISP	3-Error	Bad disposal code [hec] in [chars]	An invalid status code has been passed to a buffer deletion routine. The buffer will be correctly returned to the free pool but will not be correctly counted in the per-protocol statistics.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-BADDISP	3-Error	Bad disposal code [hec] in [chars]	An invalid status code has been passed to a buffer deletion routine. The buffer will be correctly returned to the free pool but will not be correctly counted in the per-protocol statistics.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-BADDISP	3-Error	Bad disposal code [hec] in [chars]	An invalid status code has been passed to a buffer deletion routine. The buffer will be correctly returned to the free pool but will not be correctly counted in the per-protocol statistics.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS3-BADFREEMAGIC	3-Error	Corrupt free block at [hec] magic [node]x	A block of memory at the indicated location is corrupt. An inconsistency was detected while checking the free memory area.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."
SYS3-BADFREEMAGIC	3-Error	Corrupt free block at [hec] magic [node]x	A block of memory at the indicated location is corrupt. An inconsistency was detected while checking the free memory area.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-3-BADFREEMAGIC	3-Error	Corrupt free block at [hec] magic [node]x	A block of memory at the indicated location is corrupt. An inconsistency was detected while checking the free memory area.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."
SYS-3-BADFREEMAGIC	3-Error	Corrupt free block at [hec] magic [node]x	A block of memory at the indicated location is corrupt. An inconsistency was detected while checking the free memory area.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS3-BADFREEMAGIC	3-Error	Corrupt free block at [hec] magic [node]x	A block of memory at the indicated location is corrupt. An inconsistency was detected while checking the free memory area.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."
SYS3-BADFREEMAGIC	3-Error	Corrupt free block at [hec] magic [node]x	A block of memory at the indicated location is corrupt. An inconsistency was detected while checking the free memory area.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-3-BADFREEMAGIC	3-Error	Corrupt free block at [hec] magic [node]x	A block of memory at the indicated location is corrupt. An inconsistency was detected while checking the free memory area.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."
SYS-3-BADFREEPTRS	3-Error	Bad [chars] pointer [hec] at [hec] [chars] = [hec]	A pointer in the block header at the indicated location is corrupt. An inconsistency was detected in the free memory pool.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-3-BADFREEPTRS	3-Error	Bad [chars] pointer [hec] at [hec] [chars] = [hec]	A pointer in the block header at the indicated location is corrupt. An inconsistency was detected in the free memory pool.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."
SYS-3-BADFREEPTRS	3-Error	Bad [chars] pointer [hec] at [hec] [chars] = [hec]	A pointer in the block header at the indicated location is corrupt. An inconsistency was detected in the free memory pool.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-3-BADFREPTR	3-Error	Bad [chars] pointer [hec] at [hec] [chars] = [hec]	A pointer in the block header at the indicated location is corrupt. An inconsistency was detected in the free memory pool.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."
SYS-3-BADFREPTR	3-Error	Bad [chars] pointer [hec] at [hec] [chars] = [hec]	A pointer in the block header at the indicated location is corrupt. An inconsistency was detected in the free memory pool.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-3-BADFREEPTRS	3-Error	Bad [chars] pointer [hec] at [hec] [chars] = [hec]	A pointer in the block header at the indicated location is corrupt. An inconsistency was detected in the free memory pool.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."
SYS-3-BADFREEPTRS	3-Error	Bad [chars] pointer [hec] at [hec] [chars] = [hec]	A pointer in the block header at the indicated location is corrupt. An inconsistency was detected in the free memory pool.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."
SYS-3-BADLINKTYPE	3-Error	* Unexpected linktype [dec]	* A software error occurred.	udp	* "Copy the error message exactly as it appears and report it to your " * "technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-3-BADLINKTYPE	3-Error	* Unexpected linktype [dec]	* A software error occurred.	udp	* "Copy the error message exactly as it appears and report it to your " * "technical support representative."
SYS-3-BADLINKTYPE	3-Error	* Unexpected linktype [dec]	* A software error occurred.	udp	* "Copy the error message exactly as it appears and report it to your " * "technical support representative."
SYS-3-BADLINKTYPE	3-Error	* Unexpected linktype [dec]	* A software error occurred.	udp	* "Copy the error message exactly as it appears and report it to your " * "technical support representative."
SYS-3-BADLINKTYPE	3-Error	* Unexpected linktype [dec]	* A software error occurred.	udp	* "Copy the error message exactly as it appears and report it to your " * "technical support representative."
SYS-3-BADLINKTYPE	3-Error	* Unexpected linktype [dec]	* A software error occurred.	udp	* "Copy the error message exactly as it appears and report it to your " * "technical support representative."
SYS-3-BADLINKTYPE	3-Error	* Unexpected linktype [dec]	* A software error occurred.	udp	* "Copy the error message exactly as it appears and report it to your " * "technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS3BADLIST_DESIROY	3-Error	Removed a non-empty list[hec] name: [chars] having [node] elements	A non-empty list should not be destroyed. If it happens there is a possibility that all elements enqueued into the list will never be deallocated. This message reports that an non-empty list got destroyed.	<del>Development/Support/Log</del>	LOG_STD_ACTION
SYS3BADLIST_DESIROY	3-Error	Removed a non-empty list[hec] name: [chars] having [node] elements	A non-empty list should not be destroyed. If it happens there is a possibility that all elements enqueued into the list will never be deallocated. This message reports that an non-empty list got destroyed.	<del>Development/Support/Log</del>	LOG_STD_ACTION
SYS3BADLIST_DESIROY	3-Error	Removed a non-empty list[hec] name: [chars] having [node] elements	A non-empty list should not be destroyed. If it happens there is a possibility that all elements enqueued into the list will never be deallocated. This message reports that an non-empty list got destroyed.	<del>Development/Support/Log</del>	LOG_STD_ACTION
SYS3BADLIST_DESIROY	3-Error	Removed a non-empty list[hec] name: [chars] having [node] elements	A non-empty list should not be destroyed. If it happens there is a possibility that all elements enqueued into the list will never be deallocated. This message reports that an non-empty list got destroyed.	<del>Development/Support/Log</del>	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS3BADLIST_DESIROY	3-Error	Removed a non-empty list[hec] name: [chars] having [node] elements	A non-empty list should not be destroyed. If it happens there is a possibility that all elements enqueued into the list will never be deallocated. This message reports that an non-empty list got destroyed.	<del>Dehcomp61tdqpsncplmce</del>	LOG_STD_ACTION
SYS3BADLIST_DESIROY	3-Error	Removed a non-empty list[hec] name: [chars] having [node] elements	A non-empty list should not be destroyed. If it happens there is a possibility that all elements enqueued into the list will never be deallocated. This message reports that an non-empty list got destroyed.	<del>Dehcomp61tdqpsncplmce</del>	LOG_STD_ACTION
SYS3BADLIST_DESIROY	3-Error	Removed a non-empty list[hec] name: [chars] having [node] elements	A non-empty list should not be destroyed. If it happens there is a possibility that all elements enqueued into the list will never be deallocated. This message reports that an non-empty list got destroyed.	<del>Dehcomp61tdqpsncplmce</del>	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-3-BADMAGIC	3-Error	Corrupt block at [hec] magic [node]x	The free memory pool is corrupt. An inconsistency was detected in the free memory pool.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."
SYS-3-BADMAGIC	3-Error	Corrupt block at [hec] magic [node]x	The free memory pool is corrupt. An inconsistency was detected in the free memory pool.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-3-BADMAGIC	3-Error	Corrupt block at [hec] magic [node]x	The free memory pool is corrupt. An inconsistency was detected in the free memory pool.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."
SYS-3-BADMAGIC	3-Error	Corrupt block at [hec] magic [node]x	The free memory pool is corrupt. An inconsistency was detected in the free memory pool.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-3-BADMAGIC	3-Error	Corrupt block at [hec] magic [node]x	The free memory pool is corrupt. An inconsistency was detected in the free memory pool.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."
SYS-3-BADMAGIC	3-Error	Corrupt block at [hec] magic [node]x	The free memory pool is corrupt. An inconsistency was detected in the free memory pool.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-3-BADMAGIC	3-Error	Corrupt block at [hec] magic [node]x	The free memory pool is corrupt. An inconsistency was detected in the free memory pool.	-	"Copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support representative " "and provide the representative with the gathered information. " "Save any crashinfo or crashdump files. If the router has crashed and " "was not configured to automatically reload the router will " "need to be reloaded manually."
SYS-3-BADPARAM	3-Error	Function [chars]: value [hex] passed in parameter [chars]	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-BADPARAM	3-Error	Function [chars]: value [hex] passed in parameter [chars]	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-BADPARAM	3-Error	Function [chars]: value [hex] passed in parameter [chars]	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-BADPARAM	3-Error	Function [chars]: value [hex] passed in parameter [chars]	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-3-BADPARAM	3-Error	Function [chars]: value [hex] passed in parameter [chars]	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-BADPARAM	3-Error	Function [chars]: value [hex] passed in parameter [chars]	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-BADPARAM	3-Error	Function [chars]: value [hex] passed in parameter [chars]	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-BADPRINT	3-Error	Process has no associated tty in [chars].	An internal software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-BADPRINT	3-Error	Process has no associated tty in [chars].	An internal software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-BADPRINT	3-Error	Process has no associated tty in [chars].	An internal software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-BADPRINT	3-Error	Process has no associated tty in [chars].	An internal software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-3-BADPRINT	3-Error	Process has no associated tty in [chars].	An internal software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-BADPRINT	3-Error	Process has no associated tty in [chars].	An internal software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-BADPRINT	3-Error	Process has no associated tty in [chars].	An internal software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-BADPROCESS	3-Error	Bad process ID [dec] when [chars] process table	An internal software error occurred.	os-scheduler	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-BADPROCESS	3-Error	Bad process ID [dec] when [chars] process table	An internal software error occurred.	os-scheduler	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-BADPROCESS	3-Error	Bad process ID [dec] when [chars] process table	An internal software error occurred.	os-scheduler	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-BADPROCESS	3-Error	Bad process ID [dec] when [chars] process table	An internal software error occurred.	os-scheduler	"Copy the error message exactly as it appears and report it to your " "technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-3-BADPROCESS	3-Error	Bad process ID [dec] when [chars] process table	An internal software error occurred.	os-scheduler	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-BADPROCESS	3-Error	Bad process ID [dec] when [chars] process table	An internal software error occurred.	os-scheduler	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-BADPROCESS	3-Error	Bad process ID [dec] when [chars] process table	An internal software error occurred.	os-scheduler	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-BADPTRVAL	3-Error	Bad pointer value [chars] = [hec] in function [chars]	Corrupted pointer value is encountered.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-BADPTRVAL	3-Error	Bad pointer value [chars] = [hec] in function [chars]	Corrupted pointer value is encountered.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-BADPTRVAL	3-Error	Bad pointer value [chars] = [hec] in function [chars]	Corrupted pointer value is encountered.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-3-BADPTRVAL	3-Error	Bad pointer value [chars] = [hec] in function [chars]	Corrupted pointer value is encountered.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-BADPTRVAL	3-Error	Bad pointer value [chars] = [hec] in function [chars]	Corrupted pointer value is encountered.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-BADPTRVAL	3-Error	Bad pointer value [chars] = [hec] in function [chars]	Corrupted pointer value is encountered.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-BADPTRVAL	3-Error	Bad pointer value [chars] = [hec] in function [chars]	Corrupted pointer value is encountered.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-BADREFCOUNT	3-Error	Bad reference count at [hec] refcount [hec]	An internal software error occurred.	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
SYS-3-BADREFCOUNT	3-Error	Bad reference count at [hec] refcount [hec]	An internal software error occurred.	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS3-BADREFCOUNT	3-Error	Bad reference count at [hec] refcount [hec]	An internal software error occurred.	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
SYS3-BADREFCOUNT	3-Error	Bad reference count at [hec] refcount [hec]	An internal software error occurred.	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
SYS3-BADREFCOUNT	3-Error	Bad reference count at [hec] refcount [hec]	An internal software error occurred.	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
SYS3-BADREFCOUNT	3-Error	Bad reference count at [hec] refcount [hec]	An internal software error occurred.	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
SYS3-BADREFCOUNT	3-Error	Bad reference count at [hec] refcount [hec]	An internal software error occurred.	-	"Copy the error message exactly as it appears and report it to " "your technical support representative."
SYS-3-BADRESID	3-Error	Clock hardware returned bad residual [dec].	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-BADRESID	3-Error	Clock hardware returned bad residual [dec].	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-3-BADRESID	3-Error	Clock hardware returned bad residual [dec].	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-BADRESID	3-Error	Clock hardware returned bad residual [dec].	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-BADRESID	3-Error	Clock hardware returned bad residual [dec].	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-BADRESID	3-Error	Clock hardware returned bad residual [dec].	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-BADRESID	3-Error	Clock hardware returned bad residual [dec].	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS3BADIREPARAM	3-Error	Bad parameter for [chars] passed to tree library function.	This message indicates that a pointer passed to a tree library function is invalid.	-	LOGSIDSHTTECHACION
SYS3BADIREPARAM	3-Error	Bad parameter for [chars] passed to tree library function.	This message indicates that a pointer passed to a tree library function is invalid.	-	LOGSIDSHTTECHACION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS3BADTREEPARAM	3-Error	Bad parameter for [chars] passed to tree library function.	This message indicates that a pointer passed to a tree library function is invalid.	-	LOG_SIDSHTECH_ACTION
SYS3BADTREEPARAM	3-Error	Bad parameter for [chars] passed to tree library function.	This message indicates that a pointer passed to a tree library function is invalid.	-	LOG_SIDSHTECH_ACTION
SYS3BADTREEPARAM	3-Error	Bad parameter for [chars] passed to tree library function.	This message indicates that a pointer passed to a tree library function is invalid.	-	LOG_SIDSHTECH_ACTION
SYS3BADTREEPARAM	3-Error	Bad parameter for [chars] passed to tree library function.	This message indicates that a pointer passed to a tree library function is invalid.	-	LOG_SIDSHTECH_ACTION
SYS3BADTREEPARAM	3-Error	Bad parameter for [chars] passed to tree library function.	This message indicates that a pointer passed to a tree library function is invalid.	-	LOG_SIDSHTECH_ACTION
SYS3-CERF_RECOVER	3-Error	[chars]	This message is emitted when there has been a full recovery after a cache error	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS3-CERF_RECOVER	3-Error	[chars]	This message is emitted when there has been a full recovery after a cache error	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS3-CERF_RECOVER	3-Error	[chars]	This message is emitted when there has been a full recovery after a cache error	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS3-CERF_RECOVER	3-Error	[chars]	This message is emitted when there has been a full recovery after a cache error	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS3-CERF_RECOVER	3-Error	[chars]	This message is emitted when there has been a full recovery after a cache error	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS3-CERF_RECOVER	3-Error	[chars]	This message is emitted when there has been a full recovery after a cache error	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS3-CERF_RECOVER	3-Error	[chars]	This message is emitted when there has been a full recovery after a cache error	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS3CFG_AT_RELOAD	3-Error	System reloading unable to complete startup configuration update	Startup configuration updation is already in progress and reload has been called either from interrupt level or with all interrupts disabled. Reload can not suspend to let startup configuration updation get completed. Startup configuration may get corrupted.	none	"This is a notification message only. No action is required."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS3CFG_AT_RELOAD	3-Error	System reloading unable to complete startup configuration update	Startup configuration updation is already in progress and reload has been called either from interrupt level or with all interrupts disabled. Reload can not suspend to let startup configuration updation get completed. Startup configuration may get corrupted.	none	"This is a notification message only. No action is required."
SYS3CFG_AT_RELOAD	3-Error	System reloading unable to complete startup configuration update	Startup configuration updation is already in progress and reload has been called either from interrupt level or with all interrupts disabled. Reload can not suspend to let startup configuration updation get completed. Startup configuration may get corrupted.	none	"This is a notification message only. No action is required."
SYS3CFG_AT_RELOAD	3-Error	System reloading unable to complete startup configuration update	Startup configuration updation is already in progress and reload has been called either from interrupt level or with all interrupts disabled. Reload can not suspend to let startup configuration updation get completed. Startup configuration may get corrupted.	none	"This is a notification message only. No action is required."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS3CFG_AT_RELOAD	3-Error	System reloading unable to complete startup configuration update	Startup configuration updation is already in progress and reload has been called either from interrupt level or with all interrupts disabled. Reload can not suspend to let startup configuration updation get completed. Startup configuration may get corrupted.	none	"This is a notification message only. No action is required."
SYS3CFG_AT_RELOAD	3-Error	System reloading unable to complete startup configuration update	Startup configuration updation is already in progress and reload has been called either from interrupt level or with all interrupts disabled. Reload can not suspend to let startup configuration updation get completed. Startup configuration may get corrupted.	none	"This is a notification message only. No action is required."
SYS3CFG_AT_RELOAD	3-Error	System reloading unable to complete startup configuration update	Startup configuration updation is already in progress and reload has been called either from interrupt level or with all interrupts disabled. Reload can not suspend to let startup configuration updation get completed. Startup configuration may get corrupted.	none	"This is a notification message only. No action is required."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS3CHLNK_NO_EXMEM	3-Error	No handler to [chars] external memory.	An attempt was made to allocate or free a chunk of external memory but no handler for managing external memory was registered.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS3CHLNK_NO_EXMEM	3-Error	No handler to [chars] external memory.	An attempt was made to allocate or free a chunk of external memory but no handler for managing external memory was registered.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS3CHLNK_NO_EXMEM	3-Error	No handler to [chars] external memory.	An attempt was made to allocate or free a chunk of external memory but no handler for managing external memory was registered.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS3CHLNK_NO_EXMEM	3-Error	No handler to [chars] external memory.	An attempt was made to allocate or free a chunk of external memory but no handler for managing external memory was registered.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS3CHLNK_NO_EXMEM	3-Error	No handler to [chars] external memory.	An attempt was made to allocate or free a chunk of external memory but no handler for managing external memory was registered.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS3CHUNK_NO_EXMEM	3-Error	No handler to [chars] external memory.	An attempt was made to allocate or free a chunk of external memory but no handler for managing external memory was registered.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS3CHUNK_NO_EXMEM	3-Error	No handler to [chars] external memory.	An attempt was made to allocate or free a chunk of external memory but no handler for managing external memory was registered.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS3CONFIG_NO_PRIVATE	3-Error	No space remaining to save private config	A software or hardware error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS3CONFIG_NO_PRIVATE	3-Error	No space remaining to save private config	A software or hardware error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS3CONFIG_NO_PRIVATE	3-Error	No space remaining to save private config	A software or hardware error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS3CONFIG_NO_PRIVATE	3-Error	No space remaining to save private config	A software or hardware error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS3CONFIG_NO_PRIVATE	3-Error	No space remaining to save private config	A software or hardware error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS3CONFIG_NO_PRIVATE	3-Error	No space remaining to save private config	A software or hardware error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS3CONFIG_NO_PRIVATE	3-Error	No space remaining to save private config	A software or hardware error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS3CONFIG_NV_DATA	3-Error	Variable [chars] not set properly in the routine [chars].	The write of the nonvolatile configuration failed because an internal variable was not set properly.	-	"If this messages occurs copy it exactly as it appears and report " "it to your technical support representative."
SYS3CONFIG_NV_DATA	3-Error	Variable [chars] not set properly in the routine [chars].	The write of the nonvolatile configuration failed because an internal variable was not set properly.	-	"If this messages occurs copy it exactly as it appears and report " "it to your technical support representative."
SYS3CONFIG_NV_DATA	3-Error	Variable [chars] not set properly in the routine [chars].	The write of the nonvolatile configuration failed because an internal variable was not set properly.	-	"If this messages occurs copy it exactly as it appears and report " "it to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS3CONFIG_NV_DATA	3-Error	Variable [chars] not set properly in the routine [chars].	The write of the nonvolatile configuration failed because an internal variable was not set properly.	-	"If this messages occurs copy it exactly as it appears and report " "it to your technical support representative."
SYS3CONFIG_NV_DATA	3-Error	Variable [chars] not set properly in the routine [chars].	The write of the nonvolatile configuration failed because an internal variable was not set properly.	-	"If this messages occurs copy it exactly as it appears and report " "it to your technical support representative."
SYS3CONFIG_NV_DATA	3-Error	Variable [chars] not set properly in the routine [chars].	The write of the nonvolatile configuration failed because an internal variable was not set properly.	-	"If this messages occurs copy it exactly as it appears and report " "it to your technical support representative."
SYS3CONFIG_NV_DATA	3-Error	Variable [chars] not set properly in the routine [chars].	The write of the nonvolatile configuration failed because an internal variable was not set properly.	-	"If this messages occurs copy it exactly as it appears and report " "it to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-3-CPUHOG	3-Error	Task is running for [dec]msecs more than [dec]msecs [dec]/[dec]	The indicated process ran too long without relinquishing the processor. Each process should run for a small amount of time and then relinquish the CPU so that other processes can run. This problem can be caused by many things like traffic or system load hardware or operational configuration a configuration change initialization of many interfaces cards or ports for example a high momentary error rate a sustained abnormal	<del>FCM/FCG/FCG/FCG</del>	"If you suspect a software error copy the error message exactly as it " "appears on the console or in the system log contact your technical support" "representative and provide the representative with the gathered information."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-3-CPUHOG	3-Error	Task is running for [dec]msecs more than [dec]msecs [dec]/[dec]	The indicated process ran too long without relinquishing the processor. Each process should run for a small amount of time and then relinquish the CPU so that other processes can run. This problem can be caused by many things like traffic or system load hardware or operational configuration a configuration change initialization of many interfaces cards or ports for example a high momentary error rate a sustained abnormal	<del>MR06</del> <del>MR06</del>	"If you suspect a software error copy the error message exactly as it " "appears on the console or in the system log contact your technical support" "representative and provide the representative with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-3-CPUHOG	3-Error	Task is running for [node]secs more than [dec]msecs [node]%u	The indicated process ran too long without relinquishing the processor. Each process should run for a small amount of time and then relinquish the CPU so that other processes can run. This problem can be caused by many things like traffic or system load hardware or operational configuration a configuration change initialization of many interfaces cards or ports for example a high momentary error rate a sustained abnormal	<del>IBMPC/0</del> <del>IBMPC/0</del> <del>IBMPC/0</del>	"If you suspect a software error copy the error message exactly as it " appears on the colsole or in the system log contact your technical support" "representative and provide the representative with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-3-CPUHOG	3-Error	Task is running for [node]secs more than [dec]msecs [node]%u	The indicated process ran too long without relinquishing the processor. Each process should run for a small amount of time and then relinquish the CPU so that other processes can run. This problem can be caused by many things like traffic or system load hardware or operational configuration a configuration change initialization of many interfaces cards or ports for example a high momentary error rate a sustained abnormal	<del>MR06</del> MR06	"If you suspect a software error copy the error message exactly as it " appears on the colsole or in the system log contact your technical support" "representative and provide the representative with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-3-CPUHOG	3-Error	Task is running for [node]secs more than [dec]msecs [node]%u	The indicated process ran too long without relinquishing the processor. Each process should run for a small amount of time and then relinquish the CPU so that other processes can run. This problem can be caused by many things like traffic or system load hardware or operational configuration a configuration change initialization of many interfaces cards or ports for example a high momentary error rate a sustained abnormal	<del>IBMPCOMP</del> <del>IBMPCOMP</del>	"If you suspect a software error copy the error message exactly as it "appears on the colsole or in the system log contact your technical support" "representative and provide the representative with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-3-CPUHOG	3-Error	Task is running for [node]secs more than [dec]msecs [node]%u	The indicated process ran too long without relinquishing the processor. Each process should run for a small amount of time and then relinquish the CPU so that other processes can run. This problem can be caused by many things like traffic or system load hardware or operational configuration a configuration change initialization of many interfaces cards or ports for example a high momentary error rate a sustained abnormal	<del>IBMPC/6110/IBMPC/6110/IBMPC/6110/IBMPC/6110</del>	"If you suspect a software error copy the error message exactly as it " appears on the colsole or in the system log contact your technical support" "representative and provide the representative with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-3-CPUHOG	3-Error	Task is running for [node]secs more than [dec]msecs [node]%u	The indicated process ran too long without relinquishing the processor. Each process should run for a small amount of time and then relinquish the CPU so that other processes can run. This problem can be caused by many things like traffic or system load hardware or operational configuration a configuration change initialization of many interfaces cards or ports for example a high momentary error rate a sustained abnormal	<del>MEMRCOMP</del> <del>MEMRCOMP</del>	"If you suspect a software error copy the error message exactly as it " "appears on the colsole or in the system log contact your technical support" "representative and provide the representative with the gathered information."
SYS3CRASHINFONIFAIL	3-Error	Crashinfo subsys initialization did not add registry \n\ <del>crashinfo_get_default_file_name</del>	In order to figure out the device which the crashinfo writes to the crashinfo subsys has to add the registry <del>crashinfo_get_default_file_name</del>	-	"Use Topic to search for a similar DDTS. If you find none write " "a DDTS for this problem. This SHOULD never happen - it is an " "indication of a bug elsewhere in the code."
SYS3CRASHINFONIFAIL	3-Error	Crashinfo subsys initialization did not add registry \n\ <del>crashinfo_get_default_file_name</del>	In order to figure out the device which the crashinfo writes to the crashinfo subsys has to add the registry <del>crashinfo_get_default_file_name</del>	-	"Use Topic to search for a similar DDTS. If you find none write " "a DDTS for this problem. This SHOULD never happen - it is an " "indication of a bug elsewhere in the code."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS3CRASHINFOIFAL	3-Error	Crashinfo subsys initialization did not add registry \n\ncrashinfo_get_default_file_name	In order to figure out the device which the crashinfo writes to the crashinfo subsys has to add the registry crashinfo_get_default_file_name	-	"Use Topic to search for a similar DDTS. If you find none write " "a DDTS for this problem. This SHOULD never happen - it is an " "indication of a bug elsewhere in the code."
SYS3CRASHINFOIFAL	3-Error	Crashinfo subsys initialization did not add registry \n\ncrashinfo_get_default_file_name	In order to figure out the device which the crashinfo writes to the crashinfo subsys has to add the registry crashinfo_get_default_file_name	-	"Use Topic to search for a similar DDTS. If you find none write " "a DDTS for this problem. This SHOULD never happen - it is an " "indication of a bug elsewhere in the code."
SYS3CRASHINFOIFAL	3-Error	Crashinfo subsys initialization did not add registry \n\ncrashinfo_get_default_file_name	In order to figure out the device which the crashinfo writes to the crashinfo subsys has to add the registry crashinfo_get_default_file_name	-	"Use Topic to search for a similar DDTS. If you find none write " "a DDTS for this problem. This SHOULD never happen - it is an " "indication of a bug elsewhere in the code."
SYS3CRASHINFOIFAL	3-Error	Crashinfo subsys initialization did not add registry \n\ncrashinfo_get_default_file_name	In order to figure out the device which the crashinfo writes to the crashinfo subsys has to add the registry crashinfo_get_default_file_name	-	"Use Topic to search for a similar DDTS. If you find none write " "a DDTS for this problem. This SHOULD never happen - it is an " "indication of a bug elsewhere in the code."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS3CRASHINFONIFAIL	3-Error	Crashinfo subsystem initialization did not add registry \n\ncrashinfo_get_default_file_name	In order to figure out the device which the crashinfo writes to the crashinfo subsystem has to add the registry crashinfo_get_default_file_name	-	"Use Topic to search for a similar DDTS. If you find none write " "a DDTS for this problem. This SHOULD never happen - it is an " "indication of a bug elsewhere in the code."
SYS-3-CRITMEM	3-Error	[chars]	An attempt to allow or disallow a process from using memory that has been reserved for critical purposes has failed. The location of the failure is specified in the error message. This condition could possibly be caused by a software error.	mem-suspect	"Copy the error message and the traceback messages exactly as they appear " "on the console or in the system log contact your technical support " "representative and provide the representative with the gathered " "information."
SYS-3-CRITMEM	3-Error	[chars]	An attempt to allow or disallow a process from using memory that has been reserved for critical purposes has failed. The location of the failure is specified in the error message. This condition could possibly be caused by a software error.	mem-suspect	"Copy the error message and the traceback messages exactly as they appear " "on the console or in the system log contact your technical support " "representative and provide the representative with the gathered " "information."



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-3-CRITMEM	3-Error	[chars]	An attempt to allow or disallow a process from using memory that has been reserved for critical purposes has failed. The location of the failure is specified in the error message. This condition could possibly be caused by a software error.	mem-suspect	"Copy the error message and the traceback messages exactly as they appear " "on the colsole or in the system log contact your technical support " "representative and provide the representative with the gathered " "information."
SYS-3-CRITMEM	3-Error	[chars]	An attempt to allow or disallow a process from using memory that has been reserved for critical purposes has failed. The location of the failure is specified in the error message. This condition could possibly be caused by a software error.	mem-suspect	"Copy the error message and the traceback messages exactly as they appear " "on the colsole or in the system log contact your technical support " "representative and provide the representative with the gathered " "information."
SYS-3-CRITMEM	3-Error	[chars]	An attempt to allow or disallow a process from using memory that has been reserved for critical purposes has failed. The location of the failure is specified in the error message. This condition could possibly be caused by a software error.	mem-suspect	"Copy the error message and the traceback messages exactly as they appear " "on the colsole or in the system log contact your technical support " "representative and provide the representative with the gathered " "information."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-3-CRITMEM	3-Error	[chars]	An attempt to allow or disallow a process from using memory that has been reserved for critical purposes has failed. The location of the failure is specified in the error message. This condition could possibly be caused by a software error.	mem-suspect	"Copy the error message and the traceback messages exactly as they appear " "on the colsole or in the system log contact your technical support " "representative and provide the representative with the gathered " "information."
SYS-3-CRITMEM	3-Error	[chars]	An attempt to allow or disallow a process from using memory that has been reserved for critical purposes has failed. The location of the failure is specified in the error message. This condition could possibly be caused by a software error.	mem-suspect	"Copy the error message and the traceback messages exactly as they appear " "on the colsole or in the system log contact your technical support " "representative and provide the representative with the gathered " "information."
SYS-3-DMPMEM	3-Error	[node]x: [node]x [node]x [node]x [node]x [node]x [node]x	A software or hardware error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-DMPMEM	3-Error	[node]x: [node]x [node]x [node]x [node]x [node]x [node]x	A software or hardware error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-DMPMEM	3-Error	[node]x: [node]x [node]x [node]x [node]x [node]x [node]x	A software or hardware error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-3-DMPMEM	3-Error	[node]x: [node]x [node]x [node]x [node]x [node]x [node]x	A software or hardware error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-DMPMEM	3-Error	[node]x: [node]x [node]x [node]x [node]x [node]x [node]x	A software or hardware error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-DMPMEM	3-Error	[node]x: [node]x [node]x [node]x [node]x [node]x [node]x	A software or hardware error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-DMPMEM	3-Error	[node]x: [node]x [node]x [node]x [node]x [node]x [node]x	A software or hardware error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-DUP_TIMER	3-Error	Same tty[node]in linewatch_timers type [dec]	A tty appeared twice in a timer list where it should have only appeared once.	exec	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-DUP_TIMER	3-Error	Same tty[node]in linewatch_timers type [dec]	A tty appeared twice in a timer list where it should have only appeared once.	exec	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-DUP_TIMER	3-Error	Same tty[node]in linewatch_timers type [dec]	A tty appeared twice in a timer list where it should have only appeared once.	exec	"Copy the error message exactly as it appears and report it to your " "technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-3-DUP_TIMER	3-Error	Same tty[node]in linewatch_timers type [dec]	A tty appeared twice in a timer list where it should have only appeared once.	exec	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-DUP_TIMER	3-Error	Same tty[node]in linewatch_timers type [dec]	A tty appeared twice in a timer list where it should have only appeared once.	exec	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-DUP_TIMER	3-Error	Same tty[node]in linewatch_timers type [dec]	A tty appeared twice in a timer list where it should have only appeared once.	exec	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-DUP_TIMER	3-Error	Same tty[node]in linewatch_timers type [dec]	A tty appeared twice in a timer list where it should have only appeared once.	exec	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-GD_STACKERR	3-Error	Unknown stack. Process: [chars]\n	An internal error occurred when running the memory leak detector	mem	"Copy the error message exactly as it appears on the console or in the" " system log and look up the message in the Bug Toolkit at:" " " <a href="http://www.ibm.com/ibm/bug/">http://www.ibm.com/ibm/bug/</a> If you are " " unable to resolve the issue using Bug Toolkit please issue a " " \"show tech\" and contact your technical support representative" " with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-3-GD_STACKERR	3-Error	Unknown stack. Process: [chars]\n	An internal error occurred when running the memory leak detector	mem	"Copy the error message exactly as it appears on the console or in the" " system log and look up the message in the Bug Toolkit at:" " " <del>http://www.ibm.com/ibm/bugtoolkit/</del> If you are" " unable to resolve the issue using Bug Toolkit please issue a" " "\show tech\" and contact your technical support representative" " with the gathered information."
SYS-3-GD_STACKERR	3-Error	Unknown stack. Process: [chars]\n	An internal error occurred when running the memory leak detector	mem	"Copy the error message exactly as it appears on the console or in the" " system log and look up the message in the Bug Toolkit at:" " " <del>http://www.ibm.com/ibm/bugtoolkit/</del> If you are" " unable to resolve the issue using Bug Toolkit please issue a" " "\show tech\" and contact your technical support representative" " with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-3-GD_STACKERR	3-Error	Unknown stack. Process: [chars]\n	An internal error occurred when running the memory leak detector	mem	"Copy the error message exactly as it appears on the console or in the " " system log and look up the message in the Bug Toolkit at:" " " <del>http://www.ibm.com/ibm/bugzilla/</del> If you are " " unable to resolve the issue using Bug Toolkit please issue a " " \"show tech\" and contact your technical support representative" " with the gathered information."
SYS-3-GD_STACKERR	3-Error	Unknown stack. Process: [chars]\n	An internal error occurred when running the memory leak detector	mem	"Copy the error message exactly as it appears on the console or in the " " system log and look up the message in the Bug Toolkit at:" " " <del>http://www.ibm.com/ibm/bugzilla/</del> If you are " " unable to resolve the issue using Bug Toolkit please issue a " " \"show tech\" and contact your technical support representative" " with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-3-GD_STACKERR	3-Error	Unknown stack. Process: [chars]\n	An internal error occurred when running the memory leak detector	mem	"Copy the error message exactly as it appears on the console or in the" " system log and look up the message in the Bug Toolkit at:" " <del>http://www.ibm.com/ibm/bugtoolkit/</del> If you are" " unable to resolve the issue using Bug Toolkit please issue a" " \"show tech\" and contact your technical support representative" " with the gathered information."
SYS-3-GD_STACKERR	3-Error	Unknown stack. Process: [chars]\n	An internal error occurred when running the memory leak detector	mem	"Copy the error message exactly as it appears on the console or in the" " system log and look up the message in the Bug Toolkit at:" " <del>http://www.ibm.com/ibm/bugtoolkit/</del> If you are" " unable to resolve the issue using Bug Toolkit please issue a" " \"show tech\" and contact your technical support representative" " with the gathered information."
SYS-3-HARIKARI	3-Error	Process [chars] top-level routine exited	An internal software error occurred	<del>Development/Support/bugtoolkit</del>	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-3-HARIKARI	3-Error	Process [chars] top-level routine exited	An internal software error occurred	<del>Device-Subsystem-Channel</del>	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-HARIKARI	3-Error	Process [chars] top-level routine exited	An internal software error occurred	<del>Device-Subsystem-Channel</del>	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-HARIKARI	3-Error	Process [chars] top-level routine exited	An internal software error occurred	<del>Device-Subsystem-Channel</del>	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-HARIKARI	3-Error	Process [chars] top-level routine exited	An internal software error occurred	<del>Device-Subsystem-Channel</del>	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-HARIKARI	3-Error	Process [chars] top-level routine exited	An internal software error occurred	<del>Device-Subsystem-Channel</del>	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-HARIKARI	3-Error	Process [chars] top-level routine exited	An internal software error occurred	<del>Device-Subsystem-Channel</del>	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS3-HTIMER_EXPAND	3-Error	timer heap at 0x[hec] needed to expand but hasn't	A timer heap should have expanded but has not	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS3-HTIMER_EXPAND	3-Error	timer heap at 0x[hec] needed to expand but hasn't	A timer heap should have expanded but has not	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS3-HTIMER_EXPAND	3-Error	timer heap at 0x[hec] needed to expand but hasn't	A timer heap should have expanded but has not	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS3-HTIMER_EXPAND	3-Error	timer heap at 0x[hec] needed to expand but hasn't	A timer heap should have expanded but has not	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS3-HTIMER_EXPAND	3-Error	timer heap at 0x[hec] needed to expand but hasn't	A timer heap should have expanded but has not	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS3-HTIMER_EXPAND	3-Error	timer heap at 0x[hec] needed to expand but hasn't	A timer heap should have expanded but has not	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS3-HTIMER_EXPAND	3-Error	timer heap at 0x[hec] needed to expand but hasn't	A timer heap should have expanded but has not	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS3-HTIMER_EXPAND	3-Error	timer heap at 0x[hec] needed to expand but hasn't	A timer heap should have expanded but has not	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-3-HTIMER_INIT	3-Error	heap timer at 0x[hec] has not been initialized	A heap timer has not been initialized	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-HTIMER_INIT	3-Error	heap timer at 0x[hec] has not been initialized	A heap timer has not been initialized	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-HTIMER_INIT	3-Error	heap timer at 0x[hec] has not been initialized	A heap timer has not been initialized	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-HTIMER_INIT	3-Error	heap timer at 0x[hec] has not been initialized	A heap timer has not been initialized	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-HTIMER_INIT	3-Error	heap timer at 0x[hec] has not been initialized	A heap timer has not been initialized	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-HTIMER_INIT	3-Error	heap timer at 0x[hec] has not been initialized	A heap timer has not been initialized	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-HTIMER_INIT	3-Error	heap timer at 0x[hec] has not been initialized	A heap timer has not been initialized	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-HTIMER_INIT	3-Error	heap timer at 0x[hec] has not been initialized	A heap timer has not been initialized	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-3-HTIMER_STATE	3-Error	heap timer at 0x[hec] in state [dec]	A heap timer has not been initialized	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-HTIMER_STATE	3-Error	heap timer at 0x[hec] in state [dec]	A heap timer has not been initialized	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-HTIMER_STATE	3-Error	heap timer at 0x[hec] in state [dec]	A heap timer has not been initialized	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-HTIMER_STATE	3-Error	heap timer at 0x[hec] in state [dec]	A heap timer has not been initialized	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-HTIMER_STATE	3-Error	heap timer at 0x[hec] in state [dec]	A heap timer has not been initialized	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-HTIMER_STATE	3-Error	heap timer at 0x[hec] in state [dec]	A heap timer has not been initialized	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-HTIMER_STATE	3-Error	heap timer at 0x[hec] in state [dec]	A heap timer has not been initialized	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-HTIMER_STATE	3-Error	heap timer at 0x[hec] in state [dec]	A heap timer has not been initialized	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS3-IMAGE_TOO_BIG	3-Error	'[chars]' is too large for available memory [dec] bytes.	The allocated memory for the image is too small to hold the image file.	-	"Increase the amount of memory available in the router by booting " "with a smaller image not enabling non-essential sub-systems " "or upgrading the installed memory. Call your technical " "support representative for assistance."
SYS3-IMAGE_TOO_BIG	3-Error	'[chars]' is too large for available memory [dec] bytes.	The allocated memory for the image is too small to hold the image file.	-	"Increase the amount of memory available in the router by booting " "with a smaller image not enabling non-essential sub-systems " "or upgrading the installed memory. Call your technical " "support representative for assistance."
SYS3-IMAGE_TOO_BIG	3-Error	'[chars]' is too large for available memory [dec] bytes.	The allocated memory for the image is too small to hold the image file.	-	"Increase the amount of memory available in the router by booting " "with a smaller image not enabling non-essential sub-systems " "or upgrading the installed memory. Call your technical " "support representative for assistance."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-3-IMAGE_TOO_BIG	3-Error	'[chars]' is too large for available memory [dec] bytes.	The allocated memory for the image is too small to hold the image file.	-	"Increase the amount of memory available in the router by booting " "with a smaller image not enabling non-essential sub-systems " "or upgrading the installed memory. Call your technical " "support representative for assistance."
SYS-3-IMAGE_TOO_BIG	3-Error	'[chars]' is too large for available memory [dec] bytes.	The allocated memory for the image is too small to hold the image file.	-	"Increase the amount of memory available in the router by booting " "with a smaller image not enabling non-essential sub-systems " "or upgrading the installed memory. Call your technical " "support representative for assistance."
SYS-3-IMAGE_TOO_BIG	3-Error	'[chars]' is too large for available memory [dec] bytes.	The allocated memory for the image is too small to hold the image file.	-	"Increase the amount of memory available in the router by booting " "with a smaller image not enabling non-essential sub-systems " "or upgrading the installed memory. Call your technical " "support representative for assistance."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS3-IMAGE_TOO_BIG	3-Error	'[chars]' is too large for available memory [dec] bytes.	The allocated memory for the image is too small to hold the image file.	-	"Increase the amount of memory available in the router by booting " "with a smaller image not enabling non-essential sub-systems " "or upgrading the installed memory. Call your technical " "support representative for assistance."
SYS-3-INTPRINT	3-Error	Illegal printing attempt from interrupt level.	An internal software error occurred.	ES-4112-3-INTPRINT	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-INTPRINT	3-Error	Illegal printing attempt from interrupt level.	An internal software error occurred.	ES-4112-3-INTPRINT	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-INTPRINT	3-Error	Illegal printing attempt from interrupt level.	An internal software error occurred.	ES-4112-3-INTPRINT	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-INTPRINT	3-Error	Illegal printing attempt from interrupt level.	An internal software error occurred.	ES-4112-3-INTPRINT	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-INTPRINT	3-Error	Illegal printing attempt from interrupt level.	An internal software error occurred.	ES-4112-3-INTPRINT	"Copy the error message exactly as it appears and report it to your " "technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-3-INTPRINT	3-Error	Illegal printing attempt from interrupt level.	An internal software error occurred.	IOS	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-INTPRINT	3-Error	Illegal printing attempt from interrupt level.	An internal software error occurred.	IOS	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-INTUNWEDGE	3-Error	[node]u packets where forcefully unwedged [node]u packets were forcefully deallocated	This is an auxiliary message to indicate that packet buffers were\n forcefully deallocated/unaccounted from interfaces through CLI.	IOS	"This message is to explicitly notify that packets were forcefully\n" "deallocated/unaccounted. If the router is facing other problems\n" "for which you are contacting your technical support representative\n" "copy this error message to as it appears and provide this information\n" "too."
SYS-3-INTUNWEDGE	3-Error	[node]u packets where forcefully unwedged [node]u packets were forcefully deallocated	This is an auxiliary message to indicate that packet buffers were\n forcefully deallocated/unaccounted from interfaces through CLI.	IOS	"This message is to explicitly notify that packets were forcefully\n" "deallocated/unaccounted. If the router is facing other problems\n" "for which you are contacting your technical support representative\n" "copy this error message to as it appears and provide this information\n" "too."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-3-INUSEFREE	3-Error	Block [hec] on free list [dec] in use	A memory management function attempted to allocate the indicated block from a list of free blocks. However the block was found to be already in use.	-	-
SYS-3-INUSEFREE	3-Error	Block [hec] on free list [dec] in use	A memory management function attempted to allocate the indicated block from a list of free blocks. However the block was found to be already in use.	-	-
SYS-3-INUSEFREE	3-Error	Block [hec] on free list [dec] in use	A memory management function attempted to allocate the indicated block from a list of free blocks. However the block was found to be already in use.	-	-
SYS-3-INUSEFREE	3-Error	Block [hec] on free list [dec] in use	A memory management function attempted to allocate the indicated block from a list of free blocks. However the block was found to be already in use.	-	-
SYS-3-INUSEFREE	3-Error	Block [hec] on free list [dec] in use	A memory management function attempted to allocate the indicated block from a list of free blocks. However the block was found to be already in use.	-	-



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-3-INUSEFREE	3-Error	Block [hec] on free list [dec] in use	A memory management function attempted to allocate the indicated block from a list of free blocks. However the block was found to be already in use.	-	-
SYS-3-INUSEFREE	3-Error	Block [hec] on free list [dec] in use	A memory management function attempted to allocate the indicated block from a list of free blocks. However the block was found to be already in use.	-	-
SYS-3-INVMEMINT	3-Error	Invalid memory action [chars] at interrupt level	This message indicates that a memory allocation or deallocation was attempted from an interrupt handler.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-INVMEMINT	3-Error	Invalid memory action [chars] at interrupt level	This message indicates that a memory allocation or deallocation was attempted from an interrupt handler.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-INVMEMINT	3-Error	Invalid memory action [chars] at interrupt level	This message indicates that a memory allocation or deallocation was attempted from an interrupt handler.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-3-INVMEMINT	3-Error	Invalid memory action [chars] at interrupt level	This message indicates that a memory allocation or deallocation was attempted from an interrupt handler.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-INVMEMINT	3-Error	Invalid memory action [chars] at interrupt level	This message indicates that a memory allocation or deallocation was attempted from an interrupt handler.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-INVMEMINT	3-Error	Invalid memory action [chars] at interrupt level	This message indicates that a memory allocation or deallocation was attempted from an interrupt handler.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-INVMEMINT	3-Error	Invalid memory action [chars] at interrupt level	This message indicates that a memory allocation or deallocation was attempted from an interrupt handler.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-INVMEMPID	3-Error	Invalid pid [dec] in block: [hec]	There has been attempt to allocate memory on behalf of an invalid process.	mem	-
SYS-3-INVMEMPID	3-Error	Invalid pid [dec] in block: [hec]	There has been attempt to allocate memory on behalf of an invalid process.	mem	-
SYS-3-INVMEMPID	3-Error	Invalid pid [dec] in block: [hec]	There has been attempt to allocate memory on behalf of an invalid process.	mem	-
SYS-3-INVMEMPID	3-Error	Invalid pid [dec] in block: [hec]	There has been attempt to allocate memory on behalf of an invalid process.	mem	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-3-INVMEMPID	3-Error	Invalid pid [dec] in block: [hec]	There has been attempt to allocate memory on behalf of an invalid process.	mem	-
SYS-3-INVMEMPID	3-Error	Invalid pid [dec] in block: [hec]	There has been attempt to allocate memory on behalf of an invalid process.	mem	-
SYS-3-INVMEMPID	3-Error	Invalid pid [dec] in block: [hec]	There has been attempt to allocate memory on behalf of an invalid process.	mem	-
<del>SS00GRCONS0CHK</del>	3-Error	System cannot release chunk memory.\n	The system was not able to destroy a previously allocated chunk of memory.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
<del>SS00GRCONS0CHK</del>	3-Error	System cannot release chunk memory.\n	The system was not able to destroy a previously allocated chunk of memory.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
<del>SS00GRCONS0CHK</del>	3-Error	System cannot release chunk memory.\n	The system was not able to destroy a previously allocated chunk of memory.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
<del>SS00GRCONS0CHK</del>	3-Error	System cannot release chunk memory.\n	The system was not able to destroy a previously allocated chunk of memory.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
<del>SS00GRCONS0CHK</del>	3-Error	System cannot release chunk memory.\n	The system was not able to destroy a previously allocated chunk of memory.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SSLOGRCONSCHK</del>	3-Error	System cannot release chunk memory.\n	The system was not able to destroy a previously allocated chunk of memory.	-	"Copy the error message exactly as it appears and report it to your "technical support representative."
<del>SSLOGRCONSCHK</del>	3-Error	System cannot release chunk memory.\n	The system was not able to destroy a previously allocated chunk of memory.	-	"Copy the error message exactly as it appears and report it to your "technical support representative."
SYS3LOGGER_DROPPED	3-Error	System dropped [dec] console debug messages.\n	Debugging or informational messages are being generated faster than they can be displayed on the console. The messages can not be guaranteed to be seen so this message replaces the lost messages.	-	"Consider using conditional debugging or turning off console logging."
SYS3LOGGER_DROPPED	3-Error	System dropped [dec] console debug messages.\n	Debugging or informational messages are being generated faster than they can be displayed on the console. The messages can not be guaranteed to be seen so this message replaces the lost messages.	-	"Consider using conditional debugging or turning off console logging."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS3LOGGER_DROPPED	3-Error	System dropped [dec] console debug messages.\n	Debugging or informational messages are being generated faster than they can be displayed on the console. The messages can not be guaranteed to be seen so this message replaces the lost messages.	-	"Consider using conditional debugging or turning off console logging."
SYS3LOGGER_DROPPED	3-Error	System dropped [dec] console debug messages.\n	Debugging or informational messages are being generated faster than they can be displayed on the console. The messages can not be guaranteed to be seen so this message replaces the lost messages.	-	"Consider using conditional debugging or turning off console logging."
SYS3LOGGER_DROPPED	3-Error	System dropped [dec] console debug messages.\n	Debugging or informational messages are being generated faster than they can be displayed on the console. The messages can not be guaranteed to be seen so this message replaces the lost messages.	-	"Consider using conditional debugging or turning off console logging."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS3LOGGER_DROPPED	3-Error	System dropped [dec] console debug messages.\n	Debugging or informational messages are being generated faster than they can be displayed on the console. The messages can not be guaranteed to be seen so this message replaces the lost messages.	-	"Consider using conditional debugging or turning off console logging."
SYS3LOGGER_DROPPED	3-Error	System dropped [dec] console debug messages.\n	Debugging or informational messages are being generated faster than they can be displayed on the console. The messages can not be guaranteed to be seen so this message replaces the lost messages.	-	"Consider using conditional debugging or turning off console logging."
SYS3LOGGER_FLUSHED	3-Error	System was paused for [node] to ensure console debugging output.\n	Debugging or informational messages are being generated faster than they can be displayed on the console. In order to guarantee that they can be seen the rest of the system was paused until the console output catches up. This can break time-critical behavior such as maintaining an ISDN link.	-	"Consider using conditional debugging turning off console logging " "or using the \"no logging console guaranteed\" command or turning " "off link-state messages for some interfaces"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS3LOGGER_FLUSHED	3-Error	System was paused for [node] to ensure console debugging output.\n	Debugging or informational messages are being generated faster than they can be displayed on the console. In order to guarantee that they can be seen the rest of the system was paused until the console output catches up. This can break time-critical behavior such as maintaining an ISDN link.	-	"Consider using conditional debugging turning off console logging " "or using the \"no logging console guaranteed\" command or turning " "off link-state messages for some interfaces"
SYS3LOGGER_FLUSHED	3-Error	System was paused for [node] to ensure console debugging output.\n	Debugging or informational messages are being generated faster than they can be displayed on the console. In order to guarantee that they can be seen the rest of the system was paused until the console output catches up. This can break time-critical behavior such as maintaining an ISDN link.	-	"Consider using conditional debugging turning off console logging " "or using the \"no logging console guaranteed\" command or turning " "off link-state messages for some interfaces"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS3LOGGER_FLUSHED	3-Error	System was paused for [node] to ensure console debugging output.\n	Debugging or informational messages are being generated faster than they can be displayed on the console. In order to guarantee that they can be seen the rest of the system was paused until the console output catches up. This can break time-critical behavior such as maintaining an ISDN link.	-	"Consider using conditional debugging turning off console logging " "or using the \"no logging console guaranteed\" command or turning " "off link-state messages for some interfaces"
SYS3LOGGER_FLUSHED	3-Error	System was paused for [node] to ensure console debugging output.\n	Debugging or informational messages are being generated faster than they can be displayed on the console. In order to guarantee that they can be seen the rest of the system was paused until the console output catches up. This can break time-critical behavior such as maintaining an ISDN link.	-	"Consider using conditional debugging turning off console logging " "or using the \"no logging console guaranteed\" command or turning " "off link-state messages for some interfaces"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS3LOGGER_FLUSHED	3-Error	System was paused for [node] to ensure console debugging output.\n	Debugging or informational messages are being generated faster than they can be displayed on the console. In order to guarantee that they can be seen the rest of the system was paused until the console output catches up. This can break time-critical behavior such as maintaining an ISDN link.	-	"Consider using conditional debugging turning off console logging " "or using the \"no logging console guaranteed\" command or turning " "off link-state messages for some interfaces"
SYS3LOGGER_FLUSHED	3-Error	System was paused for [node] to ensure console debugging output.\n	Debugging or informational messages are being generated faster than they can be displayed on the console. In order to guarantee that they can be seen the rest of the system was paused until the console output catches up. This can break time-critical behavior such as maintaining an ISDN link.	-	"Consider using conditional debugging turning off console logging " "or using the \"no logging console guaranteed\" command or turning " "off link-state messages for some interfaces"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS3LOGGER_FLUSHING	3-Error	System pausing to ensure console debugging output.\n	Debugging or informational messages are being generated faster than they can be displayed on the console. In order to guarantee that they can be seen the rest of the system is paused until the console output catches up. This can break time-critical behavior such as maintaining an ISDN link.	-	"Consider using conditional debugging turning off console logging " "or using the \"no logging console guaranteed\" command or turning " "off link-state messages for some interfaces"
SYS3LOGGER_FLUSHING	3-Error	System pausing to ensure console debugging output.\n	Debugging or informational messages are being generated faster than they can be displayed on the console. In order to guarantee that they can be seen the rest of the system is paused until the console output catches up. This can break time-critical behavior such as maintaining an ISDN link.	-	"Consider using conditional debugging turning off console logging " "or using the \"no logging console guaranteed\" command or turning " "off link-state messages for some interfaces"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS3LOGGER_FLUSHING	3-Error	System pausing to ensure console debugging output.\n	Debugging or informational messages are being generated faster than they can be displayed on the console. In order to guarantee that they can be seen the rest of the system is paused until the console output catches up. This can break time-critical behavior such as maintaining an ISDN link.	-	"Consider using conditional debugging turning off console logging " "or using the \"no logging console guaranteed\" command or turning " "off link-state messages for some interfaces"
SYS3LOGGER_FLUSHING	3-Error	System pausing to ensure console debugging output.\n	Debugging or informational messages are being generated faster than they can be displayed on the console. In order to guarantee that they can be seen the rest of the system is paused until the console output catches up. This can break time-critical behavior such as maintaining an ISDN link.	-	"Consider using conditional debugging turning off console logging " "or using the \"no logging console guaranteed\" command or turning " "off link-state messages for some interfaces"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS3LOGGER_FLUSHING	3-Error	System pausing to ensure console debugging output.\n	Debugging or informational messages are being generated faster than they can be displayed on the console. In order to guarantee that they can be seen the rest of the system is paused until the console output catches up. This can break time-critical behavior such as maintaining an ISDN link.	-	"Consider using conditional debugging turning off console logging " "or using the \"no logging console guaranteed\" command or turning " "off link-state messages for some interfaces"
SYS3LOGGER_FLUSHING	3-Error	System pausing to ensure console debugging output.\n	Debugging or informational messages are being generated faster than they can be displayed on the console. In order to guarantee that they can be seen the rest of the system is paused until the console output catches up. This can break time-critical behavior such as maintaining an ISDN link.	-	"Consider using conditional debugging turning off console logging " "or using the \"no logging console guaranteed\" command or turning " "off link-state messages for some interfaces"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS3LOGGER_FLUSHING	3-Error	System pausing to ensure console debugging output.\n	Debugging or informational messages are being generated faster than they can be displayed on the console. In order to guarantee that they can be seen the rest of the system is paused until the console output catches up. This can break time-critical behavior such as maintaining an ISDN link.	-	"Consider using conditional debugging turning off console logging " "or using the "\no logging console guaranteed\" command or turning " "off link-state messages for some interfaces"
<del>SYS3LOGGHOST_CONN_FAIL</del>	3-Error	Unable to setup connection with host [chars] port [dec]	Unable to setup a connection with specified server or hostvrf check weather the syslog host is reachable	os-logging	LOG_SID_NO_ACTION
<del>SYS3LOGGHOST_CONN_FAIL</del>	3-Error	Unable to setup connection with host [chars] port [dec]	Unable to setup a connection with specified server or hostvrf check weather the syslog host is reachable	os-logging	LOG_SID_NO_ACTION
SYS3LOGGNGHOST_FAIL	3-Error	Logging to host [chars] port [dec] failed \n	Logging syslog messages to specified server or host failed please check if the host is configured properly and reachable	os-logging	LOG_SID_NO_ACTION
SYS3LOGGNGHOST_FAIL	3-Error	Logging to host [chars] port [dec] failed \n	Logging syslog messages to specified server or host failed please check if the host is configured properly and reachable	os-logging	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-3-MEMLITE	3-Error	Free lite called for non lite chunk by '[node]	Memory lite error: free_lite_internal is passed a non lite chunk	mem	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
SYS-3-MEMLITE	3-Error	Free lite called for non lite chunk by '[node]	Memory lite error: free_lite_internal is passed a non lite chunk	mem	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
SYS-3-MEMSEMFAIL	3-Error	Mempool semaphore creation failed for [chars]	This message indicates that the semaphore creation for the specified mempool failed.	-	-
SYS-3-MEMSEMFAIL	3-Error	Mempool semaphore creation failed for [chars]	This message indicates that the semaphore creation for the specified mempool failed.	-	-
SYS-3-MEMSEMFAIL	3-Error	Mempool semaphore creation failed for [chars]	This message indicates that the semaphore creation for the specified mempool failed.	-	-
SYS-3-MEMSEMFAIL	3-Error	Mempool semaphore creation failed for [chars]	This message indicates that the semaphore creation for the specified mempool failed.	-	-
SYS-3-MEMSEMFAIL	3-Error	Mempool semaphore creation failed for [chars]	This message indicates that the semaphore creation for the specified mempool failed.	-	-
SYS-3-MEMSEMFAIL	3-Error	Mempool semaphore creation failed for [chars]	This message indicates that the semaphore creation for the specified mempool failed.	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-3-MEMSEMFAIL	3-Error	Mempool semaphore creation failed for [chars]	This message indicates that the semaphore creation for the specified mempool failed.	-	-
<del>SYS-3-MEMSEMFAIL</del>	3-Error	[chars] called with request to suspend when it cannot suspend	A process which is currently in a state where it cannot relinquish the CPU invoked a memory management function that can relinquish control of the CPU	<del>Kernel</del>	-
<del>SYS-3-MEMSEMFAIL</del>	3-Error	[chars] called with request to suspend when it cannot suspend	A process which is currently in a state where it cannot relinquish the CPU invoked a memory management function that can relinquish control of the CPU	<del>Kernel</del>	-
SYS-3-MGDTIMER	3-Error	[chars][chars] timer = [hec].	This message indicates an error in a system timer. The problem can be caused either by software or by hardware.	-	-
SYS-3-MGDTIMER	3-Error	[chars][chars] timer = [hec].	This message indicates an error in a system timer. The problem can be caused either by software or by hardware.	-	-
SYS-3-MGDTIMER	3-Error	[chars][chars] timer = [hec].	This message indicates an error in a system timer. The problem can be caused either by software or by hardware.	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-3-MGDTIMER	3-Error	[chars][chars] timer = [hec].	This message indicates an error in a system timer. The problem can be caused either by software or by hardware.	-	-
SYS-3-MGDTIMER	3-Error	[chars][chars] timer = [hec].	This message indicates an error in a system timer. The problem can be caused either by software or by hardware.	-	-
SYS-3-MGDTIMER	3-Error	[chars][chars] timer = [hec].	This message indicates an error in a system timer. The problem can be caused either by software or by hardware.	-	-
SYS-3-MGDTIMER	3-Error	[chars][chars] timer = [hec].	This message indicates an error in a system timer. The problem can be caused either by software or by hardware.	-	-
SYS-3-MGDTMRRUN	3-Error	TTY[node] Managed Timers [chars] still running	One or more managed timers for a TTY that is deleted are still running.	-	LOG_STD_ACTION
SYS-3-MGDTMRRUN	3-Error	TTY[node] Managed Timers [chars] still running	One or more managed timers for a TTY that is deleted are still running.	-	LOG_STD_ACTION
SYS-3-MGDTMRRUN	3-Error	TTY[node] Managed Timers [chars] still running	One or more managed timers for a TTY that is deleted are still running.	-	LOG_STD_ACTION
SYS-3-MGDTMRRUN	3-Error	TTY[node] Managed Timers [chars] still running	One or more managed timers for a TTY that is deleted are still running.	-	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-3-MGDTMRRUN	3-Error	TTY[node] Managed Timers [chars] still running	One or more managed timers for a TTY that is deleted are still running.	-	LOG_STD_ACTION
SYS-3-MGDTMRRUN	3-Error	TTY[node] Managed Timers [chars] still running	One or more managed timers for a TTY that is deleted are still running.	-	LOG_STD_ACTION
SYS-3-MGDTMRRUN	3-Error	TTY[node] Managed Timers [chars] still running	One or more managed timers for a TTY that is deleted are still running.	-	LOG_STD_ACTION
SYS-3-MSGLOST	3-Error	[dec] messages lost because of queue overflow	A software error occurred.	-	"Copy the message exactly as it appears and report it your technical " "support representative."
SYS-3-MSGLOST	3-Error	[dec] messages lost because of queue overflow	A software error occurred.	-	"Copy the message exactly as it appears and report it your technical " "support representative."
SYS-3-MSGLOST	3-Error	[dec] messages lost because of queue overflow	A software error occurred.	-	"Copy the message exactly as it appears and report it your technical " "support representative."
SYS-3-MSGLOST	3-Error	[dec] messages lost because of queue overflow	A software error occurred.	-	"Copy the message exactly as it appears and report it your technical " "support representative."
SYS-3-MSGLOST	3-Error	[dec] messages lost because of queue overflow	A software error occurred.	-	"Copy the message exactly as it appears and report it your technical " "support representative."
SYS-3-MSGLOST	3-Error	[dec] messages lost because of queue overflow	A software error occurred.	-	"Copy the message exactly as it appears and report it your technical " "support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-3-MSGLOST	3-Error	[dec] messages lost because of queue overflow	A software error occurred.	-	"Copy the message exactly as it appears and report it your technical " "support representative."
SYS-3-NOELEMENT	3-Error	[chars]:Ran out of buffer elements for enqueue	The process was unable to enqueue data as it ran out of buffer elements.	-	"Copy the error message exactly as it appears also get the " "output of show buffers and report it to your technical support " "representative."
SYS-3-NOELEMENT	3-Error	[chars]:Ran out of buffer elements for enqueue	The process was unable to enqueue data as it ran out of buffer elements.	-	"Copy the error message exactly as it appears also get the " "output of show buffers and report it to your technical support " "representative."
SYS-3-NOELEMENT	3-Error	[chars]:Ran out of buffer elements for enqueue	The process was unable to enqueue data as it ran out of buffer elements.	-	"Copy the error message exactly as it appears also get the " "output of show buffers and report it to your technical support " "representative."
SYS-3-NOELEMENT	3-Error	[chars]:Ran out of buffer elements for enqueue	The process was unable to enqueue data as it ran out of buffer elements.	-	"Copy the error message exactly as it appears also get the " "output of show buffers and report it to your technical support " "representative."
SYS-3-NOELEMENT	3-Error	[chars]:Ran out of buffer elements for enqueue	The process was unable to enqueue data as it ran out of buffer elements.	-	"Copy the error message exactly as it appears also get the " "output of show buffers and report it to your technical support " "representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-3-NOELEMENT	3-Error	[chars]:Ran out of buffer elements for enqueue	The process was unable to enqueue data as it ran out of buffer elements.	-	"Copy the error message exactly as it appears also get the " "output of show buffers and report it to your technical support " "representative."
SYS-3-NOELEMENT	3-Error	[chars]:Ran out of buffer elements for enqueue	The process was unable to enqueue data as it ran out of buffer elements.	-	"Copy the error message exactly as it appears also get the " "output of show buffers and report it to your technical support " "representative."
SYS-3-NULLIDB	3-Error	Null IDB in [chars]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-NULLIDB	3-Error	Null IDB in [chars]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-NULLIDB	3-Error	Null IDB in [chars]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-NULLIDB	3-Error	Null IDB in [chars]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-3-NULLIDB	3-Error	Null IDB in [chars]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-NULLIDB	3-Error	Null IDB in [chars]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-NULLIDB	3-Error	Null IDB in [chars]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS:NV_BOOTVAR_PARSE	3-Error	Failed to parse boot command:[chars] Error:[dec]	Boot configuration failed to parse when copied to startup-config. Most likely reason would be syntax errors in the boot configuration.	none	"Decode the traceback and check configuration file for the boot " "commands. Boot commands are sandwiched between boot-start-marker " "and boot-end-marker"
SYS:NV_BOOTVAR_PARSE	3-Error	Failed to parse boot command:[chars] Error:[dec]	Boot configuration failed to parse when copied to startup-config. Most likely reason would be syntax errors in the boot configuration.	none	"Decode the traceback and check configuration file for the boot " "commands. Boot commands are sandwiched between boot-start-marker " "and boot-end-marker"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-3-NZREFCNT	3-Error	Block [hec] on free list [dec] with refcount [dec]	A block of memory in the free pool is actually in use. The message indicates the number of processes using the memory block.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-NZREFCNT	3-Error	Block [hec] on free list [dec] with refcount [dec]	A block of memory in the free pool is actually in use. The message indicates the number of processes using the memory block.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-NZREFCNT	3-Error	Block [hec] on free list [dec] with refcount [dec]	A block of memory in the free pool is actually in use. The message indicates the number of processes using the memory block.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-NZREFCNT	3-Error	Block [hec] on free list [dec] with refcount [dec]	A block of memory in the free pool is actually in use. The message indicates the number of processes using the memory block.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-NZREFCNT	3-Error	Block [hec] on free list [dec] with refcount [dec]	A block of memory in the free pool is actually in use. The message indicates the number of processes using the memory block.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-NZREFCNT	3-Error	Block [hec] on free list [dec] with refcount [dec]	A block of memory in the free pool is actually in use. The message indicates the number of processes using the memory block.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-3-NZREFCNT	3-Error	Block [hec] on free list [dec] with refcount [dec]	A block of memory in the free pool is actually in use. The message indicates the number of processes using the memory block.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-OVERRUN	3-Error	Block overrun at [hec] red zone [node]x	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-OVERRUN	3-Error	Block overrun at [hec] red zone [node]x	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-OVERRUN	3-Error	Block overrun at [hec] red zone [node]x	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-OVERRUN	3-Error	Block overrun at [hec] red zone [node]x	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-OVERRUN	3-Error	Block overrun at [hec] red zone [node]x	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-3-OVERRUN	3-Error	Block overrun at [hec] red zone [node]x	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-OVERRUN	3-Error	Block overrun at [hec] red zone [node]x	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-OVFPRINT	3-Error	Overflow in [chars] chars [dec] buffer size [dec]	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-OVFPRINT	3-Error	Overflow in [chars] chars [dec] buffer size [dec]	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-OVFPRINT	3-Error	Overflow in [chars] chars [dec] buffer size [dec]	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-OVFPRINT	3-Error	Overflow in [chars] chars [dec] buffer size [dec]	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-OVFPRINT	3-Error	Overflow in [chars] chars [dec] buffer size [dec]	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-OVFPRINT	3-Error	Overflow in [chars] chars [dec] buffer size [dec]	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-3-OVFPRINT	3-Error	Overflow in [chars] chars [dec] buffer size [dec]	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-OVFPRINT	3-Error	Overflow in [chars] chars [dec] buffer size [dec]	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-PROCSEMFAIL	3-Error	Process semaphore creation for preemptive processes failed.	Creation of process function semaphore to protect the critical section of process create routine failed. The semaphore creation can fail if there isnt enough chunk memory to create the event structure.	os	-
SYS-3-PROCSEMFAIL	3-Error	Process semaphore creation for preemptive processes failed.	Creation of process function semaphore to protect the critical section of process create routine failed. The semaphore creation can fail if there isnt enough chunk memory to create the event structure.	os	-
SYS-3-PROCSEMFAIL	3-Error	Process semaphore creation for preemptive processes failed.	Creation of process function semaphore to protect the critical section of process create routine failed. The semaphore creation can fail if there isnt enough chunk memory to create the event structure.	os	-



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-3-PROCSEMFAIL	3-Error	Process semaphore creation for preemptive processes failed.	Creation of process function semaphore to protect the critical section of process create routine failed. The semaphore creation can fail if there isnt enough chunk memory to create the event structure.	os	-
SYS-3-PROCSEMFAIL	3-Error	Process semaphore creation for preemptive processes failed.	Creation of process function semaphore to protect the critical section of process create routine failed. The semaphore creation can fail if there isnt enough chunk memory to create the event structure.	os	-
SYS-3-PROCSEMFAIL	3-Error	Process semaphore creation for preemptive processes failed.	Creation of process function semaphore to protect the critical section of process create routine failed. The semaphore creation can fail if there isnt enough chunk memory to create the event structure.	os	-
SYS-3-PROCSEMFAIL	3-Error	Process semaphore creation for preemptive processes failed.	Creation of process function semaphore to protect the critical section of process create routine failed. The semaphore creation can fail if there isnt enough chunk memory to create the event structure.	os	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-3-RGADDFAIL	3-Error	Couldn't add process process pid [dec] to resource group [hec]\n Cause: [chars]	An attempt to create a resource group failed at the indicated location	-	-
SYS-3-RGADDFAIL	3-Error	Couldn't add process process pid [dec] to resource group [hec]\n Cause: [chars]	An attempt to create a resource group failed at the indicated location	-	-
SYS-3-RGADDFAIL	3-Error	Couldn't add process process pid [dec] to resource group [hec]\n Cause: [chars]	An attempt to create a resource group failed at the indicated location	-	-
SYS-3-RGADDFAIL	3-Error	Couldn't add process process pid [dec] to resource group [hec]\n Cause: [chars]	An attempt to create a resource group failed at the indicated location	-	-
SYS-3-RGADDFAIL	3-Error	Couldn't add process process pid [dec] to resource group [hec]\n Cause: [chars]	An attempt to create a resource group failed at the indicated location	-	-
SYS-3-RGADDFAIL	3-Error	Couldn't add process process pid [dec] to resource group [hec]\n Cause: [chars]	An attempt to create a resource group failed at the indicated location	-	-
SYS-3-RGADDFAIL	3-Error	Couldn't add process process pid [dec] to resource group [hec]\n Cause: [chars]	An attempt to create a resource group failed at the indicated location	-	-
SYS-3-RGADDFAIL	3-Error	Couldn't add process process pid [dec] to resource group [hec]\n Cause: [chars]	An attempt to create a resource group failed at the indicated location	-	-
SYS-3-RGADDFAIL	3-Error	Couldn't add process process pid [dec] to resource group [hec]\n Cause: [chars]	An attempt to create a resource group failed at the indicated location	-	-
SYS-3-RGCREATEFAIL	3-Error	Resource group creation failed\nCause: [chars]	An attempt to create a resource group failed at the indicated location	-	-
SYS-3-RGCREATEFAIL	3-Error	Resource group creation failed\nCause: [chars]	An attempt to create a resource group failed at the indicated location	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-3-RGCREATEFAIL	3-Error	Resource group creation failed\nCause: [chars]	An attempt to create a resource group failed at the indicated location	-	-
SYS-3-RGCREATEFAIL	3-Error	Resource group creation failed\nCause: [chars]	An attempt to create a resource group failed at the indicated location	-	-
SYS-3-RGCREATEFAIL	3-Error	Resource group creation failed\nCause: [chars]	An attempt to create a resource group failed at the indicated location	-	-
SYS-3-RGCREATEFAIL	3-Error	Resource group creation failed\nCause: [chars]	An attempt to create a resource group failed at the indicated location	-	-
SYS-3-RGCREATEFAIL	3-Error	Resource group creation failed\nCause: [chars]	An attempt to create a resource group failed at the indicated location	-	-
SYS-3-RGDELEFAIL	3-Error	Couldn't delete process process pid [dec] from resource group\n \nCause: [chars]	An attempt to remove a process from a resource group failed at the indicated location	-	-
SYS-3-RGDELEFAIL	3-Error	Couldn't delete process process pid [dec] from resource group\n \nCause: [chars]	An attempt to remove a process from a resource group failed at the indicated location	-	-
SYS-3-RGDELEFAIL	3-Error	Couldn't delete process process pid [dec] from resource group\n \nCause: [chars]	An attempt to remove a process from a resource group failed at the indicated location	-	-
SYS-3-RGDELEFAIL	3-Error	Couldn't delete process process pid [dec] from resource group\n \nCause: [chars]	An attempt to remove a process from a resource group failed at the indicated location	-	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-3-RGDELEFAIL	3-Error	Couldn't delete process process pid [dec] from resource group\n \nCause: [chars]	An attempt to remove a process from a resource group failed at the indicated location	-	-
SYS-3-RGDELEFAIL	3-Error	Couldn't delete process process pid [dec] from resource group\n \nCause: [chars]	An attempt to remove a process from a resource group failed at the indicated location	-	-
SYS-3-RGDELEFAIL	3-Error	Couldn't delete process process pid [dec] from resource group\n \nCause: [chars]	An attempt to remove a process from a resource group failed at the indicated location	-	-
SYS-3-RGDESTFAIL	3-Error	Couldn't destroy resource group [hec]\nCause: [chars]	An attempt to destroy a resource group failed at the indicated location	-	-
SYS-3-RGDESTFAIL	3-Error	Couldn't destroy resource group [hec]\nCause: [chars]	An attempt to destroy a resource group failed at the indicated location	-	-
SYS-3-RGDESTFAIL	3-Error	Couldn't destroy resource group [hec]\nCause: [chars]	An attempt to destroy a resource group failed at the indicated location	-	-
SYS-3-RGDESTFAIL	3-Error	Couldn't destroy resource group [hec]\nCause: [chars]	An attempt to destroy a resource group failed at the indicated location	-	-
SYS-3-RGDESTFAIL	3-Error	Couldn't destroy resource group [hec]\nCause: [chars]	An attempt to destroy a resource group failed at the indicated location	-	-
SYS-3-RGDESTFAIL	3-Error	Couldn't destroy resource group [hec]\nCause: [chars]	An attempt to destroy a resource group failed at the indicated location	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-3-RGDESTFAIL	3-Error	Couldn't destroy resource group [hec] Cause: [chars]	An attempt to destroy a resource group failed at the indicated location	-	-
SYS-3-RGMEMEXCEED	3-Error	\nLimit Exceeded: [chars] Holding: [node] Requested:[node] bytes	A resource group has requested for more memory than the configured limit at the indicated location	TCPIP-3-RGDESTFAIL	-
SYS-3-RGMEMEXCEED	3-Error	\nLimit Exceeded: [chars] Holding: [node] Requested:[node] bytes	A resource group has requested for more memory than the configured limit at the indicated location	TCPIP-3-RGDESTFAIL	-
SYS-3-RGMEMEXCEED	3-Error	\nLimit Exceeded: [chars] Holding: [node] Requested:[node] bytes	A resource group has requested for more memory than the configured limit at the indicated location	TCPIP-3-RGDESTFAIL	-
SYS-3-RGMEMEXCEED	3-Error	\nLimit Exceeded: [chars] Holding: [node] Requested:[node] bytes	A resource group has requested for more memory than the configured limit at the indicated location	TCPIP-3-RGDESTFAIL	-
SYS-3-RGMEMEXCEED	3-Error	\nLimit Exceeded: [chars] Holding: [node] Requested:[node] bytes	A resource group has requested for more memory than the configured limit at the indicated location	TCPIP-3-RGDESTFAIL	-
SYS-3-RGMEMEXCEED	3-Error	\nLimit Exceeded: [chars] Holding: [node] Requested:[node] bytes	A resource group has requested for more memory than the configured limit at the indicated location	TCPIP-3-RGDESTFAIL	-
SYS-3-RGMEMEXCEED	3-Error	\nLimit Exceeded: [chars] Holding: [node] Requested:[node] bytes	A resource group has requested for more memory than the configured limit at the indicated location	TCPIP-3-RGDESTFAIL	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS3RGMEMEXCEED	3-Error	\nLimit Exceeded: [chars] Holding: [node] Requested:[node] bytes	A resource group has requested for more memory than the configured limit at the indicated location	The component is not configured	-
SYS-3-RGOPFAIL	3-Error	Requested memory thresholding operation on resource group failed\n Resource Group handle: [hec] Cause: [chars]	The message indicates that an request to Set/Get memory thresholding data or enable/disable thresholding failed in the indicated location	The component is not configured	-
SYS-3-RGOPFAIL	3-Error	Requested memory thresholding operation on resource group failed\n Resource Group handle: [hec] Cause: [chars]	The message indicates that an request to Set/Get memory thresholding data or enable/disable thresholding failed in the indicated location	The component is not configured	-
SYS-3-RGOPFAIL	3-Error	Requested memory thresholding operation on resource group failed\n Resource Group handle: [hec] Cause: [chars]	The message indicates that an request to Set/Get memory thresholding data or enable/disable thresholding failed in the indicated location	The component is not configured	-
SYS-3-RGOPFAIL	3-Error	Requested memory thresholding operation on resource group failed\n Resource Group handle: [hec] Cause: [chars]	The message indicates that an request to Set/Get memory thresholding data or enable/disable thresholding failed in the indicated location	The component is not configured	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-3-RGOPFAIL	3-Error	Requested memory thresholding operation on resource group failed\n Resource Group handle: [hec] Cause: [chars]	The message indicates that an request to Set/Get memory thresholding data or enable/disable thresholding failed in the indicated location	The component is the request	-
SYS-3-RGOPFAIL	3-Error	Requested memory thresholding operation on resource group failed\n Resource Group handle: [hec] Cause: [chars]	The message indicates that an request to Set/Get memory thresholding data or enable/disable thresholding failed in the indicated location	The component is the request	-
SYS-3-RGOPFAIL	3-Error	Requested memory thresholding operation on resource group failed\n Resource Group handle: [hec] Cause: [chars]	The message indicates that an request to Set/Get memory thresholding data or enable/disable thresholding failed in the indicated location	The component is the request	-
SYS-3-SOCKUNKN	3-Error	Unknown socket protocol [dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-SOCKUNKN	3-Error	Unknown socket protocol [dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-3-SOCKUNKN	3-Error	Unknown socket protocol [dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-SOCKUNKN	3-Error	Unknown socket protocol [dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-SOCKUNKN	3-Error	Unknown socket protocol [dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-SOCKUNKN	3-Error	Unknown socket protocol [dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-SOCKUNKN	3-Error	Unknown socket protocol [dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-SOCKUNKN	3-Error	Unknown socket protocol [dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-3-TCLSETFAIL	3-Error	cannot set TCL interpreter variable '[chars]' to '[chars]' : '[chars]'	The value could not be passed to the TCL interpreter	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-3-TCLSETFAIL	3-Error	cannot set TCL interpreter variable '[chars]' to '[chars]' : '[chars]'	The value could not be passed to the TCL interpreter	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-TCLSETFAIL	3-Error	cannot set TCL interpreter variable '[chars]' to '[chars]' : '[chars]'	The value could not be passed to the TCL interpreter	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-TCLSETFAIL	3-Error	cannot set TCL interpreter variable '[chars]' to '[chars]' : '[chars]'	The value could not be passed to the TCL interpreter	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-TCLSETFAIL	3-Error	cannot set TCL interpreter variable '[chars]' to '[chars]' : '[chars]'	The value could not be passed to the TCL interpreter	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-TCLSETFAIL	3-Error	cannot set TCL interpreter variable '[chars]' to '[chars]' : '[chars]'	The value could not be passed to the TCL interpreter	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-TCLSETFAIL	3-Error	cannot set TCL interpreter variable '[chars]' to '[chars]' : '[chars]'	The value could not be passed to the TCL interpreter	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-TCLSETFAIL	3-Error	cannot set TCL interpreter variable '[chars]' to '[chars]' : '[chars]'	The value could not be passed to the TCL interpreter	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-TIMERHOG	3-Error	Timer callback ran long PC = [hec].	The indicated callback routine ran for too long without relinquishing the processor.	<del>Internal Error</del>	"Copy the message exactly as it appears and report it your technical " "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-3-TIMERHOG	3-Error	Timer callback ran long PC = [hec].	The indicated callback routine ran for too long without relinquishing the processor.	IBM z/OS V3R0	"Copy the message exactly as it appears and report it your technical " "support representative."
SYS-3-TIMERHOG	3-Error	Timer callback ran long PC = [hec].	The indicated callback routine ran for too long without relinquishing the processor.	IBM z/OS V3R0	"Copy the message exactly as it appears and report it your technical " "support representative."
SYS-3-TIMERHOG	3-Error	Timer callback ran long PC = [hec].	The indicated callback routine ran for too long without relinquishing the processor.	IBM z/OS V3R0	"Copy the message exactly as it appears and report it your technical " "support representative."
SYS-3-TIMERHOG	3-Error	Timer callback ran long PC = [hec].	The indicated callback routine ran for too long without relinquishing the processor.	IBM z/OS V3R0	"Copy the message exactly as it appears and report it your technical " "support representative."
SYS-3-TIMERHOG	3-Error	Timer callback ran long PC = [hec].	The indicated callback routine ran for too long without relinquishing the processor.	IBM z/OS V3R0	"Copy the message exactly as it appears and report it your technical " "support representative."
SYS-3-TIMERHOG	3-Error	Timer callback ran long PC = [hec].	The indicated callback routine ran for too long without relinquishing the processor.	IBM z/OS V3R0	"Copy the message exactly as it appears and report it your technical " "support representative."
SYS-3-TIMERHOG	3-Error	Timer callback ran long PC = [hec].	The indicated callback routine ran for too long without relinquishing the processor.	IBM z/OS V3R0	"Copy the message exactly as it appears and report it your technical " "support representative."
SYS-3-TIMERNEG	3-Error	Cannot start timer [hex] with negative offset [dec].	An internal software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-TIMERNEG	3-Error	Cannot start timer [hex] with negative offset [dec].	An internal software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-3-TIMERNEG	3-Error	Cannot start timer [hex] with negative offset [dec].	An internal software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-TIMERNEG	3-Error	Cannot start timer [hex] with negative offset [dec].	An internal software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-TIMERNEG	3-Error	Cannot start timer [hex] with negative offset [dec].	An internal software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-TIMERNEG	3-Error	Cannot start timer [hex] with negative offset [dec].	An internal software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-TIMERNEG	3-Error	Cannot start timer [hex] with negative offset [dec].	An internal software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS-3-TIMERNEG	3-Error	Cannot start timer [hex] with negative offset [dec].	An internal software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS3TIMEZONE_INVALID	3-Error	Invalid timezone name	The timezone string entered is not valid. The string\n should be minimum of more than three letters and should\n only contain alphabets	os	-
SYS3TIMEZONE_INVALID	3-Error	Invalid timezone name	The timezone string entered is not valid. The string\n should be minimum of more than three letters and should\n only contain alphabets	os	-

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS3UNWEDGEDSABLED	3-Error	Policy map [chars] has been removed.\n Leak debugging on interface [chars] disabled.	This is error message indicates that the policy-map configured as\n filter in an interface for leak debugging has been removed without\n disabling the filter in the interface.	mem	"If the filter is required on the interface for debugging leaks\n" "reconfigure the policy-map and reconfigure the interface for\n" "leak debugging"
SYS3UNWEDGEDSABLED	3-Error	Policy map [chars] has been removed.\n Leak debugging on interface [chars] disabled.	This is error message indicates that the policy-map configured as\n filter in an interface for leak debugging has been removed without\n disabling the filter in the interface.	mem	"If the filter is required on the interface for debugging leaks\n" "reconfigure the policy-map and reconfigure the interface for\n" "leak debugging"
SYS3-URLREADFAIL	3-Error	cannot open file for reading '[chars]'	The URL for the cannot be opened for reading.	-	"Check for proper Uniform Resource Locator syntax and for read " "permission and retry."
SYS3-URLREADFAIL	3-Error	cannot open file for reading '[chars]'	The URL for the cannot be opened for reading.	-	"Check for proper Uniform Resource Locator syntax and for read " "permission and retry."
SYS3-URLREADFAIL	3-Error	cannot open file for reading '[chars]'	The URL for the cannot be opened for reading.	-	"Check for proper Uniform Resource Locator syntax and for read " "permission and retry."
SYS3-URLREADFAIL	3-Error	cannot open file for reading '[chars]'	The URL for the cannot be opened for reading.	-	"Check for proper Uniform Resource Locator syntax and for read " "permission and retry."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-3-URLREADFAIL	3-Error	cannot open file for reading '[chars]'	The URL for the cannot be opened for reading.	-	"Check for proper Uniform Resource Locator syntax and for read " "permission and retry."
SYS-3-URLREADFAIL	3-Error	cannot open file for reading '[chars]'	The URL for the cannot be opened for reading.	-	"Check for proper Uniform Resource Locator syntax and for read " "permission and retry."
SYS-3-URLREADFAIL	3-Error	cannot open file for reading '[chars]'	The URL for the cannot be opened for reading.	-	"Check for proper Uniform Resource Locator syntax and for read " "permission and retry."
SYS-3-URLWRITEFAIL	3-Error	redirection url write failed '[chars]'	Redirection of output to URL failed.	-	"Check for free space on destination URL and retry."
SYS-3-URLWRITEFAIL	3-Error	redirection url write failed '[chars]'	Redirection of output to URL failed.	-	"Check for free space on destination URL and retry."
SYS-3-URLWRITEFAIL	3-Error	redirection url write failed '[chars]'	Redirection of output to URL failed.	-	"Check for free space on destination URL and retry."
SYS-3-URLWRITEFAIL	3-Error	redirection url write failed '[chars]'	Redirection of output to URL failed.	-	"Check for free space on destination URL and retry."
SYS-3-URLWRITEFAIL	3-Error	redirection url write failed '[chars]'	Redirection of output to URL failed.	-	"Check for free space on destination URL and retry."
SYS-3-URLWRITEFAIL	3-Error	redirection url write failed '[chars]'	Redirection of output to URL failed.	-	"Check for free space on destination URL and retry."
SYS-3-URLWRITEFAIL	3-Error	redirection url write failed '[chars]'	Redirection of output to URL failed.	-	"Check for free space on destination URL and retry."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-3-USERLOG_ERR	3-Error	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."
SYS-3-USERLOG_ERR	3-Error	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."
SYS-3-USERLOG_ERR	3-Error	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-3-USERLOG_ERR	3-Error	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."
SYS-3-USERLOG_ERR	3-Error	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."
SYS-3-USERLOG_ERR	3-Error	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS3-USERLOG_ERR	3-Error	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."
SYS3-WRONGFREELIST	3-Error	Block [hec] size [dec] on wrong free list [dec] [dec]	A freed buffer was placed on the wrong list of free buffers.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS3-WRONGFREELIST	3-Error	Block [hec] size [dec] on wrong free list [dec] [dec]	A freed buffer was placed on the wrong list of free buffers.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS3-WRONGFREELIST	3-Error	Block [hec] size [dec] on wrong free list [dec] [dec]	A freed buffer was placed on the wrong list of free buffers.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS3-WRONGFREELIST	3-Error	Block [hec] size [dec] on wrong free list [dec] [dec]	A freed buffer was placed on the wrong list of free buffers.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS3-WRONGFREELIST	3-Error	Block [hec] size [dec] on wrong free list [dec] [dec]	A freed buffer was placed on the wrong list of free buffers.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS3-WRONGFREELIST	3-Error	Block [hec] size [dec] on wrong free list [dec] [dec]	A freed buffer was placed on the wrong list of free buffers.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS3-WRONGFREELIST	3-Error	Block [hec] size [dec] on wrong free list [dec] [dec]	A freed buffer was placed on the wrong list of free buffers.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS4-ADD_STACK	4-Warning	Invalid index [dec] for additional stack size request.	The index passed should of less than the enum <code>E_MAX_ADD_STACK_SIZE</code> value equal to or higher than the enum is an invalid index.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS4-ADD_STACK	4-Warning	Invalid index [dec] for additional stack size request.	The index passed should of less than the enum <code>E_MAX_ADD_STACK_SIZE</code> value equal to or higher than the enum is an invalid index.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
<del>SSCHUNKPRE/DESTROY</del>	4-Warning	A chunk is created or destroyed from pseudo-preemption context. Chunk name : [chars]	Creating or destroying chunks from pseudo-preemption context is not allowed.	-	"Copy the error message exactly as it appears and " "report it to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SSCHUNKPCREAFDSPOY	4-Warning	A chunk is created or destroyed from pseudo-preemption context. Chunk name : [chars]	Creating or destroying chunks from pseudo-preemption context is not allowed.	-	"Copy the error message exactly as it appears and " "report it to your technical support representative."
SSCHUNKSIBNGEXCHD	4-Warning	Number of siblings in a chunk has gone above the threshold. Threshold:[dec] Sibling-Count:[dec] Chunk:0x[hec] Name:[chars]	Number of siblings in a chunk with no header has gone above the default/configured threshold configured using <b>memory chunk siblings threshold</b> <b>current</b>	-	LOG_SIDSHTTECH_ACTION
SSCHUNKSIBNGEXCHD	4-Warning	Number of siblings in a chunk has gone above the threshold. Threshold:[dec] Sibling-Count:[dec] Chunk:0x[hec] Name:[chars]	Number of siblings in a chunk with no header has gone above the default/configured threshold configured using <b>memory chunk siblings threshold</b> <b>current</b>	-	LOG_SIDSHTTECH_ACTION
SSCHUNKSIBNGEXCHD	4-Warning	Number of siblings in a chunk has gone above the threshold. Threshold:[dec] Sibling-Count:[dec] Chunk:0x[hec] Name:[chars]	Number of siblings in a chunk with no header has gone above the default/configured threshold configured using <b>memory chunk siblings threshold</b> <b>current</b>	-	LOG_SIDSHTTECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SSCHUNKSIBINGEXCHD	4-Warning	Number of siblings in a chunk has gone above the threshold. Threshold:[dec] Sibling-Count:[dec] Chunk:0x[hec] Name:[chars]	Number of siblings in a chunk with no header has gone above the default/configured threshold configured using <code>&lt;cmdBold&gt;memory chunk siblings threshold&lt;nocmdBold&gt;</code> <code>&lt;cmdAgs&gt;curt&lt;nomdAgs&gt;</code>	-	LOGSIDSHTECHACI0N
SSCHUNKSIBINGEXCHD	4-Warning	Number of siblings in a chunk has gone above the threshold. Threshold:[dec] Sibling-Count:[dec] Chunk:0x[hec] Name:[chars]	Number of siblings in a chunk with no header has gone above the default/configured threshold configured using <code>&lt;cmdBold&gt;memory chunk siblings threshold&lt;nocmdBold&gt;</code> <code>&lt;cmdAgs&gt;curt&lt;nomdAgs&gt;</code>	-	LOGSIDSHTECHACI0N
SSCHUNKSIBINGEXCHD	4-Warning	Number of siblings in a chunk has gone above the threshold. Threshold:[dec] Sibling-Count:[dec] Chunk:0x[hec] Name:[chars]	Number of siblings in a chunk with no header has gone above the default/configured threshold configured using <code>&lt;cmdBold&gt;memory chunk siblings threshold&lt;nocmdBold&gt;</code> <code>&lt;cmdAgs&gt;curt&lt;nomdAgs&gt;</code>	-	LOGSIDSHTECHACI0N
SSCHUNKSIBINGEXCHD	4-Warning	Number of siblings in a chunk has gone above the threshold. Threshold:[dec] Sibling-Count:[dec] Chunk:0x[hec] Name:[chars]	Number of siblings in a chunk with no header has gone above the default/configured threshold configured using <code>&lt;cmdBold&gt;memory chunk siblings threshold&lt;nocmdBold&gt;</code> <code>&lt;cmdAgs&gt;curt&lt;nomdAgs&gt;</code>	-	LOGSIDSHTECHACI0N

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS4CONFIG_NEWER	4-Warning	Configuration from version [dec].[dec] may not be correctly understood	The software detected that the configuration saved in memory was written by a newer version of software. There might be commands saved in memory that are not implemented by the older software version.	none	"Examine all the messages printed while the router was " "booting. For each message about an unknown command determine " "whether that feature is required. If so upgrade to a " "newer version of software that supports that feature."
SYS4CONFIG_NEWER	4-Warning	Configuration from version [dec].[dec] may not be correctly understood	The software detected that the configuration saved in memory was written by a newer version of software. There might be commands saved in memory that are not implemented by the older software version.	none	"Examine all the messages printed while the router was " "booting. For each message about an unknown command determine " "whether that feature is required. If so upgrade to a " "newer version of software that supports that feature."
SYS4CONFIG_NEWER	4-Warning	Configuration from version [dec].[dec] may not be correctly understood	The software detected that the configuration saved in memory was written by a newer version of software. There might be commands saved in memory that are not implemented by the older software version.	none	"Examine all the messages printed while the router was " "booting. For each message about an unknown command determine " "whether that feature is required. If so upgrade to a " "newer version of software that supports that feature."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS4-CONFIG_NEWER	4-Warning	Configuration from version [dec].[dec] may not be correctly understood	The software detected that the configuration saved in memory was written by a newer version of software. There might be commands saved in memory that are not implemented by the older software version.	none	"Examine all the messages printed while the router was " "booting. For each message about an unknown command determine " "whether that feature is required. If so upgrade to a " "newer version of software that supports that feature."
SYS4-CONFIG_NEWER	4-Warning	Configuration from version [dec].[dec] may not be correctly understood	The software detected that the configuration saved in memory was written by a newer version of software. There might be commands saved in memory that are not implemented by the older software version.	none	"Examine all the messages printed while the router was " "booting. For each message about an unknown command determine " "whether that feature is required. If so upgrade to a " "newer version of software that supports that feature."
SYS4-CONFIG_NEWER	4-Warning	Configuration from version [dec].[dec] may not be correctly understood	The software detected that the configuration saved in memory was written by a newer version of software. There might be commands saved in memory that are not implemented by the older software version.	none	"Examine all the messages printed while the router was " "booting. For each message about an unknown command determine " "whether that feature is required. If so upgrade to a " "newer version of software that supports that feature."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS4CONFIG_NEWER	4-Warning	Configuration from version [dec].[dec] may not be correctly understood	The software detected that the configuration saved in memory was written by a newer version of software. There might be commands saved in memory that are not implemented by the older software version.	none	"Examine all the messages printed while the router was "booting. For each message about an unknown command determine "whether that feature is required. If so upgrade to a "newer version of software that supports that feature."
SYS4CONFIG_NOLOCK	4-Warning	The configuration could not be locked	A software error occurred.	-	"Copy the error message exactly as it appears and report it "to your technical support representative."
SYS4CONFIG_NOLOCK	4-Warning	The configuration could not be locked	A software error occurred.	-	"Copy the error message exactly as it appears and report it "to your technical support representative."
SYS4CONFIG_NOLOCK	4-Warning	The configuration could not be locked	A software error occurred.	-	"Copy the error message exactly as it appears and report it "to your technical support representative."
SYS4CONFIG_NOLOCK	4-Warning	The configuration could not be locked	A software error occurred.	-	"Copy the error message exactly as it appears and report it "to your technical support representative."
SYS4CONFIG_NOLOCK	4-Warning	The configuration could not be locked	A software error occurred.	-	"Copy the error message exactly as it appears and report it "to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS4CONFIG_NOLOCK	4-Warning	The configuration could not be locked	A software error occurred.	-	"Copy the error message exactly as it appears and report it " "to your technical support representative."
SYS4CONFIG_NOLOCK	4-Warning	The configuration could not be locked	A software error occurred.	-	"Copy the error message exactly as it appears and report it " "to your technical support representative."
SSNONV_NEDOMRRUN	4-Warning	Non config data present at the end of nvram needs to be overwritten to fit the configuration into nvram	The software detected that the non config data files occupying the end of nvram need to be overwritten to fit the configuration. Typically these files are used by snmp to store and retrieve non config persistent data accross system reload.	-	"Compress the configuration and store or copy to flash as appropriate"
SSNONV_NEDOMRRUN	4-Warning	Non config data present at the end of nvram needs to be overwritten to fit the configuration into nvram	The software detected that the non config data files occupying the end of nvram need to be overwritten to fit the configuration. Typically these files are used by snmp to store and retrieve non config persistent data accross system reload.	-	"Compress the configuration and store or copy to flash as appropriate"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SSCONFN_NEDCOMRUN	4-Warning	Non config data present at the end of nvrn needs to be overwritten to fit the configuration into nvrn	The software detected that the non config data files occupying the end of nvrn need to be overwritten to fit the configuration. Typically these files are used by snmp to store and retrieve non config persistent data across system reload.	-	"Compress the configuration and store or copy to flash as appropriate"
SSCONFN_NEDCOMRUN	4-Warning	Non config data present at the end of nvrn needs to be overwritten to fit the configuration into nvrn	The software detected that the non config data files occupying the end of nvrn need to be overwritten to fit the configuration. Typically these files are used by snmp to store and retrieve non config persistent data across system reload.	-	"Compress the configuration and store or copy to flash as appropriate"
SSCONFN_NEDCOMRUN	4-Warning	Non config data present at the end of nvrn needs to be overwritten to fit the configuration into nvrn	The software detected that the non config data files occupying the end of nvrn need to be overwritten to fit the configuration. Typically these files are used by snmp to store and retrieve non config persistent data across system reload.	-	"Compress the configuration and store or copy to flash as appropriate"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SSCONGN_NED_OERRUN	4-Warning	Non config data present at the end of nvram needs to be overwritten to fit the configuration into nvram	The software detected that the non config data files occupying the end of nvram need to be overwritten to fit the configuration. Typically these files are used by snmp to store and retrieve non config persistent data accross system reload.	-	"Compress the configuration and store or copy to flash as appropriate"
SSCONGN_NED_OERRUN	4-Warning	Non config data present at the end of nvram needs to be overwritten to fit the configuration into nvram	The software detected that the non config data files occupying the end of nvram need to be overwritten to fit the configuration. Typically these files are used by snmp to store and retrieve non config persistent data accross system reload.	-	"Compress the configuration and store or copy to flash as appropriate"
SSCONGN_NED_IRUNCAE	4-Warning	Configuration needs to be truncated to fit into nvram	The software detected that the configuration is to be truncated to fit in the nvram. There was not enough space to save the compressed configuration	-	"Save the configuration to flash if the platform supports " "\boot config nvbypass\" command."
SSCONGN_NED_IRUNCAE	4-Warning	Configuration needs to be truncated to fit into nvram	The software detected that the configuration is to be truncated to fit in the nvram. There was not enough space to save the compressed configuration	-	"Save the configuration to flash if the platform supports " "\boot config nvbypass\" command."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SS</del> CONF\N\NED\RUN\AE	4-Warning	Configuration needs to be truncated to fit into nvram	The software detected that the configuration is to be truncated to fit in the nvram. There was not enough space to save the compressed configuration	-	"Save the configuration to flash if the platform supports " "\boot config nvbypass\" command."
<del>SS</del> CONF\N\NED\RUN\AE	4-Warning	Configuration needs to be truncated to fit into nvram	The software detected that the configuration is to be truncated to fit in the nvram. There was not enough space to save the compressed configuration	-	"Save the configuration to flash if the platform supports " "\boot config nvbypass\" command."
<del>SS</del> CONF\N\NED\RUN\AE	4-Warning	Configuration needs to be truncated to fit into nvram	The software detected that the configuration is to be truncated to fit in the nvram. There was not enough space to save the compressed configuration	-	"Save the configuration to flash if the platform supports " "\boot config nvbypass\" command."
<del>SS</del> CONF\N\NED\RUN\AE	4-Warning	Configuration needs to be truncated to fit into nvram	The software detected that the configuration is to be truncated to fit in the nvram. There was not enough space to save the compressed configuration	-	"Save the configuration to flash if the platform supports " "\boot config nvbypass\" command."
<del>SS</del> CONF\N\NED\RUN\AE	4-Warning	Configuration needs to be truncated to fit into nvram	The software detected that the configuration is to be truncated to fit in the nvram. There was not enough space to save the compressed configuration	-	"Save the configuration to flash if the platform supports " "\boot config nvbypass\" command."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYSCONFIG_NVCORRUPT	4-Warning	Non config data present at the end of nvram is corrupted	The software detected that the configuration saved into nvram has overlaid a part of the nvram occupied by non config data files. Typically these files are used by snmp to store and retrieve non config persistent data across system reload.	-	"Compress the configuration and store or copy to flash as appropriate"
SYSCONFIG_NVCORRUPT	4-Warning	Non config data present at the end of nvram is corrupted	The software detected that the configuration saved into nvram has overlaid a part of the nvram occupied by non config data files. Typically these files are used by snmp to store and retrieve non config persistent data across system reload.	-	"Compress the configuration and store or copy to flash as appropriate"
SYSCONFIG_NVCORRUPT	4-Warning	Non config data present at the end of nvram is corrupted	The software detected that the configuration saved into nvram has overlaid a part of the nvram occupied by non config data files. Typically these files are used by snmp to store and retrieve non config persistent data across system reload.	-	"Compress the configuration and store or copy to flash as appropriate"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS:CONFIG:NONV:OVER:RUN	4-Warning	Non config data present at the end of nvrAm is corrupted	The software detected that the configuration saved into nvrAm has overlaid a part of the nvrAm occupied by non config data files. Typically these files are used by snmp to store and retrieve non config persistent data across system reload.	-	"Compress the configuration and store or copy to flash as appropriate"
SYS:CONFIG:NONV:OVER:RUN	4-Warning	Non config data present at the end of nvrAm is corrupted	The software detected that the configuration saved into nvrAm has overlaid a part of the nvrAm occupied by non config data files. Typically these files are used by snmp to store and retrieve non config persistent data across system reload.	-	"Compress the configuration and store or copy to flash as appropriate"
SYS:CONFIG:NONV:OVER:RUN	4-Warning	Non config data present at the end of nvrAm is corrupted	The software detected that the configuration saved into nvrAm has overlaid a part of the nvrAm occupied by non config data files. Typically these files are used by snmp to store and retrieve non config persistent data across system reload.	-	"Compress the configuration and store or copy to flash as appropriate"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SSICONF_NV_OVRUN	4-Warning	Non config data present at the end of nvram is corrupted	The software detected that the configuration saved into nvram has overlaid a part of the nvram occupied by non config data files. Typically these files are used by snmp to store and retrieve non config persistent data accross system reload.	-	"Compress the configuration and store or copy to flash as appropriate"
SSICONF_NV_TRUNC_AIE	4-Warning	Truncated configuration to [node] bytes from [node] bytes	The software detected that the configuration saved into nvram has been truncated. There was not enough space to save the compressed configuration.	-	"Save the configuration to flash if the platform supports " " \"boot config\" command."
SSICONF_NV_TRUNC_AIE	4-Warning	Truncated configuration to [node] bytes from [node] bytes	The software detected that the configuration saved into nvram has been truncated. There was not enough space to save the compressed configuration.	-	"Save the configuration to flash if the platform supports " " \"boot config\" command."
SSICONF_NV_TRUNC_AIE	4-Warning	Truncated configuration to [node] bytes from [node] bytes	The software detected that the configuration saved into nvram has been truncated. There was not enough space to save the compressed configuration.	-	"Save the configuration to flash if the platform supports " " \"boot config\" command."
SSICONF_NV_TRUNC_AIE	4-Warning	Truncated configuration to [node] bytes from [node] bytes	The software detected that the configuration saved into nvram has been truncated. There was not enough space to save the compressed configuration.	-	"Save the configuration to flash if the platform supports " " \"boot config\" command."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYSCONFIG_N_TRUNC_AE	4-Warning	Truncated configuration to [node] bytes from [node] bytes	The software detected that the configuration saved into nvram has been truncated. There was not enough space to save the compressed configuration.	-	"Save the configuration to flash if the platform supports " " \"boot config\" command."
SYSCONFIG_N_TRUNC_AE	4-Warning	Truncated configuration to [node] bytes from [node] bytes	The software detected that the configuration saved into nvram has been truncated. There was not enough space to save the compressed configuration.	-	"Save the configuration to flash if the platform supports " " \"boot config\" command."
SYSCONFIG_N_TRUNC_AE	4-Warning	Truncated configuration to [node] bytes from [node] bytes	The software detected that the configuration saved into nvram has been truncated. There was not enough space to save the compressed configuration.	-	"Save the configuration to flash if the platform supports " " \"boot config\" command."
SYSCONFIG_PARSE_FAIL	4-Warning	System config parse from [chars] failed	The configuration file from the URL specified in the error message could not be read.	-	"Enter the <CmdBold>no service config<NoCmdBold> " "command to disable autoloading of configuration files " "OR investigate why the tftp load is failing."
SYSCONFIG_PARSE_FAIL	4-Warning	System config parse from [chars] failed	The configuration file from the URL specified in the error message could not be read.	-	"Enter the <CmdBold>no service config<NoCmdBold> " "command to disable autoloading of configuration files " "OR investigate why the tftp load is failing."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SSCONGRESOMEFAILURE	4-Warning	System config parse from [chars] failed	The configuration file from the URL specified in the error message could not be read.	-	"Enter the <CmdBold>no service config<NoCmdBold> " "command to disable autoloading of configuration files " "OR investigate why the tftp load is failing."
SSCONGRESOMEFAILURE	4-Warning	System config parse from [chars] failed	The configuration file from the URL specified in the error message could not be read.	-	"Enter the <CmdBold>no service config<NoCmdBold> " "command to disable autoloading of configuration files " "OR investigate why the tftp load is failing."
SSCONGRESOMEFAILURE	4-Warning	System config parse from [chars] failed	The configuration file from the URL specified in the error message could not be read.	-	"Enter the <CmdBold>no service config<NoCmdBold> " "command to disable autoloading of configuration files " "OR investigate why the tftp load is failing."
SSCONGRESOMEFAILURE	4-Warning	System config parse from [chars] failed	The configuration file from the URL specified in the error message could not be read.	-	"Enter the <CmdBold>no service config<NoCmdBold> " "command to disable autoloading of configuration files " "OR investigate why the tftp load is failing."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-4-CONFIG_PARSE_FAILURE	4-Warning	System config parse from [chars] failed	The configuration file from the URL specified in the error message could not be read.	-	"Enter the <CmdBold>no service config<NoCmdBold> " "command to disable autoloading of configuration files " "OR investigate why the tftp load is failing."
SYS-4-CPURESISING	4-Warning	[chars][chars] is seeing [chars] cpu util [node][node]t [chars] level more than the configured [chars] limit [node]%%	The system is experiencing high CPU usage possibly from a process that is using too much CPU. This condition demands immediate attention or packets or calls may be dropped. CPURESISING notifications should be matched with the corresponding <del>CPURESISING</del> notification.	-	"No action is required"
SYS-4-CPURESISING	4-Warning	[chars][chars] is seeing [chars] cpu util [node][node]t [chars] level more than the configured [chars] limit [node]%%	The system is experiencing high CPU usage possibly from a process that is using too much CPU. This condition demands immediate attention or packets or calls may be dropped. CPURESISING notifications should be matched with the corresponding <del>CPURESISING</del> notification.	-	"No action is required"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-4-CPURES-RISING	4-Warning	[chars][chars] is seeing [chars] cpu util [node][node]t [chars] level more than the configured [chars] limit [node]%%	The system is experiencing high CPU usage possibly from a process that is using too much CPU. This condition demands immediate attention or packets or calls may be dropped. CPURES-RISING notifications should be matched with the corresponding <del>CPURES-RISING</del> notification.	-	"No action is required"
SYS-4-CPURES-RISING	4-Warning	[chars][chars] is seeing [chars] cpu util [node][node]t [chars] level more than the configured [chars] limit [node]%%	The system is experiencing high CPU usage possibly from a process that is using too much CPU. This condition demands immediate attention or packets or calls may be dropped. CPURES-RISING notifications should be matched with the corresponding <del>CPURES-RISING</del> notification.	-	"No action is required"
SYS-4-CPURES-RISING	4-Warning	[chars][chars] is seeing [chars] cpu util [node][node]t [chars] level more than the configured [chars] limit [node]%%	The system is experiencing high CPU usage possibly from a process that is using too much CPU. This condition demands immediate attention or packets or calls may be dropped. CPURES-RISING notifications should be matched with the corresponding <del>CPURES-RISING</del> notification.	-	"No action is required"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS4-CPURESISING	4-Warning	[chars][chars] is seeing [chars] cpu util [node][node]t [chars] level more than the configured [chars] limit [node]%%	The system is experiencing high CPU usage possibly from a process that is using too much CPU. This condition demands immediate attention or packets or calls may be dropped. CPURESISING notifications should be matched with the corresponding CPURESISING notification.	-	"No action is required"
SYS4-CPURESISING	4-Warning	[chars][chars] is seeing [chars] cpu util [node][node]t [chars] level more than the configured [chars] limit [node]%%	The system is experiencing high CPU usage possibly from a process that is using too much CPU. This condition demands immediate attention or packets or calls may be dropped. CPURESISING notifications should be matched with the corresponding CPURESISING notification.	-	"No action is required"
SYS4DUAL_MESSAGE	4-Warning	SNMP system message request [dec] denied because of pending job	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS4DUAL_MESSAGE	4-Warning	SNMP system message request [dec] denied because of pending job	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS4DUAL_MESSAGE	4-Warning	SNMP system message request [dec] denied because of pending job	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS4DUAL_MESSAGE	4-Warning	SNMP system message request [dec] denied because of pending job	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS4DUAL_MESSAGE	4-Warning	SNMP system message request [dec] denied because of pending job	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS4DUAL_MESSAGE	4-Warning	SNMP system message request [dec] denied because of pending job	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS4DUAL_MESSAGE	4-Warning	SNMP system message request [dec] denied because of pending job	A software error occurred.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS4EXMALLOCFAIL	4-Warning	External memory allocation of [dec] bytes failed from EXMEM [dec]	The requested memory allocation is not available from the specified memory pool. The current system configuration network environment or possibly a software error might have exhausted or fragmented the router's memory.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS4EXMALLOCFAIL	4-Warning	External memory allocation of [dec] bytes failed from EXMEM [dec]	The requested memory allocation is not available from the specified memory pool. The current system configuration network environment or possibly a software error might have exhausted or fragmented the router's memory.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS4EXMALLOCFAIL	4-Warning	External memory allocation of [dec] bytes failed from EXMEM [dec]	The requested memory allocation is not available from the specified memory pool. The current system configuration network environment or possibly a software error might have exhausted or fragmented the router's memory.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS4EXMALLOCFAIL	4-Warning	External memory allocation of [dec] bytes failed from EXMEM [dec]	The requested memory allocation is not available from the specified memory pool. The current system configuration network environment or possibly a software error might have exhausted or fragmented the router's memory.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS4EXMALLOCFAIL	4-Warning	External memory allocation of [dec] bytes failed from EXMEM [dec]	The requested memory allocation is not available from the specified memory pool. The current system configuration network environment or possibly a software error might have exhausted or fragmented the router's memory.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS4EXMALLOCFAIL	4-Warning	External memory allocation of [dec] bytes failed from EXMEM [dec]	The requested memory allocation is not available from the specified memory pool. The current system configuration network environment or possibly a software error might have exhausted or fragmented the router's memory.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS4EXMALLOCFAIL	4-Warning	External memory allocation of [dec] bytes failed from EXMEM [dec]	The requested memory allocation is not available from the specified memory pool. The current system configuration network environment or possibly a software error might have exhausted or fragmented the router's memory.	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS4FREEMEMLOW	4-Warning	Top Allocator Name: [chars] PC: [chars] Size: [node]Count: [node] Largest block: [node]lu	The memory pool specified in the error message is experiencing a low-memory condition. The amount of free memory available in the specified memory pool has dropped below the configured low-memory limit.	-	"No action is required"
SYS4FREEMEMLOW	4-Warning	Top Allocator Name: [chars] PC: [chars] Size: [node]Count: [node] Largest block: [node]lu	The memory pool specified in the error message is experiencing a low-memory condition. The amount of free memory available in the specified memory pool has dropped below the configured low-memory limit.	-	"No action is required"
SYS4FREEMEMLOW	4-Warning	Free Memory has dropped below low watermark\nPool: [chars] Free: [node] Threshold: [node]\n	The memory pool specified in the error message is experiencing a low-memory condition. The amount of free memory available in the specified memory pool has dropped below the configured low-memory limit.	-	"No action is required"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS4-FREEMEMLOW	4-Warning	Free Memory has dropped below low watermark\nPool: [chars] Free: [node] Threshold: [node]\n	The memory pool specified in the error message is experiencing a low-memory condition. The amount of free memory available in the specified memory pool has dropped below the configured low-memory limit.	-	"No action is required"
SYS4-FREEMEMLOW	4-Warning	Free Memory has dropped below low watermark\nPool: [chars] Free: [node] Threshold: [node]\n	The memory pool specified in the error message is experiencing a low-memory condition. The amount of free memory available in the specified memory pool has dropped below the configured low-memory limit.	-	"No action is required"
SYS4-FREEMEMLOW	4-Warning	Free Memory has dropped below low watermark\nPool: [chars] Free: [node] Threshold: [node]\n	The memory pool specified in the error message is experiencing a low-memory condition. The amount of free memory available in the specified memory pool has dropped below the configured low-memory limit.	-	"No action is required"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS4FREEMEMLOW	4-Warning	Free Memory has dropped below low watermark\nPool: [chars] Free: [node] Threshold: [node]\n	The memory pool specified in the error message is experiencing a low-memory condition. The amount of free memory available in the specified memory pool has dropped below the configured low-memory limit.	-	"No action is required"
SYS4CDATAUNRELIABLE	4-Warning	Update to memory leak detector on free of 0x[hec] failed CLI output is unreliable\n	managed chunk malloc to store the range that is freed while memory leak detector is in progress failed. Hence memory leak detector will not be updated of this free and this can be reported as leak which is false.	mem	"Ignore the output of \"show memory debug leaks.\" if system is in low \"memory condition else perform a bug toolkit search on the web for \"existing bugs related to this error message if none found contact TAC \"for this problem providing \"show version\" and \"\"show memory statistics\" output."
SYS4CDATAUNRELIABLE	4-Warning	Update to memory leak detector on free of 0x[hec] failed CLI output is unreliable\n	managed chunk malloc to store the range that is freed while memory leak detector is in progress failed. Hence memory leak detector will not be updated of this free and this can be reported as leak which is false.	mem	"Ignore the output of \"show memory debug leaks.\" if system is in low \"memory condition else perform a bug toolkit search on the web for \"existing bugs related to this error message if none found contact TAC \"for this problem providing \"show version\" and \"\"show memory statistics\" output."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYSLOG_DATAUNRELIABLE	4-Warning	Update to memory leak detector on free of 0x[hec] failed CLI output is unreliable\n	managed chunk malloc to store the range that is freed while memory leak detector is in progress failed. Hence memory leak detector will not be updated of this free and this can be reported as leak which is false.	mem	"Ignore the output of \"show memory debug leaks.\" if system is in low \"memory condition else perform a bug toolkit search on the web for \"existing bugs related to this error message if none found contact TAC \"for this problem providing \"show version\" and \" \"show memory statistics\" output."
SYSLOG_DATAUNRELIABLE	4-Warning	Update to memory leak detector on free of 0x[hec] failed CLI output is unreliable\n	managed chunk malloc to store the range that is freed while memory leak detector is in progress failed. Hence memory leak detector will not be updated of this free and this can be reported as leak which is false.	mem	"Ignore the output of \"show memory debug leaks.\" if system is in low \"memory condition else perform a bug toolkit search on the web for \"existing bugs related to this error message if none found contact TAC \"for this problem providing \"show version\" and \" \"show memory statistics\" output."
SYSLOG_DATAUNRELIABLE	4-Warning	Update to memory leak detector on free of 0x[hec] failed CLI output is unreliable\n	managed chunk malloc to store the range that is freed while memory leak detector is in progress failed. Hence memory leak detector will not be updated of this free and this can be reported as leak which is false.	mem	"Ignore the output of \"show memory debug leaks.\" if system is in low \"memory condition else perform a bug toolkit search on the web for \"existing bugs related to this error message if none found contact TAC \"for this problem providing \"show version\" and \" \"show memory statistics\" output."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS4DDATAUNRELIABLE	4-Warning	Update to memory leak detector on free of 0x[hec] failed CLI output is unreliable\n	managed chunk malloc to store the range that is freed while memory leak detector is in progress failed. Hence memory leak detector will not be updated of this free and this can be reported as leak which is false.	mem	"Ignore the output of \"show memory debug leaks..\" if system is in low \"memory condition else perform a bug toolkit search on the web for \"existing bugs related to this error message if none found contact TAC \"for this problem providing \"show version\" and \" \"show memory statistics\" output."
SYS4DDATAUNRELIABLE	4-Warning	Update to memory leak detector on free of 0x[hec] failed CLI output is unreliable\n	managed chunk malloc to store the range that is freed while memory leak detector is in progress failed. Hence memory leak detector will not be updated of this free and this can be reported as leak which is false.	mem	"Ignore the output of \"show memory debug leaks..\" if system is in low \"memory condition else perform a bug toolkit search on the web for \"existing bugs related to this error message if none found contact TAC \"for this problem providing \"show version\" and \" \"show memory statistics\" output."
SYS4GLOBALBUFEXCHD	4-Warning	Buffer usage has gone above global buffer [chars] threshold \nconfigured [dec] Current usage :[dec]\n	global buffer usage has gone above the configured limit. This violation can happen because of all the entities which use buffers in the system. GLOBALBUFEXCEED notifications should be matched with the corresponding <del>GLOBALBUFEXCEED</del> notification.	rmi	"No action is required"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS4GLOBALBUFEXCEED	4-Warning	Buffer usage has gone above global buffer [chars] threshold \nconfigured [dec] Current usage :[dec]\n	global buffer usage has gone above the configured limit. This violation can happen because of all the entities which use buffers in the system. GLOBALBUFEXCEED notifications should be matched with the corresponding <del>GLOBALBUFEXCEED</del> notification.	rmi	"No action is required"
SYS4GREEDY_REGEX	4-Warning	[chars] while processing the input regular expression. Aborting processing use alternate regular expression. Input regular expression: \[chars]\	Regular expression processing limitation: Certain regular expressions require huge stack space for processing or can lead to processing timeouts. We abort processing such regular expressions and print this message to avoid stack overflow/unexpected reload.	os	"The regular expression specified leads to stack overflow/processing " "timeout of the indicated process. Recommended to use a different " "regular expression."
SYS4GREEDY_REGEX	4-Warning	[chars] while processing the input regular expression. Aborting processing use alternate regular expression. Input regular expression: \[chars]\	Regular expression processing limitation: Certain regular expressions require huge stack space for processing or can lead to processing timeouts. We abort processing such regular expressions and print this message to avoid stack overflow/unexpected reload.	os	"The regular expression specified leads to stack overflow/processing " "timeout of the indicated process. Recommended to use a different " "regular expression."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS4GREEDY_REGEX	4-Warning	[chars] while processing the input regular expression. Aborting processing use alternate regular expression. Input regular expression: \[chars]\	Regular expression processing limitation: Certain regular expressions require huge stack space for processing or can lead to processing timeouts. We abort processing such regular expressions and print this message to avoid stack overflow/unexpected reload.	os	"The regular expression specified leads to stack overflow/processing " "timeout of the indicated process. Recommended to use a different " "regular expression."
SYS4GREEDY_REGEX	4-Warning	[chars] while processing the input regular expression. Aborting processing use alternate regular expression. Input regular expression: \[chars]\	Regular expression processing limitation: Certain regular expressions require huge stack space for processing or can lead to processing timeouts. We abort processing such regular expressions and print this message to avoid stack overflow/unexpected reload.	os	"The regular expression specified leads to stack overflow/processing " "timeout of the indicated process. Recommended to use a different " "regular expression."
SYS4GREEDY_REGEX	4-Warning	[chars] while processing the input regular expression. Aborting processing use alternate regular expression. Input regular expression: \[chars]\	Regular expression processing limitation: Certain regular expressions require huge stack space for processing or can lead to processing timeouts. We abort processing such regular expressions and print this message to avoid stack overflow/unexpected reload.	os	"The regular expression specified leads to stack overflow/processing " "timeout of the indicated process. Recommended to use a different " "regular expression."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS4GREEDY_REGEX	4-Warning	[chars] while processing the input regular expression. Aborting processing use alternate regular expression. Input regular expression: \[chars]\	Regular expression processing limitation: Certain regular expressions require huge stack space for processing or can lead to processing timeouts. We abort processing such regular expressions and print this message to avoid stack overflow/unexpected reload.	os	"The regular expression specified leads to stack overflow/processing " "timeout of the indicated process. Recommended to use a different " "regular expression."
SYS4GREEDY_REGEX	4-Warning	[chars] while processing the input regular expression. Aborting processing use alternate regular expression. Input regular expression: \[chars]\	Regular expression processing limitation: Certain regular expressions require huge stack space for processing or can lead to processing timeouts. We abort processing such regular expressions and print this message to avoid stack overflow/unexpected reload.	os	"The regular expression specified leads to stack overflow/processing " "timeout of the indicated process. Recommended to use a different " "regular expression."
SYS4INVALID_IMAGE	4-Warning	Running invalid image for platform!	The software image being run is for a different hardware architecture. This problem can occur on a Cisco 1003 Cisco 1004 or Cisco 1005. The Cisco 1003 and Cisco 1004 use a different image from the Cisco 1005.	none	"Install the correct software image."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS4INVALID_IMAGE	4-Warning	Running invalid image for platform!	The software image being run is for a different hardware architecture. This problem can occur on a Cisco 1003 Cisco 1004 or Cisco 1005. The Cisco 1003 and Cisco 1004 use a different image from the Cisco 1005.	none	"Install the correct software image."
SYS4INVALID_IMAGE	4-Warning	Running invalid image for platform!	The software image being run is for a different hardware architecture. This problem can occur on a Cisco 1003 Cisco 1004 or Cisco 1005. The Cisco 1003 and Cisco 1004 use a different image from the Cisco 1005.	none	"Install the correct software image."
SYS4INVALID_IMAGE	4-Warning	Running invalid image for platform!	The software image being run is for a different hardware architecture. This problem can occur on a Cisco 1003 Cisco 1004 or Cisco 1005. The Cisco 1003 and Cisco 1004 use a different image from the Cisco 1005.	none	"Install the correct software image."
SYS4INVALID_IMAGE	4-Warning	Running invalid image for platform!	The software image being run is for a different hardware architecture. This problem can occur on a Cisco 1003 Cisco 1004 or Cisco 1005. The Cisco 1003 and Cisco 1004 use a different image from the Cisco 1005.	none	"Install the correct software image."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS4INVALID_IMAGE	4-Warning	Running invalid image for platform!	The software image being run is for a different hardware architecture. This problem can occur on a Cisco 1003 Cisco 1004 or Cisco 1005. The Cisco 1003 and Cisco 1004 use a different image from the Cisco 1005.	none	"Install the correct software image."
SYS4INVALID_IMAGE	4-Warning	Running invalid image for platform!	The software image being run is for a different hardware architecture. This problem can occur on a Cisco 1003 Cisco 1004 or Cisco 1005. The Cisco 1003 and Cisco 1004 use a different image from the Cisco 1005.	none	"Install the correct software image."
<del>SILOGCPERSISTENTOVERUN</del>	4-Warning	Logging persistent command exceeded its size. Oldest logging-persistent file was deleted file name: [chars].	The Common Criteria CC certification requires a log message to indicate when logging persistent command exceeded the specified size limit and the old messages were overwritten.	os-logging	"This message is for information however the " "user may consider to increase logging-persistent size or to " "delete old logging persistent files."
<del>SILOGCPERSISTENTOVERUN</del>	4-Warning	Logging persistent command exceeded its size. Oldest logging-persistent file was deleted file name: [chars].	The Common Criteria CC certification requires a log message to indicate when logging persistent command exceeded the specified size limit and the old messages were overwritten.	os-logging	"This message is for information however the " "user may consider to increase logging-persistent size or to " "delete old logging persistent files."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>LOGGERSOLDENCD</del>	4-Warning	Logging persistent exceeded the threshold value and its space is full. The threshold capacity was changed to the default value. Oldest logging-persistent files will be deleted.	This log message to indicate when logging persistent command exceeded the specified size limitthreshold value and the old messages were overwritten.	syslog	"This message is for information however the " "user may consider to increase logging-persistent size or to " "delete old logging persistent files."
<del>LOGGERSOLDENCD</del>	4-Warning	Logging persistent exceeded the threshold value and its space is full. The threshold capacity was changed to the default value. Oldest logging-persistent files will be deleted.	This log message to indicate when logging persistent command exceeded the specified size limitthreshold value and the old messages were overwritten.	syslog	"This message is for information however the " "user may consider to increase logging-persistent size or to " "delete old logging persistent files."
SYS4NV_BLOCK_NIFAL	4-Warning	Unable to initialize the geometry of nvram	The software detected that it failed to initialize the nvram block geometry a part of the nvram to host non config data files. Typically these files are used by snmp to store and retrieve non config persistent data accross system reload. This may happen when the entire nvram is packed with the configuration and the newer version of software which supports this feature could not find the minimum room in the nvram to initialize block file system.	-	"Reduce the configurations in the nvram atleast by 2K"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS4NV_BLOCK_INITAL	4-Warning	Unable to initialize the geometry of nvram	The software detected that it failed to initialize the nvram block geometry a part of the nvram to host non config data files. Typically these files are used by snmp to store and retrieve non config persistent data accross system reload. This may happen when the entire nvram is packed with the configuration and the newer version of software which supports this feature could not find the minimum room in the nvram to initialize block file system.	-	"Reduce the configurations in the nvram atleast by 2K"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS4NV_BLOCK_NIFAIL	4-Warning	Unable to initialize the geometry of nvram	The software detected that it failed to initialize the nvram block geometry a part of the nvram to host non config data files. Typically these files are used by snmp to store and retrieve non config persistent data accross system reload. This may happen when the entire nvram is packed with the configuration and the newer version of software which supports this feature could not find the minimum room in the nvram to initialize block file system.	-	"Reduce the configurations in the nvram atleast by 2K"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS4NV_BLOCK_INITAL	4-Warning	Unable to initialize the geometry of nvram	The software detected that it failed to initialize the nvram block geometry a part of the nvram to host non config data files. Typically these files are used by snmp to store and retrieve non config persistent data accross system reload. This may happen when the entire nvram is packed with the configuration and the newer version of software which supports this feature could not find the minimum room in the nvram to initialize block file system.	-	"Reduce the configurations in the nvram atleast by 2K"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS4NV_BLOCK_NIFAIL	4-Warning	Unable to initialize the geometry of nvram	The software detected that it failed to initialize the nvram block geometry a part of the nvram to host non config data files. Typically these files are used by snmp to store and retrieve non config persistent data accross system reload. This may happen when the entire nvram is packed with the configuration and the newer version of software which supports this feature could not find the minimum room in the nvram to initialize block file system.	-	"Reduce the configurations in the nvram atleast by 2K"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS4NV_BLOCK_INIT_FAIL	4-Warning	Unable to initialize the geometry of nvram	The software detected that it failed to initialize the nvram block geometry a part of the nvram to host non config data files. Typically these files are used by snmp to store and retrieve non config persistent data accross system reload. This may happen when the entire nvram is packed with the configuration and the newer version of software which supports this feature could not find the minimum room in the nvram to initialize block file system.	-	"Reduce the configurations in the nvram atleast by 2K"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS4NV_BLOCK_INITFAIL	4-Warning	Unable to initialize the geometry of nvram	The software detected that it failed to initialize the nvram block geometry a part of the nvram to host non config data files. Typically these files are used by snmp to store and retrieve non config persistent data across system reload. This may happen when the entire nvram is packed with the configuration and the newer version of software which supports this feature could not find the minimum room in the nvram to initialize block file system.	-	"Reduce the configurations in the nvram atleast by 2K"
SYS4-NV_CHKSUM	4-Warning	An nvram checksum is already in progress	An interrupt service routine attempted to perform a checksum on the nvram contents and found the resource in use.	nvram	-
SYS4-NV_CHKSUM	4-Warning	An nvram checksum is already in progress	An interrupt service routine attempted to perform a checksum on the nvram contents and found the resource in use.	nvram	-
SYS4-NV_CHKSUM	4-Warning	An nvram checksum is already in progress	An interrupt service routine attempted to perform a checksum on the nvram contents and found the resource in use.	nvram	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-4-NV_CHKSUM	4-Warning	An nvram checksum is already in progress	An interrupt service routine attempted to perform a checksum on the nvram contents and found the resource in use.	nvram	-
SYS-4-NV_CHKSUM	4-Warning	An nvram checksum is already in progress	An interrupt service routine attempted to perform a checksum on the nvram contents and found the resource in use.	nvram	-
SYS-4-NV_CHKSUM	4-Warning	An nvram checksum is already in progress	An interrupt service routine attempted to perform a checksum on the nvram contents and found the resource in use.	nvram	-
SYS-4-NV_CHKSUM	4-Warning	An nvram checksum is already in progress	An interrupt service routine attempted to perform a checksum on the nvram contents and found the resource in use.	nvram	-
SYS-4-NV_NAID_BOOTUP	4-Warning	Nvram is invalid. Attempting to read and apply '[chars]' anyway	Nvram is corrupted. But still try to read startup-config as this was the behavior in 12.3T for platforms like c1700.	nvram	"Verify whether the box was powercycled or crash " "was triggered prior to this message. Issue 'show tech' command"
SYS-4-NV_NAID_BOOTUP	4-Warning	Nvram is invalid. Attempting to read and apply '[chars]' anyway	Nvram is corrupted. But still try to read startup-config as this was the behavior in 12.3T for platforms like c1700.	nvram	"Verify whether the box was powercycled or crash " "was triggered prior to this message. Issue 'show tech' command"
SYS-4-NV_NOLOCK	4-Warning	Failed to acquire an nvram lock	An interrupt service routine's attempt to acquire a semaphore lock failed	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-4-NV_NOLOCK	4-Warning	Failed to acquire an nvram lock	An interrupt service routine's attempt to acquire a semaphore lock failed	-	"Copy the error message exactly as it appears and report it to your " "technical support representative."
SYS4PUPDATECLOCK	4-Warning	Periodic Clock update with ROMMON failed because size left in ROMMON [node] size needed [node] error code [node]	This message indicates that the periodic update of the clock to ROMMON failed. This would indicate that the router when restarted may have past clock values	os	"Drop to rommon and clear unwanted rommon variable entries"
SYS4PUPDATECLOCK	4-Warning	Periodic Clock update with ROMMON failed because size left in ROMMON [node] size needed [node] error code [node]	This message indicates that the periodic update of the clock to ROMMON failed. This would indicate that the router when restarted may have past clock values	os	"Drop to rommon and clear unwanted rommon variable entries"
SYS-4-REGEXP	4-Warning	[chars].	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-4-REGEXP	4-Warning	[chars].	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-4-REGEXP	4-Warning	[chars].	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-4-REGEXP	4-Warning	[chars].	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-4-REGEXP	4-Warning	[chars].	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-4-REGEXP	4-Warning	[chars].	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-4-REGEXP	4-Warning	[chars].	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS4RELOAD_ATTEMPT	4-Warning	Attempt via SNMP failed system shutdown not configured	SNMP cannot be used to reload the router unless this functionality has been previously configured. This message reports that an attempt to reload the router failed because SNMP reloads are not currently configured on the router.	none	"This is a notification message only. No action is required."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS4RELOAD_ATTEMPT	4-Warning	Attempt via SNMP failed system shutdown not configured	SNMP cannot be used to reload the router unless this functionality has been previously configured. This message reports that an attempt to reload the router failed because SNMP reloads are not currently configured on the router.	none	"This is a notification message only. No action is required."
SYS4RELOAD_ATTEMPT	4-Warning	Attempt via SNMP failed system shutdown not configured	SNMP cannot be used to reload the router unless this functionality has been previously configured. This message reports that an attempt to reload the router failed because SNMP reloads are not currently configured on the router.	none	"This is a notification message only. No action is required."
SYS4RELOAD_ATTEMPT	4-Warning	Attempt via SNMP failed system shutdown not configured	SNMP cannot be used to reload the router unless this functionality has been previously configured. This message reports that an attempt to reload the router failed because SNMP reloads are not currently configured on the router.	none	"This is a notification message only. No action is required."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS4RELOAD_ATTEMPT	4-Warning	Attempt via SNMP failed system shutdown not configured	SNMP cannot be used to reload the router unless this functionality has been previously configured. This message reports that an attempt to reload the router failed because SNMP reloads are not currently configured on the router.	none	"This is a notification message only. No action is required."
SYS4RELOAD_ATTEMPT	4-Warning	Attempt via SNMP failed system shutdown not configured	SNMP cannot be used to reload the router unless this functionality has been previously configured. This message reports that an attempt to reload the router failed because SNMP reloads are not currently configured on the router.	none	"This is a notification message only. No action is required."
SYS4RELOAD_ATTEMPT	4-Warning	Attempt via SNMP failed system shutdown not configured	SNMP cannot be used to reload the router unless this functionality has been previously configured. This message reports that an attempt to reload the router failed because SNMP reloads are not currently configured on the router.	none	"This is a notification message only. No action is required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS4-RESBUFEXCEED	4-Warning	Resource user[chars] [chars] has exceeded the buffer [chars] threshold. configured [dec] Current usage :[dec]\n	The Resource User specified in the error message has violated the configured threshold. Its buffer usage has gone above the threshold. RESBUFEXCEED notifications should be matched with the corresponding <del>RESBUFEXCEED</del> notification.	rmi	"No action is required"
SYS4-RESBUFEXCEED	4-Warning	Resource user[chars] [chars] has exceeded the buffer [chars] threshold. configured [dec] Current usage :[dec]\n	The Resource User specified in the error message has violated the configured threshold. Its buffer usage has gone above the threshold. RESBUFEXCEED notifications should be matched with the corresponding <del>RESBUFEXCEED</del> notification.	rmi	"No action is required"
<del>SYS4-RESBUFEXCEED</del> SYS4-RESGLOBALBUFXCHD	4-Warning	Buffer usage has gone above buffer [chars] threshold configured by resource user[chars] [chars]\n configured [dec] Current usage :[dec]\n	The global buffer usage has gone above the threshold of the RU specified in the error message. <del>RESGLOBALBUFXCHD</del> notifications should be matched with the corresponding <del>RESGLOBALBUFXCHD</del> <del>RESGLOBALBUFXCHD</del> notification.	rmi	"No action is required"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SSRS</del> RESGLOBALBUFXCHD	4-Warning	Buffer usage has gone above buffer [chars] threshold configured by resource user[chars] [chars]\n configured [dec] Current usage :[dec]\n	The global buffer usage has gone above the threshold of the RU specified in the error message. <del>RESGLOBALBUFXCHD</del> notifications should be matched with the corresponding <del>RESGLOBALBUFXCHD</del> / <del>RESGLOBALBUFXCHD</del> / <del>RESGLOBALBUFXCHD</del> notification.	rmi	"No action is required"
<del>SSRS</del> RESGLOBALBUFXCHD	4-Warning	Buffer usage has gone below buffer [chars] threshold configured by resource user[chars] [chars]\n configured [dec] Current usage :[dec]\n	The global buffer usage has gone below the threshold of the RU specified in the error message.	rmi	"No action is required"
<del>SSRS</del> RESGLOBALBUFXCHD	4-Warning	Buffer usage has gone below buffer [chars] threshold configured by resource user[chars] [chars]\n configured [dec] Current usage :[dec]\n	The global buffer usage has gone below the threshold of the RU specified in the error message.	rmi	"No action is required"
<del>SSRS</del> RESGLOBALBUFXCHD	4-Warning	Global Buffer usage for resource user[chars] [chars] is no longer monitored for [chars] threshold.\n	The global buffer usage configured by the Resource User specified in the error message is no longer monitored for the specified threshold. The corresponding policy is revoked	rmi	"No action is required"
<del>SSRS</del> RESGLOBALBUFXCHD	4-Warning	Global Buffer usage for resource user[chars] [chars] is no longer monitored for [chars] threshold.\n	The global buffer usage configured by the Resource User specified in the error message is no longer monitored for the specified threshold. The corresponding policy is revoked	rmi	"No action is required"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SSRESGLOBALMEMEXCHD</del>	4-Warning	Global Memory has exceeded the [chars] threshold configure by resource user [chars]\n Pool: [chars] Used: [node] Threshold: [node]\n	The memory pool specified in the error message is experiencing a low-memory condition. The amount of free memory available in the specified memory pool has dropped below the configured low-memory limit. <del>RESGLOBALMEMEXCHD</del> notifications should be matched with the corresponding <del>RESGLOBALMEMEXCHD</del> notification.	rmi	"No action is required"
<del>SSRESGLOBALMEMEXCHD</del>	4-Warning	Global Memory has exceeded the [chars] threshold configure by resource user [chars]\n Pool: [chars] Used: [node] Threshold: [node]\n	The memory pool specified in the error message is experiencing a low-memory condition. The amount of free memory available in the specified memory pool has dropped below the configured low-memory limit. <del>RESGLOBALMEMEXCHD</del> notifications should be matched with the corresponding <del>RESGLOBALMEMEXCHD</del> notification.	rmi	"No action is required"
<del>SSRESGLOBALMEMEXCHD</del>	4-Warning	Global Memory has recovered after exceeding the [chars] threshold configure by resource user [chars]\n Pool: [chars] Used: [node] Threshold: [node]\n	The memory pool specified in the error message has recovered from a low-memory condition and the free memory in that pool is now above the configured low-memory limit.	rmi	"No action is required"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SSRSFCBMMRCOHR</del>	4-Warning	Global Memory has recovered after exceeding the [chars] threshold configure by resource user [chars]\n Pool: [chars] Used: [node] Threshold: [node]\n	The memory pool specified in the error message has recovered from a low-memory condition and the free memory in that pool is now above the configured low-memory limit.	rmi	"No action is required"
<del>SSRSFCBMMUNPHY</del>	4-Warning	Global Memory Usage for resource user [chars] is no longer monitored for [chars] threshold. Pool: [chars]\n	The memory pool specified in the error message configured by the specified Resource User is no longer monitored for low-memory condition. The corresponding policy is revoked	rmi	"No action is required"
<del>SSRSFCBMMUNPHY</del>	4-Warning	Global Memory Usage for resource user [chars] is no longer monitored for [chars] threshold. Pool: [chars]\n	The memory pool specified in the error message configured by the specified Resource User is no longer monitored for low-memory condition. The corresponding policy is revoked	rmi	"No action is required"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS4RESMEMEXCEED	4-Warning	Resource user [chars] has exceeded the [chars] memory threshold\nPool: [chars] Used: [node] Threshold: [node] \n	The memory pool specified in the error message is experiencing a low-memory condition. The amount of free memory available in the specified memory pool has dropped below the configured low-memory limit. RESMEMEXCEED notifications should be matched with the corresponding <del>RESMEMEXCEED</del> notification.	rmi	"No action is required"
SYS4RESMEMEXCEED	4-Warning	Resource user [chars] has exceeded the [chars] memory threshold\nPool: [chars] Used: [node] Threshold: [node] \n	The memory pool specified in the error message is experiencing a low-memory condition. The amount of free memory available in the specified memory pool has dropped below the configured low-memory limit. RESMEMEXCEED notifications should be matched with the corresponding <del>RESMEMEXCEED</del> notification.	rmi	"No action is required"
SYS4SDB_SANITY_ERR	4-Warning	sanity check failed for string [chars]	The owner of this string must have freed their structure without letting the string database know	os-logging	"No action is required"



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS4SDB_SANITY_ERR	4-Warning	sanity check failed for string [chars]	The owner of this string must have freed their structure without letting the string database know	os-logging	"No action is required"
<del>SYS4SNMP_HOSTCONFIGSET</del>	4-Warning	SNMP hostConfigSet request. Loading configuration from %i	SNMP is reading the host configuration from a network host.	none	"This is a notification message only. No action is required."
<del>SYS4SNMP_HOSTCONFIGSET</del>	4-Warning	SNMP hostConfigSet request. Loading configuration from %i	SNMP is reading the host configuration from a network host.	none	"This is a notification message only. No action is required."
<del>SYS4SNMP_HOSTCONFIGSET</del>	4-Warning	SNMP hostConfigSet request. Loading configuration from %i	SNMP is reading the host configuration from a network host.	none	"This is a notification message only. No action is required."
<del>SYS4SNMP_HOSTCONFIGSET</del>	4-Warning	SNMP hostConfigSet request. Loading configuration from %i	SNMP is reading the host configuration from a network host.	none	"This is a notification message only. No action is required."
<del>SYS4SNMP_HOSTCONFIGSET</del>	4-Warning	SNMP hostConfigSet request. Loading configuration from %i	SNMP is reading the host configuration from a network host.	none	"This is a notification message only. No action is required."
<del>SYS4SNMP_HOSTCONFIGSET</del>	4-Warning	SNMP hostConfigSet request. Loading configuration from %i	SNMP is reading the host configuration from a network host.	none	"This is a notification message only. No action is required."
<del>SYS4SNMP_HOSTCONFIGSET</del>	4-Warning	SNMP hostConfigSet request. Loading configuration from %i	SNMP is reading the host configuration from a network host.	none	"This is a notification message only. No action is required."
<del>SYS4SNMP_HOSTCONFIGSET</del>	4-Warning	SNMP hostConfigSet request. Loading configuration from %i	SNMP is reading the host configuration from a network host.	none	"This is a notification message only. No action is required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS4SNMP_NEICONFSET	4-Warning	SNMP netConfigSet request. Loading configuration from [node]	SNMP is reading the network configuration from a network host.	none	"This is a notification message only. No action is required."
SYS4SNMP_NEICONFSET	4-Warning	SNMP netConfigSet request. Loading configuration from [node]	SNMP is reading the network configuration from a network host.	none	"This is a notification message only. No action is required."
SYS4SNMP_NEICONFSET	4-Warning	SNMP netConfigSet request. Loading configuration from [node]	SNMP is reading the network configuration from a network host.	none	"This is a notification message only. No action is required."
SYS4SNMP_NEICONFSET	4-Warning	SNMP netConfigSet request. Loading configuration from [node]	SNMP is reading the network configuration from a network host.	none	"This is a notification message only. No action is required."
SYS4SNMP_NEICONFSET	4-Warning	SNMP netConfigSet request. Loading configuration from [node]	SNMP is reading the network configuration from a network host.	none	"This is a notification message only. No action is required."
SYS4SNMP_NEICONFSET	4-Warning	SNMP netConfigSet request. Loading configuration from [node]	SNMP is reading the network configuration from a network host.	none	"This is a notification message only. No action is required."
SYS4SNMP_NEICONFSET	4-Warning	SNMP netConfigSet request. Loading configuration from [node]	SNMP is reading the network configuration from a network host.	none	"This is a notification message only. No action is required."
SYS4SNMP_WRITEINET	4-Warning	SNMP WriteNet request. Writing current configuration to %i	SNMP is writing the current configuration to a network host.	none	"These are notification messages only. No action is required."
SYS4SNMP_WRITEINET	4-Warning	SNMP WriteNet request. Writing current configuration to %i	SNMP is writing the current configuration to a network host.	none	"These are notification messages only. No action is required."
SYS4SNMP_WRITEINET	4-Warning	SNMP WriteNet request. Writing current configuration to %i	SNMP is writing the current configuration to a network host.	none	"These are notification messages only. No action is required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS4SNMP_WRIIENET	4-Warning	SNMP WriteNet request. Writing current configuration to %i	SNMP is writing the current configuration to a network host.	none	"These are notification messages only. No action is required."
SYS4SNMP_WRIIENET	4-Warning	SNMP WriteNet request. Writing current configuration to %i	SNMP is writing the current configuration to a network host.	none	"These are notification messages only. No action is required."
SYS4SNMP_WRIIENET	4-Warning	SNMP WriteNet request. Writing current configuration to %i	SNMP is writing the current configuration to a network host.	none	"These are notification messages only. No action is required."
SYS4SNMP_WRIIENET	4-Warning	SNMP WriteNet request. Writing current configuration to %i	SNMP is writing the current configuration to a network host.	none	"These are notification messages only. No action is required."
SYS-4-THRESHOLD	4-Warning	Free Memory has dropped below low watermark. Pool: [chars] Free: [node] Threshold: [node]	The memory pool specified in the error message is experiencing a low-memory condition. The amount of free memory available in the specified memory pool has dropped below the configured low-memory limit.	-	"No action is required"
SYS-4-THRESHOLD	4-Warning	Free Memory has dropped below low watermark. Pool: [chars] Free: [node] Threshold: [node]	The memory pool specified in the error message is experiencing a low-memory condition. The amount of free memory available in the specified memory pool has dropped below the configured low-memory limit.	-	"No action is required"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS4THRESHOLD_TK	4-Warning	Free Memory has dropped below low watermark. Pool: [chars] Free: [node] Threshold: [node] Tracekey: [chars]	The memory pool specified in the error message is experiencing a low-memory condition. The amount of free memory available in the specified memory pool has dropped below the configured low-memory limit.	-	"No action is required"
SYS4THRESHOLD_TK	4-Warning	Free Memory has dropped below low watermark. Pool: [chars] Free: [node] Threshold: [node] Tracekey: [chars]	The memory pool specified in the error message is experiencing a low-memory condition. The amount of free memory available in the specified memory pool has dropped below the configured low-memory limit.	-	"No action is required"
SYS4USERLOG_WARNING	4-Warning	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS4USERLOG_WARNING	4-Warning	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."
SYS4USERLOG_WARNING	4-Warning	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."
SYS4USERLOG_WARNING	4-Warning	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS4USERLOG_WARNING	4-Warning	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."
SYS4USERLOG_WARNING	4-Warning	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."
SYS4USERLOG_WARNING	4-Warning	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."
SYS4VRF_ABNORMAL_WARNING	4-Warning	[chars]	The number of VRF's obtained from the platform is zero	os-logging	"If the registry is not populated for the subsystem " "is not in the image then the return value will be " "FALSE"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SSMFTABLEN1WRNG	4-Warning	[chars]	The number of VRF's obtained from the platform is zero	os-logging	"If the registry is not populated for the subsystem " "is not in the image then the return value will be " "FALSE"
SYS-5-CONFIG	5-Notice	Configured from [chars]	The router's configuration was changed.	none	"This is a notification message only. No action is required."
SYS-5-CONFIG	5-Notice	Configured from [chars]	The router's configuration was changed.	none	"This is a notification message only. No action is required."
SYS-5-CONFIG	5-Notice	Configured from [chars]	The router's configuration was changed.	none	"This is a notification message only. No action is required."
SYS-5-CONFIG	5-Notice	Configured from [chars]	The router's configuration was changed.	none	"This is a notification message only. No action is required."
SYS-5-CONFIG	5-Notice	Configured from [chars]	The router's configuration was changed.	none	"This is a notification message only. No action is required."
SYS-5-CONFIG	5-Notice	Configured from [chars]	The router's configuration was changed.	none	"This is a notification message only. No action is required."
SYS-5-CONFIG	5-Notice	Configured from [chars]	The router's configuration was changed.	none	"This is a notification message only. No action is required."
SYS-5-CONFIG_C	5-Notice	Running-config file is [chars]	The router's configuration was changed.	none	"This is a notification message only. No action is required."
SYS-5-CONFIG_C	5-Notice	Running-config file is [chars]	The router's configuration was changed.	none	"This is a notification message only. No action is required."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-5-CONFIG_I	5-Notice	Configured from [chars] by [chars]	The write of the system running configuration failed.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-5-CONFIG_I	5-Notice	Configured from [chars] by [chars]	The write of the system running configuration failed.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-5-CONFIG_I	5-Notice	Configured from [chars] by [chars]	The write of the system running configuration failed.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-5-CONFIG_I	5-Notice	Configured from [chars] by [chars]	The write of the system running configuration failed.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-5-CONFIG_I	5-Notice	Configured from [chars] by [chars]	The write of the system running configuration failed.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-5-CONFIG_I	5-Notice	Configured from [chars] by [chars]	The write of the system running configuration failed.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-5-CONFIG_I	5-Notice	Configured from [chars] by [chars]	The write of the system running configuration failed.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-5-CONFIG_I	5-Notice	Configured from [chars] by [chars]	The write of the system running configuration failed.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-5-CONFIG_NV	5-Notice	Nonvolatile storage configured from [chars]	The configuration was written successfully.	none	"This is a notification message only. No action is required."
SYS-5-CONFIG_NV	5-Notice	Nonvolatile storage configured from [chars]	The configuration was written successfully.	none	"This is a notification message only. No action is required."
SYS-5-CONFIG_NV	5-Notice	Nonvolatile storage configured from [chars]	The configuration was written successfully.	none	"This is a notification message only. No action is required."
SYS-5-CONFIG_NV	5-Notice	Nonvolatile storage configured from [chars]	The configuration was written successfully.	none	"This is a notification message only. No action is required."
SYS-5-CONFIG_NV	5-Notice	Nonvolatile storage configured from [chars]	The configuration was written successfully.	none	"This is a notification message only. No action is required."
SYS-5-CONFIG_NV	5-Notice	Nonvolatile storage configured from [chars]	The configuration was written successfully.	none	"This is a notification message only. No action is required."
SYS-5-CONFIG_NV	5-Notice	Nonvolatile storage configured from [chars]	The configuration was written successfully.	none	"This is a notification message only. No action is required."
SYS-5-CONFIG_NV_I	5-Notice	Nonvolatile storage configured from [chars] by [chars]	The write of the nonvolatile configuration failed.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-5-CONFIG_NV_I	5-Notice	Nonvolatile storage configured from [chars] by [chars]	The write of the nonvolatile configuration failed.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-5-CONFIG_NV_I	5-Notice	Nonvolatile storage configured from [chars] by [chars]	The write of the nonvolatile configuration failed.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-5-CONFIG_NV_I	5-Notice	Nonvolatile storage configured from [chars] by [chars]	The write of the nonvolatile configuration failed.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-5-CONFIG_NV_I	5-Notice	Nonvolatile storage configured from [chars] by [chars]	The write of the nonvolatile configuration failed.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-5-CONFIG_NV_I	5-Notice	Nonvolatile storage configured from [chars] by [chars]	The write of the nonvolatile configuration failed.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-5-CONFIG_NV_I	5-Notice	Nonvolatile storage configured from [chars] by [chars]	The write of the nonvolatile configuration failed.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-5-CONFIG_P	5-Notice	Configured programmatically by process [chars] from [chars] as [chars]	The router's configuration was changed programmatically.	none	"This is a notification message only. No action is required."
SYS-5-CONFIG_P	5-Notice	Configured programmatically by process [chars] from [chars] as [chars]	The router's configuration was changed programmatically.	none	"This is a notification message only. No action is required."
SYS-5-CONFIG_R	5-Notice	Config Replace is [chars]	The router's configuration was changed.	none	"This is a notification message only. No action is required."
SYS-5-CONFIG_R	5-Notice	Config Replace is [chars]	The router's configuration was changed.	none	"This is a notification message only. No action is required."
SYS-5-FIFOBUS_ERR	5-Notice	Flow-control threshold on module [dec] has exceeded the default value. Threshold will be set to lower value	The FIFO threshold values are monitored for flow-control. When the threshold value exceeds the default the value is set to new lower value	Cat6000-env	LOG_SID_NO_ACTION
SYS-5-FIFOBUS_ERR	5-Notice	Flow-control threshold on module [dec] has exceeded the default value. Threshold will be set to lower value	The FIFO threshold values are monitored for flow-control. When the threshold value exceeds the default the value is set to new lower value	Cat6000-env	LOG_SID_NO_ACTION
SYS-5-FIFOBUS_ERR	5-Notice	Flow-control threshold on module [dec] has exceeded the default value. Threshold will be set to lower value	The FIFO threshold values are monitored for flow-control. When the threshold value exceeds the default the value is set to new lower value	Cat6000-env	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-5-FIFOBUS_ERR	5-Notice	Flow-control threshold on module [dec] has exceeded the default value. Threshold will be set to lower value	The FIFO threshold values are monitored for flow-control. When the threshold value exceeds the default the value is set to new lower value	Cat6000-env	LOG_SID_NO_ACTION
SYS-5-FIFOBUS_ERR	5-Notice	Flow-control threshold on module [dec] has exceeded the default value. Threshold will be set to lower value	The FIFO threshold values are monitored for flow-control. When the threshold value exceeds the default the value is set to new lower value	Cat6000-env	LOG_SID_NO_ACTION
SYS-5-FIFOBUS_ERR	5-Notice	Flow-control threshold on module [dec] has exceeded the default value. Threshold will be set to lower value	The FIFO threshold values are monitored for flow-control. When the threshold value exceeds the default the value is set to new lower value	Cat6000-env	LOG_SID_NO_ACTION
SYS-5-FIFOBUS_ERR	5-Notice	Flow-control threshold on module [dec] has exceeded the default value. Threshold will be set to lower value	The FIFO threshold values are monitored for flow-control. When the threshold value exceeds the default the value is set to new lower value	Cat6000-env	LOG_SID_NO_ACTION
SYSMEMLOW_NOIFY	5-Notice	Top memory allocators could not be displayed currently at low memory situation refer show memory output/crashinfo file.	IOSD memory consumption exceeded 90[node]op memory allocator could not be displayed. Top allocators can be found from show memory output or crashinfo file.	mem	"No action is required"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYSSREMEMLOWNOIFY	5-Notice	Top memory allocators could not be displayed currently at low memory situation refer show memory output/crashinfo file.	IOSD memory consumption exceeded 90[node]op memory allocator could not be displayed. Top allocators can be found from show memory output or crashinfo file.	mem	"No action is required"
SYSSREMEMRECOVER	5-Notice	Free Memory has recovered above low watermark\nPool: [chars] Free: [node] Threshold: [node]\n	The memory pool specified in the error message has recovered from a low-memory condition and the free memory in that pool is now above the configured low-memory limit.	-	"No action is required"
SYSSREMEMRECOVER	5-Notice	Free Memory has recovered above low watermark\nPool: [chars] Free: [node] Threshold: [node]\n	The memory pool specified in the error message has recovered from a low-memory condition and the free memory in that pool is now above the configured low-memory limit.	-	"No action is required"
SYSSREMEMRECOVER	5-Notice	Free Memory has recovered above low watermark\nPool: [chars] Free: [node] Threshold: [node]\n	The memory pool specified in the error message has recovered from a low-memory condition and the free memory in that pool is now above the configured low-memory limit.	-	"No action is required"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYSSFREEMEMRECOVER	5-Notice	Free Memory has recovered above low watermark\nPool: [chars] Free: [node] Threshold: [node]\n	The memory pool specified in the error message has recovered from a low-memory condition and the free memory in that pool is now above the configured low-memory limit.	-	"No action is required"
SYSSFREEMEMRECOVER	5-Notice	Free Memory has recovered above low watermark\nPool: [chars] Free: [node] Threshold: [node]\n	The memory pool specified in the error message has recovered from a low-memory condition and the free memory in that pool is now above the configured low-memory limit.	-	"No action is required"
SYSSFREEMEMRECOVER	5-Notice	Free Memory has recovered above low watermark Pool: [chars] Free: [node] freemem_lwm: [node]	The memory pool specified in error message has recovered from a low-memory condition and free memory in that pool is now above the configured low-memory limit in the system .	-	"No action is required"
SYSSFREEMEMRECOVER	5-Notice	Free Memory has recovered above low watermark Pool: [chars] Free: [node] freemem_lwm: [node]	The memory pool specified in error message has recovered from a low-memory condition and free memory in that pool is now above the configured low-memory limit in the system .	-	"No action is required"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SSSGLOBALBUFCOMR	5-Notice	Buffer usage has gone below global buffer [chars] threshold\nconfigured [dec] Current usage :[dec]\n	global buffer usage has gone below the configured limit. This is the indication of recovery	rmi	"No action is required"
SSSGLOBALBUFCOMR	5-Notice	Buffer usage has gone below global buffer [chars] threshold\nconfigured [dec] Current usage :[dec]\n	global buffer usage has gone below the configured limit. This is the indication of recovery	rmi	"No action is required"
SSSGLOBALBUFNABY	5-Notice	Global Buffer usage is no longer monitored for [chars] threshold\n	Global buffer usage is no longer monitored for the specified threshold. The corresponding policy is revoked	rmi	"No action is required"
SSSGLOBALBUFNABY	5-Notice	Global Buffer usage is no longer monitored for [chars] threshold\n	Global buffer usage is no longer monitored for the specified threshold. The corresponding policy is revoked	rmi	"No action is required"
SSSGLOBALMEMEXCD	5-Notice	Global Memory has exceeded the [chars] threshold\nPool: [chars] Used: [node] Threshold: [node]\n	The memory pool specified in the error message has exceeded the global memory threshold configured.the memory consumed in that pool has exceeded the configured limit. GLOBALMEMEXCEED notificatons should be matched with the corresponding <del>GLOBALMEMEXCEED</del> notification.	rmi	"No action is required"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SYSS</del> GLOBALMEMEXCHD	5-Notice	Global Memory has exceeded the [chars] threshold\nPool: [chars] Used: [node] Threshold: [node]\n	The memory pool specified in the error message has exceeded the global memory threshold configured.the memory consumed in that pool has exceeded the configured limit. <del>GLOBALMEMEXCEED</del> notificatons should be matched with the corresponding <del>GLOBALMEMEXCEED</del> notification.	rmi	"No action is required"
<del>SYSS</del> GLOBALMEMRCOMR	5-Notice	Global Memory has recovered after exceeding [chars] threshold\n Pool: [chars] Used: [node] Threshold: [node]\n	The memory pool specified in the error message has recovered from a low-memory condition and the memory consumed in that pool is now below the configured limit.	rmi	"No action is required"
<del>SYSS</del> GLOBALMEMRCOMR	5-Notice	Global Memory has recovered after exceeding [chars] threshold\n Pool: [chars] Used: [node] Threshold: [node]\n	The memory pool specified in the error message has recovered from a low-memory condition and the memory consumed in that pool is now below the configured limit.	rmi	"No action is required"
<del>SYSS</del> GLOBALMEMLNABLY	5-Notice	Global Memory usage is no longer monitored for [chars] threshold. Pool: [chars]\n	The memory pool specified in the error message is no longer monitored for low-memory condition. The corresponding policy is revoked	rmi	"No action is required"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SSS-CB-MEM-NBY	5-Notice	Global Memory usage is no longer monitored for [chars] threshold. Pool: [chars]\n	The memory pool specified in the error message is no longer monitored for low-memory condition. The corresponding policy is revoked	rmi	"No action is required"
SSS-LOG-CONF-CHANGE	5-Notice	[chars]	The user has changed the syslog logging configuration.	os-logging	LOG_SID_NO_ACTION
SSS-LOG-CONF-CHANGE	5-Notice	[chars]	The user has changed the syslog logging configuration.	os-logging	LOG_SID_NO_ACTION
SSS-LOG-CONF-CHANGE	5-Notice	-	-	-	-
SSS-LOG-CONF-CHANGE	5-Notice	-	-	-	-
SYS-5-LOGGING_START	5-Notice	Logging enabled - [chars] \n	Syslog logging has been enabled by the user. From now on syslog messages will be delivered to all configured destinations.	os-logging	LOG_SID_NO_ACTION
SYS-5-LOGGING_START	5-Notice	Logging enabled - [chars] \n	Syslog logging has been enabled by the user. From now on syslog messages will be delivered to all configured destinations.	os-logging	LOG_SID_NO_ACTION
SYS-5-LOGGING_STOP	5-Notice	Logging disabled - [chars] \n	Syslog logging has been disabled by the user from now on syslog message will not be received by the syslog servers or hosts will not be receiving the syslog messages	os-logging	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-5-LOGGING_STOP	5-Notice	Logging disabled - [chars] \n	Syslog logging has been disabled by the user from now on syslog message will not be received by the syslog servers or hosts will not be receiving the syslog messages	os-logging	LOG_SID_NO_ACTION
SYS-5-OUTSETUP	5-Notice	Configuration file [chars] accepted aborting setup	A configuration was accepted over the network so the setup session will be aborted.	none	"This is a notification message only. No action is required."
SYS-5-OUTSETUP	5-Notice	Configuration file [chars] accepted aborting setup	A configuration was accepted over the network so the setup session will be aborted.	none	"This is a notification message only. No action is required."
SYS-5-OUTSETUP	5-Notice	Configuration file [chars] accepted aborting setup	A configuration was accepted over the network so the setup session will be aborted.	none	"This is a notification message only. No action is required."
SYS-5-OUTSETUP	5-Notice	Configuration file [chars] accepted aborting setup	A configuration was accepted over the network so the setup session will be aborted.	none	"This is a notification message only. No action is required."
SYS-5-OUTSETUP	5-Notice	Configuration file [chars] accepted aborting setup	A configuration was accepted over the network so the setup session will be aborted.	none	"This is a notification message only. No action is required."
SYS-5-OUTSETUP	5-Notice	Configuration file [chars] accepted aborting setup	A configuration was accepted over the network so the setup session will be aborted.	none	"This is a notification message only. No action is required."
SYS-5-OUTSETUP	5-Notice	Configuration file [chars] accepted aborting setup	A configuration was accepted over the network so the setup session will be aborted.	none	"This is a notification message only. No action is required."
SYS-5-OUTSETUP	5-Notice	Configuration file [chars] accepted aborting setup	A configuration was accepted over the network so the setup session will be aborted.	none	"This is a notification message only. No action is required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS5PRIV_AUTH_FAIL	5-Notice	Authentication to Privilage level [dec] failed by[chars][chars]	-	os-logging	"This is a notification message only. No action is required. " "To disable this particular logging feature issue the " "<CmdBold>no logging userinfo<NoCmdBold> command from the " "global configuration mode."
SYS5PRIV_AUTH_FAIL	5-Notice	Authentication to Privilage level [dec] failed by[chars][chars]	-	os-logging	"This is a notification message only. No action is required. " "To disable this particular logging feature issue the " "<CmdBold>no logging userinfo<NoCmdBold> command from the " "global configuration mode."
SYS5PRIV_AUTH_FAIL	5-Notice	Authentication to Privilage level [dec] failed by[chars][chars]	-	os-logging	"This is a notification message only. No action is required. " "To disable this particular logging feature issue the " "<CmdBold>no logging userinfo<NoCmdBold> command from the " "global configuration mode."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS5-PRIV_AUTH_FAIL	5-Notice	Authentication to Privilage level [dec] failed by[chars][chars]	-	os-logging	"This is a notification message only. No action is required. " "To disable this particular logging feature issue the " "<CmdBold>no logging userinfo<NoCmdBold> command from the " "global configuration mode."
SYS5-PRIV_AUTH_FAIL	5-Notice	Authentication to Privilage level [dec] failed by[chars][chars]	-	os-logging	"This is a notification message only. No action is required. " "To disable this particular logging feature issue the " "<CmdBold>no logging userinfo<NoCmdBold> command from the " "global configuration mode."
SYS5-PRIV_AUTH_FAIL	5-Notice	Authentication to privilege level [dec] failed by [chars][chars]	-	os-logging	"This is a notification message only. No action is required. " "To disable this particular logging feature issue the " "<CmdBold>no logging userinfo<NoCmdBold> command from the " "global configuration mode."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS5PRIV_AUTH_FAIL	5-Notice	Authentication to privilege level [dec] failed by [chars][chars]	-	os-logging	"This is a notification message only. No action is required. " "To disable this particular logging feature issue the " "<CmdBold>no logging userinfo<NoCmdBold> command from the " "global configuration mode."
SYS5PRIV_AUTH_PASS	5-Notice	Privilege level set to [dec] by[chars][chars]	-	os-logging	"This is a notification message only. No action is required. " "To disable this particular logging feature issue the " "<CmdBold>no logging userinfo<NoCmdBold> command from the " "global configuration mode."
SYS5PRIV_AUTH_PASS	5-Notice	Privilege level set to [dec] by[chars][chars]	-	os-logging	"This is a notification message only. No action is required. " "To disable this particular logging feature issue the " "<CmdBold>no logging userinfo<NoCmdBold> command from the " "global configuration mode."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS5PRIV_AUTH_PASS	5-Notice	Privilege level set to [dec] by[chars][chars]	-	os-logging	"This is a notification message only. No action is required. " "To disable this particular logging feature issue the " "<CmdBold>no logging userinfo<NoCmdBold> command from the " "global configuration mode."
SYS5PRIV_AUTH_PASS	5-Notice	Privilege level set to [dec] by[chars][chars]	-	os-logging	"This is a notification message only. No action is required. " "To disable this particular logging feature issue the " "<CmdBold>no logging userinfo<NoCmdBold> command from the " "global configuration mode."
SYS5PRIV_AUTH_PASS	5-Notice	Privilege level set to [dec] by[chars][chars]	-	os-logging	"This is a notification message only. No action is required. " "To disable this particular logging feature issue the " "<CmdBold>no logging userinfo<NoCmdBold> command from the " "global configuration mode."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS5PRIV_AUTH_PASS	5-Notice	Privilege level set to [dec] by[chars][chars]	-	os-logging	"This is a notification message only. No action is required. " "To disable this particular logging feature issue the " "<CmdBold>no logging userinfo<NoCmdBold> command from the " "global configuration mode."
SYS5PRIV_AUTH_PASS	5-Notice	Privilege level set to [dec] by[chars][chars]	-	os-logging	"This is a notification message only. No action is required. " "To disable this particular logging feature issue the " "<CmdBold>no logging userinfo<NoCmdBold> command from the " "global configuration mode."
SYS-5-PRIV_I	5-Notice	Privilege level set to [dec] by[chars][chars]	-	os-logging	"This is a notification message only. No action is required. " "To disable this particular logging feature issue the " "<CmdBold>no logging userinfo<NoCmdBold> command from the " "global configuration mode."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-5-PRIV_I	5-Notice	Privilege level set to [dec] by[chars][chars]	-	os-logging	"This is a notification message only. No action is required. " "To disable this particular logging feature issue the " "<CmdBold>no logging userinfo<NoCmdBold> command from the " "global configuration mode."
SYS-5-PRIV_I	5-Notice	Privilege level set to [dec] by[chars][chars]	-	os-logging	"This is a notification message only. No action is required. " "To disable this particular logging feature issue the " "<CmdBold>no logging userinfo<NoCmdBold> command from the " "global configuration mode."
SYS-5-PRIV_I	5-Notice	Privilege level set to [dec] by[chars][chars]	-	os-logging	"This is a notification message only. No action is required. " "To disable this particular logging feature issue the " "<CmdBold>no logging userinfo<NoCmdBold> command from the " "global configuration mode."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-5-PRIV_I	5-Notice	Privilege level set to [dec] by[chars][chars]	-	os-logging	"This is a notification message only. No action is required. " "To disable this particular logging feature issue the " "<CmdBold>no logging userinfo<NoCmdBold> command from the " "global configuration mode."
SYS-5-PRIV_I	5-Notice	Privilege level set to [dec] by[chars][chars]	-	os-logging	"This is a notification message only. No action is required. " "To disable this particular logging feature issue the " "<CmdBold>no logging userinfo<NoCmdBold> command from the " "global configuration mode."
SYS-5-PRIV_I	5-Notice	Privilege level set to [dec] by[chars][chars]	-	os-logging	"This is a notification message only. No action is required. " "To disable this particular logging feature issue the " "<CmdBold>no logging userinfo<NoCmdBold> command from the " "global configuration mode."
SYS-5-RELOAD	5-Notice	Reload requested[chars]	A reload or restart was requested.	none	"This is a notification message only. No action is required."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-5-RELOAD	5-Notice	Reload requested[chars]	A reload or restart was requested.	none	"This is a notification message only. No action is required."
SYS-5-RELOAD	5-Notice	Reload requested[chars]	A reload or restart was requested.	none	"This is a notification message only. No action is required."
SYS-5-RELOAD	5-Notice	Reload requested[chars]	A reload or restart was requested.	none	"This is a notification message only. No action is required."
SYS-5-RELOAD	5-Notice	Reload requested[chars]	A reload or restart was requested.	none	"This is a notification message only. No action is required."
SYS-5-RELOAD	5-Notice	Reload requested[chars]	A reload or restart was requested.	none	"This is a notification message only. No action is required."
SYS-5-RELOAD	5-Notice	Reload requested[chars]	A reload or restart was requested.	none	"This is a notification message only. No action is required."
SYS5RESBUFRECOVER	5-Notice	Resource user[chars] [chars] has recovered after exceeding the buffer [chars] threshold. configured [dec] Current usage :[dec]\n	The Resource User specified in the error message has recovered from the high buffer usage. Its usage has gone below the threshold	rmi	"No action is required"
SYS5RESBUFRECOVER	5-Notice	Resource user[chars] [chars] has recovered after exceeding the buffer [chars] threshold. configured [dec] Current usage :[dec]\n	The Resource User specified in the error message has recovered from the high buffer usage. Its usage has gone below the threshold	rmi	"No action is required"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS5RESEBUFUNAPPLY	5-Notice	Buffer Usage of resource user[chars] [chars] is no longer monitored for the [chars] threshold.\n	The Resource User specified in the error message is no longer monitored for high buffer usage. The corresponding policy is revoked	rmi	"No action is required"
SYS5RESEBUFUNAPPLY	5-Notice	Buffer Usage of resource user[chars] [chars] is no longer monitored for the [chars] threshold.\n	The Resource User specified in the error message is no longer monitored for high buffer usage. The corresponding policy is revoked	rmi	"No action is required"
SYS5RESMEMRECOVER	5-Notice	Resource user [chars] has recovered after exceeding the [chars] memory threshold\nPool: [chars] Used: [dec] Threshold :[dec] \n	The memory pool specified in the error message is recovering from a low-memory condition. The amount of free memory available in the specified memory pool has recovered above the configured low-memory limit.	rmi	"No action is required"
SYS5RESMEMRECOVER	5-Notice	Resource user [chars] has recovered after exceeding the [chars] memory threshold\nPool: [chars] Used: [dec] Threshold :[dec] \n	The memory pool specified in the error message is recovering from a low-memory condition. The amount of free memory available in the specified memory pool has recovered above the configured low-memory limit.	rmi	"No action is required"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS5RESMEMUNAPPLY	5-Notice	Memory usage of Resource user [chars] is no longer monitored for [chars] threshold. Pool: [chars]\n	The memory pool specified in the error message is no longer monitored for low-memory condition as configured by the Resource User specified. The corresponding policy is revoked.	rmi	"No action is required"
SYS5RESMEMUNAPPLY	5-Notice	Memory usage of Resource user [chars] is no longer monitored for [chars] threshold. Pool: [chars]\n	The memory pool specified in the error message is no longer monitored for low-memory condition as configured by the Resource User specified. The corresponding policy is revoked.	rmi	"No action is required"
SYS-5-RESTART	5-Notice	System restarted --\n[chars]	A reload or restart was requested.	none	"This is a notification message only. No action is required."
SYS-5-RESTART	5-Notice	System restarted --\n[chars]	A reload or restart was requested.	none	"This is a notification message only. No action is required."
SYS-5-RESTART	5-Notice	System restarted --\n[chars]	A reload or restart was requested.	none	"This is a notification message only. No action is required."
SYS-5-RESTART	5-Notice	System restarted --\n[chars]	A reload or restart was requested.	none	"This is a notification message only. No action is required."
SYS-5-RESTART	5-Notice	System restarted --\n[chars]	A reload or restart was requested.	none	"This is a notification message only. No action is required."

<del>Facility-Severity-Mnemonic</del>	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SYS-5-RESTART</del>	5-Notice	System restarted --\n[chars]	A reload or restart was requested.	none	"This is a notification message only. No action is required."
<del>SYS-5-RESTART</del>	5-Notice	System restarted --\n[chars]	A reload or restart was requested.	none	"This is a notification message only. No action is required."
<del>SYSSCHEDULED_RELOAD</del>	5-Notice	Reload requested for [chars]	A scheduled reload has been requested for the router.	none	"No action is required."
<del>SYSSCHEDULED_RELOAD</del>	5-Notice	Reload requested for [chars]	A scheduled reload has been requested for the router.	none	"No action is required."
<del>SYSSCHEDULED_RELOAD</del>	5-Notice	Reload requested for [chars]	A scheduled reload has been requested for the router.	none	"No action is required."
<del>SYSSCHEDULED_RELOAD</del>	5-Notice	Reload requested for [chars]	A scheduled reload has been requested for the router.	none	"No action is required."
<del>SYSSCHEDULED_RELOAD</del>	5-Notice	Reload requested for [chars]	A scheduled reload has been requested for the router.	none	"No action is required."
<del>SYSSCHEDULED_RELOAD</del>	5-Notice	Reload requested for [chars]	A scheduled reload has been requested for the router.	none	"No action is required."
<del>SYSSCHEDULED_RELOAD</del>	5-Notice	Reload requested for [chars]	A scheduled reload has been requested for the router.	none	"No action is required."
<del>SCHEDULED_RELOAD_CANCELLED</del>	5-Notice	Scheduled reload cancelled at [chars]	A scheduled reload that was requested for the router has been cancelled.	none	"No action is required."
<del>SCHEDULED_RELOAD_CANCELLED</del>	5-Notice	Scheduled reload cancelled at [chars]	A scheduled reload that was requested for the router has been cancelled.	none	"No action is required."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>SSCHEDIE_RHO_CANCELED</del>	5-Notice	Scheduled reload cancelled at [chars]	A scheduled reload that was requested for the router has been cancelled.	none	"No action is required."
<del>SSCHEDIE_RHO_CANCELED</del>	5-Notice	Scheduled reload cancelled at [chars]	A scheduled reload that was requested for the router has been cancelled.	none	"No action is required."
<del>SSCHEDIE_RHO_CANCELED</del>	5-Notice	Scheduled reload cancelled at [chars]	A scheduled reload that was requested for the router has been cancelled.	none	"No action is required."
<del>SSCHEDIE_RHO_CANCELED</del>	5-Notice	Scheduled reload cancelled at [chars]	A scheduled reload that was requested for the router has been cancelled.	none	"No action is required."
<del>SSCHEDIE_RHO_CANCELED</del>	5-Notice	Scheduled reload cancelled at [chars]	A scheduled reload that was requested for the router has been cancelled.	none	"No action is required."
SYS-5-SWITCHOVER	5-Notice	Switchover requested[chars]	A switchover was requested.	none	"This is a notification message only. No action is required."
SYS-5-SWITCHOVER	5-Notice	Switchover requested[chars]	A switchover was requested.	none	"This is a notification message only. No action is required."
SYS-5-SWITCHOVER	5-Notice	Switchover requested[chars]	A switchover was requested.	none	"This is a notification message only. No action is required."
SYS-5-SWITCHOVER	5-Notice	Switchover requested[chars]	A switchover was requested.	none	"This is a notification message only. No action is required."
SYS-5-SWITCHOVER	5-Notice	Switchover requested[chars]	A switchover was requested.	none	"This is a notification message only. No action is required."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-5-SWITCHOVER	5-Notice	Switchover requested[chars]	A switchover was requested.	none	"This is a notification message only. No action is required."
SYS-5-SWITCHOVER	5-Notice	Switchover requested[chars]	A switchover was requested.	none	"This is a notification message only. No action is required."
SYS-5-TABLEERR	5-Notice	[chars] table [chars] damaged: [chars].	An internal table entry became corrupt.	-	"Copy the message exactly as it appears and report it your technical " "support representative."
SYS-5-TABLEERR	5-Notice	[chars] table [chars] damaged: [chars].	An internal table entry became corrupt.	-	"Copy the message exactly as it appears and report it your technical " "support representative."
SYS-5-TABLEERR	5-Notice	[chars] table [chars] damaged: [chars].	An internal table entry became corrupt.	-	"Copy the message exactly as it appears and report it your technical " "support representative."
SYS-5-TABLEERR	5-Notice	[chars] table [chars] damaged: [chars].	An internal table entry became corrupt.	-	"Copy the message exactly as it appears and report it your technical " "support representative."
SYS-5-TABLEERR	5-Notice	[chars] table [chars] damaged: [chars].	An internal table entry became corrupt.	-	"Copy the message exactly as it appears and report it your technical " "support representative."
SYS-5-TABLEERR	5-Notice	[chars] table [chars] damaged: [chars].	An internal table entry became corrupt.	-	"Copy the message exactly as it appears and report it your technical " "support representative."
SYS-5-TABLEERR	5-Notice	[chars] table [chars] damaged: [chars].	An internal table entry became corrupt.	-	"Copy the message exactly as it appears and report it your technical " "support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYSSUSERLOG_NOTICE	5-Notice	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."
SYSSUSERLOG_NOTICE	5-Notice	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."
SYSSUSERLOG_NOTICE	5-Notice	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS5USERLOG_NOTICE	5-Notice	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."
SYS5USERLOG_NOTICE	5-Notice	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."
SYS5USERLOG_NOTICE	5-Notice	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS5USERLOG_NOTICE	5-Notice	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."
SYS6BADSHAREINFO	6-Information	[chars] packet [hec] has a zero reference count freeing pid = [hec] \n\ freeing pc = [hec] [chars].	Provides additional information about original freer of packet.	-	-
SYS6BADSHAREINFO	6-Information	[chars] packet [hec] has a zero reference count freeing pid = [hec] \n\ freeing pc = [hec] [chars].	Provides additional information about original freer of packet.	-	-
SYS6BADSHAREINFO	6-Information	[chars] packet [hec] has a zero reference count freeing pid = [hec] \n\ freeing pc = [hec] [chars].	Provides additional information about original freer of packet.	-	-
SYS6BADSHAREINFO	6-Information	[chars] packet [hec] has a zero reference count freeing pid = [hec] \n\ freeing pc = [hec] [chars].	Provides additional information about original freer of packet.	-	-
SYS6BADSHAREINFO	6-Information	[chars] packet [hec] has a zero reference count freeing pid = [hec] \n\ freeing pc = [hec] [chars].	Provides additional information about original freer of packet.	-	-
SYS6BADSHAREINFO	6-Information	[chars] packet [hec] has a zero reference count freeing pid = [hec] \n\ freeing pc = [hec] [chars].	Provides additional information about original freer of packet.	-	-
SYS6BADSHAREINFO	6-Information	[chars] packet [hec] has a zero reference count freeing pid = [hec] \n\ freeing pc = [hec] [chars].	Provides additional information about original freer of packet.	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-6-BADSHAREINFO	6-Information	[chars] packet [hec] has a zero reference count freeing pid = [hec] \n\ freeing pc = [hec] [chars].	Provides additional information about original freer of packet.	-	-
SYS-6-BLKINFO	6-Information	[chars]blk [hec] words [node]alloc [hec] [chars] dealloc [hec] rfcnt [hec]	This is an auxiliary message to several memory-related messages. It provides a formatted display of some of the information in the header of a corrupted data block.	<del>libmtd</del>	"This message provides additional information only. Copy the error " "message exactly as it appears and report it to your technical support " "representative as part of the previously printed error message."
SYS-6-BLKINFO	6-Information	[chars]blk [hec] words [node]alloc [hec] [chars] dealloc [hec] rfcnt [hec]	This is an auxiliary message to several memory-related messages. It provides a formatted display of some of the information in the header of a corrupted data block.	<del>libmtd</del>	"This message provides additional information only. Copy the error " "message exactly as it appears and report it to your technical support " "representative as part of the previously printed error message."
SYS-6-BLKINFO	6-Information	[chars]blk [hec] words [node]alloc [hec] [chars] dealloc [hec] rfcnt [hec]	This is an auxiliary message to several memory-related messages. It provides a formatted display of some of the information in the header of a corrupted data block.	<del>libmtd</del>	"This message provides additional information only. Copy the error " "message exactly as it appears and report it to your technical support " "representative as part of the previously printed error message."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-6-BLKINFO	6-Information	[chars]blk [hec] words [node]alloc [hec] [chars] dealloc [hec] rfcnt [hec]	This is an auxiliary message to several memory-related messages. It provides a formatted display of some of the information in the header of a corrupted data block.	<del>XXXXXXXXXX</del>	"This message provides additional information only. Copy the error "message exactly as it appears and report it to your technical support "representative as part of the previously printed error message."
SYS-6-BLKINFO	6-Information	[chars]blk [hec] words [node]alloc [hec] [chars] dealloc [hec] rfcnt [hec]	This is an auxiliary message to several memory-related messages. It provides a formatted display of some of the information in the header of a corrupted data block.	<del>XXXXXXXXXX</del>	"This message provides additional information only. Copy the error "message exactly as it appears and report it to your technical support "representative as part of the previously printed error message."
SYS-6-BLKINFO	6-Information	[chars]blk [hec] words [node]alloc [hec] [chars] dealloc [hec] rfcnt [hec]	This is an auxiliary message to several memory-related messages. It provides a formatted display of some of the information in the header of a corrupted data block.	<del>XXXXXXXXXX</del>	"This message provides additional information only. Copy the error "message exactly as it appears and report it to your technical support "representative as part of the previously printed error message."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-6-BLKINFO	6-Information	[chars]blk [hec] words [node]alloc [hec] [chars] dealloc [hec] rfcnt [hec]	This is an auxiliary message to several memory-related messages. It provides a formatted display of some of the information in the header of a corrupted data block.	<del>Hardware Diagnostics</del>	"This message provides additional information only. Copy the error " "message exactly as it appears and report it to your technical support " "representative as part of the previously printed error message."
SYS6BOOT_MESSAGES	6-Information	Messages above this line are from the boot loader.\n	At least one informational or error message was printed by the boot loader.	-	"If the system image was loaded no action is recommended. If the " "system image did not load as configured send a log file and " "configuration information to your technical support representative."
SYS6BOOT_MESSAGES	6-Information	Messages above this line are from the boot loader.\n	At least one informational or error message was printed by the boot loader.	-	"If the system image was loaded no action is recommended. If the " "system image did not load as configured send a log file and " "configuration information to your technical support representative."
SYS6BOOT_MESSAGES	6-Information	Messages above this line are from the boot loader.\n	At least one informational or error message was printed by the boot loader.	-	"If the system image was loaded no action is recommended. If the " "system image did not load as configured send a log file and " "configuration information to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS6BOOT_MESSAGES	6-Information	Messages above this line are from the boot loader.\n	At least one informational or error message was printed by the boot loader.	-	"If the system image was loaded no action is recommended. If the " "system image did not load as configured send a log file and " "configuration information to your technical support representative."
SYS6BOOT_MESSAGES	6-Information	Messages above this line are from the boot loader.\n	At least one informational or error message was printed by the boot loader.	-	"If the system image was loaded no action is recommended. If the " "system image did not load as configured send a log file and " "configuration information to your technical support representative."
SYS6BOOT_MESSAGES	6-Information	Messages above this line are from the boot loader.\n	At least one informational or error message was printed by the boot loader.	-	"If the system image was loaded no action is recommended. If the " "system image did not load as configured send a log file and " "configuration information to your technical support representative."
SYS6BOOT_MESSAGES	6-Information	Messages above this line are from the boot loader.\n	At least one informational or error message was printed by the boot loader.	-	"If the system image was loaded no action is recommended. If the " "system image did not load as configured send a log file and " "configuration information to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-6-BOOTTIME	6-Information	Time taken to reboot after reload = [node]d seconds	This is an informational message for the user. This provides the time taken for the router to come up after reload or crash. The time is actually the difference between the last crash and a successive boot. If autoboot was not set and router is in rommon for a long time then the reload time shown could be large.	-	"No action required."
SYS-6-BOOTTIME	6-Information	Time taken to reboot after reload = [node]d seconds	This is an informational message for the user. This provides the time taken for the router to come up after reload or crash. The time is actually the difference between the last crash and a successive boot. If autoboot was not set and router is in rommon for a long time then the reload time shown could be large.	-	"No action required."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-6-BOOTTIME	6-Information	Time taken to reboot after reload = [node]d seconds	This is an informational message for the user. This provides the time taken for the router to come up after reload or crash. The time is actually the difference between the last crash and a successive boot. If autoboot was not set and router is in rommon for a long time then the reload time shown could be large.	-	"No action required."
SYS-6-BOOTTIME	6-Information	Time taken to reboot after reload = [node]d seconds	This is an informational message for the user. This provides the time taken for the router to come up after reload or crash. The time is actually the difference between the last crash and a successive boot. If autoboot was not set and router is in rommon for a long time then the reload time shown could be large.	-	"No action required."



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-6-BOOTTIME	6-Information	Time taken to reboot after reload = [node]d seconds	This is an informational message for the user. This provides the time taken for the router to come up after reload or crash. The time is actually the difference between the last crash and a successive boot. If autoboot was not set and router is in rommon for a long time then the reload time shown could be large.	-	"No action required."
SYS-6-BOOTTIME	6-Information	Time taken to reboot after reload = [node]d seconds	This is an informational message for the user. This provides the time taken for the router to come up after reload or crash. The time is actually the difference between the last crash and a successive boot. If autoboot was not set and router is in rommon for a long time then the reload time shown could be large.	-	"No action required."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-6-BOOTTIME	6-Information	Time taken to reboot after reload = [node]d seconds	This is an informational message for the user. This provides the time taken for the router to come up after reload or crash. The time is actually the difference between the last crash and a successive boot. If autoboot was not set and router is in rommon for a long time then the reload time shown could be large.	-	"No action required."
SYS-6-CLOCKUPDATE	6-Information	System clock has been updated from [chars] to [chars] configured from [chars] by [chars].	This message indicates that the system clock has been modified.	-	"This is informational message."
SYS-6-CLOCKUPDATE	6-Information	System clock has been updated from [chars] to [chars] configured from [chars] by [chars].	This message indicates that the system clock has been modified.	-	"This is informational message."
SYS-6-CLOCKUPDATE	6-Information	System clock has been updated from [chars] to [chars] configured from [chars] by [chars].	This message indicates that the system clock has been modified.	-	"This is informational message."
SYS-6-CLOCKUPDATE	6-Information	System clock has been updated from [chars] to [chars] configured from [chars] by [chars].	This message indicates that the system clock has been modified.	-	"This is informational message."
SYS-6-CLOCKUPDATE	6-Information	System clock has been updated from [chars] to [chars] configured from [chars] by [chars].	This message indicates that the system clock has been modified.	-	"This is informational message."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-6-CLOCKUPDATE	6-Information	System clock has been updated from [chars] to [chars] configured from [chars] by [chars].	This message indicates that the system clock has been modified.	-	"This is informational message."
SYS-6-CLOCKUPDATE	6-Information	System clock has been updated from [chars] to [chars] configured from [chars] by [chars].	This message indicates that the system clock has been modified.	-	"This is informational message."
SYS-6-CPURESFALLING	6-Information	[chars][chars] is no longer seeing [chars] high cpu at [chars] level for the configured [chars] limit [node][node]urrent value [node]%	CPU usage has returned to normal after crossing over from a threshold of high usage. Any process that was disabled during the period of high CPU use can now be enabled.	-	"No action is required"
SYS-6-CPURESFALLING	6-Information	[chars][chars] is no longer seeing [chars] high cpu at [chars] level for the configured [chars] limit [node][node]urrent value [node]%	CPU usage has returned to normal after crossing over from a threshold of high usage. Any process that was disabled during the period of high CPU use can now be enabled.	-	"No action is required"
SYS-6-CPURESFALLING	6-Information	[chars][chars] is no longer seeing [chars] high cpu at [chars] level for the configured [chars] limit [node][node]urrent value [node]%	CPU usage has returned to normal after crossing over from a threshold of high usage. Any process that was disabled during the period of high CPU use can now be enabled.	-	"No action is required"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS6CPURESEFALLING	6-Information	[chars][chars] is no longer seeing [chars] high cpu at [chars] level for the configured [chars] limit [node][node]urrent value [node]%	CPU usage has returned to normal after crossing over from a threshold of high usage. Any process that was disabled during the period of high CPU use can now be enabled.	-	"No action is required"
SYS6CPURESEFALLING	6-Information	[chars][chars] is no longer seeing [chars] high cpu at [chars] level for the configured [chars] limit [node][node]urrent value [node]%	CPU usage has returned to normal after crossing over from a threshold of high usage. Any process that was disabled during the period of high CPU use can now be enabled.	-	"No action is required"
SYS6CPURESEFALLING	6-Information	[chars][chars] is no longer seeing [chars] high cpu at [chars] level for the configured [chars] limit [node][node]urrent value [node]%	CPU usage has returned to normal after crossing over from a threshold of high usage. Any process that was disabled during the period of high CPU use can now be enabled.	-	"No action is required"
SYS6CPURESEFALLING	6-Information	[chars][chars] is no longer seeing [chars] high cpu at [chars] level for the configured [chars] limit [node][node]urrent value [node]%	CPU usage has returned to normal after crossing over from a threshold of high usage. Any process that was disabled during the period of high CPU use can now be enabled.	-	"No action is required"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS6CPURESUNAPPLY	6-Information	[chars][chars] is no longer monitoring [chars] cpu at [chars] level for the configured [chars] limit.	CPU usage is no longer monitored for the configured threshold level mentioned in the error message The corresponding policy is revoked.	-	"No action is required"
SYS6CPURESUNAPPLY	6-Information	[chars][chars] is no longer monitoring [chars] cpu at [chars] level for the configured [chars] limit.	CPU usage is no longer monitored for the configured threshold level mentioned in the error message The corresponding policy is revoked.	-	"No action is required"
SYS6CPURESUNAPPLY	6-Information	[chars][chars] is no longer monitoring [chars] cpu at [chars] level for the configured [chars] limit.	CPU usage is no longer monitored for the configured threshold level mentioned in the error message The corresponding policy is revoked.	-	"No action is required"
SYS6CPURESUNAPPLY	6-Information	[chars][chars] is no longer monitoring [chars] cpu at [chars] level for the configured [chars] limit.	CPU usage is no longer monitored for the configured threshold level mentioned in the error message The corresponding policy is revoked.	-	"No action is required"
SYS6CPURESUNAPPLY	6-Information	[chars][chars] is no longer monitoring [chars] cpu at [chars] level for the configured [chars] limit.	CPU usage is no longer monitored for the configured threshold level mentioned in the error message The corresponding policy is revoked.	-	"No action is required"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS6CPURESUNAPPLY	6-Information	[chars][chars] is no longer monitoring [chars] cpu at [chars] level for the configured [chars] limit.	CPU usage is no longer monitored for the configured threshold level mentioned in the error message The corresponding policy is revoked.	-	"No action is required"
SYS6CPURESUNAPPLY	6-Information	[chars][chars] is no longer monitoring [chars] cpu at [chars] level for the configured [chars] limit.	CPU usage is no longer monitored for the configured threshold level mentioned in the error message The corresponding policy is revoked.	-	"No action is required"
SYS6NALUD_BOOTIME	6-Information	Time since last reboot not available	This is an informational message for the user. The time taken for the router to come up after OIR is not available.	-	"No action required."
SYS6NALUD_BOOTIME	6-Information	Time since last reboot not available	This is an informational message for the user. The time taken for the router to come up after OIR is not available.	-	"No action required."
SYS6NALUD_BOOTIME	6-Information	Time since last reboot not available	This is an informational message for the user. The time taken for the router to come up after OIR is not available.	-	"No action required."
SYS6NALUD_BOOTIME	6-Information	Time since last reboot not available	This is an informational message for the user. The time taken for the router to come up after OIR is not available.	-	"No action required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS6INVALID_BCOTIME	6-Information	Time since last reboot not available	This is an informational message for the user. The time taken for the router to come up after OIR is not available.	-	"No action required."
SYS6INVALID_BCOTIME	6-Information	Time since last reboot not available	This is an informational message for the user. The time taken for the router to come up after OIR is not available.	-	"No action required."
SYS6INVALID_BCOTIME	6-Information	Time since last reboot not available	This is an informational message for the user. The time taken for the router to come up after OIR is not available.	-	"No action required."
<del>SYS6INVALID_BCOTIME</del>	6-Information	Last reload was triggered because CPU Usage due to Memory Pressure exceeds threshold	This is an informational message for the user to indicate the reason behind the last reload which was triggered by forcefully crashing top N memory intensive processes because system encountered low-memory pressure. By looking at the core-files developer may be able to narrow down the cause of the memory depletion.	-	"This is a notification message only. No action is required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SEARFCDMEMPSSRCP	6-Information	Last reload was triggered because CPU Usage due to Memory Pressure exceeds threshold	This is an informational message for the user to indicate the reason behind the last reload which was triggered by forcefully crashing top N memory intensive processes because system encountered low-memory pressure. By looking at the core-files developer may be able to narrow down the cause of the memory depletion.	-	"This is a notification message only. No action is required."
SYS6LOGGING_BUGINF	6-Information	Logging of buginf debugs was [chars]	All calls to debugging have been disabled in Cisco IOS software as a result the user entering the <CmdBold>no logging buginf<NoCmdBold> command. This command is used to avoid a situation where a large amount of debugging calls might overload the processor CPU hog condition. This	os-logging	"This is an informational message only. No action is required."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS6LOGGING_BUGINF	6-Information	Logging of buginf debugs was [chars]	All calls to debugging have been disabled in Cisco IOS software as a result the user entering the <b>no logging buginf</b> command. This command is used to avoid a situation where a large amount of debugging calls might overload the processor CPU hog condition. This	os-logging	"This is an informational message only. No action is required."
SYS6LOGGING_BUGINF	6-Information	Logging of buginf debugs was [chars]	All calls to debugging have been disabled in Cisco IOS software as a result the user entering the <b>no logging buginf</b> command. This command is used to avoid a situation where a large amount of debugging calls might overload the processor CPU hog condition. This	os-logging	"This is an informational message only. No action is required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS6LOGGING_BUGINF	6-Information	Logging of buginf debugs was [chars]	All calls to debugging have been disabled in Cisco IOS software as a result the user entering the <CmdBold>no logging buginf<NoCmdBold> command. This command is used to avoid a situation where a large amount of debugging calls might overload the processor CPU hog condition. This	os-logging	"This is an informational message only. No action is required."
SYS6LOGGING_BUGINF	6-Information	Logging of buginf debugs was [chars]	All calls to debugging have been disabled in Cisco IOS software as a result the user entering the <CmdBold>no logging buginf<NoCmdBold> command. This command is used to avoid a situation where a large amount of debugging calls might overload the processor CPU hog condition. This	os-logging	"This is an informational message only. No action is required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS6LOGGING_BUGINF	6-Information	Logging of buginf debugs was [chars]	All calls to debugging have been disabled in Cisco IOS software as a result the user entering the <CmdBold>no logging buginf<NoCmdBold> command. This command is used to avoid a situation where a large amount of debugging calls might overload the processor CPU hog condition. This	os-logging	"This is an informational message only. No action is required."
SYS6LOGGING_BUGINF	6-Information	Logging of buginf debugs was [chars]	All calls to debugging have been disabled in Cisco IOS software as a result the user entering the <CmdBold>no logging buginf<NoCmdBold> command. This command is used to avoid a situation where a large amount of debugging calls might overload the processor CPU hog condition. This	os-logging	"This is an informational message only. No action is required."
SYS6LOGGING_MOVE	6-Information	User [chars] has activated the logging persistent move command.	The Common Criteria CC certification requires a log message to	os-logging	"This message is for information only. No action is required."
SYS6LOGGING_MOVE	6-Information	User [chars] has activated the logging persistent move command.	The Common Criteria CC certification requires a log message to	os-logging	"This message is for information only. No action is required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYSLOGGNCHOSTSARISCP	6-Information	Logging to host [chars][chars][chars][chars]	Syslog logging to specified server or hostvrf has started or stopped	os-logging	LOG_SID_NO_ACTION
SYSLOGGNCHOSTSARISCP	6-Information	Logging to host [chars][chars][chars][chars]	Syslog logging to specified server or hostvrf has started or stopped	os-logging	LOG_SID_NO_ACTION
SYSLOGGNCHOSTSARISCP	6-Information	Logging to host [chars][chars][chars][chars]	Syslog logging to specified server or hostvrf has started or stopped	os-logging	LOG_SID_NO_ACTION
SYSLOGGNCHOSTSARISCP	6-Information	Logging to host [chars][chars][chars][chars]	Syslog logging to specified server or hostvrf has started or stopped	os-logging	LOG_SID_NO_ACTION
SYSLOGGNCHOSTSARISCP	6-Information	Logging to host [chars][chars][chars][chars]	Syslog logging to specified server or hostvrf has started or stopped	os-logging	LOG_SID_NO_ACTION
SYSLOGGNCHOSTSARISCP	6-Information	Logging to host [chars][chars][chars][chars]	Syslog logging to specified server or hostvrf has started or stopped	os-logging	LOG_SID_NO_ACTION
SYSLOGGNCHOSTSARISCP	6-Information	Logging to host [chars][chars][chars][chars]	Syslog logging to specified server or hostvrf has started or stopped	os-logging	LOG_SID_NO_ACTION
SYSLOGGNCHOSTSARISCP	6-Information	Logging to host [chars][chars][chars][chars]	Syslog logging to specified server or hostvrf has started or stopped	os-logging	LOG_SID_NO_ACTION
SYSLOGGNCHOSTSARISCP	6-Information	Logging to host [chars][chars][chars][chars]	Syslog logging to specified server or hostvrf has started or stopped	os-logging	LOG_SID_NO_ACTION
SYS-6-LOGOUT	6-Information	User [chars] has exited tty session [dec][chars]	A user has closed a tty session normally using the exit CLI command.	os	"This message is for information only. " "No action is required."
SYS-6-LOGOUT	6-Information	User [chars] has exited tty session [dec][chars]	A user has closed a tty session normally using the exit CLI command.	os	"This message is for information only. " "No action is required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-6-MEMDUMP	6-Information	[hex]: [hex] [hex] [hex] [hex]	This is an auxiliary message to several memory-related messages. It provides a raw display of the information in the header of a corrupted data block.	<del>IBM z/OS V5R1 MVS JES2</del>	"This message provides additional information only. Copy the error "message exactly as it appears and report it to your technical support "representative as part of the previously printed error message."
SYS-6-MEMDUMP	6-Information	[hex]: [hex] [hex] [hex] [hex]	This is an auxiliary message to several memory-related messages. It provides a raw display of the information in the header of a corrupted data block.	<del>IBM z/OS V5R1 MVS JES2</del>	"This message provides additional information only. Copy the error "message exactly as it appears and report it to your technical support "representative as part of the previously printed error message."
SYS-6-MEMDUMP	6-Information	[hex]: [hex] [hex] [hex] [hex]	This is an auxiliary message to several memory-related messages. It provides a raw display of the information in the header of a corrupted data block.	<del>IBM z/OS V5R1 MVS JES2</del>	"This message provides additional information only. Copy the error "message exactly as it appears and report it to your technical support "representative as part of the previously printed error message."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-6-MEMDUMP	6-Information	[hex]: [hex] [hex] [hex] [hex]	This is an auxiliary message to several memory-related messages. It provides a raw display of the information in the header of a corrupted data block.	<del>XXXXXXXXXXXX</del>	"This message provides additional information only. Copy the error " "message exactly as it appears and report it to your technical support " "representative as part of the previously printed error message."
SYS-6-MEMDUMP	6-Information	[hex]: [hex] [hex] [hex] [hex]	This is an auxiliary message to several memory-related messages. It provides a raw display of the information in the header of a corrupted data block.	<del>XXXXXXXXXXXX</del>	"This message provides additional information only. Copy the error " "message exactly as it appears and report it to your technical support " "representative as part of the previously printed error message."
SYS-6-MEMDUMP	6-Information	[hex]: [hex] [hex] [hex] [hex]	This is an auxiliary message to several memory-related messages. It provides a raw display of the information in the header of a corrupted data block.	<del>XXXXXXXXXXXX</del>	"This message provides additional information only. Copy the error " "message exactly as it appears and report it to your technical support " "representative as part of the previously printed error message."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-6-MEMDUMP	6-Information	[hex]: [hex] [hex] [hex] [hex]	This is an auxiliary message to several memory-related messages. It provides a raw display of the information in the header of a corrupted data block.	<del>IBM z/OS V5R1 MVS/ESA</del>	"This message provides additional information only. Copy the error " "message exactly as it appears and report it to your technical support " "representative as part of the previously printed error message."
SYS-6-MTRACE	6-Information	[chars]: addr pc\n ADDRPC ADDRPC ADDRPC ADDRPC \n ADDRPC ADDRPC ADDRPC ADDRPC	This is an auxiliary message to several memory-related messages. It provides the address of the memory block and the calling program counter for the last eight blocks allocated and for the last eight blocks freed.	<del>IBM z/OS V5R1 MVS/ESA</del>	"This message provides additional information only. Copy the error " "message exactly as it appears and report it to your technical support " "representative as part of a previously printed error message."
SYS-6-MTRACE	6-Information	[chars]: addr pc\n ADDRPC ADDRPC ADDRPC ADDRPC \n ADDRPC ADDRPC ADDRPC ADDRPC	This is an auxiliary message to several memory-related messages. It provides the address of the memory block and the calling program counter for the last eight blocks allocated and for the last eight blocks freed.	<del>IBM z/OS V5R1 MVS/ESA</del>	"This message provides additional information only. Copy the error " "message exactly as it appears and report it to your technical support " "representative as part of a previously printed error message."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-6-MTRACE	6-Information	[chars]: addr pc\n ADDRPC ADDRPC ADDRPC ADDRPC \n ADDRPC ADDRPC ADDRPC ADDRPC	This is an auxiliary message to several memory-related messages. It provides the address of the memory block and the calling program counter for the last eight blocks allocated and for the last eight blocks freed.	<del>XXXXXXXXXXXX</del>	"This message provides additional information only. Copy the error " "message exactly as it appears and report it to your technical support " "representative as part of a previously printed error message."
SYS-6-MTRACE	6-Information	[chars]: addr pc\n ADDRPC ADDRPC ADDRPC ADDRPC \n ADDRPC ADDRPC ADDRPC ADDRPC	This is an auxiliary message to several memory-related messages. It provides the address of the memory block and the calling program counter for the last eight blocks allocated and for the last eight blocks freed.	<del>XXXXXXXXXXXX</del>	"This message provides additional information only. Copy the error " "message exactly as it appears and report it to your technical support " "representative as part of a previously printed error message."
SYS-6-MTRACE	6-Information	[chars]: addr pc\n ADDRPC ADDRPC ADDRPC ADDRPC \n ADDRPC ADDRPC ADDRPC ADDRPC	This is an auxiliary message to several memory-related messages. It provides the address of the memory block and the calling program counter for the last eight blocks allocated and for the last eight blocks freed.	<del>XXXXXXXXXXXX</del>	"This message provides additional information only. Copy the error " "message exactly as it appears and report it to your technical support " "representative as part of a previously printed error message."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-6-MTRACE	6-Information	[chars]: addr pc\n ADDRPC ADDRPC ADDRPC ADDRPC \n ADDRPC ADDRPC ADDRPC ADDRPC	This is an auxiliary message to several memory-related messages. It provides the address of the memory block and the calling program counter for the last eight blocks allocated and for the last eight blocks freed.	<del>Hardware</del>	"This message provides additional information only. Copy the error " "message exactly as it appears and report it to your technical support " "representative as part of a previously printed error message."
SYS-6-MTRACE	6-Information	[chars]: addr pc\n ADDRPC ADDRPC ADDRPC ADDRPC \n ADDRPC ADDRPC ADDRPC ADDRPC	This is an auxiliary message to several memory-related messages. It provides the address of the memory block and the calling program counter for the last eight blocks allocated and for the last eight blocks freed.	<del>Hardware</del>	"This message provides additional information only. Copy the error " "message exactly as it appears and report it to your technical support " "representative as part of a previously printed error message."
SYS-6-NOBRIDGE	6-Information	Bridging software not present	Your system is not configured to be a bridge.	none	"Configure the bridging software."
SYS-6-NOBRIDGE	6-Information	Bridging software not present	Your system is not configured to be a bridge.	none	"Configure the bridging software."
SYS-6-NOBRIDGE	6-Information	Bridging software not present	Your system is not configured to be a bridge.	none	"Configure the bridging software."
SYS-6-NOBRIDGE	6-Information	Bridging software not present	Your system is not configured to be a bridge.	none	"Configure the bridging software."
SYS-6-NOBRIDGE	6-Information	Bridging software not present	Your system is not configured to be a bridge.	none	"Configure the bridging software."
SYS-6-NOBRIDGE	6-Information	Bridging software not present	Your system is not configured to be a bridge.	none	"Configure the bridging software."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-6-NOBRIDGE	6-Information	Bridging software not present	Your system is not configured to be a bridge.	none	"Configure the bridging software."
<del>SYS-6-DCRPSUCCESS</del>	6-Information	[chars]	Private config decryption successful	none	"This is an informational message."
<del>SYS-6-DCRPSUCCESS</del>	6-Information	[chars]	Private config decryption successful	none	"This is an informational message."
<del>SYS-6-ENCRPSUCCESS</del>	6-Information	[chars]	Private config encryption successful	none	"This is an informational message."
<del>SYS-6-ENCRPSUCCESS</del>	6-Information	[chars]	Private config encryption successful	none	"This is an informational message."
SYS-6-PROCINFO	6-Information	Process [chars] just finished executing	This message is an auxiliary to the SYS-3-OVERRUN and SYS-3-BADMAGIC error messages. It identifies the process or process fragment that was executing when the error occurred.	-	"Copy this messages exactly as it appears and report it along with " "the SYS-3-OVERRUN and SYS-3-BADMAGIC error messages to your " "technical support representative."
SYS-6-PROCINFO	6-Information	Process [chars] just finished executing	This message is an auxiliary to the SYS-3-OVERRUN and SYS-3-BADMAGIC error messages. It identifies the process or process fragment that was executing when the error occurred.	-	"Copy this messages exactly as it appears and report it along with " "the SYS-3-OVERRUN and SYS-3-BADMAGIC error messages to your " "technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-6-PROCINFO	6-Information	Process [chars] just finished executing	This message is an auxiliary to the SYS-3-OVERRUN and SYS-3-BADMAGIC error messages. It identifies the process or process fragment that was executing when the error occurred.	-	"Copy this messages exactly as it appears and report it along with " "the SYS-3-OVERRUN and SYS-3-BADMAGIC error messages to your " "technical support representative."
SYS-6-PROCINFO	6-Information	Process [chars] just finished executing	This message is an auxiliary to the SYS-3-OVERRUN and SYS-3-BADMAGIC error messages. It identifies the process or process fragment that was executing when the error occurred.	-	"Copy this messages exactly as it appears and report it along with " "the SYS-3-OVERRUN and SYS-3-BADMAGIC error messages to your " "technical support representative."
SYS-6-PROCINFO	6-Information	Process [chars] just finished executing	This message is an auxiliary to the SYS-3-OVERRUN and SYS-3-BADMAGIC error messages. It identifies the process or process fragment that was executing when the error occurred.	-	"Copy this messages exactly as it appears and report it along with " "the SYS-3-OVERRUN and SYS-3-BADMAGIC error messages to your " "technical support representative."
SYS-6-PROCINFO	6-Information	Process [chars] just finished executing	This message is an auxiliary to the SYS-3-OVERRUN and SYS-3-BADMAGIC error messages. It identifies the process or process fragment that was executing when the error occurred.	-	"Copy this messages exactly as it appears and report it along with " "the SYS-3-OVERRUN and SYS-3-BADMAGIC error messages to your " "technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-6-PROCINFO	6-Information	Process [chars] just finished executing	This message is an auxiliary to the SYS-3-OVERRUN and SYS-3-BADMAGIC error messages. It identifies the process or process fragment that was executing when the error occurred.	-	"Copy this messages exactly as it appears and report it along with " "the SYS-3-OVERRUN and SYS-3-BADMAGIC error messages to your " "technical support representative."
SYSREAD_BOOTFILE_FAIL	6-Information	[chars] [chars].\n	A configured boot system command failed.	-	"If a system image was eventually loaded no action is recommended. If " "the system image did not load as configured send a log file and " "configuration information to your technical support representative."
SYSREAD_BOOTFILE_FAIL	6-Information	[chars] [chars].\n	A configured boot system command failed.	-	"If a system image was eventually loaded no action is recommended. If " "the system image did not load as configured send a log file and " "configuration information to your technical support representative."
SYSREAD_BOOTFILE_FAIL	6-Information	[chars] [chars].\n	A configured boot system command failed.	-	"If a system image was eventually loaded no action is recommended. If " "the system image did not load as configured send a log file and " "configuration information to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYSGRABOOTHELF	6-Information	[chars] [chars].\n	A configured boot system command failed.	-	"If a system image was eventually loaded no action is recommended. If "the system image did not load as configured send a log file and "configuration information to your technical support representative."
SYSGRABOOTHELF	6-Information	[chars] [chars].\n	A configured boot system command failed.	-	"If a system image was eventually loaded no action is recommended. If "the system image did not load as configured send a log file and "configuration information to your technical support representative."
SYSGRABOOTHELF	6-Information	[chars] [chars].\n	A configured boot system command failed.	-	"If a system image was eventually loaded no action is recommended. If "the system image did not load as configured send a log file and "configuration information to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYSREAD_BOOTFILE_FAIL	6-Information	[chars] [chars].\n	A configured boot system command failed.	-	"If a system image was eventually loaded no action is recommended. If "the system image did not load as configured send a log file and "configuration information to your technical support representative."
SYSREAD_BOOTFILE_SKP	6-Information	boot system [chars] command is skipped\n	A configured boot system command is skipped. Either the system experienced a crash while loading this image in the last attempt or the filename is not properly specified. Subsequent boot system commands will be tried	-	"Replace the failed boot system image with a good one. There could be "various reasons that this specified image failed for example the image " "might be with a bad checksum."
SYSREAD_BOOTFILE_SKP	6-Information	boot system [chars] command is skipped\n	A configured boot system command is skipped. Either the system experienced a crash while loading this image in the last attempt or the filename is not properly specified. Subsequent boot system commands will be tried	-	"Replace the failed boot system image with a good one. There could be "various reasons that this specified image failed for example the image " "might be with a bad checksum."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS6READ_BOOTFILE_SKIP	6-Information	boot system [chars] command is skipped\n	A configured boot system command is skipped. Either the system experienced a crash while loading this image in the last attempt or the filename is not properly specified. Subsequent boot system commands will be tried	-	"Replace the failed boot system image with a good one. There could be " "various reasons that this specified image failed for example the image " "might be with a bad checksum."
SYS6READ_BOOTFILE_SKIP	6-Information	boot system [chars] command is skipped\n	A configured boot system command is skipped. Either the system experienced a crash while loading this image in the last attempt or the filename is not properly specified. Subsequent boot system commands will be tried	-	"Replace the failed boot system image with a good one. There could be " "various reasons that this specified image failed for example the image " "might be with a bad checksum."
SYS6READ_BOOTFILE_SKIP	6-Information	boot system [chars] command is skipped\n	A configured boot system command is skipped. Either the system experienced a crash while loading this image in the last attempt or the filename is not properly specified. Subsequent boot system commands will be tried	-	"Replace the failed boot system image with a good one. There could be " "various reasons that this specified image failed for example the image " "might be with a bad checksum."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SYSGREAD</del> _BOOIHLE_SKP	6-Information	boot system [chars] command is skipped\n	A configured boot system command is skipped. Either the system experienced a crash while loading this image in the last attempt or the filename is not properly specified. Subsequent boot system commands will be tried	-	"Replace the failed boot system image with a good one. There could be " "various reasons that this specified image failed for example the image " "might be with a bad checksum."
<del>SYSGREAD</del> _BOOIHLE_SKP	6-Information	boot system [chars] command is skipped\n	A configured boot system command is skipped. Either the system experienced a crash while loading this image in the last attempt or the filename is not properly specified. Subsequent boot system commands will be tried	-	"Replace the failed boot system image with a good one. There could be " "various reasons that this specified image failed for example the image " "might be with a bad checksum."
<del>SGSR</del> _MEMORY_READ	6-Information	Reserve memory is being created	A portion of memory is reserved exclusively for console	-	"The console access is made available even in low memory " "condition. User can collect the details like tech-support " "for further diagnosis"
<del>SGSR</del> _MEMORY_READ	6-Information	Reserve memory is being created	A portion of memory is reserved exclusively for console	-	"The console access is made available even in low memory " "condition. User can collect the details like tech-support " "for further diagnosis"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SR</del> SRMEMCR/CRAD	6-Information	Reserve memory is being created	A portion of memory is reserved exclusively for console	-	"The console access is made available even in low memory " "condition. User can collect the details like tech-support " "for further diagnosis"
<del>SR</del> SRMEMCR/CRAD	6-Information	Reserve memory is being created	A portion of memory is reserved exclusively for console	-	"The console access is made available even in low memory " "condition. User can collect the details like tech-support " "for further diagnosis"
<del>SR</del> SRMEMCR/CRAD	6-Information	Reserve memory is being created	A portion of memory is reserved exclusively for console	-	"The console access is made available even in low memory " "condition. User can collect the details like tech-support " "for further diagnosis"
<del>SR</del> SRMEMCR/CRAD	6-Information	Reserve memory is being created	A portion of memory is reserved exclusively for console	-	"The console access is made available even in low memory " "condition. User can collect the details like tech-support " "for further diagnosis"
<del>SR</del> SRMEMCR/CRAD	6-Information	Reserve memory is being created	A portion of memory is reserved exclusively for console	-	"The console access is made available even in low memory " "condition. User can collect the details like tech-support " "for further diagnosis"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SECUNDRMKNMIE</del>	6-Information	[chars] cannot run the signed TCL script.	The TCL script being run has either an unmatched trustpoint name or a missing or a corrupted trustpoint name	tcl-bleeding	"Either re-sign the TCL script with a proper trustpoint name or " "use crypto pki authenticate tcl to add the desired trustpoint name." "Then rerun the TCL script."
<del>SECUNDRMKNMIE</del>	6-Information	[chars] cannot run the signed TCL script.	The TCL script being run has either an unmatched trustpoint name or a missing or a corrupted trustpoint name	tcl-bleeding	"Either re-sign the TCL script with a proper trustpoint name or " "use crypto pki authenticate tcl to add the desired trustpoint name." "Then rerun the TCL script."
<del>SECUNDRMKNMIE</del>	6-Information	[chars] cannot verify signed TCL script.	The TCL script being run is lacking either scripting tcl secure-mode or trustpoint being configured first	tcl-bleeding	"Configure the missing scripting tcl secure-mode or " "scripting tcl trustpoint name <name>. Then rerun the TCL script."
<del>SECUNDRMKNMIE</del>	6-Information	[chars] cannot verify signed TCL script.	The TCL script being run is lacking either scripting tcl secure-mode or trustpoint being configured first	tcl-bleeding	"Configure the missing scripting tcl secure-mode or " "scripting tcl trustpoint name <name>. Then rerun the TCL script."
SYS6SHOW_LOGGING	6-Information	User [chars] has activated the show [chars] command.	The Common Criteria CC certification requires a log message to indicate when a user activates the show logging persistent command.	os-logging	"This message is for information only. No action is required."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS6SHOW_LOGGING	6-Information	User [chars] has activated the show [chars] command.	The Common Criteria CC certification requires a log message to indicate when a user activates the show logging persistent command.	os-logging	"This message is for information only. No action is required."
SYS-6-STACKLOW	6-Information	Stack for [chars] [chars] running low [dec]/[dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-6-STACKLOW	6-Information	Stack for [chars] [chars] running low [dec]/[dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-6-STACKLOW	6-Information	Stack for [chars] [chars] running low [dec]/[dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-6-STACKLOW	6-Information	Stack for [chars] [chars] running low [dec]/[dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-6-STACKLOW	6-Information	Stack for [chars] [chars] running low [dec]/[dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-6-STACKLOW	6-Information	Stack for [chars] [chars] running low [dec]/[dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
SYS-6-STACKLOW	6-Information	Stack for [chars] [chars] running low [dec]/[dec]	An internal software error occurred.	-	"If this messages recurs copy it exactly as it appears and report " "it to your technical support representative."
<del>SYS-STARTUP_CONFIG_IGNORED</del>	6-Information	System startup configuration is ignored based on the configuration register setting.	The configuration register was set to ignore the system startup configuration.	-	"If the system should ignore the startup configuration no action " "is required. If the system should boot with the startup configuration " "saved in the NVRAM change the configuration register value."
<del>SYS-STARTUP_CONFIG_IGNORED</del>	6-Information	System startup configuration is ignored based on the configuration register setting.	The configuration register was set to ignore the system startup configuration.	-	"If the system should ignore the startup configuration no action " "is required. If the system should boot with the startup configuration " "saved in the NVRAM change the configuration register value."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SS</del> STARTUP_CONFIGURED	6-Information	System startup configuration is ignored based on the configuration register setting.	The configuration register was set to ignore the system startup configuration.	-	"If the system should ignore the startup configuration no action " "is required. If the system should boot with the startup configuration " "saved in the NVRAM change the configuration register value."
<del>SS</del> STARTUP_CONFIGURED	6-Information	System startup configuration is ignored based on the configuration register setting.	The configuration register was set to ignore the system startup configuration.	-	"If the system should ignore the startup configuration no action " "is required. If the system should boot with the startup configuration " "saved in the NVRAM change the configuration register value."
<del>SS</del> STARTUP_CONFIGURED	6-Information	System startup configuration is ignored based on the configuration register setting.	The configuration register was set to ignore the system startup configuration.	-	"If the system should ignore the startup configuration no action " "is required. If the system should boot with the startup configuration " "saved in the NVRAM change the configuration register value."
<del>SS</del> STARTUP_CONFIGURED	6-Information	System startup configuration is ignored based on the configuration register setting.	The configuration register was set to ignore the system startup configuration.	-	"If the system should ignore the startup configuration no action " "is required. If the system should boot with the startup configuration " "saved in the NVRAM change the configuration register value."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SYS-STARTUP_CONFIG_IGNORED</del>	6-Information	System startup configuration is ignored based on the configuration register setting.	The configuration register was set to ignore the system startup configuration.	-	"If the system should ignore the startup configuration no action " "is required. If the system should boot with the startup configuration " "saved in the NVRAM change the configuration register value."
SYS-6-TESTINFO	6-Information	Scheduler test [hex] for [chars] just executed	This message is an auxiliary to the SYS-3-OVERRUN and SYS-3-BADMAGIC error messages. It identifies the process or process fragment that was executing when the error occurred.	<del>Platform-Boot-System-Boot</del>	"Copy this message exactly as it appears and report it along with the " "SYS-3-OVERRUN and SYS-3-BADMAGIC error messages to your technical " "support representative."
SYS-6-TESTINFO	6-Information	Scheduler test [hex] for [chars] just executed	This message is an auxiliary to the SYS-3-OVERRUN and SYS-3-BADMAGIC error messages. It identifies the process or process fragment that was executing when the error occurred.	<del>Platform-Boot-System-Boot</del>	"Copy this message exactly as it appears and report it along with the " "SYS-3-OVERRUN and SYS-3-BADMAGIC error messages to your technical " "support representative."
SYS-6-TESTINFO	6-Information	Scheduler test [hex] for [chars] just executed	This message is an auxiliary to the SYS-3-OVERRUN and SYS-3-BADMAGIC error messages. It identifies the process or process fragment that was executing when the error occurred.	<del>Platform-Boot-System-Boot</del>	"Copy this message exactly as it appears and report it along with the " "SYS-3-OVERRUN and SYS-3-BADMAGIC error messages to your technical " "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-6-TESTINFO	6-Information	Scheduler test [hex] for [chars] just executed	This message is an auxiliary to the SYS-3-OVERRUN and SYS-3-BADMAGIC error messages. It identifies the process or process fragment that was executing when the error occurred.	IBM Operating System/390	"Copy this message exactly as it appears and report it along with the " "SYS-3-OVERRUN and SYS-3-BADMAGIC error messages to your technical " "support representative."
SYS-6-TESTINFO	6-Information	Scheduler test [hex] for [chars] just executed	This message is an auxiliary to the SYS-3-OVERRUN and SYS-3-BADMAGIC error messages. It identifies the process or process fragment that was executing when the error occurred.	IBM Operating System/390	"Copy this message exactly as it appears and report it along with the " "SYS-3-OVERRUN and SYS-3-BADMAGIC error messages to your technical " "support representative."
SYS-6-TESTINFO	6-Information	Scheduler test [hex] for [chars] just executed	This message is an auxiliary to the SYS-3-OVERRUN and SYS-3-BADMAGIC error messages. It identifies the process or process fragment that was executing when the error occurred.	IBM Operating System/390	"Copy this message exactly as it appears and report it along with the " "SYS-3-OVERRUN and SYS-3-BADMAGIC error messages to your technical " "support representative."
SYS-6-TESTINFO	6-Information	Scheduler test [hex] for [chars] just executed	This message is an auxiliary to the SYS-3-OVERRUN and SYS-3-BADMAGIC error messages. It identifies the process or process fragment that was executing when the error occurred.	IBM Operating System/390	"Copy this message exactly as it appears and report it along with the " "SYS-3-OVERRUN and SYS-3-BADMAGIC error messages to your technical " "support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS6TTY_EXPIRE_TIMER	6-Information	[chars] expired tty [dec] [node] user [chars]	The maximum inactivity time has been reached for the tty session as configured by the exec-timeout CLI configuration command. The session has expired.	os	"This message is for information only. No action is" " required."
SYS6TTY_EXPIRE_TIMER	6-Information	[chars] expired tty [dec] [node] user [chars]	The maximum inactivity time has been reached for the tty session as configured by the exec-timeout CLI configuration command. The session has expired.	os	"This message is for information only. No action is" " required."
SYS6USERLOG_INFO	6-Information	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."
SYS6USERLOG_INFO	6-Information	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS-6-USERLOG_INFO	6-Information	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."
SYS-6-USERLOG_INFO	6-Information	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."
SYS-6-USERLOG_INFO	6-Information	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS6-USERLOG_INFO	6-Information	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."
SYS6-USERLOG_INFO	6-Information	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."
<del>SYS6-RESERVE_MEMORY</del>	6-Information	Reserve memory is being used	The reserved memory is being used by the console	-	"The system is low in memory. The reserved memory will be " "used only by the console process. Please take a techsupport " "so that the reason for low memory can be found"
<del>SYS6-RESERVE_MEMORY</del>	6-Information	Reserve memory is being used	The reserved memory is being used by the console	-	"The system is low in memory. The reserved memory will be " "used only by the console process. Please take a techsupport " "so that the reason for low memory can be found"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SSUNGRSREMEMORY</del>	6-Information	Reserve memory is being used	The reserved memory is being used by the console	-	"The system is low in memory. The reserved memory will be " "used only by the console process. Please take a techsupport " "so that the reason for low memory can be found"
<del>SSUNGRSREMEMORY</del>	6-Information	Reserve memory is being used	The reserved memory is being used by the console	-	"The system is low in memory. The reserved memory will be " "used only by the console process. Please take a techsupport " "so that the reason for low memory can be found"
<del>SSUNGRSREMEMORY</del>	6-Information	Reserve memory is being used	The reserved memory is being used by the console	-	"The system is low in memory. The reserved memory will be " "used only by the console process. Please take a techsupport " "so that the reason for low memory can be found"
<del>SSUNGRSREMEMORY</del>	6-Information	Reserve memory is being used	The reserved memory is being used by the console	-	"The system is low in memory. The reserved memory will be " "used only by the console process. Please take a techsupport " "so that the reason for low memory can be found"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-6-RESERVE_MEMORY	6-Information	Reserve memory is being used	The reserved memory is being used by the console	-	"The system is low in memory. The reserved memory will be " "used only by the console process. Please take a techsupport " "so that the reason for low memory can be found"
SYS-7-ESMSHUTDOWN	7-Debug	ESM shutdown	The Embedded Syslog Manager has been shut down	-	LOG_SID_NO_ACTION
SYS-7-ESMSHUTDOWN	7-Debug	ESM shutdown	The Embedded Syslog Manager has been shut down	-	LOG_SID_NO_ACTION
SYS-7-ESMSHUTDOWN	7-Debug	ESM shutdown	The Embedded Syslog Manager has been shut down	-	LOG_SID_NO_ACTION
SYS-7-ESMSHUTDOWN	7-Debug	ESM shutdown	The Embedded Syslog Manager has been shut down	-	LOG_SID_NO_ACTION
SYS-7-ESMSHUTDOWN	7-Debug	ESM shutdown	The Embedded Syslog Manager has been shut down	-	LOG_SID_NO_ACTION
SYS-7-ESMSHUTDOWN	7-Debug	ESM shutdown	The Embedded Syslog Manager has been shut down	-	LOG_SID_NO_ACTION
SYS-7-ESMSHUTDOWN	7-Debug	ESM shutdown	The Embedded Syslog Manager has been shut down	-	LOG_SID_NO_ACTION
SYS-7-ESMSHUTDOWN	7-Debug	ESM shutdown	The Embedded Syslog Manager has been shut down	-	LOG_SID_NO_ACTION
SYS-7-NV_BLOCK_INIT	7-Debug	Initialized the geometry of nvram	Initialized the nvram block geometry a part of the nvram to host non config data files. Typically these files are used by snmp to store and retrieve non config persistent data accross system reload.	-	""

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS-7-NV_BLOCK_INIT	7-Debug	Initialized the geometry of nvram	Initialized the nvram block geometry a part of the nvram to host non config data files. Typically these files are used by snmp to store and retrieve non config persistent data across system reload.	-	""
SYS-7-NV_BLOCK_INIT	7-Debug	Initialized the geometry of nvram	Initialized the nvram block geometry a part of the nvram to host non config data files. Typically these files are used by snmp to store and retrieve non config persistent data across system reload.	-	""
SYS-7-NV_BLOCK_INIT	7-Debug	Initialized the geometry of nvram	Initialized the nvram block geometry a part of the nvram to host non config data files. Typically these files are used by snmp to store and retrieve non config persistent data across system reload.	-	""
SYS-7-NV_BLOCK_INIT	7-Debug	Initialized the geometry of nvram	Initialized the nvram block geometry a part of the nvram to host non config data files. Typically these files are used by snmp to store and retrieve non config persistent data across system reload.	-	""

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYS7-NV_BLOCK_INIT	7-Debug	Initialized the geometry of nvram	Initialized the nvram block geometry a part of the nvram to host non config data files. Typically these files are used by snmp to store and retrieve non config persistent data accross system reload.	-	""
SYS7-NV_BLOCK_INIT	7-Debug	Initialized the geometry of nvram	Initialized the nvram block geometry a part of the nvram to host non config data files. Typically these files are used by snmp to store and retrieve non config persistent data accross system reload.	-	""
SYS7-NVRAM_INIT_WAIT_TIME	7-Debug	Waited [dec] seconds for NVRAM to be available	The amount of time spent waiting during bootup before NVRAM was available.	-	"This is a debug message."
SYS7-NVRAM_INIT_WAIT_TIME	7-Debug	Waited [dec] seconds for NVRAM to be available	The amount of time spent waiting during bootup before NVRAM was available.	-	"This is a debug message."
SYS7-USERLOG_DEBUG	7-Debug	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS7USERLOG_DEBUG	7-Debug	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."
SYS7USERLOG_DEBUG	7-Debug	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."
SYS7USERLOG_DEBUG	7-Debug	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
SYS7USERLOG_DEBUG	7-Debug	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."
SYS7USERLOG_DEBUG	7-Debug	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."
SYS7USERLOG_DEBUG	7-Debug	Message from tty[node]ser id: [chars]: [chars]	A user has used the 'send log' command to include a message on the configured logging destinations. Such messages can be used to help tag where user-initiated events occur during debugging. The severity level might have been changed by the user.	-	"This message is informational only."
SYSCTLR3BAD_CALL	3-Error	Invalid parameter/mangled pointer\n routine: [chars] file: [chars] line: [dec]	An internal software error occurred.	-	"If any of these messages recur call your technical support\n\n representative for assistance."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SSCIIR3KCMR</del> SOCKETBD	3-Error	socket bind failed	An internal software error occurred.	-	"If any of these messages recur call your technical support\n\n representative for assistance."
<del>SSCIIR3KCMR</del> SOCKETON	3-Error	socket open failed	An internal software error occurred.	-	"If any of these messages recur call your technical support\n\n representative for assistance."
<del>SSCIIR3DULCAE</del> SHF	3-Error	SDP packet with duplicate shelf-id [dec] received from [chars]already discovered \shelf located at [chars]	Two shelves with same shelf-id are configured in the system.	-	"Change the shelf-id for one of the shelf."
<del>SSCIIR3MON</del> SETUPAED	3-Error	Health monitoring setup failed on shelf_id [dec]\n	Health monitor failed to setup the monitoring command on that particular shelf	-	""
<del>SSCIIR3NAD</del> SDP_VERN	3-Error	SDP packet received by system controller contained invalid version number.	Check that shelf is running compatible version of SDP	-	"If any of these messages recur call your technical support\n\n representative for assistance."
<del>SSCIIR3SDP</del> TIMER_ERROR	3-Error	No context associated with the expired SDP timer	An internal software error occurred.	-	"If any of these messages recur call your technical support\n\n representative for assistance."
<del>SSCIIR3SHELF</del> MCGAL	3-Error	Unable to send message [dec] to process with pid [dec].	Most likely the performance collector process has terminated.	-	""

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYSCILR3SHELF_PROTO	3-Error	Shelf id protocol error	An internal software error occurred.	-	"If any of these messages recur call your technical support\n\n representative for assistance."
SYSCILR4HMON_POLL	4-Warning	Local time [chars]\n [chars] on shelfid [dec] is not active resetting monitor_type [dec]\n	Health monitor setup commands polling information.\n\n If you see this message shows up every ten minutes that\n\n means health monitor is not able to set that corresponding \n\n entry on that shelf.	-	""
SYSCILR4SDP_TIMEOUT	4-Warning	Hello packet from shelf [dec] not received shelf removed.	No SDP hello packets were received from the particular shelf this could indicate that particular router shelf is down or is mis-configured.	-	""
SYSCILR4SHELF_CONFIG	4-Warning	Configuration for the shelf [dec] located [node]changed	SDP protocol on system controller has detected that a particular shelf configuration has changed.	-	""
SYSCILR4SHELF_RELOAD	4-Warning	Shelf [dec] located [node]reloaded	SDP protocol on system controller has detected that a particular shelf has reload.	-	""
SYSCILR4SHELF_REMOVE	4-Warning	Shelf [dec] located at address [node]removed.	SDP protocol on system controller didn't receive hello packets from particular shelf.	-	""

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SSCTLR5SNMP_RESPONDG	4-Warning	Shelf [dec] not reachable via SNMP	Shelf indicated above is not responding to SNMP requests.	-	"Check the snmp configuration for the above shelf and also check correct \n\ncommunity string is specified in configuration command system-controller \n\ncommunity on the system controller."
SYSCILR5AUTH_FAILED	5-Notice	MD5 digest does not match SDP packet received from [node]rejected	A SDP hello packet was received from shelf which is not trusted.	-	"Either specify the correct SDP password and/or destination on the\n\nshelf from which this message was received"
SYSCILR6BAD_IP_ADDR	6-Information	Found Shelf [dec] with an invalid IP address [chars]	System Controller found a Shelf with an invalid ip address	-	"Check the IP address set on the Shelf"
SYSCILR6SHELF_ADD	6-Information	Shelf [dec] discovered located at address %i	SDP protocol on system controller has detected a particular shelf.	-	""
SYSCILR6SHELF_RESCRD	6-Information	Communication with shelf [dec] located at address %i	SDP protocol on system controller has detected a particular shelf.	-	""
SYSHW3SYSHW_READ	3-Error	polaris-infra	A read operation has failed for device:[chars] error:[chars]	"A syshw read operation failed for the mentioned device"	"The error message indicates a read failure for the device. No action is needed from the user. However
SYSHW3SYSHW_REG_READ	3-Error	polaris-infra	A register read operation has failed for device:[chars] register:[chars] error:[chars]	"A syshw register read operation failed for the mentioned device"	"The error message indicates a read failure for the device. No action is needed from the user. However

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SYSHW3SYSW_REGWRITE	3-Error	polaris-infra	A register write operation has failed for device:[chars] register:[chars] error:[chars]	"A syshw register read operation failed for the mentioned device"	"The error message indicates a read failure for the device. No action is needed from the user. However
SYSHW3SYSW_WRITE	3-Error	polaris-infra	A write operation has failed for device:[chars] error:[chars]	"A syshw write operation failed for the mentioned device"	"The error message indicates a write failure for the device. No action is needed from the user. However
SYSLOG3SYSMRCREATEERR	3-Error	Failed to create a Syslog file.	Failed to create a Syslog file.	-	"There is probably no PCMCIA disk on slot0\n\ on the System Controller. Please check to see if it is not a\n\ PCMCIA Flash"
SYSLOG3SYSMRCILLEGALIS	3-Error	Illegal file system [chars].	Illegal file system.	-	""
SYSLOG3SYSMRCMSMAX	3-Error	Failed to add Syslog file [chars] maximum Syslog files [dec].	Exceeded the maximum Syslog files allowed.	-	""
SYSLOG3SYSMRCOPENFILEERR	3-Error	Failed to open [chars].[dec] syslog file.	Failed to open a syslog file. One or more of the subfiles may\n\ have been deleted or there is no PCMCIA disk	-	"You may not be having a PCMCIA disk in slot0\n\ on the System Controller. Please check to see if it is not a\n\ PCMCIA Flash. If one or more of the subfiles is missing then\n\ they will be automatically restored when the current file reaches\n\ its capacity and gets archived"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SSLOG_SVR4PARNGERR	3-Error	Parsing file error.	The Router is not configured to timestamp all the log messages	-	"Please configure your router with appropriate\n\n commands to timestamp the log messages. Eg: service timestamps"
SSLOG_SVR4READERR	3-Error	Failed to read a file.	Failed to read a file.	-	""
SSLOG_SVR4UNKNOWNNAME	3-Error	Unknown command or device name or unable to find device address.	Unknown command or device name or unable to find device address.	-	""
SSLOG_SVR4WRITEERR	3-Error	Failed to write a syslog file.	Failed to write a syslog file.	-	""
SSLOG_SVR4DUPFILE	4-Warning	Syslog file [[chars]] exists.	You may have issued a directory name that already exists on the\n\n PCMCIA disk.	-	"Please check to see if the directory name\n\n you supplied already exists on the PCMCIA disk and re-enter\n\n a different one"
SSLOG_SVR4RECORRUPTED	4-Warning	syslog records do not appear to be timestamped.	This may be a result of not turning the service timestamp\n\n command.	-	"Please turn the service timestamps log datetime\n\n command on your router. This will cause the system to timestamp\n\n debugging or logging messages. Use atleast datetime."
SSLOG_SVR4NOCHANGE	4-Warning	No configuration change.	There is no configuration change to the syslog-server	-	""
SSLOG_SVR4NOMEM	4-Warning	No memory left.	No memory left.	-	"The System Controller is running very low on\n\n memory."
SSLOG_SVR4NOMCHS	4-Warning	No syslog file.	No syslog file.	-	""

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SSLOGDROPPEDMESSAGES	3-Error	A total of [node] messages have been dropped by the syslog daemon due to [chars]\n	Either a large number of messages have been sent to syslogd before it has had the opportunity to process them in which case this most likely indicates a bug in the sending process. Or there was insufficient memory available in order to handle the message	syslog	LOG_STD_ACTION
SSLOGDROPPEDMESSAGES	3-Error	A total of [node] messages have been dropped by the syslog daemon due to [chars]\n	Either a large number of messages have been sent to syslogd before it has had the opportunity to process them in which case this most likely indicates a bug in the sending process. Or there was insufficient memory available in order to handle the message	syslog	LOG_STD_ACTION
SSLOGDROPPEDMESSAGES	3-Error	-	-	-	-
SSLOGDROPPEDMESSAGES	3-Error	-	-	-	-
SSLOGDROPPEDMESSAGES	3-Error	-	-	-	-
SSLOGDROPPEDMESSAGES	3-Error	-	-	-	-
SYSMCR_SW_QUERY3IDP	3-Error	ERRMSG_NOFLAGS	-	-	-
SYSMCR_SW_QUERY3IDP	3-Error	ERRMSG_NOFLAGS	-	-	-
SYSMGT_RPC3RPC_ERROR	3-Error	SYSMGT RPC - IPC [chars] [chars] failed [chars]	System Management Remote Procedure Call operation failure. Request for\n\ information from the CIP card will not be processed.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
SSMGRPCNETMGT	3-Error	SYSMGT RPC - NETMGT Event: [chars] [dec]	System Management Remote Procedure Call Network management event error\n detected.	-	LOG_STD_ACTION
SSMGRPCRPCERR	3-Error	SYSMGT RPC - RPC [chars] [chars] failed [chars] [dec]	System Management Remote Procedure Call operation failure. Request for\n information from the CIP card will not be processed.	-	LOG_STD_ACTION
SSPLMCRICERR	3-Error	asr1k-infra-intrnl	Reloading[chars] due critical event[hex] in block[chars]/%d of PLIM device	"A critical PLIM device I/O event has occurred."	"The system automatically reloads the hardware component experiencing the error. If the problem persists
SSPLMCRICERR	3-Error	asr1k-infra-intrnl	Reloading[chars] due to critically high PLIM device error rate.	"A Serial Bridge has experienced a persistently high error rate. The condition is serious and the card must be reloaded. This could be due to a hardware or software driver defect."	"Copy the message exactly as it appears on the console or in the system log
SSPLMCRICERR	5-Notice	asr1k-infra-intrnl	Block[chars]/%d of PLIM device had I/O event[hex]	"A PLIM device I/O event has occurred. This event is not serious but is logged for diagnostic purposes."	"No user action is required."
SSPLMCRICERR	5-Notice	asr1k-infra-intrnl	The[chars] event rate of%llu has exceeded the threshold of%llu on interconnect %d	"A Serial Bridge has experienced a high event rate. This condition is not considered serious	-
SSPLMCRICERR	2-Critical	iosxe-binos-utils	CRITICAL	-	-
SSPLMCRICERR	3-Error	iosxe-binos-utils	Error in[chars]	ewlc ACL flex push error message.	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SSMCONFMSCONFERR</del>	3-Error	iosxe-binos-utils	Error in[chars]	ewlc ACL flex index error message.	LOG_STD_ACTION
<del>SSMCONFMSCONFERR</del>	5-Notice	iosxe-binos-utils	"Unsupported rule:[chars]	-	-
<del>SSMCONFMSCONFERR</del>	3-Error	Correctable DRAM memory error. Count [dec] log [node]x	A correctable error in system DRAM occurred:normal operation continues.	msfc2	"No action needed if additional DRAM errors do not occur."
SSMCONFMSCONFERR	3-Error	System controller Global Registers Dump	Information regarding the internal state of system controller	msfc2	LOG_STD_ACTION
SSMCONFMSCONFERR	3-Error	Error condition detected: [chars]	Information regarding an error condition detected by the system controller:normal operation continues	msfc2	LOG_SID_RECUR_ACTION
SSMCONFMSCONFERR	3-Error	An unrecoverable error has been detected. The system is being reset.	The system controller has detected an unrecoverable error condition.	msfc2	LOG_STD_ACTION
SSMCONFMSCONFERR	3-Error	[chars]=0x[hec]	Information regarding the internal state of system controller	msfc2	LOG_STD_ACTION
SSMCONFMSCONFERR	3-Error	[chars]=0x[node]x0x[node]x	Information regarding the internal state of system controller	msfc2	LOG_STD_ACTION
SSMCONFMSCONFERR	3-Error	System Controller is reset:Normal Operation continues	The system controller is being reset : Message rate limited	msfc2	"show ibc"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>SSEMCNTRCLRERR</del>	3-Error	[chars] [dec] correctable DRAM memory errors in previous hour	Multiple correctable errors have occurred in system DRAM	-	"Reboot system at next convenient time. If error persists after reboot" " call your Cisco technical support representative to arrange repairs."
<del>SSEMCNTRCLRRES</del>	3-Error	Resetting system controller due to [chars]	The system controller is being reset due to internal errors	msfc2	LOG_STD_ACTION
<del>SSEMCNTRCLRSHOD</del>	3-Error	Mistral interrupt count is [dec] Supervisor will reset on hitting threshold [dec].	The system controller has detected an unrecoverable error condition. But since this is a standalone supervisor we merely reset the controller instead of reloading the supervisor. Once the count of the mistral error interrupts hits the threshold value the supervisor will be reloaded. The default threshold value is 5	msfc2	LOG_STD_ACTION
TAC-3-PICKCTX	3-Error	No pick-context	The context to pick the next server has disappeared.	tacacs	LOG_STD_ACTION
TAC-3-PICKCTX	3-Error	No pick-context	The context to pick the next server has disappeared.	tacacs	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>TAC-SECRETIDHEALID</del>	3-Error	Key definition ignored.	The user is attempting to store either a corrupted shared secret or memory allocation failed during secret definition. Any existing shared secret will be preserved.	aaa	"Configure a proper secret."
<del>TAC-SECRETIDHEALID</del>	3-Error	Key definition ignored.	The user is attempting to store either a corrupted shared secret or memory allocation failed during secret definition. Any existing shared secret will be preserved.	aaa	"Configure a proper secret."
TAC-3-SERVCONF	3-Error	Server config failure: [chars]	The server configuration failed	aaa	"Please configure the server properly"
TAC-3-SERVCONF	3-Error	Server config failure: [chars]	The server configuration failed	aaa	"Please configure the server properly"
TAC-3-SERVINT	3-Error	[chars]	This is an internal software error.	aaa	LOG_STD_ACTION
TAC-3-SERVINT	3-Error	[chars]	This is an internal software error.	aaa	LOG_STD_ACTION
TAC-3-SERVNO	3-Error	Server [chars] is not configured	The server is not configured	aaa	"Please configure a server before un-configuring it"
TAC-3-SERVNO	3-Error	Server [chars] is not configured	The server is not configured	aaa	"Please configure a server before un-configuring it"
TAC-3-XTACACL	3-Error	[chars]: accesslist 0x[hec] out of range for \[chars]\	The TACACS facility created a message that contains an accesslist which is not a valid accesslist out of bounds.	tacacs	"If this message recurs call your technical support representative for "assistance."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TAC-3-XTACACL	3-Error	[chars]: accesslist 0x[hec] out of range for \"[chars]\"	The TACACS facility created a message that contains an accesslist which is not a valid accesslist out of bounds.	tacacs	"If this message recurs call your technical support representative for "assistance."
TAC-4-NOTIMEOUT	4-Warning	Warning: This command has been deprecated in favor of the line-command \"timeout login response\"	This command is deprecated and should no longer be used. Instead the line-command <CmdBold>timeout login response</noCmdBold> now provides this functionality	aaa	"Use the line-command <CmdBold>timeout login response</noCmdBold>"
TAC-4-NOTIMEOUT	4-Warning	Warning: This command has been deprecated in favor of the line-command \"timeout login response\"	This command is deprecated and should no longer be used. Instead the line-command <CmdBold>timeout login response</noCmdBold> now provides this functionality	aaa	"Use the line-command <CmdBold>timeout login response</noCmdBold>"
TAC-4-SERVREF	4-Warning	Warning: Server [chars]:[dec] is still referenced by server group.	The server being removed is still referenced by a server group	aaa	"Please dereference the server from the server group " "as soon as possible."
TAC-4-SERVREF	4-Warning	Warning: Server [chars]:[dec] is still referenced by server group.	The server being removed is still referenced by a server group	aaa	"Please dereference the server from the server group " "as soon as possible."
TAC-4-SERVREFNAME	4-Warning	Warning: Server [chars] is still referenced by server group.	The server being removed is still referenced by a server group	aaa	"Please dereference the server from the server group " "as soon as possible."
TAC-4-SERVREFNAME	4-Warning	Warning: Server [chars] is still referenced by server group.	The server being removed is still referenced by a server group	aaa	"Please dereference the server from the server group " "as soon as possible."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
TAC-4-UNEXREP	4-Warning	Reply for non-existent request [dec] on queue	The TACACS facility received a message it was not expecting. This may occur when a TACACS server sends duplicate responses or when it responds to a request that has already timed out. It also may be due to an internal software problem.	-	"If this message recurs call your technical support representative for "assistance."
TAC-4-UNEXREP	4-Warning	Reply for non-existent request [dec] on queue	The TACACS facility received a message it was not expecting. This may occur when a TACACS server sends duplicate responses or when it responds to a request that has already timed out. It also may be due to an internal software problem.	-	"If this message recurs call your technical support representative for "assistance."
TAC-6-SENDTMO	6-Information	Send type [dec] to [node]timed out	A background TACACS notification enabled with the command tacacs notify was not acknowledged by the TACACS server processor within the	-	"Check the TACACS server and the network attached to it."
TAC-6-SENDTMO	6-Information	Send type [dec] to [node]timed out	A background TACACS notification enabled with the command tacacs notify was not acknowledged by the TACACS server processor within the	-	"Check the TACACS server and the network attached to it."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TAC-6-SERVDEP	6-Information	tacacs-server host CLI will be deprecated soon. Please move to tacacs server <name> CLI	Migration from tacacs-server host CLI to tacacs server <name> CLI	aaa	"Please try to use new CLI"
TAC-6-SERVDEP	6-Information	tacacs-server host CLI will be deprecated soon. Please move to tacacs server <name> CLI	Migration from tacacs-server host CLI to tacacs server <name> CLI	aaa	"Please try to use new CLI"
<del>TAGAIMBADRANCE1DP</del>	3-Error	<del>ERRMSG_NOFLAGS</del>	-	-	-
<del>TAGAIMBADRANCE1DP</del>	3-Error	<del>ERRMSG_NOFLAGS</del>	-	-	-
<del>TAGAIM_NOMEM3LDP</del>	3-Error	<del>ERRMSG_NOFLAGS</del>	-	-	-
<del>TAGAIM_NOMEM3LDP</del>	3-Error	<del>ERRMSG_NOFLAGS</del>	-	-	-
<del>TCMRBCKCMRKG1HR</del>	3-Error	ewlc-rrm	Failure during RF tag[chars] creation	-	-
<del>TCMRBCKCMRKG1HR</del>	3-Error	ewlc-spwifi	Easy-PSK config validation error:[chars]	Easy-PSK CONFIG warning message	LOG_STD_ACTION
<del>TCMRBCKCMRKG1HR</del>	3-Error	ewlc-ap	MPSK config validation error:[chars]	MPSK CONFIG warning message	LOG_STD_ACTION
<del>TCMRBCKCMRKG1HR</del>	4-Warning	ewlc-ap	Warning:[chars]	General Wireless LAN Controller warning message	LOG_STD_ACTION
<del>TCMRBCKCMRKG1HR</del>	5-Notice	ewlc-ap	Mode Change:[chars]	Msg indicating AP reboot during Mode Change	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TARIMAGEENAD	3-Error	[chars] file not found in archive	The Tar File System could not locate the relevant tar element inside the archive	os	"Check whether the Archive is complete and not corrupted or of" " the wrong format. If the problem could" " be recreated with <b>debug</b> ifs file" " turned" " on it could help in quick identification of the problem." " Collect the output of <b>archive tar</b> " /table" " <b>archive</b> if it is a " pure tar archive or <b>show image contents</b> file" " " <b>archive</b> if the archive is a system image"
TBRIDGE4BAD_ENCAP	4-Warning	Unexpected encapsulation received on [chars] [chars]	The transparent bridging driver received a packet with\n\n unrecognizable encapsulation. The packet had to be discarded.	-	"This could indicate a network media error or that a protocol\n\n which is newer than this version of the Cisco IOS software is\n\n being used. If it is believed that the dropped packets are of\n\n a real protocol upgrade to a new version of the software which\n\n handles it."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TBRIDGE4BADXMAC	4-Warning	XMACACCESS: Invalid extended access list [dec]	This is a configuration problem. The specified extended access\n\ list either does not exist or contains an error.	-	"Correct the configuration problem."
TBRIDGE4BIMREACHD	4-Warning	MAC-address table size limit [node] entries reached	The total number of bridge MAC-address table entries across all bridge \n\ groups has reached the configured maximum limit.	-	"Check the bridge tables to determine the origin of the bridge MAC-address \n\ table entries. Check the network configuration and ensure that the entries \n\ are as expected. Use the bridge mac-address-table limit <n> configuration \n\ command to either increase the maximum limit or to disable limit-checking \n\ altogether."
TBRIDGE4-GIANT	4-Warning	Giant received on [chars] [dec] exceeds [dec]\n DA [enet] SA [enet] [0x[node]x]	-	-	"Use the address and packet information provided to trace the source of\n\ these packets and reduce its MTU to conform to the standard for the\n\ given media."
TBRIDGE4INVALIDMEDIA	4-Warning	[chars] received on [chars] - invalid media for transparent bridging	Transparent bridging was configured on an interface that does not\n\ support it.	-	"Remove transparent bridging from the configuration on the specified\n\ interface."
TBRIDGE4NOVCDROP	4-Warning	Destination VC unknown for packet	A transparently bridged packet destined for an ATM interface cannot be\n\ fully addressed.	-	"Clear the bridge table to force re-learning of all addresses."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TBRIDGE4NOVCFLOOD	4-Warning	No VC's configured for bridging on [chars]	An ATM interface was configured for transparent bridging without also\n\n specifying the associated virtual circuits.	-	"Configure the required virtual circuits on the specified interface."
TBRIDGE4SMF_ACTION	4-Warning	invalid action found for [enet] on [chars] - [node]x	A software or hardware error occurred.	-	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
TBRIDGE4VCPAKDROP	4-Warning	Subscriber SA [enet] moved or loop between circuits [dec] and [dec]	A subscriber bridged packet dropped because potential circuit loop\n\n or roaming host at subscriber end of network.	-	"Clear bridge table. If problem persists it is not a roaming host but\n\n a loop between virtual circuits at subscriber end of network. Take\n\n looping virtual circuits out of service and/or shut the software\n\n interface they are on while subscriber is contacted to remove loop\n\n condition at subscriber end of network."
TCAM_MGR3-DIRSD_NRCN	3-Error	[dec]	-	-	""
TCAM_MGR3-CLASD_NRCN	3-Error	[dec]	-	-	""
TCAM_MGR3-INTERNAL_ERRR	3-Error	[chars] [chars] [dec]	-	-	""
TCAM_MGR3-NAD_OBRACN	3-Error	[chars] [dec]	-	-	""
TCAM_MGR3-NAD_DRGME	3-Error	[chars] [dec]	-	-	""
TCAM_MGR3-MALLOCFAL	3-Error	[chars] [chars]	-	-	""
TCAM_MGR3-OP_FAIL	3-Error	[chars] failed for application [chars] application entry [hec] with [chars] error	-	-	""



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TCMSP3SABOVRNG	3-Error	[chars] mbu [hec] free_array_index [dec] region_id [dec]	-	-	""
TCMSP3CAPMISMACH	3-Error	voice port [chars]: call connection id [0x[hec] 0x[hec] 0x[hec] 0x[hec]]	There was a capabilities mismatch between the two call legs. capabilities are negotiated between call legs for CODEC VAD and FAX rate.	ios-voice	"Check that the dial peer configuration is appropriate for the interface in question. Also check that and configuration on the interface is correct."
TCMSP3CAPMISMACH	3-Error	voice port [chars]: call connection id [0x[hec] 0x[hec] 0x[hec] 0x[hec]]	There was a capabilities mismatch between the two call legs. capabilities are negotiated between call legs for CODEC VAD and FAX rate.	ios-voice	"Check that the dial peer configuration is appropriate for the interface in question. Also check that and configuration on the interface is correct."
TCMSP3DOCALLHIFAIL	3-Error	\ntcmstp_do_call_history: [chars]	Allocate or insert an active TCMSP call record into call history list failed.	ios-voice	"No action is required."
TCMSP3DOCALLHIFAIL	3-Error	\ntcmstp_do_call_history: [chars]	Allocate or insert an active TCMSP call record into call history list failed.	ios-voice	"No action is required."
TCMSP3DSP_TIMEOUT	3-Error	DSP timeout on event 0x[hec]: DSP ID=0x[hec]: [chars] call mode=[dec]	Timeout on DSP response.	ios-voice	"The DSP has been automatically reset. If problem persists contact" "your technical support representative"
TCMSP3DSP_TIMEOUT	3-Error	DSP timeout on event 0x[hec]: DSP ID=0x[hec]: [chars] call mode=[dec]	Timeout on DSP response.	ios-voice	"The DSP has been automatically reset. If problem persists contact" "your technical support representative"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
TCMSP-3-DSPALARM	3-Error	DSP ID 0x[hec]: status=0x[hec] message=0x[hec] text=[chars]	The DSP reported a fatal error. All calls on the DSP were dropped and a DSP reload was attempted.	ios-voice	"Verify that the DSP reloaded properly by attempting to place a call on the affected voice port. Contact your technical support representative include the full text of the error message."
TCMSP-3-DSPALARM	3-Error	DSP ID 0x[hec]: status=0x[hec] message=0x[hec] text=[chars]	The DSP reported a fatal error. All calls on the DSP were dropped and a DSP reload was attempted.	ios-voice	"Verify that the DSP reloaded properly by attempting to place a call on the affected voice port. Contact your technical support representative include the full text of the error message."
TCMSP-3-FSM_ERROR	3-Error	[chars]	Internal Finite State Machine Error.	ios-voice	"Contact your technical support representative include the full text of the error message."
TCMSP-3-FSM_ERROR	3-Error	[chars]	Internal Finite State Machine Error.	ios-voice	"Contact your technical support representative include the full text of the error message."
TCMSP-3-MSGSENDFAIL	3-Error	channel:[chars] DSP ID:0x[hec] Message ID:0x[hec]	A message could not be sent to the DSP. The call continued but may have experienced problems.	ios-voice	"Verify that the DSP is still functioning properly by attempting to place a call on the affected voice port. Contact your technical support representative include the full text of the error message."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TCMSP3-MSGSNDFAIL	3-Error	channel:[chars] DSP ID:0x[hec] Message ID:0x[hec]	A message could not be sent to the DSP. The call continued but may have experienced problems.	ios-voice	"Verify that the DSP is still functioning properly by attempting to place a call on the affected voice port. Contact your technical support representative include the full text of the error message."
TCMSP-3-NOEVENT	3-Error	no free event structure available from [chars] for DSP message	There were no event structures remaining in the system pools to alert the router of a voice or signaling event.	ios-voice	"Check that the voice port for which the event was reported is still operational. If not clear the voice port."
TCMSP-3-NOEVENT	3-Error	no free event structure available from [chars] for DSP message	There were no event structures remaining in the system pools to alert the router of a voice or signaling event.	ios-voice	"Check that the voice port for which the event was reported is still operational. If not clear the voice port."
TCMSP3-TCMSP_BLOCK	3-Error	tcmstp_call_block allocate failed	RBTreeCreate failed.	ios-voice	"Add more memory"
TCMSP3-TCMSP_BLOCK	3-Error	tcmstp_call_block allocate failed	RBTreeCreate failed.	ios-voice	"Add more memory"
<del>TCMSP3-TCMSP_BLOCK</del>	3-Error	TCMSP call disconnect failed. channel id [chars] ret [dec]	TCMSP call disconnect could not be successfully passed and it may result hung calls.	ios-voice	"Contact your technical support representative. Report the configuration and full text of the error message."
<del>TCMSP3-TCMSP_BLOCK</del>	3-Error	TCMSP call disconnect failed. channel id [chars] ret [dec]	TCMSP call disconnect could not be successfully passed and it may result hung calls.	ios-voice	"Contact your technical support representative. Report the configuration and full text of the error message."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>TCMSP3ICMSP_HAIRN_FAILED</del>	3-Error	Call hairpinning failed. cdb 0x[hec] dst_cdb 0x[hec] dst_call_id [dec]	A DSP-less call could not be hairpinned.	ios-voice	"Under heavy traffic this failure may happen because no TDM resources were available. Contact your technical support representative include the full text of the error message."
<del>TCMSP3ICMSP_HAIRN_FAILED</del>	3-Error	Call hairpinning failed. cdb 0x[hec] dst_cdb 0x[hec] dst_call_id [dec]	A DSP-less call could not be hairpinned.	ios-voice	"Under heavy traffic this failure may happen because no TDM resources were available. Contact your technical support representative include the full text of the error message."
<del>TCMSP3ICMSP_HAIRN_NO_PEER</del>	3-Error	Call can't be hairpinned. cdb 0x[hec] dst_cdb 0x[hec] dst_call_id [dec]	A DSP-less call could not be hairpinned.	ios-voice	"Check the dial-peer configuration."
<del>TCMSP3ICMSP_HAIRN_NO_PEER</del>	3-Error	Call can't be hairpinned. cdb 0x[hec] dst_cdb 0x[hec] dst_call_id [dec]	A DSP-less call could not be hairpinned.	ios-voice	"Check the dial-peer configuration."
<del>TCMSP3ICMSP_HAIRN</del>	3-Error	hairpin peer cdb does not exist cdb 0x[hec] dst_call_id [dec]	A hairpin call setup failed because the other call leg does not exist.	ios-voice	"Contact your technical support representative. Report the configuration and the full text of the error message."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>TCMSP3</del> TCMSP_HAIRPIN	3-Error	hairpin peer cdb does not exist cdb 0x[hec] dst_call_id [dec]	A hairpin call setup failed because the other call leg does not exist.	ios-voice	"Contact your technical support representative. Report the configuration and the full text of the error message."
<del>TCMSP4</del> FSM_BADEVENT	4-Warning	Invalid FSM Input on channel [chars]: state=[chars] event=[dec]	Internal state machine illegal input. This message represents an internal software fault and may manifest itself as dropped or hung calls.	ios-voice	"Contact your field service representative if indication is coincident " "with dropped or hung calls."
<del>TCMSP4</del> FSM_BADEVENT	4-Warning	Invalid FSM Input on channel [chars]: state=[chars] event=[dec]	Internal state machine illegal input. This message represents an internal software fault and may manifest itself as dropped or hung calls.	ios-voice	"Contact your field service representative if indication is coincident " "with dropped or hung calls."
<del>TCPROX2</del> PROXY_CNTRLED	2-Critical	QFP TCP Proxy IPC initialization failure result: [dec].	Cisco internal software error. QFP TCP Proxy initialization detected that the IPC interface initialization failed. QFP TCP proxy will not be functional while this condition exists.	qfp-tcpkeyword:none	LOG_STD_ACTION
<del>TCPROX2</del> PROXY_BDMG	3-Error	CPP TCP Proxy received bad length message type [dec]	Cisco internal software error. CPP TCP Proxy received a corrupted message from control plane. This message will be ignored.	qfp-tcpkeyword:none	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>TC</del> PROXY <del>DE</del> CHG <del>AD</del>	3-Error	-	TCP Conditional Debugging registration failed.	qfp-tcpkeyword:none	LOG_STD_ACTION
<del>TC</del> PROXY <del>RO</del> X <del>Y</del> N <del>V</del> M <del>G</del>	3-Error	CPP TCP Proxy received invalid message type [dec]	Cisco internal software error. CPP TCP Proxy received an invalid message type from control plane. This message will be ignored.	qfp-tcpkeyword:none	LOG_STD_ACTION
<del>TC</del> PROXY <del>RO</del> X <del>Y</del> C <del>A</del> L <del>L</del> O <del>A</del> D	3-Error	CPP TCP Proxy [chars] message lost due to message buffer allocation failure.	Cisco internal software error. CPP TCP Proxy message processing detected a message buffer allocation failure. The message is lost as the result of this condition.	qfp-tcpkeyword:none	LOG_STD_ACTION
<del>TC</del> PROXY <del>RO</del> X <del>Y</del> C <del>H</del> U <del>N</del> K <del>I</del> A <del>L</del> D	3-Error	CPP TCP Proxy chunk memory failure [dec]	Cisco internal software error. QFP TCP Proxy chunk memory allocation detected failure. QFP TCP proxy will not be functional while this condition exists.	qfp-tcpkeyword:none	LOG_STD_ACTION
<del>TC</del> PROXY <del>RO</del> X <del>Y</del> C <del>S</del> N <del>D</del> A <del>L</del> D	3-Error	CPP TCP Proxy [chars] message lost due to message sent failure result: [dec].	Cisco internal software error. CPP TCP Proxy message processing detected a message sent failure. The message is lost as the result of this condition.	qfp-tcpkeyword:none	LOG_STD_ACTION
TCP-2-ACCEPT	2-Critical	Callback failed to accept connection from [chars][dec] to [chars][dec] --	An internal software error occurred.	tcp	"If this message recurs copy it down exactly as it appears and\n" "contact your technical support representative for assistance."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TCP-2-ACCEPT	2-Critical	Callback failed to accept connection from [chars][dec] to [chars][dec] --	An internal software error occurred.	tcp	"If this message recurs copy it down exactly as it appears and\n" "contact your technical support representative for assistance."
TCP-2-BADQUEUE	2-Critical	Multiple entry for packet [hec]	An internal software error occurred.	tcp	"If this message recurs copy it down exactly as it appears and\n" "contact your technical support representative for assistance."
TCP-2-BADQUEUE	2-Critical	Multiple entry for packet [hec]	An internal software error occurred.	tcp	"If this message recurs copy it down exactly as it appears and\n" "contact your technical support representative for assistance."
TCP-2-BADREFCNT	2-Critical	Tty[node] Bad refcnt for packet 0x[hec] during retransmit [chars][dec] to [chars][dec] state [dec]	An internal software error occurred.	tcp	"If this message recurs copy it down exactly as it appears and\n" "contact your technical support representative for assistance."
TCP-2-BADREFCNT	2-Critical	Tty[node] Bad refcnt for packet 0x[hec] during retransmit [chars][dec] to [chars][dec] state [dec]	An internal software error occurred.	tcp	"If this message recurs copy it down exactly as it appears and\n" "contact your technical support representative for assistance."
TCP-2-BADTCBREFCNT	2-Critical	Bad TCB refcount: TCB 0x[hec] refcnt [dec]	An internal software error occurred	tcp	"If this message recurs copy it down exactly as it appears and\n" "contact your technical support representative for assistance."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
TCP-2-BADTCBREFCNT	2-Critical	Bad TCB refcount: TCB 0x[hec] refent [dec]	An internal software error occurred	tcp	"If this message recurs copy it down exactly as it appears and\n" "contact your technical support representative for assistance."
TCP-2-BUFFER	2-Critical	Tty[node]buffering bug	An internal software error occurred.	tcp	"If this message recurs contact your technical support " "representative."
TCP-2-BUFFER	2-Critical	Tty[node]buffering bug	An internal software error occurred.	tcp	"If this message recurs contact your technical support " "representative."
TCP-2-HALFCLOSE	2-Critical	Tty[node]tcp_putbyte write disabled	TCP received a packet from a user application after the connection\n was already halfclosed.	tcp	"Determine which TCP application is still sending after\n" "the connection was halfclosed."
TCP-2-HALFCLOSE	2-Critical	Tty[node]tcp_putbyte write disabled	TCP received a packet from a user application after the connection\n was already halfclosed.	tcp	"Determine which TCP application is still sending after\n" "the connection was halfclosed."
TCP-2-INVALIDENCAPS	2-Critical	Invalid TCB encaps pointer: 0x[hec]	An invalid TCP ENCAPS is used.	tcp	"If this message recurs copy it down exactly as it appears and\n" "contact your technical support representative for assistance."
TCP-2-INVALIDENCAPS	2-Critical	Invalid TCB encaps pointer: 0x[hec]	An invalid TCP ENCAPS is used.	tcp	"If this message recurs copy it down exactly as it appears and\n" "contact your technical support representative for assistance."



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
TCP-2-NOTREADY	2-Critical	[chars] called but TCP not initialized	An internal software error occurred.	tcp	"If this message recurs copy the message exactly as it appears and\n" "contact your technical support."
TCP-2-NOTREADY	2-Critical	[chars] called but TCP not initialized	An internal software error occurred.	tcp	"If this message recurs copy the message exactly as it appears and\n" "contact your technical support."
TCP-2-PUTBYTE	2-Critical	Tty[node]tcp_putbyte with blocking disabled	An internal software error occurred.	tcp	"If this message recurs contact your technical support " "representative."
TCP-2-PUTBYTE	2-Critical	Tty[node]tcp_putbyte with blocking disabled	An internal software error occurred.	tcp	"If this message recurs contact your technical support " "representative."
TCP-3-BADMSS	3-Error	Incorrect mss [dec] observed	MSS Maximum Segment Size became incorrect. TCP cannot guarantee\n	tcp	"This message occurs please check the interface MTU and increase\n" "it accordingly. If doing this a few times does not help please\n" "contact your technical support representative for assistance."
TCP-3-BADMSS	3-Error	Incorrect mss [dec] observed	MSS Maximum Segment Size became incorrect. TCP cannot guarantee\n	tcp	"This message occurs please check the interface MTU and increase\n" "it accordingly. If doing this a few times does not help please\n" "contact your technical support representative for assistance."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TCP-3-FORKFAIL	3-Error	Failed to start a process to negotiate options.	Failed to create a process to handle requests from\n client. It could be because of Insufficient memory.	tcp	"Free up some memory."
TCP-3-FORKFAIL	3-Error	Failed to start a process to negotiate options.	Failed to create a process to handle requests from\n client. It could be because of Insufficient memory.	tcp	"Free up some memory."
TCP-3-NOTFOUND	3-Error	Connection info for [node][dec] => [node][dec] not found.	The TCP Intercept code was searching its database for information\n for a particular connection but this information was not found.	tcp	"If this message recurs copy it down exactly as it appears and\n" "contact your technical support representative for assistance."
TCP-3-NOTFOUND	3-Error	Connection info for [node][dec] => [node][dec] not found.	The TCP Intercept code was searching its database for information\n for a particular connection but this information was not found.	tcp	"If this message recurs copy it down exactly as it appears and\n" "contact your technical support representative for assistance."
TCP-3-TCBHASHSIZE	3-Error	Failed to get tcb hash size from RFD Assigning default value [node]	Failed to get tcb hash size from RFD file using RFD APIs.	os	"Contact your technical support representative" " for assistance."
TCP-3-TCBHASHSIZE	3-Error	Failed to get tcb hash size from RFD Assigning default value [node]	Failed to get tcb hash size from RFD file using RFD APIs.	os	"Contact your technical support representative" " for assistance."
TCP3-TCP_REG_FAILED	3-Error	QFP TCP registers failed	Cisco internal software error. QFP TCP feature initialization detected that registration failed. QFP TCP will not be functional while this condition exists.	qfp-tcpkeyword:tcp	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TCP-4-INVALIDTCB	4-Warning	Invalid TCB pointer: 0x[hec]	An invalid TCB is used.	tcp	"If this message recurs copy it down exactly as it appears and\n" "contact your technical support representative for assistance."
TCP-4-INVALIDTCB	4-Warning	Invalid TCB pointer: 0x[hec]	An invalid TCB is used.	tcp	"If this message recurs copy it down exactly as it appears and\n" "contact your technical support representative for assistance."
TCP-6-AOKEYEXPIRED	6-Information	TCP AO Key expired for connection from [chars][dec] to [chars][dec] tableid - [dec]	TCP Key specified in Authentication Option has expired on the receiver.	tcp	"Configure the TCP key with a valid send/accept lifetime." "If this message recurs copy it down exactly as it appears and\n" "contact your technical support representative for assistance."
TCP-6-AOKEYEXPIRED	6-Information	TCP AO Key expired for connection from [chars][dec] to [chars][dec] tableid - [dec]	TCP Key specified in Authentication Option has expired on the receiver.	tcp	"Configure the TCP key with a valid send/accept lifetime." "If this message recurs copy it down exactly as it appears and\n" "contact your technical support representative for assistance."
TCP-6-ACKKEYEXPIRED	6-Information	TCP AO Keychain [chars] key [dec] accept lifetime expired	TCP Authentication Option key has expired.	tcp	"Configure the TCP key with a valid accept lifetime." "If this message recurs copy it down exactly as it appears and\n" "contact your technical support representative for assistance."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TCP-6-ACKRECVEXPIRED	6-Information	TCP AO Keychain [chars] key [dec] accept lifetime expired	TCP Authentication Option key has expired.	tcp	"Configure the TCP key with a valid accept lifetime." "If this message recurs copy it down exactly as it appears and\n" "contact your technical support representative for assistance."
TCP-6-ACKSENDEXPIRED	6-Information	TCP AO Keychain [chars] key [dec] send lifetime expired	TCP Authentication Option key has expired.	tcp	"Configure the TCP key with a valid send lifetime." "If this message recurs copy it down exactly as it appears and\n" "contact your technical support representative for assistance."
TCP-6-ACKSENDEXPIRED	6-Information	TCP AO Keychain [chars] key [dec] send lifetime expired	TCP Authentication Option key has expired.	tcp	"Configure the TCP key with a valid send lifetime." "If this message recurs copy it down exactly as it appears and\n" "contact your technical support representative for assistance."
TCP-6-AOMISMATCH	6-Information	TCP AO MAC Mismatch for connection from [chars][dec] to [chars][dec] tableid - [dec]	TCP Authentication Option MAC did not match between endpoints.	tcp	"Configure the TCP key on each end of the connection with the" " same key-string and algorithm and corresponding send/rcv ids." "If this message recurs copy it down exactly as it appears and\n" "contact your technical support representative for assistance."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
TCP-6-AOMISMATCH	6-Information	TCP AO MAC Mismatch for connection from [chars][dec] to [chars][dec] tableid - [dec]	TCP Authentication Option MAC did not match between endpoints.	tcp	"Configure the TCP key on each end of the connection with the " " same key-string and algorithm and corresponding send/recv ids." "If this message recurs copy it down exactly as it appears and\n" "contact your technical support representative for assistance."
TCP-6-AOMISSING	6-Information	TCP Authentication Option not found for connection from [chars][dec] to [chars][dec] tableid - [dec]	TCP Authentication Option missing on connection.	tcp	"Check BGP/LDP/SXP configuration on each peer" " to make sure TCP AO is configured." "If this message recurs copy it down exactly as it appears and\n" "Contact your technical support representative for assistance."
TCP-6-AOMISSING	6-Information	TCP Authentication Option not found for connection from [chars][dec] to [chars][dec] tableid - [dec]	TCP Authentication Option missing on connection.	tcp	"Check BGP/LDP/SXP configuration on each peer" " to make sure TCP AO is configured." "If this message recurs copy it down exactly as it appears and\n" "Contact your technical support representative for assistance."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
TCP6AONOCURRKEY	6-Information	No TCP AO Current key configured	No TCP Authentication Option Current Key configured on the TCB.	tcp	"Configure the TCP key chain with valid key and associate with the application." "If this message recurs copy it down exactly as it appears and\n" "contact your technical support representative for assistance."
TCP6AONOCURRKEY	6-Information	No TCP AO Current key configured	No TCP Authentication Option Current Key configured on the TCB.	tcp	"Configure the TCP key chain with valid key and associate with the application." "If this message recurs copy it down exactly as it appears and\n" "contact your technical support representative for assistance."
TCP6AONONEXIKEY	6-Information	No TCP AO Next key configured	No TCP Authentication Option Next Key configured on the TCB.	tcp	"Configure the TCP key chain with valid key and associate with the application." "If this message recurs copy it down exactly as it appears and\n" "contact your technical support representative for assistance."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TCP-6-AONONEXTKEY	6-Information	No TCP AO Next key configured	No TCP Authentication Option Next Key configured on the TCB.	tcp	"Configure the TCP key chain with valid key and associate with the application." "If this message recurs copy it down exactly as it appears and\n" "contact your technical support representative for assistance."
TCP-6-AONOSPACE	6-Information	Insufficient space for AO option	Insufficient space for Auth option AO. This should not happen as\n	tcp	"Try unconfiguring TCP options if any and check if this error\n" "message goes away. Also copy it down exactly as it appears and\n" "contact your technical support representative for assistance."
TCP-6-AONOSPACE	6-Information	Insufficient space for AO option	Insufficient space for Auth option AO. This should not happen as\n	tcp	"Try unconfiguring TCP options if any and check if this error\n" "message goes away. Also copy it down exactly as it appears and\n" "contact your technical support representative for assistance."
TCP-6-AOROLLOVER	6-Information	TCP AO Keychain [chars] rollover from key [dec] to key [dec]	TCP AO Key chain is rolling over to a new key.	tcp	"No action required."
TCP-6-AOROLLOVER	6-Information	TCP AO Keychain [chars] rollover from key [dec] to key [dec]	TCP AO Key chain is rolling over to a new key.	tcp	"No action required."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
TCP-6-BADAUTH	6-Information	[chars] MD5 digest from [chars][dec] to [chars][dec][chars] tableid - [dec]	The system received a TCP packet with an invalid MD5 authentication\n digest on a connection endpoint. The message ends with the string\n \	-	-
TCP-6-BADAUTH	6-Information	[chars] MD5 digest from [chars][dec] to [chars][dec][chars] tableid - [dec]	The system received a TCP packet with an invalid MD5 authentication\n digest on a connection endpoint. The message ends with the string\n \	-	-
TCP-6-INTERCEPT	6-Information	[chars] count [dec]/[dec] 1 min [dec]	The TCP Intercept code has changed state.	tcp	"This message is for informational purposes but it may indicate\n" "a security problem."
TCP-6-INTERCEPT	6-Information	[chars] count [dec]/[dec] 1 min [dec]	The TCP Intercept code has changed state.	tcp	"This message is for informational purposes but it may indicate\n" "a security problem."
TCP6NINTERCEPTHASH	6-Information	Unable to allocate memory for TCP Intercept hash table	An internal software error occurred	tcp	"Contact your technical support representative for assistance."
TCP6NINTERCEPTHASH	6-Information	Unable to allocate memory for TCP Intercept hash table	An internal software error occurred	tcp	"Contact your technical support representative for assistance."



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
TCP-6-MD5NOSPACE	6-Information	Insufficient space for MD5 option	Insufficient space for MD5 option. This should not happen as\n MD5 option when requested needs to be honored and also given\n preference over other TCP options.	tcp	"Try unconfiguring TCP options if any and check if this error\n" "message goes away. Also copy it down exactly as it appears and\n" "contact your technical support representative for assistance."
TCP-6-MD5NOSPACE	6-Information	Insufficient space for MD5 option	Insufficient space for MD5 option. This should not happen as\n MD5 option when requested needs to be honored and also given\n preference over other TCP options.	tcp	"Try unconfiguring TCP options if any and check if this error\n" "message goes away. Also copy it down exactly as it appears and\n" "contact your technical support representative for assistance."
TCP-6-NOBUFF	6-Information	TTY[node]no buffer available	An internal software error occurred.	tcp	"Copy the error message exactly as it appears and report it to your\n" "technical support representative."
TCP-6-NOBUFF	6-Information	TTY[node]no buffer available	An internal software error occurred.	tcp	"Copy the error message exactly as it appears and report it to your\n" "technical support representative."
TCP-6-TOOBIG	6-Information	Tty[node]too many bytes of options [dec]	An internal software error occurred.	tcp	"Copy the error message exactly as it appears and report it to your\n" "technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TCP-6-TOOBIG	6-Information	Tty[node]too many bytes of options [dec]	An internal software error occurred.	tcp	"Copy the error message exactly as it appears and report it to your\n" "technical support representative."
<del>TDBABSMEMORY</del>	3-Error	iosxe-p-db	Database memory leak detected in[chars] database	-	-
<del>TDBABSORNAME</del>	3-Error	iosxe-p-db	Operation:[chars]	-	-
<del>TDBADTABLE</del>	3-Error	iosxe-p-db	Invalid table free by process[chars] in[chars] on table with luid[chars]	In shared databases	-
<del>TDBSLOCKMOUT</del>	3-Error	polaris-infra	Owner: user-proc:[chars]	-	-
<del>TDBWRITEONSHOT</del>	3-Error	polaris-mdt-infra	Process writing on snapshotted DB [%s]	Application is trying to write on a snapshotted DB. A snapshotted DB is read-only and any write operation is not effective.	LOG_STD_ACTION
<del>TDCRADMLOCKED</del>	4-Warning	iosxe-p-db	Process held[chars] lock on DB [%s] for [%llu] ns	Application has held the read/write lock for fairly long time. If this error is thrown	-
<del>TDBSOPERATIONO</del>	6-Information	iosxe-p-db	Cancelled[chars] operation and is intended - DB:[chars]	-	-
<del>TDBSRDMONCE</del>	6-Information	iosxe-p-db	Subscription dampening inactive for DB[chars] on table[chars]. All on-change updates for the table will be sent. Consider re-adjusting the dampening period	On-change Subscription enabled with dampening will be temporarily in-active due to load on system or due to incorrect dampening interval configured.	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>TDM-I-TDM_INITFAIL</del>	6-Information	iosxe-p-db	Dampening subscription re-activated for DB[chars] on table[chars]	On-change Subscription re-activated with dampening resumed after it got paused	LOG_STD_ACTION
<del>TDM-SYSTRM-DCLKERR</del>	4-Warning	\nTDM frame clock source transitioned from\n\n Priority [dec] [chars] [chars] to Priority [dec] [chars] [chars]\n	This warning message indicates a change in the clock source.	-	"No action required."
<del>TDM-SYSTRM-DCLKERR</del>	4-Warning	\nTDM frame clock [chars] lost lock - clock source failed.\n	The clock source has failed.	-	"If alternate source is available it will be used."
<del>TDM-SYSTRM-DCLKERR</del>	4-Warning	\nTDM frame clock state change state: [chars] \n	This debug message indicates a clock state change	-	"No action required."
<del>TDM-SYSTRM-DCLKERR</del>	4-Warning	\nTDM frame clock state error state: [chars] event: [chars]\n	This warning message indicates a invalid clock event	-	"No action required."
TDM-I-TDM_INITFAIL	1-Alert	Slot [dec] TDM init failure:\nstream [dec] channel [dec] channel register 0x[hec] control register 0x[hec].	A TDM port failed to be initialized. \n\n The error message specifies which port. This is possibly due to\n\n a hardware failure.	-	LOG_STD_ACTION
TDM-M-TDM_MB_INITFAIL	1-Alert	Motherboard TDM init failure:\nstream [dec] channel [dec] channel register 0x[hec] control register 0x[hec].	A TDM port on the system motherboard failed to be initialized.\n\n The error message specifies which port. This is possibly due to\n\n a hardware failure.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TDM3-TDM_BADUNIT	3-Error	Slot [dec] bad board ID 0x[hec] detected.	The specified board returned an ID that was not recognized by the operating system. This could be due to a hardware failure reporting an incorrect ID or because this software predates the hardware.	-	LOG_STD_ACTION
TDM4-TDM_BADCONNECT	4-Warning	Bad connection requested: slot [dec] stream [dec] channel [dec] to slot [dec] stream [dec] channel [dec].	The TDM cross-connect that was requested was not possible. This is probably because one of the devices either does not exist or is not properly configured for TDM.	-	"Check the command for errors and the ports for correct configuration before trying again. Note that the "type" option of the "tdm-group" command only applies if the "mode cas" command is enabled. If configuring cross-connect pass-through from UIO serial port 0 or 1 to a controller the "encapsulation clear-channel" command must be configured on the serial port. "
TEMPLATE3-TEMPLATE_FAIL	3-Error	[chars] template [chars] binding to [chars] failed due to [chars] CLI failure.	Template binding failed due to failure status returned by binding.	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>TEMPLATE</del> TEMPLATE_EXISTS	4-Warning	Applying non-existent template [chars] will result in its creation programatically. This functionality will soon be deprecated. Please make sure template is created on device before it is applied by session.	Applying an undefined template to an interface results in the creation and application of a new empty template of given name	-	-
<del>TENANT</del> TENANT_CORRUPTED	3-Error	Tenant Manager encountered corrupted state: [chars]	An internal Tenant Manager function has encountered some state that is not recoverable from.	vrfinfra	LOG_STD_ACTION
<del>TENANT</del> TENANT_CORRUPTED	3-Error	Tenant Manager encountered corrupted state: [chars]	An internal Tenant Manager function has encountered some state that is not recoverable from.	vrfinfra	LOG_STD_ACTION
<del>TENANT</del> TENANT_EVENT_QUEUE	3-Error	Tenant Manager event queue error: [chars]	The Tenant Manager event thread has encountered an error processing one of the events.	vrfinfra	LOG_STD_ACTION
<del>TENANT</del> TENANT_EVENT_QUEUE	3-Error	Tenant Manager event queue error: [chars]	The Tenant Manager event thread has encountered an error processing one of the events.	vrfinfra	LOG_STD_ACTION
<del>TENANT</del> TENANT_LOCK	3-Error	Tenant Manager lock/unlock error: [chars]	A Tenant Manager event locking function has encountered an invalid state on a data structure in the Tenant Manager.	vrfinfra	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>TENMGRNMRK</del>	3-Error	Tenant Manager lock/unlock error: [chars]	A Tenant Manager event locking function has encountered an invalid state on a data structure in the Tenant Manager.	vrfinfra	LOG_STD_ACTION
<del>TENMGRNMRK</del>	3-Error	Tenant Manager subsystem initialization failed: [chars]	A Tenant Manager subsystem could not be initialized	vrfinfra	LOG_STD_ACTION
<del>TENMGRNMRK</del>	3-Error	Tenant Manager subsystem initialization failed: [chars]	A Tenant Manager subsystem could not be initialized	vrfinfra	LOG_STD_ACTION
<del>TENMGRNMRK</del>	3-Error	Tenant Manager subsystem teardown failed: [chars]	A Tenant Manager subsystem could not be un-initialized	vrfinfra	LOG_STD_ACTION
<del>TENMGRNMRK</del>	3-Error	Tenant Manager subsystem teardown failed: [chars]	A Tenant Manager subsystem could not be un-initialized	vrfinfra	LOG_STD_ACTION
<del>TENMGRNMRK</del>	3-Error	VRF update notification in Tenant Manager failed: [chars]	The Tenant Manager VPN map table could not be updated for a VRF create or delete event	vrfinfra	LOG_STD_ACTION
<del>TENMGRNMRK</del>	3-Error	VRF update notification in Tenant Manager failed: [chars]	The Tenant Manager VPN map table could not be updated for a VRF create or delete event	vrfinfra	LOG_STD_ACTION
<del>TENMGRNMRK</del>	3-Error	Tenant Manager internal walk failed: [chars]	An internal walking function in the Tenant Manager has encountered some invalid state.	vrfinfra	LOG_STD_ACTION
<del>TENMGRNMRK</del>	3-Error	Tenant Manager internal walk failed: [chars]	An internal walking function in the Tenant Manager has encountered some invalid state.	vrfinfra	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
TENSRFSM3INVEVENT	3-Error	Invalid event_id 0x[hex]	state machine invalid event	mpls-te	LOG_STD_ACTION
TENSRFSM3INVEVENT	3-Error	Invalid event_id 0x[hex]	state machine invalid event	mpls-te	LOG_STD_ACTION
TENSRFSM3INVEVENT	3-Error	Invalid event_id 0x[hex]	state machine invalid event	mpls-te	LOG_STD_ACTION
TENSRFSM3INVSTATE	3-Error	Invalid current state 0x[hex]	state machine invalid state	mpls-te	LOG_STD_ACTION
TENSRFSM3INVSTATE	3-Error	Invalid current state 0x[hex]	state machine invalid state	mpls-te	LOG_STD_ACTION
TENSRFSM3INVSTATE	3-Error	Invalid current state 0x[hex]	state machine invalid state	mpls-te	LOG_STD_ACTION
TENSRFSM3INVTRANS	3-Error	obj: [0x[node]X] event_id: [0x[node]X] er_p: [0x[node]X] arg: [0x[node]X] session state [chars] -> [chars]	state machine invalid transition	mpls-te	LOG_STD_ACTION
TENSRFSM3INVTRANS	3-Error	obj: [0x[node]X] event_id: [0x[node]X] er_p: [0x[node]X] arg: [0x[node]X] session state [chars] -> [chars]	state machine invalid transition	mpls-te	LOG_STD_ACTION
TENSRFSM3INVTRANS	3-Error	obj: [0x[node]X] event_id: [0x[node]X] er_p: [0x[node]X] arg: [0x[node]X] session state [chars] -> [chars]	state machine invalid transition	mpls-te	LOG_STD_ACTION
TENSRFSM3NOEVENT	3-Error	Unable to apply event 0x[node]X	state machine transition failure	mpls-te	LOG_STD_ACTION
TENSRFSM3NOEVENT	3-Error	Unable to apply event 0x[node]X	state machine transition failure	mpls-te	LOG_STD_ACTION
TENSRFSM3NOEVENT	3-Error	Unable to apply event 0x[node]X	state machine transition failure	mpls-te	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
TENSRFSM3NOPROCD	3-Error	Unable to launch TE NSR FSM Process.	state machine transition process launch failure	mpls-te	LOG_STD_ACTION
TENSRFSM3NOPROCD	3-Error	Unable to launch TE NSR FSM Process.	state machine transition process launch failure	mpls-te	LOG_STD_ACTION
TENSRFSM3NOPROCD	3-Error	Unable to launch TE NSR FSM Process.	state machine transition process launch failure	mpls-te	LOG_STD_ACTION
TENSRFSM3NULLMACH	3-Error	Invalid machine pointer 0x[hex]	state machine invalid pointer	mpls-te	LOG_STD_ACTION
TENSRFSM3NULLMACH	3-Error	Invalid machine pointer 0x[hex]	state machine invalid pointer	mpls-te	LOG_STD_ACTION
TENSRFSM3NULLMACH	3-Error	Invalid machine pointer 0x[hex]	state machine invalid pointer	mpls-te	LOG_STD_ACTION
TFTP3G3S3AE3RE3E3AL	3-Error	-	Get/create ALG state failed. TFTP ALG will not be able to process packets.	cpp-ucode	LOG_STD_ACTION
TFTP7CLEAN_DISABLED	7-Debug	ARP gleaning from TFTP has been disabled.	The ARP gleaning from TFTP has been disabled.	-	"If you want ARP gleaning from TFTP do ip arp gleaning tftp."
TFTP7CLEAN_DISABLED	7-Debug	ARP gleaning from TFTP has been disabled.	The ARP gleaning from TFTP has been disabled.	-	"If you want ARP gleaning from TFTP do ip arp gleaning tftp."
TWAN0WRES0TH0LD0ER	2-Critical	iosxe-binos-utils	Current percentage of joined wireless clients (%u) returned below the configured threshold (%u)	The number of clients currently joined to the wireless controller returned below the configured threshold for the device	If this message occurs
TWAN0WRES0TH0LD0I	2-Critical	iosxe-binos-utils	Current percentage of joined wireless clients (%u) exceeded the configured threshold (%u)	The number of clients currently joined to the wireless controller has exceeded the configured threshold for the device	If this message occurs



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>HRM/ASV/HRM/AC/RE/FRS/D</del>	1-Alert	iosxe-chassismgr	Hotspot temperature has exceeded GREEN threshold\n	The switch is too cold.	Check the switch's environment is a safe operating temperature. If problem persists
<del>HRM/ASV/HRM/AC/RE/FRS/D</del>	1-Alert	iosxe-chassismgr	Hotspot temperature has exceeded RED threshold. Switch will shutdown soon.\n	The hotspot temperature is critically overheated. The switch will soon shutdown to prevent permanent damage.	Check the switch's environment is a safe operating temperature. If problem persists
<del>HRM/ASV/HRM/AC/RE/FRS/D</del>	2-Critical	iosxe-chassismgr	Hotspot temperature has exceeded YELLOW threshold\n	The hotspot temperature is too high. Improve cooling immediately.	Check the switch's environment is a safe operating temperature. If problem persists
<del>HRM/AF/HRM/AC/RE/FRS/D</del>	1-Alert	polaris-platform_mgr	Hotspot temperature has exceeded GREEN threshold\n	The switch is too cold.	Check the switch's environment is a safe operating temperature. If problem persists
<del>HRM/AF/HRM/AC/RE/FRS/D</del>	1-Alert	polaris-platform_mgr	Hotspot temperature has exceeded GREEN threshold\n	The switch is too cold.	Check the switch's environment is a safe operating temperature. If problem persists
<del>HRM/AF/HRM/AC/RE/FRS/D</del>	1-Alert	polaris-platform_mgr	Hotspot temperature has exceeded RED threshold. Switch will shutdown soon.\n	The hotspot temperature is critically overheated. The switch will soon shutdown to prevent permanent damage.	Check the switch's environment is a safe operating temperature. If problem persists
<del>HRM/AF/HRM/AC/RE/FRS/D</del>	1-Alert	polaris-platform_mgr	Hotspot temperature has exceeded RED threshold. Switch will shutdown soon.\n	The hotspot temperature is critically overheated. The switch will soon shutdown to prevent permanent damage.	Check the switch's environment is a safe operating temperature. If problem persists
<del>HRM/AF/HRM/AC/RE/FRS/D</del>	2-Critical	polaris-platform_mgr	Hotspot temperature has exceeded YELLOW threshold\n	The hotspot temperature is too high. Improve cooling immediately.	Check the switch's environment is a safe operating temperature. If problem persists

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>TRM_HRM_A_HOV_HRMOD</del>	2-Critical	polaris-platform_mgr	Hotspot temperature has exceeded YELLOW threshold\n	The hotspot temperature is too high. Improve cooling immediately.	Check the switch's environment is a safe operating temperature. If problem persists
THREAD-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
THREAD-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
THREADEXIT-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
THREADEXIT-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>TRM_HRM_A_HOV_HRMOD</del>	3-Error	[dec]	IPC handler initialization failed.	cpp-ucode	LOG_STD_ACTION
<del>TRM_HRM_A_HOV_HRMOD</del>	3-Error	-	Extending memory failed.	cpp-ucode	LOG_STD_ACTION
<del>TRM_HRM_A_HOV_HRMOD</del>	4-Warning	[dec]	Invalid IPC message	cpp-ucode	LOG_STD_ACTION
<del>TRM_HRM_A_HOV_HRMOD</del>	4-Warning	[dec]:[dec] len [dec] flags 0x[hec] source [dec]	Invalid IPC message length.	cpp-ucode	LOG_STD_ACTION
<del>TRM_HRM_A_HOV_HRMOD</del>	3-Error	-	Destroy chunk failed.	cpp-ucode	LOG_STD_ACTION
<del>TRM_HRM_A_HOV_HRMOD</del>	3-Error	-	Initialization of VTCP failed.	cpp-ucode	LOG_STD_ACTION
<del>TRM_HRM_A_HOV_HRMOD</del>	4-Warning	Event Rate Monitoring: Average threat identified. Zone [[chars]] event type [[chars]] average [[dec]] configured threshold [[dec]]	Event Rate Monitoring: Average threat identified	cpp-ucode	LOG_STD_ACTION
<del>TRM_HRM_A_HOV_HRMOD</del>	4-Warning	Event Rate Monitoring: Burst threat identified. Zone [[chars]] event type [[chars]] configured threshold [[dec]]	Event Rate Monitoring: Burst threat identified	cpp-ucode	LOG_STD_ACTION
TID_HA-3-ISSU_ERR	3-Error	[chars]: [chars] [chars]	There was an error during an ISSU versioning operation	mpls-vpn	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TID_HA-3-ISSU_ERR	3-Error	[chars]: [chars] [chars]	There was an error during an ISSU versioning operation	mpls-vpn	LOG_STD_ACTION
TID_HA-3-ISSUERR	3-Error	[chars] [chars]	There was an error during an ISSU versioning operation	mpls-vpn	LOG_STD_ACTION
TID_HA-3-ISSUERR	3-Error	[chars] [chars]	There was an error during an ISSU versioning operation	mpls-vpn	LOG_STD_ACTION
TID_HA-3-ISSUERRCF	3-Error	[chars] checkpoint code [dec]	There was an error during an ISSU versioning operation due to an error in the checkpoint facility	mpls-vpn	LOG_STD_ACTION
TID_HA-3-ISSUERRCF	3-Error	[chars] checkpoint code [dec]	There was an error during an ISSU versioning operation due to an error in the checkpoint facility	mpls-vpn	LOG_STD_ACTION
TID_HA-3-ISSUERRSESS	3-Error	Invalid session type [dec]	Invalid session type	mpls-vpn	LOG_STD_ACTION
TID_HA-3-ISSUERRSESS	3-Error	Invalid session type [dec]	Invalid session type	mpls-vpn	LOG_STD_ACTION
TID_HA-3-RXFAIL_AUTORD	3-Error	[chars] type [dec] version [dec] flags [hec] action [dec] vrfid 0x[hec] rd [chars]	Error while receiving an auto RD assign message	mpls-vpn	LOG_STD_ACTION
TID_HA-3-RXFAIL_AUTORD	3-Error	[chars] type [dec] version [dec] flags [hec] action [dec] vrfid 0x[hec] rd [chars]	Error while receiving an auto RD assign message	mpls-vpn	LOG_STD_ACTION
TID_HA-3-RXFAIL_TOPO	3-Error	[chars] type [dec] version [dec] flags [hec] action [dec] topoid 0x[hec] vrfid 0x[hec] afi [dec] name '[chars]'	Error while receiving a topo add message	mpls-vpn	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TID_HA-3-RXFAIL_TOPO	3-Error	[chars] type [dec] version [dec] flags [hec] action [dec] topoid 0x[hec] vrfid 0x[hec] afi [dec] name '[chars]'	Error while receiving a topo add message	mpls-vpn	LOG_STD_ACTION
TID_HA-3-RXFAIL_TYPE	3-Error	[chars] @[hec] type [dec] len [dec]	Unrecognized message type	mpls-vpn	LOG_STD_ACTION
TID_HA-3-RXFAIL_TYPE	3-Error	[chars] @[hec] type [dec] len [dec]	Unrecognized message type	mpls-vpn	LOG_STD_ACTION
TID_HA-3-RXFAIL1	3-Error	[chars]	Error while receiving a tableid synchronization message	mpls-vpn	LOG_STD_ACTION
TID_HA-3-RXFAIL1	3-Error	[chars]	Error while receiving a tableid synchronization message	mpls-vpn	LOG_STD_ACTION
TID_HA-3-RXFAIL2	3-Error	[chars] type [dec] version [dec] flags [hec]	Error while receiving a tableid synchronization message	mpls-vpn	LOG_STD_ACTION
TID_HA-3-RXFAIL2	3-Error	[chars] type [dec] version [dec] flags [hec]	Error while receiving a tableid synchronization message	mpls-vpn	LOG_STD_ACTION
TID_HA-3-RXFAIL3	3-Error	[chars] type [dec] version [dec] flags [hec] application [dec] action [dec] tableid [dec] name '[chars]'	Error while receiving a tableid synchronization message	mpls-vpn	LOG_STD_ACTION
TID_HA-3-RXFAIL3	3-Error	[chars] type [dec] version [dec] flags [hec] application [dec] action [dec] tableid [dec] name '[chars]'	Error while receiving a tableid synchronization message	mpls-vpn	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
TID_HA-3-SYNCFAIL	3-Error	[chars]	Internal tableid information may have not been synced to the standby unit correctly	mpls-vpn	"Reload the standby unit. If the error condition persists copy the " "error message exactly as it appears and contact your technical " "support representative"
TID_HA-3-SYNCFAIL	3-Error	[chars]	Internal tableid information may have not been synced to the standby unit correctly	mpls-vpn	"Reload the standby unit. If the error condition persists copy the " "error message exactly as it appears and contact your technical " "support representative"
TID_HA-3-SYNCFAILCF	3-Error	[chars] checkpoint code [dec]	Internal tableid information may have not been synced to the standby unit correctly due to an error in the checkpoint facility	mpls-vpn	"Reload the standby unit. If the error condition persists copy the " "error message exactly as it appears and contact your technical support " "representative"
TID_HA-3-SYNCFAILCF	3-Error	[chars] checkpoint code [dec]	Internal tableid information may have not been synced to the standby unit correctly due to an error in the checkpoint facility	mpls-vpn	"Reload the standby unit. If the error condition persists copy the " "error message exactly as it appears and contact your technical support " "representative"
TID_HA-3-TXFAIL	3-Error	[chars] name '[chars]' tableid [dec] action [dec]	Failed to send internal tableid information	mpls-vpn	LOG_STD_ACTION
TID_HA-3-TXFAIL	3-Error	[chars] name '[chars]' tableid [dec] action [dec]	Failed to send internal tableid information	mpls-vpn	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TID_HA-3-TXFAILCF	3-Error	[chars] name '[chars]' tableid [dec] action [dec] checkpoint code [dec]	Failed to send internal tableid information due to an error in the checkpoint facility	mpls-vpn	LOG_STD_ACTION
TID_HA-3-TXFAILCF	3-Error	[chars] name '[chars]' tableid [dec] action [dec] checkpoint code [dec]	Failed to send internal tableid information due to an error in the checkpoint facility	mpls-vpn	LOG_STD_ACTION
TID_HA-7-ISSU_INFO	7-Debug	[chars]: [chars] [chars]	ISSU versioning operation	mpls-vpn	LOG_STD_ACTION
TID_HA-7-ISSU_INFO	7-Debug	[chars]: [chars] [chars]	ISSU versioning operation	mpls-vpn	LOG_STD_ACTION
<del>TIME-2-HB_START_FAILED</del>	2-Critical	timer services failed to start	A request exceeded the feature invocation call stack	cpp-ucode	LOG_STD_ACTION
<del>TIME-2-MSAMPBADCLOCK</del>	2-Critical	[node]u	Unsupported PPE core clock frequency.	cpp-ucode	LOG_STD_ACTION
TIME-3-HB_SEQ_FAIL	3-Error	expected seq_num 0x[hec] rcvd seq_num 0x[hec]	The timer services had exceeded the maximum number of timer heartbeat sequence number errors.	cpp-ucode	LOG_STD_ACTION
TIMER-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
TIMER-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
TLSCLIENT3START_FAIL	3-Error	Failed to send start BINOS TLS client message to host-if.	This message indicates that we failed to send start BINOS TLS client message to host-if.	-	"Retry no shut on the TLS config block."
TLSCLIENT3START_FAIL	3-Error	Failed to send start BINOS TLS client message to host-if.	This message indicates that we failed to send start BINOS TLS client message to host-if.	-	"Retry no shut on the TLS config block."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
TLSCIENT-3-STOP_FAIL	3-Error	Failed to send shut BINOS TLS client message to host-if.	This message indicates that we failed to send shut BINOS TLS client message to host-if.	-	"Retry shut on the TLS config block."
TLSCIENT-3-STOP_FAIL	3-Error	Failed to send shut BINOS TLS client message to host-if.	This message indicates that we failed to send shut BINOS TLS client message to host-if.	-	"Retry shut on the TLS config block."
<del>TLSCIENT-5-REKEY_CONFIGURE</del>	5-Notice	Rekey failed for Session [[node] to TLSSGW [[chars]]	This message indicates that the Rekey for the tunnel to the tlsgw failed.	-	"Either the server is down or the connectivity to the server" " is broken"
<del>TLSCIENT-5-REKEY_CONFIGURE</del>	5-Notice	Rekey failed for Session [[node] to TLSSGW [[chars]]	This message indicates that the Rekey for the tunnel to the tlsgw failed.	-	"Either the server is down or the connectivity to the server" " is broken"
TLSCIENT-5-TLSCLIENT_ENC	5-Notice	TLS Client is BINOS based	This message indicates that TLS client is BINOS based	-	LOG_SID_NO_ACTION
TLSCIENT-5-TLSCLIENT_ENC	5-Notice	TLS Client is BINOS based	This message indicates that TLS client is BINOS based	-	LOG_SID_NO_ACTION
TLSCIENT-5-TLSCLIENT_IOS	5-Notice	TLS Client is IOS based	This message indicates that TLS client is IOS based	-	LOG_SID_NO_ACTION
TLSCIENT-5-TLSCLIENT_IOS	5-Notice	TLS Client is IOS based	This message indicates that TLS client is IOS based	-	LOG_SID_NO_ACTION
TLSCIENT-5-SUPDOWN	5-Notice	Session [[node] to TLSSGW: [[chars]] is [chars]	TLS Tunnel service state changed.	-	LOG_SID_NO_ACTION
TLSCIENT-5-SUPDOWN	5-Notice	Session [[node] to TLSSGW: [[chars]] is [chars]	TLS Tunnel service state changed.	-	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
TLV-3-GET	3-Error	Reading data type [dec]	An expected field in the TLV buffer was either missing or malformed	-	LOG_SID_RECUR_ACTION
TLV-3-UPDATE	3-Error	Unable to write type [dec]	An attempt to update a TLV entry failed.	-	LOG_SID_RECUR_ACTION
TMQ-3-NOTFOUND	3-Error	TMQ Attempt to delete entry not in queue	An attempt was made to delete an entry not in the queue.	-	"Advisory message only. No action required."
TN-2-BADCONN	2-Critical	Bad conn pointer [hex] closing all connections on terminal line [dec]	An internal software error occurred.	-	"If any message recurs call your technical support representative\n"for assistance."
TN-2-BADLOGIN	2-Critical	Bad login string pointer [hex]	An internal software error occurred.	-	"If any message recurs call your technical support representative\n"for assistance."
TN-3-BADSTATE	3-Error	Illegal state [dec]	An internal software error occurred.	-	"If any message recurs call your technical support representative " "for assistance."
TN-3-READLINE	3-Error	Unknown return code [dec] from telnet_readline	An internal software error occurred.	-	"If any message recurs call your technical support representative " "for assistance."
TN3270-2-INP_OVF1	2-Critical	Input Buffer overflow	-	-	"Copy this error message exactly as it appears and contact your\n\ technical support representative for assistance."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>TOPN_CNTRS_MEM_NVAL</del>	4-Warning	Memory was not available for handling the TopN request	The system is unable to handle the TopN request because of lack of memory.	-	"Reduce other system activity to ease memory demands. If conditions warrant upgrade to a larger memory configuration."
<del>TOPN_CNTRS_AVAILABLE</del>	5-Notice	TopN report [dec] is available	The specified report is ready and can be viewed by the users.	-	LOG_SID_NO_ACTION
<del>TOPN_CNTRS_DELETED</del>	5-Notice	TopN report [dec] deleted by [chars]	The specified report has been deleted by the specified user.	-	LOG_SID_NO_ACTION
<del>TOPN_CNTRS_KILLED</del>	5-Notice	TopN report [dec] task killed by [chars] [chars]	The system was in the process of generating the specified report but the specified user terminated the report before its completion.	-	LOG_SID_NO_ACTION
<del>TOPN_CNTRS_NO_CRIS</del>	5-Notice	No interfaces in the system match the interface type for the generation of the topN report [dec]	There were no interfaces in the system which matched the interface type selected in the specified report.	-	LOG_SID_NO_ACTION
<del>TOPN_CNTRS_STARTED</del>	5-Notice	TopN collection for report [dec] started by [chars]	The TopN report that was requested by the specified user starts with the specified report number.	-	LOG_SID_NO_ACTION
TPLUS-3-FORKFAIL	3-Error	Failed to fork process for [chars].	Quite likely we ran out of memory. Other explanations are possible.	tplus	"If this message recurs call your technical support representative for assistance."
TPLUS-3-FORKFAIL	3-Error	Failed to fork process for [chars].	Quite likely we ran out of memory. Other explanations are possible.	tplus	"If this message recurs call your technical support representative for assistance."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
TPLUS3UNKNOWNTYPE	3-Error	TPLUS: 0x[node]Unknown Request type [node]	Unknown request type in client request	tplus	LOG_STD_ACTION
TPLUS3UNKNOWNTYPE	3-Error	TPLUS: 0x[node]Unknown Request type [node]	Unknown request type in client request	tplus	LOG_STD_ACTION
TR-2-NOMEMORY	2-Critical	Unit [dec] no memory for [chars]	The requested operation could not be accomplished because of a low\n\n memory condition.	-	"Reduce other system activity to ease memory demands. If conditions\n\n warrant upgrade to a larger memory configuration."
TR-2-PANIC	2-Critical	Unit [dec] panic [node]8x [node]8x [node]8x	The Token Ring monitor firmware detected a fatal error that indicates\n\n an impending interface failure.	-	LOG_SID_ACTION_CRIT
TR-2-PANICINF	2-Critical	Unit [dec] PI [node]8x [node]8x [node]8x [node]8x [node]8x [node]8x	This message is similar to the [node]-3-PANIC error message but\n\n indicates a nonfatal error. This message appears in very unusual\n\n situations that should not arise in normal operation.	-	LOG_SIDSH_TECH_ACTION
TR-2-PANICTYPE	2-Critical	Unit [dec] [chars] error	This message is similar to the [node]-3-PANIC error message but\n\n indicates a nonfatal error. This message appears in very unusual\n\n situations that should not arise in normal operation.	-	LOG_SIDSH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TR-3-ADPCHK	3-Error	Interface [chars] adapter check error non-fatal[node]x [node]x [node]x [node]x	The Token Ring monitor firmware detected a non-fatal error on the\n\ interface card.	-	"Issue a clear interface command. If this message recurs call your\n\ technical support representative for assistance."
TR-3-ADPCHKFATAL	3-Error	Interface [chars] adapter check error fatal [node]x [node]x [node]x [node]x	The Token Ring monitor firmware detected a fatal error on the\n\ interface card.	-	"Issue a clear interface command. If this message recurs call your\n\ technical support representative for assistance. You may need to \n\ replace the interface card "
TR-3-BADBRDGPAPMS	3-Error	Unit [dec] bad bridge parameters: bridge_num=[dec] max_rc=[dec]nthising=[dec] targetring=[dec]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
TR-3-BADBUFFSIZE	3-Error	Unit [dec] bad buffer size = [dec]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
TR-3-BADFIRM	3-Error	Unit [dec] Tokenring firmware download failed\n got [hex] expected [hex] at address 0x[node]x.[node]x	An internal software error occurred.	-	LOG_SID_SH_TECH_ACTION
TR-3-BADFIRMTYPE	3-Error	Unit [dec] bad firmware type code during [chars]. type=[hex] fw=[hex]	An internal software error occurred.	-	LOG_SID_SH_TECH_ACTION
TR-3-BADFUNC	3-Error	Unit [dec] bad functional address=0x[node]x ring mode=0x[node]x	An internal software error occurred.	-	LOG_SID_RECUR_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
TR-3-BADMUL	3-Error	[chars]: Can't set address to a multicast [enet]	An attempt was made to set the Token Ring interface MAC address to a\n\ reserved multicast address.	-	"Check your configuration. Make sure that your XNS and/or Novell Token\n\ Ring addresses have not inadvertently been set to reserved multicast\n\ addresses."
TR-3-BADRNGNUM	3-Error	Unit [dec] ring number [dec] doesn't match established number [dec].	The number you have configured for the local ring does not match the\n\ value currently in use on the ring.	-	"Check the configuration to make sure you used the correct ring number.\n\ If it is correct confirm the configuration of all other bridges on the\n\ ring to make sure they are using the same ring number."
TR-3-BADSTART	3-Error	Unit [dec] Start completion and wrong idb state - state= [dec]	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
TR-3-BADUNIT	3-Error	Bad unit number [dec]	This error message pertains only to the IGS. When displayed it\n\ indicates that the system cannot find the chipset registers where it\n\ expects them to be. This is most likely a hardware error.	-	"If this message recurs call your technical support representative for\n\ assistance. It will be necessary to determine the hardware unit\n\ configuration."
TR-3-DIAGFAIL	3-Error	Interface [chars] failed init diags 0x[node]x [chars]	The microcode attempted to run its diagnostics on the chip and\n\ failed.	-	"Issue a clear interface command." LOG_SID_RECUR_ACTION
TR-3-INITFAIL	3-Error	Unit [dec] init failed. result code=[hex] error code=[hex]	The Token Ring hardware failed to initialize properly.	-	LOG_SID_SH_TCH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TR-3-INTFAIL	3-Error	Unit [dec] interface failure: [hex] [hex] [hex] idb state [dec]	The Token Ring Monitor firmware detected a fatal error due either to an internal software problem or to a hardware failure.	-	LOG_SID_SH_TECH_ACTION
TR-3-MODEFAIL	3-Error	Unit [dec] change mode failed. result code=[hex] error code=[hex]	An internal hardware or software error occurred.	-	LOG_SID_SH_TECH_ACTION
TR-3-NOFIRM	3-Error	Unit [dec] no TMS380 firmware present. eagle=[hex] magic=[hex]	An internal hardware or software error occurred.	-	LOG_SID_SH_TECH_ACTION
TR-3-OPENFAIL	3-Error	Unit [dec] open failed: [chars] [chars]	The Token Ring interface was unable to insert itself into the ring. This is an indication of a busy or broken ring. The first character string in this error message indicates the stage of initialization at which the error occurred and the second describes the error.	-	"Try to open the interface again. This generally can be accomplished by issuing the clear interface tokenring command. If the error message recurs call your Cisco technical support representative for assistance."
TR-3-OPENFAIL2	3-Error	Unit [dec] open failed: check the lobe cable DB-9 connection.	The Token Ring interface was unable to insert itself into the ring and the error code returned indicates a wiring problem.	-	"Check the cable connecting the router to the Token Ring MAU and try to open the interface again. This generally can be accomplished by issuing the clear interface tokenring command." LOG_SID_RECUR_ACTION
TR-3-RESETFAIL	3-Error	Unit [dec] reset failed error code [node]8x.	An internal software error occurred.	-	LOG_SID_RECUR_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
TR-3-SETBRIDGEFAIL	3-Error	Unit [dec] set bridge failed code [hex].	-	-	LOG_SID_SH_TCH_ACTION
TR-3-SETFUNFAIL	3-Error	Unit [dec] set functional address failed code [hex].	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
TR-3-SETGRPFail	3-Error	Unit [dec] set group address failed code [hex].	An internal software error occurred.	-	LOG_SID_RECUR_ACTION
TR-3-WIREFAULT	3-Error	Unit [dec] wire fault: check the lobe cable MAU connection.	The Token Ring hardware is reporting a wire fault condition.	-	"Check the cable connecting the router to the Token Ring media\n attachment unit MAU."
TR-6-STATE	6-Information	[chars]: Ring Status: [chars]	This message is displayed when the Token Ring's status changed as\n determined by the chipset. This information also is used to\n automatically determine whether the interface is still usable to\n propagate network traffic.	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TR-6-STATRING	6-Information	TR[dec]: Ring Status: [chars] [chars]	This message is displayed when the Token Ring's status changed as\n\ determined by the chipset. This information also is used to\n\ automatically determine whether the interface is still usable to\n\ propagate network traffic. The meaning of each status code is shown in\n\ the \Token Ring Status Codes\ Table.\n\n\ Code Explanation Fatal\n\ 0x8000 Signal loss Yes\n\ 0x4000 Hard error Yes\n\ 0x2000 Soft error No\n\ 0x1000 Transmit beacon Yes\n\ 0x0800 Lobe wire fault Yes\n\ 0x0400 Auto removal error Yes\n\ 0x0100 Receive request removed Yes\n\ 0x0080 Counter overflow No\n\ 0x0040 Single station No\n\ 0x0020 Ring recovery No\n\	-	"Check the Token Ring for the indicated condition."
<del>RECORDING LIBRARY</del>	7-Debug	The error: [node]in function [chars] in the file [chars]:[node]in process: [chars] was not recorded by the traceback error recording library under user: [chars].	The Library can only store so many error tracebacks and this number had been reached so all future attempts to store error tracebacks will print syslogs.	os	"Please clear the tracebacks for the user above. Is it "recommended that the detailed show command is collected before "clearing the data."
TRACK-3-ERROR	3-Error	Internal error [chars]	An internal software error occurred.	fhrp:track	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
TRACK-3-ERROR	3-Error	Internal error [chars]	An internal software error occurred.	fhrp:track	LOG_STD_ACTION
TRACK-4-WARN	4-Warning	Internal warning [chars]	An internal software warning occurred.	fhrp:track	LOG_STD_ACTION
TRACK-4-WARN	4-Warning	Internal warning [chars]	An internal software warning occurred.	fhrp:track	LOG_STD_ACTION
TRACK-6-INFO	6-Information	Internal info [chars]	An internal software information message occurred.	fhrp:track	LOG_STD_ACTION
TRACK-6-INFO	6-Information	Internal info [chars]	An internal software information message occurred.	fhrp:track	LOG_STD_ACTION
TRACK-6-STATE	6-Information	[chars]	The Tracked object has changed state.	fhrp:track	LOG_SID_NO_ACTION
TRACK-6-STATE	6-Information	[chars]	The Tracked object has changed state.	fhrp:track	LOG_SID_NO_ACTION
<del>TRANGE2NOMEMORY</del>	2-Critical	Alloc fail for time-range config buffer. Disabling distributed mode on lc	Unable to malloc a buffer to send time-range configuration down to linecards.	-	"Enter a show chunks command and report the output along with this error message to your technical support representative."
<del>TRANGE2WRONGREQUEST</del>	2-Critical	Invalid request to allocate chunk of size [dec]	We only allow time-range chunks of max size <u>TRANGE_LARGE_CHUNK_SZ</u>	-	" "
<del>TRANGE2WRONGSIZE</del>	2-Critical	Incorrect length trange ipc xdr of len=[dec] received	The RP sent a time-range config message of the wrong size	-	"Report this error message to your tech support representative."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TRANSEIVER_ATTACH_FAILURE	3-Error	Detected for transceiver module in [chars] module disabled	A software device driver attach failed. This condition could be caused by software firmware or hardware problem but a software or firmware problem is more likely. As a result of the error the module is disabled.	spa-infra	"Try reseating the module. " "Hardware replacement should not occur first occurrence. " "Before requesting hardware replacement review troubleshooting logs " "with a Cisco technical support representative. "
TRANSEIVER_ATTACH_FAILURE	3-Error	Detected for transceiver module in [chars] module disabled	A software device driver attach failed. This condition could be caused by software firmware or hardware problem but a software or firmware problem is more likely. As a result of the error the module is disabled.	spa-infra	"Try reseating the module. " "Hardware replacement should not occur first occurrence. " "Before requesting hardware replacement review troubleshooting logs " "with a Cisco technical support representative. "
TRANSEIVER_ATTACH_FAILURE	3-Error	Detected for transceiver module in [chars] module disabled	A software device driver attach failed. This condition could be caused by software firmware or hardware problem but a software or firmware problem is more likely. As a result of the error the module is disabled.	spa-infra	"Try reseating the module. " "Hardware replacement should not occur first occurrence. " "Before requesting hardware replacement review troubleshooting logs " "with a Cisco technical support representative. "

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>TRANSMIBATTCH</del> <u>ALRE</u>	3-Error	Detected for transceiver module in [chars] module disabled	A software device driver attach failed. This condition could be caused by software firmware or hardware problem but a software or firmware problem is more likely. As a result of the error the module is disabled.	spa-infra	"Try reseating the module. " "Hardware replacement should not occur first occurrence. " "Before requesting hardware replacement review troubleshooting logs " "with a Cisco technical support representative. "
<del>TRANSMIBATTCH</del> <u>ALRE</u>	3-Error	Detected for transceiver module in [chars] module disabled	A software device driver attach failed. This condition could be caused by software firmware or hardware problem but a software or firmware problem is more likely. As a result of the error the module is disabled.	spa-infra	"Try reseating the module. " "Hardware replacement should not occur first occurrence. " "Before requesting hardware replacement review troubleshooting logs " "with a Cisco technical support representative. "
<del>TRANSMIBCHKSUM</del> <u>BR</u>	3-Error	Detected in the transceiver module in [chars] module disabled	A checksum error was detected when reading the ID PROM of a transceiver module for the interface specified in the error message. As a result of the error the module is disabled.	spa-infra	"Try reseating the module. If the problem persists LOG_STD_ACTION."
<del>TRANSMIBCHKSUM</del> <u>BR</u>	3-Error	Detected in the transceiver module in [chars] module disabled	A checksum error was detected when reading the ID PROM of a transceiver module for the interface specified in the error message. As a result of the error the module is disabled.	spa-infra	"Try reseating the module. If the problem persists LOG_STD_ACTION."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>TRANSCEIVER</del> TRANSCEIVER	3-Error	Detected in the transceiver module in [chars] module disabled	A checksum error was detected when reading the ID PROM of a transceiver module for the interface specified in the error message. As a result of the error the module is disabled.	spa-infra	"Try reseating the module. If the problem persists LOG_STD_ACTION."
<del>TRANSCEIVER</del> TRANSCEIVER	3-Error	Detected in the transceiver module in [chars] module disabled	A checksum error was detected when reading the ID PROM of a transceiver module for the interface specified in the error message. As a result of the error the module is disabled.	spa-infra	"Try reseating the module. If the problem persists LOG_STD_ACTION."
<del>TRANSCEIVER</del> TRANSCEIVER	3-Error	Detected in the transceiver module in [chars] module disabled	A checksum error was detected when reading the ID PROM of a transceiver module for the interface specified in the error message. As a result of the error the module is disabled.	spa-infra	"Try reseating the module. If the problem persists LOG_STD_ACTION."
<del>TRANSCEIVER</del> TRANSCEIVER	3-Error	Transceiver [chars] table internally inconsistent @ 0x[hec]	One of the transceiver attribute table is not properly updated.	spa-infra	"This is a debug message."
<del>TRANSCEIVER</del> TRANSCEIVER	3-Error	Transceiver [chars] table internally inconsistent @ 0x[hec]	One of the transceiver attribute table is not properly updated.	spa-infra	"This is a debug message."
<del>TRANSCEIVER</del> TRANSCEIVER	3-Error	Transceiver [chars] table internally inconsistent @ 0x[hec]	One of the transceiver attribute table is not properly updated.	spa-infra	"This is a debug message."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>TRANSCEIVER</del> 10MUP	3-Error	[chars] Dual rate transceiver may have come up wrongly with 100M speed	Dual rate transceiver which supports both 1G/100M may have wrongly detected 100M as the operational speed	-	"Please try \"shut\" and \"no shut\" on the interface once"
<del>TRANSCEIVER</del> 10MUP	3-Error	[chars] Dual rate transceiver may have come up wrongly with 100M speed	Dual rate transceiver which supports both 1G/100M may have wrongly detected 100M as the operational speed	-	"Please try \"shut\" and \"no shut\" on the interface once"
<del>TRANSCEIVER</del> 10MUP	3-Error	Transceiver module in [chars] not fully inserted remove the transceiver and re-insert with proper seating lock.	An initialization failure occurred for the transceiver module for the interface specified in the error message. This condition is caused by improper insertion of transceiver As a result of the error the module is disabled.	spa-infra	"Try OIR'ing the module and reseal properly. "
<del>TRANSCEIVER</del> 10MUP	3-Error	Transceiver module in [chars] not fully inserted remove the transceiver and re-insert with proper seating lock.	An initialization failure occurred for the transceiver module for the interface specified in the error message. This condition is caused by improper insertion of transceiver As a result of the error the module is disabled.	spa-infra	"Try OIR'ing the module and reseal properly. "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>TRANSMEMOIRNEN</del>	3-Error	Transceiver module in [chars] not fully inserted remove the transceiver and re-insert with proper seating lock.	An initialization failure occurred for the transceiver module for the interface specified in the error message. This condition is caused by improper insertion of transceiver As a result of the error the module is disabled.	spa-infra	"Try OIR'ing the module and reseal properly. "
TRANSMEMOIRNEN_FAILURE	3-Error	Detected for transceiver module in [chars] module disabled	An initialization failure occurred for the transceiver module for the interface specified in the error message. This condition could be caused by software firmware or hardware problem. As a result of the error the module is disabled.	spa-infra	"Try reseating the module. " "Hardware replacement should not occur first occurrence. " "Before requesting hardware replacement review troubleshooting logs " "with a Cisco technical support representative. "
TRANSMEMOIRNEN_FAILURE	3-Error	Detected for transceiver module in [chars] module disabled	An initialization failure occurred for the transceiver module for the interface specified in the error message. This condition could be caused by software firmware or hardware problem. As a result of the error the module is disabled.	spa-infra	"Try reseating the module. " "Hardware replacement should not occur first occurrence. " "Before requesting hardware replacement review troubleshooting logs " "with a Cisco technical support representative. "

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
TRANSCM3R3NT_FAILURE	3-Error	Detected for transceiver module in [chars] module disabled	An initialization failure occurred for the transceiver module for the interface specified in the error message. This condition could be caused by software firmware or hardware problem. As a result of the error the module is disabled.	spa-infra	"Try reseating the module. " "Hardware replacement should not occur first occurrence. " "Before requesting hardware replacement review troubleshooting logs " "with a Cisco technical support representative. "
TRANSCM3R3NT_FAILURE	3-Error	Detected for transceiver module in [chars] module disabled	An initialization failure occurred for the transceiver module for the interface specified in the error message. This condition could be caused by software firmware or hardware problem. As a result of the error the module is disabled.	spa-infra	"Try reseating the module. " "Hardware replacement should not occur first occurrence. " "Before requesting hardware replacement review troubleshooting logs " "with a Cisco technical support representative. "
TRANSCM3R3NT_FAILURE	3-Error	Detected for transceiver module in [chars] module disabled	An initialization failure occurred for the transceiver module for the interface specified in the error message. This condition could be caused by software firmware or hardware problem. As a result of the error the module is disabled.	spa-infra	"Try reseating the module. " "Hardware replacement should not occur first occurrence. " "Before requesting hardware replacement review troubleshooting logs " "with a Cisco technical support representative. "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>TRANSCEIVER_INTERNAL_ERROR</del>	3-Error	[chars]	The TRANSCEIVER subsystem encountered an internal software\n\n error. The error message contains text which can be used\n\n to help identify the nature of the problem.	-	LOG_STD_ACTION
<del>TRANSCEIVER_NOT_ALLOWED</del>	3-Error	Detected for transceiver module in [chars] module disabled	The transceiver module for the interface specified in the error message is a restricted transceiver type and is not allowed online in the current configuration for that module. As a result of the error the module is disabled.	spa-infra	"Replace the module with a supported transceiver or modify the " "configuration to allow the current transceiver. If the problem " "persists LOG_STD_ACTION."
<del>TRANSCEIVER_NOT_ALLOWED</del>	3-Error	Detected for transceiver module in [chars] module disabled	The transceiver module for the interface specified in the error message is a restricted transceiver type and is not allowed online in the current configuration for that module. As a result of the error the module is disabled.	spa-infra	"Replace the module with a supported transceiver or modify the " "configuration to allow the current transceiver. If the problem " "persists LOG_STD_ACTION."
<del>TRANSCEIVER_NOT_COMPATIBLE</del>	3-Error	Detected for transceiver module in [chars] module disabled	The transceiver module for the interface specified in the error message is not compatible with the interface. As a result of the error the module is disabled.	spa-infra	"Replace the module with a compatible transceiver. If the problem " "persists LOG_STD_ACTION."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>TRANSCEIVER</del> TRANSCEIVER	3-Error	Detected for transceiver module in [chars] module disabled	The transceiver module for the interface specified in the error message is not compatible with the interface. As a result of the error the module is disabled.	spa-infra	"Replace the module with a compatible transceiver. If the problem " "persists LOG_STD_ACTION."
<del>TRANSCEIVER</del> TRANSCEIVER	3-Error	Detected for transceiver module in [chars] module disabled	The transceiver module for the interface specified in the error message is not compatible with the interface. As a result of the error the module is disabled.	spa-infra	"Replace the module with a compatible transceiver. If the problem " "persists LOG_STD_ACTION."
<del>TRANSCEIVER</del> TRANSCEIVER	3-Error	Detected for transceiver module in [chars] module disabled	The transceiver module for the interface specified in the error message is not compatible with the interface. As a result of the error the module is disabled.	spa-infra	"Replace the module with a compatible transceiver. If the problem " "persists LOG_STD_ACTION."
<del>TRANSCEIVER</del> TRANSCEIVER	3-Error	Detected for transceiver module in [chars] module disabled	The transceiver module for the interface specified in the error message is not compatible with the interface. As a result of the error the module is disabled.	spa-infra	"Replace the module with a compatible transceiver. If the problem " "persists LOG_STD_ACTION."
<del>TRANSCEIVER</del> TRANSCEIVER	3-Error	Detected for transceiver module in [chars] module disabled	The transceiver module for the interface specified in the error message could not be identified and may not be compatible with the interface. As a result of the error the module is disabled.	spa-infra	"Replace the module with a compatible transceiver. If the problem " "persists LOG_STD_ACTION."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>TRANSMR</del> NOIDENIHD	3-Error	Detected for transceiver module in [chars] module disabled	The transceiver module for the interface specified in the error message could not be identified and may not be compatible with the interface. As a result of the error the module is disabled.	spa-infra	"Replace the module with a compatible transceiver. If the problem " "persists LOG_STD_ACTION."
<del>TRANSMR</del> NOIDENIHD	3-Error	Detected for transceiver module in [chars] module disabled	The transceiver module for the interface specified in the error message could not be identified and may not be compatible with the interface. As a result of the error the module is disabled.	spa-infra	"Replace the module with a compatible transceiver. If the problem " "persists LOG_STD_ACTION."
<del>TRANSMR</del> NOIDENIHD	3-Error	Detected for transceiver module in [chars] module disabled	The transceiver module for the interface specified in the error message could not be identified and may not be compatible with the interface. As a result of the error the module is disabled.	spa-infra	"Replace the module with a compatible transceiver. If the problem " "persists LOG_STD_ACTION."
<del>TRANSMR</del> NOIDENIHD	3-Error	Detected for transceiver module in [chars] module disabled	The transceiver module for the interface specified in the error message could not be identified and may not be compatible with the interface. As a result of the error the module is disabled.	spa-infra	"Replace the module with a compatible transceiver. If the problem " "persists LOG_STD_ACTION."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>TRANSCEIVER</del> TRANSCEIVER	3-Error	Detected for transceiver module in [chars] module disabled	The transceiver module for the interface specified in the error message is not a cisco supported module. As a result of the error the module is disabled.	spa-infra	"Replace the module with a cisco supported transceiver. If the problem " "persists LOG_STD_ACTION."
<del>TRANSCEIVER</del> TRANSCEIVER	3-Error	Detected for transceiver module in [chars] module disabled	The transceiver module for the interface specified in the error message is not a cisco supported module. As a result of the error the module is disabled.	spa-infra	"Replace the module with a cisco supported transceiver. If the problem " "persists LOG_STD_ACTION."
<del>TRANSCEIVER</del> TRANSCEIVER	3-Error	Detected for transceiver module in [chars] module disabled	The transceiver module for the interface specified in the error message is not a cisco supported module. As a result of the error the module is disabled.	spa-infra	"Replace the module with a cisco supported transceiver. If the problem " "persists LOG_STD_ACTION."
<del>TRANSCEIVER</del> TRANSCEIVER	3-Error	Detected for transceiver module in [chars] module disabled	The transceiver module for the interface specified in the error message is not a cisco supported module. As a result of the error the module is disabled.	spa-infra	"Replace the module with a cisco supported transceiver. If the problem " "persists LOG_STD_ACTION."
<del>TRANSCEIVER</del> TRANSCEIVER	3-Error	Detected for transceiver module in [chars] module disabled	The transceiver module for the interface specified in the error message is not a cisco supported module. As a result of the error the module is disabled.	spa-infra	"Replace the module with a cisco supported transceiver. If the problem " "persists LOG_STD_ACTION."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>TRANSCEIVER_DISABLE</del>	3-Error	Detected for transceiver module in [chars] module disabled	Failed to enable the transceiver module for the interface specified in the error message. This condition could be caused by software firmware or hardware problem. As a result of the error the module is disabled.	spa-infra	"Try reseating the module. " "Hardware replacement should not occur first occurrence. " "Before requesting hardware replacement review troubleshooting logs " "with a Cisco technical support representative. "
<del>TRANSCEIVER_DISABLE</del>	3-Error	Detected for transceiver module in [chars] module disabled	Failed to enable the transceiver module for the interface specified in the error message. This condition could be caused by software firmware or hardware problem. As a result of the error the module is disabled.	spa-infra	"Try reseating the module. " "Hardware replacement should not occur first occurrence. " "Before requesting hardware replacement review troubleshooting logs " "with a Cisco technical support representative. "
<del>TRANSCEIVER_DISABLE</del>	3-Error	Detected for transceiver module in [chars] module disabled	Failed to enable the transceiver module for the interface specified in the error message. This condition could be caused by software firmware or hardware problem. As a result of the error the module is disabled.	spa-infra	"Try reseating the module. " "Hardware replacement should not occur first occurrence. " "Before requesting hardware replacement review troubleshooting logs " "with a Cisco technical support representative. "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>TRANSCEIVER_DISABLE</del>	3-Error	Detected for transceiver module in [chars] module disabled	Failed to enable the transceiver module for the interface specified in the error message. This condition could be caused by software firmware or hardware problem. As a result of the error the module is disabled.	spa-infra	"Try reseating the module. " "Hardware replacement should not occur first occurrence. " "Before requesting hardware replacement review troubleshooting logs " "with a Cisco technical support representative. "
<del>TRANSCEIVER_DISABLE</del>	3-Error	Detected for transceiver module in [chars] module disabled	Failed to enable the transceiver module for the interface specified in the error message. This condition could be caused by software firmware or hardware problem. As a result of the error the module is disabled.	spa-infra	"Try reseating the module. " "Hardware replacement should not occur first occurrence. " "Before requesting hardware replacement review troubleshooting logs " "with a Cisco technical support representative. "
<del>TRANSCEIVER_DISABLE</del>	3-Error	Application error rc = [dec] in port [chars]	The system failed to retrieve the information required to execute\n\ the comand	spa-infra	show version
<del>TRANSCEIVER_DISABLE</del>	3-Error	Application error rc = [dec] in port [chars]	The system failed to retrieve the information required to execute\n\ the comand	spa-infra	show version
<del>TRANSCEIVER_DISABLE</del>	3-Error	Application error rc = [dec] in port [chars]	The system failed to retrieve the information required to execute\n\ the comand	spa-infra	show version
<del>TRANSCEIVER_DISABLE</del>	3-Error	Application error rc = [dec]:	The system failed to retrieve the information required to execute\n\ the comand	-	show version

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>TRANSCHEM</del> RPC_FAILED	3-Error	Application error rc = [dec]:	The system failed to retrieve the information required to execute\n\ the comand	-	show version
<del>TRANSCHEM</del> RPC_FAILED	3-Error	Transceiver RPC init failure	The system failed to create the resources required to process user\n\ interface commands for transceivers. The error is not fatal but some \n\ \show\ commands could fail.	spa-infra	show version
<del>TRANSCHEM</del> RPC_FAILED	3-Error	Transceiver RPC init failure	The system failed to create the resources required to process user\n\ interface commands for transceivers. The error is not fatal but some \n\ \show\ commands could fail.	spa-infra	show version
<del>TRANSCHEM</del> RPC_FAILED	3-Error	Transceiver RPC init failure	The system failed to create the resources required to process user\n\ interface commands for transceivers. The error is not fatal but some \n\ \show\ commands could fail.	spa-infra	show version
<del>TRANSCHEM</del> RPC_FAILED	3-Error	Transceiver RPC init failure	The system failed to create the resources required to process user\n\ interface commands for transceivers. The error is not fatal but some \n\ \show\ commands could fail.	spa-infra	show version

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>TRANSMRPCNTL</del>	3-Error	Transceiver RPC init failure	The system failed to create the resources required to process user\n\ interface commands for transceivers. The error is not fatal but some \n\ \show\ commands could fail.	spa-infra	show version
<del>TRANSMRPCERR</del>	3-Error	Transceiver RPC error: [chars]	Non Fatal error occured in processing an RPC message.	spa-infra	show version
<del>TRANSMRPCERR</del>	3-Error	Transceiver RPC error: [chars]	Non Fatal error occured in processing an RPC message.	spa-infra	show version
<del>TRANSMRPCERR</del>	3-Error	Transceiver RPC error: [chars]	Non Fatal error occured in processing an RPC message.	spa-infra	show version
<del>TRANSMRPCERR</del>	3-Error	Transceiver RPC error: [chars]	Non Fatal error occured in processing an RPC message.	spa-infra	show version
<del>TRANSMRPCERR</del>	3-Error	Transceiver RPC error: [chars]	Non Fatal error occured in processing an RPC message.	spa-infra	show version
<del>TRANSMRPCERR</del>	3-Error	Transceiver RPC error: [chars]	Non Fatal error occured in processing an RPC message.	spa-infra	show version
<del>TRANSMCRADNALE</del>	3-Error	Transceiver OIR State Machine creation failed for [chars] module disabled.	A state machine could not be created for the transceiver OIR operation. If a [char]YS2-MALLOCFAIL message was also received with this message this condition indicates insufficient system memory. Other possible causes include invalid subblock pointer.	spa-infra	"If it is insufficient system memory " LOGSID_REDUCE_ACTION "If this message recurs " LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>TRANSCEIVER_CREATE_FAILURE</del>	3-Error	Transceiver OIR State Machine creation failed for [chars] module disabled.	A state machine could not be created for the transceiver OIR operation. If a [chars]SYS2MALLOCFAIL message was also received with this message this condition indicates insufficient system memory. Other possible causes include invalid subblock pointer.	spa-infra	"If it is insufficient system memory " LOG_SID_REDUCE_ACTION "If this message recurs " LOG_STD_ACTION
<del>TRANSCEIVER_CREATE_FAILURE</del>	3-Error	Transceiver OIR State Machine creation failed for [chars] module disabled.	A state machine could not be created for the transceiver OIR operation. If a [chars]SYS2MALLOCFAIL message was also received with this message this condition indicates insufficient system memory. Other possible causes include invalid subblock pointer.	spa-infra	"If it is insufficient system memory " LOG_SID_REDUCE_ACTION "If this message recurs " LOG_STD_ACTION
<del>TRANSCEIVER_CREATE_FAILURE</del>	3-Error	Transceiver OIR State Machine creation failed for [chars] module disabled.	A state machine could not be created for the transceiver OIR operation. If a [chars]SYS2MALLOCFAIL message was also received with this message this condition indicates insufficient system memory. Other possible causes include invalid subblock pointer.	spa-infra	"If it is insufficient system memory " LOG_SID_REDUCE_ACTION "If this message recurs " LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>TRANSCEIVER_CREATE_FAIL</del>	3-Error	Transceiver OIR State Machine creation failed for [chars] module disabled.	A state machine could not be created for the transceiver OIR operation. If a [char]YS2-MALLOCFAIL message was also received with this message this condition indicates insufficient system memory. Other possible causes include invalid subblock pointer.	spa-infra	"If it is insufficient system memory " LOG_STD_ACTION "If this message recurs " LOG_STD_ACTION
<del>TRANSCEIVER_UNSUPPORTED</del>	3-Error	Transceiver type GLC-GE-100FX is not supported on SPA-8xGE-V2	Transceiver type GLC-GE-100FX is not supported on SPA-8xGE-V2	-	"Consult the documentation and ensure supported " "transceivers are plugged into the SPA "
<del>TRANSCEIVER_UNSUPPORTED</del>	3-Error	Transceiver type GLC-GE-100FX is not supported on SPA-8xGE-V2	Transceiver type GLC-GE-100FX is not supported on SPA-8xGE-V2	-	"Consult the documentation and ensure supported " "transceivers are plugged into the SPA "
<del>TRANSCEIVER_UNSUPPORTED</del>	3-Error	Transceiver type [chars] is not supported on [chars]	The transceiver module for the interface specified in the error message is not compatible with the interface.	spa-infra	"Consult the documentation and ensure supported " "transceivers are plugged into the SPA "
<del>TRANSCEIVER_UNSUPPORTED</del>	3-Error	Transceiver type [chars] is not supported on [chars]	The transceiver module for the interface specified in the error message is not compatible with the interface.	spa-infra	"Consult the documentation and ensure supported " "transceivers are plugged into the SPA "



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>TRANSCEIVERMODEMATCH</del>	6-Information	[chars]	If mode == 100G and if 400G transceiver is inserted in 400G supported ports the message will be printed on console to enable 400gig config on the port	spa-infra	LOG_SID_NO_ACTION
<del>TRANSCEIVERMODEMATCH</del>	6-Information	[chars]	If mode == 100G and if 400G transceiver is inserted in 400G supported ports the message will be printed on console to enable 400gig config on the port	spa-infra	LOG_SID_NO_ACTION
<del>TRANSCEIVERINSERTED</del>	6-Information	transceiver module inserted in [chars]	The online insertion and removal OIR facility detected a	spa-infra	LOG_SID_NO_ACTION
<del>TRANSCEIVERINSERTED</del>	6-Information	transceiver module inserted in [chars]	The online insertion and removal OIR facility detected a	spa-infra	LOG_SID_NO_ACTION
<del>TRANSCEIVERINSERTED</del>	6-Information	transceiver module inserted in [chars]	The online insertion and removal OIR facility detected a	spa-infra	LOG_SID_NO_ACTION
<del>TRANSCEIVERINSERTED</del>	6-Information	transceiver module inserted in [chars]	The online insertion and removal OIR facility detected a	spa-infra	LOG_SID_NO_ACTION
<del>TRANSCEIVERINSERTED</del>	6-Information	transceiver module inserted in [chars]	The online insertion and removal OIR facility detected a	spa-infra	LOG_SID_NO_ACTION
<del>TRANSCEIVERINSERTED_QSA</del>	6-Information	transceiver module inserted in QSA [chars]	The online insertion and removal OIR facility detected a	spa-infra	LOG_SID_NO_ACTION
<del>TRANSCEIVERINSERTED_QSA</del>	6-Information	transceiver module inserted in QSA [chars]	The online insertion and removal OIR facility detected a	spa-infra	LOG_SID_NO_ACTION
<del>TRANSCEIVERREMOVED</del>	6-Information	Transceiver module removed from [chars]	The online insertion and removal OIR facility detected the	spa-infra	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>TRANSMEMO</del> REMOVED	6-Information	Transceiver module removed from [chars]	The online insertion and removal OIR facility detected the	spa-infra	LOG_SID_NO_ACTION
<del>TRANSMEMO</del> REMOVED	6-Information	Transceiver module removed from [chars]	The online insertion and removal OIR facility detected the	spa-infra	LOG_SID_NO_ACTION
<del>TRANSMEMO</del> REMOVED	6-Information	Transceiver module removed from [chars]	The online insertion and removal OIR facility detected the	spa-infra	LOG_SID_NO_ACTION
<del>TRANSMEMO</del> REMOVED	6-Information	Transceiver module removed from [chars]	The online insertion and removal OIR facility detected the	spa-infra	LOG_SID_NO_ACTION
<del>TRANSMEMO</del> QASP	6-Information	Transceiver module removed from QSA [chars]	The online insertion and removal OIR facility detected the	spa-infra	LOG_SID_NO_ACTION
<del>TRANSMEMO</del> QASP	6-Information	Transceiver module removed from QSA [chars]	The online insertion and removal OIR facility detected the	spa-infra	LOG_SID_NO_ACTION
<del>TRANSMEMO</del> ERRMODE	6-Information	Transceiver module [chars] going in err-disabled state	The online insertion and removal OIR facility detected the	spa-infra	LOG_SID_NO_ACTION
<del>TRANSMEMO</del> ERRMODE	6-Information	Transceiver module [chars] going in err-disabled state	The online insertion and removal OIR facility detected the	spa-infra	LOG_SID_NO_ACTION
TRANSPORT_FAILED	3-Error	Transport map collection initialization failed\n	The system was unable to allocate memory for storing transport maps. Configuration of transport maps will be unavailable.	transport	show memory
TRUNK_CLOCK_MEMORY	3-Error	Failed to allocate memory for the clocks	The clock switching software has failed to allocate memory\n\ while adding a clock.	as	LOG_SID_NO_ACTION
<del>TRUNK_CLOCK</del> NO_GOOD_CLOCKS	6-Information	There are no good clocks in the system. Remain in HOLDOVER mode	The clock selection algorithm has failed to select any clock as \n\ the TDM primary clock.	as	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TRUNK_CLOCK6EXTERNAL	6-Information	Switching to the user configured external clock on motherboard	The TDM primary clock is switching from the default clock to the\n\ user configured external clock in motherboard.	as	LOG_SID_NO_ACTION
TRUNK_CLOCK6FREERUN	6-Information	Switching to the user configured freerunning clock on motherboard	The TDM primary clock is switching from the default clock to the\n\ user configured free running clock in motherboard.	as	LOG_SID_NO_ACTION
TRUNK_CLOCK6SMWICH	6-Information	Switching to the clock on slot [dec] port [dec] priority [dec] as the current primary has gone bad	The TDM primary clock has switched to a backup clock coming in \n\ via the specified trunk as the current primary clock has gone\n\ bad.	as	LOG_SID_NO_ACTION
TRUNK_CLOCK6TRUNK	6-Information	Switching to the user configured trunk clock on slot [dec] port [dec] priority [dec]	The TDM primary clock is switching from the default clock to the\n\ user configured trunk clock.	as	LOG_SID_NO_ACTION
TRUNK3BADCARDTYPE	3-Error	Unknown type 0x[hec] in shelf [dec] slot [dec]	An internal software error occurred. An attempt was made to\n\ reference a shelf number larger than the installed maximum.	-	LOG_STD_ACTION
TRUNK-3-BADCLOCK	3-Error	selected clock on slot [dec] port [dec] is bad.Accepting the config.	-	-	""
TRUNK-3-BADFW	3-Error	Invalid framer firmware code file.	The software has detected an invalid framer firmware image that\n\ cannot be downloaded.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TRUNK-3-BADMSG	3-Error	Bad doorbell message type to framer: [dec]	An invalid or undefined message type was sent to the framer\n\ processor.	-	LOG_STD_ACTION
TRUNK-3-DROP	3-Error	T1 Port [dec] on slot [dec] is now in drop-insert mode.	The user has dropped a T1 port on a CT3 card by pressing the \n\ pushbutton on the CT3 card. This is a disruptive action in that\n\ any existing calls will be dropped.	-	""
TRUNK-3-HBEAT	3-Error	No longer receiving heartbeats from framer CPU.	Communication from the framer processor to the trunk card processor\n\ has stopped. The framer processor is no longer passing status to\n\ the trunk card processor nor accepting messages from the trunk card \n\ processor.	-	LOG_STD_ACTION
TRUNK-3-INITFAIL	3-Error	Trunk card initialization failed due to: [chars]	The memory buffer for message passing between the trunk card and\n\ framer processors has been exhausted. Either the messages are not\n\ being picked up or are being generated too quickly.	-	LOG_STD_ACTION
TRUNK-3-MSGIMOUT	3-Error	Timed out waiting for framer CPU to respond.	The framer processor did not reply to the read request during a\n\ specified amount of time.	-	""

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TRUNK-3-NODROP	3-Error	T1 Port [dec] on slot [dec] taken out of drop-insert mode.	The user has restored a T1 port on a CT3 card by pressing the \n\ pushbutton on the CT3 card. This port was earlier dropped by\n\ the user and has now been taken out of dropped mode.	-	""
TRUNK-3-NOMEM	3-Error	Insufficient memory for slot: [dec] in shelf: [dec]	This message indicates that the router's memory was exhausted while\n\ allocating memory for use with the specified slot and shelf.	-	LOGS_IDREDUCE_ACTION
TSPCAPABILITYSMATCH	3-Error	voice port [chars]: call connection id [0x[hec] 0x[hec] 0x[hec] 0x[hec]]	There was a capabilities mismatch between the two call legs. capabilities are negotiated between call legs for CODEC VAD and FAX rate.	-	"Check that the dial peer configuration is appropriate for the interface " "in question. Also check that and configuration on the interface is " "correct."
TSPCAPABILITYSMATCH	3-Error	voice port [chars]: call connection id [0x[hec] 0x[hec] 0x[hec] 0x[hec]]	There was a capabilities mismatch between the two call legs. capabilities are negotiated between call legs for CODEC VAD and FAX rate.	-	"Check that the dial peer configuration is appropriate for the interface " "in question. Also check that and configuration on the interface is " "correct."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TSP-3-DSPALARM	3-Error	voice port [chars]: status=0x[hec] message=0x[hec]	The DSP reported a fatal error. All calls on the DSP were dropped and a DSP reload was attempted.	-	"Verify that the DSP reloaded properly by attempting to place a call " "on the affected voice port. Contact your technical support " "representative include the full text of the error message."
TSP-3-DSPALARM	3-Error	voice port [chars]: status=0x[hec] message=0x[hec]	The DSP reported a fatal error. All calls on the DSP were dropped and a DSP reload was attempted.	-	"Verify that the DSP reloaded properly by attempting to place a call " "on the affected voice port. Contact your technical support " "representative include the full text of the error message."
TSP-3-FSM_ERROR	3-Error	[chars]	Internal Finite State Machine Error.	-	"Contact your technical support representative include the full text of\n\ the error message."
TSP-3-FSM_ERROR	3-Error	[chars]	Internal Finite State Machine Error.	-	"Contact your technical support representative include the full text of\n\ the error message."
TSP-3-NOEVENT	3-Error	no free event structure available from [chars] for DSP message	There were no event structures remaining in the system pools to alert the router of a voice or signaling event.	-	"Check that the voice port for which the event was reported is " "still operational. If not clear the voice port."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TSP-3-NOEVENT	3-Error	no free event structure available from [chars] for DSP message	There were no event structures remaining in the system pools to alert the router of a voice or signaling event.	-	"Check that the voice port for which the event was reported is " "still operational. If not clear the voice port."
TSP-5-PRI	5-Notice	[chars] at slot [dec] unit [dec] channel [dec]	A PRI signalling channel is added/deleted to TSP's inventory of signalling channels.	-	"This is a notification message only. " "No action is required."
TSP-5-PRI	5-Notice	[chars] at slot [dec] unit [dec] channel [dec]	A PRI signalling channel is added/deleted to TSP's inventory of signalling channels.	-	"This is a notification message only. " "No action is required."
TTY-3-AUTOCONFIG	3-Error	TTY[node] Modem auto-configuration failed	Modem auto-configuration failed either because the modem rejected\n\ the configuration string or because of a timeout. An attempt\n\ should be made to apply the configuration string manually.	-	LOG_STD_ACTION
TTY-3-NOPROCESS	3-Error	Cannot create [chars] process	Failed creating the process.	smartport	LOG_STD_ACTION
TTYDRIVER2NOBRKPAK	2-Critical	Unable to allocate break block from I/O mem	The router does not have enough I/O memory for buffers.	-	"Consider adding more shared memory. " LOG_STD_ACTION
TTYDRIVER2NOBRKPAK	2-Critical	Unable to allocate break block from I/O mem	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TTYDRIVER-2-NOBUF	2-Critical	Unable to allocate [dec] I/O buffers	A buffer memory shortage existed at the time that the configuration\n\n command was issued. This condition is rare and under normal\n\n conditions temporary.	-	LOG_SID_RECUR_ACTION
TTYDRIVER-2-NOBUF	2-Critical	Unable to allocate [dec] I/O buffers	-	-	-
<del>TTYDRIVER-2-NOBUF</del> TTYDRIVER-2-NOBUF_ASYNC	2-Critical	Unable to create buffer pool for async. mode interface	There is not enough memory for a per channel control block\n\n of the async TTY driver.	-	LOG_SID_REDUCE_ACTION
<del>TTYDRIVER-2-NOBUF</del> TTYDRIVER-2-NOBUF_ASYNC	2-Critical	Unable to create buffer pool for async. mode interface	-	-	-
TTYDRIVER-2-NOMEM	2-Critical	Unable to allocate [dec] byte status block	The async TTY driver was unable to create an internal structure\n\n due to a low-memory condition.	-	LOG_SID_REDUCE_ACTION
TTYDRIVER-2-NOMEM	2-Critical	Unable to allocate [dec] byte status block	-	-	-
TTYDRIVER-3-BADENCAP	3-Error	Unknown encapsulation on interface [chars]	A software error occurred resulting in an unknown encapsulation\n\n type on the interface specified by the error message.	-	LOG_STD_ACTION
TTYDRIVER-3-NOPARIS	3-Error	No particles available to set up for output on tty [chars]	A software error occurred resulting in an unexpected exhaustion\n\n of the pool of data buffers used by the modem drivers.	-	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TTYDRIVER-3-NOIXPART	3-Error	Non-zero outcount but no transmit particle on tty [chars]	A software error occurred resulting in an invalid state for the\n\ RTS modem signal	-	LOG_STD_ACTION
<del>TYDRIVER-3-NOIXPART</del> TYDRIVER-3-NOIXPART	3-Error	Unknown port type [dec]	A software error occurred due to an unrecognised port type	-	LOG_STD_ACTION
TTYMON-3-AGETTY	3-Error	iosxe-binos-utils	Cannot initiate a switch in console ownership. A required program could not be launched successfully.	The Host Manager process on the Route Processor	-
TTYMON-3-CHASFS	3-Error	iosxe-binos-utils	The software which monitors ownership of the console port cannot[chars] a filesystem configuration value.	The Host Manager process on the Route Processor	-
TTYMON-3-INIT	3-Error	iosxe-binos-utils	The software which monitors ownership of the console port cannot be initialized correctly	The Host Manager process on the Route Processor	-
TUN-3-6RD	3-Error	[chars]: [chars]	The tunnel 6RD feature encountered an internal software error	TUNNELDISCONNECT	LOG_STD_ACTION
TUN-3-6RD	3-Error	[chars]: [chars]	The tunnel 6RD feature encountered an internal software error	TUNNELDISCONNECT	LOG_STD_ACTION
TUN-3-API_ARGS	3-Error	unexpected arguments: [chars] [chars]	A public tunnel component api was driven with arguments outside the expected boundaries.	ip-tunnels	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TUN-3-API_ARGS	3-Error	unexpected arguments: [chars] [chars]	A public tunnel component api was driven with arguments outside the expected boundaries.	ip-tunnels	LOG_STD_ACTION
TUN-3-CM1	3-Error	[chars]	The tunnel classification module encountered an internal software error	TUNNELDISCOMPONENT	LOG_STD_ACTION
TUN-3-CM1	3-Error	[chars]	The tunnel classification module encountered an internal software error	TUNNELDISCOMPONENT	LOG_STD_ACTION
TUN-3-CM2	3-Error	[chars] [dec]	The tunnel classification module encountered an internal software error	TUNNELDISCOMPONENT	LOG_STD_ACTION
TUN-3-CM2	3-Error	[chars] [dec]	The tunnel classification module encountered an internal software error	TUNNELDISCOMPONENT	LOG_STD_ACTION
TUN-3-DECAP_OCE	3-Error	[chars] [chars]	An internal software error occurred in the tunnel subsystem which is responsible for building forwarding for the purposes of decapsulation	-	LOG_STD_ACTION
TUN-3-DECAP_OCE	3-Error	[chars] [chars]	An internal software error occurred in the tunnel subsystem which is responsible for building forwarding for the purposes of decapsulation	-	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
TUN-3-DECAP_TINFO	3-Error	[chars] [chars]	An internal software error occurred in the tunnel subsystem which is responsible for driving forwarding based on the tinfo configuration	-	LOG_STD_ACTION
TUN-3-DECAP_TINFO	3-Error	[chars] [chars]	An internal software error occurred in the tunnel subsystem which is responsible for driving forwarding based on the tinfo configuration	-	LOG_STD_ACTION
TUN-3-ENDPOINT_ERROR	3-Error	[chars] [chars]	An internal software error occurred when manipulating the tunnel endpoint database	TUNNELDISCOMPONENT	LOG_SID_NO_ACTION
TUN-3-ENDPOINT_ERROR	3-Error	[chars] [chars]	An internal software error occurred when manipulating the tunnel endpoint database	TUNNELDISCOMPONENT	LOG_SID_NO_ACTION
TUN-3-ENDPOINT_STORE	3-Error	Operation [chars] failed for [chars]	Manipulation of the tunnel endpoint store failed.	ip-tunnels	LOG_STD_ACTION
TUN-3-ENDPOINT_STORE	3-Error	Operation [chars] failed for [chars]	Manipulation of the tunnel endpoint store failed.	ip-tunnels	LOG_STD_ACTION
TUN-3-GROUPS	3-Error	Tunnel Groups: [chars]: [chars]	The tunnel group component encountered an internal software error	TUNNELDISCOMPONENT	LOG_STD_ACTION
TUN-3-GROUPS	3-Error	Tunnel Groups: [chars]: [chars]	The tunnel group component encountered an internal software error	TUNNELDISCOMPONENT	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
TUN-3-ILLEGAL_ARGS	3-Error	Illegal arguments - [chars]	An internal software error occurred.	-	LOG_STD_ACTION
TUN-3-ILLEGAL_ARGS	3-Error	Illegal arguments - [chars]	An internal software error occurred.	-	LOG_STD_ACTION
TUN-3-MNENCAP_PRCHE	3-Error	L3VPN Encap IP : [chars]: [chars]	The L3VPN Encap IP component encountered an internal software error	TUNNELDISCOMPONENT	LOG_STD_ACTION
TUN-3-MNENCAP_PRCHE	3-Error	L3VPN Encap IP : [chars]: [chars]	The L3VPN Encap IP component encountered an internal software error	TUNNELDISCOMPONENT	LOG_STD_ACTION
TUN-3-L3VPN_GROUP	3-Error	Tunnel L3VPN Groups: [chars]: [chars]	The tunnel group component encountered an internal software error	TUNNELDISCOMPONENT	LOG_STD_ACTION
TUN-3-L3VPN_GROUP	3-Error	Tunnel L3VPN Groups: [chars]: [chars]	The tunnel group component encountered an internal software error	TUNNELDISCOMPONENT	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TUNNEL_EXCEEDS_MTU	3-Error	[chars] IPv4 MTU configured [node] exceeds tunnel maximum MTU %u	An IPv4 MTU value is configured on the tunnel interface and this value exceeds the tunnel's maximum MTU. This message is typically observed when the tunnel header size changes or when the MTU of the underlying exit interface changes. As a result of either the tunnel maximum MTU can change. This message can also be observed when using an IPv6 tunnel to carry IPv4 since IPv4 MTU config in this case allows for a value to be configured that is greater than the tunnel's maximum MTU. As a result of any of these conditions packets may be dropped.	TUNNELDISCOMPONENT	"If a specific IPv4 MTU value is not required it is recommended that you leave the value at the default by typing <b>no ip mtu</b> on the tunnel interface. If a specific value is required it is recommended that you check the interface MTU value from the <b>show interface tunnel</b> command and <b>adjust ip mtu</b> on the tunnel interface to be lower than or equal to this."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TUNNEL_EXCEEDS_MTU_IP4	3-Error	[chars] IPv4 MTU configured [node]exceeds tunnel maximum MTU %u	An IPv4 MTU value is configured on the tunnel interface and this value exceeds the tunnel's maximum MTU. This message is typically observed when the tunnel header size changes or when the MTU of the underlying exit interface changes. As a result of either the tunnel maximum MTU can change. This message can also be observed when using an IPv6 tunnel to carry IPv4 since IPv4 MTU config in this case allows for a value to be configured that is greater than the tunnel's maximum MTU. As a result of any of these conditions packets may be dropped.	TUNNELDISCONNECT	"If a specific IPv4 MTU value is not required it is recommended that you leave the value at the default by typing <b>no ip mtu</b> on the tunnel interface. If a specific value is required it is recommended that you check the interface MTU value from the <b>show interface tunnel</b> command and adjust <b>ip mtu</b> on the tunnel interface to be lower than or equal to this."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TUNNEL_EXCEED_IPv6	3-Error	[chars] IPv6 MTU configured [node]exceeds tunnel maximum MTU %u	An IPv6 MTU value is configured on the tunnel interface and this value exceeds the tunnel's maximum MTU. This message is typically observed when the tunnel header size changes or when the MTU of the underlying exit interface changes. As a result of either the tunnel maximum MTU can change. This message can also be observed when using an IPv6 tunnel to carry IPv6 since IPv6 MTU config in this case allows for a value to be configured that is greater than the tunnel's maximum MTU. As a result of any of these conditions packets may be dropped.	TUNNELDISCOMPONENT	"If a specific IPv6 MTU value is not required it is recommended that you leave the value at the default by typing <b>no ipv6 mtu</b> on the tunnel interface. If a specific value is required it is recommended that you check the interface MTU value from the <b>show interface tunnel</b> command and <b>adjust ipv6 mtu</b> on the tunnel interface to be lower than or equal to this."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>TUN3MULTI_KEYS_NO_IP6</del>	3-Error	[chars] IPv6 MTU configured [node]exceeds tunnel maximum MTU %u	An IPv6 MTU value is configured on the tunnel interface and this value\n exceeds the tunnel's maximum MTU. This message is typically observed\n when the tunnel header size changes or when the MTU of the underlying\n exit interface changes. As a result of either the tunnel maximum MTU\n can change. This message can also be observed when using an IPv6\n tunnel to carry IPv6 since IPv6 MTU config in this case allows for a\n value to be configured that is greater than the tunnel's maximum MTU.\n As a result of any of these conditions packets may be dropped.	TUNNELDISCONNECT	"If a specific IPv6 MTU value is not required it is recommended that\n you leave the value at the default by typing <CmdBold>no ipv6 mtu\n<NoCmdBold> on the tunnel interface. If a specific value is required\n it is recommended that you check the interface MTU value from the\n<CmdBold>show interface tunnel<NoCmdBold> command and adjust\n<CmdBold>ipv6 mtu<NoCmdBold> on the tunnel interface to be lower than\n or equal to this."
<del>TUN3MULTI_KEYS_INFO</del>	3-Error	[chars] [chars]	Manipulation of the tunnel keys database failed.	ip-tunnels	LOG_STD_ACTION
<del>TUN3MULTI_KEYS_INFO</del>	3-Error	[chars] [chars]	Manipulation of the tunnel keys database failed.	ip-tunnels	LOG_STD_ACTION
<del>TUNMULTI_KEYS_NO_ERROR</del>	3-Error	[chars] [dec]	Manipulation of the tunnel keys database failed\n because of incorrect idb_index.	ip-tunnels	LOG_STD_ACTION
<del>TUNMULTI_KEYS_NO_ERROR</del>	3-Error	[chars] [dec]	Manipulation of the tunnel keys database failed\n because of incorrect idb_index.	ip-tunnels	LOG_STD_ACTION



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
TUN-3-OTV_GROUP	3-Error	Tunnel OTV Groups: [chars]: [chars]	The tunnel group component encountered an internal software error	TUNNELDISCONNECT	LOG_STD_ACTION
TUN-3-OTV_GROUP	3-Error	Tunnel OTV Groups: [chars]: [chars]	The tunnel group component encountered an internal software error	TUNNELDISCONNECT	LOG_STD_ACTION
TUN-3-SIA_GROUP	3-Error	Tunnel SIA Groups: [chars]: [chars]	The tunnel group component encountered an internal software error	TUNNELDISCONNECT	LOG_STD_ACTION
TUN-3-SIA_GROUP	3-Error	Tunnel SIA Groups: [chars]: [chars]	The tunnel group component encountered an internal software error	TUNNELDISCONNECT	LOG_STD_ACTION
TUN-3-TERM_ADJ	3-Error	Terminal adjacency [chars][chars][chars]	An internal software error occurred.	TUNNELDISCONNECT	LOG_STD_ACTION
TUN-3-TERM_ADJ	3-Error	Terminal adjacency [chars][chars][chars]	An internal software error occurred.	TUNNELDISCONNECT	LOG_STD_ACTION
TUN-3-TUN_DBG	3-Error	TUN_DBG: [chars] [chars]	An internal software error occurred.	TUNNELDISCONNECT	LOG_STD_ACTION
TUN-3-TUN_DBG	3-Error	TUN_DBG: [chars] [chars]	An internal software error occurred.	TUNNELDISCONNECT	LOG_STD_ACTION
TUN-3-TUN_HA	3-Error	Tunnel HA: [chars]	Tunnel HA encountered an internal software error	TUNNELDISCONNECT	LOG_STD_ACTION
TUN-3-TUN_HA	3-Error	Tunnel HA: [chars]	Tunnel HA encountered an internal software error	TUNNELDISCONNECT	LOG_STD_ACTION
TUN-3-TUN_SB	3-Error	TUN_SB: [chars][chars][chars]	An internal software error occurred.	TUNNELDISCONNECT	LOG_STD_ACTION
TUN-3-TUN_SB	3-Error	TUN_SB: [chars][chars][chars]	An internal software error occurred.	TUNNELDISCONNECT	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TUN-3-TUN_SIDB2TUNS	3-Error	[chars]: [chars]	An internal software error occurred.	TUNELDISCOMPONENT	LOG_STD_ACTION
TUN-3-TUN_SIDB2TUNS	3-Error	[chars]: [chars]	An internal software error occurred.	TUNELDISCOMPONENT	LOG_STD_ACTION
TUN-3-TUNTO	3-Error	Operation: [chars] Action: [chars] Reason: [chars]	The tunnel-to module encountered an internal software error	TUNELDISCOMPONENT	LOG_STD_ACTION
TUN-3-TUNTO	3-Error	Operation: [chars] Action: [chars] Reason: [chars]	The tunnel-to module encountered an internal software error	TUNELDISCOMPONENT	LOG_STD_ACTION
TUN-3-WCCP_GROUP	3-Error	Tunnel WCCP Groups: [chars]: [chars]	The tunnel group component encountered an internal software error	TUNELDISCOMPONENT	LOG_STD_ACTION
TUN-3-WCCP_GROUP	3-Error	Tunnel WCCP Groups: [chars]: [chars]	The tunnel group component encountered an internal software error	TUNELDISCOMPONENT	LOG_STD_ACTION
TUN-3-ENCAPPSCDEL	4-Warning	L3VPN Encap IP : [chars]: [chars]	The user configuration change results in a warning. This message is typically printed when the user tries to delete a loopback interface and the loopback interface is configured as the source interface of the L3VPN encap IP profile	TUNELDISCOMPONENT	"It is recommended that the user removes the loopback interface as the source interface of the L3vpn encap ip profile before deleting the loopback interface."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TUNL3MENCAPPSCDEL	4-Warning	L3VPN Encap IP : [chars]: [chars]	The user configuration change results in a warning. This message is typically printed when the user tries to delete a loopback interface and the loopback interface is configured as the source interface of the L3VPN encap IP profile	TUNNELDISCOMPONENT	"It is recommended that the user removes the loopback interface as the source interface of the L3vpn encap ip profile before deleting the loopback interface."
TUNL3MEXELEMUP4	4-Warning	[chars] IPv4 MTU configured [node]exceeds tunnel transport MTU %u	-	TUNNELDISCOMPONENT	"If a specific IPv4 MTU value is not required it is recommended that you leave the value at the default by typing <b>no ip mtu</b> on the tunnel interface. If a specific value is required it is recommended that you check the tunnel transport MTU value from the <b>show interface tunnel</b> command and adjust <b>ip mtu</b> on the tunnel interface to be lower than or equal to this."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TUNNELDISCOMP	4-Warning	[chars] IPv4 MTU configured [node]exceeds tunnel transport MTU %u	-	TUNNELDISCOMP	"If a specific IPv4 MTU value is not required it is recommended that you leave the value at the default by typing <b>no ip mtu</b> on the tunnel interface. If a specific value is required it is recommended that you check the tunnel transport MTU value from the <b>show interface tunnel</b> command and adjust <b>ip mtu</b> on the tunnel interface to be lower than or equal to this."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TUNNELDISCOMPONENT	4-Warning	[chars] IPv6 MTU configured [node]exceeds tunnel transport MTU %u	-	TUNNELDISCOMPONENT	"If a specific IPv6 MTU value is not required it is recommended that you leave the value at the default by typing <b>no ipv6 mtu</b> on the tunnel interface. If a specific value is required it is recommended that you check the tunnel transport MTU value from the <b>show interface tunnel</b> command and <b>adjust</b> the <b>ipv6 mtu</b> on the tunnel interface to be lower than or equal to this."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TUNNELDISCOMPONENT	4-Warning	[chars] IPv6 MTU configured [node]exceeds tunnel transport MTU %u	-	TUNNELDISCOMPONENT	"If a specific IPv6 MTU value is not required it is recommended that you leave the value at the default by typing <b>no ipv6 mtu</b> on the tunnel interface. If a specific value is required it is recommended that you check the tunnel transport MTU value from the <b>show interface tunnel</b> command and <b>adjust</b> the <b>ipv6 mtu</b> on the tunnel interface to be lower than or equal to this."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TUNNELDISCOMPONENT	4-Warning	[chars] IPv4 MTU [node] is lesser than the minimum IP MTU [node] fragmentation may occur	The IPv4 MTU value calculated on the tunnel interface is less than the minimum IP MTU. The MTU of the underlying exit interface of the tunnel is too small. As a result fragmentation of the transport packet may occur before this goes out of the underlying exit interface.	TUNNELDISCOMPONENT	"If a specific MTU value is not required for the exit interface it is recommended that you leave the value at the default by typing <code>no mtu</code> on the exit interface. If a specific value is required it is recommended that you check the MTU value from the <code>show interface</code> command for the exit interface and adjust <code>mtu</code> on the tunnel exit to be higher than this."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>TUNNEL</del> TUNNEL_IPv4_MTU	4-Warning	[chars] IPv4 MTU [node] is lesser than the minimum IP MTU [node] fragmentation may occur	The IPv4 MTU value calculated on the tunnel interface is less than the minimum IP MTU. The MTU of the underlying exit interface of the tunnel is too small. As a result fragmentation of the transport packet may occur before this goes out of the underlying exit interface.	TUNNELDISCONNECT	"If a specific MTU value is not required for the exit interface it is recommended that you leave the value at the default by typing <code>no mtu</code> on the exit interface. If a specific value is required it is recommended that you check the MTU value from the <code>show interface</code> command for the exit interface and adjust <code>mtu</code> on the tunnel exit to be higher than this."
<del>TUNNEL</del> TUNNEL_IPv4_EXCEEDS_MTU	4-Warning	[chars] transport MTU [node] exceeds [chars] configured IPv4 MTU [node] fragmentation may occur	A default MTU value has been configured on the tunnel and this value exceeds the underlying physical interface MTU. As a result fragmentation of the transport packet may occur before this goes out of the underlying exit interface.	TUNNELDISCONNECT	"If possible increase the size of the IPv4 MTU on the underlying physical interface using <code>ip mtu</code> ."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>TUN4UDLR_EXCEEDS_MTU</del>	4-Warning	[chars] transport MTU [node]exceeds [chars] configured IPv4 MTU [node]fragmentation may occur	A default MTU value has been configured on the tunnel and this\n\n value exceeds the underlying physical interface MTU. As a result\n\n fragmentation of the transport packet may occur before this goes out\n\n of the underlying exit interface.	TUNNELDISCOMPONENT	"If possible increase the size of the IPv4 MTU on the underlying\n\n physical interface using <CmdBold>ip mtu<NoCmdBold>."
TUN4UDLR_IDB_ERROR	4-Warning	UDLR [chars] - [chars]	An error was encountered on a udlr interface	TUNNELDISCOMPONENT	LOG_SID_NO_ACTION
TUN4UDLR_IDB_ERROR	4-Warning	UDLR [chars] - [chars]	An error was encountered on a udlr interface	TUNNELDISCOMPONENT	LOG_SID_NO_ACTION
TUN-5-6RD_INFO	5-Notice	[chars]: [chars]	6RD configuration has been removed as it is not compatible with the\n\n new sub-mode	TUNNELDISCOMPONENT	LOG_SID_NO_ACTION
TUN-5-6RD_INFO	5-Notice	[chars]: [chars]	6RD configuration has been removed as it is not compatible with the\n\n new sub-mode	TUNNELDISCOMPONENT	LOG_SID_NO_ACTION
<del>TUN5WFNEX_ILLEGAL</del>	5-Notice	Attempt to create tunnel interface for [chars] with illegal index: [dec]	Creation of tunnel interface failed.	TUNNELDISCOMPONENT	LOG_STD_ACTION
<del>TUN5WFNEX_ILLEGAL</del>	5-Notice	Attempt to create tunnel interface for [chars] with illegal index: [dec]	Creation of tunnel interface failed.	TUNNELDISCOMPONENT	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TUN5IGNOREICMP6MTU	5-Notice	[chars] ignoring received ICMP6 Type 2 Code 0 due to pmtud min-mtu setting	-	TUNNELDISCOVERY	"If you want the ICMP6 packet to be accepted and to be used to decrease the tunnel MTU then use the <b>tunnel path-mtu-discovery min-mtu</b> command to decrease the minimum mtu allowed. The min-mtu specified is the minimum tunnel payload mtu allowed. Use the <b>show interface tunnel</b> command to view the current path mtu discovery settings."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TUN:IGNOREICMP6MIU	5-Notice	[chars] ignoring received ICMP6 Type 2 Code 0 due to pmtud min-mtu setting	-	TUNNELDISCOMPONENT	"If you want the ICMP6 packet to be accepted and to be used to decrease the tunnel MTU then use the <b>tunnel path-mtu-discovery min-mtu</b> command to decrease the minimum mtu allowed. The min-mtu specified is the minimum tunnel payload mtu allowed. Use the <b>show interface tunnel</b> command to view the current path mtu discovery settings."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TUN5:IGNOREICMP:MTU	5-Notice	[chars] ignoring received ICMP Type 3 Code 4 due to pmtud min-mtu setting	-	TUNNELDISCONNECT	"If you want the ICMP packet to be accepted and to be used to decrease the tunnel MTU then use the <b>tunnel path-mtu-discovery min-mtu</b> command to decrease the minimum mtu allowed. The min-mtu specified is the minimum tunnel payload mtu allowed. Use the <b>show interface tunnel</b> command to view the current path mtu discovery settings."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TUN5IGNOREICMPMTU	5-Notice	[chars] ignoring received ICMP Type 3 Code 4 due to pmtud min-mtu setting	-	TUNNELDISCOMPONENT	"If you want the ICMP packet to be accepted and to be used to decrease the tunnel MTU then use the <b>&lt;CmdBold&gt;tunnel path-mtu-discovery min-mtu</b> <b>&lt;NoCmdBold&gt;</b> command to decrease the minimum mtu allowed. The min-mtu specified is the minimum tunnel payload mtu allowed. Use the <b>&lt;CmdBold&gt;show interface tunnel</b> <b>&lt;NoCmdBold&gt;</b> command to view the current path mtu discovery settings."
TUN-5-INIT_ERROR	5-Notice	A critical error [chars] occurred during initialization	Creation of tunnel subsystem failed.	TUNNELDISCOMPONENT	LOG_STD_ACTION
TUN-5-INIT_ERROR	5-Notice	A critical error [chars] occurred during initialization	Creation of tunnel subsystem failed.	TUNNELDISCOMPONENT	LOG_STD_ACTION
TUN5MNPICHOEDHEE	5-Notice	l3vpn encap ip profile [chars] deleted	l3vpn encap ip profile is deleted	TUNNELDISCOMPONENT	LOG_SID_NO_ACTION
TUN5MNPICHOEDHEE	5-Notice	l3vpn encap ip profile [chars] deleted	l3vpn encap ip profile is deleted	TUNNELDISCOMPONENT	LOG_SID_NO_ACTION
TUN-5-MPLS_TE	5-Notice	ERRMSG_NOFLAGS	-	-	-
TUN-5-MPLS_TE	5-Notice	ERRMSG_NOFLAGS	-	-	-
TUN-5-RECURDOWN	5-Notice	[chars] temporarily disabled due to recursive routing	-	TUNNELDISCOMPONENT	LOG_SID_NO_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
TUN-5-RECURDOWN	5-Notice	[chars] temporarily disabled due to recursive routing	-	TUNNELDISCONNECT	LOG_SID_NO_ACTION
TUN5RECURDOWN_SRC	5-Notice	[chars] linestate down recursive source interface next output [chars]	Whilst evaluating tunnel linestate we revisited a source interface.	ip-tunnels	LOG_STD_ACTION
TUN5RECURDOWN_SRC	5-Notice	[chars] linestate down recursive source interface next output [chars]	Whilst evaluating tunnel linestate we revisited a source interface.	ip-tunnels	LOG_STD_ACTION
TUN-5-TUN_DB_IF	5-Notice	Operation on tunnel interface table failed for [chars] - [chars]	Manipulation of the tunnel interface table failed.	ip-tunnels	LOG_STD_ACTION
TUN-5-TUN_DB_IF	5-Notice	Operation on tunnel interface table failed for [chars] - [chars]	Manipulation of the tunnel interface table failed.	ip-tunnels	LOG_STD_ACTION
TUN5TUNHWDDBDEIE	5-Notice	Failed to delete hwidb for Tunnel [dec] index [dec]	Deletion of tunnel interface failed.	TUNNELDISCONNECT	LOG_STD_ACTION
TUN5TUNHWDDBDEIE	5-Notice	Failed to delete hwidb for Tunnel [dec] index [dec]	Deletion of tunnel interface failed.	TUNNELDISCONNECT	LOG_STD_ACTION
TUN5TUNHWDLISTDEIE	5-Notice	Failed to delete [chars] from tunnel hwidb list	Deletion of tunnel from hwidb list failed.	TUNNELDISCONNECT	LOG_STD_ACTION
TUN5TUNHWDLISTDEIE	5-Notice	Failed to delete [chars] from tunnel hwidb list	Deletion of tunnel from hwidb list failed.	TUNNELDISCONNECT	LOG_STD_ACTION
TUN5TUNHWDLISTNERT	5-Notice	Failed to add [chars] to tunnel hwidb list	Insertion of tunnel to hwidb list failed.	TUNNELDISCONNECT	LOG_STD_ACTION
TUN5TUNHWDLISTNERT	5-Notice	Failed to add [chars] to tunnel hwidb list	Insertion of tunnel to hwidb list failed.	TUNNELDISCONNECT	LOG_STD_ACTION
TUN5TUNHWDRECYCLE	5-Notice	Failed to recycle hwidb for Tunnel [dec] index [dec]	Recycling of tunnel interface failed.	TUNNELDISCONNECT	LOG_STD_ACTION
TUN5TUNHWDRECYCLE	5-Notice	Failed to recycle hwidb for Tunnel [dec] index [dec]	Recycling of tunnel interface failed.	TUNNELDISCONNECT	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TUN5TUN_IF_STATE_RESET	5-Notice	Failed to reset tunnel interface state for [chars]	Reset of tunnel interface failed.	TUNNELDISCOMPONENT	LOG_STD_ACTION
TUN5TUN_IF_STATE_RESET	5-Notice	Failed to reset tunnel interface state for [chars]	Reset of tunnel interface failed.	TUNNELDISCOMPONENT	LOG_STD_ACTION
TUN5TUN_LIST_CREATE	5-Notice	Failed to create tunnel list [chars]	Creation of tunnel list failed.	TUNNELDISCOMPONENT	LOG_STD_ACTION
TUN5TUN_LIST_CREATE	5-Notice	Failed to create tunnel list [chars]	Creation of tunnel list failed.	TUNNELDISCOMPONENT	LOG_STD_ACTION
TUN5TUN_SWDB_DELETE	5-Notice	Failed to delete swidb for Tunnel [dec] index [dec]	Deletion of tunnel interface failed.	TUNNELDISCOMPONENT	LOG_STD_ACTION
TUN5TUN_SWDB_DELETE	5-Notice	Failed to delete swidb for Tunnel [dec] index [dec]	Deletion of tunnel interface failed.	TUNNELDISCOMPONENT	LOG_STD_ACTION
TUN5TUN_SWDB_RECYCLE	5-Notice	Failed to recycle swidb for Tunnel [dec] index [dec]	Recycling of tunnel interface failed.	TUNNELDISCOMPONENT	LOG_STD_ACTION
TUN5TUN_SWDB_RECYCLE	5-Notice	Failed to recycle swidb for Tunnel [dec] index [dec]	Recycling of tunnel interface failed.	TUNNELDISCOMPONENT	LOG_STD_ACTION
TUN-5-TUN_TABLE	5-Notice	Operation [chars] on tunnel table failed for [chars] - [chars]	Manipulation of the tunnel table failed.	ip-tunnels	LOG_STD_ACTION
TUN-5-TUN_TABLE	5-Notice	Operation [chars] on tunnel table failed for [chars] - [chars]	Manipulation of the tunnel table failed.	ip-tunnels	LOG_STD_ACTION
TUN5TUN_UNIT_LIST_DELETE	5-Notice	Failed to delete entry unit [dec] to tunnel unit list	Deletion from tunnel unit failed.	TUNNELDISCOMPONENT	LOG_STD_ACTION
TUN5TUN_UNIT_LIST_DELETE	5-Notice	Failed to delete entry unit [dec] to tunnel unit list	Deletion from tunnel unit failed.	TUNNELDISCOMPONENT	LOG_STD_ACTION
TUN5TUN_UNIT_LIST_INSERT	5-Notice	Failed to add entry unit [dec] to tunnel unit list	Insertion of tunnel unit failed.	TUNNELDISCOMPONENT	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>TUN</del> TUNUNLISTNSRT	5-Notice	Failed to add entry unit [dec] to tunnel unit list	Insertion of tunnel unit failed.	TUNELDISCOMPONENT	LOG_STD_ACTION
TUNNELKILL3MPLS_TE	3-Error	ERRMSG_NOFLAGS	-	-	-
TUNNELKILL3MPLS_TE	3-Error	ERRMSG_NOFLAGS	-	-	-
<del>TUNSPROCD</del> TUNSPROCDPROCESSAL	3-Error	Failed to create tunnel security process	We failed to start a processes necessary to do tunnel protection.	tunnel	LOG_STD_ACTION
<del>TUNSPROCD</del> TUNSPROCDPROCESSAL	3-Error	Failed to create tunnel security process	We failed to start a processes necessary to do tunnel protection.	tunnel	LOG_STD_ACTION
TUNSS3TUN_API_ARGS	3-Error	unexpected arguments: [chars] [chars]	This API should be used only for a tunnel interface.	tunnel	LOG_STD_ACTION
TUNSS3TUN_API_ARGS	3-Error	unexpected arguments: [chars] [chars]	This API should be used only for a tunnel interface.	tunnel	LOG_STD_ACTION
<del>TUNSPROCD</del> TUNSPROCDBOUNDMODE	6-Information	Tunnel mode [chars] not supported by tunnel protection. Protection removed.	The chosen tunnel mode is not supported by tunnel protection interfaces so protection has been turned off and removed.	tunnel	"Unless protection is desired on this interface no " "action is required. If protection is desired a " "crypto-map must be used instead."
<del>TUNSPROCD</del> TUNSPROCDBOUNDMODE	6-Information	Tunnel mode [chars] not supported by tunnel protection. Protection removed.	The chosen tunnel mode is not supported by tunnel protection interfaces so protection has been turned off and removed.	tunnel	"Unless protection is desired on this interface no " "action is required. If protection is desired a " "crypto-map must be used instead."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>IPSEC</del> <del>IPV6</del> <del>DISABLE</del>	6-Information	Disabling [chars] protocol on interface [chars]	Overlay protocol is IPv4 then IPv6 address will be erased from interface and if overlay protocol is IPv6 IPv4 address will be erased from interface . This is applicable only for Virtual-Access interfaces. In case of mixed mode the protocol which is not overlay will be removed	ipsec-core	"No action required. Informational message"
<del>IPSEC</del> <del>IPV6</del> <del>DISABLE</del>	6-Information	Disabling [chars] protocol on interface [chars]	Overlay protocol is IPv4 then IPv6 address will be erased from interface and if overlay protocol is IPv6 IPv4 address will be erased from interface . This is applicable only for Virtual-Access interfaces. In case of mixed mode the protocol which is not overlay will be removed	ipsec-core	"No action required. Informational message"
<del>ET</del> <del>ANALYTICS</del> <del>FAILURE</del>	2-Critical	ET-Analytics - Failed to register IPC message handler result code [node]	QFP ET-Analytics feature failed to register an IPC message handler for communication with control plane. This will cause the feature not to function.	TVI_COMP_NAME	LOG_STD_ACTION
<del>HSL</del> <del>ADD</del> <del>DESTINATION</del> <del>FAILED</del>	3-Error	-	HSL add destination failed.	cpp-ucode	LOG_STD_ACTION
<del>HSL</del> <del>BIND</del> <del>FAILED</del>	3-Error	-	HSL bind failed.	cpp-ucode	LOG_STD_ACTION
<del>HSL</del> <del>BIND</del> <del>TEMPALTE</del> <del>FAILED</del>	3-Error	[dec]	HSL bind tempalte failed at given index.	cpp-ucode	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>TNFXMFXHICRAHED</del>	3-Error	-	HSL creation failed.	cpp-ucode	LOG_STD_ACTION
<del>TNFXMFXHLEBAHED</del>	3-Error	-	HSL enable failed.	cpp-ucode	LOG_STD_ACTION
<del>TNFXMFXHMODHED</del>	3-Error	-	HSL modify destination failed.	cpp-ucode	LOG_STD_ACTION
<del>TNFXMFXHMODHAD</del>	3-Error	-	HSL modification failed.	cpp-ucode	LOG_STD_ACTION
<del>TNFXMFXHICRAHED</del>	3-Error	ET-Analytics - Failed to get [node]bytes space for IPC reply message	QFP ET-Analytics feature detected buffer allocation failure while sending reply to a message from another layer of ET-Analytics feature's software stack.	TVI_COMP_NAME	LOG_STD_ACTION
<del>TNFXMFXHICRAHED</del>	3-Error	-	ET-Analytics Conditional Debugging Registration failed.	TVI_COMP_NAME	LOG_STD_ACTION
<del>TNFXMFXHICRAHED</del>	3-Error	ET-Analytics - Received an invalid length IPC message	QFP ET-Analytics feature received an incorrect length of IPC message from another layer of ET-Analytics feature's software stack m_enum [dec] m_subtype [dec] m_len [dec] m_flags 0x[hec] m_source [dec].	TVI_COMP_NAME	LOG_STD_ACTION
<del>TNFXMFXHICRAHED</del>	3-Error	ET-Analytics - Failed to send IPC message result code [dec]	QFP ET-Analytics feature failed to send IPC message to another layer of ET-Analytics feature's software stack.	TVI_COMP_NAME	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>TXANAL3PROCERRNA</del>	3-Error	ET-Analytics - Failed to open reply message part of IPC packet	QFP ET-Analytics feature failed to open message part of IPC packet while sending a reply to another layer of ET-Analytics feature's software stack.	TVI_COMP_NAME	LOG_STD_ACTION
<del>TXANAL3PROCERRNG</del>	3-Error	ET-Analytics - Received an unknown type code [node]IPC message	QFP ET-Analytics feature received an unknown message from another layer of ET-Analytics feature's software stack.	TVI_COMP_NAME	LOG_STD_ACTION
<del>TXANAL4HSLERRADN</del>	4-Warning	-	HSL logger already initialized	cpp-ucode	LOG_STD_ACTION
<del>TXANAL4HSLERRDNI</del>	4-Warning	%u	HSL logger not initialized	cpp-ucode	LOG_STD_ACTION
<del>TXANAL4IPCMERRDNI</del>	4-Warning	[dec]:[dec] len [dec] flags 0x[hec] source [dec]	Invalid ET-Analytics IPC message length.	cpp-ucode	LOG_STD_ACTION
TXCONN3BADLICENSEKEY	3-Error	Bad license key configured for Transaction Connection.	The license key configured with the txconn license configuration\n\ command is not valid.	txconn	"Check that the license key was entered correctly in the txconn\n\ license configuration command. Refer to the txconn feature documentation\n\ for information on how to obtain a valid license key."
TXCONN3BADMODE	3-Error	Unknown mode '[chars]' configured for server [chars]	The mode configured for the txconn server was rejected by the\n\ remote database server.	txconn	"Contact your SNA network administrator to determine the correct\n\ name of the mode to use to connect to DB2 on the remote database\n\ server."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TXCONN-3-BADRLU	3-Error	Bad remote LU '[chars]' configured for server [chars]	The remote LU configured for the txconn server is incorrect.	txconn	"Contact your SNA network administrator to determine the correct\n\n name of the remote LU for DB2 on the remote database server. Be sure to\n\n check that the SNA network name is correct as well as the LU name."
TXCONN-3-INVALIDIRANS	3-Error	Bad Transaction ID flushing out request for client [node]connected server [chars] killing connection.	Bad input stream.	txconn	"This is an informational message. " LOG_SID_NO_ACTION
TXCONN-3-NOSESSION	3-Error	Out of resource cannot create transaction for client [node]connected server [chars] killing connection.	The router is out of memory.	txconn	"This is an informational message. " LOG_SID_NO_ACTION
TXCONN-3-EXCEPTION	3-Error	Exception [chars] from transaction [chars] to [chars] from client %i	An unexpected transaction error occurred.	txconn	LOG_STD_ACTION " If possible also provide the output of the debug txconn data\n\n command and an SNA line trace between the router and the remote\n\n database server for the period during which this message appeared."
TXCONN-3-UNEXPECTEDREQ	3-Error	Unexpected client data flushing out the request for client [node]connected server [chars].	Bad input stream.	txconn	"This is an informational message. " LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
TXCONN5-CONDEIMOUT	5-Notice	Client [node]connected to server [chars] has timed out after [node].	The client was idle for too long and the idle timeout configured\n\n for the txconn server expired.	txconn	"This is an informational message only. " LOG_SID_NO_ACTION
TXCONN5-SECFAIL	5-Notice	APPC security failed client [node]using userid '[chars]' for server [chars]	The userid and/or password passed in by the client were rejected by\n\n the remote database server.	txconn	"This is an informational message only. " LOG_SID_NO_ACTION
TXCONN5-TARGEIDOWN	5-Notice	CICS server [chars] has become unavailable. Recovery is in progress.	A CICS server for a configured destination has become unavailable. All client\n\n connections to this server will be rejected until it becomes available again.	txconn	"This is an informational message only. " LOG_SID_NO_ACTION
TXCONN5-TARGETUP	5-Notice	CICS server [chars] is now available.	A CICS server that was previously unavailable has become available. All client\n\n connections to this server will now be accepted.	txconn	"This is an informational message only. " LOG_SID_NO_ACTION
TXCONN5-TRANSDIEMOUT	5-Notice	Transaction [hec] of Client [node]connected to server [chars] has timed out after [node].	The transaction was idle for too long and the idle timeout configured\n\n for the txconn server expired.	txconn	"This is an informational message only. " LOG_SID_NO_ACTION

## U to Z

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UBR7200-0-CPUCARD	0-Emergency	CMTS[dec]/[dec] Init failed CSR[dec]=0x[node]x.	Most likely Hardware failure	ubr7200	"Replace defective Line Card"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UBR7200-0-TEMPHIGH	0-Emergency	[chars] measured at [chars] is too high: shutdown temperature [chars]	Current temperature exceeds the max shutdown temperature	ubr7200	"Determine cause of the high temperature and correct if possible."
UBR7200-0-VOLTHIGH	0-Emergency	[chars] measured at [chars] is too high: shutdown voltage [chars]	Current voltage exceeds the max shutdown voltage	ubr7200	"Determine cause of the high voltage and correct if possible."
UBR7200-0-VOLTLOW	0-Emergency	[chars] measured at [chars] is too low: shutdown voltage [chars]	Current voltage exceeds the min shutdown voltage	ubr7200	"Determine cause of the low voltage and correct if possible."
UBR7200-1-DISCOVER	1-Alert	Only found [dec] interfaces on bay [dec] shutting down bay	Most likely system or hardware failure	ubr7200	"Replace Line Card"
UBR7200-2-INDEXERR	2-Critical	Index out of range during CPE MGMT data decoding	\nThe index is out of range during CPE MGMT HCCP data decoding.	ubr7200	"Contact Cisco with this log message"
UBR7200-2-LOG_CONSYS_CRI	2-Critical	[chars] logging console level to [dec] from [dec] Rate-limit level [dec] [chars].	Logging console restricted during critical situations	ubr7200	"Please run 'show logging' to view all sys-logged messages"
UBR7200-2-NOMEMORY	2-Critical	Failure to create new IPv6 entry %P	Unable to malloc a buffer to create a new entry to add Ipv6 addr	cmts-platform	"Enter a show chunks command and report the output along with this " "error message to your technical support representative."
UBR7203-ACFE_FAILURE	3-Error	[chars]	A failure occurred in ACFE algoirhtm module	cmts-qos	LOG_STD_ACTION
UBR7203-ALARM_ERROR	3-Error	[chars]	General error information.	ubr7200	"Copy the error message exactly as it appears and report it to your " "technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UBR01NADNNDKQREUMR</del>	3-Error	<del>&lt;3&gt;CMIS[DCSS]&lt;6000&gt;</del> Auth Invalid - Invalid Key Sequence Number. CM Mac Addr <[enet]>	Auth Invalid-Invalid Key Sequence Number\n	ubr7200	LOG_SID_NO_ACTION
<del>UBR01NADNKAHFCQRE</del>	3-Error	<del>&lt;3&gt;CMIS[DCSS]&lt;6000&gt;</del> Auth Invalid - MessageKey Request Authentication Failure . CM Mac Addr <[enet]>	Auth Invalid Message Authentication Failure\n	ubr7200	LOG_SID_NO_ACTION
<del>UBR01NADNNDNOMADN</del>	3-Error	<del>&lt;3&gt;CMIS[DCSS]&lt;6000&gt;</del> Auth Invalid - No Information. CM Mac Addr <[enet]>	Auth Invalid No Information\n	ubr7200	LOG_SID_NO_ACTION
<del>UBR01NADNNDNOCIM</del>	3-Error	<del>&lt;3&gt;CMIS[DCSS]&lt;6000&gt;</del> Auth Invalid - Unauthorized CM. CM Mac Addr <[enet]>	Auth Invalid Unauthorized CM\n	ubr7200	LOG_SID_NO_ACTION
<del>UBR01NADNNDNSOIE</del>	3-Error	<del>&lt;3&gt;CMIS[DCSS]&lt;6000&gt;</del> Auth Invalid - Unsolicited. CM Mac Addr <[enet]>	Auth Invalid Unsolicited\n	ubr7200	LOG_SID_NO_ACTION
<del>UBR01NADNNDNOMADN</del>	3-Error	<del>&lt;3&gt;CMIS[DCSS]&lt;6000&gt;</del> Auth Reject - No Information . CM Mac Addr <[enet]>	Auth Reject No Information\n	ubr7200	LOG_SID_NO_ACTION
<del>UBR01NADNNDNKAHFCQRE</del>	3-Error	<del>&lt;3&gt;CMIS[DCSS]&lt;6000&gt;</del> Auth Reject - Permanent Authorization Failure . CM Mac Addr <[enet]>	Auth Reject Permanent Authorization Failure\n	ubr7200	LOG_SID_NO_ACTION
<del>UBR01NADNNDNCAQRE</del>	3-Error	<del>&lt;3&gt;CMIS[DCSS]&lt;6000&gt;</del> Auth Reject - Time of Day not acquired . CM Mac Addr <[enet]>	CM Auth Rejected. TOD not acquired.	ubr7200	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UBR7203BPI_ERR_CM</del>	3-Error	<del>&lt;[dec] CM [enet] [dec]&gt;</del> Auth Reject - Unauthorized CM . CM Mac Addr <[enet]>	Auth Reject Unauthorized CM\n	ubr7200	LOG_SID_NO_ACTION
<del>UBR7203BPI_ERR_SAID</del>	3-Error	<del>&lt;[dec] CM [enet] [dec]&gt;</del> Auth Reject - Unauthorized SAID. CM Mac Addr <[enet]>	Auth Reject Unauthorized SAID\n	ubr7200	LOG_SID_NO_ACTION
UBR7203BADARPHLEIE	3-Error	Tried to remove arp entry for [node]that is not dynamic	Tried to delete non-dynamic arp entry - possible spooft attempt	ubr7200	"Look for possible CMTS IP address spoofing attempt"
UBR7203BADFININTERRUPT	3-Error	BCM3138 chip [dec] dma interrupt error.	FFT dma interrupt error occured.	ubr7200	LOG_SID_NO_ACTION
UBR7203BADFFISIAIE	3-Error	BCM3138 chip [dec] is in wrong state [dec] expected state [dec]	Impossible state has been reached.	ubr7200	LOG_SID_NO_ACTION
UBR72003BADUSPORT	3-Error	Interface [chars] U[dec] invalid highest port number is U[dec]	Upstream port number must be valid.	ubr7200	"Redo command with valid upstream port number."
UBR7203BPI_ENFORCE	3-Error	Blocking CPE=[enet] CM=[enet] sid [dec] interface [chars]: CPE blocked	CMTS glean function received blocked cpe mac addr	ubr7200	"Check for bpi-plus-policy: CPE blocked mac addr"
UBR7200-3-BPI_ERR	3-Error	[chars] [dec] [dec] [dec]	BPI Error \n	ubr10000	LOG_SID_NO_ACTION
UBR7203BPI_ERR_DCCSS	3-Error	[chars] [enet] [dec] [dec]	BPI DMP Error \n	ubr7200	"Check BPI DMP Module"
UBR7203BPI_ERR_UMP	3-Error	[chars] [enet] [dec] [dec]	BPI UMP Error \n	ubr7200	"Check BPI UMP Module"
UBR7203BUN_MCAST_INIT	3-Error	Unable to allocate memory for bundle multicast initialization.	An internal software error occured	cbr-application	LOG_SIDSHTIRH_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UBR700</del> UBR700NMC5INOREMC	3-Error	Fail to allocate free Bundle Multicast Map Entry for Bundle:[dec] Group:[node] Source:[node]IDB:[chars]	An internal software error occurred	cbr-application	LOG_SID_SH_TECH_ACTION
<del>UBR700</del> UBR700NMC5IRVMPBR	3-Error	Unable to find the Multicast Mapped Entry from reverse-mapping table for Bundle:[dec] MAC:[enet]	An internal software error occurred	cbr-application	LOG_SID_SH_TECH_ACTION
UBR7200-3-CHASSIS	3-Error	Unknown chassis model.	Data stored in midplane is bad or incomplete.	ubr7200	"Contact technical support to update your system."
<del>UBR700</del> UBR700CMCHRTCAEHR	3-Error	<133>CMTS[DOCSIS]<6001> CM Certificate Error. CM Mac Addr <[enet]>	CM Certificate error.	ubr7200	LOG_SID_NO_ACTION
<del>UBR700</del> UBR700CMCHRTCAEHR	3-Error	<133>CMTS[DOCSIS]: CM Certificate Format Error	CM Certificate Format Error \n	ubr7200	LOG_SID_NO_ACTION
<del>UBR700</del> UBR700CMCHRTCAEHR	3-Error	<133>CMTS[DOCSIS]:<0> CM Certificate Self-Verification Error	CM Certificate Self-Verification Error \n	ubr7200	LOG_SID_NO_ACTION
<del>UBR700</del> UBR700CMISQUACKAHR	3-Error	[chars]	This LC requires programmed Quack IDPROM.	ubr10000	LOG_SID_SH_TECH_ACTION
<del>UBR700</del> UBR700CMISRCRDNALUE	3-Error	RCC creation failure - ID [dec] host [chars]	RCC creation failed due to list insert failure.	cmts-docsis	LOG_SID_SH_TECH_ACTION
<del>UBR700</del> UBR700CMISRCRGNADSB	3-Error	TCC RNG on Interface [chars] with invalid SB for CM [enet]	TCC RNG could not get a valid subblock for the interface that the CM is ranged on. SW Bug.	ubr10000	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UBR7200-3-CONFIG	3-Error	Exceeds [dec] [chars]	The total bandwidth of fast and medium bandwidth port adapters exceed the rated capacity of this system.	ubr7200	"Refer to the configuration guidelines for the maximum allowed "high and medium bandwidth port adapters for the system."
UBR7200-3-DBDSPDEAD	3-Error	AWACS Slot [dec] is dead	Daughter board DSP hungs	ubr7200	"Reload image if still fail replace defective daughter board"
<del>UBR7200-3-DBDOWNCDRR1</del>	3-Error	DSP FAILED TO RESPOND TO INIT_DOWNLOAD CMD.	Failed initiating DSP downloading	ubr7200	"Reload image if still fail replace defective daughter board"
<del>UBR7200-3-DBDOWNCDRR2</del>	3-Error	Failed downloading.	Failed DSP downloading	ubr7200	"Reload image if still fail replace defective daughter board"
<del>UBR7200-3-DBDOWNCDRR3</del>	3-Error	FAILED DOWNLOADING OF DSP FW DUE TO CHECKSUM FAILURE.	Failed last step of DSP downloading	ubr7200	"Reload image if still fail replace defective daughter board"
<del>UBR7200-3-DBDOWNCDPS1</del>	3-Error	INIT DOWNLOAD OF DSP F/W PASS.	The DSP firmware download initiation was successful	ubr7200	LOG_SID_NO_ACTION
<del>UBR7200-3-DBDOWNCDPS2</del>	3-Error	DOWNLOAD OF DSP F/W SUCCESS.	The DSP firmware download was successful	ubr7200	LOG_SID_NO_ACTION
<del>UBR7200-3-DBDOWNCDPS3</del>	3-Error	END DOWNLOAD OF DSP F/W SUCCESS.	The DSP firmware end download was successful	ubr7200	LOG_SID_NO_ACTION
UBR7200-3-DBDSPERR1	3-Error	DSP SRAM failed	Daughter board hardware failure	ubr7200	"Replace defective daughter board"
UBR7200-3-DBDSPERR2	3-Error	DSP SRAM semaphore failed	Daughter board hardware failure	ubr7200	"Replace defective daughter board"
UBR7200-3-DBDSPERR3	3-Error	DSP side dual-port SRAM failed	Daughter board hardware failure	ubr7200	"Replace defective daughter board"
UBR7200-3-DBDSPERR4	3-Error	DSP FLASH memory failed	Daughter board hardware failure	ubr7200	"Replace defective daughter board"

<del>Facility-Severity-Mnemonic</del>	<del>Severity-Meaning</del>	<del>Message</del>	<del>Message-Explanation</del>	<del>Component</del>	<del>Recommended-Action</del>
UBR72003-DBDSPERR5	3-Error	DSP failed to respond to Host Handshake	Daughter board hardware failure	ubr7200	"Replace defective daughter board"
UBR72003-DBDSPERR6	3-Error	Switching to backup dsp image failed	Daughter board hardware failure	ubr7200	"Replace defective daughter board"
UBR72003-DBDSPERR7	3-Error	Switching again to regular dsp image failed	Daughter board regular image corruption failure	ubr7200	"Replace with BACKUP image"
UBR72003-DBDSPIDERR	3-Error	DSP id read 0x[hec]expect 0x[hec]	Daughter board hardware failure	ubr7200	"Replace defective daughter board"
UBR72003-DBFPGAELERR	3-Error	[chars]	XILINX FPGA download failure	ubr7200	"Reload image if still fail replace defective line card"
UBR72003-DBFPGAERR	3-Error	XILINX not up reset reg is 0x[hec]	Daughter board hardware failure	ubr7200	"Replace defective daughter board"
UBR72003-DBPLX908ERR	3-Error	Plx9050 id read 0x[hec]expect 0x[hec]	Daughter board hardware failure	ubr7200	"Replace defective daughter board"
UBR72003-DBPLX908ERR	3-Error	Plx9080 id read 0x[hec]expect 0x[hec]	Daughter board hardware failure	ubr7200	"Replace defective daughter board"
<del>UBR72003-DBDCNADHASHIME</del>	3-Error	The hash type [dec] for hash id [dec] is invalid	Software does not recognize the configured hash type	ddc	"Copy the error message exactly as it appears " "and report it to your technical services representative"
<del>UBR72003-DBDCNADSMACMAP</del>	3-Error	The node [dec] for mac-address [enet] exceeds maximum configured nodes	A mapping specified by the oui-map or mac-map commands exceeds the configured number of participant nodes	ddc	"Fix configuration"
<del>UBR72003-DBDCNADSMACMAP</del>	3-Error	The number of nodes [dec] is invalid	The number of nodes is either smaller or greater than the limits supported by the platform	ddc	"Copy the error message exactly as it appears " "and report it to your technical services representative"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UBR72003- <del>DISCOVER_FAIL</del>	3-Error	[chars]	Unable to discover physical entity	ubr7200	LOG_SID_SH_TECH_ACTION
UBR72003- <del>DIVBYZEROERR</del>	3-Error	Divide by zero attempted error [chars]	An internal software error occurred.	ubr7200	LOG_SID_SH_TECH_ACTION
UBR72003-DMIC_FAIL	3-Error	Dynamic secreta failure CM [enet] on [chars] is [chars].	Dynamic secreta failed corresponding CM is rejected/locked.	cmts-docsis	LOG_SID_NO_ACTION
UBR72003- <del>DOCSS_SYNC_SF</del>	3-Error	cminstp is NULL: [chars].	No valid cminstp is found for sid referenced in this checkpoint msg message will be dropped	ubr7200	LOG_SID_NO_ACTION
UBR72003- <del>DSFLOWNOISWENO</del>	3-Error	DS Flow Error: [chars] [enet] prim_rfid [dec] sfid [dec] wb_mode [dec] forw_chid [dec] [chars]	An internal software error occurred.	ubr7200	LOG_SID_SH_TECH_ACTION
UBR72003- <del>DSFLOWNOISWENO</del>	3-Error	DS Flow Error: [chars] [enet] prim_rfid [dec] sfid [dec] wb_mode [dec] forw_chid [dec] [chars]	-	-	-
UBR72003- <del>DSX_DUP_TRANS_ID</del>	3-Error	[chars] Err: [enet] [dec] [chars]/[chars] [dec]/[dec] [dec]/[dec]	Duplicated DSX transaction with the same ID.	cbr-application	LOG_SID_SH_TECH_ACTION
UBR72003- <del>FAN_OVERLOAD</del>	3-Error	Fan Tray overloaded fail to support the linecard at slot [dec]	The cooling power provided by the routers's fans is lower than \n\ some LCs in chassis required.	-	"Replace the fan as soon as possible or the system may shut itself \n\ down or fail to operate properly."
UBR72003-FLOW_ERR	3-Error	Flow error sfid [dec] sid [dec] CM Mac address <[enet]>	An internal software error occurred.	ubr7200	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UBR7200-3-FPSUBINIT	3-Error	Unable to create subinterface [chars] for hw interface [chars]	The system was unable to create the cable subinterface data structures	ubr7200	"Gather information about running configuration and amount of memory "in the system and file a bug"
UBR7200-3-DHCPRCOMR	3-Error	Wideband interface [chars] recovered after switchover	After a switchover or revert where the modular-host for a SPA becomes active on the standby a wideband interface on that SPA is not recovered. This is most likely due to a software problem.	cmts-redundancy	LOG_SID_SH_TECH_ACTION
UBR7200-3-DHCPREMOE	3-Error	Wideband interface [chars] removed	When the modular-host configuration for a SPA is removed a wideband interface on that SPA is not removed. This is most likely due to a software problem.	cmts-redundancy	LOG_SID_SH_TECH_ACTION
UBR7200-3-HLNGFISIAIE	3-Error	BCM3138 chip [dec] is not idle for [dec] retries	BCM3138 FFT processor stuck	ubr7200	LOG_SID_NO_ACTION
UBR7200-3-I2CERR	3-Error	[chars]	ERROR while accessing the i2c bus	ubr7200	"Error has ocured while accessing the internal bus."
UBR7200-3-I2CUPXERR	3-Error	[chars]	ERROR while accessing the Upconverter	ubr7200	"Error ocured while accesing the upconverter."
UBR7200-3-INTERCEPT	3-Error	Interface [chars] Failed to send intercept packet to server [node][dec]	An internal software error occurred.	ubr7200	LOG_SID_SH_TECH_ACTION
UBR7200-3-INVALIDBP	3-Error	<3-CMISDCSS-6000> Invalid BP Configuration Setting Value for TLV type [dec]. CM MAC Addr <[enet]>	Invalid BP Configuration Setting Value \n	ubr7200	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UBR7203NADNOEFROMR	3-Error	Invalid [chars] from interrupt level [dec]	Invalid operation from ISR context. Possible recurrence of CSCek63728	ubr7200	LOG_SID_SH_TECH_ACTION
UBR7203NADUSCHD	3-Error	Invalid Upstream Channel ID	An internal software error occurred.	cmts-docsis	LOG_SID_SH_TECH_ACTION
UBR7203IPCRECVERR	3-Error	Internal RP-CLC/CLC-CLC IPC receive error from [dec]/[dec]	Internal IPC receive error\n	ubr10000	LOG_SID_NO_ACTION
UBR7203IPDRBUHRERR	3-Error	unable to alloc buffer because percent of free memory is [dec] which is below [dec]	The IPDR feature requires memory to hold record. Since insufficient memory it might result in lost IPDR data	ubr7200	LOG_SID_SH_TECH_ACTION
UBR7203IPDRHLSYSFULL	3-Error	File [chars] cannot be created/written since filesystem is full.	The IPDR feature requires a file to be written to filesystem. Since filesystem is full it might result in lost IPDR data.	ubr7200	LOG_SID_SH_TECH_ACTION
UBR7203IPDRCMUSMGR	3-Error	The IPDR CM-US failed to get MAC domain with slot[[dec]] subslot[[dec]] slotunit[[dec]].	The IPDR CM-US failed to get MAC domain by docsisCmtsCmRegStatId	ubr7200	"Ignore this IPDR record collecting " "records at next interval."
UBR7203IPDRSIGLERR	3-Error	The IPDR failed to handle file: [chars]	The IPDR failed to handle file	ubr7200	"Check the file system "
UBR7203IPV4ADDRERR	3-Error	Host with invalid IPv4 address. Primary Interface [chars] Input Interface [chars] MAC = [enet] IP = %i	Most likely a sw error of the packet sender	ubr7200	"Check the modem and subscriber"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UBR7203IPV6ADDRERR	3-Error	Host with invalid IPv6 address. Primary Interface [chars] Input Interface [chars] MAC = [enet] IP = %P	Most likely a sw error of the packet sender	ubr7200	"Check the modem and subscriber"
UBR7203IPV6SOCKETFAIL	3-Error	IPv6 TFTP server socket	Could not open the IPv6 TFTP server socket	ubr7200	"Make sure the /"ip tftp-server /" CLI is not configured"
UBR7203JIBUPSTREAM	3-Error	JIB Upstream Queue Length or PHS Rule Failure Detected.	-	ubr7200	LOG_SID_SH_ACTION
UBR7203KEYREJECTNOINFO	3-Error	<[CMISIDCSS]> Key Reject - No Information. CM Mac Addr <[enet]>	Key Reject No Information\n	ubr7200	LOG_SID_NO_ACTION
UBR7203KEYREJECTUNAUTH	3-Error	<[CMISIDCSS]> Key Reject - Unauthorized SAID. CM Mac Addr <[enet]>	Key Reject Unauthorized SAID\n	ubr7200	LOG_SID_NO_ACTION
UBR7203L2VPNMAXLIMIT	3-Error	L2VPN XCONNECT PW max limit of [node]pseudo-wires reached.	L2VPN XCONNECT PW max limit of pseudo-wires reached.	cmmts-application	"Cannot configure anymore pseudo-wires"
UBR7203LB_DISABLED	3-Error	Disabled interface [chars]	Load balance disabled the interface because this could not move any modem in and out of it.	cbr-application	"Check if any modem can be online with this interface " "then check the path of RF channel " "and check if upstream and downstream channels are associated " "as expected in topology"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UBR701BMCDEMFALD	3-Error	Failed to move modem [enet] from [chars] to [chars].	Load balance failed to move the modem from one interface to another.	cbr-application	"Check if any other modem can be online with this interface " "then check the path of RF channel " "and check if upstream and downstream channels are associated " "as expected in topology"
UBR701BSAEPNDNGCM	3-Error	This is a pre-exist pending entry detailed information as: [enet] action 0x[hec]:0x[hec] client [dec]:[dec] count update flag [dec]	Stale pending CM exist	cbr-application	LOG_SID_SHI_TECH_ACTION
UBR703MACADDRERR	3-Error	Upstream packet from host with non unicast MAC address. Primary Interface [chars] Input Interface [chars] SID = [dec] MAC = [enet]	Most likely a sw error of the packet sender	ubr7200	"Check the modem and subscriber"
UBR703CMTSCA_MFRMERR	3-Error	<133>CMTS[DOCSIS]: CM MAC Addr <[enet]> on Interface [chars] U[dec] : [chars]	Manufacture CA Certificate Format Error \n	ubr7200	LOG_SID_NO_ACTION
UBR703CMTSDOCSISERR	3-Error	<12>CMTS[DOCSIS]<0000> Map Reject - Not Authorized for requested downstream traffic flow. CM Mac Addr <[enet]>	Map Reject - Not Authorized for requested downstream traffic flow \n	ubr7200	LOG_SID_NO_ACTION
UBR703CMTSDOCSISERR	3-Error	<12>CMTS[DOCSIS]<0000> Mapped to existing SAID. CM Mac Addr <[enet]>	Mapped to existing SAID\n	ubr7200	LOG_SID_NO_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UBR7200-3-NEW_SAID	3-Error	<B2-CM[SID]DOCSS-6070> Mapped to new SAID. CM Mac Addr <[enet]>	Mapped to new SAID \n	ubr7200	'LOG_SID_NO_ACTION'
UBR7200-3-MAX_DS_FLOW	3-Error	Maximum limit for downstream service-flows reached	The number of DS service-flows cannot exceed 50	ubr7200	LOG_SID_NO_ACTION
UBR7200-3-MAX_DS_FLOW_DYNAMIC	3-Error	Maximum limit for dynamic downstream service-flows reached	The number of dynamic DS service-flows cannot exceed 31	cbr-application	LOG_SID_NO_ACTION
UBR7200-3-MIC_CALC_FAIL	3-Error	MIC calculation failed for CM [enet] on [chars].	MIC validation failed for given CM's registration data.	cmts-docsis	LOG_SID_NO_ACTION
UBR7200-3-MONITOR	3-Error	Interface [chars] Failed to send monitored packets	An internal software error occurred.	ubr7200	LOG_SID_SH_TECH_ACTION
UBR7200-3-MONITOR_ACCESS_LIST	3-Error	Null access list	An internal software error occurred.	ubr7200	LOG_SID_SH_TECH_ACTION
UBR7200-3-MONITOR_EMPTY	3-Error	Unable to allocate packet with rx_type = [dec]	An internal software error occurred.	ubr7200	LOG_SID_SH_TECH_ACTION
UBR7200-3-NEG_PENDING	3-Error	Negative decrement of pending stats on [chars] for [enet]	An internal software error occurred.	cbr-application	LOG_SID_SH_TECH_ACTION
UBR7200-3-NOFORK	3-Error	Could not start Spectrum Management process	An internal software error occurred.	ubr7200	'LOG_SID_SH_TECH_ACTION'
UBR7200-3-NOMAC	3-Error	Can't allocate MAC address for interface [node]%u	Your system is out of available MAC addresses.	ubr7200	"Contact technical support."
UBR7200-3-NOMEM	3-Error	[chars]	An internal software error occurred.	ubr7200	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UBR72003-NOMORESIDS	3-Error	Maximum number of SIDS have been allocated for interface [chars]: CM [enet]: SID container info: start [dec] end [dec]	The Maximum number of SIDS has reached	ubr7200	"Assign Cable Modem to another Line Card"
UBR72003-NOTCMITS	3-Error	Device reported [hex]	Most likely hardware failure	ubr7200	"Replace defective hardware"
UBR72003-NULLHWIDB	3-Error	A Null hwidb prevents the acl update for a modem's associated hosts MAC [enet] SID [dec]	A failure occurred in trying to update acl for a modem's associated host	ubr10000	LOG_SID_NO_ACTION
UBR72003-NULLDBITSVIEL	3-Error	A Null sw idb prevents pxf src-vfy tables from being updated MAC [enet] SID [dec]	A failure occurred in trying to update pxf src-vfy tables	ubr10000	"Copy the error message exactly as it appears and report it to your" "technical support representative."
UBR72003-NULLMAPPIR	3-Error	Cannot send maps as current_map ptr is NULL\n ds>[hex]current_map>[hex] [chars]	This is an internal error or may indicate a memory problem.	ubr7200	"Check your available memory. If necessary " "add more memory to the system."
UBR72003-OFDMA_IUC_CHANGE_ERR	3-Error	OFDMA IUC change error: cm [enet] [chars]	RPD DPIC TE interface and controller number mismatch.	cbr-cmts-infra	LOG_STD_ACTION
UBR72003-OWNERR	3-Error	CMTS[dec]/[dec] Buffer ownership error pak=0x[hec].	Most likely hardware failure	ubr7200	"Replace defective board"
UBR72003-PA_REM_ENQ_FAL	3-Error	Enqueue of message failed slot [dec]	Enqueue of a PA removal message to an event queue failed	ubr7200	LOG_STD_ACTION
UBR72003-PA_REM_CNTRL	3-Error	[chars]	A general failure occurred in the operation of the PA removal event state machine as defined by the failure string	ubr7200	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UBR72003-PA-REMPCIERR	3-Error	PCI error address = 0x[hec]\n	An unexpected PCI error happened	ubr7200	LOG_STD_ACTION
UBR72003-KCH-NADGAE	3-Error	if_index_db is null index = [dec] gid = [dec]	PacketCable encounters invalid gate id to look up from its DB	packetcable	"SW code path errors"
UBR72003-RP-NADASGN	3-Error	Invalid SID assignment for interface: [chars] CM: [enet]	Invalid SID assignment by RP	ubr7200	"Contact Cisco TAC"
UBR72003-UNSUPPORTEDCRYPTO	3-Error	<[chars]> Unsupported Crypto Suite. CM Mac Addr <[enet]>	Unsupported Crypto Suite\n	ubr7200	LOG_SID_NO_ACTION
UBR72003-SEMCREATEFAIL	3-Error	Unable to create the semaphore	Unable to create the semaphore for non-blocking UPX access	ubr7200	LOG_SID_SHI_TECH_ACTION
UBR72003-SEMLOCKFAIL	3-Error	Unable to lock the semaphore	Unable to lock the semaphore for non-blocking UPX access	ubr7200	"Unable to read the Upconverter status Try again"
UBR72003-SIDERRORHCP	3-Error	Tried to allocate New SID during Failover for interface [chars]: CM [enet]: SID container info: start [dec] end [dec]	Allocate SID during Failover	ubr7200	"Assign Cable Modem to another Line Card"
UBR7200-3-SLOTS	3-Error	Number of slots in chassis is undefined.	Data stored in midplane is bad or incomplete.	ubr7200	"Contact technical support to update your system."
UBR72003-SNMIMALLOC	3-Error	no sufficient memory for sorted table index [dec] allocated [node] unallocated [node]	There is no enough memory to allocate for AVL tree	ubr7200	"No action needed."
UBR72003-SPIERRNRD	3-Error	SPI PENDING NO READ DATA[chars]: spistat=0x[node]x chid=0x[node]x cmd=0x[node]x	Read error on PHY chip serial communications bus.	ubr7200	"Line card is defective replace it."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
UBR7200-3-SPIERRR	3-Error	SPI PENDING READ ERROR[chars]: spistat=0x[node]x chid=0x[node]x cmd=0x[node]x	Read error on PHY chip serial communications bus.	ubr7200	"Line card is defective replace it."
UBR7200-3-SPIERRRBS	3-Error	SPI BUS READ 0x[node]x BYTES SHORT[chars]: spistat=0x[node]x chid=0x[node]x	Read error on PHY chip serial communications bus.	ubr7200	"Line card is defective replace it."
UBR7200-3-SPIERRW	3-Error	SPI PENDING WRITE ERROR[chars]: spistat=0x[node]x chid=0x[node]x cmd=0x[node]x	Write error on PHY chip serial communications bus.	ubr7200	"Line card is defective replace it."
UBR7203-SPIERRW_CHID	3-Error	Invalid Channel ID[chars]: chid=0x[node]x cmd=0x[node]x regaddr=0x[node]x	An internal software error occurred.	ubr7200	LOG_SID_SHI_TCH_ACTION
UBR7200-3-SPOOFEDIP	3-Error	Rejecting IP=[node][chars] sid [dec]: Address configured on [chars]	CMTS glean function received overlapping ip address info	ubr7200	"Check for spoofing: CPE may be using CMTS IP addr"
UBR7203-SPOOFEDMAC	3-Error	Investigating MAC=[enet] [chars] sid [dec]: Original MAC on sid [dec] [chars]	CMTS glean function received overlapping mac address info	ubr7200	"Check for spoofing: CPE may be reusing mac addr"
UBR7203-SUBCENOCM	3-Error	CM doesn't exist when CPE is online on corresponding SID [chars] mac [enet] sid [dec] hwidb [chars]	CM doesn't exist when CPE is online on corresponding SID	ubr7200	"Contact TAC support and report the error message."
UBR7203-SUBBIRENR	3-Error	Unexpected freeing Subscriber Data in interrupt context host_mac [enet] hwidb [chars]	Unexpected freeing CMTS Subscriber DB data in interrupt context	ubr7200	"Contact TAC support and report the error message."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UBR7203-3-DBNIFailure	3-Error	CMTS Subscriber DB initialization failed [chars] [chars] [chars]	CMTS Subscriber DB initialization failed	ubr7200	"Contact TAC support and report the error message."
UBR7203-3-INVALIDKEYSEQUENCE	3-Error	<[dec]>[enr] Invalid - Invalid Key Sequence Number . CM Mac Addr <[enet]>	TEK Invalid - Invalid Key Sequence Number\n	ubr7200	LOG_SID_NO_ACTION
UBR7203-3-INVALIDNOINFORMATION	3-Error	<[dec]>[enr] Invalid - No Information. CM Mac Addr <[enet]>	TEK Invalid No Information\n	ubr7200	LOG_SID_NO_ACTION
UBR7203-3-COMANYRANGELISTS	3-Error	CMTS-HCCP [chars]: Actual Rcvd ranged list sync sids [dec] # of sids saved [dec]	Size of Ranged List Sync Message received.	ubr7200	"Reduce the Number of Cable Modem Sids pre i/f"
UBR7203-3-UCDPROCERR	3-Error	CMTS UCD processing failed on [chars] U[dec] lch_state [dec] err [dec] retry [dec]	UCD update error	cmts-infra	"Check the system CPU load and reset the upstream"
UBR7203-3-UNEXPECTED	3-Error	[chars]	The specified operation failed.	-	LOG_SID_NO_ACTION
UBR7203-3-UNSUPPORTEDCRYPTOSUITE	3-Error	<[dec]>[enr] Unsupported Crypto Suite. CM Mac Addr <[enet]>	Unsupported Crypto Suite\n	ubr7200	LOG_SID_NO_ACTION
UBR7203-3-WRONGBCM3138CHIP	3-Error	BCM3138 current chip [dec] desired chip [dec]	Wrong BCM3138 chip has been selected.	ubr7200	LOG_SID_NO_ACTION
UBR7203-3-ZOMBIESID	3-Error	SID [dec] macaddr [enet] us_channel_id [node]rng_list_id [node] ds_time_stamp [node]u rngpoll_timeout [node]u now [node] last_ranging [node] [node]	SID instance didn't get cleanup after modem is gone.	ubr7200	"Call TAC and show him/her the log."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UBR7204BADDSRREG</del>	4-Warning	<B-CMISDCSS-7010> Bad Max DS Bit Rate Unsupported Setting. CM Mac Addr <[enet]>	REG REQ : Bad Max DS Bit Rate Unsupported Setting.\n	ubr7200	"Check the Config File Parameters"
<del>UBR7204BADUSRREG</del>	4-Warning	<B-CMISDCSS-7010> Bad Max US Bit Rate - Unsupported Setting. CM Mac Addr <[enet]>	REG REQ : Bad Max US Bit Rate - Unsupported Setting.\n	ubr7200	"Check the Config File Parameters"
<del>UBR7204BADNACSRREG</del>	4-Warning	<B-CMISDCSS-7010> Network Access has Invalid Parameter. CM Mac Addr <[enet]>	REG REQ : Network Access has Invalid Parameter.\n	ubr7200	"Check the Config File Parameters"
UBR7204BADREGISTRATION	4-Warning	Cable modem [enet] on interface [chars] when [chars] attempted re-registration with different QoS	Modem sent a registration request when already registered with a different QoS	ubr7200	"Modem could be attempting theft of service"
<del>UBR7204BADUSRCH</del>	4-Warning	<B-CMISDCSS-7010> Bad US CH -Overload. CM Mac Addr <[enet]>	REG REQ : Bad US CH -Overload.\n	ubr7200	"Check the Upstream Frequency"
UBR7204BADCFGFILE	4-Warning	Modem config file [chars] at [node] [chars]	Configuration file for the cable modem has problems	ubr7200	"Make sure the config file is proper"
UBR7204BADCFGFILE_V6	4-Warning	Modem config file [chars] at [node] [chars]	Configuration file for the cable modem has problems	ubr7200	"Make sure the config file is proper"
UBR7204BLAZE_HM_TEST	4-Warning	Blaze HM testcase failed. Blaze indices allocated for MD host [dec]/[dec] on the Guardian [dec]/[dec] : [dec] Blaze indices in use on the MD Host: [dec]	The blaze indices have not been deallocated on the Guardian	ubr10000	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UBR7204BPI_WARNING	4-Warning	[chars]: SID=[dec] KeySeq=0x[hec] Cable Interface <[chars]>	BPI Warning \n	ubr7200	LOG_SID_NO_ACTION
UBR7204CACHEENGINE_WARNING	4-Warning	Warning: [chars] - [dec]	Cache engine warning message.	snmpPerf	". "
UBR7204CLASSIFIER_ERROR	4-Warning	CM MAC: [chars] Classifier direction: [chars] Param code: [dec] Confirm code: [dec]	Looks like issue while admitting/activating Classifier	ubr7200	"Please look for DOCSIS message logs followed for more details"
UBR7204CLK_HWFAULT	4-Warning	Hardware Fault in Clockcard	Hardware fault in Clockcard	ubr7200	"Replace clock card"
UBR7204CMNPR_FAILURE	4-Warning	CM <[enet]> on host interface <[chars]> reported NP RF <[dec]> failure modular-cable <[chars]> CM's NP RFs <[chars]>	CMTS is configured to run script via Embedded Event Manager to handle the Cable Modem NP RF failure.	cbr-application	"Verify that Cable Modem is not experiencing wideband connectivity."
UBR7204CMFIDNOSSID	4-Warning	DSID [dec] BG: [dec] assigned to SF:[dec] already. DSID invalid on CM-[enet]	DSID assigned to SF not valid any longer. SW Bug	ubr10000	"Copy the error message exactly as it appears " "and report it to your technical services representative"
UBR7204CMLOCKED	4-Warning	Cable Modem [enet] in [chars] locked due to [chars] theft of service	Configuration file for the cable modem has problems	ubr7200	"Cable modem attempted to steal service"
UBR7204CMMARKED	4-Warning	Cable Modem [enet] in [chars] attempted theft of service	Configuration file for the cable modem has problems	ubr7200	"Cable modem attempted to steal service"
UBR7204CMNCPRMSF	4-Warning	CM [enet] does not have any primary service flows	This CM has no primary service flows	ubr7200	"NO action is required"
UBR7204CMSPGLA_FAILED	4-Warning	<B-CM[DOCSS]-6000> IPv6 Link-local address has failed DAD. Addr <[enet]>	IPv6 Link-Local has failed DAD.\n	ubr7200	"Check the modem and subscriber"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UBR7200-4-NOV6ADDR</del>	4-Warning	DHCPv6 request received with a bad src IPv6 \naddr. IP <[node] msg <[chars]>	DHCPv6 request received with a bad src IPv6 addr dropping the req\n	ubr7200	"Check the modem and subscriber"
<del>UBR7200-4-NOV6CABLE</del>	4-Warning	Card on [dec]/[dec] with l2vpn \[chars] command should be taken care of before plugging different type of card or executing \no card\ command.	Card is configured with cable l2vpn commands please take care of these configurations before plugging different type of card or executing \no card\ command.	cmts-application	."
<del>UBR7200-4-NOV6RF</del>	4-Warning	rf-power adjusted to [dec] dBmV to meet upconverter requirement.	This card has an upconverter that has different limits on rf-power. rf-power has been adjusted to meet these limits.	ubr10000	"LOG_SID_NO_ACTION"
UBR7200-4-COOKIE	4-Warning	Corrupt or missing MAC address cookie\n using random base [enet]	Data stored in midplane is bad.	ubr7200	"Contact technical support to update your system."
<del>UBR7200-4-NOV6CLASS</del>	4-Warning	<B-CMISDCSS-7010> Bad Class of Service. Invalid Class ID or out of range. CM Mac Addr <[enet]>	Bad Class of Service. Invalid Class ID or out of range.	ubr7200	LOG_SID_NO_ACTION
<del>UBR7200-4-NOV6CLASS</del>	4-Warning	<B-CMISDCSS-7010> Bad Class of Service-Unsupported class. CM Mac Addr <[enet]>	Registration Failed Bad Class of Service-Unsupported class\n	ubr7200	LOG_SID_NO_ACTION
<del>UBR7200-4-NOV6CRL</del>	4-Warning	<B-CMISDCSS-6000> Failed to retrieve CRL from [chars]	CRL not available\n	ubr7200	LOG_SID_NO_ACTION
<del>UBR7200-4-NOV6DCC</del>	4-Warning	<B-CMISDCSS-6000> DCC-ACK is rejected - Unknown transaction ID. CM MAC addr <[enet]>	DCC-ACK is rejected because of unknown transaction ID	cbr-application	LOG_SID_NO_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UR700</del> CNRSORENREF	4-Warning	DCC [enet] is aborted - No resource available on target [chars] U[dec]	No resource available on target channel for the DCC transaction	cbr-application	"Check target channel utilization"
<del>UR700</del> DCCRE2DSAE	4-Warning	<B-CMISDOCSIS-60290> DCC is rejected - DOCSIS 2.0 mode is disabled. CM MAC addr <[enet]>	DCC is rejected because DOCSIS 2.0 mode is disabled	cbr-application	LOG_SID_NO_ACTION
<del>UR700</del> CRAFFINAUE	4-Warning	<B-CMISDOCSIS-60210> DCC is rejected - Authentication failure. CM MAC addr <[enet]>	DCC is rejected because of authentication failure	cbr-application	LOG_SID_NO_ACTION
<del>UR700</del> CRDINARENDX	4-Warning	<B-CMISDOCSIS-60250> DCC is rejected - Duplicated service flow reference-ID or index in message. CM MAC addr <[enet]>	DCC is rejected because duplicated service flow reference-ID or index exists in message	cbr-application	LOG_SID_NO_ACTION
<del>UR700</del> CRMCSNPAROR	4-Warning	<B-CMISDOCSIS-60270> DCC is rejected - Message syntax error. CM MAC addr <[enet]>	DCC is rejected because of message syntax error	cbr-application	"Check the TLV and parameters setting while sending the DCC request message"
<del>UR700</del> DCCRMGT00EG	4-Warning	<B-CMISDOCSIS-60280> DCC is rejected - Message length too big. CM MAC addr <[enet]>	DCC is rejected because message length is too big	cbr-application	"Mimimize the message length to be less than 1536"
<del>UR700</del> DCCRMUREBROS	4-Warning	<B-CMISDOCSIS-60220> DCC is rejected - Multiple errors. CM MAC addr <[enet]>	DCC is rejected because of multiple errors	cbr-application	LOG_SID_NO_ACTION
<del>UR700</del> CRARMHNDONEX	4-Warning	<B-CMISDOCSIS-60260> DCC is rejected - Invalid parameter for context. CM MAC addr <[enet]>	DCC is rejected because of invalid parameter for context	cbr-application	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UBR00DCCRMNTOCCREFD</del>	4-Warning	<del>&lt;B-CMISDCCSS-60180&gt;</del> DCC is rejected permanently - DCC not supported. CM MAC addr <[enet]>	DCC is rejected permanently because DCC is not supported	cbr-application	LOG_SID_NO_ACTION
<del>UBR00DCCRMREQRCSST</del>	4-Warning	<del>&lt;B-CMISDCCSS-60200&gt;</del> DCC is rejected - Required parameter not present. CM MAC addr <[enet]>	DCC is rejected because required parameter is not present	cbr-application	"Double check the parameters while sending the DCC request message"
<del>UBR00DCCRMVOWCICND</del>	4-Warning	<del>&lt;B-CMISDCCSS-60190&gt;</del> DCC is rejected - Service flow not found. CM MAC addr <[enet]>	DCC is rejected because service flow was not found	cbr-application	LOG_SID_NO_ACTION
<del>UBR00DCCRMUSOCDRACN</del>	4-Warning	<del>&lt;B-CMISDCCSS-60210&gt;</del> DCC is rejected - Unspecified reason. CM MAC addr <[enet]>	DCC is rejected because of unspecified reason	cbr-application	LOG_SID_NO_ACTION
<del>UBR00DCCRMVBRACNE</del>	4-Warning	<del>&lt;B-CMISDCCSS-60260&gt;</del> DCC is aborted - Unable to communicate on new upstream channel. CM MAC addr <[enet]>	DCC is aborted unable to communicate on new upstream channel	cbr-application	LOG_SID_NO_ACTION
<del>UBR00DCCRMQARRMNBV</del>	4-Warning	<del>&lt;B-CMISDCCSS-60230&gt;</del> DCC arrives new channel. CM MAC addr <[enet]>	DCC arrives new channel	cbr-application	LOG_SID_NO_ACTION
<del>UBR00DCCRMQDHPARTOD</del>	4-Warning	<del>&lt;B-CMISDCCSS-60220&gt;</del> DCC departs old channel. CM MAC addr <[enet]>	DCC departs old channel	cbr-application	LOG_SID_NO_ACTION
<del>UBR00DCCRMQHAREADY</del>	4-Warning	<del>&lt;B-CMISDCCSS-60240&gt;</del> DCC is rejected - CM MAC address <[enet]> already on destination.	DCC is rejected because CM MAC address is already on destination	cbr-application	"Wait until the transaction ends. Otherwise try to move the modem on another channel."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UBR00CSPORVNEWLINE</del>	4-Warning	<B-CMISDCCS-6000> DCC response was unreceived on new channel. CM MAC addr <[enet]>	DCC response was unreceived on new channel	cbr-application	LOG_SID_NO_ACTION
<del>UBR00CSPORVOLDLINE</del>	4-Warning	<B-CMISDCCS-6000> DCC response was unreceived on old channel. CM MAC addr <[enet]>	DCC response was unreceived on old channel	cbr-application	LOG_SID_NO_ACTION
<del>UBR00CSPHCHNDLINE</del>	4-Warning	<B-CMISDCCS-6000> DCC Response is rejected - Authentication failure. CM MAC addr <[enet]>	DCC response is rejected because of authentication failure	cbr-application	LOG_SID_NO_ACTION
<del>UBR00CSPRMESYNERR</del>	4-Warning	<B-CMISDCCS-6000> DCC Response is rejected - Message syntax error. CM MAC addr <[enet]>	DCC response is rejected because of message syntax error	cbr-application	LOG_SID_NO_ACTION
<del>UBR00CSPUNKNRSCID</del>	4-Warning	<B-CMISDCCS-6000> DCC Response is rejected - Unknown transaction ID. CM MAC addr <[enet]>	DCC response is rejected because of unknown transaction ID	cbr-application	LOG_SID_NO_ACTION
<del>UBR00CSPUNSPECREAS</del>	4-Warning	<B-CMISDCCS-6000> DCC Response is rejected - Unspecified reason. CM MAC addr <[enet]>	DCC response is rejected because of unspecified reason	cbr-application	LOG_SID_NO_ACTION
UBR004DCCCFGHASHID	4-Warning	Hash id [dec] does not exist in global configuration	A hash id is configured for a cable interface but is not defined globally	ddc	"Fix configuration"
UBR00DCCENRA_ERROR	4-Warning	Error: [chars]	Catchall error message for DDC	ddc	"Copy the error message exactly as it appears " "and report it to your technical services representative"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>UBR704</del> DDC_LIST_ERROR	4-Warning	DDC list error	DDC failed to create or add element to list	ddc	"Copy the error message exactly as it appears " "and report it to your technical services representative"
<del>UBR704</del> DDC_MESSAGE_ERROR	4-Warning	DDC message error. type [dec]	DDC failed to send interprocess or IPC message	ddc	"Copy the error message exactly as it appears " "and report it to your technical services representative"
<del>UBR704</del> DDC_NDE_ERROR	4-Warning	Node id mismatch NPE: [dec] linecard: [dec]	Node id's on NPE subinterface is different than on linecard	ddc	"Copy the error message exactly as it appears " "and report it to your technical services representative"
<del>UBR704</del> DDC_PROTREQ_ERROR	4-Warning	DS frequency not configured for the protect target node [dec]	DS frequencies are not configured for all protect targets	ddc	"Fix configuration"
<del>UBR704</del> DDC_SEMAPHORE_ERROR	4-Warning	DDC semaphore released when it was not taken	DDC semaphore was not take when release was requested	ddc	"Copy the error message exactly as it appears " "and report it to your technical services representative"
<del>UBR704</del> DDC_UNEXPECTED_EVENT_ERROR	4-Warning	DDC unexpected event error [dec]	DDC received an unexpected or unsupported event	ddc	"Copy the error message exactly as it appears " "and report it to your technical services representative"
<del>UBR704</del> DDC_UNEXPECTED_MESSAGE_ERROR	4-Warning	DDC unexpected message error [dec]	DDC received an unexpected or unsupported message	ddc	"Copy the error message exactly as it appears " "and report it to your technical services representative"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UBR700DHCPACKMACHCM	4-Warning	Not update cm state for DHCP ACK Expected CM [enet] ip [node]found CM [enet] ip [node]new ip %i	Found a wrong CM during update DHCP ACK	ubr7200	LOG_SID_NO_ACTION
UBR700DHCPKTOOSHORT	4-Warning	DHCP packet is too short from [node]to [node]UDP length [dec]	A DHCP packet which is too short was received	ubr7200	LOG_SID_NO_ACTION
UBR700DLOGFULREACHD	4-Warning	[DOCSIS]<8600030>Dcs Diag Log reaches max size	Docs Diag Log Notification: log size reaches max size	ubr7200	
UBR700DLOGHITSHLTHREACHD	4-Warning	[DOCSIS]<8600010>Dcs Diag Log exceeds high threshold	Docs Diag Log Notification :log size exceeds high threshold	ubr7200	"LOG_SID_NO_ACTION"
UBR700DSAFREQCMMD	4-Warning	<3-CMIS[DOCSIS]-7000> Bad DS FREQ - Format Invalid. CM Mac Addr <[enet]>	REG REQ : Bad DS FREQ - Format Invalid .\n	ubr7200	"LOG_SID_NO_ACTION"
UBR700DSAFREQCMNSE	4-Warning	<3-CMIS[DOCSIS]-7000> Bad DS FREQ - Not in use. CM Mac Addr <[enet]>	REG REQ : Bad DS FREQ - Not in use.\n	ubr7200	"Please Check the Config File Frequency"
UBR700DSAFREQCMNED	4-Warning	<3-CMIS[DOCSIS]-7000> Bad DS FREQ - Not multiple of 62500. CM Mac Addr <[enet]>	REG REQ : Bad DS FREQ - Not multiple of 62500.\n	ubr7200	"Please Check the Config File Frequency"
UBR700DSABREQNOACK	4-Warning	<3-CMIS[DOCSIS]-8000> Service Add is aborted - No ACK. CM MAC addr <[enet]>	DSX is aborted because no ACK \n	cbr-application	LOG_SID_NO_ACTION
UBR700DSABREQNOACK	4-Warning	<3-CMIS[DOCSIS]-8000> Service Add Response is rejected - Invalid transaction ID. CM MAC addr <[enet]>	ACK is rejected because of invalid transaction ID \n	cbr-application	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UR704</del> DSA_ADD_ABORTED	4-Warning	< <del>B-CMISDCSS-80018</del> > Service Add is rejected - Add aborted. CM MAC addr <[enet]>	CM DSA message is rejected.	cbr-application	LOG_SID_NO_ACTION
<del>UR704</del> DSA_AUTHFAILURE	4-Warning	< <del>B-CMISDCSS-80012</del> > Service Add is rejected - Authorization failure. CM MAC addr <[enet]>	CM DSA is rejected because of an authorization failure.	cbr-application	LOG_SID_NO_ACTION
<del>UR704</del> DSA_CLASSFLOW	4-Warning	< <del>B-CMISDCSS-80017</del> > Service Add is rejected - Classifier for another flow. CM MAC addr <[enet]>	CM DSA is rejected because classifier is for another flow.	cbr-application	LOG_SID_NO_ACTION
<del>UR704</del> DSA_CLASSREXISTS	4-Warning	< <del>B-CMISDCSS-80011</del> > Service Add is rejected - Classifier exists. CM MAC addr <[enet]>	CM DSA is rejected because classifier already exists.	cbr-application	LOG_SID_NO_ACTION
<del>UR704</del> DSA_CLASSNOTFOUND	4-Warning	< <del>B-CMISDCSS-80010</del> > Service Add is rejected - Classifier not found. CM MAC addr <[enet]>	CM DSA is rejected because classifier was not found.	cbr-application	LOG_SID_NO_ACTION
<del>UR704</del> DSA_DUPREFIDINDEX	4-Warning	< <del>B-CMISDCSS-80014</del> > Service Add is rejected - Duplicated reference-ID or index in message. CM MAC addr <[enet]>	CM DSA is rejected because of duplicated reference ID or index.	cbr-application	LOG_SID_NO_ACTION
<del>UR704</del> DSA_SUPPRESSNOTSUPPORTED	4-Warning	< <del>B-CMISDCSS-80005</del> > Service Add is rejected - Header suppression setting not supported. CM MAC addr <[enet]>	Header suppression setting is not supported\n	cbr-application	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UR704DSAMC_HMAC_ERR</del>	4-Warning	<del>&lt;3-CMISDCSS-8000&gt;</del> Service Add is rejected - HMAC authentication failure. CM MAC addr <[enet]>	HMAC Authentication Failure \n	cbr-application	LOG_SID_NO_ACTION
<del>UR704DSAMC_DSA_ERR</del>	4-Warning	<del>&lt;3-CMISDCSS-8002&gt;</del> Service Add is rejected - Major classifier error. CM MAC addr <[enet]>	CM DSA is rejected because of a major classifier error.	cbr-application	LOG_SID_NO_ACTION
<del>UR704DSAMC_MULT_ERR</del>	4-Warning	<del>&lt;3-CMISDCSS-8002&gt;</del> Service Add is rejected - Multiple major errors. CM MAC addr <[enet]>	CM DSA is rejected because of multiple major errors.	cbr-application	LOG_SID_NO_ACTION
<del>UR704DSAMC_PHS_ERR</del>	4-Warning	<del>&lt;3-CMISDCSS-8002&gt;</del> Service Add rejected - Major PHS rule error. CM MAC addr <[enet]>	CM DSA is rejected because of a major PHS rule error.	cbr-application	LOG_SID_NO_ACTION
<del>UR704DSAMC_SF_ERR</del>	4-Warning	<del>&lt;3-CMISDCSS-8002&gt;</del> Service Add is rejected - Major service flow error. CM MAC addr <[enet]>	CM DSA is rejected because of a major service flow error.	cbr-application	LOG_SID_NO_ACTION
<del>UR704DSAMC_SN_ERR</del>	4-Warning	<del>&lt;3-CMISDCSS-8002&gt;</del> Service Add is rejected - Message syntax error. CM MAC addr <[enet]>	CM DSA is rejected because of message syntax error.	cbr-application	LOG_SID_NO_ACTION
<del>UR704DSAMC_LEN_ERR</del>	4-Warning	<del>&lt;3-CMISDCSS-8002&gt;</del> Service Add is rejected - Message too big. CM MAC addr <[enet]>	CM DSA is rejected because message length was too big.	cbr-application	LOG_SID_NO_ACTION
<del>UR704DSAMC_DS_ERR</del>	4-Warning	<del>&lt;3-CMISDCSS-8006&gt;</del> Service Add is rejected - Multiple downstream flow. CM MAC addr <[enet]>	CM DSA is rejected because of multiple DS flows.	cbr-application	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UR700</del> DSAMLIBEPCOS	4-Warning	<del>&lt;B-CMISDCSS-8000&gt;</del> Service Add is rejected - Multiple errors. CM MAC addr <[enet]>	CM DSA is rejected due to multiple errors.	cbr-application	LOG_SID_NO_ACTION
<del>UR700</del> DSAMUPSTREAM	4-Warning	<del>&lt;B-CMISDCSS-8001&gt;</del> Service Add is rejected - Multiple upstream flow. CM MAC addr <[enet]>	CM DSA is rejected because of multiple US flows.	cbr-application	LOG_SID_NO_ACTION
<del>UR700</del> DSAPARMINVALID	4-Warning	<del>&lt;B-CMISDCSS-80019&gt;</del> Service Add is rejected - Parameter invalid for context. CM MAC addr <[enet]>	CM DSA is rejected because parameter is invalid for the context.	cbr-application	LOG_SID_NO_ACTION
<del>UR700</del> DSAPERMANADMIN	4-Warning	<del>&lt;B-CMISDCSS-8000&gt;</del> Service Add is rejected - Permanent administrative. CM MAC addr <[enet]> [chars]	Permanent administrative \n	cbr-application	LOG_SID_NO_ACTION
<del>UR700</del> DSAPREACHFLOW	4-Warning	<del>&lt;B-CMISDCSS-80018&gt;</del> Service Add is rejected - PHS rule for another flow. CM MAC addr <[enet]>	CM DSA is rejected because PHS rule is for another flow.	cbr-application	LOG_SID_NO_ACTION
<del>UR700</del> DSAPHSRULEEXISTS	4-Warning	<del>&lt;B-CMISDCSS-80013&gt;</del> Service Add is rejected - PHS rule exists. CM MAC addr <[enet]>	CM DSA is rejected because the PHS rule already exists.	cbr-application	LOG_SID_NO_ACTION
<del>UR700</del> DSAPHSRULENOT	4-Warning	<del>&lt;B-CMISDCSS-80012&gt;</del> Service Add is rejected - PHS rule not found. CM MAC addr <[enet]>	CM DSA is rejected because the PHS rule was not found.	cbr-application	LOG_SID_NO_ACTION
<del>UR700</del> DSAREQUIRED	4-Warning	<del>&lt;B-CMISDCSS-80004&gt;</del> Service Add is rejected - Required parameter not present. CM MAC addr <[enet]>	Required parameter is not present\n	cbr-application	LOG_SID_NO_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UR02SARPCRENOB</del>	4-Warning	<B-CMISDCSS-8000> Service Add is aborted - No response. CM MAC addr <[enet]>	CM DSA is aborted because no response.	cbr-application	LOG_SID_NO_ACTION
<del>UR02SARMDRASCDD</del>	4-Warning	<B-CMISDCSS-8000> Service Add Response is rejected - Invalid transaction ID. CM MAC addr <[enet]>	CM DSA response is rejected because of invalid transaction ID.	cbr-application	LOG_SID_NO_ACTION
<del>UR02SARCMDCRBR</del>	4-Warning	<B-CMISDCSS-8005> Service Add Response is rejected - Major classifier error. CM MAC addr <[enet]>	CM DSA response is rejected because of a major classifier error.	cbr-application	LOG_SID_NO_ACTION
<del>UR02SARCMDCRBR</del>	4-Warning	<B-CMISDCSS-8006> Service Add Response is rejected - Major PHS rule error. CM MAC addr <[enet]>	CM DSA response is rejected because of a major PHS rule error.	cbr-application	LOG_SID_NO_ACTION
<del>UR02SARCMGTOG</del>	4-Warning	<B-CMISDCSS-8008> Service Add Response is rejected - Message length too big. CM MAC addr <[enet]>	CM DSA response is rejected because message length was too big.	cbr-application	LOG_SID_NO_ACTION
<del>UR02SARCMDCRBR</del>	4-Warning	<B-CMISDCSS-8003> Service Add Response is rejected - Invalid parameter for context. CM MAC addr <[enet]>	CM DSA response is rejected because of invalid parameter for context	cbr-application	LOG_SID_NO_ACTION
<del>UR02SARCMDCRBR</del>	4-Warning	<B-CMISDCSS-8000> Service Add Response is rejected - PHS rule exists. CM MAC addr <[enet]>	CM DSA response is rejected because the PHS rule already exist.	cbr-application	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UBR05A_SFC_HDPA_MCRSET</del>	4-Warning	<B-CMISDCSS>8006 Service Add Response is rejected - Required parameter not present. CM MAC addr <[enet]>	CM DSA response is rejected because the required parameter is not present.	cbr-application	LOG_SID_NO_ACTION
<del>UBR05A_SFC_HDPA_MCRSET</del>	4-Warning	<B-CMISDCSS>8006 Service Add Response is rejected - Unrecognized configuration setting. CM MAC addr <[enet]>	CM DSA response is rejected because of unrecognized configuration setting.	cbr-application	LOG_SID_NO_ACTION
<del>UBR05A_SFC_HDPA_MCRSET</del>	4-Warning	<B-CMISDCSS>8006 Service Add rejected - Service flow exists. CM MAC addr <[enet]>	CM DSA is rejected because service flow exists.	cbr-application	LOG_SID_NO_ACTION
<del>UBR05A_SFC_HDPA_MCRSET</del>	4-Warning	<B-CMISDCSS>8002 Service Add is rejected - Temporary no resource. CM MAC addr <[enet]> [chars]	CM DSA message is rejected due to no resources.	cbr-application	LOG_SID_NO_ACTION
<del>UBR05A_SFC_HDPA_MCRSET</del>	4-Warning	<B-CMISDCSS>8006 Service Add is rejected - Unrecognized configuration setting. CM MAC addr <[enet]>	Unrecognized configuration setting \n	cbr-application	LOG_SID_NO_ACTION
<del>UBR05A_SFC_HDPA_MCRSET</del>	4-Warning	<B-CMISDCSS>8000 Service Add is rejected - Unspecified reason. CM MAC addr <[enet]>	Unspecified reason \n	cbr-application	LOG_SID_NO_ACTION
<del>UBR05A_SFC_HDPA_MCRSET</del>	4-Warning	<B-CMISDCSS>8000 Service Change is aborted - No ACK. CM MAC addr <[enet]>	DSX is aborted because no ACK \n	cbr-application	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UR700XHEMDCSS00</del>	4-Warning	< <del>3-CMISDCSS-8020</del> > Service Change ACK is rejected - Invalid transaction ID. CM MAC addr <[enet]>	ACK is rejected because of invalid transaction ID \n	cbr-application	LOG_SID_NO_ACTION
<del>UR700XDCAUTHFAURE</del>	4-Warning	< <del>3-CMISDCSS-8020</del> > Service Change is rejected - Authorization failure. CM MAC addr <[enet]>	CM DSC is rejected because authorization failed.	cbr-application	LOG_SID_NO_ACTION
<del>UR700XCLASSRCHFLOW</del>	4-Warning	< <del>3-CMISDCSS-8021</del> > Service Change rejected - Classifier for another flow. CM MAC addr <[enet]>	CM DSC is rejected because classifier is for another flow.	cbr-application	LOG_SID_NO_ACTION
<del>UR700XCLASSREXISTS</del>	4-Warning	< <del>3-CMISDCSS-8021</del> > Service Change is rejected - Classifier exists. CM MAC addr <[enet]>	CM DSC is rejected because classifier has been exist.	cbr-application	LOG_SID_NO_ACTION
<del>UR700XCLASSNOTFOUND</del>	4-Warning	< <del>3-CMISDCSS-8020</del> > Service Change is rejected - Classifier not found. CM MAC addr <[enet]>	CM DSC is rejected because classifier is not found.	cbr-application	LOG_SID_NO_ACTION
<del>UR700XDUPLAEREDINDEX</del>	4-Warning	< <del>3-CMISDCSS-8024</del> > Service Change is rejected - Duplicated reference-ID or index in message. CM MAC addr <[enet]>	CM DSC is rejected because of duplicated reference ID or index.	cbr-application	LOG_SID_NO_ACTION
<del>UR700XHASISNOTSUPPORTED</del>	4-Warning	< <del>3-CMISDCSS-8027</del> > Service Change is rejected - Header suppression setting not supported. CM MAC addr <[enet]>	Header suppression setting is not supported\n	cbr-application	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UR7ES</del> HMACHENONLE	4-Warning	< <del>B-CMIS</del> DCSS-8002> Service Change is rejected - HMAC authorization failure. CM MAC addr <[enet]>	HMAC Authentication Failure \n	cbr-application	LOG_SID_NO_ACTION
<del>UR7ES</del> CMDCIASERRR	4-Warning	< <del>B-CMIS</del> DCSS-8002> Service Change is rejected - Major classifier error. CM MAC addr <[enet]>	CM DSC is rejected because major classifier error.	cbr-application	LOG_SID_NO_ACTION
<del>UR7ES</del> CMDCMUEHROS	4-Warning	< <del>B-CMIS</del> DCSS-8002> Service Change is rejected - Multiple major errors. CM MAC addr <[enet]>	CM DSC is rejected because of mulitple major errors.	cbr-application	LOG_SID_NO_ACTION
<del>UR7ES</del> CMDCPSUEHRRR	4-Warning	< <del>B-CMIS</del> DCSS-8002> Service Change is rejected - Major PHS rule error. CM MAC addr <[enet]>	CM DSC is rejected because major PHS rule error.	cbr-application	LOG_SID_NO_ACTION
<del>UR7ES</del> CMDCPSMCMERRR	4-Warning	< <del>B-CMIS</del> DCSS-8002> Service Change is rejected - Major service flow error. CM MAC addr <[enet]>	CM DSC is rejected because service flow error.	cbr-application	LOG_SID_NO_ACTION
<del>UR7ES</del> CMDCSNAXERRR	4-Warning	< <del>B-CMIS</del> DCSS-8002> Service Change is rejected - Message syntax error. CM MAC addr <[enet]>	CM DSC is rejected because message syntax error.	cbr-application	LOG_SID_NO_ACTION
UR704DCMGT00EG	4-Warning	< <del>B-CMIS</del> DCSS-8002> Service Change is rejected - Message too big. CM MAC addr <[enet]>	CM DSC is rejected because message length is too big.	cbr-application	LOG_SID_NO_ACTION
<del>UR7ES</del> MUHL0WSEAMCOW	4-Warning	< <del>B-CMIS</del> DCSS-8002> Service Change is rejected - Multiple downstream flow. CM MAC addr <[enet]>	CM DSC is rejected because of mulitple DS flows.	cbr-application	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UBR704</del> CM_MULTIPERRCS	4-Warning	<del>&lt;B3CMISDCCSS80029&gt;</del> Service Change is rejected - Multiple errors. CM MAC addr <[enet]>	CM DSC is rejected because multiple errors have already occurred.	cbr-application	LOG_SID_NO_ACTION
<del>UBR704</del> CM_MULTIFRAMEFLOW	4-Warning	<del>&lt;B3CMISDCCSS80029&gt;</del> Service Change is rejected - Multiple upstream flow. CM MAC addr <[enet]>	CM DSC is rejected because of multiple US flows.	cbr-application	LOG_SID_NO_ACTION
<del>UBR704</del> CM_INVALIDCONTEXT	4-Warning	<del>&lt;B3CMISDCCSS80029&gt;</del> Service Change rejected - Invalid parameter for context. CM MAC addr <[enet]>	CM DSC rejected because of invalid parameter for context.	cbr-application	LOG_SID_NO_ACTION
<del>UBR704</del> CM_PERMANADMINRE	4-Warning	<del>&lt;B3CMISDCCSS80029&gt;</del> Service Change is rejected - Permanent administrative. CM MAC addr <[enet]> [chars]	Permanent administrative \n	cbr-application	LOG_SID_NO_ACTION
<del>UBR704</del> CM_PHSRULEFLOW	4-Warning	<del>&lt;B3CMISDCCSS80028&gt;</del> Service Change is rejected - PHS rule for another flow. CM MAC addr <[enet]>	CM DSC is rejected because PHS rule is for another flow.	cbr-application	LOG_SID_NO_ACTION
<del>UBR704</del> CM_PHSRULEEXISTS	4-Warning	<del>&lt;B3CMISDCCSS80023&gt;</del> Service Change is rejected - PHS rule exists. CM MAC addr <[enet]>	CM DSC is rejected because PHS rule exists.	cbr-application	LOG_SID_NO_ACTION
<del>UBR704</del> CM_PHSRULECFOND	4-Warning	<del>&lt;B3CMISDCCSS80022&gt;</del> Service Change is rejected - PHS rule not found. CM MAC addr <[enet]>	CM DSC is rejected because PHS rule can't be found.	cbr-application	LOG_SID_NO_ACTION
<del>UBR704</del> CM_REQUESTOROWNER	4-Warning	<del>&lt;B3CMISDCCSS80004&gt;</del> Service Change is rejected - Requestor not the owner of service flow. CM MAC addr <[enet]>	Requestor is not the owner of service flow\n	cbr-application	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UBRISPRMHCORPST</del>	4-Warning	<del>&lt;B-CMSPDCSS-8002&gt;</del> Service Change is rejected - Required parameter not present. CM MAC addr <[enet]>	Required parameter is not present\n	cbr-application	LOG_SID_NO_ACTION
<del>UBRISPRABRDNORP</del>	4-Warning	<del>&lt;B-CMSPDCSS-8002&gt;</del> Service Change is aborted - No response. CM MAC addr <[enet]>	CM DSC is aborted because no response.	cbr-application	LOG_SID_NO_ACTION
<del>UBRISPRVDRNSCDD</del>	4-Warning	<del>&lt;B-CMSPDCSS-8002&gt;</del> Service Change Response is rejected - Invalid transaction ID. CM MAC addr <[enet]>	CM DSC response is rejected because of an invalid transaction ID.	cbr-application	LOG_SID_NO_ACTION
<del>UBRISPRMHVDCOXT</del>	4-Warning	<del>&lt;B-CMSPDCSS-8002&gt;</del> Service Change Response is rejected - Invalid parameter for context. CM MAC addr <[enet]>	CM DSC response is rejected because of invalid parameter for context.	ubr7200	LOG_SID_NO_ACTION
<del>UBRISPRHCFORHUE</del>	4-Warning	<del>&lt;B-CMSPDCSS-8002&gt;</del> Service Change Response is rejected - HMAC authorization failure. CM MAC addr <[enet]>	CM DSA response is rejected because of authorization failure.	cbr-application	LOG_SID_NO_ACTION
<del>UBRISPRHDIRHIDNX</del>	4-Warning	<del>&lt;B-CMSPDCSS-8002&gt;</del> Service Change Response is rejected - Duplicated reference-ID or index in message. CM MAC addr <[enet]>	CM DSC response is rejected because of duplicated reference ID or index.	cbr-application	LOG_SID_NO_ACTION
<del>UBRISPRHMAHCHRR</del>	4-Warning	<del>&lt;B-CMSPDCSS-8002&gt;</del> Service Change Response is rejected - Major classifier error. CM MAC addr <[enet]>	CM DSC response is rejected because of a major classifier error.	cbr-application	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UBR3SRFCMADPHRR</del>	4-Warning	<del>&lt;3-CMISDSCSS-8002&gt;</del> Service Change Response is rejected - Major PHS rule error. CM MAC addr <[enet]>	CM DSC response is rejected because of a major PHS error.	cbr-application	LOG_SID_NO_ACTION
<del>UBR3SRFCMSYMR</del>	4-Warning	<del>&lt;3-CMISDSCSS-8003&gt;</del> Service Change Response is rejected - Message syntax error. CM MAC addr <[enet]>	CM DSC response is rejected because of a message syntax error.	cbr-application	LOG_SID_NO_ACTION
<del>UBR3SRFCMSGTGG</del>	4-Warning	<del>&lt;3-CMISDSCSS-8005&gt;</del> Service Change Response is rejected - Message too big. CM MAC addr <[enet]>	CM DSC response is rejected because message length was too big.	cbr-application	LOG_SID_NO_ACTION
<del>UBR3SRFCIPRLES</del>	4-Warning	<del>&lt;3-CMISDSCSS-8009&gt;</del> Service Change Response is rejected - PHS rule exists. CM MAC addr <[enet]>	CM DSC response is rejected because of a major PHS rule error.	cbr-application	LOG_SID_NO_ACTION
<del>UBR3SRFCQAPMRF</del>	4-Warning	<del>&lt;3-CMISDSCSS-8006&gt;</del> Service Change Response is rejected - Required parameter not present. CM MAC addr <[enet]>	CM DSC response is rejected because the required parameter not present.	cbr-application	LOG_SID_NO_ACTION
<del>UBR3SRFCOECMDRSG</del>	4-Warning	<del>&lt;3-CMISDSCSS-8005&gt;</del> Service Change response is rejected - Unrecognized configuration setting. CM MAC addr <[enet]>	CM DSC response is rejected because of unrecognized configuration setting.	cbr-application	LOG_SID_NO_ACTION
<del>UBR3SRFCMNCI0ND</del>	4-Warning	<del>&lt;3-CMISDSCSS-8005&gt;</del> Service Change is rejected - Service flow not found. CM MAC addr <[enet]>	Service flow is not found\n	cbr-application	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UBR3CMNORE</del>	4-Warning	<del>&lt;B-CMISDSCSS-8000&gt;</del> Service Change is rejected - Temporary no resource. CM MAC addr <[enet]> [chars]	CM DSC is rejected because of no resource.	cbr-application	LOG_SID_NO_ACTION
<del>UBR3CONECONFMSG</del>	4-Warning	<del>&lt;B-CMISDSCSS-8000&gt;</del> Service Change is rejected - Unrecognized configuration setting. CM MAC addr <[enet]>	Unrecognized configuration setting \n	cbr-application	LOG_SID_NO_ACTION
<del>UBR3CUNSPREASON</del>	4-Warning	<del>&lt;B-CMISDSCSS-8000&gt;</del> Service Change is rejected - Unspecified reason. CM MAC addr <[enet]>	Unspecified reason \n	cbr-application	LOG_SID_NO_ACTION
<del>UBR3HMACFAILURE</del>	4-Warning	<del>&lt;B-CMISDSCSS-8000&gt;</del> Service Delete is rejected - HMAC authorization failure. CM MAC addr <[enet]>	HMAC authentication failure \n	cbr-application	LOG_SID_NO_ACTION
<del>UBR3CMMSGNERR</del>	4-Warning	<del>&lt;B-CMISDSCSS-8000&gt;</del> Service Delete is rejected - Message syntax error. CM MAC addr <[enet]>	CM DSD is rejected because of message syntax error.	cbr-application	LOG_SID_NO_ACTION
<del>UBR3CQISRCOWNER</del>	4-Warning	<del>&lt;B-CMISDSCSS-8000&gt;</del> Service Delete is rejected - Requestor not the owner of service flow. CM MAC addr <[enet]>	Requestor is not the owner of service flow \n	cbr-application	LOG_SID_NO_ACTION
<del>UBR3CQISRCID</del>	4-Warning	<del>&lt;B-CMISDSCSS-8000&gt;</del> Service Delete Response is rejected - Invalid transaction ID. CM MAC addr <[enet]>	DSD response is rejected because of invalid transaction ID \n	cbr-application	LOG_SID_NO_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UBR7204SVC_FLOW_NOT_FOUND	4-Warning	<B>CM MAC [dec] [enet]</B> Service Delete is rejected - Service flow not found. CM MAC addr <[enet]>	Service flow was not found\n	cbr-application	LOG_SID_NO_ACTION
UBR7204SVC_FLOW_REASON	4-Warning	<B>CM MAC [dec] [enet]</B> Service Delete is rejected - Unspecified reason. CM MAC addr <[enet]>	Unspecified reason \n	cbr-application	LOG_SID_NO_ACTION
UBR7204DSID_DUPLICATE	4-Warning	Duplicate DSID [dec]/[dec]/[dec]: [dec] detected	Detected an attempt to enqueue a duplicate DSID. SW Bug	ubr10000	"Copy the error message exactly as it appears " "and report it to your technical services representative"
UBR7204DSX_MSG_ERROR	4-Warning	CM MAC: [chars] MSG type: [chars] Error code: [dec] MSG: [chars].	Received invalid DSX message.	cbr-application	"Please turn on debug to see more detailed DSX messages."
UBR7204DSX_RESTORE_FAIL	4-Warning	DSX restore classifier state fail when try to restore state. CM MAC addr <[enet]>	DSX restore classifier state fail.	cbr-application	LOG_SID_NO_ACTION
UBR7204DSX_RESTORE_INVALID_ID	4-Warning	Invalid classifier ID was found when DSX restore classifier state. CM MAC addr <[enet]>	DSX restore classifier state because invalid classifier ID was found.	cbr-application	LOG_SID_NO_ACTION
UBR7204DUP_IPV6_MAC	4-Warning	Duplicate IPv6 Address [node]in [chars] Sid [dec] MAC:[enet]. Dup Original Sid [dec]	Duplicate IPv6 Address found with different sid.	ubr7200	LOG_SID_NO_ACTION
UBR7204DUPLICATE_MAC	4-Warning	Cable modem [enet] is online on both interface [chars] and interface [chars].	The cable modem has been detected on two interfaces.	ubr7200	"Check for cable modems with duplicate MAC addresses."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UBR700ENMISCHLOAD	4-Warning	Power supply may be overloaded to support the line card installed in slot [dec]	The power supply may be insufficient to support the number of line \n\ cards installed in the system under certain operation conditions \n\ like high temperature and high voltage margining.	-	"Upgrade the power supply as soon as possible or the system may \n\ fail to operation properly under some certain operation conditions."
UBR7004GRD_UNAVAIL	4-Warning	Unable to reach Card [dec]/[dec] for Modular-host services	The Guardian card is down or the IPC to the Guardian card is down	ubr10000	"Make sure the card selected to be Modular-host is "operational or change the relevant Modular-host config to" "use an operational card."
<del>UBR7200ENMISCHLOAD</del>	4-Warning	<del>&lt;B-CMISDCSS-7006&gt;</del> REG REQ rejected Header suppression setting not supported. CM Mac Addr <[enet]>	<del>&lt;B-CMISDCSS-7006&gt;</del> Header suppression setting not supported\n	ubr7200	LOG_SID_NO_ACTION
<del>UBR7200VALDCONTRN</del>	4-Warning	<del>&lt;B-CMISDCSS-7009&gt;</del> Bad Class of Service- Invalid Configuration. CM Mac Addr <[enet]>	<del>&lt;B-CMISDCSS-7009&gt;</del> Registration Failed Bad Class of Service\n	ubr7200	LOG_SID_NO_ACTION
<del>UBR7200MAXDSBTRM</del>	4-Warning	<del>&lt;B-CMISDCSS-7010&gt;</del> Bad Max DS bit - Invalid format. CM Mac Addr <[enet]>	<del>&lt;B-CMISDCSS-7010&gt;</del> Registration Failed Bad Max Downstream bit has invalid format.\n	ubr7200	LOG_SID_NO_ACTION
<del>UBR7200MAXUSBTRM</del>	4-Warning	<del>&lt;B-CMISDCSS-7013&gt;</del> Bad Max US Bit - Invalid format. CM Mac Addr <[enet]>	<del>&lt;B-CMISDCSS-7013&gt;</del> Registration Failed Bad Max Upstream bit Rate has invalid format.\n	ubr7200	LOG_SID_NO_ACTION
<del>UBR7200MAXUSBTRM</del>	4-Warning	<del>&lt;B-CMISDCSS-7016&gt;</del> Bad Max US CH Transmit Burst Configuration setting - Invalid format. CM Mac Addr <[enet]>	<del>&lt;B-CMISDCSS-7016&gt;</del> CM Max US channel transmit burst type invalid format.	ubr7200	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UBR72004INBRM</del>	4-Warning	<B-CMISDCSS-70150> Bad Guaranteed MIN US Channel bit Rate Configuration setting - Invalid format. CM Mac Addr <[enet]>	Guaranteed Minimum Upstream Rate format invalid.	ubr7200	LOG_SID_NO_ACTION
<del>UBR72004INBRM</del>	4-Warning	<B-CMISDCSS-70170> Invalid Modem Capabilities configuration setting . CM Mac Addr <[enet]>	CM Capabilities config value contains an invalid format.	ubr7200	LOG_SID_NO_ACTION
UBR72004INVALID_SID	4-Warning	<B-CMISDCSS-70000> REG REQ has Invalid SID or not in use. CM Mac Addr <[enet]>	REG REQ has Invalid SID or not in use\n	ubr7200	LOG_SID_NO_ACTION
<del>UBR72004INBRM</del>	4-Warning	<B-CMISDCSS-70060> Bad US CH - Invalid or Unassigned. CM Mac Addr <[enet]>	REG REQ : Bad US CH - Invalid or Unassigned.\n	ubr7200	"Please Check the upstream Channel Frequency"
<del>UBR72004INBRM</del>	4-Warning	<B-CMISDCSS-70140> Bad US Priority Configuration - Invalid format. CM Mac Addr <[enet]>	Registration Failed Upstream Priority Format has invalid format.	ubr7200	LOG_SID_NO_ACTION
<del>UBR72012CPDR</del>	4-Warning	Enqueue error for CPETYPE event. [chars] Q size [dec]	Too many IPDR CPETYPE events generated in a moment	ubr10000	"If there are a lot of memory leaks" " do PRE switchover."
<del>UBR72012CPDR</del>	4-Warning	ERROR: CM [enet] [chars] Top Level CMIM TLV does not exclude eCM	Top Level CMIM TLV does not exclude eCM	cmts-application	"Check CM config file"
<del>UBR72012CPDR</del>	4-Warning	ERROR: CM [enet] [chars] Matching TopLevel L2VPNID not found for DS-CFR	Matching TopLevel L2VPNID not found for DS-CFR	cmts-application	"Check CM config file"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UR</del> DPNDRCEVADR	4-Warning	ERROR: CM [enet] [chars] Multiple L2VPN TLV with same vlanid at top level	Multiple L2VPN TLV with same vlanid at top level	cmts-application	"Check CM config file"
<del>UR</del> DPNDRCEABD	4-Warning	L2VPN enabled without enabling BPI+ or 1.0 CM [enet] [chars]	Encryption not enabled for L2VPN CM	cmts-application	"Check CM config file"
<del>UR</del> DPNDRCEBCCR	4-Warning	ERROR: CM [enet] [chars] Bkup disable delay and never disable bkup both configured	Both TLVs cannot be configured	cmts-application	"Check CM config file"
<del>UR</del> DPNDRCEBDD	4-Warning	ERROR: CM [enet] [chars] Too many backup peers	Too many backup peers	cmts-application	"Check CM config file"
<del>UR</del> DPNDRCEBCCR	4-Warning	ERROR: CM [enet] [chars] Incorect or missing priority for backup peer	Priority incorrect or missing for backup peer	cmts-application	"Check CM config file"
<del>UR</del> DPNDRCEBCCR	4-Warning	ERROR: CM [enet] [chars] MPLS PW TYPE TLV invalid at top level	MPLS PW TYPE TLV invalid at top level	cmts-application	"Check CM config file"
<del>UR</del> DPNDRCEBCCR	4-Warning	ERROR: CM [enet] [chars] MPLS PEER IPADDR TLV invalid at top level	MPLS PEER IPADDR TLV invalid at top level	cmts-application	"Check CM config file"
<del>UR</del> DPNDRCEBCCR	4-Warning	ERROR: CM [enet] [chars] MPLSPEERNAME TLV length invalid	MPLSPEERNAME TLV length invalid	cmts-application	"Check CM config file"
<del>UR</del> DPNDRCEBCCR	4-Warning	ERROR: CM [enet] [chars] Multiple L2VPN TLV with same vpid at top level	Multiple L2VPN TLV with same vpid at top level	cmts-application	"Check CM config file"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UR7021</del> VPNDUPLAERROR	4-Warning	ERROR: CM [enet] [chars] VLANID and MPLSPEER TLV both present at top level	VLANID and MPLSPEER TLV both present at top level	cmts-application	"Check CM config file"
<del>UR7022</del> VPNSMISERROR	4-Warning	ERROR: CM [enet] [chars] VLANID or MPLSPEER TLV missing at top level	VLANID or MPLSPEER TLV missing at top level	cmts-application	"Check CM config file"
UR7204L2VPN_TLVERR	4-Warning	L2VPN XCONNECT PW Cable Modem CM config file TLV Error.	L2VPN XCONNECT PW TLV Error VCID or SAII or TAII not valid	cmts-application	"Check CM config file"
<del>UR7023</del> VPNSCOMPERROR	4-Warning	ERROR: CM [enet] [chars] Matching TopLevel L2VPNID not found for US-SF	Matching TopLevel L2VPNID not found for US-SF	cmts-application	"Check CM config file"
<del>UR7024</del> VPNDVSAERROR	4-Warning	ERROR: CM [enet] [chars] VCID or TAII & SAII TLV missing or out-of-range	VCID or TAII & SAII TLV missing or out-of-range	cmts-application	"Check CM config file"
<del>UR7025</del> VPNDVMSERROR	4-Warning	ERROR: CM [enet] [chars] VPNID TLV missing at top level	VPNID TLV missing at top level	cmts-application	"Check CM config file"
<del>UR7026</del> CBMISDUPENRY	4-Warning	Duplicated CM [enet] in CM List 0x[hec] group [dec]	Duplicated entries in CM lists. No operational impact.	cbr-application	LOG_SID_NO_ACTION
<del>UR7027</del> CBMISMATCHENRY	4-Warning	CM [enet] on CM List 0x[hec] group [node]action [node]not matched the	Entry in CM list seen at different position than expected . There is no operational impact	cbr-application	LOGSIDSHTECHACTION
<del>UR7028</del> CBMIFMDGROUPD	4-Warning	The CM [enet] MD [chars] LBLoad Balance group [dec] is not found in load balance database	The CM is assigned to an invalid load-balance group. No operational impact.	cbr-application	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UBR7200</del> UBR7200CNOIORNE	4-Warning	LBLoad Balance Counter out of range: group [node]MD [chars] [chars] chan [node]CM [enet]	LB modem counter is out of decrements range.	cbr-application	LOG_SID_NO_ACTION
<del>UBR7200</del> UBR7200CMTISENRCMU	4-Warning	Local MTU [node]is lower than remote MTU [node] PW cannot come up.	Local MTU is lower than remote MTU PW cannot come up	cmts-application	"Check the peer MTU"
UBR7200MACBLKSIZE	4-Warning	Unknown MAC address block size.	Data stored in midplane is bad or incomplete.	ubr7200	"Contact technical support to update your system."
<del>UBR7200</del> UBR7200CSADMCRDLE	4-Warning	Multicast Service flow creation failed - group [chars] source [chars] host Interface [chars]	service flow creation failure due to admission control check.	cbr-application	"Adjust the min-rate parameter mentioned" " as part of the service class"
<del>UBR7200</del> UBR7200CSDBMNRACHD	4-Warning	Multicast DB full new entry not created - max [node]group [chars] source [chars] fwd Interface [chars] bundle [chars]	Multicast explicit tracking DB entry creation failed due to max limit reached	cbr-application	"Reduce Static IGMP multicast config or wait for" "Dynamic IGMP OR PCMM multicast clients to leave"
<del>UBR7200</del> UBR7200CSMNRACHD	4-Warning	Multicast SID full new entry not created - max [node]Bundle Interface [chars]	Multicast sid allocation failed due to max mcst sid limit reached	cbr-application	"Remove multicast qos or " "change single mqos to aggregate mqos"
<del>UBR7200</del> UBR7200ERRNOISSSIG	4-Warning	No file system [chars] can be used for sflog file.	Cannot find a suitable file system to store sflog file.	ubr7200	"Please check whether tmp disk" " is ready or full."
<del>UBR7200</del> UBR7200ERRNOISSSIG	4-Warning	<B>CMISDCSS</B> Bad Guaranteed Min US Channel Bit Rate Configuration setting - Exceed Max US Bit Rate. CM Mac Addr <[enet]>	CM MIN Upstream Channel Bit Rate exceeds maximum value.	ubr7200	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UBR7204CNHRRDREQ</del>	4-Warning	<B>CMTS[DOCSIS-7015]> Bad Guaranteed Min US CH Bit rate Configuration setting - Out of Range. CM Mac Addr <[enet]>	REG REQ : Bad Guaranteed Min US CH Bit rate Configuration setting - Out of Range.\n	ubr7200	"Check the Config File Parameters"
<del>UBR7204CHROFDSKME</del>	4-Warning	<132>CMTS[DOCSIS]: Misconfigured BPI Setting: gracetime Type [dec] is longer than 50[node]of lifetime. CM MAC Addr <[enet]>	Misconfigured BPI Configuration Setting Value \n	ubr7200	"Please inspect the configuration file"
<del>UBR7204CHROFDMEDME</del>	4-Warning	<132>CMTS[DOCSIS]: Misconfigured BPI Setting: [chars] Type [dec] is longer than revocation timeout value. CM MAC Addr <[enet]>	Misconfigured BPI Configuration Setting Value \n	ubr7200	"Please inspect the configuration file"
<del>UBR7204MARCNONHALS</del>	4-Warning	MTA Modem [enet] in [chars] to come online on a non-HA capable DS	CMTS can not move the MTA to a DS that is HA capable after 3 trials	ubr7200	LOG_SID_NO_ACTION
<del>UBR7204RANGREQISS</del>	4-Warning	<B>CMTS[DOCSIS-8000]> No Ranging Requests received from POLLED CM Mac Addr <[enet]> CMTS generated polls	No Ranging Requests received from POLLED CM CMTS generated polls\n	ubr7200	"Please look for possible noise or other RF plant " "problems on the upstream channel"
<del>UBR7204RANGREQMISD</del>	4-Warning	<B>CMTS[DOCSIS-8000]> Failed to receive Periodic RNG-REQ from modem [chars] timing-out SID	Failed to receive Periodic RNG-REQ from modem SID X timing-out SID\n	ubr7200	"LOG_SID_NO_ACTION"
UBR7204NOCFGFILE	4-Warning	Cannot read modem config file [chars] from [node] [chars]	Configuration file for the cable modem cannot be read	ubr7200	"Make sure the config file is accesable to the CMTS"
UBR7204NOCFGFILE_V6	4-Warning	Cannot read modem config file [chars] from [node] [chars]	Configuration file for the cable modem cannot be read	ubr7200	"Make sure the config file is accesable to the CMTS"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UBR72004NOCPUVER	4-Warning	Invalid CPU ID assuming revision 1	CPU Revision ID is unreadable.	ubr7200	"Update CPU board."
UBR72004NOLEARNABLE	4-Warning	New address of CPE [enet] behind modem [enet] on interface [chars] is ignored: [chars]. Count [dec]	The CPE is not learnable due to provisioning.	ubr7200	"Provisioning failure. Please check configuration"
UBR72004OACKERROR	4-Warning	TFTP Option Negotiation Error for [chars] file at [node] [chars]	TFTP OACK packet is malformed or wrong options appended	ubr7200	"Make sure TFTP Server supports TFTP Options"
UBR72004OACKERROR_V6	4-Warning	TFTP Option Negotiation Error for [chars] file at [node] [chars]	TFTP OACK packet is malformed or wrong options appended	ubr7200	"Make sure TFTP Server supports TFTP Options"
UBR72004OCSPOKING	4-Warning	<3-CMISDCSS-600> Failed to retrieve OCSF status	OCSP not available\n	ubr7200	LOG_SID_NO_ACTION
UBR72004OCSFERR	4-Warning	<3-CMISDCSS-7018> Configuration file contains parameter with the value outside of the range. CM Mac Addr <[enet]>	CM config file parameter contains an out of range parameter.	ubr7200	LOG_SID_NO_ACTION
UBR72004OCSFERR	4-Warning	<3-CMISDCSS-7016> Bad Max US CH Transmit Burst Configuration setting - Out of Range. CM Mac Addr <[enet]>	CM Max US channel transmit burst setting out of range.	ubr7200	LOG_SID_NO_ACTION
UBR72004OCSFERR	4-Warning	<3-CMISDCSS-7014> Bad US Priority Configuration - Setting out of Range. CM Mac Addr <[enet]>	Out of Range US Traffic Priority Value.	ubr7200	LOG_SID_NO_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UBR72004OVERLAP_IPV4	4-Warning	MAC [enet] on interface [chars] SID [dec] attempting to use [node] This address is already in use by MAC [enet] on interface [chars] SID [dec]	There might be an IPv4 spoofing attempt going on.	ubr7200	"Look for possible spoofing attempt"
UBR72004OVERLAP_IPV6	4-Warning	MAC [enet] on interface [chars] SID [dec] attempting to use [node] This address is already in use by MAC [enet] on interface [chars] SID [dec]	There might be an IPv6 spoofing attempt going on.	ubr7200	"Look for possible spoofing attempt"
UBR72004PHS_ERROR	4-Warning	CM MAC: [chars] PHS_ERROR Param code: [dec] Confirm code: [dec]	Looks like issue with PHS header	ubr7200	"Please look for DOCSIS message logs followed for more details"
UBR72004RECALLED_NPE	4-Warning	Old version NPE-175/225 with Rev = 0x[node]x system controller. Contact <a href="mailto:upgrades-info@cisco.com">upgrades-info@cisco.com</a> for replacement	NPE board has been recalled due to an errata in the system controller chip.	ubr7200	"Replace NPE-175/225 Board"
<del>UBR72004REG_ACK_REB_DRC</del>	4-Warning	<del>&lt;3-CMISDOCS-7000&gt;</del> REG ACK rejected bad rcc. CM Mac Addr <[enet]>	CM Reg Ack message bad rcc.	ubr7200	LOG_SID_NO_ACTION
<del>UBR72004REG_ACK_SYNTAX_ERROR</del>	4-Warning	<del>&lt;3-CMISDOCS-7000&gt;</del> REG ACK rejected message syntax error. CM Mac Addr <[enet]>	CM Reg Ack message syntax error.	ubr7200	LOG_SID_NO_ACTION
<del>UBR72004REG_ACK_UNSPECIFIED</del>	4-Warning	<del>&lt;3-CMISDOCS-7000&gt;</del> REG ACK rejected unspecified reason. CM Mac Addr <[enet]>	CM Reg Ack message rejected.	ubr7200	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UBRCHRAFHCMVMD</del>	4-Warning	<del>&lt;B-CMISDCSS-7000&gt;</del> Registration rejected authentication failure: CMTS MIC invalid. CM Mac Addr <[enet]>	Registration rejected authentication failure: CMTS MIC invalid\n	ubr7200	LOG_SID_NO_ACTION
<del>UBRCHRAFHVAMMCH</del>	4-Warning	<del>&lt;B-CMISDCSS-7000&gt;</del> REG authentication failure: REG REQ rejected TLV parameters do not match learned config file TLV parameters. CM Mac Addr <[enet]>	REG REQ TLV parameters do not match learned config file TLV parameters\n	ubr7200	LOG_SID_NO_ACTION
<del>UBRCHRGQJHHAUE</del>	4-Warning	<del>&lt;B-CMISDCSS-7000&gt;</del> REG REQ rejected - Authorization failure . CM Mac Addr <[enet]>	CM Registration Request Authorization failure.	ubr7200	LOG_SID_NO_ACTION
<del>UBRCHRQJSHCDNA</del>	4-Warning	DS Selection failed for Cable Modem [enet] in [chars]	CMTS cannot proceed with handling modem's Registration Request	ubr7200	LOG_SID_NO_ACTION
<del>UBRCHRCJDCJHFNK</del>	4-Warning	<del>&lt;B-CMISDCSS-7000&gt;</del> REG REQ rejected duplicate reference-ID or index in message . CM Mac Addr <[enet]>	CM Registration Request message contains a duplicate ID or index.	ubr7200	LOG_SID_NO_ACTION
<del>UBRCHCNADVCHER</del>	4-Warning	<del>&lt;B-CMISDCSS-7000&gt;</del> REG REQ has Invalid MAC header. CM Mac Addr <[enet]>	REG REQ has Invalid MAC header \n	ubr7200	LOG_SID_NO_ACTION
<del>UBRCHCMJDCASERR</del>	4-Warning	<del>&lt;B-CMISDCSS-7000&gt;</del> REG REQ rejected - Major classifier error . CM Mac Addr <[enet]>	CM Registration Request classifier error.	ubr7200	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UBR7200CMR01</del>	4-Warning	<del>&lt;3-CMIS[DCSS]-70013</del> REG REQ rejected - Multiple major errors. CM Mac Addr <[enet]>	CM Registration Request multiple errors.	ubr7200	LOG_SID_NO_ACTION
<del>UBR7200CMR02</del>	4-Warning	<del>&lt;3-CMIS[DCSS]-70012</del> REG REQ rejected - Major PHS rule error . CM Mac Addr <[enet]>	CM Registration Request PHS rule error.	ubr7200	LOG_SID_NO_ACTION
<del>UBR7200CMR03</del>	4-Warning	<del>&lt;3-CMIS[DCSS]-70010</del> REG REQ rejected - Major service flow error . CM Mac Addr <[enet]>	CM Registration Request service flow error.	ubr7200	LOG_SID_NO_ACTION
<del>UBR7200CMR04</del>	4-Warning	<del>&lt;3-CMIS[DCSS]-70014</del> REG REQ rejected - Message syntax error . CM Mac Addr <[enet]>	CM Registration Request syntax error.	ubr7200	LOG_SID_NO_ACTION
<del>UBR7200CMR05</del>	4-Warning	<del>&lt;3-CMIS[DCSS]-70016</del> REG REQ rejected - Message too big. CM Mac Addr <[enet]>	CM Registration Request message too large.	ubr7200	LOG_SID_NO_ACTION
<del>UBR7200CMR06</del>	4-Warning	<del>&lt;3-CMIS[DCSS]-70016</del> REG REQ rejected - Multiple errors. CM Mac Addr <[enet]>	CM Registration Request msg contains multiple errors.	ubr7200	LOG_SID_NO_ACTION
<del>UBR7200CMR07</del>	4-Warning	<del>&lt;3-CMIS[DCSS]-70018</del> REG REQ rejected parameter invalid for context. CM Mac Addr <[enet]>	CM Registration Request contains an invalid parameter for context.	ubr7200	LOG_SID_NO_ACTION
<del>UBR7200CMR08</del>	4-Warning	<del>&lt;3-CMIS[DCSS]-70018</del> REG REQ rejected - Permanent administrative . CM Mac Addr <[enet]>	REG REQ rejected - Permanent administrative. \n	ubr7200	"LOG_SID_NO_ACTION"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UBR7200CMRPRMOWRRC</del>	4-Warning	<del>&lt;B-CMISDCSS-7001&gt;</del> REG REQ rejected - Primary service flow error. CM Mac Addr <[enet]>	CM Registration Request primary service flow error.	ubr7200	LOG_SID_NO_ACTION
<del>UBR7200CMRPRNDSRE</del>	4-Warning	<del>&lt;B-CMISDCSS-7002&gt;</del> REG REQ rejected - temporary no resource . CM Mac Addr <[enet]>	REG REQ rejected - temporary no resource . \n	ubr7200	LOG_SID_NO_ACTION
<del>UBR7200CMRPRNDSRE</del>	4-Warning	<del>&lt;B-CMISDCSS-7003&gt;</del> REG REQ rejected - Unrecognized configuration setting. CM Mac Addr <[enet]>	REG REQ rejected - Unrecognized configuration setting . \n	ubr7200	LOG_SID_NO_ACTION
<del>UBR7200CMRPRNDSRE</del>	4-Warning	<del>&lt;B-CMISDCSS-7004&gt;</del> REG aborted no REG-ACK. CM Mac Addr <[enet]>	CM Reg aborted. No CM REG_ACK message.	ubr7200	LOG_SID_NO_ACTION
<del>UBR7200CMRPRNDSRE</del>	4-Warning	Registration request unexpected: Cable Modem did not attempt TFTP. Registration Rejected. CM Mac Addr <[enet]>	Registration request unexpected: Cable Modem did not attempt TFTP\n	ubr7200	LOG_SID_NO_ACTION
<del>UBR7200CMRPRNDSRE</del>	4-Warning	Registration request unexpected: Cable Modem did not attempt TFTP. Modem marked with #. CM Mac Addr <[enet]>	Registration request unexpected: Cable Modem did not attempt TFTP\n	ubr7200	LOG_SID_NO_ACTION
<del>UBR7200CMRPRNDSRE</del>	4-Warning	Remote backup MTU [node]is not equal to primary [node] cannot set up the backup PW	Remote backup MTU is not equal to primary	cmts-application	"Keep same mtu for the primary peer and secondary peer"
<del>UBR7200CMRPRNDSRE</del>	4-Warning	<del>&lt;B-CMISDCSS-7004&gt;</del> REG REQ rejected Required parameter not present. CM Mac Addr <[enet]>	Required parameter not present\n	ubr7200	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UBR7200</del> REG_REQ_TLV_ABNT	4-Warning	<3-CMISDOCSIS-7000> REG REQ missed Required TLV's. CM Mac Addr <[enet]>	REG REQ missed Required TLV's \n	ubr7200	LOG_SID_NO_ACTION
<del>UBR7200</del> REG_REQ_FAIL_CM	4-Warning	<3-CMISDOCSIS-8000> Retries exhausted for polled CM Mac Addr <[enet]>. After 16 R101.0 errors.	Retries exhausted for polled CM . After 16 R101.0 errors.Note: this is different from R102.0 in that it was able to try i.e. got REQ's but failed to Range properly.\n	ubr7200	"Please look for possible noise or other RF plant " "problems on the upstream channel"
<del>UBR7200</del> SVC_FLOW_ERR	4-Warning	CM MAC: [chars] Service flow direction: [chars] Param code: [dec] Confirm code: [dec]	Looks like issue while admitting/activating Service flow	ubr7200	"Please look for DOCSIS message logs followed for more details"
<del>UBR7200</del> SVC_FLOW_DOWN_ERR	4-Warning	[chars] [dec]/[dec] nb_unique_index: [dec] SFID: [dec] index: [dec] flow-chid: [dec] wb-mode: [dec] dsid: [dec] cm [enet]	Looks like issue while allocating remote downstream index	ubr7200	"Please see show cable modem pri and " "show int cx/y/z service-flow for more details"
<del>UBR7200</del> SVC_FLOW_DOWN_ERR	4-Warning	spa_num: [dec] spa_if_num: [dec] nb_unique_index: [dec] lc_slot: [dec] lc_subslot: [dec] SFID: [dec] Blaze index: [dec]	Looks like issue while allocating remote downstream blaze index	ubr7200	"Please see show cable modem and " "show int cx/y/z service-flow for more details"
<del>UBR7200</del> SVC_PERM_UNAVAIL	4-Warning	<3-CMISDOCSIS-7000> Service unavailable - Permanent. CM Mac Addr <[enet]>	Service Permanently unavailable\n	ubr7200	LOG_SID_NO_ACTION
<del>UBR7200</del> SVC_TEMP_UNAVAIL	4-Warning	<3-CMISDOCSIS-7000> Service unavailable - Temporarily unavailable. CM Mac Addr <[enet]>	Registration Failed Service temporarily not available \n	ubr7200	LOG_SID_NO_ACTION
<del>UBR7200</del> SVC_OTHER_UNAVAIL	4-Warning	<3-CMISDOCSIS-7000> Service unavailable - Other. CM Mac Addr <[enet]>	Registration Failed :Service Unavailable \n	ubr7200	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UBR7204SIDERRORDCC	4-Warning	Tried to allocate new SID [dec] during DCC CM rebuild for interface [chars]: CM [enet]: SID container info: start [dec] end [dec]	Allocate SID during DCC CM rebuild	cbr-application	"Assign Cable Modem to another interface"
UBR7204SDMIIHCUCM	4-Warning	SID [dec] not bound to any CM.	This SID does not have a valid CM database pointer	ubr7200	"NO action is required"
UBR7204SPECMGMICRP	4-Warning	Spectrum group [dec] with discrete frequency is not fully supported on interface [chars]	The spectrum management group is not fully supported	ubr7200	"Suggest convert discrete frequency to frequency band in the group"
UBR7204STALEIP4DBIND	4-Warning	When update IPv4 DB entry for [enet] to ip [node]tableid [dec] Found stale entry for [node]tableid [dec] is cm [dec] mac [enet]	Subscriber IPv4 DB entry for CM have not been cleaned	ubr7200	LOG_SID_NO_ACTION
UBR7204SUBDBCLEANPCM	4-Warning	Free all Subscriber DB entries for CM [enet] hwidb [chars] ip [node] tableid [dec] prim sid [dec] sidp %p	Subscriber DB entries for CM have not been cleaned previously clean them now.	ubr7200	LOG_SID_NO_ACTION
UBR7204TMELEKPERCR	4-Warning	CM MAC: [enet] Sid: [dec] Act_Qos: [dec]	Problem while looking up qos template	ubr7200	LOG_SIDSHTCH_ACTION
UBR7204TFTPDATALENERR	4-Warning	The length of TFTP DATA packet exceeded negotiated/default block size of [dec] while downloading [chars] from %i	TFTP DATA packet received exceeded its negotiated/default block size	ubr7200	"Make sure that the block size of the TFTP DATA packets" "does not exceed the negotiated/default block size"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UBR7200CONFCANLST</del>	4-Warning	Confilct with TLV56 and channel set. Either remove TLV56 from the CM config file or adjust the power plant. CM Mac Addr <[enet]> may go offline due to high power.	Registration Failed Check TLV56 Configuration Setting\n	ubr7200	LOG_SID_NO_ACTION
<del>UBR7200CPCS6000</del>	4-Warning	<B>CMTS</B> UCC-RSP was not received on previous channel ID. CM MAC addr <[enet]>	-	cbr-application	LOG_SID_SH_TECH_ACTION
<del>UBR7200CPCS6000</del>	4-Warning	<B>CMTS</B> UCC-RSP was received with invalid channel ID. CM MAC addr <[enet]>	-	cbr-application	"Enable <cmdBold>debug cable ucc<noCmdBold> at CMTS " "and make sure that CMTS sends UCC-REQ with correct " "channel ID. If CMTS is not sending the correct " "channel ID report the problem"
<del>UBR7200CPCS6000</del>	4-Warning	<B>CMTS</B> UCC-RSP was received with invalid channel ID on new channel. CM MAC addr <[enet]>	-	cbr-application	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UBR700UNBE_DRA_NECM</del>	4-Warning	<del>&lt;B-CMISDCSS-8000&gt;</del> Unable to Successfully Range CM Mac Addr <[enet]>. Retries Exhausted.	Unable to Successfully Range CM Retries Exhausted.\n	ubr7200	"CM reinitialize its MAC interface and attempt to reregister." " check the cable plant for potentialnoise or other RF problems" " Check the configuration of the cable interface on the CMTS " " that is servicing this cable modem to ensure that the interface" " is enabled and properly configured"
<del>UBR700UNBE_DRA_NECM</del>	4-Warning	<del>&lt;B-CMISDCSS-7000&gt;</del> Service unavailable - Unrecognized configuration setting. CM Mac Addr <[enet]>	Registration Failed Unrecognized Configuration Setting\n	ubr7200	LOG_SID_NO_ACTION
<del>UBR700UNBE_DRA_NECM</del>	4-Warning	<del>&lt;B-CMISDCSS-7000&gt;</del> REG REQ rejected Unspecified Reason . CM Mac Addr <[enet]>	Unspecified Reason \n	ubr7200	LOG_SID_NO_ACTION
<del>UBR700UNBE_DRA_NECM</del>	4-Warning	<del>&lt;B-CMISDCSS-7000&gt;</del> Bad US CH -Change followed with RE-Registration REQ. CM Mac Addr <[enet]>	REG REQ : Bad US CH -Change followed with RE-Registration REQ. \n	ubr7200	LOG_SID_NO_ACTION
<del>UBR700UNBE_DRA_NECM</del>	4-Warning	Midplane data version mismatch.	Data stored in midplane is out of date and needs update.	ubr7200	"Contact technical support to update your system."
<del>UBR700UNBE_DRA_NECM</del>	5-Notice	<del>&lt;B-CMISDCSS-7000&gt;</del> Attribute Masks for SF SFID [node] do not	Change in provisioned attribute mask causes mismatch	ubr10000	"Modify provisioned attributes such that it meets " "requirements"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UBR7205BADMNCSMSG	5-Notice	Invalid DOCSIS Message Type [dec] received from the CM [enet] for interface [chars]	-	-	-
UBR7205BKMDCRCEXCESS	5-Notice	CMTS deleted excessive [chars] Requests Cable Modem [enet] with Sid [dec]	Cable Modem did excessive BPKM requests.	ubr7200	"Check modem interface configuration for privacy mandatory " "or noise on the plant."
UBR7200-5-CLASSEFAIL	5-Notice	Registration failed for Cable Modem [enet] on interface [chars][chars]: [chars]	The registration of this modem failed due to an invalid or unsupported Class of Service setting.	ubr7200	"Make sure the Class of Service fields in the configuration file " "are set correctly."
UBR7205CLEAR_ARP_INTERFACE	5-Notice	Clearing all ARP entries for interface [chars]	All the entries have been cleared	ubr7200	LOG_SID_NO_ACTION
UBR7205CLEAR_ARP_TABLE	5-Notice	Clearing all ARP entries	All the entries have been cleared	ubr7200	LOG_SID_NO_ACTION
UBR7205CLONDCMDEICED	5-Notice	Cloned CM with MAC address [enet] connection attempt rejected on [chars] U[dec]	There might be a hacking attempt going on.	ubr7200	"Look for possible hacking attempt"
UBR7205DSDSPRECOVER1	5-Notice	Trying to switch to backup dsp image	Trying to recover DSP using backup image	ubr7200	LOG_SID_NO_ACTION
UBR7205DSDSPRECOVER2	5-Notice	Switching to backup dsp image succeeded	Switching to backup dsp image succeeded	ubr7200	LOG_SID_NO_ACTION
UBR7205DSDSPRECOVER3	5-Notice	Recovering and switching back to regular dsp image succeeded	DSP recover operation using backup image succeeded	ubr7200	LOG_SID_NO_ACTION
UBR7200-5-DBDSPUP	5-Notice	Handshake DSP is successful after [dec] ms delay	DSP is up and running	ubr7200	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UBR7200</del> UBR7200-5-DOCSIS_DIAG	5-Notice	[DOCSIS]-86000200>Docs Diag Log reaches low threshold	Docs Diag Log Notification :log size reaches low threshold	ubr7200	"LOG_SID_NO_ACTION"
UBR7200-5-EAEREJECT	5-Notice	EAE registration rejected CM [enet] on Interface [chars]	CM registration rejected to force EAE policy.	ubr7200	LOG_SID_NO_ACTION
<del>UBR7200</del> UBR7200-5-EXCESSIVE_SAV_GROUPS	5-Notice	More than 1 SAV Group ID in registration request for CM MAC <[enet]>. Ignoring the excessive group ids	There may be more than 1 SAV Group IDs specified in the in the configuration file\n	ubr7200	"Please inspect the configuration file"
<del>UBR7200</del> UBR7200-5-EXCESSIVE_SAV_PREFIXES	5-Notice	More than [dec] SAV prefixes in the registration request for CM MAC <[enet]>. Ignoring the excessive prefixes	There are excessive number of SAV prefixes in the configuration file\n	ubr7200	"Please inspect the configuration file"
<del>UBR7200</del> UBR7200-5-EXPIRED_TIMEOUT	5-Notice	CMTS deleted BPI [chars] expired Cable Modem [enet] with Sid [dec]	Expired cable modem deleted to enforce CM go through BPI authorization.	ubr7200	"Check modem interface configuration for privacy mandatory " "or noise on the plant."
UBR7200-5-KEEPALIVE	5-Notice	Keepalive shutting down interface [chars].	No activity detected within the Keepalive timeout period on the interface.	ubr7200	"Check RF path for failure."
UBR7200-5-MACISSDERR	5-Notice	CMTS MAC TGC load pulse error sync-pulse interval [dec]	MAC FPGA TGC load pulse generation error	ubr7200	"Replace defective Line Card"
<del>UBR7200</del> UBR7200-5-MALFORMED_TLV	5-Notice	PARSER-ERR: Next TLV type=[node]steps beyond end of TLV block.\n\t	Malformed TLV found in parsing\n	ubr7200	"Please check if the modem's behavior is correct"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UBR7200-5-MAXHOST	5-Notice	Interface [chars] New host with MAC [enet] on SID [dec] CM [enet] is ignored: [chars]. Count [dec]	-	-	-
UBR7200-5-MULTIUPSTREAM	5-Notice	Upstream Channel Change not valid for interface [chars]	The software does not support this command for this interface	ubr7200	"Please use this command on a multiple upstream Line card"
UBR7200-5-OVERLIMIT	5-Notice	Interface [chars]\n Current total reservation of [dec] bps on Port U[dec] exceeds its\n maximum configured reservation limit of [dec] bps.\n	The currently reserved capacity on the upstream channel\n already exceeds the virtual reservation capacity of that\n upstream channel based on configured subscription level limit.\n	ubr7200	"Need to load balance modems requesting reserved upstream rate on\n" "some other upstream channel or increase the subscription level\n" "limit on current upstream channel at increasing risk of not being\n" "able to guarantee the individual reserved rates for modems if this\n" "upstream channel is already oversubscribed beyond raw capacity\n"
UBR7200-5-REQTIMEOUT	5-Notice	CMTS deleted BPI Cable Modem [enet] because traffic not encrypted	Cable modem deleted to force modem to request TEK.	ubr7200	"Check upsteam utilization to ensure bandwidth available for TEK " "request. Noise on the plant can cause this also."
UBR7200-5-TIMESCH	5-Notice	Time scheduled event spectrum group [node][chars]	A time scheduled reconfiguration event occurred on an interface.	ubr7200	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UBR7200SIRAF1BADTIMER</del>	5-Notice	Bad timer expiry in downstream traffic shaper process Timer [hec]	An unknown downstream traffic shaper timer has expired.	ubr7200	"Copy the error message exactly as it appears and report it to your " "technical support representative."
<del>UBR7200SIRAF1ANOCREAT</del>	5-Notice	Unable to create downstream traffic shaping queues	A possible memory error has occurred which is preventing the software from creating downstream traffic shapping queues.	ubr7200	"Gather information about running configuration and amount of memory " "in the system and report it to your technical support representative."
<del>UBR7200SIRAF1APROCAL</del>	5-Notice	Unable to fork downstream shaper process	A possible memory error has occurred which is preventing the software from creating the downstream shaper process.	ubr7200	"Gather information about running configuration and amount of memory " "in the system and report it to your technical support representative."
UBR7200SUCDCCCERR	5-Notice	CMTS UCD failed to update CCC on [chars] U[dec] lch_state [dec]	UCD update CCC error	cmts-infra	"Check the lch_state reset the upstream if necessary"
<del>UBR7200NAUTHDIMEOUT</del>	5-Notice	CMTS deleted BPI unauthorized Cable Modem [enet]	Unauthorized cable modem deleted to enforce CM go through BPI authorization.	ubr7200	"Check modem interface configuration for privacy mandatory " "or errors in tftp configuration file."
<del>UBR7200UNREGSDIMEOUT</del>	5-Notice	CMTS deleted unregistered Cable Modem [enet]	Unregistered cable modem deleted to avoid unaccounted bandwidth usage.	ubr7200	"Check modem i/f config for registration bypass " "or errors in tftp config file."
UBR7200-5-UPDOWN	5-Notice	Interface [chars] U[chars] changed state to [chars]	The upstream port was brought up or down.	ubr7200	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UBR7200-5-USCONTEND	5-Notice	Interface [chars] U[dec] frequency hop ended at [node][node]u MHz	At least one modem came back online. This message logs the abort of frequency hop.	ubr7200	LOG_SID_NO_ACTION
UBR7200-5-USCONTHOP	5-Notice	Interface [chars] U[dec] frequency hop started	All modems just went offline. This message logs the start of frequency hop.	ubr7200	LOG_SID_NO_ACTION
UBR7200-5-USCWCHG	5-Notice	[chars] channel width changed to [node]kHz	The upstream channel width was changed.	ubr7200	LOG_SID_NO_ACTION
UBR7200-5-USFREQCHG	5-Notice	Interface [chars] U[chars] changed to Freq [node][node]u MHz	The upstream channel frequency was changed.	ubr7200	LOG_SID_NO_ACTION
UBR7200-5-USIPLCHG	5-Notice	[chars] input power level changed to [dec] dBmV	The upstream channel input power level was changed.	ubr7200	LOG_SID_NO_ACTION
UBR7200-5-USIPLFIX	5-Notice	Interface [chars] U[dec] input power level fixed at [dec] dBmV	Setting the upstream frequency to a fixed value caused the upstream input power level to assume a fixed value.	ubr7200	LOG_SID_NO_ACTION
UBR7200-5-USIPLINVALID	5-Notice	Interface [chars] U[dec] input power level is outside of valid range due to channel width change	The upstream channel input power level is invalid.	ubr7200	LOG_SID_NO_ACTION
UBR7200-5-USJIB3NBC	5-Notice	Interface [chars] U[dec] INFO: receives collision no burst	A collision happens on an upstream channel	ubr7200	"If consistently offending modems/channel can be found by" "test cable jib3us show intr-logs 1 on LC console" "and show cable modem on the interface"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UBR7205USMDCCHANGE	5-Notice	[chars] dynamic modulation changed to [chars]	Dynamic modulation change from QAM to QPSK and vice-versa.	ubr7200	LOG_SID_NO_ACTION
UBR7205USMDCANCEWARN	5-Notice	Interface [chars] U[dec] new profile [dec] is [chars] than old profile [dec]	Print warning message about the increase or decrease in through-put	ubr7200	LOG_SID_NO_ACTION
UBR7205USPHY_BADNIR	5-Notice	USPHY with physical channel [dec] gets too many error interrupts	US PHY or MAC chips on the LC get into a bad state and SW can not recover it	ubr7200	"Collect show tech and then power cycle the Line card." "If problem does not recover contact Cisco for support"
UBR7205USPHYISSDISC	5-Notice	PHY TSS discontinuous on [chars] U[dec] old<T [hec] M [hec] F [hec]> new<T [hec] M [hec] F [node]> start<T [hec] M [hec] F [node]> mac<T [hec] M [hec] F [node]> tgc/frame [hec] mslot/frame [hec]	PHY TSS error	cmts-infra	"If the problem is persistent modify minislot size and reset the upstream"
UBR7205USPHYISSLAIE	5-Notice	PHY late TSS on [chars] U[dec] MAC [hec] phy <last [hec] curr [hec]> tgc/frame [hec]	late PHY TSS SNAPSHOT messages are received	cmts-infra	"This is an internal failure and not necessarily problematic"
UBR7205USISSMISMAICH	5-Notice	MAC-PHY TSS mismatch [chars] U[dec]: MAC<T [hec] M [hec] F [hec]> PHY<T [hec] M [hec] F [hec]> Old-PHY<T [hec] M [hec] F [hec]> start<T [hec] M [hec] F [hec]> curr [hec] tgc/fame [hec] mslots/fame [hec]	Mis-matched MAC-PHY TSS is detected	cmts-infra	"This is an internal failure and not necessarily problematic"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UBR7200-5-SISSNOALGND	5-Notice	MAC-PHY TSS on [chars] U[dec] not at frame boundary MAC<T [hec] M [hec] F [hec]> start <T [hec] M [hec] F [chars]> current<T [hec]> tgc/frame [hec] mslot/frame [hec]	PHY TSS is not sampled at frame boundary	cmts-infra	"This is an internal failure and not necessarily problematic"
UBR7200-5-WIDEBAND_AURESET	5-Notice	Reset total [dec] wideband capable cable modems which registered in	wideband autoreset feature reset wideband capable cable modems which registered in narrow band mode.	cmts-docsis	LOG_SID_NO_ACTION
UBR7200-6-ACFE_NOTIFICATION	6-Information	[chars]	A special event happened in ACFE algorithm module	cmts-qos	LOG_SID_NO_ACTION
UBR7200-6-ACTIVE	6-Information	Cable clock [chars] reference active	The clock reference became active	ubr7200	"Informational only"
UBR7200-6-ALARM_INFO	6-Information	[chars] [chars] [chars] [chars] [chars]	Alarm assertion or deassertion information.	ubr7200	LOG_SID_NO_ACTION
UBR7200-6-BADIPSOURCE	6-Information	Interface [chars] IP packet from invalid source. IP=[node]MAC=[enet] Expected SID=[dec] Actual SID=[dec]	There might be a spoofing attempt going on.	ubr7200	"Look for possible spoofing attempt"
UBR7200-6-BADIXCHSET	6-Information	Bad timing offset [node] detected for cable modem [enet] sid [hec] cm status [hec] dcc [chars] skip_reg [chars].	The cable modem is not using the correct starting offset during initial ranging. This causes a zero negative timing offset to be recorded by the CMTS for this modem. The CMTS internal algorithms that rely on the	ubr7200	"Locate the cable modem based on MAC address and report initial " "timing offset problem to the CM vendor"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UBR0CACHENEBFUL</del>	6-Information	Max. cache buffer has been reached!	Max. cache buffer has been reached. cache engine service for current request is denied.	snmpPerf	". "
<del>UBR0CAUCIOPASHER</del>	6-Information	Parse error during sync newly assigned automatic DCID \n\ while running CGD command.	A parse error has occurred while trying to sync the newly assigned DCID to standby PRE.	ubr7200	"Remove and attempt to add the channel set again."
<del>UBR0CAUCIOPUMABE</del>	6-Information	Unable to assign an automatic channel ID for channel in the FN and MD for downstream [dec]/[dec]/[dec]:[dec] in FN [dec] \n	Unable to assign an automatic Channel ID for the newly added channel in the MAC Domain. See show cable fiber-node to see channel ID assignments in the Fiber-Node.	-	"Attempt to manually resolve channel ID conflict by disabling "automatic DCID assignment."
<del>UBR0CMNSVFDMPERAD</del>	6-Information	MPLS PEER [node]VCID [node]in use sending CM [enet] offline	MPLS PEER & VCID is in use. Send offline message to CM.	cmts-application	"Check L2VPN MPLS PEER & VCID specified in CM configuration file"
<del>UBR0CMNSVFDPNCEAE</del>	6-Information	DOCSIS L2VPN not enabled sending CM [enet] offline	Cable Modem is configured with L2VPN but CMTS L2VPN isn't enabled. Send offline message to CM.	cmts-application	"Configure \"cable l2-vpn-service xconnect nsi dot1q interface .\" and \" \"cable l2-vpn-service nsi dot1q\" commands."
<del>UBR0CMNSVFKAYISGLED</del>	6-Information	Already configured for legacy TLS sending CM [enet] offline	Legacy TLS is already configured. Send offline message to CM.	cmts-application	"Check CMTS configuration for legacy TLS with this CM"
<del>UBR0CMNSVFKSPNCEAE</del>	6-Information	DOCSIS MPLS L2VPN not enabled sending CM [enet] offline	Cable Modem is configured with L2VPN but CMTS MPLS L2VPN isn't enabled. Send offline message to CM.	cmts-application	"Configure \"cable l2-vpn-service xconnect nsi mpls\" command."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UBR706</del> UBR706NEWVPNID	6-Information	No free VPNIDs remaining sending CM [enet] offline	There aren't any free VPNIDs. Send offline message to CM.	cmts-application	LOG_SID_SH_TECH_ACTION
<del>UBR706</del> UBR706NEWPEERNAME	6-Information	Unable to resolve MPLS NAME [chars] VCID [node]sending CM [enet] offline	Unable to resolve MPLS NAME via DNS. Send offline message to CM.	cmts-application	"Check L2VPN MPLS PEERNAME specified in CM configuration file" "Or DNS configuration and setup"
<del>UBR706</del> UBR706NEWVLANID	6-Information	VLANID [node]on [chars] in use sending CM [enet] offline	VLANID is in use. Send offline message to CM.	cmts-application	"Check L2VPN VLANID specified in CM configuration file"
<del>UBR706</del> UBR706RCC/SLUMATCH	6-Information	US that CM [enet] send Initial Rng Req has unmatched Channel Class ID0x[hec] with CM's Ranging Class ID0x[hec]\n	CM's Ranging Class ID doesn't match the the Channel Class ID of its upstream but it may be expected due to CM received a DCC/DBC... or CM config file included extended Ranging Class ID\n	ubr7200	LOG_SID_NO_ACTION
UBR72006CMMOVED	6-Information	Cable modem [enet] has been moved from interface [chars] to interface [chars].	The cable modem has been detected ranging on a new interface.	ubr7200	"Informational only"
<del>UBR706</del> UBR706MDXOIRANCHOR	6-Information	Mac Domain Index [dec] is out of range.	Mac Domain Index is out of range.	ubr7200	LOG_SID_NO_ACTION
<del>UBR706</del> UBR706SLOTANCHOR	6-Information	Slot [dec]/Subslot [dec]/MD [dec] is out of range.	Slot/subslot is out of range.	ubr7200	LOG_SID_NO_ACTION
<del>UBR706</del> UBR706COMPAT_NEW_CARD	6-Information	The old card <[chars]> is replaced by new card <[chars]> in slot [dec].	OIR: card replacement	ubr7200	LOG_SID_NO_ACTION
<del>UBR706</del> UBR706COMPAT_DOWN_CARD	6-Information	Failed to restore the configuration for [chars].	OIR-compatiblity configuration restore failed	ubr7200	"Configure the interface manually"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UBR7206</del> CONFIG_EXIT	6-Information	Exiting config mode by [chars] since Port Adapter in slot [dec] removed	The user was configuring a port adapter which was either removed from the system or if an mc28u card was reset. Therefore the configuration mode is invalid and terminated by IOS	ubr7200	LOG_SID_NO_ACTION
<del>UBR7206</del> CPE_MOVE	6-Information	CPE [enet] was moved from SID Chain [dec] to [dec] from [chars] of the chain	The CMTS automatically corrected a condition where the CPE was in the wrong SID chain.	ubr7200	LOG_SID_NO_ACTION
<del>UBR7206</del> CREATE_MCAST_PROFILE	6-Information	<12-CMISDCSS-8000> Multicast Profile [chars] created for CM Mac [enet].	CMTS automatically creates an IP Multicast Profile	cbr-application	LOG_SID_NO_ACTION
<del>UBR7206</del> DSP_DOWNLOAD_COMPLETED	6-Information	Downloading dsp code completed	Downloading dsp code completed	ubr7200	LOG_SID_NO_ACTION
<del>UBR7206</del> DSP_DOWNLOAD_STARTED	6-Information	Downloading dsp code initiated	Downloading dsp code started	ubr7200	LOG_SID_NO_ACTION
<del>UBR7206</del> DSP_VERSION	6-Information	Current DSP version : [dec] DSP flash version : [dec]	The current code version and the version DSP booted up with	ubr7200	LOG_SID_NO_ACTION
<del>UBR7206</del> HASH_FILTER_REMOVED	6-Information	Hash-filter [dec] not present in global config - Filter removed from [chars]\n	The hash-filter was removed from the global config while the card was not present in the chassis therefore the corresponding interface hash filter is removed from the config	ddc	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UBR7200-6-DRVMP</del> UBR7200-6-DRVMP	6-Information	Redundancy target invalid - removed from [chars]\n	The router's my_id was config removed while the card was not present in the chassis therefore the redundancy target cli is removed from the interface	dde	LOG_SID_NO_ACTION
<del>UBR7200-6-DRVMP</del> UBR7200-6-DRVMP	6-Information	Differential-encoding is disabled on interface [chars] upstream [chars] it is only supported for QPSK or QAM16.	Differential-encoding is only supported for QPSK or QAM16.	ubr7200	"Informational only"
<del>UBR7200-6-DRVMP</del> UBR7200-6-DRVMP	6-Information	Enabling DPON for MAC domain MD: [chars] implicitly enables DPON for all other	-	-	-
UBR7200-6-DRVMP	6-Information	Midplane TDM clock reference defaults to Clockcard	Clockcard primary reference is from midplane TDM clock	ubr7200	"Informational only"
<del>UBR7200-6-DRVMP</del> UBR7200-6-DRVMP	6-Information	Assigned ds primary sfid [dec] conflicts with existing ds primary sfid [dec] for Cable modem [enet] on interface [chars]	The assigned downstream primary SFID conflicts with the existing downstream primary SFID for the cable modem.	ubr7200	"Informational only"
<del>UBR7200-6-DRVMP</del> UBR7200-6-DRVMP	6-Information	Second cleanup for modem	A modem entry was attempted to be cleaned up twice	ubr7200	LOG_SID_SH_TECH_ACTION
<del>UBR7200-6-DRVMP</del> UBR7200-6-DRVMP	6-Information	[chars] burst's FEC K BYTE in mod profile [dec] is adjusted to [dec] bytes.	The FEC K bytes in the burst profile adjusted to a valid value.	ubr7200	"Informational only"
UBR7200-6-FREERUN	6-Information	Cable clock in Freerun mode	Clockcard is in free run mode	ubr7200	"Informational only"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UBR72006GRDIDX_LOG	6-Information	DS [node][node][node]Index [node]DSID 0x[hec] SID [node]SF_BU [node]FW [chars] [node][node][node][node]MD Ca[ <del>node</del> ][ <del>node</del> ][ <del>node</del> ][chars] [chars]	Debug message for Guardian index operations	ubr10000	LOG_SID_NO_ACTION
<del>UBR72006</del> UBR72006GUARDSYMENADUST	6-Information	[chars] burst's guard symbol length in mod profile [dec] is adjusted to [dec] symbols.	The guard symbol length in the burst profile adjusted to a valid value.	ubr7200	"Informational only"
UBR72006HOLDOVER	6-Information	Cable clock in Holdover mode	Clockcard switched to holdover mode	ubr7200	"Check reference source"
UBR72006HOILSIMAC	6-Information	Investigating MAC=[enet] sid [dec] interface [chars]: MAC blocked	CMTS glean function received blocked mac addr	ubr7200	"Check for spoofing: CPE using blocked mac addr"
<del>UBR72006</del> UBR72006XONEINFAHRR	6-Information	Unable to create internal xconnect bundle interface	Unable to find free bundle interface for l2vpn xconnect function	cmts-application	"Free one bundle interface for internal l2vpn xconnect function"
<del>UBR72006</del> UBR72006CHDHENCADUST	6-Information	Differential-encoding is disabled on interface [chars] upstream [chars] it should be supported by all active logical channels.	Differential-encoding should be supported on all logical channels.	ubr7200	"Informational only"
UBR7200-6-LOS	6-Information	Cable clock [chars] reference Loss of Signal	The clock reference was lost	ubr7200	"Check reference source"
UBR72006MACLICLR	6-Information	Enable mac mgmt msg processing on [chars].	The RP has reenabled the sending of DOCSIS MAC-layer messages on the cable interfaces after an N+1 switchover.	ubr7200	"No action needed."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UBR7200</del> UBR7200	6-Information	<3>CMIS[DCSS]60050 Map Reject - Downstream traffic flow not mapped to BPI+SAID. CM Mac Addr <[enet]>	Map Reject - Downstream traffic flow not mapped to BPI+SAID\n	ubr7200	LOG_SID_NO_ACTION
<del>UBR7200</del> UBR7200	6-Information	<3>CMIS[DCSS]70010 A transmit opportunity was missed because MAP arrived too late	A transmit opportunity was missed because MAP arrived too late \n	ubr7200	"If the problem persists with a particular cable modem " "reboot the cable modem and check for possible hardware or" "software problems with that cable modem If this problem " "occurs with many cable modemscheck the cable plant for " "RF transmission and noise ingress problems."
<del>UBR7200</del> UBR7200	6-Information	Multicast IPC header could not be added for source [chars] group [chars] fwd interface [chars]	Multicast IPC header could not be added	cbr-application	LOG_STD_ACTION
<del>UBR7200</del> UBR7200	6-Information	<3>CMIS[DCSS]80010 Multicast session [chars] is not authorized for CM [enet]	Default configured action for IGMP Join is denied or the matching session rule's action is denied or the maximum session limit for the modem has been reached.	cbr-application	LOG_SID_NO_ACTION
<del>UBR7200</del> UBR7200	6-Information	Downstream channel IDs conflict in mac-domain of [chars]	At least two channels in the mac-domain have the same downstream channel ID. See show cable fiber-node to see channel ID assignments	-	"Change the downstream channel ID."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UBR7200-6-MDIDX_LOG	6-Information	GRD [node][node]Index [node]SID [node]SF [node]FW [chars] [node][node][node][node]MD [chars] [chars] [chars]	Debug message for MAC Domain index operations	ubr10000	LOG_SID_NO_ACTION
UBR7200-6-MQOS	6-Information	Power supply may be overloaded to support the line card installed in slot [dec]	The power supply may be insufficient to support the number of line \n\ cards installed in the system under certain operation conditions \n\ like high temperature and high voltage margining.	-	"Upgrade the power supply as soon as possible or the system may \n\ fail to operation properly under some certain operation conditions."
<del>UBR7200-6-MQOS</del>	6-Information	Cops connection: IP addr: [node]Handle: 0x[hec] went down Error code: [dec]	Cops connection went down	packetcable	"Check cops connection"
<del>UBR7200-6-MQOS</del>	6-Information	Cops connection: IP addr: [node]Handle: 0x[hec] is up	Cops connection is up	packetcable	LOG_SID_NO_ACTION
UBR7200-6-PREAMADJUST	6-Information	[chars] burst's preamble length in mod profile [dec] is adjusted to [dec] bits.	The preamble length in the burst profile adjusted to a valid value.	ubr7200	"Informational only"
UBR7200-6-PREAMCHECK	6-Information	preamble length exceeds total of 128 byte.	The preamble length exceeds total of 128 byte.	ubr7200	"Informational only"
UBR7200-6-REFLOCK	6-Information	Cable clock locked to [chars] reference	Clockcard locked onto clock source	ubr7200	"Informational only"
<del>UBR7200-6-REFLOCK</del>	6-Information	The downstream channel id's conflict for [chars] rf-channel [dec]\n could not be resolved by automatic DCID assignment.\n	Auto DCID assignment fails to assign valid DCID for a specific channel\n See \show cable fiber-node\ for detail channel ID assignments	-	"Check fiber node and downstream channel " "configuration."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UBR7200-6-NRFBKSIZEADJST</del>	6-Information	[chars] burst's RS interleave block size in mod profile [dec] is adjusted to [dec] bytes.	The RS interleave block size in the burst profile adjusted to a valid value.	ubr7200	"Informational only"
<del>UBR7200-6-NRVDPIADJST</del>	6-Information	[chars] burst's RS interleave depth in mod profile [dec] is adjusted to [dec].	The RS interleave depth in the burst profile adjusted to a valid value.	ubr7200	"Informational only"
<del>UBR7200-6-NRIMDISABLED</del>	6-Information	[chars] burst's RS interleaver in mod profile [dec] is auto disabled.	The RS interleaver in the burst profile is auto disabled.	ubr7200	"Informational only"
UBR7200-6-SRCMP	6-Information	Cable Clock primary reference is midplane TDM clock	Clockcard primary reference is from midplane TDM clock	ubr7200	"Informational only"
<del>UBR7200-6-NRPRSFIDCNICT</del>	6-Information	Assigned us primary sfid [dec] conflicts with existing us primary sfid [dec] for Cable modem [enet] on interface [chars]	The assigned upstream primary SFID conflicts with the existing upstream primary SFID for the cable modem.	ubr7200	"Informational only"
<del>UBR7200-7-CLKMISDEIMG</del>	7-Debug	Clock misalignment detected on phy [dec]:\nIOS det count=[dec] bad DV count=[dec] total DV count=[dec] old cal data=0x[node]x new cal data=0x[node]x\n[chars]	A phy clock misalignment has been detected and corrected.	ubr10000	LOG_SID_NO_ACTION
<del>UBR7200-3-IFMCHOCERR</del>	3-Error	Cable Interface Reset due to config file watchdog timer	Cable Interface Reset due to config file watchdog timer expiration\n	-	""
<del>UBR7200-3-IFDPCWCHOCERR</del>	3-Error	Cable Interface Reset due to DHCP watchdog timer expiration	Cable Interface Reset due to dhcp watchdog timer expiration\n	-	""

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UBR00RSET_LOS_OF_SYNC</del>	3-Error	T05.0 Loss of Sync. Missed 5 in a row after having SYNCd at one time	Cable Interface Reset due to loss of sync\n	-	""
<del>UBR00RSET_PRIVACY_WATCHDOG_EXPIRED</del>	3-Error	Cable Interface Reset due to privacy watchdog timer	Cable Interface Reset due to privacy watchdog timer expiration\n	-	""
<del>UBR00RSET_T2_EXPIRED</del>	3-Error	R01.0 No Maintenance Broadcasts for Ranging opportunities received T2 timeout	Cable Interface Reset due to t2 timeout\n	-	""
<del>UBR00RSET_T3_EXHAUSTED</del>	3-Error	R03.0 Ranging Request Retries exhausted	Cable Interface Reset due to t3 timeout\n	-	""
<del>UBR00RSET_T4_EXPIRED</del>	3-Error	R04.0 Received Response to Broadcast Maintenance Request But no Unicast Maintenance opportunities received. T4 timeout.	Cable Interface Reset due to t4 timeout\n	-	""
<del>UBR00RSET_T6_EXHAUSTED</del>	3-Error	Cable Interface Reset due to t6 timeout	Cable Interface Reset due to t6 timeout\n	-	""
<del>UBR00RSET_T3_EXHAUSTED_I</del>	3-Error	R06.0 Started Unicast Maintenance Ranging no Response received. T3 time-out.	Cable Interface Reset due to t3 timeout\n	-	""
UBR9003-T3_TIMEOUT_I	3-Error	R02.0 No Ranging Response received T3 timeout	t3 timeout\n	-	""
UBR9003-T3_TIMEOUT_II	3-Error	R05.0 Started Unicast Maintenance Ranging no Response received. T3 time-out.	Cable Interface Reset due to t3 timeout\n	-	""



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UB00D</del> AIEMREND	3-Error	TOD failed but Cable Interface proceeding to operational state	TOD failed but Cable Interface proceeding to operational state\n	-	""
<del>UB00C</del> RUPTSEMACE	4-Warning	Modem System Image is corrupt. New image upgrade required	Modem System Image is corrupt. New image upgrade required\n	-	""
<del>UB00R</del> USEMARENG	4-Warning	Modem System Image is corrupt. Image upgrade reinitiated.	Modem System Image is corrupt. Image upgrade reinitiated.\n	-	""
<del>UB00C</del> HRCNCSIME	4-Warning	D03.0 Requested Info not supported	Requested info not supported	-	""
<del>UB00C</del> HPRPOTCSIC	4-Warning	D03.1 DHCP response doesn't contain ALL the valid fields as described in the RF spec Appendix C.1	response doesn't contain ALL the valid fields as described in the RF spec Appendix C.1	-	""
<del>UB00A</del> IDTQREHC	4-Warning	T02.0 Failed to acquire FEC framing. Error stats? Retry [dec]'s [dec] of bad frames	Failed to acquire FEC framing	-	""
<del>UB00E</del> XQRECRMG	4-Warning	T03.0 Failed to acquire MAC framing. Error stats? Retry [dec]'s [dec] of bad frames	-	-	""
<del>UB00A</del> IDTQREMC2	4-Warning	T2.1 Acquired FEC framing. Failed to acquire MPEG2 Sync. Retry [dec]'s	Acquired FEC framing. Failed to acquire MPEG2 sync.	-	""
<del>UB00A</del> IDTQRESNC	4-Warning	T01.0 Failed to acquire QAM/QPSK symbol timing. Error stats? Retry [dec]'s	Failed to acquire QAM/QPSK symbol timing\n	-	""
<del>UB00A</del> IDTQRESNC	4-Warning	T04.0 Failed to Receive MAC SYNC frame within time-out period	Failed to Receive MAC SYNC frame within time-out period	-	""

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
UBR9004INVALID_TOD	4-Warning	D04.0 Time of Day none set or invalid data	Time of Day none set or invalid data	-	""
UBR9004INVALID_UCD	4-Warning	U02.0 UCD invalid or channel unusable	Invalid UCD or channel unusable	-	""
UBR9004MAP_ARRD_TOO_LATE	4-Warning	M01.0 A transmit opportunity was missed because the MAP arrived too late	A transmit opportunity was missed because the MAP arrived too late	-	""
UBR9004NO_UCD_RCVD	4-Warning	U01.0 No UCD's received. Time-out	No UCD's Received. Time-out	-	""
UBR9004REINIT_MAC	4-Warning	R07.0 Unicast Ranging Received Abort Response. Reinitializing MAC.	Unicast Ranging Received Abort Response. Reinitializing MAC.	-	""
UBR9004TFTP_FAILED_2	4-Warning	D07.0 TFTP Request Failed OUT OF ORDER packets	TFTP Request Failed OUT OF ORDER packets	-	""
UBR9004TFTP_FAILED_3	4-Warning	D08.0 TFTP complete but failed Message Integrity CheckMIC	TFTP complete but failed Message Integrity CheckMIC	-	""
UBR9004TFTP_NO_RSP	4-Warning	D05.0 TFTP Request sent No Response/No Server.	TFTP Request sent No Response/No Server	-	""
UBR9004TFTP_REQ_FAILED_1	4-Warning	D06.0 TFTP Request Failed configuration file NOT FOUND	TFTP Request Failed configuration file NOT FOUND	-	""
UBR9004TOD_NO_RSP	4-Warning	D04.1 Time of Day request sent no Response received	Time of Day request sent no Response received	-	""
UBR9004TOD_RSP_INVALID	4-Warning	D04.2 Time of Day Response received but invalid data/format	Time of Day Response received but invalid data/format	-	""
UBR9004UCC_REQ_INVALID	4-Warning	C01.0 UCC-REQ received with invalid or out of range US Channel ID.	UCC-REQ received with invalid or out of range US Channel ID	-	""

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UB00</del> UCMDUCUCURCC	4-Warning	U05.0 UCD received with invalid or out of order Configuration Change Count	UCD received with invalid or out of order Configuration Change Count	-	""
<del>UB00</del> UNBAEIOIXUCRSP	4-Warning	C02.0 UCC-REQ received unable to send UCC-RSP no TX opportunity.	UCC-REQ received unable to send UCC-RSP no TX opportunity.	-	""
<del>UB00</del> STANLPRMNCISE	4-Warning	U06.0 US Channel wide parameters not set before Burst Descriptors	US Channel wide parameters not set before Burst Descriptors	-	""
<del>UB00</del> AUCDNDFNCNMS	4-Warning	U04.0 UCD and SYNC are valid No MAPS for THIS channel	UCD and SYNC are valid No MAPS for THIS channel	-	""
<del>UB00</del> AIDUCDNOSYNC	4-Warning	U03.0 UCD valid But no SYNC received. TIMED OUT.	UCD valid But not SYNC received. TIMED OUT.	-	""
<del>UB00</del> ACHPRDMEKCK	6-Information	System Image Upgrade FAILED due to unrecognizable or corrupt image.\n	System Image Upgrade FAILED due to unrecognizable or corrupt image.\n	-	""
<del>UB00</del> ACHPRDHAIDFP	6-Information	System Image Upgrade FAILED due to excessive TFTP failures.\n	System Image Upgrade FAILED due to excessive TFTP failures.\n	-	""
<del>UB00</del> ACHPRADENIAD	6-Information	System Image Upgrade initiated	System Image Upgraded has been initiated.\n	-	""
<del>UB00</del> ACHPRDNRUPD	6-Information	System Image Upgrade interrupted during transfer. Upgrade reinitiated\n	System Image Upgrade interrupted during transfer. Upgrade reinitiated\n	-	""
<del>UB00</del> ACHPRADCSUL	6-Information	System Image Upgrade Complete.	System Image Upgrade Complete.\n	-	""

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UBR06UPRAMPWRCH	6-Information	Upstream Power required at modem registration near maximum\n	Upstream Power required at modem registration near maximum\n	-	""
UBR06NODHCPCH	6-Information	D01.0 Discover sent no offer received No available DHCP Server	D01.0 Discover sent no offer received No available DHCP Server	-	""
UBR06NODHPRSENE	6-Information	D02.0 Request sent no Response	Request sent no Response	-	""
UBR06NODHREQRD	6-Information	Downstream Sync lock lost and reacquired before timeout expired\n	Downstream Sync lock lost and reacquired before timeout expired\n	-	""
UBR06NODHRRCMD	6-Information	Mac Messages received with undefined header\n	Mac Messages received with undefined header\n	-	""
UBR07RNGRANSMIED	7-Debug	Periodic ranging request message transmitted.	Periodic ranging message transmitted	-	""
UBR07RNGRSPMGRCD	7-Debug	Periodic ranging response message received.	Periodic ranging response message received	-	""
UBRCCE0CLI_CONFIG	0-Emergency	CMTS[dec]/[dec]/[dec] schrp_cli_cmd failed in [chars]	Most likely S/W failure	ubrcce-sw	"Copy the error message exactly as it appears and report it to your " "technical support representative."
UBRCCECMNCONSIENCY	6-Information	CM state inconsistency [enet]msgp [enet] sid [dec] [dec] mac state [dec] hwidb [chars]	Received INIT_CM for an online CM Copy the message and report to your technical support representative	ubrcce-sw	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UBRCDSDN</del> UBRCDSDN	6-Information	DS-SF found: SFID [dec] type [dec] MAC [enet][enet] prim_sid [dec][dec]	The RP and LC have different downstream service-flows for the same SFID. The problem should resolve by itself. If it persists report to your technical support representative	ubr10k-sw	LOG_STD_ACTION
<del>UBRCDSDN</del> UBRCDSDN	6-Information	SFID found: SFID [dec] type [dec] MAC [enet][enet] prim_sid [dec][dec]	The RP and LC have different service-flows for the same SFID. The problem should resolve by itself. If it persists report to your technical support representative	ubr10k-sw	LOG_STD_ACTION
<del>UBRCCM</del> UBRCCM	6-Information	CM sync received [enet]msgp [enet] sid [dec] [dec] mac state [dec] hwidb [chars]	Received sync message on secondary SUP for mismatched entry This problem should resolve by itself. If it persists report to your technical support representative	ubrccce-sw	LOG_STD_ACTION
<del>UBRCCW</del> UBRCCW	6-Information	[chars] RCC-[dec] [chars] mismatch with DSBG-[dec] [chars]	Receive chanel set in RCC is mismatch with the Wideband.	ubrccce-sw	LOG_STD_ACTION
<del>UBRCCM</del> UBRCCM	6-Information	CM sync received [enet]msgp [enet] sid [dec] [dec] mac state [dec] hwidb [chars]	Received sync message on secondary SUP for mismatched entry This problem should resolve by itself. If it persists report to your technical support representative	ubrccce-sw	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UCRCSFIDNCSSENY	6-Information	US-SF found: SFID [dec] type [dec] sid [dec][dec] MAC [enet][enet] prim_sid [dec][dec]	The RP and LC have different upstream service-flows for the same SFID. The problem should resolve by itself. If it persists report to your technical support representative	ubr10k-sw	LOG_STD_ACTION
UCSA3COMMDCOEHR	3-Error	[chars] while decoding [chars]	Error occurred while trying to decode the SAF advertisement	voice-saf	"Turn on error debugs and re-publish the specified " "instance. Based on the information in the error logs check and correct " "the configuration on the remote publisher"
UCSA3COMMDCOEHR	3-Error	[chars] while decoding [chars]	Error occurred while trying to decode the SAF advertisement	voice-saf	"Turn on error debugs and re-publish the specified " "instance. Based on the information in the error logs check and correct " "the configuration on the remote publisher"
UCSA3COMMENCOEHR	3-Error	[chars] while encoding element [chars]	Error occurred while trying to encode the client supplied data	voice-saf	"Modify the element that failed to encode using " "client's configuration clis"
UCSA3COMMENCOEHR	3-Error	[chars] while encoding element [chars]	Error occurred while trying to encode the client supplied data	voice-saf	"Modify the element that failed to encode using " "client's configuration clis"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
UCSAF3COMMFWDRERR	3-Error	[chars] for operation [chars] on instance [[node][node][node][node] sub-service [[dec]] for client [[chars]] on channel [[dec]]	Error occurred while trying to request an action from SAF Forwarder	voice-saf	"If the failure is due to lack of memory then check the size of" " free memory to make sure there is enough memory to run SAF service. " "If the error is due to mismatch between client and forwarder then" " undo the current operation and retry. " "If the error is due to publish data is too large then reduce the amount of" " data to be advertised and retry"
UCSAF3COMMFWDRERR	3-Error	[chars] for operation [chars] on instance [[node][node][node][node] sub-service [[dec]] for client [[chars]] on channel [[dec]]	Error occurred while trying to request an action from SAF Forwarder	voice-saf	"If the failure is due to lack of memory then check the size of" " free memory to make sure there is enough memory to run SAF service. " "If the error is due to mismatch between client and forwarder then" " undo the current operation and retry. " "If the error is due to publish data is too large then reduce the amount of" " data to be advertised and retry"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UC_SAF3COMMFWDRG_HRR	3-Error	[chars] for operation [chars] for client [[chars]] on channel [[dec]]	Error occurred while trying to request an action from SAF Forwarder	voice-saf	"If the failure is due to lack of memory then check the size of" " free memory to ensure there is enough memory to run SAF service. " "If the failure is due to invalid AS or vrouter name check the values" "configured in the client with those of the Forwarder. " "If the error is due to mismatch between client and forwarder then" " undo the current operation and retry"
UC_SAF3COMMFWDRG_HRR	3-Error	[chars] for operation [chars] for client [[chars]] on channel [[dec]]	Error occurred while trying to request an action from SAF Forwarder	voice-saf	"If the failure is due to lack of memory then check the size of" " free memory to ensure there is enough memory to run SAF service. " "If the failure is due to invalid AS or vrouter name check the values" "configured in the client with those of the Forwarder. " "If the error is due to mismatch between client and forwarder then" " undo the current operation and retry"
UC_SAF3COMMINT_HRR	3-Error	Internal error occurred: [chars]	-	voice-saf	"If the error is due to lack of memory check the size of free memory" " to make sure there is enough to run SAF service"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UC_SAF3COMM_INT_ERR	3-Error	Internal error occurred: [chars]	-	voice-saf	"If the error is due to lack of memory check the size of free memory" " to make sure there is enough to run SAF service"
UC_SAF3COMM_NOTIFY_ERR	3-Error	[chars] for operation [chars] on instance [[node][node][node][node]] sub-service [[dec]] for client [[chars]] on channel [[dec]]	Error occurred while acting upon a notification from SAF Forwarder	voice-saf	"If the failure is due to lack of memory then check the size of" " free memory to make sure there is enough memory to run SAF service. " "If the error is due to invalid data received in the SAF advertisement " "turn on error debugs and re-publish the service from the specified " "instance. Based on the information in the error debugs check and correct " "the configuration on the remote publisher"
UC_SAF3COMM_NOTIFY_ERR	3-Error	[chars] for operation [chars] on instance [[node][node][node][node]] sub-service [[dec]] for client [[chars]] on channel [[dec]]	Error occurred while acting upon a notification from SAF Forwarder	voice-saf	"If the failure is due to lack of memory then check the size of" " free memory to make sure there is enough memory to run SAF service. " "If the error is due to invalid data received in the SAF advertisement " "turn on error debugs and re-publish the service from the specified " "instance. Based on the information in the error debugs check and correct " "the configuration on the remote publisher"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>UCSAFCOMUCISNERR</del>	3-Error	[chars] error occurred with client [[chars]] on channel[[dec]]	COMM process is out of sync with client	voice-saf	"Disable/delete the channel and retry the operation. " "If that does not help then shutdown and restart the " "client's SAF service"
<del>UCSAFCOMUCISNERR</del>	3-Error	[chars] error occurred with client [[chars]] on channel[[dec]]	COMM process is out of sync with client	voice-saf	"Disable/delete the channel and retry the operation. " "If that does not help then shutdown and restart the " "client's SAF service"
<del>UCSASIDCOMQUEERR</del>	3-Error	Unable to enqueue uc-comm event [chars] [dec] to process watched queue	-	-	-
<del>UCSASIDCOMQUEERR</del>	3-Error	Unable to enqueue uc-comm event [chars] [dec] to process watched queue	-	-	-
<del>UCSASAFCLIENTSVERR</del>	3-Error	Could not bring voice saf client in service\n	Failed to instantiate client abstraction or initialization/ registration with other support modules has failed while voice service saf command was executed	voice-saf	"Check the size of free memory to make sure there is enough memory " "to run SAF service"
<del>UCSASAFCLIENTSVERR</del>	3-Error	Could not bring voice saf client in service\n	Failed to instantiate client abstraction or initialization/ registration with other support modules has failed while voice service saf command was executed	voice-saf	"Check the size of free memory to make sure there is enough memory " "to run SAF service"
<del>UCSASAFCLIENTSVERR</del>	3-Error	[chars]	An internal software error has occurred	voice-saf	LOGSIDSHTECHACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UCSA3SAFCLIENTINTERNAL</del>	3-Error	[chars]	An internal software error has occurred	voice-saf	LOG_SIDSHTECH_ACTION
<del>UCSA3SAFCLIENTINTERNAL</del>	3-Error	Client process event loop detected - [chars]	Invalid state or unexpected events detected at the client manager process execution	voice-saf	LOG_STD_ACTION
<del>UCSA3SAFCLIENTINTERNAL</del>	3-Error	Client process event loop detected - [chars]	Invalid state or unexpected events detected at the client manager process execution	voice-saf	LOG_STD_ACTION
<del>UCSA3SAFCLIENTINTERNAL</del>	3-Error	Error while adding or updating subscription notification from instance [dec][node][node][node]%/ai	Subscription notification received from the specified instance could not be added in the database. This could be because none of the advertised patterns were found to be valid or trunk-route parameters were invalid or the SAF DN database was already full.	voice-saf	"If the error is due to invalid advertisement " "turn on error debugs and re-publish the specified instance. " "Based on the error logs check and correct the configuration " "on the remote publisher "
<del>UCSA3SAFCLIENTINTERNAL</del>	3-Error	Error while adding or updating subscription notification from instance [dec][node][node][node]%/ai	Subscription notification received from the specified instance could not be added in the database. This could be because none of the advertised patterns were found to be valid or trunk-route parameters were invalid or the SAF DN database was already full.	voice-saf	"If the error is due to invalid advertisement " "turn on error debugs and re-publish the specified instance. " "Based on the error logs check and correct the configuration " "on the remote publisher "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UCSASQINTASKCHRC	3-Error	Error while performing task bag [chars] corresponding to task event [dec] job.	A transient object that carries task parameters could not be instantiated or is corrupted. This may result in improper execution of the associated task which inturn can affect the ongoing operation.	voice-saf	"Check the size of free memory to make sure there is enough memory."
UCSASQINTASKCHRC	3-Error	Error while performing task bag [chars] corresponding to task event [dec] job.	A transient object that carries task parameters could not be instantiated or is corrupted. This may result in improper execution of the associated task which inturn can affect the ongoing operation.	voice-saf	"Check the size of free memory to make sure there is enough memory."
UCSASQINTASKQIHRG	3-Error	Unable to enqueue task event [chars] [dec] to process watched queue	-	-	-
UCSASQINTASKQIHRG	3-Error	Unable to enqueue task event [chars] [dec] to process watched queue	-	-	-
UCSACOMMCHNLNRC	6-Information	[chars] for client [[chars]] on channel [[dec]] could not be completed because channel was unregistered	The most likely reason could be that the forwarder sent REGISTRATION notification message to UC SAF COMM process which causes the channel to be unregistered. Any messages from VSAF client in the interim for that channel will fail	voice-saf	"Take the necessary steps to re-instate the vrouter" " configurations. Then do shut followed by no shut " "on VSAF channel cli"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UCSAF COMM CHANNEL UNREG</del>	6-Information	[chars] for client [[chars]] on channel [[dec]] could not be completed because channel was unregistered	The most likely reason could be that the forwarder sent REGISTRATION notification message to UC SAF COMM process which causes the channel to be unregistered. Any messages from VSAF client in the interim for that channel will fail	voice-saf	"Take the necessary steps to re-instate the vrouter" " configurations. Then do shut followed by no shut " "on VSAF channel cli"
<del>UCSAF SAF CHANNEL REGISTER</del>	6-Information	Client channel id [dec] is [chars]\n	Configured voice saf operational state	voice-saf	"If the channel went down unintentionally it is probably " "due to misconfiguration resulting in error. Check if the " "configured channel arguments matches those under router " "eigrp command level. Do shut/no shut under the channel " "to reset the voice saf channel operations"
<del>UCSAF SAF CHANNEL REGISTER</del>	6-Information	Client channel id [dec] is [chars]\n	Configured voice saf operational state	voice-saf	"If the channel went down unintentionally it is probably " "due to misconfiguration resulting in error. Check if the " "configured channel arguments matches those under router " "eigrp command level. Do shut/no shut under the channel " "to reset the voice saf channel operations"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UCSASINPBNDR</del>	6-Information	Attempted publish of service [chars] [dec] with tag [dec] failed due to invalid	The user or system triggered service advertisement failed due to the detection of invalid or incomplete profile.	voice-saf	"Please check for the completeness of the service profile " "constructs. If they look ok pls check the status of the " "interfaces used under the trunk-route profile session " "parameters."
<del>UCSASINPBNDR</del>	6-Information	Attempted publish of service [chars] [dec] with tag [dec] failed due to invalid	The user or system triggered service advertisement failed due to the detection of invalid or incomplete profile.	voice-saf	"Please check for the completeness of the service profile " "constructs. If they look ok pls check the status of the " "interfaces used under the trunk-route profile session " "parameters."
<del>UCSASINPBNDR</del>	6-Information	Service [chars] [dec] with inst-id <[node][node][node][node] has been withdrawn due to	Withdrawal of service triggered due to change in state of configured profile.	voice-saf	"If the service was unintentionally withdrawn it was probably " "due to certain critical parameters missing in the profile or " "if the state of the hardware used in the profile is down. " "Say ip interface state used in the trunk-route is down. " "Please verify and re-do the publish command from the config or " "exec level."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UCODE3-BADHWVER	6-Information	Service [chars] [dec] with inst-id <[node][node][node][node] has been withdrawn due to	Withdrawal of service triggered due to change in state of configured profile.	voice-saf	"If the service was unintentionally withdrawn it was probably " "due to certain critical parameters missing in the profile or " "if the state of the hardware used in the profile is down. " "Say ip interface state used in the trunk-route is down. " "Please verify and re-do the publish command from the config or " "exec level."
UCODE3-BADCHKSUM	3-Error	Bad checksum in [chars] found 0x[hec] expected 0x[hec]	-	-	"Reload the microcode. If the message recurs call your technical\n\ support representative for assistance."
UCODE3-BADHWVER	3-Error	Ucode file [chars] requires [chars] version [dec].x hardware	A mismatch was detected during an attempt to load a microcode file\n\ into an interface processor. The hardware requires a different version\n\ than the one specified.	-	"Use the required microcode version."
UCODE3-HDRCORRUPT	3-Error	Ucode header corrupted in [chars] found 0x[hec] expected 0x[hec]	-	-	"Reload the microcode. If the message recurs call your technical\n\ support representative for assistance."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
UCODE-3-PCBUFFAIL	3-Error	Unable to obtain IPC resources	-	-	"Certain interface processors will not load properly. Try the reload\n\n command again. If this message recurs call your technical support\n\n representative for assistance."
UCODE-3-PCINITFAIL	3-Error	Unable to initialize IPC [chars] services	-	-	"Certain Interface Processors will not load properly. The router must\n\n be reloaded to clear the problem."
UCODE-3-PCINVALID	3-Error	Invalid IPC request [dec] received from [hec]	-	-	"Verify that the proper revisions of code are selected."
UCODE-3-LDFAIL	3-Error	Unable to download ucode from [chars] in slot [dec] trying [chars] ucode	For some reason the microcode file specified by the configuration is\n\n not suitable for downloading or another error occurred. The onboard\n\n ROM microcode will be loaded so the interface can remain\n\n operational.	-	"Attempt to reload the microcode. If the message recurs call your\n\n technical support representative for assistance."
UCODE-3-NOBUF	3-Error	Unable to allocate memory for ucode buffer	A buffer is required to decompress microcode before loading it into an\n\n interface processor. This buffer could not be allocated for some\n\n reason.	-	"Copy the message exactly as it appears and report it your technical\n\n support representative."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UCODE-3-NOFILE	3-Error	Ucode file [chars] not found system ucode loaded in slot [dec]	The file specified by the configuration was not found in Flash. The\n\ onboard ROM microcode will be loaded so the interface can remain\n\ operational.	-	"Use show flash to determine if the file is located in Flash. If the\n\ file is there attempt to reload the microcode. If the message recurs\n\ call your technical support representative for assistance."
UCODE-3-NOMEMORY	3-Error	Unable to allocate memory during microcode reload	An attempt at memory allocation failed while downloading microcode \n\ to Interface processor.	-	"Copy the message exactly as it appears and report it your technical\n\ support representative."
UCODE-3-NOROM	3-Error	Invalid attempt to load ROM ucode in slot [dec]	Some interface processors cannot load microcode from ROM.	-	"Remove the erroneous configuration statement."
UCODE-3-RDFAIL	3-Error	Unable to read ucode file [chars] from flash	For some reason the microcode file was not read from Flash. Flash\n\ might be locked by another process or otherwise unavailable.	-	"Use the show flash command to determine whether Flash is in use and\n\ issue another microcode reload when Flash is free. If the message\n\ recurs call your technical support representative for assistance."
UCODE-3-SRCTYPE	3-Error	Invalid Ucode source type [dec]	Microcode source type as specified is not supported on the\n\ given platform	-	"Verify that the proper revisions of code are selected."
UCODE-3-TOOBIG	3-Error	File [chars] at length [dec] is too long for buffer size [dec]	The file is too large for the buffer. The onboard ROM microcode will\n\ be loaded.	-	"If the error message recurs after the onboard ROM microcode is loaded\n\ call your technical support representative for assistance."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
UCODE3-VERSIONCK	3-Error	Inappropriate version [node][node]for [chars]	An attempt was made to load an inappropriate version of microcode.	-	"Copy the message exactly as it appears and report it your technical support representative."
UCODE3WRONGHARD	3-Error	[chars] is [chars] ucode not [chars] microcode/hardware mismatch	The specified microcode file is for a different interface processor than specified in the configuration. The user has made a configuration error. The onboard ROM microcode will be loaded.	-	"Reenter your microcode configuration command after confirming the interface type and reload the microcode."
UCODE5-OBSOLETE	5-Notice	FDDI unit [dec] has obsolete microcode: please upgrade it	This message occurs when an FDDI interface processor is found running microcode that does not support microcode CMT which is required for all software releases from 10.2 on.	-	"Upgrade the microcode on the interface processor."
UDEV3-UDEVPERMS	3-Error	An invalid permissions value [chars] was found in a udev file	The udev files for a particular filesystem contain a description the file system. If the permissions attribute is not recognized then this file system may run with incorrect permissions.	iosxe-chassismgr	LOG_SID_NO_ACTION
UDLD3UDLD_IB_ERRCR	3-Error	UDLD error handling [chars] interface: [chars]	A software error occurred in UDLD processing associated with a specific interface.	udld	LOG_SID_SHI_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UDLDINTERNAL_ERROR	3-Error	UDLD internal error: [chars]	A software sanity check failed in the course of UDLD processing.	udld	LOGS_IDSHTTECH_ACTION
UDLDINTERFACE_ERROR	3-Error	UDLD internal error interface [chars]: [chars]	A software sanity check failed in the course of UDLD processing.	udld	LOGS_IDSHTTECH_ACTION
UDLDINTERFACEREMOVAL_ERROR	3-Error	UDLD internal error during interface removal interface [chars]: [chars]	A software sanity check failed in the course of UDLD processing.	udld	LOGS_IDSHTTECH_ACTION
UDLDINTERFACEFAILURE	4-Warning	UDLD alert-only mode failure reported per user request port: [chars] state: [chars] port_blocked: [chars] neighbor_id: [chars] neighbor_port: [chars].	An interface failure was reported because UDLD protocol alert-only mode detected the cause indicated on the interface. Cause is likely due to bad interface hardware or cable misconfiguration. Interface not err-disabled as user choose to see only error-report. User should investigate and take action.	udld	LOGS_IDSHTTECH_ACTION
UDLDINTERFACEDISABLED	4-Warning	UDLD disabled interface [chars] [chars] detected	An interface was disabled because UDLD protocol detected the cause indicated on the interface indicated. Cause is likely due to bad interface hardware or cable misconfiguration. User should investigate.	udld	LOGS_IDSHTTECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UDLD:UDLD_PORT_FAILURE	4-Warning	UDLD failure reported per user request interface [chars] [chars] detected.	An interface failure was reported because UDLD protocol detected the cause\n\n indicated on the interface. Cause is likely due to bad interface hardware\n\n or cable misconfiguration. Interface not err-disabled as user choose to\n\n see error-report. User should investigate and take action.	udld	LOG_SIDSHTTECH_ACTION
UDLD:UDLD_PORT_CONNECTION	6-Information	UDLD New Connection reported per user request port: [chars] state: [chars] port_blocked: [chars] neighbor_id: [chars] neighbor_port: [chars].	UDLD protocol formed a new connection on this interface with neighbour switch	udld	LOG_SIDSHTTECH_ACTION
UDLD:UDLD_PORT_RESET	6-Information	UDLD reset interface [chars]	A port which had been disabled for UDLD has been reset.	udld	LOG_SIDSHTTECH_ACTION
UDP:7-GLEAN_DISABLED	7-Debug	ARP gleaning from UDP has been disabled.	The ARP gleaning from UDP has been disabled.	-	"If you want ARP gleaning from UDP do ip arp gleaning udp."
UDP:7-GLEAN_DISABLED	7-Debug	ARP gleaning from UDP has been disabled.	The ARP gleaning from UDP has been disabled.	-	"If you want ARP gleaning from UDP do ip arp gleaning udp."
UDP-7-NO_OUTINTF	7-Debug	No output interface for pkts received on [chars] forwarding from [node]to [node]	Output interface is NULL while forwarding UDP packets	-	"LOG_STD_ACTION"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UDP-7-NO_OUTINTF	7-Debug	No output interface for pkts received on [chars] forwarding from [node]to [node]	Output interface is NULL while forwarding UDP packets	-	"LOG_STD_ACTION"
UEACHOCDSNULLSAPIR	3-Error	-	The pointer to a SPA value is of a null value.	uea-im-tdm	LOGSIDSHTECHACION
UEADMGRRESERVEAL	3-Error	IDMGR ID [chars] Failure func [chars] line [dec] Feat [dec] ID %u	IDMGR API failed	dominica-infra	"Please fix it"
UEADMGRRESERVEAL	3-Error	IDMGR ID [chars] Failure func [chars] line [dec] Feat [dec] ID %u	IDMGR API failed	rsp3-infra	"Please fix it"
UEAMCREATEIDHFAURE	3-Error	Failed to create SPA [dec]/[dec] handle	Failed to create message handle for SPA communication.	asr1k-io-internal	LOGSIDSHTECHACION
UEAMCREATEIDMGAURE	3-Error	Failed to create [chars] message for [chars].	Failed to create/allocate necessary TDL message for SPA communication.	asr1k-io-internal	LOGSIDSHTECHACION
UEAMCREATIONFAURE	3-Error	slot=[dec] subslot=[dec] spa_type=0x[hec] lc_type=0x[hec].	Failed to create a SPA object.	asr1k-io-internal	LOGSIDSHTECHACION
UEA_IM3DIAG_CONFIG	3-Error	[chars] did not complete [dec]/[dec]	An error has ocured during diagnostic test.	asr1k-io-internal	LOGSIDSHTECHACION
UEAMDIACINTDFAURE	3-Error	Failed to initialize dispatch path for SPA [dec]/[dec] handle	Failed to initialize dispatch path handle for SPA communication.	asr1k-io-internal	LOGSIDSHTECHACION
UEAMDOMINDHFAURE	3-Error	[chars] rc = [dec]	Failed to bind message handle for SPA communication.	asr1k-io-internal	LOGSIDSHTECHACION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UEAM#GET#ATR#FAILURE	3-Error	Failed to get attribute pointer	Failed to get SPA attribute information.	asr1k-io-internal	LOG_SIDSH_TECH_ACTION
UEAM#INVALID#CPU#NUM	3-Error	cpu= [dec] max cpu = [dec]	An invalid CPU number is specified in one of the internal APIs.	asr1k-io-internal	LOG_SIDSH_TECH_ACTION
UEAM#INVALID#INDEX	3-Error	index= [dec] spaType=0x[hec] slot [dec] subSlot [dec] slotunit [dec] vc [dec]	Index for the interface is not valid.	asr1k-io-internal	LOG_SIDSH_TECH_ACTION
UEAM#INVALID#INDEX#RANGE	3-Error	index1= [dec] index2= [dec] maxIndex= [dec]	An invalid index range is specified in one of the internal APIs.	asr1k-io-internal	LOG_SIDSH_TECH_ACTION
UEAM#INVALID#RP#SLOT#NUM	3-Error	slot= [dec] max slot = [dec]	An invalid RP slot number is specified in one of the internal APIs.	asr1k-io-internal	LOG_SIDSH_TECH_ACTION
UEAM#INVALID#SLOT#NUM	3-Error	slot= [dec] max slot = [dec]	An invalid slot number is specified in one of the internal APIs.	asr1k-io-internal	LOG_SIDSH_TECH_ACTION
UEAM#INVALID#SLOT#UNIT#NUM	3-Error	cardwide-port = [dec] max cardwide-port = [dec]	An invalid cardwide-port number is specified in one of the internal APIs.	asr1k-io-internal	LOG_SIDSH_TECH_ACTION
UEAM#INVALID#USAGE#CAUSE	3-Error	-	Incorrect usage of an internal API that should only be used on CC.	asr1k-io-internal	LOG_SIDSH_TECH_ACTION
UEAM#INVALID#SUB#SLOT#NUM	3-Error	subslot= [dec] max subslot = [dec]	An invalid subslot number is specified in one of the internal APIs.	asr1k-io-internal	LOG_SIDSH_TECH_ACTION
UEA_IM#IPC#FAILURE	3-Error	IPC failure while [chars]	An error has occurred while preparing or sending an IPC message.	asr1k-io-internal	LOG_SIDSH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UEA_M3MEM_ALLOC_ERR	3-Error	[chars]	Memory allocation error.	asr1k-io-internal	LOG_SID_SH_TECH_ACTION
UEA_M3NULL_SPA_PIR	3-Error	-	Pointer to a SPA object is NULL.	asr1k-io-internal	LOG_SID_SH_TECH_ACTION
UEA_IM3-NULL_VFT	3-Error	[chars] virtual function table is not initialized. spaType=0x[hec]	A required function table is not initialized	asr1k-io-internal	LOG_SID_SH_TECH_ACTION
UEA_IM3-NULL_VFUNC	3-Error	[chars] vector is not initialized. spaType=0x[hec]	A required function vector is not initialized	asr1k-io-internal	LOG_SID_SH_TECH_ACTION
UEA_M3POWER_CYCLE	3-Error	[chars] occurred on Shared Port Adapter [node]%u	An error has occurred which will cause the \n\ Shared Port Adapter to be power cycled	asr1k-io-internal	LOG_SID_SH_TECH_ACTION
UEA_M3SENDCFGFAIL	3-Error	Failed to send configuration for [chars] to carrier-card for subslot=[dec]/[dec]	Sending configuration failed.	asr1k-io-internal	LOG_SID_SH_TECH_ACTION
UEA_M3SETUP_IDH_FAILURE	3-Error	Failed to set the alloc/free handler for SPA [dec]/[dec] handle	Failed to set the alloc/free handler for SPA communication.	asr1k-io-internal	LOG_SID_SH_TECH_ACTION
UEA_M3SPACREATION_FAILURE	3-Error	slot=[dec] subslot=[dec] PID=[chars] lc_type=0x[hec].	Failed to create a SPA object.	asr1k-io-internal	LOG_SID_SH_TECH_ACTION
UEA_M3DMGNCMABLE	6-Information	Failed to copy message [chars] to buffer not allowed for current domain.	Failure to marshal a message indicates an incompatibility with the intended recipient.	asr1k-spa-infra	LOG_SID_SH_TECH_ACTION
UEA_M3TDM_PW_EXCEED	3-Error	TDM PWs configured on SPA[chars] subslot [dec]/[dec] exceeds	Number of TDMoMPLS intd labels exceeded supported scale	-	"Please reduce the number of TDM PW's per Port to supported scale"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>UEADMDMPEXHEE</del>	3-Error	TDM PWs configured on SPA[chars] Interface [chars]	Number of TDMoMPLS intd labels exceeded supported scale	-	"Please reduce the number of TDM PW's per Port to supported scale"
<del>UEADMDMPEXHEE</del>	1-Alert	IM authentication failed for slot/bay [dec]/[dec]	This Module may not have been manufactured by Cisco or with Cisco's authorization. This product may contain software that was copied in violation of Cisco's license terms. If your use of this product is the cause of a support issue Cisco may deny operation of the product support under your warranty or under a Cisco technical support program such as Smartnet. Please contact Cisco's Technical Assistance Center for more information.	iomd-infra	LOG_STD_ACTION
<del>UEADMDMPEXHEE</del>	3-Error	Failed to configure APS on [chars]: [chars].	The SPA driver failed to configure APS on an interface.	asr900-im	LOG_STD_ACTION
<del>UEADMDMPEXHEE</del>	3-Error	APS PGP Message send failed toslot/tobay [dec]: [dec].	APS PGP between working and protect has failed	asr900-im	LOG_STD_ACTION
<del>UEADMDMPEXHEE</del>	3-Error	Bad ifcom message type=%u	-	asr900-im	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UEADMSPA_MALUMD	3-Error	Unsupported MALU command [dec] arg=[hex] pascb=[hex]	-	asr900-im	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
UEADMSPA_MALUM2	3-Error	Unsupported MALU cmd arg=0x[node]x[node]x arg1arg2=0x[node]x[node]x hwidb=[chars]	-	asr900-im	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
UEADMSPA_SWITCH_OVR	3-Error	[chars]: Invalid HA event detected: [chars]	HA switch over event comes before finishing inialization.	-	LOG_SID_SH_TECH_ACTION
UEADMSPA_C2W_INIT_FAIL	3-Error	Failed to initialize SPA main c2w bus for subslot [dec] status = [dec]	The SPA driver is not able to initialize SPA main c2w. This indicates a hardware error.	asr900-im	LOG_SID_NO_ACTION
UEADMSPA_CMD_NNT	3-Error	HWIDB Null for command [dec] port [hex]	The Route Processor passed down a port number that is unknown on the\n\ carrier card.	asr900-im	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
UEADMSPA_DEV_ERROR	3-Error	subSlot [dec] spatype 0x[hec]. Device error: [chars]	An error related to a device on the SPA is detected.	asr900-im	LOG_SID_SH_TECH_ACTION
UEADMSPA_CHAN_ERR	3-Error	EFC error - interface [chars] vc [dec] anyphy [dec] err_code [dec] : [chars]	Failed to configure efc channel/parameters	asr900-im	"Seach for resolved software issues using the Bug " "Toolkit at <a href="http://www.cisco.com/Support/Bugcenter/">http://www.cisco.com/Support/Bugcenter/</a> " "If you still require assistance " LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UEADMSPAHCMPAL	3-Error	Failed to update EFC flow control identifier for interface [chars] status = [dec]	The SPA driver is not able to update the datapath EFC flow control identifier for the interface specified in the message. This indicates a hardware error.	asr900-im	LOG_SID_NO_ACTION
UEADMSPAHCROVAL	3-Error	Failed to provision EFC for interface [chars] status = [dec]	The SPA driver is not able to provision EFC for the interface specified in the message. This indicates a hardware error.	asr900-im	LOG_SID_NO_ACTION
UEADMSPAHCUNROVAL	3-Error	Failed to unprovision EFC for VC [chars] status = [dec]	The SPA driver is not able to unprovision EFC for the interface specified in the message. This indicates a hardware error.	asr900-im	LOG_SID_NO_ACTION
UEADMSPASINOFIBRC	3-Error	Failed to send fast notification to [chars] for [chars] [chars].	The SPA driver failed to deliver a fast notification.	asr900-im	LOG_STD_ACTION
UEADMSPAFCINOTSET	3-Error	Bay [dec] - FCI type not set	An FCI type of zero was detected	asr900-im	LOG_STD_ACTION
UEADMSPAFCRCGIAL	3-Error	Failed to configure fast reroute on [chars]: [chars].	The SPA driver failed to configure fast rerouting on an interface.	asr900-im	LOG_STD_ACTION
UEADMSPAHWDIBLURE	3-Error	Creation: port [dec] vc [dec]	Failed to create a hwidb.	asr900-im	LOGSIDSHTEH_ACTION
UEADMSPA3NIFAIL	3-Error	Initialization error	A failure occurred during the initialization.	Obtainfromtraceback.	LOGSIDREDUCE_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UEA_IOMD_SPA3INVALIDPHY	3-Error	Bay [dec] - Invalid anyphy number [node]for vc [dec]	Interface has invalid anyphy number	asr900-im	"Search for resolved software issues using the Bug " "Toolkit at <a href="http://www.cisco.com/Support/BugHub/">http://www.cisco.com/Support/BugHub/</a> " "If you still require assistance open a case with the Technical Assistance " "Center via the Internet at " " <a href="http://www.cisco.com/infocenter">http://www.cisco.com/infocenter</a> or contact " "your Cisco technical support representative. Be sure to provide the " "the information you have gathered and a 'show tech-support' to " "your support representative or attach it to your case in non-zipped " "plain text format .txt."
UEA_IOMD_SPA3INVALIDF	3-Error	Attempted to access HWIDB for port [node]on slot [dec] subSlot [dec]	The UEA attempted to access the HWIDB associated with\n a non-existent port.	asr900-im	"Copy the error message exactly as it appears and report it to your\n technical support representative."
UEA_IOMD_SPA3INVALID	3-Error	Failed to allocate IPC buffer [chars]	The SPA failed to allocate a buffer for communication with\n the Route Processor UEA-RP.	asr900-im	"Copy the error message exactly as it appears and report it to your\n technical support representative."
UEA_IOMD_SPA3IFPORT	3-Error	Failed to [chars] IPC port '[chars]' error [chars]	The Linecard failed to create a port for\n communication with the Route Processor UEA-RP.	asr900-im	"Copy the error message exactly as it appears and report it to your\n technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UEA_IOMD_SA_IPC_OPEN [CRITICAL]	3-Error	Failed to open IPC port '[chars]' [chars] with error [chars]	The RP failed to open a port for communication with a SPA\n\ module.	asr900-im	LOG_STD_ACTION
UEA_IOMD_SA_IPC_SEND [CRITICAL]	3-Error	Failed to send IPC message [chars]	The Linecard failed to send a message to the\n\ Route Processor UEA-RP.	asr900-im	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
UEA_IOMD_SA_IPC_ISR [CRITICAL]	3-Error	ISR return code out of range. rc=[dec]	The ISR error return code is out of range.	asr900-im	LOG_STD_ACTION
UEA_IOMD_SA_IPC_LINK [CRITICAL]	3-Error	Link record error - Bay [dec] vc [dec] error code [dec]	Error processing link record structure	asr900-im	"Search for resolved software issues using the Bug " "Toolkit at <a href="http://www.cisco.com/cgi-bin/tabletools/bug_search.pl">http://www.cisco.com/cgi-bin/tabletools/bug_search.pl</a> " "If you still require assistance open a case with the Technical Assistance " "Center via the Internet at " " <a href="http://www.cisco.com/cgi-bin/tabletools/techassist.pl">http://www.cisco.com/cgi-bin/tabletools/techassist.pl</a> or contact " "your Cisco technical support representative. Be sure to provide the " "the information you have gathered and a 'show tech-support' to " "your support representative or attach it to your case in non-zipped " "plain text format .txt."
UEA_IOMD_SA_IPC_LOV [CRITICAL]	3-Error	Loveletter length exceeds max [node]bytes	The UEA IOMD attempted to send a large message to the\n\ Route Processor UEA-RP.	asr900-im	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UEADMSPAISSCELR	3-Error	Bay [dec]: [chars]	An unexpected error has occurred.	asr900-im	"Search for resolved software issues using the Bug " "Toolkit at <a href="http://www.cisco.com/bugtools">http://www.cisco.com/bugtools</a> " "If you still require assistance " LOG_STD_ACTION
UEADMSPAICKLAL	3-Error	Failed to [chars] SPA reference clock on [chars]	The SPA driver is not able to correctly configure the SPA reference clock on the specified interface. This indicates a hardware error.	asr900-im	LOG_SID_NO_ACTION
UEADMSPANDSACH	3-Error	Dispatch vector Null cmd=[dec] dintf=[dec]	No command dispatch vector was found for the specified interface.	asr900-im	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
UEADMSPA3POWER	3-Error	Bay [dec] 12V power is [chars]	SPA 12V power fault indicator	asr900-im	LOG_STD_ACTION
UEADMSPNDCLKAL	3-Error	SPA Sonet clock has failed status = 0x[node]x	The SPA SONET clock has failed. SPAs that rely on the SPA SONET clock for proper operation such as POS and ATM will be affected.	asr900-im	"If the SPA Sonet clock does not recover perform an " "OIR. LOG_SID_RECUR_ACTION
UEADMSPNDCLKRCD	3-Error	SPA Sonet clock has recovered status = 0x[node]x	SPA Sonet clock has recovered	asr900-im	LOG_SID_NO_ACTION
UEADMSPCRKCONFLE	3-Error	Subslot spa controller EFC configuration failure error [dec]	Failed to configure SPA controller EFC	asr900-im	"Search for resolved software issues using the Bug " "Toolkit at <a href="http://www.cisco.com/bugtools">http://www.cisco.com/bugtools</a> " "If you still require assistance " LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UEADMSPA_CNF_FAILURE	3-Error	Subslot [dec] spa controller initialisation failure error [dec]	Failed to initialise SPA controller	asr900-im	"Search for resolved software issues using the Bug " "Toolkit at <a href="http://www.cisco.com/cgi-bin/tabletools/bug_search.pl">http://www.cisco.com/cgi-bin/tabletools/bug_search.pl</a> " "If you still require assistance " LOG_STD_ACTION
UEADMSPA_IDC_ALLOC_ERR	3-Error	Failed to allocate interface identifiers for SPA [chars]	Failed to get CC buffer and flow control identifiers for the SPA in the specified subslot Traffic cannot flow through the SPA under this failure condition. This can happen if the system runs out of available identifiers.	asr900-im	"Try to reduce the number of interfaces" "configured in the system either by physically removing the SPAs" "or by changing the system configuration"
UEADMSPA_CFG_FAILURE	3-Error	Bay [dec] spi4 configuration failure error [dec]	Failed to configure SPI4 interface	asr900-im	"Search for resolved software issues using the Bug " "Toolkit at <a href="http://www.cisco.com/cgi-bin/tabletools/bug_search.pl">http://www.cisco.com/cgi-bin/tabletools/bug_search.pl</a> " "If you still require assistance " LOG_STD_ACTION
UEADMSPA_INIT_FAILURE	3-Error	Bay [dec] initialization failure	Failed to create SPI4 subblock	asr900-im	"Search for resolved software issues using the Bug " "Toolkit at <a href="http://www.cisco.com/cgi-bin/tabletools/bug_search.pl">http://www.cisco.com/cgi-bin/tabletools/bug_search.pl</a> " "If you still require assistance " LOG_STD_ACTION
UEADMSPA_INIT_SYNC	3-Error	[chars]: Can not synchronize SPI4 bus host: src [chars]in sync sink [chars]in sync spa: src [chars]in sync sink [chars]in sync.	SPI4 bus between modular services card and SPA is not synchronized. It indicates either a not properly seated SPA a hardware failure or an outdated ROMMON/FPGA image.	-	"Ensure that the SPA is properly seated " "in its subslot and reseat it if required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UEA_IOMD_SPA-EAIC001	3-Error	Failed to allocate Common IPC buffer [chars]	The Carrier Card failed to allocate a buffer for\n\n communication with the Route Processor.	asr900-im	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
UEA_IOMD_SPA-EAD001	4-Warning	Function [chars] detected an invalid [chars] pointer of [node]IX ignoring	A software error has occurred this message is displayed when \n\n an invalid pointer is detected.	-	'LOG_STD_ACTION'
UEA_IOMD_SPA-EABNDW01	4-Warning	Total SPA bandwidth exceeds line card capacity of [node] Mbps	The total bandwidth of SPAs exceeds the rated capacity of this line card.	asr900-im	"Refer to the line card guidelines for the maximum allowed" "aggregated SPA bandwidth for the line card"
UEA_IOMD_SPA-EABNDW05	4-Warning	Total SPA bandwidth exceeds line card capacity full utilization of installed SPA interfaces is not supported	The total bandwidth of SPAs exceeds the rated capacity of this line card.	asr900-im	"Refer to the line card guidelines for the maximum allowed" "aggregated SPA bandwidth for the line card"
UEA_IOMD_SPA-EASBUS	4-Warning	Subslot [dec] [chars] SPA BUS access failed. [node] [dec] [chars] [dec] [chars] addr=0x[node]x data=0x[hec]	SPABUS has reported an error.	asr900-im	LOG_STD_ACTION
UEA_IOMD_SPA-EASBUS2	4-Warning	Subslot [dec] SPA BUS access failed. No SPA present error	SPABUS has reported an error.	asr900-im	LOG_STD_ACTION
UEA_IOMD_SPA-EAIC006	6-Information	Logger message length [node]bytes exceeds the maximum allowed size	The carrier card attempted to send a large message to the Route Processor	asr900-im	LOG_STD_ACTION
UEA_IOMD_SPA-EAIOIR	6-Information	Bay [dec] [chars] changed to [chars]	SPA OIR Sequence	asr900-im	LOG_STD_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UEA_IPSEC_LICENSE_DISABLED</del>	3-Error	Reboot is required to disable IPsec license. Use 'write' command to make 'no license feature ipsec' available after reboot.	UEA IPsec license disable will take effect on next reboot	uea_ipsec	LOG_SID_NO_ACTION
<del>UEA_IPSEC_LICENSE_ENABLED</del>	3-Error	Reboot is required to enable IPsec license. Use 'write' command to make 'license feature ipsec' available after reboot.	UEA IPsec license enable will take effect on next reboot	uea_ipsec	LOG_SID_NO_ACTION
UEA_IPSEC_LICENSE_UNSUPPORTED	3-Error	This command is not supported in an NPE image	IPsec license cannot be enabled/disabled in an NPE image!	uea_ipsec	LOG_SID_NO_ACTION
<del>UEA_IPSEC_LICENSE_RESOURCES</del>	3-Error	Some system resources are not available due to incorrect IPsec license configuration. Please reboot for proper functioning of the system	Some system resources were reserved at bootup for IPsec feature due to incorrect IPsec license configuration. Reboot is needed to resolve this problem.	uea_ipsec	LOG_SID_NO_ACTION
UEA_CR3SPA_MISMATCH	3-Error	SPA [chars] mismatch in subslot 0/[dec]	During the router operation we check if the inserted IM is matching with the IM type that was configured on the subslot. If not a mismatch event is said to have occurred.	asr900-csl	LOG_STD_ACTION
<del>UEA_IPSEC_LICENSE_ACTIVATION_FAILED</del>	3-Error	<pre> ##### \nWARNING: PTP License is not yet activated. \nPlease configure 'license feature ptp'\ ##### </pre>	-	-	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UEASPA000EASPMDCFG	6-Information	SPA[chars] mode changed from [chars] to [chars] at subslot 0/[dec]	SPA Operating mode has been changed. SPA will be reloaded now.	asr900-csl	LOG_STD_NO_ACTION
UEASPA000EASPMDCFG	3-Error	Failed to create SPA [dec]/[dec] handle	Failed to create message handle for SPA communication.	-	LOG_SIDSH_TECH_ACTION
UEASPA000EASPMDCFG	3-Error	Failed to create [chars] message for [chars].	Failed to create/allocate necessary TDL message for SPA communication.	-	LOG_SIDSH_TECH_ACTION
UEASPA000EASPMDCFG	3-Error	slot=[dec] subslot=[dec] spa_type=0x[hec] lc_type=0x[hec].	Failed to create a SPA object.	-	LOG_SIDSH_TECH_ACTION
UEASPA000EASPMDCFG	3-Error	[chars] did not complete [dec]/[dec]	An error has occurred during diagnostic test.	-	LOG_SIDSH_TECH_ACTION
UEASPA000EASPMDCFG	3-Error	Failed to initialize dispatch path for SPA [dec]/[dec] handle	Failed to initialize dispatch path handle for SPA communication.	-	LOG_SIDSH_TECH_ACTION
UEASPA000EASPMDCFG	3-Error	[chars] rc = [dec]	Failed to bind message handle for SPA communication.	-	LOG_SIDSH_TECH_ACTION
UEASPA000EASPMDCFG	3-Error	cpu= [dec] max cpu = [dec]	An invalid CPU number is specified in one of the internal APIs.	-	LOG_SIDSH_TECH_ACTION
UEASPA000EASPMDCFG	3-Error	interface type [chars] slot [dec] port [dec] vc [dec] : [chars]	Data required to support the interface is not available.	-	LOG_SIDSH_TECH_ACTION
UEASPA000EASPMDCFG	3-Error	Failed to get a valid IPC handle for type [node]slot [dec] subslot [dec].	The client handle was found to be NULL for the given type/slot/subslot.	-	LOG_SIDSH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UEA_SPA3NVALIDINDEX	3-Error	index= [dec] spaType=0x[hec] slot [dec] subSlot [dec] slotunit [dec] vc [dec]	Index for the interface is not valid.	-	LOG_SIDSH_TECH_ACTION
UEA_SPA3INVALIDRANGE	3-Error	index1= [dec] index2= [dec] maxIndex= [dec]	An invalid index range is specified in one of the internal APIs.	-	LOG_SIDSH_TECH_ACTION
UEA_SPA3INVALIDRPCINUM	3-Error	slot= [dec] max slot = [dec]	An invalid RP slot number is specified in one of the internal APIs.	-	LOG_SIDSH_TECH_ACTION
UEA_SPA3INVALIDSLOTINUM	3-Error	slot= [dec] max slot = [dec]	An invalid slot number is specified in one of the internal APIs.	-	LOG_SIDSH_TECH_ACTION
UEA_SPA3INVALIDSLOTINUM	3-Error	cardwide-port = [dec] max cardwide-port = [dec]	An invalid cardwide-port number is specified in one of the internal APIs.	-	LOG_SIDSH_TECH_ACTION
UEA_SPA3INVALIDCAUSE	3-Error	-	Incorrect usage of an internal API that should only be used on CC.	-	LOG_SIDSH_TECH_ACTION
UEA_SPA3INVALIDSUBSLOTINUM	3-Error	subslot= [dec] max subslot = [dec]	An invalid subslot number is specified in one of the internal APIs.	-	LOG_SIDSH_TECH_ACTION
UEA_SPA3IPC_FAILURE	3-Error	IPC failure while [chars]	An error has occurred while preparing or sending an IPC message.	-	LOG_SIDSH_TECH_ACTION
UEA_SPA3MEM_ALLOC_ERR	3-Error	[chars]	Memory allocation error.	-	LOG_SIDSH_TECH_ACTION
UEA_SPA3NULL_SPA_PIR	3-Error	-	Pointer to a SPA object is NULL.	-	LOG_SIDSH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UEA_SPA3-NULL_VFT	3-Error	[chars] virtual function table is not initialized. spaType=0x[hec]	A required function table is not initialized	-	LOG_SID_SH_TECH_ACTION
UEA_SPA3-NULL_VFUNC	3-Error	[chars] vector is not initialized. spaType=0x[hec]	A required function vector is not initialized	-	LOG_SID_SH_TECH_ACTION
UEA_SPA3-POWER_CYCLE	3-Error	[chars] occurred on Shared Port Adapter [node]%u	An error has occurred which will cause the \n\ Shared Port Adapter to be power cycled	-	LOG_SID_SH_TECH_ACTION
UEA_SPA3-SEND_CFG_FAIL	3-Error	Failed to send configuration for [chars] to carrier-card for subslot=[dec]/[dec]	Sending configuration failed.	-	LOG_SID_SH_TECH_ACTION
UEA_SPA3-SETUP_ID_FAILURE	3-Error	Failed to set the alloc/free handler for SPA [dec]/[dec] handle	Failed to set the alloc/free handler for SPA communication.	-	LOG_SID_SH_TECH_ACTION
UEA_SPA3-CREATION_FAILURE	3-Error	slot=[dec] subslot=[dec] PID=[chars] lc_type=0x[hec].	Failed to create a SPA object.	-	LOG_SID_SH_TECH_ACTION
UEA_SPA3-UNSUPPORTED_DATA	3-Error	Data conversion error [chars] 0x[hex]	An internal software error has occurred when converting the data specified in the message from one representation to another.	-	LOG_SID_SH_TECH_ACTION
UEA_SPA3-IMMEDIATE_COPY_FAILURE	6-Information	Failed to copy message [chars] to buffer not allowed for current domain.	Failure to marshal a message indicates an incompatibility with the intended recipient.	-	LOG_SID_SH_TECH_ACTION
UEA_IDM-NULL_UEA_PTR	3-Error	-	Pointer to a UEA object is NULL.	uea-im-tdm	LOG_SID_SH_TECH_ACTION
UEA_IDM-PLUGIN_INIT_FAILURE	3-Error	Plugin init failed. UEA object [chars] Action [chars].	Plugin init failed UEA	uea-im-tdm	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UEADMERRMFAIL	3-Error	st=[node]bst=[node] type = [node]PID=[chars]	Failed to create a UEA object.	uea-im-tdm	LOG_SID_SH_TECH_ACTION
UEADMERRMPCFIED	6-Information	EEPROM programming FAILED for IM	IM EEPROM programming was unsuccessful allowing module to boot	-	LOG_SID_NO_ACTION
UEADMERRMPCPSD	6-Information	EEPROM programming passed for IM	IM EEPROM was programmed successfully attempting IM reset	-	LOG_SID_NO_ACTION
UEA_UHR_APPMFAIL	3-Error	Not enough memory for [chars]	Failed to create a UEA object.	uea-im-tdm	LOG_SID_SH_TECH_ACTION
UEA_UHR_APPNULL_PIR	3-Error	-	Pointer to a UEA object is NULL.	uea-im-tdm	LOG_SID_SH_TECH_ACTION
UEA_UHR_APPMENCAP	3-Error	Unsupported Encap : %u	TDM Configuration failed	uea-im-tdm	LOG_SID_SH_TECH_ACTION
UEA_UHR_APPMNCFAIL	3-Error	WinIPC failed : command [chars]	WinIPC Failed	uea-im-tdm	LOG_SID_SH_TECH_ACTION
UASIMASISVPCSFRIERR	3-Error	No process available for transmitting UplinkFast packets.	UplinkFast packets will not be transmitted as the process could\n\n not be created.	-	"UplinkFast will not work unless you reload. If this problem persists \n\n even after reload please contact your Cisco Technical Support\n\n representative with the configuration and technical support\n\n information."
UASIMASISVPCSMALAE	4-Warning	No memory is available for transmitting UplinkFast packets on\n\n Vlan [dec].	UplinkFast packets will not be transmitted on Vlan [dec] due to a\n\n lack of memory.	-	"Reduce other system activity to ease memory demands. If conditions\n\n warrant upgrade to a larger memory configuration."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UI-3-IPC_ALLOC	3-Error	module type [node]subtype %u	IPC packet allocation failed for UI reply. Sender will not get reply	cpp-ucode	LOG_STD_ACTION
UI-3-REPLY	3-Error	module type [node]subtype %u	A UI reply message failed in the IPC send. Sender will not get reply	cpp-ucode	LOG_STD_ACTION
UI-6-NOHANDLER	6-Information	module type [node]subtype %u	A UI message was received containing an unrecognized module type or module subtype	cpp-ucode	LOG_STD_ACTION
UIEXP3LIBRARY_ERROR	3-Error	iosxe-ui	Error loading library '%s':[chars]	"A configuration message was received which required a library to be loaded. The library failed to load."	LOG_STD_ACTION
UIEXP3MESSAGE_ERROR	3-Error	iosxe-ui	Unable to process message for '%s':[chars]	"A message was received by the configuration export module which could not be processed. The message has been discarded."	LOG_STD_ACTION
UIEXP3SYMBOL_ERROR	3-Error	iosxe-ui	Error loading library symbol '%s' from '%s':[chars]	"A configuration message was received which required a library to be loaded. The library failed to load all required symbols."	LOG_STD_ACTION
UIEXP3WRITE_FAILED	3-Error	iosxe-ui	Unable to write configuration for '%s':[chars]	"The configuration export module failed to write the server configuration files. The server configuration change has not occurred."	LOG_STD_ACTION
UIEXP3SERVER_NOTIFICATION_START	6-Information	iosxe-ui	Server[chars] has been notified to start	"The server has been notified to start."	LOG_STD_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UIPEER-1-NO_PEER</del> UIPEER-1-NO_PEER	6-Information	iosxe-ui	Server[chars] has been notified to stop	"The server has been notified to stop."	LOG_SID_NO_ACTION
<del>UIPEER-2-TDL_MESSAGE</del> UIPEER-2-TDL_MESSAGE	2-Critical	iosxe-binos-utils	Cannot construct an IPC message for library. The message name is[chars] and the reason is:[chars]	A problem occurred while constructing a type definition language (TDL) message or setting a field in a TDL message. If the problem occurred during construction of a TDL message	-
<del>UIPEER-3-NO_PEER</del> UIPEER-3-NO_PEER	3-Error	iosxe-binos-utils	The peer process was unable to process an incoming message for 'debug all' from the shell-manager	When the 'debug all' command is issued	-
<del>UIPEER-4-NO_PEER</del> UIPEER-4-NO_PEER	3-Error	iosxe-binos-utils	The peer process was unable to process an incoming epoch update message from the shell-manager	For each new type definition language (TDL) epoch	-
<del>UIPEER-5-NO_PEER</del> UIPEER-5-NO_PEER	3-Error	iosxe-binos-utils	The peer process was unable to process an incoming message for host info from the shell-manager	When host information	-
UIPEER-3-NO_PEER	3-Error	iosxe-binos-utils	A process was unable to retrieve a shell-manager peer handle.	A process was attempting to communicate with the Shell Manager daemon using the integrated [uipeer] component. The error occurred because the peer instance could not be found.	Check [uipeer] ERR entries in the log files for message reporting problems.

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UHSFLOGRCHGNM	3-Error	polaris-trace	Tracelog number for process[chars] changed to %d	Tracelog number to keep for a process is changed using set logging tracelog-number .. CLI	tac_details "No action is required. Change of tracelog to keep for a process using set logging tracelog-number .. CLI is only for a current boot. Make sure to revert the tracelog number at lower value after purpose is served. For most processes/platform
UHSIMRACURACYTEST	5-Notice	iosxe-binos-utils	Timer Accuracy Test[chars].	Test result of Timer Accuracy Test	tac_details "No action is required if test result is PASS. If test result is FAIL
UMRLAMBRLA_ANLURE	3-Error	Failed to register with RF rc = [dec]	Organization does not exists	xe-opendns-conn	"Reactivtae Umbrella license"
UNAWAKABLE-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
UNAWAKABLE-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
UNEXCHDMNBDPSHD	3-Error	ERRMSG_HAG_TRACEBACK	-	-	-
UNEXCHDMNBDPSHD	3-Error	ERRMSG_HAG_TRACEBACK	-	-	-
UNEXCHDMNBMSEKHD	3-Error	ERRMSG_HAG_TRACEBACK	-	-	-
UNEXCHDMNBMSEKHD	3-Error	ERRMSG_HAG_TRACEBACK	-	-	-
UNEXCHDMSSCBPESH	3-Error	ERRMSG_HAG_TRACEBACK	-	-	-
UNEXCHDMSSCBPESH	3-Error	ERRMSG_HAG_TRACEBACK	-	-	-
UNEXCHDMSCMSEKHD	3-Error	ERRMSG_HAG_TRACEBACK	-	-	-
UNEXCHDMSCMSEKHD	3-Error	ERRMSG_HAG_TRACEBACK	-	-	-
UNEXCHDMSCMSEKHD	3-Error	ERRMSG_HAG_TRACEBACK	-	-	-
UNEXCHDMSCMSEKHD	3-Error	ERRMSG_HAG_TRACEBACK	-	-	-
UNEXCHDMRBDPSHD	3-Error	ERRMSG_HAG_TRACEBACK	-	-	-
UNEXCHDMRBDPSHD	3-Error	ERRMSG_HAG_TRACEBACK	-	-	-
UNEXCHDMRBMSEKHD	3-Error	ERRMSG_HAG_TRACEBACK	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UNQ_ADDR3DUP_IP4	3-Error	ERRMGR_HAG_TRACEBACK	-	-	-
UNQ_ADDR3DUP_IP4	3-Error	A duplicate IPv4 address has been detected [chars] = [node]already in use by [chars]/[chars]	An access-accept message has been parsed which includes an IPv4 address that already exists in the database. This usually means that the RADIUS server has mistakenly returned an IPv4 address it has returned before.	-	"In the RADIUS server check to see why it is" " returning duplicate IPv4 addresses to the BNG router. At the BNG" " router issue the command 'show ppp all' to see all ppp sessions" " as well as their IP addresses. Useful debugging command are" " 'debug ppp unique address' 'debug radius' and 'debug aaa' "accouting'."
UNQ_ADDR3DUP_IP4	3-Error	A duplicate IPv4 address has been detected [chars] = [node]already in use by [chars]/[chars]	An access-accept message has been parsed which includes an IPv4 address that already exists in the database. This usually means that the RADIUS server has mistakenly returned an IPv4 address it has returned before.	-	"In the RADIUS server check to see why it is" " returning duplicate IPv4 addresses to the BNG router. At the BNG" " router issue the command 'show ppp all' to see all ppp sessions" " as well as their IP addresses. Useful debugging command are" " 'debug ppp unique address' 'debug radius' and 'debug aaa' "accouting'."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UNQADDR IPv6 DLRPF	3-Error	A duplicate delegated IPv6 prefix has been detected [chars] = [node]already in use by [chars]/[chars]	An access-accept message has been parsed which includes a delegated IPv6 prefix that already exists in the database. This usually means that the RADIUS server has mistakenly returned a delegated IPv6 prefix it has returned before.	-	"In the RADIUS server check to see why it is" " returning duplicate delegated IPv6 prefixes to the BNG router." " At the BNG router issue the command 'show ppp all' to see all" " ppp sessions as well as their IP addresses. Useful debugging" " command are 'debug ppp unique address' 'debug radius' and" " 'debug aaa accounting'."
UNQADDR IPv6 DLRPF	3-Error	A duplicate delegated IPv6 prefix has been detected [chars] = [node]already in use by [chars]/[chars]	An access-accept message has been parsed which includes a delegated IPv6 prefix that already exists in the database. This usually means that the RADIUS server has mistakenly returned a delegated IPv6 prefix it has returned before.	-	"In the RADIUS server check to see why it is" " returning duplicate delegated IPv6 prefixes to the BNG router." " At the BNG router issue the command 'show ppp all' to see all" " ppp sessions as well as their IP addresses. Useful debugging" " command are 'debug ppp unique address' 'debug radius' and" " 'debug aaa accounting'."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UNQADDR3DULIPv6ERR	3-Error	A duplicate IPv6 prefix has been detected [chars] = [node]already in use by [chars]/[chars]	An access-accept message has been parsed which includes an IPv6 prefix that already exists in the database. This usually means that the RADIUS server has mistakenly returned an IPv6 prefix it has returned before.	-	"In the RADIUS server check to see why it is" "returning duplicate IPv6 prefixes to the BNG router. At the BNG" "router issue the command 'show ppp all' to see all ppp sessions" " as well as their IP addresses. Useful debugging command are" " 'debug ppp unique address' 'debug radius' and 'debug aaa' " " accounting'."
UNQADDR3DULIPv6ERR	3-Error	A duplicate IPv6 prefix has been detected [chars] = [node]already in use by [chars]/[chars]	An access-accept message has been parsed which includes an IPv6 prefix that already exists in the database. This usually means that the RADIUS server has mistakenly returned an IPv6 prefix it has returned before.	-	"In the RADIUS server check to see why it is" "returning duplicate IPv6 prefixes to the BNG router. At the BNG" "router issue the command 'show ppp all' to see all ppp sessions" " as well as their IP addresses. Useful debugging command are" " 'debug ppp unique address' 'debug radius' and 'debug aaa' " " accounting'."
UNIX_BPD3HMWB_ERR	3-Error	[chars]: [dec]	HWIDB Lookup Error	UNKBDDDISCOMPONENT	LOG_STD_ACTION
UNIX_BPD3PKT_ERR	3-Error	[chars]: [chars]	Packet Not Available	UNKBDDDISCOMPONENT	LOG_STD_ACTION
UNIX_IFUIL3PAK_ERR	3-Error	Pak not available [chars]: [chars]	The running configuration was too big to be synced	UNKBDDDISCOMPONENT	LOG_STD_NO_ACTION
UNIX_IFUIL3POOL_ERR	3-Error	[chars] Pool Creation Error for hwidb: [chars]	POOL Creation Error	UNKBDDDISCOMPONENT	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UNIX_SPA3CREATION_FAILURE	3-Error	slot=[dec] subslot=[dec] spa_type=0x[hec] lc_type=0x[hec].	Failed to create a SPA object.	diou	LOG_SID_SH_TECH_ACTION
UNIX_SPA3DIAG_CONFIG	3-Error	[chars] did not complete [dec]/[dec]	An error has occurred during diagnostic test.	c7600-field-diag	LOG_SID_SH_TECH_ACTION
UNIX_SPA3INVALID_INTERFACE	3-Error	interface type [chars] slot [dec] port [dec] vc [dec] : [chars]	Data required to support the interface is not available.	diou	LOG_SID_SH_TECH_ACTION
UNIX_SPA3INVALID_INDEX	3-Error	index= [dec] spaType=0x[hec] slot [dec] subSlot [dec] slotunit [dec] vc [dec]	Index for the interface is not valid.	diou	LOG_SID_SH_TECH_ACTION
UNIX_SPA3INVALID_INDEX_RANGE	3-Error	index1= [dec] index2= [dec] maxIndex= [dec]	Invalid index range.	diou	LOG_SID_SH_TECH_ACTION
UNIX_SPA3INVALID_SLOT_NUM	3-Error	slot= [dec] max slot = [dec]	Invalid slot number.	diou	LOG_SID_SH_TECH_ACTION
UNIX_SPA3INVALID_CARD_NUM	3-Error	cardwide-port = [dec] max cardwide-port = [dec]	Invalid cardwide-port number.	diou	LOG_SID_SH_TECH_ACTION
UNIX_SPA3IPC_FAILURE	3-Error	IPC failure while [chars]	An error has occurred while preparing or sending an IPC message.	diou	LOG_SID_SH_TECH_ACTION
UNIX_SPA3MEM_ALLOC_ERROR	3-Error	[chars]	Memory allocation error.	diou	LOG_SID_SH_TECH_ACTION
UNIX_SPA3NULL_HWIDB	3-Error	[chars] called with NULL hwidb	A NULL hwidb is encountered	diou	LOG_SID_SH_TECH_ACTION
UNIX_SPA3NULL_SPA_PIR	3-Error	-	Pointer to a SPA object is NULL.	diou	LOG_SID_SH_TECH_ACTION
UNIX_SPA3NULL_VFT	3-Error	[chars] virtual function table is not initialized. spaType=0x[hec]	A required function table is not initialized	diou	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UNIX_SPA3NULL_VFUNC	3-Error	[chars] vector is not initialized. spaType=0x[hec]	A required function vector is not initialized	diou	LOG_SIDSHTTECH_ACTION
UNIX_SPA3POWER_CYCLE	3-Error	[chars] occurred on Shared Port Adapter [node]%u	An error has occurred which will cause the \n\ Shared Port Adapter to be power cycled	diou	LOG_SIDSHTTECH_ACTION
UNIX_SPA3SENDCFGFAIL	3-Error	Failed to send configuration for [chars] to carrier-card for subslot=[dec]/[dec]	Sending configuration failed.	diou	LOG_SIDSHTTECH_ACTION
UNIX_SPA3CREATEOBJFAIL	3-Error	slot=[dec] subslot=[dec] PID=[chars] lc_type=0x[hec].	Failed to create a SPA object.	diou	LOG_SIDSHTTECH_ACTION
UNIX_SPA3SUBCREATEOBJFAIL	3-Error	Failed to create SPA SB	Failed to create a SPA subblock.	diou	LOG_SIDSHTTECH_ACTION
UNIX_SPA3SUBFORIEDDATA	3-Error	Data conversion error [chars] 0x[hex]	An internal software error has occurred when converting the data specified in the message from one representation to another.	diou	LOG_SIDSHTTECH_ACTION
UNIX_SPA3C2WMAININITIAL	3-Error	Failed to initialize SPA main c2w bus for subslot [dec] status = [dec]	The SPA driver is not able to initialize SPA main c2w. This indicates a hardware error.	diou	LOG_SID_NO_ACTION
UNIX_SPA3CMDNONINT	3-Error	HWIDB Null for command [dec] port [hex]	The Route Processor passed down a port number that is unknown on the\n\ carrier card.	diou	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
UNIX_SPA3DEVICEERRCR	3-Error	subSlot [dec] spatype 0x[hec]. Device error: [chars]	An error related to a device on the SPA is detected.	diou	LOG_SIDSHTTECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UNMCSA3HCCHANNER	3-Error	EFC error - interface [chars] vc [dec] anyphy [dec] err_code [dec] : [chars]	Failed to configure efc channel/parameters	diou	"Search for resolved software issues using the Bug " "Toolkit at <a href="http://www.cisco.com/bugtools">http://www.cisco.com/bugtools</a> " "If you still require assistance " LOG_STD_ACTION
UNMCSA3HCMPIAL	3-Error	Failed to update EFC flow control identifier for interface [chars] status = [dec]	The SPA driver is not able to update the datapath EFC flow control identifier for the interface specified in the message. This indicates a hardware error.	diou	LOG_SID_NO_ACTION
UNMCSA3HCRCVIAL	3-Error	Failed to provision EFC for interface [chars] status = [dec]	The SPA driver is not able to provision EFC for the interface specified in the message. This indicates a hardware error.	diou	LOG_SID_NO_ACTION
UNMCSA3HCUNPROVAL	3-Error	Failed to unprovision EFC for VC [chars] status = [dec]	The SPA driver is not able to unprovision EFC for the interface specified in the message. This indicates a hardware error.	diou	LOG_SID_NO_ACTION
UNMCSA3FCI_NOT_SET	3-Error	Bay [dec] - FCI type not set	An FCI type of zero was detected	c7600-sip-common	LOG_STD_ACTION
UNMCSA3HWDFAILURE	3-Error	Creation: port [dec] vc [dec]	Failed to create a hwidb.	diou	LOGSIDSHTCHACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UNICSPA3INVALIDPHY	3-Error	Bay [dec] - Invalid anyphy number [node]for vc [dec]	Interface has invalid anyphy number	spa-ser-common	"Search for resolved software issues using the Bug " "Toolkit at <a href="http://www.cisco.com/cgi-bin/bugtools/bugtools.pl">http://www.cisco.com/cgi-bin/bugtools/bugtools.pl</a> " "If you still require assistance open a case with the Technical Assistance " "Center via the Internet at " " <a href="http://www.cisco.com/cgi-bin/techassist/techassist.pl">http://www.cisco.com/cgi-bin/techassist/techassist.pl</a> or contact " "your Cisco technical support representative. Be sure to provide the " "the information you have gathered and a 'show tech-support' to " "your support representative or attach it to your case in non-zipped " "plain text format .txt."
UNIXLSPA3INVALIDIF	3-Error	Attempted to access HWIDB for port [node]on slot [dec] subSlot [dec]	The IOU attempted to access the HWIDB associated with\n a non-existent port.	diou	"Copy the error message exactly as it appears and report it to your\n technical support representative."
UNICSPA3ERR_CRRCR	3-Error	ISR return code out of range. rc=[dec]	The ISR error return code is out of range.	diou	LOG_SIDSH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UNIXLSPA3LNKERR	3-Error	Link record error - Bay [dec] vc [dec] error code [dec]	Error processing link record structure	spa-ser-common	"Search for resolved software issues using the Bug " "Toolkit at <a href="http://www.cisco.com/cgi-bin/tablelookup.pl?table=/tablebugger">http://www.cisco.com/cgi-bin/tablelookup.pl?table=/tablebugger</a> " "If you still require assistance open a case with the Technical Assistance " "Center via the Internet at " " <a href="http://www.cisco.com/techassist">http://www.cisco.com/techassist</a> or contact " "your Cisco technical support representative. Be sure to provide the " "the information you have gathered and a 'show tech-support' to " "your support representative or attach it to your case in non-zipped " "plain text format .txt."
UNIXLSPA3MSSERR	3-Error	Bay [dec]: [chars]	An unexpected error has occurred.	diou	"Search for resolved software issues using the Bug " "Toolkit at " <a href="http://www.cisco.com/cgi-bin/tablelookup.pl?table=/tablebugger">http://www.cisco.com/cgi-bin/tablelookup.pl?table=/tablebugger</a> " "If you still require assistance " LOG_STD_ACTION
UNIXLSPA3NEICLK_FAL	3-Error	Failed to [chars] SPA reference clock on [chars]	The SPA driver is not able to correctly configure the SPA reference clock on the specified interface. This indicates a hardware error.	diou	LOG_SID_NO_ACTION
UNIXLSPA3NULLSPABAY	3-Error	-	Pointer to object for bay [dec] is NULL.	diou	LOGSIDSHTECHACIION
UNIXLSPA3POWER	3-Error	Bay [dec] 12V power is [chars]	SPA 12V power fault indicator	diou	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UNCS_PAN_CLOCK_FAILD	3-Error	SPA Sonet clock has failed status = 0x[node]x	The SPA SONET clock has failed. SPAs that rely on the SPA SONET clock for proper operation such as POS and ATM will be affected.	c7600-sip-common	"If the SPA Sonet clock does not recover perform an "OIR." LOG_SID_RECUR_ACTION
UNCS_PAN_CLOCK_RECVD	3-Error	SPA Sonet clock has recovered status = 0x[node]x	SPA Sonet clock has recovered	c7600-sip-common	LOG_SID_NO_ACTION
UNCS_PAN_CRN_CONFIG_FAIL	3-Error	Subslot spa controller EFC configuration failure error [dec]	Failed to configure SPA controller EFC	diou	"Search for resolved software issues using the Bug " "Toolkit at <a href="http://www.cisco.com/cgi-bin/tablelookup.pl?table=/tablelookup.html">http://www.cisco.com/cgi-bin/tablelookup.pl?table=/tablelookup.html</a> " "If you still require assistance " LOG_STD_ACTION
UNCS_PAN_CRN_INIT_FAIL	3-Error	Subslot [dec] spa controller initialisation failure error [dec]	Failed to initialise SPA controller	diou	"Search for resolved software issues using the Bug " "Toolkit at <a href="http://www.cisco.com/cgi-bin/tablelookup.pl?table=/tablelookup.html">http://www.cisco.com/cgi-bin/tablelookup.pl?table=/tablelookup.html</a> " "If you still require assistance " LOG_STD_ACTION
UNCS_PAN_SPI_CONFIG_FAIL	3-Error	Bay [dec] spi4 configuration failure error [dec]	Failed to configure SPI4 interface	diou	"Search for resolved software issues using the Bug " "Toolkit at <a href="http://www.cisco.com/cgi-bin/tablelookup.pl?table=/tablelookup.html">http://www.cisco.com/cgi-bin/tablelookup.pl?table=/tablelookup.html</a> " "If you still require assistance " LOG_STD_ACTION
UNCS_PAN_SPI_INIT_FAIL	3-Error	Bay [dec] initialization failure	Failed to create SPI4 subblock	diou	"Search for resolved software issues using the Bug " "Toolkit at <a href="http://www.cisco.com/cgi-bin/tablelookup.pl?table=/tablelookup.html">http://www.cisco.com/cgi-bin/tablelookup.pl?table=/tablelookup.html</a> " "If you still require assistance " LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UNIXCPA_NMCALCFL	3-Error	Failed to allocate Common IPC buffer [chars]	The Carrier Card failed to allocate a buffer for\n\n communication with the Route Processor.	diou	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
UNIXCPA_MAXBNDWH	4-Warning	Total SPA bandwidth exceeds line card capacity of [node] Mbps	The total bandwidth of SPAs exceeds the rated capacity of this line card.	diou	"Refer to the line card guidelines for the maximum allowed" "aggregated SPA bandwidth for the line card"
UNIXCPA_MAXBNDWHNS	4-Warning	Total SPA bandwidth exceeds line card capacity full utilization of installed SPA interfaces is not supported	The total bandwidth of SPAs exceeds the rated capacity of this line card.	diou	"Refer to the line card guidelines for the maximum allowed" "aggregated SPA bandwidth for the line card"
UNIXLC_SPA-4SPABUS	4-Warning	Subslot [dec] [chars] SPA BUS access failed. [node] [dec] [chars] [addr=0x[node]x data=0x[hec]	SPABUS has reported an error.	diou	LOG_STD_ACTION
UNIXLC_SPA-4SPABUS2	4-Warning	Subslot [dec] SPA BUS access failed. No SPA present error	SPABUS has reported an error.	diou	LOG_STD_ACTION
UNIXLC_SPA-6OIR	6-Information	Bay [dec] [chars] changed to [chars]	SPA OIR Sequence	diou	LOG_SID_NO_ACTION
UNIXRPA3_CUHAIEAL	3-Error	Failed to update connection identifier for interface [chars]	The SPA driver is not able to update the datapath connection identifier for the interface specified in the message. This indicates a software error.	diou	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UNRPSA3HXIKLPAL	3-Error	Failed to retrieve datapath identifier for interface [chars]	The SPA driver is not able to retrieve the datapath identifier for the interface specified in the message. This indicates a software error.	diou	LOG_SID_NO_ACTION
UNRPSA3IOWDAIQCIAL	3-Error	Failed to allocate a flow control identifier for interface [chars]	The SPA driver is not able to allocate the datapath flow control identifier for the interface specified in the message. This indicates a software error.	diou	LOG_SID_NO_ACTION
UNRPSA3IOWDRLSEAL	3-Error	Failed to release a flow control identifier for interface [chars] status = [dec]	The SPA driver is not able to release the datapath flow control identifier for the interface specified in the message. This indicates a software error.	diou	LOG_SID_NO_ACTION
UNRPSA3HMBIAURE	3-Error	Creation: slot [dec] subSlot [dec] port [dec] vc [dec]	Failed to create an interface hwidb.	diou	LOG_SIDSHTCH_ACTION
UNRPSA3HMBNIAL	3-Error	Failed to initialize data structure for SPA port [dec]/[dec]/[dec]	A SPA driver was not able to properly initialize a data structure mentioned in the message. This indicates a software error.	diou	LOG_SID_NO_ACTION
UNRPSA3ANADICRNUM	3-Error	slot=[dec] port=[dec] hwidbType=0x[hec] max_port_num=[dec] LCtype=0x[hec]	The port number is out of range.	diou	LOG_SIDSHTCH_ACTION
UNRPSA3PCALOCAL	3-Error	Failed to allocate IPC buffer [chars]	The RP failed to allocate a buffer for communication with a SPA	diou	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UNXRP_SPA3MAX_SPA	3-Error	Power to IPSEC-SPA-2G in [chars] is denied because it has exceeded the number allowed[dec]	The number of IPSEC-SPA-2G in a chassis is limited. This message is displayed when the number of IPSEC-SPA-2G in the chassis has exceeded this limit.	diou	"Use only the number of supported IPSEC-SPA-2G"
UNXRP_SPA3NOHOSTNO	3-Error	slot [dec] subSlot [dec] spaType 0x[hec]	Failed to get information about the host linecard.	diou	LOG_SID_SH_TECH_ACTION
UNXRP_SPA3NULL_DS_STRUCTURE	3-Error	NULL	A SPA driver is not able to retrieve the data structure mentioned in the message. This indicates a software error.	diou	LOG_SID_NO_ACTION
UNXRP_SPA3NULL_HWIDB_PORT	3-Error	HWIDB not found: slot [dec] bay [dec] port [dec]	A NULL hwidb is encountered	diou	LOG_SID_SH_TECH_ACTION
UNXRP_SPA3NULL_SPA_BAY	3-Error	-	Pointer to object for slot [dec] bay [dec] is NULL.	diou	LOG_SID_SH_TECH_ACTION
UNXRP_SPA3NOHOSTNO	3-Error	slot [dec] subSlot [dec] PID [chars]	Failed to get information about the host linecard.	diou	LOG_SID_SH_TECH_ACTION
UNXRP_SPA3VC_PROV_FAIL	3-Error	Failed to provision interface [chars]	The SPA driver is not able to provision the interface specified in the message. Verify that the SPA hardware is not provisioned above the supported limit. Otherwise this indicates a hardware error.	diou	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UNRP3-PA-CMDNOREP	4-Warning	[chars]: No response for interface configuration command [node]	A timeout occurred while RP was waiting for a response from line card. This may happen due to line card CPU being too busy to respond to the command.	diou	LOG_SID_NO_ACTION
UNRP3-PA-CMDMACH	4-Warning	[chars]: Expecting response to interface configuration command [node] but received response to command [node]	An internal synchronization error occurred while configuring the interface. The configuration may not have succeeded.	diou	"Check that the running configuration for the " "interface is correct. If this message occurred on the standby try " "reloading the standby to ensure that its configuration is in sync. " "If this message is repeatable please " LOGSIDSH1TJCHACTION
UNRP3-PA-CARDRELOAD	6-Information	Module [node]reload due to SPA insert in [node][node]	When inserting a SPA on this carrier card the card is reset.	-	LOG_SID_NO_ACTION
UNIXRP-3-CARDERR	3-Error	[chars]	An IPC card has registered itself to the IPC master twice. The card\n\ malfunctioned and its IPC is not active.	UNRPDDISCOMPONENT	LOG_STD_ACTION
UNIXRP-3-IPCERR	3-Error	[chars] %u	IPC slot error	UNRPDDISCOMPONENT	LOG_STD_ACTION
UNIXRP-3-SEATERR	3-Error	[chars] [node][chars]	Failed to create IPC seat for line card	UNRPDDISCOMPONENT	LOG_STD_ACTION
UNKNOWNBASEXIPWG	3-Error	ERRMSG_NOFLAGS	-	-	-
UNKNOWNBASEXIPWG	3-Error	ERRMSG_NOFLAGS	-	-	-
UNKNOWNSHUTDOWNIP	6-Information	ERRMSG_NOFLAGS	-	-	-
UNKNOWNSHUTDOWNIP	6-Information	ERRMSG_NOFLAGS	-	-	-
UNKNOWNCAP5LDP	5-Notice	ERRMSG_NOFLAGS	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UNKNOWN:CAP5-LDP	5-Notice	ERRMSG_NOFLAGS	-	-	-
UNSUPPREDINKTYPE:MSIE	2-Critical	ERRMSGHAGIRACBACK	-	-	-
UNSUPPREDINKTYPE:MSIE	2-Critical	ERRMSGHAGIRACBACK	-	-	-
UPDATE-3-ATOM_HA	3-Error	ERRMSG_NOFLAGS	-	-	-
UPDATE-3-ATOM_HA	3-Error	ERRMSG_NOFLAGS	-	-	-
UPGRADE-3-UPGRADE:MSG	3-Error	ewlc-upgrade	AP SW update[chars]	AP Software Update logging	AP software update failed. ISSU image upgrade or SMU patching could be aborted. The user needs to initiate ISSU upgrade/SMU patch again. If the error occurred during manual operation
UPGRADE-3-UPGRADE:MSG	3-Error	ewlc-upgrade	AP Upgrade clear report error	-	-
UPGRADE-3-UPGRADE:MSG	3-Error	ewlc-upgrade	Staggered AP Upgrade in progress	-	-
UPGRADE-3-UPGRADE:MSG	3-Error	ewlc-upgrade	AP Upgrade fallback error	Error occurred in upgrade fallback process. Operation aborted.	LOG_SID_NO_ACTION
UPGRADE-3-UPGRADE:MSG	3-Error	ewlc-upgrade	Timeout occurred either source controller is not responding or has responded with invalid software version. Aborting fallback process	Timeout occurred. Source controller is not responding to the upgrade fallback version request message or it has responded with an invalid software version. Aborting fallback process	Please reload source controller with valid image and initiate upgrade process from destination controller by using CLI: 'ap image move destination <Destination Name> <Destination IPv4/IPv6 address> <Report name>'
UPGRADE-3-UPGRADE:MSG	3-Error	ewlc-upgrade	AP upgrade process aborted. Failed to send fallback type message to peer	Error occurred while sending fallback type message to peer. Operation aborted.	Please restore the mobility status between source and destination controller

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UPGRADE_FAILURE</del>	3-Error	ewlc-upgrade	Source controller is not responding or has responded with invalid software version	Source controller is not responding to the upgrade fallback version request message or it has responded with an invalid software version	Please reload source controller with valid image
<del>UPGRADE_NOT_READY</del>	3-Error	ewlc-upgrade	Destination controller not ready. Aborting upgrade process	Destination controller may be going through another AP upgrade or move	Please wait for the current ap upgrade to finish before triggering this command.
<del>UPGRADE_NOT_RESPONDING</del>	3-Error	ewlc-upgrade	AP upgrade process aborted. Destination controller is not responding	Destination controller is not responding to the upgrade request message	Destination Controller may be down or unreachable. Please restore the mobility status between source and destination controllers before initiation of AP move/upgrade to destination
<del>UPGRADE_MOBILITY_TUNNEL_DOWN</del>	3-Error	ewlc-upgrade	AP upgrade process aborted. Mobility tunnel is down for more than the permissible amount of time	If the mobility tunnel with the peer is down for more than the permissible amount of time	-
<del>UPGRADE_ABORTED</del>	3-Error	ewlc-upgrade	Trigger abort CLI from source WLC	-	-
<del>UPGRADE_PENDING</del>	3-Error	ewlc-upgrade	Staggered AP Upgrade not in progress	-	-
<del>UPGRADE_RESET_ERROR</del>	3-Error	ewlc-upgrade	Staggered AP Upgrade error:[chars]	Error occured in upgrade reset process. Operation aborted.	LOG_SID_NO_ACTION
<del>UPGRADE_ALREADY_RUNNING</del>	3-Error	ewlc-upgrade	AP upgrade is in progress. New ap upgrade process is not allowed	If an ap upgrade process is already running	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UPRAGHERRAD_CHEERRR</del>	3-Error	ewlc-upgrade	Invalid ap upgrade report name	Upgrade report name entered is invalid	Please enter a valid ap upgrade report name.
<del>UPRADSWUPNECOMG</del>	5-Notice	ewlc-upgrade	AP Upgrade fallback process started	Starting AP upgrade fallback process	LOG_SID_NO_ACTION
<del>UPRUPURDASHHLE</del>	5-Notice	ewlc-upgrade	AP with MAC:[chars] has not rejoined after software upgrade. No longer accounting for this AP	AP has not rejoined the controller	LOG_SID_NO_ACTION
<del>UPRADAPUCRADEENT</del>	5-Notice	ewlc-upgrade	Staggered AP upgrade event:[chars]	Staggered AP upgrade event message	LOG_SID_NO_ACTION
<del>UPRADPRADHRANDNE</del>	5-Notice	ewlc-upgrade	Site-filters for any-image will be ignored for APSP/APDP.	Site-filters added with any-image are only applicable for N+1 upgrades.	LOG_SID_NO_ACTION
<del>UPRADAPUCRADEIALE</del>	5-Notice	ewlc-upgrade	Staggered AP upgrade was interrupted due to SSO. The upgrade process will continue shortly.	Staggered AP upgrade was interrupted due to SSO. The process should restart automatically	LOG_SID_NO_ACTION
<del>UPRADPRADMADEHE</del>	6-Information	ewlc-upgrade	Site-filters added with image name 'any' deleted.	Existing site-filters with image name 'any' are deleted.	LOG_SID_NO_ACTION
<del>UPRADAPUCRADEPRSET</del>	6-Information	ewlc-upgrade	AP:[chars] has incorrect software. AP is going for reset.	AP is going for a software upgrade	LOG_SID_NO_ACTION
<del>UPRADPRADIAHPNAME</del>	6-Information	ewlc-upgrade	AP Upgrade record deleted successfully	Deleted AP upgrade record.	LOG_SID_NO_ACTION
<del>UPRADAPUCRADEIDLE</del>	6-Information	ewlc-upgrade	Site filters for APSP deleted for the image version[chars]; new image version is[chars]	Existing site-filters for APSP are deleted since the base image is upgraded.	LOG_SID_NO_ACTION
<del>UPRADPRADIAKCOMHE</del>	6-Information	ewlc-upgrade	AP Upgrade fallback process completed successfully	AP Upgrade fallback process completed	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UPGRADE_FALLBACK</del>	6-Information	ewlc-upgrade	AP Upgrade fallback process started	Starting AP upgrade fallback process	LOG_SID_NO_ACTION
<del>UPGRADE_ABORT</del>	6-Information	ewlc-upgrade	Aborted AP Upgrade successfully	Aborted AP upgrade process.	LOG_SID_NO_ACTION
<del>UPGRADE_ABORT_FORCE</del>	6-Information	ewlc-upgrade	Aborted AP Upgrade forcibly on destination controller	AP upgrade was forcibly stopped on destination controller by the user	LOG_SID_NO_ACTION
<del>UPGRADE_COMPLETE</del>	6-Information	ewlc-upgrade	Staggered AP Upgrade completed successfully	All APs in current upgrade process rebooted with the new version	LOG_SID_NO_ACTION
<del>UPGRADE_REBOOT</del>	6-Information	ewlc-upgrade	Staggered AP Upgrade reboot process started	Rebooting given APs in staggered way	LOG_SID_NO_ACTION
<del>UPGRADE_REBOOT_FORCE</del>	6-Information	ewlc-upgrade	Staggered AP Upgrade with fallback type as either reset or reset with fallback completed successfully	All APs in current upgrade process rebooted with the new version	LOG_SID_NO_ACTION
URLF3-ALLOW_MODE	3-Error	[chars]Connection to all the URL filter servers are down and the allow mode is '[chars]'	This messages indicates that connection to all the URL filter servers are down. If allow mode is 'on' the router will pass all the http traffic otherwise it will drop the http traffic and close the TCP connection	ios-firewall	"The network administrator can possibly check whether the URL filter " "server WebSense/N2H2 is down and restart it if required. If it "



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
URLF-3-MAX_REQ	3-Error	[chars]The number of pending request exceeds the maximum limit [dec]	This message indicates that the number of requests pending in the router for URL authentication from URL filter server exceeds the maximum limit. In this case the http request will be dropped	ios-firewall	"This message is just for informational purpose"
URLF-3-RESOURCE_AICCAID	3-Error	The resource allocation failed for URL filter subsystem	This message indicates that the URLF feature is not able to allocate memory for various data structures	ios-firewall	"The router is running out of memory disable " "the features that are not used or check if something goes wrong"
URLF3SERVER_DOWN	3-Error	[chars]Connection to the URL filter server [node]is down	This messages indicates that a connection between the router and a url filter server is down. If more than one servers are configured the router will make use of other servers for URL authentication otherwise it will check whether allow mode is 'on' or 'off'. If allow mode is 'on' the router will pass all the packets otherwise it will drop all the packet and close the TCP connection.	ios-firewall	"The network administrator can possibly check whether the URL filter " "server WebSense/N2H2 is down and restart it if required. If it "
URLF3URL_TOO_LONG	3-Error	[chars]URL sent from [node]is too long more than [dec] bytes possibly	The URL parsed from http GET request is too long it could possibly be a fake packet so the packet will be dropped	ios-firewall	"This could be a fake packet sent by the attackers"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
URLF4SITE_BLOCKED	4-Warning	[chars]Access denied for the site '[chars]' client [node][dec] server [node][dec]	This message indicates that all underlying URLs of the specified domain are blocked	ios-firewall	"This indicates that an user has made an attempt to browse a " "forbidden site"
URLF4URL_BLOCKED	4-Warning	[chars]Access denied URL '[chars]' client [node][dec] server [node][dec]	This message indicates that access to the requested URL is denied and the corresponding TCP connection is closed	ios-firewall	"This indicates that an user has made an attempt to browse a " "forbidden site"
URLF5SERVER_UP	5-Notice	[chars]Connection to an URL filter server[node]is made the router is	This message indicates that at least one connection is up between router and a URL filter server. System is leaving out of allow mode	ios-firewall	"This is just an informational message"
URLF6SITE_ALLOWED	6-Information	[chars]Client [node][dec] accessed server [node][dec]	This message indicates that all URLs belongs to the server are allowed to be passed with out URL filter servers authentication	ios-firewall	"This message is just for informational purpose it can be used " "to keep track of number of GET request that are sent from client " "to server"
URLF6URL_ALLOWED	6-Information	[chars]Access allowed for URL '[chars]' client [node][dec] server [node][dec]	This message indicates that the http GET request sent from client is allowed to be transmitted to http server	ios-firewall	"This is just an informational message"
USBOSSTACKS_NOMEMORY	2-Critical	Memory allocation failure: [chars].	Unable to allocate memory for USB stack structures.	usb-driver	"Reduce other system activity to ease memory demands. If conditions\n\n warrant upgrade to a larger memory configuration."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>USBSSABEADVTSHE</del>	3-Error	USB flash failed to pass 'Ready' test.	The USB Flash memory failed diagnostic testing. The Flash memory could not enter the Ready state and was not registered in the file system.	usb-driver	"Remove the device and reinsert it again. If the problem persists" "please search Bug Toolkit on the Cisco web site for" "bugs related to your version of software. If you do" "not find an existing bug please open a TAC case and" "provide 'show version' 'show running' and 'show usb device'"
<del>USBSSABEADVTSHE</del>	3-Error	A USB host controller sys error happened[hec] [hec].	This is an informational message sent when a system error happened on the the host controller. USB host controller reseted	usb-hcd	LOG_SID_NO_ACTION
<del>USBSSABEADVTSHE</del>	5-Notice	Failed to enumerate a USB device as the address pool is full.	The USB address pool is full.	usb-driver	"The number of inserted devices might have exceeded the platform limit. Remove the other devices that are not in use. And remove and insert this device again."
<del>USBSSABEADVTSHE</del>	5-Notice	Failed to enumerate a USB device as not able to read the device's description.	Unable to read Device descriptor information from the device	usb-driver	"The device may be faulty."
<del>USBSSABEADVTSHE</del>	5-Notice	Failed to enumerate a USB device as the device's power requirement[dec] mA is more than the available port power[dec] mA	The device's power requirement exceeds the available port power.	usb-driver	"Refer platform specific documents on the maximum power provided on USB ports."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>USB_SASB_ENUM_FAILDR</del>	5-Notice	Failed to enumerate a USB device as not able to do set device's address.	The setting of USB address to the device failed.	usb-driver	"The device may be faulty."
<del>USB_SASB_ENUM_FAILDE</del>	5-Notice	Unsupported device inserted. Host id [dec] Device Addr [dec].	The device is not supported on the platform/image.	usb-driver	"This device is not supported. Use \"show usb device\" to see \"the device information. Check the image and see whether the \"image supports the device."
<del>USB_SASB_ENUM_FAILHUB</del>	5-Notice	USB Hub is not supported.	USB Hub is not supported on the platform.	usb-driver	"Do not use USB Hub since it is not a supported device."
<del>USB_SASB_ENUM_FAILINCD</del>	6-Information	A [chars] USB device has been inserted in port [dec].	This is an informational message sent when an interrupt is generated to the USB controller upon device insertion.	usb-hcd	LOG_SID_NO_ACTION
<del>USB_SASB_ENUM_FAILINCR</del>	6-Information	A USB device has been removed from port [dec].	This is an informational message sent when an interrupt is generated to the USB controller upon device removal.	usb-hcd	LOG_SID_NO_ACTION
<del>USB_SASB_ENUM_FAILTIME</del>	6-Information	USB flash 'Ready' test time over [dec] seconds.	The USB Flash memory has taken a time equal to or more than 75[node]of the maximum time allotted for it to pass the diagnostic testing and enter the Ready state.	usb-driver	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
USB_PRINTER3NO_SCHEDER	3-Error	Could not create a job scheduler for [chars].	USB Printer could not create a scheduler process. This condition indicates that memory resources are being exhausted.	print-server	"Please check memory usage " " and report it to TAC."
USB_PRINTER3NO_WATCHED_BOOLEAN	3-Error	Could not create a watched boolean for [chars].	USB Printer could not create a watched boolean. This condition indicates that memory resources are being exhausted.	print-server	"Please check memory usage " " and report it to TAC."
USB_PRINTER3NO_APPLICATION_HANDLE	3-Error	Could not get application handle for printer [chars].	Could not get application handle from the USB stack.	print-server	"Remove this printer and insert it again."
USB_PRINTER3NO_PAPER	3-Error	Could not create job since there is no paper in printer [chars].	Could not create job because of lack of paper.	print-server	"Please put paper in the tray and re-submit job."
USB_PRINTER3PORT_ERROR	3-Error	Could not create job since printer [chars] is in error.	Could not create job because port status command returned error.	print-server	"Try rebooting printer once. If problem still persists report to TAC."
USB_PRINTER3NO_OBJECT	3-Error	Could not create printer object for [chars].	Could not create the printer object.	print-server	"Remove this printer and insert it again."
USB_PRINTER6INFO_INSERTED	6-Information	USB Printer inserted: [chars].	A USB Printer has been detected.	print-server	"Informational message only. No action required."
USB_PRINTER6INFO_REMOVED	6-Information	USB Printer removed: [chars].	A USB Printer has been removed.	print-server	"Informational message only. No action required."
USB_TOKEN3DIR_CREATE_FAILED	3-Error	Error creating directory: dir [chars] ret code [hec] [chars].	Token Asynchronous I/O process failed to create a directory in USB token device.	usb-token-filesys	"Report the error message to your technical representative " "along with the output of 'show usb' 'show usb controller' and " "'show file system' commands."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<u>USB</u> <u>ASYN</u> <u>CR</u> <u>FILE</u>	3-Error	Error creating file: file [chars] ret code [hec] [chars].	Token Asynchronous I/O process failed to create a file in USB token device.	usb-token-filesys	"Report the error message to your technical representative " "along with the output of 'show usb' 'show usb controller' and " "'show file system' commands."
<u>USB</u> <u>ASYN</u> <u>CR</u> <u>FILE</u>	3-Error	Unrecognized I/O Op-code: [dec].	Token Asynchronous I/O process could not decode the Op-code in an I/O request.	usb-token-filesys	"Report the error message to your technical representative " "along with the output of 'show usb' 'show usb controller' and " "'show file system' commands."
<u>USB</u> <u>ASYN</u> <u>CR</u> <u>FILE</u>	3-Error	Error writing file: file [chars] ret code [hec] [chars].	Token Asynchronous I/O process encountered I/O write failure.	usb-token-filesys	"Report the error message to your technical representative " "along with the output of 'show usb' 'show usb controller' and " "'show file system' commands."
<u>USB</u> <u>ASYN</u> <u>CR</u> <u>FILE</u>	3-Error	Token Asynchronous I/O: Could not get argument.	Token Asynchronous I/O process failed to retrieve argument.	usb-token-filesys	"Report the error message to your technical representative " "along with the output of 'show usb' 'show usb controller' and " "'show file system' commands."
<u>USB</u> <u>ASYN</u> <u>CR</u> <u>FILE</u>	3-Error	Token Asynchronous I/O: failing to requeue an I/O request.	Token Asynchronous I/O process failed to requeue an I/O request.	usb-token-filesys	"Report the error message to your technical representative " "along with the output of 'show usb' 'show usb controller' and " "'show file system' commands."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>USBENISSYCDREJEN</del>	3-Error	Token Asynchronous I/O: Unexpected Event [dec].	Token Asynchronous I/O process received an unexpected event.	usb-token-filesys	"Report the error message to your technical representative " "along with the output of 'show usb' 'show usb controller' and " "'show file system' commands."
<del>USBENISSYCBUMD</del>	3-Error	USB Token File System failed to build MFD...	USB Token File System failed to build the Master File Directory MFD database.	usb-token-filesys	"Remove this token and insert it again. " "If the problem still persists report the error message to your " "technical representative along with the output of 'show usb' " "'show usb controller' and 'show file system' commands."
<del>USBENISSYCBFAE</del>	3-Error	Token File System callback: failed to create token talker token name [chars] status [dec].	USB Token File System failed to establish connection with USB Token Device Driver.	usb-token-filesys	"Remove and insert this token again. " "If the problem still persists report the error message to your " "technical representative along with the output of 'show usb' " "'show usb controller' and 'show file system' commands."
<del>USBENISSYCBWEDN</del>	3-Error	Could not create a watched boolean!	USB Token File System could not create a watched boolean. This condition indicates that memory resources are being exhausted.	usb-token-filesys	"Reduce other system activities to ease memory demands or remove " "any token device that is not in use to free up some memory."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>USB</del> <del>MISS</del> <del>CONF</del> <del>Y</del> <del>ERR</del>	3-Error	Token File System callback: failed to destroy token talker token name [chars] status [dec].	USB Token File System failed to destroy the connection with USB Token Device Driver.	usb-token-filesys	"Insert and remove this token again. " "If the problem still persists report the error message to your " "technical representative along with the output of 'show usb' " "'show usb controller' and 'show file system' commands."
<del>USB</del> <del>MISS</del> <del>CONF</del> <del>Y</del> <del>ERR</del>	3-Error	Failed to register USB Token File System with IFS.	The process of registering USB Token File System with IOS File System IFS did not succeed.	usb-token-filesys	"Remove this token and insert it again. " "If the problem still persists report the error message to your " "technical representative along with the output of 'show usb' " "'show usb controller' and 'show file system' commands."
<del>USB</del> <del>MISS</del> <del>CONF</del> <del>Y</del> <del>ERR</del>	3-Error	The number of tokens exceeded the maximum that can be supported by USB Token File System.	Maximum number of tokens that can be supported by USB Token File System are already inserted.	usb-token-filesys	"Remove the other tokens that are not in use. " "And remove and insert this token again. " "If the problem still persists report the problem to your " "technical representative along with the output of 'show usb' " "'show usb controller' and 'show file system' commands."
<del>USB</del> <del>MISS</del> <del>CONF</del> <del>Y</del> <del>ERR</del>	3-Error	Unable to understand MFD database of version [dec].[dec].	The version of the Master File Directory MFD database stored	usb-token-filesys	"Upgrade the USB Token File System by reloading " "the router with a higher version of IOS software."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>USBENISKONCDEVD</del>	3-Error	Token File System callback: unknown event [dec].	USB Token File System callback function received an unknown event from USB Token Device Driver.	usb-token-filesys	"Check USB ports to see if the token device is inserted or removed " "correctly. If the problem still persists report the error message " "to your technical representative along with the output of 'show usb' " "'show usb controller' and 'show file system' commands."
<del>USBENISGCHGWFIS</del>	6-Information	USB Token File System [chars] is registered...	USB Token File System registered successfully.	usb-token-filesys	"Informational message only. No action required."
<del>USBENISGCHGWFIS</del>	6-Information	Registering USB Token File System [chars]: might take a while...	Registering USB Token File System is being registered.	usb-token-filesys	"Informational message only. No action required."
<del>USBENISGCHGWFIS</del>	6-Information	USB Token device inserted: [chars].	A USB Token device has been detected.	usb-token-filesys	"Informational message only. No action required."
<del>USBENISGCHGWFIS</del>	6-Information	USB Token device removed: [chars].	A USB Token device has been removed.	usb-token-filesys	"Informational message only. No action required."
<del>USBENISGCHGWFIS</del>	3-Error	Unavailable USB Security Token slot	Maximum number of tokens that can be supported are already inserted	usb-token	"Remove the other tokens that are not in use. And remove and insert this token again."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
USBKNS-USBKNS-FAILURE	3-Error	Failure in handling USB Security Token insertion/removal event	Retrieving Token insertion/removal message failed in Token Daemon	usb-token	"Remove the token and insert it back. If the problem still persists\n\ report the problem to your technical support representative along\n\ with the output of \"show usb device\" \"show usb controller\" and\n\ \"show file systems\" commands."
USBKNS-USBKNS-NO MEM	3-Error	No available memory for [chars]	Memory allocation failure.	usb-token	"Reduce other system activity to ease memory demands. If conditions\n\ warrant upgrade to a larger memory configuration."
USBKNS-USBKNS-CREATE FAILURE	3-Error	Failure in creating USB Security Token semaphore	Watched semaphore creation failed	usb-token	"Report the problem to your technical support representative along\n\ with the output of \"show usb device\" and \"show usb controller\" commands."
USB-3-USB_OC	3-Error	USB over-current at source 0x[hec].	USB interface over-current error.	cr10k5	"Copy the error message exactly as it appears and report it to your " "technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
USBFLASH3-DEVOPEN	3-Error	[chars] [chars]	An application handle for the usb flash could not be retrieved.	-	"Please search Bug Toolkit on the Cisco web site for" "bugs related to your version of software. If you do" "not find an existing bug please open a TAC case and" "provide 'show version' & 'show running'"
USBFLASH3-DEVSTARTSTOP	3-Error	[chars] [chars]	The usb flash device could not be stopped and restarted.	-	"Please search Bug Toolkit on the Cisco web site for" "bugs related to your version of software. If you do" "not find an existing bug please open a TAC case and" "provide 'show version' & 'show running'"
USBFLASH3-IFSCREATE	3-Error	[chars] [chars]	The usb flash device could not be registered with the internal file system.	-	"Please search Bug Toolkit on the Cisco web site for" "bugs related to your version of software. If you do" "not find an existing bug please open a TAC case and" "provide 'show version' & 'show running'"
USBFLASH4-FORMAT	4-Warning	[chars] [chars]	The usb flash device does not have a recognizable format There are unexpected values in the partition table or boot sector This device needs formatting in the router before use.	-	"Follow any instructions provided in the error " "message before storing any file to this USB flash device"
USBFLASH5-CHANGE	5-Notice	[chars] [chars]	A USB device has been inserted/removed	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
USBFLASH-5-DIBERR	5-Notice	USB Flash device [chars] [chars]	The system cannot boot a image from the USB Flash device because the Device Information Block is different. The USB Flash device can be read by the router but will require formatting by the router before an image can be booted from it.	-	"Follow any instructions provided in the error " "message. Before storing a image in the USB Flash device " "and trying to boot from this device enter the " "format command to format the flash device from the " "router. Then copy the desired image to the Flash " "device and then boot from this device."
<del>USBFLASH-1-DMC_DISABLED</del>	1-Alert	usbflash0 device disabled	usbflash0: is disabled from the system.	-	LOG_STD_ACTION
<del>USBFLASH-6-DMC_ENABLED</del>	6-Information	usbflash0 device enabled	usbflash0: is enabled in the system.	-	LOG_SID_NO_ACTION
<del>USBFLASH-1-DMC_DISABLED</del>	1-Alert	usbflash1 device disabled	usbflash1: is disabled from the system.	-	LOG_STD_ACTION
<del>USBFLASH-6-DMC_ENABLED</del>	6-Information	usbflash1 is enabled	usbflash1: is enabled in the system.	-	LOG_SID_NO_ACTION
<del>USB-3-INITIALIZATION_FAILED</del>	3-Error	cbr-cmts-infra	US-JIB device init failed in[chars]:%s:Error %d	Initialization of the US-JIB device failed	Review Cable Device Manager logs taking note of the timestamp information to select specific information to review. Copy the message and other related information exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <a href="http://www.cisco.com/tac">http://www.cisco.com/tac</a>

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
USJIB-3-NMI_INT	3-Error	cbr-cmts-infra	US-JIB device NMI [%s]	US-JIB device generated NMI Interrupt	Review Cable Device Manager logs taking note of the timestamp information to select specific information to review. Copy the message and other related information exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <a href="http://www.cisco.com/tac">http://www.cisco.com/tac</a>
USJIB3-NON_CRIT_INTR	3-Error	cbr-cmts-infra	US-JIB device Non-Critical [%s]	US-JIB device generated Non-Critical Interrupt	Review Cable Device Manager logs taking note of the timestamp information to select specific information to review. Copy the message and other related information exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <a href="http://www.cisco.com/tac">http://www.cisco.com/tac</a>
UTD-1-UTD_HEALTH_CHANGE	1-Alert	Service node changed state [chars] => [chars] %u	Service node and changed health status\n	cpp-ucode	LOG_STD_ACTION
UTD-2-IPC_FAILURE	2-Critical	UTD-IPC message [chars] handler failed rc %u	An IPC message handler for the UTD feature failed. This will cause the feature to not function.	qfp-utd	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UID2-IPC_INIT_FAILED	2-Critical	UTD-IPC message handler registration failure rc %u	Registering an IPC message handler for the UTD feature failed. This will cause the feature to not function.	qfp-utd	LOG_STD_ACTION
UID3-FEAT_CIX_DOWN	3-Error	UTD-Invalid request [chars] [node]while context is down	While the feature context was not active an invalid request was received from another layer of the UTD software stack.	qfp-utd	LOG_SID_RECUR_ACTION
UTD-3-FEAT_DOWN	3-Error	UTD-Invalid request [chars] [node]while feature is down	While the feature was not active an invalid request was received from another layer of the UTD software stack.	qfp-utd	LOG_SID_RECUR_ACTION
UID3-IPC_INVALID_MSG	3-Error	UTD-Invalid request %u	We received an invalid message from another layer of the UTD software stack.	qfp-utd	LOG_SID_RECUR_ACTION
UID3-IPC_INVALID_MSG_LEN	3-Error	UTD-Invalid IPC length [dec]:[dec] len [dec] flags 0x[hec] source [dec]	Invalid IPC message length	qfp-utd	LOG_STD_ACTION
UTD-3-IPC_NORES	3-Error	UTD-No space for the IPC reply size [node]request %u	For a request from upper UTD software stack layers it was not possible to allocate space for a reply for the specified size.	qfp-utd	LOG_SID_RECUR_ACTION
UID3-IPC_OPEN_REPLY	3-Error	UTD-IPC Open Reply failed request %u	For a request from upper UTD software stack layers it was not possible to open the reply buffer.	qfp-utd	"This is normally a software issue." LOG_SID_RECUR_ACTION
UID3-IPC_SEND_FAILED	3-Error	UTD-IPC [chars] [node]send failed %u	IPC message send failure	qfp-utd	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UTDPROXYHLSADDISAFED	3-Error	-	HSL adding export destination failed.	qfp-utd	LOG_STD_ACTION
UTDPROXYHLSBNDISAFED	3-Error	-	HSL binding to session failed.	-	LOG_STD_ACTION
UTDPROXYHLSBNDIEMAFED	3-Error	[dec]	HSL bind template failed at given index.	qfp-utd	LOG_STD_ACTION
UTDPROXYHLSCREAFED	3-Error	-	HSL creation failed.	qfp-utd	LOG_STD_ACTION
UTDUCONDBRCRGAED	3-Error	Failed to initialize Conditional Debugging for UTD	A non-fatal error occurred when attempting to Register/Initialize\nconditional debugging.	qfp-ucode	LOG_STD_ACTION
UTDDISPOLYCLASSIFYAFED	3-Error	UTD TLS policy classify packet fail	Failed to classify packet according to UTD TLS policy\n	cpp-ucode	"1 Run the following command and see if TCAM memory utilization is full\n"
UIDUIDMRTDROPKT	4-Warning	Diversion: VPATH decapsulation dropped packet from vrf [chars] [chars] [char]A:[node]=> [char]A:[node]proto [chars] due to [node][chars] ident [node][chars]	-	-	-
UIDUIDENCASDROPKT	4-Warning	Diversion: VPATH encapsulation dropped packet from vrf [chars] [chars] [char]A:[node]=> [char]A:[node]proto [chars] due to [node][chars] ident [node][chars]	-	-	-
UIDUIDNSICTDROPKT	4-Warning	Inspection: Dropped packet from vrf [chars] [chars] [char]A:[node]=> [char]A:[node]proto [chars] due to [node][chars] ident [node][chars]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UTD:UTD_POLICY_DROP_PKT	5-Notice	Policy: Dropped packet from vrf [chars] [chars] [char]A:[node]=> [char]A:[node]proto [chars] due to [node][chars] ident [node][chars]	-	-	-
UTD:UTD_POLICY_NAT_DROP_PKT	5-Notice	NAT packet drop	Packet dropped by NAT during UTD policy phase\n	qfp-ucode	LOG_STD_ACTION
UTD:UTD_DF_BLACKLIST_MATCH	6-Information	UTD WebFilter Domain Blacklist [**] [Domain: [chars]] [Matched Pattern: [chars]] {[chars]} [char]A:[node]-> [char]A:%u	DNS domain matched to one of the configured blacklist patterns\n	cpp-ucode	LOG_SID_NO_ACTION
UTD:UTD_DF_WHITELIST_MATCH	6-Information	UTD WebFilter Domain Whitelist [**] [Domain: [chars]] [Matched Pattern: [chars]] {[chars]} [char]A:[node]-> [char]A:%u	DNS domain matched to one of the configured whitelist patterns\n	cpp-ucode	LOG_SID_NO_ACTION
UTIL:UTIL_ITEMLIST_RESIZE	0-Emergency	An attempt was made to resize an itemlist but not enough memory is available	An attempt was made to resize itemlist memory to be larger than the memory available. Itemlists are often used when showing interface statistics. This event is unexpected and may be an indication of memory corruption.	-	"Note any recent commands that may have triggered this error. " "Copy the error message and traceback exactly as it appears " "and report it to your technical support representative."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UTIL-0ITEMLIST_RESIZE	0-Emergency	An attempt was made to resize an itemlist but not enough memory is available	An attempt was made to resize itemlist memory to be larger than the memory available. Itemlists are often used when showing interface statistics. This event is unexpected and may be an indication of memory corruption.	-	"Note any recent commands that may have triggered this error. " "Copy the error message and traceback exactly as it appears " "and report it to your technical support representative."
UTIL-3-DLL	3-Error	Data structure error -- [chars]	A software error occurred resulting in data structure inconsistency.	os	"Copy the error message exactly as it appears and report it to your " "technical support representative."
UTIL-3-DLL	3-Error	Data structure error -- [chars]	A software error occurred resulting in data structure inconsistency.	os	"Copy the error message exactly as it appears and report it to your " "technical support representative."
UTIL-3-IDTREE_NOIRACE	3-Error	[chars]	A software error occurred resulting in a data structure\n\ inconsistency.	xconnect	LOG_STD_ACTION
UTIL-3-IDTREE_NOIRACE	3-Error	[chars]	A software error occurred resulting in a data structure\n\ inconsistency.	xconnect	LOG_STD_ACTION
UTIL-3-IDTREE_TRACE	3-Error	[chars]	A software error occurred resulting in a data structure\n\ inconsistency.	xconnect	LOG_STD_ACTION
UTIL-3-IDTREE_TRACE	3-Error	[chars]	A software error occurred resulting in a data structure\n\ inconsistency.	xconnect	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
UTIL-3-RADIXTREE	3-Error	Data structure error--[chars]	A software error occurred resulting in a data structure\n\n inconsistency.	-	"Copy the error message exactly as it appears and report it to your\n\n technical support representative. Ask for their assistance in obtaining\n\n a version of code with the error fixed."
UTIL-3-RADIXTREE	3-Error	Data structure error--[chars]	A software error occurred resulting in a data structure\n\n inconsistency.	-	"Copy the error message exactly as it appears and report it to your\n\n technical support representative. Ask for their assistance in obtaining\n\n a version of code with the error fixed."
UTIL-3-RANGEINCON	3-Error	internal inconsistency [dec] [hec]	A fatal software error occurred.	os	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
UTIL-3-RANGEINCON	3-Error	internal inconsistency [dec] [hec]	A fatal software error occurred.	os	"Copy the error message exactly as it appears and report it to your\n\n technical support representative."
UTIL3RANGENULLNUT	3-Error	null pointer input to range function	An attempt was made to access a range function with a NULL pointer.\n\n The range list creation failed.	-	"Review the error log for a corresponding malloc failed message. Copy\n\n the error message exactly as it appears and report it to your\n\n technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
UTIL-3-RANGE-NULL-INPUT	3-Error	null pointer input to range function	An attempt was made to access a range function with a NULL pointer.\n\nThe range list creation failed.	-	"Review the error log for a corresponding malloc failed message. Copy\n\nthe error message exactly as it appears and report it to your\n\n technical support representative."
UTIL-3-TREE	3-Error	Data structure error--[chars]	A software error occurred resulting in a data structure\n\n inconsistency.	-	"Copy the error message exactly as it appears and report it to your\n\n technical support representative. Ask for their assistance in obtaining\n\n a version of code with the error fixed."
UTIL-3-TREE	3-Error	Data structure error--[chars]	A software error occurred resulting in a data structure\n\n inconsistency.	-	"Copy the error message exactly as it appears and report it to your\n\n technical support representative. Ask for their assistance in obtaining\n\n a version of code with the error fixed."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
UTIL-6-RANDOM	6-Information	A pseudo-random number was generated twice in succession	A pseudo-random number generator produced the same number twice\n\n in succession.	-	"Under normal circumstances a pseudo-random number generator will\n\n occasionally produce the same number twice in succession and this\n\n is not a problem. However if this message occurs frequently the \n\n system should be manually reloaded. If the message is persistent \n\n across reloads copy the error message exactly as it appears and \n\n report it to your technical support representative."
UTIL-6-RANDOM	6-Information	A pseudo-random number was generated twice in succession	A pseudo-random number generator produced the same number twice\n\n in succession.	-	"Under normal circumstances a pseudo-random number generator will\n\n occasionally produce the same number twice in succession and this\n\n is not a problem. However if this message occurs frequently the \n\n system should be manually reloaded. If the message is persistent \n\n across reloads copy the error message exactly as it appears and \n\n report it to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VASI2-DB_ALLOC_FAIL	2-Critical	VASI pair db allocation failed	VASI pair database error. Memory chunk creation for VASI pair database has failed.	asr1k-vasi	"Check for accurate memory management. " "Perform memory leak checks " "and look for memory corruption causes. " "Execute 'show proc memory' command."
VASI2-DB_DELETE_FAIL	2-Critical	VASI pair db entry delete for interface [chars] failed	VASI pair database error. Removal of entry from VASI database has failed.	asr1k-vasi	"Check for accurate memory management. " "Perform memory leak checks " "look for mamory corruption causes and " "check for correct database management. " "Execute 'show proc memory' command. " "
VASI2-DB_DESTROY_FAIL	2-Critical	VASI pair database destroy failed	VASI pair database error. Memory chunk destroy has failed for VASI pair database.	asr1k-vasi	"Check for accurate memory management. " "Perform memory leak checks " "and look for memory corruption causes. " "Execute show proc memory command."
VASI2-DB_ENTRY_ALLOC_FAIL	2-Critical	VASI pair db entry allocation for interface [chars] failed	VASI pair database error. Memory chunk allocation for VASI pair database entry has failed.	asr1k-vasi	"Check for accurate memory management. " "Perform memory leak checks and " "look for memory corruption causes. " "Execute 'show proc memory' command."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VASI2DB_ENTRY_FREE_FAIL	2-Critical	VASI pair entry free failed	VASI pair database error. Memory chunk free of VASI pair database entry has failed.	asr1k-vasi	"Check for accurate memory management. " "Perform memory leak checks " "and look for memory corruption causes. " "Execute 'show proc memory' command."
VASI2DB_INSERT_FAIL	2-Critical	VASI pair db entry add for interface [chars] failed	VASI pair database error. Insertion of a new entry into VASI pair database has failed.	asr1k-vasi	"Check for accurate memory management. " "Perform memory leak checks " "look for memory corruption causes " "verify correct database management. " "Execute 'show proc memory' command."
VCMS4CPE_RECORD_FAIL	4-Warning	Creation of CPE record failed	The proxy was unable to create CPE record due to possible memory failure	-	-
VCMS4MODEM_RECORD_FAIL	4-Warning	Creation of Modem record failed	The proxy was unable to create Modem record due to possible memory failure	cmts-tools	"Check CMTS memory failures"
VCMS4PAKPOOL_BUF_ERR	4-Warning	Bad buffer length: [dec]	The VCMS pakpool buffer was insufficient in size	cmts-tools	"Create a DTTS to report/investigate issue."
VCMS4PAKPOOL_FAIL	4-Warning	Packet pool full	The VCMS pakpool was unable to allocate a packet	cmts-tools	"Check Proxy memory leaks"
VCMS4CMS_CONNECTION	4-Warning	Client connection received for a Linecard [dec]-[dec] already connected	This linecard is already connected to another VCMS simulator	cmts-tools	" Disconnect the first Simulator before attempting" " a new connection"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>VCMS</del> VCMSCONCNICS	4-Warning	Connection to simulator lost clearing interfaces for Slot [dec]-[dec]	The VCMS simulator has disconnected from the CMTS	cmts-tools	'LOG_SID_NO_ACTION'
<del>VCMS</del> VCMSINFACEINRDY	4-Warning	Interface not ready	The VCMS simulator is trying to bring modems on an interface that is not up or ready.	cmts-tools	'LOG_SID_NO_ACTION'
<del>VCMS</del> VCMSINADNIFACE	4-Warning	Invalid interface Id received from the simulator	The simulator sent a message with interface ID	cmts-tools	"Check the simulator code for possible issues"
<del>VCMS</del> VCMSINVALDSE	4-Warning	Invalid message size received from the simulator	The simulator sent a message with longer than expected packet size	cmts-tools	"Check the simulator code for possible issues"
<del>VCMS</del> VCMSINVALUSCHND	4-Warning	Invalid US channel id received from the simulator	The simulator sent a message with invalid US channel id	cmts-tools	"Check the simulator code for possible issues"
<del>VCMS</del> VCMSINVDACIONED	4-Warning	Linecard already connected to fwd agent	The VCMS simulator is already connected to a linecard via forwarding agent.	cmts-tools	'LOG_SID_NO_ACTION'
<del>VCMS</del> VCMSINBNDONCN	4-Warning	Linecard already connected via Inband Channel	The VCMS simulator is already connected to a linecard via Toaster Inband channel.	cmts-tools	'LOG_SID_NO_ACTION'
<del>VCMS</del> VCMSCONCNINI	5-Notice	Simulator version [dec].[dec] from [node]port [dec] interacting with interface [dec]	The VCMS simulator has started interacting with this interface	cmts-tools	'LOG_SID_NO_ACTION'
<del>VCMS</del> VCMSINRMVMTCH	5-Notice	Error:VCMS connection attempt from client with major version [dec] but expected [dec]	The VCMS simulator major version mismatch	cmts-tools	'LOG_SID_NO_ACTION'

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VCMS-3-NOVERMATH	5-Notice	Warning:VCMS connection attempt from client with minor version [dec] but expected [dec]	The VCMS simulator mminor version mismatch	cmts-tools	"Check CMTS memory failures"
VDD-3-NULL_CB	3-Error	Supplied [chars] control block is NULL. [chars]	An NULL control block was passed internally in the software as part of an operation to read or write to the required register or memory address. As a consequence the operation could not be processed and the address contents is now out of sync with what it should be if the operation was a write or an incorrect value returned if the operation was a read.	-	LOG_STD_ACTION
VDD3NULL_SPACE_CB	3-Error	Supplied [chars] space control block is NULL. [chars]	An NULL space control block was passed internally in the software as part of an operation to read or write to the required address. As a consequence the operation could not be processed and the address contents is now out of sync with what it should be if the operation was a write or an incorrect value returned if the operation was a read.	-	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VDD3SIZE_TOO_LARGE	3-Error	An attempt was made to create a [chars] of size [dec] bits. \[chars]. The maximum size supported is [dec] bits. Operation aborted.	The virtual device driver architecture only supports a maximum as indicated by the message. A request to create an entry greater in size than the limit has been made which is not possible to process. The consequence is that the entry will not be created leading to loss of data the entry was supposed to maintain.	-	LOG_STD_ACTION
VDSL_DAEMON_FIRMWARE	3-Error	Need to reload IOS for VDSL PHY firmware file change to take effect	The old phy firmware is used until IOS is reload	-	LOG_STD_ACTION
VDSL_DAEMON_FPGA_FAIL	3-Error	VDSL FPGA Download failed.	The VDSL module hardware may be bad	-	LOG_STD_ACTION
VDSL_DAEMON_INIT_FAIL	3-Error	VDSL Daemon [chars] init failed.	The VDSL module hardware may be bad	-	LOG_STD_ACTION
VDSL_DAEMON_INVALID_DS	3-Error	Daemon [chars] invalid vdsl instance.	Encounter an invalid vdsl instance	-	LOG_STD_ACTION
VDSL_DAEMON_MALLOC_FAIL	3-Error	There is not enough main memory for the new VDSL [chars] firmware images on flash	The router failed to malloc a buffer for the firmware images\n\non the flash. More DRAM is required for the feature which allows specific\n\nVDSL firmware images on the flash to replace the VDSL firmware images\n\nembedded in IOS.	-	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VDSL_DAEMONMDEMRST	3-Error	VDSL Modem reset. [chars]	The VDSL module is under reset.	-	LOG_SID_RECUR_ACTION
VDSL_DAEMONBNCMEM	3-Error	VDSL Daemon [chars] malloc failed : out of memory	The router does not have enough memory installed to run this \nVDSL/ADSL feature	-	LOG_STD_ACTION
VDSL_DAEMONBNCRCC	3-Error	VDSL Daemon [chars] SM create event process failed	The router does not have enough memory run this VDSL/ADSL feature	-	LOG_STD_ACTION
VDSL_DAEMONCMDADA	3-Error	VDSL [chars] add failed.	adding a command exceeds the maximum number of commands allowed	-	LOG_STD_ACTION
VDSL_DAEMONLINEDOWN	3-Error	Controller [chars] line [dec] changed state to [chars]	VDSL Line changed state	-	LOG_STD_ACTION
VDSL_DAEMONINVALID_CDB	4-Warning	Invalid daemon [chars] controller [chars].	Encounter an invalid daemon cdb instance.	-	"nothing"
VDSL_DAEMONMODESWICH	4-Warning	Please save the configuration and reload the Router due to the ATM-PTM mode change on vdsl 0 controller	Operating mode switch between ATM and PTM mode require reload	-	"LOG_STD_ACTION"
VDSL_DAEMONQUEUEEMPTY	4-Warning	Daemon [chars] configuration queue is empty.	program is unable to send a message to the queue process.	-	"nothing"
VDSL_DAEMONMODECPE	4-Warning	[chars] transport mode is not supported on [chars].	Only ATM is supported on ADSL and PTM/Ethernet is supported on VDSL2.	-	"Change DSLAM profile to select the correct mode for CPE"
VDSL_SFPMODEDUMPDELT	4-Warning	Dump DELT info done on interface [chars]	Dump DELT information of SFP is done.	-	"LOG_STD_ACTION"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VLS_SPMCRDUMPDISPRT	4-Warning	Dump DELT info started on interface [chars]	Dump DELT information of SFP is started	-	"LOG_STD_ACTION"
VLS_SPMCRDUMPDONE	4-Warning	Dump internal info done please shut/no shut on interface [chars] to recover	Dump internal information of SFP is done need to reset SFP	-	"LOG_STD_ACTION"
VLS_SPMCRDUMPSPRT	4-Warning	Dump internal info started on interface [chars]	Dump internal information of SFP is started	-	"LOG_STD_ACTION"
VLS_SPMCRDUMPGASARMED	4-Warning	Dying Gasp Armed on interface [chars] SFP	Dying gasp ready to function if power off now	-	"LOG_STD_ACTION"
VLS_SPMCRDUMPGASDISARMED	4-Warning	Dying Gasp Disarmed on interface [chars] SFP	Dying gasp disabled	-	"LOG_STD_ACTION"
VFC-1-ERROR_INTR	1-Alert	[chars] Error interrupt occurred type = 0x[hec].	The DMA engine cannot get to the PCI bus to read descriptors.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
VFC-1-CORRECT_DSP_ID	1-Alert	VFC in slot [dec]: Incorrect [dec] DSP-ID passed by SPI.	The DSP ID provided by the SPI for download is not valid.	-	" Call your technical support representative for assistance."
VIC-1-INVALID_CONFIGURATION	1-Alert	vfc[dec] vfc cards has an invalid configuration.	The software did recognized more dsp interface port than it can \n\ support on this card.	-	"Check the part number on the VIC card to see if it is supported\n\ in the version of IOS operational on the router or contact\n\ your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
VFC-1-NO_DSPM	1-Alert	vfc[dec] No dsp module has been found.	The software did not find any of DSP module plugged into the voice card.	-	"Check the part number on the dspm card to see if it is supported in the version of IOS operational on the router or contact your technical support representative."
VFC1NORNGDESCRIPS	1-Alert	No more ring descriptors available on [dec] slot.	The VFC driver cannot queue messages onto Rossini dma engine for transmit.	-	"Copy the error message exactly as it appears and report it to your technical support representative. Reset the DSP's on this port module."
VFC-1-NODPMEMORY	1-Alert	VFC [dec]/[dec] vfc dual-ported memory unavailable.	The router or access server could not allocate dual-ported memory for the descriptors.	-	"Copy the error message exactly as it appears and report it to your technical support representative."
VFC-1-TOOBIG	1-Alert	[hec] packetsize [dec] too big.	A packet greater than the 256 bytes received on this interface.	-	"The system should recover. No action is required. If the problem reoccurs it indicates an error that might be related to data traffic patterns. Copy the error message exactly as it appears and report it to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VFC-UNKNOWN_DSPM	1-Alert	vfc[dec] vfc dspm daughter card has an unknown id of [hec]	The software did not recognize the type of DSP module \n\ plugged into the voice card.	-	"Check the part number on the dspm card to see if it is supported\n\ in the version of IOS operational on the router or contact\n\ your technical support representative."
VFC3ERROR_ANALYZE	3-Error	[chars] Error analyzing the device in slot [dec].	The feature card in this slot could not be recognized.	-	"Power down reinsert voice feature card and reboot.\n\ If message recurs call your technical support representative for\n\ assistance."
VFC3ERROR_NT_BDR	3-Error	[chars] Unable to download the Boot loader firmware ret = 0x[hec]	Error initializing the DSP with the bootloader firmware.	-	" Power down reinsert Port Module and reboot.\n\ If message recurs call your technical support representative for\n\ assistance."
VFC3ERROR_NT_OVERLAY	3-Error	[chars] Unable to download the Application overlay firmware. Status returned 0x[hec]	Error initializing the DSP with the application/overlay firmware.	-	" Power down reinsert Port Module and reboot.\n\ If message recurs call your technical support representative for\n\ assistance."
VFC3-INCORRECT_ID	3-Error	VFC in slot [dec]: PCI device not supported.	A interface controller device did not report correct device\n\ ID	-	"Power down reinsert Port Module and reboot.\n\ If message recurs call your technical support representative for\n\ assistance."
<del>VRRDNDNCSTFACEF</del>	5-Notice	ERRMSG_NOFLAGS	-	-	-
<del>VRRDNDNCSTFACEF</del>	5-Notice	ERRMSG_NOFLAGS	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VHSTATUSCHANGEDSVH	5-Notice	ERRMSG_NOFLAGS	-	-	-
VHSTATUSCHANGEDSVH	5-Notice	ERRMSG_NOFLAGS	-	-	-
VFI-3-ILLEGAL	3-Error	[chars]	An illegal event has been processed by the xconnect subsystem.	vpls	LOG_SID_NO_ACTION
VFI-3-ILLEGAL	3-Error	[chars]	An illegal event has been processed by the xconnect subsystem.	vpls	LOG_SID_NO_ACTION
VFI-4-CONFIG	4-Warning	[chars]	Invalid VFI configuration data passed.	vpls	LOG_SID_NO_ACTION
VFI-4-CONFIG	4-Warning	[chars]	Invalid VFI configuration data passed.	vpls	LOG_SID_NO_ACTION
VHSTATUSCHANGEDSVH	6-Information	Status of VFI [chars] changed from [chars] to [chars]	VFI status has changed	vpls	LOG_SID_NO_ACTION
VHSTATUSCHANGEDSVH	6-Information	Status of VFI [chars] changed from [chars] to [chars]	VFI status has changed	vpls	LOG_SID_NO_ACTION
VIDB-3-FORKFAIL	3-Error	Failed to fork process for [chars].	Quite likely we ran out of memory. Other explanations are possible.	idb	LOG_STD_ACTION
VIDB-3-FORKFAIL	3-Error	Failed to fork process for [chars].	Quite likely we ran out of memory. Other explanations are possible.	idb	LOG_STD_ACTION
VIDB3FREETIMESET	3-Error	Value not specified for vidb forcible free time by platform.	Platform has requested for delayed vidb recycling support but hasn't specified any value for forcible free time.	LogDDTSagainstplatform.	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VDB3-FREETIMEOSET	3-Error	Value not specified for vidb forcible free time by platform.	Platform has requested for delayed vidb recycling support but hasn't specified any value for forcible free time.	LogDDTSagainstplatform.	LOG_STD_ACTION
<del>VDB3-RFPOSTCONFIGMOUT</del>	3-Error	missing one or more client's RF_POSTCONFIG	Missing RF_POSTCONFIG done from at least one client	cbr-video-cp	"Check if any client has crashed"
<del>VDB3-RFBULKSYNCMOUT</del>	3-Error	Video standby-bulk-sync timed out	Missing RF_BULK_SYNC done from at least one client	cbr-video-cp	"Check if any client is hang or crashed"
VINES-2-BADPARAM	2-Critical	[chars] called with [chars] parameter set to [chars]	One of the VINES lookup functions was called with an illegal\n\ argument.	vines	"Copy the message exactly as it appears do a memory dump up to\n\ 128 bytes and the location specified in the error message and report \n\ this information to your technical support representative."
VINES-2-BADTIMER	2-Critical	RTP timer for [chars] was found disabled and was reset	An internal interface timer is not running. This condition usually\n\ occurs after an interface is reset.	vines	"No action is required. The system automatically restarts the timer."
VINES2-CACHEFAILED	2-Critical	Cannot build cache entry [dec] bytes for [node] on [chars]	VINES fast switching detected that the packet destined to a given\n\ address did not have proper encapsulation information or its\n\ encapsulation size was too large to fit into the cache.	vines	"Verify that the VINES encapsulation and interface-specific mappings\n\ for the interface concerned are properly configured. Copy the \n\ message exactly as it appears and report it your technical\n\ support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VINES2CACHEUNSUPP	2-Critical	Caching of [chars] not supported on [chars]	The cache population routing for VINES fast switching was called for\n\n an interface that does not support VINES fast switching.	vines	"Copy the message exactly as it appears and report it your technical\n\n support representative. If other encapsulation types are available\n\n on the interface try using them. If this problem is not limited to \n\n one or two destinations but rather occurs with all traffic\n\n using the interface disable VINES fast switching for the\n\n interface until you have identified the real cause of the problem."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VINES2-CONSISTENCY	2-Critical	Error [chars]	<p>The VINES code ran into a situation that should not happen. For example an IPC port number needs to be allocated but all 65535 port numbers are currently in use. Another possible cause is that VINES attempted to add a cache entry but had no path associated with the destination address. This may cause temporary slow performance to only those stations that have experienced this inconsistency until complete cache entries are added. However connectivity should not be lost because all data traffic can still be routed via process-level switching.</p>	vines	<p>"Copy the message exactly as it appears and report it your technical support representative. If the warning message is about IPC port number depletion use the show vines ipc command to check how many IPC ports are currently in use by which services and determine whether the IPC connections are all legitimate. To release IPC ports issue the clear vines ipc command. If the warning message is about vines cache entries provide the contents of the vines route cache neighbor and route tables immediately after the error messages appeared. If the problem persists issue the clear vines cache command and monitor the router if the situation improves."</p>

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
VINES2CORRUPTENRY	2-Critical	Detected a corrupted entry in the [chars] table	The VINES code detected that an internal table entry was corrupted.	vines	"Copy the message exactly as it appears and report it your technical support representative. If possible clear the VINES routing table or neighbor table depending on the table in which the corrupted entry was observed. This will result in a temporary loss of connectivity until the routing or neighbor table is rebuilt."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VINES-2-DUPADDR	2-Critical	Duplicate address detected on interface [chars]	The router detected that its VINES address is being used by another\n\n router.	vines	"To identify the other router that is using this address manually\n\n inspect each router's configuration. When you have identified\n\n the router with the duplicate address issue the vines routing\n\n recompute command on both routers or issue the enable vines routing \n\n command specifying specify a unique address. If one of the routers \n\n does not support the recompute keyword disable VINES on that router \n\n issue the write terminal command to save the configuration to memory \n\n reboot the router and then enter the vines routing command with\n\n a unique vines address on the offending routers until each router has\n\n a unique address."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VINES2-ENCAPFAILED	2-Critical	Encapsulation failed for [node] via [node] on [chars]	VINES fast switching encountered an encapsulation failure when building a cache entry for a neighbor.	vines	<p>"Examine your configuration for causes of the encapsulation failure. Look for missing map statements interfaces that have gone down and so on. If this error results in lost connectivity disable vines fast switching by issuing the no vines route-cache command. Because disabling fast switching will slow network perform you should issue the vines route-cache command to re-enable fast switching as soon as you have identified the cause of the problem. If you cannot identify the cause contact your technical support representative. Provide the output of the show vines cache show vines neighbor and show vines route commands for the destination address and neighboring routers you are using. Also provide the output of the show interface and show vines interface commands for the incoming and outgoing interfaces."</p>

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
VINES2-INVALIDPATH	2-Critical	Bad [chars] in path for neighbor entry %z	While searching the neighbor table the code determined that a pointer\n that should point to a VINES path structure actually points to some\n other structure.	vines	"Copy the message exactly as it appears and report it your technical\n support representative. If possible clear the VINES\n neighbor table. This will result in a temporary loss of connectivity\n until all neighbors and routes are relearned."
VINES2-INVALIDROUTE	2-Critical	Bad [chars] in route for server entry %Z	While searching the routing table the code determined that a pointer\n that should point to a VINES route structure actually points to some\n other structure.	vines	"Copy the message exactly as it appears and report it your technical\n support representative. If possible clear the VINES\n routing table. This will result in a temporary loss of connectivity\n until all routes are relearned."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VINES-2-NOBUFFERS	2-Critical	No buffers available for [chars]	There were no buffers available to send a VINES service query\n\n or reply.	vines	"Examine your system's memory and buffer capacity and compare\n\n it with current usage. If you notice a substantial discrepancy\n\n monitor your system for possible memory leaks or buffer drainage\n\n and report the problem to your technical support representative\n\n along with the output of the show memory show memory processor\n\n show buffers show buffers assigned and show buffers old commands."
VINES-2-NOVENCAP	2-Critical	Encapsulation failed on [chars] for address [node]	The VINES code tried to send a packet on an interface that does not\n\n have a new encapsulation routine for outbound packets.	vines	"Toggle the problematic interface by issuing the interface shut and\n\n no shut commands and then issue the no vines metric and vines metric\n\n command see if the problem goes away. If the problem persists copy\n\n the message exactly as it appears and report it your technical\n\n support representative. If possible turn on and provide\n\n interface-specific debug traces particularly for VINES activities."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VINES6FNNOTFOUND	6-Information	[chars] service [chars] routine missing [chars] vector	There is an inconsistency in the static VINES data structures for\n\n handling application-layer packets.	vines	"Turn on VINES service level debugging for the service reported\n\n in the error message and copy the debug traces and the error\n\n message exactly as they appear and report them to your technical\n\n support representative."
VINES6IPCNOROUTINE	6-Information	IPC port [dec] registered without an upcall [chars]	There is an inconsistency in the active VINES data structure for\n\n handling IPC data messages. A message was received for a port that\n\n should have a listener but the listener routine cannot be found.	vines	"Examine the IPC ports currently supported on the router\n\n by issuing the show vines ipc command and see whether the reported\n\n IPC port is indeed not active. Copy the message exactly as it\n\n appears and report it to your technical support representative\n\n along with the output of the debug vines ipc command."
VINES6RPCNOSERVICE	6-Information	IPC port [dec] registered without a service	There is an inconsistency in the active VINES data structure for\n\n handling Net RPC messages. A message was received for a port that\n\n should have a service description but that service description cannot\n\n be found.	vines	"Enter the show vines ipc command and see whether the reported IPC\n\n port has a registered service. Copy the message exactly as it\n\n appears and report it to your technical support representative\n\n if possible along with output of the debug vines netrpc command."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
VINES6RINNOTFOUND	6-Information	[chars] service [chars] routine not found while [chars]	There is an inconsistency in the active VINES service description data\n\ structures. A service handler routine cannot find the description of\n\ its own service.	vines	"Copy the message exactly as it appears and report it your technical\n\ support representative. In addition provide the output of the show\n\ vines service command and debug vines service traces for the\n\ service reported in the error message."
VPCNEDAPCNDRRLOG	3-Error	cedge-bootstrap	vip-confd logging :[chars]	"vip-confd error log:"	"The vip-confd process console logging."
VPCNEDAPCNDRRLOG	5-Notice	cedge-bootstrap	vip-confd logging :[chars]	"vip-confd notice log:"	"The vip-confd process console logging."
VIPMLP2NONINTERLEAVE	2-Critical	[chars] Interleave not configured due \n\ to Insufficient memory	Interleave not configured due to Insufficient memory.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
VIPMLP-2-NOVC	2-Critical	[chars]: packet received for non-existent VC [dec]	Virtual channel encapsulation is corrupted.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
VRSERVICEACTIVATE_FAIL	3-Error	Failed to send virtual service [chars] activate message	During the creation and transmission of the virtual service activate TDL message a failure occurred. The message was not successfully sent and therefore the virtual service was not activated.	vman	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VIRT_SERVICE3DEACTIVATE_FAIL	3-Error	Failed to send virtual service [chars] deactivate message	During the creation and transmission of the virtual service deactivate TDL message a failure occurred. The message was not successfully sent and therefore the virtual service was not deactivated.	vman	LOG_STD_ACTION
VIRT_SERVICE3INIT_FAIL	3-Error	Failed to initialize required virtual service object: [chars]	During the initialization of the resources required for the virtual service feature a memory allocation failure occurred. This has prevented the virtual service feature from being enabled.	vman	LOG_STD_ACTION
VIRT_SERVICE3INVALID_CONTEXT	3-Error	A response timeout occurred for an invalid virtual service	An unexpected condition occurred where the virtual service context pointer in the expired timer was set to NULL.	vman	LOG_STD_ACTION
VIRT_SERVICE3INVALID_RF_MSG	3-Error	Received an invalid RF message type from peer	An unexpected condition occurred where an invalid message type was detected.	vman	LOG_STD_ACTION
VIRT_SERVICE3PKG_PATH	3-Error	Failed to [chars] required by virtual service [chars]	Specified package definition file was not found following a switchover.	vman	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>VRS</del> MEMGPAHACME	3-Error	Failed to [chars]. Virtual service [chars] will not be activated	Specified package definition file was not found following a switchover. Unable to activate virtual service without specified package definition file present.	vman	LOG_STD_ACTION
VIRT_SERVICE3-RESET	3-Error	Virtual service [chars] reset	An unexpected condition has occurred where Virt-manager has reported that it detected the named virtual service reset. This virtual service is not configured to be activated and as such no attempt to reactivate it will be made.	vman	LOG_STD_ACTION
<del>VRS</del> RESPONSE_TMOT	3-Error	Virtual service [chars] timed out waiting for a response from Virt-manager	Failed to receive a response message from Virt-manager for last activation operation performed on the named virtual service. The virtual service activation state was marked as deactivated.	vman	LOG_STD_ACTION
<del>VRS</del> ROMMONSIPRD	3-Error	ROM monitor configuration does not support virtualization	Virtualization is not supported by the current ROM monitor configuration. Verify both the ROM monitor version and ROM monitor variable ENABLE_VTX are correct to enable virtualization.	vman	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>VRSRMCESENDRFMSG</del>	3-Error	Failed to send RF message to peer - [chars]	An unexpected condition occurred where an attempt to send an RF message to peer failed.	vman	LOG_STD_ACTION
<del>VRSRMCESBYRGPBH</del>	3-Error	Failed to [chars] required by virtual service [chars] on standby	Specified package definition file was not found on standby. Configuration was accepted. Copy package definition file to standby at earliest convenience.	vman	LOG_STD_ACTION
<del>VRSRMCESBYRGPBH</del>	3-Error	Standby ROM monitor configuration does not support virtualization	Virtualization is not supported by the current ROM monitor configuration on the standby. Verify both the ROM monitor version and ROM monitor variable ENABLE_VTX are correct to enable virtualization.	vman	LOG_STD_ACTION
<del>VRSRMCESBYRGPBH</del>	3-Error	A response timeout occurred for unknown virtual service [chars]	A response timeout occurred for a virtual service that is no longer in the virtual service database.	vman	LOG_STD_ACTION
<del>VRSRMCESBYRGPBH</del>	3-Error	Received an unknown RF message type [dec] from peer	An unexpected condition occurred where an unknown timer event was detected.	vman	LOG_STD_ACTION
<del>VRSRMCESBYRGPBH</del>	3-Error	A response timeout occurred for an unknown timeout type [dec]	An unexpected condition occurred where an unknown timeout type was detected.	vman	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>VR</del> <del>S</del> <del>RC</del> <del>UNKNOWN</del> <del>TIME</del> <del>OUT</del>	3-Error	A timer event occurred for an unknown timer event [dec]	An unexpected condition occurred where an unknown timer event was detected.	vman	LOG_STD_ACTION
<del>VR</del> <del>S</del> <del>RC</del> <del>UNPROV</del> <del>ISION</del> <del>AL</del>	3-Error	[chars]: [chars]	During the unprovision of the named virtual service an unexpected failure occurred.	vman	LOG_STD_ACTION
<del>VR</del> <del>S</del> <del>RC</del> <del>UPGRADE</del> <del>TIM</del> <del>OUT</del>	3-Error	Virtual service [chars] timed out waiting for a package upgrade response from Virt-manager	Failed to receive a response message from Virt-manager for last upgrade operation performed on the named virtual service.	vman	LOG_STD_ACTION
<del>VR</del> <del>S</del> <del>RC</del> <del>ACTIV</del> <del>ATION</del> <del>CR</del> <del>ITICAL</del>	4-Warning	Virtual service [chars] will not be activated following a switchover	Following a switchover this virtual service will not be activated as there is an issue with its package definition file. Copy package definition file to standby at earliest convenience.	vman	LOG_STD_ACTION
<del>VR</del> <del>S</del> <del>RC</del> <del>ACTIV</del> <del>ATION</del> <del>CH</del> <del>ANGED</del> <del>S</del> <del>T</del> <del>A</del> <del>T</del> <del>E</del>	5-Notice	[chars] [chars]	The activation state of the named virtual service has changed as notified by Virt-manager.	vman	LOG_STD_ACTION
<del>VR</del> <del>S</del> <del>RC</del> <del>INSTALL</del> <del>ATION</del> <del>S</del> <del>T</del> <del>A</del> <del>T</del> <del>E</del>	5-Notice	[chars] [chars]	The installation state of the named virtual service has changed as notified by Virt-manager.	vman	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VIRT-SERVICE-RESET	5-Notice	Virtual service [chars] reset and will be reactivated	Virt-manager has reported that it detected the named virtual service reset. An attempt will be made to reactivate this virtual service.	vman	LOG_STD_ACTION
VLAN-PORT-ALLOC-FAIL	3-Error	IIF_ID alloc failed for vlan-port: Port [chars] in Vlan [dec] due to memory allocation failure. Some features will not work.	The system is low on memory due to which IIF-ID allocation failed. This results in failure to apply policies such as QoS on this vlan-port.	vlan-port	LOG_SIDREDUCE_ACTION "Once memory is available unconfigure and reconfigure the vlan on the" "port"
VLAN-PORT-REG-FAIL	3-Error	IIF_ID registration failed for vlan-port: Port [chars] in Vlan [dec] due to memory allocation failure. Some features will not work. Vlan-port is errdisabled	The system is low on memory due to which IIF-ID registration failed. This results in failure to apply policies such as QoS on this vlan-port. If port is carrying the vlan vlan-port is errdisabled.	sw-vlan	LOG_SIDREDUCE_ACTION "Once memory is available " "run 'clear errdisable interface <intf> vlan <vlanId>' " "or run 'shutdown' followed by 'no shutdown' on the port."
VLAN-INTERFACE-UNKNOWN	3-Error	The [chars] link [chars] does not exist. Sub-interface: [chars] VLAN-Id: %u	This message appears when the below command is issued under port-channel sub-interface with the unknown	vlan	"Verify if the interface shows up using the " "command - show ip int brief. \n Please insert " "the card in case it is removed and run " "the command again once the card comes up."
VLAN-3-XDRLEN	3-Error	Invalid XDR length. Type [dec] [chars]. XDR/buffer len [dec]/[dec]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VLANMARNKNOINC	5-Notice	Warning: VLAN [node]s main interface is not the channel group of primary-[chars]Pe-VLAN manual load-balancing will not take effect until channel-group is configured under the\n primary interface.	The interface configured as primary is not a memberlink in the port channel.	vlan	"Verify the configuration."
VLANSDRINKNOINC	5-Notice	Warning: VLAN [node]s main interface is not the channel group of secondary-[chars]Pe-VLAN manual load-balancing will not take effect until channel-group is configured under the\n secondary interface.	The interface configured as secondary is not a memberlink in the port channel.	vlan	"Verify the configuration."
VMANACTIVATION_SPAE	2-Critical	vman	%s %s'[chars][chars]	"The activation state of the named virtual service has changed as notified by Virt-manager."	"In the failed case
VMANALLOCATION_SIRS	2-Critical	vman	Virtual Service%s	"A memory allocation request failed to allocate a data structure required to activate the virtual service."	"Enable the Virt-manager trace logs and repeat the activation of the virtual service. Collect the Virt-manager logs and scan them for the cause."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VMANCOMVRNSRCS	2-Critical	vman	Virtual Service%s	"The request to commit the resources required by the named virtual service failed."	"Enable the Virt-manager trace logs and repeat the activation of the virtual service. Collect the Virt-manager logs and scan them for the cause."
VMANCPUSHARESLMT	2-Critical	vman	Virtual Service%s	"The virtual service machine definition file is requesting more CPU shares than the system has available for virtual services."	"Deactivate any other virtual services to free up CPU share resources and activate this virtual service. If that does not address the problem
VMANCPUNSBABOR	2-Critical	vman	Virtual Service%s	"Virt-manager and its associated infrastructure experienced an internal error."	"Enable the Virt-manager trace logs and repeat the activation of the virtual service. Collect the Virt-manager logs and scan them for the cause."
VMANCPUNSSHSLMT	2-Critical	vman	Virtual Service%s	"The virtual service machine definition file is requesting more CPU shares than the system has available for virtual services."	"Deactivate any other virtual services to free up CPU share resources and activate this virtual service. If that does not address the problem
VMANCPAEVRNSINRY	2-Critical	vman	Virtual Service%s	"The request to create a DB entry for the named virtual service failed."	"Enable the Virt-manager trace logs and repeat the activation of the virtual service. Collect the Virt-manager logs and scan them for the cause."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VMAN2DEACT_FOR_ISSU	2-Critical	vman	%s Max (%us)	"An ISSU event is pending. Any active VMs will be automatically deactivated to allow ISSU preprocessing to validate the environment. Any ISSU-deactivated VMs will be automatically restarted if the ISSU is cancelled."	"None. Allow the ISSU to continue and the VMs will restart when the ISSU completes; or cancel the ISSU and vman will automatically restart the VMs."
VMAN2DIRVRTNSIROC	2-Critical	vman	Virtual Service%s	"The final activation processing failed to successfully defer."	"Enable the Virt-manager trace logs and repeat the activation of the virtual service. Collect the Virt-manager logs and scan them for the cause."
VMAN2DK_IMAGE_PATH	2-Critical	vman	Virtual Service%s	"The virtual service machine definition file contains an invalid disk image path for one of the disk devices. This may be a Harddisk	-
VMAN2INDVRTNSINRY	2-Critical	vman	Failed to find virtual service with id %u in the Virt-manager DB	"The virtual service with the ID named could not be located in the Virt-manager DB."	"Enable the Virt-manager trace logs and repeat the activation of the virtual service. Collect the Virt-manager logs and scan them for the cause."
VMAN2GENERAL_FAILURE	2-Critical	vman	Virtual Service%s	"The named virtual service has triggered the log. Please interpret the log in the context of the virtual services."	"No action is required"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>VMAN2GUESTSHELL_ENABLED</del>	2-Critical	vman	The guest shell has been enabled. The command '%s' may be used to access it	-	-
VMAN-2-HA_STATE	2-Critical	vman	%s[chars][chars][chars]	"VMAN tries to detect the role/slot of various nodes on HA events from the platform. If any of those event callbacks fail	-
<del>VMAN2HA_SWITCHOVER_STATE</del>	2-Critical	vman	%s[chars][chars][chars]	"VMAN HA switchover state related messages for a virtual-service whilst it is being recovered on newly active RP after a HA switchover."	"In the failed case
VMAN2HA_SYNC_ERR	2-Critical	vman	%s '%s'[chars]	"The ha-sync persistent storage disk for the virtual service cannot be watched for sync to standby RP."	"Collect the Virt-manager logs and scan them for the cause."
<del>VMAN2HA_SYNC_THREAD_STATE</del>	2-Critical	vman	HA remote synchronize thread has failed and exited.	"VMAN tries to remote sync the OVA repository to all online nodes using a separate thread. If that thread fails	-
<del>VMAN2INVALID_CPU_TUNING</del>	2-Critical	vman	Virtual Service%s	"The virtual service machine definition file is requesting invalid CPU tunes parameter."	"Use a different valid machine definition file for the virtual service. If the problem persists

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>VMAN</del> VMAN2INSTALL_MONG	2-Critical	vman	Virtual Service%s	"The virtual service machine definition file is inconsistent in the specification of required memory via the <memory> and <currentMemory> nodes."	"Enable the Virt-manager trace logs and repeat the activation of the virtual service. Collect the Virt-manager logs and scan them for the cause."
<del>VMAN</del> VMAN2INSTALL_MONT	2-Critical	vman	Virtual Service%s	"Inserting the named virtual service into the virtual service DB tracked by Virt-manager failed."	"Enable the Virt-manager trace logs and repeat the activation of the virtual service. Collect the Virt-manager logs and scan them for the cause."
<del>VMAN</del> VMAN2INSTALL_FAILURE	2-Critical	vman	Virtual Service%s	"The installation of the virtual service failed."	"Enable the Virt-manager trace logs and repeat the installation of the virtual service. Collect the Virt-manager logs and scan them for the cause."
VMAN2INSTALL_LOG	2-Critical	vman	%s[chars][chars][chars]	"The installation log of the named virtual service	-
<del>VMAN</del> VMAN2INSTALL_MESSAGE	2-Critical	vman	VMAN	-	-
<del>VMAN</del> VMAN2INSTALL_STATE	2-Critical	vman	%s '%s'%s[chars]	"The installation state of the named virtual service has changed as notified by Virt-manager."	"In the failed case
<del>VMAN</del> VMAN2INSTALL_ACTIVATE	2-Critical	vman	Virtual Service%s	"The virtual service activate message was received	-
<del>VMAN</del> VMAN2INSTALL_DEACTIVATE	2-Critical	vman	Failed to process virtual service deactivate message	"The virtual service deactivate message was received	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VMA2INVALID_PACKAGE	2-Critical	vman	Virtual Service%s	"The package definition file for the named virtual service has failed to be validated and the virtual service will not run"	"Enable the Virt-manager trace logs and repeat the activation of the virtual service. Collect the Virt-manager logs and scan them for the cause. The most likely cause would be that the package file has been corrupted during file transfer. The suggested action would be to redo the file transfer."
VMA2INVALID_UNPROV_MSG	2-Critical	vman	Failed to process virtual service unprovision message	"The virtual service unprovision message was received"	-
VMA2MACHINE_FAILURE	2-Critical	vman	Virtual Service%s	"The named virtual service has an invalid parameter specified in the .xml file inside the .ova package"	"Fix the .xml file inside the .ova package to have valid values. Then retry installing and activating it"
VMA2MACHINE_UNSUPPORTED	2-Critical	vman	Virtual Service%s	"The virtual service cannot be activated as the machine type specified is not supported"	"Enable the support for the machine type and repeat the activation of the virtual service. Collect the Virt-manager logs and scan them for the cause."
VMA2MEMORY_LIMIT	2-Critical	vman	Virtual Service%s	"The virtual service machine definition file is requesting more memory than the system has available for virtual services."	"Enable the Virt-manager trace logs and repeat the activation of the virtual service. Collect the Virt-manager logs and scan them for the cause."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>VMANMEMORYLIMIT_WARN</del>	2-Critical	vman	Virtual service (%s)%s defines %u MB of Memory exceeding the maximum %u MB.	"The virtual service machine definition file is requesting more memory for the specified profile	-
<del>VMANDEFINITIONFILE</del>	2-Critical	vman	Virtual Service%s	"The virtual service machine definition file is requesting more than one CPU tunes parameter."	"Use a different valid machine definition file for the virtual service. If the problem persists
VMAN2MOVE_STATE	2-Critical	vman	%s '%s'[chars][chars]	"The move of the core or log file of the named virtual service has as been successful or failed as notified by Virt-manager."	"In the failed case
<del>VMANNETWORKCONFIG_ERR</del>	2-Critical	vman	Virtual Service%s	"A network configuration error has been detected for the named virtual service."	"No action is required"
VMAN2PROC_INT_LIST	2-Critical	vman	Virtual Service%s	"The interface list embedded in the activate request for the named virtual service could not be processed."	"Enable the Virt-manager trace logs and repeat the activation of the virtual service. Collect the Virt-manager logs and scan them for the cause."
<del>VMAN2PROCESS_PKG_DEF</del>	2-Critical	vman	Virtual Service%s	"The virtual service package for the named virtual service has failed to be validated and the virtual service will not run."	"Enable the Virt-manager trace logs and repeat the activation of the virtual service. Collect the Virt-manager logs and scan them for the cause."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VMAN2REMOVE_VIRTUAL_SERVICE	2-Critical	vman	Virtual Service%s	"Removing the named virtual service from the virtual service DB tracked by Virt-manager failed."	"Enable the Virt-manager trace logs and repeat the activation of the virtual service. Collect the Virt-manager logs and scan them for the cause."
VMAN2RESET_FORCE	2-Critical	vman	Virtual Services non-recoverable reset command processed	"A 'virtual service reset force' command has been entered and processed. This action initiates a cleanup of last resort. Occasionally a VM will get into an unrecoverable state that prevents it from activating but also from uninstalling. This is a rare event but when it happens the only resort may be to remove the .conf control file and reboot	-
VMAN2RESIZE_CONF_STATE	2-Critical	vman	Virtual service '%s'[chars]%s to '%u'[chars]	"VMAN attempts to resize various VM parameters like rootfs size	-
VMAN2RSYNC_STATE	2-Critical	vman	%s[chars][chars][chars]	"VMAN tries to remote sync the virtual-instance configuration file and the OVA repository to all online nodes. If rsync fails even after consecutive retries	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VMAN2VTXROMRSPACE	2-Critical	vman	Failed to set ROM monitor variable ENABLE_VTX: No space in table	"Failed to set ENABLE_VTX ROM monitor variable due to no space in Monitor Variable Table."	"Verify number of entries in Monitor Variable Table."
VMAN2VTXROMRSTRNG	2-Critical	vman	No format	"Failed to set ENABLE_VTX rom monitor variable due to invalid strin	-
VMAN2START_FAILED	2-Critical	vman	Virtual Service%s	"The named virtual service failed to start."	"Enable the Virt-manager trace logs and repeat the activation of the virtual service. Collect the Virt-manager logs and scan them for the cause."
VMAN2UNINSTALLED_VMBS	2-Critical	vman	All Virtual Services are being uninstalled[chars]%^s[chars]	"All virtual services are being uninstalled by Virt-manager."	"Examine the reason given as to why all virtual services are being uninstalled for more information. If the reason indicated is due to some error condition
VMAN2UPGRADE_LOG	2-Critical	vman	%^s[chars][][chars][][chars]	"The upgrade log of the named virtual service	-
VMAN2VCPU_INVALID	2-Critical	vman	Virtual Service%s	"The virtual service machine definition file is requesting invalid VCPU value."	"Enable the Virt-manager trace logs and repeat the activation of the virtual service. Collect the Virt-manager logs and scan them for the cause."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VMAN2-VCPU_LIMIT	2-Critical	vman	Virtual Service%s	"The virtual service machine definition file is requesting more VCPUs than the system has reserved for virtual services."	"Enable the Virt-manager trace logs and repeat the activation of the virtual service. Collect the Virt-manager logs and scan them for the cause."
VMAN2-VIRT_INST_CRIT	2-Critical	vman	VIRTUAL SERVICE[chars] LOG:[chars]	"The named virtual service has triggered the log. Please interpret the log in the context of the virtual services."	"No action is required"
VMAN2-VIRT_INST_DISK	2-Critical	vman	Virtual Service%s	"The virtual service requires Disk Storage in excess of the Free Disk Storage available to virtual services."	"Enable the Virt-manager trace logs and repeat the activation of the virtual service. Collect the Virt-manager logs and scan them for the cause."
VMAN2-VIRT_INST_INTERFACE	2-Critical	vman	Virtual Service%s	"The number of configured virtual port group interfaces must match the number of Ethernet Network Interfaces defined in the machine definition file"	"Enable the Virt-manager trace logs and repeat the activation of the virtual service. Collect the Virt-manager logs and scan them for the cause."
VMAN2-VIRT_INST_INTERFACE	2-Critical	vman	Failed to unthrottle the log for virtual service[chars]	"The named virtual service had sent overwhelming sys log messages and its log had been throttled as a result"	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>VMAN2-VIRT_INST_MEMORY</del>	2-Critical	vman	Virtual Service%s	"The virtual service requires physical memory in excess of the free memory available to virtual services."	"Enable the Virt-manager trace logs and repeat the activation of the virtual service. Collect the Virt-manager logs and scan them for the cause."
<del>VMAN2-VIRT_INTERFACE</del>	2-Critical	vman	Virtual service[chars] has no management interface defined but it is configured in CLI.	"A management interface is configured but none is defined."	"Deactivate the virtual service"
<del>VMAN2-VIRT_INST_STATE</del>	2-Critical	vman	Virtual Service%s	"The named virtual service has failed. It is no longer running either because the guest OS has failed"	-
VMAN-3-PSS_ERR	3-Error	vman	Purpose:[chars]	-	-
<del>VMAN-3-PSS_URI_ERR</del>	3-Error	vman	Source URI:[chars]	-	-
<del>VMAN-3-SDWRAP_ERR</del>	3-Error	vman	Description:[chars]	-	-
<del>VMAN-3-VIRT_INST_ERR</del>	3-Error	vman	VIRTUAL SERVICE[chars] LOG:[chars]	"The named virtual service has triggered the log. Please interpret the log in the context of the virtual services."	"No action is required"
<del>VMAN-4-HAS_NC_NEEDED</del>	4-Warning	vman	If using the guest shell	-	-
<del>VMAN-4-KEY_SIGNING</del>	4-Warning	vman	Package signing level changed from allow '%s' to allow '%s'	"The package certificate signing level global setting has been changed via configuration under the virtual-service global sub-mode."	"Ensure that this setting has been changed as expected by an authorized user."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>VMAN-4-DAE_WARNING</del>	4-Warning	vman	Virtual Service%s	"The named virtual service has triggered the log. Please interpret the log in the context of the virtual services."	"No action is required"
<del>VMAN-4-VIRT_INST_WARN</del>	4-Warning	vman	VIRTUAL SERVICE[chars] LOG:[chars]	"The named virtual service has triggered the log. Please interpret the log in the context of the virtual services."	"No action is required"
<del>VMAN-4-SRV_LIBR_WARN</del>	4-Warning	vman	VMAN not able to connect to the libvirt daemon after '%d' attempts	"VMAN has been unable to connect to the libvirt daemon. Virtualization services will not be available until this connection is made."	"Collect the logs produced by 'show virt tech'"
<del>VMAN-4-WATCHDOG_TIMER</del>	4-Warning	vman	%s %s'[chars][chars]	"The watchdog timer configured for the named virtual service has expired."	"Check any logs produced by the virtual service to determine the cause."
VMAN-5-AUX	5-Notice	vman	Virtual Service%s	"The AUX login to a virtual service may allow the user access to system functions that may not have been tested or may interact with the system in unintended ways. Use with caution."	"No action is required"
<del>VMAN-5-ACK_FUNC_INVOKED</del>	5-Notice	vman	Package '%s' for service container '%s' is '%s'	-	-
<del>VMAN-5-SRV_NOT_OWNED</del>	5-Notice	vman	Virtual Service '%s' is not owned by client IOSd	"An attempt was made to modify a virtual-service that is not owned by the client. The request was rejected."	"No action is required."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VMAN-5-VIRT_INST	5-Notice	vman	LOG FROM VIRTUAL SERVICE[chars]:[chars]	"The named virtual service has triggered the log. Please interpret the log in the context of the virtual services."	"No action is required"
VMAN-5-VIRT_INST_NOISE	5-Notice	vman	VIRTUAL SERVICE[chars] LOG:[chars]	"The named virtual service has triggered the log. Please interpret the log in the context of the virtual services."	"No action is required"
VMAN-6-VIRT_INST_INFO	6-Information	vman	VIRTUAL SERVICE[chars] LOG:[chars]	"The named virtual service has triggered the log. Please interpret the log in the context of the virtual services."	"No action is required"
VMAN-7-VIRT_INST_DEBUG	7-Debug	vman	VIRTUAL SERVICE[chars] LOG:[chars]	"The named virtual service has triggered the log. Please interpret the log in the context of the virtual services."	"No action is required"
VOICE_ELOG3DUMPFAL	3-Error	Could not dump to remote file - [chars] [chars]. Error=[dec][chars]	Fail to dump event log to the remote file	ios-voice	"Check network connectivity setup and configuration of the protocol"
VOICE_ELOG3DUMPFAL	3-Error	Could not dump to remote file - [chars] [chars]. Error=[dec][chars]	Fail to dump event log to the remote file	ios-voice	"Check network connectivity setup and configuration of the protocol"
VOICE_ELOG3INIT_FAIL	3-Error	Initialization fails - [chars].	Fail to initialize event logger system	ios-voice	"Check availability of router resource such as memory"
VOICE_ELOG3INIT_FAIL	3-Error	Initialization fails - [chars].	Fail to initialize event logger system	ios-voice	"Check availability of router resource such as memory"
VOICE_ELOG3MSGCROHED	3-Error	[dec] messages failed to be written in event log client id:[chars] dump url:[chars].	Failed to save event message to the log	ios-voice	"Check availability of system memory and " "error for dumping event log if configured"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>VOICELOG</del> <del>MEMDROPHD</del>	3-Error	[dec] messages failed to be written in event log client id:[chars] dump url:[chars].	Failed to save event message to the log	ios-voice	"Check availability of system memory and " "error for dumping event log if configured"
<del>VOICE</del> <del>MEM</del> <del>SCH</del> <del>WTR</del> <del>MARK</del>	4-Warning	System memory on high usage [dec]/100. Stopping processing	System is low on memory so throttle control is applied on\n\n event logger system and it will turn on again when remaining\n\n memory is above high water mark	ios-voice	"Ensure that the gateway has the recommended amount of memory for\n\n this IOS feature set and version or scale down usage such as disabling FTP\n\n dump enable event log only for specific application etc."
<del>VOICE</del> <del>MEM</del> <del>SCH</del> <del>WTR</del> <del>MARK</del>	4-Warning	System memory on high usage [dec]/100. Stopping processing	System is low on memory so throttle control is applied on\n\n event logger system and it will turn on again when remaining\n\n memory is above high water mark	ios-voice	"Ensure that the gateway has the recommended amount of memory for\n\n this IOS feature set and version or scale down usage such as disabling FTP\n\n dump enable event log only for specific application etc."
<del>VOICE</del> <del>MEM</del> <del>SCH</del> <del>WTR</del> <del>MARK</del>	5-Notice	System memory usage [dec]/100 is below low watermark now.	System memory is back high so throttle control is removed.	ios-voice	""
<del>VOICE</del> <del>MEM</del> <del>SCH</del> <del>WTR</del> <del>MARK</del>	5-Notice	System memory usage [dec]/100 is below low watermark now.	System memory is back high so throttle control is removed.	ios-voice	""
<del>VOICE</del> <del>E</del> <del>ACCT</del> <del>MODE</del> <del>FAIL</del>	1-Alert	All modes of file accounting have failed - [chars].	All modes of file accounting failed need to fixed right away in order to not to lose accounting information	ios-voice	"Fix the link issues any for ftp link/flash issues then reset file accounting using file-acct reset"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>VCEHEACIALMODEAL</del>	1-Alert	All modes of file accounting have failed - [chars].	All modes of file accounting failed need to fixed right away in order to not to lose accounting information	ios-voice	"Fix the link issues any for ftp link/flash issues then reset file accounting using file-acct reset"
<del>VCEHEACCEDUMFAL</del>	3-Error	Could not dump to remote file - [chars] [chars]. Error=[dec][chars]	Fail to dump event log to the remote file	ios-voice	"Check network connectivity setup and configuration of the protocol"
<del>VCEHEACCEDUMFAL</del>	3-Error	Could not dump to remote file - [chars] [chars]. Error=[dec][chars]	Fail to dump event log to the remote file	ios-voice	"Check network connectivity setup and configuration of the protocol"
<del>VCEHEACCENFAL</del>	3-Error	Initialization fails - [chars].	Fail to initialize event logger system	ios-voice	"Check availability of router resource such as memory"
<del>VCEHEACCENFAL</del>	3-Error	Initialization fails - [chars].	Fail to initialize event logger system	ios-voice	"Check availability of router resource such as memory"
<del>VCEHEACBMDROFD</del>	3-Error	[dec] messages failed to be written in event log client id:[chars] dump url:[chars].	Failed to save event message to the log	ios-voice	"Check availability of system memory and " "error for dumping event log if configured"
<del>VCEHEACBMDROFD</del>	3-Error	[dec] messages failed to be written in event log client id:[chars] dump url:[chars].	Failed to save event message to the log	ios-voice	"Check availability of system memory and " "error for dumping event log if configured"
<del>VCEHEACBMSCHMARK</del>	4-Warning	System memory on high usage [dec]/100. Stopping processing	System is low on memory so throttle control is applied on\n event logger system and it will turn on again when remaining\n memory is above high water mark	ios-voice	"Ensure that the gateway has the recommended amount of memory for\n this IOS feature set and version or scale down usage such as disabling FTP\n dump enable event log only for specific application etc."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>VOEACMMSGHWRM</del>	4-Warning	System memory on high usage [dec]/100. Stopping processing	System is low on memory so throttle control is applied on\n\n event logger system and it will turn on again when remaining\n\n memory is above high water mark	ios-voice	"Ensure that the gateway has the recommended amount of memory for\n\n this IOS feature set and version or scale down usage such as disabling FTP\n\n dump enable event log only for specific application etc."
<del>VOEACMMSGHWRM</del>	5-Notice	System memory usage [dec]/100 is below low watermark now.	System memory is back high so throttle control is removed.	ios-voice	""
<del>VOEACMMSGHWRM</del>	5-Notice	System memory usage [dec]/100 is below low watermark now.	System memory is back high so throttle control is removed.	ios-voice	""
<del>VOEHA1NIFACEDOWN</del>	1-Alert	[chars] RG[[dec]] [chars].	Interface went down	voice-ha	-
<del>VOEHA1NIFACEDOWN</del>	1-Alert	[chars] RG[[dec]] [chars].	Interface went down	voice-ha	-
<del>VOEHA1S1SAE1OICED</del>	1-Alert	[chars] RG[[dec]] [chars].	VOICE HA functionality has been disabled in this router due to call checkpointing failure.	voice-ha	" Router need immediate reload."
<del>VOEHA1S1SAE1OICED</del>	1-Alert	[chars] RG[[dec]] [chars].	VOICE HA functionality has been disabled in this router due to call checkpointing failure.	voice-ha	" Router need immediate reload."
<del>VOEHA2B1UKSNCR</del>	2-Critical	[chars].	VOICE HA INFRA encountered a bulk-sync error.	voice-ha	"Collect requested data/traceback and forward to the " "voice-ha component."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>Voice-HA</del> BUKSYNCERR	2-Critical	[chars].	VOICE HA INFRA encountered a bulk-sync error.	voice-ha	"Collect requested data/traceback and forward to the " "voice-ha component."
<del>Voice-HA</del> SWITCHOVERND	2-Critical	[chars].	VOICE HA detected a failover transition on the STANDBY to become the new ACTIVE.	voice-ha	"Verify calls on the new ACTIVE. " "Peer needs to be in STANDBY mode " "before the next failover."
<del>Voice-HA</del> SWITCHOVERND	2-Critical	[chars].	VOICE HA detected a failover transition on the STANDBY to become the new ACTIVE.	voice-ha	"Verify calls on the new ACTIVE. " "Peer needs to be in STANDBY mode " "before the next failover."
<del>Voice-HA</del> SMDATACOLLECTERR	2-Critical	UC-INFRA HA module [chars] reported DATA COLLECT failure CID:[dec] with error code [dec].	Specified HA module reported error during call leg data collection.	-	"Collect requested data/traceback and forward to the " "appropriate DDTS-component/module owner " "of the specified HA module for investigation."
<del>Voice-HA</del> SMDATACOLLECTERR	2-Critical	UC-INFRA HA module [chars] reported DATA COLLECT failure CID:[dec] with error code [dec].	Specified HA module reported error during call leg data collection.	-	"Collect requested data/traceback and forward to the " "appropriate DDTS-component/module owner " "of the specified HA module for investigation."
<del>Voice-HA</del> SMDATACREATEERR	2-Critical	UC-INFRA HA module [chars] reported RECREATE failure CID:[dec] with error code [dec].	Specified HA module reported error during call leg re-create.	-	"Collect requested data/traceback and forward to the " "appropriate DDTS-component/module owner " "of the specified HA module for investigation."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>UC-<u>INFRA</u>-HA-<u>RECREATE</u>-ERR</del>	2-Critical	UC-INFRA HA module [chars] reported RECREATE failure CID:[dec] with error code [dec].	Specified HA module reported error during call leg re-create.	-	"Collect requested data/traceback and forward to the " "appropriate DDTS-component/module owner " "of the specified HA module for investigation."
<del>UC-<u>HA</u>-<u>DATA</u>-<u>COLLECT</u>-ERR</del>	3-Error	[chars]: HA Module [chars] reported DATA COLLECT failure mainst ID:[dec] CID:[dec].	Specified HA module reported error during call leg data collection.	-	"Collect requested data and forward to the " "appropriate DDTS-component/module owner " "of the specified HA module for investigation."
<del>UC-<u>HA</u>-<u>DATA</u>-<u>COLLECT</u>-ERR</del>	3-Error	[chars]: HA Module [chars] reported DATA COLLECT failure mainst ID:[dec] CID:[dec].	Specified HA module reported error during call leg data collection.	-	"Collect requested data and forward to the " "appropriate DDTS-component/module owner " "of the specified HA module for investigation."
<del>UC-<u>HA</u>-<u>DATA</u>-<u>RECREATE</u>-ERR</del>	3-Error	[chars]: HA Module [chars] reported [chars] RECREATE failure mainst ID:[dec] CID:[dec].	Specified HA module reported error during call leg re-create.	-	"Collect requested data and forward to the " "appropriate DDTS-component/module owner " "of the specified HA module for investigation."
<del>UC-<u>HA</u>-<u>DATA</u>-<u>RECREATE</u>-ERR</del>	3-Error	[chars]: HA Module [chars] reported [chars] RECREATE failure mainst ID:[dec] CID:[dec].	Specified HA module reported error during call leg re-create.	-	"Collect requested data and forward to the " "appropriate DDTS-component/module owner " "of the specified HA module for investigation."
<del>UC-<u>HA</u>-<u>DATA</u>-<u>RECREATE</u>-ERR</del>	5-Notice	[chars] RG[[dec]]. HA functionality disabled for Voice.	VOICE HA functionality is disabled on the peer. due to call checkpointing failure.	voice-ha	"Peer Router need immediate reload."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VOICE_HA-5-PROTECTED	5-Notice	[chars] RG[[dec]]. HA functionality disabled for Voice.	VOICE HA functionality is disabled on the peer. due to call checkpointing failure.	voice-ha	"Peer Router need immediate reload."
VOICE_HA-5-READY	5-Notice	[chars] RG[[dec]] VOICE HA Peer exiting from PROTECTED state.	VOICE HA functionality is enabled on peer.	voice-ha	-
VOICE_HA-5-READY	5-Notice	[chars] RG[[dec]] VOICE HA Peer exiting from PROTECTED state.	VOICE HA functionality is enabled on peer.	voice-ha	-
VOICE_HA-7-STATUS	7-Debug	[chars].	VOICE HA INFRA info/status messages.	voice-ha	"None"
VOICE_HA-7-STATUS	7-Debug	[chars].	VOICE HA INFRA info/status messages.	voice-ha	"None"
VOICE_IEC-3-EXT	3-Error	Externally-generated Internal Error Code received: [dc][dc][dc][dc][dc][dc]	Some external entity has initiated the termination of a voice call. It has signalled its Internal Error Code to this gateway to be reported in the accounting record for this call. In addition it is being reported through syslog because of the <CmdBold>voice iec syslog<NoCmdBold> configuration.	ios-voice	"Refer to the IEC Error Message Decoder at " <a href="http://www.cisco.com/111/cisco111">http://www.cisco.com/111/cisco111</a> " and enter the IEC or enter the <CmdBold>show voice iec "description<NoCmdBold> <CmdAg>IECde<NoCmdAg> command with " <CmdAg>IECde<NoCmdAg> being the value of the IEC that was " "received for more information on the details of this error. It " "is possible some debugging actions might also indicate the cause " "of the error."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VOICE_IEC-3-EXT	3-Error	Externally-generated Internal Error Code received: [dc][dc][dc][dc][dc][dc]	Some external entity has initiated the termination of a voice call. It has signalled its Internal Error Code to this gateway to be reported in the accounting record for this call. In addition it is being reported through syslog because of the <CmdBold>voice iec syslog<NoCmdBold> configuration.	ios-voice	"Refer to the IEC Error Message Decoder at " <del>http://www.cisco.com/cgi-bin/tablelookup.pl?table=/table/lookup.html</del> " "and enter the IEC or enter the <CmdBold>show voice iec " "description<NoCmdBold><CmdAg>IECde<NoCmdAg> command with " "<CmdAg>IECde<NoCmdAg> being the value of the IEC that was " "received for more information on the details of this error. It " "is possible some debugging actions might also indicate the cause " "of the error."
VOICE_IEC-3-GK	3-Error	[chars]: Internal Error [chars]: IEC=[dc][dc][dc][dc][dc] on \n GUID [chars] \n confid [chars]	An internally-detected error has caused a voice call to be released or terminated. An Internal Error Code IEC has been	voice-h323	"Refer to the IEC Error Message Decoder at " <del>http://www.cisco.com/cgi-bin/tablelookup.pl?table=/table/lookup.html</del> " "and enter the IEC or enter the <CmdBold>show voice iec " "description<NoCmdBold><CmdAg>IECde<NoCmdAg> command with " "<CmdAg>IECde<NoCmdAg> being the value of the IEC that was " "received for more information on the details of this error. It " "is possible some debugging actions might also indicate the cause " "of the error."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VOICE_IEC-3-GK	3-Error	[chars]: Internal Error [chars]: IEC=[dec][dec][dec][dec][dec] on \n GUID [chars] \n confid [chars]	An internally-detected error has caused a voice call to be released or terminated. An Internal Error Code IEC has been	voice-h323	"Refer to the IEC Error Message Decoder at " <a href="http://www.cisco.com/cisco/en/products/voice/ipvoice/voice-h323.html">http://www.cisco.com/cisco/en/products/voice/ipvoice/voice-h323.html</a> " and enter the IEC or enter the <CmdBold>show voice iec " "description<NoCmdBold><CmdAg>IECde<NoCmdAg> command with " "CmdAg>IECde<NoCmdAg> being the value of the IEC that was " "received for more information on the details of this error. It " "is possible some debugging actions might also indicate the cause " "of the error."
VOICE_IEC-3-GW	3-Error	[chars]: Internal Error [chars]: IEC=[dec][dec][dec][dec][dec] on callID [dec] [chars]	An internally-detected error has caused a voice call to be released or terminated. An Internal Error Code IEC has been	ios-voice	"Refer to the IEC Error Message Decoder at " <a href="http://www.cisco.com/cisco/en/products/voice/ipvoice/voice-h323.html">http://www.cisco.com/cisco/en/products/voice/ipvoice/voice-h323.html</a> " and enter the IEC or enter the <CmdBold>show voice iec " "description<NoCmdBold><CmdAg>IECde<NoCmdAg> command with " "CmdAg>IECde<NoCmdAg> being the value of the IEC that was " "received for more information on the details of this error. It " "is possible some debugging actions might also indicate the cause " "of the error."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VOICE_IEC-3-GW	3-Error	[chars]: Internal Error [chars]: IEC=[dec][dec][dec][dec] on callID [dec] [chars]	An internally-detected error has caused a voice call to be released or terminated. An Internal Error Code IEC has been	ios-voice	"Refer to the IEC Error Message Decoder at " <a href="#">http://www.cisco.com/cisco/en/products/ios/nr/docs/configuration/ios-voice-iec.html</a> " and enter the IEC or enter the <CmdBold>show voice iec "description<NoCmdBold><CmdAg>IECde<NoCmdAg> command with " <a href="#">"&lt;CmdAg&gt;IECde&lt;NoCmdAg&gt;</a> being the value of the IEC that was " "received for more information on the details of this error. It " "is possible some debugging actions might also indicate the cause " "of the error."
VOICE_RC5DSP_REMOVED	5-Notice	DSP ID:[dec] removed from service after [dec] reset within [dec] minutes	Notification message.	-	"dsp might be badcopy the error message exactly\n\nas it appears and report it to your technical support representative"
VOICE_RC5DSP_REMOVED	5-Notice	DSP ID:[dec] removed from service after [dec] reset within [dec] minutes	Notification message.	-	"dsp might be badcopy the error message exactly\n\nas it appears and report it to your technical support representative"
VOICE_RC5DSP_RESET	5-Notice	DSP ID:[dec] reset	Notification message.	-	"IOS reset dsp due to possible dsp error"
VOICE_RC5DSP_RESET	5-Notice	DSP ID:[dec] reset	Notification message.	-	"IOS reset dsp due to possible dsp error"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VOICE_UTIL3NORAWMSG	3-Error	no free raw msg structure available from [chars] for signaling message	There were no rawmsg structures remaining in the system pools to alert the\n\ router of a voice or signaling event.	ios-voice	"Check that the voice port for which the event was reported is\n\ still operational. If not clear the voice port."
VOICE_UTIL3NORAWMSG	3-Error	no free raw msg structure available from [chars] for signaling message	There were no rawmsg structures remaining in the system pools to alert the\n\ router of a voice or signaling event.	ios-voice	"Check that the voice port for which the event was reported is\n\ still operational. If not clear the voice port."
VOP_RIP3DSCPVIOLCN	3-Error	[chars]	-	voice-rtp	"Please check your configuration."
VOP_RIP3DSCPVIOLCN	3-Error	[chars]	-	voice-rtp	"Please check your configuration."
VOP_RIP3DSCPVIOLCN	3-Error	[chars]	-	voice-rtp	"Please check your configuration."
VOP_RIP3DSCPVIOLCN	3-Error	[chars]	-	voice-rtp	"Please check your configuration."
VOP_RIP4VQM_HALT_ALL	4-Warning	System one-minute CPU has reached [node][node] Video quality monitoring is halted for all calls.	Because system one-minute CPU usage has reached a high percentage DSPFarm video quality monitoring service is disabled for all calls which includes on-going calls that were being monitored as well as new calls that are configured to be monitored.	cube-vqm	"Check the system CPU and find out the cause of the "high CPU. Video quality monitoring service should "not have a significant impact on CPU usage."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VOPRIP4VQM_HALT_ALL	4-Warning	System one-minute CPU has reached [node][node] Video quality monitoring is halted for all calls.	Because system one-minute CPU usage has reached a high percentage DSPFarm video quality monitoring service is disabled for all calls which includes on-going calls that were being monitored as well as new calls that are configured to be monitored.	cube-vqm	"Check the system CPU and find out the cause of the " "high CPU. Video quality monitoring service should " "not have a significant impact on CPU usage."
VOPRIP4VQM_HALT_NEW	4-Warning	System one-minute CPU has reached [node][node] Video quality monitoring is not enabled for new calls.	Because system one-minute CPU usage has reached a high percentage DSPFarm video quality monitoring service is disabled for new calls that are configured to be monitored. Existing calls that are already monitored are not impacted.	cube-vqm	"Check the system CPU and find out the cause of the " "high CPU. Video quality monitoring service should " "not have a significant impact on CPU usage."
VOPRIP4VQM_HALT_NEW	4-Warning	System one-minute CPU has reached [node][node] Video quality monitoring is not enabled for new calls.	Because system one-minute CPU usage has reached a high percentage DSPFarm video quality monitoring service is disabled for new calls that are configured to be monitored. Existing calls that are already monitored are not impacted.	cube-vqm	"Check the system CPU and find out the cause of the " "high CPU. Video quality monitoring service should " "not have a significant impact on CPU usage."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VOIP_RIP5VQM_RESUME	5-Notice	System one-minute CPU is lowered to [node][node] Resuming video quality monitoring for all calls.	Because system one-minute CPU usage has decreased from a high percentage DSPFarm video quality monitoring service is enabled again for all calls which includes on-going calls whose monitoring was halted as well as new calls that are configured to be monitored.	cube-vqm	"N/A. This message is purely informational."
VOIP_RIP5VQM_RESUME	5-Notice	System one-minute CPU is lowered to [node][node] Resuming video quality monitoring for all calls.	Because system one-minute CPU usage has decreased from a high percentage DSPFarm video quality monitoring service is enabled again for all calls which includes on-going calls whose monitoring was halted as well as new calls that are configured to be monitored.	cube-vqm	"N/A. This message is purely informational."
VOIP_RIP6MEDIA_LOOP	6-Information	[chars]\n	-	voice-rtp	"Please check your configuration."
VOIP_RIP6MEDIA_LOOP	6-Information	[chars]\n	-	voice-rtp	"Please check your configuration."
VOIPAAALOWCPU_RESOURCE	3-Error	VOIPAAA: System running on high cpu usage.\n\n Accounting for callID=[dec] is rejected.\n	The system does not have sufficient CPU resources\n\n to accept a new call. Any further VoIP AAA requests\n\n will be rejected	voice-aaa	"Ensure that the call setup rate is within the supported capacity of\n\n this gateway."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VOIPAAA\LOWCPU_RESOURCE	3-Error	VOIPAAA: System running on high cpu usage.\n\n Accounting for callID=[dec] is rejected.\n	The system does not have sufficient CPU resources\n\n to accept a new call. Any further VoIP AAA requests\n\n will be rejected	voice-aaa	"Ensure that the call setup rate is within the supported capacity of\n\n this gateway."
VOIPAAA\CP_CALL_HISTORY	5-Notice	\CallLegType [dec] \ConnectionId [hec][hec][hec][hec] \SetupTime [chars] \PeerAddress [node] \PeerSubAddress [node] \DisconnectCause [node] \DisconnectText [node] \ConnectTime [chars] \DisconnectTime [chars] \CallOrigin [node] \ChargedUnits [node] \InfoType [node] \TransmitPackets [node] \TransmitBytes [node] \ReceivePackets [node] \ReceiveBytes %u	Call history detail output is used in simple accounting. The ASCII comma\n\n delimited output can be stored using syslogd and passed on to other\n\n billing and/or processing software on a server.	-	""

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VCPAAASVCP_CAL_HSI_CRY	5-Notice	\CallLegType [dec] \ConnectionId [hec][hec][hec][hec] \SetupTime [chars] \PeerAddress [node] \PeerSubAddress [node] \DisconnectCause [node] \DisconnectText [node] \ConnectTime [chars] \DisconnectTime [chars] \CallOrigin [node] \ChargedUnits [node]\InfoType [node] \TransmitPackets [node]\TransmitBytes [node]\ReceivePackets [node]\ReceiveBytes %u	Call history detail output is used in simple accounting. The ASCII comma\n\ delimited output can be stored using syslogd and passed on to other\n\ billing and/or processing software on a server.	-	""
VCPAAASVCP_FEA_HSI_CRY	5-Notice	\[chars]	Call feature detail output is used in feature accounting. \n\ This captures multiple feature invocations on a given legthis\n\ can be used for accounting	-	""
VCPAAASVCP_FEA_HSI_CRY	5-Notice	\[chars]	Call feature detail output is used in feature accounting. \n\ This captures multiple feature invocations on a given legthis\n\ can be used for accounting	-	""
VOIPFIB-3-BADIDB	3-Error	Invalid IDB: Slot [dec] Channel [dec]	An internal software error occurred.	voip_fib	LOG_SID_SH_TECH_ACTION
VOIPFIB-3-BADIDB	3-Error	Invalid IDB: Slot [dec] Channel [dec]	An internal software error occurred.	voip_fib	LOG_SID_SH_TECH_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VOIPFIB3INVALIDSESSION	3-Error	Invalid VoIP Session	An internal software error occurred.	voip_fib	LOG_SIDSH_TECH_ACTION
VOIPFIB3INVALIDSESSION	3-Error	Invalid VoIP Session	An internal software error occurred.	voip_fib	LOG_SIDSH_TECH_ACTION
VOIPFIB3-NODSPINFO	3-Error	Failed to get DSP info	An internal software error occurred.	voip_fib	LOG_SIDSH_TECH_ACTION
VOIPFIB3-NODSPINFO	3-Error	Failed to get DSP info	An internal software error occurred.	voip_fib	LOG_SIDSH_TECH_ACTION
VOIPFIB3-NOMEM	3-Error	[chars] [dec] [dec]	An internal software error occurred.	voip_fib	LOG_SIDSH_TECH_ACTION
VOIPFIB3-NOMEM	3-Error	[chars] [dec] [dec]	An internal software error occurred.	voip_fib	LOG_SIDSH_TECH_ACTION
VOIPFIB3-SBINIT	3-Error	Error initializing [chars] subblock data structure. [chars]	Initialization of the specified subblock data structure could not be accomplished.	voip_fib	LOG_STD_ACTION
VOIPFIB3-SBINIT	3-Error	Error initializing [chars] subblock data structure. [chars]	Initialization of the specified subblock data structure could not be accomplished.	voip_fib	LOG_STD_ACTION
VPA-1-RPTFAIL	1-Alert	[chars] failed to send report [dec] at [chars] - line [dec]	The port adaptor failed to send a report from vip.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
VPA-3-BADVC	3-Error	[chars] [dec]/[dec] got bad VC packet \n[node]x [node]x [node]x [node]x [node]x [node]x	An interface received a packet with bad VC encapsulation. \n\ This indicates either a software or hardware problem.	-	LOG_SIDSH_TECH_ACTION
VPA-3-CMDFAIL	3-Error	[chars] Command Failed at [chars] - line [dec] arg [dec]	The port adaptor failed to process a command.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VPA-3-FWCRASH	3-Error	Firmware for VPA in bay [dec] crashed with exception [hex]\n	The port adaptor firmware has crashed.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
VPA-3-INITFAIL	3-Error	VPA bay [dec] Init Failed at [chars] - line [dec] arg [hec]	The port adaptor failed to complete hardware initialization.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
VPA-3-TDMFAIL	3-Error	VPA-TDM access failed at [chars] - line [dec] arg=[dec] bay=[dec]	The port adaptor failed to access TDM switch.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
VPA-3-TSBUSY	3-Error	VPA bay [dec] TDM timeslot is busy: ST=[dec]/TS=[dec]	The port adaptor failed to grand a cross connect setup request.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
VPA-3-TSNONBUSY	3-Error	VPA bay [dec] TDM timeslot is non busy: ST=[dec]/TS=[dec]	The port adaptor failed to grand a cross connect teardown request.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
VPA-3-UNEXPEVENT	3-Error	VPA bay [dec] received an unexpected event=[hec]	The port adaptor received an unexpected event from firmware.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
VPA-5-TXVFULL	5-Notice	VPA bay [dec] Voice tx ring is full: dma_done=[dec] last_dma_done=[dec]	-	-	-
VPA-6-NODATA	6-Information	Data call is not supported on [chars].	Data call is not supported in this version of IOS.	-	"Remove data call configuration/setup."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VPA-6-NOTDMBP	6-Information	No TDM backplane is supported on slot [dec].	Cannot cross connect ds0 inter slot without the TDM backplane.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
VPA-6-NOTSUPPORT	6-Information	Voice PA is not supported in this platform.	The port adaptor is not supported in this platform.	-	"Copy the error message exactly as it appears and report it to your\n\ technical support representative."
VPA-6-RXDFILLFAIL	6-Information	VPA bay [dec] Data rx ring refill failed: rxd_fill_fail=[dec]	-	-	-
VPA-6-RXVFILLFAIL	6-Information	VPA bay [dec] Voice rx ring refill failed: rxv_fill_fail=[dec]	-	-	-
VPDN-3-IP_ADDR_MACH	3-Error	[chars]	The remote server changed its address.	vpdn	"Change initiate-to configuration at the LAC to point to the exact IP " "address LNS will use"
VPDN-3-IP_SWITCH_ERR	3-Error	l2x ip switching vector not installed	Platform dependent l2x ip cef switching module is missing.	vpdn	""
VPDN-3-NORESOURCE	3-Error	[chars] [chars][chars] no resources for user [chars][chars][chars]	The NAS/LAC or HGW/LNS is out of resources for the forwarding of a VPDN user.	vpdn	""
VPDN-4-REFUSED	4-Warning	Session for [chars] Refused status = [hec]	The remote server refused this session.	-	"Check configuration on the HG or LNS"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VPDN4SESSIONERROR	4-Warning	[chars] [chars][chars] unable to terminate user [chars][chars][chars]	The HGW/LNS was unable to complete the forwarding of the VPDN user due to an internal error. This error may be resource related or configuration related. A reason string may be present to indicate the point of failure.	vpdn	"Check the configuration on the HGW/LNS"
VPDN-5-NOIDB	5-Notice	[chars] [chars][chars] unable to terminate user [chars]	The HGW/LNS is out of resources to create sessions for VPDN forwarded users in particular it has reached the maximum number of interfaces allowed on the router.	vpdn	""
VPDN-5-UNREACH	5-Notice	[chars] [chars][chars] is unreachable	The NAS/LAC or HGW/LNS has timed out attempting to establish a tunnel connection to a HGW/LNS or NAS/LAC. This may be due to network or authentication/authorization issues.	vpdn	"Check configuration on the NAS/LAC or HGW/LNS check network " "connectivity between the NAS/LAC and HGW/LNS. Check if the tunnel " "setup needs to have a different source IP address from that of " "the NAS/LAC."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VPDN-6-AUTHENERR	6-Information	[chars] [chars][chars] cannot authenticate for [chars] [chars] [chars][chars][chars]	The NAS/LAC or HGW/LNS is unable to locate a AAA server for the purposes of authenticating the user or tunnel. An error of this type indicates that the router was unable to establish a network connection with the designated/configured server. A reason string may also be present to provide further information.	vpdn	"Check AAA configuration on the NAS/LAC or HGW/LNS and network " "connectivity to the AAA servers."
VPDN-6-AUTHENFAIL	6-Information	[chars] [chars][chars] [chars]authentication failure [chars]for [chars] [chars] [chars][chars][chars]	The NAS/LAC or HGW/LNS has failed to authenticate a user or a tunnel or the HGW/LNS has failed authentication with the client which initiated the session. For authentication failures of the user or tunnel a reason string should be present which will indicate the point of failure. When a client fails to authenticate the HGW a reason string may be present depending upon the point of failure.	vpdn	"Check username configuration on the NAS/LAC or HGW/LNS and possibly " "even the client if the HGW/LNS is failing authentication removing " "the negotiation of outbound authentication is one possible solution " "i.e. only authenticate the user in the inbound direction.\n" "If AAA is applicable check AAA configuration on the NAS/LAC or " "HGW/LNS and network connectivity to the AAA servers."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VPDN-6-AUTHORERR	6-Information	[chars] [chars][chars] cannot authorize for [chars] [chars] [chars][chars][chars]	The NAS/LAC or HGW/LNS is unable to locate a AAA server for the purposes of authorizing the user or tunnel. An error of this type indicates that the router was unable to establish a network connection with the designated/configured server. A reason string may also be present to provide further information.	vpdn	"Check AAA configuration on the NAS/LAC or HGW/LNS and network " "connectivity to the AAA servers."
VPDN-6-AUTHORFAIL	6-Information	[chars] [chars][chars] [chars]authorization failure for [chars] [chars] [chars][chars][chars]	The NAS/LAC or HGW/LNS has failed to authorize a user or a tunnel. A reason string may be present to indicate the point of failure.	vpdn	"Check authorization configuration on the NAS/LAC or HGW/LNS. If AAA " " "is applicable check network connectivity to the AAA servers."
VPDN-6-CLOSED	6-Information	[chars] [chars][chars] closed [chars] [chars] [chars][chars][chars]	The remote server typically the HGW/LNS closed this session. The reason for the closure is encoded in a hexadecimal format and corresponds to the particular protocol descriptions i.e. for L2F the values are documented in section 4.4.5 of the Internet Draft. A description string may also be present which describes the closure reason.	vpdn	"Check configuration on the NAS/LAC or HGW/LNS"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VPDN-6-DOWN	6-Information	[chars] [chars][chars] changed state to down [chars] [chars] [chars][chars][chars]	The remote server typically the HGW/LNS closed this tunnel. The\n\n reason for the closure is encoded in a decimal format which\n\n corresponds to the particular protocol descriptions i.e. for L2F\n\n the values are documented in section 4.4.5 of the Internet Draft.\n\n A description string may also be present which describes the\n\n closure reason.	vpdn	"Check configuration on the NAS/LAC or HGW/LNS"
VPDN6MAX_SESS_EXCD	6-Information	[chars] [chars][chars] has exceeded configured local session-limit and rejected [chars] [chars] [chars][chars][chars]	The NAS/LAC or HGW/LNS has refused this session since the configured\n\n maximum VPDN session limit has been reached.	vpdn	""
VPDN6QUEUE_PACKET_NO	6-Information	UnsetQ reached msg alert threshold. <del>local if [num]msgQ [num] and [num]Q [num]Q %i</del>	UnsetQ size has reached the message alert threshold. Message alert threshold can be configured through CLI 'vpdn queuesize-alert <num>'. <del>local if [num]msgQ [num] and [num]Q [num]Q %i</del>	vpdn	""
VPDN-6-RESIZE	6-Information	Updated [chars] MID table size to %u	The NAS/LAC or HGW/LNS has altered the size of the session table through command line configuration.	-	""

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VPDN-6-SOFTSHUT	6-Information	[chars] [chars][chars] has turned on softshut and rejected [chars] [chars] [chars][chars][chars]	The NAS/LAC or HGW/LNS can no longer accept new connection when\n\ softshut has been turned on. Existing session will continue until\n\ termination.	vpdn	""
VPDN-6-TIMEOUT	6-Information	[chars] [chars][chars] disconnected [chars] [chars] [chars][chars][chars]	The NAS/LAC or HGW/LNS has disconnected the user due to the expiration of a timer this may be e.g. PPP negotiation related or an absolute timeout for the session.	vpdn	""
VPDN-6-TUNNEL	6-Information	Event[chars]Local/Remote id[chars]Remote_host[chars] Remote_ip:[chars] Group_name:[chars]	this message to log L2TP tunnel UP/CLOSED event Not errmsg	vpdn	"Logging L2TP tunnel UP/CLOSED trap"
VPDN-6-TUNNEL_NRESYNC	6-Information	[chars] [chars] [chars] tunnel is in HA resync reject [chars] [chars] [chars]	The tunnel towards the peer is still in High Availability HA	vpdn	"It is normal for this to occur during tunnel High Availability HA "
VPDN-6-LSG_DEAD_CACHE_EVENT	6-Information	LSG dead cache entry [node][chars]	A dead cache entry status is changed in the VPDN Load Sharing Group LSG table. The event could be 'Added' where a LSG entry	vpdn	""



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VPLS_NP_CLIENT3INFO	3-Error	[chars]	VPLS NP Client failed to initialize properly which will result in\n\n improper operation of Any Transport Over MPLS feature	c7600-sip-400-clnt	"Try to reload the IOS image on the affected card or platform. If the\n\n error persists record the output from the following commands:\n\n\n\ <ul style="list-style-type: none"> <li>&lt;Bullet&gt;&lt;par&gt;&lt;Bold&gt;show tech &lt;NoBold&gt;\n\</li> <li>&lt;Bullet&gt;&lt;par&gt;&lt;Bold&gt;show log &lt;NoBold&gt;\n\</li> </ul> <Body><par>Provide this information to your technical support\n\n representative."
VPLS_NP_CLIENT3NOMEM	3-Error	[chars]	VPLS NP Client failed to initialize properly which will result in\n\n improper operation of Any Transport Over MPLS feature	c7600-sip-400-clnt	"This error may indicate that more memory must be installed on the\n\n affected card or platform in order to service all the features and\n\n related entities enabled via the configuration.\n\n\n\ Try to reload the IOS image on the affected card or platform. If the\n\n error persists record the output from the following commands:\n\n\n\ <ul style="list-style-type: none"> <li>&lt;Bullet&gt;&lt;par&gt;&lt;Bold&gt;show tech &lt;NoBold&gt;\n\</li> <li>&lt;Bullet&gt;&lt;par&gt;&lt;Bold&gt;show log &lt;NoBold&gt;\n\</li> </ul> <Body><par>Provide this information to your technical support\n\n representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VPLS_NP_CLIENT4WARN	4-Warning	[chars] [dec] [chars]	Entry could not be added because:\n\ 1. Entry passed is invalid.	c7600-sip-400-clnt	"Try to reload the IOS image on the affected card or platform. If the\n\ error persists record the output from the following commands:\n\n\ <Bulleted> show tech </Bulleted>\n\ <Bulleted> show log </Bulleted>\n\ <Body> Provide this information to your technical support\n\ representative."
VPLS3INVALID_ENCAPP	3-Error	[chars]: [chars] mpls label: [dec]	Invalid encap type for VPLS processed packet.	cpp-ucode	LOG_STD_ACTION
VPN_HW_SELF_TEST_FAILURE	0-Emergency	Hardware Crypto self-test failed [chars]	One of the Hardware Crypto self-tests has failed. The Crypto engine is not operable in this state.	-	"If the failure persists contact Cisco to " "replace the hardware."
VPN_HW_SELF_TEST_FAILURE	0-Emergency	Hardware Crypto self-test failed [chars]	One of the Hardware Crypto self-tests has failed. The Crypto engine is not operable in this state.	-	"If the failure persists contact Cisco to " "replace the hardware."
VPN_HW-1-ALIGN	1-Alert	Slot: [dec] - Alignment failure on packet buffer: 0x[node]x	A software error occurred. The VPN hardware accelerator driver has detected that the buffer is not aligned correctly.	vpn_hw	"Copy the error message exactly as it appears and report it to " "your Cisco technical support representative."
VPN_HW-1-ALIGN	1-Alert	Slot: [dec] - Alignment failure on packet buffer: 0x[node]x	A software error occurred. The VPN hardware accelerator driver has detected that the buffer is not aligned correctly.	vpn_hw	"Copy the error message exactly as it appears and report it to " "your Cisco technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
VPN_HW-1-ERROR	1-Alert	slot: [dec] - [chars]	An error occured in the application using VPN_HW.	vpn_hw	"Copy the error message exactly as it appears and report it to " "your technical support representative."
VPN_HW-1-ERROR	1-Alert	slot: [dec] - [chars]	An error occured in the application using VPN_HW.	vpn_hw	"Copy the error message exactly as it appears and report it to " "your technical support representative."
VPN_HW-1-HEARTBEAT	1-Alert	VPN Module in slot: [dec]: Keepalive lost.	The VPN hardware accelerator seems to have stopped operating.	vpn_hw	"Reboot your router. If this message recurs copy the error message " "exactly as it appears on the console or in the system log contact " "your Cisco technical support representative and provide the representative " "with the gathered information."
VPN_HW-1-HEARTBEAT	1-Alert	VPN Module in slot: [dec]: Keepalive lost.	The VPN hardware accelerator seems to have stopped operating.	vpn_hw	"Reboot your router. If this message recurs copy the error message " "exactly as it appears on the console or in the system log contact " "your Cisco technical support representative and provide the representative " "with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VPN_HW-1-INITFAIL	1-Alert	Slot [dec]: [chars]	The VPN hardware accelerator driver failed to initialize the accelerator at the slot specified in the error message at the specified point. This event will negatively impact encryption performance. User should reload router.	vpn_hw	LOG_STD_ACTION
VPN_HW-1-INITFAIL	1-Alert	Slot [dec]: [chars]	The VPN hardware accelerator driver failed to initialize the accelerator at the slot specified in the error message at the specified point. This event will negatively impact encryption performance. User should reload router.	vpn_hw	LOG_STD_ACTION
VPN_HW-1-NOMEMORY	1-Alert	[chars] creation failed for slot [dec]	The VPN_HW driver in its initialization phase could not allocate memory for the data structure that is specified in the error message.	vpn_hw	"Reduce other system activity to ease memory demands. If conditions " "warrant upgrade to a larger memory configuration. If this " "message recurs copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support " "representative and provide the representative with the gathered information."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VPN_HW-1-NOMEMORY	1-Alert	[chars] creation failed for slot [dec]	The VPN_HW driver in its initialization phase could not allocate memory for the data structure that is specified in the error message.	vpn_hw	"Reduce other system activity to ease memory demands. If conditions " "warrant upgrade to a larger memory configuration. If this " "message recurs copy the error message exactly as it appears on the console " "or in the system log contact your Cisco technical support " "representative and provide the representative with the gathered information."
VPN_HW-1-OWNER	1-Alert	slot: [dec]: [chars] packet buffer pak=0x[node]x	A software or hardware error occurred. The VPN hardware accelerator driver has detected that the buffer ring is in an inconsistent and unrecoverable state.	vpn_hw	LOG_STD_ACTION
VPN_HW-1-OWNER	1-Alert	slot: [dec]: [chars] packet buffer pak=0x[node]x	A software or hardware error occurred. The VPN hardware accelerator driver has detected that the buffer ring is in an inconsistent and unrecoverable state.	vpn_hw	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VPN_HW4/PACKET_ERROR	1-Alert	slot: [dec] Packet Encryption/Decryption error [chars]	An unexpected error occurred during the encryption or decryption\n\n of a packet.	-	"This message can occur occasionally during normal operation of the " "system. It may occur during the transition to a new session key for " "a Security Association. In such cases no action is required. However " "if it happens frequently or is associated with traffic disruption then " "note of the status value and contact a Cisco representative. The " "VPN hardware accelerator will most likely need to be replaced."
VPN_HW4/PACKET_ERROR	1-Alert	slot: [dec] Packet Encryption/Decryption error [chars]	An unexpected error occurred during the encryption or decryption\n\n of a packet.	-	"This message can occur occasionally during normal operation of the " "system. It may occur during the transition to a new session key for " "a Security Association. In such cases no action is required. However " "if it happens frequently or is associated with traffic disruption then " "note of the status value and contact a Cisco representative. The " "VPN hardware accelerator will most likely need to be replaced."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VPN_HW-1-TOOBIG	1-Alert	Slot: [dec] - [chars] received a packet with size [dec].	Software supports upto **** MTU	vpn_hw	LOG_STD_ACTION
VPN_HW-1-TOOBIG	1-Alert	Slot: [dec] - [chars] received a packet with size [dec].	Software supports upto **** MTU	vpn_hw	LOG_STD_ACTION
VPN_HW-1-UNSUPP	1-Alert	VPN Module in slot: [dec]: [chars] [node]x.	This revision or version of the VPN hardware accelerator in the slot specified in the error message is not supported.	vpn_hw	"Verify the VPN hardware adapter is the proper hardware level and software " "revision for the running version of IOS. If it is " "copy the error message exactly as it appears and report it to " "your Cisco technical support representative."
VPN_HW-1-UNSUPP	1-Alert	VPN Module in slot: [dec]: [chars] [node]x.	This revision or version of the VPN hardware accelerator in the slot specified in the error message is not supported.	vpn_hw	"Verify the VPN hardware adapter is the proper hardware level and software " "revision for the running version of IOS. If it is " "copy the error message exactly as it appears and report it to " "your Cisco technical support representative."
VPN_HW-3-MULIDEV	3-Error	Cannot support more than one Encryption AIMS	A second Encryption AIM was discovered present in the system. The\n\n Encryption AIM software only supports a single Encryption AIM. All\n\n other Encryption AIMS installed will be ignored.	-	"Remove one of the Encryption AIMS installed in your system."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
VPN_HW-3-MULTIDEV	3-Error	Cannot support more than one Encryption AIMS	A second Encryption AIM was discovered present in the system. The\n\n Encryption AIM software only supports a single Encryption AIM. All\n\n other Encryption AIMS installed will be ignored.	-	"Remove one of the Encryption AIMS installed in your system."
VPN_HW-6-FIPSFAIL	6-Information	FIPS test_id [dec][chars] Test Failure will be induced	The FIPS test was forced to fail from ROMMON	-	"Do not set FIPS_FAIL via rommon if fips failure test is not desired"
VPN_HW-6-FIPSFAIL	6-Information	FIPS test_id [dec][chars] Test Failure will be induced	The FIPS test was forced to fail from ROMMON	-	"Do not set FIPS_FAIL via rommon if fips failure test is not desired"
VPN_HW-6-INFO	6-Information	slot: [dec] [chars]	This is informational message from VPN hardware accelerator driver.	vpn_hw	"This is informational message from VPN_HW. This occurs " "in normal operation. No action is required."
VPN_HW-6-INFO	6-Information	slot: [dec] [chars]	This is informational message from VPN hardware accelerator driver.	vpn_hw	"This is informational message from VPN_HW. This occurs " "in normal operation. No action is required."
VPN_HW-6-INFO_LOC	6-Information	Crypto engine: [chars] [chars]	This is informational message from VPN hardware accelerator driver.	vpn_hw	"This is informational message from VPN_HW. This occurs " "in normal operation. No action is required."



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
VPN_HW-6INFO_LOC	6-Information	Crypto engine: [chars] [chars]	This is informational message from VPN hardware accelerator driver.	vpn_hw	"This is informational message from VPN_HW. This occurs " "in normal operation. No action is required."
VPN_HW-6SHUTDOWN	6-Information	[chars] shutting down	The specified VPN_HW is shutting down. It may have been physically removed.	vpn_hw	"This is an informational message only. It occurs " "in normal operation."
VPN_HW-6SHUTDOWN	6-Information	[chars] shutting down	The specified VPN_HW is shutting down. It may have been physically removed.	vpn_hw	"This is an informational message only. It occurs " "in normal operation."
VQCLIENT-2CHUNKFAIL	2-Critical	Could not allocate memory for VQP	An error occurred when the system tried to allocate memory for the VQP client.	dynamic_vlan	LOG_STD_ACTION
VQCLIENT-2DENY	2-Critical	Host [enet] denied on interface [chars]	The VMPS has denied access for the given host MAC address to the specified interface.	dynamic_vlan	"No action is normally required. If you feel that " "the host should have been allowed access then the " "configuration on the VMPS should be checked."
VQCLIENT-2INITFAIL	2-Critical	Platform-specific VQP initialization failed. Quitting	An error occurred during initialization of the VQPC platform-specific code.	dynamic_vlan	LOG_STD_ACTION
VQCLIENT-2IPSOCK	2-Critical	Could not obtain IP socket	An error occurred when the system attempted to open an IP socket to the VMPS.	dynamic_vlan	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VQCLIENT2-PROCFAIL	2-Critical	Could not create process for VQP. Quitting	An error occurred while creating a process for the VQP client.	dynamic_vlan	LOG_STD_ACTION
VQCLIENT2-SHUTDOWN	2-Critical	Interface [chars] shutdown by VMPS	The VMPS has directed that the specified interface be shut down.	dynamic_vlan	"No action is normally required. If you feel that " "the port should not have been shut down then the " "configuration on the VMPS should be checked."
VQCLIENT2-TOOMANY	2-Critical	Interface [chars] shutdown by active host limit	The system has shut down the specified interface because too many hosts have requested access to that port.	dynamic_vlan	"To reactivate the port remove the excess hosts " "and issue a no shut command to the interface."
VQCLIENT3-IFNAME	3-Error	Invalid interface [chars] in response	The VMPS has sent an unsolicited response with an unknown interface name	dynamic_vlan	"Check the VMPS configuration."
VQCLIENT3-THROTTLE	3-Error	Throttling VLAN change on [chars]	An attempt was made to change the vlan assignment for the specified interface more often than once every 10 seconds. The vlan change is denied.	dynamic_vlan	"No action is normally required. If the message " "recurs check the VMPS configuration. Verify " "that unexpected hosts are not connected to " "the port."
VQCLIENT3-VLANNAME	3-Error	Invalid VLAN [chars] in response	The VMPS has specified a vlan name that is unknown to the switch.	dynamic_vlan	"Make sure that the vlan exists on the switch. " "Check the VMPS configuration."
VQCLIENT4-IPADDR	4-Warning	Main IP address on [chars] was deleted	-	dynamic_vlan	-
VQCLIENT7-DELETING	7-Debug	Freeing deleted saved responses	-	dynamic_vlan	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VQPCIENT-7-NEXISERV	7-Debug	Trying next VMPS %I	The system has lost connectivity with the current VMPS and is switching to the next server in its list.	dynamic_vlan	LOG_SID_DBG_ACTION
VQPCIENT-7-PROBE	7-Debug	Probing primary server %I	The system is trying to reestablish connectivity with the primary VMPS at the given IP address.	dynamic_vlan	LOG_SID_DBG_ACTION
VQPCIENT-7-RECONF	7-Debug	Reconfirming VMPS responses	The switch is reconfirming all responses with the VMPS	dynamic_vlan	LOG_SID_DBG_ACTION
VQPCIENT-7-STARTUP	7-Debug	Starting VQP client	-	dynamic_vlan	-
VQPCIENT-7-STOPPING	7-Debug	Stopping VQP client	-	dynamic_vlan	-
VRFS-3-SBINIT	3-Error	Error initializing [chars] subblock data structure. [chars]	Initialization of the specified subblock data structure could not be accomplished.	VRFSDDISCOMPONENT	LOG_STD_ACTION
VRFS-3-SBNOFN	3-Error	Missing [chars] subblock [chars] function for [chars]	Functions for distributing this subblock are missing from the image.	VRFSDDISCOMPONENT	LOG_STD_ACTION
VRRP-3-ERROR	3-Error	Internal error [chars]	An internal software error occurred.	fhrp:vrrp	LOG_STD_ACTION
VRRP-3-ERROR	3-Error	Internal error [chars]	An internal software error occurred.	fhrp:vrrp	LOG_STD_ACTION
VRRP-4-BADAUTH	4-Warning	Bad authentication from [node]group [dec] type [dec]	Two routers participating in VRRP disagree on authentication	vrrp	"Use the vrrp authentication command to repair the VRRP authentication\n\n discrepancy between the local system and the one whose IP address\n\n is reported."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VRRP4BADAUTHTYPE	4-Warning	Bad authentication from [node]group [dec] type [dec] expected [dec]	Two routers participating in VRRP disagree on the valid authentication type.	vrrp	"Use the vrrp authentication command to repair the VRRP authentication\n\ndiscrepancy between the local system and the one whose IP address\n\ is reported."
VRRP-4-CFG_WARN	4-Warning	[chars]	-	-	LOG_SID_NO_ACTION
VRRP-4-CFG_WARN	4-Warning	[chars]	-	-	LOG_SID_NO_ACTION
VRRP-4-WARN	4-Warning	Internal warning [chars]	An internal software warning occurred.	fhrp:vrrp	LOG_STD_ACTION
VRRP-4-WARN	4-Warning	Internal warning [chars]	An internal software warning occurred.	fhrp:vrrp	LOG_STD_ACTION
VRRP-6-INFO	6-Information	Internal info [chars]	An internal software information message occurred.	fhrp:vrrp	LOG_STD_ACTION
VRRP-6-INFO	6-Information	Internal info [chars]	An internal software information message occurred.	fhrp:vrrp	LOG_STD_ACTION
VRRP-6-STATE	6-Information	[chars]	The VRRP router has changed state.	-	LOG_SID_NO_ACTION
VRRP-6-STATE	6-Information	[chars]	The VRRP router has changed state.	-	LOG_SID_NO_ACTION
VRRP6STATECHANGE	6-Information	[chars] Grp [dec] state [chars] -> [chars]	The VRRP router has changed state	vrrp	LOG_SID_NO_ACTION
VRRS3ACCIFORKEFAIL	3-Error	Failed to start accounting process. Accounting-off records may not be sent.	Failed to create the accounting process.	fhrp	"Free up some memory."
VRRS-3-ERROR	3-Error	Internal error [chars]	An internal software error occurred.	fhrp:vrrs	LOG_STD_ACTION
VRRS-3-ERROR	3-Error	Internal error [chars]	An internal software error occurred.	fhrp:vrrs	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VRRS-4-WARN	4-Warning	Internal warning [chars]	An internal software warning occurred.	fhrp:vrrs	LOG_STD_ACTION
VRRS-4-WARN	4-Warning	Internal warning [chars]	An internal software warning occurred.	fhrp:vrrs	LOG_STD_ACTION
VRRS-6-INFO	6-Information	Internal info [chars]	An internal software information message occurred.	fhrp:vrrs	LOG_STD_ACTION
VRRS-6-INFO	6-Information	Internal info [chars]	An internal software information message occurred.	fhrp:vrrs	LOG_STD_ACTION
VRRS-6-STATE	6-Information	[chars]	The VRRS router has changed state.	-	LOG_SID_NO_ACTION
VRRS-6-STATE	6-Information	[chars]	The VRRS router has changed state.	-	LOG_SID_NO_ACTION
<del>VRRS-3-INIT</del> VSLP_ISSU3INCOMP	3-Error	VSLP ISSU client capability exchange result incompatible.	VSLP ISSU client capability exchange result incompatible	vslp	"show issu negotiated capability <Session_ID>"
VSLP_ISSU3-INIT	3-Error	VSLP ISSU client initialization failed at [chars] error [chars]	VSLP ISSU client could not be initialized this will cause catastrophic failure when ISSU upgrade or downgrade is performed.	vslp	LOG_SID_NO_ACTION
VSLP_ISSU3INTERNAL	3-Error	An internal error occurred: [chars]	An unexpected software error during the specified operation	vslp	LOG_SID_NO_ACTION
<del>VRRS-3-INIT</del> VSLP_INVALID_EVENT	3-Error	Got event [dec]:[dec]	The process was woken up with an invalid event	vslp	LOG_SID_NO_ACTION
VSLP_ISSU3ISSU_ERROR	3-Error	[chars] failed with error code [dec] for peer [enet]	ISSU API failed to do some operation for VSLP layer The message includes the error code from ISSU library	vslp	show issu fsm

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VSLP_ISSU3MSG_NOT_OK	3-Error	VSLP ISSU client message [chars] is not compatible	VSLP ISSU client received an incompatible message from the peer unit. Since the message is not compatible it cannot be processed by this unit	vslp	"show issu message group <client_id> and " "show issu session <client_id> and " "show issu negotiated version <session_id>"
VSLP_ISSU3NEGO_FAILED	3-Error	VSLP ISSU start nego session with peer [enet] with error code [chars]	The VSLP ISSU could not start its negotiation process.	vslp	"show issu fsm"
VSLP_ISSU3NULL_ENTRY	3-Error	Null [chars] entry in [chars]	A NULL entry was passed in the specified operation	vslp	LOG_SID_NO_ACTION
VSLP_ISSU3PROC_CREATE_FAILED	3-Error	Unable to create process \[chars]\	Unable to create the specified process because of unknown reasons	vslp	LOG_SID_NO_ACTION
VSLP_ISSU3QUEUE_CREATE_FAILED	3-Error	Unable to create watched queue \[chars]\	Unable to create the specified watched queue because of unknown reasons	vslp	LOG_SID_NO_ACTION
VSLP_ISSU3RX_BAD_INTERFACE	3-Error	Incorrect port [dec]/[dec] for received packet	An VSLP ISSU packet was received that has incorrect received packet info. This could mean either that a VSLP ISSU packet was received from an interface on which VSLP is not enabled. The packet was dropped	vslp	LOG_SID_NO_ACTION
VSLP_ISSU3RX_QUEUE_FAIL	3-Error	Unable to enqueue received packet for processing	An internal error occurred that prevented a packet from being enqueued to the packet processing queue for processing. The packet was dropped	vslp	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VSLP_ISSU-3-SEND_FAILED	3-Error	VSLP ISSU client failed to send a negotiation message	VSLP ISSU client could not send a session negotiation message to the peer. When there is a problem in the negotiation the peer switch unit can not be brought up as standby causing to have two active switches in the system.	vslp	"show issu session <client_id> and " "show issu negotiated version <session_id>"
VSLP_ISSU-3-SESSION	3-Error	VSLP ISSU client [chars]	VSLP ISSU client observed an error during a session negotiation with the peer unit. When there is a problem with the session the peer switch can not be brought up as standby causing to have two active switches in the system.	vslp	"show issu capability entries <client_id> and " "show issu session <client_id> and " "show issu negotiated capability <session_id>"
VSLP_ISSU-3-TRANSFORM	3-Error	VSLP ISSU client [chars] transform failed for [chars] message error [chars]	VSLP ISSU client could not transform the message. If the transmit transformation failed it means that the VSLP message can not be sent to the standby unit. If the receive transformation failed it means that the VSLP message can not be processed on the standby unit.	vslp	"show issu session <client_id> and " "show issu negotiated version <session_id>"
VSLP-2-VSL_DOWN	2-Critical	[chars]\n	VSL STATUS CHANGED to DOWN with more detail status	vsl	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VSLP-3-ICC_ERR	3-Error	[chars]	Failure during the ICC operation	cat6k-vs-infra	LOG_SID_NO_ACTION
VSLP-3-ISSU_ERROR	3-Error	[chars]	VSLP failed to do an ISSU operation	vslp	LOG_SID_NO_ACTION
VSLP-3-PKT	3-Error	VSLP packet error: [chars]	VSLP packet error for the reason described	vslp	LOG_SID_NO_ACTION
VSLP-3-PKT_CREATE	3-Error	Can't create packet: [chars]	VSLP packet can't be created due to the reason described	vslp	LOG_SID_NO_ACTION
VSLP-3-PKT_RX	3-Error	Can't process the received packet: [chars]	VSLP packet can't be processed due to the reason described	vslp	LOG_SID_NO_ACTION
VSLP-3-PKT_TX	3-Error	Can't send packet: [chars]	VSLP packet can't be sent due to the reason described	vslp	LOG_SID_NO_ACTION
VSLP-3-REGISTRY_ADD_ERR	3-Error	Failure in adding to [chars] registry	Could not add a function to the registry	cat6k-vs-infra	LOG_SID_NO_ACTION
VSLP-3-RRP_ERR_MSG	3-Error	[chars]	VSLP Role resolution protocol detected an error	cat6k-vs-infra	LOG_SID_NO_ACTION
<del>VSLP-3-RRP_INSTANCE_OUT_OF_BOUNDS</del>	3-Error	Instance value [dec] is outside the expected range	The instance value received is out of bounds	cat6k-vs-infra	LOG_SID_NO_ACTION
<del>VSLP-3-RRP_INVALID_INSTANCE</del>	3-Error	Instance value [dec] is invalid	The instance value corresponds to an invalid instance	cat6k-vs-infra	LOG_SID_NO_ACTION
<del>VSLP-3-RRP_NO_MEMORY_AVAILABLE</del>	3-Error	Instance:[dec] Peer:[dec]: No memory available for [chars]	VSLP could not obtain the memory it needs	cat6k-vs-infra	LOG_SID_NO_ACTION
<del>VSLP-3-RRP_PEER_NO_ERR</del>	3-Error	Instance:[dec] Peer:[dec]: Peer [chars]	RRP encountered an error associated with this peer	cat6k-vs-infra	LOG_SID_NO_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VSLP3RRP_INSTANCE_ERR	3-Error	Instance:[dec] Peer:[dec] Up:[dec] Valid:[dec] Switch:[dec] Role:[chars] PeerRole:[chars]: [chars]	An error occurred pertaining the instance and peer group specified	cat6k-vs-infra	LOG_SID_NO_ACTION
VSLP3RRP_PSLOT_ERR	3-Error	slot:[dec] pslot:[dec]	RRP detected difference in peer supervisor pslot	cat6k-vs-infra	LOG_SID_NO_ACTION
VSLP3RRP_RESERVED_PEER_ERR	3-Error	Instance:[dec] Peer:[dec]: Reserved peer [dec] [chars]	RRP detected an error related to reserved peer	cat6k-vs-infra	LOG_SID_NO_ACTION
VSLP3RRP_SESSION_ID_ERR	3-Error	Instance:[dec] Peer:[dec]: Session id mismatch. Expected [dec] got [dec]	VSLP Role Resolution protocol detected an session id mismatch	cat6k-vs-infra	LOG_SID_NO_ACTION
VSLP3RRP_SLOT_PORT_ERR	3-Error	Slot:[dec] Port:[dec]: [chars]	RRP detected an error related to a slot and port	cat6k-vs-infra	LOG_SID_NO_ACTION
VSLP3RRP_TIMER_CREATION_FAILED	3-Error	Instance:[dec] Peer:[dec]: Unable to create RRP timer	RRP timer creation failed for the particular instance and peer	vslp	LOG_SID_NO_ACTION
VSLP3RRP_UNEXPECTED_ROLE	3-Error	Unexpected roles. Local role = [chars] Peer role = [chars]	VSLP Role resolution protocol determined inconsistent role information	cat6k-vs-infra	LOG_SID_NO_ACTION
VSLP3RRP_UNKNOWN_VALUE_ERR	3-Error	[chars]: [dec]	VSLP Role resolution protocol encountered an unknown value	cat6k-vs-infra	LOG_SID_NO_ACTION
VSLP3RRP_WATCHED_BOOLEAN_FAILED	3-Error	Unable to create watched boolean \[chars]\	Unable to create the specified watched boolean due to unknown reasons	vslp	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VSLP_VSLPNSI_NAIDCAP	3-Error	Invalid capability [dec] for VSLP instance [dec]	A VSLP capability was requested that is beyond the current list of supported capabilities	vslp	LOG_SID_NO_ACTION
VSLP_VSLPNSI_ORN_CREATE	3-Error	Cannot create VSLP instance [dec]	Unable to create a VSLP instance for the switch id since it is not within the acceptable range	vslp	LOG_SID_NO_ACTION
VSLP_VSLPNSI_ORN_DESTROY	3-Error	Cannot destroy VSLP instance [dec]	Unable to destroy the given VSLP instance since it is not within the acceptable range	vslp	LOG_SID_NO_ACTION
VSLP_VSLPNSI_DOMAIN_MISMATCH	3-Error	Domain ID in probe packet from peer [dec] is not the same as local Domain ID [dec]. The packet was dropped.	Virtual switch domain id in probe packet from peer is not the same as the local domain id. The packet was dropped	vslp	"Investigate and correct this misconfiguration"
VSLP_VSLPNSI_LMP_REASON	3-Error	[chars]: [chars]	This message gives the reason for a link to leave LMP operational state	vslp	LOG_SID_NO_ACTION
VSLP_VSLPNSI_LMP_FLAGSET	3-Error	Incorrect flag value 0x[hec] on port [dec]/[dec]	This is an unexpected value for the flag field of a VSL link. This is due to an internal software error	vslp	"show vslp lmp summary and " "show vslp lmp fsm"
VSLP_VSLPNSI_FSM_INVALID_TIMER	3-Error	Invalid timer [dec] for port [dec]/[dec] in [chars] operation	A timer event happened but the timer type was invalid	vslp	LOG_SID_NO_ACTION
VSLP_VSLPNSI_FSM_NULL_CONTEXT	3-Error	NULL context for FSM action [chars]	An FSM action routine was invoked but with a NULL context argument	vslp	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VSIASLIMSMIMREDCOXT	3-Error	Invalid or NULL context for timer [dec] in [chars] operation	A timer event happened but the FSM infrastructure passed to the handler a context pointer that is currently not in use or is NULL	vslp	LOG_SID_NO_ACTION
VSIASLIMINVALIDROSEN	3-Error	Got event [dec]:[dec]	The process was woken up with an invalid event	vslp	LOG_SID_NO_ACTION
VSIASLIMPIMP_MAXGRS	3-Error	Cannot create more than [dec] LMP peer groups	For some reason the number of LMP peer groups has reached the maximum per LMP instance	vslp	LOG_SID_NO_ACTION
VSIASLIMPIMP_MAXPRS	3-Error	Cannot configure more than [dec] ports	Unable to configure LMP on a port because the maximum number of ports per LMP instance has been reached	vslp	LOG_SID_NO_ACTION
VSIASLIMP_PG_CREATEAL	3-Error	Unable to create PG [enet] for port [dec]/[dec]	-	-	-
VSIASLIMP_PG_GETIAL	3-Error	Unable to get PG [enet] for port [dec]/[dec]	-	-	-
VSIASLIMP_PG_NOSEN	3-Error	PG [enet]:[dec] should have [dec] links but none found	A link has left a peer group that seems to have more links but none were found	vslp	LOG_SID_NO_ACTION
VSIASLIMP_PG_NOCTRLINK	3-Error	No control link for preferred PG [dec]	A peer group has been set as the preferred PG but it has no control link	vslp	LOG_SID_NO_ACTION
VSIASLIMP_PG_OUTORANGE	3-Error	Peer group [dec] is out of range	A peer group has been passed to some API that is out of range	vslp	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VSLP3VSLPRXBDIRSTLV	3-Error	Bad first TLV [dec] in received packet on port [dec]/[dec]	-	-	-
VSLP3VSLPRXBDNRFACE	3-Error	Incorrect port [dec]/[dec] for received packet	An LMP packet was received that has incorrect received packet info. This could mean either that an LMP packet was received from an interface on which VSLP is not enabled. The packet was dropped	vslp	LOG_SID_NO_ACTION
VSLP3VSLMRXBDIVCNT	3-Error	Bad TLV count in received packet [dec]	-	-	-
VSLP3VSLMRXBDACMRICT	3-Error	Platform TLV rejected for received [chars] packet	One or more platform TLVs were rejected in the received packet. The packet was dropped	vslp	LOG_SID_NO_ACTION
VSLP3VSLPMPRXQHEFL	3-Error	Unable to enqueue received packet for processing	An internal error occurred that prevented a packet from being enqueued to the packet processing queue for processing. The packet was dropped	vslp	LOG_SID_NO_ACTION
VSLP3VSLPMPRXXCORM	3-Error	Failed to transform received [chars] packet	Failed to do ISSU transformation on the received packet. The packet was dropped	vslp	LOG_SID_NO_ACTION
VSLP3VSLPSPMESWICHID	3-Error	Switch id in probe packet is the same as the local switch id [dec]. The packet was dropped.	Switch id in probe packet from peer is the same as the local switch id. The packet was dropped	vslp	"Investigate and correct this misconfiguration"
VSLP3VSLPNULLENTRY	3-Error	Null [chars] entry in [chars] operation	A NULL entry was passed in the specified operation	vslp	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VSLP3-PROC_CREATE_FAIL	3-Error	Unable to create process \[chars]\	Unable to create the specified process because of unknown reasons	vslp	LOG_SID_NO_ACTION
VSLP3-QUEUE_CREATE_FAIL	3-Error	Unable to create watched queue \[chars]\	Unable to create the specified watched queue because of unknown reasons	vslp	LOG_SID_NO_ACTION
VSLP3-REGISTRY_ADD_FAIL	3-Error	[chars] registry addition failed	Failed to add to the the given registry during initialization	vslp	LOG_SID_NO_ACTION
VSLP3-THREAD_CREATE_FAIL	3-Error	tid [node]intvl [node] [chars]	VSLP tx thread creation failed for the specified reason	vslp	LOG_SID_NO_ACTION
VSLP3-THREAD_FAILURE	3-Error	tid [node] [chars]	General VSLP tx thread failure occurred for the specified reason	vslp	LOG_SID_NO_ACTION
VSLP4-ASIC_DUMP	4-Warning	[chars]	VSL physical link was up and role was not resolved in RRP	vsl	LOG_SID_NO_ACTION
VSLP4-VSLP_REMPT_TIMER	4-Warning	Preempt timer configured to [dec] minutes. Standby will takeover as active in [dec] minutes	-	-	-
VSLP5-RRP_PEER_DOWN	5-Notice	Communication to active peer went down. Triggering switchover...	Role resolution protocol got an indication that communication to active peer has gone down. This will in turn trigger a switchover	cat6k-vs-infra	LOG_SID_NO_ACTION
VSLP5-RRP_MSG	5-Notice	[chars]	Role resolution protocol event	cat6k-vs-infra	LOG_SID_NO_ACTION
VSLP5-RRP_NO_PEER	5-Notice	No VSLP peer found. Resolving role as Active	VSLP could not communicate with any peer. Hence continuing to boot up as active	cat6k-vs-infra	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VSLP5RRP_PEER_TIMEOUT	5-Notice	VSLP peer timer expired without detecting peer. Resolving role as Active	Role resolution protocol could not communicate with any peer Before peer timer expiry. Hence continuing to boot up as active	cat6k-vs-infra	LOG_SID_NO_ACTION
VSLP5RRP_PREEMPT	5-Notice	[chars] \n\tSwitch [node] Priority [node] Preempt [chars]\n \tSwitch [node] Priority [node] Preempt [chars]\n	Display preemption configuration	cat6k-vs-infra	LOG_SID_NO_ACTION
VSLP5RRP_PREEMPT_IGNORE	5-Notice	[chars]	Ignore preemption configuration due to unsaved configs	cat6k-vs-infra	LOG_SID_NO_ACTION
VSLP5RRP_ROLE_RESOLVED	5-Notice	Role resolved as [chars] by VSLP	Role resolution protocol communicated with peer and resolved role	cat6k-vs-infra	LOG_SID_NO_ACTION
VSLP5RRP_ROLE_CFG_CHG	5-Notice	Configured [chars] value is different from operational value.\n Change will take effect after config is saved and switch [dec] is reloaded.\n	Role resolution protocol configuration changes by user	cat6k-vs-infra	LOG_SID_NO_ACTION
VSLP5RRP_UNSAVED_CONFIG	5-Notice	Ignoring system reload since there are unsaved configurations.\n Please save the relevant configurations	Role resolution protocol got an indication that we need to reload the system due to role change from active to standby. But the box has some unsaved configurations which will be lost. Hence the user must save relevant configurations.	cat6k-vs-infra	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>VSLP</del> WRMEMPROGRES	5-Notice	Ignoring system reload since config save operation is in progress.\n Please wait till the configs are saved	Role resolution protocol got an indication that we need to reload the system due to role change from active to standby. Since the config save is in progress box will not be reloaded.	cat6k-vs-infra	LOG_SID_NO_ACTION
VSLP-5-VSL_UP	5-Notice	[chars]\n	VSL STATUS CHANGED to UP with more detail status	vsl	LOG_SID_NO_ACTION
VSLP-6-ACTIVE	6-Information	[chars]	Informational messages regarding the state of the Virtual Switch active supervisor	vslp	LOG_SID_NO_ACTION
VSLP-6-STANDBY	6-Information	[chars]	Informational messages regarding the state of the Virtual Switch standby supervisor	vslp	LOG_SID_NO_ACTION
<del>VICP</del> FRACB_MICO_MIE	3-Error	-	Malloc failed during VTCP create callback.	cpp-ucode	LOG_STD_ACTION
VICP4NO_L2_SUPPORT	4-Warning	[chars]: TCP ALG [chars] not supported under L2 switching	vTCP does not support layer 2 inspection for ALGs that require \n message buffering services	cpp-ucode	"Disable ALG for firewall or/and NAT for ALG\n" "or Convert to IP forwarding"
<del>VICP</del> MATCHALQERRR	2-Critical	Memory corruption is found on H.320 Primary Call Match Data Queue. Queue Size=[dec]	Failed to match an H.320 primary call for an incoming call due to memory corruption.	ios-voice	"Contact your technical support representative. Report the configuration\n\ and full text of the error message."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VSP3MATCH_QUEUE_ERR	2-Critical	Memory corruption is found on H.320 Primary Call Match Data Queue. Queue Size=[dec]	Failed to match an H.320 primary call for an incoming call due to memory corruption.	ios-voice	"Contact your technical support representative. Report the configuration\n\n and full text of the error message."
VSP3CAPABILITY_MISMATCH	3-Error	voice port [chars]: call connection id [0x[hec] 0x[hec] 0x[hec] 0x[hec]]	There was a capabilities mismatch between the two call legs.\n\n capabilities are negotiated between call legs for CODEC VAD and\n\n FAX rate.	ios-voice	"Check that the dial peer configuration is appropriate for the interface\n\n in question. Also check that and configuration on the interface is\n\n correct."
VSP3CAPABILITY_MISMATCH	3-Error	voice port [chars]: call connection id [0x[hec] 0x[hec] 0x[hec] 0x[hec]]	There was a capabilities mismatch between the two call legs.\n\n capabilities are negotiated between call legs for CODEC VAD and\n\n FAX rate.	ios-voice	"Check that the dial peer configuration is appropriate for the interface\n\n in question. Also check that and configuration on the interface is\n\n correct."
VSP3-DOCALLHISFAIL	3-Error	\nvtsp_do_call_history: [chars]	Allocate or insert an active VTSP call record into call history list failed.	ios-voice	"No action is required."
VSP3-DOCALLHISFAIL	3-Error	\nvtsp_do_call_history: [chars]	Allocate or insert an active VTSP call record into call history list failed.	ios-voice	"No action is required."
VSP3-DSP_TIMEOUT	3-Error	DSP timeout on channel [chars] event 0x[hec]: DSP ID=0x[hec]: [chars] call mode=[dec]	Timeout on DSP response.	ios-voice	"The DSP has been automatically reset. If problem persists contact" "your technical support representative"



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VTSP-3-DSP_TIMEOUT	3-Error	DSP timeout on channel [chars] event 0x[hec]: DSP ID=0x[hec]: [chars] call mode=[dec]	Timeout on DSP response.	ios-voice	"The DSP has been automatically reset. If problem persists contact" "your technical support representative"
VTSP-3-DSPALARM	3-Error	channel [chars] DSP ID 0x[hec]: status=0x[hec] message=0x[hec] text=[chars]	The DSP reported a fatal error. All calls on the DSP were dropped\n and a DSP reload was attempted.	ios-voice	"Verify that the DSP reloaded properly by attempting to place a call\n on the affected voice port. Contact your technical support\n representative include the full text of the error message."
VTSP-3-DSPALARM	3-Error	channel [chars] DSP ID 0x[hec]: status=0x[hec] message=0x[hec] text=[chars]	The DSP reported a fatal error. All calls on the DSP were dropped\n and a DSP reload was attempted.	ios-voice	"Verify that the DSP reloaded properly by attempting to place a call\n on the affected voice port. Contact your technical support\n representative include the full text of the error message."
VTSP-3-FSM_ERROR	3-Error	[chars]	Internal Finite State Machine Error.	ios-voice	"Contact your technical support representative include the full text of\n the error message."
VTSP-3-FSM_ERROR	3-Error	[chars]	Internal Finite State Machine Error.	ios-voice	"Contact your technical support representative include the full text of\n the error message."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VTSP-3-MSGSNDFAIL	3-Error	channel:[chars] DSP ID:0x[hec] Message ID:0x[hec]	A message could not be sent to the DSP. The call continued but may\n\ have experienced problems.	ios-voice	"Verify that the DSP is still functioning properly by attempting\n\ to place a call on the affected voice port. Contact your technical\n\ support representative include the full text of the error message."
VTSP-3-MSGSNDFAIL	3-Error	channel:[chars] DSP ID:0x[hec] Message ID:0x[hec]	A message could not be sent to the DSP. The call continued but may\n\ have experienced problems.	ios-voice	"Verify that the DSP is still functioning properly by attempting\n\ to place a call on the affected voice port. Contact your technical\n\ support representative include the full text of the error message."
VTSP-3-NOEVENT	3-Error	no free event structure available from [chars] for DSP message	There were no event structures remaining in the system pools to alert the\n\ router of a voice or signaling event.	ios-voice	"Check that the voice port for which the event was reported is\n\ still operational. If not clear the voice port."
VTSP-3-NOEVENT	3-Error	no free event structure available from [chars] for DSP message	There were no event structures remaining in the system pools to alert the\n\ router of a voice or signaling event.	ios-voice	"Check that the voice port for which the event was reported is\n\ still operational. If not clear the voice port."
VTSP-3-VTSP_BLOCK	3-Error	vtsp_call_block allocate failed	VTSP call block allocation failed.	ios-voice	"Add more memory"
VTSP-3-VTSP_BLOCK	3-Error	vtsp_call_block allocate failed	VTSP call block allocation failed.	ios-voice	"Add more memory"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
VTS/VTSPCALDC/ALHD	3-Error	VTSP call disconnect failed. channel id [chars] ret [dec]	VTSP call disconnect could not be successfully passed and it may result\n\n hung calls.	ios-voice	"Contact your technical support representative. Report the configuration\n\n and full text of the error message."
VTS/VTSPCALDC/ALHD	3-Error	VTSP call disconnect failed. channel id [chars] ret [dec]	VTSP call disconnect could not be successfully passed and it may result\n\n hung calls.	ios-voice	"Contact your technical support representative. Report the configuration\n\n and full text of the error message."
VTS/VTSPCALN/CHUNK	3-Error	VTSP callInfo chunk creation failed.	Creation of VTSP callInfo chunk failed due to lack of memory.	voice-sig-digital	"Add more memory."
VTS/VTSPCALN/CHUNK	3-Error	VTSP callInfo chunk creation failed.	Creation of VTSP callInfo chunk failed due to lack of memory.	voice-sig-digital	"Add more memory."
VTSP-3-VTSP_DB_ERR	3-Error	vtsp_call_block database error	Internal VTSP call block database error. This message represents an internal software fault and may manifest itself as dropped or hung calls.	ios-voice	"Contact your technical support representative include the full text of\n\n the error message."
VTSP-3-VTSP_DB_ERR	3-Error	vtsp_call_block database error	Internal VTSP call block database error. This message represents an internal software fault and may manifest itself as dropped or hung calls.	ios-voice	"Contact your technical support representative include the full text of\n\n the error message."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VIS3-VISPHARN- <del>ALD</del>	3-Error	Call hairpinning failed. cdb 0x[hec] dst_cdb 0x[hec] dst_call_id [dec]	A DSP-less call could not be hairpinned.	ios-voice	"Under heavy traffic this failure may happen because no TDM resources were\n\available. Contact your technical support representative include the full text of the error message."
VIS3-VISPHARN- <del>ALD</del>	3-Error	Call hairpinning failed. cdb 0x[hec] dst_cdb 0x[hec] dst_call_id [dec]	A DSP-less call could not be hairpinned.	ios-voice	"Under heavy traffic this failure may happen because no TDM resources were\n\available. Contact your technical support representative include the full text of the error message."
VIS3-VISPHARN- <del>OC</del> SB	3-Error	Call can't be hairpinned. cdb 0x[hec] dst_cdb 0x[hec] dst_call_id [dec]	A DSP-less call could not be hairpinned.	ios-voice	"Check the dial-peer configuration."
VIS3-VISPHARN- <del>OC</del> SB	3-Error	Call can't be hairpinned. cdb 0x[hec] dst_cdb 0x[hec] dst_call_id [dec]	A DSP-less call could not be hairpinned.	ios-voice	"Check the dial-peer configuration."
VISP3-VISP_HAIRPINN	3-Error	hairpin peer cdb does not exist cdb 0x[hec] dst_call_id [dec]	A hairpin call setup failed because the other call leg does not exist.	ios-voice	"Contact your technical support representative. Report the configuration and the full text of the error message."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VISP3-VTSP_HAIRPIN	3-Error	hairpin peer cdb does not exist cdb 0x[hec] dst_call_id [dec]	A hairpin call setup failed because the other call leg does not exist.	ios-voice	"Contact your technical support representative. Report the configuration and the full text of the error message."
VISP4FSM_BAD_EVENT	4-Warning	Invalid FSM Input on channel [chars]: state=[chars] event=[dec]	Internal state machine illegal input. This message represents an internal software fault and may manifest itself as dropped or hung calls.	ios-voice	"Contact your field service representative if indication is coincident " "with dropped or hung calls."
VISP4FSM_BAD_EVENT	4-Warning	Invalid FSM Input on channel [chars]: state=[chars] event=[dec]	Internal state machine illegal input. This message represents an internal software fault and may manifest itself as dropped or hung calls.	ios-voice	"Contact your field service representative if indication is coincident " "with dropped or hung calls."
VISP4VTSP_PLAR_TIE_FAILED	4-Warning	VTSP connection plar tie set up failed. channel id [chars] cause [dec]	Connection plar tie set up failed for non-normal reason	ios-voice	"Contact your technical support representative. Report the configuration\n\n and full text of the error message."
VISP4VTSP_PLAR_TIE_FAILED	4-Warning	VTSP connection plar tie set up failed. channel id [chars] cause [dec]	Connection plar tie set up failed for non-normal reason	ios-voice	"Contact your technical support representative. Report the configuration\n\n and full text of the error message."
VISP6LOG_DURATION_EXCEEDED	6-Information	Long Duration Call is detected [chars]\n	The call is active for configured duration of long call	ios-voice	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>VN</del> LONG_DURATION_CALL_DETECTED	6-Information	Long Duration Call is detected [chars]\n	The call is active for configured duration of long call	ios-voice	LOG_STD_ACTION
<del>VN</del> UNKNOWN_EXTERNAL_AGENT_ID	6-Information	Request to reset an unknown external agent ID [dec] attempted.	A request to reset an external agent eg H323 Gatekeeper or MGCP CA etc	ios-voice	LOG_STD_ACTION
<del>VN</del> UNKNOWN_EXTERNAL_AGENT_ID	6-Information	Request to reset an unknown external agent ID [dec] attempted.	A request to reset an external agent eg H323 Gatekeeper or MGCP CA etc	ios-voice	LOG_STD_ACTION
VUDIINCONSISTENT_VUDI	3-Error	[serial number: [chars]] [vUDI: [chars]] [chars]	vUDI inconsistency is detected between the license file in this VM and nvramp configuration	virt-infra	LOG_SID_NO_ACTION
VUDIABNORMAL_EVENT	4-Warning	[serial number: [chars]] [vUDI: [chars]] [chars]	Abnormal vUDI condition occurs. vUDI subsystem is not working under normal flow	virt-infra	LOG_SID_NO_ACTION
VUDI-6-EVENT	6-Information	[serial number: [chars]] [vUDI: [chars]] [chars]	Normal vUDI event in system initialization	virt-infra	LOG_SID_NO_ACTION
VUDI6UPGRADE_ERROR	6-Information	Product upgrade detected. Unable to determine previous product id - Defaulting to [chars] for licensing	Upgrade vUDI error in system initialization	virt-infra	LOG_SID_SHIP_ACTION
VUDI6UPGRADE_EVENT	6-Information	Product upgrade detected. Using previous product id [chars] for licensing	Upgrade vUDI event in system initialization	virt-infra	LOG_SID_NO_ACTION
<del>VN</del> CINCO_ADDRESS_LOOKUP_ERROR	3-Error	VXE Cinco interface: [chars] address [chars] to linux [chars] failed with error [dec]	The interface IP address program to kernel interface failed.. BinOS application which need IOSd IP address may not work.	picasso-infra	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>VXE_CLOUD_HA3DOWN</del>	6-Information	VXE Cinco interface: [chars] address [chars] to linux [chars] not programmed for vrf_id [dec]	The interface IP address program to kernel interface not programmed.. BinOS application should only use global IP address for now.	-	-
VXE_CLOUD_HA3FAILED	3-Error	VXE Cloud HA BFD state transitioned [chars] node [node]event [chars] failed	The BFD state transitioned but failed to perform route replacement	vxe-iosd-infra	LOG_STD_ACTION
VXE_CLOUD_HA3INIT	3-Error	VXE Cloud HA [chars] failed	VXE Cloud HA initialization failure	vxe-iosd-infra	LOG_STD_ACTION
<del>VXE_CLOUD_HA3NOICFG</del>	4-Warning	VXE Cloud HA BFD is enabled but [chars] node [node]not fully configured flags=0x[hec]	The BFD state transitioned but not all Cloud parameters were configured	vxe-iosd-infra	LOG_SID_NO_ACTION
<del>VXE_CLOUD_HA3DOWN</del>	6-Information	VXE BFD peer [node]configuration [chars] from [chars]	The BFD configuration was removed while cloud HA is still configured	vxe-iosd-infra	LOG_SID_NO_ACTION
<del>VXE_CLOUD_HA3DOWN</del>	6-Information	VXE BFD peer [chars] configuration [chars] from [chars]	The BFD configuration was removed while cloud HA is still configured	vxe-iosd-infra	LOG_SID_NO_ACTION
<del>VXE_CLOUD_HA3DOWN</del>	6-Information	VXE BFD peer [node]interface [chars] transitioned to down	The BFD interface transitioned to down triggering a VXE Cloud HA event.	vxe-iosd-infra	LOG_SID_NO_ACTION
VXE_CLOUD_HA3SUCCESS	6-Information	VXE Cloud HA BFD state transitioned [chars] node [node]event [chars] successful	The BFD state transitioned and successful performed the route replacement	vxe-iosd-infra	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>VXCD01B1H1G1A1R1D1A1E</del>	4-Warning	Failed to create header and payload for metering request with role credentials %u	-	-	-
<del>VXCD01B1H1G1A1E</del>	4-Warning	Could not initialize metering HTTP	-	-	-
<del>VXCD01B1H1G1A1S1A1E</del>	4-Warning	HTTP API Failure posting metering data failed with api_status: [dec]!	-	-	-
<del>VXCD01B1H1G1A1Q1S1A1E</del>	4-Warning	AWS httpc_send_request failed [hex]\nURL=[chars]\n	-	-	-
<del>VXCD01B1H1G1A1R1S1A1E</del>	4-Warning	HTTP error posting metering data with status code: [dec] and response data: [chars]	-	-	-
<del>VXCD01B1H1G1A1D1A1E</del>	4-Warning	Could not open data file in role credentials[dec]: [chars]	-	-	-
<del>VXCD01B1H1G1A1G1R1D1A1E</del>	4-Warning	HTTP API Failure getting role name	-	-	-
<del>VXCD01B1H1G1A1G1R1D1A1S1A1E</del>	4-Warning	HTTP error getting role name: [dec]	-	-	-
<del>VXCD01B1H1G1A1H1A1D1A1E</del>	4-Warning	Could not open header file in role credentials[dec]: [chars]	-	-	-
<del>VXCD01B1H1G1A1Q1A1D1A1E</del>	4-Warning	Could not create request payload	-	-	-
<del>VXCD01B1H1G1A1R1C1R1D1A1E</del>	4-Warning	HTTP API Failure getting role credentials with api status: [dec]	-	-	-



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>VFCODMHCRCRHSRLE</del>	4-Warning	HTTP API Failure getting role credentials with api status: [dec] and response data: [chars]	-	-	-
<del>VFCODMHCRCRHLLE</del>	4-Warning	Could not open metering url in role credentials[dec]: [chars]	-	-	-
<del>VFCODMACEFHCHUT</del>	3-Error	Unexpected read value of desired throughput - [dec] kbps	-	-	-
<del>VFCODMHCRCRHSRLE</del>	4-Warning	Pay-as-you-goPAYG is not supported in controller mode.You will be billed hourly as long as this VM is up.To Prevent this Either switch to Auto mode where PAYG is supported or switch to a BYOL instance	-	-	-
<del>VFCODMHCRCRHSRLE</del>	6-Information	System being booted in [chars] mode	-	-	-
<del>VFCODMHCRCRHSRLE</del>	3-Error	Configuration failed for Metering Service	-	csr1k-cloud	-
<del>VFCODMHCRCRHSRLE</del>	4-Warning	[chars]	-	-	-
<del>VFCODMHCRCRHSRLE</del>	4-Warning	[chars]	-	-	-
<del>VFCODMHCRCRHSRLE</del>	4-Warning	[chars]	-	-	-
<del>VFCODMHCRCRHSRLE</del>	4-Warning	Failed to set partial hr gbytes: [chars] with error: [dec]	-	-	-
<del>VFCODMHCRCRHSRLE</del>	4-Warning	Set persistent failed to set out of compliance [chars] hrs with error: [dec]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>VACODMHEGPNFCND</del>	4-Warning	Match not found. Variant is: [chars]\n	-	-	-
<del>VACODMHEGCMEN</del>	6-Information	[chars]	-	-	-
<del>VACODMHEGTCOME</del>	6-Information	[chars]	-	-	-
<del>VACODMHEGPNCHSO</del>	6-Information	You have outstanding metering charges from a previous boot! We will try to restore your compliance in the next hour! You have been out-of-compliance for [node]hours! Throughput will be restricted after [node]hours!	-	-	-
<del>VACODMHEGPNRPAHE</del>	6-Information	[chars]	-	-	-
<del>VACODMHEGPNRCAHE</del>	6-Information	[chars]	-	-	-
<del>VACODMHEGPNRUC</del>	6-Information	Partial hour usage from previous boot will be treated as out-of-compliance until we've been able to report it. The partial hour value has been added to any outstanding OOC value which is now: [node]l. We will try to report this to AWS in the next hour to restore compliance!	-	-	-
<del>VACODMHEGPNIME</del>	6-Information	[chars]	-	-	-
<del>VAMONURRCHAD</del>	3-Error	Configuration of memory failed.	An error occurred when memory configuration was attempted.	iosxe-csl	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>VEMMONPROBUEAD</del>	3-Error	Memory upgrade setup failed. Memory upgrade operations may not be successful.	An error occurred when licensing tried to setup the memory upgrade	iosxe-csl	-
<del>VEMHNGONGIAED</del>	3-Error	Configuration failed.Failed to initialize metering service Falling back to limited throughput	Failed to initialize metering service	iosxe-csl	-
<del>VERELOADUDIFACE</del>	6-Information	Smart License Authorization Code is not already installed on the device. vManage UUID will be used as SN in license UDI for vManage HSeck9 management. System is about to reload to accommodate the UDI change. This is an expected reload by design. No action is required from the user	If Smart License Authorization Code is not installed prior to the release where vManage starts managing HSeck9 then the device will use vManage UUID as SN in license UDI since vManage is not aware of platform SN. Reload is required since the platform returns device UDI to infra initially UDI is cached and cannot be changed dynamically and later determines UUID	csr1kv-csl	-
<del>VETROGPELOWRIGPT</del>	2-Critical	System throughput set to low default level 1000 kbps system performance can be severely impacted. Please install a valid license configure the boot level and reload to switch to a higher throughput	No valid Active license	iosxe-csl	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>VETROGHRUCRFBARD</del>	2-Critical	Grace period has expired. System throughput set to default level [dec]00 kbps system performance can be severely impacted. Please install a valid license to configure a higher throughput	No valid license installed. Register with smart account and request a license using 'platform hardware throughput level MB <>' CLI	csr1kv-csl	-
<del>VETROGHRUCRFBAD</del>	3-Error	Configuration failed. Installed license does not support the throughput level. Please install the valid license	An error occurred when the throughput configuration was attempted.	-	-
<del>VETROGHRUCRFBAD</del>	3-Error	The EULA has to be accepted prior to throughput configuration.	Users need to accept EULA to activate the license	iosxe-csl	"Accept EULA for throughput license"
<del>VETROGHRUCRFBAD</del>	3-Error	Throughput level was not set or an invalid throughput level was selected.	The configured throughput level is unknown	iosxe-csl	-
<del>VETROGHRUCRFBAD</del>	3-Error	Memory license can only be used in premium level. Please configure license boot level to premium	Users has configured extra memory but CSR boots up in the level that does not support memory licenses.	iosxe-csl	-
<del>VETROGHRUCRFBAD</del>	3-Error	The transition from smart licensing mode to CSL mode needs a reload	We don't support the transition from smart licensing mode to CSL mode on the fly. A reload is required in this case	iosxe-csl	-
<del>VETROGHRUCRFBAD</del>	3-Error	Throughput upgrade license set up failed	An error occurred when setting up the throughput upgrade licenses.	iosxe-csl	-
<del>VETROGHRUCRFBAD</del>	6-Information	Autoscale evaluation period has expired	Autoscale evaluation period has expired.	csr1kv-csl	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>VXFR0001SR1EVALN</del>	6-Information	System is in feature restricted mode due to evaluation license expiry. Configuration CLIs have been blocked. nvram:startup-config is write protected read-only.	System is in feature restricted mode due to evaluation license expiry. Configuration CLIs have been blocked. nvram:startup-config is write protected read-only.	csr1kv-csl	-
<del>VXFR0001SR1COMM</del>	6-Information	System is in feature restricted mode due to communication fault to license server. Configuration CLIs have been blocked. nvram:startup-config is write protected read-only.	System is in feature restricted mode due to communication fault to license server. Configuration CLIs have been blocked. nvram:startup-config is write protected read-only.	iosxe-csl	-
<del>VXFR0001SR1LISE</del>	6-Information	System is in feature restricted mode due to license expiry. Configuration CLIs have been blocked. nvram:startup-config is write protected read-only.	System is in feature restricted mode due to license expiry. Configuration CLIs have been blocked. nvram:startup-config is write protected read-only.	iosxe-csl	-
<del>VXFR0001SR1SL</del>	6-Information	Transition to Smart license mode if there were Active CSL licenses prior to the transition please convert them to smart licenses	Transition to Smart license mode if there were Active CSL licenses prior to the transition please convert them to smart licenses	iosxe-csl	-
<del>VXFR0001SR1EVAL</del>	6-Information	Extended evaluation period expired	Extended 90 day evaluation period expired.	csr1kv-csl	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>VXERCPENDEVAL</del>	6-Information	Entering extended evaluation period	System running configured features in extended 90 day evaluation period which begins immediately after standard 90 day smart agent eval expires.	csr1kv-csl	-
<del>VXETHRUGHLEVEL</del>	6-Information	Throughput level has been set to [dec]00 kbps	Throughput level has been set to a number	iosxe-csl	-
<del>VXERCPENDEVAL</del>	6-Information	Lower throughput is chosen because of the higher priority base license	If there is no configuration or the configuration could not be met premium has higher priority than advance and than standard.	iosxe-csl	-
<del>VXETHRUGHLEVEL</del>	6-Information	Grace period will expire in [dec] days and system throughput will be set to default level [dec]00kbps on expiration so system performance can be severely impacted. Valid license must be installed to avoid throughput being throttled.	System throughput will be set to default level on expiration of grace period and system performance can be severely impacted. Valid license must be installed to avoid throughput being throttled.	csr1kv-csl	-
VXE_VNIC_IF3HOT_FAIL	3-Error	vNIC ethernet hot processing failed - [chars]	vNIC hot add or remove event processing failed.	vxe-iosd-infra	LOG_STD_ACTION
<del>VXE_VNIC_IF3HOT_FAIL</del>	3-Error	VXE vNIC interface command: [chars] failed: [dec] for [chars]	The vNIC ethernet interface subsystem has failed to communicate with the infrastructure for port Configuration of vNIC ethernet.	vxe-iosd-infra	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VXE_VNIC_ETHERN_ERR	3-Error	Duplicate mac address in the VXE vNIC interface persistent name table: [enet]	There are two vNIC configured with the same mac address. This could cause inconsistency with the interface persistent.	vxe-iosd-infra	LOG_STD_ACTION
VXE_VNIC_ETHERN_ERR	3-Error	vNIC ethernet [chars] process creation failed	Can not create IOS process for vNIC ethernet statistics	vxe-iosd-infra	LOG_STD_ACTION
VXE_VNIC_ETHERN_WARN	4-Warning	Interface with address [chars] using deprecated [chars] driver.	Interfaces using an deprecated driver will not be supported in the next release.	csr1kv-ethernet	LOG_STD_ACTION
VXE_VNIC_ETHERN_WARN	4-Warning	Ignoring interface with address [chars] using unsupported [chars] driver.	Interfaces using an unsupported driver will not be configured.	csr1kv-ethernet	LOG_STD_ACTION
VXE_VNIC_ETHERN_WARN	4-Warning	Address [enet] previously used for [chars] interface configuration not restored.	An interface was added to the system using the same MAC address but different device driver so the previous interface configuration is lost.	csr1kv-ethernet	LOG_STD_ACTION
VXE_VNIC_ETHERN_WARN	4-Warning	Unable to assign vNIC unit number to interface with address [enet]. All vNIC unit numbers have been assigned.	All vNIC unit numbers have been assigned and no more vNICs may be added.	vxe-iosd-infra	LOG_STD_ACTION
VXE_VNIC_ETHERN_WARN	4-Warning	Unable to assign vNIC unit number to interface with address [enet]. Reload to re-use reserved unit numbers.	Unit numbers for previously removed vNICs are being reserved for re-use if the vNICs are re-added. Reloading the system should allow the new vNIC to be assigned a unit number.	vxe-iosd-infra	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
VENR/4/SP/CLD/INF	4-Warning	Router's cloud metadata based instance id changed from [chars] to [chars]	Router's instance id is changed so it may trigger UDI invalidation.	csr1k-cloud	LOG_STD_ACTION
VENR/5/VG/ICN/WARN	5-Notice	VXE vNIC interface: [chars] disabled due to the expired license	The vNIC ethernet interface disabled due to expired license.	vxe-iosd-infra	LOG_STD_ACTION
VENR/6/INF/CHS/INF	6-Information	Address [enet] previously used for [chars] interface configuration restored.	An interface was added to the system using the same MAC address and device driver so the previous interface configuration is restored.	csr1kv-ethernet	LOG_STD_ACTION
VENR/6/INF/CONF/INF	6-Information	Configuring ring entries failed	An error occurred when the ring size configuration was attempted.	ultra-ethernet	LOG_STD_ACTION
VENR/6/INF/UID/INF	6-Information	Router UUID changed from [chars] to [chars]	Router UUID is changed so persistent interface data is not used.	ultra-ethernet	LOG_STD_ACTION
VENR/6/INF/UID/INF	6-Information	Router has invalid or no UUID	Router UUID is invalid or not preset persistent interface data is not used.	ultra-ethernet	LOG_STD_ACTION
WANHY/4/WAN/ALARM	4-Warning	[chars]: [chars] [chars]	The specified WANPHY Alarm has been declared or cleared.	c7600-es-platform	"Recommended action is to repair the source of the alarm."
WRM/3/ERR/CHKSUM	3-Error	[chars] image checksum mismatch.	The checksum of the image in memory is different from the expected \n\ checksum	os	"Check whether the image file is complete and uncorrupted"
WRM/3/ERR/CHKSUM	3-Error	[chars] image checksum mismatch.	The checksum of the image in memory is different from the expected \n\ checksum	os	"Check whether the image file is complete and uncorrupted"



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
<del>WARMUPGRADE3COMPRESSION</del>	3-Error	Image file decompression failure.	Warm upgrade could not decompress the image file	os	"Check whether the image file is complete and uncorrupted"
<del>WARMUPGRADE3COMPRESSION</del>	3-Error	Image file decompression failure.	Warm upgrade could not decompress the image file	os	"Check whether the image file is complete and uncorrupted"
WARMUPGRADE3FILE	3-Error	Image file open/read failure.	Warm upgrade could not open or read from the image file specified	os	"Check whether the specified image is present at the desired location " "and has the required read permissions. If the location is remote " "check whether the connectivity is there."
WARMUPGRADE3FILE	3-Error	Image file open/read failure.	Warm upgrade could not open or read from the image file specified	os	"Check whether the specified image is present at the desired location " "and has the required read permissions. If the location is remote " "check whether the connectivity is there."
<del>WARMUPGRADE3FORMAT</del>	3-Error	Unknown image file format.	Warm upgrade could not recognize the format of the image file	os	"Check whether the specified image is a valid IOS executable in\n\n a supported format. Check release notes for supported formats"
<del>WARMUPGRADE3FORMAT</del>	3-Error	Unknown image file format.	Warm upgrade could not recognize the format of the image file	os	"Check whether the specified image is a valid IOS executable in\n\n a supported format. Check release notes for supported formats"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
WARMUPGRADE3SIZE	3-Error	[chars] image size mismatch.	The size of the image in memory is different from the expected size	os	"Check whether the image file is complete and uncorrupted"
WARMUPGRADE3SIZE	3-Error	[chars] image size mismatch.	The size of the image in memory is different from the expected size	os	"Check whether the image file is complete and uncorrupted"
WARNING4OF_AGENT	4-Warning	ERRMSG_NOFLAGS	-	-	-
WARNING4OF_AGENT	4-Warning	ERRMSG_NOFLAGS	-	-	-
WBMISCF4LINK_HRCR	4-Warning	[chars]	error in Gige link state update protocol	cmts-vpa	LOG_STD_ACTION
WCCP-1-SERVICELIST	1-Alert	Failed to derive service [chars][chars][chars] from service-list [chars]	The WCCP Access Control List used to define the specified closed service has been modified and can no longer be used to create the service. The service has been marked as inactive. Either change the configuration to an Open service or update the ACL to correctly identify the desired service	wccp	"Update the service-list ACL to correctly define the desired service"
WCCP-1-SERVICELIST	1-Alert	Failed to derive service [chars][chars][chars] from service-list [chars]	The WCCP Access Control List used to define the specified closed service has been modified and can no longer be used to create the service. The service has been marked as inactive. Either change the configuration to an Open service or update the ACL to correctly identify the desired service	wccp	"Update the service-list ACL to correctly define the desired service"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
WCCP-1-SERVICELOST	1-Alert	Service [chars][chars][chars] lost on WCCP client [chars]	WCCP has lost the service associated the specified WCCP client	wccp	"Verify the operation of the specified WCCP client"
WCCP-1-SERVICELOST	1-Alert	Service [chars][chars][chars] lost on WCCP client [chars]	WCCP has lost the service associated the specified WCCP client	wccp	"Verify the operation of the specified WCCP client"
WCCP-3-BADACE	3-Error	Service [chars][chars][chars] invalid access-list entry seq:[dec] reason:[chars]	-	-	-
WCCP-3-BADACE	3-Error	Service [chars][chars][chars] invalid access-list entry seq:[dec] reason:[chars]	-	-	-
WCCP-3-CAP_API_DEF	3-Error	Failed to set WCCP platform parameter defaults 0x[node][chars]	The platform failed to set the WCCP platform parameter defaults.	wccp	LOG_STD_ACTION
WCCP-3-CAP_API_DEF	3-Error	Failed to set WCCP platform parameter defaults 0x[node][chars]	The platform failed to set the WCCP platform parameter defaults.	wccp	LOG_STD_ACTION
WCCP-3-CAP_API_GET	3-Error	Failed to get WCCP platform parameter [node][chars]	The platform failed to read a WCCP platform parameter.	wccp	LOG_STD_ACTION
WCCP-3-CAP_API_GET	3-Error	Failed to get WCCP platform parameter [node][chars]	The platform failed to read a WCCP platform parameter.	wccp	LOG_STD_ACTION
WCCP-3-CAP_API_INI	3-Error	Failed to initialize WCCP platform parameter %u	Initialization of a WCCP platform parameter failed.	wccp	LOG_STD_ACTION
WCCP-3-CAP_API_INI	3-Error	Failed to initialize WCCP platform parameter %u	Initialization of a WCCP platform parameter failed.	wccp	LOG_STD_ACTION

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
WCCP-3-CAP_API_SET	3-Error	Failed to set WCCP platform parameter [node]to [node][chars]	The platform failed to modify a WCCP platform parameter.	wccp	LOG_STD_ACTION
WCCP-3-CAP_API_SET	3-Error	Failed to set WCCP platform parameter [node]to [node][chars]	The platform failed to modify a WCCP platform parameter.	wccp	LOG_STD_ACTION
WCCP-3-MASKACL_MERGE	3-Error	Mask/ACL merge failed for the service [chars] VRF [chars] service Id [dec]	An internal error indicating that the Mask/ACL merge has failed	wccp	LOG_STD_ACTION
WCCP-3-MASKACL_MERGE	3-Error	Mask/ACL merge failed for the service [chars] VRF [chars] service Id [dec]	An internal error indicating that the Mask/ACL merge has failed	wccp	LOG_STD_ACTION
WCCP-3-SBADDFAIL	3-Error	Unable to add [chars] WCCP subblock on interface [chars]	An internal error indicating that the WCCP process was unable to attach interface specific service information	wccp	"Ensure that there is enough memory available for all processes"
WCCP-3-SBADDFAIL	3-Error	Unable to add [chars] WCCP subblock on interface [chars]	An internal error indicating that the WCCP process was unable to attach interface specific service information	wccp	"Ensure that there is enough memory available for all processes"
WCCP-3-SBCREATEFAIL	3-Error	Unable to allocate [chars] WCCP subblock on interface [chars]	An internal error indicating that the WCCP process was unable to allocate memory to hold interface specific service information	wccp	"Ensure that there is enough memory available for all processes"
WCCP-3-SBCREATEFAIL	3-Error	Unable to allocate [chars] WCCP subblock on interface [chars]	An internal error indicating that the WCCP process was unable to allocate memory to hold interface specific service information	wccp	"Ensure that there is enough memory available for all processes"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
WCCP-3-SBINIT	3-Error	Error initializing [chars] WCCP subblock data structure. [chars]	Initialization of the specified subblock data structure could not be accomplished.	wccp	LOG_STD_ACTION
WCCP-3-SBINIT	3-Error	Error initializing [chars] WCCP subblock data structure. [chars]	Initialization of the specified subblock data structure could not be accomplished.	wccp	LOG_STD_ACTION
WCCP-3-SIFIGNORED	3-Error	source-interface [chars] ignored [chars]	The configured source interface has been ignored whilst determining the WCCP router ID.	wccp	"Use the indicated reason message to determine why WCCP refused to use " "the configured interface as its router ID."
WCCP-3-SIFIGNORED	3-Error	source-interface [chars] ignored [chars]	The configured source interface has been ignored whilst determining the WCCP router ID.	wccp	"Use the indicated reason message to determine why WCCP refused to use " "the configured interface as its router ID."
WCCP-5-SERVICEFOUND	5-Notice	Service [chars][chars][chars] acquired on WCCP client [chars]	WCCP has acquired a service on the specified WCCP client	wccp	LOG_SID_NO_ACTION
WCCP-5-SERVICEFOUND	5-Notice	Service [chars][chars][chars] acquired on WCCP client [chars]	WCCP has acquired a service on the specified WCCP client	wccp	LOG_SID_NO_ACTION
WCCP-5-SERVICEMISMATCH	5-Notice	Service [chars][chars][chars] mismatched on WCCP client [chars]	WCCP has rejected a mismatched service on the specified WCCP client	wccp	"Amend the WCCP service definition"
WCCP-5-SERVICEMISMATCH	5-Notice	Service [chars][chars][chars] mismatched on WCCP client [chars]	WCCP has rejected a mismatched service on the specified WCCP client	wccp	"Amend the WCCP service definition"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
WCMWRPCSESSION_RECV_FAIL	3-Error	WCM RF proxy IPC session receive [chars] fails reason [chars]	IPC session receive end encounters failure	polaris-infra	LOG_STD_ACTION
WCMWRPCSESSION_REG_FAIL	3-Error	WCM RF proxy IPC session registration fails with error code 0x[hec]	IPC session registration failure	polaris-infra	LOG_STD_ACTION
WCMWRPCSESSION_SEND_FAIL	3-Error	WCM RF proxy IPC session send [chars] fails - error code 0x[hec]	IPC session transmit side encounters failure	polaris-infra	LOG_STD_ACTION
WCMWRPCSIDLIB_INIT_FAIL	3-Error	WCM RF proxy TDL Library initialization failed.rc=[dec]	TDL library initialization failure	polaris-infra	LOG_STD_ACTION
WCMWRPCRELAY_NO	6-Information	WCM RF proxy relay RF information: type 0x[hec] value 0x[hec]	Display the content that WCM RF proxy relays to WCM	polaris-infra	LOG_STD_ACTION
WCMWRPCSESSION_STATUS	6-Information	WCM RF proxy IPC session status: [chars]	Display the WCM RF proxy IPC session status information	polaris-infra	LOG_STD_ACTION
WCMWRPCINVALID_CLIENT_ID	3-Error	WCM RF proxy received RF [chars] callback with wrong client ID [dec]	IOS RF infrastructure callback client ID argument is invalid	polaris-infra	LOG_STD_ACTION
WCMWRPCRF_ADD_CLIENT_FAIL	3-Error	WCM RF proxy RF client add fails return code=%u	IOS RF infrastructure add as RF client fails	polaris-infra	LOG_STD_ACTION
WEBEXSGW-3-ERROR	3-Error	[chars]	This message indicates the jwe decryption failure / json parsing failure	-	LOG_SID_NO_ACTION
WEBEXSGW-3-ERROR	3-Error	[chars]	This message indicates the jwe decryption failure / json parsing failure	-	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
WEBEXSGW5FAILOVER	5-Notice	[chars]	Indicates phone registration / un-registration in webex-sgw mode	srst-sip	LOG_STD_NO_ACTION
WEBEXSGW5FAILOVER	5-Notice	[chars]	Indicates phone registration / un-registration in webex-sgw mode	srst-sip	LOG_STD_NO_ACTION
WEBEXSGW-5-SYNC	5-Notice	[chars]	This message indicates the webex-sgw user db sync events - sync start / sync success / sync failure	-	LOG_STD_NO_ACTION
WEBEXSGW-5-SYNC	5-Notice	[chars]	This message indicates the webex-sgw user db sync events - sync start / sync success / sync failure	-	LOG_STD_NO_ACTION
WEBEXSSLCON_FAILED	5-Notice	ng-web-infra	"connection failed from host[chars] -[chars]"	"Failure reason for SSL connection"	"No action is required"
WEBEXSSLCON_FAILED	5-Notice	ng-web-infra	"Login Un-Successful from host[chars]"	"Login unsuccessful when user/password is invalid"	"No action is required"
WEBEXSSLCON_PASSED	5-Notice	ng-web-infra	"Login Successful from host[chars] by user '%s'"	"Login successful"	"No action is required"
WEBEXSSLCON_REACHED	5-Notice	ng-web-infra	"HTTP server maximum connection reached '%d'"	"Maximum HTTP connection reached."	"No action is required"
WEBEXSSLSESS_LOGOUT	5-Notice	ng-web-infra	"Successfully logged out from host[chars] by user '%s'"	"Logout successful"	"No action is required"
WEBEXSSLSESS_TIMEOUT	5-Notice	ng-web-infra	"Session timeout from host[chars] by user '%s'"	"Session Timeout"	"No action is required"
WLANMGR_EWLC_VANGLER	2-Critical	iosxe-binos-utils	Wlanmgr Error:[chars]	Wlanmgr ewlc Error Message.	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>WLANMGR</del> <del>CRITICAL</del> <del>WLANMGR</del>	2-Critical	iosxe-binos-utils	WLANMGR Error:[chars]	WLAN configs are not getting pushed to Access points. Make a note of any recent changes made to the network or the device configuration which may have triggered this and proceed to the suggested action.	Copy the error message exactly as it appears on the console or in the system log. Open a case with the Technical Assistance Center via the Internet <a href="http://www.cisco.com/techassist">http://www.cisco.com/techassist</a>
<del>WLANMGR</del> <del>ERROR</del> <del>WLANMGR</del>	3-Error	iosxe-binos-utils	WLANs associated with policy profile[chars] are disabled by calendar profile[chars]	Wlanmgr scheduled WLAN disable message.	LOG_STD_ACTION
<del>WLANMGR</del> <del>ERROR</del> <del>WLANMGR</del>	3-Error	iosxe-binos-utils	WLANs associated with policy profile[chars] are enabled by calendar profile[chars]	Wlanmgr scheduled WLAN enable message.	LOG_STD_ACTION
<del>WLANMGR</del> <del>WARNING</del> <del>WLANMGR</del>	4-Warning	iosxe-binos-utils	Wlanmgr Warning:[chars]	Wlanmgr ewlc Warning Message.	LOG_STD_ACTION
<del>QFP</del> <del>CRITICAL</del> <del>QFP</del>	2-Critical	QFP WLCLIENT IPSG Proxy IPC interface initialization failure result: [dec].	Cisco internal software error. QFP WLCLIENT IPSG Proxy initialization detected that the IPC interface initialization failed. QFP WLCLIENT IPSG proxy will not be functional while this condition exists.	qfp-swportkeywordsport	LOG_STD_ACTION
<del>QFP</del> <del>ERROR</del> <del>QFP</del>	3-Error	QFP WLCLIENT IPSG Proxy received bad length message type [dec]	Cisco internal software error. QFP WLCLIENT IPSG Proxy received a corrupted message from control plane. This message will be ignored.	qfp-swportkeywordsport	LOG_STD_ACTION



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>WQENRPOXPALQHEH</del>	3-Error	QFP WLCLIENT IPSG Proxy [chars] message lost due to message buffer allocation failure.	Cisco internal software error. QFP WLCLIENT IPSG Proxy message processing detected a message buffer allocation failure. The message is lost as the result of this condition.	qfp-swportkeywordsport	LOG_STD_ACTION
<del>WQENRPOXPSEHHEH</del>	3-Error	QFP WLCLIENT IPSG Proxy [chars] message lost due to message sent failure result: [dec].	Cisco internal software error. QFP WLCLIENT IPSG Proxy message processing detected a message sent failure. The message is lost as the result of this condition.	qfp-swportkeywordsport	LOG_STD_ACTION
<del>WQENRPOXWMEHEH</del>	3-Error	WLCLIENT IPSG IPC subtype: [dec]	Extending memory failed.	qfp-swportkeywordsport	LOG_STD_ACTION
<del>WQENRPOXWMEHHEH</del>	3-Error	WLCLIENT IPSG IPC subtype: [dec]	Requesting more memory failed.	qfp-swportkeywordsport	LOG_STD_ACTION
<del>WQENRPOXNVALMG</del>	4-Warning	QFP WLCLIENT IPSG Proxy received invalid message type [dec]	Cisco internal software error. QFP WLCLIENT IPSG Proxy received an invalid message from control plane. This message will be ignored.	qfp-swportkeywordsport	LOG_STD_ACTION
<del>WQENRPOXNVALSHN</del>	4-Warning	QFP WLCLIENT IPSG Proxy IPC invalid length [dec]:[dec] len [dec] flags 0x[hec] source [dec]	Cisco internal software error. QFP WLCLIENT IPSG Proxy received invalid IPC message length from control plane. This message will be ignored.	qfp-swportkeywordsport	LOG_STD_ACTION
<del>WQENRPOXRNIAH</del>	3-Error	[dec]	IPC handler initialization failed.	cpp-ucode	LOG_STD_ACTION
<del>WQENRPOXRNVALMG</del>	4-Warning	[hec]	Received an invalid IPC messages subtype.	cpp-ucode	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>WNCNCRMSAUCDINFO</del>	3-Error	ewlc-app-infra	Error: IPC failure to notify wncmgrd on config_done event.	Critical notification to allow AP join	LOG_STD_ACTION
<del>WNCNCRMSAUCDINFO</del>	6-Information	ewcap-image	INSTALL cleanup after switchover:[chars]	General EWC WNCD message	LOG_STD_ACTION
<del>WNCNCRMSAUCDINFO</del>	3-Error	ewlc-ha	Error: Bulk sync not complete. Reloading the WLC!	Switchover happened before bulk sync is complete!	LOG_STD_ACTION
<del>WNCNCRMSAUCDINFO</del>	3-Error	ewlc-ha	Error: Number of wncd instances mismatched between active and standby; HA function will not function correctly.	Resource provision is different on active and standby	LOG_STD_ACTION
<del>WPANHA2EUI64SET_FAIL</del>	2-Critical	Failed to set WPAN HA beacon version on bridge for slot [dec]	Failed to set WPAN HA beacon version on bridge	wpan	"Verify that the CGM is running" "the correct image and the module is functional."
<del>WPANHA2EUI64GET_FAIL</del>	2-Critical	Failed to get WPAN HA EUI64 from bridge for slot [dec]	Failed to get WPAN HA EUI64 from bridge	wpan	"Verify that the CGM is running" "the correct image and the module is functional."
<del>WPANHA2EUI64SET_FAIL</del>	2-Critical	Failed to set WPAN HA EUI64 on bridge for slot [dec]	Failed to set WPAN HA EUI64 on bridge	wpan	"Verify that the CGM is running" "the correct image and the module is functional."
<del>WPANHAMODESET_FAIL</del>	2-Critical	Failed to set WPAN HA mode on bridge for slot [dec]	Failed to set WPAN HA mode on bridge	wpan	"Verify that the CGM is running" "the correct image and the module is functional."
<del>WPANAPROCSINABLE_FAIL</del>	2-Critical	Failed to enable WPAN HA for slot [dec]	Failed to enable WPAN HA for slot	wpan	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
WPAN_HA_RPL_VERSETIAL	2-Critical	Failed to set WPAN HA RPL Ver on bridge for slot [dec]	Failed to set WPAN HA RPL version on bridge	wpan	"Verify that the CGM is running" "the correct image and the module is functional."
WPAN_HA_SOCKET_CLOSE_FAIL	2-Critical	Failed to close socket for slot [dec]	Failed to close socket	wpan	LOG_SID_SH_TECH_ACTION
WPAN_HA_CONFIG_MATCH	3-Error	Slot [dec] : Wpan configuration of the active & standby does not match.	Wpan configuration of the active & standby does not match Make sure the wpan config of both the devices is the same.	wpan	"Compare the wpan interface configuration of both" "the devices to figure out the difference."
WPAN_HA_HA_NBRSETIAL	3-Error	Failed to set WPAN HA NBR on bridge for slot [dec]	Failed to set WPAN HA neighbor on bridge	wpan	"Verify that the CGM is running" "the correct image and the module is functional."
WPAN_HA3NALDEVENT	3-Error	Slot [dec] : Unable to process event of type [dec]	Unable to process event	wpan	LOG_SID_SH_TECH_ACTION
WPAN_HA_PEER_CONNECTIAL	3-Error	Slot [dec] : Unable to connect to peer [node]via [chars]	Make sure the peer is reachable	wpan	"Ping the peer ip-address"
WPAN_HA_PREFIX_UPDATE_FAIL	3-Error	Slot [dec] : Failed to update the metric for prefix [node][dec]	Failed to update the metric for a prefix during failover. This may impact routing behavior.	wpan	LOG_SID_SH_TECH_ACTION
WPAN_HA_SENDER_MODE SAME	3-Error	Slot [dec]: Sender is in the same mode [chars] as the receiver!	Sender is in the same mode as the receiver	wpan	LOG_SID_SH_TECH_ACTION
WPAN_HA_SESSION_MATCH	3-Error	Slot [dec] : Wpan HA session id of the active & standby does not match.	Wpan HA session id of the active & standby does not match. Make sure the session id of both the devices is the same.	wpan	"Change the wpan ha session id of the devices to" "a common session id."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
WPAN_HA6SIBY_NOT_READY	3-Error	Slot [dec] : Standby not ready for failover.	Standby not ready to take over from the active in case of a failure.	wpan	"Check the output of 'show standby' on the standby" " to figure out the source of the failure."
WPAN_HA6MODECHANGE	5-Notice	Current WPAN HA mode is [chars]	The WPAN HA mode changed to active/standby	wpan	LOG_SID_NO_ACTION
WPAN_HA6SIBY_READY	6-Information	Slot [dec] : Standby ready for failover.	Standby ready to take over from the active in case of a failure.	wpan	LOG_SID_SHIIEH_ACTION
WPM3-WDB_ADD_FB	3-Error	Target of type [dec] failed to be created in WDB	Target can not be created in WDB	-	LOG_STD_ACTION
WPM3-WDB_CREATE_FB	3-Error	Create WPM FB node for Target type [dec] failed in WDB	Can not create WPM FB Node in WDB	-	LOG_STD_ACTION
WPM3-WDB_RECON_ABORT	3-Error	QoS HA reconciliation aborted due to timer event	QoS HA reconciliation aborted due to timer event	-	LOG_STD_ACTION
WSMA_ICAP_CONFIG_FAIL	3-Error	iosxe-binos-utils	%% Error: ICap:[chars]	General ewlc ICap config failure	LOG_STD_ACTION
WSMA_DHCP_PROCESS_FAIL	3-Error	PROCESSING FAILED	The processing of WSMA DHCP Option 43 message failed.	-	"Need to verify the WSMA DHCP option 43 message is in correct format.\n\n If not correct it and send this message again."
WSMA_DHCP_PROCESS_FAIL	3-Error	PROCESSING FAILED	The processing of WSMA DHCP Option 43 message failed.	-	"Need to verify the WSMA DHCP option 43 message is in correct format.\n\n If not correct it and send this message again."
WSMA_DHCP_PROCESS_DONE	5-Notice	PROCESSING DONE	The processing of WSMA DHCP Option 43 message succeeded.	-	"None."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>WSMA DHCP_PROCESSING_DONE</del>	5-Notice	PROCESSING DONE	The processing of WSMA DHCP Option 43 message succeeded.	-	"None."
<del>WSMA_INVALID_TRUSTPOINT</del>	3-Error	\ Trustpoint associated with HTTP is either invalid or does not exist	This message indicates that Trustpoint attached to the HTTP is not valid or it does not exist. Ideally there is a need to create Trustpoint first and then attach to the HTTP process. Incase Trustpoint is created later then there is a need to restart HTTPS server	ng-web-infra	"Configure a valid trustpoint and attach it to HTTP"
<del>WUO_AUTH_FAILED</del>	2-Critical	iosxe-binos-utils	WebUI standalone authentication process failed. Reason:[chars]	During the id and password validation phase of the wuilogin access module authentication attempt	-
<del>WUO_INITIALIZATION_FAILED</del>	2-Critical	iosxe-binos-utils	WebUI standalone login initialization failed.	The attempt to access the web user interface using the wuilogin access module failed. The wuilogin access module is used to authenticate web user interface access only when the IOS integrated webserver	-
X25-2-ILLP4	2-Critical	Interface [chars] Illegal state [chars] when P4	An internal software error occurred.	-	"If any of these messages recur call your technical support\n\ representative for assistance."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
X25-3-ADDRESSBAD	3-Error	Interface [chars] x25 address [chars] subaddress [chars] is too long	This message occurs when a subaddress is configured. When this\n\ subaddress is combined with the interface's X.121 address the total\n\ address exceeds the limit of 15 characters.	-	"Reconfigure the subaddress so that this does not happen."
X25-3-BADCONFIG	3-Error	Interface [chars] X.25 [chars] current config. retained	-	-	-
<del>X25-3-BADCONFIGATTEMPT</del>	3-Error	Attempt to [chars].	The user attempted an illegal configuration.	-	"The error will indicate what illegal action was attempted.\n\ The user should check their configuration and if necessary\n\ contact technical support representative for assistance."
X25-3-COMPERR	3-Error	Interface [chars] LCI [dec] low-level stack compression error	A Stacker compression algorithm internal error or shortage of buffer\n\ space was encountered during a compression operation. This should never\n\ happen.	-	"Report the error to your technical support representative."
<del>X25-3-ERRSUBSTITXOTDNSDEST</del>	3-Error	Error substituting regular expression for XOT DNS destination pattern	This message occurs when the regular expression substitute utility fails to arrive at X.25 hostname pattern to be sent to DNS for address resolution	-	"Correct the X.25 route command's DNS substitution pattern"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
X25-3-INTIMEQ	3-Error	Interface [chars] LCN [dec] already in timer queue new time [node]a	An internal software error occurred.	-	"If any of these messages recur call your technical support\n\ representative for assistance."
X25-3-INVCFGID	3-Error	[dec] is not a valid X.25 configuration ID	This message occurs when an invalid configuration id is used	-	LOG_STD_ACTION
X25-3-NOLCI	3-Error	Interface [chars] Delete: lci [dec] not found in [chars] table	An internal software error occurred.	-	"If any of these messages recur call your technical support\n\ representative for assistance."
X25-3-NOTFINDBH	3-Error	Can't find bfe host address [node]to delete	An internal software error occurred.	-	"If any of these messages recur call your technical support\n\ representative for assistance."
X25-3-PROFILENO	3-Error	profile [chars] does not exist	This message occurs when an X.25 interface is configured to use\n\ an X.25 profile that does not exist	-	"Create and configure the x25 profile using x25 profile <name>\n\ global subcommand before referencing the profile."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
X25-3-PVCBAD	3-Error	Interface [chars] PVC [dec] [chars]	A switched PVC cannot be connected. The final [chars] text string in the message represents the state of the PVC. These text strings can also appear in show x25-vc output. For more information refer to the show x25-vc documentation in the Router Products Command Reference publication.	-	"Validate the configuration of the PVCs at both ends of the connection and reconfigure them if necessary."
X25-3-SIZEBAD	3-Error	Interface [chars] LCI [dec] Decompression size error	An internal software error occurred. The PBP header has an uncompressed packet size field. Each uncompressed packet size is checked against this field.	-	"Contact your technical support representative for assistance."
X25-3-SYNCBAD	3-Error	Interface [chars] LCI [dec] Decompression sync error. expected [dec] got [dec]	An internal software error occurred. The PBP header has a sync field. The sync field 8 bits is checked on each received packet.	-	"Contact your technical support representative for assistance."
<del>X25-3-TRUNCADNS</del>	3-Error	Truncating excess XOT addresses [dec] returned by DNS	-	-	-
X25-3-UNKNOWNPROT	3-Error	[chars] : Unable to identify lower layer protocol	IDB is not using X25 and IDB is not capable of supporting CMNS.	-	"Check your hardware configuration or contact your technical support representative for assistance."



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
X25-3-VERSIONBAD	3-Error	Interface [chars] LCI [dec] Compression Version mismatch expected [hec] received [hec]	An internal software error occurred. The PBP header has a mismatched\n\ version field. The version is checked on each received packet.	-	"Copy the message exactly as it appears and report it your technical\n\ support representative."
X25-3-X25DEENCINV	3-Error	[chars]	This message occurs when deconfiguring X.25 service.	-	LOG_STD_ACTION
X25-3-X25ENCINV	3-Error	[chars]	This message occurs when configuring an X.25 service.	-	LOG_STD_ACTION
X25-3-X25INT	3-Error	Interface [chars] X.25 internal error [chars]	This is a general message covering numerous internal X25\n\ error conditions. The message text contains additional\n\ details that can be used to identify the problem.	-	LOG_SID_RECUR_ACTION
X25-3-X25NOCFG	3-Error	Profile is not configured	This message occurs when an X.25 interface is configured to use\n\ an X.25 profile that isn't configured	-	"Configure the x25 profile using x25 profile <name>\n\ global subcommand before referencing the profile."
X25-3-X25NOTAVAIL	3-Error	[chars] : Lower layer protocol is not available	The required lower layer service is unavailable.	-	"Check your configuration or contact your technical support\n\ representative for assistance."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
X25-3-XOTINT	3-Error	XOT internal error [chars]	This is a general message covering numerous internal error conditions related to XOT. The message text contains additional details that can be used to identify the problem.	-	-
X25-3-XOTPROTOCOL	3-Error	XOT protocol error from [node] [chars]	-	-	"If this message recurs call your technical support representative for assistance."
X25-4-BADMBIT	4-Warning	Interface [chars] VC [dec] partial data packet has M-bit set	This message occurs when a virtual circuit is set up using the default maximum packet sizes but the DTE and DCE are not configured with the same default values. A packet was received that had the M-bit set signifying that more data follows but the packet did not carry the maximum number of bytes allowed. Such partial data packets must have the M-bit cleared. The resulting loss of a message boundary might cause problems for the data recipient.	-	"Verify the default flow control parameters of the DTE and the DCE. If this message recurs call your technical support representative for assistance."
X25-4-BADUPCALL	4-Warning	Interface [chars] Unexpected call [chars] from LLC2	An internal software error occurred.	-	"If any of these messages recur call your technical support representative for assistance."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
X25-4-BFEIP	4-Warning	Warning: IP address is missing or incompatible with BFE mode	An interface configured for X.25 BFE mode does not have an IP address configured or the IP address does not conform to BFE requirements so cannot be mapped to an X.121 address.	-	"Please configure a valid Class A IP address for the interface or remove the 'bfe' option from the 'encapsulation x25' command for the interface."
X25-4-DEBUG_LCI	4-Warning	LCI deleted at interrupt time	The interface's default packet sizes or outgoing packet size facility values are too large to be carried by Link Access Procedure Balanced LAPB.	-	[chars] packet sizes [dec]/[dec] too large
X25-4-PARTIALMAP	4-Warning	Interface [chars] [chars] encapsulation call from [chars] partially mapped to [chars]	-	-	"Modify the configuration of the router or the far host to match the encapsulation method used."
X25-4-VCLOSTSYNC	4-Warning	Interface [chars] VC [dec] TCP connection [chars]	An X.25 circuit that is being tunneled over a TCP connection between routers was cleared ungracefully. The last [chars] text string in the message can take one of two forms. If the text string is \closed unexpectedly	-	-
X25-4-XOTPCDUPLICATE	4-Warning	Duplicated remote PVC data for {[chars] pvc [dec]} and {[chars] pvc [dec]}	This message identifies two local XOT PVCs that are defined using duplicate specifications for the connecting remote XOT PVC.	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
X25-5-CALL_RECORD	5-Notice	[chars]	This message contains X.25 call record information.	x25	LOG_SID_NO_ACTION
X25-5-NOBUF	5-Notice	Interface [chars] LCI [dec] [chars]		-	"If this message occurs frequently you may need to modify the buffer\n\ pool. Copy the message exactly as it appears and report it your\n\ technical support representative."
X25-5-PBPDBIT	5-Notice	Interface [chars] LCI [dec] PBP Compression does not support X25 D bit	Compression is not enabled because D-bit support is configured for the\n\ LCI.	-	"Reconfigure without D-bit support or do not attempt to run with\n\ compression."
X25-5-PBPHOLDQ	5-Notice	Interface [chars] LCI [dec] X25 Hold queue needs to be at least default size	An attempt was made to configure the X.25 hold queue to less than the\n\ minimum value.	-	"Configure the X.25 hold queue to be ten or more."
X25-5-PBPNOEND	5-Notice	Interface [chars] LCI [dec] End system not configured for X25 PBP	A compression or decompression operation was attempted by a router\n\ other than an end router. Only end routers can perform compression and\n\ decompression.	-	"Reconfigure the routers so that only the end routers in the network\n\ perform compression and decompression."
X25-5-UPDOWN	5-Notice	Interface [chars] - DLCI [dec] X.25 packet layer state changed to [chars]	The state of the X.25 context associated with the DLCI changed	fr	"Notification message only. No action required"
X25-7-DIAGEVENT	7-Debug	Interface [chars] X.25 diagnostic event [chars] lci [dec][chars]	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
X25-7-DIAGR <del>X</del>	7-Debug	Interface [chars] X.25 Diagnostic received [chars][chars]	-	-	-
<del>XLOWQ</del> <del>XQUE</del> <del>XEXCEED</del>	5-Notice	Number of queues [dec] for the Low queue sub-block exceeded the	More queues cannot be created on the interface since the number of low queues created in the system exceeds the maximum allowed limit of 16.	c7600-es-platform	"This is just a informational message and the configuration should fail " "to apply on the interface. Please check the output of show platform lowq" "for more information"
<del>X40G</del> <del>TCAM</del> <del>MGR</del> <del>CR</del> <del>ERR</del>	2-Critical	GTM ERROR: [chars] [dec]	X40G TCAM critical error	c7600-es-platform	LOG_SID_SH_TECH_ACTION
X40G3TCAM_MGR_ERR	3-Error	GTM ERROR: [chars] [dec]	X40G TCAM MGR interaction error	c7600-es-platform	LOG_SID_SH_TECH_ACTION
<del>X40G</del> <del>TCAM</del> <del>MGR</del> <del>HW</del> <del>ERR</del>	3-Error	GTM HW ERROR: [chars] [dec] [[dec]:[node]x]	X40G TCAM hardware error	c7600-es-platform	LOG_SID_SH_TECH_ACTION
<del>X40G</del> <del>TCAM</del> <del>MGR</del> <del>HW</del> <del>ERR</del>	3-Error	GTM HW ERROR: [chars] [dec]	X40G TCAM interface parity error	c7600-es-platform	LOG_SID_SH_TECH_ACTION
<del>X40G</del> <del>TCAM</del> <del>MGR</del> <del>AI</del> <del>OC</del> <del>ERR</del>	4-Warning	[chars] NP [dec] Region Id [dec]	NP TCAM entry allocation failure	c7600-es-platform	"remote command module " "<module#> sh platform software xtcammgr instance <NP#> info"
X40G5TCAM_MGR_INFO	5-Notice	[chars]	X40G TCAM driver error	c7600-es-platform	LOG_SID_SH_TECH_ACTION
<del>XCC</del> <del>SP</del> <del>CE</del> <del>3</del> <del>AD</del> <del>N</del> <del>RR</del> <del>AL</del>	3-Error	The Voice Telephony Service Provider has rejected our\n\n request to add this voice interface [dec]/[dec]:[dec]	The voice software was unable to report a new signaling\n\n interface to the Voice Telephony Service Provider	xcc	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
XCCISP_VOIC3ADDNIRFAL	3-Error	The Voice Telephony Service Provider has rejected our\n request to add this voice interface [dec]/[dec]:[dec]	The voice software was unable to report a new signaling\n interface to the Voice Telephony Service Provider	xcc	LOG_SIDSH_TECH_ACTION
XCCISP_VOIC3MALLOC	3-Error	No memory is available to build any internal data \n structure for the voice software.	The voice software was unable allocate memory to build \n any internal data structures. The system may be \n out of memory.	xcc	LOG_SIDSH_TECH_ACTION
XCCISP_VOIC3MALLOC	3-Error	No memory is available to build any internal data \n structure for the voice software.	The voice software was unable allocate memory to build \n any internal data structures. The system may be \n out of memory.	xcc	LOG_SIDSH_TECH_ACTION
XCCISP_VOIC3NOMEM	3-Error	No memory is available to build the voice interface [dec]:[dec]	The voice software was unable allocate memory to build \n a voice interface data structure. The system may be \n out of memory.	xcc	LOG_SIDSH_TECH_ACTION
XCCISP_VOIC3NOMEM	3-Error	No memory is available to build the voice interface [dec]:[dec]	The voice software was unable allocate memory to build \n a voice interface data structure. The system may be \n out of memory.	xcc	LOG_SIDSH_TECH_ACTION
XCCISP_VOIC3NOSDB	3-Error	No signaling data block is available to build the\n voice interface[dec]/[dec]:[dec] or DSP may not be present	The voice software was unable to obtain a signaling data\n block from the Voice Telephony Service Provider. \n The system may be out of memory.	xcc	LOG_SIDSH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>XCCTSP_VOICE3NOSDB</del>	3-Error	No signaling data block is available to build the\n\ voice interface[dec]/[dec]:[dec] or DSP may not be present	The voice software was unable to obtain a signaling data\n\ block from the Voice Telephony Service Provider. \n\ The system may be out of memory.	xcc	LOG_SID_SH_TECH_ACTION
<del>XCCTSP_VOICE3NODMCHL</del>	3-Error	XCCTSP failed to get a free dsp tdm channel from the DSP\n\ Resource Manager DSPRM to handle an incoming call	The voice software was unable to obtain the tdm channel \n\ for a free dsp from the DSP Resource Manager. All of \n\ the dsp's have been used to process calls or have\n\ been taken out of service.	xcc	LOG_SID_SH_TECH_ACTION
<del>XCCTSP_VOICE3NODMCHL</del>	3-Error	XCCTSP failed to get a free dsp tdm channel from the DSP\n\ Resource Manager DSPRM to handle an incoming call	The voice software was unable to obtain the tdm channel \n\ for a free dsp from the DSP Resource Manager. All of \n\ the dsp's have been used to process calls or have\n\ been taken out of service.	xcc	LOG_SID_SH_TECH_ACTION
<del>XCCTSP_VOICE3NOCEDEV</del>	3-Error	Cannot find the voice data block which matches\n\ an asynchronous response for a call.	Internal software fault. Contact your field service representative \n\ if this message is coincident with dropped calls.	xcc	LOG_SID_SH_TECH_ACTION
<del>XCCTSP_VOICE3NOCEDEV</del>	3-Error	Cannot find the voice data block which matches\n\ an asynchronous response for a call.	Internal software fault. Contact your field service representative \n\ if this message is coincident with dropped calls.	xcc	LOG_SID_SH_TECH_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
XCCSP_VCE_OUT_OF_RANGE_CTL	3-Error	Going out of range for controller number for the slot\n\ subslot [dec] ctrl_num [dec]	Internal software fault. Contact your field service representative	xcc	LOG_SIDSH_TIEH_ACTION
XCCSP_VCE_OUT_OF_RANGE_CTL	3-Error	Going out of range for controller number for the slot\n\ subslot [dec] ctrl_num [dec]	Internal software fault. Contact your field service representative	xcc	LOG_SIDSH_TIEH_ACTION
XCCSP_VCE_UNDEFINED_DSX0	3-Error	Undefined dsx0 interface for controller[dec]	The dsx0 interface for the specified controller\n\ is not defined but the voice software use it.	xcc	"Internal software fault. Contact your field service representative \n\ if this message is coincident with dropped calls."
XCCSP_VCE_UNDEFINED_DSX0	3-Error	Undefined dsx0 interface for controller[dec]	The dsx0 interface for the specified controller\n\ is not defined but the voice software use it.	xcc	"Internal software fault. Contact your field service representative \n\ if this message is coincident with dropped calls."
XCCSP_VCE_INVALID_VOICE_INTERFACE_SLOT_CTRL_GRP	3-Error	Invalid voice interface slot\n\ ctrl\n\ grp [dec][dec][dec]	The voice interface defined by controller:group is not\n\ yet defined within the voice software but attempts were\n\ made to use this interface.	xcc	"Internal software fault. Contact your field service \n\ representative if this message is coincident with \n\ dropped calls."
XCCSP_VCE_INVALID_VOICE_INTERFACE_SLOT_CTRL_GRP	3-Error	Invalid voice interface slot\n\ ctrl\n\ grp [dec][dec][dec]	The voice interface defined by controller:group is not\n\ yet defined within the voice software but attempts were\n\ made to use this interface.	xcc	"Internal software fault. Contact your field service \n\ representative if this message is coincident with \n\ dropped calls."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
XCONNECT-3-CONFIG	3-Error	[chars]	An invalid xconnect configuration or an error in processing xconnect configuration has occurred.	xconnect	LOG_SID_NO_ACTION
XCONNECT-3-CONFIG	3-Error	[chars]	An invalid xconnect configuration or an error in processing xconnect configuration has occurred.	xconnect	LOG_SID_NO_ACTION
XCONNECT-3-ILLEGAL	3-Error	[chars]	An illegal event has been processed by the xconnect subsystem.	xconnect	LOG_SID_NO_ACTION
XCONNECT-3-ILLEGAL	3-Error	[chars]	An illegal event has been processed by the xconnect subsystem.	xconnect	LOG_SID_NO_ACTION
XCONNECT-4-INCOMPATIBLE	4-Warning	The 'vc type' command on pseudowire [chars]:[node] is incompatible with xconnect [chars] ignored	The 'vc type' command is only intended to be used with VPLS. Use the 'interworking' command on xconnects in order to specify the type of VC for VPWS.	xconnect	"Unconfigure the 'vc type' command from the " "pseudowire interface or template and configure" "'interworking' on the xconnect."
XCONNECT-4-INCOMPATIBLE	4-Warning	The 'vc type' command on pseudowire [chars]:[node] is incompatible with xconnect [chars] ignored	The 'vc type' command is only intended to be used with VPLS. Use the 'interworking' command on xconnects in order to specify the type of VC for VPWS.	xconnect	"Unconfigure the 'vc type' command from the " "pseudowire interface or template and configure" "'interworking' on the xconnect."
XCONNECT-5-PW_STATUS	5-Notice	[chars]	An event has occurred that has caused the pseudowire to change status	xconnect	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
XCONNECT5PW_STATUS	5-Notice	[chars]	An event has occurred that has caused the pseudowire to change status	xconnect	LOG_SID_NO_ACTION
XCONNECT5PW_STATUS	5-Notice	[chars]	The system is dropping PW_STATUS messages because the status queue is full	xconnect	LOG_SID_NO_ACTION
XCONNECT5PW_STATUS	5-Notice	[chars]	The system is dropping PW_STATUS messages because the status queue is full	xconnect	LOG_SID_NO_ACTION
XCONNECT5REDUNDANCY	5-Notice	[chars]	An event has occurred that has caused the xconnect redundancy facility to generate a switchover event to the specified backup member	xconnect	LOG_SID_NO_ACTION
XCONNECT5REDUNDANCY	5-Notice	[chars]	An event has occurred that has caused the xconnect redundancy facility to generate a switchover event to the specified backup member	xconnect	LOG_SID_NO_ACTION
XUNKNOWN5SFP	3-Error	Unknown SFP inserted [chars]	Unknown SFP inserted	-	LOG_STD_ACTION
XDM_CREATE3ACM_TRANS	3-Error	ERRMSG_NOFLAGS	-	-	-
XDM_CREATE3ACM_TRANS	3-Error	ERRMSG_NOFLAGS	-	-	-
XDM_CREATE3-VFI	3-Error	ERRMSG_NOFLAGS	-	-	-
XDM_CREATE3-VFI	3-Error	ERRMSG_NOFLAGS	-	-	-
XDM_CREATE3XCONNECT	3-Error	ERRMSG_NOFLAGS	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
XDMCREATE3CONNECT	3-Error	ERRMSG_NOFLAGS	-	-	-
XDR_COMMBMFLSOAM	3-Error	ERRMSG_HAG_TRACEBACK	-	-	-
XDR_COMMBMFLSOAM	3-Error	ERRMSG_HAG_TRACEBACK	-	-	-
XDRXDRDISABLEREQUEST	2-Critical	Peer in slot [chars] requested to be disabled due to: [chars]. Disabling linecard	Due to some error condition the linecard has requested to be disabled	XDR_DDIS_COMPONENT	"Execute \"clear xdr linecard\" from the RP followed by \" \"clear xdr channel\" on the linecard in question to clear the \"error condition. If the problem persists get the output of \" \"show monitor event-trace xdr all\" from the RP and the linecard in \"question and report it to your technical support representative."
XDRXDRDISABLEREQUEST	2-Critical	Peer in slot [chars] requested to be disabled due to: [chars]. Disabling linecard	Due to some error condition the linecard has requested to be disabled	XDR_DDIS_COMPONENT	"Execute \"clear xdr linecard\" from the RP followed by \" \"clear xdr channel\" on the linecard in question to clear the \"error condition. If the problem persists get the output of \" \"show monitor event-trace xdr all\" from the RP and the linecard in \"question and report it to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>XDR-1-CLEARREQUEST</del>	2-Critical	Client [chars] requested to be disabled. [chars]	Due to some error condition the linecard has requested to be disabled	XDR_DDIS_COMPONENT	"Execute \"clear xdr linecard\" from the RP followed by \" \"clear xdr channel\" on the linecard in question to clear the \" \"error condition. If the problem persists get the output of \" \"show monitor event-trace xdr all\" from the RP and the linecard in \" \"question and report it to your technical support representative."
<del>XDR-1-CLEARREQUEST</del>	2-Critical	Client [chars] requested to be disabled. [chars]	Due to some error condition the linecard has requested to be disabled	XDR_DDIS_COMPONENT	"Execute \"clear xdr linecard\" from the RP followed by \" \"clear xdr channel\" on the linecard in question to clear the \" \"error condition. If the problem persists get the output of \" \"show monitor event-trace xdr all\" from the RP and the linecard in \" \"question and report it to your technical support representative."
XDR-3-BADSEQVAL	3-Error	Incorrect maximum sequence calculated [dec] was [dec] for slot [chars]	Internal software error. May result in unpredictable behaviour.	XDR_DDIS_COMPONENT	"show xdr linecard"
XDR-3-BADSEQVAL	3-Error	Incorrect maximum sequence calculated [dec] was [dec] for slot [chars]	Internal software error. May result in unpredictable behaviour.	XDR_DDIS_COMPONENT	"show xdr linecard"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
XDR3BYPASSFOFNEGO	3-Error	Bypassing FOF ISSU client [chars] [node]nego for XDR client [chars] slot [chars]	This XDR client has a dependency on another ISSU client due to having foreign-owned-fields. As the ISSU client that owns the foreign-owned fields is not in the image the XDR client will not wait for that client to finish ISSU negotiation. Appearance of this error message indicates that work is required to add the missing client to the image.	XDR_DDIS_COMPONENT	"Copy the message exactly as it appears and report it to your technical " "support representative."
XDR3BYPASSFOFNEGO	3-Error	Bypassing FOF ISSU client [chars] [node]nego for XDR client [chars] slot [chars]	This XDR client has a dependency on another ISSU client due to having foreign-owned-fields. As the ISSU client that owns the foreign-owned fields is not in the image the XDR client will not wait for that client to finish ISSU negotiation. Appearance of this error message indicates that work is required to add the missing client to the image.	XDR_DDIS_COMPONENT	"Copy the message exactly as it appears and report it to your technical " "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>XDR</del> ISSU_FOFNCGAL	3-Error	ISSU negotiation failed for FOF client [node]for peer [chars] ISSU peer [dec]	ISSU negotiation failed for a client which has registered ISSU FOF client dependencies. The dependent clients on this and the remote slot cannot interoperate in SSO mode. Syncing of information to/from this slot will not happen for this and the dependent clients. See output of \show xdr multicast\ for full details.	XDR_DDIS_COMPONENT	"Copy the message exactly as it appears and report it to your technical " "support representative."
<del>XDR</del> ISSU_FOFNCGAL	3-Error	ISSU negotiation failed for FOF client [node]for peer [chars] ISSU peer [dec]	ISSU negotiation failed for a client which has registered ISSU FOF client dependencies. The dependent clients on this and the remote slot cannot interoperate in SSO mode. Syncing of information to/from this slot will not happen for this and the dependent clients. See output of \show xdr multicast\ for full details.	XDR_DDIS_COMPONENT	"Copy the message exactly as it appears and report it to your technical " "support representative."
<del>XDR</del> ISSU_FOFCHRCR	3-Error	ISSU client [chars] [dec] entity [dec] message [dec] [chars]	This ISSU client has a message containing a foreign field owned by another client and failed to register this dependency.	XDR_DDIS_COMPONENT	"This error indicates a potential coding problem. It is an error that " "may occur every time this image is run and may require a code change " "to fix it."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>XDR</del> CLIENT_ISSU_FAILURE	3-Error	ISSU client [chars] [dec] entity [dec] message [dec] [chars]	This ISSU client has a message containing a foreign field owned by another client and failed to register this dependency.	XDR_DDIS_COMPONENT	"This error indicates a potential coding problem. It is an error that " "may occur every time this image is run and may require a code change " "to fix it."
<del>XDR</del> CLIENT_ISSU_NEGO_FAIL	3-Error	ISSU negotiation failed for XDR client [chars] slot [chars] reason: [chars]	ISSU negotiation failed. This XDR client on this and the remote slot cannot interoperate in SSO mode. Syncing of information to/from this slot will not happen for this and dependent clients. See output of show xdr multicast for full details.	XDR_DDIS_COMPONENT	"Copy the message exactly as it appears and report it to your technical " "support representative."
<del>XDR</del> CLIENT_ISSU_NEGO_FAIL	3-Error	ISSU negotiation failed for XDR client [chars] slot [chars] reason: [chars]	ISSU negotiation failed. This XDR client on this and the remote slot cannot interoperate in SSO mode. Syncing of information to/from this slot will not happen for this and dependent clients. See output of show xdr multicast for full details.	XDR_DDIS_COMPONENT	"Copy the message exactly as it appears and report it to your technical " "support representative."
<del>XDR</del> CLIENT_ISSU_NEGO_FAILURE	3-Error	XDR client [chars] failed ISSU negotiation result notification registration for ISSU client [chars] [dec] reason: [chars]	This client has dependency on the successful ISSU negotiation of another client and failed to register this dependency	XDR_DDIS_COMPONENT	"This error indicates a potential coding problem. It is an error that " "may occur every time this image is run and may require a code change " "to fix it."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>XDR</del> ISSU_NCONFCHRCR	3-Error	XDR client [chars] failed ISSU negotiation result notification registration for ISSU client [chars] [dec] reason: [chars]	This client has dependency on the succesful ISSU negotiation of another client and failed to register this dependency	XDR_DDIS_COMPONENT	"This error indicates a potential coding problem. It is an error that " "may occur every time this image is run and may require a code change " "to fix it."
<del>XDR</del> ISSU_NCONFCHRCR	3-Error	Failed to unregister ISSU negotiation result notification registration for ISSU client [chars] [dec] reason: [chars]	This client has dependency on the succesful ISSU negotiation of another client and failed to unregister this dependency when not required.	XDR_DDIS_COMPONENT	"This error indicates a potential coding problem. It is an error that " "may occur every time this image is run and may require a code change " "to fix it."
<del>XDR</del> ISSU_NCONFCHRCR	3-Error	Failed to unregister ISSU negotiation result notification registration for ISSU client [chars] [dec] reason: [chars]	This client has dependency on the succesful ISSU negotiation of another client and failed to unregister this dependency when not required.	XDR_DDIS_COMPONENT	"This error indicates a potential coding problem. It is an error that " "may occur every time this image is run and may require a code change " "to fix it."
XDRCLIENT_ISSU_PUSH_FAIL	3-Error	Attempting to push send XDR message [chars] to slots [chars] via XDR client	Internal error. May result in unpredictable behaviour.	XDR_DDIS_COMPONENT	"Get the output of \"show xdr multicast\" \"show xdr client all\" and \" \"show issu message types [XDR client ISSU ID]\". \" \"Copy the message exactly as it appears and report it to your technical \" \"support representative."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
XDRCLN <del>ISSU</del> _PUSH <del>AL</del>	3-Error	Attempting to push send XDR message [chars] to slots [chars] via XDR client	Internal error. May result in unpredictable behaviour.	XDR_DD <del>IS</del> _COMPONENT	"Get the output of \"show xdr multicast\" \"show xdr client all\" and \"show issu message types [XDR client ISSU ID]\". \"Copy the message exactly as it appears and report it to your technical \"support representative."
XDRCLN <del>ISSU</del> _REG <del>ERR</del>	3-Error	ISSU client [chars] [dec] entity [dec] failed ISSU registration: [chars]	ISSU negotiation failed for this XDR client.	XDR_DD <del>IS</del> _COMPONENT	"This error indicates a coding problem. It is an error that will occur" "every time this image is run and requires a code change to fix it."
XDRCLN <del>ISSU</del> _REG <del>ERR</del>	3-Error	ISSU client [chars] [dec] entity [dec] failed ISSU registration: [chars]	ISSU negotiation failed for this XDR client.	XDR_DD <del>IS</del> _COMPONENT	"This error indicates a coding problem. It is an error that will occur" "every time this image is run and requires a code change to fix it."
XDRCLN <del>ISSU</del> _BADGROUP	3-Error	New m/cast group slots [chars] has multiple members before nego complete.	-	-	-
XDRCLN <del>ISSU</del> _BADGROUP	3-Error	New m/cast group slots [chars] has multiple members before nego complete.	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>XDR</del> ISSUBANCOMG	3-Error	Unexpected nego msg - slot [chars] XDR client [chars] ctxt [dec]	XDR has received a negotiation message unexpectedly as this client is either not ISSU aware or has already completed negotiation for this slot. This is likely a precursor to unpredictable behaviour for this client.	XDR_DDIS_COMPONENT	"Get the output of \"show xdr multicast\" \"show xdr client all\" and \"show issu message types [XDR client ISSU ID]\". \"Copy the message exactly as it appears and report it to your technical \"support representative.\""
<del>XDR</del> ISSUBANCOMG	3-Error	Unexpected nego msg - slot [chars] XDR client [chars] ctxt [dec]	XDR has received a negotiation message unexpectedly as this client is either not ISSU aware or has already completed negotiation for this slot. This is likely a precursor to unpredictable behaviour for this client.	XDR_DDIS_COMPONENT	"Get the output of \"show xdr multicast\" \"show xdr client all\" and \"show issu message types [XDR client ISSU ID]\". \"Copy the message exactly as it appears and report it to your technical \"support representative.\""
<del>XDR</del> ISSUNCAMPADG	3-Error	Negative padding for [chars] slots [chars] msg [dec] padded: [dec] unpadded: [dec]	-	-	-
<del>XDR</del> ISSUNCAMPADG	3-Error	Negative padding for [chars] slots [chars] msg [dec] padded: [dec] unpadded: [dec]	-	-	-
<del>XDR</del> ISSUNCOIDDE	3-Error	Attempting to push send XDR message [dec] to slots [chars] for [chars] before nego	Internal error. May result in unpredictable behaviour.	XDR_DDIS_COMPONENT	"Get the output of \"show xdr multicast\" \"show xdr client all\" and \"show issu message types [XDR client ISSU ID]\". \"Copy the message exactly as it appears and report it to your technical \"support representative.\""

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
XDRCLIENTISSUENCODE	3-Error	Attempting to push send XDR message [dec] to slots [chars] for [chars] before nego	Internal error. May result in unpredictable behaviour.	XDR_DDIS_COMPONENT	"Get the output of \"show xdr multicast\" \"show xdr client all\" and \"show issu message types [XDR client ISSU ID]\". \"Copy the message exactly as it appears and report it to your technical \"support representative."
XDRCLIENTISSUENCODE	3-Error	Cannot determine ISSU message group for slot [dec]. Unknown [chars]	Not able to determine the set of ISSU messages to be used between local and remote slot due to not being able to determine linecard type for one or other slot. This might be due to a new linecard type.	XDR_DDIS_COMPONENT	LOG_STD_ACTION
XDRCLIENTISSUENCODE	3-Error	Cannot determine ISSU message group for slot [dec]. Unknown [chars]	Not able to determine the set of ISSU messages to be used between local and remote slot due to not being able to determine linecard type for one or other slot. This might be due to a new linecard type.	XDR_DDIS_COMPONENT	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
XDRCLIENTISSUNDAILED	3-Error	Can't send XDR client ISSU nego msg: reason [chars] slot [chars] XDR client [chars]	XDR has failed to send an ISSU negotiation message for the given client. The slot will be marked as ISSU-unaware and communication with this slot will proceed on that basis. However this is likley to lead to unpredictable behaviour.	XDR_DDIS_COMPONENT	"Get the output of \"show xdr multicast\" \"show xdr client all\" and \"show issu message types [XDR client ISSU ID]\". \"Also copy the message exactly as it appears and report it to your \"technical support representative.\"
XDRCLIENTISSUNDAILED	3-Error	Can't send XDR client ISSU nego msg: reason [chars] slot [chars] XDR client [chars]	XDR has failed to send an ISSU negotiation message for the given client. The slot will be marked as ISSU-unaware and communication with this slot will proceed on that basis. However this is likley to lead to unpredictable behaviour.	XDR_DDIS_COMPONENT	"Get the output of \"show xdr multicast\" \"show xdr client all\" and \"show issu message types [XDR client ISSU ID]\". \"Also copy the message exactly as it appears and report it to your \"technical support representative.\"
XDRCLIENTISSUNDAILED	3-Error	Can't start nego: reason [chars] slot [chars] XDR client [chars] sid [dec]	XDR has failed to start ISSU negotiation with the remote slot for the reason given. The slot will be marked as ISSU-unaware and communication with this slot will proceed on that basis. However this is likley to lead to unpredictable behaviour.	XDR_DDIS_COMPONENT	"Get the output of \"show xdr multicast\" \"show xdr client all\" and \"show issu message types [XDR client ISSU ID]\". \"Also copy the message exactly as it appears and report it to your \"technical support representative.\"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>XDR3CLIENTSARINCOAL</del>	3-Error	Can't start nego: reason [chars] slot [chars] XDR client [chars] sid [dec]	XDR has failed to start ISSU negotiation with the remote slot for the reason given. The slot will be marked as ISSU-unaware and communication with this slot will proceed on that basis. However this is likely to lead to unpredictable behaviour.	XDR_DDIS_COMPONENT	"Get the output of \"show xdr multicast\" \"show xdr client all\" and \"show issu message types [XDR client ISSU ID]\". \"Also copy the message exactly as it appears and report it to your \"technical support representative.\""
XDR3DATA_TOO_LARGE	3-Error	Data length [dec] exceeds limit of [dec] bytes	An attempt was made by a client to send XDR data that was over the given length limit which caused the send to fail.	XDR_DDIS_COMPONENT	LOG_STD_ACTION
XDR3DATA_TOO_LARGE	3-Error	Data length [dec] exceeds limit of [dec] bytes	An attempt was made by a client to send XDR data that was over the given length limit which caused the send to fail.	XDR_DDIS_COMPONENT	LOG_STD_ACTION
<del>XDR3FRAGMENTNOTALLOWED</del>	3-Error	Received an XDR fragment from client [chars] slot [chars] which is not allowed to send fragments	Certain clients are restricted by XDR from fragmenting their data yet such a fragment was received received.	XDR_DDIS_COMPONENT	LOG_STD_ACTION
<del>XDR3FRAGMENTNOTALLOWED</del>	3-Error	Received an XDR fragment from client [chars] slot [chars] which is not allowed to send fragments	Certain clients are restricted by XDR from fragmenting their data yet such a fragment was received received.	XDR_DDIS_COMPONENT	LOG_STD_ACTION
XDR3ILLEGAL_CAP_TYPE	3-Error	Illegal ISSU capability type [dec] for XDR client [chars]	Capability type requested is invalid. The named XDR client may not function as expected.	XDR_DDIS_COMPONENT	"Copy the message exactly as it appears and report it to your technical \"support representative.\""

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
XDR3ILLEGAL_CAP_TYPE	3-Error	Illegal ISSU capability type [dec] for XDR client [chars]	Capability type requested is invalid. The named XDR client may not function as expected.	XDR_DDIS_COMPONENT	"Copy the message exactly as it appears and report it to your technical " "support representative."
<del>XDR3ILLEGAL_CAP_VERSION</del>	3-Error	ISSU capabilities for peers running same IOS version must be supported.	Basic assumption is that all peers running the same IOS version as the active RP will support the same ISSU capabilities as the active RP. This is an attempt to mark one such peer as not supporting all capabilities. This will break assumptions in XDR ISSU code and cannot be allowed. The traceback will indicate the offending XDR client.	XDR_DDIS_COMPONENT	"Copy the message exactly as it appears and report it to your technical " "support representative."
<del>XDR3ILLEGAL_CAP_VERSION</del>	3-Error	ISSU capabilities for peers running same IOS version must be supported.	Basic assumption is that all peers running the same IOS version as the active RP will support the same ISSU capabilities as the active RP. This is an attempt to mark one such peer as not supporting all capabilities. This will break assumptions in XDR ISSU code and cannot be allowed. The traceback will indicate the offending XDR client.	XDR_DDIS_COMPONENT	"Copy the message exactly as it appears and report it to your technical " "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
XDR-3-ISSU_ENUM_ERROR	3-Error	Enum for [chars] [chars] component is not ISSU-compliant: [chars]	The given enumeration is not ISSU-compliant for the reason given. Unpredictable behaviour will result when interoperating with different IOS versions.	XDR_DDIS_COMPONENT	"This requires a code fix before the image can be shipped or ISSU will be " "broken."
XDR-3-ISSU_ENUM_ERROR	3-Error	Enum for [chars] [chars] component is not ISSU-compliant: [chars]	The given enumeration is not ISSU-compliant for the reason given. Unpredictable behaviour will result when interoperating with different IOS versions.	XDR_DDIS_COMPONENT	"This requires a code fix before the image can be shipped or ISSU will be " "broken."
XDR-3-ISSU_NEGOFAIL	3-Error	ISSU negotiation failed for XDR slot [chars] reason: [chars]	ISSU negotiation failed. XDR on this and the remote slot cannot interoperate. Syncing of information to/from this slot for all XDR clients will not be allowed.	XDR_DDIS_COMPONENT	"Copy the message exactly as it appears and report it to your technical " "support representative."
XDR-3-ISSU_NEGOFAIL	3-Error	ISSU negotiation failed for XDR slot [chars] reason: [chars]	ISSU negotiation failed. XDR on this and the remote slot cannot interoperate. Syncing of information to/from this slot for all XDR clients will not be allowed.	XDR_DDIS_COMPONENT	"Copy the message exactly as it appears and report it to your technical " "support representative."
XDR-3-ISSUBALRECPARAMS	3-Error	XDR client [chars] trying to register with incomplete ISSU support.	This client does not properly support ISSU and will be registered as not supporting ISSU.	XDR_DDIS_COMPONENT	"We cannot allow a client to register with partial ISSU support so it will " "be registered without it. Please report this message to your technical " "support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
XDR3ISSUBADREGPARAMS	3-Error	XDR client [chars] trying to register with incomplete ISSU support.	This client does not properly support ISSU and will be registered as not supporting ISSU.	XDR_DDIS_COMPONENT	"We cannot allow a client to register with partial ISSU support so it will " "be registered without it. Please report this message to your technical " "support representative."
XDR3ISSUCAPNEGOFAIL	3-Error	XDR client [chars] failed to [chars] capability/ies due to [chars]	Internal software error - capability negotiation failed unexpectedly.	XDR_DDIS_COMPONENT	"Copy the message exactly as it appears and report it to your technical " "support representative"
XDR3ISSUCAPNEGOFAIL	3-Error	XDR client [chars] failed to [chars] capability/ies due to [chars]	Internal software error - capability negotiation failed unexpectedly.	XDR_DDIS_COMPONENT	"Copy the message exactly as it appears and report it to your technical " "support representative"
XDR-3-ISSUINITFAIL	3-Error	Unable to register XDR ISSU [chars] reason: [chars]	Unable to register the given XDR ISSU parameter due to the reason given. This will stop ISSU working for this client and may lead to unpredictable behaviour.	XDR_DDIS_COMPONENT	"Copy the message exactly as it appears and report it to your technical " "support representative."
XDR-3-ISSUINITFAIL	3-Error	Unable to register XDR ISSU [chars] reason: [chars]	Unable to register the given XDR ISSU parameter due to the reason given. This will stop ISSU working for this client and may lead to unpredictable behaviour.	XDR_DDIS_COMPONENT	"Copy the message exactly as it appears and report it to your technical " "support representative."



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>XDR-3-MSGSIZEFAIL</del>	3-Error	[chars]: [chars]	ISSU-aware XDR clients may have capabilities to negotiate. They can ask XDR to manage the state of these but must provide all relevant supporting functions to do so. In this case the given client has not done so.	XDR_DDIS_COMPONENT	"Copy the message exactly as it appears and report it to your technical " "support representative."
<del>XDR-3-MSGSIZEFAIL</del>	3-Error	[chars]: [chars]	ISSU-aware XDR clients may have capabilities to negotiate. They can ask XDR to manage the state of these but must provide all relevant supporting functions to do so. In this case the given client has not done so.	XDR_DDIS_COMPONENT	"Copy the message exactly as it appears and report it to your technical " "support representative."
XDR-3-MSGSIZEFAIL	3-Error	The IPC message size is out of bounds The ipc_msg_size is : [dec] while the maximum size we can handle is the XDR_IPC_BUFFER_SIZE : [dec] .	The size of the IPC message that was received is out of bounds	XDR_DDIS_COMPONENT	"We were not meant to get the IPC message we did. The size of the IPC " "message is larger than the maximum size that can be handled. " "This is probably due to communication incompatibility issues between the " "active and the standby RPs. " "Please report it to your technical support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
XDR-3-MSGSIZEFAIL	3-Error	The IPC message size is out of bounds The ipc_msg_size is : [dec] while the maximum size we can handle is the XDR_IPC_BUFFER_SIZE : [dec] .	The size of the IPC message that was received is out of bounds	XDR_DDIS_COMPONENT	"We were not meant to get the IPC message we did. The size of the IPC " "message is larger than the maximum size that can be handled. " "This is probably due to communication incompatibility issues between the " "active and the standby RPs. " "Please report it to your technical support representative."
XDR-3-NONINCRSEQ	3-Error	Non-increasing maximum sequence [dec] was [dec] received from slot [chars]	-	-	-
XDR-3-NONINCRSEQ	3-Error	Non-increasing maximum sequence [dec] was [dec] received from slot [chars]	-	-	-
XDR-3-ONINT	3-Error	Invalid operation [chars] at interrupt level by XDR client [chars]	Invalid operation at interrupt level	XDR_DDIS_COMPONENT	"Copy the message exactly as it appears and report it to your technical " "support representative."
XDR-3-ONINT	3-Error	Invalid operation [chars] at interrupt level by XDR client [chars]	Invalid operation at interrupt level	XDR_DDIS_COMPONENT	"Copy the message exactly as it appears and report it to your technical " "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
XDR3-CLIENTSUNCCAL	3-Error	ISSU negotiation failed for XDR client [chars] slot [chars] reason: [chars]	ISSU negotiation failed for a core XDR client. XDR on this and the remote slot cannot interoperate in SSO mode. Syncing of information to/from this slot will not happen for any XDR client.	XDR_DDIS_COMPONENT	"Copy the message exactly as it appears and report it to your technical " "support representative."
XDR3-CLIENTSUNCCAL	3-Error	ISSU negotiation failed for XDR client [chars] slot [chars] reason: [chars]	ISSU negotiation failed for a core XDR client. XDR on this and the remote slot cannot interoperate in SSO mode. Syncing of information to/from this slot will not happen for any XDR client.	XDR_DDIS_COMPONENT	"Copy the message exactly as it appears and report it to your technical " "support representative."
XDR-3-PULLSENDFAIL	3-Error	Sending data for pull client [chars] to [chars] failed due to slots [chars] not being in group 0x[hec] of slots [chars]	-	-	-
XDR-3-PULLSENDFAIL	3-Error	Sending data for pull client [chars] to [chars] failed due to slots [chars] not being in group 0x[hec] of slots [chars]	-	-	-
XDR-3-XDRIPC	3-Error	XDR IPC error on multicast-group 0x[hec] due to [chars].	A general IPC related error occurred which may prevent transfer of data to other peers using the IPC mechanism	XDR_DDIS_COMPONENT	"Get the output of \"show xdr multicast\" immediately after this error. " "Copy the message exactly as it appears and report it to your technical " "support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
XDR-3-XDRIPC	3-Error	XDR IPC error on multicast-group 0x[hec] due to [chars].	A general IPC related error occurred which may prevent transfer of data to other peers using the IPC mechanism	XDR_DDIS_COMPONENT	"Get the output of \"show xdr multicast\" immediately after this error. \"Copy the message exactly as it appears and report it to your technical \"support representative."
<del>XDR-3-XDRMCASTJOIN</del>	3-Error	XDR peer [chars] bind to group [chars] was bound to [chars]: [chars]	-	-	-
<del>XDR-3-XDRMCASTJOIN</del>	3-Error	XDR peer [chars] bind to group [chars] was bound to [chars]: [chars]	-	-	-
<del>XDR-3-XDRMCASTJOIN</del>	3-Error	Invalid XDR multicast group for slots [chars]: [chars]	-	-	-
<del>XDR-3-XDRMCASTJOIN</del>	3-Error	Invalid XDR multicast group for slots [chars]: [chars]	-	-	-
XDR-3-XDRMCASTJOIN	3-Error	Attempt to join [chars] to [chars] failed because client [chars] returned an error	Internal error. May result in unpredictable behaviour.	XDR_DDIS_COMPONENT	"Get the output of \"show xdr multicast\" \"show xdr client all\" and \"show monitor event-trace xdr all\". \"Copy the message exactly as it appears and report it to your technical \"support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
XDR-3-XDRMCASTJOIN	3-Error	Attempt to join [chars] to [chars] failed because client [chars] returned an error	Internal error. May result in unpredictable behaviour.	XDR_DDISECOMPONENT	"Get the output of \"show xdr multicast\" \"show xdr client all\" and \"show monitor event-trace xdr all\". \"Copy the message exactly as it appears and report it to your technical \"support representative."
XDR-3-XDRMCASTJOINREQ	3-Error	Client [chars] returned an invalid response to a join request for groups [chars] and [chars]	Internal error. May result in unpredictable behaviour.	XDR_DDISECOMPONENT	"Get the output of \"show xdr multicast\" \"show xdr client all\" and \"show monitor event-trace xdr all\". \"Copy the message exactly as it appears and report it to your technical \"support representative."
XDR-3-XDRMCASTJOINREQ	3-Error	Client [chars] returned an invalid response to a join request for groups [chars] and [chars]	Internal error. May result in unpredictable behaviour.	XDR_DDISECOMPONENT	"Get the output of \"show xdr multicast\" \"show xdr client all\" and \"show monitor event-trace xdr all\". \"Copy the message exactly as it appears and report it to your technical \"support representative."
XDR-3-XDRNOMEM	3-Error	XDR failed to allocate memory during [chars] creation.	Allocation of memory by the XDR subsystem failed. This may result in an unpredictable behavior of XDR	XDR_DDISECOMPONENT	"Make sure that there is enough memory for the operations being performed \"by your machine. \"Copy the message exactly as it appears and report it to your technical \"support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
XDR-3-XDRNOMEM	3-Error	XDR failed to allocate memory during [chars] creation.	Allocation of memory by the XDR subsystem failed. This may result in an unpredictable behavior of XDR	XDR_DDIS_COMPONENT	"Make sure that there is enough memory for the operations being performed " "by your machine. " "Copy the message exactly as it appears and report it to your technical " "support representative."
XDR-3-XDROOS	3-Error	Received an out of sequence IPC message. Expected [dec] but got [dec] from slot [chars].	An out of sequence IPC message was received	XDR_DDIS_COMPONENT	"We weren't meant to get the IPC message we did. From this point onwards " "IPC can't be relied on. " "Copy the message exactly as it appears and report it to your technical " "support representative."
XDR-3-XDROOS	3-Error	Received an out of sequence IPC message. Expected [dec] but got [dec] from slot [chars].	An out of sequence IPC message was received	XDR_DDIS_COMPONENT	"We weren't meant to get the IPC message we did. From this point onwards " "IPC can't be relied on. " "Copy the message exactly as it appears and report it to your technical " "support representative."
XDR-4-ATTEMPCORR	4-Warning	Attempt to open the IPC ports failed. [chars]	XDR failed an attempt to open the IPC port to communicate to the specified peer	XDR_DDIS_COMPONENT	LOG_SID_NO_ACTION
XDR-4-ATTEMPCORR	4-Warning	Attempt to open the IPC ports failed. [chars]	XDR failed an attempt to open the IPC port to communicate to the specified peer	XDR_DDIS_COMPONENT	LOG_SID_NO_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
<del>XDRCLIENTSUBRCVIM</del>	6-Information	Failed to rcv_transform message - from slot [chars] XDR client [chars] context [dec]	Cannot perform ISSU receive transform. This is likely due to a failure in negotiation earlier or when one side of an ISSU-enabled XDR connection is out of sync with the other.	XDR_DDIS_COMPONENT	"Get the output of \"show xdr multicast\" \"show xdr client all\" and \"show issu message types [XDR client ISSU ID]\". \"Copy the message exactly as it appears and report it to your technical \"support representative."
<del>XDRCLIENTSUBRCVIM</del>	6-Information	Failed to rcv_transform message - from slot [chars] XDR client [chars] context [dec]	Cannot perform ISSU receive transform. This is likely due to a failure in negotiation earlier or when one side of an ISSU-enabled XDR connection is out of sync with the other.	XDR_DDIS_COMPONENT	"Get the output of \"show xdr multicast\" \"show xdr client all\" and \"show issu message types [XDR client ISSU ID]\". \"Copy the message exactly as it appears and report it to your technical \"support representative."
<del>XDRCLIENTSUBDIXIM</del>	6-Information	Failed to xmit_transform message - to slot [chars] XDR client [chars] context [dec]	Cannot perform ISSU transmit transform. This is likely due to a failure in negotiation earlier or when one side of an ISSU-enabled XDR connection is out of sync with the other.	XDR_DDIS_COMPONENT	"Get the output of \"show xdr multicast\" \"show xdr client all\" and \"show issu message types [XDR client ISSU ID]\". \"Copy the message exactly as it appears and report it to your technical \"support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
XDR6CLIENTISSUBADIXIEM	6-Information	Failed to xmit_transform message - to slot [chars] XDR client [chars] context [dec]	Cannot perform ISSU transmit transform. This is likely due to a failure in negotiation earlier or when one side of an ISSU-enabled XDR connection is out of sync with the other.	XDR_DDIS_COMPONENT	"Get the output of \"show xdr multicast\" \"show xdr client all\" and \"show issu message types [XDR client ISSU ID]\". \"Copy the message exactly as it appears and report it to your technical \"support representative.\""
XDR6CLIENTISSUNREG	6-Information	Failed to unregister session - XDR client [chars] slot [chars] reason [chars]	Unable to unregister this session. This will likely cause problems when reregistering and should be reported.	XDR_DDIS_COMPONENT	"Get the output of \"show xdr multicast\" \"show xdr client all\" and \"show issu message types [XDR client ISSU ID]\". \"Copy the message exactly as it appears and report it to your technical \"support representative.\""
XDR6CLIENTISSUNREG	6-Information	Failed to unregister session - XDR client [chars] slot [chars] reason [chars]	Unable to unregister this session. This will likely cause problems when reregistering and should be reported.	XDR_DDIS_COMPONENT	"Get the output of \"show xdr multicast\" \"show xdr client all\" and \"show issu message types [XDR client ISSU ID]\". \"Copy the message exactly as it appears and report it to your technical \"support representative.\""



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
XDR6CLENINOIRECONRP	6-Information	Client [chars] has registered on slot [chars] before RP.	XDR client has registered on non-RP card before RP card. If this has occurred while toggling the client's registration status rapidly then it may be a transient problem and will resolve itself. If not then the client's status may be unpredictable and ISSU negotiation if platform is ISSU-aware may not take place correctly.	XDR_DDIS_COMPONENT	"Verify whether the client's registration status is the same on both " "the RP and the card on which the problem is reported by comparing " "the output of 'show xdr client all' to see if the client is present or " "absent in BOTH. If so and no other error messages have been seen " "then this is a transient issue and no further action is required. " "Otherwise copy the message exactly as it appears and report it to " "your technical support representative."
XDR6CLENINOIRECONRP	6-Information	Client [chars] has registered on slot [chars] before RP.	XDR client has registered on non-RP card before RP card. If this has occurred while toggling the client's registration status rapidly then it may be a transient problem and will resolve itself. If not then the client's status may be unpredictable and ISSU negotiation if platform is ISSU-aware may not take place correctly.	XDR_DDIS_COMPONENT	"Verify whether the client's registration status is the same on both " "the RP and the card on which the problem is reported by comparing " "the output of 'show xdr client all' to see if the client is present or " "absent in BOTH. If so and no other error messages have been seen " "then this is a transient issue and no further action is required. " "Otherwise copy the message exactly as it appears and report it to " "your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
XDR6ISSUBADRCVIFM	6-Information	Failed to rcv_transform message - slot [chars] reason: [chars]	Unable to perform ISSU transform on incoming XDR header. Message will be ignored	XDR_DDIS_COMPONENT	"Get the output of \"show xdr multicast\" \"show xdr client all\" and \"show issu message types [XDR client ISSU ID]\". \"Copy the message exactly as it appears and report it to your technical \"support representative.\""
XDR6ISSUBADRCVIFM	6-Information	Failed to rcv_transform message - slot [chars] reason: [chars]	Unable to perform ISSU transform on incoming XDR header. Message will be ignored	XDR_DDIS_COMPONENT	"Get the output of \"show xdr multicast\" \"show xdr client all\" and \"show issu message types [XDR client ISSU ID]\". \"Copy the message exactly as it appears and report it to your technical \"support representative.\""
XDR6ISSUBADIXIFM	6-Information	Failed to xmit_transform message - slot [chars] reason [chars]	Unable to perform ISSU transform on outgoing XDR header. Message will be ignored	XDR_DDIS_COMPONENT	"Get the output of \"show xdr multicast\" \"show xdr client all\" and \"show issu message types [XDR client ISSU ID]\". \"Copy the message exactly as it appears and report it to your technical \"support representative.\""

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
XDR6ISSUBADIXIFM	6-Information	Failed to xmit_transform message - slot [chars] reason [chars]	Unable to perform ISSU transform on outgoing XDR header. Message will be ignored	XDR_DDIS_COMPONENT	"Get the output of \"show xdr multicast\" \"show xdr client all\" and \"show issu message types [XDR client ISSU ID]\". \"Copy the message exactly as it appears and report it to your technical \"support representative."
XDR6ISSUCLIENTABSENT	6-Information	XDR client [chars] absent on slot [chars]. Client functionality may be affected.	The remote slot doesn't support this ISSU client. The software will handle this by reducing client functionality locally to continue in SSO mode or by forcing the remote peer into RPR mode as appropriate. This is expected behaviour in ISSU-capable systems.	XDR_DDIS_COMPONENT	"No action required. This message just indicates that certain \"functionality may be reduced due to running different images together."
XDR6ISSUCLIENTABSENT	6-Information	XDR client [chars] absent on slot [chars]. Client functionality may be affected.	The remote slot doesn't support this ISSU client. The software will handle this by reducing client functionality locally to continue in SSO mode or by forcing the remote peer into RPR mode as appropriate. This is expected behaviour in ISSU-capable systems.	XDR_DDIS_COMPONENT	"No action required. This message just indicates that certain \"functionality may be reduced due to running different images together."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
XDR-6-XDRINVALIDHDR	6-Information	XDR for client [chars] dropped slots:[chars] from slot:[chars] context:[node]length:[node]	The XDR message was dropped for the reason given.	XDR_DDIS_COMPONENT	"If the failure was due to an invalid context for the CEF push client " "and occurred during an ISSU upgrade then it may be safely ignored. " "Otherwise: " LOG_STD_ACTION
XDR-6-XDRINVALIDHDR	6-Information	XDR for client [chars] dropped slots:[chars] from slot:[chars] context:[node]length:[node]	The XDR message was dropped for the reason given.	XDR_DDIS_COMPONENT	"If the failure was due to an invalid context for the CEF push client " "and occurred during an ISSU upgrade then it may be safely ignored. " "Otherwise: " LOG_STD_ACTION
XDR-6-XDRINVALIDHDR	6-Information	XDR ISSU negotiation message for client [chars] dropped	The XDR ISSU negotiation message was dropped for the reason given.	XDR_DDIS_COMPONENT	"If the message occurred during an ISSU upgrade then it may be " "safely ignored. Otherwise: " LOG_STD_ACTION
XDR-6-XDRINVALIDHDR	6-Information	XDR ISSU negotiation message for client [chars] dropped	The XDR ISSU negotiation message was dropped for the reason given.	XDR_DDIS_COMPONENT	"If the message occurred during an ISSU upgrade then it may be " "safely ignored. Otherwise: " LOG_STD_ACTION
XDR-6-XDRIPCPEER	6-Information	XDR IPC error occurred for peer in slot [chars] due to [chars][chars].	A general IPC related error occurred which may prevent transfer of data to other peers using the IPC mechanism	XDR_DDIS_COMPONENT	"Get the output of \"show xdr multicast\" and \"show xdr linecard\" " "immediately after this error. Copy the message exactly as it appears " "and report it to your technical support representative."

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
XDR-6-XDRIPCPEER	6-Information	XDR IPC error occurred for peer in slot [chars] due to [chars][chars].	A general IPC related error occurred which may prevent transfer of data to other peers using the IPC mechanism	XDR_DDIS_COMPONENT	"Get the output of \"show xdr multicast\" and \"show xdr linecard\" \" immediately after this error. Copy the message exactly as it appears \" and report it to your technical support representative."
XDR-6-XDRMCASTINIT	6-Information	XDR mcast subsystem initilisation error: [chars]	XDR non functional.	XDR_DDIS_COMPONENT	"A failure occured which prohibits the XDR client from registering with \"the core. \" Copy the message exactly as it appears and report it to your technical \" support representative."
XDR-6-XDRMCASTINIT	6-Information	XDR mcast subsystem initilisation error: [chars]	XDR non functional.	XDR_DDIS_COMPONENT	"A failure occured which prohibits the XDR client from registering with \"the core. \" Copy the message exactly as it appears and report it to your technical \" support representative."
XDR-6-XDRREGISTRATION	6-Information	XDR failed to register [chars] client due to [chars]	Failure to register the said XDR client.	XDR_DDIS_COMPONENT	"A failure occured which prohibits the XDR client from registering with \"the core. \" Copy the message exactly as it appears and report it to your technical \" support representative."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
XDR6XDRREGISTRATION	6-Information	XDR failed to register [chars] client due to [chars]	Failure to register the said XDR client.	XDR_DDIS_COMPONENT	"A failure occurred which prohibits the XDR client from registering with " "the core. " "Copy the message exactly as it appears and report it to your technical " "support representative."
XIPC-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
XIPC-3-LDP	3-Error	ERRMSG_NOFLAGS	-	-	-
XMCP4CLIENT_DENIED	4-Warning	Client [chars]/[chars] denied: [chars]	An external XMCP client connection was denied. This may be due to a valid configuration reason for example <del>&lt;GrBlldw#NGrBl&gt;</del> or an <del>&lt;GrBlldw#NGrBl&gt;</del> or it may indicate that a protection mechanism has been triggered - for example an authentication failure or DOS attack prevention	-	"Check that this is caused by configuration. If not " "and if the frequency of this message suggests that " "this may be malicious - contact your TAC security " "support immediately"
XMCP4CLIENT_DENIED	4-Warning	Client [chars]/[chars] denied: [chars]	An external XMCP client connection was denied. This may be due to a valid configuration reason for example <del>&lt;GrBlldw#NGrBl&gt;</del> or an <del>&lt;GrBlldw#NGrBl&gt;</del> or it may indicate that a protection mechanism has been triggered - for example an authentication failure or DOS attack prevention	-	"Check that this is caused by configuration. If not " "and if the frequency of this message suggests that " "this may be malicious - contact your TAC security " "support immediately"

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
XMCP4CLIENT_ERR_RSP	4-Warning	Received error response [node][chars] from client [chars]/[chars]	-	-	-
XMCP4CLIENT_ERR_RSP	4-Warning	Received error response [node][chars] from client [chars]/[chars]	-	-	-
XMCP5CLIENT_CHANGE	5-Notice	Client [chars]/[chars] is [chars]: [chars]	An XMCP client connected or disconnected.	-	LOG_STD_NOACTION
XMCP5CLIENT_CHANGE	5-Notice	Client [chars]/[chars] is [chars]: [chars]	An XMCP client connected or disconnected.	-	LOG_STD_NOACTION
XMPP-3-MEMORY	3-Error	[chars]	An IPv6 process could not be started. This machine will not be able to process any IPv6 packets.	ipv6	"Reduce other system activity to ease memory demands. If conditions " "warrant upgrade to a larger memory configuration."
XMPP-3-MEMORY	3-Error	[chars]	XMPP subsystem has experienced a problem getting the required\n\n memory to complete this operation.	xmpp	"Check system memory for other memory allocation errors and contact\n\n Technical support for problem resolution. In the absence of IOS errors\n\n upgrading the memory in the network device may be required."
XOS7XOS_DM_DISPATCH	7-Debug	xos_dm_dispatch API cannot be called that does not own the XDM xdm pid: [dec] current pid: [dec]	The xos_dm_dispatch API was called by a process that is not the owner of\n that XDM. Only process that create the XDM instance can own it.	infra-xoslib	"Please check your code and avoid invoking this API in a different process\n\n" "context."

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
XOS-7-XOS_DM_DISPATCH	7-Debug	xos_dm_dispatch API cannot be called that does not own the XDM xdm pid: [dec] current pid: [dec]	The xos_dm_dispatch API was called by a process that is not the owner of \n that XDM. Only process that create the XDM instance can own it.	infra-xoslib	"Please check your code and avoid invoking this API in a different process \n" "context."
XOS-7-XOS_DM_DISPATCH	7-Debug	xos_dm_dispatch API cannot be called that does not own the XDM xdm pid: [dec] current pid: [dec]	The xos_dm_dispatch API was called by a process that is not the owner of \n that XDM. Only process that create the XDM instance can own it.	infra-xoslib	"Please check your code and avoid invoking this API in a different process \n" "context."
XOS-7-XOS_DM_DISPATCH	7-Debug	xos_dm_dispatch API cannot be called that does not own the XDM xdm pid: [dec] current pid: [dec]	The xos_dm_dispatch API was called by a process that is not the owner of \n that XDM. Only process that create the XDM instance can own it.	infra-xoslib	"Please check your code and avoid invoking this API in a different process \n" "context."
XOS-7-XOS_DM_WAIT	7-Debug	xos_dm_wait API cannot be called by a process that does not own the XDM xdm pid: [dec] current pid: [dec]	The xos_dm_wait API was called by a process that is not the owner of that \n XDM. Only process that create the XDM instance can own it.	infra-xoslib	"Please check your code and avoid invoking this API in a different process \n" "context."
XOS-7-XOS_DM_WAIT	7-Debug	xos_dm_wait API cannot be called by a process that does not own the XDM xdm pid: [dec] current pid: [dec]	The xos_dm_wait API was called by a process that is not the owner of that \n XDM. Only process that create the XDM instance can own it.	infra-xoslib	"Please check your code and avoid invoking this API in a different process \n" "context."
XOS-7-XOS_DM_WAIT	7-Debug	xos_dm_wait API cannot be called by a process that does not own the XDM xdm pid: [dec] current pid: [dec]	The xos_dm_wait API was called by a process that is not the owner of that \n XDM. Only process that create the XDM instance can own it.	infra-xoslib	"Please check your code and avoid invoking this API in a different process \n" "context."



<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
XOS-7-XOS_DM_WAIT	7-Debug	xos_dm_wait API cannot be called by a process that does not own the XDM xdm pid: [dec] current pid: [dec]	The xos_dm_wait API was called by a process that is not the owner of that \n XDM. Only process that create the XDM instance can own it.	infra-xoslib	"Please check your code and avoid invoking this API in a different process \n" "context."
<del>XOS-7-XOS_DM_XDISPATCH</del>	7-Debug	xos_dm_xdispatch API cannot be called that does not own the XDM xdm pid: [dec] current pid: [dec]	The xos_dm_xdispatch API was called by a process that is not the owner of \n that XDM. Only process that create the XDM instance can own it.	infra-xoslib	"Please check your code and avoid invoking this API in a different process \n" "context."
<del>XOS-7-XOS_DM_XDISPATCH</del>	7-Debug	xos_dm_xdispatch API cannot be called that does not own the XDM xdm pid: [dec] current pid: [dec]	The xos_dm_xdispatch API was called by a process that is not the owner of \n that XDM. Only process that create the XDM instance can own it.	infra-xoslib	"Please check your code and avoid invoking this API in a different process \n" "context."
<del>XOS-7-XOS_DM_XDISPATCH</del>	7-Debug	xos_dm_xdispatch API cannot be called that does not own the XDM xdm pid: [dec] current pid: [dec]	The xos_dm_xdispatch API was called by a process that is not the owner of \n that XDM. Only process that create the XDM instance can own it.	infra-xoslib	"Please check your code and avoid invoking this API in a different process \n" "context."
<del>XOS-7-XOS_DM_XDISPATCH</del>	7-Debug	xos_dm_xdispatch API cannot be called that does not own the XDM xdm pid: [dec] current pid: [dec]	The xos_dm_xdispatch API was called by a process that is not the owner of \n that XDM. Only process that create the XDM instance can own it.	infra-xoslib	"Please check your code and avoid invoking this API in a different process \n" "context."
XOS-7-XOS_ONINT	7-Debug	XOS APIs cannot be called in a interrupt path	An XOS API was called in the interrupt path this is currently not supported.	infra-xoslib	"Please check your code and avoid using this API in the interrupt path"

<b>Facility-Severity-Mnemonic</b>	<b>Severity-Meaning</b>	<b>Message</b>	<b>Message-Explanation</b>	<b>Component</b>	<b>Recommended-Action</b>
XOS-7-XOS_ONINT	7-Debug	XOS APIs cannot be called in a interrupt path	An XOS API was called in the interrupt path this is currently not supported.	infra-xoslib	"Please check your code and avoid using this API in the interrupt path"
XOS-7-XOS_ONINT	7-Debug	XOS APIs cannot be called in a interrupt path	An XOS API was called in the interrupt path this is currently not supported.	infra-xoslib	"Please check your code and avoid using this API in the interrupt path"
XOS-7-XOS_ONINT	7-Debug	XOS APIs cannot be called in a interrupt path	An XOS API was called in the interrupt path this is currently not supported.	infra-xoslib	"Please check your code and avoid using this API in the interrupt path"
XOS7XOS_STUCK_TMR	7-Debug	XOS timer expired earlier than expected expiration time tree:[node]time:[dec].[dec]	The XOS timer handler was invoked earlier than expiration value of the \n timer	infra-xoslib	"Please check expiration timer value set on the timer. Also some OS \n" "infrastructures can roundup expiration time so that timer handler gets \n" "invoked earlier than expected "
XOS7XOS_STUCK_TMR	7-Debug	XOS timer expired earlier than expected expiration time tree:[node]time:[dec].[dec]	The XOS timer handler was invoked earlier than expiration value of the \n timer	infra-xoslib	"Please check expiration timer value set on the timer. Also some OS \n" "infrastructures can roundup expiration time so that timer handler gets \n" "invoked earlier than expected "

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
XOS7XOS_STUCK_TMR	7-Debug	XOS timer expired earlier than expected expiration time tree:[node]time:[dec].[dec]	The XOS timer handler was invoked earlier than expiration value of the \n timer	infra-xoslib	"Please check expiration timer value set on the timer. Also some OS \n" "infrastructures can roundup expiration time so that timer handler gets \n" "invoked earlier than expected "
XOS7XOS_STUCK_TMR	7-Debug	XOS timer expired earlier than expected expiration time tree:[node]time:[dec].[dec]	The XOS timer handler was invoked earlier than expiration value of the \n timer	infra-xoslib	"Please check expiration timer value set on the timer. Also some OS \n" "infrastructures can roundup expiration time so that timer handler gets \n" "invoked earlier than expected "
XXX-3-SBINIT	3-Error	Error initializing [chars] subblock data structure. [chars]	Initialization of the specified subblock data structure could not be accomplished.	flexible-netflow	LOG_STD_ACTION
YANGNRA3DISABLE_ONP	3-Error	Error disabling onep	An error has occurred when attempting to disable onep.	polaris-dmi-infra	LOG_STD_ACTION
YANGNRA3ENABLE_ONP	3-Error	Error enabling onep	An error has occurred when attempting to enable onep.	polaris-dmi-infra	LOG_STD_ACTION

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
ZONE-4-API	4-Warning	Zone [chars] [chars][chars] [chars] failed to notify the data plane	The notification of a zone operation has failed to update the data\n\ plane and as such the application of the zone information within the\n\ object will not be applied to the data plane. It is also possible\n\ that the common classification may fail to locate and bind to the\n\ zone rendering the configuration inconsistent in terms of\n\ application.	zone	show memory
ZONE-4-LICENSE	4-Warning	License smart enable and zone-license enable should be enabled first	The notification indicates that zone smart license\n\ should be enabled	zone	show running
ZONE-6-CONFIG	6-Information	Zone security [chars] is removed due to VRF config change on interface [chars]	The notification of a zone is removed from an interface\n\ due to a vrf is removed from the interface	zone	show running
-	-	-	-	-	-
-	3-Error	\ fmt	-	-	-
-	3-Error	\ fmt	-	-	-
-	3-Error	fmt \ syslog_	-	-	-
-	3-Error	fmt \ syslog_	-	-	-
-	3-Error	fmt \extern const struct message_ msg_ ## fac ## _ ## name	-	-	-
-	3-Error	fmt \extern const struct message_ msg_ ## fac ## _ ## name	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
-	3-Error	fmt \static message_stats * fac ##_ ## name ## _stat_redir_ptr	-	-	-
-	3-Error	fmt \static message_stats * fac ##_ ## name ## _stat_redir_ptr	-	-	-
-	3-Error		BULKSTAT Service Disabled	SRVNAME_BULKSTAT	SYSLOGDOC_NO_ACTION
-	3-Error		BULKSTAT Service Disabled	SRVNAME_BULKSTAT	SYSLOGDOC_NO_ACTION
-	3-Error		BULKSTAT Service Enabled	SRVNAME_BULKSTAT	SYSLOGDOC_NO_ACTION
-	3-Error		BULKSTAT Service Enabled	SRVNAME_BULKSTAT	SYSLOGDOC_NO_ACTION
-	4-Warning	0	-	-	-
-	4-Warning	0	-	-	-
-	4-Warning	fmt \extern const struct message_ msg_ ## fac ## _ ## name	-	-	-
-	4-Warning	fmt \static message_stats * fac ##_ ## name ## _stat_redir_ptr	-	-	-
-	4-Warning	fmt \static message_stats * fac ##_ ## name ## _stat_redir_ptr	-	-	-
-	4-Warning	fmt \static message_stats * fac ##_ ## name ## _stat_redir_ptr	-	-	-
-	4-Warning	fmt \static message_stats * fac ##_ ## name ## _stat_redir_ptr	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
-	4-Warning	fmt \static message_stats_ptr fac ## _ ## name ## _stat_redir_ptr __crb_sysrgn	-	-	-
-	4-Warning	fmt	-	-	-
-	4-Warning	fmt	-	-	-
-	4-Warning	fmt	-	-	-
-	4-Warning	fmt	-	-	-
-	4-Warning	fmt	-	-	-
-	4-Warning	fmt	-	-	-
-	4-Warning	fmt	-	-	-
-	4-Warning	fmt	-	-	SMART_LIC
-	4-Warning	fmt	-	-	SMART_LIC
-	4-Warning	-	Two devices with random MACs generated the same MAC address. \n\ The second device has been rejected.	SISF_COMP_NAME	"The second device will need to regenerate its random MAC."
-	4-Warning	-	Two devices with random MACs generated the same MAC address. \n\ The second device has been rejected.	SISF_COMP_NAME	"The second device will need to regenerate its random MAC."
-	4-Warning	-	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
-	4-Warning	-	-	ipv6	"A low rate of vetoed resolutions is not serious. \n\ If there is a high rate of vetos this might suggest that \n\ the link is under attack. Investigate the source of the \n\ packets driving these resolution requests"
-	4-Warning	-	-	ipv6	"A low rate of vetoed resolutions is not serious. \n\ If there is a high rate of vetos this might suggest that \n\ the link is under attack. Investigate the source of the \n\ packets driving these resolution requests"
-	4-Warning	-	A data packet notification has been received because a snooping policy with the data glean option is configured and the Source address of the packet is not currently in the Binding Table.	SISF_COMP_NAME	-
-	4-Warning	-	A data packet notification has been received because a snooping policy with the data glean option is configured and the Source address of the packet is not currently in the Binding Table.	SISF_COMP_NAME	-
-	5-Notice	fmt \extern C local_errmsg_t msg_ ## fac ## _ ## name	-	-	-

Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
-	5-Notice	fmt \extern C local_errmsg_t msg_ ## fac ## _ ## name	-	-	-
-	5-Notice	fmt \local_errmsg_t msg_ ## fac ## _ ## name = { #name	-	-	-
-	5-Notice	fmt \local_errmsg_t msg_ ## fac ## _ ## name = { #name	-	-	-
-	6-Information	authentication packet received on sessions with invalid config	authentication only supported for multihop BFD sessions	bfd	LOG_STD_ACTION
-	6-Information	authentication packet received on sessions with invalid config	authentication only supported for multihop BFD sessions	bfd	LOG_STD_ACTION
-	6-Information	Could not allocate valid session handle	session handle not allocated	bfd	LOG_STD_ACTION
-	6-Information	Could not allocate valid session handle	session handle not allocated	bfd	LOG_STD_ACTION
-	6-Information	packet received failed authentication	packet authentication failed	bfd	LOG_STD_ACTION
-	6-Information	packet received failed authentication	packet authentication failed	bfd	LOG_STD_ACTION
-	6-Information	fmt { \ size_t len = strlen	-	-	-
-	6-Information	fmt { \ size_t len = strlen	-	-	-
-	6-Information	fmt { \ size_t len = strlen	-	-	-
-	6-Information	fmt { \ size_t len = strlen	-	-	-
-	6-Information	fmt \extern const struct message_ msg_ ## fac ## _ ## name	-	-	-



Facility-Severity-Mnemonic	Severity-Meaning	Message	Message-Explanation	Component	Recommended-Action
-	6-Information	fmt \static message_stats * fac ##_ ## name ## _stat_redir_ptr	-	-	-
-	6-Information	fmt printf	-	-	-
-	6-Information	fmt printf	-	-	-

## Additional References

### Technical Assistance

When the recommended action of an error message advises that you contact Cisco technical support, open a case with the Cisco Technical Assistance Center (TAC).

Description	Link
<p>The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.</p> <p>To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.</p> <p>Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.</p>	<a href="https://www.cisco.com/c/en/us/support/index.html">https://www.cisco.com/c/en/us/support/index.html</a>

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

All printed copies and duplicate soft copies of this document are considered uncontrolled. See the current online version for the latest version.

Cisco has more than 200 offices worldwide. Addresses and phone numbers are listed on the Cisco website at [www.cisco.com/go/offices](http://www.cisco.com/go/offices).

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <https://www.cisco.com/c/en/us/about/legal/trademarks.html>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1721R)

© Cisco Systems, Inc. All rights reserved.



**Americas Headquarters**  
Cisco Systems, Inc.  
San Jose, CA 95134-1706  
USA

**Asia Pacific Headquarters**  
CiscoSystems(USA)Pte.Ltd.  
Singapore

**Europe Headquarters**  
CiscoSystemsInternationalBV  
Amsterdam,TheNetherlands

Cisco has more than 200 offices worldwide. Addresses, phone numbers, and fax numbers are listed on the Cisco Website at [www.cisco.com/go/offices](http://www.cisco.com/go/offices).