



Transrating

Transrating is a process of configuring a different packetization for a voice codec. For example, transrating G.729 20ms to G.729 30ms.

- [Configuring Transrating for a Codec, on page 1](#)

Configuring Transrating for a Codec

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **dial-peer voice *number* voip**
4. **codec *codec-name* bytes *voice-payload-size* [fixed-bytes]**
5. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Device> enable	Enables privileged EXEC mode. <ul style="list-style-type: none">• Enter your password if prompted.
Step 2	configure terminal Example: Device> configure terminal	Enters global configuration mode.
Step 3	dial-peer voice <i>number</i> voip Example: Device(config)# dial-peer voice 1 voip	Enters dial peer configuration mode for the specified VoIP dial peer.
Step 4	codec <i>codec-name</i> bytes <i>voice-payload-size</i> [fixed-bytes] Example: Device(config-dial-peer)# codec g729r8 bytes 30 fixed-byte	Configures a different packetizations for a voice codec.

	Command or Action	Purpose
Step 5	end Example: Device(config-dial-peer) # end	Exits to privileged EXEC mode.