



Configuring Dying Gasp

First Published: March 2012
Last Revised: November 2012
Part Number: OL-26940-02

This document describes the Dying-Gasp feature which supports the host Connected Grid Router (CGR) 2010 or Connected Grid Switch (CGS) 2520 by enabling it to send *dying-gasp* messages through SNMP, syslog, or Ethernet-OAM (Operations Administration and Maintenance) to report the abrupt loss of power to the host platform.

Tell Us What You Think



Send your feedback about this document directly to the Connected Energy Documentation Team.

[Connected Grid Documentation Feedback Form](#)

Supported Products

Feature	Hardware	Minimum Software Release
Dying Gasp	Cisco CGR 2010	Cisco IOS Release 15.2(3)T
	Cisco CGS 2520	Cisco IOS Release 15.0(2)XE



Americas Headquarters:
Cisco Systems, Inc., 170 West Tasman Drive, San Jose, CA 95134-1706 USA

Dying-Gasp Overview

Dying Gasp resides on a hardware component on the High-performance WAN Interface Card (HWIC) and supports the Fast Ethernet and Gigabit Ethernet interfaces. The networking devices rely on a temporary back-up power supply on a capacitor, that allows for a graceful shutdown and the generation of the dying-gasp message. This temporary power supply is designed to last from 10 to 20 milliseconds to perform these tasks.

Dying-Gasp packets are created when you configure the host by using the **dying-gasp** configuration command. The **show dying-gasp packets** command displays the detailed information about the created packets.

The SNMP server for the SNMP Dying-Gasp message is specified through the **snmp-server host** configuration command. The syslog server sending the syslog Dying-Gasp message is specified through the **logging host hostname-or-ipaddress transport udp**. The Ethernet-OAM Dying-Gasp packets are created for interfaces where Ethernet-OAM is enabled.

Dying-Gasp packets can be sent to a maximum number of 5 servers for each notification type.

Configuring Dying-Gasp

dying-gasp

To enable dying-gasp notification through syslog, SNMP trap, or Ethernet OAM, use the **dying-gasp** command:

Command Syntax	Description
dying-gasp primary {syslog snmp-trap ethernet-oam} secondary {syslog snmp-trap ethernet-oam}	<ul style="list-style-type: none"> • dying-gasp—Dying-Gasp configuration command • primary—Dying-Gasp primary notification • secondary—Dying-Gasp secondary notification • ethernet-oam—Enable Ethernet-OAM notification • snmp-trap—Enable trap notification sent to SNMP server • syslog—Enable system logger

show dying-gasp {status | packets}

The following are descriptions of the **show dying-gasp** command keywords:

Command Syntax	Description
show dying-gasp {status packets [snmp-trap syslog ethernet-oam]}	<ul style="list-style-type: none"> • dying-gasp—Dying-Gasp information • status—Dying-Gasp configuration status • packets—Detailed information about the created packets • snmp-trap—Dying-Gasp SNMP trap information • syslog—Dying-Gasp Syslog message information • ethernet-oam—Dying-Gasp Ethernet OAM message information

show dying-gasp Output Examples

The following is sample output for the **show dying-gasp status** command on a CGR 2010:

```
Router# show dying-gasp status
Dying Gasp Configuration
SNMP Trap Enabled
Syslog Enabled
Ethernet OAM Disabled
```

The following is sample output for the **show dying-gasp status** command on a CGS 2520:

```
Switch# show dying-gasp status
Dying Gasp Configuration
SNMP Trap Enabled (secondary)
Syslog Enabled (primary)
Ethernet OAM Disabled
Switch#
```

The following is sample output for the **show dying-gasp packets snmp-trap** command:

```
Router# show dying-gasp packets snmp-trap
SNMP Trap packet for server 3.1.1.2, link type IP
Interface, via GigabitEthernet0/0, local IP address 10.2.2.9
Encap type is ARPA, local hardware address 0022.bdd4.2f48
Next hop IP address 10.2.2.8, next hop hardware address 0000.0c07.ac09

SNMP Trap packet for server 3.1.1.4, link type IP
Interface, via GigabitEthernet0/1, local IP address 20.2.2.7
Encap type is ARPA, local hardware address 0012.001a.2f08
Next hop IP address 20.2.2.8, next hop hardware address 0cd0.0c02.ac10
```

debug dying-gasp

To turn on debugging for dying gasp, issue the **debug dying-gasp** command:

Command Syntax	Description
debug dying-gasp	dying-gasp —Dying Gasp debug information

Related Documents

These documents contains additional software configuration information for the Cisco CGR 2010 and Cisco CGS 2520 Switch:

- Cisco Connected Grid 2010 Router Software Configuration Guides:
http://www.cisco.com/en/US/products/ps10977/products_installation_and_configuration_guides_list.html
- Cisco Connected Grid 2010 Router Release Notes:
http://www.cisco.com/en/US/products/ps10977/prod_release_notes_list.html
- Cisco 2520 Connected Grid Switch Configuration Guides:
http://www.cisco.com/en/US/products/ps10978/tsd_products_support_configure.html
- Cisco Connected Grid Modules documentation:
www.cisco.com/go/cg-modules

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as an RSS feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service. Cisco currently supports RSS Version 2.0.

This document is to be used in conjunction with the documents listed in the “Related Documents” section.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: www.cisco.com/go/trademarks. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

No combinations are authorized or intended under this document.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

© 2012 Cisco Systems, Inc. All rights reserved.