



Preface	v
Audience	v
Document Organization	v
Document Conventions	vi
Related Documentation	vii
Cisco Virtual Security Gateway Documentation	vii
Cisco Virtual Network Management Center Documentation	vii
Cisco Nexus 1000V Series Switch Documentation	viii
Obtaining Documentation and Submitting a Service Request	viii

CHAPTER 1

Cisco Virtual Security Gateway Overview	1-1
Information About the Cisco Virtual Security Gateway	1-1
Overview	1-1
Product Architecture	1-2
Trusted Multitenant Access	1-4
Dynamic (Virtualization-Aware) Operation	1-4
Cisco Virtual Security Gateway Configuration for the Network	1-5
Setting Up Cisco VSGs and VLANs	1-5
Cisco VSG Configuration Overview	1-6
Cisco Nexus 1000V Series Switch VSM	1-7
Port Profile	1-7
Virtual Security Gateway	1-7
Security Profile	1-7
Firewall Policy	1-8
Service Firewall Logging	1-9
Sequence in Configuring a Cisco VSG	1-9

CHAPTER 2

Cisco Virtual Security Gateway Command-Line Interface	2-1
Information About the CLI Prompt	2-1
Command Modes	2-2
Information About Command Modes	2-2
EXEC Command Mode	2-3
Global Configuration Command Mode	2-3

- Exiting a Configuration Mode 2-3
- Command Mode Summary 2-4
- Saving CLI Configuration Changes 2-4
 - Running Configuration 2-4
 - Startup Configuration 2-4
 - Copying the Running Configuration to the Startup Configuration 2-5
- Special Characters 2-5
- Keystroke Shortcuts 2-5
- Abbreviating Commands 2-7
- Using the no Form of a Command 2-7
- Using Help 2-7

CHAPTER 3

Configuring the Cisco Virtual Security Gateway Port Profile on the Cisco Nexus 1000V Series Switch 3-1

- Configuring the Cisco VSG Port Profile on the Cisco Nexus 1000V Series Switch VSM for Protection from Service Loss 3-1
- Verifying the Cisco VSG Configuration 3-4
- Where to Go Next 3-4

CHAPTER 4

Cisco Virtual Security Gateway System Management 4-1

- Information About VSG System Management 4-1
- Changing the Cisco VSG Instance Name 4-2
- Configuring a Message of the Day 4-2
- Verifying the Configuration 4-3
 - Verifying the Software and Hardware Versions 4-3
 - Verifying the Running Configuration 4-4
 - Comparing the Startup and Running Configurations 4-6
 - Displaying Interface Configurations 4-7
 - Displaying a Brief View of a Specific Interface Configuration 4-7
 - Displaying a Detailed View of a Specific Interface Configuration 4-8
 - Displaying a Brief View of All Interfaces 4-9
 - Verifying the Running Configuration for All Interfaces 4-9
- Saving a Configuration 4-10
- Erasing a Configuration 4-11
- Displaying a Cisco VSG Instance 4-11
- Navigating the File System 4-12
 - Specifying File Systems 4-12
 - Identifying Your Current Working Directory 4-13

Changing Your Directory	4-13
Listing the Files in a File System	4-14
Identifying Available File Systems for Copying Files	4-15
Using Tab Completion	4-16
Copying and Backing Up Files	4-17
Creating a Directory	4-18
Removing an Existing Directory	4-18
Moving Files	4-19
Deleting Files or Directories	4-19
Compressing Files	4-20
Uncompressing Files	4-21
Directing Command Output to a File	4-22
Verifying a Configuration File Before Loading	4-23
Reverting to a Previous Configuration	4-24
Displaying Files	4-24
Displaying File Contents	4-25
Displaying Directory Contents	4-25
Displaying File Checksums	4-26
Displaying the Last Lines in a File	4-27
Displaying the Current User Access	4-27
Sending a Message to Users	4-28

CHAPTER 5**Cisco Virtual Security Gateway High Availability 5-1**

Information About High Availability	5-1
Redundancy	5-2
Isolation of Processes	5-2
Cisco VSG Failover	5-3
System-Control Services	5-3
System Manager	5-4
Persistent Storage Service	5-4
Message and Transaction Service	5-4
HA Policies	5-4
Cisco VSG HA Pairs	5-5
Cisco VSG Roles	5-5
HA Pair States	5-5
Cisco VSG HA Pair Synchronization	5-5
Cisco VSG HA Pair Failover	5-6
Failover Characteristics	5-6

- Automatic Failover 5-6
- Manual Failover 5-7
- Cisco VSG HA Guidelines and Limitations 5-7
- Changing the Cisco VSG Role 5-7
- Configuring a Failover 5-9
 - Guidelines and Limitations 5-9
 - Verifying that a Cisco VSG Pair is Ready for a Failover 5-9
 - Manually Switching the Active Cisco VSG to Standby 5-10
- Assigning IDs to HA Pairs 5-12
- Pairing a Second Cisco VSG with an Active Cisco VSG 5-13
 - Changing the Standalone Cisco VSG to a Primary Cisco VSG 5-13
 - Verifying the Change to a Cisco VSG HA Pair 5-15
- Replacing the Standby Cisco VSG in an HA Pair 5-15
- Replacing the Active Cisco VSG in an HA Pair 5-16
- Verifying HA Status 5-17

CHAPTER 6

Cisco Virtual Security Gateway Firewall Profiles and Policy Objects 6-1

- Information About Cisco VSG Firewall Policy Objects 6-1
- Cisco VSG Prerequisites, Guidelines, and Limitations 6-1
- Default Settings 6-2
- Cisco VSG Firewall Policy Objects 6-2
 - Zones 6-3
 - Object Groups 6-3
 - Rules 6-3
 - Policies 6-4
 - Cisco Virtual Security Gateway Attributes 6-4
 - Information About Attribute Name Notations 6-4
 - Attribute Classes 6-5
 - Security Profiles 6-7
 - Viewing Security Profiles and Policies on the Cisco VNMC and the Cisco VSG 6-8
- Service Firewall Logging 6-10
- Verifying the Cisco VSG Configuration 6-11
- Configuration Limits 6-12

INDEX