



Preface

This preface describes the audience, organization, and conventions of the *Cisco Virtual Security Gateway for Microsoft Hyper-V Command Reference, Release 5.2(1)VSG2(1.1a)*. It also provides information on how to obtain the related documentation.

This preface includes the following sections:

- [Audience, page xi](#)
- [Organization, page xi](#)
- [Document Conventions, page xii](#)
- [Documentation Feedback, page xii](#)
- [Obtaining Documentation and Submitting a Service Request, page xiii](#)

Audience

This publication is for network administrators with the following experience and knowledge:

- An understanding of virtualization
- Microsoft SCVMM
- Virtual machines

Organization

This document is organized into the following chapters:

Chapter and Title	Description
Chapter 1, “Cisco Nexus 1000V Series Switch Commands”	Provides information about the Cisco VSG commands found on the Cisco Nexus 1000V Series switch and the Cisco Cloud Services Platform networking appliance.
Chapter 2, “Cisco Virtual Security Gateway Commands”	Provides information about Cisco VSG commands.
Chapter 3, “Cisco Virtual Security Gateway Show Commands”	Provides information about Cisco VSG show commands.

Document Conventions

Command descriptions use these conventions:

Convention	Description
boldface font	Commands and keywords are in boldface.
<i>italic font</i>	Arguments for which you supply values are in italics.
[]	Elements in square brackets are optional.
[x y z]	Optional alternative keywords are grouped in brackets and separated by vertical bars.
string	A nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.

Screen examples use these conventions:

Convention	Description
screen font	Terminal sessions and information that the switch displays are in screen font.
boldface screen font	Information you must enter is in boldface screen font.
<i>italic screen font</i>	Arguments for which you supply values are in italic screen font.
< >	Nonprinting characters, such as passwords, are in angle brackets.
[]	Default responses to system prompts are in square brackets.
!, #	An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.

This document uses the following conventions:



Note

Means reader *take note*. Notes contain helpful suggestions or references to material not covered in the manual.



Caution

Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.



Tip

Means the following information will help you solve a problem.

Documentation Feedback

To provide technical feedback on this document, or to report an error or omission, please send your comments to vsg-docfeedback@cisco.com. We appreciate your feedback.

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as a Really Simple Syndication (RSS) feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service and Cisco currently supports RSS Version 2.0.

