



Cisco MDS 9000 Series Intelligent Storage Services Configuration Guide, Release 9.x

First Published: 2022-09-02

Last Modified: 2023-08-18

Americas Headquarters

Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
<http://www.cisco.com>
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

All printed copies and duplicate soft copies of this document are considered uncontrolled. See the current online version for the latest version.

Cisco has more than 200 offices worldwide. Addresses and phone numbers are listed on the Cisco website at www.cisco.com/go/offices.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <https://www.cisco.com/c/en/us/about/legal/trademarks.html>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1721R)

© 2023 Cisco Systems, Inc. All rights reserved.



CONTENTS

Full Cisco Trademarks with Software License ?

PREFACE

Preface	v
Audience	v
Document Conventions	v
Related Documentation	vi
Communications, Services, and Additional Information	vi

CHAPTER 1

Change Summary	1
-----------------------	----------

CHAPTER 2

Intelligent Storage Services Overview	3
SCSI	3
Fibre Channel Write Acceleration	3

CHAPTER 3

Configuring SCSI Flow Services and Statistics	5
SCSI Flow Services	5
About SCSI Flow Services	5
SCSI Flow Manager	6
SCSI Flow Configuration Client	6
SCSI Flow Data Path Support	6
SCSI Flow Services Configuration	6
About Intelligent Storage Services	6
Enabling SCSI Flow Services	7
Enabling SCSI Flow Configuration Distribution	8
Configuring SCSI Flow Identifiers	8
SCSI Flow Statistics	9

- About SCSI Flow Statistics 9
- Configuring SCSI Flow Statistics 10
 - Enabling SCSI Flow Statistics 10
 - Clearing SCSI Flow Statistics 10
- Displaying SCSI Flow Services Information 10
- Default Settings 13

CHAPTER 4

- Configuring Fibre Channel Write Acceleration 15**
 - About Fibre Channel Write Acceleration 15
 - Enabling Fibre Channel Write Acceleration 16
 - Displaying Fibre Channel Write Acceleration Information 17
 - Default Settings 18



Preface

This preface describes the audience, organization of, and conventions used in the Cisco MDS 9000 Series Configuration Guides. It also provides information on how to obtain related documentation, and contains the following chapters:

- [Audience, on page v](#)
- [Document Conventions, on page v](#)
- [Related Documentation, on page vi](#)
- [Communications, Services, and Additional Information, on page vi](#)

Audience

To use this installation guide, you need to be familiar with electronic circuitry and wiring practices, and preferably be an electronic or electromechanical technician.

Document Conventions

This document uses the following conventions:



Note Means *reader take note*. Notes contain helpful suggestions or references to material not covered in the manual.



Caution Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.

Warnings use the following conventions:



Warning This warning symbol means danger. You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents. Use the statement number provided at the end of each warning to locate its translation in the translated safety warnings that accompanied this device. Statement 1071.

Related Documentation

The documentation set for the Cisco MDS 9000 Series Switches includes the following documents.

Release Notes

<http://www.cisco.com/c/en/us/support/storage-networking/mds-9000-nx-os-san-os-software/products-release-notes-list.html>

Regulatory Compliance and Safety Information

<http://www.cisco.com/c/en/us/td/docs/switches/datacenter/mds9000/hw/regulatory/compliance/RCSI.html>

Compatibility Information

<http://www.cisco.com/c/en/us/support/storage-networking/mds-9000-nx-os-san-os-software/products-device-support-tables-list.html>

Installation and Upgrade

<http://www.cisco.com/c/en/us/support/storage-networking/mds-9000-nx-os-san-os-software/products-installation-guides-list.html>

Configuration

<http://www.cisco.com/c/en/us/support/storage-networking/mds-9000-nx-os-san-os-software/products-installation-and-configuration-guides-list.html>

CLI

<http://www.cisco.com/c/en/us/support/storage-networking/mds-9000-nx-os-san-os-software/products-command-reference-list.html>

Troubleshooting and Reference

<http://www.cisco.com/c/en/us/support/storage-networking/mds-9000-nx-os-san-os-software/tsd-products-support-troubleshoot-and-alerts.html>

To find a document online, use the Cisco MDS NX-OS Documentation Locator at:

http://www.cisco.com/c/en/us/td/docs/storage/san_switches/mds9000/roadmaps/doclocator.html

Communications, Services, and Additional Information

- To receive timely, relevant information from Cisco, sign up at [Cisco Profile Manager](#).
- To get the business impact you're looking for with the technologies that matter, visit [Cisco Services](#).
- To submit a service request, visit [Cisco Support](#).
- To discover and browse secure, validated enterprise-class apps, products, solutions and services, visit [Cisco Marketplace](#).
- To obtain general networking, training, and certification titles, visit [Cisco Press](#).
- To find warranty information for a specific product or product family, access [Cisco Warranty Finder](#).

Cisco Bug Search Tool

[Cisco Bug Search Tool](#) (BST) is a web-based tool that acts as a gateway to the Cisco bug tracking system that maintains a comprehensive list of defects and vulnerabilities in Cisco products and software. BST provides you with detailed defect information about your products and software.



CHAPTER 1

Change Summary

There are no new features in the Cisco MDS 9000 Family NX-OS Intelligent Storage Services Configuration Guide for Cisco MDS NX-OS Release 8.1(1).



CHAPTER 2

Intelligent Storage Services Overview

The Cisco MDS 9000 NX-OS software supports intelligent storage services that enable efficient storage area network administration. Intelligent storage services are features that are available on the Storage Services Module (SSM) such as the Small Computer System Interface (SCSI) flow services, SCSI flow statistics, and Fibre Channel Write Acceleration (FC-WA).

These features identify the SCSI I/O flow for a specified initiator-target pair. This information is used by the FC-WA feature to gather advanced I/O statistics for a specified initiator-target pair. The FC-WA feature decreases the latency of an I/O over long distances. The advanced I/O statistics that are collected can be used to evaluate the storage performance for the initiator-target pair.

This chapter includes the following sections:

- [SCSI, on page 3](#)
- [Fibre Channel Write Acceleration, on page 3](#)

SCSI

The Small Computer System Interface (SCSI) feature offers a better utilization of the storage network resources and eliminate the need for separate parallel WAN and MAN infrastructure. Users can connect hosts to storage networks on existing IP networks. Since this feature utilizes the TCP/IP for data transfer, the data is existing IP-based host connections such as Ethernet.

The chapters in this guide describe the following features:

- **SCSI Flow Services**—A SCSI flow service used by a SCSI initiator and a target. The SCSI flow services provide enhanced features for SCSI flows, such as write acceleration and flow monitoring for statistics gathering on an SSM.
- **SCSI Flow Statistics**—These are the statistics that can be collected for any combination of a SCSI initiator and a target. Statistics that be collected include SCSI reads, SCSI writes, SCSI commands, and error statistics.

For information on configuring SCSI flow services and statistics, see

Fibre Channel Write Acceleration

Fibre Channel Write Acceleration (FC-WA) minimizes application latency or reduces transactions per second over long distances. For synchronous data replication, FC-WA increases the distance of replication or reduces

effective latency to improve performance. To take advantage of this feature, both the initiator and target devices must be directly attached to an SSM.

For information on configuring Fibre Channel Write Acceleration, see



CHAPTER 3

Configuring SCSI Flow Services and Statistics

This chapter describes the Intelligent Storage Services features, SCSI flow services, and SCSI flow statistics, which are supported on the Storage Services Module (SSM).

This chapter includes the following sections:

- [SCSI Flow Services, on page 5](#)
- [SCSI Flow Statistics, on page 9](#)
- [Displaying SCSI Flow Services Information, on page 10](#)
- [Default Settings, on page 13](#)

SCSI Flow Services

An SCSI initiator and target combination is an SCSI flow. SCSI flow services provide enhanced features for SCSI flows, such as write acceleration and flow monitoring for statistics obtained on an SSM.

This section includes the following topics:

About SCSI Flow Services

The SCSI flow services functional architecture consists of the following components:

- SCSI flow manager (SFM) on the supervisor—The SFM resides on a supervisor module and handles the configuration of SCSI flows, validating them and relaying configuration information to the appropriate SSM. It also handles any dynamic changes to the status of the SCSI flow due to external events and registers changes that occur due to various operations.
- SCSI flow configuration CLI on the supervisor—The SFCC resides on the CPP of the SSM. It receives flow configuration requests from the SFM, programs the DPP corresponding to the initiator and target port interfaces, and responds to the SFM with the status of the configuration request.
- SCSI flow configuration client on the Control Path Processor (CPP) of an SSM.
- SCSI flow feature set support on the Data Path Processor (DPP) of an SSM—The DPP on the SSM examines all the messages between the initiator and target and provides SCSI flow features, such as Fibre Channel write acceleration and statistics monitoring.



Note The SCSI target and initiator must be connected to different SSMs on different switches.



Note For statistics monitoring, the target device is not required to be connected to an SSM.

SCSI Flow Manager

The SCSI flow manager (SFM) resides on a supervisor module and handles the configuration of SCSI flows, validating them and relaying configuration information to the appropriate SSM. It also handles any dynamic changes to the status of the SCSI flow due to external events. The SFM registers events resulting from operations, such as port up or down, VSAN suspension, and zoning that affects the SCSI flow status, and updates the flow status and configuration accordingly.

The SFM on the initiator communicates to its peer on the target side using Cisco Fabric Services (CFS). Peer communication allows the initiator SFM to validate target parameters and program information on the target side.

SCSI Flow Configuration Client

A SCSI flow configuration client (SFCC) resides on the CPP of the SSM. It receives flow configuration requests from the SFM, programs the DPP corresponding to the initiator and target port interfaces, and responds to the SFM with the status of the configuration request.

SCSI Flow Data Path Support

The DPP on the SSM examines all the messages between the initiator and target and provides SCSI flow features such as Fibre Channel write acceleration and statistics monitoring.

SCSI Flow Services Configuration

A SCSI flow specification consists of the following attributes:

- SCSI flow identifier
- VSAN identifier
- SCSI initiator port WWN
- SCSI target port WWN
- Flow feature set consisting of Fibre Channel Write Acceleration and statistics monitoring.

The SCSI flow specification is a distributed configuration because the SCSI initiator and the target might be physically connected to SSMs on two different switches located across the fabric. The configuration does not require information to identify either the switch name or the SSM slot location for either the initiator or the target. The manual SCSI flow configuration is performed only at the initiator side. This simplifies the configuration process. The initiator switch sends the configuration to the SFM on the target switch using CFS. No SCSI flow configuration is necessary on the target switch.

About Intelligent Storage Services

Intelligent Storage Services are features supported on the Storage Services Module (SSM). Intelligent Storage Services supported in Cisco MDS SAN-OS Release 2.0(2b) and later, or Cisco NX-OS 4.1.(1) include the following:

- SCSI flow services

- SCSI flow statistics

In Cisco MDS SAN-OS Release 2.1(1a) or later, or Cisco NX-OS 4.1(1), you can provision a subset of the ports for an SSM feature. The port range must be a multiple of four (for example fc4/1 through fc4-12). You can enable SCSI flow services either on the entire SSM or on groups of four interfaces.

Enabling SCSI flow services on interfaces has the following restrictions:

- The fewest number of interfaces that you can enable is four. You can specify fc1 through fc4, but not fc1 through fc2.
- The first interface in the group must be 1, 5, 9, 13, 17, 21, 25, or 29. You can specify fc5 through fc8, but not fc7 through fc10.
- The groups of four interfaces do not need to be consecutive. You can specify fc1 through fc8 and fc17 through fc20.



Note Fibre Channel Write Acceleration can only be provisioned on the entire SSM, not a group of interfaces on the SSM.

Enabling SCSI Flow Services

SUMMARY STEPS

1. switch# **config t**
2. switch(config)# **ssm enable feature scsi-flow module 2**
3. switch(config)# **no ssm enable feature scsi-flow module 2**
4. switch(config)# **no ssm enable feature scsi-flow force module 2**
5. switch(config)# **ssm enable feature scsi-flow interface fc 2/5 - 8**
6. switch(config)# **no ssm enable feature scsi-flow interface fc 2/5 - 8**
7. switch(config)# **no ssm enable feature scsi-flow force interface fc 2/5 - 8**

DETAILED STEPS

	Command or Action	Purpose
Step 1	switch# config t Example: switch(config)#	Enters configuration mode.
Step 2	switch(config)# ssm enable feature scsi-flow module 2	Enables SCSI flow services on the SSM in slot 2.
Step 3	switch(config)# no ssm enable feature scsi-flow module 2	Disables SCSI flow services on the SSM in slot 2. The default is disabled.
Step 4	switch(config)# no ssm enable feature scsi-flow force module 2	Forces the switch to disable SCSI flow services on the SSM in slot 2. The default is disabled.
Step 5	switch(config)# ssm enable feature scsi-flow interface fc 2/5 - 8	Enables SCSI flow services on interface 5 through 8 on the SSM in slot 2.

	Command or Action	Purpose
		Note Interfaces must be specified in multiples of four beginning at ports 1, 5, 9, 13, 17, 21, 25, and 29.
Step 6	switch(config)# no ssm enable feature scsi-flow interface fc 2/5 - 8	Disables SCSI flow services on interface 5 through 8 on the SSM in slot 2. The default is disabled.
Step 7	switch(config)# no ssm enable feature scsi-flow force interface fc 2/5 - 8	Forces the switch to disable SCSI flow services on the interface 5 through 8 on the SSM in slot 2.

Enabling SCSI Flow Configuration Distribution

To enable SCSI flow configuration distribution using CFS, follow these steps:

SUMMARY STEPS

1. switch# **config t**
2. switch(config)# **scsi-flow distribute**
3. switch(config)# **no scsi-flow distribute**

DETAILED STEPS

	Command or Action	Purpose
Step 1	switch# config t Example: switch(config)#	Enters configuration mode.
Step 2	switch(config)# scsi-flow distribute	Enables SCSI flow configuration distribution through CFS. The default is enabled.
Step 3	switch(config)# no scsi-flow distribute	Disables CFS distribution for SCSI flow configuration.

Configuring SCSI Flow Identifiers

A SCSI flow identifier is unique on a switch such as VSAN identifiers and is chosen by the user. To configure a SCSI flow identifier, follow these steps:

SUMMARY STEPS

1. switch# **config t**
2. switch(config)# **scsi-flow flow-id 3 initiator-vsan 2 initiator-pwwn 21:00:00:e0:8b:07:5f:aa target-vsan 4 target-pwwn 2a:20:00:05:30:00:77:e0**
3. switch(config)# **no scsi-flow flow-id 3 initiator-vsan 2**

DETAILED STEPS

	Command or Action	Purpose
Step 1	switch# config t Example: switch(config)#	Enters configuration mode.
Step 2	switch(config)# scsi-flow flow-id 3 initiator-vsan 2 initiator-pwwn 21:00:00:e0:8b:07:5f:aa target-vsan 4 target-pwwn 2a:20:00:05:30:00:77:e0	Configures SCSI flow identifier 3 using the pWWNs of the initiator and the target. The flow identifier range is 1 to 65535.
Step 3	switch(config)# no scsi-flow flow-id 3 initiator-vsan 2	Removes SCSI flow identifier 3.

SCSI Flow Statistics

This section includes the following topics:

About SCSI Flow Statistics

The statistics that can be collected for SCSI flows include the following:

- SCSI reads
 - Number of I/Os
 - Number of I/O blocks
 - Maximum I/O blocks
 - Minimum I/O response time
 - Maximum I/O response time
- SCSI writes
 - Number of I/Os
 - Number of I/O blocks
 - Maximum I/O blocks
 - Minimum I/O response time
 - Maximum I/O response time
- Other SCSI commands (not read or write)
 - Test unit ready
 - Report LUN
 - Inquiry
 - Read capacity
 - Mode sense
 - Request sense
- Errors
 - Number of timeouts

- Number of I/O failures
- Number of various SCSI status events
- Number of various SCSI sense key errors or events

To take advantage of this feature, only the initiator must be directly attached to an SSM



Note The SCSI flow statistics feature requires the Enterprise Package license installed only on the initiator switches.



Note For SCSI flow statistics, the initiator must connect to an SSM on a Cisco MDS switch while the target can connect to any other switch in the fabric. The SCSI flow initiator and target cannot connect to the same switch.

Configuring SCSI Flow Statistics

This section includes the following topics:

Enabling SCSI Flow Statistics

SUMMARY STEPS

1. switch# **config t**
2. switch(config)# **scsi-flow flow-id 3 statistics**
3. switch(config)# **no scsi-flow flow-id 3 statistics**

DETAILED STEPS

	Command or Action	Purpose
Step 1	switch# config t Example: switch(config)#	Enters configuration mode.
Step 2	switch(config)# scsi-flow flow-id 3 statistics	Enables statistics monitoring on SCSI flow identifier 3.
Step 3	switch(config)# no scsi-flow flow-id 3 statistics	Disables statistics monitoring on SCSI flow identifier 3. The default is disabled.

Clearing SCSI Flow Statistics

Displaying SCSI Flow Services Information

Use the **show scsi-flow** command to display information about SCSI flow services.

```
switch# show ssm provisioning
Module  Ports      Application      Provisioning Status
-----  -
      4      1-32          scsi-flow        success
```

The following example displays SCSI Flow Services Configuration for all SCSI Flow Identifiers:

```
switch# show scsi-flow
Flow Id: 3
Initiator VSAN: 101
Initiator WWN: 21:00:00:e0:8b:05:76:28
Target VSAN: 102
Target WWN: 21:00:00:20:37:38:7f:7d
Target LUN: ALL LUNS
Flow Verification Status:
-----
Initiator Verification Status:  success
Target Verification Status:     success
Initiator Linecard Status:      success
Target Linecard Status:         success
Feature Status:
-----
Write-Acceleration enabled
Write-Acceleration Buffers: 1024
Configuration Status:  success
Statistics enabled
Configuration Status:  success

Flow Id: 4
Initiator VSAN: 101
Initiator WWN: 21:00:00:e0:8b:05:76:28
Target VSAN: 102
Target WWN: 21:00:00:20:37:38:a7:89
Target LUN: ALL LUNS
Flow Verification Status:
-----
Initiator Verification Status:  success
Target Verification Status:     success
Initiator Linecard Status:      success
Target Linecard Status:         success
Feature Status:
-----
Write-Acceleration enabled
Write-Acceleration Buffers: 1024
Configuration Status:  success
```

The following example displays SCSI Flow Services Configuration for a specific SCSI Flow Identifier:

```
switch# show scsi-flow flow-id 3
Flow Id: 3
Initiator VSAN: 101
Initiator WWN: 21:00:00:e0:8b:05:76:28
Target VSAN: 102
Target WWN: 21:00:00:20:37:38:7f:7d
Target LUN: ALL LUNS
Flow Verification Status:
-----
Initiator Verification Status:  success
Target Verification Status:     success
Initiator Linecard Status:      success
Target Linecard Status:         success
Feature Status:
-----
```

```

Write-Acceleration enabled
  Write-Acceleration Buffers: 1024
  Configuration Status: success
Statistics enabled
  Configuration Status: success

```

The following example displays SCSI Flow Services Statistics for all SCSI Flow Identifiers:

```

switch# show scsi-flow statistics
Stats for flow-id 4 LUN=0x0000
-----
Read Stats
  I/O Total count=2
  I/O Timeout count=0
  I/O Total block count=4
  I/O Max block count=2
  I/O Min response time=5247 usec
  I/O Max response time=10160 usec
  I/O Active Count=0
Write Stats
  I/O Total count=199935
  I/O Timeout count=0
  I/O Total block count=12795840
  I/O Max block count=64
  I/O Min response time=492 usec
  I/O Max response time=10056529 usec
  I/O Active Count=16
Non Read-Write Stats
  Test Unit Ready=4
  Report LUN=38
  Inquiry=50
  Read Capacity=3
  Mode Sense=0
  Request Sense=0
Total Stats
  Rx Frame Count=3792063
  Rx Frame Byte Count=6549984752
  Tx Frame Count=3792063
  Tx Frame Byte Count=6549984752
Error Stats
  SCSI Status Busy=0
  SCSI Status Reservation Conflict=0
  SCSI Status Task Set Full=0
  SCSI Status ACA Active=0
  Sense Key Not Ready=0
  Sense Key Medium Error=0
  Sense Key Hardware Error=0
  Sense Key Illegal Request=0
  Sense Key Unit Attention=28
  Sense Key Data Protect=0
  Sense Key Blank Check=0
  Sense Key Copy Aborted=0
  Sense Key Aborted Command=0
  Sense Key Volume Overflow=0
  Sense Key Miscompare=0

```

The following example displays SCSI Flow Services Statistics for a Specific SCSI Flow Identifier:

```

switch# show scsi-flow statistics flow-id 4
Stats for flow-id 4 LUN=0x0000
-----
Read Stats
  I/O Total count=2

```

```

I/O Timeout count=0
I/O Total block count=4
I/O Max block count=2
I/O Min response time=5247 usec
I/O Max response time=10160 usec
I/O Active Count=0
Write Stats
I/O Total count=199935
I/O Timeout count=0
I/O Total block count=12795840
I/O Max block count=64
I/O Min response time=492 usec
I/O Max response time=10056529 usec
I/O Active Count=16
Non Read-Write Stats
Test Unit Ready=4
Report LUN=38
Inquiry=50
Read Capacity=3
Mode Sense=0
Request Sense=0
Total Stats
Rx Frame Count=3792063
Rx Frame Byte Count=6549984752
Tx Frame Count=3792063
Tx Frame Byte Count=6549984752
Error Stats
SCSI Status Busy=0
SCSI Status Reservation Conflict=0
SCSI Status Task Set Full=0
SCSI Status ACA Active=0
Sense Key Not Ready=0
Sense Key Medium Error=0
Sense Key Hardware Error=0
Sense Key Illegal Request=0
Sense Key Unit Attention=28
Sense Key Data Protect=0
Sense Key Blank Check=0
Sense Key Copy Aborted=0
Sense Key Aborted Command=0
Sense Key Volume Overflow=0
Sense Key Miscompare=0

```

Default Settings

[Table 1: Default Intelligent Storage Services Parameters](#), on page 13 lists the default settings for SCSI flow services and SCSI flow statistics parameters.

Table 1: Default Intelligent Storage Services Parameters

Parameters	Default
SCSI flow services	Disabled
SCSI flow services distribution	Enabled
SCSI flow statistics	Disabled



CHAPTER 4

Configuring Fibre Channel Write Acceleration

This chapter describes the Fibre Channel Write Acceleration(FC-WA) feature, including how to enable the feature on Cisco NX-OS.

This chapter includes the following sections:

- [About Fibre Channel Write Acceleration, on page 15](#)
- [Enabling Fibre Channel Write Acceleration, on page 16](#)
- [Displaying Fibre Channel Write Acceleration Information, on page 17](#)
- [Default Settings, on page 18](#)

About Fibre Channel Write Acceleration

Fibre Channel Write Acceleration minimizes application latency or reduces transactions per second over long distances. For synchronous data replication, Fibre Channel Write Acceleration increases the distance of replication or reduces effective latency to improve performance. With this feature you can also configure the buffer count and change the number of 2-KB buffers reserved on the target side DPP for a SCSI flow.

To take advantage of this feature, both the initiator and target devices must be directly attached to an SSM.

The Fibre Channel Write Acceleration feature also allows the configuration of the buffer count. You can change the number of 2-KB buffers reserved on the target side DPP for a SCSI flow.

You can estimate the number of buffers to configure using the following formula:

$(\text{Number of concurrent SCSI writes} * \text{size of SCSI writes in bytes}) / \text{FCP data frame size in bytes}$

For example, HDS TrueCopy between HDS 9970s uses 1-KB FCP data frames. You perform an initial synchronization for a 16-LUN TrueCopy group with 15 tracks, or 768-KB per LUN, which requires approximately $16 * (768 * 1024) / 1024$ or 12248 write buffers.



Note The Fibre Channel write acceleration feature requires the Enterprise Package license installed on both the initiator and target switches.



Note The initiator and target cannot connect to the same Cisco MDS switch. Fibre Channel write acceleration requires that the initiator and target must each connect to an SSM module installed on different Cisco MDS switches.

Enabling Fibre Channel Write Acceleration

SUMMARY STEPS

1. switch# **config t**
2. switch(config)# **ssm enable feature scsi-flow module 2**
3. switch(config)# **scsi-flow flow-id 3 initiator-vsan 2 initiator-pwwn 21:00:00:e0:8b:07:5f:aa target-vsan 4 target-pwwn 2a:20:00:05:30:00:77:e0**
4. switch(config)# **scsi-flow distribute**
5. switch(config)# **scsi-flow flow-id 3 write-acceleration**
6. switch(config)# **no scsi-flow flow-id 3 write-acceleration**
7. switch(config)# **scsi-flow flow-id 3 write-acceleration buffer 2048**
8. switch(config)# **no scsi-flow flow-id 3 write-acceleration buffer 1024**

DETAILED STEPS

	Command or Action	Purpose
Step 1	switch# config t Example: switch(config)#	Enters configuration mode.
Step 2	switch(config)# ssm enable feature scsi-flow module 2	Enables SCSI flow services on the SSM in slot 2. Note Fibre Channel Write Acceleration can only be configured on all interfaces on the SSM, not on groups of interfaces.
Step 3	switch(config)# scsi-flow flow-id 3 initiator-vsan 2 initiator-pwwn 21:00:00:e0:8b:07:5f:aa target-vsan 4 target-pwwn 2a:20:00:05:30:00:77:e0	Configures SCSI flow identifier 3 using the pWWNs of the initiator and the target. The flow identifier range is 1 to 65535.
Step 4	switch(config)# scsi-flow distribute	Enables CFS distribution for the SCSI flow. Note No CFS configuration commit operation is required for SCSI flow. The SCSI flow manager uses CFS for target validation.
Step 5	switch(config)# scsi-flow flow-id 3 write-acceleration	Enables Fibre Channel write acceleration for SCSI flow identifier 3.
Step 6	switch(config)# no scsi-flow flow-id 3 write-acceleration	Disables SCSI flow write acceleration for SCSI flow identifier 3. The default is disabled.

	Command or Action	Purpose
Step 7	switch(config)# scsi-flow flow-id 3 write-acceleration buffer 2048	Enables Fibre Channel write acceleration for SCSI flow identifier 3 and sets the number of buffers to 2048. The range is 1 to 40000.
Step 8	switch(config)# no scsi-flow flow-id 3 write-acceleration buffer 1024	Reverts to the default number of write acceleration buffers. The default is 1024.

Displaying Fibre Channel Write Acceleration Information

Use the **show scsi-flow** command to display information about the status of the Fibre Channel write acceleration configuration.

The following example displays Fibre Channel Write Acceleration Configuration for all SCSI Flow Identifiers:

```
switch# show scsi-flow
Flow Id: 3
  Initiator VSAN: 101
  Initiator WWN: 21:00:00:e0:8b:05:76:28
  Target VSAN: 102
  Target WWN: 21:00:00:20:37:38:7f:7d
  Target LUN: ALL LUNs
  Flow Verification Status:
  -----
    Initiator Verification Status:  success
    Target Verification Status:    success
    Initiator Linecard Status:    success
    Target Linecard Status:       success
  Feature Status:
  -----
    Write-Acceleration enabled
    Write-Acceleration Buffers: 1024
    Configuration Status:  success
    Statistics enabled
    Configuration Status:  success
Flow Id: 4
  Initiator VSAN: 101
  Initiator WWN: 21:00:00:e0:8b:05:76:28
  Target VSAN: 102
  Target WWN: 21:00:00:20:37:38:a7:89
  Target LUN: ALL LUNs
  Flow Verification Status:
  -----
    Initiator Verification Status:  success
    Target Verification Status:    success
    Initiator Linecard Status:    success
    Target Linecard Status:       success
  Feature Status:
  -----
    Write-Acceleration enabled
    Write-Acceleration Buffers: 1024
    Configuration Status:  success
    Statistics enabled
    Configuration Status:  success
```

The following example displays Fibre Channel Write Acceleration Configuration for a specific SCSI Flow Identifier:

```

switch# show scsi-flow flow-id 3
Flow Id: 3
Initiator VSAN: 101
Initiator WWN: 21:00:00:e0:8b:05:76:28
Target VSAN: 102
Target WWN: 21:00:00:20:37:38:7f:7d
Target LUN: ALL LUNs
Flow Verification Status:
-----
Initiator Verification Status: success
Target Verification Status: success
Initiator Linecard Status: success
Target Linecard Status: success
Feature Status:
-----
Write-Acceleration enabled
Write-Acceleration Buffers: 1024
Configuration Status: success
Statistics enabled
Configuration Status: success

```

Default Settings

[Table 2: Default Fibre Channel Write Acceleration Parameters](#), on page 18 lists the default settings for Fibre Channel write acceleration parameters.

Table 2: Default Fibre Channel Write Acceleration Parameters

Parameters	Default
Fibre Channel write acceleration	Disabled
Fibre Channel write acceleration buffers	1024