



## D Commands

---

- [dampen-igp-metric](#), on page 7
- [dampening](#), on page 8
- [dampening](#), on page 9
- [data-pattern](#), on page 10
- [data-pattern pad](#), on page 11
- [data-source](#), on page 12
- [database-mapping](#), on page 13
- [databits](#), on page 14
- [databits](#), on page 15
- [datapath-id](#), on page 16
- [datapath-id](#), on page 17
- [dataplane mpls](#), on page 18
- [dataplane mpls](#), on page 19
- [db-jid](#), on page 20
- [db-security user password](#), on page 21
- [db-table](#), on page 22
- [dead-interval](#), on page 23
- [dead-interval](#), on page 24
- [dead-interval](#), on page 25
- [deadtime](#), on page 26
- [deadtime](#), on page 27
- [deadtime](#), on page 28
- [default-information originate](#), on page 29
- [default-information originate](#), on page 30
- [default-information originate](#), on page 31
- [default-information originate](#), on page 32
- [default-information originate](#), on page 33
- [default-information originate](#), on page 34
- [default-information originate always rd route-target](#), on page 35
- [default-metric](#), on page 36
- [default-metric](#), on page 37
- [default-metric](#), on page 38
- [default-metric](#), on page 39

- default-metric, on page 40
- default-miss, on page 41
- default-originate, on page 42
- default echo revision, on page 43
- default permit, on page 44
- default permit, on page 45
- default permit, on page 46
- default permit, on page 47
- default permit, on page 48
- default permit, on page 49
- define, on page 50
- delay-restore time, on page 51
- delay, on page 52
- delay, on page 53
- delay, on page 54
- delay peer-link, on page 55
- delay restore, on page 56
- delay restore interface-vlan, on page 57
- delay restore orphan-port, on page 58
- delay up, on page 59
- delete, on page 60
- delete ca-certificate, on page 61
- delete certificate, on page 62
- delete crl, on page 63
- demand-circuit, on page 64
- depth, on page 65
- depth, on page 66
- description, on page 67
- description, on page 68
- description, on page 69
- description, on page 70
- description, on page 71
- description, on page 72
- description, on page 73
- description, on page 74
- description, on page 75
- description, on page 76
- description, on page 77
- description, on page 78
- description, on page 79
- description, on page 80
- description, on page 81
- description, on page 82
- description, on page 83
- description, on page 84
- description, on page 85

- description, on page 86
- description, on page 87
- description, on page 88
- description, on page 89
- description, on page 90
- description, on page 91
- description, on page 92
- description, on page 93
- description, on page 94
- description, on page 95
- description, on page 96
- description, on page 97
- description, on page 98
- description, on page 99
- description, on page 100
- description, on page 101
- description, on page 102
- description, on page 103
- description, on page 104
- description, on page 105
- description, on page 106
- description description, on page 107
- dest-ipaddr, on page 108
- dest-ipaddr, on page 109
- dest-port, on page 110
- dest, on page 111
- destination-group, on page 112
- destination-profile, on page 113
- destination-profile, on page 114
- destination-profile CiscoTAC-1 alert-group, on page 115
- destination-profile CiscoTAC-1 email-addr, on page 116
- destination-profile CiscoTAC-1 http, on page 117
- destination-profile CiscoTAC-1 index email-addr, on page 118
- destination-profile CiscoTAC-1 index http, on page 119
- destination-profile CiscoTAC-1 transport-method email, on page 120
- destination-profile CiscoTAC-1 transport-method http, on page 121
- destination-profile alert-group, on page 122
- destination-profile email-addr, on page 123
- destination-profile format, on page 124
- destination-profile full-txt-destination alert-group, on page 125
- destination-profile full-txt-destination email-addr, on page 126
- destination-profile full-txt-destination http, on page 127
- destination-profile full-txt-destination index email-addr, on page 128
- destination-profile full-txt-destination index http, on page 129
- destination-profile full-txt-destination message-size, on page 130
- destination-profile full-txt-destination message-level, on page 131

- destination-profile full-txt-destination transport-method http, on page 132
- destination-profile full-txt-destination transport-method email, on page 133
- destination-profile http, on page 134
- destination-profile index email-addr, on page 135
- destination-profile index http, on page 136
- destination-profile message-level, on page 137
- destination-profile message-size, on page 138
- destination-profile short-txt-destination alert-group, on page 139
- destination-profile short-txt-destination email-addr, on page 140
- destination-profile short-txt-destination http, on page 141
- destination-profile short-txt-destination index email-addr, on page 142
- destination-profile short-txt-destination index http, on page 143
- destination-profile short-txt-destination message-size, on page 144
- destination-profile short-txt-destination message-level, on page 145
- destination-profile short-txt-destination transport-method email, on page 146
- destination-profile short-txt-destination transport-method http, on page 147
- destination-profile transport-method email, on page 148
- destination-profile transport-method http, on page 149
- destination, on page 150
- destination1 interface, on page 151
- destination, on page 152
- destination, on page 153
- destination, on page 154
- destination, on page 155
- destination, on page 156
- destination, on page 157
- destination filter ip, on page 158
- destination filter ip any any, on page 159
- destination ip, on page 160
- device-group, on page 161
- device-group, on page 162
- device-role, on page 163
- device-role, on page 164
- device-role, on page 165
- diagnostic bootup level, on page 166
- diagnostic bootup level, on page 167
- diagnostic clear result module all diagnostic clear result module test, on page 168
- diagnostic monitor interval module test all hour min second, on page 169
- diagnostic monitor syslog, on page 170
- diff-clean, on page 171
- diff-clean all-users, on page 172
- diff, on page 173
- dir, on page 174
- disable-connected-check, on page 175
- disable-fka, on page 176
- disable-peer-as-check, on page 177

- [disable-policy-batching](#), on page 178
- [discard-route external](#), on page 179
- [discard-route external](#), on page 180
- [disjoint](#), on page 181
- [disjoint](#), on page 182
- [distance](#), on page 183
- [distance](#), on page 184
- [distance](#), on page 185
- [distance](#), on page 186
- [distance](#), on page 187
- [distance](#), on page 188
- [distribute into route-map all](#), on page 189
- [distribute link-state](#), on page 190
- [dns](#), on page 191
- [domain-id](#), on page 192
- [domain-id secondary](#), on page 193
- [domain-tag](#), on page 194
- [dont-capability-negotiate](#), on page 195
- [dos2nxos](#), on page 196
- [dot1q](#), on page 197
- [dot1q](#), on page 198
- [dot1q default dynamic](#), on page 199
- [dot1x default](#), on page 200
- [dot1x default](#), on page 201
- [dot1x host-mode](#), on page 202
- [dot1x mac-auth-bypass](#), on page 203
- [dot1x mac-move](#), on page 204
- [dot1x max-reauth-req](#), on page 205
- [dot1x max-req](#), on page 206
- [dot1x pae](#), on page 207
- [dot1x port-control](#), on page 208
- [dot1x radius-accounting](#), on page 209
- [dot1x re-authenticate interface](#), on page 210
- [dot1x re-authentication](#), on page 211
- [dot1x show credential](#), on page 212
- [dot1x system-auth-control](#), on page 213
- [dot1x timeout inactivity-period](#), on page 214
- [dot1x timeout quiet-period](#), on page 215
- [dot1x timeout ratelimit-period](#), on page 216
- [dot1x timeout re-authperiod](#), on page 217
- [dot1x timeout server-timeout](#), on page 218
- [dot1x timeout supp-timeout](#), on page 219
- [dot1x timeout tx-period](#), on page 220
- [down-bit-ignore](#), on page 221
- [downlink delay](#), on page 222
- [drop-trigger](#), on page 223

- dscp, on page 224
- dscp, on page 225
- dscp, on page 226
- dscp, on page 227
- dscp, on page 228
- dst-grp, on page 229
- dual-active exclude interface-vlan, on page 230
- duplex, on page 231
- duplex, on page 232
- duplicate-message throttle, on page 233
- dynamic-capability, on page 234
- dynamic-med-interval, on page 235
- dynamic, on page 236
- dynamic, on page 237

# dampen-igp-metric

dampen-igp-metric <sec> | no dampen-igp-metric

Syntax Description

no	Negate a command or set its defaults
dampen-igp-metric	Dampen IGP metric-related changes
sec	Time interval in seconds

Command Mode

- /exec/configure/router-bgp/router-bgp-af

# dampening

```
[no] dampening [ { <half-life> <reuse-limit> <suppress-limit> <max-suppress-time> } | { route-map
<rmap-name> } ]
```

## Syntax Description

no	(Optional) Negate a command or set its defaults
dampening	Configure route flap dampening
half-life	(Optional) Decay half life
reuse-limit	(Optional) Value to start reusing a route
suppress-limit	(Optional) Value to start suppressing a route
max-suppress-time	(Optional) Maximum suppress time for stable route
route-map	(Optional) Apply route-map to specify dampening criteria
rmap-name	(Optional) Route-map name

## Command Mode

- /exec/configure/router-bgp/router-bgp-af /exec/configure/router-bgp/router-bgp-af-vpn4  
/exec/configure/router-bgp/router-bgp-af-ipv6 /exec/configure/router-bgp/router-bgp-af-link-state  
/exec/configure/router-bgp/router-bgp-af-l2vpn-evpn /exec/configure/router-bgp/router-bgp-af-ipv4-mvpn  
/exec/configure/router-bgp/router-bgp-af-ipv6-mvpn



# dampening

```
[no] dampening [ { <half-life> <reuse-limit> <suppress-limit> <max-suppress-time> } | { route-map
<rmap-name> } ]
```

## Syntax Description

no	(Optional) Negate a command or set its defaults
dampening	Configure route flap dampening
half-life	(Optional) Decay half life
reuse-limit	(Optional) Value to start reusing a route
suppress-limit	(Optional) Value to start suppressing a route
max-suppress-time	(Optional) Maximum suppress time for stable route
route-map	(Optional) Apply route-map to specify dampening criteria
rmap-name	(Optional) Route-map name

## Command Mode

- /exec/configure/router-bgp/router-bgp-af-ipv4-mdt /exec/configure/router-bgp/router-bgp-af-l2vpn-vpls

# data-pattern

```
{ { no | default } data-pattern | data-pattern <hex-pattern> }
```

## Syntax Description

no	
default	Set a command to its defaults
data-pattern	Data Pattern
hex-pattern	Data Pattern in Hex

## Command Mode

- /exec/configure/ip-sla/udp

# data-pattern pad

```
{ data-pattern pad <pad-val> }
```

## Syntax Description

data-pattern	Configure NGOAM ping payload
pad	Configure NGOAM payload test pattern pad
pad-val	Configure NGOAM payload test pad value

## Command Mode

- /exec/configure/configngoamconnectcheck

# data-source

```
{ data-source <type> } | { no data-source [ <type> ] }
```

## Syntax Description

no	Negate a command or set its defaults
data-source	Specify the data source
type	

## Command Mode

- /exec/configure/telemetry/sensor-group

## database-mapping

```
{ [ no ] database-mapping { <eid-prefix> | <eid-prefix6> } { redistribute | { { <locator> | <locator6> } priority <priority> weight <weight> } } }
```

### Syntax Description

no	(Optional) Negate a command or set its defaults
database-mapping	Configure EID-prefix and locator-set for dynamic-EID
eid-prefix	IP EID-prefix for RLOC static mapping
locator	IP address of LISP-VM routers
priority	Configures which Locators from a set are preferred
priority	Lower priority Locator takes preference
weight	Traffic load-spreading among Locators
weight	Specified in a percentage from 0 to 100
redistribute	Used for redistributing into routing protocols

### Command Mode

- /exec/configure/lisp-dynamic-eid /exec/configure/vrf/lisp-dynamic-eid

# databits

[no] databits <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
databits	Set number of databits per character
i0	Number of data bits

Command Mode

- /exec/configure/console

# databits

[no] databits <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
databits	Set number of databits per character
i0	Number of data bits

Command Mode

- /exec/configure/com1

# datapath-id

datapath-id <datapathid-val> | no datapath-id

Syntax Description

no	Negate a command or set its defaults
datapath-id	Datapath ID
datapathid-val	64-bit hex value [0x1-0xffffffffffffff]

Command Mode

- /exec/configure/openflow/switch/sub-switch



# datapath-id

datapath-id <datapathid-val> | no datapath-id

Syntax Description

no	Negate a command or set its defaults
datapath-id	Datapath ID
datapathid-val	64-bit hex value [0x1-0xffffffffffff]

Command Mode

- /exec/configure/openflow/switch

# dataplane mpls

[no] dataplane mpls

Syntax Description

no	(Optional) Negate a command or set its defaults
dataplane	Dataplane Candidate path-option
mpls	MPLS Dataplane Candidate path-option

Command Mode

- /exec/configure/sr/te/color/endpoint/pref/constraint/sgmnt

# dataplane mpls

[no] dataplane mpls

Syntax Description

no	(Optional) Negate a command or set its defaults
dataplane	Dataplane Candidate path-option
mpls	MPLS Dataplane Candidate path-option

Command Mode

- /exec/configure/sr/te/pol/cndpaths/pref/constraint/sgmnt

## db-jid

[no] db-jid <jid> [ key-type <key-type> ]

### Syntax Description

no	(Optional) Negate a command or set its defaults
db-jid	Jabber ID of database
jid	Enter Jabber ID of database
key-type	(Optional) Query key type for this database
key-type	(Optional)

### Command Mode

- /exec/configure/fabric-db/server-xmpp

## db-security user password

```
[no] db-security user <user> password { 0 <clear> | 7 <encrypted> | <password> } [ shared-secret { 10 <clear> | 7 <encrypted> | <secret> } ]
```

### Syntax Description

no	(Optional) Negate a command or set its defaults
db-security	Database Security
user	User ID
user	Enter user ID
password	Password
0	Password that follows should be in clear text
clear	Password in clear text
7	Password that follows should be in encrypted text
encrypted	Encrypted password
password	Enter password in clear text
shared-secret	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED
10	(Optional) Indicates that password that follows should be in clear text
clear	(Optional) Password in clear text
7	(Optional) Password that follows should be in encrypted text
encrypted	(Optional) Encrypted password
secret	(Optional) Enter shared-secret in clear text

### Command Mode

- /exec/configure/fabric-db/server-ldap

## db-table

[no] db-table <tablename> [ key-type <key-type> ]

### Syntax Description

no	(Optional) Negate a command or set its defaults
db-table	Table name to search
tablename	Enter table name to search
key-type	(Optional) Query key type for this table
key-type	(Optional)

### Command Mode

- /exec/configure/fabric-db/server-ldap

# dead-interval

```
{ { dead-interval <interval> } | { no dead-interval [ <interval> ] } }
```

## Syntax Description

no	Negate a command or set its defaults
dead-interval	Dead interval
interval	(seconds)

## Command Mode

- /exec/configure/router-ospf3/router-ospf3-vlink /exec/configure/router-ospf3/vrf/router-ospf3-vlink

# dead-interval

```
{ { dead-interval <interval> } | { no dead-interval [ <interval> ] } }
```

## Syntax Description

no	Negate a command or set its defaults
dead-interval	Dead interval
interval	(seconds)

## Command Mode

- /exec/configure/router-ospf/router-ospf-vlink /exec/configure/router-ospf/vrf/router-ospf-vlink



# dead-interval

```
{ { dead-interval <interval> } | { no dead-interval [ <interval> ] } }
```

Syntax Description

no	Negate a command or set its defaults
dead-interval	Dead interval
interval	(seconds)

Command Mode

- /exec/configure/router-ospf/vrf/router-ospf-slink

# deadtime

[no] deadtime <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
deadtime	duration for which non-reachable server is skipped
i0	Length of time, in minutes

Command Mode

- /exec/configure/ldap

# deadtime

[no] deadtime <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
deadtime	duration for which non-reachable server is skipped
i0	Length of time, in minutes

Command Mode

- /exec/configure/radius

# deadtime

[no] deadtime <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
deadtime	duration for which non-reachable server is skipped
i0	Length of time, in minutes

Command Mode

- /exec/configure/tacacs+

## default-information originate

[no] default-information originate [ always ] [ route-map <map-name> ]

### Syntax Description

no	(Optional) Negate a command or set its defaults
default-information	RIP control distribution of default route
originate	RIP distribute a default route
always	(Optional) RIP always advertise default route
route-map	(Optional) Policy to constrain redistribution
map-name	(Optional) Route-map name

### Command Mode

- /exec/configure/router-rip/router-rip-af-common /exec/configure/router-rip/router-rip-vrf-af-common

## default-information originate

[no] default-information originate [ always ] [ route-map <map-name> ]

Syntax Description

no	(Optional) Negate a command or set its defaults
default-information	Control origination of a default route
originate	Originate a default route
always	(Optional) Always advertise default route
route-map	(Optional) Route-map to announce default routes
map-name	(Optional) A 'routing-rules' route-map name

Command Mode

- /exec/configure/router-isis/router-isis-af-ipv4 /exec/configure/router-isis/router-isis-af-ipv6

## default-information originate

[no] default-information originate [ always ] [ route-map <policy-name> ]

### Syntax Description

no	(Optional) Negate a command or set its defaults
default-information	Control distribution of default route
originate	Distribute a default route
always	(Optional) Always advertise default route
route-map	(Optional) Policy to control distribution of default route
policy-name	(Optional) Route-map name

### Command Mode

- /exec/configure/router-ospf3/router-ospf3-af-ipv6 /exec/configure/router-ospf3/vrf/router-ospf3-af-ipv6

## default-information originate

[no] default-information originate [ always ] [ route-map <map> ]

Syntax Description

no	(Optional) Negate a command or set its defaults
default-information	Control origination of a default route
originate	Originate a default route
always	(Optional) Always advertise default route
route-map	(Optional) Use a route-map for default route metrics
map	(Optional) Route-map name

Command Mode

- /exec/configure/router-eigrp/router-eigrp-vrf-common /exec/configure/router-eigrp/router-eigrp-af-common



## default-information originate

[no] default-information originate [ always ] [ route-map <policy-name> ]

### Syntax Description

no	(Optional) Negate a command or set its defaults
default-information	Control distribution of default route
originate	Distribute a default route
always	(Optional) Always advertise default route
route-map	(Optional) Policy to control distribution of default route
policy-name	(Optional) Route-map name

### Command Mode

- /exec/configure/router-ospf /exec/configure/router-ospf/vrf

# default-information originate

[no] default-information originate

Syntax Description

no	(Optional) Negate a command or set its defaults
default-information	Control distribution of default information
originate	Distribute a default route

Command Mode

- /exec/configure/router-bgp/router-bgp-af /exec/configure/router-bgp/router-bgp-af-ipv6-label  
/exec/configure/router-bgp/router-bgp-af-ipv4-label

## default-information originate always rd route-target

```
[no] default-information originate always rd { <ext-comm-rd-aa2nn4> | <ext-comm-rd-aa4nn2> } route-target
{ <ext-comm-rt-aa2nn4> | <ext-comm-rt-aa4nn2> }
```

### Syntax Description

no	(Optional) Negate a command or set its defaults
default-information	Control distribution of default information
originate	Distribute a default route
always	Always advertise default route
rd	VPN Route Distinguisher
ext-comm-rd-aa4nn2	VPN route distinguisher in aa4:nn or ip:nn format
ext-comm-rd-aa2nn4	VPN route distinguisher in aa:nn format
route-target	Specify Target VPN Extended Communities
ext-comm-rt-aa4nn2	RT extcommunity in aa4:nn or ip:nn format
ext-comm-rt-aa2nn4	RT extcommunity in aa:nn format

### Command Mode

- /exec/configure/router-bgp/router-bgp-af-vpnv4 /exec/configure/router-bgp/router-bgp-af-vpnv6

## default-metric

```
{ default-metric <cost> } | { no default-metric [ <cost> ] }
```

### Syntax Description

no	Negate a command or set its defaults
default-metric	Specify default metric for redistributed routes
cost	Metric value

### Command Mode

- /exec/configure/router-ospf3/router-ospf3-af-ipv6 /exec/configure/router-ospf3/vrf/router-ospf3-af-ipv6

# default-metric

default-metric <metric> | no default-metric [ <metric> ]

Syntax Description

no	Negate a command or set its defaults
default-metric	RIP default metric
metric	RIP metric value

Command Mode

- /exec/configure/router-rip/router-rip-af-common /exec/configure/router-rip/router-rip-vrf-af-common

## default-metric

```
{ { default-metric <bw> <delay> <rel> <load> <mtu> } | { no default-metric [ <bw> <delay> <rel> <load> <mtu> ] } }
```

### Syntax Description

no	Negate a command or set its defaults
default-metric	Set metric of redistributed routes
bw	Bandwidth in Kbits per second
delay	Delay metric
rel	Reliability metric where 255 is 100% reliable
load	Effective bandwidth metric (Loading) where 255 is 100% loaded
mtu	Maximum Transmission Unit metric of the path

### Command Mode

- /exec/configure/router-eigrp/router-eigrp-vrf-common /exec/configure/router-eigrp/router-eigrp-af-common

# default-metric

{ default-metric <cost> } | { no default-metric [ <cost> ] }

## Syntax Description

no	Negate a command or set its defaults
default-metric	Specify default metric for redistributed routes
cost	Metric value

## Command Mode

- /exec/configure/router-ospf /exec/configure/router-ospf/vrf

## default-metric

[no] default-metric <metric>

Syntax Description

no	(Optional) Negate a command or set its defaults
default-metric	Set metric of redistributed routes
metric	Default Metric

Command Mode

- /exec/configure/router-bgp/router-bgp-af



# default-miss

default-miss { continue-drop | continue-normal | continue-controller | drop | normal | controller } | no default-miss

## Syntax Description

no	Negate a command or set its defaults
default-miss	Set continue-drop/continue-normal/continue-controller/drop/normal/controller flow action
continue-drop	cascade drop to next table
continue-normal	cascade normal to next table
continue-controller	cascade punt to next table
drop	drop packet
normal	forward to normal dataplane
controller	punt to controller

## Command Mode

- /exec/configure/openflow/switch

# default-originate

[ no | default ] default-originate [ route-map <rmap-name> ]

## Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
default-originate	Originate a default toward this peer
route-map	(Optional) Route-map to specify criteria for originating default
rmap-name	(Optional) Route-map name

## Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af  
/exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-label  
/exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv6-label

# default echo revision

```
default echo { revision | vendor-extension }
```

## Syntax Description

default	Set a command to its defaults
echo	Echo Request attributes
revision	Echo packet default revision
vendor-extension	Send Vendor Extension TLV with echo Req

## Command Mode

- /exec/configure/mpls-oam

# default permit

[no] default { permit | deny }

Syntax Description

no	(Optional) Negate a command or set its defaults
default	Default Host Admission Policy
permit	Admission Permitted
deny	Admission Denied

Command Mode

- /exec/configure/nbm-vrf/nbm-host-policy/receiver

# default permit

[no] default { permit | deny }

Syntax Description

no	(Optional) Negate a command or set its defaults
default	Default Host Admission Policy
permit	Admission Permitted
deny	Admission Denied

Command Mode

- /exec/configure/nbm-host-policy/sender

# default permit

[no] default { permit | deny }

Syntax Description

no	(Optional) Negate a command or set its defaults
default	Default Host Admission Policy
permit	Admission Permitted
deny	Admission Denied

Command Mode

- /exec/configure/nbm-vrf/nbm-host-policy/sender

# default permit

[no] default { permit | deny }

Syntax Description

no	(Optional) Negate a command or set its defaults
default	Default Host Admission Policy
permit	Admission Permitted
deny	Admission Denied

Command Mode

- /exec/configure/nbm-host-policy/receiver

# default permit

[no] default { permit | deny }

Syntax Description

no	(Optional) Negate a command or set its defaults
default	Default Host Admission Policy
permit	Admission Permitted
deny	Admission Denied

Command Mode

- /exec/configure/nbm-host-policy/pim



# default permit

[no] default { permit | deny }

Syntax Description

no	(Optional) Negate a command or set its defaults
default	Default Host Admission Policy
permit	Admission Permitted
deny	Admission Denied

Command Mode

- /exec/configure/nbm-vrf/nbm-host-policy/pim

# define

[no] define <paramname> [ <paramtype> ] [ <paramdesc> ]

## Syntax Description

no	(Optional) Negate a command or set its defaults
define	Define a parameter
paramname	Enter the name of the parameter
paramtype	(Optional) param type
paramdesc	(Optional) Enter the parameter description

## Command Mode

- /exec/configure/param-list

## delay-restore time

[no] delay-restore time <sec>

Syntax Description

no	(Optional) Negate a command or set its defaults
delay-restore	delay-restore
time	time
sec	time in seconds

Command Mode

- /exec/configure/config-evpn-msite-bgw

# delay

delay <delay\_val> | no delay [ <delay\_val> ]

## Syntax Description

no	Negate a command or set its defaults
delay	Specify interface throughput delay
delay_val	Throughput delay (tens of microseconds)

## Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-non-member /exec/configure/if-port-channel /exec/configure/if-ethernet-all /exec/configure/if-ethernet-p2p /exec/configure/if-remote-ethernet-sub /exec/configure/if-port-channel-range

# delay

delay <microseconds> | no delay

Syntax Description

no	Negate a command or set its defaults
delay	Specify interface throughput delay
microseconds	Throughput delay (tens of microseconds)

Command Mode

- /exec/configure/if-vlan-common

# delay

delay <delay\_val> | no delay [ <delay\_val> ]

## Syntax Description

no	Negate a command or set its defaults
delay	Specify interface throughput delay
delay_val	Throughput delay (tens of microseconds)

## Command Mode

- /exec/configure/if-ether-sub /exec/configure/if-ether-sub-p2p /exec/configure/if-port-channel-sub

# delay peer-link

delay peer-link <time> | no delay peer-link

Syntax Description

no	Negate a command or set its defaults
delay	Peer-link bringup delay
peer-link	Delay peer-link bringup
time	Delay in bringing up the peer-link (in seconds)

Command Mode

- /exec/configure/vpc-domain

# delay restore

delay restore <time-out> | no delay restore

Syntax Description

no	Negate a command or set its defaults
delay	Initialization delay
restore	Delay after restoring peer-link
time-out	Delay in bringing up the vPC links (in seconds)

Command Mode

- /exec/configure/vpc-domain



## delay restore interface-vlan

delay restore interface-vlan <time-out> | no delay restore interface-vlan

Syntax Description

no	Negate a command or set its defaults
delay	Initialization delay
restore	Delay after restoring peer-link
interface-vlan	Delay in bringing-up interface-vlan
time-out	Delay in bringing up the interface-vlan (in seconds)

Command Mode

- /exec/configure/vpc-domain

## delay restore orphan-port

delay restore orphan-port <delay\_time> | no delay restore orphan-port

Syntax Description

no	Negate a command or set its defaults
delay	Initialization delay
restore	Delay after restoring peer-link
orphan-port	Configure vPC orphan-port delay bring-up timer
delay_time	Specify delay time in seconds

Command Mode

- /exec/configure/vpc-domain

# delay up

delay { { up <up\_delay> [ down <down\_delay> ] } | { down <down\_delay> [ up <up\_delay> ] } } | no delay

Syntax Description

no	Negate a command or set its defaults
delay	Tracking delay
up	Delay up change notification
up_delay	Seconds to delay
down	(Optional) Delay down change notification
down_delay	(Optional) Seconds to delay

Command Mode

- /exec/configure/track /exec/configure/tr-list-bool /exec/configure/tr-list-thrp /exec/configure/tr-list-thrw

# delete

delete { <uri0> | <uri1> | <uri2> } [ no-prompt ]

## Syntax Description

delete	delete a file or directory
uri0	Delete a file or directory
uri1	Delete a file or directory on expansion flash
uri2	Directory or filename on logflash
no-prompt	(Optional) Do not prompt for multiple deletion of files

## Command Mode

- /exec

# delete ca-certificate

delete ca-certificate

Syntax Description

delete	Delete the certificates
ca-certificate	Delete the ca certificates

Command Mode

- /exec/configure/trustpoint

# delete certificate

delete certificate [ force ]

Syntax Description

delete	Delete the certificates
certificate	Delete the identity certificate
force	(Optional) Force delete the identity certificate

Command Mode

- /exec/configure/trustpoint

# delete crl

delete crl

Syntax Description

delete	Delete the certificates
crl	Delete the CRL

Command Mode

- /exec/configure/trustpoint

# demand-circuit

[no] demand-circuit

Syntax Description

no	(Optional) Negate a command or set its defaults
demand-circuit	OSPF Demand circuit

Command Mode

- /exec/configure/router-ospf/vrf/router-ospf-slink



# depth

{ [ no ] depth <cells> | no depth }

## Syntax Description

depth	Provide the number of cells for this INT queue_profile
cells	queue_profile depth (number of cells). Default is 300

## Command Mode

- /exec/configure/config-int-q-prof

# depth

{ [ no ] depth <cells> | no depth }

## Syntax Description

depth	Provide the number of cells for this POSTCARD queue_profile
cells	queue_profile depth (number of cells/packets). Default is 300

## Command Mode

- /exec/configure/config-postcard-q-prof

# description

description <desc\_line> | no description [ <desc\_line> ]

Syntax Description

no	Negate a command or set its defaults
description	Enter description of maximum 254 characters
desc_line	Description of maximum 254 characters

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-port-channel /exec/configure/if-eth-port-channel /exec/configure/if-ether-sub /exec/configure/if-ether-sub-p2p /exec/configure/if-port-channel-sub /exec/configure/if-loopback /exec/configure/if-ethernet-all /exec/configure/if-ethernet-p2p /exec/configure/if-remote-ethernet-sub /exec/configure/if-port-channel-range

# description

{ [ no ] description <line> | no description }

Syntax Description

description	Provide a description for this INT queue_profile
line	queue_profile description string (63 characters maximum)

Command Mode

- /exec/configure/config-int-q-prof

# description

{ [ no ] description <line> | no description }

Syntax Description

description	Provide a description for this INT flow-profile
line	flow-profile description string (63 characters maximum)

Command Mode

- /exec/configure/config-int-flow-prof

# description

{ [ no ] description <line> | no description }

Syntax Description

description	Provide a description for this Flow Record
line	Record description string (63 characters maximum)

Command Mode

- /exec/configure/config-fte-record

# description

{ [ no ] description <line> | no description }

Syntax Description

description	Provide a description for this FTE Monitor
line	Monitor description string (63 characters maximum)

Command Mode

- /exec/configure/config-fte-monitor

# description

```
{ [ no ] description <line> | no description }
```

Syntax Description

description	Provide a description for this FTE Eveny
line	Event description string (63 characters maximum)

Command Mode

- /exec/configure/config-fte-event



# description

{ description <line> | no description }

Syntax Description

no	Negate a command or set its defaults
description	Description of the route-map
line	Route-map description string

Command Mode

- /exec/configure/route-map

# description

{ description <descr> } | { no description }

Syntax Description

description	Configure description of the profile
descr	Description of maximum 64 characters

Command Mode

- /exec/configure/configngoamprofile

# description

description <descr> | no description

Syntax Description

no	Negate a command or set its defaults
description	Session description (max 32 characters)
descr	Enter the description string(can include spaces)

Command Mode

- /exec/configure/monitor-common

# description

description <desc\_line> | no description [ <desc\_line> ]

Syntax Description

no	Negate a command or set its defaults
description	Enter description of maximum 254 characters
desc_line	Description of maximum 254 characters

Command Mode

- /exec/configure/if-any-tunnel

# description

```
{ description <desc-str> | no description [ <desc-str> ] }
```

Syntax Description

no	Negate a command or set its defaults
description	Class-Map description
desc-str	Description of this class-map (up to 200 characters)

Command Mode

- /exec/configure/class-map

# description

[no] description <desc-str>

Syntax Description

no	(Optional) Negate a command or set its defaults
description	Class-Map description
desc-str	Description of this class-map (up to 200 characters)

Command Mode

- /exec/configure/class-map/type/queuing

# description

```
{ description <desc-str> | no description [ <desc-str> ] }
```

Syntax Description

no	Negate a command or set its defaults
description	Table-Map description
desc-str	Description of this table-map (up to 200 characters)

Command Mode

- /exec/configure/table-map

# description

```
{ description <desc-str> | no description [ <desc-str> ] }
```

Syntax Description

no	Negate a command or set its defaults
description	Policy-Map description
desc-str	Description of this policy-map (up to 200 characters)

Command Mode

- /exec/configure/policy-map



# description

```
{ description <desc-str> | no description [ <desc-str> ] }
```

Syntax Description

no	Negate a command or set its defaults
description	Policy-Map description
desc-str	Description of this policy-map (up to 200 characters)

Command Mode

- /exec/configure/policy-map/type/queuing

# description

{ [ no ] description <line> | no description }

Syntax Description

description	Provide a description for this Flow Record
line	Record description string (63 characters maximum)

Command Mode

- /exec/configure/nfm-record

# description

{ [ no ] description <line> | no description }

Syntax Description

description	Provide a description for this Flow Monitor
line	Monitor description string (63 characters maximum)

Command Mode

- /exec/configure/nfm-monitor

# description

{ [ no ] description <line> | no description }

Syntax Description

description	Provide a description for this Flow Exporter
line	Monitor description string (63 characters maximum)

Command Mode

- /exec/configure/nfm-exporter

# description

description [ port-profile ] <desc\_line> | no description [ port-profile ] [ <desc\_line> ]

Syntax Description

no	Negate a command or set its defaults
description	Enter port-profile description of maximum 80 characters
port-profile	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED
desc_line	Enter port-profile description of maximum 80 characters

Command Mode

- /exec/configure/port-profile

# description

{ description <desc-str> | no description [ <desc-str> ] }

Syntax Description

no	Negate a command or set its defaults
description	Class-Map description
desc-str	Description of this class-map (up to 200 characters)

Command Mode

- /exec/configure/class-map/type/uf

# description

```
{ description <desc-str> | no description [ <desc-str> ] }
```

Syntax Description

no	Negate a command or set its defaults
description	Policy-Map description
desc-str	Description of this policy-map (up to 200 characters)

Command Mode

- /exec/configure/policy-map/type/uf

# description

description <desc> | no description

Syntax Description

no	Negate a command or set its defaults
description	Fabric Path topology description
desc	Description of maximum 80 characters

Command Mode

- /exec/configure/fp-topology



# description

[no] description <description>

Syntax Description

no	(Optional) Negate a command or set its defaults
description	Configure description for the policy
description	Description for the policy

Command Mode

- /exec/configure/event-manager-applet

# description

[no] description

Syntax Description

no	Negate a command or set its defaults
description	Configure description for the policy

Command Mode

- /exec/configure/event-manager-applet

# description

```
{ [ no ] description <line> | no description }
```

Syntax Description

description	Provide a description for this Flow Exporter
line	Monitor description string (63 characters maximum)

Command Mode

- /exec/configure/nfm-exporter

# description

{ [ no ] description <line> | no description }

Syntax Description

description	Provide a description for this Flow Record
line	Record description string (63 characters maximum)

Command Mode

- /exec/configure/nfm-record

# description

{ [ no ] description <line> | no description }

Syntax Description

description	Provide a description for this Flow Monitor
line	Monitor description string (63 characters maximum)

Command Mode

- /exec/configure/nfm-monitor

# description

description <desc\_line> | no description

Syntax Description

no	Negate a command or set its defaults
description	Interface specific description
desc_line	Up to 255 characters describing this interface

Command Mode

- /exec/configure/if-vlan-common

# description

```
{ [ no ] description <line> | no description }
```

Syntax Description

description	Provide a description for this POSTCARD queue_profile
line	queue_profile description string (63 characters maximum)

Command Mode

- /exec/configure/config-postcard-q-prof

# description

{ [ no ] description <line> | no description }

Syntax Description

description	Provide a description for this POSTCARD flow-profile
line	flow-profile description string (63 characters maximum)

Command Mode

- /exec/configure/config-postcard-flow-prof



# description

description <line> | no description

Syntax Description

no	Negate a command or set its defaults
description	Add a description for the role
line	Enter the description string(can include spaces)

Command Mode

- /exec/configure/role

# description

description <desc\_line> | no description [ <desc\_line> ]

Syntax Description

no	Negate a command or set its defaults
description	Enter description of maximum 254 characters
desc_line	Description of maximum 254 characters

Command Mode

- /exec/configure/if-mgmt-ether

# description

description <desc\_line> | no description [ <desc\_line> ]

Syntax Description

no	Negate a command or set its defaults
description	Enter description of maximum 254 characters
desc_line	Description of maximum 254 characters

Command Mode

- /exec/configure/if-nve

# description

description <desc\_line> | no description [ <desc\_line> ]

Syntax Description

no	Negate a command or set its defaults
description	Enter description of maximum 80 characters
desc_line	Description of maximum 80 characters

Command Mode

- /exec/configure/if-overlay /exec/configure/if-te /exec/configure/if-nve

# description

[no] description [ <desc> ] | description <desc>

Syntax Description

no	Negate a command or set its defaults
description	Group description
desc	(Optional) Up to 80 characters describing this group

Command Mode

- /exec/configure/if-eth-any/vrrpv3

# description

{ description <line> } | { no description }

Syntax Description

no	Negate a command or set its defaults
description	Description of the VRF
line	VRF description string

Command Mode

- /exec/configure/vrf

# description

```
{ [ no ] description <descrip-string> }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
description	Provide a description string for the LISP site
descrip-string	Description string

Command Mode

- /exec/configure/lisp-site /exec/configure/vrf/lisp-site

# description

description <describe> | no description

Syntax Description

no	Negate a command or set its defaults
description	Description for the BMP server
describe	Upto 80 characters describing this server

Command Mode

- /exec/configure/router-bgp/router-bgp-bmp-server



## description

description <describe> | { no | default } description [ <describe> ]

Syntax Description

no	Negate a command or set its defaults
default	Inherit values from a peer template
description	Neighbor specific description
describe	Upto 80 characters describing this neighbor

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor-sess

# description

```
{ [ no ] description <text> }
```

Syntax Description

description	description for this profile
text	description

Command Mode

- /exec/configure/dot1x-cred

# description description

[no] description | description <desc>

Syntax Description

no	(Optional) Negate a command or set its defaults
description	Pathway description
desc	Up to 80 characters describing this pathway

Command Mode

- /exec/configure/if-eth-any/vrrs

# dest-ipaddr

```
{ dest-ipaddr { <ip-address> | <hostname> | <ipv6-address> } }
```

## Syntax Description

dest-ipaddr	Destination ip address
ip-address	IP address, broadcast disallowed
hostname	IP Hostname, broadcast disallowed

## Command Mode

- /exec/configure/ip-sla/tcp

# dest-ipaddr

```
{ dest-ipaddr { <ip-address> | <hostname> } }
```

## Syntax Description

dest-ipaddr	Destination ip address
ip-address	IP address, broadcast disallowed
hostname	IP Hostname, broadcast disallowed

## Command Mode

- /exec/configure/ip-sla/udp /exec/configure/ip-sla/jitter

# dest-port

{ dest-port <port> }

## Syntax Description

dest-port	Destination port
port	udp port number

## Command Mode

- /exec/configure/ip-sla/udp /exec/configure/ip-sla/jitter /exec/configure/ip-sla/tcp

# dest

```
{ dest { { ip { <numeric10> | <numeric11> | unknown } } | { mac <dmac> <dot1qid> [ <intfid> ] } } }
```

## Syntax Description

dest	destination node
ip	ip address
numeric10	Ipv4 address of remote host / VTEP
unknown	Peer vtep ip is unknown, Applicable only for channel Nv03
mac	Mac
dmac	Destination mac address
dot1qid	Encapsulation dot1q/bd on which the mac is learnt
intfid	(Optional) Name of the interface for ngoam ping on which dot1q is configured

## Command Mode

- /exec/configure/configngoamconnectcheck

# destination-group

[no] destination-group <dgrp-id>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-group	Create destination group
dgrp-id	Identifier

Command Mode

- /exec/configure/telemetry



# destination-profile

[no] destination-profile <s0>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
s0	User defined destination profile name

Command Mode

- /exec/configure/callhome

# destination-profile

[no] destination-profile

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Specify the default destination profile

Command Mode

- /exec/configure/telemetry

## destination-profile CiscoTAC-1 alert-group

```
[no] destination-profile CiscoTAC-1 alert-group { All | Configuration | Diagnostic | EEM | Cisco-TAC |
Environmental | Inventory | License | Linecard-Hardware | Supervisor-Hardware | Syslog-group-port | System
| Test }
```

### Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
CiscoTAC-1	Configure destination profile for XML message
alert-group	Add alert group
All	This alert group consists of all of the callhome messages
Cisco-TAC	Events which are meant for Cisco TAC only
Environmental	Power,fan,temperature related events
Inventory	Inventory status events
License	Events related to licensing
Linecard-Hardware	Linecard related events
Supervisor-Hardware	Supervisor related events
Syslog-group-port	Events related to syslog messages filed by port manager
System	Software related events
Test	User generated test events
Configuration	Events related to Configuration
Diagnostic	Events related to Diagnostic
EEM	EEM events

### Command Mode

- /exec/configure/callhome

## destination-profile CiscoTAC-1 email-addr

destination-profile CiscoTAC-1 [ index <i0> ] email-addr <s0>

### Syntax Description

destination-profile	Configure destination profiles
CiscoTAC-1	Configure destination profile for XML message
email-addr	Add email addr
s0	Provide email address, example: jdow@xyz.com
index	(Optional) Configure an index(1 to 50) for email-id
i0	(Optional) Index between 1 to 50 associate with email-id

### Command Mode

- /exec/configure/callhome

## destination-profile CiscoTAC-1 http

destination-profile CiscoTAC-1 [ index <i0> ] http <s0>

### Syntax Description

destination-profile	Configure destination profiles
CiscoTAC-1	Configure destination profile for XML message
http	Add http or https url
s0	Provide http or https url, example1: http://site.com/services/callserv example2: https://site2.com/serv/CALL
index	(Optional) Configure an index(1 to 50) for http url
i0	(Optional) Index between 1 to 50 associate with http url

### Command Mode

- /exec/configure/callhome

## destination-profile CiscoTAC-1 index email-addr

[no] destination-profile CiscoTAC-1 index <i0> email-addr

Syntax Description

no	Negate a command or set its defaults
destination-profile	Configure destination profiles
CiscoTAC-1	Configure destination profile for XML message
email-addr	Add email addr
index	Delete email-id associated with index(1 to 50)
i0	Index between 1 to 50 associate with email-id

Command Mode

- /exec/configure/callhome

## destination-profile CiscoTAC-1 index http

[no] destination-profile CiscoTAC-1 index <i0> http

### Syntax Description

no	Negate a command or set its defaults
destination-profile	Configure destination profiles
CiscoTAC-1	Configure destination profile for XML message
http	Add http or https url
index	Delete http url associated with index(1 to 50)
i0	Index between 1 to 50 associate with http url

### Command Mode

- /exec/configure/callhome

## destination-profile CiscoTAC-1 transport-method email

[no] destination-profile CiscoTAC-1 transport-method email

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
CiscoTAC-1	Configure destination profile for XML message
transport-method	Callhome message sending transport-method
email	email transport-method

Command Mode

- /exec/configure/callhome



## destination-profile CiscoTAC-1 transport-method http

[no] destination-profile CiscoTAC-1 transport-method http

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
CiscoTAC-1	Configure destination profile for XML message
transport-method	Callhome message sending transport-method
http	http transport-method

Command Mode

- /exec/configure/callhome

## destination-profile alert-group

[no] destination-profile <s0> alert-group { All | Configuration | Diagnostic | EEM | Cisco-TAC | Environmental | Inventory | License | Linecard-Hardware | Supervisor-Hardware | Syslog-group-port | System | Test }

### Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
s0	User defined destination profile name
alert-group	Add alert group
All	This alert group consists of all of the callhome messages
Cisco-TAC	Events which are meant for Cisco TAC only
Environmental	Power,fan,temperature related events
Inventory	Inventory status events
License	Events related to licensing
Linecard-Hardware	Linecard related events
Supervisor-Hardware	Supervisor related events
Syslog-group-port	Events related to syslog messages filed by port manager
System	Software related events
Test	User generated test events
Configuration	Events related to Configuration
Diagnostic	Events related to Diagnostic
EEM	EEM events

### Command Mode

- /exec/configure/callhome

## destination-profile email-addr

destination-profile <s0> [ index <i0> ] email-addr <s1>

### Syntax Description

destination-profile	Configure destination profiles
s0	User defined destination profile name
email-addr	Add email addr
s1	Provide email address, example: jdow@xyz.com
index	(Optional) Configure an index(1 to 50) for email-id
i0	(Optional) Index between 1 to 50 associate with email-id

### Command Mode

- /exec/configure/callhome

## destination-profile format

```
destination-profile <s0> format { full-txt | short-txt | XML }
```

### Syntax Description

destination-profile	Configure destination profiles
s0	User defined destination profile name
format	Callhome message format (default XML)
full-txt	Plain text message format
short-txt	Short text message format
XML	XML message format

### Command Mode

- /exec/configure/callhome

## destination-profile full-txt-destination alert-group

[no] destination-profile full-txt-destination alert-group { All | Configuration | Diagnostic | EEM | Cisco-TAC | Environmental | Inventory | License | Linecard-Hardware | Supervisor-Hardware | Syslog-group-port | System | Test }

### Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
full-txt-destination	Configure destination profile for plain txt message
alert-group	Add alert group
All	This alert group consists of all of the callhome messages
Cisco-TAC	Events which are meant for Cisco TAC only
Environmental	Power,fan,temperature related events
Inventory	Inventory status events
License	Events related to licensing
Linecard-Hardware	Linecard related events
Supervisor-Hardware	Supervisor related events
Syslog-group-port	Events related to syslog messages filed by port manager
System	Software related events
Test	User generated test events
Configuration	Events related to Configuration
Diagnostic	Events related to Diagnostic
EEM	EEM events

### Command Mode

- /exec/configure/callhome

## destination-profile full-txt-destination email-addr

destination-profile full-txt-destination [ index <i0> ] email-addr <s0>

### Syntax Description

destination-profile	Configure destination profiles
full-txt-destination	Configure destination profile for plain txt message
email-addr	Add email addr
s0	Provide email address, example: jdow@xyz.com
index	(Optional) Configure an index(1 to 50) for email-id
i0	(Optional) Index between 1 to 50 associate with email-id

### Command Mode

- /exec/configure/callhome

## destination-profile full-txt-destination http

destination-profile full-txt-destination [ index <i0> ] http <s0>

### Syntax Description

destination-profile	Configure destination profiles
full-txt-destination	Configure destination profile for plain txt message
http	Add http or https url
s0	Provide http or https url, example1: http://site.com/services/callserv example2: https://site2.com/serv/CALL
index	(Optional) Configure an index(1 to 50) for http url
i0	(Optional) Index between 1 to 50 associate with http url

### Command Mode

- /exec/configure/callhome

## destination-profile full-txt-destination index email-addr

[no] destination-profile full-txt-destination index <i0> email-addr

Syntax Description

no	Negate a command or set its defaults
destination-profile	Configure destination profiles
full-txt-destination	Configure destination profile for plain txt message
email-addr	Add email addr
index	Delete email-id associated with index(1 to 50)
i0	Index between 1 to 50 associate with email-id

Command Mode

- /exec/configure/callhome



## destination-profile full-txt-destination index http

[no] destination-profile full-txt-destination index <i0> http

### Syntax Description

no	Negate a command or set its defaults
destination-profile	Configure destination profiles
full-txt-destination	Configure destination profile for plain txt message
http	Add http or https url
index	Delete http url associated with index(1 to 50)
i0	Index between 1 to 50 associate with http url

### Command Mode

- /exec/configure/callhome

## destination-profile full-txt-destination message-size

[no] destination-profile full-txt-destination message-size <i0>

### Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
full-txt-destination	Configure destination profile for plain txt message
message-size	Configure maximum message size (default 2500000)
i0	Provide maximum possible message size

### Command Mode

- /exec/configure/callhome

## destination-profile full-txt-destination message-level

[no] destination-profile full-txt-destination message-level <i0>

### Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
full-txt-destination	Configure destination profile for plain txt message
message-level	Callhome message level(0-lowest urgency, 9-highest urgency)
i0	

### Command Mode

- /exec/configure/callhome

## destination-profile full-txt-destination transport-method http

[no] destination-profile full-txt-destination transport-method http

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
full-txt-destination	Configure destination profile for plain txt message
transport-method	Callhome message sending transport-method
http	http transport-method

Command Mode

- /exec/configure/callhome

# destination-profile full-txt-destination transport-method email

[no] destination-profile full-txt-destination transport-method email

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
full-txt-destination	Configure destination profile for plain txt message
transport-method	Callhome message sending transport-method
email	email transport-method

Command Mode

- /exec/configure/callhome

## destination-profile http

```
destination-profile <s4> [ index <i0> ] { http <s2> }
```

### Syntax Description

destination-profile	Configure destination profiles
s4	User defined destination profile name
http	Add http or https url
s2	Provide http or https url, example1: http://site.com/services/callserv example2: https://site2.com/serv/CALL
index	(Optional) Configure an index(1 to 50) for http url
i0	(Optional) Index between 1 to 50 associate with http url

### Command Mode

- /exec/configure/callhome

## destination-profile index email-addr

[no] destination-profile <s0> index <i0> email-addr | no destination-profile <s0> email-addr

### Syntax Description

no	Negate a command or set its defaults
destination-profile	Configure destination profiles
s0	User defined destination profile name
email-addr	Add email addr
index	Delete email-id associated with index(1 to 50)
i0	Index between 1 to 50 associate with email-id

### Command Mode

- /exec/configure/callhome

## destination-profile index http

[no] destination-profile <s4> index <i0> http | no destination-profile <s4> http

Syntax Description

no	Negate a command or set its defaults
destination-profile	Configure destination profiles
s4	User defined destination profile name
http	Add http or https url
index	Delete http url associated with index(1 to 50)
i0	Index between 1 to 50 associate with http url

Command Mode

- /exec/configure/callhome



## destination-profile message-level

[no] destination-profile <s0> message-level <i0>

### Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
s0	User defined destination profile name
message-level	Callhome message level(0-lowest urgency, 9-highest urgency)
i0	

### Command Mode

- /exec/configure/callhome

## destination-profile message-size

[no] destination-profile <s0> message-size <i0>

### Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
s0	User defined destination profile name
message-size	Configure maximum message size (default 2500000)
i0	Provide maximum possible message size

### Command Mode

- /exec/configure/callhome

## destination-profile short-txt-destination alert-group

[no] destination-profile short-txt-destination alert-group { All | Configuration | Diagnostic | EEM | Cisco-TAC | Environmental | Inventory | License | Linecard-Hardware | Supervisor-Hardware | Syslog-group-port | System | Test }

### Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
short-txt-destination	Configure destination profile for short txt message
alert-group	Add alert group
All	This alert group consists of all of the callhome messages
Cisco-TAC	Events which are meant for Cisco TAC only
Environmental	Power, fan, temperature related events
Inventory	Inventory status events
License	Events related to licensing
Linecard-Hardware	Linecard related events
Supervisor-Hardware	Supervisor related events
Syslog-group-port	Events related to syslog messages filed by port manager
System	Software related events
Test	User generated test events
Configuration	Events related to Configuration
Diagnostic	Events related to Diagnostic
EEM	EEM events

### Command Mode

- /exec/configure/callhome

## destination-profile short-txt-destination email-addr

destination-profile short-txt-destination [ index <i0> ] email-addr <s0>

### Syntax Description

destination-profile	Configure destination profiles
short-txt-destination	Configure destination profile for short txt message
email-addr	Add email addr
s0	Provide email address, example: jdow@xyz.com
index	(Optional) Configure an index(1 to 50) for email-id
i0	(Optional) Index between 1 to 50 associate with email-id

### Command Mode

- /exec/configure/callhome

## destination-profile short-txt-destination http

destination-profile short-txt-destination [ index <i0> ] http <s0>

### Syntax Description

destination-profile	Configure destination profiles
short-txt-destination	Configure destination profile for short txt message
http	Add http or https url
s0	Provide http or https url, example1: http://site.com/services/callserv example2: https://site2.com/serv/CALL
index	(Optional) Configure an index(1 to 50) for http url
i0	(Optional) Index between 1 to 50 associate with http url

### Command Mode

- /exec/configure/callhome

## destination-profile short-txt-destination index email-addr

[no] destination-profile short-txt-destination index <i0> email-addr

### Syntax Description

no	Negate a command or set its defaults
destination-profile	Configure destination profiles
short-txt-destination	Configure destination profile for short txt message
email-addr	Add email addr
index	Delete email-id associated with index(1 to 50)
i0	Index between 1 to 50 associate with email-id

### Command Mode

- /exec/configure/callhome

## destination-profile short-txt-destination index http

[no] destination-profile short-txt-destination index <i0> http

### Syntax Description

no	Negate a command or set its defaults
destination-profile	Configure destination profiles
short-txt-destination	Configure destination profile for short txt message
http	Add http or https url
index	Delete http url associated with index(1 to 50)
i0	Index between 1 to 50 associate with http url

### Command Mode

- /exec/configure/callhome

## destination-profile short-txt-destination message-size

[no] destination-profile short-txt-destination message-size <i0>

### Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
short-txt-destination	Configure destination profile for short txt message
message-size	Configure maximum message size (default 4000)
i0	

### Command Mode

- /exec/configure/callhome



## destination-profile short-txt-destination message-level

[no] destination-profile short-txt-destination message-level <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
short-txt-destination	Configure destination profile for short txt message
message-level	Callhome message level(0-lowest urgency, 9-highest urgency)
i0	

Command Mode

- /exec/configure/callhome

# destination-profile short-txt-destination transport-method email

[no] destination-profile short-txt-destination transport-method email

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
short-txt-destination	Configure destination profile for short txt message
transport-method	Callhome message sending transport-method
email	email transport-method

Command Mode

- /exec/configure/callhome

## destination-profile short-txt-destination transport-method http

[no] destination-profile short-txt-destination transport-method http

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
short-txt-destination	Configure destination profile for short txt message
transport-method	Callhome message sending transport-method
http	http transport-method

Command Mode

- /exec/configure/callhome

## destination-profile transport-method email

[no] destination-profile <s5> transport-method email

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
s5	User defined destination profile name
transport-method	Callhome message sending transport-method
email	email transport-method

Command Mode

- /exec/configure/callhome

## destination-profile transport-method http

[no] destination-profile <s6> transport-method http

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
s6	User defined destination profile name
transport-method	Callhome message sending transport-method
http	http transport-method

Command Mode

- /exec/configure/callhome

## destination

```
{ [ no ] destination { <ipaddr> | <ipv6addr> } [ use-vrf { <vrf_name> | <vrf-known-name> } ] | no destination }
```

### Syntax Description

destination	Specify the destination address
ipaddr	Destination IP address for collector
use-vrf	(Optional) Optional VRF label
vrf_name	(Optional) VRF name
vrf-known-name	(Optional) Known VRF name

### Command Mode

- /exec/configure/config-fte-exporter

# destination1 interface

[no] destination1 interface <interface\_range>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination1	Destination configuration
interface	Configure interfaces
interface_range	

Command Mode

- /exec/configure/monitor-local-dst

# destination

```
{ [ no ] destination { <ipaddr> } [ use-vrf { <vrf_name> | <vrf-known-name> } ] | no destination }
```

## Syntax Description

destination	Specify the destination address
ipaddr	Destination IP address for collector
use-vrf	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED
vrf_name	(Optional) VRF name
vrf-known-name	(Optional) Known VRF name

## Command Mode

- /exec/configure/config-int-exporter



# destination

```
{ [ no ] destination { <ipaddr> | <ipv6addr> } [ use-vrf { <vrf_name> | <vrf-known-name> } ] | no destination }
```

## Syntax Description

destination	Specify the destination address
ipaddr	Destination IP address for collector
use-vrf	(Optional) Optional VRF label
vrf_name	(Optional) VRF name
vrf-known-name	(Optional) Known VRF name

## Command Mode

- /exec/configure/nfm-exporter

## destination

```
{ [ no ] destination <ipaddr> } [ use-vrf { <vrf-name> | <vrf-known-name> } ]
```

### Syntax Description

destination	Destination configuration
ipaddr	IP Address to be configured
use-vrf	(Optional) VRF label
vrf-name	(Optional) VRF name
vrf-known-name	(Optional) Known VRF name

### Command Mode

- /exec/configure/config-ssx-exporter

# destination

```
{ [ no ] destination { <ipaddr> | <ipv6addr> } [ use-vrf { <vrf_name> | <vrf-known-name> } ] | no destination }
```

## Syntax Description

destination	Specify the destination address
ipaddr	Destination IP address for collector
use-vrf	(Optional) Optional VRF label
vrf_name	(Optional) VRF name
vrf-known-name	(Optional) Known VRF name

## Command Mode

- /exec/configure/nfm-exporter

# destination

```
{ [ no ] destination { <ipaddr> } [ use-vrf { <vrf_name> | <vrf-known-name> } ] | no destination }
```

## Syntax Description

destination	Specify the destination address
ipaddr	Destination IP address for collector
use-vrf	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED
vrf_name	(Optional) VRF name
vrf-known-name	(Optional) Known VRF name

## Command Mode

- /exec/configure/config-postcard-exporter

# destination

[no] destination | destination <ipaddr>

Syntax Description

no	Negate a command or set its defaults
destination	destination of tunnel
ipaddr	ip address (A.B.C.D)

Command Mode

- /exec/configure/if-te

## destination filter ip

```
[no] destination filter ip { <ip-addr> <ip-mask> } [ ip | { { udp | tcp } { <port_num> | any } } ] [ { arp | advertise } { enable | disable } ]
```

### Syntax Description

no	(Optional) Negate a command or set its defaults
destination	destination ip configuration
filter	list of ips to filter
ip	destination ip
ip-addr	IP address in format i.i.i.i
ip-mask	IP network mask in format m.m.m.m
ip	(Optional) IP Protocol
udp	(Optional) UDP Protocol
tcp	(Optional) TCP Protocol
port_num	(Optional) Port Number
any	(Optional) Any Port Number
arp	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED
advertise	(Optional) advertise
enable	(Optional) Enable
disable	(Optional) Disable

### Command Mode

- /exec/configure/smartc

## destination filter ip any any

[no] destination filter ip any any

Syntax Description

no	(Optional) Negate a command or set its defaults
destination	destination ip configuration
filter	list of ips to filter
ip	destination ip
any	Any IP

Command Mode

- /exec/configure/smartc

## destination ip

[no] destination ip <ipaddress>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination	Destination configuration
ip	Configure remote IP address
ipaddress	

Command Mode

- /exec/configure/config-monitor-erspan-src



# device-group

[no] device-group <group-name>

Syntax Description

no	(Optional) Negate a command or set its defaults
device-group	PLB device group
group-name	Specify device-group name

Command Mode

- /exec/configure/plb

# device-group

{ device-group <name> } | { no device-group <name> }

Syntax Description

no	Negate a command or set its defaults
device-group	ITD device group
name	ITD device group name

Command Mode

- /exec/configure/itd

# device-role

[no] device-role <dev\_role>

Syntax Description

no	(Optional) Negate a command or set its defaults
dev_role	

Command Mode

- /exec/configure/config-ra-guard

# device-role

[no] device-role <dev\_role>

Syntax Description

no	(Optional) Negate a command or set its defaults
dev_role	

Command Mode

- /exec/configure/config-snoop-policy

# device-role

[no] device-role <devrole>

Syntax Description

no	(Optional) Negate a command or set its defaults
devrole	

Command Mode

- /exec/configure/config-dhcp-guard

# diagnostic bootup level

[no] diagnostic bootup level

Syntax Description

no	Negate a command or set its defaults
diagnostic	Diagnostic commands
bootup	Configure Diagnostic for bootup
level	Select diagnostic level

Command Mode

- /exec/configure

# diagnostic bootup level

diagnostic bootup level { bypass | complete | minimal }

Syntax Description

diagnostic	Diagnostic commands
bootup	Configure Diagnostic for bootup
level	Select diagnostic level
bypass	Skip all bootup test
complete	Complete level
minimal	Minimal level - no MacsecLoopBackTest

Command Mode

- /exec/configure

# diagnostic clear result module all diagnostic clear result module test

diagnostic clear result module all | diagnostic clear result module <module> test { <test-id> | all }

Syntax Description

diagnostic	Diagnostic commands
clear	Erase Diagnostic Test Results/Stats
result	Diagnostic test result
module	Module keyword
module	Module number
all	Select all
test	Diagnostic test selection
test-id	

Command Mode

- /exec



# diagnostic monitor interval module test all hour min second

diagnostic monitor interval module <module> test { all | <name> | <test-id> } hour <hour-cntr> min <min-cntr> second <sec-cntr> | no diagnostic monitor interval module <module> test { all | <name> | <test-id> }

## Syntax Description

no	Negate a command or set its defaults
diagnostic	Diagnostic commands
monitor	Configure diagnostic monitoring test
interval	Configure diagnostic monitoring tests interval
module	Module Keyword
module	Module number
test	Diagnostic test selection
all	Select all test ID
test-id	
name	Test name
hour	Hour of the day
hour-cntr	Interval in hours
min	Minute of an hour
min-cntr	Interval in minutes
second	Second of a minute
sec-cntr	Interval in seconds

## Command Mode

- /exec/configure

# diagnostic monitor syslog

[no] diagnostic monitor syslog

Syntax Description

no	(Optional) Negate a command or set its defaults
diagnostic	Diagnostic command
monitor	Configure diagnostic monitoring for syslog
syslog	Diag test failure syslog

Command Mode

- /exec/configure

# diff-clean

diff-clean [ all-sessions ]

Syntax Description

diff-clean	remove temp files created by '  diff' filters
all-sessions	(Optional) remove '  diff' temp files from all sessions (past and present!) of current user

Command Mode

- /exec

## diff-clean all-users

diff-clean all-users

Syntax Description

diff-clean	remove temp files created by '  diff' filters
all-users	remove '  diff' temp files from all sessions (past and present!) of all users

Command Mode

- /exec

# diff

| diff [ again | echo | -c [ <lines> ] | -b | -B | -i | -I <regex> | -y | --left-column | -W <columns> | -q | -s ] +

## Syntax Description

	Pipe command output to filter
diff	show difference between current and previous invocation (creates temp files: remove them with 'diff-clean' command and dont use it on commands with big outputs, like 'show tech!')
again	(Optional) dont create new file: use old ones, just change display options or add more filters
echo	(Optional) echo the current file (only effective if no old file)
-c	(Optional) set number of lines of context (default 3)
lines	(Optional) number of lines of context
-b	(Optional) Ignore changes in amount of white space
-B	(Optional) Ignore changes that just insert or delete blank lines
-i	(Optional) Ignore changes in case
-I	(Optional) Ignore changes that just insert or delete lines that match regex
regex	(Optional) regex of lines to ignore
-y	(Optional) Use the side by side output format
--left-column	(Optional) Print only the left column of two common lines in side by side format
-W	(Optional) Use an output width of <columns> in side by side format
columns	(Optional) Use an output width of <columns> in side by side format
-q	(Optional) Report only whether the files differ, not the details of the differences
-s	(Optional) Report when two files are the same

## Command Mode

- /output

# dir

```
dir [ <uri0> | <uri1> | <uri2> ] [ __readonly__ { TABLE_dir <fsize> <timestring> <fname> } { <usage>
<bytesused> <bytesfree> <bytestotal> } ]
```

## Syntax Description

dir	list files in a directory
uri0	(Optional) Directory or filename
uri1	(Optional) Directory or filename on expansion flash
uri2	(Optional) Directory or filename on log flash
__readonly__	(Optional) Read Only
TABLE_dir	(Optional) show dir
fsize	(Optional) filesize
timestring	(Optional) time string
fname	(Optional) filename
usage	(Optional) usage
bytesused	(Optional) bytes used
bytesfree	(Optional) bytes free
bytestotal	(Optional) bytes total

## Command Mode

- /exec

# disable-connected-check

[ no | default ] disable-connected-check

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
disable-connected-check	Disable check for directly connected peer

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor-sess

# disable-fka

[no] disable-fka

Syntax Description

no	(Optional) Negate a command or set its defaults
disable-fka	Disables verifying FIP Keep Alive

Command Mode

- /exec/configure/if-vfc



# disable-peer-as-check

[ no | default ] disable-peer-as-check

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
disable-peer-as-check	Disable checking of peer AS-number while advertising

Command Mode

- /exec/configure/router-bgp/router-bgp-vrf-neighbor/router-bgp-vrf-neighbor-af-ipv4
- /exec/configure/router-bgp/router-bgp-vrf-neighbor/router-bgp-vrf-neighbor-af-ipv6
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-l2vpn-evpn
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-label
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv6-label
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-mvpn
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv6-mvpn

## disable-policy-batching

```
[no] disable-policy-batching [ nexthop | { { ipv4 | ipv6 } prefix-list <prfxlist-name> } ]
```

### Syntax Description

no	(Optional) Negate a command or set its defaults
disable-policy-batching	Disable batching evaluation of outbound policy for a peer
nexthop	(Optional) batching based on nexthop
ipv4	(Optional) IPv4 address-family
ipv6	(Optional) IPv6 address-family
prefix-list	(Optional) Apply prefix-list
prfxlist-name	(Optional) Name of prefix-list

### Command Mode

- /exec/configure/router-bgp

# discard-route external

[no] discard-route { external | internal }

Syntax Description

no	(Optional) Negate a command or set its defaults
discard-route	Install discard route
external	External route
internal	Internal route

Command Mode

- /exec/configure/router-ospf3 /exec/configure/router-ospf3/vrf

## discard-route external

[no] discard-route { external | internal }

Syntax Description

no	(Optional) Negate a command or set its defaults
discard-route	Install discard route
external	External route
internal	Internal route

Command Mode

- /exec/configure/router-ospf /exec/configure/router-ospf/vrf

# disjoint

[no] disjoint

Syntax Description

no	(Optional) Negate a command or set its defaults
disjoint	Configure disjointness association type

Command Mode

- /exec/configure/sr/te/pol/cndpaths/pref/constraint/assoc

# disjoint

[no] disjoint

Syntax Description

no	(Optional) Negate a command or set its defaults
disjoint	Configure disjointness association type

Command Mode

- /exec/configure/sr/te/color/cndpaths/pref/constraint/assoc

# distance

distance <admin-dist> | no distance [ <admin-dist> ]

Syntax Description

no	Negate a command or set its defaults
distance	OSPF administrative distance
admin-dist	administrative distance value

Command Mode

- /exec/configure/router-ospf /exec/configure/router-ospf/vrf

# distance

distance <distance> | no distance [ <distance> ]

## Syntax Description

no	Negate a command or set its defaults
distance	RIP administrative distance
distance	RIP administrative distance

## Command Mode

- /exec/configure/router-rip/router-rip-af-common /exec/configure/router-rip/router-rip-vrf-af-common



# distance

distance <admin-dist> | no distance [ <admin-dist> ]

Syntax Description

no	Negate a command or set its defaults
distance	Administrative distance
admin-dist	Distance value

Command Mode

- /exec/configure/router-isis/router-isis-af-ipv4 /exec/configure/router-isis/router-isis-af-ipv6

# distance

distance <admin-dist> | no distance [ <admin-dist> ]

Syntax Description

no	Negate a command or set its defaults
distance	OSPFv3 administrative distance
admin-dist	administrative distance value

Command Mode

- /exec/configure/router-ospf3/router-ospf3-af-ipv6 /exec/configure/router-ospf3/vrf/router-ospf3-af-ipv6

# distance

```
{ { distance <int-distance> <ext-distance> } | { no distance [ <int-distance> <ext-distance> ] } }
```

## Syntax Description

no	Negate a command or set its defaults
distance	Define an administrative distance
int-distance	Distance for internal routes
ext-distance	Distance for external routes

## Command Mode

- /exec/configure/router-eigrp/router-eigrp-vrf-common /exec/configure/router-eigrp/router-eigrp-af-common

# distance

distance <ebgp-dist> <ibgp-dist> <local-dist> | no distance [ <ebgp-dist> <ibgp-dist> <local-dist> ]

## Syntax Description

no	Negate a command or set its defaults
distance	Configure administrative distance
ebgp-dist	Distance for EBGp routes
ibgp-dist	Distance for IBGP routes
local-dist	Distance for local routes

## Command Mode

- /exec/configure/router-bgp/router-bgp-af

## distribute into route-map all

```
{ { distribute <src-level> into <dst-level> { { route-map { <map-name> | <rtr_pol_name> } } | all } } | { no
distribute <src-level> into <dst-level> [ { route-map { <map-name> | <rtr_pol_name> } } | all ] } }
```

### Syntax Description

no	Negate a command or set its defaults
distribute	Distribute routes between ISIS levels
src-level	Route-distribution between levels
dst-level	Route-distribution between levels
route-map	Route Map to constrain distribution
into	from level-n into level-m
map-name	A 'routing-rules' route-map name
rtr_pol_name	An existing routing-rules policy
all	Distribute all level-n routes

### Command Mode

- /exec/configure/router-isis/router-isis-af-ipv4 /exec/configure/router-isis/router-isis-af-ipv6

## distribute link-state

[no] distribute link-state [ instance-id <instid> ] [ level <level> ] [ throttle <seconds> ]

### Syntax Description

no	(Optional) Negate a command or set its defaults
distribute	Distribute routes between ISIS levels
link-state	Distribute link-state
instance-id	(Optional) Instance ID of ISIS process
instid	(Optional) Instance ID of ISIS process
level	(Optional) Level to be distributed
level	(Optional) IS-IS level
throttle	(Optional) Throttle timer in seconds
seconds	(Optional) Throttle timer in seconds

### Command Mode

- /exec/configure/router-isis

# dns

```
[no] dns { <WORD> } { name-server { <hostname> | <ip-address> } } { [ source-ip { <source-ip-hostname> | <source-ip-address> } ] | [ source-port <src-port> ] } +
```

## Syntax Description

no	(Optional)
source-ip	(Optional) source-port
src-port	(Optional)
dns	DNS Operation
WORD	Target IP Address or Hostname
name-server	Name Server
hostname	Destination hostname, broadcast disallowed
ip-address	Destination IP address, broadcast disallowed
source-ip-hostname	(Optional) source IP hostname, broadcast disallowed
source-ip-address	(Optional) source IP address, broadcast disallowed
source-port	(Optional) Source Port

## Command Mode

- /exec/configure/ip-sla

# domain-id

domain-id { <id> | { type <dtype> value <dvalue> } | Null } | no domain-id [ <id> | { type <dtype> value <dvalue> } | Null ]

## Syntax Description

no	Negate a command or set its defaults
domain-id	OSPF domain-ID
id	OSPF domain ID in IP address format
type	OSPF domain ID type in Hex format
dtype	OSPF domain ID type in Hex format
value	OSPF domain ID ext. community value in Hex
dvalue	
Null	Null Domain-ID

## Command Mode

- /exec/configure/router-ospf/vrf



## domain-id secondary

domain-id { <id> | { type <dtype> value <dvalue> } | Null } secondary | no domain-id [ <id> | { type <dtype> value <dvalue> } | Null ] secondary

### Syntax Description

no	Negate a command or set its defaults
domain-id	OSPF domain-ID
id	OSPF domain ID in IP address format
type	OSPF domain ID type in Hex format
dtype	OSPF domain ID type in Hex format
value	OSPF domain ID ext. community value in Hex
dvalue	
Null	Null Domain-ID
secondary	Secondary Domain-ID

### Command Mode

- /exec/configure/router-ospf/vrf

# domain-tag

[no] domain-tag <as-number>

Syntax Description

no	(Optional) Negate a command or set its defaults
domain-tag	Set OSPF process domain-tag
as-number	AS number

Command Mode

- /exec/configure/router-ospf/vrf

# dont-capability-negotiate

[ no | default ] dont-capability-negotiate

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
dont-capability-negotiate	Don't negotiate capability with this neighbor

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor-sess

# dos2nxos

dos2nxos <uri0>

Syntax Description

dos2nxos	DOS to NXOS text file format converter
uri0	Filename to be displayed

Command Mode

- /exec

# dot1q

```
{ dot1q <vlan-id> [ cos <cos-val> ] } | { no dot1q }
```

## Syntax Description

no	Negate a command or set its defaults
dot1q	specify flow profile to include dot1q tag
vlan-id	specify flow profile vlan-id
cos	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED
cos-val	(Optional) class of service value

## Command Mode

- /exec/configure/configngoamprofileflow

# dot1q

```
{ dot1q <dot1q-id> [ <intf-id> ] } | { no dot1q }
```

## Syntax Description

no	Negate a command or set its defaults
dot1q	Encapsulation dot1q/bd
dot1q-id	Encapsulation dot1q/bd value
intf-id	(Optional) Name of the interface for ngoam on which dot1q is configured

## Command Mode

- /exec/configure/configngoamprofile

## dot1q default dynamic

{ dot1q default dynamic } | { no dot1q default }

### Syntax Description

no	Negate a command or set its defaults
dynamic	Dynamic Profile Map: Retrieve profile name from the external server
dot1q	Dot1Q Encapsulation
default	Default (wildcard). Match any dot1q when there is no specific dot1q mapping configured

### Command Mode

- /exec/configure/profile-map /exec/configure/profile-map-global

## dot1x default

dot1x default

Syntax Description

dot1x	dot1x configuration commands
-------	------------------------------

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all



# dot1x default

dot1x default

Syntax Description

dot1x	dot1x configuration commands
-------	------------------------------

Command Mode

- /exec/configure

## dot1x host-mode

dot1x host-mode <host\_mode> | no dot1x host-mode

Syntax Description

dot1x	dot1x configuration commands
host-mode	role of 802.1x authenticating entity
host_mode	Host Mode

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

## dot1x mac-auth-bypass

dot1x mac-auth-bypass [ eap ] | no dot1x mac-auth-bypass

Syntax Description

no	Negate a command or set its defaults
dot1x	dot1x configuration commands
mac-auth-bypass	Configure Mac-Auth-Bypass
eap	(Optional) EAP Authentication

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

## dot1x mac-move

dot1x mac-move <value> | no dot1x mac-move <value>

Syntax Description

dot1x	dot1x configuration commands
mac-move	Enable or Disable Mac-moves
value	Mac Move

Command Mode

- /exec/configure

## dot1x max-reauth-req

dot1x max-reauth-req <count> | no dot1x max-reauth-req

Syntax Description

dot1x	dot1x configuration commands
max-reauth-req	Maximum Re-authentication Attempts Before Failing
count	number of retries

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

## dot1x max-req

dot1x max-req <count> | no dot1x max-req

Syntax Description

dot1x	dot1x configuration commands
max-req	Maximum Retries to Initiate Authentication
count	number of retries

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

# dot1x pae

[no] dot1x pae <pae-value>

Syntax Description

dot1x	dot1x configuration commands
pae	role of 802.1x authenticating entity
pae-value	role

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

## dot1x port-control

[no] dot1x port-control <port-control-value>

Syntax Description

dot1x	dot1x configuration commands
port-control	port control
port-control-value	set the port-control value

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all



## dot1x radius-accounting

[no] dot1x radius-accounting

Syntax Description

dot1x	dot1x configuration commands
radius-accounting	accounting messages to RADIUS

Command Mode

- /exec/configure

## dot1x re-authenticate interface

dot1x re-authenticate interface <if>

Syntax Description

dot1x	dot1x configuration commands
re-authenticate	Manually re-authenticate an Interface
if	target interface

Command Mode

- /exec

## dot1x re-authentication

[no] dot1x re-authentication

Syntax Description

dot1x	dot1x configuration commands
re-authentication	Enable or Disable Reauthentication for this port

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

# dot1x show credential

dot1x show credential <name>

Syntax Description

dot1x	dot1x configuration commands
credential	supplicant credential profile
name	profile name

Command Mode

- /exec/configure/dot1x-cred

## dot1x system-auth-control

[no] dot1x system-auth-control

Syntax Description

dot1x	dot1x configuration commands
system-auth-control	Enable or Disable SysAuthControl

Command Mode

- /exec/configure

## dot1x timeout inactivity-period

dot1x timeout inactivity-period <value> | no dot1x timeout inactivity-period

Syntax Description

dot1x	dot1x configuration commands
timeout	Various Timeouts
inactivity-period	Timeout For Session Inactivity
value	time interval in seconds

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

## dot1x timeout quiet-period

dot1x timeout quiet-period <value> | no dot1x timeout quiet-period

Syntax Description

dot1x	dot1x configuration commands
timeout	Various Timeouts
quiet-period	Timeout For Retrying Authentication After Failed Authentication
value	time interval in seconds

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

## dot1x timeout ratelimit-period

dot1x timeout ratelimit-period <value> | no dot1x timeout ratelimit-period

Syntax Description

dot1x	dot1x configuration commands
timeout	Various Timeouts
ratelimit-period	Rate Limit period for EAPOL-Start
value	time interval in seconds

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all



## dot1x timeout re-authperiod

dot1x timeout re-authperiod <value> | no dot1x timeout re-authperiod

Syntax Description

dot1x	dot1x configuration commands
timeout	Various Timeouts
re-authperiod	Timeout For Re-Authentication
value	time interval in seconds

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

## dot1x timeout server-timeout

dot1x timeout server-timeout <value> | no dot1x timeout server-timeout

### Syntax Description

dot1x	dot1x configuration commands
timeout	Various Timeouts
server-timeout	Timeout for Radius Retries
value	time interval in seconds

### Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

## dot1x timeout supp-timeout

dot1x timeout supp-timeout <value> | no dot1x timeout supp-timeout

Syntax Description

dot1x	dot1x configuration commands
timeout	Various Timeouts
supp-timeout	Timeout for Supplicant retries
value	time interval in seconds

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

## dot1x timeout tx-period

dot1x timeout tx-period <value> | no dot1x timeout tx-period

Syntax Description

dot1x	dot1x configuration commands
timeout	Various Timeouts
tx-period	Timeout For Resending Requests To Supplicant
value	time interval in seconds

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

# down-bit-ignore

{ down-bit-ignore } | { no down-bit-ignore }

## Syntax Description

no	Negate a command or set its defaults
down-bit-ignore	Configure a PE router to ignore the DN bit for network summary, external and NSSA external LSA

## Command Mode

- /exec/configure/router-ospf/vrf

## downlink delay

downlink delay <ena-dis-flg> [ timeout <time-out> ] | no downlink delay

Syntax Description

no	Negate a command or set its defaults
downlink	Change downlink linkup time
delay	delay bringup of downlinks
ena-dis-flg	Enable/Disable downlink delay feature
timeout	(Optional) downlink ports enable delay in seconds
time-out	(Optional) Time out

Command Mode

- /exec/configure

# drop-trigger

[no] drop-trigger { ingress-admission | egress-admission | wred }

## Syntax Description

no	(Optional) Negate the command
drop-trigger	Configure drop-trigger parameters
ingress-admission	Ingress Admission Drop
egress-admission	Egress Admission Drop
wred	Weighted Random Early Discard Drop

## Command Mode

- /exec/configure/pkt-drop

# dscp

{ [ no ] dscp <dscp> | no dscp }

## Syntax Description

dscp	Optional DSCP
dscp	Differentiated services codepoint value

## Command Mode

- /exec/configure/nfm-exporter



# dscp

{ [ no ] dscp <dscp> | no dscp }

## Syntax Description

dscp	Provide the dscp value for this INT flow-profile
dscp	flow-profile dscp (allowed values: 1, 2, 4, 8, 16, 32, 63). Default is 1

## Command Mode

- /exec/configure/config-int-flow-prof

# dscp

{ [ no ] dscp <dscp> | no dscp }

## Syntax Description

dscp	Optional DSCP
dscp	Differentiated services codepoint value

## Command Mode

- /exec/configure/nfm-exporter

# dscp

[no] dscp <dscp>

Syntax Description

dscp	DSCP
dscp	DSCP to be configured

Command Mode

- /exec/configure/config-ssx-exporter

# dscp

```
dscp { <dscp-enum> | <dscp-val> } | { no | default } dscp [ { <dscp-enum> | <dscp-val> } ]
```

## Syntax Description

no	Negate a command or set its defaults
default	Inherit values from a peer template
dscp	Set dscp value for tcp transport
dscp-val	Specify DSCP value for Locally Originated packets for IPv4 and IPv6
dscp-enum	

## Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor-sess

# dst-grp

[no] dst-grp <d-grp-id>

Syntax Description

no	(Optional) Negate a command or set its defaults
dst-grp	Associated destination group
d-grp-id	Identifier

Command Mode

- /exec/configure/telemetry/subscription

## dual-active exclude interface-vlan

dual-active exclude interface-vlan <allow-vlans> | no dual-active exclude interface-vlan

Syntax Description

no	Negate a command or set its defaults
dual-active	Configuration when peer link is down but peer is alive
interface-vlan	Interface vlan configuration
exclude	Interface vlans to exclude from suspension when dual-active
allow-vlans	Set allowed interface vlans

Command Mode

- /exec/configure/vpc-domain

# duplex

duplex <duplex\_mode> | no duplex [ <duplex\_mode> ]

Syntax Description

no	Negate a command or set its defaults
duplex	Enter the port duplex mode
duplex_mode	Interface duplex mode

Command Mode

- /exec/configure/if-mgmt-ether

# duplex

duplex <duplex\_mode> | no duplex [ <duplex\_mode> ]

Syntax Description

no	Negate a command or set its defaults
duplex	Enter the port duplex mode
duplex_mode	Interface duplex mode

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-non-member /exec/configure/if-port-channel



# duplicate-message throttle

[no] duplicate-message throttle

Syntax Description

no	(Optional) Negate a command or set its defaults
duplicate-message	Configure throttling of duplicate callhome alert messages
throttle	Enable throttling of duplicate callhome alert messages

Command Mode

- /exec/configure/callhome

# dynamic-capability

[ no | default ] dynamic-capability

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
dynamic-capability	Dynamic capability

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor-sess

# dynamic-med-interval

[no] dynamic-med-interval <sec>

Syntax Description

no	(Optional) Negate a command or set its defaults
dynamic-med-interval	Sets the interval for dampening of med changes
sec	Time interval in seconds

Command Mode

- /exec/configure/router-bgp

# dynamic

[no] dynamic

Syntax Description

no	(Optional) Negate a command or set its defaults
dynamic	Enter dynamic properties for path

Command Mode

- /exec/configure/sr/te/color/cndpaths/pref

# dynamic

[no] dynamic

Syntax Description

no	(Optional) Negate a command or set its defaults
dynamic	Enter dynamic properties for path

Command Mode

- /exec/configure/sr/te/pol/cndpaths/pref

