



## D Commands

---

- dampen-igp-metric, on page 6
- dampening, on page 7
- dampening, on page 8
- data-pattern, on page 9
- data-source, on page 10
- database-mapping, on page 11
- databits, on page 12
- databits, on page 13
- datapath transport mts, on page 14
- db-jid, on page 15
- db-security user password, on page 16
- db-table, on page 17
- dead-interval, on page 18
- dead-interval, on page 19
- dead-interval, on page 20
- deadtime, on page 21
- deadtime, on page 22
- deadtime, on page 23
- dec, on page 24
- default-information originate, on page 25
- default-information originate, on page 26
- default-information originate, on page 27
- default-information originate, on page 28
- default-information originate, on page 29
- default-information originate, on page 30
- default-information originate always rd route-target, on page 31
- default-metric, on page 32
- default-metric, on page 33
- default-metric, on page 34
- default-metric, on page 35
- default-metric, on page 36
- default-originate, on page 37
- define, on page 38

- [delay](#), on page 39
- [delay](#), on page 40
- [delay](#), on page 41
- [delay peer-link](#), on page 42
- [delay restore](#), on page 43
- [delay restore interface](#), on page 44
- [delay up](#), on page 45
- [delete](#), on page 46
- [delete ca-certificate](#), on page 47
- [delete certificate](#), on page 48
- [delete crl](#), on page 49
- [demand-circuit](#), on page 50
- [description](#), on page 51
- [description](#), on page 52
- [description](#), on page 53
- [description](#), on page 54
- [description](#), on page 55
- [description](#), on page 56
- [description](#), on page 57
- [description](#), on page 58
- [description](#), on page 59
- [description](#), on page 60
- [description](#), on page 61
- [description](#), on page 62
- [description](#), on page 63
- [description](#), on page 64
- [description](#), on page 65
- [description](#), on page 66
- [description](#), on page 67
- [description](#), on page 68
- [description](#), on page 69
- [description](#), on page 70
- [description](#), on page 71
- [description](#), on page 72
- [description](#), on page 73
- [description](#), on page 74
- [description](#), on page 75
- [description](#), on page 76
- [description](#), on page 77
- [description](#), on page 78
- [description](#), on page 79
- [description](#), on page 80
- [description](#), on page 81
- [description](#), on page 82
- [description](#), on page 83
- [description description](#), on page 84

- dest-ipaddr, on page 85
- dest-port, on page 86
- destination-group, on page 87
- destination-profile, on page 88
- destination-profile CiscoTAC-1 alert-group, on page 89
- destination-profile CiscoTAC-1 email-addr, on page 90
- destination-profile CiscoTAC-1 http, on page 91
- destination-profile CiscoTAC-1 message-level, on page 92
- destination-profile CiscoTAC-1 message-size, on page 93
- destination-profile CiscoTAC-1 transport-method email, on page 94
- destination-profile CiscoTAC-1 transport-method http, on page 95
- destination-profile alert-group, on page 96
- destination-profile email-addr, on page 97
- destination-profile format, on page 98
- destination-profile full-txt-destination alert-group, on page 99
- destination-profile full-txt-destination email-addr, on page 100
- destination-profile full-txt-destination http, on page 101
- destination-profile full-txt-destination message-level, on page 102
- destination-profile full-txt-destination message-size, on page 103
- destination-profile full-txt-destination transport-method email, on page 104
- destination-profile full-txt-destination transport-method http, on page 105
- destination-profile http, on page 106
- destination-profile message-level, on page 107
- destination-profile message-size, on page 108
- destination-profile short-txt-destination alert-group, on page 109
- destination-profile short-txt-destination email-addr, on page 110
- destination-profile short-txt-destination http, on page 111
- destination-profile short-txt-destination message-level, on page 112
- destination-profile short-txt-destination message-size, on page 113
- destination-profile short-txt-destination transport-method email, on page 114
- destination-profile short-txt-destination transport-method http, on page 115
- destination-profile transport-method email, on page 116
- destination-profile transport-method http, on page 117
- destination-sup interface, on page 118
- destination, on page 119
- destination1 interface, on page 120
- destination, on page 121
- destination interface, on page 122
- destination ip, on page 123
- device-group, on page 124
- device-group, on page 125
- devtest sap, on page 126
- diagnostic bootup level, on page 127
- diagnostic bootup level bypass, on page 128
- diagnostic clear result module all diagnostic clear result module test, on page 129
- diagnostic eem action aggressive, on page 130

- diagnostic monitor interval module test all hour min second, on page 131
- diagnostic monitor module all, on page 132
- diagnostic monitor module test all, on page 133
- diagnostic ondemand action-on-failure continue failure-count diagnostic ondemand action-on-failure stop, on page 134
- diagnostic ondemand iteration, on page 135
- diagnostic ondemand test-parameter module test port\_lb packet-length, on page 136
- diagnostic pss shrink, on page 137
- diagnostic start module test, on page 138
- diagnostic stop module test all, on page 139
- diagnostic test simulation module test diagnostic test simulation module test clear, on page 140
- diff-clean, on page 141
- diff-clean all-users, on page 142
- diff, on page 143
- dir, on page 144
- disable-connected-check, on page 145
- disable-memory-alert-check, on page 146
- disable-peer-as-check, on page 147
- disable-policy-batching, on page 148
- disable, on page 149
- discard-route external, on page 150
- discard-route external, on page 151
- discovery, on page 152
- distance, on page 153
- distance, on page 154
- distance, on page 155
- distance, on page 156
- distance, on page 157
- distance, on page 158
- distribute-list route in, on page 159
- distribute into route-map all, on page 160
- dns, on page 161
- domain-id, on page 162
- domain-id secondary, on page 163
- domain-tag, on page 164
- dont-capability-negotiate, on page 165
- dos2nxos, on page 166
- dot1q, on page 167
- dot1q, on page 168
- dot1q default dynamic, on page 169
- dot1x default, on page 170
- dot1x default, on page 171
- dot1x host-mode, on page 172
- dot1x initialize, on page 173
- dot1x mac-auth-bypass, on page 174
- dot1x max-reauth-req, on page 175

- dot1x max-req, on page 176
- dot1x max-req, on page 177
- dot1x pae, on page 178
- dot1x port-control, on page 179
- dot1x radius-accounting, on page 180
- dot1x re-authenticate, on page 181
- dot1x re-authentication, on page 182
- dot1x re-authentication, on page 183
- dot1x show credential, on page 184
- dot1x start supplicant interface, on page 185
- dot1x stop supplicant interface, on page 186
- dot1x supplicant credential, on page 187
- dot1x supplicant credential, on page 188
- dot1x supplicant default, on page 189
- dot1x supplicant max-start, on page 190
- dot1x supplicant max-start, on page 191
- dot1x supplicant timeout auth-period, on page 192
- dot1x supplicant timeout auth-period, on page 193
- dot1x supplicant timeout held-period, on page 194
- dot1x supplicant timeout held-period, on page 195
- dot1x supplicant timeout start-period, on page 196
- dot1x supplicant timeout start-period, on page 197
- dot1x system-auth-control, on page 198
- dot1x timeout quiet-period, on page 199
- dot1x timeout quiet-period, on page 200
- dot1x timeout ratelimit-period, on page 201
- dot1x timeout re-authperiod, on page 202
- dot1x timeout re-authperiod, on page 203
- dot1x timeout server-timeout, on page 204
- dot1x timeout supp-timeout, on page 205
- dot1x timeout tx-period, on page 206
- dot1x timeout tx-period, on page 207
- down-bit-ignore, on page 208
- downlink delay, on page 209
- dpp set-qos-group, on page 210
- dscp, on page 211
- dst-grp, on page 212
- dual-active exclude interface-vlan, on page 213
- dual-stage translate xml, on page 214
- duplex, on page 215
- duplex, on page 216
- duplicate-message throttle, on page 217
- dynamic-capability, on page 218
- dynamic-med-interval, on page 219

# dampen-igp-metric

dampen-igp-metric <sec> | no dampen-igp-metric

## Syntax Description

|                   |                                      |
|-------------------|--------------------------------------|
| no                | Negate a command or set its defaults |
| dampen-igp-metric | Dampen IGP metric-related changes    |
| <i>sec</i>        | Time interval in seconds             |

## Command Mode

- /exec/configure/router-bgp/router-bgp-af

# dampening

[no] dampening [ { <half-life> <reuse-limit> <suppress-limit> <max-suppress-time> } | { route-map <rmap-name> } ]

## Syntax Description

|                          |  |
|--------------------------|--|
| no                       | (Optional) Negate a command or set its defaults          |
| dampening                | Configure route flap dampening                           |
| <i>half-life</i>         | (Optional) Decay half life                               |
| <i>reuse-limit</i>       | (Optional) Value to start reusing a route                |
| <i>suppress-limit</i>    | (Optional) Value to start suppressing a route            |
| <i>max-suppress-time</i> | (Optional) Maximum suppress time for stable route        |
| route-map                | (Optional) Apply route-map to specify dampening criteria |
| <i>rmap-name</i>         | (Optional) Route-map name                                |

## Command Mode

- /exec/configure/router-bgp/router-bgp-af /exec/configure/router-bgp/router-bgp-af-vpnv4
- /exec/configure/router-bgp/router-bgp-af-vpnv6 /exec/configure/router-bgp/router-bgp-af-link-state
- /exec/configure/router-bgp/router-bgp-af-l2vpn-evpn

# dampening

[no] dampening [ { <half-life> <reuse-limit> <suppress-limit> <max-suppress-time> } | { route-map <rmap-name> } ]

## Syntax Description

|                          |  |
|--------------------------|--|
| no                       | (Optional) Negate a command or set its defaults          |
| dampening                | Configure route flap dampening                           |
| <i>half-life</i>         | (Optional) Decay half life                               |
| <i>reuse-limit</i>       | (Optional) Value to start reusing a route                |
| <i>suppress-limit</i>    | (Optional) Value to start suppressing a route            |
| <i>max-suppress-time</i> | (Optional) Maximum suppress time for stable route        |
| route-map                | (Optional) Apply route-map to specify dampening criteria |
| <i>rmap-name</i>         | (Optional) Route-map name                                |

## Command Mode

- /exec/configure/router-bgp/router-bgp-af-ipv4-mdt /exec/configure/router-bgp/router-bgp-af-l2vpn-vpls

# data-pattern

{ { no | default } data-pattern | data-pattern <hex-pattern> }

## Syntax Description

|                    |                               |
|--------------------|-------------------------------|
| no                 |                               |
| default            | Set a command to its defaults |
| data-pattern       | Data Pattern                  |
| <i>hex-pattern</i> | Data Pattern in Hex           |

## Command Mode

- /exec/configure/ip-sla/udp

# data-source

{ data-source <type> } | { no data-source [ <type> ] }

## Syntax Description

|             |                                      |
|-------------|--------------------------------------|
| no          | Negate a command or set its defaults |
| data-source | Specify the data source              |
| <i>type</i> |                                      |

## Command Mode

- /exec/configure/telemetry/sensor-group

# database-mapping

```
{ [ no ] database-mapping { <eid-prefix> | <eid-prefix6> } { redistribute | { { <locator> | <locator6> } priority <priority> weight <weight> } } }
```

## Syntax Description

|                   |  |
|-------------------|--|
| no                | (Optional) Negate a command or set its defaults      |
| database-mapping  | Configure EID-prefix and locator-set for dynamic-EID |
| <i>eid-prefix</i> | IP EID-prefix for RLOC static mapping                |
| <i>locator</i>    | IP address of LISP-VM routers                        |
| <i>priority</i>   | Configures which Locators from a set are preferred   |
| <i>priority</i>   | Lower priority Locator takes preference              |
| <i>weight</i>     | Traffic load-spreading among Locators                |
| <i>weight</i>     | Specified in a percentage from 0 to 100              |
| redistribute      | Used for redistributing into routing protocols       |

## Command Mode

- /exec/configure/lisp-dynamic-eid /exec/configure/vrf/lisp-dynamic-eid

# databits

[no] databits <i0>

## Syntax Description

|           |   |
|-----------|---|
| no        | (Optional) Negate a command or set its defaults |
| databits  | Set number of databits per character            |
| <i>i0</i> | Number of data bits                             |

## Command Mode

- /exec/configure/com1

# databits

[no] databits <i0>

## Syntax Description

|           |   |
|-----------|---|
| no        | (Optional) Negate a command or set its defaults |
| databits  | Set number of databits per character            |
| <i>i0</i> | Number of data bits                             |

## Command Mode

- /exec/configure/console

**datapath transport mts**

# datapath transport mts

[no] datapath transport mts

## Syntax Description

|           |   |
|-----------|---|
| no        | (Optional) Negate a command or set its defaults |
| datapath  | One Platform datapath                           |
| transport | transport for datapath                          |
| mts       |   |

## Command Mode

- /exec/configure/onep

# db-jid

[no] db-jid <jid> [ key-type <key-type> ]

## Syntax Description

|                 |   |
|-----------------|---|
| no              | (Optional) Negate a command or set its defaults |
| db-jid          | Jabber ID of database                           |
| <i>jid</i>      | Enter Jabber ID of database                     |
| key-type        | (Optional) Query key type for this database     |
| <i>key-type</i> | (Optional)                                      |

## Command Mode

- /exec/configure/fabric-db/server-xmpp

# db-security user password

[no] db-security user <user> password { 0 <clear> | 7 <encrypted> | <password> } [ shared-secret { 10 <clear> | 7 <encrypted> | <secret> } ]

## Syntax Description

|                  |   |
|------------------|---|
| no               | (Optional) Negate a command or set its defaults                         |
| db-security      | Database Security   |
| user             | User ID   |
| <i>user</i>      | Enter user ID   |
| password         | Password  |
| 0                | Password that follows should be in clear text                           |
| <i>clear</i>     | Password in clear text  |
| 7                | Password that follows should be in encrypted text                       |
| <i>encrypted</i> | Encrypted password  |
| <i>password</i>  | Enter password in clear text  |
| shared-secret    | (Optional) Shared-secret  |
| 10               | (Optional) Indicates that password that follows should be in clear text |
| <i>clear</i>     | (Optional) Password in clear text                                       |
| 7                | (Optional) Password that follows should be in encrypted text            |
| <i>encrypted</i> | (Optional) Encrypted password   |
| <i>secret</i>    | (Optional) Enter shared-secret in clear text                            |

## Command Mode

- /exec/configure/fabric-db/server-ldap

# db-table

[no] db-table <tablename> [ key-type <key-type> ]

## Syntax Description

|                  |   |
|------------------|---|
| no               | (Optional) Negate a command or set its defaults |
| db-table         | Table name to search                            |
| <i>tablename</i> | Enter table name to search                      |
| key-type         | (Optional) Query key type for this table        |
| <i>key-type</i>  | (Optional)                                      |

## Command Mode

- /exec/configure/fabric-db/server-ldap

**dead-interval**

# dead-interval

{ { dead-interval &lt;interval&gt; } | { no dead-interval [ &lt;interval&gt; ] } }

## Syntax Description

|                 |                                      |
|-----------------|--------------------------------------|
| no              | Negate a command or set its defaults |
| dead-interval   | Dead interval                        |
| <i>interval</i> | (seconds)                            |

## Command Mode

- /exec/configure/router-ospf/router-ospf-vlink /exec/configure/router-ospf/vrf/router-ospf-vlink

# dead-interval

```
{ { dead-interval <interval> } | { no dead-interval [ <interval> ] } }
```

## Syntax Description

|                 |                                      |
|-----------------|--------------------------------------|
| no              | Negate a command or set its defaults |
| dead-interval   | Dead interval                        |
| <i>interval</i> | (seconds)                            |

## Command Mode

- /exec/configure/router-ospf/vrf/router-ospf-slink

**dead-interval**

# dead-interval

{ { dead-interval &lt;interval&gt; } | { no dead-interval [ &lt;interval&gt; ] } }

## Syntax Description

|                 |                                      |
|-----------------|--------------------------------------|
| no              | Negate a command or set its defaults |
| dead-interval   | Dead interval                        |
| <i>interval</i> | (seconds)                            |

## Command Mode

- /exec/configure/router-ospf3/router-ospf3-vlink /exec/configure/router-ospf3/vrf/router-ospf3-vlink

# deadtime

[no] deadtime <i0>

## Syntax Description

|           |  |
|-----------|--|
| no        | (Optional) Negate a command or set its defaults    |
| deadtime  | duration for which non-reachable server is skipped |
| <i>i0</i> | Length of time, in minutes                         |

## Command Mode

- /exec/configure/ldap

**deadtime**

# deadtime

[no] deadtime <i0>

## Syntax Description

|           |  |
|-----------|--|
| no        | (Optional) Negate a command or set its defaults    |
| deadtime  | duration for which non-reachable server is skipped |
| <i>i0</i> | Length of time, in minutes                         |

## Command Mode

- /exec/configure/tacacs+

# deadtime

[no] deadtime <i0>

## Syntax Description

|           |  |
|-----------|--|
| no        | (Optional) Negate a command or set its defaults    |
| deadtime  | duration for which non-reachable server is skipped |
| <i>i0</i> | Length of time, in minutes                         |

## Command Mode

- /exec/configure/radius

# dec

dec <expr>

## Syntax Description

|             |   |
|-------------|---|
| dec         | calculator with results in decimal format       |
| <i>expr</i> | the expression to compute (integer arithmetics) |

## Command Mode

- /exec

# default-information originate

[no] default-information originate [ always ] [ route-map <map-name> ]

## Syntax Description

|                     |   |
|---------------------|---|
| no                  | (Optional) Negate a command or set its defaults |
| default-information | RIP control distribution of default route       |
| originate           | RIP distribute a default route                  |
| always              | (Optional) RIP always advertise default route   |
| route-map           | (Optional) Policy to constrain redistribution   |
| <i>map-name</i>     | (Optional) Route-map name                       |

## Command Mode

- /exec/configure/router-rip/router-rip-af-common /exec/configure/router-rip/router-rip-vrf-af-common

**default-information originate**

## default-information originate

[no] default-information originate [ always ] [ route-map <policy-name> ]

### Syntax Description

|                     |  |
|---------------------|--|
| no                  | (Optional) Negate a command or set its defaults            |
| default-information | Control distribution of default route                      |
| originate           | Distribute a default route                                 |
| always              | (Optional) Always advertise default route                  |
| route-map           | (Optional) Policy to control distribution of default route |
| <i>policy-name</i>  | (Optional) Route-map name                                  |

### Command Mode

- /exec/configure/router-ospf /exec/configure/router-ospf/vrf

# default-information originate

[no] default-information originate [ always ] [ route-map <map-name> ]

## Syntax Description

|                     |   |
|---------------------|---|
| no                  | (Optional) Negate a command or set its defaults |
| default-information | Control origination of a default route          |
| originate           | Originate a default route                       |
| always              | (Optional) Always advertise default route       |
| route-map           | (Optional) Route-map to announce default routes |
| <i>map-name</i>     | (Optional) A 'routing-rules' route-map name     |

## Command Mode

- /exec/configure/router-isis/router-isis-vrf-common /exec/configure/router-isis/router-isis-af-common

**default-information originate**

## default-information originate

[no] default-information originate [ always ] [ route-map <policy-name> ]

### Syntax Description

|                     |  |
|---------------------|--|
| no                  | (Optional) Negate a command or set its defaults            |
| default-information | Control distribution of default route                      |
| originate           | Distribute a default route                                 |
| always              | (Optional) Always advertise default route                  |
| route-map           | (Optional) Policy to control distribution of default route |
| <i>policy-name</i>  | (Optional) Route-map name                                  |

### Command Mode

- /exec/configure/router-ospf3/router-ospf3-af-ipv6 /exec/configure/router-ospf3/vrf/router-ospf3-af-ipv6

# default-information originate

[no] default-information originate [ always ] [ route-map <map> ]

## Syntax Description

|                     |  |
|---------------------|--|
| no                  | (Optional) Negate a command or set its defaults      |
| default-information | Control origination of a default route               |
| originate           | Originate a default route                            |
| always              | (Optional) Always advertise default route            |
| route-map           | (Optional) Use a route-map for default route metrics |
| map                 | (Optional) Route-map name                            |

## Command Mode

- /exec/configure/router-eigrp/router-eigrp-vrf-common /exec/configure/router-eigrp/router-eigrp-af-common

**default-information originate**

[no] default-information originate

**Syntax Description**

|                     |   |
|---------------------|---|
| no                  | (Optional) Negate a command or set its defaults |
| default-information | Control distribution of default information     |
| originate           | Distribute a default route                      |

**Command Mode**

- /exec/configure/router-bgp/router-bgp-af /exec/configure/router-bgp/router-bgp-af-ipv6-label  
/exec/configure/router-bgp/router-bgp-af-ipv4-label

# default-information originate always rd route-target

[no] default-information originate always rd { <ext-comm-rd-aa2nn4> | <ext-comm-rd-aa4nn2> } route-target { <ext-comm-rt-aa2nn4> | <ext-comm-rt-aa4nn2> }

## Syntax Description

|                           |   |
|---------------------------|---|
| no                        | (Optional) Negate a command or set its defaults   |
| default-information       | Control distribution of default information       |
| originate                 | Distribute a default route                        |
| always                    | Always advertise default route                    |
| rd                        | VPN Route Distinguisher                           |
| <i>ext-comm-rd-aa4nn2</i> | VPN route distinguisher in aa4:nn or ip:nn format |
| <i>ext-comm-rd-aa2nn4</i> | VPN route distinguisher in aa:nn format           |
| route-target              | Specify Target VPN Extended Communities           |
| <i>ext-comm-rt-aa4nn2</i> | RT extcommunity in aa4:nn or ip:nn format         |
| <i>ext-comm-rt-aa2nn4</i> | RT extcommunity in aa:nn format                   |

## Command Mode

- /exec/configure/router-bgp/router-bgp-af-vpnv4 /exec/configure/router-bgp/router-bgp-af-vpnv6

# default-metric

default-metric <metric> | no default-metric [ <metric> ]

## Syntax Description

|                |                                      |
|----------------|--------------------------------------|
| no             | Negate a command or set its defaults |
| default-metric | RIP default metric                   |
| <i>metric</i>  | RIP metric value                     |

## Command Mode

- /exec/configure/router-rip/router-rip-af-common /exec/configure/router-rip/router-rip-vrf-af-common

# default-metric

{ default-metric <cost> } | { no default-metric [ <cost> ] }

## Syntax Description

|                |   |
|----------------|---|
| no             | Negate a command or set its defaults            |
| default-metric | Specify default metric for redistributed routes |
| <i>cost</i>    | Metric value                                    |

## Command Mode

- /exec/configure/router-ospf /exec/configure/router-ospf/vrf

# default-metric

{ default-metric <cost> } | { no default-metric [ <cost> ] }

## Syntax Description

|                |   |
|----------------|---|
| no             | Negate a command or set its defaults            |
| default-metric | Specify default metric for redistributed routes |
| <i>cost</i>    | Metric value                                    |

## Command Mode

- /exec/configure/router-ospf3/router-ospf3-af-ipv6 /exec/configure/router-ospf3/vrf/router-ospf3-af-ipv6

# default-metric

{ { default-metric <bw> <delay> <rel> <load> <mtu> } | { no default-metric [ <bw> <delay> <rel> <load> <mtu> ] } }

## Syntax Description

|                |   |
|----------------|---|
| no             | Negate a command or set its defaults                          |
| default-metric | Set metric of redistributed routes                            |
| <i>bw</i>      | Bandwidth in Kbits per second                                 |
| <i>delay</i>   | Delay metric  |
| <i>rel</i>     | Reliability metric where 255 is 100% reliable                 |
| <i>load</i>    | Effective bandwidth metric (Loading) where 255 is 100% loaded |
| <i>mtu</i>     | Maximum Transmission Unit metric of the path                  |

## Command Mode

- /exec/configure/router-eigrp/router-eigrp-vrf-common /exec/configure/router-eigrp/router-eigrp-af-common

# default-metric

[no] default-metric <metric>

## Syntax Description

|                |   |
|----------------|---|
| no             | (Optional) Negate a command or set its defaults |
| default-metric | Set metric of redistributed routes              |
| <i>metric</i>  | Default Metric                                  |

## Command Mode

- /exec/configure/router-bgp/router-bgp-af

# default-originate

[ no | default ] default-originate [ route-map <rmap-name> ]

## Syntax Description

|                   |  |
|-------------------|--|
| no                | (Optional) Negate a command or set its defaults                  |
| default           | (Optional) Inherit values from a peer template                   |
| default-originate | Originate a default toward this peer                             |
| route-map         | (Optional) Route-map to specify criteria for originating default |
| <i>rmap-name</i>  | (Optional) Route-map name  |

## Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-label
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv6-label

# define

[no] define <paramname> [ <paramtype> ] [ <paramdesc> ]

## Syntax Description

|                  |   |
|------------------|---|
| no               | (Optional) Negate a command or set its defaults |
| define           | Define a parameter                              |
| <i>paramname</i> | Enter the name of the parameter                 |
| <i>paramtype</i> | (Optional) param type                           |
| <i>paramdesc</i> | (Optional) Enter the parameter description      |

## Command Mode

- /exec/configure/param-list

# delay

delay <delay\_val> | no delay [ <delay\_val> ]

## Syntax Description

|                  |   |
|------------------|---|
| no               | Negate a command or set its defaults    |
| delay            | Specify interface throughput delay      |
| <i>delay_val</i> | Throughput delay (tens of microseconds) |

## Command Mode

- /exec/configure/if-ether-sub /exec/configure/if-ether-sub-p2p /exec/configure/if-port-channel-sub

# delay

delay <delay\_val> | no delay [ <delay\_val> ]

## Syntax Description

|                  |   |
|------------------|---|
| no               | Negate a command or set its defaults    |
| delay            | Specify interface throughput delay      |
| <i>delay_val</i> | Throughput delay (tens of microseconds) |

## Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-non-member /exec/configure/if-port-channel  
/exec/configure/if-ethernet-all /exec/configure/if-ethernet-p2p /exec/configure/if-remote-ethernet-sub  
/exec/configure/if-port-channel-range

# delay

delay <microseconds> | no delay

## Syntax Description

|                     |   |
|---------------------|---|
| no                  | Negate a command or set its defaults    |
| delay               | Specify interface throughput delay      |
| <i>microseconds</i> | Throughput delay (tens of microseconds) |

## Command Mode

- /exec/configure/if-vlan-common

**delay peer-link**

# delay peer-link

delay peer-link <time> | no delay peer-link

## Syntax Description

|             |   |
|-------------|---|
| no          | Negate a command or set its defaults            |
| delay       | Peer-link bringup delay                         |
| peer-link   | Delay peer-link bringup                         |
| <i>time</i> | Delay in bringing up the peer-link (in seconds) |

## Command Mode

- /exec/configure/vpc-domain

# delay restore

delay restore <time-out> | no delay restore

## Syntax Description

|                 |   |
|-----------------|---|
| no              | Negate a command or set its defaults            |
| delay           | Initialization delay                            |
| restore         | Delay after restoring peer-link                 |
| <i>time-out</i> | Delay in bringing up the vPC links (in seconds) |

## Command Mode

- /exec/configure/vpc-domain

**delay restore interface**

## delay restore interface

```
delay restore { interface-vlan <time-out> | interface-bridge-domain <time-out> } | no delay restore {  
interface-vlan | interface-bridge-domain }
```

### Syntax Description

|                         |   |
|-------------------------|---|
| no                      | Negate a command or set its defaults  |
| delay                   | Initialization delay  |
| restore                 | Delay after restoring peer-link   |
| interface-vlan          | Delay in bringing-up interface-vlan   |
| interface-bridge-domain | Delay in bringing-up interface-bridge-domain                                    |
| <i>time-out</i>         | Delay in bringing up the interface-vlan or interface-bridge-domain (in seconds) |

### Command Mode

- /exec/configure/vpc-domain

# delay up

delay { { up <up\_delay> [ down <down\_delay> ] } | { down <down\_delay> [ up <up\_delay> ] } } | no delay

## Syntax Description

|                   |   |
|-------------------|---|
| no                | Negate a command or set its defaults      |
| delay             | Tracking delay                            |
| up                | Delay up change notification              |
| <i>up_delay</i>   | Seconds to delay                          |
| down              | (Optional) Delay down change notification |
| <i>down_delay</i> | (Optional) Seconds to delay               |

## Command Mode

- /exec/configure/track /exec/configure/tr-list-bool /exec/configure/tr-list-thrp /exec/configure/tr-list-thrw

**delete**

# delete

```
delete { <uri0> | <uri1> | <uri2> } [ no-prompt ]
```

## Syntax Description

|             |   |
|-------------|---|
| delete      | delete a file or directory                              |
| <i>uri0</i> | Delete a file or directory                              |
| <i>uri1</i> | Delete a file or directory on expansion flash           |
| <i>uri2</i> | Directory or filename on logflash                       |
| no-prompt   | (Optional) Do not prompt for multiple deletion of files |

## Command Mode

- /exec

# delete ca-certificate

delete ca-certificate

## Syntax Description

|                |                            |
|----------------|----------------------------|
| delete         | Delete the certificates    |
| ca-certificate | Delete the ca certificates |

## Command Mode

- /exec/configure/trustpoint

**delete certificate**

# delete certificate

```
delete certificate [ force ]
```

## Syntax Description

|             |  |
|-------------|--|
| delete      | Delete the certificates                          |
| certificate | Delete the identity certificate                  |
| force       | (Optional) Force delete the identity certificate |

## Command Mode

- /exec/configure/trustpoint

# delete crl

delete crl

## Syntax Description

|        |                         |
|--------|-------------------------|
| delete | Delete the certificates |
| crl    | Delete the CRL          |

## Command Mode

- /exec/configure/trustpoint

**demand-circuit**

# demand-circuit

[no] demand-circuit

## Syntax Description

|                |   |
|----------------|---|
| no             | (Optional) Negate a command or set its defaults |
| demand-circuit | OSPF Demand circuit                             |

## Command Mode

- /exec/configure/router-ospf/vrf/router-ospf-slink

# description

```
{ [ no ] description <text> }
```

## Syntax Description

|             |                              |
|-------------|------------------------------|
| description | description for this profile |
| <i>text</i> | description                  |

## Command Mode

- /exec/configure/dot1x-cred

# description

description <descr> | no description

## Syntax Description

|              |                    |
|--------------|--------------------|
| no           | Negate the command |
| description  | FEX description    |
| <i>descr</i> | Description        |

## Command Mode

- /exec/configure/fex

# description

{ description <line> } | { no description }

## Syntax Description

|             |                                      |
|-------------|--------------------------------------|
| no          | Negate a command or set its defaults |
| description | Description of the VRF               |
| <i>line</i> | VRF description string               |

## Command Mode

- /exec/configure/vrf

# description

description <line> | no description

## Syntax Description

|             |  |
|-------------|--|
| no          | Negate a command or set its defaults             |
| description | Add a description for the role                   |
| <i>line</i> | Enter the description string(can include spaces) |

## Command Mode

- /exec/configure/role

# description

{ description <line> | no description }

## Syntax Description

|             |                                      |
|-------------|--------------------------------------|
| no          | Negate a command or set its defaults |
| description | Description of the route-map         |
| <i>line</i> | Route-map description string         |

## Command Mode

- /exec/configure/route-map

**description**

# description

{ [ no ] description &lt;line&gt; | no description }

## Syntax Description

|             |   |
|-------------|---|
| description | Provide a description for this Flow Record        |
| <i>line</i> | Record description string (63 characters maximum) |

## Command Mode

- /exec/configure/nfm-record

# description

```
{ [ no ] description <line> | no description }
```

## Syntax Description

|             |  |
|-------------|--|
| description | Provide a description for this Flow Monitor        |
| <i>line</i> | Monitor description string (63 characters maximum) |

## Command Mode

- /exec/configure/nfm-monitor

# description

```
{ [ no ] description <line> | no description }
```

## Syntax Description

|             |  |
|-------------|--|
| description | Provide a description for this Flow Exporter       |
| <i>line</i> | Monitor description string (63 characters maximum) |

## Command Mode

- /exec/configure/nfm-exporter

# description

```
{ [ no ] description <line> | no description }
```

## Syntax Description

|             |  |
|-------------|--|
| description | Provide a description for this Flow Sampler        |
| <i>line</i> | Sampler description string (63 characters maximum) |

## Command Mode

- /exec/configure/nfm-sampler

**description**

# description

{ description &lt;descr&gt; } | { no description }

## Syntax Description

|              |                                      |
|--------------|--------------------------------------|
| description  | Configure description of the profile |
| <i>descr</i> | Description of maximum 64 characters |

## Command Mode

- /exec/configure/configngoaamprofile

# description

description <desc\_line> | no description [ <desc\_line> ]

## Syntax Description

|                  |   |
|------------------|---|
| no               | Negate a command or set its defaults        |
| description      | Enter description of maximum 254 characters |
| <i>desc_line</i> | Description of maximum 254 characters       |

## Command Mode

- /exec/configure/if-eth-base /exec/configure/if-port-channel /exec/configure/if-eth-port-channel /exec/configure/if-ether-sub /exec/configure/if-ether-sub-p2p /exec/configure/if-port-channel-sub /exec/configure/if-loopback /exec/configure/if-ethernet-all /exec/configure/if-ethernet-p2p /exec/configure/if-remote-ethernet-sub /exec/configure/if-port-channel-range

**description**

# description

description <desc\_line> | no description [ <desc\_line> ]

## Syntax Description

|                  |   |
|------------------|---|
| no               | Negate a command or set its defaults        |
| description      | Enter description of maximum 254 characters |
| <i>desc_line</i> | Description of maximum 254 characters       |

## Command Mode

- /exec/configure/if-mgmt-ether

# description

description <desc\_line> | no description [ <desc\_line> ]

## Syntax Description

|                  |   |
|------------------|---|
| no               | Negate a command or set its defaults        |
| description      | Enter description of maximum 254 characters |
| <i>desc_line</i> | Description of maximum 254 characters       |

## Command Mode

- /exec/configure/if-nve

**description**

# description

description <desc\_line> | no description [ <desc\_line> ]

## Syntax Description

|                  |  |
|------------------|--|
| no               | Negate a command or set its defaults       |
| description      | Enter description of maximum 80 characters |
| <i>desc_line</i> | Description of maximum 80 characters       |

## Command Mode

- /exec/configure/if-overlay /exec/configure/if-te /exec/configure/if-nve

# description

{ description <desc-str> | no description [ <desc-str> ] }

## Syntax Description

|                 |  |
|-----------------|--|
| no              | Negate a command or set its defaults                 |
| description     | Class-Map description                                |
| <i>desc-str</i> | Description of this class-map (up to 200 characters) |

## Command Mode

- /exec/configure/class-map

**description**

# description

[no] description <desc-str>

## Syntax Description

|                 |  |
|-----------------|--|
| no              | (Optional) Negate a command or set its defaults      |
| description     | Class-Map description                                |
| <i>desc-str</i> | Description of this class-map (up to 200 characters) |

## Command Mode

- /exec/configure/class-map/type/queuing

# description

{ description <desc-str> | no description [ <desc-str> ] }

## Syntax Description

|                 |  |
|-----------------|--|
| no              | Negate a command or set its defaults                 |
| description     | Table-Map description                                |
| <i>desc-str</i> | Description of this table-map (up to 200 characters) |

## Command Mode

- /exec/configure/table-map

**description**

# description

{ description &lt;desc-str&gt; | no description [ &lt;desc-str&gt; ] }

**Syntax Description**

|                 |   |
|-----------------|---|
| no              | Negate a command or set its defaults                  |
| description     | Policy-Map description                                |
| <i>desc-str</i> | Description of this policy-map (up to 200 characters) |

**Command Mode**

- /exec/configure/policy-map

# description

{ description <desc-str> | no description [ <desc-str> ] }

## Syntax Description

|                 |   |
|-----------------|---|
| no              | Negate a command or set its defaults                  |
| description     | Policy-Map description                                |
| <i>desc-str</i> | Description of this policy-map (up to 200 characters) |

## Command Mode

- /exec/configure/policy-map/type/queuing

# description

description <desc\_line> | no description [ <desc\_line> ]

## Syntax Description

|                  |   |
|------------------|---|
| no               | Negate a command or set its defaults        |
| description      | Enter description of maximum 254 characters |
| <i>desc_line</i> | Description of maximum 254 characters       |

## Command Mode

- /exec/configure/if-any-tunnel

# description

{ description <desc-str> | no description [ <desc-str> ] }

## Syntax Description

|                 |  |
|-----------------|--|
| no              | Negate a command or set its defaults                 |
| description     | Class-Map description                                |
| <i>desc-str</i> | Description of this class-map (up to 200 characters) |

## Command Mode

- /exec/configure/class-map/type/uf

**description**

# description

{ description &lt;desc-str&gt; | no description [ &lt;desc-str&gt; ] }

**Syntax Description**

|                 |   |
|-----------------|---|
| no              | Negate a command or set its defaults                  |
| description     | Policy-Map description                                |
| <i>desc-str</i> | Description of this policy-map (up to 200 characters) |

**Command Mode**

- /exec/configure/policy-map/type/uf

# description

```
{ description <description_text> | no description [ <description_text> ] }
```

## Syntax Description

|                         |                                      |
|-------------------------|--------------------------------------|
| no                      | Negate a command or set its defaults |
| description             | Virtual service description          |
| <i>description_text</i> | Description of this virtual service  |

## Command Mode

- /exec/configure/virt-serv

# description

description <describe> | no description

## Syntax Description

|                 |  |
|-----------------|--|
| no              | Negate a command or set its defaults       |
| description     | Description for the BMP server             |
| <i>describe</i> | Up to 80 characters describing this server |

## Command Mode

- /exec/configure/router-bgp/router-bgp-bmp-server

# description

description <describe> | { no | default } description [ <describe> ]

## Syntax Description

|                 |  |
|-----------------|--|
| no              | Negate a command or set its defaults         |
| default         | Inherit values from a peer template          |
| description     | Neighbor specific description                |
| <i>describe</i> | Up to 80 characters describing this neighbor |

## Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor-sess

**description**

# description

description [ port-profile ] <desc\_line> | no description [ port-profile ] [ <desc\_line> ]

## Syntax Description

|                  |   |
|------------------|---|
| no               | Negate a command or set its defaults                    |
| description      | Enter port-profile description of maximum 80 characters |
| port-profile     | (Optional) Hack for conf-sync                           |
| <i>desc_line</i> | Enter port-profile description of maximum 80 characters |

## Command Mode

- /exec/configure/port-profile

# description

description <descr> | no description

## Syntax Description

|              |  |
|--------------|--|
| no           | Negate a command or set its defaults             |
| description  | Session description (max 32 characters)          |
| <i>descr</i> | Enter the description string(can include spaces) |

## Command Mode

- /exec/configure/monitor-common

# description

description <desc\_line> | no description

## Syntax Description

|                  |  |
|------------------|--|
| no               | Negate a command or set its defaults           |
| description      | Interface specific description                 |
| <i>desc_line</i> | Up to 255 characters describing this interface |

## Command Mode

- /exec/configure/if-vlan-common

# description

[no] description <description>

## Syntax Description

|                    |   |
|--------------------|---|
| no                 | (Optional) Negate a command or set its defaults |
| description        | Configure description for the policy            |
| <i>description</i> | Description for the policy                      |

## Command Mode

- /exec/configure/event-manager-applet

**description**

# description

[no] description

## Syntax Description

|             |                                      |
|-------------|--------------------------------------|
| no          | Negate a command or set its defaults |
| description | Configure description for the policy |

## Command Mode

- /exec/configure/event-manager-applet

# description

[no] description [ <desc> ] | description <desc>

## Syntax Description

|             |  |
|-------------|--|
| no          | Negate a command or set its defaults                 |
| description | Group description                                    |
| <i>desc</i> | (Optional) Up to 80 characters describing this group |

## Command Mode

- /exec/configure/if-eth-any/vrrpv3

# description

description <desc> | no description

## Syntax Description

|             |                                      |
|-------------|--------------------------------------|
| no          | Negate a command or set its defaults |
| description | Fabric Path topology description     |
| <i>desc</i> | Description of maximum 80 characters |

## Command Mode

- /exec/configure/fp-topology

# description

```
{ [ no ] description <descrip-string> }
```

## Syntax Description

|                       |   |
|-----------------------|---|
| no                    | (Optional) Negate a command or set its defaults |
| description           | Provide a description string for the LISP site  |
| <i>descrip-string</i> | Description string                              |

## Command Mode

- /exec/configure/lisp-site /exec/configure/vrf/lisp-site

**description description**

# description description

[no] description | description <desc>

## Syntax Description

|             |   |
|-------------|---|
| no          | (Optional) Negate a command or set its defaults |
| description | Pathway description                             |
| <i>desc</i> | Up to 80 characters describing this pathway     |

## Command Mode

- /exec/configure/if-eth-any/vrrs

# dest-ipaddr

{ { no | default } dest-ipaddr | dest-ipaddr { <ip-address> | <hostname> } }

## Syntax Description

|                   |                                      |
|-------------------|--------------------------------------|
| no                | Negate a command or set its defaults |
| default           | Set a command to its defaults        |
| dest-ipaddr       | Destination ip address               |
| <i>ip-address</i> | IP address, broadcast disallowed     |
| <i>hostname</i>   | IP Hostname, broadcast disallowed    |

## Command Mode

- /exec/configure/ip-sla/udp /exec/configure/ip-sla/jitter /exec/configure/ip-sla/tcp

# dest-port

{ { no | default } dest-port | dest-port <port> }

## Syntax Description

|             |                               |
|-------------|-------------------------------|
| no          |                               |
| default     | Set a command to its defaults |
| dest-port   | Destination port              |
| <i>port</i> | udp port number               |

## Command Mode

- /exec/configure/ip-sla/udp /exec/configure/ip-sla/jitter /exec/configure/ip-sla/tcp

# destination-group

[no] destination-group <dgrp-id>

## Syntax Description

|                   |   |
|-------------------|---|
| no                | (Optional) Negate a command or set its defaults |
| destination-group | Create destination group                        |
| <i>dgrp-id</i>    | Identifier                                      |

## Command Mode

- /exec/configure/telemetry

# destination-profile

[no] destination-profile <s0>

## Syntax Description

|                     |   |
|---------------------|---|
| no                  | (Optional) Negate a command or set its defaults |
| destination-profile | Configure destination profiles                  |
| s0                  | User defined destination profile name           |

## Command Mode

- /exec/configure/callhome

# destination-profile CiscoTAC-1 alert-group

[no] destination-profile CiscoTAC-1 alert-group { All | Configuration | Diagnostic | EEM | Cisco-TAC | Environmental | Inventory | License | Linecard-Hardware | Supervisor-Hardware | Syslog-group-port | System | Test }

## Syntax Description

|                     |   |
|---------------------|---|
| no                  | (Optional) Negate a command or set its defaults           |
| destination-profile | Configure destination profiles                            |
| CiscoTAC-1          | Configure destination profile for XML message             |
| alert-group         | Add alert group   |
| All                 | This alert group consists of all of the callhome messages |
| Cisco-TAC           | Events which are meant for Cisco TAC only                 |
| Environmental       | Power,fan,temperature related events                      |
| Inventory           | Inventory status events                                   |
| License             | Events related to licensing                               |
| Linecard-Hardware   | Linecard related events                                   |
| Supervisor-Hardware | Supervisor related events                                 |
| Syslog-group-port   | Events related to syslog messages filed by port manager   |
| System              | Software related events                                   |
| Test                | User generated test events                                |
| Configuration       | Events related to Configuration                           |
| Diagnostic          | Events related to Diagnostic                              |
| EEM                 | EEM events  |

## Command Mode

- /exec/configure/callhome

destination-profile CiscoTAC-1 email-addr

## destination-profile CiscoTAC-1 email-addr

[no] destination-profile CiscoTAC-1 email-addr <s0>

### Syntax Description

|                     |   |
|---------------------|---|
| no                  | (Optional) Negate a command or set its defaults |
| destination-profile | Configure destination profiles                  |
| CiscoTAC-1          | Configure destination profile for XML message   |
| email-addr          | Add email addr                                  |
| s0                  | Provide email address, example: jdow@xyz.com    |

### Command Mode

- /exec/configure/callhome

# destination-profile CiscoTAC-1 http

[no] destination-profile CiscoTAC-1 http <s0>

## Syntax Description

|                     |   |
|---------------------|---|
| no                  | (Optional) Negate a command or set its defaults   |
| destination-profile | Configure destination profiles  |
| CiscoTAC-1          | Configure destination profile for XML message   |
| http                | Add http or https url   |
| s0                  | Provide http or https url, example1: http://site.com/services/callserv<br>example2: https://site2.com/serv/CALL |

## Command Mode

- /exec/configure/callhome

**destination-profile CiscoTAC-1 message-level**

## destination-profile CiscoTAC-1 message-level

destination-profile CiscoTAC-1 message-level <i0>

### Syntax Description

|                     |   |
|---------------------|---|
| destination-profile | Configure destination profiles                              |
| CiscoTAC-1          | Configure destination profile for XML message               |
| message-level       | Callhome message level(0-lowest urgency, 9-highest urgency) |
| <i>i0</i>           |   |

### Command Mode

- /exec/configure/callhome

# destination-profile CiscoTAC-1 message-size

destination-profile CiscoTAC-1 message-size <i0>

## Syntax Description

|                     |  |
|---------------------|--|
| destination-profile | Configure destination profiles                   |
| CiscoTAC-1          | Configure destination profile for XML message    |
| message-size        | Configure maximum message size (default 5000000) |
| <i>i0</i>           | Provide maximum possible message size            |

## Command Mode

- /exec/configure/callhome

destination-profile CiscoTAC-1 transport-method email

## destination-profile CiscoTAC-1 transport-method email

[no] destination-profile CiscoTAC-1 transport-method email

### Syntax Description

|                     |   |
|---------------------|---|
| no                  | (Optional) Negate a command or set its defaults |
| destination-profile | Configure destination profiles                  |
| CiscoTAC-1          | Configure destination profile for XML message   |
| transport-method    | Callhome message sending transport-method       |
| email               | email transport-method                          |

### Command Mode

- /exec/configure/callhome

## destination-profile CiscoTAC-1 transport-method http

[no] destination-profile CiscoTAC-1 transport-method http

### Syntax Description

|                     |   |
|---------------------|---|
| no                  | (Optional) Negate a command or set its defaults |
| destination-profile | Configure destination profiles                  |
| CiscoTAC-1          | Configure destination profile for XML message   |
| transport-method    | Callhome message sending transport-method       |
| http                | http transport-method                           |

### Command Mode

- /exec/configure/callhome

destination-profile alert-group

# destination-profile alert-group

[no] destination-profile <s0> alert-group { All | Configuration | Diagnostic | EEM | Cisco-TAC | Environmental | Inventory | License | Linecard-Hardware | Supervisor-Hardware | Syslog-group-port | System | Test }

## Syntax Description

|                     |   |
|---------------------|---|
| no                  | (Optional) Negate a command or set its defaults           |
| destination-profile | Configure destination profiles                            |
| s0                  | User defined destination profile name                     |
| alert-group         | Add alert group   |
| All                 | This alert group consists of all of the callhome messages |
| Cisco-TAC           | Events which are meant for Cisco TAC only                 |
| Environmental       | Power,fan,temperature related events                      |
| Inventory           | Inventory status events                                   |
| License             | Events related to licensing                               |
| Linecard-Hardware   | Linecard related events                                   |
| Supervisor-Hardware | Supervisor related events                                 |
| Syslog-group-port   | Events related to syslog messages filed by port manager   |
| System              | Software related events                                   |
| Test                | User generated test events                                |
| Configuration       | Events related to Configuration                           |
| Diagnostic          | Events related to Diagnostic                              |
| EEM                 | EEM events  |

## Command Mode

- /exec/configure/callhome

# destination-profile email-addr

[no] destination-profile <s0> email-addr <s1>

## Syntax Description

|                     |   |
|---------------------|---|
| no                  | (Optional) Negate a command or set its defaults |
| destination-profile | Configure destination profiles                  |
| s0                  | User defined destination profile name           |
| email-addr          | Add email addr                                  |
| s1                  | Provide email address, example: jdow@xyz.com    |

## Command Mode

- /exec/configure/callhome

# destination-profile format

```
destination-profile <s0> format { full-txt | short-txt | XML }
```

## Syntax Description

|                     |                                       |
|---------------------|---------------------------------------|
| destination-profile | Configure destination profiles        |
| s0                  | User defined destination profile name |
| format              | Callhome message format (default XML) |
| full-txt            | Plain text message format             |
| short-txt           | Short text message format             |
| XML                 | XML message format                    |

## Command Mode

- /exec/configure/callhome

# destination-profile full-txt-destination alert-group

[no] destination-profile full-txt-destination alert-group { All | Configuration | Diagnostic | EEM | Cisco-TAC | Environmental | Inventory | License | Linecard-Hardware | Supervisor-Hardware | Syslog-group-port | System | Test }

## Syntax Description

|                      |   |
|----------------------|---|
| no                   | (Optional) Negate a command or set its defaults           |
| destination-profile  | Configure destination profiles                            |
| full-txt-destination | Configure destination profile for plain txt message       |
| alert-group          | Add alert group   |
| All                  | This alert group consists of all of the callhome messages |
| Cisco-TAC            | Events which are meant for Cisco TAC only                 |
| Environmental        | Power,fan,temperature related events                      |
| Inventory            | Inventory status events                                   |
| License              | Events related to licensing                               |
| Linecard-Hardware    | Linecard related events                                   |
| Supervisor-Hardware  | Supervisor related events                                 |
| Syslog-group-port    | Events related to syslog messages filed by port manager   |
| System               | Software related events                                   |
| Test                 | User generated test events                                |
| Configuration        | Events related to Configuration                           |
| Diagnostic           | Events related to Diagnostic                              |
| EEM                  | EEM events  |

## Command Mode

- /exec/configure/callhome

destination-profile full-txt-destination email-addr

## destination-profile full-txt-destination email-addr

[no] destination-profile full-txt-destination email-addr <s0>

### Syntax Description

|                      |   |
|----------------------|---|
| no                   | (Optional) Negate a command or set its defaults     |
| destination-profile  | Configure destination profiles                      |
| full-txt-destination | Configure destination profile for plain txt message |
| email-addr           | Add email addr                                      |
| s0                   | Provide email address, example: jdow@xyz.com        |

### Command Mode

- /exec/configure/callhome

# destination-profile full-txt-destination http

[no] destination-profile full-txt-destination http <s0>

## Syntax Description

|                      |   |
|----------------------|---|
| no                   | (Optional) Negate a command or set its defaults   |
| destination-profile  | Configure destination profiles  |
| full-txt-destination | Configure destination profile for plain txt message   |
| http                 | Add http or https url   |
| s0                   | Provide http or https url, example1: http://site.com/services/callserv<br>example2: https://site2.com/serv/CALL |

## Command Mode

- /exec/configure/callhome

**destination-profile full-txt-destination message-level**

# destination-profile full-txt-destination message-level

destination-profile full-txt-destination message-level &lt;i0&gt;

## Syntax Description

|                      |   |
|----------------------|---|
| destination-profile  | Configure destination profiles                              |
| full-txt-destination | Configure destination profile for plain txt message         |
| message-level        | Callhome message level(0-lowest urgency, 9-highest urgency) |
| i0                   |   |

## Command Mode

- /exec/configure/callhome

# destination-profile full-txt-destination message-size

destination-profile full-txt-destination message-size <i0>

## Syntax Description

|                      |   |
|----------------------|---|
| destination-profile  | Configure destination profiles                      |
| full-txt-destination | Configure destination profile for plain txt message |
| message-size         | Configure maximum message size (default 2500000)    |
| <i>i0</i>            | Provide maximum possible message size               |

## Command Mode

- /exec/configure/callhome

**destination-profile full-txt-destination transport-method email**

[no] destination-profile full-txt-destination transport-method email

**Syntax Description**

|                      |   |
|----------------------|---|
| no                   | (Optional) Negate a command or set its defaults     |
| destination-profile  | Configure destination profiles                      |
| full-txt-destination | Configure destination profile for plain txt message |
| transport-method     | Callhome message sending transport-method           |
| email                | email transport-method                              |

**Command Mode**

- /exec/configure/callhome

# destination-profile full-txt-destination transport-method http

[no] destination-profile full-txt-destination transport-method http

## Syntax Description

|                      |   |
|----------------------|---|
| no                   | (Optional) Negate a command or set its defaults     |
| destination-profile  | Configure destination profiles                      |
| full-txt-destination | Configure destination profile for plain txt message |
| transport-method     | Callhome message sending transport-method           |
| http                 | http transport-method                               |

## Command Mode

- /exec/configure/callhome

**destination-profile http**

[no] destination-profile <s4> { http <s2> }

#### Syntax Description

|                     |   |
|---------------------|---|
| no                  | (Optional) Negate a command or set its defaults   |
| destination-profile | Configure destination profiles  |
| <i>s4</i>           | User defined destination profile name   |
| http                | Add http or https url   |
| <i>s2</i>           | Provide http or https url, example1: http://site.com/services/callserv<br>example2: https://site2.com/serv/CALL |

#### Command Mode

- /exec/configure/callhome

# destination-profile message-level

destination-profile <s0> message-level <i0>

## Syntax Description

|                     |   |
|---------------------|---|
| destination-profile | Configure destination profiles                              |
| s0                  | User defined destination profile name                       |
| message-level       | Callhome message level(0-lowest urgency, 9-highest urgency) |
| i0                  |   |

## Command Mode

- /exec/configure/callhome

**destination-profile message-size**

# destination-profile message-size

destination-profile <s0> message-size <i0>

## Syntax Description

|                     |  |
|---------------------|--|
| destination-profile | Configure destination profiles                   |
| s0                  | User defined destination profile name            |
| message-size        | Configure maximum message size (default 2500000) |
| i0                  | Provide maximum possible message size            |

## Command Mode

- /exec/configure/callhome

# destination-profile short-txt-destination alert-group

[no] destination-profile short-txt-destination alert-group { All | Configuration | Diagnostic | EEM | Cisco-TAC | Environmental | Inventory | License | Linecard-Hardware | Supervisor-Hardware | Syslog-group-port | System | Test }

## Syntax Description

|                       |   |
|-----------------------|---|
| no                    | (Optional) Negate a command or set its defaults           |
| destination-profile   | Configure destination profiles                            |
| short-txt-destination | Configure destination profile for short txt message       |
| alert-group           | Add alert group   |
| All                   | This alert group consists of all of the callhome messages |
| Cisco-TAC             | Events which are meant for Cisco TAC only                 |
| Environmental         | Power,fan,temperature related events                      |
| Inventory             | Inventory status events                                   |
| License               | Events related to licensing                               |
| Linecard-Hardware     | Linecard related events                                   |
| Supervisor-Hardware   | Supervisor related events                                 |
| Syslog-group-port     | Events related to syslog messages filed by port manager   |
| System                | Software related events                                   |
| Test                  | User generated test events                                |
| Configuration         | Events related to Configuration                           |
| Diagnostic            | Events related to Diagnostic                              |
| EEM                   | EEM events  |

## Command Mode

- /exec/configure/callhome

**destination-profile short-txt-destination email-addr**

[no] destination-profile short-txt-destination email-addr <s0>

#### Syntax Description

|                       |   |
|-----------------------|---|
| no                    | (Optional) Negate a command or set its defaults     |
| destination-profile   | Configure destination profiles                      |
| short-txt-destination | Configure destination profile for short txt message |
| email-addr            | Add email addr                                      |
| s0                    | Provide email address, example: jdow@xyz.com        |

#### Command Mode

- /exec/configure/callhome

# destination-profile short-txt-destination http

[no] destination-profile short-txt-destination http <s0>

## Syntax Description

|                       |   |
|-----------------------|---|
| no                    | (Optional) Negate a command or set its defaults   |
| destination-profile   | Configure destination profiles  |
| short-txt-destination | Configure destination profile for short txt message   |
| http                  | Add http or https url   |
| s0                    | Provide http or https url, example1: http://site.com/services/callserv<br>example2: https://site2.com/serv/CALL |

## Command Mode

- /exec/configure/callhome

**destination-profile short-txt-destination message-level**

## destination-profile short-txt-destination message-level

destination-profile short-txt-destination message-level &lt;i0&gt;

### Syntax Description

|                       |   |
|-----------------------|---|
| destination-profile   | Configure destination profiles                              |
| short-txt-destination | Configure destination profile for short txt message         |
| message-level         | Callhome message level(0-lowest urgency, 9-highest urgency) |
| <i>i0</i>             |   |

### Command Mode

- /exec/configure/callhome

# destination-profile short-txt-destination message-size

destination-profile short-txt-destination message-size <i0>

## Syntax Description

|                       |   |
|-----------------------|---|
| destination-profile   | Configure destination profiles                      |
| short-txt-destination | Configure destination profile for short txt message |
| message-size          | Configure maximum message size (default 4000)       |
| <i>i0</i>             |   |

## Command Mode

- /exec/configure/callhome

**destination-profile short-txt-destination transport-method email**

## destination-profile short-txt-destination transport-method email

[no] destination-profile short-txt-destination transport-method email

### Syntax Description

|                       |   |
|-----------------------|---|
| no                    | (Optional) Negate a command or set its defaults     |
| destination-profile   | Configure destination profiles                      |
| short-txt-destination | Configure destination profile for short txt message |
| transport-method      | Callhome message sending transport-method           |
| email                 | email transport-method                              |

### Command Mode

- /exec/configure/callhome

# destination-profile short-txt-destination transport-method http

[no] destination-profile short-txt-destination transport-method http

## Syntax Description

|                       |   |
|-----------------------|---|
| no                    | (Optional) Negate a command or set its defaults     |
| destination-profile   | Configure destination profiles                      |
| short-txt-destination | Configure destination profile for short txt message |
| transport-method      | Callhome message sending transport-method           |
| http                  | http transport-method                               |

## Command Mode

- /exec/configure/callhome

**destination-profile transport-method email**

[no] destination-profile <s5> transport-method email

**Syntax Description**

|                     |   |
|---------------------|---|
| no                  | (Optional) Negate a command or set its defaults |
| destination-profile | Configure destination profiles                  |
| s5                  | User defined destination profile name           |
| transport-method    | Callhome message sending transport-method       |
| email               | email transport-method                          |

**Command Mode**

- /exec/configure/callhome

# destination-profile transport-method http

[no] destination-profile <s6> transport-method http

## Syntax Description

|                     |   |
|---------------------|---|
| no                  | (Optional) Negate a command or set its defaults |
| destination-profile | Configure destination profiles                  |
| s6                  | User defined destination profile name           |
| transport-method    | Callhome message sending transport-method       |
| http                | http transport-method                           |

## Command Mode

- /exec/configure/callhome

**destination-sup interface**

# destination-sup interface

[no] destination-sup interface <interface>

## Syntax Description

|                  |   |
|------------------|---|
| no               | (Optional) Negate a command or set its defaults |
| destination-sup  | Destination configuration                       |
| interface        | Configure interfaces                            |
| <i>interface</i> |   |

## Command Mode

- /exec/configure/monitor-local-src /exec/configure/config-monitor  
/exec/configure/config-monitor-erspan-src

# destination

```
{ [ no ] destination { <ipaddr> | <ipv6addr> } [ use-vrf { <vrf_name> | <vrf-known-name> } ] | no destination }
```

## Syntax Description

|                       |                                      |
|-----------------------|--------------------------------------|
| destination           | Specify the destination address      |
| <i>ipaddr</i>         | Destination IP address for collector |
| use-vrf               | (Optional) Optional VRF label        |
| <i>vrf_name</i>       | (Optional) VRF name                  |
| <i>vrf-known-name</i> | (Optional) Known VRF name            |

## Command Mode

- /exec/configure/nfm-exporter

**destination1 interface**

# destination1 interface

[no] destination1 interface <interface\_range>

## Syntax Description

|                        |   |
|------------------------|---|
| no                     | (Optional) Negate a command or set its defaults |
| destination1           | Destination configuration                       |
| interface              | Configure interfaces                            |
| <i>interface_range</i> |   |

## Command Mode

- /exec/configure/monitor-local-dst

# destination

[no] destination | destination <ipaddr>

## Syntax Description

|               |                                      |
|---------------|--------------------------------------|
| no            | Negate a command or set its defaults |
| destination   | destination of tunnel                |
| <i>ipaddr</i> | ip address (A.B.C.D)                 |

## Command Mode

- /exec/configure/if-te

# destination interface

[no] destination interface <interface\_range>

## Syntax Description

|                        |   |
|------------------------|---|
| no                     | (Optional) Negate a command or set its defaults |
| destination            | Destination configuration                       |
| interface              | Configure interfaces                            |
| <i>interface_range</i> |   |

## Command Mode

- /exec/configure/monitor-local-dst

# destination ip

[no] destination ip <ipaddress>

## Syntax Description

|                  |   |
|------------------|---|
| no               | (Optional) Negate a command or set its defaults |
| destination      | Destination configuration                       |
| ip               | Configure remote IP address                     |
| <i>ipaddress</i> |   |

## Command Mode

- /exec/configure/config-monitor-erspan-src

# device-group

{ device-group <name> } | { no device-group <name> }

## Syntax Description

|              |                                      |
|--------------|--------------------------------------|
| no           | Negate a command or set its defaults |
| device-group | ITD device group                     |
| <i>name</i>  | ITD device group name                |

## Command Mode

- /exec/configure/itd

# device-group

{ device-group <name> } | { no device-group <name> }

## Syntax Description

|              |                                      |
|--------------|--------------------------------------|
| no           | Negate a command or set its defaults |
| device-group | ITD device group                     |
| <i>name</i>  | ITD device group name                |

## Command Mode

- /exec/configure/itd

**devtest sap**

## devtest sap

```
devtest sap <sap> [ exec <func> ]
```

### Syntax Description

|             |   |
|-------------|---|
| devtest     | Remote API invocation (helps testing and debugging)                 |
| sap         | Specify the SAP address of the destination queue                    |
| <i>sap</i>  | SAP address of the destination queue (0 == Registry)                |
| exec        | (Optional) Specify the API name to be invoked on the remote feature |
| <i>func</i> | (Optional) Examples:  |

### Command Mode

- /exec

# diagnostic bootup level

[no] diagnostic bootup level

## Syntax Description

|            |                                      |
|------------|--------------------------------------|
| no         | Negate a command or set its defaults |
| diagnostic | Diagnostic commands                  |
| bootup     | Configure Diagnostic for bootup      |
| level      | Select diagnostic level              |

## Command Mode

- /exec/configure

**diagnostic bootup level bypass**

# diagnostic bootup level bypass

diagnostic bootup level { bypass | complete }

## Syntax Description

|            |                                 |
|------------|---------------------------------|
| diagnostic | Diagnostic commands             |
| bootup     | Configure Diagnostic for bootup |
| level      | Select diagnostic level         |
| bypass     | Skip all bootup test            |
| complete   | Complete level                  |

## Command Mode

- /exec/configure

# diagnostic clear result module all diagnostic clear result module test

diagnostic clear result module all | diagnostic clear result module <module> test { <test-id> | all }

## Syntax Description

|                |                                     |
|----------------|-------------------------------------|
| diagnostic     | Diagnostic commands                 |
| clear          | Erase Diagnostic Test Results/Stats |
| result         | Diagnostic test result              |
| module         | Module keyword                      |
| <i>module</i>  | Module number                       |
| all            | Select all                          |
| test           | Diagnostic test selection           |
| <i>test-id</i> |                                     |

## Command Mode

- /exec

**diagnostic eem action aggressive**

# diagnostic eem action aggressive

[no] diagnostic eem action aggressive

## Syntax Description

|            |   |
|------------|---|
| no         | (Optional) Negate a command or set its defaults |
| diagnostic | Diagnostic commands                             |
| eem        | Configure Diagnostic for eem                    |
| action     | Select diagnostic action                        |
| aggressive | Take aggressive default actions                 |

## Command Mode

- /exec/configure

# diagnostic monitor interval module test all hour min second

diagnostic monitor interval module <module> test { all | <name> | <test-id> } hour <hour-cntr> min <min-cntr> second <sec-cntr> | no diagnostic monitor interval module <module> test { all | <name> | <test-id> }

## Syntax Description

|                  |  |
|------------------|--|
| no               | Negate a command or set its defaults           |
| diagnostic       | Diagnostic commands                            |
| monitor          | Configure diagnostic monitoring test           |
| interval         | Configure diagnostic monitoring tests interval |
| module           | Module Keyword                                 |
| <i>module</i>    | Module number                                  |
| test             | Diagnostic test selection                      |
| all              | Select all test ID                             |
| <i>test-id</i>   |  |
| <i>name</i>      | Test name                                      |
| hour             | Hour of the day                                |
| <i>hour-cntr</i> | Interval in hours                              |
| min              | Minute of an hour                              |
| <i>min-cntr</i>  | Interval in minutes                            |
| second           | Second of a minute                             |
| <i>sec-cntr</i>  | Interval in seconds                            |

## Command Mode

- /exec/configure

**diagnostic monitor module all**

# diagnostic monitor module all

[no] diagnostic monitor module all [ test <name> ]

## Syntax Description

|             |   |
|-------------|---|
| no          | (Optional) Negate a command or set its defaults |
| diagnostic  | Diagnostic commands                             |
| monitor     | Configure diagnostic monitoring test            |
| module      | Module Keyword                                  |
| all         | Select all module ID                            |
| test        | (Optional) Diagnostic test selection            |
| <i>name</i> | (Optional) Test name                            |

## Command Mode

- /exec/configure

# diagnostic monitor module test all

diagnostic monitor module <module> test { all | <name> | <test-id> } | no diagnostic monitor module <module> test { all | <name> | <test-id> }

## Syntax Description

|                |                                      |
|----------------|--------------------------------------|
| no             | Negate a command or set its defaults |
| diagnostic     | Diagnostic commands                  |
| monitor        | Configure diagnostic monitoring test |
| module         | Module Keyword                       |
| <i>module</i>  | Module number                        |
| test           | Diagnostic test selection            |
| all            | Select all test ID                   |
| <i>test-id</i> |                                      |
| <i>name</i>    | Test name                            |

## Command Mode

- /exec/configure

```
■ diagnostic ondemand action-on-failure continue failure-count diagnostic ondemand action-on-failure stop
```

# **diagnostic ondemand action-on-failure continue failure-count**

## **diagnostic ondemand action-on-failure stop**

diagnostic ondemand action-on-failure continue failure-count <failure-cnt> | diagnostic ondemand action-on-failure stop

### Syntax Description

|                    |  |
|--------------------|--|
| diagnostic         | Diagnostic commands  |
| ondemand           | On demand diagnostic setting                               |
| action-on-failure  | Set action to take if test fails                           |
| continue           | Continue ondemand test until test failure limit is reached |
| failure-count      | Continue failing tests this many times                     |
| stop               | Stop ondemand tests immediately if a test fails            |
| <i>failure-cnt</i> | Maximum number of test failures allowed                    |

### Command Mode

- /exec

# diagnostic ondemand iteration

diagnostic ondemand iteration <iteration-count>

## Syntax Description

|                        |  |
|------------------------|--|
| diagnostic             | Diagnostic commands                              |
| ondemand               | On demand diagnostic setting                     |
| iteration              | Set number of times to repeat ondemand test list |
| <i>iteration-count</i> | Number of times to repeat ondemand test list     |

## Command Mode

- /exec

■ diagnostic ondemand test-parameter module test port\_lb packet-length

# diagnostic ondemand test-parameter module test port\_lb packet-length

diagnostic ondemand test-parameter module <module> test port\_lb packet-length <size>

## Syntax Description

|                |                                     |
|----------------|-------------------------------------|
| diagnostic     | Diagnostic commands                 |
| ondemand       | Ondemand command                    |
| test-parameter | Set test parameter                  |
| module         | Module keyword                      |
| <i>module</i>  | Module number                       |
| test           | Diagnostic test selection           |
| port_lb        | Port loop back test                 |
| packet-length  | Size of the packet                  |
| <i>size</i>    | Packet size for the selected module |

## Command Mode

- /exec

# diagnostic pss shrink

diagnostic pss shrink

## Syntax Description

|            |                              |
|------------|------------------------------|
| diagnostic | Diagnostic commands          |
| pss        | PSS command                  |
| shrink     | compact the diag_port_lb PSS |

## Command Mode

- /exec

**diagnostic start module test**

## diagnostic start module test

diagnostic start module <module> test { all | <name> | <test-id> | non-disruptive | per-port } [ port { iall | <port-id> } ]

### Syntax Description

|                |  |
|----------------|--|
| diagnostic     | Diagnostic commands                                  |
| start          | Starting on demand diagnostic                        |
| module         | Module keyword                                       |
| <i>module</i>  | Module Number  |
| test           | Diagnostic test selection                            |
| all            | Select all test ID                                   |
| <i>name</i>    | Test name  |
| <i>test-id</i> |  |
| non-disruptive | Select the Non-Disruptive test suite [Attribute = N] |
| per-port       | Select the Per-Port test suite [Attribute = P]       |
| port           | (Optional) Interface port selection                  |
| iall           | (Optional) Select all ports                          |
| <i>port-id</i> | (Optional)   |

### Command Mode

- /exec

# diagnostic stop module test all

diagnostic stop module <module> test { all | <name> | <test-id> }

## Syntax Description

|                |                           |
|----------------|---------------------------|
| diagnostic     | Diagnostic commands       |
| stop           | Stopping diagnostic       |
| module         | Module keyword            |
| <i>module</i>  | Module Number             |
| test           | Diagnostic test selection |
| all            | Select all test ID        |
| <i>test-id</i> |                           |
| <i>name</i>    | Test name                 |

## Command Mode

- /exec

diagnostic test simulation module test diagnostic test simulation module test clear

# diagnostic test simulation module test diagnostic test simulation module test clear

diagnostic test simulation module <module> test <test-id> [ port { <port-id> | all } ] { success | fail | random-fail } | diagnostic test simulation module <module> test <test-id> clear

## Syntax Description

|                |                                     |
|----------------|-------------------------------------|
| diagnostic     | Diagnostic commands                 |
| test           | Diagnostic test selection           |
| simulation     | Simulating Diagnostic result        |
| module         | Module keyword                      |
| <i>module</i>  | Module Number                       |
| test           | Diagnostic test selection           |
| <i>test-id</i> |                                     |
| port           | (Optional) Interface port selection |
| all            | (Optional) Select all ports         |
| <i>port-id</i> | (Optional)                          |
| success        | pass test result                    |
| fail           | fail test result                    |
| random-fail    | fail test result randomly           |
| clear          | Stop simulation                     |

## Command Mode

- /exec

# diff-clean

diff-clean [ all-sessions ]

## Syntax Description

|              |   |
|--------------|---|
| diff-clean   | remove temp files created by '  diff' filters   |
| all-sessions | (Optional) remove '  diff' temp files from all sessions (past and present!) of current user |

## Command Mode

- /exec

**diff-clean all-users**

# diff-clean all-users

diff-clean all-users

## Syntax Description

|            |   |
|------------|---|
| diff-clean | remove temp files created by '  diff' filters                                 |
| all-users  | remove '  diff' temp files from all sessions (past and present!) of all users |

## Command Mode

- /exec

# diff

| diff [ again | echo | -c [ <lines> ] | -b | -B | -i | -I <regexp> | -y | --left-column | -W <columns> | -q | -s ] +

## Syntax Description

|                |   |
|----------------|---|
|                | Pipe command output to filter   |
| diff           | show difference between current and previous invocation (creates temp files: remove them with 'diff-clean' command and dont use it on commands with big outputs, like 'show tech'!) |
| again          | (Optional) dont create new file: use old ones, just change display options or add more filters  |
| echo           | (Optional) echo the current file (only effective if no old file)  |
| -c             | (Optional) set number of lines of context (default 3)   |
| <i>lines</i>   | (Optional) number of lines of context   |
| -b             | (Optional) Ignore changes in amount of white space  |
| -B             | (Optional) Ignore changes that just insert or delete blank lines  |
| -i             | (Optional) Ignore changes in case   |
| -I             | (Optional) Ignore changes that just insert or delete lines that match regexp  |
| <i>regexp</i>  | (Optional) regexp of lines to ignore  |
| -y             | (Optional) Use the side by side output format   |
| --left-column  | (Optional) Print only the left column of two common lines in side by side format  |
| -W             | (Optional) Use an output width of <columns> in side by side format  |
| <i>columns</i> | (Optional) Use an output width of <columns> in side by side format  |
| -q             | (Optional) Report only whether the files differ, not the details of the differences   |
| -s             | (Optional) Report when two files are the same   |

## Command Mode

- /output

# dir

```
dir [ <uri0> | <uri1> | <uri2> ] [ __readonly__ { TABLE_dir <fsizE> <timestring> <fname> } { <usage> <bytesused> <bytesfree> <bytestotal> } ]
```

## Syntax Description

|                     |   |
|---------------------|---|
| dir                 | list files in a directory                           |
| <i>uri0</i>         | (Optional) Directory or filename                    |
| <i>uri1</i>         | (Optional) Directory or filename on expansion flash |
| <i>uri2</i>         | (Optional) Directory or filename on log flash       |
| <u>__readonly__</u> | (Optional) Read Only                                |
| TABLE_dir           | (Optional) show dir                                 |
| <i>fsizE</i>        | (Optional) filesize                                 |
| <i>timestring</i>   | (Optional) time string                              |
| <i>fname</i>        | (Optional) filename                                 |
| <i>usage</i>        | (Optional) usage                                    |
| <i>bytesused</i>    | (Optional) bytes used                               |
| <i>bytesfree</i>    | (Optional) bytes free                               |
| <i>bytestotal</i>   | (Optional) bytes total                              |

## Command Mode

- /exec

# disable-connected-check

[ no | default ] disable-connected-check

## Syntax Description

|                         |   |
|-------------------------|---|
| no                      | (Optional) Negate a command or set its defaults |
| default                 | (Optional) Inherit values from a peer template  |
| disable-connected-check | Disable check for directly connected peer       |

## Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor-sess

**disable-memory-alert-check**

# disable-memory-alert-check

[no] disable-memory-alert-check

## Syntax Description

|                            |  |
|----------------------------|--|
| no                         | (Optional) Negate a command or set its defaults  |
| disable-memory-alert-check | Disables the system memory alert handling in BGP |

## Command Mode

- /exec/configure/router-bgp

# disable-peer-as-check

[ no | default ] disable-peer-as-check

## Syntax Description

|                       |  |
|-----------------------|--|
| no                    | (Optional) Negate a command or set its defaults      |
| default               | (Optional) Inherit values from a peer template       |
| disable-peer-as-check | Disable checking of peer AS-number while advertising |

## Command Mode

- /exec/configure/router-bgp/router-bgp-vrf-neighbor/router-bgp-vrf-neighbor-af-ipv4
- /exec/configure/router-bgp/router-bgp-vrf-neighbor/router-bgp-vrf-neighbor-af-ipv6
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-l2vpn-evpn
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-label
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv6-label

**disable-policy-batching**

# disable-policy-batching

[no] disable-policy-batching [ nexthop | { { ipv4 | ipv6 } prefix-list <prfxlist-name> } ]

**Syntax Description**

|                         |   |
|-------------------------|---|
| no                      | (Optional) Negate a command or set its defaults           |
| disable-policy-batching | Disable batching evaluation of outbound policy for a peer |
| nexthop                 | (Optional) batching based on nexthop                      |
| ipv4                    | (Optional) IPv4 address-family                            |
| ipv6                    | (Optional) IPv6 address-family                            |
| prefix-list             | (Optional) Apply prefix-list                              |
| <i>prfxlist-name</i>    | (Optional) Name of prefix-list                            |

**Command Mode**

- /exec/configure/router-bgp

# disable

disable

## Syntax Description

|         |                  |
|---------|------------------|
| disable | disable callhome |
|---------|------------------|

## Command Mode

- /exec/configure/callhome

**discard-route external**

# discard-route external

[no] discard-route { external | internal }

## Syntax Description

|               |   |
|---------------|---|
| no            | (Optional) Negate a command or set its defaults |
| discard-route | Install discard route                           |
| external      | External route                                  |
| internal      | Internal route                                  |

## Command Mode

- /exec/configure/router-ospf /exec/configure/router-ospf/vrf

# discard-route external

[no] discard-route { external | internal }

## Syntax Description

|               |   |
|---------------|---|
| no            | (Optional) Negate a command or set its defaults |
| discard-route | Install discard route                           |
| external      | External route                                  |
| internal      | Internal route                                  |

## Command Mode

- /exec/configure/router-ospf3 /exec/configure/router-ospf3/vrf

# discovery

```
discovery { quick-start | hello { holdtime <link-hello-holdtime> | interval <link-hello-intvl> } | targeted-hello
{ accept [ from <pfx-list> ] | tgt-holdtime <tgt-hello-holdtime> | tgt-interval <tgt-hello-intvl> } |
ignore-transport-address | omit-transport-address | spoofing } | no discovery { quick-start | hello { holdtime |
interval } | targeted-hello { accept | tgt-holdtime | tgt-interval } | ignore-transport-address | omit-transport-address
| spoofing }
```

## Syntax Description

|                            |   |
|----------------------------|---|
| no                         | Negate a command or set its defaults                                |
| discovery                  | LDP discovery   |
| quick-start                | Enable quick LDP Hello transmissions on interface up                |
| hello                      | LDP discovery Hello   |
| interval                   | LDP discovery Hello interval  |
| holdtime                   | LDP discovery Hello holdtime  |
| <i>link-hello-holdtime</i> | Holdtime in seconds   |
| <i>link-hello-intvl</i>    | Hello interval in seconds   |
| targeted-hello             | LDP discovery Targeted Hello  |
| accept                     | Accept targeted hellos  |
| from                       | (Optional) Prefix list to specify acceptable targeted hello sources |
| <i>pfx-list</i>            | (Optional) Name of prefix list                                      |
| tgt-holdtime               | LDP discovery Targeted Hello holdtime                               |
| <i>tgt-hello-holdtime</i>  | Holdtime in seconds   |
| tgt-interval               | LDP discovery Targeted Hello interval                               |
| <i>tgt-hello-intvl</i>     | Hello interval in seconds   |
| ignore-transport-address   |   |
| omit-transport-address     |   |
| spoofing                   |   |

## Command Mode

- /exec/configure/ldp

# distance

distance <distance> | no distance [ <distance> ]

## Syntax Description

|                 |                                      |
|-----------------|--------------------------------------|
| no              | Negate a command or set its defaults |
| distance        | RIP administrative distance          |
| <i>distance</i> | RIP administrative distance          |

## Command Mode

- /exec/configure/router-rip/router-rip-af-common /exec/configure/router-rip/router-rip-vrf-af-common

# distance

distance <admin-dist> | no distance [ <admin-dist> ]

## Syntax Description

|                   |                                      |
|-------------------|--------------------------------------|
| no                | Negate a command or set its defaults |
| distance          | OSPF administrative distance         |
| <i>admin-dist</i> | administrative distance value        |

## Command Mode

- /exec/configure/router-ospf /exec/configure/router-ospf/vrf

# distance

distance <admin-dist> | no distance [ <admin-dist> ]

## Syntax Description

|                   |                                      |
|-------------------|--------------------------------------|
| no                | Negate a command or set its defaults |
| distance          | Administrative distance              |
| <i>admin-dist</i> | Distance value                       |

## Command Mode

- /exec/configure/router-isis/router-isis-vrf-common /exec/configure/router-isis/router-isis-af-ipv6

# distance

distance <admin-dist> | no distance [ <admin-dist> ]

## Syntax Description

|                   |                                      |
|-------------------|--------------------------------------|
| no                | Negate a command or set its defaults |
| distance          | OSPFv3 administrative distance       |
| <i>admin-dist</i> | administrative distance value        |

## Command Mode

- /exec/configure/router-ospf3/router-ospf3-af-ipv6 /exec/configure/router-ospf3/vrf/router-ospf3-af-ipv6

# distance

```
{ { distance <int-distance> <ext-distance> } | { no distance [ <int-distance> <ext-distance> ] } }
```

## Syntax Description

|                     |                                      |
|---------------------|--------------------------------------|
| no                  | Negate a command or set its defaults |
| distance            | Define an administrative distance    |
| <i>int-distance</i> | Distance for internal routes         |
| <i>ext-distance</i> | Distance for external routes         |

## Command Mode

- /exec/configure/router-eigrp/router-eigrp-vrf-common /exec/configure/router-eigrp/router-eigrp-af-common

# distance

distance <ebgp-dist> <ibgp-dist> <local-dist> | no distance [ <ebgp-dist> <ibgp-dist> <local-dist> ]

## Syntax Description

|                   |                                      |
|-------------------|--------------------------------------|
| no                | Negate a command or set its defaults |
| distance          | Configure administrative distance    |
| <i>ebgp-dist</i>  | Distance for EBGP routes             |
| <i>ibgp-dist</i>  | Distance for IBGP routes             |
| <i>local-dist</i> | Distance for local routes            |

## Command Mode

- /exec/configure/router-bgp/router-bgp-af

# distribute-list route in

[no] distribute-list { { route-map <map> } | { prefix-list <list> } } { in | out } <interface>

## Syntax Description

|                  |   |
|------------------|---|
| no               | (Optional) Negate a command or set its defaults |
| distribute-list  | Filter networks in routing updates              |
| route-map        | Use a route-map for route filtering             |
| <i>map</i>       | Route-map name                                  |
| prefix-list      | Use a prefix-list for route filtering           |
| <i>list</i>      | Reference to prefix-list name                   |
| in               | Filter incoming routing updates                 |
| out              | Filter outgoing routing updates                 |
| <i>interface</i> | Interface name                                  |

## Command Mode

- /exec/configure/router-eigrp/router-eigrp-vrf-common /exec/configure/router-eigrp/router-eigrp-af-common

**distribute into route-map all**

```
{ { distribute <src-level> into <dst-level> { { route-map { <map-name> | <rtr_pol_name> } } | all } } | { no
distribute <src-level> into <dst-level> [ { route-map { <map-name> | <rtr_pol_name> } } | all ] } }
```

#### Syntax Description

|                     |                                       |
|---------------------|---------------------------------------|
| no                  | Negate a command or set its defaults  |
| distribute          | Distribute routes between ISIS levels |
| <i>src-level</i>    | Route-distribution between levels     |
| <i>dst-level</i>    | Route-distribution between levels     |
| route-map           | Route Map to constrain distribution   |
| into                | from level-n into level-m             |
| <i>map-name</i>     | A 'routing-rules' route-map name      |
| <i>rtr_pol_name</i> | An existing routing-rules policy      |
| all                 | Distribute all level-n routes         |

#### Command Mode

- /exec/configure/router-isis/router-isis-vrf-common /exec/configure/router-isis/router-isis-af-common

# dns

[no] dns { <WORD> } { name-server { <hostname> | <ip-address> } } { [ source-ip { <source-ip-hostname> | <source-ip-address> } ] | [ source-port <src-port> ] } +

## Syntax Description

|                           |   |
|---------------------------|---|
| no                        | (Optional)  |
| <i>source-ip</i>          | (Optional) source-port                              |
| <i>src-port</i>           | (Optional)  |
| dns                       | DNS Operation                                       |
| <i>WORD</i>               | Target IP Address or Hostname                       |
| name-server               | Name Server   |
| <i>hostname</i>           | Destination hostname, broadcast disallowed          |
| <i>ip-address</i>         | Destination IP address, broadcast disallowed        |
| <i>source-ip-hostname</i> | (Optional) source IP hostname, broadcast disallowed |
| <i>source-ip-address</i>  | (Optional) source IP address, broadcast disallowed  |
| source-port               | (Optional) Source Port                              |

## Command Mode

- /exec/configure/ip-sla

# domain-id

domain-id { <id> | { type <dtype> value <dvalue> } | Null } | no domain-id [ <id> | { type <dtype> value <dvalue> } | Null ]

## Syntax Description

|               |  |
|---------------|--|
| no            | Negate a command or set its defaults       |
| domain-id     | OSPF domain-ID                             |
| <i>id</i>     | OSPF domain ID in IP address format        |
| type          | OSPF domain ID type in Hex format          |
| <i>dtype</i>  | OSPF domain ID type in Hex format          |
| value         | OSPF domain ID ext. community value in Hex |
| <i>dvalue</i> |  |
| Null          | Null Domain-ID                             |

## Command Mode

- /exec/configure/router-ospf/vrf

# domain-id secondary

domain-id { <id> | { type <dtype> value <dvalue> } | Null } secondary | no domain-id [ <id> | { type <dtype> value <dvalue> } | Null ] secondary

## Syntax Description

|               |  |
|---------------|--|
| no            | Negate a command or set its defaults       |
| domain-id     | OSPF domain-ID                             |
| <i>id</i>     | OSPF domain ID in IP address format        |
| type          | OSPF domain ID type in Hex format          |
| <i>dtype</i>  | OSPF domain ID type in Hex format          |
| value         | OSPF domain ID ext. community value in Hex |
| <i>dvalue</i> |  |
| Null          | Null Domain-ID                             |
| secondary     | Secondary Domain-ID                        |

## Command Mode

- /exec/configure/router-ospf/vrf

# domain-tag

[no] domain-tag <as-number>

## Syntax Description

|                  |   |
|------------------|---|
| no               | (Optional) Negate a command or set its defaults |
| domain-tag       | Set OSPF process domain-tag                     |
| <i>as-number</i> | AS number                                       |

## Command Mode

- /exec/configure/router-ospf/vrf

# dont-capability-negotiate

[ no | default ] dont-capability-negotiate

## Syntax Description

|                           |   |
|---------------------------|---|
| no                        | (Optional) Negate a command or set its defaults |
| default                   | (Optional) Inherit values from a peer template  |
| dont-capability-negotiate | Don't negotiate capability with this neighbor   |

## Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor-sess

# dos2nxos

dos2nxos <uri0>

## Syntax Description

|             |  |
|-------------|--|
| dos2nxos    | DOS to NXOS text file format converter |
| <i>uri0</i> | Filename to be displayed               |

## Command Mode

- /exec

# dot1q

{ dot1q <dot1q-id> <intf-id> } | { no dot1q }

## Syntax Description

|                 |  |
|-----------------|--|
| no              | Negate a command or set its defaults                         |
| dot1q           | Encapsulation dot1q/bd                                       |
| <i>dot1q-id</i> | Encapsulation dot1q/bd value                                 |
| <i>intf-id</i>  | Name of the interface for ngoam on which dot1q is configured |

## Command Mode

- /exec/configure/configngoamprofile

# dot1q

{ dot1q <vlan-id> [ cos <cos-val> ] } | { no dot1q }

## Syntax Description

|                |   |
|----------------|---|
| no             | Negate a command or set its defaults      |
| dot1q          | specify flow profile to include dot1q tag |
| <i>vlan-id</i> | specify flow profile vlan-id              |
| cos            | (Optional) specify class of service       |
| <i>cos-val</i> | (Optional) class of service value         |

## Command Mode

- /exec/configure/configngoaamprofileflow

# dot1q default dynamic

{ dot1q default dynamic } | { no dot1q default }

## Syntax Description

|         |  |
|---------|--|
| no      | Negate a command or set its defaults   |
| dynamic | Dynamic Profile Map: Retrieve profile name from the external server                    |
| dot1q   | Dot1Q Encapsulation  |
| default | Default (wildcard). Match any dot1q when there is no specific dot1q mapping configured |

## Command Mode

- /exec/configure/profile-map /exec/configure/profile-map-global

## dot1x default

dot1x default

### Syntax Description

|       |                              |
|-------|------------------------------|
| dot1x | dot1x configuration commands |
|-------|------------------------------|

### Command Mode

- /exec/configure

# dot1x default

dot1x default

## Syntax Description

|       |                              |
|-------|------------------------------|
| dot1x | dot1x configuration commands |
|-------|------------------------------|

## Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

**dot1x host-mode**

## dot1x host-mode

dot1x host-mode <host\_mode> | no dot1x host-mode

### Syntax Description

|                  |                                      |
|------------------|--------------------------------------|
| dot1x            | dot1x configuration commands         |
| host-mode        | role of 802.1x authenticating entity |
| <i>host_mode</i> | Host Mode                            |

### Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ether-all

# dot1x initialize

{ dot1x initialize } | { dot1x initialize interface <if> }

## Syntax Description

|            |   |
|------------|---|
| dot1x      | dot1x configuration commands                    |
| initialize | Initialize State Machines for a given Interface |
| <i>if</i>  | target interface                                |

## Command Mode

- /exec

# dot1x mac-auth-bypass

dot1x mac-auth-bypass [ eap ] | no dot1x mac-auth-bypass

## Syntax Description

|                 |                                      |
|-----------------|--------------------------------------|
| no              | Negate a command or set its defaults |
| dot1x           | dot1x configuration commands         |
| mac-auth-bypass | Configure Mac-Auth-Bypass            |
| eap             | (Optional) EAP Authentication        |

## Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ether-all

# dot1x max-reauth-req

dot1x max-reauth-req <count> | no dot1x max-reauth-req

## Syntax Description

|                |   |
|----------------|---|
| dot1x          | dot1x configuration commands                      |
| max-reauth-req | Maximum Re-authentication Attempts Before Failing |
| <i>count</i>   | number of retries                                 |

## Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

**dot1x max-req**

```
dot1x max-req <count> | no dot1x max-req
```

**Syntax Description**

|              |  |
|--------------|--|
| dot1x        | dot1x configuration commands               |
| max-req      | Maximum Retries to Initiate Authentication |
| <i>count</i> | number of retries                          |

**Command Mode**

- /exec/configure

# dot1x max-req

dot1x max-req <count> | no dot1x max-req

## Syntax Description

|              |  |
|--------------|--|
| dot1x        | dot1x configuration commands               |
| max-req      | Maximum Retries to Initiate Authentication |
| <i>count</i> | number of retries                          |

## Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ether-all

## dot1x pae

[no] dot1x pae <pae-value>

### Syntax Description

|                  |                                      |
|------------------|--------------------------------------|
| dot1x            | dot1x configuration commands         |
| pae              | role of 802.1x authenticating entity |
| <i>pae-value</i> | role                                 |

### Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ether-all

# dot1x port-control

[no] dot1x port-control <port-control-value>

## Syntax Description

|                           |                              |
|---------------------------|------------------------------|
| dot1x                     | dot1x configuration commands |
| port-control              | port control                 |
| <i>port-control-value</i> | set the port-control value   |

## Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

**dot1x radius-accounting**

[no] dot1x radius-accounting

**Syntax Description**

|                   |                               |
|-------------------|-------------------------------|
| dot1x             | dot1x configuration commands  |
| radius-accounting | accounting messages to RADIUS |

**Command Mode**

- /exec/configure

# dot1x re-authenticate

{ dot1x re-authenticate } | { dot1x re-authenticate interface <if> }

## Syntax Description

|                 |                                       |
|-----------------|---------------------------------------|
| dot1x           | dot1x configuration commands          |
| re-authenticate | Manually re-authenticate an Interface |
| <i>if</i>       | target interface                      |

## Command Mode

- /exec

**dot1x re-authentication**

[no] dot1x re-authentication

**Syntax Description**

|                   |  |
|-------------------|--|
| dot1x             | dot1x configuration commands                     |
| re-authentication | Enable or Disable Reauthentication for this port |

**Command Mode**

- /exec/configure

# dot1x re-authentication

[no] dot1x re-authentication

## Syntax Description

|                   |  |
|-------------------|--|
| dot1x             | dot1x configuration commands                     |
| re-authentication | Enable or Disable Reauthentication for this port |

## Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

**dot1x show credential**

## dot1x show credential

dot1x show credential <name>

### Syntax Description

|             |                               |
|-------------|-------------------------------|
| dot1x       | dot1x configuration commands  |
| credential  | supplicant credential profile |
| <i>name</i> | profile name                  |

### Command Mode

- /exec/configure/dot1x-cred

# dot1x start supplicant interface

{ dot1x start supplicant interface <if> } | { dot1x start supplicant interface <if> credential <name> }

## Syntax Description

|             |                              |
|-------------|------------------------------|
| dot1x       | dot1x configuration commands |
| start       | start 802.1x client          |
| supplicant  | 802.1x supplicant            |
| <i>if</i>   | target interface             |
| credential  | credential profile name      |
| <i>name</i> | name                         |

## Command Mode

- /exec

**dot1x stop supplicant interface**

# dot1x stop supplicant interface

dot1x stop supplicant interface &lt;if&gt;

## Syntax Description

|            |                              |
|------------|------------------------------|
| dot1x      | dot1x configuration commands |
| stop       | stop 802.1x client           |
| supplicant | 802.1x supplicant            |
| <i>if</i>  | target interface             |

## Command Mode

- /exec

# dot1x supplicant credential

[no] dot1x supplicant credential <name>

## Syntax Description

|             |                              |
|-------------|------------------------------|
| dot1x       | dot1x configuration commands |
| supplicant  | 802.1x supplicant            |
| credential  | credential profile name      |
| <i>name</i> | name                         |

## Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

**dot1x supplicant credential**

# dot1x supplicant credential

[no] dot1x supplicant credential <name>

## Syntax Description

|            |                               |
|------------|-------------------------------|
| dot1x      | dot1x configuration commands  |
| supplicant | 802.1x supplicant             |
| credential | supplicant credential profile |

## Command Mode

- /exec/configure

# dot1x supplicant default

dot1x supplicant default

## Syntax Description

|            |                              |
|------------|------------------------------|
| dot1x      | dot1x configuration commands |
| supplicant | 802.1x supplicant            |

## Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

**dot1x supplicant max-start**

## dot1x supplicant max-start

[no] dot1x supplicant max-start <count>

### Syntax Description

|              |                              |
|--------------|------------------------------|
| dot1x        | dot1x configuration commands |
| supplicant   | 802.1x supplicant            |
| max-start    | Maximum Start Requests       |
| <i>count</i> | number                       |

### Command Mode

- /exec/configure

# dot1x supplicant max-start

[no] dot1x supplicant max-start <count>

## Syntax Description

|              |                              |
|--------------|------------------------------|
| dot1x        | dot1x configuration commands |
| supplicant   | 802.1x supplicant            |
| max-start    | Maximum Start Requests       |
| <i>count</i> | number                       |

## Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

**dot1x supplicant timeout auth-period**

[no] dot1x supplicant timeout auth-period <value>

**Syntax Description**

|              |   |
|--------------|---|
| dot1x        | dot1x configuration commands                    |
| supplicant   | 802.1x supplicant                               |
| timeout      | Various Timeouts                                |
| auth-period  | waiting period for responses from authenticator |
| <i>value</i> | time interval in seconds                        |

**Command Mode**

- /exec/configure

# dot1x supplicant timeout auth-period

[no] dot1x supplicant timeout auth-period <value>

## Syntax Description

|              |   |
|--------------|---|
| dot1x        | dot1x configuration commands                    |
| supplicant   | 802.1x supplicant                               |
| timeout      | Various Timeouts                                |
| auth-period  | waiting period for responses from authenticator |
| <i>value</i> | time interval in seconds                        |

## Command Mode

- /exec/configure/if-eth-base /exec/configure/if-etherent-all

**dot1x supplicant timeout held-period**

[no] dot1x supplicant timeout held-period <value>

**Syntax Description**

|              |  |
|--------------|--|
| dot1x        | dot1x configuration commands                             |
| supplicant   | 802.1x supplicant  |
| timeout      | Various Timeouts   |
| held-period  | waiting period for retrying, after failed authentication |
| <i>value</i> | time interval in seconds                                 |

**Command Mode**

- /exec/configure

# dot1x supplicant timeout held-period

[no] dot1x supplicant timeout held-period <value>

## Syntax Description

|              |  |
|--------------|--|
| dot1x        | dot1x configuration commands                             |
| supplicant   | 802.1x supplicant  |
| timeout      | Various Timeouts   |
| held-period  | waiting period for retrying, after failed authentication |
| <i>value</i> | time interval in seconds                                 |

## Command Mode

- /exec/configure/if-eth-base /exec/configure/if-etherent-all

**dot1x supplicant timeout start-period**

[no] dot1x supplicant timeout start-period <value>

**Syntax Description**

|              |                                 |
|--------------|---------------------------------|
| dot1x        | dot1x configuration commands    |
| supplicant   | 802.1x supplicant               |
| timeout      | Various Timeouts                |
| start-period | Interval Between Start Requests |
| <i>value</i> | time interval in seconds        |

**Command Mode**

- /exec/configure

# dot1x supplicant timeout start-period

[no] dot1x supplicant timeout start-period <value>

## Syntax Description

|              |                                 |
|--------------|---------------------------------|
| dot1x        | dot1x configuration commands    |
| supplicant   | 802.1x supplicant               |
| timeout      | Various Timeouts                |
| start-period | Interval Between Start Requests |
| <i>value</i> | time interval in seconds        |

## Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

## dot1x system-auth-control

[no] dot1x system-auth-control

### Syntax Description

|                     |                                  |
|---------------------|----------------------------------|
| dot1x               | dot1x configuration commands     |
| system-auth-control | Enable or Disable SysAuthControl |

### Command Mode

- /exec/configure

# dot1x timeout quiet-period

dot1x timeout quiet-period <value> | no dot1x timeout quiet-period

## Syntax Description

|              |   |
|--------------|---|
| dot1x        | dot1x configuration commands                                    |
| timeout      | Various Timeouts  |
| quiet-period | Timeout For Retrying Authentication After Failed Authentication |
| <i>value</i> | time interval in seconds  |

## Command Mode

- /exec/configure

**dot1x timeout quiet-period**

## dot1x timeout quiet-period

dot1x timeout quiet-period <value> | no dot1x timeout quiet-period

### Syntax Description

|              |   |
|--------------|---|
| dot1x        | dot1x configuration commands                                    |
| timeout      | Various Timeouts  |
| quiet-period | Timeout For Retrying Authentication After Failed Authentication |
| <i>value</i> | time interval in seconds  |

### Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ether-all

# dot1x timeout ratelimit-period

dot1x timeout ratelimit-period <value> | no dot1x timeout ratelimit-period

## Syntax Description

|                  |                                   |
|------------------|-----------------------------------|
| dot1x            | dot1x configuration commands      |
| timeout          | Various Timeouts                  |
| ratelimit-period | Rate Limit period for EAPOL-Start |
| <i>value</i>     | time interval in seconds          |

## Command Mode

- /exec/configure/if-eth-base /exec/configure/if-etherne-all

**dot1x timeout re-authperiod**

```
dot1x timeout re-authperiod <value> | no dot1x timeout re-authperiod
```

**Syntax Description**

|               |                               |
|---------------|-------------------------------|
| dot1x         | dot1x configuration commands  |
| timeout       | Various Timeouts              |
| re-authperiod | Timeout For Re-Authentication |
| <i>value</i>  | time interval in seconds      |

**Command Mode**

- /exec/configure

# dot1x timeout re-authperiod

dot1x timeout re-authperiod <value> | no dot1x timeout re-authperiod

## Syntax Description

|               |                               |
|---------------|-------------------------------|
| dot1x         | dot1x configuration commands  |
| timeout       | Various Timeouts              |
| re-authperiod | Timeout For Re-Authentication |
| <i>value</i>  | time interval in seconds      |

## Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

**dot1x timeout server-timeout**

## dot1x timeout server-timeout

dot1x timeout server-timeout <value> | no dot1x timeout server-timeout

### Syntax Description

|                |                              |
|----------------|------------------------------|
| dot1x          | dot1x configuration commands |
| timeout        | Various Timeouts             |
| server-timeout | Timeout for Radius Retries   |
| <i>value</i>   | time interval in seconds     |

### Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ether-all

# dot1x timeout supp-timeout

dot1x timeout supp-timeout <value> | no dot1x timeout supp-timeout

## Syntax Description

|              |                               |
|--------------|-------------------------------|
| dot1x        | dot1x configuration commands  |
| timeout      | Various Timeouts              |
| supp-timeout | Timeout for Suplicant retries |
| <i>value</i> | time interval in seconds      |

## Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

**dot1x timeout tx-period**

## dot1x timeout tx-period

dot1x timeout tx-period <value> | no dot1x timeout tx-period

### Syntax Description

|              |  |
|--------------|--|
| dot1x        | dot1x configuration commands                 |
| timeout      | Various Timeouts                             |
| tx-period    | Timeout For Resending Requests To Supplicant |
| <i>value</i> | time interval in seconds                     |

### Command Mode

- /exec/configure

# dot1x timeout tx-period

dot1x timeout tx-period <value> | no dot1x timeout tx-period

## Syntax Description

|              |  |
|--------------|--|
| dot1x        | dot1x configuration commands                 |
| timeout      | Various Timeouts                             |
| tx-period    | Timeout For Resending Requests To Supplicant |
| <i>value</i> | time interval in seconds                     |

## Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

**down-bit-ignore**

# down-bit-ignore

{ down-bit-ignore } | { no down-bit-ignore }

## Syntax Description

|                 |  |
|-----------------|--|
| no              | Negate a command or set its defaults   |
| down-bit-ignore | Configure a PE router to ignore the DN bit for network summary, external and NSSA external LSA |

## Command Mode

- /exec/configure/router-ospf/vrf

# downlink delay

downlink delay <ena-dis-flg> [ timeout <time-out> ] | no downlink delay

## Syntax Description

|                    |   |
|--------------------|---|
| no                 | Negate a command or set its defaults              |
| downlink           | Change downlink linkup time                       |
| delay              | delay bringup of downlinks                        |
| <i>ena-dis-flg</i> | Enable/Disable downlink delay feature             |
| timeout            | (Optional) downlink ports enable delay in seconds |
| <i>time-out</i>    | (Optional) Time out                               |

## Command Mode

- /exec/configure

**dpp set-qos-group**

## dpp set-qos-group

[no] dpp set-qos-group <qos-group>

### Syntax Description

|                  |   |
|------------------|---|
| no               | (Optional) Negate a command or set its defaults |
| dpp              | Dynamic Packet Prioritization                   |
| set-qos-group    | QoS group to be mapped                          |
| <i>qos-group</i> | QoS Group Value                                 |

### Command Mode

- /exec/configure/policy-map/type/uf/class

# dscp

{ [ no ] dscp <dscp> | no dscp }

## Syntax Description

|             |   |
|-------------|---|
| dscp        | Optional DSCP                           |
| <i>dscp</i> | Differentiated services codepoint value |

## Command Mode

- /exec/configure/nfm-exporter

# dst-grp

[no] dst-grp <d-grp-id>

## Syntax Description

|                 |   |
|-----------------|---|
| no              | (Optional) Negate a command or set its defaults |
| dst-grp         | Associated destination group                    |
| <i>d-grp-id</i> | Identifier                                      |

## Command Mode

- /exec/configure/telemetry/subscription

# dual-active exclude interface-vlan

dual-active exclude interface-vlan <allow-vlans> | no dual-active exclude interface-vlan

## Syntax Description

|                    |   |
|--------------------|---|
| no                 | Negate a command or set its defaults                        |
| dual-active        | Configuration when peer link is down but peer is alive      |
| interface-vlan     | Interface vlan and bridge-domain configuration              |
| exclude            | Interface vlans to exclude from suspension when dual-active |
| <i>allow-vlans</i> | Set allowed interface vlans/bridge-domain                   |

## Command Mode

- /exec/configure/vpc-domain

# dual-stage translate xml

`dual-stage translate <dn> { xml | json } <in_file> <out_file> [ exec-python ] [ delete-files ]`

## Syntax Description

|                           |  |
|---------------------------|--|
| <code>dual-stage</code>   | Related to 2 stage commit                                  |
| <code>translate</code>    | Convert from external restful format to internal JSON      |
| <code>xml</code>          | Input file has XML   |
| <code>json</code>         | Input file has JSON  |
| <code>dn</code>           | DN param   |
| <code>in_file</code>      | Input file name  |
| <code>out_file</code>     | Output file name   |
| <code>exec-python</code>  | (Optional) Execute python script after translation         |
| <code>delete-files</code> | (Optional) Delete input and output files after translation |

## Command Mode

- /exec

# duplex

duplex <duplex\_mode> | no duplex [ <duplex\_mode> ]

## Syntax Description

|                    |                                      |
|--------------------|--------------------------------------|
| no                 | Negate a command or set its defaults |
| duplex             | Enter the port duplex mode           |
| <i>duplex_mode</i> | Interface duplex mode                |

## Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-non-member /exec/configure/if-port-channel

# duplex

duplex <duplex\_mode> | no duplex [ <duplex\_mode> ]

## Syntax Description

|                    |                                      |
|--------------------|--------------------------------------|
| no                 | Negate a command or set its defaults |
| duplex             | Enter the port duplex mode           |
| <i>duplex_mode</i> | Interface duplex mode                |

## Command Mode

- /exec/configure/if-mgmt-ether

# duplicate-message throttle

[no] duplicate-message throttle

## Syntax Description

|                   |   |
|-------------------|---|
| no                | (Optional) Negate a command or set its defaults           |
| duplicate-message | Configure throttling of duplicate callhome alert messages |
| throttle          | Enable throttling of duplicate callhome alert messages    |

## Command Mode

- /exec/configure/callhome

# dynamic-capability

[ no | default ] dynamic-capability

## Syntax Description

|                    |   |
|--------------------|---|
| no                 | (Optional) Negate a command or set its defaults |
| default            | (Optional) Inherit values from a peer template  |
| dynamic-capability | Dynamic capability                              |

## Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor-sess

# dynamic-med-interval

[no] dynamic-med-interval <sec>

## Syntax Description

|                      |   |
|----------------------|---|
| no                   | (Optional) Negate a command or set its defaults |
| dynamic-med-interval | Sets the interval for dampening of med changes  |
| <i>sec</i>           | Time interval in seconds                        |

## Command Mode

- /exec/configure/router-bgp

dynamic-med-interval