



S Commands

- [sak-expiry-time](#), on page 14
- [sampler](#), on page 15
- [sampling](#), on page 16
- [sap hash-algorithm HMAC-SHA-1](#), on page 17
- [sap modelist](#), on page 18
- [sap pmk sap pmk use-dot1x](#), on page 19
- [save](#), on page 20
- [scale-factor module](#), on page 21
- [scheduler aaa-authentication](#), on page 22
- [scheduler enable](#), on page 23
- [scheduler job name](#), on page 24
- [scheduler logfile size](#), on page 25
- [scheduler schedule name](#), on page 26
- [scheduler transport email](#), on page 27
- [scp](#), on page 28
- [scp](#), on page 29
- [scripting tcl init](#), on page 30
- [scripting tcl recursion-limit](#), on page 31
- [search](#), on page 32
- [section](#), on page 33
- [secure-handoff](#), on page 34
- [security-policy](#), on page 35
- [sed](#), on page 36
- [segment-routing mpls](#), on page 37
- [send-community](#), on page 38
- [send-community](#), on page 39
- [send-community extended](#), on page 40
- [send-lifetime month_a month_b month_c month_d month_e month_f month_g month_h month_i month_j month_k month_l duration infinite month_a month_b month_c month_d month_e month_f month_g month_h month_i month_j month_k month_l](#), on page 41
- [send-lifetime month_a month_b month_c month_d month_e month_f month_g month_h month_i month_j month_k month_l duration infinite month_a month_b month_c month_d month_e month_f month_g month_h month_i month_j month_k month_l](#), on page 43
- [send](#), on page 45

- [send session](#), on page 46
- [sensor-group](#), on page 47
- [serial](#), on page 48
- [server](#), on page 49
- [server](#), on page 50
- [server](#), on page 51
- [server protocol ldap](#), on page 52
- [server protocol radius group](#), on page 53
- [server protocol xmpp ip](#), on page 54
- [service-policy](#), on page 55
- [service-policy](#), on page 56
- [service-policy](#), on page 57
- [service-policy input](#), on page 58
- [service-policy type network-qos](#), on page 59
- [service-policy type psp](#), on page 60
- [service-policy type qos](#), on page 61
- [service-policy type queuing](#), on page 62
- [service-policy type queuing](#), on page 63
- [service-policy type queuing](#), on page 64
- [service dhcp](#), on page 65
- [service set](#), on page 66
- [service tag](#), on page 67
- [service unsupported-transceiver](#), on page 68
- [session-limit](#), on page 69
- [session domain-lookup](#), on page 70
- [session key-required](#), on page 71
- [session max](#), on page 72
- [session max](#), on page 73
- [session protection](#), on page 74
- [set-attached-bit](#), on page 75
- [set-overload-bit](#), on page 76
- [set-overload-bit](#), on page 77
- [set](#), on page 78
- [set](#), on page 81
- [set](#), on page 82
- [set](#), on page 84
- [set](#), on page 85
- [set](#), on page 86
- [set as-path prepend last-as tag](#), on page 87
- [set comm-list delete](#), on page 88
- [set community none additive internet local-AS](#), on page 89
- [set cos](#), on page 90
- [set cos](#), on page 91
- [set dampening](#), on page 92
- [set distance](#), on page 93
- [set extcomm-list delete](#), on page 94

- [set extcommunity 4byteas-generic transitive additive](#), on page 95
- [set extcommunity additive](#), on page 96
- [set extcommunity cost](#), on page 97
- [set extcommunity rt additive](#), on page 98
- [set extension-key](#), on page 99
- [set forwarding-address](#), on page 100
- [set inner ipv4](#), on page 101
- [set inner ipv4](#), on page 103
- [set inner l2](#), on page 105
- [set inner l2](#), on page 107
- [set inner l2 hg2](#), on page 109
- [set inner l2 hg2](#), on page 111
- [set inner l4](#), on page 113
- [set inner l4](#), on page 114
- [set interface](#), on page 115
- [set interval find-new-host](#), on page 116
- [set interval pending-task-polling](#), on page 117
- [set interval sync-full-info](#), on page 118
- [set ip address prefix-list](#), on page 119
- [set ip default next-hop](#), on page 120
- [set ip default next-hop verify-availability](#), on page 121
- [set ip next-hop](#), on page 122
- [set ip next-hop peer-address](#), on page 123
- [set ip next-hop redist-unchanged](#), on page 124
- [set ip next-hop unchanged](#), on page 125
- [set ip next-hop verify-availability](#), on page 126
- [set ip precedence](#), on page 127
- [set ipv6 address prefix-list](#), on page 128
- [set ipv6 default next-hop](#), on page 129
- [set ipv6 default next-hop verify-availability](#), on page 130
- [set ipv6 next-hop](#), on page 131
- [set ipv6 next-hop peer-address](#), on page 132
- [set ipv6 next-hop redist-unchanged](#), on page 133
- [set ipv6 next-hop unchanged](#), on page 134
- [set ipv6 next-hop verify-availability](#), on page 135
- [set ipv6 precedence](#), on page 136
- [set label-index](#), on page 137
- [set level level-1 level-1-2 level-2](#), on page 138
- [set local-preference](#), on page 139
- [set metric](#), on page 140
- [set mpls-exp-topmost cos table exp-cos-map](#), on page 141
- [set nssa-only](#), on page 142
- [set origin egp](#), on page 143
- [set origin egp igp incomplete](#), on page 144
- [set outer ipv4](#), on page 145
- [set outer l2](#), on page 147

- set outer l2 hg2, on page 149
- set outer l4, on page 151
- set path-selection all advertise, on page 152
- set pktmgr pds yield-threshold, on page 153
- set pktrw, on page 154
- set sideband, on page 160
- set tag, on page 163
- set weight, on page 164
- setup, on page 165
- sflow, on page 166
- sflow, on page 167
- sflow cpu-usage limit, on page 168
- sflow data-source interface, on page 169
- sflow data-source interface, on page 170
- sflow extended switch, on page 171
- shape, on page 172
- shared-secret, on page 174
- show, on page 175
- show, on page 178
- show, on page 179
- show, on page 182
- show, on page 186
- show, on page 190
- show, on page 191
- show, on page 192
- show, on page 193
- show, on page 194
- show, on page 195
- show, on page 196
- show, on page 197
- show, on page 198
- show_interface, on page 199
- shut, on page 200
- shutdown, on page 201
- shutdown, on page 202
- shutdown, on page 203
- shutdown, on page 204
- shutdown, on page 205
- shutdown, on page 206
- shutdown, on page 207
- shutdown, on page 208
- shutdown, on page 209
- shutdown, on page 210
- shutdown, on page 211
- shutdown, on page 212
- shutdown, on page 213

- shutdown, on page 214
- shutdown, on page 215
- shutdown, on page 216
- shutdown, on page 217
- shutdown, on page 218
- shutdown, on page 219
- shutdown, on page 220
- shutdown, on page 221
- shutdown, on page 222
- shutdown, on page 223
- shutdown, on page 224
- shutdown, on page 225
- shutdown, on page 226
- shutdown, on page 227
- shutdown, on page 228
- shutdown, on page 229
- shutdown, on page 230
- shutdown, on page 231
- shutdown force, on page 232
- shutdown lan, on page 233
- shutdown lan, on page 234
- signalling advertise explicit-null, on page 235
- signalling client batch-time, on page 236
- signalling hello graceful-restart, on page 237
- signalling hello graceful-restart refresh interval, on page 238
- signalling hello graceful-restart refresh misses, on page 239
- signalling hello graceful-restart send recovery-time, on page 240
- signalling hello graceful-restart send restart-time, on page 241
- signalling hello reroute, on page 242
- signalling initial-retransmit-delay, on page 243
- signalling patherr state-removal, on page 244
- signalling rate-limit, on page 245
- signalling refresh interval, on page 246
- signalling refresh misses, on page 247
- signalling refresh pace, on page 248
- signalling refresh reduction, on page 249
- signalling refresh reduction ack-delay, on page 250
- signalling refresh reduction bundle-max-size, on page 251
- signalling refresh reduction bundle-transmit-time, on page 252
- signalling refresh reduction rapid-retransmit, on page 253
- signing level, on page 254
- site-id, on page 255
- site-of-origin, on page 256
- slave ipv4, on page 257
- sleep, on page 258
- sleep instance, on page 259

- slot, on page 260
- smtp-host smtp-port reply-to from, on page 261
- snapshot create, on page 262
- snapshot delete, on page 263
- snapshot delete ALL, on page 264
- snapshot section add, on page 265
- snapshot section delete, on page 266
- snmp-server aaa-user cache-timeout, on page 267
- snmp-server community, on page 268
- snmp-server community, on page 269
- snmp-server community use-acl, on page 270
- snmp-server contact, on page 271
- snmp-server context, on page 272
- snmp-server context type len val, on page 273
- snmp-server counter cache-enable, on page 274
- snmp-server counter cache enable, on page 275
- snmp-server counter cache timeout, on page 276
- snmp-server enable traps, on page 277
- snmp-server enable traps bgp, on page 278
- snmp-server enable traps bgp cbgp2, on page 279
- snmp-server enable traps bgp cbgp2 threshold prefix, on page 280
- snmp-server enable traps bgp threshold prefix, on page 281
- snmp-server enable traps eigrp, on page 282
- snmp-server enable traps ospf, on page 283
- snmp-server enable traps ospf lsa, on page 284
- snmp-server enable traps ospf rate-limit, on page 285
- snmp-server enable traps ospfv3, on page 286
- snmp-server enable traps ospfv3 lsa, on page 287
- snmp-server enable traps ospfv3 rate-limit, on page 288
- snmp-server enable traps storm-control trap-rate, on page 289
- snmp-server engineID local, on page 290
- snmp-server force-unload-feature, on page 291
- snmp-server globalEnforcePriv, on page 292
- snmp-server host, on page 293
- snmp-server host filter-vrf, on page 294
- snmp-server host source, on page 295
- snmp-server host use-vrf, on page 296
- snmp-server host use_vrf, on page 297
- snmp-server load-cond-feature, on page 298
- snmp-server load-mib, on page 299
- snmp-server location, on page 300
- snmp-server mib community-map context, on page 301
- snmp-server mib mpls vpn max-threshold, on page 302
- snmp-server protocol enable, on page 303
- snmp-server source-interface informs, on page 304
- snmp-server source-interface traps, on page 305

- snmp-server system-shutdown, on page 306
- snmp-server tcp-session, on page 307
- snmp-server user, on page 308
- snmp-server user, on page 309
- snmp-trap event-type policy-name, on page 311
- snmp ifmib ifalias long, on page 312
- snmp trap link-status, on page 313
- snmp trap link-status, on page 314
- snmp trap link-status, on page 315
- snmp trap link-status, on page 316
- snmp trap link-status, on page 317
- snmp trap link-status, on page 318
- snsr-grp sample-interval, on page 319
- sockets local-port-range, on page 320
- soft-reconfiguration inbound, on page 321
- soft-reconfiguration inbound, on page 322
- soo auto, on page 323
- sort, on page 324
- source-group, on page 325
- source-interface, on page 326
- source-interface, on page 327
- source-interface, on page 328
- source-interface hold-down-time, on page 329
- source, on page 330
- source, on page 331
- source, on page 332
- source, on page 333
- source copy-sys, on page 334
- source forward-drops, on page 335
- source interface, on page 336
- source interface, on page 337
- source ip, on page 338
- source proxy-layer2-gateway tree-id switchid tx, on page 339
- source vlan, on page 340
- spanning-tree bpdufilter, on page 341
- spanning-tree bpduguard, on page 342
- spanning-tree bridge-domain, on page 343
- spanning-tree bridge assurance, on page 344
- spanning-tree cost, on page 345
- spanning-tree cost auto, on page 346
- spanning-tree domain, on page 347
- spanning-tree domain clear statistics, on page 348
- spanning-tree fcoe, on page 349
- spanning-tree guard, on page 350
- spanning-tree lc-issu, on page 351
- spanning-tree lc-issu, on page 352

- [spanning-tree link-type](#), on page 353
- [spanning-tree loopguard default](#), on page 354
- [spanning-tree mode](#), on page 355
- [spanning-tree mst configuration](#), on page 356
- [spanning-tree mst configuration](#), on page 357
- [spanning-tree mst cost](#), on page 358
- [spanning-tree mst cost auto](#), on page 359
- [spanning-tree mst forward-time](#), on page 360
- [spanning-tree mst hello-time](#), on page 361
- [spanning-tree mst max-age](#), on page 362
- [spanning-tree mst max-hops](#), on page 363
- [spanning-tree mst port-priority](#), on page 364
- [spanning-tree mst pre-standard](#), on page 365
- [spanning-tree mst priority](#), on page 366
- [spanning-tree mst root](#), on page 367
- [spanning-tree mst simulate pvst](#), on page 368
- [spanning-tree mst simulate pvst global](#), on page 369
- [spanning-tree pathcost method](#), on page 370
- [spanning-tree port-priority](#), on page 371
- [spanning-tree port type](#), on page 372
- [spanning-tree port type edge bpdudfilter default](#), on page 373
- [spanning-tree port type edge bpduguard default](#), on page 374
- [spanning-tree port type edge default](#), on page 375
- [spanning-tree port type edge trunk](#), on page 376
- [spanning-tree port type network default](#), on page 377
- [spanning-tree portfast](#), on page 378
- [spanning-tree portfast bpdudfilter default](#), on page 379
- [spanning-tree portfast bpduguard default](#), on page 380
- [spanning-tree portfast default](#), on page 381
- [spanning-tree pseudo-information](#), on page 382
- [spanning-tree vlan](#), on page 383
- [spanning-tree vlan forward-time](#), on page 384
- [spanning-tree vlan hello-time](#), on page 385
- [spanning-tree vlan max-age](#), on page 386
- [spanning-tree vlan priority](#), on page 387
- [spanning-tree vlan root](#), on page 388
- [speed-group](#), on page 389
- [speed](#), on page 390
- [speed](#), on page 391
- [speed](#), on page 392
- [speed](#), on page 393
- [speed](#), on page 394
- [speed](#), on page 395
- [speed](#), on page 396
- [speed](#), on page 397
- [speed auto](#), on page 398

- speed auto 100, on page 399
- speed auto 100 1000, on page 400
- speed auto 100 1000, on page 401
- speed auto 100, on page 402
- speed auto, on page 403
- spf-interval, on page 404
- spf-interval, on page 405
- spf-interval, on page 406
- spf mode incremental, on page 407
- spf mode incremental, on page 408
- spine-anycast-gateway, on page 409
- sport, on page 410
- sprom backplane, on page 411
- sprom recover backplane, on page 412
- ssh, on page 413
- ssh6, on page 414
- ssh cipher-mode weak, on page 415
- ssh key dsa, on page 416
- ssh login-attempts, on page 417
- ssh server enable, on page 418
- staggered adjacency-bringup, on page 419
- staggered adjacency-count, on page 420
- standby, on page 421
- standby, on page 422
- start, on page 423
- start, on page 424
- start, on page 425
- start, on page 426
- start, on page 427
- start, on page 428
- start, on page 429
- state, on page 430
- state enabled, on page 431
- stateful-ha, on page 432
- stateful-ha, on page 433
- statistics, on page 434
- statistics, on page 435
- statistics, on page 436
- statistics per-entry, on page 437
- statistics per-entry, on page 438
- statistics per-entry, on page 439
- stats-reporting-period, on page 440
- status, on page 441
- status, on page 442
- status, on page 443
- status, on page 444

- status, on page 445
- status, on page 446
- status, on page 447
- sticky root-selection, on page 448
- stopbits 1, on page 449
- stopbits 1, on page 450
- storm-control-cpu, on page 451
- storm-control, on page 452
- stp-root, on page 453
- streetaddress, on page 454
- stub, on page 455
- subscription, on page 456
- summary-address, on page 457
- summary-address, on page 458
- summary-address, on page 459
- summary-address, on page 460
- suppress-arp, on page 461
- suppress-fib-pending, on page 462
- suppress-fib-pending, on page 463
- suppress-inactive, on page 464
- suppress-inactive, on page 465
- suppress-signaling-protocol ldp, on page 466
- suppress mac-route, on page 467
- switch-id, on page 468
- switch-priority, on page 469
- switch-priority, on page 470
- switch-profile, on page 471
- switch-profile, on page 472
- switch-scope controller, on page 473
- switchback, on page 474
- switching-mode fabric-speed 40g, on page 475
- switching-mode store-forward, on page 476
- switchport, on page 477
- switchport, on page 478
- switchport access vlan, on page 479
- switchport access vlan, on page 480
- switchport access vlan, on page 481
- switchport autostate exclude, on page 482
- switchport block unicast, on page 483
- switchport dot1q ethertype, on page 484
- switchport dot1q ethertype, on page 485
- switchport host, on page 486
- switchport isolated, on page 487
- switchport mac-learn disable, on page 488
- switchport mode, on page 489
- switchport mode, on page 490

- `switchport mode fabricpath`, on page 491
- `switchport mode monitor buffer-limit`, on page 492
- `switchport mode private-vlan`, on page 493
- `switchport mode private-vlan trunk`, on page 494
- `switchport monitor`, on page 495
- `switchport port-security`, on page 496
- `switchport port-security aging time`, on page 497
- `switchport port-security aging type absolute`, on page 498
- `switchport port-security mac-address`, on page 499
- `switchport port-security mac-address sticky`, on page 500
- `switchport port-security maximum`, on page 501
- `switchport port-security violation`, on page 502
- `switchport private-vlan association trunk`, on page 503
- `switchport private-vlan host-association`, on page 504
- `switchport private-vlan mapping`, on page 505
- `switchport private-vlan mapping trunk`, on page 506
- `switchport private-vlan trunk allowed vlan`, on page 507
- `switchport private-vlan trunk native vlan`, on page 508
- `switchport trunk allowed vlan`, on page 509
- `switchport trunk native vlan`, on page 510
- `switchport trunk pruning vlan except add remove none all`, on page 511
- `switchport vlan mapping`, on page 512
- `switchport vlan mapping all`, on page 513
- `switchport vlan mapping all dot1q-tunnel`, on page 514
- `switchport vlan mapping all dot1q-tunnel`, on page 515
- `switchport vlan mapping dot1q-tunnel`, on page 516
- `switchport vlan mapping dot1q-tunnel allowed-vlan`, on page 517
- `switchport vlan mapping enable`, on page 518
- `switchto vdc`, on page 519
- `sync-peers destination`, on page 520
- `sync-snmp-password`, on page 521
- `sync-snmp-password`, on page 522
- `sync-snmp-password`, on page 523
- `syslog`, on page 524
- `system-mac`, on page 526
- `system-mac`, on page 527
- `system-priority`, on page 528
- `system`, on page 529
- `system auto-collect tech-support`, on page 531
- `system cores`, on page 532
- `system cores retain`, on page 533
- `system default interface-vlan autostate`, on page 534
- `system default interface`, on page 535
- `system default switchport`, on page 536
- `system default switchport fabricpath`, on page 537
- `system default switchport shutdown`, on page 538

- system dme enable, on page 539
- system dot1q-tunnel transit, on page 540
- system fabric-mode full-rate, on page 541
- system fabric core-vlans, on page 542
- system fabric dynamic-vlans, on page 543
- system fast-reload stabilization-timer, on page 544
- system hap-reset, on page 545
- system hap-reset, on page 546
- system health check bootflash, on page 547
- system heartbeat, on page 548
- system heartbeat, on page 549
- system high-multicast-priority, on page 550
- system inband queuing, on page 551
- system inband queuing, on page 552
- system interface shutdown, on page 553
- system jumbomtu, on page 554
- system kernel-trace, on page 555
- system kgdb, on page 556
- system kgdb, on page 557
- system login block-for, on page 558
- system login block-for attempts within, on page 559
- system login quiet-mode, on page 560
- system login quiet-mode access-class, on page 561
- system memory-thresholds minor severe critical, on page 562
- system minlife, on page 563
- system mode maintenance, on page 564
- system mode maintenance always-use-custom-profile, on page 565
- system mode maintenance on-reload reset-reason, on page 566
- system mode maintenance snapshot-delay, on page 567
- system mode maintenance timeout, on page 568
- system module failure-action shutdown, on page 569
- system mrouting performance-mode, on page 570
- system nve allow-vxlan-native-vlan, on page 571
- system nve drop-glean, on page 572
- system nve ecmp-reuse, on page 573
- system nve infra-vlans, on page 574
- system nve infra-vlans force, on page 575
- system nve ingress-replication round-robin, on page 576
- system nve ipmc global index-size, on page 577
- system nve mac-learn-disable, on page 578
- system nve mac-nat-enable, on page 579
- system nve peer-vni-counter, on page 580
- system nve policy-install-all, on page 581
- system offline, on page 582
- system private-vlan fex trunk, on page 583
- system pss shrink, on page 584

- [system qos](#), on page 585
- [system release mod-lock uuid nodeid](#), on page 586
- [system restart vdc service name](#), on page 587
- [system routing performance-mode](#), on page 588
- [system routing unknown-unicast-flood](#), on page 589
- [system shutdown fan-direction mismatch](#), on page 590
- [system standby manual-boot](#), on page 591
- [system standby manual-boot](#), on page 592
- [system standby reload vdc](#), on page 593
- [system startup-config init](#), on page 594
- [system startup-config kill config-update](#), on page 595
- [system startup-config unlock](#), on page 596
- [system statistics](#), on page 597
- [system statistics](#), on page 598
- [system switch-mode](#), on page 599
- [system switchover](#), on page 600
- [system switchover force](#), on page 601
- [system swover-timeout-reset](#), on page 602
- [system trace](#), on page 603
- [system urpf disable](#), on page 604
- [system vlan long-name](#), on page 605
- [system vlan nve-overlay id](#), on page 606
- [system vlan reserve](#), on page 607
- [system vrf-member-change retain-l3-config](#), on page 608
- [system watchdog](#), on page 609
- [system watchdog](#), on page 610
- [system watchdog kgdb](#), on page 611
- [system watchdog kgdb](#), on page 612

sak-expiry-time

[no] sak-expiry-time <ts>

Syntax Description

sak-expiry-time	Time in seconds to force SAK rekey
<i>ts</i>	time in seconds

Command Mode

- /exec/configure/masec-policy

sampler

[no] sampler <samplername>

Syntax Description

sampler	Define a Sampler
<i>samplername</i>	Name of sampler

Command Mode

- /exec/configure

sampling

sampling <sampling_range> | no sampling

Syntax Description

no	Negate a command or set its defaults
sampling	Set the sampling range for SPAN packets
<i>sampling_range</i>	Sampling range: N = every Nth packet will be spanned

Command Mode

- /exec/configure/monitor-local-src /exec/configure/config-monitor
/exec/configure/config-monitor-erspan-src

sap hash-algorithm HMAC-SHA-1

{ [no] sap hash-algorithm HMAC-SHA-1 } | { sap hash-algorithm HMAC-MD5 }

Syntax Description

sap	Specify preferred SAP negotiation parameters
hash-algorithm	Hashing Algorithm to use during SAP protocol
HMAC-SHA-1	use HMAC-SHA-1 for hashing (default is HMAC-MD5)
HMAC-MD5	use HMAC-MD5 for hashing

Command Mode

- /exec/configure/cts-dot1x /exec/configure/cts-manual

sap modelist

[no] sap modelist <mode_opt>

Syntax Description

sap	Specify preferred SAP negotiation parameters
modelist	encryption mode
<i>mode_opt</i>	modelist options

Command Mode

- /exec/configure/cts-dot1x

sap pmk sap pmk use-dot1x

```
sap pmk <pmk> [ left-zero-padded ] [ modelist <mode_opt> ] | sap pmk use-dot1x [ modelist <mode_opt> ]
| no sap
```

Syntax Description

sap	Specify preferred SAP negotiation parameters
pmk	pairwise master key
<i>pmk</i>	32 byte value specified as a string
left-zero-padded	(Optional) Pad with zeros on the left if PMK length is less than 32 bytes
modelist	(Optional) encryption mode
<i>mode_opt</i>	(Optional) modelist options
<i>modelist</i>	(Optional) <mode_opt>
use-dot1x	Use pmk generated after dot1x authentication. Use dot1x commands to configure dot1x on this port

Command Mode

- /exec/configure/cts-manual

save

save <uri0>

Syntax Description

save	Save the current configuration session to uri
<i>uri0</i>	Enter the complete uri where the session is to be stored

Command Mode

- /exec/configure

scale-factor module

[no] scale-factor <sf-value> module <module-number>

Syntax Description

no	(Optional) Negate a command or set its defaults
scale-factor	Scale factor
<i>sf-value</i>	Specify scale factor value from 0.10 to 2.00
module	Module
<i>module-number</i>	specify module number

Command Mode

- /exec/configure/ctrl-plane

scheduler aaa-authentication

```
{ scheduler aaa-authentication { password { 0 <s0> | 7 <s1> | <s2> } | username <s3> password { 01 <s4> | 71 <s5> | <s6> } } | no scheduler aaa-authentication { password [ { 0 <s0> | 7 <s1> | <s2> } ] | username <s3> password [ { 01 <s4> | 71 <s5> | <s6> } ] } }
```

Syntax Description

no	Negate a command or set its defaults
scheduler	Config commands for scheduler
aaa-authentication	Password for AAA authentication(of logged in user)
password	Specify the password of logged in user(for AAA authentication)
0	Password (clear text) of logged in user
s0	password (clear text) of logged in user
7	Encrypted password of logged in user
s1	Encrypted password (for AAA authentication)
s2	Password (clear text) of logged in user
username	logged in user name
s3	user name (for AAA authentication)
password	Specify the password of logged in user(for AAA authentication)
01	Password (clear text) of logged in user
s4	password (clear text) of logged in user
71	Encrypted password of logged in user
s5	Encrypted password (for AAA authentication)
s6	Password (clear text) of logged in user

Command Mode

- /exec/configure

scheduler enable

[no] scheduler enable

Syntax Description

no	(Optional) Negate a command or set its defaults
scheduler	Config commands for scheduler
enable	Command to enable/disable features

Command Mode

- /exec/configure

scheduler job name

[no] scheduler job name <s0>

Syntax Description

no	(Optional) Negate a command or set its defaults
scheduler	Config commands for scheduler
job	Define a job
name	Specify a name for the job
s0	Name of the job

Command Mode

- /exec/configure

scheduler logfile size

{ scheduler logfile size <i0> | no scheduler logfile size [<i0>] }

Syntax Description

no	Negate a command or set its defaults
scheduler	Config commands for scheduler
logfile	Scheduler log file configuration
size	Specify the log file size
<i>i0</i>	Size of the file in KB

Command Mode

- /exec/configure

scheduler schedule name

[no] scheduler schedule name <s0>

Syntax Description

no	(Optional) Negate a command or set its defaults
scheduler	Config commands for scheduler
schedule	Define a schedule
name	Specify a name for the schedule
s0	Name of the schedule

Command Mode

- /exec/configure

scheduler transport email

```
{ scheduler transport email { from <s0> | reply-to <s1> | smtp-server <host0> [ port <i1> ] } | no scheduler transport email { from | reply-to | smtp-server } }
```

Syntax Description

no	Negate a command or set its defaults
scheduler	Config commands for scheduler
transport	Configure transport related configuration
email	Configure email transport related configuration
from	Configure from email address
<i>s0</i>	Provide from email address, example: SJ-9500-1@xyz.com
reply-to	Configure replyto email address
<i>s1</i>	Provide reply-to email address, example: admin@xyz.com
smtp-server	Configure SMTP server address
<i>host0</i>	SMTP server(DNS name or IPv4 or IPv6 address)
port	(Optional) Configure SMTP server port (default:25)
<i>i1</i>	(Optional) SMTP server port

Command Mode

- /exec/configure

scp

scp [<recurse>] <from> [<hyphen>] <src-path>

Syntax Description

<i>scp</i>	Launch scp subsystem
<i>recurse</i>	(Optional) -r recurse
<i>from</i>	-f scp from
<i>hyphen</i>	(Optional) --
<i>src-path</i>	from URL

Command Mode

- /exec

scp

scp [<recurse>] [<directory>] [<verbose>] <to> [<hyphen>] <dst-path>

Syntax Description

<code>scp</code>	Launch scp subsystem
<code>recurse</code>	(Optional) -r recurse
<code>directory</code>	(Optional) -d directory
<code>verbose</code>	(Optional) -v verbose
<code>to</code>	-t scp to
<code>hyphen</code>	(Optional) --
<code>dst-path</code>	to URL

Command Mode

- /exec

scripting tcl init

scripting tcl init <uri0> | no scripting tcl init

Syntax Description

no	Negate a command or set its defaults
scripting	Configure scripting parameters
tcl	Specify scripting parameter for tcl
init	Specify init parameters
<i>uri0</i>	Tcl init script name

Command Mode

- /exec

scripting tcl recursion-limit

scripting tcl recursion-limit <limit> | no scripting tcl recursion-limit

Syntax Description

no	Negate a command or set its defaults
scripting	Configure scripting parameters
tcl	Specify scripting parameter for tcl
recursion-limit	Specify recursion-limit
<i>limit</i>	Specify limit

Command Mode

- /exec

search

search <failure_desc>

Syntax Description

search	Search for information
<i>failure_desc</i>	Brief problem description

Command Mode

- /exec

section

| section <pattern>

Syntax Description

	Pipe command output to filter
section	show lines that include the pattern as well as the subsequent lines that are more indented than matching line
<i>pattern</i>	the pattern (regular expression) to match

Command Mode

- /output

secure-handoff

{ [no] secure-handoff }

Syntax Description

no	(Optional) Negate a command or set its defaults
secure-handoff	Confirm dynamic-eid discovery by probing for remote host

Command Mode

- /exec/configure/lisp-dynamic-eid /exec/configure/vrf/lisp-dynamic-eid

security-policy

[no] security-policy <policy>

Syntax Description

security-policy	Configure Security policy
<i>policy</i>	Security Policy options

Command Mode

- /exec/configure/macsec-policy

sed

| sed [-n] + <expr>

Syntax Description

	Pipe command output to filter
sed	Stream Editor
-n	(Optional) suppress automatic printing of pattern space
<i>expr</i>	Edition command (script)

Command Mode

- /output

segment-routing mpls

[no] segment-routing mpls

Syntax Description

no	(Optional) Negate a command or set its defaults
segment-routing	segment-routing properties
mpls	MPLS configuration commands

Command Mode

- /exec/configure

send-community

[no | default] send-community [both | standard]

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
send-community	Send Community attribute to this neighbor
both	(Optional) Send Standard and Extended Community attributes
standard	(Optional) Send Standard Community attribute

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv6
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-l2vpn-evpn
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-mvpn
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv6-mvpn
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-link-state
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-label
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv6-label

send-community

[no | default] send-community [both | extended | standard]

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
send-community	Send Community attribute to this neighbor
both	(Optional) Send Standard and Extended Community attributes
extended	(Optional) Send Extended Community attribute
standard	(Optional) Send Standard Community attribute

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-mdt
/exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-l2vpn-vpls

send-community extended

[no | default] send-community extended

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
send-community	Send Community attribute to this neighbor
extended	Send Extended Community attribute

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-vpnv4
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-vpnv6
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-l2vpn-evpn
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-mvpn
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv6-mvpn
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-link-state
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-label
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv6-label


```
send-lifetime month_a month_b month_c month_d month_e month_f month_g month_h month_i month_j month_k month_l duration infinite month_a month_b
month_c month_d month_e month_f month_g month_h month_i month_j month_k month_l
```

send-lifetime month_a month_b month_c month_d month_e month_f month_g month_h month_i month_j month_k month_l duration infinite month_a month_b month_c month_d month_e month_f month_g month_h month_i month_j month_k month_l

```
{ { send-lifetime [ local ] <stime> { month_a | month_b | month_c | month_d | month_e | month_f | month_g
| month_h | month_i | month_j | month_k | month_l } <sdlay> <syyear> { duration <dsec> | infinite | <etime>
{ month_a | month_b | month_c | month_d | month_e | month_f | month_g | month_h | month_i | month_j |
month_k | month_l } <eday> <eyear> } } | { no send-lifetime [ [ local ] <stime> { month_a | month_b | month_c
| month_d | month_e | month_f | month_g | month_h | month_i | month_j | month_k | month_l } <sdlay> <syyear>
{ duration <dsec> | infinite | <etime> { month_a | month_b | month_c | month_d | month_e | month_f | month_g
| month_h | month_i | month_j | month_k | month_l } <eday> <eyear> } ] } }
```

Syntax Description

no	Negate a command or set its defaults
send-lifetime	Set send lifetime of key
local	(Optional) Specify time in local timezone
<i>stime</i>	HH:MM:SS Time to start <0-23>:<0-59>:<0-59>
<i>etime</i>	HH:MM:SS Time to end <0-23>:<0-59>:<0-59>
month_a	
month_b	
month_c	
month_d	
month_e	
month_f	
month_g	
month_h	
month_i	
month_j	
month_k	
month_l	
<i>sdlay</i>	Day of the month to start

send-lifetime month_a month_b month_c month_d month_e month_f month_g month_h month_i month_j month_k month_l duration infinite month_a month_b month_c month_d month_e month_f month_g month_h month_i month_j month_k month_l

<i>eday</i>	Day of the month to end
<i>syear</i>	Year to start
<i>eyear</i>	Year to end
duration	Set key lifetime duration
<i>dsec</i>	Duration in seconds
infinite	Never Expires

Command Mode

- /exec/configure/keychain-key

```
send-lifetime month_a month_b month_c month_d month_e month_f month_g month_h month_i month_j month_k month_l duration infinite month_a month_b
month_c month_d month_e month_f month_g month_h month_i month_j month_k month_l
```

send-lifetime month_a month_b month_c month_d month_e month_f month_g month_h month_i month_j month_k month_l duration infinite month_a month_b month_c month_d month_e month_f month_g month_h month_i month_j month_k month_l

```
{ { send-lifetime [ local ] <stime> { month_a | month_b | month_c | month_d | month_e | month_f | month_g
| month_h | month_i | month_j | month_k | month_l } <sday> <syyear> { duration <dsec> | infinite | <etime>
{ month_a | month_b | month_c | month_d | month_e | month_f | month_g | month_h | month_i | month_j |
month_k | month_l } <eday> <eyear> } } | { no send-lifetime [ [ local ] <stime> { month_a | month_b | month_c
| month_d | month_e | month_f | month_g | month_h | month_i | month_j | month_k | month_l } <sday> <syyear>
{ duration <dsec> | infinite | <etime> { month_a | month_b | month_c | month_d | month_e | month_f | month_g
| month_h | month_i | month_j | month_k | month_l } <eday> <eyear> } ] } }
```

Syntax Description

no	Negate a command or set its defaults
send-lifetime	Set send lifetime of macsec key
local	(Optional) Specify time in local timezone
<i>stime</i>	HH:MM:SS Time to start <0-23>:<0-59>:<0-59>
<i>etime</i>	HH:MM:SS Time to end <0-23>:<0-59>:<0-59>
month_a	
month_b	
month_c	
month_d	
month_e	
month_f	
month_g	
month_h	
month_i	
month_j	
month_k	
month_l	
<i>sday</i>	Day of the month to start

send-lifetime month_a month_b month_c month_d month_e month_f month_g month_h month_i month_j month_k month_l duration infinite month_a month_b month_c month_d month_e month_f month_g month_h month_i month_j month_k month_l

<i>eday</i>	Day of the month to end
<i>syear</i>	Year to start
<i>eyear</i>	Year to end
duration	Set key lifetime duration
<i>dsec</i>	Duration in seconds
infinite	Never Expires

Command Mode

- /exec/configure/macseckeychain-key

send

send <line>

Syntax Description

send	Send message to open sessions
<i>line</i>	Send message (a line) to all open sessions

Command Mode

- /exec

send session

send session <s0> <line>

Syntax Description

send	Send message to open sessions
session	Send message to specific session
<i>s0</i>	Specify pts/tty device type
<i>line</i>	Enter a one line message

Command Mode

- /exec

sensor-group

[no] sensor-group <grp-id>

Syntax Description

no	(Optional) Negate a command or set its defaults
sensor-group	Create a sensor group
<i>grp-id</i>	Identifier

Command Mode

- /exec/configure/telemetry

serial

serial <chas-ser> | no serial

Syntax Description

no	Negate the command
serial	Chassis serial number
<i>chas-ser</i>	Serial number

Command Mode

- /exec/configure/fex

server

[no] server <host0>

Syntax Description

no	(Optional) Negate a command or set its defaults
server	LDAP server name
<i>host0</i>	LDAP server name

Command Mode

- /exec/configure/ldap

server

[no] server { <hostname> }

Syntax Description

no	(Optional) Negate a command or set its defaults
server	TACACS+ server name or IP address
<i>hostname</i>	IPV4/IPV6 address or DNS name

Command Mode

- /exec/configure/tacacs+

server

[no] server <hostipname>

Syntax Description

no	(Optional) Negate a command or set its defaults
server	RADIUS server name or IP address
<i>hostipname</i>	IPV4/IPV6 address or DNS name

Command Mode

- /exec/configure/radius

server protocol ldap

```
[no] server protocol ldap { ipv6 <ipv6addr> | ip <ipaddr> | host <hostname> } [ port <portnum> ] [ vrf { <vrf-name> | <vrf-known-name> } ] [ enable-ssl ]
```

Syntax Description

no	(Optional) Negate a command or set its defaults
server	Configure database server
protocol	Configure database protocol
ldap	Use LDAP
ipv6	IPv6 address of server
ip	IP address of server
<i>ipaddr</i>	Enter IP address of server
host	Hostname of server
<i>hostname</i>	Enter hostname of server
port	(Optional) Port
<i>portnum</i>	(Optional) Enter port number
vrf	(Optional) vrf context
<i>vrf-name</i>	(Optional) VRF name
<i>vrf-known-name</i>	(Optional) Known VRF name
enable-ssl	(Optional) LDAP server enable ssl

Command Mode

- /exec/configure/fabric-db

server protocol radius group

[no] server protocol radius group <groupname>

Syntax Description

no	(Optional) Negate a command or set its defaults
server	Configure database server
protocol	Configure database protocol
radius	Use RADIUS
group	AAA group
<i>groupname</i>	Enter AAA group name of servers

Command Mode

- /exec/configure/fabric-db

server protocol xmpp ip

```
[no] server protocol xmpp { ip <ipaddr> | host <hostname> } [ port <portnum> ] [ vrf { <vrf-name> | <vrf-known-name> } ]
```

Syntax Description

no	(Optional) Negate a command or set its defaults
server	Configure database server
protocol	Configure database protocol
xmpp	Use XMPP
ip	IP address of server
<i>ipaddr</i>	Enter IP address of server
host	Hostname of server
<i>hostname</i>	Enter hostname of server
port	(Optional) Port
<i>portnum</i>	(Optional) Enter port number
vrf	(Optional) vrf context
<i>vrf-name</i>	(Optional) VRF name
<i>vrf-known-name</i>	(Optional) Known VRF name

Command Mode

- /exec/configure/fabric-db

service-policy

[no] service-policy [type qos] <inp-or-out> <pmap-name-qos> [no-stats]

Syntax Description

no	(Optional) Negate a command or set its defaults
service-policy	Configure service policy for an interface
type	(Optional) Specify the type of this policy
qos	(Optional) Qos policy
<i>inp-or-out</i>	
<i>pmap-name-qos</i>	Policy-map name __nil__ You must create a policy-map before using this command
no-stats	(Optional) Disable statistics for this policy

Command Mode

- /exec/configure/if-set-qos /exec/configure/if-remote-ethernet /exec/configure/if-remote-ethernet-switch

service-policy

[no] service-policy [type qos] <inp-or-out> <pmap-name-qos> [no-stats]

Syntax Description

no	(Optional) Negate a command or set its defaults
service-policy	Configure service policy for an interface
type	(Optional) Specify the type of this policy
qos	(Optional) Qos policy
<i>inp-or-out</i>	
<i>pmap-name-qos</i>	Policy-map name __nil__ You must create a policy-map before using this command
no-stats	(Optional) Disable statistics for this policy

Command Mode

- /exec/configure/vlan

service-policy

[no] service-policy [type qos] <pmap-name-qos>

Syntax Description

no	(Optional) Negate a command or set its defaults
service-policy	Configure hierarchial policy-map
type	(Optional) Specify the type of this policy
qos	(Optional) Qos policy
<i>pmap-name-qos</i>	Policy-map name

Command Mode

- /exec/configure/policy-map/class

service-policy input

[no] service-policy input <policy_name>

Syntax Description

no	(Optional) Negate a command or set its defaults
service-policy	Attach a policy to control-plane interface
input	Input the policy name
<i>policy_name</i>	Name of the policy

Command Mode

- /exec/configure/ctrl-plane

service-policy type network-qos

[no] service-policy type network-qos <pmap-name-nq>

Syntax Description

no	(Optional) Negate a command or set its defaults
service-policy	Policy Map
type	Specify the type of this policy-map
network-qos	Network QoS policy
<i>pmap-name-nq</i>	Policy-map name

Command Mode

- /exec/configure/system/qos

service-policy type psp

```
[no] service-policy type psp <inp-or-out> { <pmap-name-plc> | { handle <ppf_id> } }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
service-policy	Configure service policy for an interface
type	Specify the type of this policy
psp	PSP policy
<i>inp-or-out</i>	
<i>pmap-name-plc</i>	Policy-map name __nil__ You must create a policy-map before using this command
handle	Handle
<i>ppf_id</i>	PPF ID

Command Mode

- /exec/configure/if-set-qos

service-policy type qos

[no] service-policy type qos <inp-only> <pmap-name-qos>

Syntax Description

no	(Optional) Negate a command or set its defaults
service-policy	Policy Map
type	Specify the type of this policy-map
qos	System-level QoS policy
<i>inp-only</i>	
<i>pmap-name-qos</i>	Policy-map name __nil__ You must create a policy-map before using this command

Command Mode

- /exec/configure/system/qos

service-policy type queuing

[no] service-policy type queuing <inp-or-out> <pmap-name-que> [no-stats]

Syntax Description

no	(Optional) Negate a command or set its defaults
service-policy	Configure service policy for an interface
type	Specify the type of this policy
queuing	Queuing policy
<i>inp-or-out</i>	
<i>pmap-name-que</i>	Policy-map name
no-stats	(Optional) Disable statistics for this policy

Command Mode

- /exec/configure/if-set-que

service-policy type queuing

[no] service-policy type queuing <pmap-name-que>

Syntax Description

no	(Optional) Negate a command or set its defaults
service-policy	Set the inner policy-map
type	Specify the type of this policy
queuing	Queuing policy
<i>pmap-name-que</i>	Policy-map name __nil__ You must create a policy-map before using this command

Command Mode

- /exec/configure/policy-map/type/queuing/class

service-policy type queuing

[no] service-policy type queuing <inp-or-out> <pmap-name-que>

Syntax Description

no	(Optional) Negate a command or set its defaults
service-policy	Policy Map
type	Specify the type of this policy-map
queuing	DCE Queuing policy
<i>inp-or-out</i>	
<i>pmap-name-que</i>	Policy-map name

Command Mode

- /exec/configure/system/qos

service dhcp

[no] service dhcp

Syntax Description

no	(Optional) Negate a command or set its defaults
service	Modify use of network based services
dhcp	Enable DHCP relay agent

Command Mode

- /exec/configure

service set

[no] service set <onep-service-set>

Syntax Description

no	(Optional) Negate a command or set its defaults
service	ONEP service set
set	ONEP service set
<i>onep-service-set</i>	service name

Command Mode

- /exec/configure/onep

service tag

{ service tag <tag-id> } | { no service tag }

Syntax Description

no	Negate a command or set its defaults
service	Configure ngoam service
tag	Configure ngoam service tag
<i>tag-id</i>	Configure ngoam service tag id

Command Mode

- /exec/configure/configngoamprofile

service unsupported-transceiver

[no] service unsupported-transceiver

Syntax Description

no	(Optional) Negate a command or set its defaults
service	Serviceability Commands
unsupported-transceiver	Configure support for transceivers not supported by Cisco

Command Mode

- /exec/configure

session-limit

[no] session-limit <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
session-limit	Set the max no of concurrent vsh sessions
<i>i0</i>	Max concurrent vsh sessions

Command Mode

- /exec/configure/line

session domain-lookup

session domain-lookup | no session domain-lookup

Syntax Description

session	Configure session preferences
no	Negate a command or set its defaults
domain-lookup	Session

Command Mode

- /exec

session key-required

[no] session key-required

Syntax Description

no	Negate a command or set its defaults
session	One Platform session
key-required	Disable session key

Command Mode

- /exec/configure/onep

session max

session max <onep-maxsess>

Syntax Description

session	One Platform session
max	Maximum number of sessions
<i>onep-maxsess</i>	Number of sessions

Command Mode

- /exec/configure/onep

session max

[no] session max [<onep-maxsess>]

Syntax Description

no	Negate a command or set its defaults
session	One Platform session
max	Maximum number of sessions
<i>onep-maxsess</i>	(Optional) Number of sessions

Command Mode

- /exec/configure/onep

session protection

[no] session protection [vrf { <vrf-name> | <vrf-known-name> }] [for <pfx-list>] [duration { <secs> | infinite }]

Syntax Description

no	(Optional) Negate a command or set its defaults
session	Configure session parameters
protection	Configure session protection parameters
vrf	(Optional) VRF Routing/Forwarding instance information
<i>vrf-name</i>	(Optional) VPN Routing/Forwarding instance name
<i>vrf-known-name</i>	(Optional) Known VRF name
for	(Optional) Prefix list to specify LDP peers
<i>pfx-list</i>	(Optional) Prefix list for LDP peers
duration	(Optional) Period to sustain session protection after loss of link discovery
<i>secs</i>	(Optional) Holdup time in seconds
infinite	(Optional) Protect session forever after loss of link discovery

Command Mode

- /exec/configure/ldp

set-attached-bit

[no] set-attached-bit

Syntax Description

no	(Optional) Negate a command or set its defaults
set-attached-bit	Configure L1 L2 router to set/unset attached bit in its L1 LSP

Command Mode

- /exec/configure/router-isis/router-isis-vrf-common /exec/configure/router-isis/router-isis-af-ipv6

set-overload-bit

```
[no] set-overload-bit | [ no ] set-overload-bit { always | on-startup { <secs> | [ <seconds> ] wait-for bgp <as>
} } [ suppress { [ interlevel ] [ external ] } ]
```

Syntax Description

no	Negate a command or set its defaults
set-overload-bit	Signal other routers not to use us for transit
always	Set the overload bit unconditionally
on-startup	Set the overload bit on IS-IS startup
<i>secs</i>	Clear the overload bit after an elapsed time in seconds
wait-for	Clear the overload bit when notified by a specific protocol
bgp	Border Gateway Protocol (BGP)
<i>seconds</i>	(Optional) Clear the overload bit after an elapsed time in seconds
<i>as</i>	Autonomous system number
suppress	(Optional) Suppress route redistribution if overload bit set
interlevel	(Optional) Suppress interlevel route redistribution
external	(Optional) Suppress external route redistribution

Command Mode

- /exec/configure/router-isis/router-isis-vrf-common

set-overload-bit

{ no set-overload-bit | [no] set-overload-bit { always | on-startup { <secs> | <seconds> } } }

Syntax Description

no	Negate a command or set its defaults
set-overload-bit	Signal other routers not to use us for transit
always	Set the overload bit unconditionally
on-startup	Set the overload bit on IS-IS startup
<i>secs</i>	Clear the overload bit after an elapsed time in seconds
<i>seconds</i>	Clear the overload bit after an elapsed time in seconds

Command Mode

- /exec/configure/l2mp-isis/l2mp-isis-vrf-common

set

```
[no] set { { cos <cos-val> } | { eth-src-mac-addr <src-mac-addr> } | { eth-dest-mac-addr <dest-mac-addr> }
| { vlan <vlan-number> } | { ip-tos <ip-tos-value> <ip-tos-mask> } | { out-interface <iface-list> } | { dscp [
tunnel ] { <dscp-val> | <dscp-enum> } } | { precedence [ prec-tunnel ] { <prec-val> | <prec-enum> } } | {
discard-class <dis-class-val> } | { qos-group <qos-grp-val> } | { { { cos1 cos2 } | { dscp1 dscp2 } | { prec1
prec2 } | { dis-class1 dis-class2 } | { dscp3 mpls-exp-imposition } | { mpls-exp-topmost dscp4 } | {
mpls-exp-topmost1 mpls-exp-topmost2 } } } | { mpls experimental { { topmost <exp-value> } | { imposition
<exp-value-imp> } } } | action-strip-vlan | action-drop-pkt | divert-action | copy-action | action-decrement-ttl
| forward-normal | goto-pmap <pmap-table-handle> }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set attribute
cos	IEEE 802.1Q class of service
cos1	IEEE 802.1Q class of service
cos2	IEEE 802.1Q class of service
<i>cos-val</i>	802.1Q Class of Service value
eth-dest-mac-addr	Action on Layer 2 destination MAC address
eth-src-mac-addr	Action on Layer 2 source MAC address
<i>src-mac-addr</i>	Layer 2 MAC Address
<i>dest-mac-addr</i>	Layer 2 MAC Address
vlan	Set the VLAN ID
<i>vlan-number</i>	VLAN NUMBER
ip-tos	Set the IPv4 TOS
<i>ip-tos-value</i>	IPv4 TOS Value
<i>ip-tos-mask</i>	IPV4 TOS Mask
out-interface	Output to a Specified Interface
<i>iface-list</i>	Physical Interface Name and Number or List
action-strip-vlan	Perform the action STRIP-VLAN-ID
action-drop-pkt	Perform the action Drop the Packet
divert-action	Divert the packets to Controller
copy-action	Copy the packets to Controller

action-decrement-ttl	Decrement TTL on the Packet
forward-normal	Forward the packets normally
goto-pmap	Goto pmap/table
<i>pmap-table-handle</i>	Pmap-table handle
dscp	DSCP in IP(v4) and IPv6 packets
dscp1	DSCP in IP(v4) and IPv6 packets
dscp2	DSCP in IP(v4) and IPv6 packets
tunnel	(Optional) Set DSCP in tunnel encapsulation
<i>dscp-val</i>	DSCP value
<i>dscp-enum</i>	
precedence	Precedence in IP(v4) and IPv6 packets
prec1	Precedence in IP(v4) and IPv6 packets
prec2	Precedence in IP(v4) and IPv6 packets
prec-tunnel	(Optional) Set Precedence in tunnel encapsulation
<i>prec-val</i>	IP Precedence value
<i>prec-enum</i>	
discard-class	Discard class
dis-class1	Discard class
dis-class2	Discard class
<i>dis-class-val</i>	Discard class value
qos-group	Qos-group
<i>qos-grp-val</i>	Qos-group value
mpls	Set MPLS label
experimental	Set MPLS experimental label
topmost	Set MPLS topmost label
imposition	Push the label and set new one on top
<i>exp-value</i>	MPLS value
<i>exp-value-imp</i>	MPLS value
dscp3	DSCP in IP(v4) and IPv6 packets

mpls-exp-imposition	mpls-exp-imposition
mpls-exp-topmost	mpls-exp-topmost
dscp4	DSCP in IP(v4) and IPv6 packets
mpls-exp-topmost1	mpls-exp-topmost
mpls-exp-topmost2	mpls-exp-topmost

Command Mode

- /exec/configure/policy-map/type/plc/class

set

```
[no] set { { dlb-disable } | { precedence [ prec-tunnel ] { <prec-val> | <prec-enum> } } | { dscp [ tunnel ] { <dscp-val> | <dscp-enum> } } | { cos <cos-val> } | { qos-group <qos-grp-val> } }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set attribute
dlb-disable	Disable Dynamic Load Balancing
precedence	Precedence in IP(v4) and IPv6 packets
prec-tunnel	(Optional) Set Precedence in tunnel encapsulation
<i>prec-val</i>	IP Precedence value
<i>prec-enum</i>	
dscp	DSCP in IP(v4) and IPv6 packets
tunnel	(Optional) Set DSCP in tunnel encapsulation
<i>dscp-val</i>	DSCP value
<i>dscp-enum</i>	
cos	IEEE 802.1Q Class of Service
<i>cos-val</i>	802.1Q Class of Service value
qos-group	Qos-group
<i>qos-grp-val</i>	Qos-group value

Command Mode

- /exec/configure/policy-map/class

set

```
[no] set { { discard-class <dis-class-val> } | { { { cos1 cos2 } | { dscp1 dscp2 } | { prec1 prec2 } | { dis-class1
dis-class2 } | { dscp3 mpls-exp-imposition } | { mpls-exp-topmost dscp4 } | { mpls-exp-topmost1
mpls-exp-topmost2 } } table <table-map-name> } | { mpls experimental { { topmost <exp-value> } | {
imposition <exp-value-imp> } } } }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set attribute
cos1	IEEE 802.1Q Class of Service
cos2	IEEE 802.1Q Class of Service
dscp1	DSCP in IP(v4) and IPv6 packets
dscp2	DSCP in IP(v4) and IPv6 packets
prec1	Precedence in IP(v4) and IPv6 packets
prec2	Precedence in IP(v4) and IPv6 packets
discard-class	Discard class
dis-class1	Discard class
dis-class2	Discard class
<i>dis-class-val</i>	Discard class value
table	Table defining mapping from input to output
<i>table-map-name</i>	Table-map name
mpls	Set MPLS label
experimental	Set MPLS experimental label
topmost	Set MPLS topmost label
imposition	Push the label and set new one on top
<i>exp-value</i>	MPLS value
<i>exp-value-imp</i>	MPLS value
dscp3	DSCP in IP(v4) and IPv6 packets
mpls-exp-imposition	mpls-exp-imposition
mpls-exp-topmost	mpls-exp-topmost

dscp4	DSCP in IP(v4) and IPv6 packets
mpls-exp-topmost1	mpls-exp-topmost
mpls-exp-topmost2	mpls-exp-topmost

Command Mode

- /exec/configure/policy-map/class

set

set <paramname> <paramval>

Syntax Description

set	Set the parameter value
<i>paramname</i>	Enter the name of the parameter
<i>paramval</i>	Enter the parameter value

Command Mode

- /exec/configure/param-inst

set

[no] set { load-sharing per-packet }

Syntax Description

set	Set attribute
load-sharing	Load sharing across ECMP by set out-of-order bit
per-packet	per MiM packet
no	(Optional) Negate a command or set its defaults

Command Mode

- /exec/configure/policy-map/class

set

```
[no] set { { cos [ inner ] <cos-val> } | { dscp [ tunnel ] { <dscp-val> | <opt_set_dscp> } } | { precedence [
tunnel1 ] { <prec-val> | <opt_set_prec> } } }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set attribute
cos	IEEE 802.1Q class of service
inner	(Optional) Set inner 802.1Q class of service in QinQ environment
<i>cos-val</i>	802.1Q Class of Service value
dscp	DSCP in IP(v4) and IPv6 packets
tunnel	(Optional) Set DSCP in tunnel encapsulation
<i>dscp-val</i>	DSCP value
<i>opt_set_dscp</i>	
precedence	Precedence in IP(v4) and IPv6 packets
tunnel1	(Optional) Set DSCP in tunnel encapsulation
<i>prec-val</i>	IP Precedence value
<i>opt_set_prec</i>	

Command Mode

- /exec/configure/pmap/class

set as-path prepend last-as tag

```
{ set as-path { prepend { last-as <lastas> | <as> + } | tag } } | { no set as-path { prepend [ last-as [ <lastas> ] | <as> + ] | tag } }
```

Syntax Description

no	Negate a command or set its defaults
set	Set values in destination routing protocol
as-path	Prepend string for a BGP AS-path attribute
prepend	Prepend to the AS-Path
last-as	Prepend last AS to the as-path
<i>lastas</i>	number of last-AS prepends
<i>as</i>	AS number
tag	Set the tag as an AS-path attribute
<i>as</i>	(Optional)

Command Mode

- /exec/configure/route-map

set comm-list delete

```
{ { set comm-list <name> delete } | { no set comm-list } }
```

Syntax Description

no	Negate a command or set its defaults
set	Set values in destination routing protocol
comm-list	set BGP community list (for deletion)
<i>name</i>	Community list name
delete	Delete matching communities

Command Mode

- /exec/configure/route-map

set community none additive internet local-AS

```
{ set community { none | { additive | internet | local-AS | no-advertise | no-export | <hex_num> | <number>
| <community> } + } } | { no set community [ { none | { additive | internet | local-AS | no-advertise | no-export
| <hex_num> | <number> | <community> } + } ] }
```

Syntax Description

no	Negate a command or set its defaults
set	Set values in destination routing protocol
community	Set BGP community attribute
additive	Add to existing community
internet	Internet (well-known community)
local-AS	Do not send outside local AS (well-known community)
no-advertise	Do not advertise to any peer (well-known community)
no-export	Do not export to next AS (well-known community)
none	No community attribute
<i>number</i>	Community number
<i>hex_num</i>	Community number in hex
<i>community</i>	Community number aa:nn format
<i>additive</i>	(Optional) internet

Command Mode

- /exec/configure/route-map

set cos

[no] set cos <cos-val>

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set attribute
cos	IEEE 802.1Q Class of Service
<i>cos-val</i>	802.1Q Class of Service value

Command Mode

- /exec/configure/policy-map/type/queuing/class

set cos

[no] set cos <cos-val>

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set attribute
cos	IEEE 802.1Q class of service
<i>cos-val</i>	802.1Q Class of Service value

Command Mode

- /exec/configure/policy-map/type/uf/class

set dampening

```
{ set dampening <halflife> <reuse> <supress> <duration> } | { no set dampening [ <halflife> <reuse> <supress> <duration> ] }
```

Syntax Description

no	Negate a command or set its defaults
set	Set values in destination routing protocol
dampening	Set BGP route flap dampening parameters
<i>halflife</i>	half-life time for the penalty
<i>reuse</i>	penalty to start reusing a route
<i>supress</i>	penalty to start suppressing a route
<i>duration</i>	Maximum duration to suppress a stable route

Command Mode

- /exec/configure/route-map

set distance

{ set distance <external-dist> [<internal-dist> [<local-dist>]] } | { no set distance }

Syntax Description

no	Negate a command or set its defaults
set	Set values in destination routing protocol
distance	Set the Administrative distance of route
<i>external-dist</i>	Administrative distance for IGP or EBGp routes
<i>internal-dist</i>	(Optional) Administrative distance for internal routes
<i>local-dist</i>	(Optional) Administrative distance for local routes

Command Mode

- /exec/configure/route-map

set extcomm-list delete

```
{ { set extcomm-list <name> delete } | { no set extcomm-list [ <name> delete ] } }
```

Syntax Description

no	Negate a command or set its defaults
set	Set values in destination routing protocol
extcomm-list	set BGP extcommunity list (for deletion)
<i>name</i>	Extended Community list name
delete	Delete matching extcommunities

Command Mode

- /exec/configure/route-map

set extcommunity 4byteas-generic transitive additive

```
{ set extcommunity 4byteas-generic { { transitive <ext-comm-gen-trans> | non-transitive
<ext-comm-gen-nontrans> } + [ additive ] | additive | none } } | { no set extcommunity 4byteas-generic [ {
transitive <ext-comm-gen-trans> | non-transitive <ext-comm-gen-nontrans> } + [ additive ] | additive | none
] }
```

Syntax Description

no	Negate a command or set its defaults
set	Set values in destination routing protocol
extcommunity	Set BGP extcommunity attribute
4byteas-generic	Generic extended community
additive	(Optional) Add to existing generic extcommunity
none	No extcommunity generic attribute
transitive	Transitive extended community
non-transitive	Non-Transitive extended community
<i>ext-comm-gen-trans</i>	Extcommunity number aa4:nn format
<i>ext-comm-gen-nontrans</i>	Extcommunity number aa4:nn format
<i>ext-comm-gen-trans</i>	(Optional) <ext-comm-gen-nontrans>

Command Mode

- /exec/configure/route-map

set extcommunity additive

{ set extcommunity { additive | none } } | { no set extcommunity [additive | none] }

Syntax Description

no	Negate a command or set its defaults
set	Set values in destination routing protocol
extcommunity	Set BGP extcommunity attribute
additive	Add to existing generic extcommunity
none	No extcommunity attribute

Command Mode

- /exec/configure/route-map

set extcommunity cost

```
{ set extcommunity cost { [ igp | pre-bestpath ] <comm-id> <cost-value> } + } | { no set extcommunity cost
[ [ igp | pre-bestpath ] <comm-id> <cost-value> ] + }
```

Syntax Description

no	Negate a command or set its defaults
set	Set values in destination routing protocol
extcommunity	Set BGP extcommunity attribute
cost	Cost
igp	(Optional) Compare following IGP cost comparison
pre-bestpath	(Optional) Compare before all other steps in bestpath calculation
<i>comm-id</i>	Community ID
<i>cost-value</i>	Cost Community value
<i>comm-id</i>	(Optional) <cost-value>

Command Mode

- /exec/configure/route-map

set extcommunity rt additive

```
{ set extcommunity rt { { <ext-comm-rt-aa2nn4> | <ext-comm-rt-aa4nn2> } + [ additive ] | additive } } | {
no set extcommunity rt [ { { <ext-comm-rt-aa2nn4> | <ext-comm-rt-aa4nn2> } + [ additive ] | additive ] }
```

Syntax Description

no	Negate a command or set its defaults
set	Set values in destination routing protocol
extcommunity	Set BGP extcommunity attribute
rt	Route-Target
additive	(Optional) Add to existing rt extcommunity
<i>ext-comm-rt-aa2nn4</i>	Extcommunity number
<i>ext-comm-rt-aa4nn2</i>	Extcommunity number
<i>ext-comm-rt-aa2nn4</i>	(Optional) <ext-comm-rt-aa4nn2>

Command Mode

- /exec/configure/route-map

set extension-key

[no] set extension-key <key>

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set the extension key manually
extension-key	Set the extension key manually
<i>key</i>	Extension key

Command Mode

- /exec/configure/vmt-conn

set forwarding-address

[no] set forwarding-address

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set values in destination routing protocol
forwarding-address	Set the forwarding address

Command Mode

- /exec/configure/route-map

set inner ipv4

```
set { inner | outer } ipv4 [ { l3-type <l3_type> | pyld-len <pyld_len> | v6-vld <v6_vld> | version <ver> |
header-len <hlen> | dscp <dscp_val> | ecn <ecn_val> | packet-len <pkt_len> | more-frags <mf> | fragment-off
<fragoff> | ttl <ttl_val> | next-protocol <nproto> | checksum <csum> | src_ip <sip> | dst_ip <dip> } ] +
```

Syntax Description

set	Setup Trigger
inner	Mask and Match By Inner Packet Fields
outer	Mask and Match By Outer Packet Fields
ipv4	IPv4 Fields
l3-type	(Optional) L3 Packet Type
<i>l3_type</i>	(Optional) L3 Packet Type
pyld-len	(Optional) Payload Length
<i>pyld_len</i>	(Optional) Payload Length
v6-vld	(Optional) IPv6 Valid Information
<i>v6_vld</i>	(Optional) IPv6 Valid Information
version	(Optional) Version
<i>ver</i>	(Optional) Version
header-len	(Optional) Header Length
<i>hlen</i>	(Optional) Header Length
dscp	(Optional) Diff. Serv. Code Point
<i>dscp_val</i>	(Optional) Diff. Serv. Code Point
ecn	(Optional) Explicit Congestion Ntn
<i>ecn_val</i>	(Optional) Explicit Congestion Ntn
packet-len	(Optional) Packet Total Length
<i>pkt_len</i>	(Optional) Packet Total Length
more-frags	(Optional) More Fragments Available
<i>mf</i>	(Optional) More Fragments Available
fragment-off	(Optional) Fragments Offset
<i>fragoff</i>	(Optional) Fragments Offset

<code>ttl</code>	(Optional) Time to Live
<code>ttl_val</code>	(Optional) Time to Live
<code>next-protocol</code>	(Optional) Next(L4) Protocol
<code>nproto</code>	(Optional) Next(L4) Protocol
<code>checksum</code>	(Optional) Checksum
<code>csum</code>	(Optional) Checksum
<code>src_ip</code>	(Optional) Source IP Address
<code>sip</code>	(Optional) Source IP Address
<code>dst_ip</code>	(Optional) Destination IP Address
<code>dip</code>	(Optional) Destination IP Address

Command Mode

- /exec/elanms/sel6

set inner ipv4

```
set inner ipv4 [ { l3-type <l3_type> | pyld-len <pyld_len> | v6-vld <v6_vld> | version <ver> | header-len <hlen> | dscp <dscp_val> | ecn <ecn_val> | packet-len <pkt_len> | more-frags <mf> | fragment-off <fragoff> | ttl <ttl_val> | next-protocol <nproto> | checksum <csum> | src_ip <sip> | dst_ip <dip> } ] +
```

Syntax Description

set	Setup Trigger
inner	Mask and Match By Inner Packet Fields
ipv4	IPv4 Fields
l3-type	(Optional) L3 Packet Type
<i>l3_type</i>	(Optional) L3 Packet Type
pyld-len	(Optional) Payload Length
<i>pyld_len</i>	(Optional) Payload Length
v6-vld	(Optional) IPv6 Valid Information
<i>v6_vld</i>	(Optional) IPv6 Valid Information
version	(Optional) Version
<i>ver</i>	(Optional) Version
header-len	(Optional) Header Length
<i>hlen</i>	(Optional) Header Length
dscp	(Optional) Diff. Serv. Code Point
<i>dscp_val</i>	(Optional) Diff. Serv. Code Point
ecn	(Optional) Explicit Congestion Ntn
<i>ecn_val</i>	(Optional) Explicit Congestion Ntn
packet-len	(Optional) Packet Total Length
<i>pkt_len</i>	(Optional) Packet Total Length
more-frags	(Optional) More Fragments Available
<i>mf</i>	(Optional) More Fragments Available
fragment-off	(Optional) Fragments Offset
<i>fragoff</i>	(Optional) Fragments Offset
ttl	(Optional) Time to Live

<i>ttl_val</i>	(Optional) Time to Live
next-protocol	(Optional) Next(L4) Protocol
<i>nproto</i>	(Optional) Next(L4) Protocol
checksum	(Optional) Checksum
<i>csum</i>	(Optional) Checksum
src_ip	(Optional) Source IP Address
<i>sip</i>	(Optional) Source IP Address
dst_ip	(Optional) Destination IP Address
<i>dip</i>	(Optional) Destination IP Address

Command Mode

- /exec/elamns/sel4

set inner l2

```
set { inner | outer } l2 [ { snap_vld <snap_vld> | cntag_vld <cntag_vld> | qtag_vld <qtag_vld> | vlan <vlan_id>
| cos <cos_val> | cfi <cfi_vld> | vntag_vld <vntag_vld> | vntag_svif <vntag_svif> | vntag_dvif <vntag_dvif>
| vntag_looped <vntag_loop> | vntag_pointer <vntag_p> | src_mac <smac> | dst_mac <dmac> } ] +
```

Syntax Description

set	Setup Trigger
inner	Mask and Match By Inner Packet Fields
outer	Mask and Match By Outer Packet Fields
l2	All Layer 2 Fields
snap_vld	(Optional) SNAP Header Information Valid
<i>snap_vld</i>	(Optional) SNAP Header Information Valid
cntag_vld	(Optional) CNTag Information Valid
<i>cntag_vld</i>	(Optional) CNTag Information Valid
qtag_vld	(Optional) VLAN Tag Information Valid
<i>qtag_vld</i>	(Optional) VLAN Tag Information Valid
vlan	(Optional) VLAN Id (Present only in case of FEX)
<i>vlan_id</i>	(Optional) VLAN Id
cos	(Optional) Class of Service
<i>cos_val</i>	(Optional) Class of Service Type
cfi	(Optional) CFI Setting
<i>cfi_vld</i>	(Optional) CFI Setting Valid
vntag_vld	(Optional) VNTAG Information Valid
<i>vntag_vld</i>	(Optional) VNTAG Information Valid
vntag_svif	(Optional) VNTAG Source vif
<i>vntag_svif</i>	(Optional) VNTAG Source vif
vntag_dvif	(Optional) VNTAG Destination vif
<i>vntag_dvif</i>	(Optional) VNTAG Destination vif
vntag_looped	(Optional) VNTAG Header Looped Valid
<i>vntag_loop</i>	(Optional) VNTAG Header Looped Valid

<i>vntag_pointer</i>	(Optional) VNTAG Header Pointer Valid
<i>vntag_p</i>	(Optional) VNTAG Header Pointer Valid
<i>src_mac</i>	(Optional) Source MAC Address
<i>smac</i>	(Optional) Source MAC Address Value
<i>dst_mac</i>	(Optional) Destination MAC Address
<i>dmac</i>	(Optional) Destination MAC Address Value

Command Mode

- /exec/elanms/se15

set inner l2

```
set inner l2 [ { snap_vld <snap_vld> | cntag_vld <cntag_vld> | qtag_vld <qtag_vld> | vlan <vlan_id> | cos
<cos_val> | cfi <cfi_vld> | vntag_vld <vntag_vld> | vntag_svif <vntag_svif> | vntag_dvif <vntag_dvif> |
vntag_looped <vntag_loop> | vntag_pointer <vntag_p> | src_mac <smac> | dst_mac <dmac> } ] +
```

Syntax Description

set	Setup Trigger
inner	Mask and Match By Inner Packet Fields
l2	All Layer 2 Fields
snap_vld	(Optional) SNAP Header Information Valid
<i>snap_vld</i>	(Optional) SNAP Header Information Valid
cntag_vld	(Optional) CNTag Information Valid
<i>cntag_vld</i>	(Optional) CNTag Information Valid
qtag_vld	(Optional) VLAN Tag Information Valid
<i>qtag_vld</i>	(Optional) VLAN Tag Information Valid
vlan	(Optional) VLAN Id (Present only in case of FEX)
<i>vlan_id</i>	(Optional) VLAN Id
cos	(Optional) Class of Service
<i>cos_val</i>	(Optional) Class of Service Type
cfi	(Optional) CFI Setting
<i>cfi_vld</i>	(Optional) CFI Setting Valid
vntag_vld	(Optional) VNTAG Information Valid
<i>vntag_vld</i>	(Optional) VNTAG Information Valid
vntag_svif	(Optional) VNTAG Source vif
<i>vntag_svif</i>	(Optional) VNTAG Source vif
vntag_dvif	(Optional) VNTAG Destination vif
<i>vntag_dvif</i>	(Optional) VNTAG Destination vif
vntag_looped	(Optional) VNTAG Header Looped Valid
<i>vntag_loop</i>	(Optional) VNTAG Header Looped Valid
vntag_pointer	(Optional) VNTAG Header Pointer Valid

<i>vntag_p</i>	(Optional) VNTAG Header Pointer Valid
<i>src_mac</i>	(Optional) Source MAC Address
<i>smac</i>	(Optional) Source MAC Address Value
<i>dst_mac</i>	(Optional) Destination MAC Address
<i>dmac</i>	(Optional) Destination MAC Address Value

Command Mode

- /exec/elamns/se14

set inner l2 hg2

```
set { inner | outer } l2 hg2 [ { hg2_vid <hg2_vlan> | hg2_ppd_type <hg2_ppd_type> | hg2_mirror <hg2_mirror>
| hg2_opcode <hg2_opcode> | hg2_dstpid <hg2_dpid> | hg2_dstmod <hg2_dmod> | hg2_srcpid <hg2_spid>
| hg2_srcmod <hg2_smod> | hg2_l3vld <hg2_l3_vld> | hg2_tc <hg2_tc> | hg2_dp <hg2_dp> | hg2_mcast
<hg2_mcast_vld> | hg2-vld <hg2_vld> | hg2-cos <hg2_cos> } ] +
```

Syntax Description

set	Setup Trigger
inner	Mask and Match By Inner Packet Fields
outer	Mask and Match By Outer Packet Fields
l2	All Layer 2 Fields
hg2	High Gig2 Fields
hg2_vid	(Optional) High Gig2 VLAN Tag
<i>hg2_vlan</i>	(Optional) High Gig2 VLAN Tag Information
hg2_ppd_type	(Optional) High Gig2 Packet Processing Descriptor
<i>hg2_ppd_type</i>	(Optional) High Gig2 Packet Processing Descriptor
hg2_mirror	(Optional) High Gig2 Packet Mirror Information
<i>hg2_mirror</i>	(Optional) High Gig2 Packet Mirror Information
hg2_opcode	(Optional) High Gig2 Packet Type
<i>hg2_opcode</i>	(Optional) High Gig2 Packet Type
hg2_dstpid	(Optional) High Gig2 Destination Port ID
<i>hg2_dpid</i>	(Optional) High Gig2 Destination Port ID
hg2_dstmod	(Optional) High Gig2 Destination Module ID
<i>hg2_dmod</i>	(Optional) High Gig2 Destination Module ID
hg2_srcpid	(Optional) High Gig2 Source Port ID
<i>hg2_spid</i>	(Optional) High Gig2 Source Port ID
hg2_srcmod	(Optional) High Gig2 Souce Module ID
<i>hg2_smod</i>	(Optional) High Gig2 Souce Module ID
hg2_l3vld	(Optional) High Gig2 Packet L3 Switched
<i>hg2_l3_vld</i>	(Optional) High Gig2 Packet L3 Switched

hg2_tc	(Optional) High Gig2 Packet Traffic Class
<i>hg2_tc</i>	(Optional) High Gig2 Packet Traffic Class
hg2_dp	(Optional) High Gig2 Drop Precedence
<i>hg2_dp</i>	(Optional) High Gig2 Drop Precedence
hg2_mcast	(Optional) High Gig2 MultiCast Forwarding Information
<i>hg2_mcast_vld</i>	(Optional) High Gig2 Multicast Forwarding Information
hg2-vld	(Optional) High Gig2 Valid Information
<i>hg2_vld</i>	(Optional) High Gig2 Valid Information
hg2-cos	(Optional) High Gig2 CoS Information
<i>hg2_cos</i>	(Optional) High Gig2 CoS Information

Command Mode

- /exec/elanms/se15

set inner l2 hg2

```
set inner l2 hg2 [ { hg2_vid <hg2_vlan> | hg2_ppd_type <hg2_ppd_type> | hg2_mirror <hg2_mirror> |
hg2_opcode <hg2_opcode> | hg2_dstpid <hg2_dpid> | hg2_dstmod <hg2_dmod> | hg2_srcpid <hg2_spid>
| hg2_srcmod <hg2_smod> | hg2_l3vld <hg2_l3_vld> | hg2_tc <hg2_tc> | hg2_dp <hg2_dp> | hg2_mcast
<hg2_mcast_vld> | hg2-vld <hg2_vld> | hg2-cos <hg2_cos> } ] +
```

Syntax Description

set	Setup Trigger
inner	Mask and Match By Inner Packet Fields
l2	All Layer 2 Fields
hg2	High Gig2 Fields
hg2_vid	(Optional) High Gig2 VLAN Tag
<i>hg2_vlan</i>	(Optional) High Gig2 VLAN Tag Information
hg2_ppd_type	(Optional) High Gig2 Packet Processing Descriptor
<i>hg2_ppd_type</i>	(Optional) High Gig2 Packet Processing Descriptor
hg2_mirror	(Optional) High Gig2 Packet Mirror Information
<i>hg2_mirror</i>	(Optional) High Gig2 Packet Mirror Information
hg2_opcode	(Optional) High Gig2 Packet Type
<i>hg2_opcode</i>	(Optional) High Gig2 Packet Type
hg2_dstpid	(Optional) High Gig2 Destination Port ID
<i>hg2_dpid</i>	(Optional) High Gig2 Destination Port ID
hg2_dstmod	(Optional) High Gig2 Destination Module ID
<i>hg2_dmod</i>	(Optional) High Gig2 Destination Module ID
hg2_srcpid	(Optional) High Gig2 Source Port ID
<i>hg2_spid</i>	(Optional) High Gig2 Source Port ID
hg2_srcmod	(Optional) High Gig2 Souce Module ID
<i>hg2_smod</i>	(Optional) High Gig2 Souce Module ID
hg2_l3vld	(Optional) High Gig2 Packet L3 Switched
<i>hg2_l3_vld</i>	(Optional) High Gig2 Packet L3 Switched
hg2_tc	(Optional) High Gig2 Packet Traffic Class

<i>hg2_tc</i>	(Optional) High Gig2 Packet Traffic Class
<i>hg2_dp</i>	(Optional) High Gig2 Drop Precedence
<i>hg2_dp</i>	(Optional) High Gig2 Drop Precedence
<i>hg2_mcast</i>	(Optional) High Gig2 MultiCast Forwarding Information
<i>hg2_mcast_vld</i>	(Optional) High Gig2 Multicast Forwarding Information
<i>hg2-vld</i>	(Optional) High Gig2 Valid Information
<i>hg2_vld</i>	(Optional) High Gig2 Valid Information
<i>hg2-cos</i>	(Optional) High Gig2 CoS Information
<i>hg2_cos</i>	(Optional) High Gig2 CoS Information

Command Mode

- /exec/elamns/sel4

set inner l4

```
set inner l4 [ { src-port <sport> | dst-port <dport> | packet-len <pkt_len> | checksum <csum> | flags <flag_val>
} ] +
```

Syntax Description

set	Setup Trigger
inner	Mask and Match By Inner Packet Fields
l4	L4 Fields
src-port	(Optional) Source Port Information
<i>sport</i>	(Optional) Source Port
dst-port	(Optional) Destination Port Information
<i>dport</i>	(Optional) Destination Port
packet-len	(Optional) Packet Length
<i>pkt_len</i>	(Optional) Packet Length
checksum	(Optional) Checksum
<i>csum</i>	(Optional) Checksum
flags	(Optional) L4 Flags
<i>flag_val</i>	(Optional) L4 Flags

Command Mode

- /exec/elanms/setl4

set inner l4

```
set { inner | outer } l4 [ { src-port <sport> | dst-port <dport> | packet-len <pkt_len> | checksum <csum> | flags
<flag_val> } ] +
```

Syntax Description

set	Setup Trigger
inner	Mask and Match By Inner Packet Fields
outer	Mask and Match By Outer Packet Fields
l4	L4 Fields
src-port	(Optional) Source Port Information
<i>sport</i>	(Optional) Source Port
dst-port	(Optional) Destination Port Information
<i>dport</i>	(Optional) Destination Port
packet-len	(Optional) Packet Length
<i>pkt_len</i>	(Optional) Packet Length
checksum	(Optional) Checksum
<i>csum</i>	(Optional) Checksum
flags	(Optional) L4 Flags
<i>flag_val</i>	(Optional) L4 Flags

Command Mode

- /exec/elanms/se17

set interface

[no] set interface <i>iface</i>

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set values in destination routing protocol
interface	Output interface
<i>iface</i>	Interface name

Command Mode

- /exec/configure/route-map

set interval find-new-host

[no] set interval find-new-host <val>

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set vmtracker options
interval	Set the polling interval
find-new-host	Set interval for the new host searching timer
<i>val</i>	The host search interval value in seconds (0 to disable)

Command Mode

- /exec/configure/vmt-conn

set interval pending-task-polling

[no] set interval pending-task-polling <val>

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set vmtracker options
interval	Set the polling interval
pending-task-polling	Define pending-task-polling interval
<i>val</i>	The pending task polling interval value in seconds

Command Mode

- /exec/configure/vmt-conn

set interval sync-full-info

[no] set interval sync-full-info <val>

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set vmtracker options
interval	Set the polling interval
sync-full-info	Set interval for syncing complete info from host
<i>val</i>	The sync info interval value in seconds (0 to disable)

Command Mode

- /exec/configure/vmt-conn

set ip address prefix-list

[no] set ip address prefix-list <name>

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set values in destination routing protocol
ip	Configure IP features
address	Specify IP address
prefix-list	IP prefix-list
<i>name</i>	Name of prefix list

Command Mode

- /exec/configure/route-map

set ip default next-hop

[no] set ip default next-hop [recursive] { load-share | <addr1> + [load-share] }

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set values in destination routing protocol
ip	Configure IP features
recursive	(Optional) Use recursive lookup
default	Set default next-hop
next-hop	Next hop address
<i>addr1</i>	IP address of next hop
load-share	Enables load sharing

Command Mode

- /exec/configure/route-map

set ip default next-hop verify-availability

[no] set ip default next-hop verify-availability { <addr> [track <object_id>] } [load-share]

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set values in destination routing protocol
ip	Configure IP features
default	Set default next-hop
next-hop	Next hop address
verify-availability	Verify the reachability of the tracked object
<i>addr</i>	IP address of next hop
track	(Optional) The tracking method is track
<i>object_id</i>	(Optional) Object number that the tracking subsystem is tracking
load-share	(Optional) Enables load sharing

Command Mode

- /exec/configure/route-map

set ip next-hop

```
[no] set ip next-hop [ recursive ] { load-share | <addr1> + [ load-share ] }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set values in destination routing protocol
ip	Configure IP features
recursive	(Optional) Use recursive lookup
next-hop	Next hop address
<i>addr1</i>	IP address of next hop
load-share	Enables load sharing

Command Mode

- /exec/configure/route-map

set ip next-hop peer-address

[no] set ip next-hop peer-address

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set values in destination routing protocol
ip	Configure IP features
next-hop	Next hop address
peer-address	Use peer address (for BGP only)

Command Mode

- /exec/configure/route-map

set ip next-hop redist-unchanged

[no] set ip next-hop redist-unchanged

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set values in destination routing protocol
ip	Configure IP features
next-hop	Next hop address
redist-unchanged	Use unchanged address during redistribution (for BGP session only)

Command Mode

- /exec/configure/route-map

set ip next-hop unchanged

[no] set ip next-hop unchanged

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set values in destination routing protocol
ip	Configure IP features
next-hop	Next hop address
unchanged	Use unchanged address (for eBGP session only)

Command Mode

- /exec/configure/route-map

set ip next-hop verify-availability

[no] set ip next-hop verify-availability { <addr> [track <object_id>] } [load-share]

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set values in destination routing protocol
ip	Configure IP features
next-hop	Next hop address
verify-availability	Verify the reachability of the tracked object
<i>addr</i>	IP address of next hop
track	(Optional) The tracking method is track
<i>object_id</i>	(Optional) Object number that the tracking subsystem is tracking
load-share	(Optional) Enables load sharing

Command Mode

- /exec/configure/route-map

set ip precedence

{ set ip precedence { <value> | <name> } } | { no set ip precedence [<value> | <name>] }

Syntax Description

no	Negate a command or set its defaults
set	Set values in destination routing protocol
ip	Configure IP features
precedence	Set precedence field
<i>value</i>	Precedence value
<i>name</i>	Precedence value

Command Mode

- /exec/configure/route-map

set ipv6 address prefix-list

[no] set ipv6 address prefix-list <name>

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set values in destination routing protocol
ipv6	Configure IPv6 features
address	Specify IP address
prefix-list	IPv6 prefix-list
<i>name</i>	Name of prefix list

Command Mode

- /exec/configure/route-map

set ipv6 default next-hop

[no] set ipv6 default next-hop [recursive] { load-share | <addr1> + [load-share] }

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set values in destination routing protocol
ipv6	Configure IPv6 features
recursive	(Optional) Use recursive lookup
default	Set default next-hop
next-hop	Next hop address
load-share	Enables load sharing
<i>addr1</i>	

Command Mode

- /exec/configure/route-map

set ipv6 default next-hop verify-availability

[no] set ipv6 default next-hop verify-availability { <addr> [track <object_id>] } [load-share]

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set values in destination routing protocol
ipv6	Configure IPv6 features
next-hop	Next hop address
default	Set default next-hop
verify-availability	Verify the reachability of the tracked object
track	(Optional) The tracking method is track
<i>object_id</i>	(Optional) Object number that the tracking subsystem is tracking
load-share	(Optional) Enables load sharing

Command Mode

- /exec/configure/route-map

set ipv6 next-hop

[no] set ipv6 next-hop { load-share | <addr> + [load-share] }

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set values in destination routing protocol
ipv6	Configure IPv6 features
next-hop	Next hop ipv6 address
load-share	Enables load sharing
<i>addr</i>	

Command Mode

- /exec/configure/route-map

set ipv6 next-hop peer-address

[no] set ipv6 next-hop peer-address

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set values in destination routing protocol
ipv6	Configure IPv6 features
next-hop	Next hop address
peer-address	Use peer address (for BGP only)

Command Mode

- /exec/configure/route-map

set ipv6 next-hop redist-unchanged

[no] set ipv6 next-hop redist-unchanged

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set values in destination routing protocol
ipv6	Configure IPv6 features
next-hop	Next hop address
redist-unchanged	Use unchanged address during redistribution (for BGP session only)

Command Mode

- /exec/configure/route-map

set ipv6 next-hop unchanged

[no] set ipv6 next-hop unchanged

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set values in destination routing protocol
ipv6	Configure IPv6 features
next-hop	Next hop address
unchanged	Use unchanged address (for eBGP session only)

Command Mode

- /exec/configure/route-map

set ipv6 next-hop verify-availability

[no] set ipv6 next-hop verify-availability { <addr> [track <object_id>] } [load-share]

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set values in destination routing protocol
ipv6	Configure IPv6 features
next-hop	Next hop address
verify-availability	Verify the reachability of the tracked object
track	(Optional) The tracking method is track
<i>object_id</i>	(Optional) Object number that the tracking subsystem is tracking
load-share	(Optional) Enables load sharing

Command Mode

- /exec/configure/route-map

set ipv6 precedence

```
{ set ipv6 precedence { <value> | <name> } } | { no set ipv6 precedence [ <value> | <name> ] }
```

Syntax Description

no	Negate a command or set its defaults
set	Set values in destination routing protocol
ipv6	Configure IPv6 features
precedence	Set precedence field
<i>value</i>	Precedence value
<i>name</i>	Precedence value

Command Mode

- /exec/configure/route-map

set label-index

```
{ { set label-index <value> } | { no set label-index [ <value> ] } }
```

Syntax Description

no	Negate a command or set its defaults
set	Set values in destination routing protocol
label-index	Set Segment Routing (SR) label index of route
<i>value</i>	Segment Routing (SR) label index

Command Mode

- /exec/configure/route-map

set level level-1 level-1-2 level-2

```
{ set level { level-1 | level-1-2 | level-2 } } | { no set level [ level-1 | level-1-2 | level-2 ] }
```

Syntax Description

no	Negate a command or set its defaults
set	Set values in destination routing protocol
level	Where to import route
level-1	Import into a level-1 area
level-1-2	Import into level-1 and level-2
level-2	Import into level-2 sub-domain

Command Mode

- /exec/configure/route-map

set local-preference

{ set local-preference <pref> | no set local-preference [<pref>] }

Syntax Description

no	Negate a command or set its defaults
set	Set values in destination routing protocol
local-preference	BGP local preference path attribute
<i>pref</i>	Preference value

Command Mode

- /exec/configure/route-map

set metric

```
{ set metric <metric0> [ <metric1> <metric2> <metric3> <metric4> ] } | { no set metric [ <metric0> [ <metric1> <metric2> <metric3> <metric4> ] ] }
```

Syntax Description

no	Negate a command or set its defaults
set	Set values in destination routing protocol
metric	Set metric for destination routing protocol
<i>metric0</i>	[+/-] Metric value or Bandwidth in Kbits per second
<i>metric1</i>	(Optional) IGRP delay metric
<i>metric2</i>	(Optional) IGRP reliability metric where 255 is 100% reliable
<i>metric3</i>	(Optional) IGRP Effective bandwidth metric (Loading) 255 is 100%
<i>metric4</i>	(Optional) IGRP MTU of the path

Command Mode

- /exec/configure/route-map

set mpls-exp-topmost cos table exp-cos-map

[no] set mpls-exp-topmost cos table exp-cos-map

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set attribute
mpls-exp-topmost	MPLS experimental topmost
cos	IEEE 802.1Q Class of Service
table	Table map
exp-cos-map	Exp to cos table map name (reserved)

Command Mode

- /exec/configure/policy-map/type/queuing/class

set nssa-only

[no] set nssa-only

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set values in destination routing protocol
nssa-only	OSPF NSSA Areas

Command Mode

- /exec/configure/route-map

set origin egp

{ set origin egp <as> } | { no set origin egp <as> }

Syntax Description

no	Negate a command or set its defaults
set	Set values in destination routing protocol
origin	BGP origin code
egp	remote EGP
as	AS number

Command Mode

- /exec/configure/route-map

set origin egp igp incomplete

```
{ set origin { egp | igp | incomplete } } | { no set origin [ { egp | igp | incomplete } ] }
```

Syntax Description

no	Negate a command or set its defaults
set	Set values in destination routing protocol
origin	BGP origin code
egp	remote EGP
igp	local IGP
incomplete	unknown heritage

Command Mode

- /exec/configure/route-map

set outer ipv4

```
set outer ipv4 [ { l3-type <l3_type> | pyld-len <pyld_len> | v6-vld <v6_vld> | version <ver> | header-len <hlen> | dscp <dscp_val> | ecn <ecn_val> | packet-len <pkt_len> | more-frags <mf> | fragment-off <fragoff> | ttl <ttl_val> | next-protocol <nproto> | checksum <csum> | src_ip <sip> | dst_ip <dip> } ] +
```

Syntax Description

set	Setup Trigger
outer	Mask and Match By Outer Packet Fields
ipv4	IPv4 Fields
l3-type	(Optional) L3 Packet Type
<i>l3_type</i>	(Optional) L3 Packet Type
pyld-len	(Optional) Payload Length
<i>pyld_len</i>	(Optional) Payload Length
v6-vld	(Optional) IPv6 Valid Information
<i>v6_vld</i>	(Optional) IPv6 Valid Information
version	(Optional) Version
<i>ver</i>	(Optional) Version
header-len	(Optional) Header Length
<i>hlen</i>	(Optional) Header Length
dscp	(Optional) Diff. Serv. Code Point
<i>dscp_val</i>	(Optional) Diff. Serv. Code Point
ecn	(Optional) Explicit Congestion Ntn
<i>ecn_val</i>	(Optional) Explicit Congestion Ntn
packet-len	(Optional) Packet Total Length
<i>pkt_len</i>	(Optional) Packet Total Length
more-frags	(Optional) More Fragments Available
<i>mf</i>	(Optional) More Fragments Available
fragment-off	(Optional) Fragments Offset
<i>fragoff</i>	(Optional) Fragments Offset
ttl	(Optional) Time to Live

<i>ttl_val</i>	(Optional) Time to Live
next-protocol	(Optional) Next(L4) Protocol
<i>nproto</i>	(Optional) Next(L4) Protocol
checksum	(Optional) Checksum
<i>csum</i>	(Optional) Checksum
src_ip	(Optional) Source IP Address
<i>sip</i>	(Optional) Source IP Address
dst_ip	(Optional) Destination IP Address
<i>dip</i>	(Optional) Destination IP Address

Command Mode

- /exec/elamns/sel3

set outer l2

```
set outer l2 [ { snap_vld <snap_vld> | cntag_vld <cntag_vld> | qtag_vld <qtag_vld> | vlan <vlan_id> | cos
<cos_val> | cfi <cfi_vld> | vntag_vld <vntag_vld> | vntag_svif <vntag_svif> | vntag_dvif <vntag_dvif> |
vntag_looped <vntag_loop> | vntag_pointer <vntag_p> | src_mac <smac> | dst_mac <dmac> } ] +
```

Syntax Description

set	Setup Trigger
outer	Mask and Match By Outer Packet Fields
l2	All Layer 2 Fields
snap_vld	(Optional) SNAP Header Information Valid
<i>snap_vld</i>	(Optional) SNAP Header Information Valid
cntag_vld	(Optional) CNTag Information Valid
<i>cntag_vld</i>	(Optional) CNTag Information Valid
qtag_vld	(Optional) VLAN Tag Information Valid
<i>qtag_vld</i>	(Optional) VLAN Tag Information Valid
vlan	(Optional) VLAN Id (Present only in case of FEX)
<i>vlan_id</i>	(Optional) VLAN Id
cos	(Optional) Class of Service
<i>cos_val</i>	(Optional) Class of Service Type
cfi	(Optional) CFI Setting
<i>cfi_vld</i>	(Optional) CFI Setting Valid
vntag_vld	(Optional) VNTAG Information Valid
<i>vntag_vld</i>	(Optional) VNTAG Information Valid
vntag_svif	(Optional) VNTAG Source vif
<i>vntag_svif</i>	(Optional) VNTAG Source vif
vntag_dvif	(Optional) VNTAG Destination vif
<i>vntag_dvif</i>	(Optional) VNTAG Destination vif
vntag_looped	(Optional) VNTAG Header Looped Valid
<i>vntag_loop</i>	(Optional) VNTAG Header Looped Valid
vntag_pointer	(Optional) VNTAG Header Pointer Valid

<i>vntag_p</i>	(Optional) VNTAG Header Pointer Valid
<i>src_mac</i>	(Optional) Source MAC Address
<i>smac</i>	(Optional) Source MAC Address Value
<i>dst_mac</i>	(Optional) Destination MAC Address
<i>dmac</i>	(Optional) Destination MAC Address Value

Command Mode

- /exec/elanms/se13

set outer l2 hg2

```
set outer l2 hg2 [ { hg2_vid <hg2_vlan> | hg2_ppd_type <hg2_ppd_type> | hg2_mirror <hg2_mirror> |
hg2_opcode <hg2_opcode> | hg2_dstpid <hg2_dpid> | hg2_dstmod <hg2_dmod> | hg2_srcpid <hg2_spid>
| hg2_srcmod <hg2_smod> | hg2_l3vld <hg2_l3_vld> | hg2_tc <hg2_tc> | hg2_dp <hg2_dp> | hg2_mcast
<hg2_mcast_vld> | hg2-vld <hg2_vld> | hg2-cos <hg2_cos> } ] +
```

Syntax Description

set	Setup Trigger
outer	Mask and Match By Outer Packet Fields
l2	All Layer 2 Fields
hg2	High Gig2 Fields
hg2_vid	(Optional) High Gig2 VLAN Tag
<i>hg2_vlan</i>	(Optional) High Gig2 VLAN Tag Information
hg2_ppd_type	(Optional) High Gig2 Packet Processing Descriptor
<i>hg2_ppd_type</i>	(Optional) High Gig2 Packet Processing Descriptor
hg2_mirror	(Optional) High Gig2 Packet Mirror Information
<i>hg2_mirror</i>	(Optional) High Gig2 Packet Mirror Information
hg2_opcode	(Optional) High Gig2 Packet Type
<i>hg2_opcode</i>	(Optional) High Gig2 Packet Type
hg2_dstpid	(Optional) High Gig2 Destination Port ID
<i>hg2_dpid</i>	(Optional) High Gig2 Destination Port ID
hg2_dstmod	(Optional) High Gig2 Destination Module ID
<i>hg2_dmod</i>	(Optional) High Gig2 Destination Module ID
hg2_srcpid	(Optional) High Gig2 Source Port ID
<i>hg2_spid</i>	(Optional) High Gig2 Source Port ID
hg2_srcmod	(Optional) High Gig2 Souce Module ID
<i>hg2_smod</i>	(Optional) High Gig2 Souce Module ID
hg2_l3vld	(Optional) High Gig2 Packet L3 Switched
<i>hg2_l3_vld</i>	(Optional) High Gig2 Packet L3 Switched
hg2_tc	(Optional) High Gig2 Packet Traffic Class

<i>hg2_tc</i>	(Optional) High Gig2 Packet Traffic Class
<i>hg2_dp</i>	(Optional) High Gig2 Drop Precedence
<i>hg2_dp</i>	(Optional) High Gig2 Drop Precedence
<i>hg2_mcast</i>	(Optional) High Gig2 MultiCast Forwarding Information
<i>hg2_mcast_vld</i>	(Optional) High Gig2 Multicast Forwarding Information
<i>hg2-vld</i>	(Optional) High Gig2 Valid Information
<i>hg2_vld</i>	(Optional) High Gig2 Valid Information
<i>hg2-cos</i>	(Optional) High Gig2 CoS Information
<i>hg2_cos</i>	(Optional) High Gig2 CoS Information

Command Mode

- /exec/elamns/sel3

set outer l4

```
set outer l4 [ { src-port <sport> | dst-port <dport> | packet-len <pkt_len> | checksum <csum> | flags <flag_val>
} ] +
```

Syntax Description

set	Setup Trigger
outer	Mask and Match By Outer Packet Fields
l4	L4 Fields
src-port	(Optional) Source Port Information
<i>sport</i>	(Optional) Source Port
dst-port	(Optional) Destination Port Information
<i>dport</i>	(Optional) Destination Port
packet-len	(Optional) Packet Length
<i>pkt_len</i>	(Optional) Packet Length
checksum	(Optional) Checksum
<i>csum</i>	(Optional) Checksum
flags	(Optional) L4 Flags
<i>flag_val</i>	(Optional) L4 Flags

Command Mode

- /exec/elanms/sel3

set path-selection all advertise

[no] set path-selection all advertise

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set values in destination routing protocol
path-selection	Path selection criteria for BGP
all	Specifies all BGP Paths
advertise	Advertise add paths to its peers if receive capability enabled

Command Mode

- /exec/configure/route-map

set pktmgr pds yield-threshold

set pktmgr pds yield-threshold [<thr>]

Syntax Description

set	Set values
pktmgr	Set values in pktmgr
pds	Set value for pktmgr pds operation
yield-threshold	Set Value of yield-threshold
<i>thr</i>	(Optional) threshold

Command Mode

- /exec

set pktrw

```
set pktrw { mcast <mcast> | sup_redir <sured> | bcm_proxy <bcm_proxy> | excep_case <excep> | transit
<trans> | vpc_df <vpc_df> | src_tep_idx <src_tep> | lat_update <lat_update> | lat_idx <lat_idx> | src_class
<sclass> | ol_fb_met <ol_fb_met> | ol_fb_vpath <ol_fb_vpath> | ol_dre <ol_dre> | ol_vpath <ol_vpath> |
ol_dp <ol_dp> | ol_sp <ol_sp> | ol_e <ol_e> | ol_dl <ol_dl> | ol_lb <ol_lb> | ol_mark <ol_mark> | ol_udp_sp
<ol_udp_sp> | ol_ftag <ol_ftag> | ol_segid <ol_segid> | ol_ttl <ol_ttl> | ol_ecn <ol_ecn> | ol_dscp <ol_dscp>
| ol_de <ol_de> | ol_cos <ol_cos> | ol_mac <ol_mac> | ol_encap_idx <ol_encap> | ol_vpc <ol_vpc> | ol_idx
<ol_idx> | ttl <ttl> | dscp <dscp> | vlan1 <vlan1> | ecn_coi <ecn_coi> | ecn_cio <ecn_cio> | ttl_coi <ttl_coi>
| ttl_cio <ttl_cio> | adj_idx <adj_idx> | vntag_svif <vntag_svif> | de <de> | cos <cos> | vlan0 <vlan0> | adj_vld
<adj_vld> | uc_routed <uc_routed> | loopback <lpb> | ecn <ecn> | hg2_vid <hg2_vlan> | hg2_ppd <hg2_ppd>
| hg2_tc_sup_copy <hg2_tescpy> | hg2_tc <hg2_tc> | hg2_lbid <hg2_lbid> | hg2_opc <hg2_opc> | hg2_dstpid
<hg2_dpид> | hg2_srcpid <hg2_spид> | hg2_dstmod <hg2_dmod> | hg2_srcmod <hg2_smod> | op_inner
<op_inner> | op_qtag <op_qtag> | op_vntag <op_vntag> | op_outer <op_outer> | pkt_type <pkt_type> | drop
<drp> | pkt_tstamp <pkt_tstamp> | tstamp <tstamp> | cap_tstamp <cap_tstamp> | len_info <len_info> | len_type
<len_type> | pktid <pktid> | srcid <srcid> | pktfmt1 <pktfmt1> | pktfmt0 <pktfmt0> | hg2_cos <hg2_cos> }
+
```

Syntax Description

set	Setup Trigger
pktrw	All packet re-write fields
mcast	mcast
<i>mcast</i>	Mcast
sup_redir	Sup Redirect
<i>sured</i>	Sup Redirect
bcm_proxy	Broadcom Proxy
<i>bcm_proxy</i>	Broadcom Proxy
excep_case	Excep_case
<i>excep</i>	Excep_case
transit	Transit
<i>trans</i>	Transit
vpc_df	VPC_df
<i>vpc_df</i>	VPC_df
src_tep_idx	Src TEP Index
<i>src_tep</i>	Src TEP Index
lat_update	Lat Update

<i>lat_update</i>	Lat Update
lat_idx	Lat Index
<i>lat_idx</i>	Lat Index
src_class	Source Class
<i>sclass</i>	Source Class
ol_fb_met	Ol_fb_metric
<i>ol_fb_met</i>	Ol_fb_metric
ol_fb_vpath	Ol_fb_vpath
<i>ol_fb_vpath</i>	Ol_fb_vpath
ol_dre	Ol_dre
<i>ol_dre</i>	Ol_dre
ol_vpath	Ol_vpath
<i>ol_vpath</i>	Ol_vpath
ol_dp	Ol_dp
<i>ol_dp</i>	Ol_dp
ol_sp	Ol_sp
<i>ol_sp</i>	Ol_sp
ol_e	Ol_e
<i>ol_e</i>	Ol_e
ol_dl	Ol_dl
<i>ol_dl</i>	Ol_dl
ol_lb	Ol_lb
<i>ol_lb</i>	Ol_lb
ol_mark	Ol_mark
<i>ol_mark</i>	Ol_mark
ol_udp_sp	Ol_UDP_sp
<i>ol_udp_sp</i>	Ol UDP Source Port
ol_ftag	Ol_ftag
<i>ol_ftag</i>	Ol_ftag

ol_segid	Ol_segid
<i>ol_segid</i>	Ol_segid
ol_ttl	Ol_TTL
<i>ol_ttl</i>	Ol_TTL
ol_ecn	Ol_ecn
<i>ol_ecn</i>	Ol_ecn
ol_dscp	Ol_dscp
<i>ol_dscp</i>	Ol_dscp
ol_de	Ol_de
<i>ol_de</i>	Ol_de
ol_cos	Ol_cos
<i>ol_cos</i>	Ol_cos
ol_mac	Ol_mac
<i>ol_mac</i>	Ol_mac
ol_encap_idx	Ol_encap_idx
<i>ol_encap</i>	Ol_encap_idx
ol_vpc	Ol_VPC
<i>ol_vpc</i>	Ol_VPC
ol_idx	Ol_idx
<i>ol_idx</i>	Ol_idx
ttl	TTL
<i>ttl</i>	TTL
dscp	DSCP
<i>dscp</i>	DSCP
vlan1	Vlan1
<i>vlan1</i>	Vlan1
ecn_coi	ecn_coi
<i>ecn_coi</i>	ecn_coi
ecn_cio	ecn_cio

<i>ecn_cio</i>	ecn_cio
ttn_coi	ttn_coi
<i>ttn_coi</i>	ttn_coi
ttn_cio	ttn_cio
<i>ttn_cio</i>	ttn_cio
adj_idx	adj_idx
<i>adj_idx</i>	adj_idx
vntag_svif	vntag_svif
<i>vntag_svif</i>	vntag_svif
de	de
<i>de</i>	de
cos	cos
<i>cos</i>	cos
vlan0	vlan0
<i>vlan0</i>	vlan0
adj_vld	adj_vld
<i>adj_vld</i>	adj_vld
uc_routed	uc_routed
<i>uc_routed</i>	uc_routed
loopback	loopback
<i>lpb</i>	loopback
ecn	ecn
<i>ecn</i>	ecn
hg2_vid	High Gig2 VLAN Tag
<i>hg2_vlan</i>	High Gig2 VLAN Tag Information
hg2_cos	High Gig2 CoS Information
<i>hg2_cos</i>	High Gig2 CoS Information
hg2_ppd	High Gig2 Packet Processing Descriptor
<i>hg2_ppd</i>	High Gig2 Packet Processing Descriptor

hg2_tc_sup_copy	High Gig2 Traffic Class SUP Copy
<i>hg2_tcscopy</i>	High Gig2 Traffic Class SUP Copy
hg2_tc	High Gig2 Packet Traffic Class
<i>hg2_tc</i>	High Gig2 Packet Traffic Class
hg2_lbid	High Gig2 Packet Ibid
<i>hg2_lbid</i>	High Gig2 Packet Ibid
hg2_opc	High Gig2 Packet Type
<i>hg2_opc</i>	High Gig2 Packet Type
hg2_dstpid	High Gig2 Destination Port ID
<i>hg2_dpид</i>	High Gig2 Destination Port ID
hg2_dstmod	High Gig2 Destination Module ID
<i>hg2_dmod</i>	High Gig2 Destination Module ID
hg2_srcpid	High Gig2 Source Port ID
<i>hg2_spид</i>	High Gig2 Source Port ID
hg2_srcmod	High Gig2 Souce Module ID
<i>hg2_smod</i>	High Gig2 Souce Module ID
op_inner	Op_inner
<i>op_inner</i>	Op_inner
op_outer	Op_outer
<i>op_outer</i>	Op_outer
op_qtag	Op_qtag
<i>op_qtag</i>	Op_qtag
op_vntag	Op_vntag
<i>op_vntag</i>	Op_vntag
pkt_type	Pkt_type
<i>pkt_type</i>	Pkt_type
drop	Drop
<i>drp</i>	Drop
pkt_tstamp	Packet timestamp

<i>pkt_tstamp</i>	Packet timestamp
<i>tstamp</i>	Timestamp
<i>tstamp</i>	Timestamp
<i>cap_tstamp</i>	Capture Timestamp
<i>cap_tstamp</i>	Capture Timestamp
<i>len_info</i>	Len_info
<i>len_info</i>	Len_info
<i>len_type</i>	Len_type
<i>len_type</i>	Len_type
<i>pktid</i>	Pkt_id
<i>pktid</i>	Pkt_id
<i>srcid</i>	Src_id
<i>srcid</i>	Src_id
<i>pktfmt1</i>	Pktfmt1
<i>pktfmt1</i>	Pktfmt1
<i>pktfmt0</i>	Pktfmt0
<i>pktfmt0</i>	Pktfmt0

Command Mode

- /exec/elanms/outsel0

set sideband

```
set sideband { span_vec <span_vec> | bounce <bnc> | mclast <mclast> | mcastcurptr <mccurptr> | mcastcurptr_v
<mccurptr_v> | srcport <sport> | vlan <vlan> | segwgt <segwgt> | segid <segid> | seglocal <seglcl> | gbw_color
<gbw_color> | gbw_tag <gbw_tagg> | fwddrp <fwddrp> | l2fld <l2fld> | nodrp <nodrp> | ovrlyidx <ovrlyidx>
| ecncap <ecncap> | cpu <cpu> | store_fwd <stfwd> | mcast <mcast> | oclass <ocls> | iclass <icls> | odest_v
<odest_v> | odest <odest> | ovec <ovec> | span_trans <span_trans> | lbtype <lbtype> | lbena <lbena> | tdmid
<tdmid> | pktid <pktid> | srcid <srcid> | eoferror <eoferr> | eofbytes <eofby> | eof <eof> | sof <sof> } +
```

Syntax Description

set	Setup Trigger
sideband	All sideband fields
span_vec	SPAN vector
<i>span_vec</i>	SPAN vector
bounce	Bounce
<i>bnc</i>	Bounce
mclast	Mclast
<i>mclast</i>	Mclast
mcastcurptr	Mcast cur ptr
<i>mccurptr</i>	Mcast cur ptr
mcastcurptr_v	Mcast cur ptr v
<i>mccurptr_v</i>	Mcast cur ptr v
srcport	Source Port
<i>sport</i>	Source Port
vlan	Vlan
<i>vlan</i>	Vlan
segwgt	Segwgt
<i>segwgt</i>	Segwgt
segid	Segid
<i>segid</i>	Segid
seglocal	Seglocal
<i>seglcl</i>	Seglocal

gbw_color	GBW color
<i>gbw_color</i>	GBW color
gbw_tag	GBW tagged
<i>gbw_tagg</i>	GBW tagged
fwddrp	Forward drop
<i>fwddrp</i>	Forward drop
l2fld	L2 Flood
<i>l2fld</i>	L2 Flood
nodrp	No drop
<i>nodrp</i>	No drop
ovrlyidx	Overlay index
<i>ovrlyidx</i>	Overlay index
ecncap	ECN Capable
<i>ecncap</i>	ECN Capable
cpu	CPU
<i>cpu</i>	CPU
store_fwd	Store_fwd
<i>stfwd</i>	Store_fwd
mcast	Multicast
<i>mcast</i>	Multicast
oclass	Output class
<i>ocls</i>	Output class
iclass	Input class
<i>icls</i>	Input class
odest_v	Odest_v
<i>odest_v</i>	Odest_v
odest	Odest
<i>odest</i>	Odest
ovec	Ovector

<i>ovec</i>	Ovector
<i>span_trans</i>	SPAN transit
<i>span_trans</i>	SPAN transit
<i>lbtype</i>	Lbtype
<i>lbtype</i>	Lbtype
<i>lbena</i>	Lbenable
<i>lbena</i>	Lbenable
<i>tdmid</i>	Tdmid
<i>tdmid</i>	Tdmid
<i>pktid</i>	Pkt_id
<i>pktid</i>	Pkt_id
<i>srcid</i>	Src_id
<i>srcid</i>	Src_id
<i>eoferror</i>	EOF error
<i>eoferr</i>	EOF erro
<i>eofbytes</i>	EOF bytes
<i>eofby</i>	EOF bytes
<i>eof</i>	EOF
<i>eof</i>	EOF
<i>sof</i>	SOF
<i>sof</i>	SOF

Command Mode

- /exec/elamns/outsel5

set tag

```
{ { set tag <value> } | { no set tag [ <value> ] } }
```

Syntax Description

no	Negate a command or set its defaults
set	Set values in destination routing protocol
tag	Tag value for destination routing protocol
<i>value</i>	Tag value

Command Mode

- /exec/configure/route-map

set weight

```
{ set weight <count> | no set weight [ <count> ] }
```

Syntax Description

no	Negate a command or set its defaults
set	Set values in destination routing protocol
weight	BGP weight for routing table
<i>count</i>	Weight value

Command Mode

- /exec/configure/route-map

setup

setup

Syntax Description

setup	Run the basic SETUP command facility
-------	--------------------------------------

Command Mode

- /exec

sflow

```
sflow { [ sampling-rate <rate> ] | [ max-sampled-size <pkt-size> ] | [ counter-poll-interval <interval> ] | [ max-datagram-size <dgram-size> ] | [ collector-ip <dst-ip> vrf { <vrf-name> | <vrf-known-name> } ] [ source <src-ip> ] | [ collector-port <dst-port> ] | [ agent-ip <agent-ip> ] }
```

Syntax Description

sflow	change sFlow global settings
sampling-rate	(Optional) sFlow Sampling Rate
<i>rate</i>	(Optional) sFlow Sampling rate
max-sampled-size	(Optional) sFlow Sampled Size
<i>pkt-size</i>	(Optional) sFlow Sampled Size
counter-poll-interval	(Optional) sFlow Counter Poll Interval
<i>interval</i>	(Optional) sFlow Counter Poll Interval
max-datagram-size	(Optional) sFlow Datagram Size
<i>dgram-size</i>	(Optional) sFlow Datagram Size
collector-ip	(Optional) sFlow Collector IP address
<i>dst-ip</i>	(Optional) sFlow Collector IP address
vrf	(Optional) Display per-VRF information
<i>vrf-name</i>	(Optional) VRF name
<i>vrf-known-name</i>	(Optional) Known VRF name
source	(Optional) Source IP address to send to sFlow Collector
<i>src-ip</i>	(Optional) Source IP address to send to sFlow Collector
collector-port	(Optional) sFlow Collector UDP port
<i>dst-port</i>	(Optional) sFlow Collector UDP port
agent-ip	(Optional) sFlow Agent IP address
<i>agent-ip</i>	(Optional) sFlow Agent IP address

Command Mode

- /exec/configure

sflow

[no] sflow { sampling-rate | max-sampled-size | counter-poll-interval | max-datagram-size | collector-ip | collector-port | agent-ip }

Syntax Description

no	Negate a command or set its defaults
sflow	change sFlow global settings
sampling-rate	sFlow Sampling Rate
max-sampled-size	sFlow Sampled Size
counter-poll-interval	sFlow Counter Poll Interval
max-datagram-size	sFlow Datagram Size
collector-ip	sFlow Collector IP address
collector-port	sFlow Collector UDP port
agent-ip	sFlow Agent IP address

Command Mode

- /exec/configure

sflow cpu-usage limit

sflow cpu-usage limit <percent>

Syntax Description

sflow	change sFlow global settings
cpu-usage	sFlow cpu usage setting
limit	sFlow cpu usage limit
<i>percent</i>	sFlow cpu usage limit percentage

Command Mode

- /exec/configure

sflow data-source interface

```
sflow data-source interface { <ifnum> | <pcifnum> }
```

Syntax Description

sflow	change sFlow global settings
data-source	sFlow Data Source
interface	sFlow Data Source Interface
<i>ifnum</i>	sFlow Data Source Interface
<i>pcifnum</i>	sFlow Data Source Interface

Command Mode

- /exec/configure

sflow data-source interface

[no] sflow data-source interface { <ifnum> | <pcifnum> }

Syntax Description

no	Negate a command or set its defaults
sflow	change sFlow global settings
data-source	sFlow Data Source
interface	sFlow Data Source Interface
<i>ifnum</i>	sFlow Data Source Interface
<i>pcifnum</i>	sFlow Data Source Interface

Command Mode

- /exec/configure

sflow extended switch

[no] sflow extended switch

Syntax Description

no	(Optional) Negate a command or set its defaults
sflow	change sFlow global settings
extended	sFlow extended flow records
switch	sFlow extended switch flow

Command Mode

- /exec/configure

shape

```
[no] shape { { { [ average ] { <avg-rate> [ bps | kbps | mbps | gbps ] | percent <percentage> } } | { min { <min-rate> [ bps2 | kbps2 | mbps2 | gbps2 | pps2 ] | percent2 <percentage2> } max { <max-rate> [ bps3 | kbps3 | mbps3 | gbps3 | pps3 ] | percent3 <percentage3> } } } | { { kbps4 | pps4 } { <max-rate4> [ min2 <min-rate4> ] } } }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
shape	shape
average	(Optional) Configure average shape rate
min	Configure minimum shape rate
max	Configure maximum shape rate
bps	(Optional) Bits per second
kbps	(Optional) Kilo bits per second
mbps	(Optional) Mega bits per second
gbps	(Optional) Giga bits per second
bps2	(Optional) Bits per second
kbps2	(Optional) Kilo Bits per second
mbps2	(Optional) Mega Bits per second
gbps2	(Optional) Giga Bits per second
pps2	(Optional) Packets per second
bps3	(Optional) Bits per second
kbps3	(Optional) Kilo Bits per second
mbps3	(Optional) Mega Bits per second
gbps3	(Optional) Giga Bits per second
pps3	(Optional) Packets per second
percent	Specify rate as percentage of interface data-rate
percent2	Specify rate as percentage of interface data-rate
percent3	Specify rate as percentage of interface data-rate
<i>percentage</i>	Percentage

<i>percentage2</i>	Percentage
<i>percentage3</i>	Percentage
<i>kbits4</i>	Kilo Bits per second
<i>pps4</i>	Packets per second
<i>min2</i>	(Optional) Min guaranteed bandwidth

Command Mode

- /exec/configure/policy-map/type/queuing/class

shared-secret

```
[no] shared-secret { 10 <clear> | 7 <encrypted> | <secret> } [ user <user> password { 0 <clear> | 7 <encrypted> | <password> } ]
```

Syntax Description

no	(Optional) Negate a command or set its defaults
shared-secret	Shared-secret
<i>secret</i>	Enter shared-secret in clear text
10	password in clear text
<i>clear</i>	Password in clear text
7	Password that follows should be in encrypted text
<i>encrypted</i>	Encrypted password
user	(Optional) User Name
<i>user</i>	(Optional) Enter user name
password	(Optional) Password
<i>password</i>	(Optional) Enter password in clear text
0	(Optional) Password that follows should be in clear text
<i>clear</i>	(Optional) Password in clear text
7	(Optional) Password that follows should be in encrypted text
<i>encrypted</i>	(Optional) Encrypted password

Command Mode

- /exec/configure/fabric-db/server-radius

show

```
show { routing | ip route } [ vrf { <vrf-name> | <vrf-known-name> | <vrf-all> } ] [ ip | ipv4 ] [ unicast ] [
topology <topology-name> ] [ l3vm-info ] [ rpf ] [ <ip-addr> | { <ip-prefix> [ { longer-prefixes | shorter-prefixes
} ] } ] [ { <protocol> [ all ] } | { next-hop <next-hop> | next-hop-v6 <next-hop-v6> } | { interface <interface>
} | { updated { [ since <stime> ] [ until <utime> ] } } ] + [ summary | detail ] [ vrf { <vrf-name> |
<vrf-known-name> | <vrf-all> } ] [ __readonly__ TABLE_vrf <vrf-name-out> TABLE_addrf <addrf> [
TABLE_prefix <ipprefix> <ucast-nhops> <mcast-nhops> <attached> TABLE_path [ <ipnexthop> ] [ <ifname>
] <uptime> <pref> <metric> <clientname> [ <type> ] [ <tag> ] [ <stale> ] [ <unres> ] [ <hidden> ] [
<stale-label> ] [ <ubest> ] [ <mbest> ] ] [ TABLE_summary <routes> <paths> [ <multicast_paths> ] [
TABLE_unicast [ <clientname> ] [ <best-paths> ] [ <backup-paths> ] ] [ TABLE_multicast [ <clientname>
] [ <best-paths> ] [ <backup-paths> ] ] [ TABLE_route_count [ <mask_len> ] [ <count> ] ] ] ]
```

Syntax Description

show	Show running system information
routing	Display routing information
ip	Display IP information
route	Display routing information
vrf	(Optional) Display per-VRF information
<i>vrf-name</i>	(Optional) VRF name
<i>vrf-known-name</i>	(Optional) Known VRF name
vrf-all	(Optional) Display information for all VRFs
ipv4	(Optional) Display IP information
unicast	(Optional) Display unicast information
topology	(Optional) Display per-topology information
<i>topology-name</i>	(Optional) topology name
l3vm-info	(Optional) Display corresponding L3VM information
rpf	(Optional) Display RPF information for multicast source
<i>ip-addr</i>	(Optional) Display single route longest match lookup
<i>ip-prefix</i>	(Optional) Display single exact match route
longer-prefixes	(Optional) Display matching routes with mask-lengths \geq prefix
shorter-prefixes	(Optional) Display matching routes with mask-lengths \leq prefix
<i>protocol</i>	(Optional) Display routes for protocol (or route type)
all	(Optional) Display routes for protocol for backup next-hops too

next-hop	(Optional) Display routes with this next-hop only
<i>next-hop</i>	(Optional) Next hop address
next-hop-v6	(Optional) Display routes with this V6 next-hop only
interface	(Optional) Display routes with this output interface only
<i>interface</i>	(Optional) Interface Name
updated	(Optional) Display routes filtered by last updated time
since	(Optional) Display those routes updated since this time
<i>stime</i>	(Optional) Since this date/time [[CC]YY-][MM-DD-]HH:MM[:SS]
until	(Optional) Display those routes updated until this time
<i>utime</i>	(Optional) Until this date/time [[CC]YY-][MM-DD-]HH:MM[:SS]
summary	(Optional) Display route counts
detail	(Optional) Display routes in full detail
<i>__readonly__</i>	(Optional)
TABLE_vrf	(Optional)
<i>vrf-name-out</i>	(Optional)
TABLE_addrf	(Optional)
<i>addrf</i>	(Optional)
TABLE_prefix	(Optional)
<i>ipprefix</i>	(Optional)
<i>ucast-nhops</i>	(Optional)
<i>mcast-nhops</i>	(Optional)
<i>attached</i>	(Optional)
TABLE_path	(Optional)
<i>ipnexthop</i>	(Optional)
<i>ifname</i>	(Optional)
<i>uptime</i>	(Optional)
<i>pref</i>	(Optional)
<i>metric</i>	(Optional)
<i>clientname</i>	(Optional)

<i>type</i>	(Optional)
<i>tag</i>	(Optional)
<i>stale</i>	(Optional)
<i>unres</i>	(Optional)
<i>hidden</i>	(Optional)
<i>stale-label</i>	(Optional)
<i>ubest</i>	(Optional)
<i>mbest</i>	(Optional)
TABLE_summary	(Optional)
<i>routes</i>	(Optional)
<i>paths</i>	(Optional)
<i>multicast_paths</i>	(Optional)
TABLE_unicast	(Optional)
<i>clientname</i>	(Optional)
<i>best-paths</i>	(Optional)
<i>backup-paths</i>	(Optional)
TABLE_multicast	(Optional)
<i>clientname</i>	(Optional)
<i>best-paths</i>	(Optional)
<i>backup-paths</i>	(Optional)
TABLE_route_count	(Optional)
<i>mask_len</i>	(Optional)
<i>count</i>	(Optional)

Command Mode

- /exec

show

```
show { consistency-checker l2 module <modnum> | forwarding consistency l2 <modnum> } [ __readonly__
<l2entry> <header> TABLE_mac_address
<disp_mac_addr><disp_type><disp_vlan><disp_is_static><disp_age><disp_is_secure><disp_is_ntfy><disp_port>
]
```

Syntax Description

show	show
consistency-checker	Consistency Checker
forwarding	Forwarding information
consistency	consistency
l2	l2
module	Module number
<i>modnum</i>	Module Number
__readonly__	(Optional)
<i>header</i>	(Optional) Header
<i>l2entry</i>	(Optional) L2 Entry String
TABLE_mac_address	(Optional) Mac address table

Command Mode

- /exec

show

```
show { { ipv6 route } | { routing [ vrf { <vrf-name> | <vrf-known-name> | <vrf-all> } ] ipv6 [ unicast ] [
topology <topology-name> ] } } [ l3vm-info ] [ rpf ] [ <ipv6-addr> | { <ipv6-prefix> [ { longer-prefixes |
shorter-prefixes } ] ] [ { <ipv6-protocol> [ all ] } | { next-hop <next-hop> } | { interface <interface> } | {
updated [ { since <stime> } [ until <utime> ] } } ] + [ summary | [ detail ] [ deleted ] ] [ vrf { <vrf-name>
| <vrf-known-name> | <vrf-all> } ] [ __readonly__ TABLE_vrf <vrf-name-out> TABLE_addrf <addrf>
TABLE_prefix <ipprefix> <ucast-nhops> <mcast-nhops> <attached> TABLE_path <ubest> <mbest>
<ipnexthop> <ifname> <pref> <metric> <uptime> <clientname> [ <type> ] [ <tag> ] [ <stale> ] [ <hidden>
] [ TABLE_summary <routes> <paths> [ <multicast_paths> ] [ TABLE_unicast [ <clientname> ] [ <best-paths>
] [ <backup-paths> ] ] [ TABLE_multicast [ <clientname> ] [ <best-paths> ] [ <backup-paths> ] ] [
TABLE_route_count [ <mask_len> ] [ <count> ] ] ] ]
```

Syntax Description

show	Show running system information
route	Display IPv6 routing table
routing	Display routing information
vrf	(Optional) Display per-VRF information
<i>vrf-name</i>	(Optional) VRF name
<i>vrf-known-name</i>	(Optional) Known VRF name
vrf-all	(Optional) Display information for all VRFs
ipv6	Display IPv6 information
unicast	(Optional) Display unicast information
topology	(Optional) Display per-topology information
<i>topology-name</i>	(Optional) topology name
l3vm-info	(Optional) Display corresponding L3VM information
rpf	(Optional) Display RPF information for multicast source
longer-prefixes	(Optional) Display matching routes with mask-lengths >= prefix
shorter-prefixes	(Optional) Display matching routes with mask-lengths <= prefix
<i>ipv6-protocol</i>	(Optional) Display routes for protocol (or route type)
all	(Optional) Display routes for protocol for backup next-hops too
next-hop	(Optional) Display routes with this next-hop only
interface	(Optional) Display routes with this output interface only
<i>interface</i>	(Optional) Interface Name

<i>updated</i>	(Optional) Display routes filtered by last updated time
<i>since</i>	(Optional) Display those routes updated since this time
<i>stime</i>	(Optional) Since this date/time [[CC]YY-][MM-DD-]HH:MM[:SS]
<i>until</i>	(Optional) Display those routes updated until this time
<i>utime</i>	(Optional) Until this date/time [[CC]YY-][MM-DD-]HH:MM[:SS]
<i>summary</i>	(Optional) Display route counts
<i>deleted</i>	(Optional) Display delete-pending routes also
<i>detail</i>	(Optional) Display routes in full detail
<i>__readonly__</i>	(Optional)
<i>TABLE_vrf</i>	(Optional)
<i>vrf-name-out</i>	(Optional)
<i>TABLE_addrf</i>	(Optional)
<i>addrf</i>	(Optional)
<i>TABLE_prefix</i>	(Optional)
<i>ucast-nhops</i>	(Optional)
<i>mcast-nhops</i>	(Optional)
<i>attached</i>	(Optional)
<i>TABLE_path</i>	(Optional)
<i>ubest</i>	(Optional)
<i>mbest</i>	(Optional)
<i>ifname</i>	(Optional)
<i>pref</i>	(Optional)
<i>tag</i>	(Optional)
<i>metric</i>	(Optional)
<i>uptime</i>	(Optional)
<i>clientname</i>	(Optional)
<i>type</i>	(Optional)
<i>stale</i>	(Optional)
<i>hidden</i>	(Optional)

TABLE_summary	(Optional)
<i>routes</i>	(Optional)
<i>paths</i>	(Optional)
<i>multicast_paths</i>	(Optional)
TABLE_unicast	(Optional)
<i>clientname</i>	(Optional)
<i>best-paths</i>	(Optional)
<i>backup-paths</i>	(Optional)
TABLE_multicast	(Optional)
<i>clientname</i>	(Optional)
<i>best-paths</i>	(Optional)
<i>backup-paths</i>	(Optional)
TABLE_route_count	(Optional)
<i>mask_len</i>	(Optional)
<i>count</i>	(Optional)

Command Mode

- /exec

<i>zero-successors</i>	(Optional) Show only zero successor entries
<i>detail-links</i>	(Optional) Show all links in topology table with details
<i>all-links</i>	(Optional) Show all links in topology table
<i>__readonly__</i>	(Optional)
<i>TABLE_asn</i>	(Optional) AS number table
<i>asn</i>	(Optional) AS number
<i>router_id</i>	(Optional) Router-ID
<i>TABLE_vrf</i>	(Optional) VRF table
<i>vrf</i>	(Optional) VRF name
<i>head_serial</i>	(Optional) Head of transmit DNDB thread
<i>next_serial</i>	(Optional) Next serial number to use
<i>route_count</i>	(Optional) Number of Routes in the topology table
<i>replies_pending</i>	(Optional) Number of replies pending
<i>dummies</i>	(Optional) Dummies
<i>eigrp_name</i>	(Optional) EIGRP ddb name
<i>num_if</i>	(Optional) Number of interfaces in this AS
<i>num_neighbors</i>	(Optional) Number of EIGRP neighbors in this AS
<i>num_active_if</i>	(Optional) Number of active interfaces
<i>TABLE_quiescent_if</i>	(Optional) Quiescent Interfaces table
<i>ifname</i>	(Optional) Interface name
<i>TABLE_ent</i>	(Optional) Table entry
<i>ip_prefix</i>	(Optional) IP prefix
<i>ipv6_prefix</i>	(Optional) IPv6 prefix
<i>active</i>	(Optional) Route Active?
<i>num_successors</i>	(Optional) Number of successors for the dndb
<i>feasible_distance</i>	(Optional) Feasible Distance
<i>tag</i>	(Optional) Administrator tag value
<i>send_flag</i>	(Optional) Send Flag
<i>xmit_serno</i>	(Optional) Xmit serial number

<i>xmit_refcount</i>	(Optional) xmit ref count (Number of active senders)
<i>xmit_anchored</i>	(Optional) Xmit anchored?
<i>outstd_replies</i>	(Optional) Number of Outstanding replies
<i>query_origin</i>	(Optional) Query origin
<i>retry_count</i>	(Optional) Number of retries done on the active DNDB
<i>act_min_time</i>	(Optional) Shortest time the destination was active
<i>act_max_time</i>	(Optional) Longest time the destination was active
<i>act_avg_time</i>	(Optional) Average time the destination was active
<i>act_count</i>	(Optional) Active count
<i>peers_sia_stuck</i>	(Optional) Number of peers stuck in SIA
TABLE_succ	(Optional) Successor table
<i>s_nexthop</i>	(Optional) Next hop IPv4 address
<i>s_v6nexthop</i>	(Optional) IPv6 next hop address
<i>s_origin</i>	(Optional) Origin(IPv4) of this DRDB
<i>s_v6origin</i>	(Optional) Origin(IPv6) of this DRDB
<i>s_metric</i>	(Optional) Composite metric value for the route
<i>s_succ_metric</i>	(Optional) Composite metric (successor's view) for the route
<i>s_bandwidth</i>	(Optional) Minimum bandwidth of the path
<i>s_delay</i>	(Optional) Total delay of the path
<i>s_reliability</i>	(Optional) Reliability
<i>s_load</i>	(Optional) Load
<i>s_min_mtu</i>	(Optional) Minimum mtu of the path
<i>s_hop_count</i>	(Optional) Number of hops to reach the destination network
<i>s_int_tag</i>	(Optional) Internal tag
<i>s_reply_status</i>	(Optional) Reply status flag
<i>s_sia_status</i>	(Optional) SIA status flag
<i>s_external</i>	(Optional) Route is external?
<i>s_ext_routerid</i>	(Optional) Originating Router-ID
<i>s_ext_asn</i>	(Optional) AS number where the route info originated

<i>s_ext_proto</i>	(Optional) Protocol which originated this route
<i>s_ext_metric</i>	(Optional) External protocol metric
<i>s_ext_admin_tag</i>	(Optional) External admin flag
<i>s_exterior_flag</i>	(Optional) Exterior flag
<i>s_send_flag</i>	(Optional) DRDB send flag
<i>s_send_flag_hex</i>	(Optional) DRDB Send flag in hex
<i>s_ifname</i>	(Optional) Interface this route info came in on
<i>s_xmit_serno</i>	(Optional) Xmit Serial number of this entry
<i>s_xmit_anchored</i>	(Optional) Xmit anchored flag
TABLE_reply_status	(Optional) Reply-status table
<i>rs_ipaddr</i>	(Optional) IP addr of peer from which replies are pending
<i>rs_ifname</i>	(Optional) Interface on which replies are pending
TABLE_sia_status	(Optional) SIA-status table
<i>ss_ipaddr</i>	(Optional) IP addr of peer from which SIA replies are pending
<i>ss_ifname</i>	(Optional) Interface on which SIA replies are pending
<i>eigrp-ptag</i>	(Optional)

Command Mode

- /exec

show

```
show { { ip eigrp [ <eigrp-ptag> ] neighbors [ detail | state ] { [ <interface> ] | { [ <address> ] [ vrf { <vrf-name>
| <vrf-known-name> | all } ] } } } | { ipv6 eigrp [ <eigrp-ptag> ] neighbors [ detail | state ] { [ <interface> ] |
{ [ <ipv6-addr> ] [ vrf { <vrf-name> | <vrf-known-name> | all } ] } } } [ __readonly__ TABLE_asn <asn>
TABLE_vrf <vrf> [ { TABLE_peer <peer_handle> { <peer_ipaddr> | <peer_ipv6addr> } <peer_ifname>
<peer_holdtime> <peer_srtt> <peer_rto> <peer_xmitq_count> <peer_last_seqno> <peer_uptime> [
<peer_static> <peer_nsf_restart_time> <peer_last_startup_serno> <peer_ios_major_ver> <peer_ios_minor_ver>
<peer_eigrp_major_rev> <peer_eigrp_minor_rev> <peer_retrans_count> <peer_retry_count>
<peer_wait_for_init> <peer_wait_for_init_ack> <peer_reinit_start_time> <peer_prefix_count>
<peer_info_stubbed> <peer_info_receive_only> [ <peer_info_allow_connected> <peer_info_allow_statics>
<peer_info_allow_summaries> <peer_info_allow_redist> <peer_info_allow_leaking> ] [ <peer_state_cr_mode>
<peer_state_need_init> <peer_state_need_init_ack> <peer_state_going_down> <peer_state_coming_up>
<peer_state_peer_deleted> <peer_state_nsf_in_progress> <peer_state_need_eot>
<peer_state_use_nsf_startup_mode> <peer_state_await_nsf_convergence> <peer_state_initiated_gr>
<peer_state_cr_sequence> <peer_state_rcv_probe_sequence> <peer_state_send_probe_sequence> ]
<peer_suppress_queries> ] [ TABLE_xmitq_pkts <pkt_qtype> <pkt_counter> <pkt_opcode> <pkt_ack_seqno>
<pkt_start_seqno> <pkt_end_seqno> <pkt_len> <pkt_time_sent> <pkt_init_flag> <pkt_sequenced> } ] } [ {
TABLE_suspended_peer { <susp_peer_ipaddr> | <susp_peer_ipv6addr> } <susp_peer_ifname>
<susp_peer_restart_reqd> <susp_peer_restart_time> } ] ] }
```

Syntax Description

show	Show running system information
ip	Display IP information
ipv6	Display IPv6 information
eigrp	Display EIGRP status and configuration
vrf	(Optional) Display per-VRF information
<i>vrf-name</i>	(Optional) VRF name
<i>vrf-known-name</i>	(Optional) Known VRF name
all	(Optional) Display information for all VRFs
<i>eigrp-ptag</i>	(Optional) Process tag
neighbors	IP-EIGRP neighbors
detail	(Optional) Show detailed peer information
state	(Optional) Show detailed peer and state information
<i>interface</i>	(Optional) Interface
<i>address</i>	(Optional) IP-EIGRP neighbor address
__readonly__	(Optional)

TABLE_asn	(Optional) AS number table
<i>asn</i>	(Optional) AS number
TABLE_vrf	(Optional) VRF table
<i>vrf</i>	(Optional) VRF name
TABLE_peer	(Optional) Peer table
<i>peer_handle</i>	(Optional) Peer handle
<i>peer_ipaddr</i>	(Optional) Peer's IP addr
<i>peer_ifname</i>	(Optional) Peering Interface name
<i>peer_holdtime</i>	(Optional) Hold-time for the peer
<i>peer_uptime</i>	(Optional) Peer Up-time
<i>peer_srtt</i>	(Optional) SRTT
<i>peer_rto</i>	(Optional) RTO
<i>peer_xmitq_count</i>	(Optional) Xmit Q count
<i>peer_last_seqno</i>	(Optional) Last received Sequence number
<i>peer_static</i>	(Optional) Static peer?
<i>peer_nsf_restart_time</i>	(Optional) Timestamp of last nsf restart
<i>peer_last_startup_serno</i>	(Optional) Target serial number for unicast startup
<i>peer_ios_major_ver</i>	(Optional) IOS major version
<i>peer_ios_minor_ver</i>	(Optional) IOS minor version
<i>peer_eigrp_major_rev</i>	(Optional) EIGRP major revision
<i>peer_eigrp_minor_rev</i>	(Optional) EIGRP minor revision
<i>peer_retrans_count</i>	(Optional) Number of retransmissions to this peer
<i>peer_retry_count</i>	(Optional) Retries for packets on xmit Q
<i>peer_wait_for_init</i>	(Optional) Waiting for INIT
<i>peer_wait_for_init_ack</i>	(Optional) Waiting for INIT-ACK
<i>peer_reinit_start_time</i>	(Optional) Re-Init start time
<i>peer_prefix_count</i>	(Optional) Number of Prefixes received from the peer
<i>peer_info_stubbed</i>	(Optional) Peer is a Stub?
<i>peer_info_receive_only</i>	(Optional) Peer is receive-only?

<i>peer_info_allow_connected</i>	(Optional) Peer advertises connected routes?
<i>peer_info_allow_statics</i>	(Optional) Peer advertises static routes?
<i>peer_info_allow_summaries</i>	(Optional) Peer advertises summary routes?
<i>peer_info_allow_redist</i>	(Optional) Peer advertises redistributed routes?
<i>peer_info_allow_leaking</i>	(Optional) Peer advertises routes permitted by leak-map?
<i>peer_state_cr_mode</i>	(Optional) Conditional Received mode set?
<i>peer_state_need_init</i>	(Optional) Waiting for Init from peer?
<i>peer_state_need_init_ack</i>	(Optional) Waiting for InitAck from peer?
<i>peer_state_going_down</i>	(Optional) Peer-Going-down?
<i>peer_state_coming_up</i>	(Optional) Peer-Coming-up?
<i>peer_state_peer_deleted</i>	(Optional) Peer-Deleted?
<i>peer_state_nsf_in_progress</i>	(Optional) Peer is nsf restarting?
<i>peer_state_need_eot</i>	(Optional) Expect end-of-table from this peer?
<i>peer_state_use_nsf_startup_mode</i>	(Optional) Use nsf startup method?
<i>peer_state_await_nsf_convergence</i>	(Optional) The peer is waiting eot from us?
<i>peer_state_initiated_gr</i>	(Optional) Initiated graceful restart?
<i>peer_state_cr_sequence</i>	(Optional) Expected sequence number of CR packet
<i>peer_state_rcv_probe_sequence</i>	(Optional) Sequence number of last probe packet received
<i>peer_state_send_probe_sequence</i>	(Optional) Sequence number of next probe to send
<i>peer_suppress_queries</i>	(Optional) Suppress queries to this peer?
TABLE_xmitq_pkts	(Optional) Xmit Q packets table
<i>pkt_qtype</i>	(Optional) XMIT Qtype
<i>pkt_counter</i>	(Optional) Packet counter for the packets present in the transmit queue
<i>pkt_opcode</i>	(Optional) Packet opcode
<i>pkt_ack_seqno</i>	(Optional) Ack/Sequence number of this packet
<i>pkt_start_seqno</i>	(Optional) Starting serial number
<i>pkt_end_seqno</i>	(Optional) Ending serial number
<i>pkt_len</i>	(Optional) Packet length
<i>pkt_time_sent</i>	(Optional) Time at which the packet is transmitted

<i>pkt_init_flag</i>	(Optional) Init-flag should be sent in the packet?
<i>pkt_sequenced</i>	(Optional) Packet is sequenced?
TABLE_suspended_peer	(Optional) Suspended peer table
<i>susp_peer_ipaddr</i>	(Optional) IP address of suspended peer
<i>susp_peer_ifname</i>	(Optional) Interface through which we are connected to the suspended peer
<i>susp_peer_restart_reqd</i>	(Optional) Suspended peer restart required?
<i>susp_peer_restart_time</i>	(Optional) Suspended peer restart time
<i>eigrp-ptag</i>	(Optional)

Command Mode

- /exec

show

show [pending]

Syntax Description

show	Display region configurations
pending	(Optional) Display the new mst configuration to be applied

Command Mode

- /exec/configure/spanning-tree/mst/configuration

show

```
show { ip mbgp [ vrf { <vrf-name> | <vrf-known-name> | ALL_VRFS_012345678901234 } ] | ip bgp [ vrf { <vrf-name> | <vrf-known-name> | ALL_VRFS_012345678901234 } ] all | ip bgp [ vrf { <vrf-name> | <vrf-known-name> | ALL_VRFS_012345678901234 } ] [ ipv4 { unicast | multicast } ] } { rib-install | rib-uninstall | rib-pending } [ vrf { <vrf-name> | <vrf-known-name> | ALL_VRFS_012345678901234 } ]
```

Syntax Description

show	Show running system information
ip	Display IP information
bgp	Display BGP status and configuration
mbgp	Display MBGP status and configuration
vrf	(Optional) Virtual Router Context
<i>vrf-name</i>	(Optional) VRF name
<i>vrf-known-name</i>	(Optional) Known VRF name
ipv4	(Optional) Display BGP information for IPv4 address family
unicast	(Optional) Display BGP information for unicast address family
multicast	(Optional) Display BGP information for multicast address family
all	Display BGP information for all address families
rib-install	Routes installed in RIB
rib-uninstall	Routes not installed in RIB
rib-pending	Routes not acknowledged by RIB

Command Mode

- /exec

show

show

Syntax Description

show	Show trigger config
------	---------------------

Command Mode

- /exec/elamns/se13

show

show

Syntax Description

show	Show trigger config
------	---------------------

Command Mode

- /exec/elamns/sel4

show

show

Syntax Description

show	Show trigger config
------	---------------------

Command Mode

- /exec/elamns/se15

show

show

Syntax Description

show	Show trigger config
------	---------------------

Command Mode

- /exec/elamns/sel6

show

show

Syntax Description

show	Show trigger config
------	---------------------

Command Mode

- /exec/elamns/se17

show

show

Syntax Description

show	Show trigger config
------	---------------------

Command Mode

- /exec/elanms/outse10

show

show

Syntax Description

show	Show trigger config
------	---------------------

Command Mode

- /exec/elamns/outse15

show_interface

show_interface <single>

Syntax Description

show_interface	Port_mgr hidden command
<i>single</i>	interface type and number in module/slot format

Command Mode

- /exec

shut

[no] shut

Syntax Description

no	(Optional) Negate a command or set its defaults
shut	Shut a monitor session

Command Mode

- /exec/configure/monitor-common

shutdown

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Shutdown current VRF

Command Mode

- /exec/configure/vrf

shutdown

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Shutdown this instance of RIP

Command Mode

- /exec/configure/router-rip /exec/configure/router-rip/router-rip-vrf

shutdown

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Shutdown the OSPF protocol instance

Command Mode

- /exec/configure/router-ospf /exec/configure/router-ospf/vrf

shutdown

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	

Command Mode

- /exec/configure/itd /exec/configure/itd-inout

shutdown

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	

Command Mode

- /exec/configure/itd /exec/configure/itd-inout

shutdown

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Enable/disable an interface

Command Mode

- /exec/configure/if-mgmt-ether

shutdown

[no] shutdown [force]

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Enable/disable an interface
force	(Optional) Enable/disable an interface

Command Mode

- /exec/configure/if-ethernet /exec/configure/if-ethernet-switch /exec/configure/if-ethernet-all /exec/configure/if-eth-base /exec/configure/if-port-channel /exec/configure/if-eth-port-channel /exec/configure/if-ethernet-all /exec/configure/if-ethernet-p2p /exec/configure/if-remote-ethernet-sub /exec/configure/if-ether-sub /exec/configure/if-ether-sub-p2p /exec/configure/if-port-channel-sub

shutdown

[no] shutdown [force]

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Enable/disable an interface
force	(Optional) Enable/disable an interface

Command Mode

- /exec/configure/if-ethernet /exec/configure/if-ethernet-switch /exec/configure/if-ethernet-all /exec/configure/if-eth-base /exec/configure/if-port-channel /exec/configure/if-eth-port-channel /exec/configure/if-ethernet-all /exec/configure/if-ethernet-p2p /exec/configure/if-remote-ethernet-sub /exec/configure/if-ether-sub /exec/configure/if-ether-sub-p2p /exec/configure/if-port-channel-sub

shutdown

[no] shutdown [force]

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Enable/disable an interface
force	(Optional) Enable/disable an interface

Command Mode

- /exec/configure/if-nve

shutdown

[no] shutdown [force]

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Enable/disable an interface
force	(Optional) Enable/disable an interface

Command Mode

- /exec/configure/if-loopback

shutdown

[no] shutdown [force]

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Enable/disable an interface
force	(Optional) Enable/disable an interface

Command Mode

- /exec/configure/if-cpp /exec/configure/if-fv /exec/configure/if-fa /exec/configure/if-svc
/exec/configure/if-fc-tunnel /exec/configure/if-sme /exec/configure/if-ioa /exec/configure/if-overlay
/exec/configure/if-te

shutdown

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Enable/disable an interface

Command Mode

- /exec/configure/if-gig-ether /exec/configure/if-fc /exec/configure/if-bay /exec/configure/if-ext /exec/configure/if-vsan /exec/configure/if-iscsi /exec/configure/if-fcip /exec/configure/if-sme /exec/configure/if-ioa /exec/configure/if-vfc /exec/configure/if-vfc-port-channel

shutdown

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Shutdown MPLS Traffic Engineering

Command Mode

- /exec/configure/te

shutdown

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Disable current explicit-path

Command Mode

- /exec/configure/te/expl-path

shutdown

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Shutdown the CBTS member LSP

Command Mode

- /exec/configure/tunnel-te/cbts-member

shutdown

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Shutdown VLAN switching

Command Mode

- /exec/configure/vlan

shutdown

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Shutdown tunnel interface(s)

Command Mode

- /exec/configure/if-any-tunnel

shutdown

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Shutdown this IS-IS process

Command Mode

- /exec/configure/router-isis/router-isis-vrf-common

shutdown

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Disable MPLS forwarding for IP

Command Mode

- /exec/configure/ldp

shutdown

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	shutdown the OSPF protocol instance

Command Mode

- /exec/configure/router-ospf3 /exec/configure/router-ospf3/vrf

shutdown

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Shutdown this instance of EIGRP

Command Mode

- /exec/configure/router-eigrp/router-eigrp-vrf-common /exec/configure/router-eigrp/router-eigrp-af-common

shutdown

shutdown | no shutdown

Syntax Description

no	Negate a command or set its defaults
shutdown	suspend vPC locally

Command Mode

- /exec/configure/vpc-domain

shutdown

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Administratively shutdown BGP protocol

Command Mode

- /exec/configure/router-bgp

shutdown

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Administratively shutdown this BMP server

Command Mode

- /exec/configure/router-bgp/router-bgp-bmp-server

shutdown

[no | default] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
shutdown	Administratively shutdown this neighbor

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor-sess

shutdown

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Change the admin status of the bundle

Command Mode

- /exec/configure/anycast

shutdown

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Enable/disable an interface

Command Mode

- /exec/configure/if-vlan-common

shutdown

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Enable or disable a VR

Command Mode

- /exec/configure/if-eth-any/vrrp

shutdown

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Shut down VRRPv3

Command Mode

- /exec/configure/vrrpv3

shutdown

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Shut down the group

Command Mode

- /exec/configure/if-eth-any/vrrpv3

shutdown

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Shut down the pathway

Command Mode

- /exec/configure/if-eth-any/vrrs

shutdown force

[no] shutdown force

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Enable/disable an interface
force	Enable/disable an interface

Command Mode

- /exec/configure/if-mgmt-ether

shutdown lan

shutdown lan

Syntax Description

shutdown	Enable/disable an interface
lan	Shut all LAN VLANs on interface

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-non-member /exec/configure/if-port-channel

shutdown lan

[no] shutdown lan

Syntax Description

no	Negate a command or set its defaults
shutdown	Enable/disable an interface
lan	Shut all LAN VLANs on interface

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-non-member /exec/configure/if-port-channel

signalling advertise explicit-null

[no] signalling advertise explicit-null | signalling advertise explicit-null [<acl>]

Syntax Description

no	Negate a command or set its defaults
signalling	Traffic Engineering Signalling Parameters
advertise	Signalling advertisement parameters
explicit-null	Advertise explicit-null label in signalling messages
<i>acl</i>	(Optional) Access list

Command Mode

- /exec/configure/te

signalling client batch-time

[no] signalling client batch-time <msec>

Syntax Description

signalling	Configure RSVP Signalling information
client	Client information
batch-time	Time interval between batched messages to client
<i>msec</i>	Batch-time msec [use 0 to disable, else minimum timer value is 20 msec]

Command Mode

- /exec/configure/ip-rsvp

signalling hello graceful-restart

[no] signalling hello graceful-restart

Syntax Description

signalling	Configure RSVP Signalling information
hello	RSVP Hello configuration commands
graceful-restart	RSVP Graceful restart commands

Command Mode

- /exec/configure/ip-rsvp

signalling hello graceful-restart refresh interval

[no] signalling hello graceful-restart refresh interval <value>

Syntax Description

signalling	Configure RSVP Signalling information
hello	RSVP Hello configuration commands
graceful-restart	RSVP Graceful restart commands
refresh	Configure RSVP Hello refresh behavior for Graceful Restart
interval	Time between sending Hello Requests for Graceful Restart
<i>value</i>	Hello interval in msec

Command Mode

- /exec/configure/ip-rsvp

signalling hello graceful-restart refresh misses

[no] signalling hello graceful-restart refresh misses <value>

Syntax Description

signalling	Configure RSVP Signalling information
hello	RSVP Hello configuration commands
graceful-restart	RSVP Graceful restart commands
refresh	Configure RSVP Hello refresh behavior for Graceful Restart
misses	Number of Hello misses for Graceful Restart
<i>value</i>	Number of missed Hello Acks which triggers neighbor down

Command Mode

- /exec/configure/ip-rsvp

signalling hello graceful-restart send recovery-time

[no] signalling hello graceful-restart send recovery-time <value>

Syntax Description

signalling	Configure RSVP Signalling information
hello	RSVP Hello configuration commands
graceful-restart	RSVP Graceful restart commands
send	Configure the restart-time in outgoing Hello msgs
recovery-time	Configure the recovery-time in outgoing GR Hello msgs
<i>value</i>	recovery-time in msec

Command Mode

- /exec/configure/ip-rsvp

signalling hello graceful-restart send restart-time

[no] signalling hello graceful-restart send restart-time <value>

Syntax Description

signalling	Configure RSVP Signalling information
hello	RSVP Hello configuration commands
graceful-restart	RSVP Graceful restart commands
send	Configure the restart-time in outgoing Hello msgs
restart-time	Configure the restart-time in outgoing GR Hello msgs
<i>value</i>	restart-time in msec

Command Mode

- /exec/configure/ip-rsvp

signalling hello reroute

[no] signalling hello reroute

Syntax Description

signalling	Configure RSVP Signalling information
hello	RSVP Hello configuration commands
reroute	RSVP Reroute commands

Command Mode

- /exec/configure/ip-rsvp

signalling initial-retransmit-delay

[no] signalling initial-retransmit-delay <msec>

Syntax Description

signalling	Configure RSVP Signalling information
initial-retransmit-delay	RSVP Initial retransmit delay
<i>msec</i>	Initial retransmit delay in millisec

Command Mode

- /exec/configure/ip-rsvp

signalling patherr state-removal

[no] signalling patherr state-removal

Syntax Description

signalling	Configure RSVP Signalling information
patherr	Configure Path-Error processing
state-removal	Setup automatic removal of path-state

Command Mode

- /exec/configure/ip-rsvp

signalling rate-limit

```
[no] signalling rate-limit { [ interval <msec> ] [ limit <messages> ] } | { [ limit <messages> ] [ interval <msec> ] }
```

Syntax Description

signalling	Configure RSVP Signalling information
rate-limit	Configure rate-limiting
interval	(Optional) Configure scheduling interval
<i>msec</i>	(Optional) Interval in millisecc
limit	(Optional) Configure message limit per scheduling interval
<i>messages</i>	(Optional) Message limit value

Command Mode

- /exec/configure/ip-rsvp

signalling refresh interval

[no] signalling refresh interval <seconds>

Syntax Description

signalling	Configure RSVP Signalling information
refresh	Configure RSVP signaling refresh parameters
interval	Set signaling refresh interval
<i>seconds</i>	Signaling refresh interval in seconds

Command Mode

- /exec/configure/ip-rsvp

signalling refresh misses

[no] signalling refresh misses <value>

Syntax Description

signalling	Configure RSVP Signalling information
refresh	Configure RSVP signaling refresh parameters
misses	Set refresh misses tolerated before expiring a state
<i>value</i>	Refresh miss value

Command Mode

- /exec/configure/ip-rsvp

signalling refresh pace

[no] signalling refresh pace

Syntax Description

signalling	Configure RSVP Signalling information
refresh	Configure RSVP signaling refresh parameters
pace	Pace sending of refresh messages

Command Mode

- /exec/configure/ip-rsvp

signalling refresh reduction

[no] signalling refresh reduction

Syntax Description

signalling	Configure RSVP Signalling information
refresh	Configure RSVP signaling refresh parameters
reduction	Enable, disable or set refresh reduction parameters

Command Mode

- /exec/configure/ip-rsvp

signalling refresh reduction ack-delay

[no] signalling refresh reduction ack-delay <msec>

Syntax Description

signalling	Configure RSVP Signalling information
refresh	Configure RSVP signaling refresh parameters
reduction	Enable, disable or set refresh reduction parameters
ack-delay	Set delay for sending ACK messages
<i>msec</i>	ACK delay value in millisec

Command Mode

- /exec/configure/ip-rsvp

signalling refresh reduction bundle-max-size

[no] signalling refresh reduction bundle-max-size <value>

Syntax Description

signalling	Configure RSVP Signalling information
refresh	Configure RSVP signaling refresh parameters
reduction	Enable, disable or set refresh reduction parameters
bundle-max-size	Set bundle-maximum-size
<i>value</i>	Bundle size in bytes, use zero to disable bundling

Command Mode

- /exec/configure/ip-rsvp

signalling refresh reduction bundle-transmit-time

[no] signalling refresh reduction bundle-transmit-time <msec>

Syntax Description

signalling	Configure RSVP Signalling information
refresh	Configure RSVP signaling refresh parameters
reduction	Enable, disable or set refresh reduction parameters
bundle-transmit-time	Set bundle-transmit-time
<i>msec</i>	Bundle transmit time value in msec

Command Mode

- /exec/configure/ip-rsvp

signalling refresh reduction rapid-retransmit

[no] signalling refresh reduction rapid-retransmit

Syntax Description

signalling	Configure RSVP Signalling information
refresh	Configure RSVP signaling refresh parameters
reduction	Enable, disable or set refresh reduction parameters
rapid-retransmit	Rapid-retransmit of RSVP messages

Command Mode

- /exec/configure/ip-rsvp

signing level

{ [no] signing level { none | cisco | unsigned } | no signing level }

Syntax Description

no	(Optional) Negate a command or set its defaults
signing	Virtual service package signing settings
level	Package signing level allowed for virtual service installation
none	Most restrictive, don't allow package installation
cisco	Allow only Cisco signed packages
unsigned	Least restrictive, allow unsigned and all signing methods

Command Mode

- /exec/configure/virt-serv-global

site-id

{ site-id <s0> | no site-id }

Syntax Description

no	Negate a command or set its defaults
site-id	site id of the network where switch is deployed
s0	Provide site id

Command Mode

- /exec/configure/callhome

site-of-origin

```
{ site-of-origin { <ext-comm-soo-aa2nn4> | <ext-comm-soo-aa4nn2> } } | { no site-of-origin [ {  
<ext-comm-soo-aa2nn4> | <ext-comm-soo-aa4nn2> } ] }
```

Syntax Description

no	Negate a command or set its defaults
site-of-origin	Site of Origin
<i>ext-comm-soo-aa2nn4</i>	Extcommunity number
<i>ext-comm-soo-aa4nn2</i>	Extcommunity number

Command Mode

- /exec/configure/if-igp /exec/configure/if-mgmt-ether

slave ipv4

[no] slave ipv4 <ip>

Syntax Description

no	(Optional) Negate a command or set its defaults
slave	slave
ipv4	ipv4
<i>ip</i>	IPv4 address (A.B.C.D) of slave

Command Mode

- /exec/configure/ptp-ucast-master

sleep

sleep <i0>

Syntax Description

sleep	Sleep for the specified number of seconds
<i>i0</i>	Enter the number of seconds to sleep

Command Mode

- /exec

sleep instance

[no] sleep instance <inst> [<i0>] | sleep instance <inst> <i0>

Syntax Description

no	Negate a command or set its defaults
sleep	Sleep for the specified number of seconds
instance	Label with an instance number
<i>inst</i>	Instance number
<i>i0</i>	(Optional) Enter the number of seconds to sleep

Command Mode

- /exec/configure

slot

slot <module> { quoted <quoted-cmd> | <cmd> }

Syntax Description

slot	run commands on specific linecard (or set slot for commands that take optional slot number)
<i>module</i>	the slot number (aka module number)
quoted	enter the command with quotes -> pipe redirection and semi-colon are local
<i>quoted-cmd</i>	the command(s) to run on lc separated by <space> <semi-colon> <space>
<i>cmd</i>	the command(s) to run on lc separated by <space> <semi-colon> <space>

Command Mode

- /exec

smtp-host smtp-port reply-to from

```
{ smtp-host { <ipv4> | <ipv6> | <host> } [ smtp-port <port> ] | smtp-port <port> | reply-to <reply> | from <from> |
```

Syntax Description

}	
smtp-host	SMTP server host
<i>ipv4</i>	IPV4 address
<i>host</i>	DNS name
smtp-port	(Optional) SMTP server port
<i>port</i>	(Optional) Port for SMTP server
reply-to	Reply to email address
<i>reply</i>	Provide reply-to email address
from	From email address
<i>from</i>	Provide from email address

Command Mode

- /exec/configure/email

snapshot create

snapshot create <snapshot-name> <snapshot-description>

Syntax Description

snapshot	Create/Delete a snapshot
create	Create a snapshot of running state of selected features
<i>snapshot-name</i>	Name of a snapshot
<i>snapshot-description</i>	Description of a snapshot

Command Mode

- /exec

snapshot delete

snapshot delete <snapshot-name>

Syntax Description

snapshot	Create/Delete a snapshot
delete	Delete a single snapshot or all snapshots
<i>snapshot-name</i>	Name of a snapshot

Command Mode

- /exec

snapshot delete ALL

snapshot delete ALL

Syntax Description

snapshot	Create/Delete a snapshot
delete	Delete a single snapshot or all snapshots
ALL	Delete all snapshots present on the switch

Command Mode

- /exec

snapshot section add

snapshot section add <name> <command> <row-id> <key1> [<key2>]

Syntax Description

snapshot	Create/Delete a snapshot
section	Add/Delete a snapshot section
add	Add a snapshot section
<i>name</i>	Name of a section
<i>command</i>	show' command to generate XML output
<i>row-id</i>	tag of each row entry of the 'show' XML output
<i>key1</i>	first key to distinguish among row entries with
<i>key2</i>	(Optional) second key to distinguish among row entries with

Command Mode

- /exec

snapshot section delete

snapshot section delete <name>

Syntax Description

snapshot	Create/Delete a snapshot
section	Add/Delete a snapshot section
delete	Delete a snapshot section
<i>name</i>	Name of a section

Command Mode

- /exec

snmp-server aaa-user cache-timeout

[no] snmp-server aaa-user cache-timeout <timeout>

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
aaa-user	set duration for which aaa-cached snmp user exists
cache-timeout	timeout for AAA cache
<i>timeout</i>	timeout for which aaa-cached user exists(in secs)

Command Mode

- /exec/configure

snmp-server community

[no] snmp-server community <s0> [{ group <s1> | ro | rw }]

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
community	set community string and access privs
<i>s0</i>	SNMP community string
group	(Optional) Group to which the community belongs
<i>s1</i>	(Optional) Group to which the community belongs
ro	(Optional) Read-only access with this community string
rw	(Optional) Read-write access with this community string

Command Mode

- /exec/configure

snmp-server community

```
{ no snmp-server community <community_name> { use-ipv4acl [ <ipv4_acl_name> ] use-ipv6acl [
<ipv6_acl_name> ] | use-ipv4acl [ <ipv4_acl_name> ] | use-ipv6acl [ <ipv6_acl_name> ] } | snmp-server
community <community_name> { use-ipv4acl <ipv4_acl_name> use-ipv6acl <ipv6_acl_name> | use-ipv4acl
<ipv4_acl_name> | use-ipv6acl <ipv6_acl_name> } }
```

Syntax Description

no	Negate a command or set its defaults
snmp-server	Configure snmp server
community	set community string and access privs
<i>community_name</i>	SNMP community string
use-ipv4acl	Specify IPv4 ACL, the ACL name specified after must be IPv4 ACL.
<i>ipv4_acl_name</i>	(Optional) IPv4 ACL name to filter snmp requests
use-ipv6acl	Specify IPv6 ACL, the ACL name specified after must be IPv6 ACL.
<i>ipv6_acl_name</i>	(Optional) IPv6 ACL name to filter snmp requests

Command Mode

- /exec/configure

snmp-server community use-acl

[no] snmp-server community <community_name> use-acl <acl_name>

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
community	set community string and access privs
<i>community_name</i>	SNMP community string
use-acl	acl name to filter snmp requests
<i>acl_name</i>	acl name to filter snmp requests

Command Mode

- /exec/configure

snmp-server contact

[no] snmp-server contact [<line>]

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
contact	modify sysContact
<i>line</i>	(Optional) modify sysContact

Command Mode

- /exec/configure

snmp-server context

```
[no] snmp-server context <context_name> [ instance <instance-name> ] [ vrf { <vrf-name> | <vrf-known-name> } ] [ topology <topology-name> ]
```

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
context	SNMP context to be mapped
<i>context_name</i>	name of the SNMP context
instance	(Optional) Protocol instance associated with the SNMP context
<i>instance-name</i>	(Optional) Name of the protocol instance
vrf	(Optional) VRF associated with the SNMP context
<i>vrf-name</i>	(Optional) VRF name
<i>vrf-known-name</i>	(Optional) Known VRF name
topology	(Optional) Topology associated with the SNMP context
<i>topology-name</i>	(Optional) name of the Topology

Command Mode

- /exec/configure

snmp-server context type len val

[no] snmp-server context <context_name> type { vrf | topology | instance | vlan | mst } len <i2> val <i3>

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
context	SNMP context to be mapped
<i>context_name</i>	name of the SNMP context
type	type of association to context
instance	Protocol instance associated with the SNMP context
vrf	VRF associated with the SNMP context
topology	Topology associated with the SNMP context
vlan	Vlan id associated with the SNMP context
mst	Mst id associated with the SNMP context
len	Length of value
<i>i2</i>	Length of value
val	Value
<i>i3</i>	Value of variable associated with the SNMP context

Command Mode

- /exec/configure

snmp-server counter cache-enable

[no] snmp-server counter cache-enable

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
counter	Configure port counter configuration
cache-enable	Enable port stats cache

Command Mode

- /exec/configure

snmp-server counter cache enable

[no] snmp-server counter cache enable

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
counter	Configure port counter configuration
cache	port stats cache
enable	enable port stats cache

Command Mode

- /exec/configure

snmp-server counter cache timeout

[no] snmp-server counter cache timeout <timeout>

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
counter	Configure port counter configuration
cache	Port stats cache
timeout	Timeout for port stats cache
<i>timeout</i>	Timeout for which cached port stats exists(in secs)

Command Mode

- /exec/configure

snmp-server enable traps

[no] snmp-server enable traps [<trap_arg> [<trap_sub_category> +]]

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
enable	Enable SNMP Traps
traps	Enable SNMP traps
<i>trap_arg</i>	(Optional) Enable __left__ traps
<i>trap_sub_category</i>	(Optional) Enter the trap

Command Mode

- /exec/configure

snmp-server enable traps bgp

[no] snmp-server enable traps bgp [{ state-changes [<subsystem> +] }]

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
enable	Enable SNMP Traps
traps	Enable SNMP traps
bgp	Enable SNMP BGP traps
state-changes	(Optional) Traps for FSM state changes
<i>subsystem</i>	(Optional) subsystem within BGP for SNMP traps

Command Mode

- /exec/configure

snmp-server enable traps bgp cbgp2

[no] snmp-server enable traps bgp cbgp2 [{ state-changes [<subsystem> +] }]

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
enable	Enable SNMP Traps
traps	Enable SNMP traps
bgp	Enable SNMP BGP traps
cbgp2	Enable SNMP CISCO-BGP-MIBv2 traps
state-changes	(Optional) Traps for FSM state changes
<i>subsystem</i>	(Optional) subsystem within BGP for SNMP traps

Command Mode

- /exec/configure

snmp-server enable traps bgp cbgp2 threshold prefix

[no] snmp-server enable traps bgp cbgp2 threshold prefix

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
enable	Enable SNMP Traps
traps	Enable SNMP traps
bgp	Enable SNMP BGP traps
cbgp2	Enable SNMP CISCO-BGP-MIBv2 traps
threshold	Traps for threshold events
prefix	CISCO specific trap for prefix threshold events

Command Mode

- /exec/configure

snmp-server enable traps bgp threshold prefix

[no] snmp-server enable traps bgp threshold prefix

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
enable	Enable SNMP Traps
traps	Enable SNMP traps
bgp	Enable SNMP BGP traps
threshold	Traps for threshold events
prefix	CISCO specific trap for prefix threshold events

Command Mode

- /exec/configure

snmp-server enable traps eigrp

[no] snmp-server enable traps eigrp [<eigrp-ptag>]

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
enable	Enable SNMP Traps
traps	Enable SNMP traps
eigrp	Enable SNMP EIGRP traps
<i>eigrp-ptag</i>	(Optional) Process tag

Command Mode

- /exec/configure

snmp-server enable traps ospf

[no] snmp-server enable traps ospf [<tag>]

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
enable	Enable SNMP Traps
traps	Enable SNMP traps
ospf	Enable SNMP OSPF traps
<i>tag</i>	(Optional) Process tag

Command Mode

- /exec/configure

snmp-server enable traps ospf lsa

[no] snmp-server enable traps ospf [<tag>] lsa

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
enable	Enable SNMP Traps
traps	Enable SNMP traps
ospf	Enable SNMP OSPF traps
<i>tag</i>	(Optional) Process tag
lsa	Allow sending LSA traps

Command Mode

- /exec/configure

snmp-server enable traps ospf rate-limit

```
{ { no snmp-server enable traps ospf [ <tag> ] rate-limit [ <window> <rate> ] } | { snmp-server enable traps ospf [ <tag> ] rate-limit <window> <rate> } }
```

Syntax Description

no	Negate a command or set its defaults
snmp-server	Configure snmp server
enable	Enable SNMP Traps
traps	Enable SNMP traps
ospf	Enable SNMP OSPF traps
<i>tag</i>	(Optional) Process tag
rate-limit	Trap rate limit values
<i>window</i>	(Optional) Rate limit window size in seconds
<i>rate</i>	(Optional) Max number of traps sent in window time
<i>tag</i>	(Optional)

Command Mode

- /exec/configure

snmp-server enable traps ospfv3

[no] snmp-server enable traps ospfv3 [<tag>]

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
enable	Enable SNMP Traps
traps	Enable SNMP traps
ospfv3	Enable SNMP OSPFv3 traps
<i>tag</i>	(Optional) Process tag

Command Mode

- /exec/configure

snmp-server enable traps ospfv3 lsa

[no] snmp-server enable traps ospfv3 [<tag>] lsa

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
enable	Enable SNMP Traps
traps	Enable SNMP traps
ospfv3	Enable SNMP OSPFv3 traps
<i>tag</i>	(Optional) Process tag
lsa	Enable SNMP OSPFv3 LSA traps

Command Mode

- /exec/configure

snmp-server enable traps ospfv3 rate-limit

```
{ { no snmp-server enable traps ospfv3 [ <tag> ] rate-limit } | { snmp-server enable traps ospfv3 [ <tag> ]
rate-limit <swindow> <rate> } }
```

Syntax Description

no	Negate a command or set its defaults
snmp-server	Configure snmp server
enable	Enable SNMP Traps
traps	Enable SNMP traps
ospfv3	Enable SNMP OSPFv3 traps
<i>tag</i>	(Optional) Process tag
rate-limit	Trap rate limit values
<i>swindow</i>	Rate limit window size in seconds
<i>rate</i>	Max number of traps sent in window time
<i>tag</i>	(Optional)

Command Mode

- /exec/configure

snmp-server enable traps storm-control trap-rate

[no] snmp-server enable traps storm-control trap-rate <rate-per-minute>

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
enable	Enable SNMP Traps
traps	Enable SNMP traps
storm-control	Enable storm-control traps
trap-rate	Number of traps per minute
<i>rate-per-minute</i>	per Minute (0 means no upper rate)

Command Mode

- /exec/configure

snmp-server engineID local

snmp-server engineID local <engineID> | no snmp-server engineID local [<engineID>]

Syntax Description

no	Negate a command or set its defaults
snmp-server	Configure snmp server
engineID	Configure a local SNMPv3 engineID
local	engineID of the local agent
<i>engineID</i>	engine ID should be an even number of hexadecimal characters, which ranges from 10 to 64 where every two hexadecimal characters should be separated by colon. Including colons-

Command Mode

- /exec/configure

snmp-server force-unload-feature

snmp-server force-unload-feature <feature_name>

Syntax Description

snmp-server	Configure snmp server
force-unload-feature	unload mibs of conditional feature forcefully
<i>feature_name</i>	conditional feature name

Command Mode

- /exec/configure

snmp-server globalEnforcePriv

[no] snmp-server globalEnforcePriv

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
globalEnforcePriv	globally enforce privacy for all the users

Command Mode

- /exec/configure

snmp-server host

```
[no] snmp-server host <host0> { <s6> | [ informs | traps ] } { { version { 1 <s0> | 2c <s1> | 3 { auth <s2> | noauth <s3> | priv <s4> } } } | <s5> } } [ udp-port <i1> ]
```

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
host	Specify hosts to receive SNMP notifications
<i>host0</i>	IPv4 or IPv6 address or DNS Name of SNMP notification host
informs	(Optional) Send Inform messages to this host
traps	(Optional) Send Traps messages to this host
version	SNMP version to use for notification messages
1	Use SNMPv1
<i>s0</i>	SNMP community string or SNMPv3 user name
udp-port	(Optional) The notification host's UDP port number
<i>i1</i>	(Optional) The notification host's UDP port number
2c	Use SNMPv2c
<i>s1</i>	SNMP community string or SNMPv3 user name
3	Use SNMPv3
auth	Use the SNMPv3 authNoPriv Security Level
<i>s2</i>	SNMP community string or SNMPv3 user name
noauth	Use the SNMPv3 noAuthNoPriv Security Level
<i>s3</i>	SNMP community string or SNMPv3 user name
priv	Use the SNMPv3 authPriv Security Level
<i>s4</i>	SNMP community string or SNMPv3 user name
<i>s5</i>	SNMP community string or SNMPv3 user name
<i>s6</i>	SNMP community string or SNMPv3 user name

Command Mode

- /exec/configure

snmp-server host filter-vrf

[no] snmp-server host <host0> filter-vrf { <vrf-name> | <vrf-known-name> } [udp-port <i1>]

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
host	Specify hosts to receive SNMP notifications
<i>host0</i>	IPv4 or IPv6 address or DNS Name of SNMP notification host
filter-vrf	Filters notifications to the notification host receiver based on the configured VRF
<i>vrf-name</i>	VRF name
<i>vrf-known-name</i>	Known VRF name
udp-port	(Optional) The notification host's UDP port number
<i>i1</i>	(Optional) The notification host's UDP port number

Command Mode

- /exec/configure

snmp-server host source

[no] snmp-server host <host0> { source-interface <ifName> } [udp-port <i1>]

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
host	Specify hosts to send SNMP notifications
<i>host0</i>	IPv4 or IPv6 address or DNS Name of SNMP notification host
source-interface	Source interface to be used for sending out SNMP notifications to this host
<i>ifName</i>	Source interface name
udp-port	(Optional) The notification host's UDP port number
<i>i1</i>	(Optional) The notification host's UDP port number

Command Mode

- /exec/configure

snmp-server host use-vrf

[no] snmp-server host <host0> use-vrf { <vrf-name> | <vrf-known-name> } [udp-port <i1>]

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
host	Specify hosts to receive SNMP notifications
<i>host0</i>	IPv4 or IPv6 address or DNS Name of SNMP notification host
use-vrf	Configures SNMP to use the selected VRF to communicate with the host receiver
<i>vrf-name</i>	VRF name
<i>vrf-known-name</i>	Known VRF name
udp-port	(Optional) The notification host's UDP port number
<i>i1</i>	(Optional) The notification host's UDP port number

Command Mode

- /exec/configure

snmp-server host use_vrf

```
[no] snmp-server host <host0> { use_vrf <s0> | filter_vrf <s1> } [ udp-port <i1> ]
```

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
host	Specify hosts to receive SNMP notifications
<i>host0</i>	IPv4 or IPv6 address or DNS Name of SNMP notification host
use_vrf	Configures SNMP to use the selected VRF to communicate with the host receiver
<i>s0</i>	VRF name
filter_vrf	Filters notifications to the notification host receiver based on the configured VRF
<i>s1</i>	VRF name
udp-port	(Optional) The notification host's UDP port number
<i>i1</i>	(Optional) The notification host's UDP port number

Command Mode

- /exec/configure

snmp-server load-cond-feature

[no] snmp-server load-cond-feature <feature_name>

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
load-cond-feature	load or unload mibs of conditional feature
<i>feature_name</i>	conditional feature name

Command Mode

- /exec/configure

snmp-server load-mib

[no] snmp-server load-mib <mib_name>

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
load-mib	load a given mib
<i>mib_name</i>	mib module name

Command Mode

- /exec/configure

snmp-server location

[no] snmp-server location [<line>]

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
location	modify sysLocation
<i>line</i>	(Optional) modify sysLocation

Command Mode

- /exec/configure

snmp-server mib community-map context

[no] snmp-server mib community-map <community_name> context <context_name>

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
mib	mib access parameters
community-map	SNMP community
<i>community_name</i>	SNMP community string
context	SNMP context to be mapped
<i>context_name</i>	name of the SNMP context

Command Mode

- /exec/configure

snmp-server mib mpls vpn max-threshold

[no] snmp-server mib mpls vpn max-threshold <time>

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Modify non engine SNMP parameters
mib	MIB commands
mpls	Configurations for MPLS mibs
vpn	Config special SNMP MPLS VPN objects
max-threshold	Config to control MPLS-VPN max threshold exceeded traps
<i>time</i>	Seconds before re-issuing maximum threshold trap

Command Mode

- /exec/configure

snmp-server protocol enable

[no] snmp-server protocol enable

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
protocol	snmp protocol operations
enable	Enable/Disable snmp protocol operations

Command Mode

- /exec/configure

snmp-server source-interface informs

[no] snmp-server source-interface { informs } <ifName>

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
source-interface	Source interface to be used for sending out SNMP notifications
<i>ifName</i>	Source interface name
informs	SNMP Inform notifications for which this source interface needs to be used

Command Mode

- /exec/configure

snmp-server source-interface traps

[no] snmp-server source-interface { traps } <ifName>

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
source-interface	Source interface to be used for sending out SNMP notifications
<i>ifName</i>	Source interface name
traps	SNMP Trap notifications for which this source interface needs to be used

Command Mode

- /exec/configure

snmp-server system-shutdown

[no] snmp-server system-shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
system-shutdown	Configure snmp-server for reload(2)

Command Mode

- /exec/configure

snmp-server tcp-session

[no] snmp-server tcp-session [auth]

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
tcp-session	Enable one time authentication for snmp over tcp session.
auth	(Optional) Enable one time authentication for snmp over tcp session.

Command Mode

- /exec/configure

snmp-server user

```
{ no snmp-server user <user_name> { use-ipv4acl [ <ipv4_acl_name> ] use-ipv6acl [ <ipv6_acl_name> ] |
use-ipv4acl [ <ipv4_acl_name> ] | use-ipv6acl [ <ipv6_acl_name> ] } | snmp-server user <user_name> {
use-ipv4acl <ipv4_acl_name> use-ipv6acl <ipv6_acl_name> | use-ipv4acl <ipv4_acl_name> | use-ipv6acl
<ipv6_acl_name> } }
```

Syntax Description

no	Negate a command or set its defaults
snmp-server	Configure snmp server
user	Define a user who can access the SNMP engine
<i>user_name</i>	Name of the user
use-ipv4acl	Specify IPv4 ACL, the ACL name specified after must be IPv4 ACL.
<i>ipv4_acl_name</i>	(Optional) IPv4 ACL name to filter snmp requests
use-ipv6acl	Specify IPv6 ACL, the ACL name specified after must be IPv6 ACL.
<i>ipv6_acl_name</i>	(Optional) IPv6 ACL name to filter snmp requests

Command Mode

- /exec/configure

snmp-server user

```
[no] snmp-server user <s0> { enforcePriv | { [ <s1> ] { [ auth { md5 | sha } <s2> { { priv [ aes-128 ] { <s3>
[ localizedkey ] [ { auto | engineID <s4> } ] } } | { [ localizedkey1 ] [ { auto1 | engineID1 <s5> } ] } } } }
}
```

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
user	Define a user who can access the SNMP engine
<i>s0</i>	Name of the user
enforcePriv	Enforce privacy for the user
<i>s1</i>	(Optional) Group name (ignored for notif target user)
auth	(Optional) authentication parameters for the user
md5	(Optional) Use HMAC MD5 algorithm for authentication
sha	(Optional) Use HMAC SHA algorithm for authentication
<i>s2</i>	(Optional) authentication password for user
priv	(Optional) encryption parameters for the user
aes-128	(Optional) Use 128-bit AES algorithm for privacy
<i>s3</i>	(Optional) privacy password for user
localizedkey	(Optional) specifies whether the passwords are in localized key format
auto	(Optional) specifies whether the user is auto created (volatile)
engineID	(Optional) engineID for configuring notif target user (for V3 informs)
<i>s4</i>	(Optional) Specifies notification target's SNMP engineID. Should be an octet of either Decimal (range: 0 to 255) or Hexadecimal (range: 0 to FF) value, each octet being separated by colon. Hexadecimal value should have prefix of 0x or 0X. Including colons-
localizedkey1	(Optional) specifies whether the passwords are in localized key format
auto1	(Optional) specifies whether the user is auto created (volatile)
engineID1	(Optional) engineID for configuring notif target user (for V3 informs)
<i>s5</i>	(Optional) Specifies notification target's SNMP engineID. Should be an octet of either Decimal (range: 0 to 255) or Hexadecimal (range: 0 to FF) value, each octet being separated by colon. Hexadecimal value should have prefix of 0x or 0X. Including colons-

Command Mode

- /exec/configure

snmp-trap event-type policy-name

```
snmp-trap [ intdata1 <integer-data1> ] [ intdata2 <integer-data2> ] [ strdata <string-data> ] event-type <ev_type>
policy-name <name>
```

Syntax Description

snmp-trap	Send
intdata1	(Optional) Enter
<i>integer-data1</i>	(Optional) Integer
intdata2	(Optional) Enter
<i>integer-data2</i>	(Optional) Integer
strdata	(Optional) Enter
<i>string-data</i>	(Optional) String
event-type	Event type
<i>ev_type</i>	Event type
policy-name	Policy Name
<i>name</i>	Policy Name

Command Mode

- /exec

snmp ifmib ifalias long

[no] snmp ifmib ifalias long

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp	Configure snmp
ifmib	Configure snmp interface mib feature
ifalias	Configure snmp interface alias attribute for interface mib
long	Enable long description up to 256 characters for interface alias

Command Mode

- /exec/configure

snmp trap link-status

snmp trap link-status | no snmp trap link-status

Syntax Description

no	Negate a command or set its defaults
snmp	Modify SNMP interface parameters
trap	Allow a specific SNMP trap
link-status	Allow SNMP LINKUP and LINKDOWN traps

Command Mode

- /exec/configure/if-ether-sub /exec/configure/if-port-channel-sub /exec/configure/if-gig-ether-sub /exec/configure/if-remote-ethernet-sub /exec/configure/if-ether-sub-p2p

snmp trap link-status

snmp trap link-status

Syntax Description

snmp	Modify SNMP interface parameters
trap	Allow a specific SNMP trap
link-status	Allow SNMP LINKUP and LINKDOWN traps

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-base /exec/configure/if-port-channel /exec/configure/if-port-channel-range

snmp trap link-status

[no] snmp trap link-status

Syntax Description

no	Negate a command or set its defaults
snmp	Modify SNMP interface parameters
trap	Allow a specific SNMP trap
link-status	Allow SNMP LINKUP and LINKDOWN traps

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-base /exec/configure/if-port-channel /exec/configure/if-port-channel-range

snmp trap link-status

snmp trap link-status | no snmp trap link-status

Syntax Description

no	Negate a command or set its defaults
snmp	Modify SNMP interface parameters
trap	Allow a specific SNMP trap
link-status	Allow SNMP LINKUP and LINKDOWN traps

Command Mode

- /exec/configure/if-mgmt-ether

snmp trap link-status

snmp trap link-status | no snmp trap link-status

Syntax Description

no	Negate a command
snmp	Modify SNMP interface parameters
trap	Allow a specific SNMP trap
link-status	Allow SNMP LINKUP and LINKDOWN traps

Command Mode

- /exec/configure/if-any-tunnel

snmp trap link-status

snmp trap link-status | no snmp trap link-status

Syntax Description

no	Negate a command or set its defaults
snmp	Modify SNMP interface parameters
trap	Allow a specific SNMP trap
link-status	Allow SNMP LINKUP and LINKDOWN traps

Command Mode

- /exec/configure/if-vlan-common

snsr-grp sample-interval

snsr-grp <sn-grp-id> sample-interval <cadence> | no snsr-grp <sn-grp-id>

Syntax Description

no	Negate a command or set its defaults
snsr-grp	Associated sensor group
sample-interval	Cadence Time in milliseconds(0 for events)
<i>sn-grp-id</i>	Identifier
<i>cadence</i>	Cadence Time in milliseconds

Command Mode

- /exec/configure/telemetry/subscription

sockets local-port-range

```
{ { no sockets local-port-range } | { sockets local-port-range <start-port> <end-port> } }
```

Syntax Description

<code>no</code>	Negate a command or set its defaults
<code>sockets</code>	Negate a command or set its defaults
<code>local-port-range</code>	Define local port range for Kstack. Note: This CLI requires switch to be reloaded
<code>start-port</code>	Start port of local port range
<code>end-port</code>	End port of local port range

Command Mode

- `/exec/configure /exec/configure/config-mgmt`

soft-reconfiguration inbound

{ soft-reconfiguration inbound [always] } | { no soft-reconfiguration inbound } | { default soft-reconfiguration inbound }

Syntax Description

no	Negate a command or set its defaults
default	Inherit values from a peer template
soft-reconfiguration	Soft reconfiguration
inbound	Allow inbound soft reconfiguration
always	(Optional) Always perform inbound soft reconfiguration

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af
/exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-l2vpn-evpn
/exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-label
/exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv6-label

soft-reconfiguration inbound

```
{ soft-reconfiguration inbound [ always ] } | { no soft-reconfiguration inbound } | { default soft-reconfiguration inbound }
```

Syntax Description

no	Negate a command or set its defaults
default	Inherit values from a peer template
soft-reconfiguration	Soft reconfiguration
inbound	Allow inbound soft reconfiguration
always	(Optional) Always perform inbound soft reconfiguration

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-mdt

soo auto

```
{ [ no ] soo { auto | <ext-comm-soo-aa2nn4> | <ext-comm-soo-aa4nn2> } } | { default soo }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
default	Inherit values from a peer template
soo	Specify Site-of-origin extcommunity
auto	Generate SOO automatically
<i>ext-comm-soo-aa4nn2</i>	VPN extcommunity in aa4:nn or ip:nn format
<i>ext-comm-soo-aa2nn4</i>	VPN extcommunity in aa:nn format

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af
- /exec/configure/router-bgp/router-bgp-vrf-neighbor/router-bgp-vrf-neighbor-af-ipv4
- /exec/configure/router-bgp/router-bgp-vrf-neighbor/router-bgp-vrf-neighbor-af-ipv6
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-label
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv6-label

sort

| sort [-b | -d | -f | -g | -i | -M | -n | -r | -k <key> | -t <delim> | -u] +

Syntax Description

	Pipe command output to filter
sort	Stream Sorter
-b	(Optional) ignore leading blanks
-d	(Optional) consider only blanks and alphanumeric characters
-f	(Optional) fold lower case to upper case characters
-g	(Optional) compare according to general numerical value
-i	(Optional) consider only printable characters
-M	(Optional) month sort
-n	(Optional) compare according to string numerical value
-r	(Optional) reverse the result of comparisons
-k	(Optional) provide a key
-t	(Optional) use different separator instead of non-blank to blank transition
-u	(Optional) remove duplicate lines
<i>key</i>	(Optional) key in format POS1[,POS2] with POS = <field-nb>[.<char-pos>][<ordering>]
<i>delim</i>	(Optional) field delimiter char

Command Mode

- /output

source-group

[no] source-group <source> <group>

Syntax Description

no	(Optional) Negate a command or set its defaults
source-group	Source Group
<i>source</i>	Configure source address
<i>group</i>	Configure group address

Command Mode

- /exec/configure/if-nve

source-interface

source-interface <interface> | no source-interface

Syntax Description

no	Negate a command or set its defaults
source-interface	NVE Source-Interface
<i>interface</i>	

Command Mode

- /exec/configure/if-nve

source-interface

[no] source-interface | source-interface <interface>

Syntax Description

no	Negate a command or set its defaults
source-interface	Source interface to be used to reach tacacs server
<i>interface</i>	Interface (default is mgmt)

Command Mode

- /exec/configure/tacacs+

source-interface

[no] source-interface | source-interface <interface>

Syntax Description

no	Negate a command or set its defaults
source-interface	Source interface to be used to reach radius server
<i>interface</i>	Interface (default is mgmt)

Command Mode

- /exec/configure/radius

source-interface hold-down-time

[no] source-interface hold-down-time <sec>

Syntax Description

no	(Optional) Negate a command or set its defaults
source-interface	NVE Source-Interface
hold-down-time	Hold source loopback down time
<i>sec</i>	time in seconds

Command Mode

- /exec/configure/if-nve

source

{ [no] source <intf> | no source }

Syntax Description

source	Source Interface for this destination
<i>intf</i>	Interface

Command Mode

- /exec/configure/nfm-exporter

source

source { <ipaddr> } | no source

Syntax Description

no	Negate a command or set its defaults
source	source of tunnel packets
<i>ipaddr</i>	ip address (A.B.C.D)

Command Mode

- /exec/configure/if-te

source

source [background] <file> [<args>] +

Syntax Description

source	run a script (python, tcl,...) from bootflash:scripts
background	(Optional) run the script in the background, see also 'show background' and 'kill background'
<i>file</i>	the script file to run
<i>args</i>	(Optional) argument to be passed to script

Command Mode

- /exec

source

| source <file> [<args>] +

Syntax Description

	Pipe command output to filter
source	run a script (python, tcl,...) from bootflash:scripts
<i>file</i>	the script file to run
<i>args</i>	(Optional) argument to be passed to script

Command Mode

- /output

source copy-sys

source copy-sys

Syntax Description

source	run a script (python, tcl,...) from bootflash:scripts
copy-sys	copy the system provided example scripts of /sys to bootflash:scripts

Command Mode

- /exec

source forward-drops

[no] source forward-drops <src_dir> [priority-low]

Syntax Description

no	(Optional) Negate a command or set its defaults
source	Source configuration
forward-drops	Forwarding drops
priority-low	(Optional) Drop span session is low priority relative to span acl and vlan sessions
<i>src_dir</i>	Source direction

Command Mode

- /exec/configure/monitor-local-src /exec/configure/config-monitor
/exec/configure/config-monitor-erspan-src

source interface

[no] source { interface <interface_range> } [<src_dir>] [allow-pfc]

Syntax Description

no	(Optional) Negate a command or set its defaults
source	Source configuration
interface	Configure interfaces
<i>interface_range</i>	
<i>src_dir</i>	(Optional) Source direction
allow-pfc	(Optional) Enable SPAN on PFC frames

Command Mode

- /exec/configure/monitor-local-src /exec/configure/config-monitor
/exec/configure/config-monitor-erspan-src

source interface

[no] source { interface <interface> } [<src_dir>]

Syntax Description

no	(Optional) Negate a command or set its defaults
source	Source configuration
interface	Configure interfaces
<i>interface</i>	
<i>src_dir</i>	(Optional) Source direction

Command Mode

- /exec/configure/monitor-local-src /exec/configure/config-monitor
/exec/configure/config-monitor-erspan-src

source ip

[no] source ip <ipaddress>

Syntax Description

no	(Optional) Negate a command or set its defaults
source	Source IP address configuration
ip	Configure source IP address
<i>ipaddress</i>	

Command Mode

- /exec/configure/config-monitor-erspan-dst

source proxy-layer2-gateway tree-id switchid tx

[no] source proxy-layer2-gateway tree-id <tree-id> switchid <switchid> tx

Syntax Description

no	(Optional) Negate a command or set its defaults
source	Source configuration
proxy-layer2-gateway	proxy layer2 gateway span, only in egress direction
tree-id	Tree-ID integer
<i>tree-id</i>	treeid
switchid	Switchid integer
<i>switchid</i>	switchid
tx	Proxy layer2 gateway is only egress

Command Mode

- /exec/configure/monitor-local-src /exec/configure/config-monitor
/exec/configure/config-monitor-erspan-src

source vlan

[no] source vlan <vlan_range> [<src_dir>]

Syntax Description

no	(Optional) Negate a command or set its defaults
source	Source configuration
vlan	Vlan type
<i>vlan_range</i>	
<i>src_dir</i>	(Optional) Source direction

Command Mode

- /exec/configure/monitor-local-src /exec/configure/config-monitor
/exec/configure/config-monitor-erspan-src

spanning-tree bpdudfilter

spanning-tree bpdudfilter <port-bpdudfilter> | no spanning-tree bpdudfilter [<port-bpdudfilter>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
bpdudfilter	Don't send or receive BPDUs on this interface
<i>port-bpdudfilter</i>	Don't send or receive BPDUs on this interface

Command Mode

- /exec/configure/if-switching /exec/configure/if-ethernet-switch-m

spanning-tree bpduguard

spanning-tree bpduguard <port-bpduguard> | no spanning-tree bpduguard [<port-bpduguard>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
bpduguard	Don't accept BPDUs on this interface
<i>port-bpduguard</i>	Don't accept BPDUs on this interface

Command Mode

- /exec/configure/if-switching /exec/configure/if-ethernet-switch-m

spanning-tree bridge-domain

[no] spanning-tree bridge-domain <bd-id>

Syntax Description

no	(Optional) Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
bridge-domain	Bridge-Domain Switch Spanning Trees
<i>bd-id</i>	Bridge-Domain range, Example: 2,4-5,7,9-11

Command Mode

- /exec/configure

spanning-tree bridge assurance

[no] spanning-tree bridge assurance

Syntax Description

no	(Optional) Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
bridge	Spanning tree bridge options
assurance	Enable Bridge Assurance on all network ports

Command Mode

- /exec/configure

spanning-tree cost

spanning-tree [vlan <vlan-id> | bridge-domain <bd-id>] cost <port-cost> | no spanning-tree [vlan <vlan-id> | bridge-domain <bd-id>] cost [<port-cost>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
vlan	(Optional) VLAN Switch Spanning Trees
bridge-domain	(Optional) Bridge-Domain Switch Spanning Trees
<i>vlan-id</i>	(Optional) vlan range, Example: 1,3-5,7,9-11
<i>vlan-id</i>	(Optional) vlan range, Example: 1,3-5,7,9-11
<i>bd-id</i>	(Optional) Bridge-Domain range, Example: 2,4-5,7,9-11
cost	Change an interface's spanning tree port path cost
<i>port-cost</i>	port path cost

Command Mode

- /exec/configure/if-switching /exec/configure/if-ethernet-switch-m

spanning-tree cost auto

[no] spanning-tree [vlan <vlan-id> | bridge-domain <bd-id>] cost auto

Syntax Description

no	(Optional) Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
vlan	(Optional) VLAN Switch Spanning Trees
bridge-domain	(Optional) Bridge-Domain Switch Spanning Trees
<i>vlan-id</i>	(Optional) vlan range, Example: 1,3-5,7,9-11
<i>bd-id</i>	(Optional) Bridge-Domain range, Example: 2,4-5,7,9-11
cost	Change an interface's spanning tree port path cost
auto	Determine cost based on media speed of this interface

Command Mode

- /exec/configure/if-switching /exec/configure/if-ethernet-switch-m

spanning-tree domain

spanning-tree domain { enable | disable | <domain-id> } | no spanning-tree domain [enable]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
domain	Spanning Tree Domain
enable	Enable Spanning Tree Domain
disable	Disable Spanning Tree Domain
<i>domain-id</i>	Domain Identifier

Command Mode

- /exec/configure

spanning-tree domain clear statistics

spanning-tree domain clear statistics

Syntax Description

spanning-tree	Spanning Tree Subsystem
domain	Spanning Tree Domain
clear	Clear
statistics	Clear Statistics

Command Mode

- /exec/configure

spanning-tree fcoe

[no] spanning-tree fcoe

Syntax Description

no	(Optional) Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
fcoe	Enable STP for FCoE VLANs

Command Mode

- /exec/configure

spanning-tree guard

spanning-tree guard <guard-type> | no spanning-tree guard [<guard-type>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
guard	Change an interface's spanning tree guard mode
<i>guard-type</i>	Change an interface's spanning tree guard mode

Command Mode

- /exec/configure/if-switching /exec/configure/if-ethernet-switch-m

spanning-tree lc-issu

spanning-tree lc-issu <issu-type> | no spanning-tree lc-issu [<issu-type>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
lc-issu	Configure Linecard ISSU type
<i>issu-type</i>	ISSU Type

Command Mode

- /exec/configure

spanning-tree lc-issu

spanning-tree lc-issu <port-issu-type> | no spanning-tree lc-issu [<port-issu-type>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
lc-issu	Configure Linecard ISSU type
<i>port-issu-type</i>	ISSU Type

Command Mode

- /exec/configure/if-switching /exec/configure/if-ethernet-switch-m

spanning-tree link-type

spanning-tree link-type <link-type-val> | no spanning-tree link-type [<link-type-val>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
link-type	Specify a link type for spanning tree tree protocol use
<i>link-type-val</i>	Specify a link type for spanning tree tree protocol use

Command Mode

- /exec/configure/if-switching /exec/configure/if-ethernet-switch-m

spanning-tree loopguard default

[no] spanning-tree loopguard default

Syntax Description

no	(Optional) Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
loopguard	Spanning tree loopguard options
default	Enable loopguard by default on all ports

Command Mode

- /exec/configure

spanning-tree mode

spanning-tree mode <stp-mode> | no spanning-tree mode [<stp-mode>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
mode	Spanning Tree operating mode
<i>stp-mode</i>	Spanning Tree operating mode

Command Mode

- /exec/configure

spanning-tree mst configuration

spanning-tree mst configuration

Syntax Description

spanning-tree	Spanning Tree Subsystem
mst	Multiple spanning tree configuration
configuration	Enter MST configuration submenu

Command Mode

- /exec/configure

spanning-tree mst configuration

[no] spanning-tree mst configuration

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
mst	Multiple spanning tree configuration
configuration	Enter MST configuration submode

Command Mode

- /exec/configure

spanning-tree mst cost

spanning-tree mst <mst-id> cost <port-cost> | no spanning-tree mst <mst-id> cost [<port-cost>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
mst	Multiple spanning tree
<i>mst-id</i>	MST instance list, example 0,2-4,6,8-12
cost	Change an interface's spanning tree port path cost
<i>port-cost</i>	port path cost

Command Mode

- /exec/configure/if-switching /exec/configure/if-ethernet-switch-m

spanning-tree mst cost auto

[no] spanning-tree mst <mst-id> cost auto

Syntax Description

no	(Optional) Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
mst	Multiple spanning tree
<i>mst-id</i>	MST instance list, example 0,2-4,6,8-12
cost	Change an interface's spanning tree port path cost
auto	Determine cost based on media speed of this interface

Command Mode

- /exec/configure/if-switching /exec/configure/if-ethernet-switch-m

spanning-tree mst forward-time

spanning-tree mst forward-time <fwd-time> | no spanning-tree mst forward-time [<fwd-time>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
mst	Multiple spanning tree configuration
forward-time	Set the forward delay for the spanning tree
<i>fwd-time</i>	number of seconds for the forward delay timer

Command Mode

- /exec/configure

spanning-tree mst hello-time

spanning-tree mst hello-time <hello-time-val> | no spanning-tree mst hello-time [<hello-time-val>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
mst	Multiple spanning tree configuration
hello-time	Set the hello interval for the spanning tree
<i>hello-time-val</i>	number of seconds between generation of config bpdu

Command Mode

- /exec/configure

spanning-tree mst max-age

spanning-tree mst max-age <max-age-val> | no spanning-tree mst max-age [<max-age-val>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
mst	Multiple spanning tree configuration
max-age	Set the max age interval for the spanning tree
<i>max-age-val</i>	maximum number of seconds the information in a bpdu is valid

Command Mode

- /exec/configure

spanning-tree mst max-hops

spanning-tree mst max-hops <max-hops-val> | no spanning-tree mst max-hops [<max-hops-val>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
mst	Multiple spanning tree configuration
max-hops	Set the max hops value for the spanning tree
<i>max-hops-val</i>	maximum number of hops a BPDU is valid

Command Mode

- /exec/configure

spanning-tree mst port-priority

spanning-tree mst <mst-id> port-priority <port-prio> | no spanning-tree mst <mst-id> port-priority [<port-prio>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
mst	Multiple spanning tree
<i>mst-id</i>	MST instance list, example 0,2-4,6,8-12
port-priority	Change an interface's spanning tree port priority
<i>port-prio</i>	Spanning-tree port priority

Command Mode

- /exec/configure/if-switching /exec/configure/if-ethernet-switch-m

spanning-tree mst pre-standard

[no] spanning-tree mst pre-standard

Syntax Description

no	(Optional) Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
mst	Multiple spanning tree
pre-standard	Force pre-standard MST BPDU transmission on port

Command Mode

- /exec/configure/if-switching /exec/configure/if-ethernet-switch-m

spanning-tree mst priority

spanning-tree mst <mst-id> priority <prio> | no spanning-tree mst <mst-id> priority [<prio>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
mst	Multiple spanning tree configuration
<i>mst-id</i>	MST instance range, example: 0-3,5,7-9
priority	Set the bridge priority for the spanning tree
<i>prio</i>	bridge priority in increments of 4096

Command Mode

- /exec/configure

spanning-tree mst root

```
spanning-tree mst <mst-id> root <root-type> [ diameter <diameter-val> [ hello-time <hello-time-val> ] ] | no
spanning-tree mst <mst-id> root [ <root-type> [ diameter <diameter-val> [ hello-time <hello-time-val> ] ] ]
```

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
mst	Multiple spanning tree configuration
<i>mst-id</i>	MST instance range, example: 0-3,5,7-9
diameter	(Optional) Network diameter of this spanning tree
<i>diameter-val</i>	(Optional) Maximum number of bridges between any two end nodes
root	configure switch as root
<i>root-type</i>	configure switch as root
hello-time	(Optional) Set the hello interval for the spanning tree
<i>hello-time-val</i>	(Optional) number of seconds between generation of config bpdu

Command Mode

- /exec/configure

spanning-tree mst simulate pvst

[no] spanning-tree mst simulate pvst [<simpvst-disable>]

Syntax Description

no	(Optional) Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
mst	Multiple spanning tree
simulate	Enable spanning tree simulation
pvst	Enable PVST simulation
<i>simpvst-disable</i>	(Optional) Disable PVST simulation on this interface

Command Mode

- /exec/configure/if-switching /exec/configure/if-ethernet-switch-m

spanning-tree mst simulate pvst global

[no] spanning-tree mst simulate pvst global

Syntax Description

no	(Optional) Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
mst	Multiple spanning tree configuration
simulate	Enable spanning tree simulation
pvst	Enable PVST simulation
global	Enable PVST Simulation by default on all ports

Command Mode

- /exec/configure

spanning-tree pathcost method

spanning-tree pathcost method <method-val> | no spanning-tree pathcost method [<method-val>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
pathcost	Spanning tree pathcost options
method	Method to calculate default port path cost
<i>method-val</i>	Method to calculate default port path cost

Command Mode

- /exec/configure

spanning-tree port-priority

spanning-tree [vlan <vlan-id> | bridge-domain <bd-id>] port-priority <port-prio> | no spanning-tree [vlan <vlan-id> | bridge-domain <bd-id>] port-priority [<port-prio>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
vlan	(Optional) VLAN Switch Spanning Trees
bridge-domain	(Optional) Bridge-Domain Switch Spanning Trees
<i>vlan-id</i>	(Optional) vlan range, Example: 1,3-5,7,9-11
<i>bd-id</i>	(Optional) Bridge-Domain range, Example: 2,4-5,7,9-11
port-priority	Change an interface's spanning tree port priority
<i>port-prio</i>	Spanning-tree port priority

Command Mode

- /exec/configure/if-switching /exec/configure/if-ethernet-switch-m

spanning-tree port type

spanning-tree port type <port-type> | no spanning-tree port type [<port-type>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
port	Spanning tree port options
type	Specify a port type for spanning tree protocol use
<i>port-type</i>	Specify a port type for spanning tree protocol use

Command Mode

- /exec/configure/if-switching /exec/configure/if-ethernet-switch-m

spanning-tree port type edge bpdufilter default

[no] spanning-tree port type edge bpdufilter default

Syntax Description

no	(Optional) Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
port	Spanning tree port options
type	Specify a port type for spanning tree protocol use
edge	Consider the interface as edge port (enable portfast)
bpdufilter	Enable edge port (portfast) bpdu filter on this switch
default	Enable bpdu filter by default on all edge (portfast) ports

Command Mode

- /exec/configure

spanning-tree port type edge bpduguard default

[no] spanning-tree port type edge bpduguard default

Syntax Description

no	(Optional) Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
port	Spanning tree port options
type	Specify a port type for spanning tree protocol use
edge	Consider the interface as edge port (enable portfast)
bpduguard	Enable edge port (portfast) bpduguard on this switch
default	Enable bpduguard by default on all edge (portfast) ports

Command Mode

- /exec/configure

spanning-tree port type edge default

[no] spanning-tree port type edge default

Syntax Description

no	(Optional) Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
port	Spanning tree port options
type	Specify a port type for spanning tree protocol use
edge	Consider the interface as edge port (enable portfast)
default	Select edge port type by default on all access ports

Command Mode

- /exec/configure

spanning-tree port type edge trunk

spanning-tree port type edge trunk | no spanning-tree port type edge trunk

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
port	Spanning tree port options
type	Specify a port type for spanning tree protocol use
edge	Consider the interface as edge port (enable portfast)
trunk	Consider the interface as edge port (enable portfast) even in trunk mode

Command Mode

- /exec/configure/if-switching /exec/configure/if-ethernet-switch-m

spanning-tree port type network default

[no] spanning-tree port type network default

Syntax Description

no	(Optional) Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
port	Spanning tree port options
type	Specify a port type for spanning tree protocol use
network	Consider the interface as inter-switch link
default	Select network port type by default on all ports

Command Mode

- /exec/configure

spanning-tree portfast

spanning-tree portfast [<port-portfast>] | no spanning-tree portfast [<port-portfast>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
portfast	Enable an interface to move directly to fwd on link up
<i>port-portfast</i>	(Optional) Enable an interface to move directly to fwd on link up

Command Mode

- /exec/configure/if-switching /exec/configure/if-ethernet-switch-m

spanning-tree portfast bpdufilter default

[no] spanning-tree portfast bpdufilter default

Syntax Description

no	(Optional) Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
portfast	Enable an interface to move directly to fwd on link up
bpdufilter	Enable portfast bpdu filter on this switch
default	Enable bdpu filter by default on all portfast ports

Command Mode

- /exec/configure

spanning-tree portfast bpduguard default

[no] spanning-tree portfast bpduguard default

Syntax Description

no	(Optional) Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
portfast	Enable an interface to move directly to fwd on link up
bpduguard	Enable portfast bpdu guard on this switch
default	Enable bdpu guard by default on all portfast ports

Command Mode

- /exec/configure

spanning-tree portfast default

[no] spanning-tree portfast default

Syntax Description

no	(Optional) Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
portfast	Enable an interface to move directly to fwd on link up
default	Enable portfast by default on all access ports

Command Mode

- /exec/configure

spanning-tree pseudo-information

spanning-tree pseudo-information

Syntax Description

spanning-tree	Spanning Tree Subsystem
pseudo-information	configure spanning tree pseudo information

Command Mode

- /exec/configure

spanning-tree vlan

[no] spanning-tree vlan <vlan-id>

Syntax Description

no	(Optional) Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
vlan	VLAN Switch Spanning Trees
<i>vlan-id</i>	vlan range, Example: 1,3-5,7,9-11

Command Mode

- /exec/configure

spanning-tree vlan forward-time

spanning-tree { vlan <vlan-id> | bridge-domain <bd-id> } forward-time <fwd-time> | no spanning-tree { vlan <vlan-id> | bridge-domain <bd-id> } forward-time [<fwd-time>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
vlan	VLAN Switch Spanning Trees
bridge-domain	Bridge-Domain Switch Spanning Trees
<i>vlan-id</i>	vlan range, Example: 1,3-5,7,9-11
<i>bd-id</i>	Bridge-Domain range, Example: 2,4-5,7,9-11
forward-time	Set the forward delay for the spanning tree
<i>fwd-time</i>	number of seconds for the forward delay timer

Command Mode

- /exec/configure

spanning-tree vlan hello-time

```
spanning-tree { vlan <vlan-id> | bridge-domain <bd-id> } hello-time <hello-time-val> | no spanning-tree {  
vlan <vlan-id> | bridge-domain <bd-id> } hello-time [ <hello-time-val> ]
```

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
vlan	VLAN Switch Spanning Trees
bridge-domain	Bridge-Domain Switch Spanning Trees
<i>vlan-id</i>	vlan range, Example: 1,3-5,7,9-11
<i>bd-id</i>	Bridge-Domain range, Example: 2,4-5,7,9-11
hello-time	Set the hello interval for the spanning tree
<i>hello-time-val</i>	number of seconds between generation of config bpdu

Command Mode

- /exec/configure

spanning-tree vlan max-age

spanning-tree { vlan <vlan-id> | bridge-domain <bd-id> } max-age <max-age-val> | no spanning-tree { vlan <vlan-id> | bridge-domain <bd-id> } max-age [<max-age-val>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
vlan	VLAN Switch Spanning Trees
bridge-domain	Bridge-Domain Switch Spanning Trees
<i>vlan-id</i>	vlan range, Example: 1,3-5,7,9-11
<i>bd-id</i>	Bridge-Domain range, Example: 2,4-5,7,9-11
max-age	Set the max age interval for the spanning tree
<i>max-age-val</i>	maximum number of seconds the information in a bpdu is valid

Command Mode

- /exec/configure

spanning-tree vlan priority

```
spanning-tree { vlan <vlan-id> | bridge-domain <bd-id> } priority <prio> | no spanning-tree { vlan <vlan-id> | bridge-domain <bd-id> } priority [ <prio> ]
```

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
vlan	VLAN Switch Spanning Trees
bridge-domain	Bridge-Domain Switch Spanning Trees
<i>vlan-id</i>	vlan range, Example: 1,3-5,7,9-11
<i>bd-id</i>	Bridge-Domain range, Example: 2,4-5,7,9-11
priority	Set the bridge priority for the spanning tree
<i>prio</i>	bridge priority in increments of 4096

Command Mode

- /exec/configure

spanning-tree vlan root

```
spanning-tree { vlan <vlan-id> | bridge-domain <bd-id> } root <root-type> [ diameter <diameter-val> [
hello-time <hello-time-val> ] ] | no spanning-tree { vlan <vlan-id> | bridge-domain <bd-id> } root [ <root-type>
[ diameter <diameter-val> [ hello-time <hello-time-val> ] ] ]
```

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
vlan	VLAN Switch Spanning Trees
bridge-domain	Bridge-Domain Switch Spanning Trees
<i>vlan-id</i>	vlan range, Example: 1,3-5,7,9-11
<i>bd-id</i>	Bridge-Domain range, Example: 2,4-5,7,9-11
diameter	(Optional) Network diameter of this spanning tree
<i>diameter-val</i>	(Optional) Maximum number of bridges between any two end nodes
root	configure switch as root
<i>root-type</i>	configure switch as root
hello-time	(Optional) Set the hello interval for the spanning tree
<i>hello-time-val</i>	(Optional) number of seconds between generation of config bpdu

Command Mode

- /exec/configure

speed-group

speed-group <gspeed_val> | no speed-group [<gspeed_val>]

Syntax Description

no	Negate a command or set its defaults
speed-group	port group speed
<i>gspeed_val</i>	Interface port speed

Command Mode

- /exec/configure/if-eth-base

speed

speed { <speed_val> }

Syntax Description

speed	Enter the port speed
<i>speed_val</i>	Interface port speed

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-non-member /exec/configure/if-port-channel

speed

```
speed { <speed_val> }
```

Syntax Description

speed	Enter the port speed
<i>speed_val</i>	Interface port speed

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-non-member /exec/configure/if-port-channel

speed

```
[no] speed [ { <speed_val> | auto [ 100 [ 1000 ] ] } ]
```

Syntax Description

no	Negate a command or set its defaults
speed	Enter the port speed
<i>speed_val</i>	(Optional) Interface port speed
auto	(Optional) auto negotiate speed
100	(Optional) 100 Mbps speed
1000	(Optional) 1000 Mbps speed

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-non-member /exec/configure/if-port-channel

speed

```
[no] speed [ { <speed_val> | auto [ 100 [ 1000 ] ] } ]
```

Syntax Description

no	Negate a command or set its defaults
speed	Enter the port speed
<i>speed_val</i>	(Optional) Interface port speed
auto	(Optional) auto negotiate speed
100	(Optional) 100 Mbps speed
1000	(Optional) 1000 Mbps speed

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-non-member /exec/configure/if-port-channel

speed

```
speed { <speed_val> }
```

Syntax Description

speed	Enter the port speed
<i>speed_val</i>	Interface port speed

Command Mode

- /exec/configure/if-mgmt-ether

speed

```
[no] speed [ { <speed_val> | auto [ 100 [ 1000 ] ] } ]
```

Syntax Description

no	Negate a command or set its defaults
speed	Enter the port speed
<i>speed_val</i>	(Optional) Interface port speed
auto	(Optional) auto negotiate speed
100	(Optional) 100 Mbps speed
1000	(Optional) 1000 Mbps speed

Command Mode

- /exec/configure/if-mgmt-ether

speed

[no] speed <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
speed	Set the transmit and receive speeds
<i>i0</i>	Transmit and receive speeds

Command Mode

- /exec/configure/com1

speed

[no] speed <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
speed	Set the transmit and receive speeds
<i>i0</i>	Transmit and receive speeds

Command Mode

- /exec/configure/console

speed auto

speed auto

Syntax Description

speed	Enter the port speed
auto	auto negotiate speed

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-non-member /exec/configure/if-port-channel

speed auto 100

speed auto 100

Syntax Description

speed	Enter the port speed
auto	auto negotiate speed
100	100 Mbps speed

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-non-member /exec/configure/if-port-channel

speed auto 100 1000

speed auto 100 1000

Syntax Description

speed	Enter the port speed
auto	auto negotiate speed
100	100 Mbps speed
1000	1000 Mbps speed

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-non-member /exec/configure/if-port-channel

speed auto 100 1000

speed auto 100 1000

Syntax Description

speed	Enter the port speed
auto	auto negotiate speed
100	100 Mbps speed
1000	1000 Mbps speed

Command Mode

- /exec/configure/if-mgmt-ether

speed auto 100

speed auto 100

Syntax Description

speed	Enter the port speed
auto	auto negotiate speed
100	100 Mbps speed

Command Mode

- /exec/configure/if-mgmt-ether

speed auto

speed auto

Syntax Description

speed	Enter the port speed
auto	auto negotiate speed

Command Mode

- /exec/configure/if-mgmt-ether

spf-interval

spf-interval <level> <max-wait> [<initial-wait> <second-wait>] | no spf-interval <level> <max-wait> [<initial-wait> <second-wait>]

Syntax Description

no	Negate a command or set its defaults
spf-interval	Configure SPF interval
<i>level</i>	IS-IS level
<i>max-wait</i>	Maximum wait between trigger and SPF computation (milli-secs)
<i>initial-wait</i>	(Optional) Initial wait between trigger and SPF computation (milli-secs)
<i>second-wait</i>	(Optional) Second wait between trigger and SPF computation (milli-secs)

Command Mode

- /exec/configure/router-isis/router-isis-vrf-common

spf-interval

spf-interval <max-wait> [<initial-wait> <second-wait>] | no spf-interval <max-wait> [<initial-wait> <second-wait>]

Syntax Description

no	Negate a command or set its defaults
spf-interval	Configure SPF interval
<i>max-wait</i>	Maximum wait between trigger and SPF computation (milli-secs)
<i>initial-wait</i>	(Optional) Initial wait between trigger and SPF computation (milli-secs)
<i>second-wait</i>	(Optional) Second wait between trigger and SPF computation (milli-secs)

Command Mode

- /exec/configure/otv-isis/otv-isis-vrf-common

spf-interval

spf-interval <max-wait> [<initial-wait> <second-wait>] | no spf-interval <max-wait> [<initial-wait> <second-wait>]

Syntax Description

no	Negate a command or set its defaults
spf-interval	Configure SPF interval
<i>max-wait</i>	Maximum wait between trigger and SPF computation (milli-secs)
<i>initial-wait</i>	(Optional) Initial wait between trigger and SPF computation (milli-secs)
<i>second-wait</i>	(Optional) Second wait between trigger and SPF computation (milli-secs)

Command Mode

- /exec/configure/l2mp-isis/l2mp-isis-vrf-common

spf mode incremental

[no] spf mode incremental

Syntax Description

no	(Optional) Negate a command or set its defaults
spf	Configure route computation related settings
mode	Set the mode of spf computation
incremental	If possible, recompute only parts of the SPT

Command Mode

- /exec/configure/router-ospf /exec/configure/router-ospf/vrf

spf mode incremental

[no] spf mode incremental

Syntax Description

no	(Optional) Negate a command or set its defaults
spf	Configure route computation related settings
mode	Set the mode of spf computation
incremental	If possible, recompute only parts of the SPT

Command Mode

- /exec/configure/router-ospf3/router-ospf3-af-ipv6 /exec/configure/router-ospf3/vrf/router-ospf3-af-ipv6

spine-anycast-gateway

[no] spine-anycast-gateway

Syntax Description

no	(Optional) Negate a command or set its defaults
spine-anycast-gateway	Enable Spine-Anycast-Gateway

Command Mode

- /exec/configure/if-nve/vni

sport

{ sport <sva> } | { no sport }

Syntax Description

no	Negate a command or set its defaults
sport	Configure ngoam Udp source port range
<i>sva</i>	Udp source port range, max span 1024, Example: 2000-3000,400,500

Command Mode

- /exec/configure/configngoamprofile

sprom backplane

```
sprom { backplane [ brief ] }
```

Syntax Description

sprom	set SPROM contents should be done very carefully
backplane	set backplane module sprom contents
brief	(Optional) set minimal/essential backplane module sprom contents

Command Mode

- /exec

srom recover backplane

srom recover backplane <i0>

Syntax Description

srom	set SPROM contents should be done very carefully
recover	SPROM recovery
backplane	set backplane module srom contents
<i>i0</i>	please enter instance of backplane srom

Command Mode

- /exec

ssh

```
{ ssh <s0> [ [ vrf { <vrf-name> | <vrf-known-name> } ] [ source-ip <s1> ] ] [ source-interface <intf> ] ] }
| { ssh <s0> [ [ [ source-ip <s1> ] [ vrf { <vrf-name> | <vrf-known-name> } ] ] [ source-interface <intf> ] ] }
}
```

Syntax Description

ssh	SSH to another system
vrf	(Optional) Display per-VRF information
source-ip	(Optional) ip address to bind
source-interface	(Optional) Select source interface
<i>s0</i>	Enter hostname or user@hostname
<i>vrf-name</i>	(Optional) VRF name
<i>vrf-known-name</i>	(Optional) Known VRF name
<i>s1</i>	(Optional) Enter source ip address to bind
<i>intf</i>	(Optional)

Command Mode

- /exec

ssh6

```
{ ssh6 <s0> [ [ vrf { <vrf-name> | <vrf-known-name> } ] [ source-ip <s2> ] [ interface <s1> ] ] | [ source-interface <intf> ] ] } | { ssh6 <s0> [ [ source-ip <s2> ] [ vrf { <vrf-name> | <vrf-known-name> } ] [ interface <s1> ] ] | [ source-interface <intf> ] ] }
```

Syntax Description

ssh6	SSH to another system using IPv6 addressing
vrf	(Optional) vrf to use
source-ip	(Optional) ip address to bind
source-interface	(Optional) Select source interface
interface	(Optional) interface to bind
<i>s0</i>	Enter hostname or user@hostname
<i>vrf-name</i>	(Optional) VRF name
<i>vrf-known-name</i>	(Optional) Known VRF name
<i>s2</i>	(Optional) Enter source ip address to bind
<i>s1</i>	(Optional) Enter interface to bind
<i>intf</i>	(Optional)

Command Mode

- /exec

ssh cipher-mode weak

```
{ { ssh cipher-mode weak } | { no ssh cipher-mode [ weak ] } }
```

Syntax Description

no	Negate a command or set its defaults
ssh	SSH to another system
cipher-mode	Set Cipher-mode for ssh
weak	Enable Weak Ciphers

Command Mode

- /exec/configure/

ssh key dsa

```
{ ssh key { dsa [ force ] | rsa [ { <i0> | <oldrange> } [ force ] ] } | no ssh key [ { dsa [ force ] | rsa [ { <i0> | <oldrange> } [ force ] ] } ] }
```

Syntax Description

no	Negate a command or set its defaults
ssh	SSH to another system
key	Generate SSH Key
dsa	Generate DSA keys
force	(Optional) Force the generation of keys even if previous ones are present
rsa	Generate RSA keys
<i>i0</i>	(Optional) Enter number of bits (in multiples of 8)
<i>oldrange</i>	(Optional) Enter number of bits
force	(Optional) Force the generation of keys even if previous ones are present
force	(Optional) Force the generation of keys even if previous ones are present

Command Mode

- /exec/configure

ssh login-attempts

```
{ { ssh login-attempts <d0> } | { no ssh login-attempts [ <d0> ] } }
```

Syntax Description

no	Negate a command or set its defaults
ssh	SSH to another system
login-attempts	Set maximum login attempts from ssh
<i>d0</i>	Specify max-attempt number

Command Mode

- /exec/configure/

ssh server enable

[no] ssh server enable

Syntax Description

no	(Optional) Negate a command or set its defaults
ssh	Configure SSH parameters
server	Configure SSH Server parameters
enable	Enable SSH server

Command Mode

- /exec/configure

staggered adjacency-bringup

[no] staggered adjacency-bringup

Syntax Description

no	(Optional) Negate a command or set its defaults
staggered	Enable staggered adjacency feature
adjacency-bringup	Configure staggered adjacency bringup

Command Mode

- /exec/configure/l2mp-isis/l2mp-isis-vrf-common

staggered adjacency-count

[no] staggered adjacency-count <count>

Syntax Description

no	(Optional) Negate a command or set its defaults
staggered	Enable staggered adjacency feature
adjacency-count	Configure the number of adjacencies to bringup at a time
<i>count</i>	Set the number

Command Mode

- /exec/configure/l2mp-isis/l2mp-isis-vrf-common

standby

[no] standby [ip <ip-addr-first> | IPv6 <ip-addrv6-first>]

Syntax Description

no	(Optional) Negate a command or set its defaults
standby	Standby node
ip	(Optional) ip address for standby node
<i>ip-addr-first</i>	(Optional) ITD node IPv4 address
IPv6	(Optional) IPv6 address

Command Mode

- /exec/configure/itd-dg-node

standby

[no] standby [ip <ip-addr-first> | IPv6 <ip-addrv6-first>]

Syntax Description

no	(Optional) Negate a command or set its defaults
standby	Standby node
ip	(Optional) ip address for standby node
<i>ip-addr-first</i>	(Optional) ITD node IPv4 address
IPv6	(Optional) IPv6 address

Command Mode

- /exec/configure/itd-dg-node

start

start

Syntax Description

start	Start Trigger
-------	---------------

Command Mode

- /exec/elamns/sel3

start

start

Syntax Description

start	Start Trigger
-------	---------------

Command Mode

- /exec/elamns/se14

start

start

Syntax Description

start	Start Trigger
-------	---------------

Command Mode

- /exec/elamns/sel5

start

start

Syntax Description

start	Start Trigger
-------	---------------

Command Mode

- /exec/elamns/sel6

start

start

Syntax Description

start	Start Trigger
-------	---------------

Command Mode

- /exec/elamns/sel7

start

start

Syntax Description

start	Start Trigger
-------	---------------

Command Mode

- /exec/elamns/outse0

start

start

Syntax Description

start	Start Trigger
-------	---------------

Command Mode

- /exec/elamns/outsel5

state

state <vstate> | no state

Syntax Description

no	Negate a command or set its defaults
state	Operational state of the VLAN
<i>vstate</i>	

Command Mode

- /exec/configure/vlan

state enabled

[no] state enabled

Syntax Description

no	(Optional) Negate a command or set its defaults
state	Port-profile state
enabled	Enable/ disable the port-profile

Command Mode

- /exec/configure/port-profile

stateful-ha

[no] stateful-ha [test-recovery]

Syntax Description

no	(Optional) Negate a command or set its defaults
stateful-ha	Enable stateful IS-IS HA
test-recovery	(Optional) Test stateful HA recovery

Command Mode

- /exec/configure/router-isis/router-isis-vrf-common

stateful-ha

[no] stateful-ha [pss-partial-lsp]

Syntax Description

stateful-ha	Configure RSVP stateful HA
pss-partial-lsp	(Optional) Enable PSS of partial lsps

Command Mode

- /exec/configure/ip-rsvp

statistics

[no] statistics

Syntax Description

no	(Optional) Negate a command or set its defaults
----	---

Command Mode

- /exec/configure/ipacl /exec/configure/vacl

statistics

[no] statistics

Syntax Description

no	(Optional) Negate a command or set its defaults
----	---

Command Mode

- /exec/configure/ipv6acl

statistics

[no] statistics

Syntax Description

no	(Optional) Negate a command or set its defaults
----	---

Command Mode

- /exec/configure/macac1

statistics per-entry

[no] statistics per-entry

Syntax Description

no	(Optional) Negate a command or set its defaults
----	---

Command Mode

- /exec/configure/ipacl /exec/configure/vacl

statistics per-entry

[no] statistics per-entry

Syntax Description

no	(Optional) Negate a command or set its defaults
----	---

Command Mode

- /exec/configure/ipv6acl

statistics per-entry

[no] statistics per-entry

Syntax Description

no	(Optional) Negate a command or set its defaults
----	---

Command Mode

- /exec/configure/macac1

stats-reporting-period

stats-reporting-period <time-in-sec> | no stats-reporting-period

Syntax Description

no	Negate a command or set its defaults
stats-reporting-period	Interval after which statistics are sent to the BMP server
<i>time-in-sec</i>	Delay value

Command Mode

- /exec/configure/router-bgp/router-bgp-bmp-server

status

status

Syntax Description

status	Status of Trigger
--------	-------------------

Command Mode

- /exec/elamns/sel3

status

status

Syntax Description

status	Status of Trigger
--------	-------------------

Command Mode

- /exec/elamns/se14

status

status

Syntax Description

status	Status of Trigger
--------	-------------------

Command Mode

- /exec/elamns/sel5

status

status

Syntax Description

status	Status of Trigger
--------	-------------------

Command Mode

- /exec/elamns/sel6

status

status

Syntax Description

status	Status of Trigger
--------	-------------------

Command Mode

- /exec/elamns/sel7

status

status

Syntax Description

status	Status of Trigger
--------	-------------------

Command Mode

- /exec/elamns/outse0

status

status

Syntax Description

status	Status of Trigger
--------	-------------------

Command Mode

- /exec/elamns/outsel5

sticky root-selection

sticky root-selection | no sticky root-selection

Syntax Description

no	Negate a command or set its defaults
sticky	sticky root selection for a topology
root-selection	sticky root selection for a topology

Command Mode

- /exec/configure/l2mp-isis/l2mp-isis-vrf-common /exec/configure/l2mp-isis/l2mp-isis-l2-topo

stopbits 1

[no] stopbits { 1 | 2 }

Syntax Description

no	(Optional) Negate a command or set its defaults
stopbits	Set async line stopbits
1	One stop bit
2	Two stop bits

Command Mode

- /exec/configure/com1

stopbits 1

[no] stopbits { 1 }

Syntax Description

no	(Optional) Negate a command or set its defaults
stopbits	Set async line stopbits
1	One stop bit

Command Mode

- /exec/configure/console

storm-control-cpu

storm-control-cpu { { arp rate } <pps> } | no storm-control-cpu arp

Syntax Description

no	Negate a command or set its defaults
storm-control-cpu	Configure Interface storm control cpu
arp	arp storm control
rate	Set allowed arp traffic rate on this interface
<i>pps</i>	value in packets per sec

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-non-member /exec/configure/if-port-channel

storm-control

```
storm-control { { { broadcast blevel | multicast mlevel | unicast ulevel } <level> } | action { shutdown | trap } } | no storm-control { { { broadcast blevel | multicast mlevel | unicast ulevel } [ <level> ] } | action [ shutdown | trap ] }
```

Syntax Description

no	Negate a command or set its defaults
storm-control	Configure Interface storm control
broadcast	Broadcast address storm control
multicast	Multicast address storm control
unicast	Unicast address storm control
blevel	Set allowed broadcast traffic level on this interface
mlevel	Set allowed multicast traffic level on this interface
ulevel	Set allowed unicast traffic level on this interface
<i>level</i>	Enter the storm suppression level
action	Action on storm control
shutdown	Shutdown (Err-Disable) port
trap	Generate SNMP trap

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-l2-non-member /exec/configure/if-eth-port-channel-switch

stp-root

[no] stp-root <vlan-id> <number-of-entries> <version>

Syntax Description

no	(Optional) Negate a command or set its defaults
stp-root	Generate STP root, test cmd
<i>vlan-id</i>	Enter the vlan-id
<i>number-of-entries</i>	Enter the number of entries
<i>version</i>	Enter 1 for L2gip 0 for Edge TCN

Command Mode

- /exec/configure/l2mp-isis/l2mp-isis-vrf-common

streetaddress

{ streetaddress <line> | no streetaddress }

Syntax Description

no	Negate a command or set its defaults
streetaddress	Configure replacement part shipping address.
<i>line</i>	Provide street address (white spaces are fine)

Command Mode

- /exec/configure/callhome

stub

```
{ { [ eigrp ] stub [ { [ direct | connected | static | summary ] [ redistributed ] } + [ leak-map <leak-map> ] | {
receive-only } ] } } | { no [ eigrp ] stub [ { [ direct | connected | static | summary ] [ redistributed ] } + [ leak-map
<leak-map> ] | { receive-only } ] } }
```

Syntax Description

no	Negate a command or set its defaults
eigrp	(Optional) EIGRP router configuration commands
stub	Set IP-EIGRP as stubbed router
direct	(Optional) Do advertise connected routes
connected	(Optional) Do advertise connected routes
static	(Optional) Do advertise static routes
summary	(Optional) Do advertise summary routes
redistributed	(Optional) Do advertise redistributed routes
leak-map	(Optional) Allow dynamic prefixes based on the leak-map
<i>leak-map</i>	(Optional) leak-map name
receive-only	(Optional) Set IP-EIGRP as receive only neighbor

Command Mode

- /exec/configure/router-eigrp/router-eigrp-vrf-common /exec/configure/router-eigrp/router-eigrp-af-common

subscription

[no] subscription <sub-id>

Syntax Description

no	(Optional) Negate a command or set its defaults
subscription	Create a Subscription
<i>sub-id</i>	Identifier

Command Mode

- /exec/configure/telemetry

summary-address

[no] summary-address { <ip-dest> <ip-mask> | <ip-prefix> } [tag <tagval> | not-advertise]

Syntax Description

no	(Optional) Negate a command or set its defaults
summary-address	Configure route summarization for redistribution
<i>ip-dest</i>	IP prefix format: i.i.i.i
<i>ip-mask</i>	IP network mask format: m.m.m.m
<i>ip-prefix</i>	IP prefix format: x.x.x.x/ml
tag	(Optional) 32-bit tag value
<i>tagval</i>	(Optional) 32-bit tag value
not-advertise	(Optional) Suppress advertising the specified summary

Command Mode

- /exec/configure/router-ospf /exec/configure/router-ospf/vrf

summary-address

summary-address { <ip-addr> <ip-mask> | <ip-prefix> } <level> | no summary-address { <ip-addr> <ip-mask> | <ip-prefix> } [<level>]

Syntax Description

no	Negate a command or set its defaults
summary-address	Configure IP address summaries
<i>ip-addr</i>	IP summary address
<i>ip-mask</i>	IP summary mask
<i>ip-prefix</i>	IP summary prefix
<i>level</i>	Level to summarize into

Command Mode

- /exec/configure/router-isis/router-isis-vrf-common /exec/configure/router-isis/router-isis-af-ipv4

summary-address

summary-address <ipv6-prefix> <level> | no summary-address <ipv6-prefix> [<level>]

Syntax Description

no	Negate a command or set its defaults
summary-address	Configure IP address summaries
<i>level</i>	Level to summarize into

Command Mode

- /exec/configure/router-isis/router-isis-af-ipv6

summary-address

[no] summary-address <ipv6-prefix> [tag <tagval> | not-advertise]

Syntax Description

no	(Optional) Negate a command or set its defaults
summary-address	Configure route summarization for redistribution
tag	(Optional) 32-bit tag value
<i>tagval</i>	(Optional) 32-bit tag value
not-advertise	(Optional) Suppress advertising the specified summary

Command Mode

- /exec/configure/router-ospf3/router-ospf3-af-ipv6 /exec/configure/router-ospf3/vrf/router-ospf3-af-ipv6

suppress-arp

[no] suppress-arp

Syntax Description

no	(Optional) Negate a command or set its defaults
suppress-arp	Enable ARP suppression

Command Mode

- /exec/configure/if-nve/vni

suppress-fib-pending

[no] suppress-fib-pending

Syntax Description

no	(Optional) Negate a command or set its defaults
suppress-fib-pending	Advertise only routes that are programmed in hardware to peers

Command Mode

- /exec/configure/router-eigrp/router-eigrp-vrf-common /exec/configure/router-eigrp/router-eigrp-af-common

suppress-fib-pending

[no] suppress-fib-pending

Syntax Description

no	(Optional) Negate a command or set its defaults
suppress-fib-pending	Advertise only routes that are programmed in hardware to peers

Command Mode

- /exec/configure/router-bgp

suppress-inactive

[no] suppress-inactive

Syntax Description

no	(Optional) Negate a command or set its defaults
suppress-inactive	Advertise only active routes to peers

Command Mode

- /exec/configure/router-bgp/router-bgp-af

suppress-inactive

[no | default] suppress-inactive

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
suppress-inactive	Advertise only active routes to peer

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-mdt
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-label
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv6-label

suppress-signaling-protocol ldp

[no | default] suppress-signaling-protocol ldp

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
suppress-signaling-protocol	Suppress VPLS BGP AD protocol
ldp	LDP signaling

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-l2vpn-vpls

suppress mac-route

[no] suppress mac-route

Syntax Description

no	(Optional) Negate a command or set its defaults
suppress	Suppress MAC only route advertisement
mac-route	MAC route

Command Mode

- /exec/configure/if-nve

switch-id

switch-id <asid> | no switch-id

Syntax Description

no	Negate a command or set its defaults
switch-id	Configure Switch ID
<i>asid</i>	Anycast Switch ID

Command Mode

- /exec/configure/anycast

switch-priority

switch-priority <priority> | no switch-priority

Syntax Description

no	Negate the command
switch-priority	Switch priority
<i>priority</i>	Priority

Command Mode

- /exec/configure/fex

switch-priority

{ switch-priority <i0> | no switch-priority }

Syntax Description

no	Negate a command or set its defaults
switch-priority	Priority of the switch(0-highest 7-lowest)
<i>i0</i>	Priority of the switch(0-highest 7-lowest)

Command Mode

- /exec/configure/callhome

switch-profile

switch-profile <s0>

Syntax Description

switch-profile	Enter switch-profile configuration mode
<i>s0</i>	Enter the name of the switch-profile

Command Mode

- /exec/configure

switch-profile

[no] switch-profile <s0> { profile-only { local | all } | local-config | all-config }

Syntax Description

no	Negate a command or set its defaults
switch-profile	Enter switch-profile configuration mode
s0	Enter the name of the switch-profile
profile-only	Deletion of profile only and no other configuration
local	Deletion of profile only and no other configurations in local switch
all	Deletion of profile only and no other configurations from all the peers
local-config	Deletion of profile and local configuration
all-config	Deletion of profile, local and peer configurations

Command Mode

- /exec/configure

switch-scope controller

{ switch-scope controller <controller-id> | no switch-scope controller }

Syntax Description

no	Negate a command or set its defaults
switch-scope	switch-scope
controller	Controller command
<i>controller-id</i>	Controller id

Command Mode

- /exec

switchback

switchback

Syntax Description

switchback	switchback to default vdc
------------	---------------------------

Command Mode

- /exec

switching-mode fabric-speed 40g

[no] switching-mode fabric-speed 40g

Syntax Description

no	(Optional) Negate a command or set its defaults
switching-mode	Configure the operating switching-mode of asics
fabric-speed	fabric speed settings
40g	fabric speed at 40g instead of 42g

Command Mode

- /exec/configure

switching-mode store-forward

[no] switching-mode store-forward

Syntax Description

no	(Optional) Negate a command or set its defaults
switching-mode	Configure the operating switching-mode of asics
store-forward	Operate in store and forward mode

Command Mode

- /exec/configure

switchport

switchport

Syntax Description

switchport	Configure switchport parameters
------------	---------------------------------

Command Mode

- /exec/configure/if-eth-non-member /exec/configure/if-ethernet-all /exec/configure/if-port-channel /exec/configure/if-ethernet-p2p

switchport

[no] switchport

Syntax Description

no	Negate a command or set its defaults
switchport	Configure switchport parameters

Command Mode

- /exec/configure/if-ethernet-switch /exec/configure/if-eth-non-member /exec/configure/if-ethernet /exec/configure/if-ethernet-switch /exec/configure/if-ethernet-all /exec/configure/if-port-channel /exec/configure/if-ethernet-p2p

switchport access vlan

switchport access vlan <vlan-id-access> | no switchport access vlan

Syntax Description

no	Negate a command or set its defaults
switchport	Configure switchport parameters
access	Set access mode characteristics of the interface
vlan	Set VLAN when interface is in access mode
<i>vlan-id-access</i>	VLAN ID of the VLAN when this port is in access mode

Command Mode

- /exec/configure/if-ethernet-switch /exec/configure/if-ethernet-p2p-switch
/exec/configure/if-remote-ethernet-switch

switchport access vlan

switchport access vlan <vlan-id-access> | no switchport access vlan

Syntax Description

no	Negate a command or set its defaults
switchport	Configure switchport parameters
access	Set access mode characteristics of the interface
vlan	Set VLAN when interface is in access mode
<i>vlan-id-access</i>	VLAN ID of the VLAN when this port is in access mode

Command Mode

- /exec/configure/if-ethernet-all

switchport access vlan

switchport access vlan <vlan-id-access> | no switchport access vlan

Syntax Description

no	Negate a command or set its defaults
switchport	Configure switchport parameters
access	Set access mode characteristics of the interface
vlan	Set VLAN when interface is in access mode
<i>vlan-id-access</i>	VLAN ID of the VLAN when this port is in access mode

Command Mode

- /exec/configure/if-eth-port-channel-switch

switchport autostate exclude

```
switchport autostate exclude [ vlan { <exclude-vlans> | add <add-vlans> | except <except-vlans> | remove
<remove-vlans> | all | none } ] | no switchport autostate exclude [ dummy ] [ vlan { <exclude-vlans> | add
<add-vlans> } ]
```

Syntax Description

no	Negate a command or set its defaults
switchport	Configure switchport parameters
autostate	Include or exclude this port from vlan link up calculation
exclude	Exclude this port from vlan link up calculation
vlan	(Optional) VLAN Id
<i>exclude-vlans</i>	(Optional) VLAN IDs of the VLANs to auto-state exclude on this interface
add	(Optional) add VLANs to except list
<i>add-vlans</i>	(Optional) VLAN IDs of the VLANs to auto-state exclude on this interface
except	(Optional) List of VLANs to excepted from auto-state exclude
<i>except-vlans</i>	(Optional) VLAN IDs of the VLANs to auto-state exclude on this interface
remove	(Optional) remove VLANs from except list
<i>remove-vlans</i>	(Optional) VLAN IDs of the VLANs to auto-state exclude on this interface
all	(Optional) Exclude all VLANs
none	(Optional) Exclude no VLANs
dummy	(Optional) Hidden Keyword

Command Mode

- /exec/configure/if-ethernet-switch /exec/configure/if-ethernet-all /exec/configure/if-gig-ether /exec/configure/if-port-channel-range /exec/configure/if-eth-port-channel-switch

switchport block unicast

switchport block { unicast | multicast } | no switchport block { unicast | multicast }

Syntax Description

no	Negate a command or set its defaults
switchport	Configure switchport parameters
block	Block specified outbound traffic for all VLANs
unicast	Block unknown unicast traffic
multicast	Block flood multicast traffic

Command Mode

- /exec/configure/if-eth-l2-non-member /exec/configure/if-ethernet-all
/exec/configure/if-eth-port-channel-switch

switchport dot1q ethertype

switchport dot1q ethertype { 0x8100 | 0x88A8 | 0x9100 | <any> } | no switchport dot1q ethertype [<any>]

Syntax Description

no	Negate a command or set its defaults
switchport	Configure switchport parameters
dot1q	Configure dot1q EtherType value
ethertype	Configure dot1q EtherType value
0x8100	Default EtherType for 802.1q frames
0x88A8	EtherType for 802.1ad double tagged frames
0x9100	EtherType for QinQ frames
<i>any</i>	Any EtherType

Command Mode

- /exec/configure/if-eth-l2-non-member /exec/configure/if-ethernet-all

switchport dot1q ethertype

switchport dot1q ethertype { 0x8100 | 0x88A8 | 0x9100 | <any> } | no switchport dot1q ethertype [<any>]

Syntax Description

no	Negate a command or set its defaults
switchport	Configure switchport parameters
dot1q	Configure dot1q EtherType value
ethertype	Configure dot1q EtherType value
0x8100	Default EtherType for 802.1q frames
0x88A8	EtherType for 802.1ad double tagged frames
0x9100	EtherType for QinQ frames
<i>any</i>	Any EtherType

Command Mode

- /exec/configure/if-eth-port-channel-switch

switchport host

[no] switchport host

Syntax Description

no	(Optional) Negate a command or set its defaults
switchport	Configure switchport parameters
host	Set port host

Command Mode

- /exec/configure/if-eth-l2-non-member /exec/configure/if-ethernet-switch
/exec/configure/if-ethernet-switch-m /exec/configure/if-ethernet-all

switchport isolated

[no] switchport isolated

Syntax Description

no	(Optional) Negate a command or set its defaults
switchport	Configure switchport parameters
isolated	Disable loop-free detection.

Command Mode

- /exec/configure/if-eth-12-non-member /exec/configure/if-ethernet-all
/exec/configure/if-eth-port-channel-switch

switchport mac-learn disable

switchport mac-learn disable | no switchport mac-learn disable

Syntax Description

no	Negate a command or set its defaults
switchport	Configure switchport parameters
mac-learn	Disable/enable mac learning on interface
disable	Disable mac learning on all VLANs on interface

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-non-member /exec/configure/if-port-channel

switchport mode

{ switchport mode { <port_mode> } | no switchport mode }

Syntax Description

no	Negate a command or set its defaults
switchport	Configure switchport parameters
mode	Enter the port mode
<i>port_mode</i>	port mode

Command Mode

- /exec/configure/if-eth-l2-non-member /exec/configure/if-ethernet-all
/exec/configure/if-eth-port-channel-switch

switchport mode

{ switchport mode { <port_mode> } | no switchport mode }

Syntax Description

no	Negate a command or set its defaults
switchport	Configure switchport parameters
mode	Enter the port mode
<i>port_mode</i>	port mode

Command Mode

- /exec/configure/if-eth-l2-non-member /exec/configure/if-ethernet-all
/exec/configure/if-eth-port-channel-switch

switchport mode fabricpath

[no] switchport mode fabricpath

Syntax Description

no	(Optional) Negate a command or set its defaults
switchport	Configure switchport parameters
mode	Enter the port mode
fabricpath	port mode fabricpath

Command Mode

- /exec/configure/if-eth-l2-non-member /exec/configure/if-ethernet-all
/exec/configure/if-eth-port-channel-switch

switchport mode monitor buffer-limit

switchport mode monitor buffer-limit { <value> [packets | bytes | kbytes | mbytes] } | no switchport mode monitor buffer-limit

Syntax Description

no	Negate a command or set its defaults
switchport	Configure switchport parameters
mode	Enter the port mode
monitor	Configures an interface as span-destination
buffer-limit	Set buffer limit for span destination
<i>value</i>	Limit in terms of packets
packets	(Optional) Packets
bytes	(Optional) Bytes
kbytes	(Optional) Kilo bytes
mbytes	(Optional) Mega bytes

Command Mode

- /exec/configure/if-eth-l2-non-member /exec/configure/if-ethernet-all
/exec/configure/if-eth-port-channel-switch

switchport mode private-vlan

```
{ switchport mode private-vlan <port_mode> } | { no switchport mode private-vlan [ <port_mode> ] }
```

Syntax Description

no	Negate a command or set its defaults
switchport	Configure switchport parameters
mode	Enter the port mode
private-vlan	Set the private VLAN configuration
<i>port_mode</i>	private vlan mode

Command Mode

- /exec/configure/if-ethernet-switch /exec/configure/if-ethernet-all /exec/configure/if-eth-port-channel-switch /exec/configure/if-remote-ethernet-switch

switchport mode private-vlan trunk

```
{ switchport mode private-vlan trunk <trunk_mode> } | { no switchport mode private-vlan trunk [ <trunk_mode> ] }
```

Syntax Description

no	Negate a command or set its defaults
switchport	Configure switchport parameters
mode	Enter the port mode
private-vlan	Set the private VLAN configuration
trunk	private-vlan trunk
<i>trunk_mode</i>	private vlan trunk mode

Command Mode

- /exec/configure/if-ethernet-switch /exec/configure/if-ethernet-all /exec/configure/if-eth-port-channel-switch /exec/configure/if-remote-ethernet-switch

switchport monitor

switchport monitor [ingress [learning]] | no switchport monitor

Syntax Description

no	Negate a command or set its defaults
switchport	Configure switchport parameters
monitor	Configures an interface as span-destination
ingress	(Optional) Enables the forwarding on incoming packets
learning	(Optional) Enables mac-learning

Command Mode

- /exec/configure/if-eth-l2-non-member /exec/configure/if-ethernet-all
/exec/configure/if-eth-port-channel-switch

switchport port-security

[no] switchport port-security

Syntax Description

no	(Optional) Negate a command or set its defaults
switchport	Configure switchport parameters
port-security	Port security related command

Command Mode

- /exec/configure/if-switching

switchport port-security aging time

[no] switchport port-security aging time <value>

Syntax Description

no	(Optional) Negate a command or set its defaults
switchport	Configure switchport parameters
port-security	Port security related command
aging	Port-security aging commands
time	Port-security aging time
<i>value</i>	Aging time in minutes. Enter a value between 1 and 1440

Command Mode

- /exec/configure/if-switching

switchport port-security aging type absolute

[no] switchport port-security aging type { absolute | inactivity }

Syntax Description

no	(Optional) Negate a command or set its defaults
switchport	Configure switchport parameters
port-security	Port security related command
aging	Port-security aging commands
type	Type of timers
absolute	Absolute Timer
inactivity	Inactivity Timer

Command Mode

- /exec/configure/if-switching

switchport port-security mac-address

[no] switchport port-security mac-address <mac-address> [vlan <vlanid>]

Syntax Description

no	(Optional) Negate a command or set its defaults
switchport	Configure switchport parameters
port-security	Port security related command
mac-address	MAC address
<i>mac-address</i>	48 bit mac address format HHHH.HHHH.HHHH
vlan	(Optional) Vlan on which the mac address should be secured
<i>vlanid</i>	(Optional) vlan id. Enter a value between 1 and 4094

Command Mode

- /exec/configure/if-switching

switchport port-security mac-address sticky

[no] switchport port-security mac-address sticky

Syntax Description

no	(Optional) Negate a command or set its defaults
switchport	Configure switchport parameters
port-security	Port security related command
mac-address	MAC address
sticky	Sticky MAC address

Command Mode

- /exec/configure/if-switching

switchport port-security maximum

[no] switchport port-security maximum <value> [vlan <vlanid>]

Syntax Description

no	(Optional) Negate a command or set its defaults
switchport	Configure switchport parameters
port-security	Port security related command
maximum	Max secure addresses
<i>value</i>	Maximum addresses 1 to 1025
vlan	(Optional) Vlan on which the mac address should be secured
<i>vlanid</i>	(Optional) vlan id. Enter a value between 1 and 4094

Command Mode

- /exec/configure/if-switching

switchport port-security violation

[no] switchport port-security violation { protect | restrict | shutdown }

Syntax Description

no	(Optional) Negate a command or set its defaults
switchport	Configure switchport parameters
port-security	Port security related command
violation	Security violation mode
protect	security violation protect mode
restrict	security violation restrict mode
shutdown	security violation shutdown mode

Command Mode

- /exec/configure/if-switching

switchport private-vlan association trunk

```
{ switchport private-vlan association trunk <primary-vlan> <secondary-vlan> } | { no switchport private-vlan association trunk [ <primary-vlan> [ <secondary-vlan> ] ] }
```

Syntax Description

switchport	Configure switchport parameters
private-vlan	Set the private VLAN configuration
association	private vlan trunk association
trunk	private-vlan trunk secondary
no	Negate a command or set its defaults
<i>primary-vlan</i>	Primary VLAN ID
<i>secondary-vlan</i>	Secondary VLAN ID

Command Mode

- /exec/configure/if-switching /exec/configure/if-eth-port-channel-switch

switchport private-vlan host-association

{ switchport private-vlan host-association <primary-vlan> <secondary-vlan> } | { no switchport private-vlan host-association }

Syntax Description

switchport	Configure switchport parameters
private-vlan	Set the private VLAN configuration
host-association	Set the private VLAN host association
no	Negate a command or set its defaults
<i>primary-vlan</i>	Primary VLAN ID
<i>secondary-vlan</i>	Secondary VLAN ID

Command Mode

- /exec/configure/if-switching /exec/configure/if-eth-port-channel-switch

switchport private-vlan mapping

```
{ switchport private-vlan mapping <primary-vlan> [ { add | remove } ] <secondary_vlans> } | { no switchport private-vlan mapping [ <primary-vlan> <secondary_vlans> ] }
```

Syntax Description

switchport	Configure switchport parameters
private-vlan	Set the private VLAN configuration
mapping	Set the private VLAN access/trunk promiscuous mapping
add	(Optional) Add a VLAN to private VLAN list
remove	(Optional) Remove a VLAN from private VLAN list
no	Negate a command or set its defaults
<i>primary-vlan</i>	Primary private VLAN
<i>secondary_vlans</i>	Secondary VLAN IDs

Command Mode

- /exec/configure/if-switching /exec/configure/if-eth-port-channel-switch

switchport private-vlan mapping trunk

```
{ switchport private-vlan mapping trunk <primary-vlan> [ { add | remove } ] <secondary_vlans> } | { no
switchport private-vlan mapping trunk [ <primary-vlan> [ <secondary_vlans> ] ] }
```

Syntax Description

switchport	Configure switchport parameters
private-vlan	Set the private VLAN configuration
mapping	Set the private VLAN access/trunk promiscuous mapping
add	(Optional) Add a VLAN to private VLAN list
remove	(Optional) Remove a VLAN from private VLAN list
no	Negate a command or set its defaults
trunk	private-vlan trunk promiscuous
<i>primary-vlan</i>	Primary private VLAN
<i>secondary_vlans</i>	Secondary VLAN IDs

Command Mode

- /exec/configure/if-switching /exec/configure/if-eth-port-channel-switch

switchport private-vlan trunk allowed vlan

switchport private-vlan trunk allowed vlan { <allowed-vlans> | add <add-vlans> | except <except-vlans> | remove <remove-vlans> | all | none } | no switchport private-vlan trunk allowed vlan <no-allowed-vlans>

Syntax Description

switchport	Configure switchport parameters
private-vlan	Set the private VLAN configuration
trunk	Set the private vlan trunking configuration
allowed	Set allowed VLANs when interface is in private-vlan trunking mode
vlan	VLAN status
<i>allowed-vlans</i>	VLAN IDs of the allowed VLANs when interface is in private-vlan trunking mode
add	add VLANs to the current list
<i>add-vlans</i>	VLAN IDs of the allowed VLANs when interface is in private-vlan trunking mode
except	all VLANs except the following
<i>except-vlans</i>	VLAN IDs of disallowed VLANs when this port is in trunking mode
remove	remove VLANs from the current list
<i>remove-vlans</i>	VLAN IDs of disallowed VLANs when this port is in trunking mode
all	all VLANs
none	no VLANs
no	Negate a command or set its defaults
<i>no-allowed-vlans</i>	VLAN IDs of disallowed VLANs when this port is in trunking mode

Command Mode

- /exec/configure/if-switching /exec/configure/if-eth-port-channel-switch

switchport private-vlan trunk native vlan

{ switchport private-vlan trunk native vlan <native-vlan> } | { no switchport private-vlan trunk native vlan }

Syntax Description

switchport	Configure switchport parameters
private-vlan	Set the private VLAN configuration
no	Negate a command or set its defaults
trunk	Set the private vlan trunking configuration
native	Set the private vlan trunking native configuration
vlan	VLAN status
<i>native-vlan</i>	native vlan id

Command Mode

- /exec/configure/if-switching /exec/configure/if-eth-port-channel-switch

switchport trunk allowed vlan

switchport trunk allowed vlan { <allow-vlans> | add <add-vlans> | except <except-vlans> | remove <remove-vlans> | all | none } | no switchport trunk allowed vlan

Syntax Description

no	Negate a command or set its defaults
switchport	Configure switchport parameters
trunk	Configure trunking parameters on an interface
allowed	Set allowed VLAN characteristics when interface is in trunking mode
vlan	Set allowed VLANs when interface is in trunking mode
<i>allow-vlans</i>	VLAN IDs of the allowed VLANs when this port in trunking mode
add	add VLANs to the current list
<i>add-vlans</i>	VLAN IDs of the allowed VLANs when this port in trunking mode
all	all VLANs
except	all VLANs except the following
<i>except-vlans</i>	VLAN IDs of the allowed VLANs when this port in trunking mode
none	no VLANs
remove	remove VLANs from the current list
<i>remove-vlans</i>	VLAN IDs of the allowed VLANs when this port in trunking mode

Command Mode

- /exec/configure/if-ethernet-switch /exec/configure/if-ethernet-p2p-switch
/exec/configure/if-remote-ethernet-switch /exec/configure/if-ethernet-all
/exec/configure/if-eth-port-channel-switch

switchport trunk native vlan

switchport trunk native vlan <vlan-id-native> | no switchport trunk native vlan

Syntax Description

no	Negate a command or set its defaults
switchport	Configure switchport parameters
trunk	Configure trunking parameters on an interface
native	Set trunking native characteristics when interface is in trunking mode
vlan	Set native VLAN when interface is in trunking mode
<i>vlan-id-native</i>	VLAN ID of the native VLAN when this port is in trunking mode

Command Mode

- /exec/configure/if-ethernet-switch /exec/configure/if-ethernet-p2p-switch
/exec/configure/if-remote-ethernet-switch /exec/configure/if-ethernet-all
/exec/configure/if-eth-port-channel-switch

switchport trunk pruning vlan except add remove none all

{ no switchport trunk pruning vlan [<vlan-ids>] | switchport trunk pruning vlan <vlan-ids> | switchport trunk pruning vlan except <vlan-ids> | switchport trunk pruning vlan add <vlan-ids> | switchport trunk pruning vlan remove <vlan-ids> | switchport trunk pruning vlan none | switchport trunk pruning vlan all }

Syntax Description

no	Negate a command or set its defaults
switchport	Configure switchport parameters
trunk	Configure trunking parameters on an interface
pruning	Set pruning VLAN characteristics when interface is in trunking mode
vlan	Enter VLANs
add	add VLANs to the current list
remove	remove VLANs from the current list
except	all VLANs except the following
none	no VLANs
all	all VLANs
<i>vlan-ids</i>	(Optional) Enter VLANs

Command Mode

- /exec/configure/if-switching

switchport vlan mapping

[no] switchport vlan mapping <vlan-id-orig> [inner <vlan-id-inner>] <vlan-id-translated>

Syntax Description

no	(Optional) Negate a command or set its defaults
switchport	Configure switchport parameters
vlan	Set VLAN translation mapping
mapping	VLAN translation mapping
<i>vlan-id-orig</i>	VLAN ID 1-3967
inner	(Optional) inner vlanid
<i>vlan-id-inner</i>	(Optional) Inner VLAN ID
<i>vlan-id-translated</i>	Translated VLAN ID

Command Mode

- /exec/configure/if-ethernet-switch /exec/configure/if-ethernet-p2p-switch
/exec/configure/if-remote-ethernet-switch /exec/configure/if-ethernet-all
/exec/configure/if-eth-port-channel-switch

switchport vlan mapping all

[no] switchport vlan mapping all

Syntax Description

no	Negate a command or set its defaults
switchport	Configure switchport parameters
vlan	Set VLAN translation mapping
mapping	VLAN translation mapping
all	all VLANs

Command Mode

- /exec/configure/if-ethernet-switch /exec/configure/if-ethernet-p2p-switch
/exec/configure/if-remote-ethernet-switch /exec/configure/if-ethernet-all
/exec/configure/if-eth-port-channel-switch

switchport vlan mapping all dot1q-tunnel

[no] switchport vlan mapping all dot1q-tunnel <vlan-id-translated>

Syntax Description

no	(Optional) Negate a command or set its defaults
switchport	Configure switchport parameters
vlan	Set VLAN translation mapping
mapping	VLAN translation mapping
all	all VLANs
dot1q-tunnel	selective dot1q-tunnel
<i>vlan-id-translated</i>	Translated VLAN ID

Command Mode

- /exec/configure/if-ethernet-switch /exec/configure/if-ethernet-p2p-switch
/exec/configure/if-remote-ethernet-switch /exec/configure/if-ethernet-all
/exec/configure/if-eth-port-channel-switch

switchport vlan mapping all dot1q-tunnel

[no] switchport vlan mapping all dot1q-tunnel

Syntax Description

no	Negate a command or set its defaults
switchport	Configure switchport parameters
vlan	Set VLAN translation mapping
mapping	VLAN translation mapping
all	all VLANs
dot1q-tunnel	selective dot1q-tunnel

Command Mode

- /exec/configure/if-ethernet-switch /exec/configure/if-ethernet-p2p-switch
/exec/configure/if-remote-ethernet-switch /exec/configure/if-ethernet-all
/exec/configure/if-eth-port-channel-switch

switchport vlan mapping dot1q-tunnel

[no] switchport vlan mapping <vlan-id-orig2> dot1q-tunnel <vlan-id-translated>

Syntax Description

no	(Optional) Negate a command or set its defaults
switchport	Configure switchport parameters
vlan	Set VLAN translation mapping
mapping	VLAN translation mapping
<i>vlan-id-orig2</i>	VLAN ID 1-4094 or Vlan range(s): 1-5, 10 or 2-5,7-19 for Selective dot1q-tunnel
dot1q-tunnel	selective dot1q-tunnel
<i>vlan-id-translated</i>	Translated VLAN ID

Command Mode

- /exec/configure/if-ethernet-switch /exec/configure/if-ethernet-p2p-switch
/exec/configure/if-remote-ethernet-switch /exec/configure/if-ethernet-all
/exec/configure/if-eth-port-channel-switch

switchport vlan mapping dot1q-tunnel allowed-vlan

[no] switchport vlan mapping dot1q-tunnel allowed-vlan <vlan-id-list>

Syntax Description

no	(Optional) Negate a command or set its defaults
switchport	Configure switchport parameters
vlan	Set VLAN translation mapping
mapping	VLAN translation mapping
dot1q-tunnel	selective dot1q-tunnel
allowed-vlan	Set allowed VLAN characteristics when interface is in trunking mode
<i>vlan-id-list</i>	VLAN ID 1-4094 or range(s): 1-5, 10 or 2-5,7-19

Command Mode

- /exec/configure/if-ethernet-switch /exec/configure/if-ethernet-p2p-switch
/exec/configure/if-remote-ethernet-switch /exec/configure/if-ethernet-all
/exec/configure/if-eth-port-channel-switch

switchport vlan mapping enable

[no] switchport vlan mapping enable

Syntax Description

no	(Optional) Negate a command or set its defaults
switchport	Configure switchport parameters
vlan	Set VLAN translation mapping
mapping	VLAN translation mapping
enable	enable/disable VLAN translation

Command Mode

- /exec/configure/if-ethernet-switch /exec/configure/if-ethernet-p2p-switch
/exec/configure/if-remote-ethernet-switch /exec/configure/if-ethernet-all
/exec/configure/if-eth-port-channel-switch

switchto vdc

```
switchto vdc <e-vdc2> [ force ] [ bypass ] [ __readonly__ <vdc_id> <invalid_vdc_id> <noauth_vdc_id>
<no_first> ]
```

Syntax Description

switchto	Goto specific Virtual Device Context <vdc-name> <vdc-id>
vdc	Manage Virtual Device Context
<i>e-vdc2</i>	Enter Virtual Device Context <vdc-id>
<i>__readonly__</i>	(Optional) Read Only
force	(Optional) force
<i>vdc_id</i>	(Optional) Enter Virtual Device Context <vdc-id>
<i>invalid_vdc_id</i>	(Optional) Enter Virtual Device Context <vdc-id>
<i>noauth_vdc_id</i>	(Optional) Enter Virtual Device Context <vdc-id>
<i>no_first</i>	(Optional) Enter Virtual Device Context <vdc-id>
bypass	(Optional) Enter Virtual Device Context <vdc-id>

Command Mode

- /exec/

sync-peers destination

sync-peers destination <dst-ip> [source <src-ip> | vrf <vrf-name>] + | no sync-peers destination [<dst-ip> [source <src-ip>]]

Syntax Description

no	Negate a command or set its defaults
sync-peers	Specify peers to whom configuration needs to be synced
destination	Specify destination ip address of peer switch
<i>dst-ip</i>	IPv4 address (A.B.C.D) of destination
source	(Optional) Source interface for sending out configs
<i>src-ip</i>	(Optional) IPv4 address (A.B.C.D) of source
vrf	(Optional) vrf to be used default/management
<i>vrf-name</i>	(Optional) vrf to be used

Command Mode

- /exec/configure

sync-snmp-password

sync-snmp-password <s0>

Syntax Description

sync-snmp-password	sync snmp password
<i>s0</i>	password

Command Mode

- /exec

sync-snmp-password

sync-snmp-password <s0> <s1> <s2>

Syntax Description

sync-snmp-password	sync snmp password
<i>s0</i>	password
<i>s1</i>	user
<i>s2</i>	snmp client host

Command Mode

- /exec

sync-snmp-password

[no] sync-snmp-password <*s0*>

Syntax Description

no	(Optional) Negate a command or set its defaults
sync-snmp-password	sync snmp password
<i>s0</i>	password

Command Mode

- /exec/configure

syslog

```
syslog { msg <s0> | priority { <i0> msg1 <s1> | alerts msg2 <s2> | critical msg3 <s3> | debugging msg4 <s4>
| emergencies msg5 <s5> | errors msg6 <s6> | informational msg7 <s7> | notifications msg8 <s8> | warnings
msg9 <s9> } }
```

Syntax Description

syslog	Execute a logging command
msg	Log EEM action message
<i>s0</i>	Enter the msg (max 300 chars)
priority	Priority of the log message
<i>i0</i>	Enter priority of the log message
msg1	Log EEM action message
<i>s1</i>	Enter the msg (max 300 chars)
alerts	Alert log message
msg2	Log EEM action message
<i>s2</i>	Enter the msg (max 300 chars)
critical	Critical log message
msg3	Log EEM action message
<i>s3</i>	Enter the msg (max 300 chars)
debugging	Debugging log message
msg4	Log EEM action message
<i>s4</i>	Enter the msg (max 300 chars)
emergencies	Emergency log message
msg5	Log EEM action message
<i>s5</i>	Enter the msg (max 300 chars)
errors	Error log message
msg6	Log EEM action message
<i>s6</i>	Enter the msg (max 300 chars)
informational	Informational log message
msg7	Log EEM action message

<i>s7</i>	Enter the msg (max 300 chars)
notifications	Notifications log message
msg8	Log EEM action message
<i>s8</i>	Enter the msg (max 300 chars)
warnings	Warning log message
msg9	Log EEM action message
<i>s9</i>	Enter the msg (max 300 chars)

Command Mode

- /exec

system-mac

[no] system-mac <mac-addr>

Syntax Description

no	(Optional) Negate a command or set its defaults
system-mac	Mac Address
<i>mac-addr</i>	specify system mac address

Command Mode

- /exec/configure/if-eth-port-channel/ethernet-segment

system-mac

system-mac <sysmac> | no system-mac

Syntax Description

no	Negate a command or set its defaults
system-mac	Configure system mac address
<i>sysmac</i>	specify system mac address

Command Mode

- /exec/configure/vpc-domain

system-priority

system-priority <syspri> | no system-priority

Syntax Description

no	Negate a command or set its defaults
system-priority	Configure system priority
<i>syspri</i>	specify system priority

Command Mode

- /exec/configure/vpc-domain

system

```
[no] system { { routing { hierarchical def-max-mode l3 64b-alpm | non-hierarchical [ max-mode l3-nh [
64b-alpm-nh ] ] | max-mode host | max-mode-tor { l2 | l3 | l2-l3 } | template-overlay-host-scale |
template-lpm-heavy | template-lpm-scale-v6-64 | template-dual-stack-host-scale | template-dynamic-trie-scale
| template-multicast-heavy | template-vxlan-scale | template-mpls-heavy | template-internet-peering |
template-multicast-nbm } } | { non-hierarchical-routing [ max-l3-mode ] } }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
system	System Management Commands
routing	Layer-3 routing
hierarchical	Host routing on LC and LPM routing in FM
non-hierarchical	Disable mode of host routing on LC and LPM routing in Fabric modules
non-hierarchical-routing	Disable mode of host routing on LC and LPM routing in Fabric modules
def-max-mode	Maximum scale to be enabled
max-mode	(Optional) Maximum scale to be enabled
max-mode-tor	Maximum scale to be enabled
l2	Max Layer-2 records and fewer Layer-3 host routes
l3	Layer-3 longest-prefix-match (LPM) routes
l2-l3	Balance of both Layer-2 records and Layer-3 host routes
l3-nh	(Optional) Layer-3 longest-prefix-match (LPM) routes
64b-alpm	IPv6 routes with masks /64 or shorter
64b-alpm-nh	(Optional) IPv6 routes with masks /64 or shorter
max-l3-mode	(Optional) Enable ALPM mode (Mode-4 in T2)
host	host routes
template-internet-peering	Internet Peering
template-overlay-host-scale	Overlay Host Scale
template-lpm-heavy	LPM Heavy
template-lpm-scale-v6-64	LPM Scale V6 64
template-dual-stack-host-scale	Dual Stack Host Scale
template-dynamic-trie-scale	Dynamic TRIE Scale

template-multicast-heavy	Multicast Heavy Scale
template-multicast-nbm	Multicast NBM Scale
template-mpls-heavy	MPLS Heavy Scale
template-vxlan-scale	Vxlan Scale

Command Mode

- /exec/configure

system auto-collect tech-support

system [no] auto-collect tech-support [timeout <time>]

Syntax Description

system	System management commands
no	(Optional) Negate a command or set its defaults
auto-collect	Auto collection of information
tech-support	Collect tech-support in case of service causing supervisor reset
timeout	(Optional) Collect tech-support timeout
<i>time</i>	(Optional) Timeout in seconds

Command Mode

- /exec

system cores

```
{ system cores { { <uri0> } | { <uri1> vrf <vrf-known-name> } } | no system cores [ { { <uri0> } | { <uri1>
vrf <vrf-known-name> } } ] }
```

Syntax Description

no	Negate a command or set its defaults
system	System configuration commands
cores	Copy cores to destination
<i>uri0</i>	Select destination filesystem
<i>uri1</i>	Select destination filesystem
vrf	Enter the vrf name
<i>vrf-known-name</i>	VRF name

Command Mode

- /exec/configure

system cores retain

[no] system cores retain

Syntax Description

no	(Optional) Negate a command or set its defaults
system	System configuration commands
cores	Copy cores to destination
retain	keep the cores

Command Mode

- /exec/configure

system default interface-vlan autostate

[no] system default interface-vlan autostate

Syntax Description

no	(Optional) Negate a command or set its defaults
system	System configuration commands
interface-vlan	Configure interface-vlan
default	Configure system default values
autostate	Enable or disable autostate for entire system

Command Mode

- /exec/configure

system default interface

```
{ system default interface { congestion { timeout <i0> mode { core | edge } | mode { core | edge } } | pause
{ timeout <i1> mode1 { core | edge } | mode1 { core | edge } } } | no system default interface { congestion {
timeout <i0> mode { core | edge } | mode { core | edge } } | pause { timeout <i1> mode1 { core | edge } |
mode1 { core | edge } } } }
```

Syntax Description

no	Negate a command or set its defaults
system	System configuration commands
default	Configure system default values
interface	Configure system default interface values
congestion	Configure system timeout values for congestion drop
pause	Configure system timeout values for pause frame
timeout	Configure system timeout values
<i>i0</i>	Configure number of milliseconds
<i>i1</i>	Configure number of milliseconds
mode	Configure mode
mode1	Configure mode
core	Enter the port type
edge	Enter the port type

Command Mode

- /exec/configure

system default switchport

{ [no] system default switchport }

Syntax Description

no	(Optional) Negate a command or set its defaults
system	System configuration commands
default	Configure system default values
switchport	Configure switchport

Command Mode

- /exec/configure

system default switchport fabricpath

{ system default switchport fabricpath | no system default switchport fabricpath }

Syntax Description

no	Negate a command or set its defaults
system	System configuration commands
default	Configure system default values
switchport	Configure switchport
fabricpath	Configure default port mode as fabricpath

Command Mode

- /exec/configure

system default switchport shutdown

{ [no] system default switchport shutdown }

Syntax Description

no	(Optional) Negate a command or set its defaults
system	System configuration commands
default	Configure system default values
switchport	Configure switchport
shutdown	Configure admin state

Command Mode

- /exec/configure

system dme enable

[no] system dme enable

Syntax Description

no	(Optional) Negate a command or set its defaults
system	System Management Commands
dme	Manage 4G DME enable/disable
enable	enable

Command Mode

- /exec/configure

system dot1q-tunnel transit

[no] system dot1q-tunnel transit

Syntax Description

no	(Optional) Negate a command or set its defaults
system	System Management Commands
dot1q-tunnel	Dot1Q tunnel
transit	Transit box for multi-tag Ethernet Frames

Command Mode

- /exec/configure

system fabric-mode full-rate

[no] system fabric-mode full-rate

Syntax Description

no	(Optional) Negate a command or set its defaults
system	System Management Commands
fabric-mode	Configure the operating mode of the fabrics
full-rate	Operates fabrics in Full Rate Mode

Command Mode

- /exec/configure

system fabric core-vlans

{ system fabric core-vlans <id> | no system fabric core-vlans }

Syntax Description

no	Negate a command or set its defaults
system	System management commands
fabric	Manage fabric dynamic vlan ranges
core-vlans	Configure the dynamic core vlan range
<i>id</i>	VLAN ID 1-4094 or range(s): 1-5, 10 or 2-5,7-19

Command Mode

- /exec/configure

system fabric dynamic-vlans

{ system fabric dynamic-vlans <id> | no system fabric dynamic-vlans }

Syntax Description

no	Negate a command or set its defaults
system	System management commands
fabric	Manage fabric dynamic vlan ranges
dynamic-vlans	Configure the dynamic server and core vlan range
<i>id</i>	VLAN ID 1-4094 or range(s): 1-5, 10 or 2-5,7-19

Command Mode

- /exec/configure

system fast-reload stabilization-timer

system fast-reload stabilization-timer <time>

Syntax Description

system	System management commands
fast-reload	fast-reload software
stabilization-timer	Network stabilization time in seconds before fast-reload can be executed after the previous reload
<i>time</i>	time in secs

Command Mode

- /exec/configure

system hap-reset

system hap-reset

Syntax Description

system	System management commands
hap-reset	enables resetting of local or remote sup on ha failures

Command Mode

- /exec

system hap-reset

system no hap-reset

Syntax Description

system	System management commands
no	Negate a command or set its defaults
hap-reset	enables resetting of local or remote sup on ha failures

Command Mode

- /exec

system health check bootflash

system health check bootflash [fix-errors]

Syntax Description

system	System management commands
health	system health exec commands
check	run consistency check on compact flash
bootflash	check internal bootflash
fix-errors	(Optional) fix bootflash errors

Command Mode

- /exec

system heartbeat

system heartbeat

Syntax Description

system	System management commands
heartbeat	enables heartbeat

Command Mode

- /exec

system heartbeat

system no heartbeat

Syntax Description

system	System management commands
no	Negate a command or set its defaults
heartbeat	enables heartbeat

Command Mode

- /exec

system high-multicast-priority

[no] system high-multicast-priority

Syntax Description

no	(Optional) Negate a command or set its defaults
system	System Management Commands
high-multicast-priority	high priority to multicast

Command Mode

- /exec/configure

system inband queuing

```
[no] system inband queuing [ { [ round-robin ] [ bpdu weight <weight-val> ] [ q0 weight <weight-val> ] [ q1 weight <weight-val> ] [ q0 no-drop ] [ q1 no-drop ] [ pick_packets ] [ bpdu map <q-index> ] [ arp map <q-index> ] [ q0 map <q-index> ] [ q1 map <q-index> ] } ]
```

Syntax Description

no	(Optional) Negate a command or set its defaults
system	System-related show commands
inband	System Inband configuration
queuing	System Inband Queueing Algorithm
round-robin	(Optional) Simple Round-Robin
bpdu	(Optional) bpdu queue
arp	(Optional) arp queue
q0	(Optional) q0 queue (cos 4,5,6,7)
q1	(Optional) q1 queue (cos 0,1,2,3)
weight	(Optional) weight associated with the queue
no-drop	(Optional) set no drop option on queue
<i>weight-val</i>	(Optional) weights
pick_packets	(Optional) enable packet rx
map	(Optional) map to queue
<i>q-index</i>	(Optional) queue index

Command Mode

- /exec/configure

system inband queuing

system inband queuing { clear-pm-counters | clear-klm-counters | clear-all-counters | enable-timestamp | disable-timestamp }

Syntax Description

system	System-related show commands
inband	System Inband configuration
queuing	System Inband Queueing Algorithm
clear-pm-counters	clear user space inband queue counters
clear-klm-counters	clear KLM VDC inband queue counters
clear-all-counters	clear all inband queue counters
enable-timestamp	enable timestamping in klm vdc
disable-timestamp	disable timestamping in klm vdc

Command Mode

- /exec

system interface shutdown

[no] system interface shutdown [exclude fex-fabric]

Syntax Description

no	(Optional) Negate a command or set its defaults
system	System configuration commands
interface	Configure system interface config
shutdown	Configure interface shutdown
exclude	(Optional) exclude
fex-fabric	(Optional) fex-fabric

Command Mode

- /exec/configure

system jumbomtu

{ system jumbomtu <mtu> | no system jumbomtu [<mtu>] }

Syntax Description

no	Negate a command or set its defaults
system	System configuration commands
jumbomtu	Configure system jumbomtu
<i>mtu</i>	Enter jumbomtu

Command Mode

- /exec/configure

system kernel-trace

system kernel-trace [enable | disable]

Syntax Description

system	system management commands
kernel-trace	kernel tracing
enable	(Optional) enables kernel tracing
disable	(Optional) disables kernel tracing

Command Mode

- /exec

system kgdb

system kgdb

Syntax Description

system	System management commands
kgdb	enables kgdb

Command Mode

- /exec

system kgdb

system no kgdb

Syntax Description

system	System management commands
no	Negate a command or set its defaults
kgdb	enables kgdb

Command Mode

- /exec

system login block-for

[no] system login block-for

Syntax Description

no	Negate a command or set its defaults
system	System configuration commands
login	Enable secure login checking
block-for	Set quiet-mode active time period

Command Mode

- /exec/configure

system login block-for attempts within

system login block-for <i1> attempts <i2> within <i3>

Syntax Description

system	System configuration commands
login	Enable secure login checking
block-for	Set quiet-mode active time period
<i>i1</i>	Time period in seconds
attempts	Set max number of fail attempts
<i>i2</i>	Fail attempts max value
within	Watch period for fail attempts
<i>i3</i>	Time period in seconds

Command Mode

- /exec/configure

system login quiet-mode

[no] system login quiet-mode

Syntax Description

no	Negate a command or set its defaults
system	System configuration commands
login	Enable secure login checking
quiet-mode	Set quiet-mode options

Command Mode

- /exec/configure

system login quiet-mode access-class

system login quiet-mode access-class <access-list>

Syntax Description

system	System configuration commands
login	Enable secure login checking
quiet-mode	Set quiet-mode options
access-class	Set access class
<i>access-list</i>	Access-list name

Command Mode

- /exec/configure

system memory-thresholds minor severe critical

[no] system memory-thresholds minor <minor> severe <severe> critical <crit>

Syntax Description

no	(Optional) Negate a command or set its defaults
system	System configuration commands
memory-thresholds	Set memory thresholds on the card
minor	enter minor threshold
<i>minor</i>	please enter minor memory threshold as % memory
severe	enter severe treshold
<i>severe</i>	please enter severe memory threshold as % memory
critical	enter critical treshold
<i>crit</i>	please enter critical memory threshold as % memory

Command Mode

- /exec/configure

system minlife

system minlife <*i0*>

Syntax Description

system	System management commands
minlife	Set system minlife (in seconds)
<i>i0</i>	Set minlife

Command Mode

- /exec

system mode maintenance

[no] system mode maintenance [dont-generate-profile] [non-interactive] | system mode maintenance [dont-generate-profile | shutdown] [non-interactive]

Syntax Description

no	Negate a command or set its defaults
system	System configuration commands
mode	system mode commands
maintenance	system maintenance mode
dont-generate-profile	(Optional) do not generate the maintenance/normal-mode profile
shutdown	(Optional) issue shutdown instead of isolate (default)
non-interactive	(Optional) do operation non interactively in background

Command Mode

- /exec/configure

system mode maintenance always-use-custom-profile

[no] system mode maintenance always-use-custom-profile

Syntax Description

no	(Optional) Negate a command or set its defaults
system	System configuration commands
mode	system mode commands
maintenance	system maintenance mode
always-use-custom-profile	always use custom profile when entering maintenance mode

Command Mode

- /exec/configure

system mode maintenance on-reload reset-reason

[no] system mode maintenance on-reload reset-reason <reason>

Syntax Description

no	(Optional) Negate a command or set its defaults
system	System configuration commands
mode	system mode commands
maintenance	system maintenance mode
on-reload	on reload maintenance mode configuration
reset-reason	reset reason
<i>reason</i>	

Command Mode

- /exec/configure

system mode maintenance snapshot-delay

[no] system mode maintenance snapshot-delay <delay-value>

Syntax Description

no	(Optional) Negate a command or set its defaults
system	System configuration commands
mode	system mode commands
maintenance	system maintenance mode
snapshot-delay	delay after which after_maintenance snapshot will be taken
<i>delay-value</i>	delay value in seconds

Command Mode

- /exec/configure

system mode maintenance timeout

[no] system mode maintenance timeout <timer-value>

Syntax Description

no	(Optional) Negate a command or set its defaults
system	System configuration commands
mode	system mode commands
maintenance	system maintenance mode
timeout	restart maintenance mode timer with a new value
<i>timer-value</i>	timer value in minutes

Command Mode

- /exec/configure

system module failure-action shutdown

[no] system module failure-action shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
system	system Internal Information
module	module commands
failure-action	Configure module action on failure
shutdown	action on failure - shutdown

Command Mode

- /exec/configure

system mrouting performance-mode

[no] system mrouting performance-mode

Syntax Description

no	(Optional) Negate a command or set its defaults
system	System Management Commands
mrouting	Layer-3 mrouting
performance-mode	Multicast Performance Mode

Command Mode

- /exec/configure

system nve allow-vxlan-native-vlan

[no] system nve allow-vxlan-native-vlan

Syntax Description

no	(Optional) Negate a command or set its defaults
system	System management commands
nve	VXLAN interface
allow-vxlan-native-vlan	Allow a vxlan vlan to be configured as a native vlan

Command Mode

- /exec/configure

system nve drop-glean

system nve drop-glean | no system nve drop-glean

Syntax Description

no	Negate the command or set its defaults
system	System Management Commands
nve	VXLAN interface
drop-glean	Disable glean processing for VXLAN routes

Command Mode

- /exec/configure

system nve ecmp-reuse

system nve ecmp-reuse | no system nve ecmp-reuse

Syntax Description

no	Negate the command or set its defaults
system	System Management Commands
nve	VXLAN interface
ecmp-reuse	Enable ECMP reuse to scale

Command Mode

- /exec/configure

system nve infra-vlans

system nve infra-vlans <vlan-range> | no system nve infra-vlans <vlan-range>

Syntax Description

no	Negate the command or set its defaults
system	System Management Commands
nve	VXLAN interface
infra-vlans	Configure Vxlan SVI Uplinks(requires system reload)
<i>vlan-range</i>	VLAN ID 1-4094 or range(s): 1-5, 10 or 2-5,7-19 (The range of vlans configured must not exceed 512)

Command Mode

- /exec/configure

system nve infra-vlans force

system nve infra-vlans <vlan-range> force

Syntax Description

system	System Management Commands
nve	VXLAN interface
infra-vlans	Configure Vxlan SVI Uplinks(requires system reload)
<i>vlan-range</i>	VLAN ID 1-4094 or range(s): 1-5, 10 or 2-5,7-19 (The range of vlans configured must not exceed 512)
force	Force-set infra-vlans

Command Mode

- /exec/configure

system nve ingress-replication round-robin

[no] system nve ingress-replication round-robin

Syntax Description

no	(Optional) Negate a command or set its defaults
system	System Management Commands
nve	VXLAN interface
ingress-replication	VXLAN Ingress replication
round-robin	Round-Robin hashing of underlay-paths for VXLAN ingress-replication peers

Command Mode

- /exec/configure

system nve ipmc global index-size

system nve ipmc global index-size { <size> | default } | no system nve ipmc global index-size [<size>]

Syntax Description

no	Negate the command or set its defaults
system	System Management Commands
nve	VXLAN interface
ipmc	Configure ipmc index size
global	Configure global ipmc size
index-size	Configure index size
<i>size</i>	ipmc allowed size
default	Default size is 3000

Command Mode

- /exec/configure

system nve mac-learn-disable

system nve mac-learn-disable | no system nve mac-learn-disable

Syntax Description

no	Negate the command or set its defaults
system	System Management Commands
nve	VXLAN interface
mac-learn-disable	Disable mac learning on VXLAN tunnels

Command Mode

- /exec/configure

system nve mac-nat-enable

system nve mac-nat-enable | no system nve mac-nat-enable

Syntax Description

no	Negate the command or set its defaults
system	System Management Commands
nve	VXLAN interface
mac-nat-enable	Enable mac NATing for VXLAN routes

Command Mode

- /exec/configure

system nve peer-vni-counter

system nve peer-vni-counter | no system nve peer-vni-counter

Syntax Description

no	Negate the command or set its defaults
system	System Management Commands
nve	VXLAN interface
peer-vni-counter	Enable per-peer-per-vni counters

Command Mode

- /exec/configure

system nve policy-install-all

system nve policy-install-all | no system nve policy-install-all

Syntax Description

no	Negate the command or set its defaults
system	System Management Commands
nve	VXLAN interface
policy-install-all	Install policies on all slices of forwarding ASIC

Command Mode

- /exec/configure

system offline

system offline

Syntax Description

system	System management commands
offline	Go offline

Command Mode

- /exec

system private-vlan fex trunk

[no] system private-vlan fex trunk

Syntax Description

no	(Optional) Negate a command or set its defaults
system	System configuration commands
private-vlan	Configure Private VLANs
fex	Configure PVLANS on FEX Host Interface
trunk	Configure PVLANS on FEX Trunk Ports

Command Mode

- /exec/configure

system pss shrink

system pss shrink

Syntax Description

system	System management commands
pss	PSS commands
shrink	shrink pss files

Command Mode

- /exec

system qos

system qos

Syntax Description

system	System management commands
qos	QoS parameters

Command Mode

- /exec/configure

system release mod-lock uuid nodeid

system release mod-lock uuid <uuid-hex> nodeid <nodeid-hex>

Syntax Description

system	System management commands
release	release
mod-lock	module lock
uuid	uuid of the service holding the lock
<i>uuid-hex</i>	uuid
nodeid	node-id
<i>nodeid-hex</i>	nodeid

Command Mode

- /exec

system restart vdc service name

system restart vdc { <e-vdc2> | <vdc-id> } service name <s0>

Syntax Description

system	System management commands
restart	Restart a service
vdc	VDC number
<i>e-vdc2</i>	Enter VDC <vdc-id>
<i>vdc-id</i>	vdc number
service	Service to be restarted
name	Name of a service
<i>s0</i>	Name of service

Command Mode

- /exec/configure

system routing performance-mode

[no] system routing performance-mode

Syntax Description

no	(Optional) Negate a command or set its defaults
system	System Management Commands
routing	Layer-3 routing
performance-mode	Performance Mode

Command Mode

- /exec/configure

system routing unknown-unicast-flood

[no] system routing unknown-unicast-flood

Syntax Description

no	(Optional) Negate a command or set its defaults
system	System Management Commands
routing	Layer-3 routing
unknown-unicast-flood	Hardware flood post-routed traffic on SVI if dest-mac->layer2-port binding unknown

Command Mode

- /exec/configure

system shutdown fan-direction mismatch

system shutdown fan-direction mismatch | no system shutdown fan-direction mismatch

Syntax Description

no	Negate a command or set its defaults
system	System management commands
shutdown	Shutdown management commands
fan-direction	Fan-direction check
mismatch	Mismatch in check

Command Mode

- /exec/configure

system standby manual-boot

system no standby manual-boot

Syntax Description

system	System management commands
no	Negate a command or set its defaults
standby	System standby manual boot
manual-boot	No action taken to force-download standby sup

Command Mode

- /exec

system standby manual-boot

system standby manual-boot

Syntax Description

system	System management commands
standby	System standby management commands
manual-boot	No action taken to force-download standby sup

Command Mode

- /exec

system standby reload vdc

system standby reload vdc { <e-vdc2> | <i0> }

Syntax Description

system	System management commands
standby	System standby management commands
reload	Reload
vdc	vdc to reload
<i>e-vdc2</i>	Enter VDC <vdc-id>
<i>i0</i>	vdc number

Command Mode

- /exec

system startup-config init

system startup-config init

Syntax Description

system	System management commands
startup-config	System startup-config commands
init	Initialize the startup-configuration

Command Mode

- /exec

system startup-config kill config-update

system startup-config kill config-update

Syntax Description

system	System management commands
startup-config	System startup-config commands
kill	Kill configuration update
config-update	Kill configuration update

Command Mode

- /exec

system startup-config unlock

system startup-config unlock <i0>

Syntax Description

system	System management commands
startup-config	System startup-config commands
unlock	Unlock startup-config
<i>i0</i>	Startup-config lock id

Command Mode

- /exec

system statistics

system statistics

Syntax Description

system	System management commands
statistics	enables sysmgr statistics

Command Mode

- /exec

system statistics

system no statistics

Syntax Description

system	System management commands
no	Negate a command or set its defaults
statistics	disable the sysmgr statistics

Command Mode

- /exec

system switch-mode

```
system switch-mode { <mode> }
```

Syntax Description

system	System management commands
switch-mode	change switch operational mode
<i>mode</i>	switch mode

Command Mode

- /exec/configure

system switchover

system switchover

Syntax Description

system	System management commands
switchover	Switch over to the standby supervisor

Command Mode

- /exec

system switchover force

system switchover force

Syntax Description

system	System management commands
switchover	Switch over to the standby supervisor
force	Force switch over to the standby supervisor

Command Mode

- /exec

system swover-timeout-reset

[no] system swover-timeout-reset

Syntax Description

no	(Optional) Negate a command or set its defaults
system	System management commands
swover-timeout-reset	switchover timeout and reset

Command Mode

- /exec

system trace

```
{ system trace <i0> | no system trace [ <i0> ] }
```

Syntax Description

no	Negate a command or set its defaults
system	System configuration commands
trace	To configure system trace level
<i>i0</i>	Select the mask

Command Mode

- /exec/configure

system urpf disable

[no] system urpf disable

Syntax Description

no	(Optional) Negate a command or set its defaults
system	System Management Commands
urpf	Manage urpf enable/disable
disable	disable

Command Mode

- /exec/configure

system vlan long-name

[no] system vlan long-name

Syntax Description

no	(Optional) Negate a command or set its defaults
system	System management commands
vlan	Vlan commands
long-name	Configure 128 character VLAN names

Command Mode

- /exec/configure

system vlan nve-overlay id

[no] system vlan nve-overlay id <vrangle>

Syntax Description

no	(Optional) Negate a command or set its defaults
system	System management commands
vlan	Vlan commands
nve-overlay	nve overlay vlan
id	VLAN ID
<i>vrangle</i>	VLAN ID 1-4094 or range(s): 1-5, 10 or 2-5,7-19

Command Mode

- /exec/configure

system vlan reserve

system vlan <start-val> reserve | no system vlan <start-val> reserve

Syntax Description

system	system wide configuration
no	Select default reserved vlans group vlan 3968-4094
vlan	Vlan commands
<i>start-val</i>	minimum VLANs value
reserve	reservation

Command Mode

- /exec/configure

system vrf-member-change retain-l3-config

[no] system vrf-member-change retain-l3-config

Syntax Description

no	(Optional) Negate a command or set its defaults
system	System management commands
vrf-member-change	vrf member change
retain-l3-config	retain L3 configuration

Command Mode

- /exec/configure

system watchdog

system no watchdog

Syntax Description

system	System management commands
no	Negate a command or set its defaults
watchdog	enables watchdog

Command Mode

- /exec

system watchdog

system watchdog

Syntax Description

system	System management commands
watchdog	enables watchdog

Command Mode

- /exec

system watchdog kgdb

system no watchdog kgdb

Syntax Description

system	System management commands
no	Negate a command or set its defaults
watchdog	enables watchdog
kgdb	enter kgdb on watchdog failure

Command Mode

- /exec

system watchdog kgdb

system watchdog kgdb

Syntax Description

system	System management commands
watchdog	enables watchdog
kgdb	enter kgdb on watchdog failure

Command Mode

- /exec