



## Client Limit

---

- [Information About Client Limit](#), on page 1
- [Configuring Client Limit Per WLAN \(GUI\)](#), on page 1
- [Configuring Client Limit Per WLAN \(CLI\)](#), on page 1

### Information About Client Limit

This feature enforces a limit on the number of clients that can be associated with an AP. Further, you can configure the number of clients that can be associated with each AP radio.

### Configuring Client Limit Per WLAN (GUI)

#### Procedure

---

- Step 1** Choose **Configuration > Tags & Profiles > WLANs**.
  - Step 2** Click a WLAN from the list of WLANs.
  - Step 3** Click the **Advanced** tab.
  - Step 4** Under the **Max Client Connections** settings, enter the client limit for **Per WLAN**, **Per AP Per WLAN**, and **Per AP Radio Per WLAN**.
  - Step 5** Click **Update & Apply to Device**.
- 

### Configuring Client Limit Per WLAN (CLI)

#### Procedure

	Command or Action	Purpose
<b>Step 1</b>	<b>enable</b> <b>Example:</b>	Enters privileged EXEC mode.

	Command or Action	Purpose
	Device# <b>enable</b>	
<b>Step 2</b>	<b>configure terminal</b> <b>Example:</b> Device# <b>configure terminal</b>	Enters global configuration mode.
<b>Step 3</b>	<b>wlan wlan-name</b> <b>Example:</b> Device(config)# <b>wlan ramban</b>	Specifies the WLAN name.
<b>Step 4</b>	<b>client association limit</b> <i>maximum-clients-per-WLAN</i> <b>Example:</b> Device(config-wlan)# <b>client association limit 110</b>	Configures the maximum number of clients that can be associated to the given WLAN.  <b>Note</b> Depending on the primary AP in the Cisco Embedded Wireless Controller network, the maximum number of clients supported varies. For more information about the client count limit per WLAN in a Cisco Embedded Wireless Controller network, see <a href="#">Table 1: Scale Supported in a Cisco Embedded Wireless Controller Network, on page 2</a>  <b>Table 1: Scale Supported in a Cisco Embedded Wireless Controller Network</b>
<b>Step 5</b>	<b>client association limit ap</b> <i>max-clients-per-AP-per-WLAN</i> <b>Example:</b> Device(config-wlan)# <b>client association limit ap 120</b>	Configures the maximum number of clients that can be associated to an AP in the WLAN.
<b>Step 6</b>	<b>client association limit radio</b> <i>max-clients-per-AP-radio-per-WLAN</i> <b>Example:</b> Device(config-wlan)# <b>client association limit radio 100</b>	Configures the maximum number of clients that can be associated to an AP radio in the WLAN.
<b>Step 7</b>	<b>end</b> <b>Example:</b> Device(config)# <b>end</b>	Returns to privileged EXEC mode. Alternatively, you can also press <b>Ctrl-Z</b> to exit global configuration mode.
<b>Step 8</b>	<b>show wlan id wlan-id</b> <b>Example:</b> Device# <b>show wlan id 2</b>	Displays the current configuration of the WLAN and the corresponding client association limits.