



INDEX

A

AAA mode [6-10, F-2](#)

accounts

- casuser [B-10](#)
- Microsoft SQLServer
 - CDR database [B-9](#)
 - device database [B-9](#)
- Unified Communications Manager Applications Billing Server [B-4](#)
- Windows [B-10](#)

ACS mode

- authentication [6-10](#)
- Service Monitor, using in [6-13](#)
- user roles and privileges, modifying [6-13](#)
- users, configuring [6-11](#)

adding

- Cisco 1040 [4-8](#)
- TFTP server to Service Monitor [4-3](#)
- threshold groups
 - CVTQ [5-4](#)
 - sensor [5-9](#)
- Unified Communications Manager credentials [3-5](#)

administering Service Monitor

- SNMP, using to manage Service Monitor
 - queries, configuring for [6-14](#)
 - security, configuring for queries [6-15](#)
 - system application MIB log file, viewing [6-16](#)

Applications Billing Server. *See* accounts.

archiving call metrics

- disabling [4-5](#)
- enabling [4-5](#)

authentication

ACS

- ACS mode [6-10](#)
- and authorization [6-10](#)
- fallback mode [F-2](#)
- Microsoft SQLServer user accounts [B-9](#)
- non-ACS mode [6-10](#)
- SQL [B-8](#)
- Windows [B-10](#)

AXL

- Cisco Web Service, activating [B-5](#)
- Standard AXL API Access privilege [3-7](#)

B

backing up

- call metrics files [6-8](#)
- Service Monitor
 - database, manually [6-4](#)
 - database, using Common Services [6-5](#)
 - data files [6-7, 6-8](#)

C

CallManager. *See* Cisco Unified Communications Manager (Unified Communications Manager)

call metrics

- archiving, enabling and disabling [4-5](#)
- files [6-8](#)
 - backing up [6-8](#)
 - deleting [6-8](#)

cautions

- license limit
 - exceeding [D-4](#)
 - incrementing beyond [D-3](#)
- smuser password, updating [3-17](#)
- space in cluster ID [3-7](#)
- Unified Communications Manager database [B-8, B-9](#)

CDR database

- SQL authentication [B-9](#)
- Unified Communications Manager credential status [3-3](#)

CDR DB. *See* CDR database

Cisco 1040

- adding [4-8](#)
- deleting [4-11](#)
- editing [4-9, 4-10](#)
- failover, understanding [4-15](#)
- resetting [4-11](#)
- unreachable, trap [4-17](#)
- web interface [4-14](#)

Cisco Secure Access Control Server (ACS) [6-10](#)

Cisco Unified Communications Manager (Unified Communications Manager)

- configuring [B-1](#)
- credentials [3-2](#)
- hostname [3-8](#)
- last contact status [3-2, 3-4](#)
- version used [3-12](#)

Cisco Unified Operations Manager

- Detailed Device View page, launching [2-7, 2-11](#)
- IP address, configuring [3-15](#)
- Phone Details window, launching [2-7, 2-11](#)
- trap receiver, configuring as [3-2](#)

cluster ID

- configuring [B-3](#)
- duplicate, avoiding [3-5](#)
- See also* Cisco Unified Communications Manager

clusters. *See* Cisco Unified Communications Manager (Unified Communications Manager)

codecs

- in MOS violation SNMP trap [C-3](#)
- reports, generated by [2-5](#)
 - CVTQ report [2-9](#)
 - sensor report [2-13](#)
- thresholds, setting
 - for CVTQ groups [5-4](#)
 - for sensor groups [5-9](#)
 - global values [5-2](#)

concealment in SNMP traps [C-3](#)

configuring

- Cisco 1040 [4-9, 4-10](#)
- DHCP [4-6](#)
- DNS [4-6](#)
- Operations Manager server IP address [3-15](#)
- sensor
 - default configuration file [4-4](#)
 - primary Service Monitor [4-4](#)
 - secondary Service Monitor [4-4](#)
- Service Monitor
 - as a billing server [B-4](#)
 - initially [2-2](#)
- SSL [6-16](#)
- system, SNMP queries [6-14](#)
- Unified Communications Manager [B-1](#)
- users [6-11](#)
 - CiscoWorks local login module [6-11](#)
 - using ACS mode [6-11](#)

credentials, Unified Communications Manager

- adding [3-5](#)
- deleting [3-3, 3-10](#)
- editing [3-9](#)
- verifying [3-2](#)

CVTQ

- reports [2-8](#)
- threshold group
 - adding [5-4](#)
 - deleting [5-8](#)

D

daemon manager, starting and stopping [6-20](#)

database

- application suite [6-6](#)
- backup, scheduling considerations [6-5](#)
- cmf password, changing [6-18](#)
- directory and virus scanning software [A-1](#)
- Service Monitor
 - backing up, manually [6-3](#)
 - backing up, using Common Services [6-5](#)
 - password, changing [6-7](#)
 - purging [3-15, 6-1](#)
 - retention period [3-15](#)

data purge schedule, updating [6-1](#)

data-retention-days

- configuration-specific default values [3-15](#)
- configuration-specific recommendations [3-15](#)

Daylight Saving Time [4-11](#)

debugging, enabling [6-8](#)

deleting

- call metrics archive files [6-8](#)
- Cisco1040 [4-11](#)
- CVTQ group [5-8](#)
- files from TFTP server [4-11](#)
- sensor [4-11](#)
- sensor group [5-12](#)
- TFTP server from Service Monitor [4-4](#)
- Unified Communications Manager credentials [3-10](#)

Detailed Device View. *See* Cisco Unified Operations Manager

device database

- name [B-9](#)
- SQL authentication [B-9](#)
- Unified Communications Manager credential status for [3-3](#)
- Windows authentication [B-10](#)

device DB. *See* device database

DHCP, configuring [4-6](#)

directory number

- entering, as endpoint [5-11](#)
- wild cards, using in [2-3](#)

disabling

- call metrics archiving [4-5](#)
- debugging [6-8](#)

DN. *See* directory number

DNS configuration

- and sensors [4-6](#)
- and Unified Communications Manager [3-2](#)

documentation [1-x](#)

E

editing

- Cisco 1040
 - configuration [4-9, 4-10](#)
 - default configuration [4-15](#)
- threshold groups
 - CVTQ [5-4](#)
 - sensor [5-9](#)
- Unified Communications Manager credentials [3-9](#)

enabling

- call metrics archiving [4-5](#)
- debugging [6-9](#)

endpoint

- IP address [5-11](#)
- wild cards, using [2-3](#)

error duplicate cluster ID [3-5](#)

exporting

- CSV file, limits [2-2, 3-17](#)
- most impacted endpoints reports, automatically [3-13](#)
- PDF file, limits [2-2](#)
- reports, manually [2-2](#)

F

- failover, Cisco 1040 [4-15](#)
- filenames
 - reports, automatically generated [3-15](#)
 - sensor configuration
 - default [4-15](#)
 - sensor-specific [4-15](#)
 - sensor image [4-8](#)
- files
 - call metrics [6-8](#)
 - configuration
 - sensor default [4-4](#)
 - sensor-specific [4-9, 4-10](#)
 - history log file, maintaining [6-8](#)
 - log files [6-8](#)

G

- global thresholds [5-2](#)
 - restoring default [5-2](#)
 - updating [5-2](#)

H

- hostname
 - Service Monitor, changing [6-17, 6-19](#)
 - Unified Communications Manager, confirming [3-8](#)
- HTTP
 - Unified Communications Manager credential status [3-3](#)
 - username and password [3-9](#)
- HTTPS
 - Unified Communications Manager credential status [3-3](#)
 - username and password [3-9](#)

I

- IP address
 - entering as endpoint [5-11](#)
 - Operations Manager, specifying [3-15](#)
 - Service Monitor system, changing [6-19](#)
 - wild cards, used when entering [2-3](#)

K

- keepalive [4-15](#)
- known phone count
 - understanding [3-11](#)
 - updating [3-13](#)

L

- license
 - evaluation, using [D-3](#)
 - file
 - obtaining [D-2](#)
 - registering [D-2](#)
 - limit [3-11](#)
 - exceeded [D-3](#)
 - increasing [D-2](#)
 - upgrading [D-2](#)
- localhost, replacing with IP address [3-15](#)
- log files
 - debugging, enabling and disabling [6-8](#)
 - history [6-8](#)
 - location [6-8](#)
 - maintaining [6-8](#)
- login, CiscoWorks
 - failure [F-2](#)
 - fallback mode [F-2](#)
 - login module [F-2](#)
- low-volume schedule, viewing [3-15](#)

M

managing log files [6-8](#)

MIBs

system application, log file [6-16](#)

used by Service Monitor [C-1](#)

mixed mode, definition [B-7](#)

N

non-ACS mode

authentication [6-10](#)

CiscoWorks Local Login module [6-11](#)

users, configuring [6-11](#)

O

Operations Manager. *See* Cisco Unified Operations Manager

P

password

casuser [B-8](#)

CDR database [3-5, B-9](#)

cmf database [6-18](#)

device database [3-5, B-9](#)

Service Monitor database [6-7](#)

SFTP [3-15, B-4](#)

smuser [3-15, B-5](#)

Permission Report [6-10](#)

Phone Details. *See* Cisco Unified Operations Manager

phones

license limit [3-11](#)

monitored [3-11](#)

total known count [3-11](#)

updating known phone count [3-13](#)

popup blockers, disabling [A-1](#)

port monitor [4-11](#)

primary Service Monitor

configuring [4-4](#)

setting a [4-8](#)

updating [4-9, 4-10](#)

viewing [4-13](#)

privilege, AXL API [3-7](#)

privileges, configuring on Cisco Secure ACS [6-13, F-2](#)

processes

Service Monitor [6-13](#)

starting and stopping [6-13](#)

properties, configuring

data purge [6-1](#)

diagnostic report wait [3-17](#)

export limit, configuring [3-17](#)

low-volume schedule [6-1](#)

R

registering sensors [4-15](#)

reports

accessing more than 2,000 records [2-4](#)

configuring

export, number of CSV records [3-17](#)

number of endpoints for [3-13](#)

search time [3-17](#)

filenames, automatically generated [3-15](#)

most impacted endpoints, exporting [3-13](#)

resetting Cisco 1040 [4-11](#)

restoring database

from Common Services backup [6-6](#)

manually [6-4](#)

resuming

sensor for monitoring [3-12](#)

Unified Communications Manager cluster for monitoring [3-12](#)

retention period, configuring [3-15](#)

roles, user

Cisco Secure ACS, configuring [6-13](#)

Cisco Secure ACS, modifying [6-11](#)

Common Services [6-12](#)

RSPAN [4-11](#)

S

schedule

data purge, updating [6-1](#)

low-volume, updating [6-1](#)

low-volume, viewing [3-15](#)

scheduling

database backup [6-5](#)

secondary Service Monitor

configuring [4-4](#)

setting a [4-8](#)

updating [4-9, 4-10](#)

viewing [4-13](#)

secure mode [6-16](#)

Secure Socket Layer [6-16](#)

security

browser-server [6-16](#)

certificate [6-18](#)

SNMP queries [6-15](#)

sensor

registration explained [4-15](#)

report [2-5](#)

Service Monitor

hostname, changing [6-17, 6-19](#)

IP address, changing [6-19](#)

processes, stopping and starting [6-13](#)

SFTP

directory path [B-4](#)

password [3-15, B-4](#)

server process [6-13](#)

shut switch port [4-11](#)

smuser

password, updating [B-5](#)

username [3-15, B-4](#)

SNMP

queries, configuring security for [6-15](#)

trap receivers [3-2](#)

Windows service [6-14](#)

SNMP, using to manage Service Monitor [6-14](#)

SNMP queries, configuring for [6-14](#)

Windows SNMP Service, enabling or disabling [6-15](#)

Windows SNMP Service, installing and uninstalling [6-15](#)

Windows SNMP Service status, determining [6-14](#)

SNMP queries, configuring security for [6-15](#)

system application MIB log file, viewing [6-16](#)

SNMP MIBs, Service Monitor support for [E-1](#)

sample MIB walk [E-7](#)

system application MIB implementation [E-1](#)

SPAN [4-11](#)

SQL authentication on Unified Communications Manager [B-9](#)

SSL, enabling [6-16](#)

starting

daemon manager [6-20](#)

Service Monitor

processes [6-13](#)

user interface [1-4](#)

stopping

daemon manager [6-20](#)

QOVR process [4-7](#)

Service Monitor processes [6-13](#)

suspending

sensor from monitoring [3-12](#)

Unified Communications Manager cluster from monitoring [3-12](#)

switch

IP address for [4-14](#)

port, shutting [4-11](#)

system administration [6-1](#)

system application MIB implementation [E-1](#)

- resource MIB tables [E-1](#)
 - element status information [E-4](#)
 - installed elements [E-2](#)
 - installed packages [E-2](#)
 - package status information [E-3](#)
 - process map [E-7](#)
 - scalar variables [E-6](#)
 - status of elements previously run [E-5](#)
 - status of packages previously run [E-5](#)
- sample MIB walk [E-7](#)

System Identity Setup User

- in Common Services [F-2](#)
- on Cisco Secure ACS [F-3](#)

T

TFTP server

- adding to Service Monitor [4-3](#)
- deleting from Service Monitor [4-4](#)

thresholds

- global [5-2](#)
- group
 - CVTQ [5-4](#)
 - priority for CVTQ [5-8](#)
 - sensor [5-9](#)
 - sensor priority [5-12](#)

time, updating on the server [6-20](#)

trap receivers

- configuring [3-2](#)
- default port number for [3-2](#)
- Operations Manager [3-2](#)

traps, SNMP

- Cisco 1040 unreachable
 - definition [C-4](#)
 - understanding [4-17](#)
- from sensors, suppressing [4-5](#)
- MOS violation, definition [C-1](#)

U

Unavailable device type, reason for [2-7](#)

updating

- server time [6-20](#)
- thresholds
 - CVTQ group [5-6](#)
 - global [5-2](#)
 - sensor group [5-10](#)

users

- configuring [6-11](#)
 - using ACS mode [6-11](#)
 - using CiscoWorks local login module [6-11](#)
- privileges
 - modifying [6-13](#)
 - Permission Report [6-10](#)
- roles [3-7](#), [6-13](#), [F-1](#)
- System Identity Setup User [F-1](#)

V

verifying Unified Communications Manager credentials [3-3](#)

versions, Unified Communications Manager [3-5](#), [B-1](#)

viewing

- sensor configuration
 - in Service Monitor [4-13](#)
 - on Cisco 1040 [4-14](#)
 - on TFTP server [4-14](#)
- Unified Communications Manager credential status [3-3](#)

virus scanning software [A-1](#)

W

warnings

- sensor safety information [4-16](#)

Windows authentication on Unified Communications Manager [B-8](#)

Windows SNMP Service

- disabling [6-15](#)
- enabling [6-15](#)
- installing [6-15](#)
- status, determining [6-14](#)
- uninstalling [6-15](#)