





**LINKSYS®**  
A Division of Cisco Systems, Inc.

**Setup**

Setup | **Wireless** | Security | Access Restrictions | Applications & Gaming | Administration | Status | Voice

Basic Setup | DDNS | MAC Address Clone | Advanced Routing

**Internet Setup**

Internet Connection Type: Obtain an IP automatically

Optional Settings (required by some ISPs)

Host Name:

Domain Name:

MTU:  Auto  Manual Size:

**Network Setup**

Router IP

Local IP Address: 192 . 168 . 2 . 1

Subnet Mask: 255 . 255 . 255 . 0

**Basic Setup**

The Basic Setup screen is where basic configuration is performed. Some ISPs (Internet Service Providers) will require that you enter the DNS information. These settings can be obtained from your ISP. After you have configured these settings, you should set a router password from the Administration-Management screen.

Change Local IP Address to "192.168.2.1"

3: ةوطخال



رقنا.

4: ةوطخال

رتوي بمك لل IP ناونع دي دجت

5: ةوطخال

IP ناونعك "192.168.2.1" مادختساب بيولا الى دننتس مل هجومل دادع الى لوصول اب مق

6: ةوطخال

ناك اذا امم ققحت م، ةلاحل قوف رقنا، بيولا الى دننتس مل هجومل دادع ةحفص رهظت ام دنع نأ بجيف، ماقراً IP تنرتنإل ناونعل ناك اذا. مي ق وأ ماقراً الى ع يوتحي تنرتنإل الى ع IP ناونع تنرتنإل الى لوصول نم نأل رتوي بمك لل نكمتي

**LINKSYS®**  
A Division of Cisco Systems, Inc.

Click **Status**.

**Status**

Setup | Wireless | Security | Access Restrictions | Applications & Gaming | Administration | **Status** | Voice

Router | Local Network | Wireless | Voice

**Information**

**Status**

Firmware Version:

Current Time: **Not Available**

MAC Address: **00:00:00:00:00:00**

Login Type: **DHCP**

Internet IP Address: **0.0.0.0**

Subnet Mask: **0.0.0.0**

Default Gateway: **0.0.0.0**

DNS 1: **0.0.0.0**

DNS 2: **0.0.0.0**

DNS 3: **0.0.0.0**

MTU: **1500**

Check the value of the **Internet IP Address**.

**Router Status**

This screen provides the Router's current status information in a read-only format.

**Login Type**  
This field shows the Internet login status. When you choose PPPoE as the login method, you can click the **Connect** button to log in. If you click the **Disconnect** button, the Router will not dial up again until you click the **Connect** button.

If your connection is DHCP or Static IP, the Status screen will show you the Internet IP Address, Subnet mask,

[More...](#)

DHCP Release | DHCP Renew

رقونا (0.0.0.0) رافصألا لك وه تنرتنإلا ىل ع IP ناوع ناك اذا :ةطحالم

# DHCP Renew

رقونا م ث ،  
هجوملا ىل ع PPPoE نيكم تب مق ف ،(0.0.0.0) ارافصأ ه لك لازي ال تنرتنإلا ل IP ناوع ناك اذا .  
هاندا تاوطخلال لمكأ ،هجوملا ىل ع PPPoE نيكم تل

7: ةوطخلال

لاصتا عون نع ثحبا دادعإلا نمض ،بيولا ىل إةدنتسملا هجوملا دادعإةحفص روهظ دن ع  
ةلدسنملا ةمئاقلا مهس ي ف PPPoE دح .تنرتنإلا

**LINKSYS®**  
A Division of Cisco Systems, Inc.

**Setup**

Setup | **Wireless** | Security | Access Restrictions | Applications & Gaming | Administration | Status | Voice

Basic Setup | DDNS | MAC Address Clone | Advanced Routing

**Internet Setup**

Internet Connection Type: PPPoE

User Name:

Password:

Connect on Demand: Idle Timeout  Min.

Keep Alive: Redial Period  Sec.

Host Name:

Domain Name:

MTU:  Auto  Manual Size:

**Basic Setup**

The Basic Setup screen is where basic configuration is performed. Some ISPs (Internet Service Providers) will require that you enter the DNS information. These settings can be obtained from your ISP. After you have configured these settings, you should set a router password from the Administration->Management screen.

Completing the Internet

*Note: A yellow arrow points to the PPPoE dropdown menu with the text "Select PPPoE."*

8: ةوطخ

username لـ ف لـ اجم ةم لك و مس لـ م ع ت س م لـ ف ت ن ا رف و ك isp ن ا ة م لك و username لـ ت لـ د  
yourusername@isp.net لـ م ي ر و ر ض ن و ك ي لـ ن

**LINKSYS®**  
A Division of Cisco Systems, Inc.

**Setup**

Setup | **Wireless** | Security | Access Restrictions | Applications & Gaming | Administration | Status | Voice

Basic Setup | DDNS | MAC Address Clone | Advanced Routing

**Internet Setup**

Internet Connection Type: PPPoE

User Name: yourusername@isp.net

Password:

Connect on Demand: Idle Timeout  Min.

Keep Alive: Redial Period  Sec.

Host Name:

Domain Name:

MTU:  Auto  Manual Size:

**Basic Setup**

Enter your username for your ISP with "@isp.net" where "isp" is the name of your Internet Service Provider then type your password.

The Basic Setup screen is where basic configuration is performed. Some ISPs (Internet Service Providers) will require that you enter the DNS information. These settings can be obtained from your ISP. After you have configured these settings, you should set a router password from the Administration->Management screen.

Completing the Internet

*Note: A yellow arrow points to the User Name field with the text "Enter your username for your ISP with '@isp.net' where 'isp' is the name of your Internet Service Provider then type your password."*

9: ةوطخ

رقن

# Save Settings

10: ةوطخلا

ناك اذا. لصتم لوقې ناك اذا ام ققحت م، لوخدلا ليجست ةلاح نع ثحبا م، ةلاحلا قوف رونا ت. نترنتإلا لىل لوصولا لىل ارداق نوكت نأ بجيف، الصتم

قفوف رونا ف، لاصتالا عطق م لوقت لوخدلا ليجست ةلاح تناك اذا: ةطخال م هاندأ طابترالا عجار، أطخلا لئاسر لجل. أطخ ةلاسرى قلت تنك اذا ام ققحت م،

ح PPPoE أطخ لئاسر ل

كب صاخلا هوملا لىل PPPoE دادع دنع رهظت دق أطخ لئاسر عبرا كانه

ةلص تاذا تامولعم

Connect

- [تادنت سمل او ینقتلا معدلا - Cisco Systems](#)

ةمچرتل هذه لوج

ةللأل تاي نقتل نمة ومة مادختساب دن تسمل اذة Cisco تمةرت  
ملاعلاء انء مء مء نء مء دختسمل معد و تمة مء دقتل ةر شبل او  
امك ةق قء نوك ت نل ةللأل ةمچرت لصف أن ةظحال مء ءء. ةصاأل مء تءل ب  
Cisco ةللخت. فرتمة مچرت مء مء دق ةل ةل ةل فارتحال ةمچرتل عم لاعل او  
ىل إأمءءء ءوچرلاب ةصوء و تامةرتل هذه ةقء نء اهءل وئس م Cisco  
Systems (رفوتم طبارل) ةل صأل ةل ءل ءن إل دن تسمل