# Konfigurieren und Verwalten eines Standalone-Servers von Intersight

# Inhalt

Einleitung	
<u>Voraussetzungen</u>	
Anforderungen	
Verwendete Komponenten	
Hintergrundinformationen	
Vorgehensweise	

# Einleitung

In diesem Dokument wird beschrieben, wie ein UCS-Serverprofil für einen Standalone-Server angefordert, erstellt und bereitgestellt wird.

#### Voraussetzungen

Anforderungen

Verwendete Komponenten

Dieses Verfahren kann für eigenständige Server der Serien M5, M6 und M7 durchgeführt werden.

Die Informationen in diesem Dokument beziehen sich auf Geräte in einer speziell eingerichteten Testumgebung. Alle Geräte, die in diesem Dokument benutzt wurden, begannen mit einer gelöschten (Nichterfüllungs) Konfiguration. Wenn Ihr Netzwerk in Betrieb ist, stellen Sie sicher, dass Sie die möglichen Auswirkungen aller Befehle kennen.

### Hintergrundinformationen

Dieses Verfahren kann für eigenständige Server der Serien M5, M6 und M7 durchgeführt werden.

#### Vorgehensweise

Navigieren Sie zur Cisco IMC-Webseite für das Gerät, für das ein Antrag gestellt werden kann.

Undessis / Sum	mary 🔺			
0 D	41	O'rea laterated in	(a)	(0) 1-(
Server Proper	ties	Cisco Integrated N	/anagement Controller (Cisco IN	MC) Informati
Product Name:	UCS C220 M6S	Hostname:	C220-WZP24430N7K	
Serial Number:	WZP24430N7K	IP Address:	10.31.123.34	
PID:	UCSC-C220-M6S	MAC Address:	BC:4A:56:59:3D:FC	
UUID:	3ADAE7CA-DEBC-4118-80E9-F5FCA72545E2	Firmware Version:	4.2(2a)	
BIOS Version:	C220M6.4.2.2d.0.0610220138	Current Time (UTC):	Mon Oct 31 23:36:48 2022	
Description:		Local Time:	Mon Oct 31 23:36:48 2022 UTC +0000 (Local)	
Asset Tag:	Unknown	Timezone:	UTC	Select Timezone
Chassis Statu	s	Server Utilization		
Chassis Statu	s	Server Utilization		
Chassis Statu Powe	S r State: On	Server Utilization	ion (%): N/A	
Chassis Statu Power Post Completion	S r State: On Status: Not-Completed	Server Utilization Overall Utilizat CPU Utilizat	ion (%): N/A ion (%): N/A	
Chassis Statu Powe Post Completion Overall Server	S r State: On Status: Not-Completed Status: Severe Fault resture: Scool	Server Utilization Overall Utilizat CPU Utilizat Memory Utilizat	ion (%): N/A ion (%): N/A ion (%): N/A	
Chassis Statu Powe Post Completion Overall Server Tempe Overall DIMM	S r State: On Status: Not-Completed Status: Severe Fault wrature: Good Status: Good	Server Utilization Overall Utilizat CPU Utilizat Memory Utilizat IO Utilizat	ion (%): N/A ion (%): N/A ion (%): N/A	
Chassis Statu Power Post Completion Overall Server Tempe Overall DIMM	S r State: On Status: Not-Completed Status: Severe Fault rrature: Good Status: Good status: Good	Server Utilization Overall Utilizat CPU Utilizat Memory Utilizat IO Utilizat	ion (%): N/A ion (%): N/A ion (%): N/A	
Chassis Statu Powe Post Completion Overall Server Tempe Overall DIMM Power Su	S r State: On Status: Not-Completed Status: Severe Fault wrature: Good Status: Good Status: Good Fans: Good	Server Utilization Overall Utilizat CPU Utilizat Memory Utilizat IO Utilizat	ion (%): N/A ion (%): N/A ion (%): N/A	
Chassis Statu Power Post Completion Overall Server Tempe Overall DIMM Power Su Locate	S state: On Status: Not-Completed Status: Severe Fault rrature: Good Status: Good Status: Good Fans: Good Fans: Good For Contemport	Server Utilization Overall Utilizat CPU Utilizat Memory Utilizat IO Utilizat	ion (%): N/A ion (%): N/A ion (%): N/A	

Serverstandort

Navigieren Sie anschließend zu Admin > Device Connector (Admin > Geräteanschluss).

	Service Cisco Integrated Management Controller
	Admin / Device Connector 🔺
Chassis •	The Device Connector is an embedded management controller that enables the capa
Compute	Device Connector
Networking	
Storage •	
Admin 🗸	
User Management	Device Connector
Networking	
Communication Services	A Not Claimed
Security Management	The connection to the Cisco Intersight Portal is successful, but device is still not cla
Event Management	1.0.11-2316
Firmware Management	
Utilities	
Device Connector	

Device Connector

Überprüfen Sie, ob der Server die Intersight-Cloud oder die Intersight-Appliance erreichen kann.

Ändern Sie unter Einstellungen die Proxykonfiguration und den Zertifikats-Manager.

A / Admin / Device Connector * Peter	Host Power Launch vKVM Ping	CIMC Reboot   Locator LED   @ @
The Device Connector is an embedded management controller that enables the capabilities of Cisco Intersight, a cloud-based management platform. For detailed information about configuring the device connector	ector, please visit Help Center	
Device Connector		Settings 💭 Refresh
ACCESS MOCE ALLOW CONTROL Device Connector	Device ID WZP24 Coare Coor Intensight	4330N7K B 4073EA4 B
Not Claimed		
The connection to the Cisco Intensight Portal is successful, but device is still not claimed. To claim the device open Cisco Intensight, create a new account and follow the guidance or go to the Targets page an Claim a New Device for existing account.	nd click Open Intersight	

Geräteeinstellungen



Proxy-Konfiguration

Sobald die Verbindung zum Cisco Intersight-Portal hergestellt wurde, können Sie das Gerät anfordern. Kopieren Sie dazu die Geräte-ID und den Antragscode, und melden Sie sich dann bei Ihrem Intersight-Konto an.

Device Connector	() Settings   💭 Refresh
Device Connector	Device ID WZP24430N7K E Calim Code E87C363F30E0 E G
Not Claimed The connection to the Cisco intensight Portal is successful, but device is still not claimed. To claim the device open Cisco intensight, create a new account and follow the guid Claim a New Device for existing account.  S2142398	idance or go to the Targets page and click Open Internight

Geräte-ID und Forderungscode

Navigieren Sie im Intersight-Portal zu Admin > Targets.



Klicken Sie auf Neues Ziel anfordern.

ADMIN > Targets	🗘 🗖 298 🔺 250   🕤 1   92 <sup>1</sup> 33   🤇	🔾 💿 🕐 Jaime Islas Tolentino 🔔
		Chima New Target
* All Targets () +		
P B Add The		und 10 - perpage E C 1 of 3 3 3
Connection 7 Connected 5 Not Connected 15 Connected 5 Not Connected 15 Connected 5 Not Connected 15 Connected 5 Connected 5		Ø

Neue Ziele anfordern

Wählen Sie unter Computing/Fabric die Option Cisco UCS Server (Standalone) aus, und klicken Sie auf Start.

Select Target Type								
Q Search								
Compute / Fabric								
Cisco UCS Server (Standalone)	Cisco UCS Domain (Intersight Managed)	HPE OneView						
		¢						
Cisco UCS Domain (UCSM Managed)	Cisco UCS C890	Redfish Server						
	Select Targ	Select Target Type Search Compute / Fabric						

Cisco UCS-Server

Fügen Sie auf der Seite Allgemein sowohl die Geräte-ID als auch den Anspruchscode ein.

Wenn Sie die Ressourcengruppe auswählen, können Sie die Organisationen angeben, denen das Gerät hinzugefügt werden soll. Dies ist nicht obligatorisch.

Standardmäßig ist Ressourcengruppe = Alle.

Klicken Sie auf Anspruch.

			4	Ľ	Claim Cisco UC: (Standalone) Ta To claim your target, pro Code and select the app	S Server rget wide the Device ID, Claim roprlate Resource Groups.			
Gener	ral								
Devic WZP	e ID * 24430N7K		Claim Code * F6A6893E26B2						0
Reso	urce Groups								
•	Select the Resource Grou	ne if required litera	ever this selection is	not mandatany a	e one or more Resource G	roup type is 'All'. The claimed target	will be part of all Organization	s with the Resource G	roup.
	type 'All'.		ever, one percent is	io na oana y a	an on the set of the one of the production of the	1 items found	<u>10 ∼</u> perpage IX C	1_ of1 [> [>]	0
	type 'Al'. Name	Usage	949, 088 800, 000 18	in in the following a	a one an intere regionance o	1 items found Description	<u>10 ∨</u> perpage K C	_1_ of 1 [> [>]	0
	type XIT. Name IMM rg	Usage		nor managory a		1 items found Description	10 💌 per page 🔣 🔇	1 of1 ) 1	0
0	type XIT. Name IMMrep	Usage		nor menoarory a		1 items found Description	10 v perpage K C	<u>1</u> of 1 2 2 K C <u>1</u> of 1	•
	type %IT.	Usage				1 items found Description	10 v per page K C	<u>1</u> of 1 ) H K C <u>1</u> of 1	

Allgemeine Seite

Wenn Sie erfolgreich sind, sehen Sie das Gerät unter Ziele.



Alle Ziele

Nachdem der Server Intersight korrekt hinzugefügt wurde, können Sie ein UCS-Serverprofil erstellen.

Klicken Sie auf Konfigurieren > Profile und dann auf UCS-Serverprofile.

≡	cisco Intersight	CONFIGURE > Profiles	٩	297
<u>el</u> •	MONITOR	HyperFlex Cluster Profiles UCS Chassis Profiles UCS	Domain Profiles UCS Server Profiles	
ø	OPERATE ^			
	Servers	* All UCS Server Profiles  +		
	Chassis	··· / C III Q Add Filter		
	Fabric Interconnects			
	Networking		$\mathcal{L}$	
	HyperFlex Clusters			
	Integrated Systems			
×	CONFIGURE ^			
	Orchestration			
	Profiles	←──		
	Templates			
	Policies			
	Pools			

UCS-Serverprofile

Klicken Sie auf UCS-Serverprofil erstellen.

CONFIGURE > Profiles				🗘 🔲 300 🔺 251	<b>~</b> ⊗ ®	Jaime Islas Tolentino 🔒
HyperFlex Cluster Profiles		UCS Server Profiles				Create UCS Server Profile
* All UCS Server Profiles @						
	Add Filter					page IC C 0 of 0 D D
Name Name						
			~			

UCS-Serverprofil erstellen

Nennen Sie das Serverprofil, und wählen Sie Standalone Server on Target Platform (Eigenständiger Server auf Zielplattform) aus, und klicken Sie dann auf Weiter.

	Progress
P	
	Server Assignment
	Compute Configuration
	Management Configuration
Ģ	Storage Configuration
Ģ	Network Configuration
ø	Summary

Eigenständige Serverzuweisung

Wählen Sie im Bildschirm "Serverzuweisung" den Standalone-Server aus, und klicken Sie auf Weiter.



Bildschirm "Server Assignment"

Weisen Sie in den nächsten fünf Schritten die Serverrichtlinien entsprechend Ihren Anforderungen zu. Klicken Sie auf Zusammenfassung und Bereitstellen, um den Vorgang abzuschließen.

= 0	Progress			(III)	Step 7 Summary	anticles parature		
Ĭ	Server Assignment		General		very cetaes or the prose and the errors and deploy.	porcies, resorre		
မှ မ	Compute Configuration Management Configuration		Organization Name	default Server,Profile_C-Series	Status Management IP	A Not Depkyed		
¢ ¢	Storage Configuration		Assigned Server Target Platform	C220-WZP24430N7K UCS Server (Standalone)				
•			Description Server Profile for Stand	lalone Server				
			Compute Configuration	Management Configuration	Storage Configuration Net	twork Configuration Emers. <sup>10</sup>		
			8105				27-bios-policy 🗐	
_								
L	< Back	Close						Deploy

Bereitstellung von Server-Zusammenfassungen

Intersight kann die Konfiguration validieren und, falls korrekt, den Status überprüfen.

···· / / iii   9, Add Fitter // 1 of 3	
Name : Status : Target Platform : UCS Server Template Server Last Update :	
Server_Profile_0-Series         Image: Control of the seconds ago         C220 WZP24430N7K         a few seconds ago	
Standalone_M/s_Server I Not Assigned UCS Server (Standalone) an hour ago	

Endgültige Profile

Jetzt können Sie Ihren UCS Standalone-Server über Intersight verwalten.

#### Informationen zu dieser Übersetzung

Cisco hat dieses Dokument maschinell übersetzen und von einem menschlichen Übersetzer editieren und korrigieren lassen, um unseren Benutzern auf der ganzen Welt Support-Inhalte in ihrer eigenen Sprache zu bieten. Bitte beachten Sie, dass selbst die beste maschinelle Übersetzung nicht so genau ist wie eine von einem professionellen Übersetzer angefertigte. Cisco Systems, Inc. übernimmt keine Haftung für die Richtigkeit dieser Übersetzungen und empfiehlt, immer das englische Originaldokument (siehe bereitgestellter Link) heranzuziehen.