



Cisco Remote PHY System Bring Up

Finding Feature Information

Your software release may not support all the features that are documented in this module. For the latest feature information and caveats, see the release notes for your platform and software release. The Feature Information Table at the end of this document provides information about the documented features and lists the releases in which each feature is supported.

Use Cisco Feature Navigator to find information about the platform support and Cisco software image support. To access Cisco Feature Navigator, go to the link <http://tools.cisco.com/ITDIT/CFN/>. An account at the <http://www.cisco.com/> site is not required.

- [Hardware Compatibility Matrix for Cisco Remote PHY Device, on page 1](#)
- [Information about RPD Bring Up, on page 2](#)
- [How to Bring Up RPD, on page 2](#)

Hardware Compatibility Matrix for Cisco Remote PHY Device



Note The hardware components introduced in a given Cisco Remote PHY Device Software Release are supported in all subsequent releases unless otherwise specified.

Table 1: Hardware Compatibility Matrix for the Cisco Remote PHY Device

Cisco HFC Platform	Remote PHY Device
Cisco GS7000 Node	Cisco 1x2 RPD Software 1.1 and Later Releases Cisco Remote PHY Device 1x2 <ul style="list-style-type: none">• PID—RPD-1X2=• PID—RPD-1X2-PKEY=



Note The -PKEY suffix in the PID indicates units that enable the SCTE-55-2 Out-of-Band protocol support.

Information about RPD Bring Up

Remote PHY device bring up process is prerequisite to the operation of the remote PHY system, just like the cable modem bring up in a DOCSIS system.

How to Bring Up RPD

This section describes how to bring up RPD on Cisco cBR-8.

Configuring DHCP Server

To configure DHCP server, follow the steps below:

Step 1 Add option for CCAP-Core. Fill in the name, DHCP type, and vendor option string as shown in the figure below.

Design > DHCPv4 > Options

List/Add DHCP Option Definition Sets

The screenshot shows the configuration page for a DHCP Option Definition Set named 'rpd'. The page title is 'Edit DHCP Option Definition Set rpd'. Below the title, there is a table with the following columns: Attribute and Value. The table contains the following rows:

Attribute	Value
Name*	rpd
DHCP Type*	V4
Description	
Vendor Option String	RPD
Vendor Option Regex String	
Vendor Option Enterprise Id	

The ID number 366349 is visible in the bottom right corner of the screenshot.

Step 2 Define option. Fill in the option number and name as shown in the figure below.

Design > DHCPv4 > Options

List/Add DHCP Option Definition Sets

Edit DHCP Option Definition Set *rpd*

rpd Option Definitions

List of Option Definitions for *rpd*

Number	Name
43	rpd-option-43
2	device-type
61	ccap-cores

366350

Step 3 Define suboption. Fill in the name, type and repeat of suboption 61 as shown in the figure below..

Design > DHCPv4 > Options

List/Add DHCP Option Definition Sets

Edit DHCP Option Definition Set *rpd*

rpd Option Definitions

Attribute	Value	Data Type
Number*	61	unsigned 3
Name*	ccap-cores	string
Description		string
type*	IP address	attribute ty
repeat	1+	32-bit enur

Step 4 Add the option into policy as shown in the figure below. Replace the IP address 120.102.15.1 in the figure to the DPIC port IP address.

DHCPv4 Vendor Options dhcp-cablelabs-config Select

Name	Number

Configured Options ✗ [43] (rpd) rpd-option-43 (binary)

Configuring PTP

To configure PTP, use the following example as reference:

On cBR-8 router:

```
interface Loopback1588
 ip address 159.159.159.4 255.255.255.255
interface TenGigabitEthernet5/1/3 /* connect to ASR903 */
 ip address 192.104.10.4 255.255.255.0

ip route 10.90.3.93 255.255.255.255 192.104.10.93 /* route to ASR903 loopback ip */

ptp clock ordinary domain 0
 servo tracking-type R-DTI
 clock-port slave-from-903 slave
 delay-req interval -4
 sync interval -5
 sync one-step
 transport ipv4 unicast interface Lo1588 negotiation
 clock source 10.90.3.93 /* ASR903 loopback ip */

ptp r-dti 1
 ptp-domain 0 /* same domain number with ptp server */
 clock-port 1
 ethernet 1 /* default value is same index with clock-port index, for RPD, ethernet
 1=vbh0, ethernet 2=vbh1 */
 clock-source 10.90.3.93 gateway 93.3.10.2 /* clock-source is ASR903 loopback ip,
 gateway is ASR903 BDI ID for node */
```

On ASR903 router as PTP master:

```
ptp clock ordinary domain 0
 clock-port Master-to-all-cBR8 master
 sync interval -5
 sync one-step
 transport ipv4 unicast interface Lo1588 negotiation

interface Loopback1588
 ip address 10.90.3.93 255.255.255.255

interface GigabitEthernet0/3/5
 no ip address
 negotiation auto
 cdp enable
 service instance 31 ethernet /* 31 is vlan id */
 encapsulation dot1q 31
 rewrite ingress tag pop 1 symmetric
 bridge-domain 31
 service instance 32 ethernet
 encapsulation dot1q 32
 rewrite ingress tag pop 1 symmetric
 bridge-domain 32
interface BDI31 /* for cBR, SUP PIC */
 ip address 192.104.10.93 255.255.255.0
 no shut
interface BDI32 /* For RPD */
 ip address 93.3.10.2 255.255.255.0
 no shut

ip route 159.159.159.4 255.255.255.255 192.104.10.48 /* route to cbr-8 loopback ip */
```

Configuring cBR-8

To configure the cBR-8 to bring up the RPD, use the following example as reference:

```
/* D-PIC TenGiga interface config */
interface TenGigabitEthernet0/1/0
  ip address 93.3.10.1 255.255.255.0
  ip helper-address 20.1.0.33

/* Downstream/Upstream controller profile */
cable downstream controller-profile 101
rf-chan 0 95
  type DOCSIS
  frequency 381000000
  rf-output NORMAL
  qam-profile 1
  docsis-channel-id 1

cable upstream controller 201
  us-channel 0 channel-width 1600000 1600000
  us-channel 0 docsis-mode atdma
  us-channel 0 minislot-size 4
  us-channel 0 modulation-profile 221
  no us-channel 1 shutdown

/* RPD configuration */
cable rpd nodel
  identifier 0004.9f03.0061
  core-interface Te0/1/0
    rpd-ds 0 downstream-cable 0/0/0 profile 101
    rpd-us 0 upstream-cable 0/0/0 profile 201
  r-dti 1
  rpd-event profile 0

interface Cable0/0/0
  load-interval 30
  downstream Downstream-Cable 0/0/0 rf-channel 0-23
  upstream 0 Upstream-Cable 0/0/0 us-channel 0
  upstream 1 Upstream-Cable 0/0/0 us-channel 1
  upstream 2 Upstream-Cable 0/0/0 us-channel 2
  upstream 3 Upstream-Cable 0/0/0 us-channel 3
  cable upstream bonding-group 1
    upstream 0
    upstream 1
    upstream 2
    upstream 3
    attributes 80000001
    cable bundle 1
  cable ip-init ipv6
interface Wideband-Cable0/0/0:0
  cable bundle 1
  cable rf-channels channel-list 0-7 bandwidth-percent 10
interface Wideband-Cable0/0/0:1
  cable bundle 1
  cable rf-channels channel-list 8-15 bandwidth-percent 10
cable fiber-node 200
  downstream Downstream-Cable 0/0/0
  upstream Upstream-Cable 0/0/0
```

