



# Monitor Interfaces

---

- [View Interface Traffic Details, on page 1](#)

## View Interface Traffic Details

After you add devices, Crosswork Cloud Traffic Analysis gathers information about the interfaces. You can view traffic details about the interfaces.

---

**Step 1** In the main window, click **Traffic Analysis > Monitor > Interfaces**.

**Step 2** Click on the interface name for which you want to see the traffic details.

Crosswork Cloud Traffic Analysis displays receive (RX) and transmit (TX) traffic information.

---

