



## Configure the Appliance

---

- [Appliance Configuration Overview, on page 1](#)
- [Configure the Primary Node, on page 1](#)
- [Configure a Secondary Node, on page 15](#)
- [Upgrade to the Latest Cisco DNA Center Release, on page 28](#)

## Appliance Configuration Overview

You can deploy the appliance in your network in one of the following two modes:

- **Standalone:** As a single node offering all the functions. This option is usually preferred for initial or test deployments and in smaller network environments.
- **Cluster:** As a node that belongs to a three-node cluster. In this mode, all the services and data are shared among the hosts. This is the preferred option for large deployments.

If you choose the Standalone mode for your initial deployment, you can add more appliances later to form a cluster. When configuring the standalone host, ensure that it is set up as the first, or primary, node in the cluster.

If you choose the Cluster mode for your initial deployment, be sure to finish configuring the primary node before configuring the secondary nodes.

To proceed, complete the following tasks:

1. Launch the Maglev Configuration wizard from Cisco IMC and configure the primary node in your cluster. See [Configure the Primary Node](#).
2. If you have installed three appliances and want to add the second and third nodes to your cluster, see [Configure a Secondary Node](#).

## Configure the Primary Node

Perform the steps in this procedure to configure the first installed appliance as the primary node. You must always configure the first appliance as the primary node, whether it will operate standalone or as part of a cluster.

If you are configuring the installed appliance as a secondary node for an existing cluster that already has a primary node, follow the steps described in [Configure a Secondary Node](#) instead.



---

**Note** Ensure that all of the IP addresses you enter while completing this procedure are valid IPv4 addresses with valid IPv4 netmasks. Also make sure that the addresses and their corresponding subnets do not overlap. Service communication issues can result if they do.

---



---

**Important** Before you configure the appliances in a three-node cluster, ensure that you have logged out of those appliances. Otherwise, the Quick Start workflow (which you complete to discover your network's devices and enable telemetry) will not start after you have configured your cluster's appliances and log in to Cisco DNA Center for the first time.

---

### Before you begin

Ensure that you:


- Collected all of the information specified in [Required IP Addresses and Subnets](#) and [Required Configuration Information](#).
- Installed the first appliance, as described in [Appliance Installation Workflow](#).
- Configured Cisco IMC browser access on the primary node, as described in [Enable Browser Access to Cisco Integrated Management Controller](#).
- Checked that the primary node appliance's ports, and the switches they use, are properly configured, as described in [Execute Preconfiguration Checks](#).
- Confirmed that you are using a compatible browser. For a list of compatible browsers, see the [Release Notes](#) document for the version of Cisco DNA Center you are installing.
- Enabled ICMP on the firewall between Cisco DNA Center and both the default gateway and the DNS server you specify in the following procedure. The Maglev Configuration wizard uses ping to verify the gateway and DNS server you specify. This ping might get blocked if a firewall is in place and ICMP is not enabled on that firewall. When this happens, you will not be able to complete the wizard.

---

### Step 1

Point your browser to the Cisco IMC IP address you set during the Cisco IMC GUI configuration you performed, and log in to the Cisco IMC GUI as the Cisco IMC user (see [Enable Browser Access to Cisco Integrated Management Controller](#)).

After successful login, the appliance displays the **Cisco Integrated Management Controller Chassis Summary** window, with a hyperlinked menu at the top of the window, as shown below.

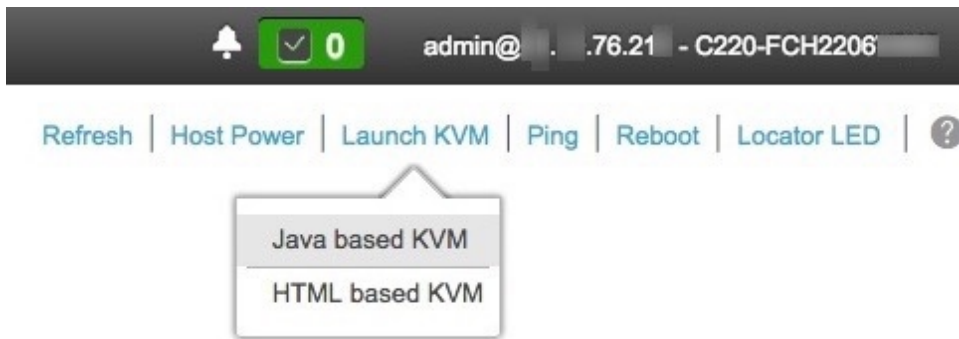

**Step 2** From the hyperlinked menu, choose **Launch KVM** and then select either **Java based KVM** or **HTML based KVM**. If you select **Java-based KVM**, you will need to launch the Java startup file from your browser or file manager in order to view the KVM console in its own window. If you select **HMTL-based KVM**, it launches the KVM console in a separate window or tab automatically.

Irrespective of the KVM type you choose, use the KVM console to monitor the progress of the configuration and respond to the Maglev Configuration wizard prompts.

**Step 3** With the KVM displayed, reboot the appliance by making one of the following selections:

- In the main Cisco IMC GUI browser window: Choose **Host Power > Power Cycle**, and switch to the KVM console to continue.
- In the KVM console: Choose **Power > Power Cycle System (cold boot)**.

If you are asked to confirm your choice to reboot the appliance, click **OK**.

After displaying reboot messages, the KVM console displays the Maglev Configuration wizard welcome screen.



**Step 4** Click **Start a Cisco DNA Center Cluster** to begin configuring the primary node.

The wizard discovers all of the ports on the appliance and presents them to you one by one, in separate screens, in the following order:

- a. 10-Gbps Enterprise port (Port 1, enp9s0, Network Adapter #1)
- b. 10-Gbps Cluster port (Port 2, enp10s0, Network Adapter #2)
- c. 1-Gbps Cisco DNA Center GUI port (1, enp1s0f0, Network Adapter #3)
- d. 1-Gbps Cloud port (2, enp1s0f1, Network Adapter #4)

**Note** If the wizard fails to display either or both of the Enterprise and Cluster ports during the course of configuration, these ports may be non-functional or disabled. These two ports are required for Cisco DNA Center functionality. If you discover that they are non-functional, choose **cancel** to exit the configuration immediately. Be sure you have completed all of the steps provided in [Execute Preconfiguration Checks](#) before resuming configuration or contacting the Cisco Technical Assistance Center (TAC).

**Step 5** The wizard discovers the 10-Gbps Enterprise port (Port 1, enp9s0) first, and presents it as **NETWORK ADAPTER #1**. As explained in [Interface Cable Connections](#), this port is required to link the appliance to the enterprise network. Apply the host IP address, netmask, and other values that are appropriate for this purpose, (see [Required IP Addresses and Subnets](#) and [Required Configuration Information](#) for the values to enter).

**STEP #1**

The wizard has discovered 4 physical network adapter(s) installed on the appliance.

Enter the network settings for the 1st network adapter (00:be:78:00:00:00 - enp9s0).

Select "Cluster Link" if used for cluster communication.

**NETWORK ADAPTER #1 (enp9s0)**

Host IP Address:  
17.192.1.14

Netmask:  
255.255.255.0

Default Gateway IP Address:  
17.192.1.1

DNS Servers:

Static Routes:  
Cluster Link

<< back
< cancel >
done >>
next >>

Enter the configuration values for **NETWORK ADAPTER #1**, as shown in the table below.

**Table 1: Primary Node Entries for Network Adapter #1: 10-Gbps Enterprise Port (enp9s0)**

<b>Host IP address</b>	Enter the IP address for the 10-Gbps Enterprise port. This is required.
<b>Netmask</b>	Enter the netmask for the port's IP address. This is required.
<b>Default Gateway IP address</b>	Enter a default gateway IP address to use for the port.  <b>Important</b> Ensure that you enter a default gateway IP address for at least one of your appliance's interfaces. Otherwise, you will not be able to complete the configuration wizard.
<b>DNS Servers</b>	Enter the IP address of the preferred DNS server. If you are entering multiple DNS servers, separate the IP addresses in the list with spaces.  <b>Important</b> For each appliance in your cluster, configure a maximum of three DNS servers. Problems can occur if you configure more than three DNS servers for an appliance.
<b>Static Routes</b>	Enter one or more static routes in the following format, separated by spaces: <code>&lt;network&gt;/&lt;netmask&gt;/&lt;gateway&gt;</code> . This is usually required on the Cisco DNA Center GUI port only.
<b>Cluster Link</b>	Leave this field blank. It is required on the Cluster port only.

After you provide the necessary information, click **next>>** to proceed. Correct validation errors, if any, as you did in previous screens. The wizard validates and applies your network adapter configurations.

### Step 6

After successful validation of the Enterprise port values you entered, the wizard presents the 10-Gbps Cluster port (Port 2, enp10s0) as **NETWORK ADAPTER #2**. As explained in [Interface Cable Connections](#), this port is used to link the appliance to the cluster, so apply the host IP address, netmask, and other values that are appropriate for this purpose (see [Required IP Addresses and Subnets](#) and [Required Configuration Information](#) for the values to enter).

Enter the configuration values for **NETWORK ADAPTER #2**, as shown in the table below.

**Table 2: Primary Node Entries for Network Adapter #2: 10-Gbps Cluster Port (enp10s0)**


<b>Host IP address</b>	Enter the IP address for the Cluster port. This is required. Note that you cannot change the address of the Cluster port later.
<b>Netmask</b>	Enter the netmask for the port's IP address. This is required.
<b>Default Gateway IP address</b>	Enter a default gateway IP address to use for the port.  <b>Important</b> Ensure that you enter a default gateway IP address for at least one of your appliance's interfaces. Otherwise, you will not be able to complete the configuration wizard.

<b>DNS Servers</b>	Enter the IP address of the preferred DNS server. If you are entering multiple DNS servers, separate the IP addresses in the list with spaces.  <b>Important</b> For each appliance in your cluster, configure a maximum of three DNS servers. Problems can occur if you configure more than three DNS servers for an appliance.
<b>Static Routes</b>	Enter one or more static routes in the following format, separated by spaces: <i>&lt;network&gt;/&lt;netmask&gt;/&lt;gateway&gt;</i> . This is usually required on the GUI port only.
<b>Cluster Link</b>	Check the check box to indicate that this port will be the link to a cluster. This is required on the Cluster port only.

After you finish entering the configuration values, click **next>>** to proceed. The wizard validates the values you entered and issues an error message if any are incorrect. If you receive an error message, check that the value you entered is correct, then reenter it. If needed, click **<<back** to reenter it.

**Step 7**

After successful validation of the Cluster port values you entered, the wizard presents the 1-Gbps Cisco DNA Center GUI port (1, enp1s0f0) as **NETWORK ADAPTER #3**. As explained in [Interface Cable Connections](#), this port is used to access the Cisco DNA Center GUI from your management network. Apply the host IP address, netmask, and other values that are appropriate for this purpose (see [Required IP Addresses and Subnets](#) and [Required Configuration Information](#) for the values to enter).

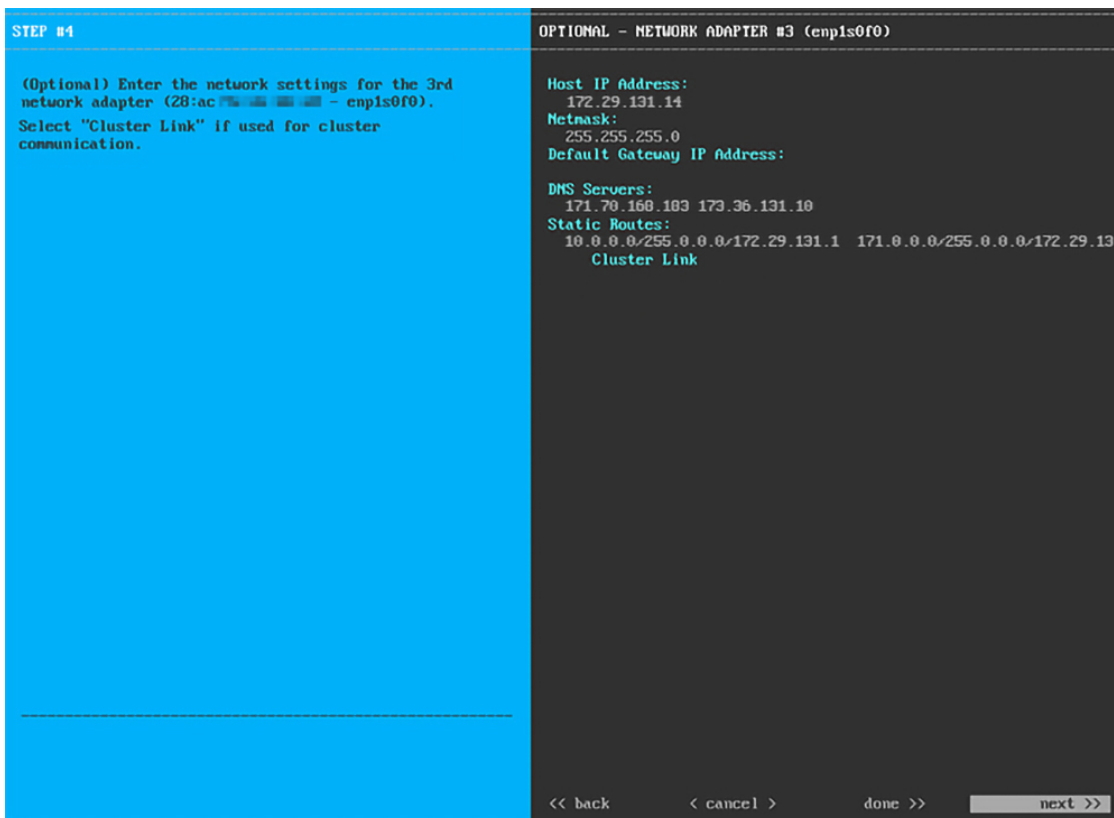

Enter the configuration values for **NETWORK ADAPTER #3**, as shown in the table below.

Table 3: Primary Node Entries for Network Adapter #3: 1-Gbps GUI Port (enp1s0f0)

<b>Host IP address</b>	Enter the IP address for the 1-Gbps GUI Port. This is required only if you are using the GUI Port to access the Cisco DNA Center GUI from your management network; otherwise, you can leave it blank.
<b>Netmask</b>	Enter the netmask for the port's IP address. This is required if you enter an IP address.
<b>Default Gateway IP address</b>	Enter a default gateway IP address to use for the port. <b>Important</b> Ensure that you enter a default gateway IP address for at least one of your appliance's interfaces. Otherwise, you will not be able to complete the configuration wizard.
<b>DNS Servers</b>	Enter the IP address of the preferred DNS server. If you are entering multiple DNS servers, separate the IP addresses in the list with spaces. <b>Important</b> <ul style="list-style-type: none"> <li>• For NTP, ensure port 123 (UDP) is open between Cisco DNA Center and your NTP server.</li> <li>• For each appliance in your cluster, configure a maximum of three DNS servers. Problems can occur if you configure more than three DNS servers for an appliance.</li> </ul>
<b>Static Routes</b>	Enter one or more static routes in the following format, separated by spaces: <network>/<netmask>/<gateway>.
<b>Cluster Link</b>	Leave this field blank. It is required on the Cluster port only.

After you provide the necessary information, click **next>>** to proceed. Correct any validation errors as you did in previous screens.

**Step 8**

After successful validation of the Cisco DNA Center GUI port values you entered, the wizard presents the 1-Gbps Cloud port (2, enp1s0f1) as **NETWORK ADAPTER #4**. As explained in [Interface Cable Connections](#), this is an optional port used to link the appliance to the Internet when you cannot do so through the 10-Gbps Enterprise port (Port 1, enp9s0). Apply the host IP address, netmask, and other values that are appropriate for this purpose (see [Required IP Addresses and Subnets](#) and [Required Configuration Information](#) for the values to enter).



STEP #1	OPTIONAL - NETWORK ADAPTER #4 (enp1s0f1)
<p>(Optional) Enter the network settings for the 4th network adapter (2B:ac:80:00:00:00 - enp1s0f1).</p> <p>Select "Cluster Link" if used for cluster communication.</p>	<p>Host IP Address:</p> <p>Netmask:</p> <p>Default Gateway IP Address:</p> <p>DNS Servers:</p> <p>Static Routes:</p> <p>Cluster Link</p>
<p style="text-align: right;"> <span data-bbox="820 1012 885 1033">&lt;&lt; back</span> <span data-bbox="958 1012 1047 1033">&lt; cancel &gt;</span> <span data-bbox="1128 1012 1193 1033">done &gt;&gt;</span> <span data-bbox="1242 1012 1380 1033" style="background-color: #ccc; padding: 2px 10px;">next &gt;&gt;</span> </p>	

Enter the configuration values for **NETWORK ADAPTER #4**, as shown in the table below.

**Table 4: Primary Node Entries for Network Adapter #4: 1-Gbps Cloud Port (enp1s0f1)**


<b>Host IP address</b>	Enter the IP address for the Cloud port. This is required only if you are using the Cloud port for internet connection; otherwise, you can leave it blank.
<b>Netmask</b>	Enter the netmask for the port's IP address. This is required if you enter an IP address.
<b>Default Gateway IP address</b>	<p>Enter a default gateway IP address to use for the Cloud port.</p> <p><b>Important</b> Ensure that you enter a default gateway IP address for at least one of your appliance's interfaces. Otherwise, you will not be able to complete the configuration wizard.</p>
<b>DNS Servers</b>	<p>Enter the IP address of the preferred DNS server. If you are entering multiple DNS servers, separate the IP addresses in the list with spaces.</p> <p><b>Important</b> For each appliance in your cluster, configure a maximum of three DNS servers. Problems can occur if you configure more than three DNS servers for an appliance.</p>
<b>Static Routes</b>	Enter one or more static routes in the following format, separated by spaces: <code>&lt;network&gt;/&lt;netmask&gt;/&lt;gateway&gt;</code> . This is usually required on the Cisco DNA Center GUI port only.

<b>Cluster Link</b>	Leave this field blank. It is required on the Cluster port only.
---------------------	--

After you provide the necessary information, click **next>>** to proceed. Correct any validation errors as you did in previous screens.

### Step 9

After the network adapter configuration is complete, the wizard prompts you to enter configuration values for the **NETWORK PROXY** you are using, as shown below.

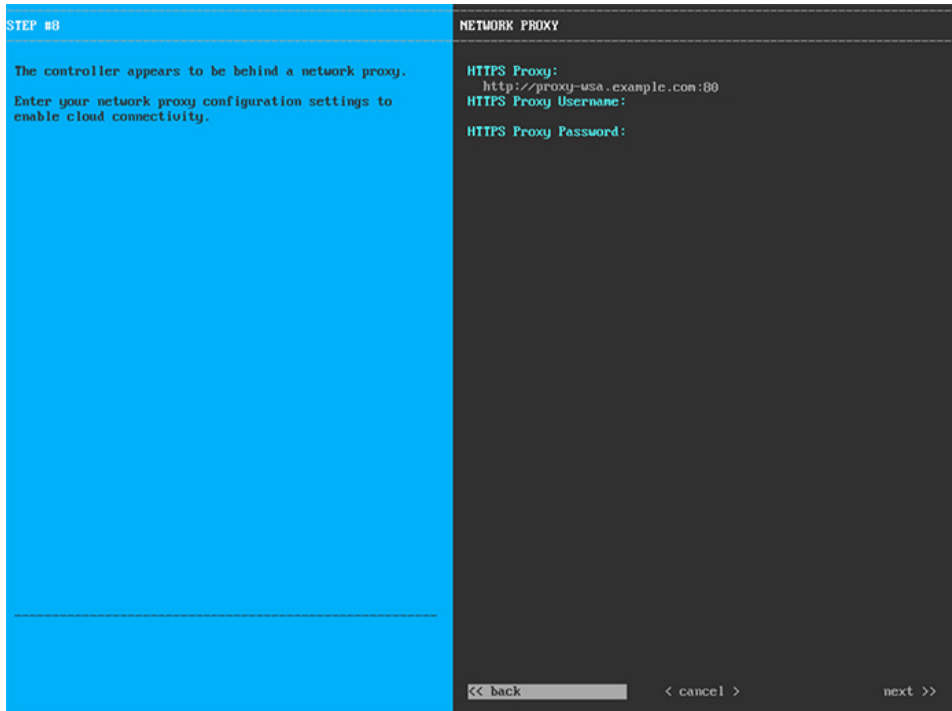

Enter the configuration values for the **NETWORK PROXY**, as shown in the table below.

**Table 5: Primary Node Entries for Network Proxy**

<b>HTTPS Proxy</b>	Enter the URL or host name of an HTTPS network proxy used to access the Internet.  <b>Note</b> Connection from Cisco DNA Center to the HTTPS proxy is supported only via HTTP in this release.
<b>HTTPS Proxy Username</b>	Enter the user name used to access the network proxy. If no proxy login is required, leave this field blank.
<b>HTTPS Proxy Password</b>	Enter the password used to access the network proxy. If no proxy login is required, leave this field blank.

After you provide the necessary information, click **next>>** to proceed. Correct validation errors, if any, as you did in previous screens.

### Step 10

After network proxy configuration completes, the wizard prompts you to enter virtual IP addresses for the primary node, in **MAGLEV CLUSTER DETAILS**, as shown below.

The screenshot shows a configuration wizard interface. On the left, a blue panel contains the text 'STEP #11' and 'Enter the connectivity details for your existing Maglev cluster'. On the right, a dark grey panel titled 'MAGLEV CLUSTER DETAILS' displays the following information:

```

Cluster Virtual IP Address(s):
192.192.192.106 172.29.131.106 17.192.1.106
Cluster's hostname:
cdnac.example.com

```

At the bottom of the dark grey panel, there are navigation buttons: '<< back', '< cancel >', and 'next >>'.

Enter a space-separated list of the virtual IP addresses used for traffic between the cluster and your network. This is required for both three-node clusters and single-node clusters that will be converted into a three-node cluster in the future. If you have a single-node cluster setup and plan to stick with it, skip this step and proceed to Step 11.

**Important** You must enter one virtual IP address for each configured network interface. You will not be able to complete the wizard unless you do so. These addresses are tied to the cluster link's status, which must be in the **UP** state.

You also have the option to specify the fully qualified domain name (FQDN) for your cluster. Cisco DNA Center uses this domain name to do the following:

- It uses this hostname to access your cluster's web interface and the Representational State Transfer (REST) APIs used by devices in the enterprise network that Cisco DNA Center manages.
- In the Subject Alternative Name (SAN) field of Cisco DNA Center certificates, it uses the FQDN to define the Plug and Play server that should be used for device provisioning.

After you provide the necessary information, click **next>>** to proceed. Correct validation errors, if any, as you did in previous screens.

**Step 11** After you have entered the virtual IP addresses, the wizard prompts you to enter **USER ACCOUNT SETTINGS** values, as shown below.

**STEP #13**

Specify a new password for the 'maglev' Linux user, and specify a passphrase of the 'admin' UI user.

\* Indicates a mandatory field

Password generation is optional, but recommended.

User is advised to append personal password with generated password for recommended security

Caution: Store generated password for future log ins

---

**USER ACCOUNT SETTINGS**

Linux Password: \*

Re-enter Linux Password: \*

Password Generation Seed:

< Generate Password >

Auto Generated Password:

< Use Generated Password >

Administrator Passphrase: \*

Re-enter Administrator Passphrase: \*

<< back                      < cancel >                      next >>

Enter the values for **USER ACCOUNT SETTINGS**, as shown in the table below.

**Table 6: Primary Node Entries for User Account Settings**

<b>Linux Password</b>	Enter a Linux password for the maglev user.
<b>Re-enter Linux Password</b>	Confirm the Linux password by entering it a second time.
<b>Password Generation Seed</b>	If you do not want to create the Linux password yourself, enter a seed phrase in this field and then press < <b>Generate Password</b> > to generate the password.
<b>Auto Generated Password</b>	(Optional) The seed phrase appears as part of a random and secure password. If desired, you can either use this password "as is", or you can further edit this auto-generated password.  Press < <b>Use Generated Password</b> > to save the password.
<b>Administrator Passphrase</b>	Enter a password for the default admin superuser, used to log in to Cisco DNA Center for the first time.
<b>Re-enter Administrator Passphrase</b>	Confirm the administrator passphrase by entering it a second time.

After you provide the necessary information, click **next>>** to proceed. Correct validation errors, if any, as you did in previous screens.

**Step 12** After you have entered the user account details, the wizard prompts you to enter **NTP SERVER SETTINGS** values, as shown below.

**STEP #14**

Enter the IP address of the NTP server that the controller will use.

It is recommended to specify 3 or more NTP servers to improve availability and time accuracy.

Please note that the NTP server(s) must be accessible in order for the configuration to succeed.

\* Indicates a mandatory field

---

**NTP SERVER SETTINGS**

NTP Servers: \*

1.ntp.example.com 2.ntp.example.com 3.ntp.example.com


<< back      < cancel >      next >>

Enter one or more NTP server addresses or hostnames, separated by spaces. At least one NTP address or hostname is required. For a production deployment, we recommend that you configure a minimum of three NTP servers.

After you provide the necessary information, click **next>>** to proceed. Correct validation errors, if any, as you did in previous screens. The wizard validates and applies your NTP server configuration.

### Step 13

After you have specified the appropriate NTP servers, the wizard prompts you to enter **MAGLEV ADVANCED SETTINGS** values, as shown below.

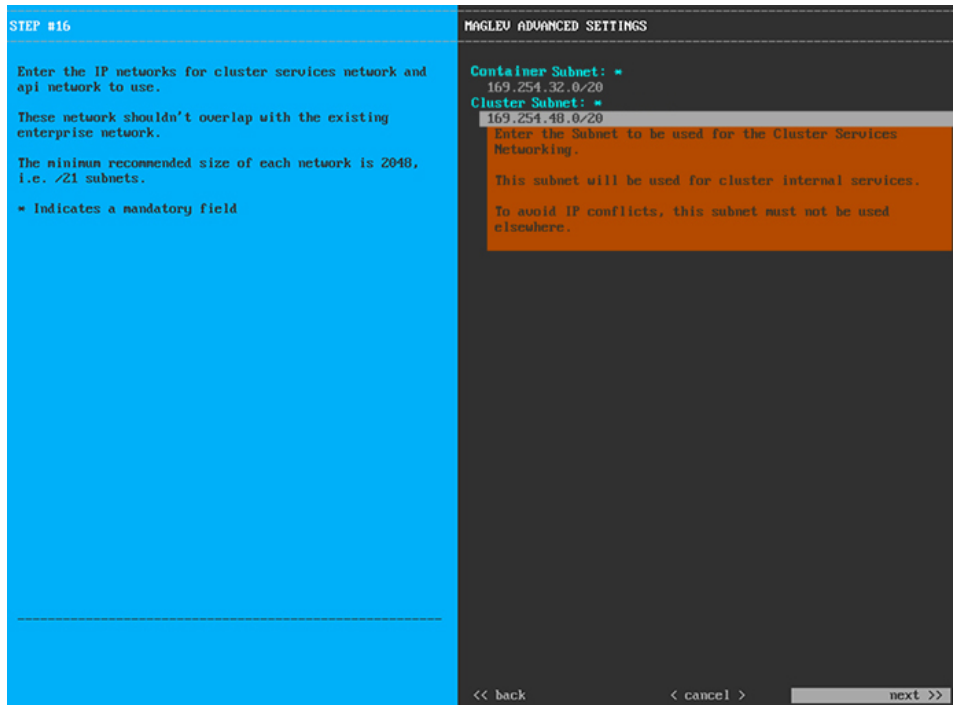

Enter the configuration values for **MAGLEV ADVANCED SETTINGS**, as shown in the table below.

**Table 7: Primary Node Entries for Maglev Advanced Settings**

<b>Container Subnet</b>	A dedicated, non-routed IP subnet that Cisco DNA Center uses to manage internal services. By default, this is already set to <b>169.254.32.0/20</b> , and we recommend that you use this subnet. If you choose to enter another subnet, ensure that it does not conflict with or overlap any other subnet used by the Cisco DNA Center internal network or an external network. For more information, see the Container Subnet description in <a href="#">Required IP Addresses and Subnets</a> .
<b>Cluster Subnet</b>	A dedicated, non-routed IP subnet that Cisco DNA Center uses to manage internal cluster services. By default, this is already set to <b>169.254.48.0/20</b> , and we recommend that you use this subnet. If you choose to enter another subnet, ensure that it does not conflict with or overlap any other subnet used by the Cisco DNA Center internal network or an external network. For more information, see the Cluster Subnet description in <a href="#">Required IP Addresses and Subnets</a> .

When you are finished, click **next>>** to proceed. Correct validation errors, if any, as you did in previous screens.

#### Step 14

After you have entered the Maglev advanced settings, a final message appears, stating that the wizard is ready to apply the configuration (as shown below).

```
The wizard is now ready to apply the configuration on the controller.
Use the [back] button below to verify/modify controller settings.
Use the [cancel] button to discard your changes and exit the wizard.
Use the [proceed] button to save your changes and proceed with applying them on the controller.

<< back                < cancel >                proceed >>
```

Click **proceed>>** to complete the configuration wizard.

The host will reboot automatically and display messages on the KVM console as it applies your settings and brings up services. This process can take several hours. You can monitor its progress via the KVM console.

At the end of the configuration process, the appliance power cycles again, then displays a **CONFIGURATION SUCCEEDED!** message.

---

### What to do next

- If you are deploying this appliance in standalone mode only, perform the first-time setup: [First-Time Setup Workflow](#).
- If you are deploying this appliance as the primary node in a cluster, configure the second and third installed appliances in the cluster: [Configure a Secondary Node](#).

## Configure a Secondary Node

Perform the steps in this procedure to configure the second and third appliances in the cluster.



---

### Important

In order to build a three-node cluster, the same version of the **System** package must be installed on your three Cisco DNA Center appliances. Otherwise, unexpected behavior and possible downtime can occur.

---



**Note** Ensure that all of the IP addresses you enter while completing this procedure are valid IPv4 addresses with valid IPv4 netmasks. Also make sure that the addresses and their corresponding subnets do not overlap. Service communication issues can result if they do.



**Important** Before you configure the appliances in a three-node cluster, ensure that you have logged out of those appliances. Otherwise, the Quick Start workflow (which you complete to discover your network's devices and enable telemetry) will not start after you have configured your cluster's appliances and log in to Cisco DNA Center for the first time.

When joining each new secondary node to the cluster, you must specify the first host in the cluster as the primary node. Note the following when joining secondary nodes to a cluster:

- Be sure to join only a single node to the cluster at a time. Do not attempt to add multiple nodes at the same time, because this results in unpredictable behavior.
- Before adding a new node to the cluster, be sure that all installed packages are deployed on the primary node. You can check this by using Secure Shell to log in to the primary node's Cisco DNA Center Management port as the Linux User (maglev) and then running the command `maglev package status`. All installed packages should appear in the command output as `DEPLOYED`. In the following example, a few packages were not installed, such as the `application-policy` and `sd-access` packages. They are the only packages whose status is `NOT_DEPLOYED`. Your package status should look similar to this before configuring a secondary node.

```
maglev-1 [main - https://kong-frontend.maglev-system.svc.cluster.local:443]
NAME                               DISPLAY_NAME                               DEPLOYED   AVAILABLE   STATUS           PROGRESS
-----
access-control-application          Access Control Application                  -          2.1.369.60050 NOT_DEPLOYED
ai-network-analytics               AI Network Analytics                       -          2.6.10.494   NOT_DEPLOYED
app-hosting                         Application Hosting                         -          1.6.6.2201241723 NOT_DEPLOYED
application-policy                 Application Policy                          -          2.1.369.170033 NOT_DEPLOYED
application-registry               Application Registry                        -          2.1.369.170033 NOT_DEPLOYED
application-visibility-service      Application Visibility Service              -          2.1.369.170033 NOT_DEPLOYED
assurance                          Assurance - Base                            2.2.2.485   -            DEPLOYED
automation-core                   NCP - Services                            2.1.368.60015 2.1.369.60050 DEPLOYED
base-provision-core               Automation - Base                          2.1.368.60015 2.1.369.60050 DEPLOYED
cloud-connectivity-data-hub        Cloud Connectivity - Data Hub              -          1.6.0.380   -            DEPLOYED
cloud-connectivity-contextual-content Cloud Connectivity - Contextual Content    1.3.1.364   -            DEPLOYED
cloud-connectivity-tethering        Cloud Connectivity - Tethering              -          2.12.1.2    -            DEPLOYED
cloud-provision-core              Cloud Device Provisioning Application       -          2.1.369.60050 NOT_DEPLOYED
command-runner                    Command Runner                             2.1.368.60015 2.1.369.60050 DEPLOYED
device-onboarding                 Device Onboarding                          2.1.368.60015 2.1.369.60050 DEPLOYED
disaster-recovery                 Disaster Recovery                           -          2.1.367.360196 NOT_DEPLOYED
dna-core-apps                     Network Experience Platform - Core         2.1.368.60015 2.1.369.60050 DEPLOYED
dnac-platform                     Cisco DNA Center Platform                  1.5.1.180   1.5.1.182   DEPLOYED
dnac-search                        Cisco DNA Center Global Search             1.5.0.466   -            DEPLOYED
endpoint-analytics                 AI Endpoint Analytics                      -          1.4.375     NOT_DEPLOYED
group-based-policy-analytics       Group-Based Policy Analytics               -          2.2.1.401   NOT_DEPLOYED
icap-automation                   Automation - Intelligent Capture           -          2.1.369.60050 NOT_DEPLOYED
image-management                  Image Management                          2.1.368.60015 2.1.369.60050 DEPLOYED
machine-reasoning                 Machine Reasoning                          2.1.368.210017 2.1.369.210024 DEPLOYED
ncp-system                        NCP - Base                                2.1.368.60015 2.1.369.60050 DEPLOYED
ndp-base-analytics                Network Data Platform - Base Analytics     1.6.1028    1.6.1031    DEPLOYED
ndp-platform                      Network Data Platform - Core              1.6.596     -            DEPLOYED
ndp-ui                            Network Data Platform - Manager           1.6.543     -            DEPLOYED
network-visibility                 Network Controller Platform                2.1.368.60015 2.1.369.60050 DEPLOYED
path-trace                         Path Trace                                 2.1.368.60015 2.1.369.60050 DEPLOYED
platform-ui                       Cisco DNA Center UI                       1.6.2.446   1.6.2.448   DEPLOYED
rbac-extensions                   RBAC Extensions                           2.1.368.1910001 2.1.369.1910003 DEPLOYED
rogue-management                  Rogue and aWIPS                            -          2.2.0.51    NOT_DEPLOYED
sd-access                          SD Access                                  -          2.1.369.60050 NOT_DEPLOYED
sensor-assurance                  Assurance - Sensor                         -          2.2.2.484   NOT_DEPLOYED
sensor-automation                 Automation - Sensor                        2.1.369.60050 2.1.369.60050 NOT_DEPLOYED
ssa                               Stealthwatch Security Analytics            2.1.368.1091226 2.1.369.1091317 DEPLOYED
system                             System                                      1.6.594     -            DEPLOYED
system-commons                    System Commons                             2.1.368.60015 2.1.369.60050 DEPLOYED
umbrella                           Cisco Umbrella                             -          2.1.368.592066 NOT_DEPLOYED
wide-area-bonjour                  Wide Area Bonjour                          -          2.4.368.75006 NOT_DEPLOYED
```

[wed Nov 30 15:45:08 UTC] maglev@192.0.2.1 (maglev-master-192.0.2.1) ~

- Expect some service downtime during the cluster attachment process for each secondary node. Services will need to be redistributed across the nodes and the cluster will be down for periods of time during that process.



## Before you begin


Ensure that you:

- Configured the first appliance in the cluster, following the steps in [Configure the Primary Node](#).
- Collected all of the information specified in [Required IP Addresses and Subnets](#) and [Required Configuration Information](#).
- Installed the second and third appliances, as described in [Appliance Installation Workflow](#).
- Have done the following:
  1. Ran the **maglev package status** command on the first appliance.  
You can also access this information from the Cisco DNA Center GUI by clicking the **Help** icon (🔗) and choosing **About > Packages**.
  2. Contacted the Cisco TAC, gave them the output of this command, and asked them to point you to the ISO that you should install on your second and third appliances.
- Configured Cisco IMC browser access on both secondary appliances, as described in [Enable Browser Access to Cisco Integrated Management Controller](#).
- Checked that both the secondary node appliances' ports, and the switches they use, are properly configured, as described in [Execute Preconfiguration Checks](#).
- Confirmed that you are using a compatible browser. For a list of compatible browsers, see the [Release Notes](#) document for the version of Cisco DNA Center you are installing.
- Enabled ICMP on the firewall between Cisco DNA Center and both the default gateway and the DNS server you specify in the following procedure. The Maglev Configuration wizard uses ping to verify the gateway and DNS server you specify. This ping might get blocked if a firewall is in place and ICMP is not enabled on that firewall. When this happens, you will not be able to complete the wizard.

## Step 1

Point your browser to the Cisco IMC IP address you set during the Cisco IMC GUI configuration you performed, and log in to the Cisco IMC GUI as the Cisco IMC user (see [Enable Browser Access to Cisco Integrated Management Controller](#)).

After successful login, the appliance displays the **Cisco Integrated Management Controller Chassis Summary** window, with a hyperlinked menu at the top of the window, as shown below.

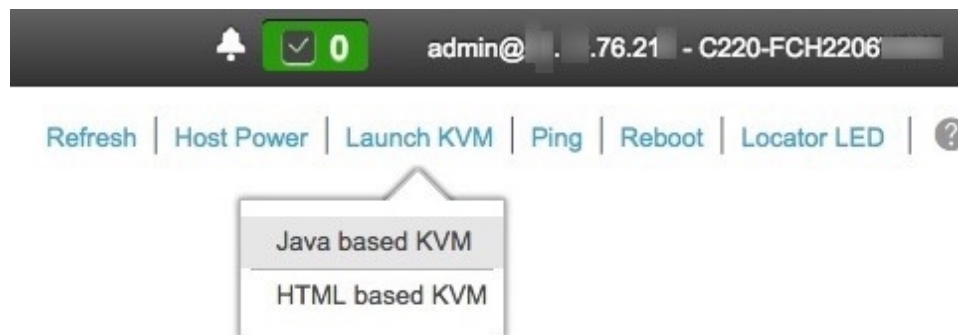

**Step 2** From the hyperlinked menu, choose **Launch KVM** and then select either **Java based KVM** or **HTML based KVM**. If you select **Java-based KVM**, you will need to launch the Java startup file from your browser or file manager in order to view the KVM console in its own window. If you select **HMTL-based KVM**, it launches the KVM console in a separate window or tab automatically.


Irrespective of the KVM type you choose, use the KVM console to monitor the progress of the configuration and respond to the Maglev Configuration wizard prompts.

**Step 3** With the KVM displayed, reboot the appliance by choosing one of the following options:

- In the main Cisco IMC GUI browser window: Choose **Host Power > Power Cycle**, and switch to the KVM console to continue.
- In the KVM console: Choose **Power > Power Cycle System (cold boot)**.

If you are asked to confirm your choice to reboot the appliance, click **OK**.

After displaying reboot messages, the KVM console displays the Maglev Configuration wizard welcome screen.

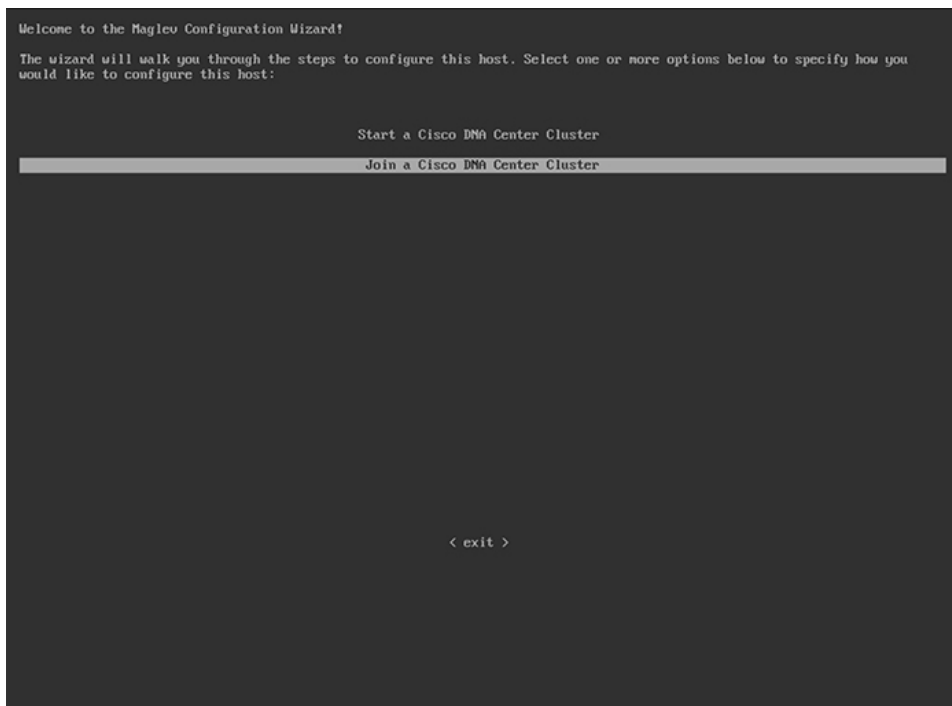


**Step 4** Click **Join a Cisco DNA Center Cluster** to begin configuring the secondary node.

The wizard discovers all of the ports on the appliance and presents them to you one by one, in separate screens, in the following order:

- a. 10-Gbps Enterprise port (Port 1, enp9s0, Network Adapter #1)
- b. 10-Gbps Cluster port (Port 2, enp10s0, Network Adapter #2)
- c. 1-Gbps Cisco DNA Center GUI port (1, enp1s0f0, Network Adapter #3)
- d. 1-Gbps Cloud port (2, enp1s0f1, Network Adapter #4)

**Note** If the wizard fails to display one or both of the 10-Gbps ports during the course of configuration, it might indicate that these ports are nonfunctional or disabled. These 10-Gbps ports are required for Cisco DNA Center functionality. If you discover that they are nonfunctional, choose **cancel** to exit the configuration wizard immediately. Be sure that you have completed all of the steps provided in [Execute Preconfiguration Checks](#) before resuming the configuration or by contacting the Cisco Technical Assistance Center (for more information, see the "Get Assistance from the Cisco TAC" topic in the [Release Notes](#) document).

**Step 5** The wizard discovers the 10-Gbps Enterprise port (Port 1, enp9s0) first, and presents it as **NETWORK ADAPTER #1**. As explained in [Interface Cable Connections](#), this port is required to link the appliance to the enterprise network. Apply the host IP address, netmask, and other values that are appropriate for this purpose (see [Required IP Addresses and Subnets](#) and [Required Configuration Information](#) for the values to enter).

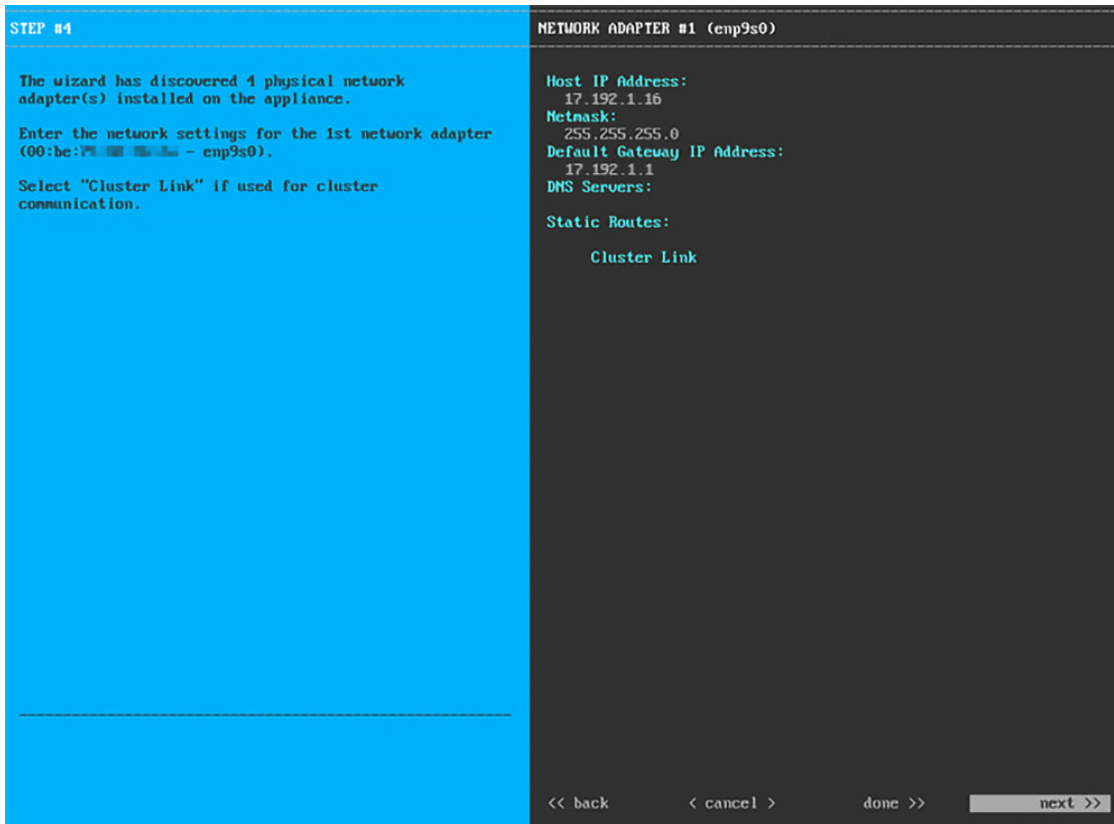

Enter the configuration values for **NETWORK ADAPTER #1**, as shown in the table below.

**Table 8: Secondary Node Entries for Network Adapter #1: 10-Gbps Enterprise Port (enp9s0)**

<b>Host IP address</b>	Enter the IP address for the 10-Gbps Enterprise port. This is required.
<b>Netmask</b>	Enter the netmask for the port's IP address. This is required.
<b>Default Gateway IP address</b>	Enter a default gateway IP address to use for the port.  <b>Important</b> Ensure that you enter a default gateway IP address for at least one of your appliance's interfaces. Otherwise, you will not be able to complete the configuration wizard.

<b>DNS Servers</b>	Enter the IP address of the preferred DNS server. If you are entering multiple DNS servers, separate the IP addresses in the list with spaces.  <b>Important</b> For each appliance in your cluster, configure a maximum of three DNS servers. Problems can occur if you configure more than three DNS servers for an appliance.
<b>Static Routes</b>	Enter one or more static routes in the following format, separated by spaces: <code>&lt;network&gt;/&lt;netmask&gt;/&lt;gateway&gt;</code> . This is usually required on the GUI port only.
<b>Cluster Link</b>	Leave this field blank. It is required on the Cluster port only.

After you provide the necessary information, click **next>>** to proceed. Correct validation errors, if any, as you did in previous screens.

### Step 6

After successful validation of the Enterprise port values you entered, the wizard presents the 10-Gbps Cluster port (Port 2, enp10s0) as **NETWORK ADAPTER #2**. As explained in [Interface Cable Connections](#), this port is used to link the appliance to the cluster, so apply the host IP address, netmask, and other values that are appropriate for this purpose (see [Required IP Addresses and Subnets](#) and [Required Configuration Information](#) for the values to enter).

Enter configuration values for **NETWORK ADAPTER #2** as shown in the table below.

**Table 9: Secondary Node Entries for Network Adapter #2: 10-Gbps Cluster Port (enp10s0)**

<b>Host IP address</b>	Enter the IP address for the Cluster port. This is required. Note that you cannot change the address of the Cluster port later.
------------------------	---

<b>Netmask</b>	Enter the netmask for the port's IP address. This is required.
<b>Default Gateway IP address</b>	Enter a default gateway IP address to use for the port.  <b>Important</b> Ensure that you enter a default gateway IP address for at least one of your appliance's interfaces. Otherwise, you will not be able to complete the configuration wizard.
<b>DNS Servers</b>	Enter the IP address of the preferred DNS server. If you are entering multiple DNS servers, separate the IP addresses in the list with spaces.  <b>Important</b> For each appliance in your cluster, configure a maximum of three DNS servers. Problems can occur if you configure more than three DNS servers for an appliance.
<b>Static Routes</b>	Enter one or more static routes in the following format, separated by spaces: <code>&lt;network&gt;/&lt;netmask&gt;/&lt;gateway&gt;</code> . This is usually required on the Cisco DNA Center GUI port only.
<b>Cluster Link</b>	Check the check box to indicate that this port will be the link to a cluster. This is required on the Cluster port only.

After you finish entering the configuration values, click **next>>** to proceed. The wizard validates the values you entered and issues an error message if any are incorrect. If you receive an error message, check that the value you entered is correct, then reenter it. If needed, click **<<back** to reenter it.

### Step 7

After successful validation of the Cluster port values you entered, the wizard presents the 1-Gbps Cisco DNA Center GUI port (1, enp1s0f0) as **NETWORK ADAPTER #3**. As explained in [Interface Cable Connections](#), this port is used to access the Cisco DNA Center GUI from your management network. Apply the host IP address, netmask, and other values that are appropriate for this purpose (see [Required IP Addresses and Subnets](#) and [Required Configuration Information](#) for the values to enter).

<p><b>STEP #1</b></p> <p>(Optional) Enter the network settings for the 3rd network adapter (28:ac:1a:00:00:00 - enp1s0f0). Select "Cluster Link" if used for cluster communication.</p>	<p><b>OPTIONAL - NETWORK ADAPTER #3 (enp1s0f0)</b></p> <p>Host IP Address: 172.29.131.16</p> <p>Netmask: 255.255.255.0</p> <p>Default Gateway IP Address:</p> <p>DNS Servers: 171.70.168.103 173.36.131.10</p> <p>Static Routes: 10.0.0.0/255.0.0.0/172.29.131.1 171.0.0.0/255.0.0.0/172.29.13 Cluster Link</p> <p style="text-align: right;"> <input type="button" value="next &gt;&gt;"/> </p>
---	--

Enter the configuration values for **NETWORK ADAPTER #3**, as shown in the table below.

**Table 10: Secondary Node Entries for Network Adapter #3: 1-Gbps GUI Port (enp1s0f0)**

<b>Host IP address</b>	Enter the IP address for the 1-Gbps GUI Port. This is required only if you are using the GUI Port to access the Cisco DNA Center GUI from your management network; otherwise, you can leave it blank.
<b>Netmask</b>	Enter the netmask for the port's IP address. This is required if you enter an IP address.
<b>Default Gateway IP address</b>	Enter a default gateway IP address to use for the port.  <b>Important</b> Ensure that you enter a default gateway IP address for at least one of your appliance's interfaces. Otherwise, you will not be able to complete the configuration wizard.
<b>DNS Servers</b>	Enter the IP address of the preferred DNS server. If you are entering multiple DNS servers, separate the IP addresses in the list with spaces.  <b>Important</b> <ul style="list-style-type: none"> <li>• For NTP, ensure port 123 (UDP) is open between Cisco DNA Center and your NTP server.</li> <li>• For each appliance in your cluster, configure a maximum of three DNS servers. Problems can occur if you configure more than three DNS servers for an appliance.</li> </ul>

<b>Static Routes</b>	Enter one or more static routes in the following format, separated by spaces: <code>&lt;network&gt;/&lt;netmask&gt;/&lt;gateway&gt;</code> .
<b>Cluster Link</b>	Leave this field blank. It is required on the Cluster port only.

After you provide the necessary information, click **next>>** to proceed. Correct validation errors, if any, as you did in previous screens.

**Step 8**

After successful validation of the Cisco DNA Center GUI port values you entered, the wizard presents the 1-Gbps Cloud port (2, enp1s0f1) as **NETWORK ADAPTER #4**. As explained in [Interface Cable Connections](#), this is an optional port used to link the appliance to the Internet when you cannot do so through the 10-Gbps Enterprise port (Port 1, enp9s0). Apply the host IP address, netmask, and other values that are appropriate for this purpose (see [Required IP Addresses and Subnets](#) and [Required Configuration Information](#) for the values to enter).



Enter the configuration values for **NETWORK ADAPTER #4**, as shown in the table below.

**Table 11: Secondary Node Entries for Network Adapter #4: 1-Gbps Cloud Port (enp1s0f1)**


<b>Host IP address</b>	Enter the IP address for the Cloud port. This is required only if you are using the Cloud port for internet connection; otherwise, you can leave it blank.
<b>Netmask</b>	Enter the netmask for the port's IP address. This is required if you enter an IP address.

<b>Default Gateway IP address</b>	Enter a default gateway IP address to use for the Cloud port.  <b>Important</b> Ensure that you enter a default gateway IP address for at least one of your appliance's interfaces. Otherwise, you will not be able to complete the configuration wizard.
<b>DNS Servers</b>	Enter the IP address of the preferred DNS server. If you are entering multiple DNS servers, separate the IP addresses in the list with spaces.  <b>Important</b> For each appliance in your cluster, configure a maximum of three DNS servers. Problems can occur if you configure more than three DNS servers for an appliance.
<b>Static Routes</b>	Enter one or more static routes in the following format, separated by spaces: <code>&lt;network&gt;/&lt;netmask&gt;/&lt;gateway&gt;</code> . This is usually required on the GUI port only.
<b>Cluster Link</b>	Leave this field blank. It is required on the Cluster port only.

After you provide the necessary information, click **next>>** to proceed. Correct validation errors, if any, as you did in previous screens.

### Step 9

After the network adapter configuration is complete, the wizard prompts you to enter configuration values for the **NETWORK PROXY** that you are using, as shown below.

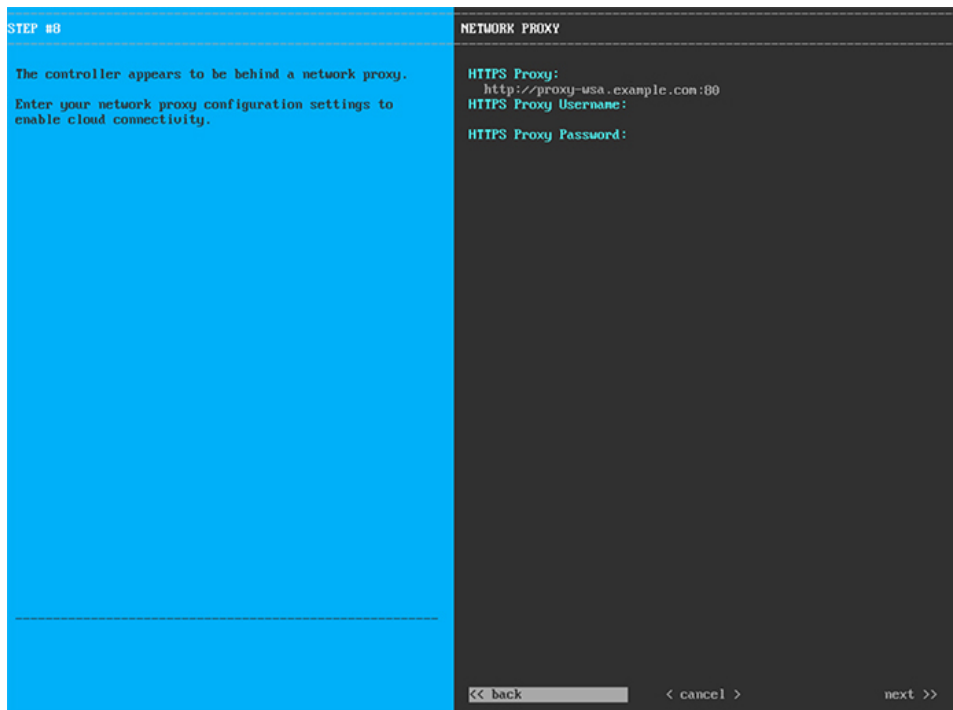

Enter the configuration values for the **NETWORK PROXY**, as shown in the table below.




Table 12: Secondary Node Entries for Network Proxy

<b>HTTPS Proxy</b>	Enter the URL or host name of an HTTPS network proxy used to access the Internet.  <b>Note</b> Connection from Cisco DNA Center to the HTTPS proxy is supported only through HTTP in this release.
<b>HTTPS Proxy Username</b>	Enter the user name used to access the network proxy. If no proxy login is required, leave this field blank.
<b>HTTPS Proxy Password</b>	Enter the password used to access the network proxy. If no proxy login is required, leave this field blank.

After you provide the necessary information, click **next>>** to proceed. Correct validation errors, if any, as you did in previous screens.

**Step 10**

After network proxy configuration completes, the wizard prompts you to identify the Cluster port on the primary node, and primary node login details, in **MAGLEV CLUSTER DETAILS**, as shown below.

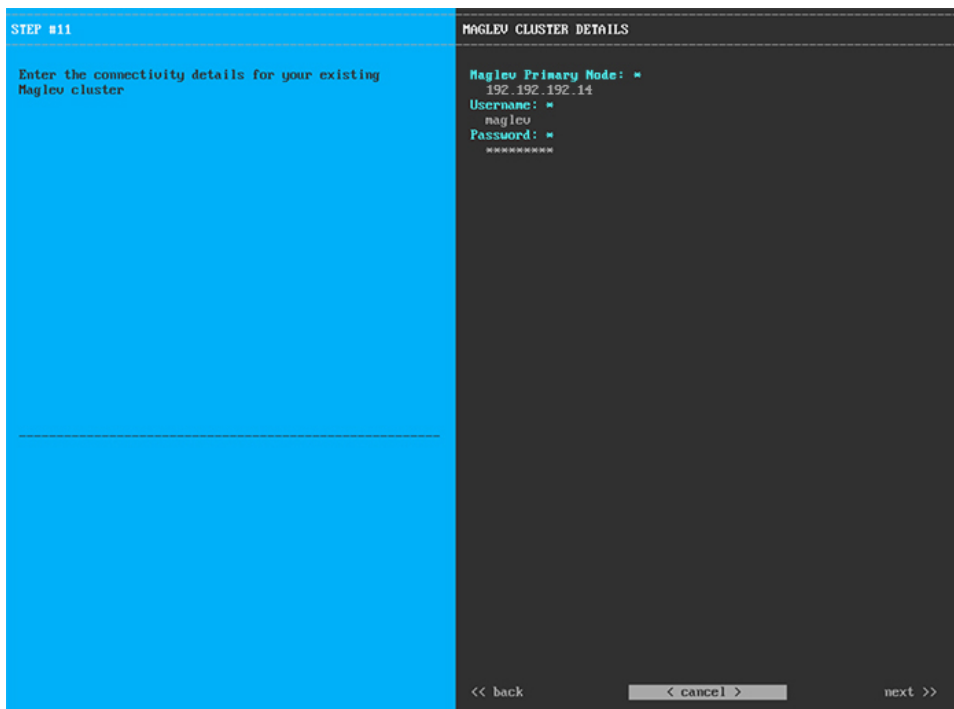

Enter the values for **MAGLEV CLUSTER DETAILS**, as shown in the table below.

Table 13: Secondary Node Entries for Maglev Cluster Details

<b>Maglev Primary Node</b>	Enter the IP address of the Cluster port on the primary node in the cluster. If you have followed the recommendations for port assignment, this will be the IP address of Port 2, enp10s0, Network Adapter #1 on the primary node.
<b>Username</b>	Enter <b>maglev</b> .
<b>Password</b>	Enter the Linux password you configured on the primary node.

After you provide the necessary information, click **next>>** to proceed. Correct validation errors, if any, as you did in previous screens.

**Step 11**

After you have entered the Maglev cluster details, the wizard prompts you to enter **USER ACCOUNT SETTINGS** values for this secondary node, as shown below.


Enter the values for **USER ACCOUNT SETTINGS**, as shown in the table below.

**Table 14: Secondary Node Entries for User Account Settings**

<b>Linux Password</b>	Enter a Linux password for the maglev user.
<b>Re-enter Linux Password</b>	Confirm the Linux password by entering it a second time.
<b>Password Generation Seed</b>	If you do not want to create the Linux password yourself, enter a seed phrase in this field and then press <b>&lt;Generate Password&gt;</b> to generate the password.
<b>Auto Generated Password</b>	(Optional) The seed phrase appears as part of a random and secure password. If required, you can either use this password as is, or you can further edit this auto-generated password. Click <b>&lt;Use Generated Password&gt;</b> to save the password.
<b>Administrator Passphrase</b>	Enter a password for the default admin superuser, used to log in to Cisco DNA Center for the first time.
<b>Re-enter Administrator Passphrase</b>	Confirm the administrator passphrase by entering it a second time.

After you provide the necessary information, click **next>>** to proceed. Correct validation errors, if any, as you did in previous screens.

**Step 12** After you have entered the user account details, the wizard prompts you to enter **NTP SERVER SETTINGS** values, as shown below.

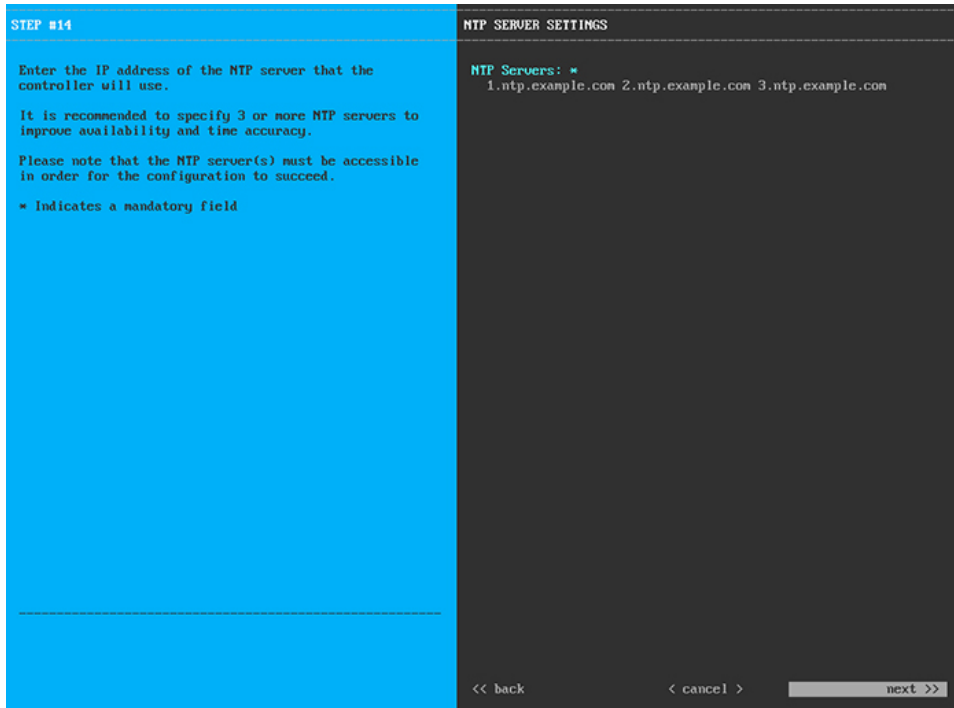

**STEP #14**

Enter the IP address of the NTP server that the controller will use.

It is recommended to specify 3 or more NTP servers to improve availability and time accuracy.

Please note that the NTP server(s) must be accessible in order for the configuration to succeed.

\* Indicates a mandatory field

**NTP SERVER SETTINGS**

NTP Servers: \*

1.ntp.example.com 2.ntp.example.com 3.ntp.example.com

<< back < cancel > next >>

Enter one or more NTP server addresses or hostnames, separated by spaces. At least one NTP address or hostname is required. They should be the same NTP servers you specified for the primary node.

After you provide the necessary information, click **next>>** to proceed. Correct validation errors, if any, as you did in previous screens.

**Step 13** When you are finished entering the NTP server settings, a final message appears, stating that the wizard is ready to apply the configuration (as shown below).

```
The wizard is now ready to apply the configuration on the controller.
Use the [back] button below to verify/modify controller settings.
Use the [cancel] button to discard your changes and exit the wizard.
Use the [proceed] button to save your changes and proceed with applying them on the controller.

<< back                < cancel >                proceed >>
```

Click **proceed>>** to complete the configuration wizard.

The host will reboot automatically and display messages on the KVM console as it applies your settings and brings up services. This process can take several hours. You can monitor its progress via the KVM console.

At the end of the configuration process, the appliance power cycles again, then displays a **CONFIGURATION SUCCEEDED!** message.

---

### What to do next

- If you have an additional appliance to deploy as the third and final node in the cluster, repeat this procedure.
- If you have finished adding hosts to the cluster, perform the first-time setup: [First-Time Setup Workflow](#).

## Upgrade to the Latest Cisco DNA Center Release

For information about upgrading your current release of Cisco DNA Center, see the [Cisco DNA Center Upgrade Guide](#).