



Configuring Terminal Settings and Sessions

This chapter describes how to configure terminal settings and sessions.

- [Information About Terminal Settings and Sessions, on page 1](#)
- [Configuring the Console Port, on page 3](#)
- [Configuring Virtual Terminals , on page 4](#)
- [Configuring Modem Connections, on page 6](#)
- [Clearing Terminal Sessions, on page 10](#)
- [Displaying Terminal and Session Information, on page 10](#)
- [Default Settings for File System Parameters, on page 11](#)
- [Related Documents for Terminal Settings and Sessions, on page 11](#)

Information About Terminal Settings and Sessions

This section includes information about terminal settings and sessions.

Terminal Session Settings

The Cisco NX-OS software features allow you to manage the following characteristics of terminals:

Terminal type

Name used by Telnet when communicating with remote hosts

Length

Number of lines of command output displayed before pausing

Width

Number of characters displayed before wrapping the line

Inactive session timeout

Number of minutes that a session remains inactive before the device terminates it

Console Port

The console port is an asynchronous serial port that allows you to connect to the device for initial configuration through a standard RS-232 port with an RJ-45 connector. Any device connected to this port must be capable of asynchronous transmission. You can configure the following parameters for the console port:

Data bits

Specifies the number of bits in an 8-bit byte that is used for data.

Inactive session timeout

Specifies the number of minutes a session can be inactive before it is terminated.

Parity

Specifies the odd or even parity for error detection.

Speed

Specifies the transmission speed for the connection.

Stop bits

Specifies the stop bits for an asynchronous line.

Configure your terminal emulator with 9600 baud, 8 data bits, 1 stop bit, and no parity.

Virtual Terminals

You can use virtual terminal lines to connect to your Cisco NX-OS device. Secure Shell (SSH) and Telnet create virtual terminal sessions. You can configure an inactive session timeout and a maximum sessions limit for virtual terminals.

Modem Support

You can connect a modem to the console ports only on the supervisor 1 module. The following modems were tested on devices running the Cisco NX-OS software:

- MultiTech MT2834BA (http://www.multitech.com/en_us/support/families/multimodemii/)
- Hayes Accura V.92 (http://www.zoom.com/products/dial_up_external_serial.html#hayes)



Note Do not connect a modem when the device is booting. Only connect the modem when the device is powered up.

The Cisco NX-OS software has the default initialization string (ATE0Q1&D2&C1S0=1\015) to detect connected modems. The default string is defined as follows:

AT

Attention

E0 (required)

No echo

Q1

Result code on

&D2

Normal data terminal ready (DTR) option

&C1

Enable tracking the state of the data carrier

S0=1

Pick up after one ring

\015 (required)

Carriage return in octal

Configuring the Console Port

You can set the following characteristics for the console port:

- Data bits
- Inactive session timeout
- Parity
- Speed
- Stop bits

Before you begin

Log in to the console port.

SUMMARY STEPS

1. **configure terminal**
2. **line console**
3. **databits *bits***
4. **exec-timeout *minutes***
5. **parity {even | none | odd}**
6. **speed {300 | 1200 | 2400 | 4800 | 9600 | 38400 | 57600 | 115200}**
7. **stopbits {1 | 2}**
8. **exit**
9. (Optional) **show line console**
10. (Optional) **copy running-config startup-config**

DETAILED STEPS

	Command or Action	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config)#	Enters global configuration mode.
Step 2	line console Example: switch# line console switch(config-console) #	Enters console configuration mode.
Step 3	databits <i>bits</i> Example: switch(config-console) # databits 7	Configures the number of data bits per byte. The range is from 5 to 8. The default is 8.

	Command or Action	Purpose
Step 4	exec-timeout <i>minutes</i> Example: switch(config-console)# exec-timeout 30	Configures the timeout for an inactive session. The range is from 0 to 525600 minutes (8760 hours). A value of 0 minutes disables the session timeout. The default is 30 minutes.
Step 5	parity {even none odd} Example: switch(config-console)# parity even	Configures the parity. The default is none .
Step 6	speed {300 1200 2400 4800 9600 38400 57600 115200} Example: switch(config-console)# speed 115200	Configures the transmit and receive speed. The default is 9600 .
Step 7	stopbits {1 2} Example: switch(config-console)# stopbits 2	Configures the stop bits. The default is 1 .
Step 8	exit Example: switch(config-console)# exit switch(config)#	Exits console configuration mode.
Step 9	(Optional) show line console Example: switch(config)# show line console	Displays the console settings.
Step 10	(Optional) copy running-config startup-config Example: switch(config)# copy running-config startup-config	Copies the running configuration to the startup configuration.

Configuring Virtual Terminals

This section describes how to configure virtual terminals on Cisco NX-OS devices.

Configuring the Inactive Session Timeout

You can configure a timeout for inactive virtual terminal sessions on a Cisco NX-OS device.

SUMMARY STEPS

1. **configure terminal**
2. **line vty**
3. **exec-timeout *minutes***

4. **exit**
5. (Optional) **show running-config all | begin vty**
6. (Optional) **copy running-config startup-config**

DETAILED STEPS

	Command or Action	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config)#	Enters global configuration mode.
Step 2	line vty Example: switch# line vty switch(config-line)#	Enters line configuration mode.
Step 3	exec-timeout <i>minutes</i> Example: switch(config-line)# exec-timeout 30	Configures the inactive session timeout. The range is from 0 to 525600 minutes (8760 hours). A value of 0 minutes disables the timeout. The default value is 30.
Step 4	exit Example: switch(config-line)# exit switch(config)#	Exits line configuration mode.
Step 5	(Optional) show running-config all begin vty Example: switch(config)# show running-config all begin vty	Displays the virtual terminal configuration.
Step 6	(Optional) copy running-config startup-config Example: switch(config)# copy running-config startup-config	Copies the running configuration to the startup configuration.

Configuring the Session Limit

You can limit the number of virtual terminal sessions on your Cisco NX-OS device.

SUMMARY STEPS

1. **configure terminal**
2. **line vty**
3. **session-limit *sessions***
4. **exit**
5. (Optional) **show running-config all | begin vty**
6. (Optional) **copy running-config startup-config**

DETAILED STEPS

	Command or Action	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config)#	Enters global configuration mode.
Step 2	line vty Example: switch# line vty switch(config-line) #	Enters line configuration mode.
Step 3	session-limit sessions Example: switch(config-line) # session-limit 10	Configures the maximum number of virtual sessions for the Cisco NX-OS device. The range is from 1 to 64. The default is 32.
Step 4	exit Example: switch(config-line) # exit switch(config) #	Exits line configuration mode.
Step 5	(Optional) show running-config all being vty Example: switch(config) # show running-config all begin vty	Displays the virtual terminal configuration.
Step 6	(Optional) copy running-config startup-config Example: switch(config) # copy running-config startup-config	Copies the running configuration to the startup configuration.

Configuring Modem Connections

You can connect a modem to the console port.

Enabling a Modem Connection

You must enable the modem connection on the port before you can use the modem.

Before you begin

Log in to the console port.

SUMMARY STEPS

1. **configure terminal**
2. **line console**

3. **modem in**
4. **exit**
5. (Optional) **show line**
6. (Optional) **copy running-config startup-config**

DETAILED STEPS

	Command or Action	Purpose
Step 1	configure terminal	Enters global configuration mode.
	Example: <pre>switch# configure terminal switch(config)#</pre>	
Step 2	line console	Enters console configuration mode.
Step 3	modem in	Enables modem input on the port.
Step 4	exit	Exits console configuration mode.
Step 5	(Optional) show line	Displays the console settings.
	Example: <pre>switch(config)# show line</pre>	
Step 6	(Optional) copy running-config startup-config	Copies the running configuration to the startup configuration.
	Example: <pre>switch(config)# copy running-config startup-config</pre>	

Downloading the Default Initialization String

The Cisco NX-OS software provides a default initialization string that you can download for connecting with the modem. The default initialization string is ATE0Q1&D2&C1S0=1\015.

Before you begin

Log in to the console port.

SUMMARY STEPS

1. **configure terminal**
2. **line console**
3. **modem init-string default**
4. **exit**
5. (Optional) **show line**
6. (Optional) **copy running-config startup-config**

Configuring and Downloading a User-Specified Initialization String

DETAILED STEPS

	Command or Action	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config)#	Enters global configuration mode.
Step 2	line console	
Step 3	modem init-string default	Writes the default initialization string to the modem.
Step 4	exit	Exits console configuration mode.
Step 5	(Optional) show line Example: switch(config)# show line	Displays the console settings.
Step 6	(Optional) copy running-config startup-config Example: switch(config)# copy running-config startup-config	Copies the running configuration to the startup configuration.

Configuring and Downloading a User-Specified Initialization String

You can configure and download your own initialization when the default initialization string is not compatible with your modem.

Before you begin

Log in to the console port.

SUMMARY STEPS

1. **configure terminal**
2. **line console**
3. **modem set-string user-input *string***
4. **modem init-string user-input**
5. **exit**
6. (Optional) **show line**
7. (Optional) **copy running-config startup-config**

DETAILED STEPS

	Command or Action	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config)#	Enters global configuration mode.

	Command or Action	Purpose
Step 2	line console	
Step 3	modem set-string user-input string	Sets the user-specified initialization string for the console port. The initialization string is alphanumeric and case sensitive, can contain special characters, and has a maximum of 100 characters. Note You must first set the user-input string before initializing the string.
Step 4	modem init-string user-input	Writes the user-specified initialization string to the modem connected to the console port.
Step 5	exit	Exits console configuration mode.
Step 6	(Optional) show line Example: switch(config)# show line	Displays the console settings.
Step 7	(Optional) copy running-config startup-config Example: switch(config)# copy running-config startup-config	Copies the running configuration to the startup configuration.

Initializing a Modem for a Powered-Up Cisco NX-OS Device

If you connect a modem to a powered-up physical device, you must initialize the modem before you can use it.

Before you begin

After waiting until the Cisco NX-OS device has completed the boot sequence and the system image is running, connect the modem to either the console port on the device.

Enable the modem connection on the port.

SUMMARY STEPS

1. **modem connect line console}**

DETAILED STEPS

	Command or Action	Purpose
Step 1	modem connect line console} Example: switch# modem connect line console	Initializes the modem connected to the device.

Clearing Terminal Sessions

You can clear terminal sessions on the Cisco NX-OS device.

SUMMARY STEPS

1. (Optional) **show users**
2. **clear line name**

DETAILED STEPS

	Command or Action	Purpose
Step 1	(Optional) show users Example: switch# show users	Displays the user sessions on the device.
Step 2	clear line name Example: switch# clear line pts/0	Clears a terminal session on a specific line. The line name is case sensitive.

Displaying Terminal and Session Information

To display terminal and session information, perform one of the following tasks:

Command	Purpose
show terminal	Displays terminal settings.
show line	Displays the console ports settings.
show users	Displays virtual terminal sessions.
show running-config [all]	Displays the user account configuration in the running configuration. The all keyword displays the default values for the user accounts.

For detailed information about the fields in the output from these commands, see the Cisco Nexus command reference guide for your device.

Default Settings for File System Parameters

This table lists the default settings for the file system parameters.

Table 1: Default File System Settings

Parameter	Default
Default filesystem	bootflash:

Related Documents for Terminal Settings and Sessions

Related Topic	Document Title
Cisco NX-OS Licensing	<i>Cisco NX-OS Licensing Guide</i>
Command Reference	<i>Cisco Nexus 3548 Switch NX-OS Fundamentals Command Reference</i>

