



L Commands

- [l2rib dup-host-mac-detection](#), on page 10
- [l2rib dup-host-mac-recovery](#), on page 11
- [l3 ethernet port](#), on page 12
- [l3 port-channel port](#), on page 13
- [label-allocation-mode per-vrf](#), on page 14
- [label allocate global](#), on page 15
- [lacp graceful-convergence](#), on page 16
- [lacp max-bundle](#), on page 17
- [lacp min-links](#), on page 18
- [lacp mode delay](#), on page 19
- [lacp mode delay](#), on page 20
- [lacp port-number front-panel](#), on page 21
- [lacp port-priority](#), on page 22
- [lacp rate](#), on page 23
- [lacp rate](#), on page 24
- [lacp suspend-individual](#), on page 25
- [lacp system-mac](#), on page 26
- [lacp system-priority](#), on page 27
- [lacp vpc-convergence](#), on page 28
- [last](#), on page 29
- [latency](#), on page 30
- [latency](#), on page 31
- [latency quantization](#), on page 32
- [latency quantization](#), on page 33
- [layer-2 multicast lookup mac](#), on page 34
- [layer2-switched flow monitor input](#), on page 35
- [layer2-switched flow monitor input](#), on page 36
- [layer3 peer-router](#), on page 37
- [layer3 peer-router syslog](#), on page 38
- [lcmd push_to_klm address port vlan](#), on page 39
- [ldap-search-map](#), on page 40
- [ldap-search-map](#), on page 41
- [ldap-server deadtime](#), on page 42

- [ldap-server host](#), on page 43
- [ldap-server host test rootDN](#), on page 44
- [ldap-server timeout](#), on page 45
- [ldap search-map](#), on page 46
- [less](#), on page 47
- [license smart clear eventlog](#), on page 48
- [license smart custom_id](#), on page 49
- [license smart factory reset](#), on page 50
- [license smart import](#), on page 51
- [license smart privacy](#), on page 52
- [license smart proxy address](#), on page 53
- [license smart save](#), on page 54
- [license smart source-interface](#), on page 55
- [license smart sync local](#), on page 56
- [license smart transport](#), on page 57
- [license smart trust idtoken local](#), on page 58
- [license smart url smart](#), on page 59
- [license smart usage interval](#), on page 60
- [license smart vrf](#), on page 61
- [limit-resource module-type](#), on page 62
- [limit-resource monitor-session-erspan-dst minimum maximum equal-to-min](#), on page 63
- [limit-resource monitor-session-inband-src minimum maximum equal-to-min](#), on page 64
- [limit-resource monitor-session minimum maximum equal-to-min](#), on page 65
- [limit-resource port-channel minimum maximum](#), on page 66
- [limit-resource vlan minimum maximum equal-to-min](#), on page 67
- [limit-resource vrf minimum maximum equal-to-min](#), on page 68
- [limit address-count](#), on page 69
- [line console](#), on page 70
- [line console](#), on page 71
- [line vty](#), on page 72
- [link-bandwidth cumulative](#), on page 73
- [link-flap error-disable count interval](#), on page 74
- [link-level-flow-control watch-dog-interval on](#), on page 75
- [link-state-trap](#), on page 76
- [link active-jitter-management](#), on page 77
- [link debounce](#), on page 78
- [link dfe adaptive-tuning](#), on page 79
- [link loopback](#), on page 80
- [link mac-up timer](#), on page 81
- [link max-bringup timer](#), on page 82
- [link transmit reset-skip](#), on page 83
- [lisp](#), on page 84
- [lisp ddt](#), on page 85
- [lisp ddt authoritative-prefix eid-prefix](#), on page 86
- [lisp ddt delegate eid-prefix](#), on page 87
- [lisp ddt map-server-peer eid-prefix](#), on page 88

- [lisp ddt root](#), on page 89
- [lisp dynamic-eid](#), on page 90
- [lisp dynamic-eid](#), on page 91
- [lisp explicit-locator-path](#), on page 92
- [lisp explicit-locator-path](#), on page 93
- [lisp extended-subnet-mode](#), on page 94
- [lisp geo-coordinates](#), on page 95
- [lisp instance-id](#), on page 96
- [lisp loc-reach-algorithm](#), on page 97
- [lisp merge-registrations site-id](#), on page 98
- [lisp mobility](#), on page 99
- [lisp mobility test-liveness](#), on page 100
- [lisp security](#), on page 101
- [lisp site](#), on page 102
- [lisp site](#), on page 103
- [lisp smr-locators](#), on page 104
- [lisp to](#), on page 105
- [listobject-boolean not](#), on page 106
- [listobject-weight weight threshold-weight](#), on page 107
- [listobject](#), on page 108
- [liveness-detection](#), on page 109
- [liveness-detection](#), on page 110
- [liveness-detection](#), on page 111
- [lldp](#), on page 112
- [lldp dcxb version auto](#), on page 114
- [lldp dcxb version cee](#), on page 115
- [lldp receive](#), on page 116
- [lldp tlv-select dcxbp egress](#), on page 117
- [lldp tlv-select management-address v4](#), on page 118
- [lldp tlv-set management-address](#), on page 119
- [lldp tlv-set management-address ipv6](#), on page 120
- [lldp tlv-set vlan](#), on page 121
- [lldp transmit](#), on page 122
- [load-balance](#), on page 123
- [load-balance](#), on page 124
- [load-balance](#), on page 125
- [load-balance egress filter-policy route-map](#), on page 126
- [load-balance egress multipath auto-policy route-map](#), on page 127
- [load-balance method](#), on page 128
- [load-interval](#), on page 129
- [load-interval](#), on page 130
- [load-interval counter](#), on page 131
- [load-interval counter](#), on page 132
- [load](#), on page 133
- [load](#), on page 134
- [load](#), on page 135

- [load configuration failed commit, on page 136](#)
- [local-as, on page 137](#)
- [local-as, on page 138](#)
- [local-label prefix, on page 139](#)
- [local-label prefix, on page 140](#)
- [locator-led, on page 141](#)
- [locator, on page 142](#)
- [locator, on page 143](#)
- [locator, on page 144](#)
- [locator, on page 145](#)
- [locators, on page 146](#)
- [locators, on page 147](#)
- [lockdown, on page 148](#)
- [lockdown, on page 149](#)
- [log-adjacency-changes, on page 150](#)
- [log-adjacency-changes, on page 151](#)
- [log-adjacency-changes, on page 152](#)
- [log-adjacency-changes, on page 153](#)
- [log-adjacency-changes, on page 154](#)
- [log-neighbor-changes, on page 155](#)
- [log-neighbor-changes, on page 156](#)
- [log-neighbor-warnings, on page 157](#)
- [logging, on page 158](#)
- [logging abort, on page 159](#)
- [logging console, on page 160](#)
- [logging distribute, on page 161](#)
- [logging drop threshold, on page 162](#)
- [logging drop threshold, on page 163](#)
- [logging event link enable, on page 164](#)
- [logging event port link-status, on page 165](#)
- [logging event port link-status, on page 166](#)
- [logging event port link-status, on page 167](#)
- [logging event port link-status default, on page 168](#)
- [logging event port trunk-status, on page 169](#)
- [logging event port trunk-status, on page 170](#)
- [logging event port trunk-status default, on page 171](#)
- [logging history, on page 172](#)
- [logging level, on page 173](#)
- [logging level, on page 175](#)
- [logging level, on page 176](#)
- [logging level, on page 177](#)
- [logging level aaa, on page 178](#)
- [logging level acl, on page 179](#)
- [logging level aclmgr, on page 180](#)
- [logging level adbm, on page 181](#)
- [logging level adjmgr, on page 182](#)

- [logging level all](#), on page 183
- [logging level amt](#), on page 184
- [logging level app-hosting](#), on page 185
- [logging level arp](#), on page 186
- [logging level ascii-cfg](#), on page 187
- [logging level assoc_mgr](#), on page 188
- [logging level backup](#), on page 189
- [logging level bfd](#), on page 190
- [logging level bgp](#), on page 191
- [logging level bloggerd](#), on page 192
- [logging level bootvar](#), on page 193
- [logging level callhome](#), on page 194
- [logging level capability](#), on page 195
- [logging level cdp](#), on page 196
- [logging level cfs](#), on page 197
- [logging level clis](#), on page 198
- [logging level clk_mgr](#), on page 199
- [logging level confcheck](#), on page 200
- [logging level copp](#), on page 201
- [logging level core-dmon](#), on page 202
- [logging level cryptopqc](#), on page 203
- [logging level cts](#), on page 204
- [logging level device-alias](#), on page 205
- [logging level dhclient](#), on page 206
- [logging level dhcp_snoop](#), on page 207
- [logging level diagclient](#), on page 208
- [logging level diagmgr](#), on page 209
- [logging level dot1x](#), on page 210
- [logging level dpvm](#), on page 211
- [logging level ecp](#), on page 212
- [logging level eigrp](#), on page 213
- [logging level eltm](#), on page 214
- [logging level epbr](#), on page 215
- [logging level epp](#), on page 216
- [logging level ethpm](#), on page 217
- [logging level ethpm link](#), on page 218
- [logging level evb](#), on page 219
- [logging level evmc](#), on page 220
- [logging level evmed](#), on page 221
- [logging level evms](#), on page 222
- [logging level fabric forwarding](#), on page 223
- [logging level fabricpath switch-id](#), on page 224
- [logging level fc2d](#), on page 225
- [logging level fcdomain](#), on page 226
- [logging level fcns](#), on page 227
- [logging level fcoe_mgr](#), on page 228

- [logging level fcs](#), on page 229
- [logging level fdmi](#), on page 230
- [logging level feature-mgr](#), on page 231
- [logging level flogi](#), on page 232
- [logging level fs-daemon](#), on page 233
- [logging level fspf](#), on page 234
- [logging level fsync_mgr](#), on page 235
- [logging level gpixm](#), on page 236
- [logging level hardware-telemetry](#), on page 237
- [logging level hsrp](#), on page 238
- [logging level igmp](#), on page 239
- [logging level imp](#), on page 240
- [logging level interface-vlan](#), on page 241
- [logging level ip pim](#), on page 242
- [logging level ip sla responder](#), on page 243
- [logging level ip sla sender](#), on page 244
- [logging level ip sla twamp-server](#), on page 245
- [logging level ipconf](#), on page 246
- [logging level ipfib](#), on page 247
- [logging level ipqos](#), on page 248
- [logging level ipv6 mld](#), on page 249
- [logging level ipv6 pim](#), on page 250
- [logging level iscm](#), on page 251
- [logging level iscm](#), on page 252
- [logging level isis](#), on page 253
- [logging level l2fm](#), on page 254
- [logging level l2rib](#), on page 255
- [logging level l3vm](#), on page 256
- [logging level lacp](#), on page 257
- [logging level ldap](#), on page 258
- [logging level lem-mgr](#), on page 259
- [logging level lim](#), on page 260
- [logging level lisp](#), on page 261
- [logging level lldp](#), on page 262
- [logging level m2rib](#), on page 263
- [logging level mfdm](#), on page 264
- [logging level mfwd](#), on page 265
- [logging level mfwdv6](#), on page 266
- [logging level mmode](#), on page 267
- [logging level module](#), on page 268
- [logging level monitor](#), on page 269
- [logging level mpls manager](#), on page 270
- [logging level mpls static](#), on page 271
- [logging level mpls switching](#), on page 272
- [logging level msdp](#), on page 273
- [logging level mvsh](#), on page 274

- [logging level nat](#), on page 275
- [logging level nbm](#), on page 276
- [logging level netstack](#), on page 277
- [logging level nfm](#), on page 278
- [logging level nfm](#), on page 279
- [logging level ngmvpn](#), on page 280
- [logging level ngoam](#), on page 281
- [logging level npv](#), on page 282
- [logging level ntp](#), on page 283
- [logging level nve](#), on page 284
- [logging level nxsdk](#), on page 285
- [logging level ofm](#), on page 286
- [logging level ospf](#), on page 287
- [logging level ospfv3](#), on page 288
- [logging level pfstat](#), on page 289
- [logging level pixm](#), on page 290
- [logging level pktmgr](#), on page 291
- [logging level platform](#), on page 292
- [logging level plcmgr](#), on page 293
- [logging level pltfm_config](#), on page 294
- [logging level pltm](#), on page 295
- [logging level plugin](#), on page 296
- [logging level poed](#), on page 297
- [logging level port-profile](#), on page 298
- [logging level port-resources](#), on page 299
- [logging level port-security](#), on page 300
- [logging level port](#), on page 301
- [logging level port link-failure](#), on page 302
- [logging level private-vlan](#), on page 303
- [logging level ptp](#), on page 304
- [logging level radius](#), on page 305
- [logging level rdl](#), on page 306
- [logging level res_mgr](#), on page 307
- [logging level rib](#), on page 308
- [logging level rip](#), on page 309
- [logging level rpm](#), on page 310
- [logging level rscn](#), on page 311
- [logging level sal](#), on page 312
- [logging level scheduler](#), on page 313
- [logging level scsi-target](#), on page 314
- [logging level segment-routing](#), on page 315
- [logging level session-mgr](#), on page 316
- [logging level sflow](#), on page 317
- [logging level smm](#), on page 318
- [logging level snmpd](#), on page 319
- [logging level snmpmib_proc](#), on page 320

- logging level spanning, on page 321
- logging level spm, on page 322
- logging level stripcl, on page 323
- logging level syncc, on page 324
- logging level sysmgr, on page 325
- logging level tacacs, on page 326
- logging level tamnw, on page 327
- logging level telemetry, on page 328
- logging level template_manager, on page 329
- logging level tpmon, on page 330
- logging level track, on page 331
- logging level tunnel-encryption, on page 332
- logging level tunnel, on page 333
- logging level u2rib, on page 334
- logging level u6rib, on page 335
- logging level udld, on page 336
- logging level ufdm, on page 337
- logging level urib, on page 338
- logging level vdc_mgr, on page 339
- logging level virtual-service, on page 340
- logging level vlan_mgr, on page 341
- logging level vmm, on page 342
- logging level vmtracker, on page 343
- logging level vpc, on page 344
- logging level vrrp, on page 345
- logging level vrrpv3, on page 346
- logging level vsan, on page 347
- logging level vshd, on page 348
- logging level vtp, on page 349
- logging level wwnm, on page 350
- logging level xbar, on page 351
- logging level zone, on page 352
- logging logfile, on page 353
- logging message interface type ethernet, on page 354
- logging module, on page 355
- logging monitor, on page 356
- logging origin-id, on page 357
- logging rate-limit, on page 358
- logging rfc-strict 5424, on page 359
- logging secure oosp strict, on page 360
- logging server, on page 361
- logging server dns-refresh-interval, on page 363
- logging source-interface, on page 364
- logging timestamp, on page 365
- login on-failure log, on page 366
- login on-success log, on page 367

- [logout-warning](#), on page 368
- [low-memory exempt](#), on page 369
- [lshow](#), on page 370
- [lsp-gen-interval](#), on page 371
- [lsp-gen-interval](#), on page 372
- [lsp-gen-interval](#), on page 373
- [lsp-mtu](#), on page 374
- [lsp-mtu](#), on page 375
- [lsp-mtu](#), on page 376
- [lsp](#), on page 377
- [lsp](#), on page 378

l2rib dup-host-mac-detection

```
{ no l2rib dup-host-mac-detection } | { l2rib dup-host-mac-detection <num-of-moves> <duration> }
```

Syntax Description

no	Negate a command or set its defaults
l2rib	Layer 2 routing information base
dup-host-mac-detection	Set Duplicate-Host-MAC-Detection parameters
<i>num-of-moves</i>	Number of host moves to be allowed
<i>duration</i>	Duplicate detection timeout in secs for host moves

Command Mode

- /exec/configure

l2rib dup-host-mac-recovery

```
{ no l2rib dup-host-mac-recovery } | { l2rib dup-host-mac-recovery <timeout> <retry-count> }
```

Syntax Description

no	Negate a command or set its defaults
l2rib	Layer 2 routing information base
dup-host-mac-recovery	Set Duplicate-Host-MAC-Recovery (Unfreeze) parameters
<i>timeout</i>	Unfreeze timeout (secs)
<i>retry-count</i>	Unfreeze retry count

Command Mode

- /exec/configure

l3 ethernet port

[no] l3 ethernet port <port-range>

Syntax Description

no	(Optional) Negate a command or set its defaults
l3	Configure loop-detection on layer-3 interfaces
ethernet	Configure l3 loop-detection on ethernet interfaces
port	Enable l3 loop-detection on port
<i>port-range</i>	Enable interface for l3 loop detection

Command Mode

- /exec/configure/configngoamloopdetection

l3 port-channel port

[no] l3 port-channel port <port-range>

Syntax Description

no	(Optional) Negate a command or set its defaults
l3	Configure loop-detection on layer-3 interfaces
port-channel	Configure l3 loop-detection on port-channel interfaces
port	Enable l3 loop-detection on port
<i>port-range</i>	Enable interface for l3 loop detection

Command Mode

- /exec/configure/configgoamloopdetection

label-allocation-mode per-vrf

[no] label-allocation-mode per-vrf

Syntax Description

no	(Optional) Negate a command or set its defaults
label-allocation-mode	Configure label allocation mode
per-vrf	per VRF label allocation mode

Command Mode

- /exec/configure/router-bgp/router-bgp-vrf-af-ipv4 /exec/configure/router-bgp/router-bgp-vrf-af-ipv6

label allocate global

[no] label allocate global { all-routes | host-routes | prefix-list <pfx-list> }

Syntax Description

no	(Optional) Negate a command or set its defaults
label	LDP label configuration
allocate	Allocate local labels
global	Specify default VPN Routing/Forwarding instance
all-routes	Allocate local labels for all routes
host-routes	Allocate local labels for host routes only (default)
prefix-list	Specify a prefix-list for local label filtering
<i>pfx-list</i>	IP prefix-list for destination prefixes

Command Mode

- /exec/configure/ldp

lACP graceful-convergence

lACP graceful-convergence | no lACP graceful-convergence

Syntax Description

no	Negate a command or set its defaults
lACP	Set LACP parameters for the interface
graceful-convergence	Configure port-channel lACP graceful convergence. Disable this only with lACP ports connected to Non-Nexus peer. Disabling this with Nexus peer can lead to port suspension

Command Mode

- /exec/configure/if-eth-port-channel-switch /exec/configure/if-eth-port-channel /exec/configure/if-eth-port-channel-p2p

lACP max-bundle

lACP max-bundle <max-bundle-number> | no lACP max-bundle [<max-bundle-number>]

Syntax Description

no	Negate a command or set its defaults
lACP	Set LACP parameters for the interface
max-bundle	Configure the port-channel max-bundle
<i>max-bundle-number</i>	Enter the max-bundle number

Command Mode

- /exec/configure/if-eth-port-channel-switch /exec/configure/if-eth-port-channel
/exec/configure/if-eth-port-channel-p2p

lacp min-links

lacp min-links <min-links-number> | no lacp min-links [<min-links-number>]

Syntax Description

no	Negate a command or set its defaults
lacp	Set LACP parameters for the interface
min-links	Configure the port-channel min-links
<i>min-links-number</i>	Enter the min-link number

Command Mode

- /exec/configure/if-eth-port-channel-switch /exec/configure/if-eth-port-channel /exec/configure/if-eth-port-channel-p2p

lacp mode delay

[no] lacp mode delay

Syntax Description

no	(Optional) Negate a command or set its defaults
lacp	Set LACP parameters for the interface
mode	Enter the LACP mode
delay	Configure delayed lacp on the port-channel

Command Mode

- /exec/configure/if-eth-port-channel-switch /exec/configure/if-eth-port-channel
/exec/configure/if-eth-port-channel-p2p

lacp mode delay

[no] lacp mode delay

Syntax Description

no	(Optional) Negate a command or set its defaults
lacp	Set LACP parameters for the interface
mode	Enter the LACP mode
delay	Configure delayed lacp on the port-channel

Command Mode

- /exec/configure/if-eth-port-channel-switch /exec/configure/if-eth-port-channel
/exec/configure/if-eth-port-channel-p2p

lacp port-number front-panel

lacp port-number front-panel | no lacp port-number front-panel

Syntax Description

no	Negate a command or set its defaults
lacp	Set LACP parameters for the interface
port-number	Configure port-number in LACP port-channels
front-panel	Configure front panel based port numbering for LACP port-channels

Command Mode

- /exec/configure

lacp port-priority

lacp port-priority <port-pri> | no lacp port-priority

Syntax Description

no	Negate a command or set its defaults
lacp	Set LACP parameters for the interface
port-priority	Set LACP port priority
<i>port-pri</i>	Enter port priority

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

lacp rate

[no] lacp rate

Syntax Description

no	Negate a command or set its defaults
lacp	Set LACP parameters for the interface
rate	Configure rate at which PDUs are sent by LACP

Command Mode

- /exec/configure/if-ethernet /exec/configure/if-ethernet-switch /exec/configure/if-ethernet-all /exec/configure/if-ethernet-m /exec/configure/if-ethernet-switch-m /exec/configure/if-remote-ethernet /exec/configure/if-remote-ethernet-switch

lacp rate

lacp rate <rate_type>

Syntax Description

lacp	Set LACP parameters for the interface
rate	Configure rate at which PDUs are sent by LACP
<i>rate_type</i>	Rate type

Command Mode

- /exec/configure/if-ethernet /exec/configure/if-ethernet-switch /exec/configure/if-ethernet-all
/exec/configure/if-ethernet-m /exec/configure/if-ethernet-switch-m /exec/configure/if-remote-ethernet
/exec/configure/if-remote-ethernet-switch

lACP suspend-individual

lACP suspend-individual [pxe [<pxe-timeout>]] | no lACP suspend-individual [pxe [<pxe-timeout>]]

Syntax Description

no	Negate a command or set its defaults
lACP	Set LACP parameters for the interface
suspend-individual	Configure lACP port-channel state. Disabling this will cause lACP to put the port to individual state and not suspend the port in case it does not get LACP BPDU from the peer ports in the port-channel
pxe	(Optional) Disabling this would cause lACP to put only one port to individual state in case it does not get LACP BPDU from the peer port in the port-channel
<i>pxe-timeout</i>	(Optional) PXE timeout value in seconds (default 10 seconds)

Command Mode

- /exec/configure/if-eth-port-channel-switch /exec/configure/if-eth-port-channel
/exec/configure/if-eth-port-channel-p2p

lacp system-mac

lacp system-mac <mac-address> [role <role>] | no lacp system-mac

Syntax Description

no	Negate a command or set its defaults
lacp	Set LACP parameters for the interface
system-mac	Configure the MAC address to be used for the LACP Protocol exchanges
<i>mac-address</i>	MAC-address(FORMAT :xxxx.xxxx.xxxx)
role	(Optional) Configure the role for this Switch
<i>role</i>	(Optional) Role played by the Switch

Command Mode

- /exec/configure

lacp system-priority

lacp system-priority <sys-pri> | no lacp system-priority

Syntax Description

no	Negate a command or set its defaults
lacp	Set LACP parameters for the interface
system-priority	Set LACP system priority
<i>sys-pri</i>	Enter System Priority

Command Mode

- /exec/configure

lacp vpc-convergence

lacp vpc-convergence | no lacp vpc-convergence

Syntax Description

no	Negate a command or set its defaults
lacp	Set LACP parameters for the interface
vpc-convergence	Enable lacp convergence for vPC port channels.

Command Mode

- /exec/configure/if-eth-port-channel-switch /exec/configure/if-eth-port-channel
/exec/configure/if-eth-port-channel-p2p

last

| last [<lines>]

Syntax Description

	Pipe command output to filter
last	Display last lines
<i>lines</i>	(Optional) number of lines to print

Command Mode

- /output

latency

{ [no] latency <lat> | no latency }

Syntax Description

latency	Provide the latency value for this POSTCARD queue_profile
<i>lat</i>	queue_profile latency (nano seconds). Default is 2048 ns

Command Mode

- /exec/configure/config-postcard-q-prof

latency

{ [no] latency <lat> | no latency }

Syntax Description

latency	Provide the latency value for this INT queue_profile
<i>lat</i>	queue_profile latency (nano seconds). Default is 2048 ns

Command Mode

- /exec/configure/config-int-q-prof

latency quantization

{ [no] latency quantization <lat> | no latency quantization }

Syntax Description

latency	Provide the latency value for this INT flow-profile
quantization	Provide the latency value for this INT flow-profile
<i>lat</i>	flow-profile latency quantization. This value will be converted to a power of 2 (nanoseconds). For example, value of 11 will be converted to 2 power 11 which is 2048. This means that if the difference between ingress timestamp and egress timestamp is more than 2048 nanosec at any point in the path, one upstream report or local report will be generated per flow. The allowed values are in range 0-28 Default is 11.

Command Mode

- /exec/configure/config-int-flow-prof

latency quantization

{ [no] latency quantization <lat> | no latency quantization }

Syntax Description

latency	Provide the latency value for this POSTCARD flow-profile
quantization	Provide the latency value for this POSTCARD flow-profile
<i>lat</i>	flow-profile latency quantization. This value will be converted to a power of 2 (nanoseconds). For example, value of 11 will be converted to 2 power 11 which is 2048. This means that if the difference between ingress timestamp and egress timestamp is more than 2048 nanosec at any postcard in the path, one upstream report or local report will be generated per flow. The allowed values are in range 0-28. Default is 11.

Command Mode

- /exec/configure/config-postcard-flow-prof

layer-2 multicast lookup mac

[no] layer-2 multicast lookup mac

Syntax Description

no	(Optional) Negate a command or set its defaults
layer-2	set layer2 multicast lkup mode
multicast	set layer2 multicast lkup mode
lookup	lkup type can be either mac or ip based
mac	set mac based multicast lkup mode

Command Mode

- /exec/configure/vlan-config /exec/configure/bdomain

layer2-switched flow monitor input

[no] layer2-switched flow monitor <monitorname> { input | output }

Syntax Description

layer2-switched	Configure L2 features
flow	NetFlow related commands
monitor	Apply a Flow Monitor to this interface
<i>monitorname</i>	Name of Flow Monitor
input	Apply Flow Monitor on input traffic
output	Apply Flow Monitor on output traffic

Command Mode

- /exec/configure/if-veth /exec/configure/if-veth-all /exec/configure/if-vethernet /exec/configure/if-veth-any

layer2-switched flow monitor input

[no] layer2-switched flow monitor <monitorname> { input | output }

Syntax Description

layer2-switched	Configure L2 features
flow	NetFlow related commands
monitor	Apply a Flow Monitor to this interface
<i>monitorname</i>	Name of Flow Monitor
input	Apply Flow Monitor on input traffic
output	Apply Flow Monitor on output traffic

Command Mode

- /exec/configure/if-switching

layer3 peer-router

layer3 peer-router | no layer3 peer-router

Syntax Description

no	Negate a command or set its defaults
layer3	Enable layer 3 functionality
peer-router	no change for TTL of packets destined to the peer

Command Mode

- /exec/configure/vpc-domain

layer3 peer-router syslog

layer3 peer-router syslog [interval <syslog-interval>] | no layer3 peer-router syslog

Syntax Description

no	Negate a command or set its defaults
layer3	Enable layer 3 functionality
peer-router	no change for TTL of packets destined to the peer
syslog	print layer 3 protocol syslog
interval	(Optional) how frequent to print the syslog
<i>syslog-interval</i>	(Optional) how many seconds to print a syslog

Command Mode

- /exec/configure/vpc-domain

lcmd push_to_klm address port vlan

lcmd push_to_klm address <macaddr> port <portnum> vlan <vlanid>

Syntax Description

lcmd	LCND configuration
push_to_klm	Push MAC address to auth_db
address	MAC address
<i>macaddr</i>	MAC address
port	Port number
<i>portnum</i>	Port number
vlan	VLAN id
<i>vlanid</i>	VLAN id

Command Mode

- /exec/configure

ldap-search-map

ldap-search-map <*s0*>

Syntax Description

ldap-search-map	Set one of the configured search-map as active
<i>s0</i>	Name of the search-map

Command Mode

- /exec/configure/ldap

ldap-search-map

[no] ldap-search-map

Syntax Description

no	Negate a command or set its defaults
ldap-search-map	Set one of the configured search-map as active

Command Mode

- /exec/configure/ldap

ldap-server deadtime

[no] ldap-server deadtime <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
ldap-server	Configure LDAP related parameters
deadtime	Global LDAP server deadtime period in seconds
<i>i0</i>	LDAP server deadtime period in minutes (default 0 mins -disabled)

Command Mode

- /exec/configure

ldap-server host

```
[no] ldap-server host { <hostipname> } [ { enable-ssl | port <i1> [ timeout <i2> ] | rootDN <s0> [ password { 7 <s1> | <s2> } ] [ port1 <i3> ] [ timeout1 <i4> ] | timeout2 <i5> | referral-disable } ]
```

Syntax Description

no	(Optional) Negate a command or set its defaults
ldap-server	Configure LDAP related parameters
host	LDAP server's DNS name or IP address
<i>hostipname</i>	IPV4/IPV6 address or DNS name
enable-ssl	(Optional) LDAP server enable ssl
port	(Optional) LDAP server's port (default: global config)
<i>i1</i>	(Optional) port number
timeout	(Optional) LDAP server timeout period in seconds
<i>i2</i>	(Optional) LDAP server timeout in seconds (default: global config)
rootDN	(Optional) LDAP server root DN
<i>s0</i>	(Optional) root DN
password	(Optional) LDAP server root password
7	(Optional) LDAP root password (encrypted)
<i>s1</i>	(Optional) password (encrypted)
<i>s2</i>	(Optional) password (clear text)
port1	(Optional) LDAP server's port (default: global config)
<i>i3</i>	(Optional) port number
timeout1	(Optional) LDAP server timeout period in seconds
<i>i4</i>	(Optional) LDAP server timeout in seconds (default: global config)
timeout2	(Optional) LDAP server timeout period in seconds
<i>i5</i>	(Optional) LDAP server timeout in seconds (default: global config)
referral-disable	(Optional) LDAP server disable referrals

Command Mode

- /exec/configure

ldap-server host test rootDN

```
[no] ldap-server host { <hostipname> } test rootDN <r1> { { [ username <s0> { [ password { [ 7 <s2> | <s1> ] } [ idle-time <i1> ] ] | [ idle-time <i1> ] } ] } | { [ password { [ 7 <s2> | <s1> ] } [ idle-time <i1> ] ] } | { [ idle-time <i1> ] } }
```

Syntax Description

<i>username</i>	(Optional) <s0>
no	(Optional) Negate a command or set its defaults
ldap-server	Configure LDAP related parameters
host	LDAP server's IP address
<i>hostipname</i>	IPV4/IPV6 address or DNS name
test	Parameters to send test packets
7	(Optional) LDAP test password (encrypted)
<i>s0</i>	(Optional) user name
password	(Optional) user password in test packets
<i>s1</i>	(Optional) test password
<i>s2</i>	(Optional) test password (encrypted)
rootDN	rootDN in test packets
<i>r1</i>	root DN
idle-time	(Optional) time interval for monitoring the server
<i>i1</i>	(Optional) time period in minutes

Command Mode

- /exec/configure

ldap-server timeout

[no] ldap-server timeout <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
ldap-server	Configure LDAP related parameters
timeout	Global LDAP server timeout period in seconds
<i>i0</i>	LDAP server timeout period in seconds (default 5 sec)

Command Mode

- /exec/configure

ldap search-map

[no] ldap search-map <s0>

Syntax Description

no	(Optional) Negate a command or set its defaults
ldap	Configure information about ldap
search-map	Configure the search-map
s0	Search Map Name

Command Mode

- /exec/configure

less

| less [-d | -E] +

Syntax Description

	Pipe command output to filter
less	Filter for paging
-d	(Optional) dumb terminal
-E	(Optional) quit at end of file

Command Mode

- /output

license smart clear eventlog

license smart clear eventlog

Syntax Description

license	License related command
smart	Smart license related commands
clear	Clear
eventlog	Event log

Command Mode

- /exec

license smart custom_id

license smart custom_id <s0> | no license smart custom_id

Syntax Description

no	Negate a command or set its defaults
license	License related command
smart	Smart license related commands
custom_id	Identifier to be added in utility RUM Report.
s0	Provide identifier

Command Mode

- /exec/configure

license smart factory reset

license smart factory reset

Syntax Description

license	License related command
smart	Smart license related commands
factory	Smart license factory command
reset	Reset smart command

Command Mode

- /exec

license smart import

license smart import <file>

Syntax Description

license	License related command
smart	Smart license related commands
import	Import or install authorization codes, policies, trust codes or ack from file
<i>file</i>	Specify URL for the file

Command Mode

- /exec

license smart privacy

[no] license smart privacy { all | hostname | version }

Syntax Description

no	(Optional) Negate a command or set its defaults
license	License related command
smart	Smart license related commands
privacy	Set internal data privacy
hostname	Apply privacy setting for hostname
version	Apply privacy setting for SA version
all	Apply privacy setting for all data types

Command Mode

- /exec/configure

license smart proxy address

license smart proxy { address <proxyadd> | port <proxyport> } | no license smart proxy { address | port }

Syntax Description

no	Negate a command or set its defaults
license	License related command
smart	Smart license related commands
proxy	Proxy related commands
address	The IP address or the hostname
<i>proxyadd</i>	Address/Hostname
port	The port
<i>proxyport</i>	Proxy port

Command Mode

- /exec/configure

license smart save

license smart save { usage { all | days <n> | unreported | rum-Id <rum_id> } <file> | trust-request <file> }

Syntax Description

license	License related command
smart	Smart license related commands
save	Save RUM reports / trust request to a file offline
usage	Save RUM reports
all	Save all RUM reports
days	Save RUM reports for the last number of <days> specified
unreported	Save RUM reports not previously saved in file or sent
rum-Id	Save an individual RUM report
<i>rum_id</i>	RUM ID
trust-request	Generate trust request to save it a file
<i>n</i>	Specify number of days
<i>file</i>	Specify URL for the file

Command Mode

- /exec

license smart source-interface

license smart source-interface <src-intf> | no license smart source-interface

Syntax Description

no	Negate a command or set its defaults
license	License related command
smart	Smart license related commands
source-interface	Select source interface
<i>src-intf</i>	Specify interface

Command Mode

- /exec/configure

license smart sync local

license smart sync { local | all }

Syntax Description

license	License related command
smart	Smart license related commands
sync	Send any unsent RUM reports to the CSLU, controller REST endpoint or CSSM
local	Get codes for the current UDI
all	Get codes for all devices in HA config

Command Mode

- /exec

license smart transport

license smart transport { callhome | smart | cslu | off } | no license smart transport

Syntax Description

no	Negate a command or set its defaults
license	License related command
smart	Smart license related commands
transport	set transport mode
callhome	Set the transport mode to callhome
smart	Set the transport mode to smart
cslu	Set the transport mode to cslu
off	Set the transport mode to off

Command Mode

- /exec/configure

license smart trust idtoken local

license smart trust idtoken <s0> { local | all } [force]

Syntax Description

license	License related command
smart	Smart license related commands
trust	Establish trust with backend
idtoken	Use Trust Token to establish trust
<i>s0</i>	Provide id token received from backend
local	Establish trust with backend for Active SUP
all	Establish trust with backend for all SUPs
force	(Optional) Force backend to re-establish trust

Command Mode

- /exec

license smart url smart

license smart url { smart | cslu } <url> | no license smart url { smart | cslu }

Syntax Description

no	Negate a command or set its defaults
license	License related command
smart	Smart license related command
url	Set the transport url
smart	Set smart transport url
cslu	Set CSLU URL
<i>url</i>	Provide http or https url, example1: http://site.com/services/callserv example2: https://site2.com/serv/CALL

Command Mode

- /exec/configure

license smart usage interval

license smart usage interval <i0> | no license smart usage interval

Syntax Description

no	Negate a command or set its defaults
license	License related command
smart	Smart license related commands
usage	RUM reports
interval	Day for periodic RUM reports sending
<i>i0</i>	Reporting interval in days. Default 30 days

Command Mode

- /exec/configure

license smart vrf

license smart vrf { <vrf_name> | <vrf-known-name> } | no license smart vrf

Syntax Description

no	Negate a command or set its defaults
license	License related command
smart	Smart license related commands
vrf	Configure vrf name
<i>vrf_name</i>	VRF name
<i>vrf-known-name</i>	Known VRF name

Command Mode

- /exec/configure

limit-resource module-type

{ limit-resource module-type <card-type> + } | { no limit-resource module-type }

Syntax Description

no	Negate a command or set its defaults
limit-resource	Resource configuration
module-type	Controls which type of modules are allowed in this vdc
<i>card-type</i>	Allowed module types

Command Mode

- /exec/configure/vdc

limit-resource monitor-session-erspan-dst minimum maximum equal-to-min

```
{ limit-resource monitor-session-erspan-dst minimum <min-val> maximum { <max-val> | equal-to-min } }
| { no limit-resource monitor-session-erspan-dst [ minimum <min-val> maximum { <max-val> | equal-to-min
} ] }
```

Syntax Description

limit-resource	Resource configuration
monitor-session-erspan-dst	Monitor erspan destination session
minimum	minimum monitor erspan-dst session to allocate
<i>min-val</i>	minimum monitor erspan-dst session value
maximum	maximum monitor erspan-dst session to allocate
<i>max-val</i>	maximum monitor erspan-dst session value
equal-to-min	set maximum value equal to min

Command Mode

- /exec/configure/vdc-template /exec/configure/vdc

limit-resource monitor-session-inband-src minimum maximum equal-to-min

```
{ limit-resource monitor-session-inband-src minimum <min-val> maximum { <max-val> | equal-to-min } }
| { no limit-resource monitor-session-inband-src [ minimum <min-val> maximum { <max-val> | equal-to-min
} ] }
```

Syntax Description

limit-resource	Resource configuration
monitor-session-inband-src	Monitor inband source
minimum	minimum monitor inband source to allocate
<i>min-val</i>	minimum monitor inband source value
maximum	maximum monitor inband source to allocate
<i>max-val</i>	maximum monitor inband source value
equal-to-min	set maximum value equal to min

Command Mode

- /exec/configure/vdc-template /exec/configure/vdc

limit-resource monitor-session minimum maximum equal-to-min

```
{ limit-resource monitor-session minimum <min-val> maximum { <max-val> | equal-to-min } } | { no
limit-resource monitor-session [ minimum <min-val> maximum { <max-val> | equal-to-min } ] }
```

Syntax Description

limit-resource	Resource configuration
monitor-session	Monitor local/erspan-source session
minimum	minimum monitor local session to allocate
<i>min-val</i>	minimum monitor local session value
maximum	maximum monitor local session to allocate
<i>max-val</i>	maximum monitor local session value
equal-to-min	set maximum value equal to min

Command Mode

- /exec/configure/vdc-template /exec/configure/vdc

limit-resource port-channel minimum maximum

limit-resource port-channel minimum <min-val> maximum { <max-val> | equal-to-min } | no limit-resource port-channel [minimum <min-val> maximum { <max-val> | equal-to-min }]

Syntax Description

no	Negate a command or set its defaults
limit-resource	Resource configuration
port-channel	set port-channel limits
minimum	minimum port-channels to allocate
<i>min-val</i>	
maximum	maximum port-channels to allocate
<i>max-val</i>	
equal-to-min	set maximum value equal to min

Command Mode

- /exec/configure/vdc-template /exec/configure/vdc

limit-resource vlan minimum maximum equal-to-min

{ limit-resource vlan minimum <min-val> maximum { <max-val> | equal-to-min } } | { no limit-resource vlan [minimum <min-val> maximum { <max-val> | equal-to-min }] }

Syntax Description

no	Negate a command or set its defaults
limit-resource	Resource configuration
vlan	set VLAN limits
minimum	minimum VLANs to allocate
<i>min-val</i>	minimum VLANs value
maximum	maximum VLANs to allocate
<i>max-val</i>	maximum VLANs value
equal-to-min	set maximum value equal to min

Command Mode

- /exec/configure/vdc-template /exec/configure/vdc

limit-resource vrf minimum maximum equal-to-min

```
{ limit-resource vrf minimum <number1> maximum { <number2> | equal-to-min } } | { no limit-resource vrf [ minimum <number1> maximum { <number2> | equal-to-min } ] }
```

Syntax Description

no	Negate a command or set its defaults
limit-resource	Resource configuration
vrf	set vrf resource limits
minimum	minimum vrf resources to allocate
<i>number1</i>	minimum vrf resource value
maximum	maximum vrf resources to allocate
<i>number2</i>	maximum vrf resource value, 4097 is a reserved value, do not use
equal-to-min	set maximum value equal to min

Command Mode

- /exec/configure/vdc-template /exec/configure/vdc

limit address-count

[no] limit address-count <addr_count>

Syntax Description

no	(Optional) Negate a command or set its defaults
<i>addr_count</i>	maximum value

Command Mode

- /exec/configure/config-snoop-policy

line console

[no] line console

Syntax Description

no	(Optional) Negate a command or set its defaults
line	Configure a terminal line
console	Primary terminal line

Command Mode

- /exec/configure

line console

[no] line console

Syntax Description

no	(Optional) Negate a command or set its defaults
line	Configure a terminal line
console	Primary terminal line

Command Mode

- /exec/configure

line vty

line vty

Syntax Description

line	Configure a terminal line
vty	Virtual terminal line

Command Mode

- /exec/configure

link-bandwidth cumulative

[no | default] link-bandwidth cumulative

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
link-bandwidth	Advertise dmz-link-bandwidth extended community to this neighbor
cumulative	Sum of bandwidth of all multi-paths

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv6
- /exec/configure/router-bgp/router-bgp-vrf-neighbor/router-bgp-vrf-neighbor-af-ipv4
- /exec/configure/router-bgp/router-bgp-vrf-neighbor/router-bgp-vrf-neighbor-af-ipv6

link-flap error-disable count interval

{ link-flap error-disable count <count> interval <interval> | no link-flap error-disable }

Syntax Description

no	Negate a command or set its defaults
link-flap	Configure actions on link-flap
error-disable	Configure the port to error-disable on link-flap
count	Configure the number of link-flaps to trigger the action
<i>count</i>	Specify the number of link-flaps for action
interval	Configure the interval to trigger the action
<i>interval</i>	link-flap interval in seconds

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-base

link-level-flow-control watch-dog-interval on

[no] link-level-flow-control watch-dog-interval { on | off }

Syntax Description

no	(Optional) Negate the command
link-level-flow-control	Enable/Disable LLFC
watch-dog-interval	Watch dog interval
on	Enable LLFC watch-dog interval globally
off	Disable LLFC watch-dog interval globally

Command Mode

- /exec/configure

link-state-trap

[no] link-state-trap

Syntax Description

no	(Optional) Negate a command or set its defaults
link-state-trap	Enable/disable link state change traps

Command Mode

- /exec/configure/if-fc /exec/configure/if-bay /exec/configure/if-ext /exec/configure/if-fcip /exec/configure/if-iscsi

link active-jitter-management

{ link active-jitter-management | no link active-jitter-management }

Syntax Description

no	Negate a command or set its defaults
link	Configure link
active-jitter-management	Enable/Disable jitter management on link

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-base

link debounce

```
link debounce { [ link-up [ time <time_val_link_up> ] ] | [ time <time_val> ] } | no link debounce [ link-up ]
```

Syntax Description

no	Negate a command or set its defaults
link	Configure link
debounce	Configure link debounce timer
link-up	(Optional) Timer for the link-up event
time	(Optional) Link debounce time
<i>time_val</i>	(Optional) Timer value (in milliseconds)
<i>time_val_link_up</i>	(Optional) Timer value (in milliseconds)

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-base

link dfe adaptive-tuning

{ link dfe adaptive-tuning | no link dfe adaptive-tuning }

Syntax Description

no	Negate a command or set its defaults
link	Configure link
dfe	Decision Feedback Equalizer
adaptive-tuning	Configure DFE adaptive tuning for interface

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-base

link loopback

{ link loopback | no link loopback }

Syntax Description

no	Negate a command or set its defaults
link	configure link
loopback	configure the port to be in a loopback mode

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-base

link mac-up timer

{ link mac-up timer <mac_up_timer_val> | no link mac-up timer }

Syntax Description

no	Negate a command or set its defaults
link	Configure link
mac-up	Configure link mac-up timer
timer	Link mac-up time
<i>mac_up_timer_val</i>	Timer value (in seconds)

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-base

link max-bringup timer

```
{ link max-bringup timer <max_bringup_timer_val_max> | no link max-bringup timer }
```

Syntax Description

no	Negate a command or set its defaults
link	Configure link
max-bringup	Configure link max-bringup timer maximum
timer	Link max-bringup timer maximum
<i>max_bringup_timer_val_max</i>	Timer value (in seconds)

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-base

link transmit reset-skip

{ link transmit reset-skip | no link transmit reset-skip }

Syntax Description

no	Negate a command or set its defaults
link	Configure link
transmit	Configure link transmit for interface
reset-skip	Configure link transmit for interface

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-base

lisp

```
{ lisp-lig | lig } { version | self | self6 | <hostname> | { <eid> | <eid6> } } [ source { <seid> | <seid6> } ] [ to
{ <mr-hostname> | { <mr> | <mr6> } } ] [ count <count> ] [ probe ] [ vrf { <vrf-name> | <vrf-known-name>
} ]
```

Syntax Description

<code>lisp-lig</code>	LISP Internet Groper
<code>lig</code>	LISP Internet Groper
<code>eid</code>	LIG on a IPv4 Endpoint ID (EID)
<code>version</code>	Display Internet Draft version lig supports
<code>self</code>	Test if IPv4 EID-prefix registered in mapping database
<code>self6</code>	Test if IPv6 EID-prefix registered in mapping database
<code>hostname</code>	DNS name for Endpoint ID (EID)
<code>source</code>	(Optional) Provide source EID for Map-Request
<code>seid</code>	(Optional) Source IPv4 Endpoint ID (EID)
<code>to</code>	(Optional) Where to send the Map-Request
<code>mr-hostname</code>	(Optional) DNS name for Map-Resolver
<code>mr</code>	(Optional) Map-Resolver IPv4 address to send Map-Request to
<code>count</code>	(Optional) Map-Requests to send before Map-Reply returned
<code>count</code>	(Optional) Number of Map-Requests
<code>probe</code>	(Optional) RLOC-probe each locator
<code>vrf</code>	(Optional) LIGing for specific VRF
<code>vrf-name</code>	(Optional) VRF name
<code>vrf-known-name</code>	(Optional) Known VRF name

Command Mode

- /exec

lisp ddt

{ [no] lisp ddt }

Syntax Description

no	(Optional) Negate a command or set its defaults
lisp	LISP global configuration commands
ddt	Configures a LISP-DDT mapping system functionality

Command Mode

- /exec/configure /exec/configure/vrf

lisp ddt authoritative-prefix eid-prefix

```
{ [ no ] lisp ddt authoritative-prefix eid-prefix { <eid-prefix> | <eid-prefix6> } } | { [ no ] lisp ddt
authoritative-prefix instance-id <iid> [ eid-prefix { <eid-prefix> | <eid-prefix6> } ] } | { [ no ] lisp ddt
authoritative-prefix <star> } | { [ no ] lisp ddt authoritative-prefix instance-id { <iidp> | <range> } }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
lisp	LISP global configuration commands
ddt	Configure LISP-DDT parameters
authoritative-prefix	Configure EID-prefix this LISP-DDT node is authoritative for
instance-id	Instance ID of VPN for EID-prefix
<i>iid</i>	Instance-ID value
star	Authoritative prefix on root for all address space
<i>iidp</i>	Instance-ID in prefix format
<i>range</i>	Instance-ID range in 'x-y' format where y > x
eid-prefix	Authoritative IPv4 or IPv6 EID-prefix
<i>eid-prefix</i>	EID-prefix in IPv4 slash format

Command Mode

- /exec/configure /exec/configure/vrf

lisp ddt delegate eid-prefix

```
{ [ no ] lisp ddt delegate { <node> | <node6> } { eid-prefix { <eid-prefix> | <eid-prefix6> } } [ priority
<priority> weight <weight> ] [ public-key <key> ] [ map-server ] } | { [ no ] lisp ddt delegate { <node> |
<node6> } instance-id <iid> [ eid-prefix { <eid-prefix> | <eid-prefix6> } ] [ priority <priority> weight <weight>
] [ public-key <key> ] [ map-server ] } | { [ no ] lisp ddt delegate { <node> | <node6> } instance-id { <iidp>
| <range> } [ priority <priority> weight <weight> ] [ public-key <key> ] [ map-server ] }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
lisp	LISP global configuration commands
ddt	Configure LISP-DDT parameters
delegate	Configure LISP-DDT child in delegation hierarchy
<i>node</i>	IPv4 locator address of DDT node
instance-id	Instance ID of VPN for EID-prefix
<i>iid</i>	Instance-ID value
<i>iidp</i>	Instance-ID in prefix format
<i>range</i>	Instance-ID range in 'x-y' format where y > x
eid-prefix	Child delegation for IPv4 or IPv6 EID-prefix
<i>eid-prefix</i>	EID-prefix in IPv4 slash format
priority	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED
<i>priority</i>	(Optional) Lower priority Locator takes preference
weight	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED
<i>weight</i>	(Optional) Specified in a percentage from 0 to 100
map-server	(Optional) Child delegate is a Map-Server
public-key	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED
<i>key</i>	(Optional) RSA public-key

Command Mode

- /exec/configure /exec/configure/vrf

lisp ddt map-server-peer eid-prefix

```
{ [ no ] lisp ddt map-server-peer { <node> | <node6> } { eid-prefix { <eid-prefix> | <eid-prefix6> } } [ priority <priority> weight <weight> ] [ public-key <key> ] } | { [ no ] lisp ddt map-server-peer { <node> | <node6> } instance-id <iid> [ eid-prefix { <eid-prefix> | <eid-prefix6> } ] [ priority <priority> weight <weight> ] [ public-key <key> ] } | { [ no ] lisp ddt map-server-peer { <node> | <node6> } instance-id { <iidp> | <range> } [ priority <priority> weight <weight> ] [ public-key <key> ] }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
lisp	LISP global configuration commands
ddt	Configure LISP-DDT parameters
map-server-peer	Configure other map-server peers
<i>node</i>	IPv4 locator address of DDT node
instance-id	Instance ID of VPN for EID-prefix
<i>iid</i>	Instance-ID value
<i>iidp</i>	Instance-ID in prefix format
<i>range</i>	Instance-ID range in 'x-y' format where y > x
eid-prefix	Child delegation for IPv4 or IPv6 EID-prefix
<i>eid-prefix</i>	EID-prefix in IPv4 slash format
priority	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED
<i>priority</i>	(Optional) Lower priority Locator takes preference
weight	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED
<i>weight</i>	(Optional) Specified in a percentage from 0 to 100
public-key	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED
<i>key</i>	(Optional) RSA public-key

Command Mode

- /exec/configure /exec/configure/vrf

lisp ddt root

[no] lisp ddt root { <root> | <root6> } [public-key <key>]

Syntax Description

no	(Optional) Negate a command or set its defaults
lisp	LISP global configuration commands
ddt	Configure LISP-DDT parameters
root	Configure LISP-DDT root of tree in Map-Resolver
<i>root</i>	IPv4 locator address of DDT root
public-key	(Optional) DDT root's public key used to verify signed Map-Referrals
<i>key</i>	(Optional) RSA public-key

Command Mode

- /exec/configure /exec/configure/vrf

lisp dynamic-eid

```
{ [ no ] lisp dynamic-eid <dyn-eid-name> }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
lisp	LISP global configuration commands
dynamic-eid	Configure dynamic-EIDs for roaming
<i>dyn-eid-name</i>	Name your dynamic-EID

Command Mode

- /exec/configure

lisp dynamic-eid

```
{ [ no ] lisp dynamic-eid <dyn-eid-name> }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
lisp	LISP global configuration commands
dynamic-eid	Configure dynamic-EIDs for roaming
<i>dyn-eid-name</i>	Name your dynamic-EID

Command Mode

- /exec/configure/vrf

lisp explicit-locator-path

[no] lisp explicit-locator-path <elp-name>

Syntax Description

no	(Optional) Negate a command or set its defaults
lisp	LISP global configuration commands
explicit-locator-path	Configures a LISP Explicit Locator Path (ELP)
<i>elp-name</i>	Name of LISP ELP

Command Mode

- /exec/configure/vrf

lisp explicit-locator-path

```
{ [ no ] lisp explicit-locator-path <elp-name> }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
lisp	LISP global configuration commands
explicit-locator-path	Configures a LISP Explicit Locator Path (ELP)
<i>elp-name</i>	Name of LISP ELP

Command Mode

- /exec/configure

lisp extended-subnet-mode

{ [no] lisp extended-subnet-mode }

Syntax Description

no	(Optional) Negate a command or set its defaults
lisp	LISP interface configuration commands
extended-subnet-mode	Create dynamic-EID state when EIDs reside on their home subnet

Command Mode

- /exec/configure/if-igp

lisp geo-coordinates

[no] lisp geo-coordinates <latitude> <longitude> [<altitude>]

Syntax Description

no	(Optional) Negate a command or set its defaults
lisp	LISP global configuration commands
geo-coordinates	Configure Geo Coordinates for this router
<i>latitude</i>	Latitude in DMS format: 'degree-min-sec-N' or 'degree-min-sec-S'
<i>longitude</i>	Longitude in DMS format: 'degree-min-sec-E' or 'degree-min-sec-W' format
<i>altitude</i>	(Optional) Altitude in meters above sea-level

Command Mode

- /exec/configure /exec/configure/vrf

lisp instance-id

[no] lisp instance-id <iid>

Syntax Description

no	(Optional) Negate a command or set its defaults
lisp	LISP global configuration commands
instance-id	Configures Instance-ID for global data-mappings
<i>iid</i>	24-bit instance-ID value

Command Mode

- /exec/configure /exec/configure/vrf

lisp loc-reach-algorithm

```
[no] lisp loc-reach-algorithm { count-tcp | echo-nonce | { rloc-probing [ map-request-on-failure ] } }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
lisp	LISP global configuration commands
loc-reach-algorithm	Configure locator reachability algorithm
count-tcp	Count TCP SYNs and ACKs
echo-nonce	Request for nonce to echo back in data-plane
rloc-probing	Probe each high-priority RLOC with Map-Request as last resort
map-request-on-failure	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED

Command Mode

- /exec/configure /exec/configure/vrf

lisp merge-registrations site-id

[no] lisp merge-registrations site-id <site-id>

Syntax Description

no	(Optional) Negate a command or set its defaults
lisp	LISP global configuration commands
merge-registrations	ETRs merge registrations from Map-Notify messages
site-id	Configure site-id value for each xTR at site
<i>site-id</i>	Site-ID to group xTRs together

Command Mode

- /exec/configure /exec/configure/vrf

lisp mobility

[no] lisp mobility <dyn-eid-name>

Syntax Description

no	(Optional) Negate a command or set its defaults
lisp	LISP interface configuration commands
mobility	Configures to allow EID mobility on interface
<i>dyn-eid-name</i>	Name of the dynamic-EID to use

Command Mode

- /exec/configure/if-igp

lisp mobility test-liveness

[no] lisp mobility test-liveness

Syntax Description

no	(Optional) Negate a command or set its defaults
lisp	LISP interface configuration commands
mobility	Configures to allow EID mobility on interface
test-liveness	Ping discovered dyn-eid hosts on this interface periodically to determine host liveness

Command Mode

- /exec/configure/if-igp

lisp security

[no] lisp security [strong]

Syntax Description

no	(Optional) Negate a command or set its defaults
lisp	LISP global configuration commands
security	Configure LISP-SEC on ITR or PITR
strong	(Optional) Reject Map-Replies without LISP-SEC signatures included

Command Mode

- /exec/configure /exec/configure/vrf

lisp site

```
{ [ no ] lisp site <site-name> }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
lisp	LISP global configuration commands
site	Configures LISP sites in a map-server
<i>site-name</i>	Name your LISP site

Command Mode

- /exec/configure/vrf

lisp site

```
{ [ no ] lisp site <site-name> }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
lisp	LISP global configuration commands
site	Configures LISP sites in a map-server
<i>site-name</i>	Name your LISP site

Command Mode

- /exec/configure

lisp smr-locators

[no] lisp smr-locators

Syntax Description

no	(Optional) Negate a command or set its defaults
lisp	LISP global configuration commands
smr-locators	Send SMR to all RLOCs in locator-set for map-cache entry

Command Mode

- /exec/configure

lisp to

```
{ lisp-rig | rig } [ instance-id <iid> ] { <hostname> | { <eid> | <eid6> } } to { <ddt-hostname> | { <ddt> | <ddt6> } }
```

Syntax Description

<code>lisp-rig</code>	LISP-DDT Referral Internet Groper
<code>rig</code>	LISP-DDT Referral Internet Groper
<code>instance-id</code>	(Optional) Instance-ID of VPN EID resides in
<code>iid</code>	(Optional) 24-bit instance-ID value
<code>eid</code>	RIG on a IPv4 Endpoint ID (EID)
<code>hostname</code>	DNS name for Endpoint ID (EID)
<code>to</code>	Where to send the Map-Request
<code>ddt-hostname</code>	DNS name for DDT-node
<code>ddt</code>	DDT-node IPv4 address to send Map-Request to

Command Mode

- /exec

listobject-boolean not

listobject-boolean <obj-id> not

Syntax Description

listobject-boolean	Configure Object as member of tracking list
<i>obj-id</i>	Tracked object
not	Negate Up status

Command Mode

- /exec/configure/tr-list-bool

listobject-weight weight threshold-weight

listobject-weight { <obj-id> weight <weight-val> } | threshold-weight { weight-thresh { weightup <up-weight> [weightdown <down-weight>] | weightdown <down-weight> [weightup <up-weight>] } } | no threshold-weight weight-thresh

Syntax Description

no	Negate a command or set its defaults
listobject-weight	Configure Object as member of tracking list
<i>obj-id</i>	Tracked Object
weight	Assign a weight to object
<i>weight-val</i>	Assign a weight to object
threshold-weight	Threshold parameters
weight-thresh	Weight threshold
weightup	Up threshold
<i>up-weight</i>	Up threshold weight
weightdown	(Optional) Down threshold
<i>down-weight</i>	(Optional) Down threshold weight

Command Mode

- /exec/configure/tr-list-thrw

listobject

[no] listobject <obj-id>

Syntax Description

no	(Optional) Negate a command or set its defaults
listobject	Configure Object as member of tracking list
<i>obj-id</i>	Tracked Object

Command Mode

- /exec/configure/tr-list-thrw /exec/configure/tr-list-thrp /exec/configure/tr-list-bool

liveness-detection

[no] liveness-detection

Syntax Description

no	(Optional) Negate a command or set its defaults
liveness-detection	Configure color specific liveness detection related configurations

Command Mode

- /exec/configure/sr/te/pol

liveness-detection

[no] liveness-detection

Syntax Description

no	(Optional) Negate a command or set its defaults
liveness-detection	Configure Traffic Engineering Segment Routing liveness detection related configurations

Command Mode

- /exec/configure/sr/te

liveness-detection

[no] liveness-detection

Syntax Description

no	(Optional) Negate a command or set its defaults
liveness-detection	Configure color specific liveness detection related configurations

Command Mode

- /exec/configure/sr/te/color

lldp

```
[no] lldp { holdtime <i0> | reinit <i1> | timer <i2> | portid-subtype <i3> | tlv-select { management-address |
port-description | port-vlan | power-management | system-capabilities | system-description | system-name |
dcbxp | four-wire-power-management | port { max-framesize | vlan-name | link-aggregation } } | port-channel
| multi-neighbor | chassis-id switch }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
lldp	Configure global LLDP parameters
holdtime	Specify the holdtime (in sec) to be sent in packets
<i>i0</i>	holdtime in sec
reinit	Delay (in sec) for LLDP initialisation on any interface
<i>i1</i>	reinit in sec
timer	Specify the rate at which LLDP packets are sent (in sec)
<i>i2</i>	rate of packets in sec
portid-subtype	config portid subtype for LLDP TLV and SNMP MIBs
<i>i3</i>	0: long interface name (default), 1: short interface name
tlv-select	Selection of LLDP to send
management-address	Management Address TLV
port-description	Port Description TLV
port-vlan	Port Vlan ID TLV
power-management	IEEE 802.3 DTE Power via MDI TLV
system-capabilities	System Capabilities TLV
system-description	System Description TLV
system-name	System Name TLV
dcbxp	DCBXP TLVs
four-wire-power-management	Cisco 4-wire Power via MDI TLV
port	Organization specific port TLVs
max-framesize	Port Maximum Frame Size TLV
vlan-name	Port Vlan Name TLV

link-aggregation	Port Link Aggregation TLV
port-channel	Enable LLDP on Port-channel
multi-neighbor	Enable multiple LLDP neighbors per interface
chassis-id	Device ID to advertise (Default is MAC of the port)
switch	Advertise MAC of the switch

Command Mode

- /exec/configure

lldp dcbx version auto

lldp dcbx version auto

Syntax Description

lldp	Configure LLDP parameters
dcbx	Configure DCBX parameters
version	Change the DCBX protocol version
auto	Auto-detect the DCBX version

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-gig-ether-all /exec/configure/if-gig-ether /exec/configure/if-eth-base /exec/configure/if-mgmt-ether

lldp dcbx version cee

[no] lldp dcbx version { cee | ieee }

Syntax Description

no	(Optional) Negate a command or set its defaults
lldp	Configure LLDP parameters
dcbx	Configure DCBX parameters
version	Change the DCBX protocol version
cee	The CEE version of DCBX
ieee	The IEEE 802.1 version of DCBX

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-gig-ether-all /exec/configure/if-gig-ether /exec/configure/if-eth-base /exec/configure/if-mgmt-ether

lldp receive

[no] lldp receive

Syntax Description

no	(Optional) Negate a command or set its defaults
lldp	Configure Interface LLDP parameters
receive	Enable LLDP reception on interface

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-gig-ether-all /exec/configure/if-gig-ether /exec/configure/if-eth-base /exec/configure/if-mgmt-ether /exec/configure/if-vethernet /exec/configure/if-veth-any /exec/configure/if-veth-all /exec/configure/if-eth-port-channel /exec/configure/if-eth-port-channel-switch

lldp tlv-select dcbxp egress

[no] lldp tlv-select dcbxp { egress-queuing }

Syntax Description

no	(Optional) Negate a command or set its defaults
lldp	Configure global LLDP parameters
tlv-select	Selection of LLDP to send
dcbxp	DCBXP TLVs
egress-queuing	DCBXP TLV egress queuing

Command Mode

- /exec/configure

lldp tlv-select management-address v4

[no] lldp tlv-select management-address { v4 | v6 }

Syntax Description

no	(Optional) Negate a command or set its defaults
lldp	Configure global LLDP parameters
tlv-select	Selection of LLDP to send
management-address	Management Address TLV
v4	Management Address TLV v4
v6	Management Address TLV v6

Command Mode

- /exec/configure

lldp tlv-set management-address

[no] lldp tlv-set management-address <ip-addr>

Syntax Description

no	(Optional) Negate a command or set its defaults
lldp	Configure Interface LLDP parameters
tlv-set	LLDP TLV configuration for interface
management-address	Management address to be sent in management-tlv of LLDPDU.
<i>ip-addr</i>	IP address in dotted decimal format i.i.i.i

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-gig-ether-all /exec/configure/if-gig-ether /exec/configure/if-eth-base /exec/configure/if-mgmt-ether

lldp tlv-set management-address ipv6

[no] lldp tlv-set management-address <ipv6-addr> ipv6

Syntax Description

no	(Optional) Negate a command or set its defaults
lldp	Configure Interface LLDP parameters
tlv-set	LLDP TLV configuration for interface
management-address	Management address to be sent in management-tlv of LLDPDU.
ipv6	IPV6

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-gig-ether-all /exec/configure/if-gig-ether /exec/configure/if-eth-base /exec/configure/if-mgmt-ether

lldp tlv-set vlan

[no] lldp tlv-set vlan [<vlan-id>]

Syntax Description

no	(Optional) Negate a command or set its defaults
lldp	Configure Interface LLDP parameters
tlv-set	LLDP TLV configuration for interface
vlan	VLAN-id whose SVI IP address should be used as management address in management-tlv of LLDPDU. Default is native VLAN.
<i>vlan-id</i>	(Optional) vlan-id within range of 1-4094

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-gig-ether-all /exec/configure/if-gig-ether /exec/configure/if-eth-base /exec/configure/if-mgmt-ether

lldp transmit

[no] lldp transmit

Syntax Description

no	(Optional) Negate a command or set its defaults
lldp	Configure Interface LLDP parameters
transmit	Enable LLDP transmission on interface

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-gig-ether-all /exec/configure/if-gig-ether /exec/configure/if-eth-base /exec/configure/if-mgmt-ether /exec/configure/if-vethernet /exec/configure/if-veth-any /exec/configure/if-veth-all /exec/configure/if-eth-port-channel /exec/configure/if-eth-port-channel-switch

load-balance

[no] load-balance { { { method <lb-method> } | { buckets <buckets> } | { mask-position <mpos> } } + }

Syntax Description

no	(Optional) Negate a command or set its defaults
load-balance	Loadbalance options for this match
method	Loadbalance method
<i>lb-method</i>	Loadbalance method options
buckets	Buckets for traffic distribution - this should be in powers of 2
<i>buckets</i>	Loadbalance bucket count
mask-position	Loadbalance mask position
<i>mpos</i>	Loadbalance mask position number range 0-31 for IPv4 and 0-127 for IPv6

Command Mode

- /exec/configure/epbr-policy/action

load-balance

[no] load-balance { { { method <lb-method> } | { buckets <buckets> } | { mask-position <mpos> } } + }

Syntax Description

no	(Optional) Negate a command or set its defaults
load-balance	Loadbalance options for this match
method	Loadbalance method
<i>lb-method</i>	Loadbalance method options
buckets	Buckets for traffic distribution - this should be in powers of 2
<i>buckets</i>	Loadbalance bucket count
mask-position	Loadbalance mask position
<i>mpos</i>	Loadbalance mask position number range 0-31 for IPv4 and 0-127 for IPv6

Command Mode

- /exec/configure/epbr-sess-policy/action

load-balance

```
[no] load-balance { { method { src { ip | ip-l4port <src-protocol> range <src-x> <src-y> } | dst { ip-dst |
ip-l4port <dst-protocol> range <dst-x> <dst-y> } } | { buckets <num> } | { mask-position <mask> } | { least-bit
} } + }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
load-balance	ITD Loadbalance
method	ITD Loadbalance method
src	Source based parameters
dst	Destination based parameters
ip	IP
ip-l4port	IP and L4 port
<i>src-protocol</i>	Protocol
range	Match only packets in the range of port numbers
<i>src-x</i>	
<i>src-y</i>	
ip-dst	IP
<i>dst-protocol</i>	Protocol
<i>dst-x</i>	
<i>dst-y</i>	
buckets	Used to create the buckets for traffic distribution, and it should be in powers of 2
<i>num</i>	Loadbalance bucket number
mask-position	Loadbalance mask position
<i>mask</i>	Loadbalance mask position number range 0-31 for IPv4 and 0-127 for IPv6
least-bit	Craft load-balancing masks beginning at the least significant bits

Command Mode

- /exec/configure/itd

load-balance egress filter-policy route-map

[no] load-balance egress filter-policy route-map <rmap-name>

Syntax Description

no	(Optional) Negate a command or set its defaults
load-balance	Enable load-balance functionality applied to routes in the underlay
egress	Enable load-balance functionality during egress to routes in the underlay
filter-policy	Restricting the egress load-balance logic to specific routes matching the route-map
route-map	Apply route-map to filter the routes
<i>rmap-name</i>	Route-map name

Command Mode

- /exec/configure/router-bgp/router-bgp-af-ipv4 /exec/configure/router-bgp/router-bgp-af-ipv6

load-balance egress multipath auto-policy route-map

[no] load-balance egress multipath auto-policy route-map <rmap-name>

Syntax Description

no	(Optional) Negate a command or set its defaults
load-balance	Enable load-balancing functionality applied to routes in the underlay (default VRF)
egress	Enable load-balance functionality during egress to routes in the underlay
multipath	Apply multipath rules to specific routes
auto-policy	Apply auto multipath rules to specific routes
route-map	Apply route-map auto multipath rules to specific routes
<i>rmap-name</i>	Route-map name

Command Mode

- /exec/configure/router-bgp/router-bgp-af-ipv4 /exec/configure/router-bgp/router-bgp-af-ipv6

load-balance method

[no] load-balance method <lb-method>

Syntax Description

no	(Optional) Negate a command or set its defaults
load-balance	Loadbalance options for this match
method	Loadbalance method
<i>lb-method</i>	Loadbalance method options

Command Mode

- /exec/configure/config-epbr-svc-chain /exec/configure/config-epbr-svc-chain/seq

load-interval

load-interval <interval> | no load-interval [<interval1>]

Syntax Description

no	Negate a command or set its defaults
load-interval	Specify interval for load calculation for an interface
<i>interval</i>	Load interval delay in seconds
<i>intervall</i>	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-non-member /exec/configure/if-port-channel

load-interval

load-interval <interval> | no load-interval [<interval1>]

Syntax Description

no	Negate a command or set its defaults
load-interval	Specify interval for load calculation for an interface
<i>interval</i>	Load interval delay in seconds
<i>interval1</i>	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED

Command Mode

- /exec/configure/if-vlan-common

load-interval counter

load-interval counter <counter_val> <interval> | no load-interval counter <counter_val> [<interval1>]

Syntax Description

no	Negate a command or set its defaults
load-interval	Specify interval for load calculation for an interface
counter	Specify counter for this load interval
<i>interval</i>	Load interval delay in seconds
<i>counter_val</i>	Specify counter for this load interval
<i>interval1</i>	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED

Command Mode

- /exec/configure/if-vlan-common

load-interval counter

load-interval counter <counter_val> <interval> | no load-interval counter <counter_val> [<interval1>]

Syntax Description

no	Negate a command or set its defaults
load-interval	Specify interval for load calculation for an interface
counter	Specify counter for this load interval
<i>counter_val</i>	Specify counter for this load interval
<i>interval</i>	Load interval delay in seconds
<i>interval1</i>	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-non-member /exec/configure/if-port-channel

load

load <uri0>

Syntax Description

load	Load system image
<i>uri0</i>	Enter image URI

Command Mode

- /exec

load

load <uri0> [<s0>]

Syntax Description

load	Load system image
<i>uri0</i>	Enter image URI
<i>s0</i>	(Optional) Options

Command Mode

- /exec

load

load <uri0> [<s0>]

Syntax Description

load	Load system image
<i>uri0</i>	Enter image URI
<i>s0</i>	(Optional) Options

Command Mode

- /exec

load configuration failed commit

load configuration failed commit

Syntax Description

load	Load the configuration
configuration	Contents of configuration
failed	Load failed configuration
commit	Failed configuration from last commit

Command Mode

- /exec/configure

local-as

local-as <asn> | no local-as [<asn>]

Syntax Description

no	Negate a command or set its defaults
local-as	Specify the local-as for this vrf
<i>asn</i>	AS number

Command Mode

- /exec/configure/router-bgp/router-bgp-vrf

local-as

```
{ local-as <asn> [ no-prepend [ replace-as [ dual-as ] ] ] } | { { no | default } local-as [ <asn> ] }
```

Syntax Description

no	Negate a command or set its defaults
default	Inherit values from a peer template
local-as	Specify the local-as number for the eBGP neighbor
<i>asn</i>	Autonomous System Number
no-prepend	(Optional) Do not prepend the local-as number to updates from the eBGP neighbor
replace-as	(Optional) Prepend only the local-as number to updates to eBGP neighbor
dual-as	(Optional) Connect using either the local-as number or the real as

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor-sess

local-label prefix

```
[no] { [ vrf { <vrf-name> | <vrf-known-name> } ] local-label <static-inlabel> prefix { <ipv6-prefix-mask> } }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
vrf	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED
<i>vrf-name</i>	(Optional) VRF name
<i>vrf-known-name</i>	(Optional) Known VRF name
local-label	Configure local label assignment and forwarding
<i>static-inlabel</i>	Label Value
prefix	For a given prefix

Command Mode

- /exec/configure/mpls_static/ipv6

local-label prefix

```
[no] { [ vrf { <vrf-name> | <vrf-known-name> } ] local-label <static-inlabel> prefix { <prefix> <mask> | <prefix-mask> } }
```

Syntax Description

<code>no</code>	(Optional) Negate a command or set its defaults
<code>vrf</code>	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED
<i>vrf-name</i>	(Optional) VRF name
<i>vrf-known-name</i>	(Optional) Known VRF name
<code>local-label</code>	Configure local label assignment and forwarding
<i>static-inlabel</i>	Label Value
<code>prefix</code>	For a given prefix
<i>prefix</i>	Destination prefix
<i>mask</i>	Destination prefix mask
<i>prefix-mask</i>	Destination prefix/mask

Command Mode

- /exec/configure/mpls_static/ipv4

locator-led

[no] locator-led { chassis | module <module> | fan <fan_num> | powersupply <psnum> }

Syntax Description

no	(Optional) Negate a command or set its defaults
locator-led	blink locator led on device
chassis	blink chassis led
module	blink module led
<i>module</i>	please enter the module number
fan	blink Fan led
<i>fan_num</i>	fan number
powersupply	blink powersupply led
<i>psnum</i>	powersupply number

Command Mode

- /exec

locator

[no] locator <locator-name>

Syntax Description

no	(Optional) Negate a command or set its defaults
locator	Configure SRv6 locator name
<i>locator-name</i>	Locator name to advertise

Command Mode

- /exec/configure/router-isis/router-isis-af-ipv6/srv6

locator

[no] locator <name>

Syntax Description

no	(Optional) Negate a command or set its defaults
locator	Configure an SRv6 locator for this node
<i>name</i>	Name for the locator

Command Mode

- /exec/configure/sr/srv6/locators

locator

[no] locator <locator-name>

Syntax Description

no	(Optional) Negate a command or set its defaults
locator	Specify the locator
<i>locator-name</i>	Locator name

Command Mode

- /exec/configure/router-bgp/router-bgp-srv6

locator

[no] locator <locator-name>

Syntax Description

no	(Optional) Negate a command or set its defaults
locator	Configure Traffic Engineering Segment Routing V6 locator
<i>locator-name</i>	Configure locator name

Command Mode

- /exec/configure/sr/te/sr/srv6/locs

locators

[no] locators

Syntax Description

no	(Optional) Negate a command or set its defaults
locators	Configure Traffic Engineering Segment Routing V6 locator configurations

Command Mode

- /exec/configure/sr/te/sr/srv6

locators

[no] locators

Syntax Description

no	(Optional) Negate a command or set its defaults
locators	Base to configure SRv6 locators

Command Mode

- /exec/configure/sr/srv6

lockdown

[no] lockdown

Syntax Description

no	(Optional) Negate a command or set its defaults
lockdown	Disable re-optimization of the path preferences for policies using this color template

Command Mode

- /exec/configure/sr/te/color

lockdown

[no] lockdown

Syntax Description

no	(Optional) Negate a command or set its defaults
lockdown	Disable re-optimization of the path preferences for this policy

Command Mode

- /exec/configure/sr/te/pol

log-adjacency-changes

[no] log-adjacency-changes

Syntax Description

no	(Optional) Negate a command or set its defaults
log-adjacency-changes	Log changes in adjacency state

Command Mode

- /exec/configure/l2mp-isis/l2mp-isis-vrf-common

log-adjacency-changes

[no] log-adjacency-changes

Syntax Description

no	(Optional) Negate a command or set its defaults
log-adjacency-changes	Log changes in adjacency state

Command Mode

- /exec/configure/router-isis/router-isis-vrf-common

log-adjacency-changes

[no] log-adjacency-changes [detail]

Syntax Description

no	(Optional) Negate a command or set its defaults
log-adjacency-changes	Log changes in adjacency state
detail	(Optional) Notify all state changes

Command Mode

- /exec/configure/router-ospf3 /exec/configure/router-ospf3/vrf

log-adjacency-changes

[no] log-adjacency-changes [detail]

Syntax Description

no	(Optional) Negate a command or set its defaults
log-adjacency-changes	Log changes in adjacency state
detail	(Optional) Notify all state changes

Command Mode

- /exec/configure/router-ospf /exec/configure/router-ospf/vrf

log-adjacency-changes

[no] log-adjacency-changes

Syntax Description

no	(Optional) Negate a command or set its defaults
log-adjacency-changes	Log changes in adjacency state

Command Mode

- /exec/configure/otv-isis/otv-isis-vrf-common

log-neighbor-changes

[no | default] log-neighbor-changes [disable]

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
log-neighbor-changes	Log message for neighbor up/down event
disable	(Optional) Disable logging of neighbor up/down event

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor-sess

log-neighbor-changes

[no] log-neighbor-changes

Syntax Description

no	(Optional) Negate a command or set its defaults
log-neighbor-changes	Log a message for neighbor up/down event

Command Mode

- /exec/configure/router-bgp/vrf-cmds

log-neighbor-warnings

```
{ { [ eigrp ] log-neighbor-warnings [ <interval> ] } | { no [ eigrp ] log-neighbor-warnings [ <interval> ] } }
```

Syntax Description

no	Negate a command or set its defaults
eigrp	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED
log-neighbor-warnings	Enable/Disable IP-EIGRP neighbor warnings
<i>interval</i>	(Optional) Neighbor warning interval in seconds

Command Mode

- /exec/configure/router-eigrp/router-eigrp-vrf-common /exec/configure/router-eigrp/router-eigrp-af-common

logging

[no] logging { neighbor-changes |

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Enable LDP logging
neighbor-changes	Log LDP neighbor state changes

Command Mode

- /exec/configure/ldp

logging abort

logging abort

Syntax Description

logging	Modify message logging facilities
abort	Flushes cached data without committing and releases the lock

Command Mode

- /exec/configure

logging console

[no] logging console [<i0>]

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
console	Set console logging
<i>i0</i>	(Optional) 0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging distribute

[no] logging distribute

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
distribute	Enables/disables fabric distribution using cfs.

Command Mode

- /exec/configure

logging drop threshold

[no] logging drop { threshold-packets <threshold-in-packets> | threshold-bytes <threshold-in-bytes> } [level <level-value>]

Syntax Description

no	Negate a command or set its defaults
logging	set logging for copp class
drop	logging for copp drops
threshold-packets	threshold value for dropped packets
threshold-bytes	threshold value for dropped bytes
level	(Optional) syslog level
<i>level-value</i>	(Optional) specify the logging level between 1-7

Command Mode

- /exec/configure/pmap/class

logging drop threshold

logging drop { threshold-packets <threshold-in-packets> | threshold-bytes <threshold-in-bytes> } [level <level-value>]

Syntax Description

logging	set logging for copp class
drop	logging for copp drops
threshold-packets	threshold value for dropped packets
threshold-bytes	threshold value for dropped bytes
level	(Optional) syslog level
<i>level-value</i>	(Optional) specify the logging level between 1-7

Command Mode

- /exec/configure/pmap/class

logging event link enable

[no] logging event { link-status | trunk-status } { enable | default }

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Configure logging for interface
event	Interface events
link-status	UPDOWN and CHANGE messages
trunk-status	TRUNK status messages
enable	To enable logging overriding port level configuration
default	default logging configuration used by interfaces not explicitly configured

Command Mode

- /exec/configure

logging event port link-status

logging event port link-status [default] | no logging event port link-status

Syntax Description

no	Negate a command or set its defaults
logging	Configure logging for interface
event	Interface events
port	Port level events
link-status	UPDOWN and CHANGE messages
default	(Optional) Use the global default value

Command Mode

- /exec/configure/if-loopback

logging event port link-status

logging event port link-status

Syntax Description

logging	Configure logging for interface
event	Interface events
port	Port level events
link-status	UPDOWN and CHANGE messages

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-base /exec/configure/if-port-channel /exec/configure/if-ether-sub /exec/configure/if-port-channel-sub /exec/configure/if-ether-sub-switch /exec/configure/if-port-channel-sub-switch /exec/configure/if-remote-ethernet-sub /exec/configure/if-ether-sub-p2p

logging event port link-status

[no] logging event port link-status

Syntax Description

no	Negate a command or set its defaults
logging	Configure logging for interface
event	Interface events
port	Port level events
link-status	UPDOWN and CHANGE messages

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-base /exec/configure/if-port-channel /exec/configure/if-ether-sub /exec/configure/if-port-channel-sub /exec/configure/if-ether-sub-switch /exec/configure/if-port-channel-sub-switch /exec/configure/if-remote-ethernet-sub /exec/configure/if-ether-sub-p2p

logging event port link-status default

logging event port link-status default

Syntax Description

logging	Configure logging for interface
event	Interface events
port	Port level events
link-status	UPDOWN and CHANGE messages
default	Use the global default value

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-base /exec/configure/if-port-channel /exec/configure/if-ether-sub /exec/configure/if-port-channel-sub /exec/configure/if-ether-sub-switch /exec/configure/if-port-channel-sub-switch /exec/configure/if-remote-ethernet-sub /exec/configure/if-ether-sub-p2p

logging event port trunk-status

[no] logging event port trunk-status

Syntax Description

no	Negate a command or set its defaults
logging	Configure logging for interface
event	Interface events
port	Port level events
trunk-status	TRUNK status messages

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-base /exec/configure/if-port-channel

logging event port trunk-status

logging event port trunk-status

Syntax Description

logging	Configure logging for interface
event	Interface events
port	Port level events
trunk-status	TRUNK status messages

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-base /exec/configure/if-port-channel

logging event port trunk-status default

logging event port trunk-status default

Syntax Description

logging	Configure logging for interface
event	Interface events
port	Port level events
trunk-status	TRUNK status messages
default	Use the global default value

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-base /exec/configure/if-port-channel

logging history

{ logging history { <i0> | size <i1> } | no logging history [size] }

Syntax Description

no	Negate a command or set its defaults
logging	Modify message logging facilities
history	Modifies severity level or size for history table
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug
size	Modifies history table size
<i>i1</i>	Enter history table size

Command Mode

- /exec/configure

logging level

```
{ logging level { auth <i1> | authpriv <i2> | cron <i3> | daemon <i4> | ftp <i5> | kernel <i6> | local0 <i7> |
local1 <i8> | local2 <i9> | local3 <i10> | local4 <i11> | local5 <i12> | local6 <i13> | local7 <i14> | lpr <i15>
| mail <i16> | news <i17> | syslog <i18> | user <i19> | uucp <i20> } | no logging level { auth [ <i1> ] | authpriv
[ <i2> ] | cron [ <i3> ] | daemon [ <i4> ] | ftp [ <i5> ] | kernel [ <i6> ] | local0 [ <i7> ] | local1 [ <i8> ] | local2
[ <i9> ] | local3 [ <i10> ] | local4 [ <i11> ] | local5 [ <i12> ] | local6 [ <i13> ] | local7 [ <i14> ] | lpr [ <i15>
] | mail [ <i16> ] | news [ <i17> ] | syslog [ <i18> ] | user [ <i19> ] | uucp [ <i20> ] } }
```

Syntax Description

no	Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
auth	Set level for Authorization System
<i>i1</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug
authpriv	Set level for Authorization (Private) system
<i>i2</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug
cron	Set level for Cron/at facility
<i>i3</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug
daemon	Set level for System daemons
<i>i4</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug
ftp	Set level for File Transfer System
<i>i5</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug
kernel	Set level for kernel
<i>i6</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug
local0	Set level for Local use daemons
<i>i7</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug
local1	Set level for Local use daemons
<i>i8</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug
local2	Set level for Local use daemons
<i>i9</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug
local3	Set level for Local use daemons

<i>i10</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug
local4	Set level for Local use daemons
<i>i11</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug
local5	Set level for Local use daemons
<i>i12</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug
local6	Set level for Local use daemons
<i>i13</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug
local7	Set level for Local use daemons
<i>i14</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug
lpr	Set level for Line Printer System
<i>i15</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug
mail	Set level for Mail system
<i>i16</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug
news	Set level for USENET news
<i>i17</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug
syslog	Set level for Internal Syslog Messages
<i>i18</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug
user	Set level for User Process
<i>i19</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug
uucp	Set level for Unix-to-Unix copy system
<i>i20</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level

[no] logging level { { routing ipv6 multicast } | m6rib } <level>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
routing	Configure routing information
ipv6	Display IPv6 information
multicast	Set syslog filter level for M6RIB
m6rib	Set syslog filter level for M6RIB
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level

[no] logging level { { routing [ip | ipv4] multicast } | mrib } <level>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
routing	Configure routing information
ip	(Optional) Configure IP features
ipv4	(Optional) Configure IP features
multicast	Set syslog filter level for MRIB
mrib	Set syslog filter level for MRIB
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level

[no] logging level { xml server | xmlma } <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
xml	xml agent
server	xml agent server
xmlma	xml master agent. Same as combination of keywords xml server
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level aaa

logging level aaa <i0> | no logging level aaa [<i0>]

Syntax Description

no	Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
aaa	Set level for aaa syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level acl

[no] logging level acl <*i0*>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
acl	Set syslog filter level for acl manager
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level aclmgr

[no] logging level aclmgr <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
aclmgr	Set level for aclmgr syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level adbm

[no] logging level adbm <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
adbm	Set level for adbm syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level adjmgr

[no] logging level adjmgr <level>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
adjmgr	Set syslog filter level for Adjacency Manager
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level all

{ logging level { all <i0> } | no logging level { all [<i0>] } }

Syntax Description

no	Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
all	Set level for all facilities
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level amt

[no] logging level amt <level>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
amt	Set syslog filter level for AMT
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level app-hosting

[no] logging level app-hosting <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
app-hosting	Set level for app-hosting syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level arp

```
{ logging level arp <level> } | { no logging level arp [ <level> ] }
```

Syntax Description

no	Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
arp	Set syslog filter level for ARP
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level ascii-cfg

[no] logging level ascii-cfg <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
ascii-cfg	Set logging level for ascii-cfg
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level assoc_mgr

[no] logging level assoc_mgr <i0> | no logging level assoc_mgr [<i0>]

Syntax Description

no	(Optional) Negate a command or set its default
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
assoc_mgr	Show Association Manager Logging Configuration
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level backup

[no] logging level { backup | flexlink } <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
backup	Set level for Switchport Backup syslog messages
flexlink	Set level for Switchport Backup syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level bfd

[no] logging level bfd <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
bfd	Set level for bfd syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level bgp

[no] logging level bgp <level>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
bgp	Set syslog filter level for BGP
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level bloggerd

[no] logging level bloggerd <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
bloggerd	Set level for BloggerD syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level bootvar

[no] logging level bootvar <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
bootvar	Set level for bootvar
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level callhome

logging level callhome <i0> | no logging level callhome [<i0>]

Syntax Description

no	Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
callhome	Callhome syslog level
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level capability

[no] logging level capability <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
capability	Set syslog level for mig utils daemon
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level cdp

logging level cdp <i0> | no logging level cdp [<i0>]

Syntax Description

no	Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
cdp	Set level for CDP syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level cfs

[no] logging level cfs <*i0*>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level clis

[no] logging level clis <level>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
clis	Set syslog filter level for CLIS
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level clk_mgr

[no] logging level clk_mgr <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
clk_mgr	Set level for clock manager syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level confcheck

```
{ logging level confcheck <i0> | no logging level confcheck [ <i0> ] }
```

Syntax Description

no	Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level copp

logging level copp <i0> | no logging level copp [<i0>]

Syntax Description

no	Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
copp	Set level for copp syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level core-dmon

```
{ logging level core-dmon <i0> | no logging level core-dmon [ <i0> ] }
```

Syntax Description

no	Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
core-dmon	core daemon syslog level
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level cryptopqc

logging level cryptopqc <i0> | no logging level cryptopqc [<i0>]

Syntax Description

no	Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
cryptopqc	Set level for cryptopqc syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level cts

[no] logging level cts <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
cts	Set level for cts syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level device-alias

[no] logging level device-alias <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
device-alias	Set syslog level for Device Alias Distribution Service
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level dhclient

[no] logging level dhclient <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
dhclient	Set level for dhcp client syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level dhcp_snoop

logging level dhcp_snoop <level> | no logging level dhcp_snoop [<level>]

Syntax Description

no	Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
dhcp_snoop	Set level for dhcp snoop syslog messages
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level diagclient

[no] logging level diagclient <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
diagclient	Set level for GOLD DiagClient syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level diagmgr

[no] logging level diagmgr <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
diagmgr	Set level for GOLD DiagMgr syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level dot1x

logging level dot1x <i0> | no logging level dot1x [<i0>]

Syntax Description

no	Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
dot1x	Set level for dot1x syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level dpvm

[no] logging level dpvm <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
dpvm	Set syslog level for DPVM
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level ecp

[no] logging level ecp <level>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
ecp	Set syslog filter level for ECP
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level eigrp

[no] logging level eigrp [<eigrp-ptag>] <level>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
eigrp	Set syslog filter level for EIGRP
<i>eigrp-ptag</i>	(Optional) Process tag
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level eltm

logging level eltm <i0> | no logging level eltm

Syntax Description

no	Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
eltm	Set level for eltm syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level epbr

[no] logging level epbr <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
epbr	Set level for epbr syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level epp

[no] logging level epp <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
epp	Set level for EPP syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level ethpm

[no] logging level ethpm <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
ethpm	Set level for ethpm syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level ethpm link

[no] logging level ethpm { link-up | link-down } <level>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
ethpm	Set level for ethpm syslog messages
link-up	Configure logging level for link up syslog messages
link-down	Configure logging level for link down syslog messages
<i>level</i>	Logging Level

Command Mode

- /exec/configure

logging level evb

[no] logging level evb <level>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
evb	Set syslog filter level for EVB
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level evmc

[no] logging level evmc <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
evmc	Set level for evmc syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level evmed

[no] logging level evmed <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
evmed	Set level for evmed syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level evms

[no] logging level evms <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
evms	Set level for evms syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level fabric forwarding

[no] logging level fabric forwarding <level>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
fabric	Fabric
forwarding	Fabric Forwarding Protocol: Host Mobility Manager (HMM)
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level fabricpath switch-id

[no] logging level fabricpath switch-id <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
fabricpath	fabricpath configuration
switch-id	switch-id submodule of fabricpath
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level fc2d

[no] logging level fc2d <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
fc2d	Set level for fc2d syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level fcdomain

[no] logging level fcdomain <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
fcdomain	set level for fcdomain syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level fcns

[no] logging level fcns <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
fcns	Set syslog filter level for name server
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level fcoe_mgr

[no] logging level fcoe_mgr <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
fcoe_mgr	Set level for fcoe_mgr syslog messages
i0	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level fcs

[no] logging level fcs <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level fdmi

[no] logging level fdmi <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
fdmi	Set logging level for fdmi
<i>i0</i>	0:emer 1:alert 2:crit 3:errs 4:warn 5:notifi 6:info 7:debug

Command Mode

- /exec/configure

logging level feature-mgr

{ logging level feature-mgr <i0> | no logging level feature-mgr [<i0>] }

Syntax Description

no	Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
feature-mgr	Set feature manager syslog level
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level flogi

[no] logging level flogi <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
flogi	Configure level for flogi syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level fs-daemon

[no] logging level fs-daemon <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
fs-daemon	fs daemon syslog level
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level fspf

[no] logging level fspf <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level fsync_mgr

[no] logging level fsync_mgr <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
fsync_mgr	Frequency Synchronization Manager
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level gpixm

[no] logging level gpixm <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
gpixm	Set level for global-pixm syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level hardware-telemetry

[no] logging level hardware-telemetry <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
hardware-telemetry	Set level for hardware-telemetry syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level hsrp

[no] logging level hsrp <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
hsrp	Set level for hsrp syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level igmp

[no] logging level [ip] igmp <level>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
ip	(Optional) Configure IP features
igmp	IGMP global configuration commands
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level imp

[no] logging level imp <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
imp	Set level for imp syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level interface-vlan

[no] logging level interface-vlan <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
interface-vlan	Set level for interface vlan syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level ip pim

[no] logging level ip pim <level>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
ip	Configure IP features
pim	Set syslog filter level for PIM
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level ip sla responder

[no] logging level ip sla responder <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
ip	
sla	Service Level Agreement (SLA)
responder	Set level for sla-responder syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level ip sla sender

[no] logging level ip sla sender <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
ip	
sla	Service Level Agreement (SLA)
sender	Set level for sla-sender syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level ip sla twamp-server

[no] logging level ip sla twamp-server <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
ip	
sla	Service Level Agreement (SLA)
twamp-server	Set level for sla-twamp-server syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level ipconf

[no] logging level ipconf { ipv6 <i0> | <i1> }

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
ipconf	Set level for ipconf syslog messages
ipv6	Set level for ipconf syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug
<i>i1</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level ipfib

logging level ipfib <i0> | no logging level ipfib

Syntax Description

no	Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
ipfib	Set level for ipfib syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level ipqos

[no] logging level { ipqos | IPQOSMGR } <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level ipv6 mld

[no] logging level ipv6 mld <level>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
ipv6	Configure IPv6 features
mld	MLD global configuration commands
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level ipv6 pim

[no] logging level ipv6 pim <level>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
ipv6	Configure IPv6 features
pim	Set syslog filter level for PIM6
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level iscm

[no] logging level iscm <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
iscm	Set level for iscm syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level iscm

[no] logging level iscm <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
iscm	Set level for iscm syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level isis

[no] logging level isis <level>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
isis	Set syslog filter level for IS-IS
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level l2fm

logging level l2fm <i0> | no logging level l2fm

Syntax Description

no	Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
l2fm	Set level for l2fm syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level l2rib

[no] logging level l2rib <level>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
l2rib	l2rib syslog
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level l3vm

[no] logging level l3vm <level>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
l3vm	Set syslog filter level for L3VM
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level lacp

[no] logging level lacp <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
lacp	Set level for lacp syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level ldap

logging level ldap <i0> | no logging level ldap [<i0>]

Syntax Description

no	Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
ldap	Set level for ldap syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level lem-mgr

[no] logging level lem-mgr <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level lim

[no] logging level lim <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
lim	Set level for lim syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level lisp

[no] logging level lisp <level>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
lisp	Set logging level for LISP
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level lldp

[no] logging level lldp <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
lldp	Set level for lldp syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level m2rib

[no] logging level m2rib <*i0*>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
m2rib	Set level for m2rib syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level mfdm

logging level mfdm <i0> | no logging level mfdm

Syntax Description

no	Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
mfdm	Set level for mfdm syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level mfwd

[no] logging level { mfwd | mcastfwd } <level>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
mfwd	Configures Global IP Multicast Forwarding
mcastfwd	Configures Global IP Multicast Forwarding
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level mfwdv6

[no] logging level { mfwdv6 | mcastfwdv6 } <level>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
mfwdv6	Configures Global IPv6 Multicast Forwarding
mcastfwdv6	Configures Global IPv6 Multicast Forwarding
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level mmode

[no] logging level mmode <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
mmode	Set level for maintenance mode syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level module

[no] logging level module <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
module	Set level for module(linecard) manager syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level monitor

[no] logging level monitor <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
monitor	Set level for ethernet span syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level mpls manager

[no] logging level mpls manager <level>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
mpls	Set level for MPLS syslog messages
manager	Set level for MPLS manager syslog messages
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level mpls static

[no] logging level mpls static <level>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
mpls	Set level for MPLS syslog messages
static	Set level for MPLS Static syslog messages
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level mpls switching

[no] logging level mpls switching <level>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
mpls	Set level for MPLS syslog messages
switching	Set level for mpls switching syslog messages
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level msdp

[no] logging level [ip] msdp <level>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
ip	(Optional) Configure IP features
msdp	Set syslog filter level for MSDP
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level mvsh

[no] logging level mvsh <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
mvsh	Set level for mvsh syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level nat

logging level nat <i0> | no logging level nat [<i0>]

Syntax Description

no	Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
nat	Set level for NAT syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level nbm

logging level nbm <i0> | no logging level nbm

Syntax Description

no	Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
nbm	Set level for nbm syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure /exec/configure/nbm-vrf

logging level netstack

{ logging level netstack <level> } | { no logging level netstack [<level>] }

Syntax Description

no	Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
netstack	Set syslog filter level for Netstack
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level nfm

[no] logging level nfm <level>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
nfm	Set level for nfm syslog messages
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level nfm

[no] logging level nfm <level>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
nfm	Set level for nfm syslog messages
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level ngmvpn

[no] logging level ngmvpn <level>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
ngmvpn	Set syslog filter level for NGMVPN
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level ngoam

[no] logging level ngoam <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
ngoam	Set level for oam logging messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level npv

[no] logging level npv <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
npv	Set level for NPV syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level ntp

[no] logging level ntp <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
ntp	Set syslog filter level for NTP
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level nve

[no] logging level nve <inp>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
nve	Display NVE information
<i>inp</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level nxsdk

[no] logging level nxsdk <level>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
nxsdk	NXOS SDK
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level ofm

logging level ofm <i0> | no logging level ofm [<i0>]

Syntax Description

no	Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
ofm	Set level for ofm syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level ospf

[no] logging level ospf <level>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
ospf	Set syslog filter level for OSPF
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level ospfv3

[no] logging level ospfv3 <level>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
ospfv3	Set syslog filter level for OSPFv3
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level pfstat

logging level pfstat <i0> | no logging level pfstat

Syntax Description

no	Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
pfstat	Set level for pfstat syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level pixm

[no] logging level pixm <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
pixm	Set level for vdc-local-pixm syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level pktmgr

[no] logging level pktmgr <level>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
pktmgr	Set syslog filter level for Packet manager
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level platform

[no] logging level platform <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
platform	platform manager syslog level
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level plcmgr

[no] logging level { plcmgr | ipplc } <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level pltfm_config

[no] logging level pltfm_config <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
pltfm_config	Set level for pltfm_config syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level pltm

[no] logging level pltm <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
pltm	Set level for pltm syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level plugin

{ logging level plugin <i0> | no logging level plugin [<i0>] }

Syntax Description

no	Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
plugin	Set level for plugin syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level poed

[no] logging level poed <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
poed	Show PoE Daemon Logging Configuration
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level port-profile

logging level port-profile <i0> | no logging level port-profile [<i0>]

Syntax Description

no	Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
port-profile	Set level for port-profile syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level port-resources

[no] logging level port-resources <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
port-resources	Set level for prn syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level port-security

logging level port-security <i0> | no logging level port-security [<i0>]

Syntax Description

no	Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
port-security	Set level for port-security syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level port

[no] logging level port <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
port	Set level for port syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level port link-failure

[no] logging level port link-failure <level>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
port	Set level for port syslog messages
link-failure	Configure logging level for link failure syslog messages
<i>level</i>	Logging Level

Command Mode

- /exec/configure

logging level private-vlan

[no] logging level private-vlan <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
private-vlan	Set level for private VLAN syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level ptp

[no] logging level ptp <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
ptp	Set level for ptp syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level radius

logging level radius <i0> | no logging level radius [<i0>]

Syntax Description

no	Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
radius	RADIUS syslog level
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level rdl

[no] logging level rdl <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
rdl	Set logging level for RDL
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level res_mgr

[no] logging level res_mgr <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
res_mgr	Set level for res_mgr syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level rib

[no] logging level rib <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
rib	Set level for rib
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level rip

[no] logging level rip <level>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
rip	Set syslog filter level for RIP
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level rpm

[no] logging level rpm <level>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
rpm	Set syslog filter level for RPM
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level rscn

{ logging level rscn <i0> | no logging level rscn [<i1>] }

Syntax Description

no	Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug
<i>i1</i>	(Optional) 0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level sal

[no] logging level sal <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
sal	Set level for sal syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level scheduler

[no] logging level scheduler <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
scheduler	Set logging level for scheduler
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level scsi-target

[no] logging level scsi-target <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
scsi-target	scsi target daemon syslog level
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level segment-routing

[no] logging level segment-routing <*i0*>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
segment-routing	Set level for SR syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level session-mgr

logging level session-mgr <i0> | no logging level session-mgr [<i0>]

Syntax Description

no	Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
session-mgr	Set level for session-manager syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level sflow

[no] logging level sflow <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
sflow	Set level for sFlow syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level smm

[no] logging level smm <level>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
smm	Set logging level for Shared Memory Manager
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level snmpd

[no] logging level snmpd <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
snmpd	Set level for SNMP syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level snmpmib_proc

[no] logging level snmpmib_proc <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
snmpmib_proc	Set level for snmpmib_proc syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level spanning

[no] logging level { spanning-tree } <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
spanning-tree	Set level for stp syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level spm

[no] logging level spm <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
spm	Set level for spm syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level stripcl

[no] logging level stripcl <log-level>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
stripcl	Set level for stripcl syslog messages
<i>log-level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level sync

[no] logging level sync <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
sync	Set level for sync syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level sysmgr

{ logging level sysmgr <i0> | no logging level sysmgr [<i0>] }

Syntax Description

no	Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level tacacs

logging level tacacs <i0> | no logging level tacacs [<i0>]

Syntax Description

no	Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
tacacs	TACACS+ syslog level
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level tamnw

[no] logging level tamnw <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
tamnw	Set level for tamnw syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level telemetry

[no] logging level telemetry <level>

Syntax Description

no	(Optional) Negate a command or set its default
logging	Modify message logging facilities
level	Facility parameter for syslog messages
telemetry	Set syslog filter level for telemetry
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level template_manager

[no] logging level template_manager <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
template_manager	Set level for template manager syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level tpmon

[no] logging level tpmon <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
tpmon	Set level for tpmon syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level track

[no] logging level track <i0>

Syntax Description

logging	Modify message logging facilities
level	Facility parameter for syslog messages
track	Set level for track syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level tunnel-encryption

[no] logging level tunnel-encryption <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
tunnel-encryption	Set level for tunnel encryption manager syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level tunnel

logging level tunnel <i0> | no logging level tunnel [<i0>]

Syntax Description

no	Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
tunnel	Set level for tunnel syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level u2rib

[no] logging level u2rib <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
u2rib	Set level for u2rib syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level u6rib

[no] logging level u6rib <level>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
u6rib	Set syslog filter level for U6RIB
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level udd

[no] logging level udd <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
udd	Set level for udd syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level ufdm

[no] logging level ufdm <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
ufdm	Set level for ufdm syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level urib

[no] logging level urib <level>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
urib	Set syslog filter level for URIB
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level vdc_mgr

[no] logging level vdc_mgr <i0>

Syntax Description

logging	Modify message logging facilities
level	Facility parameter for syslog messages
vdc_mgr	Set level for vdc_mgr syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level virtual-service

[no] logging level virtual-service <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
virtual-service	Set level for virtual service syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level vlan_mgr

logging level vlan_mgr <i0> | no logging level vlan_mgr [<i0>]

Syntax Description

no	Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
vlan_mgr	Set level for VLAN syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level vmm

[no] logging level vmm <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
vmm	Set level for vmm syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level vmtracker

[no] logging level vmtracker <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
vmtracker	Set level for vmtracker syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level vpc

[no] logging level vpc <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
vpc	Set level for vPC syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level vrrp

[no] logging level { vrrp-cfg <cfg_level_num> | vrrp-eng <eng_level_num> }

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
vrrp-cfg	Set level for vrrp configuration
<i>cfg_level_num</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug
vrrp-eng	Set level for vrrp engine
<i>eng_level_num</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level vrrpv3

[no] logging level { vrrpv3 <level> }

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
vrrpv3	Set level for vrrpv3 configuration
<i>level</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level vsan

{ logging level vsan <i0> | no logging level vsan [<i1>] }

Syntax Description

no	Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug
<i>i1</i>	(Optional) 0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level vshd

[no] logging level vshd <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level vtp

[no] logging level vtp <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
vtp	Set level for vtp syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level wwnm

[no] logging level wwnm <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
wwnm	Set WWN Manager syslog level
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level xbar

[no] logging level xbar <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
xbar	xbar syslog level
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging level zone

logging level zone <i0> | no logging level zone

Syntax Description

no	Negate a command or set its defaults
logging	Modify message logging facilities
level	Facility parameter for syslog messages
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging logfile

```
{ logging logfile <s0> <i0> [ size <i1> ] [ persistent threshold <i2> ] | no logging logfile [ <s0> <i0> [ size <i1> ] [ persistent threshold <i2> ] ] }
```

Syntax Description

no	Negate a command or set its defaults
logging	Modify message logging facilities
logfile	Set File logging
<i>s0</i>	Enter the logfile name
<i>i0</i>	0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug
size	(Optional) Set logfile size
<i>i1</i>	(Optional) Enter the logfile size in bytes
persistent	(Optional) Modify persistent logging
threshold	(Optional) Set persistent logging utilization alert threshold in percentage
<i>i2</i>	(Optional) Enter utilization alert threshold value in percentage

Command Mode

- /exec/configure

logging message interface type ethernet

logging message interface type ethernet <info> | no logging message interface type ethernet <info>

Syntax Description

no	Negate a command or set its defaults
logging	Configure logging for interface
message	Interface events
interface	Interface level events
type	Interface type
ethernet	Ethernet interfaces
<i>info</i>	Field Names to be added to interface syslog

Command Mode

- /exec/configure

logging module

[no] logging module [<i0>]

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
module	Set module(linecard) logging
<i>i0</i>	(Optional) 0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging monitor

[no] logging monitor [<i0>]

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
monitor	Set terminal line(monitor) logging level
<i>i0</i>	(Optional) 0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug

Command Mode

- /exec/configure

logging origin-id

```
[no] logging origin-id { hostname | ip <ip0> | string <s0> }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
origin-id	Enable origin information for Remote Syslog Server
hostname	Use hostname as origin-id of logging messages
ip	Use ip address as origin-id of logging messages
<i>ip0</i>	Hostname/IPv4/IPv6 address
string	Use text string as origin-id of logging messages
<i>s0</i>	Enter string to append to the front of syslog msgs

Command Mode

- /exec/configure

logging rate-limit

[no] logging rate-limit

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
rate-limit	Enables rate limit for log messages

Command Mode

- /exec/configure

logging rfc-strict 5424

[no] logging rfc-strict { 5424 [full] }

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
rfc-strict	Set RFC to which messages should compliant
5424	Syslogs will be compliant to RFC 5424
full	(Optional) Syslogs will be compliant to RFC 5424 fully

Command Mode

- /exec/configure

logging secure oosp strict

{ logging secure oosp strict | no logging secure oosp strict }

Syntax Description

no	Negate a command or set its defaults
logging	Logging configuration
secure	Enable secure connection to remote server
oosp	Online Certificate Status Protocol configuration
strict	Configure oosp in strict mode

Command Mode

- /exec/configure

logging server

```
[no] logging server <host0> [ [ <i1> ] [ port <port> ] [ secure [ trustpoint client-identity <trustpoint-label> ]
] [ use-vrf { <vrf-name> | <vrf-known-name> } | facility { auth | authpriv | cron | daemon | ftp | kernel | local0
| local1 | local2 | local3 | local4 | local5 | local6 | local7 | lpr | mail | news | syslog | user | uucp } ] + ]
```

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
server	Enable forwarding to Remote Syslog Server
<i>host0</i>	Hostname/IPv4/IPv6 address of the Remote Syslog Server
<i>i1</i>	(Optional) 0-emerg 1-alert 2-crit 3-err 4-warn 5-notif 6-inform 7-debug
port	(Optional) Destination Port when forwarding to remote server
<i>port</i>	(Optional) Range from 1 - 65535(Default 514)
secure	(Optional) Enable secure connection to remote server
trustpoint	(Optional) Trustpoint configuration
client-identity	(Optional) Client Identity certificate for mutual authentication
<i>trustpoint-label</i>	(Optional) trustpoint to use for client certificate authentication
use-vrf	(Optional) Display per-VRF information
<i>vrf-name</i>	(Optional) VRF name
<i>vrf-known-name</i>	(Optional) Known VRF name
facility	(Optional) Facility to use when forwarding to server
auth	(Optional) Use auth facility
authpriv	(Optional) Use authpriv facility
cron	(Optional) Use Cron/at facility
daemon	(Optional) Use daemon facility
ftp	(Optional) Use file transfer system facility
kernel	(Optional) Use kernel facility
local0	(Optional) Use local0 facility
local1	(Optional) Use local1 facility
local2	(Optional) Use local2 facility

local3	(Optional) Use local3 facility
local4	(Optional) Use local4 facility
local5	(Optional) Use local5 facility
local6	(Optional) Use local6 facility
local7	(Optional) Use local7 facility
lpr	(Optional) Use lpr facility
mail	(Optional) Use mail facility
news	(Optional) Use USENET news facility
syslog	(Optional) Use syslog facility
user	(Optional) Use user facility
uucp	(Optional) Use Unix-to-Unix copy system facility

Command Mode

- /exec/configure

logging server dns-refresh-interval

[no] logging server dns-refresh-interval <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
server	Enable forwarding to Remote Syslog Server
dns-refresh-interval	DNS refresh interval for remote syslog server hostnames
<i>i0</i>	Configure DNS Refresh interval from 10 minutes to 24 hours Default:60 (will cancel any existing timers)

Command Mode

- /exec/configure

logging source-interface

{ logging source-interface <interface> | no logging source-interface }

Syntax Description

no	Negate a command or set its defaults
logging	Modify message logging facilities
source-interface	Enable Source-Interface for Remote Syslog Server
<i>interface</i>	Source interface name

Command Mode

- /exec/configure

logging timestamp

[no] logging timestamp { microseconds | milliseconds | seconds }

Syntax Description

no	(Optional) Negate a command or set its defaults
logging	Modify message logging facilities
timestamp	Set logging timestamp granularity
microseconds	Timestamp in micro-seconds
milliseconds	Timestamp in milli-seconds
seconds	Timestamp in seconds (Default)

Command Mode

- /exec/configure

login on-failure log

[no] login on-failure log

Syntax Description

no	(Optional) Negate a command or set its defaults
login	login
on-failure	Set options for failed login attempt
log	Generate syslogs on failure logins

Command Mode

- /exec/configure

login on-success log

[no] login on-success log

Syntax Description

no	(Optional) Negate a command or set its defaults
login	login
on-success	Set options for successful login attempt
log	Generate syslogs on successful logins

Command Mode

- /exec/configure

logout-warning

{ logout-warning <i0> | no logout-warning [<i0>] }

Syntax Description

no	Negate a command or set its defaults
logout-warning	Configure logout warning
<i>i0</i>	Enter logout warning time in seconds

Command Mode

- /exec/configure/line

low-memory exempt

[no | default] low-memory exempt

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
low-memory	Behaviour
exempt	Do

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor-sess

Ishow

Ishow

Syntax Description

Ishow	display this instance of credential
-------	-------------------------------------

Command Mode

- /exec/configure/dot1x-cred

lsp-gen-interval

lsp-gen-interval <level> <max-wait> [<initial-wait> <second-wait>] | no lsp-gen-interval <level> <max-wait> [<initial-wait> <second-wait>]

Syntax Description

no	Negate a command or set its defaults
lsp-gen-interval	Configure LSP generation interval
<i>level</i>	IS-IS level
<i>max-wait</i>	Maximum wait between trigger and LSP generation (milli-secs)
<i>initial-wait</i>	(Optional) Initial wait between trigger and LSP generation (milli-secs)
<i>second-wait</i>	(Optional) Second wait used in LSP generation (milli-secs) during backoff

Command Mode

- /exec/configure/router-isis/router-isis-vrf-common

lsp-gen-interval

lsp-gen-interval <max-wait> [<initial-wait> <second-wait>] | no lsp-gen-interval <max-wait> [<initial-wait> <second-wait>]

Syntax Description

no	Negate a command or set its defaults
lsp-gen-interval	Configure LSP generation interval
<i>max-wait</i>	Maximum wait between trigger and LSP generation (milli-secs)
<i>initial-wait</i>	(Optional) Initial wait between trigger and LSP generation (milli-secs)
<i>second-wait</i>	(Optional) Second wait used in LSP generation (milli-secs) during backoff

Command Mode

- /exec/configure/otv-isis/otv-isis-vrf-common

lsp-gen-interval

lsp-gen-interval <max-wait> [<initial-wait> <second-wait>] | no lsp-gen-interval <max-wait> [<initial-wait> <second-wait>]

Syntax Description

no	Negate a command or set its defaults
lsp-gen-interval	Configure LSP generation interval
<i>max-wait</i>	Maximum wait between trigger and LSP generation (milli-secs)
<i>initial-wait</i>	(Optional) Initial wait between trigger and LSP generation (milli-secs)
<i>second-wait</i>	(Optional) Second wait used in LSP generation (milli-secs) during backoff

Command Mode

- /exec/configure/l2mp-isis/l2mp-isis-vrf-common

lsp-mtu

lsp-mtu <mtu> | no lsp-mtu [<mtu>]

Syntax Description

no	Negate a command or set its defaults
lsp-mtu	Set LSP MTU
<i>mtu</i>	Maximum LSP size in bytes

Command Mode

- /exec/configure/otv-isis/otv-isis-vrf-common

Isp-mtu

isp-mtu <mtu> | no isp-mtu [<mtu>]

Syntax Description

no	Negate a command or set its defaults
isp-mtu	Set LSP MTU
<i>mtu</i>	Maximum LSP size in bytes

Command Mode

- /exec/configure/router-isis/router-isis-vrf-common

lsp-mtu

lsp-mtu <mtu> | no lsp-mtu [<mtu>]

Syntax Description

no	Negate a command or set its defaults
lsp-mtu	Set LSP MTU
<i>mtu</i>	Maximum LSP size in bytes

Command Mode

- /exec/configure/l2mp-isis/l2mp-isis-vrf-common

lsp

[no] lsp <lsp-name>

Syntax Description

no	(Optional) Negate a command or set its defaults
lsp	Configure the name for the label-switched path
<i>lsp-name</i>	Name for this LSP

Command Mode

- /exec/configure/mpls_static/ipv6

lsp

[no] lsp <lsp-name>

Syntax Description

no	(Optional) Negate a command or set its defaults
lsp	Configure the name for the label-switched path
<i>lsp-name</i>	Name for this LSP

Command Mode

- /exec/configure/mpls_static/ipv4