



O Commands

- [oam-channel](#), on page 3
- [oam](#), on page 4
- [oam](#), on page 5
- [oam](#), on page 6
- [object-group ip address](#), on page 7
- [object-group ip port](#), on page 8
- [object-group ipv6 address](#), on page 9
- [object-group udp relay ip address](#), on page 10
- [object-track](#), on page 11
- [ocsp url](#), on page 12
- [ols](#), on page 13
- [ols](#), on page 14
- [ols com egress control](#), on page 15
- [ols com egress osri](#), on page 16
- [ols line egress safety-control](#), on page 17
- [on-demand color](#), on page 18
- [operation-packet-priority normal](#), on page 19
- [option exporter-stats timeout](#), on page 20
- [option interface-table timeout](#), on page 21
- [origin-as validate](#), on page 22
- [origin-as validate signal ibgp](#), on page 23
- [originate-map](#), on page 24
- [ospfv3 authentication disable ipsec spi md5 sha1 key-chain](#), on page 25
- [ospfv3 bfd](#), on page 26
- [ospfv3 cost](#), on page 27
- [ospfv3 dead-interval](#), on page 28
- [ospfv3 encryption disable ipsec spi esp 3des aes 128 authentication sha1](#), on page 29
- [ospfv3 event-history cli](#), on page 31
- [ospfv3 hello-interval](#), on page 32
- [ospfv3 instance](#), on page 33
- [ospfv3 mtu-ignore](#), on page 34
- [ospfv3 network broadcast](#), on page 35
- [ospfv3 network point-to-point](#), on page 36

- ospfv3 passive-interface, on page 37
- ospfv3 priority, on page 38
- ospfv3 retransmit-interval, on page 39
- ospfv3 shutdown, on page 40
- ospfv3 transmit-delay, on page 41
- other-config-flag, on page 42
- otv-isis, on page 43
- otv isis authentication-check, on page 44
- otv isis authentication-type cleartext, on page 45
- otv isis authentication key-chain, on page 46
- otv isis csnp-interval, on page 47
- otv isis hello-interval, on page 48
- otv isis hello-interval, on page 49
- otv isis hello-multiplier, on page 50
- otv isis hello-multiplier, on page 51
- otv isis hello-padding, on page 52
- otv isis lsp-interval, on page 53
- otv isis metric, on page 54
- otv isis priority, on page 55
- overlay-encapsulation, on page 56
- overwrite-vlan, on page 57
- owner, on page 58

oam-channel

{ oam-channel <val> } | { no oam-channel }

Syntax Description

oam-channel	oam-channel used
<i>val</i>	2 - nvo3 tissa

Command Mode

- /exec/configure/configngOAMprofile

oam

[no] oam

Syntax Description

no	(Optional) Negate a command or set its defaults
oam	Configure MPLS OAM traffic Engineering Segment Routing liveness detection configurations

Command Mode

- /exec/configure/sr/te/live-det/mpls

oam

[no] oam

Syntax Description

no	(Optional) Negate a command or set its defaults
oam	Configure MPLS OAM traffic Engineering Segment Routing liveness detection configurations

Command Mode

- /exec/configure/sr/te/color/live-det/mpls

oam

[no] oam

Syntax Description

no	(Optional) Negate a command or set its defaults
oam	Configure MPLS OAM traffic Engineering Segment Routing liveness detection configurations

Command Mode

- /exec/configure/sr/te/pol/live-det/mpls

object-group ip address

[no] object-group ip address <ip-obj-name>

Syntax Description

no	(Optional) Negate a command or set its defaults
object-group	Configure ACL object groups
ip	IP Object groups
address	Address object group
<i>ip-obj-name</i>	object-group name

Command Mode

- /exec/configure

object-group ip port

object-group ip port

[no] object-group ip port <port-obj-name>

Syntax Description

no	(Optional) Negate a command or set its defaults
object-group	Configure ACL object groups
ip	IP Object groups
port	IP port object group (can be used in IPv4 and IPv6 access-lists)
<i>port-obj-name</i>	object-group name

Command Mode

- /exec/configure

object-group ipv6 address

[no] object-group ipv6 address <ipv6-obj-name>

Syntax Description

no	(Optional) Negate a command or set its defaults
object-group	Configure ACL object groups
ipv6	IPv6 Object groups
address	Address object group
<i>ipv6-obj-name</i>	object-group name

Command Mode

- /exec/configure

object-group udp relay ip address

object-group udp relay ip address

[no] object-group udp relay ip address <obj-grp-name>

Syntax Description

no	(Optional) Negate a command or set its defaults
object-group	Configure object groups
udp	Configure UDP
relay	Configure UDP Relay
ip	IP Object groups
address	Address object group
<i>obj-grp-name</i>	object-group name

Command Mode

- /exec/configure

object-track

[no] object-track <object-number> [decrement <value>]

Syntax Description

no	(Optional) Negate a command or set its defaults
object-track	Associates track object to VRRP group
<i>object-number</i>	Set the object number to the group
decrement	(Optional) Decrements vrrp group priority when tracked object goes down
<i>value</i>	(Optional) Set the value to decrement from priority

Command Mode

- /exec/configure/if-eth-any/vrrpv3

ocsp url

[no] ocsp url <s0>

Syntax Description

no	(Optional) Negate a command or set its defaults
ocsp	Configure trustpoint ocsp details
url	Configure trustpoint ocsp url
s0	ocsp url

Command Mode

- /exec/configure/trustpoint

ols

ols { com egress gain <com_gain> | line egress gain <line_gain> } | no ols { com egress gain [<com_gain>] | line egress gain [<line_gain>] }

Syntax Description

no	Negate a command or set its defaults
ols	Configure Optical Line System
com	Configure com
egress	Configure egress
gain	Configure egress ampli gain
<i>com_gain</i>	set com egress ampli gain
line	Configure line
egress	Configure egress
gain	Configure egress ampli gain
<i>line_gain</i>	set line egress ampli gain

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-base

ols

```
ols { com egress power <com_power> | line egress power <line_power> } | no ols { com egress power [ <com_power> ] | line egress power [ <line_power> ] }
```

Syntax Description

no	Negate a command or set its defaults
ols	Configure Optical Line System
com	Configure com
egress	Configure egress
power	Configure egress ampli power
<i>com_power</i>	set com egress ampli power
line	Configure line
egress	Configure egress
power	Configure egress ampli power
<i>line_power</i>	set line egress ampli power

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-base

ols com egress control

ols { com | line } egress control <mode> | no ols { com | line } egress control [<mode>]

Syntax Description

no	Negate a command or set its defaults
ols	Configure Optical Line System
com	Configure com
line	Configure line
egress	Configure egress
control	Configure ampli control mode
<i>mode</i>	configure mode

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-base

ols com egress osri

ols com egress osri

[no] ols { com | line } egress osri

Syntax Description

no	(Optional) Negate a command or set its defaults
ols	Configure Optical Line System
com	Configure com
line	Configure line
egress	Configure egress
osri	Configure egress ampli osri

Command Mode

- /exec/configure/if-ether-all /exec/configure/if-eth-base

ols line egress safety-control

[no] ols line egress safety-control

Syntax Description

no	(Optional) Negate a command or set its defaults
ols	Configure Optical Line System
line	Configure line
egress	Configure egress
safety-control	Configure egress ampli safety control mode

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-base

on-demand color

[no] on-demand color <color>

Syntax Description

no	(Optional) Negate a command or set its defaults
on-demand	Configure on-demand color
color	Color
<i>color</i>	Color

Command Mode

- /exec/configure/sr/te

operation-packet-priority normal

{ { no | default } operation-packet-priority | operation-packet-priority { normal | high } }

Syntax Description

no	
default	Set a command to its defaults
operation-packet-priority	Set operation packet properties
high	Priority high
normal	Priority normal

Command Mode

- /exec/configure/ip-sla/jitter

```
option exporter-stats timeout
```

option exporter-stats timeout

{ [no] option exporter-stats timeout <time> | no option exporter-stats timeout }

Syntax Description

option	Version 9 Option Templates and Data
exporter-stats	Exporter Statistics Option
timeout	Option resend time
<i>time</i>	Time in seconds

Command Mode

- /exec/configure/nfm-exporter-v9

option interface-table timeout

{ [no] option interface-table timeout <time> | no option interface-table timeout }

Syntax Description

option	Version 9 Option Templates and Data
interface-table	Interface Table Option
timeout	Option resend time
<i>time</i>	Time in seconds

Command Mode

- /exec/configure/nfm-exporter-v9

origin-as validate

origin-as validate

[no] origin-as validate

Syntax Description

no	(Optional) Negate a command or set its defaults
origin-as	RPKI origin-as validation related functionality
validate	Enable RPKI origin-as validation for routes received from ebgp neighbors

Command Mode

- /exec/configure/router-bgp/router-bgp-af-ipv4 /exec/configure/router-bgp/router-bgp-af-ipv6
/exec/configure/router-bgp/router-bgp-vrf-af-ipv4 /exec/configure/router-bgp/router-bgp-vrf-af-ipv6

origin-as validate signal ibgp

[no] origin-as validate signal ibgp

Syntax Description

no	(Optional) Negate a command or set its defaults
origin-as	RPKI origin-as validation related functionality
validate	Enable RPKI origin-as validation for routes received from ebgp neighbors
signal	Send RPKI validation state using Origin Validation State Extended Community
ibgp	Send Origin Validation State Extended Community to ibgp neighbors

Command Mode

- /exec/configure/router-bgp/router-bgp-af-ipv4 /exec/configure/router-bgp/router-bgp-af-ipv6
/exec/configure/router-bgp/router-bgp-vrf-af-ipv4 /exec/configure/router-bgp/router-bgp-vrf-af-ipv6

originate-map

[no] originate-map <rmap-name>

Syntax Description

no	(Optional) Negate a command or set its defaults
originate-map	Configure originate-map
<i>rmap-name</i>	Route-map name

Command Mode

- /exec/configure/router-bgp/router-bgp-af-l2vpn-evpn

ospfv3 authentication disable ipsec spi md5 sha1 key-chain

```
{ [ no ] ospfv3 authentication { disable | ipsec spi <spi_id> { md5 <akey> | sha1 <akey> | key-chain <keychain_ah> } } } | { no ospfv3 authentication { disable | ipsec spi <spi_id> } }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
ospfv3	OSPFv3 configuration commands
authentication	Enable Authentication
disable	Disable Authentication
ipsec	IPSec
spi	Security Parameter Index
<i>spi_id</i>	SPI Value
md5	Use the MD5 algorithm
<i>akey</i>	Authentication Key
sha1	Use the SHA1 algorithm
<i>akey</i>	Authentication Key
key-chain	Authentication password key-chain
<i>keychain_ah</i>	Authentication key-chain name

Command Mode

- /exec/configure/if-igp /exec/configure/if-gre-tunnel /exec/configure/if-mpls-tunnel
/exec/configure/if-mgmt-config

ospfv3 bfd

ospfv3 bfd

[no] ospfv3 bfd [disable]

Syntax Description

no	(Optional) Negate a command or set its defaults
ospfv3	OSPFv3 configuration commands
bfd	Enable BFD on this interface
disable	(Optional) Disable BFD on this interface

Command Mode

- /exec/configure/if-igp /exec/configure/if-gre-tunnel /exec/configure/if-mgmt-config

ospfv3 cost

{ ospfv3 cost <cost> } | { no ospfv3 cost [<cost>] }

Syntax Description

no	Negate a command or set its defaults
ospfv3	OSPFv3 configuration commands
cost	Cost associated with interface
<i>cost</i>	Cost value

Command Mode

- /exec/configure/if-igp /exec/configure/if-gre-tunnel /exec/configure/if-mpls-tunnel
/exec/configure/if-mgmt-config

ospfv3 dead-interval

ospfv3 dead-interval

{ ospfv3 dead-interval <interval> } | { no ospfv3 dead-interval [<interval>] }

Syntax Description

no	Negate a command or set its defaults
ospfv3	OSPFv3 configuration commands
dead-interval	Dead interval
<i>interval</i>	(seconds)

Command Mode

- /exec/configure/if-igp /exec/configure/if-gre-tunnel /exec/configure/if-mpls-tunnel
/exec/configure/if-mgmt-config

ospfv3 encryption disable ipsec spi esp 3des aes 128 authentication sha1

```
{ [ no ] ospfv3 encryption { disable | ipsec spi <spi_id> esp { 3des <ekey> | aes { 128 <ekey> } } authentication { sha1 <akey> | null } } } | { [ no ] ospfv3 encryption ipsec spi <spi_id> esp key-chain <keychain_enc> authentication { key-chain <keychain_ah> | null } } | { [ no ] ospfv3 encryption ipsec spi <spi_id> esp null authentication { sha1 <akey> | key-chain <keychain_ah> } } | { no ospfv3 encryption ipsec spi <spi_id> }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
ospfv3	OSPFv3 configuration commands
encryption	Enable Encryption on this Interface
disable	Disable Encryption
ipsec	IPSec
spi	Security Parameter Index
<i>spi_id</i>	SPI Value
esp	Specify encryption parameters
3des	Use the triple DES algorithm
<i>ekey</i>	Encryption Key
aes	Use the AES algorithm
128	Use the 128-bit AES algorithm
<i>ekey</i>	Encryption Key
authentication	Specify authentication parameters
sha1	Use the SHA1 algorithm
<i>akey</i>	Authentication Key
key-chain	Encryption password key-chain
<i>keychain_enc</i>	Encryption key-chain name
key-chain	Authentication password key-chain
<i>keychain_ah</i>	Authentication key-chain name
null	Use NULL authentication

Command Mode

```
ospfv3 encryption disable ipsec spi esp 3des aes 128 authentication sha1
```

- /exec/configure/if-igp /exec/configure/if-gre-tunnel /exec/configure/if-mpls-tunnel
/exec/configure/if-mgmt-config

ospfv3 event-history cli

[no ospfv3 event-history cli] | [ospfv3 event-history cli size { <size_in_text> | <size_in_Kbytes> }]

Syntax Description

no	(Optional) Negate a command or set its defaults
ospfv3	(Optional) Debugging functions
event-history	(Optional) log debug events into event history buffer
cli	(Optional) Cli logs
size	(Optional) Configure the size of the event-hist buffer
<i>size_in_text</i>	(Optional) Buffer size
<i>size_in_Kbytes</i>	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED

Command Mode

- /exec/configure/router-ospf3

ospfv3 hello-interval

ospfv3 hello-interval

{ ospfv3 hello-interval <interval> } | { no ospfv3 hello-interval [<interval>] }

Syntax Description

no	Negate a command or set its defaults
ospfv3	OSPFv3 configuration commands
hello-interval	Hello interval
<i>interval</i>	(seconds)

Command Mode

- /exec/configure/if-igp /exec/configure/if-gre-tunnel /exec/configure/if-mpls-tunnel
/exec/configure/if-mgmt-config

ospfv3 instance

{ ospfv3 instance <instance-id> } | { no ospfv3 instance [<instance-id>] }

Syntax Description

no	Negate a command or set its defaults
ospfv3	OSPFv3 configuration commands
instance	Instance identifier
<i>instance-id</i>	Instance identifier value

Command Mode

- /exec/configure/if-igp /exec/configure/if-gre-tunnel /exec/configure/if-mpls-tunnel
/exec/configure/if-mgmt-config

ospfv3 mtu-ignore

[no] ospfv3 mtu-ignore

Syntax Description

no	(Optional) Negate a command or set its defaults
ospfv3	OSPFv3 configuration commands
mtu-ignore	Disable OSPF MTU mismatch detection

Command Mode

- /exec/configure/if-igp /exec/configure/if-gre-tunnel /exec/configure/if-mpls-tunnel
/exec/configure/if-mgmt-config

ospfv3 network broadcast

{ ospfv3 network { broadcast | point-to-point } } | { no ospfv3 network [{ broadcast | point-to-point }] }

Syntax Description

no	Negate a command or set its defaults
ospfv3	OSPFv3 configuration commands
network	Network type
broadcast	Specify OSPF broadcast multi-access network
point-to-point	Specify OSPF point-to-point network

Command Mode

- /exec/configure/if-broadcast /exec/configure/if-p2p /exec/configure/if-mgmt-config

ospfv3 network point-to-point

ospfv3 network point-to-point

{ ospfv3 network point-to-point } | { no ospfv3 network [point-to-point] }

Syntax Description

no	Negate a command or set its defaults
ospfv3	OSPFv3 configuration commands
network	Network type
point-to-point	Specify OSPF point-to-point network

Command Mode

- /exec/configure/if-loopback

ospfv3 passive-interface

[default | no] ospfv3 passive-interface

Syntax Description

default	(Optional) Undo a command
no	(Optional) Negate a command or set its defaults
ospfv3	OSPFv3 configuration commands
passive-interface	Suppress routing updates on the interface

Command Mode

- /exec/configure/if-broadcast /exec/configure/if-p2p /exec/configure/if-mgmt-config

ospfv3 priority

{ ospfv3 priority <prio> } | { no ospfv3 priority [<prio>] }

Syntax Description

no	Negate a command or set its defaults
ospfv3	OSPFv3 configuration commands
priority	Router priority
<i>prio</i>	Router priority

Command Mode

- /exec/configure/if-igp /exec/configure/if-gre-tunnel /exec/configure/if-mpls-tunnel
/exec/configure/if-mgmt-config

ospfv3 retransmit-interval

{ ospfv3 retransmit-interval <interval> } | { no ospfv3 retransmit-interval [<interval>] }

Syntax Description

no	Negate a command or set its defaults
ospfv3	OSPFv3 configuration commands
retransmit-interval	Packet retransmission interval
<i>interval</i>	(seconds)

Command Mode

- /exec/configure/if-igp /exec/configure/if-gre-tunnel /exec/configure/if-mpls-tunnel
/exec/configure/if-mgmt-config

ospfv3 shutdown

ospfv3 shutdown

[no] ospfv3 shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
ospfv3	OSPFv3 configuration commands
shutdown	Shutdown ospf on this interface

Command Mode

- /exec/configure/if-igp /exec/configure/if-gre-tunnel /exec/configure/if-mgmt-config

ospfv3 transmit-delay

{ ospfv3 transmit-delay <delay> } | { no ospfv3 transmit-delay [<delay>] }

Syntax Description

no	Negate a command or set its defaults
ospfv3	OSPFv3 configuration commands
transmit-delay	Packet transmission delay
<i>delay</i>	(seconds)

Command Mode

- /exec/configure/if-igp /exec/configure/if-gre-tunnel /exec/configure/if-mpls-tunnel
/exec/configure/if-mgmt-config

other-config-flag

[no] other-config-flag <state>

Syntax Description

no	(Optional) Negate a command or set its defaults
<i>state</i>	

Command Mode

- /exec/configure/config-ra-guard

otv-isis

otv-isis <tag>

Syntax Description

otv-isis	Intermediate System to Intermediate System (IS-IS)
<i>tag</i>	Routing process tag

Command Mode

- /exec/configure

otv isis authentication-check

otv isis authentication-check

[no] otv isis authentication-check

Syntax Description

no	(Optional) Negate a command or set its defaults
otv	Configure OTV information
isis	IS-IS configuration commands
authentication-check	Check authentication on received hellos

Command Mode

- /exec/configure/if-overlay /exec/configure/site-vlan

otv isis authentication-type cleartext

{ otv isis authentication-type { cleartext | md5 } | no otv isis authentication-type [{ cleartext | md5 }] }

Syntax Description

no	Negate a command or set its defaults
otv	Configure OTV information
isis	IS-IS configuration commands
authentication-type	Set hello authentication type
cleartext	Cleartext
md5	HMAC-MD5

Command Mode

- /exec/configure/if-overlay /exec/configure/site-vlan

otv isis authentication key-chain

otv isis authentication key-chain

```
{ otv isis authentication key-chain <auth-keychain> | no otv isis authentication key-chain [ <auth-keychain> ] }
```

Syntax Description

no	Negate a command or set its defaults
otv	Configure OTV information
isis	IS-IS configuration commands
authentication	Set hello authentication keychain
key-chain	Set hello authentication keychain
<i>auth-keychain</i>	authentication keychain

Command Mode

- /exec/configure/if-overlay /exec/configure/site-vlan

otv isis csnp-interval

[no] otv isis csnp-interval <sec>

Syntax Description

no	(Optional) Negate a command or set its defaults
otv	Configure OTV information
isis	IS-IS configuration commands
csnp-interval	Set CSNP interval in seconds
<i>sec</i>	CSNP interval value

Command Mode

- /exec/configure/if-overlay

otv isis hello-interval

otv isis hello-interval

[no] otv isis hello-interval <sec>

Syntax Description

no	(Optional) Negate a command or set its defaults
otv	Configure OTV information
isis	IS-IS configuration commands
hello-interval	Set Hello interval in seconds
<i>sec</i>	Hello interval value

Command Mode

- /exec/configure/if-overlay

otv isis hello-interval

[no] otv isis hello-interval <sec>

Syntax Description

no	(Optional) Negate a command or set its defaults
otv	Configure OTV information
isis	IS-IS configuration commands
hello-interval	Set Hello interval in seconds
<i>sec</i>	Hello interval value

Command Mode

- /exec/configure/site-vlan

otv isis hello-multiplier

otv isis hello-multiplier

[no] otv isis hello-multiplier <multi>

Syntax Description

no	(Optional) Negate a command or set its defaults
otv	Configure OTV information
isis	IS-IS configuration commands
hello-multiplier	Set multiplier for Hello holding time
<i>multi</i>	Hello multiplier value

Command Mode

- /exec/configure/site-vlan

otv isis hello-multiplier

[no] otv isis hello-multiplier <multi>

Syntax Description

no	(Optional) Negate a command or set its defaults
otv	Configure OTV information
isis	IS-IS configuration commands
hello-multiplier	Set multiplier for Hello holding time
<i>multi</i>	Hello multiplier value

Command Mode

- /exec/configure/if-overlay

otv isis hello-padding

otv isis hello-padding

{ otv isis hello-padding | no otv isis hello-padding [always] }

Syntax Description

no	Negate a command or set its defaults
otv	Configure OTV information
isis	IS-IS configuration commands
hello-padding	Pad IS-IS hello PDUs to full MTU
always	(Optional) Pad every hello

Command Mode

- /exec/configure/if-overlay /exec/configure/site-vlan

otv isis lsp-interval

[no] otv isis lsp-interval <msec>

Syntax Description

no	(Optional) Negate a command or set its defaults
otv	Configure OTV information
isis	IS-IS configuration commands
lsp-interval	Set LSP transmission interval
<i>msec</i>	LSP transmission interval (milliseconds)

Command Mode

- /exec/configure/if-overlay

otv isis metric

otv isis metric

[no] otv isis metric <metric>

Syntax Description

no	(Optional) Negate a command or set its defaults
otv	Configure OTV information
isis	IS-IS configuration commands
metric	Configure the metric for interface
<i>metric</i>	Default metric

Command Mode

- /exec/configure/if-overlay

otv isis priority

[no] otv isis priority <priority>

Syntax Description

no	(Optional) Negate a command or set its defaults
otv	Configure OTV information
isis	IS-IS configuration commands
priority	Set priority for DIS election
<i>priority</i>	Priority value

Command Mode

- /exec/configure/if-overlay

overlay-encapsulation

overlay-encapsulation <encap-type> [tunnel-control-frames [<layer2-prot>]] | no overlay-encapsulation

Syntax Description

no	Negate a command or set its defaults
overlay-encapsulation	NVE Overlay Encapsulation
<i>encap-type</i>	Configure encapsulation type
tunnel-control-frames	(Optional) tunnel protocol
<i>layer2-prot</i>	(Optional) configure specific protocol

Command Mode

- /exec/configure/if-nve

overwrite-vlan

[no] overwrite-vlan <ow-vlan-id>

Syntax Description

no	(Optional) Negate a command or set its defaults
overwrite-vlan	Overwrite the system generated vlan
<i>ow-vlan-id</i>	

Command Mode

- /exec/configure/static-host/vni

owner

{ { no | default } owner | owner <text> }

Syntax Description

no	
default	Set a command to its defaults
owner	Owner of Entry
<i>text</i>	Owner String

Command Mode

- /exec/configure/ip-sla/udp /exec/configure/ip-sla/jitter /exec/configure/ip-sla/tcp
/exec/configure/ip-sla/icmpEcho /exec/configure/ip-sla/dns /exec/configure/ip-sla/fabricPathEcho
/exec/configure/ip-sla/http