



U Commands

- [ucs-infra ipv6-mgmt-ip](#), on page 3
- [udf](#), on page 4
- [udf mpls stack1](#), on page 5
- [udf netflow-rtp](#), on page 6
- [udld aggressive](#), on page 7
- [udld aggressive](#), on page 8
- [udld aggressive](#), on page 9
- [udld aggressive](#), on page 10
- [udld disable](#), on page 11
- [udld disable](#), on page 12
- [udld enable](#), on page 13
- [udld enable](#), on page 14
- [udld message-time](#), on page 15
- [udld reset](#), on page 16
- [udp-echo](#), on page 17
- [udp-jitter](#), on page 18
- [undebg all](#), on page 20
- [undebg l2rib](#), on page 21
- [unidirectional send](#), on page 22
- [uniq](#), on page 23
- [unmount](#), on page 24
- [unmount slot0](#), on page 25
- [unsuppress-map](#), on page 26
- [untagged cos](#), on page 27
- [update-source](#), on page 28
- [update-source](#), on page 29
- [update license](#), on page 30
- [update license](#), on page 31
- [use-chunking size](#), on page 32
- [use-compression gzip](#), on page 33
- [use-compression gzip](#), on page 34
- [use-nodeid](#), on page 35
- [use-nodeid](#), on page 36

- [use-nodeid](#), on page 37
- [use-retry size](#), on page 38
- [use-vrf](#), on page 39
- [use-vrf](#), on page 40
- [use-vrf](#), on page 41
- [use-vrf](#), on page 42
- [use-vrf](#), on page 43
- [user-jid password](#), on page 44
- [user max-logins](#), on page 45
- [user max-logins](#), on page 46
- [username](#), on page 47
- [username](#), on page 48
- [username](#), on page 49
- [username](#), on page 51
- [username keypair export](#), on page 52
- [username keypair generate](#), on page 53
- [username keypair import](#), on page 54
- [username passphrase](#), on page 55
- [username passphrase](#), on page 56
- [username password](#), on page 57
- [username ssh-cert-dn dsa](#), on page 58
- [username sshkey](#), on page 59
- [userpassphrase](#), on page 60
- [userpassphrase](#), on page 61
- [userpassphrase](#), on page 62
- [userpassphrase min-unique](#), on page 63
- [userpassphrase min-unique](#), on page 64
- [userpassphrase min](#), on page 65
- [userpassphrase min](#), on page 66
- [userpassphrase sequence alphabet](#), on page 67
- [userpassphrase sequence alphabet length](#), on page 68
- [userpassphrase sequence keyboard](#), on page 69
- [userpassphrase sequence keyboard length](#), on page 70
- [userprofile trustedCert CRLLookup user-switch-bind user-certdn-match user-pubkey-match attribute-name search-filter base-DN](#), on page 71

ucs-infra ipv6-mgmt-ip

```
ucs-infra ipv6-mgmt-ip <ipv6_address> [ infra-vlan <infra_vlan_id> ] [ adaptor-vlan <adaptor_vlan_id> ] [
epds-port <epds_port_no> ] | no ucs-infra
```

Syntax Description

no	Negate a command or set its defaults
ucs-infra	Configure VLAN id and IPV6 address
ipv6-mgmt-ip	Mgmt Ipv6 Address
infra-vlan	(Optional) Infra Vlan ID
<i>infra_vlan_id</i>	(Optional) Vlan ID
adaptor-vlan	(Optional) Adaptor Vlan ID
<i>adaptor_vlan_id</i>	(Optional) Vlan ID
epds-port	(Optional) epds port number
<i>epds_port_no</i>	(Optional) EPDS NO

Command Mode

- /exec/configure

udf

```
udf <udf_name> { packet-start | { header { outer | inner } { 13 | 14 } } } <offset> <length> | no udf <udf_name>
[ { packet-start | { header { outer | inner } { 13 | 14 } } } <offset> <length> ]
```

Syntax Description

no	Negate the command
udf	Define the User Defined Field (UDF)
<i>udf_name</i>	Name of the UDF to configure
packet-start	Offset base from packet-start
header	Offset base configuration
outer	Offset base: from outer header
inner	Offset base: from inner header
13	Offset base: from 13 header
14	Offset base: from 14 header
<i>offset</i>	Enter Offset in bytes for UDF (from offset base)
<i>length</i>	Enter Length in bytes for UDF (from offset)

Command Mode

- /exec/configure

udf mpls stack1

```
udf <udf_name> mpls { stack1 | stack2 } | no udf <udf_name> [ mpls ]
```

Syntax Description

no	Negate the command
udf	Define the User Defined Field (UDF)
<i>udf_name</i>	Name of the UDF to configure
mpls	Configure UDF for MPLS (Not supported in SVI scenarios)
stack1	Configure UDF for first level (inner) of MPLS encapsulation
stack2	Configure UDF for second level (outer) of MPLS encapsulation

Command Mode

- /exec/configure

udf netflow-rtp

```
udf <udf_name> netflow-rtp [ multicast ] | no udf <udf_name> [ netflow-rtp [ multicast ] ]
```

Syntax Description

no	Negate the command
udf	Define the User Defined Field (UDF)
<i>udf_name</i>	Name of the UDF to configure
netflow-rtp	Configure netflow rtp udf
multicast	(Optional) Enable RTP for multicast-flows

Command Mode

- /exec/configure

udld aggressive

[no] udld aggressive

Syntax Description

no	Negate a command or set its defaults
udld	UDLD protocol
aggressive	Enable UDLD aggressive mode for interface(s)

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-base

udld aggressive

udld aggressive

Syntax Description

udld	UDLD protocol
aggressive	Enable UDLD aggressive mode on all fiber optic ports

Command Mode

- /exec/configure

udld aggressive

[no] udld aggressive

Syntax Description

no	Negate a command or set its defaults
udld	UDLD protocol
aggressive	Enable UDLD aggressive mode on all fiber optic ports

Command Mode

- /exec/configure

udld aggressive

udld aggressive

Syntax Description

udld	UDLD protocol
aggressive	Enable UDLD aggressive mode for interface(s)

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-base

udld disable

[no] udld disable

Syntax Description

no	Negate a command or set its defaults
udld	UDLD protocol
disable	Disable UDLD for fiber interface(s)

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-base

udld disable

udld disable

Syntax Description

udld	UDLD protocol
disable	Disable UDLD for fiber interface(s)

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-base

udld enable

[no] udld enable

Syntax Description

no	Negate a command or set its defaults
udld	UDLD protocol
enable	Enable UDLD for non-fiber interface(s)

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-base

udld enable

udld enable

Syntax Description

udld	UDLD protocol
enable	Enable UDLD for non-fiber interface(s)

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-base

udld message-time

udld message-time <i0> | no udld message-time

Syntax Description

no	Negate a command or set its defaults
udld	UDLD protocol
message-time	Setting the time in seconds between UDLD probe messages
<i>i0</i>	Enter the message timer value [default = 15]

Command Mode

- /exec/configure

udld reset

udld reset

Syntax Description

udld	UDLD protocol
reset	Reset all ports shut down by UDLD

Command Mode

- /exec/configure

udp-echo

```
[no] udp-echo { <hostname> | <ip-address> } <port> { [ control { disable | enable } ] [ source-ip { <source-ip-hostname> | <source-ip-address> } ] [ source-port <source-port-number> ] } +
```

Syntax Description

<i>control</i>	(Optional) enable
<i>source-ip</i>	(Optional) <source-ip-hostname>
<i>source-port</i>	(Optional) <source-port-number>
no	(Optional)
udp-echo	UDP Echo Operation
<i>hostname</i>	Destination hostname, broadcast disallowed
<i>ip-address</i>	Destination IP address, broadcast disallowed
<i>port</i>	Port Number (Recommended port range between 1025-65534)
enable	(Optional) Enable control packets exchange (default)
disable	(Optional) Disable control packets exchange
<i>source-ip-hostname</i>	(Optional) source IP hostname, broadcast disallowed
<i>source-ip-address</i>	(Optional) source IP address, broadcast disallowed
<i>source-port-number</i>	(Optional) Port Number (Recommended port range between 1025-65534)

Command Mode

- /exec/configure/ip-sla

udp-jitter

```
[no] udp-jitter { <hostname> | <ip-address> } <dest-port> { { [ codec { g711alaw | g711ulaw | g729a } { [ advantage-factor <advantage-num> ] [ codec-interval <codec-int> ] [ codec-numpackets <codec-numpack> ] [ codec-size <codec-bytes> ] } } + } [ control { disable | enable } ] [ source-ip { <source-ip-hostname> | <source-ip-address> } ] [ source-port <src-port> ] } + | { [ interval <packet-interval> ] [ num-packets <num-packets> ] [ control { disable | enable } ] [ source-ip { <source-ip-hostname> | <source-ip-address> } ] [ source-port <src-port> ] } } + }
```

Syntax Description

no	(Optional)
<i>codec</i>	(Optional) g711alaw
<i>codec-numpackets</i>	(Optional) <codec-numpack>
<i>source-port</i>	(Optional) <src-port>
<i>num-packets</i>	(Optional) <num-packets>
<i>source-ip</i>	(Optional) <source-ip-hostname>
udp-jitter	UDP Jitter Operation
<i>hostname</i>	Destination hostname, broadcast disallowed
<i>ip-address</i>	Destination IP address, broadcast disallowed
<i>dest-port</i>	Port Number (Recommended port range between 1025-65534)
g711alaw	(Optional) G.711 A Law 64000 bps
g711ulaw	(Optional) G.711 U Law 64000 bps
g729a	(Optional) G.729 8000 bps
advantage-factor	(Optional) Advantage Factor
codec-interval	(Optional) Inter Packet Interval
codec-size	(Optional) Number of bytes in payload
<i>advantage-num</i>	(Optional) Advantage Factor
<i>codec-int</i>	(Optional) Delay
<i>codec-numpack</i>	(Optional) Number of Packets
<i>codec-bytes</i>	(Optional) Number of bytes in payload
<i>packet-interval</i>	(Optional) Delay (default 20)
<i>num-packets</i>	(Optional) Number of Packets (default 10)

interval	(Optional) Inter Packet Interval
control	(Optional) Enable or disable control packets
enable	(Optional) Enable control packets exchange (default)
disable	(Optional) Disable control packets exchange
source-ip	(Optional) Source address
<i>source-ip-hostname</i>	(Optional) source IP hostname, broadcast disallowed
<i>source-ip-address</i>	(Optional) source IP address, broadcast disallowed
source-port	(Optional) Source Port
<i>src-port</i>	(Optional) Port Number (Recommended port range between 1025-65534)

Command Mode

- /exec/configure/ip-sla

undebug all

undebug all

Syntax Description

undebug	Disable Debugging functions (See also debug)
all	Disable all debugging

Command Mode

- /exec

undebug l2rib

undebug l2rib

Syntax Description

undebug	Disable Debugging functions (See also debug)
l2rib	L2RIB debug commands

Command Mode

- /exec

unidirectional send

unidirectional { send-only | receive-only } | no unidirectional [send-only | receive-only]

Syntax Description

no	Negate a command or set its defaults
unidirectional	UDE (Uni-Directional Ethernet)
send-only	Configure UDE TX only for the interface
receive-only	Configure UDE RX only for the interface

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-base

uniq

| uniq [-c | -d | -f <nb-of-fields> | -s <nb-of-chars> | -u | -w <nb-chars-to-compare> | -i] +

Syntax Description

	Pipe command output to filter
uniq	Discard all but one of successive identical lines
-c	(Optional) prefix lines by the number of occurrences
-d	(Optional) only print duplicate lines
-f	(Optional) avoid comparing the first N fields
-s	(Optional) avoid comparing the first N characters
-u	(Optional) only print unique lines
-w	(Optional) compare no more than N characters in lines
-i	(Optional) ignore differences in case when comparing
<i>nb-of-fields</i>	(Optional) number of initial fields to ignore
<i>nb-of-chars</i>	(Optional) number of initial chars to ignore
<i>nb-chars-to-compare</i>	(Optional) max number of chars to compare

Command Mode

- /output

unmount

unmount { usb1: | usb2: }

Syntax Description

unmount	unmount expansion flash or USB storage
usb1:	Unmount USB drive in port 1
usb2:	Unmount USB drive in port 2

Command Mode

- /exec

unmount slot0

unmount slot0:

Syntax Description

unmount	unmount expansion flash or USB storage
slot0:	Unmount expansion flash

Command Mode

- /exec

unsuppress-map

unsuppress-map <unsupp-rmap-name> | { no | default } unsuppress-map [<unsupp-rmap-name>]

Syntax Description

no	Negate a command or set its defaults
default	Inherit values from a peer template
unsuppress-map	Route-map to selectively unsuppress suppressed routes
<i>unsupp-rmap-name</i>	Route-map name

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-vpnv4
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-vpnv6
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-label
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv6-label

untagged cos

untagged cos <ucos-value> | no untagged cos

Syntax Description

no	Negate a command or set its defaults
untagged	default to use for untagged packets on interface
cos	IEEE 802.1Q class of service for QoS classification
<i>ucos-value</i>	COS value

Command Mode

- /exec/configure/if-set-qos

update-source

update-source <interface> | no update-source

Syntax Description

no	Negate a command or set its defaults
update-source	Specify source of BMP session and messages
<i>interface</i>	Interface name

Command Mode

- /exec/configure/router-bgp/router-bgp-bmp-server

update-source

update-source <interface> | { no | default } update-source [<interface>]

Syntax Description

no	Negate a command or set its defaults
default	Inherit values from a peer template
update-source	Specify source of BGP session and updates
<i>interface</i>	Interface name

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor-sess

update license

```
update license <uri0> { <license-file> [ force ] | <s0> }
```

Syntax Description

update	Update license
license	Update a license file
<i>uri0</i>	Specify URL for the new license file
<i>license-file</i>	License file to be updated
force	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED
<i>s0</i>	License file to be updated

Command Mode

- /exec

update license

```
update license <uri0> { <license-file> [ force ] | <s0> }
```

Syntax Description

update	Update license
license	Update a license file
<i>uri0</i>	Specify URL for the new license file
<i>license-file</i>	License file to be updated
force	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED
<i>s0</i>	License file to be updated

Command Mode

- /exec

use-chunking size

use-chunking size <kbytes> | no use-chunking

Syntax Description

no	Negate a command or set its defaults
use-chunking	Enable chunking
size	Chunk size
<i>kbytes</i>	Specify chunking size in kilobytes

Command Mode

- /exec/configure/telemetry/destination-group

use-compression gzip

use-compression { gzip } | no use-compression

Syntax Description

no	Negate a command or set its defaults
use-compression	Specify the destination compression method
gzip	GZIP compression algorithm

Command Mode

- /exec/configure/telemetry/destination-profile

use-compression gzip

use-compression { gzip } | no use-compression

Syntax Description

no	Negate a command or set its defaults
use-compression	Specify the destination compression method
gzip	GZIP compression algorithm

Command Mode

- /exec/configure/telemetry/destination-group

use-nodeid

use-nodeid <nodeid> | no use-nodeid

Syntax Description

no	Negate a command or set its defaults
use-nodeid	Set the node ID
<i>nodeid</i>	Node ID

Command Mode

- /exec/configure/telemetry/destination-group/addr

use-nodeid

use-nodeid <nodeid> | no use-nodeid

Syntax Description

no	Negate a command or set its defaults
use-nodeid	Set the node ID (Max size 128)
<i>nodeid</i>	Node ID (Max size 128)

Command Mode

- /exec/configure/telemetry/destination-profile

use-nodeid

use-nodeid <nodeid> | no use-nodeid

Syntax Description

no	Negate a command or set its defaults
use-nodeid	Set the node ID
<i>nodeid</i>	Node ID

Command Mode

- /exec/configure/telemetry/destination-group/host

use-retry size

use-retry size <mbytes> | no use-retry

Syntax Description

no	Negate a command or set its defaults
use-retry	Specify send retry details
size	Retry buffer size
<i>mbytes</i>	Buffer size in Mega bytes

Command Mode

- /exec/configure/telemetry/destination-profile

use-vrf

use-vrf { default | <vrf-cfg-name> } | no use-vrf

Syntax Description

no	Negate a command or set its defaults
use-vrf	Specify the destination vrf
default	Known VRF name
<i>vrf-cfg-name</i>	Configurable VRF name

Command Mode

- /exec/configure/telemetry/destination-profile

use-vrf

[no] use-vrf { management | default | <vrf_name> }

Syntax Description

no	(Optional) Negate a command or set its defaults
use-vrf	vrf to be used to contact servers in this group
management	management vrf
default	default vrf
<i>vrf_name</i>	name of the vrf

Command Mode

- /exec/configure/tacacs+

use-vrf

use-vrf { default | <vrf-cfg-name> } | no use-vrf

Syntax Description

no	Negate a command or set its defaults
use-vrf	Specify the destination vrf
default	Known VRF name
<i>vrf-cfg-name</i>	Configurable VRF name

Command Mode

- /exec/configure/telemetry/destination-group

use-vrf

[no] use-vrf { <vrf-name> | <vrf-known-name> }

Syntax Description

no	(Optional) Negate a command or set its defaults
use-vrf	Display per-VRF information
<i>vrf-name</i>	VRF name
<i>vrf-known-name</i>	Known VRF name

Command Mode

- /exec/configure/ldap

use-vrf

[no] use-vrf { management | default | <vrf_name> }

Syntax Description

no	(Optional) Negate a command or set its defaults
use-vrf	vrf to be used to contact servers in this group
management	management vrf
default	default vrf
<i>vrf_name</i>	name of the vrf

Command Mode

- /exec/configure/radius

user-jid password

[no] user-jid <jid> password [0 <clear> | 7 <encrypted> | <password>]

Syntax Description

no	(Optional) Negate a command or set its defaults
user-jid	User Jabber ID
<i>jid</i>	Enter user Jabber ID
password	Password
0	(Optional) Password that follows should be in clear text
<i>clear</i>	(Optional) Password in clear text
7	(Optional) Password that follows should be in encrypted text
<i>encrypted</i>	(Optional) Encrypted password
<i>password</i>	(Optional) Enter password in clear text

Command Mode

- /exec/configure/fabric-db/server-xmpp

user max-logins

user max-logins <limit>

Syntax Description

user	Configure system-wide user settings
max-logins	maximum simultaneous logins
<i>limit</i>	login session maximum

Command Mode

- /exec/configure

user max-logins

[no] user max-logins [<limit>]

Syntax Description

no	Negate a command or set its defaults
user	Configure system-wide user settings
max-logins	maximum simultaneous logins
<i>limit</i>	(Optional) login session maximum

Command Mode

- /exec/configure

username

```
{ username <s0> { shelltype { vsh | bash } } }
```

Syntax Description

username	Configure user information.
<i>s0</i>	user name
shelltype	Choose shell type for login
vsh	use vsh shell
bash	use bash shell

Command Mode

- /exec/configure

username

```
{ [ no ] username <name> }
```

Syntax Description

username	user name
<i>name</i>	user name

Command Mode

- /exec/configure/dot1x-cred

username

```
{ username <s0> [ password { 0 <s2> [ pbkdf2 | scrypt ] | 5 <s3> | <s4> [ pbkdf2 | scrypt ] | 8 <s9> | 9 <s10>
} ] [ expire <s5> [ past ] ] [ role <s6> ] } | { username <s0> [ password { 0 <s2> [ pbkdf2 | scrypt ] | 5 <s3>
| <s4> [ pbkdf2 | scrypt ] | 8 <s9> | 9 <s10> } ] [ role <s6> ] [ expire <s5> [ past ] ] } | { username <s0> [
expire <s5> [ past ] ] [ password { 0 <s2> [ pbkdf2 | scrypt ] | 5 <s3> | <s4> [ pbkdf2 | scrypt ] | 8 <s9> | 9
<s10> } ] [ role <s6> ] } | { username <s0> [ expire <s5> [ past ] ] [ role <s6> ] [ password { 0 <s2> [ pbkdf2
| scrypt ] | 5 <s3> | <s4> [ pbkdf2 | scrypt ] | 8 <s9> | 9 <s10> } ] } | { username <s0> [ role <s6> ] [ password
{ 0 <s2> [ pbkdf2 | scrypt ] | 5 <s3> | <s4> [ pbkdf2 | scrypt ] | 8 <s9> | 9 <s10> } ] [ expire <s5> [ past ] ] }
| { username <s0> [ role <s6> ] [ expire <s5> [ past ] ] [ password { 0 <s2> [ pbkdf2 | scrypt ] | 5 <s3> | <s4>
[ pbkdf2 | scrypt ] | 8 <s9> | 9 <s10> } ] } | { no username <s7> [ role <s8> ] [ force ] }
```

Syntax Description

no	Negate a command or set its defaults
username	Configure user information.
s0	user name
password	(Optional) Password for the user
0	(Optional) Indicates that the password that follows should be in clear text
s2	(Optional) Password for the user (clear text)
5	(Optional) Indicates that the password that follows should be encrypted
s3	(Optional) strongly encrypted password
s4	(Optional) Password for the user (clear text)
expire	(Optional) Expiry date for this user account(in YYYY-MM-DD format)
s5	(Optional) Expiry in YYYY-MM-DD format
past	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED
role	(Optional) role which the user is to be assigned to
s6	(Optional) role name
s7	user name
s8	(Optional) role name
8	(Optional) Indicates that the password that follows is pbkdf2(type 8) hashed
s9	(Optional) strongly encrypted password
9	(Optional) Indicates that the password that follows is scrypt(type 9) hashed

<i>s10</i>	(Optional) strongly encrypted password
pbkdf2	(Optional) generate hash for password with pbkdf2(type 8)
scrypt	(Optional) generate hash for password with scrypt(type 9)
force	(Optional) Force the user delete

Command Mode

- /exec/configure

username

```
[no] username <s0> { sshkey2 { file <uri0> | <line> } }
```

Syntax Description

<i>no</i>	(Optional) Negate a command or set its defaults
<i>username</i>	Configure user information.
<i>s0</i>	user name
<i>sshkey2</i>	Update ssh key for the user for ssh authentication
<i>file</i>	ssh key file
<i>uri0</i>	file containing host public key for the user
<i>line</i>	ssh key for the user

Command Mode

- /exec/configure

username keypair export

```
{ username <s0> keypair export <s1> { dsa | rsa | ecdsa } [ force ] }
```

Syntax Description

username	Configure user information.
keypair	Use existing ssh keypair
export	Export keypair to Bootflash/Remote directory
force	(Optional) Force the export of keys even if the destination files are present
dsa	Use DSA Keys
rsa	Use RSA Keys
ecdsa	Use ECDSA Keys
<i>s0</i>	user name
<i>s1</i>	Enter filename to export to

Command Mode

- /exec/configure

username keypair generate

```
{ username <s0> keypair generate { dsa [ force ] | rsa [ <i0> | <oldrange> ] [ force ] | ecDSA { <i0> } [ force ] } } | no username <s0> keypair generate [ { dsa [ force ] | rsa [ <i0> | <oldrange> ] [ force ] | ecDSA [ { <i0> } [ force ] ] } ] }
```

Syntax Description

no	Negate a command or set its defaults
username	Configure user information.
<i>s0</i>	user name
generate	Generate ssh key pairs
keypair	Generate SSH User Keys
dsa	Generate DSA keys
force	(Optional) Force the generation of keys even if previous ones are present
rsa	Generate RSA keys
<i>i0</i>	(Optional) Enter number of bits (in multiples of 8)
<i>oldrange</i>	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED
ecdsa	Generate ECDSA keys
<i>i0</i>	Enter key size in bits (256, 384 or 521)
force	(Optional) Force the generation of keys even if previous ones are present

Command Mode

- /exec/configure

username keypair import

```
{ username <s0> keypair import <s1> { dsa | rsa | ecdsa } [ force ] }
```

Syntax Description

username	Configure user information.
keypair	Use existing ssh keypair
import	Import keypair from Bootflash/Remote directory
force	(Optional) Force the generation of keys even if previous ones are present
dsa	Use DSA Keys
rsa	Use RSA Keys
ecdsa	Use ECDSA Keys
<i>s0</i>	user name
<i>s1</i>	Enter filename to import

Command Mode

- /exec/configure

username passphrase

```
[no] username <username> passphrase { lifetime [ warntime [ gracetime | timevalues ] | gracetime [ warntime | timevalues ] | timevalues ] | warntime [ lifetime [ gracetime | timevalues ] | gracetime [ lifetime | timevalues ] | timevalues ] | gracetime [ lifetime [ warntime | timevalues ] | warntime [ lifetime | timevalues ] | timevalues ] | timevalues }
```

Syntax Description

no	Negate a command or set its defaults
username	Configure user information.
<i>username</i>	user name
passphrase	user passphrase
lifetime	user passphrase lifetime
warntime	(Optional) user passphrase warningtime
gracetime	(Optional) user passphrase gracetime
timevalues	(Optional) passphrase lifetime, warningtime and gracetime

Command Mode

- /exec/configure

username passphrase

username <username> passphrase { lifetime <ltime> | warntime <wtime> | gracetime <gtime> } +

Syntax Description

username	Configure user information.
<i>username</i>	user name
passphrase	user passphrase
lifetime	user passphrase lifetime
<i>ltime</i>	lifetime of passphrase (in days)
warntime	user passphrase warningtime
<i>wtime</i>	warning period of passphrase (in days)
gracetime	user passphrase gracetime
<i>gtime</i>	grace period of passphrase (in days)

Command Mode

- /exec/configure

username password

[no] username <user> password { 0 <pass1> | 5 <pass2> | <pass3> }

Syntax Description

no	(Optional) Negate a command or set its defaults
username	Configure user name
<i>user</i>	Username
password	Password for user
0	Indicates that the password that follows should be in clear text
<i>pass1</i>	Password for the user (clear text)
5	Indicates that the password that follows should be encrypted
<i>pass2</i>	strongly encrypted password
<i>pass3</i>	Password for the user (clear text)

Command Mode

- /exec/configure/vmt-conn

username ssh-cert-dn dsa

[no] username <s1> ssh-cert-dn <s2> { dsa | rsa }

Syntax Description

no	(Optional) Negate a command or set its defaults
username	Configure user information.
<i>s1</i>	user name
ssh-cert-dn	Update cert dn
<i>s2</i>	distinguished name to be used
dsa	Use dsa algorithm
rsa	Use rsa algorithm

Command Mode

- /exec/configure

username sshkey

```
{ username <s0> sshkey { file <uri0> | <line> } | no username <s0> sshkey }
```

Syntax Description

username	Configure user information.
<i>s0</i>	user name
sshkey	Update ssh key for the user for ssh authentication
file	ssh key file
<i>uri0</i>	file containing host public key for the user
<i>line</i>	ssh key for the user
no	Negate a command or set its defaults

Command Mode

- /exec/configure

userpassphrase

[no] userpassphrase { default-lifetime | default-warntime | default-gracetime | timevalues }

Syntax Description

no	Negate a command or set its defaults
userpassphrase	user passphrase
default-lifetime	passphrase default lifetime
default-warntime	passphrase default warningtime
default-gracetime	passphrase default gracetime
timevalues	passphrase lifetime, warning time and gracetime

Command Mode

- /exec/configure

userpassphrase

[no] userpassphrase { min-length | max-length | length }

Syntax Description

no	Negate a command or set its defaults
userpassphrase	user passphrase
min-length	passphrase minimum length
max-length	passphrase maximum length
length	passphrase min and max length

Command Mode

- /exec/configure

userpassphrase

```
userpassphrase { default-lifetime <def-ltime> | default-warntime <def-wtime> | default-gracetime <def-gtime>
} +
```

Syntax Description

userpassphrase	user passphrase
default-lifetime	passphrase default lifetime in days
default-warntime	passphrase default warning time in days
default-gracetime	passphrase default gracetime in days
<i>def-ltime</i>	default lifetime of passphrase (in days)
<i>def-wtime</i>	default warning time of passphrase (in days)
<i>def-gtime</i>	default grace time of passphrase (in days)

Command Mode

- /exec/configure

userpassphrase min-unique

```
userpassphrase min-unique { <count> }
```

Syntax Description

userpassphrase	User passphrase
min-unique	Count for the number of passwords that cannot be reused
<i>count</i>	Previous password count

Command Mode

- /exec/configure

userpassphrase min-unique

[no] userpassphrase min-unique

Syntax Description

no	Negate a command or set its defaults
userpassphrase	User passphrase
min-unique	Count for the number of previous passwords that cannot be reused

Command Mode

- /exec/configure

userpassphrase min

userpassphrase { min-length <min-len> | max-length <max-len> } +

Syntax Description

userpassphrase	user passphrase
min-length	passphrase minimum length
max-length	passphrase maximum length
<i>min-len</i>	minimum length of passphrase
<i>max-len</i>	maximum length of passphrase

Command Mode

- /exec/configure

userpassphrase min

[no] userpassphrase { min-length <min-len> | max-length <max-len> } +

Syntax Description

no	Negate a command or set its defaults
userpassphrase	user passphrase
min-length	passphrase minimum length
max-length	passphrase maximum length
<i>min-len</i>	minimum length of passphrase
<i>max-len</i>	maximum length of passphrase

Command Mode

- /exec/configure

userpassphrase sequence alphabet

[no] userpassphrase sequence alphabet

Syntax Description

no	Negate a command or set its defaults
userpassphrase	user passphrase
sequence	control character sequences in passphrases
alphabet	control runs of sequential alphabetical characters

Command Mode

- /exec/configure

userpassphrase sequence alphabet length

userpassphrase sequence alphabet length { <max-length> }

Syntax Description

userpassphrase	user passphrase
sequence	control character sequences in passphrases
alphabet	control runs of sequential alphabetical characters
length	maximum number of sequential characters
<i>max-length</i>	Number of sequential characters

Command Mode

- /exec/configure

userpassphrase sequence keyboard

[no] userpassphrase sequence keyboard

Syntax Description

no	Negate a command or set its defaults
userpassphrase	user passphrase
sequence	control character sequences in passphrases
keyboard	control runs of sequential keyboard characters

Command Mode

- /exec/configure

userpassphrase sequence keyboard length

userpassphrase sequence keyboard length { <max-length> }

Syntax Description

userpassphrase	user passphrase
sequence	control character sequences in passphrases
keyboard	control runs of sequential keyboard characters
length	maximum number of sequential characters
<i>max-length</i>	Number of sequential characters

Command Mode

- /exec/configure

userprofile trustedCert CRLLookup user-switch-bind user-certdn-match user-pubkey-match attribute-name search-filter base-DN

{ userprofile | trustedCert | CRLLookup | user-switch-bind | user-certdn-match | user-pubkey-match }
attribute-name <s0> search-filter <s1> base-DN <s2>

Syntax Description

userprofile	Set the userprofile
trustedCert	Set the trustedCert
CRLLookup	Set the CRLLookup
user-switch-bind	Set the user-switch-bind
user-certdn-match	Set the certificate matching
user-pubkey-match	Set the pubkey matching
attribute-name	LDAP attribute-name
<i>s0</i>	Search Map attribute-name
search-filter	LDAP search-filter
<i>s1</i>	Search Map search-filter
base-DN	LDAP base-DN
<i>s2</i>	Search Map base-DN Name

Command Mode

- /exec/configure/ldap/search

