



A Show Commands

- [show aaa accounting, on page 3](#)
- [show aaa authentication, on page 4](#)
- [show aaa authentication login, on page 5](#)
- [show aaa authentication login ascii-authentication, on page 6](#)
- [show aaa authentication login error-enable, on page 7](#)
- [show aaa authentication login invalid-username-log, on page 8](#)
- [show aaa authorization, on page 9](#)
- [show aaa bypass-user, on page 10](#)
- [show aaa client radius statistics, on page 11](#)
- [show aaa groups, on page 12](#)
- [show aaa local user blocked, on page 13](#)
- [show aaa server radius statistics, on page 14](#)
- [show aaa user blocked, on page 15](#)
- [show aaa user default-role, on page 16](#)
- [show access-list, on page 17](#)
- [show access-list database, on page 19](#)
- [show access-list resource, on page 20](#)
- [show access-lists, on page 22](#)
- [show accounting log, on page 23](#)
- [show accounting log all, on page 24](#)
- [show accounting log last-index, on page 25](#)
- [show accounting log nvrpm, on page 26](#)
- [show accounting log nvrpm last-index, on page 27](#)
- [show accounting log nvrpm start-seqnum, on page 28](#)
- [show accounting log start-seqnum, on page 29](#)
- [show acl status, on page 30](#)
- [show amt process, on page 31](#)
- [show amt vrf all, on page 32](#)
- [show app-hosting bridge, on page 33](#)
- [show app-hosting detail, on page 34](#)
- [show app-hosting infra, on page 35](#)
- [show app-hosting list, on page 36](#)
- [show app-hosting resource, on page 37](#)

- show app-hosting utilization, on page 38
- show archive log config, on page 39
- show arp access-lists, on page 40

show aaa accounting

show aaa accounting

Syntax Description

| | |
|------------|---------------------------------|
| show | Show running system information |
| aaa | Show aaa information |
| accounting | Show accounting configuration |

Command Mode

- /exec

show aaa authentication

show aaa authentication

show aaa authentication

Syntax Description

| | |
|----------------|-----------------------------------|
| show | Show running system information |
| aaa | Show aaa information |
| authentication | Show authentication configuration |

Command Mode

- /exec

show aaa authentication login

show aaa authentication login { mschap | mschapv2 | chap }

Syntax Description

| | |
|----------------|--|
| show | Show running system information |
| aaa | Show aaa information |
| authentication | Show authentication configuration |
| login | Show authentication login error message configuration |
| mschap | Show authentication login MSCHAP enable configuration |
| mschapv2 | Show authentication login MSCHAP V2 enable configuration |
| chap | Show authentication login CHAP enable configuration |

Command Mode

- /exec

```
show aaa authentication login ascii-authentication
```

show aaa authentication login ascii-authentication

show aaa authentication login ascii-authentication

Syntax Description

| | |
|----------------------|---|
| show | Show running system information |
| aaa | Show aaa information |
| authentication | Show authentication configuration |
| login | Show authentication login message configuration |
| ascii-authentication | Show ascii-authentication configuration |

Command Mode

- /exec

show aaa authentication login error-enable

show aaa authentication login error-enable

Syntax Description

| | |
|----------------|--|
| show | Show running system information |
| aaa | Show aaa information |
| authentication | Show authentication configuration |
| login | Show authentication login error message configuration |
| error-enable | Show authentication login error message enable configuration |

Command Mode

- /exec

```
show aaa authentication login invalid-username-log
```

show aaa authentication login invalid-username-log

show aaa authentication login invalid-username-log

Syntax Description

| | |
|----------------------|---|
| show | Show running system information |
| aaa | Show aaa information |
| authentication | Show authentication configuration |
| login | Show authentication login message configuration |
| invalid-username-log | Show invalid username log configuration |

Command Mode

- /exec

show aaa authorization

show aaa authorization [all]

Syntax Description

| | |
|---------------|---|
| show | Show running system information |
| aaa | Show aaa information |
| authorization | Show authorization configuration |
| all | (Optional) Show all(include defaults configurations) authorization info |

Command Mode

- /exec

```
show aaa bypass-user
```

show aaa bypass-user

show aaa bypass-user [<s0>]

Syntax Description

| | |
|-------------|---------------------------------|
| show | Show running system information |
| aaa | Show aaa information |
| bypass-user | Show bypass user information |
| s0 | (Optional) Enter the username |

Command Mode

- /exec

show aaa client radius statistics

show aaa client radius statistics <host0>

Syntax Description

| | |
|--------------|---|
| show | Show running system information |
| aaa | Show aaa information |
| client | Show AAA client info |
| radius | show radius dynamic authorization client info |
| statistics | show radius dynamic authorization client statistics |
| <i>host0</i> | IPV4/IPV6 address or DNS name of RADIUS client |

Command Mode

- /exec

show aaa groups

show aaa groups

show aaa groups

Syntax Description

| | |
|--------|---------------------------------|
| show | Show running system information |
| aaa | Show aaa information |
| groups | Show configured groups |

Command Mode

- /exec

show aaa local user blocked

show aaa local user blocked

Syntax Description

| | |
|---------|---------------------------------|
| show | Show running system information |
| aaa | Configure aaa functions |
| local | Local username |
| user | Local system user |
| blocked | Display Blocked users |

Command Mode

- /exec

```
show aaa server radius statistics
```

show aaa server radius statistics

show aaa server radius statistics

Syntax Description

| | |
|------------|-------------------------------------|
| show | Show running system information |
| aaa | Show aaa information |
| server | show Local AAA server info |
| radius | show local radius server info |
| statistics | show local radius server statistics |

Command Mode

- /exec

show aaa user blocked

show aaa user blocked

Syntax Description

| | |
|---------|---------------------------------|
| show | Show running system information |
| aaa | Configure aaa functions |
| user | system user |
| blocked | Display blocked users |

Command Mode

- /exec

```
show aaa user default-role
```

show aaa user default-role

show aaa user default-role

Syntax Description

| | |
|--------------|--|
| show | Show running system information |
| aaa | Show aaa information |
| user | Remotely authenticated user |
| default-role | Default role assigned by aaa-admin for remote authentication |

Command Mode

- /exec

show access-list

```
show { system internal | hardware } access-list { summary | [ vdc <vdc_id> ] { [ interface <if_name> | vlan <vlan_id> | inband table <table> ] [ { input | output } { config | { { entries | merge } [ detail ] } | statistics | l4ops | redirect | sampler } ] } } [ module <module> ]
```

Syntax Description

| | |
|----------------|--|
| show | Show running system information |
| system | System-related show commands |
| internal | Commands for internal use |
| hardware | Show hardware information |
| access-list | Access Control List |
| summary | summary |
| vdc | (Optional) vdc id |
| <i>vdc_id</i> | (Optional) vdc_id |
| interface | (Optional) interface name |
| <i>if_name</i> | (Optional) display access list for the interface |
| vlan | (Optional) vlan_id |
| <i>vlan_id</i> | (Optional) vlan_id |
| inband | (Optional) inband interface |
| table | (Optional) vrf table number |
| <i>table</i> | (Optional) vrf table number |
| input | (Optional) input/ingress policies |
| output | (Optional) output/egress policies |
| config | (Optional) parsed policy software database |
| entries | (Optional) tcam entries |
| statistics | (Optional) aggregate statistics |
| l4ops | (Optional) l4 operations information |
| redirect | (Optional) redirect resource information |
| sampler | (Optional) with sampler details |
| merge | (Optional) tcam entries merge information |

show access-list

| | |
|---------------|---------------------------------|
| detail | (Optional) detailed information |
| module | (Optional) Slot/module |
| <i>module</i> | (Optional) Slot/module number |

Command Mode

- /exec

show access-list database

show { system internal | hardware } access-list [vdc <vdc_id>] database { interface | vlan | policy | process } [module <module>]

Syntax Description

| | |
|---------------|---|
| show | Show running system information |
| system | System-related show commands |
| internal | Commands for internal use |
| hardware | Show hardware information |
| access-list | Access Control List |
| vdc | (Optional) vdc id |
| <i>vdc_id</i> | (Optional) vdc_id |
| database | Show memory database |
| interface | display interfaces/vlans in a vdc with policies |
| policy | display policies in a vdc |
| vlan | display vlans in a vdc |
| process | display process database in a vdc |
| module | (Optional) Slot/module |
| <i>module</i> | (Optional) Slot/module number |

Command Mode

- /exec

show access-list resource

show access-list resource

```
show { system internal | hardware } access-list resource { { { entries | l4ops | redirect | ipv6-compression |
mac-compression | aqm-d | aqm-q | oq | opool | prm | hardware-telemetry } [ detail ] } | utilization [ per-feature ]
} | { entry tcam <tcam_id> bank <bank_id> index <index> } | { default-tcam-allocation } } [ no-header ] [
module <module> ]
```

Syntax Description

| | |
|-------------------------|--|
| show | Show running system information |
| system | System-related show commands |
| internal | Commands for internal use |
| hardware | Show hardware information |
| access-list | Access Control List |
| resource | hardware resource |
| entries | tcam entries |
| l4ops | l4 operations information |
| redirect | redirect resource information |
| entry | display hardware information of a tcam entry |
| tcam | tcam id |
| <i>tcam_id</i> | <i>tcam_id</i> |
| bank | bank id |
| <i>bank_id</i> | <i>bank_id</i> |
| index | index within bank |
| <i>index</i> | <i>index</i> withing bank |
| default-tcam-allocation | default tcam allocation |
| utilization | utilization matrix |
| per-feature | THIS KEYWORD OR VARIABLE IS NOT SUPPORTED |
| ipv6-compression | ipv6 compression |
| mac-compression | mac compression table info |
| aqm-d | aqm d params |
| aqm-q | aqm q params |

| | |
|--------------------|---|
| oq | oq profiles |
| opool | opool profiles |
| prm | prm profiles |
| hardware-telemetry | hardware-telemetry resources |
| detail | (Optional) detailed information |
| no-header | THIS KEYWORD OR VARIABLE IS NOT SUPPORTED |
| module | (Optional) Slot/module |
| <i>module</i> | (Optional) Slot/module number |

Command Mode

- /exec

show access-lists

show access-lists

```
show <mpls_acl> access-lists [ <mpls_name> ]
```

Syntax Description

| | |
|------------------|---------------------------------|
| show | Show running system information |
| <i>mpls_acl</i> | mpls acl value |
| access-lists | List access lists |
| <i>mpls_name</i> | (Optional) List name |

Command Mode

- /exec

show accounting log

show accounting log [{ <i0> | start-time <SYYYY> <SMonth> <SDate> <STime> [end-time <EYYYY> <EMonth> <EDate> <ETime>] }]

Syntax Description

| | |
|---------------|--|
| show | Show running system information |
| accounting | Show Accounting Information |
| log | Show Accounting Log |
| <i>i0</i> | (Optional) Log Size(in bytes) |
| start-time | (Optional) Show messages from a given start-time |
| <i>SYYYY</i> | (Optional) Enter year in YYYY format |
| <i>SMonth</i> | (Optional) Enter Month as Jan, Feb, Mar, ..., Oct, Nov, or Dec |
| <i>SDate</i> | (Optional) Enter day of month in dd format |
| <i>STime</i> | (Optional) Enter hour, minutes, seconds as HH:MM:SS |
| end-time | (Optional) Show messages from a given end-time |
| <i>EYYYY</i> | (Optional) Enter year in YYYY format |
| <i>EMonth</i> | (Optional) Enter Month as Jan, Feb, Mar, ..., Oct, Nov, or Dec |
| <i>EDate</i> | (Optional) Enter day of month in dd format |
| <i>ETime</i> | (Optional) Enter hour, minutes, seconds as HH:MM:SS |

Command Mode

- /exec

show accounting log all

show accounting log all

show accounting log all

Syntax Description

| | |
|------------|---|
| show | Show running system information |
| accounting | Show accounting configuration |
| log | Show Accounting Log |
| all | Display accounting log including show commands (Use <terminal log-all> to enable show command accounting) |

Command Mode

- /exec

show accounting log last-index

show accounting log last-index

Syntax Description

| | |
|------------|--|
| show | Show running system information |
| accounting | Show accounting configuration |
| log | Show Accounting Log |
| last-index | Show accounting log last index information |

Command Mode

- /exec

show accounting log nvram

show accounting log nvram

show accounting log nvram [{ <i0> | start-time <SYYYY> <SMonth> <SDate> <STime> [end-time <EYYYY> <EMonth> <EDate> <ETime>] }]

Syntax Description

| | |
|---------------|--|
| show | Show running system information |
| accounting | Show Accounting Information |
| log | Show Accounting Log |
| nvram | present in nvram |
| <i>i0</i> | (Optional) Log Size(in bytes) |
| start-time | (Optional) Show messages from a given start-time |
| <i>SYYYY</i> | (Optional) Enter year in YYYY format |
| <i>SMonth</i> | (Optional) Enter Month as Jan, Feb, Mar, ..., Oct, Nov, or Dec |
| <i>SDate</i> | (Optional) Enter day of month in dd format |
| <i>STime</i> | (Optional) Enter hour, minutes, seconds as HH:MM:SS |
| end-time | (Optional) Show messages from a given end-time |
| <i>EYYYY</i> | (Optional) Enter year in YYYY format |
| <i>EMonth</i> | (Optional) Enter Month as Jan, Feb, Mar, ..., Oct, Nov, or Dec |
| <i>EDate</i> | (Optional) Enter day of month in dd format |
| <i>ETime</i> | (Optional) Enter hour, minutes, seconds as HH:MM:SS |

Command Mode

- /exec

show accounting log nvram last-index

show accounting log nvram last-index

Syntax Description

| | |
|------------|--|
| show | Show running system information |
| accounting | Show accounting configuration |
| log | Show Accounting Log |
| nvram | present in nvram |
| last-index | Show accounting log last index information |

Command Mode

- /exec

show accounting log nvram start-seqnum

show accounting log nvram start-seqnum

show accounting log nvram start-seqnum <SSEQNUM> [end-seqnum <ESEQNUM>]

Syntax Description

| | |
|----------------|--|
| show | Show running system information |
| accounting | Show Accounting Information |
| log | Show Accounting Log |
| nvram | present in nvram |
| start-seqnum | Show messages starting from a given sequence number |
| end-seqnum | (Optional) Show messages ending with a given sequence number |
| <i>SSEQNUM</i> | Enter Starting Sequence Number |
| <i>ESEQNUM</i> | (Optional) Enter Starting Sequence Number |

Command Mode

- /exec

show accounting log start-seqnum

show accounting log start-seqnum <SSEQNUM> [end-seqnum <ESEQNUM>]

Syntax Description

| | |
|----------------|--|
| show | Show running system information |
| accounting | Show Accounting Information |
| log | Show Accounting Log |
| start-seqnum | Show messages starting from a given sequence number |
| end-seqnum | (Optional) Show messages ending with a given sequence number |
| <i>SSEQNUM</i> | Enter Starting Sequence Number |
| <i>ESEQNUM</i> | (Optional) Enter Starting Sequence Number |

Command Mode

- /exec

show acl status

show acl status

show acl status

Syntax Description

| | |
|--------|--|
| show | Show running system information |
| acl | Show information about acl |
| status | Shows the status of last acl operation |

Command Mode

- /exec

show amt process

```
show amt process [ vrf { <vrf-name> | <vrf-known-name> } ]
```

Syntax Description

| | |
|-----------------------|--|
| show | Show running system information |
| amt | AMT show commands |
| vrf | (Optional) Display information for VRF |
| <i>vrf-name</i> | (Optional) VRF name |
| <i>vrf-known-name</i> | (Optional) Known VRF name |
| process | Display AMT process information |

Command Mode

- /exec

show amt vrf all

show amt vrf all

show amt vrf all

Syntax Description

| | |
|------|---------------------------------------|
| show | Show running system information |
| amt | AMT show commands |
| vrf | Display all VRFs AMT is configured in |
| all | Display all VRFs AMT is configured in |

Command Mode

- /exec

show app-hosting bridge

show app-hosting bridge

Syntax Description

| | |
|-------------|---------------------------------|
| show | Show running system information |
| app-hosting | State of app-hosting feature |
| bridge | List the app-hosting bridges |

Command Mode

- /exec

show app-hosting detail

show app-hosting detail

show app-hosting detail [appid <app-hosting-appid>]

Syntax Description

| | |
|--------------------------|--------------------------------------|
| show | Show running system information |
| app-hosting | State of app-hosting feature |
| detail | Detail information about application |
| appid | (Optional) Application ID |
| <i>app-hosting-appid</i> | (Optional) AppId name |

Command Mode

- /exec

show app-hosting infra

show app-hosting infra

Syntax Description

| | |
|-------------|-------------------------------------|
| show | Show running system information |
| app-hosting | State of app-hosting feature |
| infra | app-hosting framework infra details |

Command Mode

- /exec

show app-hosting list

show app-hosting list

show app-hosting list

Syntax Description

| | |
|-------------|---------------------------------|
| show | Show running system information |
| app-hosting | State of app-hosting feature |
| list | List applications |

Command Mode

- /exec

show app-hosting resource

show app-hosting resource

Syntax Description

| | |
|-------------|---------------------------------|
| show | Show running system information |
| app-hosting | State of app-hosting feature |
| resource | available resources |

Command Mode

- /exec

show app-hosting utilization

show app-hosting utilization

show app-hosting utilization [appid <app-hosting-appid>]

Syntax Description

| | |
|--------------------------|---|
| show | Show running system information |
| app-hosting | State of app-hosting feature |
| utilization | Utilization information about application |
| appid | (Optional) Application ID |
| <i>app-hosting-appid</i> | (Optional) AppId name |

Command Mode

- /exec

show archive log config

```
show archive log config { all | [ user <username> ] [ first-index <first_index> [ last-index <last_index> ] ] }
```

Syntax Description

| | |
|--------------------|---|
| show | Show running system information |
| archive | Show archive configuration |
| log | Show Archive Log |
| config | Show Config Logger information |
| all | List all the records in the config log |
| user | (Optional) List records for specific user in the config log |
| <i>username</i> | (Optional) Username |
| first-index | (Optional) The first record number to display |
| last-index | (Optional) The last record number to display |
| <i>first_index</i> | (Optional) config log first index |
| <i>last_index</i> | (Optional) config log last index |

Command Mode

- /exec

show arp access-lists

show arp access-lists

show arp access-lists [<name>]

Syntax Description

| | |
|--------------|---------------------------------|
| show | Show running system information |
| arp | ARP access-lists |
| access-lists | List access lists |
| <i>name</i> | (Optional) List name |

Command Mode

- /exec