



## C Show Commands

---

- [show callhome](#), on page 6
- [show callhome destination-profile](#), on page 7
- [show callhome destination-profile profile](#), on page 8
- [show callhome destination-profile profile CiscoTAC-1](#), on page 9
- [show callhome destination-profile profile full-txt-destination](#), on page 10
- [show callhome destination-profile profile short-txt-destination](#), on page 11
- [show callhome transport-email](#), on page 12
- [show callhome transport](#), on page 13
- [show callhome user-def-cmds](#), on page 14
- [show cdp](#), on page 15
- [show cdp all](#), on page 16
- [show cdp global](#), on page 17
- [show cdp neighbors](#), on page 18
- [show cdp neighbors detail](#), on page 19
- [show cdp traffic interface2](#), on page 20
- [show cdp traffic interface2 all](#), on page 21
- [show cfs application](#), on page 22
- [show cfs lock](#), on page 23
- [show cfs lock](#), on page 24
- [show cfs merge status](#), on page 25
- [show cfs merge status](#), on page 26
- [show cfs peers](#), on page 27
- [show cfs peers](#), on page 28
- [show cfs regions](#), on page 29
- [show cfs static peers](#), on page 30
- [show cfs status](#), on page 31
- [show checkpoint](#), on page 32
- [show checkpoint](#), on page 33
- [show checkpoint summary](#), on page 34
- [show class-map](#), on page 35
- [show class-map type control-plane](#), on page 36
- [show class-map type network-qos](#), on page 37
- [show cli alias](#), on page 38

- [show cli dynamic integers](#), on page 39
- [show cli dynamic strings](#), on page 40
- [show cli history](#), on page 41
- [show cli interface table](#), on page 42
- [show cli list](#), on page 43
- [show cli syntax](#), on page 44
- [show cli variables](#), on page 45
- [show clock-interface](#), on page 46
- [show clock](#), on page 47
- [show config-profile](#), on page 48
- [show config-profile applied](#), on page 49
- [show config-replace log exec](#), on page 50
- [show config-replace status](#), on page 51
- [show configuration](#), on page 52
- [show configuration](#), on page 53
- [show configuration commit](#), on page 54
- [show configuration failed](#), on page 55
- [show configuration file](#), on page 56
- [show configuration session](#), on page 57
- [show configuration session](#), on page 58
- [show configuration session global-info](#), on page 59
- [show configuration session status](#), on page 60
- [show configuration session summary](#), on page 61
- [show configuration session vsh](#), on page 62
- [show consistency-checker contract](#), on page 63
- [show consistency-checker copp](#), on page 64
- [show consistency-checker copp extended module](#), on page 65
- [show consistency-checker dme interfaces](#), on page 66
- [show consistency-checker dvif-sharing vlan](#), on page 67
- [show consistency-checker egress-xlate private-vlan](#), on page 68
- [show consistency-checker ehm interface](#), on page 69
- [show consistency-checker epbr policy](#), on page 70
- [show consistency-checker epbr service-chain](#), on page 71
- [show consistency-checker fcoe](#), on page 72
- [show consistency-checker fex-interfaces fabric](#), on page 74
- [show consistency-checker fex-interfaces fabric egress-xlate private-vlan](#), on page 75
- [show consistency-checker fex-interfaces fex](#), on page 76
- [show consistency-checker forwarding](#), on page 77
- [show consistency-checker forwarding ipv6](#), on page 78
- [show consistency-checker forwarding single-route ipv4 vrf](#), on page 79
- [show consistency-checker fsync](#), on page 80
- [show consistency-checker gwmacdb](#), on page 81
- [show consistency-checker hardware-telemetry inband brief](#), on page 82
- [show consistency-checker hardware-telemetry postcard brief](#), on page 83
- [show consistency-checker itd](#), on page 84
- [show consistency-checker itd ingress interface source destination](#), on page 85

- [show consistency-checker itd ingress vlan](#), on page 86
- [show consistency-checker kim](#), on page 87
- [show consistency-checker kim interface](#), on page 88
- [show consistency-checker l2-tahoe sub-interface](#), on page 89
- [show consistency-checker l2-tahoe sub-interface vlan](#), on page 90
- [show consistency-checker l2-tahoe switchport](#), on page 91
- [show consistency-checker l2 mac-address](#), on page 92
- [show consistency-checker l2 multicast group source vlan](#), on page 93
- [show consistency-checker l2 multicast mac vlan](#), on page 94
- [show consistency-checker l3-interface](#), on page 95
- [show consistency-checker l3 multicast group source vrf](#), on page 96
- [show consistency-checker link-state fabric-ietf](#), on page 97
- [show consistency-checker link-state module](#), on page 98
- [show consistency-checker macsec interface](#), on page 99
- [show consistency-checker membership port-channels](#), on page 100
- [show consistency-checker membership vlan](#), on page 101
- [show consistency-checker module](#), on page 102
- [show consistency-checker monitor session](#), on page 103
- [show consistency-checker multicast nlb cluster-ip vrf](#), on page 104
- [show consistency-checker multicast vlan](#), on page 105
- [show consistency-checker niv-datapath interface](#), on page 106
- [show consistency-checker pacl extended ingress ip interface](#), on page 107
- [show consistency-checker pacl extended ingress ip module](#), on page 108
- [show consistency-checker pacl extended ingress ipv6 module](#), on page 109
- [show consistency-checker pacl extended ingress ipv6 interface](#), on page 110
- [show consistency-checker pacl extended ingress mac module](#), on page 111
- [show consistency-checker pacl extended ingress mac interface](#), on page 112
- [show consistency-checker pacl extended module](#), on page 113
- [show consistency-checker pacl module](#), on page 114
- [show consistency-checker pacl port-channels](#), on page 115
- [show consistency-checker port-state](#), on page 116
- [show consistency-checker port-state fabric-ietf](#), on page 117
- [show consistency-checker pv-mapping](#), on page 118
- [show consistency-checker pv-mapping interface](#), on page 119
- [show consistency-checker qinq](#), on page 120
- [show consistency-checker racl extended egress ipv6 module](#), on page 121
- [show consistency-checker racl extended egress ip module](#), on page 122
- [show consistency-checker racl extended egress ip interface](#), on page 123
- [show consistency-checker racl extended egress ipv6 interface](#), on page 124
- [show consistency-checker racl extended ingress ipv6 interface](#), on page 125
- [show consistency-checker racl extended ingress ip module](#), on page 126
- [show consistency-checker racl extended ingress ipv6 module](#), on page 127
- [show consistency-checker racl extended ingress ip interface](#), on page 128
- [show consistency-checker racl extended module](#), on page 129
- [show consistency-checker racl module](#), on page 130
- [show consistency-checker racl port-channels](#), on page 131

- [show consistency-checker racl svi interface](#), on page 132
- [show consistency-checker segment-routing mpls](#), on page 133
- [show consistency-checker selective-qinq](#), on page 134
- [show consistency-checker selective-qinq interface](#), on page 135
- [show consistency-checker sflow](#), on page 136
- [show consistency-checker storm-control](#), on page 137
- [show consistency-checker stp-state vlan](#), on page 138
- [show consistency-checker tap-aggregation qinq](#), on page 139
- [show consistency-checker tap-aggregation qinq interface](#), on page 140
- [show consistency-checker transceiver](#), on page 141
- [show consistency-checker vacl](#), on page 142
- [show consistency-checker vacl extended ingress ip vlan](#), on page 143
- [show consistency-checker vacl extended ingress ipv6 vlan](#), on page 144
- [show consistency-checker vacl extended ingress mac vlan](#), on page 145
- [show consistency-checker vpc](#), on page 146
- [show consistency-checker vpgrouping interface](#), on page 147
- [show consistency-checker vxlan config-check](#), on page 148
- [show consistency-checker vxlan infra](#), on page 149
- [show consistency-checker vxlan l2 mac-address module](#), on page 150
- [show consistency-checker vxlan l2 module](#), on page 151
- [show consistency-checker vxlan l2pt](#), on page 152
- [show consistency-checker vxlan l3 single-route ipv4 vrf](#), on page 153
- [show consistency-checker vxlan l3 vrf start](#), on page 154
- [show consistency-checker vxlan mh mac-addresses](#), on page 155
- [show consistency-checker vxlan mh pathlist](#), on page 156
- [show consistency-checker vxlan pv](#), on page 157
- [show consistency-checker vxlan pv interface](#), on page 158
- [show consistency-checker vxlan qinq-qinvni](#), on page 159
- [show consistency-checker vxlan qinvni](#), on page 160
- [show consistency-checker vxlan selective-qinvni](#), on page 161
- [show consistency-checker vxlan selective-qinvni interface](#), on page 162
- [show consistency-checker vxlan vlan](#), on page 163
- [show consistency-checker vxlan xconnect](#), on page 164
- [show controller accounting log](#), on page 165
- [show copp diff profile profile2](#), on page 166
- [show copp profile](#), on page 167
- [show copp status](#), on page 168
- [show copyright](#), on page 169
- [show cores](#), on page 170
- [show crypto ca certificates](#), on page 171
- [show crypto ca certificates](#), on page 172
- [show crypto ca certstore](#), on page 173
- [show crypto ca crt](#), on page 174
- [show crypto ca remote-certstore](#), on page 175
- [show crypto ca trustpoints](#), on page 176
- [show crypto ca trustpool](#), on page 177

- [show crypto ca trustpool last download status](#), on page 178
- [show crypto ca trustpool policy](#), on page 179
- [show crypto certificatemap](#), on page 180
- [show crypto key mypubkey ecc](#), on page 181
- [show crypto key mypubkey rsa](#), on page 182
- [show crypto ssh-auth-map](#), on page 183
- [show current](#), on page 184

# show callhome

show callhome

## Syntax Description

show	Show running system information
callhome	Show callhome information

## Command Mode

- /exec

# show callhome destination-profile

show callhome destination-profile

## Syntax Description

show	Show running system information
callhome	Show callhome information
destination-profile	Show callhome destination profile information

## Command Mode

- /exec

# show callhome destination-profile profile

show callhome destination-profile profile <s0>

## Syntax Description

show	Show running system information
callhome	Show callhome information
destination-profile	Show callhome destination profile information
profile	Specify the destination profile
s0	Show information for user defined destination profile

## Command Mode

- /exec



# show callhome destination-profile profile CiscoTAC-1

show callhome destination-profile profile CiscoTAC-1

## Syntax Description

show	Show running system information
callhome	Show callhome information
destination-profile	Show callhome destination profile information
profile	Specify the destination profile
CiscoTAC-1	Show information for CiscoTAC-1 destination profile

## Command Mode

- /exec

# show callhome destination-profile profile full-txt-destination

show callhome destination-profile profile full-txt-destination

## Syntax Description

show	Show running system information
callhome	Show callhome information
destination-profile	Show callhome destination profile information
profile	Specify the destination profile
full-txt-destination	Show information for full-txt-destination destination profile

## Command Mode

- /exec

# show callhome destination-profile profile short-txt-destination

show callhome destination-profile profile short-txt-destination

## Syntax Description

show	Show running system information
callhome	Show callhome information
destination-profile	Show callhome destination profile information
profile	Specify the destination profile
short-txt-destination	Show information for short-txt-destination destination profile

## Command Mode

- /exec

# show callhome transport-email

show callhome transport-email

## Syntax Description

show	Show running system information
callhome	Show callhome information
transport-email	Show callhome transport configuration (email)

## Command Mode

- /exec

# show callhome transport

show callhome transport

## Syntax Description

show	Show running system information
callhome	Show callhome information
transport	Show callhome transport configuration (email and http)

## Command Mode

- /exec

# show callhome user-def-cmds

show callhome user-def-cmds

## Syntax Description

show	Show running system information
callhome	Show callhome information
user-def-cmds	Show the cli commands configured for each alert group

## Command Mode

- /exec

# show cdp

```
show cdp { entry { all1 | name <s0> } }
```

## Syntax Description

show	Show running system information
cdp	Show Cisco Discovery Protocol information
entry	Show CDP entries in database
all1	Show all CDP entries in database
name	Show a specific CDP entry matching a name
s0	

## Command Mode

- /exec

# show cdp all

```
show cdp { all | interface <if0> }
```

## Syntax Description

show	Show running system information
cdp	Show Cisco Discovery Protocol information
all	Show all interfaces in CDP database
interface	Show CDP parameters for an interface
<i>if0</i>	

## Command Mode

- /exec



# show cdp global

show cdp global

## Syntax Description

show	Show running system information
cdp	Show Cisco Discovery Protocol information
global	Show CDP global parameters

## Command Mode

- /exec

# show cdp neighbors

show cdp neighbors [ interface <if> ]

## Syntax Description

show	Show running system information
cdp	Show Cisco Discovery Protocol information
neighbors	Show CDP neighbors
interface	(Optional) Show CDP neighbors on an interface
<i>if</i>	(Optional) Specify Interface

## Command Mode

- /exec

# show cdp neighbors detail

show cdp neighbors [ interface <if> ] detail

## Syntax Description

show	Show running system information
cdp	Show Cisco Discovery Protocol information
neighbors	Show CDP neighbors
detail	Show CDP neighbors detailed
interface	(Optional) Show CDP neighbors on an interface
<i>if</i>	(Optional) Specify Interface

## Command Mode

- /exec

# show cdp traffic interface2

show cdp traffic interface2 <if2>

## Syntax Description

show	Show running system information
cdp	Show Cisco Discovery Protocol information
traffic	Show CDP traffic statistics
interface2	Show CDP traffic statistics on an interface
<i>if2</i>	

## Command Mode

- /exec

# show cdp traffic interface2 all

show cdp traffic interface2 all

## Syntax Description

show	Show running system information
cdp	Show Cisco Discovery Protocol information
traffic	Show CDP traffic statistics
interface2	Show CDP traffic statistics on an interface
all	Display all interface traffic

## Command Mode

- /exec

# show cfs application

show cfs application [ { name <cfs-dyn-app-name> | sap <i0> } ]

## Syntax Description

show	Show running system information
cfs	CFS Show Command handler
application	Show locally registered applications
name	(Optional) Show local application information by name
<i>cfs-dyn-app-name</i>	(Optional) Registered name of the local application
sap	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED
<i>i0</i>	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED

## Command Mode

- /exec

# show cfs lock

```
show cfs lock [ { name <cfs-dyn-app-name> | sap <i1> } ]
```

## Syntax Description

show	Show running system information
cfs	CFS Show Command handler
lock	Show state of application's logical/physical locks
name	(Optional) Application name for which the lock status is required
<i>cfs-dyn-app-name</i>	(Optional) Registered name of the local application
sap	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED
<i>i1</i>	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED

## Command Mode

- /exec

# show cfs lock

```
show cfs lock [ { name <cfs-dyn-app-name> [ vsan <i0> ] | sap <i1> [ vsan1 <i2> ] } ]
```

## Syntax Description

show	Show running system information
cfs	CFS Show Command handler
lock	Show state of application's logical/physical locks
name	(Optional) Application name for which the lock status is required
<i>cfs-dyn-app-name</i>	(Optional) Registered name of the local application
vsan	(Optional) Show application's locks per vsan
<i>i0</i>	(Optional) Vsan Range
sap	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED
<i>i1</i>	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED
vsan1	(Optional) Show application's locks per vsan
<i>i2</i>	(Optional) Vsan Range

## Command Mode

- /exec



# show cfs merge status

```
show cfs merge status [ { name <cfs-dyn-app-name> [ vsan <i0> ] | sap <i1> [ vsan1 <i2> ] } ]
```

## Syntax Description

show	Show running system information
cfs	CFS Show Command handler
merge	Show cfs merge information
status	Show status of merge
name	(Optional) Show merge status by name
<i>cfs-dyn-app-name</i>	(Optional) Registered name of the local application
vsan	(Optional) Show merge information based on vsan
<i>i0</i>	(Optional) Vsan Range
sap	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED
<i>i1</i>	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED
vsan1	(Optional) Show merge information based on vsan
<i>i2</i>	(Optional) Vsan Range

## Command Mode

- /exec

## show cfs merge status

show cfs merge status [ { name <cfs-dyn-app-name> [ detail ] | sap <i1> [ detail2 ] } ]

### Syntax Description

show	Show running system information
cfs	CFS Show Command handler
merge	Show cfs merge information
status	Show status of merge
name	(Optional) Show merge status by name
<i>cfs-dyn-app-name</i>	(Optional) Registered name of the local application
detail	(Optional) Show merge status by name in detail
sap	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED
<i>il</i>	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED
detail2	(Optional) Show merge status by sap in detail

### Command Mode

- /exec

# show cfs peers

```
show cfs peers [ { name <cfs-dyn-app-name> [ vsan <i0> ] | sap <i1> [ vsan1 <i2> ] } ]
```

## Syntax Description

show	Show running system information
cfs	CFS Show Command handler
peers	Show all the peers in the physical fabric
name	(Optional) Show peers for given application name
<i>cfs-dyn-app-name</i>	(Optional) Registered name of the local application
vsan	(Optional) Show peers for a specified vsan(s)
<i>i0</i>	(Optional) Vsan Range
sap	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED
<i>i1</i>	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED
vsan1	(Optional) Show peers for a specified vsan(s)
<i>i2</i>	(Optional) Vsan Range

## Command Mode

- /exec

# show cfs peers

show cfs peers [ { name <cfs-dyn-app-name> | sap <i1> } ]

## Syntax Description

show	Show running system information
cfs	CFS Show Command handler
peers	Show all the peers in the physical fabric
name	(Optional) Show peers for given application name
<i>cfs-dyn-app-name</i>	(Optional) Registered name of the local application
sap	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED
<i>i1</i>	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED

## Command Mode

- /exec

# show cfs regions

```
show cfs regions [ { brief [ region <i0> ] | name <cfs-dyn-app-name> | region1 <i1> } ]
```

## Syntax Description

show	Show running system information
cfs	CFS Show Command handler
regions	Show all the applications with peers and region information
brief	(Optional) Show all configured regions and applications(no peers)
region	(Optional) Show all configured applications(no peers)
<i>i0</i>	(Optional) Region Id
name	(Optional) Show peers and region information for a given application
<i>cfs-dyn-app-name</i>	(Optional) Registered name of the local application
region1	(Optional) Show all configured applications with peers
<i>i1</i>	(Optional) Region Id

## Command Mode

- /exec

# show cfs static peers

show cfs static peers

## Syntax Description

show	Show running system information
cfs	CFS Show Command handler
static	Show all static peers with status
peers	Show all configured static peers with status

## Command Mode

- /exec

# show cfs status

show cfs status

## Syntax Description

show	Show running system information
cfs	CFS Show Command handler
status	Show current status of CFS

## Command Mode

- /exec

# show checkpoint

show checkpoint <chkpoint\_name> [ all ]

## Syntax Description

show	Show running system information
checkpoint	Show configuration rollback checkpoint contents
<i>chkpoint_name</i>	Checkpoint name
all	(Optional) Show default config

## Command Mode

- /exec



# show checkpoint

show checkpoint [ all ] [ user | system ]

## Syntax Description

show	Show running system information
checkpoint	Show configuration rollback checkpoints
all	(Optional) Show default config
user	(Optional) Show only user configuration rollback checkpoints
system	(Optional) Show only system configuration rollback checkpoints

## Command Mode

- /exec

# show checkpoint summary

show checkpoint summary [ user | system ]

## Syntax Description

show	Show running system information
checkpoint	Show configuration rollback checkpoints
summary	Show configuration rollback checkpoints summary
user	(Optional) Show only user configuration rollback checkpoints summary
system	(Optional) Show only system configuration rollback checkpoints summary

## Command Mode

- /exec

# show class-map

```
show class-map [ { [ type qos ] [ <imap-name> | xxx <color-map-enum-name> ] } | { type queuing [ yyy
<imap-enum-name> | zzz <default-imap-enum-name> | <imap-dce-name> | <imap-name-hque> ] } ]
```

## Syntax Description

xxx	(Optional) xxx
yyy	(Optional) yyy
zzz	(Optional) zzz
show	Show running system information
class-map	Show class maps
type	(Optional) Type of the class-map
qos	(Optional) type qos
queuing	(Optional) type queuing
<i>imap-name</i>	(Optional) class map name
<i>imap-enum-name</i>	(Optional)
<i>default-imap-enum-name</i>	(Optional)
<i>imap-dce-name</i>	(Optional) Queuing class-map name
<i>imap-name-hque</i>	(Optional) Hierarchical class-map name
<i>color-map-enum-name</i>	(Optional)

## Command Mode

- /exec

# show class-map type control-plane

show class-map type control-plane [ <omap-name> ]

## Syntax Description

show	Show running system information
class-map	Show class maps
type	Type of the class-map
control-plane	This is for copp policy
<i>omap-name</i>	(Optional) Name of the class-map

## Command Mode

- /exec

# show class-map type network-qos

show class-map type network-qos [ <omap-name-nq> ]

## Syntax Description

show	Show running system information
class-map	Show class maps
type	Type of the class-map
<i>omap-name-nq</i>	(Optional) Class-map name
network-qos	type network-qos

## Command Mode

- /exec

# show cli alias

show cli alias [ name <s0> ]

## Syntax Description

show	Show running system information
cli	Show CLI information
alias	Display the alias configuration
name	(Optional) Display a specific alias
s0	(Optional) Specify the alias

## Command Mode

- /exec

# show cli dynamic integers

show cli dynamic integers [ <name> ]

## Syntax Description

show	Show running system information
cli	CLI commands
dynamic	Display current range of dynamic parameters
integers	Display current range of dynamic integer parameters
<i>name</i>	(Optional) name of the dynamic parameter

## Command Mode

- /exec

# show cli dynamic strings

show cli dynamic strings [ <name> ]

## Syntax Description

show	Show running system information
cli	CLI commands
dynamic	Display current range of dynamic parameters
strings	Display current range of dynamic string parameters
<i>name</i>	(Optional) name of the dynamic parameter

## Command Mode

- /exec



# show cli history

show cli history [ this-mode-only | exec-mode | config-mode ] [ <count> | unformatted ] +

## Syntax Description

show	Show running system information
cli	debug cli
history	history of cli commands
<i>count</i>	(Optional) number of lines to display (from end)
unformatted	(Optional) display just the commands
this-mode-only	(Optional) display history from current mode only
exec-mode	(Optional) display history of exec commands only
config-mode	(Optional) display history of config commands only

## Command Mode

- /exec

# show cli interface table

show cli interface table

## Syntax Description

show	show
cli	cli
interface	interface
table	table

## Command Mode

- /exec

# show cli list

show cli list [ detail | recurse | <component> | <max-per-cmd> | has-xml-out ] +

## Syntax Description

show	Show running system information
cli	Show CLI information
list	show
<i>component</i>	(Optional) component
<i>max-per-cmd</i>	(Optional) max
has-xml-out	(Optional) show
recurse	(Optional) go
detail	(Optional) formats

## Command Mode

- /exec

# show cli syntax

show cli syntax [ long | recurse ] + [ has-xml-out | has-no-xml-out | is-data-modeled | has-no-data-modeled | has-dme-exempt ] [ roles [ network-admin | network-operator | <roles-mask> ] ]

## Syntax Description

show	Show running system information
cli	Show CLI information
syntax	show
long	(Optional) use
recurse	(Optional) also
has-xml-out	(Optional) show
has-no-xml-out	(Optional) show
is-data-modeled	(Optional) show
has-no-data-modeled	(Optional) config
has-dme-exempt	(Optional) config
roles	(Optional) show
network-admin	(Optional) show
network-operator	(Optional) show
<i>roles-mask</i>	(Optional) show

## Command Mode

- /exec

# show cli variables

show cli variables

## Syntax Description

show	Show running system information
cli	Show CLI information
variables	Show CLI variables

## Command Mode

- /exec

# show clock-interface

show clock-interface

## Syntax Description

clock-interface	Show clock-interface information
-----------------	----------------------------------

## Command Mode

- /exec

# show clock

show clock [ detail ]

## Syntax Description

show	Show running system information
clock	Display current Date
detail	(Optional) Display current date and summertime configuration

## Command Mode

- /exec

# show config-profile

show config-profile [ name <all\_conf\_profile\_name> ]

## Syntax Description

show	Show running system information
config-profile	Show config-profiles
name	(Optional) config-profile name
<i>all_conf_profile_name</i>	(Optional) Enter the name of configuration profile

## Command Mode

- /exec



# show config-profile applied

show config-profile { applied [ auto | manually ] | non-applied } [ match-name <profile\_substring> ]

## Syntax Description

show	Show running system information
config-profile	Show config-profiles
applied	List of config-profiles that are applied
auto	(Optional) List of config-profiles that are applied via auto-config
manually	(Optional) List of all config-profiles which were applied directly from cli
non-applied	List of config-profiles that are not applied
match-name	(Optional) List of all config-profiles that have matching sub-string

## Command Mode

- /exec

# show config-replace log exec

show config-replace log { exec | verify }

## Syntax Description

show	Show running system information
config-replace	Show config-replace
log	show config-replace log
exec	show config-replace execution log
verify	show config-replace verify log

## Command Mode

- /exec

# show config-replace status

show config-replace status

## Syntax Description

show	Show running system information
config-replace	show config-replace
status	show status of last configure replace operation

## Command Mode

- /exec

# show configuration

show configuration { commit list | dual-stage sessions }

## Syntax Description

show	Show running system information
configuration	Show information about configuration sessions
commit	commit information
list	Information about commit-id
dual-stage	Active dual stage session
sessions	Users with active configuration sessions

## Command Mode

- /exec

# show configuration

show configuration

## Syntax Description

show	Show running system information
configuration	Show information about configuration sessions

## Command Mode

- /exec

# show configuration commit

show configuration commit { changes <conf-commit-id> | <conf-commit-id> | log }

## Syntax Description

show	Show running system information
configuration	Show information about configuration sessions
commit	commit information
changes	difference in committed configs
<i>conf-commit-id</i>	commit ID
log	Displays execution logs of last commit

## Command Mode

- /exec

# show configuration failed

show configuration failed [ noerrors ]

## Syntax Description

show	Show running system information
configuration	Show information about configuration sessions
failed	Contents of failed configuration
noerrors	(Optional) Failed items in last commit (exclude error reasons)

## Command Mode

- /exec

# show configuration file

show configuration file <uri0> [ clear-text ]

## Syntax Description

show	Show running system information
configuration	Show information about configuration sessions
file	Displays content of files
<i>uri0</i>	Filename to be displayed
clear-text	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED

## Command Mode

- /exec



# show configuration session

show configuration session <s3>

## Syntax Description

show	Show running system information
configuration	Show information about configuration sessions
session	Show active configuration sessions
s3	Shows configuration session given a name

## Command Mode

- /exec

# show configuration session

show configuration session

## Syntax Description

show	Show running system information
configuration	Show information about configuration sessions
session	Show active configuration sessions

## Command Mode

- /exec

# show configuration session global-info

show configuration session global-info

## Syntax Description

show	Show running system information
configuration	Show information about configuration sessions
session	Show active configuration sessions
global-info	Show configuration sessions global-info

## Command Mode

- /exec

# show configuration session status

show configuration session status [ <s3> ]

## Syntax Description

show	Show running system information
configuration	Show information about configuration sessions
session	Show active configuration sessions
status	Show configuration session-mgr status
s3	(Optional) Shows configuration session status given a name

## Command Mode

- /exec

# show configuration session summary

show configuration session summary

## Syntax Description

show	Show running system information
configuration	Show information about configuration sessions
session	Show active configuration sessions
summary	Show summary of the active configuration sessions

## Command Mode

- /exec

# show configuration session vsh

show configuration session <s3> vsh

## Syntax Description

show	Show running system information
configuration	Show information about configuration sessions
session	Show active configuration sessions
s3	Shows configuration session given a name
vsh	

## Command Mode

- /exec

# show consistency-checker contract

```
show consistency-checker contract { vrf { all | <vrf-known-name> } | rule <rule-id> } [ debug-logs ] [ brief
| detail ]
```

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
contract	Security Contracts
vrf	Do consistency check for vrf
all	Check for all vrfs
<i>vrf-known-name</i>	Known VRF name
rule	Do consistency check for particular rule
<i>rule-id</i>	Enter rule ID
debug-logs	(Optional) dump debug logs to file on bootflash
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker copp

show consistency-checker copp

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
copp	Verify copp programming from software context

## Command Mode

- /exec



# show consistency-checker copp extended module

show consistency-checker copp extended module <module-id> [ brief | detail ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
copp	Verify copp programming from software context
extended	extended
module	Limit display to this module
<i>module-id</i>	Enter module number
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker dme interfaces

show consistency-checker dme interfaces

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
dme	DME (ObjectStore)
interfaces	interfaces oper data

## Command Mode

- /exec

## show consistency-checker dvif-sharing vlan

show consistency-checker dvif-sharing vlan <vlanid> [ group <group\_ip> | destination-mac <dst\_mac> ]

### Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
dvif-sharing	Verifies dvif-sharing feature
vlan	Consistency check for vlan flood
<i>vlanid</i>	Enter vlan id
group	(Optional) Consistency check for a mcast group
<i>group_ip</i>	(Optional) Multicast IP address of single group to display
destination-mac	(Optional) Consistency check for a destination-mac
<i>dst_mac</i>	(Optional) Multicast Destination mac Address for Vlan to display

### Command Mode

- /exec

# show consistency-checker egress-xlate private-vlan

show consistency-checker egress-xlate private-vlan <vlan>

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
egress-xlate	Check PVLAN egress-xlate
private-vlan	Verifies private-vlan egress-xlate in the hardware
<i>vlan</i>	Enter private-vlan id

## Command Mode

- /exec

# show consistency-checker ehm interface

show consistency-checker ehm interface { <intf> | all }

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
ehm	Show EHM Info
interface	Show interface status and information
<i>intf</i>	Virtual Interface
all	Display All Interfaces

## Command Mode

- /exec

# show consistency-checker epbr policy

show consistency-checker epbr policy { <policyName> | all } [ brief | detail ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
epbr	Enhanced Policy-Based Redirect
policy	Policy
<i>policyName</i>	EPBR policy name
all	Check all EPBR policies
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker epbr service-chain

```
show consistency-checker epbr service-chain { <svcChainName> | all } [ brief | detail ]
```

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
epbr	Enhanced Policy-Based Redirect
service-chain	Service-chain
<i>svcChainName</i>	EPBR service-chain name
all	Check all EPBR service-chains
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

## show consistency-checker fcoe

```
show consistency-checker fcoe [ { interface <ifl> [ { exclude ping } ] } | { npv [ server-interface <svr_ifl>
external-interface <ext_ifl> ] } | { hw-table { pif | vif | ucpcfg | vsan | acl | fib [ flogi | domain [ local | remote
] ] | fcf | zone | mac } } | { [ exclude ] ping } | { drop [ ingress | egress ] } | qos ] [ verbose [ detail ] ]
```

### Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
fcoe	FCoE manager
interface	(Optional) Interface Test
<i>ifl</i>	(Optional) Interface name
npv	(Optional) NPV server to external interface pinning test
server-interface	(Optional) Server Interface Name
<i>svr_ifl</i>	(Optional) Server Interface name
external-interface	(Optional) External Interface Name
<i>ext_ifl</i>	(Optional) External Interface name
hw-table	(Optional) Consistency checker for Hardware Tables
pif	(Optional) PIF Table Test
vif	(Optional) VIF Table Test
ucpcfg	(Optional) Port-channel Program Table Test
vsan	(Optional) VSAN VLAN related tables
acl	(Optional) ACL Test
fib	(Optional) FIB Test
flogi	(Optional) FIB Test for FLOGIs
domain	(Optional) FIB Test for domains
local	(Optional) FIB Test for local domains
remote	(Optional) FIB Test for remote domains
fcf	(Optional) FCF Test
zone	(Optional) ZONE Test
mac	(Optional) MAC Table Test



exclude	(Optional) Exclude given test
ping	(Optional) FCPING Test
drop	(Optional) Hardware drops
ingress	(Optional) Ingress Drop Test
egress	(Optional) Egress Drop Test
qos	(Optional) QOS Test
verbose	(Optional) To get debugs
detail	(Optional) To get detailed debugs

**Command Mode**

- /exec

## show consistency-checker fex-interfaces fabric

show consistency-checker fex-interfaces fabric <ch-id> [ membership { vlan <vlan-id> } | stp-state { vlan <vlan-id> } ] [ brief | detail ]

### Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
fex-interfaces	Compares software and hardware state of fex interfaces
fabric	Limits display for fabric port-channel
<i>ch-id</i>	Port-Channel name
membership	(Optional) Check various memberships
stp-state	(Optional) Verify spanning tree state in the hardware
vlan	(Optional) VLAN
<i>vlan-id</i>	(Optional) vlan number
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

### Command Mode

- /exec

# show consistency-checker fex-interfaces fabric egress-xlate private-vlan

show consistency-checker fex-interfaces fabric <fabric-po> egress-xlate private-vlan <vlan> [ brief | detail ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
fex-interfaces	Compares software and hardware state of fex interfaces
fabric	Fex Fabric poort-channel
<i>fabric-po</i>	Port-Channel name
egress-xlate	Check PVLAN egress-xlate
private-vlan	Verifies private-vlan egress-xlate in the hardware
<i>vlan</i>	Enter private-vlan id
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker fex-interfaces fex

show consistency-checker fex-interfaces { fex <id> | interface <ifid> } [ brief | detail ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
fex-interfaces	Compares software and hardware state of fex interfaces
fex	Limit display to interfaces on this fex
<i>id</i>	Enter module number
interface	Limit display to FEX interface
<i>ifid</i>	FEX interface name
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker forwarding

```
show consistency-checker forwarding [ ip | ipv4 ] [ unicast ] [ suppress-transient ] [ vrf { <vrf-name> | all_vrfs } ] [ module { <module> | all_modules } ]
```

## Syntax Description

show	show
consistency-checker	Consistency Checker
forwarding	Display Forwarding Information
ip	(Optional) ipv4
ipv4	(Optional) ipv4
unicast	(Optional) unicast
suppress-transient	(Optional) Suppress Transient state
vrf	(Optional) check routes for a specific VRF
<i>vrf-name</i>	(Optional) VRF name
module	(Optional) check routes for a specific module
<i>module</i>	(Optional) module number
all_modules	(Optional) all module's
all_vrfs	(Optional) all vrf's

## Command Mode

- /exec

## show consistency-checker forwarding ipv6

```
show consistency-checker forwarding ipv6 [ unicast ] [ suppress-transient ] [ vrf { <vrf-name> | all_vrfs } ]
[ module { <module> | all_modules } ]
```

### Syntax Description

show	show
consistency-checker	Consistency Checker
forwarding	Display Forwarding Information
ipv6	ipv6
unicast	(Optional) unicast
suppress-transient	(Optional) Suppress Transient state
vrf	(Optional) check routes for a specific VRF
<i>vrf-name</i>	(Optional) VRF name
module	(Optional) check routes for a specific module
<i>module</i>	(Optional) module number
all_modules	(Optional) all module's
all_vrfs	(Optional) all vrf's

### Command Mode

- /exec

# show consistency-checker forwarding single-route ipv4 vrf

```
show consistency-checker forwarding single-route { ipv4 | ipv6 } <ip-prefix> vrf { <vrf-name> |
<vrf-known-name> } [ brief | detail ]
```

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
forwarding	Display Forwarding Information
single-route	Run the consistency checker for a single route
ipv4	IPv4 address
ipv6	IPv6 address
<i>ip-prefix</i>	Specify an IP prefix/mask
vrf	check routes for a specific VRF
<i>vrf-name</i>	VRF name
<i>vrf-known-name</i>	Known VRF name
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker fsync

show consistency-checker fsync [ debug-logs ] [ brief | detail ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
fsync	Do consistency check for frequency synchronization
debug-logs	(Optional) dump debug logs to file on bootflash
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec



# show consistency-checker gwmacdb

show consistency-checker gwmacdb [ interface { <int-id> | <ch-id> | <vlan-id> } ] [ brief | detail ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
gwmacdb	Check gateway mac table
interface	(Optional) interface
<i>int-id</i>	(Optional) Physical or Logical interface
<i>ch-id</i>	(Optional) Port-Channel name
<i>vlan-id</i>	(Optional) SVI VLAN
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker hardware-telemetry inband brief

show consistency-checker hardware-telemetry inband { brief | detail }

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
hardware-telemetry	feature hardware-telemetry
inband	inband-telemetry version
brief	Show consistency checker structured output in brief
detail	Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker hardware-telemetry postcard brief

show consistency-checker hardware-telemetry postcard { brief | detail }

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
hardware-telemetry	feature hardware-telemetry
postcard	postcard-telemetry version
brief	Show consistency checker structured output in brief
detail	Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker itd

show consistency-checker itd { <svcName> | all } [ brief | detail ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
itd	Intelligent traffic director
<i>svcName</i>	ITD service name
all	check all ITD services
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker itd ingress interface source destination

```
show consistency-checker itd ingress interface <intf> source { <src-address> | <src-ipv6-address> } destination
{ <dst-address> | <dst-ipv6-address> } [ brief | detail ]
```

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
itd	Intelligent traffic director
ingress	ingress direction
interface	ITD ingress interface
<i>intf</i>	
source	Do consistency check for source
<i>src-address</i>	source IP address
destination	Do consistency check for destination
<i>dst-address</i>	destination IP address
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker itd ingress vlan

show consistency-checker itd ingress vlan <vlanId> [ brief | detail ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
itd	Intelligent traffic director
ingress	ingress direction
vlan	vlan ID
<i>vlanId</i>	Enter vlan id
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker kim

show consistency-checker kim

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
kim	Kernel Interface

## Command Mode

- /exec

# show consistency-checker kim interface

show consistency-checker kim { interface <ifid> } [ brief | detail ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
kim	kernel interface
interface	Limit display to interface
<i>ifid</i>	Interface
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec



# show consistency-checker l2-tahoe sub-interface

show consistency-checker l2-tahoe sub-interface { <if\_name> } [ brief | detail ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
l2-tahoe	Verify l2 sub-interface programming in the hardware
sub-interface	sub-interface
<i>if_name</i>	Physical or Logical interface
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker l2-tahoe sub-interface vlan

show consistency-checker l2-tahoe sub-interface vlan <vlan-id>

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
l2-tahoe	Verify l2 sub-interface programming in the hardware
sub-interface	sub-interface
vlan	Do consistency check for vlan
<i>vlan-id</i>	vlan number

## Command Mode

- /exec

## show consistency-checker l2-tahoe switchport

```
show consistency-checker l2-tahoe switchport { interface { <if_name> | all } | module { <module> | all } } [
brief | detail ]
```

### Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
l2-tahoe	Verify l2 mac programming in the hardware
switchport	Switchport Interface
interface	interface
<i>if_name</i>	Physical or Logical interface
all	All switchport interfaces
module	Module to run the consistency-checker on
<i>module</i>	Enter module number
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

### Command Mode

- /exec

## show consistency-checker l2 mac-address

```
show consistency-checker { l2-tahoe | l2-s1 } mac-address <mac-addr> [ module <module> ] [ unit <unit> ]
[ brief | detail ]
```

### Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
l2-tahoe	Verify l2 mac programming in the hardware
l2-s1	Verify l2 mac programming in the hardware
mac-address	MAC address
<i>mac-addr</i>	address
module	(Optional) Module to run the consistency-checker on
<i>module</i>	(Optional) Module number
unit	(Optional) Unit to run the consistency checker on
<i>unit</i>	(Optional) Enter Unit Number
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

### Command Mode

- /exec

## show consistency-checker l2 multicast group source vlan

```
show consistency-checker l2 multicast group { <grp-address> | <grp-ipv6-address> } source { <src-address>
| <src-ipv6-address> } vlan <vlan-id> [ debug-logs | display-cc-time ] [ brief | detail ]
```

### Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
l2	Verify l2 mac programming in the hardware
multicast	multicast related information
group	Do consistency check for group
<i>grp-address</i>	group IP address
source	Do consistency check for source
<i>src-address</i>	source IP address
vlan	Do consistency check for vlan
<i>vlan-id</i>	vlan number
debug-logs	(Optional) dump debug logs to file on bootflash
display-cc-time	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

### Command Mode

- /exec

## show consistency-checker l2 multicast mac vlan

show consistency-checker l2 multicast mac <mac-address> vlan <vlan-id> [ debug-logs ] [ brief | detail ]

### Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
l2	Verify l2 mac programming in the hardware
multicast	multicast related information
mac	Do consistency check for multicast mac address lookup
<i>mac-address</i>	mac address
vlan	Do consistency check for vlan
<i>vlan-id</i>	vlan number
debug-logs	(Optional) dump debug logs to file on bootflash
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

### Command Mode

- /exec

# show consistency-checker l3-interface

```
show consistency-checker l3-interface { all | module <moduleid> [ brief | detail ] | interface { <ifid> | <ch-id>
| <vlan-id> } [ brief | detail ] }
```

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
l3-interface	Compares software and hardware properties of L3 interfaces
all	Run on all modules on the switch
module	Limit display to interfaces on module
<i>moduleid</i>	Module number
interface	Limit display to interface
<i>ifid</i>	Interface name
<i>ch-id</i>	Port-Channel name
<i>vlan-id</i>	SVI VLAN
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

## show consistency-checker l3 multicast group source vrf

```
show consistency-checker l3 multicast [ overlay-only ] group { <grp-address> [ <mask> ] | <gprefix> |
<grp-ipv6-address> } source { <src-address> | <src-ipv6-address> } vrf { <vrf-name> | <vrf-known-name>
} [ debug-logs | display-cc-time ] [ brief | detail ]
```

### Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
l3	l3 consistency
multicast	multicast related information
overlay-only	(Optional) perform cc for trm overlay info only
group	Do consistency check for group
<i>grp-address</i>	group IP address
<i>mask</i>	(Optional) mask for group ip address
<i>gprefix</i>	IPv4 Multicast Group Prefix
source	Do consistency check for source
<i>src-address</i>	source IP address
vrf	Do consistency check for vrf
<i>vrf-name</i>	VRF name
<i>vrf-known-name</i>	Known VRF name
debug-logs	(Optional) dump debug logs to file on bootflash
display-cc-time	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

### Command Mode

- /exec



# show consistency-checker link-state fabric-ieth

```
show consistency-checker link-state fabric-ieth { [ module <module> ] } [ brief | detail ]
```

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
link-state	Compares software and hardware link state of interfaces
fabric-ieth	Internal Fabric ports
module	(Optional) Limit display to interfaces on module
<i>module</i>	(Optional) Enter module number
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker link-state module

show consistency-checker link-state { module <module> | interface <ifid> } [ brief | detail ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
link-state	Compares software and hardware link state of interfaces
module	Limit display to interfaces on module
<i>module</i>	Module number
interface	Limit display to interface
<i>ifid</i>	Interface name
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker macsec interface

show consistency-checker macsec interface { <if\_name> | all } [ brief | detail ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
macsec	Check macsec
interface	interface info
<i>if_name</i>	Physical or Logical interface
all	All switchport interfaces
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker membership port-channels

show consistency-checker membership port-channels [ interface <ch-id> ] [ brief | detail ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
membership	Check various memberships
port-channels	Verifies port channel membership in the hardware
interface	(Optional) Port-channel number
<i>ch-id</i>	(Optional) Port-Channel name
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

## show consistency-checker membership vlan

```
show consistency-checker membership vlan { <vlanid> [ [ interface [ <intf-id> | <ch-id> ] ] ] [ private-vlan [
interface [ <int-id> | <ch-id> ] ] ] [ <vlan_id> ] ] [ native-vlan ] } [ brief | detail ]
```

### Syntax Description

show	Show running system information
vlan	Verifies vlan membership in the hardware
<i>vlanid</i>	Enter vlan id
<i>vlan_id</i>	(Optional) Enter end of range of vlan id - limit to 50 for optimal time
consistency-checker	Consistency Checker
membership	Check various memberships
interface	(Optional) Interface
<i>intf-id</i>	(Optional) Interface
<i>ch-id</i>	(Optional) Port-Channel name
private-vlan	(Optional) Check private-vlan primary vlan
interface	(Optional) Interface
<i>int-id</i>	(Optional) Interface name
<i>ch-id</i>	(Optional) Port-Channel name
native-vlan	(Optional) Check for native vlans
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

### Command Mode

- /exec

# show consistency-checker module

show consistency-checker { l2-tahoe | l2-mtc | l2-s1 } module <module> [ unit <unit> ] [ brief | detail ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
l2-tahoe	Verify l2 mac programming in the hardware
l2-mtc	Verify l2 mac programming in the hardware
l2-s1	Verify l2 mac programming in the hardware
module	Module to run the consistency-checker on
<i>module</i>	Enter module number
unit	(Optional) Unit to run the consistency checker on
<i>unit</i>	(Optional) Enter unit number
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker monitor session

show consistency-checker monitor session { <session-id> | all } [ debug ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
monitor	Configure Ethernet SPAN sessions
session	Configure session preferences
<i>session-id</i>	Enter monitor session id
all	All sessions
debug	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED

## Command Mode

- /exec

## show consistency-checker multicast nlb cluster-ip vrf

show consistency-checker multicast nlb cluster-ip <ip-address> vrf { <vrf-name> | <vrf-known-name> } [ debug-logs ] [ brief | detail ]

### Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
multicast	multicast related information
nlb	Do consistency check for Multicast NLB
cluster-ip	Cluster virtual unicast IP address
<i>ip-address</i>	Cluster IP address
vrf	Do consistency check for vrf
<i>vrf-name</i>	VRF name
<i>vrf-known-name</i>	Known VRF name
debug-logs	(Optional) dump debug logs to file on bootflash
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

### Command Mode

- /exec



# show consistency-checker multicast vlan

```
show consistency-checker multicast vlan <vlanid> [ group <group_ip> | destination-mac <dst_mac> ]
```

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
multicast	Verify Multicast
vlan	Verifies vlan flood sharing
<i>vlanid</i>	Enter vlan id
group	(Optional) Do consistency check for a group
<i>group_ip</i>	(Optional) Multicast IP address of single group to display
destination-mac	(Optional) Do consistency check for a destination-mac
<i>dst_mac</i>	(Optional) Multicast Destination mac Address for Vlan to display

## Command Mode

- /exec

# show consistency-checker niv-datapath interface

```
show consistency-checker niv-datapath interface [ <intf> | veth-all ]
```

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
niv-datapath	Verify NIV Datapath for a given interface
interface	Show interface status and information
<i>intf</i>	(Optional) Virtual interface
veth-all	(Optional) Run consistency-checker for all Veths

## Command Mode

- /exec

# show consistency-checker pacl extended ingress ip interface

show consistency-checker pacl extended ingress ip interface { <int-id> | <ch-id> } [ brief | detail ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
pacl	Verify pacl programming in the hardware
extended	extended
ingress	ingress direction
ip	ip protocol
interface	Interface
<i>int-id</i>	Interface
<i>ch-id</i>	Port-Channel name
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker pacl extended ingress ip module

show consistency-checker pacl extended ingress ip module <module-id> [ brief | detail ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
pacl	Verify pacl programming in the hardware
extended	extended
ingress	ingress direction
ip	ip protocol
module	Limit display to L2 interfaces on this module
<i>module-id</i>	Enter module number
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker pacl extended ingress ipv6 module

show consistency-checker pacl extended ingress ipv6 module <module-id> [ brief | detail ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
pacl	Verify pacl programming in the hardware
extended	extended
ingress	ingress direction
ipv6	ipv6 protocol
module	Limit display to L2 interfaces on this module
<i>module-id</i>	Enter module number
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker pacl extended ingress ipv6 interface

show consistency-checker pacl extended ingress ipv6 interface { <int-id> | <ch-id> } [ brief | detail ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
pacl	Verify pacl programming in the hardware
extended	extended
ingress	ingress direction
ipv6	ipv6 protocol
interface	Interface
<i>int-id</i>	Interface
<i>ch-id</i>	Port-Channel name
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker pacl extended ingress mac module

show consistency-checker pacl extended ingress mac module <module-id> [ brief | detail ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
pacl	Verify pacl programming in the hardware
extended	extended
ingress	ingress direction
mac	ethernet protocol
module	Limit display to L2 interfaces on this module
<i>module-id</i>	Enter module number
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker pacl extended ingress mac interface

show consistency-checker pacl extended ingress mac interface { <int-id> | <ch-id> } [ brief | detail ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
pacl	Verify pacl programming in the hardware
extended	extended
ingress	ingress direction
mac	ethernet protocol
interface	Interface
<i>int-id</i>	Interface
<i>ch-id</i>	Port-Channel name
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec



# show consistency-checker pacl extended module

show consistency-checker pacl extended module { all | <module-id> } [ brief | detail ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
pacl	Verify pacl programming in the hardware
extended	extended
module	Limit display to L2 interfaces on this module
all	To run cc across all the modules
<i>module-id</i>	Enter module number
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker pacl module

show consistency-checker pacl module <module>

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
pacl	Verify pacl programming in the hardware
module	Limit display to L2 interfaces on this module
<i>module</i>	Enter module number

## Command Mode

- /exec

# show consistency-checker pacl port-channels

show consistency-checker pacl port-channels [ interface <ch-id> ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
pacl	Verify pacl programming in the hardware
port-channels	Verifies port channel pacl programming in the hardware
interface	(Optional) Port-channel number
<i>ch-id</i>	(Optional) Port-Channel name

## Command Mode

- /exec

# show consistency-checker port-state

```
show consistency-checker port-state [ { module <module> | interface <ifid> } ] [ brief | detail ]
```

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
port-state	Validates SI, MTU and IPG Settings
module	(Optional) Limit display to interfaces on module
<i>module</i>	(Optional) Enter module number
interface	(Optional) Limit display to interface
<i>ifid</i>	(Optional) Interface name
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

## show consistency-checker port-state fabric-ieth

```
show consistency-checker port-state fabric-ieth [ module <module> [ ieth-port <ieth-port> ] ] [ brief | detail ]
```

### Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
port-state	Validates SI, FEC and MTU Settings
fabric-ieth	Internal Fabric ports
module	(Optional) Limit display to interfaces on module
<i>module</i>	(Optional) Enter module number
ieth-port	(Optional) Enter ieth-port number
<i>ieth-port</i>	(Optional) Enter ieth-port number
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

### Command Mode

- /exec

# show consistency-checker pv-mapping

show consistency-checker pv-mapping

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
pv-mapping	pv-mapping consistency checker

## Command Mode

- /exec

# show consistency-checker pv-mapping interface

show consistency-checker pv-mapping interface { <int-id> | <ch-id> }

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
pv-mapping	pv-mapping consistency checker
interface	Interface
<i>int-id</i>	Interface
<i>ch-id</i>	Port-Channel name

## Command Mode

- /exec

# show consistency-checker qinq

```
show consistency-checker qinq [ interface [ <int-id> | <ch-id> ] ]
```

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
qinq	QinQ consistency checker
interface	(Optional) Interface
<i>int-id</i>	(Optional) Eth Interface
<i>ch-id</i>	(Optional) Port-Channel

## Command Mode

- /exec



# show consistency-checker racl extended egress ipv6 module

show consistency-checker racl extended egress ipv6 module <module-id> [ brief | detail ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
racl	Verify racl programming in the hardware
extended	extended
egress	egress direction
ipv6	ipv6 protocol
module	Limit display to L3 interfaces on this module
<i>module-id</i>	Enter module number
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker racl extended egress ip module

show consistency-checker racl extended egress ip module <module-id> [ brief | detail ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
racl	Verify racl programming in the hardware
extended	extended
egress	egress direction
ip	ip protocol
module	Limit display to L3 interfaces on this module
<i>module-id</i>	Enter module number
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker racl extended egress ip interface

show consistency-checker racl extended egress ip interface { <int-id> | <ch-id> | <vlan-id> } [ brief | detail ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
racl	Verify racl programming in the hardware
extended	extended
egress	egress direction
ip	ip protocol
interface	Interface
<i>int-id</i>	Interface
<i>ch-id</i>	Port-Channel name
<i>vlan-id</i>	SVI VLAN
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker racl extended egress ipv6 interface

```
show consistency-checker racl extended egress ipv6 interface { <int-id> | <ch-id> | <vlan-id> } [ brief | detail ]
```

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
racl	Verify racl programming in the hardware
extended	extended
egress	egress direction
ipv6	ipv6 protocol
interface	Interface
<i>int-id</i>	Interface
<i>ch-id</i>	Port-Channel name
<i>vlan-id</i>	SVI VLAN
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker racl extended ingress ipv6 interface

```
show consistency-checker racl extended ingress ipv6 interface { <int-id> | <ch-id> | <vlan-id> } [ brief | detail ]
```

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
racl	Verify racl programming in the hardware
extended	extended
ingress	ingress direction
ipv6	ipv6 protocol
interface	Interface
<i>int-id</i>	Interface
<i>ch-id</i>	Port-Channel name
<i>vlan-id</i>	SVI VLAN
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker racl extended ingress ip module

show consistency-checker racl extended ingress ip module <module-id> [ brief | detail ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
racl	Verify racl programming in the hardware
extended	extended
ingress	ingress direction
ip	ip protocol
module	Limit display to L3 interfaces on this module
<i>module-id</i>	Enter module number
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker racl extended ingress ipv6 module

show consistency-checker racl extended ingress ipv6 module <module-id> [ brief | detail ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
racl	Verify racl programming in the hardware
extended	extended
ingress	ingress direction
ipv6	ipv6 protocol
module	Limit display to L3 interfaces on this module
<i>module-id</i>	Enter module number
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker racl extended ingress ip interface

```
show consistency-checker racl extended ingress ip interface { <int-id> | <ch-id> | <vlan-id> } [ brief | detail ]
```

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
racl	Verify racl programming in the hardware
extended	extended
ingress	ingress direction
ip	ip protocol
interface	Interface
<i>int-id</i>	Interface
<i>ch-id</i>	Port-Channel name
<i>vlan-id</i>	SVI VLAN
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec



# show consistency-checker racl extended module

show consistency-checker racl extended module { all | <module-id> } [ brief | detail ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
racl	Verify racl programming in the hardware
extended	extended
module	Limit display to L3 interfaces on this module
all	To run CC across all the modules
<i>module-id</i>	Enter module number
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker racl module

show consistency-checker racl module <module>

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
racl	Verify racl programming in the hardware
module	Limit display to L3 interfaces on this module
<i>module</i>	Enter module number

## Command Mode

- /exec

# show consistency-checker racl port-channels

show consistency-checker racl port-channels [ interface <ch-id> ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
racl	Verify racl programming in the hardware
port-channels	Verifies port channel racl programming in the hardware
interface	(Optional) Port-channel number
<i>ch-id</i>	(Optional) Port-Channel name

## Command Mode

- /exec

# show consistency-checker racl svi interface

show consistency-checker racl svi interface <vlan-id>

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
racl	Verify racl programming in the hardware
svi	Verifies SVI racl programming in the hardware
interface	SVI number
<i>vlan-id</i>	SVI VLAN

## Command Mode

- /exec

# show consistency-checker segment-routing mpls

show consistency-checker segment-routing mpls { ip <ip-address> mask <ip-mask> vrf <vrf-name> | label <label> } [ brief | detail ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
segment-routing	Segment-routing
mpls	MPLS Information
ip	IP Information
<i>ip-address</i>	IP Address
mask	Mask Information
<i>ip-mask</i>	Mask Length
vrf	VRF Information
<i>vrf-name</i>	VRF Name
label	Label Information
<i>label</i>	Label Name
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker selective-qinq

show consistency-checker selective-qinq

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
selective-qinq	Selective QinQ consistency checker

## Command Mode

- /exec

# show consistency-checker selective-qinq interface

show consistency-checker selective-qinq interface { <int-id> | <ch-id> }

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
selective-qinq	Selective QinQ consistency checker
interface	Interface
<i>int-id</i>	Interface
<i>ch-id</i>	Port-Channel name

## Command Mode

- /exec

# show consistency-checker sflow

show consistency-checker sflow [ brief | detail ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
sflow	Compares software and hardware sflow details
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec



# show consistency-checker storm-control

show consistency-checker storm-control [ brief | detail ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
storm-control	Storm control consistency checker
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker stp-state vlan

show consistency-checker stp-state vlan <vlan> [ interface <int-id> ] [ brief | detail ]

## Syntax Description

show	Show running system information
vlan	Verifies spanning tree state in the hardware for all interfaces in the vlan
<i>vlan</i>	Enter vlan id
interface	(Optional) Interface
<i>int-id</i>	(Optional) Interface
consistency-checker	Consistency Checker
stp-state	Verify spanning tree state in the hardware
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker tap-aggregation qinq

show consistency-checker tap-aggregation qinq

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
tap-aggregation	Tap Aggregation Feature
qinq	QinQ consistency checker

## Command Mode

- /exec

# show consistency-checker tap-aggregation qinq interface

show consistency-checker tap-aggregation qinq interface { <int-id> | <ch-id> }

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
tap-aggregation	Tap Aggregation Feature
qinq	QinQ consistency checker
interface	Interface
<i>int-id</i>	Eth Interface
<i>ch-id</i>	Port-Channel

## Command Mode

- /exec

# show consistency-checker transceiver

show consistency-checker transceiver [ { module <module> | interface <ifid> } ] [ brief | detail ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
transceiver	Validates transceiver Settings
module	(Optional) Limit display to interfaces on module
<i>module</i>	(Optional) Enter module number
interface	(Optional) Limit display to interface
<i>ifid</i>	(Optional) Interface name
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker vacl

show consistency-checker vacl

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
vacl	Verify vacl programming in the hardware

## Command Mode

- /exec

# show consistency-checker vACL extended ingress ip vlan

show consistency-checker vACL extended ingress ip vlan <vlan-id> [ brief | detail ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
vACL	Verify vACL programming in the hardware
extended	extended
ingress	ingress direction
ip	ip protocol
vlan	VLAN
<i>vlan-id</i>	vlan number
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker vACL extended ingress ipv6 vlan

show consistency-checker vACL extended ingress ipv6 vlan <vlan-id> [ brief | detail ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
vACL	Verify vACL programming in the hardware
extended	extended
ingress	ingress direction
ipv6	ipv6 protocol
vlan	VLAN
<i>vlan-id</i>	vlan number
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec



# show consistency-checker vACL extended ingress mac vlan

show consistency-checker vACL extended ingress mac vlan <vlan-id> [ brief | detail ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
vACL	Verify vACL programming in the hardware
extended	extended
ingress	ingress direction
mac	ethernet protocol
vlan	VLAN
<i>vlan-id</i>	vlan number
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker vpc

show consistency-checker vpc [ source-interface [ <int-id> | <ch-id> ] ] [ brief | detail ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
vpc	vPC related information
source-interface	(Optional) Source vPC member
<i>int-id</i>	(Optional) Eth Interface
<i>ch-id</i>	(Optional) Port-Channel
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker vpgrouping interface

show consistency-checker vpgrouping interface { <intf> | all }

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
vpgrouping	Show VP Grouping Info
interface	Show interface status and information
<i>intf</i>	Physical or Logical Interface
all	Display All Interfaces

## Command Mode

- /exec

# show consistency-checker vxlan config-check

show consistency-checker vxlan config-check [ verbose-mode ] [ brief | detail ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
vxlan	VxLAN consistency checker
config-check	Check the inconsistencies in the config
verbose-mode	(Optional) config-check verbose
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker vxlan infra

show consistency-checker vxlan infra [ verbose-mode ] [ brief | detail ]

## Syntax Description

show	Show running system information
vxlan	VxLAN consistency checker
consistency-checker	Consistency Checker
infra	infra
verbose-mode	(Optional) detailed CC output
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker vxlan l2 mac-address module

show consistency-checker vxlan l2 mac-address <mac-addr> module <module> [ brief | detail ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
vxlan	VxLAN consistency checker
l2	l2
mac-address	MAC address
<i>mac-addr</i>	address
module	Module to run the consistency-checker on
<i>module</i>	Module number
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker vxlan l2 module

show consistency-checker vxlan l2 module <module> [ brief | detail ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
vxlan	VxLAN consistency checker
l2	Check L2 inconsistencies
module	Module to run the consistency-checker on
<i>module</i>	Enter module number
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker vxlan l2pt

show consistency-checker vxlan l2pt

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
vxlan	VxLAN consistency checker
l2pt	L2pt consistency checker

## Command Mode

- /exec



## show consistency-checker vxlan l3 single-route ipv4 vrf

```
show consistency-checker vxlan l3 single-route { ipv4 | ipv6 } <ip-prefix> vrf { <vrf-name> |
<vrf-known-name> } [ debug-logs ] [ brief | detail ]
```

### Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
vxlan	VxLAN consistency checker
l3	L3
single-route	Run the consistency checker for a single route
ipv4	IPv4 address
ipv6	IPv6 address
<i>ip-prefix</i>	Overlay L3 Route IP Address in prefix/mask format
vrf	Do consistency check for vrf
<i>vrf-name</i>	VRF name
<i>vrf-known-name</i>	Known VRF name
debug-logs	(Optional) dump debug logs to file on bootflash
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

### Command Mode

- /exec

# show consistency-checker vxlan l3 vrf start

show consistency-checker vxlan l3 vrf { <vrf-name> | all } { start-scan | report }

## Syntax Description

show	Show running system information
vxlan	VxLAN consistency checker
consistency-checker	Consistency Checker
l3	l3
vrf	VRF
<i>vrf-name</i>	vrf name
all	All VRFs
start-scan	Start Route CC
report	Show Route CC report

## Command Mode

- /exec

# show consistency-checker vxlan mh mac-addresses

show consistency-checker vxlan mh mac-addresses [ brief | detail ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
vxlan	VxLAN consistency checker
mh	VxLAN BGP EVPN Multi Homing CC commands
mac-addresses	Check mac address consistency between L2RIB and L2FM
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker vxlan mh pathlist

show consistency-checker vxlan mh pathlist [ brief | detail ]

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
vxlan	VxLAN consistency checker
mh	VxLAN BGP EVPN Multi Homing CC commands
pathlist	Check Vxlan BGP EVPN MH Control plane and resultant pathlists consistency
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker vxlan pv

show consistency-checker vxlan pv

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
vxlan	VxLAN consistency checker
pv	PV consistency checker

## Command Mode

- /exec

# show consistency-checker vxlan pv interface

show consistency-checker vxlan pv interface { <int-id> | <ch-id> }

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
vxlan	VxLAN consistency checker
pv	PV consistency checker
interface	Interface
<i>int-id</i>	Interface
<i>ch-id</i>	Port-Channel name

## Command Mode

- /exec

# show consistency-checker vxlan qinq-qinvni

show consistency-checker vxlan qinq-qinvni

## Syntax Description

show	Show running system information
vxlan	VxLAN consistency checker
consistency-checker	Consistency Checker
qinq-qinvni	QinQ consistency checker

## Command Mode

- /exec

# show consistency-checker vxlan qinvni

show consistency-checker vxlan qinvni

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
vxlan	VxLAN consistency checker
qinvni	QinVNI consistency checker

## Command Mode

- /exec



# show consistency-checker vxlan selective-qinvni

show consistency-checker vxlan selective-qinvni

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
vxlan	VxLAN consistency checker
selective-qinvni	Selective QinVNI consistency checker

## Command Mode

- /exec

# show consistency-checker vxlan selective-qinvni interface

show consistency-checker vxlan selective-qinvni interface { <int-id> | <ch-id> }

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
vxlan	VxLAN consistency checker
selective-qinvni	Selective QinVNI consistency checker
interface	Interface
<i>int-id</i>	Interface
<i>ch-id</i>	Port-Channel name

## Command Mode

- /exec

# show consistency-checker vxlan vlan

show consistency-checker vxlan vlan { <vlanid> | all } [ verbose-mode ] [ brief | detail ]

## Syntax Description

show	Show running system information
vxlan	VxLAN consistency checker
vlan	Verifies flood list programming for vxlan vlans
consistency-checker	Consistency Checker
<i>vlanid</i>	Enter vlan id
all	Check CC for all vxlans
verbose-mode	(Optional) detailed CC output
brief	(Optional) Show consistency checker structured output in brief
detail	(Optional) Show consistency checker structured output in detail

## Command Mode

- /exec

# show consistency-checker vxlan xconnect

show consistency-checker vxlan xconnect

## Syntax Description

show	Show running system information
consistency-checker	Consistency Checker
vxlan	VxLAN consistency checker
xconnect	Cross-Connect consistency checker

## Command Mode

- /exec

# show controller accounting log

show controller <ctrl-id> accounting log

## Syntax Description

show	Show running system information
controller	Controller command
<i>ctrl-id</i>	Controller id value
accounting	Accounting
log	Show log information

## Command Mode

- /exec

# show copp diff profile profile2

show copp diff profile <profile\_type> [ prior-ver ] profile2 <profile\_type2>

## Syntax Description

show	Show running system information
copp	Control-Plane Policing
diff	Difference between CoPP Profiles
profile	CoPP Profile
<i>profile_type</i>	CoPP Profile Types
prior-ver	(Optional) Previous Configured Version
profile2	CoPP Profile
<i>profile_type2</i>	CoPP Profile Types

## Command Mode

- /exec

# show copp profile

show copp profile { strict | moderate | lenient | dense }

## Syntax Description

show	Show running system information
copp	Control-Plane Policing
profile	CoPP Profile
strict	display strict profile
moderate	display moderate profile
lenient	display lenient profile
dense	display dense profile

## Command Mode

- /exec

# show copp status

show copp status

## Syntax Description

show	Show running system information
copp	Control-Plane Policing
status	Show the internal status of CoPP

## Command Mode

- /exec



# show copyright

show copyright

## Syntax Description

show	Show running system information
copyright	Copyright information

## Command Mode

- /exec

# show cores

```
show cores [ vdc-all | { vdc [ <e-vdc2> | <vdc-id> ] } ]
```

## Syntax Description

show	Show running system information
cores	show all core dumps for the current vdc
vdc-all	(Optional) show core dumps from all vdes
vdc	(Optional) show all core dumps for the vdc

## Command Mode

- /exec

# show crypto ca certificates

show crypto ca certificates

## Syntax Description

show	Show running system information
crypto	show crypto configuration
ca	show trustpoint configuration
certificates	show various certificates

## Command Mode

- /exec

# show crypto ca certificates

show crypto ca certificates <s0>

## Syntax Description

show	Show running system information
crypto	show crypto configuration
ca	show trustpoint configuration
certificates	show various certificates
s0	trustpoint label

## Command Mode

- /exec

# show crypto ca certstore

show crypto ca certstore

## Syntax Description

show	Show running system information
crypto	Show crypto configuration
ca	show crypto ca configuration
certstore	Show the configured certstore

## Command Mode

- /exec

# show crypto ca crl

show crypto ca crl <s0>

## Syntax Description

show	Show running system information
crypto	show crypto configuration
ca	show trustpoint configuration
crl	show CRL
s0	trustpoint label

## Command Mode

- /exec

# show crypto ca remote-certstore

show crypto ca remote-certstore

## Syntax Description

show	Show running system information
crypto	Show crypto configuration
ca	show crypto ca configuration
remote-certstore	Show remote certstore configuration

## Command Mode

- /exec

# show crypto ca trustpoints

show crypto ca trustpoints

## Syntax Description

show	Show running system information
crypto	show crypto configuration
ca	show trustpoint configuration
trustpoints	show trustpoint configuration

## Command Mode

- /exec



# show crypto ca trustpool

show crypto ca trustpool

## Syntax Description

show	Show running system information
crypto	show crypto information
ca	show trustpool data
trustpool	trustpool contents

## Command Mode

- /exec

# show crypto ca trustpool last download status

show crypto ca trustpool last download status

## Syntax Description

show	Show running system information
crypto	show crypto information
ca	show trustpool data
trustpool	trustpool data
last	last trustpool download status
download	download of trustpool
status	download status

## Command Mode

- /exec

# show crypto ca trustpool policy

show crypto ca trustpool policy

## Syntax Description

show	Show running system information
crypto	show crypto information
ca	show Certificate authority related config
trustpool	show trustpool policy
policy	trustpool configuration

## Command Mode

- /exec

# show crypto certificatemap

show crypto certificatemap

## Syntax Description

show	Show running system information
crypto	show crypto configuration
certificatemap	show certificatemap filters

## Command Mode

- /exec

# show crypto key mypubkey ecc

show crypto key mypubkey ecc

## Syntax Description

show	Show running system information
crypto	show crypto configuration
key	show key configuration
mypubkey	show my public keys configuration
ecc	show my ecc public keys configuration

## Command Mode

- /exec

# show crypto key mypubkey rsa

show crypto key mypubkey rsa

## Syntax Description

show	Show running system information
crypto	show crypto configuration
key	show key configuration
mypubkey	show my public keys configuration
rsa	show my rsa public keys configuration

## Command Mode

- /exec

# show crypto ssh-auth-map

show crypto ssh-auth-map

## Syntax Description

show	Show running system information
crypto	show crypto configuration
ssh-auth-map	show mapping filters applied for ssh authentication

## Command Mode

- /exec

# show current

show current

## Syntax Description

show	Display region configurations
current	Display mst configuration currently used

## Command Mode

- /exec/configure/spanning-tree/mst/configuration