



U Show Commands

- [show uddl, on page 2](#)
- [show uddl global, on page 3](#)
- [show uddl neighbors, on page 4](#)
- [show upgrade history, on page 5](#)
- [show upgrade history details, on page 6](#)
- [show user-account, on page 7](#)
- [show username keypair, on page 8](#)
- [show username passphrase timevalues, on page 9](#)
- [show userpassphrase, on page 10](#)
- [show userpassphrase, on page 11](#)
- [show userpassphrase min-unique, on page 12](#)
- [show userpassphrase sequence alphabet length, on page 13](#)
- [show userpassphrase sequence keyboard length, on page 14](#)
- [show users, on page 15](#)

show udd

show udd [<if0>]

Syntax Description

show	Show running system information
udd	UDLD status and configuration on one or all interfaces
<i>if0</i>	(Optional) Enter an interface name if only one single interface status is desired

Command Mode

- /exec

show udd global

show udd global

Syntax Description

show	Show running system information
udd	UDLD protocol
global	UDLD global status and configuration on all interfaces

Command Mode

- /exec

show udd neighbors

show udd neighbors

Syntax Description

show	Show running system information
udd	UDLD protocol
neighbors	UDLD neighbor interfaces

Command Mode

- /exec

show upgrade history

show upgrade history

Syntax Description

show	Show running system information
upgrade	Show the upgrade history
history	Show the upgrade history of software and firmware

Command Mode

- /exec

show upgrade history details

show upgrade history details

Syntax Description

show	Show running system information
upgrade	Show the upgrade history
history	Show the upgrade history of software and firmware
details	Show the upgrade history details

Command Mode

- /exec

show user-account

show user-account [<s0>]

Syntax Description

show	Show running system information
TABLE_template	(Optional)
TABLE_role	(Optional)
TABLE_keys	(Optional)

Command Mode

- /exec

show username keypair

show username <s0> keypair

Syntax Description

show	Show running system information
username	Show user information.
keypair	Show SSH keypairs
<i>s0</i>	user name

Command Mode

- /exec

show username passphrase timevalues

show username <username> passphrase timevalues

Syntax Description

show	Show running system information
username	Configure user information.
<i>username</i>	user name
passphrase	user passphrase
timevalues	passphrase lifetime, warningtime and gracetime

Command Mode

- /exec

show userpassphrase

show userpassphrase { min-length | max-length | length }

Syntax Description

show	Show running system information
userpassphrase	user passphrase
min-length	passphrase minimum length
max-length	passphrase maximum length
length	passphrase min and max length

Command Mode

- /exec

show userpassphrase

show userpassphrase { default-lifetime | default-warntime | default-gracetime | timevalues }

Syntax Description

show	Show running system information
userpassphrase	user passphrase
default-lifetime	passphrase default lifetime
default-warntime	passphrase default warningtime
default-gracetime	passphrase default gracetime
timevalues	passphrase lifetime, warning time and gracetime

Command Mode

- /exec

show userpassphrase min-unique

show userpassphrase min-unique

Syntax Description

show	Show running system information
userpassphrase	User passphrase
min-unique	Count for the number of passwords that cannot be reused

Command Mode

- /exec

show userpassphrase sequence alphabet length

show userpassphrase sequence alphabet length

Syntax Description

show	Show running system information
userpassphrase	user passphrase
sequence	Control character sequences in passphrases
alphabet	Control runs of sequential alphabetical characters
length	Maximum number of sequential characters

Command Mode

- /exec

show userpassphrase sequence keyboard length

show userpassphrase sequence keyboard length

Syntax Description

show	Show running system information
userpassphrase	user passphrase
sequence	Control character sequences in passphrases
keyboard	Control runs of sequential keyboard characters
length	passphrase min and max length

Command Mode

- /exec

show users

show users

Syntax Description

show	Show running system information
users	Show the current users logged in the system

Command Mode

- /exec

show users