



Installation

- [Installation Overview, on page 1](#)
- [Applicable for 1GE and 10GE Switch Configurations, on page 2](#)
- [Applicable for 1GE Switch Configurations, on page 6](#)
- [Applicable for 10GE Switch Configurations, on page 12](#)
- [Logging into HX Connect, on page 16](#)

Installation Overview



Note If the HyperFlex cluster nodes were part of any other HyperFlex cluster before (or not factory shipped), follow the node cleanup procedure before starting the cluster deployment. For more information, see [HyperFlex Customer Cleanup Guides for FI and Edge](#).

Refer to the following table that summarizes the installation workflow for Edge deployments. The **Steps 1-3** are common between 1GE and 10GE deployments. However, **Step 4** is applicable for 1GE deployments, while the remaining **Steps 5-6** are for 10GE deployments.

Step#	Description	Reference	Applicable for 1GE & 10GE, 1GE, or 10GE
1	Complete preinstallation checklist.	Make a selection from below based on your switch configuration: <ul style="list-style-type: none">• Single Switch Configuration or,• Dual Switch Configuration or,• 10/25GE Switch Configuration• Common Network Requirements	1GE & 10GE

Step#	Description	Reference	Applicable for 1GE & 10GE, 1GE, or 10GE
2	Complete installation prerequisites.	<ul style="list-style-type: none"> • Rack Cisco HyperFlex Nodes, on page 2 • Cisco Integrated Management Controller Configuration • Verifying Firmware Versions, on page 4 	1GE & 10GE
3	Download and deploy Cisco HX Data Platform Installer.	Deploying Cisco HX Data Platform Installer, on page 5	1GE & 10GE
4	Deploy Cisco HyperFlex Edge cluster.	<p>Complete the following steps to configure your Edge cluster and verify successful installation.</p> <ul style="list-style-type: none"> • Configuring Your HyperFlex Cluster, on page 6 • Verifying Cisco HX Data Platform Software Installation, on page 12 	1GE only
5	SSH to the installer VM and run a script to complete specific configuration tasks.	(10/25GE Only) Run Configuration Script , on page 12	10GE only
6	Deploy Cisco HyperFlex Edge cluster.	(10/25GE only) Configuring Your HyperFlex Cluster, on page 13	10GE only

Applicable for 1GE and 10GE Switch Configurations

Rack Cisco HyperFlex Nodes

For details on installation of Cisco HX220c M5 HyperFlex Nodes or Cisco HX220c M6 HyperFlex Nodes, review the [Cisco Hardware Install Guides](#) .



Important

You can use a console dongle to connect the VGA monitor and keyboard for CIMC configuration. You can also directly connect to the VGA and USB ports on the rear of the server. Alternatively, you can perform a lights-out configuration of CIMC if a DHCP server is available in the network.

Cisco Integrated Management Controller Configuration

Choose one method for CIMC network configuration: static assignment or DHCP assignment.

Configuring CIMC: Static Assignment

To configure Cisco Integrated Management Controller (CIMC), you must enable CIMC standalone mode, configure the CIMC password and settings, and configure a static IP address manually using a KVM. This requires physical access to each server with a monitor and keyboard. Each server must be configured one at a time.

Customers may opt to use the dedicated CIMC management port for out-of-band use. Users should account for this third 1GE port when planning their upstream switch configuration. Additionally, the user should set the CIMC to dedicated mode during CIMC configuration. Follow [Cisco UCS C-series documentation](#) to configure the CIMC in dedicated NIC mode. Under **NIC properties**, set the NIC mode to **dedicated** before saving the configuration.

Before you begin

- Ensure that all Ethernet cables are connected as described in the Physical Cabling section of this guide that applies your deployment.
- Attach the VGA dongle to the server and connect a monitor and USB keyboard.

-
- Step 1** Power on the server, and wait for the screen with the Cisco logo to display.
- Step 2** When prompted for boot options, press **F8** to enter the **Cisco IMC Configuration** utility.
- Step 3** In **CIMC User Details**, enter **password** for the **current CIMC password**, enter your **new CIMC password** twice, and press **Enter** to save your new password.
- Important** Systems ship with a default password of *password* that must be changed during installation. You cannot continue installation unless you specify a new user supplied password.
- Step 4** For **IP (Basic)**, check **IPV4**, uncheck **DHCP enabled**, and enter values for **CIMC IP**, **Prefix/Subnet** mask, and **Gateway**.
- Step 5** For **VLAN (Advanced)**, check **VLAN enabled**, and:
- If you are using trunk ports, set the appropriate **VLAN ID**.
 - If you are using access ports, leave this field blank.
- Step 6** Leave the rest of the settings as default, press **F10** to save your configuration, and press **ESC** to exit the utility.
- Step 7** In a web browser, navigate directly to the CIMC page at **https://CIMC IP address**.
- Step 8** Enter the username **admin** and your new CIMC password, and click **Log In**.
- Step 9** Manually set the power policy to match the desired operation from **Server > Power Policies**.
- Servers default to the Power Off power-restore policy set at the factory.
-

What to do next

You can use the virtual KVM console or continue to use the physical KVM. The SD cards have ESXi preinstalled from the factory and boot automatically during installation.

Configuring CIMC: DHCP Assignment

To configure Cisco Integrated Management Controller (CIMC), you must enable CIMC standalone mode, configure the CIMC password and settings, and configure a dynamic IP address obtained through DHCP. This requires more network setup but eases configuration by enabling a lights-out setup of HyperFlex Edge nodes. All servers lease addresses automatically and in parallel, reducing deployment time.

Before you begin

- Ensure that all Ethernet cables are connected as described in the Physical Cabling section of this guide that applies your deployment.
- Ensure the DHCP server is properly configured and running with a valid scope.
- Ensure the DHCP server is directly listening on the management VLAN or you have an IP helper configured on your switch(es).
- Decide on inband versus out-of-band CIMC:
 - If using inband CIMC, configure the native VLAN for all HyperFlex Edge switch ports to match the correct DHCP VLAN. This is the only way to ensure that the CIMC can lease an address automatically.
 - If using out-of-band CIMC, configure the dedicated switch port for access mode on the DHCP VLAN.

-
- | | |
|---------------|---|
| Step 1 | Connect power cables. |
| Step 2 | Access the DHCP logs or lease table to determine the CIMC addresses obtained |
| Step 3 | Search the hostnames for C220-<i><S/N></i> to find your HyperFlex servers, and make note of the addresses for required inputs into the HX Data Platform Installer. |
-

What to do next

When using DHCP, you must manually set a user defined CIMC password before beginning HyperFlex Data Platform installation. Use either the web UI or a CLI session to set a new password. The default password of **password** must be changed or installation fails.

Verifying Firmware Versions

You need to view current BIOS, CIMC, SAS HBA, and drive firmware versions, and verify that those versions match data in the Release Notes.

-
- | | |
|---------------|---|
| Step 1 | In your browser, log in to the CIMC web UI by navigating to https://<i><CIMC IP></i> . |
| Step 2 | In the Navigation pane, click Server . |

- Step 3** On the **Server** page, click **Summary**.
- Step 4** In the **Cisco Integrated Management Controller (CIMC) Information** section of the **Server Summary** page, locate and make a note of the **BIOS Version** and **CIMC Firmware Version**.
- Step 5** In CIMC, navigate to **Inventory > PCIe Adapters**, and locate and make a note of the **SAS HBA Version**.
- Step 6** In CIMC, navigate to **Storage** depending on which server type you are using, navigate to one of the following:
- For M4, **Cisco 12G Modular SAS > Physical Drive Info**, and make a note of the drive type, manufacturer, and firmware version.
 - For M5 and M6, **Cisco 12G SAS HBA > Physical Drive Info**, and make a note of the drive type, manufacturer, and firmware version.
- Step 7** Compare the current BIOS, CIMC, SAS HBA, and drive firmware versions with the versions listed in the Release Notes.
- Step 8** If the minimum versions are not met, use the Host Update Utility (HUU) Download Links in the compatibility matrix to upgrade the firmware versions running on the system, including Cisco Virtual Interface Cards (VIC), PCI Adapter, RAID controllers, and drive (HDD/SSD) firmware. You can find current and previous releases of the Cisco HUU User Guide at this location: <http://www.cisco.com/c/en/us/support/servers-unified-computing/ucs-c-series-rack-servers/products-user-guide-list.html>.
-

Deploying Cisco HX Data Platform Installer

HX Data Platform Installer can be deployed on an ESXi server, as well as a VMware Workstation, VMware Fusion, or Virtual Box. The HyperFlex software is distributed as a deployable virtual machine, contained in an Open Virtual Appliance (OVA) file format. Use the following procedure to deploy HX Data Platform Installer using a VMware vSphere (thick) Client.

- Step 1** Download the HX Data Platform Installer OVA from Cisco.com, and save the package locally. Verify the downloaded version matches the recommended version for your deployment.
- Step 2** Log in to vCenter using the vSphere client.
- Step 3** Select **File > Deploy OVF Template**.
- Step 4** In the **Deploy OVF Template** wizard, on the **Source** page, specify the source location, and click **Next**.
- Step 5** On the **OVF Template Details** page, view the information, and click **Next**.
- Step 6** (Optional) On the **Name and Location** page, edit the name and location for the virtual appliance, and click **Next**.
- Step 7** On the **Host/Cluster** page, select the host or cluster on which you want to deploy, and click **Next**.
- Step 8** On the **Resource Pool** page, select the resource pool where you want to run the OVF template, and click **Next**.
- Step 9** On the **Storage** page, select a datastore to store the deployed OVF template, and click **Next**.
- Step 10** On the **Disk Format** page, select the disk format to store the virtual machine virtual disks, and click **Next**.
- Step 11** On the **Network Mapping** page, for each network specified in the OVF template, right-click the **Destination Network** column to select a network in your infrastructure, and click **Next**.
- Step 12** Provide the OVF properties for the installer VM, namely: hostname, default gateway, DNS server, IP address, and subnet mask.
- Alternatively, leave all of the OVF properties blank for a DHCP assigned address.
- Step 13** On the **Ready to Complete** page, select **Power On After Deployment**, and click **Finish**.
-

Applicable for 1GE Switch Configurations

Configuring Your HyperFlex Cluster

Step 1 In your web browser, enter the IP address of the installer VM, and click **Accept** or **Continue** to bypass any SSL certificate errors.

Step 2 Verify the HyperFlex installer **Build ID** in the lower right corner of the login screen.

Step 3 Log in to Cisco HX Data Platform Installer using username **root** and password **Cisco123**.

Important Systems ship with a default password of *Cisco123* that must be changed during installation. The HyperFlex on-premise installer requires changing the root password as part of deployment. You cannot continue installation unless you specify a new password. Use the new password at this point in the configuration procedure.

Step 4 Read the End User Licensing Agreement, check **I accept the terms and conditions**, and click **Login**.

Step 5 On the **Workflow** page, click **Cluster Creation with HyperFlex Edge**.

Step 6 To perform cluster creation, you can import a *JSON configuration* file with the required configuration data. The following two steps are optional if importing a JSON file, otherwise you can input data into the required fields manually.

Note For a first-time installation, contact your Cisco representative to procure the factory preinstallation JSON file.


- a. Click **Select a file** and choose your *JSON file* to load the configuration. Select **Use Configuration**.
- b. An **Overwrite Imported Values** dialog box displays if your imported values for Cisco UCS Manager are different. Select **Use Discovered Values**.

Step 7 On the **Credentials** page, complete the following fields, and click **Continue**.

Name	Description
Cisco IMC Credentials	
Cisco IMC User Name	Cisco IMC username. By default, the user name is admin .
Password	CIMC password. By default, the password is password .
vCenter Credentials	
Configuring Your HyperFlex Cluster Server	FQDN or IP address of the vCenter server. You must use an account with vCenter root-level admin permissions.
User Name	Administrator username.
Admin Password	Administrator password.
Hypervisor Credentials	
Admin User Name	Administrator username. By default, the username is root .

Name	Description
Hypervisor Password	Default password is Cisco123. Important Systems ship with a default password of <i>Cisco123</i> that must be changed during installation. You cannot continue installation unless you specify a new user supplied password.

Use the following screenshot as a reference to complete the fields in this page.

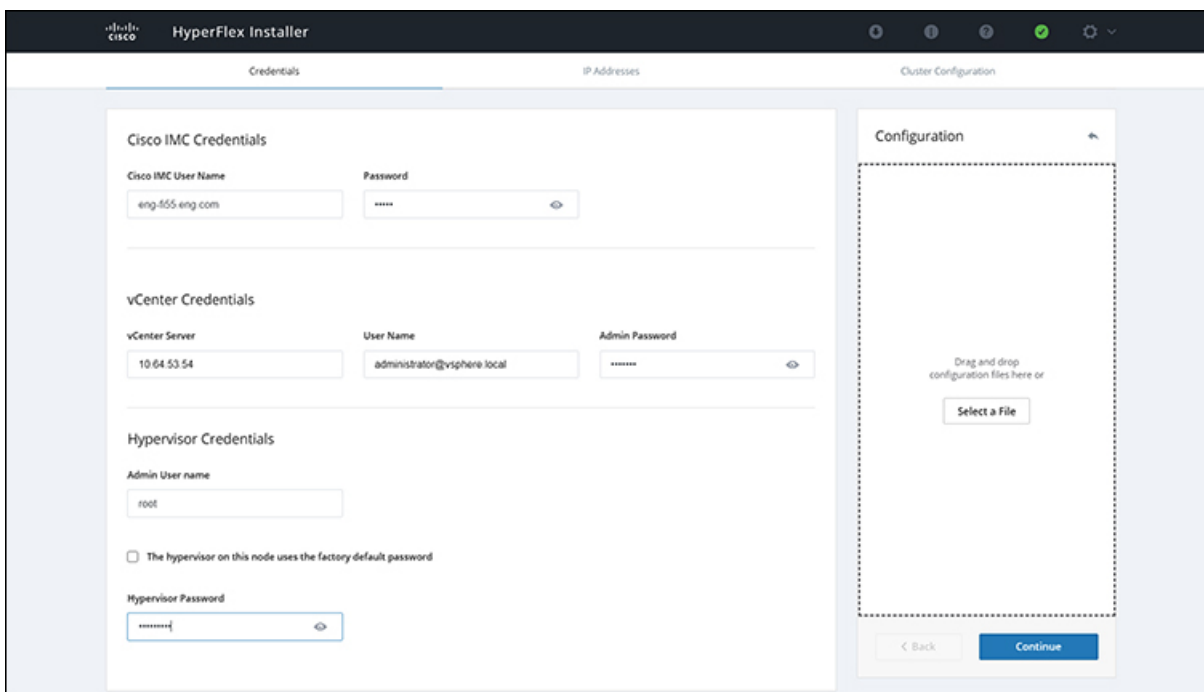

Step 8

On the **IP Addresses** page, enter the assigned addresses for each server.

Name	Description
Cisco IMC	IP Address of Cisco IMC
Hypervisor	Management IP for Hypervisor
Storage Controller	Management IP for Storage Controller
Cluster IP Address	Cluster management IP address
Subnet mask	Subnet mask for cluster management
Gateway	Gateway IP address for cluster management IP

Use the following screenshot as a reference to complete the fields in this page.

Step 9 On the **Cluster Configuration** page, complete the following fields, and click **Continue**.

Note Complete all the fields using your pre-install worksheet.

Name	Description
Cisco HX Cluster	
Cluster Name	User-supplied name for the HyperFlex storage cluster.
Replication Factor	For HXDP 3.0(x) and 4.0(x), the Replication Factor must be set to 2 for HX Edge deployments. Replication factor 3 is not supported for HX Edge deployments until HXDP release 4.5.
Controller VM	
Create Admin Password	There is no default password for the Controller VM. User needs to set this field
Confirm Admin Password	Confirm the Administrator password.
vCenter Configuration	
vCenter Datacenter Name	The name of the vCenter datacenter where the HyperFlex hosts were added.
vCenter Cluster Name	The name of the vCenter cluster where the HyperFlex hosts were added.
System Services	

Name	Description
DNS Server(s)	A comma-separated list of IP addresses for each DNS Server.
NTP Server(s)	A comma-separated list of IP addresses for each NTP Server. Important A highly reliable NTP server is required.
Time Zone	The local time zone for the controller VM.
Connected Services	
Enable Connected Services (Recommended)	Check to Enable Connected Services. Note We highly recommend enabling Connected Services to enable sending email alerts to Cisco TAC.
Send service ticket notifications to: <i>Example: admin@cisco.com</i>	Email address to receive service request notifications.
Advanced Networking	
Management VLAN Tag Data VLAN Tag	Enter the correct VLAN tags if you are using trunk ports. The VLAN tags must be different when using trunk mode. Enter 0 for both VLAN tags if you are using access ports. Note Do not enter 0 if you are using trunk ports.
Management vSwitch Data vSwitch	Do not change the auto-populated vSwitch name.
Advanced Configuration	
Enable Jumbo Frames on Data Network	Do not check to ensure HyperFlex Edge deployments use regularly-sized packets. You may optionally enable jumbo frames for 10/25GE deployments depending on your network configuration. For ease of deployment, it is recommended to uncheck this option.
Clean up disk partitions	Check to remove all existing data and partitions from every node in the HX storage cluster. For example, if this is not the first time installing the software on the cluster.
Optimize for VDi only deployment	Check to optimize VDI deployments. By default HyperFlex is performance optimized for Virtual Server Infrastructure (VSI). Check this box to tune the performance parameters for VDI deployments. This option has no affect on all-flash HX models and only needs to be enabled for hybrid HX clusters. If you are running mixed VDI and VSI workloads, do not select this option.
vCenter Single-Sign-On Server	Fill in this field only if instructed by Cisco TAC.

Use the following screenshot as a reference to complete the fields in this page.

Cisco HX Cluster

Cluster Name: EDGE_CLUSTER
 Replication Factor: 2

Controller VM

Create Admin Password: [password]
 Confirm Admin Password: [password]

vCenter Configuration

vCenter Datacenter Name: datacenter
 vCenter Cluster Name: cluster

System Services

DNS Server(s): 10.64.48.21
 NTP Server(s): 10.64.1.48
 DNS Domain Name: [empty]
 Time Zone: (UTC+05:30) Chennai, Sri Jayawardenepura

Connected Services

Enable Connected Services (Recommended):
 Send service ticket notifications to: admin@cisco.com

Advanced Networking

Management VLAN Tag: 10
 Management vSwitch: vswitch-hx-inband-mgmt
 Data VLAN Tag: 11
 Data vSwitch: vswitch-hx-storage-data

Advanced Configuration

Enable Jumbo Frames on Data Network:
 Clean up disk partitions:
 Optimize for VDI only deployment:
 vCenter Single-Sign-On Server: ex. https://<address>:7444/sts/STSService

Configuration Summary (Right Sidebar):

- Credentials:** vCenter Server: 10.64.53.54, User Name: administrator@vsphere.local, Cisco IMC User Name: eng-fis5.eng.com, Admin User name: root
- IP Addresses:** Cluster Name: EDGE_CLUSTER, Management Cluster: 10.10.10.40, Management Subnet Mask: 255.0.0.0, Management Gateway: 10.10.10.1
- Server 1:** Management Cisco IMC: 10.10.10.10, Management Hypervisor: 10.10.10.20, Management Storage Controller: 10.10.10.30
- Server 2:** Management Cisco IMC: 10.10.10.11

Buttons: < Back, Start

Step 10 After deployment finishes, the **Summary Deployment** page displays a summary of the deployment details.

What to do next

Confirm HX Data Platform Plug-in installation. See [Verifying Cisco HX Data Platform Software Installation, on page 12](#)

Verifying Cisco HX Data Platform Software Installation

Step 1 Launch **vSphere**, and log in to the vCenter Server as an administrator.

Step 2 Under **vCenter Inventory Lists**, verify that **Cisco HX Data Platform** displays.

If the entry for Cisco HX Data Platform does not appear, log out of vCenter, close the browser, and log back in. In most cases, the issue is resolved by this action.

If logging out of vCenter does not fix the issue, you may have to restart the vSphere Web Client . SSH to the VCSA and run `service vsphere-client restart`. For a Windows vCenter, restart VMware VMWare vSphere Web Client in the services page in mmc.

Step 3 Ensure that your new cluster is online and registered.

Applicable for 10GE Switch Configurations

(10/25GE Only) Run Configuration Script

Use the steps below to run the configuration script and begin the initial phase for 10/25GE Edge deployment.



Note The run configuration script is a required step for the 3.5.x. release and all prior releases.

Step 1 SSH to the installer VM.

Step 2 Run the `~#hx_edge` command to start the configuration script.

Step 3 Enter **y** to continue in the interactive mode.

Step 4 Follow the on-screen prompts to complete the installation.

Step 5 Once all the inputs have been entered and confirmed, input **y** and hit enter to begin the first phase of the 10/25GE Edge deployment.

Step 6 The configuration task may take several minutes to complete. Check the summary view to view the completion status of the various tasks.

(10/25GE only) Configuring Your HyperFlex Cluster

Step 1 In your web browser, enter the IP address of the installer VM, and click **Accept** or **Continue** to bypass any SSL certificate errors.

Step 2 Verify the HyperFlex installer **Build ID** in the lower right corner of the login screen.

Step 3 Log in to Cisco HX Data Platform Installer using username **root** and password **Cisco123**.

Important Systems ship with a default password of *Cisco123* that must be changed during installation. The HyperFlex on-premise installer requires changing the root password as part of deployment. You cannot continue installation unless you specify a new password. Use the new password at this point in the configuration procedure.

Step 4 Read the End User Licensing Agreement, check **I accept the terms and conditions**, and click **Login**.

Step 5 On the **Workflow** page, click **Cluster Creation with HyperFlex Edge**.

Step 6 On the **Credentials** page, complete the following fields, and click **Continue**.

Name	Description
vCenter Credentials	
vCenter Server	FQDN or IP address of the vCenter server. You must use an account with vCenter root-level admin permissions.
User Name	Administrator username.
Admin Password	Administrator password.
CIMC Credentials	
CIMC User Name	CIMC username. By default, the user name is admin .
Password	CIMC password. By default, the password is password .
Hypervisor Credentials	
Admin User Name	Administrator username. By default, the username is root .
Admin Password	Default password is Cisco123. Important Systems ship with a default password of <i>Cisco123</i> that must be changed during installation. You cannot continue installation unless you specify a new user supplied password.

Step 7 On the **IP Addresses** page, enter the assigned addresses for each server:

Name	Description
Cisco IMC	IP Address of Cisco IMC
Hypervisor	Management IP for Hypervisor

Name	Description
Storage Controller	Management IP for Storage Controller
Cluster IP Address	Cluster management IP address
Subnet mask	Subnet mask for cluster management
Gateway	Gateway IP address for cluster management IP

Step 8

On the **Cluster Configuration** page, complete the following fields, and click **Continue**.

Note Complete all the fields using your pre-install worksheet.

Name	Description
Cisco HX Cluster	
Cluster Name	User-supplied name for the HyperFlex storage cluster.
Replication Factor	For HXDP 3.0(x) and 4.0(x), the Replication Factor must be set to 2 for HX Edge deployments. Replication factor 3 is not supported for HX Edge deployments until HXDP release 4.5.
Controller VM	
Create Admin Password	Default password is Cisco123. Important Systems ship with a default password of <i>Cisco123</i> that must be changed during installation. You cannot continue installation unless you specify a new user supplied password.
Confirm Admin Password	Confirm the Administrator password.
vCenter Configuration	
vCenter Datacenter Name	The name of the vCenter datacenter where the HyperFlex hosts were added.
vCenter Cluster Name	The name of the vCenter cluster where the HyperFlex hosts were added.
System Services	
DNS Server(s)	A comma-separated list of IP addresses for each DNS Server.
NTP Server(s)	A comma-separated list of IP addresses for each NTP Server. Important A highly reliable NTP server is required.
Time Zone	The local time zone for the controller VM.

Name	Description
Auto Support	
Enable Auto Support (Recommended)	Check to enable Auto Support. Note We highly recommend enabling Auto Support to enable sending email alerts to Cisco TAC.
Send service tickets notifications to, for example: name@company.com	Email address to receive service request notifications.

Step 9

On the **Advanced Cluster Configuration** page, complete the following fields, and click **Start**.

Name	Description
Advanced Networking	
Uplink Switch Speed	Check the radio button for 10/25GE . The MAC Address Prefix field appears. Provide the MAC Address Prefix. Note The MAC Address Prefix is used to assign unique MAC addresses to the virtual interfaces of the Cisco VIC. Ensure you select a unique range to avoid any overlap with existing network equipment.
Management VLAN Tag Data VLAN Tag	Enter the correct VLAN tags if you are using trunk ports. The VLAN tags must be different when using trunk mode. Enter 0 for both VLAN tags if you are using access ports. Note Do not enter 0 if you are using trunk ports.
Management vSwitch Data vSwitch	Do not change the auto-populated vSwitch name.
Advanced Configuration	
Enable Jumbo Frames on Data Network	Check to enable Jumbo Frames for 10/25G deployments.
Clean up disk partitions	Check to remove all existing data and partitions from every node in the HX storage cluster. For example, if this is not the first time installing the software on the cluster.
Optimize for VDi only deployment	Check to optimize VDI deployments. By default HyperFlex is performance optimized for Virtual Server Infrastructure (VSI). Check this box to tune the performance parameters for VDI deployments. This option has no affect on all-flash HX models and only needs to be enabled for hybrid HX clusters. If you are running mixed VDI and VSI workloads, do not select this option.
vCenter Single-Sign-On Server	Fill in this field only if instructed by Cisco TAC.

Review the progress for any of the cluster configuration tasks on the **Progress** page. The deployment can take anywhere between 20–45 minutes to complete.

Step 10 After deployment finishes, the **Summary Deployment** page displays a summary of the deployment details.


What to do next

Confirm HX Data Platform Plug-in installation.

Logging into HX Connect

Cisco HyperFlex Connect provides an HTML5 based access to HX Storage monitoring, and replication, encryption, datastore, and virtual machine tasks. This procedure provides a summary on launching and logging into HX Connect. For the detailed procedure on logging in to HX Connect, see the [Cisco HyperFlex Data Platform Administration Guide](#).

Step 1 Launch HX Connect UI from a browser of your choice from `https://Cluster_IP/` or `https://FQDN`.

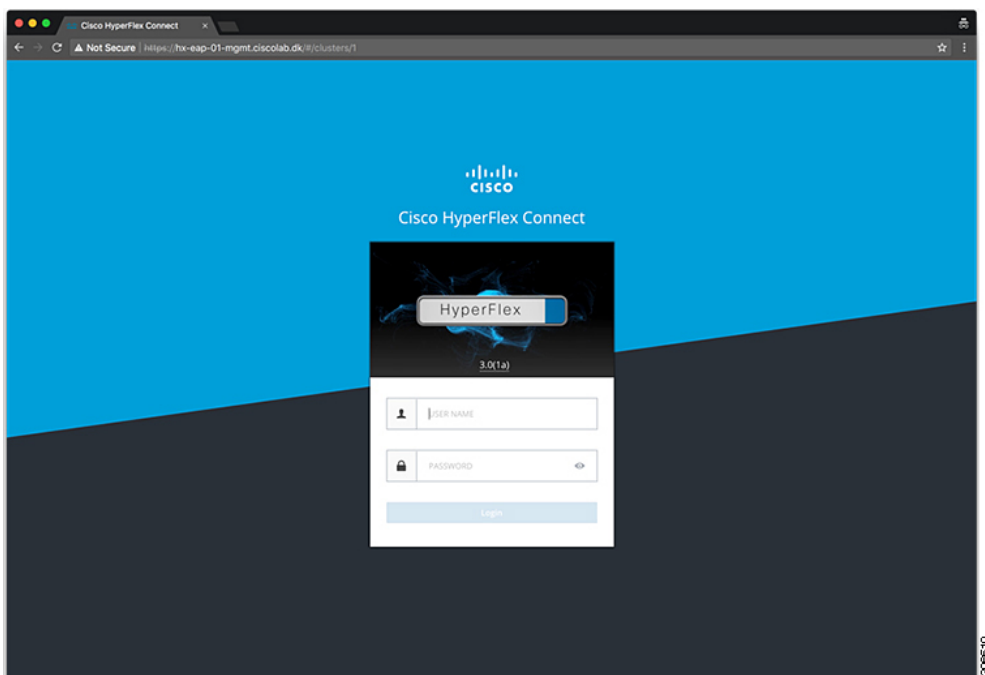

Step 2 Log in with the following credentials:

- **Username**—**admin**
 - **Password**—Use the password set during cluster installation.
-

What to do next

Run the post install script before the HyperFlex cluster is ready for production use. Depending on whether you are running in a 1GE or 10/25GE switch configuration, see:

