



Expand Cisco HyperFlex System Clusters

- [Cluster Expansion Guidelines, on page 1](#)

Cluster Expansion Guidelines

Please review these guidelines before expanding your cluster.

- Edge Cluster Expansion is supported in Cisco HyperFlex Data Platform Release 4.0(2e) and later. You can expand ESXi based 10/25 GbE HyperFlex Edge clusters with 3 nodes via Intersight.
- Please refer to the Intersight documentation for all requirements: [Expand Cisco HyperFlex Clusters in Cisco Intersight](#).

