



Hardware Module Commands

This module lists the hardware module commands used for the Version 4 (IPv4) and IP Version 6 configuration on the Cisco 8000 Series Routers.

For detailed information about the hardware module configuration tasks and examples, refer to the *IP Addresses and Services Configuration Guide for Cisco 8000 Series Routers*

- [Hardware Module Commands, on page 2](#)

Hardware Module Commands

Access List Commands

- `hw-module profile stats acl-permit`
- `tcam format access-list (ipv4 and ipv6)`

Cisco Express Forwarding Commands

- `hw-module profile cef`
- `hw-module profile route scale`

Network Stack Commands

- `hw-module profile route scale ipv6-unicast connected-prefix high`
- `hw-module local-station-mac`