



Hardware Module Commands

This module lists the hardware module commands used to configure VPN and Ethernet Services.

For detailed information about the configuration tasks, and examples for VPN and Ethernet Services, see the *VPN and Ethernet Services Configuration Guide for Cisco 8000 Series Routers*.

- [Hardware Module Commands, on page 2](#)

Hardware Module Commands

VXLAN Commands

- `hw-module profile cef vxlan ipv6-tnl-scale`