

Accessing the Wireless Interface

You can access the Wireless feature of the Cisco CP Express by choosing the **Wireless** link. The Cisco CP Express Admin View supports Wi-Fi Protected Access 2 (WPA2) encryption, which uses the ciphers aes-ccm tkip encryption mode.



The Wireless feature is displayed on the Cisco CP Express only if your router supports a WAP.

Based on the WAP settings, there may be variations in the way the Wireless feature functions. The variations may occur when:

- 1. Accessing the Wireless feature for the first time—When you click the Wireless link, it tries to automatically establish a connection to the wireless interface without prompting for a username and password, if one of these two options is true:
 - Your router is a factory fresh router.
 - Factory default username and password of the WAP have not been changed. The factory default username/password of your Wireless router is *cisco/cisco*.
- **2. Password of WAP has changed**—You are prompted to specify the username and password of the WAP if the factory default username/password (*cisco/cisco*) have been changed.
- 3. Username and password of WAP have changed
 - If you are using the Mozilla Firefox browser, you are prompted to specify the username and password of the WAP.
 - If you are using the Google Chrome browser, you will encounter a "401 Unauthorized" error.

Handling 401 Unauthorized error

Choose the Click here to open the wireless screen in a new browser tab link to open the Wireless feature in a new browser tab.



The Wireless feature is not displayed on the Cisco CP Express if your router is any of the following: Cisco C866VAE-W-E-K9, C867VAE-W-A-K9, C867VAE-W-E-K9, and C867VAE-POE-W-A-K9. To view the wireless feature on CCP Express, follow the steps mentioned in the below link: http://www.cisco.com/en/US/docs/routers/access/800/860-880-890/software/configuration/guide/config_WLAN.html#wp1251664