



Managing ITP Networks Using SGM

This chapter provides details on using SGM to discover and manage your ITP networks. It includes the following sections:

- [Becoming the Root User \(Solaris Only\), page 3-2](#)
- [Configuring SNMP, page 3-2](#)
- [Discovering the Network, page 3-6](#)
- [Configuring Seed Files, page 3-18](#)
- [Working with Views, page 3-23](#)
- [Working with Linksets, page 3-34](#)
- [Working with Nodes, page 3-81](#)
- [Working with Links, page 3-111](#)
- [Working with Events, page 3-143](#)
- [Viewing the Topology of the Network, page 3-163](#)
- [Finding Information in a Window, page 3-177](#)
- [Resizing, Sorting, and Hiding Table Columns, page 3-178](#)
- [Viewing Online Help, page 3-179](#)
- [Editing an ITP Route Table File, page 3-180](#)
- [Editing a Global Title Translation Table, page 3-188](#)
- [Working with SGM Statistics Reports, page 3-218](#)
- [Printing SGM Windows, page 3-283](#)
- [Connecting to a New Server, page 3-284](#)

- [Integrating SGM with Other Products](#), page 3-285
- [Using the Windows Start Menu](#), page 3-288

Becoming the Root User (Solaris Only)

Some SGM procedures require you to be logged in as the root user.



Caution

As the root user, you can adversely affect your operating environment if you are unaware of the effects of the commands you use. If you are a relatively inexperienced UNIX user, limit your activities as the root user to the tasks described in this manual.

If you are not logged in, log in as the root user:

```
> login: root  
  
> Password: root-password
```

If you are already logged in, but not as the root user, use the **su** command to change your login to root:

```
# su  
  
# Password: root-password
```

Configuring SNMP

If SGM User-Based Access is disabled, or if it is enabled and you are a Network Administrator or System Administrator, SGM enables you to view and change some SNMP settings. (For more information about user authorization levels in SGM, see the [“Configuring SGM User Authentication Levels \(Solaris Only\)”](#) section on page 4-6.)




Note

If you want to change SNMP settings, do so *before* running Discovery.

To change SNMP settings in SGM:

- Step 1** Start the SGM client, as described in the “Starting SGM” section on page 2-2.
- Step 2** Select **Edit>SNMP Configuration** from the SGM Main Menu. SGM displays the SNMP Configuration Dialog (Figure 3-1).

Figure 3-1 SNMP Configuration Dialog

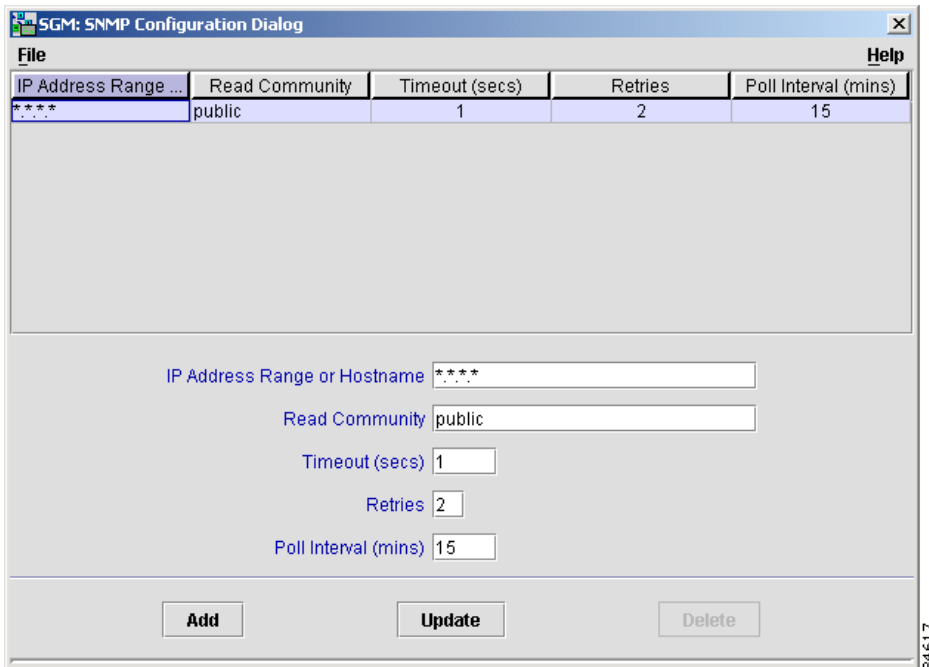

The SNMP settings table displays SNMP information for nodes in SGM.

- Step 3** (Optional) To delete a node, select it and click **Delete**.

- Step 4** (Optional) To change the IP address or DNS name of a node, select the node and enter the new address or name in the **IP Address Range or Hostname** field.
- IP addresses use the format *x.x.x.x*, where each *x* has one of the following values:
 - An integer in the range 0 through 255.
 - A range of integers separated by a dash (-), such as 10-60.
 - An asterisk (*), which is equivalent to specifying 0-255.
 - Unlike IP addresses, you cannot specify a range of node names or use wildcards in node names. Each node name corresponds to a single node in the network.

The default value for this field is the IP address **.*.*.**, which SGM uses for all nodes not covered by other IP address ranges or names.

Click **Update** to apply the new IP address to the selected node.

- Step 5** (Optional) Nodes use SNMP community names for read access to the information maintained by the SNMP agent on the router. To change the SNMP community name for a node, select the node and enter the new name in the **Read Community** field. This name must match the name used by the node. The default name is **public**.

Click **Update** to apply the new SNMP community name to the selected node.

For information about exporting SNMP community names from CiscoWorks2000 Resource Manager Essentials (RME), see the [“Importing SNMP Community Names from CiscoWorks2000 \(Solaris Only\)”](#) section on page 5-2.

- Step 6** (Optional) If you determine that SGM waits too long for a response from a node, or does not wait long enough, you can change the timeout value. To change the time, in seconds, that SGM waits for a response from a node, select the node and enter the new timeout value in the **Timeout (secs)** field. The valid range is 1 to 60 seconds. The default value is 1 second.

Click **Update** to apply the new timeout to the selected node.

- Step 7** (Optional) If you determine that SGM retries a node too many times, or not enough times, you can change the number of retries. To change the number of times SGM attempts to connect to a node, select the node and enter the new number in the **Retries** field. The valid range is 0 to 99. The default value is 2 retries.

Click **Update** to apply the new retries value to the selected node.

Step 8 (Optional) If you determine that SGM polls a node too often, or not often enough, you can change the poll interval. To change the time, in minutes, between polls for a node, select the node and enter the new interval in the **Poll Interval (mins)** field. The valid range is 5 to 1440. The default value is 15 minutes.

Click **Update** to apply the new poll interval to the selected node.

Step 9 (Optional) To add a new node or range of nodes, enter the SNMP information in the appropriate fields and click **Add**. The new SNMP settings are added to the SGM database.

When you are satisfied with all of your changes to the SNMP settings, select the **File>Save** menu option. SGM saves the changes, updates the SNMP information on the SGM server in real time, and closes the SNMP Configuration Dialog.



Note If another user modifies and saves the SNMP configuration before you save your changes, SGM asks if you want to overwrite that user's changes. If you choose to do so, the other user's changes are overwritten and lost. If you choose not to do so, your changes are lost.

For more information about SNMP, refer to “Configuring SNMP Support” in the Cisco IOS Release 12.2 *Configuration Fundamentals Configuration Guide*, Part 3, Cisco IOS System Management.

SGM also provides the following SNMP-related commands:

- To set a new default SNMP read community name, use the **sgm snmpcomm** command.
- To change the file used for SNMP parameters, such as community names, timeouts, and retries, use the **sgm snmpconf** command.
- To query a host using SNMP GetRequests, use the **sgm snmpget** command.
- To query a host using SNMP GetNextRequests, use the **sgm snmpnext** command.
- To query a host, using SNMP GetNextRequests to “walk” through the MIB, use the **sgm snmpwalk** command.

For more information on the use of these commands, see the “[SGM Commands and Descriptions](#)” section on page B-2.

Discovering the Network

SGM uses a Discovery process to populate the SGM database, discovering the nodes, linksets, and links in your network.

You can run Discovery if SGM User-Based Access is disabled, or if it is enabled and you are a Network Administrator or System Administrator. (For more information about user authorization levels in SGM, see the “[Configuring SGM User Authentication Levels \(Solaris Only\)](#)” section on page 4-6.)


Related Topics:

- [Backing Up or Restoring SGM Files \(Solaris Only\)](#), page 5-44
- [Configuring Seed Files](#), page 3-18
- [Investigating Data Problems](#), page 6-2
- [Verifying Discovery](#), page 6-1

To discover the network in SGM:

-
- Step 1** Start the SGM client, as described in the “[Starting SGM](#)” section on page 2-2.
- Step 2** Select **Edit>Network Discovery** from the SGM Main Menu. SGM displays the Discovery Dialog ([Figure 3-2](#)).

Figure 3-2 Discovery Dialog

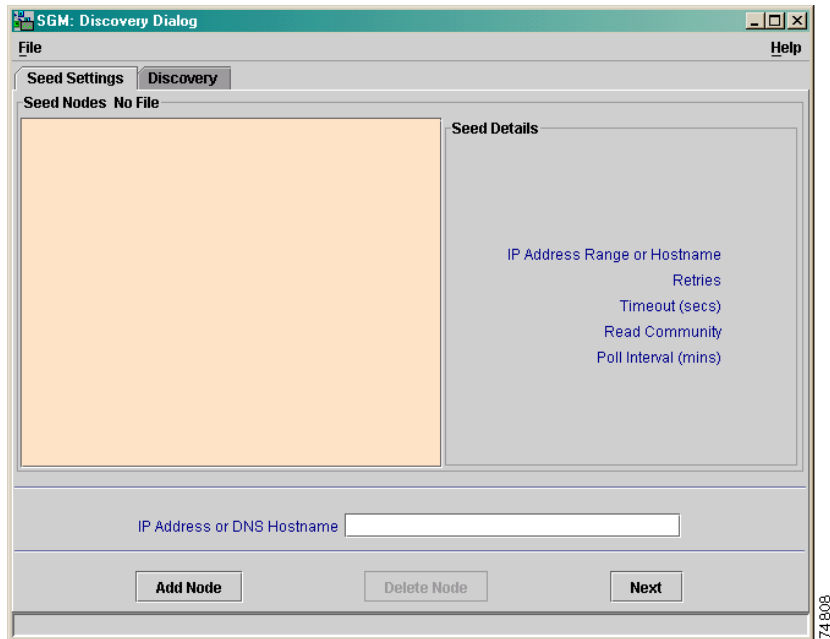

If you start the SGM client and the SGM database is empty (including the very first time you start the SGM client), SGM automatically opens the Discovery Dialog so you can run Discovery and populate the database.

Step 3 Select the **Seed Settings** tab, if it is not already selected. SGM displays the Seed Settings panel, which enables you to create, save, load, and delete SGM seed files. Seed files are lists of seed nodes, which SGM uses to discover the nodes, linksets, and links in your network.

Step 4 Load one or more seed nodes, using one of the following procedures:


- Enter the name or IP address of a seed node in the **IP Address or DNS Hostname** field, and click **Add Node**.

SGM displays details of the SNMP settings for the seed nodes in the right pane of the window.

Continue adding seed nodes until you are certain that SGM will be able to discover the entire network.

- If you have already created and saved a seed file, select **File>Load Seeds** from the Discovery Dialog menu. SGM displays the Load File Dialog - Seed File List dialog (Figure 3-3).

Figure 3-3 Load File Dialog - Seed File List Dialog

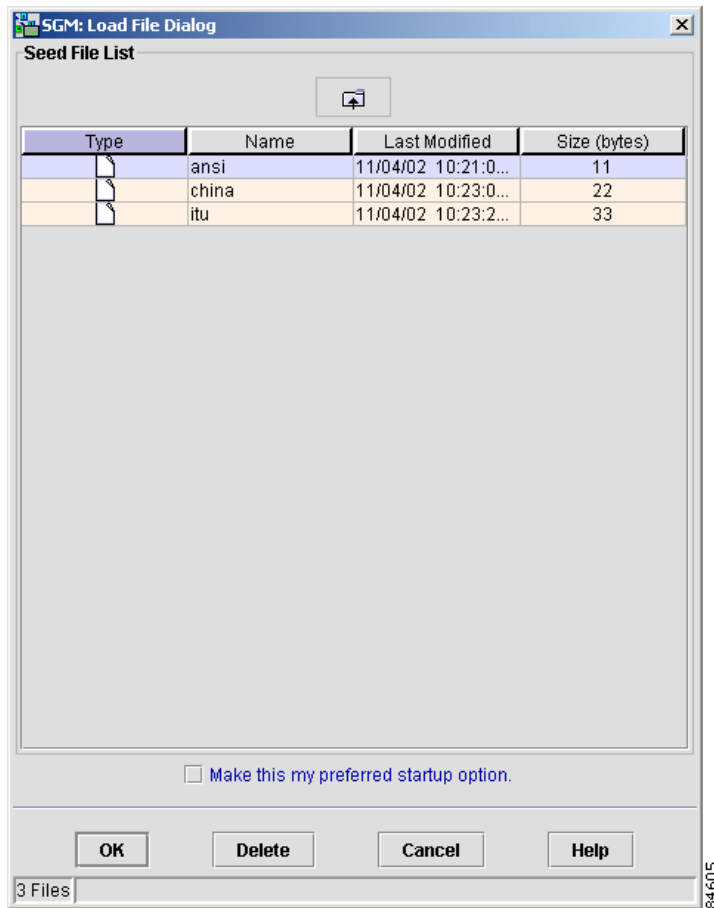

- The Load File Dialog - Seed File List dialog contains the following fields:
- **Type**—Icon indicating whether the item in the table is a file or a folder.
 - **Name**—Name of the seed file or folder.

- **Last Modified**—Date and time the seed file or folder was last modified.
- **Size (bytes)**—Size of the seed file or folder, in bytes.
- **Make this my preferred start option**—Specifies whether the selected seed file is to be loaded automatically whenever this SGM client is started. By default, this checkbox is cleared for all seed files. That is, no seed file is loaded automatically when the SGM client is started.
- **Number of Files**—Total number of seed files and folders (displayed in bottom left corner).


To load a seed file, select the seed file in the list and click **OK**.

SGM closes the Load File Dialog - Seed File List dialog, loads the seed file, and returns to the Discovery Dialog. SGM lists all of the seed nodes in the seed file in the left pane of the window, and displays details of the SNMP settings for the seed nodes in the right pane.

To close the Load File Dialog - Seed File List dialog without loading a seed file, click **Cancel**.

- Step 5** Select the **Discovery** tab, or click **Next**. SGM displays the Discovery panel (Figure 3-4), which enables you to discover the nodes, linksets, and links in your network. (If you enter a seed node IP address or name in the **IP Address or DNS Hostname** field, then click **Next**, SGM automatically adds the seed node before displaying the Discovery panel.)

Figure 3-4 Discovery Panel

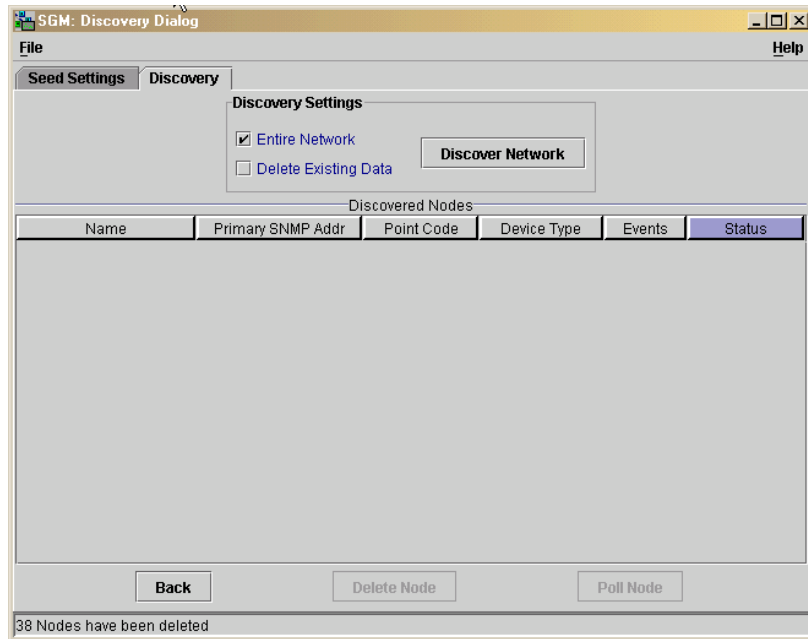

Step 6 (Optional) Specify the extent of the network discovery.

- To discover the entire network, select the **Entire Network** checkbox. This is called *recursive discovery*, and it is the default setting. Select this checkbox when you run Discovery for the very first time.

With this checkbox selected, SGM discovers all seed nodes and attempts to manage them; then attempts to discover and manage all ITP nodes that are adjacent to those seed nodes (unless the nodes are connected by serial links only); then attempts to discover and manage all ITP nodes that are adjacent to *those* nodes; and so on, until SGM has discovered the entire network.

- To rediscover only seed nodes, clear the **Entire Network** checkbox. This is called *nonrecursive discovery*.

With this checkbox cleared, SGM discovers all seed nodes and attempts to manage them, then labels all nodes that are adjacent to those seed nodes **Unmanaged**.



Note If you run Discovery with **Entire Network** cleared, then you run Discovery with **Entire Network** selected, any **Unmanaged** nodes in the first Discovery are not rediscovered by the second Discovery.

To recover from this situation and generate a new, complete, and reliable SGM database, you **must** perform one of the following procedures:

1. Run Discovery again, with both **Entire Network** and **Delete Existing Data** selected.
 2. Change the Unmanaged nodes to managed status. See the [“Unmanaging and Managing a Node” section on page 3-108](#) for more information.
 3. Poll the nodes that were **Unmanaged** in the first Discovery. See the [“Polling a Node” section on page 3-109](#) for more information.
-

Step 7 (Optional) Specify whether SGM is to keep or delete the existing database when discovering the network:

- To keep all existing network data in the SGM database before rediscovering the network, clear the **Delete Existing Data** checkbox. This is the default setting. Clear this checkbox when you run Discovery for the very first time.
- To delete all existing network data from the SGM database before rediscovering the network, select the **Delete Existing Data** checkbox. Choose this option if you know that network elements have been deleted from your network since the last Discovery.



Note If you discover the network with **Delete Existing Data** selected, and you are using a custom view, SGM automatically resets your view to the DEFAULT view. To reload your custom view, wait until Discovery is complete, then select **Edit > Network Views**, then **File > Load**.

If you discover the network with **Delete Existing Data** selected, SGM stops any real-time polls that are running and issues appropriate messages.

Step 8 Click **Discover Network** to begin Discovery.

When Discovery begins:

- The **Discover Network** button is grayed-out.
- The “Discovery In Progress” message is displayed at the bottom of the Discovery Dialog.
- The “Discovery In Progress” message is displayed in the title bar of all SGM client windows.

Discovery progresses in bursts. You might see a number of updates, followed by a pause, followed by more updates. The information displayed in SGM windows is not fully updated until Discovery is complete.

Because SGM is an asynchronous system, with the SGM server contacting clients one at a time, and because clients might run at different speeds, the information displayed by SGM clients during Discovery might not always be in sync.


Step 9 (Optional) To stop the Discovery process at any time, click **Stop Discovery**. For example, if you click **Discover Network**, then you realize that you loaded a seed node that you did not intend to load, you can click **Stop Discovery** to stop the Discovery process.



Note If you stop the Discovery process, the information in the SGM database is incomplete and unreliable. To generate a new, complete, and reliable SGM database, you **must** run Discovery again, with **Delete Existing Data** selected.

Step 10 When the “Discovery In Progress” message disappears, Discovery is complete. The Discovered Nodes section of the Discovery panel ([Figure 3-4](#)) lists all nodes that were discovered by SGM. By default, this table is sorted by **Status**.

Figure 3-5 Discovery Panel with Discovered Nodes

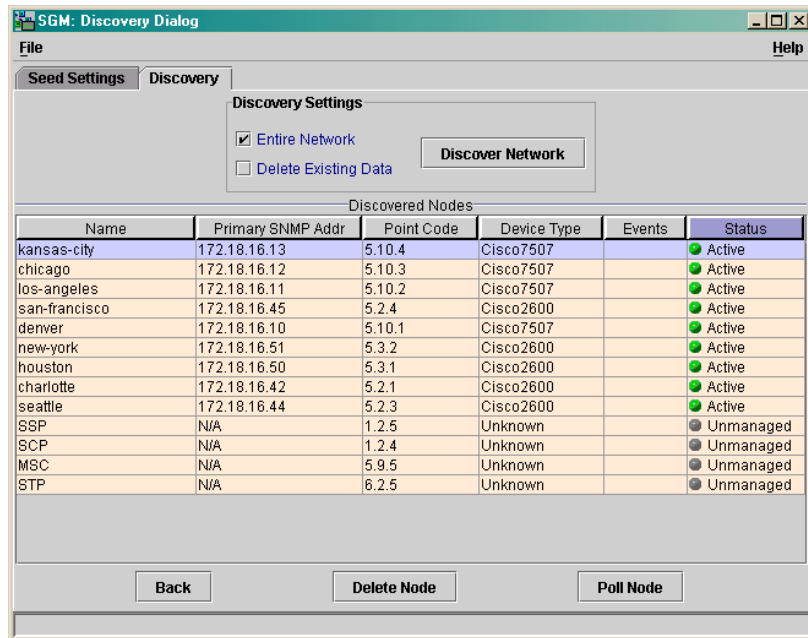

The Discovered Nodes section displays the following information for each discovered node:

- **Name**—Name or IP address of the discovered node.
- **Primary SNMP Address**—IP address of the node, used by SNMP to poll the node.
- **Point Code**—Point code of the node.
- **Device Type**—Device type of the node. Possible values are:
 - **Cisco2600**—Cisco 2651 series router
 - **Cisco7202**—Cisco 7202 series router
 - **Cisco7204**—Cisco 7204VXR series router
 - **Cisco7206**—Cisco 7206VXR series router
 - **Cisco7507**—Cisco 7507 series router
 - **Cisco7513**—Cisco 7513 series router

74810


- **IPDevice**—IP device, other than Cisco 2651, 7202, 7204VXR, 7206VXR, 7507, or 7513 series router. You can assign this icon to an unknown node if you know that it is an IP device.
- **Unknown**—SGM is unable to determine the device type.
- **Notes**—Indicates whether there is a note associated with the node.
- **Events**—Indicates whether there is a recent event associated with the node.
During Discovery, SGM might flag most nodes with an event icon. If the event icons are too distracting, select **Edit > Clear Event Icon > All** from the SGM Main Menu to remove them.
- **Status**—Current status of the node. Possible values are:
 - **Active (green ball)**—The node is currently fully functional.
 - **Discovering (gray ball)**—The node is being discovered, and SNMP queries have been sent to the device.
 - **Polling (gray ball)**—The node is being polled.
 - **Unknown (red ball)**—The node failed to respond to an SNMP request. The node and all associated linksets and links are set to **Unknown**.
 - **Unmanaged (gray ball)**—One of the following situations exists:
 - The node is known indirectly by SGM. In other words, SGM knows the device exists but there is no known SNMP stack on the device for SGM to query.
 - An SGM user has set the node to **Unmanaged** status, to prevent SGM from collecting statistics for the node.
 - **Waiting (gray ball)**—The node is in the Discovery queue but is not currently being discovered.
 - **Warning (yellow ball)**—The node is active, but one or more associated links or linksets is in **Failed**, **Unavailable**, **Unknown**, or **Warning** status and is not **Ignored**.

All discovered nodes are placed in a DEFAULT configuration view, which is stored on the SGM server and shared by all SGM clients. Initially, all clients use the DEFAULT view. Clients can then create their own views, which are subsets of the DEFAULT view, to meet their individual needs. However, the DEFAULT view stored on the SGM server cannot be modified by the clients. It is always available, for users who need to view the entire network.

All other SGM windows (Node, Linkset, Topology, and so on) are also populated with the newly discovered network data.

- Step 11** (Optional) To delete a node or nodes from the Discovery database, select the nodes and click **Delete Node**. SGM deletes the nodes without asking for confirmation.
- Step 12** (Optional) Examine the Discovered Nodes table to verify that SGM discovered all of the nodes in the network. If you suspect that SGM did not discover all of the nodes, see the [“Verifying Discovery” section on page 6-1](#) for troubleshooting information. You might need to add more seed nodes and run Discovery again.
- Step 13** When you are satisfied that SGM discovered all of the nodes in the network, save the list of seed nodes in a seed file, using one of the following procedures:
- To save the changes you have made to the seed file without changing the name of the file, select **File>Save** from the Discovery Dialog menu.
 - To save the changes you have made to the seed file with a new name, select **File>Save As** from the Discovery Dialog menu. SGM displays the Save File Dialog - Seed File List dialog ([Figure 3-6](#)).

Figure 3-6 Save File Dialog - Seed File List Dialog

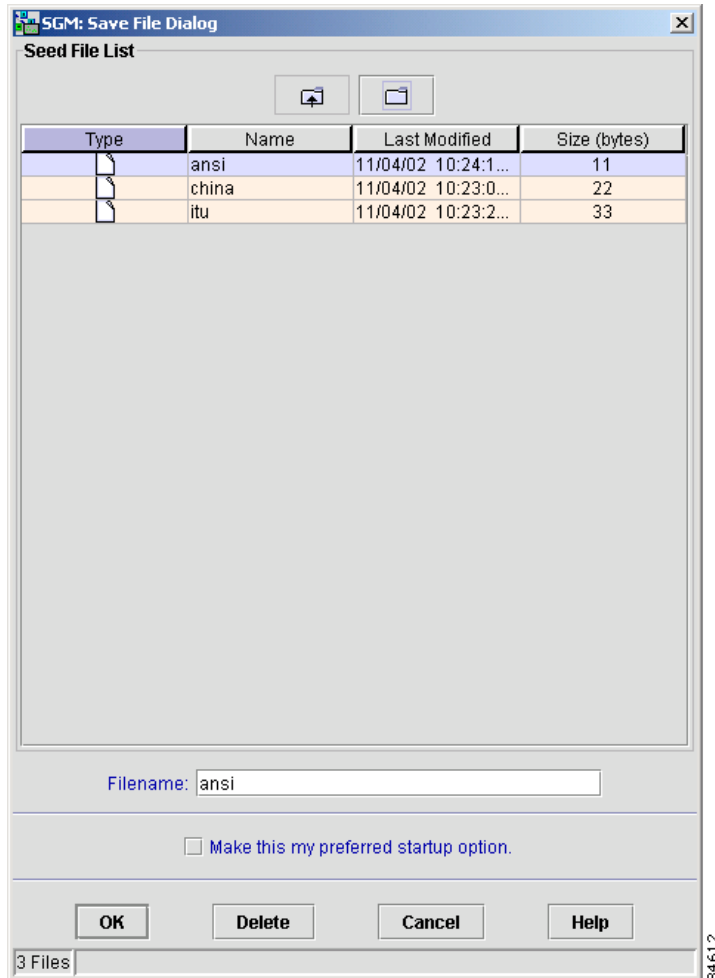

The Save File Dialog - Seed File List dialog contains the following fields:

- **Type**—Icon indicating whether the item in the table is a file or a folder.
- **Name**—Name of the seed file or folder.
- **Last Modified**—Date and time the seed file or folder was last modified.
- **Size (bytes)**—Size of the seed file or folder, in bytes.

- **Filename**—Name by which you want to save the seed file.
If you create a new seed file name, you can use any letters, numbers, or characters in the name that are allowed by your operating system.
- **Make this my preferred start option**—Specifies whether the selected seed file is to be loaded automatically whenever this SGM client is started. By default, this checkbox is cleared for all seed files. That is, no seed file is loaded automatically when the SGM client is started.
- **Number of Files**—Total number of seed files and folders (displayed in bottom left corner).

To save the seed file with a new name, use one of the following procedures:

- To save the file with a completely new name, enter the new name and click **OK**.
- To save the file with an existing name, overwriting an old seed file, select the name in the list and click **OK**.

SGM saves the seed file with the new name, closes the Save File Dialog - Seed File List dialog, and returns to the Discovery Dialog.



Note If another user modifies and saves the seed file before you save your changes, SGM asks if you want to overwrite that user's changes. If you choose to do so, the other user's changes are overwritten and lost. If you choose not to do so, your changes are lost, unless you save the seed file to a different filename.

SGM stores the seed file in the seed file directory on the SGM server:

- If you installed SGM in the default directory, */opt*, then the SGM seed file directory is */opt/CSCOsgm/seeds*.
- If you installed SGM in a different directory, then the SGM seed file directory is located in that directory.

To delete a seed file from the seed file list, select a file and click **Delete**. SGM issues an informational message containing the name and location of the deleted file.

To save any changes you made to the list of files, click **OK**. SGM saves the changes and closes the Save File Dialog - Seed File List dialog.

To close the Save File Dialog - Seed File List dialog without saving the seed file or saving any changes to the seed file list, click **Cancel**.

You can run Discovery multiple times to attempt to discover additional nodes based on the IP address defined in the Stream Control Transmission Protocol (SCTP) linksets. If you are using a separate management VLAN to manage your nodes, but private or unreachable IP addresses for your SCTP connectivity, clear the **Entire Network** checkbox in the Discovery Dialog. Otherwise, Discovery attempts to reach those nodes continuously. Instead, enter all nodes to be discovered directly into the seed list and do a nonrecursive Discovery.

Configuring Seed Files

SGM enables you to create, save, load, and delete SGM seed files.

This section includes the following information:

- [Creating a New Seed File, page 3-18](#)
- [Modifying an Existing Seed File, page 3-20](#)
- [Creating and Modifying Seed Files Using a Text Editor, page 3-22](#)

Related Topics:

- [Discovering the Network, page 3-6](#)

Creating a New Seed File

To create a new seed file in SGM:

-
- Step 1** Select **Edit>Network Discovery** from the SGM Main Menu. SGM displays the Discovery Dialog ([Figure 3-2](#)).
 - Step 2** Select the **Seed Settings** tab, if it is not already selected. SGM displays the Seed Settings panel.

Step 3 Enter the name or IP address of a seed node in the **IP Address or DNS Hostname** field, and click **Add Node**. SGM displays details of the SNMP settings for the seed node in the right pane of the window.

Continue to add as many seed nodes as necessary.

Step 4 When you are ready to save the list of seed nodes in a new seed file, select **File>Save As** from the Discovery Dialog menu. SGM displays the Save File Dialog - Seed File List dialog (Figure 3-6).

The Save File Dialog - Seed File List dialog contains the following fields:

- **Type**—Icon indicating whether the item in the table is a file or a folder.
- **Name**—Name of the seed file or folder.
- **Last Modified**—Date and time the seed file or folder was last modified.
- **Size (bytes)**—Size of the seed file or folder, in bytes.
- **Filename**—Name by which you want to save the seed file. You can use any letters, numbers, or characters in the name that are allowed by your operating system.
- **Make this my preferred start option**—Specifies whether the selected seed file is to be loaded automatically whenever this SGM client is started. By default, this checkbox is cleared for all seed files. That is, no seed file is loaded automatically when the SGM client is started.
- **Number of Files**—Total number of seed files and folders (displayed in bottom left corner).

Enter the new name and click **OK**. SGM saves the seed file with the new name, closes the Save File Dialog - Seed File List dialog, and returns to the Discovery Dialog.

SGM stores the new seed file in the seed file directory on the SGM server:

- If you installed SGM in the default directory, */opt*, then the SGM seed file directory is */opt/CSCOsgm/seeds*.
 - If you installed SGM in a different directory, then the SGM seed file directory is located in that directory.
-

Modifying an Existing Seed File

To modify an existing seed file in SGM:

-
- Step 1** Select **Edit>Network Discovery** from the SGM Main Menu. SGM displays the Discovery Dialog (Figure 3-2).
- Step 2** Select the **Seed Settings** tab, if it is not already selected. SGM displays the Seed Settings panel.
- Step 3** Select **File>Load Seeds** from the Discovery Dialog menu. SGM displays the Load File Dialog - Seed File List dialog (Figure 3-3).

The Load File Dialog - Seed File List dialog contains the following fields:

- **Type**—Icon indicating whether the item in the table is a file or a folder.
- **Name**—Name of the seed file or folder.
- **Last Modified**—Date and time the seed file or folder was last modified.
- **Size (bytes)**—Size of the seed file or folder, in bytes.
- **Make this my preferred start option**—Specifies whether the selected seed file is to be loaded automatically whenever this SGM client is started. By default, this checkbox is cleared for all seed files. That is, no seed file is loaded automatically when the SGM client is started.
- **Number of Files**—Total number of seed files and folders (displayed in bottom left corner).

To load a seed file, select the seed file in the list and click **OK**.

SGM closes the Load File Dialog - Seed File List dialog, loads the seed file, and returns to the Discovery Dialog. SGM lists all of the seed nodes in the seed file in the left pane of the window, and displays details of the SNMP settings for the seed nodes in the right pane.

To close the Load File Dialog - Seed File List dialog without loading a seed file, click **Cancel**.

- Step 4** (Optional) To add another seed node to the seed file, enter the name or IP address of the seed node in the **IP Address or DNS Hostname** field, and click **Add Node**.
- Step 5** (Optional) To delete a seed node from the seed file, select the seed node and click **Delete Node**.

- Step 6** When you are ready to save the modified seed file, use one of the following procedures:
- To save the changes you have made to the seed file without changing the name of the file, select **File>Save** from the Discovery Dialog menu.
 - To save the changes you have made to the seed file with a new name, select **File>Save As** from the Discovery Dialog menu. SGM displays the Save File Dialog - Seed File List dialog (Figure 3-6).

The Save File Dialog - Seed File List dialog contains the following fields:

- **Type**—Icon indicating whether the item in the table is a file or a folder.
- **Name**—Name of the seed file or folder.
- **Last Modified**—Date and time the seed file or folder was last modified.
- **Size (bytes)**—Size of the seed file or folder, in bytes.
- **Filename**—Name by which you want to save the seed file.

If you create a new seed file name, you can use any letters, numbers, or characters in the name that are allowed by your operating system.

- **Make this my preferred start option**—Specifies whether the selected seed file is to be loaded automatically whenever this SGM client is started. By default, this checkbox is cleared for all seed files. That is, no seed file is loaded automatically when the SGM client is started.
- **Number of Files**—Total number of seed files and folders (displayed in bottom left corner).

To save the seed file with a new name, use one of the following procedures:

- To save the file with a completely new name, enter the new name and click **OK**.
- To save the file with an existing name, overwriting an old seed file, select the name in the list and click **OK**.

SGM saves the seed file with the new name, closes the Save File Dialog - Seed File List dialog, and returns to the Discovery Dialog.

**Note**

If another user modifies and saves the seed file before you save your changes, SGM asks if you want to overwrite that user's changes. If you choose to do so, the other user's changes are overwritten and lost. If you choose not to do so, your changes are lost, unless you save the seed file to a different filename.

SGM stores the seed file in the seed file directory on the SGM server:

- If you installed SGM in the default directory, */opt*, then the SGM seed file directory is */opt/CSCOsgm/seeds*.
- If you installed SGM in a different directory, then the SGM seed file directory is located in that directory.

To delete a seed file from the seed file list, select a file and click **Delete**. SGM issues an informational message containing the name and location of the deleted file.

To save any changes you made to the list of files, click **OK**. SGM saves the changes and closes the Load File Dialog - Seed File List dialog.

To close the Save File Dialog - Seed File List dialog without saving the seed file or saving any changes to the seed file list, click **Cancel**.

Creating and Modifying Seed Files Using a Text Editor

A seed file is simply an unformatted list of seed node names. To create a seed file using a text editor, simply create a file and list the seed node names, one on each line, with no other formatting:

new-york-a

new-york-b

chicago-c

When you save and name the seed file, keep the following considerations in mind:

- You can use any letters, numbers, or characters in the name that are allowed by your operating system.
- SGM saves the seed file with a *.see* file extension.
- SGM saves the seed file in the SGM server's seed file directory, *seeds*:
 - If you installed SGM in the default directory, */opt*, then the seed file directory is */opt/CSCOsgm/seeds/*.
 - If you installed SGM in a different directory, then the seed file directory is located in that directory.

When SGM loads the seed file, it verifies the syntax of the file, deleting blank lines and extraneous leading and trailing spaces as needed. SGM also verifies that each seed node name resolves to a valid IP address. If a name does not resolve to a valid IP address, SGM logs the erroneous entry and ignores it.

For example, given the following seed file:

```
new-york-a<space>  
<space>new-york-b  
  
XXXXXXXXXX  
  
<blank line>  
  
<tab>chicago-c<tab>
```

SGM loads the following entries:

```
new-york-a  
  
new-york-b  
  
chicago-c
```

Working with Views

When SGM discovers your network, all discovered nodes, linksets, and links are placed in a DEFAULT configuration view, which is stored on the SGM server and shared by all SGM clients. The DEFAULT view cannot be modified by the clients. It is always available, for users who need to view the entire network.

Initially, all clients use the DEFAULT view. However, SGM enables you to create your own, client-specific views, which are subsets of the DEFAULT view, to meet your individual needs.

You can choose the nodes you are interested in managing, remove all other nodes from your view, and modify the layout of the topology map in the Topology window. You can save all of this customized information in a view, set that view as the default view for the SGM client, and use the SGM client from then on to manage only the part of the network you are interested in, with the settings you prefer.

You can also create many different views on a given SGM client, with each view devoted to a different aspect of the network. You can then switch between views to manage different parts of the network, or switch to the DEFAULT view to see the entire network.

If a given SGM client is used by more than one person, each user can create his or her own personal view.

To help you keep track of which view you are currently using, most SGM windows display the following information:

- In the title bar, the name of the system on which the SGM server is running.
- In the bottom right corner:
 - The name of the current view.
 - The text (**New Nodes Exist**), if there is at least one newly discovered node in the network that has not been added to your current view. To add the node to your current view, see the “[Viewing the Topology of the Network](#)” section on page 3-163. To exclude the node from your current view, see [Step 5](#) in this section.
 - The text (**Modified**), if the view has been modified but not yet saved. You must save the view if you want to save your changes. See [Step 11](#) in this section for more details.

If your personal default view has been deleted, then the next time you launch the client SGM informs you that your default view has been deleted and that your view has been reset to the DEFAULT view. To choose another view as your default view, use the Load File Dialog - View List. See the “[Loading a Client-Specific View](#)” section on page 3-32 for details.

This section includes the following information:

- [Creating a View, page 3-25](#)
- [Loading the DEFAULT View, page 3-32](#)
- [Loading a Client-Specific View, page 3-32](#)

Related Topics:


- [Discovering the Network, page 3-6](#)
- [Modifying Preference Settings, page 5-3](#)
- [Modifying the Message Display, page 5-19](#)
- [Viewing the Topology of the Network, page 3-163](#)

Creating a View

To create a client-specific network view:

- Step 1** Before creating a client-specific network view, make sure that Discovery has been run at least once, and there is data in the server's SGM database. See the [“Discovering the Network” section on page 3-6](#) for details.
- Step 2** Select **Edit>Network Views** from the SGM Main Menu. SGM displays the Network View Editor window ([Figure 3-7](#)).

Figure 3-7 Network View Editor Window

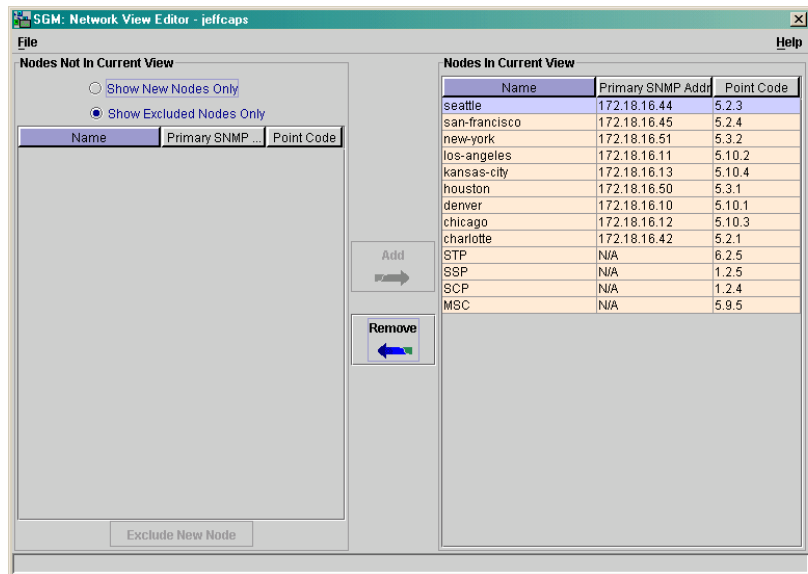

The Nodes In Current View pane lists the name, primary SNMP address, and primary point code of every node that is in the current view.

748-59

With **Show New Nodes Only** selected, the Nodes Not In Current View pane lists the name, primary SNMP address, and primary point code of every newly discovered node that is *not* in the current view.

With **Show Excluded Nodes Only** selected, the Nodes Not In Current View pane lists the name, primary SNMP address, and primary point code of every existing or newly discovered node that has been *excluded from* the current view.

Step 3 (Optional) If you have already saved a view and you want to modify it, select the **File>Load** menu option. SGM prompts you for the name of the view you want to load. Enter the name of the view, or accept the default view name, then click **OK** to load the view.

Step 4 (Optional) If there are nodes listed in the Nodes In Current View pane that you do *not* want to manage, you can remove them from the current view:

- a. Select one or more nodes in the Nodes In Current View pane,
- b. Select **Show Excluded Nodes Only**.
- c. Click **Remove**. SGM removes the nodes from the current view and moves them from the Nodes In Current View table to the list of excluded nodes in the Nodes Not In Current View table.

Step 5 (Optional) If SGM discovers one or more new nodes in the network, the following actions take place:

- SGM broadcasts the discovery of the new nodes to all SGM clients.
- SGM displays the text (**New Nodes Exist**) in the bottom right corner of most SGM windows.
- SGM adds the newly discovered nodes to the list of new nodes in the Nodes Not In Current View pane as soon as they are discovered.
- SGM adds graphical elements for the newly discovered nodes to the topology new nodes panel in the left pane of the Topology window. For more information, see the [“Viewing the Topology of the Network” section on page 3-163](#).

If you want to manage the newly discovered nodes, you need to add them to your current view:

- a. Select **Show New Nodes Only**.
- b. Select one or more new nodes.
- c. Click **Add**. SGM adds the nodes to the current view and moves them from the list of new nodes to the Nodes In Current View table.

If you do *not* want to manage the newly discovered nodes, you need to exclude them from your current view:

- a. Select **Show New Nodes Only**.
- b. Select one or more new nodes.
- c. Click **Exclude New Node**. SGM excludes the nodes from the current view and from the list of new nodes. (You can see excluded nodes by selecting **Show Excluded Nodes Only**.) New nodes that are excluded are *never* added to the list of new nodes, not even when other new nodes are discovered and added.

Step 6 (Optional) At times, you might want to make an existing node a new node:

- a. Select one or more nodes in the Nodes In Current View table.
- b. Select **Show New Nodes Only**.
- c. Click **Remove**. SGM removes the nodes from the current view and adds them to the list of new nodes in the Nodes Not In Current View table.

Step 7 (Optional) To see every *new* node in the network that is *not* in the current view, select **Show New Nodes Only**. SGM displays the list of new nodes in the Nodes Not In Current View pane.

Step 8 (Optional) To see every *excluded* node in the network that is not in the current view, select **Show Excluded Nodes Only**. SGM displays the list of excluded new nodes in the Nodes Not In Current View pane.

Step 9 (Optional) To move an excluded node back into the current view:

- a. Select **Show Excluded Nodes Only**.
- b. Select one or more excluded nodes.
- c. Click **Add**. SGM adds the nodes to the current view and moves them from the list of excluded nodes to the Nodes In Current View table.

Step 10 (Optional) To apply the changes you have made at any time without closing the Network View Editor window, click **File>Apply**. SGM applies the changes to all SGM windows immediately.

Step 11 When you are satisfied with the changes you have made to the view, use one of the following procedures to save the view:


- To save the changes you have made to the view without changing the name of the file, select **File>Save** from the Network View Editor menu.



Note You cannot save changes to the DEFAULT view. If you are currently using the DEFAULT view and you select **File>Save**, SGM displays the Save File Dialog - View List dialog ([Figure 3-8](#)).

- To save the changes you have made to the view with a new name, select **File>Save As** from the Discovery Dialog menu. SGM displays the Save File Dialog - View List dialog ([Figure 3-8](#)).

Figure 3-8 Save File Dialog - View List Dialog

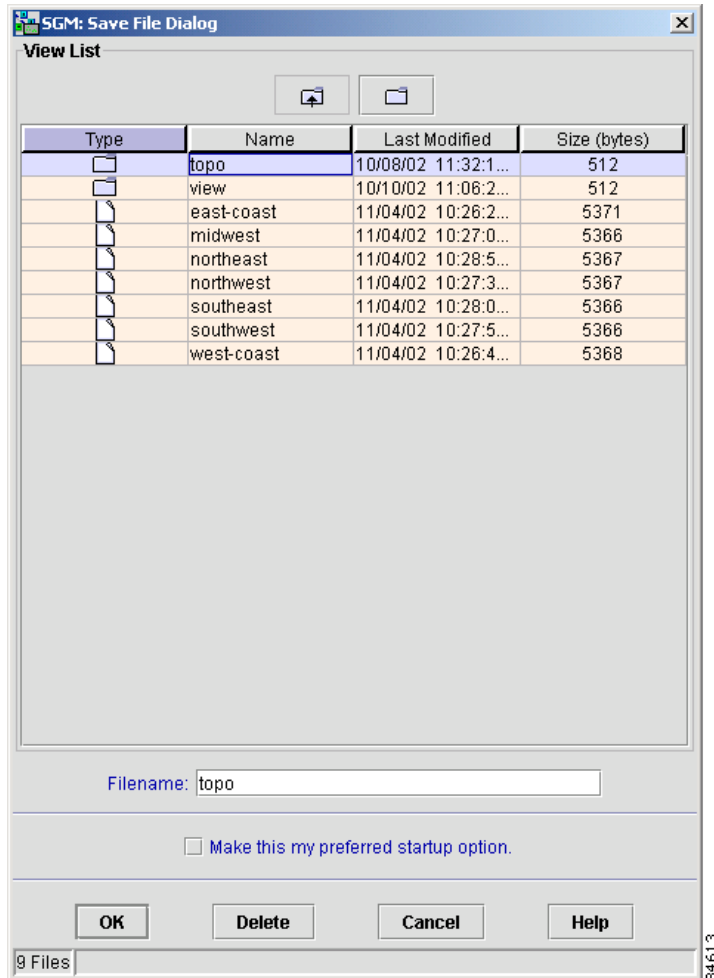

The Save File Dialog - View List dialog contains the following fields:

- **Type**—Icon indicating whether the item in the table is a file or a folder.
- **Name**—Name of the view file or folder.
- **Last Modified**—Date and time the view file or folder was last modified.
- **Size (bytes)**—Size of the view file or folder, in bytes.

- **Filename**—Name by which you want to save the view. You must specify a name other than DEFAULT. You cannot save changes to the DEFAULT view.

If you create a new view name, you can use any letters, numbers, or characters in the name that are allowed by your operating system.

- **Make this my preferred start option**—Specifies whether the selected view is to be loaded automatically whenever the associated preferences file is loaded:
 - To load the selected view, select the view, then select this checkbox.
 - To load the last-used view, clear the checkbox. This is the default setting.
- **Number of Files**—Total number of view files and folders (displayed in bottom left corner).

To save the view with a new name, use one of the following procedures:

- To save the file with a completely new name, enter the new name and click **OK**.
- To save the file with an existing name, overwriting an old view, select the name in the list and click **OK**.

SGM saves the view with the new name, closes the Save File Dialog - View List dialog, and returns to the Discovery Dialog.



Note If another user modifies and saves the view before you save your changes, SGM asks if you want to overwrite that user's changes. If you choose to do so, the other user's changes are overwritten and lost. If you choose not to do so, your changes are lost, unless you save the view to a different filename.

SGM stores the view in the view file directory on the SGM server:

- If you installed SGM in the default directory, */opt*, then the SGM view file directory is */opt/CSCOsgm/views*.
- If you installed SGM in a different directory, then the SGM view file directory is located in that directory.

To delete a view from the view list, select a file and click **Delete**. SGM issues an informational message containing the name and location of the deleted file.

To save any changes you made to the list of files, click **OK**. SGM saves the changes and closes the Load File Dialog - View List dialog.

To close the Save File Dialog - View List dialog without saving the view or saving any changes to the view list, click **Cancel**.

Step 12 (Optional) To close the Network View Editor window at any time, click **File>Close**. If you have modified the view, SGM asks if you want to apply the changes before leaving the window:

- Click **Yes** to apply the changes to the current view. SGM applies the changes to all SGM windows immediately. SGM then asks if you want to make this the default view:
 - Click **Yes** to make this view the new default view. In the future, when this client is started, this will be the default view.
 - Click **No** to retain your old default view.

SGM closes the Network View Editor window.

- Click **No** to keep the current view as-is, without applying any changes. SGM closes the Network View Editor window.
- Click **Cancel** to close the prompt window and return to the Network View Editor window without applying any changes to the current view.

If you are working in a custom view (that is, not in the DEFAULT view) and you exit the SGM client, SGM automatically saves any changes you made to the view.

Loading the DEFAULT View

To load the DEFAULT network view:


-
- Step 1** Select **Edit>Network Views** from the SGM Main Menu. SGM displays the Network View Editor window ([Figure 3-7](#)).
 - Step 2** Select **File>Load DEFAULT View** from the Discovery Dialog menu. SGM loads the DEFAULT view.
-

Loading a Client-Specific View

To load a client-specific network view:

-
- Step 1** Select **Edit>Network Views** from the SGM Main Menu. SGM displays the Network View Editor window ([Figure 3-7](#)).
 - Step 2** Select **File>Load** from the Discovery Dialog menu. SGM displays the Load File Dialog - View List dialog ([Figure 3-9](#)).

Figure 3-9 Load File Dialog - View List Dialog

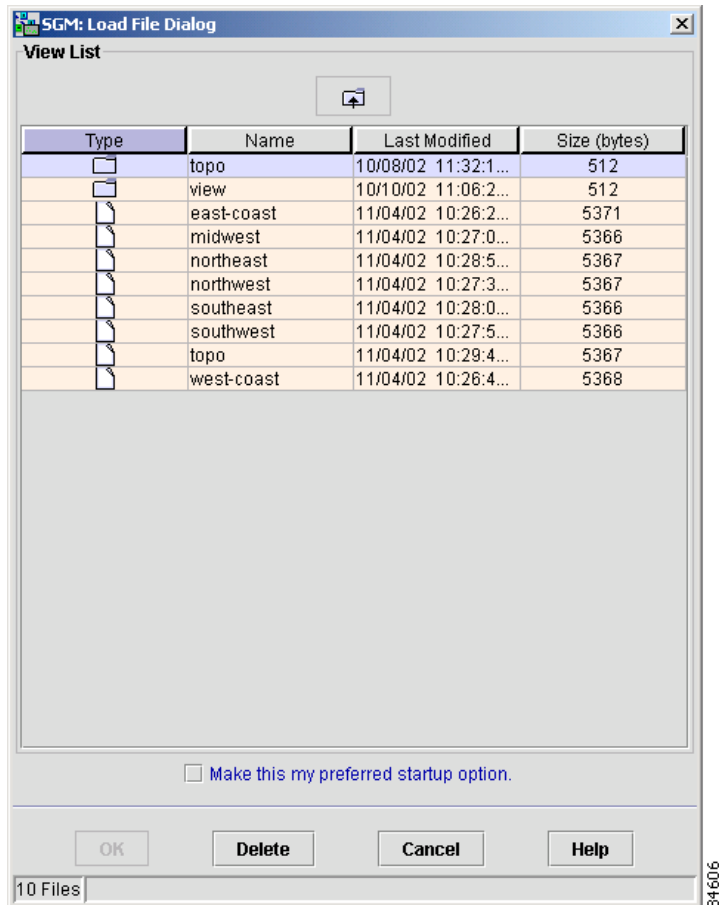

The Load File Dialog - View List dialog contains the following fields:

- **Type**—Icon indicating whether the item in the table is a file or a folder.
- **Name**—Name of the view file or folder.
- **Last Modified**—Date and time the view file or folder was last modified.
- **Size (bytes)**—Size of the view file or folder, in bytes.

- **Make this my preferred start option**—Specifies whether the selected view is to be loaded automatically whenever the associated preferences file is loaded:
 - To load the selected view, select the view, then select this checkbox.
 - To load the last-used view, clear the checkbox. This is the default setting.
- **Number of Files**—Total number of view files and folders (displayed in bottom left corner).

To load a view, select the view in the list and click **OK**.

SGM closes the Load File Dialog - View List dialog, loads the view, and returns to the Network View Editor window.

To close the Load File Dialog - View List dialog without loading a view, click **Cancel**.

Working with Linksets

SGM enables you to view information about all discovered linksets, including their associated nodes, status, and other important information.

This section includes the following information:

- [Viewing Basic Information for Linksets, page 3-35](#)
- [Viewing Detailed Information for a Linkset, page 3-39](#)
- [Viewing ITP Link Statistics for a Linkset, page 3-65](#)
- [Editing a Linkset, page 3-74](#)
- [Viewing Notes for a Linkset, page 3-76](#)
- [Deleting a Linkset, page 3-77](#)
- [Ignoring a Linkset, page 3-79](#)
- [Viewing Ignored Linksets, page 3-80](#)


Related Topics:

- [Working with Nodes, page 3-81](#)
- [Working with Links, page 3-111](#)
- [Viewing the Topology of the Network, page 3-163](#)
- [Resizing, Sorting, and Hiding Table Columns, page 3-178](#)
- [Modifying Preference Settings, page 5-3](#)

Viewing Basic Information for Linksets

To view basic information for linksets, select **View>Linksets** from the SGM Main Menu. SGM displays the Linkset Window ([Figure 3-10](#)).

Figure 3-10 Linkset Window

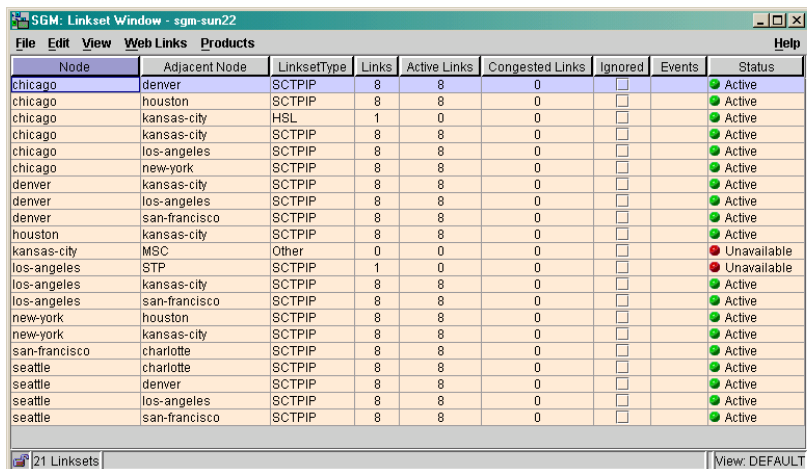

Node	Adjacent Node	LinksetType	Links	Active Links	Congested Links	Ignored	Events	Status
chicago	denver	SCTPIP	8	8	0	<input type="checkbox"/>		Active
chicago	houston	SCTPIP	8	8	0	<input type="checkbox"/>		Active
chicago	kansas-city	HSL	1	0	0	<input type="checkbox"/>		Active
chicago	kansas-city	SCTPIP	8	8	0	<input type="checkbox"/>		Active
chicago	los-angeles	SCTPIP	8	8	0	<input type="checkbox"/>		Active
chicago	new-york	SCTPIP	8	8	0	<input type="checkbox"/>		Active
denver	kansas-city	SCTPIP	8	8	0	<input type="checkbox"/>		Active
denver	los-angeles	SCTPIP	8	8	0	<input type="checkbox"/>		Active
denver	san-francisco	SCTPIP	8	8	0	<input type="checkbox"/>		Active
houston	kansas-city	SCTPIP	8	8	0	<input type="checkbox"/>		Active
kansas-city	MSC	Other	0	0	0	<input type="checkbox"/>		Unavailable
los-angeles	STP	SCTPIP	1	0	0	<input type="checkbox"/>		Unavailable
los-angeles	kansas-city	SCTPIP	8	8	0	<input type="checkbox"/>		Active
los-angeles	san-francisco	SCTPIP	8	8	0	<input type="checkbox"/>		Active
new-york	houston	SCTPIP	8	8	0	<input type="checkbox"/>		Active
new-york	kansas-city	SCTPIP	8	8	0	<input type="checkbox"/>		Active
san-francisco	charlotte	SCTPIP	8	8	0	<input type="checkbox"/>		Active
seattle	charlotte	SCTPIP	8	8	0	<input type="checkbox"/>		Active
seattle	denver	SCTPIP	8	8	0	<input type="checkbox"/>		Active
seattle	los-angeles	SCTPIP	8	8	0	<input type="checkbox"/>		Active
seattle	san-francisco	SCTPIP	8	8	0	<input type="checkbox"/>		Active

21 Linksets | View: DEFAULT

The Linkset Window displays information about the linksets that have been discovered by SGM.

By default, SGM displays all of the columns in the Linkset Window except **Internal ID**, **Name**, **Local Point Code**, **Adj Point Code**, and **Notes**. To display these columns, or to hide other columns, see the procedures in the [“Modifying Linkset Table Column Settings”](#) section on page 5-17.

74857

To see mouse over help popup for each column in the table, place the cursor over a column header.

If a cell is too small to show all of its data, place the cursor over the cell to see the full data in a mouse over help popup.

You can resize each column, or sort the table based on the information in one of the columns. See the [“Resizing, Sorting, and Hiding Table Columns” section on page 3-178](#) for more details.

The Linkset Window displays the following information for each discovered linkset:

- **Internal ID**—The internal ID of the linkset. The internal ID is a unique ID for every event, link, linkset, and node, assigned by SGM for its own internal use. It can also be useful when the TAC is debugging problems.
- **Name**—Name of the linkset.
- **Node**—Name of primary node for the linkset.



Note

SGM considers the node that it discovered first to be the primary node, and the other node to be the adjacent node. If, in the next Discovery, SGM discovers the adjacent node first, it considers *that* node to be the primary node and the former primary node to be the new adjacent node. Thus, in SGM, linkset sgm-2600a-to-smg-7500j is equivalent to sgm-7500j-to-smg-2600a.

- **Local Point Code**—Point code of the primary node for the linkset.
- **Adjacent Node**—Name of adjacent node for the linkset.
- **Adj Point Code**—Point code of the adjacent node for the linkset.

- **Linkset Type**—Type of linkset, which SGM determines by examining the links defined in the linkset. Possible linkset types are:
 - **HSL**—The links in this linkset use the SS7-over-ATM (Asynchronous Transfer Mode) high-speed protocol.
 - **SCTPIP**—The links in this linkset use the Stream Control Transmission Protocol (SCTP) IP transport protocol.
 - **Serial**—The links in this linkset use the serial SS7 signaling protocol.
 - **Mixed**—The links in this linkset are of two or more types. (This arrangement is not recommended.)
 - **Other**—No links have been defined for this linkset.
- **Links**—Total number of links in the linkset.
- **Active Links**—Number of links in the linkset that are **Active**.
- **Congested Links**—Number of links in the linkset that are **Congested**.
- **Ignored**—Indicates whether the linkset is to be included when aggregating and displaying SGM status information.
- **Notes**—Indicates whether there is a note associated with the linkset.
- **Events**—Indicates whether there is a recent event associated with the linkset.
 - To delete the event icon from SGM displays for a specific linkset, select the linkset and click the icon.
 - To delete the event icon from SGM displays for all linksets, select **Edit>Clear Event Icon>All** from the SGM Main Menu.



Note During Discovery, SGM might flag most linksets with an event icon. If the event icons are too distracting, use the **Edit>Clear Event Icon>All** menu option to remove them.

- **Status**—Current status of the linkset. Possible values are:
 - **Active (green ball)**—The linkset is currently fully functional.
 - **Unavailable (red ball)**—An error is preventing traffic from flowing on this linkset.
 - **Shutdown (blue ball)**—A router administrator has set the linkset to prevent traffic from flowing. When a linkset is set to **Shutdown**, all its associated links are set to **Failed** by Cisco IOS.
 - **Unknown (red ball)**—Either the node associated with this linkset has failed to respond to an SNMP request, or SGM found that the linkset no longer exists.
 - **Warning (yellow ball)**—The linkset is active, but one or more links in the linkset is congested or is in **Failed**, **Unknown**, or **Warning** status, and is not **Ignored**. At least one link is available and can carry traffic.


There is no **Unshut** or **No Shut** status.

Viewing Detailed Information for a Linkset

To view detailed information about a linkset, including its associated nodes, links, events, status, and other information:

- Step 1** Select a linkset in the Linkset window (Figure 3-10) or Topology window (Figure 3-54).
- Step 2** Select **View > Details** from the SGM Main Menu. SGM displays the Details Window for the linkset (Figure 3-11).

Figure 3-11 Details Window, Showing Linkset Configuration Data

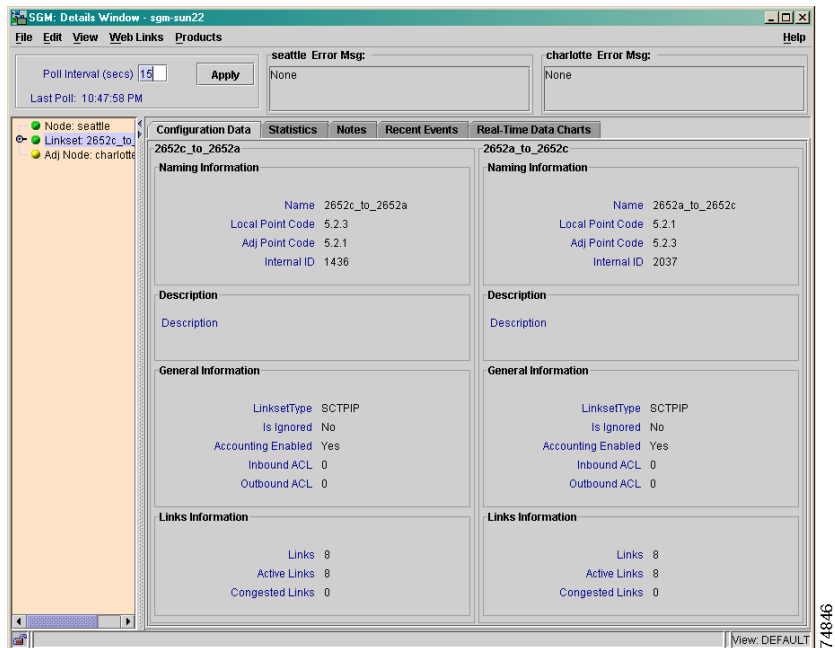

If the Linkset Details pane is not already displayed, click **Linkset** in the left pane. SGM displays detailed information for the linkset in the right pane.

The Poll Interval section at the top right of the Details window displays the time of the last poll, and enables you to change the poll interval:

- The **Last Poll** field initially displays the phrase **Waiting for first poll**. After the first polling cycle, SGM populates this field with the actual time of the last poll.
- To change the poll interval, enter a new value (in seconds) and click **Apply**. The valid range is 15 to 999 seconds. The default value is 15 seconds.

The Error Message section of the Details window displays the last error messages received by the node and by the adjacent node.

Updates for the linkset that are received from the SGM server are reflected automatically in this window.



Note The Details window polls your network periodically. To prevent unnecessary traffic on your network, close this window when you no longer need to refer to it.

The Linkset Details pane displays the following detailed information for the linkset (some of which is also displayed in the Linkset Window), with details for the selected linkset in the left column and for the adjacent linkset in the right column.



Note Each node is polled individually, so timing considerations might cause small discrepancies in the data between the left and right columns.

Step 3 (Optional) To view naming information for the linkset, select the Configuration Data tab. SGM displays configuration data for the linkset in the right panel ([Figure 3-11](#)).

SGM displays the Naming Information table for the selected linkset in the left column, and for the adjacent linkset in the right column:

- **Name**—Name of the linkset.
- **Local Point Code**—Point code of the primary node for the linkset.

- **Adj Point Code**—Point code of the adjacent node for the linkset.
- **Internal ID**—Internal ID of the linkset. The internal ID is a unique ID for every event, link, linkset, and node, assigned by SGM for its own internal use. It can also be useful when the TAC is debugging problems.

Step 4 (Optional) To view descriptive information for the linkset, select the Configuration Data tab. SGM displays the Description table for the selected linkset in the left column, and for the adjacent linkset in the right column. If the linkset has no description, the table is blank.

Step 5 (Optional) To view general information for the linkset, select the Configuration Data tab. SGM displays the General Information table for the selected linkset in the left column, and for the adjacent linkset in the right column:

- **Linkset Type**—Type of linkset, which SGM determines by examining the links defined in the linkset. Possible linkset types are:
 - **HSL**—The links in this linkset use the SS7-over-ATM (Asynchronous Transfer Mode) high-speed protocol.
 - **SCTPIP**—The links in this linkset use the Stream Control Transmission Protocol (SCTP) IP transport protocol.
 - **Serial**—The links in this linkset use the serial SS7 signaling protocol.
 - **Mixed**—The links in this linkset are of two or more types. (This arrangement is not recommended.)
 - **Other**—No links have been defined for this linkset.
- **Is Ignored**—Indicates whether the linkset is **Ignored** (that is, whether the linkset is to be included when aggregating and displaying SGM status information).
- **Accounting Enabled**—Indicates whether the collection of SS7 accounting statistics is enabled for the linkset.
- **Inbound ACL**—Inbound IP access control list (ACL) for the linkset. If there is no inbound ACL for the linkset, this field displays **0**.
- **Outbound ACL**—Outbound ACL for the linkset. If there is no outbound ACL for the linkset, this field displays **0**.

Step 6 (Optional) To view links information for the linkset, select the Configuration Data tab. SGM displays the Links Information table for the selected linkset in the left column, and for the adjacent linkset in the right column:

- **Links**—Total number of links in the linkset.
- **Active Links**—Number of links in the linkset that are **Active**.
- **Congested Links**—Number of links in the linkset that are **Congested**.

Step 7 (Optional) To view status information for the linkset, select the Statistics tab. SGM displays statistics for the linkset in the right panel ([Figure 3-12](#)).

Figure 3-12 Details Window, Showing Linkset Statistics

The screenshot shows the SGM Details Window with the following data:

Linkset	Status	Last State Change	Packets Received Per Sec	Packets Sent Per Sec	Drops	Bits Received Per Sec	Bits Sent Per Sec	LSSU Packets Received	LSSU Packets Sent	Receive Plan Capacity	Receive Utilization %	Send Plan Capacity	Send Utilization %
2652c_to_2652a	Active	Jun 7, 2002 9:58:45 PM	0.26	49.70	0	807.91	19,902.44	8	8	512000	0.16	512000	3.89
2652a_to_2652c	Active	Jun 7, 2002 9:58:51 PM	49.60	0.13	0	21,346.70	939.31	16	16	512000	4.17	512000	0.18

74853

SGM displays the Status Information table for the selected linkset in the left column, and for the adjacent linkset in the right column:

- **Status**—Current status of the linkset. Possible values are:
 - **Active (green ball)**—The linkset is currently fully functional.
 - **Unavailable (red ball)**—An error is preventing traffic from flowing on this linkset.
 - **Shutdown (blue ball)**—A router administrator has set the linkset to prevent traffic from flowing. When a linkset is set to **Shutdown**, all its associated links are set to **Failed** by Cisco IOS.
 - **Unknown (red ball)**—Either the node associated with this linkset has failed to respond to an SNMP request, or SGM found that the linkset no longer exists.
 - **Warning (yellow ball)**—The linkset is active, but one or more links in the linkset is congested or is in **Failed**, **Unknown**, or **Warning** status, and is not **Ignored**. At least one link is available and can carry traffic.

There is no **Unshut** or **No Shut** status.

- **Last State Change**—Date and time that the status of the linkset last changed.

Step 8

(Optional) To view packet information for the linkset, select the Statistics tab. SGM displays the Packet Information table for the selected linkset in the left column, and for the adjacent linkset in the right column:

- **Packets Received Per Sec**—Number of packets received by the linkset per second. This field initially displays the phrase **Waiting for second poll**. After two polling cycles, SGM populates this field with actual calculated rates.
- **Packets Sent Per Sec**—Number of packets sent by the linkset per second. This field initially displays the phrase **Waiting for second poll**. After two polling cycles, SGM populates this field with actual calculated rates.
- **Drops**—Total number of packets that have been dropped by the linkset.

- Step 9** (Optional) To view bit information for the linkset (or byte information, if you cleared the **Show Details in Bits Instead of Bytes** checkbox in the Preferences Window), select the Statistics tab. SGM displays the Bit Information table (or Byte Information table) for the selected linkset in the left column, and for the adjacent linkset in the right column:
- **Bits Received Per Sec** or **Bytes Received Per Sec**—Number of bits or bytes received by the linkset per second. This field initially displays the phrase **Waiting for second poll**. After two polling cycles, SGM populates this field with actual calculated rates.
 - **Bits Sent Per Sec** or **Bytes Sent Per Sec**—Number of bits or bytes sent by the linkset per second. This field initially displays the phrase **Waiting for second poll**. After two polling cycles, SGM populates this field with actual calculated rates.
- Step 10** (Optional) To view LSSU information for the linkset, select the Statistics tab. SGM displays the LSSU Information table for the selected linkset in the left column, and for the adjacent linkset in the right column:
- **LSSU Packets Received**—Total number of SS7 Message Transfer Part Layer 2 (MTP2) Links Status Signal Unit (LSSU) packets received by the linkset.
 - **LSSU Packets Sent**—Total number of LSSU packets sent by the linkset.
- Step 11** (Optional) To view utilization information for the linkset, select the Statistics tab. SGM displays the Utilization Information table for the selected linkset in the left column, and for the adjacent linkset in the right column:
- **Receive Plan Capacity**—Planned capacity of the linkset to receive, in bits per second.
 - For a linkset of type **Serial** or **HSL**, available bandwidth for the linkset.
 - For a linkset of type **SCTPIP** or **Mixed**, set on the router using the **plan-capacity** CS7 linkset configuration command. If **Receive Plan Capacity** is not set on the router for this linkset, this field displays the value **0**.
 - For a linkset of type **Other**, this field always displays the value **0**.

- **Receive Utilization**—Amount of the linkset's receive capacity being used, as a percentage or in Erlangs, calculated using the following formula:

$$\text{Receive Utilization} = (\text{Bits Received Per Sec}) / \text{Receive Plan Capacity}$$

This field initially displays the phrase **Waiting for second poll**. After two polling cycles, SGM populates this field with actual calculated rates.

- For a linkset of type **SCTPIP** or **Mixed**, if **Receive Plan Capacity** is not set on the router for this linkset, this field displays the phrase **Set Plan Capacity on Router**.
- For a linkset of type **Other**, this field always displays the phrase **Set Plan Capacity on Router**.
- **Send Plan Capacity**—Planned capacity of the linkset to send, in bits per second.
 - For a linkset of type **Serial** or **HSL**, available bandwidth for the linkset.
 - For a linkset of type **SCTPIP** or **Mixed**, set on the router using the **plan-capacity** CS7 linkset configuration command. If **Send Plan Capacity** is not set on the router for this linkset, this field displays the value **0**.
 - For a linkset of type **Other**, this field always displays the value **0**.
- **Send Utilization**—Amount of the linkset's send capacity being used, as a percentage or in Erlangs, calculated using the following formula:


$$\text{Send Utilization} = (\text{Bits Sent Per Sec}) / \text{Planned Capacity}$$

This field initially displays the phrase **Waiting for second poll**. After two polling cycles, SGM populates this field with actual calculated rates.

- For a linkset of type **SCTPIP** or **Mixed**, if **Send Plan Capacity** is not set on the router for this linkset, this field displays the phrase **Set Plan Capacity on Router**.
- For a linkset of type **Other**, this field always displays the phrase **Set Plan Capacity on Router**.

- Step 12** (Optional) To view notes for the linkset, select the Notes tab. SGM displays notes for the linkset in the right panel (Figure 3-13).


Figure 3-13 Details Window, Showing Linkset Notes

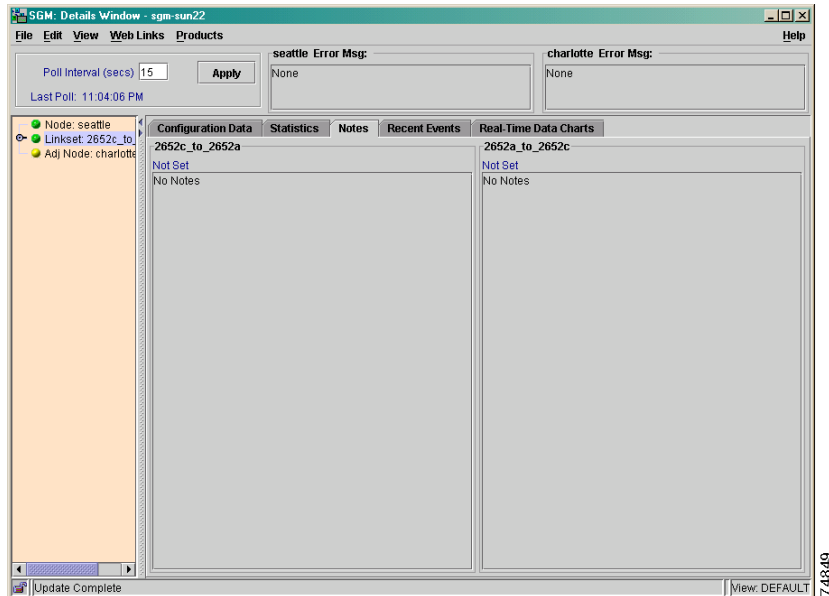

SGM displays the following information in the Notes table:

- Notes associated with the selected linkset in the left column.
 - Notes associated with the adjacent linkset in the right column.
 - The date and time the notes associated with each linkset were last updated.
 - The phrase **No Notes** if there are no notes associated with the linkset.
- Step 13** (Optional) To view information about all recent events associated with the linkset, select the Recent Events tab. SGM displays recent events for the linkset in the right panel (Figure 3-14).

Figure 3-14 Details Window, Showing Linkset Events

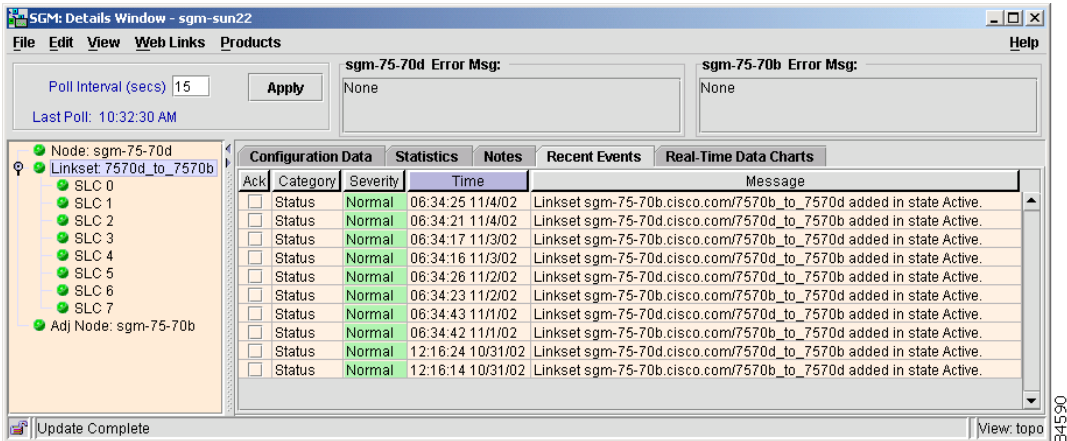

SGM displays the following information in the Recent Events table:

- By default, SGM displays only unacknowledged events in this table. To display acknowledged events in the table, see [Step 7](#) in the “[Modifying Overall Preference Settings](#)” section on page 5-5.
- **Ack**—Indicates whether the event has been acknowledged:
 - To acknowledge an unacknowledged event, select this checkbox.
 - To make a previously acknowledged event unacknowledged, clear this checkbox.
- **Note**—Indicates whether there is a note associated with the event.
- **Severity**—Severity of the event. Default values are:
 - **Admin**—The default color is cyan.
 - **Error**—The default color is coral.
 - **None**—The default color is white.
 - **Normal**—The default color is light green.
 - **Warning**—The default color is yellow.


You can customize this field. See the “[Modifying the SGM Event Configuration File \(Solaris Only\)](#)” section on page 5-25 for more information.

- **Time**—Date and time the event was logged.
- **Message**—Text of the message.

You can customize this field. See the “[Modifying the SGM Event Configuration File \(Solaris Only\)](#)” section on page 5-25 for more information.

- Step 14** (Optional) To view a received utilization chart for the linkset, select the Real-Time Data Charts tab. SGM displays the chart in the right panel ([Figure 3-15](#)).

Figure 3-15 Details Window, Showing Linkset Received Utilization

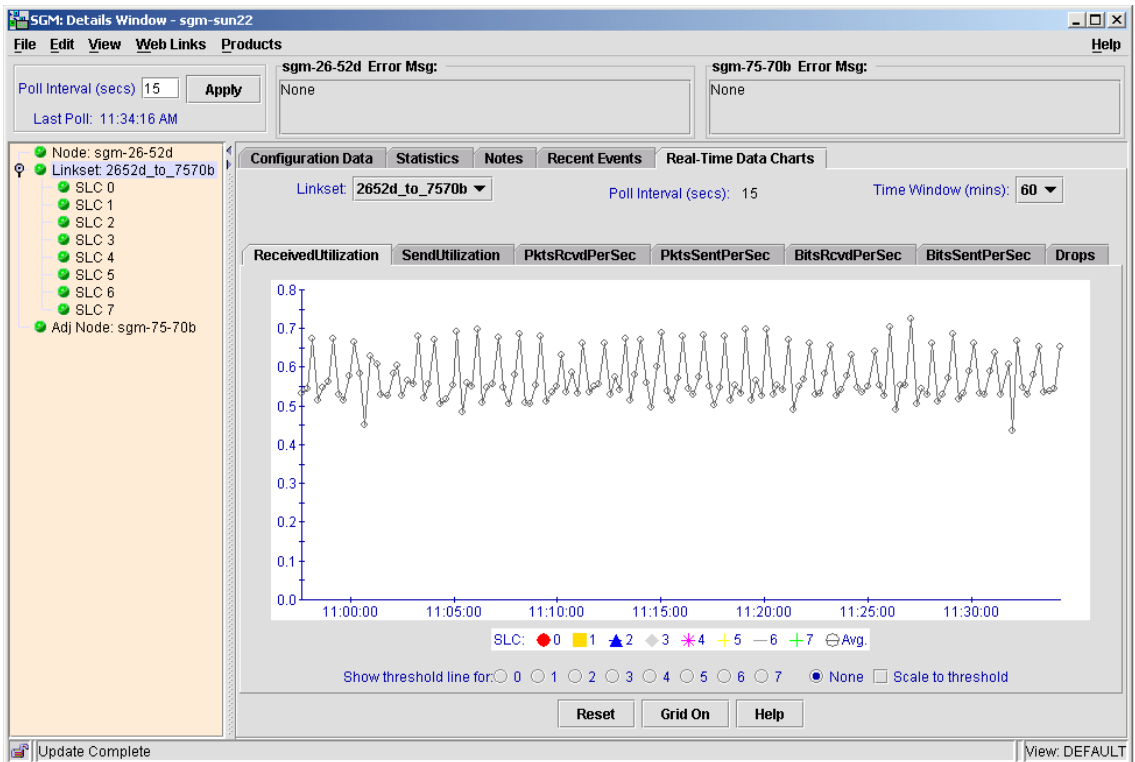

SGM displays the following information in the ReceivedUtilization chart:

- **Linkset**—Drop-down list box used to select the linkset for which data is to be displayed. By default, data is displayed for the selected linkset. To display data for the alternate linkset, select it in this list box.
- **Poll Interval (secs)**—Poll interval, in seconds, used to collect data for the **Received Utilization Chart**. You cannot edit this field directly. Instead, edit the **Poll Interval (secs)** field at the top right of the Details window.
- **Time Window (mins)**—Drop-down list box used to specify the length of time displayed in the **Received Utilization Chart**. Valid selections are 1, 2, 5, 10, 20, 40, or 60 minutes. The default selection is 5 minutes.
- **Received Utilization Chart**—Displays the average **Receive Utilization %** for all links on the linkset as a function of time, and optionally the **Receive Utilization %** for up to 16 individual links on the linkset.

To see the exact time and data coordinates for a data point, left-click the data point. The coordinates are displayed in the format (*hh:mm:ss, dd.dd*), where:

- *hh:mm:ss* is the time for that data point in hours, minutes, and seconds.
- *dd.dd* is the receive utilization percentage for that data point.

To remove the data for a link or for the average from the chart, click the icon in the **SLC** field. To return the data to the chart, click the icon again.

The time between poll data points is specified in the **Poll Interval (secs)** field. The total time displayed in the chart is specified in the **Time Window (mins)** field.

New data points are added to the right side of the chart. When the chart reaches the end of the time window (for example, after 5 minutes, if the **Time Window (mins)** field is set to 5), new data points continue to be added to the right side of the chart, while old data points “drop off” the left side of the chart.

If a poll is missed (for example, as a result of an SNMP timeout), SGM ignores the missing data point, stops drawing the line, and waits for the next valid data point to begin drawing the line again.

To scroll left, right, up, or down in the chart, drag the cursor while holding down **Shift** and the left mouse button.

To zoom in on a section of the chart, drag the cursor while holding down **Ctrl** and the left mouse button.

To reset the chart to the default view and scaling, click **Reset**.

- **SLC**—Displays up to 17 color-coded icons:
 - One for each link (SLC) in the **Received Utilization Chart**, up to 16 total links.
 - One for the average of all SLCs.

To remove the data for a link or for the average from the chart, click the icon in this field. To return the data to the chart, click the icon again.

- **Show threshold line for:**—Draws a horizontal line on the **Received Utilization Chart**, indicating the receive threshold for the selected link.

If you do not want to draw a threshold line, select **None**. This is the default setting.
- **Scale to threshold**—Scales the **Received Utilization Chart** in order to draw the threshold selected in the **Show threshold line for** field:
 - To scale the chart, select this checkbox.
 - To remove the scaling from the chart, clear this checkbox. This is the default setting.

To superimpose a graphic grid on the chart, which can make the data easier to read, click **Grid On**.

To remove the graphic grid from the chart, click **Grid Off**.

To display online help for the window, click **Help**.

- Step 15** (Optional) To view a send utilization chart for the linkset, select the Real-Time Data Charts tab. SGM displays the chart in the right panel ([Figure 3-16](#)).

Figure 3-16 Details Window, Showing Linkset Send Utilization



SGM displays the following information in the SendUtilization chart:

- **Linkset**—Drop-down list box used to select the linkset for which data is to be displayed. By default, data is displayed for the selected linkset. To display data for the alternate linkset, select it in this list box.
- **Poll Interval (secs)**—Poll interval, in seconds, used to collect data for the **Send Utilization Chart**. You cannot edit this field directly. Instead, edit the **Poll Interval (secs)** field at the top right of the Details window.
- **Time Window (mins)**—Drop-down list box used to specify the length of time displayed in the **Send Utilization Chart**. Valid selections are 1, 2, 5, 10, 20, 40, or 60 minutes. The default selection is 5 minutes.

- **Send Utilization Chart**—Displays the average **Send Utilization %** for all links on the linkset as a function of time, and optionally the **Send Utilization %** for up to 16 individual links on the linkset.

To see the exact time and data coordinates for a data point, left-click the data point. The coordinates are displayed in the format (*hh:mm:ss, dd.dd*), where:

- *hh:mm:ss* is the time for that data point in hours, minutes, and seconds.
- *dd.dd* is the send utilization percentage for that data point.

To remove the data for a link or for the average from the chart, click the icon in the **SLC** field. To return the data to the chart, click the icon again.

The time between poll data points is specified in the **Poll Interval (secs)** field. The total time displayed in the chart is specified in the **Time Window (mins)** field.

New data points are added to the right side of the chart. When the chart reaches the end of the time window (for example, after 5 minutes, if the **Time Window (mins)** field is set to 5), new data points continue to be added to the right side of the chart, while old data points “drop off” the left side of the chart.

If a poll is missed (for example, as a result of an SNMP timeout), SGM ignores the missing data point, stops drawing the line, and waits for the next valid data point to begin drawing the line again.

To scroll left, right, up, or down in the chart, drag the cursor while holding down **Shift** and the left mouse button.

To zoom in on a section of the chart, drag the cursor while holding down **Ctrl** and the left mouse button.

To reset the chart to the default view and scaling, click **Reset**.

- **SLC**—Displays up to 17 color-coded icons:
 - One for each link (SLC) in the **Send Utilization Chart**, up to 16 total links.
 - One for the average of all SLCs.

To remove the data for a link or for the average from the chart, click the icon in this field. To return the data to the chart, click the icon again.

- **Show threshold line for:**—Draws a horizontal line on the **Send Utilization Chart**, indicating the send threshold for the selected link.

If you do not want to draw a threshold line, select **None**. This is the default setting.

- **Scale to threshold**—Scales the **Send Utilization Chart** in order to draw the threshold selected in the **Show threshold line for** field:
 - To scale the chart, select this checkbox.
 - To remove the scaling from the chart, clear this checkbox. This is the default setting.


To superimpose a graphic grid on the chart, which can make the data easier to read, click **Grid On**.

To remove the graphic grid from the chart, click **Grid Off**.

To display online help for the window, click **Help**.

- Step 16** (Optional) To view a packets-received-per-second chart for the linkset, select the Real-Time Data Charts tab. SGM displays the chart in the right panel (Figure 3-17).

Figure 3-17 Details Window, Showing Linkset Packets Received Per Second

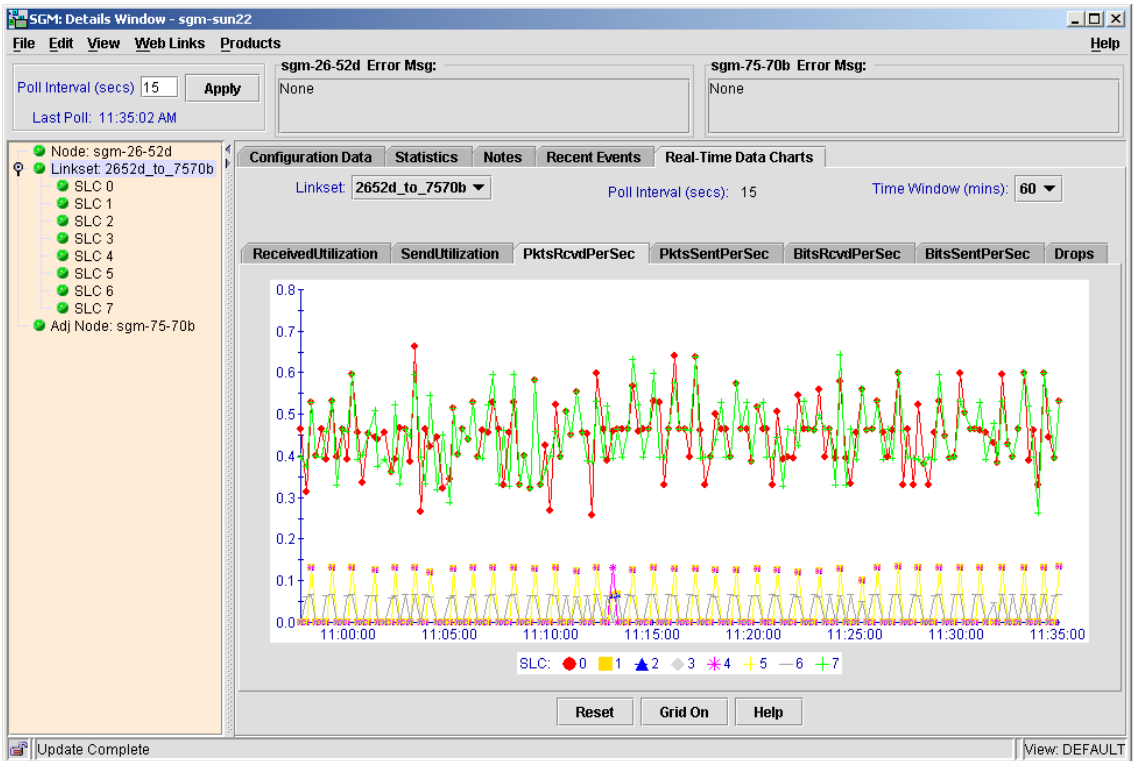

SGM displays the following information in the PktsRcvdPerSec chart:

- **Linkset**—Drop-down list box used to select the linkset for which data is to be displayed. By default, data is displayed for the selected linkset. To display data for the alternate linkset, select it in this list box.
- **Poll Interval (secs)**—Poll interval, in seconds, used to collect data for the **Packets Received Chart**. You cannot edit this field directly. Instead, edit the **Poll Interval (secs)** field at the top right of the Details window.
- **Time Window (mins)**—Drop-down list box used to specify the length of time displayed in the **Packets Received Chart**. Valid selections are 1, 2, 5, 10, 20, 40, or 60 minutes. The default selection is 5 minutes.

- **Packets Received Chart**—Displays the **Packets Received Per Sec** for the linkset as a function of time, including data for up to 16 links.

To see the exact time and data coordinates for a data point, left-click the data point. The coordinates are displayed in the format (*hh:mm:ss, dd.dd*), where:

- *hh:mm:ss* is the time for that data point in hours, minutes, and seconds.
- *dd.dd* is the number of packets received per second for that data point.

To remove the data for a link from the chart, click the icon in the **SLC** field. To return the data to the chart, click the icon again.

The time between poll data points is specified in the **Poll Interval (secs)** field. The total time displayed in the chart is specified in the **Time Window (mins)** field.

New data points are added to the right side of the chart. When the chart reaches the end of the time window (for example, after 5 minutes, if the **Time Window (mins)** field is set to 5), new data points continue to be added to the right side of the chart, while old data points “drop off” the left side of the chart.

If a poll is missed (for example, as a result of an SNMP timeout), SGM ignores the missing data point, stops drawing the line, and waits for the next valid data point to begin drawing the line again.

To scroll left, right, up, or down in the chart, drag the cursor while holding down **Shift** and the left mouse button.

To zoom in on a section of the chart, drag the cursor while holding down **Ctrl** and the left mouse button.

To reset the chart to the default view and scaling, click **Reset**.

- **SLC**—Displays up to 16 color-coded icons, one for each link (SLC) in the **Packets Received Chart**. To remove the data for a link from the chart, click the icon in this field. To return the data to the chart, click the icon again.


To superimpose a graphic grid on the chart, which can make the data easier to read, click **Grid On**.

To remove the graphic grid from the chart, click **Grid Off**.

To display online help for the window, click **Help**.

- Step 17** (Optional) To view a packets-sent-per-second chart for the linkset, select the Real-Time Data Charts tab. SGM displays the chart in the right panel (Figure 3-18).

Figure 3-18 Details Window, Showing Linkset Packets Sent Per Second

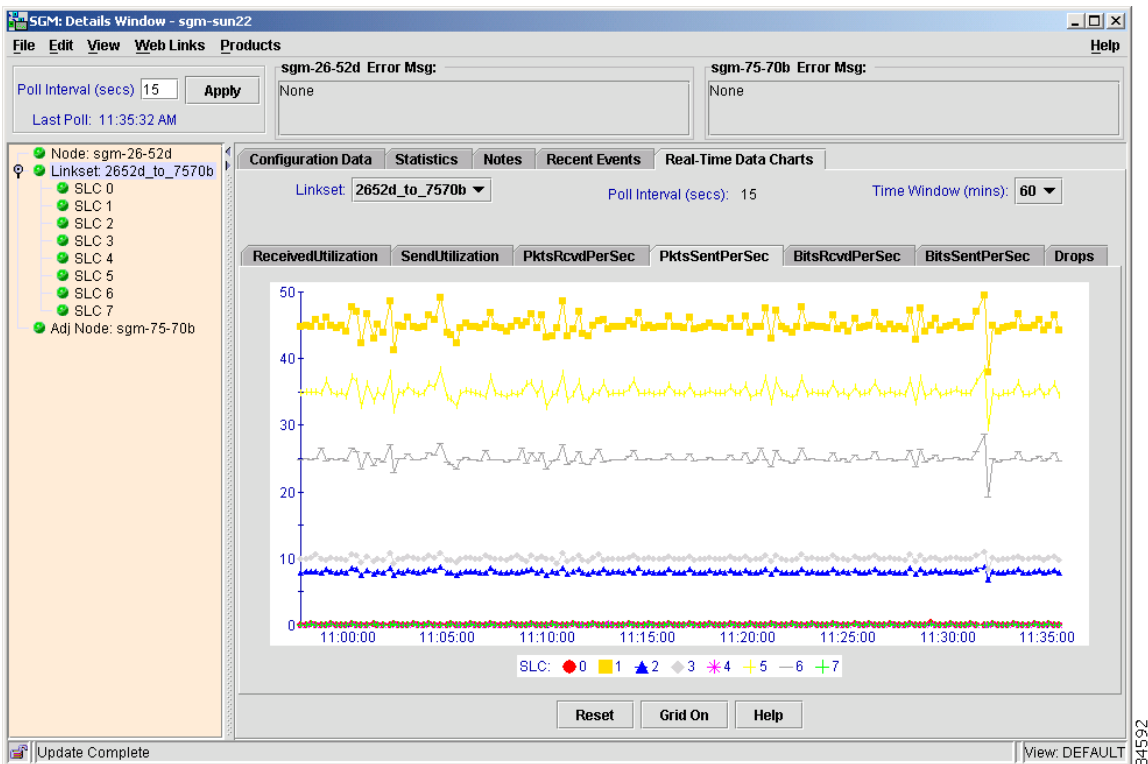

SGM displays the following information in the PktsSentPerSec chart:

- **Linkset**—Drop-down list box used to select the linkset for which data is to be displayed. By default, data is displayed for the selected linkset. To display data for the alternate linkset, select it in this list box.
- **Poll Interval (secs)**—Poll interval, in seconds, used to collect data for the **Packets Sent Chart**. You cannot edit this field directly. Instead, edit the **Poll Interval (secs)** field at the top right of the Details window.

- **Time Window (mins)**—Drop-down list box used to specify the length of time displayed in the **Packets Sent Chart**. Valid selections are 1, 2, 5, 10, 20, 40, or 60 minutes. The default selection is 5 minutes.
- **Packets Sent Chart**—Displays the **Packets Sent Per Sec** for the linkset as a function of time, including data for up to 16 links.

To see the exact time and data coordinates for a data point, left-click the data point. The coordinates are displayed in the format (*hh:mm:ss, dd.dd*), where:

- *hh:mm:ss* is the time for that data point in hours, minutes, and seconds.
- *dd.dd* is the number of packets sent per second for that data point.

To remove the data for a link from the chart, click the icon in the **SLC** field. To return the data to the chart, click the icon again.

The time between poll data points is specified in the **Poll Interval (secs)** field. The total time displayed in the chart is specified in the **Time Window (mins)** field.

New data points are added to the right side of the chart. When the chart reaches the end of the time window (for example, after 5 minutes, if the **Time Window (mins)** field is set to 5), new data points continue to be added to the right side of the chart, while old data points “drop off” the left side of the chart.

If a poll is missed (for example, as a result of an SNMP timeout), SGM ignores the missing data point, stops drawing the line, and waits for the next valid data point to begin drawing the line again.

To scroll left, right, up, or down in the chart, drag the cursor while holding down **Shift** and the left mouse button.

To zoom in on a section of the chart, drag the cursor while holding down **Ctrl** and the left mouse button.

To reset the chart to the default view and scaling, click **Reset**.

- **SLC**—Displays up to 16 color-coded icons, one for each link (SLC) in the **Packets Sent Chart**. To remove the data for a link from the chart, click the icon in this field. To return the data to the chart, click the icon again.

To superimpose a graphic grid on the chart, which can make the data easier to read, click **Grid On**.


To remove the graphic grid from the chart, click **Grid Off**.

To display online help for the window, click **Help**.

Working with Linksets

- Step 18** (Optional) To view a bits-received-per-second chart for the linkset (or a bytes-received-per-second chart, if you cleared the **Show Details in Bits Instead of Bytes** checkbox in the Preferences Window), select the Real-Time Data Charts tab. SGM displays the chart in the right panel (Figure 3-19).

Figure 3-19 Details Window, Showing Linkset Bits Received Per Second

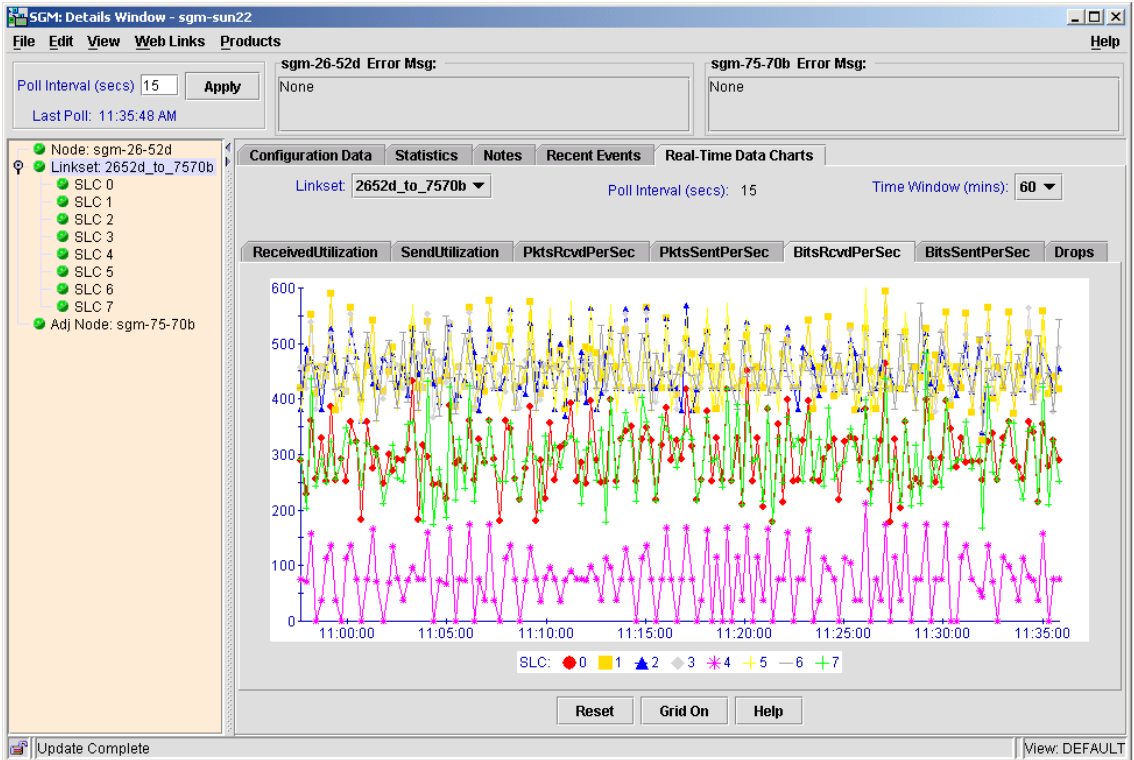

84587

SGM displays the following information in the **BitsRcvdPerSec** or **BytesRcvdPerSec** chart:

- **Linkset**—Drop-down list box used to select the linkset for which data is to be displayed. By default, data is displayed for the selected linkset. To display data for the alternate linkset, select it in this list box.
- **Poll Interval (secs)**—Poll interval, in seconds, used to collect data for the **Bits Received Chart** or **Bytes Received Chart**. You cannot edit this field directly. Instead, edit the **Poll Interval (secs)** field at the top right of the Details window.
- **Time Window (mins)**—Drop-down list box used to specify the length of time displayed in the **Bits Received Chart** or **Bytes Received Chart**. Valid selections are 1, 2, 5, 10, 20, 40, or 60 minutes. The default selection is 5 minutes.
- **Bits Received Chart** or **Bytes Received Chart**—Displays the **Bits Received Per Sec** or **Bytes Received Per Sec** for the linkset as a function of time, including data for up to 16 links.

To see the exact time and data coordinates for a data point, left-click the data point. The coordinates are displayed in the format *(hh:mm:ss, dd.dd)*, where:

- *hh:mm:ss* is the time for that data point in hours, minutes, and seconds.
- *dd.dd* is the number of bits or bytes received per second for that data point.

To remove the data for a link from the chart, click the icon in the **SLC** field. To return the data to the chart, click the icon again.

The time between poll data points is specified in the **Poll Interval (secs)** field. The total time displayed in the chart is specified in the **Time Window (mins)** field.

New data points are added to the right side of the chart. When the chart reaches the end of the time window (for example, after 5 minutes, if the **Time Window (mins)** field is set to 5), new data points continue to be added to the right side of the chart, while old data points “drop off” the left side of the chart.

If a poll is missed (for example, as a result of an SNMP timeout), SGM ignores the missing data point, stops drawing the line, and waits for the next valid data point to begin drawing the line again.

To scroll left, right, up, or down in the chart, drag the cursor while holding down **Shift** and the left mouse button.

To zoom in on a section of the chart, drag the cursor while holding down **Ctrl** and the left mouse button.

To reset the chart to the default view and scaling, click **Reset**.

- **SLC**—Displays up to 16 color-coded icons, one for each link (SLC) in the **Bits Received Chart** or **Bytes Received Chart**. To remove the data for a link from the chart, click the icon in this field. To return the data to the chart, click the icon again.


To superimpose a graphic grid on the chart, which can make the data easier to read, click **Grid On**.

To remove the graphic grid from the chart, click **Grid Off**.

To display online help for the window, click **Help**.

- Step 19** (Optional) To view a bits-sent-per-second chart for the linkset (or a bytes-sent-per-second chart, if you cleared the **Show Details in Bits Instead of Bytes** checkbox in the Preferences Window), select the Real-Time Data Charts tab. SGM displays the chart in the right panel ([Figure 3-20](#)).

Figure 3-20 Details Window, Showing Linkset Bits Sent Per Second

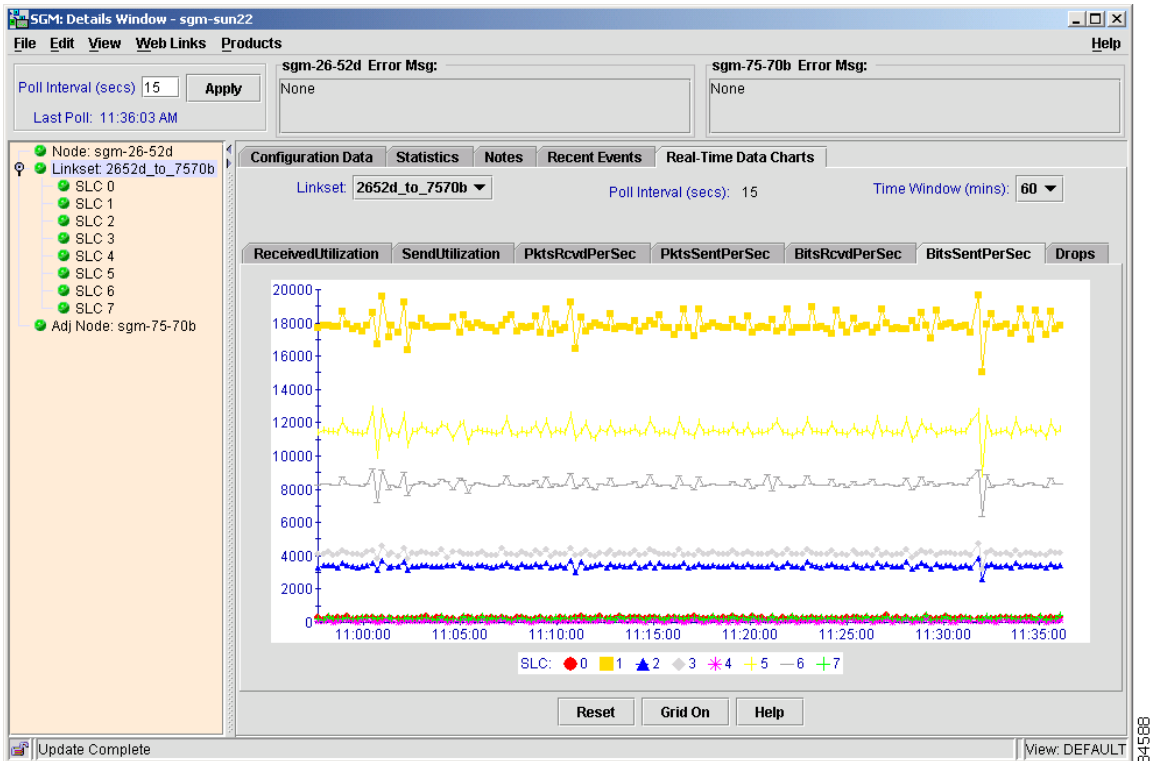

SGM displays the following information in the BitsSentPerSec or BytesSentPerSec chart:

- **Linkset**—Drop-down list box used to select the linkset for which data is to be displayed. By default, data is displayed for the selected linkset. To display data for the alternate linkset, select it in this list box.
- **Poll Interval (secs)**—Poll interval, in seconds, used to collect data for the **Bits Sent Chart** or **Bytes Sent Chart**. You cannot edit this field directly. Instead, edit the **Poll Interval (secs)** field at the top right of the Details window.
- **Time Window (mins)**—Drop-down list box used to specify the length of time displayed in the **Bits Sent Chart** or **Bytes Sent Chart**. Valid selections are 1, 2, 5, 10, 20, 40, or 60 minutes. The default selection is 5 minutes.

- **Bits Sent Chart** or **Bytes Sent Chart**—Displays the **Bits Sent Per Sec** or **Bytes Sent Per Sec** for the linkset as a function of time, including data for up to 16 links.

To see the exact time and data coordinates for a data point, left-click the data point. The coordinates are displayed in the format (*hh:mm:ss, dd.dd*), where:

- *hh:mm:ss* is the time for that data point in hours, minutes, and seconds.
- *dd.dd* is the number of bits or bytes sent per second for that data point.

To remove the data for a link from the chart, click the icon in the **SLC** field. To return the data to the chart, click the icon again.

The time between poll data points is specified in the **Poll Interval (secs)** field. The total time displayed in the chart is specified in the **Time Window (mins)** field.

New data points are added to the right side of the chart. When the chart reaches the end of the time window (for example, after 5 minutes, if the **Time Window (mins)** field is set to 5), new data points continue to be added to the right side of the chart, while old data points “drop off” the left side of the chart.

If a poll is missed (for example, as a result of an SNMP timeout), SGM ignores the missing data point, stops drawing the line, and waits for the next valid data point to begin drawing the line again.

To scroll left, right, up, or down in the chart, drag the cursor while holding down **Shift** and the left mouse button.

To zoom in on a section of the chart, drag the cursor while holding down **Ctrl** and the left mouse button.

To reset the chart to the default view and scaling, click **Reset**.

- **SLC**—Displays up to 16 color-coded icons, one for each link (SLC) in the **Bits Sent Chart** or **Bytes Sent Chart**. To remove the data for a link from the chart, click the icon in this field. To return the data to the chart, click the icon again.


To superimpose a graphic grid on the chart, which can make the data easier to read, click **Grid On**.

To remove the graphic grid from the chart, click **Grid Off**.

To display online help for the window, click **Help**.

- Step 20** (Optional) To view a drops chart for the linkset, select the Real-Time Data Charts tab. SGM displays the chart in the right panel (Figure 3-21).

Figure 3-21 Details Window, Showing Linkset Drops

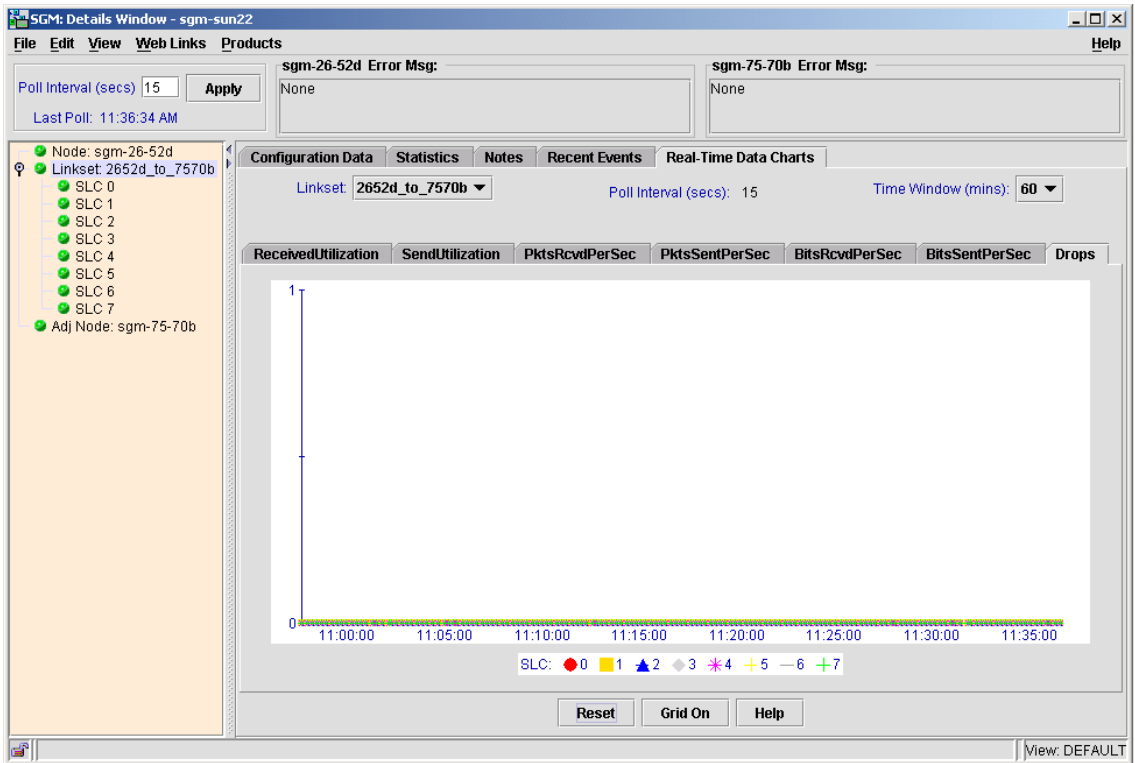

SGM displays the following information in the Drops chart:

- **Linkset**—Drop-down list box used to select the linkset for which data is to be displayed. By default, data is displayed for the selected linkset. To display data for the alternate linkset, select it in this list box.
- **Poll Interval (secs)**—Poll interval, in seconds, used to collect data for the **Drops Chart**. You cannot edit this field directly. Instead, edit the **Poll Interval (secs)** field at the top right of the Details window.

- **Time Window (mins)**—Drop-down list box used to specify the length of time displayed in the **Drops Chart**. Valid selections are 1, 2, 5, 10, 20, 40, or 60 minutes. The default selection is 5 minutes.
- **Drops Chart**—Displays the **Drops** for the linkset as a function of time, including data for up to 16 links.

To see the exact time and data coordinates for a data point, left-click the data point. The coordinates are displayed in the format (*hh:mm:ss, dd.dd*), where:

- *hh:mm:ss* is the time for that data point in hours, minutes, and seconds.
- *dd.dd* is the number of drops for that data point.

To remove the data for a link from the chart, click the icon in the **SLC** field. To return the data to the chart, click the icon again.

The time between poll data points is specified in the **Poll Interval (secs)** field. The total time displayed in the chart is specified in the **Time Window (mins)** field.

New data points are added to the right side of the chart. When the chart reaches the end of the time window (for example, after 5 minutes, if the **Time Window (mins)** field is set to 5), new data points continue to be added to the right side of the chart, while old data points “drop off” the left side of the chart.

If a poll is missed (for example, as a result of an SNMP timeout), SGM ignores the missing data point, stops drawing the line, and waits for the next valid data point to begin drawing the line again.

To scroll left, right, up, or down in the chart, drag the cursor while holding down **Shift** and the left mouse button.

To zoom in on a section of the chart, drag the cursor while holding down **Ctrl** and the left mouse button.

To reset the chart to the default view and scaling, click **Reset**.

- **SLC**—Displays up to 16 color-coded icons, one for each link (SLC) in the **Drops Chart**. To remove the data for a link from the chart, click the icon in this field. To return the data to the chart, click the icon again.

To superimpose a graphic grid on the chart, which can make the data easier to read, click **Grid On**.

To remove the graphic grid from the chart, click **Grid Off**.

To display online help for the window, click **Help**.

Viewing ITP Link Statistics for a Linkset

The SGM Real-Time Charts - Link Statistics window displays link statistics for a linkset, such as received utilization percentage and packets received per second. The SGM Real-Time Charts - Link Statistics window is a “subset” of the Linkset Details pane (Figure 3-15), showing only the real-time data charts (ReceivedUtilization, SendUtilization, and so on).

To access the SGM Real-Time Charts - Link Statistics window, select a linkset in the Linkset or Topology window, then select **Drill Down>Show Link Statistics** from the right-click menu.

The SGM Real-Time Charts - Link Statistics window displays the following information for all charts:

- **Node**—Node with which the selected linkset is associated.
- **Linkset**—Drop-down list box used to select the linkset for which data is to be displayed. By default, data is displayed for the selected linkset. To display data for the alternate linkset, select it in this list box.
- **Poll Interval (secs)**—Drop-down list box used to specify the poll interval, in seconds, used to collect data for the **Received Utilization Chart**. Valid selections are 15, 30, 45, 60, 90, or 120 seconds. The default selection is 15 seconds.
- **Time Window (mins)**—Drop-down list box used to specify the length of time displayed in the **Received Utilization Chart**. Valid selections are 1, 2, 5, 10, 20, 40, or 60 minutes. The default selection is 5 minutes.
- **APC**—Point code of the adjacent node for the linkset.

- **Status**—Current status of the linkset. Possible values are:
 - **Active (green ball)**—The linkset is currently fully functional.
 - **Unavailable (red ball)**—An error is preventing traffic from flowing on this linkset.
 - **Shutdown (blue ball)**—A router administrator has set the linkset to prevent traffic from flowing. When a linkset is set to **Shutdown**, all its associated links are set to **Failed** by Cisco IOS.
 - **Unknown (red ball)**—Either the node associated with this linkset has failed to respond to an SNMP request, or SGM found that the linkset no longer exists.
 - **Warning (yellow ball)**—The linkset is active, but one or more links in the linkset is congested or is in **Failed**, **Unknown**, or **Warning** status, and is not **Ignored**. At least one link is available and can carry traffic.

There is no **Unshut** or **No Shut** status.

- **Avail. Links**—Number of links in the linkset that are available.
- **Tot. Links**—Total number of links in the linkset.
- **Last Poll Error**—Date and time the last polling error message was received by the node. If there have been no polling errors, SGM displays **None**.
- **Reset**—If you scrolled or zoomed the chart, resets the chart to the default view and scaling.
- **Grid On**—Superimposes a graphic grid on the chart. The grid can make the data easier to read.
- **Grid Off**—Removes the graphic grid from the chart.
- **Close**—Closes the SGM Real-Time Charts - Link Statistics window.
- **Help**—Displays online help for the current window.

The SGM Real-Time Charts - Link Statistics window displays the following information in the ReceivedUtilization chart:

- **Received Utilization Chart**—Displays the average **Receive Utilization %** for all links on the linkset as a function of time, and optionally the **Receive Utilization %** for up to 16 individual links on the linkset.

To see the exact time and data coordinates for a data point, left-click the data point. The coordinates are displayed in the format (*hh:mm:ss, dd.dd*), where:

- *hh:mm:ss* is the time for that data point in hours, minutes, and seconds.
- *dd.dd* is the receive utilization percentage for that data point.

To remove the data for a link or for the average from the chart, click the icon in the **SLC** field. To return the data to the chart, click the icon again.

The time between poll data points is specified in the **Poll Interval (secs)** field. The total time displayed in the chart is specified in the **Time Window (mins)** field.

New data points are added to the right side of the chart. When the chart reaches the end of the time window (for example, after 5 minutes, if the **Time Window (mins)** field is set to 5), new data points continue to be added to the right side of the chart, while old data points “drop off” the left side of the chart.

If a poll is missed (for example, as a result of an SNMP timeout), SGM ignores the missing data point, stops drawing the line, and waits for the next valid data point to begin drawing the line again.

To scroll left, right, up, or down in the chart, drag the cursor while holding down **Shift** and the left mouse button.

To zoom in on a section of the chart, drag the cursor while holding down **Ctrl** and the left mouse button.

To reset the chart to the default view and scaling, click **Reset**.

- **SLC**—Displays up to 17 color-coded icons:
 - One for each link (SLC) in the **Received Utilization Chart**, up to 16 total links.
 - One for the average of all SLCs.

To remove the data for a link or for the average from the chart, click the icon in this field. To return the data to the chart, click the icon again.

- **Show threshold line for:**—Draws a horizontal line on the **Received Utilization Chart**, indicating the receive threshold for the selected link.
If you do not want to draw a threshold line, select **None**. This is the default setting.
- **Scale to threshold**—Scales the **Received Utilization Chart** in order to draw the threshold selected in the **Show threshold line for** field:
 - To scale the chart, select this checkbox.
 - To remove the scaling from the chart, clear this checkbox. This is the default setting.

The SGM Real-Time Charts - Link Statistics window displays the following information in the SendUtilization chart:

- **Send Utilization Chart**—Displays the average **Send Utilization %** for all links on the linkset as a function of time, and optionally the **Send Utilization %** for up to 16 individual links on the linkset.

To see the exact time and data coordinates for a data point, left-click the data point. The coordinates are displayed in the format (*hh:mm:ss, dd.dd*), where:

- *hh:mm:ss* is the time for that data point in hours, minutes, and seconds.
- *dd.dd* is the send utilization percentage for that data point.

To remove the data for a link or for the average from the chart, click the icon in the **SLC** field. To return the data to the chart, click the icon again.

The time between poll data points is specified in the **Poll Interval (secs)** field. The total time displayed in the chart is specified in the **Time Window (mins)** field.

New data points are added to the right side of the chart. When the chart reaches the end of the time window (for example, after 5 minutes, if the **Time Window (mins)** field is set to 5), new data points continue to be added to the right side of the chart, while old data points “drop off” the left side of the chart.

If a poll is missed (for example, as a result of an SNMP timeout), SGM ignores the missing data point, stops drawing the line, and waits for the next valid data point to begin drawing the line again.

To scroll left, right, up, or down in the chart, drag the cursor while holding down **Shift** and the left mouse button.

To zoom in on a section of the chart, drag the cursor while holding down **Ctrl** and the left mouse button.

To reset the chart to the default view and scaling, click **Reset**.

- **SLC**—Displays up to 17 color-coded icons:
 - One for each link (SLC) in the **Send Utilization Chart**, up to 16 total links.
 - One for the average of all SLCs.

To remove the data for a link or for the average from the chart, click the icon in this field. To return the data to the chart, click the icon again.

- **Show threshold line for:**—Draws a horizontal line on the **Send Utilization Chart**, indicating the send threshold for the selected link.

If you do not want to draw a threshold line, select **None**. This is the default setting.

- **Scale to threshold**—Scales the **Send Utilization Chart** in order to draw the threshold selected in the **Show threshold line for** field:
 - To scale the chart, select this checkbox.
 - To remove the scaling from the chart, clear this checkbox. This is the default setting.

The SGM Real-Time Charts - Link Statistics window displays the following information in the PktsRcvdPerSec chart:

- **Packets Received Chart**—Displays the **Packets Received Per Sec** for the linkset as a function of time, including data for up to 16 links.

To see the exact time and data coordinates for a data point, left-click the data point. The coordinates are displayed in the format (*hh:mm:ss, dd.dd*), where:

- *hh:mm:ss* is the time for that data point in hours, minutes, and seconds.
- *dd.dd* is the number of packets received per second for that data point.

To remove the data for a link from the chart, click the icon in the **SLC** field. To return the data to the chart, click the icon again.

The time between poll data points is specified in the **Poll Interval (secs)** field. The total time displayed in the chart is specified in the **Time Window (mins)** field.

New data points are added to the right side of the chart. When the chart reaches the end of the time window (for example, after 5 minutes, if the **Time Window (mins)** field is set to 5), new data points continue to be added to the right side of the chart, while old data points “drop off” the left side of the chart.

If a poll is missed (for example, as a result of an SNMP timeout), SGM ignores the missing data point, stops drawing the line, and waits for the next valid data point to begin drawing the line again.

To scroll left, right, up, or down in the chart, drag the cursor while holding down **Shift** and the left mouse button.

To zoom in on a section of the chart, drag the cursor while holding down **Ctrl** and the left mouse button.

To reset the chart to the default view and scaling, click **Reset**.

- **SLC**—Displays up to 16 color-coded icons, one for each link (SLC) in the **Packets Received Chart**.

To remove the data for a link from the chart, click the icon in this field. To return the data to the chart, click the icon again.

The SGM Real-Time Charts - Link Statistics window displays the following information in the PktsSentPerSec chart:

- **Packets Sent Chart**—Displays the **Packets Sent Per Sec** for the linkset as a function of time, including data for up to 16 links.

To see the exact time and data coordinates for a data point, left-click the data point. The coordinates are displayed in the format (*hh:mm:ss, dd.dd*), where:

- *hh:mm:ss* is the time for that data point in hours, minutes, and seconds.
- *dd.dd* is the number of packets sent per second for that data point.

To remove the data for a link from the chart, click the icon in the **SLC** field. To return the data to the chart, click the icon again.

The time between poll data points is specified in the **Poll Interval (secs)** field. The total time displayed in the chart is specified in the **Time Window (mins)** field.

New data points are added to the right side of the chart. When the chart reaches the end of the time window (for example, after 5 minutes, if the **Time Window (mins)** field is set to 5), new data points continue to be added to the right side of the chart, while old data points “drop off” the left side of the chart.

If a poll is missed (for example, as a result of an SNMP timeout), SGM ignores the missing data point, stops drawing the line, and waits for the next valid data point to begin drawing the line again.

To scroll left, right, up, or down in the chart, drag the cursor while holding down **Shift** and the left mouse button.

To zoom in on a section of the chart, drag the cursor while holding down **Ctrl** and the left mouse button.

To reset the chart to the default view and scaling, click **Reset**.

- **SLC**—Displays up to 16 color-coded icons, one for each link (SLC) in the **Packets Sent Chart**.

To remove the data for a link from the chart, click the icon in this field. To return the data to the chart, click the icon again.

The SGM Real-Time Charts - Link Statistics window displays the following information in the BitsRcvdPerSec or BytesRcvdPerSec chart:

- **Bits Received Chart** or **Bytes Received Chart**—Displays the **Bits Received Per Sec** or **Bytes Received Per Sec** for the linkset as a function of time, including data for up to 16 links.

To see the exact time and data coordinates for a data point, left-click the data point. The coordinates are displayed in the format (*hh:mm:ss, dd.dd*), where:

- *hh:mm:ss* is the time for that data point in hours, minutes, and seconds.
- *dd.dd* is the number of bits or bytes received per second for that data point.

To remove the data for a link from the chart, click the icon in the **SLC** field. To return the data to the chart, click the icon again.

The time between poll data points is specified in the **Poll Interval (secs)** field. The total time displayed in the chart is specified in the **Time Window (mins)** field.

New data points are added to the right side of the chart. When the chart reaches the end of the time window (for example, after 5 minutes, if the **Time Window (mins)** field is set to 5), new data points continue to be added to the right side of the chart, while old data points “drop off” the left side of the chart.

If a poll is missed (for example, as a result of an SNMP timeout), SGM ignores the missing data point, stops drawing the line, and waits for the next valid data point to begin drawing the line again.

To scroll left, right, up, or down in the chart, drag the cursor while holding down **Shift** and the left mouse button.

To zoom in on a section of the chart, drag the cursor while holding down **Ctrl** and the left mouse button.

To reset the chart to the default view and scaling, click **Reset**.

- **SLC**—Displays up to 16 color-coded icons, one for each link (SLC) in the **Bits Received Chart** or **Bytes Received Chart**.

To remove the data for a link from the chart, click the icon in this field. To return the data to the chart, click the icon again.

The SGM Real-Time Charts - Link Statistics window displays the following information in the **BitsSentPerSec** or **BytesSentPerSec** chart:

- **Bits Sent Chart** or **Bytes Sent Chart**—Displays the **Bits Sent Per Sec** or **Bytes Sent Per Sec** for the linkset as a function of time, including data for up to 16 links.

To see the exact time and data coordinates for a data point, left-click the data point. The coordinates are displayed in the format (*hh:mm:ss, dd.dd*), where:

- *hh:mm:ss* is the time for that data point in hours, minutes, and seconds.
- *dd.dd* is the number of bits or bytes sent per second for that data point.

To remove the data for a link from the chart, click the icon in the **SLC** field. To return the data to the chart, click the icon again.

The time between poll data points is specified in the **Poll Interval (secs)** field. The total time displayed in the chart is specified in the **Time Window (mins)** field.

New data points are added to the right side of the chart. When the chart reaches the end of the time window (for example, after 5 minutes, if the **Time Window (mins)** field is set to 5), new data points continue to be added to the right side of the chart, while old data points “drop off” the left side of the chart.

If a poll is missed (for example, as a result of an SNMP timeout), SGM ignores the missing data point, stops drawing the line, and waits for the next valid data point to begin drawing the line again.

To scroll left, right, up, or down in the chart, drag the cursor while holding down **Shift** and the left mouse button.

To zoom in on a section of the chart, drag the cursor while holding down **Ctrl** and the left mouse button.

To reset the chart to the default view and scaling, click **Reset**.

- **SLC**—Displays up to 16 color-coded icons, one for each link (SLC) in the **Bits Sent Chart** or **Bytes Sent Chart**.

To remove the data for a link from the chart, click the icon in this field. To return the data to the chart, click the icon again.

The SGM Real-Time Charts - Link Statistics window displays the following information in the Drops chart:

- **Drops Chart**—Displays the **Drops** for the linkset as a function of time, including data for up to 16 links.

To see the exact time and data coordinates for a data point, left-click the data point. The coordinates are displayed in the format (*hh:mm:ss, dd.dd*), where:

- *hh:mm:ss* is the time for that data point in hours, minutes, and seconds.
- *dd.dd* is the number of drops for that data point.

To remove the data for a link from the chart, click the icon in the **SLC** field. To return the data to the chart, click the icon again.

The time between poll data points is specified in the **Poll Interval (secs)** field. The total time displayed in the chart is specified in the **Time Window (mins)** field.

New data points are added to the right side of the chart. When the chart reaches the end of the time window (for example, after 5 minutes, if the **Time Window (mins)** field is set to 5), new data points continue to be added to the right side of the chart, while old data points “drop off” the left side of the chart.

If a poll is missed (for example, as a result of an SNMP timeout), SGM ignores the missing data point, stops drawing the line, and waits for the next valid data point to begin drawing the line again.

To scroll left, right, up, or down in the chart, drag the cursor while holding down **Shift** and the left mouse button.

To zoom in on a section of the chart, drag the cursor while holding down **Ctrl** and the left mouse button.

To reset the chart to the default view and scaling, click **Reset**.

- **SLC**—Displays up to 16 color-coded icons, one for each link (SLC) in the **Drops Chart**.


To remove the data for a link from the chart, click the icon in this field. To return the data to the chart, click the icon again.

Editing a Linkset

SGM enables you to annotate a linkset, attaching a descriptive string to the linkset.

To annotate a linkset:

-
- Step 1** Select a linkset in the Linkset window ([Figure 3-10](#)) or Topology window ([Figure 3-54](#)).
 - Step 2** Select **Edit>Selected Item** in the SGM Main Menu. SGM displays the Edit Linkset Dialog ([Figure 3-22](#)).

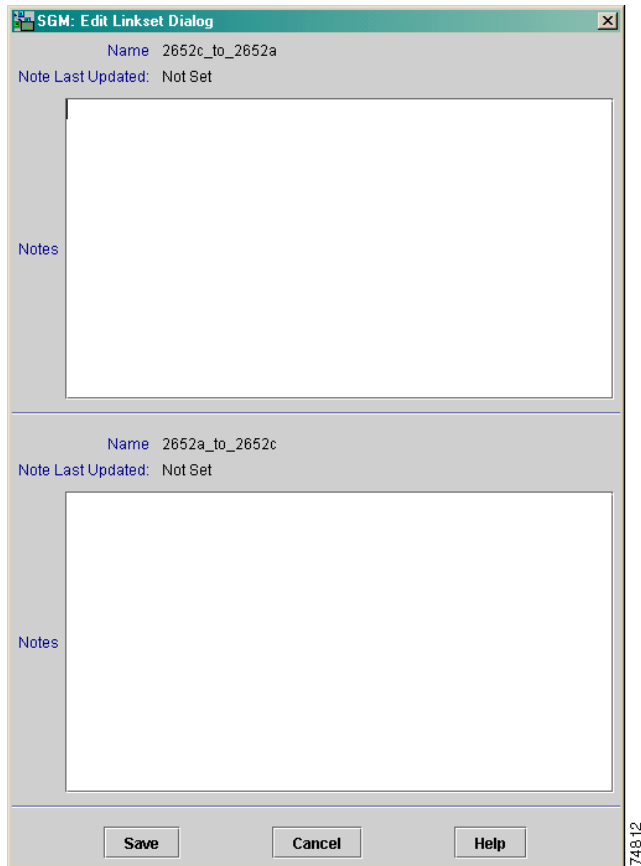Figure 3-22 Edit Linkset Dialog

If both ends of the linkset are known to SGM, one is displayed in the top half of the Edit Linkset Dialog, the other in the bottom half. If only one end is known to SGM, only that end is displayed.

The Edit Linkset Dialog displays the name of the linkset and the date and time the **Notes** field for the linkset was last updated. If there is no note currently associated with the linkset, the **Note Last Updated** field displays the value **Not Set**.

- Step 3** In the **Notes** field, enter any important information about the linkset, such as a detailed description, its location, its service history, and so on.
- Step 4** Click **Save** to save the annotations and exit the Edit Linkset Dialog.

Viewing Notes for a Linkset


SGM enables you to view the notes that have been attached to linksets.

To view a note, use one of the following procedures:

- Select a linkset in the Linkset Window or Topology Window, then select **View>Notes** from the SGM Main Menu.
- Right-click a linkset in the Linkset Window or Topology Window, then select **View>Notes** in the right-click menu.

If the linkset has an attached note, SGM displays the Linkset Notes dialog (Figure 3-23). (If the linkset does not have an attached note, SGM displays the message, “The linkset pair does not have any notes.”)

Figure 3-23 Linkset Notes Dialog

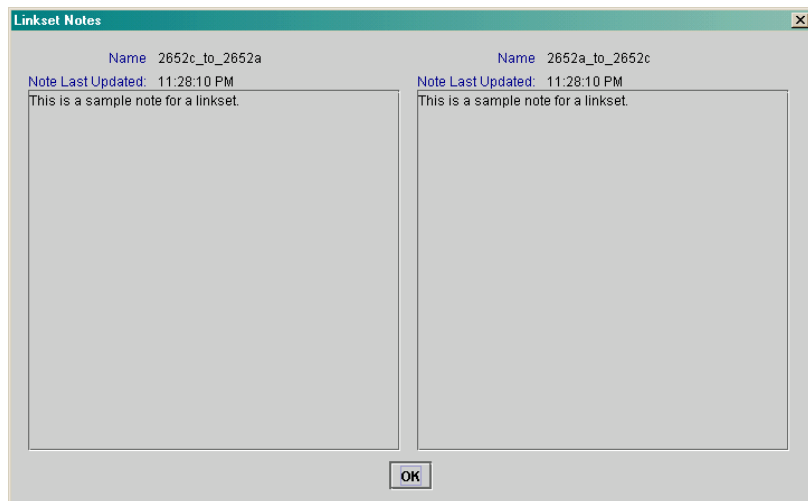

If both ends of the linkset are known to SGM, notes for one end are displayed in the left half of the Linkset Notes dialog, and notes for the other end are displayed in the right half. If only one end is known to SGM, only notes for that end are displayed.

The Linkset Notes dialog displays the following information:

- **Name**—Name of the linkset.
- **Note Last Updated**—Date and time the **Notes** field for the linkset was last updated.
- **Notes**—Notes associated with the linkset.

Click **OK** to close the Linkset Notes dialog.

Deleting a Linkset

After Discovery, the linksets in your network are known to SGM and added to the SGM database. Physically deleting linksets from your network is not the same as deleting them from the SGM database. The following sections describe the differences between deleting linksets from your network and from the SGM database, and the procedures for doing so:

- [Deleting a Linkset from Your Network, page 3-77](#)
- [Deleting a Linkset from the SGM Database, page 3-78](#)

Deleting a Linkset from Your Network

If you physically delete a known linkset from your network, it remains in the SGM database, SGM labels it **Unknown**, and it is the system administrator's responsibility to delete it from the SGM database, if you choose to do so. SGM labels all associated nodes **Warning** and all associated links **Unknown**.

When you redefine the linkset (that is, when you define a linkset with the same destination point code as the original linkset, but not necessarily with the same linkset name), SGM rediscovers the linkset and labels it with the appropriate status (such as **Active**).

Deleting a Linkset from the SGM Database

Typically, you delete a linkset in the SGM database for one of the following reasons:

- You have physically deleted the linkset from your network. This is the most common reason for deleting a linkset from the SGM database.
- The linkset is **Unknown** or **Unavailable**, you are aware of the reason, and you no longer want to see it in SGM displays. For example, the linkset might be associated with a node that was removed from the network, or it might be a previously discovered linkset associated with a test lab device.

If you have physically deleted a known linkset from your network, and you then delete it from SGM, it is no longer in the SGM database, it does not appear in SGM windows, and it is not discovered when you run Discovery.

If you have *not* physically deleted a known linkset from your network, and you delete it from SGM, SGM also automatically deletes all associated links from the SGM database. However, at the next poll SGM finds the linkset and associated links and adds them back to the SGM database, setting the status appropriately. If this happens, do not delete the linkset again. Instead, set it to **Ignored**. See the “[Ignoring a Linkset](#)” section on page 3-79 for more information.



Note

If you delete a linkset from the SGM database, the linkset is deleted for *all* SGM clients and views connected to that SGM server.

If you delete all linksets to an **Unmanaged** node, SGM does not automatically delete the node. Instead, you must manually delete the node. See the “[Deleting a Node](#)” section on page 3-105 for more information.

To delete a linkset from the SGM database, use one of the following procedures:

- Select one or more linksets in the Linkset window ([Figure 3-10](#)) or Topology window ([Figure 3-54](#)), then select **Edit>Delete** from the SGM Main Menu.
- Right-click a linkset in the Linkset Window or Topology Window, then select **Delete Linkset** in the right-click menu. (You cannot delete more than one linkset at a time from the right-click menu.)

SGM asks you to confirm the deletion:

- Select **Yes** to delete the selected linksets. SGM deletes the linksets and all associated links from the SGM database. However, if the linksets were not physically deleted from your network, then at the next poll SGM finds the linksets and their associated links and adds them back to the SGM database, setting the status appropriately.
- Select **No** to return to the Linkset window or Topology window without deleting any linksets or links from the SGM database.

You can also use the **sgm delete linkset** command to delete one or more linksets from the SGM database. See the “[SGM Commands and Descriptions](#)” section on [page B-2](#) for more information on the use of this command.

Ignoring a Linkset

You can instruct SGM to ignore a linkset when it aggregates and displays network data. Setting linksets to **Ignored** prevents known linkset problems from affecting SGM displays for associated nodes. In effect, you are preventing a known problem from distracting you from other, more urgent network problems.

For example, you can set a linkset to **Ignored** before shutting down the linkset for maintenance.



Note

If you set a linkset to **Ignored**, the linkset is ignored for *all* SGM clients and views connected to that SGM server.

Also, if you set a linkset to **Ignored**, make a note of the change, and do not forget to reset the linkset when the problem is corrected or the maintenance is complete.

You can set a linkset to **Ignored** in either the Linkset window or the Topology window.


- To set a linkset to **Ignored** in the Linkset Window, select the **Ignored** checkbox for the linkset you want SGM to ignore.
- To set a linkset to **Ignored** in the Topology window ([Figure 3-54](#)), select a linkset in the topology map, then, in the left pane, select the **Ignored** checkbox for the linkset you want SGM to ignore.

Viewing Ignored Linksets

To display all linksets that are **Ignored**:

- Step 1** Select **View > Ignored Items** from the SGM Main Menu. SGM displays the Ignored Items Dialog (Figure 3-24).

Figure 3-24 Ignored Items Dialog, Showing Ignored Linksets

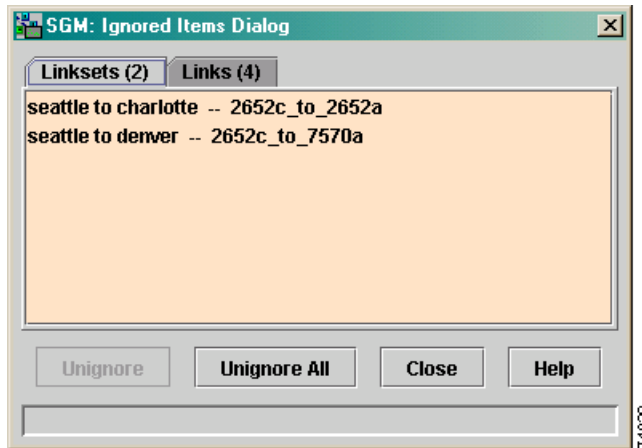

- Step 2** Click the **Linksets** tab to display all linksets that are **Ignored**.
- Step 3** (Optional) To stop ignoring one or more linksets, select the linksets, then click **Unignore**.
- Step 4** (Optional) To stop ignoring all linksets, click **Unignore All**.

Working with Nodes

SGM enables you to view information about all discovered nodes, including their IP addresses, status, and other important information.

This section includes the following information:

- [Viewing Basic Information for Nodes, page 3-81](#)
- [Viewing Detailed Information for a Node, page 3-85](#)
- [Viewing CPU Statistics for a Node, page 3-97](#)
- [Editing a Node, page 3-99](#)
- [Viewing Notes for a Node, page 3-103](#)
- [Deleting a Node, page 3-105](#)
- [Unmanaging and Managing a Node, page 3-108](#)
- [Polling a Node, page 3-109](#)
- [Excluding a Node from a View, page 3-111](#)

Related Topics:

- [Modifying Preference Settings, page 5-3](#)
- [Resizing, Sorting, and Hiding Table Columns, page 3-178](#)
- [Viewing the Topology of the Network, page 3-163](#)
- [Working with Links, page 3-111](#)
- [Working with Linksets, page 3-34](#)

Viewing Basic Information for Nodes

To view basic information for nodes, select **View>Nodes** from the SGM Main Menu. SGM displays the Node Window ([Figure 3-25](#)).

Figure 3-25 Node Window

Name	Primary SNMP Addr	Point Code	Device Type	Events	Status
san-francisco	172.18.16.45	5.2.4	Cisco2600		Active
new-york	172.18.16.51	5.3.2	Cisco2600		Active
houston	172.18.16.50	5.3.1	Cisco2600		Active
charlotte	172.18.16.42	5.2.1	Cisco2600		Active
seattle	172.18.16.44	5.2.3	Cisco2600		Active
kansas-city	172.18.16.13	5.10.4	Cisco7507		Active
chicago	172.18.16.12	5.10.3	Cisco7507		Active
los-angeles	172.18.16.11	5.10.2	Cisco7507		Active
denver	172.18.16.10	5.10.1	Cisco7507		Active
SSP	N/A	1.2.5	Unknown		Unmanaged
SCP	N/A	1.2.4	Unknown		Unmanaged
MSC	N/A	5.9.5	Unknown		Unmanaged
STP	N/A	6.2.5	Unknown		Unmanaged

13 Nodes | View: DEFAULT

The Node Window displays information about the nodes that have been discovered by SGM.

By default, SGM displays all of the columns in the Node Window except **Internal ID**, **CLLI Code**, **Secondary Point Code**, **Capability Point Code**, and **Notes**. To display these columns, or to hide other columns, see the procedures in the [“Modifying Node Table Column Settings”](#) section on page 5-15.

To see mouse over help popup for each column in the table, place the cursor over a column header.

If a cell is too small to show all of its data, place the cursor over the cell to see the full data in a mouse over help popup.

You can resize each column, or sort the table based on the information in one of the columns. See the [“Resizing, Sorting, and Hiding Table Columns”](#) section on page 3-178 for more details. By default, this table is sorted by **Status**.

The Node Window displays the following information for each discovered node:

- **Internal ID**—Internal ID of the node. The internal ID is a unique ID for every event, link, linkset, and node, assigned by SGM for its own internal use. It can also be useful when the TAC is debugging problems.
- **Name**—Name or IP address of the node.

- **CLLI Code**—COMMON LANGUAGE Location Code for the node. A CLLI code is a standardized 11-character identifier that uniquely identifies the geographic location of the node. If the node has no CLLI code configured, this field is blank.
- **Primary SNMP Address**—IP address of the node, used by SNMP to poll the node.
- **Point Code**—Primary point code of the node.
- **Secondary Point Code**—Secondary point code of the node. If the node has no secondary point code, this field is blank.
- **Capability Point Code**—Capability point code of the node. A capability point code, also called an alias point code, is one that is shared by more than one node, each of which is also assigned a “real” point code. If the node has no capability point code, this field is blank.
- **Device Type**—Device type of the node. Possible values are:
 - **Cisco2600**—Cisco 2651 series router
 - **Cisco7202**—Cisco 7202 series router
 - **Cisco7204**—Cisco 7204VXR series router
 - **Cisco7206**—Cisco 7206VXR series router
 - **Cisco7507**—Cisco 7507 series router
 - **Cisco7513**—Cisco 7513 series router
 - **IPDevice**—IP device, other than Cisco 2651, 7202, 7204VXR, 7206VXR, 7507, or 7513 series router. You can assign this icon to an unknown node if you know that it is an IP device.
 - **Unknown**—SGM is unable to determine the device type.
- **Notes**—Indicates whether there is a note associated with the node.

- **Events**—Indicates whether there is a recent event associated with the node.
 - To delete the event icon from SGM displays for a specific node, select the node and click the icon.
 - To delete the event icon from SGM displays for all nodes, select **Edit > Clear Event Icon > All** from the SGM Main Menu.



Note During Discovery, SGM might flag most nodes with an event icon. If the event icons are too distracting, use the **Edit > Clear Event Icon > All** menu option to remove them.

- **Status**—Current status of the node. Possible values are:
 - **Active (green ball)**—The node is currently fully functional.
 - **Discovering (gray ball)**—The node is being discovered, and SNMP queries have been sent to the device.
 - **Polling (gray ball)**—The node is being polled.
 - **Unknown (red ball)**—The node failed to respond to an SNMP request. The node and all associated linksets and links are set to **Unknown**.
 - **Unmanaged (gray ball)**—One of the following situations exists:
 - The node is known indirectly by SGM. In other words, SGM knows the device exists but there is no known SNMP stack on the device for SGM to query.
 - An SGM user has set the node to **Unmanaged** status, to prevent SGM from collecting statistics for the node.
 - **Waiting (gray ball)**—The node is in the Discovery queue but is not currently being discovered.
 - **Warning (yellow ball)**—The node is active, but one or more associated links or linksets is in **Failed**, **Unavailable**, **Unknown**, or **Warning** status and is not **Ignored**.

Viewing Detailed Information for a Node

To view detailed information about a node, including its CLI code, point code, status, and other information:

- Step 1** Select a node in the Node window (Figure 3-25) or Topology window (Figure 3-54).
- Step 2** Select **View>Details** from the SGM Main Menu. SGM prompts you to select a linkset associated with the node. (To find out how to disable this prompt, see Step 4 in the “Modifying Overall Preference Settings” section on page 5-5.)
- Step 3** Select a linkset.
- Step 4** Click **OK**. SGM displays the Details Window for that node, linkset, and associated links, with configuration data for the node in the right panel (Figure 3-26).

Figure 3-26 Details Window, Showing Node Configuration Data

The screenshot shows the SGM: Details Window for node sgm-26-52d. The window is divided into several sections:

- Configuration Data:**
 - Display Name: sgm-26-52d
 - IP Address or DNS Hostname: sgm-26-52d.cisco.com
 - CLI Code: code 52d
 - Icon Name: Cisco2600
 - Device Type: Cisco2600
 - First Discovered: Oct 31, 2002 12:15:39 PM
- Point Code Information:**
 - Point Code: 5.2.4
 - Secondary Point Code: 2.2.4
 - Capability Point Code: 3.2.3
- IP Addresses for SNMP:**

IP Address	Last Full Router Poll
172.18.16.45	Nov 4, 2002 10:37:53 AM
172.18.16.157	Never Polled
- QoS Information:**

QoS	ToS	DSCP
0	0	
3	3	
5	5	
- IP Addresses Not for SNMP:** There are no other IP addresses defined for this node.

If the Node Details pane is not already displayed, click **Node** in the left pane. SGM displays detailed information for the node in the right pane.

To display detailed information for the adjacent node, select **AdjNode** in the left pane of the Details window.



Note SGM considers the node that it discovered first to be the primary node, and the other node to be the adjacent node. If, in the next Discovery, SGM discovers the adjacent node first, it considers *that* node to be the primary node and the former primary node to be the new adjacent node. Thus, in SGM, linkset sgm-2600a-to-sgm-7500j is equivalent to sgm-7500j-to-sgm-2600a.

If you are viewing details for a full connection (node, adjacent node, and the associated linksets and links) then this window polls your network periodically. To prevent unnecessary traffic on your network, close this window when you no longer need to refer to it.

If you are viewing details for a node only (no adjacent node, linksets, or links), then this window does *not* poll your network periodically, and updates for the node are *not* reflected automatically in this window. If you close the window, the data *is* updated the next time you open the window.

The Poll Interval section at the top right of the Details window displays the time of the last poll, and enables you to change the poll interval:

- The **Last Poll** field initially displays the phrase **Waiting for first poll**. After the first polling cycle, SGM populates this field with the actual time of the last poll.
- To change the poll interval, enter a new value (in seconds) and click **Apply**. The valid range is 15 to 999 seconds. The default value is 15 seconds.

The Error Message section of the Details window displays the last error messages received by the node and by the adjacent node.

Updates for the node that are received from the SGM server are reflected automatically in this window.

Changes you make in this pane might not be reflected throughout SGM until the next poll (by default, every 15 seconds). For information about changing the polling interval, see the [“Viewing Detailed Information for a Node” section on page 3-85](#).

- Step 5** (Optional) To view naming information for the node, select the Configuration Data tab. SGM displays the Naming Information table, which contains the following information:
- **Display Name**—Name of the node.
 - **IP Address or DNS Hostname**—IP address or DNS name of the node, as discovered by SGM. However, if you modified your preferences to identify nodes by their IP addresses, point codes, or CLLI codes, then that is how the node is identified in this field. For more information, see the [“Modifying Overall Preference Settings”](#) section on page 5-5.
 - **CLLI Code**—COMMON LANGUAGE Location Code for the node. A CLLI code is a standardized 11-character identifier that uniquely identifies the geographic location of the node. If the node has no CLLI code configured, this field is blank.
 - **Icon Name**—Name of the graphic icon to assign to this node in topology maps. SGM automatically assigns an appropriate icon to each discovered Cisco router, and to **Unknown** nodes, but you can use this field to assign a different icon. Valid values are:
 - **Cisco2600**—Cisco 2651 series router
 - **Cisco7202**—Cisco 7202 series router
 - **Cisco7204**—Cisco 7204VXR series router
 - **Cisco7206**—Cisco 7206VXR series router
 - **Cisco7507**—Cisco 7507 series router
 - **Cisco7513**—Cisco 7513 series router
 - **IPDevice**—IP device, other than Cisco 2651, 7202, 7204VXR, 7206VXR, 7507, or 7513 series router. You can assign this icon to an unknown node if you know that it is an IP device.
 - **MSC**—Mobile switching center. You can assign this icon to an unknown node if you know that it is an MSC.
 - **SCP**—Service control point. You can assign this icon to an unknown node if you know that it is an SCP.
 - **SSP**—Service switching point. You can assign this icon to an unknown node if you know that it is an SSP.

- **STP**—Signal transfer point. You can assign this icon to an unknown node if you know that it is an STP.
- **Unknown**—SGM is unable to determine the node type.

When you click **Save**, the Topology Window is updated automatically to reflect the new icon.

- **Device Type**—Device type of the node. Possible values are:
 - **Cisco2600**—Cisco 2651 series router
 - **Cisco7202**—Cisco 7202 series router
 - **Cisco7204**—Cisco 7204VXR series router
 - **Cisco7206**—Cisco 7206VXR series router
 - **Cisco7507**—Cisco 7507 series router
 - **Cisco7513**—Cisco 7513 series router
 - **IPDevice**—IP device, other than Cisco 2651, 7202, 7204VXR, 7206VXR, 7507, or 7513 series router. You can assign this icon to an unknown node if you know that it is an IP device.
 - **Unknown**—SGM is unable to determine the device type.
- **First Discovered**—Date and time that the node was first discovered by SGM.
- **Internal ID**—Internal ID of the node. The internal ID is a unique ID for every event, link, linkset, and node, assigned by SGM for its own internal use. It can also be useful when the TAC is debugging problems.

Step 6 (Optional) To view descriptive information for the node, select the Configuration Data tab. SGM displays the Descriptive Information table, which contains the following information:

- **Description**—Description of the node. If the node has no description, this field is blank.
- **Router Version**—Version of IOS that is installed on the router.
- **Recognized MIB Level**—MIB conformance level used by the router, such as **ITP MB5**.



Note **Router Version** and **Recognized MIB Level** might not have a one-to-one correspondence, because multiple router versions can use the same MIB level if there are no changes to the MIBs between versions. For example, router versions **12.2(4)MB5** and **12.2(4)MB6** both use MIB level **ITP MB5**.

Step 7 (Optional) To view point code information for the node, select the Configuration Data tab. SGM displays the Point Code Information table, which contains the following information:

- **Point Code**—Primary point code of the node.
- **Secondary Point Code**—Secondary point code of the node. If the node has no secondary point code, this field is blank.
- **Capability Point Code**—Capability point code of the node. A capability, or alias, point code is one that is shared by more than one node, each of which is also assigned a “real” point code. If the node has no capability point code, this field is blank.

Step 8 (Optional) To view point QoS for the node, select the Configuration Data tab. SGM displays the QoS Information table, which displays the quality of service (QoS) class of the node, mapped in tabular format to the type of service (ToS) or IP differentiated-services-code-point (DSCP).

Step 9 (Optional) To view the IP addresses associated with this node that are intended for SNMP, select the Configuration Data tab. SGM displays the IP Addresses for SNMP table:

- **IP Address**—IP addresses associated with this node, including the primary SNMP address and all backup IP addresses, that are intended for SNMP.
- **Last Full Router Poll**—Date and time of the last full poll of the node for ITP-related MIBs (as opposed to a demand poll for just one linkset's worth of data).

If the IP address has never been polled, SGM displays the phrase **Never Polled**.

If there are no IP addresses defined for the node that are intended for SNMP, this field displays the phrase **There are no other IP addresses defined for this node**.


Step 10 (Optional) To view the IP addresses associated with this node that are *not* intended for SNMP, select the Configuration Data tab. SGM displays the IP Addresses Not for SNMP table, which includes the following information:

- **IP Address**—IP addresses associated with this node that are *not* intended for SNMP.

If there are no IP addresses defined for the node that are not intended for SNMP, this field displays the phrase **There are no other IP addresses defined for this node**.

- Step 11** (Optional) To view general statistics for the node, select the Statistics tab. SGM displays statistics for the node in the right panel (Figure 3-27).

Figure 3-27 Details Window, Showing Node Statistics

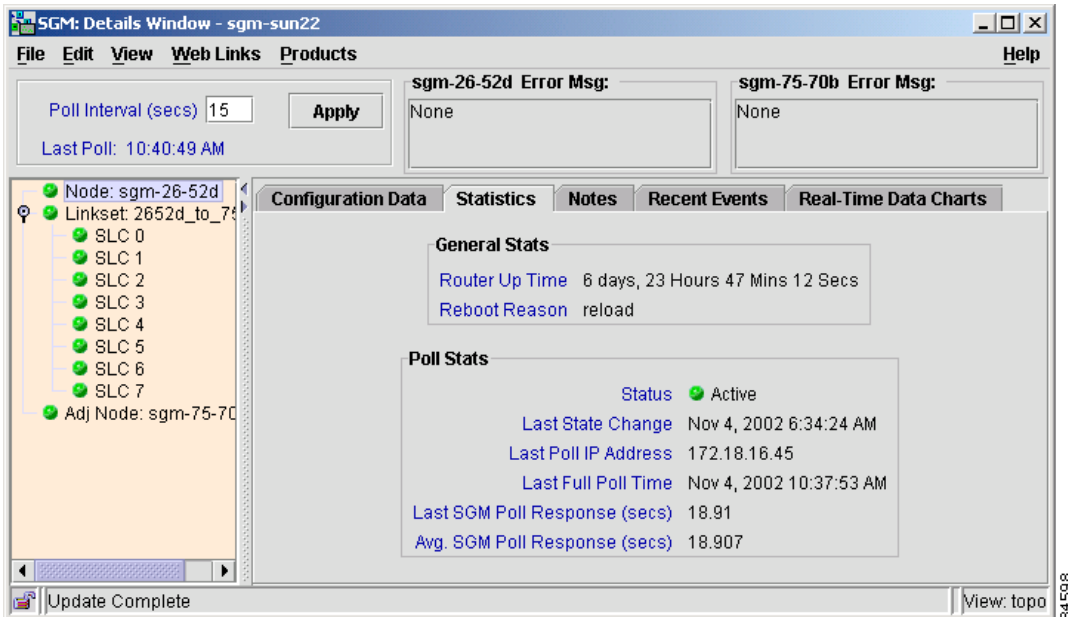

SGM displays the General Stats table:


- **Router Up Time**—Time the router has been up, in weeks, days, hours, and minutes.
- **Reboot Reason**—Reason for the last reboot of the router.

Step 12 (Optional) To view poll statistics for the node, select the Statistics tab. SGM displays the Poll Stats table:

- **Status**—Current status of the node. Possible values are:
 - **Active (green ball)**—The node is currently fully functional.
 - **Discovering (gray ball)**—The node is being discovered, and SNMP queries have been sent to the device.
 - **Polling (gray ball)**—The node is being polled.
 - **Unknown (red ball)**—The node failed to respond to an SNMP request. The node and all associated linksets and links are set to **Unknown**.
 - **Unmanaged (gray ball)**—One of the following situations exists:
 - The node is known indirectly by SGM. In other words, SGM knows the device exists but there is no known SNMP stack on the device for SGM to query.
 - An SGM user has set the node to **Unmanaged** status, to prevent SGM from polling the node. SGM asks if you also want to automatically delete all associated links and linksets, as well as all linksets that reference the node as an adjacent node.
 - **Waiting (gray ball)**—The node is in the Discovery queue but is not currently being discovered.
 - **Warning (yellow ball)**—The node is active, but one or more associated links or linksets is in **Failed**, **Unavailable**, **Unknown**, or **Warning** status and is not **Ignored**.
- **Last State Change**—Date and time that the status of the node last changed.
- **Last Poll IP Address**—Last IP address that was polled for this node. For a non-ITP node, this field is left blank.
- **Last Full Router Poll**—Date and time of the last full poll of the node for ITP-related MIBs (as opposed to a demand poll for just one linkset’s worth of data). For a non-ITP node, this field is left blank.
- **Last SGM Poll Response (secs)**—Time, in seconds, taken by this node to respond to the last SGM poll request. For a non-ITP node, this field is left blank.
- **Avg. SGM Poll Response (secs)**—Average time, in seconds, taken by this node to respond to SGM poll requests. For a non-ITP node, this field is left blank.

- Step 13** (Optional) To view notes associated with the node, select the Notes tab. SGM displays notes for the node in the right panel (Figure 3-28).

Figure 3-28 Details Window, Showing Node Notes

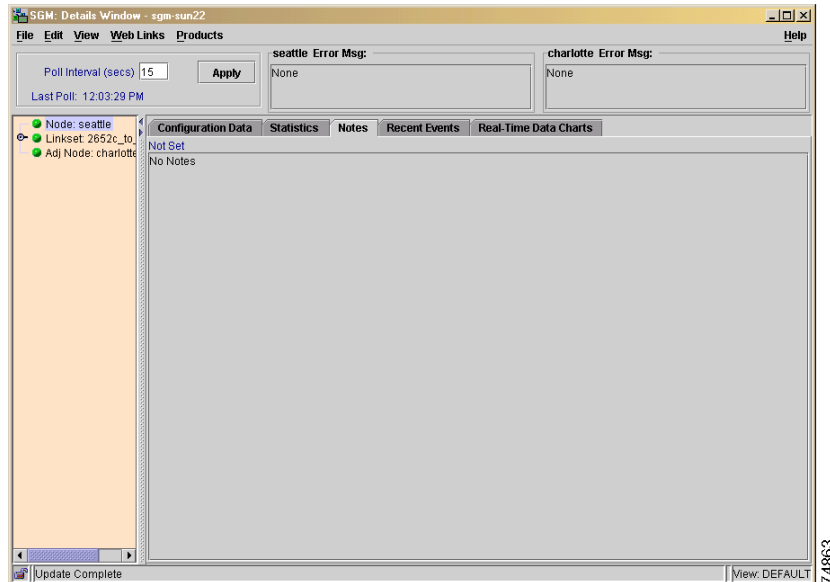


SGM displays the following information:

- Notes associated with the node.
- The date and time the notes were last updated.
- The phrase **No Notes** if there are no notes associated with the node.

- Step 14** (Optional) To view recent events associated with the node, select the Recent Events tab. SGM displays recent events for the node in the right panel (Figure 3-29).

Figure 3-29 Details Window, Showing Node Events

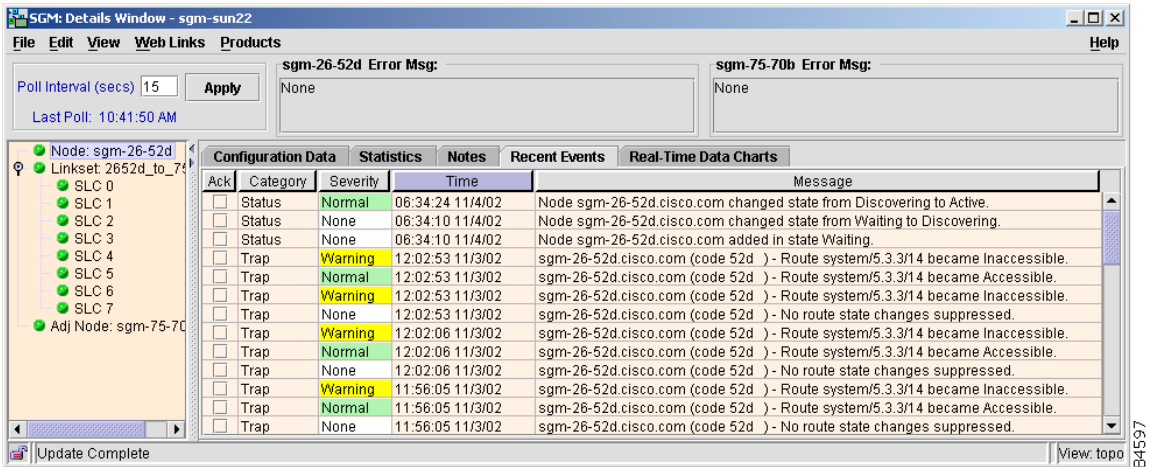

SGM displays the following information:

- By default, SGM displays only unacknowledged events in this table. To display acknowledged events in the table, see [Step 7](#) in the “[Modifying Overall Preference Settings](#)” section on [page 5-5](#).
- **Ack**—Indicates whether the event has been acknowledged:
 - To acknowledge an unacknowledged event, select this checkbox.
 - To make a previously acknowledged event unacknowledged, clear this checkbox.
- **Note**—Indicates whether there is a note associated with the event.
- **Severity**—Severity of the event. Default values are:
 - **Admin**—The default color is cyan.
 - **Error**—The default color is coral.
 - **None**—The default color is white.
 - **Normal**—The default color is light green.
 - **Warning**—The default color is yellow.


You can customize this field. See the “[Modifying the SGM Event Configuration File \(Solaris Only\)](#)” section on [page 5-25](#) for more information.

- **Time**—Date and time the event was logged.
- **Message**—Text of the message.

You can customize this field. See the [“Modifying the SGM Event Configuration File \(Solaris Only\)”](#) section on page 5-25 for more information.

- Step 15** (Optional) To view a CPU utilization chart for the node, select the Real-Time Data Charts tab. (The Real-Time Data Charts tab is not available if the node is in **Discovery**, **Polling**, **Unknown**, or **Unmanaged** status.) SGM displays the chart in the right panel ([Figure 3-30](#)).

Figure 3-30 Details Window, Showing Node CPU Utilization

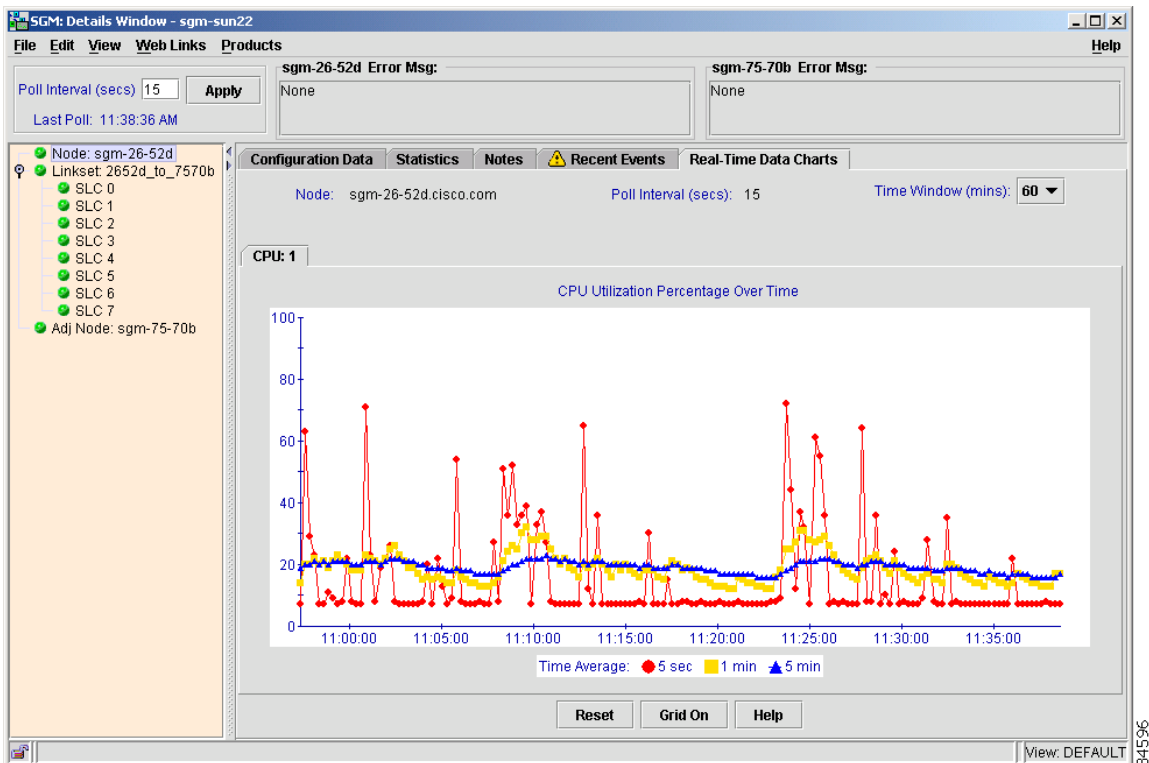

SGM displays one CPU Utilization Percentage chart for the active Route Switch Processor (RSP) CPU.

- **Node**—Node for which data is to be displayed.
- **Poll Interval (secs)**—Poll interval, in seconds, used to collect data for the **CPU Utilization Chart**. You cannot edit this field directly. Instead, edit the **Poll Interval (secs)** field at the top right of the Details window.
- **Time Window (mins)**—Drop-down list box used to specify the length of time displayed in the **CPU Utilization Chart**. Valid selections are 1, 2, 5, 10, 20, 40, or 60 minutes. The default selection is 5 minutes.
- **CPU Utilization Chart**—Displays the CPU utilization percentage for the node as a function of time.

To see the exact time and data coordinates for a data point, left-click the data point. The coordinates are displayed in the format (*hh:mm:ss, dd.dd*), where:

- *hh:mm:ss* is the time for that data point in hours, minutes, and seconds.
- *dd.dd* is the CPU utilization percentage for that data point.

The time between poll data points is specified in the **Poll Interval (secs)** field. The total time displayed in the chart is specified in the **Time Window (mins)** field.

New data points are added to the right side of the chart. When the chart reaches the end of the time window (for example, after 5 minutes, if the **Time Window (mins)** field is set to 5), new data points continue to be added to the right side of the chart, while old data points “drop off” the left side of the chart.

If a poll is missed (for example, as a result of an SNMP timeout), SGM ignores the missing data point, stops drawing the line, and waits for the next valid data point to begin drawing the line again.

To scroll left, right, up, or down in the chart, drag the cursor while holding down **Shift** and the left mouse button.

To zoom in on a section of the chart, drag the cursor while holding down **Ctrl** and the left mouse button.

To reset the chart to the default view and scaling, click **Reset**.

- **Time Average**—Displays three color-coded icons, one for each average calculation: 5 seconds, 1 minute, and 5 minutes.

To remove the data for a given average from the chart, click the icon in this field. To return the data to the chart, click the icon again.

To superimpose a graphic grid on the chart, which can make the data easier to read, click **Grid On**.

To remove the graphic grid from the chart, click **Grid Off**.

To display online help for the window, click **Help**.

Viewing CPU Statistics for a Node

The SGM Real-Time Charts - CPU Statistics window displays the CPU utilization percentage for a node as a function of time. SGM displays one CPU Utilization Percentage chart for the active Route Switch Processor (RSP) CPU.

The SGM Real-Time Charts - CPU Statistics window is a “subset” of the Node Details pane (Figure 3-30), showing only the CPU utilization chart.

To access the SGM Real-Time Charts - CPU Statistics window, select a node in the Node or Topology window, then select **Drill Down>Show CPU Statistics** from the right-click menu. (This option is available only if SGM can poll the node.)

The SGM Real-Time Charts - CPU Statistics window displays the following information for the selected node:

- **Node**—Name of the node for which CPU statistics are being displayed. To see detailed information for the node, click the node name.
- **Poll Interval (secs)**—Drop-down list box used to specify the poll interval, in seconds, used to collect data for the **CPU Utilization Chart**. Valid selections are 15, 30, 45, 60, 90, or 120 seconds. The default selection is 15 seconds.
- **Time Window (mins)**—Drop-down list box used to specify the length of time displayed in the **CPU Utilization Chart**. Valid selections are 1, 2, 5, 10, 20, 40, or 60 minutes. The default selection is 5 minutes.
- **Last Poll Error**—Date and time the last polling error message was received by the node. If there have been no polling errors, SGM displays **None**.

- **CPU Utilization Chart**—Displays the CPU utilization percentage for the node as a function of time.

To see the exact time and data coordinates for a data point, left-click the data point. The coordinates are displayed in the format (*hh:mm:ss, dd.dd*), where:

- *hh:mm:ss* is the time for that data point in hours, minutes, and seconds.
- *dd.dd* is the CPU utilization percentage for that data point.

The time between poll data points is specified in the **Poll Interval (secs)** field. The total time displayed in the chart is specified in the **Time Window (mins)** field.

New data points are added to the right side of the chart. When the chart reaches the end of the time window (for example, after 5 minutes, if the **Time Window (mins)** field is set to 5), new data points continue to be added to the right side of the chart, while old data points “drop off” the left side of the chart.

If a poll is missed (for example, as a result of an SNMP timeout), SGM ignores the missing data point, stops drawing the line, and waits for the next valid data point to begin drawing the line again.

To scroll left, right, up, or down in the chart, drag the cursor while holding down **Shift** and the left mouse button.

To zoom in on a section of the chart, drag the cursor while holding down **Ctrl** and the left mouse button.

To reset the chart to the default view and scaling, click **Reset**.

- **Time Average**—Displays three color-coded icons, one for each average calculation: 5 seconds, 1 minute, and 5 minutes.

To remove the data for a given average from the chart, click the icon in this field. To return the data to the chart, click the icon again.

- **Reset**—If you scrolled or zoomed the chart, resets the chart to the default view and scaling.
- **Grid On**—Superimposes a graphic grid on the chart. The grid can make the data easier to read.
- **Grid Off**—Removes the graphic grid from the chart.
- **Close**—Closes the SGM Real-Time Charts - CPU Statistics window.
- **Help**—Displays online help for the current window.

Editing a Node

By default, when SGM discovers a node, it displays the node's DNS name in windows. However, if you modified your preferences to identify nodes by their IP addresses, point codes, or CLLI codes, then that is how the node is identified in windows. For more information, see the [“Modifying Overall Preference Settings” section on page 5-5](#).

You can also specify a new, more meaningful name for the node if you want to, and you can also annotate a node, attaching a descriptive string.

To change a node's name or annotate the node:

-
- Step 1** Select a node in the Node window or the Topology window.
 - Step 2** Select **Edit > Selected Item** in the SGM Main Menu. SGM displays the Edit Node Dialog ([Figure 3-31](#)).

Figure 3-31 Edit Node Dialog

- Step 3** (Optional) Initially, the **Name** field displays the node's DNS name, as discovered by SGM.

**Note**

This field might display the IP address, point code, or CLLI code of the node instead of its DNS name, depending on the Node Name setting in your preferences file. See the [“Modifying Overall Preference Settings” section on page 5-5](#) for more information.

If you want to change the displayed name of the node to a new, more meaningful name, enter the new name in the **Name** field, keeping in mind the following considerations:

- You can change an ITP node's name to a new name or IP address.
- You can change a non-ITP legacy node's name to a new name, but not to a new point code.
- A new name can be from 1 to 30 characters, and can contain any letters, numbers, or special characters, **but no periods** (.). If you enter a name that contains a period, SGM beeps and retains the current name
- A new IP address must use the *x.x.x.x* format, where *x* is between 0 and 255, and must contain only numbers and periods, **but no letters or special characters**. If you enter an IP address that contains any letters or special characters, SGM beeps and retains the current name.
- If you leave the **Name** field blank, SGM reverts to the node's default name (the DNS name for an ITP node, the point code for a non-ITP node).
- The new node name is used when launching context-based applications, such as CiscoWorks2000. Therefore, if the new name you enter is not the node's DNS name, and the application knows the node by its DNS name, context links into the application for that node might not work.

Step 4 (Optional) SGM automatically assigns an appropriate icon to each discovered Cisco router, and to **Unknown** nodes. If you want to change to a different icon (for example, if you know that a given **Unknown** node is a mobile switching center), select a new icon from the **Icon Name** drop-down list box. Valid values are:

- **Cisco2600**—Cisco 2651 series router
- **Cisco7202**—Cisco 7202 series router
- **Cisco7204**—Cisco 7204VXR series router
- **Cisco7206**—Cisco 7206VXR series router
- **Cisco7507**—Cisco 7507 series router
- **Cisco7513**—Cisco 7513 series router
- **IPDevice**—IP device, other than Cisco 2651, 7202, 7204VXR, 7206VXR, 7507, or 7513 series router. You can assign this icon to an unknown node if you know that it is an IP device.

- **MSC**—Mobile switching center. You can assign this icon to an unknown node if you know that it is an MSC.
- **SCP**—Service control point. You can assign this icon to an unknown node if you know that it is an SCP.
- **SSP**—Service switching point. You can assign this icon to an unknown node if you know that it is an SSP.
- **STP**—Signal transfer point. You can assign this icon to an unknown node if you know that it is an STP.
- **Unknown**—SGM is unable to determine the node type.

Step 5 (Optional) If the selected node is an ITP node, the **IP Addresses for SNMP** field lists all IP addresses associated with the node that SGM can use for SNMP polling, and the **Available Router IP Addresses** field lists all IP addresses associated with the node that you do not want SGM to use for SNMP polling. SGM does not send SNMP queries to IP addresses in the **Available Router IP Addresses** list.

By default, SGM places *all* discovered IP addresses in the **IP Addresses for SNMP** list, in the order in which they are discovered. SGM uses the IP address at the top of the list as the primary SNMP address for the node.

During SNMP polling of the node (both status polling and demand polling), SGM first tries the primary SNMP address. If the primary is unavailable, SGM tries the other IP addresses, one-by-one, in descending order.

To assign a new primary SNMP address, or to change the order of the secondary IP addresses, use the **Raise Priority** and **Lower Priority** buttons to move the IP addresses up and down in the **IP Addresses for SNMP** list.

You can also select IP addresses that you do not want SGM to use for SNMP polling. This is useful, for example, to separate management traffic from SMS traffic. To remove an IP address from the **IP Addresses for SNMP** list, click **Remove**. The IP address is removed from the **IP Addresses for SNMP** list and appears in the **Available Router IP Addresses** list, and is no longer used by SGM for SNMP polling.

To enable an IP address for SNMP polling again, select the address in the **Available Router IP Addresses** list and click **Add**. The IP address moves back into the **IP Addresses for SNMP** list and is again available for SNMP polling.

If you remove all IP addresses from the **IP Addresses for SNMP** list, you in effect remove the node from the network, and SGM automatically labels the node **Unmanaged** in all SGM windows.

When you click **Save**, all SGM windows are updated automatically to reflect the changes.

This menu option is displayed only for ITP nodes.

- Step 6** (Optional) SGM automatically assigns an IP address to each discovered node. However, if a node has more than one IP address, you can select which interface SGM is to use as the primary SNMP address for all subsequent SNMP polling (both status polling and demand polling). This enables you to, for example, separate the management traffic from the SMS traffic.

To select a new interface, select a new IP address from the **IP Address List** drop-down list box. All IP addresses associated with the node are included in the list box, including the primary SNMP address and all backup IP addresses.

- Step 7** (Optional) To attach a note to the node, use the **Notes** field. In this field, you can enter any important information about the node, such as a detailed description, its location, its service history, and so on. When you annotate a node, the topology map in the Topology window displays a note icon in the upper left corner of the node element.

The Note Last Updated field displays the date and time the **Notes** field was last updated. If there is no note currently associated with this node, this field displays the value **Not Set**.

- Step 8** When you are satisfied with your changes, click **Save**. SGM saves your changes and updates all SGM windows to reflect your changes.
-


Viewing Notes for a Node

SGM enables you to view the notes that have been attached to nodes.

To view a note, use one of the following procedures:

- Select a node in the Node Window or Topology Window, then select **View>Notes** from the SGM Main Menu.
- Right-click a node in the Node Window or Topology Window, then select **View>Notes** in the right-click menu.

If the node has an attached note, SGM displays the Notes for Node dialog (Figure 3-32). (If the node does not have an attached note, SGM displays the message, “Node *name* does not have a note.”)

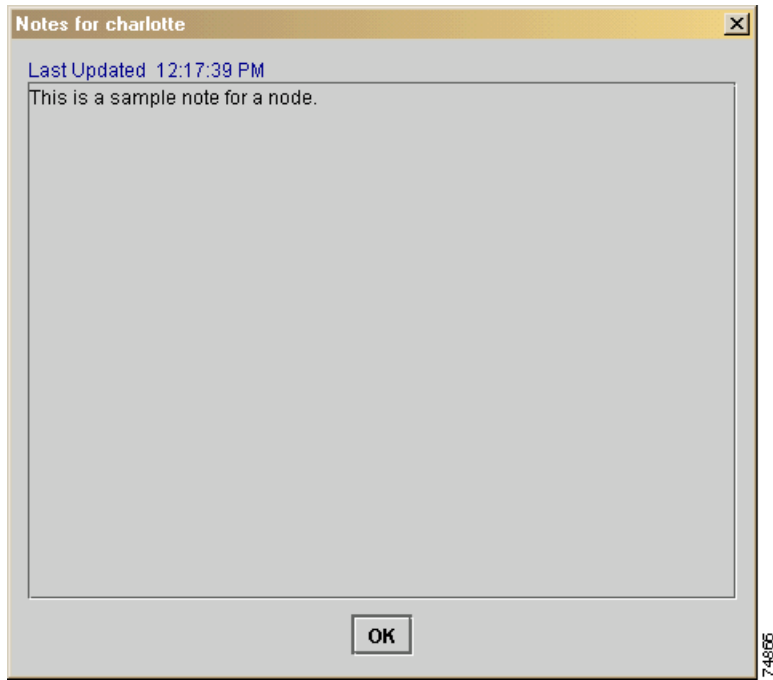Figure 3-32 Notes for Node Dialog

The Notes for Node dialog displays the following information:

- The name of the node is displayed in the title of the window (for example, **Notes for sgm-2600a.**)
- **Last Updated**—Date and time the **Notes** field for the node was last updated.
- **Notes**—Notes associated with the node.

Click **OK** to close the Notes for Node dialog.

Deleting a Node

After Discovery, the nodes in your network are known to SGM and added to the SGM database. Physically deleting nodes from your network is not the same as deleting them from the SGM database. The following sections describe the differences between deleting nodes from your network, from the SGM database, and from the SGM Discovery database, and the procedures for doing so:

- [Deleting a Node from Your Network, page 3-105](#)
- [Deleting a Node from the SGM Database, page 3-105](#)
- [Deleting a Node from the SGM Discovery Database, page 3-107](#)

Deleting a Node from Your Network

If you physically delete a known node from your network (for example, by powering down a router), it remains in the SGM database, SGM labels it **Unknown**, and it is the system administrator's responsibility to delete it from the SGM database, if you choose to do so. SGM also labels all associated linksets and links **Unknown** because SGM attempts to poll the node and gets no response.

Deleting a Node from the SGM Database

Typically, you delete a node from the SGM database for one of the following reasons:

- You have physically deleted the node from your network. This is the most common reason for deleting a node from the SGM database.
- The node is **Unknown** or **Unmanaged**, you are aware of the reason, and you no longer want to see it in SGM displays. For example, the node might be a test lab device.
- If you delete all linksets to an **Unmanaged** node, SGM does not automatically delete the node. Instead, you must manually delete the node.

If you have physically deleted a known node from your network, and you then delete it from SGM, it is no longer in the SGM database, it does not appear in SGM windows, and it is not discovered when you run Discovery.

Be aware of the following special situations:

- If you have *not* physically deleted a known node from your network, and you delete it from SGM, SGM removes the node from the poll list, and at the next poll SGM returns the node to the DEFAULT view, and labels the node as a new node if you are using a custom view.
- If a node has at least one adjacent node in **Active**, **Discovering**, **Waiting**, or **Warning** state, you cannot delete the node. If you try to do so, SGM cancels the deletion.

If either of these situations occurs, do not delete the node again. Instead, perform one of the following actions:

- Label the node **Unmanaged**. See the [“Unmanaging and Managing a Node” section on page 3-108](#) for more details.
- Remove the node from your view. See the [“Working with Views” section on page 3-23](#) for more details.



Note

If you delete a node from the SGM database, the node is deleted for *all* SGM clients and views connected to that SGM server.

To delete a node from the SGM database, use one of the following procedures:

- Select one or more nodes in the Node window ([Figure 3-25](#)) or Topology window ([Figure 3-54](#)), then select **Edit > Delete** from the SGM Main Menu.
- Right-click a node in the Node Window or Topology Window, then select **Delete Node** in the right-click menu. (You cannot delete more than one node at a time from the right-click menu.)

SGM asks you to confirm the deletion:

- Select **Yes** to delete the selected nodes. SGM deletes the nodes from the SGM database.
- Select **No** to return to the Node window or Topology window without deleting any nodes from the SGM database.

You can also use the **sgm delete node** command to delete one or more nodes from the SGM database. See the [“SGM Commands and Descriptions” section on page B-2](#) for more information on the use of this command.

**Note**

If you delete a node from the SGM database, SGM removes it from the Nodes In Current View pane of the Network View Editor window. If SGM then rediscovers the node, SGM places it in the new nodes list in the Nodes Not In Current View pane of the Network View Editor window. To restore the node to your current view, you must add it to the Nodes In Current View pane. For more information, see the [“Working with Views” section on page 3-23](#).

Deleting a Node from the SGM Discovery Database

If you want to completely eliminate a given node from the SGM database, you can delete it from the SGM Discovery database, ensuring that it is never even discovered by SGM.

**Note**

If you delete a node from the SGM Discovery database, the node is deleted for *all* SGM clients and views connected to that SGM server.

To delete a node from the SGM Discovery database:

-
- Step 1** Select **Edit>Network Discovery** from the SGM Main Menu. SGM displays the Discovery Dialog ([Figure 3-2](#)).
 - Step 2** Select the **Discovery** tab. SGM displays the Discovery panel ([Figure 3-4](#)).
 - Step 3** In the Discovered Nodes table, select the node or nodes you want to delete.
 - Step 4** Click **Delete Node**. SGM deletes the nodes from the Discovery database, without asking for confirmation. The nodes will no longer be discovered by SGM.
-

Unmanaging and Managing a Node

SGM enables you to label a node **Unmanaged**, and to remove the **Unmanaged** status from a node.

In some situations, you might not want to see a given node or nodes in SGM displays, but you might be unable to delete it from the SGM database. For example:

- If you have *not* physically deleted a known node from your network, and you delete it from SGM, SGM removes the node from the poll list, and at the next poll SGM returns the node to the DEFAULT view, and labels the node as a new node if you are using a custom view.
- If a node has at least one adjacent node in **Active**, **Discovering**, **Waiting**, or **Warning** state, you cannot delete the node. If you try to do so, SGM cancels the deletion.

If these situations, you can label the node **Unmanaged**. When you label a node **Unmanaged**, SGM removes the node from the poll list.



Note

If you label a node **Unmanaged**, the node is **Unmanaged** for *all* SGM clients and views connected to that SGM server.

To label a node **Unmanaged**:

Step 1 Select one or more nodes in the Node window ([Figure 3-25](#)) or Topology window ([Figure 3-54](#)).

You cannot label a node **Unmanaged** if it has a **Device Type** of **Unknown**:

- If you select a node with a **Device Type** of **Unknown**, then this menu option is grayed-out and cannot be selected.
- If you select more than one node, and at least one of them has a **Device Type** of **Unknown**, then this menu option is grayed-out and cannot be selected.

Step 2 Select **Edit>Unmanage** from the SGM Main Menu, or **Unmanage** from the right-click menu. SGM labels the selected nodes **Unmanaged** and removes them from the poll list.

You can also remove the **Unmanaged** status from a node, when you are ready to return the node to the SGM poll list. To remove the **Unmanaged** status from a node:

Step 1 Select one or more nodes in the Node window (Figure 3-25) or Topology window (Figure 3-54).

You cannot remove the **Unmanaged** status from a node with a **Device Type** of **Unknown**:

- If you select a node with a **Device Type** of **Unknown**, then this menu option is grayed-out and cannot be selected.
- If you select more than one node, and at least one of them has a **Device Type** of **Unknown**, then this menu option is grayed-out and cannot be selected.

Step 2 Select **Edit>Manage** from the SGM Main Menu, or **Manage** from the right-click menu. SGM removes the **Unmanaged** status from the selected node or nodes, returns them to the poll list, and polls them immediately.

Polling a Node

SGM automatically polls nodes at specified intervals. However, you can also request an immediate poll for a node.

To poll a node from the Discovery Dialog, use the following procedure:

Step 1 Select **Edit>Network Discovery** from the SGM Main Menu. SGM displays the Discovery Dialog (Figure 3-2).

Step 2 Select the **Discovery** tab. SGM displays the Discovery panel (Figure 3-5). The Discovered Nodes section of the Discovery panel lists all discovered nodes.

Step 3 Select one or more nodes. You cannot poll a node with a **Primary SNMP Address** of **N/A**:

- If you select a node with a **Primary SNMP Address** of **N/A**, then the **Poll Node** button is grayed-out and cannot be selected.
- If you select more than one node, and even one of them has a **Primary SNMP Address** of **N/A**, then the **Poll Node** button is grayed-out and cannot be selected.

- Step 4** Click **Poll Node**. SGM begins a poll of the selected nodes. During polling, the **Poll Node** button is grayed-out, the “Selected nodes are being polled” message is displayed at the bottom of the Discovery Dialog, and individual nodes might display the **Polling** status.
- If the node has only one IP address for SGM to poll, and the poll fails or times out, SGM issues an error message.
 - If the node has more than one IP address for SGM to poll, and the polls of one or more IP addresses fail or time out, SGM issues warning messages. If all polls fail or time out, SGM issues an error message.
- Step 5** When the “Selected nodes are being polled” message disappears and no nodes are in **Polling** status, polling is complete. The SGM database immediately reflects any new or changed data for the selected nodes.
-

To poll one or more nodes, retaining all currently known linksets in the SGM database, use one of the following procedures:

- Select one or more nodes in the Node Window or Topology Window, then select **Edit>Poll Nodes>Normal Poll** in the SGM Main Menu. SGM polls all selected ITP nodes.
- Select one or more linksets in the Linkset Window or Topology Window, then select **Edit>Poll Nodes>Normal Poll** in the SGM Main Menu. SGM polls all primary and adjacent ITP nodes associated with the selected linksets.
- Select an ITP node or adjacent node in the Details Window, then select **Edit>Poll Nodes>Normal Poll** in the SGM Main Menu. SGM polls that node.
- Select a linkset or link in the Details Window, then select **Edit>Poll Nodes>Normal Poll** in the SGM Main Menu. SGM polls the ITP node and adjacent node associated with the linkset or link.
- Right-click an ITP node in the Node Window or Topology Window, then select **Poll Node>Normal Poll** in the right-click menu. SGM polls the node.

Normal Poll retains all linksets associated with polled nodes, even linksets that have been deleted and are therefore in **Unknown** status.

To poll one or more nodes, removing and then rediscovering all associated linksets, use one of the following procedures:

- Select one or more nodes in the Node Window or Topology Window, then select **Edit>Poll Nodes>Clean Poll** in the SGM Main Menu. SGM polls all selected ITP nodes.
- Select one or more linksets in the Linkset Window or Topology Window, then select **Edit>Poll Nodes>Clean Poll** in the SGM Main Menu. SGM polls all primary and adjacent ITP nodes associated with the selected linksets.
- Select an ITP node or adjacent node in the Details Window, then select **Edit>Poll Nodes>Clean Poll** in the SGM Main Menu. SGM polls that node.
- Select a linkset or link in the Details Window, then select **Edit>Poll Nodes>Clean Poll** in the SGM Main Menu. SGM polls the ITP node and adjacent node associated with the linkset or link.
- Right-click an ITP node in the Node Window or Topology Window, then select **Poll Node>Clean Poll** in the right-click menu. SGM polls the node.

Clean Poll removes all associated linksets before polling the nodes.

Excluding a Node from a View

To exclude a node from the current view, right-click the node in the Node Window or Topology Window, then select **Exclude Node from View** in the right-click menu. SGM excludes the node from the current view. See the [“Creating a View” section on page 3-25](#) for more information about excluding nodes from views.

Working with Links

SGM enables you to view detailed information about all discovered links, including their associated nodes, status, events, and other information.

This section includes the following information:

- [Viewing Detailed Information for a Link, page 3-112](#)
- [Deleting a Link, page 3-140](#)
- [Ignoring a Link, page 3-142](#)
- [Viewing Ignored Links, page 3-142](#)

Related Topics:

- [Working with Linksets, page 3-34](#)
- [Working with Nodes, page 3-81](#)
- [Viewing the Topology of the Network, page 3-163](#)
- [Modifying Preference Settings, page 5-3](#)

Viewing Detailed Information for a Link

To view detailed information for a link:

-
- Step 1** Select a node or linkset in the Linkset, Node, or Topology window, then select **View>Details** from the SGM Main Menu. If you are viewing details for a node, you might need to select a specific linkset. SGM displays the Details window ([Figure 3-11](#)).
- Step 2** The turner beside **Linkset** in the left pane displays the list of links associated with the linkset. If there is no turner, there are no links associated with the linkset.
- Each link is identified by its signaling link code ID (SLC). An asterisk in the SLC indicates a link that is not configured, or that a poll could not get data for the link. For example, **SLC (*)3** means there is no link associated with the selected linkset for SLC 3, and **SLC 3(*)** means there is no link associated with the adjacent linkset for SLC 3.
- Step 3** Select an SLC. SGM displays the Link Details window, with configuration data for that link in the right panel ([Figure 3-33](#)).

Figure 3-33 Details Window, Showing Link Configuration Data

The screenshot shows the SGM Details Window for linkset 2652c_to_2652a. The window is split into two columns: the left column shows configuration for the selected linkset (2652c_to_2652a) and the right column shows configuration for the adjacent linkset (2652a_to_2652c). Both columns display identical configuration data.

Configuration Data

seattle Error Msg: None
charlotte Error Msg: None

Poll Interval (secs): 15 **Apply**
Last Poll: 12:19:22 PM

General Information

Type	SCTPIP
Is Ignored	No
Signal Link Test	YES

Interface Information

QoS	All
Local Port	5420
Remote Port	5440

Local IP Address Information

IP Address	Status
172.18.16.44	Active
172.18.16.156	Active

Remote IP Address Information

IP Address	Type	Status
172.18.16.42	Primary/Effective	Active
172.18.16.154		Active

Configured Local IP Address Information

IP Address	Interface Name
172.18.16.44	FastEthernet0/0
172.18.16.156	FastEthernet0/1

The right column (2652a_to_2652c) displays the same configuration data as the left column.

Information for links associated with the selected linkset are displayed in the left column, and for links associated with the adjacent linkset in the right column.

The Poll Interval section at the top right of the Details window displays the time of the last poll, and enables you to change the poll interval:

- The **Last Poll** field initially displays the phrase **Waiting for first poll**. After the first polling cycle, SGM populates this field with the actual time of the last poll.
- To change the poll interval, enter a new value (in seconds) and click **Apply**. The valid range is 15 to 999 seconds. The default value is 15 seconds.

The Error Message section of the Details window displays the last error messages received by the node and by the adjacent node.

Updates for the links that are received from the SGM server are reflected automatically in this window.



Note

This window polls your network periodically. To prevent unnecessary traffic on your network, close this window when you no longer need to refer to it.

- Step 4** (Optional) To view naming information for the link, select the Configuration Data tab. SGM displays the Naming Information table, which contains the following information:
- **Type**—Type of link. Possible link types are:
 - **HSL**—The link uses the SS7-over-ATM (Asynchronous Transfer Mode) high-speed protocol.
 - **SCTPIP**—The link uses the Stream Control Transmission Protocol (SCTP) IP transport protocol.
 - **Serial**—The link uses the serial SS7 signaling protocol.
 - **Is Ignored**—Indicates whether the link is **Ignored** (that is, whether the link is to be included when aggregating and displaying SGM status information).
 - **Signal Link Test**—Indicates whether the link acknowledged a Signal Link Test Message (SLTM), which tests the link's ability to carry data.
- Step 5** (Optional) To view interface information for the link, select the Configuration Data tab. SGM displays the Interface Information table, which contains the following information:
- **QoS**—Quality of service (QoS) class of the link.
 - **Local Port**—Local port for the link.
 - **Remote Port**—Remote port for the link.
- Step 6** (Optional) To view information about the local IP addresses for the link, select the Configuration Data tab. SGM displays the Local IP Address Information table, which contains the following information:
- **IP Address**—Local IP address associated with the link.
 - **Status**—Current status of the IP address. Possible values are:
 - **Active (green ball)**—The IP address is currently fully functional.
 - **Inactive (red ball)**—The IP address is not currently functional.

Step 7 (Optional) To view information about the remote IP addresses for the link, select the Configuration Data tab. SGM displays the Remote IP Address Information table, which contains the following information:

- **IP Address**—Remote IP address associated with the link.
- **Type**—Indicates the designated primary IP address for the link (**Primary**) and the IP address currently being used by the link (**Effective**).

Usually, the same IP address is both **Primary** and **Effective**. However, if the primary IP address is down for some reason, a different IP address is used by the link and is labeled **Effective**.

- **Status**—Current status of the IP address. Possible values are:
 - **Active (green ball)**—The IP address is currently fully functional.
 - **Inactive (red ball)**—The IP address is not currently functional.

Step 8 (Optional) To view information about the configured local IP addresses for the link, select the Configuration Data tab. SGM displays the Configured Local IP Address Information table, which contains the following information:

- **IP Address**—Configured local IP address associated with the link.
- **Interface Name**—For serial and HSL links, this field displays the interface name of the link.

For SCTP links, this field displays the primary IP address and interface name of the link. The primary IP address is the first CS7 local IP address configured in the router. For example, if the following IP addresses are configured in the router:


```
cs7 local-peer 4180
  local-ip 128.3.0.77
  local-ip 128.3.0.254
```

Then SGM uses **128.3.0.77** as the primary IP address. If at any time that IP address is deleted from the router configuration, or if a new IP address is added to the beginning of the list, SGM detects the change and automatically updates this field to reflect the new primary IP address.

If the link has no interface name, this field is blank.

Step 9 (Optional) To view status information for the link, select the Status Summary tab. SGM displays status information for the link in the right panel ([Figure 3-34](#)).

Figure 3-34 Details Window, Showing Link Status

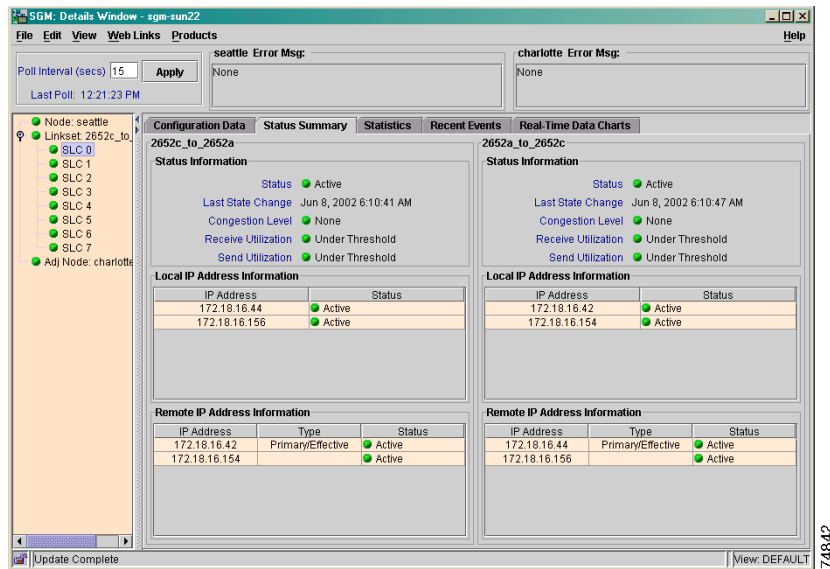

SGM displays the Status Information table, which contains the following information:

- **Status**—Current status of the IP address. Possible values are:
 - **Active (green ball)**—The link is currently fully functional.
 - **Blocked (red ball)**—Traffic on this link is disabled by protocol.
 - **Failed (red ball)**—An error is preventing traffic from flowing on this link, or the associated linkset has been set to **Shutdown** status.

A link can be **Failed** from an MTP3 perspective, but control messages might still be sent or received on the link, resulting in changing packet/second and bit/second rates. The rates might also be different at each end of the link, depending on the reason for the failure and the timing related to each endpoint.
 - **InhibitLoc (blue ball)**—A local router administrator has set the link to prevent traffic from flowing.
 - **InhibitRem (blue ball)**—A remote router administrator has set the link to prevent traffic from flowing.

- **Shutdown (blue ball)**—A router administrator has set the link to prevent traffic from flowing.
- **Unknown (red ball)**—Either the node associated with this link has failed to respond to an SNMP request, or SGM found that the link no longer exists.
- When you physically delete a link, the **Status** field displays **Unknown** until you delete the link from the SGM database.
- **Warning (yellow ball)**—The link is active and traffic is flowing, but one or more situations has occurred:
 - The link is congested.
 - The link has exceeded the defined **Receive Utilization %** or **Send Utilization %**.
- One or more of the local or remote IP addresses defined for SCTP is not active.**Last State Change**—Date and time that the status of the link last changed.
- **Congestion Level**—Indicates whether there is congestion on the link. A link is congested if it has too many packets waiting to be sent. This condition could be caused by the failure of an element in your network.

Possible values for the **Congestion Level** field are:

- **None**—The link is not congested.
- **Low**—The link is slightly congested.
- **High**—The link is congested.
- **Very High**—The link is very congested.

Low, **High**, and **Very High** correspond roughly to equivalent ANSI, China standard, and ITU congestion levels.

- **Receive Utilization**—Indicates whether, on average, the link is under its configured receive utilization threshold (**UnderThreshold**) or over the threshold (**OverThreshold**).
- **Send Utilization**—Indicates whether, on average, the link is under its configured send utilization threshold (**UnderThreshold**) or over the threshold (**OverThreshold**).

Step 10 (Optional) To view status information for the link's local IP addresses, select the Status Summary tab. SGM displays the Local IP Address Information table, which contains the following information:

- **IP Address**—Local IP address associated with the link.
- **Status**—Current status of the IP address. Possible values are:
 - **Active (green ball)**—The IP address is currently fully functional.
 - **Inactive (red ball)**—The IP address is not currently functional.

Step 11 (Optional) To view status information for the link's remote IP addresses, select the Status Summary tab. SGM displays the Remote IP Address Information table, which contains the following information:


- **IP Address**—Remote IP address associated with the link.
- **Type**—Indicates the designated primary IP address for the link (**Primary**) and the IP address currently being used by the link (**Effective**).

Usually, the same IP address is both **Primary** and **Effective**. However, if the primary IP address is down for some reason, a different IP address is used by the link and is labeled **Effective**.

- **Status**—Current status of the link. Possible values are:
 - **Active (green ball)**—The IP address is currently fully functional.
 - **Inactive (red ball)**—The IP address is not currently functional.

- Step 12** (Optional) To view packet information for the link, select the Statistics tab. SGM displays statistics for the link in the right panel (Figure 3-35).

Figure 3-35 Details Window, Showing Link Statistics

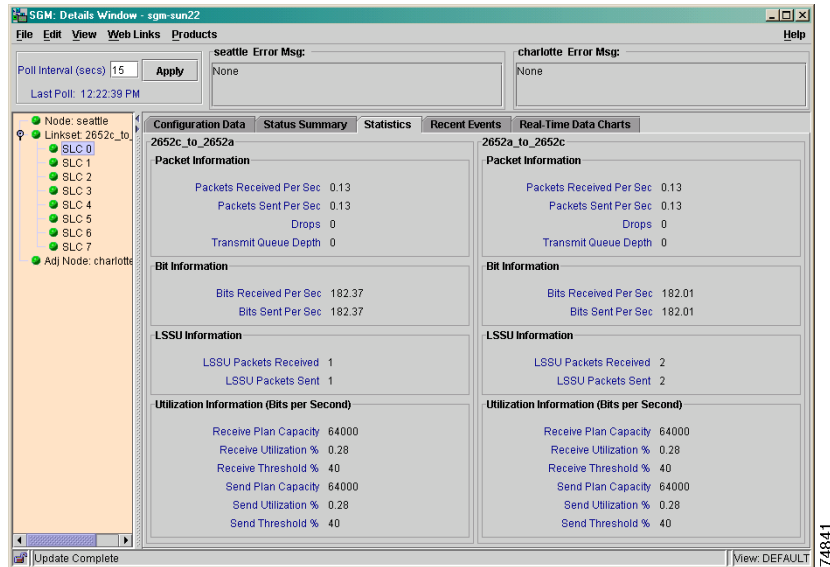

SGM displays the Packet Information table, which contains the following information:

- **Packets Received Per Sec**—Number of packets received by the link per second. This field initially displays the phrase **Waiting for second poll**. After two polling cycles, SGM populates this field with actual calculated rates.
- **Packets Sent Per Sec**—Number of packets sent by the link per second. This field initially displays the phrase **Waiting for second poll**. After two polling cycles, SGM populates this field with actual calculated rates.
- **Drops**—Total number of packets that have been dropped by the link.
- **Transmit Queue Depth**—Number of packets waiting to be sent on by the link.

- Step 13** (Optional) To view bit information for the link, select the Statistics tab. SGM displays the Bit Information table (or the Byte Information table, if you cleared the **Show Details in Bits Instead of Bytes** checkbox in the Preferences Window), which contains the following information:
- **Bits Received Per Sec** or **Bytes Received Per Sec**—Number of bits or bytes received by the link per second. This field initially displays the phrase **Waiting for second poll**. After two polling cycles, SGM populates this field with actual calculated rates.
 - **Bits Sent Per Sec** or **Bytes Sent Per Sec**—Number of bits or bytes sent by the link per second. This field initially displays the phrase **Waiting for second poll**. After two polling cycles, SGM populates this field with actual calculated rates.
- Step 14** (Optional) To view LSSU information for the link, select the Statistics tab. SGM displays the LSSU Information table, which contains the following information:
- **LSSU Packets Received**—Total number of SS7 Message Transfer Part Layer 2 (MTP2) Links Status Signal Unit (LSSU) packets received by the link.
 - **LSSU Packets Sent**—Total number of LSSU packets sent by the link.
- Step 15** (Optional) To view utilization information for the link, select the Statistics tab. SGM displays the Utilization Information table, which contains the following information:
- **Receive Plan Capacity**—Planned capacity of the link to receive, in bits per second.
 - For a link of type **Serial** or **HSL**, available bandwidth for the link.
 - For a link of type **SCTPIP** or **Mixed**, set on the router using the **plan-capacity** CS7 link configuration command. If **Receive Plan Capacity** is not set on the router for this link, this field displays the value **0**.
 - For a link of type **Other**, this field always displays the value **0**.

- **Receive Utilization**—Amount of the link's receive capacity being used, as a percentage or in Erlangs, calculated using the following formula:

$$\text{Receive Utilization} = (\text{Bits Received Per Sec}) / \text{Receive Plan Capacity}$$

This field initially displays the phrase **Waiting for second poll**. After two polling cycles, SGM populates this field with actual calculated rates.

- For a link of type **SCTPIP** or **Mixed**, if **Receive Plan Capacity** is not set on the router for this link, this field displays the phrase **Set Plan Capacity on Router**.
- For a link of type **Other**, this field always displays the phrase **Set Plan Capacity on Router**.
- **Receive Threshold %**—Indicates when a `cItpSpLinkRcvdUtilChange` is to be generated for the link, as a percent of its total receive capacity. For example, if **Receive Plan Capacity** is **64000** bits per second, and **Receive Threshold %** is **50**, then a `cItpSpLinkRcvdUtilChange` notification is generated when the link reaches 50% of 64000, or 32000 bits per second.
- **Send Plan Capacity**—Planned capacity of the link to send, in bits per second.
 - For a link of type **Serial** or **HSL**, available bandwidth for the link.
 - For a link of type **SCTPIP** or **Mixed**, set on the router using the **plan-capacity** CS7 link configuration command. If **Send Plan Capacity** is not set on the router for this link, this field displays the value **0**.
 - For a link of type **Other**, this field always displays the value **0**.
- **Send Utilization**—Amount of the link's send capacity being used, as a percentage or in Erlangs, calculated using the following formula:

$$\text{Send Utilization} = (\text{Bits Sent Per Sec}) / \text{Planned Capacity}$$


This field initially displays the phrase **Waiting for second poll**. After two polling cycles, SGM populates this field with actual calculated rates.

- For a link of type **SCTPIP** or **Mixed**, if **Send Plan Capacity** is not set on the router for this link, this field displays the phrase **Set Plan Capacity on Router**.
- For a link of type **Other**, this field always displays the phrase **Set Plan Capacity on Router**.

- **Send Threshold %**—Indicates when a cItpSpLinkSentUtilChange is to be generated for the link, as a percent of its total send capacity. For example, if **Send Plan Capacity** is **64000** bits per second, and **Send Threshold %** is **50**, then a cItpSpLinkSentUtilChange notification is generated when the link reaches 50% of 64000, or 32000 bits per second.

Step 16 (Optional) To view information all recent events associated with the link, select the Recent Events tab. SGM displays recent events for the link in the right panel (Figure 3-36).

Figure 3-36 Details Window, Showing Link Events

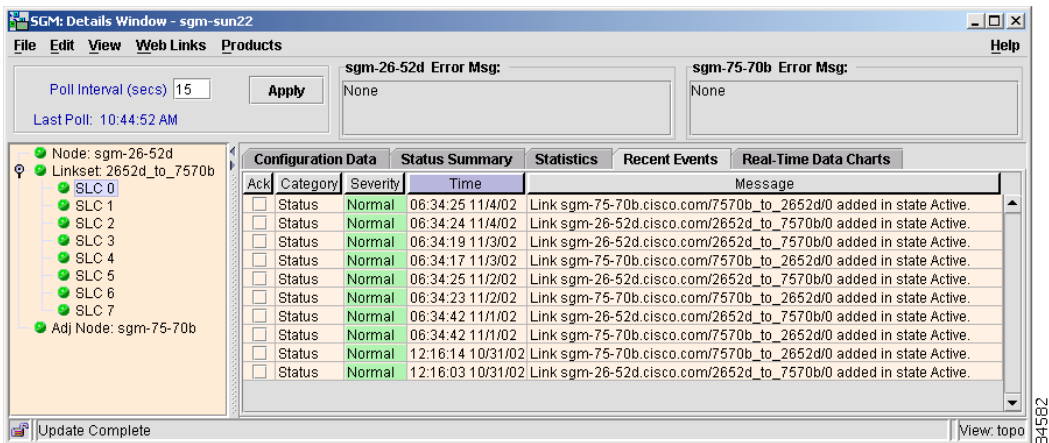

SGM displays the Recent Events table, which contains the following information:

- By default, SGM displays only unacknowledged events in this table. To display acknowledged events in the table, see [Step 7](#) in the “[Modifying Overall Preference Settings](#)” section on [page 5-5](#).
- **Ack**—Indicates whether the event has been acknowledged:
 - To acknowledge an unacknowledged event, select this checkbox.
 - To make a previously acknowledged event unacknowledged, clear this checkbox.
- **Note**—Indicates whether there is a note associated with the event.

- **Severity**—Severity of the event. Default values are:
 - **Admin**—The default color is cyan.
 - **Error**—The default color is coral.
 - **None**—The default color is white.
 - **Normal**—The default color is light green.
 - **Warning**—The default color is yellow.


You can customize this field. See the “[Modifying the SGM Event Configuration File \(Solaris Only\)](#)” section on page 5-25 for more information.

- **Time**—Date and time the event was logged.
- **Message**—Text of the message.

You can customize this field. See the “[Modifying the SGM Event Configuration File \(Solaris Only\)](#)” section on page 5-25 for more information.

Step 17 (Optional) To view a received utilization chart for the link, select the Real-Time Data Charts tab. SGM displays the chart in the right panel ([Figure 3-37](#)).

Figure 3-37 Details Window, Showing Link ReceivedUtilization

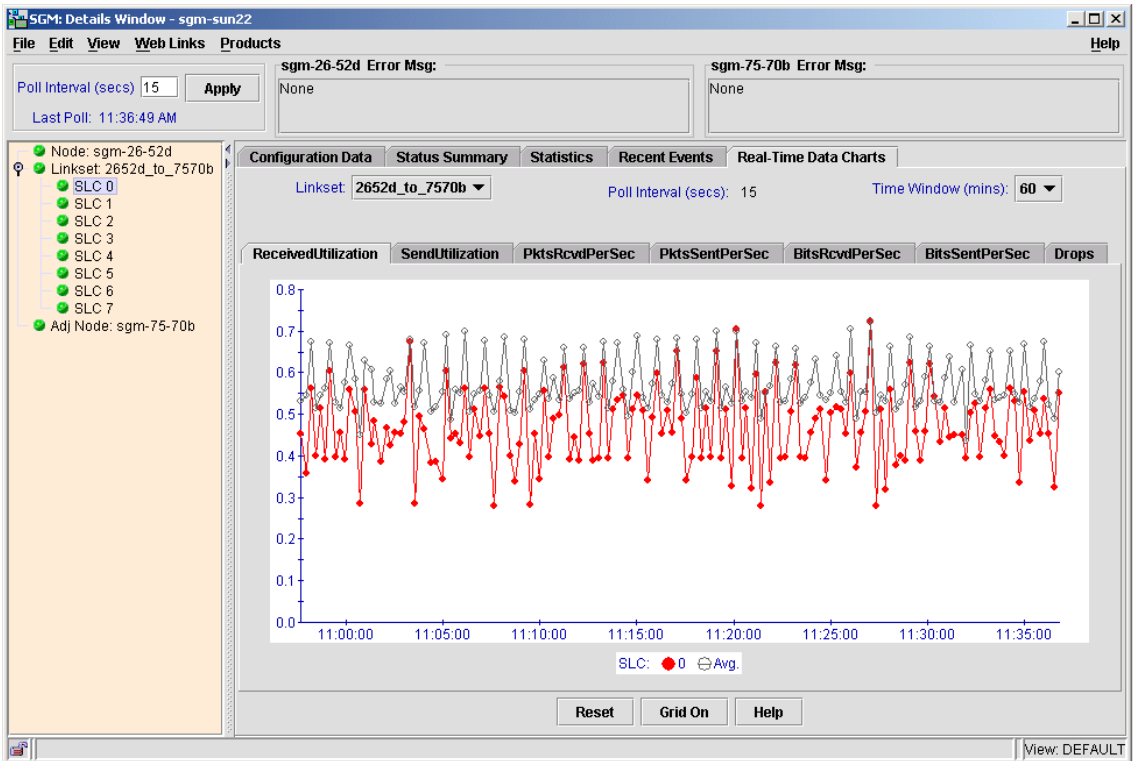

SGM displays the following information in the ReceivedUtilization chart:

- **Linkset**—Drop-down list box used to select the linkset from whose perspective data is to be displayed. By default, data is displayed from the perspective of the selected linkset. To display data from the perspective of the alternate linkset, select it in this list box.
- **Poll Interval (secs)**—Poll interval, in seconds, used to collect data for the **Received Utilization Chart**. You cannot edit this field directly. Instead, edit the **Poll Interval (secs)** field at the top right of the Details window.
- **Time Window (mins)**—Drop-down list box used to specify the length of time displayed in the **Received Utilization Chart**. Valid selections are 1, 2, 5, 10, 20, 40, or 60 minutes. The default selection is 5 minutes.

- **Received Utilization Chart**—Displays the **Receive Utilization %** for the link as a function of time, as well as the average **Receive Utilization %** for all links on the linkset.

To see the exact time and data coordinates for a data point, left-click the data point. The coordinates are displayed in the format (*hh:mm:ss, dd.dd*), where:

- *hh:mm:ss* is the time for that data point in hours, minutes, and seconds.
- *dd.dd* is the receive utilization percentage for that data point.

To remove the data for a link or for the average from the chart, click the icon in the **SLC** field. To return the data to the chart, click the icon again.

The time between poll data points is specified in the **Poll Interval (secs)** field. The total time displayed in the chart is specified in the **Time Window (mins)** field.

New data points are added to the right side of the chart. When the chart reaches the end of the time window (for example, after 5 minutes, if the **Time Window (mins)** field is set to 5), new data points continue to be added to the right side of the chart, while old data points “drop off” the left side of the chart.

If a poll is missed (for example, as a result of an SNMP timeout), SGM ignores the missing data point, stops drawing the line, and waits for the next valid data point to begin drawing the line again.

To scroll left, right, up, or down in the chart, drag the cursor while holding down **Shift** and the left mouse button.

To zoom in on a section of the chart, drag the cursor while holding down **Ctrl** and the left mouse button.

To reset the chart to the default view and scaling, click **Reset**.

- **SLC**—Displays up to 17 color-coded icons:
 - One for each link (SLC) in the **Received Utilization Chart**, up to 16 total links.
 - One for the average of all SLCs.

To remove the data for a link or for the average from the chart, click the icon in this field. To return the data to the chart, click the icon again.

To superimpose a graphic grid on the chart, which can make the data easier to read, click **Grid On**.

SGM displays the following information in the SendUtilization chart:

- **Linkset**—Drop-down list box used to select the linkset from whose perspective data is to be displayed. By default, data is displayed from the perspective of the selected linkset. To display data from the perspective of the alternate linkset, select it in this list box.
- **Poll Interval (secs)**—Poll interval, in seconds, used to collect data for the **Send Utilization Chart**. You cannot edit this field directly. Instead, edit the **Poll Interval (secs)** field at the top right of the Details window.
- **Time Window (mins)**—Drop-down list box used to specify the length of time displayed in the **Send Utilization Chart**. Valid selections are 1, 2, 5, 10, 20, 40, or 60 minutes. The default selection is 5 minutes.
- **Send Utilization Chart**—Displays the **Send Utilization %** for the link as a function of time, as well as the average **Send Utilization %** for all links on the linkset.

To see the exact time and data coordinates for a data point, left-click the data point. The coordinates are displayed in the format (*hh:mm:ss, dd.dd*), where:

- *hh:mm:ss* is the time for that data point in hours, minutes, and seconds.
- *dd.dd* is the send utilization percentage for that data point.

To remove the data for a link or for the average from the chart, click the icon in the **SLC** field. To return the data to the chart, click the icon again.

The time between poll data points is specified in the **Poll Interval (secs)** field. The total time displayed in the chart is specified in the **Time Window (mins)** field.

New data points are added to the right side of the chart. When the chart reaches the end of the time window (for example, after 5 minutes, if the **Time Window (mins)** field is set to 5), new data points continue to be added to the right side of the chart, while old data points “drop off” the left side of the chart.

If a poll is missed (for example, as a result of an SNMP timeout), SGM ignores the missing data point, stops drawing the line, and waits for the next valid data point to begin drawing the line again.

To scroll left, right, up, or down in the chart, drag the cursor while holding down **Shift** and the left mouse button.

To zoom in on a section of the chart, drag the cursor while holding down **Ctrl** and the left mouse button.

To reset the chart to the default view and scaling, click **Reset**.

- **SLC**—Displays up to 17 color-coded icons:
 - One for each link (SLC) in the **Send Utilization Chart**, up to 16 total links.
 - One for the average of all SLCs.

To remove the data for a link or for the average from the chart, click the icon in this field. To return the data to the chart, click the icon again.


To superimpose a graphic grid on the chart, which can make the data easier to read, click **Grid On**.

To remove the graphic grid from the chart, click **Grid Off**.

To display online help for the window, click **Help**.

- Step 19** (Optional) To view a packets-received-per-second chart for the link, select the Real-Time Data Charts tab. SGM displays the chart in the right panel ([Figure 3-39](#)).

Figure 3-39 Details Window, Showing Link Packets Received Per Second

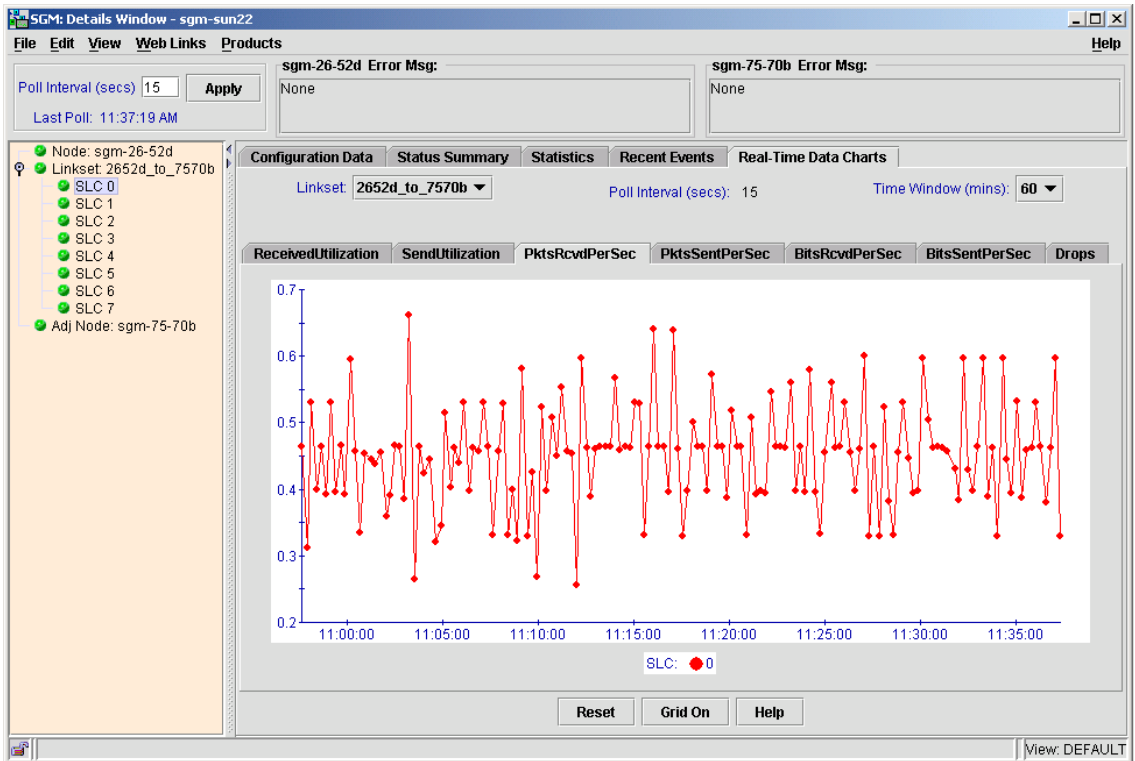

SGM displays the following information in the PktsRcvdPerSec chart:

- **Linkset**—Drop-down list box used to select the linkset from whose perspective data is to be displayed. By default, data is displayed from the perspective of the selected linkset. To display data from the perspective of the alternate linkset, select it in this list box.
- **Poll Interval (secs)**—Poll interval, in seconds, used to collect data for the **Packets Received Chart**. You cannot edit this field directly. Instead, edit the **Poll Interval (secs)** field at the top right of the Details window.
- **Time Window (mins)**—Drop-down list box used to specify the length of time displayed in the **Packets Received Chart**. Valid selections are 1, 2, 5, 10, 20, 40, or 60 minutes. The default selection is 5 minutes.

- **Packets Received Chart**—Displays the **Packets Received Per Sec** for the link as a function of time.

To see the exact time and data coordinates for a data point, left-click the data point. The coordinates are displayed in the format (*hh:mm:ss, dd.dd*), where:

- *hh:mm:ss* is the time for that data point in hours, minutes, and seconds.
- *dd.dd* is the number of packets received per second for that data point.

To remove the data for a link from the chart, click the icon in the **SLC** field. To return the data to the chart, click the icon again.

The time between poll data points is specified in the **Poll Interval (secs)** field. The total time displayed in the chart is specified in the **Time Window (mins)** field.

New data points are added to the right side of the chart. When the chart reaches the end of the time window (for example, after 5 minutes, if the **Time Window (mins)** field is set to 5), new data points continue to be added to the right side of the chart, while old data points “drop off” the left side of the chart.

If a poll is missed (for example, as a result of an SNMP timeout), SGM ignores the missing data point, stops drawing the line, and waits for the next valid data point to begin drawing the line again.

To scroll left, right, up, or down in the chart, drag the cursor while holding down **Shift** and the left mouse button.

To zoom in on a section of the chart, drag the cursor while holding down **Ctrl** and the left mouse button.

To reset the chart to the default view and scaling, click **Reset**.

- **SLC**—Displays up to 16 color-coded icons, one for each link (SLC) in the **Packets Received Chart**. To remove the data for a link from the chart, click the icon in this field. To return the data to the chart, click the icon again.


To superimpose a graphic grid on the chart, which can make the data easier to read, click **Grid On**.

To remove the graphic grid from the chart, click **Grid Off**.

To display online help for the window, click **Help**.

- Step 20** (Optional) To view a packets-sent-per-second chart for the link, select the Real-Time Data Charts tab. SGM displays the chart in the right panel (Figure 3-40).

Figure 3-40 Details Window, Showing Link Packets Sent Per Second

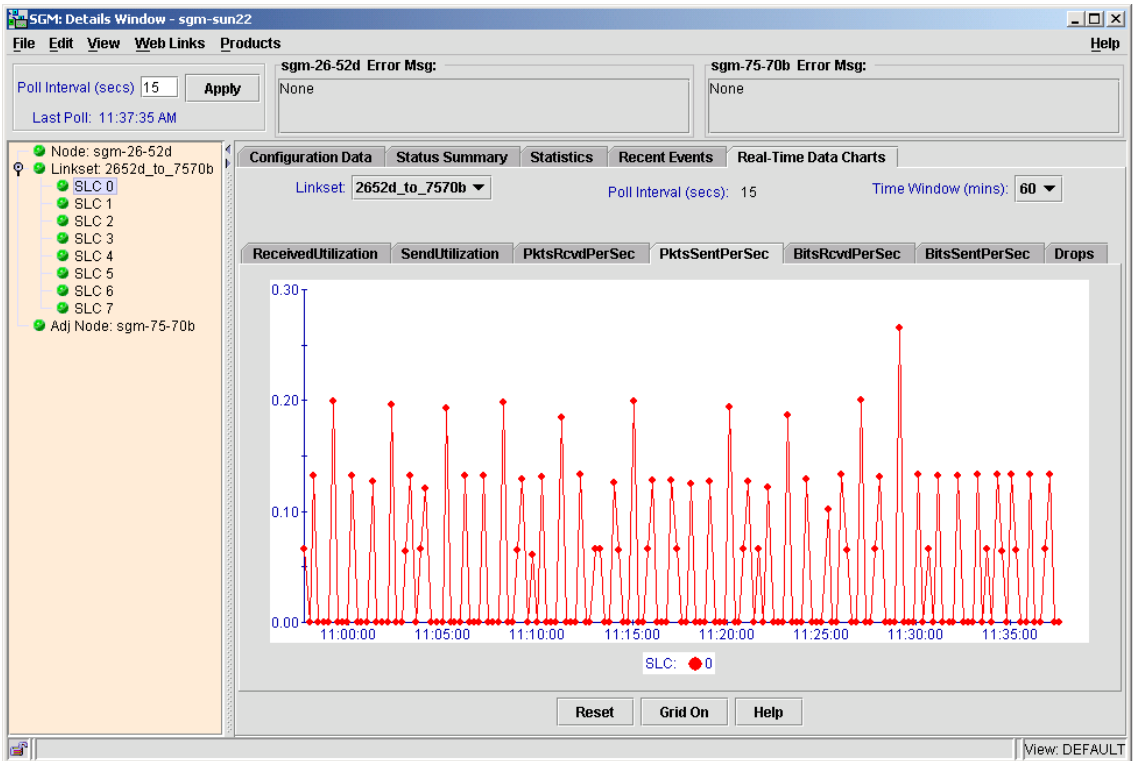

SGM displays the following information in the PktsSentPerSec chart:

- **Linkset**—Drop-down list box used to select the linkset from whose perspective data is to be displayed. By default, data is displayed from the perspective of the selected linkset. To display data from the perspective of the alternate linkset, select it in this list box.
- **Poll Interval (secs)**—Poll interval, in seconds, used to collect data for the **Packets Sent Chart**. You cannot edit this field directly. Instead, edit the **Poll Interval (secs)** field at the top right of the Details window.
- **Time Window (mins)**—Drop-down list box used to specify the length of time displayed in the **Packets Sent Chart**. Valid selections are 1, 2, 5, 10, 20, 40, or 60 minutes. The default selection is 5 minutes.

- **Packets Sent Chart**—Displays the **Packets Sent Per Sec** for the link as a function of time.

To see the exact time and data coordinates for a data point, left-click the data point. The coordinates are displayed in the format (*hh:mm:ss, dd.dd*), where:

- *hh:mm:ss* is the time for that data point in hours, minutes, and seconds.
- *dd.dd* is the number of packets sent per second for that data point.

To remove the data for a link from the chart, click the icon in the **SLC** field. To return the data to the chart, click the icon again.

The time between poll data points is specified in the **Poll Interval (secs)** field. The total time displayed in the chart is specified in the **Time Window (mins)** field.

New data points are added to the right side of the chart. When the chart reaches the end of the time window (for example, after 5 minutes, if the **Time Window (mins)** field is set to 5), new data points continue to be added to the right side of the chart, while old data points “drop off” the left side of the chart.

If a poll is missed (for example, as a result of an SNMP timeout), SGM ignores the missing data point, stops drawing the line, and waits for the next valid data point to begin drawing the line again.

To scroll left, right, up, or down in the chart, drag the cursor while holding down **Shift** and the left mouse button.

To zoom in on a section of the chart, drag the cursor while holding down **Ctrl** and the left mouse button.

To reset the chart to the default view and scaling, click **Reset**.

- **SLC**—Displays up to 16 color-coded icons, one for each link (SLC) in the **Packets Sent Chart**. To remove the data for a link from the chart, click the icon in this field. To return the data to the chart, click the icon again.

To superimpose a graphic grid on the chart, which can make the data easier to read, click **Grid On**.

To remove the graphic grid from the chart, click **Grid Off**.

To display online help for the window, click **Help**.

- Step 21** (Optional) To view a bits-received-per-second chart for the link (or a bytes-received-per-second chart, if you cleared the **Show Details in Bits Instead of Bytes** checkbox in the Preferences Window), select the Real-Time Data Charts tab. SGM displays the chart in the right panel (Figure 3-41).

Figure 3-41 Details Window, Showing Link Bits Received Per Second



84579

SGM displays the following information in the BitsRcvdPerSec or BytesRcvdPerSec chart:

- **Linkset**—Drop-down list box used to select the linkset from whose perspective data is to be displayed. By default, data is displayed from the perspective of the selected linkset. To display data from the perspective of the alternate linkset, select it in this list box.
- **Poll Interval (secs)**—Poll interval, in seconds, used to collect data for the **Bits Received Chart** or **Bytes Received Chart**. You cannot edit this field directly. Instead, edit the **Poll Interval (secs)** field at the top right of the Details window.
- **Time Window (mins)**—Drop-down list box used to specify the length of time displayed in the **Bits Received Chart** or **Bytes Received Chart**. Valid selections are 1, 2, 5, 10, 20, 40, or 60 minutes. The default selection is 5 minutes.
- **Bits Received Chart** or **Bytes Received Chart**—Displays the **Bits Received Per Sec** or **Bytes Received Per Sec** for the link as a function of time.

To see the exact time and data coordinates for a data point, left-click the data point. The coordinates are displayed in the format (*hh:mm:ss, dd.dd*), where:

- *hh:mm:ss* is the time for that data point in hours, minutes, and seconds.
- *dd.dd* is the number of bits or bytes received per second for that data point.

To remove the data for a link from the chart, click the icon in the **SLC** field. To return the data to the chart, click the icon again.

The time between poll data points is specified in the **Poll Interval (secs)** field. The total time displayed in the chart is specified in the **Time Window (mins)** field.

New data points are added to the right side of the chart. When the chart reaches the end of the time window (for example, after 5 minutes, if the **Time Window (mins)** field is set to 5), new data points continue to be added to the right side of the chart, while old data points “drop off” the left side of the chart.

If a poll is missed (for example, as a result of an SNMP timeout), SGM ignores the missing data point, stops drawing the line, and waits for the next valid data point to begin drawing the line again.

To scroll left, right, up, or down in the chart, drag the cursor while holding down **Shift** and the left mouse button.

To zoom in on a section of the chart, drag the cursor while holding down **Ctrl** and the left mouse button.

To reset the chart to the default view and scaling, click **Reset**.

- **SLC**—Displays up to 16 color-coded icons, one for each link (SLC) in the **Bits Received Chart** or **Bytes Received Chart**. To remove the data for a link from the chart, click the icon in this field. To return the data to the chart, click the icon again.

To superimpose a graphic grid on the chart, which can make the data easier to read, click **Grid On**.

To remove the graphic grid from the chart, click **Grid Off**.

To display online help for the window, click **Help**.

- Step 22** (Optional) To view a bits-sent-per-second chart for the link (or a bytes-sent-per-second chart, if you cleared the **Show Details in Bits Instead of Bytes** checkbox in the Preferences Window), select the Real-Time Data Charts tab. SGM displays the chart in the right panel ([Figure 3-42](#)).

Figure 3-42 Details Window, Showing Link Bits Sent Per Second



SGM displays the following information in the BitsSentPerSec or BytesSentPerSec chart:

- **Linkset**—Drop-down list box used to select the linkset from whose perspective data is to be displayed. By default, data is displayed from the perspective of the selected linkset. To display data from the perspective of the alternate linkset, select it in this list box.
- **Poll Interval (secs)**—Poll interval, in seconds, used to collect data for the **Bits Sent Chart** or **Bytes Sent Chart**. You cannot edit this field directly. Instead, edit the **Poll Interval (secs)** field at the top right of the Details window.

- **Time Window (mins)**—Drop-down list box used to specify the length of time displayed in the **Bits Sent Chart** or **Bytes Sent Chart**. Valid selections are 1, 2, 5, 10, 20, 40, or 60 minutes. The default selection is 5 minutes.
- **Bits Sent Chart** or **Bytes Sent Chart**—Displays the **Bits Sent Per Sec** or **Bytes Sent Per Sec** for the link as a function of time.

To see the exact time and data coordinates for a data point, left-click the data point. The coordinates are displayed in the format (*hh:mm:ss, dd.dd*), where:

- *hh:mm:ss* is the time for that data point in hours, minutes, and seconds.
- *dd.dd* is the number of bits or bytes sent per second for that data point.

To remove the data for a link from the chart, click the icon in the **SLC** field. To return the data to the chart, click the icon again.

The time between poll data points is specified in the **Poll Interval (secs)** field. The total time displayed in the chart is specified in the **Time Window (mins)** field.

New data points are added to the right side of the chart. When the chart reaches the end of the time window (for example, after 5 minutes, if the **Time Window (mins)** field is set to 5), new data points continue to be added to the right side of the chart, while old data points “drop off” the left side of the chart.

If a poll is missed (for example, as a result of an SNMP timeout), SGM ignores the missing data point, stops drawing the line, and waits for the next valid data point to begin drawing the line again.

To scroll left, right, up, or down in the chart, drag the cursor while holding down **Shift** and the left mouse button.

To zoom in on a section of the chart, drag the cursor while holding down **Ctrl** and the left mouse button.

To reset the chart to the default view and scaling, click **Reset**.

- **SLC**—Displays up to 16 color-coded icons, one for each link (SLC) in the **Bits Sent Chart** or **Bytes Sent Chart**. To remove the data for a link from the chart, click the icon in this field. To return the data to the chart, click the icon again.

Working with Links


To superimpose a graphic grid on the chart, which can make the data easier to read, click **Grid On**.

To remove the graphic grid from the chart, click **Grid Off**.

To display online help for the window, click **Help**.

- Step 23** (Optional) To view a drops chart for the link, select the Real-Time Data Charts tab. SGM displays the chart in the right panel (Figure 3-43).

Figure 3-43 Details Window, Showing Link Drops

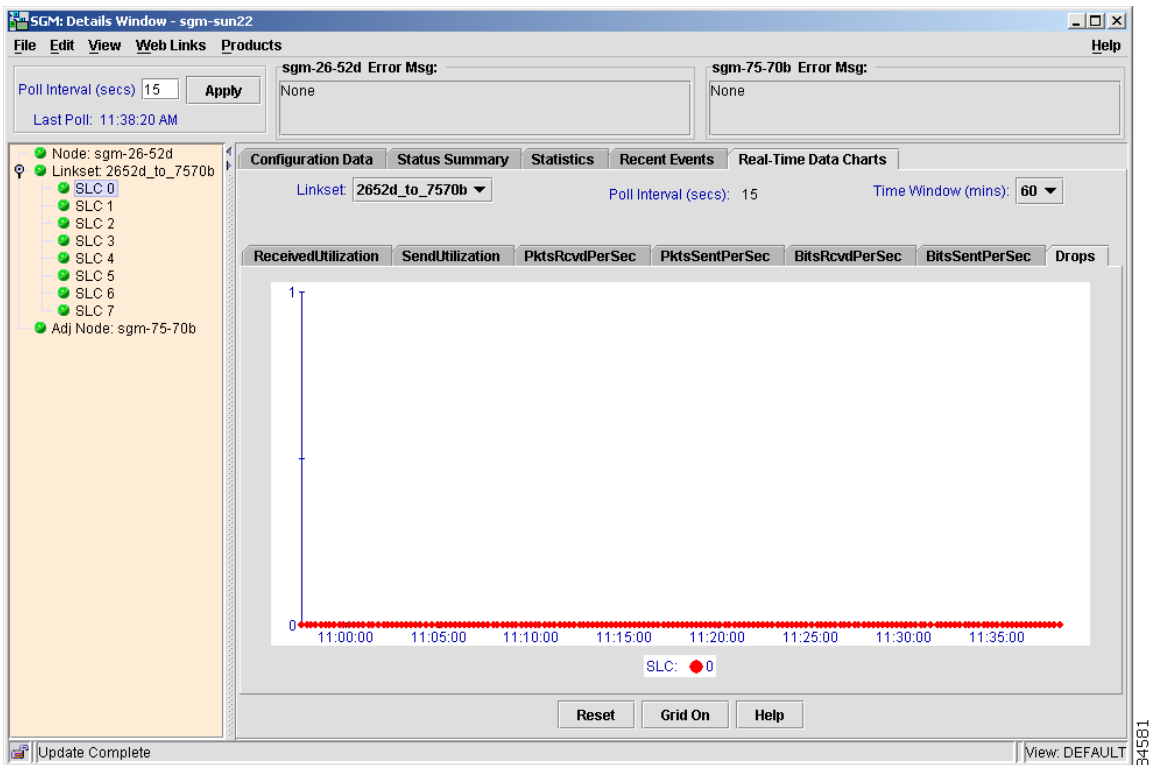

SGM displays the following information in the Drops chart:

- **Linkset**—Drop-down list box used to select the linkset from whose perspective data is to be displayed. By default, data is displayed from the perspective of the selected linkset. To display data from the perspective of the alternate linkset, select it in this list box.
- **Poll Interval (secs)**—Poll interval, in seconds, used to collect data for the **Drops Chart**. You cannot edit this field directly. Instead, edit the **Poll Interval (secs)** field at the top right of the Details window.
- **Time Window (mins)**—Drop-down list box used to specify the length of time displayed in the **Drops Chart**. Valid selections are 1, 2, 5, 10, 20, 40, or 60 minutes. The default selection is 5 minutes.
- **Drops Chart**—Displays the **Drops** for the link as a function of time.

To see the exact time and data coordinates for a data point, left-click the data point. The coordinates are displayed in the format (*hh:mm:ss, dd.dd*), where:

- *hh:mm:ss* is the time for that data point in hours, minutes, and seconds.
- *dd.dd* is the number of drops for that data point.

To remove the data for a link from the chart, click the icon in the **SLC** field. To return the data to the chart, click the icon again.

The time between poll data points is specified in the **Poll Interval (secs)** field. The total time displayed in the chart is specified in the **Time Window (mins)** field.

New data points are added to the right side of the chart. When the chart reaches the end of the time window (for example, after 5 minutes, if the **Time Window (mins)** field is set to 5), new data points continue to be added to the right side of the chart, while old data points “drop off” the left side of the chart.

If a poll is missed (for example, as a result of an SNMP timeout), SGM ignores the missing data point, stops drawing the line, and waits for the next valid data point to begin drawing the line again.

To scroll left, right, up, or down in the chart, drag the cursor while holding down **Shift** and the left mouse button.

To zoom in on a section of the chart, drag the cursor while holding down **Ctrl** and the left mouse button.

To reset the chart to the default view and scaling, click **Reset**.

- **SLC**—Displays up to 16 color-coded icons, one for each link (SLC) in the **Drops Chart**. To remove the data for a link from the chart, click the icon in this field. To return the data to the chart, click the icon again.

To superimpose a graphic grid on the chart, which can make the data easier to read, click **Grid On**.

To remove the graphic grid from the chart, click **Grid Off**.

To display online help for the window, click **Help**.

Deleting a Link

After Discovery, the links in your network are known to SGM and added to the SGM database. Physically deleting links from your network is not the same as deleting them from the SGM database. The following sections describe the differences between deleting links from your network and from the SGM database, and the procedures for doing so:

- [Deleting a Link from Your Network, page 3-140](#)
- [Deleting a Link from the SGM Database, page 3-141](#)

Deleting a Link from Your Network

If you physically delete a known link from your network, it remains in the SGM database, and SGM labels it **Unknown**, and it is the system administrator's responsibility to delete it from the SGM database, if you choose to do so. The Link Details pane of the Details window also displays **-1** in the **Xmit Queue** field. SGM labels all associated nodes and linksets **Warning**.

When you redefine the link (that is, when you define a link with the same signaling link code ID [SLC] as the original link), SGM rediscovers the link and labels it with the appropriate status (such as **Active**).

Deleting a Link from the SGM Database

Typically, you delete a link in the SGM database for one of the following reasons:

- You have physically deleted the link from your network. This is the most common reason for deleting a link from the SGM database.
- The link is **Blocked**, **Failed**, or **Unknown**, you are aware of the reason, and you no longer want to see it in SGM displays. For example, the link might be associated with a linkset that was removed from the network, or it might be a previously discovered link associated with a test lab device.

If you have physically deleted a known link from your network, and you then delete it from SGM, it is no longer in the SGM database, it does not appear in SGM windows, and it is not discovered when you run Discovery.

If you have *not* physically deleted a known link from your network, and you delete it from SGM, at the next poll SGM finds the link and adds it back to the SGM database, setting the status appropriately. If this happens, do not delete the link again. Instead, set it to **Ignored**. See the “[Ignoring a Link](#)” section on page 3-142 for more information.



Note

If you delete a link from the SGM database, the link is deleted for *all* SGM clients and views connected to that SGM server.

To delete a link from the SGM database, use one of the following procedures:

- Select a link in the Link Details window ([Figure 3-33](#)), then select **Edit>Delete** from the SGM Main Menu.
- Right-click a link in the Link Details window, then select **Delete Link** from the right-click menu.

SGM asks you to confirm the deletion.

- Select **Yes** to delete the selected link. SGM deletes the link from the SGM database. However, if the link was not physically deleted from your network, then at the next poll SGM finds the link and adds it back to the SGM database, setting the status appropriately.
- Select **No** to return to the Link Details window without deleting the link from the SGM database.

Ignoring a Link

You can instruct SGM to ignore a link when it aggregates and displays network data. Setting links to **Ignored** prevents known link problems from affecting SGM displays for associated linksets and nodes. In effect, you are preventing a known problem from distracting you from other, more urgent network problems.

For example, you can set a link to **Ignored** before shutting down the link for maintenance.

**Note**

If you set a link to **Ignored**, the link is ignored for *all* SGM clients and views connected to that SGM server.

Also, if you set a link to **Ignored**, make a note of the change, and do not forget to reset the link when the problem is corrected or the maintenance is complete.


To set a link to **Ignored**, right-click the link in the Link Details window ([Figure 3-33](#)), then select **Ignore** from the right-click menu.

Viewing Ignored Links

To display all links that are **Ignored**:

-
- Step 1** Select **View > Ignored Items** from the SGM Main Menu. SGM displays the Ignored Items Dialog ([Figure 3-24](#)).
 - Step 2** Click the **Links** tab to display all links that are **Ignored** ([Figure 3-44](#)).

Figure 3-44 Ignored Items Dialog, Showing Ignored Links

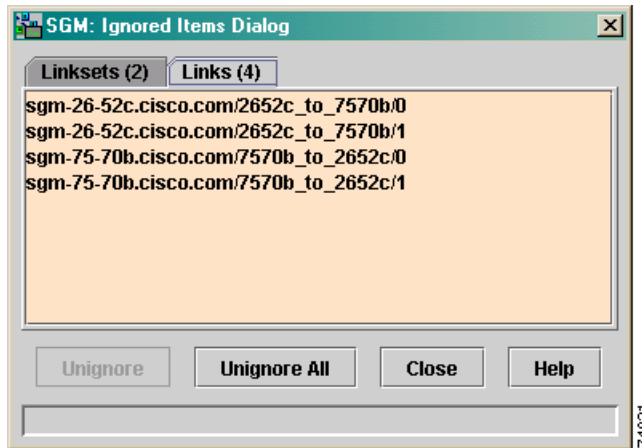

- Step 3** (Optional) To stop ignoring one or more links, select the links, then click **Unignore**.
- Step 4** (Optional) To stop ignoring all links, click **Unignore All**.
-

Working with Events

SGM enables you to view detailed information about all discovered events, including their associated nodes, linksets, links, and other information.

This section includes the following information:

- [Viewing Basic Information for Events, page 3-144](#)
- [Viewing Detailed Information for an Event, page 3-148](#)
- [Setting an Event Filter, page 3-151](#)
- [Editing an Event, page 3-160](#)
- [Viewing Notes for an Event, page 3-161](#)

Related Topics:

- [Modifying the SGM Event Configuration File \(Solaris Only\), page 5-25](#)
- [Modifying Preference Settings, page 5-3](#)
- [Setting Sounds for Events at an SGM Client, page 5-38](#)
- [Viewing the Topology of the Network, page 3-163](#)
- [Working with Links, page 3-111](#)
- [Working with Linksets, page 3-34](#)
- [Working with Nodes, page 3-81](#)

Viewing Basic Information for Events

To view basic information for events, use one of the following procedures:

- To display the Event Window, with events displayed for all nodes, linksets, and links in the current network view, select **View>Events>All** from the SGM Main Menu. SGM displays the Event Window ([Figure 3-45](#)).
- To display the Event Dialog, with events displayed for only the selected nodes, linksets, or links, select one or more nodes, linksets, or links, then select **View>Events>Selected Item** from the SGM Main Menu. SGM displays the Event Window ([Figure 3-45](#)).
- To display the Event Dialog, with events displayed for only a selected node and its associated linksets and links, right-click a node in the Node or Topology Window, then select **View>Events** in the right-click menu. SGM displays the Event Dialog ([Figure 3-45](#)).
- To display the Event Dialog, with events displayed for only a selected linkset and its associated links, right-click a linkset in the Linkset or Topology Window, then select **View>Events** in the right-click menu. SGM displays the Event Dialog ([Figure 3-45](#)).

Figure 3-45 Event Window

Ack	Category	Severity	Time	Message
<input type="checkbox"/>	Status	Normal	10:38:08 11/4/02	Link sgm-26-51b.cisco.com/2651b_to_2651a/b changed state from Failed to Active.
<input type="checkbox"/>	Status	Normal	10:38:08 11/4/02	Linkset sgm-26-51b.cisco.com/2651b_to_2651a changed state from Warning to Active.
<input type="checkbox"/>	Trap	Warning	10:38:01 11/4/02	sgm-26-51b.cisco.com (51bc1li) - Route system/3.10.3/14 became Inaccessible.
<input type="checkbox"/>	Trap	Normal	10:38:01 11/4/02	sgm-26-51b.cisco.com (51bc1li) - Route system/3.10.3/14 became Accessible.
<input type="checkbox"/>	Trap	Warning	10:38:01 11/4/02	sgm-26-51b.cisco.com (51bc1li) - Route system/3.10.3/14 became Inaccessible.
<input type="checkbox"/>	Trap	None	10:38:01 11/4/02	sgm-26-51b.cisco.com (51bc1li) - No route state changes suppressed.
<input type="checkbox"/>	Trap	Warning	10:38:00 11/4/02	sgm-75-59a.cisco.com (traf03) - Route system/3.10.3/14 became Inaccessible.
<input type="checkbox"/>	Trap	Normal	10:38:00 11/4/02	sgm-75-59a.cisco.com (traf03) - Route system/3.10.3/14 became Accessible.
<input type="checkbox"/>	Trap	None	10:38:00 11/4/02	sgm-75-59a.cisco.com (traf03) - No route state changes suppressed.
<input type="checkbox"/>	Status	Error	10:38:00 11/4/02	Link sgm-26-51a.cisco.com/2651a_to_2651b/0 changed state from Unknown to Failed.
<input type="checkbox"/>	Status	Normal	10:38:00 11/4/02	Link sgm-26-51a.cisco.com/2651a_to_2651b/6 changed state from Failed to Active.
<input type="checkbox"/>	Status	Error	10:38:00 11/4/02	Linkset sgm-26-51a.cisco.com/2651a_to_2651b changed state from Unknown to Unavailable.
<input type="checkbox"/>	Status	Normal	10:38:00 11/4/02	Linkset sgm-26-51a.cisco.com/2651a_to_2651b changed state from Warning to Active.
<input type="checkbox"/>	Trap	Warning	10:37:44 11/4/02	sgm-26-51a.cisco.com () - Route system/2.1.2/14 became Inaccessible.
<input type="checkbox"/>	Trap	None	10:37:44 11/4/02	sgm-26-51a.cisco.com () - No route state changes suppressed.
<input type="checkbox"/>	Status	Normal	10:37:43 11/4/02	Link sgm-26-51b.cisco.com/2651b_to_2651a/7 changed state from Failed to Active.
<input type="checkbox"/>	Status	Normal	10:37:43 11/4/02	Link sgm-26-51b.cisco.com/2651b_to_2651a/5 changed state from Failed to Active.
<input type="checkbox"/>	Status	Normal	10:37:43 11/4/02	Link sgm-26-51b.cisco.com/2651b_to_2651a/4 changed state from Failed to Active.
<input type="checkbox"/>	Status	Normal	10:37:43 11/4/02	Link sgm-26-51b.cisco.com/2651b_to_2651a/3 changed state from Failed to Active.
<input type="checkbox"/>	Status	Normal	10:37:43 11/4/02	Link sgm-26-51b.cisco.com/2651b_to_2651a/2 changed state from Failed to Active.
<input type="checkbox"/>	Status	Normal	10:37:43 11/4/02	Link sgm-26-51b.cisco.com/2651b_to_2651a/1 changed state from Failed to Active.
<input type="checkbox"/>	Status	Normal	10:37:43 11/4/02	Link sgm-26-51b.cisco.com/2651b_to_2651a/0 changed state from Failed to Active.
<input type="checkbox"/>	Status	Warning	10:37:43 11/4/02	Linkset sgm-26-51b.cisco.com/2651b_to_2651a changed state from Unavailable to Warning.

3776 Events | View: topo

The Event Window displays information about the events delivered by the SGM event logger and event processor.

Figure 3-46 Event Dialog

Ack	Category	Severity	Time	Message
<input type="checkbox"/>	Status	Normal	12:04:23 11/6/02	Link sgm-26-52a.cisco.com/2652a_to_2652c/7 changed state from Unknown to Active.
<input type="checkbox"/>	Status	Normal	12:04:23 11/6/02	Link sgm-26-52a.cisco.com/2652a_to_2652c/6 changed state from Unknown to Active.
<input type="checkbox"/>	Status	Normal	12:04:23 11/6/02	Link sgm-26-52a.cisco.com/2652a_to_2652c/5 changed state from Unknown to Active.
<input type="checkbox"/>	Status	Normal	12:04:23 11/6/02	Link sgm-26-52a.cisco.com/2652a_to_2652c/4 changed state from Unknown to Active.
<input type="checkbox"/>	Status	Normal	12:04:23 11/6/02	Link sgm-26-52a.cisco.com/2652a_to_2652c/3 changed state from Unknown to Active.
<input type="checkbox"/>	Status	Normal	12:04:23 11/6/02	Link sgm-26-52a.cisco.com/2652a_to_2652c/2 changed state from Unknown to Active.
<input type="checkbox"/>	Status	Normal	12:04:23 11/6/02	Link sgm-26-52a.cisco.com/2652a_to_2652c/1 changed state from Unknown to Active.
<input type="checkbox"/>	Status	Normal	12:04:23 11/6/02	Link sgm-26-52a.cisco.com/2652a_to_2652c/0 changed state from Unknown to Active.
<input type="checkbox"/>	Status	Normal	12:04:23 11/6/02	Linkset sgm-26-52a.cisco.com/2652a_to_2652c changed state from Unavailable to Active.
<input type="checkbox"/>	Status	Normal	12:04:22 11/6/02	Link sgm-26-52c.cisco.com/2652c_to_2652a/7 changed state from Unknown to Active.
<input type="checkbox"/>	Status	Normal	12:04:22 11/6/02	Link sgm-26-52c.cisco.com/2652c_to_2652a/6 changed state from Unknown to Active.
<input type="checkbox"/>	Status	Normal	12:04:22 11/6/02	Link sgm-26-52c.cisco.com/2652c_to_2652a/5 changed state from Unknown to Active.
<input type="checkbox"/>	Status	Normal	12:04:22 11/6/02	Link sgm-26-52c.cisco.com/2652c_to_2652a/4 changed state from Unknown to Active.
<input type="checkbox"/>	Status	Normal	12:04:22 11/6/02	Link sgm-26-52c.cisco.com/2652c_to_2652a/3 changed state from Unknown to Active.
<input type="checkbox"/>	Status	Normal	12:04:22 11/6/02	Link sgm-26-52c.cisco.com/2652c_to_2652a/2 changed state from Unknown to Active.
<input type="checkbox"/>	Status	Normal	12:04:22 11/6/02	Link sgm-26-52c.cisco.com/2652c_to_2652a/1 changed state from Unknown to Active.
<input type="checkbox"/>	Status	Normal	12:04:22 11/6/02	Link sgm-26-52c.cisco.com/2652c_to_2652a/0 changed state from Unknown to Active.

71 Events | Close

The Event Dialog displays information about the events delivered by the SGM event logger and event processor, for only the selected nodes, linksets, and links.

**Note**

You can display more than one Event Window or Dialog at one time. This enables you to view multiple Event Windows and Dialogs at the same time, with different event filtering in each window or dialog.

By default, SGM displays only unacknowledged events in this table. To display acknowledged events in the table, see [Step 7](#) in the “[Modifying Overall Preference Settings](#)” section on page 5-5.

By default, SGM displays all of the columns in the table except **Internal ID**, **Note**, **Ack By**, **Note**, and **Linkset**. To display these columns, or to hide other columns, see the procedures in the “[Modifying Event Table Column Settings](#)” section on page 5-18.

To see mouse over help popup for each column in the table, place the cursor over a column header.

If a cell is too small to show all of its data, place the cursor over the cell to see the full data in a mouse over help popup.

You can resize each column, or sort the table based on the information in one of the columns. See the “[Resizing, Sorting, and Hiding Table Columns](#)” section on page 3-178 for more details.

The Event Window displays the following information for each event:

- **Internal ID**—Internal ID of the event. The internal ID is a unique ID for every event, link, linkset, and node, assigned by SGM for its own internal use. It can also be useful when the TAC is debugging problems.
- **Ack**—Indicates whether the event has been acknowledged:
 - To acknowledge an unacknowledged event, select this checkbox.
 - To make a previously acknowledged event unacknowledged, clear this checkbox.
- **Category**—Type of the event. Default values are:
 - **Create**—Creation event, such as the creation of a seed file.
 - **Delete**—Deletion event, such as the deletion of a node or linkset.
 - **Discover**—Discovery event, such as Discovery beginning.

- **Edit**—Edit event. A user has edited an event, linkset, or node.
- **Ignore**—Ignore event. A user has **Ignored** a link or linkset.
- **Login**—Login event. A user has logged in to SGM.
- **LoginDisable**—LoginDisable event. SGM has disabled a user's User-Based Access authentication as a result of too many failed attempts to log in to SGM.
- **LoginFail**—LoginFail event. An attempt by a user to log in to SGM has failed.
- **OverWrite**—OverWrite event. An existing file, such as a seed file or route file, has been overwritten.
- **Poll**—Poll event, such as an SNMP poll.
- **Purge**—Purge event. A user has requested Discovery with **Delete Existing Data** selected, and SGM has deleted the existing SGM database.
- **Status**—Status change message generated.
- **Trap**—SNMP trap message generated.

You can customize this field. See the [“Modifying the SGM Event Configuration File \(Solaris Only\)”](#) section on page 5-25 for more information.

- **Severity**—Severity of the event. Default values are:
 - **Admin**—The default color is cyan.
 - **Error**—The default color is coral.
 - **None**—The default color is white.
 - **Normal**—The default color is light green.
 - **Warning**—The default color is yellow.

You can customize this field. See the [“Modifying the SGM Event Configuration File \(Solaris Only\)”](#) section on page 5-25 for more information.

- **Note**—Indicates whether there is a note associated with the event.
- **Time**—Date and time the event was logged.
- **Ack By**—Name of the device that last acknowledged the event. If no one has acknowledged the event, this field is blank.


- **Node**—Name of the node associated with the event. If there is no node associated with the event, **None** is displayed.
- **Linkset**—Name of the linkset associated with the event. If there is no linkset associated with the event, **None** is displayed.
- **Message**—Message associated with the event.

You can customize this field. See the “[Modifying the SGM Event Configuration File \(Solaris Only\)](#)” section on page 5-25 for more information.

Viewing Detailed Information for an Event

To view detailed information for an event, double-click an event in the Event Window ([Figure 3-45](#)) or Event Dialog ([Figure 3-45](#)). SGM displays the Event Details dialog ([Figure 3-47](#)).

Figure 3-47 Event Details Dialog

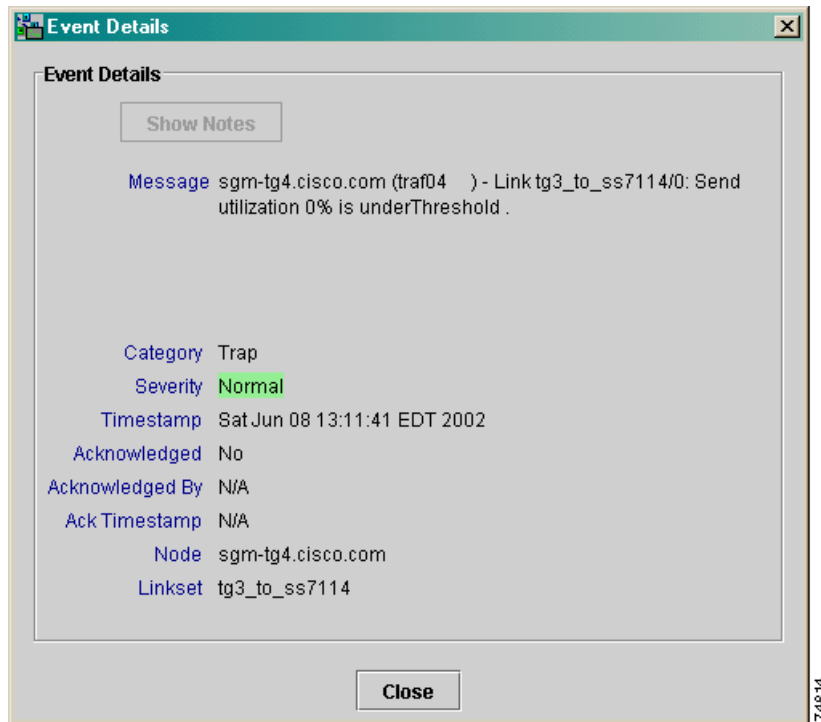

The Event Details dialog displays the following detailed information for the event:

- **Show Notes**—If there are notes associated with this event, click this button to display the Event Notes dialog. If there are no notes associated with this event, this button is grayed-out.
- **Message**—Message text for the event. You can customize this field. See the “[Modifying the SGM Event Configuration File \(Solaris Only\)](#)” section on [page 5-25](#) for more information.
- **Category**—Type of the event. Default values are:
 - **Create**—Creation event, such as the creation of a seed file.
 - **Delete**—Deletion event, such as the deletion of a node or linkset.
 - **Discover**—Discovery event, such as Discovery beginning.

- **Edit**—Edit event. A user has edited an event, linkset, or node.
- **Ignore**—Ignore event. A user has **Ignored** a link or linkset.
- **Login**—Login event. A user has logged in to SGM.
- **LoginDisable**—LoginDisable event. SGM has disabled a user's User-Based Access authentication as a result of too many failed attempts to log in to SGM.
- **LoginFail**—LoginFail event. An attempt by a user to log in to SGM has failed.
- **OverWrite**—OverWrite event. An existing file, such as a seed file or route file, has been overwritten.
- **Poll**—Poll event, such as an SNMP poll.
- **Purge**—Purge event. A user has requested Discovery with **Delete Existing Data** selected, and SGM has deleted the existing SGM database.
- **Status**—Status change message generated.
- **Trap**—SNMP trap message generated.

You can customize this field. See the [“Modifying the SGM Event Configuration File \(Solaris Only\)”](#) section on page 5-25 for more information.

- **Severity**—Severity of the event. Default values are:
 - **Admin**—The default color is cyan.
 - **Error**—The default color is coral.
 - **None**—The default color is white.
 - **Normal**—The default color is light green.
 - **Warning**—The default color is yellow.

You can customize this field. See the [“Modifying the SGM Event Configuration File \(Solaris Only\)”](#) section on page 5-25 for more information.

- **Timestamp**—Date and time the event was logged.
- **Acknowledged**—Indicates whether the event has been acknowledged.
- **Acknowledged By**—Name of the device that last acknowledged the event. If no one has acknowledged the event, this field is blank.

- **Ack Timestamp**—Date and time the event was last acknowledged.
- **Node**—Name of the node associated with the event. If there is no node associated with the event, **None** is displayed.
- **Linkset**—Name of the linkset associated with the event. If there is no linkset associated with the event, **None** is displayed.

Setting an Event Filter

To modify the way SGM presents event information, use the following procedure:

-
- Step 1** Select **Event Tools>Set Filter** from the SGM Main Menu. SGM displays the Event Filter dialog with the **Properties** tab selected ([Figure 3-48](#)).

Figure 3-48 Event Filter Dialog, Showing Event Properties

The screenshot shows the 'Event Filter' dialog box with the 'Properties' tab selected. The dialog is divided into three main sections: Categories, Severities, and Other. Each section contains a list of checkboxes for filtering events. At the bottom, there are buttons for 'Ok', 'Apply', 'Load', 'Save', 'Cancel', and 'Help'. A vertical label '74816' is visible on the right side of the dialog box.

Section	Property	Checked
Categories	Status	Yes
	Trap	Yes
	Create	Yes
	Delete	Yes
	Discover	Yes
	Edit	Yes
	Ignore	Yes
	Login	Yes
	LoginDisable	Yes
LoginFail	Yes	
Other	OverWrite	Yes
	Poll	Yes
	Purge	Yes
Severities	None	Yes
	Normal	Yes
	Admin	Yes
	Warning	Yes
	Error	Yes
Other	Acknowledged	Yes
	Unacknowledged	Yes
	Time Before	No
	Time After	No
	Message Contains	No
	Match Case	No

**Note**

The more complex the filter, the longer it takes to apply to events. This is especially true of filters that check unique data in an event, such as **Message Text** and **Match Case**.

- Step 2** (Optional) To specify which event categories you want to display in the Event Window, select the **Properties** tab and modify the following settings:
- **Status**—Checkbox used to indicate whether Status events are to be displayed in the Event Window. The default setting for this checkbox is selected.
 - **Edit**—Checkbox used to indicate whether Edit events are to be displayed in the Event Window. The default setting for this checkbox is selected.
 - **OverWrite**—Checkbox used to indicate whether OverWrite events are to be displayed in the Event Window. The default setting for this checkbox is selected.
 - **Trap**—Checkbox used to indicate whether Trap events are to be displayed in the Event Window. The default setting for this checkbox is selected.
 - **Ignore**—Checkbox used to indicate whether Ignore events are to be displayed in the Event Window. The default setting for this checkbox is selected.
 - **Poll**—Checkbox used to indicate whether Poll events are to be displayed in the Event Window. The default setting for this checkbox is selected.
 - **Create**—Checkbox used to indicate whether Create events are to be displayed in the Event Window. The default setting for this checkbox is selected.
 - **Login**—Checkbox used to indicate whether Login events are to be displayed in the Event Window. The default setting for this checkbox is selected.
 - **Purge**—Checkbox used to indicate whether Purge events are to be displayed in the Event Window. The default setting for this checkbox is selected.
 - **Delete**—Checkbox used to indicate whether Delete events are to be displayed in the Event Window. The default setting for this checkbox is selected.
 - **LoginDisable**—Checkbox used to indicate whether LoginDisable events are to be displayed in the Event Window. The default setting for this checkbox is selected.
 - **Discover**—Checkbox used to indicate whether Discover events are to be displayed in the Event Window. The default setting for this checkbox is selected.
 - **LoginFail**—Checkbox used to indicate whether LoginFail events are to be displayed in the Event Window. The default setting for this checkbox is selected.

To select all event category checkboxes, click **Select All**.

To clear all event category checkboxes, click **Deselect All**.



Note These are the default categories; there might be additional categories, as defined by the SGM system administrator. For information about custom categories, see the [“Modifying the SGM Event Configuration File \(Solaris Only\)”](#) section on page 5-25.

Step 3 (Optional) To specify which event severities you want to display in the Event Window, select the **Properties** tab and modify the following settings:

- **None**—Checkbox used to indicate whether events of severity None are to be displayed in the Event Window. The default setting for this checkbox is selected.
- **Normal**—Checkbox used to indicate whether events of severity Normal are to be displayed in the Event Window. The default setting for this checkbox is selected.
- **Admin**—Checkbox used to indicate whether events of severity Admin are to be displayed in the Event Window. The default setting for this checkbox is selected.
- **Warning**—Checkbox used to indicate whether events of severity Warning are to be displayed in the Event Window. The default setting for this checkbox is selected.
- **Error**—Checkbox used to indicate whether events of severity Error are to be displayed in the Event Window. The default setting for this checkbox is selected.




Note There might be additional custom severities, as defined by your SGM System Administrator. For information, see the [“Modifying the SGM Event Configuration File \(Solaris Only\)”](#) section on page 5-25.

- Step 4** (Optional) To further define the event filter for the Event Window, select the **Properties** tab and modify the following settings:
- **Acknowledged**—Checkbox used to indicate whether only acknowledged events are to be displayed in the Event Window. The default setting for this checkbox is cleared.
 - **Unacknowledged**—Checkbox used to indicate whether only unacknowledged events are to be displayed in the Event Window. The default setting for this checkbox is selected.
 - **Time Before**—Checkbox used to indicate whether only events logged by SGM prior to a specified date and time are to be displayed in the Event Window. The default setting for this checkbox is cleared.
 - **Time Before Field**—Specifies the date and time prior to which events logged by SGM are to be displayed in the Event Window. This field is grayed-out unless the **Time Before** checkbox is selected. If the **Time Before** checkbox is selected, the default setting for this field is the date and time of the most recent event logged by SGM.
 - **Time After**—Checkbox used to indicate whether only events logged by SGM after a specified date and time are to be displayed in the Event Window. The default setting for this checkbox is cleared.
 - **Time After Field**—Specifies the date and time after which events logged by SGM are to be displayed in the Event Window. This field is grayed-out unless the **Time After** checkbox is selected. If the **Time After** checkbox is selected, the default setting for this field is the date and time of the earliest event logged by SGM.
 - **Message Contains**—Checkbox used to indicate whether only events that contain the specified message text are to be displayed in the Event Window. The default setting for this checkbox is cleared.
 - **Match Case**—Checkbox used to indicate whether only events that match the case of the text in the **Message Text** field are to be displayed in the Event Window. This field is grayed-out unless the **Message Contains** checkbox is selected. If the **Message Contains** checkbox is selected, the default setting for this checkbox is cleared.

- Step 5** (Optional) To specify the nodes for which SGM is to display events in the Event Window, select the **Source Nodes** tab. SGM displays the Event Filter dialog with the **Source Nodes** tab highlighted (Figure 3-49).

Figure 3-49 Event Filter Dialog, Showing Event Source Nodes

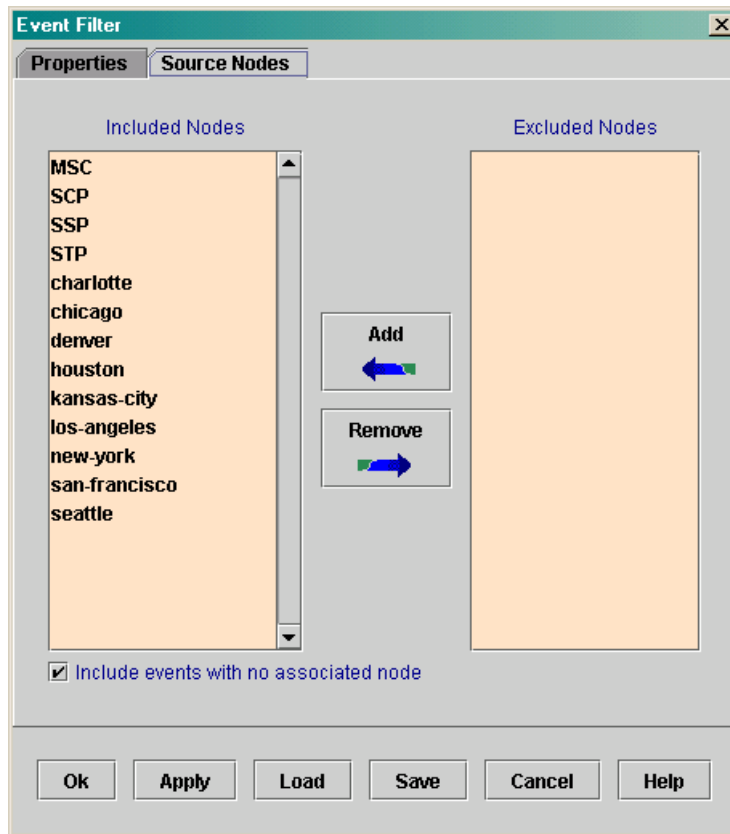

74815

You can modify the following settings:

- **Included Nodes**—Indicates the nodes for which events are to be displayed in the Event Window. By default, this table includes all nodes in the current network view.

To remove events for one or more nodes from the Event Window, select the nodes in this list and click **Remove**. The selected nodes are moved to the **Excluded Nodes** list.


- **Excluded Nodes**—Indicates the nodes for which events are *not* to be displayed in the Event Window. By default, this table contains no nodes.

To add events for one or more nodes to the Event Window, select the nodes in this list and click **Add**. The selected nodes are moved to the **Included Nodes** list.

- To display events that are not associated with any node in the Event Window, select the **Include events with no associated node** checkbox.

Step 6 (Optional) To load an existing event filter, click **Load** in the Event Filter dialog. SGM displays the Load File Dialog - Load Filter dialog (Figure 3-50).

Figure 3-50 Load File Dialog - Load Filter Dialog

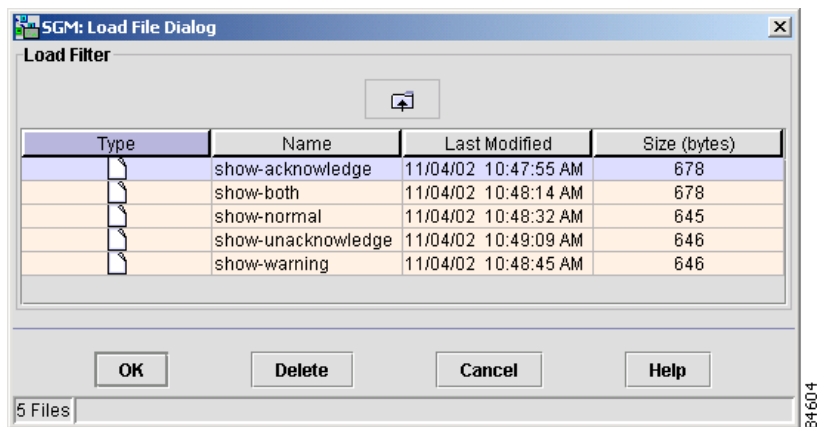

The Load File Dialog - Load Filter dialog contains the following fields:

- **Type**—Icon indicating whether the item in the table is a file or a folder.
- **Name**—Name of the event filter file or folder.

- **Last Modified**—Date and time the event filter file or folder was last modified.
- **Size (bytes)**—Size of the event filter file or folder, in bytes.
- **Number of Files**—Total number of event filter files and folders (displayed in bottom left corner).

To load an event filter file, enter the name of the file or select it in the list and click **OK**. SGM loads the event filter file, closes the Load File Dialog - Load Filter dialog, and returns to the Event Filter dialog.


To delete an event filter file from the event filter file list, select a file and click **Delete**. SGM issues an informational message containing the name and location of the deleted file.

To save any changes you made to the list of files, click **OK**. SGM saves the changes and closes the Load File Dialog - Load Filter dialog.

To close the Load File Dialog - Load Filter dialog without loading an event filter file or saving any changes to the event filter file list, click **Cancel**.

- Step 7** (Optional) To apply any changes you made to the event filter without closing the Event Filter dialog, click **Apply**.
- Step 8** (Optional) To close the Event Filter dialog without saving any changes to the event filter file or event filter file list, click **Cancel**.
- Step 9** When you are satisfied with the filter settings, click **Save**. SGM displays the Save File Dialog - Save Filter dialog ([Figure 3-51](#)).

Figure 3-51 Save File Dialog - Save Filter Dialog

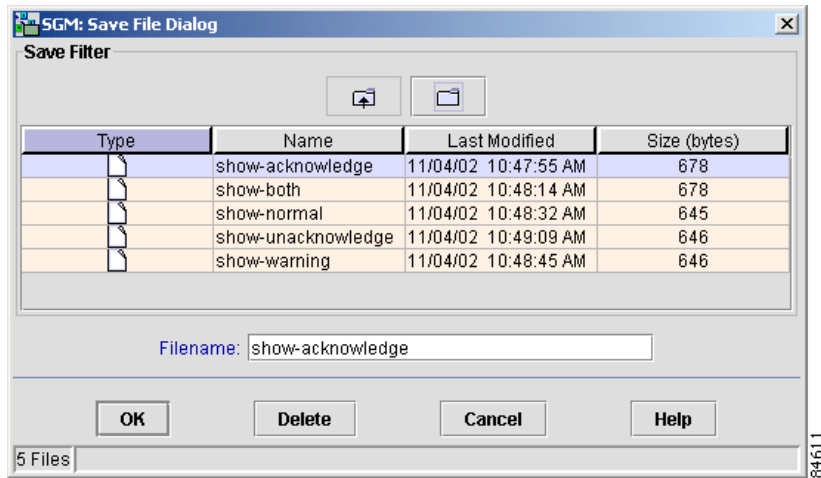

The Save File Dialog - Save Filter dialog contains the following fields:

- **Type**—Icon indicating whether the item in the table is a file or a folder.
- **Name**—Name of the event filter file or folder.
- **Last Modified**—Date and time the event filter file or folder was last modified.
- **Size (bytes)**—Size of the event filter file or folder, in bytes.
- **Filename**—Name by which you want to save the event filter file.

If you create a new event filter file name, you can use any letters, numbers, or characters in the name that are allowed by your operating system.

- **Number of Files**—Total number of event filter files and folders (displayed in bottom left corner).

To save the event filter file with a new name, use one of the following procedures:

- To save the file with a completely new name, enter the new name and click **OK**.
- To save the file with an existing name, overwriting an old event filter file, select the name in the list and click **OK**.

SGM saves the event filter file with the new name, closes the Save File Dialog - Save Filter dialog, and returns to the Event Filter dialog.

To delete an event filter file from the event filter file list, select a file and click **Delete**. SGM issues an informational message containing the name and location of the deleted file.

To save any changes you made to the list of files, click **OK**. SGM saves the changes and closes the Load File Dialog - Save Filter dialog.

To close the Save File Dialog - Save Filter dialog without saving the event filter file or saving any changes to the event filter file list, click **Cancel**.


Editing an Event

SGM enables you to annotate an event, attaching a descriptive string to the event.

To annotate an event, use one of the following procedures:

- Select an event in a window and select **Edit>Selected Item** in the SGM Main Menu.
- Right-click an event in the Event Window, then select **Edit Event** in the right-click menu.

SGM displays the Edit Event Dialog ([Figure 3-52](#)).

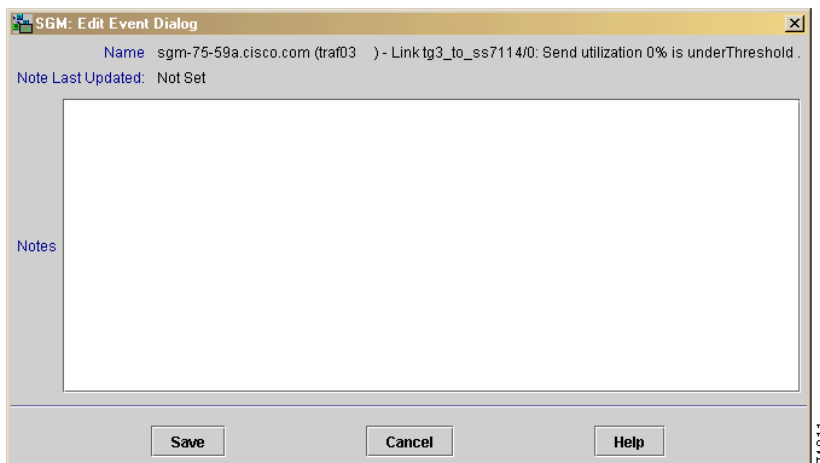Figure 3-52 Edit Event Dialog

The Edit Event Dialog displays the name of the event and the date and time the **Notes** field for the event was last updated. If there is no note currently associated with the event, the **Note Last Updated** field displays the value **Not Set**.

In the **Notes** field, enter any important information about the event, such as its associated node or linkset, what triggered the event, how often it has occurred, and so on.

Click **Save** to save the annotations and exit the Edit Event Dialog.


Viewing Notes for an Event

SGM enables you to view the notes that have been attached to events.

To view a note, use one of the following procedures:

- Select an event in a window, then select **View>Notes** from the SGM Main Menu.
- Right-click an event in the Event Window, then select **View>Notes** in the right-click menu.

If the event has an attached note, SGM displays the Event Notes dialog (Figure 3-53). (If the event does not have an attached note, SGM displays the message, “The event does not have any notes.”)

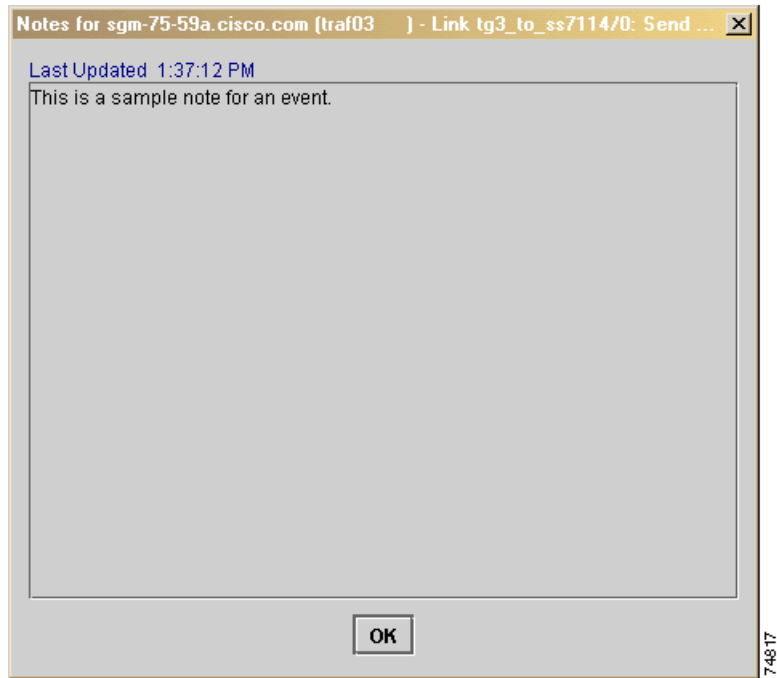Figure 3-53 Event Notes Dialog

The Event Notes dialog displays the following information:

- **Name**—Name of the event.
- **Note Last Updated**—Date and time the **Notes** field for the event was last updated.
- **Notes**—Notes associated with the event.

Click **OK** to close the Event Notes dialog.

Viewing the Topology of the Network

In addition to tabular (text) views of your network, SGM provides a topology (graphical) view of the ITP nodes and linksets in your network, including adjacent legacy SS7 devices, and enables you to customize the view to meet your needs.

Related Topics:

- [Modifying Preference Settings, page 5-3](#)
- [Working with Links, page 3-111](#)
- [Working with Linksets, page 3-34](#)
- [Working with Nodes, page 3-81](#)
- [Working with Views, page 3-23](#)

To view the topology of your network:


Step 1

Use one of the following procedures:

- Select **View > Topology > Overview** from the SGM Main Menu.
- Select a node, linkset, or event and select **View > Topology > Zoomed** from the SGM Main Menu.
- Right-click a node, linkset, or event, then select **View > Zoomed Topo** in the right-click menu.

SGM displays the Topology window ([Figure 3-54](#)).

Figure 3-54 Topology Window

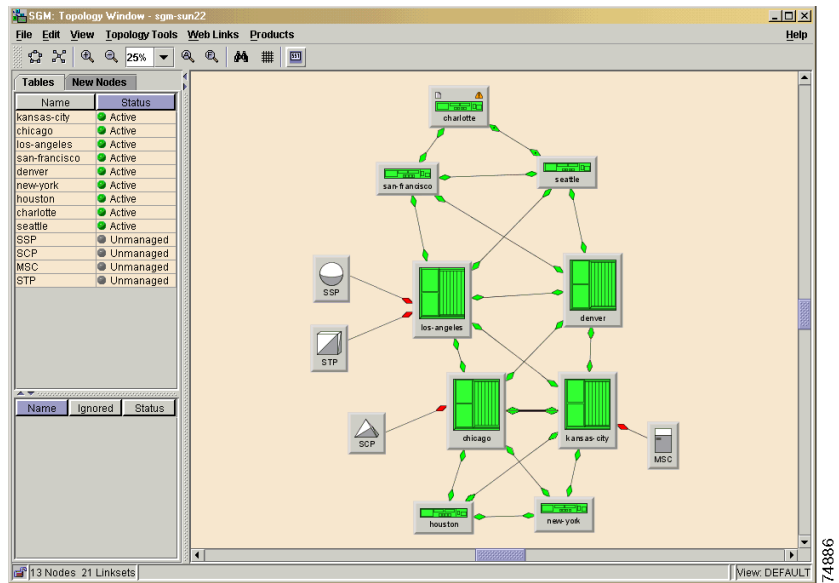

The Topology Window displays tabular information about nodes and linksets in the left pane and the graphical topology map in the right pane.

SGM automatically assigns the following node elements:

- Cisco 2651 series router
- Cisco 7202 series router
- Cisco 7204VXR series router
- Cisco 7206VXR series router
- Cisco 7507 series router
- Cisco 7513 series router
- IP device, other than Cisco 2651, 7202, 7204VXR, 7206VXR, 7507, or 7513 series router (if assigned by a user; see the “Editing a Node” section on page 3-99 for more details)
- SS7—SGM is unable to determine the node type.

In addition, users can assign the following node elements (see the [“Editing a Node” section on page 3-99](#) for more details):

- MSC—Mobile switching center
- SCP—Service control point
- SSP—Service switching point
- STP—Signal transfer point

A line indicates a single logical connection configured between two nodes:

- A line that ends in a diamond indicates that the connection has a configured linkset, associated with that node.
- A line that does not end in a diamond indicates that the linkset does not exist or cannot be displayed because SGM cannot manage that node.
- A heavy line that ends in a split diamond indicates that there are two linksets configured between two nodes.
- A heavy line that ends in a half diamond indicates that there are two linksets configured on one node and one linkset configured on the other (the node with the half diamond).

The color of a graphical element indicates its current status.

- For nodes, the possible colors are:
 - **Green**—The node is currently in **Active** status.
 - **Yellow**—The node is currently in **Warning** status.
 - **Gray**—The node is currently in **Discovering, Polling, Unmanaged, or Waiting** status.
 - **Red**—The node is currently in **Unknown** status.
- For linksets (diamonds), the possible colors are:
 - **Green**—The linkset is in **Active** status.
 - **Blue**—The linkset is in **Shutdown** status.
 - **Yellow**—The linkset is in **Warning** status.
 - **Red**—The linkset is in either **Unavailable** or **Unknown** status.

A split diamond with half one color and half another indicates that there are two linksets configured between the nodes, and each linkset has a different status. For example, a diamond that is half green and half yellow indicates that there is one linkset in **Active** status and one in **Warning** status.

A half diamond indicates that there are two linksets configured on one node and one linkset configured on the other (the node with the half diamond).

A note icon in the upper left corner of a node element means the node has been annotated. That is, a user has attached a descriptive string to the node. A dot in the diamond at the end of the line means the linkset has been annotated.

An event icon (orange triangle) in the upper right corner of a node element means there is a recent event associated with the node.

- Step 2** The topology node table in the left pane of the Topology window displays the name and status of the nodes that are currently displayed in the topology map. To display the topology node table, select the **Tables** tab in the left pane.
- Step 3** The topology linkset table in the left pane of the Topology window displays the name and status of the linksets that are displayed in the topology map.
- Step 4** (Optional) In the topology linkset table, you can select the **Ignored** checkbox to ignore a linkset when displaying SGM data, or clear the checkbox to include the linkset. To display the topology linkset table, select the **Tables** tab in the left pane, then select a node in the topology node table or in the topology map. The topology linkset table is displayed below the topology node table. For more information, see the [“Ignoring a Linkset” section on page 3-79](#).

- Step 5** (Optional) To highlight an element in the topology node table or topology linkset table in the left pane, click it in the topology map:
- Click a node to highlight the node in the topology node table, and to display any associated linksets in the topology linkset table.
 - Click a single line, a heavy line, or a diamond, to display the following information:
 - Highlight the closest associated node in the topology node table. For example, if there is a line connecting node **sgm-2600a** and node **sgm-2600b**, and you click the line closer to node **sgm-2600a**, then that node is highlighted in the topology node table.
 - Display all linksets (if any) associated with that node in the topology linkset table.
 - Highlight the clicked linkset (if it is configured) in the topology linkset table.
- Step 6** To see mouse over help popup in the topology map, place the cursor over a node or linkset. When you place the cursor over a linkset, the mouse over help popup is displayed from the perspective of the closest node.



Note You can turn off mouse over help. For details, see [Step 5](#) in the “[Modifying Overall Preference Settings](#)” section on page 5-5.

- Step 7** (Optional) To make the topology map twice as large, click the **Zoom the map by a factor of 200%** button, or select **Topology Tools>Zoom>In** from the SGM Main Menu.
- Step 8** (Optional) To make the topology map half as large, click the **Zoom the map by a factor of 50%** button, or select **Topology Tools>Zoom>Out** from the SGM Main Menu.
- Step 9** (Optional) To zoom the topology map by a selected percentage, click the **Select a map viewing factor** button, then either select a percentage from the drop-down list box, or enter a percentage and click **Enter**. Valid values are integers in the range 5 through 400.
- Step 10** (Optional) To zoom in on a selected area of the topology map, click in the map, then click the **Zoom in on an area** button, or select **Topology Tools>Zoom>Area** from the SGM Main Menu.

- Step 11** (Optional) To adjust the size of the topology map to fit in the window, click the **Zoom to fit window** button, or select **Topology Tools>Zoom>Fit** from the SGM Main Menu. This is the default setting the first time the map is displayed.
- Step 12** (Optional) To display the topology map in a circular layout, click the **Circular layout** button, or select **Topology Tools>Layout>Circular** from the SGM Main Menu.
- Step 13** (Optional) To display the topology map in a spring layout, click the **Spring layout** button, or select **Topology Tools>Layout>Spring**. In a spring layout, nodes with the most links are drawn closer to the center of the map, while nodes with fewer links are drawn farther away. This is the default setting the first time the map is displayed.



Note You can modify how far apart nodes are spaced when SGM draws the spring layout. For details, see [Step 5](#) in the “[Modifying Overall Preference Settings](#)” section on page 5-5.

- Step 14** (Optional) To create a custom layout for the topology map, move the nodes around, grouping them or isolating them to meet your needs.

To move a single node, click the left mouse button to select the node in the map and, while holding down the left mouse button, move the mouse to move the node to its new position.

To move more than one node at the same time, use the following procedure:

- a. Press and hold down the **Shift** key on your keyboard.
- b. Still holding down **Shift**, click the left mouse button to select the nodes you want to move in the map.
- c. Still holding down **Shift**, select one of the nodes you want to move and hold down the left mouse button.
- d. Still holding down both **Shift** and the left mouse button, move the mouse to move the nodes to their new position. The moved nodes keep their positions relative to each other.
- e. Release both **Shift** and the left mouse button.

When you are satisfied with the new topology map layout, select **File>Save View** from the SGM Main Menu. SGM saves the changes you have made to the network view, including any changes you have made to the topology map layout.

Step 15 (Optional) To restore the topology map to the way it looked in the last saved view, select **Topology Tools > Restore Positions** from the SGM Main Menu. SGM restores the view.

Step 16 (Optional) Some topology maps are so large and complex that it can be difficult to find a specific node or linkset.

If the node or linkset is listed in the tables in the left pane of the Topology Window, simply select the node or linkset, and SGM highlights it in the topology map.

If the node or linkset is *not* listed in the tables, use the following procedure:

- a. Click the **Find nodes or linksets** (binoculars) button in the Topology Window, or select **Edit > Find** from the SGM Main Menu. SGM displays the Find Nodes or Linksets dialog.
- b. In the **Search string** field, enter a character string for which SGM is to search.
- c. To search for a linkset, select the **Linksets** checkbox. To search for a node, select the **Nodes** checkbox, then select or clear the **Name**, **IP Address**, and **Point Code** checkboxes, to further widen or refine the search.
- d. Click **Search** to launch the search.

If no matching node or linkset is found, SGM displays an appropriate message.

If exactly one node or linkset is found that matches the **Search string**, SGM highlights the node or linkset in the Tables panel of the Topology window, and zooms in on the selected node or linkset in the topology map.

If more than one node or linkset is found that matches the **Search string**, SGM displays the Choose dialog, enabling you to select from a list of the found objects. SGM then highlights the selected node or linkset in the Tables panel of the Topology window, and zooms in on the selected node or linkset in the topology map.

Step 17 (Optional) To scroll around in the topology map, click anywhere in the map, then click the arrow, **Page Up**, and **Page Down** keys.


Step 18 (Optional) To redraw the topology map centered on a specific node or linkset, double-click on the node or linkset in the topology node table in the left pane of the window.

- Step 19** (Optional) To display detailed information about an element in the map, double-click it, then respond to SGM's prompts:
- Double-click a node to display the Node Details pane for that node. If more than one linkset is associated with the node, SGM asks you to select one of the linksets. (SGM also gives you the option of disabling the linkset-selection function.)
 - Double-click a single line, or a diamond at the end of a single line, to display the Linkset Details pane for that linkset.
 - Double-click a heavy line, or a diamond at the end of a heavy line, and select a linkset to display the Linkset Details pane for that linkset. (SGM also gives you the option of disabling the linkset-selection function.)
- Step 20** (Optional) To display the topology new nodes panel, select the **New Nodes** tab in the left pane. The topology new nodes panel displays graphical elements for newly discovered nodes, based on the following criteria:
- If you are using an SGM client with the DEFAULT view set, this panel never contains any nodes. In the DEFAULT view, SGM adds all newly discovered nodes to the topology map as soon as they are discovered.
 - If you are using an SGM client with a custom view set, this panel contains all nodes discovered since the Topology window was opened in this session that have *not* been excluded in the Nodes Not In Current View pane of the Network View Editor window.
- a. (Optional) To add a newly discovered node to the topology map, select the node in the topology new nodes panel and drag it to the map while holding down the left mouse button.
 - b. (Optional) To exclude a newly discovered node from the topology new nodes panel, see the [“Working with Views” section on page 3-23](#).
- Step 21** (Optional) To display the topology excluded nodes panel, select the **Excluded Nodes** tab in the left pane. The topology new nodes panel displays graphical elements for excluded nodes. Excluded nodes are nodes that you have chosen not to manage, that you have moved to the Nodes Not In Current View pane of the Network View Editor window. (See the [“Creating a View” section on page 3-25](#) for more information about excluding nodes from views.)

To add an excluded node to the topology map, select the node and drag it to the map while holding down the left mouse button. When you do so, the node is no longer an excluded node, and it is removed from the Nodes Not In Current View pane of the Network View Editor window.

- Step 22** (Optional) To print the topology map, see the “[Printing SGM Windows](#)” section on page 3-283.
- Step 23** (Optional) To save the topology map as a JPEG file, select **Topology Tools>Save as JPEG** from the SGM Main Menu. SGM displays the Save as JPEG dialog (Figure 3-55).

Figure 3-55 Save as JPEG Dialog

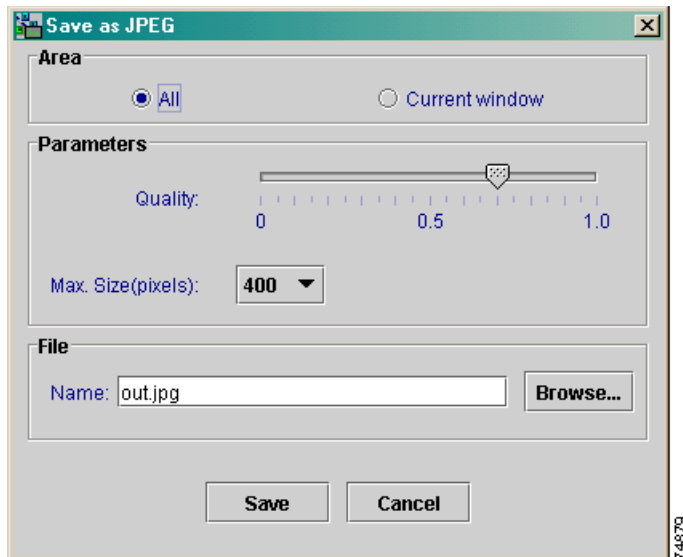

The Save as JPEG dialog provides the following options:

- To save the entire topology map as a JPEG file, select **All**.
- To save just the portion of the topology map displayed in the current window as a JPEG file, select **Current Window**.
- To specify the quality of the JPEG file, select a **Quality** level, from 0 (lowest quality) to 1.0 (highest quality). The default setting is 0.7, which is sufficient for most JPEG files.
- To specify the size of the JPEG file, in pixels, choose a value from the **Max. Size** drop-down list box. The valid range is 400 pixels to 2400 pixels. The default value is 400 pixels, which is sufficient for most JPEG files.

- To specify a name for the JPEG file, enter the name in the **Name** field, or accept the default filename, *out.jpg*.


The default directory for the JPEG file is the directory in which you installed the SGM client:

- In Solaris, the default installation directory for the SGM client is */opt/CSCOSgmClient*.
- In Windows, the default installation directory for the SGM client is *C:\Program Files\SGMClient*.
- If you installed the SGM client in a different directory, then the installation directory is located in that directory.

To save the JPEG file in the default directory, click **Save**. SGM saves the JPEG file and closes the Save as JPEG dialog. Continue with [Step 24](#).

If you do not want to save the JPEG file to the default directory, click **Browse** to select a different directory. SGM displays the Save dialog for a topology map ([Figure 3-56](#)).

Figure 3-56 Save Dialog for a Topology Map

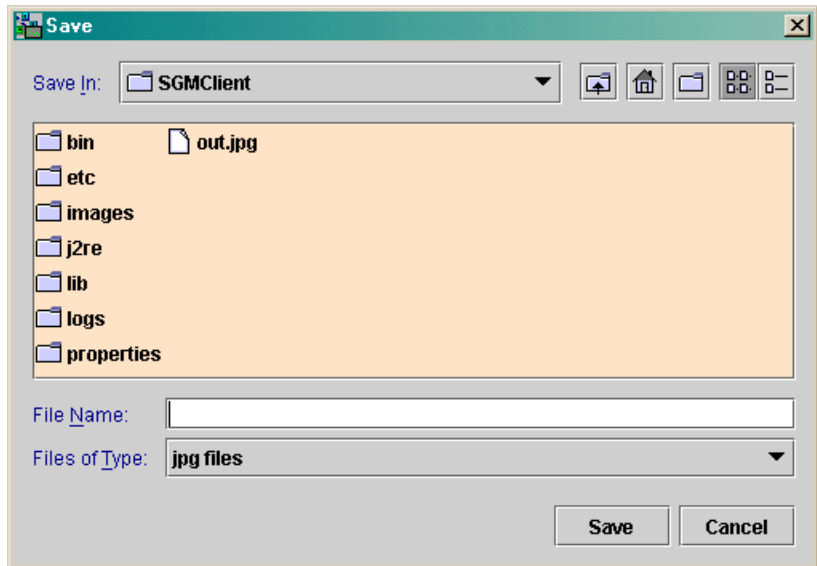

The Save dialog for a topology map provides the following options:

- To select the directory in which you want to save the topology map JPEG file, either accept the default directory displayed in the **Save In** field, or select a new directory from the drop-down list box.
- To display the sub-folders and files that are in the folder that is up one level from the currently displayed folder, click the **Up One Level** button.
- To display the sub-folders and files that are on your workstation desktop, click the **Desktop** button.
- To create a new sub-folder in the displayed folder, click the **Create New Folder** button.
- To display only icons for sub-folders and files, click the **List** button.
- To display detailed information for sub-folders and files, including their size, type, date they were last modified, and so on, click the **Details** button.
- To specify a name for the JPEG file, enter the name in the **File Name** field, or select a file from those listed in the **Save In** field.
- To specify the type of file to save, and to display all files of that type in the selected directory, select a file type from the **Files of Type** drop-down list box:
 - **All files**—Displays all files in the selected directory, and saves the topology map file as a JPEG file.
 - **jpg files**—Displays only JPEG files in the selected directory, and saves the topology map file as a JPEG file.


When you are satisfied with the settings, click **Save**. SGM closes the Save dialog for a topology map and populates the **Name** field in the Save as JPEG dialog with the new name and directory.

To save the JPEG file in the new directory, click **Save**. SGM saves the JPEG file and closes the Save as JPEG dialog.

- Step 24** (Optional) You can activate a magnetic grid on the topology map. With the grid activated, objects “snap” to align with the grid when you move them.

To activate or modify the magnetic topology grid, select **Topology Tools > Magnetic Grid** from the SGM Main Menu. SGM displays the Magnetic Grid Settings dialog ([Figure 3-57](#)).


Figure 3-57 Magnetic Grid Settings Dialog

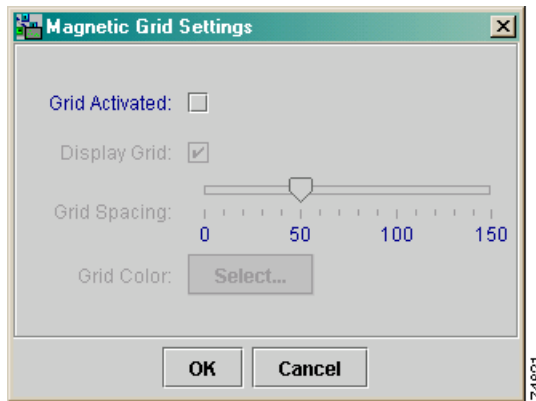

The Magnetic Grid Settings dialog provides the following options:

- To activate the grid, select the **Grid Activated** checkbox.
To deactivate the grid, clear the **Grid Activated** checkbox.
- To display the grid on the topology map, select the **Grid Activated** checkbox, then select the **Display Grid** checkbox.
To hide the grid on the topology map, clear the **Display Grid** checkbox.
- To specify the spacing between lines on the grid, in pixels, select the **Grid Activated** checkbox, then select a **Grid Spacing** level. The valid range is 0 pixels to 150 pixels. The default setting is 50 pixels, which is sufficient for most topology maps.
- To specify a color for the grid, select the **Grid Activated** checkbox, then click **Select** in the **Grid Color** field. SGM opens the Pick Grid Color dialog (Figure 3-58).

Figure 3-58 Pick Grid Color Dialog

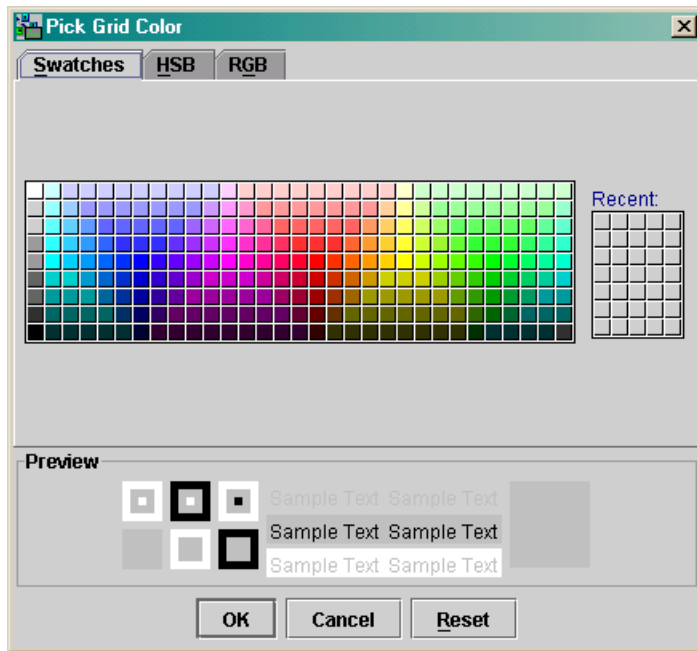

The Pick Grid Color dialog provides the following options:

- To select a grid color from a set of color swatches (the recommended method), click the **Swatches** tab and select a swatch.
- To select a grid color based on color hue, saturation, and brightness (HSB), click the **HSB** tab, then use one of the following procedures:
 - Select a color range on the vertical color bar, then select a specific color by moving the cursor around on the color square.
 - Enter specific values in the hue (**H**), saturation (**S**), and brightness (**B**) fields.

- To select a grid color based on the red, green, and blue (RGB) content of the color, click the **RGB** tab, then select values for the **Red**, **Green**, and **Blue** fields.
- To reset the grid color to its initial setting, click **Reset**.

Whichever method you choose, the selected color is displayed in the **Preview** field. When you are satisfied with the color, click **OK**. SGM saves the grid color setting and closes the Pick Grid Color dialog.

When you are satisfied with the magnetic grid settings, click **OK**. SGM saves the new grid settings and closes the Magnetic Grid Settings dialog



Note Magnetic grid settings, including the grid color, are *not* saved when you save the view.

To close the Magnetic Grid Settings dialog without changing any settings, click **Cancel**.

Step 25 (Optional) To hide all non-ITP nodes and linksets on the topology map, click the **Hide/Show Non-ITP Devices** button. (The hidden nodes and linksets are still shown in the left panel.) To display all hidden nodes and linksets on the topology map, click the **Hide/Show Non-ITP Devices** button again. This setting, with non-ITP nodes and linksets either hidden or shown, is saved when you save the view.

Step 26 When you are ready to close the Topology Window, select **File>Save View** from the SGM Main Menu. SGM prompts you to save any changes you made to the network view, including any changes you have made to the topology map layout, and closes the window.

Finding Information in a Window

Sometimes it can be difficult to find a specific piece of information, such as a node name or event text, in a window. SGM enables you to search for a character string in the Node, Linkset, and Event Windows.

**Note**

To find a specific node or linkset in the Topology Window, see [Step 16](#) in the “Viewing the Topology of the Network” section on page 3-163.


Related Topics:

- [Working with Events, page 3-143](#)
- [Working with Linksets, page 3-34](#)
- [Working with Nodes, page 3-81](#)

To find a character string in a window:

- Step 1** In the Node, Linkset, or Event Window, select **Edit>Find** from the SGM Main Menu. SGM displays the Find dialog ([Figure 3-59](#)).

Figure 3-59 Find Dialog

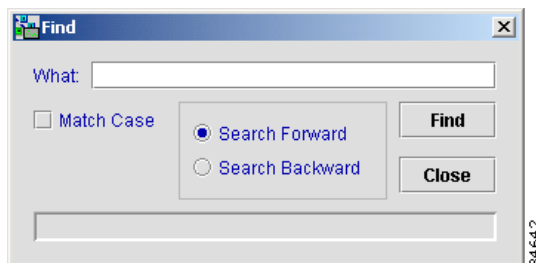

- Step 2** In the **What** field, enter the character string for which you want SGM to search. This can be any character string: all or part of a node name, linkset name, point code, event text, status, and so on.
- Step 3** (Optional) If you want SGM to search for only character strings that match the case of the text in the **What** field, select the **Match Case** checkbox. If you do not care about case-matching, clear the checkbox. (This is the default setting.)

- Step 4** (Optional) If you want SGM to search forward (down and to the right) in the window, select the **Search Forward** radio button. This is the default setting.
- If you want SGM to search backward (up and to the left) in the window, select the **Search Backward** radio button.
- The **Search Forward** and **Search Backward** radio buttons are mutually exclusive.
- Step 5** Click **Find**. SGM launches the search:
- If a matching character string is found in the window, SGM highlights the first line that contains the string.
- To find the next occurrence of the string, click **Find** again.
- You can continue to click **Find** until there are no more matches in the window. At that time, SGM displays an appropriate message in the dialog, such as **Bottom of table reached**.
- If no matching character string is found, SGM displays an appropriate message in the dialog, such as **Bottom of table reached**.
- Step 6** When you are done searching, click **Close**. SGM closes the Find dialog.
-

Resizing, Sorting, and Hiding Table Columns

The columns in some tables in SGM can be resized, sorted, or hidden to meet your specific needs.

- To make a column wider or narrower, click the column divider in the header and move the divider to the right or left while holding down the left or right mouse button.

Depending on your system, as well as other factors, SGM windows can sometimes display so small that text is illegible, and columns and text entry fields are very narrow and unusable. If this happens, resize the window and widen the individual columns until the information is again legible and the columns and text entry fields are usable.

- To sort a table based on the data in a column, left-click in the column header. The table is sorted alphanumerically from top to bottom, based on the data in the selected column. To sort the table in reverse order, left-click in the column

header a second time. If two entries in the selected column are identical, SGM sorts those rows based on the data in the remaining table columns, moving left to right.

- To sort a route table, click **Sort Table**. SGM sorts the entries in the route table field-by-field, beginning with **Dest. Point Code**, then **Mask**, **Cost**, **Dest.Linkset**, and finally **QoS**.
- To delete a column altogether, see the “[Modifying Preference Settings](#)” section on page 5-3.

Related Topics:

- [Viewing the Topology of the Network](#), page 3-163
- [Working with Links](#), page 3-111
- [Working with Linksets](#), page 3-34
- [Working with Nodes](#), page 3-81

Viewing Online Help

SGM provides the following online help options in the SGM Main Menu:

- To display the table of contents for the SGM online help in a Web browser, select **Help>Topics**.
- To display online help for the current window in a Web browser, click **Help>Window**.
- To display build date, version, SSL support, and copyright information about the SGM application in a Web browser, click **Help>About**.

Related Topics:

- [Viewing the SGM Technical Documentation](#), page 7-81

Editing an ITP Route Table File


ITP uses a route table to select the appropriate signaling path for each message, or signal unit, that it must forward. The route table provides the destination point code of the packet and the linkset name that can be used to forward the packet.

SGM enables you to edit ITP route table files for a router.

To edit a route table file using SGM:

-
- Step 1** Open the route table file, using one of the following procedures:
- To open a route table file from a file, select **Edit>Route Table>From File** from the SGM Main Menu, select the name of a route table file, then click **OK**.
- If the selected route table file contains incorrect linkset entries (for example, if your network configuration changed since the last time the route table file was saved), SGM displays the Replace Linkset Dialog (Figure 3-59).

Figure 3-60 Replace Linkset Dialog

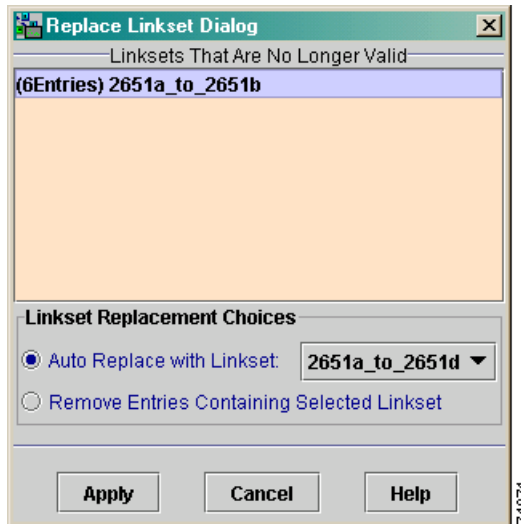

The Replace Linkset Dialog enables you to quickly replace incorrect linkset entries in route table files:

- To replace an incorrect linkset with a correct linkset, select an incorrect linkset in the **Linksets That Are No Longer Valid** table, then select a correct linkset from the **Auto Replace with Linkset** drop-down list box, then click **Apply**. SGM automatically replaces the incorrect linkset with the selected correct linkset in all affected entries in the route table file.
- To remove all entries that contain an incorrect linkset from the route table file, select an incorrect linkset in the **Linksets That Are No Longer Valid** table, then select the **Remove Entries Containing Selected Linkset** checkbox, then click **Apply**. SGM automatically removes all entries that contain the incorrect linkset from the route table file.
- When you have corrected all incorrect linksets in the route table file, click **Done**. SGM displays the Route Table Dialog ([Figure 3-61](#)).

If the selected route table file does not contain any incorrect linkset entries, SGM displays the Route Table Dialog ([Figure 3-61](#)).

- To open a route table file from a router, use one of the following procedures:
 - Select a node or linkset on the Node, Linkset, or Topology window, then select **Edit>Route Table>From Router** from the SGM Main Menu. (If you select an **Unmanaged** node, this option is grayed-out and cannot be selected.)
 - Right-click a node on the Node or Topology window, then select **Edit Route Table** from the right-click menu. (If you select an **Unmanaged** node, this option is grayed-out and cannot be selected.)

SGM reads the active route table from the router and displays it in the Route Table Dialog ([Figure 3-61](#)).

Figure 3-61 Route Table Dialog

Row #	Dest. Point Code	Mask	Cost	Dest. Linkset	QoS
0	5.1.2	7.255.7	1	2651a_to_2651b	All
1	5.1.3	7.255.7	1	2651a_to_2651c	All
2	5.1.4	7.255.7	1	2651a_to_2651d	All
3	5.2.0	7.255.0	1	2651a_to_2651d	All
4	5.2.0	7.255.0	2	2651a_to_2651c	All
5	5.2.0	7.255.0	3	2651a_to_2651b	All
6	5.3.0	7.255.0	1	2651a_to_2651d	All
7	5.3.0	7.255.0	2	2651a_to_2651c	All
8	5.3.0	7.255.0	3	2651a_to_2651b	All
9	5.7.0	7.255.0	1	2651a_to_2651d	All
10	5.7.0	7.255.0	2	2651a_to_2651c	All
11	5.7.0	7.255.0	3	2651a_to_2651b	All
12	5.9.3	7.255.7	1	2651a_to_tg3	All
13	5.9.4	7.255.7	1	2651a_to_2651d	All
14	5.9.4	7.255.7	2	2651a_to_2651c	All
15	5.9.4	7.255.7	3	2651a_to_2651b	All
16	5.10.0	7.255.0	1	2651a_to_2651d	All
17	5.10.0	7.255.0	2	2651a_to_2651c	All
18	5.10.0	7.255.0	3	2651a_to_2651b	All

19 Entries | Update complete

The route table lists destination point codes and associated destination linkset names, as well as other important information used to route packets on a node.

Press **Enter** to move down to the next row in the route table; press **Tab** to move to the next field.

- Step 2** You can resize each column in the route table, but you cannot sort the table based on the information in one of the columns. See the [“Resizing, Sorting, and Hiding Table Columns”](#) section on page 3-178 for more details.
- Step 3** The **Row #** field displays a unique number for each entry in the route table. You cannot edit this field, but the number might change as you add entries to or delete entries from the route table.

Step 4 The **Dest. Point Code** field displays the destination point code for packets on the selected node. The destination point code is the point code to which a given packet is routed. To edit the destination point code, enter the new code in this field.

If you enter a new destination point code that is less restrictive than the mask, SGM displays a message to that effect at the bottom of the Route Table Dialog, and performs one of the following actions:

- If you modified an existing point code, SGM restores the previous point code.
- If you entered an entirely new point code, SGM leaves this field blank.

For example, a destination point code of **7.7.7**, which specifies 14 bits, is less restrictive than a mask of **7.255.0**, which specifies only 11 bits. SGM ignores the extra bits in the last digit of the destination point code and converts it to **7.7.0**.

Step 5 The **Mask** field specifies the significant bits of the point code:

- For ANSI and China standard networks using the default 24-bit point code format, the default mask is **255.255.255**.
- For ITU networks using the default 14-bit point code format, the default mask is **7.255.7**.

To edit the mask, make the changes in this field.

If you enter a new mask, the binary conversion of the mask must contain only ones (1), no zeros (0). For example:

- **7.255.7** is a valid mask because it converts to binary **111.11111111.111**.
- **7.255.1** is *not* a valid mask because it converts to binary **111.11111111.001**.

If you enter an invalid mask, such as **7.255.1**, SGM displays a message to that effect at the bottom of the Route Table Dialog, and performs one of the following actions:

- If you modified an existing mask, SGM restores the previous mask.
- If you entered an entirely new mask, SGM leaves this field blank.

If you enter a new mask that is more restrictive than the destination point code, SGM asks if you want to adjust the point code automatically based on the new mask:

- Click **Yes** if you want to adjust the point code. For example, if the point code is **7.7.7**, and you enter the new mask **7.255.0**, SGM automatically adjusts the point code to **7.7.0**.
- Click **No** if you do not want to adjust the point code:
 - If you modified an existing mask, SGM restores the previous mask.
 - If you entered an entirely new mask, SGM leaves this field blank.

Step 6 The **Cost** field displays the cost of the route to the destination, relative to other routes. To edit the cost, select a cost from the drop-down list box in this field. The valid costs range from 1 (lowest cost and highest priority) through 9 (highest cost and lowest priority).



Note If you configure two routes to the same device and do not specify a cost for one of them, then the cost for that device defaults automatically to **5**. The default cost appears here in the **Cost** column, and in the output of the **show cs7 route** command.

Similarly, if you add a new line to this table and leave the **Cost** column blank, SGM automatically enters a default cost of **5**.

Linksets with the same cost form a combined linkset. Do not specify more than two linksets with the same cost, under the same destination point code and mask.


Step 7 The **Dest. Linkset** field displays the destination linkset associated with the destination point code. The destination linkset is also known as the output linkset. To edit the destination linkset, select a destination linkset from the drop-down list box in this field.

Step 8 (Optional) The **QoS** field displays the quality of service (QoS) class of the route, as configured by the network administrator. To edit the QoS class of the route, select a QoS class from the drop-down list box in this field.

Step 9 (Optional) To add a new route to the route table, select the **Dest. Point Code** field in a blank row, then fill in the fields with values for the new route.

- Step 10** (Optional) To delete an existing route from the route table, select one or more routes and click **Delete**. SGM removes the selected route or routes from the route table, without asking for confirmation.
- Step 11** (Optional) To load an existing route table file, or to modify the list of route table files, select **File>Load** from the route table menu. SGM displays the Load File Dialog - Route Table File List (Figure 3-62).

Figure 3-62 Load File Dialog - Route Table File List

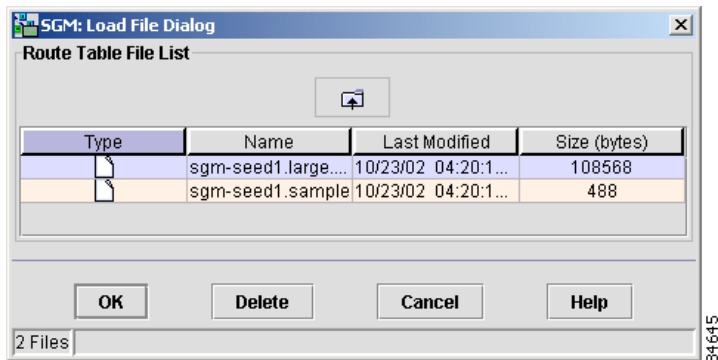

The Load File Dialog - Route Table File List contains the following fields:

- **Type**—Icon indicating whether the item in the table is a file or a folder.
- **Name**—Name of the route table file or folder.
- **Last Modified**—Date and time the route table file or folder was last modified.
- **Size (bytes)**—Size of the route table file or folder, in bytes.
- **Number of Files**—Total number of route table files and folders (displayed in bottom left corner).

To load a route table file, enter the name of the file or select it in the list and click **OK**. SGM loads the route table file, closes the Load File Dialog - Route Table File List, and returns to the Route Table Dialog.

To delete a route table file from the route table file list, select a file and click **Delete**. SGM issues an informational message containing the name and location of the deleted file.


To save any changes you made to the list of files, click **OK**. SGM saves the changes and closes the Load File Dialog - Route Table File List.

To close the Load File Dialog - Route Table File List without loading a route table file or saving any changes to the route table file list, click **Cancel**.

Step 12 (Optional) To save the changes you have made to the route table file, or to modify the list of route table files, use one of the following procedures:

- To save the changes you have made to the route table file without changing the name of the file, select **File>Save** from the route table menu.
- To save the changes you have made to the route table file with a new name, select **File>Save As** from the route table menu. SGM displays the Save File Dialog - Route Table File List dialog (Figure 3-63).

Figure 3-63 Save File Dialog - Route Table File List Dialog

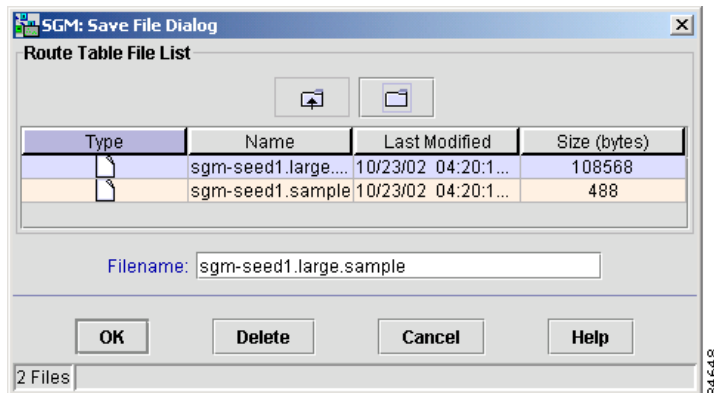

The Save File Dialog - Route Table File List dialog contains the following fields:

- **Type**—Icon indicating whether the item in the table is a file or a folder.
- **Name**—Name of the route table file or folder.
- **Last Modified**—Date and time the route table file or folder was last modified.
- **Size (bytes)**—Size of the route table file or folder, in bytes.

- **Filename**—Name by which you want to save the route table file.
If you create a new route table file name, you can use any letters, numbers, or characters in the name that are allowed by your operating system.
- **Number of Files**—Total number of route table files and folders (displayed in bottom left corner).

To save the route table file with a new name, use one of the following procedures:

- To save the file with a completely new name, enter the new name and click **OK**.
- To save the file with an existing name, overwriting an old route table file, select the name in the list and click **OK**.

SGM saves the route table file with the new name, closes the Save File Dialog - Route Table File List dialog, and returns to the Route Table Dialog.



Note If another user modifies and saves the route table file before you save your changes, SGM asks if you want to overwrite that user's changes. If you choose to do so, the other user's changes are overwritten and lost. If you choose not to do so, your changes are lost, unless you save the route table file to a different filename.

SGM stores the modified route table file in the route table file directory on the SGM server:

- If you installed SGM in the default directory, */opt*, then the SGM route table file directory is */opt/CSCOsgm/routes*.
- If you installed SGM in a different directory, then the SGM route table file directory is located in that directory.

You can use the **sgm routedir** command to change the directory in which SGM stores ITP route table files. See the [“SGM Commands and Descriptions” section on page B-2](#) for information about the use of this command.

To delete a route table file from the route table file list, select a file and click **Delete**. SGM issues an informational message containing the name and location of the deleted file.

To save any changes you made to the list of files, click **OK**. SGM saves the changes and closes the Load File Dialog - Route Table File List dialog.

To close the Save File Dialog - Route Table File List dialog without saving the route table file or saving any changes to the route table file list, click **Cancel**.

- Step 13** (Optional) To exit the Route Table Dialog without saving any changes, click **Cancel**.
- Step 14** Copy the modified route table file from the SGM *routes* directory to a location that the router can reach via TFTP.
- Step 15** TFTP the modified route table file back to the router.
-

Editing a Global Title Translation Table

SGM enables you to configure Global Title Translation (GTT) entries using the SGM GUI.

A global title is an application address, such as an 800 number, calling card number, or mobile subscriber identification number. GTT is the process by which the Signaling Connection Control Part (SCCP) translates a global title into the point code and subsystem number (SSN) of the destination service switching point (SSP) where higher layer protocol processing occurs. GTT entries are stored in GTT files, which are comma-separated value (CSV) text files with point codes written in hexadecimal notation.



Note

SGM 2.2 supports only GTT files with file format version 1.0. You can load GTT files that use higher file format versions, but fields or features that are unique to the higher version are not displayed, and they are removed from the GTT file the next time it is saved.

For more detailed information about GTT, including configuration procedures and scenarios, see the *IP Transfer Point (ITP)* feature module for Cisco IOS software release 12.2(4)MB4 or later.

To edit a GTT file using SGM:


-
- Step 1** Launch the SGM GTT client, using one of the following procedures:
- Select **Products>Global Title Configurator** from the SGM Main Menu.
 - Select **Start>Programs>Cisco SGM Client>Launch SGM GTT Client** in Windows.
 - Enter the **sgm gttclient** command. See the “[SGM Commands and Descriptions](#)” section on page B-2 for more information on the use of this command.



Note The GTT Configurator runs as a separate application in SGM, so it requires a separate login, just like the SGM client.

SGM displays the GTT Configurator window, with the **Selectors and GTA** tab selected ([Figure 3-64](#)).

Figure 3-64 GTT Configurator, Showing Selectors and GTA Tab

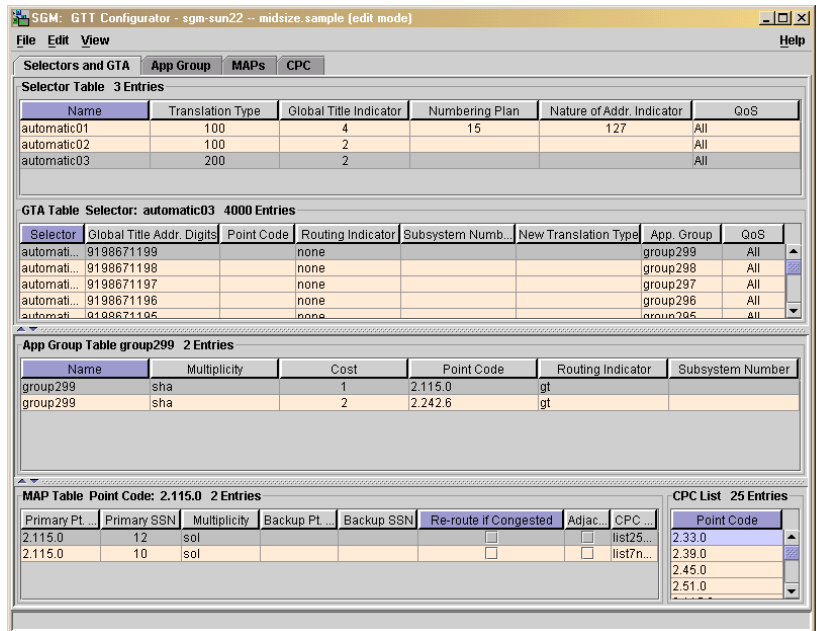

The GTT Configurator window provides a set of tabs, each of which launches a specific GTT panel. Each panel is composed of a series of tables that contain GTT data. Some of the tables might be blank at first, while others are populated with rows of data.

You can edit the values in each row in each table, either by typing over the current value, or by selecting a new value from a drop-down list box.

To reset a cell to its previous value, press **Esc**. (If you have edited more than one cell in a row, pressing **Esc** resets all cells in the row.) To commit your changes, click outside the row. Once you have committed your changes, pressing **Esc** does not reset the cells in the row.

Step 2 (Optional) SGM enables you to modify the following aspects of the GTT Configurator window to meet your needs:

- Size and location of the main GTT Configurator window
- Variant and version of the last saved GTT file
- Current selected tab (**Selectors and GTA**, **App Group**, **MAPs**, or **CPC**)


- For each panel, the location of tables on that panel
- For each table:
 - Column widths
 - Which columns are visible
 - Sort-by column, and whether the sort is ascending or descending

SGM also enables you to save your modifications in a GTT preferences file, load an existing GTT preferences file, and modify the list of GTT preferences files.

To save your current preferences, or to modify the list of GTT preferences files, use one of the following procedures:

- To save the changes you have made to the GTT preferences file without changing the name of the file, select **Edit>Preferences>Save** from the GTT menu.
- To save the changes you have made to the GTT preferences file with a new name, select **Edit>Preferences>Save As** from the GTT menu. SGM displays the Save File Dialog - GTT Preferences File List (Figure 3-65).

Figure 3-65 Save File Dialog - GTT Preferences File List

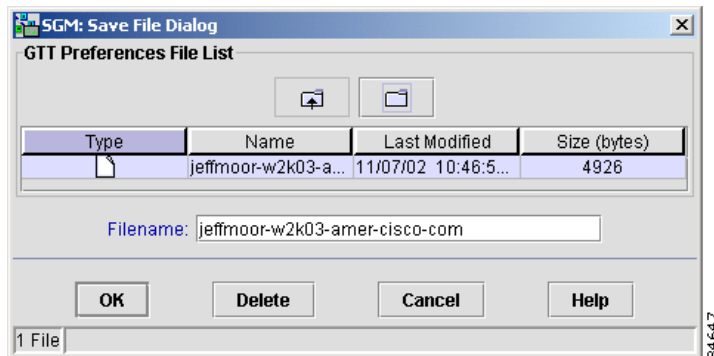

The Save File Dialog - GTT Preferences File List contains the following fields:

- **Type**—Icon indicating whether the item in the table is a file or a folder.
- **Name**—Name of the GTT preferences file or folder.
- **Last Modified**—Date and time the GTT preferences file or folder was last modified.

- **Size (bytes)**—Size of the GTT preferences file or folder, in bytes.
- **Filename**—Name by which you want to save the GTT preferences file. If you create a new GTT preferences file name, you can use any letters, numbers, or characters in the name that are allowed by your operating system.
- **Make this my preferred start option**—Specifies whether the selected preferences file is to be loaded automatically whenever this SGM client is started:
 - To load the selected preferences file when the SGM client is started, select the file, then select this checkbox.
 - To load the preferences that you are currently using when the SGM client is started, clear the checkbox. This is the default setting.
- **Number of Files**—Total number of GTT preferences files and folders (displayed in bottom left corner).

To save the GTT preferences file with a new name, use one of the following procedures:

- To save the file with a completely new name, enter the new name and click **OK**.
- To save the file with an existing name, overwriting an old GTT preferences file, select the name in the list and click **OK**.

SGM saves the GTT file with the new name, closes the Save File Dialog - GTT Preferences File List, and returns to the GTT Configuration window.



Note If another user modifies and saves the GTT preferences file before you save your changes, SGM asks if you want to overwrite that user's changes. If you choose to do so, the other user's changes are overwritten and lost. If you choose not to do so, your changes are lost, unless you save the GTT preferences file to a different filename.

When you save a GTT file or GTT preferences file, SGM makes note of your preferences on the SGM client and server, including the variant and version of GTT being used.

Thereafter, whenever you launch the GTT client, SGM searches for your GTT preferences. If SGM finds your preferences on the SGM server, SGM launches the GTT client with those preferences. Otherwise, SGM launches the GTT client with the default GTT preferences file (ITU variant and version 1.0).


To delete a GTT preferences file from the GTT preferences file list, select a file and click **Delete**. SGM issues an informational message containing the name and location of the deleted file.

To save any changes you made to the list of files, click **OK**. SGM saves the changes and closes the Load File Dialog - GTT Preferences File List.

To close the Save File Dialog - GTT Preferences File List without saving the GTT preferences file or saving any changes to the GTT preferences file list, click **Cancel**.

Step 3 (Optional) To load an existing GTT preferences file, select **Edit>Preferences>Load** from the GTT menu. SGM displays the Load File Dialog - GTT Preferences File List (Figure 3-66).

Figure 3-66 Load File Dialog - GTT Preferences File List

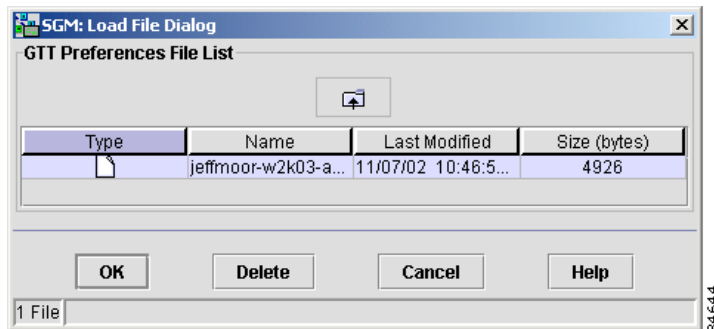

The Load File Dialog - GTT Preferences File List contains the following fields:

- **Type**—Icon indicating whether the item in the table is a file or a folder.
- **Name**—Name of the GTT preferences file or folder.
- **Last Modified**—Date and time the GTT preferences file or folder was last modified.
- **Size (bytes)**—Size of the GTT preferences file or folder, in bytes.
- **Number of Files**—Total number of GTT preferences files and folders (displayed in bottom left corner).

To load a GTT preferences file, enter the name of the file or select it in the list and click **OK**. SGM loads the GTT preferences file, closes the Load File Dialog - GTT Preferences File List, and returns to the GTT Configuration window.

To delete a GTT preferences file from the GTT file list, select a file and click **Delete**. SGM issues an informational message containing the name and location of the deleted file.

To save any changes you made to the list of files, click **OK**. SGM saves the changes and closes the Load File Dialog - GTT Preferences File List.

To close the Load File Dialog - GTT Preferences File List without loading a GTT preferences file or saving any changes to the GTT preferences file list, click **Cancel**.

Step 4 Select the **Selectors and GTA** tab if you are primarily interested in displaying data for a specific GTT selector, and seeing the GTA entries for that selector. SGM displays the Selectors and GTA panel.

A GTT selector defines the parameters that select the translation table used to translate an SCCP message to its next or final destination.

A Global Title Address (GTA) entry is associated with a selector and defines the result of a translation for a particular address mask. The result of a GTA entry can be either a final translation or an intermediate translation

When you first launch the Selectors and GTA panel, only the Selector Table is populated with data.

- To populate the GTA Table, select a row in the Selector Table. The GTA Table is populated with all associated GTA entries. If the GTA Table remains blank, the selected row has no associated GTA entries.
- To populate the App Group Table, select a row in the GTA Table that has an associated **App. Group**. The App Group Table is populated with all application group entries for that application group name.
- To populate the MAP Table, select a row in the GTA Table that does not have an associated **App. Group**. The MAP Table is populated with all MAP entries that match the selected row's point code-SSN combination.
- To populate the CPC List, select a row in the MAP Table that has an associated **CPC List Name**. The CPC List is populated with all point codes in that CPC list.

The Selector Table displays the following information:

- **Name**—Name of the selector.
- **Translation Type**—Translation type used by the selector. Valid values are integers in the range **0** through **255**.

- **Global Title Indicator**—Global title indicator for the selector. Valid values are integers in the range **2** and **4**.
- **Numbering Plan**—Numbering plan for the selector. Valid values are integers in the range **0** through **15**.
- **Nature of Addr. Indicator**—Nature of address indicator for the selector. Valid values are integers in the range **0** through **127**.
- **QoS**—Quality of service (QoS) class of the selector. Valid QoS classes range from **1** through **7**. **ALL** indicates that the selector accepts all QoS classes.

The GTA Table displays the following information:

- **Selector Name**—Name of the selector associated with this GTA.
- **Global Title Addr. Digits**—Address digits for the GTA.
- **Point Code**—Destination point code for the GTA.
- **Routing Indicator**—Routing indicator for the GTA. Valid values are:
 - **none**—No routing indicator.
 - **gt**—Route on the global title.
 - **pcssn**—Route on the point code and SSN.

This field is grayed-out if **Configure By App Group** is selected.

- **Subsystem Number**—Destination SSN for the GTA. Valid values are integers in the range **2** through **255**.
- **New Translation Type**—Translation type to be used by the GTA. Valid values are integers in the range **0** through **255**.
- **App. Group**—Name of the application group that is to provide the point code, routing indicator, and SSN to be used by the GTA.
- **QoS**—Quality of service (QoS) class of the GTA. Valid QoS classes range from **1** through **7**. **ALL** indicates that the GTA accepts all QoS classes.

The App Group Table displays the following information:

- **App. Group**—Name of the application group.
- **Multiplicity**—Multiplicity setting for the application group. Valid values are:
 - **sha**—Share equally between all destinations.
 - **cos**—Use the destination with the least cost, if available.
- **Cost**—Relative cost of the application group. Valid values are integers in the range **1** through **8**.
- **Point Code**—Destination point code for the application group.
- **Routing Indicator**—Routing indicator for the application group. Valid values are:
 - **none**—No routing indicator.
 - **gt**—Route on the global title. This is the default routing indicator.
 - **pcssn**—Route on the point code and SSN.
- **Subsystem Number**—Destination SSN for the application group. Valid values are integers in the range **2** through **255**.

The MAP Table displays the following information:

- **Primary Pt. Code**—Primary point code for the MAP.
- **Primary SSN**—Primary SSN for the MAP. Valid values are integers in the range **2** through **255**.
- **Multiplicity**—Multiplicity setting for the MAP. Valid values are:
 - **dom**—Dominant. Always translate to the primary point code-SSN combination if it is available. Translate to the backup point code-SSN combination only if the primary combination is not available.
 - **sha**—Share equally between the primary point code-SSN combination and the backup point code-SSN combination.
 - **sol**—Solitary MAP. There is no alternate if the point code or SSN is not available.
- **Backup Pt. Code**—Backup point code for the MAP.
- **Backup SSN**—Backup SSN for the MAP. Valid values are integers in the range **2** through **255**.

- **CPC List Name**—Name of the CPC list associated with this MAP.
- **Re-route if Congested**—Indicates whether the MAP is to be routed to the backup point code-SSN combination if the primary combination is congested:
 - If the checkbox is selected, the MAP is routed to the backup combination when the primary combination is congested.
 - If the checkbox is cleared, the MAP is not routed to the backup.
- **Adjacency**—Indicates whether a point code-SSN combination is to be considered adjacent to the local node for SCCP management:
 - If the checkbox is selected, the point code-SSN combination is considered adjacent to the local node.
 - If the checkbox is cleared, the point code-SSN combination is not considered adjacent to the local node.

The CPC List displays the following information:

- **Point Code**—Point codes in the selected CPC list.

Step 5 Select the **App Group** tab if you are primarily interested in displaying data for application groups. SGM displays the App Group panel.

An application group is an alternative result for the explicit point code and SSN in a GTA entry. You can use an application group entry for intermediate translation, for load-sharing across more than two destinations, or for load-sharing of intermediate translation.

When you first launch the App Group panel, only the App Group Table and Selector Table are populated with data.

- To populate the MAP Table, select a row in the App Group Table. The MAP Table is populated with all MAP entries that match the selected row's point code-SSN combination.
- To populate the CPC List, select a row in the MAP Table that has an associated **CPC List Name**. The CPC List is populated with all point codes in that CPC list.
- To populate the GTA Table, select a row in the Selector Table. The GTA Table is populated with all associated GTA entries. If the GTA Table remains blank, the selected row has no associated GTA entries.

The App Group panel displays the same information as the Selectors and GTA panel, but from the perspective of the application groups.

Step 6 Select the **MAPs** tab if you are primarily interested in displaying data for MAPs. SGM displays the MAPs panel.

A mated application (MAP) entry has two main purposes:

- MAP entries are used internally by the SCCP application to track point code states and SSN states, such as congestion and availability.
- MAP entries are used to define backups or alternates for point code-SSN combination.


When you first launch the MAPs panel, only the MAP Table and Selector Table are populated with data.

- To populate the CPC List, select a row in the MAP Table that has an associated **CPC List Name**. The CPC List is populated with all point codes in that CPC list.
- To populate the App Group Table and GTA Table, select a row in the MAP Table. The App Group Table and GTA Table are populated with all application group and GTA entries that match the selected row's point code-SSN combination. If the App Group Table or GTA Table remains blank, the selected row has no associated application group or GTA entries.

The MAPs panel displays the same information as the Selectors and GTA panel, but from the perspective of the MAPs.

- Step 7** Select the **CPC** tab if you are primarily interested in displaying data for concerned point code names. SGM displays the CPC panel (Figure 3-67).

Figure 3-67 GTT Configurator, Showing CPC Tab

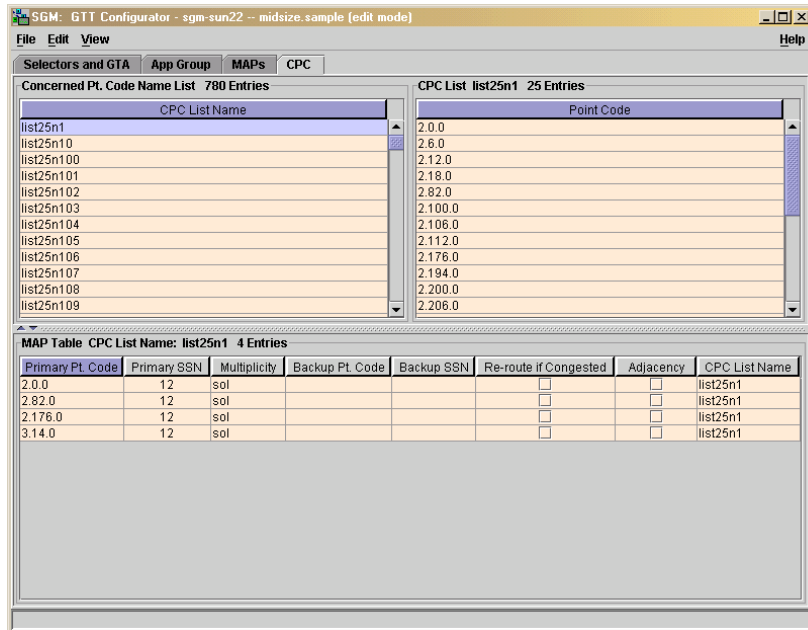

A concerned point code (CPC) is a node that is to be notified when the status of the associated SSN changes.

When you first launch the CPC panel, only the Concerned Pt. Code Name List is populated with data. To populate the CPC List and MAP Table, select a row in the Concerned Pt. Code Name List. The CPC List and MAP Table are populated with all point codes and MAP entries that match that concerned point code name.

The CPC panel displays the CPC List and MAP Table, as well as the Concerned Pt. Code Name List. The Concerned Pt. Code Name List displays the **CPC List Name**, which is the name of the CPC list to be added. Enter 1-to-12-character alphanumeric string.

To copy one or more point codes from one CPC list to another, select a CPC list in the **CPC List Name** column. SGM displays the point codes associated with that CPC list in the **Point Code** column. Select one or more of the point codes and drag them to the new CPC list while holding down the left mouse button.



Note SGM *copies* the point codes to the new CPC list; it does not *move* them from the old CPC list. If you want to move the point codes, you must copy them to the new CPC list, then delete them from the old CPC list.

Step 8 (Optional) To add a new selector to a Selector Table, select a Selector Table, then use one of the following procedures:

- Select **Edit>Add** from the GTT menu.
- Select **Add** from the right-click menu.

SGM displays the Selector Add Dialog (Figure 3-68).

Figure 3-68 Selector Add Dialog

The Selector Add Dialog contains the following fields:

- **Selector Name**—Name of the selector to be added. Enter 1-to-12-character alphanumeric string.
- **Translation Type**—Translation type to be used by the selector. Enter an integer in the range **0** through **255**.
- **Global Title Indicator**—Global title indicator for the selector. Select a value from the drop-down list box. Valid values are:
 - **2**
 - **4**—This is the default value.
- **Numbering Plan**—Numbering plan for the selector. Enter an integer in the range **0** through **15**. This field is grayed-out if **Global Title Indicator** is set to **2**.
- **Nature of Addr. Indicator**—Nature of address indicator for the selector. Enter an integer in the range **0** through **127**. This field is grayed-out if **Global Title Indicator** is set to **2**.
- **QoS**—Quality of service (QoS) class of the selector. Select a value from the drop-down list box. Valid QoS classes range from **1** through **7**. Select **ALL** if you want the selector to accept all QoS classes. The default value is **ALL**.

Enter or select values for the new selector, then click **Add**. SGM adds the selector to the Selector Table.

When you are done adding selectors, click **Close** to close the Selector Add Dialog.

Step 9 (Optional) To add a new GTA entry to a GTA Table, select a GTA Table, then use one of the following procedures:

- Select **Edit>Add** from the GTT menu.
- Select **Add** from the right-click menu.

SGM displays the Selector Add Dialog ([Figure 3-69](#)).

Figure 3-69 GTA Add Dialog

SGM: GTA Add Dialog

Selector Name automatic01

Global Title Addr. Digits 18005592999

QoS 4

Configure By App Group

Config By Point Code

Point Code 5.51.1

Routing Indicator pcssn

Subsystem Number 10

New Translation Type

Config By App Group

App. Group

Add Close Help

74803

The GTA Add Dialog contains the following fields:

- **Selector Name**—Name of the selector associated with this GTA. You cannot edit this field.
- **Global Title Addr. Digits**—Address digits for the GTA. Enter a 1 to 15 digit hexadecimal string.
- **QoS**—Quality of service (QoS) class of the GTA. Select a value from the drop-down list box. Valid QoS classes range from 1 through 7. Select **ALL** if you want the GTA to accept all QoS classes. The default value is **ALL**.


- **Configure By App Group**—Indicates whether to configure the GTA by point code or application group:
 - To configure the GTA by point code, clear the checkbox. The **Config By Point Code** fields are made available, and the **Config By App Group** fields are grayed-out. This is the default setting.
 - To configure the GTA by application group, select the checkbox. The **Config By App Group** fields are made available, and the **Config By Point Code** fields are grayed-out. The point code, routing indicator, and SSN to be used by the GTA are provided by a specified application group.
- **Point Code**—Destination point code for the GTA. Enter a point code. This field is grayed-out if **Configure By App Group** is selected.
- **Routing Indicator**—Routing indicator for the GTA. Select a value from the drop-down list box. Valid values are:
 - **gt**—Route on the global title. This is the default routing indicator.
 - **pcssn**—Route on the point code and SSN.This field is grayed-out if **Configure By App Group** is selected.
- **Subsystem Number**—Destination SSN for the GTA. Enter an integer in the range **2** through **255**. This field is mutually exclusive with the **New Translation Type** field. This field is grayed-out if **Configure By App Group** is selected.
- **New Translation Type**—Translation type to be used by the GTA. Enter an integer in the range **0** through **255**. This field is mutually exclusive with the **Subsystem Number** field. This field is grayed-out if **Configure By App Group** is selected.
- **App. Group**—Name of the application group that is to provide the point code, routing indicator, and SSN to be used by the GTA. Enter the name of an application group. This field is grayed-out if **Configure By Point Code** is selected.

Enter or select values for the new GTA entry, then click **Add**. SGM adds the GTA entry to the GTA Table.

When you are done adding GTA entries, click **Close** to close the GTA Add Dialog.

- Step 10** (Optional) To search the GTA Table for the Global Title Address Digits for a specific selector, select the **Selectors and GTA** tab, then select **View>Phone Number Config** from the GTT menu. SGM displays the The Phone Number Lookup Dialog (Figure 3-70).

Figure 3-70 Phone Number Lookup Dialog

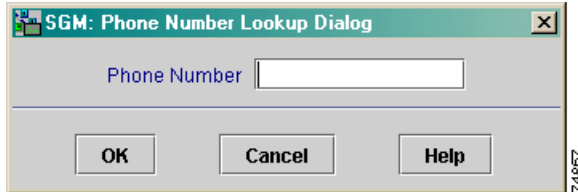

The Phone Number Lookup Dialog contains the following fields:

- **Phone Number**—GTA digits to be searched for in the GTA Table. Enter a telephone number or prefix as a 1 to 15 digit hexadecimal string. For example, to search for a specific telephone number, such as 919-555-6384, enter **9195556384**. To search for all entries that begin with the 919-555 telephone prefix, enter **919555**.

Enter the GTA digits in the **Phone Number** field, then click **OK**. SGM searches for the GTA digits, closes the Phone Number Lookup Dialog, and displays the entries that contained the GTA digits in the GTA Table. If SGM found no matching entries, SGM displays **0 Entries** in the GTA Table table header.

To close the Phone Number Lookup Dialog without searching for the GTA digits, click **Cancel**.

- Step 11** (Optional) To add a new application group entry to an App Group Table, select an App Group Table, then use one of the following procedures:
- Select **Edit>Add** from the GTT menu.
 - Select **Add** from the right-click menu.

SGM displays the App Group Add Dialog (Figure 3-71).

Figure 3-71 App Group Add Dialog

SGM: App Group Add Dialog

App. Group

Multiplicity **sha** ▼

Cost **1** ▼

Point Code

Routing Indicator **gt** ▼

Subsystem Number

Add **Close** **Help**

7-46102

The App Group Add Dialog contains the following fields:

- **App. Group**—Name of the application group to be added. Enter 1-to-12-character alphanumeric string.
- **Multiplicity**—Multiplicity setting for the application group. Select a value from the drop-down list box. Valid values are:
 - **sha**—Share equally between all destinations. This is the default value.
 - **cos**—Use the destination with the least cost, if available.
- **Cost**—Relative cost of the application group. Select a relative cost, **1** through **8**, from the drop-down list box. The default value is **1**.
- **Point Code**—Destination point code for the application group. Enter a point code.
- **Routing Indicator**—Routing indicator for the application group. Select a value from the drop-down list box. Valid values are:
 - **gt**—Route on the global title. This is the default routing indicator.
 - **pcssn**—Route on the point code and SSN.
- **Subsystem Number**—Destination SSN for the application group. Enter an integer in the range **2** through **255**.

Enter or select values for the new application group entry, then click **Add**. SGM adds the application group entry to the App Group Table.

When you are done adding application group entries, click **Close** to close the App Group Add Dialog.

Step 12 (Optional) To add a new MAP entry to a MAP Table, select a MAP Table, then use one of the following procedures:

- Select **Edit>Add** from the GTT menu.
- Select **Add** from the right-click menu.

SGM displays the MAP Add Dialog ([Figure 3-72](#)).

Figure 3-72 MAP Add Dialog

The screenshot shows a dialog box titled "SGM: MAP Add Dialog". It contains the following fields and controls:

- Primary Pt. Code: Text input field.
- Primary SSN: Text input field.
- Multiplicity: Dropdown menu with "sha" selected.
- Backup Pt. Code: Text input field.
- Backup SSN: Text input field.
- CPC List Name: Text input field.
- Re-route if Congested: Check box (unchecked).
- Adjacency: Check box (unchecked).
- Buttons: Add, Close, Help.

The MAP Add Dialog contains the following fields:

- **Primary Pt. Code**—Primary point code for the MAP. Enter a point code.
- **Primary SSN**—Primary SSN for the MAP. Enter an integer in the range 2 through 255.

- **Multiplicity**—Multiplicity setting for the MAP. Select a value from the drop-down list box. Valid values are:
 - **dom**—Dominant. Always translate to the primary point code-SSN combination if it is available. Translate to the backup point code-SSN combination only if the primary combination is not available.
 - **sha**—Share equally between the primary point code-SSN combination and the backup point code-SSN combination. This is the default value.
 - **sol**—Solitary MAP. There is no alternate if the point code or SSN is not available.
- **Backup Pt. Code**—Backup point code for the MAP. Enter a point code.
- **Backup SSN**—Backup SSN for the MAP. Enter an integer in the range 2 through 255.
- **CPC List Name**—Name of the CPC list to be associated with this MAP. Enter a CPC list name.
- **Re-route if Congested**—Indicates whether the MAP is to be routed to the backup point code-SSN combination if the primary combination is congested:
 - If you want to route the MAP to the backup combination when the primary combination is congested, select the checkbox.
 - If you do not want to route the MAP to the backup, clear the checkbox. This is the default setting.
- **Adjacency**—Indicates whether a point code-SSN combination is to be considered adjacent to the local node for SCCP management:
 - If you want the point code-SSN combination be considered adjacent to the local node, select the checkbox.
 - If you do not want the point code-SSN combination be considered adjacent to the local node, clear the checkbox. This is the default setting.

Enter or select values for the new MAP entry, then click **Add**. SGM adds the MAP entry to the MAP Table.


When you are done adding MAP entries, click **Close** to close the MAP Add Dialog.

Step 13 (Optional) To add a new CPC list to a CPC Table, select a Concerned Pt. Code Name List or a CPC List, then use one of the following procedures:

- Select **Edit>Add** from the GTT menu.
- Select **Add** from the right-click menu.

SGM displays the CPC Add Dialog (Figure 3-73).

Figure 3-73 CPC Add Dialog

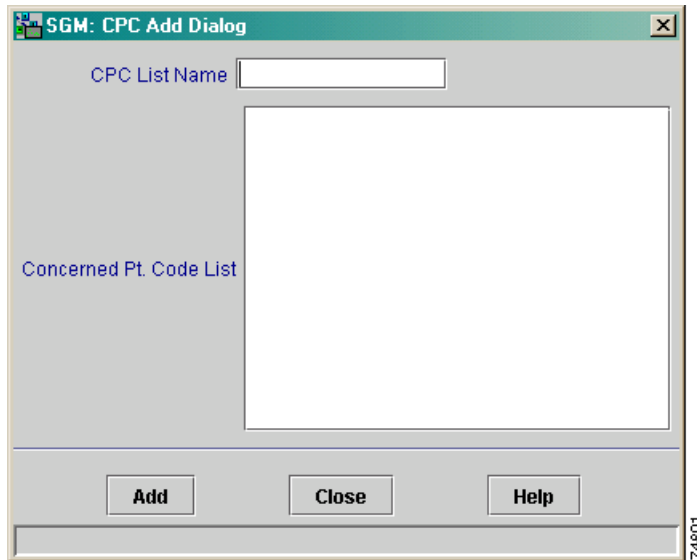

The CPC Add Dialog contains the following fields:

- **CPC List Name**—Name of the CPC list to be added. Enter 1-to-12-character alphanumeric string.
- **Concerned Pt. Code List**—One or more CPCs to be added to the new CPC list. Enter one or more CPCs, separated by spaces.

Enter or select values for the new CPC list, then click **Add**. SGM adds the CPC list to the MAP Table.

When you are done adding CPC lists, click **Close** to close the CPC Add Dialog.


- Step 14** (Optional) To delete one or more rows from a table, select the rows, then select **Edit>Delete** from the GTT menu or **Delete** from the right-click menu. SGM displays the Confirm Delete Dialog to confirm the deletion:
- To delete the selected rows, click **Yes**. The rows are deleted from the table and the Confirm Delete Dialog is closed.
 - To retain the selected rows, click **No**. The rows are kept in the table and the Confirm Delete Dialog is closed.

You can select more than one row to delete, but all selected rows must be in the same table. For example, you cannot delete rows from both the Selector Table and the MAP Table at the same time.

If deleting a row from a table “orphans” one or more rows in the table, such that no remaining entries reference the orphaned rows, SGM displays the number of orphaned rows and asks whether you want to also delete the orphaned rows. (SGM displays the number of rows and not the rows themselves, because there could be thousands of orphaned rows.)

- Step 15** (Optional) To create a new GTT file, select **File>New Table** from the GTT menu. SGM displays the Create New Table Dialog ([Figure 3-74](#)).

Figure 3-74 Create New File Dialog

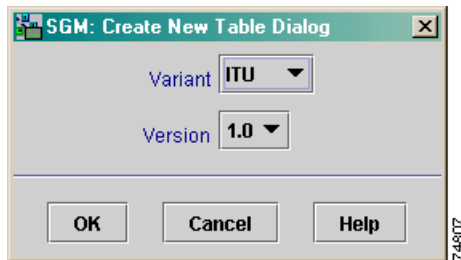

The Create New Table Dialog contains the following fields:


- **Variation**—Point code format to be used by the new GTT. Select a point code format from the drop-down list box. Valid formats are:
 - **ANSI**—Formats point codes using the 24-bit format American National Standards Institute (ANSI) standard, *xxx.yyy.zzz* format, where:
 - *xxx* is the 8-bit network identification
 - *yyy* is the 8-bit network cluster
 - *zzz* is the 8-bit network cluster member
 - **China**—Formats point codes using the 24-bit format China standard, *xxx.yyy.zzz* format, where:
 - *xxx* is the 8-bit network identification
 - *yyy* is the 8-bit network cluster
 - *zzz* is the 8-bit network cluster member
 - **ITU**—Formats point codes using the 14-bit format International Telecommunication Union (ITU) standards, *x.yyy.z* format, where:
 - *x* is the 3-bit zone identification
 - *yyy* is the 8-bit region identification
 - *z* is the 3-bit signal-pointThis is the default setting.
- **Version**—Version of the file format to be used by the GTT. Valid versions are:
 - **1.0**—This is the default version, and the only version that is currently available.

Select a variant and version for the new GTT file, then click **OK**. SGM creates the new GTT file and closes the Create New Table Dialog.

To close the Create New Table Dialog without creating a new GTT file, click **Cancel**.

- Step 16** (Optional) To load an existing GTT file, or to modify the list of GTT files, select **File>Load** from the GTT menu. SGM displays the Load File Dialog - GTT File List (Figure 3-75).

Figure 3-75 Load File Dialog - GTT File List

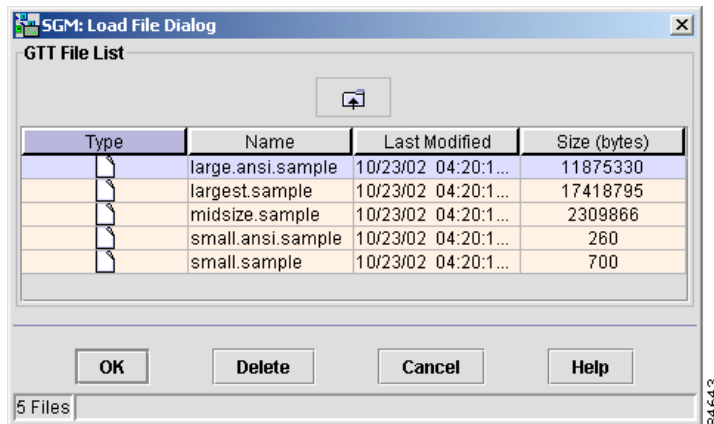


The Load File Dialog - GTT File List contains the following fields:

- **Type**—Icon indicating whether the item in the table is a file or a folder.
- **Name**—Name of the GTT file or folder.
- **Last Modified**—Date and time the GTT file or folder was last modified.
- **Size (bytes)**—Size of the GTT file or folder, in bytes.
- **Number of Files**—Total number of GTT files and folders (displayed in bottom left corner).

To load a GTT file, enter the name of the file or select it in the list and click **OK**. SGM closes the Load File Dialog - GTT File List and displays the Progress Dialog (Figure 3-76).

Figure 3-76 Progress Dialog

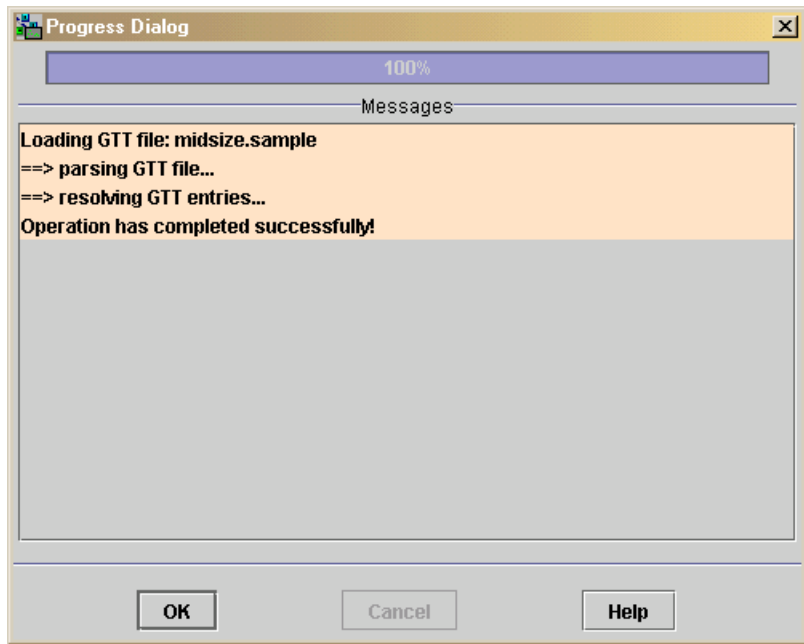

The Progress Dialog displays the progress of the GTT file load, as well as any messages generated while loading the file.

To stop loading the file, click **Cancel**.

When the file has been loaded, click **OK**. SGM closes the Progress Dialog, loads the GTT file, and returns to the GTT Configuration window.

When you load a GTT file, the name of the server associated with the GTT client and the filename are displayed in the window name:

SGM: GTT Configurator - sgm-sun8 -- GTT.File.1

If you have not yet loaded or saved a GTT file, SGM displays **No File Loaded** in place of the GTT file name.

To delete a GTT file from the GTT file list, select a file and click **Delete**. SGM issues an informational message containing the name and location of the deleted file.

To save any changes you made to the list of files, click **OK**. SGM saves the changes and closes the Load File Dialog - GTT File List.

To close the Load File Dialog - GTT File List without loading a GTT file or saving any changes to the GTT file list, click **Cancel**.

Step 17 (Optional) SGM enables you to check the semantics of a GTT file against a specific router, validating the following data in the GTT file:

- **Router Point Code**—The point code in the GTT file cannot be the same as the router's primary, secondary, or capability point code. If it is the same, SGM generates an **Error**.
- **Route Table**—All point codes in the GTT file must also be in the router's route table. If they are not, SGM generates an **Error**.
- **Route Status**—All route entries for point codes in the GTT file must be available. If they are not, SGM generates a **Warning**.

To check the semantics of a GTT file, select **File>Semantic Check** from the GTT menu. SGM displays the Semantic Check GTT dialog ([Figure 3-77](#)).

Figure 3-77 Semantic Check GTT Dialog



The Semantic Check GTT dialog contains the following fields:

- **Router Name or IP Address**—Name or IP address of the router against which to check the GTT file.

Enter the name or IP address of a router and click **OK**. SGM closes the Semantic Check GTT dialog and opens the Progress Dialog ([Figure 3-76](#)).

The Progress Dialog displays the progress of the semantic check for the GTT file, as well as any messages generated while checking the file.

To cancel the check, click **Cancel**.

When the check is complete, click **OK**. SGM closes the Progress Dialog and returns to the Semantic Check GTT dialog.


To close the Semantic Check GTT dialog without checking the semantics of the GTT file, click **Cancel**.



Note You can also use the **sgm gttcheck** command to semantics of a GTT file. For more information on the use of this command, see the “[SGM Commands and Descriptions](#)” section on page B-2.

Step 18 (Optional) To display basic information about the currently displayed GTT file, select **View > GTT Table Info** from the GTT menu. SGM displays the GTT Table Info Dialog (Figure 3-78).

Figure 3-78 GTT Table Info Dialog

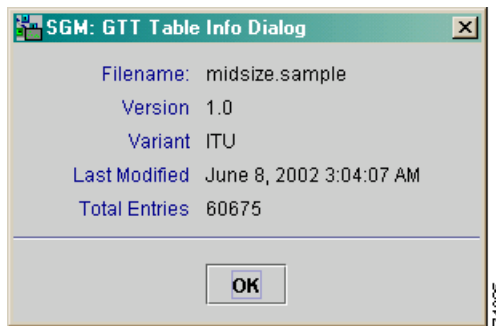

The GTT Table Info Dialog contains the following fields:

- **Filename**—Name of the GTT file.
- **Version**—Version of the file format to be used by the GTT. Valid versions are:
 - **1.0**—This is the default version, and the only version that is currently available.

- **Variants**—Point code format to be used by the GTT. Valid formats are:
 - **ANSI**—Formats point codes using the 24-bit format American National Standards Institute (ANSI) standard, *xxx.yyy.zzz* format, where:
 - *xxx* is the 8-bit network identification
 - *yyy* is the 8-bit network cluster
 - *zzz* is the 8-bit network cluster member
 - **China**—Formats point codes using the 24-bit format China standard, *xxx.yyy.zzz* format, where:
 - *xxx* is the 8-bit network identification
 - *yyy* is the 8-bit network cluster
 - *zzz* is the 8-bit network cluster member
 - **ITU**—Formats point codes using the 14-bit format International Telecommunication Union (ITU) standards, *x.yyy.z* format, where:
 - *x* is the 3-bit zone identification
 - *yyy* is the 8-bit region identification
 - *z* is the 3-bit signal-point


This is the default setting.
- **Last Modified**—Date and time the GTT file was last modified.
- **Total Entries**—Total number of entries in the GTT file.

Click **OK** to close the GTT Table Info Dialog.

Step 19 (Optional) To save the changes you have made to the GTT file, or to modify the list of GTT files, use one of the following procedures:

- To save the changes you have made to the GTT file without changing the name of the file, select **File>Save** from the GTT menu.
- To save the changes you have made to the GTT file with a new name, select **File>Save As** from the GTT menu. SGM displays the Save File Dialog - GTT File List (Figure 3-79).

Figure 3-79 Save File Dialog - GTT File List

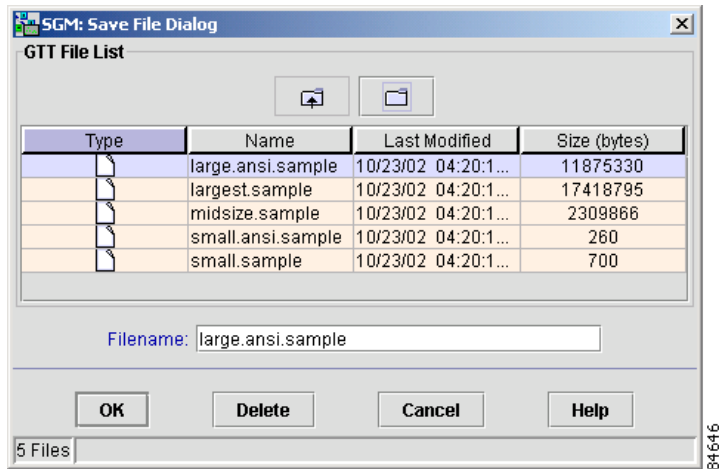

The Save File Dialog - GTT File List contains the following fields:

- **Type**—Icon indicating whether the item in the table is a file or a folder.
- **Name**—Name of the GTT file or folder.
- **Last Modified**—Date and time the GTT file or folder was last modified.
- **Size (bytes)**—Size of the GTT file or folder, in bytes.
- **Filename**—Name by which you want to save the GTT file.

If you create a new GTT file name, you can use any letters, numbers, or characters in the name that are allowed by your operating system.

- **Number of Files**—Total number of GTT files and folders (displayed in bottom left corner).

To save the GTT file with a new name, use one of the following procedures:

- To save the file with a completely new name, enter the new name and click **OK**.
- To save the file with an existing name, overwriting an old GTT file, select the name in the list and click **OK**.

SGM closes the Save File Dialog - GTT File List and displays the Progress Dialog (Figure 3-76).

The Progress Dialog displays the progress of the GTT file save, as well as any messages generated while saving the file.

To stop saving the file, click **Cancel**.

When the file has been saved, click **OK**. SGM closes the Progress Dialog, saves the GTT file with the new name, and returns to the GTT Configuration window.



Note If another user modifies and saves the GTT file before you save your changes, SGM asks if you want to overwrite that user's changes. If you choose to do so, the other user's changes are overwritten and lost. If you choose not to do so, your changes are lost, unless you save the GTT file to a different filename.

To delete a GTT file from the GTT file list, select a file and click **Delete**. SGM issues an informational message containing the name and location of the deleted file.

To save any changes you made to the list of files, click **OK**. SGM saves the changes and closes the Load File Dialog - GTT File List.

To close the Save File Dialog - GTT File List without saving the GTT file or saving any changes to the GTT file list, click **Cancel**.

Step 20 When you are ready to exit the GTT Configurator window, select **File>Exit** from the GTT menu.

If you have made any changes to the GTT file, SGM asks if you want to save the changes before leaving the window:

- Click **Yes** to save the changes.

SGM opens the Save File Dialog - GTT File List, which enables you to save the GTT file with a new name, or overwrite an existing GTT file.

SGM then opens the Save File Dialog - GTT Preferences File List, which enables you to save the GTT preferences file with a new name, or overwrite an existing GTT preferences file.

- Click **No** to close the prompt window.

SGM automatically saves your GTT preferences, then closes the GTT Configurator window without saving any changes to the GTT file.

By default, GTT files and GTT preferences files are located in the SGM installation directory:

- If you installed SGM in the default directory, */opt*, then the default directory is */opt/CSCOSgm/gtt*.
- If you installed SGM in a different directory, then the default directory is located in that directory.

To change the directory in which SGM stores GTT files, use the **sgm gtt`dir`** command. See the “[SGM Commands and Descriptions](#)” section on page B-2 for more information on the use of this command.

Working with SGM Statistics Reports

Once every hour, SGM gathers critical information from all known nodes, linksets, and links. SGM then uses that information to calculate statistics, and generates reports based on those statistics.

SGM enables you to:

- View and export detailed network link and linkset statistics summary reports.
- View and export detailed accounting statistics reports.
- Create, view, and export custom statistics reports.
- View and export point code inventory reports.
- Modify the way SGM displays information in reports.

By default, SGM stores all reports in the report files directory, */reports*:

- If you installed SGM in the default directory, */opt*, then the default report files directory is */opt/CSCOSgm/reports*.
- If you installed SGM in a different directory, then the default report files directory is located in that directory.

The */reports* directory contains the following subdirectories:

- */daily*—Contains all daily report files, stored in *.Z* format.
- */exportdaily*—Contains all daily report files, edited and formatted for export, stored as Zip files.
- */hourly*—Contains all hourly report files, stored in *.Z* format.

- */exporthourly*—Contains all hourly report files, edited and formatted for export, stored as Zip files.
- */exportrolling*—Contains all rolling report files, edited and formatted for export, stored as Zip files. SGM rebuilds the files in this subdirectory every hour.
- */custom*—Contains all custom report files. These are the report files generated using the **sgm accstats** and **sgm linkstats** commands.

Each file is identified with a unique ID tag, specified when the **sgm accstats** or **sgm linkstats** command was entered. If the user did not specify an ID tag, SGM uses the process ID of the **sgm accstats** or **sgm linkstats** command.

- */etc*—Contains additional files used by the SGM reporting scripts and Web pages, including the *nodes.include*, *linksets.include*, *nodes.exclude*, and *linksets.exclude* files, if they exist.

This section includes the following information:

- [Modifying the Way SGM Handles Statistics Reports \(Solaris Only\), page 3-220](#)
- [Changing the SGM Reports Directory \(Solaris Only\), page 3-227](#)
- [Viewing SGM Network Statistics Reports, page 3-228](#)
- [Viewing SGM Accounting Statistics Reports, page 3-248](#)
- [Generating and Viewing Custom SGM Statistics Reports, page 3-254](#)
- [Viewing SGM Point Code Inventory Reports, page 3-275](#)
- [Viewing SGM Statistics Reports Logs, page 3-279](#)

Modifying the Way SGM Handles Statistics Reports (Solaris Only)

SGM enables you to modify the following aspects of statistics reports:

- To specify whether SGM is to generate network statistics reports, enter the **sgm statreps [disable | enable]** command:
 - To generate network statistics reports, enter **sgm statreps enable**. This is the default setting.
 - To not generate network statistics reports, enter **sgm statreps disable**.
- To specify whether SGM is to generate network statistics reports in export format, enter the **sgm statreps [export | noexport]** command:
 - To generate network statistics reports in export format, enter **sgm statreps export**. This is the default setting.
 - To not generate network statistics reports in export format, enter **sgm statreps noexport**.
- To specify whether SGM is to generate accounting statistics reports, enter the **sgm statreps [acct | noacct]** command:
 - To generate accounting statistics reports, enter **sgm statreps acct**.
 - To not generate accounting statistics reports, enter **sgm statreps noacct**. This is the default setting.
- To specify whether SGM is to include links that use the Stream Control Transmission Protocol (SCTP) IP transport protocol in network statistics reports, enter the **sgm statreps [iplinks | noiplinks]** command:
 - To include SCTPIP links, enter **sgm statreps iplinks**. This is the default setting.
 - To not include SCTPIP links, enter **sgm statreps noiplinks**.
- To specify whether SGM is to include links that do not have planned send and receive capacities in network statistics reports, enter the **sgm statreps [nullcaps | nonullcaps]** command:
 - To include links that do not have planned send and receive capacities, enter **sgm statreps nullcaps**. This is the default setting.
 - To not include links that do not have planned send and receive capacities, enter **sgm statreps nonullcaps**.

- To set the time mode for dates in network statistics reports, enter the **sgm statreps timemode [12 | 24]** command:
 - To use 24-hour time, also called military time, enter **sgm statreps timemode 24**. 1:00 in the afternoon is 13:00. This is the default setting.
 - To use 12-hour time, with AM and PM, enter **sgm statreps timemode 12**. 1:00 in the afternoon is 1:00 PM.
- To specify whether SGM is to verify that a disk has at least 10 MB of space remaining before generating network statistics reports, enter the **sgm statreps [diskcheck | nodiskcheck]** command:
 - To verify the disk space, enter **sgm statreps diskcheck**. This is the default setting.
 - To not verify the disk space, enter **sgm statreps nodiskcheck**.
- To specify whether SGM is to display a gray background in the Send Utilization or Receive Utilization cell in a network statistics report, if the following condition is met:

Current Utilization > *factor* * Long-Term Utilization

enter the **sgm statreps utilratio** command. The default value for *factor* is **1.5**.

- To specify whether SGM is to display a gray background in the InSrv cell in a network statistics report, if the following condition is met:

Current In-Service < *factor* * Long-Term In-Service

enter the **sgm statreps servratio** command. The default value for *factor* is **0.95**.

- To set the maximum number of days SGM is to archive hourly network statistics reports, enter the **sgm statreps hourlyage** or **sgm rephourlyage** command. The default setting is **31** days.
- To set the maximum number of days SGM is to archive daily network statistics reports, enter the **sgm statreps dailyage** or **sgm repdailyage** command. The default setting is **90** days.
- To set the maximum number of days SGM is to archive custom network statistics reports, enter the **sgm repcustage** command. The default setting is **10** days.

- To specify whether SGM is to show real node names or display names in Web pages, enter the **sgm webnames** command:
 - To show the real DNS names of nodes, as discovered by SGM, enter **sgm webnames real**. This is the default setting.
 - To show display names, enter **sgm webnames display**. Display names are new names that you specify for nodes. For more information about display names, see the [“Editing a Node” section on page 3-99](#).
- To specify whether SGM is to display send and receive utilization for linksets and links as percentages or in Erlangs in Web pages, enter the **sgm webutil** command:
 - To display utilization as a percentage, enter **sgm webutil percent**. This is the default setting.
 - To show display utilization in Erlangs, enter **sgm webutil erlangs**.

See the [“Working with SGM Statistics Reports” section on page 3-218](#) for more information on send and receive utilization for linksets and links.

- To display the current status of all SGM network statistics report parameters, enter the **sgm statreps status** command.
- To display the timer file for SGM network statistics reports, enter the **sgm statreps timer** command. The timer file is useful for identifying how much time SGM spends gathering report data and generating reports.

- To include only specific nodes in reports, create the user-defined *nodes.include* file and list the nodes in the file. Only those nodes will be included in automatically generated SGM accounting statistics and network statistics reports, as well as in custom reports that were generated with the **default** keyword (or no *node-list* keyword at all) on the **sgm acctstats** or **sgm linkstats** command.

Keep in mind the following considerations:

- If you installed SGM in the default directory, */opt*, then the *nodes.include* file is located at */opt/CSCOSgm/reports/etc/nodes.include*.

If you installed SGM in a different directory, or if you moved the report files directory using the **sgm repdir** command, then the */reports/etc/nodes.include* file is located in that directory.

- Each line in the *nodes.include* file must contain a single node name that matches exactly the real, fully qualified node name of the node, and each line must end with a colon (:). For example:

sgm-75-59a.cisco.com:

sgm-26-51a.cisco.com:

- Wildcard matching is not supported.
- If a node appears in both the *nodes.include* file and the *nodes.exclude* file, it is excluded. That is, excluding a node overrides including the same node.
- If you specify a special include file on the **sgm acctstats** or **sgm linkstats** command, SGM ignores the *nodes.include* file. See the [“Including Specific Nodes in Custom Reports”](#) section on page 3-259 for more information on the special include file.

- To include only specific linksets in reports, create the user-defined *linksets.include* file and list the linksets in the file. Only those linksets will be included in automatically generated SGM accounting statistics and network statistics reports, as well as in custom reports that were generated with the **default** keyword (or no *node-list* keyword at all) on the **sgm acctstats** or **sgm linkstats** command.

Keep in mind the following considerations:

- If you installed SGM in the default directory, */opt*, then the *linksets.include* file is located at */opt/CSCOSgm/reports/etc/linksets.include*.

If you installed SGM in a different directory, or if you moved the report files directory using the **sgm repdir** command, then the */reports/etc/linksets.include* file is located in that directory.

- Each line in the *linksets.include* file must contain a single linkset name that matches exactly the real, fully qualified linkset name of the linkset. For example:

sgm-75-59a.cisco.com:linkset2

sgm-26-51a.cisco.com:linkset1

- Wildcard matching is not supported.
- If a linkset appears in both the *linksets.include* file and the *linksets.exclude* file, it is excluded. That is, excluding a linkset overrides including the same linkset.
- If you specify a special include file on the **sgm acctstats** or **sgm linkstats** command, SGM ignores the *linksets.include* file. See the [“Including Specific Nodes in Custom Reports”](#) section on page 3-259 for more information on the special include file.

- To exclude specific nodes from reports, create the user-defined *nodes.exclude* file and list the nodes in the file. Those nodes will be excluded from automatically generated SGM accounting statistics and network statistics reports, as well as from custom reports that were generated with the **default** keyword (or no *node-list* keyword at all) on the **sgm accstats** or **sgm linkstats** command.

Keep in mind the following considerations:

- If you installed SGM in the default directory, */opt*, then the *nodes.exclude* file is located at */opt/CSCOSgm/reports/etc/nodes.exclude*.

If you installed SGM in a different directory, or if you moved the report files directory using the **sgm repdir** command, then the */reports/etc/nodes.exclude* file is located in that directory.

- Each line in the *nodes.exclude* file must contain a single node name that matches exactly the real, fully qualified node name of the node, and each line must end with a colon (:). For example:

sgm-75-59a.cisco.com:

sgm-26-51a.cisco.com:

- Wildcard matching is not supported.
- If a node appears in both the *nodes.include* file and the *nodes.exclude* file, it is excluded. That is, excluding a node overrides including the same node.
- If you specify a special include file on the **sgm accstats** or **sgm linkstats** command, SGM ignores the *nodes.exclude* file. See the [“Including Specific Nodes in Custom Reports”](#) section on page 3-259 for more information on the special include file.

- To exclude specific linksets from reports, create the user-defined *linksets.exclude* file and list the linksets in the file. Those linksets will be excluded from automatically generated SGM accounting statistics and network statistics reports, as well as from custom reports that were generated with the **default** keyword (or no *node-list* keyword at all) on the **sgm accstats** or **sgm linkstats** command.

Keep in mind the following considerations:

- If you installed SGM in the default directory, */opt*, then the *linksets.exclude* file is located at */opt/CSCOSgm/reports/etc/linksets.exclude*.

If you installed SGM in a different directory, or if you moved the report files directory using the **sgm repdir** command, then the */reports/etc/linksets.exclude* file is located in that directory.

- Each line in the *linksets.exclude* file must contain a single linkset name that matches exactly the real, fully qualified linkset name of the linkset. For example:

sgm-75-59a.cisco.com:linkset2

sgm-26-51a.cisco.com:linkset1

- Wildcard matching is not supported.
- If a linkset appears in both the *linksets.include* file and the *linksets.exclude* file, it is excluded. That is, excluding a linkset overrides including the same linkset.
- If you specify a special include file on the **sgm accstats** or **sgm linkstats** command, SGM ignores the *linksets.exclude* file. See the [“Including Specific Nodes in Custom Reports”](#) section on page 3-259 for more information on the special include file.
- To use PAGER to display the contents of the system reports log, enter the **sgm replog** command. The reports log lists all messages related to the creation and maintenance of SGM reports.

To clear the log and restart the server, enter **sgm replog clear**.

To display the contents of the log in reverse order, with the most recent commands at the beginning of the log, enter **sgm replog -r**.

For more information about the reports log, see the [“Viewing the SGM System Reports Log”](#) section on page 3-279.

- To remove all data from SGM network statistics reports, restoring the reports to a “clean” state, enter the **sgm statreps clean** command.
- To remove all data from one or more SGM custom statistics reports, restoring the reports to a “clean” state, enter the **sgm statreps cleancustom** command.
 - To clean all custom reports, enter **sgm statreps cleancustom**.
 - To clean a single custom report, enter **sgm statreps cleancustom tag**, where *tag* is the ID tag of the custom report you want to clean.

For more information about each of these commands, including valid ranges and default settings, see the “[SGM Commands and Descriptions](#)” section on page B-2.

Each of these commands requires you to be logged in as the root user, as described in the “[Becoming the Root User \(Solaris Only\)](#)” section on page 3-2, or as a super user, as described in the “[Specifying a Super User \(Solaris Only\)](#)” section on page 4-22.

Changing the SGM Reports Directory (Solaris Only)

You can change the directory in which SGM stores reports.

To change the SGM report files directory, log in as the root user, as described in the “[Becoming the Root User \(Solaris Only\)](#)” section on page 3-2, or as a super user, as described in the “[Specifying a Super User \(Solaris Only\)](#)” section on page 4-22, and enter the following commands:

```
# cd /opt/CSCOsgm/bin
```

```
# ./sgm repdir directory
```

where *directory* is the new directory.



Note

This command copies all files in the current directory to the new directory. If you are logged in as the super user, and you do not own the new directory, you might not be able to copy the files. If that is the case, you must specify a directory that you own, or you must log in as the root user.

Viewing SGM Network Statistics Reports

SGM enables you to view hourly and daily statistics summary reports for links and linksets. You can also export the reports.

SGM enables you to view the following network statistics reports for linksets:

- [Viewing the Linkset Statistics Hourly Reports, page 3-228](#)
- [Viewing the Linkset Statistics Daily Summary Reports, page 3-231](#)

SGM enables you to view the following network statistics reports for links:

- [Viewing the Link Statistics Hourly Reports, page 3-234](#)
- [Viewing the Link Statistics Daily Summary Reports, page 3-238](#)
- [Viewing the Five Day Link Utilization Report, page 3-243](#)

SGM enables you to view the following network statistics reports export files:

- [Viewing the Hourly Network Statistics Export Files, page 3-246](#)
- [Viewing the Daily Network Statistics Export Files, page 3-247](#)
- [Viewing the Rolling Network Statistics Export Files, page 3-247](#)

Viewing the Linkset Statistics Hourly Reports

SGM enables you to view hourly summaries of statistics for all linksets known to SGM on the specified date and hour.

To view hourly summaries of statistics, select **Linkset Hourly** from the menu bar of any SGM Network Statistics or Accounting Statistics Web page. SGM displays the Linkset Statistics - Hourly Reports page, which displays hourly linkset statistics summary reports, archived by date, and by hour:

- To view an archived report showing all hourly linkset statistics summary reports for an entire day, click a date. SGM displays the Linkset Statistics - Daily All Hours Report page for that date.
- To view an archived report showing all hourly linkset statistics summary reports for a specific date and hour, click an hour. SGM displays the Linkset Statistics - Hourly Report page for that date and hour.

The Linkset Statistics - Daily All Hours Report and Linkset Statistics - Hourly Report pages both display the following information:

- **Number and Sort Order (in header)**—Displays the number of records in the table, the column by which the table is sorted, and whether the sort is in ascending or descending order.
- **ID**—Internal ID, assigned by SGM, of the selected hourly linkset statistics summary report.

To see the entire detailed report, click the ID. SGM displays the Linkset Data Record page for that linkset, date, and hour, in text format. The Linkset Data Record can be useful when the TAC is debugging problems.

- **Hour**—(Linkset Statistics - Daily All Hours Report page only) Hour for which the link statistics summary report was created, for the specified date.
- **Node**—Name of node for the linkset. To see statistics for only a selected node, click the node name.
- **Linkset Name**—Name of the linkset. To see statistics for only a selected linkset, click the linkset name.
- **Hourly InSrv**—Percentage of time the linkset was in service on the specified date and hour.
- **Long Term InSrv**—Average percentage of time the linkset was in service since SGM polling began for the linkset, or since SGM last reset the averages as a result of bad data.

If a statistics calculation results in an impossible value, such as a number divided by zero, or a number that is impossible based on the configuration, SGM displays **MathError** in the field.

SGM enables you to modify the way information is presented in the Linkset Statistics - Daily All Hours Report and Linkset Statistics - Hourly Report pages:

- You can sort the pages based on the information in one of the columns. See the [“Resizing, Sorting, and Hiding Table Columns”](#) section on page 3-178 for more details.
- To display only the top 10 or bottom 10 records, based on the column by which the table is sorted, click the **Top 10** menu option:
 - If the column is sorted in descending order, displays only the top 10 records.
 - If the column is sorted in ascending order, displays only the bottom 10 records.
 - To switch between the two displays, left-click the column header.
- To display only the top 20 or bottom 20 records, based on the column by which the table is sorted, click the **Top 20** menu option:
 - If the column is sorted in descending order, displays only the top 20 records.
 - If the column is sorted in ascending order, displays only the bottom 20 records.
 - To switch between the two displays, left-click the column header.
- To display only the top 50 or bottom 50 records, based on the column by which the table is sorted, click the **Top 50** menu option:
 - If the column is sorted in descending order, displays only the top 50 records.
 - If the column is sorted in ascending order, displays only the bottom 50 records.
 - To switch between the two displays, left-click the column header.
- To display only the top 100 or bottom 100 records, based on the column by which the table is sorted, click the **Top 100** menu option:
 - If the column is sorted in descending order, displays only the top 100 records.
 - If the column is sorted in ascending order, displays only the bottom 100 records.
 - To switch between the two displays, left-click the column header.

- To display only the top 300 or bottom 300 records, based on the column by which the table is sorted, click the **Top 300** menu option:
 - If the column is sorted in descending order, displays only the top 300 records.
 - If the column is sorted in ascending order, displays only the bottom 300 records.
 - To switch between the two displays, left-click the column header.
- To display only the top 500 or bottom 500 records, based on the column by which the table is sorted, click the **Top 500** menu option:
 - If the column is sorted in descending order, displays only the top 500 records.
 - If the column is sorted in ascending order, displays only the bottom 500 records.
 - To switch between the two displays, left-click the column header.
- To display up to 15,000 records in the table, click the **Max** menu option.
- To reset the **Top** preferences for this Web page to the default settings for the SGM server, click the **DefPrefs** menu option.

Viewing the Linkset Statistics Daily Summary Reports

SGM enables you to view a daily summary of statistics for all linksets known to SGM on a specified date.

To view a daily summary of statistics, select **Linkset Daily** from the menu bar of any SGM Network Statistics or Accounting Statistics Web page. SGM displays the Linkset Statistics - Daily Summary Reports page, which displays daily linkset statistics summary reports, archived by date. Each archived file contains a daily summary of statistics for all linksets known to SGM on a specified date.

To view an archived linkset statistic summary report, click a date. SGM displays the Linkset Statistics - Daily Summary Report page for that date.

The Linkset Statistics - Daily Summary Report table displays the following information:

- **Number and Sort Order (in header)**—Displays the number of records in the table, the column by which the table is sorted, and whether the sort is in ascending or descending order.
- **Node**—Name of node for the linkset. To see statistics for only a selected node, click the node name.
- **Linkset Name**—Name of the linkset. To see statistics for only a selected linkset, click the linkset name.
- **Daily InSrv**—Average percentage of time the linkset was in service on the specified date.
- **Long Term InSrv**—Average percentage of time the linkset was in service since SGM polling began for the linkset, or since SGM last reset the averages as a result of bad data.
- **Daily Low InSrv**—Lowest hourly in-service percentage for the linkset, for the specified date.
- **Low Srv Hour**—Hour in which the lowest in-service percentage occurred, for the specified date.

If a statistics calculation results in an impossible value, such as a number divided by zero, or a number that is impossible based on the configuration, SGM displays **MathError** in the field.

SGM enables you to modify the way information is presented in the Linkset Statistics - Daily Summary Report page:

- You can sort the Linkset Statistics - Daily Summary Report page based on the information in one of the columns. See the [“Resizing, Sorting, and Hiding Table Columns”](#) section on page 3-178 for more details.
- To display only the top 10 or bottom 10 records, based on the column by which the table is sorted, click the **Top 10** menu option:
 - If the column is sorted in descending order, displays only the top 10 records.
 - If the column is sorted in ascending order, displays only the bottom 10 records.
 - To switch between the two displays, left-click the column header.

- To display only the top 20 or bottom 20 records, based on the column by which the table is sorted, click the **Top 20** menu option:
 - If the column is sorted in descending order, displays only the top 20 records.
 - If the column is sorted in ascending order, displays only the bottom 20 records.
 - To switch between the two displays, left-click the column header.
- To display only the top 50 or bottom 50 records, based on the column by which the table is sorted, click the **Top 50** menu option:
 - If the column is sorted in descending order, displays only the top 50 records.
 - If the column is sorted in ascending order, displays only the bottom 50 records.
 - To switch between the two displays, left-click the column header.
- To display only the top 100 or bottom 100 records, based on the column by which the table is sorted, click the **Top 100** menu option:
 - If the column is sorted in descending order, displays only the top 100 records.
 - If the column is sorted in ascending order, displays only the bottom 100 records.
 - To switch between the two displays, left-click the column header.
- To display only the top 300 or bottom 300 records, based on the column by which the table is sorted, click the **Top 300** menu option:
 - If the column is sorted in descending order, displays only the top 300 records.
 - If the column is sorted in ascending order, displays only the bottom 300 records.
 - To switch between the two displays, left-click the column header.

- To display only the top 500 or bottom 500 records, based on the column by which the table is sorted, click the **Top 500** menu option:
 - If the column is sorted in descending order, displays only the top 500 records.
 - If the column is sorted in ascending order, displays only the bottom 500 records.
 - To switch between the two displays, left-click the column header.
- To display up to 15,000 records in the table, click the **Max** menu option.
- To reset the **Top** preferences for this Web page to the default settings for the SGM server, click the **DefPrefs** menu option.

Viewing the Link Statistics Hourly Reports

SGM enables you to view hourly link statistics summary reports for an entire day, or for a specific date and hour.

To view hourly link statistics summary reports, select **Link Hourly** from the menu bar of any SGM Network Statistics or Accounting Statistics Web page. SGM displays the Link Statistics - Hourly Reports page, which displays hourly link statistics summary reports, archived by date, and by hour:

- To view an archived report showing all hourly link statistics summary reports for an entire day, click a date. SGM displays the Link Statistics - Daily All Hours Report page for that date.
- To view an archived report showing all hourly link statistics summary reports for a specific date and hour, click an hour. SGM displays the Link Statistics - Hourly Report page for that date and hour.

The Link Statistics - Daily All Hours Report and Link Statistics - Hourly Report pages both display the following information:

- **Number and Sort Order (in header)**—Displays the number of records in the table, the column by which the table is sorted, and whether the sort is in ascending or descending order.
- **ID**—Internal ID, assigned by SGM, of the selected hourly link statistics summary report.

To see the entire detailed report, click the ID. SGM displays the Link Data Record page for that link, date, and hour, in text format. The Link Data Record can be useful when the TAC is debugging problems.

- **Hour**—(Link Statistics - Daily All Hours Report page only) Hour for which the link statistics summary report was created, for the specified date.
- **Node**—Name of node for the link. To see statistics for only a selected node, click the node name.
- **Link Name**—Name of the link. To see statistics for only a selected link, click the link name.
- **Type**—Type of link. Possible link types are:
 - **HSL**—The link uses the SS7-over-ATM (Asynchronous Transfer Mode) high-speed protocol.
 - **SCTP**—The link uses the Stream Control Transmission Protocol (SCTP) IP transport protocol.
 - **Serial**—The link uses the serial SS7 signaling protocol.
- **Send Util** or **Send Erls**—Average Send Utilization for the link, expressed as either a utilization percentage or a number of Erlangs, for the specified date and hour.

If the planned send capacity is not set for the link, this field displays **NoCap**.

- **L Term Send Util** or **L Term Send Erls**—For the specified date and hour, average Send Utilization for the link, expressed as either a utilization percentage or a number of Erlangs, since SGM polling began for the link, or since SGM last reset the averages as a result of bad data.
- **Recv Util** or **Recv Erls**—Average Receive Utilization for the link, expressed as either a utilization percentage or a number of Erlangs, for the specified date and hour.

If the planned receive capacity is not set for the link, this field displays **NoCap**.

- **L Term Recv Util** or **L Term Recv Erls**—For the specified date and hour, average Receive Utilization for the link, expressed as either a utilization percentage or a number of Erlangs, since SGM polling began for the link, or since SGM last reset the averages as a result of bad data.

If the planned receive capacity is not set for the link, this field displays **NoCap**.

- **Send MSUs**—Total number of MTP3 MSUs sent on the specified date and hour.

- **Recv MSUs**—Total number of MTP3 MSUs received on the specified date and hour.
- **Drop**—Total number of drops on the specified date and hour.
- **Hourly InSrv**—Percentage of time the link was in service on the specified date and hour.
- **Long Term InSrv**—Average percentage of time the link was in service since SGM polling began for the link, or since SGM last reset the averages as a result of bad data.

If a statistics calculation results in an impossible value, such as a number divided by zero, or a number that is impossible based on the configuration, SGM displays **MathError** in the field.

SGM enables you to modify the way information is presented in the Link Statistics - Daily All Hours Report and Link Statistics - Hourly Report pages:

- You can sort the pages based on the information in one of the columns. See the [“Resizing, Sorting, and Hiding Table Columns”](#) section on page 3-178 for more details.
- To display only the top 10 or bottom 10 records, based on the column by which the table is sorted, click the **Top 10** menu option:
 - If the column is sorted in descending order, displays only the top 10 records.
 - If the column is sorted in ascending order, displays only the bottom 10 records.
 - To switch between the two displays, left-click the column header.
- To display only the top 20 or bottom 20 records, based on the column by which the table is sorted, click the **Top 20** menu option:
 - If the column is sorted in descending order, displays only the top 20 records.
 - If the column is sorted in ascending order, displays only the bottom 20 records.
 - To switch between the two displays, left-click the column header.

- To display only the top 50 or bottom 50 records, based on the column by which the table is sorted, click the **Top 50** menu option:
 - If the column is sorted in descending order, displays only the top 50 records.
 - If the column is sorted in ascending order, displays only the bottom 50 records.
 - To switch between the two displays, left-click the column header.
- To display only the top 100 or bottom 100 records, based on the column by which the table is sorted, click the **Top 100** menu option:
 - If the column is sorted in descending order, displays only the top 100 records.
 - If the column is sorted in ascending order, displays only the bottom 100 records.
 - To switch between the two displays, left-click the column header.
- To display only the top 300 or bottom 300 records, based on the column by which the table is sorted, click the **Top 300** menu option:
 - If the column is sorted in descending order, displays only the top 300 records.
 - If the column is sorted in ascending order, displays only the bottom 300 records.
 - To switch between the two displays, left-click the column header.
- To display only the top 500 or bottom 500 records, based on the column by which the table is sorted, click the **Top 500** menu option:
 - If the column is sorted in descending order, displays only the top 500 records.
 - If the column is sorted in ascending order, displays only the bottom 500 records.
 - To switch between the two displays, left-click the column header.
- To display up to 15,000 records in the table, click the **Max** menu option.
- To display only records for links that are not of type **SCTP**, click the **NoSCTP** menu option.

To display all records, including those for links that are of type **SCTP**, click the **YesSCTP** menu option. This is the default setting.

- To display all records, including those for links that do not have planned send and receive capacities, click the **YesNullCaps** menu option.
To display only records for links that have planned send and receive capacities, click the **NoNullCaps** menu option. This is the default setting.
- To reset the **Top**, **SCTP**, and **NullCaps** preferences for this Web page to the default settings for the SGM server, click the **DefPrefs** menu option.

Viewing the Link Statistics Daily Summary Reports

SGM enables you to view a daily summary of statistics for all links known to SGM on a specified date.

To view a daily summary of statistics, use one of the following procedures:

- Select **Web Links > Reports > Network Statistics** from the SGM Main Menu.
- Select **Network Statistics Reports** from the SGM Server Home Page.
- Select **Link Daily** from the menu bar of any SGM Network Statistics or Accounting Statistics Web page.

SGM displays the Link Statistics - Daily Summary Reports page, which displays daily link statistics summary reports are archived by date. Each archived file contains a daily summary of statistics for all links known to SGM on a specified date.

To view an archived link statistic summary report, click a date. SGM displays the Link Statistics - Daily Summary Report page for that date ([Figure 3-1](#)).

Figure 3-80 Link Statistics - Daily Summary Report Page

Link Statistics - Daily Summary Report - 2002-11-03 - Sun																
492 Records - Sorted by Daily Send Utilization - Descending																
Top10	Top20	Top50	Top100	Top300	Top500	Max	DefPrefs	NoSCTP	YesNullCaps							
Node	Link Name	Type	Avg Send Erls	Peak Send Erls	Peak Hour	L Term Erls	Avg Recv Erls	Peak Recv Erls	Peak Hour	L Term Erls	Send MSUs	Recv MSUs	Drop	Daily InSrv	Long Term InSrv	Dai Lov InSrv
sgm-75-59a	[tg3 to 2651b/6]	SCTP	0.82	0.82	4	0.82	0.02	0.02	4	0.02	12.013M	2.9K	0	100.00000	99.7157	100.0
sgm-26-51b	[2651b to tg3/1]	SCTP	0.72	0.72	22	0.72	0.62	0.63	6	0.62	9.852M	9.507M	0	100.00000	99.9881	100.0
sgm-75-59a	[tg3 to 2651b/1]	SCTP	0.62	0.63	6	0.62	0.72	0.72	22	0.72	9.508M	9.852M	0	100.00000	99.7171	100.0
sgm-26-51b	[2651b to 2652b/0]	SCTP	0.36	0.36	0	0.36	0.01	0.01	0	0.01	6.052M	2.9K	0	100.00000	82.6912	100.0
sgm-26-52b	[2652b to 2652d/5]	SCTP	0.36	0.36	0	0.36	0.01	0.01	0	0.01	6.051M	2.9K	0	100.00000	99.9592	100.0
sgm-26-51b	[2651b to tg3/2]	SCTP	0.34	0.34	6	0.34	0.15	0.15	0	0.15	4.668M	1.904M	0	100.00000	99.9881	100.0
sgm-75-70c	[7570c to 2653a/1]	SCTP	0.28	0.28	18	0.28	0.01	0.01	17	0.01	3.891M	2.9K	0	100.00000	99.9767	100.0
sgm-75-70b	[7570b to 7570c/1]	SCTP	0.28	0.28	18	0.28	0.01	0.01	17	0.01	3.891M	2.9K	0	100.00000	99.9683	100.0
sgm-26-52d	[2652d to 7570b/1]	SCTP	0.28	0.28	18	0.28	0.01	0.01	17	0.01	3.891M	2.9K	0	100.00000	99.9827	100.0
sgm-26-52b	[2652b to 2652d/1]	SCTP	0.28	0.28	18	0.28	0.01	0.01	19	0.01	3.891M	2.9K	0	100.00000	99.9594	100.0
sgm-26-51b	[2651b to 2652b/1]	SCTP	0.27	0.27	18	0.27	0.01	0.01	19	0.01	3.718M	2.9K	0	100.00000	82.6804	100.0
sgm-75-59a	[tg3 to 2651b/4]	SCTP	0.25	0.25	0	0.25	0.01	0.01	2	0.01	3.460M	2.9K	0	100.00000	99.7168	100.0
sgm-26-53a	[2653a to 2653d/2]	SCTP	0.24	0.24	19	0.24	0.01	0.01	19	0.01	3.286M	2.9K	0	100.00000	99.9836	100.0

The Link Statistics - Daily Summary Report page displays the following information:

- **Number and Sort Order (in header)**—Displays the number of records in the table, the column by which the table is sorted, and whether the sort is in ascending or descending order.
- **Node**—Name of node for the link. To see statistics for only a selected node, click the node name.
- **Link Name**—Name of the link. To see statistics for only a selected link, click the link name.

- **Type**—Type of link. Possible link types are:
 - HSL**—The link uses the SS7-over-ATM (Asynchronous Transfer Mode) high-speed protocol.
 - SCTP**—The link uses the Stream Control Transmission Protocol (SCTP) IP transport protocol.
 - Serial**—The link uses the serial SS7 signaling protocol.
- **Avg Send Util** or **Avg Send Erls**—Average Send Utilization for the link, expressed as either a utilization percentage or a number of Erlangs, for the specified date.

If the planned send capacity is not set for the link, this field displays **NoCap**.
- **Peak Send Util** or **Peak Send Erls**—Highest hourly Average Send Utilization for the link, expressed as either a utilization percentage or a number of Erlangs, for the specified date.
- **Peak Send Hour**—Hour in which the Peak Send Utilization for the link occurred, for the specified date.
- **L Term Send Util** or **L Term Send Erls**—For the specified date, average Send Utilization for the link, expressed as either a utilization percentage or a number of Erlangs, since SGM polling began for the link, or since SGM last reset the averages as a result of bad data.

If the planned send capacity is not set for the link, this field displays **NoCap**.
- **Avg Recv Util** or **Avg Recv Erls**—Average Receive Utilization for the link, expressed as either a utilization percentage or a number of Erlangs, for the specified date.

If the planned receive capacity is not set for the link, this field displays **NoCap**.
- **Peak Recv Util** or **Peak Recv Erls**—Highest hourly Average Receive Utilization for the link, expressed as either a utilization percentage or a number of Erlangs, for the specified date.
- **Peak Recv Hour**—Hour in which the Peak Receive Utilization for the link occurred, for the specified date.

- **L Term Recv Util** or **L Term Recv Erls**—For the specified date, average Receive Utilization for the link, expressed as either a utilization percentage or a number of Erlangs, since SGM polling began for the link, or since SGM last reset the averages as a result of bad data.
If the planned receive capacity is not set for the link, this field displays **NoCap**.
- **Send MSUs**—Total number of MTP3 MSUs sent on the specified date.
- **Recv MSUs**—Total number of MTP3 MSUs received on the specified date.
- **Drop**—Total number of drops on the specified date.
- **Daily InSrv**—Average percentage of time the link was in service on the specified date.
- **Long Term InSrv**—Average percentage of time the link was in service since SGM polling began for the link, or since SGM last reset the averages as a result of bad data.
- **Daily Low InSrv**—Lowest hourly in-service percentage for the link, for the specified date.
- **Low Srv Hour**—Hour in which the lowest in-service percentage occurred, for the specified date.

If a statistics calculation results in an impossible value, such as a number divided by zero, or a number that is impossible based on the configuration, SGM displays **MathError** in the field.

SGM enables you to modify the way information is presented in the Link Statistics - Daily Summary Report page:

- You can sort the Link Statistics - Daily Summary Report page based on the information in one of the columns. See the [“Resizing, Sorting, and Hiding Table Columns”](#) section on page 3-178 for more details.
- To display only the top 10 or bottom 10 records, based on the column by which the table is sorted, click the **Top 10** menu option:
 - If the column is sorted in descending order, displays only the top 10 records.
 - If the column is sorted in ascending order, displays only the bottom 10 records.
 - To switch between the two displays, left-click the column header.

- To display only the top 20 or bottom 20 records, based on the column by which the table is sorted, click the **Top 20** menu option:
 - If the column is sorted in descending order, displays only the top 20 records.
 - If the column is sorted in ascending order, displays only the bottom 20 records.
 - To switch between the two displays, left-click the column header.
- To display only the top 50 or bottom 50 records, based on the column by which the table is sorted, click the **Top 50** menu option:
 - If the column is sorted in descending order, displays only the top 50 records.
 - If the column is sorted in ascending order, displays only the bottom 50 records.
 - To switch between the two displays, left-click the column header.
- To display only the top 100 or bottom 100 records, based on the column by which the table is sorted, click the **Top 100** menu option:
 - If the column is sorted in descending order, displays only the top 100 records.
 - If the column is sorted in ascending order, displays only the bottom 100 records.
 - To switch between the two displays, left-click the column header.
- To display only the top 300 or bottom 300 records, based on the column by which the table is sorted, click the **Top 300** menu option:
 - If the column is sorted in descending order, displays only the top 300 records.
 - If the column is sorted in ascending order, displays only the bottom 300 records.
 - To switch between the two displays, left-click the column header.

- To display only the top 500 or bottom 500 records, based on the column by which the table is sorted, click the **Top 500** menu option:
 - If the column is sorted in descending order, displays only the top 500 records.
 - If the column is sorted in ascending order, displays only the bottom 500 records.
 - To switch between the two displays, left-click the column header.
- To display up to 15,000 records in the table, click the **Max** menu option.
- To display only records for links that are not of type **SCTP**, click the **NoSCTP** menu option.

To display all records, including those for links that are of type **SCTP**, click the **YesSCTP** menu option. This is the default setting.
- To display all records, including those for links that do not have planned send and receive capacities, click the **YesNullCaps** menu option.

To display only records for links that have planned send and receive capacities, click the **NoNullCaps** menu option. This is the default setting.
- To reset the **Top**, **SCTP**, and **NullCaps** preferences for this Web page to the default settings for the SGM server, click the **DefPrefs** menu option.

Viewing the Five Day Link Utilization Report

The Five Day Link Utilization Report page displays send and receive utilization percentages for all links for the last five (5) days.

To access the Five Day Link Utilization Report page, select **Five Day Link Util** from the menu bar of any SGM Network Statistics or Accounting Statistics Web page. SGM displays the five day utilization report for the specified link.

The Five Day Link Utilization Report page displays the following information:

- **Number and Sort Order (in header)**—Displays the number of records in the table, the column by which the table is sorted, and whether the sort is in ascending or descending order.
- **Node**—Name of node for the link. To see statistics for only a selected node, click the node name.
- **Link Name**—Name of the link. To see statistics for only a selected link, click the link name.

- **Send Util** or **Send Erls**—Send Utilization for the link, expressed as either a utilization percentage or a number of Erlangs, for each of the last five days. If the planned send capacity is not set for the link, this field displays **NoCap**.
- **Recv Util** or **Recv Erls**—Receive Utilization for the link, expressed as either a utilization percentage or a number of Erlangs, for each of the last five days. If the planned receive capacity is not set for the link, this field displays **NoCap**.

If a statistics calculation results in an impossible value, such as a number divided by zero, or a number that is impossible based on the configuration, SGM displays **MathError** in the field.

SGM enables you to modify the way information is presented in the Five Day Link Utilization Report page:

- You can sort the Five Day Link Utilization Report page based on the information in one of the columns. See the [“Resizing, Sorting, and Hiding Table Columns”](#) section on page 3-178 for more details.
- To display only the top 10 or bottom 10 records, based on the column by which the table is sorted, click the **Top 10** menu option:
 - If the column is sorted in descending order, displays only the top 10 records.
 - If the column is sorted in ascending order, displays only the bottom 10 records.
 - To switch between the two displays, left-click the column header.
- To display only the top 20 or bottom 20 records, based on the column by which the table is sorted, click the **Top 20** menu option:
 - If the column is sorted in descending order, displays only the top 20 records.
 - If the column is sorted in ascending order, displays only the bottom 20 records.
 - To switch between the two displays, left-click the column header.

- To display only the top 50 or bottom 50 records, based on the column by which the table is sorted, click the **Top 50** menu option:
 - If the column is sorted in descending order, displays only the top 50 records.
 - If the column is sorted in ascending order, displays only the bottom 50 records.
 - To switch between the two displays, left-click the column header.
- To display only the top 100 or bottom 100 records, based on the column by which the table is sorted, click the **Top 100** menu option:
 - If the column is sorted in descending order, displays only the top 100 records.
 - If the column is sorted in ascending order, displays only the bottom 100 records.
 - To switch between the two displays, left-click the column header.
- To display only the top 300 or bottom 300 records, based on the column by which the table is sorted, click the **Top 300** menu option:
 - If the column is sorted in descending order, displays only the top 300 records.
 - If the column is sorted in ascending order, displays only the bottom 300 records.
 - To switch between the two displays, left-click the column header.
- To display only the top 500 or bottom 500 records, based on the column by which the table is sorted, click the **Top 500** menu option:
 - If the column is sorted in descending order, displays only the top 500 records.
 - If the column is sorted in ascending order, displays only the bottom 500 records.
 - To switch between the two displays, left-click the column header.
- To display up to 15,000 records in the table, click the **Max** menu option.
- To display only records for links that are not of type **SCTP**, click the **NoSCTP** menu option.

To display all records, including those for links that are of type **SCTP**, click the **YesSCTP** menu option. This is the default setting.

- To display all records, including those for links that do not have planned send and receive capacities, click the **YesNullCaps** menu option.
To display only records for links that have planned send and receive capacities, click the **NoNullCaps** menu option. This is the default setting.
- To reset the **Top**, **SCTP**, and **NullCaps** preferences for this Web page to the default settings for the SGM server, click the **DefPrefs** menu option.

Viewing the Hourly Network Statistics Export Files

The Hourly Network Statistics Export Files page displays all archived SGM hourly network statistics summary reports, for all links and linksets known to SGM, for the server to which you are connected, stored as downloadable Zip files.

To access the Hourly Network Statistics Export Files page, select **Hourly Export** from the menu bar of any SGM Network Statistics or Accounting Statistics Web page.

On the Hourly Network Statistics Export Files page, the Zip files are archived by type (linkset or link), date, and hour. For example, **sgmLinksetStats.2002-10-15-08.zip** is the Zip file that contains the hourly linkset statistics summary report for the 8th hour on October 15, 2002.

Each archived Zip file contains a comma-separated value (CSV) text file with an hourly network statistics summary report for all links or linksets that were known to SGM on that date and hour. You can download the Zip files and unzip them.

To download a Zip file, click a filename, then save the file to a location of your choice.

See the [“SGM Link Statistics Hourly Export File Format” section on page F-4](#) for detailed information about the format of hourly link statistics export files.

See the [“SGM Linkset Statistics Hourly Export File Format” section on page F-6](#) for detailed information about the format of hourly link and linkset statistics export files.

Viewing the Daily Network Statistics Export Files

The Daily Network Statistics Export Files page displays all archived SGM daily network statistics summary reports, for all links and linksets known to SGM, for the server to which you are connected, stored as downloadable Zip files.

To access the Daily Network Statistics Export Files page, select **Daily Export** from the menu bar of any SGM Network Statistics or Accounting Statistics Web page.

On the Daily Network Statistics Export Files page, the Zip files are archived by type (linkset or link) and date. For example, **sgmLinksetStats.DailySum.2002-10-15.zip** is the Zip file that contains the daily linkset statistics summary report for October 15, 2002.

Each archived Zip file contains a comma-separated value (CSV) text file with a daily network statistics summary report for all links or linksets that were known to SGM on that date and hour. You can download the Zip files and unzip them.

To download a Zip file, click a filename, then save the file to a location of your choice.

See the [“SGM Link Statistics Daily Export File Format”](#) section on page F-3 for detailed information about the format of daily link statistics export files.

See the [“SGM Linkset Statistics Daily Export File Format”](#) section on page F-5 for detailed information about the format of daily link and linkset statistics export files.

Viewing the Rolling Network Statistics Export Files

The Rolling Network Statistics Export Files page displays concatenated SGM hourly and daily network statistics summary reports, for all links and linksets known to SGM, for the server to which you are connected, stored as downloadable Zip files.

To access the Rolling Network Statistics Export Files page, select **Rolling Export** from the menu bar of any SGM Network Statistics or Accounting Statistics Web page.

On the Rolling Network Statistics Export Files page, the Zip files are archived by type (linkset or link) and number of days (7 or 30). For example:

- **sgmLinksetStats.RollingSevenDayAllHours.zip** is the Zip file that contains the hourly linkset statistics summary reports for the last seven (7) days, concatenated into one comma-separated value (CSV) text file.
- **sgmLinksetStats.Rolling30DayAllDays.zip** is the Zip file that contains the daily linkset statistics summary reports for the last 30 days, concatenated into one comma-separated value (CSV) text file.
- **sgmLinkStats.RollingSevenDayAllHours.zip** is the Zip file that contains the hourly link statistics summary reports for the last seven (7) days, concatenated into one comma-separated value (CSV) text file.
- **sgmLinkStats.Rolling30DayAllDays.zip** is the Zip file that contains the daily link statistics summary reports for the last 30 days, concatenated into one comma-separated value (CSV) text file.

SGM creates a new set of files every hour.

You can download the Zip files and unzip them.

To download a Zip file, click a filename, then save the file to a location of your choice.

See the “[SGM Rolling Network Statistics Export File Formats](#)” section on [page F-7](#) for detailed information about the format of rolling statistics export files.

Viewing SGM Accounting Statistics Reports

SGM enables you to view accounting statistics reports. You can also export the reports.

SGM enables you to view the following accounting statistics reports:

- [Viewing the Accounting Statistics Daily Detail Reports, page 3-249](#)
- [Viewing the Daily Accounting Statistics Export Files, page 3-253](#)

Viewing the Accounting Statistics Daily Detail Reports

SGM enables you to view a daily summary of accounting statistics for SGM on a specified date. Accounting statistics are displayed based on the node, linkset, originating point code (OPC), the destination point code (DPC), the type of SS7 traffic (such as ISUP or SCCP), and whether the traffic passed or failed the Gateway Screening test at the ITP.

To view a daily summary of accounting statistics, use one of the following procedures:

- Select **Web Links > Reports > Accounting Statistics** from the SGM Main Menu.
- Select **Accounting Statistics Reports** from the SGM Server Home Page.
- Select **Accounting Daily** from the menu bar of any SGM Network Statistics or Accounting Statistics Web page.

SGM displays the Accounting Statistics - Daily Detail Reports page, which displays daily accounting statistics reports, archived by date. Each archived file contains a daily summary of accounting statistics for SGM on a specified date.

To view an archived accounting statistic report, click a date. SGM displays the Accounting Statistics - Daily Detail Report page for that date.

To view an archived link statistic summary report, click a date. SGM displays the Link Statistics - Daily Summary Report page for that date ([Figure 3-1](#)).

Figure 3-81 Accounting Statistics - Daily Detail Report Page

Accounting Statistics - Daily Detail Report - 2002-11-03 - Sun											
447 Records - Sorted by Daily Send MSUs - Descending											
Top10	Top20	Top50	Top100	Top300	Top500	Max	DefPrefs				
ID	Node	Linkset Name	Gateway Screening	OPC	DPC	SI	Send MSUs	Recv MSUs	Send Bytes	Recv Bytes	
409	sgm-75-70c	7570c to 7570d	Pass	5.10.4	5.10.3	SNMM	125.18M	1.9K	0	8	
413	sgm-75-70c	7570c to 7570d2	Pass	3.10.4	3.10.3	SNMM	67.38M	0	0	0	
59	sgm-26-51b	2651b to tg3	Pass	5.1.2	5.9.3	SCCP	14.51M	0	333.83M	0	
278	sgm-75-59a	tg3 to 2651b	Pass	5.9.3	5.1.2	SCCP	14.51M	0	333.69M	0	
91	sgm-26-51b	2651b to 2652b	Pass	5.9.3	5.3.4	SCCP	5.44M	0	125.19M	0	
234	sgm-26-52d	2652d to 7570b	Pass	5.9.3	5.3.4	SCCP	5.44M	0	125.18M	0	
163	sgm-26-52b	2652b to 2652d	Pass	5.9.3	5.3.4	SCCP	5.44M	0	125.18M	0	
361	sgm-75-70b	7570b to 7570c	Pass	5.9.4	5.9.3	SCCP	5.44M	0	0	0	
248	sgm-26-53a	2653a to 7570c	Pass	5.10.3	5.3.1	SNMM	5.44M	0	0	0	
283	sgm-75-59a	tg3 to 2651b	Pass	5.9.3	5.3.4	SCCP	5.44M	0	125.13M	0	
93	sgm-26-51b	2651b to 2652b	Pass	5.9.3	5.10.3	ISUP	5.18M	0	67.39M	0	
238	sgm-26-52d	2652d to 7570b	Pass	5.9.3	5.10.3	ISUP	5.18M	0	67.39M	0	
166	sgm-26-52b	2652b to 2652d	Pass	5.9.3	5.10.3	ISUP	5.18M	0	67.39M	0	
368	sgm-75-70b	7570b to 7570c	Pass	5.10.2	5.10.3	SNMM	5.18M	0	0	207.4K	

The Accounting Statistics - Daily Detail Report page displays the following information:

- **Number and Sort Order (in header)**—Displays the number of records in the table, the column by which the table is sorted, and whether the sort is in ascending or descending order.
- **ID**—Internal ID, assigned by SGM, of the selected hourly accounting statistics report.

To see the entire detailed report, click the ID. SGM displays the Accounting Data Record for that date and hour. The Accounting Data Record can be useful when the TAC is debugging problems.

- **Node**—Name of node for the linkset. To see statistics for only a selected node, click the node name.
- **Linkset Name**—Name of the linkset. To see statistics for only a selected linkset, click the linkset name.

- **Gateway Screening**—Indicates whether the traffic passed or failed the Gateway Screening test at the ITP. To see only statistics that passed or failed for a specific linkset, select a linkset and click **Pass** or **Fail**.
- **OPC**—Originating point code of the traffic, which is a unique identifier for each set of statistics. To see only statistics that match a specific OPC for a given linkset, find the linkset and click the point code.
- **DPC**—Destination point code of the traffic. To see only statistics that match a specific DPC for a given linkset, find the linkset and click the point code.
- **SI**—Service indicator, which indicates the type of SS7 traffic, such as **ISUP** or **SCCP**. To see only detailed information for a specific type of SI, click the SI type.
- **Send MSUs**—Total number of MTP3 MSUs sent on the specified date.
- **Recv MSUs**—Total number of MTP3 MSUs received on the specified date.
- **Send Bytes**—Total number of bytes sent on the specified date.
- **Recv Bytes**—Total number of bytes received on the specified date.

If a statistics calculation results in an impossible value, such as a number divided by zero, or a number that is impossible based on the configuration, SGM displays **MathError** in the field.

SGM enables you to modify the way information is presented in the Accounting Statistics - Daily Detail Report page:

- You can sort the Accounting Statistics - Daily Detail Report page based on the information in one of the columns. See the [“Resizing, Sorting, and Hiding Table Columns” section on page 3-178](#) for more details.
- To display only the top 10 or bottom 10 records, based on the column by which the table is sorted, click the **Top 10** menu option:
 - If the column is sorted in descending order, displays only the top 10 records.
 - If the column is sorted in ascending order, displays only the bottom 10 records.
 - To switch between the two displays, left-click the column header.

- To display only the top 20 or bottom 20 records, based on the column by which the table is sorted, click the **Top 20** menu option:
 - If the column is sorted in descending order, displays only the top 20 records.
 - If the column is sorted in ascending order, displays only the bottom 20 records.
 - To switch between the two displays, left-click the column header.
- To display only the top 50 or bottom 50 records, based on the column by which the table is sorted, click the **Top 50** menu option:
 - If the column is sorted in descending order, displays only the top 50 records.
 - If the column is sorted in ascending order, displays only the bottom 50 records.
 - To switch between the two displays, left-click the column header.
- To display only the top 100 or bottom 100 records, based on the column by which the table is sorted, click the **Top 100** menu option:
 - If the column is sorted in descending order, displays only the top 100 records.
 - If the column is sorted in ascending order, displays only the bottom 100 records.
 - To switch between the two displays, left-click the column header.
- To display only the top 300 or bottom 300 records, based on the column by which the table is sorted, click the **Top 300** menu option:
 - If the column is sorted in descending order, displays only the top 300 records.
 - If the column is sorted in ascending order, displays only the bottom 300 records.
 - To switch between the two displays, left-click the column header.

- To display only the top 500 or bottom 500 records, based on the column by which the table is sorted, click the **Top 500** menu option:
 - If the column is sorted in descending order, displays only the top 500 records.
 - If the column is sorted in ascending order, displays only the bottom 500 records.
 - To switch between the two displays, left-click the column header.
- To display up to 15,000 records in the table, click the **Max** menu option.
- To reset the **Top** preferences for this Web page to the default settings for the SGM server, click the **DefPrefs** menu option.

Viewing the Daily Accounting Statistics Export Files

The Daily Accounting Statistics Export Files page displays all archived SGM daily accounting statistics reports for the server to which you are connected, stored as downloadable Zip files.

To access the Daily Accounting Statistics Export Files page, select **Accounting Export** from the menu bar of any SGM Network Statistics or Accounting Statistics Web page.

On the Daily Accounting Statistics Export Files page, the Zip files are archived by date. For example, **sgmAccStats.DailyDetail.2002-10-15.zip** is the Zip file that contains the daily accounting statistics report for October 15, 2002.

Each archived Zip file contains a comma-separated value (CSV) text file with a daily accounting statistics report for that date. You can download the Zip files and unzip them.

To download a Zip file, click a filename, then save the file to a location of your choice.

See the [“SGM Daily and Hourly Accounting Statistics Export File Format” section on page F-2](#) for detailed information about the format of accounting statistics export files.

Generating and Viewing Custom SGM Statistics Reports

SGM enables you to create custom link and linkset statistics summary reports, and custom accounting reports. You can also export the reports.

This section contains the following information:

- [Generating a Custom Network Statistics Report, page 3-254](#)
- [Generating a Custom Accounting Statistics Report, page 3-257](#)
- [Including Specific Nodes in Custom Reports, page 3-259](#)
- [Including Specific Linksets in Custom Reports, page 3-261](#)
- [Excluding Specific Nodes from Custom Reports, page 3-262](#)
- [Excluding Specific Linksets from Custom Reports, page 3-263](#)
- [Viewing the Custom Network Statistics Export Files, page 3-264](#)
- [Viewing a Custom Accounting Statistics Report, page 3-265](#)
- [Viewing a Custom Link Statistics Summary Report, page 3-268](#)
- [Viewing a Custom Linkset Statistics Summary Report, page 3-272](#)

Generating a Custom Network Statistics Report

To create a custom link and linkset statistics summary report for SGM, use the following procedure:

-
- Step 1** Log in as the root user, as described in the “[Becoming the Root User \(Solaris Only\)](#)” section on page 3-2, or as a super user, as described in the “[Specifying a Super User \(Solaris Only\)](#)” section on page 4-22.
- Step 2** Enter the following commands:

```
# cd /opt/CSCOsgm/bin
```

```
# ./sgm linkstats [node-list [id-tag]] [sort-option] [quiet]
```

- (Optional) To include or exclude specific nodes or linksets in the report, use the *node-list* argument. See the following sections for more information:
 - [Including Specific Nodes in Custom Reports, page 3-259](#)
 - [Including Specific Linksets in Custom Reports, page 3-261](#)
 - [Excluding Specific Nodes from Custom Reports, page 3-262](#)
 - [Excluding Specific Linksets from Custom Reports, page 3-263](#)
- (Optional) If you specify a *node-list*, you can also specify an *id-tag* to identify the report. The *id-tag* can be any meaningful character string, but it cannot contain any spaces. The default value for *id-tag* is the process ID of the **sgm linkstats** command.
- (Optional) To specify a sort order for the report, specify one of the following keywords for the *sort-option* argument:
 - **-sis**—Sort based on average in-service percentage for each link (**Daily InSrv**), in descending order.
 - **-sls**—Sort based on the linkset name, in ascending order.
 - **-sos**—Sort based on the average out-of-service percentage for each link, in descending order.
 - **-sru**—Sort based on the average Receive Utilization for each link (**Avg Receive Util** or **Avg Receive Erls**), in descending order.
 - **-ssu**—Sort based on the average Send Utilization for each link (**Avg Send Util** or **Avg Send Erls**), in descending order. This is the default setting.
- (Optional) To disable automatic output to the terminal when running this command in a script, specify the **quiet** keyword. SGM generates the report in export format, which you can view using the SGM Web interface.

For example, to generate a custom link and linkset statistics summary report, that includes only links and linksets associated with node **sgm-2600a.cisco.com**, sorted in ascending order based on the linkset name, and identified by ID tag **test1**, enter the following command:

```
# ./sgm linkstats sgm-2600a.cisco.com test1 -sls
```

- Step 3** (Optional) If this is the first time you are using the **sgm linkstats** command to generate a report, you must enter the command two more times:
- The first entry gets the first set of raw data.
 - The second entry calculates begins calculating useful link and linkset statistics.
 - The third entry continues to calculate statistics, calculates long-term averages, and, if the data being collected appears valid, begins generating the report.

Thereafter, you need only enter this command once to generate the report.

- Step 4** SGM generates the custom link and linkset statistics summary report and stores it in the */custom* directory, identified by its ID tag.

For example, if you entered the command:

```
# ./sgm linkstats sgm-2600a.cisco.com test1 -sls
```

SGM generates the following reports:

```
sgmLinkStats.custom.test1.2002-10-27.zip
```

```
sgmLinksetStats.custom.test1.2002-10-27.zip
```

If you installed SGM in the default directory, */opt*, then the */custom* directory is located at */opt/CSCOsgm/reports/custom*.

If you installed SGM in a different directory, or if you moved the report files directory using the **sgm repdir** command, then the */custom* directory is located in that directory.

- Step 5** For information on viewing the report, see the [“Viewing the Custom Network Statistics Export Files”](#) section on page 3-264.
-

Generating a Custom Accounting Statistics Report

To create a custom accounting statistics report for SGM, use the following procedure:

Step 1 Log in as the root user, as described in the [“Becoming the Root User \(Solaris Only\)”](#) section on page 3-2, or as a super user, as described in the [“Specifying a Super User \(Solaris Only\)”](#) section on page 4-22.

Step 2 Enter the following commands:

```
# cd /opt/CSCOsgm/bin
```

```
# ./sgm accstats [node-list [id-tag]] [sort-option] [quiet]
```

- (Optional) To include or exclude specific nodes or linksets in the report, use the *node-list* argument. See the following sections for more information:
 - [Including Specific Nodes in Custom Reports](#), page 3-259
 - [Including Specific Linksets in Custom Reports](#), page 3-261
 - [Excluding Specific Nodes from Custom Reports](#), page 3-262
 - [Excluding Specific Linksets from Custom Reports](#), page 3-263
- (Optional) If you specify a *node-list*, you can also specify an *id-tag* to identify the report. The *id-tag* can be any meaningful character string, but it cannot contain any spaces. The default value for *id-tag* is the process ID of the **sgm accstats** command.
- (Optional) To specify a sort order for the report, specify one of the following keywords for the *sort-option* argument:
 - **-sdp**—Sort based on the destination point code (DPC) of the node, in descending order.
 - **-sno**—Sort based on the node name, in ascending order.
 - **-sop**—Sort based on the originating point code (OPC) of the node, in descending order.
 - **-srb**—Sort based on number of bytes received, in descending order.
 - **-srm**—Sort based on number of MTP3 MSUs received, in descending order.
 - **-ssb**—Sort based on number of bytes sent, in descending order.

- **-ssi**—Sort numerically based on service indicator (SI), in ascending order.
- **-ssm**—Sort based on number of MTP3 MSUs sent, in descending order.
- (Optional) To disable automatic output to the terminal when running this command in a script, specify the **quiet** keyword. SGM generates the report in export format, which you can view using the SGM Web interface.

For example, to generate a custom accounting statistics report, that includes only information for node **sgm-2600a.cisco.com**, sorted in ascending order based on the node name, and identified by ID tag **test1**, enter the following command:

```
# ./sgm accstats sgm-2600a.cisco.com test1 -sno
```

- Step 3** (Optional) If this is the first time you are using the **sgm accstats** command to generate a report, you must enter the command two more times:
- The first entry gets the first set of raw data.
 - The second entry calculates begins calculating useful accounting statistics.
 - The third entry continues to calculate statistics, calculates long-term averages, and, if the data being collected appears valid, begins generating the report.

Thereafter, you need only enter this command once to generate the report.

- Step 4** SGM generates the custom accounting statistics report and stores it in the */custom* directory, identified by its ID tag.

For example, if you entered the command:

```
# ./sgm accstats sgm-2600a.cisco.com test1 -sno
```

SGM generates the following reports:

```
sgmAccStats.custom.test1.2002-10-27.zip
```

```
sgmAccStats.custom.test1.2002-10-27.zip
```

If you installed SGM in the default directory, */opt*, then the */custom* directory is located at */opt/CSCOsgm/reports/custom*.

If you installed SGM in a different directory, or if you moved the report files directory using the **sgm repdir** command, then the */custom* directory is located in that directory.

- Step 5** For information on viewing the report, see the “[Viewing the Custom Network Statistics Export Files](#)” section on page 3-264.
-

Including Specific Nodes in Custom Reports

When you generate a custom accounting statistics or network statistics report, SGM enables you to limit the report to one or more specific nodes.

- To generate a report that includes all nodes known to SGM, specify **all** in place of the *node-list* argument in the **sgm accstats** or **sgm linkstats** command. For example, the following command generates an accounting statistics report for all nodes:

```
./sgm accstats all
```

- To generate a report for a single node, specify the node name in place of the *node-list* argument in the **sgm accstats** or **sgm linkstats** command. The node name must match exactly the node name as discovered by SGM, including the domain name. For example, the following command generates an accounting statistics report for node **sgm-2600a.cisco.com**:

```
./sgm accstats sgm-2600a.cisco.com
```

- To generate a report that includes only the nodes listed in the user-defined *nodes.include* file, create the file, then specify **default** in place of the *node-list* argument in the **sgm accstats** or **sgm linkstats** command. This is also the default setting for this command, if you do not specify a *node-list* keyword.

For example, the following command generates an accounting statistics report that includes only the nodes specified in the *nodes.include* file:

```
./sgm accstats default
```

Keep in mind the following considerations:

- If you installed SGM in the default directory, */opt*, then the *nodes.include* file is located at */opt/CSCOsgm/reports/etc/nodes.include*.

If you installed SGM in a different directory, or if you moved the report files directory using the **sgm repdir** command, then the */reports/etc/nodes.include* file is located in that directory.

- Each line in the *nodes.include* file must contain a single node name that matches exactly the real, fully qualified node name of the node, and each line must end with a colon (:). For example:

```
sgm-75-59a.cisco.com:
```

```
sgm-26-51a.cisco.com:
```

- Wildcard matching is not supported.
- If a node appears in both the *nodes.include* file and the *nodes.exclude* file, it is excluded. That is, excluding a node overrides including the same node.
- If you specify a special include file on the **sgm accstats** or **sgm linkstats** command, SGM ignores the *nodes.include* file.
- To generate a report that includes only a group of nodes other than the nodes listed in the *nodes.include* file, create a file that contains the list of nodes to included and specify the full path and name of the file in place of the *node-list* argument in the **sgm accstats** or **sgm linkstats** command.

For example, the following command generates an accounting statistics report that includes only the nodes specified in the */opt/CSCOsgm/reports/etc/specialnodes.include* file:

```
./sgm accstats /opt/CSCOsgm/reports/etc/specialnodes.include
```

Keep in mind the following considerations:

- Each line in the special include file must contain a single node name that matches exactly the real, fully qualified node name of the node, and each line must end with a colon (:). For example:

```
sgm-75-59a.cisco.com:
```

```
sgm-26-51a.cisco.com:
```

- Wildcard matching is not supported.
- If you specify a special include file on the **sgm acstats** or **sgm linkstats** command, SGM ignores the *nodes.include*, *linksets.include*, *nodes.exclude*, and *linksets.exclude* files, if they exist.

Including Specific Linksets in Custom Reports

When you generate a custom accounting statistics or network statistics report, SGM enables you to limit the report to one or more specific linksets.

To generate a report that includes only the linksets listed in the user-defined *linksets.include* file, create the file, then specify **default** in place of the *node-list* argument in the **sgm acstats** or **sgm linkstats** command.

For example, the following command generates an accounting statistics report that includes only the linksets specified in the *linksets.include* file:

```
./sgm acstats default
```

Keep in mind the following considerations:

- If you installed SGM in the default directory, */opt*, then the *linksets.include* file is located at */opt/CSCOsgm/reports/etc/linksets.include*.

If you installed SGM in a different directory, or if you moved the report files directory using the **sgm repdir** command, then the */reports/etc/linksets.include* file is located in that directory.

- Each line in the *linksets.include* file must contain a single linkset name that matches exactly the real, fully qualified linkset name of the linkset. For example:

```
sgm-75-59a.cisco.com:linkset2
```

```
sgm-26-51a.cisco.com:linkset1
```

- Wildcard matching is not supported.
- If a linkset appears in both the *linksets.include* file and the *linksets.exclude* file, it is excluded. That is, excluding a linkset overrides including the same linkset.
- If you specify a special include file on the **sgm accstats** or **sgm linkstats** command, SGM ignores the *linksets.include* file.

Excluding Specific Nodes from Custom Reports

When you generate a custom accounting statistics or network statistics report, SGM enables you to exclude one or more specific nodes from the report.

To generate a report that excludes the nodes listed in the user-defined *nodes.exclude* file, create the file, then specify **default** in place of the *node-list* argument in the **sgm accstats** or **sgm linkstats** command.

For example, the following command generates an accounting statistics report that excludes the nodes specified in the *nodes.exclude* file:

```
./sgm accstats default
```

Keep in mind the following considerations:

- If you installed SGM in the default directory, */opt*, then the *nodes.exclude* file is located at */opt/CSCOSgm/reports/etc/nodes.exclude*.

If you installed SGM in a different directory, or if you moved the report files directory using the **sgm repdir** command, then the */reports/etc/nodes.exclude* file is located in that directory.

- Each line in the *nodes.exclude* file must contain a single node name that matches exactly the real, fully qualified node name of the node, and each line must end with a colon (:). For example:

sgm-75-59a.cisco.com:

sgm-26-51a.cisco.com:

- Wildcard matching is not supported.
- If a node appears in both the *nodes.include* file and the *nodes.exclude* file, it is excluded. That is, excluding a node overrides including the same node.
- If you specify a special include file on the **sgm accstats** or **sgm linkstats** command, SGM ignores the *nodes.exclude* file.

Excluding Specific Linksets from Custom Reports

When you generate a custom accounting statistics or network statistics report, SGM enables you to exclude one or more specific linksets from the report.

To generate a report that excludes the linksets listed in the user-defined *linksets.exclude* file, create the file, then specify **default** in place of the *node-list* argument in the **sgm accstats** or **sgm linkstats** command.

For example, the following command generates an accounting statistics report that excludes the linksets specified in the *linksets.exclude* file:

```
./sgm accstats default
```

Keep in mind the following considerations:

- If you installed SGM in the default directory, */opt*, then the *linksets.exclude* file is located at */opt/CSCOSgm/reports/etc/linksets.exclude*.

If you installed SGM in a different directory, or if you moved the report files directory using the **sgm repdir** command, then the */reports/etc/linksets.exclude* file is located in that directory.

- Each line in the *linksets.exclude* file must contain a single linkset name that matches exactly the real, fully qualified linkset name of the linkset. For example:

```
sgm-75-59a.cisco.com:linkset2
```

```
sgm-26-51a.cisco.com:linkset1
```

- Wildcard matching is not supported.
- If a linkset appears in both the *linksets.include* file and the *linksets.exclude* file, it is excluded. That is, excluding a linkset overrides including the same linkset.
- If you specify a special include file on the **sgm accstats** or **sgm linkstats** command, SGM ignores the *linksets.exclude* file.

Viewing the Custom Network Statistics Export Files

The Custom Network Statistics Export Files page displays all archived SGM custom network and accounting statistics reports for the server to which you are connected, stored as downloadable Zip files. Custom statistics reports are those that are generated using the **sgm accstats** and **sgm linkstats** commands.

To access the Custom Network Statistics Export Files page, select **Custom Export** from the menu bar of any SGM Network Statistics or Accounting Statistics Web page.

The Custom Network Statistics Export Files page displays the following information:

- **Export File**—Name of the custom statistics export ZIP file, archived by type (linkset or link), date, and hour. For example, **sgmLinksetStats.custom.20867.2002-10-15-16.zip** is the Zip file that contains the custom linkset statistics summary report with ID tag 20867 for the 16th hour on October 15, 2002.

Each archived Zip file contains a comma-separated value (CSV) text file with a daily statistics report for that date. You can download the Zip files and unzip them.

To download a Zip file, click a filename, then save the file to a location of your choice.

See the “[SGM Custom Network Statistics Export File Formats](#)” section on [page F-2](#) for detailed information about the format of custom statistics export files.

- **ID Tag**—Identifier for the custom report, specified when you entered the **sgm accstats** or **sgm linkstats** command. If you did not specify an ID tag, this field displays the process ID of the command that generated the report.
- **Start**—Date and time the custom report began.
- **Finish**—Date and time the custom report ended.
- **View**—Enables you to view the custom report in HTML or ASCII.

For more information about viewing custom reports, see the following sections:

- [Viewing a Custom Accounting Statistics Report, page 3-265](#)
- [Viewing a Custom Link Statistics Summary Report, page 3-268](#)
- [Viewing a Custom Linkset Statistics Summary Report, page 3-272](#)

Viewing a Custom Accounting Statistics Report

The Accounting Statistics - Custom Detail Report page displays a custom summary of accounting statistics for SGM. Accounting statistics are displayed based on the node, linkset, originating point code (OPC), the destination point code (DPC), the type of SS7 traffic (such as ISUP or SCCP), and whether the traffic passed or failed the Gateway Screening test at the ITP.

To access the Accounting Statistics - Custom Detail Report page, click **HTML** in the **View** column beside a custom accounting statistics report on the Custom Network Statistics Export Files page. SGM displays the custom accounting statistics report.

The Accounting Statistics - Custom Detail Report page displays the following information:

- **Number and Sort Order (in header)**—Displays the number of records in the table, the column by which the table is sorted, and whether the sort is in ascending or descending order.
- **ID**—Internal ID, assigned by SGM, of the selected hourly accounting statistics report.

To see the entire detailed report, click the ID. SGM displays the Accounting Data Record for that date and hour, in text format. The Accounting Data Record can be useful when the TAC is debugging problems.

- **Node**—Name of node for the linkset. To see statistics for only a selected node, click the node name.
- **Linkset Name**—Name of the linkset. To see statistics for only a selected linkset, click the linkset name.
- **Gateway Screening**—Indicates whether the traffic passed or failed the Gateway Screening test at the ITP. To see only statistics that passed or failed for a specific linkset, select a linkset and click **Pass** or **Fail**.
- **OPC**—Originating point code of the traffic, which is a unique identifier for each set of statistics. To see only statistics that match a specific OPC for a given linkset, find the linkset and click the point code.
- **DPC**—Destination point code of the traffic. To see only statistics that match a specific DPC for a given linkset, find the linkset and click the point code.
- **SI**—Service indicator, which indicates the type of SS7 traffic, such as **ISUP** or **SCCP**. To see only detailed information for a specific type of SI, click the SI type.
- **Send MSUs**—Total number of MTP3 MSUs sent on the specified date.
- **Recv MSUs**—Total number of MTP3 MSUs received on the specified date.
- **Send Bytes**—Total number of bytes sent on the specified date.
- **Recv Bytes**—Total number of bytes received on the specified date.

If a statistics calculation results in an impossible value, such as a number divided by zero, or a number that is impossible based on the configuration, SGM displays **MathError** in the field.

SGM enables you to modify the way information is presented in the Accounting Statistics - Custom Detail Report page:

- You can sort the Accounting Statistics - Custom Detail Report page based on the information in one of the columns. See the [“Resizing, Sorting, and Hiding Table Columns”](#) section on page 3-178 for more details.
- To display only the top 10 or bottom 10 records, based on the column by which the table is sorted, click the **Top 10** menu option:
 - If the column is sorted in descending order, displays only the top 10 records.
 - If the column is sorted in ascending order, displays only the bottom 10 records.
 - To switch between the two displays, left-click the column header.
- To display only the top 20 or bottom 20 records, based on the column by which the table is sorted, click the **Top 20** menu option:
 - If the column is sorted in descending order, displays only the top 20 records.
 - If the column is sorted in ascending order, displays only the bottom 20 records.
 - To switch between the two displays, left-click the column header.
- To display only the top 50 or bottom 50 records, based on the column by which the table is sorted, click the **Top 50** menu option:
 - If the column is sorted in descending order, displays only the top 50 records.
 - If the column is sorted in ascending order, displays only the bottom 50 records.
 - To switch between the two displays, left-click the column header.

- To display only the top 100 or bottom 100 records, based on the column by which the table is sorted, click the **Top 100** menu option:
 - If the column is sorted in descending order, displays only the top 100 records.
 - If the column is sorted in ascending order, displays only the bottom 100 records.
 - To switch between the two displays, left-click the column header.
- To display only the top 300 or bottom 300 records, based on the column by which the table is sorted, click the **Top 300** menu option:
 - If the column is sorted in descending order, displays only the top 300 records.
 - If the column is sorted in ascending order, displays only the bottom 300 records.
 - To switch between the two displays, left-click the column header.
- To display only the top 500 or bottom 500 records, based on the column by which the table is sorted, click the **Top 500** menu option:
 - If the column is sorted in descending order, displays only the top 500 records.
 - If the column is sorted in ascending order, displays only the bottom 500 records.
 - To switch between the two displays, left-click the column header.
- To display up to 15,000 records in the table, click the **Max** menu option.
- To reset the **Top** preferences for this Web page to the default settings for the SGM server, click the **DefPrefs** menu option.

Viewing a Custom Link Statistics Summary Report

SGM enables you to view custom link statistics summary reports.

To view a custom link statistics summary report, click **HTML** in the **View** column beside a custom link statistics summary report on the Custom Network Statistics Export Files page. SGM displays the custom link statistics summary report, which is a custom summary of statistics for all links known to SGM when the report was generated.

The Link Statistics - Custom Detail Report page displays the following information:

- **Number and Sort Order (in header)**—Displays the number of records in the table, the column by which the table is sorted, and whether the sort is in ascending or descending order.
- **ID**—Internal ID, assigned by SGM, of the selected hourly link statistics summary report.

To see the entire detailed report, click the ID. SGM displays the Link Data Record page for that link, date, and hour, in text format. The Link Data Record can be useful when the TAC is debugging problems.

- **Hour**—Hour for which the link statistics summary report was created, for the specified date.
- **Node**—Name of node for the link. To see statistics for only a selected node, click the node name.
- **Link Name**—Name of the link. To see statistics for only a selected link, click the link name.
- **Type**—Type of link. Possible link types are:
 - **HSL**—The link uses the SS7-over-ATM (Asynchronous Transfer Mode) high-speed protocol.
 - **SCTP**—The link uses the Stream Control Transmission Protocol (SCTP) IP transport protocol.
 - **Serial**—The link uses the serial SS7 signaling protocol.
- **Send Util** or **Send Erls**—Average Send Utilization for the link, expressed as either a utilization percentage or a number of Erlangs, for the specified date and hour.

If the planned send capacity is not set for the link, this field displays **NoCap**.

- **L Term Send Util** or **L Term Send Erls**—For the specified date and hour, average Send Utilization for the link, expressed as either a utilization percentage or a number of Erlangs, since SGM polling began for the link, or since SGM last reset the averages as a result of bad data.

If the planned send capacity is not set for the link, this field displays **NoCap**.

- **Recv Util** or **Recv Erls**—Average Receive Utilization for the link, expressed as either a utilization percentage or a number of Erlangs, for the specified date and hour.
If the planned receive capacity is not set for the link, this field displays **NoCap**.
- **L Term Recv Util** or **L Term Recv Erls**—For the specified date and hour, average Receive Utilization for the link, expressed as either a utilization percentage or a number of Erlangs, since SGM polling began for the link, or since SGM last reset the averages as a result of bad data.
If the planned receive capacity is not set for the link, this field displays **NoCap**.
- **Send MSUs**—Total number of MTP3 MSUs sent on the specified date and hour.
- **Recv MSUs**—Total number of MTP3 MSUs received on the specified date and hour.
- **Drop**—Total number of drops on the specified date and hour.
- **Hourly InSrv**—Percentage of time the link was in service on the specified date and hour.
- **Long Term InSrv**—Average percentage of time the link was in service since SGM polling began for the link, or since SGM last reset the averages as a result of bad data.

If a statistics calculation results in an impossible value, such as a number divided by zero, or a number that is impossible based on the configuration, SGM displays **MathError** in the field.

SGM enables you to modify the way information is presented in the Link Statistics - Custom Detail Report page:

- You can sort the pages based on the information in one of the columns. See the [“Resizing, Sorting, and Hiding Table Columns”](#) section on page 3-178 for more details.
- To display only the top 10 or bottom 10 records, based on the column by which the table is sorted, click the **Top 10** menu option:
 - If the column is sorted in descending order, displays only the top 10 records.
 - If the column is sorted in ascending order, displays only the bottom 10 records.
 - To switch between the two displays, left-click the column header.
- To display only the top 20 or bottom 20 records, based on the column by which the table is sorted, click the **Top 20** menu option:
 - If the column is sorted in descending order, displays only the top 20 records.
 - If the column is sorted in ascending order, displays only the bottom 20 records.
 - To switch between the two displays, left-click the column header.
- To display only the top 50 or bottom 50 records, based on the column by which the table is sorted, click the **Top 50** menu option:
 - If the column is sorted in descending order, displays only the top 50 records.
 - If the column is sorted in ascending order, displays only the bottom 50 records.
 - To switch between the two displays, left-click the column header.
- To display only the top 100 or bottom 100 records, based on the column by which the table is sorted, click the **Top 100** menu option:
 - If the column is sorted in descending order, displays only the top 100 records.
 - If the column is sorted in ascending order, displays only the bottom 100 records.
 - To switch between the two displays, left-click the column header.

- To display only the top 300 or bottom 300 records, based on the column by which the table is sorted, click the **Top 300** menu option:
 - If the column is sorted in descending order, displays only the top 300 records.
 - If the column is sorted in ascending order, displays only the bottom 300 records.
 - To switch between the two displays, left-click the column header.
- To display only the top 500 or bottom 500 records, based on the column by which the table is sorted, click the **Top 500** menu option:
 - If the column is sorted in descending order, displays only the top 500 records.
 - If the column is sorted in ascending order, displays only the bottom 500 records.
 - To switch between the two displays, left-click the column header.
- To display up to 15,000 records in the table, click the **Max** menu option.
- To display only records for links that are not of type **SCTP**, click the **NoSCTP** menu option.

To display all records, including those for links that are of type **SCTP**, click the **YesSCTP** menu option. This is the default setting.
- To display all records, including those for links that do not have planned send and receive capacities, click the **YesNullCaps** menu option.

To display only records for links that have planned send and receive capacities, click the **NoNullCaps** menu option. This is the default setting.
- To reset the **Top**, **SCTP**, and **NullCaps** preferences for this Web page to the default settings for the SGM server, click the **DefPrefs** menu option.

Viewing a Custom Linkset Statistics Summary Report

SGM enables you to view custom linkset statistics summary reports.

To view a custom linkset statistics summary report, click **HTML** in the **View** column beside a custom linkset statistics summary report on the Custom Network Statistics Export Files page. SGM displays the custom linkset statistics summary report, which is a custom summary of statistics for all linksets known to SGM when the report was generated.

The Linkset Statistics - Custom Detail Report page displays the following information:

- **Number and Sort Order (in header)**—Displays the number of records in the table, the column by which the table is sorted, and whether the sort is in ascending or descending order.
- **ID**—Internal ID, assigned by SGM, of the selected hourly linkset statistics summary report.

To see the entire detailed report, click the ID. SGM displays the Linkset Data Record page for that linkset, date, and hour, in text format. The Linkset Data Record can be useful when the TAC is debugging problems.

- **Hour**—Hour for which the link statistics summary report was created, for the specified date.
- **Node**—Name of node for the linkset. To see statistics for only a selected node, click the node name.
- **Linkset Name**—Name of the linkset. To see statistics for only a selected linkset, click the linkset name.
- **Hourly InSrv**—Percentage of time the linkset was in service on the specified date and hour.
- **Long Term InSrv**—Average percentage of time the linkset was in service since SGM polling began for the linkset, or since SGM last reset the averages as a result of bad data.

If a statistics calculation results in an impossible value, such as a number divided by zero, or a number that is impossible based on the configuration, SGM displays **MathError** in the field.

SGM enables you to modify the way information is presented in the Linkset Statistics - Custom Detail Report page:

- You can sort the pages based on the information in one of the columns. See the [“Resizing, Sorting, and Hiding Table Columns”](#) section on page 3-178 for more details.
- To display only the top 10 or bottom 10 records, based on the column by which the table is sorted, click the **Top 10** menu option:
 - If the column is sorted in descending order, displays only the top 10 records.
 - If the column is sorted in ascending order, displays only the bottom 10 records.
 - To switch between the two displays, left-click the column header.
- To display only the top 20 or bottom 20 records, based on the column by which the table is sorted, click the **Top 20** menu option:
 - If the column is sorted in descending order, displays only the top 20 records.
 - If the column is sorted in ascending order, displays only the bottom 20 records.
 - To switch between the two displays, left-click the column header.
- To display only the top 50 or bottom 50 records, based on the column by which the table is sorted, click the **Top 50** menu option:
 - If the column is sorted in descending order, displays only the top 50 records.
 - If the column is sorted in ascending order, displays only the bottom 50 records.
 - To switch between the two displays, left-click the column header.
- To display only the top 100 or bottom 100 records, based on the column by which the table is sorted, click the **Top 100** menu option:
 - If the column is sorted in descending order, displays only the top 100 records.
 - If the column is sorted in ascending order, displays only the bottom 100 records.
 - To switch between the two displays, left-click the column header.

- To display only the top 300 or bottom 300 records, based on the column by which the table is sorted, click the **Top 300** menu option:
 - If the column is sorted in descending order, displays only the top 300 records.
 - If the column is sorted in ascending order, displays only the bottom 300 records.
 - To switch between the two displays, left-click the column header.
- To display only the top 500 or bottom 500 records, based on the column by which the table is sorted, click the **Top 500** menu option:
 - If the column is sorted in descending order, displays only the top 500 records.
 - If the column is sorted in ascending order, displays only the bottom 500 records.
 - To switch between the two displays, left-click the column header.
- To display up to 15,000 records in the table, click the **Max** menu option.
- To reset the **Top** preferences for this Web page to the default settings for the SGM server, click the **DefPrefs** menu option.

Viewing SGM Point Code Inventory Reports

SGM enables you to view current and daily point code inventory reports. You can also export the reports.

SGM enables you to view the following point code inventory reports:

- [Viewing the Current Point Code Inventory, page 3-276](#)
- [Viewing the Daily Point Code Inventory Daily Reports, page 3-277](#)
- [Viewing the Daily Point Code Inventory Export Files, page 3-278](#)

Viewing the Current Point Code Inventory


The Current Point Code Inventory page displays all point codes that are currently being used by all nodes that are known to SGM.

To access the Current Point Code Inventory page, use one of the following procedures:

- Select **Web Links>Reports>Point Code Inventory** from the SGM Main Menu.
- Select **Point Code Inventory Reports** from the SGM Server Home Page.
- Select **Current Point Codes** from the menu bar of any SGM Point Code Inventory Web page.

SGM displays the Current Point Code Inventory page ([Figure 3-1](#)).

Figure 3-82 Current Point Code Inventory Page

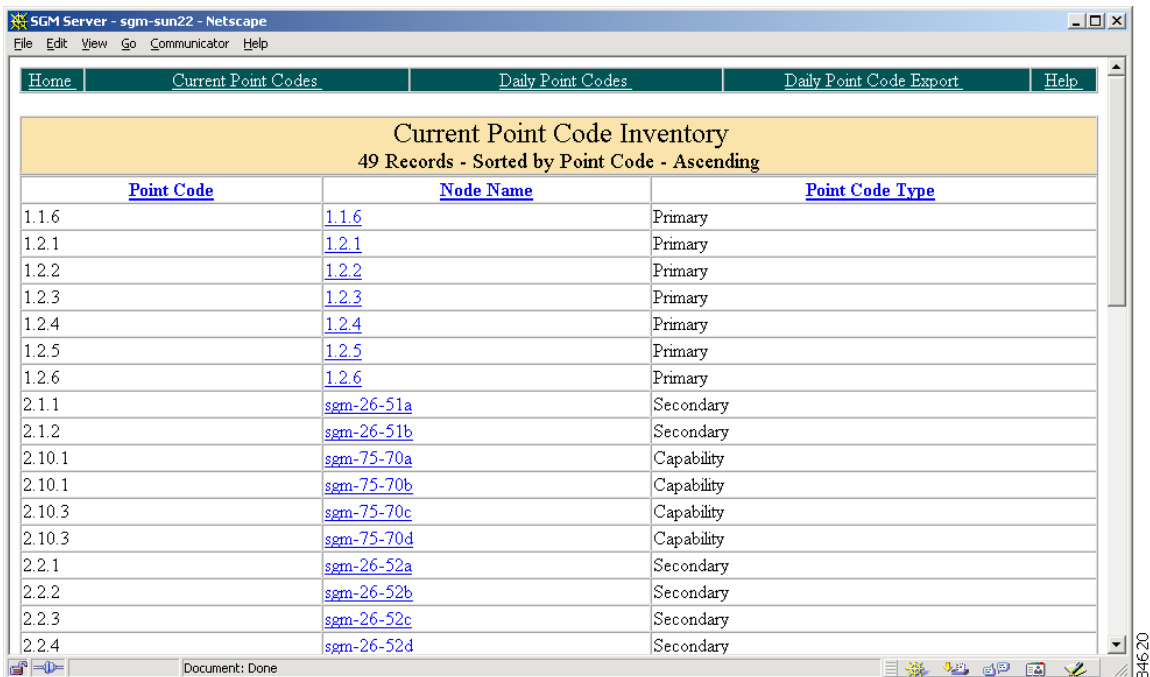

Point Code	Node Name	Point Code Type
1.1.6	1.1.6	Primary
1.2.1	1.2.1	Primary
1.2.2	1.2.2	Primary
1.2.3	1.2.3	Primary
1.2.4	1.2.4	Primary
1.2.5	1.2.5	Primary
1.2.6	1.2.6	Primary
2.1.1	sgm-26-51a	Secondary
2.1.2	sgm-26-51b	Secondary
2.10.1	sgm-75-70a	Capability
2.10.1	sgm-75-70b	Capability
2.10.3	sgm-75-70c	Capability
2.10.3	sgm-75-70d	Capability
2.2.1	sgm-26-52a	Secondary
2.2.2	sgm-26-52b	Secondary
2.2.3	sgm-26-52c	Secondary
2.2.4	sgm-26-52d	Secondary

The Current Point Code Inventory page displays the following information:

- **Number and Sort Order (in header)**—Displays the number of point codes in the table, the column by which the table is sorted, and whether the sort is in ascending or descending order.
- **Point Code**—Point code that is currently being used by a node.

To sort the point codes by point code in ascending order, click the **Point Codes** header. This is the default display.

Click again to sort the point codes in descending order.

- **Node Name**—Name or IP address of the node.

To see detailed information for the node, click the node name.

To sort the point codes by node in descending order, click the **Node Name** header.

Click again to sort the point codes in ascending order.

- **Point Code Type**—Type of point code:
 - **Primary**—Main point code used by a node.
 - **Secondary**—Alternate or backup point code used by a node.
 - **Capability**—Shared by more than one node, each of which is also assigned a “real” point code. Also called an alias point code.

To sort the point codes by type in ascending order, click the **Point Code Type** header.

Click again to sort the point codes in descending order.

Viewing the Daily Point Code Inventory Daily Reports

The Point Code Inventory - Daily Reports page displays all archived SGM daily point code inventory reports for the server to which you are connected.

To access the Point Code Inventory - Daily Reports page, select **Daily Point Codes** from the menu bar of any SGM Point Code Inventory Web page.

On the Point Code Inventory - Daily Reports page, point code inventory reports are archived by date. Each archived file contains a list of all point codes that were being used by all nodes that were known to SGM on that date.

To view an archived point code inventory report, click a date. SGM displays the Point Code Inventory - Date page, which displays the archived list of point codes for that date, including the following information:

- **Number and Sort Order (in header)**—Displays the number of point codes in the table, the column by which the table is sorted, and whether the sort is in ascending or descending order.
- **Point Code**—Point code that was being used by a node on the specified date.

To sort the point codes by point code in ascending order, click the **Point Codes** header. This is the default display.

Click again to sort the point codes in descending order.

- **Node Name**—Name or IP address of the node.

To see detailed information for the node, click the node name.

To sort the point codes by node in descending order, click the **Node Name** header.

Click again to sort the point codes in ascending order.

- **Point Code Type**—Type of point code:
 - **Primary**—Main point code used by a node.
 - **Secondary**—Alternate or backup point code used by a node.
 - **Capability**—Shared by more than one node, each of which is also assigned a “real” point code. Also called an alias point code.

To sort the point codes by type in ascending order, click the **Point Code Type** header.

Click again to sort the point codes in descending order.

Viewing the Daily Point Code Inventory Export Files

The Daily Point Code Inventory Export Files page displays all archived SGM daily point code inventory reports for the server to which you are connected, stored as downloadable Zip files.

To access the Daily Point Code Inventory Export Files page, select **Daily Point Code Export** from the menu bar of any SGM Point Code Inventory Web page.

On the Daily Point Code Inventory Export Files page, the Zip files are archived by date. For example, **sgmPointCodes.DailyInv.2002-10-15.zip** is the Zip file that contains the daily point code inventory report for October 15, 2002.

Each archived Zip file contains a comma-separated value (CSV) text file with a list of all point codes that were being used by all nodes that were known to SGM on that date. You can download the Zip files and unzip them.

To download a Zip file, click a filename, then save the file to a location of your choice.

See the “[SGM Point Code Inventory Export File Format](#)” section on page F-6 for detailed information about the format of point code inventory export files.

Viewing SGM Statistics Reports Logs

SGM enables you to view a log that contains all messages pertaining to SGM reports, and a display of the current values of SGM report parameters and timers.

This section contains the following information:

- [Viewing the SGM System Reports Log, page 3-279](#)
- [Viewing the SGM System Report Parameters and Timers, page 3-280](#)

Viewing the SGM System Reports Log

The SGM System Reports Log - Last Messages page displays the message log for SGM reports for the server to which you are connected, and which is currently running the SGM server.

To access the SGM System Reports Log - Last Messages page, use one of the following procedures:

- Select **System Report Log** from the SGM Server Home Page.
- Select **Log** from the menu bar of any SGM Network Statistics or Accounting Statistics Web page.
- Enter the **sgm replot** command. See the “[SGM Commands and Descriptions](#)” section on page B-2 for more information on the use of this command.

The SGM System Reports Log - Last Messages page displays the following information:

- **Last Update (in header)**—Date and time the information on the page was last updated by SGM.
- **Row**—Message number, assigned to the message by SGM.
- **Time**—Date and time the message was logged.
- **Type**—Type of message. Possible types are:
 - **Error**
 - **Info**
- **Message**—Text of the message.

Viewing the SGM System Report Parameters and Timers

The SGM System Report Parameters and Timers page displays the current values of report parameters and timers for the server to which you are connected, and which is currently running the SGM server.

To access the SGM System Report Parameters and Timers page, select **System Report Parameters** from the SGM Server Home Page, or select **Params** from the menu bar of any SGM Network Statistics or Accounting Statistics Web page.

The SGM System Report Parameters and Timers page displays the following information:

- **Server Name (in header)**—Name of the SGM server for which report parameter and timer settings are being displayed.
- **Report Dir**—Path and name of the directory in which SGM stores reports. The default reports directory is `/opt/CSCOsgm/reports`, but you can change the reports directory using the **sgm repdir** command. For more information, see the description of the **sgm repdir** command in the “[SGM Commands and Descriptions](#)” section on page B-2.
- **Status**—Indicates whether SGM is to generate network statistics reports. For more information, see the description of the **sgm statreps [disable | enable]** command in the “[SGM Commands and Descriptions](#)” section on page B-2.

- **ExportReports**—Indicates whether SGM is to generate network statistics reports in export format. For more information, see the description of the **sgm statreps [export | noexport]** command in the “SGM Commands and Descriptions” section on page B-2.
- **AcctReports**—Indicates whether SGM is to generate accounting statistics reports. For more information, see the description of the **sgm statreps [acct | noacct]** command in the “SGM Commands and Descriptions” section on page B-2.
- **IPLinks**—Indicates whether SGM is to include links that use the Stream Control Transmission Protocol (SCTP) IP transport protocol in network statistics reports. For more information, see the description of the **sgm statreps [iplinks | noiplinks]** command in the “SGM Commands and Descriptions” section on page B-2.
- **NullCaps**—Indicates whether SGM is to include links that do not have planned send and receive capacities in network statistics reports. For more information, see the description of the **sgm statreps [nullcaps | nonullcaps]** command in the “SGM Commands and Descriptions” section on page B-2.
- **TimeMode**—Indicates the time mode for dates in network statistics reports. For more information, see the description of the **sgm statreps timemode [12 | 24]** command in the “SGM Commands and Descriptions” section on page B-2.
- **DiskCheck**—Indicates whether SGM is to verify that a disk has at least 10 MB of space remaining before generating network statistics reports. For more information, see the description of the **sgm statreps [diskcheck | nodiskcheck]** command in the “SGM Commands and Descriptions” section on page B-2.
- **UtilRatio**—Indicates whether SGM is to display a gray background in the Send Utilization or Receive Utilization cell in a network statistics report, if the following condition is met:

Current Utilization > *factor* * **Long-Term Utilization**

For more information, see the description of the **sgm statreps utilratio** command in the “SGM Commands and Descriptions” section on page B-2.

- **ServRatio**—Indicates whether SGM is to display a gray background in the InSrv cell in a network statistics report, if the following condition is met:

Current In-Service < *factor* * **Long-Term In-Service**

For more information, see the description of the **sgm statreps** [**disable** | **enable**] command in the “[SGM Commands and Descriptions](#)” section on page B-2.

- **HourlyAge**—Indicates the maximum number of days SGM is to archive hourly network statistics reports. For more information, see the description of the **sgm statreps hourlyage** and **sgm rephourlyage** commands in the “[SGM Commands and Descriptions](#)” section on page B-2.
- **DailyAge**—Indicates the maximum number of days SGM is to archive daily network statistics reports. For more information, see the description of the **sgm statreps dailyage** and **sgm repdailyage** commands in the “[SGM Commands and Descriptions](#)” section on page B-2.
- **CustomAge**—Indicates the maximum number of days SGM is to archive custom network statistics reports. For more information, see the description of the **sgm repcustage** command in the “[SGM Commands and Descriptions](#)” section on page B-2.
- **WebNames**—Indicates whether SGM is to show real node names or display names in Web pages. For more information, see the description of the **sgm webnames** [**display** | **real**] command in the “[SGM Commands and Descriptions](#)” section on page B-2.
- **WebUtil**—Indicates whether SGM is to display send and receive utilization for linksets and links as percentages or in Erlangs, in Web pages. For more information, see the description of the **sgm webutil** [**percent** | **erlangs**] command in the “[SGM Commands and Descriptions](#)” section on page B-2.
- **Timer file for last report run**—Indicates timer activities during the last report run by SGM. The timer file is useful for identifying how much time SGM spends gathering report data and generating reports.

Printing SGM Windows


You can print most SGM windows, as well as the topology map, for those times when you need hardcopy.

To print an SGM window, use one of the following procedures:

- From most SGM windows, select **File>Print** from the SGM Main Menu.
- From the Topology Window, select **File>Print>All** from the SGM Main Menu, if you want to print the map of your entire network, not just the part that is visible in the current topology map view.
- From the Topology Window, select **File>Print>Display** from the SGM Main Menu, if you want to print just the part of your network that is visible in the current topology map, not the map of your entire network.

SGM displays the Print dialog (Figure 3-83).

Figure 3-83 Print Dialog

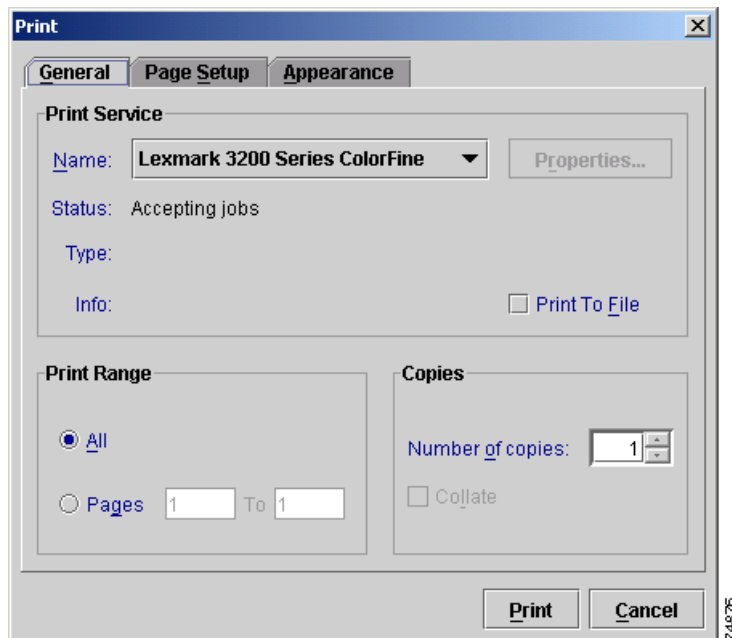

The Print dialog enables you to specify print settings, such as which printer to print to, whether to send output to a file (the default location for the print file is your home directory), and whether to print duplex.

When you are satisfied with your print settings, click **Print**. SGM prints the map.

To exit the Print dialog at any time without printing, click **Cancel**.


Connecting to a New Server

SGM enables you to connect the client to a new SGM server. For example, you can monitor two or more networks from the same SGM client, simply by switching servers. Or, if you have two SGM servers monitoring the same network, and one server fails, the SGM client automatically switches to the secondary server.

To connect the client to a new server:

-
- Step 1** (Optional) If you want to determine the default host name before you connect to the new server, it is contained in the `SERVER_NAME` entry in the `System.properties` file:
- If you installed SGM in the default directory, `/opt`, then the location of the `System.properties` file is `/opt/CSCOsgm/properties/System.properties`.
 - If you installed SGM in a different directory, then the `System.properties` file is located in that directory.
- Step 2** Select **File > Connect to New Server** from the SGM Main Menu. SGM displays the Connect to New Server Dialog (Figure 3-84).

Figure 3-84 Connect to New Server Dialog

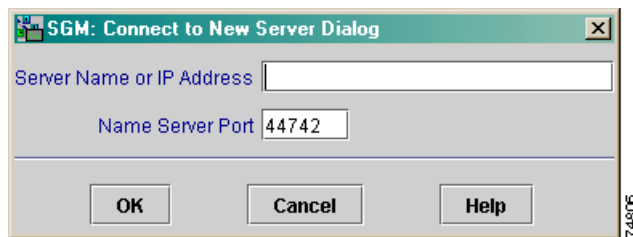

- Step 3** Enter the name of the new server, or its IP address, in the **Server Name or IP Address** field.
- Step 4** Enter the SGM Naming Server UDP port number for the new server in the **Name Server Port** field. The default value is 44742.
- Step 5** Click **OK**. SGM stops the SGM client, then restarts the client connected to the new server.
-

Integrating SGM with Other Products

SGM does not require either CiscoWorks2000 or HP OpenView, but SGM does integrate with those products to provide added value. See the following sections for more information:

- [Integrating SGM with HP OpenView, page 3-285](#)
- [Integrating SGM with CiscoWorks2000, page 3-286](#)

Integrating SGM with HP OpenView

SGM can integrate with HP OpenView during installation, registering to receive forwarded traps. See the “Installing SGM on Solaris” chapter of the *Cisco Signaling Gateway Manager Installation Guide* for more information.

You can also integrate SGM with HP OpenView after installation, using the **sgm trapsetup** command. See the “[SGM Command Reference](#)” section on [page B-1](#) for more information.

If you select HP OpenView as the source of traps in SGM, keep the following considerations in mind:

- If HP OpenView is *not* running when you start the SGM servers, SGM’s sgmTrapReceiver process cannot start and is labeled **Stopped**.
- If HP OpenView *is* running when you start the SGM servers, but ovtrap (HP OpenView’s trap receiver process) is *not* running, sgmTrapReceiver starts and is reported as **Running**, but it cannot receive traps.

- If you start the SGM servers, then start HP OpenView, `sgmTrapReceiver` does *not* start automatically. You must start `sgmTrapReceiver` using the Process Manager.
- If `sgmTrapReceiver` is running and HP OpenView is stopped using the **ovstop** command, `sgmTrapReceiver` stops itself, and does *not* start automatically when HP OpenView is restarted. You must start `sgmTrapReceiver` using the Process Manager.
- If `sgmTrapReceiver` is running and `ovtrapd` stops running for any reason, `sgmTrapReceiver` *cannot* detect that `ovtrapd` is no longer running. `sgmTrapReceiver` continues running but cannot receive traps until `ovtrapd` is restarted. When `ovtrapd` is restarted, `sgmTrapReceiver` begins receiving traps again automatically.

Integrating SGM with CiscoWorks2000

SGM can integrate with CiscoWorks2000 during installation, registering with CiscoWorks2000 as an installed application. See the “Installing SGM on Solaris” and “Installing SGM on Windows” chapters of the *Cisco Signaling Gateway Manager Installation Guide* for more information.

You can also integrate SGM with CiscoWorks2000 after installation, using the **`sgm cw2ksetup`** command. See the “SGM Command Reference” section on [page B-1](#) for more information.

When SGM is integrated with CiscoWorks2000, you can launch the CiscoWorks2000 Device Center and CiscoView from the SGM Main Menu. See the following sections for more information:

- [Launching the CiscoWorks2000 Device Center, page 3-287](#)
- [Launching CiscoView, page 3-287](#)

Launching the CiscoWorks2000 Device Center

The CiscoWorks2000 Device Center provides a number of useful Web-based device-monitoring functions, including reachability trends, response time trends, interface status, Syslog browsing, and a detailed inventory.

To link SGM to the Device Center:

-
- Step 1** Make sure CiscoWorks2000 is installed in the network.
 - Step 2** Select a node that you know CiscoWorks2000 is monitoring, or an associated linkset, in the Linkset, Node, or Topology window. If you select a non-ITP node, or a node with a status of **Unmanaged** or a **Device Type** of **Unknown**, the **CiscoWorks2000** menu option is grayed-out.
 - Step 3** Select **Products > CiscoWorks2000 > Device Center** from the SGM Main Menu.
 - Step 4** At the prompt, enter a CiscoWorks2000 user ID and password. SGM links to CiscoWorks2000 Device Center dashboard.
-

Launching CiscoView

CiscoView provides a real-time, color-coded, graphical representation of Cisco routers and switches. You can use CiscoView to quickly identify an incorrect status on a port or interface. If you are running CiscoWorks2000 on UNIX or Windows, you can access CiscoView through the link to the Web version of CiscoWorks2000.

To link SGM to CiscoView:

-
- Step 1** Select a node that you know CiscoWorks2000 is monitoring, or an associated linkset, in the Linkset, Node, or Topology window. If you select a non-ITP node, or a node with a status of **Unmanaged** or a **Device Type** of **Unknown**, the **CiscoWorks2000** menu option is grayed-out.
 - Step 2** Select **Products > CiscoWorks2000 > CiscoView** from the SGM Main Menu.
 - Step 3** At the prompt, enter a CiscoWorks2000 user ID and password. SGM links to CiscoView.
-

Using the Windows Start Menu

This section includes the following information:

- [Launching the SGM Client, page 3-288](#)
- [Launching the SGM GTT Client, page 3-288](#)
- [Changing the Default SGM Server Name, page 3-289](#)
- [Changing the Default SGM Telnet Path, page 3-289](#)
- [Launching the SGM DOS Prompt, page 3-290](#)
- [Launching the SGM SSL Certificate Tool, page 3-290](#)
- [Uninstalling SGM, page 3-290](#)
- [Viewing the SGM README File, page 3-290](#)

Launching the SGM Client

To launch the SGM Client, use one of the following procedures:

- Double-click the SGM icon on the desktop.
- Select **Start>Programs>Cisco SGM Client>Launch SGM Client** from the Windows Start menu.

SGM launches the SGM Client.

Launching the SGM GTT Client

To launch the SGM GTT Client, select **Start>Programs>Cisco SGM Client>Launch SGM GTT Client** from the Windows Start menu.

SGM launches the SGM GTT Client.

Changing the Default SGM Server Name

If there is a failure of the IP address or host name to which your SGM client is bound, you can change the default SGM server name from the Windows Start menu.

To change the default SGM server name, use the following procedure:

-
- Step 1** Close all open SGM windows.
 - Step 2** Select **Start>Programs>Cisco SGM Client>Modify Default SGM Server Name**. SGM opens a DOS window, and asks you to enter the name of the new default SGM server.
 - Step 3** Type the name of the new default SGM server, and press **Enter**. SGM sets the default server to the new name you entered.
-

See the [“Connecting to a New Server” section on page 3-284](#) for more information about changing the default SGM server name.

Changing the Default SGM Telnet Path

SGM provides a default Telnet interface for Telnet sessions, but you can also specify a path to a different Telnet application, if you prefer.

To specify the path to the new Telnet application, use the following procedure:

-
- Step 1** Select **Start>Programs>Cisco SGM Client>Modify Default SGM Telnet Path**. SGM opens a DOS window, and asks you to enter the full Telnet executable pathname.
 - Step 2** Type the new pathname, and press **Enter**. If you do not enter a new pathname, SGM uses the system default Telnet executable. SGM asks you to enter any special parameters you want to pass to the new Telnet application. The default is **n**, for no special parameters.

- Step 3** Type the special parameters you want to pass to the new Telnet application, and press **Enter**. SGM uses the new Telnet application for all Telnet sessions on the SGM client, such as when you select **View>Telnet to>Router**.
- Step 4** Close the DOS window.
-

Launching the SGM DOS Prompt

To launch a DOS prompt for SGM from the Windows Start menu, select **Start>Programs>Cisco SGM Client>SGM DOS Prompt**. SGM opens a DOS window, starting in the *bin* directory:

- If you installed the SGM client in the default directory, *C:\Program Files*, then the DOS prompt starts at *C:\Program Files\SGMClient\bin*.
- If you installed the SGM client in a different directory, then the *bin* directory is located in that directory.

Launching the SGM SSL Certificate Tool

To launch the SGM SSL Certificate Tool from the Windows Start menu, select **Start>Programs>Cisco SGM Client>SGM SSL Certificate Tool**.

Uninstalling SGM

You can uninstall SGM from the Windows Start menu. For details, see the “Uninstalling SGM” section of the *Cisco Signaling Gateway Manager Installation Guide*.

Viewing the SGM README File

The SGM README file contains late-breaking information about SGM that might not be found in the other product documentation. To open the SGM README file from the Windows Start menu, select **Start>Programs>Cisco SGM Client>View README**.