



Use Cisco Optical Network Controller

Before you begin

[Log into Cisco Optical Network Controller](#)

Once you login, the **Topology** screen is displayed by default. The menu options are displayed on the left panel. You can click on the options and navigate to any specific screen. The options available are given below.

1. Topology
2. Nodes
3. Alien Import
4. Inventory
5. Service Manager
6. Alarms
7. Workspaces
8. Service Assurance
9. Monitoring



Note The following options can be used commonly across multiple application screens.

- The timestamp appears on the top right corner of the screen in all the screens. It follows the UTC time zone. The current date is displayed along with the time.
- Click **Refresh** button to refresh the status of the table content in each of the application screens anytime.
- Click **Show or hide columns** icon to select any columns to be displayed or hidden from the table view anytime.
- Click **Export** to export the details of any table from any application screen to a spreadsheet file.
- Use the **Sort** option to sort the table values and use the **Filter** option to filter the table content as per requirement in each application screen.

-
- [Topology, on page 2](#)

- [Nodes](#), on page 5
- [Add Nodes on Cisco Optical Network Controller](#), on page 8
- [Import Nodes on Cisco Optical Network Controller](#), on page 11
- [Export Nodes on Cisco Optical Network Controller](#), on page 12
- [Edit Nodes on Cisco Optical Network Controller](#), on page 12
- [Delete Nodes on Cisco Optical Network Controller](#), on page 13
- [Alien Import](#), on page 13
- [Network Inventory](#), on page 14
- [Service Manager](#), on page 15
- [Alarms](#), on page 21
- [Workspaces](#), on page 23
- [Service Assurance](#), on page 26
- [Monitoring](#), on page 27
- [General Troubleshooting](#), on page 27

Topology

Topology displays the network along with the nodes and the associated network links on a map. You can toggle between the **Light** and **Dark** modes to view this screen. You can zoom in zoom out the entire screen to view the network and its components. You can select the **OTS** or **OMS** layers as options in the display. The OTS option is used to display the ILA nodes belonging to the network and the OMS option is used to display only the ROADMs and the links between the ROADMs in the given network.

The **Topology** screen is an interactive screen which allows you to click on each node to fetch its information. The links between the nodes are the fiber links connecting each node. You can click on each fiber link to fetch its information when the OTS view is enabled. There can be multiple links connecting each node at any given point in time.

On the top of this screen, there is a panel for displaying the different alarm types and the count of each type of alarm that are part of the network. The alarm types are color coded based on the types of severity as seen in the table below.

Table 1: Alarm Severity

Alarm Type	Description
RED	Critical alarms are displayed in red color.
ORANGE	Major alarms are displayed in orange color.
YELLOW	Minor alarms are displayed in yellow color.



Note Alarm severity type for any warning will appear as **Warning** and for cleared alarms they severity is displayed as **Cleared**.



- Note**
- In the **Topology** screen, the alarms reported at the top left are related to only those nodes that have the geo location defined. Due to this there can be a discrepancy between the alarms reported in the **Topology** and the **Alarms** screen related to these nodes.
 - In the **Topology** screen only the critical, major and minor count alarms are reported, unlike the **Alarms** screen which reports the warnings or cleared alarms.

You can get the node name along with the COSM site name it belongs to and its current state by hovering over each node in the **Topology** map anytime. Right click on any node in the map to select **Resync**, **View in Node UI** and **View Alarms** options.

Table 2: Topology Node Options

Options	Description
Resync	Resync starts the resync of the selected node.
View in Node UI	This option takes you to the COSM site from where you can view the node details.
View Alarms	This option opens the Alarms application in a new tab, from where you can view all the alarms details.


You can also view the information related to the different nodes, links, and the states of each node in the network at any point in time by clicking the **Legends** option. To select any node in the network, use the drop-down box to select the node.

The **EDIT** icon allows you to dynamically move any node to any geo location on the screen. You can click on the **RESET** or **SAVE** button to reset or save the network status that is being displayed in the Topology screen anytime. Use the **CENTER** icon to position the map in the center.

The disconnected nodes are displayed with a cross mark. To cross launch to other related pages use the options appearing when you right click from anywhere on the map. You can click on the **REFRESH** button to refresh the Topology screen with the current status anytime.

Use the **Search nodes by name** option to search for nodes in the topology network. This will fetch and locate the exact node in the map.

Figure 1: Topology Application

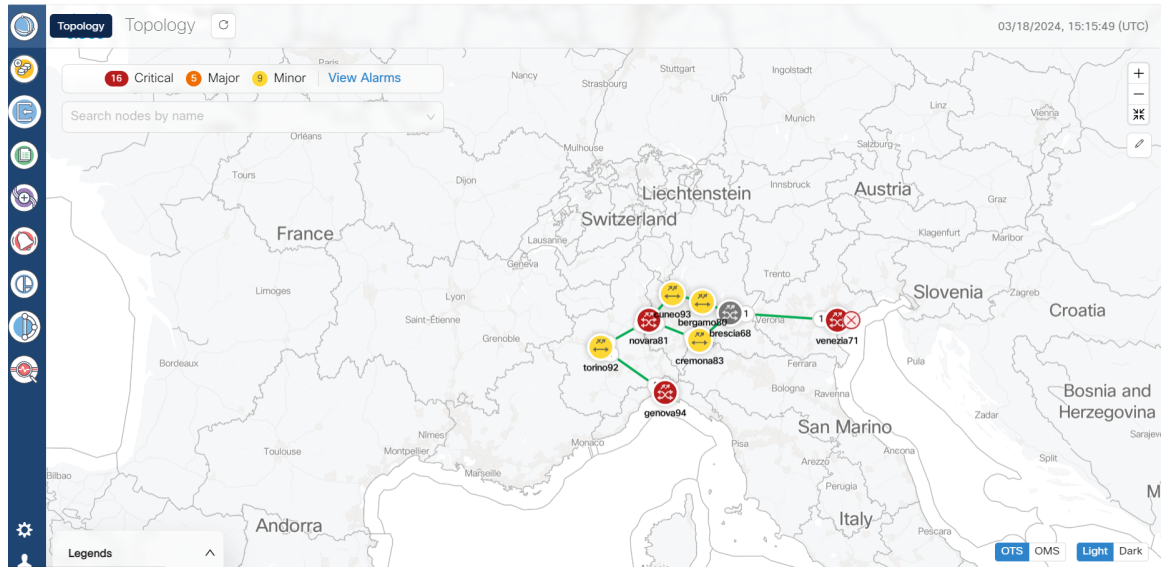**Note**

- The links between each node in the network in the **Topology** map displays the degree numbers which can be right clicked to navigate to the particular **Node UI**. The 'R' in the link refers to Raman Amplified. This is not visible when you select the **OMS** layer option to view the map.
- Click **Legends** in the bottom of the **Topology** screen to view the various representations used in the map as shown below.
- **Nodes:** The different nodes that are part of the network at any given time.
 - **Links:** The different links between nodes along with the amplifier and degree labels.
 - **States:** The different states like operational, critical alarms, link down and minor alarms.
- In the **Topology** map if two nodes have the same geo location then they appear as a single node due to overlapping with each other which is a constraint.
 - If any node in the **Topology** screen does not have a geo location specified, the button in the upper right corner which is used to enter the geo location value displays an orange highlight or dot. This orange dot is used to represent that there is atleast one node which does not have any geo location specified. When you click this orange dot a pop-up menu appears displaying all such nodes that are lacking geo locations. Click the **Edit** icon and then select any node to move it to any desired location on the map. This will add the geo locations to the node. You can move the node and the **Topology** maps the geo location automatically for these node based on the location.
 - Once the geo location is selected, Cisco ONC displays a message to indicate that the **Topology** has been updated and to view the updated changes you must refresh the page by clicking the **Refresh** or **Reload** button.

Troubleshooting in Topology

The most common problems encountered while using the **Topology** application is given below.

- **A pop-up message:** Asking to reload the page appears in the following scenarios.
 - New node onboarded or deleted
 - Geo locations changed
- In case the node, link or icons of the nodes are missing and not displayed in the **Topology** screen then refresh the page.

Nodes

A node refers to a device in the network. You can add a single node or a set of nodes in the form of a batch at any given point in time.

Use the **Nodes** screen to view the details of each node that is part of a service at any given point in time. The **Nodes** table displays the following details for each node:

- **Node Name:** The name of the node. The node name provided by you must match the original node name used in the network. In case of any mismatch or discrepancy issues, the original node name in the network is used for outgoing payloads.
- **Product Type:** The type of product the node belongs to. For example: Cisco Optical Site Manager.
- **IP: Port (NETCONF):** The IP address of each node along with the part number.
- **Site Location:** The location of the site that each node belongs to. For example: COSMp2p83_Site1
- **Geo Location:** The geo location of each node in terms of the latitude and longitude values based on where exactly the node is situated in the world at any given time.




Note If the geo location values that are coming from Cisco Optical Site Manager in a pre-filled format has more than four digits, then the length of the geo location value is truncated to only four digits.

- **Status:** The status of each node within the network to know whether it is discovered or disconnected.

Use the information icon that appears along with each node in this table for viewing the additional details pertaining to each node.

Figure 2: Nodes

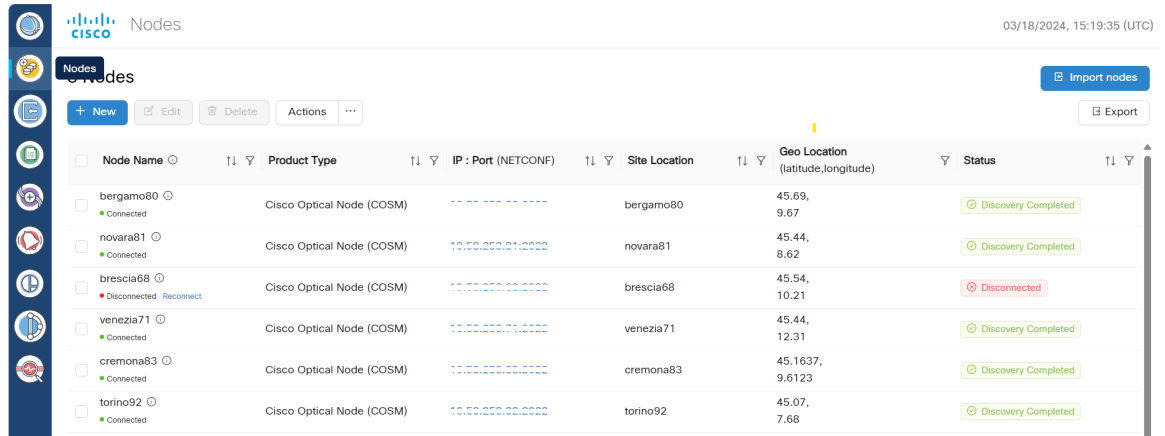


Node Name	Product Type	IP: Port (NETCONF)	Site Location	Geo Location (latitude,longitude)	Status
bergam080	Cisco Optical Node (COSM)	10.100.200.01:2000	bergam080	45.69, 9.67	Discovery Completed
novara81	Cisco Optical Node (COSM)	10.100.200.01:2000	novara81	45.44, 8.62	Discovery Completed
brescia68	Cisco Optical Node (COSM)	10.100.200.01:2000	brescia68	45.54, 10.21	Disconnected
venezia71	Cisco Optical Node (COSM)	10.100.200.01:2000	venezia71	45.44, 12.31	Discovery Completed
cremona83	Cisco Optical Node (COSM)	10.100.200.01:2000	cremona83	45.1637, 9.6123	Discovery Completed
torino92	Cisco Optical Node (COSM)	10.100.200.01:2000	torino92	45.07, 7.68	Discovery Completed

Use the sort or filter options to sort and filter values in the table. You can also cross launch to other supported pages using the links provided in this table.

Use the **Actions** button for synchronizing and configuring the network sync along with reconnecting the various nodes present in the network. There are four options available for this purpose.

- **ReSync**: Used for resyncing any selected node in the network.
- **ReSync All**: Used for resyncing all the nodes in the network.
- **Reconnect**: Used to reconnect any or all the nodes.
- **Configure Network Sync**: Used for **Periodic Network Full Sync**.

Figure 3: Actions

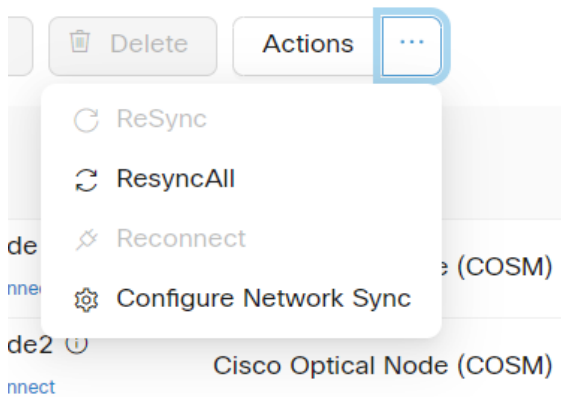

**Note**

- Latitude and longitude values can be set in both Cisco Optical Site Manager and Cisco Optical Network Controller. The following scenarios are possible:

- **Geo location is set in both Cisco Optical Site Manager and Cisco Optical Network Controller:** Cisco Optical Network Controller geo location is used.
- **Geo location is set only in Cisco Optical Site Manager:** Cisco Optical Site Manager geo location is used .
- **Geo location is set only in Cisco Optical Network Controller:** Cisco Optical Network Controller geo location is used.
- **Geo location is not set in either Cisco Optical Network Controller or Cisco Optical Site Manager:** You will be prompted to add the node in **Topology** with the edit button.

For all the cases mentioned above, Cisco Optical Network Controller latitude and longitude value has a higher priority over the Cisco Optical Site Manager latitude and longitude values during the onboarding process. In case the Cisco Optical Network Controller latitude and longitude values are not provided, only then the Cisco Optical Site Manager latitude and longitude values are used.

- Even if the user updates the geo location in Cisco Optical Network Controller, it does not get updated in the Cisco Optical Site Manager device.
- If the geo location values coming from Cisco Optical Site Manager have more than four digits, they are shortened to up to four digits only and displayed.

Troubleshooting in Nodes

The most common problems encountered while adding new nodes are given below.

- **Bulk import failure**

In this case you will get a text file describing the specific issues in the template.

**Note**

Cisco ONC does not allow deletion of a node which involved in the collection or resync process, or while it is a part of any circuit path

- **Nodes possible status**

Node Status	Description	User Action
In Progress	Cisco ONC is collecting information about the onboarded device.	No action is needed, wait for the status to change.
Resync Pending	Cisco ONC has gone out of sync with device and is scheduled for a resync.	Either wait for scheduled resync or start the resync manually.

Resync In-progress	Cisco ONC is re-collecting information about the onboarded devices.	No action is needed, wait for the status to change.
Disconnected	Cisco ONC was unable to establish a session with COSM.	Attempt re-connect or resync. If the problem still persists contact Cisco TAC.
Discovery Completed	All information has been collected from the device and it is ready for operations. Note It is recommended to wait for 60 secs once the device is turned to Discovery Completed state which ensures the device is ready for accepting requests.	

• **Nodes connection status**

Connection State	Description	User Action
Connected	Cisco ONC has successfully established the session with the COSM device provided user/password information.	No action is needed.
Disconnected	Cisco ONC was unable to establish session with COSM.	Attempt re-connect or resync. If the problem still persists contact Cisco TAC.
Waiting for connection	Cisco ONC is attempting to establish connection with COSM.	No action is needed.
Resync_needed	Cisco ONC has gone out of sync with device and is scheduled for a resync.	Either wait for scheduled resync or start the resync manually.

• **De-boarding of a node fails**

- Ensure no circuit is created involving this node.
- Retry deleting the node after sometime.
- In case the deletion fails even after you have retried it multiple times, contact Cisco TAC for further assistance.

Add Nodes on Cisco Optical Network Controller

You can add a single node or a set of nodes in the form of a batch use the procedure given below.

Figure 4: Add New Node

New Node ✕

Name*	Port*
<input type="text"/>	<input type="text"/>
IP*	Protocol*
<input type="text"/>	NETCONF ▼
Site Name*	Site Description
<input type="text"/>	<input type="text"/>

Credentials

Username*	Password*
<input type="text"/>	<input type="text"/>

Geo Location

Latitude	Longitude
<input type="text"/>	<input type="text"/>

Before you begin

To add NCS 1010 nodes to Cisco Optical Network Controller:

- The NCS 1010 nodes must run IOS XR Release 7.11.2.
- Cisco Optical Site Manager must be installed on the node.
- All NCS 1010 nodes must be added to Cisco Optical Network Controller with port number 2022.

- Step 1** Click **Nodes** in the left panel.
- Step 2** Click **New**.
- Step 3** Enter the device details necessary connect to the device as given in the table below.

Table 3: Add new node

Name	Description	Mandatory
Name	Name of the new node you are adding	Yes
IP	IP address of the new node which you are adding.	Yes
Port	The port number of the new node which you are adding.	Yes
Protocol	The protocol used for the new node which you are adding.	Yes
Site Name	The name of the site to which the new node belongs.	Yes
Username	The username you want to set for accessing the new node.	Yes
Password	The password you want to set for accessing the new node.	Yes
Site Description	The description of the site to which the new node belongs.	No
Latitude	The Latitude co-ordinate value you which you want to assign for the new node to set its location.	No
Longitude	The Longitude co-ordinate value you which you want to assign for the new node to set its location.	No

Note

- Ensure that you enter valid a username and password of the device to enable Cisco Optical Network Controller to connect to the device.

- Step 4** Click **Save**. The new node or device is onboarded successfully and added to the **Nodes** table. Cisco Optical Network Controller validates the connection with the onboarded device.

Import Nodes on Cisco Optical Network Controller

Before you begin

For importing the node details from any spreadsheet into the table, use the procedure given below.

- Step 1** Click **Nodes** in the left panel.
- Step 2** Click **Import** to import the table details from external files.
- Step 3** Select the spreadsheet which has all the node details and click **Open**. The new nodes are onboarded and added to the **Nodes** table.

To add the details of the nodes in a bulk format use the **Import nodes** option.

Note Click **Download** option to get the sample template of the bulk import file.

Figure 5: Import Nodes

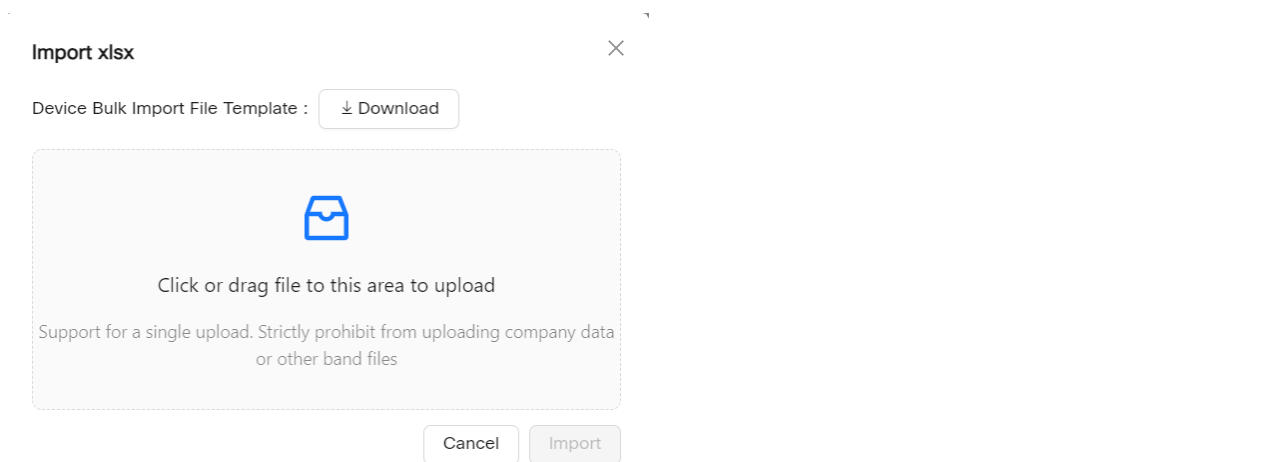


Figure 6: Sample Template of Bulk Import File

A	B	C	D	E	F	G	H	I	J	K
Host Name	Node IP	User Name	Password	Connectivity Type	Connectivity Port	Site Name	Site Description	Type	Latitude	Longitude
sampleDevice_1	10.00.00.99			NETCONF	830	sampleSite_1	sample site description	Cisco Optical Node		

The sample bulk import template has the following fields which need to be filled before importing node details.

Table 4: Bulk Import File Template

Name	Description
Host Name	Name of the host node.

Name	Description
Node IP	The IP address of the node you are adding.
User Name	The username you want to set for accessing the new node.
Password	The password you want to set for accessing the new node.
Connectivity Type	The type of the protocol used for connecting the node.
Connectivity Port	The port number of the node.
Site Name	The name of the site to which the new node belongs.
Site Description	The description of the site to which the new node belongs.
Type	Type of the node.
Latitude	The Latitude co-ordinate value you which you want to assign for the new node to set its location.
Longitude	The Longitude co-ordinate value you which you want to assign for the new node to set its location.

Export Nodes on Cisco Optical Network Controller

Before you begin

For exporting the node details from the table use the procedure given below.

Step 1 Click **Nodes** in the left panel.

Step 2 Click **Export** to export the details to a spreadsheet file.

Edit Nodes on Cisco Optical Network Controller

Before you begin

Use the **Edit** option for editing the node details, use the procedure given below.

Step 1 Click **Nodes** in the left panel.

Step 2 Click **EDIT** after selecting the node from the table.

In the edit mode the Cisco Optical Site Manager (COSM) geo location latitude and longitude values appear as separate values which can also be modified as required. Once the onboarding of the node or device is complete you can edit any selected node and modify its credentials using the **EDIT** option.

Delete Nodes on Cisco Optical Network Controller

Before you begin

Use the **Delete** option to delete one or more nodes at any given time. Follow the procedure given below.

- Step 1** Click **Nodes** in the left panel.
- Step 2** Select the node or nodes to be deleted.
- Step 3** Click **DELETE**.

This will delete the selected node from the table.

Note If the circuits are active and flowing over the nodes or if the resync is in progress, then deletion of the node fails. In this case you will receive an error message for the **Circuit Deletion Failure** when the circuit is spanning through the node.

For example: <Device A> cannot be deleted because circuit spanning across the device.

Alien Import

Before you begin

To import and export the alien device data use the procedure given below.



Note For more details on how to model an alien wavelength or transceiver, etc through Cisco Optical Network Planner (CONP) see [CONP Manage Alien](#).

Figure 7: Alien Import

VID	PID	Data Rate	BR	FEC	Sub Mode
00B08E	NCS1K4-1.2T-K9	R500G	69.4351003125	SD_FEC_27_DE_OFF	N/A
00B08E	NCS1K4-1.2T-K9	R600G	71.96	SD_FEC_27_DE_OFF	N/A
00B08E	NCS1K4-1.2T-K9	R50G	34.72	SD_FEC_27_DE_OFF	N/A
00B08E	NCS1K4-1.2T-K9	R50G	34.45	SD_FEC_27_DE_OFF	N/A
00B08E	NCS1K4-1.2T-K9	R50G	34.18	SD_FEC_27_DE_OFF	N/A
00B08E	NCS1K4-1.2T-K9	R50G	33.92	SD_FEC_27_DE_OFF	N/A
00B08E	NCS1K4-1.2T-K9	R50G	33.67	SD_FEC_27_DE_OFF	N/A
00B08E	NCS1K4-1.2T-K9	R50G	33.41	SD_FEC_27_DE_OFF	N/A
00B08E	NCS1K4-1.2T-K9	R50G	33.16	SD_FEC_27_DE_OFF	N/A

Step 1 Click the **Import** icon on the top of the table.

Cisco Optical Network Controller imports and displays the information of all the alien devices from the XML file. After successful import, the alien device information is available for applications that use the Cisco Optical Network Controller TAPI and REST API.

Step 2 To export the alien device information in JSON or XML formats, click Export and choose the target format from the drop-down list.

Note The XML file which is imported in Cisco ONC is generated by CONP and can have some third-party restrictions on it.

Step 3 Click the **Refresh** button to refresh the equipment status.

Step 4 Click on the **Show or hide columns** icon to select any columns to be displayed or hidden from the table view anytime.

Step 5 Use the page numbers and select the number of rows per page as required for the table display.

Step 6 Use the sort or filter options to sort and filter values in the table.

Network Inventory

Before you begin

This task describes how to view inventory details on Cisco Optical Network Controller. To view or export the inventory details, follow the procedure given below.

Figure 8: Network Inventory

The screenshot shows the Cisco Network Inventory interface. The top left has the Cisco logo and 'Network Inventory' text. The top right shows the date and time: '03/18/2024, 15:37:12 (UTC)'. Below the header, there are 8 nodes listed in a table. The table has columns for Name, Admin State, Equipment Type, Equipment State, Actual Equipment Type, Serial No, and Product ID. The nodes are: torino92 (Shelf 1), cremona83, bergamo80, and genova94. The Shelf 1 node is expanded to show Common Cards (Slot PM0, Slot FT0, Slot FT1, Slot PM1) and Slot Cards (Slot 0, Slot RP0).

Name	Admin State	Equipment Type	Equipment State	Actual Equipment Type	Serial No	Product ID
torino92		ola				
Shelf 1	UNLOCKED	NCS1010-SA	UNLOCKED	NCS1010-SA	FCB2628B0VM	NCS1010-SA
COMMON CARDS						
Slot PM0	UNLOCKED	NCS1K-PSU	UNLOCKED	NCS1010-AC-PSU	APS263000XK	NCS1010-AC-PSU
Slot FT0	UNLOCKED	NCS1K-FAN	UNLOCKED	NCS1010-FAN	FCB2625B1G2	NCS1010-FAN
Slot FT1	UNLOCKED	NCS1K-FAN	UNLOCKED	NCS1010-FAN	FCB2625B1DJ	NCS1010-FAN
Slot PM1	UNLOCKED	NCS1K-PSU	UNLOCKED	NCS1010-AC-PSU	APS263001NQ	NCS1010-AC-PSU
SLOT CARDS						
Slot 0	UNLOCKED	NCS1K-ILA-C	UNLOCKED	NCS1K-ILA-C	FCB2650B0QQ	NCS1K-ILA-C
Slot RP0	UNLOCKED	NCS1K-CNTRL-K9	UNLOCKED	NCS1010-CNTRL-K9	FCB2631B037	NCS1010-CNTRL-K9
cremona83		ola				
bergamo80		ola				
genova94		roadm				

- Step 1** Click **Network Inventory** in the left panel.
Cisco Optical Network Controller displays the Inventory tab. This tab displays all the inventory at the selected site.
- Step 2** Click the node that you want to view the details of.
There is an option for selecting cascading windows for each node to view the Common Cards and the Slot Cards.
- Step 3** (Optional) To export inventory data into an excel file, click **Export**.
- Step 4** Click the **Refresh** button to refresh the inventory status.
- Step 5** Use the filter to search using **Custom Search** or **Quick Search** options.

Service Manager

Before you begin

Circuits are referred to as services. The **Service Manager** screen helps in viewing and creating services. **Service List** page displays the list of services which can be viewed and exported anytime. The **Provision Service** option allows to create a new service.

**Note**

- The recommended number of circuits that you can create or delete at once are up to a maximum of five circuits, even though it is possible to create or delete more than five circuits at any given point in time. In such cases, you can stop provisioning these additional circuits as required. Also, it is recommended that you wait until reaching the final status before you can work with other circuits.

There are circuits called brownfield circuits which can be already present on the devices before the onboarding proceeds. The configuration of these brownfield circuits happens outside Cisco ONC.

Brownfield circuits are circuits that are already existing on devices. The configuration of these circuits is done either outside of Cisco ONC like in COSM or through NCS 1010 CLI. It can be configured through a different instance of Cisco ONC as well which is managing the same network. The brownfield circuit's service names have the following format: `onc_<SourceNode Name>_<DestinationNode Name>_xx`.

To create a new service, follow the procedure given below.

Step 1

Click **Provision Service** in the left panel

Figure 9: Service Manager

The screenshot shows the Cisco Service Manager interface. The top navigation bar includes 'Service List' and 'Provision Service'. Below the navigation, it displays '4 Services' with '55 Total' and a 'Clear Filters' button. The table below lists several services with columns for Name, Type, Source, Destination, Lifecycle State, and Operational status.


Name	Type	Source	Destination	Lifecycle State	Operational
service_genova94_venezia71	OCH-NC	GENOVA	VENEZIA	INSTALLED	DISAB
(Carrier)	OCH-NC	GENOVA 2/CH-15	VENEZIA 3/CH-15	INSTALLED	DISAB
ochnc_demo_genova_cremona_venezia	OCH-NC	GENOVA	VENEZIA	INSTALLED	DISAB
(Carrier)	OCH-NC	GENOVA 2/CH-11	VENEZIA 3/CH-11	INSTALLED	DISAB
service_genova94_cremona93_venezia71_3	OCH-NC	GENOVA	VENEZIA	INSTALLED	ENABI
service_genova94_cuneo93_venezia71	OCH-NC	GENOVA	VENEZIA	INSTALLED	DISAB

Step 2

Click **Provision** and select **OCH-NC** or **OCH-Trail**.

- Note**
- **OCH-NC:** The circuit is created between Add/Drop ports on the terminal OLTs or ROADMs.
 - **OCH-Trail:** The circuit is created between trunk ports of transponders or muxponders.

Figure 10: Provision Service

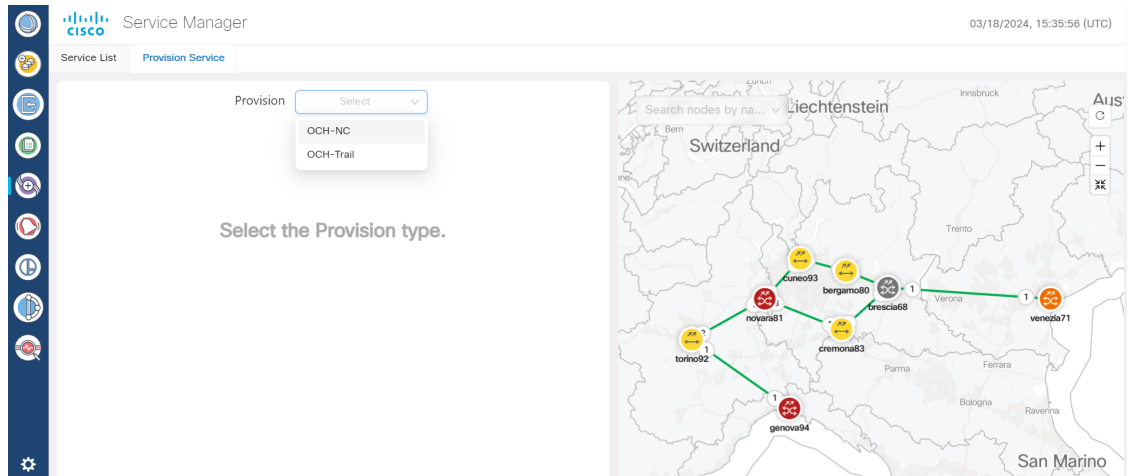

Step 3

Enter the details as per the sequential steps listed for the type of circuit and channel selected along with the other required preferences by clicking **Next** after each page. Fill each tab as per the details given below.

Figure 11: Provision Service Tabs

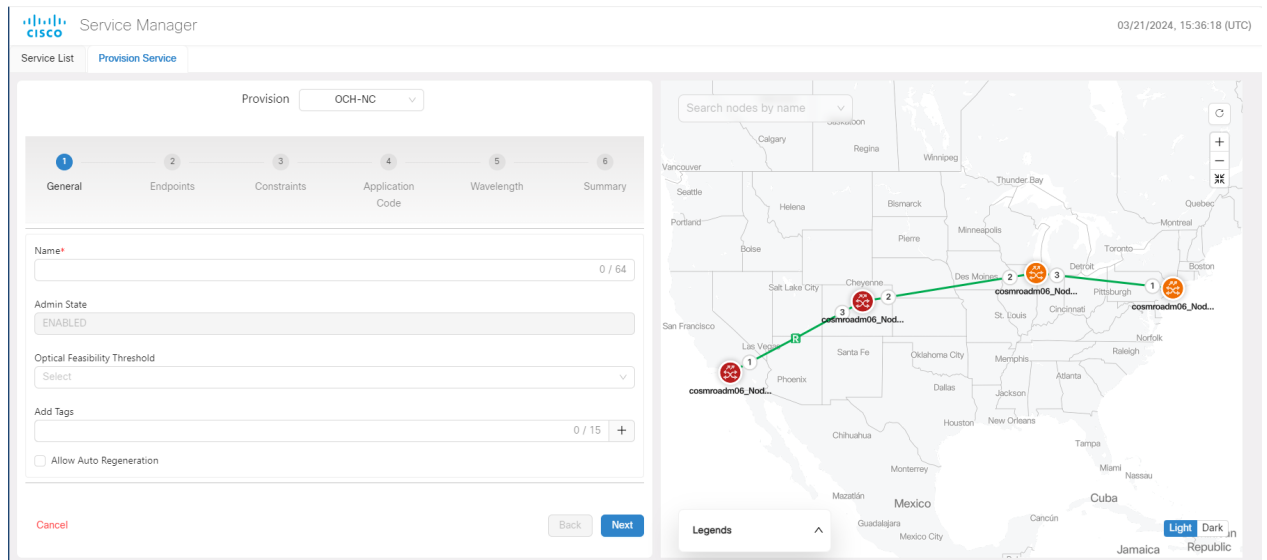


Table 5: Provision Service Tabs

Provision Service Tabs	Description
GENERAL	<p>Name: The unique user defined name of the OCH-NC link.</p> <p>(Allowed characters are a-z, A-Z, 0-9 and _ . <Space not allowed>).</p> <p>Admin State: only ENABLED is supported in 3.1.</p> <p>Optical Feasibility Threshold: Select RED, GREEN, YELLOW or ORANGE.</p> <p>GREEN = mean value YELLOW = +1 sigma ORANGE = +2 sigma RED = +3 sigma</p> <p>Add Tags:</p> <p>If user wants to add any tags to the service.</p> <p>Allow Auto Regeneration: Whether to allow auto regeneration (*not supported in 3.1).</p>
ENDPOINTS	<p>Single Channel/Multiple Channel</p> <p>In case of multi channel between the same Endpoints, the user can add multiple carriers, using the Add button, in a single OCH-NC service provisioning using different channel ports.</p> <p>Endpoint A/Endpoint B:</p> <p>Source and Destination Nodes.</p> <p>This can be selected either from the drop down menu or by clicking on the map icon and then selecting the node.</p> <p>Select port:</p> <p>Source port or Destination port from where you need to provision the service.</p>

Provision Service Tabs	Description
CONSTRAINTS	<p>Optimization goal (optional): The optimization goal (Length or Hops or OSNR).</p> <p>Disjoint from service (optional): The new OCH-NC line is not allowed to use the specified path.</p> <p>Include nodes or links (optional): Used to add Constraints for the new service by selecting from the drop down or by using the map.</p> <p>Exclude nodes or links (optional): Same as the above option but the Constraints here are used for excluding nodes or links.</p> <p>Click the re-cycle icon to remove any of the included or excluded items.</p>
Application Code	<ul style="list-style-type: none"> ◦ Customer Name: The Customer name. ◦ Product ID: The product ID. ◦ FEC: The FEC depending on the product, for example, CFEC or OFEC depending on the previous selection. ◦ Data Rate: The data rate supported by the selected product. ◦ Baud Rate: The baud rate supported by the selected product. ◦ Sub Mode: This may appear depending on the other settings. <p>Reload application code: Use this for a allenWL recently imported with Alien Import feature to reload the list of the Application code available for OCHNC provisioning.</p> <p>Reset can be used for resetting all the fields.</p>
Wavelength	<p>Central Frequency (THz): This can be filled in two ways.</p> <ul style="list-style-type: none"> • By filling the frequency value in the field. • By spectrum occupancy
Summary:	Summary of all the previous five steps given above.

Step 4 Click **Preview** to the preview the circuit before it is created.

Step 5 Click **Finish** to create the circuit.

Step 6 Click **OK** once the circuit is provisioned successfully.

The newly provisioned circuit appears in the **Service List** table once the provisioning is complete. The **Lifecycle State** for the new circuit appears as **PLANNED** initially and later changes to **INSTALLED**.

Step 7 Click **Edit** option to edit any selected service from the table.

Step 8 Click **Delete** option to delete a selected service from the table.

Step 9 Click + icon after selecting any node to expand the service and view its carriers.

Carriers can be of either single or multiple service types. Multiple carriers can have the same Endpoints over different channels.

Step 10 While provisioning a service you can also click and select any object from the map and that object's details gets added in the Endpoints tab automatically.

Troubleshooting in Service Manager

The most common problems encountered while using the **Service Manager** application is given below.

Some PCE error codes which you might encounter while provisioning the service are given below.

- [PCE-PR00003] - Failed for waves selector: [PCE-EXC00002] - Carrier 1 source wave (XXXXXXXX-XXXX (XXXX.XX)) and Destination one (XXXXXXXX-XXXX (XXXX.XX)) differs
- [PCE-WAL00048] - Requested central frequency XXX,XXX is out of supported range
- [PCE-WAL00026] - No free spectrum available to allocate MCH with central frequency XXX.XXX.
- [PCE-PR00001] - No routes available
- [PCE-WAL00026] - No free spectrum available to allocate MCH with central frequency XXX.XXX.x
- [PCE-PR00026] - Include constraint [Site uuid] not matched
- [PCE-PR00018] - Optical validation failed: ZONE_RED worse than ZONE_GREEN
- [PCE-PR00004] - Failed to evaluate optical path: [PCE-OV00016] - [Fiberspan UUID]: Invalid fiberType: [null value]

The probable scenarios in which the services can go to the **Pending Removal** State due to configuration failures and recovery steps are given below:

Failure Scenario	Cisco ONC Error	Recovery Step
COSM Node gets disconnected as soon as a service is provisioned in CONC	Config Failure	Delete the circuit and reprovision from the CONC.
COSM nodes are in sync state during CONC provisioning.	Config Failure	Check the COSM node and wait for synchronisation to complete.
NCS 1010 Devices under COSM Nodes are locked	Config Failure	<ul style="list-style-type: none"> • Check COSM and unlock the NCS 1010 device. • Verify COSM synchronisation status to be completed.

COSM node Restart during provisioning	Config Failure	Wait for CONC to re-establish the connection successfully after restart and its status moved to Discovery Completed in CONC.
Reload of the NCS 1010 device during provisioning from CONC	Config Failure	<ul style="list-style-type: none"> • Wait for the reload to complete on NCS 1010 device. • Verify the synchronisation is complete on COSM Node. • Wait for CONC to reestablish the connection successfully with COSM Node and its status moved to Discovery Completed.
Stale entries present in NCS 1010 while no cross connects present on COSM Nodes	Config Failure	<ul style="list-style-type: none"> • Clear the NCS1010 stale entries. • Wait for COSM node to complete the synchronisation.
Xcons Present in COSM Node along with NCS 1010	Config Failure	<ul style="list-style-type: none"> • Clear the XCONS on COSM and NCS 1010. • Wait for COSM node to complete the synchronisation and Discovery completed status.

Alarms

Before you begin

The **Alarms** screen displays all the alarm details for each node based on the severity level. You can view both the active alarms and the previously active alarms in this screen.

Figure 12: Alarms

Node Name	Severity	Alarm Type	Time Stamp	Object	Description	Service Affect
novara81	Critical	LOS-P	03/18/2024, 15:01:55	OTS: 1/0/[AD 4-11]-1-RX	Incoming Payload Signal Absent	SA
cuneo93	Warning	USER-LOGIN	03/18/2024, 15:01:05	SYSTEM	Login of User	NSA
brescia68	Major	NE-DISCONNECTED	03/18/2024, 14:21:21	DEVICE: 10.58.253.68	Connection To Managed NE Lost	NSA
brescia68	Warning	USER-LOGOUT	03/18/2024, 14:14:39	SYSTEM	Logout of User	NSA
brescia68	Warning	USER-LOGIN	03/18/2024, 13:52:57	SYSTEM	Login of User	NSA
torino92	Minor	LIC-SIA-OUT-OF-COMPL-GP-REM	03/17/2024, 14:09:57	MODULE: 1/RPO	SW Upgrade is still allowed as SIA Grace Period is remaining	NSA
genova94	Warning	T-UAS-SM	03/16/2024, 09:53:29	OTU: 5/0/7	PM TCA, NA, 15MIN, NA, threshold=500, current value=500	NSA

For viewing the active alarms using **Alarms** tab and the other for previous alarms using **History** tab.

Figure 13: Alarms History

Node Name	Severity	Service Affect	Alarm Type	Time Stamp	Object	Description
cosmp2p_s25_Node2	Cleared	SA	OPWR-LFAIL	03/28/2024, 09:10:53	OTC: onc_BhQLCM9RCznuiv4opl5i7X1F9 path1: OTS:1/0/LINE-2-TX	Optical
cosmp2p_s25_Node3	Cleared	SA	OPWR-LFAIL	03/28/2024, 09:10:44	OTC: onc_n3dJatSckNrBtKtUqVhPxHVEY path2: OTS:1/0/LINE-TX	Optical
cosmroadm_s4_Node6	Major	NSA	FPD-UPG-REQUIRED	03/25/2024, 10:02:54	MODULE: 3/0	Firmwa
cosmp2p_s25_Node2	Cleared	SA	OPWR-LFAIL	03/28/2024, 09:10:53	OTC: onc_NniG7nveY6TKX3n0AqhJAgxkl path2: OTS:1/0/LINE-0-TX	Optical

- Step 1** Click **Alarms** in the left panel.
- Step 2** Select the **Alarms** tab to view the active alarms of each node.
- Step 3** Click **Annotation** to add user notes to any alarm, select the node and click **Add**. This will send a notification to the user for the alarm. You can add multiple notes to multiple alarms in the form of a list.
- Step 4** Click **Change Status** to acknowledge or unacknowledged alarms.
- Step 5** Click **History** to view the inactive or previous alarms. The details of each alarm based on each node and alarm type are displayed in the form of a cascading list and tables. Use the **Custom Date Range** Custom Date Range drop down option to view the history alarms based on different dates or time periods.

Figure 14: Alarm History Expanded View

The screenshot displays the 'Alarms History' view in the Cisco Optical Network Controller. It shows a total of 399 alarms, with a filter applied for 'RAVENNA' and a 'Cleared' status. The main table lists 4 alarms with the following details:

Severity	Event Time
Critical	04/01/2024, 08:58:08
Cleared	04/01/2024, 08:58:29
Critical	04/01/2024, 09:05:40
Cleared	04/01/2024, 09:05:41

Additional details shown include '4 Alarms Status' and '0 User Notes'. The interface also features a sidebar with navigation icons, a top navigation bar with 'Alarms' and 'History' tabs, and a right-hand panel with 'Refresh' and 'Export' buttons.

Step 6 Click any cross-launch icon for any node to cross launch to the linked COSM device.

Step 7 Click **Export** to export the alarms details.

Step 8 Click **Refresh** button to refresh the alarms status.

Note If you apply a filter and click the **Refresh** button, the status is refreshed as per the filter you have applied.

Step 9 Use the filter option to custom search the alarm details.

Note When you apply any filter in the Alarms screen, the **Critical**, **Major**, **Minor** and **Warning** counters they do not update their values as per the individual status of the alarms but only the count of each type of alarm.

Step 10 Use the **Sort** option to sort the alarm details based on each alarm type.

Step 11 Click on **Critical**, **Major**, **Minor** alarm types to filter and display the alarms belonging to each type. Click on **Warning** to display the list of warnings.

Workspaces

Before you begin

Workspaces option allows you to manage different workflows on a daily basis. The multiple standalone applications can interact with each other anytime and are displayed in multiple panels. The workflows available are **Network Monitoring** and **Circuit Monitoring**.

Figure 15: Workspaces


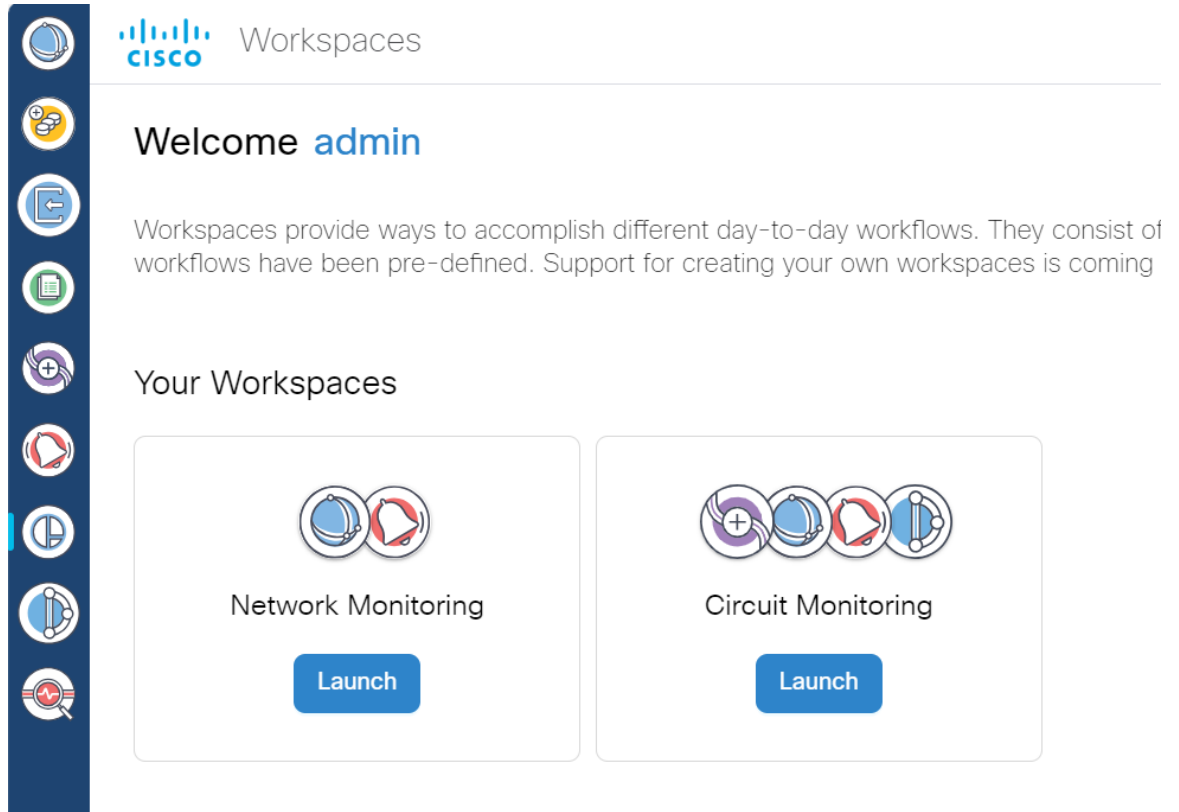



Figure 16: Workspaces Network Monitoring



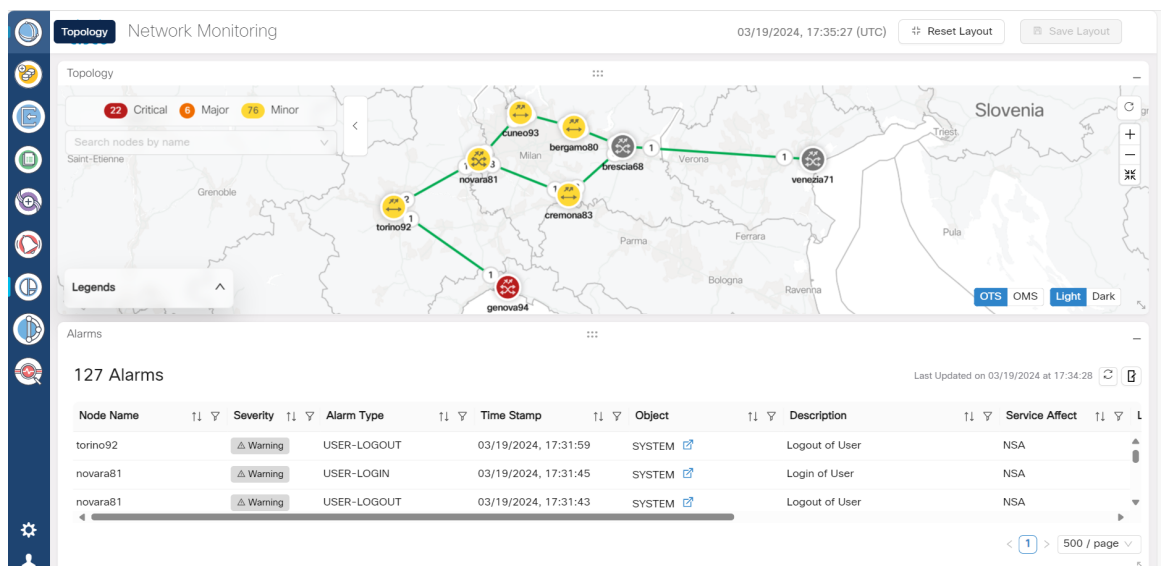

Note In the network monitoring screen above, the alarm details are displayed based on the node or link which is selected from topology.

Figure 17: Workspaces Circuit Monitoring

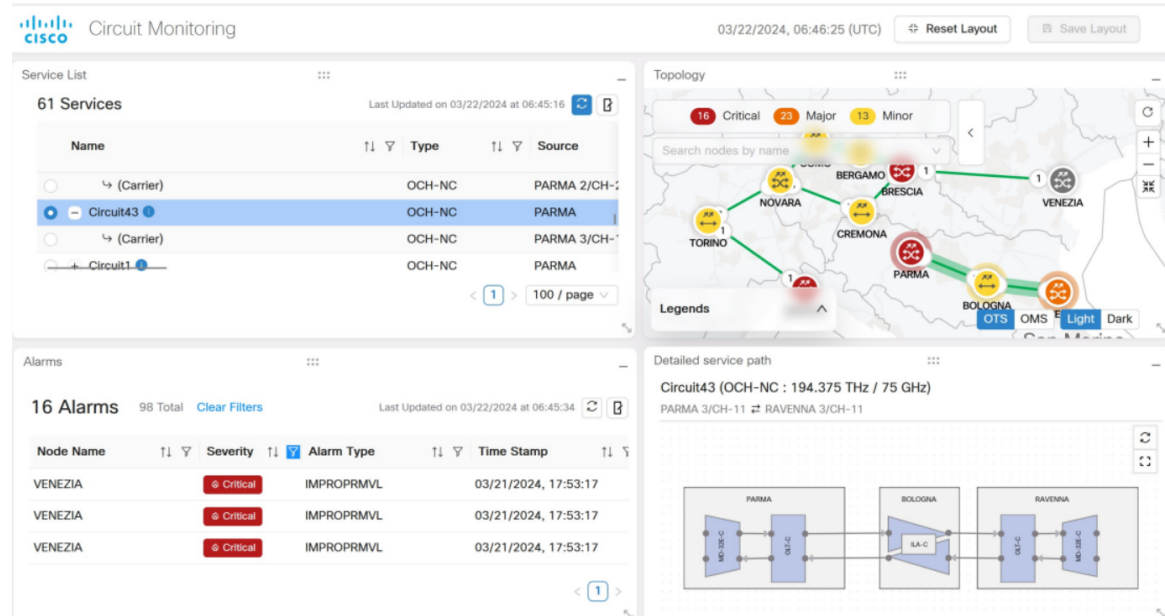

Note

- In the **Topology** screen above, select any node or link and right click followed by **Show service(s)**. This will display all the services related to the selected node or link in the services layout.
- In the **Alarms** screen above, select any alarm and right click followed by **Show Affected service(s)**. This will display all the services related to the selected alarm in the services layout.

There can be many such workflows that can be added to the workspace anytime. Also, the workspace panels are dynamic and interactive. By default, we can see the **Alarms**, **Service List**, **Topology** and **Detailed Service Path** panels. These individual panels can be dragged and dropped anywhere on the monitoring screen. They can also be minimized and maximized as necessary anytime.



Note The alarms displayed here are applicable to the selected services only and not to the entire **Topology**. Also for multi carrier services, alarms are displayed for the selected carrier only.

- Step 1** Click **Workspaces** in the left panel.
- Step 2** Select the workspace and click **Launch**.
- Step 3** Click **Save Layout** to save the layout at any given point in time.
- Step 4** Click **Reset Layout** to revert to the default layout.

Step 5 Some of the other options that are available on these panels are mentioned below.


- Hovering on the nodes displays the node name and the alarm severity.
- Hovering on the equipment displays the equipment name, service state as enabled or disabled and the count of the severity of the alarms.
- Hovering on the port which is displayed as a round icon on the panel displays the port name, service state, and the alarms severity counts.
- Connectivity between each equipment is highlighted with arrows.
- If you right click at the node level it will cross launch to the Nodal UI to verify OXC's.
- If you right click at the equipment level it will cross launch to View Nodal UI: Equipment.
- If you right click on any port it will cross launch to View Nodal UI: Port.
- Connectivity between the nodes are represented with arrows.

Service Assurance

Before you begin

The **Service Assurance** option helps in visualizing the circuits and the related nodes, links, and the circuit paths.

Figure 18: Service Assurance

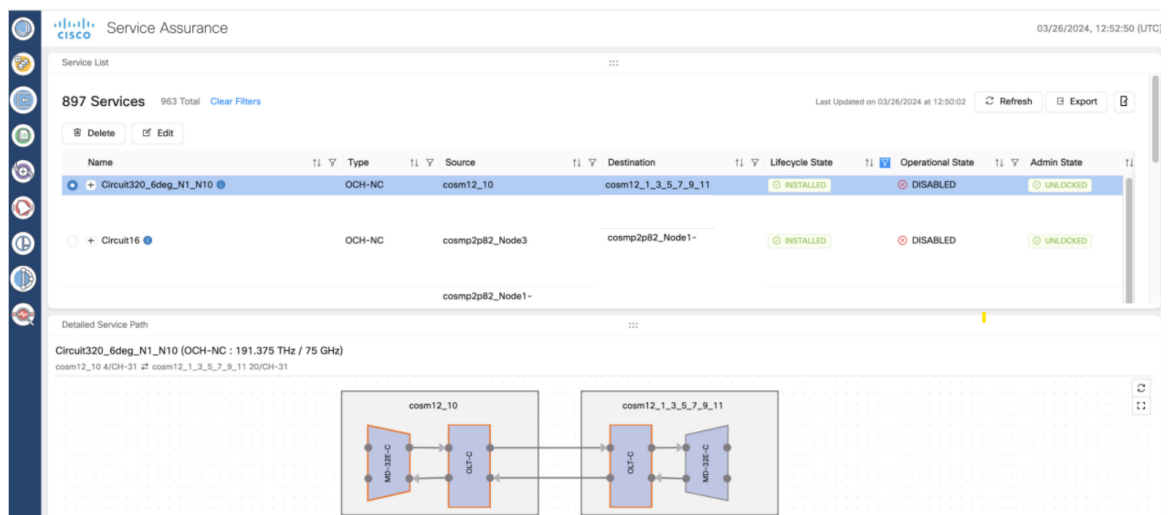

Step 1 Click **Service Assurance** in the left panel.

Step 2 Select the service from the **Service List**.

- Step 3** In the **Detailed Service Path** layout, you can view the service details by hovering over the visual circuit for each node, ports, links, and paths of any service at any given time. These details are available when the **Lifecycle State** is either **INSTALLED** or **DELETION FAILED**.
- Step 4** Click **Export** to export the details of the table from the screen to a spreadsheet file.
-

Monitoring

- **Audit Log:** You can view the audit logs related to the user login or logout, device enrollment, device re-sync service for circuit create, delete or edit options. Also the create, edit or delete user options.
- **Detailed Node Resources:** You can monitor the CPU, memory or disk consumption of the host.
- **Log Viewer:** Displays the internal logs of microservices.
- **Pod Monitoring:** You can monitor the CPU, memory or disk consumption of the microservices within the kubernetes cluster.

Before you begin

Use this option to view the log messages and other related details.

Click to view each option separately.

General Troubleshooting

These are some generic troubleshooting points to consider which are common across the different applications within Cisco ONC.

- **Switchover happens:** Refresh the page.
- **TAC case:** In order to raise a TAC case, collect the sedo diagnostic logs with the command:

```
sedo diagnostics archive-logs
```

Collect it along with the Grafana view.

