



Link Tuner

This chapter describes the Link Tuner optical application for Cisco NCS 1020.

- [Overview of Link Tuner, on page 1](#)

Overview of Link Tuner

Link tuner computes the target Power Spectral Densities (PSD) for APC by calculating the optimal PSDs for a span. Power Spectral Density represents power per 12.5 GHz of spectrum. Link tuner is enabled if automatic link bring up is enabled. Link tuner is span-specific and computes the target PSDs for channels entering the span. Link tuner uses the following parameters to compute the target PSD:

- Fiber-type
- Span loss measurement
- Spectral density
- Connector losses
- Span length

The link tuner application finds the target PSD for the best performance for channels entering a span. You have to manually configure drop-psd. The drop-psd is the target PSD for OLT drop ports.

Link tuner monitors the span loss and total noise in the link. When link tuner detects changes in the span loss, span length, or connector loss, link tuner recomputes the target PSDs.

Link tuner computes the target PSDs and total noise whenever a link goes down and comes back up. All traffic impacting actions trigger link tuner.

The following table describes the different link tuner status.

Status	Description
Operational	Link tuner is active and operational.
Blocked	Link tuner is active but unable to compute target PSDs and noise.
Disabled	Link tuner is disabled.
Manual	User has to manually run

Overview of Link Tuner

To view link tuner status and PSD computation information, use **show olc link-tuner** command.

The following sample is an output of **show olc link-tuner** command.

```
RP/0/RP0/CPU0:SOLN-OLT-1#show olc link-tuner
Tue Jun 11 10:40:30.667 IST
Controller          : Ots0/0/0/0
Link Tuner Status   : MANUAL
Last PSD computation: 2024-06-03 16:49:34
-----
Single Band
-----
Setpoint           : Computed PSD
(dBm/12.5 GHz)
-----
01                -6.1
02                -6.0
03                -6.0
04                -5.9
05                -5.8
06                -5.7
07                -5.7
08                -5.6
09                -5.5
10                -5.4
11                -5.4
12                -5.3
13                -5.2
14                -5.2
15                -5.1
16                -5.0
17                -4.9
18                -4.9
19                -4.8
20                -4.7
21                -4.6
22                -4.6
23                -4.5
24                -4.4
25                -4.3
26                -4.3
27                -4.2
28                -4.1
29                -4.1
30                -4.0
31                -3.9
32                -3.8
33                -3.8
```

To view link tuner status, PSD computation information, and computed total noise, use **show olc link-tuner detail** command.

The following sample is an output of **show olc link-tuner detail** command.

```
RP/0/RP0/CPU0:SOLN-OLT-1#show olc link-tuner details
Tue Jun 11 10:43:48.998 IST
Controller          : Ots0/0/0/0
Link Tuner Status   : MANUAL
Last PSD computation: 2024-06-03 16:49:34
Computed Total Noise: NA
-----
Setpoint           : Computed PSD
(dBm/12.5 GHz)
-----
01                -6.1
```

02	-6.0
03	-6.0
04	-5.9
05	-5.8
06	-5.7
07	-5.7
08	-5.6
09	-5.5
10	-5.4
11	-5.4
12	-5.3
13	-5.2
14	-5.2
15	-5.1
16	-5.0
17	-4.9
18	-4.9
19	-4.8
20	-4.7
21	-4.6
22	-4.6
23	-4.5
24	-4.4
25	-4.3
26	-4.3
27	-4.2
28	-4.1
29	-4.1
30	-4.0
31	-3.9
32	-3.8
33	-3.8

You can view the target PSDs configured for all **setpoints** using the **show olc apc-local target-psd-profile** command. The output shows the source of the PSD configuration also. The target PSD source can be Link Tuner or Configuration.

The following sample is an output of **show olc apc-local target-psd-profile** command.

```
RP/0/RP0/CPU0:ios#show olc apc-local target-psd-profile
Mon Jun 20 06:40:32.779 UTC
Controller      : Ots0/0/0/0
Target PSD source : Link Tuner
-----
Setpoint          Frequency           Target PSD
                  (THz)                (dBm/12.5 GHz)
-----
01               191.337494        -6.3
02               191.488495        -6.3
03               191.639496        -6.2
04               191.790497        -6.2
05               191.941498        -6.2
06               192.092499        -6.1
07               192.243500        -6.1
08               192.394501        -6.1
09               192.545502        -6.0
10               192.696503        -6.0
11               192.847504        -5.9
12               192.998505        -5.9
13               193.149506        -5.8
14               193.300507        -5.8
15               193.451508        -5.8
16               193.602493        -5.7
17               193.753494        -5.7
```

Configure Link Tuner

18	193.904495	-5.7
19	194.055496	-5.6
20	194.206497	-5.6
21	194.357498	-5.5
22	194.508499	-5.5
23	194.659500	-5.5
24	194.810501	-5.4
25	194.961502	-5.4
26	195.112503	-5.3
27	195.263504	-5.3
28	195.414505	-5.3
29	195.565506	-5.2
30	195.716507	-5.2
31	195.867493	-5.1
32	196.018494	-5.1
33	196.169495	-5.1

Configure Link Tuner

The following configurations are available for the link tuner:

Enable Link Tuner

You can enable link tuner for a controller. Use the following commands to enable link tuner.

configure

optical-line-control

controller ots Rack/Slot/Instance/Port

link-tuner enable

commit

end

The following is a sample configuration that enables link tuner.

```
RP/0/RP0/CPU0:ios#configure
RP/0/RP0/CPU0:ios(config)#optical-line-control
RP/0/RP0/CPU0:ios(config-olc)#controller ots 0/0/0/0
RP/0/RP0/CPU0:ios(config-olc-ots)#link-tuner enable
RP/0/RP0/CPU0:ios(config-olc-ots)#commit
RP/0/RP0/CPU0:ios(config-olc-ots)#end
```

Manual Link Tuner

You can enable link tuner for a controller. Use the following commands to set the link tuner to manual mode.

configure

optical-line-control

controller ots Rack/Slot/Instance/Port

link-tuner manual

commit

end

The following is a sample configuration sets the link tuner to manual mode.

```
RP/0/RP0/CPU0:ios#configure
RP/0/RP0/CPU0:ios(config)#optical-line-control
RP/0/RP0/CPU0:ios(config-olc)#controller ots 0/0/0/0
RP/0/RP0/CPU0:ios(config-olc-ots)#link-tuner manual
RP/0/RP0/CPU0:ios(config-olc-ots)#commit
RP/0/RP0/CPU0:ios(config-olc-ots)#end
```

Disable Link Tuner

You can disable link tuner for a controller. Use the following commands to disable link tuner.

configure

optical-line-control

controller ots Rack/Slot/Instance/Port

link-tuner disable

commit

end

The following is a sample configuration that disables link tuner.

```
RP/0/RP0/CPU0:ios#configure
RP/0/RP0/CPU0:ios(config)#optical-line-control
RP/0/RP0/CPU0:ios(config-olc)#controller ots 0/0/0/0
RP/0/RP0/CPU0:ios(config-olc-ots)#link-tuner disable
RP/0/RP0/CPU0:ios(config-olc-ots)#commit
RP/0/RP0/CPU0:ios(config-olc-ots)#end
```

Configure Link Parameters

Configure fiber-type, spectrum density, connector losses, and span length for accurate link tuning.

To configure fiber type, use **fiber-type** command. SMF is the default fiber-type.

You can configure the following fiber types using **fiber-type** command:

- E-LEAF
- FREE-LIGHT
- METRO-CORE
- SMF
- SMF-28E
- TERA-LIGHT
- TW-RS
- TW-Reach
- TW-minus
- TW-plus
- ULL-SMF28

Configure Link Tuner

To configure spectrum density, use **link-tuner spectrum-density** command. You can configure a spectrum density as a percentage value in the range of 1-100. The default spectrum density is 81.

To configure connector loss, use the **connector-loss** command. You can configure Tx and Rx connector loss in the range 0–20 dB.

To configure span length, use the **span-length** command. You can configure span length in the range of 0.1 to 200 km as multiples of 0.1 km. In the absence of span length configuration, link tuner computes span length using span loss.

The following example is a sample configuration that configures the link tuner parameters.

```
RP/0/RP0/CPU0:ios#configure
RP/0/RP0/CPU0:ios(config)#optical-line-control
RP/0/RP0/CPU0:ios(config-olc)#controller ots 0/0/0/0
RP/0/RP0/CPU0:ios(config-olc-ots)#fiber-type SMF
RP/0/RP0/CPU0:ios(config-olc-ots)#link-tuner spectrum-density 80
RP/0/RP0/CPU0:ios(config-olc-ots)#connector-loss rx 1
RP/0/RP0/CPU0:ios(config-olc-ots)#connector-loss tx 1
RP/0/RP0/CPU0:ios(config-olc-ots)#span-length 100
RP/0/RP0/CPU0:ios(config-olc-ots)#commit
RP/0/RP0/CPU0:ios(config-olc-ots)#end
```