



RIP Commands

This module describes the commands used to configure and monitor the Routing Information Protocol (RIP).

For detailed information about RIP concepts, configuration tasks, and examples, see the *Implementing RIP on Cisco ASR 9000 Series Router* module in the *Routing Configuration Guide for Cisco ASR 9000 Series Routers*.

- [authentication keychain mode \(RIP\), on page 2](#)
- [auto-summary \(RIP\), on page 4](#)
- [broadcast-for-v2, on page 5](#)
- [clear rip, on page 6](#)
- [clear rip database, on page 7](#)
- [clear rip interface, on page 8](#)
- [clear rip out-of-memory, on page 9](#)
- [clear rip statistics, on page 10](#)
- [default-information originate \(RIP\), on page 12](#)
- [default-metric \(RIP\), on page 13](#)
- [distance \(RIP\), on page 14](#)
- [interface \(RIP\), on page 16](#)
- [maximum-paths \(RIP\), on page 17](#)
- [metric-zero-accept, on page 18](#)
- [neighbor \(RIP\), on page 19](#)
- [nsf \(RIP\), on page 20](#)
- [output-delay, on page 21](#)
- [passive-interface \(RIP\), on page 22](#)
- [poison-reverse, on page 23](#)
- [receive version, on page 24](#)
- [redistribute \(RIP\), on page 25](#)
- [router rip, on page 28](#)
- [route-policy \(RIP\), on page 29](#)
- [send version, on page 31](#)
- [show protocols \(RIP\), on page 32](#)
- [show rip, on page 33](#)
- [show rip database, on page 35](#)
- [show rip interface, on page 37](#)
- [show rip statistics, on page 43](#)

- [site-of-origin \(RIP\)](#), on page 45
- [split-horizon disable \(RIP\)](#), on page 46
- [timers basic](#), on page 47
- [validate-update-source disable](#), on page 48
- [vrf \(RIP\)](#), on page 49

authentication keychain mode (RIP)

To enable an authentication keychain mechanism on RIP interfaces, use the **authentication keychain mode** command in interface configuration mode or VRF-interface configuration mode. To disable authentication keychain configuration on RIP interfaces, use the **no** form of this command.

```
authentication keychain keychain_name mode {md5 | text}
no authentication keychain keychain_name mode {md5 | text}
```

Syntax Description	
<i>keychain-name</i>	Specifies the name of the keychain configured using the keychain command.
Note	All keychains need to be configured in Cisco IOS XR keychain database using the keychain configuration commands described in <i>Implementing Keychain Management</i> module of <i>System Security Configuration Guide for Cisco ASR 9000 Series Routers</i>
md5	Specifies that the authentication keychain mode is keyed message digest (md5).
text	Specifies that the authentication keychain mode is clear text.

Command Default Keychain authentication is disabled.

Command Modes Interface configuration
VRF-interface configuration

Command History	Release	Modification
	Release 4.0.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

All keychains need to be configured in Cisco IOS XR keychain database using the keychain configuration commands described in *Implementing Keychain Management* module of *System Security Configuration Guide for Cisco ASR 9000 Series Routers*

Task ID	Task ID	Operation
	rip	read, write

This example shows how to configure an authentication keychain in md5 mode on a RIP VRF interface:

```
RP/0/RSP0/CPU0:router#configure
RP/0/RSP0/CPU0:router(config)#router rip
RP/0/RSP0/CPU0:router(config-rip)#vrf vrf_rip_auth
RP/0/RSP0/CPU0:router(config-rip-vrf)#interface POS 0/6/0/0
RP/0/RSP0/CPU0:router(config-rip-vrf-if)#authentication keychain key1 mode md5
```

This example shows how to configure an authentication keychain in clear text mode on a RIP interface:

```
RP/0/RSP0/CPU0:router#configure
RP/0/RSP0/CPU0:router(config)#router rip
RP/0/RSP0/CPU0:router(config-rip)#interface POS 0/6/0/1
RP/0/RSP0/CPU0:router(config-rip-if)#authentication keychain key2 mode text
```

Related Commands

Command	Description
router rip , on page 28	Configures a routing process and enters router configuration mode for a Routing Information Protocol (RIP) process.
vrf (RIP) , on page 49	Defines a VPN routing and forwarding (VRF) instance and enters VRF configuration mode. Refer <i>System Security Command Reference for Cisco ASR 9000 Series Routers</i> for complete command reference information.
key chain (key chain)	Creates or modifies a keychain. Refer <i>System Security Command Reference for Cisco ASR 9000 Series Routers</i> for complete command reference information.
key (key chain)	Creates or modifies a keychain key. Refer <i>System Security Command Reference for Cisco ASR 9000 Series Routers</i> for complete command reference information.
key-string (keychain)	Specifies text string for the key. Refer <i>System Security Command Reference for Cisco ASR 9000 Series Routers</i> for complete command reference information.

auto-summary (RIP)

To enable the automatic summarization of subnet routes into network-level routes, use the **auto-summary** command in the appropriate configuration mode. To disable this function and send subprefix routing information across classful network boundaries, use the **no** form of this command.

auto-summary
no auto-summary

Syntax Description This command has no arguments or keywords.

Command Default Disabled

Command Modes Router configuration
 VRF configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.
	Release 3.9.0	No modification.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **auto-summary** command to turn on route summarization. Route summarization reduces the amount of routing information in the routing tables.

Disable automatic summarization if you must perform routing between disconnected subnets. When automatic summarization is off, subnets are advertised. Automatic summarization is disabled by default.

Task ID	Task ID	Operations
	rip	read, write

Examples The following example shows how to turn on RIP auto-summarization:

```
RP/0/RSP0/CPU0:router(config)# router rip
RP/0/RSP0/CPU0:router(config-rip)# auto-summary
```

Related Commands	Command	Description
	vrf (RIP), on page 49	Defines a VRF instance and enters VRF configuration mode.

broadcast-for-v2

To send Routing Information Protocol (RIP) Version 2 output packets to a broadcast address, use the **broadcast-for-v2** command in the appropriate configuration mode. To disable this feature, use the **no** form of this command.

broadcast-for-v2
no broadcast-for-v2

Syntax Description This command has no arguments or keywords.

Command Default RIPv2 output packets are not broadcasted.

Command Modes Router configuration
 VRF configuration
 Interface configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.
	Release 3.9.0	No modification.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **broadcast-for-v2** command to broadcast RIP Version 2 broadcast updates to hosts that do not listen to multicasts. Version 2 updates (requests and responses) will be sent to the IP broadcast address 255.255.255.255 instead of the IP multicast address 244.0.0.9.

Task ID	Task ID	Operations
	rip	read, write

Examples

The following example shows how to send RIP v2 output messages to a broadcast address for all RIP interfaces:

```
RP/0/RSP0/CPU0:router(config)# router rip
RP/0/RSP0/CPU0:router(config-rip)# broadcast-for-v2
```

clear rip

To clear VRF and interface-related information for Routing Information Protocol (RIP) such as database entries and statistics, use the **clear rip** command in EXEC configuration mode.

```
clear rip [vrf {vrf | all}]
```

Syntax Description	vrf { <i>vrf</i> all } (Optional) Specifies a particular VPN routing and forwarding (VRF) instance or all VRF instances.
---------------------------	--

Command Default	No default behavior or values
------------------------	-------------------------------

Command Modes	EXEC configuration
----------------------	--------------------

Command History	Release	Modification
	Release 3.7.2	This command was introduced.
Release 3.9.0	No modification.	

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.
-------------------------	---

RIP VRFs and interfaces that are forcibly deactivated by the software because of a severe memory state are not activated again until the out-of-memory state is cleared by using the **clear rip**, **clear rip interface**, or **clear rip out-of-memory** command.

Task ID	Task ID	Operations
	rip	read

Examples	The following example shows how to clear all database, interface, and VRF entries in RIP:
-----------------	---

```
RP/0/RSP0/CPU0:router# clear rip vrf all
```

Related Commands	Command	Description
	clear rip interface, on page 8	Clears interface-related information for RIP such as database entries and statistics.
	clear rip out-of-memory, on page 9	Clears the out-of-memory state for RIP.

clear rip database

To clear only database entries from the Routing Information Protocol (RIP) topology table, use the **clear rip database** command in EXEC configuration mode.

```
clear rip [vrf {vrf | all}] database [interface type interface-path-id]
```

Syntax Description

vrf { *vrf* | **all** } (Optional) Specifies a particular VPN routing and forwarding (VRF) instance or all VRF instances.

interface (Optional) Specifies the interface to clear topology entries.

type Interface type. For more information, use the question mark (?) online help function.

interface-path-id Physical interface or virtual interface.

Note Use the **show interfaces** command to see a list of all interfaces currently configured on the router.

For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

No default behavior or values

Command Modes

EXEC configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 3.9.0	No modification.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
rip	read, write

Examples

The following example shows how to clear only database entries from the topology table for the GigabitEthernet 0/1/0/0 interface:

```
RP/0/RSP0/CPU0:router# clear rip database interface GigabitEthernet 0/1/0/0
```

Related Commands	Command	Description
	show rip statistics, on page 43	Displays database and interface entry information for the RIP process.

clear rip interface

To clear interface-related information for Routing Information Protocol (RIP) such as database entries and statistics, use the **clear rip interface** command in EXEC configuration mode.

clear rip [**vrf** {**vrf** | **all**}] **interface** *type interface-path-id*

Syntax Description	
vrf { <i>vrf</i> all }	(Optional) Specifies a particular VPN routing and forwarding (VRF) instance or all VRF instances.
interface	Specifies the interface to clear topology entries.
<i>type</i>	Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface.
Note	Use the show interfaces command to see a list of all interfaces currently configured on the router.
	For more information about the syntax for the router, use the question mark (?) online help function.

Command Default No default behavior or values

Command Modes EXEC configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.
	Release 3.9.0	No modification.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

RIP VRFs and interfaces that are forcibly deactivated by the software because of a severe memory state are not activated again until after out-of-memory state is cleared by using the **clear rip**, **clear rip interface** or **clear rip out-of-memory** command.

Task ID	Task ID	Operations
	rip	read, write

Examples

The following example shows how to clear all interface-related data such as routes and statistics from the GigabitEthernet 0/1/0/0 interface:

```
RP/0/RSP0/CPU0:router# clear rip interface GigabitEthernet 0/1/0/0
```

Related Commands

Command	Description
clear rip, on page 6	Clears VRF and interface-related information for RIP such as database entries and statistics.
clear rip out-of-memory, on page 9	Clears the out-of-memory state for RIP.

clear rip out-of-memory

To clear the out-of-memory state for Routing Information Protocol (RIP), use the **clear rip out-of-memory** command in EXEC configuration mode.

```
clear rip [vrf {vrf | all}] out-of-memory [interface type interface-path-id]
```

Syntax Description

vrf { *vrf* | **all** } (Optional) Specifies a particular VPN routing and forwarding (VRF) instance or all VRF instances.

interface (Optional) Specifies the interface to clear topology entries.

type Interface type. For more information, use the question mark (?) online help function.

interface-path-id Physical interface or virtual interface.

Note Use the **show interfaces** command to see a list of all interfaces currently configured on the router.

For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

No default behavior or values

Command Modes

EXEC configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 3.9.0	No modification.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **clear rip out-of-memory** command, to clear the out-of-memory state completely and allow the RIP process to force the VRF or interface to shut down.

When the router begins to run out of memory, the RIP process can transition through different memory states defined as Normal, Minor, Severe, and Critical:

- In Normal state, RIP VRFs and interfaces function normally.
- In Minor state, RIP VRFs and interfaces that are currently active are allowed to remain active. VRFs and interfaces that are not currently active are not allowed to become active until the RIP process transitions to Normal state.
- In Severe state, a few VRFs and interfaces are forcibly brought down periodically until the RIP process transitions to another state.
- In Critical state, the RIP process is forcibly shut down.

VRFs and interfaces that are forcibly shut down in Severe state are not automatically activated when the RIP process transitions to Minor or Normal state. When a VRF or interface is forcibly brought down while in Severe state, the **clear rip**, **clear rip interface** or **clear rip out-of-memory** command clears the Forced Down state and reactivates the VRF or interface.

The **show rip** and **show rip interface** commands allow you to view the current out-of-memory state.

Task ID

Task ID	Operations
rip	read, write

Examples

The following example shows how to clear the out-of-memory state for a RIP process:

```
RP/0/RSP0/CPU0:router# clear rip out-of-memory
```

Related Commands

clear rip, on page 6	Clears VRF and interface-related information for RIP such as database entries and statistics.
clear rip interface, on page 8	Clears interface-related information for RIP such as database entries and statistics.
show rip, on page 33	Displays configuration and status of RIP.
show rip interface, on page 37	Displays interface entry information from the RIP topology table.

clear rip statistics

To clear the Routing Information Protocol (RIP) statistics, use the **clear rip statistics** command in EXEC configuration mode.

```
clear rip [vrf {vrf | all}] statistics [interface type interface-path-id]
```

Syntax Description	vrf { <i>vrf</i> all } (Optional) Specifies a particular VPN routing and forwarding (VRF) instance or all VRF instances.
	interface (Optional) Specifies the interface from which to clear topology entries.
	<i>type</i> Interface type. For more information, use the question mark (?) online help function.
	<i>interface-path-id</i> Physical interface or virtual interface.
	Note Use the show interfaces command to see a list of all interfaces currently configured on the router.
	For more information about the syntax for the router, use the question mark (?) online help function.

Command Default No default behavior or values

Command Modes EXEC configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.
	Release 3.9.0	No modification.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operations
	rip	read, write

Examples The following example shows how to clear all RIP statistics:

```
RP/0/RSP0/CPU0:router# clear rip statistics
```

Related Commands	Command	Description
	show rip statistics, on page 43	Displays database and interface entry information for the RIP process.

default-information originate (RIP)

To generate a default route into Routing Information Protocol (RIP), use the **default-information originate** command in the appropriate configuration mode. To disable a default route into RIP, use the **no** form of this command.

```
default-information originate [route-policy name]  
no default-information originate
```

Syntax Description	route-policy <i>name</i> Route policy name that indicates criteria for the default route.
---------------------------	--

Command Default	This command is disabled by default.
------------------------	--------------------------------------

Command Modes	Router configuration VRF configuration
----------------------	---

Command History	Release	Modification
	Release 3.7.2	This command was introduced.
	Release 3.9.0	No modification.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.
-------------------------	---

Task ID	Task ID	Operations
	rip	read, write

Examples	The following example shows how to originate a default route in RIP updates based on the result of running the route policy on the routing table:
-----------------	---

```
RP/0/RSP0/CPU0:router(config)# router rip  
RP/0/RSP0/CPU0:router(config-rip)# default-information originate route-policy policy1
```

Related Commands	Command	Description
	route-policy (RIP), on page 29	Applies a routing policy to updates advertised to or received from a RIP neighbor.

default-metric (RIP)

To set default metric values for routes redistributed from other protocols into Routing Information Protocol (RIP), use the **default-metric** command in the appropriate configuration mode. To return to the default state, use the **no** form of this command.

default-metric *number-value*
no default-metric

Syntax Description	<i>number-value</i> Default metric value. Range is 1 to 15.
---------------------------	---

Command Default	Default metrics are not set.
------------------------	------------------------------

Command Modes	Router configuration VRF configuration
----------------------	---

Command History	Release	Modification
	Release 3.7.2	This command was introduced.
	Release 3.9.0	No modification.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.
-------------------------	---

Use the **default-metric** command with the **redistribute** command to cause RIP to use the same metric value for all redistributed routes. A default metric helps solve the problem of redistributing routes with incompatible metrics by providing a reasonable substitute and enables redistribution to proceed. If you want to set different metrics for other redistributed protocols, use the **route-policy** option in the **redistribute** command.

The RIP metric used for redistributed routes is determined by the route policy. If a route policy is not configured or the route policy does not set the RIP metric, the metric is determined based on the redistributed protocol. For VPNv4 routes redistributed by BGP, the RIP metric set at the remote PE router is used, if valid.

In all other cases (BGP, IS-IS, OSPF, EIGRP, connected, static), the metric set by the **default-metric** command is used. If a valid metric cannot be determined, then redistribution does not happen.

Task ID	Task ID	Operations
	rip	read, write

Examples

The following example shows how a router in autonomous system 109 uses both the RIP and the Open Shortest Path First (OSPF) routing protocols. The example advertises OSPF-derived routes using RIP and assigns the OSPF-derived routes a RIP metric of 10:

```
RP/0/RSP0/CPU0:router(config)# router rip
RP/0/RSP0/CPU0:router(config-rip)# vrf vpn-1
RP/0/RSP0/CPU0:router(config-rip-vrf)# default-metric 10
RP/0/RSP0/CPU0:router(config-rip-vrf)# redistribute ospf 109
```

Related Commands	Command	Description
	redistribute (RIP), on page 25	Redistributes routes from one routing domain into RIP.

distance (RIP)

To define the administrative distance assigned to routes discovered by the Routing Information Protocol (RIP), use the **distance admin-distance** command in the appropriate configuration mode. To remove the distance definition from the configuration file and restore the system to its default condition, use the **no** form of this command.

distance *admin-distance* [{*prefix prefix-length* | *prefix mask*}]
no distance *admin-distance*

Syntax Description	
<i>admin-distance</i>	Administrative distance to be assigned to RIP routes. Range is 0 to 255.
<i>prefix</i>	(Optional) Network IP address about which routing information should be displayed.
<i>prefix-length</i>	(Optional) The <i>prefix-length</i> argument specifies the length of the IP prefix. A decimal value that indicates how many of the high-order contiguous bits of the address compose the prefix (the network portion of the address). A slash must precede the decimal value. Range is 0 to 32 for IPv4 addresses.
<i>mask</i>	(Optional) Network mask specified in either of two ways: <ul style="list-style-type: none"> • Network mask can be a four-part, dotted decimal address. For example, 255.0.0.0 indicates that each bit equal to 1 means the corresponding address bit is a network address. • Network mask can be indicated as a slash (/) and number. For example, /8 shows that the first 8 bits of the mask are ones, and the corresponding bits of the address are the network address.

Command Default *admin-distance* : 120

Command Modes Router configuration
VRF configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.
	Release 3.9.0	No modification.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **distance** command to change the preference of RIP routes over other protocol routes. When administrative distance and redistribution features are used to together, routing behavior may be affected for routes accepted from and advertised to RIP neighbors.

Numerically, an administrative distance is an integer from 0 to 255. In general, the higher the value, the lower the trust rating. An administrative distance of 255 means that the routing information source cannot be trusted at all and should be ignored.

The order in which you enter distance commands can affect the assigned administrative distances in unexpected ways.

This table lists default administrative distances.

Table 1: Default Administrative Distances of Routing Protocols

Routing Protocol	Administrative Distance Value
Connected interface	0
Static route out an interface	0
Static route to next-hop	1
EIGRP Summary Route	5
External BGP	20
Internal EIGRP	90
OSPF	110
IS-IS	115
RIP Versions 1 and 2	120
External EIGRP	170
Internal BGP	200
Unknown	255

Task ID**Task ID Operations**

rip	read, write
-----	----------------

Examples

The following example shows how to set the administrative distance for a particular prefix:

```
RP/0/RSP0/CPU0:router(config)# router rip
```

```
RP/0/RSP0/CPU0:router(config-rip)# distance 85 192.168.10.0/24
```

Related Commands

Command	Description
redistribute (RIP), on page 25	Redistributes routes from one routing domain into RIP.

interface (RIP)

To define the interfaces on which the Routing Information Protocol (RIP) runs and enter interface configuration mode, use the **interface** command in router configuration mode. To disable RIP routing for interfaces, use the **no** form of this command.

interface *type interface-path-id*

no interface *type interface-path-id*

Syntax Description

type Interface type. For more information, use the question mark (?) online help function.

interface-path-id Physical interface or a virtual :interface.

Note Use the **show interfaces** command to see a list of all interfaces currently configured on the router.

For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

When you do not specify this command in configuration mode, RIP routing for interfaces is not enabled.

Command Modes

Router configuration

VRF configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 3.9.0	No modification.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **interface** command to associate a specific interface with a RIP process. The interface remains associated with the process even when the IPv4 address of the interface changes.

This command places the router in interface configuration mode, from which you can configure interface-specific settings. Commands configured under this mode (such as the [broadcast-for-v2, on page 5](#) command) are automatically bound to that interface.

Task ID	Task ID	Operations
	rip	read, write

Examples

The following example shows how to enter interface configuration mode for a RIP process, and send RIP Version 2 messages to the broadcast address on the GigabitEthernet interface 0/1/0/0:

```
RP/0/RSP0/CPU0:router(config)# router rip
RP/0/RSP0/CPU0:router(config-rip)# interface GigabitEthernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-rip-if)# ?

broadcast-for-v2  Specify broadcast address for RIP v2 output packet
commit           Commit the configuration changes to running
describe        Describe a command without taking real actions
do              Run an exec command
exit            Exit from this submode
metric-zero-accept  Accept rip update with metric 0 to compensate a common bug
no              Negate a command or set its defaults
passive-interface  Suppress routing updates on this interface
poison-reverse   Enable poison reverse
receive         Advertisement reception
route-policy     Apply route policy to routing updates
send            Advertisement transmission
show            Show contents of configuration
site-of-origin   SOO community for prefixes learned over this interface
split-horizon    Disable split horizon
RP/0/RSP0/CPU0:router(config-rip-if)# broadcast-for-v2
```

Related Commands

Command	Description
broadcast-for-v2, on page 5	Sends RIP Version 2 output packets to a broadcast address.

maximum-paths (RIP)

To configure the maximum number of equal cost parallel routes that the Routing Information Protocol (RIP) will install into the routing table, use the **maximum-paths** command in the appropriate configuration mode. To remove the **maximum-paths** command from the configuration file and restore the system to its default condition with respect to RIP, use the **no** form of this command.

```
maximum-paths maximum
no maximum-paths
```

Syntax Description

maximum Maximum number of parallel routes that RIP can install in a routing table. Range is 1 to 32..

Command Default

4 paths

Command Modes Router configuration
VRF configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.
	Release 3.9.0	No modification.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operations
	rip	read, write

Examples The following example shows how to allow a maximum of 16 equal cost paths to a destination:

```
RP/0/RSP0/CPU0:router(config)# router rip
RP/0/RSP0/CPU0:router(config-rip)# maximum-paths 16
```

metric-zero-accept

To allow RIP to accept routing entries from RIP updates with a metric set to zero (0), use the **metric-zero-accept** command in interface configuration mode. To remove the **metric-zero-accept** command from the configuration file and restore the system to its default condition with respect to RIP, use the **no** form of this command.

metric-zero-accept
no metric-zero-accept

Syntax Description This command has no arguments or keywords.

Command Default RIP routes received with a metric of zero (0) are ignored.

Command Modes Interface configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.
	Release 3.9.0	No modification.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

After the **metric-zero-accept** command is configured on routing entries from RIP updates, RIP accepts these routes and then sets the metric to one (1).

Task ID

Task ID	Task ID	Operations
	rip	read, write

Examples

The following example shows how to set the RIP interface to accept metric zero on routing entries:

```
RP/0/RSP0/CPU0:router(config)# router rip
RP/0/RSP0/CPU0:router(config-rip)# interface GigabitEthernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-rip-if)# metric-zero-accept
```

neighbor (RIP)

To define a neighboring router with which to exchange Routing Information Protocol (RIP) information, use the **neighbor** command in the appropriate configuration mode. To remove an entry, use the **no** form of this command.

neighbor *ip-address*
no neighbor *ip-address*

Syntax Description

ip-address IP address of a peer router with which routing information is exchanged.

Command Default

No neighboring routers are defined.

Command Modes

Router configuration

VRF configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 3.9.0	No modification.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **neighbor** command to permit the point-to-point (nonbroadcast) exchange of routing information. When the **neighbor** command is used in combination with the **passive-interface** command in router configuration mode, routing information can be exchanged between a subset of routers and access servers on a LAN.

Multiple **neighbor** commands can be used to specify additional neighbors or peers.

Task ID	Task ID	Operations
	rip	read, write

Examples

The following example shows how to permit the sending of RIP updates to specific neighbors. One copy of the update is generated per neighbor:

```
RP/0/RSP0/CPU0:router(config)# router rip
RP/0/RSP0/CPU0:router(config-rip)# vrf vpn-1
RP/0/RSP0/CPU0:router(config-rip-vrf)# neighbor 172.16.1.2
```

Related Commands

Command	Description
passive-interface (RIP), on page 22	Suppresses the sending of RIP updates on an interface.

nsf (RIP)

To configure nonstop forwarding (NSF) on Routing Information Protocol (RIP) routes after a RIP process shutdown or restart, use the **nsf** command in the appropriate configuration mode. To remove this command from the configuration file and restore the system to its default condition, use the **no** form of this command.

nsf
no nsf

Syntax Description This command has no arguments or keywords.

Command Default NSF is disabled.

Command Modes Router configuration
VRF configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.
	Release 3.9.0	No modification.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When you use the **nsf** command, NSF lifetime is automatically set to two times the update time (with a minimum value of 60 seconds). The RIP process must reconverge within this time. If the convergence exceeds the NSF lifetime, routes are purged from the Routing Information Base (RIB) and NSF may fail.

Task ID

Task ID	Operations
rip	read, write

Examples

The following example shows how to configure RIP NSF:

```
RP/0/RSP0/CPU0:router(config)# router rip
RP/0/RSP0/CPU0:router(config-rip)# vrf vpn-1
RP/0/RSP0/CPU0:router(config-rip-vrf)# nsf
```

output-delay

To change the interpacket delay for Routing Information Protocol (RIP) updates sent, use the **output-delay** command in the appropriate configuration mode. To remove the delay, use the **no** form of this command.

output-delay *delay*
no output-delay *delay*

Syntax Description

delay Delay (in milliseconds) between consecutive packets in a multiple-packet RIP update. The range is from 8 to 50.

Command Default

The default is no delay.

Command Modes

Router configuration
VRF configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 3.9.0	No modification.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **output-delay** command if you are sending at high speed to a low-speed router that might not be able to receive at the high speed. Configuring this command helps prevent the routing table from losing information.

Task ID	Task ID	Operations
	rip	read, write

Examples

The following example shows how to set the interpacket delay to 10 milliseconds:

```
RP/0/RSP0/CPU0:router(config)# router rip
RP/0/RSP0/CPU0:router(config-rip)# vrf vpn-1
RP/0/RSP0/CPU0:router(config-rip-vrf)# output-delay 10
```

passive-interface (RIP)

To suppress the sending of Routing Information Protocol (RIP) updates on an interface, use the **passive-interface** command in interface configuration mode. To unsuppress updates, use the **no** form of this command.

```
passive-interface
no passive-interface
```

Syntax Description This command has no arguments or keywords.

Command Default RIP updates are sent on the interface.

Command Modes Interface configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.
	Release 3.9.0	No modification.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

While RIP stops sending routing updates to the multicast (or broadcast) address on a passive interface, RIP continues to receive and process routing updates from its neighbors on that interface.

Task ID	Task ID	Operations
	rip	read, write

Examples

The following example shows that GigabitEthernet interface 0/1/0/0 stops multicasting (or broadcasting) RIP updates while continuing to receive RIP updates normally. GigabitEthernet interface 0/1/0/3 sends and receives updates normally. Also RIP updates are unicast to neighbor 172.168.1.2 over the appropriate interface:

```
RP/0/RSP0/CPU0:router(config)# router rip
RP/0/RSP0/CPU0:router(config-rip)# neighbor 172.16.1.2
RP/0/RSP0/CPU0:router(config-rip)# interface GigabitEthernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-rip-if)# passive-interface
RP/0/RSP0/CPU0:router(config-rip-if)# exit
RP/0/RSP0/CPU0:router(config-rip)# interface GigabitEthernet 0/1/0/3
RP/0/RSP0/CPU0:router(config-rip-if)# exit
```

Related Commands

Command	Description
neighbor (RIP), on page 19	Defines a neighboring router with which to exchange RIP protocol information.

poison-reverse

To enable poison reverse processing of Routing Information Protocol (RIP) router updates, use the **poison-reverse** command in interface configuration mode. To disable poison reverse processing of RIP updates, use the **no** form of this command.

```
poison-reverse
no poison-reverse
```

Syntax Description

This command has no arguments or keywords.

Command Default

Poison reverse processing is disabled.

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 3.9.0	No modification.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Route poisoning prevents routing loops by communicating to other routers that a route is no longer reachable, effectively removing these routes from other router's routing tables. The system default, **split horizon**, provides that routes learned through RIP are not advertised from the interface over which they were learned.

The **poison-reverse** command enables poison reverse processing of RIP router updates. A router that receives route poisoning information sends the poisoning information back to the sending router, a process called poison reverse. This process ensures that all routers on the same interface have received the poisoned route information.

If both **poison-reverse** and **split horizon** are configured, then simple split horizon behavior (suppression of routes from the interface over which they were learned) is replaced by poison reverse behavior. If split horizon is disabled, the poison reverse configuration is ignored.

Task ID

Task ID	Operations
rip	read, write

Examples

The following example shows how to enable poison reverse processing for an interface running RIP:

```
RP/0/RSP0/CPU0:router(config)# router rip
RP/0/RSP0/CPU0:router(config-rip)# interface GigabitEthernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-rip-if)# poison-reverse
```

Related Commands

Command	Description
split-horizon disable (RIP), on page 46	Disables the split horizon mechanism.

receive version

To configure the Routing Information Protocol (RIP) interface to accept version-specific packets, use the **receive version** command in interface configuration mode. To revert to the default setting, use the **no** form of this command.

```
receive version {1 | 2 | 1 2}
no receive version {1 | 2 | 1 2}
```

Syntax Description

1	Version 1 packets.
2	Version 2 packets.
1 2	Both versions 1 and 2 packets.

Command Default

Version 2

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 3.9.0	No modification.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **receive version** command to override the default behavior of RIP. This command applies only to the interface being configured.

Task ID

Task ID	Operations
rip	read, write

Examples

The following example shows how to configure an interface to accept both RIP Version 1 and 2 packets:

```
RP/0/RSP0/CPU0:router(config)# router rip
RP/0/RSP0/CPU0:router(config-rip)# interface GigabitEthernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-rip-if)# receive version 1 2
```

Related Commands

Command	Description
send version, on page 31	Configures the RIP interface to send version specific packets.

redistribute (RIP)

To redistribute routes from another routing domain into Routing Information Protocol (RIP), use the **redistribute** command in the appropriate configuration mode. To remove the **redistribute** command from the configuration file and restore the system to its default condition in which the software does not redistribute routes, use the **no** form of this command.

Border Gateway Protocol (BGP)

redistribute bgp *process-id* [**route-policy** *name*] [{**external** | **internal** | **local**}]

no redistribute bgp *process-id*

Connected Interface Routes

redistribute connected [*route-policy name*]
no redistribute connected

Enhanced Interior Gateway Routing Protocol (EIGRP)

redistribute eigrp *process-id* [*route-policy name*]
no redistribute eigrp *process-id*

Intermediate System-to-Intermediate System (ISIS)

redistribute isis *process-id* [*route-policy name*] [{*level-1* | *level-1-2* | *level-2*}]
no redistribute isis *process-id*

Open Shortest Path First (OSPF)

redistribute ospf *process-id* [*route-policy name*] [**match** {*external* [{*1* | *2*}] | *internal* | *nssa-external* [*1* | *2*]}]
no redistribute ospf *process-id*

IP Static Routes

redistribute static [*route-policy name*]
no redistribute static

Syntax Description

bgp	Distributes routes from the BGP protocol.
process-id	<ul style="list-style-type: none"> For the bgp keyword: <ul style="list-style-type: none"> Range for 2-byte Autonomous system numbers (ASNs) is 1 to 65535. Range for 4-byte Autonomous system numbers (ASNs) in asplain format is 1 to 4294967295. Range for 4-byte Autonomous system numbers (ASNs) in asdot format is 1.0 to 65535.65535. For the eigrp keyword, an EIGRP instance name from which routes are to be redistributed. The value takes the form of a string. A decimal number can be entered, but it is stored internally as a string. For the isis keyword, an IS-IS instance name from which routes are to be redistributed. The value takes the form of a string. A decimal number can be entered, but it is stored internally as a string. For the ospf keyword, an OSPF instance name from which routes are to be redistributed. The value takes the form of a string. A decimal number can be entered, but it is stored internally as a string.
external	(Optional) Specifies BGP external routes only.
internal	(Optional) Specifies BGP internal routes only.
local	(Optional) Specifies BGP local routes only.
route-policy name	(Optional) Specifies the identifier of a configured policy. A policy is used to filter the importation of routes from this source routing protocol to RIP.

level-1	(Optional) Redistributes Level 1 IS-IS routes into other routing protocols independently.
level-1-2	(Optional) Distributes both Level 1 and Level 2 IS-IS routes into other routing protocols.
level-2	(Optional) Distributes Level 2 IS-IS routes into other routing protocols independently.
[match { external [1 2] internal nssa-external [1 2] } [route-policy <i>name</i>]	<p>(Optional) Specifies the criteria by which OSPF routes are redistributed into other routing domains. It can be one or more of the following:</p> <ul style="list-style-type: none"> • internal —Routes that are internal to a specific autonomous system (intra- and inter-area OSPF routes). • external [1 2]—Routes that are external to the autonomous system, but are imported into OSPF as Type 1 or Type 2 external routes. • nssa-external [1 2]—Routes that are external to the autonomous system, but are imported into OSPF as Type 1 or Type 2 not-so-stubby area (NSSA) external routes. <p>For the external and nssa-external options, if a type is not specified, then both Type 1 and Type 2 are assumed.</p> <p>If no match is specified, the default is no filtering.</p>
static	Redistributes IP static routes.

Command Default Route redistribution is disabled.

Command Modes Router configuration
VRF configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.
	Release 3.9.0	Asplain format for 4-byte Autonomous system numbers notation was supported.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.



Note When you are redistributing routes (into RIP) using both command keywords for setting or matching of attributes and a route policy, the routes are run through the route policy first, followed by the keyword matching and setting.

Redistributed routing information may be filtered by the **route-policy** *name* keyword and argument. This filtering ensures that only those routes intended by the administrator are redistributed by RIP.

The RIP metric used for redistributed routes is determined by the route policy. If a route policy is not configured or the route policy does not set the RIP metric, the metric is determined based on the redistributed protocol. For VPNv4 routes redistributed by BGP, the RIP metric set at the remote PE router is used, if valid.

In all other cases (BGP, IS-IS, OSPF, EIGRP, connected, static), the metric set by the **default-metric** command is used. If a valid metric cannot be determined, then redistribution does not happen.

For information about routing policies, see the *Routing Policy Commands on Cisco ASR 9000 Series Router module of the Cisco ASR 9000 Series Aggregation Services Router Routing Command Reference*.

Task ID	Task ID	Operations
	rip	read, write

Examples

The following example shows how to cause BGP routes to be redistributed into a RIP process:

```
RP/0/RSP0/CPU0:router(config)# router rip
RP/0/RSP0/CPU0:router(config-rip)# redistribute bgp 100
```

Related Commands

Command	Description
default-metric (RIP), on page 13	Sets default metric values for routes redistributed from other protocols into RIP.

router rip

To configure a routing process and enter router configuration mode for a Routing Information Protocol (RIP) process, use the **router rip** command in global configuration mode. To turn off the RIP routing process, use the **no** form of this command.

```
router rip
no router rip
```

Syntax Description

This command has no arguments or keywords.

Command Default

No router process is defined.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 3.9.0	No modification.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
rip	read, write

Examples

The following example shows how to configure a router process for RIP:

```
RP/0/RSP0/CPU0:router(config)# router rip
RP/0/RSP0/CPU0:router(config-rip)#
```

The following example shows how to enter router configuration mode for RIP and identify commands that can be issued from that mode.

```
RP/0/RSP0/CPU0:router(config)# router rip
RP/0/RSP0/CPU0:router(config-rip)# ?

  auto-summary          Enable automatic network number summarization
  broadcast-for-v2      Send RIP v2 output packets to broadcast address
  commit                Commit the configuration changes to running
  default-information   Control distribution of default information
  default-metric        Set metric of redistributed routes
  describe              Describe a command without taking real actions
  distance              Define an administrative distance
  do                    Run an exec command
  exit                  Exit from this submode
  interface             Enter the RIP interface configuration submode
  maximum-paths         Maximum number of paths allowed per route
  neighbor              Specify a neighbor router
  no                    Negate a command or set its defaults
  nsf                   Enable Cisco Non Stop Forwarding
  output-delay          Interpacket delay for RIP updates
  redistribute          Redistribute information from another routing protocol
  route-policy          Apply route policy to routing updates
  show                  Show contents of configuration
  timers                Adjust routing timers
  validate-update-source Validate source address of routing updates
  vrf                   Enter the RIP vrf configuration submode
RP/0/RSP0/CPU0:router(config-rip)#
```

route-policy (RIP)

To apply a routing policy to updates advertised to or received from a Routing Information Protocol (RIP) neighbor, use the **route-policy** command in the appropriate configuration mode. To disable applying routing policy to updates, use the **no** form of this command.

```
route-policy name {in | out}
```

no route-policy *name* {**in** | **out**}

Syntax Description

name Name of route policy.

in Applies policy to inbound routes.

out Applies policy to outbound routes.

Command Default

No policy is applied.

Command Modes

Router configuration

VRF configuration

Interface configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 3.9.0	No modification.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **route-policy** command to specify a routing policy for an inbound or outbound route. The policy can be used to filter routes or modify route attributes.



Note

If a route policy is configured both on the interface and on the VRF, the interface route policy is applied.

Task ID

Task ID	Operations
rip	read, write

Examples

The following example shows how to filter routing updates received on an interface:

```
RP/0/RSP0/CPU0:router(config)# router rip
RP/0/RSP0/CPU0:router(config-rip)# interface GigabitEthernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-rip-if)# route-policy updpol-1 in
```

send version

To configure the Routing Information Protocol (RIP) interface to send version specific packets, use the **send version** command in interface configuration mode. To revert to the default setting, use the **no** form of this command.

```
send version {1 | 2 | 1 2}
no send version {1 | 2 | 1 2}
```

Syntax Description	
	1 Version 1 packets.
	2 Version 2 packets.
	1 2 Both Version 1 and Version 2 packets.

Command Default	Version 2
------------------------	-----------

Command Modes	Interface configuration
----------------------	-------------------------

Command History	Release	Modification
	Release 3.7.2	This command was introduced.
	Release 3.9.0	No modification.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.
-------------------------	---

Use the **send version** command to override the default behavior of RIP. This command applies only to the interface being configured.

Task ID	Task ID	Operations
	rip	read, write

Examples

The following example shows how to configure an interface to send only RIP Version 2 packets:

```
RP/0/RSP0/CPU0:router(config)# router rip
RP/0/RSP0/CPU0:router(config-rip)# interface GigabitEthernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-rip-if)# send version 2
```

Related Commands	Command	Description
	receive version, on page 24	Configures the RIP interface to accept version-specific packets.

show protocols (RIP)

To display information about the Routing Information Protocol (RIP) process configuration, use the **show protocols** command in EXEC mode.

```
show protocols [{ipv4 | afi-all}] [{allprotocol}] [{default-context | [vrf {vrf-name | all}]] [private]
```

Syntax Description		
ipv4	(Optional)	Specifies an IPv4 address family.
afi-all	(Optional)	Specifies all address families.
all	(Optional)	Specifies all protocols for a given address family.
<i>protocol</i>	(Optional)	Specifies a routing protocol. <ul style="list-style-type: none"> For the IPv4 address family, the options are eigrp, bgp, isis, ospf, and rip.
default-context	(Optional)	Displays default context information. This keyword is available when the eigrp or rip protocol is specified.
vrf <i>vrf-name</i>	(Optional)	Displays VPN routing and forwarding (VRF) information for the specified process. This keyword is available when the eigrp or rip protocol is specified.
private	(Optional)	Displays private EIGRP data. This keyword is available when the eigrp protocol is specified.

Command Modes EXEC

Command History	Release	Modification
	Release 3.7.2	This command was introduced.
	Release 3.9.0	No modification.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show protocols** command to get information about the protocols running on the router and to quickly determine which protocols are active. The command summarizes the important characteristics of the running protocol, and command output varies depending on the specific protocol selected.

For RIP, the command output lists the instance number, default AS context, router ID, default networks, distance, maximum paths, and so on.

Task ID	Task ID	Operations
	RIP	read

Examples

The following is sample output from the **show protocols rip** command:

```
RP/0/RSP0/CPU0:router# show protocols rip
Routing Protocol RIP
 2 VRFs (including default) configured, 2 active
25 routes, 16 paths have been allocated
Current OOM state is "Normal"
UDP socket descriptor is 37
  VRF           Active  If-config  If-active  Routes    Paths    Updates
  default       Active    3          3          11        7        30s
```

This table describes the significant fields shown in the display.

Table 2: show protocols Field Descriptions

Field	Description
VRFs configured	Number of VRFs configured.
VRFs active	Number of active VRFs.
Routes	Number of allocated routes.
Paths	Number of allocated paths.
OOM state	Current out-of-memory state of RIP process.
UDP socket	Current UDP socket descriptor value.

show rip

To display configuration and status of Routing Information Protocol (RIP), use the **show rip** command in EXEC mode.

```
show rip [vrf {vrf-name | all}]
```

Syntax Description	vrf { <i>vrf</i> all } (Optional) Specifies a particular VPN routing and forwarding (VRF) instance or all VRF instances.
Command Default	No default behavior or values
Command Modes	EXEC

Command History	Release	Modification
	Release 3.7.2	This command was introduced.
	Release 3.9.0	No modification.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operations
	rip	read

Examples

The following example shows sample output from the **show rip** command:

```
RP/0/RSP0/CPU0:router# show rip

RIP config:
Active?:                Yes
Added to socket?:      Yes
Out-of-memory state:   Normal
Version:                2
Default metric:        Not set
Maximum paths:         4
Auto summarize?:      No
Broadcast for V2?:     No
Packet source validation?: Yes
NSF:                   Disabled
Timers: Update:        30 seconds (25 seconds until next update)
      Invalid:         180 seconds
      Holddown:        180 seconds
      Flush:           240 seconds
```

This table describes the significant fields shown in the display.

Table 3: show rip Field Descriptions

Field	Description
Active?	Active state setting.
Added to socket?	Multicast group setting on RIP configured interfaces. If yes, updates are received on these interfaces.
Out-of-memory state	Out-of-memory state for RIP can be one of the following: Normal, Minor, Severe, or Critical.
Version	Version number is 2.
Default metric	Default metric value, if configured. Otherwise Not set.
Maximum paths	Number of maximum paths allowed per RIP route.

Field	Description
Auto summarize?	Auto-summarize state setting.
Broadcast for V2?	RIP Version 2 broadcast setting.
Packet source validation?	Validation setting for the source IP address of incoming routing updates to RIP.
Timers	RIP network timer settings.

show rip database

To display database entry information from the Routing Information Protocol (RIP) topology table, use the **show rip database** command in EXEC mode.

```
show rip [vrf {vrf-name | all}] database [{prefix prefix-length | prefix mask}]
```

Syntax Description

vrf { *vrf* | **all** } (Optional) Specifies a particular VPN routing and forwarding (VRF) instance or all VRF instances.

prefix (Optional) Network IP address about which routing information should be displayed.

prefix-length (Optional) The *prefix-length* argument specifies the length of the IP prefix. A decimal value that indicates how many of the high-order contiguous bits of the address compose the prefix (the network portion of the address). A slash between must precede the decimal value. Range is 0 to 32 for IPv4 addresses.

prefix-mask (Optional) Network mask specified in either of two ways:

- Network mask can be a four-part, dotted decimal address. For example, 255.0.0.0 indicates that each bit equal to 1 means the corresponding address bit is a network address.
- Network mask can be indicated as a slash (/) and number. For example, /8 shows that the first 8 bits of the mask are ones, and the corresponding bits of the address are the network address.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 3.9.0	No modification.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Summary address entries appear in the database only if relevant child routes are summarized. When the last child route for a summary address becomes invalid, the summary address is also removed from the routing table.

Task ID	Task ID	Operations
	rip	read

Examples

The following is sample output from the **show rip database** command:

```
RP/0/RSP0/CPU0:router# show rip database

Routes held in RIP's topology database:
 10.0.0.0/24
   [0] directly connected, GigabitEthernet0/6/0/0
 10.0.0.0/8 auto-summary
 12.0.0.0/24
   [5] distance: 20 redistributed
 12.0.0.0/8 auto-summary
 50.50.0.0/24
   [1] via 10.0.0.20, next-hop 10.0.0.20, Uptime: 1s, GigabitEthernet0/6/0/0
 50.50.1.0/24 (inactive)
   [1] via 10.0.0.20, next-hop 10.0.0.20, Uptime: 1s, GigabitEthernet0/6/0/0
 50.0.0.0/8 auto-summary
 90.90.0.0/24
   [5] distance: 20 redistributed
 90.90.1.0/24
   [5] distance: 20 redistributed
```

This table describes the significant fields shown in the display.

Table 4: show rip database Field Descriptions

Field	Description
10.0.0.0/24 [0] directly connected, GigabitEthernet0/6/0/0	Prefix and prefix length for a RIP connected route. 10.0.0.0/24 is directly connected to GigabitEthernet 0/6/0/0. The [0] represents the metric.
10.0.0.0/8 auto-summary	10.0.0.0/8 is a summary route entry.
12.0.0.0/24 [5] distance: 20 redistributed	12.0.0.0/24 is a redistributed route. The metric is 5, and the distance is 20.
50.50.0.0/24 [1] via 10.0.0.20, next-hop 10.0.0.20, Uptime: 1s, GigabitEthernet0/6/0/0	The destination route 50.50.0.0/24 is learned through RIP, and the source 10.0.0.20 advertised it from GigabitEthernet 0/6/0/0. The route was last updated one second ago.
50.50.1.0/24 (inactive) [1] via 10.0.0.20, next hop 10.0.0.20, Uptime: 1s, GigabitEthernet0/6/0/0	The destination route 50.50.1.0/24 is not active in the routing table.

show rip interface

To display interface entry information from the Routing Information Protocol (RIP) topology table, use the **show rip interface** command in EXEC mode.

```
show rip [vrf {vrf-name | all}] interface [type interface-path-id]
```

Syntax Description	
vrf { <i>vrf</i> all }	(Optional) Specifies a particular VPN routing and forwarding (VRF) instance or all VRF instances.
interface	(Optional) Specifies the interface from which to clear topology entries.
<i>type</i>	Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface.
Note	Use the show interfaces command to see a list of all interfaces currently configured on the router.
	For more information about the syntax for the router, use the question mark (?) online help function.

Command Default No default behavior or values

Command Modes EXEC

Command History	Release	Modification
	Release 3.7.2	This command was introduced.
	Release 3.9.0	No modification.
	Release 4.0.0	The command output was modified to include authentication keychain configuration information.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operations
	rip	read

Examples

This example is sample output from the **show rip interface** command:

```
RP/0/RSP0/CPU0:router# show rip interface
GigabitEthernet0_6_0_0
```

```

Rip enabled?:                Yes
Out-of-memory state:        Normal
Broadcast for V2:           No
Accept Metric 0?:          No
Send versions:              2
Receive versions:           2
Interface state:            Up
IP address:                  10.0.0.12/24
Metric Cost:                 0
Split horizon:               Enabled
Poison Reverse:             Disabled
Joined multicast group?:     Yes

GigabitEthernet0_6_0_2
Out-of-memory state:        Normal
Rip enabled?:                Yes
Broadcast for V2:           No
Accept Metric 0?:          No
Send versions:              2
Receive versions:           2
Interface state:            Up
IP address:                  12.0.0.12/24
Metric Cost:                 0
Split horizon:               Enabled
Poison Reverse:             Disabled
Joined multicast group?:     Yes

RIP peers attached to this interface:
 12.0.0.13
    uptime: 3    version: 2
    packets discarded: 0    routes discarded: 402

```

This table describes the significant fields shown in the display.

Table 5: show rip interface Field Descriptions

Field	Description
Rip enabled?	Specifies whether the RIP routing protocol is enabled on the interface.
Out-of-memory state	Specifies the current out-of-memory state on the interface.
Broadcast for V2	Specifies whether RIP Version 2 output packets are sent to a broadcast address on the interface.
Accept Metric 0?	Specifies whether this interface accepts routing entries from RIP updates with a metric set to zero (0).
Send versions:	Specifies which version RIP uses to send out packets on this interface.
Receive versions:	Specifies which version packets RIP accepts on this interface.
Interface state:	Specifies whether the interface is in an up or a down state.
IP address:	IP address of the interface.
Metric Cost:	Specifies metric cost value.
Split horizon:	Specifies whether split horizon is enabled on this interface.

Field	Description
Poison Reverse:	Specifies whether poison reverse is enabled on this interface.
Joined multicast group?:	Specifies whether the interface has joined the RIP multicast group 224.0.0.9.
RIP peers attached to this interface 12.0.0.13	List of RIP neighbors on this interface.
uptime: 3	Specifies how long this neighbor is up.
version: 2	Specifies which version packets are received from this neighbor.
packets discarded: 0	Specifies the number of packets discarded from this neighbor.
routes discarded: 402	Specifies the number of routes discarded from this neighbor.

Authentication Keychain Configuration for RIP Interface on Default VRF

These examples are output of the **show rip interface *interface-path-id*** command to display authentication keychain configuration for RIP interface on default VRF.

When an existing keychain with MD5 cryptographic algorithm was configured on the RIP interface:

```
GigabitEthernet0/3/0/3 (Forward Reference)
Rip enabled?: No
Out-of-memory state: Normal
Broadcast for V2: No
Accept Metric 0?: No
Send versions: 2
Receive versions: 2
Interface state: Unknown State
IP address: 0.0.0.0/0
Metric Cost: 0
Split horizon: Enabled
Poison Reverse: Disabled
Socket set options:
Joined multicast group?: No
LPTS filter set?: No
Authentication mode: MD5 Key chain: <key-chain-name>
Current active send key id: <send key id>
Current active receive key id: <recv key id>
Packets received: <num-rx-packets>
Authenticated packets received: <num-auth-rx-packets>
Packets dropped due to wrong keychain config: <num-rx-wrong-auth-cfg-pkts>
Packets received without authentication data: <num-rx-auth-missing-pkt>
Packets received with invalid authentication: <num-rx-invalid-auth-pkt>
```

When the keychain configured on the RIP interface does not exist or does not have any active keys:

```
GigabitEthernet0/3/0/3 (Forward Reference)
Rip enabled?: No
Out-of-memory state: Normal
Broadcast for V2: No
```

```

Accept Metric 0?:          No
Send versions:             2
Receive versions:         2
Interface state:          Unknown State
IP address:                0.0.0.0/0
Metric Cost:              0
Split horizon:            Enabled
Poison Reverse:           Disabled
Socket set options:
Joined multicast group?:   No
LPTS filter set?:         No

Authentication mode: MD5 Key chain: <key-chain-name>
No active key found in keychain database.
Packets received: <num-rx-packets>
Authenticated packets received: <num-auth-rx-packets>
Packets dropped due to wrong keychain config: <num-rx-wrong-auth-cfg-pkts>
Packets received without authentication data: <num-rx-auth-missing-pkt>
Packets received with invalid authentication: <num-rx-invalid-auth-pkt>

```

When an active key exists in the keychain configured on the RIP interface, but not configured with MD5 cryptographic algorithm:

```

GigabitEthernet0/3/0/3 (Forward Reference)
Rip enabled?:             No
Out-of-memory state:     Normal
Broadcast for V2:        No
Accept Metric 0?:        No
Send versions:           2
Receive versions:       2
Interface state:         Unknown State
IP address:              0.0.0.0/0
Metric Cost:             0
Split horizon:           Enabled
Poison Reverse:          Disabled
Socket set options:
Joined multicast group?: No
LPTS filter set?:        No

Authentication mode: MD5 Key chain: <key-chain-name>
Key(s) not configured with MD5 cryptographic algorithm.
Packets received: <num-rx-packets>
Authenticated packets received: <num-auth-rx-packets>
Packets dropped due to wrong keychain config: <num-rx-wrong-auth-cfg-pkts>
Packets received without authentication data: <num-rx-auth-missing-pkt>
Packets received with invalid authentication: <num-rx-invalid-auth-pkt>

```

When no authentication keychain was configured on the RIP interface:

```

GigabitEthernet0/3/0/3 (Forward Reference)
Rip enabled?:             No
Out-of-memory state:     Normal
Broadcast for V2:        No
Accept Metric 0?:        No
Send versions:           2
Receive versions:       2
Interface state:         Unknown State
IP address:              0.0.0.0/0
Metric Cost:             0
Split horizon:           Enabled

```



```
Poison Reverse:           Disabled
Socket set options:
Joined multicast group?:  No
LPTS filter set?:        No
```

```
Authentication mode is not set.
Packets received: <num-rx-packets>
```

Authentication keychain Configuration for RIP Interface on Non-default VRF

These examples are output of the **show rip vrf vrf-name interface interface-path-id** command to display authentication keychain configuration for RIP interface on a non- default VRF.

When an existing keychain with MD5 cryptographic algorithm has been configured on the RIP interface:

```
GigabitEthernet0/3/0/3 (Forward Reference)
Rip enabled?:           No
Out-of-memory state:   Normal
Broadcast for V2:      No
Accept Metric 0?:     No
Send versions:         2
Receive versions:      2
Interface state:       Unknown State
IP address:            0.0.0.0/0
Metric Cost:           0
Split horizon:         Enabled
Poison Reverse:        Disabled
Socket set options:
Joined multicast group?: No
LPTS filter set?:      No

Authentication mode: MD5 Key chain: <key-chain-name>
Packets received: <num-rx-packets>
Authenticated packets received: <num-auth-rx-packets>
Packets dropped due to wrong keychain config: <num-rx-wrong-auth-cfg-pkts>
Packets received without authentication data: <num-rx-auth-missing-pkt>
Packets received with invalid authentication: <num-rx-invalid-auth-pkt>
```

When the keychain configured on the RIP interface does not exist or does not have any active keys:

```
GigabitEthernet0/3/0/3 (Forward Reference)
Rip enabled?:           No
Out-of-memory state:   Normal
Broadcast for V2:      No
Accept Metric 0?:     No
Send versions:         2
Receive versions:      2
Interface state:       Unknown State
IP address:            0.0.0.0/0
Metric Cost:           0
Split horizon:         Enabled
Poison Reverse:        Disabled
Socket set options:
Joined multicast group?: No
LPTS filter set?:      No

Authentication mode: MD5 Key chain: <key-chain-name>
No active key found in keychain database.
Packets received: <num-rx-packets>
```

```

Authenticated packets received: <num-auth-rx-packets>
Packets dropped due to wrong keychain config: <num-rx-wrong-auth-cfg-pkts>
Packets received without authentication data: <num-rx-auth-missing-pkt>
Packets received with invalid authentication: <num-rx-invalid-auth-pkt>

```

When an active key exists in the keychain configured on the RIP interface, but not configured with MD5 cryptographic algorithm:

```

GigabitEthernet0/3/0/3 (Forward Reference)
Rip enabled?: No
Out-of-memory state: Normal
Broadcast for V2: No
Accept Metric 0?: No
Send versions: 2
Receive versions: 2
Interface state: Unknown State
IP address: 0.0.0.0/0
Metric Cost: 0
Split horizon: Enabled
Poison Reverse: Disabled
Socket set options:
Joined multicast group?: No
LPTS filter set?: No

Authentication mode: MD5 Key chain: <key-chain-name>
Key(s) not configured with MD5 cryptographic algorithm.
Packets received: <num-rx-packets>
Authenticated packets received: <num-auth-rx-packets>
Packets dropped due to wrong keychain config: <num-rx-wrong-auth-cfg-pkts>
Packets received without authentication data: <num-rx-auth-missing-pkt>
Packets received with invalid authentication: <num-rx-invalid-auth-pkt>

```

When no authentication keychain has been configured on the RIP interface:

```

GigabitEthernet0/3/0/3 (Forward Reference)
Rip enabled?: No
Out-of-memory state: Normal
Broadcast for V2: No
Accept Metric 0?: No
Send versions: 2
Receive versions: 2
Interface state: Unknown State
IP address: 0.0.0.0/0
Metric Cost: 0
Split horizon: Enabled
Poison Reverse: Disabled
Socket set options:
Joined multicast group?: No
LPTS filter set?: No

Authentication mode is not set.
Packets received: <num-rx-packets>

```

This table describes the significant fields shown in the display.

Table 6: show rip [vrf <vrf-name>] interface Field Descriptions

Authentication mode: MD5 Key chain	MD5 authentication mode is enabled.
Current active send key id	Active send key ID.

Current active receive key id	Active receive key ID.
Packets received	Number of packets received on the interface.
Authenticated packets received	Number packets received with valid authentication.
Packets dropped due to wrong keychain config	Number of packets dropped due to wrong keychain configuration.
Packets received without authentication data	Number packets received without authentication data .
Packets received with invalid authentication	Number of packets received with invalid authentication.
No active key found in keychain database	No active keys are available in IOS XR keychain database.
Key(s) not configured with MD5 cryptographic algorithm	Keys are not configured with MD5 cryptographic algorithm.
Authentication mode is not set	Authentication mode is not set.

show rip statistics

To display statistical entry information from the Routing Information Protocol (RIP) topology table, use the **show rip statistics** command in EXEC mode.

```
show rip [vrf {vrf-name | all}] statistics
```

Syntax Description

vrf { *vrf* | **all** } (Optional) Specifies a particular VPN routing and forwarding (VRF) instance or all VRF instances.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 3.9.0	No modification.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
rip	read

Examples

The following example is sample output from the **show rip statistics** command:

```
RP/0/RSP0/CPU0:router# show rip statistics

RIP statistics:
  Total messages sent:          5597
  Message send failures:       0
  Regular updates sent:        5566
  Queries responded to:        0
  RIB updates:                  6
  Total packets received:      5743
  Discarded packets:           0
  Discarded routes:            0
  Number of routes allocated:   18
  Number of paths allocated:   14

  Route malloc failures:       0
  Path malloc failures:        0
```

This table describes the significant fields shown in the display.

Table 7: show rip statistics Field Descriptions

Field	Description
Total messages sent	Number of RIP packets sent.
Message send failures	Number of times that the packet send operation failed.
Queries responded to	Number of times RIP updates are sent in response to a RIP query.
RIB updates	Number of route addition and deletion messages sent to RIB.
Total packets received	Number of RIP packets received.
Discarded packets	Number of received RIP packets that are discarded.
Discarded routes	Number of routes (in received RIP update packets) that are discarded.
Number of routes allocated	Number of routes allocated for the RIP internal topology database.
Number of paths allocated	Number of paths allocated for the RIP internal topology database.
Route malloc failures	Number of failures during route allocation.
Path malloc failures	Number of failures during route allocation.



Note

The number of routes found in the allocated field might not be the same number of routes present in the RIP database.

site-of-origin (RIP)

To configure the Site of Origin (SoO) filtering on a Routing Information Protocol (RIP) interface, use the **site-of-origin** command in interface configuration mode. To disable SoO filtering on an interface, use the **no** form of this command.

```
site-of-origin {as-number : number | ip-address : number}
no site-of-origin {as-number : number | ip-address : number}
```

Syntax Description

as-number : Autonomous system number.

- Range for 2-byte Autonomous system numbers (ASNs) is 1 to 65535.
- Range for 4-byte Autonomous system numbers (ASNs) in asplain format is 1 to 4294967295.
- Range for 4-byte Autonomous system numbers (ASNs) in asdot format is 1.0 to 65535.65535.

A colon is used to separate the autonomous system number and network number.

number : Network number. Range is from 0 to 4294967295 when a 2-byte AS number is used. Range is from 0 to 65535 when a 4-byte AS number is used.

ip-address : The IP address argument specifies the IP address in four-part, dotted-decimal notation.

A colon is used to separate the IP address and network number.

Command Default

No default behavior or values

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 3.9.0	Asplain format for 4-byte Autonomous system numbers notation was supported.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

A RIP process must be capable of retrieving the SoO attribute on routes redistributed from the Border Gateway Protocol (BGP) when required to support complex topologies that include MPLS VPN links between sites with backdoor links.

Use the **site-of-origin** command to set an SoO BGP extended community attribute that is used to identify routes that have originated from a site so that the readvertisement of that prefix back to the source site can be prevented. The SoO extended community uniquely identifies the site from which a provider edge (PE) router has learned a route.

Task ID	Task ID	Operations
	rip	read, write

Examples

The following example shows how to configure SoO filtering on a RIP interface:

```
RP/0/RSP0/CPU0:router(config)# router rip
RP/0/RSP0/CPU0:router(config-rip) interface GigabitEthernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-rip-if)# site-of-origin 10.0.0.1:20
```

split-horizon disable (RIP)

To disable split horizon for a Routing Information Protocol (RIP) process, use the **split-horizon disable** command in interface configuration mode. To enable split horizon, use the **no** form of this command.

split-horizon disable
no split-horizon disable

Syntax Description This command has no arguments or keywords.

Command Default Split horizon is enabled for a RIP process.

Command Modes Interface configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.
	Release 3.9.0	No modification.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

You can explicitly specify the **split-horizon disable** command in your configuration.

If split horizon is disabled, the poison reverse configuration is ignored.



Note In general, we recommend that you do not change the default state of split horizon unless you are certain that your application requires the change to properly advertise routes.

Task ID	Task ID	Operations
	rip	read, write

Examples

The following example shows how to disable split horizon on a Packet-over-SONET/SDH link:

```
RP/0/RSP0/CPU0:router(config)# router rip
RP/0/RSP0/CPU0:router(config-rip)# interface GigabitEthernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-rip-if)# split-horizon disable
```

Related Commands

Command	Description
poison-reverse, on page 23	Enables poison reverse processing of RIP router updates.

timers basic

To adjust Routing Information Protocol (RIP) network timers, use the **timers basic** command in router configuration mode. To restore the timers default values, use the **no** form of this command.

timers basic *update invalid holddown flush*
no timers basic

Syntax Description

<i>update</i>	Rate, in seconds, at which updates are sent. This is the fundamental timing parameter of the routing protocol. Range is 5 to 50000.
<i>invalid</i>	Interval, in seconds, after which a route is declared invalid; it should be at least three times the value of the update argument. A route becomes invalid when there is an absence of updates that refresh the route. The route then enters into a holddown state. The route is marked inaccessible and is advertised as unreachable. Range is 15 to 200000.
<i>holddown</i>	Interval, in seconds, during which routing information regarding better paths is suppressed. It should be at least three times the value of the update argument. A route enters into a holddown state when an update packet is received that indicates that the route is unreachable. The route is marked inaccessible and is advertised as unreachable. When holddown expires, routes advertised by other sources are accepted, and the route is no longer inaccessible. Range is 15 to 200000.
<i>flush</i>	Amount of time, in seconds, that must pass before the route is removed from the routing table; the interval specified should be greater than the value of the <i>invalid</i> argument. If it is less than the invalid timer value, the proper holddown interval cannot elapse, which results in a new route being accepted before the holddown interval expires. Range is 16 to 250000.

Command Default

update : 30
invalid : 180

holddown : 180

flush : 240

Command Modes Router configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.
	Release 3.9.0	No modification.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The basic timing parameters for RIP are adjustable. Because RIP is running a distributed, asynchronous routing algorithm, these timers must be the same for all routers in the network.



Note Use the **show rip** command to display the current and default timer values.

Task ID	Task ID	Operations
	rip	read, write

Examples The following example shows how to set updates to be broadcast every 5 seconds. If a router is not heard from in 15 seconds, the route is declared unusable. Further information is suppressed for an additional 15 seconds. At the end of the flush period, the route is flushed from the routing table.

```
RP/0/RSP0/CPU0:router(config)# router rip
RP/0/RSP0/CPU0:router(config-rip) timers basic 5 15 15 30
```

Related Commands	Command	Description
	show rip, on page 33	Displays configuration and status of RIP.

validate-update-source disable

To stop the Cisco IOS XR software from validating the source IP address of incoming routing updates for Routing Information Protocol (RIP), use the **validate-update-source disable** command in router configuration mode. To reenable this function, use the **no** form of this command.

validate-update-source disable
no validate-update-source disable

Syntax Description

This command has no arguments or keywords.

Command Default

The source IP address of incoming updates for RIP is always validated.

Command Modes

Router configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 3.9.0	No modification.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When the **validate-update-source disable** command is used, validation is not performed.

By default, the software ensures that the source IP address of incoming routing updates is on the same IP network as one of the addresses defined for the receiving interface.

For unnumbered IP interfaces (interfaces configured as IP unnumbered), no checking is performed.

Task ID

Task ID	Operations
rip	read, write

Examples

The following example shows how to disable source validation:

```
RP/0/RSP0/CPU0:router(config)# router rip
RP/0/RSP0/CPU0:router(config-rip) validate-update-source disable
```

vrf (RIP)

To define a VPN routing and forwarding (VRF) instance and to enter VRF configuration mode, use the **vrf** command in router configuration mode. To remove a VRF instance use the no form of this command.

vrf *vrf-name*
no vrf *vrf-name*

Syntax Description

vrf-name Specifies a particular VPN routing and forwarding instance.

Command Default No VRFs are defined.

Command Modes Router configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.
	Release 3.9.0	No modification.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the vrf command to configure a VRF instance. A VRF instance is a collection of VPN routing and forwarding tables maintained at the provider edge (PE) router.

From VRF configuration mode, you can issue all commands available in router configuration mode such as the **auto-summary** command.

Task ID	Task ID	Operations
	rip	read, write

Examples

The following example shows how to enter VRF configuration mode and identify RIP commands that can be issued from that mode:

```
RP/0/RSP0/CPU0:router(config)# router rip
RP/0/RSP0/CPU0:router(config-rip)# vrf vpn-1
RP/0/RSP0/CPU0:router(config-rip-vrf)# ?

  auto-summary          Enable automatic network number summarization
  broadcast-for-v2      Send RIP v2 output packets to broadcast address
  commit                Commit the configuration changes to running
  default-information   Control distribution of default information
  default-metric        Set metric of redistributed routes
  describe              Describe a command without taking real actions
  distance              Define an administrative distance
  do                    Run an exec command
  exit                  Exit from this submode
  interface             Enter the RIP interface configuration submode
  maximum-paths         Maximum number of paths allowed per route
  neighbor              Specify a neighbor router
  no                    Negate a command or set its defaults
  nsf                   Enable Cisco Non Stop Forwarding
  output-delay          Interpacket delay for RIP updates
  redistribute          Redistribute information from another routing protocol
  route-policy          Apply route policy to routing updates
  show                  Show contents of configuration
  timers                Adjust routing timers
  validate-update-source Validate source address of routing updates
RP/0/RSP0/CPU0:router(config-rip-vrf)#
```