

Implementing IP in IP Tunnel

This chapter module provides conceptual and configuration information for IP in IP tunnels on Cisco ASR 9000 Series Router.



Note

For a complete description of the IP in IP tunnel commands listed in this chapter, see the *VPN and Ethernet Services Command Reference for Cisco ASR 9000 Series Routers*. To locate documentation of other commands that appear in this chapter, use the command reference master index, or search online.

Table 1: Feature History for IP in IP tunnel

Release	Modification
Release 5.3.1	This feature was introduced on Cisco ASR 9000 Series
	Router.

- IP in IP Tunneling, on page 1
- Configuring IP in IP Tunnel, on page 2
- IP in IP Tunneling: Examples, on page 3

IP in IP Tunneling

IP in IP tunneling refers to the encapsulation of an IP packet as a payload in another IP packet. ASR9K routers support IP in IP tunnels with all possible combinations of IPv4 and IPv6; that is, IPv4 over IPv4, IPv6 over IPv4, IPv6 over IPv4, IPv6 over IPv6, and IPv6 over IPv6. For example, an IPv4 over IPv6 refers to an IPv4 packet as a payload encapsulated within an IPv6 packet and routed across an IPv6 network to reach the destination IPv4 network, where it is decapsulated.

IP in IP tunneling does not require any additional header such as a GRE header used in the GRE tunnels. So, IP in IP tunneling is preferred over GRE tunnels if both the networks are IP networks.

Restrictions

The following are not supported in IP in IP tunnels:

• MPLS

- · Multicast packets
- Keep-Alive packets
- Path MTU (Maximum Transmission Unit) discovery
- DF (Do not Fragment) bit configuration in IPv6 tunnel mode.



Note

If DF bit is configured for the tunnel interface, you cannot enable IPv6 tunnel mode.

Configuring IP in IP Tunnel

Perform the following steps to configure an IP in IP tunnel.

SUMMARY STEPS

- 1. configure
- 2. interface tunnel-ip tunnel-id
- 3. {ipv4 | ipv6} address ip-address
- **4.** tunnel mode $\{ipv4 \mid ipv6\}$
- **5. tunnel source** { *interface-id* | *ipv4/v6-address* }
- **6.** tunnel destination ipv4/v6-address
- **7.** (Optional) tunnel df-bit {copy | disable}
- **8.** (Optional) tunnel tos tos-value
- 9. commit

DETAILED STEPS


	Command or Action	Purpose
Step 1	configure	Enters the Global Configuration mode.
	Example:	
	RP/0/RSP0/CPU0:router# configure	
Step 2	sub-mode. The <i>tunnel-id</i> is the nur	Creates a tunnel interface and enters the tunnel configuration
		sub-mode. The <i>tunnel-id</i> is the numeric identifier for the tunnel interface.
	<pre>RP/0/RSP0/CPU0:router(config)# interface tunnel-ip 1</pre>	
Step 3	{ipv4 ipv6} address ip-address	Sets the IPv4 or IPv6 address, as required, for the tunnel interface.
	Example:	
	RP/0/RSP0/CPU0:router(config-if)# ipv6 address 10::1/64	

	Command or Action	Purpose
Step 4	<pre>tunnel mode {ipv4 ipv6} Example: RP/0/RSP0/CPU0:router(config-if) # tunnel mode ipv6</pre>	Sets the tunnel mode as IPv4 or IPv6. This states the tunnel is in an IPv4 or IPv6 transport network.
Step 5	<pre>tunnel source {interface-id ipv4/v6-address} Example: RP/0/RSP0/CPU0:router(config-if) # tunnel source GigabitEthernet0/0/0/0</pre>	Specifies an IP address or an interface that serves as the tunnel source. The encapsulated packet uses this IP address as the source address. If the tunnel mode is set to IPv4 or IPv6, an IPv4 or IPv6 address is selected as a tunnel source address from the specified source interface respectively.
Step 6	<pre>tunnel destination ipv4/v6-address Example: RP/0/RSP0/CPU0:router(config-if) # tunnel destination 100::2</pre>	Specifies the destination IP address for the tunnel. The encapsulated packet uses this IP address as the destination address.
Step 7	(Optional) tunnel df-bit {copy disable} Example: RP/0/RSP0/CPU0:router(config-if) # tunnel df-bit disable	Note This is valid only for a tunnel that uses an IPv4 transport network. Configures the DF bit value for the outer IP packet. For details on this tunnel df-bit command, see the VPN and Ethernet Services Command Reference for Cisco ASR 9000 Series Routers.
Step 8	(Optional) tunnel tos tos-value Example: RP/0/RSP0/CPU0:router(config-if) # tunnel tos 1	Sets the TOS value for the outer IP packet in the tunnel. For details on this tunnel tos command, see the <i>VPN and Ethernet Services Command Reference for Cisco ASR 9000 Series Routers</i> .
Step 9	commit	

IP in IP Tunneling: Examples

The following examples provide configurations for an IPv4 or IPv6 tunnel, with the transport VRF as the default VRF for the following simplified network topology.

Figure 1: IP in IP tunnel network topology

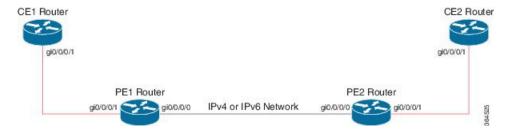

Configuration example for an IPv4 tunnel

```
PE1 Router Configuration
                                              PE2 Router Configuration
interface GigabitEthernet0/0/0/0
                                              interface GigabitEthernet0/0/0/0
!! Link between PE1-PE2
                                              !! Link between PE1-PE2
ipv4 address 100.1.1.1/64
                                              ipv4 address 100.1.1.2/64
interface GigabitEthernet0/0/0/1
                                              interface GigabitEthernet0/0/0/1
!! Link between CE1-PE1
                                              !! Link between PE2-CE2
ipv4 address 20.1.1.1/24
                                              ipv4 address 30.1.1.1/24
ipv6 address 20::1/64
                                              ipv6 address 30::1/64
interface tunnel-ip 1
                                              interface tunnel-ip 1
ipv4 address 10.1.1.1/24
                                              ipv4 address 10.1.1.2/24
ipv6 address 10::1/64
                                              ipv6 address 10::2/64
tunnel mode ipv4
                                              tunnel mode ipv4
tunnel source GigabitEthernet0/0/0/0
                                              tunnel source GigabitEthernet0/0/0/0
tunnel destination 100.1.1.2
                                               tunnel destination 100.1.1.1
router static
                                              router static
address-family ipv4 unicast
                                              address-family ipv4 unicast
  30.1.1.0/24 tunnel-ip1
                                                20.1.1.0/24 tunnel-ip1
 address-family ipv6 unicast
                                               address-family ipv6 unicast
  30::0/64 tunnel-ip1
                                                20::0/64 tunnel-ip1
                                              !
CE1 Router Configuration
                                              CE2 Router Configuration
interface GigabitEthernet0/0/0/1
                                              interface GigabitEthernet0/0/0/1
!! Link between CE1-PE1
                                              !! Link between CE2-PE2
ipv4 address 20.1.1.2 255.255.255.0
                                              ipv4 address 30.1.1.2 255.255.255.0
ipv6 address 20::2/64
                                              ipv6 address 30::2/64
router static
                                              router static
address-family ipv4 unicast
                                              address-family ipv4 unicast
 30.1.1.0/24 20.1.1.1
                                               20.1.1.0/24 30.1.1.1
address-family ipv6 unicast
                                              address-family ipv6 unicast
 30::0/64 20::1
                                               20::0/64 30::1
```

Configuration example for an IPv6 tunnel

PE1 Router Configuration	PE2 Router Configuration

```
interface GigabitEthernet0/0/0/0
                                              interface GigabitEthernet0/0/0/0
!! Link between PE1-PE2
                                              !! Link between PE1-PE2
ipv6 address 100::1/64
                                              ipv6 address 100::2/64
                                             interface GigabitEthernet0/0/0/1
interface GigabitEthernet0/0/0/1
!! Link between CE1-PE1
                                              !! Link between PE2-CE2
                                              vrf RED
ipv4 address 20.1.1.1/24
                                              ipv4 address 30.1.1.1/24
ipv6 address 20::1/64
                                              ipv6 address 30::1/64
interface tunnel-ip 1
                                             interface tunnel-ip 1
vrf RED
                                              vrf RED
ipv4 address 10.1.1.1/24
                                              ipv4 address 10.1.1.2/24
ipv6 address 10::1/64
                                              ipv6 address 10::2/64
tunnel mode ipv6
                                              tunnel mode ipv6
                                              tunnel source GigabitEthernet0/0/0/0
tunnel source GigabitEthernet0/0/0/0
                                              tunnel destination 100::1
tunnel destination 100::2
vrf RED
                                              vrf RED
address-family ipv6 unicast
                                              address-family ipv6 unicast
 import route-target
                                               import route-target
  2:1
                                                2:1
 - !
 export route-target
                                               export route-target
  2:1
                                                2:1
address-family ipv4 unicast
                                              address-family ipv4 unicast
 import route-target
                                               import route-target
  2:1
                                                2:1
 1
                                               - 1
 export route-target
                                               export route-target
  2:1
                                                2:1
 - 1
                                               1
router static
                                             router static
vrf RED
                                             vrf RED
 address-family ipv4 unicast
                                               address-family ipv4 unicast
  30.1.1.0/24 tunnel-ip1
                                                20.1.1.0/24 tunnel-ip1
 address-family ipv6 unicast
                                               address-family ipv6 unicast
  30::0/64 tunnel-ip1
                                                20::0/64 tunnel-ip1
 !
                                               1
                                              !
!
                                              !
CE1 Router Configuration
                                              CE2 Router Configuration
interface GigabitEthernet0/0/0/1
                                              interface GigabitEthernet0/0/0/1
!! Link between CE1-PE1
                                              !! Link between CE2-PE2
ipv4 address 20.1.1.2 255.255.255.0
                                              ipv4 address 30.1.1.2 255.255.255.0
ipv6 address 20::2/64
                                              ipv6 address 30::2/64
router static
                                              router static
address-family ipv4 unicast
                                              address-family ipv4 unicast
 30.1.1.0/24 20.1.1.1
                                               20.1.1.0/24 30.1.1.1
address-family ipv6 unicast
                                             address-family ipv6 unicast
 30::0/64 20::1
                                               20::0/64 30::1
```

IP in IP Tunneling: Examples