



Preface



Note This product has reached end-of-life status. For more information, see the [End-of-Life and End-of-Sale Notices](#).

This guide describes how to install a Cisco Software Manager (CSM) server.

- [Audience, on page i](#)
- [Changes to This Document, on page i](#)
- [Obtaining Documentation and Submitting a Service Request, on page i](#)

Audience

This guide is for those responsible for installing the Cisco Software Manager server 4.0 and system administrators of Cisco routers.

This publication assumes that the reader has substantial background in installing and configuring router and switch-based hardware. The reader must also be familiar with electronic circuitry and wiring practices and experienced as an electronic or electromechanical technician.

Changes to This Document

This table lists the technical changes that are made to this document since it was first developed.

Table 1: Changes to This Document

Date	Summary
April 2020	Initial Release of this document.

Obtaining Documentation and Submitting a Service Request

For the following purposes, see *What's New in Cisco Product Documentation*, at: <http://www.cisco.com/c/en/us/td/docs/general/whatsnew/whatsnew.html>.

- Getting information about obtaining documentation, using the Cisco Bug Search Tool (BST)
- Submitting a service request
- Gathering additional information

Subscribe to *What's New in Cisco Product Documentation*. This document lists all new and revised Cisco technical documentation as an RSS feed and delivers content directly to your desktop using a reader application. The RSS feeds are free service, and Cisco currently supports RSS Version 2.0.