



DMVPN Configuration Using FQDN

The DMVPN Configuration Using FQDN feature enables next hop clients (NHCs) to register with the next hop server (NHS).

This feature allows you to configure a fully qualified domain name (FQDN) for the nonbroadcast multiple access network (NBMA) address of the hub (NHS) on the spokes (NHCs). The spokes resolve the FQDN to IP address using the DNS service and get registered with the hub using the newly resolved address. This allows spokes to dynamically locate the IP address of the hub using FQDN.

With this feature, spokes need not configure the protocol address of the hub. Spokes learn the protocol address of the hub dynamically from the NHRP registration reply of the hub. According to RFC 2332, the hub to which the NHRP registration was sent responds with its own protocol address in the NHRP registration reply and hence the spokes learn the protocol address of the hub from the NHRP registration reply packet.

In Cisco IOS Release 15.1(2)T and earlier releases, in Dynamic Multipoint VPN (DMVPN), NHS NBMA addresses were configured with either IPv4 or IPv6 addresses. Because NHS was configured to receive a dynamic NBMA address, it was difficult for NHCs to get the updated NBMA address and register with the NHS. This limitation is addressed with the DMVPN Configuration Using FQDN feature. This feature allows NHC to use an FQDN instead of an IP address to configure NBMA and register with the NHS dynamically.

- [Prerequisites for DMVPN Configuration Using FQDN, on page 1](#)
- [Restrictions for DMVPN Configuration Using FQDN, on page 1](#)
- [Information About DMVPN Configuration Using FQDN, on page 2](#)
- [How to Configure DMVPN Configuration Using FQDN, on page 2](#)
- [Configuration Examples for DMVPN Configuration Using FQDN, on page 8](#)
- [Additional References, on page 9](#)
- [Feature Information for DMVPN Configuration Using FQDN, on page 10](#)

Prerequisites for DMVPN Configuration Using FQDN

Cisco IOS Domain Name System (DNS) client must be available on the spoke.

Restrictions for DMVPN Configuration Using FQDN

If the NBMA IP address resolved from the FQDN is not mapped to an NHS configured with the protocol address, the spoke cannot register with the hub.

Information About DMVPN Configuration Using FQDN

DNS Functionality

A Domain Name System (DNS) client communicates with a DNS server to translate a hostname to an IP address.

The intermediate DNS server or the DNS client on the route enters the FQDN DNS reply from the DNS server into the cache for a lifetime. If the DNS client receives another query before the lifetime expires, the DNS client uses the entry information from the cache. If the cache expires, the DNS client queries the DNS server. If the NBMA address of the NHS changes frequently, the DNS entry lifetime must be short, otherwise the spokes may take some time before they start using the new NBMA address for the NHS.

DNS Server Deployment Scenarios

A DNS server can be located either in a hub network or outside a hub and spoke network.

Following are the four DNS server load balancing models:

- Round robin--Each DNS request is assigned an IP address sequentially from the list of IP addresses configured for an FQDN.
- Weighted round robin--This is similar to round-robin load balancing except that the IP addresses are assigned weights and nodes, where higher weights can take more load or traffic.
- Geography or network--Geography-based load balancing allows the requests to be directed to the optimal node that is geographically the nearest or the most efficient to the requester.
- Failover--Failover load balancing sends all requests to a single host until the load balancer determines a particular node to be no longer available. It then directs traffic to the next node available in the list.

How to Configure DMVPN Configuration Using FQDN

Configuring a DNS Server on a Spoke

Perform this task to configure a DNS server on a spoke. You must perform this task only if you want to resolve FQDN using an external DNS server.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **ip name-server** *ip-address*
4. **exit**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: <pre>Router> enable</pre>	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	configure terminal Example: <pre>Router# configure terminal</pre>	Enters global configuration mode.
Step 3	ip name-server <i>ip-address</i> Example: <pre>Router(config)# ip name-server 192.0.2.1</pre>	Configures a DNS server on a spoke.
Step 4	exit Example: <pre>Router(config)# exit</pre>	Exits global configuration mode.

Configuring a DNS Server

Perform this task to configure a DNS server. You must perform the configuration on a DNS server.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **ip dns server**
4. **ip host *hostname* *ip-address***
5. **exit**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: <pre>Router> enable</pre>	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	configure terminal Example: <pre>Router# configure terminal</pre>	Enters global configuration mode.

	Command or Action	Purpose
Step 3	ip dns server Example: <pre>Router(config)# ip dns server</pre>	Enables a DNS server.
Step 4	ip host <i>hostname</i> <i>ip-address</i> Example: <pre>Router(config)# ip host host1.example.com 192.0.2.2</pre>	Maps a FQDN (<i>hostname</i>) with the IP address in the DNS hostname cache for a DNS view. Note Configure the ip host command on a DNS server if you have configured a DNS server on the spoke and configure the command on the spoke if you have not configured a DNS server on the spoke. See the Configuring a DNS Server on a Spoke task.
Step 5	exit Example: <pre>Router(config)# exit</pre>	Exits global configuration mode.

Configuring an FQDN with a Protocol Address

Perform this task to configure an FQDN with a protocol address. You must know the protocol address of the NHS while you are configuring the FQDN. This configuration registers spoke to a hub using NBMA.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **interface tunnel *number***
4. **ip nhrp nhs *nhs-address* [nbma {*nbma-address* | *FQDN-string*}] [multicast] [priority *value*] [cluster *number*]**
5. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: <pre>Router> enable</pre>	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	configure terminal Example: <pre>Router# configure terminal</pre>	Enters global configuration mode.

	Command or Action	Purpose
Step 3	interface tunnel <i>number</i> Example: <pre>Router(config)# interface tunnel 1</pre>	Enters interface configuration mode.
Step 4	ip nhrp nhs <i>nhs-address</i> [nbma { <i>nbma-address</i> <i>FQDN-string</i> }] [multicast] [priority value] [cluster number] Example: <pre>Router(config-if)# ip nhrp nhs 192.0.2.1 nbma examplehub.example1.com multicast</pre>	Registers a spoke to a hub. <ul style="list-style-type: none"> You can configure the command in the following two ways: <ul style="list-style-type: none"> ip nhrp nhs protocol-ipaddress nbma FQDN-string--Use this command to register spoke to a hub using the FQDN string. ip nhrp nhs protocol-ipaddress nbma nbma-ipaddress--Use this command to register spoke to a hub using the NHS NBMA IP address. <p>Note You can use the ipv6 nhrp nhs protocol-ipaddress [nbma {nhs-ipaddress FQDN-string}] [multicast] [priority value] [cluster number] command for registering IPv6 address.</p>
Step 5	end Example: <pre>Router(config-if)# end</pre>	Exits interface configuration mode and returns to privileged EXEC mode.

Configuring a FQDN Without an NHS Protocol Address

Perform this task to configure an FQDN without an NHS protocol address.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **interface tunnel** *number*
4. **ip nhrp nhs dynamic** *nbma {nbma-address | FQDN-string}* [**multicast**] [**priority value**] [**cluster value**]
5. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: <pre>Router> enable</pre>	Enables privileged EXEC mode. <ul style="list-style-type: none"> Enter your password if prompted.

	Command or Action	Purpose
Step 2	configure terminal Example: <pre>Router# configure terminal</pre>	Enters global configuration mode.
Step 3	interface tunnel <i>number</i> Example: <pre>Router(config)# interface tunnel 1</pre>	Enters interface configuration mode.
Step 4	ip nhrp nhs dynamic nbma {<i>nbma-address</i> <i>FQDN-string</i>} [multicast] [priority value] [cluster value] Example: <pre>Router(config-if)# ip nhrp nhs dynamic nbma examplehub.example1.com</pre>	Registers a spoke to a hub. <ul style="list-style-type: none"> The NHS protocol address is dynamically fetched by the spoke. You can configure the command in the following two ways: <ul style="list-style-type: none"> ip nhrp nhs dynamic nbma <i>FQDN-string</i>--Use this command to register a spoke to a hub using the FQDN string. ip nhrp nhs dynamic nbma <i>nbma-address</i>--Use this command to register a spoke to a hub using the NHS NBMA IP address. <p>Note You can use the ipv6 nhrp nhs dynamic nbma {<i>nbma-address</i> <i>FQDN-string</i>} [multicast] [priority value] [cluster value] command for registering IPv6 address.</p>
Step 5	end Example: <pre>Router(config-if)# end</pre>	Exits interface configuration mode and returns to privileged EXEC mode.

Verifying DMVPN FQDN Configuration

This task shows how to display information to verify DMVPN FQDN configuration. The following **show** commands can be entered in any order.

SUMMARY STEPS

1. **enable**
2. **show dmvpn**
3. **show ip nhrp nhs**
4. **show running-config interface tunnel *tunnel-number***
5. **show ip nhrp multicast**

DETAILED STEPS

Step 1 enable

Enables privileged EXEC mode. Enter your password if prompted.

Example:

```
Router# enable
```

Step 2 show dmvpn

Displays DMVPN-specific session information.

Example:

```
Router# show dmvpn
Legend: Attrb --> S - Static, D - Dynamic, I - Incomplete
        N - NATed, L - Local, X - No Socket
        # Ent --> Number of NHRP entries with same NBMA peer
        NHS Status: E --> Expecting Replies, R --> Responding, W --> Waiting
        UpDn Time --> Up or Down Time for a Tunnel
=====
Interface: Tunnell1, IPv4 NHRP Details
Type:Spoke, NHRP Peers:1,
# Ent  Peer NBMA Addr Peer Tunnel Add State  UpDn Tm Attrb
-----
      1      192.0.2.1      192.0.2.2 UP 00:00:12      S
              (h1.cisco.com)
```

Step 3 show ip nhrp nhs

Displays the status of the NHS.

Example:

```
Router# show ip nhrp nhs
IPv4 Registration Timer: 10 seconds
Legend: E=Expecting replies, R=Responding, W=Waiting
Tunnell1:
192.0.2.1 RE NBMA Address: 192.0.2.2 (h1.cisco.com) priority = 0 cluster = 0
```

Step 4 show running-config interface tunnel *tunnel-number*

Displays the contents of the current running configuration file or the tunnel interface configuration.

Example:

```
Router# show running-config interface tunnel 1
Building configuration...
Current configuration : 462 bytes
!
interface Tunnell1
 ip address 192.0.2.1 255.255.255.0
 no ip redirects
 ip mtu 1440
 ip nhrp authentication testing
 ip nhrp group spoke_group2
 ip nhrp network-id 123
 ip nhrp holdtime 150
 ip nhrp nhs dynamic nbma h1.cisco.com multicast
```

```

ip nhrp registration unique
ip nhrp registration timeout 10
ip nhrp shortcut
no ip route-cache cef
tunnel source Ethernet0/0
tunnel mode gre multipoint
tunnel key 1001
tunnel protection ipsec profile DMVPN
end

```

Step 5 **show ip nhrp multicast**

Displays NHRP multicast mapping information.

Example:

```

Route# show ip nhrp multicast
I/F      NBMA address
Tunnel1  192.0.2.1    Flags: nhs

```

Configuration Examples for DMVPN Configuration Using FQDN

Example: Configuring a Local DNS Server

The following example shows how to configure a local DNS server:

```

enable
configure terminal
ip host host1.example.com 192.0.2.2

```

Example: Configuring an External DNS Server

The following example shows how to configure an external DNS server:

On a spoke

```

enable
configure terminal
ip name-server 192.0.2.1

```

On a DNS Server

```

enable
configure terminal
ip dns server
ip host host1.example.com 192.0.2.2

```

Example: Configuring NHS with a Protocol Address and an NBMA Address

The following example shows how to configure NHS with a protocol address and an NBMA address:


```
enable
configure terminal
interface tunnel 1
ip nhrp nhs 192.0.2.1 nbma 209.165.200.225
```

Example: Configuring NHS with a Protocol Address and an FQDN

The following example shows how to configure NHS with a protocol address and an FQDN:

```
enable
configure terminal
interface tunnel 1
ip nhrp nhs 192.0.2.1 nbma examplehub.example1.com
```

Example: Configuring NHS Without a Protocol Address and with an NBMA Address

The following example shows how to configure NHS without a protocol address and with an NBMA address:

```
enable
configure terminal
interface tunnel 1
ip nhrp nhs dynamic nbma 192.0.2.1
```

Example: Configuring NHS Without a Protocol Address and with an FQDN

The following example shows how to configure NHS without a protocol address and with an FQDN:

```
enable
configure terminal
interface tunnel 1
ip nhrp nhs dynamic nbma examplehub.example1.com
```

Additional References

Related Documents

Related Topic	Document Title
DMVPN complete command syntax, command mode, defaults, usage guidelines, and examples	<i>Cisco IOS Security Command Reference</i>

Standards

Standard	Title
No new or modified standards are supported by this feature and support for existing standards has not been modified by this feature.	--

MIBs

MIB	MIBs Link
No new or modified MIBs are supported by this feature, and support for existing MIBs has not been modified by this feature.	To locate and download MIBs for selected platforms, Cisco software releases, and feature sets, use Cisco MIB Locator found at the following URL: http://www.cisco.com/go/mibs

RFCs

RFC	Title
RFC 2332	<i>NBMA Next Hop Resolution Protocol (NHRP)</i>

Technical Assistance

Description	Link
The Cisco Support and Documentation website provides online resources to download documentation, software, and tools. Use these resources to install and configure the software and to troubleshoot and resolve technical issues with Cisco products and technologies. Access to most tools on the Cisco Support and Documentation website requires a Cisco.com user ID and password.	http://www.cisco.com/cisco/web/support/index.html

Feature Information for DMVPN Configuration Using FQDN

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Table 1: Feature Information for DMVPN Configuration Using FQDN

Feature Name	Releases	Feature Information
DMVPN Configuration Using FQDN		<p>The DMVPN Configuration Using FQDN feature enables the NHC to register with the NHS. It uses the NHRP without using the protocol address of the NHS.</p> <p>The following commands were introduced or modified: clear dmvpn session, debug nhrp condition, ip nhrp nhs, and ipv6 nhrp nhs.</p>