



# Configuring PRBS

---

This chapter describes the procedure to configure the PRBS.

- [Configure PRBS, on page 1](#)

## Configure PRBS

### Procedure

---

**Step 1** exec

**Example:**

Router> exec

Enables privileged EXEC mode.

- Enter your password if prompted.

**Step 2** terminal controller

**Example:**

Router(config)# controller optics 0/15/0/2 port-mode otn framing opu2

Enters the global configuration mode.

**Step 3** secondary-admin-state

**Example:**

Router(config)#controller odu2 0/15/0/2 secondary-admin-state maintenance

Enters the secondary admin state.

**Step 4** opu prbs mode {source|source-sink|sink} pattern {PN11|PN23|PN31|INVERTED\_PN11|INVRTED\_PN31}

**Example:**

Router(config)# controller odu2 0/15/0/2 opu prbs mode source pattern pn31

Enters the attribute set in the path protection profile.

**Step 5** exit

**Example:**

```
Router(config)# exit
```

Exits the controller configuration mode.

---