



## YANG Commands

---

This module outlines the commands necessary to utilize the YANG server module configuration protocol, which defines network operations using data models.

For detailed information about YANG data model concepts, configuration tasks, and examples, see the *Drive Network Automation Using Programmable YANG Data Models in the Cisco 8000 Series Router* module in the *Programmability Configuration Guide for Cisco 8000 Series Routers*.

- [yang-server module-set, on page 2](#)

# yang-server module-set

To enable a certain set of YANG models, use the **yang-server module-set** command in the Global Configuration mode.

## yang-server module-set

<b>Syntax Description</b>	<b>UM-preferred</b>	This set uses applicable unified models.
	<b>XR-only</b>	This set uses native models.
<b>Command Default</b>	None	
<b>Command Modes</b>	Global Configuration mode	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 5.3.1	This command was introduced.
<b>Usage Guidelines</b>	The <b>yang-server module-set</b> command is applied to only config models. When this command is configured, all externally defined YANG models, including OpenConfig models, are disabled.	
<b>Task ID</b>	<b>Task ID</b>	<b>Operation</b>
	config-services	read, write

## Example

This command shows how to use the **yang-server module-set** command:

```
Router# config
Router(config)# yang-server module-set XR-only
Router# end
```