



About this documentation

- [Document purpose, on page 1](#)
- [Warnings and notices, on page 1](#)

Document purpose

This installation guide describes how to perform a clean installation of Cisco Cyber Vision on the following devices:

- Cisco Catalyst IR1101 Rugged Series Router
- Cisco Catalyst IR1800 Rugged Series Router

Consequently, all instructions about the Cisco Catalyst IR1101 are also applicable to the Cisco Catalyst IR1800.

Moreover, this document describes how to upgrade sensors through different methods.

This documentation is applicable to **system version 5.0.0**.



Note

To be able to use the Cisco Cyber Vision sensor management extension, an IP address reachable by the Center Collection interface must be set on the Collection VLAN.

Warnings and notices

This manual contains notices you have to observe to ensure your personal safety as well as to prevent damage to property.

The notices referring to your personal safety and to your property damage are highlighted in the manual by a safety alert symbol described below. These notices are graded according to the degree of danger.



Warning

Indicates risks that involve industrial network safety or production failure that could possibly result in personal injury or severe property damage if proper precautions are not taken.

**Important**

Indicates risks that could involve property or Cisco equipment damage and minor personal injury if proper precautions are not taken.

**Note**

Indicates important information on the product described in the documentation to which attention should be paid.