



# Cisco Secured Network Server Series Appliances and Virtual Machine Requirements

- [Hardware and Virtual Appliance Requirements for Cisco ISE, on page 1](#)
- [Cisco ISE on VMware Cloud Solutions, on page 14](#)
- [Virtual Machine Appliance Size Recommendations for Cisco ISE, on page 15](#)
- [Disk Space Requirements for VMs in a Cisco ISE Deployment, on page 16](#)
- [Disk Space Guidelines for Cisco ISE, on page 17](#)

## Hardware and Virtual Appliance Requirements for Cisco ISE

Cisco Identity Services Engine (Cisco ISE) can be installed on Cisco Secure Network Server (SNS) hardware or virtual appliances. To achieve performance and scalability comparable to the Cisco ISE hardware appliance, the virtual machine should be allocated system resources equivalent to the Cisco SNS hardware appliances. This section lists the hardware, software, and virtual machine requirements required to install Cisco ISE.



**Note** Harden your virtual environment and ensure that all the security updates are up-to-date. Cisco is not liable for any security issues found in hypervisors.



**Note** Cisco ISE does not support VM snapshots for backing up ISE data on any of the virtual environments (VMware, Linux KVM, Microsoft Hyper-V, and Nutanix AHV) because a VM snapshot saves the status of a VM at a given point in time. In a multi-node Cisco ISE deployment, data in all the nodes are continuously synchronized with current database information. Restoring a snapshot might cause database replication and synchronization issues. We recommend that you use the backup functionality included in Cisco ISE for archival and restoration of data. Using snapshots to back up ISE data results in stopping Cisco ISE services. A reboot is required to bring up the ISE node.



**Caution** If the Snapshot feature is enabled on the VM, it might corrupt the VM configuration. If this issue occurs, you might have to reimage the VM and disable VM snapshot.

## Cisco Secured Network Server Hardware Appliances

For Cisco Secured Network Server (SNS) hardware appliance specifications, see "Table 1, Product Specifications" in the [Cisco Secure Network Server Data Sheet](#).

For Cisco SNS 3600 series appliances, see [Cisco SNS-3600 Series Appliance Hardware Installation Guide](#).

For Cisco SNS 3700 series appliances, see [Cisco SNS-3700 Series Appliance Hardware Installation Guide](#).

For information about the supported hardware platforms for Cisco ISE 3.3, see [Supported Hardware](#).

### Support for Cisco Secure Network Server 3700 Series Appliance

The Cisco Secure Network Server (SNS) 3700 series appliances are based on the Cisco Unified Computing System (Cisco UCS) C220 Rack Server and are specifically configured to support Cisco ISE. Cisco SNS 3700 series appliances are designed to deliver high performance and efficiency for a wide range of workloads.

The Cisco SNS 3700 series appliances are available in the following models:

- Cisco SNS 3715 (SNS-3715-K9)
- Cisco SNS 3755 (SNS-3755-K9)
- Cisco SNS 3795 (SNS-3795-K9)

The Cisco SNS 3715 appliance is designed for small deployments. Cisco SNS 3755 and Cisco SNS 3795 appliances have several redundant components such as hard disks and power supplies and are suitable for larger deployments that require highly reliable system configurations. Cisco SNS 3795 is recommended for PAN and MnT personas.

Cisco ISE Release 3.1 Patch 6 and above and Cisco ISE Release 3.2 Patch 2 and above versions support Cisco SNS 3700 series appliances.

The following table describes the hardware specifications of Cisco SNS 3700 series appliances.

**Table 1: Cisco SNS 3700 Series Appliance Hardware Specifications**

Cisco SNS 3700 Series Appliance	Hardware Specifications
Cisco SNS-3715-K9	<ul style="list-style-type: none"> <li>• Cisco UCS C220 M6</li> <li>• Intel Xeon Silver 4310 CPU 2.10 GHz</li> <li>• 12 CPU Cores, 24 Threads</li> <li>• 32 GB RAM</li> <li>• 1 x 600-GB HDD or 1 x 800-GB SSD</li> <li>• RAID-0</li> <li>• 2 x 10Gbase-T</li> <li>• 4 x 10GE SFP</li> </ul>

Cisco SNS 3700 Series Appliance	Hardware Specifications
Cisco SNS-3755-K9	<ul style="list-style-type: none"> <li>• Cisco UCS C220 M6</li> <li>• Intel Xeon Silver 4316 CPU 2.30 GHz</li> <li>• 20 CPU Cores, 40 Threads</li> <li>• 96 GB RAM</li> <li>• 4 x 600-GB HDD or 4 x 800-GB SSD</li> <li>• RAID 10</li> <li>• 2 x 10Gbase-T</li> <li>4 x 10GE SFP</li> </ul>
Cisco SNS-3795-K9	<ul style="list-style-type: none"> <li>• Cisco UCS C220 M6</li> <li>• Intel Xeon Silver 4316 CPU 2.30 GHz</li> <li>• 20 CPU Cores, 40 Threads</li> <li>• 256 GB RAM</li> <li>• 8 x 600-GB HDD or 8 x 800-GB SSD</li> <li>• RAID 10</li> <li>• 2 x 10Gbase-T</li> <li>4 x 10GE SFP</li> </ul>

**Note**

- You cannot add additional hardware resources like memory, processor, or hard disk to a Cisco SNS 3700 series appliance.
- Mixing SAS/SATA hard drives and SAS/SATA SSDs is not supported. You must use either SAS/SATA hard drives or SAS/SATA SSDs.
- SSD offers improved performance in disk read/write operations and other Cisco ISE operations like boot, installation, upgrade, and database-intensive tasks like backup, reports generation, and so on.
- SFPs must be ordered separately. For component part numbers, see [Cisco UCS C-Series Rack Server Data Sheet](#).

For more information, see the [Cisco SNS-3700 Series Appliance Hardware Installation Guide](#).

## Trusted Platform Module

Cisco SNS 3700 series appliances have pre-built Trusted Platform Module (TPM) adapter that can securely store artifacts used to authenticate the server. These artifacts can include passwords, certificates, or encryption keys. TPM is also used for random number generation for improved security.

You can configure Virtual Trusted Platform Module (vTPM) on VMware ESXi server (ESXi 7.0 update 3 or later). To do this:

1. Install vCenter version 7 update 3 or later.  
While installing vCenter, you must configure the FQDN properly. The DNS server must be able to resolve the FQDN.
2. Configure Native Key Provider:
  - a. In the vCenter GUI, choose **vCenter IP > Configure > Security > Key Provider > Add Key Provider**.
  - b. Click **Native Key Provider** and enter a name for the key provider.
  - c. Click **Take Backup**.  
Ensure that the key provider status is displayed as **Active**.
3. Create a cluster on vCenter and add the ESXi host to the cluster.
4. Create a new VM in the cluster.
5. In the **Customize Hardware** window, choose **Add New Device > Trusted Platform Module**.  
You must disable the **Secure Boot** option. Ensure that the **Encryption** option is set as **Required**.
6. Map the Cisco ISE ISO to the new VM and complete the installation.

## VMware Virtual Machine Requirements for Cisco ISE

You can use the VMware migration feature to migrate virtual machine (VM) instances (running any persona) between hosts. Cisco ISE supports both hot and cold migration.

- Hot migration is also called live migration or vMotion. Cisco ISE need not be shutdown or powered off during the hot migration. You can migrate the Cisco ISE VM without any interruption in its availability.
- Cisco ISE must be shutdown and powered off for cold migration. Cisco ISE does not allow to stop or pause the database operations during cold migration. Hence, ensure that Cisco ISE is not running and active during the cold migration.




---

**Note** You must use the application stop command before using the halt command or powering off the VM to prevent database corruption issues.

---

The 300 GB OVA templates are sufficient for Cisco ISE nodes that serve as dedicated Policy Service or pxGrid nodes.

The 600 GB and 1.2 TB OVA templates are recommended to meet the minimum requirements for ISE nodes that run the Administration or Monitoring persona.

If you need to customize the disk size, CPU, or memory allocation, you can manually deploy Cisco ISE using the standard .iso image. However, it is important that you ensure the minimum requirements and resource reservations specified in this document are met. The OVA templates simplify ISE virtual appliance deployment by automatically applying the minimum resources required for each platform.

Table 2: OVA Template Reservations

OVA Template Type	Number of CPUs	CPU Reservation (In GHz)	Memory (In GB)	Memory Reservation (In GB)
Evaluation	4	No reservation.	16	No reservation.
Extra Small	8	8	32	32
Small (SNS 3615)	16	16	32	32
Medium (SNS 3655)	24	24	96	96
Large (SNS 3695)	24	24	256	256
Small (SNS 3715)	24	24	32	32
Medium (SNS 3755)	40	40	96	96
Large (SNS 3795)	40	40	256	256



- Note**
- You can enable only the PSN persona on Extra Small VM. PAN and MnT personas are not supported for this node.
  - Extra Small VM is supported only for deployments that have less than or up to 500,000 sessions.

We strongly recommend that you reserve CPU and memory resources to match the resource allocation. Failure to do so may significantly impact ISE performance and stability.

For information about the supported operating systems, see [Supported Operating System for Virtual Machines](#).

For information about the product specifications for Cisco SNS appliance, see [Cisco Secure Network Server Data Sheet](#).

The following table lists the VMware virtual machine requirements.

Table 3: VMware Virtual Machine Requirements

Requirement Type	Specifications
CPU	<ul style="list-style-type: none"> <li>• <b>Evaluation</b> <ul style="list-style-type: none"> <li>• Clock speed: 2.0 GHz or faster</li> <li>• Number of CPU cores: 4 CPU cores</li> </ul> </li> <li>• <b>Production</b> <ul style="list-style-type: none"> <li>• Clock speed: 2.0 GHz or faster</li> <li>• Number of cores:               <ul style="list-style-type: none"> <li>• <b>SNS 3600 Series Appliance:</b> <ul style="list-style-type: none"> <li>• Extra Small: 8</li> <li>• Small: 16</li> <li>• Medium: 24</li> <li>• Large: 24</li> </ul> </li> <li><b>Note</b> The number of cores is twice of that present in equivalent of the Cisco Secure Network Server 3600 series, due to hyperthreading. For example, in case of Small network deployment, you must allocate 16 vCPU cores to meet the CPU specification of SNS 3615, which has 8 CPU Cores or 16 Threads.</li> </ul> </li> <li>• <b>SNS 3700 Series Appliance:</b> <ul style="list-style-type: none"> <li>• Small: 24</li> <li>• Medium: 40</li> <li>• Large: 40</li> </ul> </li> <li><b>Note</b> The number of cores is twice of that present in equivalent of the Cisco Secure Network Server 3700 series, due to hyperthreading. For example, in case of Small network deployment, you must allocate 24 vCPU cores to meet the CPU specification of SNS 3715, which has 12 CPU Cores or 24 Threads.</li> </ul> </li> </ul>

Requirement Type	Specifications
Memory	<ul style="list-style-type: none"> <li>• <b>Evaluation:</b> 16 GB</li> <li>• <b>Production</b> <ul style="list-style-type: none"> <li>• Extra Small: 32 GB</li> <li>• Small: 32 GB for SNS 3615 and SNS 3715</li> <li>• Medium: 96 GB for SNS 3655 and SNS 3755</li> <li>• Large: 256 GB for SNS 3695 and SNS 3795</li> </ul> </li> </ul>
Hard Disks	<ul style="list-style-type: none"> <li>• <b>Evaluation:</b> 300 GB</li> <li>• <b>Production</b> <p>300 GB to 2.4 TB of disk storage (size depends on deployment and tasks).</p> <p>See the recommended disk space for VMs in the following link: <a href="#">Disk Space Requirements</a>.</p> <p>We recommend that your VM host server use hard disks with a minimum speed of 10,000 RPM.</p> <p><b>Note</b> When you create the Virtual Machine for Cisco ISE, use a single virtual disk that meets the storage requirement. If you use more than one <b>virtual</b> disk to meet the disk space requirement, the installer may not recognize all the disk space.</p> </li> </ul>
Storage and File System	<p>The storage system for the Cisco ISE virtual appliance requires a minimum write performance of 50 MB per second and a read performance of 300 MB per second. Deploy a storage system that meets these performance criteria and is supported by VMware server.</p> <p>You can use the <b>show tech-support</b> command to view the read and write performance metrics.</p> <p>We recommend the VMFS file system because it is most extensively tested, but other file systems, transports, and media can also be deployed provided they meet the above requirements.</p>
Disk Controller	<p>Paravirtual or LSI Logic Parallel</p> <p>For best performance and redundancy, a caching RAID controller is recommended. Controller options such as RAID 10 (also known as 1+0) can offer higher overall write performance and redundancy than RAID 5, for example. Additionally, battery-backed controller cache can significantly improve write operations.</p> <p><b>Note</b> Updating the disk SCSI controller of an ISE VM from another type to VMware Paravirtual may render it not bootable.</p>

Requirement Type	Specifications
NIC	<p>1 NIC interface required (two or more NICs are recommended; six NICs are supported). Cisco ISE supports E1000E and VMXNET3 adapters.</p> <p><b>Note</b> You have to remap the ESXi adapter to synchronize it with the ISE adapter order.</p>
VMware Virtual Hardware Version/Hypervisor	<ul style="list-style-type: none"><li>• OVA templates: VMware version 14 or higher on ESXi 6.7, ESXi 7.0, and ESXi 8.0.</li><li>• ISO file supports ESXi 6.7, ESXi 7.0, and ESXi 8.0.</li></ul>



# Linux KVM Requirements for Cisco ISE

Table 4: Linux KVM Virtual Machine Requirements

Requirement Type	Minimum Requirements
CPU	<ul style="list-style-type: none"> <li>• <b>Evaluation</b> <ul style="list-style-type: none"> <li>• Clock Speed: 2.0 GHz or faster</li> <li>• Number of Cores: 4 CPU cores</li> </ul> </li> <li>• <b>Production</b> <ul style="list-style-type: none"> <li>• Clock Speed: 2.0 GHz or faster</li> <li>• <b>Number of Cores:</b> <ul style="list-style-type: none"> <li>• <b>SNS 3600 Series Appliance:</b> <ul style="list-style-type: none"> <li>• Extra Small: 8</li> <li>• Small: 16</li> <li>• Medium: 24</li> <li>• Large: 24</li> </ul> </li> <li>• <b>Note</b> The number of cores is twice of that present in equivalent of the Cisco Secure Network Server 3600 series, due to hyperthreading. For example, in case of Small network deployment, you must allocate 16 vCPU cores to meet the CPU specification of SNS 3615, which has 8 CPU Cores or 16 Threads.</li> </ul> </li> <li>• <b>SNS 3700 Series Appliance:</b> <ul style="list-style-type: none"> <li>• Small: 24</li> <li>• Medium: 40</li> <li>• Large: 40</li> </ul> </li> <li>• <b>Note</b> The number of cores is twice of that present in equivalent of the Cisco Secure Network Server 3700 series, due to hyperthreading. For example, in case of Small network deployment, you must allocate 24 vCPU cores to meet the CPU specification of SNS 3715, which has 12 CPU Cores or 24 Threads.</li> </ul> </li> </ul>

Requirement Type	Minimum Requirements
Memory	<ul style="list-style-type: none"> <li>• <b>Evaluation:</b> 16 GB</li> <li>• <b>Production</b> <ul style="list-style-type: none"> <li>• Extra Small: 32 GB</li> <li>• Small: 32 GB for SNS 3615 and SNS 3715</li> <li>• Medium: 96 GB for SNS 3655 and SNS 3755</li> <li>• Large: 256 GB for SNS 3695 and SNS 3795</li> </ul> </li> </ul>
Hard disks	<ul style="list-style-type: none"> <li>• <b>Evaluation:</b> 300 GB</li> <li>• <b>Production</b> <p>300 GB to 2.4 TB of disk storage (size depends on deployment and tasks).</p> <p>See the recommended disk space for VMs in the following link: <a href="#">Disk Space Requirements</a>.</p> <p>We recommend that your VM host server use hard disks with a minimum speed of 10,000 RPM.</p> <p><b>Note</b> When you create the Virtual Machine for Cisco ISE, use a single virtual disk that meets the storage requirement. If you use more than one <b>virtual</b> disk to meet the disk space requirement, the installer may not recognize all the disk space.</p> </li> </ul>
KVM Disk Device	<p>Disk bus - virtio, cache mode - none, I/O mode - native</p> <p>Use preallocated RAW storage format.</p>
NIC	<p>1 NIC interface required (two or more NICs are recommended; six NICs are supported). Cisco ISE supports VirtIO drivers. We recommend VirtIO drivers for better performance.</p>
Hypervisor	<p>KVM on QEMU 2.12.0-99 or above</p>

## Microsoft Hyper-V Requirements for Cisco ISE

Table 5: Microsoft Hyper-V Virtual Machine Requirements

Requirement Type	Minimum Requirements
CPU	<ul style="list-style-type: none"> <li>• <b>Evaluation</b> <ul style="list-style-type: none"> <li>• Clock speed: 2.0 GHz or faster</li> <li>• Number of cores: 4 CPU cores</li> </ul> </li> <li>• <b>Production</b> <ul style="list-style-type: none"> <li>• Clock speed: 2.0 GHz or faster</li> <li>• <b>Number of Cores:</b> <ul style="list-style-type: none"> <li>• <b>SNS 3600 Series Appliance:</b> <ul style="list-style-type: none"> <li>• Extra Small: 8</li> <li>• Small: 16</li> <li>• Medium: 24</li> <li>• Large: 24</li> </ul> </li> <li>• <b>Note</b> The number of cores is twice of that present in equivalent of the Cisco Secure Network Server 3600 series, due to hyperthreading. For example, in case of Small network deployment, you must allocate 16 vCPU cores to meet the CPU specification of SNS 3615, which has 8 CPU Cores or 16 Threads.</li> </ul> </li> <li>• <b>SNS 3700 Series Appliance:</b> <ul style="list-style-type: none"> <li>• Small: 24</li> <li>• Medium: 40</li> <li>• Large: 40</li> </ul> </li> <li>• <b>Note</b> The number of cores is twice of that present in equivalent of the Cisco Secure Network Server 3700 series, due to hyperthreading. For example, in case of Small network deployment, you must allocate 24 vCPU cores to meet the CPU specification of SNS 3715, which has 12 CPU Cores or 24 Threads.</li> </ul> </li> </ul>

Requirement Type	Minimum Requirements
Memory	<ul style="list-style-type: none"> <li>• <b>Evaluation:</b> 16 GB</li> <li>• <b>Production</b> <ul style="list-style-type: none"> <li>• Extra Small: 32 GB</li> <li>• Small: 32 GB for SNS 3615 and SNS 3715</li> <li>• Medium: 96 GB for SNS 3655 and SNS 3755</li> <li>• Large: 256 GB for SNS 3695 and SNS 3795</li> </ul> </li> </ul>
Hard disks	<ul style="list-style-type: none"> <li>• <b>Evaluation:</b> 300 GB</li> <li>• <b>Production</b> <ul style="list-style-type: none"> <li>300 GB to 2.4 TB of disk storage (size depends on deployment and tasks).</li> <li>See the recommended disk space for VMs in the following link: <a href="#">Disk Space Requirements</a>.</li> <li>We recommend that your VM host server use hard disks with a minimum speed of 10,000 RPM.</li> </ul> </li> </ul> <p><b>Note</b> When you create the Virtual Machine for Cisco ISE, use a single virtual disk that meets the storage requirement. If you use more than one <b>virtual</b> disk to meet the disk space requirement, the installer may not recognize all the disk space.</p>
NIC	1 NIC interface required (two or more NICs are recommended; six NICs are supported).
Hypervisor	Hyper-V (Microsoft)

## Nutanix AHV Requirements for Cisco ISE

Cisco ISE must be deployed on Nutanix AHV using the standard Cisco ISE .iso image. Deploying Cisco ISE using OVA templates is not supported on Nutanix AHV.

The following table specifies the recommended resource reservations for different types of deployment on Nutanix AHV:

Type	Number of CPUs	CPU Reservation (In GHz)	Memory (In GB)	Memory Reservation (In GB)	Hard Disks
Evaluation	4	No reservation	16	No reservation	300 GB
Extra Small	8	8	32	32	300 GB
Small	16	16	32	32	600 GB
Medium	24	24	96	96	1.2 TB
Large	24	24	256	256	2.4 TB (4*600 GB)

You must do the following configuration on Nutanix AHV before proceeding with Cisco ISE installation:

- Create a virtual machine (VM) on Nutanix AHV and keep the VM powered off.
- Access the Nutanix CVM using ssh login and run the following commands:
  - \$acl
  - <acropolis> vm.serial\_port\_create <Cisco ISE VM Name> type=kServer index=0
  - <acropolis> vm.update <Cisco ISE VM Name> disable\_branding=true
  - <acropolis> vm.update <Cisco ISE VM Name> extra\_flags="enable\_hyperv\_clock=False"
- Exit Acropolis CLI and power on the VM to proceed with Cisco ISE installation using the standard .iso image.

**Table 6: Nutanix AHV Requirements**

Requirement Type	Minimum Requirements
CPU	<ul style="list-style-type: none"> <li>• <b>Evaluation:</b> <ul style="list-style-type: none"> <li>• Clock Speed: 2.0 GHz or faster</li> <li>• Number of Cores: 2 CPU cores</li> </ul> </li> <li>• <b>Production:</b> <ul style="list-style-type: none"> <li>• Clock Speed: 2.0 GHz or faster</li> <li>• <b>Number of Cores</b> <ul style="list-style-type: none"> <li>• Extra Small—8 processors (4 cores with hyperthreading enabled)</li> <li>• Small—12 processors (6 cores with hyperthreading enabled)</li> <li>• Large—16 processors (8 cores with hyperthreading enabled)</li> </ul> </li> </ul> </li> </ul> <p>Cisco ISE supports Hyperthreading. We recommend that you enable Hyperthreading, if it is available.</p> <p><b>Note</b> Even though Hyperthreading might improve overall performance, it does not change the supported scaling limits per virtual machine appliance. Additionally, you must still allocate CPU resources based on the required number of physical cores, not the number of logical processors.</p>

Requirement Type	Minimum Requirements
Memory	<ul style="list-style-type: none"> <li>• <b>Evaluation:</b> <ul style="list-style-type: none"> <li>• Basic—4 GB (for evaluating guest access and basic access policy flows)</li> <li>• Advanced—16 GB (for evaluating advanced features such as pxGrid, Internal CA, SXP, Device Administration, and Passive Identity Services)</li> </ul> </li> <li>• <b>Production:</b> <ul style="list-style-type: none"> <li>• Small—16 GB</li> <li>• Large—64 GB</li> </ul> </li> </ul>
Hard disks	<ul style="list-style-type: none"> <li>• <b>Evaluation:</b> 200 GB</li> <li>• <b>Production:</b> <p>200 GB to 2 TB of disk storage (size depends on deployment and tasks).</p> <p>We recommend that your VM host server use hard disks with a minimum speed of 10,000 RPM.</p> <p><b>Note</b> You must use 4*600 GB for 2.4 TB hard disk support.</p> </li> </ul>
KVM Disk Device	Disk bus - SCSI
NIC	1 GB NIC interface required (two or more NICs are recommended; six NICs are supported). Cisco ISE supports VirtIO drivers. We recommend VirtIO drivers for better performance.
Hypervisor	AOS - 6.8, Nutanix AHV - 20230302.100169

## Cisco ISE on VMware Cloud Solutions

On any public cloud platform, you must configure your VPN to enable reachability from the VMware engine to on-premises deployments, and other required devices and services. You can deploy Cisco ISE on VMware cloud solutions on the following public cloud platforms:

- **VMware Cloud on Amazon Web Services (AWS):** Host Cisco ISE on a software-defined data center offered by VMware Cloud on AWS. Configure the appropriate security group policies on VMware Cloud (in the **Networking and Security > Security > Gateway Firewall Settings** window) to enable reachability to on-premises deployments, and other required devices and services.
- **Azure VMware Solution:** Azure VMware Solution runs VMware workloads natively on Microsoft Azure. You can host Cisco ISE as a VMware virtual machine.
- **Google Cloud VMware Engine:** The Google Cloud VMware Engine runs software-defined data centers by VMware. You can host Cisco ISE as a VMware virtual machine using the VMware Engine.

For more information on deploying Cisco ISE on cloud platforms, see [Deploy Cisco Identity Services Engine Natively on Cloud Platforms](#).

# Virtual Machine Appliance Size Recommendations for Cisco ISE

The virtual machine (VM) appliance specifications should be comparable with physical appliances run in a production environment.

Keep the following guidelines in mind when allocating resources for the appliance:

- Failure to allocate the specified resources might result in performance degradation or service failure. We highly recommend that you deploy dedicated VM resources and not share or oversubscribe resources across multiple guest VMs. Deploying Cisco ISE virtual appliances using the OVF templates ensures that adequate resources are assigned to each VM. If you do not use OVF templates, then ensure that you assign the equivalent resource reservations when you manually install Cisco ISE using the ISO image.



---

**Note** If you choose to deploy Cisco ISE manually without the recommended reservations, you must assume the responsibility to closely monitor your appliance's resource utilization and increase resources, as needed, to ensure proper health and functioning of the Cisco ISE deployment.

---

- If you are using the OVA templates for installation, check the following settings after the installation is complete:
  - Ensure that you assign the resource reservations that are specified in the [VMware Virtual Machine Requirements for Cisco ISE, on page 4](#) section in the CPU/Memory **Reservation** field (under the **Virtual Hardware** tab in the **Edit Settings** window) to ensure proper health and functioning of the Cisco ISE deployment.
  - Ensure that the CPU usage in the **CPU Limit** field (under the **Virtual Hardware** tab in the **Edit Settings** window) is set to **Unlimited**. Setting a limit for CPU usage (for example, setting the CPU usage limit as 12000 MHz) will impact the system performance. If limit has been set, you must shutdown the VM client, remove the limit, and the restart the VM client.
  - Ensure that the memory usage in the **Memory Limit** field (under the **Virtual Hardware** tab in the **Edit Settings** window) is set to **Unlimited**. Setting a limit for memory usage (for example, setting the limit as 12000 MB) will impact the system performance.
  - Ensure that the **Shares** option is set as **High** in the **Hard Disk** area (under the **Virtual Hardware** tab in the **Edit Settings** window).

Admin and MnT nodes rely heavily on disk usage. Using shared disk storage VMware environment might affect the disk performance. You must increase the number of disk shares allocated to a node to increase the performance of the node.

- Policy Service nodes on VMs can be deployed with less disk space than Administration or Monitoring nodes. The minimum disk space for any production Cisco ISE node is 300 GB.
- VMs can be configured with 1 to 6 NICs. The recommendation is to allow for 2 or more NICs. Additional interfaces can be used to support various services such as profiling, guest services, or RADIUS.



**Note** If you decrease the RAM or CPU allocation for a VM, you must reimage Cisco ISE with the changed VM configuration. However, increasing the RAM or CPU capacity does not require re-image.

## Disk Space Requirements for VMs in a Cisco ISE Deployment

The following table lists the Cisco ISE disk-space allocation recommended for running a virtual machine in a production deployment.



**Note** You must change the firmware from **BIOS** to **EFI** in the boot mode of VM settings to boot GPT partition with 2 TB or above.

*Table 7: Recommended Disk Space for Virtual Machines*

Cisco ISE Persona	Minimum Disk Space for Evaluation	Minimum Disk Space for Production	Recommended Disk Space for Production	Maximum Disk Space
Standalone Cisco ISE	300 GB	600 GB	600 GB to 2.4 TB	2.4 TB
Distributed Cisco ISE, Administration only	300 GB	600 GB	600 GB	2.4 TB
Distributed Cisco ISE, Monitoring only	300 GB	600 GB	600 GB to 2.4 TB	2.4 TB
Distributed Cisco ISE, Policy Service only	300 GB	300 GB	300 GB	2.4 TB
Distributed Cisco ISE, pxGrid only	300 GB	300 GB	300 GB	2.4 TB
Distributed Cisco ISE, Administration and Monitoring (and optionally, pxGrid)	300 GB	600 GB	600 GB to 2.4 TB	2.4 TB
Distributed Cisco ISE, Administration, Monitoring, and Policy Service (and optionally, pxGrid)	300 GB	600 GB	600 GB to 2.4 TB	2.4 TB



**Note** Additional disk space is required to store local debug logs, staging files, and to handle log data during upgrade, when the Primary Administration node temporarily becomes a Monitoring node.



# Disk Space Guidelines for Cisco ISE

Keep the following guidelines in mind when deciding the disk space for Cisco ISE:

- Cisco ISE must be installed on a single disk in virtual machine.
- Disk allocation varies based on logging retention requirements. On any node that has the Monitoring persona enabled, 60 percent of the VM disk space is allocated for log storage. A deployment with 25,000 endpoints generates approximately 1 GB of logs per day.

For example, if you have a Monitoring node with 600-GB VM disk space, 360 GB is allocated for log storage. If 100,000 endpoints connect to this network every day, it generates approximately 4 GB of logs per day. In this case, you can store 76 days of logs in the Monitoring node, after which you must transfer the old data to a repository and purge it from the Monitoring database.

For extra log storage, you can increase the VM disk space. For every 100 GB of disk space that you add, you get 60 GB more for log storage.

If you increase the disk size of your virtual machine after initial installation, perform a fresh installation of Cisco ISE. A fresh installation helps properly detect and utilize the full disk allocation.

The following table lists the number of days that RADIUS logs can be retained on your Monitoring node based on the allocated disk space and the number of endpoints that connect to your network. The numbers are based on the following assumptions: Ten or more authentications per day per endpoint with logging suppression enabled.

**Table 8: Monitoring Node Log Storage—Retention Period in Days for RADIUS**

No. of Endpoints	300 GB	600 GB	1024 GB	2048 GB
5,000	504	1510	2577	5154
10,000	252	755	1289	2577
25,000	101	302	516	1031
50,000	51	151	258	516
100,000	26	76	129	258
150,000	17	51	86	172
200,000	13	38	65	129
250,000	11	31	52	104
500,000	6	16	26	52

The following table lists the number of days that TACACS+ logs can be retained on your Monitoring node based on the allocated disk space and the number of endpoints that connect to your network. The numbers are based on the following assumptions: The script runs against all NADs, 4 sessions per day, and 5 commands per session.

**Table 9: Monitoring Node Log Storage—Retention Period in Days for TACACS+**

<b>No. of Endpoints</b>	<b>300 GB</b>	<b>600 GB</b>	<b>1024 GB</b>	<b>2048 GB</b>
100	12,583	37,749	64,425	128,850
500	2,517	7,550	12,885	25,770
1,000	1,259	3,775	6,443	12,885
5,000	252	755	1,289	2,577
10,000	126	378	645	1,289
25,000	51	151	258	516
50,000	26	76	129	258
75,000	17	51	86	172
100,000	13	38	65	129

**Increase Disk Size**

If you find that context and visibility functions are slow, or storage space for logs is not sufficient, you must allocate more disk space.

To plan for more log storage, for every 100 GB of disk space that you add, 60 GB is available for log storage.

In order for ISE to detect and utilize the new disk allocation, you must deregister the node, update the VM settings, and reinstall Cisco ISE. One way to do this is to install Cisco ISE on a new larger node, and add that node to the deployment as high availability. After the nodes are synchronized, configure the new VM as the primary node and deregister the original VM.

**Decrease Disk Size**

After installing Cisco ISE, if you reduce the VM reservations, you must do the following:

1. Perform backup of Cisco ISE.
2. Reimage Cisco ISE with the changed VM configuration.
3. Restore Cisco ISE.