



INDEX

C

- changing VSM serial number [2-17](#)
- claim certificate, definition [3-2](#)
- commands
 - clear license [2-12](#)
 - copy to bootflash [2-4, 2-19](#)
 - install license bootflash [2-5](#)
 - show license [2-15](#)
 - show license brief [2-11, 2-15](#)
 - show license file [2-5, 2-15](#)
 - show license usage [2-5, 2-7, 2-8, 2-11, 2-15](#)
 - show license vem module license-info [2-9](#)
 - svs license transfer license_pool dst-vem module [2-9](#)
 - svs license transfer src-vem [2-7](#)
 - svs license transfer src-vem license_pool [2-8, 2-11](#)
 - svs license volatile [2-14](#)

D

- default licenses, about [1-3](#)
- documentation
 - additional publications [i-ix](#)
 - related documents [i-viii](#)

E

- evaluation license, definition [3-1](#)
- evaluation licenses, about [1-3](#)

F

- features, new and changed (table) [i-iii, i-iv](#)

- flow chart
 - obtaining and installing a license [2-3](#)

H

- high availability [1-2](#)
- host ID
 - definition [3-1](#)
 - obtaining [2-3, 2-18](#)
- host ID, changing in license [2-17](#)

I

- incremental license, definition [3-1](#)
- install license bootflash command [2-5](#)

K

- key, product authorization [2-3, 2-18](#)

L

- license
 - terminology [3-1](#)
- license key
 - definition [3-1](#)
 - installing [2-4](#)
 - obtaining [2-3, 2-18](#)
- license types
 - default [1-3](#)
 - evaluation [1-3](#)
 - overdraft [1-4](#)
 - permanent [1-2](#)

Send document comments to nexus1k-docfeedback@cisco.com.

O

overdraft licenses, about [1-4](#)

P

PAK

definition [3-2](#)

obtaining [2-3, 2-18](#)

permanent licenses, about [1-2](#)

R

rehosting

definition [3-2](#)

process [2-17](#)

related documents [i-ix, i-x](#)

S

serial number, changing in license [2-17](#)

show license brief command [2-15](#)

show license command [2-15](#)

show license file command [2-15](#)

show license usage command [2-15](#)

software download website, link to [2-4](#)

software license claim certificate

definition [3-2](#)

using to locate PAK [2-3, 2-18](#)

stacking

definition [3-2](#)

procedure [2-4](#)

svs license transfer license_pool dst-vem module
command [2-9](#)

svs license transfer src-vem command [2-7](#)

svs license transfer src-vem license_pool command [2-8](#)

svs license volatile command [2-14](#)

T

transferring a license

between VEMs [2-6](#)

to the license pool [2-8](#)

types of licenses

default [1-3](#)

evaluation [1-3](#)

overdraft [1-4](#)

permanent [1-2](#)

U

uninstalling a license [2-10](#)

V

VEM licenses, displaying [2-15](#)

verifying licenses [2-15](#)

volatile license

configuring [2-13](#)

definition [3-2](#)

disabling [2-14](#)

enabling [2-13](#)