



S Commands

- [sampler](#), on page 11
- [sap hash-algorithm HMAC-SHA-1](#), on page 12
- [sap modelist](#), on page 13
- [sap pmk](#), on page 14
- [save](#), on page 15
- [scale-factor](#), on page 16
- [scheduler aaa-authentication](#), on page 17
- [scheduler enable](#), on page 18
- [scheduler job name](#), on page 19
- [scheduler logfile size](#), on page 20
- [scheduler schedule name](#), on page 21
- [scheduler transport email](#), on page 22
- [scp](#), on page 23
- [scp](#), on page 24
- [scripting tcl init](#), on page 25
- [scripting tcl recursion-limit](#), on page 26
- [search](#), on page 27
- [section](#), on page 28
- [secure-handoff](#), on page 29
- [sed](#), on page 30
- [send-community](#), on page 31
- [send-community](#), on page 32
- [send-lifetime](#), on page 33
- [send](#), on page 35
- [send session](#), on page 36
- [server](#), on page 37
- [server](#), on page 38
- [server](#), on page 39
- [server protocol ldap](#), on page 40
- [server protocol radius group](#), on page 41
- [server protocol xmpp](#), on page 42
- [service-policy](#), on page 43
- [service-policy](#), on page 44

- [service-policy](#), on page 45
- [service-policy input](#), on page 46
- [service-policy type network-qos](#), on page 47
- [service-policy type psp](#), on page 48
- [service-policy type qos](#), on page 49
- [service-policy type queuing](#), on page 50
- [service-policy type queuing](#), on page 51
- [service-policy type queuing](#), on page 52
- [service dhcp](#), on page 53
- [service set](#), on page 54
- [service unsupported-transceiver](#), on page 55
- [service vlan-group](#), on page 56
- [session-limit](#), on page 57
- [session domain-lookup](#), on page 58
- [session key-required](#), on page 59
- [session max](#), on page 60
- [session max](#), on page 61
- [session protection](#), on page 62
- [set-attached-bit](#), on page 63
- [set-overload-bit](#), on page 64
- [set](#), on page 65
- [set \(elamns/sel5\)](#), on page 66
- [set \(elamns/sel5\)](#), on page 68
- [set \(elamns/sel6\)](#), on page 70
- [set \(sel7\)](#), on page 72
- [set \(policy-map/class\)](#), on page 73
- [set \(plc/class\)](#), on page 74
- [set \(pmap/class\)](#), on page 77
- [set \(class\)](#), on page 78
- [set](#), on page 79
- [set as-path](#), on page 81
- [set comm-list](#), on page 82
- [set community](#), on page 83
- [set cos](#), on page 84
- [set cos](#), on page 85
- [set dampening](#), on page 86
- [set distance](#), on page 87
- [set extcomm-list](#), on page 88
- [set extcommunity](#), on page 89
- [set extcommunity 4byteas-generic](#), on page 90
- [set extcommunity cost](#), on page 91
- [set extcommunity rt](#), on page 92
- [set extension-key](#), on page 93
- [set forwarding-address](#), on page 94
- [set inner ipv4](#), on page 95
- [set inner l2](#), on page 97

- set inner l2 hg2, on page 99
- set inner l4, on page 101
- set interface, on page 102
- set interval find-new-host, on page 103
- set interval pending-task-polling, on page 104
- set interval sync-full-info, on page 105
- set ip address prefix-list, on page 106
- set ip default next-hop verify-availability, on page 107
- set ip next-hop, on page 108
- set ip next-hop peer-address, on page 109
- set ip next-hop unchanged, on page 110
- set ip next-hop verify-availability, on page 111
- set ip precedence, on page 112
- set ipv6 address prefix-list, on page 113
- set ipv6 default next-hop verify-availability, on page 114
- set ipv6 next-hop, on page 115
- set ipv6 next-hop peer-address, on page 116
- set ipv6 next-hop unchanged, on page 117
- set ipv6 next-hop verify-availability, on page 118
- set ipv6 precedence, on page 119
- set level, on page 120
- set local-preference, on page 121
- set metric-type, on page 122
- set metric, on page 123
- set mpls-exp-topmost cos table exp-cos-map, on page 124
- set nssa-only, on page 125
- set origin, on page 126
- set origin egp, on page 127
- set outer ipv4, on page 128
- set outer l2, on page 130
- set outer l2 hg2, on page 132
- set outer l4, on page 134
- set path-selection all advertise, on page 135
- set pktmgr pds yield-threshold, on page 136
- set pktrw, on page 137
- set sideband, on page 143
- set tag, on page 146
- set weight, on page 147
- setup, on page 148
- sflow, on page 149
- sflow, on page 150
- sflow cpu-usage limit, on page 151
- sflow data-source interface, on page 152
- sflow data-source interface, on page 153
- sflow extended switch, on page 154
- shape, on page 155

- [shared-secret](#), on page 157
- [shutdown](#), on page 158
- [shutdown \(expl-path\)](#), on page 159
- [shutdown \(if-mgmt-ether\)](#), on page 160
- [shutdown](#), on page 161
- [shutdown force](#), on page 162
- [shutdown \(if-nve\)](#), on page 163
- [shutdown \(if-loopback\)](#), on page 164
- [shutdown](#), on page 165
- [shutdown](#), on page 166
- [shutdown \(router-bgp\)](#), on page 167
- [shutdown](#), on page 168
- [shutdown \(vrf\)](#), on page 169
- [shutdown \(router-bgp-neighbor-sess\)](#), on page 170
- [shutdown \(router-eigrp-af-common\)](#), on page 171
- [shutdown \(if-vlan-common\)](#), on page 172
- [shutdown \(vrf\)](#), on page 173
- [shutdown \(anycast\)](#), on page 174
- [shutdown \(router-rip-vrf\)](#), on page 175
- [shutdown \(if-any-tunnel\)](#), on page 176
- [shutdown \(ldp\)](#), on page 177
- [shutdown \(itd-inout\)](#), on page 178
- [shutdown \(vrrpv3\)](#), on page 179
- [shutdown \(vrrpv3\)](#), on page 180
- [shutdown \(vrrs\)](#), on page 181
- [shutdown \(cbts-member\)](#), on page 182
- [shutdown \(vrrp\)](#), on page 183
- [shutdown \(router-isis-vrf-common\)](#), on page 184
- [shutdown force](#), on page 185
- [signalling advertise explicit-null](#), on page 186
- [signalling client batch-time](#), on page 187
- [signalling hello graceful-restart](#), on page 188
- [signalling hello graceful-restart refresh interval](#), on page 189
- [signalling hello graceful-restart refresh misses](#), on page 190
- [signalling hello graceful-restart send recovery-time](#), on page 191
- [signalling hello graceful-restart send restart-time](#), on page 192
- [signalling hello reroute](#), on page 193
- [signalling initial-retransmit-delay](#), on page 194
- [signalling patherr state-removal](#), on page 195
- [signalling rate-limit](#), on page 196
- [signalling refresh interval](#), on page 197
- [signalling refresh misses](#), on page 198
- [signalling refresh pace](#), on page 199
- [signalling refresh reduction](#), on page 200
- [signalling refresh reduction ack-delay](#), on page 201
- [signalling refresh reduction bundle-max-size](#), on page 202

- signalling refresh reduction bundle-transmit-time, on page 203
- signalling refresh reduction rapid-retransmit, on page 204
- signing level, on page 205
- site-id, on page 206
- site-of-origin, on page 207
- sleep, on page 208
- sleep instance, on page 209
- slot, on page 210
- smtp-host, on page 211
- snapshot create, on page 212
- snapshot delete, on page 213
- snapshot delete ALL, on page 214
- snapshot section add, on page 215
- snapshot section delete, on page 216
- snmp-server aaa-user cache-timeout, on page 217
- snmp-server community, on page 218
- snmp-server community, on page 219
- snmp-server contact, on page 220
- snmp-server context, on page 221
- snmp-server context, on page 222
- snmp-server counter cache-enable, on page 223
- snmp-server counter cache enable, on page 224
- snmp-server counter cache timeout, on page 225
- snmp-server enable traps, on page 226
- snmp-server enable traps bgp, on page 227
- snmp-server enable traps bgp cbgp2, on page 228
- snmp-server enable traps bgp cbgp2 threshold prefix, on page 229
- snmp-server enable traps bgp threshold prefix, on page 230
- snmp-server enable traps eigrp, on page 231
- snmp-server enable traps msdp, on page 232
- snmp-server enable traps ospf, on page 233
- snmp-server enable traps ospf, on page 234
- snmp-server enable traps ospfv3, on page 235
- snmp-server enable traps ospfv3, on page 236
- snmp-server enable traps storm-control trap-rate, on page 237
- snmp-server force-unload-feature, on page 238
- snmp-server globalEnforcePriv, on page 239
- snmp-server host, on page 240
- snmp-server host, on page 241
- snmp-server host, on page 242
- snmp-server host, on page 243
- snmp-server host, on page 244
- snmp-server load-cond-feature, on page 245
- snmp-server load-mib, on page 246
- snmp-server location, on page 247
- snmp-server mib community-map, on page 248

- [snmp-server protocol enable](#), on page 249
- [snmp-server source-interface](#), on page 250
- [snmp-server system-shutdown](#), on page 251
- [snmp-server tcp-session](#), on page 252
- [snmp-server user](#), on page 253
- [snmp-trap](#), on page 254
- [snmp ifmib ifalias long](#), on page 255
- [snmp trap link-status](#), on page 256
- [snmp trap link-status](#), on page 257
- [snmp trap link-status](#), on page 258
- [snmp trap link-status](#), on page 259
- [snmp trap link-status](#), on page 260
- [snmp trap link-status](#), on page 261
- [sockets local-port-range](#), on page 262
- [soft-reconfiguration inbound](#), on page 263
- [soft-reconfiguration inbound](#), on page 264
- [soo](#), on page 265
- [sort](#), on page 266
- [source-group](#), on page 267
- [source-interface](#), on page 268
- [source-interface](#), on page 269
- [source-interface](#), on page 270
- [source](#), on page 271
- [source](#), on page 272
- [source](#), on page 273
- [source](#), on page 274
- [source copy-sys](#), on page 275
- [spanning-tree](#), on page 276
- [spanning-tree](#), on page 277
- [spanning-tree](#), on page 278
- [spanning-tree](#), on page 279
- [spanning-tree](#), on page 280
- [spanning-tree](#), on page 281
- [spanning-tree](#), on page 282
- [spanning-tree](#), on page 283
- [spanning-tree bpdudfilter](#), on page 284
- [spanning-tree bpduguard](#), on page 285
- [spanning-tree bridge-domain](#), on page 286
- [spanning-tree bridge assurance](#), on page 287
- [spanning-tree fcoe](#), on page 288
- [spanning-tree guard](#), on page 289
- [spanning-tree lc-issu](#), on page 290
- [spanning-tree lc-issu](#), on page 291
- [spanning-tree link-type](#), on page 292
- [spanning-tree loopguard default](#), on page 293
- [spanning-tree mode](#), on page 294

- spanning-tree mst, on page 295
- spanning-tree mst priority, on page 296
- spanning-tree mst port-priority, on page 297
- spanning-tree mst cost, on page 298
- spanning-tree mst cost auto, on page 299
- spanning-tree mst configuration, on page 300
- spanning-tree mst configuration, on page 301
- spanning-tree mst forward-time, on page 302
- spanning-tree mst hello-time, on page 303
- spanning-tree mst max-age, on page 304
- spanning-tree mst max-hops, on page 305
- spanning-tree mst pre-standard, on page 306
- spanning-tree mst simulate pvst, on page 307
- spanning-tree mst simulate pvst global, on page 308
- spanning-tree pathcost method, on page 309
- spanning-tree port type, on page 310
- spanning-tree port type edge bpdudfilter default, on page 311
- spanning-tree port type edge bpduguard default, on page 312
- spanning-tree port type edge default, on page 313
- spanning-tree port type edge trunk, on page 314
- spanning-tree port type network default, on page 315
- spanning-tree portfast, on page 316
- spanning-tree portfast bpdudfilter default, on page 317
- spanning-tree portfast bpduguard default, on page 318
- spanning-tree portfast default, on page 319
- spanning-tree pseudo-information, on page 320
- spanning-tree vlan, on page 321
- speed-group, on page 322
- speed, on page 323
- speed, on page 324
- speed, on page 325
- speed auto, on page 326
- speed auto 100, on page 327
- speed auto 100 1000, on page 328
- spf-interval, on page 329
- spf-interval, on page 330
- spf mode incremental, on page 331
- spf mode incremental, on page 332
- sprom recover backplane, on page 333
- ssh, on page 334
- ssh6, on page 335
- ssh key, on page 336
- ssh login-attempts, on page 337
- ssh server enable, on page 338
- standby, on page 339
- start, on page 340

- start, on page 341
- start, on page 342
- start, on page 343
- start, on page 344
- start, on page 345
- start, on page 346
- state enabled, on page 347
- stateful-ha, on page 348
- statistics, on page 349
- statistics, on page 350
- statistics, on page 351
- statistics per-entry, on page 352
- statistics per-entry, on page 353
- statistics per-entry, on page 354
- status, on page 355
- status, on page 356
- status, on page 357
- status, on page 358
- status, on page 359
- status, on page 360
- status, on page 361
- stopbits, on page 362
- stopbits, on page 363
- storm-control, on page 364
- streetaddress, on page 365
- stub, on page 366
- summary-address, on page 367
- summary-address, on page 368
- summary-address, on page 369
- summary-address, on page 370
- suppress-arp KEYWORD no Negate a command or set its defaults KEYWORD suppress-arp Enable ARP suppression dynamic \$hmm, on page 371
- suppress-fib-pending, on page 372
- suppress-fib-pending, on page 373
- suppress-inactive, on page 374
- suppress-inactive, on page 375
- switch-id, on page 376
- switch-priority, on page 377
- switch-scope controller l2-vxlan, on page 378
- switchback, on page 379
- switching-mode fabric-speed 40g, on page 380
- switching-mode store-forward, on page 381
- switchport, on page 382
- switchport, on page 383
- switchport autostate exclude, on page 384
- switchport block, on page 385

- [switchport dot1q ether-type](#), on page 386
- [switchport dot1q ether-type](#), on page 387
- [switchport host](#), on page 388
- [switchport isolated](#), on page 389
- [switchport mode](#), on page 390
- [switchport mode](#), on page 391
- [switchport mode fabricpath](#), on page 392
- [switchport mode private-vlan](#), on page 393
- [switchport mode private-vlan trunk](#), on page 394
- [switchport port-security](#), on page 395
- [switchport port-security aging time](#), on page 396
- [switchport port-security aging type](#), on page 397
- [switchport port-security mac-address](#), on page 398
- [switchport port-security mac-address sticky](#), on page 399
- [switchport port-security maximum](#), on page 400
- [switchport port-security violation](#), on page 401
- [switchport private-vlan association trunk](#), on page 402
- [switchport private-vlan host-association](#), on page 403
- [switchport private-vlan mapping](#), on page 404
- [switchport private-vlan mapping trunk](#), on page 405
- [switchport private-vlan trunk allowed vlan](#), on page 406
- [switchport private-vlan trunk native vlan](#), on page 407
- [switchto vdc](#), on page 408
- [sync-peers destination](#), on page 409
- [sync-snmp-password](#), on page 410
- [sync-snmp-password](#), on page 411
- [sync-snmp-password](#), on page 412
- [system-mac](#), on page 413
- [system-priority](#), on page 414
- [system](#), on page 415
- [system cores](#), on page 416
- [system cores retain](#), on page 417
- [system default interface](#), on page 418
- [system default switchport](#), on page 419
- [system default switchport fabricpath](#), on page 420
- [system default switchport shutdown](#), on page 421
- [system fabric-mode full-rate](#), on page 422
- [system fast-reload stabilization-timer](#), on page 423
- [system hap-reset](#), on page 424
- [system health check bootflash](#), on page 425
- [system heartbeat](#), on page 426
- [system high-multicast-priority](#), on page 427
- [system inband queuing](#), on page 428
- [system inband queuing](#), on page 429
- [system interface shutdown](#), on page 430
- [system internal aclmgr global lock](#), on page 431

- [system internal aclmgr inject](#), on page 432
- [system internal aclmgr remove policies interface](#), on page 433
- [system internal aclmgr vcache](#), on page 434
- [system internal clis event-history](#), on page 435
- [system internal npacl event-history](#), on page 436
- [system internal policy-resync module](#), on page 437
- [system kernel-trace](#), on page 438
- [system kgdb](#), on page 439
- [system memory-thresholds minor](#), on page 440
- [system minlife](#), on page 441
- [system mode maintenance](#), on page 442
- [system mode maintenance on-reload reset-reason](#), on page 443
- [system mode maintenance timeout](#), on page 444
- [system module failure-action shutdown](#), on page 445
- [system no hap-reset](#), on page 446
- [system no heartbeat](#), on page 447
- [system no kgdb](#), on page 448
- [system no standby manual-boot](#), on page 449
- [system no statistics](#), on page 450
- [system no watchdog](#), on page 451
- [system no watchdog kgdb](#), on page 452
- [system nve ipmc global index-size](#), on page 453
- [system offline](#), on page 454
- [system pss shrink](#), on page 455
- [system qos](#), on page 456
- [system release mod-lock uuid](#), on page 457
- [system restart vdc](#), on page 458
- [system routing unknown-unicast-flood](#), on page 459
- [system standby manual-boot](#), on page 460
- [system standby reload vdc](#), on page 461
- [system startup-config init](#), on page 462
- [system startup-config kill config-update](#), on page 463
- [system startup-config unlock](#), on page 464
- [system statistics](#), on page 465
- [system switchover](#), on page 466
- [system switchover force](#), on page 467
- [system swover-timeout-reset](#), on page 468
- [system trace](#), on page 469
- [system urpf disable](#), on page 470
- [system vlan](#), on page 471
- [system watchdog](#), on page 472

sampler

[no] sampler <samplername>

Syntax Description

sampler	Define a Sampler
<i>samplername</i>	Name of sampler

Command Mode

- /exec/configure

sap hash-algorithm HMAC-SHA-1

```
{ [ no ] sap hash-algorithm HMAC-SHA-1 } | { sap hash-algorithm HMAC-MD5 }
```

Syntax Description

sap	Specify preferred SAP negotiation parameters
hash-algorithm	Hashing Algorithm to use during SAP protocol
HMAC-SHA-1	use HMAC-SHA-1 for hashing (default is HMAC-MD5)
HMAC-MD5	use HMAC-MD5 for hashing

Command Mode

- /exec/configure/cts-dot1x /exec/configure/cts-manual

sap modelist

[no] sap modelist <mode_opt>

Syntax Description

sap	Specify preferred SAP negotiation parameters
modelist	encryption mode
<i>mode_opt</i>	modelist options

Command Mode

- /exec/configure/cts-dot1x

sap pmk

```
sap pmk <pmk> [ left-zero-padded ] [ modelist <mode_opt> ] | sap pmk use-dot1x [ modelist <mode_opt> ]
| no sap
```

Syntax Description

sap	Specify preferred SAP negotiation parameters
pmk	pairwise master key
<i>pmk</i>	32 byte value specified as a string
left-zero-padded	(Optional) Pad with zeros on the left if PMK length is less than 32 bytes
modelist	(Optional) encryption mode
<i>mode_opt</i>	(Optional) modelist options
<i>modelist</i>	(Optional) <mode_opt>
use-dot1x	Use pmk generated after dot1x authentication. Use dot1x commands to configure dot1x on this port

Command Mode

- /exec/configure/cts-manual

save

save <uri0>

Syntax Description

save	Save the current configuration session to uri
<i>uri0</i>	Enter the complete uri where the session is to be stored

Command Mode

- /exec/configure

scale-factor

[no] scale-factor <sf-value> module <module-number>

Syntax Description

no	(Optional) Negate a command or set its defaults
scale-factor	Scale factor
<i>sf-value</i>	Specify scale factor value from 0.10 to 2.00
module	Module
<i>module-number</i>	specify module number

Command Mode

- /exec/configure/ctrl-plane

scheduler aaa-authentication

```
{ scheduler aaa-authentication { password { 0 <s0> | 7 <s1> | <s2> } | username <s3> password { 01 <s4> | 71 <s5> | <s6> } } | no scheduler aaa-authentication { password [ { 0 <s0> | 7 <s1> | <s2> } ] | username <s3> password [ { 01 <s4> | 71 <s5> | <s6> } ] } }
```

Syntax Description

no	Negate a command or set its defaults
scheduler	Config commands for scheduler
aaa-authentication	Password for AAA authentication(of logged in user)
password	Specify the password of logged in user(for AAA authentication)
0	Password (clear text) of logged in user
s0	password (clear text) of logged in user
7	Encrypted password of logged in user
s1	Encrypted password (for AAA authentication)
s2	Password (clear text) of logged in user
username	logged in user name
s3	user name (for AAA authentication)
password	Specify the password of logged in user(for AAA authentication)
01	Password (clear text) of logged in user
s4	password (clear text) of logged in user
71	Encrypted password of logged in user
s5	Encrypted password (for AAA authentication)
s6	Password (clear text) of logged in user

Command Mode

- /exec/configure

scheduler enable

[no] scheduler enable

Syntax Description

no	(Optional) Negate a command or set its defaults
scheduler	Config commands for scheduler
enable	Command to enable/disable features

Command Mode

- /exec/configure

scheduler job name

[no] scheduler job name <s0>

Syntax Description

no	(Optional) Negate a command or set its defaults
scheduler	Config commands for scheduler
job	Define a job
name	Specify a name for the job
s0	Name of the job

Command Mode

- /exec/configure

scheduler logfile size

{ scheduler logfile size <i0> | no scheduler logfile size [<i0>] }

Syntax Description

no	Negate a command or set its defaults
scheduler	Config commands for scheduler
logfile	Scheduler log file configuration
size	Specify the log file size
<i>i0</i>	Size of the file in KB

Command Mode

- /exec/configure

scheduler schedule name

[no] scheduler schedule name <s0>

Syntax Description

no	(Optional) Negate a command or set its defaults
scheduler	Config commands for scheduler
schedule	Define a schedule
name	Specify a name for the schedule
s0	Name of the schedule

Command Mode

- /exec/configure

scheduler transport email

```
{ scheduler transport email { from <s0> | reply-to <s1> | smtp-server <host0> [ port <i1> ] } | no scheduler transport email { from | reply-to | smtp-server } }
```

Syntax Description

no	Negate a command or set its defaults
scheduler	Config commands for scheduler
transport	Configure transport related configuration
email	Configure email transport related configuration
from	Configure from email address
<i>s0</i>	Provide from email address, example: SJ-9500-1@xyz.com
reply-to	Configure replyto email address
<i>s1</i>	Provide reply-to email address, example: admin@xyz.com
smtp-server	Configure SMTP server address
<i>host0</i>	SMTP server(DNS name or IPv4 or IPv6 address)
port	(Optional) Configure SMTP server port (default:25)
<i>i1</i>	(Optional) SMTP server port

Command Mode

- /exec/configure

scp

scp [<recurse>] <from> [<hyphen>] <src-path>

Syntax Description

scp	Launch scp subsystem
<i>recurse</i>	(Optional) -r recurse
<i>from</i>	-f scp from
<i>hyphen</i>	(Optional) --
<i>src-path</i>	from URL

Command Mode

- /exec

scp

```
scp [ <recurse> ] [ <directory> ] [ <verbose> ] <to> [ <hyphen> ] <dst-path>
```

Syntax Description

<code>scp</code>	Launch scp subsystem
<code>recurse</code>	(Optional) -r recurse
<code>directory</code>	(Optional) -d directory
<code>verbose</code>	(Optional) -v verbose
<code>to</code>	-t scp to
<code>hyphen</code>	(Optional) --
<code>dst-path</code>	to URL

Command Mode

- /exec

scripting tcl init

scripting tcl init <uri0> | no scripting tcl init

Syntax Description

no	Negate a command or set its defaults
scripting	Configure scripting parameters
tcl	Specify scripting parameter for tcl
init	Specify init parameters
<i>uri0</i>	Tcl init script name

Command Mode

- /exec

scripting tcl recursion-limit

scripting tcl recursion-limit <limit> | no scripting tcl recursion-limit

Syntax Description

no	Negate a command or set its defaults
scripting	Configure scripting parameters
tcl	Specify scripting parameter for tcl
recursion-limit	Specify recursion-limit
<i>limit</i>	Specify limit

Command Mode

- /exec

search

search <failure_desc>

Syntax Description

search	Search for information
<i>failure_desc</i>	Brief problem description

Command Mode

- /exec

section

section <pattern>

Syntax Description

	Pipe command output to filter
section	show lines that include the pattern as well as the subsequent lines that are more indented than matching line
<i>pattern</i>	the pattern (regular expression) to match

Command Mode

- /output

secure-handoff

{ [no] secure-handoff }

Syntax Description

no	(Optional) Negate a command or set its defaults
secure-handoff	Confirm dynamic-eid discovery by probing for remote host

Command Mode

- /exec/configure/lisp-dynamic-eid /exec/configure/vrf/lisp-dynamic-eid

sed

sed [-n] + <expr>

Syntax Description

	Pipe command output to filter
sed	Stream Editor
-n	(Optional) suppress automatic printing of pattern space
<i>expr</i>	Edition command (script)

Command Mode

- /output

send-community

[no | default] send-community [both | extended | standard]

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
send-community	Send Community attribute to this neighbor
both	(Optional) Send Standard and Extended Community attributes
extended	(Optional) Send Extended Community attribute
standard	(Optional) Send Standard Community attribute

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af

send-community

[no | default] send-community [both | extended | standard]

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
send-community	Send Community attribute to this neighbor
both	(Optional) Send Standard and Extended Community attributes
extended	(Optional) Send Extended Community attribute
standard	(Optional) Send Standard Community attribute

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-mdt
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv6
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-l2vpn-vpls
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-mvpn
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv6-mvpn
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-l2vpn-evpn

send-lifetime

```
{ { send-lifetime [ local ] <stime> { month_a | month_b | month_c | month_d | month_e | month_f | month_g
| month_h | month_i | month_j | month_k | month_l } <sday> <syar> { duration <dsec> | infinite | <etime>
{ month_a | month_b | month_c | month_d | month_e | month_f | month_g | month_h | month_i | month_j |
month_k | month_l } <eday> <eyear> } } | { no send-lifetime [ [ local ] <stime> { month_a | month_b | month_c
| month_d | month_e | month_f | month_g | month_h | month_i | month_j | month_k | month_l } <sday> <syar>
{ duration <dsec> | infinite | <etime> { month_a | month_b | month_c | month_d | month_e | month_f | month_g
| month_h | month_i | month_j | month_k | month_l } <eday> <eyear> } ] } }
```

Syntax Description

no	Negate a command or set its defaults
send-lifetime	Set send lifetime of key
local	(Optional) Specify time in local timezone
<i>stime</i>	HH:MM:SS Time to start <0-23>:<0-59>:<0-59>
<i>etime</i>	HH:MM:SS Time to end <0-23>:<0-59>:<0-59>
month_a	
month_b	
month_c	
month_d	
month_e	
month_f	
month_g	
month_h	
month_i	
month_j	
month_k	
month_l	
<i>sday</i>	Day of the month to start
<i>eday</i>	Day of the month to end
<i>syar</i>	Year to start
<i>eyear</i>	Year to end
duration	Set key lifetime duration

<i>dsec</i>	Duration in seconds
infinite	Never Expires

Command Mode

- /exec/configure/keychain-key

send

send <line>

Syntax Description

send	Send message to open sessions
<i>line</i>	Send message (a line) to all open sessions

Command Mode

- /exec

send session

send session <s0> <line>

Syntax Description

send	Send message to open sessions
session	Send message to specific session
<i>s0</i>	Specify pts/tty device type
<i>line</i>	Enter a one line message

Command Mode

- /exec

server

[no] server <hostipname>

Syntax Description

no	(Optional) Negate a command or set its defaults
server	RADIUS server name or IP address
<i>hostipname</i>	IPV4/IPV6 address or DNS name

Command Mode

- /exec/configure/radius

server

[no] server <host0>

Syntax Description

no	(Optional) Negate a command or set its defaults
server	LDAP server name
<i>host0</i>	LDAP server name

Command Mode

- /exec/configure/ldap

server

[no] server { <hostname> }

Syntax Description

no	(Optional) Negate a command or set its defaults
server	TACACS+ server name or IP address
<i>hostname</i>	IPV4/IPV6 address or DNS name

Command Mode

- /exec/configure/tacacs+

server protocol ldap

```
[no] server protocol ldap { ip <ipaddr> | host <hostname> } [ port <portnum> ] [ vrf { <vrf-name> | <vrf-known-name> } ] [ enable-ssl ]
```

Syntax Description

no	(Optional) Negate a command or set its defaults
server	Configure database server
protocol	Configure database protocol
ldap	Use LDAP
ip	IP address of server
<i>ipaddr</i>	Enter IP address of server
host	Hostname of server
<i>hostname</i>	Enter hostname of server
port	(Optional) Port
<i>portnum</i>	(Optional) Enter port number
vrf	(Optional) vrf context
<i>vrf-name</i>	(Optional) VRF name
<i>vrf-known-name</i>	(Optional) Known VRF name
enable-ssl	(Optional) LDAP server enable ssl

Command Mode

- /exec/configure/fabric-db

server protocol radius group

[no] server protocol radius group <groupname>

Syntax Description

no	(Optional) Negate a command or set its defaults
server	Configure database server
protocol	Configure database protocol
radius	Use RADIUS
group	AAA group
<i>groupname</i>	Enter AAA group name of servers

Command Mode

- /exec/configure/fabric-db

server protocol xmpp

```
[no] server protocol xmpp { ip <ipaddr> | host <hostname> } [ port <portnum> ] [ vrf { <vrf-name> | <vrf-known-name> } ]
```

Syntax Description

no	(Optional) Negate a command or set its defaults
server	Configure database server
protocol	Configure database protocol
xmpp	Use XMPP
ip	IP address of server
<i>ipaddr</i>	Enter IP address of server
host	Hostname of server
<i>hostname</i>	Enter hostname of server
port	(Optional) Port
<i>portnum</i>	(Optional) Enter port number
vrf	(Optional) vrf context
<i>vrf-name</i>	(Optional) VRF name
<i>vrf-known-name</i>	(Optional) Known VRF name

Command Mode

- /exec/configure/fabric-db

service-policy

[no] service-policy [type qos] <inp-or-out> <pmap-name-qos> [no-stats]

Syntax Description

no	(Optional) Negate a command or set its defaults
service-policy	Configure service policy for an interface
type	(Optional) Specify the type of this policy
qos	(Optional) Qos policy
<i>inp-or-out</i>	
<i>pmap-name-qos</i>	Policy-map name __nil__ You must create a policy-map before using this command
no-stats	(Optional) Disable statistics for this policy

Command Mode

- /exec/configure/if-set-qos /exec/configure/if-remote-ethernet /exec/configure/if-remote-ethernet-switch

service-policy

[no] service-policy [type qos] <inp-or-out> <pmap-name-qos> [no-stats]

Syntax Description

no	(Optional) Negate a command or set its defaults
service-policy	Configure service policy for an interface
type	(Optional) Specify the type of this policy
qos	(Optional) Qos policy
<i>inp-or-out</i>	
<i>pmap-name-qos</i>	Policy-map name __nil__ You must create a policy-map before using this command
no-stats	(Optional) Disable statistics for this policy

Command Mode

- /exec/configure/vlan

service-policy

[no] service-policy [type qos] <pmap-name-qos>

Syntax Description

no	(Optional) Negate a command or set its defaults
service-policy	Configure hierarchial policy-map
type	(Optional) Specify the type of this policy
qos	(Optional) Qos policy
<i>pmap-name-qos</i>	Policy-map name

Command Mode

- /exec/configure/policy-map/class

service-policy input

[no] service-policy input <policy_name>

Syntax Description

no	(Optional) Negate a command or set its defaults
service-policy	Attach a policy to control-plane interface
input	Input the policy name
<i>policy_name</i>	Name of the policy

Command Mode

- /exec/configure/ctrl-plane

service-policy type network-qos

[no] service-policy type network-qos <pmap-name-nq>

Syntax Description

no	(Optional) Negate a command or set its defaults
service-policy	Policy Map
type	Specify the type of this policy-map
network-qos	Network QoS policy
<i>pmap-name-nq</i>	Policy-map name

Command Mode

- /exec/configure/system/qos

service-policy type psp

```
[no] service-policy type psp <inp-or-out> { <pmap-name-plc> | { handle <ppf_id> } }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
service-policy	Configure service policy for an interface
type	Specify the type of this policy
psp	PSP policy
<i>inp-or-out</i>	
<i>pmap-name-plc</i>	Policy-map name __nil__ You must create a policy-map before using this command
handle	Handle
<i>ppf_id</i>	PPF ID

Command Mode

- /exec/configure/if-set-qos

service-policy type qos

[no] service-policy type qos <inp-only> <pmap-name-qos>

Syntax Description

no	(Optional) Negate a command or set its defaults
service-policy	Policy Map
type	Specify the type of this policy-map
qos	System-level QoS policy
<i>inp-only</i>	
<i>pmap-name-qos</i>	Policy-map name __nil__ You must create a policy-map before using this command

Command Mode

- /exec/configure/system/qos

service-policy type queuing

[no] service-policy type queuing <inp-or-out> <pmap-name-que> [no-stats]

Syntax Description

no	(Optional) Negate a command or set its defaults
service-policy	Configure service policy for an interface
type	Specify the type of this policy
queuing	Queuing policy
<i>inp-or-out</i>	
<i>pmap-name-que</i>	Policy-map name
no-stats	(Optional) Disable statistics for this policy

Command Mode

- /exec/configure/if-set-que

service-policy type queuing

[no] service-policy type queuing <inp-or-out> <pmap-name-que>

Syntax Description

no	(Optional) Negate a command or set its defaults
service-policy	Policy Map
type	Specify the type of this policy-map
queuing	DCE Queuing policy
<i>inp-or-out</i>	
<i>pmap-name-que</i>	Policy-map name

Command Mode

- /exec/configure/system/qos

service-policy type queuing

[no] service-policy type queuing <pmap-name-que>

Syntax Description

no	(Optional) Negate a command or set its defaults
service-policy	Set the inner policy-map
type	Specify the type of this policy
queuing	Queuing policy
<i>pmap-name-que</i>	Policy-map name __nil__ You must create a policy-map before using this command

Command Mode

- /exec/configure/policy-map/type/queuing/class

service dhcp

[no] service dhcp

Syntax Description

no	(Optional) Negate a command or set its defaults
service	Modify use of network based services
dhcp	Enable DHCP relay agent

Command Mode

- /exec/configure

service set

[no] service set <onep-service-set>

Syntax Description

no	(Optional) Negate a command or set its defaults
service	ONEP service set
set	ONEP service set
<i>onep-service-set</i>	service name

Command Mode

- /exec/configure/onep

service unsupported-transceiver

[no] service unsupported-transceiver

Syntax Description

no	(Optional) Negate a command or set its defaults
service	Serviceability Commands
unsupported-transceiver	Configure support for transceivers not supported by Cisco

Command Mode

- /exec/configure

service vlan-group

```
{ service vlan-group <grp-number> <vlan-range> } | { no service vlan-group <grp-number> [ <vlan-range> ] }
```

Syntax Description

no	Negate a command or set its defaults
service	service module
vlan-group	vlan group
<i>grp-number</i>	group #
<i>vlan-range</i>	range of vlans

Command Mode

- /exec/configure

session-limit

[no] session-limit <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
session-limit	Set the max no of concurrent vsh sessions
<i>i0</i>	Max concurrent vsh sessions

Command Mode

- /exec/configure/line

session domain-lookup

session domain-lookup | no session domain-lookup

Syntax Description

session	Configure session preferences
no	Negate a command or set its defaults
domain-lookup	Session

Command Mode

- /exec

session key-required

[no] session key-required

Syntax Description

no	Negate a command or set its defaults
session	One Platform session
key-required	Disable session key

Command Mode

- /exec/configure/onep

session max

session max <onep-maxsess>

Syntax Description

session	One Platform session
max	Maximum number of sessions
<i>onep-maxsess</i>	Number of sessions

Command Mode

- /exec/configure/onep

session max

[no] session max [<onep-maxsess>]

Syntax Description

no	Negate a command or set its defaults
session	One Platform session
max	Maximum number of sessions
<i>onep-maxsess</i>	(Optional) Number of sessions

Command Mode

- /exec/configure/onep

session protection

[no] session protection [vrf { <vrf-name> | <vrf-known-name> }] [for <pfx-list>] [duration { <secs> | infinite }]

Syntax Description

no	(Optional) Negate a command or set its defaults
session	Configure session parameters
protection	Configure session protection parameters
vrf	(Optional) VRF Routing/Forwarding instance information
<i>vrf-name</i>	(Optional) VPN Routing/Forwarding instance name
<i>vrf-known-name</i>	(Optional) Known VRF name
for	(Optional) Prefix list to specify LDP peers
<i>pfx-list</i>	(Optional) Prefix list for LDP peers
duration	(Optional) Period to sustain session protection after loss of link discovery
<i>secs</i>	(Optional) Holdup time in seconds
infinite	(Optional) Protect session forever after loss of link discovery

Command Mode

- /exec/configure/ldp

set-attached-bit

[no] set-attached-bit

Syntax Description

no	(Optional) Negate a command or set its defaults
set-attached-bit	Configure L1 L2 router to set/unset attached bit in its L1 LSP

Command Mode

- /exec/configure/router-isis/router-isis-vrf-common /exec/configure/router-isis/router-isis-af-ipv6

set-overload-bit

```
[no] set-overload-bit | [ no ] set-overload-bit { always | on-startup { <secs> | [ <seconds> ] wait-for bgp <as>
} } [ suppress { [ interlevel ] [ external ] } ]
```

Syntax Description

no	Negate a command or set its defaults
set-overload-bit	Signal other routers not to use us for transit
always	Set the overload bit unconditionally
on-startup	Set the overload bit on IS-IS startup
<i>secs</i>	Clear the overload bit after an elapsed time in seconds
wait-for	Clear the overload bit when notified by a specific protocol
bgp	Border Gateway Protocol (BGP)
<i>seconds</i>	(Optional) Clear the overload bit after an elapsed time in seconds
<i>as</i>	Autonomous system number
suppress	(Optional) Suppress route redistribution if overload bit set
interlevel	(Optional) Suppress interlevel route redistribution
external	(Optional) Suppress external route redistribution

Command Mode

- /exec/configure/router-isis/router-isis-vrf-common

set

set <paramname> <paramval>

Syntax Description

set	Set the parameter value
<i>paramname</i>	Enter the name of the parameter
<i>paramval</i>	Enter the parameter value

Command Mode

- /exec/configure/param-inst

set (elamns/se15)

```
set { inner | outer } l2 [ { snap_vld <snap_vld> | cntag_vld <cntag_vld> | qtag_vld <qtag_vld> | vlan <vlan_id>
| cos <cos_val> | cfi <cfi_vld> | vntag_vld <vntag_vld> | vntag_svif <vntag_svif> | vntag_dvif <vntag_dvif>
| vntag_looped <vntag_loop> | vntag_pointer <vntag_p> | src_mac <smac> | dst_mac <dmac> } ] +
```

Syntax Description

set	Setup Trigger
inner	Mask and Match By Inner Packet Fields
outer	Mask and Match By Outer Packet Fields
l2	All Layer 2 Fields
snap_vld	(Optional) SNAP Header Information Valid
<i>snap_vld</i>	(Optional) SNAP Header Information Valid
cntag_vld	(Optional) CNTag Information Valid
<i>cntag_vld</i>	(Optional) CNTag Information Valid
qtag_vld	(Optional) VLAN Tag Information Valid
<i>qtag_vld</i>	(Optional) VLAN Tag Information Valid
vlan	(Optional) VLAN Id (Present only in case of FEX)
<i>vlan_id</i>	(Optional) VLAN Id
cos	(Optional) Class of Service
<i>cos_val</i>	(Optional) Class of Service Type
cfi	(Optional) CFI Setting
<i>cfi_vld</i>	(Optional) CFI Setting Valid
vntag_vld	(Optional) VNTAG Information Valid
<i>vntag_vld</i>	(Optional) VNTAG Information Valid
vntag_svif	(Optional) VNTAG Source vif
<i>vntag_svif</i>	(Optional) VNTAG Source vif
vntag_dvif	(Optional) VNTAG Destination vif
<i>vntag_dvif</i>	(Optional) VNTAG Destination vif
vntag_looped	(Optional) VNTAG Header Looped Valid
<i>vntag_loop</i>	(Optional) VNTAG Header Looped Valid

<i>vntag_pointer</i>	(Optional) VNTAG Header Pointer Valid
<i>vntag_p</i>	(Optional) VNTAG Header Pointer Valid
<i>src_mac</i>	(Optional) Source MAC Address
<i>smac</i>	(Optional) Source MAC Address Value
<i>dst_mac</i>	(Optional) Destination MAC Address
<i>dmac</i>	(Optional) Destination MAC Address Value

Command Mode

- /exec/elamns/sel5

set (elamns/se15)

```
set { inner | outer } l2 hg2 [ { hg2_vid <hg2_vlan> | hg2_ppd_type <hg2_ppd_type> | hg2_mirror <hg2_mirror>
| hg2_opcode <hg2_opcode> | hg2_dstpid <hg2_dpid> | hg2_dstmod <hg2_dmod> | hg2_srcpid <hg2_spid>
| hg2_srcmod <hg2_smod> | hg2_l3vld <hg2_l3_vld> | hg2_tc <hg2_tc> | hg2_dp <hg2_dp> | hg2_mcast
<hg2_mcast_vld> | hg2-vld <hg2_vld> | hg2-cos <hg2_cos> } ] +
```

Syntax Description

set	Setup Trigger
inner	Mask and Match By Inner Packet Fields
outer	Mask and Match By Outer Packet Fields
l2	All Layer 2 Fields
hg2	High Gig2 Fields
hg2_vid	(Optional) High Gig2 VLAN Tag
<i>hg2_vlan</i>	(Optional) High Gig2 VLAN Tag Information
hg2_ppd_type	(Optional) High Gig2 Packet Processing Descriptor
<i>hg2_ppd_type</i>	(Optional) High Gig2 Packet Processing Descriptor
hg2_mirror	(Optional) High Gig2 Packet Mirror Information
<i>hg2_mirror</i>	(Optional) High Gig2 Packet Mirror Information
hg2_opcode	(Optional) High Gig2 Packet Type
<i>hg2_opcode</i>	(Optional) High Gig2 Packet Type
hg2_dstpid	(Optional) High Gig2 Destination Port ID
<i>hg2_dpid</i>	(Optional) High Gig2 Destination Port ID
hg2_dstmod	(Optional) High Gig2 Destination Module ID
<i>hg2_dmod</i>	(Optional) High Gig2 Destination Module ID
hg2_srcpid	(Optional) High Gig2 Source Port ID
<i>hg2_spid</i>	(Optional) High Gig2 Source Port ID
hg2_srcmod	(Optional) High Gig2 Souce Module ID
<i>hg2_smod</i>	(Optional) High Gig2 Souce Module ID
hg2_l3vld	(Optional) High Gig2 Packet L3 Switched
<i>hg2_l3_vld</i>	(Optional) High Gig2 Packet L3 Switched

<code>hg2_tc</code>	(Optional) High Gig2 Packet Traffic Class
<code>hg2_tc</code>	(Optional) High Gig2 Packet Traffic Class
<code>hg2_dp</code>	(Optional) High Gig2 Drop Precedence
<code>hg2_dp</code>	(Optional) High Gig2 Drop Precedence
<code>hg2_mcast</code>	(Optional) High Gig2 MultiCast Forwarding Information
<code>hg2_mcast_vld</code>	(Optional) High Gig2 Multicast Forwarding Information
<code>hg2-vld</code>	(Optional) High Gig2 Valid Information
<code>hg2_vld</code>	(Optional) High Gig2 Valid Information
<code>hg2-cos</code>	(Optional) High Gig2 CoS Information
<code>hg2_cos</code>	(Optional) High Gig2 CoS Information

Command Mode

- /exec/elamns/sel5

set (elamns/set6)

```
set { inner | outer } ipv4 [ { l3-type <l3_type> | pyld-len <pyld_len> | v6-vld <v6_vld> | version <ver> |
header-len <hlen> | dscp <dscp_val> | ecn <ecn_val> | packet-len <pkt_len> | more-frags <mf> | fragment-off
<fragoff> | ttl <ttl_val> | next-protocol <nproto> | checksum <csum> | src_ip <src_ip> | dst_ip <dst_ip> } ] +
```

Syntax Description

set	Setup Trigger
inner	Mask and Match By Inner Packet Fields
outer	Mask and Match By Outer Packet Fields
ipv4	IPv4 Fields
l3-type	(Optional) L3 Packet Type
<i>l3_type</i>	(Optional) L3 Packet Type
pyld-len	(Optional) Payload Length
<i>pyld_len</i>	(Optional) Payload Length
v6-vld	(Optional) IPv6 Valid Information
<i>v6_vld</i>	(Optional) IPv6 Valid Information
version	(Optional) Version
<i>ver</i>	(Optional) Version
header-len	(Optional) Header Length
<i>hlen</i>	(Optional) Header Length
dscp	(Optional) Diff. Serv. Code Point
<i>dscp_val</i>	(Optional) Diff. Serv. Code Point
ecn	(Optional) Explicit Congestion Ntn
<i>ecn_val</i>	(Optional) Explicit Congestion Ntn
packet-len	(Optional) Packet Total Length
<i>pkt_len</i>	(Optional) Packet Total Length
more-frags	(Optional) More Fragments Available
<i>mf</i>	(Optional) More Fragments Available
fragment-off	(Optional) Fragments Offset
<i>fragoff</i>	(Optional) Fragments Offset

<i>ttl</i>	(Optional) Time to Live
<i>ttl_val</i>	(Optional) Time to Live
<i>next-protocol</i>	(Optional) Next(L4) Protocol
<i>nproto</i>	(Optional) Next(L4) Protocol
<i>checksum</i>	(Optional) Checksum
<i>csum</i>	(Optional) Checksum
<i>src_ip</i>	(Optional) Source IP Address
<i>sip</i>	(Optional) Source IP Address
<i>dst_ip</i>	(Optional) Destination IP Address
<i>dip</i>	(Optional) Destination IP Address

Command Mode

- /exec/elamns/sel6

set (sel7)

```
set { inner | outer } l4 [ { src-port <sport> | dst-port <dport> | packet-len <pkt_len> | checksum <csum> | flags
<flag_val> } ] +
```

Syntax Description

set	Setup Trigger
inner	Mask and Match By Inner Packet Fields
outer	Mask and Match By Outer Packet Fields
l4	L4 Fields
src-port	(Optional) Source Port Information
<i>sport</i>	(Optional) Source Port
dst-port	(Optional) Destination Port Information
<i>dport</i>	(Optional) Destination Port
packet-len	(Optional) Packet Length
<i>pkt_len</i>	(Optional) Packet Length
checksum	(Optional) Checksum
<i>csum</i>	(Optional) Checksum
flags	(Optional) L4 Flags
<i>flag_val</i>	(Optional) L4 Flags

Command Mode

- /exec/elanms/sel7

set (policy-map/class)

[no] set { load-sharing per-packet }

Syntax Description

set	Set attribute
load-sharing	Load sharing across ECMP by set out-of-order bit
per-packet	per MiM packet
no	(Optional) Negate a command or set its defaults

Command Mode

- /exec/configure/policy-map/class

set (plc/class)

```
[no] set { { cos <cos-val> } | { eth-src-mac-addr <src-mac-addr> } | { eth-dest-mac-addr <dest-mac-addr> }
| { vlan <vlan-number> } | { ip-tos <ip-tos-value> <ip-tos-mask> } | { out-interface <iface-list> } | { dscp [
tunnel ] { <dscp-val> | <dscp-enum> } } | { precedence [ prec-tunnel ] { <prec-val> | <prec-enum> } } | {
discard-class <dis-class-val> } | { qos-group <qos-grp-val> } | { { { cos1 cos2 } | { dscp1 dscp2 } | { prec1
prec2 } | { dis-class1 dis-class2 } | { dscp3 mpls-exp-imposition } | { mpls-exp-topmost dscp4 } | {
mpls-exp-topmost1 mpls-exp-topmost2 } } } | { mpls experimental { { topmost <exp-value> } | { imposition
<exp-value-imp> } } } | action-strip-vlan | action-drop-pkt | divert-action | copy-action | action-decrement-ttl
| forward-normal | goto-pmap <pmap-table-handle> }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set attribute
cos	IEEE 802.1Q class of service
cos1	IEEE 802.1Q class of service
cos2	IEEE 802.1Q class of service
<i>cos-val</i>	802.1Q Class of Service value
eth-dest-mac-addr	Action on Layer 2 destination MAC address
eth-src-mac-addr	Action on Layer 2 source MAC address
<i>src-mac-addr</i>	Layer 2 MAC Address
<i>dest-mac-addr</i>	Layer 2 MAC Address
vlan	Set the VLAN ID
<i>vlan-number</i>	VLAN NUMBER
ip-tos	Set the IPv4 TOS
<i>ip-tos-value</i>	IPv4 TOS Value
<i>ip-tos-mask</i>	IPV4 TOS Mask
out-interface	Output to a Specified Interface
<i>iface-list</i>	Physical Interface Name and Number or List
action-strip-vlan	Perform the action STRIP-VLAN-ID
action-drop-pkt	Perform the action Drop the Packet
divert-action	Divert the packets to Controller
copy-action	Copy the packets to Controller

action-decrement-ttl	Decrement TTL on the Packet
forward-normal	Forward the packets normally
goto-pmap	Goto pmap/table
<i>pmap-table-handle</i>	Pmap-table handle
dscp	DSCP in IP(v4) and IPv6 packets
dscp1	DSCP in IP(v4) and IPv6 packets
dscp2	DSCP in IP(v4) and IPv6 packets
tunnel	(Optional) Set DSCP in tunnel encapsulation
<i>dscp-val</i>	DSCP value
<i>dscp-enum</i>	
precedence	Precedence in IP(v4) and IPv6 packets
prec1	Precedence in IP(v4) and IPv6 packets
prec2	Precedence in IP(v4) and IPv6 packets
prec-tunnel	(Optional) Set Precedence in tunnel encapsulation
<i>prec-val</i>	IP Precedence value
<i>prec-enum</i>	
discard-class	Discard class
dis-class1	Discard class
dis-class2	Discard class
<i>dis-class-val</i>	Discard class value
qos-group	Qos-group
<i>qos-grp-val</i>	Qos-group value
mpls	Set MPLS label
experimental	Set MPLS experimental label
topmost	Set MPLS topmost label
imposition	Push the label and set new one on top
<i>exp-value</i>	MPLS value
<i>exp-value-imp</i>	MPLS value
dscp3	DSCP in IP(v4) and IPv6 packets

mpls-exp-imposition	mpls-exp-imposition
mpls-exp-topmost	mpls-exp-topmost
dscp4	DSCP in IP(v4) and IPv6 packets
mpls-exp-topmost1	mpls-exp-topmost
mpls-exp-topmost2	mpls-exp-topmost

Command Mode

- /exec/configure/policy-map/type/plc/class

set (pmap/class)

```
[no] set { { cos [ inner ] <cos-val> } | { dscp [ tunnel ] { <dscp-val> | <opt_set_dscp> } } | { precedence [
tunnel1 ] { <prec-val> | <opt_set_prec> } } }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set attribute
cos	IEEE 802.1Q class of service
inner	(Optional) Set inner 802.1Q class of service in QinQ environment
<i>cos-val</i>	802.1Q Class of Service value
dscp	DSCP in IP(v4) and IPv6 packets
tunnel	(Optional) Set DSCP in tunnel encapsulation
<i>dscp-val</i>	DSCP value
<i>opt_set_dscp</i>	
precedence	Precedence in IP(v4) and IPv6 packets
tunnel1	(Optional) Set DSCP in tunnel encapsulation
<i>prec-val</i>	IP Precedence value
<i>opt_set_prec</i>	

Command Mode

- /exec/configure/pmap/class

set (class)

```
[no] set { { dlb-disable } | { dscp [ tunnel ] { <dscp-val> | <dscp-enum> } } | { qos-group <qos-grp-val> } }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set attribute
dlb-disable	Disable Dynamic Load Balancing
dscp	DSCP in IP(v4) and IPv6 packets
tunnel	(Optional) Set DSCP in tunnel encapsulation
<i>dscp-val</i>	DSCP value
<i>dscp-enum</i>	
qos-group	Qos-group
<i>qos-grp-val</i>	Qos-group value

Command Mode

- /exec/configure/policy-map/class

set

```
[no] set { { cos <cos-val> } | { precedence [ prec-tunnel ] { <prec-val> | <prec-enum> } } | { discard-class
<dis-class-val> } | { { cos1 cos2 } | { dscp1 dscp2 } | { prec1 prec2 } | { dis-class1 dis-class2 } | { dscp3
mpls-exp-imposition } | { mpls-exp-topmost dscp4 } | { mpls-exp-topmost1 mpls-exp-topmost2 } } table
<table-map-name> } | { mpls experimental { topmost <exp-value> } | { imposition <exp-value-imp> } } }
}
```

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set attribute
cos	IEEE 802.1Q class of service
cos1	IEEE 802.1Q class of service
cos2	IEEE 802.1Q class of service
<i>cos-val</i>	802.1Q Class of Service value
dscp1	DSCP in IP(v4) and IPv6 packets
dscp2	DSCP in IP(v4) and IPv6 packets
precedence	Precedence in IP(v4) and IPv6 packets
prec1	Precedence in IP(v4) and IPv6 packets
prec2	Precedence in IP(v4) and IPv6 packets
prec-tunnel	(Optional) Set Precedence in tunnel encapsulation
<i>prec-val</i>	IP Precedence value
<i>prec-enum</i>	
discard-class	Discard class
dis-class1	Discard class
dis-class2	Discard class
<i>dis-class-val</i>	Discard class value
table	Table defining mapping from input to output
<i>table-map-name</i>	Table-map name
mpls	Set MPLS label
experimental	Set MPLS experimental label
topmost	Set MPLS topmost label

imposition	Push the label and set new one on top
<i>exp-value</i>	MPLS value
<i>exp-value-imp</i>	MPLS value
dscp3	DSCP in IP(v4) and IPv6 packets
mpls-exp-imposition	mpls-exp-imposition
mpls-exp-topmost	mpls-exp-topmost
dscp4	DSCP in IP(v4) and IPv6 packets
mpls-exp-topmost1	mpls-exp-topmost
mpls-exp-topmost2	mpls-exp-topmost

Command Mode

- /exec/configure/policy-map/class

set as-path

```
{ set as-path { prepend { last-as <lastas> | <as> + } | tag } } | { no set as-path { prepend [ last-as [ <lastas> ] | <as> + ] | tag } }
```

Syntax Description

no	Negate a command or set its defaults
set	Set values in destination routing protocol
as-path	Prepend string for a BGP AS-path attribute
prepend	Prepend to the AS-Path
last-as	Prepend last AS to the as-path
<i>lastas</i>	number of last-AS prepends
<i>as</i>	AS number
tag	Set the tag as an AS-path attribute
<i>as</i>	(Optional)

Command Mode

- /exec/configure/route-map

set comm-list

```
{ { set comm-list <name> delete } | { no set comm-list } }
```

Syntax Description

no	Negate a command or set its defaults
set	Set values in destination routing protocol
comm-list	set BGP community list (for deletion)
<i>name</i>	Community list name
delete	Delete matching communities

Command Mode

- /exec/configure/route-map

set community

```
{ set community { none | { additive | internet | local-AS | no-advertise | no-export | <hex_num> | <number>
| <community> } + } } | { no set community [ { none | { additive | internet | local-AS | no-advertise | no-export
| <hex_num> | <number> | <community> } + } ] }
```

Syntax Description

no	Negate a command or set its defaults
set	Set values in destination routing protocol
community	Set BGP community attribute
additive	Add to existing community
internet	Internet (well-known community)
local-AS	Do not send outside local AS (well-known community)
no-advertise	Do not advertise to any peer (well-known community)
no-export	Do not export to next AS (well-known community)
none	No community attribute
<i>number</i>	Community number
<i>hex_num</i>	Community number in hex
<i>community</i>	Community number aa:nn format
<i>additive</i>	(Optional) internet

Command Mode

- /exec/configure/route-map

set cos

[no] set cos <cos-val>

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set attribute
cos	IEEE 802.1Q class of service
<i>cos-val</i>	802.1Q Class of Service value

Command Mode

- /exec/configure/policy-map/type/queuing/class

set cos

[no] set cos <cos-val>

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set attribute
cos	IEEE 802.1Q class of service
<i>cos-val</i>	802.1Q Class of Service value

Command Mode

- /exec/configure/policy-map/type/uf/class

set dampening

```
{ set dampening <halflife> <reuse> <supress> <duration> } | { no set dampening [ <halflife> <reuse> <supress> <duration> ] }
```

Syntax Description

no	Negate a command or set its defaults
set	Set values in destination routing protocol
dampening	Set BGP route flap dampening parameters
<i>halflife</i>	half-life time for the penalty
<i>reuse</i>	penalty to start reusing a route
<i>supress</i>	penalty to start suppressing a route
<i>duration</i>	Maximum duration to suppress a stable route

Command Mode

- /exec/configure/route-map

set distance

{ set distance <external-dist> [<internal-dist> [<local-dist>]] } | { no set distance }

Syntax Description

no	Negate a command or set its defaults
set	Set values in destination routing protocol
distance	Set the Administrative distance of route
<i>external-dist</i>	Administrative distance for IGP or EBGp routes
<i>internal-dist</i>	(Optional) Administrative distance for internal routes
<i>local-dist</i>	(Optional) Administrative distance for local routes

Command Mode

- /exec/configure/route-map

set extcomm-list

```
{ { set extcomm-list <name> delete } | { no set extcomm-list [ <name> delete ] } }
```

Syntax Description

no	Negate a command or set its defaults
set	Set values in destination routing protocol
extcomm-list	set BGP extcommunity list (for deletion)
<i>name</i>	Extended Community list name
delete	Delete matching extcommunities

Command Mode

- /exec/configure/route-map

set extcommunity

```
{ set extcommunity { additive | none } } | { no set extcommunity [ additive | none ] }
```

Syntax Description

no	Negate a command or set its defaults
set	Set values in destination routing protocol
extcommunity	Set BGP extcommunity attribute
additive	Add to existing generic extcommunity
none	No extcommunity attribute

Command Mode

- /exec/configure/route-map

set extcommunity 4byteas-generic

```
{ set extcommunity 4byteas-generic { { transitive <ext-comm-gen-trans> | non-transitive
<ext-comm-gen-nontrans> } + [ additive ] | additive | none } } | { no set extcommunity 4byteas-generic [ {
transitive <ext-comm-gen-trans> | non-transitive <ext-comm-gen-nontrans> } + [ additive ] | additive | none
] }
```

Syntax Description

no	Negate a command or set its defaults
set	Set values in destination routing protocol
extcommunity	Set BGP extcommunity attribute
4byteas-generic	Generic extended community
additive	(Optional) Add to existing generic extcommunity
none	No extcommunity generic attribute
transitive	Transitive extended community
non-transitive	Non-Transitive extended community
<i>ext-comm-gen-trans</i>	
<i>ext-comm-gen-nontrans</i>	
<i>ext-comm-gen-trans</i>	(Optional)

Command Mode

- /exec/configure/route-map

set extcommunity cost

```
{ set extcommunity cost { [ igp | pre-bestpath ] <comm-id> <cost-value> } + } | { no set extcommunity cost
[ [ igp | pre-bestpath ] <comm-id> <cost-value> ] + }
```

Syntax Description

no	Negate a command or set its defaults
set	Set values in destination routing protocol
extcommunity	Set BGP extcommunity attribute
cost	Cost
igp	(Optional) Compare following IGP cost comparison
pre-bestpath	(Optional) Compare before all other steps in bestpath calculation
<i>comm-id</i>	Community ID
<i>cost-value</i>	Cost Community value
<i>comm-id</i>	(Optional) <cost-value>

Command Mode

- /exec/configure/route-map

set extcommunity rt

```
{ set extcommunity rt { { <ext-comm-rt-aa2nn4> | <ext-comm-rt-aa4nn2> } + [ additive ] | additive } } | {
no set extcommunity rt [ { { <ext-comm-rt-aa2nn4> | <ext-comm-rt-aa4nn2> } + [ additive ] | additive ] }
```

Syntax Description

no	Negate a command or set its defaults
set	Set values in destination routing protocol
extcommunity	Set BGP extcommunity attribute
rt	Route-Target
additive	(Optional) Add to existing rt extcommunity
<i>ext-comm-rt-aa2nn4</i>	
<i>ext-comm-rt-aa4nn2</i>	
<i>ext-comm-rt-aa2nn4</i>	(Optional)

Command Mode

- /exec/configure/route-map

set extension-key

[no] set extension-key <key>

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set the extension key manually
extension-key	Set the extension key manually
<i>key</i>	Extension key

Command Mode

- /exec/configure/vmt-conn

set forwarding-address

[no] set forwarding-address

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set values in destination routing protocol
forwarding-address	Set the forwarding address

Command Mode

- /exec/configure/route-map

set inner ipv4

```
set inner ipv4 [ { l3-type <l3_type> | pyld-len <pyld_len> | v6-vld <v6_vld> | version <ver> | header-len <hlen> | dscp <dscp_val> | ecn <ecn_val> | packet-len <pkt_len> | more-frags <mf> | fragment-off <fragoff> | ttl <ttl_val> | next-protocol <nproto> | checksum <csum> | src_ip <sip> | dst_ip <dip> } ] +
```

Syntax Description

set	Setup Trigger
inner	Mask and Match By Inner Packet Fields
ipv4	IPv4 Fields
l3-type	(Optional) L3 Packet Type
<i>l3_type</i>	(Optional) L3 Packet Type
pyld-len	(Optional) Payload Length
<i>pyld_len</i>	(Optional) Payload Length
v6-vld	(Optional) IPv6 Valid Information
<i>v6_vld</i>	(Optional) IPv6 Valid Information
version	(Optional) Version
<i>ver</i>	(Optional) Version
header-len	(Optional) Header Length
<i>hlen</i>	(Optional) Header Length
dscp	(Optional) Diff. Serv. Code Point
<i>dscp_val</i>	(Optional) Diff. Serv. Code Point
ecn	(Optional) Explicit Congestion Ntn
<i>ecn_val</i>	(Optional) Explicit Congestion Ntn
packet-len	(Optional) Packet Total Length
<i>pkt_len</i>	(Optional) Packet Total Length
more-frags	(Optional) More Fragments Available
<i>mf</i>	(Optional) More Fragments Available
fragment-off	(Optional) Fragments Offset
<i>fragoff</i>	(Optional) Fragments Offset
ttl	(Optional) Time to Live

<i>ttl_val</i>	(Optional) Time to Live
next-protocol	(Optional) Next(L4) Protocol
<i>nproto</i>	(Optional) Next(L4) Protocol
checksum	(Optional) Checksum
<i>csum</i>	(Optional) Checksum
src_ip	(Optional) Source IP Address
<i>sip</i>	(Optional) Source IP Address
dst_ip	(Optional) Destination IP Address
<i>dip</i>	(Optional) Destination IP Address

Command Mode

- /exec/elamns/set4

set inner l2

```
set inner l2 [ { snap_vld <snap_vld> | cntag_vld <cntag_vld> | qtag_vld <qtag_vld> | vlan <vlan_id> | cos
<cos_val> | cfi <cfi_vld> | vntag_vld <vntag_vld> | vntag_svif <vntag_svif> | vntag_dvif <vntag_dvif> |
vntag_looped <vntag_loop> | vntag_pointer <vntag_p> | src_mac <smac> | dst_mac <dmac> } ] +
```

Syntax Description

set	Setup Trigger
inner	Mask and Match By Inner Packet Fields
l2	All Layer 2 Fields
snap_vld	(Optional) SNAP Header Information Valid
<i>snap_vld</i>	(Optional) SNAP Header Information Valid
cntag_vld	(Optional) CNTag Information Valid
<i>cntag_vld</i>	(Optional) CNTag Information Valid
qtag_vld	(Optional) VLAN Tag Information Valid
<i>qtag_vld</i>	(Optional) VLAN Tag Information Valid
vlan	(Optional) VLAN Id (Present only in case of FEX)
<i>vlan_id</i>	(Optional) VLAN Id
cos	(Optional) Class of Service
<i>cos_val</i>	(Optional) Class of Service Type
cfi	(Optional) CFI Setting
<i>cfi_vld</i>	(Optional) CFI Setting Valid
vntag_vld	(Optional) VNTAG Information Valid
<i>vntag_vld</i>	(Optional) VNTAG Information Valid
vntag_svif	(Optional) VNTAG Source vif
<i>vntag_svif</i>	(Optional) VNTAG Source vif
vntag_dvif	(Optional) VNTAG Destination vif
<i>vntag_dvif</i>	(Optional) VNTAG Destination vif
vntag_looped	(Optional) VNTAG Header Looped Valid
<i>vntag_loop</i>	(Optional) VNTAG Header Looped Valid
vntag_pointer	(Optional) VNTAG Header Pointer Valid

<i>vntag_p</i>	(Optional) VNTAG Header Pointer Valid
<i>src_mac</i>	(Optional) Source MAC Address
<i>smac</i>	(Optional) Source MAC Address Value
<i>dst_mac</i>	(Optional) Destination MAC Address
<i>dmac</i>	(Optional) Destination MAC Address Value

Command Mode

- /exec/elamns/se14

set inner l2 hg2

```
set inner l2 hg2 [ { hg2_vid <hg2_vlan> | hg2_ppd_type <hg2_ppd_type> | hg2_mirror <hg2_mirror> |
hg2_opcode <hg2_opcode> | hg2_dstpid <hg2_dpid> | hg2_dstmod <hg2_dmod> | hg2_srcpid <hg2_spid>
| hg2_srcmod <hg2_smod> | hg2_l3vld <hg2_l3_vld> | hg2_tc <hg2_tc> | hg2_dp <hg2_dp> | hg2_mcast
<hg2_mcast_vld> | hg2-vld <hg2_vld> | hg2-cos <hg2_cos> } ] +
```

Syntax Description

set	Setup Trigger
inner	Mask and Match By Inner Packet Fields
l2	All Layer 2 Fields
hg2	High Gig2 Fields
hg2_vid	(Optional) High Gig2 VLAN Tag
<i>hg2_vlan</i>	(Optional) High Gig2 VLAN Tag Information
hg2_ppd_type	(Optional) High Gig2 Packet Processing Descriptor
<i>hg2_ppd_type</i>	(Optional) High Gig2 Packet Processing Descriptor
hg2_mirror	(Optional) High Gig2 Packet Mirror Information
<i>hg2_mirror</i>	(Optional) High Gig2 Packet Mirror Information
hg2_opcode	(Optional) High Gig2 Packet Type
<i>hg2_opcode</i>	(Optional) High Gig2 Packet Type
hg2_dstpid	(Optional) High Gig2 Destination Port ID
<i>hg2_dpid</i>	(Optional) High Gig2 Destination Port ID
hg2_dstmod	(Optional) High Gig2 Destination Module ID
<i>hg2_dmod</i>	(Optional) High Gig2 Destination Module ID
hg2_srcpid	(Optional) High Gig2 Source Port ID
<i>hg2_spid</i>	(Optional) High Gig2 Source Port ID
hg2_srcmod	(Optional) High Gig2 Souce Module ID
<i>hg2_smod</i>	(Optional) High Gig2 Souce Module ID
hg2_l3vld	(Optional) High Gig2 Packet L3 Switched
<i>hg2_l3_vld</i>	(Optional) High Gig2 Packet L3 Switched
hg2_tc	(Optional) High Gig2 Packet Traffic Class

<i>hg2_tc</i>	(Optional) High Gig2 Packet Traffic Class
<i>hg2_dp</i>	(Optional) High Gig2 Drop Precedence
<i>hg2_dp</i>	(Optional) High Gig2 Drop Precedence
<i>hg2_mcast</i>	(Optional) High Gig2 MultiCast Forwarding Information
<i>hg2_mcast_vld</i>	(Optional) High Gig2 Multicast Forwarding Information
<i>hg2-vld</i>	(Optional) High Gig2 Valid Information
<i>hg2_vld</i>	(Optional) High Gig2 Valid Information
<i>hg2-cos</i>	(Optional) High Gig2 CoS Information
<i>hg2_cos</i>	(Optional) High Gig2 CoS Information

Command Mode

- /exec/elamns/sel4

set inner l4

```
set inner l4 [ { src-port <sport> | dst-port <dport> | packet-len <pkt_len> | checksum <csum> | flags <flag_val>
} ] +
```

Syntax Description

set	Setup Trigger
inner	Mask and Match By Inner Packet Fields
l4	L4 Fields
src-port	(Optional) Source Port Information
<i>sport</i>	(Optional) Source Port
dst-port	(Optional) Destination Port Information
<i>dport</i>	(Optional) Destination Port
packet-len	(Optional) Packet Length
<i>pkt_len</i>	(Optional) Packet Length
checksum	(Optional) Checksum
<i>csum</i>	(Optional) Checksum
flags	(Optional) L4 Flags
<i>flag_val</i>	(Optional) L4 Flags

Command Mode

- /exec/elanms/setl4

set interface

[no] set interface <iface>

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set values in destination routing protocol
interface	Output interface
<i>iface</i>	Interface name

Command Mode

- /exec/configure/route-map

set interval find-new-host

[no] set interval find-new-host <val>

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set vmtracker options
interval	Set the polling interval
find-new-host	Set interval for the new host searching timer
<i>val</i>	The host search interval value in seconds (0 to disable)

Command Mode

- /exec/configure/vmt-conn

set interval pending-task-polling

[no] set interval pending-task-polling <val>

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set vmtracker options
interval	Set the polling interval
pending-task-polling	Define pending-task-polling interval
<i>val</i>	The pending task polling interval value in seconds

Command Mode

- /exec/configure/vmt-conn

set interval sync-full-info

[no] set interval sync-full-info <val>

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set vmtracker options
interval	Set the polling interval
sync-full-info	Set interval for syncing complete info from host
<i>val</i>	The sync info interval value in seconds (0 to disable)

Command Mode

- /exec/configure/vmt-conn

set ip address prefix-list

[no] set ip address prefix-list <name>

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set values in destination routing protocol
ip	Configure IP features
address	Specify IP address
prefix-list	IP prefix-list
<i>name</i>	Name of prefix list

Command Mode

- /exec/configure/route-map

set ip default next-hop verify-availability

[no] set ip default next-hop verify-availability { <addr> [track <object_id>] } [load-share]

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set values in destination routing protocol
ip	Configure IP features
default	Set default next-hop
next-hop	Next hop address
verify-availability	Verify the reachability of the tracked object
<i>addr</i>	IP address of next hop
track	(Optional) The tracking method is track
<i>object_id</i>	(Optional) Object number that the tracking subsystem is tracking
load-share	(Optional) Enables load sharing

Command Mode

- /exec/configure/route-map

set ip next-hop

```
[no] set ip next-hop [ recursive ] { load-share | <addr1> + [ load-share ] }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set values in destination routing protocol
ip	Configure IP features
recursive	(Optional) Use recursive lookup
next-hop	Next hop address
<i>addr1</i>	IP address of next hop
load-share	Enables load sharing

Command Mode

- /exec/configure/route-map

set ip next-hop peer-address

[no] set ip next-hop peer-address

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set values in destination routing protocol
ip	Configure IP features
next-hop	Next hop address
peer-address	Use peer address (for BGP only)

Command Mode

- /exec/configure/route-map

set ip next-hop unchanged

[no] set ip next-hop unchanged

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set values in destination routing protocol
ip	Configure IP features
next-hop	Next hop address
unchanged	Use unchanged address (for eBGP session only)

Command Mode

- /exec/configure/route-map

set ip next-hop verify-availability

[no] set ip next-hop verify-availability { <addr> [track <object_id>] } [load-share]

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set values in destination routing protocol
ip	Configure IP features
next-hop	Next hop address
verify-availability	Verify the reachability of the tracked object
<i>addr</i>	IP address of next hop
track	(Optional) The tracking method is track
<i>object_id</i>	(Optional) Object number that the tracking subsystem is tracking
load-share	(Optional) Enables load sharing

Command Mode

- /exec/configure/route-map

set ip precedence

```
{ set ip precedence { <value> | <name> } } | { no set ip precedence [ <value> | <name> ] }
```

Syntax Description

no	Negate a command or set its defaults
set	Set values in destination routing protocol
ip	Configure IP features
precedence	Set precedence field
<i>value</i>	Precedence value
<i>name</i>	Precedence value

Command Mode

- /exec/configure/route-map

set ipv6 address prefix-list

[no] set ipv6 address prefix-list <name>

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set values in destination routing protocol
ipv6	Configure IPv6 features
address	Specify IP address
prefix-list	IPv6 prefix-list
<i>name</i>	Name of prefix list

Command Mode

- /exec/configure/route-map

set ipv6 default next-hop verify-availability

[no] set ipv6 default next-hop verify-availability { <addr> [track <object_id>] } [load-share]

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set values in destination routing protocol
ipv6	Configure IPv6 features
next-hop	Next hop address
default	Set default next-hop
verify-availability	Verify the reachability of the tracked object
track	(Optional) The tracking method is track
<i>object_id</i>	(Optional) Object number that the tracking subsystem is tracking
load-share	(Optional) Enables load sharing

Command Mode

- /exec/configure/route-map

set ipv6 next-hop

[no] set ipv6 next-hop { load-share | <addr> + [load-share] }

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set values in destination routing protocol
ipv6	Configure IPv6 features
next-hop	Next hop ipv6 address
load-share	Enables load sharing
<i>addr</i>	

Command Mode

- /exec/configure/route-map

set ipv6 next-hop peer-address

[no] set ipv6 next-hop peer-address

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set values in destination routing protocol
ipv6	Configure IPv6 features
next-hop	Next hop address
peer-address	Use peer address (for BGP only)

Command Mode

- /exec/configure/route-map

set ipv6 next-hop unchanged

[no] set ipv6 next-hop unchanged

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set values in destination routing protocol
ipv6	Configure IPv6 features
next-hop	Next hop address
unchanged	Use unchanged address (for eBGP session only)

Command Mode

- /exec/configure/route-map

set ipv6 next-hop verify-availability

[no] set ipv6 next-hop verify-availability { <addr> [track <object_id>] } [load-share]

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set values in destination routing protocol
ipv6	Configure IPv6 features
next-hop	Next hop address
verify-availability	Verify the reachability of the tracked object
track	(Optional) The tracking method is track
<i>object_id</i>	(Optional) Object number that the tracking subsystem is tracking
load-share	(Optional) Enables load sharing

Command Mode

- /exec/configure/route-map

set ipv6 precedence

```
{ set ipv6 precedence { <value> | <name> } } | { no set ipv6 precedence [ <value> | <name> ] }
```

Syntax Description

no	Negate a command or set its defaults
set	Set values in destination routing protocol
ipv6	Configure IPv6 features
precedence	Set precedence field
<i>value</i>	Precedence value
<i>name</i>	Precedence value

Command Mode

- /exec/configure/route-map

set level

```
{ set level { level-1 | level-1-2 | level-2 } } | { no set level [ level-1 | level-1-2 | level-2 ] }
```

Syntax Description

no	Negate a command or set its defaults
set	Set values in destination routing protocol
level	Where to import route
level-1	Import into a level-1 area
level-1-2	Import into level-1 and level-2
level-2	Import into level-2 sub-domain

Command Mode

- /exec/configure/route-map

set local-preference

{ set local-preference <pref> | no set local-preference [<pref>] }

Syntax Description

no	Negate a command or set its defaults
set	Set values in destination routing protocol
local-preference	BGP local preference path attribute
<i>pref</i>	Preference value

Command Mode

- /exec/configure/route-map

set metric-type

```
{ set metric-type { external | internal | type-1 | type-2 } } | { no set metric-type [ external | internal | type-1 | type-2 ] }
```

Syntax Description

no	Negate a command or set its defaults
set	Set values in destination routing protocol
metric-type	Type of metric for destination routing protocol
external	IS-IS external metric
internal	Use IGP metric as the MED for BGP
type-1	OSPF external type 1 metric
type-2	OSPF external type 2 metric

Command Mode

- /exec/configure/route-map

set metric

```
{ set metric <metric0> [ <metric1> <metric2> <metric3> <metric4> ] } | { no set metric [ <metric0> [ <metric1> <metric2> <metric3> <metric4> ] ] }
```

Syntax Description

no	Negate a command or set its defaults
set	Set values in destination routing protocol
metric	Set metric for destination routing protocol
<i>metric0</i>	[+/-] Metric value or Bandwidth in Kbits per second
<i>metric1</i>	(Optional) IGRP delay metric
<i>metric2</i>	(Optional) IGRP reliability metric where 255 is 100% reliable
<i>metric3</i>	(Optional) IGRP Effective bandwidth metric (Loading) 255 is 100%
<i>metric4</i>	(Optional) IGRP MTU of the path

Command Mode

- /exec/configure/route-map

set mpls-exp-topmost cos table exp-cos-map

[no] set mpls-exp-topmost cos table exp-cos-map

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set attribute
mpls-exp-topmost	MPLS experimental topmost
cos	IEEE 802.1Q class of service
table	Table map
exp-cos-map	Exp to cos table map name (reserved)

Command Mode

- /exec/configure/policy-map/type/queuing/class

set nssa-only

[no] set nssa-only

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set values in destination routing protocol
nssa-only	OSPF NSSA Areas

Command Mode

- /exec/configure/route-map

set origin

```
{ set origin { egp | igp | incomplete } } | { no set origin [ { egp | igp | incomplete } ] }
```

Syntax Description

no	Negate a command or set its defaults
set	Set values in destination routing protocol
origin	BGP origin code
egp	remote EGP
igp	local IGP
incomplete	unknown heritage

Command Mode

- /exec/configure/route-map

set origin egp

{ set origin egp <as> } | { no set origin egp <as> }

Syntax Description

no	Negate a command or set its defaults
set	Set values in destination routing protocol
origin	BGP origin code
egp	remote EGP
as	AS number

Command Mode

- /exec/configure/route-map

set outer ipv4

```
set outer ipv4 [ { l3-type <l3_type> | pyld-len <pyld_len> | v6-vld <v6_vld> | version <ver> | header-len <hlen> | dscp <dscp_val> | ecn <ecn_val> | packet-len <pkt_len> | more- frags <mf> | fragment-off <fragoff> | ttl <ttl_val> | next-protocol <nproto> | checksum <csum> | src_ip <sip> | dst_ip <dip> } ] +
```

Syntax Description

set	Setup Trigger
outer	Mask and Match By Outer Packet Fields
ipv4	IPv4 Fields
l3-type	(Optional) L3 Packet Type
<i>l3_type</i>	(Optional) L3 Packet Type
pyld-len	(Optional) Payload Length
<i>pyld_len</i>	(Optional) Payload Length
v6-vld	(Optional) IPv6 Valid Information
<i>v6_vld</i>	(Optional) IPv6 Valid Information
version	(Optional) Version
<i>ver</i>	(Optional) Version
header-len	(Optional) Header Length
<i>hlen</i>	(Optional) Header Length
dscp	(Optional) Diff. Serv. Code Point
<i>dscp_val</i>	(Optional) Diff. Serv. Code Point
ecn	(Optional) Explicit Congestion Ntn
<i>ecn_val</i>	(Optional) Explicit Congestion Ntn
packet-len	(Optional) Packet Total Length
<i>pkt_len</i>	(Optional) Packet Total Length
more- frags	(Optional) More Fragments Available
<i>mf</i>	(Optional) More Fragments Available
fragment-off	(Optional) Fragments Offset
<i>fragoff</i>	(Optional) Fragments Offset
ttl	(Optional) Time to Live

<i>ttl_val</i>	(Optional) Time to Live
next-protocol	(Optional) Next(L4) Protocol
<i>nproto</i>	(Optional) Next(L4) Protocol
checksum	(Optional) Checksum
<i>csum</i>	(Optional) Checksum
src_ip	(Optional) Source IP Address
<i>sip</i>	(Optional) Source IP Address
dst_ip	(Optional) Destination IP Address
<i>dip</i>	(Optional) Destination IP Address

Command Mode

- /exec/elanms/sel3

set outer l2

```
set outer l2 [ { snap_vld <snap_vld> | cntag_vld <cntag_vld> | qtag_vld <qtag_vld> | vlan <vlan_id> | cos
<cos_val> | cfi <cfi_vld> | vntag_vld <vntag_vld> | vntag_svif <vntag_svif> | vntag_dvif <vntag_dvif> |
vntag_looped <vntag_loop> | vntag_pointer <vntag_p> | src_mac <smac> | dst_mac <dmac> } ] +
```

Syntax Description

set	Setup Trigger
outer	Mask and Match By Outer Packet Fields
l2	All Layer 2 Fields
snap_vld	(Optional) SNAP Header Information Valid
<i>snap_vld</i>	(Optional) SNAP Header Information Valid
cntag_vld	(Optional) CNTag Information Valid
<i>cntag_vld</i>	(Optional) CNTag Information Valid
qtag_vld	(Optional) VLAN Tag Information Valid
<i>qtag_vld</i>	(Optional) VLAN Tag Information Valid
vlan	(Optional) VLAN Id (Present only in case of FEX)
<i>vlan_id</i>	(Optional) VLAN Id
cos	(Optional) Class of Service
<i>cos_val</i>	(Optional) Class of Service Type
cfi	(Optional) CFI Setting
<i>cfi_vld</i>	(Optional) CFI Setting Valid
vntag_vld	(Optional) VNTAG Information Valid
<i>vntag_vld</i>	(Optional) VNTAG Information Valid
vntag_svif	(Optional) VNTAG Source vif
<i>vntag_svif</i>	(Optional) VNTAG Source vif
vntag_dvif	(Optional) VNTAG Destination vif
<i>vntag_dvif</i>	(Optional) VNTAG Destination vif
vntag_looped	(Optional) VNTAG Header Looped Valid
<i>vntag_loop</i>	(Optional) VNTAG Header Looped Valid
vntag_pointer	(Optional) VNTAG Header Pointer Valid

<i>vntag_p</i>	(Optional) VNTAG Header Pointer Valid
<i>src_mac</i>	(Optional) Source MAC Address
<i>smac</i>	(Optional) Source MAC Address Value
<i>dst_mac</i>	(Optional) Destination MAC Address
<i>dmac</i>	(Optional) Destination MAC Address Value

Command Mode

- /exec/elanms/sel3

set outer l2 hg2

```
set outer l2 hg2 [ { hg2_vid <hg2_vlan> | hg2_ppd_type <hg2_ppd_type> | hg2_mirror <hg2_mirror> |
hg2_opcode <hg2_opcode> | hg2_dstpid <hg2_dpid> | hg2_dstmod <hg2_dmod> | hg2_srcpid <hg2_spid>
| hg2_srcmod <hg2_smod> | hg2_l3vld <hg2_l3_vld> | hg2_tc <hg2_tc> | hg2_dp <hg2_dp> | hg2_mcast
<hg2_mcast_vld> | hg2_vld <hg2_vld> | hg2-cos <hg2_cos> } ] +
```

Syntax Description

set	Setup Trigger
outer	Mask and Match By Outer Packet Fields
l2	All Layer 2 Fields
hg2	High Gig2 Fields
hg2_vid	(Optional) High Gig2 VLAN Tag
<i>hg2_vlan</i>	(Optional) High Gig2 VLAN Tag Information
hg2_ppd_type	(Optional) High Gig2 Packet Processing Descriptor
<i>hg2_ppd_type</i>	(Optional) High Gig2 Packet Processing Descriptor
hg2_mirror	(Optional) High Gig2 Packet Mirror Information
<i>hg2_mirror</i>	(Optional) High Gig2 Packet Mirror Information
hg2_opcode	(Optional) High Gig2 Packet Type
<i>hg2_opcode</i>	(Optional) High Gig2 Packet Type
hg2_dstpid	(Optional) High Gig2 Destination Port ID
<i>hg2_dpid</i>	(Optional) High Gig2 Destination Port ID
hg2_dstmod	(Optional) High Gig2 Destination Module ID
<i>hg2_dmod</i>	(Optional) High Gig2 Destination Module ID
hg2_srcpid	(Optional) High Gig2 Source Port ID
<i>hg2_spid</i>	(Optional) High Gig2 Source Port ID
hg2_srcmod	(Optional) High Gig2 Souce Module ID
<i>hg2_smod</i>	(Optional) High Gig2 Souce Module ID
hg2_l3vld	(Optional) High Gig2 Packet L3 Switched
<i>hg2_l3_vld</i>	(Optional) High Gig2 Packet L3 Switched
hg2_tc	(Optional) High Gig2 Packet Traffic Class

<i>hg2_tc</i>	(Optional) High Gig2 Packet Traffic Class
<i>hg2_dp</i>	(Optional) High Gig2 Drop Precedence
<i>hg2_dp</i>	(Optional) High Gig2 Drop Precedence
<i>hg2_mcast</i>	(Optional) High Gig2 MultiCast Forwarding Information
<i>hg2_mcast_vld</i>	(Optional) High Gig2 Multicast Forwarding Information
<i>hg2-vld</i>	(Optional) High Gig2 Valid Information
<i>hg2_vld</i>	(Optional) High Gig2 Valid Information
<i>hg2-cos</i>	(Optional) High Gig2 CoS Information
<i>hg2_cos</i>	(Optional) High Gig2 CoS Information

Command Mode

- /exec/elamns/sel3

set outer l4

```
set outer l4 [ { src-port <sport> | dst-port <dport> | packet-len <pkt_len> | checksum <csum> | flags <flag_val>
} ] +
```

Syntax Description

set	Setup Trigger
outer	Mask and Match By Outer Packet Fields
l4	L4 Fields
src-port	(Optional) Source Port Information
<i>sport</i>	(Optional) Source Port
dst-port	(Optional) Destination Port Information
<i>dport</i>	(Optional) Destination Port
packet-len	(Optional) Packet Length
<i>pkt_len</i>	(Optional) Packet Length
checksum	(Optional) Checksum
<i>csum</i>	(Optional) Checksum
flags	(Optional) L4 Flags
<i>flag_val</i>	(Optional) L4 Flags

Command Mode

- /exec/elanms/sel3

set path-selection all advertise

[no] set path-selection all advertise

Syntax Description

no	(Optional) Negate a command or set its defaults
set	Set values in destination routing protocol
path-selection	Path selection criteria for BGP
all	Specifies all BGP Paths
advertise	Advertise add paths to its peers if receive capability enabled

Command Mode

- /exec/configure/route-map

set pktmgr pds yield-threshold

set pktmgr pds yield-threshold [<thr>]

Syntax Description

set	Set values
pktmgr	Set values in pktmgr
pds	Set value for pktmgr pds operation
yield-threshold	Set Value of yield-threshold
<i>thr</i>	(Optional) threshold

Command Mode

- /exec

set pktrw

```
set pktrw { mcast <mcast> | sup_redir <sured> | bcm_proxy <bcm_proxy> | excep_case <excep> | transit
<trans> | vpc_df <vpc_df> | src_tep_idx <src_tep> | lat_update <lat_update> | lat_idx <lat_idx> | src_class
<sclass> | ol_fb_met <ol_fb_met> | ol_fb_vpath <ol_fb_vpath> | ol_dre <ol_dre> | ol_vpath <ol_vpath> |
ol_dp <ol_dp> | ol_sp <ol_sp> | ol_e <ol_e> | ol_dl <ol_dl> | ol_lb <ol_lb> | ol_mark <ol_mark> | ol_udp_sp
<ol_udp_sp> | ol_ftag <ol_ftag> | ol_segid <ol_segid> | ol_ttl <ol_ttl> | ol_ecn <ol_ecn> | ol_dscp <ol_dscp>
| ol_de <ol_de> | ol_cos <ol_cos> | ol_mac <ol_mac> | ol_encap_idx <ol_encap> | ol_vpc <ol_vpc> | ol_idx
<ol_idx> | ttl <ttl> | dscp <dscp> | vlan1 <vlan1> | ecn_coi <ecn_coi> | ecn_cio <ecn_cio> | ttl_coi <ttl_coi>
| ttl_cio <ttl_cio> | adj_idx <adj_idx> | vntag_svif <vntag_svif> | de <de> | cos <cos> | vlan0 <vlan0> | adj_vld
<adj_vld> | uc_routed <uc_routed> | loopback <lpb> | ecn <ecn> | hg2_vid <hg2_vlan> | hg2_ppd <hg2_ppd>
| hg2_tc_sup_copy <hg2_tcscopy> | hg2_tc <hg2_tc> | hg2_lbid <hg2_lbid> | hg2_opc <hg2_opc> | hg2_dstpid
<hg2_dpidd> | hg2_srcpid <hg2_spidd> | hg2_dstmod <hg2_dmod> | hg2_srcmod <hg2_smod> | op_inner
<op_inner> | op_qtag <op_qtag> | op_vntag <op_vntag> | op_outer <op_outer> | pkt_type <pkt_type> | drop
<drp> | pkt_tstamp <pkt_tstamp> | tstamp <tstamp> | cap_tstamp <cap_tstamp> | len_info <len_info> | len_type
<len_type> | pktid <pktid> | srcid <srcid> | pktfmt1 <pktfmt1> | pktfmt0 <pktfmt0> | hg2_cos <hg2_cos> }
+
```

Syntax Description

set	Setup Trigger
pktrw	All packet re-write fields
mcast	mcast
<i>mcast</i>	Mcast
sup_redir	Sup Redirect
<i>sured</i>	Sup Redirect
bcm_proxy	Broadcom Proxy
<i>bcm_proxy</i>	Broadcom Proxy
excep_case	Excep_case
<i>excep</i>	Excep_case
transit	Transit
<i>trans</i>	Transit
vpc_df	VPC_df
<i>vpc_df</i>	VPC_df
src_tep_idx	Src TEP Index
<i>src_tep</i>	Src TEP Index
lat_update	Lat Update

<i>lat_update</i>	Lat Update
lat_idx	Lat Index
<i>lat_idx</i>	Lat Index
src_class	Source Class
<i>sclass</i>	Source Class
ol_fb_met	Ol_fb_metric
<i>ol_fb_met</i>	Ol_fb_metric
ol_fb_vpath	Ol_fb_vpath
<i>ol_fb_vpath</i>	Ol_fb_vpath
ol_dre	Ol_dre
<i>ol_dre</i>	Ol_dre
ol_vpath	Ol_vpath
<i>ol_vpath</i>	Ol_vpath
ol_dp	Ol_dp
<i>ol_dp</i>	Ol_dp
ol_sp	Ol_sp
<i>ol_sp</i>	Ol_sp
ol_e	Ol_e
<i>ol_e</i>	Ol_e
ol_dl	Ol_dl
<i>ol_dl</i>	Ol_dl
ol_lb	Ol_lb
<i>ol_lb</i>	Ol_lb
ol_mark	Ol_mark
<i>ol_mark</i>	Ol_mark
ol_udp_sp	Ol_UDP_sp
<i>ol_udp_sp</i>	Ol UDP Source Port
ol_ftag	Ol_ftag
<i>ol_ftag</i>	Ol_ftag

ol_segid	Ol_segid
<i>ol_segid</i>	Ol_segid
ol_ttl	Ol_TTL
<i>ol_ttl</i>	Ol_TTL
ol_ecn	Ol_ecn
<i>ol_ecn</i>	Ol_ecn
ol_dscp	Ol_dscp
<i>ol_dscp</i>	Ol_dscp
ol_de	Ol_de
<i>ol_de</i>	Ol_de
ol_cos	Ol_cos
<i>ol_cos</i>	Ol_cos
ol_mac	Ol_mac
<i>ol_mac</i>	Ol_mac
ol_encap_idx	Ol_encap_idx
<i>ol_encap</i>	Ol_encap_idx
ol_vpc	Ol_VPC
<i>ol_vpc</i>	Ol_VPC
ol_idx	Ol_idx
<i>ol_idx</i>	Ol_idx
ttl	TTL
<i>ttl</i>	TTL
dscp	DSCP
<i>dscp</i>	DSCP
vlan1	Vlan1
<i>vlan1</i>	Vlan1
ecn_coi	ecn_coi
<i>ecn_coi</i>	ecn_coi
ecn_cio	ecn_cio

<i>ecn_cio</i>	ecn_cio
ttl_coi	ttl_coi
<i>ttn_coi</i>	ttn_coi
ttn_cio	ttn_cio
<i>ttn_cio</i>	ttn_cio
adj_idx	adj_idx
<i>adj_idx</i>	adj_idx
vntag_svif	vntag_svif
<i>vntag_svif</i>	vntag_svif
de	de
<i>de</i>	de
cos	cos
<i>cos</i>	cos
vlan0	vlan0
<i>vlan0</i>	vlan0
adj_vld	adj_vld
<i>adj_vld</i>	adj_vld
uc_routed	uc_routed
<i>uc_routed</i>	uc_routed
loopback	loopback
<i>lpb</i>	loopback
ecn	ecn
<i>ecn</i>	ecn
hg2_vid	High Gig2 VLAN Tag
<i>hg2_vlan</i>	High Gig2 VLAN Tag Information
hg2_cos	High Gig2 CoS Information
<i>hg2_cos</i>	High Gig2 CoS Information
hg2_ppd	High Gig2 Packet Processing Descriptor
<i>hg2_ppd</i>	High Gig2 Packet Processing Descriptor

hg2_tc_sup_copy	High Gig2 Traffic Class SUP Copy
<i>hg2_tcscopy</i>	High Gig2 Traffic Class SUP Copy
hg2_tc	High Gig2 Packet Traffic Class
<i>hg2_tc</i>	High Gig2 Packet Traffic Class
hg2_lbid	High Gig2 Packet Ibid
<i>hg2_lbid</i>	High Gig2 Packet Ibid
hg2_opc	High Gig2 Packet Type
<i>hg2_opc</i>	High Gig2 Packet Type
hg2_dstpid	High Gig2 Destination Port ID
<i>hg2_dpid</i>	High Gig2 Destination Port ID
hg2_dstmod	High Gig2 Destination Module ID
<i>hg2_dmod</i>	High Gig2 Destination Module ID
hg2_srcpid	High Gig2 Source Port ID
<i>hg2_spid</i>	High Gig2 Source Port ID
hg2_srcmod	High Gig2 Souce Module ID
<i>hg2_smod</i>	High Gig2 Souce Module ID
op_inner	Op_inner
<i>op_inner</i>	Op_inner
op_outer	Op_outer
<i>op_outer</i>	Op_outer
op_qtag	Op_qtag
<i>op_qtag</i>	Op_qtag
op_vntag	Op_vntag
<i>op_vntag</i>	Op_vntag
pkt_type	Pkt_type
<i>pkt_type</i>	Pkt_type
drop	Drop
<i>drp</i>	Drop
pkt_tstamp	Packet timestamp

<i>pkt_tstamp</i>	Packet timestamp
tstamp	Timestamp
<i>tstamp</i>	Timestamp
cap_tstamp	Capture Timestamp
<i>cap_tstamp</i>	Capture Timestamp
len_info	Len_info
<i>len_info</i>	Len_info
len_type	Len_type
<i>len_type</i>	Len_type
pktid	Pkt_id
<i>pktid</i>	Pkt_id
srcid	Src_id
<i>srcid</i>	Src_id
pktfmt1	Pktfmt1
<i>pktfmt1</i>	Pktfmt1
pktfmt0	Pktfmt0
<i>pktfmt0</i>	Pktfmt0

Command Mode

- /exec/elamns/outsel0

set sideband

```
set sideband { span_vec <span_vec> | bounce <bnc> | mclast <mclast> | mcastcurptr <mccurptr> | mcastcurptr_v
<mccurptr_v> | srcport <sport> | vlan <vlan> | segwgt <segwgt> | segid <segid> | seglocal <seglcl> | gbw_color
<gbw_color> | gbw_tag <gbw_tagg> | fwddrp <fwddrp> | l2fld <l2fld> | nodrp <nodrp> | ovrlyidx <ovrlyidx>
| ecncap <ecncap> | cpu <cpu> | store_fwd <stfwd> | mcast <mcast> | oclass <ocls> | iclass <icls> | odest_v
<odest_v> | odest <odest> | ovec <ovec> | span_trans <span_trans> | lbtype <lbtype> | lbena <lbena> | tdmid
<tdmid> | pktid <pktid> | srcid <srcid> | eoferror <eoferr> | eofbytes <eofby> | eof <eof> | sof <sof> } +
```

Syntax Description

set	Setup Trigger
sideband	All sideband fields
span_vec	SPAN vector
<i>span_vec</i>	SPAN vector
bounce	Bounce
<i>bnc</i>	Bounce
mclast	Mclast
<i>mclast</i>	Mclast
mcastcurptr	Mcast cur ptr
<i>mccurptr</i>	Mcast cur ptr
mcastcurptr_v	Mcast cur ptr v
<i>mccurptr_v</i>	Mcast cur ptr v
srcport	Source Port
<i>sport</i>	Source Port
vlan	Vlan
<i>vlan</i>	Vlan
segwgt	Segwgt
<i>segwgt</i>	Segwgt
segid	Segid
<i>segid</i>	Segid
seglocal	Seglocal
<i>seglcl</i>	Seglocal

gbw_color	GBW color
<i>gbw_color</i>	GBW color
gbw_tag	GBW tagged
<i>gbw_tagg</i>	GBW tagged
fwddrp	Forward drop
<i>fwddrp</i>	Forward drop
l2fld	L2 Flood
<i>l2fld</i>	L2 Flood
nodrp	No drop
<i>nodrp</i>	No drop
ovrlyidx	Overlay index
<i>ovrlyidx</i>	Overlay index
ecncap	ECN Capable
<i>ecncap</i>	ECN Capable
cpu	CPU
<i>cpu</i>	CPU
store_fwd	Store_fwd
<i>stfwd</i>	Store_fwd
mcast	Multicast
<i>mcast</i>	Multicast
oclass	Output class
<i>ocls</i>	Output class
iclass	Input class
<i>icls</i>	Input class
odest_v	Odest_v
<i>odest_v</i>	Odest_v
odest	Odest
<i>odest</i>	Odest
ovec	Ovector

<i>ovec</i>	Ovector
<i>span_trans</i>	SPAN transit
<i>span_trans</i>	SPAN transit
<i>lbtype</i>	Lbtype
<i>lbtype</i>	Lbtype
<i>lbena</i>	Lbenable
<i>lbena</i>	Lbenable
<i>tdmid</i>	Tdmid
<i>tdmid</i>	Tdmid
<i>pktid</i>	Pkt_id
<i>pktid</i>	Pkt_id
<i>srcid</i>	Src_id
<i>srcid</i>	Src_id
<i>eoferror</i>	EOF error
<i>eoferr</i>	EOF erro
<i>eofbytes</i>	EOF bytes
<i>eofby</i>	EOF bytes
<i>eof</i>	EOF
<i>eof</i>	EOF
<i>sof</i>	SOF
<i>sof</i>	SOF

Command Mode

- /exec/eamns/outsel5

set tag

```
{ { set tag <value> } | { no set tag [ <value> ] } }
```

Syntax Description

no	Negate a command or set its defaults
set	Set values in destination routing protocol
tag	Tag value for destination routing protocol
<i>value</i>	Tag value

Command Mode

- /exec/configure/route-map

set weight

```
{ set weight <count> | no set weight [ <count> ] }
```

Syntax Description

no	Negate a command or set its defaults
set	Set values in destination routing protocol
weight	BGP weight for routing table
<i>count</i>	Weight value

Command Mode

- /exec/configure/route-map

setup

setup

Syntax Description

setup	Run the basic SETUP command facility
-------	--------------------------------------

Command Mode

- /exec

sflow

```
sflow { [ sampling-rate <rate> ] [ max-sampled-size <pkt-size> ] [ counter-poll-interval <interval> ] [ max-datagram-size <dgram-size> ] [ collector-ip <dst-ip> vrf { <vrf-name> | <vrf-known-name> } [ source <src-ip> ] ] [ collector-port <dst-port> ] [ agent-ip <agent-ip> ] }
```

Syntax Description

sflow	change sFlow global settings
sampling-rate	(Optional) sFlow Sampling Rate
<i>rate</i>	(Optional) sFlow Sampling rate
max-sampled-size	(Optional) sFlow Sampled Size
<i>pkt-size</i>	(Optional) sFlow Sampled Size
counter-poll-interval	(Optional) sFlow Counter Poll Interval
<i>interval</i>	(Optional) sFlow Counter Poll Interval
max-datagram-size	(Optional) sFlow Datagram Size
<i>dgram-size</i>	(Optional) sFlow Datagram Size
collector-ip	(Optional) sFlow Collector IP address
<i>dst-ip</i>	(Optional) sFlow Collector IP address
vrf	(Optional) Display per-VRF information
<i>vrf-name</i>	(Optional) VRF name
<i>vrf-known-name</i>	(Optional) Known VRF name
source	(Optional) Source IP address to send to sFlow Collector
<i>src-ip</i>	(Optional) Source IP address to send to sFlow Collector
collector-port	(Optional) sFlow Collector UDP port
<i>dst-port</i>	(Optional) sFlow Collector UDP port
agent-ip	(Optional) sFlow Agent IP address
<i>agent-ip</i>	(Optional) sFlow Agent IP address

Command Mode

- /exec/configure

sflow

[no] sflow { sampling-rate | max-sampled-size | counter-poll-interval | max-datagram-size | collector-ip | collector-port | agent-ip }

Syntax Description

no	Negate a command or set its defaults
sflow	change sFlow global settings
sampling-rate	sFlow Sampling Rate
max-sampled-size	sFlow Sampled Size
counter-poll-interval	sFlow Counter Poll Interval
max-datagram-size	sFlow Datagram Size
collector-ip	sFlow Collector IP address
collector-port	sFlow Collector UDP port
agent-ip	sFlow Agent IP address

Command Mode

- /exec/configure

sflow cpu-usage limit

sflow cpu-usage limit <percent>

Syntax Description

sflow	change sFlow global settings
cpu-usage	sFlow cpu usage setting
limit	sFlow cpu usage limit
<i>percent</i>	sFlow cpu usage limit percentage

Command Mode

- /exec/configure

sflow data-source interface

sflow data-source interface { <ifnum> | <pcifnum> }

Syntax Description

sflow	change sFlow global settings
data-source	sFlow Data Source
interface	sFlow Data Source Interface
<i>ifnum</i>	sFlow Data Source Interface
<i>pcifnum</i>	sFlow Data Source Interface

Command Mode

- /exec/configure

sflow data-source interface

[no] sflow data-source interface { <ifnum> | <pcifnum> }

Syntax Description

no	Negate a command or set its defaults
sflow	change sFlow global settings
data-source	sFlow Data Source
interface	sFlow Data Source Interface
<i>ifnum</i>	sFlow Data Source Interface
<i>pcifnum</i>	sFlow Data Source Interface

Command Mode

- /exec/configure

sflow extended switch

[no] sflow extended switch

Syntax Description

no	(Optional) Negate a command or set its defaults
sflow	change sFlow global settings
extended	sFlow extended flow records
switch	sFlow extended switch flow

Command Mode

- /exec/configure

shape

```
[no] shape { { { [ average ] { <avg-rate> [ bps | kbps | mbps | gbps ] | percent <percentage> } } | { min { <min-rate> [ bps2 | kbps2 | mbps2 | gbps2 | pps2 ] | percent2 <percentage2> } max { <max-rate> [ bps3 | kbps3 | mbps3 | gbps3 | pps3 ] | percent3 <percentage3> } } } | { { kbps4 | pps4 } { <max-rate4> [ min2 <min-rate4> ] } } }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
shape	shape
average	(Optional) Configure average shape rate
min	Configure minimum shape rate
max	Configure maximum shape rate
bps	(Optional) Bits per second
kbps	(Optional) Kilo bits per second
mbps	(Optional) Mega bits per second
gbps	(Optional) Giga bits per second
bps2	(Optional) Bits per second
kbps2	(Optional) Kilo Bits per second
mbps2	(Optional) Mega Bits per second
gbps2	(Optional) Giga Bits per second
pps2	(Optional) Packets per second
bps3	(Optional) Bits per second
kbps3	(Optional) Kilo Bits per second
mbps3	(Optional) Mega Bits per second
gbps3	(Optional) Giga Bits per second
pps3	(Optional) Packets per second
percent	Specify rate as percentage of interface data-rate
percent2	Specify rate as percentage of interface data-rate
percent3	Specify rate as percentage of interface data-rate
<i>percentage</i>	Percentage

<i>percentage2</i>	Percentage
<i>percentage3</i>	Percentage
kbps4	Kilo Bits per second
pps4	Packets per second
min2	(Optional) Min guaranteed bandwidth

Command Mode

- /exec/configure/policy-map/type/queuing/class

shared-secret

```
[no] shared-secret { 10 <clear> | 7 <encrypted> | <secret> } [ user <user> password { 0 <clear> | 7 <encrypted> | <password> } ]
```

Syntax Description

no	(Optional) Negate a command or set its defaults
shared-secret	Shared-secret
<i>secret</i>	Enter shared-secret in clear text
10	password in clear text
<i>clear</i>	Password in clear text
7	Password that follows should be in encrypted text
<i>encrypted</i>	Encrypted password
user	(Optional) User Name
<i>user</i>	(Optional) Enter user name
password	(Optional) Password
<i>password</i>	(Optional) Enter password in clear text
0	(Optional) Password that follows should be in clear text
<i>clear</i>	(Optional) Password in clear text
7	(Optional) Password that follows should be in encrypted text
<i>encrypted</i>	(Optional) Encrypted password

Command Mode

- /exec/configure/fabric-db/server-radius

shutdown

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Shutdown MPLS Traffic Engineering

Command Mode

- /exec/configure/te

shutdown (expl-path)

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Disable current explicit-path

Command Mode

- /exec/configure/te/expl-path

shutdown (if-mgmt-ether)

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Enable/disable an interface

Command Mode

- /exec/configure/if-mgmt-ether

shutdown

[no] shutdown [force]

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Enable/disable an interface
force	(Optional) Enable/disable an interface

Command Mode

- /exec/configure/if-ethernet /
- exec/configure/if-ethernet-switch
- /exec/configure/if-ethernet-all
- /exec/configure/if-eth-base
- /exec/configure/if-port-channel
- /exec/configure/if-eth-port-channel
- /exec/configure/if-ethernet-all
- /exec/configure/if-ethernet-p2p
- /exec/configure/if-remote-ethernet-sub

shutdown force

[no] shutdown [force]

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Enable/disable an interface
force	(Optional) Enable/disable an interface

Command Mode

- /exec/configure/if-ether-sub
- /exec/configure/if-ether-sub-p2p
- /exec/configure/if-port-channel-sub

shutdown (if-nve)

[no] shutdown [force]

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Enable/disable an interface
force	(Optional) Enable/disable an interface

Command Mode

- /exec/configure/if-nve

shutdown (if-loopback)

[no] shutdown [force]

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Enable/disable an interface
force	(Optional) Enable/disable an interface

Command Mode

- /exec/configure/if-loopback

shutdown

[no] shutdown [force]

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Enable/disable an interface
force	(Optional) Enable/disable an interface

Command Mode

- /exec/configure/if-cpp
- /exec/configure/if-fv
- /exec/configure/if-fa
- /exec/configure/if-svc
- /exec/configure/if-fc-tunnel
- /exec/configure/if-sme
- /exec/configure/if-ioa
- /exec/configure/if-overlay
- /exec/configure/if-te

shutdown

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Enable/disable an interface

Command Mode

- /exec/configure/if-gig-ether
- /exec/configure/if-fc /exec/configure/if-bay
- /exec/configure/if-ext /exec/configure/if-vsan
- /exec/configure/if-iscsi
- /exec/configure/if-fcip
- /exec/configure/if-sme
- /exec/configure/if-ioa
- /exec/configure/if-vfc /
- exec/configure/if-vfc-port-channel

shutdown (router-bgp)

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Administratively shutdown BGP protocol

Command Mode

- /exec/configure/router-bgp

shutdown

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	shutdown the OSPF protocol instance

Command Mode

- /exec/configure/router-ospf3 /exec/configure/router-ospf3/vrf

shutdown (vrf)

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Shutdown current VRF

Command Mode

- /exec/configure/vrf

shutdown (router-bgp-neighbor-sess)

[no | default] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
shutdown	Administratively shutdown this neighbor

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor-sess

shutdown (router-eigrp-af-common)

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Shutdown this instance of EIGRP

Command Mode

- /exec/configure/router-eigrp/router-eigrp-vrf-common /exec/configure/router-eigrp/router-eigrp-af-common

shutdown (if-vlan-common)

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Enable/disable an interface

Command Mode

- /exec/configure/if-vlan-common

shutdown (vrf)

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Shutdown the OSPF protocol instance

Command Mode

- /exec/configure/router-ospf /exec/configure/router-ospf/vrf

shutdown (anycast)

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Change the admin status of the bundle

Command Mode

- /exec/configure/anycast

shutdown (router-rip-vrf)

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Shutdown this instance of RIP

Command Mode

- /exec/configure/router-rip /exec/configure/router-rip/router-rip-vrf

shutdown (if-any-tunnel)

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Shutdown tunnel interface(s)

Command Mode

- /exec/configure/if-any-tunnel

shutdown (ldp)

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Disable MPLS forwarding for IP

Command Mode

- /exec/configure/ldp

shutdown (itd-inout)

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	

Command Mode

- /exec/configure/itd /exec/configure/itd-inout

shutdown (vrrpv3)

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Shut down VRRPv3

Command Mode

- /exec/configure/vrrpv3

shutdown (vrrpv3)

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Shut down the group

Command Mode

- /exec/configure/if-eth-any/vrrpv3

shutdown (vrrs)

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Shut down the pathway

Command Mode

- /exec/configure/if-eth-any/vrrs

shutdown (cbts-member)

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Shutdown the CBTS member LSP

Command Mode

- /exec/configure/tunnel-te/cbts-member

shutdown (vrrp)

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Enable or disable a VR

Command Mode

- /exec/configure/if-eth-any/vrrp

shutdown (router-isis-vrf-common)

[no] shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Shutdown this IS-IS process

Command Mode

- /exec/configure/router-isis/router-isis-vrf-common

shutdown force

[no] shutdown force

Syntax Description

no	(Optional) Negate a command or set its defaults
shutdown	Enable/disable an interface
force	Enable/disable an interface

Command Mode

- /exec/configure/if-mgmt-ether

signalling advertise explicit-null

[no] signalling advertise explicit-null | signalling advertise explicit-null [<acl>]

Syntax Description

no	Negate a command or set its defaults
signalling	Traffic Engineering Signalling Parameters
advertise	Signalling advertisement parameters
explicit-null	Advertise explicit-null label in signalling messages
<i>acl</i>	(Optional) Access list

Command Mode

- /exec/configure/te

signalling client batch-time

[no] signalling client batch-time <msec>

Syntax Description

signalling	Configure RSVP Signalling information
client	Client information
batch-time	Time interval between batched messages to client
<i>msec</i>	Batch-time msec [use 0 to disable, else minimum timer value is 20 msec]

Command Mode

- /exec/configure/ip-rsvp

signalling hello graceful-restart

[no] signalling hello graceful-restart

Syntax Description

signalling	Configure RSVP Signalling information
hello	RSVP Hello configuration commands
graceful-restart	RSVP Graceful restart commands

Command Mode

- /exec/configure/ip-rsvp

signalling hello graceful-restart refresh interval

[no] signalling hello graceful-restart refresh interval <value>

Syntax Description

signalling	Configure RSVP Signalling information
hello	RSVP Hello configuration commands
graceful-restart	RSVP Graceful restart commands
refresh	Configure RSVP Hello refresh behavior for Graceful Restart
interval	Time between sending Hello Requests for Graceful Restart
<i>value</i>	Hello interval in msec

Command Mode

- /exec/configure/ip-rsvp

signalling hello graceful-restart refresh misses

[no] signalling hello graceful-restart refresh misses <value>

Syntax Description

signalling	Configure RSVP Signalling information
hello	RSVP Hello configuration commands
graceful-restart	RSVP Graceful restart commands
refresh	Configure RSVP Hello refresh behavior for Graceful Restart
misses	Number of Hello misses for Graceful Restart
<i>value</i>	Number of missed Hello Acks which triggers neighbor down

Command Mode

- /exec/configure/ip-rsvp

signalling hello graceful-restart send recovery-time

[no] signalling hello graceful-restart send recovery-time <value>

Syntax Description

signalling	Configure RSVP Signalling information
hello	RSVP Hello configuration commands
graceful-restart	RSVP Graceful restart commands
send	Configure the restart-time in outgoing Hello msgs
recovery-time	Configure the recovery-time in outgoing GR Hello msgs
<i>value</i>	recovery-time in msec

Command Mode

- /exec/configure/ip-rsvp

signalling hello graceful-restart send restart-time

[no] signalling hello graceful-restart send restart-time <value>

Syntax Description

signalling	Configure RSVP Signalling information
hello	RSVP Hello configuration commands
graceful-restart	RSVP Graceful restart commands
send	Configure the restart-time in outgoing Hello msgs
restart-time	Configure the restart-time in outgoing GR Hello msgs
<i>value</i>	restart-time in msec

Command Mode

- /exec/configure/ip-rsvp

signalling hello reroute

[no] signalling hello reroute

Syntax Description

signalling	Configure RSVP Signalling information
hello	RSVP Hello configuration commands
reroute	RSVP Reroute commands

Command Mode

- /exec/configure/ip-rsvp

signalling initial-retransmit-delay

[no] signalling initial-retransmit-delay <msec>

Syntax Description

signalling	Configure RSVP Signalling information
initial-retransmit-delay	RSVP Initial retransmit delay
<i>msec</i>	Initial retransmit delay in millisecc

Command Mode

- /exec/configure/ip-rsvp

signalling patherr state-removal

[no] signalling patherr state-removal

Syntax Description

signalling	Configure RSVP Signalling information
patherr	Configure Path-Error processing
state-removal	Setup automatic removal of path-state

Command Mode

- /exec/configure/ip-rsvp

signalling rate-limit

```
[no] signalling rate-limit { [ interval <msec> ] [ limit <messages> ] } | { [ limit <messages> ] [ interval <msec> ] }
```

Syntax Description

signalling	Configure RSVP Signalling information
rate-limit	Configure rate-limiting
interval	(Optional) Configure scheduling interval
<i>msec</i>	(Optional) Interval in millisec
limit	(Optional) Configure message limit per scheduling interval
<i>messages</i>	(Optional) Message limit value

Command Mode

- /exec/configure/ip-rsvp

signalling refresh interval

[no] signalling refresh interval <seconds>

Syntax Description

signalling	Configure RSVP Signalling information
refresh	Configure RSVP signaling refresh parameters
interval	Set signaling refresh interval
<i>seconds</i>	Signaling refresh interval in seconds

Command Mode

- /exec/configure/ip-rsvp

signalling refresh misses

[no] signalling refresh misses <value>

Syntax Description

signalling	Configure RSVP Signalling information
refresh	Configure RSVP signaling refresh parameters
misses	Set refresh misses tolerated before expiring a state
<i>value</i>	Refresh miss value

Command Mode

- /exec/configure/ip-rsvp

signalling refresh pace

[no] signalling refresh pace

Syntax Description

signalling	Configure RSVP Signalling information
refresh	Configure RSVP signaling refresh parameters
pace	Pace sending of refresh messages

Command Mode

- /exec/configure/ip-rsvp

signalling refresh reduction

[no] signalling refresh reduction

Syntax Description

signalling	Configure RSVP Signalling information
refresh	Configure RSVP signaling refresh parameters
reduction	Enable, disable or set refresh reduction parameters

Command Mode

- /exec/configure/ip-rsvp

signalling refresh reduction ack-delay

[no] signalling refresh reduction ack-delay <msec>

Syntax Description

signalling	Configure RSVP Signalling information
refresh	Configure RSVP signaling refresh parameters
reduction	Enable, disable or set refresh reduction parameters
ack-delay	Set delay for sending ACK messages
<i>msec</i>	ACK delay value in millisecc

Command Mode

- /exec/configure/ip-rsvp

signalling refresh reduction bundle-max-size

[no] signalling refresh reduction bundle-max-size <value>

Syntax Description

signalling	Configure RSVP Signalling information
refresh	Configure RSVP signaling refresh parameters
reduction	Enable, disable or set refresh reduction parameters
bundle-max-size	Set bundle-maximum-size
<i>value</i>	Bundle size in bytes, use zero to disable bundling

Command Mode

- /exec/configure/ip-rsvp

signalling refresh reduction bundle-transmit-time

[no] signalling refresh reduction bundle-transmit-time <msec>

Syntax Description

signalling	Configure RSVP Signalling information
refresh	Configure RSVP signaling refresh parameters
reduction	Enable, disable or set refresh reduction parameters
bundle-transmit-time	Set bundle-transmit-time
<i>msec</i>	Bundle transmit time value in msec

Command Mode

- /exec/configure/ip-rsvp

signalling refresh reduction rapid-retransmit

[no] signalling refresh reduction rapid-retransmit

Syntax Description

signalling	Configure RSVP Signalling information
refresh	Configure RSVP signaling refresh parameters
reduction	Enable, disable or set refresh reduction parameters
rapid-retransmit	Rapid-retransmit of RSVP messages

Command Mode

- /exec/configure/ip-rsvp

signing level

{ [no] signing level { none | cisco | unsigned } | no signing level }

Syntax Description

no	(Optional) Negate a command or set its defaults
signing	Virtual service package signing settings
level	Package signing level allowed for virtual service installation
none	Most restrictive, don't allow package installation
cisco	Allow only Cisco signed packages
unsigned	Least restrictive, allow unsigned and all signing methods

Command Mode

- /exec/configure/virt-serv-global

site-id

{ site-id <s0> | no site-id }

Syntax Description

no	Negate a command or set its defaults
site-id	site id of the network where switch is deployed
s0	Provide site id

Command Mode

- /exec/configure/callhome

site-of-origin

```
{ site-of-origin { <ext-comm-soo-aa2nn4> | <ext-comm-soo-aa4nn2> } } | { no site-of-origin [ {  
<ext-comm-soo-aa2nn4> | <ext-comm-soo-aa4nn2> } ] }
```

Syntax Description

no	Negate a command or set its defaults
site-of-origin	Site of Origin
<i>ext-comm-soo-aa2nn4</i>	
<i>ext-comm-soo-aa4nn2</i>	

Command Mode

- /exec/configure/if-igp /exec/configure/if-mgmt-ether

sleep

sleep <i0>

Syntax Description

sleep	Sleep for the specified number of seconds
<i>i0</i>	Enter the number of seconds to sleep

Command Mode

- /exec

sleep instance

[no] sleep instance <inst> [<i0>] | sleep instance <inst> <i0>

Syntax Description

no	Negate a command or set its defaults
sleep	Sleep for the specified number of seconds
instance	Label with an instance number
<i>inst</i>	Instance number
<i>i0</i>	(Optional) Enter the number of seconds to sleep

Command Mode

- /exec/configure

slot

```
slot <module> { quoted <quoted-cmd> | <cmd> }
```

Syntax Description

slot	run commands on specific linecard (or set slot for commands that take optional slot number)
<i>module</i>	the slot number (aka module number)
quoted	enter the command with quotes -> pipe redirection and semi-colon are local
<i>quoted-cmd</i>	the command(s) to run on lc separated by <space> <semi-colon> <space>
<i>cmd</i>	the command(s) to run on lc separated by <space> <semi-colon> <space>

Command Mode

- /exec

smtp-host

```
{ smtp-host { <ipv4> | <ipv6> | <host> } [ smtp-port <port> ] | smtp-port <port> | reply-to <reply> | from <from> |
```

Syntax Description

<i>}</i>	
smtp-host	SMTP server host
<i>ipv4</i>	IPV4 address
<i>host</i>	DNS name
smtp-port	(Optional) SMTP server port
<i>port</i>	(Optional) Port for SMTP server
reply-to	Reply to email address
<i>reply</i>	Provide reply-to email address
from	From email address
<i>from</i>	Provide from email address

Command Mode

- /exec/configure/email

snapshot create

snapshot create <snapshot-name> <snapshot-description>

Syntax Description

snapshot	Create/Delete a snapshot
create	Create a snapshot of running state of selected features
<i>snapshot-name</i>	Name of a snapshot
<i>snapshot-description</i>	Description of a snapshot

Command Mode

- /exec

snapshot delete

snapshot delete <snapshot-name>

Syntax Description

snapshot	Create/Delete a snapshot
delete	Delete a single snapshot or all snapshots
<i>snapshot-name</i>	Name of a snapshot

Command Mode

- /exec

snapshot delete ALL

snapshot delete ALL

Syntax Description

snapshot	Create/Delete a snapshot
delete	Delete a single snapshot or all snapshots
ALL	Delete all snapshots present on the switch

Command Mode

- /exec

snapshot section add

snapshot section add <name> <command> <row-id> <key1> [<key2>]

Syntax Description

snapshot	Create/Delete a snapshot
section	Add/Delete a snapshot section
add	Add a snapshot section
<i>name</i>	Name of a section
<i>command</i>	show' command to generate XML output
<i>row-id</i>	tag of each row entry of the 'show' XML output
<i>key1</i>	first key to distinguish among row entries with
<i>key2</i>	(Optional) second key to distinguish among row entries with

Command Mode

- /exec

snapshot section delete

snapshot section delete <name>

Syntax Description

snapshot	Create/Delete a snapshot
section	Add/Delete a snapshot section
delete	Delete a snapshot section
<i>name</i>	Name of a section

Command Mode

- /exec

snmp-server aaa-user cache-timeout

[no] snmp-server aaa-user cache-timeout <timeout>

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
aaa-user	set duration for which aaa-cached snmp user exists
cache-timeout	timeout for AAA cache
<i>timeout</i>	timeout for which aaa-cached user exists(in secs)

Command Mode

- /exec/configure

snmp-server community

[no] snmp-server community <community_name> use-acl <acl_name>

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
community	set community string and access privs
<i>community_name</i>	SNMP community string
use-acl	acl name to filter snmp requests
<i>acl_name</i>	acl name to filter snmp requests

Command Mode

- /exec/configure

snmp-server community

[no] snmp-server community <s0> [{ group <s1> | ro | rw }]

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
community	set community string and access privs
<i>s0</i>	SNMP community string
group	(Optional) Group to which the community belongs
<i>s1</i>	(Optional) Group to which the community belongs
ro	(Optional) Read-only access with this community string
rw	(Optional) Read-write access with this community string

Command Mode

- /exec/configure

snmp-server contact

[no] snmp-server contact [<line>]

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
contact	modify sysContact
<i>line</i>	(Optional) modify sysContact

Command Mode

- /exec/configure

snmp-server context

```
[no] snmp-server context <context_name> [ instance <instance-name> ] [ vrf { <vrf-name> | <vrf-known-name>
} ] [ topology <topology-name> ]
```

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
context	SNMP context to be mapped
<i>context_name</i>	name of the SNMP context
instance	(Optional) Protocol instance associated with the SNMP context
<i>instance-name</i>	(Optional) Name of the protocol instance
vrf	(Optional) VRF associated with the SNMP context
<i>vrf-name</i>	(Optional) VRF name
<i>vrf-known-name</i>	(Optional) Known VRF name
topology	(Optional) Topology associated with the SNMP context
<i>topology-name</i>	(Optional) name of the Topology

Command Mode

- /exec/configure

snmp-server context

[no] snmp-server context <context_name> type { vrf | topology | instance | vlan | mst } len <i2> val <i3>

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
context	SNMP context to be mapped
<i>context_name</i>	name of the SNMP context
type	type of association to context
instance	Protocol instance associated with the SNMP context
vrf	VRF associated with the SNMP context
topology	Topology associated with the SNMP context
vlan	Vlan id associated with the SNMP context
mst	Mst id associated with the SNMP context
len	Length of value
<i>i2</i>	Length of value
val	Value
<i>i3</i>	Value of variable associated with the SNMP context

Command Mode

- /exec/configure

snmp-server counter cache-enable

[no] snmp-server counter cache-enable

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
counter	Configure port counter configuration
cache-enable	Enable port stats cache

Command Mode

- /exec/configure

snmp-server counter cache enable

[no] snmp-server counter cache enable

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
counter	Configure port counter configuration
cache	port stats cache
enable	enable port stats cache

Command Mode

- /exec/configure

snmp-server counter cache timeout

[no] snmp-server counter cache timeout <timeout>

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
counter	Configure port counter configuration
cache	Port stats cache
timeout	Timeout for port stats cache
<i>timeout</i>	Timeout for which cached port stats exists(in secs)

Command Mode

- /exec/configure

snmp-server enable traps

[no] snmp-server enable traps [<trap_arg> [<trap_sub_category> +]]

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
enable	Enable SNMP Traps
traps	Enable SNMP traps
<i>trap_arg</i>	(Optional) Enable __left__ traps
<i>trap_sub_category</i>	(Optional) Enter the trap

Command Mode

- /exec/configure

snmp-server enable traps bgp

[no] snmp-server enable traps bgp [{ state-changes [<subsystem> +] }]

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
enable	Enable SNMP Traps
traps	Enable SNMP traps
bgp	Enable SNMP BGP traps
state-changes	(Optional) Traps for FSM state changes
<i>subsystem</i>	(Optional) subsystem within BGP for SNMP traps

Command Mode

- /exec/configure

snmp-server enable traps bgp cbgp2

[no] snmp-server enable traps bgp cbgp2 [{ state-changes [<subsystem> +] }]

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
enable	Enable SNMP Traps
traps	Enable SNMP traps
bgp	Enable SNMP BGP traps
cbgp2	Enable SNMP CISCO-BGP-MIBv2 traps
state-changes	(Optional) Traps for FSM state changes
<i>subsystem</i>	(Optional) subsystem within BGP for SNMP traps

Command Mode

- /exec/configure

snmp-server enable traps bgp cbgp2 threshold prefix

[no] snmp-server enable traps bgp cbgp2 threshold prefix

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
enable	Enable SNMP Traps
traps	Enable SNMP traps
bgp	Enable SNMP BGP traps
cbgp2	Enable SNMP CISCO-BGP-MIBv2 traps
threshold	Traps for threshold events
prefix	CISCO specific trap for prefix threshold events

Command Mode

- /exec/configure

snmp-server enable traps bgp threshold prefix

[no] snmp-server enable traps bgp threshold prefix

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
enable	Enable SNMP Traps
traps	Enable SNMP traps
bgp	Enable SNMP BGP traps
threshold	Traps for threshold events
prefix	CISCO specific trap for prefix threshold events

Command Mode

- /exec/configure

snmp-server enable traps eigrp

[no] snmp-server enable traps eigrp [<eigrp-ptag>]

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
enable	Enable SNMP Traps
traps	Enable SNMP traps
eigrp	Enable SNMP EIGRP traps
<i>eigrp-ptag</i>	(Optional) Process tag

Command Mode

- /exec/configure

snmp-server enable traps msdp

[no] snmp-server enable traps msdp

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
enable	Enable SNMP Traps
traps	Enable SNMP traps
msdp	Enable SNMP MSDP traps

Command Mode

- /exec/configure

snmp-server enable traps ospf

[no] snmp-server enable traps ospf [<tag>]

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
enable	Enable SNMP Traps
traps	Enable SNMP traps
ospf	Enable SNMP OSPF traps
<i>tag</i>	(Optional) Process tag

Command Mode

- /exec/configure

snmp-server enable traps ospf

[no] snmp-server enable traps ospf [<tag>] lsa

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
enable	Enable SNMP Traps
traps	Enable SNMP traps
ospf	Enable SNMP OSPF traps
<i>tag</i>	(Optional) Process tag
lsa	Allow sending LSA traps

Command Mode

- /exec/configure

snmp-server enable traps ospfv3

[no] snmp-server enable traps ospfv3 [<tag>]

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
enable	Enable SNMP Traps
traps	Enable SNMP traps
ospfv3	Enable SNMP OSPFv3 traps
<i>tag</i>	(Optional) Process tag

Command Mode

- /exec/configure

snmp-server enable traps ospfv3

[no] snmp-server enable traps ospfv3 [<tag>] lsa

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
enable	Enable SNMP Traps
traps	Enable SNMP traps
ospfv3	Enable SNMP OSPFv3 traps
<i>tag</i>	(Optional) Process tag
lsa	Enable SNMP OSPFv3 LSA traps

Command Mode

- /exec/configure

snmp-server enable traps storm-control trap-rate

[no] snmp-server enable traps storm-control trap-rate <rate-per-minute>

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
enable	Enable SNMP Traps
traps	Enable SNMP traps
storm-control	Enable storm-control traps
trap-rate	Number of traps per minute
<i>rate-per-minute</i>	per Minute (0 means no upper rate)

Command Mode

- /exec/configure

snmp-server force-unload-feature

snmp-server force-unload-feature <feature_name>

Syntax Description

snmp-server	Configure snmp server
force-unload-feature	unload mibs of conditional feature forcefully
<i>feature_name</i>	conditional feature name

Command Mode

- /exec/configure

snmp-server globalEnforcePriv

[no] snmp-server globalEnforcePriv

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
globalEnforcePriv	globally enforce privacy for all the users

Command Mode

- /exec/configure

snmp-server host

```
[no] snmp-server host <host0> [ [ informs { { version { 2c <s1> | 3 { auth <s2> | noauth <s3> | priv <s4> } } } | <s5> } | traps { { version { 1 <s0> | 2c <s1> | 3 { auth <s2> | noauth <s3> | priv <s4> } } } | <s5> } ] | { version { 1 <s0> | 2c <s1> | 3 { auth <s2> | noauth <s3> | priv <s4> } } } | <s5> } ] [ udp-port <i1> ]
```

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
host	Specify hosts to receive SNMP notifications
<i>host0</i>	IPv4 or IPv6 address or DNS Name of SNMP notification host
informs	(Optional) Send Inform messages to this host
traps	(Optional) Send Traps messages to this host
version	(Optional) SNMP version to use for notification messages
1	(Optional) Use SNMPv1
<i>s0</i>	(Optional) SNMP community string or SNMPv3 user name
udp-port	(Optional) The notification host's UDP port number
<i>i1</i>	(Optional) The notification host's UDP port number
2c	(Optional) Use SNMPv2c
<i>s1</i>	(Optional) SNMP community string or SNMPv3 user name
3	(Optional) Use SNMPv3
auth	(Optional) Use the SNMPv3 authNoPriv Security Level
<i>s2</i>	(Optional) SNMP community string or SNMPv3 user name
noauth	(Optional) Use the SNMPv3 noAuthNoPriv Security Level
<i>s3</i>	(Optional) SNMP community string or SNMPv3 user name
priv	(Optional) Use the SNMPv3 authPriv Security Level
<i>s4</i>	(Optional) SNMP community string or SNMPv3 user name
<i>s5</i>	(Optional) SNMP community string or SNMPv3 user name

Command Mode

- /exec/configure

snmp-server host

```
[no] snmp-server host <host0> { use_vrf <s0> | filter_vrf <s1> } [ udp-port <i1> ]
```

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
host	Specify hosts to receive SNMP notifications
<i>host0</i>	IPv4 or IPv6 address or DNS Name of SNMP notification host
use_vrf	Configures SNMP to use the selected VRF to communicate with the host receiver
<i>s0</i>	VRF name
filter_vrf	Filters notifications to the notification host receiver based on the configured VRF
<i>s1</i>	VRF name
udp-port	(Optional) The notification host's UDP port number
<i>i1</i>	(Optional) The notification host's UDP port number

Command Mode

- /exec/configure

snmp-server host

[no] snmp-server host <host0> use-vrf { <vrf-name> | <vrf-known-name> } [udp-port <i1>]

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
host	Specify hosts to receive SNMP notifications
<i>host0</i>	IPv4 or IPv6 address or DNS Name of SNMP notification host
use-vrf	Configures SNMP to use the selected VRF to communicate with the host receiver
<i>vrf-name</i>	VRF name
<i>vrf-known-name</i>	Known VRF name
udp-port	(Optional) The notification host's UDP port number
<i>i1</i>	(Optional) The notification host's UDP port number

Command Mode

- /exec/configure

snmp-server host

[no] snmp-server host <host0> filter-vrf { <vrf-name> | <vrf-known-name> } [udp-port <i1>]

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
host	Specify hosts to receive SNMP notifications
<i>host0</i>	IPv4 or IPv6 address or DNS Name of SNMP notification host
filter-vrf	Filters notifications to the notification host receiver based on the configured VRF
<i>vrf-name</i>	VRF name
<i>vrf-known-name</i>	Known VRF name
udp-port	(Optional) The notification host's UDP port number
<i>i1</i>	(Optional) The notification host's UDP port number

Command Mode

- /exec/configure

snmp-server host

[no] snmp-server host <host0> { source-interface <ifName> } [udp-port <i1>]

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
host	Specify hosts to send SNMP notifications
<i>host0</i>	IPv4 or IPv6 address or DNS Name of SNMP notification host
source-interface	Source interface to be used for sending out SNMP notifications to this host
<i>ifName</i>	Source interface name
udp-port	(Optional) The notification host's UDP port number
<i>i1</i>	(Optional) The notification host's UDP port number

Command Mode

- /exec/configure

snmp-server load-cond-feature

[no] snmp-server load-cond-feature <feature_name>

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
load-cond-feature	load or unload mibs of conditional feature
<i>feature_name</i>	conditional feature name

Command Mode

- /exec/configure

snmp-server load-mib

[no] snmp-server load-mib <mib_name>

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
load-mib	load a given mib
<i>mib_name</i>	mib module name

Command Mode

- /exec/configure

snmp-server location

[no] snmp-server location [<line>]

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
location	modify sysLocation
<i>line</i>	(Optional) modify sysLocation

Command Mode

- /exec/configure

snmp-server mib community-map

[no] snmp-server mib community-map <community_name> context <context_name>

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
mib	mib access parameters
community-map	SNMP community
<i>community_name</i>	SNMP community string
context	SNMP context to be mapped
<i>context_name</i>	name of the SNMP context

Command Mode

- /exec/configure

snmp-server protocol enable

[no] snmp-server protocol enable

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
protocol	snmp protocol operations
enable	Enable/Disable snmp protocol operations

Command Mode

- /exec/configure

snmp-server source-interface

[no] snmp-server source-interface { traps | informs } <ifName>

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
source-interface	Source interface to be used for sending out SNMP notifications
<i>ifName</i>	Source interface name
traps	SNMP Trap notifications for which this source interface needs to be used
informs	SNMP Inform notifications for which this source interface needs to be used

Command Mode

- /exec/configure

snmp-server system-shutdown

[no] snmp-server system-shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
system-shutdown	Configure snmp-server for reload(2)

Command Mode

- /exec/configure

snmp-server tcp-session

[no] snmp-server tcp-session [auth]

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
tcp-session	Enable one time authentication for snmp over tcp session.
auth	(Optional) Enable one time authentication for snmp over tcp session.

Command Mode

- /exec/configure

snmp-server user

```
[no] snmp-server user <s0> { enforcePriv | { [ <s1> ] { [ auth { md5 | sha } <s2> { { priv [ aes-128 ] { <s3>
[ localizedkey ] [ { auto | engineID <s4> } ] } } | { [ localizedkey1 ] [ { auto1 | engineID1 <s5> } ] } } } }
}
```

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp-server	Configure snmp server
user	Define a user who can access the SNMP engine
<i>s0</i>	Name of the user
enforcePriv	Enforce privacy for the user
<i>s1</i>	(Optional) Group name (ignored for notif target user)
auth	(Optional) authentication parameters for the user
md5	(Optional) Use HMAC MD5 algorithm for authentication
sha	(Optional) Use HMAC SHA algorithm for authentication
<i>s2</i>	(Optional) authentication password for user
priv	(Optional) encryption parameters for the user
aes-128	(Optional) Use 128-bit AES algorithm for privacy
<i>s3</i>	(Optional) privacy password for user
localizedkey	(Optional) specifies whether the passwords are in localized key format
auto	(Optional) specifies whether the user is auto created (volatile)
engineID	(Optional) engineID for configuring notif target user (for V3 informs)
<i>s4</i>	(Optional) specifies notification target's SNMP engineID(colon separated)
localizedkey1	(Optional) specifies whether the passwords are in localized key format
auto1	(Optional) specifies whether the user is auto created (volatile)
engineID1	(Optional) engineID for configuring notif target user (for V3 informs)
<i>s5</i>	(Optional) specifies notification target's SNMP engineID(colon separated)

Command Mode

- /exec/configure

snmp-trap

```
snmp-trap [ intdata1 <integer-data1> ] [ intdata2 <integer-data2> ] [ strdata <string-data> ] event-type <ev_type>
policy-name <name>
```

Syntax Description

snmp-trap	Send
intdata1	(Optional) Enter
<i>integer-data1</i>	(Optional) Integer
intdata2	(Optional) Enter
<i>integer-data2</i>	(Optional) Integer
strdata	(Optional) Enter
<i>string-data</i>	(Optional) String
event-type	Event type
<i>ev_type</i>	Event type
policy-name	Policy Name
<i>name</i>	Policy Name

Command Mode

- /exec

snmp ifmib ifalias long

[no] snmp ifmib ifalias long

Syntax Description

no	(Optional) Negate a command or set its defaults
snmp	Configure snmp
ifmib	Configure snmp interface mib feature
ifalias	Configure snmp interface alias attribute for interface mib
long	Enable long description up to 256 characters for interface alias

Command Mode

- /exec/configure

snmp trap link-status

snmp trap link-status | no snmp trap link-status

Syntax Description

no	Negate a command
snmp	Modify SNMP interface parameters
trap	Allow a specific SNMP trap
link-status	Allow SNMP LINKUP and LINKDOWN traps

Command Mode

- /exec/configure/if-any-tunnel

snmp trap link-status

snmp trap link-status | no snmp trap link-status

Syntax Description

no	Negate a command or set its defaults
snmp	Modify SNMP interface parameters
trap	Allow a specific SNMP trap
link-status	Allow SNMP LINKUP and LINKDOWN traps

Command Mode

- /exec/configure/if-ether-sub /exec/configure/if-port-channel-sub /exec/configure/if-gig-ether-sub /exec/configure/if-remote-ethernet-sub /exec/configure/if-ether-sub-p2p

snmp trap link-status

snmp trap link-status

Syntax Description

snmp	Modify SNMP interface parameters
trap	Allow a specific SNMP trap
link-status	Allow SNMP LINKUP and LINKDOWN traps

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-base /exec/configure/if-port-channel /exec/configure/if-port-channel-range

snmp trap link-status

[no] snmp trap link-status

Syntax Description

no	Negate a command or set its defaults
snmp	Modify SNMP interface parameters
trap	Allow a specific SNMP trap
link-status	Allow SNMP LINKUP and LINKDOWN traps

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-base /exec/configure/if-port-channel /exec/configure/if-port-channel-range

snmp trap link-status

snmp trap link-status | no snmp trap link-status

Syntax Description

no	Negate a command or set its defaults
snmp	Modify SNMP interface parameters
trap	Allow a specific SNMP trap
link-status	Allow SNMP LINKUP and LINKDOWN traps

Command Mode

- /exec/configure/if-mgmt-ether

snmp trap link-status

snmp trap link-status | no snmp trap link-status

Syntax Description

no	Negate a command or set its defaults
snmp	Modify SNMP interface parameters
trap	Allow a specific SNMP trap
link-status	Allow SNMP LINKUP and LINKDOWN traps

Command Mode

- /exec/configure/if-vlan-common

sockets local-port-range

```
{ { no sockets local-port-range } | { sockets local-port-range <start-port> <end-port> } }
```

Syntax Description

<code>no</code>	Negate a command or set its defaults
<code>sockets</code>	Negate a command or set its defaults
<code>local-port-range</code>	Define local port range for Kstack. Note: This CLI requires switch to be reloaded
<code>start-port</code>	Start port of local port range
<code>end-port</code>	End port of local port range

Command Mode

- `/exec/configure /exec/configure/config-mgmt`

soft-reconfiguration inbound

{ soft-reconfiguration inbound [always] } | { no soft-reconfiguration inbound } | { default soft-reconfiguration inbound }

Syntax Description

no	Negate a command or set its defaults
default	Inherit values from a peer template
soft-reconfiguration	Soft reconfiguration
inbound	Allow inbound soft reconfiguration
always	(Optional) Always perform inbound soft reconfiguration

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af

soft-reconfiguration inbound

{ soft-reconfiguration inbound [always] } | { no soft-reconfiguration inbound } | { default soft-reconfiguration inbound }

Syntax Description

no	Negate a command or set its defaults
default	Inherit values from a peer template
soft-reconfiguration	Soft reconfiguration
inbound	Allow inbound soft reconfiguration
always	(Optional) Always perform inbound soft reconfiguration

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-mdt
/exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-l2vpn-evpn

SOO

```
{ [ no ] soo { <ext-comm-soo-aa2nn4> | <ext-comm-soo-aa4nn2> } } | { default soo }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
default	Inherit values from a peer template
soo	Specify Site-of-origin extcommunity
<i>ext-comm-soo-aa4nn2</i>	
<i>ext-comm-soo-aa2nn4</i>	

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af
/exec/configure/router-bgp/router-bgp-vrf-neighbor/router-bgp-vrf-neighbor-af-ipv4
/exec/configure/router-bgp/router-bgp-vrf-neighbor/router-bgp-vrf-neighbor-af-ipv6

sort

sort [-b | -d | -f | -g | -i | -M | -n | -r | -k <key> | -t <delim> | -u] +

Syntax Description

	Pipe command output to filter
sort	Stream Sorter
-b	(Optional) ignore leading blanks
-d	(Optional) consider only blanks and alphanumeric characters
-f	(Optional) fold lower case to upper case characters
-g	(Optional) compare according to general numerical value
-i	(Optional) consider only printable characters
-M	(Optional) month sort
-n	(Optional) compare according to string numerical value
-r	(Optional) reverse the result of comparisons
-k	(Optional) provide a key
-t	(Optional) use different separator instead of non-blank to blank transition
-u	(Optional) remove duplicate lines
<i>key</i>	(Optional) key in format POS1[,POS2] with POS = <field-nb>[.<char-pos>][<ordering>]
<i>delim</i>	(Optional) field delimiter char

Command Mode

- /output

source-group

[no] source-group <source> <group>

Syntax Description

no	(Optional) Negate a command or set its defaults
source-group	Source Group
<i>source</i>	Configure source address
<i>group</i>	Configure group address

Command Mode

- /exec/configure/if-nve

source-interface

[no] source-interface | source-interface <interface>

Syntax Description

no	Negate a command or set its defaults
source-interface	Source interface to be used to reach radius server
<i>interface</i>	Interface (default is mgmt)

Command Mode

- /exec/configure/radius

source-interface

source-interface <src_if> | no source-interface

Syntax Description

no	Negate a command or set its defaults
source-interface	NVE Source-Interface
<i>src_if</i>	

Command Mode

- /exec/configure/if-nve

source-interface

[no] source-interface | source-interface <interface>

Syntax Description

no	Negate a command or set its defaults
source-interface	Source interface to be used to reach tacacs server
<i>interface</i>	Interface (default is mgmt)

Command Mode

- /exec/configure/tacacs+

source

source { <ipaddr> } | no source

Syntax Description

no	Negate a command or set its defaults
source	source of tunnel packets
<i>ipaddr</i>	ip address (A.B.C.D)

Command Mode

- /exec/configure/if-te

source

source [background] <file> [<args>] +

Syntax Description

source	run a script (python, tcl,...) from bootflash:scripts
background	(Optional) run the script in the background, see also 'show background' and 'kill background'
<i>file</i>	the script file to run
<i>args</i>	(Optional) argument to be passed to script

Command Mode

- /exec

source

source <file> [<args>] +

Syntax Description

	Pipe command output to filter
source	run a script (python, tcl,...) from bootflash:scripts
<i>file</i>	the script file to run
<i>args</i>	(Optional) argument to be passed to script

Command Mode

- /output

source

{ [no] source <intf> | no source }

Syntax Description

source	Source Interface for this destination
<i>intf</i>	Interface

Command Mode

- /exec/configure/nfm-exporter

source copy-sys

source copy-sys

Syntax Description

source	run a script (python, tcl,...) from bootflash:scripts
copy-sys	copy the system provided example scripts of /sys to bootflash:scripts

Command Mode

- /exec

spanning-tree

```
spanning-tree { vlan <vlan-id> | bridge-domain <bd-id> } root <root-type> [ diameter <diameter-val> [
hello-time <hello-time-val> ] ] | no spanning-tree { vlan <vlan-id> | bridge-domain <bd-id> } root [ <root-type>
[ diameter <diameter-val> [ hello-time <hello-time-val> ] ] ]
```

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
vlan	VLAN Switch Spanning Trees
bridge-domain	Bridge-Domain Switch Spanning Trees
<i>vlan-id</i>	vlan range, Example: 1,3-5,7,9-11
<i>bd-id</i>	Bridge-Domain range, Example: 2,4-5,7,9-11
diameter	(Optional) Network diameter of this spanning tree
<i>diameter-val</i>	(Optional) Maximum number of bridges between any two end nodes
root	configure switch as root
<i>root-type</i>	configure switch as root
hello-time	(Optional) Set the hello interval for the spanning tree
<i>hello-time-val</i>	(Optional) number of seconds between generation of config bpdu

Command Mode

- /exec/configure

spanning-tree

spanning-tree { vlan <vlan-id> | bridge-domain <bd-id> } priority <prio> | no spanning-tree { vlan <vlan-id> | bridge-domain <bd-id> } priority [<prio>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
vlan	VLAN Switch Spanning Trees
bridge-domain	Bridge-Domain Switch Spanning Trees
<i>vlan-id</i>	vlan range, Example: 1,3-5,7,9-11
<i>bd-id</i>	Bridge-Domain range, Example: 2,4-5,7,9-11
priority	Set the bridge priority for the spanning tree
<i>prio</i>	bridge priority in increments of 4096

Command Mode

- /exec/configure

spanning-tree

```
spanning-tree { vlan <vlan-id> | bridge-domain <bd-id> } hello-time <hello-time-val> | no spanning-tree {
vlan <vlan-id> | bridge-domain <bd-id> } hello-time [ <hello-time-val> ]
```

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
vlan	VLAN Switch Spanning Trees
bridge-domain	Bridge-Domain Switch Spanning Trees
<i>vlan-id</i>	vlan range, Example: 1,3-5,7,9-11
<i>bd-id</i>	Bridge-Domain range, Example: 2,4-5,7,9-11
hello-time	Set the hello interval for the spanning tree
<i>hello-time-val</i>	number of seconds between generation of config bpdu

Command Mode

- /exec/configure

spanning-tree

```
spanning-tree { vlan <vlan-id> | bridge-domain <bd-id> } forward-time <fwd-time> | no spanning-tree { vlan <vlan-id> | bridge-domain <bd-id> } forward-time [ <fwd-time> ]
```

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
vlan	VLAN Switch Spanning Trees
bridge-domain	Bridge-Domain Switch Spanning Trees
<i>vlan-id</i>	vlan range, Example: 1,3-5,7,9-11
<i>bd-id</i>	Bridge-Domain range, Example: 2,4-5,7,9-11
forward-time	Set the forward delay for the spanning tree
<i>fwd-time</i>	number of seconds for the forward delay timer

Command Mode

- /exec/configure

spanning-tree

spanning-tree { vlan <vlan-id> | bridge-domain <bd-id> } max-age <max-age-val> | no spanning-tree { vlan <vlan-id> | bridge-domain <bd-id> } max-age [<max-age-val>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
vlan	VLAN Switch Spanning Trees
bridge-domain	Bridge-Domain Switch Spanning Trees
<i>vlan-id</i>	vlan range, Example: 1,3-5,7,9-11
<i>bd-id</i>	Bridge-Domain range, Example: 2,4-5,7,9-11
max-age	Set the max age interval for the spanning tree
<i>max-age-val</i>	maximum number of seconds the information in a bpdu is valid

Command Mode

- /exec/configure

spanning-tree

spanning-tree [vlan <vlan-id> | bridge-domain <bd-id>] port-priority <port-prio> | no spanning-tree [vlan <vlan-id> | bridge-domain <bd-id>] port-priority [<port-prio>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
vlan	(Optional) VLAN Switch Spanning Trees
bridge-domain	(Optional) Bridge-Domain Switch Spanning Trees
<i>vlan-id</i>	(Optional) vlan range, Example: 1,3-5,7,9-11
<i>bd-id</i>	(Optional) Bridge-Domain range, Example: 2,4-5,7,9-11
port-priority	Change an interface's spanning tree port priority
<i>port-prio</i>	port priority in increments of 32

Command Mode

- /exec/configure/if-switching /exec/configure/if-ethernet-switch-m

spanning-tree

spanning-tree [vlan <vlan-id> | bridge-domain <bd-id>] cost <port-cost> | no spanning-tree [vlan <vlan-id> | bridge-domain <bd-id>] cost [<port-cost>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
vlan	(Optional) VLAN Switch Spanning Trees
bridge-domain	(Optional) Bridge-Domain Switch Spanning Trees
<i>vlan-id</i>	(Optional) vlan range, Example: 1,3-5,7,9-11
<i>bd-id</i>	(Optional) Bridge-Domain range, Example: 2,4-5,7,9-11
cost	Change an interface's spanning tree port path cost
<i>port-cost</i>	port path cost

Command Mode

- /exec/configure/if-switching /exec/configure/if-ethernet-switch-m

spanning-tree

[no] spanning-tree [vlan <vlan-id> | bridge-domain <bd-id>] cost auto

Syntax Description

no	(Optional) Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
vlan	(Optional) VLAN Switch Spanning Trees
bridge-domain	(Optional) Bridge-Domain Switch Spanning Trees
<i>vlan-id</i>	(Optional) vlan range, Example: 1,3-5,7,9-11
<i>bd-id</i>	(Optional) Bridge-Domain range, Example: 2,4-5,7,9-11
cost	Change an interface's spanning tree port path cost
auto	Determine cost based on media speed of this interface

Command Mode

- /exec/configure/if-switching /exec/configure/if-ethernet-switch-m

spanning-tree bpdudfilter

spanning-tree bpdudfilter <port-bpdudfilter> | no spanning-tree bpdudfilter [<port-bpdudfilter>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
bpdudfilter	Don't send or receive BPDUs on this interface
<i>port-bpdudfilter</i>	Don't send or receive BPDUs on this interface

Command Mode

- /exec/configure/if-switching /exec/configure/if-ethernet-switch-m

spanning-tree bpduguard

spanning-tree bpduguard <port-bpduguard> | no spanning-tree bpduguard [<port-bpduguard>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
bpduguard	Don't accept BPDUs on this interface
<i>port-bpduguard</i>	Don't accept BPDUs on this interface

Command Mode

- /exec/configure/if-switching /exec/configure/if-ethernet-switch-m

spanning-tree bridge-domain

[no] spanning-tree bridge-domain <bd-id>

Syntax Description

no	(Optional) Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
bridge-domain	Bridge-Domain Switch Spanning Trees
<i>bd-id</i>	Bridge-Domain range, Example: 2,4-5,7,9-11

Command Mode

- /exec/configure

spanning-tree bridge assurance

[no] spanning-tree bridge assurance

Syntax Description

no	(Optional) Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
bridge	Spanning tree bridge options
assurance	Enable Bridge Assurance on all network ports

Command Mode

- /exec/configure

spanning-tree fcoe

[no] spanning-tree fcoe

Syntax Description

no	(Optional) Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
fcoe	Enable STP for FCoE VLANs

Command Mode

- /exec/configure

spanning-tree guard

spanning-tree guard <guard-type> | no spanning-tree guard [<guard-type>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
guard	Change an interface's spanning tree guard mode
<i>guard-type</i>	Change an interface's spanning tree guard mode

Command Mode

- /exec/configure/if-switching /exec/configure/if-ethernet-switch-m

spanning-tree lc-issu

spanning-tree lc-issu <issu-type> | no spanning-tree lc-issu [<issu-type>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
lc-issu	Configure Linecard ISSU type
<i>issu-type</i>	ISSU Type

Command Mode

- /exec/configure

spanning-tree lc-issu

spanning-tree lc-issu <port-issu-type> | no spanning-tree lc-issu [<port-issu-type>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
lc-issu	Configure Linecard ISSU type
<i>port-issu-type</i>	ISSU Type

Command Mode

- /exec/configure/if-switching /exec/configure/if-ethernet-switch-m

spanning-tree link-type

spanning-tree link-type <link-type-val> | no spanning-tree link-type [<link-type-val>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
link-type	Specify a link type for spanning tree tree protocol use
<i>link-type-val</i>	Specify a link type for spanning tree tree protocol use

Command Mode

- /exec/configure/if-switching /exec/configure/if-ethernet-switch-m

spanning-tree loopguard default

[no] spanning-tree loopguard default

Syntax Description

no	(Optional) Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
loopguard	Spanning tree loopguard options
default	Enable loopguard by default on all ports

Command Mode

- /exec/configure

spanning-tree mode

spanning-tree mode <stp-mode> | no spanning-tree mode [<stp-mode>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
mode	Spanning Tree operating mode
<i>stp-mode</i>	Spanning Tree operating mode

Command Mode

- /exec/configure

spanning-tree mst

```
spanning-tree mst <mst-id> root <root-type> [ diameter <diameter-val> [ hello-time <hello-time-val> ] ] | no
spanning-tree mst <mst-id> root [ <root-type> [ diameter <diameter-val> [ hello-time <hello-time-val> ] ] ]
```

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
mst	Multiple spanning tree configuration
<i>mst-id</i>	MST instance range, example: 0-3,5,7-9
diameter	(Optional) Network diameter of this spanning tree
<i>diameter-val</i>	(Optional) Maximum number of bridges between any two end nodes
root	configure switch as root
<i>root-type</i>	configure switch as root
hello-time	(Optional) Set the hello interval for the spanning tree
<i>hello-time-val</i>	(Optional) number of seconds between generation of config bpdu

Command Mode

- /exec/configure

spanning-tree mst priority

spanning-tree mst <mst-id> priority <prio> | no spanning-tree mst <mst-id> priority [<prio>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
mst	Multiple spanning tree configuration
<i>mst-id</i>	MST instance range, example: 0-3,5,7-9
priority	Set the bridge priority for the spanning tree
<i>prio</i>	bridge priority in increments of 4096

Command Mode

- /exec/configure

spanning-tree mst port-priority

spanning-tree mst <mst-id> port-priority <port-prio> | no spanning-tree mst <mst-id> port-priority [<port-prio>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
mst	Multiple spanning tree
<i>mst-id</i>	MST instance list, example 0,2-4,6,8-12
port-priority	Change an interface's spanning tree port priority
<i>port-prio</i>	port priority in increments of 32

Command Mode

- /exec/configure/if-switching /exec/configure/if-ethernet-switch-m

spanning-tree mst cost

spanning-tree mst <mst-id> cost <port-cost> | no spanning-tree mst <mst-id> cost [<port-cost>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
mst	Multiple spanning tree
<i>mst-id</i>	MST instance list, example 0,2-4,6,8-12
cost	Change an interface's spanning tree port path cost
<i>port-cost</i>	port path cost

Command Mode

- /exec/configure/if-switching /exec/configure/if-ethernet-switch-m

spanning-tree mst cost auto

[no] spanning-tree mst <mst-id> cost auto

Syntax Description

no	(Optional) Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
mst	Multiple spanning tree
<i>mst-id</i>	MST instance list, example 0,2-4,6,8-12
cost	Change an interface's spanning tree port path cost
auto	Determine cost based on media speed of this interface

Command Mode

- /exec/configure/if-switching /exec/configure/if-ethernet-switch-m

spanning-tree mst configuration

spanning-tree mst configuration

Syntax Description

spanning-tree	Spanning Tree Subsystem
mst	Multiple spanning tree configuration
configuration	Enter MST configuration submenu

Command Mode

- /exec/configure

spanning-tree mst configuration

[no] spanning-tree mst configuration

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
mst	Multiple spanning tree configuration
configuration	Enter MST configuration submode

Command Mode

- /exec/configure

spanning-tree mst forward-time

spanning-tree mst forward-time <fwd-time> | no spanning-tree mst forward-time [<fwd-time>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
mst	Multiple spanning tree configuration
forward-time	Set the forward delay for the spanning tree
<i>fwd-time</i>	number of seconds for the forward delay timer

Command Mode

- /exec/configure

spanning-tree mst hello-time

spanning-tree mst hello-time <hello-time-val> | no spanning-tree mst hello-time [<hello-time-val>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
mst	Multiple spanning tree configuration
hello-time	Set the hello interval for the spanning tree
<i>hello-time-val</i>	number of seconds between generation of config bpdu

Command Mode

- /exec/configure

spanning-tree mst max-age

spanning-tree mst max-age <max-age-val> | no spanning-tree mst max-age [<max-age-val>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
mst	Multiple spanning tree configuration
max-age	Set the max age interval for the spanning tree
<i>max-age-val</i>	maximum number of seconds the information in a bpdu is valid

Command Mode

- /exec/configure

spanning-tree mst max-hops

spanning-tree mst max-hops <max-hops-val> | no spanning-tree mst max-hops [<max-hops-val>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
mst	Multiple spanning tree configuration
max-hops	Set the max hops value for the spanning tree
<i>max-hops-val</i>	maximum number of hops a BPDU is valid

Command Mode

- /exec/configure

spanning-tree mst pre-standard

[no] spanning-tree mst pre-standard

Syntax Description

no	(Optional) Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
mst	Multiple spanning tree
pre-standard	Force pre-standard MST BPDU transmission on port

Command Mode

- /exec/configure/if-switching /exec/configure/if-ethernet-switch-m

spanning-tree mst simulate pvst

[no] spanning-tree mst simulate pvst [<simpvst-disable>]

Syntax Description

no	(Optional) Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
mst	Multiple spanning tree
simulate	Enable spanning tree simulation
pvst	Enable PVST simulation
<i>simpvst-disable</i>	(Optional) Disable PVST simulation on this interface

Command Mode

- /exec/configure/if-switching /exec/configure/if-ethernet-switch-m

spanning-tree mst simulate pvst global

[no] spanning-tree mst simulate pvst global

Syntax Description

no	(Optional) Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
mst	Multiple spanning tree configuration
simulate	Enable spanning tree simulation
pvst	Enable PVST simulation
global	Enable PVST Simulation by default on all ports

Command Mode

- /exec/configure

spanning-tree pathcost method

spanning-tree pathcost method <method-val> | no spanning-tree pathcost method [<method-val>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
pathcost	Spanning tree pathcost options
method	Method to calculate default port path cost
<i>method-val</i>	Method to calculate default port path cost

Command Mode

- /exec/configure

spanning-tree port type

spanning-tree port type <port-type> | no spanning-tree port type [<port-type>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
port	Spanning tree port options
type	Specify a port type for spanning tree protocol use
<i>port-type</i>	Specify a port type for spanning tree protocol use

Command Mode

- /exec/configure/if-switching /exec/configure/if-ethernet-switch-m

spanning-tree port type edge bpdufilter default

[no] spanning-tree port type edge bpdufilter default

Syntax Description

no	(Optional) Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
port	Spanning tree port options
type	Specify a port type for spanning tree protocol use
edge	Consider the interface as edge port (enable portfast)
bpdufilter	Enable edge port (portfast) bpdu filter on this switch
default	Enable bpdu filter by default on all edge (portfast) ports

Command Mode

- /exec/configure

spanning-tree port type edge bpduguard default

[no] spanning-tree port type edge bpduguard default

Syntax Description

no	(Optional) Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
port	Spanning tree port options
type	Specify a port type for spanning tree protocol use
edge	Consider the interface as edge port (enable portfast)
bpduguard	Enable edge port (portfast) bpdu guard on this switch
default	Enable bpdu guard by default on all edge (portfast) ports

Command Mode

- /exec/configure

spanning-tree port type edge default

[no] spanning-tree port type edge default

Syntax Description

no	(Optional) Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
port	Spanning tree port options
type	Specify a port type for spanning tree protocol use
edge	Consider the interface as edge port (enable portfast)
default	Select edge port type by default on all access ports

Command Mode

- /exec/configure

spanning-tree port type edge trunk

spanning-tree port type edge trunk | no spanning-tree port type edge trunk

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
port	Spanning tree port options
type	Specify a port type for spanning tree protocol use
edge	Consider the interface as edge port (enable portfast)
trunk	Consider the interface as edge port (enable portfast) even in trunk mode

Command Mode

- /exec/configure/if-switching /exec/configure/if-ethernet-switch-m

spanning-tree port type network default

[no] spanning-tree port type network default

Syntax Description

no	(Optional) Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
port	Spanning tree port options
type	Specify a port type for spanning tree protocol use
network	Consider the interface as inter-switch link
default	Select network port type by default on all ports

Command Mode

- /exec/configure

spanning-tree portfast

spanning-tree portfast [<port-portfast>] | no spanning-tree portfast [<port-portfast>]

Syntax Description

no	Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
portfast	Enable an interface to move directly to fwd on link up
<i>port-portfast</i>	(Optional) Enable an interface to move directly to fwd on link up

Command Mode

- /exec/configure/if-switching /exec/configure/if-ethernet-switch-m

spanning-tree portfast bpdufilter default

[no] spanning-tree portfast bpdufilter default

Syntax Description

no	(Optional) Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
portfast	Enable an interface to move directly to fwd on link up
bpdufilter	Enable portfast bpdu filter on this switch
default	Enable bdpu filter by default on all portfast ports

Command Mode

- /exec/configure

spanning-tree portfast bpduguard default

[no] spanning-tree portfast bpduguard default

Syntax Description

no	(Optional) Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
portfast	Enable an interface to move directly to fwd on link up
bpduguard	Enable portfast bpdu guard on this switch
default	Enable bdpu guard by default on all portfast ports

Command Mode

- /exec/configure

spanning-tree portfast default

[no] spanning-tree portfast default

Syntax Description

no	(Optional) Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
portfast	Enable an interface to move directly to fwd on link up
default	Enable portfast by default on all access ports

Command Mode

- /exec/configure

spanning-tree pseudo-information

spanning-tree pseudo-information

Syntax Description

spanning-tree	Spanning Tree Subsystem
pseudo-information	configure spanning tree pseudo information

Command Mode

- /exec/configure

spanning-tree vlan

[no] spanning-tree vlan <vlan-id>

Syntax Description

no	(Optional) Negate a command or set its defaults
spanning-tree	Spanning Tree Subsystem
vlan	VLAN Switch Spanning Trees
<i>vlan-id</i>	vlan range, Example: 1,3-5,7,9-11

Command Mode

- /exec/configure

speed-group

speed-group <gspeed_val> | no speed-group [<gspeed_val>]

Syntax Description

no	Negate a command or set its defaults
speed-group	port group speed
<i>gspeed_val</i>	Interface port speed

Command Mode

- /exec/configure/if-eth-base

speed

[no] speed <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
speed	Set the transmit and receive speeds
<i>i0</i>	Transmit and receive speeds

Command Mode

- /exec/configure/com1

speed

```
speed { <speed_val> | auto [ 100 [ 1000 ] ] } | no speed [ { <speed_val> | auto [ 100 [ 1000 ] ] } ]
```

Syntax Description

no	Negate a command or set its defaults
speed	Enter the port speed
<i>speed_val</i>	Interface port speed
auto	auto negotiate speed
100	(Optional) 100 Mbps speed
1000	(Optional) 1000 Mbps speed

Command Mode

- /exec/configure/if-mgmt-ether

speed

[no] speed <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
speed	Set the transmit and receive speeds
<i>i0</i>	Transmit and receive speeds

Command Mode

- /exec/configure/console

speed auto

speed auto

Syntax Description

speed	Enter the port speed
auto	auto negotiate speed

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-non-member /exec/configure/if-port-channel

speed auto 100

speed auto 100

Syntax Description

speed	Enter the port speed
auto	auto negotiate speed
100	100 Mbps speed

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-non-member /exec/configure/if-port-channel

speed auto 100 1000

speed auto 100 1000

Syntax Description

speed	Enter the port speed
auto	auto negotiate speed
100	100 Mbps speed
1000	1000 Mbps speed

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-non-member /exec/configure/if-port-channel

spf-interval

spf-interval <max-wait> [<initial-wait> <second-wait>] | no spf-interval <max-wait> [<initial-wait> <second-wait>]

Syntax Description

no	Negate a command or set its defaults
spf-interval	Configure SPF interval
<i>max-wait</i>	Maximum wait between trigger and SPF computation (milli-secs)
<i>initial-wait</i>	(Optional) Initial wait between trigger and SPF computation (milli-secs)
<i>second-wait</i>	(Optional) Second wait between trigger and SPF computation (milli-secs)

Command Mode

- /exec/configure/otv-isis/otv-isis-vrf-common

spf-interval

spf-interval <level> <max-wait> [<initial-wait> <second-wait>] | no spf-interval <level> <max-wait> [<initial-wait> <second-wait>]

Syntax Description

no	Negate a command or set its defaults
spf-interval	Configure SPF interval
<i>level</i>	IS-IS level
<i>max-wait</i>	Maximum wait between trigger and SPF computation (milli-secs)
<i>initial-wait</i>	(Optional) Initial wait between trigger and SPF computation (milli-secs)
<i>second-wait</i>	(Optional) Second wait between trigger and SPF computation (milli-secs)

Command Mode

- /exec/configure/router-isis/router-isis-vrf-common

spf mode incremental

[no] spf mode incremental

Syntax Description

no	(Optional) Negate a command or set its defaults
spf	Configure route computation related settings
mode	Set the mode of spf computation
incremental	If possible, recompute only parts of the SPT

Command Mode

- /exec/configure/router-ospf /exec/configure/router-ospf/vrf

spf mode incremental

[no] spf mode incremental

Syntax Description

no	(Optional) Negate a command or set its defaults
spf	Configure route computation related settings
mode	Set the mode of spf computation
incremental	If possible, recompute only parts of the SPT

Command Mode

- /exec/configure/router-ospf3/router-ospf3-af-ipv6 /exec/configure/router-ospf3/vrf/router-ospf3-af-ipv6

sprom recover backplane

sprom recover backplane <i0>

Syntax Description

sprom	set SPROM contents should be done very carefully
recover	SPROM recovery
backplane	set backplane module sprom contents
<i>i0</i>	please enter instance of backplane sprom

Command Mode

- /exec

ssh

```
{ ssh <s0> [ [ vrf { <vrf-name> | <vrf-known-name> } ] [ source-ip <s1> ] ] | [ source-interface <intf> ] ] }
| { ssh <s0> [ [ source-ip <s1> ] [ vrf { <vrf-name> | <vrf-known-name> } ] ] | [ source-interface <intf> ] ]
}
```

Syntax Description

ssh	SSH to another system
vrf	(Optional) Display per-VRF information
source-ip	(Optional) ip address to bind
source-interface	(Optional) Select source interface
<i>s0</i>	Enter hostname or user@hostname
<i>vrf-name</i>	(Optional) VRF name
<i>vrf-known-name</i>	(Optional) Known VRF name
<i>s1</i>	(Optional) Enter source ip address to bind
<i>intf</i>	(Optional)

Command Mode

- /exec

ssh6

```
{ ssh6 <s0> [ [ [ vrf { <vrf-name> | <vrf-known-name> } ] [ source-ip <s2> ] [ interface <s1> ] ] ] [
source-interface <intf> ] ] } | { ssh6 <s0> [ [ [ source-ip <s2> ] [ vrf { <vrf-name> | <vrf-known-name> } ] [
interface <s1> ] ] ] [ source-interface <intf> ] ] }
```

Syntax Description

ssh6	SSH to another system using IPv6 addressing
vrf	(Optional) vrf to use
source-ip	(Optional) ip address to bind
source-interface	(Optional) Select source interface
interface	(Optional) interface to bind
<i>s0</i>	Enter hostname or user@hostname
<i>vrf-name</i>	(Optional) VRF name
<i>vrf-known-name</i>	(Optional) Known VRF name
<i>s2</i>	(Optional) Enter source ip address to bind
<i>s1</i>	(Optional) Enter interface to bind
<i>intf</i>	(Optional)

Command Mode

- /exec

ssh key

```
{ ssh key { dsa [ force ] | rsa [ { <i0> | <oldrange> } [ force ] ] } | no ssh key [ { dsa [ force ] | rsa [ { <i0> | <oldrange> } [ force ] ] } ] }
```

Syntax Description

no	Negate a command or set its defaults
ssh	SSH to another system
key	Generate SSH Key
dsa	Generate DSA keys
force	(Optional) Force the generation of keys even if previous ones are present
rsa	Generate RSA keys
<i>i0</i>	(Optional) Enter number of bits (in multiples of 8)
<i>oldrange</i>	(Optional) Enter number of bits
force	(Optional) Force the generation of keys even if previous ones are present
force	(Optional) Force the generation of keys even if previous ones are present

Command Mode

- /exec/configure

ssh login-attempts

```
{ { ssh login-attempts <d0> } | { no ssh login-attempts [ <d0> ] } }
```

Syntax Description

no	Negate a command or set its defaults
ssh	SSH to another system
login-attempts	Set maximum login attempts from ssh
<i>d0</i>	Specify max-attempt number

Command Mode

- /exec/configure/

ssh server enable

[no] ssh server enable

Syntax Description

no	(Optional) Negate a command or set its defaults
ssh	Configure SSH parameters
server	Configure SSH Server parameters
enable	Enable SSH server

Command Mode

- /exec/configure

standby

[no] standby [ip <ip-addr-first> | IPv6 <ip-addrv6-first>]

Syntax Description

no	(Optional) Negate a command or set its defaults
standby	Standby node
ip	(Optional) ip address for standby node
<i>ip-addr-first</i>	(Optional) ITD node IPv4 address
IPv6	(Optional) IPv6 address

Command Mode

- /exec/configure/itd-dg-node

start

start

Syntax Description

start	Start Trigger
-------	---------------

Command Mode

- /exec/elamns/se13

start

start

Syntax Description

start	Start Trigger
-------	---------------

Command Mode

- /exec/elamns/sel4

start

start

Syntax Description

start	Start Trigger
-------	---------------

Command Mode

- /exec/elamns/se15

start

start

Syntax Description

start	Start Trigger
-------	---------------

Command Mode

- /exec/elamns/sel6

start

start

Syntax Description

start	Start Trigger
-------	---------------

Command Mode

- /exec/elamns/sel7

start

start

Syntax Description

start	Start Trigger
-------	---------------

Command Mode

- /exec/elamns/outsel0

start

start

Syntax Description

start	Start Trigger
-------	---------------

Command Mode

- /exec/elamns/outsel5

state enabled

[no] state enabled

Syntax Description

no	(Optional) Negate a command or set its defaults
state	Port-profile state
enabled	Enable/ disable the port-profile

Command Mode

- /exec/configure/port-profile

stateful-ha

[no] stateful-ha [pss-partial-lsp]

Syntax Description

stateful-ha	Configure RSVP stateful HA
pss-partial-lsp	(Optional) Enable PSS of partial lsp

Command Mode

- /exec/configure/ip-rsvp

statistics

[no] statistics

Syntax Description

no	(Optional) Negate a command or set its defaults
----	---

Command Mode

- /exec/configure/ipacl /exec/configure/vacl

statistics

[no] statistics

Syntax Description

no	(Optional) Negate a command or set its defaults
----	---

Command Mode

- /exec/configure/ipv6acl

statistics

[no] statistics

Syntax Description

no	(Optional) Negate a command or set its defaults
----	---

Command Mode

- /exec/configure/macac1

statistics per-entry

[no] statistics per-entry

Syntax Description

no	(Optional) Negate a command or set its defaults
----	---

Command Mode

- /exec/configure/ipacl /exec/configure/vacl

statistics per-entry

[no] statistics per-entry

Syntax Description

no	(Optional) Negate a command or set its defaults
----	---

Command Mode

- /exec/configure/ipv6acl

statistics per-entry

[no] statistics per-entry

Syntax Description

no	(Optional) Negate a command or set its defaults
----	---

Command Mode

- /exec/configure/macac1

status

status

Syntax Description

status	Status of Trigger
--------	-------------------

Command Mode

- /exec/elamns/sel3

status

status

Syntax Description

status	Status of Trigger
--------	-------------------

Command Mode

- /exec/elamns/se14

status

status

Syntax Description

status	Status of Trigger
--------	-------------------

Command Mode

- /exec/elamns/sel5

status

status

Syntax Description

status	Status of Trigger
--------	-------------------

Command Mode

- /exec/elamns/sel6

status

status

Syntax Description

status	Status of Trigger
--------	-------------------

Command Mode

- /exec/elamns/sel7

status

status

Syntax Description

status	Status of Trigger
--------	-------------------

Command Mode

- /exec/elamns/outse0

status

status

Syntax Description

status	Status of Trigger
--------	-------------------

Command Mode

- /exec/elamns/outsel5

stopbits

[no] stopbits { 1 | 2 }

Syntax Description

no	(Optional) Negate a command or set its defaults
stopbits	Set async line stopbits
1	One stop bit
2	Two stop bits

Command Mode

- /exec/configure/com1

stopbits

[no] stopbits { 1 }

Syntax Description

no	(Optional) Negate a command or set its defaults
stopbits	Set async line stopbits
1	One stop bit

Command Mode

- /exec/configure/console

storm-control

```
storm-control { { { broadcast blevel | multicast mlevel | unicast ulevel } <level> } | action { shutdown | trap } } | no storm-control { { { broadcast blevel | multicast mlevel | unicast ulevel } [ <level> ] } | action [ shutdown | trap ] }
```

Syntax Description

no	Negate a command or set its defaults
storm-control	Configure Interface storm control
broadcast	Broadcast address storm control
multicast	Multicast address storm control
unicast	Unicast address storm control
blevel	Set allowed broadcast traffic level on this interface
mlevel	Set allowed multicast traffic level on this interface
ulevel	Set allowed unicast traffic level on this interface
<i>level</i>	Enter the storm suppression level
action	Action on storm control
shutdown	Shutdown (Err-Disable) port
trap	Generate SNMP trap

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-non-member /exec/configure/if-port-channel

streetaddress

{ streetaddress <line> | no streetaddress }

Syntax Description

no	Negate a command or set its defaults
streetaddress	Configure replacement part shipping address.
<i>line</i>	Provide street address (white spaces are fine)

Command Mode

- /exec/configure/callhome

stub

```
{ { [ eigrp ] stub [ { [ direct | connected | static | summary ] [ redistributed ] } + [ leak-map <leak-map> ] | {
receive-only } ] } } | { no [ eigrp ] stub [ { [ direct | connected | static | summary ] [ redistributed ] } + [ leak-map
<leak-map> ] | { receive-only } ] } }
```

Syntax Description

no	Negate a command or set its defaults
eigrp	(Optional) EIGRP router configuration commands
stub	Set IP-EIGRP as stubbed router
direct	(Optional) Do advertise connected routes
connected	(Optional) Do advertise connected routes
static	(Optional) Do advertise static routes
summary	(Optional) Do advertise summary routes
redistributed	(Optional) Do advertise redistributed routes
leak-map	(Optional) Allow dynamic prefixes based on the leak-map
<i>leak-map</i>	(Optional) leak-map name
receive-only	(Optional) Set IP-EIGRP as receive only neighbor

Command Mode

- /exec/configure/router-eigrp/router-eigrp-vrf-common /exec/configure/router-eigrp/router-eigrp-af-common

summary-address

[no] summary-address { <ip-dest> <ip-mask> | <ip-prefix> } [tag <tagval> | not-advertise]

Syntax Description

no	(Optional) Negate a command or set its defaults
summary-address	Configure route summarization for redistribution
<i>ip-dest</i>	IP prefix format: i.i.i.i
<i>ip-mask</i>	IP network mask format: m.m.m.m
<i>ip-prefix</i>	IP prefix format: x.x.x.x/ml
tag	(Optional) 32-bit tag value
<i>tagval</i>	(Optional) 32-bit tag value
not-advertise	(Optional) Suppress advertising the specified summary

Command Mode

- /exec/configure/router-ospf /exec/configure/router-ospf/vrf

summary-address

[no] summary-address <ipv6-prefix> [tag <tagval> | not-advertise]

Syntax Description

no	(Optional) Negate a command or set its defaults
summary-address	Configure route summarization for redistribution
tag	(Optional) 32-bit tag value
<i>tagval</i>	(Optional) 32-bit tag value
not-advertise	(Optional) Suppress advertising the specified summary

Command Mode

- /exec/configure/router-ospf3/router-ospf3-af-ipv6 /exec/configure/router-ospf3/vrf/router-ospf3-af-ipv6

summary-address

summary-address { <ip-addr> <ip-mask> | <ip-prefix> } <level> | no summary-address { <ip-addr> <ip-mask> | <ip-prefix> } [<level>]

Syntax Description

no	Negate a command or set its defaults
summary-address	Configure IP address summaries
<i>ip-addr</i>	IP summary address
<i>ip-mask</i>	IP summary mask
<i>ip-prefix</i>	IP summary prefix
<i>level</i>	Level to summarize into

Command Mode

- /exec/configure/router-isis/router-isis-vrf-common /exec/configure/router-isis/router-isis-af-ipv4

summary-address

summary-address <ipv6-prefix> <level> | no summary-address <ipv6-prefix> [<level>]

Syntax Description

no	Negate a command or set its defaults
summary-address	Configure IP address summaries
<i>level</i>	Level to summarize into

Command Mode

- /exec/configure/router-isis/router-isis-af-ipv6

suppress-arp KEYWORD no Negate a command or set its defaults KEYWORD suppress-arp Enable ARP suppression dynamic \$hmm

[no] suppress-arp KEYWORD no Negate a command or set its defaults KEYWORD suppress-arp Enable ARP suppression dynamic \$hmm

Command Mode

- /exec/configure/if-nve/vni

suppress-fib-pending

[no] suppress-fib-pending

Syntax Description

no	(Optional) Negate a command or set its defaults
suppress-fib-pending	Advertise only routes that are programmed in hardware to peers

Command Mode

- /exec/configure/router-bgp/vrf-cmds

suppress-fib-pending

[no] suppress-fib-pending

Syntax Description

no	(Optional) Negate a command or set its defaults
suppress-fib-pending	Advertise only routes that are programmed in hardware to peers

Command Mode

- /exec/configure/router-eigrp/router-eigrp-vrf-common /exec/configure/router-eigrp/router-eigrp-af-common

suppress-inactive

[no | default] suppress-inactive

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
suppress-inactive	Advertise only active routes to peers

Command Mode

- /exec/configure/router-bgp/router-bgp-af

suppress-inactive

[no | default] suppress-inactive

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
suppress-inactive	Advertise only active routes to peer

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af
/exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-mdt

switch-id

switch-id <asid> | no switch-id

Syntax Description

no	Negate a command or set its defaults
switch-id	Configure Switch ID
<i>asid</i>	Anycast Switch ID

Command Mode

- /exec/configure/anycast

switch-priority

{ switch-priority <i0> | no switch-priority }

Syntax Description

no	Negate a command or set its defaults
switch-priority	Priority of the switch(0-highest 7-lowest)
<i>i0</i>	Priority of the switch(0-highest 7-lowest)

Command Mode

- /exec/configure/callhome

switch-scope controller l2-vxlan

{ switch-scope controller l2-vxlan <controller-id> | no switch-scope controller l2-vxlan }

Syntax Description

no	Negate a command or set its defaults
switch-scope	switch-scope
controller	Controller command
l2-vxlan	l2-vxlan
<i>controller-id</i>	

Command Mode

- /exec

switchback

switchback

Syntax Description

switchback	switchback to default vdc
------------	---------------------------

Command Mode

- /exec

switching-mode fabric-speed 40g

[no] switching-mode fabric-speed 40g

Syntax Description

no	(Optional) Negate a command or set its defaults
switching-mode	Configure the operating switching-mode of asics
fabric-speed	fabric speed settings
40g	fabric speed at 40g instead of 42g

Command Mode

- /exec/configure

switching-mode store-forward

[no] switching-mode store-forward

Syntax Description

no	(Optional) Negate a command or set its defaults
switching-mode	Configure the operating switching-mode of asics
store-forward	Operate in store and forward mode

Command Mode

- /exec/configure

switchport

switchport

Syntax Description

switchport	Configure switchport parameters
------------	---------------------------------

Command Mode

- /exec/configure/if-eth-non-member /exec/configure/if-ethernet-all /exec/configure/if-port-channel

switchport

[no] switchport

Syntax Description

no	Negate a command or set its defaults
switchport	Configure switchport parameters

Command Mode

- /exec/configure/if-ethernet-switch /exec/configure/if-eth-non-member /exec/configure/if-ethernet /exec/configure/if-ethernet-switch /exec/configure/if-ethernet-all /exec/configure/if-port-channel

switchport autostate exclude

```
switchport autostate exclude [ vlan { <exclude-vlans> | add <add-vlans> | except <except-vlans> | remove
<remove-vlans> | all | none } ] | no switchport autostate exclude [ dummy ] [ vlan { <exclude-vlans> | add
<add-vlans> } ]
```

Syntax Description

no	Negate a command or set its defaults
switchport	Configure switchport parameters
autostate	Include or exclude this port from vlan link up calculation
exclude	Exclude this port from vlan link up calculation
vlan	(Optional) VLAN Id
<i>exclude-vlans</i>	(Optional) VLAN IDs of the VLANs to auto-state exclude on this interface
add	(Optional) add VLANs to except list
<i>add-vlans</i>	(Optional) VLAN IDs of the VLANs to auto-state exclude on this interface
except	(Optional) List of VLANs to excepted from auto-state exclude
<i>except-vlans</i>	(Optional) VLAN IDs of the VLANs to auto-state exclude on this interface
remove	(Optional) remove VLANs from except list
<i>remove-vlans</i>	(Optional) VLAN IDs of the VLANs to auto-state exclude on this interface
all	(Optional) Exclude all VLANs
none	(Optional) Exclude no VLANs
dummy	(Optional) Hidden Keyword

Command Mode

- /exec/configure/if-ethernet-switch /exec/configure/if-ethernet-all /exec/configure/if-gig-ether /exec/configure/if-port-channel-range /exec/configure/if-eth-port-channel-switch /exec/configure/if-remote-ethernet-switch TIMEOUT 120

switchport block

switchport block { unicast | multicast } | no switchport block { unicast | multicast }

Syntax Description

no	Negate a command or set its defaults
switchport	Configure switchport parameters
block	Block specified outbound traffic for all VLANs
unicast	Block unknown unicast traffic
multicast	Block flood multicast traffic

Command Mode

- /exec/configure/if-eth-l2-non-member /exec/configure/if-ethernet-all
/exec/configure/if-eth-port-channel-switch

switchport dot1q ethertype

switchport dot1q ethertype { 0x8100 | 0x88A8 | 0x9100 | <any> } | no switchport dot1q ethertype [<any>]

Syntax Description

no	Negate a command or set its defaults
switchport	Configure switchport parameters
dot1q	Configure dot1q EtherType value
ethertype	Configure dot1q EtherType value
0x8100	Default EtherType for 802.1q frames
0x88A8	EtherType for 802.1ad double tagged frames
0x9100	EtherType for QinQ frames
<i>any</i>	Any EtherType

Command Mode

- /exec/configure/if-eth-l2-non-member /exec/configure/if-ethernet-all

switchport dot1q ethertype

switchport dot1q ethertype { 0x8100 | 0x88A8 | 0x9100 | <any> } | no switchport dot1q ethertype [<any>]

Syntax Description

no	Negate a command or set its defaults
switchport	Configure switchport parameters
dot1q	Configure dot1q EtherType value
ethertype	Configure dot1q EtherType value
0x8100	Default EtherType for 802.1q frames
0x88A8	EtherType for 802.1ad double tagged frames
0x9100	EtherType for QinQ frames
<i>any</i>	Any EtherType

Command Mode

- /exec/configure/if-eth-port-channel-switch

switchport host

[no] switchport host

Syntax Description

no	(Optional) Negate a command or set its defaults
switchport	Configure switchport parameters
host	Set port host

Command Mode

- /exec/configure/if-eth-l2-non-member /exec/configure/if-ethernet-switch
/exec/configure/if-ethernet-switch-m /exec/configure/if-ethernet-all

switchport isolated

[no] switchport isolated

Syntax Description

no	(Optional) Negate a command or set its defaults
switchport	Configure switchport parameters
isolated	Disable loop-free detection.

Command Mode

- /exec/configure/if-eth-12-non-member /exec/configure/if-ethernet-all
/exec/configure/if-eth-port-channel-switch

switchport mode

{ switchport mode { <port_mode> } | no switchport mode }

Syntax Description

no	Negate a command or set its defaults
switchport	Configure switchport parameters
mode	Enter the port mode
<i>port_mode</i>	port mode

Command Mode

- /exec/configure/if-eth-l2-non-member /exec/configure/if-ethernet-all
/exec/configure/if-eth-port-channel-switch

switchport mode

{ switchport mode { <port_mode> } | no switchport mode }

Syntax Description

no	Negate a command or set its defaults
switchport	Configure switchport parameters
mode	Enter the port mode
<i>port_mode</i>	port mode

Command Mode

- /exec/configure/if-eth-l2-non-member /exec/configure/if-ethernet-all
/exec/configure/if-eth-port-channel-switch

switchport mode fabricpath

[no] switchport mode fabricpath

Syntax Description

no	(Optional) Negate a command or set its defaults
switchport	Configure switchport parameters
mode	Enter the port mode
fabricpath	port mode fabricpath

Command Mode

- /exec/configure/if-eth-l2-non-member /exec/configure/if-ethernet-all
/exec/configure/if-eth-port-channel-switch

switchport mode private-vlan

```
{ switchport mode private-vlan <pvlan_mode> } | { no switchport mode private-vlan [ <pvlan_mode> ] }
```

Syntax Description

no	Negate a command or set its defaults
switchport	Configure switchport parameters
mode	Enter the port mode
private-vlan	Set the private VLAN configuration
<i>pvlan_mode</i>	private vlan mode

Command Mode

- /exec/configure/if-ethernet-switch /exec/configure/if-ethernet-all /exec/configure/if-remote-ethernet-switch

switchport mode private-vlan trunk

```
{ switchport mode private-vlan trunk <trunk_mode> } | { no switchport mode private-vlan trunk [
<trunk_mode> ] }
```

Syntax Description

no	Negate a command or set its defaults
switchport	Configure switchport parameters
mode	Enter the port mode
private-vlan	Set the private VLAN configuration
trunk	private-vlan trunk
<i>trunk_mode</i>	private vlan trunk mode

Command Mode

- /exec/configure/if-ethernet-switch /exec/configure/if-ethernet-all /exec/configure/if-remote-ethernet-switch

switchport port-security

[no] switchport port-security

Syntax Description

no	(Optional) Negate a command or set its defaults
switchport	Configure switchport parameters
port-security	Port security related command

Command Mode

- /exec/configure/if-switching

switchport port-security aging time

[no] switchport port-security aging time <value>

Syntax Description

no	(Optional) Negate a command or set its defaults
switchport	Configure switchport parameters
port-security	Port security related command
aging	Port-security aging commands
time	Port-security aging time
<i>value</i>	Aging time in minutes. Enter a value between 1 and 1440

Command Mode

- /exec/configure/if-switching

switchport port-security aging type

[no] switchport port-security aging type { absolute | inactivity }

Syntax Description

no	(Optional) Negate a command or set its defaults
switchport	Configure switchport parameters
port-security	Port security related command
aging	Port-security aging commands
type	Type of timers
absolute	Absolute Timer
inactivity	Inactivity Timer

Command Mode

- /exec/configure/if-switching

switchport port-security mac-address

[no] switchport port-security mac-address <mac-address> [vlan <vlanid>]

Syntax Description

no	(Optional) Negate a command or set its defaults
switchport	Configure switchport parameters
port-security	Port security related command
mac-address	MAC address
<i>mac-address</i>	48 bit mac address format HHHH.HHHH.HHHH
vlan	(Optional) Vlan on which the mac address should be secured
<i>vlanid</i>	(Optional) vlan id. Enter a value between 1 and 4094

Command Mode

- /exec/configure/if-switching

switchport port-security mac-address sticky

[no] switchport port-security mac-address sticky

Syntax Description

no	(Optional) Negate a command or set its defaults
switchport	Configure switchport parameters
port-security	Port security related command
mac-address	MAC address
sticky	Sticky MAC address

Command Mode

- /exec/configure/if-switching

switchport port-security maximum

[no] switchport port-security maximum <value> [vlan <vlanid>]

Syntax Description

no	(Optional) Negate a command or set its defaults
switchport	Configure switchport parameters
port-security	Port security related command
maximum	Max secure addresses
<i>value</i>	Maximum addresses 1 to 1025
vlan	(Optional) Vlan on which the mac address should be secured
<i>vlanid</i>	(Optional) vlan id. Enter a value between 1 and 4094

Command Mode

- /exec/configure/if-switching

switchport port-security violation

[no] switchport port-security violation { protect | restrict | shutdown }

Syntax Description

no	(Optional) Negate a command or set its defaults
switchport	Configure switchport parameters
port-security	Port security related command
violation	Security violation mode
protect	security violation protect mode
restrict	security violation restrict mode
shutdown	security violation shutdown mode

Command Mode

- /exec/configure/if-switching

switchport private-vlan association trunk

```
{ switchport private-vlan association trunk <primary-vlan> <secondary-vlan> } | { no switchport private-vlan
association trunk [ <primary-vlan> [ <secondary-vlan> ] ] }
```

Syntax Description

switchport	Configure switchport parameters
private-vlan	Set the private VLAN configuration
association	private vlan trunk association
trunk	private-vlan trunk secondary
no	Negate a command or set its defaults
<i>primary-vlan</i>	Primary VLAN ID
<i>secondary-vlan</i>	Secondary VLAN ID

Command Mode

- /exec/configure/if-switching

switchport private-vlan host-association

{ switchport private-vlan host-association <primary-vlan> <secondary-vlan> } | { no switchport private-vlan host-association }

Syntax Description

switchport	Configure switchport parameters
private-vlan	Set the private VLAN configuration
host-association	Set the private VLAN host association
no	Negate a command or set its defaults
<i>primary-vlan</i>	Primary VLAN ID
<i>secondary-vlan</i>	Secondary VLAN ID

Command Mode

- /exec/configure/if-switching

switchport private-vlan mapping

```
{ switchport private-vlan mapping <primary-vlan> [ { add | remove } ] <secondary_vlans> } | { no switchport private-vlan mapping [ <primary-vlan> <secondary_vlans> ] }
```

Syntax Description

switchport	Configure switchport parameters
private-vlan	Set the private VLAN configuration
mapping	Set the private VLAN access/trunk promiscuous mapping
add	(Optional) Add a VLAN to private VLAN list
remove	(Optional) Remove a VLAN from private VLAN list
no	Negate a command or set its defaults
<i>primary-vlan</i>	Primary private VLAN
<i>secondary_vlans</i>	Secondary VLAN IDs

Command Mode

- /exec/configure/if-switching

switchport private-vlan mapping trunk

```
{ switchport private-vlan mapping trunk <primary-vlan> [ { add | remove } ] <secondary_vlans> } | { no
switchport private-vlan mapping trunk [ <primary-vlan> [ <secondary_vlans> ] ] }
```

Syntax Description

switchport	Configure switchport parameters
private-vlan	Set the private VLAN configuration
mapping	Set the private VLAN access/trunk promiscuous mapping
add	(Optional) Add a VLAN to private VLAN list
remove	(Optional) Remove a VLAN from private VLAN list
no	Negate a command or set its defaults
trunk	private-vlan trunk promiscuous
<i>primary-vlan</i>	Primary private VLAN
<i>secondary_vlans</i>	Secondary VLAN IDs

Command Mode

- /exec/configure/if-switching

switchport private-vlan trunk allowed vlan

switchport private-vlan trunk allowed vlan { <allowed-vlans> | add <add-vlans> | except <except-vlans> | remove <remove-vlans> | all | none } | no switchport private-vlan trunk allowed vlan <no-allowed-vlans>

Syntax Description

switchport	Configure switchport parameters
private-vlan	Set the private VLAN configuration
trunk	Set the private vlan trunking configuration
allowed	Set allowed VLANs when interface is in private-vlan trunking mode
vlan	VLAN status
<i>allowed-vlans</i>	VLAN IDs of the allowed VLANs when interface is in private-vlan trunking mode
add	add VLANs to the current list
<i>add-vlans</i>	VLAN IDs of the allowed VLANs when interface is in private-vlan trunking mode
except	all VLANs except the following
<i>except-vlans</i>	VLAN IDs of disallowed VLANS when this port is in trunking mode
remove	remove VLANs from the current list
<i>remove-vlans</i>	VLAN IDs of disallowed VLANS when this port is in trunking mode
all	all VLANs
none	no VLANs
no	Negate a command or set its defaults
<i>no-allowed-vlans</i>	VLAN IDs of disallowed VLANs when this port is in trunking mode

Command Mode

- /exec/configure/if-switching

switchport private-vlan trunk native vlan

{ switchport private-vlan trunk native vlan <native-vlan> } | { no switchport private-vlan trunk native vlan }

Syntax Description

switchport	Configure switchport parameters
private-vlan	Set the private VLAN configuration
no	Negate a command or set its defaults
trunk	Set the private vlan trunking configuration
native	Set the private vlan trunking native configuration
vlan	VLAN status
<i>native-vlan</i>	native vlan id

Command Mode

- /exec/configure/if-switching

switchto vdc

```
switchto vdc <e-vdc2> [ force ] [ bypass ] [ __readonly__ ]
```

Syntax Description

switchto	Goto specific Virtual Device Context <vdc-name> <vdc-id>
vdc	Manage Virtual Device Context
<i>e-vdc2</i>	Enter Virtual Device Context <vdc-id>
<code>__readonly__</code>	(Optional) Read Only
force	(Optional) force
bypass	(Optional) Enter Virtual Device Context <vdc-id>

Command Mode

- /exec/

sync-peers destination

sync-peers destination <dst-ip> [source <src-ip> | vrf <vrf-name>] + | no sync-peers destination [<dst-ip> [source <src-ip>]]

Syntax Description

no	Negate a command or set its defaults
sync-peers	Specify peers to whom configuration needs to be synced
destination	Specify destination ip address of peer switch
<i>dst-ip</i>	IPv4 address (A.B.C.D) of destination
source	(Optional) Source interface for sending out configs
<i>src-ip</i>	(Optional) IPv4 address (A.B.C.D) of source
vrf	(Optional) vrf to be used default/management
<i>vrf-name</i>	(Optional) vrf to be used

Command Mode

- /exec/configure

sync-snmp-password

sync-snmp-password <s0>

Syntax Description

sync-snmp-password	sync snmp password
<i>s0</i>	password

Command Mode

- /exec

sync-snmp-password

sync-snmp-password <s0> <s1> <s2>

Syntax Description

sync-snmp-password	sync snmp password
<i>s0</i>	password
<i>s1</i>	user
<i>s2</i>	snmp client host

Command Mode

- /exec

sync-snmp-password

[no] sync-snmp-password <*s0*>

Syntax Description

no	(Optional) Negate a command or set its defaults
sync-snmp-password	sync snmp password
<i>s0</i>	password

Command Mode

- /exec/configure

system-mac

system-mac <sysmac> | no system-mac

Syntax Description

no	Negate a command or set its defaults
system-mac	Configure system mac address
<i>sysmac</i>	specify system mac address

Command Mode

- /exec/configure/vpc-domain

system-priority

system-priority <syspri> | no system-priority <syspri>

Syntax Description

no	Negate a command or set its defaults
system-priority	Configure system priority
<i>syspri</i>	specify system priority

Command Mode

- /exec/configure/vpc-domain

system

system [no] auto-collect tech-support [timeout <time>]

Syntax Description

system	System management commands
no	(Optional) Negate a command or set its defaults
auto-collect	Auto collection of information
tech-support	Collect tech-support in case of service causing supervisor reset
timeout	(Optional) Collect tech-support timeout
<i>time</i>	(Optional) Timeout in seconds

Command Mode

- /exec

system cores

```
{ system cores { { <uri0> } | { <uri1> vrf <vrf-known-name> } } | no system cores [ { { <uri0> } | { <uri1> vrf <vrf-known-name> } } ] }
```

Syntax Description

no	Negate a command or set its defaults
system	System configuration commands
cores	Copy cores to destination
<i>uri0</i>	Select destination filesystem
<i>uri1</i>	Select destination filesystem
vrf	Enter the vrf name
<i>vrf-known-name</i>	VRF name

Command Mode

- /exec/configure

system cores retain

[no] system cores retain

Syntax Description

no	(Optional) Negate a command or set its defaults
system	System configuration commands
cores	Copy cores to destination
retain	keep the cores

Command Mode

- /exec/configure

system default interface

```
{ system default interface { congestion { timeout <i0> mode { core | edge } | mode { core | edge } } | pause
{ timeout <i1> mode1 { core | edge } | mode1 { core | edge } } } | no system default interface { congestion {
timeout <i0> mode { core | edge } | mode { core | edge } } | pause { timeout <i1> mode1 { core | edge } |
mode1 { core | edge } } } }
```

Syntax Description

no	Negate a command or set its defaults
system	System configuration commands
default	Configure system default values
interface	Configure system default interface values
congestion	Configure system timeout values for congestion drop
pause	Configure system timeout values for pause frame
timeout	Configure system timeout values
<i>i0</i>	Configure number of milliseconds
<i>i1</i>	Configure number of milliseconds
mode	Configure mode
mode1	Configure mode
core	Enter the port type
edge	Enter the port type

Command Mode

- /exec/configure

system default switchport

{ system default switchport }

Syntax Description

system	System configuration commands
default	Configure system default values
switchport	Configure switchport

Command Mode

- /exec/configure

system default switchport fabricpath

{ system default switchport fabricpath | no system default switchport fabricpath }

Syntax Description

no	Negate a command or set its defaults
system	System configuration commands
default	Configure system default values
switchport	Configure switchport
fabricpath	Configure default port mode as fabricpath

Command Mode

- /exec/configure

system default switchport shutdown

{ system default switchport shutdown }

Syntax Description

system	System configuration commands
default	Configure system default values
switchport	Configure switchport
shutdown	Configure admin state

Command Mode

- /exec/configure

system fabric-mode full-rate

[no] system fabric-mode full-rate

Syntax Description

no	(Optional) Negate a command or set its defaults
system	System Management Commands
fabric-mode	Configure the operating mode of the fabrics
full-rate	Operates fabrics in Full Rate Mode

Command Mode

- /exec/configure

system fast-reload stabilization-timer

system fast-reload stabilization-timer <time>

Syntax Description

system	System management commands
fast-reload	fast-reload software
stabilization-timer	Network stabilization time in seconds before fast-reload can be executed after the previous reload
<i>time</i>	time in secs

Command Mode

- /exec/configure

system hap-reset

system hap-reset

Syntax Description

system	System management commands
hap-reset	enables resetting of local or remote sup on ha failures

Command Mode

- /exec

system health check bootflash

system health check bootflash [fix-errors]

Syntax Description

system	System management commands
health	system health exec commands
check	run consistency check on compact flash
bootflash	check internal bootflash
fix-errors	(Optional) fix bootflash errors

Command Mode

- /exec

system heartbeat

system heartbeat

Syntax Description

system	System management commands
heartbeat	enables heartbeat

Command Mode

- /exec

system high-multicast-priority

[no] system high-multicast-priority

Syntax Description

no	(Optional) Negate a command or set its defaults
system	System Management Commands
high-multicast-priority	high priority to multicast

Command Mode

- /exec/configure

system inband queuing

```
[no] system inband queuing [ { [ round-robin ] [ bpdu weight <weight-val> ] [ q0 weight <weight-val> ] [ q1 weight <weight-val> ] [ q0 no-drop ] [ q1 no-drop ] [ pick_packets ] [ bpdu map <q-index> ] [ arp map <q-index> ] [ q0 map <q-index> ] [ q1 map <q-index> ] } ]
```

Syntax Description

no	(Optional) Negate a command or set its defaults
system	System-related show commands
inband	System Inband configuration
queuing	System Inband Queueing Algorithm
round-robin	(Optional) Simple Round-Robin
bpdu	(Optional) bpdu queue
arp	(Optional) arp queue
q0	(Optional) q0 queue (cos 4,5,6,7)
q1	(Optional) q1 queue (cos 0,1,2,3)
weight	(Optional) weight associated with the queue
no-drop	(Optional) set no drop option on queue
<i>weight-val</i>	(Optional) weights
pick_packets	(Optional) enable packet rx
map	(Optional) map to queue
<i>q-index</i>	(Optional) queue index

Command Mode

- /exec/configure

system inband queuing

system inband queuing { clear-pm-counters | clear-klm-counters | clear-all-counters | enable-timestamp | disable-timestamp }

Syntax Description

system	System-related show commands
inband	System Inband configuration
queuing	System Inband Queuing Algorithm
clear-pm-counters	clear user space inband queue counters
clear-klm-counters	clear KLM VDC inband queue counters
clear-all-counters	clear all inband queue counters
enable-timestamp	enable timestamping in klm vdc
disable-timestamp	disable timestamping in klm vdc

Command Mode

- /exec

system interface shutdown

[no] system interface shutdown [exclude fex-fabric]

Syntax Description

no	(Optional) Negate a command or set its defaults
system	System configuration commands
interface	Configure system interface config
shutdown	Configure interface shutdown
exclude	(Optional) exclude
fex-fabric	(Optional) fex-fabric

Command Mode

- /exec/configure

system internal acmgrp global lock

system internal acmgrp global lock <acquire-or-release> session <session_id> [pss-only]

Syntax Description

system	System management commands
internal	Commands for internal use
acmgrp	Configure acmgrp internals
global	Global database lock
lock	Lock
<i>acquire-or-release</i>	
session	PPF Session id
<i>session_id</i>	PPF session id
pss-only	(Optional) Force the values to be set and written to PSS

Command Mode

- /exec

system internal acmgrp inject

system internal acmgrp inject <error-type> <err_id>

Syntax Description

system	System management commands
internal	Commands for internal use
acmgrp	Configure acmgrp internals
inject	Inject error to state machine in next available event
<i>error-type</i>	Error type
<i>err_id</i>	Syserr id

Command Mode

- /exec/configure

system internal aclmgr remove policies interface

system internal aclmgr remove policies interface <ifname>

Syntax Description

system	System management commands
internal	Commands for internal use
aclmgr	Configure aclmgr internals
remove	Remove access-lists
policies	Policies
interface	Interface whose policies need to be removed
<i>ifname</i>	Interface name

Command Mode

- /exec/configure

system internal aclmgr vcache

```
system internal aclmgr vcache { { <add_or_rem> vlans <vlans> | reset } interface <ifname> | rebuild }
```

Syntax Description

system	System management commands
internal	Commands for internal use
aclmgr	Configure aclmgr internals
<i>add_or_rem</i>	Add or Remove vlan members to vlans
vcache	Vlan cache ut command, donot use this in production systems
vlans	Vlans which need to be added/removed from the interface
<i>vlans</i>	List of VLANs
reset	Reset all vlans on the interface
rebuild	Rebuild the vlan cache completely by requesting information from vlan manager
interface	Interface(s) which need to be added/removed/reset to/from vlans
<i>ifname</i>	Interface name list

Command Mode

- /exec/configure

system internal clis event-history

```
[no] system internal clis event-history { nvdb | client | errors | parser | ha | cli } size { <size_in_text> | <size_in_bytes> }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
system	System configuration commands
internal	Commands for internal use
clis	cli server
event-history	Event history logs for clis
nvdb	Log of NVDB and PSS events
client	Log of client interaction events
errors	Log of errors
parser	Log of parser events
ha	Log of ha events
cli	Log of command events
size	Enter size
<i>size_in_text</i>	Buffer size
<i>size_in_bytes</i>	Enter an integer value for the event history buffer

Command Mode

- /exec/configure

system internal npacl event-history

```
[no] system internal npacl event-history { acl | ppf | cli | internal } size { <size_in_text> | <size_in_Kbytes>
}
```

Syntax Description

no	(Optional) Negate a command or set its defaults
system	System management commands
internal	Commands for internal use
npacl	Configure NPACL feature
event-history	event history
acl	acl policy history of npacl
ppf	ppf interaction history of npacl
cli	cli history of npacl
internal	internal of npacl
size	Configure the size of the event-hist buffer
<i>size_in_text</i>	Buffer size
<i>size_in_Kbytes</i>	Size of the file in kbytes

Command Mode

- /exec

system internal policy-resync module

system internal policy-resync module <module>

Syntax Description

system	System management commands
internal	Commands for internal use
policy-resync	resync PPF policy
module	resync Module
<i>module</i>	Module number to resync

Command Mode

- /exec

system kernel-trace

system kernel-trace [enable | disable]

Syntax Description

system	system management commands
kernel-trace	kernel tracing
enable	(Optional) enables kernel tracing
disable	(Optional) disables kernel tracing

Command Mode

- /exec

system kgdb

system kgdb

Syntax Description

system	System management commands
kgdb	enables kgdb

Command Mode

- /exec

system memory-thresholds minor

[no] system memory-thresholds minor <minor> severe <severe> critical <crit>

Syntax Description

no	(Optional) Negate a command or set its defaults
system	System configuration commands
memory-thresholds	Set memory thresholds on the card
minor	enter minor threshold
<i>minor</i>	please enter minor memory threshold as % memory
severe	enter severe treshold
<i>severe</i>	please enter severe memory threshold as % memory
critical	enter critical treshold
<i>crit</i>	please enter critical memory threshold as % memory

Command Mode

- /exec/configure

system minlife

system minlife <i0>

Syntax Description

system	System management commands
minlife	Set system minlife (in seconds)
<i>i0</i>	Set minlife

Command Mode

- /exec

system mode maintenance

[no] system mode maintenance [dont-generate-profile] | system mode maintenance [dont-generate-profile | shutdown]

Syntax Description

no	Negate a command or set its defaults
system	System configuration commands
mode	system mode commands
maintenance	system maintenance mode
dont-generate-profile	(Optional) do not generate the maintenance/normal-mode profile
shutdown	(Optional) issue shutdown instead of isolate (default)

Command Mode

- /exec/configure

system mode maintenance on-reload reset-reason

[no] system mode maintenance on-reload reset-reason <reason>

Syntax Description

no	(Optional) Negate a command or set its defaults
system	System configuration commands
mode	system mode commands
maintenance	system maintenance mode
on-reload	on reload maintenance mode configuration
reset-reason	reset reason
<i>reason</i>	

Command Mode

- /exec/configure

system mode maintenance timeout

[no] system mode maintenance timeout <timer-value>

Syntax Description

no	(Optional) Negate a command or set its defaults
system	System configuration commands
mode	system mode commands
maintenance	system maintenance mode
timeout	restart maintenance mode timer with a new value
<i>timer-value</i>	timer value in minutes

Command Mode

- /exec/configure

system module failure-action shutdown

[no] system module failure-action shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
system	system Internal Information
module	module commands
failure-action	Configure module action on failure
shutdown	action on failure - shutdown

Command Mode

- /exec/configure

system no hap-reset

system no hap-reset

Syntax Description

system	System management commands
no	Negate a command or set its defaults
hap-reset	enables resetting of local or remote sup on ha failures

Command Mode

- /exec

system no heartbeat

system no heartbeat

Syntax Description

system	System management commands
no	Negate a command or set its defaults
heartbeat	enables heartbeat

Command Mode

- /exec

system no kgdb

system no kgdb

Syntax Description

system	System management commands
no	Negate a command or set its defaults
kgdb	enables kgdb

Command Mode

- /exec

system no standby manual-boot

system no standby manual-boot

Syntax Description

system	System management commands
no	Negate a command or set its defaults
standby	System standby manual boot
manual-boot	No action taken to force-download standby sup

Command Mode

- /exec

system no statistics

system no statistics

Syntax Description

system	System management commands
no	Negate a command or set its defaults
statistics	disable the sysmgr statistics

Command Mode

- /exec

system no watchdog

system no watchdog

Syntax Description

system	System management commands
no	Negate a command or set its defaults
watchdog	enables watchdog

Command Mode

- /exec

system no watchdog kgdb

system no watchdog kgdb

Syntax Description

system	System management commands
no	Negate a command or set its defaults
watchdog	enables watchdog
kgdb	enter kgdb on watchdog failure

Command Mode

- /exec

system nve ipmc global index-size

system nve ipmc global index-size { <size> | default } | no system nve ipmc global index-size [<size>]

Syntax Description

no	Negate the command or set its defaults
system	System Management Commands
nve	VXLAN interface
ipmc	Configure ipmc index size
global	Configure global ipmc size
index-size	Configure index size
<i>size</i>	ipmc allowed size
default	Default size is 3000

Command Mode

- /exec/configure

system offline

system offline

Syntax Description

system	System management commands
offline	Go offline

Command Mode

- /exec

system pss shrink

system pss shrink

Syntax Description

system	System management commands
pss	PSS commands
shrink	shrink pss files

Command Mode

- /exec

system qos

system qos

Syntax Description

system	System management commands
qos	QoS parameters

Command Mode

- /exec/configure

system release mod-lock uuid

system release mod-lock uuid <uuid-hex> nodeid <nodeid-hex>

Syntax Description

system	System management commands
release	release
mod-lock	module lock
uuid	uuid of the service holding the lock
<i>uuid-hex</i>	uuid
nodeid	node-id
<i>nodeid-hex</i>	nodeid

Command Mode

- /exec

system restart vdc

system restart vdc { <e-vdc2> | <vdc-id> } service name <s0>

Syntax Description

system	System management commands
restart	Restart a service
vdc	VDC number
<i>e-vdc2</i>	Enter VDC <vdc-id>
<i>vdc-id</i>	vdc number
service	Service to be restarted
name	Name of a service
<i>s0</i>	Name of service

Command Mode

- /exec/configure

system routing unknown-unicast-flood

[no] system routing unknown-unicast-flood

Syntax Description

no	(Optional) Negate a command or set its defaults
system	System Management Commands
routing	Layer-3 routing
unknown-unicast-flood	Hardware flood post-routed traffic on SVI if dest-mac->layer2-port binding unknown

Command Mode

- /exec/configure

system standby manual-boot

system standby manual-boot

Syntax Description

system	System management commands
standby	System standby management commands
manual-boot	No action taken to force-download standby sup

Command Mode

- /exec

system standby reload vdc

system standby reload vdc { <e-vdc2> | <i0> }

Syntax Description

system	System management commands
standby	System standby management commands
reload	Reload
vdc	vdc to reload
<i>e-vdc2</i>	Enter VDC <vdc-id>
<i>i0</i>	vdc number

Command Mode

- /exec

system startup-config init

system startup-config init

Syntax Description

system	System management commands
startup-config	System startup-config commands
init	Initialize the startup-configuration

Command Mode

- /exec

system startup-config kill config-update

system startup-config kill config-update

Syntax Description

system	System management commands
startup-config	System startup-config commands
kill	Kill configuration update
config-update	Kill configuration update

Command Mode

- /exec

system startup-config unlock

system startup-config unlock <i0>

Syntax Description

system	System management commands
startup-config	System startup-config commands
unlock	Unlock startup-config
<i>i0</i>	Startup-config lock id

Command Mode

- /exec

system statistics

system statistics

Syntax Description

system	System management commands
statistics	enables sysmgr statistics

Command Mode

- /exec

system switchover

system switchover

Syntax Description

system	System management commands
switchover	Switch over to the standby supervisor

Command Mode

- /exec

system switchover force

system switchover force

Syntax Description

system	System management commands
switchover	Switch over to the standby supervisor
force	Force switch over to the standby supervisor

Command Mode

- /exec

system swover-timeout-reset

[no] system swover-timeout-reset

Syntax Description

no	(Optional) Negate a command or set its defaults
system	System management commands
swover-timeout-reset	switchover timeout and reset

Command Mode

- /exec

system trace

```
{ system trace <i0> | no system trace [ <i0> ] }
```

Syntax Description

no	Negate a command or set its defaults
system	System configuration commands
trace	To configure system trace level
<i>i0</i>	Select the mask

Command Mode

- /exec/configure

system urpf disable

[no] system urpf disable

Syntax Description

no	(Optional) Negate a command or set its defaults
system	System Management Commands
urpf	Manage urpf enable/disable
disable	disable

Command Mode

- /exec/configure

system vlan

system vlan <start-val> reserve | no system vlan <start-val> reserve

Syntax Description

system	system wide configuration
no	Select default reserved vlans group vlan 3968-4094
vlan	Vlan commands
<i>start-val</i>	minimum VLANs value
reserve	reservation

Command Mode

- /exec/configure

system watchdog

system watchdog

Syntax Description

system	System management commands
watchdog	enables watchdog

Command Mode

- /exec