



D Commands

- dampen-igp-metric, on page 5
- dampening, on page 6
- data-pattern, on page 7
- database-mapping, on page 8
- databits, on page 9
- databits, on page 10
- datapath transport mts, on page 11
- db-jid, on page 12
- db-security user, on page 13
- db-table, on page 14
- dead-interval, on page 15
- dead-interval, on page 16
- dead-interval, on page 17
- deadtime, on page 18
- deadtime, on page 19
- deadtime, on page 20
- dec, on page 21
- default-information originate, on page 22
- default-information originate, on page 23
- default-information originate, on page 24
- default-information originate, on page 25
- default-information originate, on page 26
- default-information originate, on page 27
- default-metric, on page 28
- default-metric, on page 29
- default-metric, on page 30
- default-metric, on page 31
- default-metric, on page 32
- default-originate, on page 33
- define, on page 34
- delay, on page 35
- delay, on page 36
- delay, on page 37

- delay, on page 38
- delay restore, on page 39
- delay restore interface-vlan, on page 40
- delete, on page 41
- delete ca-certificate, on page 42
- delete certificate, on page 43
- delete crl, on page 44
- demand-circuit, on page 45
- description, on page 46
- description, on page 47
- description, on page 48
- description, on page 49
- description, on page 50
- description, on page 51
- description, on page 52
- description, on page 53
- description, on page 54
- description, on page 55
- description, on page 56
- description, on page 57
- description, on page 58
- description, on page 59
- description, on page 60
- description, on page 61
- description, on page 62
- description, on page 63
- description, on page 64
- description, on page 65
- description, on page 66
- description, on page 67
- description, on page 68
- description, on page 69
- description, on page 70
- description, on page 71
- dest-ipaddr, on page 72
- dest-port, on page 73
- destination-profile, on page 74
- destination-profile, on page 75
- destination-profile, on page 76
- destination-profile, on page 77
- destination-profile, on page 78
- destination-profile, on page 79
- destination-profile, on page 80
- destination-profile, on page 81
- destination-profile CiscoTAC-1 email-addr, on page 82
- destination-profile CiscoTAC-1 http, on page 83

- destination-profile CiscoTAC-1 message-level, on page 84
- destination-profile CiscoTAC-1 message-size, on page 85
- destination-profile CiscoTAC-1 transport-method email, on page 86
- destination-profile CiscoTAC-1 transport-method http, on page 87
- destination-profile full-txt-destination email-addr, on page 88
- destination-profile full-txt-destination http, on page 89
- destination-profile full-txt-destination message-level, on page 90
- destination-profile full-txt-destination message-size, on page 91
- destination-profile full-txt-destination transport-method email, on page 92
- destination-profile full-txt-destination transport-method http, on page 93
- destination-profile short-txt-destination email-addr, on page 94
- destination-profile short-txt-destination http, on page 95
- destination-profile short-txt-destination message-level, on page 96
- destination-profile short-txt-destination message-size, on page 97
- destination-profile short-txt-destination transport-method email, on page 98
- destination-profile short-txt-destination transport-method http, on page 99
- destination, on page 100
- destination, on page 101
- device-group, on page 102
- diagnostic bootup level, on page 103
- diagnostic eem action aggressive, on page 104
- diagnostic pss shrink, on page 105
- diff-clean, on page 106
- diff-clean all-users, on page 107
- diff, on page 108
- dir, on page 109
- disable-connected-check, on page 110
- disable-memory-alert-check, on page 111
- disable-peer-as-check, on page 112
- disable-peer-as-check, on page 113
- disable-policy-batching, on page 114
- disable, on page 115
- discard-route, on page 116
- discard-route, on page 117
- discovery, on page 118
- distance, on page 119
- distance, on page 120
- distance, on page 121
- distance, on page 122
- distance, on page 123
- distance, on page 124
- distribute-list, on page 125
- distribute, on page 126
- dns, on page 127
- dont-capability-negotiate, on page 128
- dos2nxos, on page 129

- dot1q default dynamic, on page 130
- dot1x default, on page 131
- dot1x default, on page 132
- dot1x mac-auth-bypass, on page 133
- dot1x max-reauth-req, on page 134
- dot1x max-req, on page 135
- dot1x max-req, on page 136
- dot1x port-control, on page 137
- dot1x radius-accounting, on page 138
- dot1x re-authenticate, on page 139
- dot1x re-authentication, on page 140
- dot1x re-authentication, on page 141
- dot1x show credential, on page 142
- dot1x system-auth-control, on page 143
- dot1x timeout quiet-period, on page 144
- dot1x timeout quiet-period, on page 145
- dot1x timeout ratelimit-period, on page 146
- dot1x timeout re-authperiod, on page 147
- dot1x timeout re-authperiod, on page 148
- dot1x timeout server-timeout, on page 149
- dot1x timeout supp-timeout, on page 150
- dot1x timeout tx-period, on page 151
- dot1x timeout tx-period, on page 152
- down-bit-ignore, on page 153
- downlink delay, on page 154
- dscp, on page 155
- dual-active exclude interface-vlan, on page 156
- duplex, on page 157
- duplex, on page 158
- duplex, on page 159
- duplicate-message throttle, on page 160
- dynamic-capability, on page 161
- dynamic-med-interval, on page 162

dampen-igp-metric

dampen-igp-metric <sec> | no dampen-igp-metric

Syntax Description

no	Negate a command or set its defaults
dampen-igp-metric	Dampen IGP metric-related changes
<i>sec</i>	Time interval in seconds

Command Mode

- /exec/configure/router-bgp/router-bgp-af

dampening

```
[no] dampening [ { <half-life> <reuse-limit> <suppress-limit> <max-suppress-time> } | { route-map
<rmap-name> } ]
```

Syntax Description

no	(Optional) Negate a command or set its defaults
dampening	Configure route flap dampening
<i>half-life</i>	(Optional) Decay half life
<i>reuse-limit</i>	(Optional) Value to start reusing a route
<i>suppress-limit</i>	(Optional) Value to start suppressing a route
<i>max-suppress-time</i>	(Optional) Maximum suppress time for stable route
route-map	(Optional) Apply route-map to specify dampening criteria
<i>rmap-name</i>	(Optional) Route-map name

Command Mode

- /exec/configure/router-bgp/router-bgp-af /exec/configure/router-bgp/router-bgp-af-ipv4-
/exec/configure/router-bgp/router-bgp-af-ipv4-mdt /exec/configure/router-bgp/router-bgp-af-
/exec/configure/router-bgp/router-bgp-af-ipv6 /exec/configure/router-bgp/router-bgp-af-
/exec/configure/router-bgp/router-bgp-af-l2vpn-vpls /exec/configure/router-bgp/router-bgp-af-l2vpn-
/exec/configure/router-bgp/router-bgp-af-l2vpn-evpn

data-pattern

```
{ { no | default } data-pattern | data-pattern <hex-pattern> }
```

Syntax Description

no	
default	Set a command to its defaults
data-pattern	Data Pattern
<i>hex-pattern</i>	Data Pattern in Hex

Command Mode

- /exec/configure/ip-sla/udp

database-mapping

```
{ [ no ] database-mapping { <eid-prefix> | <eid-prefix6> } { redistribute | { { <locator> | <locator6> } priority <priority> weight <weight> } } }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
database-mapping	Configure EID-prefix and locator-set for dynamic-EID
<i>eid-prefix</i>	IP EID-prefix for RLOC static mapping
<i>locator</i>	IP address of LISP-VM routers
priority	Configures which Locators from a set are preferred
<i>priority</i>	Lower priority Locator takes preference
weight	Traffic load-spreading among Locators
<i>weight</i>	Specified in a percentage from 0 to 100
redistribute	Used for redistributing into routing protocols

Command Mode

- /exec/configure/lisp-dynamic-eid /exec/configure/vrf/lisp-dynamic-eid

databits

[no] databits <*i0*>

Syntax Description

no	(Optional) Negate a command or set its defaults
databits	Set number of databits per character
<i>i0</i>	Number of data bits

Command Mode

- /exec/configure/com1

databits

[no] databits <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
databits	Set number of databits per character
<i>i0</i>	Number of data bits

Command Mode

- /exec/configure/console

datapath transport mts

[no] datapath transport mts

Syntax Description

no	(Optional) Negate a command or set its defaults
datapath	One Platform datapath
transport	transport for datapath
mts	mts

Command Mode

- /exec/configure/onep

db-jid

[no] db-jid <jid> [key-type <key-type>]

Syntax Description

no	(Optional) Negate a command or set its defaults
db-jid	Jabber ID of database
<i>jid</i>	Enter Jabber ID of database
key-type	(Optional) Query key type for this database
<i>key-type</i>	(Optional)

Command Mode

- /exec/configure/fabric-db/server-xmpp

db-security user

```
[no] db-security user <user> password { 0 <clear> | 7 <encrypted> | <password> } [ shared-secret { 10 <clear> | 7 <encrypted> | <secret> } ]
```

Syntax Description

no	(Optional) Negate a command or set its defaults
db-security	Database Security
user	User ID
<i>user</i>	Enter user ID
password	Password
0	Password that follows should be in clear text
<i>clear</i>	Password in clear text
7	Password that follows should be in encrypted text
<i>encrypted</i>	Encrypted password
<i>password</i>	Enter password in clear text
shared-secret	(Optional) Shared-secret
10	(Optional) Indicates that password that follows should be in clear text
<i>clear</i>	(Optional) Password in clear text
7	(Optional) Password that follows should be in encrypted text
<i>encrypted</i>	(Optional) Encrypted password
<i>secret</i>	(Optional) Enter shared-secret in clear text

Command Mode

- /exec/configure/fabric-db/server-ldap

db-table

[no] db-table <tablename> [key-type <key-type>]

Syntax Description

no	(Optional) Negate a command or set its defaults
db-table	Table name to search
<i>tablename</i>	Enter table name to search
key-type	(Optional) Query key type for this table
<i>key-type</i>	(Optional)

Command Mode

- /exec/configure/fabric-db/server-ldap

dead-interval

```
{ { dead-interval <interval> } | { no dead-interval [ <interval> ] } }
```

Syntax Description

no	Negate a command or set its defaults
dead-interval	Dead interval
<i>interval</i>	(seconds)

Command Mode

- /exec/configure/router-ospf/router-ospf-vlink /exec/configure/router-ospf/vrf/router-ospf-vlink

dead-interval

```
{ { dead-interval <interval> } | { no dead-interval [ <interval> ] } }
```

Syntax Description

no	Negate a command or set its defaults
dead-interval	Dead interval
<i>interval</i>	(seconds)

Command Mode

- /exec/configure/router-ospf3/router-ospf3-vlink /exec/configure/router-ospf3/vrf/router-ospf3-vlink

dead-interval

```
{ { dead-interval <interval> } | { no dead-interval [ <interval> ] } }
```

Syntax Description

no	Negate a command or set its defaults
dead-interval	Dead interval
<i>interval</i>	(seconds)

Command Mode

- /exec/configure/router-ospf/vrf/router-ospf-slink

deadtime

[no] deadtime <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
deadtime	duration for which non-reachable server is skipped
<i>i0</i>	Length of time, in minutes

Command Mode

- /exec/configure/radius

deadtime

[no] deadtime <*i0*>

Syntax Description

no	(Optional) Negate a command or set its defaults
deadtime	duration for which non-reachable server is skipped
<i>i0</i>	Length of time, in minutes

Command Mode

- /exec/configure/ldap

deadtime

[no] deadtime <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
deadtime	duration for which non-reachable server is skipped
<i>i0</i>	Length of time, in minutes

Command Mode

- /exec/configure/tacacs+

dec

dec <expr>

Syntax Description

dec	calculator with results in decimal format
<i>expr</i>	the expression to compute (integer arithmetics)

Command Mode

- /exec

default-information originate

[no] default-information originate [always] [route-map <map-name>]

Syntax Description

no	(Optional) Negate a command or set its defaults
default-information	RIP control distribution of default route
originate	RIP distribute a default route
always	(Optional) RIP always advertise default route
route-map	(Optional) Policy to constrain redistribution
<i>map-name</i>	(Optional) Route-map name

Command Mode

- /exec/configure/router-rip/router-rip-af-common /exec/configure/router-rip/router-rip-vrf-af-common

default-information originate

[no] default-information originate [always] [route-map <policy-name>]

Syntax Description

no	(Optional) Negate a command or set its defaults
default-information	Control distribution of default route
originate	Distribute a default route
always	(Optional) Always advertise default route
route-map	(Optional) Policy to control distribution of default route
<i>policy-name</i>	(Optional) Route-map name

Command Mode

- /exec/configure/router-ospf3/router-ospf3-af-ipv6 /exec/configure/router-ospf3/vrf/router-ospf3-af-ipv6

default-information originate

[no] default-information originate

Syntax Description

no	(Optional) Negate a command or set its defaults
default-information	Control distribution of default information
originate	Distribute a default route

Command Mode

- /exec/configure/router-bgp/router-bgp-af /exec/configure/router-bgp/router-bgp-af-ipv6-label
/exec/configure/router-bgp/router-bgp-af-ipv4-label

default-information originate

[no] default-information originate [always] [route-map <map>]

Syntax Description

no	(Optional) Negate a command or set its defaults
default-information	Control origination of a default route
originate	Originate a default route
always	(Optional) Always advertise default route
route-map	(Optional) Use a route-map for default route metrics
<i>map</i>	(Optional) Route-map name

Command Mode

- /exec/configure/router-eigrp/router-eigrp-vrf-common /exec/configure/router-eigrp/router-eigrp-af-common

default-information originate

[no] default-information originate [always] [route-map <policy-name>]

Syntax Description

no	(Optional) Negate a command or set its defaults
default-information	Control distribution of default route
originate	Distribute a default route
always	(Optional) Always advertise default route
route-map	(Optional) Policy to control distribution of default route
<i>policy-name</i>	(Optional) Route-map name

Command Mode

- /exec/configure/router-ospf /exec/configure/router-ospf/vrf

default-information originate

[no] default-information originate [always] [route-map <map-name>]

Syntax Description

no	(Optional) Negate a command or set its defaults
default-information	Control origination of a default route
originate	Originate a default route
always	(Optional) Always advertise default route
route-map	(Optional) Route-map to announce default routes
<i>map-name</i>	(Optional) A 'routing-rules' route-map name

Command Mode

- /exec/configure/router-isis/router-isis-vrf-common /exec/configure/router-isis/router-isis-af-common

default-metric

default-metric <metric> | no default-metric [<metric>]

Syntax Description

no	Negate a command or set its defaults
default-metric	RIP default metric
<i>metric</i>	RIP metric value

Command Mode

- /exec/configure/router-rip/router-rip-af-common /exec/configure/router-rip/router-rip-vrf-af-common

default-metric

{ default-metric <cost> } | { no default-metric [<cost>] }

Syntax Description

no	Negate a command or set its defaults
default-metric	Specify default metric for redistributed routes
<i>cost</i>	Metric value

Command Mode

- /exec/configure/router-ospf3/router-ospf3-af-ipv6 /exec/configure/router-ospf3/vrf/router-ospf3-af-ipv6

default-metric

[no] default-metric <metric>

Syntax Description

no	(Optional) Negate a command or set its defaults
default-metric	Set metric of redistributed routes
<i>metric</i>	Default Metric

Command Mode

- /exec/configure/router-bgp/router-bgp-af

default-metric

```
{ { default-metric <bw> <delay> <rel> <load> <mtu> } | { no default-metric [ <bw> <delay> <rel> <load> <mtu> ] } }
```

Syntax Description

<code>no</code>	Negate a command or set its defaults
<code>default-metric</code>	Set metric of redistributed routes
<code>bw</code>	Bandwidth in Kbits per second
<code>delay</code>	Delay metric
<code>rel</code>	Reliability metric where 255 is 100% reliable
<code>load</code>	Effective bandwidth metric (Loading) where 255 is 100% loaded
<code>mtu</code>	Maximum Transmission Unit metric of the path

Command Mode

- /exec/configure/router-eigrp/router-eigrp-vrf-common /exec/configure/router-eigrp/router-eigrp-af-common

default-metric

{ default-metric <cost> } | { no default-metric [<cost>] }

Syntax Description

no	Negate a command or set its defaults
default-metric	Specify default metric for redistributed routes
<i>cost</i>	Metric value

Command Mode

- /exec/configure/router-ospf /exec/configure/router-ospf/vrf

default-originate

[no | default] default-originate [route-map <rmap-name>]

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
default-originate	Originate a default toward this peer
route-map	(Optional) Route-map to specify criteria for originating default
<i>rmap-name</i>	(Optional) Route-map name

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af

define

[no] define <paramname> [<paramtype>] [<paramdesc>]

Syntax Description

no	(Optional) Negate a command or set its defaults
define	Define a parameter
<i>paramname</i>	Enter the name of the parameter
<i>paramtype</i>	(Optional) param type
<i>paramdesc</i>	(Optional) Enter the parameter description

Command Mode

- /exec/configure/param-list

delay

delay { { up <up_delay> [down <down_delay>] } | { down <down_delay> [up <up_delay>] } } | no delay

Syntax Description

no	Negate a command or set its defaults
delay	Tracking delay
up	Delay up change notification
<i>up_delay</i>	Seconds to delay
down	(Optional) Delay down change notification
<i>down_delay</i>	(Optional) Seconds to delay

Command Mode

- /exec/configure/track /exec/configure/tr-list-bool /exec/configure/tr-list-thrp /exec/configure/tr-list-thrw

delay

delay <delay_val> | no delay [<delay_val>]

Syntax Description

no	Negate a command or set its defaults
delay	Specify interface throughput delay
<i>delay_val</i>	Throughput delay (tens of microseconds)

Command Mode

- /exec/configure/if-ether-sub /exec/configure/if-ether-sub-p2p /exec/configure/if-port-channel-sub

delay

delay <delay_val> | no delay [<delay_val>]

Syntax Description

no	Negate a command or set its defaults
delay	Specify interface throughput delay
<i>delay_val</i>	Throughput delay (tens of microseconds)

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-non-member /exec/configure/if-port-channel /exec/configure/if-ethernet-all /exec/configure/if-ethernet-p2p /exec/configure/if-remote-ethernet-sub /exec/configure/if-port-channel-range

delay

delay <microseconds> | no delay

Syntax Description

no	Negate a command or set its defaults
delay	Specify interface throughput delay
<i>microseconds</i>	Throughput delay (tens of microseconds)

Command Mode

- /exec/configure/if-vlan-common

delay restore

delay restore <time-out> | no delay restore

Syntax Description

no	Negate a command or set its defaults
delay	Initialization delay
restore	Delay after restoring peer-link
<i>time-out</i>	Delay in bringing up the vPC links (in seconds)

Command Mode

- /exec/configure/vpc-domain

delay restore interface-vlan

delay restore interface-vlan <time-out> | no delay restore interface-vlan

Syntax Description

no	Negate a command or set its defaults
delay	Initialization delay
restore	Delay after restoring peer-link
interface-vlan	Delay in bringing-up interface-vlan
<i>time-out</i>	Delay in bringing up the interface-vlan (in seconds)

Command Mode

- /exec/configure/vpc-domain

delete

delete { <uri0> | <uri1> | <uri2> } [no-prompt]

Syntax Description

delete	delete a file or directory
<i>uri0</i>	Delete a file or directory
<i>uri1</i>	Delete a file or directory on expansion flash
<i>uri2</i>	Directory or filename on logflash
no-prompt	(Optional) Do not prompt for multiple deletion of files

Command Mode

- /exec

delete ca-certificate

delete ca-certificate

Syntax Description

delete	Delete the certificates
ca-certificate	Delete the ca certificates

Command Mode

- /exec/configure/trustpoint

delete certificate

delete certificate [force]

Syntax Description

delete	Delete the certificates
certificate	Delete the identity certificate
force	(Optional) Force delete the identity certificate

Command Mode

- /exec/configure/trustpoint

delete crl

delete crl

Syntax Description

delete	Delete the certificates
crl	Delete the CRL

Command Mode

- /exec/configure/trustpoint

demand-circuit

[no] demand-circuit

Syntax Description

no	(Optional) Negate a command or set its defaults
demand-circuit	OSPF Demand circuit

Command Mode

- /exec/configure/router-ospf/vrf/router-ospf-slink

description

description <describe> | { no | default } description [<describe>]

Syntax Description

no	Negate a command or set its defaults
default	Inherit values from a peer template
description	Neighbor specific description
<i>describe</i>	Upto 80 characters describing this neighbor

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor-sess

description

description [port-profile] <desc_line> | no description [port-profile] [<desc_line>]

Syntax Description

no	Negate a command or set its defaults
description	Enter port-profile description of maximum 80 characters
port-profile	(Optional) Hack for conf-sync
<i>desc_line</i>	Enter port-profile description of maximum 80 characters

Command Mode

- /exec/configure/port-profile

description

description <desc_line> | no description [<desc_line>]

Syntax Description

no	Negate a command or set its defaults
description	Enter description of maximum 254 characters
<i>desc_line</i>	Description of maximum 254 characters

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-port-channel /exec/configure/if-eth-port-channel /exec/configure/if-ether-sub /exec/configure/if-ether-sub-p2p /exec/configure/if-port-channel-sub /exec/configure/if-mgmt-ether /exec/configure/if-loopback /exec/configure/if-nve /exec/configure/if-ethernet-all /exec/configure/if-ethernet-p2p /exec/configure/if-remote-ethernet-sub /exec/configure/if-port-channel-range

description

description <desc_line> | no description [<desc_line>]

Syntax Description

no	Negate a command or set its defaults
description	Enter description of maximum 80 characters
<i>desc_line</i>	Description of maximum 80 characters

Command Mode

- /exec/configure/if-overlay /exec/configure/if-te /exec/configure/if-nve

description

{ description <desc-str> | no description [<desc-str>] }

Syntax Description

no	Negate a command or set its defaults
description	Class-Map description
<i>desc-str</i>	Description of this class-map (up to 200 characters)

Command Mode

- /exec/configure/class-map/type/uf

description

```
{ description <desc-str> | no description [ <desc-str> ] }
```

Syntax Description

no	Negate a command or set its defaults
description	Policy-Map description
<i>desc-str</i>	Description of this policy-map (up to 200 characters)

Command Mode

- /exec/configure/policy-map/type/uf

description

```
{ [ no ] description <text> }
```

Syntax Description

description	description for this profile
<i>text</i>	description

Command Mode

- /exec/configure/dot1x-cred

description

{ description <line> } | { no description }

Syntax Description

no	Negate a command or set its defaults
description	Description of the VRF
<i>line</i>	VRF description string

Command Mode

- /exec/configure/vrf

description

```
{ description <description_text> | no description [ <description_text> ] }
```

Syntax Description

no	Negate a command or set its defaults
description	Virtual service description
<i>description_text</i>	Description of this virtual service

Command Mode

- /exec/configure/virt-serv

description

description <desc_line> | no description

Syntax Description

no	Negate a command or set its defaults
description	Interface specific description
<i>desc_line</i>	Up to 255 characters describing this interface

Command Mode

- /exec/configure/if-vlan-common

description

```
{ [ no ] description <descrip-string> }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
description	Provide a description string for the LISP site
<i>descrip-string</i>	Description string

Command Mode

- /exec/configure/lisp-site /exec/configure/vrf/lisp-site

description

[no] description <description>

Syntax Description

no	(Optional) Negate a command or set its defaults
description	Configure description for the policy
<i>description</i>	Description for the policy

Command Mode

- /exec/configure/event-manager-applet

description

[no] description

Syntax Description

no	Negate a command or set its defaults
description	Configure description for the policy

Command Mode

- /exec/configure/event-manager-applet

description

{ description <line> | no description }

Syntax Description

no	Negate a command or set its defaults
description	Description of the route-map
<i>line</i>	Route-map description string

Command Mode

- /exec/configure/route-map

description

description <line> | no description

Syntax Description

no	Negate a command or set its defaults
description	Add a description for the role
<i>line</i>	Enter the description string(can include spaces)

Command Mode

- /exec/configure/role

description

description <desc_line> | no description [<desc_line>]

Syntax Description

no	Negate a command or set its defaults
description	Enter description of maximum 254 characters
<i>desc_line</i>	Description of maximum 254 characters

Command Mode

- /exec/configure/if-any-tunnel

description

{ description <desc-str> | no description [<desc-str>] }

Syntax Description

no	Negate a command or set its defaults
description	Class-Map description
<i>desc-str</i>	Description of this class-map (up to 200 characters)

Command Mode

- /exec/configure/class-map

description

[no] description <desc-str>

Syntax Description

no	(Optional) Negate a command or set its defaults
description	Class-Map description
<i>desc-str</i>	Description of this class-map (up to 200 characters)

Command Mode

- /exec/configure/class-map/type/queuing

description

{ description <desc-str> | no description [<desc-str>] }

Syntax Description

no	Negate a command or set its defaults
description	Table-Map description
<i>desc-str</i>	Description of this table-map (up to 200 characters)

Command Mode

- /exec/configure/table-map

description

```
{ description <desc-str> | no description [ <desc-str> ] }
```

Syntax Description

no	Negate a command or set its defaults
description	Policy-Map description
<i>desc-str</i>	Description of this policy-map (up to 200 characters)

Command Mode

- /exec/configure/policy-map /exec/configure/policy-map/type/queuing

description

[no] description [<desc>] | description <desc>

Syntax Description

no	Negate a command or set its defaults
description	Group description
<i>desc</i>	(Optional) Up to 80 characters describing this group

Command Mode

- /exec/configure/if-eth-any/vrrpv3

description

[no] description | description <desc>

Syntax Description

no	(Optional) Negate a command or set its defaults
description	Pathway description
<i>desc</i>	Up to 80 characters describing this pathway

Command Mode

- /exec/configure/if-eth-any/vrrs

description

{ [no] description <line> | no description }

Syntax Description

description	Provide a description for this Flow Record
<i>line</i>	Record description string (63 characters maximum)

Command Mode

- /exec/configure/nfm-record

description

{ [no] description <line> | no description }

Syntax Description

description	Provide a description for this Flow Monitor
<i>line</i>	Monitor description string (63 characters maximum)

Command Mode

- /exec/configure/nfm-monitor

description

{ [no] description <line> | no description }

Syntax Description

description	Provide a description for this Flow Exporter
<i>line</i>	Monitor description string (63 characters maximum)

Command Mode

- /exec/configure/nfm-exporter

description

{ [no] description <line> | no description }

Syntax Description

description	Provide a description for this Flow Sampler
<i>line</i>	Sampler description string (63 characters maximum)

Command Mode

- /exec/configure/nfm-sampler

dest-ipaddr

```
{ { no | default } dest-ipaddr | dest-ipaddr { <ip-address> | <hostname> } }
```

Syntax Description

no	Negate a command or set its defaults
default	Set a command to its defaults
dest-ipaddr	Destination ip address
<i>ip-address</i>	IP address, broadcast disallowed
<i>hostname</i>	IP Hostname, broadcast disallowed

Command Mode

- /exec/configure/ip-sla/udp /exec/configure/ip-sla/jitter /exec/configure/ip-sla/tcp

dest-port

{ { no | default } dest-port | dest-port <port> }

Syntax Description

no	
default	Set a command to its defaults
dest-port	Destination port
<i>port</i>	udp port number

Command Mode

- /exec/configure/ip-sla/udp /exec/configure/ip-sla/jitter /exec/configure/ip-sla/tcp

destination-profile

[no] destination-profile <s0>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
s0	User defined destination profile name

Command Mode

- /exec/configure/callhome

destination-profile

[no] destination-profile <s0> email-addr <s1>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
s0	User defined destination profile name
email-addr	Add email addr
s1	Provide email address, example: jdow@xyz.com

Command Mode

- /exec/configure/callhome

destination-profile

[no] destination-profile <s4> { http <s2> }

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
s4	User defined destination profile name
http	Add http or https url
s2	Provide http or https url, example1: http://site.com/services/callserv example2: https://site2.com/serv/CALL

Command Mode

- /exec/configure/callhome

destination-profile

[no] destination-profile <s5> transport-method email

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
s5	User defined destination profile name
transport-method	Callhome message sending transport-method
email	email transport-method

Command Mode

- /exec/configure/callhome

destination-profile

[no] destination-profile <s6> transport-method http

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
s6	User defined destination profile name
transport-method	Callhome message sending transport-method
http	http transport-method

Command Mode

- /exec/configure/callhome

destination-profile

destination-profile <s0> format { full-txt | short-txt | XML }

Syntax Description

destination-profile	Configure destination profiles
<i>s0</i>	User defined destination profile name
format	Callhome message format (default XML)
full-txt	Plain text message format
short-txt	Short text message format
XML	XML message format

Command Mode

- /exec/configure/callhome

destination-profile

destination-profile <s0> message-level <i0>

Syntax Description

destination-profile	Configure destination profiles
<i>s0</i>	User defined destination profile name
message-level	Callhome message level(0-lowest urgency, 9-highest urgency)
<i>i0</i>	

Command Mode

- /exec/configure/callhome

destination-profile

destination-profile <*s0*> message-size <*i0*>

Syntax Description

destination-profile	Configure destination profiles
<i>s0</i>	User defined destination profile name
message-size	Configure maximum message size (default 2500000)
<i>i0</i>	Provide maximum possible message size

Command Mode

- /exec/configure/callhome

destination-profile CiscoTAC-1 email-addr

[no] destination-profile CiscoTAC-1 email-addr <s0>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
CiscoTAC-1	Configure destination profile for XML message
email-addr	Add email addr
s0	Provide email address, example: jdow@xyz.com

Command Mode

- /exec/configure/callhome

destination-profile CiscoTAC-1 http

[no] destination-profile CiscoTAC-1 http <s0>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
CiscoTAC-1	Configure destination profile for XML message
http	Add http or https url
s0	Provide http or https url, example1: http://site.com/services/callserv example2: https://site2.com/serv/CALL

Command Mode

- /exec/configure/callhome

destination-profile CiscoTAC-1 message-level

destination-profile CiscoTAC-1 message-level <i0>

Syntax Description

destination-profile	Configure destination profiles
CiscoTAC-1	Configure destination profile for XML message
message-level	Callhome message level(0-lowest urgency, 9-highest urgency)
<i>i0</i>	

Command Mode

- /exec/configure/callhome

destination-profile CiscoTAC-1 message-size

destination-profile CiscoTAC-1 message-size <i0>

Syntax Description

destination-profile	Configure destination profiles
CiscoTAC-1	Configure destination profile for XML message
message-size	Configure maximum message size (default 5000000)
<i>i0</i>	Provide maximum possible message size

Command Mode

- /exec/configure/callhome

destination-profile CiscoTAC-1 transport-method email

[no] destination-profile CiscoTAC-1 transport-method email

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
CiscoTAC-1	Configure destination profile for XML message
transport-method	Callhome message sending transport-method
email	email transport-method

Command Mode

- /exec/configure/callhome

destination-profile CiscoTAC-1 transport-method http

[no] destination-profile CiscoTAC-1 transport-method http

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
CiscoTAC-1	Configure destination profile for XML message
transport-method	Callhome message sending transport-method
http	http transport-method

Command Mode

- /exec/configure/callhome

destination-profile full-txt-destination email-addr

[no] destination-profile full-txt-destination email-addr <s0>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
full-txt-destination	Configure destination profile for plain txt message
email-addr	Add email addr
s0	Provide email address, example: jdow@xyz.com

Command Mode

- /exec/configure/callhome

destination-profile full-txt-destination http

[no] destination-profile full-txt-destination http <s0>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
full-txt-destination	Configure destination profile for plain txt message
http	Add http or https url
s0	Provide http or https url, example1: http://site.com/services/callserv example2: https://site2.com/serv/CALL

Command Mode

- /exec/configure/callhome

destination-profile full-txt-destination message-level

destination-profile full-txt-destination message-level <i0>

Syntax Description

destination-profile	Configure destination profiles
full-txt-destination	Configure destination profile for plain txt message
message-level	Callhome message level(0-lowest urgency, 9-highest urgency)
<i>i0</i>	

Command Mode

- /exec/configure/callhome

destination-profile full-txt-destination message-size

destination-profile full-txt-destination message-size <i0>

Syntax Description

destination-profile	Configure destination profiles
full-txt-destination	Configure destination profile for plain txt message
message-size	Configure maximum message size (default 2500000)
<i>i0</i>	Provide maximum possible message size

Command Mode

- /exec/configure/callhome

destination-profile full-txt-destination transport-method email

[no] destination-profile full-txt-destination transport-method email

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
full-txt-destination	Configure destination profile for plain txt message
transport-method	Callhome message sending transport-method
email	email transport-method

Command Mode

- /exec/configure/callhome

destination-profile full-txt-destination transport-method http

[no] destination-profile full-txt-destination transport-method http

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
full-txt-destination	Configure destination profile for plain txt message
transport-method	Callhome message sending transport-method
http	http transport-method

Command Mode

- /exec/configure/callhome

destination-profile short-txt-destination email-addr

[no] destination-profile short-txt-destination email-addr <s0>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
short-txt-destination	Configure destination profile for short txt message
email-addr	Add email addr
s0	Provide email address, example: jdow@xyz.com

Command Mode

- /exec/configure/callhome

destination-profile short-txt-destination http

[no] destination-profile short-txt-destination http <s0>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
short-txt-destination	Configure destination profile for short txt message
http	Add http or https url
s0	Provide http or https url, example1: http://site.com/services/callserv example2: https://site2.com/serv/CALL

Command Mode

- /exec/configure/callhome

destination-profile short-txt-destination message-level

destination-profile short-txt-destination message-level <i0>

Syntax Description

destination-profile	Configure destination profiles
short-txt-destination	Configure destination profile for short txt message
message-level	Callhome message level(0-lowest urgency, 9-highest urgency)
<i>i0</i>	

Command Mode

- /exec/configure/callhome

destination-profile short-txt-destination message-size

destination-profile short-txt-destination message-size <i0>

Syntax Description

destination-profile	Configure destination profiles
short-txt-destination	Configure destination profile for short txt message
message-size	Configure maximum message size (default 4000)
<i>i0</i>	

Command Mode

- /exec/configure/callhome

destination-profile short-txt-destination transport-method email

[no] destination-profile short-txt-destination transport-method email

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
short-txt-destination	Configure destination profile for short txt message
transport-method	Callhome message sending transport-method
email	email transport-method

Command Mode

- /exec/configure/callhome

destination-profile short-txt-destination transport-method http

[no] destination-profile short-txt-destination transport-method http

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
short-txt-destination	Configure destination profile for short txt message
transport-method	Callhome message sending transport-method
http	http transport-method

Command Mode

- /exec/configure/callhome

destination

[no] destination | destination <ipaddr>

Syntax Description

no	Negate a command or set its defaults
destination	destination of tunnel
<i>ipaddr</i>	ip address (A.B.C.D)

Command Mode

- /exec/configure/if-te

destination

```
{ [ no ] destination { <ipaddr> | <ipv6addr> } [ use-vrf { <vrf_name> | <vrf-known-name> } ] | no destination }
```

Syntax Description

<code>destination</code>	Specify the destination address
<code>ipaddr</code>	Destination IP address for collector
<code>use-vrf</code>	(Optional) Optional VRF label
<code>vrf_name</code>	(Optional) VRF name
<code>vrf-known-name</code>	(Optional) Known VRF name

Command Mode

- /exec/configure/nfm-exporter

device-group

{ device-group <name> } | { no device-group <name> }

Syntax Description

no	Negate a command or set its defaults
device-group	ITD device group
<i>name</i>	ITD device group name

Command Mode

- /exec/configure/itd

diagnostic bootup level

[no] diagnostic bootup level

Syntax Description

no	Negate a command or set its defaults
diagnostic	Diagnostic commands
bootup	Configure Diagnostic for bootup
level	Select diagnostic level

Command Mode

- /exec/configure

diagnostic eem action aggressive

[no] diagnostic eem action aggressive

Syntax Description

no	(Optional) Negate a command or set its defaults
diagnostic	Diagnostic commands
eem	Configure Diagnostic for eem
action	Select diagnostic action
aggressive	Take aggressive default actions

Command Mode

- /exec/configure

diagnostic pss shrink

diagnostic pss shrink

Syntax Description

diagnostic	Diagnostic commands
pss	PSS command
shrink	compact the diag_port_lb PSS

Command Mode

- /exec

diff-clean

diff-clean [all-sessions]

Syntax Description

diff-clean	remove temp files created by ' diff' filters
all-sessions	(Optional) remove ' diff' temp files from all sessions (past and present!) of current user

Command Mode

- /exec

diff-clean all-users

diff-clean all-users

Syntax Description

diff-clean	remove temp files created by ' diff' filters
all-users	remove ' diff' temp files from all sessions (past and present!) of all users

Command Mode

- /exec

diff

diff [again | echo | -c [<lines>] | -b | -B | -i | -I <regexp> | -y | --left-column | -W <columns> | -q | -s] +

Syntax Description

	Pipe command output to filter
diff	show difference between current and previous invocation (creates temp files: remove them with 'diff-clean' command and dont use it on commands with big outputs, like 'show tech!')
again	(Optional) dont create new file: use old ones, just change display options or add more filters
echo	(Optional) echo the current file (only effective if no old file)
-c	(Optional) set number of lines of context (default 3)
<i>lines</i>	(Optional) number of lines of context
-b	(Optional) Ignore changes in amount of white space
-B	(Optional) Ignore changes that just insert or delete blank lines
-i	(Optional) Ignore changes in case
-I	(Optional) Ignore changes that just insert or delete lines that match regexp
<i>regexp</i>	(Optional) regexp of lines to ignore
-y	(Optional) Use the side by side output format
--left-column	(Optional) Print only the left column of two common lines in side by side format
-W	(Optional) Use an output width of <columns> in side by side format
<i>columns</i>	(Optional) Use an output width of <columns> in side by side format
-q	(Optional) Report only whether the files differ, not the details of the differences
-s	(Optional) Report when two files are the same

Command Mode

- /output

dir

dir [<uri0> | <uri1> | <uri2>]

Syntax Description

dir	list files in a directory
<i>uri0</i>	(Optional) Directory or filename
<i>uri1</i>	(Optional) Directory or filename on expansion flash
<i>uri2</i>	(Optional) Directory or filename on log flash

Command Mode

- /exec

disable-connected-check

[no | default] disable-connected-check

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
disable-connected-check	Disable check for directly connected peer

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor-sess

disable-memory-alert-check

[no] disable-memory-alert-check

Syntax Description

no	(Optional) Negate a command or set its defaults
disable-memory-alert-check	Disables the system memory alert handling in BGP

Command Mode

- /exec/configure/router-bgp

disable-peer-as-check

[no | default] disable-peer-as-check

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
disable-peer-as-check	Disable checking of peer AS-number while advertising

Command Mode

- /exec/configure/router-bgp/router-bgp-vrf-neighbor/router-bgp-vrf-neighbor-af-ipv4
/exec/configure/router-bgp/router-bgp-vrf-neighbor/router-bgp-vrf-neighbor-af-ipv6
/exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af

disable-peer-as-check

[no | default] disable-peer-as-check

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
disable-peer-as-check	Disable checking of peer AS-number while advertising

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-l2vpn-evpn

disable-policy-batching

[no] disable-policy-batching [{ ipv4 | ipv6 } prefix-list <prfxlist-name>]

Syntax Description

no	(Optional) Negate a command or set its defaults
disable-policy-batching	Disable batching evaluation of outbound policy for a peer
ipv4	(Optional) IPv4 address-family
ipv6	(Optional) IPv6 address-family
prefix-list	(Optional) Apply prefix-list
<i>prfxlist-name</i>	(Optional) Name of prefix-list

Command Mode

- /exec/configure/router-bgp

disable

disable

Syntax Description

disable	disable callhome
---------	------------------

Command Mode

- /exec/configure/callhome

discard-route

[no] discard-route { external | internal }

Syntax Description

no	(Optional) Negate a command or set its defaults
discard-route	Install discard route
external	External route
internal	Internal route

Command Mode

- /exec/configure/router-ospf /exec/configure/router-ospf/vrf

discard-route

[no] discard-route { external | internal }

Syntax Description

no	(Optional) Negate a command or set its defaults
discard-route	Install discard route
external	External route
internal	Internal route

Command Mode

- /exec/configure/router-ospf3 /exec/configure/router-ospf3/vrf

discovery

```
discovery { quick-start | hello { holdtime <link-hello-holdtime> | interval <link-hello-intvl> } | targeted-hello
{ accept [ from <pfx-list> ] | tgt-holdtime <tgt-hello-holdtime> | tgt-interval <tgt-hello-intvl> } |
ignore-transport-address | omit-transport-address | spoofing } | no discovery { quick-start | hello { holdtime |
interval } | targeted-hello { accept | tgt-holdtime | tgt-interval } | ignore-transport-address | omit-transport-address
| spoofing }
```

Syntax Description

no	Negate a command or set its defaults
discovery	LDP discovery
quick-start	Enable quick LDP Hello transmissions on interface up
hello	LDP discovery Hello
interval	LDP discovery Hello interval
holdtime	LDP discovery Hello holdtime
<i>link-hello-holdtime</i>	Holdtime in seconds
<i>link-hello-intvl</i>	Hello interval in seconds
targeted-hello	LDP discovery Targeted Hello
accept	Accept targeted hellos
from	(Optional) Prefix list to specify acceptable targeted hello sources
<i>pfx-list</i>	(Optional) Name of prefix list
tgt-holdtime	LDP discovery Targeted Hello holdtime
<i>tgt-hello-holdtime</i>	Holdtime in seconds
tgt-interval	LDP discovery Targeted Hello interval
<i>tgt-hello-intvl</i>	Hello interval in seconds
ignore-transport-address	
omit-transport-address	
spoofing	

Command Mode

- /exec/configure/ldp

distance

distance <distance> | no distance [<distance>]

Syntax Description

no	Negate a command or set its defaults
distance	RIP administrative distance
<i>distance</i>	RIP administrative distance

Command Mode

- /exec/configure/router-rip/router-rip-af-common /exec/configure/router-rip/router-rip-vrf-af-common

distance

distance <admin-dist> | no distance [<admin-dist>]

Syntax Description

no	Negate a command or set its defaults
distance	OSPFv3 administrative distance
<i>admin-dist</i>	administrative distance value

Command Mode

- /exec/configure/router-ospf3/router-ospf3-af-ipv6 /exec/configure/router-ospf3/vrf/router-ospf3-af-ipv6

distance

distance <ebgp-dist> <ibgp-dist> <local-dist> | no distance [<ebgp-dist> <ibgp-dist> <local-dist>]

Syntax Description

no	Negate a command or set its defaults
distance	Configure administrative distance
<i>ebgp-dist</i>	Distance for EBGp routes
<i>ibgp-dist</i>	Distance for IBGP routes
<i>local-dist</i>	Distance for local routes

Command Mode

- /exec/configure/router-bgp/router-bgp-af

distance

```
{ { distance <int-distance> <ext-distance> } | { no distance [ <int-distance> <ext-distance> ] } }
```

Syntax Description

no	Negate a command or set its defaults
distance	Define an administrative distance
<i>int-distance</i>	Distance for internal routes
<i>ext-distance</i>	Distance for external routes

Command Mode

- /exec/configure/router-eigrp/router-eigrp-vrf-common /exec/configure/router-eigrp/router-eigrp-af-common

distance

distance <admin-dist> | no distance [<admin-dist>]

Syntax Description

no	Negate a command or set its defaults
distance	OSPF administrative distance
<i>admin-dist</i>	administrative distance value

Command Mode

- /exec/configure/router-ospf /exec/configure/router-ospf/vrf

distance

distance <admin-dist> | no distance [<admin-dist>]

Syntax Description

no	Negate a command or set its defaults
distance	Administrative distance
<i>admin-dist</i>	Distance value

Command Mode

- /exec/configure/router-isis/router-isis-vrf-common /exec/configure/router-isis/router-isis-af-common

distribute-list

[no] distribute-list { { route-map <map> } | { prefix-list <list> } } { in | out } <interface>

Syntax Description

no	(Optional) Negate a command or set its defaults
distribute-list	Filter networks in routing updates
route-map	Use a route-map for route filtering
<i>map</i>	Route-map name
prefix-list	Use a prefix-list for route filtering
<i>list</i>	Reference to prefix-list name
in	Filter incoming routing updates
out	Filter outgoing routing updates
<i>interface</i>	Interface name

Command Mode

- /exec/configure/router-igrp/router-igrp-vrf-common /exec/configure/router-igrp/router-igrp-af-common

distribute

```
{ { distribute <src-level> into <dst-level> { { route-map { <map-name> | <rtr_pol_name> } } | all } } | { no
distribute <src-level> into <dst-level> [ { route-map { <map-name> | <rtr_pol_name> } } | all ] } }
```

Syntax Description

no	Negate a command or set its defaults
distribute	Distribute routes between ISIS levels
<i>src-level</i>	Route-distribution between levels
<i>dst-level</i>	Route-distribution between levels
route-map	Route Map to constrain distribution
into	from level-n into level-m
<i>map-name</i>	A 'routing-rules' route-map name
<i>rtr_pol_name</i>	
all	Distribute all level-n routes

Command Mode

- /exec/configure/router-isis/router-isis-vrf-common /exec/configure/router-isis/router-isis-af-common

dns

```
[no] dns { <WORD> } { name-server { <hostname> | <ip-address> } } { [ source-ip { <source-ip-hostname> | <source-ip-address> } ] | [ source-port <src-port> ] } +
```

Syntax Description

no	(Optional)
<i>source-ip</i>	(Optional) source-port
<i>src-port</i>	(Optional)
dns	DNS Operation
<i>WORD</i>	Target IP Address or Hostname
name-server	Name Server
<i>hostname</i>	Destination hostname, broadcast disallowed
<i>ip-address</i>	Destination IP address, broadcast disallowed
<i>source-ip-hostname</i>	(Optional) source IP hostname, broadcast disallowed
<i>source-ip-address</i>	(Optional) source IP address, broadcast disallowed
source-port	(Optional) Source Port

Command Mode

- /exec/configure/ip-sla

dont-capability-negotiate

[no | default] dont-capability-negotiate

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
dont-capability-negotiate	Don't negotiate capability with this neighbor

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor-sess

dos2nxos

dos2nxos <uri0>

Syntax Description

dos2nxos	DOS to NXOS text file format converter
<i>uri0</i>	Filename to be displayed

Command Mode

- /exec

dot1q default dynamic

{ dot1q default dynamic } | { no dot1q default }

Syntax Description

no	Negate a command or set its defaults
dynamic	Dynamic Profile Map: Retrieve profile name from the external server
dot1q	Dot1Q Encapsulation
default	Default (wildcard). Match any dot1q when there is no specific dot1q mapping configured

Command Mode

- /exec/configure/profile-map /exec/configure/profile-map-global

dot1x default

dot1x default

Syntax Description

dot1x	dot1x configuration commands
-------	------------------------------

Command Mode

- /exec/configure

dot1x default

dot1x default

Syntax Description

dot1x	dot1x configuration commands
-------	------------------------------

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

dot1x mac-auth-bypass

dot1x mac-auth-bypass [eap] | no dot1x mac-auth-bypass

Syntax Description

no	Negate a command or set its defaults
dot1x	dot1x configuration commands
mac-auth-bypass	Configure Mac-Auth-Bypass
eap	(Optional) EAP Authentication

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

dot1x max-reauth-req

dot1x max-reauth-req <count> | no dot1x max-reauth-req

Syntax Description

dot1x	dot1x configuration commands
max-reauth-req	Maximum Re-authentication Attempts Before Failing
<i>count</i>	number of retries

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

dot1x max-req

dot1x max-req <count> | no dot1x max-req

Syntax Description

dot1x	dot1x configuration commands
max-req	Maximum Retries to Initiate Authentication
<i>count</i>	number of retries

Command Mode

- /exec/configure

dot1x max-req

dot1x max-req <count> | no dot1x max-req

Syntax Description

dot1x	dot1x configuration commands
max-req	Maximum Retries to Initiate Authentication
<i>count</i>	number of retries

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

dot1x port-control

[no] dot1x port-control <port-control-value>

Syntax Description

dot1x	dot1x configuration commands
port-control	port control
<i>port-control-value</i>	set the port-control value

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

dot1x radius-accounting

[no] dot1x radius-accounting

Syntax Description

dot1x	dot1x configuration commands
radius-accounting	accounting messages to RADIUS

Command Mode

- /exec/configure

dot1x re-authenticate

```
{ dot1x re-authenticate } | { dot1x re-authenticate interface <if> }
```

Syntax Description

dot1x	dot1x configuration commands
re-authenticate	Manually re-authenticate an Interface
<i>if</i>	target interface

Command Mode

- /exec

dot1x re-authentication

[no] dot1x re-authentication

Syntax Description

dot1x	dot1x configuration commands
re-authentication	Enable or Disable Reauthentication for this port

Command Mode

- /exec/configure

dot1x re-authentication

[no] dot1x re-authentication

Syntax Description

dot1x	dot1x configuration commands
re-authentication	Enable or Disable Reauthentication for this port

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

dot1x show credential

dot1x show credential <name>

Syntax Description

dot1x	dot1x configuration commands
credential	supplicant credential profile
<i>name</i>	profile name

Command Mode

- /exec/configure/dot1x-cred

dot1x system-auth-control

[no] dot1x system-auth-control

Syntax Description

dot1x	dot1x configuration commands
system-auth-control	Enable or Disable SysAuthControl

Command Mode

- /exec/configure

dot1x timeout quiet-period

dot1x timeout quiet-period <value> | no dot1x timeout quiet-period

Syntax Description

dot1x	dot1x configuration commands
timeout	Various Timeouts
quiet-period	Timeout For Retrying Authentication After Failed Authentication
<i>value</i>	time interval in seconds

Command Mode

- /exec/configure

dot1x timeout quiet-period

dot1x timeout quiet-period <value> | no dot1x timeout quiet-period

Syntax Description

dot1x	dot1x configuration commands
timeout	Various Timeouts
quiet-period	Timeout For Retrying Authentication After Failed Authentication
<i>value</i>	time interval in seconds

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

dot1x timeout ratelimit-period

dot1x timeout ratelimit-period <value> | no dot1x timeout ratelimit-period

Syntax Description

dot1x	dot1x configuration commands
timeout	Various Timeouts
ratelimit-period	Rate Limit period for EAPOL-Start
<i>value</i>	time interval in seconds

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

dot1x timeout re-authperiod

dot1x timeout re-authperiod <value> | no dot1x timeout re-authperiod

Syntax Description

dot1x	dot1x configuration commands
timeout	Various Timeouts
re-authperiod	Timeout For Re-Authentication
<i>value</i>	time interval in seconds

Command Mode

- /exec/configure

dot1x timeout re-authperiod

dot1x timeout re-authperiod <value> | no dot1x timeout re-authperiod

Syntax Description

dot1x	dot1x configuration commands
timeout	Various Timeouts
re-authperiod	Timeout For Re-Authentication
<i>value</i>	time interval in seconds

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

dot1x timeout server-timeout

dot1x timeout server-timeout <value> | no dot1x timeout server-timeout

Syntax Description

dot1x	dot1x configuration commands
timeout	Various Timeouts
server-timeout	Timeout for Radius Retries
<i>value</i>	time interval in seconds

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

dot1x timeout supp-timeout

dot1x timeout supp-timeout <value> | no dot1x timeout supp-timeout

Syntax Description

dot1x	dot1x configuration commands
timeout	Various Timeouts
supp-timeout	Timeout for Supplicant retries
<i>value</i>	time interval in seconds

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

dot1x timeout tx-period

dot1x timeout tx-period <value> | no dot1x timeout tx-period

Syntax Description

dot1x	dot1x configuration commands
timeout	Various Timeouts
tx-period	Timeout For Resending Requests To Supplicant
<i>value</i>	time interval in seconds

Command Mode

- /exec/configure

dot1x timeout tx-period

dot1x timeout tx-period <value> | no dot1x timeout tx-period

Syntax Description

dot1x	dot1x configuration commands
timeout	Various Timeouts
tx-period	Timeout For Resending Requests To Supplicant
<i>value</i>	time interval in seconds

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

down-bit-ignore

{ down-bit-ignore } | { no down-bit-ignore }

Syntax Description

no	Negate a command or set its defaults
down-bit-ignore	Configure a PE router to ignore the DN bit for network summary, external and NSSA external LSA

Command Mode

- /exec/configure/router-ospf/vrf

downlink delay

downlink delay <ena-dis-flg> [timeout <time-out>] | no downlink delay

Syntax Description

no	Negate a command or set its defaults
downlink	Change downlink linkup time
delay	delay bringup of downlinks
<i>ena-dis-flg</i>	Enable/Disable downlink delay feature
timeout	(Optional) downlink ports enable delay in seconds
<i>time-out</i>	(Optional) Time out

Command Mode

- /exec/configure

dscp

{ [no] dscp <dscp> | no dscp }

Syntax Description

dscp	Optional DSCP
<i>dscp</i>	Differentiated services codepoint value

Command Mode

- /exec/configure/nfm-exporter

dual-active exclude interface-vlan

dual-active exclude interface-vlan <allow-vlans> | no dual-active exclude interface-vlan

Syntax Description

no	Negate a command or set its defaults
dual-active	Configuration when peer link is down but peer is alive
interface-vlan	Interface vlan configuration
exclude	Interface vlans to exclude from suspension when dual-active
<i>allow-vlans</i>	Set allowed interface vlans

Command Mode

- /exec/configure/vpc-domain

duplex

duplex <duplex_mode> | no duplex [<duplex_mode>]

Syntax Description

no	Negate a command or set its defaults
duplex	Enter the port duplex mode
<i>duplex_mode</i>	Interface duplex mode

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-non-member

duplex

duplex <duplex_mode> | no duplex [<duplex_mode>]

Syntax Description

no	Negate a command or set its defaults
duplex	Enter the port duplex mode
<i>duplex_mode</i>	Interface duplex mode

Command Mode

- /exec/configure/if-port-channel

duplex

duplex <duplex_mode> | no duplex [<duplex_mode>]

Syntax Description

no	Negate a command or set its defaults
duplex	Enter the port duplex mode
<i>duplex_mode</i>	Interface duplex mode

Command Mode

- /exec/configure/if-mgmt-ether

duplicate-message throttle

[no] duplicate-message throttle

Syntax Description

no	(Optional) Negate a command or set its defaults
duplicate-message	Configure throttling of duplicate callhome alert messages
throttle	Enable throttling of duplicate callhome alert messages

Command Mode

- /exec/configure/callhome

dynamic-capability

[no | default] dynamic-capability

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
dynamic-capability	Dynamic capability

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor-sess

dynamic-med-interval

[no] dynamic-med-interval <sec>

Syntax Description

no	(Optional) Negate a command or set its defaults
dynamic-med-interval	Sets the interval for dampening of med changes
<i>sec</i>	Time interval in seconds

Command Mode

- /exec/configure/router-bgp