



Unsupported Commands in Cisco IOS Release 12.2(37)EY

This appendix lists some of the command-line interface (CLI) commands that appear when you enter the question mark (?) at the Catalyst 2960 switch prompt but are not supported in this release, either because they are not tested or because of Catalyst 2960 switch hardware limitations. This is not a complete list. The unsupported commands are listed by software feature and command mode.

Access Control Lists

Unsupported Privileged EXEC Commands

```
access-enable [host] [timeout minutes]  
access-template [access-list-number | name] [dynamic-name] [source] [destination] [timeout minutes]  
clear access-template [access-list-number | name] [dynamic-name] [source] [destination].  
show access-lists rate-limit [destination]  
show accounting  
show ip accounting [checkpoint] [output-packets | access violations]  
show ip cache [prefix-mask] [type number]
```

Unsupported Global Configuration Commands

```
access-list rate-limit acl-index {precedence | mask prec-mask}  
access-list dynamic extended
```

Unsupported Route-Map Configuration Commands

```
match ip address prefix-list prefix-list-name [prefix-list-name...]
```

Boot Loader Commands

Unsupported Global Configuration Commands

boot buffersize

Debug Commands

Unsupported Privileged EXEC Commands

debug platform cli-redirection main
debug platform configuration

IGMP Snooping Commands

Unsupported Global Configuration Commands

ip igmp snooping tcn

Interface Commands

Unsupported Privileged EXEC Commands

**show interfaces [interface-id | vlan *vlan-id*] [crb | fair-queue | irb | mac-accounting | precedence | irb
| random-detect | rate-limit | shape]**

Unsupported Global Configuration Commands

interface tunnel

Unsupported Interface Configuration Commands

transmit-interface *type number*

MAC Address Commands

Unsupported Privileged EXEC Commands

```
show mac-address-table  
show mac-address-table address  
show mac-address-table aging-time  
show mac-address-table count  
show mac-address-table dynamic  
show mac-address-table interface  
show mac-address-table multicast  
show mac-address-table notification  
show mac-address-table static  
show mac-address-table vlan  
show mac address-table multicast
```



Note Use the **show ip igmp snooping groups** privileged EXEC command to display Layer 2 multicast address-table entries for a VLAN.

Unsupported Global Configuration Commands

```
mac-address-table aging-time  
mac-address-table notification  
mac-address-table static
```

Miscellaneous

Unsupported Privileged EXEC Commands

```
file verify auto  
show cable-diagnostics prbs  
test cable-diagnostics prbs
```

Unsupported Global Configuration Commands

errdisable recovery cause unicast flood
l2protocol-tunnel global drop-threshold
service compress-config
stack-mac persistent timer

Network Address Translation (NAT) Commands

Unsupported Privileged EXEC Commands

show ip nat statistics
show ip nat translations

QoS

Unsupported Global Configuration Command

priority-list

Unsupported Interface Configuration Commands

priority-group
rate-limit

Unsupported Policy-Map Configuration Command

class class-default where *class-default* is the *class-map-name*.

RADIUS

Unsupported Global Configuration Commands

aaa nas port extended
aaa authentication *feature* default enable
aaa authentication *feature* default line
aaa nas port extended

radius-server attribute nas-port
radius-server configure
radius-server extended-portnames

SNMP

Unsupported Global Configuration Commands

snmp-server enable informs
snmp-server ifindex persist

Spanning Tree

Unsupported Global Configuration Command

spanning-tree pathcost method {long | short}

Unsupported Interface Configuration Command

spanning-tree stack-port

VLAN

Unsupported Global Configuration Command

vlan internal allocation policy {ascending | descending}

Unsupported vlan-config Command

private-vlan

Unsupported User EXEC Commands

show running-config vlan
show vlan ifindex
show vlan private-vlan

VTP

Unsupported Privileged EXEC Commands

vtp {password *password* | pruning | version *number*}



Note This command has been replaced by the **vtp** global configuration command.
