



## INDEX

---

### A

aaa accounting dot1x command [2-1](#)  
aaa authentication dot1x command [2-3](#)  
aaa authorization network command [2-5](#)  
AAA methods [2-3](#)  
abort command [2-590](#)  
access control entries  
    See ACEs  
access control lists  
    See ACLs  
access groups  
    IP [2-118](#)  
    MAC, displaying [2-383](#)  
access mode [2-541](#)  
access ports [2-541](#)  
ACEs [2-68](#), [2-253](#)  
ACLs  
    deny [2-66](#)  
    displaying [2-289](#)  
    for non-IP protocols [2-174](#)  
    IP [2-118](#)  
    on Layer 2 interfaces [2-118](#)  
    permit [2-251](#)  
address aliasing [2-242](#)  
aggregate-port learner [2-247](#)  
allowed VLANs [2-556](#)  
apply command [2-590](#)  
archive download-sw command [2-6](#)  
archive tar command [2-8](#)  
archive upload-sw command [2-11](#)  
audience [xvii](#)

authentication failed VLAN  
    See dot1x auth-fail vlan  
auth-fail max-attempts  
    See dot1x auth-fail max-attempts  
auth-fail vlan  
    See dot1x auth-fail vlan  
authorization state of controlled port [2-93](#)  
autonegotiation of duplex mode [2-101](#)  
auto qos voip command [2-13](#)

---

### B

BackboneFast, for STP [2-477](#)  
backup interfaces  
    configuring [2-536](#)  
    displaying [2-345](#)  
boot (boot loader) command [A-2](#)  
boot bootlpr command [2-17](#)  
boot config-file command [2-18](#)  
boot enable-break command [2-19](#)  
boot helper command [2-20](#)  
boot helper-config file command [2-21](#)  
booting  
    Cisco IOS image [2-24](#)  
    displaying environment variables [2-298](#)  
    interrupting [2-19](#)  
    manually [2-22](#)  
boot loader  
    accessing [A-1](#)  
    booting  
        Cisco IOS image [A-2](#)  
        helper image [2-20](#)

**boot loader (continued)**

## directories

- creating [A-15](#)
- displaying a list of [A-7](#)
- removing [A-19](#)

## displaying

- available commands [A-12](#)
- memory heap utilization [A-14](#)
- version [A-26](#)

## environment variables

- described [A-20](#)
- displaying settings [A-20](#)
- location of [A-21](#)
- setting [A-20](#)
- unsetting [A-24](#)

## files

- copying [A-5](#)
- deleting [A-6](#)
- displaying a list of [A-7](#)
- displaying the contents of [A-4](#), [A-16](#), [A-23](#)
- renaming [A-17](#)

## file system

- formatting [A-10](#)
- initializing flash [A-9](#)
- running a consistency check [A-11](#)

loading helper images [A-13](#)prompt [A-1](#)resetting the system [A-18](#)boot manual command [2-22](#)boot private-config-file command [2-23](#)boot system command [2-24](#)BPDU filtering, for spanning tree [2-478](#), [2-513](#)BPDU guard, for spanning tree [2-480](#), [2-513](#)broadcast storm control [2-531](#)**C**

## candidate switches

See clusters

cat (boot loader) command [A-4](#)caution, description [xviii](#)channel-group command [2-25](#)channel-protocol command [2-28](#)

## Cisco Network Assistant

See Network Assistant [xviii](#)

## Cisco SoftPhone

auto-QoS configuration [2-13](#)

trusting packets sent from [2-234](#)

class command [2-29](#)class-map command [2-31](#)

## class maps

- creating [2-31](#)
- defining the match criteria [2-194](#)
- displaying [2-302](#)

## class of service

See CoS

clear dot1x command [2-33](#)clear eap sessions command [2-34](#)clear errdisable interface [2-35](#)clear ip dhcp snooping database command [2-36](#)clear lacp command [2-38](#)clear mac address-table command [2-39](#), [2-41](#)clear pagp command [2-42](#)clear port-security command [2-43](#)clear spanning-tree counters command [2-45](#)clear spanning-tree detected-protocols command [2-46](#)clear vmps statistics command [2-47](#)clear vtp counters command [2-48](#)cluster commander-address command [2-49](#)cluster discovery hop-count command [2-51](#)cluster enable command [2-52](#)cluster holdtime command [2-54](#)cluster member command [2-55](#)cluster outside-interface command [2-57](#)cluster requirements [xviii](#)cluster run command [2-58](#)

clusters

- adding candidates [2-55](#)
- binding to HSRP group [2-59](#)
- building manually [2-55](#)
- communicating with
  - devices outside the cluster [2-57](#)
  - members by using Telnet [2-269](#)
- debug messages, display [B-5](#)
- displaying
  - candidate switches [2-305](#)
  - debug messages [B-5](#)
  - member switches [2-307](#)
  - status [2-303](#)
- hop-count limit for extended discovery [2-51](#)
- HSRP standby groups [2-59](#)
- redundancy [2-59](#)
- SNMP trap [2-467](#)

cluster standby-group command [2-59](#)

cluster timer command [2-61](#)

command modes defined [1-1](#)

command switch

- See clusters

configuration, initial

- See getting started guide and hardware installation guide

configuration files

- password recovery disable considerations [A-1](#)
- specifying the name [2-18, 2-23](#)

configuring multiple interfaces [2-113](#)

config-vlan mode

- commands [2-578](#)
- description [1-4](#)
- entering [2-577](#)
- summary [1-2](#)

conventions

- command [xvii](#)
- for examples [xviii](#)
- publication [xvii](#)
- text [xvii](#)

copy (boot loader) command [A-5](#)

CoS

- assigning default value to incoming packets [2-204](#)
- overriding the incoming value [2-204](#)

CoS-to-DSCP map [2-208](#)

CPU ASIC statistics, displaying [2-309](#)

crashinfo files [2-106](#)

---

## D

debug auto qos command [B-2](#)

debug backup command [B-4](#)

debug cluster command [B-5](#)

debug dot1x command [B-7](#)

debug dtp command [B-8](#)

debug eap command [B-9](#)

debug etherchannel command [B-10](#)

debug interface command [B-11](#)

debug ip dhcp snooping command [B-12](#)

debug ip igmp filter command [B-13](#)

debug ip igmp max-groups command [B-14](#)

debug ip igmp snooping command [B-15](#)

debug lacp command [B-16](#)

debug mac-notification command [B-17](#)

debug matm command [B-18](#)

debug matm move update command [B-19](#)

debug monitor command [B-20](#)

debug mvrdbg command [B-21](#)

debug nvram command [B-22](#)

debug pagp command [B-23](#)

debug platform acl command [B-24](#)

debug platform backup interface command [B-25](#)

debug platform cpu-queues command [B-26](#)

debug platform dot1x command [B-28](#)

debug platform etherchannel command [B-29](#)

debug platform forw-tcam command [B-30](#)

debug platform ip dhcp command [B-31](#)

debug platform ip igmp snooping command [B-32](#)

debug platform ip wccp command [B-34](#)

- debug platform led command [B-35](#)
- debug platform matm command [B-36](#)
- debug platform messaging application command [B-37](#)
- debug platform phy command [B-38](#)
- debug platform pm command [B-40](#)
- debug platform port-asic command [B-42](#)
- debug platform port-security command [B-43](#)
- debug platform qos-acl-tcam command [B-44](#)
- debug platform resource-manager command [B-45](#)
- debug platform snmp command [B-46](#)
- debug platform span command [B-47](#)
- debug platform supervisor-asic command [B-48](#)
- debug platform sw-bridge command [B-49](#)
- debug platform tcam command [B-50](#)
- debug platform uddl command [B-52](#)
- debug platform vlan command [B-53](#)
- debug pm command [B-54](#)
- debug port-security command [B-56](#)
- debug qos-manager command [B-57](#)
- debug spanning-tree backbonefast command [B-60](#)
- debug spanning-tree bpdu command [B-61](#)
- debug spanning-tree bpdu-opt command [B-62](#)
- debug spanning-tree command [B-58](#)
- debug spanning-tree mstp command [B-63](#)
- debug spanning-tree switch command [B-65](#)
- debug spanning-tree uplinkfast command [B-67](#)
- debug sw-vlan command [B-68](#)
- debug sw-vlan ifs command [B-70](#)
- debug sw-vlan notification command [B-71](#)
- debug sw-vlan vtp command [B-72](#)
- debug uddl command [B-74](#)
- debug vqpc command [B-76](#)
- define interface-range command [2-63](#)
- delete (boot loader) command [A-6](#)
- delete command [2-65](#)
- deny command [2-66](#)
- detect mechanism, causes [2-102](#)
- device manager requirements [xviii](#)
- DHCP snooping
  - accepting untrusted packets from edge switch [2-132](#)
  - enabling
    - on a VLAN [2-137](#)
    - option 82 [2-130, 2-132](#)
    - trust on an interface [2-135](#)
  - error recovery timer [2-104](#)
  - rate limiting [2-134](#)
- DHCP snooping binding database
  - binding file, configuring [2-128](#)
  - bindings
    - adding [2-126](#)
    - deleting [2-126](#)
    - displaying [2-358](#)
  - clearing database agent statistics [2-36](#)
  - database agent, configuring [2-128](#)
  - displaying
    - binding entries [2-358](#)
    - database agent status [2-360, 2-362](#)
  - renewing [2-273](#)
- dir (boot loader) command [A-7](#)
- directories, deleting [2-65](#)
- documentation, related [xviii](#)
- document conventions [xvii](#)
- domain name, VTP [2-597, 2-601](#)
- dot1x auth-fail max-attempts [2-71](#)
- dot1x auth-fail vlan [2-73](#)
- dot1x command [2-69](#)
- dot1x control-direction command [2-75](#)
- dot1x critical global configuration command [2-77](#)
- dot1x critical interface configuration command [2-79](#)
- dot1x default command [2-81](#)
- dot1x fallback command [2-82](#)
- dot1x guest-vlan command [2-84](#)
- dot1x host-mode command [2-86](#)
- dot1x initialize command [2-87](#)
- dot1x mac-auth-bypass command [2-88](#)
- dot1x max-reauth-req command [2-90](#)
- dot1x max-req command [2-91](#)

dot1x pae command [2-92](#)  
 dot1x port-control command [2-93](#)  
 dot1x re-authenticate command [2-95](#)  
 dot1x reauthentication command [2-96](#)  
 dot1x timeout command [2-97](#)  
 DSCP-to-CoS map [2-208](#)  
 DSCP-to-DSCP-mutation map [2-208](#)  
 DTP [2-542](#)  
 DTP flap
 

- error detection for [2-102](#)
- error recovery timer [2-104](#)

 DTP negotiation [2-543](#)  
 dual-purpose uplink ports
 

- displaying configurable options [2-348](#)
- displaying the active media [2-352](#)

 dual-purpose uplink ports, selecting the type [2-198](#)  
 duplex command [2-100](#)  
 dynamic-access ports
 

- configuring [2-534](#)
- restrictions [2-535](#)

 dynamic auto VLAN membership mode [2-541](#)  
 dynamic desirable VLAN membership mode [2-541](#)  
 Dynamic Host Configuration Protocol (DHCP)
 

- See DHCP snooping

 Dynamic Trunking Protocol
 

- See DTP

---

## E

EAP-request/identity frame
 

- maximum number to send [2-91](#)
- response time before retransmitting [2-97](#)

 environment variables, displaying [2-298](#)  
 errdisable detect cause command [2-102](#)  
 errdisable recovery command [2-104](#)  
 error conditions, displaying [2-334](#)  
 error disable detection [2-102](#)  
 error-disabled interfaces, displaying [2-345](#)  
 EtherChannel
 

- assigning Ethernet interface to channel group [2-25](#)
- creating port-channel logical interface [2-111](#)
- debug EtherChannel/PAGP, display [B-10](#)
- debug platform-specific events, display [B-29](#)
- displaying [2-338](#)
- interface information, displaying [2-345](#)
- LACP
  - clearing channel-group information [2-38](#)
  - debug messages, display [B-16](#)
  - displaying [2-377](#)
  - modes [2-25](#)
  - port priority for hot-standby ports [2-162](#)
  - restricting a protocol [2-28](#)
  - system priority [2-164](#)
- load-distribution methods [2-260](#)
- PAGP
  - aggregate-port learner [2-247](#)
  - clearing channel-group information [2-42](#)
  - debug messages, display [B-23](#)
  - displaying [2-427](#)
  - error detection for [2-102](#)
  - error recovery timer [2-104](#)
  - learn method [2-247](#)
  - modes [2-25](#)
  - physical-port learner [2-247](#)
  - priority of interface for transmitted traffic [2-249](#)

 Ethernet controller, internal register display [2-311](#)  
 Ethernet statistics, collecting [2-275](#)  
 examples, conventions for [xviii](#)  
 exception crashinfo command [2-106](#)  
 exit command [2-590](#)  
 extended discovery of candidate switches [2-51](#)  
 extended-range VLANs
 

- and allowed VLAN list [2-556](#)
- and pruning-eligible list [2-556](#)
- configuring [2-577](#)

 extended system ID for STP [2-486](#)

**F**

fallback profile command [2-107](#)  
 fallback profiles, displaying [2-341](#)  
 fan information, displaying [2-331](#)  
 file name, VTP [2-597](#)  
 files, deleting [2-65](#)  
 flash\_init (boot loader) command [A-9](#)  
 Flex Links
 

- configuring [2-536](#)
- displaying [2-345](#)

 flowcontrol command [2-109](#)  
 format (boot loader) command [A-10](#)  
 forwarding results, display [C-5](#)  
 frame forwarding information, displaying [C-5](#)  
 fsck (boot loader) command [A-11](#)

**G**

global configuration mode [1-2, 1-3](#)

**H**

hardware ACL statistics [2-289](#)  
 help (boot loader) command [A-12](#)  
 hierarchical policy maps [2-258](#)  
 hop-count limit for clusters [2-51](#)  
 host connection, port configuration [2-540](#)  
 Hot Standby Router Protocol
 

- See HSRP

 HSRP
 

- binding HSRP group to cluster [2-59](#)
- standby group [2-59](#)

**I**

IEEE 802.1x
 

- and switchport modes [2-542](#)
- violation error recovery [2-104](#)
- See also port-based authentication

 IEEE 802.1X Port Based Authentication
 

- enabling guest VLAN supplicant [2-72, 2-83, 2-108](#)

 IGMP filters
 

- applying [2-138](#)
- debug messages, display [B-13](#)

 IGMP groups, setting maximum [2-140](#)  
 IGMP maximum groups, debugging [B-14](#)  
 IGMP profiles
 

- creating [2-142](#)
- displaying [2-365](#)

 IGMP snooping
 

- adding ports as a static member of a group [2-158](#)
- displaying [2-366, 2-371, 2-373](#)
- enabling [2-144](#)
- enabling the configurable-leave timer [2-146](#)
- enabling the Immediate-Leave feature [2-155](#)
- flooding query count [2-152](#)
- interface topology change notification behavior [2-154](#)
- multicast table [2-369](#)
- querier [2-148](#)
- query solicitation [2-152](#)
- report suppression [2-150](#)
- switch topology change notification behavior [2-152](#)

 images
 

- See software images

 Immediate-Leave feature, MVR [2-244](#)  
 immediate-leave processing [2-155](#)  
 initial configuration
 

- See getting started guide and hardware installation guide

 interface configuration mode [1-2, 1-4](#)  
 interface port-channel command [2-111](#)  
 interface range command [2-113](#)

- interface-range macros [2-63](#)
  - interfaces
    - assigning Ethernet interface to channel group [2-25](#)
    - configuring [2-100](#)
    - configuring multiple [2-113](#)
    - creating port-channel logical [2-111](#)
    - debug messages, display [B-11](#)
    - disabling [2-465](#)
    - displaying the MAC address table [2-395](#)
    - restarting [2-465](#)
  - interface speed, configuring [2-523](#)
  - interface vlan command [2-116](#)
  - internal registers, displaying [2-311, 2-318](#)
  - Internet Group Management Protocol
    - See IGMP
  - invalid GBIC
    - error detection for [2-102](#)
    - error recovery timer [2-104](#)
  - ip access-group command [2-118](#)
  - ip address command [2-120](#)
  - IP addresses, setting [2-120](#)
  - ip admission command [2-122](#)
  - ip admission name proxy http command [2-123](#)
  - IP DHCP snooping
    - See DHCP snooping
  - ip dhcp snooping binding command [2-126](#)
  - ip dhcp snooping command [2-125](#)
  - ip dhcp snooping database command [2-128](#)
  - ip dhcp snooping information option allow-untrusted command [2-132](#)
  - ip dhcp snooping information option command [2-130](#)
  - ip dhcp snooping limit rate command [2-134](#)
  - ip dhcp snooping trust command [2-135](#)
  - ip dhcp snooping verify command [2-136](#)
  - ip dhcp snooping vlan command [2-137](#)
  - ip igmp filter command [2-138](#)
  - ip igmp max-groups command [2-140](#)
  - ip igmp profile command [2-142](#)
  - ip igmp snooping command [2-144](#)
  - ip igmp snooping last-member-query-interval command [2-146](#)
  - ip igmp snooping querier command [2-148](#)
  - ip igmp snooping report-suppression command [2-150](#)
  - ip igmp snooping tcn command [2-152](#)
  - ip igmp snooping tcn flood command [2-154](#)
  - ip igmp snooping vlan immediate-leave command [2-155](#)
  - ip igmp snooping vlan mrouter command [2-156](#)
  - ip igmp snooping vlan static command [2-158](#)
  - IP multicast addresses [2-241](#)
  - IP phones
    - auto-QoS configuration [2-13](#)
    - trusting packets sent from [2-234](#)
  - IP-precedence-to-DSCP map [2-208](#)
  - IP source guard
    - displaying
      - dynamic binding entries only [2-358](#)
  - ip ssh command [2-160](#)
- 
- ## J
- jumbo frames
    - See MTU
- 
- ## L
- LACP
    - See EtherChannel
  - lacp port-priority command [2-162](#)
  - lacp system-priority command [2-164](#)
  - Layer 2 traceroute
    - IP addresses [2-568](#)
    - MAC addresses [2-565](#)
  - line configuration mode [1-2, 1-5](#)
  - Link Aggregation Control Protocol
    - See EtherChannel
  - link flap
    - error detection for [2-102](#)
    - error recovery timer [2-104](#)

link state group command [2-166](#)  
 link state track command [2-168](#)  
 load\_helper (boot loader) command [A-13](#)  
 load-distribution methods for EtherChannel [2-260](#)  
 logging event command [2-169](#)  
 logging file command [2-170](#)  
 logical interface [2-111](#)  
 loopback error  
   detection for [2-102](#)  
   recovery timer [2-104](#)  
 loop guard, for spanning tree [2-488, 2-492](#)

## M

mac access-group command [2-172](#)  
 MAC access-groups, displaying [2-383](#)  
 MAC access list configuration mode [2-174](#)  
 mac access-list extended command [2-174](#)  
 MAC access lists [2-66](#)  
 MAC addresses  
   displaying  
     aging time [2-389](#)  
     all [2-387](#)  
     dynamic [2-393](#)  
     MAC address-table move updates [2-397](#)  
     notification settings [2-399](#)  
     number of addresses in a VLAN [2-391](#)  
     per interface [2-395](#)  
     per VLAN [2-403](#)  
     static [2-401](#)  
     static and dynamic entries [2-385](#)  
   dynamic  
     aging time [2-176](#)  
     deleting [2-39](#)  
     displaying [2-393](#)  
 enabling MAC address notification [2-179](#)  
 enabling MAC address-table move update [2-177](#)

## MAC addresses (continued)

static  
   adding and removing [2-181](#)  
   displaying [2-401](#)  
   dropping on an interface [2-182](#)  
   tables [2-387](#)  
 MAC address notification, debugging [B-17](#)  
 mac address-table aging-time [2-172](#)  
 mac address-table aging-time command [2-176](#)  
 mac address-table move update command [2-177](#)  
 mac address-table notification command [2-179](#)  
 mac address-table static command [2-181](#)  
 mac address-table static drop command [2-182](#)  
 macro apply command [2-184](#)  
 macro description command [2-187](#)  
 macro global command [2-188](#)  
 macro global description command [2-191](#)  
 macro name command [2-192](#)  
 macros  
   adding a description [2-187](#)  
   adding a global description [2-191](#)  
   applying [2-188](#)  
   creating [2-192](#)  
   displaying [2-429](#)  
   interface range [2-63, 2-113](#)  
   specifying parameter values [2-188](#)  
   tracing [2-188](#)  
 manual  
   audience [xvii](#)  
   purpose of [xvii](#)  
 maps  
   QoS  
     defining [2-208](#)  
     displaying [2-413](#)  
 match (class-map configuration) command [2-194](#)  
 maximum transmission unit  
   See MTU  
 mdix auto command [2-196](#)  
 media-type command [2-198](#)



- member switches
  - See clusters
- memory (boot loader) command [A-14](#)
- mkdir (boot loader) command [A-15](#)
- mls qos aggregate-policer command [2-202](#)
- mls qos command [2-200](#)
- mls qos cos command [2-204](#)
- mls qos dscp-mutation command [2-206](#)
- mls qos map command [2-208](#)
- mls qos queue-set output buffers command [2-212](#)
- mls qos queue-set output threshold command [2-214](#)
- mls qos rewrite ip dscp command [2-216](#)
- mls qos srr-queue input bandwidth command [2-218](#)
- mls qos srr-queue input buffers command [2-220](#)
- mls qos-srr-queue input cos-map command [2-222](#)
- mls qos srr-queue input dscp-map command [2-224](#)
- mls qos srr-queue input priority-queue command [2-226](#)
- mls qos srr-queue input threshold command [2-228](#)
- mls qos-srr-queue output cos-map command [2-230](#)
- mls qos srr-queue output dscp-map command [2-232](#)
- mls qos trust command [2-234](#)
- mode, MVR [2-241](#)
- Mode button, and password recovery [2-278](#)
- modes, commands [1-1](#)
- monitor session command [2-236](#)
- more (boot loader) command [A-16](#)
- MSTP
  - displaying [2-441](#)
  - interoperability [2-46](#)
  - link type [2-490](#)
  - MST region
    - aborting changes [2-496](#)
    - applying changes [2-496](#)
    - configuration name [2-496](#)
    - configuration revision number [2-496](#)
    - current or pending display [2-496](#)
    - displaying [2-441](#)
    - MST configuration mode [2-496](#)
    - VLANs-to-instance mapping [2-496](#)
- MSTP (continued)
  - path cost [2-498](#)
  - protocol mode [2-494](#)
  - restart protocol migration process [2-46](#)
  - root port
    - loop guard [2-488](#)
    - preventing from becoming designated [2-488](#)
    - restricting which can be root [2-488](#)
    - root guard [2-488](#)
  - root switch
    - affects of extended system ID [2-486](#)
    - hello-time [2-501, 2-509](#)
    - interval between BPDU messages [2-502](#)
    - interval between hello BPDU messages [2-501, 2-509](#)
    - max-age [2-502](#)
    - maximum hop count before discarding BPDU [2-503](#)
    - port priority for selection of [2-505](#)
    - primary or secondary [2-509](#)
    - switch priority [2-508](#)
  - state changes
    - blocking to forwarding state [2-515](#)
    - enabling BPDU filtering [2-478, 2-513](#)
    - enabling BPDU guard [2-480, 2-513](#)
    - enabling Port Fast [2-513, 2-515](#)
    - forward-delay time [2-500](#)
    - length of listening and learning states [2-500](#)
    - rapid transition to forwarding [2-490](#)
    - shutting down Port Fast-enabled ports [2-513](#)
  - state information display [2-440](#)
- MTU
  - configuring size [2-562](#)
  - displaying global setting [2-448](#)
- multicast group address, MVR [2-244](#)
- multicast groups, MVR [2-242](#)
- multicast router learning method [2-156](#)
- multicast router ports, configuring [2-156](#)
- multicast storm control [2-531](#)

multicast VLAN, MVR [2-241](#)

multicast VLAN registration

See MVR

Multiple Spanning Tree Protocol

See MSTP

MVR

and address aliasing [2-242](#)

configuring [2-241](#)

configuring interfaces [2-244](#)

debug messages, display [B-21](#)

displaying [2-421](#)

displaying interface information [2-423](#)

members, displaying [2-425](#)

mvr (global configuration) command [2-241](#)

mvr (interface configuration) command [2-244](#)

mvr vlan group command [2-245](#)

## N

native VLANs [2-556](#)

Network Assistant requirements [xviii](#)

nonegotiate, speed [2-523](#)

nonegotiating DTP messaging [2-543](#)

non-IP protocols

denying [2-66](#)

forwarding [2-251](#)

non-IP traffic access lists [2-174](#)

non-IP traffic forwarding

denying [2-66](#)

permitting [2-251](#)

normal-range VLANs [2-577, 2-583](#)

note, description [xviii](#)

no vlan command [2-577, 2-587](#)

## P

PAgP

See EtherChannel

pagp learn-method command [2-247](#)

pagp port-priority command [2-249](#)

password, VTP [2-597, 2-601](#)

password-recovery mechanism, enabling and disabling [2-278](#)

permit (MAC access-list configuration) command [2-251](#)

per-VLAN spanning-tree plus

See STP

physical-port learner [2-247](#)

PID, displaying [2-356](#)

PIM-DVMRP, as multicast router learning method [2-156](#)

police aggregate command [2-256](#)

police command [2-254](#)

policed-DSCP map [2-208](#)

policy-map command [2-258](#)

policy maps

applying to an interface [2-280, 2-284](#)

creating [2-258](#)

displaying [2-432](#)

hierarchical [2-258](#)

policers

displaying [2-406](#)

for a single class [2-254](#)

for multiple classes [2-202, 2-256](#)

policed-DSCP map [2-208](#)

traffic classification

defining the class [2-29](#)

defining trust states [2-570](#)

setting DSCP or IP precedence values [2-282](#)

Port Aggregation Protocol

See EtherChannel

port-based authentication

AAA method list [2-3](#)

debug messages, display [B-7](#)

enabling IEEE 802.1x

globally [2-69](#)

per interface [2-93](#)

guest VLAN [2-84](#)

host modes [2-86](#)

**port-based authentication (continued)**

- IEEE 802.1x AAA accounting methods [2-1](#)
- initialize an interface [2-87](#)
- MAC authentication bypass [2-88](#)
- manual control of authorization state [2-93](#)
- PAE as authenticator [2-92](#)
- periodic re-authentication
  - enabling [2-96](#)
  - time between attempts [2-97](#)
- quiet period between failed authentication exchanges [2-97](#)
- re-authenticating IEEE 802.1x-enabled ports [2-95](#)
- resetting configurable IEEE 802.1x parameters [2-81](#)
- switch-to-authentication server retransmission time [2-97](#)
- switch-to-client frame-retransmission number [2-90 to 2-91](#)
- switch-to-client retransmission time [2-97](#)
- port-channel load-balance command [2-260](#)
- Port Fast, for spanning tree [2-515](#)
- port ranges, defining [2-63](#)
- ports, debugging [B-54](#)
- ports, protected [2-554](#)
- port security
  - aging [2-550](#)
  - debug messages, display [B-56](#)
  - enabling [2-545](#)
  - violation error recovery [2-104](#)
- port trust states for QoS [2-234](#)
- port types, MVR [2-244](#)
- power information, displaying [2-331](#)
- priority-queue command [2-262](#)
- privileged EXEC mode [1-2, 1-3](#)
- product identification information, displaying [2-356](#)
- protected ports, displaying [2-350](#)
- pruning
  - VLANs [2-556](#)
  - VTP
    - displaying interface information [2-345](#)
    - enabling [2-597, 2-601](#)

pruning-eligible VLAN list [2-557](#)

PVST+

See STP

**Q**

QoS

auto-QoS

- configuring [2-13](#)
- debug messages, display [B-2](#)
- displaying [2-294](#)

class maps

- creating [2-31](#)
- defining the match criteria [2-194](#)
- displaying [2-302](#)

defining the CoS value for an incoming packet [2-204](#)

displaying configuration information [2-294, 2-405](#)

DSCP transparency [2-216](#)

DSCP trusted ports

- applying DSCP-to-DSCP-mutation map to [2-206](#)
- defining DSCP-to-DSCP-mutation map [2-208](#)

egress queues

- allocating buffers [2-212](#)
- defining the CoS output queue threshold map [2-230](#)
- defining the DSCP output queue threshold map [2-232](#)
- displaying buffer allocations [2-409](#)
- displaying CoS output queue threshold map [2-413](#)
- displaying DSCP output queue threshold map [2-413](#)
- displaying queueing strategy [2-409](#)
- displaying queue-set settings [2-416](#)
- enabling bandwidth shaping and scheduling [2-527](#)
- enabling bandwidth sharing and scheduling [2-529](#)
- limiting the maximum output on a port [2-525](#)
- mapping a port to a queue-set [2-264](#)

**QoS (continued)**

- mapping CoS values to a queue and threshold [2-230](#)
- mapping DSCP values to a queue and threshold [2-232](#)
- setting maximum and reserved memory allocations [2-214](#)
- setting WTD thresholds [2-214](#)
- enabling [2-200](#)
- ingress queues
  - allocating buffers [2-220](#)
  - assigning SRR scheduling weights [2-218](#)
  - defining the CoS input queue threshold map [2-222](#)
  - defining the DSCP input queue threshold map [2-224](#)
  - displaying buffer allocations [2-409](#)
  - displaying CoS input queue threshold map [2-413](#)
  - displaying DSCP input queue threshold map [2-413](#)
  - displaying queueing strategy [2-409](#)
  - displaying settings for [2-407](#)
  - enabling the priority queue [2-226](#)
  - mapping CoS values to a queue and threshold [2-222](#)
  - mapping DSCP values to a queue and threshold [2-224](#)
  - setting WTD thresholds [2-228](#)
- maps
  - defining [2-208, 2-222, 2-224, 2-230, 2-232](#)
  - displaying [2-413](#)
- policy maps
  - applying an aggregate policer [2-256](#)
  - applying to an interface [2-280, 2-284](#)
  - creating [2-258](#)
  - defining policers [2-202, 2-254](#)
  - displaying policers [2-406](#)
  - displaying policy maps [2-432](#)
  - hierarchical [2-258](#)
  - policed-DSCP map [2-208](#)
  - setting DSCP or IP precedence values [2-282](#)

**QoS (continued)**

- traffic classifications [2-29](#)
- trust states [2-570](#)
- port trust states [2-234](#)
- queues, enabling the expedite [2-262](#)
- statistics
  - in-profile and out-of-profile packets [2-409](#)
  - packets enqueued or dropped [2-409](#)
  - sent and received CoS values [2-409](#)
  - sent and received DSCP values [2-409](#)
- trusted boundary for IP phones [2-234](#)
- quality of service
  - See QoS
- querytime, MVR [2-241](#)
- queue-set command [2-264](#)

---

**R**

- radius-server dead-criteria command [2-265](#)
- radius-server host command [2-267](#)
- rapid per-VLAN spanning-tree plus
  - See STP
- rapid PVST+
  - See STP
- rcommand command [2-269](#)
- re-authenticating IEEE 802.1x-enabled ports [2-95](#)
- re-authentication
  - periodic [2-96](#)
  - time between attempts [2-97](#)
- receiver ports, MVR [2-244](#)
- receiving flow-control packets [2-109](#)
- recovery mechanism
  - causes [2-104](#)
  - display [2-35, 2-300, 2-332, 2-336](#)
  - timer interval [2-104](#)
- redundancy for cluster switches [2-59](#)
- remote-span command [2-271](#)
- Remote Switched Port Analyzer
  - See RSPAN

rename (boot loader) command [A-17](#)  
 renew ip dhcp snooping database command [2-273](#)  
 requirements  
     cluster [xviii](#)  
     device manager [xviii](#)  
     Network Assistant [xviii](#)  
 reset (boot loader) command [A-18](#)  
 reset command [2-590](#)  
 resource templates, displaying [2-437](#)  
 restricted VLAN  
     See dot1x auth-fail vlan  
 rmdir (boot loader) command [A-19](#)  
 rmon collection stats command [2-275](#)  
 root guard, for spanning tree [2-488](#)

## RSPAN

    configuring [2-236](#)  
     displaying [2-419](#)  
     filter RSPAN traffic [2-236](#)  
     remote-span command [2-271](#)  
     sessions  
         add interfaces to [2-236](#)  
         displaying [2-419](#)  
         start new [2-236](#)

---

## S

sdm prefer command [2-276](#)  
 SDM templates  
     displaying [2-437](#)  
 secure ports, limitations [2-547](#)  
 sending flow-control packets [2-109](#)  
 service password-recovery command [2-278](#)  
 service-policy command [2-280](#)  
 set (boot loader) command [A-20](#)  
 set command [2-282](#)  
 setup command [2-284](#)  
 setup express command [2-287](#)  
 show access-lists command [2-289](#)  
 show archive status command [2-292](#)  
 show auto qos command [2-294](#)  
 show boot command [2-298](#)  
 show cable-diagnostics tdr command [2-300](#)  
 show changes command [2-590](#)  
 show class-map command [2-302](#)  
 show cluster candidates command [2-305](#)  
 show cluster command [2-303](#)  
 show cluster members command [2-307](#)  
 show controllers cpu-interface command [2-309](#)  
 show controllers ethernet-controller command [2-311](#)  
 show controllers tcam command [2-318](#)  
 show controller utilization command [2-320](#)  
 show current command [2-590](#)  
 show dot1x command [2-322](#)  
 show dtp [2-326](#)  
 show eap command [2-328](#)  
 show env command [2-331](#)  
 show errdisable detect command [2-332](#)  
 show errdisable flap-values command [2-334](#)  
 show errdisable recovery command [2-336](#)  
 show etherchannel command [2-338](#)  
 show fallback profile command [2-341](#)  
 show flowcontrol command [2-343](#)  
 show interfaces command [2-345](#)  
 show interfaces counters command [2-354](#)  
 show inventory command [2-356](#)  
 show ip dhcp snooping binding command [2-358](#)  
 show ip dhcp snooping command [2-357](#)  
 show ip dhcp snooping database command [2-360, 2-362](#)  
 show ip igmp profile command [2-365](#)  
 show ip igmp snooping command [2-366](#)  
 show ip igmp snooping groups command [2-369](#)  
 show ip igmp snooping mrouter command [2-371](#)  
 show ip igmp snooping querier command [2-373](#)  
 show ipv6 route updated [2-375](#)  
 show lacp command [2-377](#)  
 show link state group command [2-381](#)  
 show mac access-group command [2-383](#)  
 show mac address-table address command [2-387](#)

- show mac address-table aging time command [2-389](#)
- show mac address-table command [2-385](#)
- show mac address-table count command [2-391](#)
- show mac address-table dynamic command [2-393](#)
- show mac address-table interface command [2-395](#)
- show mac address-table move update command [2-397](#)
- show mac address-table notification command [2-41](#), [2-399](#), [B-19](#)
- show mac address-table static command [2-401](#)
- show mac address-table vlan command [2-403](#)
- show mls qos aggregate-policer command [2-406](#)
- show mls qos command [2-405](#)
- show mls qos input-queue command [2-407](#)
- show mls qos interface command [2-409](#)
- show mls qos maps command [2-413](#)
- show mls qos queue-set command [2-416](#)
- show mls qos vlan command [2-418](#)
- show monitor command [2-419](#)
- show mvr command [2-421](#)
- show mvr interface command [2-423](#)
- show mvr members command [2-425](#)
- show pagp command [2-427](#)
- show parser macro command [2-429](#)
- show platform acl command [C-2](#)
- show platform backup interface command [C-3](#)
- show platform etherchannel command [C-4](#)
- show platform forward command [C-5](#)
- show platform igmp snooping command [C-7](#)
- show platform layer4op command [C-9](#)
- show platform mac-address-table command [C-10](#)
- show platform messaging command [C-11](#)
- show platform monitor command [C-12](#)
- show platform mvr table command [C-13](#)
- show platform pm command [C-14](#)
- show platform port-asic command [C-15](#)
- show platform port-security command [C-20](#)
- show platform qos command [C-21](#)
- show platform resource-manager command [C-22](#)
- show platform snmp counters command [C-24](#)
- show platform spanning-tree command [C-25](#)
- show platform stp-instance command [C-26](#)
- show platform team command [C-27](#)
- show platform vlan command [C-29](#)
- show policy-map command [2-432](#)
- show port security command [2-434](#)
- show proposed command [2-590](#)
- show sdm prefer command [2-437](#)
- show setup express command [2-439](#)
- show spanning-tree command [2-440](#)
- show storm-control command [2-446](#)
- show system mtu command [2-448](#)
- show trust command [2-570](#)
- show udd command [2-449](#)
- show version command [2-452](#)
- show vlan command [2-454](#)
- show vlan command, fields [2-455](#)
- show vmmps command [2-457](#)
- show vtp command [2-460](#)
- shutdown command [2-465](#)
- shutdown vlan command [2-466](#)
- Smartports macros
  - See macros
- SNMP host, specifying [2-471](#)
- SNMP informs, enabling the sending of [2-467](#)
- snmp-server enable traps command [2-467](#)
- snmp-server host command [2-471](#)
- snmp trap mac-notification command [2-475](#)
- SNMP traps
  - enabling MAC address notification trap [2-475](#)
  - enabling the MAC address notification feature [2-179](#)
  - enabling the sending of [2-467](#)
- SoftPhone
  - See Cisco SoftPhone
- software images
  - deleting [2-65](#)
  - uploading [2-11](#)
- software version, displaying [2-452](#)
- source ports, MVR [2-244](#)

## SPAN

- configuring [2-236](#)
- debug messages, display [B-20](#)
- displaying [2-419](#)
- filter SPAN traffic [2-236](#)
- sessions
  - add interfaces to [2-236](#)
  - displaying [2-419](#)
  - start new [2-236](#)

- spanning-tree backbonefast command [2-477](#)
- spanning-tree bpdufilter command [2-478](#)
- spanning-tree bpduguard command [2-480](#)
- spanning-tree cost command [2-482](#)
- spanning-tree etherchannel command [2-484](#)
- spanning-tree extend system-id command [2-486](#)
- spanning-tree guard command [2-488](#)
- spanning-tree link-type command [2-490](#)
- spanning-tree loopguard default command [2-492](#)
- spanning-tree mode command [2-494](#)
- spanning-tree mst configuration command [2-496](#)
- spanning-tree mst cost command [2-498](#)
- spanning-tree mst forward-time command [2-500](#)
- spanning-tree mst hello-time command [2-501](#)
- spanning-tree mst max-age command [2-502](#)
- spanning-tree mst max-hops command [2-503](#)
- spanning-tree mst port-priority command [2-505](#)
- spanning-tree mst pre-standard command [2-507](#)
- spanning-tree mst priority command [2-508](#)
- spanning-tree mst root command [2-509](#)
- spanning-tree portfast (global configuration) command [2-513](#)
- spanning-tree portfast (interface configuration) command [2-515](#)
- spanning-tree port-priority command [2-511](#)

## Spanning Tree Protocol

See STP

- spanning-tree transmit hold-count command [2-517](#)
- spanning-tree uplinkfast command [2-518](#)
- spanning-tree vlan command [2-520](#)

- speed command [2-523](#)
- srr-queue bandwidth limit command [2-525](#)
- srr-queue bandwidth shape command [2-527](#)
- srr-queue bandwidth share command [2-529](#)
- SSH, configuring version [2-160](#)
- static-access ports, configuring [2-534](#)
- statistics, Ethernet group [2-275](#)
- sticky learning, enabling [2-545](#)
- storm-control command [2-531](#)

## STP

- BackboneFast [2-477](#)
- counters, clearing [2-45](#)
- debug messages, display
  - BackboneFast events [B-60](#)
  - MSTP [B-63](#)
  - optimized BPDUs handling [B-62](#)
  - spanning-tree activity [B-58](#)
  - switch shim [B-65](#)
  - transmitted and received BPDUs [B-61](#)
  - UplinkFast [B-67](#)
- detection of indirect link failures [2-477](#)
- EtherChannel misconfiguration [2-484](#)
- extended system ID [2-486](#)
- path cost [2-482](#)
- protocol modes [2-494](#)
- root port
  - accelerating choice of new [2-518](#)
  - loop guard [2-488](#)
  - preventing from becoming designated [2-488](#)
  - restricting which can be root [2-488](#)
  - root guard [2-488](#)
  - UplinkFast [2-518](#)
- root switch
  - affects of extended system ID [2-486, 2-521](#)
  - hello-time [2-520](#)
  - interval between BPDU messages [2-520](#)
  - interval between hello BPDU messages [2-520](#)
  - max-age [2-520](#)
  - port priority for selection of [2-511](#)

**STP (continued)**

- primary or secondary [2-520](#)
  - switch priority [2-520](#)
  - state changes
    - blocking to forwarding state [2-515](#)
    - enabling BPDU filtering [2-478, 2-513](#)
    - enabling BPDU guard [2-480, 2-513](#)
    - enabling Port Fast [2-513, 2-515](#)
    - enabling timer to recover from error state [2-104](#)
    - forward-delay time [2-520](#)
    - length of listening and learning states [2-520](#)
    - shutting down Port Fast-enabled ports [2-513](#)
  - state information display [2-440](#)
  - VLAN options [2-508, 2-520](#)
- Switched Port Analyzer
- See SPAN
- switchport access command [2-534](#)
  - switchport backup interface command [2-536](#)
  - switchport block command [2-539](#)
  - switchport host command [2-540](#)
  - switchport mode command [2-541](#)
  - switchport nonegotiate command [2-543](#)
  - switchport port-security aging command [2-550](#)
  - switchport port-security command [2-545](#)
  - switchport priority extend command [2-552](#)
  - switchport protected command [2-554](#)
  - switchports, displaying [2-345](#)
  - switchport trunk command [2-556](#)
  - switchport voice vlan command [2-559, 2-560](#)
  - system message logging, save message to flash [2-170](#)
  - system mtu command [2-562](#)
  - system resource templates [2-276](#)

**T**

- tar files, creating, listing, and extracting [2-8](#)
- TDR, running [2-564](#)
- Telnet, using to communicate to cluster switches [2-269](#)
- temperature information, displaying [2-331](#)

- templates, SDM [2-276](#)
- templates, system resources [2-276](#)
- test cable-diagnostics tdr command [2-564](#)
- traceroute mac command [2-565](#)
- traceroute mac ip command [2-568](#)
- trunking, VLAN mode [2-541](#)
- trunk mode [2-541](#)
- trunk ports [2-541](#)
- trunks, to non-DTP device [2-542](#)
- trusted boundary for QoS [2-234](#)
- trusted port states for QoS [2-234](#)
- type (boot loader) command [A-23](#)

**U****UDLD**

- aggressive mode [2-572, 2-574](#)
  - debug messages, display [B-74](#)
  - enable globally [2-572](#)
  - enable per interface [2-574](#)
  - error recovery timer [2-104](#)
  - message timer [2-572](#)
  - normal mode [2-572, 2-574](#)
  - reset a shutdown interface [2-576](#)
  - status [2-449](#)
- udld command [2-572](#)
  - udld port command [2-574](#)
  - udld reset command [2-576](#)
  - unicast storm control [2-531](#)
- UniDirectional Link Detection
- See UDLD
- unknown multicast traffic, preventing [2-539](#)
  - unknown unicast traffic, preventing [2-539](#)
  - unset (boot loader) command [A-24](#)
  - upgrading information
    - See release notes
  - UplinkFast, for STP [2-518](#)
  - user EXEC mode [1-2, 1-3](#)



## V

version (boot loader) command [A-26](#)

vlan (global configuration) command [2-577](#)

vlan (VLAN configuration) command [2-583](#)

VLAN configuration

- rules [2-580, 2-585](#)
- saving [2-577, 2-587](#)

VLAN configuration mode

- commands
  - VLAN [2-583](#)
  - VTP [2-601](#)
- description [1-5](#)
- entering [2-589](#)
- summary [1-2](#)

vlan database command [2-589](#)

VLAN ID range [2-577, 2-583](#)

VLAN Query Protocol

- See VQP

VLANs

- adding [2-577](#)
- configuring [2-577, 2-583](#)
- debug messages, display
  - ISL [B-71](#)
  - VLAN IOS file system error tests [B-70](#)
  - VLAN manager activity [B-68](#)
  - VTP [B-72](#)
- displaying configurations [2-454](#)
- enabling guest VLAN supplicant [2-72, 2-83, 2-108](#)
- extended-range [2-577](#)
- MAC addresses
  - displaying [2-403](#)
  - number of [2-391](#)
- media types [2-579, 2-585](#)
- normal-range [2-577, 2-583](#)
- restarting [2-466](#)
- saving the configuration [2-577](#)
- shutting down [2-466](#)
- SNMP traps for VTP [2-469, 2-472](#)

## VLANs (continued)

- suspending [2-466](#)
- variables [2-583](#)

VLAN Trunking Protocol

- See VTP

VMPS

- configuring servers [2-595](#)
- displaying [2-457](#)
- error recovery timer [2-104](#)
- reconfirming dynamic VLAN assignments [2-592](#)

vmpls reconfirm (global configuration) command [2-593](#)

vmpls reconfirm (privileged EXEC) command [2-592](#)

vmpls retry command [2-594](#)

vmpls server command [2-595](#)

voice VLAN

- configuring [2-559, 2-560](#)
- setting port priority [2-552](#)

VQP

- and dynamic-access ports [2-535](#)
- clearing client statistics [2-47](#)
- displaying information [2-457](#)
- per-server retry count [2-594](#)
- reconfirmation interval [2-593](#)
- reconfirming dynamic VLAN assignments [2-592](#)

VTP

- changing characteristics [2-597](#)
- clearing pruning counters [2-48](#)
- configuring
  - domain name [2-597, 2-601](#)
  - file name [2-597](#)
  - mode [2-597, 2-601](#)
  - password [2-597, 2-601](#)
- counters display fields [2-461](#)
- displaying information [2-460](#)
- enabling
  - pruning [2-597, 2-601](#)
  - Version 2 [2-597, 2-601](#)
- mode [2-597, 2-601](#)
- pruning [2-597, 2-601](#)

**VTP (continued)**

saving the configuration [2-577, 2-587](#)

statistics [2-460](#)

status [2-460](#)

status display fields [2-462](#)

vtp (global configuration) command [2-597](#)

vtp (VLAN configuration) command [2-601](#)