



INDEX

A

aaa accounting dot1x command **2-1**
aaa authentication dot1x command **2-3**
AAA methods **2-3**
abort command **2-652**
access control entries
 See ACEs
access control lists
 See ACLs
access groups
 IP **2-118**
 MAC, displaying **2-420**
 access map configuration mode **2-201**
 access mode **2-595**
 access ports **2-595**
 ACEs **2-81, 2-263**
 ACLs
 deny **2-79**
 displaying **2-310**
 for non-IP protocols **2-183**
 IP **2-118**
 matching **2-201**
 on Layer 2 interfaces **2-118**
 permit **2-261**
 action command **2-5**
 address aliasing **2-250**
 aggregate-port learner **2-255**
 allowed VLANs **2-615**
 apply command **2-652**
 archive copy-sw command **2-7**
 archive download-sw command **2-10**
 archive tar command **2-14**

archive upload-sw command **2-17**
arp access-list command **2-19**
audience **xvii**
authorization state of controlled port **2-95**
autonegotiation of duplex mode **2-103**
auto qos voip command **2-21**

B

BackboneFast, for STP **2-523**
backup interfaces
 configuring **2-591**
 displaying **2-372**
boot (boot loader) command **A-2**
boot auto-copy-sw command **2-26**
boot boothlpr command **2-27**
boot config-file command **2-28**
boot enable-break command **2-29**
boot helper command **2-30**
boot helper-config file command **2-31**
booting
 Cisco IOS image **2-34**
 displaying environment variables **2-320**
 interrupting **2-29**
 manually **2-32**
boot loader
 accessing **A-1**
 booting
 Cisco IOS image **A-2**
 helper image **2-30**

boot loader (continued)

 directories

 creating [A-16](#)

 displaying a list of [A-7](#)

 removing [A-20](#)

 displaying

 available commands [A-12](#)

 memory heap utilization [A-14](#)

 version [A-27](#)

environment variables

 described [A-21](#)

 displaying settings [A-21](#)

 location of [A-22](#)

 setting [A-21](#)

 unsetting [A-25](#)

files

 copying [A-5](#)

 deleting [A-6](#)

 displaying a list of [A-7](#)

 displaying the contents of [A-4, A-17, A-24](#)

 renaming [A-18](#)

file system

 formatting [A-10](#)

 initializing flash [A-9](#)

 running a consistency check [A-11](#)

loading helper images [A-13](#)

prompt [A-1](#)

resetting the system [A-19](#)

boot manual command [2-32](#)

boot private-config-file command [2-33](#)

boot system command [2-34](#)

BPDU filtering, for spanning tree [2-524, 2-559](#)

BPDU guard, for spanning tree [2-526, 2-559](#)

broadcast storm control [2-579](#)

C

candidate switches

 See clusters

cat (boot loader) command [A-4](#)

caution, description [xviii](#)

CDP, enabling protocol tunneling for [2-170](#)

channel-group command [2-36](#)

channel-protocol command [2-40](#)

Cisco Network Assistant

 See Network Assistant [xviii](#)

Cisco SoftPhone

 auto-QoS configuration [2-21](#)

 trusting packets sent from [2-241](#)

class command [2-41](#)

class-map command [2-43](#)

class maps

 creating [2-43](#)

 defining the match criteria [2-203](#)

 displaying [2-325](#)

class of service

 See CoS

clear ip arp inspection log command [2-45](#)

clear ip arp inspection statistics command [2-46](#)

clear ipc command [2-48](#)

clear ip dhcp snooping database command [2-47](#)

clear l2protocol-tunnel counters command [2-49](#)

clear lacp command [2-50](#)

clear mac address-table command [2-51](#)

clear pagp command [2-53](#)

clear port-security command [2-54](#)

clear spanning-tree counters command [2-56](#)

clear spanning-tree detected-protocols command [2-57](#)

clear vmps statistics command [2-58](#)

clear vtp counters command [2-59](#)

cluster commander-address command [2-60](#)

cluster discovery hop-count command [2-62](#)

cluster enable command [2-63](#)

cluster holdtime command [2-65](#)

cluster member command [2-66](#)

cluster outside-interface command [2-68](#)

cluster requirements [xviii](#)

cluster run command [2-69](#)

- clusters
- adding candidates [2-66](#)
 - binding to HSRP group [2-70](#)
 - building manually [2-66](#)
 - communicating with
 - devices outside the cluster [2-68](#)
 - members by using Telnet [2-284](#)
 - debug messages, display [B-4](#)
 - displaying
 - candidate switches [2-328](#)
 - debug messages [B-4](#)
 - member switches [2-330](#)
 - status [2-326](#)
 - hop-count limit for extended discovery [2-62](#)
 - HSRP standby groups [2-70](#)
 - redundancy [2-70](#)
 - SNMP trap [2-513](#)
 - cluster standby-group command [2-70](#)
 - cluster timer command [2-72](#)
 - command modes defined [1-2](#)
 - commands changed in Cisco IOS Release 12.2(18)SE [1-6](#)
 - command switch
 - See clusters
 - configuration, initial
 - See getting started guide and hardware installation guide
 - configuration files
 - password recovery disable considerations [A-1](#)
 - specifying the name [2-28, 2-33](#)
 - configuring multiple interfaces [2-113](#)
 - config-vlan mode
 - commands [2-638](#)
 - description [1-4](#)
 - entering [2-637](#)
 - summary [1-2](#)
 - conventions
 - command [xviii](#)
 - for examples [xviii](#)
 - publication [xviii](#)
 - text [xviii](#)
- copy (boot loader) command [A-5](#)
- CoS
- assigning default value to incoming packets [2-211](#)
 - assigning to Layer 2 protocol packets [2-173](#)
 - overriding the incoming value [2-211](#)
 - CoS-to-DSCP map [2-215](#)
 - CPU ASIC statistics, displaying [2-332](#)
-
- D**
- debug auto qos command [B-2](#)
- debug cluster command [B-4](#)
- debug dot1x command [B-6](#)
- debug dtp command [B-8](#)
- debug etherchannel command [B-9](#)
- debug ilpower command [B-11](#)
- debug interface command [B-14](#)
- debug ip dhcp snooping command [B-12](#)
- debug ip igmp filter command [B-16](#)
- debug ip igmp max-groups command [B-17](#)
- debug ip igmp snooping command [B-18](#)
- debug ip verify source packet command [B-13](#)
- debug lacp command [B-19](#)
- debug mac-notification command [B-20](#)
- debug matm command [B-21](#)
- debug monitor command [B-22](#)
- debug mvrdbg command [B-24](#)
- debug nvram command [B-25](#)
- debug pagp command [B-26](#)
- debug platform acl command [B-27](#)
- debug platform cli-redirection main command [B-28](#)
- debug platform configuration command [B-29, B-37](#)
- debug platform cpu-queues command [B-30](#)
- debug platform device-manager command [B-32](#)
- debug platform dot1x command [B-33](#)
- debug platform etherchannel command [B-34](#)
- debug platform fallback-bridging command [B-35](#)
- debug platform forw-tcam command [B-36](#)
- debug platform ip arp inspection command [B-39](#)

debug platform ipc command **B-47**
 debug platform ip dhcp command **B-40**
 debug platform ip igmp snooping command **B-41**
 debug platform ip multicast command **B-43**
 debug platform ip unicast command **B-45**
 debug platform led command **B-48**
 debug platform matm command **B-49**
 debug platform messaging application command **B-51**
 debug platform phy command **B-53**
 debug platform pm command **B-55**
 debug platform port-asic command **B-57**
 debug platform port-security command **B-58**
 debug platform qos-acl-tcam command **B-59**
 debug platform remote-commands command **B-60**
 debug platform resource-manager command **B-61**
 debug platform snmp command **B-62**
 debug platform span command **B-63**
 debug platform stack-manager command **B-64**
 debug platform supervisor-asic command **B-65**
 debug platform sw-bridge command **B-66**
 debug platform tcam command **B-67**
 debug platform udld command **B-70**
 debug platform vlan command **B-71**
 debug pm command **B-72**
 debug port-security command **B-74**
 debug qos-manager command **B-75**
 debug spanning-tree backbonefast command **B-78**
 debug spanning-tree bpdu command **B-79**
 debug spanning-tree bpdu-opt command **B-80**
 debug spanning-tree command **B-76**
 debug spanning-tree mstp command **B-81**
 debug spanning-tree switch command **B-83**
 debug spanning-tree uplinkfast command **B-85**
 debug sw-vlan command **B-86**
 debug sw-vlan ifs command **B-88**
 debug sw-vlan notification command **B-90**
 debug sw-vlan vtp command **B-92**
 debug udld command **B-94**
 debug vqpc command **B-96**

define interface-range command **2-73**
 delete (boot loader) command **A-6**
 delete command **2-75**
 deny (ARP access-list configuration) command **2-77**
 deny command **2-79**
 detect mechanism, causes **2-104**
 device manager requirements **xviii**
 DHCP snooping
 accepting untrusted packets from edge switch **2-143**
 enabling
 on a VLAN **2-148**
 option 82 **2-141, 2-143**
 trust on an interface **2-146**
 error recovery timer **2-106**
 rate limiting **2-145**
 DHCP snooping binding database
 binding file, configuring **2-139**
 bindings
 adding **2-137**
 deleting **2-137**
 displaying **2-390**
 clearing database agent statistics **2-47**
 database agent, configuring **2-139**
 displaying
 binding entries **2-390**
 database agent status **2-393**
 renewing **2-291**
 dir (boot loader) command **A-7**
 directories, deleting **2-75**
 documentation, related **xviii**
 document conventions **xviii**
 domain name, VTP **2-662, 2-666**
 dot1x command **2-82**
 dot1x control-direction command **2-84**
 dot1x default command **2-86**
 dot1x guest-vlan command **2-87**
 dot1x host-mode command **2-89**
 dot1x initialize command **2-91**
 dot1x max-req command **2-92, 2-93**

- dot1x multiple-hosts command **2-94**
 dot1x port-control command **2-95**
 dot1x re-authenticate command **2-97**
 dot1x re-authentication command **2-98**
 dot1x reauthentication command **2-99**
 dot1x timeout command **2-100**
 dropping packets, with ACL matches **2-5**
 drop threshold, Layer 2 protocol tunneling **2-170**
 DSCL-to-CoS map **2-215**
 DSCL-to-DSCL-mutation map **2-215**
 DTP **2-596**
 DTP flap
 error detection for **2-104**
 error recovery timer **2-106**
 DTP negotiation **2-600**
 duplex command **2-102**
 dynamic-access ports
 configuring **2-589**
 restrictions **2-590**
 dynamic ARP inspection
 ARP ACLs
 apply to a VLAN **2-123**
 define **2-19**
 deny packets **2-77**
 display **2-315**
 permit packets **2-259**
 clear
 log buffer **2-45**
 statistics **2-46**
 display
 ARP ACLs **2-315**
 configuration and operating state **2-385**
 log buffer **2-385**
 statistics **2-385**
 trust state and rate limit **2-385**
 enable per VLAN **2-133**
 error detection for **2-104**
 error recovery timer **2-106**
 dynamic ARP inspection (continued)
 log buffer
 clear **2-45**
 configure **2-127**
 display **2-385**
 rate-limit incoming ARP packets **2-125**
 statistics
 clear **2-46**
 display **2-385**
 trusted interface state **2-129**
 type of packet logged **2-134**
 validation checks **2-131**
 dynamic auto VLAN membership mode **2-595**
 dynamic desirable VLAN membership mode **2-595**
 Dynamic Host Configuration Protocol (DHCP)
 See DHCP snooping
 Dynamic Trunking Protocol
 See DTP
-
- E**
- EAP-request/identity frame
 maximum number to send **2-93**
 response time before retransmitting **2-100**
 encapsulation methods **2-615**
 environment variables, displaying **2-320**
 errdisable detect cause command **2-104**
 errdisable recovery command **2-106**
 error conditions, displaying **2-361**
 error disable detection **2-104**
 error-disabled interfaces, displaying **2-372**
 EtherChannel
 assigning Ethernet interface to channel group **2-36**
 creating port-channel logical interface **2-111**
 debug EtherChannel/PAgP, display **B-9**
 debug platform-specific events, display **B-34**
 displaying **2-365**

EtherChannel (continued)

enabling Layer 2 protocol tunneling for

LACP **2-171**

PAgP **2-171**

UDLD **2-171**

interface information, displaying **2-372**

LACP

clearing channel-group information **2-50**

debug messages, display **B-19**

displaying **2-416**

modes **2-36**

port priority for hot-standby ports **2-174**

restricting a protocol **2-40**

system priority **2-176**

load-distribution methods **2-271**

PAgP

aggregate-port learner **2-255**

clearing channel-group information **2-53**

debug messages, display **B-26**

displaying **2-463**

error detection for **2-104**

error recovery timer **2-106**

learn method **2-255**

modes **2-36**

physical-port learner **2-255**

priority of interface for transmitted traffic **2-257**

Ethernet controller, internal register display **2-334**

Ethernet statistics, collecting **2-293**

examples, conventions for **xviii**

exit command **2-652**

extended discovery of candidate switches **2-62**

extended-range VLANs

and allowed VLAN list **2-615**

and pruning-eligible list **2-615**

configuring **2-637**

extended system ID for STP **2-532**

F

fan information, displaying **2-356**

file name, VTP **2-662**

files, deleting **2-75**

flash_init (boot loader) command **A-9**

Flex Links

configuring **2-591**

displaying **2-372**

flowcontrol command **2-109**

format (boot loader) command **A-10**

forwarding packets, with ACL matches **2-5**

forwarding results, display **C-6**

frame forwarding information, displaying **C-6**

front-end controller

counter and status information **C-8**

fsck (boot loader) command **A-11**

G

global configuration mode **1-2, 1-4**

H

hardware ACL statistics **2-310**

help (boot loader) command **A-12**

hierarchical policy maps **2-269**

hop-count limit for clusters **2-62**

host connection, port configuration **2-594**

host ports, private VLANs **2-598**

Hot Standby Router Protocol

See HSRP

HSRP

binding HSRP group to cluster **2-70**

standby group **2-70**

IEEE 802.1Q trunk ports and native VLANs [2-654](#)

IEEE 802.1Q tunnel ports

- configuring [2-595](#)
- displaying [2-349](#)
- limitations [2-596](#)

IEEE 802.1x

- and switchport modes [2-596](#)
- violation error recovery [2-106](#)
- See also port-based authentication

IGMP filters

- applying [2-149](#)
- debug messages, display [B-16](#)

IGMP groups, setting maximum [2-150](#)

IGMP maximum groups, debugging [B-17](#)

IGMP profiles

- creating [2-152](#)
- displaying [2-395](#)

IGMP snooping

- displaying [2-396, 2-399, 2-403](#)
- enabling [2-154](#)
- enabling the configurable-leave timer [2-157](#)
- multicast table [1-6, 2-401](#)
- querier [2-159](#)
- report suppression [2-161](#)

images

- See software images

Immediate-Leave feature, MVR [2-252](#)

Immediate-Leave processing [2-154](#)

initial configuration

- See getting started guide and hardware installation guide

interface configuration mode [1-2, 1-4](#)

interface port-channel command [2-111](#)

interface range command [2-113](#)

interface-range macros [2-73](#)

interfaces

- assigning Ethernet interface to channel group [2-36](#)
- configuring [2-102](#)
- configuring multiple [2-113](#)
- creating port-channel logical [2-111](#)
- debug messages, display [B-14](#)
- disabling [2-511](#)
- displaying the MAC address table [2-432](#)
- restarting [2-511](#)
- interface speed, configuring [2-569](#)
- interface vlan command [2-116](#)
- internal registers, displaying [2-334, 2-345](#)
- Internet Group Management Protocol

 - See IGMP

- invalid GBIC

 - error detection for [2-104](#)
 - error recovery timer [2-106](#)

- ip access-group command [2-118](#)
- ip address command [2-121](#)
- IP addresses, setting [2-121](#)
- IP address matching [2-201](#)
- ip arp inspection filter vlan command [2-123](#)
- ip arp inspection limit command [2-125](#)
- ip arp inspection log-buffer command [2-127](#)
- ip arp inspection trust command [2-129](#)
- ip arp inspection validate command [2-131](#)
- ip arp inspection vlan command [2-133](#)
- ip arp inspection vlan logging command [2-134](#)
- IP DHCP snooping

 - See DHCP snooping

- ip dhcp snooping binding command [2-137](#)
- ip dhcp snooping command [2-136](#)
- ip dhcp snooping database command [2-139](#)
- ip dhcp snooping information option allow-untrusted command [2-143](#)
- ip dhcp snooping information option command [2-141](#)
- ip dhcp snooping limit rate command [2-145](#)
- ip dhcp snooping trust command [2-146](#)
- ip dhcp snooping verify command [2-147](#)

- ip dhcp snooping vlan command **2-148**
 ip igmp filter command **2-149**
 ip igmp max-groups command **2-150**
 ip igmp profile command **2-152**
 ip igmp snooping command **2-154**
 ip igmp snooping querier command **2-159**
 ip igmp snooping report-suppression command **2-161**
 ip igmp snooping vlan last-member-query-interval command **2-157**
 IP multicast addresses **2-249**
 IP phones
 auto-QoS configuration **2-21**
 trusting packets sent from **2-241**
 IP-precedence-to-DSCP map **2-215**
 ip snap forwarding command **2-163**
 ip source binding command **2-164**
 IP source guard
 disabling **2-168**
 displaying
 binding entries **2-405**
 configuration **2-407**
 dynamic binding entries only **2-390**
 enabling **2-168**
 static IP source bindings **2-164**
 ip ssh command **2-166**
 IPv6 SDM template **2-294**
 ip verify source command **2-168**
- lacp port-priority command **2-174**
 lacp system-priority command **2-176**
 Layer 2 mode, enabling **2-587**
 Layer 2 protocol ports, displaying **2-413**
 Layer 2 protocol-tunnel
 error detection for **2-104**
 error recovery timer **2-106**
 Layer 2 protocol tunnel counters **2-49**
 Layer 2 protocol tunneling error recovery **2-171**
 Layer 2 traceroute
 IP addresses **2-628**
 MAC addresses **2-625**
 Layer 3 mode, enabling **2-587**
 line configuration mode **1-3, 1-5**
 Link Aggregation Control Protocol
 See EtherChannel
 link flap
 error detection for **2-104**
 error recovery timer **2-106**
 load_helper (boot loader) command **A-13**
 load-distribution methods for EtherChannel **2-271**
 logging event power-inline-status command **2-178**
 logging file command **2-179**
 logical interface **2-111**
 loopback error
 detection for **2-104**
 recovery timer **2-106**
 loop guard, for spanning tree **2-534, 2-538**

J

- jumbo frames
 See MTU

L

- l2protocol-tunnel command **2-170**
 l2protocol-tunnel cos command **2-173**

LACP

See EtherChannel

M

- mac access-group command **2-181**
 MAC access-groups, displaying **2-420**
 MAC access list configuration mode **2-183**
 mac access-list extended command **2-183**
 MAC access lists **2-79**

MAC addresses
 displaying
 aging time **2-426**
 all **2-424**
 dynamic **2-430**
 notification settings **2-434**
 number of addresses in a VLAN **2-428**
 per interface **2-432**
 per VLAN **2-438**
 static **2-436**
 static and dynamic entries **2-422**
 dynamic
 aging time **2-185**
 deleting **2-51**
 displaying **2-430**
 enabling MAC address notification **2-186**
 matching **2-201**
 persistent stack **2-577**
 static
 adding and removing **2-188**
 displaying **2-436**
 dropping on an interface **2-189**
 tables **2-424**
 MAC address notification, debugging **B-20**
 mac address-table aging-time **2-181, 2-201**
 mac address-table aging-time command **2-185**
 mac address-table notification command **2-186**
 mac address-table static command **2-188**
 mac address-table static drop command **2-189**
 macro apply command **2-191**
 macro description command **2-194**
 macro global command **2-195**
 macro global description command **2-198**
 macro name command **2-199**
 macros
 adding a description **2-194**
 adding a global description **2-198**
 applying **2-195**
 creating **2-199**
 macros (continued)
 displaying **2-465**
 interface range **2-73, 2-113**
 specifying parameter values **2-195**
 tracing **2-195**
 manual
 audience **xvii**
 purpose of **xvii**
 maps
 QoS
 defining **2-215**
 displaying **2-448**
 VLAN
 creating **2-649**
 defining **2-201**
 displaying **2-502**
 match (access-map configuration) command **2-201**
 match (class-map configuration) command **2-203**
 maximum transmission unit
 See MTU
 mdix auto command **2-205**
 member switches
 See clusters
 memory (boot loader) command **A-14**
 mkdir (boot loader) command **A-16**
 mls qos aggregate-policer command **2-209**
 mls qos command **2-207**
 mls qos cos command **2-211**
 mls qos dscp-mutation command **2-213**
 mls qos map command **2-215**
 mls qos queue-set output buffers command **2-219**
 mls qos queue-set output threshold command **2-221**
 mls qos rewrite ip dscp command **2-223**
 mls qos srr-queue input bandwidth command **2-225**
 mls qos srr-queue input buffers command **2-227**
 mls qos-srr-queue input cos-map command **2-229**
 mls qos srr-queue input dscp-map command **2-231**
 mls qos srr-queue input priority-queue command **2-233**
 mls qos srr-queue input threshold command **2-235**

- mls qos-srr-queue output cos-map command **2-237**
 mls qos srr-queue output dscp-map command **2-239**
 mls qos trust command **2-241**
 mls qos vlan-based command **2-243**
 mode, MVR **2-249**
 Mode button, and password recovery **2-298**
 modes, commands **1-2**
 monitor session command **2-244**
 more (boot loader) command **A-17**
MSTP
 displaying **2-481**
 interoperability **2-57**
 link type **2-536**
MST region
 aborting changes **2-542**
 applying changes **2-542**
 configuration name **2-542**
 configuration revision number **2-542**
 current or pending display **2-542**
 displaying **2-481**
 MST configuration mode **2-542**
 VLANs-to-instance mapping **2-542**
 path cost **2-544**
 protocol mode **2-540**
 restart protocol migration process **2-57**
root port
 loop guard **2-534**
 preventing from becoming designated **2-534**
 restricting which can be root **2-534**
 root guard **2-534**
root switch
 affects of extended system ID **2-532**
 hello-time **2-547, 2-555**
 interval between BPDU messages **2-548**
 interval between hello BPDU messages **2-547, 2-555**
 max-age **2-548**
 maximum hop count before discarding BPDU **2-549**
 port priority for selection of **2-551**
MSTP (continued)
 root switch (continued)
 primary or secondary **2-555**
 switch priority **2-554**
state changes
 blocking to forwarding state **2-561**
 enabling BPDU filtering **2-524, 2-559**
 enabling BPDU guard **2-526, 2-559**
 enabling Port Fast **2-559, 2-561**
 forward-delay time **2-546**
 length of listening and learning states **2-546**
 rapid transition to forwarding **2-536**
 shutting down Port Fast-enabled ports **2-559**
 state information display **2-480**
MTU
 configuring size **2-622**
 displaying global setting **2-491**
multicast group address, MVR **2-252**
multicast groups, MVR **2-250**
 multicast router learning method **2-154**
 multicast router ports, configuring **2-154**
 multicast storm control **2-579**
 multicast VLAN, MVR **2-249**
 multicast VLAN registration
 See MVR
 multiple hosts on authorized port **2-89**
Multiple Spanning Tree Protocol
 See MSTP
MVR
 and address aliasing **2-250**
 configuring **2-249**
 configuring interfaces **2-252**
 debug messages, display **B-24**
 displaying **2-457**
 displaying interface information **2-459**
 members, displaying **2-461**
 mvr (global configuration) command **2-249**
 mvr (interface configuration) command **2-252**
 mvr vlan group command **2-253**

N

native VLANs **2-615**
 native VLAN tagging **2-654**
 Network Assistant requirements **xviii**
 nonegotiate
 DTP messaging **2-600**
 speed **2-569**
 nonegotiate, speed **2-569**
 non-IP protocols
 denying **2-79**
 forwarding **2-261**
 non-IP traffic access lists **2-183**
 non-IP traffic forwarding
 denying **2-79**
 permitting **2-261**
 normal-range VLANs **2-637, 2-643**
 note, description **xviii**
 no vlan command **2-637, 2-647**

P

PAgP
 See EtherChannel
 pagp learn-method command **2-255**
 pagp port-priority command **2-257**
 password, VTP **2-662, 2-666**
 password-recovery mechanism, enabling and
 disabling **2-298**
 permit (ARP access-list configuration) command **2-259**
 permit (MAC access-list configuration) command **2-261**
 per-VLAN spanning-tree plus
 See STP
 physical-port learner **2-255**
 PID, displaying **2-384**
 PIM-DVMRP, as multicast router learning method **2-154**

PoE

configuring the power management mode **2-273**
 displaying controller register values **2-342**
 displaying power management information **2-473**
 logging of status **2-178**
 police aggregate command **2-266**
 police command **2-264**
 policed-DSCP map **2-215**
 policy-map command **2-268**
 policy maps
 applying to an interface **2-300, 2-305**
 creating **2-268**
 displaying **2-468**
 hierarchical **2-269**
 policers
 displaying **2-441**
 for a single class **2-264**
 for multiple classes **2-209, 2-266**
 policed-DSCP map **2-215**
 traffic classification
 defining the class **2-41**
 defining trust states **2-630**
 setting DSCP or IP precedence values **2-303**
 Port Aggregation Protocol
 See EtherChannel
 port-based authentication
 AAA method list **2-3**
 debug messages, display **B-6**
 enabling IEEE 802.1x
 globally **2-82**
 per interface **2-95**
 guest VLAN **2-87**
 host modes **2-89**
 IEEE 802.1x AAA accounting methods **2-1**
 initialize an interface **2-91**
 manual control of authorization state **2-95**
 multiple hosts on authorized port **2-89**

port-based authentication (continued)
 periodic re-authentication
 enabling **2-99**
 time between attempts **2-100**
 quiet period between failed authentication exchanges **2-100**
 re-authenticating IEEE 802.1x-enabled ports **2-97**
 resetting configurable IEEE 802.1x parameters **2-86**
 switch-to-authentication server retransmission time **2-100**
 switch-to-client frame-retransmission number **2-92 to 2-93**
 switch-to-client retransmission time **2-100**
 port-channel load-balance command **2-271**
 Port Fast, for spanning tree **2-561**
 port ranges, defining **2-73**
 ports, debugging **B-72**
 ports, protected **2-613**
 port security
 aging **2-607**
 debug messages, display **B-74**
 enabling **2-602**
 violation error recovery **2-106**
 port trust states for QoS **2-241**
 port types, MVR **2-252**
 power information, displaying **2-356**
 power inline command **2-273**
 Power over Ethernet
 See PoE
 priority-queue command **2-276**
 priority value, stack member **2-488, 2-582**
 private-vlan command **2-278**
 private-vlan mapping command **2-281**
 private VLANs
 association **2-611**
 configuring **2-278**
 configuring ports **2-598**
 displaying **2-497**
 host ports **2-598**

private VLANs (continued)
 mapping
 configuring **2-611**
 displaying **2-372**
 promiscuous ports **2-598**
 privileged EXEC mode **1-2, 1-3**
 product identification information, displaying **2-384**
 promiscuous ports, private VLANs **2-598**
 protected ports, displaying **2-378**
 pruning
 VLANs **2-615**
 VTP
 displaying interface information **2-372**
 enabling **2-662, 2-666**
 pruning-eligible VLAN list **2-617**
 PVST+
 See STP

Q

QoS
 auto-QoS
 configuring **2-21**
 debug messages, display **1-6, B-2**
 displaying **2-316**
 class maps
 creating **2-43**
 defining the match criteria **2-203**
 displaying **2-325**
 defining the CoS value for an incoming packet **2-211**
 displaying configuration information **2-316, 2-440**
 DSCP transparency **2-223**
 DSCP trusted ports
 applying DSCP-to-DSCP-mutation map to **2-213**
 defining DSCP-to-DSCP-mutation map **2-215**

QoS (continued)

- egress queues
 - allocating buffers **2-219**
 - defining the CoS output queue threshold map **2-237**
 - defining the DSCP output queue threshold map **2-239**
 - displaying buffer allocations **2-444**
 - displaying CoS output queue threshold map **2-448**
 - displaying DSCP output queue threshold map **2-448**
 - displaying queueing strategy **2-444**
 - displaying queue-set settings **2-451**
 - enabling bandwidth shaping and scheduling **2-573**
 - enabling bandwidth sharing and scheduling **2-575**
 - limiting the maximum output on a port **2-571**
 - mapping a port to a queue-set **2-283**
 - mapping CoS values to a queue and threshold **2-237**
 - mapping DSCP values to a queue and threshold **2-239**
 - setting maximum and reserved memory allocations **2-221**
 - setting WTD thresholds **2-221**
- enabling **2-207**
- ingress queues
 - allocating buffers **2-227**
 - assigning SRR scheduling weights **2-225**
 - defining the CoS input queue threshold map **2-229**
 - defining the DSCP input queue threshold map **2-231**
 - displaying buffer allocations **2-444**
 - displaying CoS input queue threshold map **2-448**
 - displaying DSCP input queue threshold map **2-448**
 - displaying queueing strategy **2-444**
 - displaying settings for **2-442**
 - enabling the priority queue **2-233**
 - mapping CoS values to a queue and threshold **2-229**
 - mapping DSCP values to a queue and threshold **2-231**
 - setting WTD thresholds **2-235**
- maps
 - defining **2-215, 2-229, 2-231, 2-237, 2-239**
 - displaying **2-448**

QoS (continued)

- policy maps
 - applying an aggregate policer **2-266**
 - applying to an interface **2-300, 2-305**
 - creating **2-268**
 - defining policers **2-209, 2-264**
 - displaying policers **2-441**
 - displaying policy maps **2-468**
 - hierarchical **2-269**
 - policed-DSCP map **2-215**
 - setting DSCP or IP precedence values **2-303**
 - traffic classifications **2-41**
 - trust states **2-630**
 - port trust states **2-241**
 - queues, enabling the expedite **2-276**
 - statistics
 - in-profile and out-of-profile packets **2-444**
 - packets enqueued or dropped **2-444**
 - sent and received CoS values **2-444**
 - sent and received DSCP values **2-444**
 - trusted boundary for IP phones **2-241**
 - VLAN-based **2-243**
- quality of service
 - See QoS
- querytime, MVR **2-249**
- queue-set command **2-283**

R

- rapid per-VLAN spanning-tree plus
 - See STP
- rapid PVST+
 - See STP
- rcommand command **2-284**
- re-authenticating IEEE 802.1x-enabled ports **2-97**
- re-authentication
 - periodic **2-99**
 - time between attempts **2-100**
- receiver ports, MVR **2-252**

receiving flow-control packets **2-109**

recovery mechanism

 causes **2-106**

 display **2-322, 2-359, 2-363**

 timer interval **2-107**

redundancy for cluster switches **2-70**

reload command **2-286**

remote command **2-288**

remote-span command **2-289**

Remote Switched Port Analyzer

 See RSPAN

rename (boot loader) command **A-18**

renew ip dhcp snooping database command **2-291**

requirements

 cluster **xviii**

 device manager **xviii**

 Network Assistant **xviii**

reset (boot loader) command **A-19**

reset command **2-652**

resource templates, displaying **2-476**

rmdir (boot loader) command **A-20**

rmon collection stats command **2-293**

root guard, for spanning tree **2-534**

routed ports

 IP addresses on **2-122**

 number supported **2-122**

RSPAN

 configuring **2-244**

 displaying **2-454**

 filter RSPAN traffic **2-244**

 remote-span command **2-289**

 sessions

 add interfaces to **2-244**

 displaying **2-454**

 start new **2-244**

sdm prefer command **2-294**

SDM templates

 allowed resources **2-295**

 and stacking **2-295**

 displaying **2-476**

 dual IPv4 and IPv6 **2-294**

 secure ports, limitations **2-604**

 sending flow-control packets **2-109**

 service password-recovery command **2-298**

 service-policy command **2-300**

 session command **2-302**

 set (boot loader) command **A-21**

 set command **2-303**

 setup command **2-305**

 setup express command **2-308**

 show access-lists command **2-310**

 show archive status command **2-313**

 show arp access-list command **2-315**

 show auto qos command **2-316**

 show boot command **2-320**

 show cable-diagnostics tdr command **2-322**

 show changes command **2-652**

 show class-map command **2-325**

 show cluster candidates command **2-328**

 show cluster command **2-326**

 show cluster members command **2-330**

 show controllers cpu-interface command **2-332**

 show controllers ethernet-controller command **2-334**

 show controllers power inline command **2-342**

 show controllers tcam command **2-345**

 show controller utilization command **2-347**

 show current command **2-652**

 show dot1q-tunnel command **2-349**

 show dot1x command **2-351**

 show dtp **2-354**

 show env command **2-356**

 show errdisable detect command **2-359**

 show errdisable flap-values command **2-361**

 show errdisable recovery command **2-363**

S

SDM mismatch mode **2-295, 2-489**

show etherchannel command **2-365**
 show flowcontrol command **2-368**
 show idprom command **2-370**
 show interfaces command **2-372**
 show interfaces counters command **2-381**
 show inventory command **2-384**
 show ip arp inspection command **2-385**
 show ipc command **2-409**
 show ip dhcp snooping binding command **2-390**
 show ip dhcp snooping command **2-389**
 show ip dhcp snooping database command **2-393**
 show ip igmp profile command **2-395**
 show ip igmp snooping command **2-396**
 show ip igmp snooping groups command **2-401**
 show ip igmp snooping mrouter command **2-403**
 show ip igmp snooping querier detail command **2-399**
 show ip source binding command **2-405**
 show ip verify source command **2-407**
 show l2protocol-tunnel command **2-413**
 show lacp command **2-416**
 show mac access-group command **2-420**
 show mac address-table address command **2-424**
 show mac address-table aging time command **2-426**
 show mac address-table command **2-422**
 show mac address-table count command **2-428**
 show mac address-table dynamic command **2-430**
 show mac address-table interface command **2-432**
 show mac address-table notification command **2-434**
 show mac address-table static command **2-436**
 show mac address-table vlan command **2-438**
 show mls qos aggregate-policer command **2-441**
 show mls qos command **2-440**
 show mls qos input-queue command **2-442**
 show mls qos interface command **2-444**
 show mls qos maps command **2-448**
 show mls qos queue-set command **2-451**
 show mls qos vlan command **2-453**
 show monitor command **2-454**
 show mvr command **2-457**
 show mvr interface command **2-459**
 show mvr members command **2-461**
 show pagp command **2-463**
 show parser macro command **2-465**
 show platform acl command **C-2**
 show platform backup interface command **C-3**
 show platform configuration command **C-4**
 show platform etherchannel command **C-5**
 show platform forward command **C-6**
 show platform frontend-controller command **C-8**
 show platform igmp snooping command **C-9**
 show platform ipc trace command **C-16**
 show platform ip multicast command **C-11**
 show platform ip unicast command **C-12**
 show platform ipv6 unicast command **C-17**
 show platform layer4op command **C-19**
 show platform mac-address-table command **C-20**
 show platform messaging command **C-21**
 show platform monitor command **C-22**
 show platform mvr table command **C-23**
 show platform pm command **C-24**
 show platform port-asic command **C-25**
 show platform port-security command **C-30**
 show platform qos command **C-31**
 show platform resource-manager command **C-32**
 show platform snmp counters command **C-34**
 show platform spanning-tree command **C-35**
 show platform stack-manager command **C-37**
 show platform stp-instance command **C-36**
 show platform tb command **C-39**
 show platform tcam command **C-41**
 show platform vlan command **C-44**
 show policy-map command **2-468**
 show port security command **2-470**
 show power inline command **2-473**
 show proposed command **2-652**
 show sdm prefer command **2-476**
 show setup express command **2-479**
 show spanning-tree command **2-480**

- show storm-control command **2-486**
- show switch command **2-488**
- show system mtu command **2-491**
- show trust command **2-630**
- show udld command **2-492**
- show version command **2-495**
- show vlan access-map command **2-502**
- show vlan command **2-497**
- show vlan command, fields **2-499**
- show vlan filter command **2-503**
- show vmps command **2-504**
- show vtp command **2-507**
- shutdown command **2-511**
- shutdown threshold, Layer 2 protocol tunneling **2-170**
- shutdown vlan command **2-512**
- Smartports macros
See macros
- SNMP host, specifying **2-517**
- SNMP informs, enabling the sending of **2-513**
- snmp-server enable traps command **2-513**
- snmp-server host command **2-517**
- snmp trap mac-notification command **2-521**
- SNMP traps
enabling MAC address notification trap **2-521**
enabling the MAC address notification feature **2-186**
enabling the sending of **2-513**
- SoftPhone
See Cisco SoftPhone
- software images
copying **2-7**
deleting **2-75**
downloading **2-10**
upgrading **2-7, 2-10**
uploading **2-17**
- software version, displaying **2-495**
- source ports, MVR **2-252**
- SPAN
configuring **2-244**
debug messages, display **B-22**
displaying **2-454**
filter SPAN traffic **2-244**
sessions
add interfaces to **2-244**
displaying **2-454**
start new **2-244**
- spanning **2-563**
spanning-tree backbonefast command **2-523**
spanning-tree bpdufilter command **2-524**
spanning-tree bpduguard command **2-526**
spanning-tree cost command **2-528**
spanning-tree etherchannel command **2-530**
spanning-tree extend system-id command **2-532**
spanning-tree guard command **2-534**
spanning-tree link-type command **2-536**
spanning-tree loopguard default command **2-538**
spanning-tree mode command **2-540**
spanning-tree mst configuration command **2-542**
spanning-tree mst cost command **2-544**
spanning-tree mst forward-time command **2-546**
spanning-tree mst hello-time command **2-547**
spanning-tree mst max-age command **2-548**
spanning-tree mst max-hops command **2-549**
spanning-tree mst port-priority command **2-551**
spanning-tree mst pre-standard command **2-553**
spanning-tree mst priority command **2-554**
spanning-tree mst root command **2-555**
spanning-tree portfast (global configuration) command **2-559**
spanning-tree portfast (interface configuration) command **2-561**
spanning-tree port-priority command **2-557**
- Spanning Tree Protocol
See STP
- spanning-tree transmit hold-count command **2-563**
spanning-tree uplinkfast command **2-564**

- spanning-tree vlan command **2-566**
- speed command **2-569**
- srr-queue bandwidth limit command **2-571**
- srr-queue bandwidth shape command **2-573**
- srr-queue bandwidth share command **2-575**
- SSH, configuring version **2-166**
- stack-mac persistent timer command **2-577**
- stack member
- access **2-302**
 - number **2-488, 2-585**
 - priority value **2-582**
 - provisioning **2-583**
 - reloading **2-286**
- stacks, switch
- MAC address **2-577**
 - provisioning a new member **2-583**
 - reloading **2-286**
 - stack member access **2-302**
 - stack member number **2-488, 2-585**
 - stack member priority value **2-488, 2-582**
- static-access ports, configuring **2-589**
- statistics, Ethernet group **2-293**
- sticky learning, enabling **2-602**
- storm-control command **2-579**
- STP
- BackboneFast **2-523**
 - counters, clearing **2-56**
 - debug messages, display
 - BackboneFast events **B-78**
 - MSTP **B-81**
 - optimized BPDUs handling **B-80**
 - spanning-tree activity **B-76**
 - switch shim **B-83**
 - transmitted and received BPDUs **B-79**
 - UplinkFast **B-85** - detection of indirect link failures **2-523**
 - enabling protocol tunneling for **2-170**
 - EtherChannel misconfiguration **2-530**
 - extended system ID **2-532**
- STP (continued)
- path cost **2-528**
 - protocol modes **2-540**
 - root port
 - accelerating choice of new **2-564**
 - loop guard **2-534**
 - preventing from becoming designated **2-534**
 - restricting which can be root **2-534**
 - root guard **2-534**
 - UplinkFast **2-564** - root switch
 - affects of extended system ID **2-532, 2-567**
 - hello-time **2-566**
 - interval between BDPU messages **2-566**
 - interval between hello BPDU messages **2-566**
 - max-age **2-566**
 - port priority for selection of **2-557**
 - primary or secondary **2-566**
 - switch priority **2-566** - state changes
 - blocking to forwarding state **2-561**
 - enabling BPDU filtering **2-524, 2-559**
 - enabling BPDU guard **2-526, 2-559**
 - enabling Port Fast **2-559, 2-561**
 - enabling timer to recover from error state **2-106**
 - forward-delay time **2-566**
 - length of listening and learning states **2-566**
 - shutting down Port Fast-enabled ports **2-559**
 - state information display **2-480**
 - VLAN options **2-554, 2-566** - SVIs, creating **2-116**
 - Switched Port Analyzer
 - See SPAN - switching characteristics
 - modifying **2-587**
 - returning to interfaces **2-587** - switchport access command **2-589**
 - switchport backup interface command **2-591**
 - switchport block command **2-593**

switchport command **2-587**
 switchport host command **2-594**
 switchport mode command **2-595**
 switchport mode private-vlan command **2-598**
 switchport nonegotiate command **2-600**
 switchport port-security aging command **2-607**
 switchport port-security command **2-602**
 switchport priority extend command **2-609**
 switchport private-vlan command **2-611**
 switchport protected command **2-613**
 switchports, displaying **2-372**
 switchport trunk command **2-615**
 switchport voice vlan command **2-618**
 switch priority command **2-582**
 switch provision command **2-583**
 switch renumber command **2-585**
 system env temperature threshold yellow command **2-620**
 system message logging **2-178**
 system message logging, save message to flash **2-179**
 system mtu command **2-622**
 system resource templates **2-294**

T

tar files, creating, listing, and extracting **2-14**
 TDR, running **2-624**
 Telnet, using to communicate to cluster switches **2-284**
 temperature information, displaying **2-356**
 templates, system resources **2-294**
 test cable-diagnostics tdr command **2-624**
 traceroute mac command **2-625**
 traceroute mac ip command **2-628**
 trunking, VLAN mode **2-595**
 trunk mode **2-595**
 trunk ports **2-595**
 trunks, to non-DTP device **2-596**
 trusted boundary for QoS **2-241**
 trusted port states for QoS **2-241**
 tunnel ports, Layer 2 protocol, displaying **2-413**

type (boot loader) command **A-24**

U

UDLD
 aggressive mode **2-632, 2-634**
 debug messages, display **B-94**
 enable globally **2-632**
 enable per interface **2-634**
 error recovery timer **2-106**
 message timer **2-632**
 normal mode **2-632, 2-634**
 reset a shutdown interface **2-636**
 status **2-492**
 udld command **2-632**
 udld port command **2-634**
 udld reset command **2-636**
 unicast storm control **2-579**
 UniDirectional Link Detection
 See UDLD
 unknown multicast traffic, preventing **2-593**
 unknown unicast traffic, preventing **2-593**
 unset (boot loader) command **A-25**
 upgrading

 software images **2-7, 2-10**
 monitoring status of **2-313**
 upgrading information
 See release notes
 UplinkFast, for STP **2-564**
 user EXEC mode **1-2, 1-3**

V

version (boot loader) command **A-27**
 version mismatch mode **2-489**
 vlan (global configuration) command **2-637**
 vlan (VLAN configuration) command **2-643**
 vlan access-map command **2-649**

- VLAN access map configuration mode **2-649**
- VLAN access maps
- actions **2-5**
 - displaying **2-502**
- VLAN-based QoS **2-243**
- VLAN configuration
- rules **2-640, 2-645**
 - saving **2-637, 2-647**
- VLAN configuration mode
- commands
 - VLAN **2-643**
 - VTP **2-666** - description **1-5**
 - entering **2-651**
 - summary **1-3**
- vlan database command **2-651**
- vlan dot1q tag native command **2-654**
- vlan filter command **2-655**
- VLAN filters, displaying **2-503**
- VLAN ID range **2-637, 2-643**
- VLAN maps
- applying **2-655**
 - creating **2-649**
 - defining **2-201**
 - displaying **2-502**
- VLAN Query Protocol
- See VQP
- VLANs
- adding **2-637**
 - configuring **2-637, 2-643**
 - debug messages, display
 - ISL **B-90**
 - VLAN IOS file system error tests **B-88**
 - VLAN manager activity **B-86**
 - VTP **B-92** - displaying configurations **2-497**
 - extended-range **2-637**
- VLANs (continued)
- MAC addresses
 - displaying **2-438**
 - number of **2-428**
 - media types **2-640, 2-645**
 - normal-range **2-637, 2-643**
 - private **2-598**
 - configuring **2-278**
 - displaying **2-497** - See also private VLANs
 - restarting **2-512**
 - saving the configuration **2-637**
 - shutting down **2-512**
 - SNMP traps for VTP **2-515, 2-518**
 - suspending **2-512**
 - variables **2-643**
- VLAN Trunking Protocol
- See VTP
- VM mode **2-489**
- VMPS
- configuring servers **2-660**
 - displaying **2-504**
 - error recovery timer **2-107**
 - reconfirming dynamic VLAN assignments **2-657**
 - vmmps reconfirm (global configuration) command **2-658**
 - vmmps reconfirm (privileged EXEC) command **2-657**
 - vmmps retry command **2-659**
 - vmmps server command **2-660**
 - voice VLAN
 - configuring **2-618**
 - setting port priority **2-609**
- VQP
- and dynamic-access ports **2-590**
 - clearing client statistics **2-58**
 - displaying information **2-504**
 - per-server retry count **2-659**
 - reconfirmation interval **2-658**
 - reconfirming dynamic VLAN assignments **2-657**

VTP

 changing characteristics **2-662**
 clearing pruning counters **2-59**
 configuring
 domain name **2-662, 2-666**
 file name **2-662**
 mode **2-662, 2-666**
 password **2-662, 2-666**
 counters display fields **2-508**
 displaying information **2-507**
 enabling
 pruning **2-662, 2-666**
 tunneling for **2-170**
 Version 2 **2-662, 2-666**
 mode **2-662, 2-666**
 pruning **2-662, 2-666**
 saving the configuration **2-637, 2-647**
 statistics **2-507**
 status **2-507**
 status display fields **2-509**
vtp (global configuration) command **2-662**
vtp (VLAN configuration) command **2-666**

X

XENPAK module serial EEPROM information **2-338,**
2-370